

# EUROPEAN TELECOMMUNICATION STANDARD

ETS 300 979

May 1997

Source: ETSI TC-SMG

Reference: DE/SMG-020861Q

ICS: 33.020

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



# Digital cellular telecommunications system; In-band control of remote transcoders and rate adaptors for half rate traffic channels (GSM 08.61 version 5.0.1)

## ETSI

European Telecommunications Standards Institute

#### **ETSI Secretariat**

**Postal address:** F-06921 Sophia Antipolis CEDEX - FRANCE **Office address:** 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE **X.400:** c=fr, a=atlas, p=etsi, s=secretariat - **Internet:** secretariat@etsi.fr

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

**Copyright Notification:** No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

Page 2 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

Whilst every care has been taken in the preparation and publication of this document, errors in content, typographical or otherwise, may occur. If you have comments concerning its accuracy, please write to "ETSI Editing and Committee Support Dept." at the address shown on the title page.

## Contents

Forev	vord					5
1	Scope					7
2	Normativ	e references				7
3	Definition	ns and abbrev	viations			8
0	3.1					
	3.2					
	0.2	71001010101				0
4	General	approach				8
5	Frame st	ructure				10
	5.1					
		5.1.1				
		5.1.2				
		5.1.3				
		5.1.4	Coding			13
			5.1.4.1		frames	
			5.1.4.2	0 1	mes	
			5.1.4.3		ames	
	5.2	8 kbit/s subr	nultiplexing	5		
		5.2.1				
		5.2.2	Data frame			16
		5.2.3	O&M frame			17
		5.2.4	Coding			17
			5.2.4.1	Uplink coding		17
			5.2.4.2	Downlink coding		19
	5.3	Order of Bit	Transmission	-		20
6	Procedu	res				20
	6.1	Remote Cor	ntrol of Transcod	lers and Rate Adap	otors	20
	6.2					
	6.3					
	6.4					
	6.5					
	6.6	Procedures				
		6.6.1	Time Alignment	t of Speech Frames	S	22
			6.6.1.1	16 kbit/s submultip	plexing	
				6.6.1.1.1	Downlink Time Alignment	
				6.6.1.1.1.1	Initial Time Alignment state	
				6.6.1.1.1.2	Static Time Alignment state	
				6.6.1.1.2	Uplink Time Alignment	
				6.6.1.1.3	Initiation at Resource Allocation	
				6.6.1.1.4	Time Alignment during Handover	
			6.6.1.2		exing	
				6.6.1.2.1	Downlink Time Alignment	
				6.6.1.2.2	Uplink Time Alignment	
				6.6.1.2.3	Initiation at Resource allocation	
			During (	6.6.1.2.4	Time Alignment during handover	
		6.6.2			nsmission (DTX)	
			6.6.2.1		n the uplink direction	
	o <b>-</b>	<b>_</b>	6.6.2.2		n the downlink direction	
	6.7					
		6.7.1				
		6.7.2				
		6.7.3	The RA2 Funct	ion		31

## Page 4 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

6.8		6.7.4 6.7.5	Support of Non-	8 kbit/s intermediate rate adaption rate Transparent Bearer Applications	31
0.0		6.8.1		ltiploving	
		0.0.1		Itiplexing	21
			6.8.1.1	Search for Frame Synchronization	31
			6.8.1.2	Frame Synchronization After Performing Downlink Timing	~ 4
				Adjustments	
			6.8.1.3	Frame Synchronization Monitoring and Recovery	
		6.8.2		iplexing	
			6.8.2.1	Search for Frame Synchronization	
			6.8.2.2	Frame Synchronization Monitoring and Recovery	
6.9	9	Correction/d	etection of bit er	rors	32
		6.9.1	16 kbit/s submu	Itiplexing	
			6.9.1.1	Error Detection on the Control Bits	32
				6.9.1.1.1 General Procedure	32
				6.9.1.1.2 Speech Frames	32
			6.9.1.2	Handling of frames received with errors	
		6.9.2	8 kbit/s submult	iplexing	
			6.9.2.1	Error Detection on the Control Bits	
			6.9.2.2	Handling of frames received with errors	
6.1	10	Procedures f	•••	Vaintenance	
•••		6.10.1		I Information Between the TRAU and the BSC	
		6.10.2		ne TRAU	
		6.10.3		ne BSC	
		0.10.0	6.10.3.1	Use of O&M Frames	
		6.10.4		ne BTS	
		0.10.4	FIOCEDUIES III II		55
History					36

## Foreword

This European Telecommunication Standard (ETS) has been produced by the Special Mobile Group (SMG) Technical Committee of the European Telecommunications Standards Institute (ETSI).

This ETS defines the protocol between the Base Transceiver Station (BTS) and the remote Transcoder/Rate Adaption Unit (TRAU) for half rate speech and half rate data, within the digital cellular telecommunications system.

Transposition dates							
Date of adoption:	18 April 1997						
Date of latest announcement of this ETS (doa):	31 August 1997						
Date of latest publication of new National Standard or endorsement of this ETS (dop/e):	28 February 1998						
Date of withdrawal of any conflicting National Standard (dow):	28 February 1998						

Blank page

### 1 Scope

This European Telecommunication Standard (ETS) describes the protocol between the Base Transceiver Station (BTS) and the remote Transcoder/Rate Adaption Unit (TRAU) for speech and data on half rate traffic channel (TCH/H).

The protocol is specified for 8 kbit/s and 16 kbit/s submultiplexing scheme.

This ETS should be considered together with the GSM 06 series, GSM 04.21 (Rate Adaption on the MS-BSS Interface) and GSM 08.20 (Rate Adaption on the BTS/MSC Interface).

#### 2 Normative references

This ETS incorporates by dated and undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this ETS only when incorporated in it by amendment or revision. For undated references, the latest edition of the publication referred to applies.

- [1] GSM 01.02: "Digital cellular telecommunications system (Phase 2+); General description of a GSM Public Land Mobile Network (PLMN)".
- [2] GSM 01.04 (ETR 350): "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".
- [3] GSM 04.21 (ETS 300 945): "Digital cellular telecommunications system (Phase 2+); Rate adaption on the Mobile Station Base Station System (MS BSS) Interface".
- [4] GSM 05.03 (ETS 300 909): "Digital cellular telecommunications system (Phase 2+); Channel coding".
- [5] GSM 06.21 (ETS 300 970): "Digital cellular telecommunications system; Half rate speech; Substitution and muting of lost frames for half rate speech traffic channels".
- [6] GSM 06.22 (ETS 300 971): "Digital cellular telecommunications system; Half rate speech; Comfort noise aspects for half rate speech traffic channels".
- [7] GSM 06.41 (ETS 300 972): "Digital cellular telecommunications system; Half rate speech; Discontinuous Transmission (DTX) for half rate speech traffic channels".
- [8] GSM 06.42 (ETS 300 973): "Digital cellular telecommunications system; Half rate speech; Voice Activity Detector (VAD) for half rate speech traffic channels".
- [9] GSM 08.08: "Digital cellular telecommunications system (Phase 2+) Mobile-services Switching Centre - Base Station System (MSC - BSS) interface; Layer 3 specification".
- [10] GSM 08.20: "Digital cellular telecommunications system (Phase 2+); Rate adaption on the Base Station System Mobile-services Switching Centre (BSS MSC) interface".
- [11] GSM 08.52: "Digital cellular telecommunications system; Base Station Controller - Base Transceiver Station (BSC - BTS) interface; Interface principles".
- [12] GSM 08.54: "Digital cellular telecommunications system (Phase 2+); Base Station Controller Base Transceiver Station (BSC BTS) interface; Layer 1 structure of physical circuits".

#### Page 8 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

- [13] GSM 08.58: "Digital cellular telecommunications system (Phase 2+); Base Station Controller Base Transceiver Station (BSC BTS) interface; Layer 3 specification".
- [14] GSM 12.21 (ETS 300 623): "Digital cellular telecommunications system (Phase 2); Network Management (NM) procedures and messages on the A-bis interface".
- [15] ITU-T Recommendation I.460: "Multiplexing, rate adaption and support of existing interfaces".
- [16] ITU-T Recommendation V.110: "Support of data terminal equipments (DTEs) with V-Series interfaces by an integrated services digital network".

## 3 Definitions and abbreviations

#### 3.1 Definitions

No specific definitions apply to this ETS.

#### 3.2 Abbreviations

For the purposes of this ETS, the following abbreviations apply:

BSC	Base Station Controller
BTS	Base Transceiver Station
CCU	Channel Codec Unit
RA	Rate Adaption
TRAU	Transcoder and Rate Adaption Unit

Other abbreviations used in this ETS are listed in GSM 01.04.

## 4 General approach

The TRAU shall be controlled by the BTS when it is positioned remote from the BTS. In this case, the speech/data information and TRAU control signals exchanged between the Channel Codec Unit (CCU) in the BTS and the TRAU shall be transferred in frames denoted "TRAU frames".

The TRAU frames may be carried by either 16 kbit/s traffic channels or 8 kbit/s channels. The choice of the traffic channel bit rate or submultiplexing scheme is operator dependent.

The TRAU frames have a fixed length of:

- 160 bits (20 ms) when 8 kbit/s submultiplexing is used;
- 320 bits (20 ms) when 16 kbit/s submultiplexing is used.

The protocol between the BTS and the TRAU should be the same if the TRAU is positioned either at the MSC site or at the BSC site. In the first case, the BSC should be considered as transparent for 16 kbit/s and 8 kbit/s channels.

The TRAU is considered a part of the BSC when the TRAU is remote from the BTS (see GSM 08.52), and the signalling between the BSC and the TRAU (e.g. detection of call release, handover and transfer of O&M information) may be performed by using BSC internal signals. However, the signalling between the CCU and the TRAU, using TRAU frames as specified in this ETS, is mandatory when the TRAU is remote from the BTS.

For data transfer, a conversion function is required, in addition to the conversion/rate adaption specified in GSM 08.20, to adapt ITU-T V.110 frames to the TRAU data frames. This function constitutes the RAA.

NOTE: If standard 64 kbit/s switching is used in the BSC, multiplexing according to ITU-T Recommendation I.460 should apply at both sides of the switch.

A possible configuration of the TRAU and the CCU is shown in figure 4.1.


The functions inside the TRAU are:

- "Remote Transcoder and Rate Adaptor Control Function" (RTRACF);
- "Remote Speech Handler Function" (RSHF);
- the RAA function;
- the RA2 function;
- the transcoder function.

The functions inside the CCU are:

- "Transcoder and Rate Adaptor Control Function" (TRACF);
- "Speech Handler Function" (SHF);
- the RAA function;
- the RA1/RA1' function;
- the channel codec function.

This ETS does not describe the procedures inside the TRAU and the CCU. The layout in figure 4.1 is only intended as a reference model.

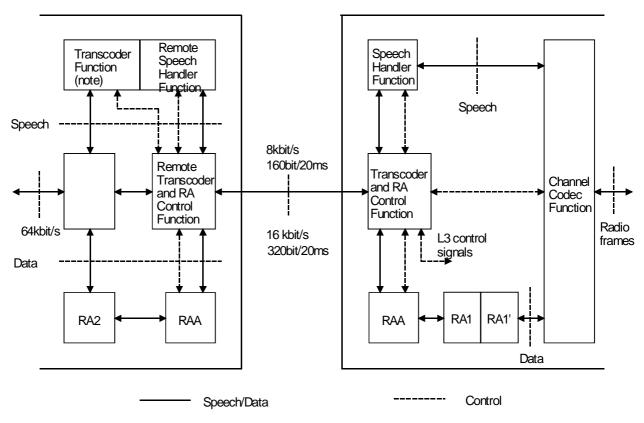

NOTE: This ETS assumes the DTX handler function to be part of the Transcoder Function.

Figure GSM 08.61/4.1: Functional entities for handling of control of remote transcoders and rate adaptors

## Page 10 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

## 5 Frame structure

## 5.1 16 kbit/s submultiplexing

#### 5.1.1 Speech frame

Bit number								
Octet no.	1	2	3	4	5	6	7	8
1	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0
3	1	C1	C2	C3	C4	C5	C6	C7
4	C8	C9	C10	C11	C12	C13	C14	C15
5	1	UFI	D1	D2	D3	D4	D5	D6
6	D7	D8	D9	D10	D11	D12	D13	D14
7	1	D15	D16	D17	D18	D19	D20	D21
8	D22	D23	D24	D25	D26	D27	D28	D29
9	1	D30	D31	D32	D33	D34	D35	D36
10	D37	D38	D39	D40	D41	D42	D43	D44
11	1	CRC2	CRC1	CRC0	D45	D46	D47	D48
12	D49	D50	D51	D52	D53	D54	D55	D56
13	1	D57	D58	D59	D60	D61	D62	D63
14	D64	D65	D66	D67	D68	D69	D70	D71
15	1	D72	D73	D74	D75	D76	D77	D78
16	D79	D80	D81	D82	D83	D84	D85	D86
17	1	D87	D88	D89	D90	D91	D92	D93
18	D94	D95	D96	D97	D98	D99	D100	D101
19	1	D102	D103	D104	D105	D106	D107	D108
20	D109	D110	D111	D112	1	1	1	1
21	1	1	1	1	1	1	1	1
22	1	1	1	1	1	1	1	1
23	1	1	1	1	1	1	1	1
24	1	1	1	1	1	1	1	1
25	1	1	1	1	1	1	1	1
26	1	1	1	1	1	1	1	1
27	1	1	1	1	1	1	1	1
28	1	1	1	1	1	1	1	1
29	1	1	1	1	1	1	1	1
30	1	1	1	1	1	1	1	1
31	1	1	1	1	1	1	1	1
32	1	1	1	1	1	1	1	1
33	1	1	1	1	1	1	1	1
34	1	1	1	1	1	1	1	1
35	1	1	1	1	1	1	1	1
36	1	1	1	1	1	1	1	1
37	1	1	1	1	1	1	1	1
38	1	1	1	1	1	1	1	1
39	1	1	1	1	1	1	C16	C17
40	C18	C19	C20	C21	T1	T2	T3	T4

#### 5.1.2 Data frame

		7							
Octet no.	1	2	3	4	5	6	7	8	_
1	0	0	0	0	0	0	0	0	
2	0	0	0	0	0	0	0		
3	1	C1	C2	C3	C4	C5	C6	C7	
4	C8	C9	C10	C11	C12	C13	C14	C15	
5	1	D1	D2	D3	D4	D5	D6	D7	
6	1	D8	D9	D10	D11	D12	D13	D14	
7	1	D15	D16	D17	D18	D19	D20	D21	
8	1	D22	D23	D24	D25	D26	D27	D28	Data frame
9	1	D29	D30	D31	D32	D33	D34	D35	position 1
10	1	D36	D37	D38	D39	D40	D41	D42	
11	1	D43	D44	D45	D46	D47	D48	D49	
12	1	D50	D51	D52	D53	D54	D55	D56	
13	1	D57	D58	D59	D60	D61	D62	D63	
14	1	1	1	1	1	1	1	1	
15	1	1	1	1	1	1	1	1	
16	1	1	1	1	1	1	1	1	
17	1	1	1	1	1	1	1	1	
18	1	1	1	1	1	1	1	1	
19	1	1	1	1	1	1	1	1	
20	1	1	1	1	1	1	1	1	
21	1	1	1	1	1	1	1	1	
22	1	1	1	1	1	1	1	1	
23	1	D'1	D'2	D'3	D'4	D'5	D'6	D'7	
24	1	D'8	D'9	D'10	D'11	D'12	D'13	D'14	
25	1	D'15	D'16	D'17	D'18	D'19	D'20	D'21	
26	1	D'22	D'23	D'24	D'25	D'26	D'27	D'28	Data frame
27	1	D'29	D'30	D'31	D'32	D'33	D'34	D'35	position 3
28	1	D'36	D'37	D'38	D'39	D'40	D'41	D'42	
29	1	D'43	D'44	D'45	D'46	D'47	D'48	D'49	
30	1	D'50	D'51	D'52	D'53	D'54	D'55	D'56	
31	1	D'57	D'58	D'59	D'60	D'61	D'62	D'63	
32	1	1	1	1	1	1	1	1	
33	1	1	1	1	1	1	1	1	
34	1	1	1	1	1	1	1	1	
35	1	1	1	1	1	1	1	1	
36	1	1	1	1	1	1	1	1	
37	1	1	1	1	1	1	1	1	
38	1	1	1	1	1	1	1	1	
39	1	1	1	1	1	1	1	1	7
40	1	1	1	1	1	1	1	1	

## Page 12 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

### 5.1.3 O&M frame

	Bit number									
Octet no.	1	2	3	4	5	6	7	8		
1	0	0	0	0	0	0	0	0		
2	0	0	0	0	0	0	0	0		
3	1	C1	C2	C3	C4	C5	C6	C7		
4	C8	C9	C10	C11	C12	C13	C14	C15		
5	1	D1	D2	D3	D4	D5	D6	D7		
6	D8	D9	D10	D11	D12	D13	D14	D15		
7	1	D16	D17	D18	D19	D20	D21	D22		
8	D23	D24	D25	D26	D27	D28	D29	D30		
9	1	D31	D32	D33	D34	D35	D36	D37		
10	D38	D39	D40	D41	D42	D43	D44	D45		
11	1	D46	D47	D48	D49	D50	D51	D52		
12	D53	D54	D55	D56	D57	D58	D59	D60		
13	1	D61	D62	D63	D64	D65	D66	D67		
14	D68	D69	D70	D71	D72	D73	D74	D75		
15	1	D76	D77	D78	D79	D80	D81	D82		
16	D83	D84	D85	D86	D87	D88	D89	D90		
17	1	D91	D92	D93	D94	D95	D96	D97		
18	D98	D99	D100	D101	D102	D103	D104	D105		
19	1	D106	D107	D108	D109	D110	D111	D112		
20	D113	D114	D115	D116	D117	D118	D119	D120		
21	1	D121	D122	D123	D124	D125	D126	D127		
22	D128	D129	D130	D131	D132	D133	D134	D135		
23	1	D136	D137	D138	D139	D140	D141	D142		
24	D143	D144	D145	D146	D147	D148	D149	D150		
25	1	D151	D152	D153	D154	D155	D156	D157		
26	D158	D159	D160	D161	D162	D163	D164	D165		
27	1	D166	D167	D168	D169	D170	D171	D172		
28	D173	D174	D175	D176	D177	D178	D179	D180		
29	1	D181	D182	D183	D184	D185	D186	D187		
30	D188	D189	D190	D191	D192	D193	D194	D195		
31	1	D196	D197	D198	D199	D200	D201	D202		
32	D203	D204	D205	D206	D207	D208	D209	D210		
33	1	D211	D212	D213	D214	D215	D216	D217		
34	D218	D219	D220	D221	D222	D223	D224	D225		
35	1	D226	D227	D228	D229	D230	D231	D232		
36	D233	D234	D235	D236	D237	D238	D239	D240		
37	1	D241	D242	D243	D244	D245	D246	D247		
38	D248	D249	D250	D251	D252	D253	D254	D255		
39	1	D256	D257	D258	D259	D260	D261	D262		
40	D263	D264	S1	S2	S3	S4	S5	S6		

#### 5.1.4 Coding

In the following clauses, the coding of the frames is described. Any spare or not used control bits should be coded binary "1".

#### 5.1.4.1 Coding of speech frames

#### Control bits (C-bits):

Description	Uplink	Downlink
Frame type	C1 C2 C3 C4	C1 C2 C3 C4
(Bits C1 - C4)	0 0 0 1	1 1 1 0
Channel type		
Bit C5	1: half rate	1: half rate
Time Alignment (Bits C6 - C11)	Binary number indicating the required timing adjustment to be in steps of 250/500 µs.	
	The following values apply for the C6C7 C11         0       0       0       0       No change in the following values apply for the constraint of t	frame timing * 500 μs * 500 μs
	1 1 1 1 0 1 Not used 1 1 1 1 1 0 Delay frame 1 1 1 1 1 1 1 Advance frame	
Uplink		
Bad Frame Indicator (BFI) C12 (see GSM 06.41)	0: BFI = 0 1: BFI = 1	
Downlink Uplink Frame Error (UFE) C12 (see subclause 6.8.1.3)		0: UFE=0: bad uplink framing 1: UFE=1: good uplink framing
Silence Descriptor (SID)	C13 C14: SID	
C13-C14 (see GSM 06.41)	SID1       SID0         0       0:       SID = 0         0       1:       SID = 1         1       0:       SID = 2	
Time Alignment Flag (TAF) C15 (see GSM 06.41)	0: TAF=0 1: TAF=1	Spare
Speech indicator (SP) C16 (see GSM 06.41)	Spare	0: SP=0 1: SP=1
DTX downlink indicator (DTXd) C17	<ul> <li>0: Downlink DTX shall not be applied</li> <li>1: Downlink DTX shall be applied</li> </ul>	Spare
Bits C18 - C21	Spare	Spare

#### Page 14 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

UFI bit: Unreliable Frame Indication (see GSM 06.41).

This bit is set to binary "1" in the downlink direction.

#### Data Bits (D-bits)

Bits D1 .. D112: Speech block transferred in the same order as output from the transcoder (see GSM 06.20).

#### Cyclic Redundancy Check bits (CRC-bits)

Bits CRC0 .. CRC2: CRC of the bits D1 to D44.

The bits are coded according to a cyclic code using the generator polynomial:

 $g(X) = X^3 + X + 1$ 

The encoding of the cyclic code is performed in a systematic form, which means that, in GF(2), the polynomial:

 $D1^{*}X^{46} + D2^{*}X^{45} + ... + D44^{*}X^{3} + CRC2^{*}X^{2} + CRC1^{*}X + CRC0.$ 

where CRC0, CRC1, CRC2 are the parity bits, when divided by g(X) yields a remainder equal to:

 $1 + X + X^2$ .

#### **Time Alignment Bits**

Bits T1 .. T4: Bits positioned at the end of the downlink and uplink TRAU speech frames.

Downlink:

If the timing of the frame is to be advanced 250  $\mu s,$  these 4 bits are not transferred in order to reduce the frame length accordingly. When transferred, the bits are set to binary "1".

Uplink:

T1 and T2 are set to binary "1".

If the timing of the frame is to be advanced 125  $\mu$ s, the bits T3 and T4 are not transferred in order to reduce the frame length accordingly. When transferred, the bits are set to binary "1" (see subclause 6.6.1.1.2).

#### 5.1.4.2 Coding of data frames

Any spare or not used control bits should be coded binary "1".

#### Control bits (C-bits):

Description	Uplink	Downlink
Frame type	C1 C2 C3 C4	C1 C2 C3 C4
Bits C1-C4	0 1 0 0: Data	1 0 1 1: Data
Channel type		
Bit C5	1: half rate	1: half rate
Intermediate RA bit rate		
Bit C6	0: 8 kbit/s	0: 8 kbit/s
Bits C7 - C11	Spare	Spare
Bit C12	Spare	
Uplink Frame Error (UFE)		0: UFE=0: bad uplink framing
C12 (see subclause 6.8.1.3)		1: UFE=1: good uplink framing
Bits C13-C15	Spare	Spare

#### Idle data frame

An idle data frame is a data frame with all data bit positions set to binary "1" (i.e. all bits of the modified V.110 frames are set to "1").

#### 5.1.4.3 Coding of O&M frames

#### Control bits (C-bits):

Description	Uplink	Downlink
Frame type	C1 C2 C3 C4	C1 C2 C3 C4
Bits C1-C4	0 0 1 0: O&M	1 1 0 1: O&M
Channel type		
Bit C5	1: half rate	1: half rate
Bits C6 - C11	Spare	Spare
Bit C12	Spare	
Uplink Frame Error (UFE)		0: UFE=0: bad uplink framing
C12 (see subclause 6.8.1.3)		1: UFE=1: good uplink framing
Bits C13-C15	Spare	Spare

#### Data Bits (D-bits)

Bits D1 .. D264: Bits used for transfer of O&M information. The coding and use of these bits are left to the manufacturer of the BSC/TRAU.

#### Spare Bits (S-bits)

Bits S1 .. S6: Spare.

## Page 16 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

## 5.2 8 kbit/s submultiplexing

## 5.2.1 Speech frame

	Bit number								
Octet no	1	2	3	4	5	6	7	8	
1	0	0	0	0	0	0	0	0	
2	1	C1	C2	C3	C4	C5	XC1	XC2	
3	0	1	XC3	XC4	XC5	XC6	D1	D2	
4	1	D3	D4	D5	D6	D7	D8	D9	
5	1	D10	D11	D12	D13	D14	D15	D16	
6	1	D17	D18	D19	D20	D21	D22	D23	
7	1	D24	D25	D26	D27	D28	D29	D30	
8	1	D31	D32	D33	D34	D35	D36	D37	
9	1	D38	D39	D40	D41	D42	D43	D44	
10	1	CRC2	CRC1	CRC0	D45	D46	D47	D48	
11	1	D49	D50	D51	D52	D53	D54	D55	
12	1	D56	D57	D58	D59	D60	D61	D62	
13	1	D63	D64	D65	D66	D67	D68	D69	
14	1	D70	D71	D72	D73	D74	D75	D76	
15	1	D77	D78	D79	D80	D81	D82	D83	
16	1	D84	D85	D86	D87	D88	D89	D90	
17	1	D91	D92	D93	D94	D95	D96	D97	
18	1	D98	D99	D100	D101	D102	D103	D104	
19	1	D105	D106	D107	D108	D109	D110	D111	
20	1	D112	C6	C7	C8	C9	T1	T2	

## 5.2.2 Data frame

		Bit number									
Octet no.	1	2	3	4	5	6	7	8			
1	0	0	0	0	0	0	0	0			
2	1	C1	C2	C3	C4	C5	D1	D2			
3	0	1	D3	D4	D5	D6	D7	D8			
4	1	D9	D10	D11	D12	D13	D14	D15			
5	1	D16	D17	D18	D19	D20	D21	D22	Data frame		
6	1	D23	D24	D25	D26	D27	D28	D29	position 1		
7	1	D30	D31	D32	D33	D34	D35	D36			
8	1	D37	D38	D39	D40	D41	D42	D43			
9	1	D44	D45	D46	D47	D48	D49	D50			
10	1	D51	D52	D53	D54	D55	D56	D57			
11	1	D58	D59	D60	D61	D62	D63	D'1			
12	1	D'2	D'3	D'4	D'5	D'6	D'7	D'8			
13	1	D'9	D'10	D'11	D'12	D'13	D'14	D'15			
14	1	D'16	D'17	D'18	D'19	D'20	D'21	D'22			
15	1	D'23	D'24	D'25	D'26	D'27	D'28	D'29	Data frame		
16	1	D'30	D'31	D'32	D'33	D'34	D'35	D'36	position 2		
17	1	D'37	D'38	D'39	D'40	D'41	D'42	D'43			
18	1	D'44	D'45	D'46	D'47	D'48	D'49	D'50			
19	1	D'51	D'52	D'53	D'54	D'55	D'56	D'57			
20	1	D'58	D'59	D'60	D'61	D'62	D'63	1			

#### 5.2.3 O&M frame

				Bit r	number			
Octet no.	1	2	3	4	5	6	7	8
1	0	0	0	0	0	0	0	0
2	1	C1	C2	C3	C4	C5	XC1	XC2
3	0	1	XC3	XC4	XC5	XC6	D1	D2
4	1	D3	D4	D5	D6	D7	D8	D9
5	1	D10	D11	D12	D13	D14	D15	D16
6	1	D17	D18	D19	D20	D21	D22	D23
7	1	D24	D25	D26	D27	D28	D29	D30
8	1	D31	D32	D33	D34	D35	D36	D37
9	1	D38	D39	D40	D41	D42	D43	D44
10	1	D45	D46	D47	D48	D49	D50	D51
11	1	D52	D53	D54	D55	D56	D57	D58
12	1	D59	D60	D61	D62	D63	D64	D65
13	1	D66	D67	D68	D69	D70	D71	D72
14	1	D73	D74	D75	D76	D77	D78	D79
15	1	D80	D81	D82	D83	D84	D85	D86
16	1	D87	D88	D89	D90	D91	D92	D93
17	1	D94	D95	D96	D97	D98	D99	D100
18	1	D101	D102	D103	D104	D105	D106	D107
19	1	D108	D109	D110	D111	D112	D113	D114
20	1	D115	D116	D117	D118	D119	D120	1

#### 5.2.4 Coding

In the following clauses, the coding of the frames is described. Any spare or not used transmitted control bits should be coded binary "1".

#### 5.2.4.1 Uplink coding

#### Control bits (C-bits, for all frame types)

The control bits are coded according to the following table:

C1	C2	C3	C4	C5	Meaning
0	0	0	1	OP	Speech frame
0	0	1	1	OP	Data frame
0	1	0	1	OP	O&M frame

All other codings are reserved.

OP: Odd parity of bits C1 to C4.

In the following, the term "frame type" refers to the control bits C1 to C3.

C	6	C7	C8	C9	Meaning
T.	A2	TA1	TA0	DTXd	For speech frame only

DTXd: DTX downlink indicator.

0: Downlink DTX shall not be applied.1: Downlink DTX shall be applied.

TA2-TA0: Time Alignment Command, see subclause 6.6.1.2.1.

#### Page 18 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### **Extended control bits**

The extended control bits are coded according to the following table:

#### Speech frames

XC1	XC2	XC3	XC4	XC5	XC6	Meaning					
0	0	0	0	0	OP	Good speech frame with UFI=0 (BFI=0, SID=0, TAF=1) (BFI=0, SID=0, TAF=0)					
0	0	0	0	1	OP	Unreliable speech frame (if speech decoder is in speech decoding mode) or unusable frame (if speech decoder is in comfort noise insertion mode) with UFI=1					
						(BFI=0, SID=0, TAF=1) (BFI=0, SID=0, TAF=0)					
0	0	0	1	0	OP	Valid SID frame with UFI=0 (BFI=0, SID=2, TAF=1) (BFI=0, SID=2, TAF=0)					
0	0	0	1	1		Invalid SID frame with UFI=1 (BFI=0, SID=2, TAF=1) (BFI=0, SID=2, TAF=0)					
0	1	0	0	0	OP	Invalid SID frame at TAF=0 with UFI=0 (BFI=0, SID=1, TAF=0) (BFI=1, SID=1, TAF=0) (BFI=1, SID=2, TAF=0)					
0	1	0	0	1	OP	Invalid SID frame at TAF=0 with UFI=1 (BFI=0, SID=1, TAF=0) (BFI=1, SID=1, TAF=0) (BFI=1, SID=2, TAF=0)					
0	1	0	1	0	OP	Invalid SID frame at TAF=1 with UFI=0 (BFI=0, SID=1, TAF=1) (BFI=1, SID=1, TAF=1) (BFI=1, SID=2, TAF=1)					
0	1	0	1	1	OP	Invalid SID frame at TAF=1 with UFI=1 (BFI=0, SID=1, TAF=1) (BFI=1, SID=1, TAF=1) (BFI=1, SID=2, TAF=1)					
0	1	1	0	0	OP	Bad speech frame or unusable frame at TAF=0 with UFI=0 (BFI=1, SID=0, TAF=0)					
0	1	1	0	1	OP	Bad speech frame or unusable frame at TAF=0 with UFI=1 (BFI=1, SID=0, TAF=0)					
0	1	1	1	0	OP	Bad speech frame or unusable frame at TAF=1 with UFI=0 (BFI=1, SID=0, TAF=1)					
0	1	1	1	1	OP	Bad speech frame or unusable frame at TAF=1 with UFI=1 (BFI=1, SID=0, TAF=1)					

#### O&M frame

XC1	XC2	XC3	XC4	XC5	XC6	Meaning
1	1	1	1	1	OP	O&M frame

All other codings are reserved.

OP: Odd parity of bits XC1 to XC5.

BFI, SID, TAF: See description in subclause 5.1.4.1.

UFI bit: Unreliable Frame Indication (see GSM 06.41).

#### Cyclic Redundancy Check bits (CRC-bits)

Speech frame: Bits CRC0 .. CRC2: CRC of the bits D1 to D44. Same coding as in subclause 5.1.4.1.

#### Data bits (D-bits)

Speech frame: Bits D1 .. D112:

For good speech frame: speech block transferred in the same order as output from the transcoder (see GSM 06.20).

For valid SID frame: SID data block transferred in the same order as output from the transcoder (see GSM 06.22).

- Data frame: Bits D1 .. D63 for data frame position 1 and bits D'1 .. D'63 for data frame position 2 (see subclause 6.7.1).
- O&M frame: Bits D1 .. D120: Bits used for transfer of O&M information. The coding and use of these bits are left to the manufacturer of the BSC/TRAU.

#### Time Alignment bits (T-bits)

Bits T1..T2: Bits positioned at the end of the uplink TRAU speech frame.

T1 is set to binary "1".

If the timing of the frame is to be advanced 125  $\mu s$ , the bit T2 is not transferred in order to reduce the frame length accordingly. When transferred, the bit T2 is set to binary "1".

#### 5.2.4.2 Downlink coding

#### **Control bits**

C1	C2	C3	C4	C5	Meaning
0	0	0	UFE	OP	Speech frame
0	0	1	UFE	OP	Data frame
0	1	0	UFE	OP	O&M frame

All other codings are reserved.

UFE:

Uplink Frame Error. UFE=0: bad uplink framing. UFE=1: good uplink framing. See subclause 6.8.2.2.

OP: Odd Parity of bits C1 to C4.

In the following, the term "frame type" refers to the control bits C1 to C3.

C6	C7	C8	C9	Meaning
1	1	1	1	Spare bits

#### Page 20 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### **Extended control bits**

The extended control bits are coded according to the following table:

Speech frames

XC1	XC2	XC3	XC4	XC5	XC6	Meaning
0	0	0	0	0	OP	Good speech frame (SP=1)
0	0	0	1	0	OP	Valid SID frame (SP=0)

SP: Speech indicator (see GSM 06.41).

O&M frame

XC1	XC2	XC3	XC4	XC5	XC6	Meaning
1	1	1	1	1	OP	O&M

All other codings are reserved.

XC6: odd parity of bits XC1 to XC5.

#### Data bits (D-bits)

Same as the uplink.

#### Time Alignment bits (T-bits)

Bits T1..T2: Bits positioned at the end of the downlink TRAU speech frame.

If the timing of the frame is to be advanced  $250 \,\mu$ s, the bits T1 and T2 are not transferred in order to reduce the frame length accordingly. When transferred, the bits are set to binary "1" (see subclause 6.6.1.2.1).

#### Cyclic Redundancy Check bits (CRC-bits):

Same as the uplink.

#### 5.3 Order of Bit Transmission

The order of bit transmission is:

Bit m of octet n shall be transmitted as bit ((n-1)\*8+m) with m=(1..8) and n=(1..20).

## 6 Procedures

#### 6.1 Remote Control of Transcoders and Rate Adaptors

When the TRAU is positioned remote from the BTS, the CCU in the BTS has to control some of the functions in the remote TRAU.

This remote control is performed by in-band signalling carried by the control bits in each TRAU frame.

The following functions in the TRAU are remotely controlled by the CCU:

- Change between speech and data.
- Downlink frame timing for speech frames.
- Transfer of DTX information.

In addition, the in-band signalling also provides means for transfer of O&M signals between the TRAU and the BSC/BTS.

#### 6.2 Resource Allocation

At reception of the GSM 08.08 ASSIGNMENT REQUEST message, e.g. at call setup, when a circuit switched connection is required, the BSC provides an appropriate TRAU to the circuit to be used between the BSC and the BTS and sends the GSM 08.58 CHANNEL ACTIVATION message to the BTS.

When receiving the CHANNEL ACTIVATION message, the BTS allocates the appropriate radio resources and a CCU to be used.

The CCU now starts sending uplink TRAU frames with the appropriate frame type.

When receiving the first frame, the TRAU sets the mode of operation as indicated by the CCU and starts sending downlink TRAU frames with the corresponding frame type.

#### 6.3 Resource Release

At release of circuit switched resources, e.g. at call release, the connection between the CCU and the TRAU will be released by the BSC. The BSC has to indicate that the connection has been released. How this is performed is a BSC internal matter. Two methods may be used for either submultiplexing scheme.

- i) The BSC indicates the call release to the TRAU by inserting the PCM idle bit pattern described in GSM 08.54 on the circuits towards the TRAU. The TRAU shall be able to detect this idle bit pattern. When received at the TRAU, the TRAU will loose frame synchronization and will start timer Trelease=1 second. If, when Trelease expires, the idle bit pattern is detected, the TRAU shall terminate the operation (go idle) until a valid frame is again received. Trelease is reset every time the frame synchronization is again obtained.
- ii) It is handled by BSC internal signals (e.g. if the BSC and TRAU are collocated).

#### 6.4 In Call Modification

At reception of the GSM 08.58 MODE MODIFY message from the BSC indicating a change between speech and data, the BTS orders the corresponding CCU to modify its mode of operation. The CCU sets the frame type in the uplink TRAU frames to the new mode of operation.

When the TRAU receives an uplink TRAU frame with the frame type, different from the current mode but without errors detected (see subclause 6.9.1.2), the current mode is kept and speech/data bits are handled as erroneous. When receiving the next TRAU frame with the same frame type, the TRAU changes the mode of operation accordingly and sets the new frame type in the downlink frames.

#### 6.5 Handling of missing data

If no speech is received from the MS (uplink direction), the CCU shall send TRAU speech frames with BFI flag set to 1 (bad frame). If no data is received from the MS (uplink direction), the CCU shall send idle TRAU data frames.

For speech calls, the CCU shall transmit a speech frame with the three parity bits inverted (protection of the most significant 22 class 1 bits, see GSM 05.03) on the air interface:

- if frame synchronization has been lost in the downlink direction;
- if a CRC error is detected (bits CRC0-CRC2) in a downlink TRAU speech frame;
- if an O&M TRAU frame is received (see subclause 6.10).

For data calls, the CCU shall react towards the air interface as if an idle TRAU data frame has been received:

- when frame synchronization has been lost in the downlink direction;
- when an O&M TRAU frame is received (see subclause 6.10).

An idle TRAU data frame is a TRAU data frame with all data bits set to binary "1".

#### Page 22 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### 6.6 Procedures for Speech Frames

#### 6.6.1 Time Alignment of Speech Frames

The time alignment needed for obtaining minimum buffer delay will differ from call to call. The reasons for this are:

- The BSC will have no information about the radio timing at the BTS, and will start sending TRAU frames at an arbitrary or default time. In the case of 16 kbit/s submultiplexing, each TRAU frame is 320 bits (20 ms) and will in the worst case be received at the BTS 318 bits out of phase. In the case of 8 kbit/s submultiplexing, each TRAU frame is 160 bits (20 ms) and will in the worst case be received at the BTS 159 bits out of phase.
- The different timeslots and half rate subchannels on one carrier are sent at different times (max. 8.66 ms which equals 15 radio time slots).
- Different channels may be transferred on different transmission systems using different routes in the network. The transmission delay may therefore differ.

The required time alignment procedure between radio frames and TRAU frames is specified in subclauses 6.6.1.1 and 6.6.1.2 for the 16 kbit/s submultiplexing and the 8 kbit/s submultiplexing respectively.

In order to achieve optimum timing between the radio TDMA frames and the frames on the transmission side, the speech coding and decoding function in the transcoder should not be synchronized.

#### 6.6.1.1 16 kbit/s submultiplexing

#### 6.6.1.1.1 Downlink Time Alignment

#### 6.6.1.1.1.1 Initial Time Alignment state

The TRAU shall enter the Initial Time Alignment state at the switching-on of the system, when it goes idle (e.g. when receiving the PCM idle pattern after a call release as described in subclause 6.3), if loss of frame synchronization is detected, in call modification from data to speech is performed or if BSS internal handover is detected.

In the initial state, the frames shall only be delayed or no change is applied (see note below). The transcoder is able to adjust the time for transmitting the speech frames in steps of 125  $\mu$ s (one speech sample). The CCU calculates the required timing adjustment and returns a frame including the number of 250/500  $\mu$ s steps by which the frames in the downlink direction have to be delayed (binary number in the "Time Alignment" field).

When receiving this information, the TRAU processes this data and sets the "Time Alignment" field in the next downlink frame as ordered and then delays the subsequent frame accordingly.

If the TRAU, in this state, receives an order to advance the next frame 250  $\mu$ s, this order shall be interpreted as "Delay frame 39\*500  $\mu$ s".

When a frame is delayed due to timing adjustments, the TRAU shall fill in the gap between the frames with the appropriate number of binary "1".

After having adjusted the timing, the TRAU shall receive at least three new frames before a new adjustment is made. This in order to avoid oscillation in the regulation.

The TRAU shall change from the Initial Time Alignment state to the Static Time Alignment state when it has performed two subsequent timing adjustments which are less than 500 µs (including no change).

The procedure is illustrated in figure 6.1.

#### 6.6.1.1.1.2 Static Time Alignment state

In the Static Time Alignment state, the TRAU performs timing adjustments in single steps of 250 µs. The timing may either be delayed (time alignment code 111110, advanced (time alignment code 111111) or not changed (time alignment code 000000).


When receiving an order for adjusting the timing, the transcoder skips or repeats two speech samples in order to achieve the correct timing.

If the timing is to be advanced 250  $\mu$ s, the TRAU sets the "Time Alignment" field in the next downlink frame as ordered and then the 4 last bits of the frame are not transferred (the T-bits).

If the timing is to be delayed, the TRAU sets the "Time Alignment" field in the next downlink frame as ordered and then delays the subsequent frame by adding four binary "1" between the frames.

After having adjusted the timing, the TRAU shall receive at least three new frames before a new adjustment is made.

If, in this state, the TRAU detects a change in the timing of the uplink frames greater than 1 ms, it shall enter the Initial Time Alignment state and in that state it may perform an adjustment on the downlink equal to the change detected on the uplink.

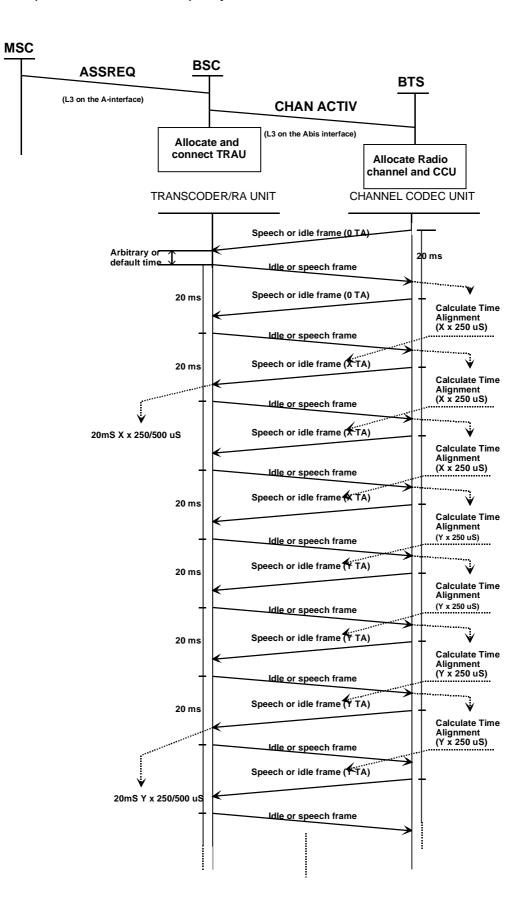

#### 6.6.1.1.2 Uplink Time Alignment

In order to achieve optimum timing between the Air interface and the terrestrial link, the tail bits of the uplink speech frames may be used for uplink time alignment.

To advance 125 µs, the CCU removes the last two tail bits of the uplink TRAU speech frame.

To delay 125 µs, the CCU inserts two binary "1" between two uplink TRAU speech frames.

#### 6.6.1.1.3 Initiation at Resource Allocation

When the BTS receives the GSM 08.58 CHANNEL ACTIVATION message from the BSC, with Channel Mode IE indicating speech, it allocates the appropriate radio resources and a Channel Codec Unit (CCU). The CCU then initiates sending of speech frames (or applies the procedure specified in subclause 6.5 if speech is not received from the MS) towards the transcoder with normal frame phase for the TDMA channel in question. The "Time Alignment" field in these frames is set to "no change".

The TRAU will now be in the Initial Time Alignment state. When receiving the first frame it shall start sending speech frames towards the BTS with arbitrary or default phase related to the uplink frame phase.

When receiving these frames the CCU calculates the timing adjustment required in order to achieve minimum buffer delay and sets the "Time Alignment" field in the uplink frames accordingly.

The procedures described for the Initial and for the Static Time Alignment states are then followed during the call.

#### 6.6.1.1.4 Time Alignment during Handover

#### 6.6.1.1.4.1 BSS External Handover

For BSS external handover, the procedure described in subclause 6.6.1.1.3 should be used by the new BSC/BTS at resource allocation.

#### 6.6.1.1.4.2 BSS Internal Handover

If a BSS internal handover has been performed, the timing of the downlink frames may have to be adjusted several steps of 250/500 µs. In order to speed up the alignment of the downlink frames, this must be detected by the TRAU, e.g. by detecting the change in the uplink frame timing as described in subclause 6.6.1.1.1.2. The TRAU should then enter the Initial Time Alignment state and in that state it may perform an adjustment on the downlink equal to the change detected on the uplink.

#### 6.6.1.2 8 kbit/s submultiplexing

#### 6.6.1.2.1 Downlink Time Alignment

The TRAU must be able to adjust the time for transmitting the downlink TRAU frames in steps of 250 µs.

The CCU must be able to calculate the required Time Alignment (TA) with a resolution of 250 µs.

The TA requests are in the range of 250  $\mu$ s to 19,75 ms. The CCU calculates the required TA, sends a TA compound request to the TRAU and then starts timer Tta.

A TA compound request consists of up to five consecutive TA requests. The allowed values of TA requests are given in table 6.1.

The CCU does not send TA requests when timer Tta is running. Tta is reset by the CCU when the TRAU has applied the TA compound request. The TRAU performs time adjustment corresponding to the TA compound request.

The CCU can send a new TA compound request as soon as the TRAU has applied the previous TA compound request or Tta has expired.

## Page 26 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

Tta is a parameter settable by O&M.

NOTE: The timer Tta shall be set taking into account the transmission delay and the TRAU reaction time for the application of the TA compound request.

TA2	TA1	TA0	Value			
1	1	1	no change			
1	1	0	- 250 µs			
1	0	1	+ 250 µs			
0	1	1	+ 500 µs			
1	0	0	+ 1 ms			
0	1	0	+ 3 ms			
0	0	1	+ 6 ms			
0	0	0	+ 9 ms			

#### Table GSM 08.61/6.1: Allowed values of TA requests

When the TRAU detects an uplink transmission error, it ignores the possible TA request contained in the erroneous TRAU frame.

If the timing is to be advanced by 250  $\mu s,$  the TRAU shall not transfer the last two bits of the next downlink TRAU frame (bits T1, T2).

If the timing is to be delayed, the TRAU shall delay the next downlink TRAU frame by inserting the appropriate number of binary "1".

An example of the procedure is illustrated in figure 6.2.

If the TRAU detects a change in the timing of the uplink frames greater than 1 ms, it may perform an adjustment on the downlink equal to the change detected on the uplink.

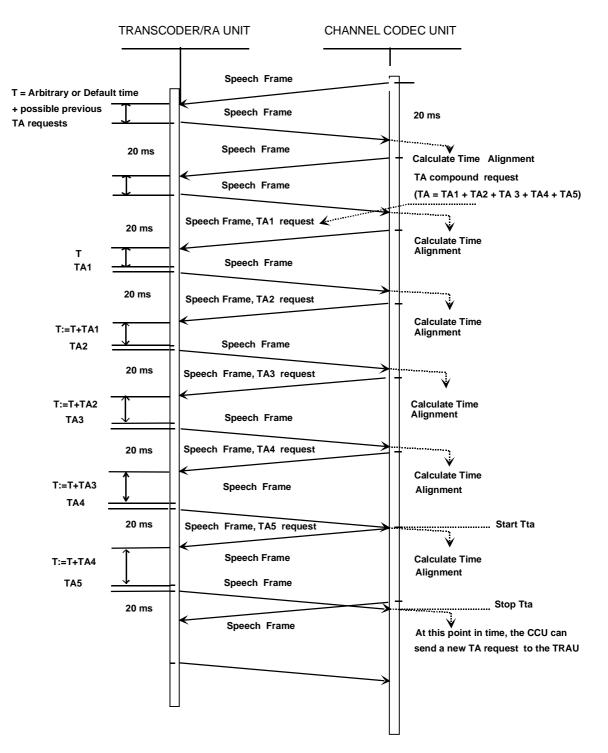


Figure GSM 08.61/6.2: Time Alignment procedure, 8 kbit/s submultiplexing

#### Page 28 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### 6.6.1.2.2 Uplink Time Alignment

In order to achieve optimum timing between the Air interface and the terrestrial link, the tail bits of the uplink speech frames may be used for uplink time alignment.

To advance 125 µs, the CCU removes the last tail bit (T2) of the uplink TRAU speech frame.

To delay 125 µs, the CCU inserts one binary "1" between two uplink TRAU speech frames.

#### 6.6.1.2.3 Initiation at Resource allocation

When the BTS receives the GSM 08.58 CHANNEL ACTIVATION message from the BSC, with Channel Mode IE indicating speech, it allocates the appropriate radio resources and a CCU. The CCU then initiates sending of TRAU speech frames towards the TRAU with normal frame phase for the TDMA channel in question.

When receiving the first frame, the TRAU shall start sending speech frames towards the CCU with arbitrary or default phase related to the uplink frame phase.

When receiving these frames, the CCU calculates the timing adjustment required in order to achieve minimum buffer delay and sends a timing adjustment request to the TRAU according to the procedure described in subclause 6.6.1.2.1.

#### 6.6.1.2.4 Time Alignment during handover

#### 6.6.1.2.4.1 BSS External Handover

For BSS external handover, the procedure described in subclause 6.6.1.2.3 should be used by the new BSC/BTS at resource allocation.

#### 6.6.1.2.4.2 BSS Internal Handover

The timing of the downlink frames may have to be adjusted if a BSS internal handover has been performed. In order to speed up the alignment of the downlink frames, this must be detected by the TRAU, e.g. by detecting the change in the uplink frame timing as described in subclause 6.6.1.2.1. The TRAU may consequently perform an adjustment on the downlink equal to the change detected on the uplink.

#### 6.6.2 **Procedures for Discontinuous Transmission (DTX)**

The procedures for comfort noise are described in GSM 06.22, the overall operation of DTX is described in GSM 06.41 and the Voice Activity Detector is described in GSM 06.42.

The downlink DTX Handler function is considered as a part of the TRAU when remote transcoders are applied.

The specification of the DTX Handler is given in GSM 06.41.

#### 6.6.2.1 DTX procedures in the uplink direction

In the comfort noise generation state, the MS will transmit a new traffic frame only every 240 ms (which corresponds to 12 TRAU speech frames). These traffic frames are transferred in the normal way between the CCU and the TRAU. If no valid traffic frames are received, the CCU shall apply the procedure described in subclause 6.5. Furthermore the frame classification is done according to the following clauses.

#### 16 kbit/s submultiplexing

In all uplink 320 bit TRAU frames, the BFI (Bad Frame Indicator) indicator, the SID (Silence Descriptor) indicator and the TAF (Time Alignment Flag) indicator are set as output from the Radio Subsystem (Error correction & detection and SID frame detection, see GSM 06.41).

#### 8 kbit/s submultiplexing

The frame classification is set as output from the Radio Subsystem (Error correction and detection and SID frame detection, see GSM 06.41) in the uplink 160 bit TRAU speech frame (SID frame, see subclauses 5.2.1 and 5.2.4.1).

#### 6.6.2.2 DTX procedures in the downlink direction

To inform the DTX handler in the remote transcoder whether downlink DTX shall be applied or not, the DTXd bit in the uplink TRAU speech frame is used. The coding is as follows:

DTXd = 0: Downlink DTX shall not be applied; DTXd = 1: Downlink DTX shall be applied.

Though this parameter is linked with the resource allocation in the BTS at call setup, its value may vary during the connection.

Two consecutive TRAU frames without detected errors and with the same DTXd flag value shall be considered as an indication to change DTX mode.

The SP (Speech) indicator is set as output from the Tx DTX handler (voice activity detection, see GSM 06.41) in the downlink TRAU speech frames (see subclause 5.2.4.2).

#### 6.7 Procedures for Data Frames

When rate adaption to 64 kbit/s is performed at the BTS (sub-64 kbit/s traffic channels are not used), the rate adaption between the format used on the radio interface and the 64 kbit/s format is made by the RA1/RA1' and the RA2 function as described in GSM 08.20. This is illustrated in figure 6.3.


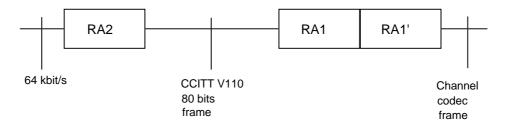


Figure GSM 08.61/6.3: Rate adaption when performed at the BTS

When sub-64 kbit/s traffic channels are used, two modified ITU-T V.110 frames are transferred in each TRAU data frame. An additional intermediate rate adaption function, RAA, is applied in order to perform the adaption between the TRAU data frame format and the ITU-T V.110 80 bits frame format. This is illustrated in figure 6.4.

Page 30 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

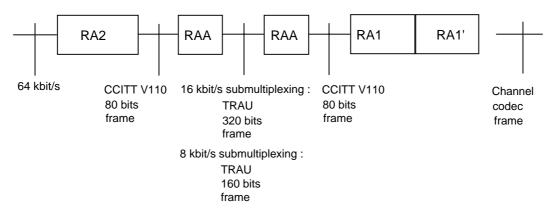

#### Figure GSM 08.61/6.4: Rate adaption when sub-64 kbit/s traffic channels are used

#### 6.7.1 The RAA Function

The RAA function performs the adaption between the ITU-T V.110 80 bits frame format and the TRAU data frame format.

When going from the V.110 format to the TRAU data frame format, the synchronization pattern (first octet with all bits coded binary "0" and the 9 bits coded binary "1" in the position 1 of the following octets) of the ITU-T V.110 80 bits frame is stripped off. Two modified V.110 63 bits frames are then transferred in each TRAU data frame as shown in subclause 5.1.2 for 16 kbit/s submultiplexing and subclause 5.2.2 for 8 kbit/s submultiplexing.

When going from the TRAU data frame format to the V.110 80 bits frame format, the two modified V.110 63 bits frames are separated and the synchronization pattern is again included.

The 80 bits V.110 frame is illustrated in figure 6.5.

				Bit r	number			
Octet no.	1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0	0
1	1	D1	D2	D3	D4	D5	D6	D7
2	1	D8	D9	D10	D11	D12	D13	D14
3	1	D15	D16	D17	D18	D19	D20	D21
4	1	D22	D23	D24	D25	D26	D27	D28
5	1	D29	D30	D31	D32	D33	D34	D35
6	1	D36	D37	D38	D39	D40	D41	D42
7	1	D43	D44	D45	D46	D47	D48	D49
8	1	D50	D51	D52	D53	D54	D55	D56
9	1	D57	D58	D59	D60	D61	D62	D63

#### Figure GSM 08.61/6.5: ITU-T V.110 80 bits frame

#### 16 kbit/s submultiplexing

The modified V.110 63 bits frame is illustrated in subclause 5.1.2 with:

- the D-bits of the modified V.110 63 bits frame in position 1 of the TRAU data frame;
- the D'-bits of the modified V.110 63 bits frame in position 3 of the TRAU data frame;

corresponding respectively to the D-bits of the V.110 80 bits frame (see figure 6.5).

#### 8 kbit/s submultiplexing

The modified V.110 63 bits frame is illustrated in subclause 5.2.2 with:

- the D-bits of the modified V.110 63 bits frame in position 1 of the TRAU data frame;
- the D'-bits of the modified V.110 63 bits frame in position 2 of the TRAU data frame;

corresponding respectively to the D-bits of the V.110 80 bits frame (see figure 6.5).

#### 6.7.2 The RA1/RA1' Function

This function is described in GSM 04.21.

#### 6.7.3 The RA2 Function

This function is described in GSM 04.21.

#### 6.7.4 Procedures for 8 kbit/s intermediate rate adaption rate

For 8 kbit/s intermediate rate adaption rate, two modified ITU-T V.110 72 bits frames are transferred in each TRAU data frame. If the data transfer terminates before the TRAU data frame has been completed, the remaining data bit positions in the TRAU data frame should be coded binary "1".

If V.110 frame synchronization has been lost in the downlink direction, the TRAU shall react as if V.110 frames with all data bits coded binary "1" had been received (bits D1 to D63, see subclause 6.7.1).

#### 6.7.5 Support of Non-Transparent Bearer Applications

The procedures for transfer of non-transparent bearer applications are specified in GSM 08.20. The 240 bit RLP frame is converted to four modified V.110 80 bit frames.

The same conversion is applied when transferred in a TRAU data frame. The TRAU data frames are coded as specified in subclause 6.7.4.

#### 6.8 Frame Synchronization

#### 6.8.1 16 kbit/s submultiplexing

#### 6.8.1.1 Search for Frame Synchronization

The frame synchronization is obtained by means of the first two octets in each frame, with all bits coded binary "0", and the first bit in octet no. 3, 5, 7, 9, ... 39 coded binary "1". The following 35 bit alignment pattern is used to achieve frame synchronization:

0000000	0000000	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX
1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX
1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX
1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX
1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX	1XXXXXXX	XXXXXXXX

#### 6.8.1.2 Frame Synchronization After Performing Downlink Timing Adjustments

If the timing of the downlink TRAU speech frames is adjusted, the adjustment is indicated in bits C6 - C11 as described in subclauses 6.6.1.1.1.1 and 6.6.1.1.1.2. The frame synchronization unit of the CCU shall change its frame synchronization window accordingly.

#### Page 32 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### 6.8.1.3 Frame Synchronization Monitoring and Recovery

The monitoring of the frame synchronization shall be a continuous process using the same procedure as for initial detection.

Loss of frame synchronization shall not be assumed unless at least three consecutive frames, each with at least one framing bit error, are detected.

When it detects a framing bit error, the TRAU uses the control bit UFE (Uplink Frame Error) in the next downlink TRAU frame to indicate it to the CCU. When the CCU receives a TRAU frame indicating an Uplink Frame Error and which has no errors on the synchronization pattern and the control bits, it starts a timer TsyncU.

If loss of frame synchronization is detected by the CCU it starts a timer TsyncD. If TsyncD or TsyncU expires before frame synchronization is again obtained the call shall be released as specified in GSM 08.58 with the cause field set to "Remote Transcoder Failure".

TsyncD is reset every time frame synchronization is again obtained.

TsyncU is reset every time three consecutive TRAU frames are received without Uplink Frame Error indication, without errors on the frame synchronization pattern and on the control bits.

TsyncD and TsyncU are parameters set by O&M (default value = 1 second).

#### 6.8.2 8 kbit/s submultiplexing

#### 6.8.2.1 Search for Frame Synchronization

The frame synchronization is obtained by a 28 bit pattern which is indicated below by all the bits set to binary "0" or binary "1".

00000000	1 X X X X X X X X	0 1 X X X X X X	1 X X X X X X X X
1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X
1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X
1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X
1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X	1 X X X X X X X X

#### 6.8.2.2 Frame Synchronization Monitoring and Recovery

Same as subclause 6.8.1.3.

#### 6.9 Correction/detection of bit errors

#### 6.9.1 16 kbit/s submultiplexing

#### 6.9.1.1 Error Detection on the Control Bits

In order to reduce the possibility of misinterpretation of control information due to bit errors, the following procedure should be followed:

#### 6.9.1.1.1 General Procedure

If any undefined combination of the C-bits is received (see subclause 5.1.4), the TRAU frame shall be handled as defined in subclause 6.9.1.2.

#### 6.9.1.1.2 Speech Frames

In addition to the general procedure described in the previous clause, the following procedure should be followed for the speech frames:

Bits C6 - C11: Time Alignment.

The full range of the time alignment adjustment should only be applied when the TRAU is in the Initial Time Alignment state (see subclauses 6.6.1.1.1.1 and 6.6.1.1.1.2).

If, in the Static Time Alignment state, a time alignment order is received indicating an adjustment of more than 250  $\mu$ s, the next downlink frame should be delayed only one 250  $\mu$ s step.

If an uplink frame is received with the "Time Alignment" field set to an unused value (101000 ... 111101), this value should be interpreted as "no change".

#### 6.9.1.2 Handling of frames received with errors

If a TRAU frame is received in the uplink or downlink with detectable errors in the control bits, then the control information shall be ignored and the control information from the previous received TRAU frame shall be used to handle the speech or data bits as if no error had been detected.

If frame synchronization has been lost in the uplink direction, the TRAU shall:

- for speech, mute the decoded speech as if it has received TRAU frames with errors (cf. GSM 06.21);
- for data, send idle V.110 frames as defined in GSM 08.20 to the MSC interworking unit.

The CCU shall follow the procedure specified in subclause 6.5:

- if frame synchronization has been lost in the downlink direction;
- if a CRC error is detected (bits CRC0-CRC2) in a downlink TRAU speech frame.

If a CRC error is detected (bits CRC0-CRC2) in a uplink TRAU speech frame, the TRAU speech frame shall be regarded as bad and the TRAU shall apply the procedure defined in GSM 06.21.

#### 6.9.2 8 kbit/s submultiplexing

#### 6.9.2.1 Error Detection on the Control Bits

Error detection is made on control bits C1-C4 with the parity bit C5 (see subclause 5.2.4) for all types of 160 bit TRAU frames. Additionally, for TRAU speech frames, error detection is made on control bits XC1-XC5 with the parity bit XC6.

If the following occurs:

- parity bit C5 and/or parity bit XC6 are wrong;
- any undefined combination of the control bits is received (see subclause 5.2.4) with a correct parity bit.

The TRAU frame shall be handled as defined in subclause 6.9.1.2.

#### 6.9.2.2 Handling of frames received with errors

Same as subclause 6.9.1.2.

#### 6.10 **Procedures for Operation & Maintenance**

The general procedures for Operation and Maintenance are described in GSM 12.21.

If the transcoders are positioned outside the BTS, some O&M functions will be required for the TRAU and the CCU. In particular this applies for transcoders positioned at the MSC site.

The transcoders outside the BTS are considered a part of the BSC, and the O&M functions for the TRAU should therefore be implemented in the BSC.

The CCU is a part of the BTS and the O&M functions for this unit should therefore be implemented in the BTS.

## Page 34 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

#### 6.10.1 Transfer of O&M Information Between the TRAU and the BSC

The transfer of O&M information between the BSC and the TRAU is possible to do in two ways. Either it is handled directly between the BSC and the TRAU or a BTS is used as a message transfer point. The choice between the two methods is up to the manufacturer of the BSC:

- i) The transfer of O&M information between the BSC and the TRAU is handled internally by the BSC. The O&M signalling between the TRAU and the BSC may either be handled by proprietary BSC solutions or the O&M TRAU frames defined for 16 kbit/s submultiplexing in subclauses 5.1.3 and 5.1.4.3 and for 8 kbit/s submultiplexing in subclauses 5.2.3 and 5.2.4 could be used. In the latter case, the BSC has to act as a terminal for the O&M TRAU frames sent between the TRAU and the BSC.
- ii) The O&M information between the TRAU and the BSC is transferred using O&M TRAU frames between the TRAU and the CCU in a BTS. The BTS then acts as a relay function between the O&M TRAU frames and the associated O&M messages sent between the BTS and the BSC.

#### 6.10.2 Procedures in the TRAU

If O&M information between the TRAU and the BSC is transferred using O&M TRAU frames between the CCU in a BTS and the TRAU, the TRAU sends O&M TRAU frames periodically until the identical O&M TRAU frame is received as an acknowledgement. The period is at least 64\*20 ms (1.28 seconds).

In case of fault conditions, when no immediate action is required, the TRAU may send O&M frames indicating the fault.

#### 6.10.3 Procedures in the BSC

The BSC should be able to detect a faulty TRAU, take it out of service and give an indication to O&M. A faulty TRAU could be detected e.g. by routine tests, alarms from the TRAU, release of call initiated by the BTS due to remote transcoder failure etc. How this is handled by the BSC is regarded as a BSC internal matter.

#### 6.10.3.1 Use of O&M Frames

The use and coding of O&M TRAU frames is left to the implementor of the BSC/TRAU.

If O&M TRAU frames are used, they are always carrying:

- 264 data bits in case of 16 kbit/s submultiplexing;
- 120 data bits in case of 8 kbit/s submultiplexing.

Any corresponding O&M message between the BSC and the BTS shall always carry:

- all 264 O&M data bits in case of 16 kbit/s submultiplexing;
- 120 data bits in case of 8 kbit/s submultiplexing.

#### 6.10.4 Procedures in the BTS

If a CCU in a BTS receives O&M TRAU frames from the TRAU, the BTS shall:

- send the identical frame to the TRAU for acknowledgement; and
- put all the data bits from the received frames into an appropriate O&M message and send it to the BSC.

If the CCU receives O&M TRAU frames during a speech or data call then the procedure described in subclause 6.5 shall apply.

If receiving an O&M message from the BSC, carrying TRAU O&M information, the BTS puts all the data bits from the received message into an O&M TRAU frame and then the CCU allocated to the addressed connection sends the frame to the TRAU in one single O&M TRAU frame. Repetition is done according to GSM 12.21

In case of a faulty CCU, the O&M procedures are BTS internal.

## Page 36 ETS 300 979 (GSM 08.61 version 5.0.1): May 1997

## History

Document history				
December 1996	Unified Approval Procedure	UAP 60:	1996-12-02 to 1997-04-11	
May 1997	First Edition			