



**Smart Cards;
Test specification for the Host Controller Interface (HCI);
Part 1: Terminal features
(Release 11)**

Reference

RTS/SCP-00HCITvb00

Keywords

smart card, terminal

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important noticeThe present document can be downloaded from:
<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at
<https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx>

If you find errors in the present document, please send your comment to one of the following services:
<https://portal.etsi.org/People/CommiteeSupportStaff.aspx>

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2016.
All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.
3GPP™ and **LTE™** are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.
GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Contents

Intellectual Property Rights	8
Foreword.....	8
Modal verbs terminology.....	8
Introduction	9
1 Scope	10
2 References	10
2.1 Normative references	10
2.2 Informative references.....	11
3 Definitions, symbols and abbreviations	11
3.1 Definitions	11
3.2 Symbols.....	11
3.3 Abbreviations	11
3.4 Void.....	12
3A Formats.....	12
3A.1 Format of the table of optional features.....	12
3A.2 Format of the applicability table.....	13
3A.3 Status and Notations.....	13
3A.4 Format of the conformance requirements tables	14
4 Test environment.....	14
4.1 Table of optional features.....	14
4.2 Applicability table	15
4.3 Information to be provided by the device supplier	17
4.4 Test equipment	17
4.4.0 Base Requirements	17
4.4.1 Measurement/setting uncertainties.....	18
4.4.2 Default conditions for DUT operation.....	18
4.4.2.1 General	18
4.4.2.2 Status of UICC interfaces.....	18
4.4.3 Minimum/maximum conditions for DUT operation.....	18
4.4.4 Conventions	18
4.5 Test execution	18
4.5.1 Parameter variations	18
4.5.2 Execution requirements	18
4.6 Pass criterion	19
4.6.0 Principle.....	19
4.6.1 Unanticipated behaviour from the DUT	19
5 Test cases.....	19
5.1 HCI architecture	19
5.1.1 Overview	19
5.1.2 Hosts	19
5.1.3 Gates	20
5.1.3.1 Conformance requirements	20
5.1.3.2 Test case 1: existence of gates.....	20
5.1.3.2.1 Test execution.....	20
5.1.3.2.2 Initial conditions	20
5.1.3.2.3 Test procedure	20
5.1.3.3 Void.....	20
5.1.4 Pipes.....	21
5.1.4.1 Conformance requirements	21
5.1.4.2 Test case 1: static pipe deletion.....	21
5.1.4.2.1 Test execution.....	21
5.1.4.2.2 Initial conditions	21
5.1.4.2.3 Test procedure	21

5.1.4.3	Test case 2: initial pipe state and persistence of pipe state and registry value	22
5.1.4.3.1	Test execution.....	22
5.1.4.3.2	Initial conditions	22
5.1.4.3.3	Test procedure	22
5.1.5	Registries	23
5.1.5.1	Conformance requirements	23
5.1.5.2	Test case 1: registry deletion.....	23
5.1.5.2.1	Test execution.....	23
5.1.5.2.2	Initial conditions	23
5.1.5.2.3	Test procedure	23
5.2	HCP.....	24
5.2.1	HCP packets.....	24
5.2.1.1	Conformance requirements	24
5.2.2	HCP message structure	24
5.2.2.1	Conformance requirements	24
5.2.2.2	Test case 1: commands/events on pipe which is not open	24
5.2.2.2.1	Test execution.....	24
5.2.2.2.2	Initial conditions	24
5.2.2.2.3	Test procedure	25
5.2.3	Message fragmentation	25
5.2.3.1	Conformance requirements	25
5.3	Instructions	25
5.3.1	Commands	25
5.3.1.1	Overview.....	25
5.3.1.1.1	Conformance requirements.....	25
5.3.1.2	Generic commands.....	26
5.3.1.2.1	ANY_SET_PARAMETER	26
5.3.1.2.2	ANY_GET_PARAMETER.....	26
5.3.1.2.3	ANY_OPEN_PIPE.....	27
5.3.1.2.4	ANY_CLOSE_PIPE.....	27
5.3.1.3	Administration commands	28
5.3.1.3.1	ADM_CREATE_PIPE.....	28
5.3.1.3.2	ADM_NOTIFY_PIPE_CREATED.....	28
5.3.1.3.3	ADM_DELETE_PIPE	29
5.3.1.3.4	ADM_NOTIFY_PIPE_DELETED	29
5.3.1.3.5	ADM_CLEAR_ALL_PIPE.....	29
5.3.1.3.6	ADM_NOTIFY_ALL_PIPE_CLEARED	29
5.3.2	Responses	30
5.3.2.1	Conformance requirements	30
5.3.2.2	Test case 1: response to unknown command	30
5.3.2.2.1	Test execution.....	30
5.3.2.2.2	Initial conditions	30
5.3.2.2.3	Test procedure	30
5.3.3	Events	30
5.3.3.1	Conformance requirements	30
5.3.3.2	Test case 1: reception of unknown events	30
5.3.3.2.1	Test execution.....	30
5.3.3.2.2	Initial conditions	30
5.3.3.2.3	Test procedure	31
5.4	GATES and subclauses	31
5.4.1	GATES	31
5.4.1.1	Conformance requirements	31
5.4.2	Management gates	31
5.4.2.1	Administration gates	31
5.4.2.1.1	Host controller administration gate	31
5.4.2.1.2	Host administration gate.....	33
5.4.2.2	Link management gate	34
5.4.2.2.1	Host controller link management gate.....	34
5.4.2.2.2	Host link management gate	34
5.4.2.3	Identity management gate	34
5.4.2.3.1	Local registry.....	34
5.4.2.3.2	Remote registry	36

5.4.2.4	Loop back gate	36
5.4.2.4.1	Conformance requirements.....	36
5.4.3	Generic gates	36
5.5	HCI procedures	36
5.5.1	Pipe management.....	36
5.5.1.1	Pipe creation.....	36
5.5.1.1.1	Conformance requirements.....	36
5.5.1.2	Pipe deletion.....	37
5.5.1.2.1	Conformance requirements.....	37
5.5.1.2.2	Test case 1: valid pipe deletion from host to host controller	37
5.5.1.3	Clear all Pipes	38
5.5.1.3.1	Conformance requirements.....	38
5.5.1.3.2	Test case 1: identity reference data when ETSI TS 102 613 is used	38
5.5.1.3.3	Test case 2: reception of ADM_CLEAR_ALL_PIPE - static pipes, dynamic pipes to host	39
5.5.2	Registry access.....	39
5.5.3	Host and Gate discovery	39
5.5.4	Session initialization	39
5.5.4.1	Conformance requirements	39
5.5.4.2	Test case 1: inhibited state	40
5.5.4.2.1	Test execution.....	40
5.5.4.2.2	Initial conditions	40
5.5.4.2.3	Test procedure	40
5.5.4.3	Test case 2: inhibited state, followed by subsequent successful identity check	41
5.5.4.3.1	Test execution.....	41
5.5.4.3.2	Initial conditions	41
5.5.4.3.3	Test procedure	41
5.5.4.4	Test case 3: initialization using all defined gates	41
5.5.4.4.1	Test execution.....	41
5.5.4.4.2	Initial conditions	41
5.5.4.4.3	Test procedure	42
5.5.5	Loop back testing.....	45
5.5.5.1	Conformance requirements	45
5.5.5.2	Test case 1: processing of EVT_POST_DATA	45
5.5.5.2.1	Test execution.....	45
5.5.5.2.2	Initial conditions	45
5.5.5.2.3	Test procedure	45
5.6	Contactless card emulation.....	45
5.6.1	Overview	45
5.6.1.1	Conformance requirements	45
5.6.1.2	Test case 1: RF gate of type A	45
5.6.1.2.1	Test execution.....	45
5.6.1.2.2	Initial conditions	46
5.6.1.2.3	Test procedure	46
5.6.1.3	Test case 2: RF gate of type B.....	46
5.6.1.3.1	Test execution.....	46
5.6.1.3.2	Initial conditions	46
5.6.1.3.3	Test procedure	46
5.6.1.4	Test case 3: RF gate of type F.....	47
5.6.1.4.1	Test execution.....	47
5.6.1.4.2	Initial conditions	47
5.6.1.4.3	Test procedure	47
5.6.2	Void	47
5.6.3	Gates	47
5.6.3.1	Void.....	47
5.6.3.2	Identity management gate	48
5.6.3.2.1	Conformance requirements.....	48
5.6.3.3	Card RF gates.....	48
5.6.3.3.1	Overview	48
5.6.3.3.2	Commands.....	48
5.6.3.3.3	Events and subclauses	48
5.6.3.3.4	Registry and subclauses.....	48
5.6.3.4	Card application gates	58

5.6.3.4.1	Overview	58
5.6.3.4.2	Commands.....	58
5.6.3.4.3	Events and subclauses	58
5.6.3.4.4	Registry	59
5.6.4	Procedures.....	60
5.6.4.1	Use of contactless card application	60
5.6.4.1.1	Conformance requirements.....	60
5.6.4.1.2	Test case 1: ISO/IEC 14443-3 Type A.....	60
5.6.4.1.3	Test case 2: ISO/IEC 14443-3 Type B	61
5.6.4.1.4	Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	62
5.6.4.1.5	Test case 4: ISO/IEC 14443-3 Type A.....	63
5.6.4.1.6	Test case 5: ISO/IEC 14443-3 Type B	64
5.6.4.2	Non ISO/IEC 14443-4 type A.....	65
5.6.4.2.1	Conformance requirements.....	65
5.6.4.2.2	Test case 1: Non ISO/IEC 14443-4 type A.....	65
5.6.4.2.3	Test case 2: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	66
5.6.4.3	Type B' RF technology	67
5.6.4.3.1	Conformance requirements.....	67
5.6.4.4	Type F RF technology.....	67
5.6.4.4.1	Conformance requirements.....	67
5.6.4.4.2	Test case 1: ISO/IEC 18092 Type F.....	68
5.6.4.4.3	Test case 2: RF off during ISO/IEC 18092 Type F commands handling	69
5.6.4.4.4	Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	71
5.6.4.5	Update RF technology settings	72
5.6.4.5.1	Conformance requirements.....	72
5.6.4.6	Identity check.....	72
5.6.4.6.1	Conformance requirements.....	72
5.7	Contactless reader.....	72
5.7.1	Overview	72
5.7.1.1	Conformance requirements	72
5.7.2	Reader RF gates.....	72
5.7.2.1	Overview.....	72
5.7.2.2	Command.....	73
5.7.2.2.1	WR_XCHG_DATA	73
5.7.2.3	Registries.....	73
5.7.2.3.1	Type A reader RF gate	73
5.7.2.3.2	Type B reader RF gate.....	77
5.7.2.4	Events and subclauses	79
5.7.2.4.1	Events.....	79
5.7.2.4.2	EVT_READER_REQUESTED	79
5.7.2.4.3	EVT_END_OPERATION.....	80
5.7.2.4.4	EVT_READER_STATUS	80
5.7.2.5	Responses.....	80
5.7.2.5.1	Conformance requirements.....	80
5.7.3	Reader application gates	81
5.7.3.1	Overview.....	81
5.7.3.2	Command.....	81
5.7.3.2.1	Conformance requirements.....	81
5.7.3.3	Registry	81
5.7.3.3.1	Conformance requirements.....	81
5.7.3.4	Events and subclauses	81
5.7.3.4.1	Events.....	81
5.7.3.4.2	EVT_TARGET_DISCOVERED	81
5.7.4	Procedures.....	82
5.7.4.1	Use of contactless reader application	82
5.7.4.1.1	Conformance requirements.....	82
5.7.4.2	Contactless reader not available.....	82
5.7.4.2.1	Conformance requirements.....	82
5.7.4.3	Error management.....	82
5.7.4.3.1	Conformance requirements.....	82
5.8	Connectivity	82
5.8.1	Overview	82

5.8.2	Connectivity gate and subclauses	83
5.8.2.1	Connectivity gate	83
5.8.2.2	Commands	83
5.8.2.2.1	PRO_HOST_REQUEST	83
5.8.2.3	Events and subclauses	83
5.8.2.3.1	Events	83
5.8.2.3.2	EVT_CONNECTIVITY	83
5.8.2.3.3	Void	83
5.8.2.3.4	EVT_OPERATION_ENDED	83
5.8.2.3.5	EVT_TRANSACTION	84
5.8.2.4	Registry	84
5.8.2.4.1	Conformance requirements.....	84
5.8.3	Connectivity application gate and subclauses.....	84
5.8.3.1	Connectivity application gate.....	84
5.8.3.1.1	Conformance requirements.....	84
5.8.3.2	Commands	84
5.8.3.2.1	Conformance requirements.....	84
5.8.3.3	Events and subclauses	85
5.8.3.3.1	Events	85
5.8.3.3.2	EVT_STANDBY	85
5.8.3.4	Registry	85
5.8.3.4.1	Conformance requirements.....	85
5.8.4	Procedures.....	85
5.8.4.1	Use of connectivity gate.....	85
Annex A (informative):	Bibliography.....	86
Annex B (informative):	Core specification version information.....	87
Annex C (informative):	Change history	88
History		90

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI Technical Committee Smart Card Platform (SCP).

The contents of the present document are subject to continuing work within TC SCP and may change following formal TC SCP approval. If TC SCP modifies the contents of the present document, it will then be republished by ETSI with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 0 early working draft;
 - 1 presented to TC SCP for information;
 - 2 presented to TC SCP for approval;
 - 3 or greater indicates TC SCP approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

The present document is part 1 of a multi-part deliverable covering the Test specification for the Host Controller Interface (HCI), as identified below:

- Part 1:** "Terminal features";
 - Part 2: "UICC features";
 - Part 3: "Host Controller features".
-

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Introduction

The present document defines test cases for the terminal relating to the Host Controller Interface (HCI) as specified in ETSI TS 102 622 [1].

The aim of the present document is to ensure interoperability between the terminal and the UICC independently of the respective manufacturer, card issuer or operator.

1 Scope

The present document covers the minimum characteristics which are considered necessary for the terminal in order to provide compliance to ETSI TS 102 622 [1].

The present document specifies the test cases for:

- the HCI core as described in the first part of ETSI TS 102 622 [1];
- the contactless platform as described in the second part of ETSI TS 102 622 [1].

Test cases for the UICC relating to ETSI TS 102 622 [1] and test cases for the Single Wire Protocol (SWP) covering both terminal and UICC are out of scope of the present document.

2 References

2.1 Normative references

References are either specific (identified by date of publication and/or edition number or version number) or non-specific. For specific references, only the cited version applies. For non-specific references, the latest version of the reference document (including any amendments) applies.

- In the case of a reference to a TC SCP document, a non specific reference implicitly refers to the latest version of that document in the same Release as the present document.

Referenced documents which are not found to be publicly available in the expected location might be found at <http://docbox.etsi.org/Reference>.

NOTE: While any hyperlinks included in this clause were valid at the time of publication, ETSI cannot guarantee their long term validity.

The following referenced documents are necessary for the application of the present document.

- [1] ETSI TS 102 622: "Smart Cards; UICC - Contactless Front-end (CLF) Interface; Host Controller Interface (HCI)".
- [2] ETSI TS 102 613: "Smart Cards; UICC - Contactless Front-end (CLF) Interface; Part 1: Physical and data link layer characteristics".
- [3] ETSI TS 102 223: "Smart Cards; Card Application Toolkit (CAT)".
- [4] ISO/IEC 18092: "Information technology - Telecommunications and information exchange between systems - Near Field Communication - Interface and Protocol (NFCIP-1)".
- [5] ISO/IEC 14443-2: "Identification cards - Contactless integrated circuit(s) cards - Proximity cards - Part 2: Radio frequency power and signal interface".
- [6] ISO/IEC 14443-3: "Identification cards - Contactless integrated circuit(s) cards - Proximity cards - Part 3: Initialization and anticollision".
- [7] ISO/IEC 14443-4: "Identification cards - Contactless integrated circuit(s) cards - Proximity cards - Part 4: Transmission Protocol".
- [8] ISO/IEC 7816-4: "Information technology - Identification cards - Integrated circuit(s) cards with contacts - Part 4: Interindustry commands for interchange".
- [9] ISO/IEC 9646-7: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 7: Implementation Conformance Statements".
- [10] ETSI TS 102 695-3: "Smart Cards; Test specification for the Host Controller Interface (HCI); Part 3: Host Controller features".

2.2 Informative references

References are either specific (identified by date of publication and/or edition number or version number) or non-specific. For specific references, only the cited version applies. For non-specific references, the latest version of the reference document (including any amendments) applies.

- In the case of a reference to a TC SCP document, a non specific reference implicitly refers to the latest version of that document in the same Release as the present document.

NOTE: While any hyperlinks included in this clause were valid at the time of publication, ETSI cannot guarantee their long term validity.

The following referenced documents are not necessary for the application of the present document but they assist the user with regard to a particular subject area.

Not applicable.

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in ETSI TS 102 622 [1] and the following apply:

allowed error response code: response code which is not ANY_OK and which is allowed for the referenced command as specified in ETSI TS 102 622 [1]

non-occurrence RQ: RQ which has been extracted from ETSI TS 102 622 [1], but which indicates a situation which should never occur

NOTE: The consequence is that such RQs cannot be explicitly tested.

user: describes any logical or physical entity which controls the test equipment in a way that it is able to trigger activities of the DUT

3.2 Symbols

For the purposes of the present document, the symbols given in ETSI TS 102 622 [1] and the following apply:

PIPE0	the static pipe connected to the link management gate of the device under test.
PIPE1	the static pipe connected to the administration gate of the device under test.

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in ETSI TS 102 622 [1] and the following apply:

(U)SIM	(Universal) Subscriber Identity Module
AC	AntiCollision
AFI	Application Family Identifier
AID	Application IDentifier
ATQA	Answer To reQuest of type A
ATQB	Answer To reQuest of type B
ATS	Answer To Select
CLF	ContactLess Front-end
CLT	ContactLess Tunnelling
CRC	Cyclic Redundancy Code
DUT	Device under test
FFS	For further study
HCI	Host Controller Interface
HCUT	Host controller under test
HS	Host simulator

ICRx Initial condition requirement (where x is a number)

NOTE: As used in the applicability table; see clauses 4.2 and 4.5.2.

LEN LENgth
 NAA Network Access Application
 PCD Proximity Coupling Device
 PICC Proximity Integrated Circuit Card
 PPS Protocol and Parameter Selection
 RATS Request for Answer To Select
 REQA REQuest command, type A
 RF Radio Frequency
 RO Read-Only
 RQ Conformance requirement
 RW Read-Write
 SAK Select AcKnowledge
 SDL Specification and Description Language
 SRx Static requirement (where x is a number)

NOTE: As used in the applicability table; see clauses 4.2 and 4.5.2.

TC Test Case
 TRx Trigger requirement (where x is a number)
 UID Unique IDentification
 WO Write Only
 WUPB Wake-Up command for PICC type B

NOTE: As used in the applicability table; see clauses 4.2 and 4.5.2.

3.4 Void

Content of this clause has been moved to clause 3A.

3A Formats

3A.1 Format of the table of optional features

The columns in table 4.1 have the following meaning.

Column	Meaning
Option	The optional feature supported or not by the DUT.
Status	See clause 3.4.3.
Support	The support columns shall be filled in by the supplier of the implementation. The following common notations, defined in ISO/IEC 9646-7 [9], are used for the support column in table 4.1. Y or y supported by the implementation. N or n not supported by the implementation. N/A, n/a or - no answer required (allowed only if the status is N/A, directly or after evaluation of a conditional status).
Mnemonic	The mnemonic column contains mnemonic identifiers for each item.

3A.2 Format of the applicability table

The applicability of every test in table 4.2 is formally expressed by the use of Boolean expression defined in the following clause.

The columns in table 4.2 have the following meaning.

Column	Meaning
Clause	The "Clause" column identifies the clause containing the test case referenced in the "Test case number and description" column.
Test case number and description	The "Test case number and description" column gives a reference to the test case number (along with the corresponding description) detailed in the present document and required to validate the DUT.
Release	The "Release" column gives the Release applicable and onwards, for the corresponding test case.
Execution requirements	The usage of the "Execution requirements" column is described in clause 4.5.2.
Rel-x Terminal	For a given Release, the corresponding "Rel-x " column lists the tests required for a DUT to be declared compliant to this Release.
Support	The "Support" column is blank in the proforma, and shall be completed by the manufacturer in respect of each particular requirement to indicate the choices, which have been made in the implementation.

3A.3 Status and Notations

The "Rel-x" columns show the status of the entries as follows:

The following notations, defined in ISO/IEC 9646-7 [9], are used for the status column:

M	mandatory - the capability is required to be supported.
O	optional - the capability may be supported or not.
N/A	not applicable - in the given context, it is impossible to use the capability.
X	prohibited (excluded) - there is a requirement not to use this capability in the given context.
O.i	qualified optional - for mutually exclusive or selectable options from a set. "i" is an integer which identifies a unique group of related optional items and the logic of their selection which is defined immediately following the table.
Ci	conditional - the requirement on the capability ("M", "O", "X" or "N/A") depends on the support of other optional or conditional items. "i" is an integer identifying a unique conditional status expression which is defined immediately following the table. For nested conditional expressions, the syntax "IF ... THEN (IF ... THEN ... ELSE...) ELSE ..." shall be used to avoid ambiguities.

References to items

For each possible item answer (answer in the support column) there exists a unique reference, used, for example, in the conditional expressions. It is defined as the table identifier, followed by a solidus character "/", followed by the item number in the table. If there is more than one support column in a table, the columns shall be discriminated by letters (a, b, etc.), respectively.

EXAMPLE: 4.1/4 is the reference to the answer of item 4 in table 4.1.

3A.4 Format of the conformance requirements tables

The conformance requirements tables contained in the present document have the following format and meaning:

Column Status	Meaning										
Mandatory	This mandatory column contains the conformance requirement number (e.g. RQ3).										
Optional	This optional column is present when the containing clause sources conformance requirements from multiple clauses in the core specification. In this case, the cells in this column indicate the specific clause from the core specification from which the conformance requirement was sourced. If the conformance requirements are sourced from a single clause in the core specification, this column is not present.										
Optional	This optional column is present when the table contains conformance requirements which are applicable to only a subset of the releases which are covered by the present document. In this case, the content of the cells indicates the release(s) to which the conformance requirement is applicable. Additionally, a cell being empty indicates that the conformance requirement is applicable to every release which is covered by the present document. Examples of the content of cells in this column are given below: <table border="1" data-bbox="338 757 1417 904"> <thead> <tr> <th>Sample Content</th> <th>Applicability of conformance requirement</th> </tr> </thead> <tbody> <tr> <td></td> <td>All releases covered by the present document.</td> </tr> <tr> <td>Rel-7 to Rel-8</td> <td>Rel-7 to Rel-8 only.</td> </tr> <tr> <td>Rel-9 upwards</td> <td>Rel-9 up to the latest release which is covered by the present document.</td> </tr> <tr> <td>Rel-7</td> <td>Rel-7 only.</td> </tr> </tbody> </table> The absence of this column indicates that all conformance requirements are applicable to every release which is covered by the present document.	Sample Content	Applicability of conformance requirement		All releases covered by the present document.	Rel-7 to Rel-8	Rel-7 to Rel-8 only.	Rel-9 upwards	Rel-9 up to the latest release which is covered by the present document.	Rel-7	Rel-7 only.
Sample Content	Applicability of conformance requirement										
	All releases covered by the present document.										
Rel-7 to Rel-8	Rel-7 to Rel-8 only.										
Rel-9 upwards	Rel-9 up to the latest release which is covered by the present document.										
Rel-7	Rel-7 only.										
Mandatory	This mandatory column contains the text of the conformance requirement.										

4 Test environment

4.1 Table of optional features

The device supplier shall state the support of possible options in table 4.1. See clause 3.4 for the format of table 4.1.

Table 4.1: Options

Item	Option	Status	Support	Mnemonic
1	Data link layer specified in ETSI TS 102 613 [2] is used	O		O_102_613
2	Card RF gate for technology A is supported	O		O_CE_TypeA
3	Card RF gate for technology B is supported	O		O_CE_TypeB
4	Reader RF gate for technology A is supported	O		O_Reader_TypeA
5	Reader RF gate for technology B is supported	O		O_Reader_TypeB
6	Card RF gate for technology F is supported	O		O_CE_TypeF
7	Low power mode is supported	O		O_Low_Power_Mode
8	CLT for Type A as specified in ETSI TS 102 613 [2] is supported, see note	O		O_CE_CLT_TypeA
9	Connectivity gate is supported in the terminal host	O		O_Conn
NOTE: If item 8 is supported, then items 1 and 2 shall also be supported.				

4.2 Applicability table

Table 4.2 specifies the applicability of each test case to the device under test. See clause 3.4 for the format of table 4.2.

Clause 4.5.2 should be referenced for usage of the execution requirements which are referenced in table 4.2 a) and described in table 4.2 c).

Table 4.2 a): Applicability of tests

Clause	Test case number and description	Release	Execution requirements	Rel-7 Terminal	Rel-8 Terminal	Rel-9 Terminal	Rel-10 Terminal	Rel-11 Terminal	Support
5.1.3.2	Test case 1: existence of gates	Rel-7		M	M	M	M	M	
5.1.4.2	Test case 1: static pipe deletion	Rel-7		M	M	M	M	M	
5.1.4.3	Test case 2: initial pipe state and persistence of pipe state and registry value	Rel-7	TR1	M	M	M	M	M	
5.1.5.2	Test case 1: registry deletion	Rel-7	SR1	M	M	M	M	M	
5.2.2.2	Test case 1: commands/events on pipe which is not open	Rel-7		M	M	M	M	M	
5.3.1.2.3.2	Test case 1: ANY_OPEN_PIPE reception	Rel-7		M	M	M	M	M	
5.3.1.2.4.2	Test case 1: ANY_CLOSE_PIPE reception	Rel-7		M	M	M	M	M	
5.3.2.2	Test case 1: response to unknown command	Rel-7		M	M	M	M	M	
5.3.3.2	Test case 1: reception of unknown events	Rel-7		M	M	M	M	M	
5.4.2.1.1.2	Test case 1: SESSION_IDENTITY	Rel-7		M	M	M	M	M	
5.4.2.1.1.3	Test case 2: MAX_PIPE	Rel-7		M	M	M	M	M	
5.4.2.1.1.4	Test case 3: WHITELIST	Rel-7		M	M	M	M	M	
5.4.2.1.1.5	Test case 4: HOST_LIST	Rel-7		M	M	M	M	M	
5.4.2.3.1.2	Test case 1: registry parameters	Rel-7		M	M	M	M	M	
5.5.1.2.2	Test case 1: valid pipe deletion from host to host controller	Rel-7		M	M	M	M	M	
5.5.1.3.2	Test case 1: identity reference data when ETSI TS 102 613 [2] is used	Rel-7		C101	C101	C101	C101	C101	
5.5.1.3.3	Test case 2: reception of ADM_CLEAR_ALL_PIPE - static pipes, dynamic pipes to host	Rel-7		M	M	M	M	M	
5.5.4.2	Test case 1: inhibited state	Rel-7		M	M	M	M	M	
5.5.4.3	Test case 2: inhibited state, followed by subsequent successful identity check	Rel-7		M	M	M	M	M	
5.5.4.4	Test case 3: initialization using all defined gates	Rel-7		N/A	N/A	M	M	M	
5.5.5.2	Test case 1: processing of EVT_POST_DATA	Rel-7		M	M	M	M	M	
5.6.1.2	Test case 1: RF gate of type A	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.1.3	Test case 2: RF gate of type B	Rel-7	TR2	C103	C103	C103	C103	C103	
5.6.1.4	Test case 3: RF gate of type F	Rel-7	TR2	N/A	N/A	C112	C112	C112	
5.6.3.3.4.2.2	Test case 1: UID_REG - default	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.3.3.4.2.3	Test case 2: SAK	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.3.3.4.2.4	Test case 3: ATS - default parameters	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.3.3.4.2.5	Test case 4: APPLICATION_DATA	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.3.3.4.2.6	Test case 5: DATARATE_MAX	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.3.3.4.3.2	Test case 1: PUPI_REG - default	Rel-7	TR2	C103	C103	C103	C103	C103	
5.6.3.3.4.3.3	Test case 2: ATQB - verify the different parameter	Rel-7	TR2	C103	C103	C103	C103	C103	
5.6.3.3.4.3.4	Test case 3: HIGHER_LAYER_RESPONSE	Rel-7	TR2	C103	C103	C103	C103	C103	
5.6.4.1.2	Test case 1: ISO/IEC 14443-3 [6] Type A	Rel-7	TR2	C102	C102	C102	C102	C102	
5.6.4.1.3	Test case 2: ISO/IEC 14443-3 [6] Type B	Rel-7	TR2	C103	C103	C103	C103	C103	
5.6.4.1.4	Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	Rel-7	TR2	N/A	N/A	C107	C107	C107	

Clause	Test case number and description	Release	Execution requirements	Rel-7 Terminal	Rel-8 Terminal	Rel-9 Terminal	Rel-10 Terminal	Rel-11 Terminal	Support
5.6.4.1.5	Test case 4: ISO/IEC 14443-3 [6] Type A	Rel-10	TR2	N/A	N/A	N/A	C102	C102	
5.6.4.1.6	Test case 5: ISO/IEC 14443-3 [6] Type B	Rel-10	TR2	N/A	N/A	N/A	C103	C103	
5.6.4.2.2	Test case 1: Non ISO/IEC 14443-4 [7] type A	Rel-7	TR2	N/A	N/A	C109	C109	C109	
5.6.4.2.3	Test case 2: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	Rel-7	TR2	N/A	N/A	C110	C110	C110	
5.6.4.4.2	Test case 1: ISO/IEC 18092 [4] Type F	Rel-7	TR2	N/A	N/A	C112	C112	C112	
5.6.4.4.3	Test case 2: RF off during ISO/IEC 18092 [4] Type F commands handling	Rel-7	TR2	N/A	N/A	C112	C112	C112	
5.6.4.4.4	Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G _{ID}	Rel-7	TR2	N/A	N/A	C108	C108	C108	
5.7.2.3.1.2	Test case 1: ISO/IEC 14443-4 [7] compliant type A	Rel-7	TR3	C104	C104	C104	C104	C104	
5.7.2.3.2.2	Test case 1: ISO/IEC 14443-4 [7] compliant type B	Rel-7	TR3	C105	C105	C105	C105	C105	
5.8.2.3.5.2	Test case 1: EVT_TRANSACTION	Rel-7	TR4	N/A	N/A	C111	C111	C111	

Table 4.2 b): Conditional items referenced by table 4.2 a)

Conditional item	Condition	Description
C101	IF 4.1/1 THEN M ELSE N/A	O_102_613
C102	IF 4.1/2 THEN M ELSE N/A	O_CE_TypeA
C103	IF 4.1/3 THEN M ELSE N/A	O_CE_TypeB
C104	IF 4.1/4 THEN M ELSE N/A	O_Reader_TypeA
C105	IF 4.1/5 THEN M ELSE N/A	O_Reader_TypeB
C106	IF 4.1/6 THEN M ELSE N/A	O_CE_TypeF
C107	IF 4.1/2 AND 4.1/3 THEN M ELSE N/A	O_CE_TypeA AND O_CE_TypeB
C108	IF (4.1/2 OR 4.1/3) AND 4.1/6 THEN M ELSE N/A	(O_CE_TypeA OR O_CE_TypeB) AND O_CE_TypeF
C109	IF 4.1/8 THEN M ELSE N/A	O_CE_CLT_TypeA
C110	IF 4.1/8 AND 4.1/3 THEN M ELSE N/A	O_CE_CLT_TypeA AND O_CE_TypeB
C111	IF 4.1/9 THEN M ELSE N/A	O_Conn
C112	IF 4.1/1 AND 4.1/6 THEN M ELSE N/A	O_102_613 AND O_CE_TypeF

Table 4.2 c): Execution requirements referenced by table 4.2 a)

Execution requirement	Description
SR1	A gate which accepts dynamic pipe and has a RW registry parameter; the default value of the registry parameter shall be known.
TR1	The DUT manufacturer has to provide information how the host controller can be powered down and powered up.
TR2	The DUT manufacturer has to provide information how the card emulation mode can be configured and used by the host simulator.
TR3	The DUT manufacturer has to provide information how the reader mode hosted by the UICC can be enabled in the host controller.
TR4	An application which can be launched by using EVT_TRANSACTION is present on the terminal and the conditions required to launch this application are satisfied.

NOTE: Clause 4.5.2 should be referenced for the meaning and usage of the execution requirements which are described in table 4.2 c).

4.3 Information to be provided by the device supplier

The device supplier shall provide the information indicated in table 4.3.

Table 4.3: Default configuration

Item	Description	Presence/Value	Status	Mnemonic
1	Void			
2	Void			
3	Void			
4	Void			
5	Indication of presence of HCI_VERSION, and value if supported		M	V_HCI_VERSION
6	Value of GATES_LIST		M	V_GATES_LIST
7	Value of MAX_PIPE		M	V_MAX_PIPE
8	Value of HOST_LIST		M	V_HOST_LIST
9	Maximum data rate supported in Card Emulation for technology A		C	V_DRATE_MAX_CEA
10	Maximum data rate supported in Card Emulation for technology B		C	V_DRATE_MAX_CEB

NOTE: Conditional values shall be provided if the corresponding option is supported in the table 4.1.

4.4 Test equipment

4.4.0 Base Requirements

The test equipment shall provide a host simulator which is connected to the DUT during test procedure execution, unless otherwise specified.

With respect to the DUT, the host simulator shall act as a valid host according to ETSI TS 102 622 [1] unless otherwise specified. In particular, the host simulator shall ensure that the value GATES_LIST is valid, according to the particular requirements of the test case being executed.

With respect to the DUT, the host simulator shall comprise a valid host according to the specific DUT. The details are out of the scope of the present document.

For some test cases, usage of a PCD is required. The detailed requirements are specified in the individual test cases.

The test equipment shall ensure that a matching SYNC_ID is used during test case execution, unless otherwise specified.

Some terminals might require the presence of an NAA (e.g. (U)SIM), which shall be provided by the test equipment.

NOTE 1: The implementation of the terminal may imply certain activities or settings on the HCI layer. This should be taken into account when testing the HCI interface (e.g. PIPE state should be checked, activity after initialization, already open pipes, etc.).

With respect to the DUT, the host simulator shall act as a valid host according to ETSI TS 102 622 [1] unless otherwise specified. In particular, the host simulator shall ensure before running a test case that all static pipes are closed, all dynamic pipes are deleted and the registry values are set to their defaults by running the sequence in table 4.4.

Table 4.4: HCI test case initialization sequence

Step	Direction	Description
a1	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.
a2	HCUT → HS	Send ANY_OK.
a3	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with parameter ('FF FF').
a4	HCUT → HS	Send ANY_OK.

Before the execution of the RF technology test cases, RF gate parameters has to be modified properly to run the test.

When the DUT is expected to send an HCI response or event in response to a prior HCI message sent by the simulator, and this HCI response or event is not received within 200 ms of the HCI message, the DUT shall be considered to have failed the relevant part of the test case.

NOTE 2: The value of 200 ms specified above is not derived from any value in ETSI TS 102 622 [1]. This value was selected to optimize the duration of the test execution.

4.4.1 Measurement/setting uncertainties

Void.

4.4.2 Default conditions for DUT operation

4.4.2.1 General

Unless otherwise specified, the following applies during test procedure execution.

The test equipment shall attempt to ensure that the identity check mechanism of the lower layer passes (see ETSI TS 102 622 [1], clause 8.4).

If the test procedure indicates that the host simulator is to send ANY_OK in response to an ANY_OPEN_PIPE command, the parameter shall contain the number of pipes already open on the gate before the execution of the command.

4.4.2.2 Status of UICC interfaces

Void.

4.4.3 Minimum/maximum conditions for DUT operation

Void.

4.4.4 Conventions

Unless otherwise specified, ADM_CREATE_PIPE is sent by the test equipment with source $H_{ID} = H_{ID}$ of host simulator and destination $H_{ID} = H_{ID}$ of host controller.

If the pipe for a response is not explicitly specified, then the pipe for the response is required to be the pipe on which the preceding command was sent.

4.5 Test execution

4.5.1 Parameter variations

Unless otherwise specified, all test cases shall be carried out in full power mode only, and for the parameter variations specified individually for each test case.

4.5.2 Execution requirements

Table 4.2, Applicability of tests, specifies "execution requirements" for several test cases. For these test cases, it has not been possible to specify the corresponding test procedure in such a way that it can be guaranteed that the test procedure can be executed against every possible DUT.

Some sample scenarios of test requirements are listed below:

- The test case requires certain state to be present on the DUT in order to test a particular feature, but there is no mandatory requirement in the core specification (ETSI TS 102 622 [1]) for this state to be present.
- The test case requires the DUT to perform a particular operation in order to test that feature, but the core specification (ETSI TS 102 622 [1]) does not provide a standardized mechanism to trigger that operation to be executed by the DUT.

The test requirements have been split into various categories, as indicated by table 4.2 c):

- Static requirements (SRx): information about, for example, particular gates or registry parameters which can be used in the test procedure execution.

- Trigger requirements (TRx): mechanisms for triggering the DUT to perform certain operations.
- Initial condition requirements (ICRx): information about how to establish initial condition states.

The DUT supplier should make every effort to provide appropriate information or mechanisms to allow these execution requirements to be satisfied for the DUT.

It is recognized that this might not always be possible. For example, if the configuration of the DUT does not allow for the required state to be present; or if it is not possible to provide a particular trigger mechanism for the DUT. In these cases, it is acceptable that the test case is not carried out. However, it should be recognized that the consequence is that the particular feature will not be tested.

4.6 Pass criterion

4.6.0 Principle

A test shall only be considered as successful, if the test procedure was carried out successfully under all parameter variations with the DUT respecting all conformance requirements referenced in the test procedure. This is subject to the additional qualifications described in clause 4.6.1.

NOTE: Within the test procedures, the RQs are referenced in the step where they are observable. In some cases, this is different from the step where they occur with respect to the DUT.

4.6.1 Unanticipated behaviour from the DUT

In the specification of the test procedures, every attempt has been made to ensure that the interface between the simulator and the DUT is in a known state before and during test procedure execution. However, as the DUT is an autonomous device, it is not possible to fully guarantee this.

If the DUT unexpectedly closes or deletes a pipe which is intended to be used during a subsequent part of the test procedure, this should not be considered as a failure of the DUT, even though the test procedure cannot be completed successfully. Instead, the test procedure should be executed again to attempt to execute the test procedure to completion. If the unexpected behaviour occurs again, further effort should be applied by the tester to attempt to ensure that the unexpected behaviour does not occur.

5 Test cases

5.1 HCI architecture

5.1.1 Overview

Reference: ETSI TS 102 622 [1], clause 4.1.

There are no conformance requirements for the terminal for the referenced clause.

5.1.2 Hosts

Reference: ETSI TS 102 622 [1], clause 4.2.

RQ4.1	The host controller shall not use host identifiers which are RFU.
RQ4.2	The host controller shall reject received host identifiers which are RFU.
NOTE 1:	RQ4.1 is a non-occurrence RQ.
NOTE 2:	Development of test cases for RQ4.2 is FFS.

5.1.3 Gates

5.1.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 4.3.

RQ4.3	The host controller shall have one administration gate.
RQ4.4	The host controller shall have one link management gate.
RQ4.5	The host controller shall have one identity management gate.
RQ4.6	The host controller shall have one loop back gate.
RQ4.7	The host controller shall not use gate identifiers which are RFU.
RQ4.8	Void.
RQ4.9	The host controller shall not use gate identifiers which are host specific but not yet allocated in ETSI TS 102 622 [1].
RQ4.10	Void.
NOTE:	RQ4.7 and RQ4.9 are not tested, as they are non-occurrence RQs.

5.1.3.2 Test case 1: existence of gates

5.1.3.2.1 Test execution

There are no test case-specific parameters for this test case.

5.1.3.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE0 is open.
- PIPE1 is open.

5.1.3.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER(REC_ERROR) on PIPE0.	
2	HCUT → HS	Send ANY_OK (parameters are not checked).	RQ4.4
3	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination G _{ID} = G _{ID} of identity management gate.	
4	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_ID_MAN.	RQ4.3, RQ4.5
5	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID_MAN.	
6	HCUT → HS	Send ANY_OK.	RQ4.5
7	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
8	HCUT → HS	Send ANY_OK. Check that the GATES_LIST returned contains the G _{ID} of the identity management gate and the G _{ID} of the loop back gate.	RQ4.5, RQ4.6

5.1.3.3 Void

5.1.4 Pipes

5.1.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 4.4.

RQ4.11	The host controller shall not attempt to delete a static pipe.
RQ4.12	The host controller shall reject any attempts to delete a static pipe.
RQ4.13	The state of a pipe (i.e. open or closed) shall remain persistent if the hosts are powered down and up again.
RQ4.14	The state of a dynamic pipe after creation shall be closed.
RQ4.15	The initial state of a static pipe shall be closed.
RQ4.16	The host controller shall not use pipe identifiers which are RFU.
RQ4.17	The state of a pipe shall remain persistent if a host is temporarily removed from the host network and was not replaced by a different device in the meantime.
RQ4.18	For dynamic pipes, pipe identifiers are dynamically allocated by the host controller.
RQ4.19	All pipe identifiers allocated by the host controller for dynamic pipes shall be in the range '02' to '6F'.
RQ4.20	Dynamic pipe identifiers shall be unique in the host network.
NOTE 1: RQ4.11 and RQ4.16 are not tested, as they are non-occurrence RQs.	
NOTE 2: RQ4.15 is not tested, as it is not clear when the initial state of the static pipe applies.	
NOTE 3: RQ4.18 is covered in clause 8.1.1 of ETSI TS 102 622 [1], covered by clause 5.5.1.1 of the present document. This RQ is therefore not tested within this clause, as it is effectively tested in clause 5.5.1.1.	
NOTE 4: RQ4.19 and RQ4.20 are tested implicitly in different test cases in this test specification.	

Reference: ETSI TS 102 622 [1], clauses 7.1.1.1.

RQ7.2	The registry of the host controller administration gate shall be persistent.
-------	--

Reference: ETSI TS 102 622 [1], clauses 8.1.1, 6.1.3.1 and 6.1.3.2.

RQ8.3	The host controller assigns an unused pipe identifier.
RQ6.30	When the pipe was successfully created, the host controller shall send the response ANY_OK in response to the ADM_CREATE_PIPE command, with parameters as specified in ETSI TS 102 622 [1].
RQ8.7	When a pipe is created towards the host controller then only steps 1 and 4 in figure 6 of ETSI TS 102 622 [1] are needed.

5.1.4.2 Test case 1: static pipe deletion

5.1.4.2.1 Test execution

The test procedure shall be executed once for each of following parameters:

- PIPE0.
- PIPE1.

5.1.4.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.1.4.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_DELETE_PIPE containing the pipe indicated in the test execution clause, on PIPE1.	
2	HCUT → HS	Send response containing an allowed error response code for the command.	RQ4.12

5.1.4.3 Test case 2: initial pipe state and persistence of pipe state and registry value

5.1.4.3.1 Test execution

There are no test case-specific parameters for this test case.

5.1.4.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.
- The value of SESSION_IDENTITY in the registry is not 'FFFFFFFFFFFFFFFF'.

5.1.4.3.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = 'EE' and destination G _{ID} = G _{ID} of the loop back gate.	
2	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_LOOP_BACK.	
3	HS → HCUT	Open PIPE on PIPE_LOOP_BACK.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '00' and destination G _{ID} = G _{ID} of identity management gate.	
6	HCUT → HS	Send ANY_OK, with parameters of 5 bytes as follows: <ul style="list-style-type: none"> • Source H_{ID} = H_{ID} of host simulator. • Source G_{ID} = source G_{ID} in command. • Destination H_{ID} = destination H_{ID} in command. • Destination G_{ID} = destination G_{ID} in command. • P_{ID} = a previously unallocated P_{ID}. Designate the create pipe PIPE_ID_MAN.	RQ4.14, RQ4.18, RQ7.2 RQ8.3, RQ6.30, RQ8.7
7	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on (PIPE_ID_MAN).	
8	HCUT → HS	Send response containing an allowed error response code for the command.	RQ4.14
9	User → HCUT	Trigger both the host controller and the host simulator to be powered down.	
10	HCUT → HS	Power down the host simulator.	
11	HCUT	Powered down.	
12	User → HCUT	Trigger both the host controller and the host simulator to be powered up.	
13	HCUT	Powered up.	
14	HCUT → HS	Power up the host simulator.	
15	HS → HCUT	Send ANY_GET_PARAMETER (SESSION_IDENTITY) on PIPE1.	
16	HCUT → HS	Send ANY_OK, with parameter value equal to the parameter value before the terminal was powered down.	RQ7.2
17	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE1.	
18	HCUT → HS	Send ANY_OK.	RQ4.13
19	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
20	HCUT → HS	Send response containing an allowed error response code for the command.	RQ4.13
21	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID_MAN.	
22	HCUT → HS	Send ANY_OK.	RQ4.13
23	HS → HCUT	Send EVT_POST_DATA on PIPE_LOOP_BACK.	
24	HCUT → HS	Send EVT_POST_DATA on PIPE_LOOP_BACK.	RQ4.13

5.1.5 Registries

5.1.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 4.5.

RQ4.21	For all gates defined in ETSI TS 102 622 [1], parameter identifiers in the range of '00' to 'EF' are reserved for use in ETSI TS 102 622 [1].
RQ4.22	A new instance of the registry is created for every pipe that connects to the gate.
RQ4.23	Upon pipe creation all registry parameters with access rights Read-write (RW) or Write-only (WO) shall be set to their default values.
RQ4.24	Upon pipe creation all read-only (RO) parameters shall be set by the entity managing the registry to an appropriate value which may differ from the default values.
RQ4.25	When a pipe is deleted its registry instance is also deleted.
RQ4.26	Registry parameters which are in the range of '00' to 'EF' but which are not allocated in ETSI TS 102 622 [1] shall not be present in the registry.
NOTE 1:	As the specification of registry parameters is specific to each individual registry, RQ4.21, RQ4.23 and RQ4.24 are not tested in this clause, but are tested in other clauses of the present document for each individual registry.
NOTE 2:	RQ4.22 is not currently tested as ETSI TS 102 622 [1] does not specify any gates with the required properties to exercise this functionality.
NOTE 3:	Development of test cases for RQ4.26 is FFS.

5.1.5.2 Test case 1: registry deletion

5.1.5.2.1 Test execution

Assignment of terms to entities referenced in SR1: G_{ID} of gate = GATE_X, registry parameter identifier = REG_PARAM.

There are no test case-specific parameters for this test case.

5.1.5.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.1.5.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G_{ID} = 'EE' and destination G_{ID} = GATE_X.	
2	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPEa.	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPEa.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_SET_PARAMETER(REG_PARAM) on PIPEa, with a value different from the default value.	
6	HCUT → HS	Send ANY_OK (parameters are not checked).	
7	HS → HCUT	Send ADM_DELETE_PIPE(PIPEa) on PIPE1.	
8	HCUT → HS	Send ANY_OK (parameters are not checked).	
9	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with G_{ID} = GATE_X.	
10	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPEb. (The P_{ID} used for PIPEb may be the same as or may be different from the P_{ID} used for PIPEa.)	
11	HS → HCUT	Send ANY_OPEN_PIPE on PIPEb.	
12	HCUT → HS	Send ANY_OK.	
13	HS → HCUT	Send ANY_GET_PARAMETER(REG_PARAM) on PIPEb.	
14	HCUT → HS	Send ANY_OK with parameter value equal to the default value of REG_PARAM.	RQ4.25

5.2 HCP

5.2.1 HCP packets

5.2.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 5.1.

RQ5.1	The host controller shall use the correct structure for transmitted HCP packets.
RQ5.2	The host controller shall recognize correctly structured received HCP packets.
RQ5.3	When receiving a packet, the host controller as destination host forwards the packet to the destination gate.
RQ5.4	When it receives a packet from a host, the host controller uses the value of P_{ID} to forward a packet to the destination host.
RQ5.5	When it receives a packet from a host, the host controller shall verify that the pipe identifier is used by a host involved in the creation of the pipe.
NOTE 1: RQ5.1 and RQ5.2 are implicitly tested by the testing of higher layers in other clauses of the present document.	
NOTE 2: RQ5.3 is internal to the host controller and is not tested in this clause. It will be implicitly tested in many other test cases within the current document.	
NOTE 3: RQ5.4 and RQ5.5 are tested in clause 5.5.1.1.2 of the ETSI TS 102 695-3 [10].	

5.2.2 HCP message structure

5.2.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 5.2.

RQ5.6	The host controller shall use the correct structure for transmitted HCP messages.
RQ5.7	Type value 3 shall not be used.
RQ5.8	The host controller shall recognize correctly structured received HCP messages.
RQ5.9	A gate shall only accept a command or an event on a pipe when the state of that pipe is open unless otherwise stated.
RQ5.10	A gate shall not send a command or event on a pipe when it is waiting for a response to a previous command on that pipe unless otherwise stated.
NOTE 1: RQ5.6 and RQ5.8 are implicitly tested by the testing of higher layers in other clauses of the present document.	
NOTE 2: RQ5.7 and RQ5.10 are not tested, as they are non-occurrence RQs.	

5.2.2.2 Test case 1: commands/events on pipe which is not open

5.2.2.2.1 Test execution

There are no test case-specific parameters for this test case.

5.2.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.2.2.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination G _{ID} = G _{ID} of identity management gate.	
2	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_ID_MAN.	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID_MAN.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
6	HCUT → HS	Send ANY_OK (parameters are not checked).	RQ5.9
7	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE_ID_MAN.	
8	HCUT → HS	Send ANY_OK (parameters are not checked).	
9	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
10	HCUT → HS	Send response containing an allowed error response code for the command.	RQ5.9
11	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = 'EE' and destination G _{ID} = G _{ID} of the loop back gate.	
12	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_LOOP_BACK.	
13	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_LOOP_BACK.	
14	HCUT → HS	Send ANY_OK.	
15	HS → HCUT	Send EVT_POST_DATA containing '01 02 03 04' on PIPE_LOOP_BACK.	
16	HCUT → HS	Send EVT_POST_DATA containing '01 02 03 04' on PIPE_LOOP_BACK.	RQ5.9
17	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE_LOOP_BACK.	
18	HCUT → HS	Send ANY_OK (parameters are not checked).	
19	HS → HCUT	Send EVT_POST_DATA containing '01 02 03 04' on PIPE_LOOP_BACK.	
20	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_LOOP_BACK.	
21	HCUT → HS	Send ANY_OK.	RQ5.9

5.2.3 Message fragmentation

5.2.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 5.3.

RQ5.11	Message fragmentation shall be used when the size of the message is larger than supported by the underlying data link layer.
RQ5.12	Messages shall be fragmented according to the rules specified in ETSI TS 102 622 [1].
RQ5.13	The destination gate is responsible for rebuilding the message from the fragmented messages.
RQ5.14	If a reset of the underlying data link layer occurs, fragments of a partially received message shall be discarded and a partially sent message shall be re-sent from the beginning.
NOTE:	Development of test cases for RQ5.11, RQ5.12, RQ5.13 and RQ5.14 is FFS.

5.3 Instructions

5.3.1 Commands

5.3.1.1 Overview

5.3.1.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.1.

RQ6.1	For all gates, the host controller shall not use RFU instruction values ('05' to '0F') in commands.
RQ6.2	For administration gates, the host controller shall not use RFU instruction values ('16' to '3F') in commands.
RQ6.3	For gates defined in ETSI TS 102 622 [1], the host controller shall not use instruction values between '10' and '3F' which are not allocated in ETSI TS 102 622 [1].
NOTE:	RQ6.1, RQ6.2 and RQ6.3 are not tested, as they are non-occurrence RQs.

5.3.1.2 Generic commands

5.3.1.2.1 ANY_SET_PARAMETER

5.3.1.2.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.2.1.

RQ6.4	The host controller shall reject an incorrectly formatted ANY_SET_PARAMETER command with an allowed error response code.
RQ6.5	The host controller shall reject an ANY_SET_PARAMETER command if the access right for the parameter does not allowed writing (i.e. is not RW or WO).
RQ6.6	The host controller shall not send an ANY_SET_PARAMETER command if the access right for the parameter does not allow writing (i.e. is not RW or WO).
RQ6.7	When the host controller receives a valid ANY_SET_PARAMETER command, it shall write the parameter value into the registry and respond with ANY_OK without any parameters.
RQ6.8	Whenever the host controller sends an ANY_SET_PARAMETER command, it shall do so correctly: <ul style="list-style-type: none"> • It shall only be sent to a gate which supports the command. • It shall always have at least one byte in the command parameters. • The parameter identifier shall match one of those defined for the specific gate. • The parameter value shall be a valid value as defined for the specific gate.
NOTE 1: RQ6.6 is not tested, as it is a non-occurrence RQ.	
NOTE 2: RQ6.7 and RQ6.8 are not tested in this clause, as they are effectively tested in other clauses of the present document for each individual registry parameter.	
NOTE 3: Test cases for RQ6.5 and RQ6.4 are presented in ETSI TS 102 695-3 [10].	

5.3.1.2.2 ANY_GET_PARAMETER

5.3.1.2.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.2.2.

RQ6.9	The host controller shall reject an incorrectly formatted ANY_GET_PARAMETER command with an allowed error response code.
RQ6.10	The host controller shall reject an ANY_GET_PARAMETER command if the access right for the parameter does not allowed reading (i.e. is not RW or RO).
RQ6.11	The host controller shall not send an ANY_GET_PARAMETER command if the access right for the parameter does not allowed reading (i.e. is not RW or RO).
RQ6.12	When the host controller receives a valid ANY_GET_PARAMETER command, it shall shall respond with ANY_OK with the value of the parameter.
RQ6.13	Whenever the host controller sends an ANY_GET_PARAMETER command, it shall do so correctly: <ul style="list-style-type: none"> • It shall only be sent to a gate which supports the command. • It shall always have exactly one byte in the command parameters. • The parameter identifier shall match one of those defined for the specific gate.
NOTE 1: RQ6.11 is not tested, as it is a non-occurrence RQ.	
NOTE 2: RQ6.12 and RQ6.13 are not tested, as they are effectively tested in other clauses of the present document for each individual registry parameter.	
NOTE 3: Test cases for RQ6.10 and RQ6.9 are presented in ETSI TS 102 695-3 [10].	

5.3.1.2.3 ANY_OPEN_PIPE

5.3.1.2.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.2.3.

RQ6.14	The host controller shall reject an incorrectly formatted ANY_OPEN_PIPE command.
RQ6.15	When the host controller receives a valid ANY_OPEN_PIPE command on a closed pipe, it shall open the pipe and return ANY_OK without any parameter.
RQ6.16	When the host controller sends an ANY_OPEN_PIPE command, it shall contain no command parameters.
RQ6.17	When the host controller receives ANY_OK in response to an ANY_OPEN_PIPE command, it shall open the pipe.
NOTE 1:	In ETSI TS 102 622 [1], it is not specified whether ANY_OPEN_PIPE is valid over a pipe which is already open. This is therefore not listed as a conformance requirement.
NOTE 2:	Test cases for RQ6.16 and RQ6.17 are presented in ETSI TS 102 695-3 [10].

5.3.1.2.3.2 Test case 1: ANY_OPEN_PIPE reception

5.3.1.2.3.2.1 Test execution

There are no test case-specific parameters for this test case.

5.3.1.2.3.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.3.1.2.3.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE1.	
2	HCUT → HS	Send ANY_OK.	
3	HS → HCUT	Send ANY_OPEN_PIPE with parameter '00' on PIPE1.	
4	HCUT → HS	Send response containing an allowed error response code for the command.	RQ6.14
5	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
6	HCUT → HS	Send ANY_OK with no parameters.	RQ6.15
7	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination GID = GID of identity management gate.	
8	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_ID_MAN.	
9	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID_MAN.	
10	HCUT → HS	Send ANY_OK with no parameters.	RQ6.15

5.3.1.2.4 ANY_CLOSE_PIPE

5.3.1.2.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.2.4.

RQ6.18	The host controller shall reject an incorrectly formatted ANY_CLOSE_PIPE command.
RQ6.19	When the host controller receives a valid ANY_CLOSE_PIPE on an open pipe, it shall close the pipe and respond with ANY_OK and no parameters.
RQ6.20	When the host controller sends an ANY_CLOSE_PIPE command, it shall contain no command parameters.
RQ6.21	When the host controller receives ANY_OK in response to an ANY_CLOSE_PIPE command, it shall close the pipe.
NOTE:	Test cases for RQ6.20 and RQ6.21 are presented in ETSI TS 102 695-3 [10].

5.3.1.2.4.2 Test case 1: ANY_CLOSE_PIPE reception

5.3.1.2.4.2.1 Test execution

There are no test case-specific parameters for this test case.

5.3.1.2.4.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.3.1.2.4.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_CLOSE_PIPE with parameter '00' on PIPE1.	
2	HCUT → HS	Send response containing an allowed error response code for the command.	RQ6.18
3	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination $G_{ID} = G_{ID}$ of identity management gate.	
4	HCUT → HS	Send ANY_OK (parameters are not checked); designate the created pipe PIPE_ID_MAN.	
5	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE1.	
6	HCUT → HS	Send ANY_OK with no parameters.	RQ6.19
7	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination $G_{ID} = G_{ID}$ of identity management gate.	
8	HCUT → HS	Send response containing an allowed error response code for the command.	RQ6.19

5.3.1.3 Administration commands

5.3.1.3.1 ADM_CREATE_PIPE

5.3.1.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.1.

RQ6.22		When the host controller receives an ADM_CREATE_PIPE command, it shall use the WHITELIST defined by the destination host in order to verify that the source host is authorized to create a pipe.
RQ6.23		When the pipe was successfully created, the host controller shall send the response ANY_OK in response to the ADM_CREATE_PIPE command, with parameters as specified in ETSI TS 102 622 [1].
RQ6.42		When receiving ADM_CREATE_PIPE, the host controller shall accept any gate identifier being used as source gate.
RQ6.43	Rel-11 upwards	Only one pipe is allowed to be created for each combination of source host/source gate and destination host/destination gate.
NOTE 1: All conformance requirements for the referenced clause are included in clauses 5.5.1.1 and 5.1.4.3 of the present document.		
NOTE 2: Development of test cases for RQ6.42 and RQ6.43 is FFS.		

5.3.1.3.2 ADM_NOTIFY_PIPE_CREATED

5.3.1.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.2.

RQ6.24	When the host controller sends an ADM_NOTIFY_PIPE_CREATED command, the command parameters shall be 5 bytes long.
RQ6.25	When the host controller sends an ADM_NOTIFY_PIPE_CREATED command as a result of an ADM_CREATE_PIPE command being received from a host, the source H_{ID} in the command parameters shall be the H_{ID} of that host.

NOTE:	All conformance requirements for the referenced clause are included in clause 5.5.1.1 of the present document.
-------	--

5.3.1.3.3 ADM_DELETE_PIPE

5.3.1.3.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.3.

RQ6.26	The host that requested the deletion of the pipe can only be the source host or destination host.
RQ6.27	When the pipe is successfully deleted, the host controller shall send the response ANY_OK without parameters.
NOTE:	All conformance requirements for the referenced clause are included in clause 5.5.1.2 of the present document.

5.3.1.3.4 ADM_NOTIFY_PIPE_DELETED

5.3.1.3.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.4.

RQ6.28	When the host controller sends an ADM_NOTIFY_PIPE_DELETED command, the command parameters shall be 1 byte long.
NOTE:	All conformance requirements for the referenced clause are included in clause 5.5.1.2 of the present document.

5.3.1.3.5 ADM_CLEAR_ALL_PIPE

5.3.1.3.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.5.

RQ6.29	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command and the data link layer specified in ETSI TS 102 613 [2] is used, it shall interpret the two bytes in the command parameters as the identity reference data, and shall use the identity reference data to initialize the reference data used by the host controller to check the UICC host identity.
RQ6.30	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command, it shall delete all the dynamic pipes connected to the requesting host, close all static pipes connected to the requesting host and set all registry values related to static pipes connected to the requesting host to their default values.
RQ6.31	When ADM_CLEAR_ALL_PIPE is successful the host controller shall respond with an ANY_OK without parameters.
NOTE:	All conformance requirements for the referenced clause are included in clause 5.5.1.3 of the present document.

5.3.1.3.6 ADM_NOTIFY_ALL_PIPE_CLEARED

5.3.1.3.6.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.1.3.6.

RQ6.32	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command from a requesting host, it shall send ADM_NOTIFY_ALL_PIPE_CLEARED to every host with at least one pipe to the requesting host.
RQ6.33	When the host controller sends an ADM_NOTIFY_ALL_PIPE_CLEARED command with the host controller as the requesting host, it shall delete all dynamic pipes between the host controller and the host and shall close all static pipes between the host and the host controller.
RQ6.34	When the host controller sends an ADM_NOTIFY_ALL_PIPE_CLEARED command, the command parameters shall be one byte long and shall contain the H _{ID} of the requesting host.
NOTE:	All conformance requirements for the referenced clause are included in clause 5.5.1.3 of the present document.

5.3.2 Responses

5.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.2.

RQ6.35	A response shall be sent to all commands received even to those unknown to the receiving gate.
RQ6.36	Responses received out of order (i.e. if no command was sent previously) shall be discarded.
RQ6.37	For a received command which is defined in Table 16 in ETSI TS 102 622 [1], the host controller shall only return a response code which is specified for that command in table 16 in ETSI TS 102 622 [1].
NOTE 1:	Development of test cases for RQ6.37 is FFS.
NOTE 2:	Test cases for RQ6.36 are presented in ETSI TS 102 695-3 [10].

5.3.2.2 Test case 1: response to unknown command

5.3.2.2.1 Test execution

There are no test case-specific parameters for this test case.

5.3.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.

5.3.2.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send command with an RFU instruction value on PIPE1.	
2	HCUT → HS	Send response (contents are not checked).	RQ6.35

5.3.3 Events

5.3.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 6.3.

RQ6.38	Unknown events received shall be discarded.
RQ6.39	EVT_HOT_PLUG shall be sent by the host controller to any other connected host to notify the connection or disconnection of a host to the host controller.
RQ6.40	When the host controller send EVT_HOT_PLUG, it shall contain no parameters.
RQ6.41	For gates defined in ETSI TS 102 622 [1], the host controller shall not use event values which are not allocated in ETSI TS 102 622 [1].
NOTE 1:	RQ6.41 is not tested, as it is a non-occurrence RQ.
NOTE 2:	Development of test cases for RQ6.39 and RQ6.40 is FFS.

5.3.3.2 Test case 1: reception of unknown events

5.3.3.2.1 Test execution

There are no test case-specific parameters for this test case.

5.3.3.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- A pipe (PIPE_ID_MAN) has been created to the host controller's identity management gate, and is open.

5.3.3.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send event with an RFU instruction value on PIPE_ID_MAN.	
2	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
3	HCUT → HS	Send response with ANY_OK and value of GATES_LIST.	RQ6.38

5.4 GATES and subclauses

5.4.1 GATES

5.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 7.

RQ7.1	Gates shall support the commands and events specified for them in tables 18 and 19 of ETSI TS 102 622 [1].
NOTE 1:	RQ1 is not tested in this clause, as it is effectively tested in other clauses of the present document.
NOTE 2:	ANY_GET_PARAMETER and ANY_SET_PARAMETER are not tested in this clause, as they are tested in the specific clauses for each gate for testing registry parameters.
NOTE 3:	ADM_CREATE_PIPE, ADM_DELETE_PIPE and ADM_CLEAR_ALL_PIPE are not tested for the host controller administration gate, as they are tested in the specific clauses for each command.
NOTE 4:	EVT_POST_DATA is not tested for the loop back gate, as it is tested in the clause 5.5.5.
NOTE 5:	EVT_HCI_END_OF_OPERATION is not tested for the host controller link management gate, as the reaction of the host controller is not specified in ETSI TS 102 622 [1].

5.4.2 Management gates

5.4.2.1 Administration gates

5.4.2.1.1 Host controller administration gate

5.4.2.1.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 7.1.1.1 and 4.5.

RQ4.26	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ6.32	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command from a requesting host, it shall send ADM_NOTIFY_ALL_PIPE_CLEARED to every host with at least one pipe to the requesting host.
RQ7.2	The registry of the host controller administration gate shall be persistent.
RQ7.3	The host controller shall use a default value for SESSION_IDENTITY of 'FFFFFFFFFFFFFFFF'.
RQ7.4	The host controller shall apply the access condition of RW to SESSION_IDENTITY.
RQ7.5	The host controller shall only accept values of SESSION_IDENTITY of length 8 bytes.
RQ7.6	The host controller shall use a default value for MAX_PIPE of between '10' and '7D' inclusive.
RQ7.7	The host controller shall apply the access condition of RO to MAX_PIPE.
RQ7.8	The host controller shall allow MAX_PIPE created dynamic pipes for the host.
RQ7.9	The host controller shall use a default value for WHITELIST of an empty array.
RQ7.10	The host controller shall apply the access condition of RW to WHITELIST.
RQ7.11	The host controller shall use a default value for HOST_LIST containing the list of the hosts that are accessible from this host controller including the host controller itself, as a list of host identifiers.
RQ7.12	The host controller shall apply the access condition of RO to HOST_LIST.
RQ7.13	The HOST_LIST shall contain the list of the hosts that are accessible from this host controller including the host controller itself.
RQ7.14	The host controller shall reject create pipe requests if the source host is not listed in the WHITELIST of the destination host.
NOTE 1:	Development of test cases for RQ4.26 and RQ7.8 is FFS.
NOTE 2:	RQ7.13 is only tested in the context of RQ7.11 (i.e. default value).
NOTE 3:	RQ7.14 is also covered in clause 8.1.1 of ETSI TS 102 622 [1], covered by clause 5.5.1.1 of the present document. This RQ is therefore not tested within this clause, as it is effectively tested in clause 5.5.1.1.
NOTE 4:	RQ7.2 is tested in clause 5.1.4.3 of the present document.

5.4.2.1.1.2 Test case 1: SESSION_IDENTITY

5.4.2.1.1.2.1 Test execution

There are no test case-specific parameters for this test case.

5.4.2.1.1.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.

5.4.2.1.1.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with appropriate parameter as required by the lower layer.	
2	HCUT → HS	Send ANY_OK.	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send ANY_OK (parameters are not checked).	
5	HS → HCUT	Send ANY_GET_PARAMETER(SESSION_IDENTITY) on PIPE1.	
6	HCUT → HS	Send ANY_OK with parameter value 'FFFFFFFFFFFFFFFF'.	RQ7.3, RQ7.4
7	HS → HCUT	Send ANY_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07 08') on PIPE1.	
8	HCUT → HS	Send ANY_OK.	RQ7.4
9	HS → HCUT	Send ANY_GET_PARAMETER(SESSION_IDENTITY) on PIPE1.	
10	HCUT → HS	Send ANY_OK with parameter value '01 02 03 04 05 06 07 08'.	RQ7.4
11	HS → HCUT	Send ANY_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07') on PIPE1.	
12	HCUT → HS	Send response containing an allowed error response code for the command.	RQ7.5

5.4.2.1.1.3 Test case 2: MAX_PIPE

5.4.2.1.1.3.1 Test execution

There are no test case-specific parameters for this test case.

5.4.2.1.1.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.

5.4.2.1.1.3.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with appropriate parameter as required by the lower layer.	
2	HCUT → HS	Send ANY_OK.	RQ6.32
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_GET_PARAMETER(MAX_PIPE) on PIPE1.	
6	HCUT → HS	Send ANY_OK with parameter value V_MAX_PIPE.	RQ7.6, RQ7.7
7	HS → HCUT	If V_MAX_PIPE = '10', send ANY_SET_PARAMETER(MAX_PIPE, '11') on PIPE1. Otherwise send ANY_SET_PARAMETER(MAX_PIPE, '10') on PIPE1.	
8	HCUT → HS	Send response containing an allowed error response code for the command.	RQ7.7

5.4.2.1.1.4 Test case 3: WHITELIST

5.4.2.1.1.4.1 Test execution

There are no test case-specific parameters for this test case.

5.4.2.1.1.4.2 Initial conditions

The last value of WHITELIST in the host controller's registry is not an empty array.

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.

5.4.2.1.1.4.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with appropriate parameter as required by the lower layer.	
2	HCUT → HS	Send ANY_OK.	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_GET_PARAMETER(WHITELIST) on PIPE1.	
6	HCUT → HS	Send ANY_OK with a parameter of length zero.	RQ7.9, RQ7.10
7	HS → HCUT	Send ANY_SET_PARAMETER(WHITELIST, '01') on PIPE1.	
8	HCUT → HS	Send ANY_OK.	RQ7.10
9	HS → HCUT	Send ANY_GET_PARAMETER(WHITELIST) on PIPE1.	
10	HCUT → HS	Send ANY_OK with parameter value '01'.	RQ7.10

5.4.2.1.1.5 Test case 4: HOST_LIST

5.4.2.1.1.5.1 Test execution

There are no test case-specific parameters for this test case.

5.4.2.1.1.5.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.

5.4.2.1.1.5.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with appropriate parameter as required by the lower layer.	
2	HCUT → HS	Send ANY_OK.	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_GET_PARAMETER(HOST_LIST) on PIPE1.	
6	HCUT → HS	Send ANY_OK with parameter value V_HOST_LIST.	RQ7.11, RQ7.12, RQ7.13
7	HS → HCUT	Send ANY_SET_PARAMETER(HOST_LIST, '00') on PIPE1.	
8	HCUT → HS	Send response containing an allowed error response code for the command.	RQ7.12

5.4.2.1.2 Host administration gate

5.4.2.1.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 7.1.1.2.

There are no conformance requirements for the terminal for the referenced clause.

5.4.2.2 Link management gate

5.4.2.2.1 Host controller link management gate

5.4.2.2.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 7.1.2.1 and 4.5.

RQ4.26	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ7.15	The host controller shall use a default value for REC_ERROR of '0000'.
RQ7.16	The host controller shall apply the access condition of RW to REC_ERROR.
RQ7.17	The host controller shall only accept values of REC_ERROR of length 2 bytes.
NOTE 1:	Development of test cases for RQ4.26 is FFS.
NOTE 2:	Test cases for RQ7.15, RQ7.16 and RQ7.17 are presented in ETSI TS 102 695-3 [10].

5.4.2.2.2 Host link management gate

5.4.2.2.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 7.1.2.2.

RQ7.18	The host controller shall only set values of REC_ERROR with length 2 bytes.
NOTE:	Test cases for RQ7.18 are presented in ETSI TS 102 695-3 [10].

5.4.2.3 Identity management gate

5.4.2.3.1 Local registry

5.4.2.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 7.1.3 and 4.5.

NOTE: This clause covers the conformance requirements contained within ETSI TS 102 622 [1], clause 7.1.3 for the local registry. The requirements for the remote registry are contained in clause 5.4.2.3.2.

RQ4.26		Registry parameters which are in the range of '00' to 'EF' but which are not allocated in ETSI TS 102 622 [1] shall not be present in the registry.
RQ7.19		The registry of the identity management gate shall be persistent.
RQ7.20		This gate shall be provided by all hosts and the host controller.
RQ7.41	Rel-11 upwards	As destination gate, the identity management gate in the host controller shall accept at least one pipe from each host in its WHITELIST.
RQ7.21		If present in the host controller, the host controller shall use a value for VERSION_SW of length 3 bytes.
RQ7.22		If present in the host controller, the host controller shall apply the access condition of RO to VERSION_SW.
RQ7.23		If present in the host controller, the host controller shall use a value for VERSION_HARD of length 3 bytes.
RQ7.24		If present in the host controller, the host controller shall apply the access condition of RO to VERSION_HARD.
RQ7.25		If present in the host controller, the host controller shall use a value for VENDOR_NAME of maximum length 20 bytes with UTF8 coding.
RQ7.26		If present in the host controller, the host controller shall apply the access condition of RO to VENDOR_NAME.
RQ7.27		If present in the host controller, the host controller shall use a value for MODEL_ID of length 1 byte.
RQ7.28		If present in the host controller, the host controller shall apply the access condition of RO to MODEL_ID.
RQ7.29		If present in the host controller, the host controller shall apply the access condition of RO to HCI_VERSION.
RQ7.30		The host controller shall use a value for GATES_LIST containing the list of all gates that accept dynamic pipes as an array of gate identifiers.

RQ7.31		The host controller shall apply the access condition of RO to GATES_LIST.
RQ7.32		A host controller according to the present document shall set the HCI_VERSION parameter if provided to '01'.
RQ7.42	Rel-11 upwards	If present in the host controller, the MAX_CURRENT parameter shall represent the maximum current that it is able to provide to a host during operation as defined for the different contactless mode of operation.
RQ7.43	Rel-11 upwards	If present in the host controller, the host controller shall use a value for MAX_CURRENT of length 1 byte.
RQ7.44	Rel-11 upwards	If present in the host controller, the host controller shall apply the access condition of RO to MAX_CURRENT.
NOTE 1: Development of test cases for RQ4.26, RQ7.41, RQ7.42, RQ7.43 and RQ7.44 is FFS.		
NOTE 2: RQ7.19 is not tested within this clause, as the registry contains no writeable parameters which can be used to test the persistence of the registry.		
NOTE 3: RQ7.20 is also covered in clause 4.3 of ETSI TS 102 622 [1], covered by clause 5.1.3 of the present document. This RQ is therefore not tested within this clause, as it is effectively tested in clause 5.1.3.		
NOTE 4: Test cases for RQ7.21, RQ7.22, RQ7.23, RQ7.24, RQ7.25, RQ7.26, RQ7.27 and RQ7.28 are presented in ETSI TS 102 695-3 [10].		

5.4.2.3.1.2 Test case 1: registry parameters

5.4.2.3.1.2.1 Test execution

The test procedure shall be executed for each of the parameters in the following table.

Registry parameter (designated REG_PARAM)	Presence	Expected value (designated VALUE)	RQ to be checked in steps 2 and 6	RQ to be checked in step 4
HCI_VERSION	O	V_HCI_VERSION	RQ7.32	RQ7.29
GATES_LIST	M	V_GATES_LIST	RQ7.30	RQ7.31

5.4.2.3.1.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- A pipe (PIPE_ID_MAN) has been created to the host controller's identity management gate, and is open.

5.4.2.3.1.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER(REG_PARAM) on PIPE_ID_MAN.	
2	HCUT → HS	If REG_PARAM is supported by the device under test as indicated in table 4.3, send ANY_OK with parameter value equal to VALUE. If REG_PARAM is not supported by the device under test as indicated in table 4.3, send response containing an allowed error response code for the command.	See test execution clause

5.4.2.3.2 Remote registry

5.4.2.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 7.1.3.

NOTE: This clause covers the conformance requirements contained within ETSI TS 102 622 [1], clause 7.1.3 for the remote registry. The requirements for the local registry are contained in clause 5.4.2.3.1.

RQ7.33	The host controller shall adhere to the access condition of RO for VERSION_SW in the host.
RQ7.34	The host controller shall adhere to the access condition of RO for VERSION_HARD in the host.
RQ7.35	The host controller shall adhere to the access condition of RO for VENDOR_NAME in the host.
RQ7.36	The host controller shall adhere to the access condition of RO for MODEL_ID in the host.
RQ7.37	The host controller shall adhere to the access condition of RO for HCI_VERSION in the host.
RQ7.38	The host controller shall adhere to the access condition of RO for GATES_LIST in the host.
RQ7.39	The host controller shall manage backward compatibility with previous HCI versions and use only commands and parameters defined in the specification having the lower HCI version number between of the 2 hosts involved in a transaction.
RQ7.40	A host controller connected to a host with higher HCI version number shall operate according to its own version.
NOTE 1:	RQ7.33, RQ7.34, RQ7.35, RQ7.36, RQ7.37 and RQ7.38 are not tested, as they are non-occurrence RQs.
NOTE 2:	In the current version of the present document, there are no previous HCI versions. RQ7.39 is therefore not tested in the current version of the present document.
NOTE 3:	Development of test cases for RQ7.40 is FFS.

5.4.2.4 Loop back gate

5.4.2.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 7.1.4 and 4.5.

RQ4.26		Registry parameters which are in the range of '00' to 'EF' but which are not allocated in ETSI TS 102 622 [1] shall not be present in the registry.
RQ4.27	Rel-11 upwards	As destination gate, the loop back gate in the host controller shall accept at least one pipe from each host in its WHITELIST.
NOTE:	Development of test cases for RQ4.26 and RQ4.27 is FFS.	

5.4.3 Generic gates

Reference: ETSI TS 102 622 [1], clause 7.2.

There are no conformance requirements for the terminal for the referenced clause.

5.5 HCI procedures

5.5.1 Pipe management

5.5.1.1 Pipe creation

5.5.1.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 8.1.1, 5.1,6.1.3.1 and 6.1.3.2.

These conformance requirements shall be interpreted in the context of the SDL diagram in clause A.2.

RQ6.22	When the host controller receives an ADM_CREATE_PIPE command, it shall use the WHITELIST defined by the destination host in order to verify that the source host is authorized to create a pipe.
RQ8.1	The host controller shall verify that the destination host's administration gate WHITELIST contains the host identifier of the source host. If the host identifier of the source host is not part of the WHITELIST of the destination host, the host controller shall send ANY_E_PIPE_ACCESS_DENIED response to the source host and stop any further processing of this command.
RQ8.2	If the source host's host identifier is part of the WHITELIST of the destination host, the host controller shall continue with the procedure.

RQ8.3	The host controller assigns an unused pipe identifier.
RQ8.4	The host controller notifies the destination host that the source host requested the creation of PIPE _x .
RQ6.24	When the host controller sends an ADM_NOTIFY_PIPE_CREATED command, the command parameters shall be 5 bytes long.
RQ6.25	When the host controller sends an ADM_NOTIFY_PIPE_CREATED command as a result of an ADM_CREATE_PIPE command being received from a host, the source H _{ID} in the command parameters shall be the H _{ID} of that host.
RQ6.23	When the pipe was successfully created, the host controller shall send the response ANY_OK in response to the ADM_CREATE_PIPE command, with parameters as specified in ETSI TS 102 622 [1].
RQ8.5	The host controller responds to ADM_CREATE_PIPE that PIPE _x has been created.
RQ8.6	When the host controller wants to create a pipe then the pipe identifier is assigned and only steps 2 and 3 in figure 6 of ETSI TS 102 622 [1] are needed.
RQ8.7	When a pipe is created towards the host controller then only steps 1 and 4 in figure 6 of ETSI TS 102 622 [1] are needed.
RQ8.8	If the host controller does not accept the creation of the pipe, it shall respond to ADM_CREATE_PIPE with an appropriate response code.
NOTE 1: RQ6.22 is contained with RQ8.1 and RQ8.3; it is therefore not explicitly tested within this clause.	
NOTE 2: RQ8.4 and RQ6.25 are not currently tested, as they require access to the interfaces between two hosts and the host controller.	
NOTE 3: RQ8.5 is a duplicate of RQ6.23; it is therefore not explicitly tested within this clause.	
NOTE 5: Test cases for RQ8.1, RQ8.2, RQ8.3, RQ8.6, RQ8.7, RQ8.8, RQ6.24 and RQ6.23 is presented in ETSI TS 102 695-3 [10].	

5.5.1.2 Pipe deletion

5.5.1.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 8.1.2, 6.1.3.3 and 6.1.3.4.

RQ8.9	After receiving a valid ADM_DELETE_PIPE command from a host, the host controller notifies the destination host (with an ADM_NOTIFY_PIPE_DELETED command).
RQ6.28	When the host controller sends an ADM_NOTIFY_PIPE_DELETED command, the command parameters shall be 1 byte long.
RQ6.26	The host that requested the deletion of the pipe can only be the source host or destination host.
RQ6.27	When the pipe is successfully deleted, the host controller shall send the response ANY_OK without parameters.
RQ8.10	When PIPE _x connects to a gate at the host controller and the connecting host requests the deletion, then only steps 1 and 4 in figure 8 of ETSI TS 102 622 [1] are needed.
RQ8.11	When PIPE _x connects to a gate at the host controller and the host controller requests the deletion, then only steps 2 and 3 in figure 8 of ETSI TS 102 622 [1] are needed.
NOTE 1: Further test cases for RQ6.26 are presented in ETSI TS 102 695-3 [10].	
NOTE 2: Development of test cases for RQ8.9, RQ8.10, RQ8.11 and RQ6.28 is FFS.	

5.5.1.2.2 Test case 1: valid pipe deletion from host to host controller

5.5.1.2.2.1 Test execution

There are no test case-specific parameters for this test case.

5.5.1.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.
- A dynamic pipe (PIPE_X) has been created from a gate on the host simulator to a gate on the host controller, and is currently open.

5.5.1.2.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_DELETE_PIPE(PIPE_X) on PIPE1.	
2	HCUT → HS	Send ANY_OK with no parameters.	RQ6.27, RQ6.26

5.5.1.3 Clear all Pipes

5.5.1.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 8.1.3, 6.1.3.5 and 6.1.3.6.

RQ6.29	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command and the data link layer specified in ETSI TS 102 613 [2] is used, it shall interpret the two bytes in the command parameters as the identity reference data, and shall use the identity reference data to initialize the reference data used by the host controller to check the UICC host identity.
RQ6.30	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command, it shall delete all the dynamic pipes connected to the requesting host, close all static pipes connected to the requesting host and set all registry values related to static pipes connected to the requesting host to their default values.
RQ6.31	When ADM_CLEAR_ALL_PIPE is successful the host controller shall respond with an ANY_OK without parameters.
RQ6.32	When the host controller receives a valid ADM_CLEAR_ALL_PIPE command from a requesting host, it shall send ADM_NOTIFY_ALL_PIPE_CLEARED to every host with at least one pipe to the requesting host.
RQ6.33	When the host controller sends an ADM_NOTIFY_ALL_PIPE_CLEARED command with the host controller as the requesting host, it shall delete all dynamic pipes between the host controller and the host and shall close all static pipes between the host and the host controller.
RQ6.34	When the host controller sends an ADM_NOTIFY_ALL_PIPE_CLEARED command, the command parameters shall be one byte long and shall contain the H _{ID} of the requesting host.

5.5.1.3.2 Test case 1: identity reference data when ETSI TS 102 613 is used

5.5.1.3.2.1 Test execution

There are no test case-specific parameters for this test case.

5.5.1.3.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- SYNC ID needs to match.

5.5.1.3.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE with value IDENTITY_REFERENCE_DATA.	
2	HCUT → HS	Send ANY_OK.	RQ6.29
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07 08') on PIPE1.	
6	HCUT → HS	Send ANY_OK.	
7	User → HCUT	Trigger the host controller to deactivate the SWP interface and then reactivate the SWP interface.	
8	HCUT → HS	Deactivate the SWP interface.	
9	HCUT → HS	Activate the SWP interface.	
10	HS ↔ HCUT	Perform SWP interface activation using IDENTITY_REFERENCE_DATA as SYNC_ID, and SHDLC link establishment.	
11	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
12	HCUT → HS	Send ANY_OK.	RQ6.29

5.5.1.3.3 Test case 2: reception of ADM_CLEAR_ALL_PIPE - static pipes, dynamic pipes to host

5.5.1.3.3.1 Test execution

There are no test case-specific parameters for this test case.

5.5.1.3.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is open.
- A pipe (PIPE_LOOP_BACK) has been created to the host controller's loop back gate.

5.5.1.3.3.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ADM_CLEAR_ALL_PIPE.	
2	HCUT → HS	Send ANY_OK.	RQ6.31
3	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination GID = GID of identity management gate.	
4	HCUT → HS	Send response. If the host controller has sent ANY_OPEN_PIPE on PIPE1 since step 2, do not check the content of the response. Otherwise, check that the response contains an allowed error response code for the command.	
5	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
6	HCUT → HS	Send response. If the host controller has sent ANY_OPEN_PIPE on PIPE1 since step 2, do not check the content of the response. Otherwise, check that the response is ANY_OK.	RQ6.30
7	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_LOOP_BACK.	
8	HCUT → HS	Send no response (see note) or send response containing an allowed error response code for the command.	RQ6.30
NOTE: If the terminal deactivates the underlying data link layer, this shall be treated as if no response has been sent.			

5.5.2 Registry access

Reference: ETSI TS 102 622 [1], clause 8.2.

There are no new conformance requirements for the terminal for the referenced clause.

5.5.3 Host and Gate discovery

Reference: ETSI TS 102 622 [1], clause 8.3.

There are no conformance requirements for the terminal for the referenced clause.

5.5.4 Session initialization

5.5.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 6.2 and 8.4.

RQ8.12	8.4	In case the lower layer identity check fails, the host controller shall execute only the following commands: ANY_OPEN_PIPE, ADM_CLEAR_ALL_PIPE, ANY_GET_PARAMETER, and only if these are sent on PIPE1.
RQ8.13	8.4	In case the lower layer identity check fails, the host controller shall return ANY_E_INHIBITED to all commands, except for ANY_OPEN_PIPE, ADM_CLEAR_ALL_PIPE, ANY_GET_PARAMETER on PIPE1.
RQ8.14	8.4	In case the lower layer identity check fails, the host controller shall ignore all events on all pipes.

RQ8.15	8.4	In case the lower layer identity check fails, the host controller shall return the default value of the SESSION_IDENTITY. However the value of the SESSION_IDENTITY in the registry remains unchanged.
RQ8.16	8.4	The inhibited state shall be terminated after processing a valid ADM_CLEAR_ALL_PIPE command.
RQ8.17	8.4	In case the lower layer identity check passes, the host controller shall not enter the inhibited state.
RQ6.35	6.2	A response shall be sent to all commands received even to those unknown to the receiving gate.
RQ6.37	6.2	For a received command which is defined in table 16 in ETSI TS 102 622 [1], the host controller shall only return a response code which is specified for that command in table 16 in ETSI TS 102 622 [1].

5.5.4.2 Test case 1: inhibited state

5.5.4.2.1 Test execution

There are no test case-specific parameters for this test case.

5.5.4.2.2 Initial conditions

- The last value of SESSION_IDENTITY in the host controller's registry is not 'FFFFFFFFFFFFFFFF'.
- A pipe (PIPE_ID_MAN) has previously been created to the host controller's identity management gate.
- The host simulator is currently powered down.
- PIPE1 needs to be open.

5.5.4.2.3 Test procedure

Step	Direction	Description	RQ
1	HS	Change the host configuration such that the lower layer identity check mechanism will fail.	
2	User → HCUT	Trigger the host controller to power up and to activate the lower layer.	
3	HCUT → HS	Power up and activate the lower layer.	
4	HS → HCUT	Send ANY_OPEN_PIPE on PIPE0.	
5	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
6	HS → HCUT	Send ANY_GET_PARAMETER(REC_ERROR) on PIPE0.	
7	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
8	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID_MAN.	
9	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
10	HS → HCUT	Send ANY_GET_PARAMETER(GATES_LIST) on PIPE_ID_MAN.	
11	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
12	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
13	HCUT → HS	Send response (contents are not checked).	RQ8.12
14	HS → HCUT	Send ANY_GET_PARAMETER(SESSION_IDENTITY) on PIPE1.	
15	HCUT → HS	Send ANY_OK with parameter value 'FF FF FF FF FF FF FF FF'.	RQ8.15
16	HS → HCUT	Send ADM_CREATE_PIPE with source G _{ID} = 'EE' and destination G _{ID} = G _{ID} of identity management gate.	
17	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
18	HS → HCUT	Send ANY_CLOSE_PIPE on PIPE1.	
19	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
20	HS → HCUT	Send ADM_DELETE_PIPE(PIPE_ID_MAN) on PIPE1.	
21	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
22	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1.	
23	HCUT → HS	Send ANY_OK.	
24	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
25	HCUT → HS	Send ANY_OK.	
26	HS → HCUT	Send ANY_OPEN_PIPE on PIPE0.	
27	HCUT → HS	Send ANY_OK.	RQ8.16
28	HS → HCUT	Send ADM_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07 08') on PIPE1.	

Step	Direction	Description	RQ
29	HCUT → HS	Send ANY_OK.	RQ8.16
NOTE: After step 3 if the host controller sends comments the host simulator shall respond according to its initial state.			

5.5.4.3 Test case 2: inhibited state, followed by subsequent successful identity check

5.5.4.3.1 Test execution

There are no test case-specific parameters for this test case.

5.5.4.3.2 Initial conditions

- The last value of SESSION_IDENTITY in the host controller's registry is not 'FFFFFFFFFFFFFFFF'.
- A pipe (PIPE_LOOP_BACK) has previously been created to the host controller's loop back gate.
- The host simulator is currently powered down.

5.5.4.3.3 Test procedure

Step	Direction	Description	RQ
1	HS	Change the host configuration such that the lower layer identity check mechanism will fail.	
2	User → HCUT	Trigger the host controller to power up and to activate the lower layer.	
3	HCUT → HS	Power up and activate the lower layer (see note 1).	
4	HS → HCUT	Send ANY_OPEN_PIPE on PIPE0.	
5	HCUT → HS	Send ANY_E_INHIBITED.	
6	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_LOOP_BACK.	
7	HCUT → HS	Send ANY_E_INHIBITED.	RQ8.13
8	HS → HCUT	Send EVT_POST_DATA containing '01 02 03 04' on PIPE_LOOP_BACK.	
9	HCUT → HS	No messages on PIPE_LOOP_BACK (see note 2).	RQ8.14
10	User → HCUT	Trigger the host simulator to be powered down.	
11	HCUT → HS	Power down the host simulator.	
12	HS	Change the host configuration such that the lower layer identity check mechanism will pass.	
13	User → HCUT	Trigger the host simulator to be powered up.	
14	HCUT → HS	Power up the host simulator.	
15	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
16	HCUT → HS	Send response (contents are not checked).	
17	HS → HCUT	Send ANY_GET_PARAMETER(SESSION_IDENTITY) on PIPE1.	
18	HCUT → HS	Send ANY_OK with parameter value containing the same value as previously set (see initial conditions).	RQ8.15
19	HS → HCUT	Send ADM_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07 08') on PIPE1.	
20	HCUT → HS	Send ANY_OK.	RQ8.17
NOTE 1: After step 3 if the host controller sends comments the host simulator shall respond according to its initial state.			
NOTE 2: If the terminal deactivates the underlying data link layer, this shall be treated as if no message has been sent.			

5.5.4.4 Test case 3: initialization using all defined gates

5.5.4.4.1 Test execution

There are no test case-specific parameters for this test case.

5.5.4.4.2 Initial conditions

- The host controller is powered down.

5.5.4.4.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	Trigger the host controller to power up and to activate the lower layer.	
2		Power up and activate the lower layer (see note).	
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
4	HCUT → HS	Send response (contents are not checked).	
5	HS → HCUT	Send ANY_GET_PARAMETER(SESSION_IDENTITY) on PIPE1.	
6	HCUT → HS	Send ANY_OK with parameter value.	
7	HS → HCUT	Send ADM_CLEAR_ALL_PIPE on PIPE1 with appropriate parameter as required by the lower layer.	
8	HCUT → HS	Send ANY_OK.	
9	HS → HCUT	Send ANY_OPEN_PIPE on PIPE1.	
10	HCUT → HS	Send ANY_OK (parameters are not checked).	
11	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source and destination G _{ID} = G _{ID} of the identity management gate.	
12	HCUT → HS	Send ANY_OK. Designate the created pipe PIPE_ID.	RQ6.35 RQ6.37
13	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_ID.	
14	HCUT → HS	Send ANY_OK.	RQ6.35 RQ6.37
15	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = 'EE' and destination G _{ID} = G _{ID} of the loop back gate.	
16	HCUT → HS	Send ANY_OK. Designate the created pipe PIPE_LOOP_BACK.	RQ6.35 RQ6.37
17	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_LOOP_BACK.	
18	HCUT → HS	Send ANY_OK.	RQ6.35 RQ6.37
19	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '23' and destination G _{ID} = G _{ID} of type A card RF gate.	
20	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_CARD_A and proceed to step 21. If an allowed error response code for the command is received, skip to step 25. If any other response is received, this is a fail of the terminal. Skip to step 25.	RQ6.35 RQ6.37
21	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_CARD_A.	
22	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, proceed to step 23. If an allowed error response code for the command is received, skip to step 25. If any other response is received, this is a fail of the terminal. Skip to step 25.	RQ6.35 RQ6.37
23	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPE_CARD_A.	
24	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
25	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '21' and destination G _{ID} = G _{ID} of type B card RF gate.	

Step	Direction	Description	RQ
26	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_CARD_B and proceed to step 27. If an allowed error response code for the command is received, skip to step 31. If any other response is received, this is a fail of the terminal. Skip to step 31.	RQ6.35 RQ6.37
27	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_CARD_B.	
28	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, proceed to step 29. If an allowed error response code for the command is received, skip to step 31. If any other response is received, this is a fail of the terminal. Skip to step 31.	RQ6.35 RQ6.37
29	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPE_CARD_B.	
30	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
31	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '22' and destination G _{ID} = G _{ID} of type B' card RF gate.	
32	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_CARD_BP and proceed to step 33. If an allowed error response code for the command is received, skip to step 37. If any other response is received, this is a fail of the terminal. Skip to step 37.	RQ6.35 RQ6.37
33	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_CARD_BP.	
34	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, proceed to step 35. If an allowed error response code for the command is received, skip to step 37. If any other response is received, this is a fail of the terminal. Skip to step 37.	RQ6.35 RQ6.37
35	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPE_CARD_BP.	
36	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
37	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '24' and destination G _{ID} = G _{ID} of type F card RF gate.	
38	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_CARD_F and proceed to step 39. If an allowed error response code for the command is received, skip to step 43. If any other response is received, this is a fail of the terminal. Skip to step 43.	RQ6.35 RQ6.37
39	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_CARD_F.	
40	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, proceed to step 41. If an allowed error response code for the command is received, skip to step 43. If any other response is received, this is a fail of the terminal. Skip to step 43.	RQ6.35 RQ6.37

Step	Direction	Description	RQ
41	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPE_CARD_F.	
42	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
43	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '13' and destination G _{ID} = G _{ID} of type A reader RF gate.	
44	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_READER_A and proceed to step 45. If an allowed error response code for the command is received, skip to step 47. If any other response is received, this is a fail of the terminal. Skip to step 47.	RQ6.35 RQ6.37
45	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_READER_A.	
46	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
47	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '11' and destination G _{ID} = G _{ID} of type B reader RF gate.	
48	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_READER_B and proceed to step 49. If an allowed error response code for the command is received, skip to step 51. If any other response is received, this is a fail of the terminal. Skip to step 51.	RQ6.35 RQ6.37
49	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_READER_B.	
50	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
51	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '41', destination host = '01' and destination G _{ID} = G _{ID} of connectivitygate.	
52	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If ANY_OK is received, then designate the created pipe PIPE_CONN and proceed to step 53. If an allowed error response code for the command is received, skip to step 55. If any other response is received, this is a fail of the terminal. Skip to step 55.	RQ6.35 RQ6.37
53	HS → HCUT	Send ANY_OPEN_PIPE on PIPE_CONN.	
54	HCUT → HS	Send response. If no response is received, this is a fail of the terminal. Terminate the test procedure. If a response other than ANY_OK or an allowed error response code for the command is received, this is a fail of the terminal.	RQ6.35 RQ6.37
55	HS → HCUT	Send ADM_SET_PARAMETER(SESSION_IDENTITY, '01 02 03 04 05 06 07 08') on PIPE1.	
56	HCUT → HS	Send ANY_OK.	RQ6.35 RQ6.37
NOTE: After step 2 if the host controller sends commands the host simulator shall respond according to its initial state.			

5.5.5 Loop back testing

5.5.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 8.5.

RQ8.18	The host controller shall accept the creation of a pipe to its loop back gate from any gate in another host.
RQ8.19	When the host controller receives the event EVT_POST_DATA on a pipe connected to its loop back gate, it shall send back the event EVT_POST_DATA with same data as received in the received EVT_POST_DATA.
RQ8.20	The loopback gate shall support at least all messages with size up to 250 bytes.

5.5.5.2 Test case 1: processing of EVT_POST_DATA

5.5.5.2.1 Test execution

The test procedure shall be executed once for each of following parameters:

- EVT_POST_DATA data sizes of: 250 bytes.

5.5.5.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- A pipe (PIPE_LOOP_BACK) has been created to the host controller's loop back gate using source G_{ID}: "11", and is open.

5.5.5.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send EVT_POST_DATA on PIPE_LOOP_BACK containing data of the specified size.	
2	HCUT → HS	Send EVT_POST_DATA on PIPE_LOOP_BACK containing the same data as in step 1.	RQ8.19, RQ8.20

5.6 Contactless card emulation

5.6.1 Overview

5.6.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.1.

RQ9.1		The CLF shall handle the RF communication layers to the external contactless reader.
RQ9.2		The host controller has one card RF gate for each RF technology it supports.
RQ9.3		For the contactless platform for card emulation mode the pipes to card RF gates shall be created, opened, closed and deleted by the host.
RQ9.4		The RF technology of a card RF gate is active when there is an open pipe connected to it.
RQ9.5		The host controller shall activate one or more RF technologies as requested by the host to the external reader.
RQ9.114	Rel-11 upwards	If MAX_CURRENT present in the host controller, the host is allowed to consume a current up to the maximum defined by the host controller in its identity management gate registry between the appearance and the disappearance of the RF unless restricted by the underlying layers e.g. ETSI TS 102 613 [2] where the restrictions for low-power mode and power saving mode still apply
NOTE:	Development of test cases for RQ9.3 and RQ9.114 is FFS.	

5.6.1.2 Test case 1: RF gate of type A

5.6.1.2.1 Test execution

There is no test case specific parameters for this test case.

5.6.1.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.1.2.3 Test procedure

Step	Direction	Description	RQ
0	User	Enable the RF technology Type A in the terminal for the UICC prior to executing step 9.	
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '23' and destination G _{ID} = G _{ID} of type A card RF gate; designate the created pipe PIPEa.	
2	HCUT → HS	Send ANY_OK.	RQ9.2
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPEa.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_SET_PARAMETER (ATQA, '0100') on PIPEa.	
6	HCUT → HS	Send ANY_OK.	
7	HS → HCUT	Send ANY_GET_PARAMETER (MODE) on PIPEa.	
8	HCUT → HS	Send ANY_OK with a parameter value of 'FF'.	
9	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPEa.	
10	HCUT → HS	Send ANY_OK.	
11	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
12	User	Power on the PCD.	
13	PCD → HCUT HCUT → PCD	Perform anti-collision as described in ISO/IEC 14443-3 [6] Type A. Check only bit b3 in the SAK.	RQ9.1, RQ9.4, RQ9.5

5.6.1.3 Test case 2: RF gate of type B

5.6.1.3.1 Test execution

There is no test case specific parameters for this test case.

5.6.1.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.1.3.3 Test procedure

Step	Direction	Description	RQ
0	User	Enable the RF technology Type A in the terminal for the UICC prior to executing step 9.	
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '21' and destination G _{ID} = G _{ID} of type B card RF gate; designate the created pipe PIPEa.	
2	HCUT → HS	Send ANY_OK.	RQ9.2
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPEa.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_GET_PARAMETER (MODE) on PIPEa.	
6	HCUT → HS	Send ANY_OK with a parameter value of 'FF'.	
7	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPEa.	
8	HCUT → HS	Send ANY_OK.	
9	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
10	User	Power on the PCD.	

Step	Direction	Description	RQ
11	PCD → HCUT HCUT → PCD	Perform anti-collision as described in ISO/IEC 14443-3 [6] Type B.	RQ9.1, RQ9.4, RQ9.5

5.6.1.4 Test case 3: RF gate of type F

5.6.1.4.1 Test execution

There is no test case specific parameters for this test case.

5.6.1.4.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- PIPE1 is currently open.
- The HCUT is configured to forward incoming POLLING REQUEST commands to the HS for processing, using SWP as defined in ETSI TS 102 613 [2] as a data link layer.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.1.4.3 Test procedure

Step	Direction	Description	RQ
0	User	Enable the RF technology Type F in the terminal for the UICC prior to executing step 7.	
1	HS → HCUT	Send ADM_CREATE_PIPE on PIPE1, with source G _{ID} = '24' and destination G _{ID} = G _{ID} of type F card RF gate; designate the created pipe PIPEa.	
2	HCUT → HS	Send ANY_OK.	RQ9.2
3	HS → HCUT	Send ANY_OPEN_PIPE on PIPEa.	
4	HCUT → HS	Send ANY_OK.	
5	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPEa.	
6	HCUT → HS	Send ANY_OK.	
7	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
8	User	Power on the PCD.	
9	PCD ↔ HCUT HCUT ↔ HS	Perform initialization of RF ISO/IEC 18092 [4] 212 kbps passive mode: The PCD sends a POLLING REQUEST as defined in ISO/IEC 18092 [4] 212 kbps/424 kbps passive mode, where the Length is set to '06', 1st byte to '00', 2nd and 3 rd bytes to '8EFC', 4 th byte to '00', 5 th byte to '00', and bytes 6 and 7 represent the correct CRC at 212 kbps. The HS provides the necessary response in time to the HCUT for a POLLING RESPONSE in the first time slot according to the initialization procedure as defined in ISO/IEC 18092 [4] for 212 kbps/424 kbps passive mode, where the Length is set to '12', 1st byte to '01', 2 nd to 9 th bytes to '02FE000000000000', 10 th to 17 th bytes to 'FFFFFFFFFFFFFFFF', 18 and 19 bytes represent the correct CRC at 212 kbps.	RQ9.1, RQ9.4, RQ9.5

5.6.2 Void

Reference: ETSI TS 102 622 [1], clause 9.2.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3 Gates

5.6.3.1 Void

Reference: ETSI TS 102 622 [1], clause 9.3.1.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.2 Identity management gate

5.6.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.2.

RQ9.6	If low power mode is supported, the parameter LOW_POWER_SUPPORT of identity management gate shall be '01'.
RQ9.7	If low power mode is not supported, the parameter LOW_POWER_SUPPORT of identity management gate shall be '00'.
RQ9.8	The host controller shall apply the access condition of RO to LOW_POWER_SUPPORT.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.3 Card RF gates

5.6.3.3.1 Overview

Reference: ETSI TS 102 622 [1], clause 9.3.3.1.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.3.2 Commands

5.6.3.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.2.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.3.3 Events and subclauses

5.6.3.3.3.1 Events

5.6.3.3.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.3.

RQ9.10	The Card RF gates shall support the EVT_SEND_DATA event.
NOTE:	RQ9.10 is tested in clause 5.6.4.

5.6.3.3.3.2 EVT_SEND_DATA

Reference: ETSI TS 102 622 [1], clause 9.3.3.3.1.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.3.4 Registry and subclauses

5.6.3.3.4.1 Registry

5.6.3.3.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.4.

RQ9.11	All registries shall be persistent.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.3.4.2 RF technology type A

5.6.3.3.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.4.1.

RQ9.12	The CLF shall only accept values of MODE of 'FF' and '02'.
RQ9.13	The CLF shall set a default value for MODE of 'FF'.
RQ9.14	The CLF shall apply the access condition of RW for MODE.
RQ9.15	The CLF shall use a default value for UID_REG of length zero bytes.
RQ9.16	If Length of UID_REG equals 0 then the CLF generates a single size UID with uid0 = '08' and uid1 to uid3 as random numbers.
RQ9.17	The random numbers shall be generate only on state transitions POWER_OFF to IDLE state (state definitions according to ISO/IEC 14443-3 [6]) The CLF shall interpret the absence of an RF-field as POWER-OFF state.
RQ9.18	If Length equals 4, 7 or 10 then the CLF shall use UID_REG as UID.
RQ9.19	The CLF shall apply the access condition of WO for UID_REG.
RQ9.20	The CLF shall set a default value for SAK registry parameter of '00'.
RQ9.21	The CLF shall apply the access condition of RW for SAK registry parameter.
RQ9.22	The CLF shall set a default value for ATQA of '0000'.
RQ9.23	The CLF shall apply the access condition of RW for ATQA.
RQ9.24	The CLF shall set a default value for APPLICATION_DATA of 'N1=0'.
RQ9.25	The CLF shall apply the access condition of RW for APPLICATION_DATA.
RQ9.26	The CLF shall set a default value for FWI, SFGI of 'EE'.
RQ9.27	The CLF shall apply the access condition of RW for FWI, SFGI.
RQ9.28	If CID_SUPPORT = '01' the CLF shall set CID support in the ATS.
RQ9.29	Void
RQ9.30	The CLF shall set a default value for CID_SUPPORT of '00'.
RQ9.31	The CLF shall apply the access condition of RW for CID_SUPPORT.
RQ9.32	If the CLF contains a tunneling mode capability for type A ISO/IEC 14443-4 [7] non compliant protocol support then the value of CLT_SUPPORT shall be '01'.
RQ9.33	If the CLF does not contain a tunneling mode capability for type A ISO/IEC 14443-4 [7] non compliant protocol support then the value of CLT_SUPPORT shall be '00'.
RQ9.34	The CLF shall apply the access condition of RO to CLT_SUPPORT.
RQ9.35	The host controller shall support DATARATE_MAX which codes maximum divisor supported with coding as defined in ETSI TS 102 622 [1] where: <ul style="list-style-type: none"> Byte 1 defines the maximum divisor supported in direction PCD to PICC. Byte 3 defines the limitation to support different divisors for each direction.
RQ9.36	The CLF shall set a default value for DATARATE_MAX of '030300'.
RQ9.37	The CLF shall apply the access condition of RW for DATARATE_MAX.
RQ9.38	The CLF shall use the minimum of the value indicated in the registry and the maximum divisor implemented in the CLF as the maximum support divisor indicated in TA (1) as defined in ISO/IEC 14443-4 [7].
RQ9.39	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
NOTE 1:	Test cases for RQ9.12, RQ9.13, RQ9.14, RQ9.18, RQ9.19 and RQ9.27 are presented in ETSI TS 102 695-3 [10].
NOTE 2:	Further test cases for RQ9.21, RQ9.23 and RQ9.26 are presented in ETSI TS 102 695-3 [10].
NOTE 3:	Development of test cases for RQ9.30, RQ9.32, RQ9.33, RQ9.34 and RQ9.39 is FFS.

5.6.3.3.4.2.2 Test case 1: UID_REG - default

5.6.3.3.4.2.2.1 Test execution

The test procedure shall be executed once for each of following parameters:

- This test case is assumed that only one HCUT (PICC) is presented in the RF field.

5.6.3.3.4.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.

- The Proximity Coupling Device (PCD) supports ISO/IEC 14443-3 [6] Type A.
- ATQA registry parameter is set to '0100', MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.3.3.4.2.2.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	The terminal is placed in PCD field.	
2	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
3	PCD → HCUT	Send REQA.	
4	HCUT → PCD	Send ATQA and enter the READY state.	
5	PCD → HCUT	Send AC command.	
6	HCUT → PCD	Send the complete UID, with UID0 = '08', UID1-UID3 randomly generated by the CLF.	RQ9.15, RQ9.16, RQ9.17
7	PCD → HCUT	Return to the IDLE state by sending REQA twice.	
8	HCUT → PCD	Send ATQA and enter the READY state.	
9	PCD → HCUT	Send AC command.	
10	HCUT → PCD	Send UID as it given in step 6.	RQ9.16, RQ9.17
11	PCD → HCUT	Send SELECT command with received UID.	
12	HCUT → PCD	Send SAK (UID is complete). Only check bit b3.	
13	PCD → HCUT	Send HLTA command to enter the HALT state.	
14	PCD → HCUT	Send WUPA.	
15	HCUT → PCD	Send ATQA.	
16	PCD → HCUT	Send SELECT command with received UID step 6.	
17	HCUT → PCD	Send SAK (UID is complete). Only check bit b3.	RQ9.16, RQ9.17
18		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 17.	

5.6.3.3.4.2.3 Test case 2: SAK

5.6.3.3.4.2.3.1 Test execution

The test procedure shall be executed once for each of following parameters:

- This test case is assumed that only one HCUT (PICC) is presented in the RF field:
 - Single UID of length 4.

5.6.3.3.4.2.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type A protocol is powered off.
- MODE is set to 'FF'.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.3.3.4.2.3.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER (ATQA) on PIPEa.	
2	HCUT → HS	Send ANY_OK with value '0000'.	RQ9.22, RQ9.23
3	HS → HCUT	Send ANY_SET_PARAMETER (ATQA, '0100') on PIPEa.	
4	HCUT → HS	Send ANY_OK.	RQ9.23
5	HS → HCUT	Send ANY_GET_PARAMETER (SAK) on PIPEa.	
6	HCUT → HS	Send ANY_OK with parameter '00'.	RQ9.20, RQ9.21
7	HS → HCUT	Send ANY_SET_PARAMETER (MODE, '02') on PIPEa.	
8	HCUT → HS	Send ANY_OK.	
9	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
10	User → HCUT	The terminal is placed in PCD field.	
11	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
12	PCD → HCUT	Send REQA.	
13	HCUT → PCD	Send ATQA and enter READY state.	
14	PCD → HCUT	Send AC command.	
15	HCUT → PCD	Send UID.	
16	PCD → HCUT	Send SELECT command with received UID.	
17	HCUT → PCD	Send SAK (UID is complete). Only check bit b3.	RQ9.21
18		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 9 to 16.	

5.6.3.3.4.2.4 Test case 3: ATS - default parameters

5.6.3.3.4.2.4.1 Test execution

The test procedure shall be executed once for each of following parameters:

- ATS with default value for all parameters.

5.6.3.3.4.2.4.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- SAK registry parameter is set to '20', ATQA registry parameter is set to '0100', MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.3.3.4.2.4.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	The terminal is placed in PCD field.	
2	PCD ← → HCUT	Ensure that ISO/IEC 14443-3 [6] Type A is in ACTIVE state. Only bits b3 and b6 in the SAK sent on RF shall be used to check that the ACTIVE state has been reached.	
3	PCD → HCUT	Send RATS.	
4	HCUT → PCD	Send ATS. Only TB(1) and Historical Bytes are checked.	RQ9.24, RQ9.26
5		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 4.	

5.6.3.3.4.2.5 Test case 4: APPLICATION_DATA

5.6.3.3.4.2.5.1 Test execution

Run this TC for the following parameters:

- CIDa = 01.
- ISO/IEC 7816-4 [8] historical bytes (T1 - Tk) is defined as:
 - Category indicator: '80'.
 - Card service data: '31', 'E0'.
 - Card capabilities: '73', '66', '21', '15'.

5.6.3.3.4.2.5.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- MODE is set to 'FF' and SAK registry parameter is set to '20' and ATQA registry parameter is set to '0100'.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.3.3.4.2.5.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_SET_PARAMETER (CID_SUPPORT, 'CID') on PIPEa	
2	HCUT → HS	Send ANY_OK	RQ9.31
3	HS → HCUT	Send ANY_GET_PARAMETER (CID_SUPPORT) on PIPEa	
4	HCUT → HS	Send ANY_OK with value given in step 1	RQ9.31
5	HS → HCUT	Send ANY_SET_PARAMETER (APPLICATION_DATA, T1-Tk) on PIPEa	
6	HCUT → HS	Send ANY_OK	RQ9.25
7	HS → HCUT	Send ANY_GET_PARAMETER (APPLICATION_DATA) on PIPEa	
8	HCUT → HS	Send ANY_OK with value (T1-Tk) given in step 1	RQ9.25
9	HS → HCUT HCUT → HS	Set the MODE parameter to '02'	
10	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
11	User → HCUT	The terminal is placed in PCD field.	
12	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3 and b6 in the SAK sent on RF	
13	PCD → HCUT	Send RATS	
14	HCUT → PCD	Send ATS with historical bytes (APPLICATION_DATA) equal to T1-Tk	RQ9.25 RQ9.28
15		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 10 to 13.	

5.6.3.3.4.2.6 Test case 5: DATARATE_MAX

5.6.3.3.4.2.6.1 Test execution

The test procedure shall be executed once for each of following parameters:

- DATARATE_MAX = '000001'. In this case, in step 8, the terminal may transmit TA(1) in the ATS. If present, TA(1) shall be: TA(1) = x0000000b.
- DATARATE_MAX = '030300'. In this case, the table below gives the TA(1) byte the terminal shall transmit in the ATS in step 8, depending on its capabilities (as documented in V_DRATE_MAX_CEA).

V_DRATE_MAX_CEA (kb/s)	TA(1) (Binary format)
106	Optional, if present: x0000000b
212	x0010001b
424	x01x001xb
848	x1xx01xxb

5.6.3.3.4.2.6.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- MODE is set to 'FF' and SAK registry parameter is set to '20' and ATQA registry parameter is set to '0100'.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.3.3.4.2.6.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER (DATARATE_MAX) on PIPEa.	
2	HCUT → HS	Send ANY_OK with default value.	RQ9.35, RQ9.36, RQ9.37
3	HS → HCUT	Send ANY_SET_PARAMETER (DATARATE_MAX, 'Byte1 Byte2 Byte3') on PIPEa.	
4	HCUT → HS	Send ANY_OK.	RQ9.35, RQ9.37
5	HS → HCUT HCUT → HS	Set the MODE parameter to '02'.	
6	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
7	User → HCUT	The terminal is placed in PCD field.	
8	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3 and b6 in the SAK sent on RF.	
9	PCD → HCUT	Send RATS.	
10	HCUT → PCD	Send ATS with TA(1) value as given in test execution clause.	RQ9.38
11		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 6 to 9.	

5.6.3.3.4.3 RF technology type B

5.6.3.3.4.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.4.2.

RQ9.40	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ9.41	The CLF shall only accept values of MODE of 'FF' and '02'.
RQ9.42	The CLF shall set a default value for MODE of 'FF'.
RQ9.43	The CLF shall apply the access condition of RW for MODE.
RQ9.44	The CLF shall only accept values of PUPI of length 0 or 4 bytes.
RQ9.45	If N=0 then the CLF shall generate the PUPI as dynamically generated number.
RQ9.46	The PUPI shall only be generated by a state transition from the POWER-OFF to the IDLE state(state definitions according to ISO/IEC 14443-3 [6]).
RQ9.47	The CLF shall interpret the absence of an RF-field as POWER-OFF state.
RQ9.48	If N is not equal to 0, the CLF shall use the PUPI_REG as PUPI.
RQ9.49	The CLF shall apply the access condition of WO for PUPI_REG.
RQ9.50	The CLF shall use the AFI registry parameter as AFI according to ISO/IEC 14443-3 [6].
RQ9.51	The CLF shall set a default value for AFI of '00'.
RQ9.52	The CLF shall apply the access condition of RW to AFI.
RQ9.53	The CLF shall set a default value for ATQB of '00 00 00 E4'.
RQ9.54	The CLF shall only accept values of ATQB of length 4 bytes.
RQ9.55	The CLF shall set additional data for ATQB as defined in the registry Table 31 of ETSI TS 102 622 [1].
RQ9.56	The CLF shall apply the access condition of RW to ATQB.
RQ9.57	The CLF shall set higher layer response in answer to ATTRIB command as defined registry.
RQ9.58	The CLF shall set a default value for HIGHER_LAYER_RESPONSE of 'N2=0'.
RQ9.59	The CLF shall apply the access condition of RW for HIGHER_LAYER_RESPONSE.
RQ9.60	The host controller shall support DATARATE_MAX which codes maximum bit rates supported with coding as defined in ETSI TS 102 622 [1] where: <ul style="list-style-type: none"> • Byte 1 defines the maximum bit rates supported in direction PCD to PICC. • Byte 3 defines the limitation of having the bit rate in both direction.
RQ9.61	The CLF shall set a default value for DATARATE_MAX of '030300'.
RQ9.62	The CLF shall apply the access condition of RW for DATARATE_MAX.
RQ9.63	The CLF shall set a default value for ATQB of length 0.
RQ9.64	The CLF shall use the minimum of the value indicated in the registry and the maximum bit rate supported implemented in the CLF as the maximum bit rate indicated in the first byte of the protocol information as defined in ISO/IEC 14443-3 [6].
NOTE 1: Development of test cases for RQ9.40 and RQ9.64 is FFS.	
NOTE 2: Test cases for RQ9.41, RQ9.42 and RQ9.43 are presented in ETSI TS 102 695-3 [10].	

5.6.3.3.4.3.2 Test case 1: PUPI_REG - default

5.6.3.3.4.3.2.1 Test execution

The test procedure shall be executed once for each of following parameters:

- default PUPI_REG parameter.
- REQB with AFI = 00 and PARAM = 00, so all PICCs shall process this REQB/WUPB.

5.6.3.3.4.3.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type B is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type B protocol is powered off.
- MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.3.3.4.3.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER (PUPI_REG) on PIPEa.	
2	HCUT → HS	Send response containing an allowed error response code for the command.	RQ9.49
3	User → PCD	The terminal is placed in PCD field.	
4	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
5	PCD → HCUT	Send REQb.	
6	HCUT → PCD	Send ATQB with PUPI dynamically generated number.	RQ9.45, RQ9.46, RQ9.47
7	PCD → HCUT	Return to the IDLE state by sending REQb.	
8	HCUT → PCD	Send ATQB with PUPI value given in step 6.	RQ9.46
9	PCD → HCUT	Send ATTRIB request with a non-matching PUPI with the one given in step 8.	
10	HCUT → PCD	Send no response.	
11	PCD → HCUT	Send HLTb to enter the HALT state.	
12	HCUT → PCD	Answer to HLTb.	
13	PCD → HCUT	Send WUPb.	
14	HCUT → PCD	Send ATQB with PUPI value given in step 6.	RQ9.46, RQ9.47
15		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 3 to 14.	

5.6.3.3.4.3.3 Test case 2: ATQB - verify the different parameter

5.6.3.3.4.3.3.1 Test execution

The test procedure shall be executed once for each of following parameters:

- PUPIa = '01 02 03 04', AFIA = '40' and ATQB is coded for the following values:
 - Protocol information is coded PROTO_INFO = '70'.
 - Numbers of Applications byte is coded for, NUMBER_APLI = 0 -15.
- PUPIa = '12 34 56 78', AFIA = '20' and ATQB is coded for the following values:
 - Protocol information is coded PROTO_INFO = '85'.
 - Numbers of Applications byte is coded for, NUMBER_APLI = 0 -15.

5.6.3.3.4.3.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type B is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source GID = '21' to the card RF gate of type B.
- The Proximity Coupling Device (PCD) supports ISO/IEC 14443-3 [6] Type B.
- MODE is set to 'FF'.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.3.3.4.3.3.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER (PUIP_REG) on PIPEa.	
2	HCUT → HS	Send response containing an allowed error response code for the command.	RQ9.49
3	HS → HCUT	Send ANY_SET_PARAMETER (PUIP_REG, 'PUIPa') on PIPEa.	
4	HCUT → HS	Send ANY_OK.	RQ9.44, RQ9.49
5	HS → HCUT	Send ANY_GET_PARAMETER (AFI) on PIPEa.	
6	HCUT → HS	Send ANY_OK with value '00'.	RQ9.51, RQ9.52
7	HS → HCUT	Send ANY_SET_PARAMETER (AFI, 'AFI') on PIPEa.	
8	HCUT → HS	Send ANY_OK.	RQ9.50, RQ9.52
9	HS → HCUT	Send ANY_GET_PARAMETER (ATQB) on PIPEa.	
10	HCUT → HS	Send ANY_OK with value '00 00 00 E4'.	RQ9.53, RQ9.54 RQ9.55, RQ9.56, RQ9.63
11	HS → HCUT	Send ANY_SET_PARAMETER (ATQB, 'PROTO_INFO, NUMBER_APLI') on PIPEa.	
12	HCUT → HS	Send ANY_OK.	RQ9.54 RQ9.55, RQ9.56
13	HS → HCUT	Send ANY_GET_PARAMETER (ATQB) on PIPEa.	
14	HCUT → HS	Send ANY_OK with value 'PROTO_INFO, NUMBER_APLI'.	RQ9.54 RQ9.55, RQ9.56
15	HS → HCUT HCUT → HS	Set the MODE parameter to '02'	
16	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
17	User → HCUT	The terminal is placed in PCD field.	
18	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
19	PCD → HCUT	Send REQB to enter the READY state.	
20	HCUT → PCD	Send ATQB with parameters as defined for: <ul style="list-style-type: none"> • PUIP: 'PUIPa'. • AFI: 'AFI'. • ATQB other parameters with the values 'PROTO_INFO' and 'NUMBER_APLI'. <ul style="list-style-type: none"> ○ If b1 of PROTO_INFO is set to 1b (see Test execution clause), check that b1 of the third byte of the Protocol Info field is set to 1b. ○ If b1 of PROTO_INFO is set to 0b (see Test execution clause), do not check b1 of the third byte of the Protocol Info field. 	RQ9.54, RQ9.55, RQ9.56, RQ9.47, RQ9.48, RQ9.50
21		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 16 to 19.	

5.6.3.3.4.3.4 Test case 3: HIGHER_LAYER_RESPONSE

5.6.3.3.4.3.4.1 Test execution

HIGHER_LAYER is coded for the following value.

HIGHER_LAYER_RESPONSE registry value	Higher layer - INF to be included in ATTRIB command sent by PCD	Expected Higher layer Response to be included in answer to ATTRIB command sent by CLF
'01 02 03 04 05 06 07 08 09 0A'	'11 12 13 14 15'	'01 02 03 04 05 06 07 08 09 0A'

The test procedure shall be executed once for each of following parameters:

- DATARATE_MAXa = '000001'. In this case, the 1st byte of the "protocol info" field in the ATQB answer sent by the terminal in step 13 shall be x0000000b.
- DATARATE_MAXa = '030300'. In this case, the table below gives the content of the 1st byte of the "protocol info" field in the ATQB answer that the terminal shall transmit in step 13, depending on its capabilities (as documented in V_DRATE_MAX_CEB).

V_DRATE_MAX_CEB (kb/s)	1 st Byte of Protocol info (Binary format)
106	x0000000b
212	x0010001b
424	x01x001xb
848	x1xx01xxb

5.6.3.3.4.3.4.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type B is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source GID = '21' to the card RF gate of type B.
- The Proximity Coupling Device (PCD) supports ISO/IEC 14443-3 [6] Type B.
- MODE parameter is set to 'FF'.
- HCI session initialization is ongoing (to be completed during the test procedure).

5.6.3.3.4.3.4.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send ANY_GET_PARAMETER (DATARATE_MAX) on PIPEa.	
2	HCUT → HS	Send ANY_OK with value '030300'.	RQ9.60, RQ9.61, RQ9.62
3	HS → HCUT	Send ANY_SET_PARAMETER (DATARATE_MAX, 'DATARATE_MAXa') on PIPEa.	
4	HCUT → HS	Send ANY_OK.	RQ9.60, RQ9.62
5	HS → HCUT	Send ANY_GET_PARAMETER (HIGHER_LAYER_RESPONSE) on PIPEa.	
6	HCUT → HS	Send ANY_OK with parameter value of length zero.	RQ9.58, RQ9.59
7	HS → HCUT	Send ANY_SET_PARAMETER (HIGHER_LAYER_RESPONSE, 'HIGHER_LAYERa') on PIPEa.	
8	HCUT → HS	Send ANY_OK.	RQ9.58, RQ9.59
9	HS → HCUT	Send ANY_GET_PARAMETER (HIGHER_LAYER_RESPONSE) on PIPEa.	
10	HCUT → HS	Send ANY_OK with value 'HIGHER_LAYERa' as given in step 7.	RQ9.58, RQ9.59
11	HS → HCUT HCUT → HS	Set the MODE parameter to '02'.	
12	HS → HCUT	Set SESSION_IDENTITY to a random value on PIPE1.	
13	User → HCUT	The terminal is placed in PCD field.	
14	PCD → HCUT	Send REQb.	
15	HCUT → PCD	Send ATQB with value of first Byte in "protocol info" field as given in test execution clause. The remaining part of ATQB is not checked.	RQ9.60 RQ9.61
16	PCD → HCUT	Send ATTRIB.	
17	HCUT → PCD	Send Answer to ATTRIB.	RQ9.57, RQ9.60
18		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 12 to 16.	

5.6.3.3.4.4 RF technology type B'

5.6.3.3.4.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.4.3.

NOTE: Defining conformance requirements is out of scope of the present document.

5.6.3.3.4.5 RF technology Type F (ISO/IEC 18092 212 kbps/424 kbps card emulation only)

5.6.3.3.4.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.3.4.4.

RQ9.65	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ9.66	The CLF shall only accept values of MODE of 'FF' and '02'.
RQ9.67	The CLF shall set a default value for MODE of 'FF'.
RQ9.68	The CLF shall apply the access condition of RW for MODE.
RQ9.69	The CLF shall support the capabilities indicated in the SPEED_CAP parameter as specified in ETSI TS 102 622 [1].
RQ9.70	The CLF shall apply the access condition of RO to SPEED_CAP.
RQ9.71	The CLF shall contain a tunneling mode capability for type F card emulation anti-collision support if CLT_SUPPORT='01'.
RQ9.72	The CLF shall not contain a tunneling mode capability for type F card emulation anti-collision support if CLT_SUPPORT='00'.
RQ9.73	The CLF shall apply the access condition of RO to CLT_SUPPORT.
NOTE:	Development of test cases for RQ9.65 is FFS.

5.6.3.4 Card application gates

5.6.3.4.1 Overview

Reference: ETSI TS 102 622 [1], clause 9.3.4.1.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.4.2 Commands

5.6.3.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.2.

There are no conformance requirements for the terminal for the referenced clause.

5.6.3.4.3 Events and subclauses

5.6.3.4.3.1 Events

5.6.3.4.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.

RQ9.74	When sending to a card application gate, the CLF shall respect the values and events as listed.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.4.3.2 EVT_FIELD_ON

5.6.3.4.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.1.

RQ9.75	When EVT_FIELD_ON is sent by the host controller, it shall be sent within 2 ms after the detection of an RF field.
RQ9.76	In case of an underlying data link layer according to ETSI TS 102 613 [2], if SWP is in DEACTIVATED state, the CLF shall activate the interface instead of sending the EVT_FIELD_ON.
RQ9.77	When the host controller sends EVT_FIELD_ON, it shall not contain parameters.
NOTE:	All conformance requirements for the referenced clause are included in the subclauses of clause 5.6.4 of the present document.

5.6.3.4.3.3 EVT_CARD_DEACTIVATED

5.6.3.4.3.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.2.

RQ9.78	When the host controller sends EVT_CARD_DEACTIVATED, it shall not contain parameters.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.4.3.4 EVT_CARD_ACTIVATED

5.6.3.4.3.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.3.

RQ9.79	When the host controller sends EVT_CARD_ACTIVATED, it shall not contain parameters.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.4.3.5 EVT_FIELD_OFF

5.6.3.4.3.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.4.

RQ9.80	When the host controller sends EVT_FIELD_OFF, it shall not contain parameters.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.4.3.6 EVT_SEND_DATA

5.6.3.4.3.6.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.3.5.

RQ9.81	On sending EVT_SEND_DATA the CLF shall set the last parameter byte as RF error indicator.
NOTE:	Development of test cases for above listed RQs is FFS.

5.6.3.4.4 Registry

5.6.3.4.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.3.4.4.

There are no conformance requirements for the terminal for the referenced clause.

5.6.4 Procedures

5.6.4.1 Use of contactless card application

5.6.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 9.4, 9.4.1 and 9.3.4.3.1.

NOTE: These requirements apply for usage of ISO/IEC 14443-4 [7].

RQ9.82	9.4.1		In full power mode, when the CLF detects a RF field, the card RF gate shall send the event EVT_FIELD_ON to the card application gate unless otherwise as specified in clause 9.3.4.3.1.
RQ9.83	9.4.1		When there are multiple open card RF gates the CLF shall send the EVT_FIELD_ON to the open card application gate with the lowest G _{ID} .
RQ9.84	9.4.1		When the CLF detects a RF field, and after sending EVT_FIELD_ON (if sent), the CLF shall start the initialization and anti-collision process as defined in ISO/IEC 14443-3 [6] using the parameters from the appropriate card RF gate registry for the present RF technology.
RQ9.85	9.4.1	Rel-7 to Rel-9	If The card RF gate sends EVT_CARD_ACTIVATED to the card application gate, it shall send it at the end of the activation sequence as defined ISO/IEC 14443-4 [7].
RQ9.112	9.4.1	Rel-10 upwards	The card RF gate shall send EVT_CARD_ACTIVATED to the card application gate at the end of the activation sequence as defined ISO/IEC 14443-4 [7].
RQ9.86	9.4.1		The card RF gate shall forward the C-APDUs from the external contactless reader to the card application gate using the EVT_SEND_DATA.
RQ9.113	9.4.1		The CLF may forward an empty C-APDU to the UICC
RQ9.87	9.4.1		If the CLF detects the end of the PICC deactivation sequence by the external contactless reader, the card RF gate shall send an EVT_CARD_DEACTIVATED.
RQ9.88	9.4.1		In full power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall send EVT_FIELD_OFF to the card application gate.
RQ9.89	9.4.1		When there are multiple open cards RF gates the CLF shall send the EVT_FIELD_OFF to the card application gate used during the transaction or to the open card application gate with the lowest G _{ID} .
RQ9.90	9.4.1		In low power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall either send EVT_FIELD_OFF to the card application gate or power down the host.
RQ9.75	9.3.4.3.1		When EVT_FIELD_ON is sent by the host controller, it shall be sent within 2 ms after the detection of an RF field.
RQ9.76	9.3.4.3.1		In case of an underlying data link layer according to ETSI TS 102 613 [2], if SWP is in DEACTIVATED state, the CLF shall activate the interface instead of sending the EVT_FIELD_ON.
RQ9.77	9.3.4.3.1		When the host controller sends EVT_FIELD_ON, it shall not contain parameters.
RQ9.111	9.4.1		If the CLF forwards an empty C-APDU to the UICC, it shall accept an empty R-APDU or an R-APDU containing an error code in response, and forward the R-APDU to the external contactless reader as specified in ISO/IEC 14443-4 [7].
RQ9.115	9.4	Rel-11 upwards	The CLF shall only send events defined in Table 35 in ETSI TS 102 622 [1] to the Card application gate or open a CLT session as defined in ETSI TS 102 613 [2] for the corresponding RF technology if the MODE parameter in the associated Card RF gate registry is set to '02' (enabled).

NOTE: Development of test cases for RQ9.75, RQ9.111, RQ9.113 and RQ9.115 is FFS.

5.6.4.1.2 Test case 1: ISO/IEC 14443-3 Type A

5.6.4.1.2.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.1.2.2 Initial conditions

- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPE_a is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A of HCUT.
- Registries entries of card RF gate for RF technology type A shall be modified to execute the test.

- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type A protocol is powered off.
- SAK registry parameter is set to '20', ATQA registry parameter is set to '0100', MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.4.1.2.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.82, RQ9.76
5	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3 and b6 in the SAK.	RQ9.84
6	PCD → HCUT	Send (RATS).	
7	HCUT → PCD	Response (ATS).	
8	PCD → HCUT HCUT → PCD	PPS procedure.	
9	HCUT → HS	The Terminal may send EVT_CARD_ACTIVATED.	RQ9.85
10	PCD → HCUT	Send C-APDU.	
11	HCUT → HS	Send EVT_SEND_DATA contains the received C-APDU on PIPEa.	RQ9.86
12	HS → HCUT	Send EVT_SEND_DATA contains the response on PIPEa.	
13	HCUT → PCD	Send R-APDU.	
14		If there is more data to exchange than repeat steps 10 to 13.	
15	User → PCD	Run the deactivation sequence.	
16	PCD → HCUT	Send DESELECT command.	
17	HCUT → HS	Send EVT_CARD_DEACTIVATED.	RQ9.87
18	User → HCUT	The terminal is removed from the PCD field.	
19	HCUT → HS	For full power mode execution: send EVT_FIELD_OFF. For low power mode execution: send EVT_FIELD_OFF or power down the host.	RQ9.88, RQ9.90
20		If the terminal supports O_Low_Power_Mode , remove the terminal from the PCD field, power off the terminal and perform steps 1 to 19.	

5.6.4.1.3 Test case 2: ISO/IEC 14443-3 Type B

5.6.4.1.3.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.1.3.2 Initial conditions

- The user has to ensure that the RF technology type B is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B of HCUT.
- Registries entries of card RF gate for RF technology type B shall be modified to execute the test.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type B protocol is powered off.
- MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.4.1.3.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.82, RQ9.76
5	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type B (with anti-collision and selection).	RQ9.84
6	HCUT → HS	The Terminal may send EVT_CARD_ACTIVATED.	RQ9.85
7	PCD → HCUT	Send C-APDU.	
8	HCUT → HS	Send EVT_SEND_DATA contains the received C-APDU on PIPEa.	RQ9.86
9	HS → HCUT	Send EVT_SEND_DATA contains the response on PIPEa.	
10	HCUT → PCD	Send R-APDU.	
11		If there is more data to exchange than repeat steps 9 to 12.	
12	User → PCD	Run the deactivation sequence.	
13	PCD → HCUT	Send DESELECT command.	
14	HCUT → HS	Send EVT_CARD_DEACTIVATED.	RQ9.87
15	User → HCUT	The terminal is removed from the PCD field.	
16	HCUT → HS	For full power mode execution: send EVT_FIELD_OFF. For low power mode execution: send EVT_FIELD_OFF or power down the host.	RQ9.88, RQ9.90
17		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 16.	

5.6.4.1.4 Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G_{ID}

5.6.4.1.4.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.1.4.2 Initial conditions

- The user has to ensure that the RF technology type A and Type B are enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A of the HCUT.
- A PIPEb is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B of the HCUT.
- ATQA registry parameter is set to '01 00', SAK is set to '20', MODE for card RF gate type A is set to '02'.
- MODE for card RF gate type B is set to '02'.
- SESSION_IDENTITY is set to a random value.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type A protocol is powered off.

5.6.4.1.4.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON to G _{ID} = '21' on PIPEb. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.83, RQ9.76, RQ9.77
5	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3 and b6 in the SAK.	RQ9.83 RQ9.84
6	PCD → HCUT	Send (RATS).	
7	HCUT → PCD	Response (ATS).	
8	PCD → HCUT HCUT → PCD	PPS procedure.	
9	HCUT → HS	The Terminal may send EVT_CARD_ACTIVATED.	RQ9.85
10	PCD → HCUT	Send C-APDU.	
11	HCUT → HS	Send EVT_SEND_DATA contains the received C-APDU on PIPEa.	RQ9.86
12	HS → HCUT	Send EVT_SEND_DATA contains the response on PIPEa.	
13	HCUT → PCD	Send R-APDU.	
14	PCD → HCUT	Send DESELECT command.	
15	HCUT → HS	Send EVT_CARD_DEACTIVATED.	RQ9.87
16	User → HCUT	The terminal is removed from the PCD field.	
17	HCUT → HS	Send EVT_FIELD_OFF either to G _{ID} = '21' on PIPEb or to G _{ID} = '23' on PIPEa.	RQ9.89 RQ9.88

5.6.4.1.5 Test case 4: ISO/IEC 14443-3 Type A

5.6.4.1.5.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.1.5.2 Initial conditions

- The user has to ensure that the RF technology type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A of HCUT.
- Registries entries of card RF gate for RF technology type A shall be modified to execute the test.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type A protocol is powered off.
- SAK registry parameter is set to '20', ATQA registry parameter is set to '01 00', MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.4.1.5.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.82, RQ9.76
5	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3 and b6 in the SAK.	RQ9.84
6	PCD → HCUT	Send (RATS).	
7	HCUT → PCD	Response (ATS).	
8	PCD → HCUT HCUT → PCD	PPS procedure.	
9	HCUT → HS	Send EVT_CARD_ACTIVATED.	RQ9.112

Step	Direction	Description	RQ
10	PCD → HCUT	Send C-APDU. Step 9 might be performed by the HCUT during or after this step. This is also a valid behaviour of HCUT.	
11	HCUT → HS	Send EVT_SEND_DATA contains the received C-APDU on PIPEa.	RQ9.86
12	HS → HCUT	Send EVT_SEND_DATA contains the response on PIPEa.	
13	HCUT → PCD	Send R-APDU.	
14		If there is more data to exchange than repeat steps 10 to 13.	
15	User → PCD	Run the deactivation sequence.	
16	PCD → HCUT	Send DESELECT command.	
17	HCUT → HS	Send EVT_CARD_DEACTIVATED.	RQ9.87
18	User → HCUT	The terminal is removed from the PCD field.	
19	HCUT → HS	For full power mode execution: send EVT_FIELD_OFF. For low power mode execution: send EVT_FIELD_OFF or power down the host.	RQ9.88, RQ9.90
20		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 19.	

5.6.4.1.6 Test case 5: ISO/IEC 14443-3 Type B

5.6.4.1.6.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.1.6.2 Initial conditions

- The user has to ensure that the RF technology type B is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B of HCUT.
- Registries entries of card RF gate for RF technology type B shall be modified to execute the test.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 14443-3 [6] Type B protocol is powered off.
- MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.4.1.6.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.82, RQ9.76
5	PCD → HCUT HCUT → PCD	Perform initialization of RF ISO/IEC 14443-3 [6] Type B (with anti-collision and selection).	RQ9.84
6	HCUT → HS	Send EVT_CARD_ACTIVATED.	RQ9.112
7	PCD → HCUT	Send C-APDU. Step 6 might be performed by the HCUT during or after this step. This is also a valid behaviour of HCUT.	
8	HCUT → HS	Send EVT_SEND_DATA contains the received C-APDU on PIPEa.	RQ9.86
9	HS → HCUT	Send EVT_SEND_DATA contains the response on PIPEa.	
10	HCUT → PCD	Send R-APDU.	
11		If there is more data to exchange than repeat steps 9 to 12.	
12	User → PCD	Run the deactivation sequence.	
13	PCD → HCUT	Send DESELECT command.	
14	HCUT → HS	Send EVT_CARD_DEACTIVATED.	RQ9.87
15	User → HCUT	The terminal is removed from the PCD field.	
16	HCUT → HS	For full power mode execution: send EVT_FIELD_OFF. For low power mode execution: send EVT_FIELD_OFF or power down the host.	RQ9.88, RQ9.90
17		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 16.	

5.6.4.2 Non ISO/IEC 14443-4 type A

5.6.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 9.4.2 and 9.3.4.3.1.

RQ9.91	9.4.2	In full power mode, and if SWP is not in DEACTIVATED_state, when the CLF detects a RF field, the card RF gate shall send the event EVT_FIELD_ON to the card application gate.
RQ9.92	9.4.2	When there are multiple open card RF gates the CLF shall send the EVT_FIELD_ON to the open card application gate with the lowest G _{ID} .
RQ9.93	9.4.2	When the CLF detects a RF field, and after sending EVT_FIELD_ON (if sent), the CLF shall start the initialization and anti-collision process as defined in ISO/IEC 14443-3 [6] using the parameters from the card RF gate registry for the RF technology type A.
RQ9.94	9.4.2	Any other communications are done using the CLT mode as defined in ETSI TS 102 613 [2].
RQ9.95	9.4.2	In full power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall send EVT_FIELD_OFF to the card application gate.
RQ9.96	9.4.2	When there are multiple open cards RF gates the CLF shall send the EVT_FIELD_OFF to the card application gate used during the transaction or to the open card application gate with the lowest G _{ID} .
RQ9.97	9.4.2	In low power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall either send EVT_FIELD_OFF to the card application gate or power down the host.
RQ9.75	9.3.4.3.1	When EVT_FIELD_ON is sent by the host controller, it shall be sent within 2 ms after the detection of an RF field.
RQ9.76	9.3.4.3.1	In case of an underlying data link layer according to ETSI TS 102 613 [2], if SWP is in DEACTIVATED state, the CLF shall activate the interface instead of sending the EVT_FIELD_ON.
RQ9.77	9.3.4.3.1	When the host controller sends EVT_FIELD_ON, it shall not contain parameters.
NOTE: Development of test cases for RQ9.75 is FFS.		

5.6.4.2.2 Test case 1: Non ISO/IEC 14443-4 type A

5.6.4.2.2.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology Non ISO/IEC 14443-4 [7] type A is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPE_a is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- The Proximity Coupling Device (PCD) supports ISO/IEC 14443-3 [6] Type A.
- ATQA registry parameter is set to '04 00', SAK is set to '28', MODE is set to '02' and SESSION_IDENTITY is set to a random value.

5.6.4.2.2.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.91, RQ9.76, RQ9.77
5	PCD ↔ HCUT	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3, b4 and b6 in the SAK (see note).	RQ9.93
6	PCD ↔ HCUT HCUT ↔ HS	Open CLT session as defined in ETSI TS 102 613 [2] and exchange at least one further RF frame command/response within the CLT session	RQ9.94
7	User → HCUT	The terminal is removed from the PCD field.	
8	HCUT → HS	For full power mode execution: send EVT_FIELD_OFF. For low power mode execution: send EVT_FIELD_OFF or power down the host.	RQ9.95, RQ9.97
9		If the terminal supports O_Low_Power_Mode, remove the terminal from the PCD field, power off the terminal and perform steps 1 to 8.	
NOTE: As the CLF may be used in a multi host environment it may modify other bits of the SAK. This is not a failure of the terminal.			

5.6.4.2.3 Test case 2: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G_{ID}

5.6.4.2.3.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.2.3.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- The user has to ensure that the RF technology type B and Non ISO/IEC 14443-4 [7] type A are enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
- A PIPEb is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B of HCUT.
- The Proximity Coupling Device (PCD) supports ISO/IEC 14443-3 [6] Type A and is powered off.
- ATQA registry parameter is set to '04 00', SAK is set to '28' and MODE for type A is set to '02'.
- MODE for type B is set to '02'.
- SESSION_IDENTITY is set to a random value.

5.6.4.2.3.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	PCD → HCUT	Transitions from POWER_OFF to IDLE state.	
4	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON to G _{ID} = '21' on PIPEb. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.92, RQ9.76, RQ9.77
5	PCD ↔ HCUT HCUT ↔ HS	Perform initialization of RF ISO/IEC 14443-3 [6] Type A (with anti-collision and selection). Check only bits b3, b4 and b6 in the SAK (see note).	RQ9.93, RQ9.94
6	PCD ↔ HCUT HCUT ↔ HS	Open CLT session as defined in ETSI TS 102 613 [2] and exchange at least one further RF frame command/response within the CLT session.	RQ9.94
7	User → HCUT	The terminal is removed from the PCD field.	

Step	Direction	Description	RQ
8	HCUT → HS	Send EVT_FIELD_OFF to G _{ID} = '21' on PIPEb or to G _{ID} = '23' on PIPEa.	RQ9.96
NOTE: As the CLF may be used in a multi host environment it may modify other bits of the SAK. This is not a failure of the terminal.			

5.6.4.3 Type B' RF technology

5.6.4.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.4.3.

NOTE: Defining conformance requirements is out of scope of the present document.

5.6.4.4 Type F RF technology

5.6.4.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 9.4.4 and 9.3.4.3.1.

RQ9.98	9.4.4	In full power mode, and if SWP is not in DEACTIVATED state, when the CLF detects a RF field, the card RF gate shall send the event EVT_FIELD_ON to the card application gate.
RQ9.99	9.4.4	When there are multiple open cards RF gates the CLF shall send the EVT_FIELD_ON to the open card application gate with the lowest G _{ID} .
RQ9.100	9.4.4	In case SWP as defined in ETSI TS 102 613 [2] is used as a data link layer, the initialization data exchange is performed using CLT as defined in ETSI TS 102 613 [2] The host provides information for the initialization.
RQ9.102	9.4.4	The card RF gate shall forward the ISO/IEC 18092 [4] 212 kbps/424 kbps frames from the external reader to the card application gate using the EVT_SEND_DATA with the structure specified in ETSI TS 102 622 [1].
RQ9.103	9.4.4	The host sending a response shall encapsulate the ISO/IEC 18092 [4] 212 kbps/424 kbps frames in an EVT_SEND_DATA event and shall send it to the card RF gate.
RQ9.104	9.4.4	In full power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall send EVT_FIELD_OFF to the card application gate.
RQ9.105	9.4.4	When there are multiple open cards RF gates the CLF shall send the EVT_FIELD_OFF to the card application gate used during the transaction or to the open card application gate with the lowest G _{ID} .
RQ9.106	9.4.4	In low power mode, when the CLF detects at any time during the sequence that the RF field is off, the card RF gate shall either send EVT_FIELD_OFF to the card application gate or power down the host.
RQ9.107	9.4.4	ISO/IEC 18092 [4] 212 kbps/424 kbps frames, except initialization command and response (command code '00' and '01'), shall be exchanged using the appropriate gate depending on the command code of the frame as described in ETSI TS 102 622 [1].
RQ9.108	9.4.4	The command codes reserved for the NFCIP-1 protocol shall not be forwarded.
RQ9.75	9.3.4.3.1	When EVT_FIELD_ON is sent by the host controller, it shall be sent within 2 ms after the detection of an RF field.
RQ9.76	9.3.4.3.1	In case of an underlying data link layer according to ETSI TS 102 613 [2], if SWP is in DEACTIVATED state, the CLF shall activate the interface instead of sending the EVT_FIELD_ON.
RQ9.77	9.3.4.3.1	When the host controller sends EVT_FIELD_ON, it shall not contain parameters.

5.6.4.4.2 Test case 1: ISO/IEC 18092 Type F

5.6.4.4.2.1 Test execution

Run this test with the following parameters:

- Full power mode.
- ISO/IEC 18092 [4] Type F command parameters in Step 5 are following.
 - LEN = all values from '03' to 'FF'
 - CMD0 = 'D8'
 - CMD1 = '00'
 - Byte 0 ~ Byte n = any value
- ISO/IEC 18092 [4] Type F response parameters in Step 8 are following.
 - LEN = all values from '03' to 'FF'
 - CMD0 = 'D9'
 - CMD1 = '01'
 - Byte 0 ~ Byte n = same values as Byte 0 ~ Byte n in the command

5.6.4.4.2.2 Initial conditions

- The user has to ensure that the RF technology type F is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEf is created and opened by the host with source G_{ID} = '24' to the card RF gate of type F of HCUT.
- MODE is set to '02' and SESSION_IDENTITY is set to a random value.
- The HCUT is configured to forward incoming POLLING REQUEST commands to the HS for processing , using SWP as defined in ETSI TS 102 613 [2] as a data link layer.

5.6.4.4.2.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.98, RQ9.76
4	PCD ↔ HCUT HCUT ↔ HS	Perform initialization of RF ISO/IEC 18092 [4] 212 kbps: The PCD sends a POLLING REQUEST as defined in ISO/IEC 18092 [4] 212 kbps/ 424 kbps passive mode, where the Length is set to '06', 1st byte to '00', 2nd and 3rd bytes to '8EFC', 4th byte to '00', 5th byte to '00', and bytes 6 and 7 represent the correct CRC at 212 kbps. The HS provides the necessary response in time to the HCUT for a POLLING RESPONSE in the first time slot according to the initialization procedure as defined in ISO/IEC 18092 [4] for 212 kbps/424 kbps passive mode, where the Length is set to '12', 1st byte to '01', 2nd to 9th bytes to '02FE000000000000', 10th to 17th bytes to 'FFFFFFFFFFFFFFFF', 18 and 19 bytes represent the correct CRC at 212 kbps..	
5	PCD → HCUT	Send the ISO/IEC 18092 [4] 212 kbps frames.	
6	HCUT → HS	Send EVT_SEND_DATA containing the received ISO/IEC 18092 [4] 212 kbps frames on PIPEf.	RQ9.102 RQ9.107
7	HS → HCUT	Send EVT_SEND_DATA containing the response on PIPEf.	
8	HCUT → PCD	Send the ISO/IEC 18092 [4] 212 kbps frames.	RQ9.103 RQ9.107

Step	Direction	Description	RQ
9		If the payload size in the Command/Response defined in the initial condition has not yet reached 255 bytes, then increases the size of the payload by 1 byte and come back to step 5, else move to step 10.	
10	User → HCUT	The terminal is removed from the PCD field.	
11	HCUT → HS	Send EVT_FIELD_OFF.	RQ9.104, RQ9.106

5.6.4.4.3 Test case 2: RF off during ISO/IEC 18092 Type F commands handling

5.6.4.4.3.1 Test execution

Run this test with the following parameters:

- Full power mode.
- The timings of RF off in step 8 are 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29 ms after the beginning of sending the ISO/IEC 18092 [4] 212 kbps frames in step 5.

5.6.4.4.3.2 Initial conditions

- The user has to ensure that the RF technology type F is enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- A PIPEf is created and opened by the host with source G_{ID} = '24' to the card RF gate of type F of HCUT.
- MODE is set to '02'.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 18092 [4] Type F protocol is powered off.
- The HCUT is configured to forward incoming POLLING REQUEST commands to the HS for processing, using SWP as defined in ETSI TS 102 613 [2] as a data link layer.

5.6.4.4.3.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.98, RQ9.76
4	PCD ↔ HCUT HCUT ↔ HS	Perform initialization of RF ISO/IEC 18092 [4] 212 kbps: The PCD sends a POLLING REQUEST as defined in ISO/IEC 18092 [4] 212 kbps/ 424 kbps passive mode, where the Length is set to '06', 1st byte to '00', 2nd and 3rd bytes to '8EFC', 4th byte to '00', 5th byte to '00', and bytes 6 and 7 represent the correct CRC at 212 kbps. The HS provides the necessary response in time to the HCUT for a POLLING RESPONSE in the first time slot according to the initialization procedure as defined in ISO/IEC 18092 [4] for 212 kbps/424 kbps passive mode, where the Length is set to '12', 1st byte to '01', 2nd to 9th bytes to '02FE000000000000', 10th to 17th bytes to 'FFFFFFFFFFFFFFFF', 18 and 19 bytes represent the correct CRC at 212 kbps.	
5	PCD → HCUT	Send the ISO/IEC 18092 [4] 212 kbps frames, where LEN is set to 'FF', CMD0 to 'D8', CMD1 to '00', Byte 0 to Byte 251 to any value, and the last 2 bytes represent the correct CRC at 212 kbps.	

Step	Direction	Description	RQ
6	Conditional	Depending on the timing for the RF field off as defined in the test execution, step 6 may happen. EVT_SEND_DATA containing the received ISO/IEC 18092 [4] 212 kbps frames in step 5 may be sent by the terminal to the HS. If the HS receives this EVT_SEND_DATA it shall respond EVT_SEND_DATA containing the response on PIPEf with a HS processing time of 3 ms. The EVT_SEND_DATA from the HS has the LEN of 'FF', CMD0 to 'D9', CMD1 to '01', Byte 0 to Byte 251 to same values as Byte 0 to Byte 251 in the command in step 5.	
7	Conditional	If the terminal has the time to receive the EVT_SEND_DATA described above it may start the ISO/IEC 18092 [4] 212 kbps frames response to the PCD, where the LEN is set to 'FF', CMD0 to 'D9', CMD1 to '01', Byte 0 to Byte 251 to same values as Byte 0 to Byte 251 in the command in step 5, and the last 2 bytes represent the correct CRC at 212 kbps.	
8	PCD → HCUT	Power off the field after the time as defined in the test execution.	
9	HCUT → HS	Terminal may send EVT_FIELD_OFF	
10	PCD → HCUT	Wait 5ms and power on field	
11	HCUT → HS	Terminal may send EVT_FIELD_ON	
12	PCD ↔ HCUT HCUT ↔ HS	20,4 ms after step 10, perform initialization of RF ISO/IEC 18092 [4] 212 kbps: The PCD sends a POLLING REQUEST as defined in ISO/IEC 18092 [4] 212 kbps/ 424 kbps passive mode, where the Length is set to '06', 1st byte to '00', 2nd and 3rd bytes to '8EFC', 4th byte to '00', 5th byte to '00', and bytes 6 and 7 represent the correct CRC at 212 kbps. The HS provides the necessary response in time to the HCUT for a POLLING RESPONSE in the first time slot according to the initialization procedure as defined in ISO/IEC 18092 [4] for 212 kbps/424 kbps passive mode, where the Length is set to '12', 1st byte to '01', 2nd to 9th bytes to '02FE000000000000', 10th to 17th bytes to 'FFFFFFFFFFFFFFFF', 18 and 19 bytes represent the correct CRC at 212 kbps.	
13	PCD → HCUT	Send the ISO/IEC 18092 [4] 212 kbps frames, where LEN is set to 'FF', CMD0 to 'D8', CMD1 to '00', Byte 0 to Byte 251 to any value, and the last 2 bytes represent the correct CRC at 212 kbps.	
14	HCUT → HS	Send EVT_SEND_DATA containing the received ISO/IEC 18092 [4] 212 kbps frames on PIPEf.	RQ9.102 RQ9.107
15	HS → HCUT	3ms after receiving the EVT_SEND_DATA from previous step, send EVT_SEND_DATA containing the response on PIPEf.	
16	HCUT → PCD	Send the ISO/IEC 18092 [4] 212 kbps frames, where the LEN is set to 'FF', CMD0 to 'D9', CMD1 to '01', Byte 0 to Byte 251 to same values as Byte 0 to Byte 251 in the command in step 13, and the last 2 bytes represent the correct CRC at 212 kbps.	RQ9.103 RQ9.107
17		If the RF off timing is equal to 29 ms in step 8, then move to step 18, else increases the time by 1 ms and come back to step 5.	
18	User → HCUT	The terminal is removed from the PCD field.	
19	HCUT → HS	Send EVT_FIELD_OFF.	RQ9.104

5.6.4.4.4 Test case 3: Routing EVT_FIELD_ON and EVT_FIELD_OFF to RF Gate with lowest G_{ID}

5.6.4.4.4.1 Test execution

There are no test case-specific parameters for this test case.

5.6.4.4.4.2 Initial conditions

- The user has to ensure that the all supported RF technologies are enabled in the terminal for the UICC prior to placing the terminal in the PCD field.
- If terminal supports O_CE_TypeA:
 - A PIPEa is created and opened by the host with source G_{ID} = '23' to the card RF gate of type A.
 - MODE is set to '02'.
- If terminal supports O_CE_TypeB:
 - A PIPEb is created and opened by the host with source G_{ID} = '21' to the card RF gate of type B.
 - MODE is set to '02'.
- A PIPEf is created and opened by the host with source G_{ID} = '24' to the card RF gate of type F of the HCUT.
- MODE for type F is set to '02'.
- SESSION_IDENTITY is set to a random value.
- The Proximity Coupling Device (PCD) supporting ISO/IEC 18092 [4] Type F protocol is powered off.

5.6.4.4.4.3 Test procedure

Step	Direction	Description	RQ
1	User → HCUT	While the field is off, the terminal is placed in the area where the field will be powered on.	
2	PCD → HCUT	Power on the field.	
3	HCUT → HS	If SWP was not in DEACTIVATED state when the field was powered on, the HCUT shall send EVT_FIELD_ON to one of the following: <ul style="list-style-type: none"> • G_{ID} = '21' on PIPEb if type B is supported; or • G_{ID} = '23' on PIPEa if type B is not supported. If SWP was in the DEACTIVATED state when the field was powered on, the HCUT shall activate the interface instead of sending EVT_FIELD_ON.	RQ9.99 RQ9.98, RQ9.76
4	PCD ↔ HCUT HCUT ↔ HS	Perform initialization of RF ISO/IEC 18092 [4] 212 kbps. In case SWP as defined in ETSI TS 102 613 [2] is used as a data link layer, the initialization data exchange is performed using CLT as defined in ETSI TS 102 613 [2]. The UICC provides information for the initialization.	
5	PCD → HCUT	Send the ISO/IEC 18092 [4] 212 kbps frames with LEN = '0B', CMD0 = 'D8', CMD1 = '00' and Byte 0 to Byte 7 = '02FE000000000000'.	
6	HCUT → HS	Send EVT_SEND_DATA containing the received ISO/IEC 18092 [4] 212 kbps frames on PIPEf.	RQ9.102 RQ9.107
7	HS → HCUT	Send EVT_SEND_DATA containing the response on PIPEf.	
8	HCUT → PCD	Send the ISO/IEC 18092 [4] 212 kbps frames with LEN = '0B', CMD0 = 'D9', CMD1 = '01' and Byte 0 to Byte 7 = '02FE000000000000'.	RQ9.103 RQ9.107
9	User → HCUT	The terminal is removed from the PCD field.	
10	HCUT → HS	Send EVT_FIELD_OFF to one of the following: <ul style="list-style-type: none"> • G_{ID} = '24' on PIPEf; or • G_{ID} = '21' on PIPEb if type B is supported; or • G_{ID} = '23' on PIPEa if type B is not supported. 	RQ9.105 RQ9.104

5.6.4.5 Update RF technology settings

5.6.4.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.4.5.

There are no conformance requirements for the terminal for the referenced clause.

5.6.4.6 Identity check

5.6.4.6.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 9.4.6.

RQ9.110	If the lower identity check fails, the host controller shall not respond to the external contactless reader with any parameter from the card emulation registries related to the UICC host.
NOTE:	Development of test cases for above listed RQs is FFS.

5.7 Contactless reader

5.7.1 Overview

5.7.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.1.

RQ10.1		The host controller has one reader RF gate for each RF technology it supports.
RQ10.2		The CLF shall handle the RF layers of the communications as defined in ISO/IEC 14443-2 [5].
RQ10.3		The anti-collision and activation as defined in ISO/IEC 14443-3 [6] shall be handled by the CLF under the control of the host.
RQ10.4		The RF protocol as defined in ISO/IEC 14443-4 [7] shall be handled by the CLF.
RQ10.5		The reader RF gate and reader application gate shall exchange APDUs defined in ISO/IEC 7816-4 [8] over their pipe.
RQ10.59	Rel-11 upwards	If MAX_CURRENT present in the host controller, the host is allowed to consume a current up to the maximum defined by the host controller in its identity management gate registry between the appearance and the disappearance of the RF unless restricted by the underlying layers e.g. ETSI TS 102 613 [2] where the restrictions for low-power mode and power saving mode still apply
NOTE 1: RQ10.3 and 10.4 are tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.		
NOTE 2: RQ10.2 and RQ10.5 are partly tested in clause 5.7.2.3.1 and 5.7.2.3.2. These test cases are functional tests only; RF parameters are not measured and a limited set of APDUs is used. Development of further test cases for RQ10.2 and RQ10.5 is out of scope of the present document.		
NOTE 3: RQ10.1 is implicitly tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.		
NOTE 4: Development of test cases for RQ10.59 is FFS.		

5.7.2 Reader RF gates

5.7.2.1 Overview

Reference: ETSI TS 102 622 [1], clause 10.2.1.

There are no conformance requirements for the terminal for the referenced clause.

5.7.2.2 Command

5.7.2.2.1 WR_XCHG_DATA

5.7.2.2.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.2.1.

RQ10.6		If b5 of the CTR field of WR_XCHG_DATA is set to zero, application level time-out is deactivated.
RQ10.7		If b5 of the CTR field of WR_XCHG_DATA is set to one, then b4 to b1 is a time-out value which shall use to calculate the application level time-out with the formula specified in ETSI TS 102 622 [1].
RQ10.60	Rel-11 upwards	If b5 of the CTR field is set to one and no response is received by the CLF from a target within the time-out period commencing after the error free transmission of this command by the CLF to the target, the CLF shall respond to the host with ANY_E_TIMEOUT with no parameters and shall discard data received from the target thereafter.
RQ10.8		When command WR_XCHG_DATA is successful, the host controller shall respond with ANY_OK with parameter which contains the data received and the RF error indicator.
RQ10.9		When command WR_XCHG_DATA is successful, the RF error indicator shall be '00' if no error.
RQ10.10	Rel-7 to Rel-10	When command WR_XCHG_DATA is successful, the RF error indicator shall be '01' if error.
RQ10.61	Rel-11 upwards	When command WR_XCHG_DATA is successful, the RF error indicator shall be '01' if non-recoverable error occurs.
RQ10.62	Rel-11 upwards	If the CLF detects an RF transmission error and the error detection and recovery procedure defined by ISO/IEC 14443-4 [7] does not succeed then the CLF shall respond to the host with ANY_OK with the error indicator set to '01'.
NOTE 1: RQ10.8 and RQ.9 are tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.		
NOTE 2: Development of test cases for RQ10.6, RQ10.7, RQ10.10, RQ10.60, RQ10.61 and RQ10.62 is FFS.		

5.7.2.3 Registries

5.7.2.3.1 Type A reader RF gate

5.7.2.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 10.1, 10.2.2.1, 10.2.3.1, 10.2.4, 10.2.4.1, 10.2.4.2, 10.2.5, 10.3.4.1 and 10.4.1.

RQ10.11	10.2.3.1		Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ10.12	10.2.3.1		The registry is not persistent.
RQ10.13	10.2.3.1	Rel-7 to Rel-10	The values are updated after each target activation.
RQ10.63	10.2.3.1	Rel-11 upwards	The values '02' to '06' (from table 42 in ETSI TS 102 622 [1]) are updated after each target activation.
RQ10.64	10.2.3.1	Rel-11 upwards	The value '07' (from table 42 in ETSI TS 102 622 [1]) is updated when the operating status changes.
RQ10.14	10.2.3.1		The CLF shall set a default value for UID_REG of '08000000'.
RQ10.15	10.2.3.1		The CLF shall apply the access condition of RO for UID.
RQ10.16	10.2.3.1		The CLF shall use a default value for ATQA of '0000'.
RQ10.17	10.2.3.1		The CLF shall apply the access condition of RO for ATQA.
RQ10.18	10.2.3.1		The CLF shall use a default value for APPLICATION_DATA of an empty array.
RQ10.19	10.2.3.1		The CLF shall apply the access condition of RO for APPLICATION_DATA.
RQ10.20	10.2.3.1		The CLF shall use a default value for SAK of '00'.
RQ10.21	10.2.3.1		The CLF shall apply the access condition of RO for SAK.
RQ10.22	10.2.3.1		The CLF shall use a default value for FWI, SFGT of 'EE'.
RQ10.23	10.2.3.1		The CLF shall apply the access condition of RO for FWI, SFGT.
RQ10.24	10.2.3.1		The CLF shall set a default value for DATARATE_MAX of '00'.
RQ10.25	10.2.3.1		The CLF shall apply to the access condition of RW to DATARATE_MAX.
RQ10.26	10.2.3.1		The CLF shall accept valid values of DATARATE_MAX as defined in ETSI TS 102 622 [1].

RQ10.27	10.2.3.1		The maximum supported divisor used over the RF interface shall be the minimum of the value as indicated in the registry and the maximum divisor implemented in the CLF.
RQ10.65	10.2.3.1	Rel-11 upwards	The CLF shall set b1 to 0 of OPERATING_STATUS when the Type A reader mode is not available for the host (e.g. the CLF is exclusively active for another host).
RQ10.66	10.2.3.1	Rel-11 upwards	The CLF shall set b1 to 1 of OPERATING_STATUS when the Type A reader mode is available for the host.
RQ10.67	10.2.3.1	Rel-11 upwards	The CLF shall apply to the access condition of RO to OPERATING_STATUS
RQ10.68	10.2.3.1	Rel-11 upwards	The CLF shall set a default value for STATUS_EVENT_EN of '00'
RQ10.69	10.2.3.1	Rel-11 upwards	The CLF shall accept valid values of STATUS_EVENT_EN as defined in ETSI TS 102 622 [1].
RQ10.70	10.2.3.1	Rel-11 upwards	The CLF shall apply to the access condition of RW to STATUS_EVENT_EN
RQ10.8	10.2.2.1		When command WR_XCHG_DATA is successful, the host controller shall respond with ANY_OK with parameter which contains the data received and the RF error indicator.
RQ10.9	10.2.2.1		When command WR_XCHG_DATA is successful, the RF error indicator shall be '00' if no error.
RQ10.3	10.1		The anti-collision and activation as defined in ISO/IEC 14443-3 [6] shall be handled by the CLF under the control of the host.
RQ10.4	10.1		The RF protocol as defined in ISO/IEC 14443-4 [7] shall be handled by the CLF.
RQ10.5	10.1		The reader RF gate and reader application gate shall exchange APDUs defined in ISO/IEC 7816-4 [8] over their pipe.
RQ10.41	10.2.4		The reader RF gates shall support the EVT_READER_REQUESTED and EVT_END_OPERATION events.
RQ10.42	10.2.4.1		On receiving the EVT_READER_REQUESTED event, the CLF shall activate the RF polling (turn on the RF carrier).
RQ10.43	10.2.4.1		The CLF shall accept EVT_READER_REQUESTED event on any open pipe of any reader RF gate.
RQ10.43a	10.2.4.2		Upon reception of the event EVT_END_OPERATION from a host the CLF controller shall turn the RF field OFF if the EVT_TARGET_DISCOVERED has been previously sent to that specific host
RQ10.44	10.2.5		If command WR_XCHG_DATA is successful, response shall be ANY_OK.
RQ10.48	10.3.4.1		The existence of an RF target in the field of the activated RF technology shall be signalled to the reader application gate by EVT_TARGET_DISCOVERED event.
RQ10.49	10.3.4.1		If there is a single target in the reader field and the activation of the target is completed then the value of STATUS parameter of EVT_TARGET_DISCOVERED event shall be equal to '00'.
RQ10.51	10.4.1		On receiving the EVT_READER_REQUESTED event, the CLF shall enable the RF polling.
RQ10.52	10.4.1		Once RF polling is enabled, the CLF shall start the detecting of a target according to all reader RF gates of the host that have an open pipe.
RQ10.53	10.4.1		When a target has been detected and activated, the CLF shall notify the host via the event EVT_TARGET_DISCOVERED.
RQ10.55	10.4.1		When the CLF receives a response from the target to a forwarded C-APDU, the reader RF gate shall reply in sending back an R-APDU to the reader application gate.
NOTE 1: RQ10.44 is redundant with RQ10.8, RQ10.48 is redundant with RQ10.53, RQ10.51 is redundant with RQ10.42, so only RQ10.8, RQ10.53 and RQ10.42 are listed in clause 5.7.2.3.1.2.			
NOTE 2: RQ10.43 is only partially tested in clause 5.7.2.3.1.2: it is currently only tested in the context of a single reader pipe being created and open; it is not currently tested in the context of more than one reader pipe being created and open.			
NOTE 3: Development of test cases for RQ10.11, RQ10.12, RQ10.63, RQ10.64, RQ10.65, RQ10.66, RQ10.67, RQ10.68, RQ10.69 and RQ10.70 is FFS.			

5.7.2.3.1.2 Test case 1: ISO/IEC 14443-4 compliant type A

5.7.2.3.1.2.1 Test execution

The test procedure shall be executed four times, based on 4 different scenarios (numbered from S1 to S4). Each scenario will use a different set of values for:

- ATQA, UID, SAK, APPLICATION_DATA and ATS parameters of the emulated PICC.
- DATARATE_MAX registry value.

- The APDUs exchanged.

As defined in the following tables (excluding CRC-A):

Scenario number	UID type	PICC ATQA value (ATQA_PICC) (binary format)	PICC UID value (UID_PICC)	PICC SAK value (SAK_PICC)
S1	Single	'00000000 00000001'b	'01020304'	'20'
S2	Single	'00000000 00000001'b	'01020304'	'28'
S3	Double	'00000000 01000001'b	'01020304050607'	'38'
S4	Triple	'00000000 10000001'b	'0102030405060708090A'	'60'

Scenario number	PICC APPLICATION_DATA value (AppData_PICC)	PICC ATS value (ATS_PICC)
S1, S2	" (no Application data)	'0575778102' (see note 2)
S3, S4	'112233445566778899' (see note 1)	'0E75778102112233445566778899' (see note 2)
NOTE 1: Value chosen as maximum number of historical bytes to fill the minimum Frame Size: FSD = 16 Bytes.		
NOTE 2: ATS_PICC is built with: T0 = 75 (FSC = 64Bytes); TA(1) = 77 (All baud rates supported => PPS possible); TB(1) = 81 (SFGT = 604 µs & FWT = 77,33 ms); TC(1) = 02 (CID supported, NAD not supported); [T1-TK]a = AppData_PICC.		

Scenario number	DATARATE_MAX registry values (DRM_Val)	Acceptable PPS request behavior in step 23	Effective RF data rate in steps 31 and 32 (kb/s)
S1	'00'	No PPS request	106
		PPS request with PPS1 absent	106
		PPS1 = '00'	106
S2	'01'	No PPS request	106
		PPS request with PPS1 absent	106
		PPS1 = '00'	106
		PPS1 = '05'	212
S3	'02'	No PPS request	106
		PPS request with PPS1 absent	106
		PPS1 = '00'	106
		PPS1 = '05'	212
		PPS1 = '0A'	424
S4	'03'	No PPS request	106
		PPS request with PPS1 absent	106
		PPS1 = '00'	106
		PPS1 = '05'	212
		PPS1 = '0A'	424
		PPS1 = '0F'	848

APDUs to be used in steps 30 to 33: Scenario number	C-APDU	R-APDU
S1	4 bytes: '00 A4 00 0C'	2 bytes: '90 00'
S2	5 bytes: '00 B0 00 00 00'	258 bytes: '00 01 .. FE FF 90 00'
S3	260 bytes: '00 20 00 01 FF 00 01 .. FD FE'	2 bytes: '63 C2'
S4	8 bytes: '00 A4 00 04 02 3F 00 02'	4 bytes: '62 00 90 00'

5.7.2.3.1.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- A PIPEa is created and opened by the host with source gate '13' to the reader RF gate of type A.

5.7.2.3.1.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	HS sets [UID registry] = '11111111'	
2	HCUT → HS	Send response with an allowed error code for the command.	RQ10.15
3	HS ↔ HCUT	HS gets UID registry value and checks it is default: '08000000'	RQ10.14, RQ10.15
4	HS → HCUT	HS sets [ATQA registry]= '1111'	
5	HCUT → HS	Send response with an allowed error code for the command	RQ10.17
6	HS ↔ HCUT	HS gets ATQA registry value and checks it is default: '0000'	RQ10.16, RQ10.17
7	HS → HCUT	HS sets [APPLICATION_DATA registry]= '11'	
8	HCUT → HS	Send response with an allowed error code for the command	RQ10.19
9	HS → HCUT HCUT ← HS	HS gets APPLICATION_DATA registry value and checks it is default: " (N=0)	RQ10.18, RQ10.19
10	HS → HCUT	HS sets [SAK registry]= '11'	
11	HCUT → HS	Send response with an allowed error code for the command	RQ10.21
12	HS ↔ HCUT	HS gets SAK registry value and checks it is default: '00'	RQ10.20, RQ10.21
13	HS → HCUT	HS sets [FWI, SFGT registry]= '81'	
14	HCUT → HS	Send response with an allowed error code for the command	RQ10.23
15	HS ↔ HCUT	HS gets FWI, SFGT registry and checks it is default: 'EE'	RQ10.22, RQ10.23
16	HS ↔ HCUT	HS gets DATARATE_MAX registry and checks it is default: '00'	RQ10.24, RQ10.25
17	HS → HCUT HCUT ← HS	HS sets [DATARATE_MAX registry]= DRM_Val and HCUT accepts command	RQ10.25, RQ10.26
18	HS ↔ HCUT	HS gets DATARATE_MAX registry and checks it is DRM_Val	RQ10.25
19	HS → HCUT	Send EVT_READER_REQUESTED on PIPEa	RQ10.41, RQ10.43
20		Put a PICC supporting ISO/IEC 14443-4 [7] Type A protocol in the field	
21	HCUT → PICC PICC → HCUT	Perform the initialization of the RF ISO/IEC 14443-3 [6] Type A protocol (with anti-collision and selection, using ATQA_PICC , UID_PICC and SAK_PICC)	RQ10.3, RQ10.52, RQ10.42
22	HCUT ↔ PICC	HCUT sends RATS, PICC answers ATS_PICC+CRC-A	RQ10.4
23	HCUT ↔ PICC	HCUT may initiate a PPS Request/Response exchange HCUT behavior is checked as acceptable according to the Test execution clause	RQ10.4
24	HCUT → HS	Send EVT_TARGET_DISCOVERED on PIPEa (see note)	RQ10.49, RQ10.53
25	HS ↔ HCUT	HS gets UID registry value and checks it is now UID_PICC	RQ10.13, RQ10.15
26	HS ↔ HCUT	HS gets ATQA registry value and checks it is now ATQA_PICC	RQ10.13, RQ10.17
27	HS ↔ HCUT	HS gets APPLICATION_DATA registry value and checks it is now AppData_PICC	RQ10.13, RQ10.19
28	HS → HCUT HCUT ← HS	HS gets SAK registry value and checks it is now SAK_PICC	RQ10.13, RQ10.21
29	HS ↔ HCUT	HS gets FWI, SFGT registry and checks it is now: '81'	RQ10.22, RQ10.23
30	HS → HCUT	HS sends WR_XCHG_DATA(CTR='00',C-APDU) on PIPEa, with C-APDU as specified in the Test execution clause	RQ10.5
31	HCUT → PICC	HCUT sends C-APDU (Effective RF data rate has to be consistent with PPS exchange in step 23)	RQ10.4, RQ10.27
32	PICC → HCUT	PICC sends R-APDU, with R-APDU as specified in the Test execution clause (Effective RF data rate has to be consistent with PPS exchange in step 23)	RQ10.4, RQ10.27
33	HCUT → HS	HCUT sends ANY_OK(R-APDU)	RQ10.5, RQ10.8, RQ10.9, RQ10.55
34	HS → HCUT	HS sends EVT_END_OPERATION on PIPEa Check that the HCUT turns the RF field OFF for 5 ms minimum, as defined in ISO/IEC 14443-3 [6]	RQ10.41, RQ10.43a
NOTE:	Depending on terminal implementation, step 24 may occur before or in parallel with the PPS Request/Response exchange in step 23. This shall not be considered as a test failure.		

5.7.2.3.2 Type B reader RF gate

5.7.2.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clauses 10.1, 10.2.2.1, 10.2.3.2, 10.2.4, 10.2.4.1, 10.2.5, 10.3.4.1 and 10.4.1.

RQ10.28	10.2.3.2		Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
RQ10.29	10.2.3.2		The registry is not persistent.
RQ10.30	10.2.3.2	Rel-7 to Rel-10	The values are updated after each target activation.
RQ10.71	10.2.3.2	Rel-11 upwards	The values '01', '03', '04' and '02' (read value) from table 43 defined in ETSI TS 102 622 [1] are updated after each target activation.
RQ10.72	10.2.3.2	Rel-11 upwards	The value '07' from table 43 defined in ETSI TS 102 622 [1] is updated when the operating status changes.
RQ10.31	10.2.3.2		The CLF shall use a default value for PUPI of 'N0=0'.
RQ10.32	10.2.3.2		The CLF shall apply the access condition of RO for PUPI.
RQ10.33	10.2.3.2		The CLF shall use a default value for APPLICATION_DATA of 'N1=0'.
RQ10.34	10.2.3.2		The CLF shall apply the access condition of RO for APPLICATION_DATA.
RQ10.35	10.2.3.2		The CLF shall set a default value for AFI of '00'.
RQ10.36	10.2.3.2		The CLF shall apply the access condition of RW to AFI.
RQ10.73	10.2.3.2	Rel-11 upwards	The CLF shall use the value written to the AFI registry by the host to poll the target.
RQ10.74	10.2.3.2	Rel-11 upwards	The CLF shall set the AFI registry value to the AFI value of the target after the activation of the target
RQ10.37	10.2.3.2		The CLF shall use a default value for HIGHER_LAYER_RESPONSE of 'N2=0'.
RQ10.38	10.2.3.2		The CLF shall apply the access condition of RO to HIGHER_LAYER_RESPONSE.
RQ10.39	10.2.3.2		The CLF shall set a default value for HIGHER_LAYER_DATA of 'N3=0'.
RQ10.40	10.2.3.2		The CLF shall apply the access condition of RW to HIGHER_LAYER_DATA.
RQ10.8	10.2.2.1		When command WR_XCHG_DATA is successful, the host controller shall respond with ANY_OK with parameter which contains the data received and the RF error indicator.
RQ10.9	10.2.2.1		When command WR_XCHG_DATA is successful, the RF error indicator shall be '00' if no error.
RQ10.75	10.2.2.1	Rel-11 upwards	The CLF shall set b1 to 0 of OPERATING_STATUS when the Type B reader mode is not available for the host (e.g. the CLF is exclusively active for another host).
RQ10.76	10.2.2.1	Rel-11 upwards	The CLF shall set b1 to 1 of OPERATING_STATUS when the Type B reader mode is available for the host.
RQ10.77	10.2.2.1	Rel-11 upwards	The CLF shall apply to the access condition of RO to OPERATING_STATUS
RQ10.78	10.2.2.1	Rel-11 upwards	The CLF shall set a default value for STATUS_EVENT_EN of '00'
RQ10.79	10.2.2.1	Rel-11 upwards	The CLF shall accept valid values of STATUS_EVENT_EN as defined in ETSI TS 102 622 [1].
RQ10.80	10.2.2.1	Rel-11 upwards	The CLF shall apply to the access condition of RW to STATUS_EVENT_EN
RQ10.3	10.1		The anti-collision and activation as defined in ISO/IEC 14443-3 [6] shall be handled by the CLF under the control of the host.
RQ10.4	10.1		The RF protocol as defined in ISO/IEC 14443-4 [7] shall be handled by the CLF.
RQ10.5	10.1		The reader RF gate and reader application gate shall exchange APDUs defined in ISO/IEC 7816-4 [8] over their pipe.
RQ10.41	10.2.4		The reader RF gates shall support the EVT_READER_REQUESTED and EVT_END_OPERATION events.
RQ10.42	10.2.4.1		On receiving the EVT_READER_REQUESTED event, the CLF shall activate the RF polling (turn on the RF carrier).
RQ10.43	10.2.4.1		The CLF shall accept EVT_READER_REQUESTED event on any open pipe of any reader RF gate.
RQ10.43 a	10.2.4.2		Upon reception of the event EVT_END_OPERATION from a host the CLF controller shall turn the RF field OFF if the EVT_TARGET_DISCOVERED has been previously sent to that specific host.
RQ10.44	10.2.5		If command WR_XCHG_DATA is successful, response shall be ANY_OK.
RQ10.48	10.3.4.1		The existence of an RF target in the field of the activated RF technology shall be signalled to the reader application gate by EVT_TARGET_DISCOVERED event.
RQ10.49	10.3.4.1		If there is a single target in the reader field and the activation of the target is completed then the value of STATUS parameter of EVT_TARGET_DISCOVERED event shall be equal to '00'.
RQ10.51	10.4.1		On receiving the EVT_READER_REQUESTED event, the CLF shall enable the RF polling.

RQ10.52	10.4.1		Once RF polling is enabled, the CLF shall start the detecting of a target according to all reader RF gates of the host that have an open pipe.
RQ10.53	10.4.1		When a target has been detected and activated, the CLF shall notify the host via the event EVT_TARGET_DISCOVERED.
RQ10.55	10.4.1		When the CLF receives a response from the target to a forwarded C-APDU, the reader RF gate shall reply in sending back an R-APDU to the reader application gate.
NOTE 1: RQ10.51 is redundant with RQ10.42, RQ10.48 is redundant with RQ10.53, RQ 10.44 is redundant with RQ10.8, so only RQ10.8, RQ10.53 and RQ10.42 are listed in clause 5.7.2.3.2.2.			
NOTE 2: RQ10.43 is only partially tested in clause 5.7.2.3.2.2: it is currently only tested in the context of a single reader pipe being created and open; it is not currently tested in the context of more than one reader pipe being created and open.			
NOTE 3: Development of test cases for RQ10.28, RQ10.29, RQ10.71, RQ10.72, RQ10.73, RQ10.74, RQ10.75, RQ10.76, RQ10.77, RQ10.78, RQ10.79, RQ10.80 is FFS.			

5.7.2.3.2.2 Test case 2: ISO/IEC 14443-4 compliant type B

5.7.2.3.2.2.1 Test execution

- The emulated PICC shall use the following parameters:
 - PUPI: **PUPI_PICC** = '01 02 03 04'
 - APPLICATION DATA: **APP_DATA_PICC** = '01 xx xx 00'
 - AFI: **AFI_PICC** = '01'
 - HIGHER LAYER RESPONSE: **HI_LAYER_RSP_PICC** = '01 02 03 04 05 06 07 08 09 0A'
- The APDUs exchanged in steps 23 to 38 shall be:

C-APDU1	4 bytes: '00 A4 00 0C'	R-APDU1	2 bytes: '90 00'
C-APDU2	5 bytes: '00 B0 00 00 00'	R-APDU2	258 bytes: '00 01 .. FE FF 90 00'
C-APDU3	260 bytes: '00 20 00 01 FF 00 01 .. FD FE'	R-APDU3	2 bytes: '63 C2'
C-APDU4	8 bytes: '00 A4 00 04 02 3F 00 02'	R-APDU4	4 bytes: '62 00 90 00'

5.7.2.3.2.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- A PIPE_a is created and opened by the host with source G_{ID} = '11' to the reader RF gate of type B.

5.7.2.3.1.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	HS sets [PUPI registry] = PUPI_PICC	
2	HCUT → HS	Send response with an allowed error code for the command	RQ10.32
3	HS ↔ HCUT	HS gets PUPI registry value and checks it is default: " (N ₀ =0)	RQ10.31, RQ10.32
4	HS → HCUT	HS sets [APPLICATION DATA registry] = APP_DATA_PICC	
5	HCUT → HS	Send response with an allowed error code for the command.	RQ10.34
6	HS ↔ HCUT	HS gets APPLICATION DATA registry value and checks it is default: " (N ₁ =0)	RQ10.33, RQ10.34
7	HS ↔ HCUT	HS gets AFI registry and checks it is default: '00'	RQ10.35, RQ10.36
8	HS ↔ HCUT	HS sets [AFI registry]= '01' and HCUT accepts command	RQ10.36
9	HS ↔ HCUT	HS gets AFI registry and checks it is '01'	RQ10.36
10	HS → HCUT	HS sets [HIGHER LAYER RESPONSE registry] = HI_LAYER_RSP_PICC	
11	HCUT → HS	Send response with an allowed error code for the command	RQ10.38
12	HS → HCUT HCUT ← HS	HS gets HIGHER LAYER RESPONSE registry value and checks it is default: " (N ₂ =0)	RQ10.37, RQ10.38
13	HS ↔ HCUT	HS gets HIGHER LAYER DATA registry and checks it is default: " (N ₃ =0)	RQ10.39, RQ10.40
14	HS → HCUT HCUT ← HS	HS sets [HIGHER LAYER DATA registry]= 'FF' and HCUT accepts command	RQ10.40
15	HS ↔ HCUT	HS gets HIGHER LAYER DATA registry and checks it is 'FF'	RQ10.40
16	HS → HCUT	Send EVT_READER_REQUESTED on PIPE _a	RQ10.41, RQ10.43

Step	Direction	Description	RQ
17		Put a PICC supporting ISO/IEC 14443-4 [7] Type B protocol in the field	
18	HCUT → PICC PICC → HCUT	Perform the initialization of the RF ISO/IEC 14443-3 [6] Type B protocol	RQ10.3, RQ10.52, RQ10.42
19	HCUT → HS	Send EVT_TARGET_DISCOVERED on PIPEa	RQ10.49, RQ10.53
20	HS ↔ HCUT	HS gets PUPI registry value and checks it is now PUPI_PICC	RQ10.30, RQ10.31
21	HS ↔ HCUT	HS gets APPLICATION DATA registry value and checks it is now APP_DATA_PICC	RQ10.30, RQ10.33
22	HS → HCUT HCUT ← HS	HS gets HIGHER LAYER RESPONSE registry value and checks it is now HI_LAYER_RSP_PICC	RQ10.30, RQ10.35
23	HS → HCUT	Send WR_XCHG_DATA(CTR='00', C-APDU1) on PIPEa	RQ10.5
24	HCUT → PICC	Send C-APDU1	RQ10.4, RQ10.9,
25	PICC → HCUT	Send R-APDU1	RQ10.4
26	HCUT → HS	Send ANY_OK(R-APDU1)	RQ10.5, RQ10.8 RQ10.9, RQ10.55
27	HS → HCUT	Send WR_XCHG_DATA(CTR='00', C-APDU2) on PIPEa	RQ10.5
28	HCUT → PICC	Send C-APDU2	RQ10.4, RQ10.9,
29	PICC → HCUT	Send R-APDU2	RQ10.4
30	HCUT → HS	Send ANY_OK(R-APDU2)	RQ10.5, RQ10.8 RQ10.9, RQ10.55
31	HS → HCUT	Send WR_XCHG_DATA(CTR='00', C-APDU3) on PIPEa	RQ10.5
32	HCUT → PICC	Send C-APDU3	RQ10.4, RQ10.9,
33	PICC → HCUT	Send R-APDU3	RQ10.4
34	HCUT → HS	Send ANY_OK(R-APDU3)	RQ10.5, RQ10.8 RQ10.9, RQ10.55
35	HS → HCUT	Send WR_XCHG_DATA(CTR='00', C-APDU4) on PIPEa	RQ10.5
36	HCUT → PICC	Send C-APDU4	RQ10.4, RQ10.9,
37	PICC → HCUT	Send R-APDU4	RQ10.4
38	HCUT → HS	Send ANY_OK(R-APDU4)	RQ10.5, RQ10.8 RQ10.9, RQ10.55
39	HS → HCUT	HS sends EVT_END_OPERATION on PIPEa Check that the HCUT cuts the RF field OFF for 5ms minimum, as defined in ISO/IEC 14443-3 [6]	RQ10.41, RQ10.43a

5.7.2.4 Events and subclauses

5.7.2.4.1 Events

5.7.2.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.4.

RQ10.41	The reader RF gates shall support the EVT_READER_REQUESTED and EVT_END_OPERATION events.
NOTE:	RQ10.41 is tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.

5.7.2.4.2 EVT_READER_REQUESTED

5.7.2.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.4.1.

RQ10.42	On receiving the EVT_READER_REQUESTED event, the CLF shall activate the RF polling (turn on the RF carrier).
RQ10.43	The CLF shall accept EVT_READER_REQUESTED event on any open pipe of any reader RF gate.
NOTE:	RQ10.42 and RQ.43 are tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.

5.7.2.4.3 EVT_END_OPERATION

5.7.2.4.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.4.2.

RQ10.58	Upon reception of the event EVT_END_OPERATION from a host the CLF controller shall turn the RF field OFF if the EVT_TARGET_DISCOVERED has been previously sent to that specific host
NOTE:	RQ10.43a is tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.

5.7.2.4.4 EVT_READER_STATUS

5.7.2.4.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.4.2.

RQ10.81	Rel-11 upwards	The CLF shall send this event once after the reader status event enable bit (b1) in the STATUS_EVENT_EN is changed to 1.
RQ10.82	Rel-11 upwards	The CLF shall send this event as long as the reader status event enable bit (b1) in the corresponding STATUS_EVENT_EN remains at 1 whenever the availability status of a reader RF gate has changed.
RQ10.83	Rel-11 upwards	If multiple pipes from one host to reader RF gates are open, the CLF shall send this event over one of these pipes only.
RQ10.84	Rel-11 upwards	If different types of the reader mode become available/unavailable for the host at different points in time, the CLF shall send one event for each change.
RQ10.85	Rel-11 upwards	The CLF shall not send the EVT_READER_STATUS if the reader status event enable bit (b1) in the corresponding STATUS_EVENT_EN is set to 0.
RQ10.86	Rel-11 upwards	The CLF shall set the reader status field of READER_STATUS for b1: Type A reader status to 0 if the reader mode for Type A targets is not available for this host.
RQ10.87	Rel-11 upwards	The CLF shall set the reader status field of READER_STATUS for b1: Type A reader status to 1 if the reader mode for Type A targets is available for this Host.
RQ10.88	Rel-11 upwards	The CLF shall set the reader status field of READER_STATUS for b2: Type B reader status to 0 if the reader mode for Type B targets is not available for this host. 1 if the reader mode for Type B targets is available for this Host.
RQ10.89	Rel-11 upwards	The CLF shall set the reader status field of READER_STATUS for b2: Type B reader status to 1 if the reader mode for Type B targets is available for this Host.
NOTE:	Development of test cases for above listed RQs is FFS.	

5.7.2.5 Responses

5.7.2.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.2.5.

RQ10.44	If command WR_XCHG_DATA is successful, response shall be ANY_OK.
RQ10.45	If command WR_XCHG_DATA is rejected and /or not completed, response shall be ANY_E_OK.
RQ10.46	If Application level time-out occurred, the response shall be ANY_E_TIMEOUT.
RQ10.47	If Target has returned an RF error the response shall be 'WR_RF_ERROR'.
NOTE 1:	Development of test cases for RQ10.45, RQ10.46, RQ10.47 is FFS.
NOTE 2:	RQ10.44 is tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.

5.7.3 Reader application gates

5.7.3.1 Overview

Reference: ETSI TS 102 622 [1], clause 10.3.1.

There are no conformance requirements for the terminal for the referenced clause.

5.7.3.2 Command

5.7.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.3.2.

There are no conformance requirements for the terminal for the referenced clause.

5.7.3.3 Registry

5.7.3.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.3.3.

There are no conformance requirements for the terminal for the referenced clause.

5.7.3.4 Events and subclauses

5.7.3.4.1 Events

5.7.3.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.3.4.

There are no conformance requirements for the terminal for the referenced clause.

5.7.3.4.2 EVT_TARGET_DISCOVERED

5.7.3.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.3.4.1.

RQ10.48	The existence of an RF target in the field of the activated RF technology shall be signalled to the reader application gate by EVT_TARGET_DISCOVERED event.
RQ10.49	If there is a single target in the reader field and the activation of the target is completed then the value of STATUS parameter of EVT_TARGET_DISCOVERED event shall be equal to '00'.
RQ10.50	If there are several targets in the field irrespective of the RF technology then the value of STATUS parameter of EVT_TARGET_DISCOVERED event shall be equal to '03'.
NOTE 1:	RQ10.48 and RQ10.49 are tested in clauses 5.7.2.3.1 and 5.7.2.3.2 of the present document.
NOTE 2:	Development of test cases for RQ10.50 is FFS.

5.7.4 Procedures

5.7.4.1 Use of contactless reader application

5.7.4.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.4.1.

RQ10.51		On receiving the EVT_READER_REQUESTED event, the CLF shall enable the RF polling.
RQ10.52		Once RF polling is enabled, the CLF shall start the detecting of a target according to all reader RF gates of the host that have an open pipe.
RQ10.53		When a target has been detected and activated, the CLF shall notify the host via the event EVT_TARGET_DISCOVERD.
RQ10.54		If the several targets in the field then the procedure shall stop.
RQ10.55		When the CLF receives a response from the target to a forwarded C-APDU, the reader RF gate shall reply in sending back an R-APDU to the reader application gate.
RQ10.56	Rel-7 to Rel-10	If an application level time-out occurs before the CLF receives a response from the target, the CLF shall respond to the UICC with ANY_E_TIMEOUT.
RQ10.57	Rel-7 to Rel-10	Once the CLF responds with ANY_E_TIMEOUT, it shall discard data received from the target thereafter.
NOTE 1: RQ10.51, RQ10.52, RQ10.53 and RQ10.55 are tested in clauses 5.7.2.3.1 and 5.7.2.3.2.		
NOTE 2: Development of test cases for RQ10.54, RQ10.56 and RQ10.57 is FFS.		

5.7.4.2 Contactless reader not available

5.7.4.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.4.2

RQ10.90	Rel-11 upwards	After receiving ANY_GET_PARAMETER(OPERATING_STATUS), if the reader is not available the CLF shall report to the UICC that the reader is not available in the response ANY_OK (not available) as specified in RQ10.XB and RQ10.XI
RQ10.91	Rel-11 upwards	After receiving ANY_SET_PARAMETER(STATUS_EVENT_EN, on) from the host, the CLF shall reports to the UICC that the reader is (still not) available via EVT_READER_STATUS
RQ10.92	Rel-11 upwards	Once the reader becomes available for the host, the CLF activates the reader for the host and the reader RF gates signals this via the event reader status
NOTE: Development of test cases for above listed RQs is FFS.		

5.7.4.3 Error management

5.7.4.3.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 10.4.3

RQ10.93	Rel-11 upwards	If the CLF detected a non-recoverable RF error after WR_XCHG_DATA reception and the reader RF gate replies in sending the response ANY_OK with parameter "Error indicator" set to '01'.
RQ10.94	Rel-11 upwards	The CLF shall be able to restart the reader operation if the host sends the EVT_READER_REQUESTED after stopping a previous reader operation by sending the EVT_END_OPERATION upon RF error occurrence.
NOTE: Development of test cases for above listed RQs is FFS.		

5.8 Connectivity

5.8.1 Overview

Reference: ETSI TS 102 622 [1], clause 11.1.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.2 Connectivity gate and subclauses

5.8.2.1 Connectivity gate

Reference: ETSI TS 102 622 [1], clause 11.2.

RQ11.8	Rel-11 upwards	As destination gate, the connectivity gate shall accept at least one pipe from each host in its WHITELIST.
NOTE: Development of test cases for RQ11.8 is FFS.		

5.8.2.2 Commands

5.8.2.2.1 PRO_HOST_REQUEST

5.8.2.2.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.2.1.1.

RQ11.1	When the Terminal Host receives an PRO_HOST_REQUEST, it shall attempt to activate every host in the list of host identifiers during the Activation Duration.
RQ11.2	If every requested host has successfully been activated, the Terminal Host shall send an ANY_OK response with no parameters.
RQ11.3	If no requested host has been successfully activated, the Terminal Host shall send a response which is not ANY_OK.
NOTE: Development of test cases for above listed RQs is FFS.	

5.8.2.3 Events and subclauses

5.8.2.3.1 Events

Reference: ETSI TS 102 622 [1], clause 11.2.2.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.2.3.2 EVT_CONNECTIVITY

5.8.2.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.2.2.1.

RQ11.4	When the Terminal Host receives an EVT_CONNECTIVITY, it shall send a "HCI connectivity event" as defined in ETSI TS 102 223 [3].
NOTE: Development of test cases for above listed RQs is FFS.	

5.8.2.3.3 Void

Reference: ETSI TS 102 622 [1], clause 11.2.2.2.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.2.3.4 EVT_OPERATION_ENDED

5.8.2.3.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.2.2.3.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.2.3.5 EVT_TRANSACTION

5.8.2.3.5.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.2.2.4.

RQ11.5	When the Terminal Host receives an EVT_TRANSACTION, it shall launch an application associated to an NFC application in a UICC host identified by the AID on the parameter list.
--------	---

5.8.2.3.5.2 Test case 1: EVT_TRANSACTION

5.8.2.3.5.2.1 Test execution

There are no test case-specific parameters for this test case.

5.8.2.3.5.2.2 Initial conditions

- The HCI interface is idle; i.e. no further communication is expected.
- Conditions of TR4 are met and the terminal application is not currently running.
- A PIPEc is created and opened by the host with source G_{ID} = '41' to the connectivity gate of the terminal host.

5.8.2.3.5.2.3 Test procedure

Step	Direction	Description	RQ
1	HS → HCUT	Send EVT_TRANSACTION with AID and PARAMETERS as defined by the provider of the terminal application on PIPEc	
2	HCUT	The terminal application is launched	RQ11.5

5.8.2.4 Registry

5.8.2.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.2.3.

RQ11.6	Registry parameters which are in the range reserved for usage by ETSI TS 102 622 [1] but which are not defined in ETSI TS 102 622 [1] shall not be present in the registry.
NOTE:	Development of test cases for above listed RQs is FFS.

5.8.3 Connectivity application gate and subclauses

5.8.3.1 Connectivity application gate

5.8.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.3.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.3.2 Commands

5.8.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.3.1.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.3.3 Events and subclauses

5.8.3.3.1 Events

5.8.3.3.1.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.3.2.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.3.3.2 EVT_STANDBY

5.8.3.3.2.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.3.2.1.

RQ11.7	When the terminal host send EVT_STANDBY, it shall not contain parameters.
NOTE:	Development of test cases for above listed RQs is FFS.

5.8.3.4 Registry

5.8.3.4.1 Conformance requirements

Reference: ETSI TS 102 622 [1], clause 11.3.3.

There are no conformance requirements for the Terminal Host for the referenced clause.

5.8.4 Procedures

5.8.4.1 Use of connectivity gate

Reference: ETSI TS 102 622 [1], clause 11.4.1.

There are no conformance requirements for the Terminal Host for the referenced clause.

Annex A (informative): Bibliography

- ETSI TS 101 220: "Smart Cards; ETSI numbering system for telecommunication application providers".

Annex B (informative): Core specification version information

Unless otherwise specified, the versions of ETSI TS 102 622 [1] from which conformance requirements have been extracted are as follows:

Release	Latest version from which conformance requirements have been extracted
7	V7.10.0
8	V8.4.0
9	V9.4.0
10	V10.3.0
11	V11.3.0

Annex C (informative): Change history

The table below indicates all changes that have been incorporated into the present document since it was placed under change control.

Change history								
Date	Meeting	Plenary Doc	CR	Rev	Cat	Subject/Comment	Old	New
						Creation of the specification		7.0.0
2010-07	SCP #45	SCP(10)0195	001	1	F	Correction of card emulation test procedures and initial conditions	7.0.0	7.1.0
		SCP(10)0120	002	-	F	Removal of redundant steps.	7.0.0	7.1.0
		SCP(10)0120	003	-	F	Correction of test procedure 5.5.4.2.3	7.0.0	7.1.0
2010-10	SCP #46	SCP(10)0223	004	-	F	Correction of wrong test cases numbering	7.1.0	7.2.0
		SCP(10)0224	005	-	F	Deletion of RFU Gates test procedure 5.1.3.3	7.1.0	7.2.0
2011-01	SCP #47	SCP(11)0028	006	-	F	Corrections to allow for EVT_CARD_ACTIVATED being optional	7.2.0	7.3.0
		SCP(11)0029	007	-	F	Numbering correction	7.2.0	7.3.0
		SCP(11)0030	008	-	F	Modify RF registries setting test cases to consider the procedure in ETSI TS 102 622 clause 9.4.5	7.2.0	7.3.0
2011-03	SCP #48	SCP(11)0109	009	-	F	Specification of default of full power mode only for test execution	7.2.0	7.3.0
		SCP(11)0110	010	-	F	ANY_OPEN_PIPE command is sent to the pipe already opened	7.2.0	7.3.0
		SCP(11)0111	011	-	F	Update the requirements to version 7.8.0 of ETSI TS 102 622	7.2.0	7.3.0
		SCP(11)0114	014	-	F	Correction of card emulation test cases to allow for SWP DEACTIVATED state and low power mode	7.2.0	7.3.0
		SCP(11)0115	015	-	F	Correction of state transition for ISO/IEC 14443-3 type B	7.2.0	7.3.0
		SCP(11)0112	012	-	F	Creation of Rel-8 of ETSI TS 102 695-1 to cover Rel-8 conformance requirements of ETSI TS 102 622	7.3.0	8.0.0
2011-06	SCP #50	SCP(11)0233	016	-	F	Modification of card emulation test cases applicability from mandatory to conditional	8.0.0	8.1.0
		SCP(11)0234	017	-	F	Modifiac Test Cases on card emulation to include the data rate capabilities of the terminal	8.0.0	8.1.0
		SCP(11)0235	018	-	F	Clarification of the portion of the ATS which can be checked in TC 5.6.3.3.4.2.4	8.0.0	8.1.0
		SCP(11)0236	019	-	D	Editorial corrections of VENDOR_NAME typo	8.0.0	8.1.0
		SCP(11)0237	020	-	F	Corrections of card emulation test cases	8.0.0	8.1.0
		SCP(11)0238	021	-	F	Clarify the test of SAK on RF	8.0.0	8.1.0
2011-09	SCP #52	SCP(11)0299r1	022	1	B	Addition of reader mode test cases	8.1.0	8.2.0
2011-12	SCP #53	SCP(11)0347r1	023	1	F	Definition of card emulation trigger	8.1.0	8.2.0
		SCP(11)0348	024	-	F	Test case 5.6.3.3.4.3.3: More precision in testing CID bit	8.1.0	8.2.0
2012-09	SCP #56	SCP(12)000185	025	-	F	Definition of ATQA for Card emulation test cases	8.1.0	8.2.0
2012-12	SCP #57	SCP(12)000244	026	-	F	Correction of test procedure 5.6.1.2.3 and 5.6.3.3.4.2.3.3	8.2.0	8.3.0
2013-02	SCP #58	SCP(13)000031	027	-	B	Creation of Rel-9 of ETSI TS 102 695-1	8.3.0	9.0.0
2013-04	SCP #59	SCP(13)000077	029	-	B	Add the test spec to ETSI TS 102 695-1 for Type F (altered at implementation for consistency with the changes in CR 80r1)	9.0.0	9.1.0
		SCP(13)000078	030	-	F	Addition of low power mode execution for card emulation test cases	9.0.0	9.1.0
		SCP(13)000079	031	-	F	Tidy up of RQ status	9.0.0	9.1.0
		SCP(13)000080r1	032	1	F	Correction of test cases 5.6.1.2/3 to power on the field during the test procedure	9.0.0	9.1.0
		SCP(13)000082	034	-	F	Improved specification of no response expected behaviour	9.0.0	9.1.0
2013-07	SCP #60	SCP(13)000134r1	036	1	F	Test case 5.5.1.3.3: removal of delay by simulator	9.1.0	9.2.0
2013-10	SCP #61	SCP(13)000214	035	1	F	Card emulation test cases: update to set SESSION_IDENTITY and MODE	9.2.0	9.3.0
		SCP(13)000215	037	1	B	Additional tests for Type F	9.2.0	9.3.0
		SCP(13)000213r1	038	1	F	Definition of time to wait for response	9.2.0	9.3.0
2014-02	SCP #62	SCP(14)000018	039	-	F	Clarification for Type F initialization command and response parameters	9.3.0	9.4.0

Change history								
Date	Meeting	Plenary Doc	CR	Rev	Cat	Subject/Comment	Old	New
2014-06	SCP #64	SCP(14)000155	040	-	F	Addition of test case for EVT_TRANSACTION	9.3.0	9.4.0
		SCP(14)000154r1	041	1	F	Addition of test cases on Non ISO/IEC 14443-4 type A	9.3.0	9.4.0
		SCP(14)000156	043	-	F	Correction of ATQA coding	9.3.0	9.4.0
		SCP(14)000153r1	042	1	F	Event reception on lowest gate ID	9.3.0	9.4.0
2014-12	SCP #66	SCP(14)000313	044	-	B	Addition of card emulation test cases with EVT_CARD_ACTIVATED (Creation of Rel-10 of the test specification)	9.4.0	10.0.0
2015-02	SCP #67	SCP(15)000019	046	-	F	Addition of initialization using all defined gates test case	10.0.0	10.1.0
		SCP(15)000020	047	-	F	Test case 5.6.4.1.4: corrected to be consistent with other Type A test cases	10.0.0	10.1.0
		SCP(15)000021	048	-	F	Test case 5.6.4.1.5: correction of ATQA	10.0.0	10.1.0
		SCP(15)000022r1	049	1	F	Test case 5.6.4.4.4: various corrections	10.0.0	10.1.0
		SCP(15)000023	050	-	F	Test cases 5.6.4.2.2/3: update of ATQA value	10.0.0	10.1.0
		SCP(15)000024	051	-	F	Removal of explicit ANDs in applicability table	10.0.0	10.1.0
2015-07	SCP #69	SCP(15)000159	052	-	F	Corrections on test case 5.7.2.3.1.2	10.1.0	10.2.0
2015-10	SCP #70	SCP(15)000226	053	-	F	Test case 5.6.3.3.4.2.4: removal of RQ9.30	10.1.0	10.2.0
2015-10	SCP #70	SCP(15)000227	054	-	D	Removal of unused items in Clause 4.3	10.1.0	10.2.0
2015-10	SCP #70	SCP(15)000228	055	-	F	Test case 5.6.4.1.5/6: Clarification of the test procedures with respect to EVT_CARD_ACTIVATED	10.1.0	10.2.0
2015-10	SCP #70	SCP(15)000229r1	056	1	B	Creation of Rel-11 of the specification	10.2.0	11.0.0

History

Document history		
V11.0.0	March 2016	Publication