

ETSI TS 126 093 V3.2.0 (2000-06)

Technical Specification

**Universal Mobile Telecommunications System (UMTS);
Mandatory Speech Codec speech processing functions AMR
Speech Codec; Source Controlled Rate operation
(3G TS 26.093 version 3.2.0 Release 1999)**



Reference

RTS/TSGS-0426093UR1

Keywords

UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <http://www.etsi.org/tb/status/>

If you find errors in the present document, send your comment to:
editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2000.

All rights reserved.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key .

Contents

Foreword	5
1 Scope.....	6
2 Normative references	6
3 Definitions, symbols and abbreviations	6
3.1 Definitions	6
3.2 Symbols	7
3.3 Abbreviations.....	7
4 General.....	7
4.1 General organisation.....	7
5 AMR SCR operation.....	8
5.1 Transmit (TX) side	8
5.1.1 General operation	8
5.1.2 Functions of the TX SCR handler	9
5.1.2.1 AMR SCR Timing procedures.....	9
5.1.3 The TX part of the AN.....	10
5.2 Receive (RX) side.....	11
5.2.1 General operation	11
5.2.3 Demands on the RX SCR handler.....	11
5.3 AMR SID Information format	12
Annex A: AMR DTX handler for the GSM system (corresponding to GSM 06.93)	13
A.1 Scope.....	13
A.2 References.....	13
A.3 Definitions, symbols and abbreviations	14
A.3.1 Definitions	14
A.3.2 Symbols	14
A.3.3 Abbreviations.....	15
A.4 General.....	15
A.4.1 General organisation.....	15
A.5 Transmit (TX) side.....	16
A.5.1 General operation.....	16
A.5.1.1 Functions of the TX DTX handler	17
A.5.1.2 Functions of the TX Radio Subsystem.....	18
A.5.1.2.1 Functions of the TX Radio Subsystem for TCH/AFS	18
A.5.1.2.2 Functions of the TX Radio Subsystem for TCH/AHS.....	18
A.5.1.2.3 Functions of the Downlink TX Radio Subsystem for TFO	19
A.5.1.2.4 Functions of the TX Radio Subsystem for RATSCCH	19
A.6 Receive (RX) side.....	20
A.6.1 General operation.....	20
A.6.1.1 Functions of the RX radio subsystem.....	20
A.6.1.2 Functions of the RX DTX handler	21
Annex B: ETSI GSM-EFR SCR handler	22
B.1 Transmit (TX) side.....	22
B.1.1 General operation.....	22
B.1.2 Functions of the TX SCR handler.....	22
B.1.2.1 GSM-EFR SCR Timing procedures.....	22
B.1.3 The TX part of the AN.....	22
B.1.3.1 Demands on the TX part of the Access Network	22

B.2	Receive (RX) side.....	23
B.3	SID Information format	23
Annex C:	TIA IS-641 SCR Handler.....	24
C.1	TX-side	24
C.2	RX-side.....	24
C.3	SID Information format	24
Annex D:	TIA TDMA-US1 SCR Handler	25
D.1	TX-side	25
D.2	RX-side	25
D.3	SID Information format	25
Annex E:	ARIB PDC-EFR SCR Handler	26
E.1	Transmit (TX) side.....	26
E.1.1	General operation.....	26
E.1.2	Functions of the TX SCR handler.....	26
E.1.2.1	PDC_EFR SCR Timing procedures.....	26
E.1.3	The TX part of the AN.....	27
E.1.3.1	Demands on the TX part of the Access Network.....	27
E.2	Receive (RX) side.....	27
E.3	SID information format	27
Annex F (informative):	Change history.....	28

Foreword

This Technical Specification has been produced by the 3GPP.

The present document describes the operation of the Adaptive Multi Rate speech codec during Source Controlled Rate (SCR) operation within the 3GPP system.

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of this TS, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the specification;

1 Scope

This document describes the Source Controlled Rate (SCR) operation of the Adaptive Multi-Rate speech Codec in Codec Types UMTS_AMR and GSM_AMR for the UMTS system. The implementation of this SCR operation is mandatory in all UMTS equipment.

The description is structured according to the block diagram in figure 1. This structure of distributing the various functions between system entities is not mandatory for implementation, as long as the operation on the speech decoder output remains the same.

Annex A describes the Discontinuous Transmission (DTX) operation of the Adaptive Multi-Rate speech Codec in Codec Type GSM_AMR for the GSM system. This annex is the former GSM 06.93 (release 98).

Annexes B to E describe the SCR operation of the Adaptive Multi-Rate speech Codec in Codec Types GSM_EFR, TDMA_EFR, TDMA_US1 and PDC_EFR for the UMTS system.

2 Normative references

This document incorporates by dated and undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this document only when incorporated in it by amendment or revision. For undated references, the latest edition of the publication referred to applies.

- [1] 3G TS 26.071 : "AMR Speech Codec; General description".
- [2] 3G TS 26.073 : "AMR Speech Codec; ANSI-C code".
- [3] 3G TS 26.074 : "AMR Speech Codec; Test sequences".
- [4] 3G TS 26.090 : "AMR Speech Codec; Transcoding functions".
- [5] 3G TS 26.091 : "AMR Speech Codec; Error concealment of lost frames".
- [6] 3G TS 26.092 : "AMR Speech Codec; Comfort noise aspects".
- [7] 3G TS 26.094 : "AMR Speech Codec; Voice Activity Detector (VAD)".
- [8] 3G TS 26.101 : "AMR Speech Codec; Frame structure".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purpose of this document, the following definitions apply.

frame: Time interval of 20 ms, corresponding to the time segmentation of the Adaptive Multi Rate speech Codec, also used as a short term for a traffic frame.

traffic frame: Block of 95..244 information bits transmitted on the speech traffic channels.

SID frame: Frame that conveys information about the acoustic background noise.

speech frame: Traffic frame that has been classified as SPEECH_GOOD or SPEECH_BAD frame.

VAD flag: Boolean flag, generated by the VAD algorithm indicating the presence ("1") or the absence ("0") of a speech frame.

RX_TYPE: classifies the received frame.

TX_TYPE: classifies the frame to be transmitted.**hangover period:** A period of frames added at the end of a speech burst in which VAD flag = "0" and TX_TYPE is = "SPEECH_GOOD", this period provides the encoder with an extra window to derive the Comfort Noise parameters .

3.2 Symbols

For the purpose of this document, the following symbols apply.

N_{elapsed} Number of elapsed frames since the last updated SID frame.

3.3 Abbreviations

For the purpose of this document , the following abbreviations apply.

AN	Access Network
SCR	Source Controlled Rate operation
TS	Telecommunication Standard, Technical Specification
GSM	Global System for Mobile Telecommunication
GSM-EFR	GSM Enhanced Full Rate speech Codec
UE	User Equipment
PDC-EFR	ARIB PDC-EFR 6.7 kBit/s speech Codec
RAN	Radio Access Network
RX	Receive
SID	Silence Descriptor
TDMA-EFR	TIA IS-641 Enhanced speech Codec
TDMA-US1	TIA TDMA-US1 (12.2 kBit/s Codec, similar to GSM-EFR)
TX	Transmit
VAD	Voice Activity Detector

4 General

Source Controlled Rate operation (SCR) is a mechanism for the AMR Speech Codec, which allows to encode the input signal at a lower average rate by taking speech inactivity into account. The SCR scheme may be used for the following purposes:

- to save power in the User Equipment;
- to reduce the overall interference and load in the networks.

SCR in the transmitting path (uplink) shall be in operation in UEs, if commanded so by the network. The UE shall handle SCR in the receiving path (downlink) at any time, regardless, whether SCR in the transmitting path is commanded or not.

4.1 General organisation

The default SCR mechanism described in this document requires the following functions:

- a Voice Activity Detector (VAD) on the transmit (TX) side;
- evaluation of the background acoustic noise on the transmit (TX) side, in order to transmit characteristic parameters to the receive (RX) side;
- generation on the receive (RX) side of a similar noise, called comfort noise, during periods where the transmission is switched off.

The Voice Activity Detector (VAD) is defined in [7] and the AMR-mode comfort noise functions in [6]. Both are based partly on the speech Codec and its internal variables, defined in [4].

In addition to these functions, if the parameters arriving at the RX side are detected to be seriously corrupted by errors, the speech or comfort noise must be generated from substituted data in order to avoid seriously annoying effects for the listener. These functions are defined in [5].

An overall description of the speech processing parts can be found in [1]. An overview of one link SCR operation is shown in Figure 1.

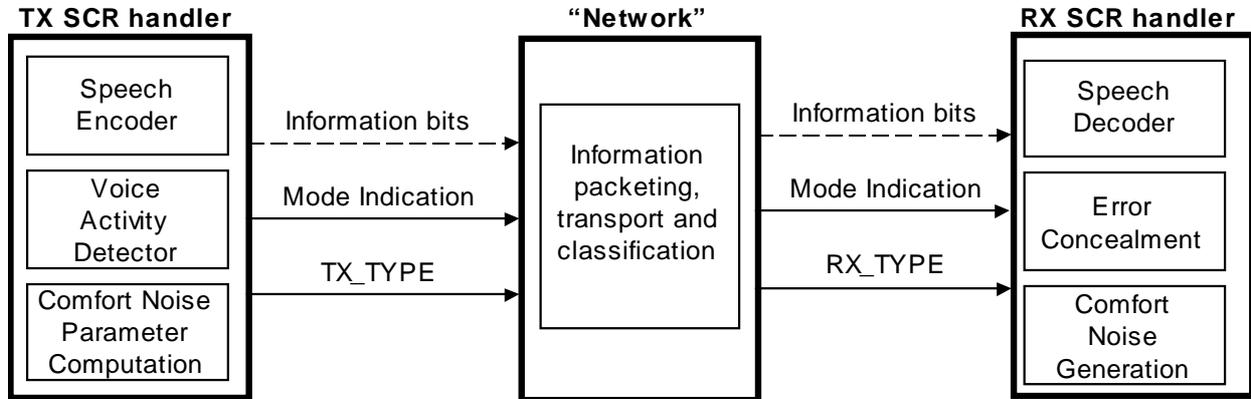


Figure 1: Block diagram of one link SCR operation

5 AMR SCR operation

5.1 Transmit (TX) side

A block diagram of the transmit side SCR functions is shown in Figure 2.

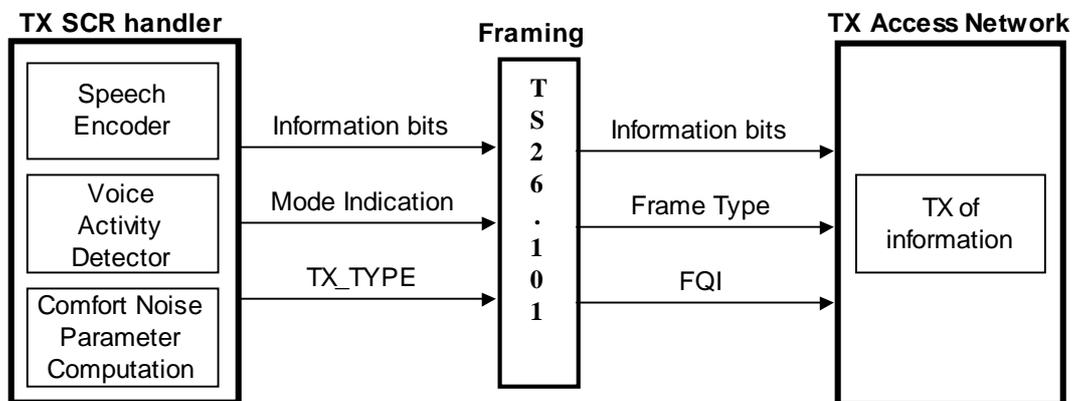


Figure 2: Block diagram of SCR functions at the TX side

5.1.1 General operation

The TX SCR handler passes traffic frames, individually marked by TX_TYPE, to the Framing unit. Each frame consists of bit fields containing the information bits, the codec mode indication, and the TX_TYPE. TX_TYPE shall be used to specify the contents of the frame. The table below provides an overview of the different TX_TYPES used and explains the required contents in the information bit and the mode indication bit fields.

Table 1: SCR TX_TYPE identifiers for UMTS_AMR and GSM_AMR

TX_TYPE	Information Bits	Mode Indication
SPEECH_GOOD	Speech frame, size 95..244 bits, depending on codec mode	Current codec mode
SPEECH_BAD	Corrupt speech frame (bad CRC), size 95..244 bits, depending on codec mode	Current codec mode
SID_FIRST	Marker for the end of talkspurt, no further information, all 35 comfort noise bits set to "0"	The codec mode that would have been used if TX_TYPE had been "SPEECH_GOOD"
SID_UPDATE	35 comfort noise bits	The codec mode that would have been used if TX_TYPE had been "SPEECH_GOOD"
SID_BAD	Corrupt SID update frame (bad CRC)	The codec mode that would have been used if TX_TYPE had been "SPEECH_GOOD"
NO_DATA	No useful information, nothing to be transmitted	No useful information

TX_TYPE = "NO_DATA" indicates that the Information Bit and Codec Mode fields do not contain any useful data (and should not be transmitted over AN). The purpose of this TX_TYPE is to provide the option to save network transmission between the transcoder and AN. Note, the TX_TYPES "SPEECH_BAD" and "SID_BAD" may occur in TFO and TrFO situations.

The scheduling of the frames for transmission on the Access Network is controlled by the TX SCR handler by the use of the TX_TYPE field.

5.1.2 Functions of the TX SCR handler

If TX SCR operation is disabled, the TX SCR handler continuously generates speech frames, i.e. frames marked with TX_TYPE="SPEECH_GOOD".

If the TX SCR operation is enabled, the VAD flag controls the TX SCR handler operation as described in the following paragraphs.

5.1.2.1 AMR SCR Timing procedures

To allow an exact verification of the TX SCR handler functions, all frames before the reset of the system are treated as if there were speech frames of an infinitely long time. Therefore, and in order to ensure the correct estimation of comfort noise parameters at RX SCR side, the first 7 frames after the reset or after enabling the SCR operation shall always be marked with TX_TYPE="SPEECH_GOOD", even if VAD flag ="0" (hangover period, see figure 3).


The Voice Activity Detector (VAD) shall operate all the time in order to assess whether the input signal contains speech or not. The output is a binary flag (VAD flag ="1" or VAD flag ="0", respectively) on a frame by frame basis (see [7]).

The VAD flag controls indirectly, via the TX SCR handler operations described below, the overall SCR operation on the transmit side.

Whenever VAD flag ="1", the speech encoder output frame along with mode information shall be passed directly to the AN, marked with TX_TYPE =" SPEECH_GOOD "

At the end of a speech burst (transition VAD flag ="1" to VAD flag ="0"), it takes eight consecutive frames to make a new updated SID analysis available (see [6]). Normally, the first seven speech encoder output frames after the end of the speech burst shall therefore be passed directly to the AN, marked with TX_TYPE =" SPEECH_GOOD " ("hangover period").

The end of the speech is then indicated by passing frame eight after the end of the speech burst to the AN, marked with TX_TYPE = "SID_FIRST" (see figure 3). SID_FIRST frames do not contain data.

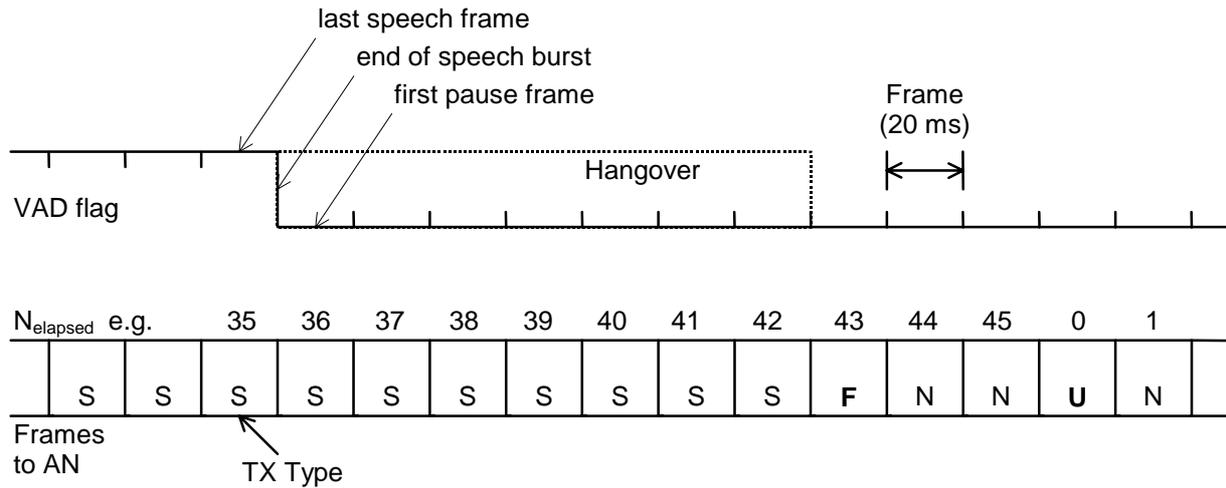

TX Types: "S" = SPEECH; "F" = SID_FIRST; "U" = "SID_UPDATE; "N" = NO DATA
 N_{elapsed} : No. of elapsed frames since last SID_UPDATE

Figure 3: Normal hangover procedure for AMR ($N_{\text{elapsed}} > 23$)

If, however, at the end of the speech burst, less than 24 frames have elapsed since the last SID_UPDATE frame was computed, then this last analysed SID_UPDATE frame should be passed to the AN whenever a SID_UPDATE frame is to be produced, until a new updated SID analysis is available (8 consecutive frames marked with VAD flag = "0"). This reduces the load on the network in cases where short background noise spikes are taken for speech, by avoiding the "hangover" waiting for the SID frame computation.

Once the SID_FIRST frame has been passed to the AN, the TX SCR handler shall at regular intervals compute and pass updated SID_UPDATE (Comfort Noise) frames to the AN as long as VAD flag = "0". SID_UPDATE frames shall be generated every 8th frame. The first SID_UPDATE shall be sent as the third frame after the SID_FIRST frame.

The speech encoder is operated in full speech modality if TX_TYPE = "SPEECH_GOOD" and otherwise in a simplified mode, because not all encoder functions are required for the evaluation of comfort noise parameters and because comfort noise parameters are only to be generated at certain times.

5.1.3 The TX part of the AN

The TX part of the AN has the following overall functionality. The transmission is cut after the transmission of a SID_FIRST frame when the speaker stops talking. During speech pauses the transmission is resumed at regular intervals for transmission of one SID_UPDATE frame, in order to update the generated comfort noise on the RX side. The operation of

the TX part of the AN is controlled by the TX SCR handler via the TX_TYPE.

All frames, marked with SPEECH_GOOD, SID_FIRST or SID_UPDATE shall be transmitted by the TX part of the AN.

5.2 Receive (RX) side

A block diagram of the receive side SCR functions is shown in Figure 3 below.

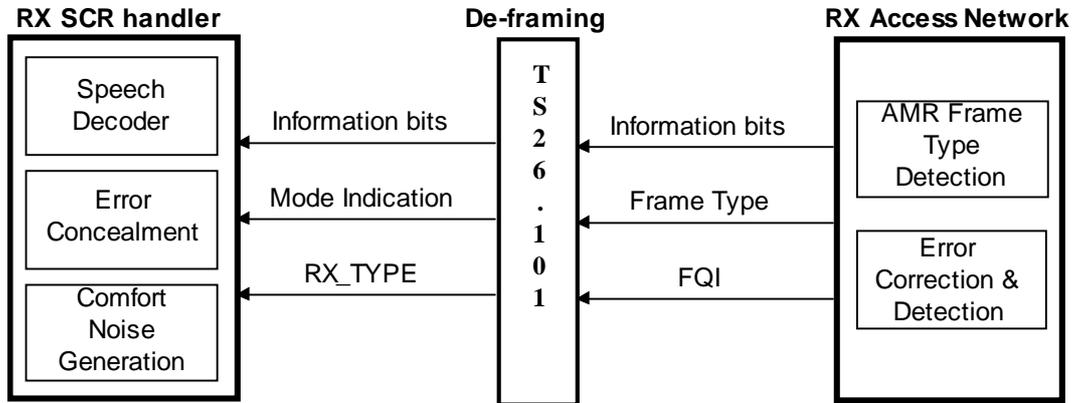


Figure 4: Block diagram of the receive side SCR functions

5.2.1 General operation

The AN passes all the received traffic frames to the RX SCR handler, classified with RX_TYPE, as described in Table 2 (see TS 26.102). The RX SCR handles the frame accordingly.

Table 2: RX_TYPE identifiers for AMR

RX_TYPE	Information Bits
SPEECH_GOOD	Speech frame without detected errors.
SPEECH_BAD	(likely) speech frame with bad CRC (or estimated to be very bad by the RX part of the AN)
SID_FIRST	This SID-frame marks the beginning of a comfort noise period.
SID_UPDATE	Correct SID update frame
SID_BAD	Corrupt SID update frame (bad CRC; applicable only for SID_UPDATE frames)
NO_DATA	Nothing useable was received. The synthesis mode of the previous frame type is used.

5.2.3 Demands on the RX SCR handler

The RX SCR handler is responsible for the overall SCR operation on the RX side. It consists of two main modes: SPEECH and COMFORT_NOISE. The initial mode shall be SPEECH.

The SCR operation on the RX side shall be as follows:

- The RX SCR handler shall enter mode SPEECH, when a frame classified as SPEECH_GOOD is received.

whenever a frame classified as SPEECH_GOOD is received the RX SCR handler shall pass it directly on to the speech decoder;

- if the RX SCR handler is in mode SPEECH, then frames classified as SPEECH_BAD or NO_DATA shall be substituted and muted as defined in [5]. Frames classified as NO_DATA shall be handled like SPEECH_BAD frames without valid speech information;
- frames classified as SID_FIRST, SID_UPDATE or SID_BAD shall bring the RX SCR handler into mode COMFORT_NOISE and shall result in comfort noise generation, as defined in [6]. SID_BAD frames shall be substituted and muted as defined in [5];;
- in mode COMFORT_NOISE the RX SCR handler shall ignore all unusable frames (NO_DATA, SPEECH_BAD); comfort noise generation shall continue, until timeout may apply ([5]).

5.3 AMR SID Information format

When the TX SCR handler is ordered by the network to operate in AMR mode with SCR operation enabled the SID_UPDATE frame format is according to [5]. This is the default and only mandatory operating mode of the SCR handler.

Annex A: AMR DTX handler for the GSM system (corresponding to GSM 06.93)

A.1 Scope

The present document gives a description of the general baseband operation of Adaptive Multi-Rate speech traffic channels in the transmitter and in the receiver of GSM Mobile Stations (MS)s and Base Station Systems (BSS)s during Discontinuous Transmission (DTX).

For clarity, the description is structured according to the block diagrams in figures 1 and 3. Except in the case described next, this structure of distributing the various functions between system entities is not mandatory for implementation, as long as the operation on the air interface and on the speech decoder output remains the same.

In the case of BSSs where the speech transcoder is located remote from the Base Transceiver Station (BTS), the implementation of the interfaces between the DTX handlers and the Radio Sub System (RSS) as described in the present document together with all their flags is mandatory, being part of the A-bis interface as described in GSM 08.60 and GSM 08.61.

The DTX functions described in this technical specification are mandatory for implementation in the GSM MSs. The receiver requirements are mandatory for implementation in all GSM BSSs, the transmitter requirements only for those where downlink DTX or Tandem Free Operation will be used.

A.2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.

- [1] 3G TS 21.004: "Digital cellular telecommunication system (Phase 2+); Abbreviations and acronyms".
- [2] 3G TS 24.008: "Digital cellular telecommunication system (Phase 2+); Mobile radio interface layer 3 specification".
- [3] 3G TS 25.003: "Digital cellular telecommunication system (Phase 2+); Channel coding".
- [4] 3G TS 25.005: "Digital cellular telecommunication system (Phase 2+); Radio transmission and reception".
- [5] 3G TS 25.008: "Digital cellular telecommunication system (Phase 2+); Radio subsystem link control".
- [6] 3G TS 25.009: "Digital cellular telecommunication system (Phase 2+); Link adaptation".
- [7] 3G TS 26.071: "Digital cellular telecommunications system (Phase 2+); Adaptive Multi-Rate (AMR) speech processing functions; General description".
- [8] 3G TS 26.073: "Digital cellular telecommunications system (Phase 2+); ANSI-C code for the GSM Adaptive Multi-Rate speech codec".

- [9] 3G TS 26.074: "Digital cellular telecommunications system (Phase 2); Test vectors for the GSM Adaptive Multi-Rate speech codec".
- [10] 3G TS 26.090: "Digital cellular telecommunications system (Phase 2+); Adaptive Multi-Rate speech transcoding".
- [11] 3G TS 26.091: "Digital cellular telecommunications system (Phase 2+); Substitution and muting of lost frame for Adaptive Multi-Rate speech traffic channels".
- [12] 3G TS 26.092: "Digital cellular telecommunications system (Phase 2+); Comfort noise aspects for Adaptive Multi-Rate speech traffic channels".
- [13] 3G TS 26.094: "Digital cellular telecommunications system (Phase 2+); Voice Activity Detector (VAD) for Adaptive Multi-Rate speech traffic channels".
- [14] 3G TS 28.060: "Digital cellular telecommunication system (Phase 2+); Inband control of remote transcoders and rate adaptors for Full Rate traffic channels".
- [15] 3G TS 28.061: "Digital cellular telecommunication system (Phase 2+); Inband Control of Remote Transcoders and Rate Adaptors for Half Rate traffic channels".
- [16] 3G TS 28.062: " Digital cellular telecommunications system; Inband Tandem Free Operation (TFO) of Speech Codecs".

A.3 Definitions, symbols and abbreviations

A.3.1 Definitions

For the purpose of the present document, the following definitions apply.

frame: Time interval of 20 ms, corresponding to the time segmentation of the Adaptive Multi Rate speech transcoder (3G TS 26.090 [9]), also used as a short term for a traffic frame.

traffic frame: Block of 95..244 information bits transmitted on the TCH/AFS or TCH/AHS speech traffic channels.

SID frame: Frame characterised by the SID (Silence Descriptor) gross bit patterns. It may convey information on the acoustic background noise.

speech frame: Traffic frame that has been classified as a SPEECH frame.

VAD flag: Boolean flag, generated by the VAD algorithm defined in 3G TS 26.094 indicating the presence ("1") or the absence ("0") of a speech frame.

RX_TYPE: flag with eight values, generated by the RX radio subsystem, indicating to the RX DTX handler the type of data in the current frame. Refer to Table 2.

TX_TYPE: flag with eight values, generated by the TX DTX handler, indicating to the TX radio subsystem the type of data in the current frame. Refer to Table 1.

hangover period: A period of 7 frames added at the end of a speech burst in which VAD flag ="0" and TX_TYPE is "SPEECH".

A.3.2 Symbols

For the purpose of the present document, the following symbols apply.

N_{elapsed} Number of elapsed frames since the last updated SID frame.

A.3.3 Abbreviations

For the purpose of the present document, the following abbreviations apply.

BSC	Base Station Controller
BSS	Base Station System
BTS	Base Transceiver Station
CHD	Channel Decoder
CHE	Channel Encoder
DTX	Discontinuous Transmission
ETS	European Telecommunication Standard
FACCH	Fast Associated Control CHannel
GSM	Global System for Mobile Telecommunications
MS	Mobile Station
RATSCCH	Robust Amr Traffic Synchronised Control CHannel
RSS	Radio Sub System
RX	Receive
SACCH	Slow Associated Control CHannel
SID	SIlence Descriptor
TX	Transmit
VAD	Voice Activity Detector

For abbreviations not given in this subclause, see 3G TS 21.004.

A.4 General

Discontinuous Transmission (DTX) is a mechanism, which allows the radio transmitter to be switched off most of the time during speech pauses for the following two purposes:

- to save power in the Mobile Station (MS);
- to reduce the overall interference level over the air interface.

DTX in uplink shall be in operation within the GSM MS, if commanded so by the network, see 3G TS 204.08. The MS shall handle DTX in downlink at any time, regardless, whether DTX in uplink is commanded or not.

A.4.1 General organisation

The overall DTX mechanism described in the present document requires the following functions:

- a Voice Activity Detector (VAD) on the transmit (TX) side;
- evaluation of the background acoustic noise on the transmit (TX) side, in order to transmit characteristic parameters to the receive (RX) side;
- generation on the receive (RX) side of a similar noise, called comfort noise, during periods where the radio transmission is switched off.

The Voice Activity Detector (VAD) is defined in 3G TS 26.094 and the comfort noise functions in 3G TS 26.092. Both are based partly on the speech transcoder and its internal variables, defined in 3G TS 26.090.

In addition to these functions, if the parameters arriving at the RX side are detected to be seriously corrupted by errors, the speech or comfort noise must be generated from substituted data in order to avoid seriously annoying effects for the listener. This function is defined in 3G TS 26.091.

An overall description of the speech processing parts can be found in 3G TS 26.071.

The description for Tandem Free Operation is given in 3G TS 28.062.

A.5 Transmit (TX) side

A block diagram of the transmit side DTX functions is shown in figure 1.

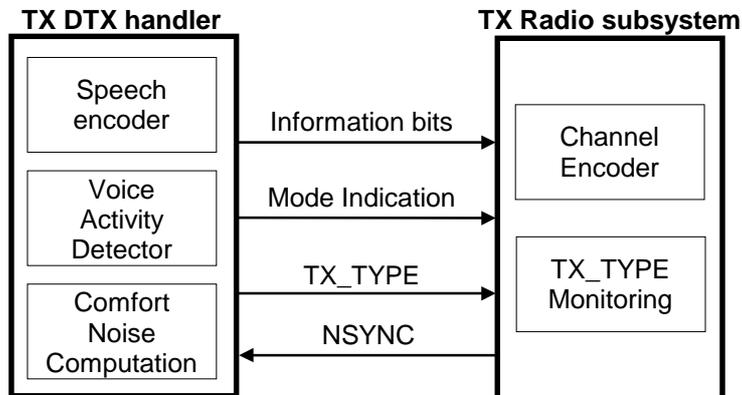


Figure 5: Block diagram of the transmit side DTX functions

A.5.1 General operation

The TX DTX handler passes traffic frames, individually marked by TX_TYPE, to the Radio Subsystem (RSS). Each frame passed to the RSS consists of bit fields containing the information bits, the codec mode indication, and the TX_TYPE. TX_TYPE is used to specify the contents of the frame. The table below provides an overview of the different TX_TYPES used and explains the required contents in the information bit and the mode indication bit fields. In case of ongoing Tandem Free Operation (see 3G TS 28.062) frames with errors may arrive in downlink in the BTS.

Table 3: TX TYPE identifiers

TX_TYPE Legend	Information Bits	Mode Indication
SPEECH_GOOD	speech frame, size 95..244 bits depending on codec mode; no errors known.	current code mode
SPEECH_DEGRADED (only in downlink in TFO)	Speech frame, size 95..244 bits, depending on codec mode; there might be errors in class 2 bits.	current codec mode
SPEECH_BAD (only in downlink in TFO)	Speech frame, size 95..244 bits, depending on codec mode; there are errors in class 1 bits.	current codec mode
SID_FIRST	marks the end of a talkspurt, respectively the beginning of a speech pause; does not contain information bits.	the codec mode that would have been used if TX_TYPE had been SPEECH
SID_UPDATE	comfort noise, 35 bits; no errors known	the codec mode that would have been used if TX_TYPE had been SPEECH
SID_BAD (only in downlink in TFO)	comfort noise, 35 bits; errors detected, parameters unusable	the codec mode that would have been used if TX_TYPE had been SPEECH
ONSET (only in downlink in TFO)	announces the beginning of a speech burst; does not contain information bits	the codec mode of the following speech frame
NO_DATA	no useful information	no useful information

TX_TYPE = "NO_DATA" indicates that the Information Bit and Codec Mode fields do not contain any useful data (and shall not be transmitted over the air interface). The purpose of this TX_TYPE is to provide the option to save transmission between the transcoder and the radio base station if a packet oriented transmission is used.

The scheduling of the frames for transmission on the air interface is controlled by the TX DTX handler by the use of the TX_TYPE field.

A.5.1.1 Functions of the TX DTX handler


To allow an exact verification of the TX DTX handler functions, all frames before the reset of the system are treated as if there were speech frames of an infinitely long time. Therefore, and in order to ensure the correct estimation of comfort noise parameters at RX DTX side, the first 7 frames after the reset or after enabling the DTX operation shall always be marked with TX_TYPE= " SPEECH_GOOD ", even if VAD flag ="0" (hangover period, see figure 2).

The Voice Activity Detector (VAD) shall operate all the time in order to assess whether the input signal contains speech or not. The output is a binary flag (VAD flag ="1" or VAD flag ="0", respectively) on a frame by frame basis (see 3G TS 26.094).

The VAD flag controls indirectly, via the TX DTX handler operations described below, the overall DTX operation on the transmit side.

Whenever VAD flag ="1", the speech encoder output frame along with mode information shall be passed directly to the radio subsystem (RSS), marked with TX_TYPE= " SPEECH_GOOD "

At the end of a speech burst (transition VAD flag ="1" to VAD flag ="0"), it takes 8 consecutive frames to make a new updated SID analysis available at receiver side (see 3G TS 26.092). Normally, the first 7 speech encoder output frames after the end of the speech burst shall therefore be passed directly to the RSS, marked with TX_TYPE= " SPEECH_GOOD " ("hangover period"). The end of the speech is then indicated by passing frame 8 after the end of the speech burst to the RSS, marked with TX_TYPE = "SID_FIRST" (see figure 2).

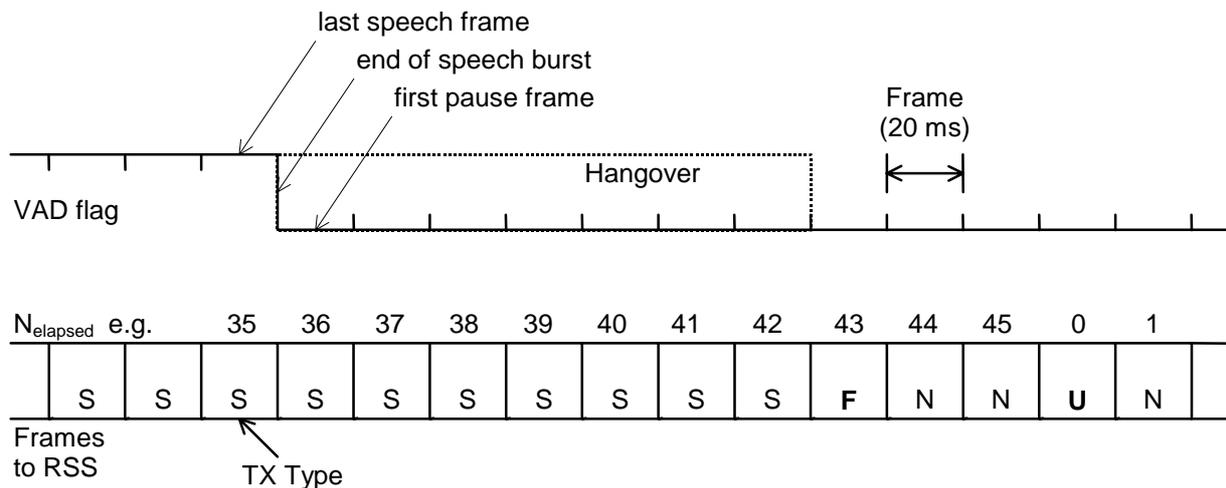

TX Types: "S" = SPEECH; "F" = SID_FIRST; "U" = "SID_UPDATE; "N" = NO DATA
 $N_{elapsed}$: No. of elapsed frames since last SID_UPDATE

Figure 6: Normal hangover procedure ($N_{elapsed} > 23$)

If, however, at the end of the speech burst, less than 24 frames have elapsed since the last SID_UPDATE frame was computed and passed to the RSS, then this last analysed SID_UPDATE frame shall repeatedly be passed to the RSS whenever a SID_UPDATE frame is to be produced, until a new updated SID analysis is available (8 consecutive frames marked with VAD flag ="0"). This reduces the activity on the air in cases where short background noise spikes are taken for speech, by avoiding the "hangover" waiting for the SID frame computation.

Once the first SID analysis after the end of a speech burst has been computed and the SID_FIRST frame has been passed to the Radio Subsystem, the TX DTX handler shall at regular intervals compute and pass updated SID_UPDATE (Comfort Noise) frames to the Radio Subsystem (RSS) as long as VAD flag = "0". SID_UPDATE frames shall be generated every 8th frame. The first SID_UPDATE shall be sent as the third frame after the SID_FIRST frame.

The speech encoder is operated in full speech modality if TX_TYPE = " SPEECH_GOOD " and otherwise in a simplified mode, because not all encoder functions are required for the evaluation of comfort noise parameters and because comfort noise parameters are only to be generated at certain times.

In order to ensure TX/RX DTX handler synchronisation at handover, the uplink TX DTX handler in the MS shall accept messages from TX RSS with control parameter NSYNC, resulting in the following operation during the next NSYNC frames:

- The TX DTX handler shall send SID_UPDATE instead of NO_DATA frames to the TX RSS.
- Whenever, during that period VAD flag = 1, the TX DTX handler shall continue to produce SPEECH frames for at least the rest of the period and, in addition, the hangover period.

A.5.1.2 Functions of the TX Radio Subsystem

The TX Radio Subsystem has the following overall functionality. The radio transmission is cut after the transmission of a SID_FIRST frame when the speaker stops talking. During speech pauses the transmission is resumed at regular intervals for transmission of one SID_UPDATE frame, in order to update the generated comfort noise on the RX side (and to improve the measurement of the link quality by the RSS). Note that the transcoder knows what frames to send. In the case when nothing is to be transmitted it outputs frames marked with TX_TYPE = "NO_DATA".

Within the TX Radio Subsystem the TX_TYPE Monitoring unit controls the operation of the Channel Encoder (as specified in 3G TS 25.003) and the Transmission of the frame. Control input to the TX_TYPE Monitoring unit is the TX_TYPE. Control output and input to the Channel Encoder are indicators specifying the frame format. These frame format indicators are defined in 3G TS 25.003, they are different for TCH/AFS and TCH/AHS.

A.5.1.2.1 Functions of the TX Radio Subsystem for TCH/AFS

The TX Radio Subsystem operates in the following way regarding DTX (without TFO):

- all frames marked with TX_TYPE = "SPEECH_GOOD" are scheduled for normal channel coding and transmission. The frame format for CHE operation shall be SPEECH. If, however, the previous frame was not of TX_TYPE = "SPEECH_GOOD", an ONSET frame format followed by SPEECH_GOOD shall be signalled to the CHE;
- for frames marked with TX_TYPE = "SID_FIRST" a SID_FIRST frame format is signalled to the CHE;
- frames marked with TX_TYPE = "SID_UPDATE" are scheduled for SID_UPDATE frame channel coding and transmission. The frame format signalled to CHE is SID_UPDATE;
- for frames marked with TX_TYPE = "NO_DATA" no processing or transmission is carried out.

If a SID_FIRST frame or a SID_UPDATE frame is stolen for Fast Associated Control Channel (FACCH) signalling purposes, then the subsequent frame shall be scheduled for transmission of the SID_FIRST or SID_UPDATE frame (whichever applies) instead.

SPEECH frames shall override possible SID_FIRST or SID_UPDATE frames in exceptional cases.

At handover, TX/RX DTX handler synchronisation shall be initiated. At the time instant before the MS starts sending to the new base station, a message shall be sent to the uplink TX DTX handler with the parameter NSYNC = 12.

A.5.1.2.2 Functions of the TX Radio Subsystem for TCH/AHS

The TX Radio Subsystem operates in the following way regarding DTX:

- all frames marked with TX_TYPE = "SPEECH_GOOD" are scheduled for normal channel coding and transmission. The frame format for CHE operation shall be SPEECH. However, if the previous frame was of TX_TYPE = "SID_FIRST", a SID_FIRST_INH frame format followed by SPEECH_GOOD shall be signalled to the CHE. If the previous frame was of TX_TYPE = "SID_UPDATE", a SID_UPDATE_INH frame format followed by SPEECH_GOOD shall be signalled to the CHE. If the previous frame was of TX_TYPE "NO_DATA", an ONSET frame format followed by SPEECH_GOOD shall be signalled to the CHE;
- for frames marked with TX_TYPE = "SID_FIRST" a SID_FIRST_P1 frame format is signalled to the CHE. Note: All 4 TDMA frames carrying the bits of this frame shall be transmitted. The Mode Indication received with the frame is stored for potential use in the next frame;

- for frames marked with TX_TYPE = "SID_UPDATE" a SID_UPDATE frame format is signalled to the CHE. All 4 TDMA frames carrying the bits of this frame shall be transmitted;
- for frames marked with TX_TYPE = "NO_DATA", no processing or transmission is carried out. However, if the preceding frame was marked with TX_TYPE = "SID_FIRST", a SID_FIRST_P2 frame format is signalled to CHE. Note: The 2 TDMA frames carrying bits of this frame shall be transmitted. If, depending on the current frame number, the Mode Indication is to be transmitted with these TDMA frames, the Mode Indication shall be used that was stored during the processing of the preceding SID_FIRST frame.

If a SID_FIRST frame or the first SID_UPDATE frame after a SID_FIRST frame, is affected by Fast Associated Control Channel (FACCH) signalling purposes, then the SID_FIRST or SID_UPDATE frame (whichever applies) shall be re-scheduled for transmission immediately after the FACCH signalling.

SPEECH frames shall override possible SID_FIRST or SID_UPDATE frames in exceptional cases.

At handover, TX/RX DTX handler synchronisation shall be initiated. At the time instant before the MS starts sending to the new base station, a message shall be sent to the uplink TX DTX handler with the parameter NSYNC = 12.

A.5.1.2.3 Functions of the Downlink TX Radio Subsystem for TFO

The TX Radio Subsystem in the BTS shall in addition operate in the following way regarding DTX, if TFO is ongoing (see 3G TS 28.062):

- Frames with TX_TYPE = SPEECH_GOOD, SID_FIRST and SID_UPDATE shall be handled as usual in DTX, regardless whether DTX in downlink is requested or not. Also NO_DATA shall be handled as usual, if DTX is requested.
- Frames with TX_TYPE = NO_DATA shall be replaced by SID_FILLER frames, if DTX in downlink is not requested. By this the radio transmission continues in downlink, although no parameters are transmitted in speech pauses on the Abis interface. The MS generates Comfort Noise in these speech pauses.
- Frames with TX_TYPE = SPEECH_DEGRADED shall be handled exactly like SPEECH_GOOD frames.
- For frame with TX_TYPE = SPEECH_BAD and SID_BAD the CHE shall perform its regular processing, but then shall invert the six, respectively 14 CRC bits before convolutional encoding and transmitting the frames on the air interface. By this the error concealment mechanism in the MS is triggered to handle these corrupted frames.
- ONSET frames may be ignored by the TX Radio Subsystem and need not to be processed.

Definition: SID_FILLER frames are like SID_BAD frames, but with all information bits set to "1". The 14 CRC bits shall artificially be inverted by the CHE before convolutional encoding and transmission.

A.5.1.2.4 Functions of the TX Radio Subsystem for RATSCCH

During regular speech transmission (in the middle of a speech burst) RATSCCH replaces (steals) one (TCH/AFS) respectively two (TCH/AHS) speech frames (see 3G TS 25.009). Also in all non speech cases the RATSCCH shall be handled like speech. The respective RATSCCH frame formats (RATSCCH in case of TCH/AFS, respectively RATSCCH_MARKER and RATSCCH_DATA in case of TCH/AHS) shall be signalled to the CHE.

If RATSCCH has to be sent during a speech pause in DTX, then first an ONSET frame shall be signalled to the CHE, followed by the RATSCCH frame(s) and finally by the respective SID_FIRST frame(s).

If a SID_UPDATE frame is affected by RATSCCH signalling, then the SID_UPDATE frame shall be re-scheduled for transmission immediately after the RATSCCH signalling.

FACCH should be handled in the same way as a RATSCCH, i.e. like a short speech burst.

A.6 Receive (RX) side

A block diagram of the receive side DTX functions is shown in figure 3.

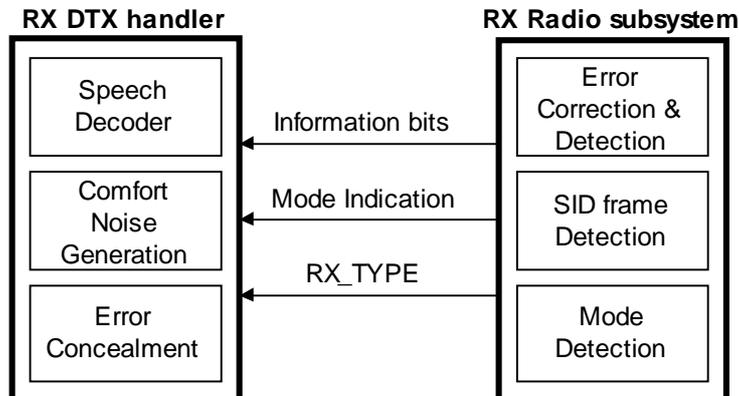


Figure 7: Block diagram of the receive side DTX functions

A.6.1 General operation

Whatever their context (speech, SID, FACCH or none), the RSS continuously passes the received traffic frames to the RX DTX handler, individually marked by various pre-processing functions with RX_TYPE as described in subclause 6.1.1 and table 2, which serves to classify the traffic frame. This classification allows the RX DTX handler to determine in a simple way how the received frame is to be handled.

Table 4: RX_TYPE identifiers

RX_TYPE Legend	Description
SPEECH_GOOD	Speech frame with CRC OK, Channel Decoder soft values also OK
SPEECH_DEGRADED	Speech frame with CRC OK, but 1B bits and class2 bits may be corrupted
SPEECH_BAD	(likely) speech frame, bad CRC (or very bad Channel Decoder measures)
SID_FIRST	first SID marks the beginning of a comfort noise period
SID_UPDATE	SID update frame (with correct CRC)
SID_BAD	Corrupt SID update frame (bad CRC; applicable only for SID_UPDATE frames)
ONSET	ONSET frames precede the first speech frame of a speech burst
NO_DATA	Nothing useable (for the speech decoder) was received. This applies for the cases of no received frames (DTX) or received FACCH or RATSCCH or SID_FILLER signalling frames.

A.6.1.1 Functions of the RX radio subsystem

The RX radio subsystem uses a combination of gross-bit markers, receiver measurements, and CRC checks to classify each received frame. The basic operation for each frame is outlined below:

the receiver first searches for the RATSCCH, SID_UPDATE, SID_FIRST or ONSET gross bit markers.

- If the RATSCCH signalling is detected, then the RATSCCH frame (TCH/AFS) respectively the RATSCCH_MARKER and RATSCCH_DATA frames (TCH/AHS) shall be decoded and handled as described in 3G TS 25.009. They shall be passed to the RX DTX handler as a NO_DATA frame(s).
- If the SID_FIRST marker is detected the frame is passed to the RX DTX handler as a SID_FIRST frame.
- If the SID_UPDATE marker is detected, then the frame shall be decoded and passed to the RX DTX handler as a SID_UPDATE or a SID_BAD or a NO_DATA frame, depending on the CRC and the information bits, along

with the comfort noise parameters, if applicable. A NO_DATA frame shall be passed on, if all information bits of a SID_UPDATE frame are set to "1" and the CRC is bad (see SID_FILLER in subclause 5.1.2.3).

- If the ONSET marker is detected, then an ONSET frame shall be passed to the RX DTX handler.
- if neither SID_UPDATE nor SID_FIRST markers are detected, the frame shall be channel decoded assuming it to be a speech frame. Depending on the CRC for speech frame channel decoding along with other receiver measurements the frame shall then be passed to the RX DTX handler marked as either SPEECH_GOOD, SPEECH_DEGRADED, SPEECH_BAD or NO_DATA frame.

A.6.1.2 Functions of the RX DTX handler

The RX DTX handler is responsible for the overall DTX operation on the RX side. It consists of two main modes: SPEECH and COMFORT_NOISE. The initial mode shall be SPEECH.

The DTX operation on the RX side shall be as follows:

- The RX DTX handler shall enter mode SPEECH, when a frame classified as SPEECH_GOOD or SPEECH_DEGRADED is received. ONSET frames may be taken into account to identify the beginning of a speech burst;
- whenever a frame classified as SPEECH_GOOD is received the RX DTX handler shall pass it directly on to the speech decoder;
- if the RX DTX handler is in mode SPEECH, then frames classified as SPEECH_DEGRADED, SPEECH_BAD or NO_DATA shall be substituted and muted as defined in 3G TS 26.091. Frames classified as NO_DATA shall be handled like SPEECH_BAD frames without valid speech information;

frames classified as SID_FIRST, SID_UPDATE or SID_BAD shall bring the RX DTX handler into mode COMFORT_NOISE and shall result in comfort noise generation, as defined in 3G TS 26.092. SID_BAD frames shall be substituted and muted as defined in 3G TS 26.091. In mode COMFORT_NOISE the RX DTX handler shall ignore all unusable frames (NO_DATA, SPEECH_BAD) delivered by the RSS; comfort noise generation shall continue, until timeout may apply (see 3G TS 26.091).

Annex B: ETSI GSM-EFR SCR handler

The interworking operation of AMR (only 12.2 kbit/s mode) with GSM-EFR is F.F.S. This annex provides the basis for the AMR operation under this condition.

B.1 Transmit (TX) side

Speech coding interworking aspects with ETSI-EFR are described in [TBD].

B.1.1 General operation

The TX SCR handler passes traffic frames, individually marked by TX_TYPE, to the TX Framing Unit part of the Access Network. Each frame passed to the AN consists of bit fields containing the information bits, the codec mode indication, and the TX_TYPE. TX_TYPE shall be used to specify the contents of the frame. The table below provides an overview of the different TX_TYPES used and explains the required contents in the information bit and the mode indication bit fields.

Table 5: TX TYPE identifiers for GSM-EFR

TX_TYPE	Legend	Information Bits	Mode Indication
00	SPEECH	speech frame, size depending on codec mode	current codec mode
10	SID_UPDATE	comfort noise information , information bits	the codec mode that would have been used if TX_TYPE had been 00 (SPEECH)
11	NO_DATA	no useful information	no useful information

TX_TYPE = "NO_DATA" indicates that the Information Bit and Codec Mode fields do not contain any useful data (and should not be transmitted over AN). The purpose of this TX_TYPE is to provide the option to save network transmission between the transcoder and AN.

The scheduling of the frames for transmission on the Access Network is controlled by the TX SCR handler by the use of the TX_TYPE field and the given SCR operation mode.

B.1.2 Functions of the TX SCR handler

B.1.2.1 GSM-EFR SCR Timing procedures

To allow an exact verification of the TX SCR handler functions, all frames before the reset of the system are treated as if there were speech frames of an infinitely long time.

The SID_UPDATE timing is according to ETSI GSM 06.81.

B.1.3 The TX part of the AN

B.1.3.1 Demands on the TX part of the Access Network

The TX part of the AN operates in the following way regarding SCR:

- frames marked with TX_TYPE = (SPEECH) are scheduled for transmission.
- frames marked with TX_TYPE = (SID_UPDATE) are scheduled for transmission

- for frames marked with TX_TYPE = (NO_DATA) no processing or transmission is carried out.

SPEECH frames shall override other frames in these exceptional cases.

B.2 Receive (RX) side

Whatever their context (speech, SID, or none), the deframing unit after AN continuously passes the received traffic frames to the RX SCR handler, individually marked by various pre-processing functions with a 3 bit type indicator RX_TYPE described in Table 4, which serve to classify the traffic frame. This classification allows the RX SCR handler to determine in a simple way how the received frame is to be handled.

Table 6: RX_TYPE identifiers for GSM-EFR

RX_TYPE	Legend	Description
000	SPEECH_GOOD	Speech frame with CRC OK, soft values in the RX part of AN also OK
001	SPARE	Spare
010	SPEECH_BAD	(likely) speech frame, bad CRC (or estimated to be very bad by the RX part of the AN)
011	SPARE	Spare
100	SPARE	Spare
101	SID_UPDATE	Correct SID update frame
110	SID_BAD	Corrupt SID update frame (bad CRC ; applicable only for SID_UPDATE frames)
111	NO_DATA	Nothing useable was received. The synthesis mode of the previous frame type is used.

B.3 SID Information format

When the TX SCR handler is ordered by the network to operate in ETSI GSM-EFR mode with SCR operation turned on the SID_UPDATE frame format is according to ETSI GSM 06.62. (38 +5 bits).

Annex C: TIA IS-641 SCR Handler

The interworking operation of AMR (only 7.4 kbit/s mode) with IS-641 (TDMA-EFR) is F.F.S. This annex provides the basis for the AMR operation under this condition.

C.1 TX-side

F.F.S

C.2 RX-side

F.F.S

C.3 SID Information format

When the TX SCR handler is ordered by the network to operate in IS-641 mode with SCR operation turned on the SID_UPDATE frame format is according to IS-641-A Chapter 6 The SID_UPDATE timing is according to IS 641-A.

Speech coding interworking aspects with IS-641 are described in [TBD].

Annex D: TIA TDMA-US1 SCR Handler

The interworking operation of AMR (only 12.2 kbit/s mode) with TDMA-US1 is F.F.S. This annex provides the basis for the AMR operation under this condition.

D.1 TX-side

F.F.S

D.2 RX-side

F.F.S

D.3 SID Information format

F.F.S.

Annex E: ARIB PDC-EFR SCR Handler

The interworking operation of AMR (only 6.7 kbit/s mode) with PDC-EFR-6.7 is F.F.S. This annex provides the basis for the AMR operation under this condition.

E.1 Transmit (TX) side

E.1.1 General operation

The TX SCR handler passes traffic frames, individually marked by TX_TYPE, to the TX Framing Unit part of the Access Network. Each frame passed to the AN consists of bit fields containing the information bits, the codec mode indication, and the TX_TYPE. TX_TYPE shall be used to specify the contents of the frame. The table below provides an overview of the different TX_TYPEs used and explains the required contents in the information bit and the mode indication bit fields.

Table 7: TX TYPE identifiers for PDC_EFR

TX_TYPE	Legend	Information Bits	Mode Indication
000	SPEECH	speech frame, size depending on codec mode	current code mode
010	POST1	comfort noise information , information bits	the codec mode that would have been used if TX_TYPE had been 00 (SPEECH)
011	NO_DATA	no useful information	no useful information
001	POST0 (end of speech marker, start of CN generation)	no useful information,	the codec mode that would have been used if TX_TYPE had been 00 (SPEECH)
100	PRE (end of CN marker, start of speech generation)	no useful information,	the codec mode that would have been used if TX_TYPE had been 00 (SPEECH)

TX_TYPE = "NO_DATA" indicates that the Information Bit and Codec Mode fields do not contain any useful data (and should not be transmitted over AN). The purpose of this TX_TYPE is to provide the option to save network transmission between the transcoder and AN.

The scheduling of the frames for transmission on the Access Network is controlled by the TX SCR handler by the use of the TX_TYPE field and the given SCR operation mode.

Speech coding interworking aspects with PDC-EFR are described in XX.YY.D.[TBD]

E.1.2 Functions of the TX SCR handler

E.1.2.1 PDC_EFR SCR Timing procedures

To allow an exact verification of the TX SCR handler functions, all frames before the reset of the system are treated as if there were speech frames of an infinitely long time.

SID-frame timing is according to ARIB XXX.

E.1.3 The TX part of the AN

E.1.3.1 Demands on the TX part of the Access Network

The TX part of the AN operates in the following way regarding SCR:

- frames marked with TX_TYPE = (SPEECH) are scheduled for transmission.
- frames marked with TX_TYPE = (POST0) are scheduled for transmission.
- frames marked with TX_TYPE = (POST1) are scheduled for transmission
- frames marked with TX_TYPE = (PRE) are scheduled for transmission
- for frames marked with TX_TYPE = (NO_DATA) no processing or transmission is carried out.

SPEECH frames shall override other frames in these exceptional cases.

E.2 Receive (RX) side

Whatever their context (speech, SID, or none), the deframing unit after AN continuously passes the received traffic frames to the RX SCR handler, individually marked by various pre-processing functions with a 3 bit type indicator RX_TYPE described in Table 6, which serve to classify the traffic frame. This classification allows the RX SCR handler to determine in a simple way how the received frame is to be handled.

Table 8: RX_TYPE identifiers for PDC_EFR

RX_TYPE	Legend	Description
000	SPEECH_GOOD	Speech frame with CRC OK, soft values in the RX part of AN also OK
001	PRE	Next frame should be a Speech frame
010	SPEECH_BAD	(likely) speech frame, bad CRC (or estimated to be very bad by the RX part of the AN)
011	SPARE	Spare
100	POST0	This SID-frame marks the beginning of a comfort noise period.
101	POST1	Correct SID update frame
110	POST1_BAD	Corrupt SID update frame (bad CRC; applicable only for POST1 frames)
111	NO_DATA	Nothing useable was received. The synthesis mode of the previous frame type is used.

E.3 SID information format

When the TX SCR Handler is ordered by the network to operate in PDC-EFR mode with SCR turned on the SID_UPDATE frame format is according to ARIB TBD (134 bits).

Annex F (informative): Change history

Tdoc	SPEC	CR	RE	VER	SUBJECT	CAT	NEW
SA#04				-	Approved at S#4 Plenary		3.0.0
-				3.0.0	Reformatted in 3GPP style		3.0.1
SP-99570	26.093	A001	2	3.0.1	Alignment to GSM 06.93	F	3.1.0
SP-00262	26.093	A002		3.1.0	Re-scheduling of stolen SID_UPDATE Frames for AMR	A	3.2.0

History

Document history		
V3.1.0	January 2000	Publication
V3.2.0	June 2000	Publication