ETSI TS 132 403 V4.0.0 (2001-06)

Technical Specification

Digital cellular telecommunications system (Phase 2+) (GSM);
Universal Mobile Telecommunications System (UMTS);
Telecommunication management;
Performance Management (PM);
Performance measurements - UMTS and combined UMTS/GSM
(3GPP TS 32.403 version 4.0.0 Release 4)



Reference
DTS/TSGS-0532403Uv4

Keywords
GSM, UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at http://www.etsi.org/tb/status/

If you find errors in the present document, send your comment to: editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2001.

All rights reserved.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/ipr).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key.

Contents

Forev	word	8
Introd	duction	8
1	Scope	g
2	References	9
3	Definitions and abbreviations.	10
3.1	Definitions	10
3.2	Abbreviations	10
3.3	Measurement definition template	
3.4	Definition of private Object Classes	
3.4.1	Neighbour Cell	
3.4.2	Routing Area	
4	Measurements related to the RNC	
4.1	RAB assignment	
4.1.1	Attempted RAB establishments for CS domain	
4.1.2	Successful RAB establishments without queuing for CS domain	
4.1.3	Failed RAB establishments without queuing for CS domain	
4.1.4	Successful RAB establishments with queuing for CS domain	
4.1.5	Failed RAB establishments with queuing for CS domain	
4.1.6	Attempted RAB establishments for PS domain	
4.1.7	Successful RAB establishments without queuing for PS domain	
4.1.8	Failed RAB establishments without queuing for PS domain	
4.1.9	Successful RAB establishments with queuing for PS domain	
4.1.10		
4.2	RAB release	
4.2.1	RAB releases for CS domain	
4.2.2	RAB releases for PS domain	
4.3	Signalling connection establishment	
4.3.1	Attempted signalling connection establishments for CS domain	
4.3.2 4.4	Attempted signalling connection establishments for PS domain	
4.4 4.4.1	Attempted RRC connection establishments	
4.4.1	Failed RRC connection establishments	
4.4.3	Successful RRC connection establishments	
4.5	RRC connection re-establishment	
4.5.1	Attempted RRC re-establishments	
4.5.2	Failed RRC re-establishments	
4.5.3	Successful RRC re-establishments	
4.6	RRC connection release	
4.6.1	Attempted RRC connection releases on DCCH	
4.6.2	Attempted RRC connection releases on CCCH	
4.7	Soft handover	
4.7.1	Attempted radio link additions to active link set (UE side)	
4.7.2	Successful radio link additions to active link set (UE side)	
4.7.3	Failed radio link additions to active link set (UE side)	
4.7.4	Attempted radio link deletions from active link set (UE side)	
4.7.5	Successful radio link deletions from active link set (UE side)	24
4.8	Radio link addition procedure (UTRAN side)	25
4.8.1	Attempted radio link additions (UTRAN side)	25
4.8.2	Successful radio link additions (UTRAN side)	25
4.8.3	Failed radio link additions (UTRAN side)	
4.8.4	Attempted radio link deletions (UTRAN side)	
4.8.5	Successful radio link deletions (UTRAN side)	
4.9	Hard handover	
4.9.1	Attempted outgoing intra-cell hard handovers	27

4.9.2	Successful outgoing intra-cell hard handovers	28
4.9.3	Failed outgoing intra-cell hard handovers	
4.9.4	Attempted outgoing intra-NodeB hard handovers	
4.9.5	Successful outgoing intra-NodeB hard handovers	
4.9.6	Failed outgoing intra-NodeB hard handovers	
4.9.7	Attempted outgoing inter-NodeB, intra-RNC hard handovers	
4.9.8	Successful outgoing inter-NodeB, intra-RNC hard handovers	
4.9.9	Failed outgoing inter-NodeB, intra-RNC hard handovers	
4.9.10		
4.9.11	Successful outgoing inter-RNC hard handovers via Iur	
4.9.12		
4.9.13		
4.9.14		
4.9.15		
4.9.16		
4.9.17	6	
4.9.18		
4.10	Relocation	
4.10.1	Attempted relocations preparations	
4.10.2	1 1	
4.10.3		
4.10.4		
4.11	Circuit switched inter-RAT handover	
4.11.1 4.11.2	Attempted relocation preparation for outgoing circuit switched inter-RAT handovers	
4.11.2 4.11.3	F - F	
4.11.3 4.11.4		
4.11. 4 4.11.5		
4.11.5 4.11.6		
4.11.7	· · ·	
4.11.8	•	
4.11.9	· · · · · · · · · · · · · · · · · · ·	
4.12	Packet switched inter-RAT handover	
4.12.1	Attempted outgoing packet switched inter-RAT handovers, UTRAN controlled	
4.12.2		
4.12.3	e e	
4.12.4	Successful outgoing packet switched inter-RAT handovers, UE controlled	39
5	Measurements related to the SGSN	
	Mobility Management	
5.1.1	Attempted GPRS attach procedures	
5.1.2	Successful GPRS attach procedures	
5.1.3	Attempted intra-SGSN Routing Area Update procedures	
5.1.4	Successful intra-SGSN Routing Area Update procedures	
5.1.5	Attempted GPRS detach procedures initiated by MS	
5.1.6 5.1.7	Attempted GPRS detach procedures initiated by SGSN	
5.1.7	Attempted inter-SGSN Routing Area Update procedures	
5.1.9	Successful inter-SGSN Routing Area Update procedures	
5.1.10		
5.1.10	Attempted IMSI detach procedures initiated by MS	
5.1.12	Attempted combined GPRS/IMSI attach procedures	
5.1.13	Successful combined GPRS/IMSI attach procedures	
5.1.14		
5.1.15		
5.1.16		
5.1.17		
5.1.18		
5.1.19		
5.1.20		
5.1.21	Successful combined RA/LA inter-SGSN Routing Area Update procedures	
5.1.22	Number of received invalid P-TMSI's during detach	48

5.1.23	Attempted GSM PS paging procedures	48
5.1.24	Attempted UMTS PS paging procedures	49
5.1.25	Attempted PS paging procedures with unknown access type	49
5.1.26	Number of PS paging message sends from 2G-SGSN to the MS	
5.1.27	Number of PS paging message sends from 3G-SGSN to the MS	
5.1.28	Successful GSM PS paging procedures	
5.1.29	Successful UMTS PS paging procedures	
5.1.30	Number of subscribers in PMM-IDLE state	
5.1.31	Number of subscribers in PMM-CONNECTED state	
5.1.32	Number of attached subscriber	
5.1.33	Number of Home Subscribers	
5.1.34	Number of Visiting National Subscribers	
5.1.35	Number of Visiting Foreign Subscribers	52
5.1.36	Mean number of attached subscriber	
5.1.37	Mean Number of Home Subscribers	
5.1.38	Mean Number of Visiting National Subscribers	
5.1.39	Mean Number of Visiting Foreign Subscribers	
5.1.40	Number of CAMEL subscribers	
5.1.41	Mean Number of CAMEL subcribers	55
5.1.42	Attempted InsertSubscriberData requests received from a HLR during GPRS Update Location	
	procedure	55
5.1.43	Attempted GPRS Update Locations sent to the HLR.	
5.1.44	Successful GPRS Update Locations sent to the HLR.	
5.1.45	Attempted CancelLocation requests received from an HLR-operator, in case of a HLR-initiated Detach	
5.1.46	Attempted CancelLocation requests received from a HLR due to a SGSN-change (previous SGSN)	56
5.1.47	Attempted Reset requests received from a HLR due to an HLR restart, indicating that a failure	
7. 0	occured	
5.2	Subscriber Management	
5.2.1	Attempted Insert Subscriber Data requests received from a HLR due to an HLR-operator intervention	
5.2.2	Attempted Delete Subscriber Data requests received from a HLR due to an HLR-operator intervention	
5.3	SRNC Relocation	
5.3.1 5.3.2	Attempted intra/inter 3G-SGSN SRNS Relocation	
5.3.2 5.3.3	Unsuccessful intra 3G-SGSN SRNS Relocation, due to internal reasons	
5.3.4	Unsuccessful intra 3G-SGSN SRNS Relocation, due to internal reasons	
5.3.4	Attempted inter 3G-SGSN SRNS Relocation.	
5.3.6	Successful Inter 3G-SGSN SRNS Relocation, counted in the old 3G-SGSN	
5.3.7	Unsuccessful Inter 3G-SGSN SRNS Relocation, due to internal reasons	
5.3.8	Unsuccessful Inter 3G-SGSN SRNS Relocation, due to external reasons	
5.3.9	Attempted inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN	
5.3.10	Successful Inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN	
	Security	
5.4.1	Attempted P-TMSI reallocation procedures	
5.4.2	Successful P-TMSI reallocation procedures	
5.4.3	Attempted Identity Request procedures initiated by this SGSN	
5.4.4	Successful completed Identity Request procedures initiated by this SGSN	
5.4.5	Attempted identification information requests sent to a partner (previous) SGSN for subscribers	
	registering afresh in this SGSN	63
5.4.6	Successful replied identification information requests that were sent to a partner (previous) SGSN	
5.4.7	Attempted Identity Requests sent to the MS.	
5.4.8	Successful replied Identity Requests from the MS.	64
5.4.9	Attempted authentication procedures that are started within this SGSN area for a subscriber using a SIM	
5.4.10	Successful authentication procedures within this SGSN area, for a subscriber using a SIM.	
5.4.11	Attempted authentication procedures that are started within this SGSN area for a subscriber using a	
~	USIM	
5.4.12	Successful authentication procedures within this SGSN area, for a subscriber using a USIM	
5.4.13	Received ciphering and Authentication failures within this SGSN area.	66
5.4.14	Attempted identification information requests that were received from a partner (new) SGSN for subscribers de-registering from this SGSN	64
5.4.15	Successfully replied identification information requests that were received from a partner (new) SGSN	
5.4.15		0/
2.1.10	in this SGSN	67

5.4.17	Successfully replied SGSN context requests that were sent to a partner (previous) SGSN	68
5.4.18	Attempted SGSN context requests received from a partner (new) SGSN for a subscriber de-registering	
	from this SGSN	
5.4.19	Successfully replied SGSN context requests received from a partner (new) SGSN	
5.4.20	Number of P-TMSI - IMSI correlation failures (User Identity Confidentiality (TS 23.060))	
5.4.21	Attempted security mode control procedures started by the SGSN	
5.4.22	Successful security mode procedures.	
5.4.23	Attempted ciphering procedures started by the SGSN	
5.4.24	Successful ciphering procedures started by the SGSN	
5.4.25	Attempted MAP V1 requests for authentication sets, sent to the HLR by SGSN.	70
5.4.26	Successful MAP V1 requests for authentication sets that were sent to the HLR.	
5.4.27	Number of empty responses to the MAP V1 request for authentication sets that were sent to the HLR	71
5.4.28	Attempted MAP V3 requests for Authentication sets sent to the HLR by SGSN	71
5.4.29	Successful MAP V3 requests for authentication sets that were sent to the HLR.	72
5.4.30	Number of empty responses to the MAP V3 request for authentication sets that were sent to the HLR	72
5.5 SN	AS	72
5.5.1	SMS in the CS domain (MSC)	72
5.5.1.1	Attempted CS SMS mobile originating	73
5.5.1.2	Successful CS SMS mobile originating	73
5.5.1.3	Attempted CS SMS mobile terminating.	73
5.5.1.4	Successful CS SMS mobile terminating	
5.5.1.5	Attempted CS ms-Present	74
5.5.1.6	Attempted CS "memory available"	74
5.5.1.7	Succesful CS ms-Present	75
5.5.1.8	Successful CS "memory available"	75
5.5.2	SMS in the PS domain (SGSN)	76
5.5.2.1	Attempted PS SMS mobile originating	76
5.5.2.2	Successful PS SMS mobile originating	76
5.5.2.3	Attempted PS SMS mobile terminating.	
5.5.2.4	Successful PS SMS mobile terminating	
5.5.2.5	Attempted PS ms-Present	
5.5.2.6	Attempted PS "memory available"	78
5.5.2.7	Succesful PS ms-Present	78
5.5.2.8	Successful PS "memory available"	78
5.5.3	SMS in the CS/PS domain (MSC/SGSN)	79
5.5.3.1	Attempted SMS mobile originating	79
5.5.3.2	Successful SMS mobile originating	79
5.5.3.3	Attempted SMS mobile terminating.	80
5.5.3.4	Successful SMS mobile terminating	80
5.5.3.5	Attempted ms-Present	80
5.5.3.6	Attempted "memory available"	
5.5.3.7	Succesful ms-Present.	81
5.5.3.8	Successful "memory available"	82
5.6 Se	ssion Management	82
5.6.1	Attempted PDP context activation procedures initiated by MS	82
5.6.2	Attempted dynamic PDP context activation procedures initiated by MS	
5.6.3	Successful PDP context activation procedures initiated by MS	
5.6.4	Successful dynamic PDP context activation procedures initiated by MS	
5.6.5	mean number of activated PDP contexts	
5.6.6	Attempted PDP context deactivation procedures initiated by the MS	
5.6.7	Successful PDP context deactivation procedures initiated by the MS	
5.6.8	Number of active PDP context	
5.6.9	Number of mobile subscribers with activated PDP context (i.e. subscribers that can send/receive GPRS	
	packet data)	85
5.6.10	Mean number of subscribers that have an activated PDP context (i.e. subscribers that can send/receive	
	GPRS packet data)	86
5.6.11	Attempted PDP context deactivation procedures initiated by the GGSN	
5.6.12	Successful PDP context deactivation procedures initiated by the GGSN	
5.6.13	Attempted PDP context deactivation procedures initiated by the SGSN	
5.6.14	Successful PDP context deactivations initiated by the SGSN	
5.6.15	Attempted SGSN-Initiated PDP context update procedures	
5.6.16	Successful SGSN-Initiated PDP context update procedures	
-	1 1	

5.6.17	Attempted GGSN-Initiated PDP context update procedures	88
5.6.18	Successful GGSN-Initiated PDP context update procedures	89
5.6.19	Attempted SGSN-Initiated PDP context modifications procedures.	89
5.6.20	Successfully SGSN-Initiated PDP context modifications procedures	90
5.6.21	Attempted MS-Initiated PDP context modifications procedures	90
5.6.22	Successfully MS-Initiated PDP context modifications procedures	90
5.6.23	Attempted Secondary PDP context activation procedures.	
5.6.24	Successful Secondary PDP context activations.	91
5.7 C	AMEL Measurements	92
5.7.1	Attempted CAMEL dialogues	
5.7.2	Unsuccessful CAMEL dialogues, aborted locally by gprsSSF	92
5.7.3	Unsuccessful CAMEL dialogues, error or reject from gsmSCF	92
5.8 U	MTS-GSM Intersystem Change	
5.8.1	Attempted intra SGSN inter system changes from UMTS to GSM	93
5.8.2	Successful intra SGSN inter system changes from UMTS to GSM	
5.8.3	Unsuccessful intra SGSN inter system changes UMTS to GSM RAU, due to internal reasons	93
5.8.4	Unsuccessful intra SGSN inter system changes UMTS to GSM RAU, due to external reasons	94
5.8.5	Attempted intra SGSN inter system changes from GSM to UMTS	94
5.8.6	Successful intra SGSN inter system changes from GSM to UMTS	94
5.8.7	Unsuccessful intra SGSN inter system changes GSM to UMTS RAU, due to internal reasons	
5.8.8	Unsuccessful intra SGSN inter system changes GSM to UMTS RAU, due to external reasons	95
5.9 U	MTS GTP Measurements	95
5.9.1	GTP-U Iu	
5.9.1.1	Number of outgoing GTP data packets on the Iu interface	
5.9.1.2	Number of incoming GTP data packets on the Iu interface	
5.9.1.3	Number of octets of outgoing GTP data packets on the Iu interface	
5.9.1.4	Number of octets of incoming GTP data packets on the Iu interface	
5.9.2	GTP Gn	
5.9.2.1	Number of outgoing GTP data packets on the Gn interface	
5.9.2.2	Number of incoming GTP data packets on the Gn interface	
5.9.2.3	Number of octets of outgoing GTP data packets on the Gn interface	
5.9.2.4	Number of octets of incoming GTP data packets on the Gn interface	
5.9.2.5	Number of outgoing GTP signalling packets on the Gn interface	
5.9.2.6	Number of incoming GTP signalling packets on the Gn interface	
5.9.2.7	Number of octets of outgoing GTP signalling packets on the Gn interface	
5.9.2.8	Number of octets of incoming GTP signalling packets on the Gn interface	99
Annex	A (informative): Change history	100

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The present document is part of the 32.400-series covering the 3rd Generation Partnership Project; Technical Specification Group Services and System Aspects; Telecommunication Management; Performance Management (PM), as identified below:

TS 32.401: "Concept and Requirements";

TS 32.402: "Performance Measurements - GSM";

TS 32.403: "Performance Measurements UMTS and combined UMTS/GSM".

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

Introduction

The present document is part of a set of specifications, which describe the requirements and information model necessary for the standardised Operation, Administration and Maintenance (OA&M) of a multi-vendor 3G-system.

During the lifetime of a 3G network, its logical and physical configuration will undergo changes of varying degrees and frequencies in order to optimise the utilisation of the network resources. These changes will be executed through network configuration management activities and/or network engineering, see 3GPP TS 32.600 [3].

Many of the activities involved in the daily operation and future network planning of a 3G network require data on which to base decisions. This data refers to the load carried by the network and the grade of service offered. In order to produce this data performance measurements are executed in the NEs, which comprise the network. The data can then be transferred to an external system, e.g. an Operations System (OS) in TMN terminology, for further evaluation. The purpose of the present document is to describe the mechanisms involved in the collection of the data and the definition of the data itself.

1 Scope

The present document describes the measurements for UMTS and combined UMTS/GSM.

The TS 32.401 [12] describe Performance Management concepts and requirements.

The present document is valid for all measurement types provided by an implementation of a UMTS network and combined UMTS/GSM network. These may be measurement types defined within this TS, measurements defined within other standards bodies, or vendor specific measurement types.

Only measurement types that are specific to UMTS or combined UMTS/GSM networks are defined within the present documents. I.e. vendor specific measurement types and measurements related to "external" technologies used in UMTS and combined UMTS/GSM networks, such as ATM or IP, are not covered. Instead, these could be applied as described by the other, "external" standards bodies (e.g. ITU-T or IETF) or according to manufacturer's documentation.

The definition of the standard measurements is intended to result in comparability of measurement data produced in a multi-vendor network, for those measurement types that can be standardised across all vendors' implementations.

The structure of the present document document is as follows:

- Header 1: Network Element (e.g. RNC related measurements);
- Header 2: Measurement function (e.g. soft handover measurements);
- Header 3: Measurements.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 32.101: "3G Telecom Management: Principles and high level requirements".
 [2] 3GPP TS 32.102: "3G Telecom Management architecture".
- [3] 3GPP TS 32.600: "Telecommunication Management; Configuration Management; 3G configuration management; Concept and main requirements".
- [4] 3GPP TS 25.331: "RRC Protocol Specification".
- [5] 3GPP TS 25.413: "UTRAN Iu Interface RANAP Signalling".
- [6] 3GPP TS 25.423: "UTRAN Iur Interface RNSAP Signalling".
- [7] 3GPP TS 25.433: "UTRAN lub Interface NBAP Signalling".
- [8] 3GPP TS 23.107: "QoS Concept and Architecture".
- [9] 3GPP TS 32.620-2: "Telecommunication Management; Configuration Management; Part 2:
 - Generic network resources IRP: NRM".
- [10] 3GPP TS 32.621-2: "Telecommunication Management; Configuration Management; Core Network Resources IRP: NRM".

[11]	3GPP TS 32.622-2: "Telecommunication Management; Configuration Management; Part 2: UTRAN network resources IRP: NRM".
[12]	3GPP TS 32.401: "Telecommunication Management; Performance Management (PM); Concept and Requirements".
[13]	GSM 12.04: "Digital cellular telecommunication system (Phase 2) (GSM); Performance Management and Measurements for a GSM Public Land Mobile Network (PLMN)".
[14]	3GPP TS 32.402: "Telecommunication Management; Performance Management (PM); Performance Measurements - GSM".
[15]	3GPP TS 24.008: "Mobile Radio Interface Layer 3 specification; Core Network Protocols; Stage 3".
[16]	GSM 08.18: "Digital cellular telecommunication system (Phase 2) (GSM); General Packet Radio Service (GPRS); Base Station System (BSS) - Serving GPRS Support Node (SGSN); BSS GPRS Protocol".
[17]	3GPP TS 23.060: "General Packet Radio Service (GPRS) Service description; Stage 2".
[18]	3GPP TS 29.002: "Mobile Application Part (MAP)".
[19]	3GPP TS 29.060: "GPRS Tunnelling protocol (GTP) across the Gn and Gp interface".
[20]	3GPP TS 24.011: "Point-to-Point (PP) Short Message Service (SMS) Support on Mobile Radio Interface".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the following terms and definitions apply:

"(n-1) out of n" approach:

- The measurements result values generated by a NE can be obtained in a number of different ways. Therefore, the "(n-1) out of n approach" has been defined in order to avoid redundancy in the measurements.
- The "(*n*-1) out of *n* approach" allows a vendor to choose any (n-1) out of the n defined counters for implementation but some choices can offer more detailed information than others. The missing nth value can be calculated in post-processing.
- If multiple measurements are included in one template, then the applicability of the "(n-1) out of n" scenario are mentioned in template item A with the following sentence "The *n* measurement types defined in item E are subject to the "(*n*-1) out of *n* approach"". The item D will specify the measurement result per measurement type specified in template item E.
- If the measurements that are applicable to the "(n-1) out of n" scenario are defined in separate templates, then they will be grouped together into a common clause of the TS, and the applicability of the approach will be mentioned in the supersection that groups the measurements.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

3G	3 rd Generation
3GPP	3G Partnership Project
ASN.1	Abstract Syntax Notation 1
BER	Basic Encoding Rules
DTD	Document Type Definition

EM (Network) Element Manager

ETS European Telecommunication Standard FTAM File Transfer Access and Management

FTP File Transfer Protocol

Itf Interface

ITU-T International Telecommunication Union - Telecommunications Standardisation Sector

MSC Mobile Services Switching Centre

NE Network Element NM Network Manager

OA&M Operation, Administration and Maintenance

OS Operations System (EM, NM)
OSI Open Systems Interconnection
PM Performance Management

QoS Quality of Service

RNC Radio Network Controller

TFTP Trivial FTP

UMTS Universal Mobile Telecommunications System UTRAN UMTS Terrestrial Radio Access Network

In the following table you can find a list of abbreviations used within the measurement types for field E of the measurement template (see clause 3.3).

Assn Assign(ment,ed)
Att Attempt(s,ed)
Aut Authentication
Bgrd Background

Call Call
Conn Connection
CS Circuit switched
Ctrl Controlled
Conv Conversational
Del Deletion
Drop Drop(ped)

Establish (ed,ment) Estab Fail(ed, ure) Fail HHO Hard Handover НО Handover Incoming Inc Interactive Intact Inter Inter Intra Intra

MM Mobility Management

Netw Network NodeB NodeB Oct Octet(s) Out Outgoing Pkt Packet(s) Prep Preparation PS Packet switched **RAB** Radio Access Bearer **RAT** Radio Access Technologie ReEstab Re-establish (ed,ment)

Rel Released
Reloc Relocation
Req Request(s,ed)

RAT Radio Access Technology

RL Radio Link RNC RNC

RRC Radio Resource Control

Setup Setup SGSN SGSN SHO Soft Handover SigSignallingStrmStreamingSuccSuccess(es,ful)UEUser Equipement

UTRAN UTRAN

3.3 Measurement definition template

Following is the template used to describe the measurements contained in this annex.

C.x.y. Measurement Name (section header)

This is a descriptive name of the measurement type that is specified as clause C.x.y of the present document.

The measurement name shall be written in lower-case characters except abbreviations (e.g. RNC).

A measurement name can apply to one or more measurements. If the measurement name applies to several measurements then all fields of the template will take this into account.

a) Description

This section contains an explanation of the measurement operation;

b) Collection Method

This n contains the form in which this measurement data is obtained:

- CC (Cumulative Counter);
- GAUGE (dynamic variable), used when data being measured can vary up or down during the period of measurement;
- <u>DER</u> (Discrete Event Registration), when data related to a particular event are captured every nth event is registered, where n can be 1 or larger;
- <u>SI</u>(Status Inspection).

c) Condition

This section contains the condition which causes the measurement result data to be updated; This will be defined by identifying protocol related trigger events for starting and stopping measurement processes, or updating the current measurement result value. Where it is not possible to give a precise condition, then the conditional circumstances leading to the update are stated.

If a measurement is not available for FDD or TDD, then the measurement description shall contain a statement.

d) Measurement Result (measured value(s), Units)

This section contains a description of expected result value(s) (e.g. a single integer value).

The definition applies for each measurement result.

e) Measurement Type

This section contains a short form of the measurement name specified in the header, which is used to identify the measurement type in the result files.

The measurement names are dotted sequences of items. The sequence of elements identifying a measurement is organised from the general to the particular.

- The first item identifies the measurement family (e.g. HHO, RAB, SMS). Note that this family may also be used for measurement administration purpose.
- The second item identifies the name of the measurement itself.

- Depending on the measurement type, additional items may be present to specify sub-counters (failure causes, traffic classes, min, max, avg, G, U ...). When available, the template will describe to which standard it is referring to for these additional items (e.g. cause, traffic class). Otherwise, the additional item semantics must be described in details in the present document. Standardised causes will be a number. (e.g. RRC.ConnEstab.1) but non standardised causes should be a string (e.g. RRC.ConnEstab.NoReply).

It is to be noted that the set of values issued for a measurement does not depend on the associated collection method (CC, SI, Gauge, DER). For instance, a gauge collected counter does not necessarily provide min, max, average values.

In addition, it is recommended that a prefix is added for non-UMTS measurements:

- VS for vendor-specific measurements;
- Q3 for Q3 measurements;
- MIB for IETF measurements (ATM, IP);
- OS for other standards measurements.

NOTE: The 3GPP standardised measurements name must not commence with the above prefixes.

Examples of valid measurement names are:

- VS.HO.InterSGSNReject.NoResource
- HHO.SuccOutIntraCell
- MM.AttachedSubs.Max
- RAB.EstabAttCS.Conversational
- RRC.ConnEstab.Cause
 where Cause identifies the failure cause.

Abbreviations to be used within measurement types can be found in chapter 3.2 of the present document.

f) Measurement Object Class

This section describes the measured object class (e.g. UtranCell, RncFunction, SgsnFunction). The object class used for this purpose shall be in accordance with the Network Resource Model defined in 3GPP TSs 32.620-2 [9], 32.621-2 [10], 32.622-2 [11].

For object classes currently not defined in CM, this TS defines its own nomenclature (e.g. RA, LAC).

g) Switching Technology

This section contains the Switching domain(s) this measurement is applicable to i.e. Circuit Switched and/or Packet Switched.

h) Generation

The generation determines if it concerns a GSM, UMTS, or combined (GSM+UMTS) measurement.

- <u>GSM</u>: pure GSM measurement; it only counts GSM events. In a combined (GSM+UMTS) NE the count would be exactly the same as in a pure GSM NE. In a pure UMTS NE this counter does not exist;
- <u>UMTS</u>: pure UMTS measurement; it only counts UMTS events.In a combined (GSM+UMTS) NE the count would be exactly the same as in a pure UMTS NE. In a pure GSM NE this counter does not exist;
- <u>GSM/UMTS</u>: measurement applicable to both GSM and UMTS systems; in a combined (GSM+UMTS) NE separate subcounts for GSM and/or UMTS events can be obtained;
- <u>COMB</u>: measurement applicable to combined GSM and UMTS systems, but regardless of whether the
 measured event occurred on the GSM or UMTS part of the system. This means that in a combined NE only
 one total (i.e. GSM+UMTS) count is obtained for the measured event;

The above aspects are also reflected in the measurement type name in template item E by adding a "G" to the GSM measurements and "U" to the UMTS measurements.

NOTE: The 2G component of a combined 2G/3G equipment may actually choose to implement GSM measurements according to the present document or GSM12.04/TS32.402, based on GSM standards.

3.4 Definition of private Object Classes

Private Object Classes are Object Classes which are needed for PM purposes, but that are not yet defined by CM.

3.4.1 Neighbour Cell

The Object Class Neighbour Cell is needed to measure cell-cell relations such as Handover. For the purpose of the present document the Neighbour Cell should be encoded in the file format as the concatenation of 2 UtranCell moid's, separated by a comma. If the neighbouring cell belongs to another RNC than the measured one, then for the second UtranCell moid the complete DN is to be specified.

EXAMPLE 1: both cells belong to the same RNC:

- nedn = "G3SubNetwork=Sweden,MeContext=MEC-Gbg-1,G3ManagedElement=RNC-Gbg-1,RncFunction=RF-1";
- moid = "UtranCell=Gbg-997,UtranCell=Gbg-998".

EXAMPLE 2: Both cells belong to different RNC

- nedn = "G3SubNetwork=Sweden,MeContext=MEC-Gbg-1,G3ManagedElement=RNC-Gbg-1,RncFunction=RF-1";
- moid = "UtranCell=Gbg-997,G3SubNetwork=Sweden,MeContext=MEC-Gbg-1,G3ManagedElement=RNC-Gbg-2,RncFunction=RF-2,UtranCell=Gbg-998".

3.4.2 Routing Area

The Object Class Routing Area (RA) is needed to conduct measurements on RA level. For the purpose of the present document the Neighbour Cell should be encoded in the file format as the concatenation of the LAC and the RAC, in decimal notation. Since LAC is a 2 byte number (00000-65535) 5 characters are needed in the moid PrintableString. Since RAC is a 1 byte number (000-255) 3 characters are needed in the moid PrintableString. Hence concatenated moid PrintableString will always contain 8 characters.

```
EXAMPLE: LAC = Hexadecimal 4E20 = Decimal 20000;

RAC = Hexadecimal BE = Decimal 190;

moid = "20000190".
```

4 Measurements related to the RNC

4.1 RAB assignment

The five measurement types defined in the clause 4.1.n for CS domain (respectively PS domain) are subject to the "4 out of 5 approach".

4.1.1 Attempted RAB establishments for CS domain

- a) This measurement provides the number of RAB assignment attempts for CS domain. The measurement is pegged by traffic class.
- b) CC.

- c) On receipt by the RNC of a RANAP RAB ASSIGNMENT REQUEST message for CS domain, each RAB assignment request is added to the relevant measurement according to the traffic class requested. See TS 25.413 and TS 23.107.
- d) Four integer values.
- e) RAB.AttEstabCS.Conv RAB.AttEstabCS.Strm RAB.AttEstabCS.Intact RAB.AttEstabCS.Bgrd
- f) RNCFunction.
- g) Valid for circuit switched traffic.
- h) UMTS.

4.1.2 Successful RAB establishments without queuing for CS domain

- a) This measurement provides the number of successfully established RABs for CS domain in which a queuing process has not been involved. The measurement is pegged by traffic class.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for CS domain, each successfully established RAB is added to the relevant measurement according to the traffic class requested in the RAB ASSIGNMENT REQUEST message. See TS 25.413 and TS 23.107.

NOTE: The addition is performed with the condition the RAB has not been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Four integer values.
- e) RAB.SuccEstabCSNoQueuing.Conv RAB.SuccEstabCSNoQueuing.Strm RAB.SuccEstabCSNoQueuing.Intact RAB.SuccEstabCSNoQueuing.Bgrd
- f) RNCFunction
- g) Valid for circuit switched traffic.
- h) UMTS

4.1.3 Failed RAB establishments without queuing for CS domain

- a) This measurement provides the number of RAB establishment failures for CS domain in which a queuing process has not been involved. The measurement is pegged by failure cause.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for CS domain, each RAB failed to establish is added to the relevant measurement according to the failure cause. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Establishment Failures.

NOTE: The addition is performed with the condition the RAB has not been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form RAB.FailEstabCSNoQueuing. *Cause* where *Cause* identifies the failure cause.
- f) RNCFunction

- g) Valid for circuit switched traffic.
- h) UMTS

4.1.4 Successful RAB establishments with queuing for CS domain

- a) This measurement provides the number of successfully established RABs for CS domain in which a queuing process has been involved. The measurement is pegged by traffic class.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for CS domain, each successfully established RAB is added to the relevant measurement according to the traffic class. See TS 25.413 and TS 23.107.

NOTE: The addition is performed with the condition the RAB has been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Four integer values.
- e) RAB.SuccEstabCSQueuing.Conv RAB.SuccEstabCSQueuing.Strm RAB.SuccEstabCSQueuing.Intact RAB.SuccEstabCSQueuing.Bgrd
- f) RNCFunction
- g) Valid for circuit switched traffic.
- h) UMTS

4.1.5 Failed RAB establishments with queuing for CS domain

- a) This measurement provides the number of RAB establishment failures for CS domain in which a queuing process has been involved. The measurement is pegged by failure cause.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for CS domain, each RAB failed to establish is added to the relevant measurement according to the cause. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Establishment Failures.

NOTE: The addition is performed with the condition the RAB has been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RAB.FailEstabCSQueuing. *Cause* where *Cause* identifies the failure cause.
- f) RNCFunction
- g) Valid for circuit switched traffic.
- h) UMTS

4.1.6 Attempted RAB establishments for PS domain

- a) This measurement provides the number of RAB assignment attempts for PS domain. The measurement is pegged by traffic class.
- b) CC

- c) On receipt by the RNC of a RANAP RAB ASSIGNMENT REQUEST message for PS domain, each RAB assignment request is added to the relevant measurement according to the traffic class requested. See TS 25.413 and TS 23.107.
- d) Four integer values.
- e) RAB.AttEstabPS.Conv RAB.AttEstabPS.Strm RAB.AttEstabPS.Intact RAB.AttEstabPS.Bgrd
- f) RNCFunction
- g) Valid for packet switched traffic.
- h) UMTS

4.1.7 Successful RAB establishments without queuing for PS domain

- a) This measurement provides the number of successfully established RABs for PS domain in which a queuing process has not been involved. The measurement is pegged by traffic class.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for PS domain, each successfully established RAB is added to the relevant measurement according to the traffic class. See TS 25.413 and TS 23.107.

NOTE: The addition is performed with the condition the RAB has not been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Four integer values.
- e) RAB.SuccEstabPSNoQueuing.Conv RAB.SuccEstabPSNoQueuing.Strm RAB.SuccEstabPSNoQueuing.Intact RAB.SuccEstabPSNoQueuing.Bgrd
- f) RNCFunction
- g) Valid for packet switched traffic.
- h) UMTS

4.1.8 Failed RAB establishments without queuing for PS domain

- a) This measurement provides the number of RAB establishment failures for PS in which a queuing process has not been involved. The measurement is pegged by failure cause.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for PS domain, each RAB failed to establish is added to the relevant measurement according to the failure cause. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Establishment Failures.

NOTE: The addition is performed with the condition the RAB has not been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RAB.FailEstabPSNoQueuing. *Cause* where *Cause* identifies the failure cause.
- f) RNCFunction

- g) Valid for packet switched traffic.
- h) UMTS

4.1.9 Successful RAB establishments with queuing for PS domain

- a) This measurement provides the number of successfully established RABs for PS domain in which a queuing process has been involved. The measurement is pegged by traffic class.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for PS domain, each successfully established RAB is added to the relevant measurement according to the traffic class. See TS 25.413 and TS 23.107.

NOTE: The addition is performed with the condition the RAB has been mentioned as queued in a previous RANAP RAB ASSIGNMENT RESPONSE.

- d) Four integer values.
- e) RAB.SuccEstabPSQueuing.Conv RAB.SuccEstabPSQueuing.Strm RAB.SuccEstabPSQueuing.Intact RAB.SuccEstabPSQueuing.Bgrd
- f) RNCFunction
- g) Valid for packet switched traffic.
- h) UMTS

4.1.10 Failed RAB establishments with queuing for PS domain

- a) This measurement provides the number of RAB establishment failures for PS domain in which a queuing process has been involved. The measurement is pegged by failure cause.
- b) CC
- c) On transmission by the RNC of a RANAP RAB ASSIGNMENT RESPONSE message for PS domain, each RAB failed to establish is added to the relevant measurement according to the cause. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Establishment Failures.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RAB.FailEstabPSQueuing. *Cause* where *Cause* identifies the failure cause.
- f) RNCFunction
- g) Valid for packet switched traffic.
- h) UMTS

4.2 RAB release

4.2.1 RAB releases for CS domain

- a) This measurement provides the number of RAB releases for CS domain pegged by cause.
- b) CC

- c) On transmission by the RNC of a RANAP RAB RELEASE REQUEST message for CS domain, each RAB requested to be released is added to the relevant per cause measurement. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Releases for the CS domain.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RAB.RelCS. Cause where Cause identifies the release cause.
- f) RNCFunction
- g) Valid for circuit switched traffic.
- h) UMTS

4.2.2 RAB releases for PS domain

- a) This measurement provides the number of RAB releases for PS domain pegged by cause.
- b) CC
- c) On transmission by the RNC of a RANAP RAB RELEASE REQUEST message for PS domain, each RAB requested to be released is added to the relevant per cause measurement. Possible causes are included in TS 25.413. The sum of all supported per cause measurements should equal the total number of RAB Releases for the PS domain.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RAB.RelPS.Cause where Cause identifies the release cause.
- f) RNCFunction
- g) Valid for packet switched traffic.
- h) UMTS

4.3 Signalling connection establishment

4.3.1 Attempted signalling connection establishments for CS domain

a) This measurement provides the number of attempts by RNC to establish an Iu control plane connection between the RNC and a CS CN.

NOTE: There is no confirmation in response to this message to indicate that the CN-RNC connection was successfully setup.

- b) CC
- c) Transmission of a RANAP Initial UE message by the RNC to the CN. This is sent by the RNC on receipt of an RRC Initial Direct Transfer message from the UE.
- d) A single integer value.
- e) Sig.AttConnEstabCS
- f) RncFunction
- g) Valid for circuit switching.
- h) UMTS

4.3.2 Attempted signalling connection establishments for PS domain

a) This measurement provides the number of requests by RNC to establish an Iu control plane connection between the RNC and a PS CN.

NOTE: There is no confirmation in response to this message to indicate that the CN-RNC connection was successfully setup

- b) CC
- c) Transmission of a RANAP Initial UE message by the RNC to the CN. This is sent by the RNC on receipt of an RRC Initial Direct Transfer message from the UE.
- d) A single integer value.
- e) Sig.AttConnEstabPS
- f) RncFunction
- g) Valid for packet switching.
- h) UMTS

4.4 RRC connection establishment

The three measurement types defined in the clause 4.4.n are subject to the "2 out of 3 approach".

4.4.1 Attempted RRC connection establishments

- a) This measurement provides the number of RRC connection establishment attempts for each establishment cause.
- b) CC
- c) Receipt of an RRC Connection Request message by the RNC from the UE. Each RRC Connection Request message received is added to the relevant per cause measurement. The possible causes are included in TS 25.331. The sum of all supported per cause measurements should equal the total number of RRC Connection Establishment attempts.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RRC.AttConnEstab.Cause where Cause identifies the Establishment Cause
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.4.2 Failed RRC connection establishments

- a) This measurement provides the number of RRC establishment failures for each rejection cause.
- b) CC.
- c) Transmission of an RRC Connection Reject message by the RNC to the UE or an expected RRC CONNECTION SETUP COMPLETE message not received by the RNC. Each RRC Connection Reject message received is added to the relevant per cause measurement. The possible causes are included in TS 25.331.
- d) Each expected RRC CONNECTION SETUP COMPLETE not received by the RNC is added to the measurement cause 'No Reply' (not specified in TS 25.331).
- e) The sum of all supported per cause measurements should equal the total number of RRC Connection Establishment Failures.

- f) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- g) The measurement name has the form RRC.FailConnEstab.*Cause* where *Cause* identifies the Rejection Cause
- h) UtranCell
- i) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.4.3 Successful RRC connection establishments

- a) This measurement provides the number of successful RRC establishments for each establishment cause.
- b) CC
- c) Receipt by the RNC of a RRC CONNECTION SETUP COMPLETE message following a RRC establishment attempt. Each RRC Connection Setup Complete message received is added to the relevant per cause measurement. The possible causes are included in TS 25.331. The sum of all supported per cause measurements should equal the total number of RRC Connection Establishments.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RRC.SuccConnEstab.*Cause* where *Cause* identifies the Establishment Cause
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.5 RRC connection re-establishment

The three measurement types defined in the clause 4.5.n are subject to the "2 out of 3 approach".

4.5.1 Attempted RRC re-establishments

- a) This measurement provides the number of RRC re-establishments attempts.
- b) CC
- c) Receipt by the RNC of a CELL UPDATE message using the Cell Update cause "Radio link failure". See TS 25.331.
- d) A single integer value.
- e) RRC.AttConnReEstab
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.5.2 Failed RRC re-establishments

- a) This measurement provides the number of RRC re-establishment failures.
- b) CC
- c) Transmission of an RRC Connection Release message by RNC to the UE or an expected UTRAN Mobility Information Confirm message not received by RNC from the UE. See TS 25.331.

- d) A single integer value.
- e) RRC.FailConnReEstab
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic
- h) UMTS

4.5.3 Successful RRC re-establishments

- a) This measurement provides the number of successful RRC re-establishments.
- b) CC
- c) Receipt by the RNC of a UTRAN MOBILITY INFORMATION CONFIRM in a CELL UPDATE procedure using the value cause "Radio link failure". See TS 25.331.
- d) A single integer value.
- e) RRC.SuccConnReEstab
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.6 RRC connection release

4.6.1 Attempted RRC connection releases on DCCH

- a) This measurement provides the number of RRC connection release attempts per release cause sent from UTRAN to the UE on the DCCH.
- b) CC
- c) Transmission of an RRC CONNECTION RELEASE message by the RNC to the UE on DCCH. Each RRC Connection Release message sent on DCCH is added to the relevant per cause measurement. The possible causes are included in TS 25.331. The sum of all supported per cause measurements should equal the total number of RRC Connection Release attempts on DCCH.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RRC.AttConnRelDCCH.Cause where Cause identifies the Release Cause
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic
- h) UMTS

4.6.2 Attempted RRC connection releases on CCCH

- a) This measurement provides the number of RRC connection release attempts per release cause sent from UTRAN to the UE on the CCCH.
- b) CC
- c) Transmission by the RNC of an RRC CONNECTION RELEASE message to the UE on CCCH. Each RRC Connection Release message sent on CCCH is added to the relevant per cause measurement. The possible causes

are included in TS 25.331. The sum of all supported per cause measurements should equal the total number of RRC Connection Release attempts on CCCH.

- d) Each measurement is an integer value. The number of measurements is equal to the number of causes.
- e) The measurement name has the form RRC.AttConnRelCCCH.Cause where Cause identifies the Release Cause
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic
- h) UMTS

4.7 Soft handover

4.7.1 Attempted radio link additions to active link set (UE side)

- a) This measurement provides the number of attempted radio link additions during active link set update procedure (UE side) for each cell. This measurement shall be increased for each attempted radio link addition (UE side). This measurement is only valid for FDD mode.
- b) CC.
- c) Transmission of an ACTIVE SET UPDATE message (RRC) by the serving RNC to the UE. Within an ACTIVE SET UPDATE message more than one radio link can be added. Each existing radio link addition information element shall be considered separately. See TS 25.331.
- d) A single integer value.
- e) SHO.AttRLAddUESide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.7.2 Successful radio link additions to active link set (UE side)

- a) This measurement provides the number of successful radio link additions during active link set update procedure (UE side) for each cell. This measurement shall be increased for each successful radio link addition (UE side). This measurement is only valid for FDD mode.
- b) CC.
- c) Receipt of an ACTIVE SET UPDATE COMPLETE message (RRC), sent by the UE to the SERVING RNC, in response to an ACTIVE SET UPDATE message with one or more existing radio link addition information element. One ACTIVE SET UPDATE COMPLETE message can be related to more than one added radio link. Each successful added radio link shall be considered separately. See TS 25.331.
- d) A single integer value.
- e) SHO.SuccRLAddUESide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.7.3 Failed radio link additions to active link set (UE side)

- a) This measurement provides the number of failed radio link additions during active link set Update procedure (UE side) for each cell per cause. For each failure cause a separate subcounter is defined. Every failed radio link addition (UE side) shall be considered separately. This measurement is only valid for FDD mode.
- b) CC.
- c) Receipt of an ACTIVE SET UPDATE FAILURE message (RRC) sent by UE to the UTRAN in response to an ACTIVE SET UPDATE message with non-empty radio link addition information element or an expected ACTIVE SET UPDATE COMPLETE message not received by the RNC. Each message can be related to more than one radio link.
 - Each failed attempt to add a radio link shall be considered separately and added to the relevant per cause measurement. Failure causes are defined within TS 25.331.
 - Each expected ACTIVE SET UPDATE COMPLETE message not received by the RNC is added to the measurement cause 'No Reply' (not specified in TS 25.331).
- d) The sum of all supported per cause measurements should equal the total number of failures.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form SHO.FailRLAddUESide. *Cause* where *Cause* identifies the failure cause.
- g) UtranCell
- h) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.7.4 Attempted radio link deletions from active link set (UE side)

- a) This measurement provides the number of attempted radio link deletions during active link set update procedure (UE side) for each cell. This measurement shall be increased for each attempted radio link deletion (UE side). This measurement is only valid for FDD mode.
- b) CC.
- c) Transmission of an ACTIVE SET UPDATE message (RRC) by the SERVING RNC to the UE. Within an ACTIVE SET UPDATE message more than one radio link can be removed. Each existing radio link removal information element shall be considered separately. See TS 25.331.
- d) A single integer value.
- e) SHO.AttRLDelUESide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.7.5 Successful radio link deletions from active link set (UE side)

- a) This measurement provides the number of successful radio link deletions during active link set update procedure (UE side) for each cell. This measurement shall be increased for each successful radio link deletion (UE side). This measurement is only valid for FDD mode.
- b) CC.
- c) Receipt of an ACTIVE SET UPDATE COMPLETE message (RRC) sent by UE to the Serving RNC in response to an ACTIVE SET UPDATE message with one or more existing radio link removal information element. One

ACTIVE SET UPDATE COMPLETE message can be related to more than one deleted radio link. Each successful deleted radio link shall be considered separately. See TS 25.331.

- d) A single integer value.
- e) SHO.SuccRLDelUESide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.8 Radio link addition procedure (UTRAN side)

4.8.1 Attempted radio link additions (UTRAN side)

- a) This measurement provides the number of attempted radio link additions (UTRAN side) for each cell. This measurement shall be increased for each attempted radio link addition (UTRAN side). This measurement is valid for FDD and TDD mode.
- b) CC.
- c) This measurement is based on two different events:
 - Transmission of a RADIO LINK SETUP REQUEST message (NBAP) by the serving RNC to the NodeB. Within a RADIO LINK SETUP REQUEST message more than one radio link can be added. Each existing radio link information element shall be considered separately. See TS 25.433.
 - Transmission of a RADIO LINK ADDITION REQUEST message (RNSAP) by the serving RNC to the drift RNC. Within a RADIO LINK ADDITION REQUEST message more than one radio link can be added. Each existing radio link information element shall be considered separately. See TS 25.423.
- d) A single integer value.
- e) SHO.AttRLAddUTRANSide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.8.2 Successful radio link additions (UTRAN side)

- a) This measurement provides the number of successful radio link additions (UTRAN side) for each cell. This measurement shall be increased for each successful radio link addition (UTRAN side). This measurement is valid for FDD and TDD mode.
- b) CC.
- c) This measurement is based on two different events:
 - Receipt of a RADIO LINK SETUP RESPONSE message (NBAP) sent by NodeB to the serving RNC in response to a RADIO LINK SETUP REQUEST message with one or more existing radio link information elements. One RADIO LINK SETUP RESPONSE message can be related to more than one added radio link. Each successful added radio link shall be considered separately. See TS 25.433.
 - Receipt of a RADIO LINK ADDITION RESPONSE message (RNSAP) sent by drift RNC to the serving RNC in response to a RADIO LINK ADDITION REQUEST message with one or more existing radio link information elements. One RADIO LINK ADDITION RESPONSE message can be related to more than one added radio link. Each successful added radio link shall be considered separately. See TS 25.423.
- d) A single integer value.

- e) SHO.SuccRLAddUTRANSide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.8.3 Failed radio link additions (UTRAN side)

- a) This measurement provides the number of failed radio link additions (UTRAN side) for each cell. This measurement shall be increased for each failed radio link addition (UTRAN side). For each failure cause a separate measurement is defined. Every failed radio link addition shall be considered separately. This measurement is valid for FDD and TDD mode.
- b) CC.
- c) This measurement is based on two different events:
 - Receipt of a RADIO LINK SETUP FAILURE message (NBAP) sent by NodeB to the serving RNC in response to a RADIO LINK SETUP REQUEST message with one or more existing radio link information elements. One RADIO LINK SETUP FAILURE message can be related to more than one radio link. Each failed attempt to add a radio link shall be considered separately. Failure causes are defined within 3GPP TS 25.443.
 - Receipt of a RADIO LINK ADDITION FAILURE message (RNSAP) sent by drift RNC to the serving RNC in response to a RADIO LINK ADDITION REQUEST message with one or more existing radio link information elements. One RADIO LINK ADDITION FAILURE message can be related to more than one radio link. Each failed attempt to add a radio link shall be considered separately. Failure causes are defined within 3GPP TS 25.423.
 - The sum of all supported per cause measurements should equal the total number of Failures.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form SHO.FailRLAddUTRANSide. *Cause* where *Cause* identifies the failure cause.
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.8.4 Attempted radio link deletions (UTRAN side)

- a) This measurement provides the number of attempted radio link deletions (UTRAN side) for each cell. This measurement shall be increased for each attempted radio link deletion (UTRAN side). This measurement is valid for FDD and TDD mode.
- b) CC.
- c) This measurement is based on two different events:
 - Transmission of a RADIO LINK DELETION REQUEST message (NBAP) by the serving RNC to the NodeB. Within a RADIO LINK DELETION REQUEST message more than one radio link can be removed. Each existing radio link information element shall be considered separately. See TS 25.433.
 - Transmission of a RADIO LINK DELETION REQUEST message (RNSAP) by the serving RNC to the drift RNC. Within a RADIO LINK DELETION REQUEST message more than one radio link can be removed. Each existing radio link information element shall be considered separately. See TS 25.423.
- d) A single integer value.
- e) SHO.AttRLDelUTRANSide

- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.8.5 Successful radio link deletions (UTRAN side)

- a) This measurement provides the number of successful radio link deletions (UTRAN side) for each cell. This measurement shall be increased for each successful radio link deletion (UTRAN side). This measurement is valid for FDD and TDD mode.
- b) CC.
- c) This measurement is based on two different events:
 - Receipt of a RADIO LINK DELETION RESPONSE message (NBAP) sent by NodeB to the serving RNC in response to a RADIO LINK DELETION REQUEST message with one or more existing radio link removal information element. One RADIO LINK DELETION RESPONSE message can be related to more than one deleted radio link. Each successful deleted radio link shall be considered separately. See TS 25.433.
 - Receipt of a RADIO LINK DELETION RESPONSE message (RNSAP) sent by drift RNC to the serving RNC in response to a RADIO LINK DELETION REQUEST message with one or more existing radio link removal information element. One RADIO LINK DELETION RESPONSE message can be related to more than one deleted radio link. Each successful deleted radio link shall be considered separately. See TS 25.423.
- d) A single integer value.
- e) SHO.SuccRLDelUTRANSide
- f) UtranCell
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9 Hard handover

4.9.1 Attempted outgoing intra-cell hard handovers

- a) This measurement provides the number of attempted outgoing intra-cell hard handovers per neighbour cell relation.
- b) CC.
- c) Transmission of a RRC message PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER SETUP, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, or TRANSPORT CHANNEL RECONFIGURATION from the source RNC to the UE, indicating the attempt of an outgoing intra-hell hard handover. See TS 25.331.
- d) A single integer value.
- e) HHO.AttOutIntraCell
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.2 Successful outgoing intra-cell hard handovers

- a) This measurement provides the number of successful outgoing intra-cell hard handovers per neighbour cell relation.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION COMPLETE, RADIO BEARER SETUP COMPLETE, RADIO BEARER RECONFIGURATION COMPLETE, RADIO BEARER RELEASE COMPLETE, or TRANSPORT CHANNEL RECONFIGURATION COMPLETE sent from the UE to the source RNC, indicating a successful outgoing intra-cCell hard handover. See TS 25.331.
- d) A single integer value.
- e) HHO.SuccOutIntraCell
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.3 Failed outgoing intra-cell hard handovers

- a) This measurement provides the number of failed outgoing intra-cell hard handovers per neighbour cell relation per cause, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION FAILURE, RADIO BEARER SETUP FAILURE, RADIO BEARER RECONFIGURATION FAILURE, RADIO BEARER RELEASE FAILURE, or TRANSPORT CHANNEL RECONFIGURATION FAILURE sent from the UE to the source RNC, indicating a failed outgoing intra-cell hard handover. Failure causes are defined within TS 25.331. The sum of all supported per cause measurements should equal the total number of failed events.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form HHO.FailOutIntraCell. *Cause* where *Cause* identifies the failure cause.
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.4 Attempted outgoing intra-NodeB hard handovers

- a) This measurement provides the number of attempted outgoing intra-NodeB hard handovers per neighbour cell relation.
- b) CC.
- c) Transmission of a RRC message PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER SETUP, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, or TRANSPORT CHANNEL RECONFIGURATION from the source RNC to the UE, indicating the attempt of an outgoing intra-NodeB hard handover. See TS 25.331.
- d) A single integer value.
- e) HHO.AttOutIntraNodeB
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.

h) UMTS

4.9.5 Successful outgoing intra-NodeB hard handovers

- a) This measurement provides the number of successful outgoing intra-NodeB hard handovers per neighbour cell relation.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION COMPLETE, RADIO BEARER SETUP COMPLETE, RADIO BEARER RECONFIGURATION COMPLETE, RADIO BEARER RELEASE COMPLETE, or TRANSPORT CHANNEL RECONFIGURATION COMPLETE sent from the UE to the source RNC, indicating a successful outgoing intra-NodeB hard handover. See TS 25.331.
- d) A single integer value.
- e) HHO.SuccOutIntraNodeB
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.6 Failed outgoing intra-NodeB hard handovers

- a) This measurement provides the number of failed outgoing intra-NodeB hard handovers per neighbour cell relation per cause, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION FAILURE, RADIO BEARER SETUP FAILURE, RADIO BEARER RECONFIGURATION FAILURE, RADIO BEARER RELEASE FAILURE, or TRANSPORT CHANNEL RECONFIGURATION FAILURE sent from the UE to the source RNC, indicating a failed outgoing intra-NodeB hard handover. Failure causes are defined within 3GPP TS25.331.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form HHO.FailOutIntraNodeB. *Cause* where *Cause* identifies the failure cause.
- g) Neighbour Cell (UtranCell-UtranCell).
- h) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.9.7 Attempted outgoing inter-NodeB, intra-RNC hard handovers

- a) This measurement provides the number of attempted outgoing inter-NodeB, intra-RNC hard handovers per neighbour cell relation.
- b) CC.
- c) Transmission of a RRC message PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER SETUP, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, or TRANSPORT CHANNEL RECONFIGURATION from the source RNC to the UE, indicating the attempt of an outgoing inter-NodeB, intra-RNC hard handover. See TS 25.331.
- d) A single integer value.

- e) HHO.AttOutInterNodeBIntraRNC
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.8 Successful outgoing inter-NodeB, intra-RNC hard handovers

- a) This measurement provides the number of successful outgoing inter-NodeB, intra-RNC hard handovers per neighbour cell relation.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION COMPLETE, RADIO BEARER SETUP COMPLETE, RADIO BEARER RECONFIGURATION COMPLETE, RADIO BEARER RELEASE COMPLETE, or TRANSPORT CHANNEL RECONFIGURATION COMPLETE sent from the UE to the source RNC, indicating a successful outgoing inter-NodeB, intra-RNC hard handover. See TS 25.331.
- d) A single integer value.
- e) HHO.SuccOutInterNodeBIntraRNC
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.9 Failed outgoing inter-NodeB, intra-RNC hard handovers

- a) This measurement provides the number of failed outgoing inter-NodeB, intra-RNC hard handovers per neighbour cell relation per cause, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION FAILURE, RADIO BEARER SETUP FAILURE, RADIO BEARER RECONFIGURATION FAILURE, RADIO BEARER RELEASE FAILURE, or TRANSPORT CHANNEL RECONFIGURATION FAILURE sent from the UE to the source RNC, indicating a failed outgoing inter-NodeB, intra-RNC hard handover. Failure causes are defined within TS 25.331.
 - The sum of all supported per cause measurements should equal the total number of failed events.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form HHO.FailOutInterNodeBIntraRNC. *Cause* where *Cause* identifies the failure cause.
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.10 Attempted outgoing inter-RNC hard handovers via lur

- a) This measurement provides the number of attempted outgoing inter-RNC hard handovers via Iur per neighbour cell relation.
- b) CC.

- c) Transmission of a RRC message PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER SETUP, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, or TRANSPORT CHANNEL RECONFIGURATION from the source RNC to the UE, indicating the attempt of an outgoing inter-RNC hard handover via Iur. See TS 25.331.
- d) A single integer value.
- e) HHO.AttOutInterRNCIur
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.11 Successful outgoing inter-RNC hard handovers via lur

- a) This measurement provides the number of successful outgoing inter-RNC hard handovers via Iur per neighbour cell relation.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION COMPLETE, RADIO BEARER SETUP COMPLETE, RADIO BEARER RECONFIGURATION COMPLETE, RADIO BEARER RELEASE COMPLETE, or TRANSPORT CHANNEL RECONFIGURATION COMPLETE sent from the UE to the source RNC, indicating a successful outgoing inter-RNC hard handover via Iur. See TS 25.331.
- d) A single integer value.
- e) HHO.SuccOutInterRNCIur
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.12 Failed outgoing inter-RNC hard handovers via lur

- a) This measurement provides the number of failed outgoing inter-RNC hard handovers via Iur per neighbour cell relation per cause, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION FAILURE, RADIO BEARER SETUP FAILURE, RADIO BEARER RECONFIGURATION FAILURE, RADIO BEARER RELEASE FAILURE, or TRANSPORT CHANNEL RECONFIGURATION FAILURE sent from the UE to the source RNC, indicating a failed outgoing inter-RNC hard handover via Iur. Failure causes are defined within TS 25.331.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form HHO.FailOutInterRNCIur. *Cause* where *Cause* identifies the failure cause.
- g) Neighbour Cell (UtranCell-UtranCell).
- h) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.9.13 Attempted relocation preparation for outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides the number of attempted relocation preparation for outgoing inter-RNC hard handovers switching in the CN per neighbour cell relation.
- b) CC.
- c) Transmission of a RANAP message RELOCATION REQUIRED from the source RNC to the CN (Source side), indicating an attempted relocation preparation of a outgoing inter-RNC hard handover switching in the CN. See TS 25.413.
- d) A single integer value.
- e) HHO.AttRelocPrepOutInterRNCCN
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.14 Successful relocation preparation for outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides the number of successful relocation for outgoing inter-RNC hard handovers switching in the CN per neighbour cell relation.
- b) CC.
- c) Receipt of a RANAP message RELOCATION COMMAND sent from the CN (Source side) to the source RNC, indicating a successful relocation preparation of a outgoing inter-RNC hard handover switching in the CN. See TS 25.413.
- d) A single integer value.
- e) HHO.SuccAttRelocPrepOutInterRNCCN
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.15 Failed relocation preparation for outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides number of failed relocation for outgoing inter-RNC hard handovers switching in the CN per neighbour cell relation per cause.
- b) CC.
- c) Receipt of a RANAP message RELOCATION PREPARATION FAILURE sent from the CN (Source side) to the source RNC, indicating a failed relocation preparation for outgoing inter-RNC hard handover switching in the CN. Failure causes are defined within TS 25.413.
 - The sum of all supported per cause measurements should equal the total number of failed events.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form HHO.FailRelocPrepOutInterRNCCN. *Cause* where *Cause* identifies the name of the failure cause.
- f) Neighbour Cell (UtranCell-UtranCell).

- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.16 Attempted outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides the number of attempted outgoing -nter-RNC hard handovers switching in the CN per neighbour cell relation related to UEs.
- b) CC.
- c) Transmission of a RRC message PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER SETUP, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, or TRANSPORT CHANNEL RECONFIGURATION from the source RNC to the UE, indicating the attempt of an inter-RNC hard handover switching in the CN. See TS 25.331.
- d) A single integer value.
- e) HHO.AttOutInterRNCCN
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.17 Successful outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides the number of successful outgoing inter-RNC hard handovers switching in the CN per neighbour cell relation related to UEs.
- b) CC.
- c) Receipt of a RANAP message Iu RELEASE COMMAND sent from the CN (Source side) to the source RNC, indicating a successful inter-RNC hard handover switching in the CN. See TS 25.413.
- d) A single integer value.
- e) HHO.SuccOutInterRNCCN
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.9.18 Failed outgoing inter-RNC hard handovers switching in the CN

- a) This measurement provides the number of failed outgoing inter-RNC hard handovers switching in the CN per neighbour cell relation related to UEs, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message PHYSICAL CHANNEL RECONFIGURATION FAILURE, RADIO BEARER SETUP FAILURE, RADIO BEARER RECONFIGURATION FAILURE, RADIO BEARER RELEASE FAILURE, or TRANSPORT CHANNEL RECONFIGURATION FAILURE sent from the UE to the source RNC, indicating a failed inter-RNC hard handover switching in the CN. Failure causes are defined within 3GPP TS25.331.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form HHO.FailOutInterRNCCN. *Cause* where *Cause* identifies the failure cause.

- g) Neighbour Cell (UtranCell-UtranCell).
- h) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.10 Relocation

4.10.1 Attempted relocations preparations

- a) This measurement provides the number of attempted relocation preparations ('UE involved' and 'UE non involved' Relocations).
- b) CC.
- c) Transmission of a RANAP message RELOCATION REQUIRED from the source RNC to the CN (Source side), indicating an attempted relocation preparation. See TS 25.413.
- d) A single integer value.
- e) Reloc.AttPrep
- f) RncFunction
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.10.2 Successful relocation preparations

- a) This measurement provides the number of successful relocation preparations ('UE involved' and 'UE non involved' Relocations).
- b) CC.
- c) Receipt of a RANAP message RELOCATION COMMAND sent from the CN (Source side) to the source RNC, indicating a successful relocation preparation. See TS 25.413.
- d) A single integer value.
- e) Reloc.SuccPrep
- f) RncFunction
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.10.3 Failed relocation preparations

- a) This measurement provides number of failed relocation preparations per cause ('UE involved' and 'UE non involved' Relocations).
- b) CC.
- c) Receipt of a RANAP message RELOCATION PREPARATION FAILURE sent from the CN (Source side) to the source RNC, indicating a failed relocation preparation. Failure causes are defined within TS 25.413.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form Reloc.FailPrep.Cause where Cause identifies the failure cause.

- g) RncFunction
- h) Valid for circuit switched and packet switched traffic.
- i) UMTS

4.10.4 Successful relocations

- a) This measurement provides the number of successful relocations ('UE involved' and 'UE non involved' Relocations).
- b) CC.
- c) Receipt of a RANAP message Iu RELEASE COMMAND sent from the CN (Source side) to the source RNC in response to a RELOCATION REQUIRED message, indicating a successful relocation. See TS 25.413.
- d) A single integer value.
- e) Reloc.Succ
- f) RncFunction
- g) Valid for circuit switched and packet switched traffic.
- h) UMTS

4.11 Circuit switched inter-RAT handover

4.11.1 Attempted relocation preparation for outgoing circuit switched inter-RAT handovers

- a) This measurement provides the number of attempted relocation preparations for outgoing circuit switched inter-RAT handovers per neighbour cell.
- b) CC.
- c) Transmission of a RANAP message RELOCATION REQUIRED from the serving RNC to the CN, indicating an attempted relocation preparation of an outgoing inter-RAT handover. See TS 25.413.
- d) A single integer value.
- e) RATHO.AttRelocPrepOutCS
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.2 Successful relocation preparation for outgoing circuit switched inter-RAT handovers

- a) This measurement provides the number of successful relocation preparations for outgoing circuit switched inter-RAT handovers per neighbour cell.
- b) CC.
- c) Receipt of a RANAP message RELOCATION COMMAND sent from the CN to the serving RNC, indicating a successful relocation preparation of an inter-RAT handover. See TS 25.413.
- d) A single integer value.
- e) RATHO.SuccRelocPrepOutCS

- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.3 Failed relocation preparation for outgoing circuit switched inter-RAT handovers

- a) This measurement provides number of failed relocation preparations for outgoing circuit switched inter-RAT handovers per neighbour cell per cause.
- b) CC.
- c) Receipt of a RANAP message RELOCATION PREPARATION FAILURE sent from the CN to the serving RNC, indicating a failed relocation preparation for outgoing inter-RAT handovers. Failure causes are defined within TS 25.413.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form RATHO.FailRelocPrepOutCS. *Cause* where *Cause* identifies the failure cause.
- g) Neighbour Cell (UtranCell-UtranCell).
- h) Valid for circuit switched traffic.
- i) UMTS

4.11.4 Attempted outgoing circuit switched inter-RAT handovers

- a) This measurement provides the number of attempted outgoing circuit switched inter-RAT handovers per neighbour cell from UEs point of view.
- b) CC.
- c) Transmission of a RRC-message INTER RADIO ACCESS TECHNOLOGY HANDOVER COMMAND from serving RNC to the UE, indicating an attempted outgoing inter-RAT handover. See TS 25.331.
- d) A single integer value.
- e) RATHO.AttOutCS
- f) Neighbour Cell (UtranCell-UtranCell).
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.5 Successful outgoing circuit switched inter-RAT handovers

- a) This measurement provides the number of successful outgoing circuit switched inter-RAT handovers per neighbour cell from UEs point of view.
- b) CC.
- c) Receipt of a RANAP message Iu RELEASE COMMAND sent from the CN to the serving RNC, indicating a successful inter-RAT handover. See TS 25.413.
- d) A single integer value.

- e) SuccOutCSInterRATHO RATHO.SuccOutCS
- f) Neighbour Cell (UtranCell-UtranCell)..
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.6 Failed outgoing circuit switched inter-RAT handovers

- a) This measurement provides the number of failed outgoing circuit switched inter-RAT handovers per neighbour cell per cause from UEs point of view, where the UE returned to the original physical channel configuration.
- b) CC.
- c) Receipt of a RRC message INTER RADIO ACCESS TECHNOLOGY HANDOVER FAILURE sent from the UE to the serving RNC, indicating a failed inter-RAT handover. Failure causes are defined within TS 25.331.
- d) The sum of all supported per cause measurements should equal the total number of failed events.
- e) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- f) The measurement name has the form RATHO.FailOutCS. *Cause* where *Cause* identifies the failure cause.
- g) Neighbour Cell (UtranCell-UtranCell).
- h) Valid for circuit switched traffic.
- i) UMTS

4.11.7 Attempted incoming circuit switched inter-RAT handovers

- a) This measurement provides the number of attempted incoming circuit switched inter-RAT handovers for each cell.
- b) CC.
- c) Receipt of a RANAP RELOCATION REQUEST message sent from the CN to the target RNC, indicating the attempt of an inter-RAT handover. See TS 25.413.
- d) A single integer value.
- e) RATHO.AttIncCS
- f) UtranCell
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.8 Successful incoming circuit switched inter-RAT handovers

- a) This measurement provides the number of successful incoming circuit switched interRAT handovers for each cell.
- b) CC.
- c) Receipt of a RRC HANDOVER TO UTRAN COMPLETE message sent from the UE to the target RNC, indicating a successful interRAT handover. See TS 25.331.
- d) A single integer value.
- e) RATHO.SuccIncCS

- f) UtranCell
- g) Valid for circuit switched traffic.
- h) UMTS

4.11.9 Failed incoming circuit switched inter-RAT handovers

- a) This measurement provides the number of failed incoming circuit switched interRAT handovers per cell per cause.
- b) CC.
- c) Receipt of a RANAP message RELOCATION FAILURE sent from the CN to the target RNC, indicating a failed relocation preparation for incoming inter-RAT handovers. Failure causes are defined within TS 25.413.
 - The sum of all supported per cause measurements should equal the total number of failed events.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form RATHO.FailIncCS.*Cause* where *Cause* identifies the failure cause.
- f) UtranCell
- g) Valid for circuit switched traffic.
- h) UMTS

4.12 Packet switched inter-RAT handover

4.12.1 Attempted outgoing packet switched inter-RAT handovers, UTRAN controlled

- a) This measurement provides the number of attempted outgoing, UTRAN controlled, Packet Switched interRAT handovers per cell.
- b) CC.
- c) Transmission of a RRC-message, CELL CHANGE ORDER FROM UTRAN, from source RNC to the UE, indicating a attempted outgoing Packet Switched inter-RAT handover. See TS 25.331.
- d) A single integer value.
- e) RATHO.AttOutPSUTRAN
- f) UtranCell
- g) Valid for packet switched traffic.
- h) UMTS

4.12.2 Successful outgoing packet switched inter-RAT handovers, UTRAN controlled

- a) This measurement provides the number of successful outgoing, UTRAN controlled, Packet Switched interRAT handovers per cell.
- b) CC.
- c) Transmission of a RANAP message, Iu RELEASE COMMAND, from the PS CN to the source RNC, indicating a successful outgoing Packet Switched inter-RAT handover. See TS 25.413.

- d) A single integer value.
- e) RATHO.SuccOutPSUTRAN
- f) UtranCell
- g) Valid for packet switched traffic.
- h) UMTS

4.12.3 Failed outgoing packet switched inter-RAT handovers UTRAN controlled

- a) This measurement provides the number of failed outgoing, UTRAN controlled, Packet Switched interRAT handovers per cause, where the UE resumes the connection to UTRAN using the same resources used before receiving the cell change order. This is measured per cell.
- b) CC.
- c) Receipt of an RRC message, CELL CHANGE FAILURE FROM UTRAN, sent from the UE to the source RNC, indicating a failed inter-RAT handover. Failure causes are defined within TS 25.331.
 - The sum of all supported per cause measurements should equal the total number of failed events.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) The measurement name has the form RATHO.FailOutPSUTRAN. Cause where Cause identifies the failure cause.
- f) UtranCell
- g) Valid for packet switched traffic.
- h) UMTS

4.12.4 Successful outgoing packet switched inter-RAT handovers, UE controlled

- a) This measurement provides the number of successful outgoing, UE controlled, Packet Switched inter-RAT handovers per cell.
- b) CC.
- c) Receipt of an RANAP message, SRNS CONTEXT REQUEST, sent from the PS CN to the serving RNC, indicating a successful outgoing UE controlled Packet Switched inter-RAT handover. See TS 25.413.
- d) Each measurement is an integer value. The number of measurements is equal to the number of causes supported.
- e) RATHO.SuccOutPSUE
- f) UtranCell
- g) Valid for packet switched traffic.
- h) UMTS

5 Measurements related to the SGSN

5.1 Mobility Management

5.1.1 Attempted GPRS attach procedures

- a) This measurement provides the number of attempted GPRS attach procedures initiated within this SGSN area. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of "ATTACH REQUEST" message from the MS, indicating a GPRS attach(TS 24.008; attach type = GPRS attach).
- d) A single integer value per measurement type defined in E
- e) attGprsAttach:

attGprsAttach COMB (don't care)

attGprsAttach.G GSM attGprsAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.2 Successful GPRS attach procedures

a) This measurement provides the number of successfully performed GPRS attach procedures within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of a "ATTACH ACCEPT" message to the MS, indicating a GPRS only attached (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succGprsAttach:

succGprsAttach COMB (don't care)

succGprsAttach.G GSM succGprsAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.3 Attempted intra-SGSN Routing Area Update procedures

a) This measurement provides the number of attempted intra-SGSN Routing Area Update procedures initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

b) CC

- c) Receipt of a "ROUTING AREA UPDATE REQUEST" message from the MS, where the old RA and the new RA are served by this SGSN (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attIntraSgsnRaUpdate:

attIntraSgsnRaUpdate COMB (don't care)

attIntraSgsnRaUpdate.G GSM attIntraSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.4 Successful intra-SGSN Routing Area Update procedures

a) This measurement provides the number of successfully performed intra-SGSN Routing Area Update procedures initiated in this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of "ROUTING AREA UPDATE ACCEPT" message to the MS (TS 24.008).
- d) A single integer value
- e) succIntraSgsnRaUpdate:

succIntraSgsnRaUpdate COMB (don't care)

succIntraSgsnRaUpdate.G GSM succIntraSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.5 Attempted GPRS detach procedures initiated by MS

- a) This measurement provides the number of MS initiated GPRS detach procedures within this SGSN area. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of a "DETACH REQUEST" message from the MS indicating a GPRS detach (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attGprsDetachMs:

attGprsDetachMs COMB (don't care)

attGprsDetachMs.G GSM attGprsDetachMs.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching

h) GSM/UMTS

5.1.6 Attempted GPRS detach procedures initiated by SGSN

- a) This measurement provides the number of attempted GPRS detach procedures initiated by SGSN. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of a "DETACH REQUEST" message to the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attGprsDetachSgsn:

attGprsDetachSgsn COMB (don't care)

attGprsDetachSgsn.G GSM attGprsDetachSgsn.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.7 Attempted inter-SGSN Routing Area Update procedures

a) This measurement provides the number of attempted inter-SGSN Routing Area Update procedures initiated in this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of an "ROUTING AREA UPDATE REQUEST" message from the MS where the old RA is served by another SGSNs (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attInterSgsnRaUpdate:

attInterSgsnRaUpdate COMB (don't care)

attInterSgsnRaUpdate.G GSM attInterSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.8 Successful inter-SGSN Routing Area Update procedures

a) This measurement provides the number of successfully completed inter-SGSN Routing Area Update procedures in this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of a "ROUTING AREA UPDATE COMPLETE" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E

e) succInterSgsnRaUpdate:

succInterSgsnRaUpdate COMB (don't care)

succInterSgsnRaUpdate.G GSM succInterSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.9 Attempted GPRS attach procedures with IMSI already attached

a) This measurement provides the number of attempted GPRS attach procedures, while IMSI is already attached. We count the attempt initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "ATTACH REQUEST" Message from the MS, indicating GPRS attach while IMSI attached (3GPP TS 24.008; attach type = GPRS attach while IMSI attached).
- d) A single integer value per measurement type defined in E
- e) attImsiAttach:

attImsiAttach COMB (don't care)

attImsiAttach.G GSM attImsiAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.10 Successful GPRS attach procedures with IMSI already attached

- a) This measurement provides the number of successfully performed GPRS attach procedures, while IMSI is already attached. We count the attempt initiated within this SGSN area.

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of a "ATTACH ACCEPT" message to the MS, indicating a GPRS attach while IMSI attached (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succImsiAttach

succImsiAttach COMB (don't care)

succImsiAttach.G GSM succImsiAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.11 Attempted IMSI detach procedures initiated by MS

a) This measurement provides the number of attempted IMSI detach procedures MS-initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "DETACH REQUEST" message from the MS, indicating a IMSI detach (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attImsiDetachMs:

attImsiDetachMs COMB (don't care)

attImsiDetachMs.G GSM attImsiDetachMs.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.12 Attempted combined GPRS/IMSI attach procedures

a) This measurement provides the number of attempt of combined GPRS/IMSI attach procedures initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "ATTACH REQUEST" message from the MS, indicating combined GPRS/IMSI attach (TS 24.008; attach type = Combined GPRS/IMSI attach).
- d) A single integer value per measurement type defined in E
- e) attCombiAttach:

attCombiAttach COMB (don't care)

attCombiAttach.G GSM attCombiAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.13 Successful combined GPRS/IMSI attach procedures

- This measurement provides the number of success-fully completed of Combined GPRS/IMSI attach pro-cedures initiated within this SGSN area.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of "ATTACH ACCEPT" message to the MS, indicating combined GPRS/IMSI attach (3GPP TS 24.008).
- d) A single integer value per measurement type defined in E

e) succCombiAttach:

succCombiAttach COMB (don't care)

succCombiAttach.G GSM succCombiAttach.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.14 Attempted combined GPRS/IMSI detach procedures initiated by MS

a) This measurement provides the number of attempted Combined GPRS/IMSI detach procedures MS-initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "DETACH REQUEST" message from the MS, indicating a Combined GPRS/IMSI detach (3GPP TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attCombiDetachMs:

attCombiDetachMs COMB (don't care)

attCombiDetachMs.G GSM attCombiDetachMs.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.15 Successful GPRS detach procedures initiated by SGSN

a) This measurement provides the number of successfully completed GPRS detach procedures SGSN-initiated within this SGSN area.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "DETACH ACCEPT" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succGprsDetachSgsn:

succGprsDetachSgsn COMB (don't care)

succGprsDetachSgsn.G GSM succGprsDetachSgsn.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.16 Attempted combined RA/LA intra-SGSN Routing Area Update procedures

- a) This measurement provides the number of combined RA/LA updates (intra-SGSN) procedures initiated in this SGSN. These are counted as attempts
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- Receipt of "Routing Area Update REQUEST" message from the MS, indicating a combined RA/LA update (3GPP TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attCombiIntraSgsnRaUpdate:

attCombiIntraSgsnRaUpdate COMB (don't care)
attCombiIntraSgsnRaUpdate.G GSM
attCombiIntraSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.17 Attempted "combined RA/LA with IMSI Attach" intra-SGSN Routing Area Update procedures

- a) This measurement provides the number of combined RA/LA updates with IMSI attach (intra-SGSN) procedures initiated in this SGSN. These are counted as attempts

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of "Routing Area Update REQUEST" message from the MS, indicating a combined RA/LA update with IMSI attach. (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attImsiCombiIntraSgsnRAUpdate:

attImsiCombiIntraSgsnRAUpdate COMB (don't care)
attImsiCombiIntraSgsnRAUpdate GSM
attImsiCombiIntraSgsnRAUpdate UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.18 Successful combined RA/LA intra-SGSN Routing Area Update procedures

- a) This measurement provides the number of success-fully performed combined RA/LA updates (intra-SGSN) procedures initiated in this SGSN
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC

- c) Transmission of "Routing Area Update ACCEPT" message to the MS (3GPP TS 24.008)
- d) A single integer value per measurement type defined in E
- e) succCombiIntraSgsnRaUpdate:

succCombiIntraSgsnRaUpdate COMB (don't care)

succCombiIntraSgsnRaUpdate.G GSM succCombiIntraSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.19 Attempted combined RA/LA inter-SGSN Routing Area Update procedures

a) This measurement provides the number of combined RA/LA updates (inter-SGSN) procedures initiated in this SGSN. These are counted as attempts

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "Routing Area Update REQUEST" message from the MS, indicating a combined RA/LA update (3GPP TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attCombiInterSgsnRaUpdate

attCombiInterSgsnRaUpdate COMB (don't care)

attCombiInterSgsnRaUpdate.G GSM attCombiInterSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.20 Attempted "combined RA/LA with IMSI Attach" inter-SGSN Routing Area Update procedures

a) This measurement provides the number of combined RA/LA updates with IMSI attach (inter-SGSN) procedures initiated in this SGSN. These are counted as attempts

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "Routing Area Update REQUEST" message from the MS, indicating a combined RA/LA update with IMSI attach.E52
- d) A single integer value per measurement type defined in E
- e) attImsiCombiInterSgsnRAUpdate:

attImsiCombiInterSgsnRAUpdate COMB (don't care)

attImsiCombiInterSgsnRAUpdate GSM attImsiCombiInterSgsnRAUpdate UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.21 Successful combined RA/LA inter-SGSN Routing Area Update procedures

- a) This measurement provides the number of success-fully performed combined RA/LA updates (inter-SGSN) procedures initiated in this SGSN
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of "Routing Area Update ACCEPT" message to the MS (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) succCombiInterSgsnRaUpdate:

succCombiInterSgsnRaUpdate COMB (don't care)
succCombiInterSgsnRaUpdate.G GSM
succCombiInterSgsnRaUpdate.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.22 Number of received invalid P-TMSI's during detach

- a) This measurement provides the number of received invalid P-TMSI's during detach. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of an "DETACH_REQUEST" with invalid P-TMSI (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) nbrPTMSIDetachFail:

nbrPTMSIDetachFail COMB (don't care)

nbrPTMSIDetachFail.G GSM nbrPTMSIDetachFail.U UMTS

- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM/UMTS

5.1.23 Attempted GSM PS paging procedures

- a) This measurement provides the total number of PS paging procedures that are initiated at the SGSN, over the Gb interface.
- b) CC

- c) incremented when a GSM paging procedure is started, i.e. at the transmission of the first BSSGP Paging Request (GSM TS 08.18) from the SGSN to the MS
- d) A single integer value
- e) attPsPagingProcGb
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM

5.1.24 Attempted UMTS PS paging procedures

- a) This measurement provides the total number of PS paging procedures that are initiated at the SGSN, over the Iu interface.
- b) CC
- c) incremented when a UMTS paging procedure is started i.e. at the transmission of the first "Paging" message (3GPP TS 25.413) from the SGSN to the MS
- d) A single integer value
- e) attPsPagingProcIu
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) UMTS

5.1.25 Attempted PS paging procedures with unknown access type

- a) This measurement provides the total number of PS paging procedures that are initiated at the SGSN, with access type unknown. In this case the paging will be done both over the Gb and the Iu interface.
- b) CC
- c) incremented when a paging procedure is started for which MM doesn't know the access type i.e. at the transmission of the first BSSGP Paging Request (GSM TS 08.18) and/or "Paging" message (3GPP TS 25.413) from the SGSN to the MS
- d) A single integer value
- e) attPsPagingProcGbIu
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) COMB

5.1.26 Number of PS paging message sends from 2G-SGSN to the MS

- a) This measurement provides the Number of PS paging message sends from 2G-SGSN to the MS
- b) CC
- c) Transmission of "GMM-PAGING.req" (GSM TS 08.18) from the SGSN to the MS. Each paging message will be counted separately, addressed to all BSS in this certain RA.
- d) A single integer value

- e) nbrPsPagingMesGb
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM

5.1.27 Number of PS paging message sends from 3G-SGSN to the MS

- a) This measurement provides the Number of PS paging message sends from 3G-SGSN to the MS
- b) CC
- c) Transmission of "Paging" message (CN Domain Indicator = PS Domain) from the SGSN to the MS (3GPP TS 25.413). Each paging message will be counted separately, addressed to all RNC in this certain RA.
- d) A single integer value
- e) nbrPsPagingMesIu
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) UMTS

5.1.28 Successful GSM PS paging procedures

- a) This measurement provides the total number of successful PS paging procedures that are initiated at the SGSN, over the Gb interface
- b) CC
- c) when an uplink_trigger (any LLC frame) is received by the SGSN from the MS (over the Gb interface) as response to a GSM paging PS procedure (3GPP TS 23.060) or during intersystem change UMTS -> GSM
- d) A single integer value
- e) succPsPagingProcGb
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching
- h) GSM

5.1.29 Successful UMTS PS paging procedures

- a) This measurement provides the total number of successful PS paging procedures that are initiated at the SGSN, over the Iu interface
- b) CC
- c) when a paging_response is received by the SGSN from the MS (over the Iu interface) as response to a UMTS paging PS procedure (Receipt of "Service Request" message (with Service Type = Paging Response) to the MS (3GPP TS 24.008)) or during intersystem change GSM -> UMTS
- d) A single integer value
- e) succPsPagingProcIu
- f) RA, specified by a concatenation of the LAC and the RAC
- g) Valid for packet switching

h) UMTS

5.1.30 Number of subscribers in PMM-IDLE state

- a) Number of subscribers in PMM-IDLE state
- b) CC
- c) incremented at PS Signalling Connection Release (Iu Release), decremented at PS Detach or PS Signalling Connection Establish (Service Request)
- d) A single integer value
- e) nbrSubPmmIdle
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.1.31 Number of subscribers in PMM-CONNECTED state

- a) Number of subscribers in PMM-CONNECTED state
- b) CC
- c) decremented at PS Signalling Connection Release (Iu Release), Detach, PS Attach Reject or RAU Reject, incremented at PS Attach or PS Signalling Connection Establish (Service Request)
- d) A single integer value
- e) nbrSubPmmConnected
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.1.32 Number of attached subscriber

- a) This measurement provides the number of attached subscriber within this SGSN area. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) GAUGE
- c) The gauge will be incremented at transmission of a "ATTACH ACCEPT" message to the MS and will be decremented at transmission of a "DETACH ACCEPT" message to the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) nbrActAttachedSub:

nbrActAttachedSub COMB (don't care)

nbrActAttachedSub.G GSM nbrActAttachedSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.33 Number of Home Subscribers

- a) This measurement provides the number of GPRS home subscribers located in the SGSN location register. The GPRS MM state of this subscriber is GMM_REGISTERED or GMM_DEREGISTERED. Only GPRS subscribers that are homed in the same GPRS network are considered.
 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) GAUGE
- c) Incremented by one when GPRS subscriber is successfully registered in the SGSN location registered and decremented by one when GPRS subscriber is successfully deregistered out of the SGSN location register (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) nbrHomeSub:

nbrHomeSub COMB (don't care)

nbrHomeSub.G GSM nbrHomeSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.34 Number of Visiting National Subscribers

- a) This measurement provides the number of visiting national GPRS subscribers located in the SGSN location register. The GPRS MM state of this subscriber is GMM_REGISTERED or GMM_DEREGISTERED. Only GPRS subscribers that are homed in a partner GPRS network of the same country are considered. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) GAUGE
- c) C. This measurement provides the number of visiting national GPRS subscribers located in the SGSN location register. The GPRS MM state of this subscriber is GMM_REGISTERED or GMM_DEREGISTERED. Only GPRS subscribers that are homed in a partner GPRS network of the same country are considered.
- d) A single integer value per measurement type defined in E
- e) nbrVisitingNatSub:

nbrVisitingNatSub COMB (don't care)

nbrVisitingNatSub.G GSM nbrVisitingNatSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.35 Number of Visiting Foreign Subscribers

- a) This measurement provides the number of visiting foreign GPRS located in the SGSN location register. The GPRS MM state of this subscriber is GMM_REGISTERED or MM_DEREGISTERED. Only GPRS subscribers that are homed in a GPRS network of a foreign country are considered. The three measurement types defined in E are subject to the "2 out of 3 approach"...
- b) GAUGE

- c) Incremented by one when GPRS subscriber is successfully registered in the SGSN location registered and decremented by one when GPRS subscriber is successfully deregistered out of the SGSN location register (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) nbrVisitingForeign

nbrVisitingForeign COMB (don't care)

nbrVisitingForeign.G GSM nbrVisitingForeign.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.36 Mean number of attached subscriber

a) This measurment provides the arithmetic mean number of the number of attached subscriber within this SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) S
- c) This measurement is obtained by sampling at a pre-defined interval, the number of subscribers which are attached and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanNbrAttachedSub:

meanNbrAttachedSub COMB (don't care)

meanNbrAttachedSub.G GSM meanNbrAttachedSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.37 Mean Number of Home Subscribers

a) This measurement provides the arithmetic mean number of GPRS home subscribers located in the SGSN location register

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number of GPRS home subscribers located in the SGSN location register and then taking the arithmetic mean.
- d) A single integer value per measurement type defined in E
- e) meanNbrHomeSub:

meanNbrHomeSub COMB (don't care)

meanNbrHomeSub.G GSM meanNbrHomeSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.38 Mean Number of Visiting National Subscribers

a) This measurement provides the arithmetic mean number of visiting national GPRS subscribers located in the SGSN location register.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number of visiting national GPRS subscribers located in the SGSN location register and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanNbrVisitingNatSub:

meanNbrVisitingNatSub COMB (don't care)

meanNbrVisitingNatSub.G GSM meanNbrVisitingNatSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.39 Mean Number of Visiting Foreign Subscribers

a) This measurement provides the arithmetic mean number of visiting foreign GPRS located in the SGSN location register.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number of visiting foreign GPRS subscribers located in the SGSN location register and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanNbrVisitingForeign:

meanNbrVisitingForeign COMB (don't care)

meanNbrVisitingForeign.U GSM meanNbrVisitingForeign.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.40 Number of CAMEL subscribers

- a) This measurement provides the number of attached subscriber within this SGSN area with CAMEL service The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) GAUGE

- c) The gauge will be incremented at transmission of a "ATTACH ACCEPT" (with CAMEL service) message to the MS and will be decremented at transmission of a "DETACH ACCEPT" (with CAMEL service) message to the MS.
- d) A single integer value per measurement type defined in E
- e) nbrCamelSub:

nbrCamelSub COMB (don't care)

nbrCamelSub.G GSM nbrCamelSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.41 Mean Number of CAMEL subcribers

- a) This measurement provides the arithmetic mean number value of attached subscribers with CAMEL service The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number of subscribers which are attached using CAMEL service and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanNbrCamelSub:

meanNbrCamelSub COMB (don't care)

meanNbrCamelSub.G GSM meanNbrCamelSub.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.1.42 Attempted InsertSubscriberData requests received from a HLR during GPRS Update Location procedure

- a) This measurement provides the number of InsertSubscriberData requests received from a HLR during GPRS Update Location procedure.
- b) CC
- c) Receipt of a "MAP-INSERT-SUBSCRIBER-DATA" service request (TS 29.002) during a GPRS Update Location procedure.
- d) A single integer value
- e) attInsertSubscrDataHlrUpdLoc
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.1.43 Attempted GPRS Update Locations sent to the HLR.

- a) This measurement provides the number of GPRS Update Locations sent to the HLR.
- b) CC
- c) Transmission of a 'MAP_UPDATE_LOCATION' service request (TS 29.002).
- d) A single integer value
- e) attUpdateGprsLocationHlr
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.1.44 Successful GPRS Update Locations sent to the HLR.

- a) This measurement provides the number of successful GPRS Update Locations returned from the HLR.
- b) CC
- c) Transmission of a 'MAP_UPDATE_LOCATION' service request (TS 29.002).
- d) A single integer value
- e) succUpdateGprsLocationHlr
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.1.45 Attempted CancelLocation requests received from an HLRoperator, in case of a HLR-initiated Detach

- a) This measurement provides the number of CancelLocation requests received from an HLR-operator, in case of a HLR-initiated Detach
- b) CC
- c) Receipt of a 'MAP_CANCEL_LOCATION' service request (TS 29.002)
- d) A single integer value
- e) attCancelLocHlrOp
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.1.46 Attempted CancelLocation requests received from a HLR due to a SGSN-change (previous SGSN)

- a) This measurement provides the number of CancelLocation requests received from a HLR due to a SGSN-change (previous SGSN)
- b) CC

- c) Receipt of a 'MAP_CANCEL_LOCATION' service request (TS 29.002) due to a SGSN-change (previous SGSN)
- d) A single integer value
- e) attCancelLocHlrSgsnChg
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.1.47 Attempted Reset requests received from a HLR due to an HLR restart, indicating that a failure occured.

- a) This measurement provides the number of Reset requests received from a HLR due to an HLR restart, indicating that a failure occured.
- b) CC
- c) Receipt of a 'MAP_RESET' service request (TS 29.002) from a HLR
- d) A single integer value
- e) attResetHlr
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.2 Subscriber Management

5.2.1 Attempted Insert Subscriber Data requests received from a HLR due to an HLR-operator intervention.

- a) This measurement provides the number of Insert Subscriber Data requests received from a HLR due to an HLR-operator intervention.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of a "MAP-INSERT-SUBSCRIBER-DATA" service request (TS 29.002).

UMTS

- d) A single integer value per measurement type defined in E
- e) attInsertSubscrDataHlrOp:

attInsertSubscrDataHlrOp COMB (don't care) attInsertSubscrDataHlrOp.G GSM

attInsertSubscrDataHlrOp.U

f) SgsnFunction

- g) Valid for packet switching
- h) GSM/UMTS

5.2.2 Attempted Delete Subscriber Data requests received from a HLR due to an HLR-operator intervention.

a) This measurement provides the number of Delete Subscriber Data requests received from a HLR due to an HLR-operator intervention.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of a "MAP_DELETE_SUBSCRIBER_DATA" service request (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) attDeleteSubscrDataHlrOp:

attDeleteSubscrDataHlrOp COMB (don't care)
attDeleteSubscrDataHlrOp.G GSM
attDeleteSubscrDataHlrOp.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.3 SRNC Relocation

5.3.1 Attempted intra/inter 3G-SGSN SRNS Relocation

- a) This measurement provides the number of attempts intra/inter 3G-SGSN SRNS Relocation
- b) CC
- c) Receipt of "Relocation Required" message (TS 25.413) from SRNC
- d) A single integer value
- e) attSRNSReloc
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.2 Successful intra 3G-SGSN SRNS Relocation

- a) This measurement provides the number of successful intra 3G-SGSN SRNS Relocation
- b) CC
- c) Receipt of "Relocation Complete" message (TS 25.413) from TRNC
- d) A single integer value
- e) succIntraSRNSReloc
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.3 Unsuccessful intra 3G-SGSN SRNS Relocation, due to internal reasons

- a) This measurement provides the number of unsuccessful intra 3G-SGSN SRNS Relocation, due to internal reasons
- b) CC
- c) Intra 3G-SGSN SRNS Relocation fails due to reasons located inside this SGSN :- internal resource problem-recovery- ...
- d) A single integer value
- e) unsuccIntraSRNSRelocInt
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.4 Unsuccessful intra 3G-SGSN SRNS Relocation, due to external reasons

- a) This measurement provides the number of unsuccessful intra 3G-SGSN SRNS Relocation, due to external reasons
- b) CC
- c) Intra 3G-SGSN SRNS Relocation fails due to reasons located in NE outside this SGSN:- "Relocation Preparation Failure" (TS 25.413) is sent to the SRNC- "Relocation Failure" (TS 25.413) is received from the TRNC- "Relocation Cancel" (TS 25.413) is received from the SRNC- missing expected message from RNC (timer expiry)- ...
- d) A single integer value
- e) unsuccIntraSRNSRelocExt
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.5 Attempted inter 3G-SGSN SRNS Relocation

- a) This measurement provides the number of attempts inter 3G-SGSN SRNS Relocation
- b) CC
- Receipt of "Relocation Required" message (TS 25.413) from SRNC, where the Target ID indicates Inter SGSN SRNS Relocation
- d) A single integer value
- e) attInterSRNSReloc
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.6 Successful Inter 3G-SGSN SRNS Relocation, counted in the old 3G-SGSN

- a) This measurement provides the number of successful Inter 3G-SGSN SRNS Relocation, counted in the old 3G-SGSN
- b) CC
- c) Receipt of "Forward Relocation Complete" message (TS 29.060) from the new SGSN
- d) A single integer value
- e) succInterSRNSReloc
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.7 Unsuccessful Inter 3G-SGSN SRNS Relocation, due to internal reasons

- a) This measurement provides the number of unsuccessful Inter 3G-SGSN SRNS Relocation, due to internal reasons
- b) CC
- c) Inter 3G-SGSN SRNS Relocation fails due to reasons located inside this SGSN :- internal resource problem-recovery- ...
- d) A single integer value
- e) unsuccInterSRNSRelocInt
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.8 Unsuccessful Inter 3G-SGSN SRNS Relocation, due to external reasons

- a) This measurement provides the number of unsuccessful Inter 3G-SGSN SRNS Relocation, due to external reasons
- b) CC
- c) Inter 3G-SGSN SRNS Relocation fails due to reasons located in NE outside this SGSN: the Cause in "Forward Relocation Response" (TS 29.060) from the new 3G-SGSN is not "Request Accepted" "Relocation Preparation Failure" (TS 25.413) is sent to the SRNC- "Relocation Failure" (TS 25.413) is received from the TRNC- "Relocation Cancel" (TS 25.413) is received from the SRNC- missing expected message from RNC or new 3G-SGSN (timer expiry) ...
- d) A single integer value
- e) unsuccInterSRNSRelocExt
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.9 Attempted inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN

- a) This measurement provides the number of attempts inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN
- b) CC
- c) Receipt of "Forward Relocation Request" message (TS 29.060) from the old SGSN
- d) A single integer value
- e) attInterSRNSRelocNew
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.3.10 Successful Inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN

- a) This measurement provides the number of successful Inter 3G-SGSN SRNS Relocation, counted in the new 3G-SGSN
- b) CC
- c) Transmission of "Forward Relocation Complete" message (TS 29.060) to the old SGSN
- d) A single integer value
- e) succInterSRNSRelocNew
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.4 Security

5.4.1 Attempted P-TMSI reallocation procedures

- a) This measurement provides the number of attempted P-TMSI reallocation, or implicitly as part of the Location Updating, procedures in this SGSN.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of "P-TMSI REALLOCATION COMMAND" message by the SGSN (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attPTMSIRealloc:

attPTMSIRealloc COMB (don't care)

attPTMSIRealloc.G GSM attPTMSIRealloc.U UMTS

f) SgsnFunction

- g) Valid for packet switching
- h) GSM/UMTS

5.4.2 Successful P-TMSI reallocation procedures

 a) This measurement provides the number of successfully performed P-TMSI reallocation procedures in this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of "P-TMSI REALLOCATION COMPLETE" message by the SGSN (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) succPTMSIRealloc:

succPTMSIRealloc COMB (don't care)

succPTMSIRealloc.G GSM succPTMSIRealloc.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.3 Attempted Identity Request procedures initiated by this SGSN.

- a) This measurement provides the number of attempted Identity Request procedures initiated by this SGSN. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of an "IDENTITY REQUEST" (with Identity Type = IMSI) message to the MS (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attIdentityReqImsi:

attIdentityReqImsi COMB (don't care)

attIdentityReqImsi.G GSM attIdentityReqImsi.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.4 Successful completed Identity Request procedures initiated by this SGSN.

 a) This measurement provides the number of successfully completed Identity Request procedures initiated by this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of an "IDENTITY RESPONSE" message with IMSI by the SGSN from the MS (TS 24.008)

- d) A single integer value per measurement type defined in E
- e) succIdentityReqImsi:

succIdentityReqImsi COMB (don't care)

succIdentityReqImsi.G GSM succIdentityReqImsi.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.5 Attempted identification information requests sent to a partner (previous) SGSN for subscribers registering afresh in this SGSN.

- a) This measurement provides the number of identification information requests sent to a partner (previous) SGSN for subscribers registering afresh in this SGSN.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) transmision of the "Identification Request" message to the old SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attIdentityReqToPsgsn:

attIdentityReqToPsgsn COMB (don't care)

attIdentityReqToPsgsn.G GSM attIdentityReqToPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.6 Successful replied identification information requests that were sent to a partner (previous) SGSN.

a) This measurement provides the number of successfully replied identification information requests that were sent to a partner (previous) SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) receipt of the "Identification Response" message from the old SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succIdentityReqToPsgsn:

succIdentityReqToPsgsn COMB (don't care)

succIdentityReqToPsgsn.G GSM succIdentityReqToPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching

h) GSM/UMTS

5.4.7 Attempted Identity Requests sent to the MS.

- a) This measurement provides the number of Identity Requests sent to the MS. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) C. Transmission of an "IDENTITY REQUEST" message (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attIdentityRequest:

attIdentityRequest COMB (don't care)

attIdentityRequest.G GSM attIdentityRequest.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.8 Successful replied Identity Requests from the MS.

- a) This measurement provides the number of successfully replied Identity Requests from the MS. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of an "IDENTITY RESPONSE" message (TS 24.008) from the MS.
- d) A single integer value per measurement type defined in E
- e) succIdentityRequest:

succIdentityRequest COMB (don't care)

succIdentityRequest.G GSM succIdentityRequest.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.9 Attempted authentication procedures that are started within this SGSN area for a subscriber using a SIM

- a) This measurement provides the number of authentication procedures that are started within this SGSN area for a subscriber using a SIM
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of an "AUTHENTICATION AND CIPHERING REQUEST" message to a MS using a SIM (TS 24.008)
- d) A single integer value per measurement type defined in E

e) attAuthProcsSgsnSim:

attAuthProcsSgsnSim COMB (don't care)

attAuthProcsSgsnSim.G GSM attAuthProcsSgsnSim.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.10 Successful authentication procedures within this SGSN area, for a subscriber using a SIM.

a) This measurement provides the number of successful authentication procedures within this SGSN area, for a subscriber using a SIM.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of an "AUTHENTICATION AND CIPHERING RESPONSE" message from the MS, using a SIM, where the receipt SRES parameter value matches the value stored in the SGSN (TS24.008)
- d) A single integer value per measurement type defined in E
- e) succAuthProcsSgsnSim:

succAuthProcsSgsnSim COMB (don't care)

succAuthProcsSgsnSim.G GSM succAuthProcsSgsnSim.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.11 Attempted authentication procedures that are started within this SGSN area for a subscriber using a USIM

- a) This measurement provides the number of authentication procedures that are started within this SGSN area for a subscriber using a USIM
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of an "AUTHENTICATION AND CIPHERING REQUEST" message to a MS using a USIM (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attAuthProcsSgsnUsim:

attAuthProcsSgsnUsim COMB (don't care)

attAuthProcsSgsnUsim.G GSM attAuthProcsSgsnUsim.U UMTS

- f) SgsnFunction
- g) Valid for packet switching

h) GSM/UMTS

5.4.12 Successful authentication procedures within this SGSN area, for a subscriber using a USIM

- a) This measurement provides the number of successful authentication procedures within this SGSN area, for a subscriber using a USIM.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of an "AUTHENTICATION AND CIPHERING RESPONSE" message from the MS , using a USIM, where the receipt RES parameter value matches the value stored in the SGSN (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) succAuthProcsSgsnUsim:

succAuthProcsSgsnUsim COMB (don't care)
succAuthProcsSgsnUsim.G GSM
succAuthProcsSgsnUsim.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.13 Received ciphering and Authentication failures within this SGSN area.

- a) This measurement provides the number of ciphering and Authentication failures within this SGSN area. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of an "AUTHENTICATION AND CIPHERING FAILURE" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) recPOAuthFailSgsn:

recPOAuthFailSgsn COMB (don't care)

recPOAuthFailSgsn.G GSM recPOAuthFailSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.14 Attempted identification information requests that were received from a partner (new) SGSN for subscribers de-registering from this SGSN

a) This measurement provides the number of identification information requests that were received from a partner (new) SGSN for subscribers de-registering from this SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of the "Identification Request" message from a partner (new) SGSN (TS 29.060).
- d) A single integer value per measurement type defined in E
- e) attIdentityReqFromPsgsn:

attIdentityReqFromPsgsn COMB (don't care)

attIdentityReqFromPsgsn.G GSM attIdentityReqFromPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.15 Successfully replied identification information requests that were received from a partner (new) SGSN

- a) This measurement provides the number of succesfully replied identification information requests that were received from a partner (new) SGSN
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of the "Identification Response" message to the new SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succIdentityReqFromPsgsn:

succIdentityReqFromPsgsn COMB (don't care)

succIdentityReqFromPsgsn.G GSM succIdentityReqFromPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.16 Attempted SGSN context requests sent to a partner (previous) SGSN for subscribers registering afresh in this SGSN.

a) This measurement provides the number of SGSN context requests sent to a partner (previous) SGSN for subscribers registering afresh in this SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of the "Context Request" message to the previous SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attContextRequestToPsgsn:

attContextRequestToPsgsn COMB (don't care)

attContextRequestToPsgsn.G GSM attContextRequestToPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.17 Successfully replied SGSN context requests that were sent to a partner (previous) SGSN

a) This measurement provides the number of successfully replied SGSN context requests that were sent to a partner (previous) SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of the "Context Response" message from the previous SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succContextRequestToPsgsn:

succContextRequestToPsgsn COMB (don't care)
succContextRequestToPsgsn.G GSM
succContextRequestToPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.18 Attempted SGSN context requests received from a partner (new) SGSN for a subscriber de-registering from this SGSN

a) This measurement provides the number of SGSN context requests received from a partner (new) SGSN for a subscriber de-registering from this SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of the "Context Request" message from the new SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attContextRequestFromPsgsn:

attContextRequestFromPsgsn COMB (don't care)
attContextRequestFromPsgsn.G GSM
attContextRequestFromPsgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.19 Successfully replied SGSN context requests received from a partner (new) SGSN

 a) This measurement provides the number of successfully replied SGSN context requests received from a partner (new) SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of the "Context Response" message to the new SGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succContextRequestFromPsgsn:

succContextRequestFromPsgsnCOMB (don't care)succContextRequestFromPsgsn.GGSMsuccContextRequestFromPsgsn.UUMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.4.20 Number of P-TMSI - IMSI correlation failures (User Identity Confidentiality (TS 23.060))

- a) This measurement provides the number of P-TMSI IMSI correlation failures (User Identity Confidentiality (TS 23.060))
- b) CC
- c) This counter is triggered before the handling of the "Security Functions" (TS 23.060), in case of "Attach Request", "Routing Area Update Request", or "Service Request": if the correlation between the received P-TMSI and the stored IMSI is not valid then this counter is incremented
- d) A single integer value
- e) nbrPTMSICorrFailRnc
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.4.21 Attempted security mode control procedures started by the SGSN

- a) This measurement provides the number of security mode control procedures started by the SGSN
- b) CC
- c) Transmission of a "SECURITY MODE COMMAND" message to the MS (TS 25.413)
- d) A single integer value
- e) attSecMode
- f) SgsnFunction
- g) Valid for packet switching

h) UMTS

5.4.22 Successful security mode procedures.

- a) This measurement provides the number of successful security mode procedures. The Security mode command response from MS starts the uplink integrity protection (and possible ciphering), i.e. also all following messages sent from the MS are integrity protected (and possibly ciphered).
- b) CC
- c) Receipt of a "SECURITY MODE COMPLETE" message from the MS (TS 25.413)
- d) A single integer value
- e) succSecMode
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.4.23 Attempted ciphering procedures started by the SGSN

- a) This measurement provides the number of ciphering procedures started by the SGSN
- b) CC
- c) Transmision of a "SECURITY MODE COMMAND" message with cyphering activated ("Encryption Algorithm" is not "no encryption (0)"), to the MS (TS 25.413)
- d) A single integer value
- e) attCiphering
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.4.24 Successful ciphering procedures started by the SGSN

- a) This measurement provides the number of successful ciphering procedures started by the SGSN
- b) CC
- c) Receipt of a "SECURITY MODE COMPLETE" message, with cyphering activated, from the MS (TS 25.413)
- d) A single integer value
- e) succCiphering
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.4.25 Attempted MAP V1 requests for authentication sets, sent to the HLR by SGSN.

a) This measurement provides the number of attempted MAP V1 requests for authentication sets, sent to the HLR by SGSN.

- b) CC
- c) Transmission of a "MAP V1 SEND_AUTHENTICATION_INFO" service request, requesting authentication sets present (TS 29.002).
- d) A single integer value
- e) attReqAuthSetsHlrV1
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.4.26 Successful MAP V1 requests for authentication sets that were sent to the HLR.

- a) This measurement provides the number of successful MAP V1 requests for authentication sets that were sent to the HLR.
- b) CC
- c) Receipt of a "MAP V1 SEND_AUTHENTICATION_INFO" service confirmation, containing requested authentication sets (parameter "AuthenticationSetList" present TS 29.002)
- d) A single integer value
- e) succReqAuthSetsHlrV1
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.4.27 Number of empty responses to the MAP V1 request for authentication sets that were sent to the HLR.

- a) This measurement provides the number of empty responses to the MAP V1 request for authentication sets that were sent to the HLR.
- b) CC
- c) Receipt of a MAP V1 "SEND_AUTHENTICATION_INFO_ACK" service confirmation, no Authentication sets present (TS 29.002).
- d) A single integer value
- e) nbrEmptyRespAuthSetsHlrV1
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.4.28 Attempted MAP V3 requests for Authentication sets sent to the HLR by SGSN

- a) This measurement provides the number of attempted MAP V3 requests for Authentication sets sent to the HLR by SGSN
- b) CC

- c) Transmission of a MAP V3 "SEND_AUTHENTICATION_INFO" service request, requesting authentication sets present (TS 29.002).
- d) A single integer value
- e) attReqAuthSetsHlrV3
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.4.29 Successful MAP V3 requests for authentication sets that were sent to the HLR.

- a) This measurement provides the number of successful MAP V3 requests for authentication sets that were sent to the HLR.
- b) CC
- c) Receipt of a MAP V3 "SEND_AUTHENTICATION_INFO" service confirmation, containing requested authentication sets (parameter "AuthenticationSetList" present TS 29.002)
- d) A single integer value
- e) succReqAuthSetsHlrV3
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.4.30 Number of empty responses to the MAP V3 request for authentication sets that were sent to the HLR.

- a) This measurement provides the number of empty responses to the MAP V3 request for authentication sets that were sent to the HLR.
- b) CC
- c) Receipt of a MAP V3 "SEND_AUTHENTICATION_INFO_ACK" service confirmation, no Authentication sets present (TS 29.002).
- d) A single integer value
- e) nbrEmptyRespAuthSetsHlrV3
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.5 SMS

The three measurement groups defined in clause 5.5.n are subject to the "2 out of 3 approach".

5.5.1 SMS in the CS domain (MSC)

Up to now, no counters are defined for the failure cases. FFS.

5.5.1.1 Attempted CS SMS mobile originating

- a) This measurement provides the number of CS SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the MSC of "RP-DATA" Message (TS 24.011) from the MS.
- d) A single integer value per measurement type defined in E
- e) attSmsMoCS:

attSmsMoCS COMB (don't care)

attSmsMoCS.G GSM attSmsMoCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.2 Successful CS SMS mobile originating

- a) This measurement provides the number of successful CS SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the MSC of "RP-ACK" Message (TS 24.011) to the MS
- d) A single integer value per measurement type defined in E
- e) succSmsMoCS:

succSmsMoCS COMB (don't care)

succSmsMoCS.G GSM succSmsMoCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.3 Attempted CS SMS mobile terminating.

- a) This measurement provides the number of CS SMS mobile terminating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the MSC of "RP-DATA" Message (TS 24.011)
- d) A single integer value per measurement type defined in E
- e) attSmsMtCS:

attSmsMtCS COMB (don't care)

attSmsMtCS.G GSM attSmsMtCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.4 Successful CS SMS mobile terminating

- a) This measurement provides the number of successful CS SMS mobile terminating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the MSC of "RP-ACK" Message (TS 24.011)
- d) A single integer value per measurement type defined in E
- e) succSmsMtCS:

succSmsMtCS COMB (don't care)

succSmsMtCS.G GSM succSmsMtCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.5 Attempted CS ms-Present

- a) This attribute counts the number of times that a MS (attached to a MSC) send that it is ready to receive SM. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = ms-Present to the HLR from the MSC (TS 29.002)
- d) A single integer value per measurement type defined in E
- e) attMsPresentCS:

attMsPresentCS COMB (don't care)

attMsPresentCS.G GSM attMsPresentCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.6 Attempted CS "memory available"

- a) This attribute counts the number of times that a MS (attached to a MSC) sent a indication of "memory available" to MSC.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = memoryAvailable to the HLR from the MSC (TS 29.002)

- d) A single integer value per measurement type defined in E
- e) attMemoryAvailableCS:

attMemoryAvailableCS COMB (don't care)

attMemoryAvailableCS.G GSM attMemoryAvailableCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.7 Succesful CS ms-Present

a) This attribute counts the number of successful times that a MS (attached to a MSC) send that it is ready to receive SM

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) This counter will be increased when a return result is received by the MSC from the HLR in response to the MAP_READY_FOR_SM with reason = "MS present" (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) SuccMsPresentCS:

SuccMsPresentCS COMB (don't care)

SuccMsPresentCS.G GSM SuccMsPresentCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching
- h) GSM/UMTS

5.5.1.8 Successful CS "memory available"

a) This attribute counts the number of successful times that a MS (attached to a MSC) sent a indication of "memory available" to MSC.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) This counter will be increased when a return result is received by the MSC from the HLR in response to the MAP_READY_FOR_SM with reason = "memory available" (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) SuccMemoryAvailableCS:

SuccMemoryAvailableCS COMB (don't care)

SuccMemoryAvailableCS.G GSM SuccMemoryAvailableCS.U UMTS

- f) MscFunction
- g) Valid for circuit switching

h) GSM/UMTS

5.5.2 SMS in the PS domain (SGSN)

Up to now, no counters are defined for the failure cases FFS.

5.5.2.1 Attempted PS SMS mobile originating

- a) This measurement provides the number of PS SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the SGSN of "RP-DATA" Message (TS 24.011) from the MS.
- d) A single integer value per measurement type defined in E
- e) attSmsMoPS:

attSmsMoPS COMB (don't care)

attSmsMoPS.G GSM attSmsMoPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.2 Successful PS SMS mobile originating

- a) This measurement provides the number of successful PS SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the SGSN of "RP-ACK" Message (TS 24.011) to the MS
- d) A single integer value per measurement type defined in E
- e) succSmsMoPS:

succSmsMoPS COMB (don't care)

succSmsMoPS.G GSM succSmsMoPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.3 Attempted PS SMS mobile terminating.

- a) This measurement provides the number of PS SMS mobile terminating attempts. . The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the SGSN of "RP-DATA" Message (TS 24.011)
- d) A single integer value per measurement type defined in E

e) attSmsMtPS

attSmsMtPS COMB (don't care)

attSmsMtPS.G GSM attSmsMtPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.4 Successful PS SMS mobile terminating

- a) This measurement provides the number of successful PS SMS mobile terminating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the SGSN of "RP-ACK" Message (TS 24.011)
- d) A single integer value per measurement type defined in E
- e) succSmsMtPS:

succSmsMtPS COMB (don't care)

succSmsMtPS.G GSM succSmsMtPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.5 Attempted PS ms-Present

- a) This attribute counts the number of times that a MS (attached to a SGSN) send that it is ready to receive SM. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = ms-Present to the HLR from the SGSN (TS 29.002)
- d) A single integer value per measurement type defined in E
- e) attMsPresentPS:

attMsPresentPS COMB (don't care)

attMsPresentPS.G GSM attMsPresentPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.6 Attempted PS "memory available"

a) This attribute counts the number of times that a MS (attached to a SGSN) sent a indication of "memory available" to SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = memoryAvailable to the HLR from the SGSN (TS 29.002)
- d) A single integer value per measurement type defined in E
- e) attMemoryAvailablePS:

attMemoryAvailablePS COMB (don't care)

attMemoryAvailablePS.G GSM attMemoryAvailablePS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.7 Succesful PS ms-Present

 a) This attribute counts the number of successful times that a MS (attached to a SGSN) send that it is ready to receive SM.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) This counter will be increased when a return result is received by the SGSN from the HLR in response to the MAP_READY_FOR_SM with reason = "MS present" (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) SuccMsPresentPS:

SuccMsPresentPS COMB (don't care)

SuccMsPresentPS.G GSM SuccMsPresentPS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.2.8 Successful PS "memory available"

- a) This attribute counts the number of successful times that a MS (attached to a SGSN) sent a indication of "memory available" to SGSN.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) This counter will be increased when a return result is received by the SGSN from the HLR in response to the MAP_READY_FOR_SM with reason = "memory available" (TS 29.002).
- d) A single integer value per measurement type defined in E

e) SuccMemoryAvailablePS:

SuccMemoryAvailablePS COMB (don't care)

SuccMemoryAvailablePS.G GSM SuccMemoryAvailablePS.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.5.3 SMS in the CS/PS domain (MSC/SGSN)

Unlike the measurements in previous chapters, the measurements in this chapter do not differentiate between the PS and the CS domain, and deliver one total count.

Up to now, no counters are defined for the failure cases. FFS.

5.5.3.1 Attempted SMS mobile originating

- a) This measurement provides the number of SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the MSC/SGSN of "RP-DATA" Message (TS 24.011) from the MS.
- d) A single integer value per measurement type defined in E
- e) attSmsMo:

attSmsMo COMB (don't care)

attSmsMo.G GSM attSmsMo.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.2 Successful SMS mobile originating

- a) This measurement provides the number of successful SMS mobile originating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the MSC/SGSN of "RP-ACK" Message (TS 24.011) to the MS
- d) A single integer value per measurement type defined in E
- e) succSmsMo:

succSmsMo COMB (don't care)

succSmsMo.G GSM succSmsMo.U UMTS

f) MscFunction or SgsnFunction

- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.3 Attempted SMS mobile terminating.

- a) This measurement provides the number of SMS mobile terminating attempts. . The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the MSC/SGSN of "RP-DATA" Message (TS 24.011)
- d) A single integer value per measurement type defined in E
- e) attSmsMt:

attSmsMt COMB (don't care)

attSmsMt.G GSM attSmsMt.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.4 Successful SMS mobile terminating

- a) This measurement provides the number of successful SMS mobile terminating attempts. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt by the MSC/SGSN of "RP-ACK" Message (TS 24.011)
- d) A single integer value per measurement type defined in E
- e) succSmsMt:

succSmsMt COMB (don't care)

succSmsMt.G GSM succSmsMt.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.5 Attempted ms-Present

- a) This attribute counts the number of times that a MS (attached to a MSC/SGSN) send that it is ready to receive SM.
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = ms-Present to the HLR from the MSC/SGSN (TS 29.002)
- d) A single integer value per measurement type defined in E

e) attMsPresent:

attMsPresent COMB (don't care)

attMsPresent.G GSM attMsPresent.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.6 Attempted "memory available"

a) This attribute counts the number of times that a MS (attached to a MSC/SGSN) sent a indication of "memory available" to MSC/SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of MAP-READY-FOR-SM with alertReason = memoryAvailable to the HLR from the MSC/SGSN (TS 29.002)
- d) A single integer value per measurement type defined in E
- e) attMemoryAvailable:

attMemoryAvailable COMB (don't care)

attMemoryAvailable.G GSM attMemoryAvailable.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.7 Succesful ms-Present

 a) This attribute counts the number of successful times that a MS (attached to a MSC/SGSN) send that it is ready to receive SM.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) This counter will be increased when a return result is received by the MSC/SGSN from the HLR in response to the MAP_READY_FOR_SM with reason = "MS present" (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) SuccMsPresent:

SuccMsPresent COMB (don't care)

SuccMsPresent.G GSM SuccMsPresent.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.5.3.8 Successful "memory available"

a) This attribute counts the number of successful times that a MS (attached to a MSC/SGSN) sent a indication of "memory available" to MSC/SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) This counter will be increased when a return result is received by the MSC/SGSN from the HLR in response to the MAP_READY_FOR_SM with reason = "memory available" (TS 29.002).
- d) A single integer value per measurement type defined in E
- e) SuccMemoryAvailable:

SuccMemoryAvailable COMB (don't care)

SuccMemoryAvailable.G GSM SuccMemoryAvailable.U UMTS

- f) MscFunction or SgsnFunction
- g) Valid for packet switching and circuit switching
- h) GSM/UMTS

5.6 Session Management

5.6.1 Attempted PDP context activation procedures initiated by MS

a) This measurement provides the number of attempted PDP context activation procedures. These include the static as well as the dynamic PDP addresses.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of a "Activate PDP Context Request" message from the MS (TS 24.008).
- d) A single integer value
- e) attActPdpContext:

attActPdpContext COMB (don't care)

attActPdpContext.G GSM attActPdpContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.2 Attempted dynamic PDP context activation procedures initiated by MS

a) This measurement provides the number of attempted PDP context activation requests where a dynamic PDP address is required to be used.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of a "Activate PDP Context Request" message from the MS with an empty PDP address (TS 24.008).

- d) A single integer value per measurement type defined in E
- e) attActPdpContextDyn:

attActPdpContextDyn COMB (don't care)

attActPdpContextDyn.G GSM attActPdpContextDyn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.3 Successful PDP context activation procedures initiated by MS

a) This measurement provides the number of successfully completed PDP context activations. For these context activations, the GGSN is updated successfully.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of a "Activate PDP Context Accept" message to the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succActPdpContext:

succActPdpContext COMB (don't care)

succActPdpContext.G GSM succActPdpContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.4 Successful dynamic PDP context activation procedures initiated by MS

 a) This measurement provides the number of successfully completed PDP context activations where a dynamic PDP address is used.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- h) CC
- c) Transmission of a "Activate PDP Context Accept" message to the MS (TS 24.008), the PDP address has been dynamically assigned.
- d) A single integer value per measurement type defined in E
- e) succActPdpContextDyn:

succActPdpContextDyn COMB (don't care)

succActPdpContextDyn.G GSM succActPdpContextDyn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching

h) GSM/UMTS

5.6.5 mean number of activated PDP contexts

- a) mean number of activated PDP contexts

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number activated PDP contexts, and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanActPDPContext:

meanActPDPContext COMB (don't care)

meanActPDPContext.G GSM meanActPDPContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.6 Attempted PDP context deactivation procedures initiated by the MS

- a) This measurement provides the number of PDP context deactivation procedures initiated by the MS. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of a "Deactivate PDP Context Request" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attDeactPdpContextMs:

attDeactPdpContextMs COMB (don't care)

attDeactPdpContextMs.G GSM attDeactPdpContextMs.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.7 Successful PDP context deactivation procedures initiated by the MS

- a) This measurement provides the number of successfully completed PDP context deactivations. For these context deactivations, the GGSN is updated successfully (i.e. deletion of the PDP context).

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of a "Deactivate PDP Context Accept" message to the MS (TS 24.008).
- d) A single integer value per measurement type defined in E

e) succDeactPdpContextMs:

succDeactPdpContextMs COMB (don't care)

succDeactPdpContextMs.G GSM succDeactPdpContextMs.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.8 Number of active PDP context

- a) This measurement provides the number of active PDP context

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) GAUGE
- c) The gauge will be incremented when a PDP context is created and will be decremented when a PDP context is deleted.
- d) A single integer value per measurement type defined in E
- e) nbrActPdpContext:

nbrActPdpContext COMB (don't care)

nbrActPdpContext.G GSM nbrActPdpContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.9 Number of mobile subscribers with activated PDP context (i.e. subscribers that can send/receive GPRS packet data)

a) This measurement provides the number of mobile subscribers with activated PDP context (i.e. subscribers that can send/receive GPRS packet data).

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) GAUGE
- c) Addition of first PDP context or removal of last PDP context inSGSN location register for a particular subscriber
- d) A single integer value per measurement type defined in E
- e) nbrActivePdpPerSgsn:

nbrActivePdpPerSgsn COMB (don't care)

nbrActivePdpPerSgsn.G GSM nbrActivePdpPerSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.10 Mean number of subscribers that have an activated PDP context (i.e. subscribers that can send/receive GPRS packet data)

- a) This measurement provides the arithmetic mean number value of subscribers that have an activated PDP context (i.e. subscribers that can send/receive GPRS packet data).
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) SI
- c) This measurement is obtained by sampling at a pre-defined interval, the number of subscribers with activated PDP context in SGSN, and then taking the arithmetic mean
- d) A single integer value per measurement type defined in E
- e) meanActivePdpPerSgsn:

meanActivePdpPerSgsn COMB (don't care)

meanActivePdpPerSgsn.G GSM meanActivePdpPerSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.11 Attempted PDP context deactivation procedures initiated by the GGSN

- a) This measurement provides the number of PDP context deactivation procedures initiated by the GGSN. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of a "Delete PDP Context Request" message from the GGSN (TS 29.060).
- d) A single integer value per measurement type defined in E
- e) attDeactPdpContextGgsn:

attDeactPdpContextGgsn COMB (don't care)

attDeactPdpContextGgsn.G GSM attDeactPdpContextGgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.12 Successful PDP context deactivation procedures initiated by the GGSN

- a) This measurement provides the number of successfully handled PDP context deactivations initiated by the GGSN. For these context deactivations, the MS has accepted the PDP context deactivation. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of a "Delete PDP Context Response" message to the GGSN (TS 29.060).

- d) A single integer value per measurement type defined in E
- e) succDeactPdpContextGgsn:

succDeactPdpContextGgsn COMB (don't care)

succDeactPdpContextGgsn.G GSM succDeactPdpContextGgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.13 Attempted PDP context deactivation procedures initiated by the SGSN

- a) This measurement provides the number of PDP context deactivation procedures initiated by the SGSN. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) transmision of a "Delete PDP Context Request" message to the GGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attDeactPdpContextSgsn:

attDeactPdpContextSgsn COMB (don't care)

attDeactPdpContextSgsn.G GSM attDeactPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.14 Successful PDP context deactivations initiated by the SGSN

a) This measurement provides the number of successfully handled PDP context deactivations initiated by the SGSN.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) receipt of a "deactivate PDP Context Accept" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succDeactPdpContextSgsn:

succDeactPdpContextSgsn COMB (don't care)

succDeactPdpContextSgsn.G GSM succDeactPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.15 Attempted SGSN-Initiated PDP context update procedures

a) This measurement provides the number of attempted SGSN-Initiated PDP context update procedures. An Update PDP Context Request message shall be sent from a SGSN to a GGSN as part of the GPRS Inter SGSN Routeing Update procedure or the PDP Context Modification procedure or to redistribute contexts due to load sharing. It shall be used to change the QoS and the path. The message shall be sent by the new SGSN at the Inter SGSN Routeing Update procedure.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmision of an "Update PDP Context Request" message to the GGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attUpdPdpContextSgsn:

attUpdPdpContextSgsn COMB (don't care)

attUpdPdpContextSgsn.G GSM attUpdPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.16 Successful SGSN-Initiated PDP context update procedures

a) This measurement provides the number of successfully handled SGSN-Initiated PDP context update procedures. These updates are performed successfully when a positive update PDP context response is received from the GGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of an "Update PDP Context Response" message from the GGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succUpdPdpContextSgsn:

succUpdPdpContextSgsn COMB (don't care)

succUpdPdpContextSgsn.G GSM succUpdPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.17 Attempted GGSN-Initiated PDP context update procedures

a) This measurement provides the number of attempted GGSN-Initiated PDP context update procedures. An Update PDP Context Request may also be sent from a GGSN to a SGSN to re-negotiate the QoS of a PDP context. This GGSN-initiated Update PDP Context Request can also be used to provide a PDP address to the SGSN (and MS). The latter shall be used by GGSN when it acts as a DHCP Relay Agent or Mobil IP Foreign Agent.

The three measurement types defined in E are subject to the "2 out of 3 approach".

b) CC

- c) Receipt of an "Update PDP Context Request" message from the GGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) attUpdPdpContextGgsn:

attUpdPdpContextGgsn COMB (don't care)

attUpdPdpContextGgsn.G GSM attUpdPdpContextGgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.18 Successful GGSN-Initiated PDP context update procedures

a) This measurement provides the number of successfully handled GGSN-Initiated PDP context update procedures. These updates are performed successfully when a positive update PDP context response is received from the SGSN

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission of an "Update PDP Context Response" message to the GGSN (TS 29.060)
- d) A single integer value per measurement type defined in E
- e) succUpdPdpContextGgsn:

succUpdPdpContextGgsn COMB (don't care)

succUpdPdpContextGgsn.G GSM succUpdPdpContextGgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.19 Attempted SGSN-Initiated PDP context modifications procedures.

- a) This measurement provides the number of attempted SGSN-Initiated PDP context modifications procedures. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of an "Modify PDP Context Request" message to the MS (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attModPdpContextSgsn:

attModPdpContextSgsn COMB (don't care)

attModPdpContextSgsn.G GSM attModPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching

h) GSM/UMTS

5.6.20 Successfully SGSN-Initiated PDP context modifications procedures

a) This measurement provides the number of successfully handled SGSN-Initiated PDP context modifications procedures. These modifications are performed successfully when a positive Modify PDP Context Accept is received from the MS

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Receipt of an "Modify PDP Context Accept" message from the MS (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) succModPdpContextSgsn:

succModPdpContextSgsn COMB (don't care)

succModPdpContextSgsn.G GSM succModPdpContextSgsn.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.21 Attempted MS-Initiated PDP context modifications procedures.

- a) This measurement provides the number of attempted MS-Initiated PDP context modifications procedures. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of an "Modify PDP Context Request" message from the MS (TS 24.008)
- d) A single integer value per measurement type defined in E
- e) attModPdpContextMs

attModPdpContextMs COMB (don't care)

attModPdpContextMs.G GSM attModPdpContextMs.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.22 Successfully MS-Initiated PDP context modifications procedures

- a) This measurement provides the number of successfully handled MS-Initiated PDP context modifications procedures. These modifications are performed successfully when a positive Modify PDP Context Accept is received from the MS
 - The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of an "Modify PDP Context Accept" message to the MS (TS 24.008)
- d) A single integer value per measurement type defined in E

e) succModPdpContextMs:

succModPdpContextMs COMB (don't care)

succModPdpContextMs.G GSM succModPdpContextMs.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.23 Attempted Secondary PDP context activation procedures.

- a) This measurement provides the number of attempted Secondary PDP context activation procedures. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Receipt of a "Activate Secondary PDP Context Request" message from the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) attActSecondPdpContext:

attActSecondPdpContext COMB (don't care)

attActSecondPdpContext.G GSM attActSecondPdpContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.6.24 Successful Secondary PDP context activations.

- a) This measurement provides the number of successfully completed Secondary PDP context activations. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission of a "Activate Secondary PDP Context Accept" message to the MS (TS 24.008).
- d) A single integer value per measurement type defined in E
- e) succActSecondPdpContext:

succActSecondPdpContext COMB (don't care)

succActSecondPdpContext.G GSM succActSecondPdpContext.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.7 CAMEL Measurements

5.7.1 Attempted CAMEL dialogues

- a) total number of CAMEL dialogue attempts

 The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Incremented when a TDP (Trigger Detection Point) is reached and CAP is informed.
- d) A single integer value per measurement type defined in E
- e) attCamelDialogues:

attCamelDialogues COMB (don't care)

attCamelDialogues.G GSM attCamelDialogues.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.7.2 Unsuccessful CAMEL dialogues, aborted locally by gprsSSF

- a) number of unsuccessful CAMEL dialogues, aborted locally by gprsSSF The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Incremented when a CAMEL dialogue isaborted locally by SSF.
- d) A single integer value per measurement type defined in E
- e) unsuccCamelDialoguesSsf:

unsuccCamelDialoguesSsf COMB (don't care)

unsuccCamelDialoguesSsf.G GSM unsuccCamelDialoguesSsf.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.7.3 Unsuccessful CAMEL dialogues, error or reject from gsmSCF

- a) number of unsuccessful CAMEL dialogues, error or reject from gsmSCF The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Incremented when a CAMEL dialogue is aborted by SCF.
- d) A single integer value per measurement type defined in E

e) unsuccCamelDialoguesScf:

unsuccCamelDialoguesScf COMB (don't care)
unsuccCamelDialoguesScf.G GSM
unsuccCamelDialoguesScf.U UMTS

- f) SgsnFunction
- g) Valid for packet switching
- h) GSM/UMTS

5.8 UMTS-GSM Intersystem Change

5.8.1 Attempted intra SGSN inter system changes from UMTS to GSM

- a) Number of attempted intra SGSN inter system changes from UMTS to GSM
- b) CC
- c) Receipt of "Routing Area Update REQUEST" message from the MS, where the SGSN determines that it concers a intra SGSN inter system changes from UMTS to GSM. (TS 24.008)
- d) A single integer value
- e) attIntraSgsnUmtsGsmRau
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.2 Successful intra SGSN inter system changes from UMTS to GSM

- a) Successful intra SGSN inter system changes from UMTS to GSM
- b) CC
- c) Transmission of "ROUTING AREA UPDATE ACCEPT" message to the MS (TS 24.008). Only the cases where this message is sent for "UMTS to GSM Intra SGSN Change" are counted.
- d) A single integer value
- e) succIntraSgsnUmtsGsmRau
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.3 Unsuccessful intra SGSN inter system changes UMTS to GSM RAU, due to internal reasons

- a) Number of unsuccessful intra SGSN inter system UMTS to GSM RAU, due to internal reasons
- b) CC
- c) "UMTS to GSM Intra SGSN Change" fails due to reasons located inside this 2G+3G-SGSN :- internal resource problem- recovery- ...

- d) A single integer value
- e) unsuccIntraSgsnUmtsGsmRauInt
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.4 Unsuccessful intra SGSN inter system changes UMTS to GSM RAU, due to external reasons

- a) Number of unsuccessful intra SGSN inter system UMTS to GSM RAU, due to external reasons
- b) CC
- c) "UMTS to GSM Intra SGSN Change" fails due to reasons located in NE outside this 2G+3G-SGSN, such as abnormal (reject, failure,...)/missing responses from SRNS, MSC/VLR, HLR, ...
- d) A single integer value
- e) unsuccIntraSgsnUmtsGsmRauExt
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.5 Attempted intra SGSN inter system changes from GSM to UMTS

- a) Number of attempted intra SGSN inter system changes from GSM to UMTS
- b) CC
- c) Receipt of "Routing Area Update REQUEST" message from the MS, where the SGSN determines that it concerns a intra SGSN inter system changes from GSM to UMTS (TS 24.008).
- d) A single integer value
- e) attIntraSgsnGsmUmtsRau
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.6 Successful intra SGSN inter system changes from GSM to UMTS

- a) Successful intra SGSN inter system changes from GSM to UMTS
- b) CC
- c) Transmission of "ROUTING AREA UPDATE ACCEPT" message to the MS (TS 24.008). Only the cases where this message is sent for "GSM to UMTS Intra SGSN Change" are counted.
- d) A single integer value
- e) succIntraSgsnGsmUmtsRau
- f) SgsnFunction
- g) Valid for packet switching

h) COMB

5.8.7 Unsuccessful intra SGSN inter system changes GSM to UMTS RAU, due to internal reasons

- a) Number of unsuccessful intra SGSN inter system GSM to UMTS RAU, due to internal reasons
- b) CC
- c) "GSM to UMTS Intra SGSN Change" fails due to reasons located inside this 2G+3G-SGSN: internal resource problem-recovery-...
- d) A single integer value
- e) unsuccIntraSgsnGsmUmtsRauInt
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.8.8 Unsuccessful intra SGSN inter system changes GSM to UMTS RAU, due to external reasons

- a) Number of unsuccessful intra SGSN inter system GSM to UMTS RAU, due to external reasons
- b) CC
- c) "GSM to UMTS Intra SGSN Change" fails due to reasons located in NE outside this 2G+3G-SGSN, such as abnormal (reject, failure,...)/missing responses from SRNS, MSC/VLR, HLR, ...
- d) A single integer value
- e) unsuccIntraSgsnGsmUmtsRauExt
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9 UMTS GTP Measurements

5.9.1 GTP-U lu

5.9.1.1 Number of outgoing GTP data packets on the lu interface

- a) This measurement provides the number of GTP data PDUs which have been generated by the GTP-U protocol entity on the Iu interface.
- b) CC
- c) Transmission by the SGSN of a GTP data PDU on the Iu interface to the MS
- d) A single integer value
- e) gtpuOutDataPktIu
- f) SgsnFunction
- g) Valid for packet switching

h) UMTS

5.9.1.2 Number of incoming GTP data packets on the lu interface

- a) This measurement provides the number of GTP data PDUs which have been accepted and processed by the GTP-U protocol entity on the Iu interface
- b) CC
- c) Reception by the SGSN of a GTP data PDU on the Iu interface from the MS
- d) A single integer value
- e) gtpuInDataPktIu
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.9.1.3 Number of octets of outgoing GTP data packets on the lu interface

- a) This measurement provides the byte number of outgoing data packets on the Iu interface without the GTP-U header.
- b) CC
- c) Transmission by the SGSN of an GTP-Data-PDU (T-PDU) on the Iu interface to the MS
- d) A single integer value
- e) gtpuOutDataOctIu
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.9.1.4 Number of octets of incoming GTP data packets on the lu interface

- a) This measurement provides the byte number of incoming data packets on the Iu interface without the GTP-U header.
- b) CC
- c) Reception by the SGSN of an GTP-Data-PDU (T-PDU) on the Iu interface from the MS
- d) A single integer value
- e) gtpuInDataOctIu
- f) SgsnFunction
- g) Valid for packet switching
- h) UMTS

5.9.2 GTP Gn

5.9.2.1 Number of outgoing GTP data packets on the Gn interface

a) This measurement provides the number of GTP data PDUs which have been generated by the GTP protocol entity on the Gn interface.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission by the SGSN of a GTP data PDU on the Gn interface to the GGSN
- d) A single integer value per measurement type defined in E

e) gtpOutDataPktGn the total regardless of the GTP version used gtpOutDataPktGn.v0 only the GTPv0 part only the GTPv1 part

- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9.2.2 Number of incoming GTP data packets on the Gn interface

a) This measurement provides the number of GTP Data PDUs which have been accepted and processed by the GTP protocol entity on the Gn interface.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Reception by the SGSN of a GTP data PDU on the Gn interface from the GGSN
- d) A single integer value per measurement type defined in E

e) gtpInDataPktGn the total regardless of the GTP version used gtpInDataPktGn.v0 only the GTPv0 part only the GTPv1 part

- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9.2.3 Number of octets of outgoing GTP data packets on the Gn interface

- a) This measurement provides the number of octets of outgoing GTP data packets on the Gn interface. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the SGSN of an GTP-Data-PDU (T-PDU) on the Gn interface to the GGSN
- d) A single integer value per measurement type defined in E

e) gtpOutDataOctGn the total regardless of the GTP version used gtpOutDataOctGn.v0 only the GTPv0 part only the GTPv1 part

- f) SgsnFunction
- g) Valid for packet switching

h) COMB

5.9.2.4 Number of octets of incoming GTP data packets on the Gn interface

- a) This measurement provides the number of octets of incoming GTP data packets on the Gn interface. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Reception by the SGSN of an GTP-Data-PDU (T-PDU) on the Gn interface from the GGSN
- d) A single integer value per measurement type defined in E
- e) gtpInDataOctGn the total regardless of the GTP version used gtpInDataOctGn.v1 only the GTPv0 part only the GTPv1 part
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9.2.5 Number of outgoing GTP signalling packets on the Gn interface

a) This measurement provides the number of GTP signalling PDUs which have been generated by the GTP protocol entity on the Gn interface.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Transmission by the SGSN of a GTP signalling PDU on the Gn interface to the GGSN
- d) A single integer value per measurement type defined in E
- e) gtpOutSigPktGn the total regardless of the GTP version used gtpOutSigPktGn.v0 only the GTPv0 part only the GTPv1 part
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9.2.6 Number of incoming GTP signalling packets on the Gn interface

a) This measurement provides the number of GTP signalling PDUs which have been accepted and processed by the GTP protocol entity on the Gn interface.

The three measurement types defined in E are subject to the "2 out of 3 approach".

- b) CC
- c) Reception by the SGSN of a GTP signalling PDU on the Gn interface from the GGSN
- d) A single integer value per measurement type defined in E
- e) gtpInSigPktGn the total regardless of the GTP version used gtpInSigPktGn.v0 only the GTPv0 part only the GTPv1 part
- f) SgsnFunction
- g) Valid for packet switching

h) COMB

5.9.2.7 Number of octets of outgoing GTP signalling packets on the Gn interface

- a) This measurement provides the number of octets of outgoing GTP signalling packets on the Gn interface. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Transmission by the SGSN of an GTP-Signalling-PDU on the Gn interface to the GGSN
- d) A single integer value per measurement type defined in E
- e) gtpOutSigOctGn the total regardless of the GTP version used gtpOutSigOctGn.v0 only the GTPv0 part only the GTPv1 part
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

5.9.2.8 Number of octets of incoming GTP signalling packets on the Gn interface

- a) This measurement provides the number of octets of incoming GTP signalling packets on the Gn interface. The three measurement types defined in E are subject to the "2 out of 3 approach".
- b) CC
- c) Reception by the SGSN of an GTP-Signalling-PDU on the Gn interface from the GGSN
- d) A single integer value per measurement type defined in E
- e) gtpInSigOctGn the total regardless of the GTP version used gtpInSigOctGn.v0 only the GTPv0 part only the GTPv1 part
- f) SgsnFunction
- g) Valid for packet switching
- h) COMB

Annex A (informative): Change history

Change history									
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Old	New		
Jun 2001	S_12	SP-010237	-		Submitted to TSG SA #12 for Approval.	1.0.2	4.0.0		

History

Document history						
V4.0.0	June 2001	Publication				