
# ETSI TS 132 501 V8.0.0 (2009-01)

**Technical Specification** 

Universal Mobile Telecommunications System (UMTS); LTE; Telecommunication management; Self-Organizing Networks (SON); Self-establishment of eNodeBs; Concepts and requirements (3GPP TS 32.501 version 8.0.0 Release 8)

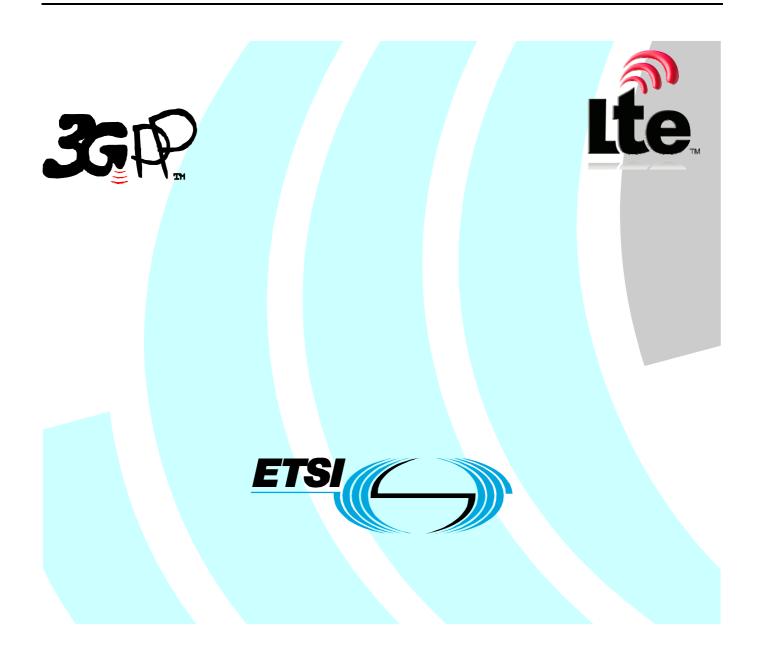

Reference DTS/TSGS-0532501v800

> Keywords LTE, UMTS

#### ETSI

#### 650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <u>http://portal.etsi.org/tb/status/status.asp</u>

If you find errors in the present document, please send your comment to one of the following services: <u>http://portal.etsi.org/chaircor/ETSI\_support.asp</u>

#### **Copyright Notification**

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 2009. All rights reserved.

**DECT<sup>TM</sup>**, **PLUGTESTS<sup>TM</sup>**, **UMTS<sup>TM</sup>**, **TIPHON**<sup>TM</sup>, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.

**3GPP**<sup>™</sup> is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

LTE<sup>™</sup> is a Trade Mark of ETSI currently being registered

for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

## Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <u>http://webapp.etsi.org/key/queryform.asp</u>.

## Contents

Intelle	ectual Property Rights	2
Forew	/ord	2
Forew	/ord	5
Introd	uction	5
1	Scope	6
2	References	
3	Definitions and abbreviations	6
3.1	Definitions	6
3.2	Abbreviations	
4 4.1	Concepts and background	
4.1	Self-Configuration Concept Logical Function Blocs	
4.1.1.1		
4.1.1.2		
4.1.1.3	$\partial$	
4.1.1.4		
4.1.1.5	~ (~ ).	
4.1.1.6		
4.1.1.6	$\mathbf{c}$ $\mathbf{c}$ $\mathbf{c}$ $\mathbf{c}$ $\mathbf{c}$ $\mathbf{c}$	
4.1.1.7		
4.1.1.8		
4.1.1.9		
4.1.1.1		
1.1.1.1		
4.1.1.1		
4.1.1.1	1 Radio Network and Transport Network Configuration Data Preparation Function	8
	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements	8 9
4.1.1.1 5	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s	8 9 9
4.1.1.1 5 5.1	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements	8 9 9 9
4.1.1.1 5 5.1 5.1.1	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles	8 9 9 9 9
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3	1       Radio Network and Transport Network Configuration Data Preparation Function         1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Self- Configuration of eNodeB"s       Actor roles         Telecommunications resources       High-level use cases	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3 6	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       Specification level requirements	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       General	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3 6 6.1	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       Specification level requirements	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3 6 6.1 6.2	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases	
4.1.1.1 5 5.1 5.1.2 5.1.3 6 6.1 6.2 6.3 6.4 6.4.1	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Telecommunications resources       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Self-configuration of a new eNodeB	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3 6 6.1 6.2 6.3 6.4 6.4.1 6.4.2 6.5	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Actor roles         Telecommunications resources       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Requirements	
4.1.1.1 5 5.1 5.1.1 5.1.2 5.1.3 6 6.1 6.2 6.3 6.4 6.4.1 6.4.2 6.5 6.5.1	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation       Use case Self-configuration of a new eNodeB         Requirements       Automatic Radio Network Configuration Data Preparation	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Requirements         Automatic Radio Network Configuration Data Preparation       Self-configuration of a new eNodeB	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Requirements         Automatic Radio Network Configuration Data Preparation       Self-configuration of a new eNodeB         Self-Configuration of a new eNodeB       Self-configuration Management and Monitoring	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation       Use case Self-configuration of a new eNodeB         Requirements       Automatic Radio Network Configuration Data Preparation         Self-configuration of a new eNodeB       Self-configuration of a new eNodeB         Self-configuration Management and Monitoring       Self-Configuration Management and Monitoring	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       High-level use cases         Specification level requirements       General         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Requirements         Automatic Radio Network Configuration Data Preparation       Self-configuration of a new eNodeB         Self-configuration of a new eNodeB       Self-configuration Management and Monitoring         .1       Management Part         .2       Monitoring Part	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ \end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB       Requirements         Automatic Radio Network Configuration Data Preparation       Self-configuration of a new eNodeB         Self-Configuration of a new eNodeB       Self-configuration Management and Monitoring         .1       Management Part       2         .2       Monitoring Part       Software Management	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.2\\ \end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB         Requirements         Automatic Radio Network Configuration Data Preparation         Self-configuration of a new eNodeB         Self-configuration Management and Monitoring         .1       Management Part         .2       Monitoring Part         .3       Software Management         Address Allocation and OAM Connectivity Establishment	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.2\\ 6.5.2.3\\ 6.5.2.3\\ 6.5.2.4\\ 6.5.2.5\\ \end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB         Requirements         Automatic Radio Network Configuration Data Preparation         Self-Configuration of a new eNodeB         Self-Configuration Management and Monitoring         .1       Management Part         .2       Monitoring Part         .3       Software Management         Address Allocation and OAM Connectivity Establishment         Inventory Update         Self-Test	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.2\\ 6.5.2.3\\ 6.5.2.3\\ 6.5.2.4\\ 6.5.2.5\\ 6.5.2.6\\ 6.5.2.6\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB"s         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB         Requirements         Automatic Radio Network Configuration Data Preparation         Self-Configuration of a new eNodeB         Self-Configuration Management and Monitoring         .1       Management Part.         .2       Monitoring Part         .3       Software Management.         Address Allocation and OAM Connectivity Establishment         Inventory Update         Self-Test         Radio Configuration Data	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2\\ 6.5.2.1\\ 6.5.2.3\\ 6.5.2.3\\ 6.5.2.4\\ 6.5.2.5\\ 6.5.2.5\\ 6.5.2.6\\ 6.5.2.7\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB's         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB         Requirements         Automatic Radio Network Configuration Data Preparation         Self-Configuration of a new eNodeB         Self-configuration of a new eNodeB         Self-configuration and Monitoring         .1       Management Part         .2       Monitoring Part         .2       Monitoring Part         .3       Software Management.         .4       Address Allocation and OAM Connectivity Establishment.         .1       Inventory Update         Self-Test.       Radio Configuration Data	
$\begin{array}{c} 4.1.1.1\\ 5\\ 5.1\\ 5.1.2\\ 5.1.3\\ 6\\ 6.1\\ 6.2\\ 6.3\\ 6.4\\ 6.4.1\\ 6.4.2\\ 6.5\\ 6.5.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.1\\ 6.5.2.2\\ 6.5.2.3\\ 6.5.2.3\\ 6.5.2.4\\ 6.5.2.5\\ 6.5.2.6\\ 6.5.2.6\end{array}$	1       Radio Network and Transport Network Configuration Data Preparation Function         Business Level Requirements       Self- Configuration of eNodeB's         Actor roles       Telecommunications resources         High-level use cases       Specification level requirements         General       Actor roles         Actor roles       Telecommunications resources         Use cases       Use cases         Use cases       Use cases         Use case Automatic Radio Network Configuration Data Preparation         Use case Self-configuration of a new eNodeB         Requirements         Automatic Radio Network Configuration Data Preparation         Self-Configuration of a new eNodeB         Self-Configuration of a new eNodeB         Self-Configuration Management and Monitoring         .1       Management Part.         .2       Monitoring Part         .3       Software Management.         .4       Address Allocation and OAM Connectivity Establishment.         .1       Inventory Update.         .3       Self-Test.         .4       Radio Configuration Data         .5       Self-Test.         .5       Radio Configuration Data         .5       Call Processing Link Set-Up	

7.	Functions and Archite	ecture	
7.1	Self-Configuration L	ogical Architecture	15
7.2	Self-Configuration R	Reference Model	16
Anne	x A (informative):	Change history	

## Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

## Introduction

The present document is part of a TS-family covering the 3<sup>rd</sup> Generation Partnership Project Technical Specification Group Services and System Aspects, Telecommunication management; as identified below:

32.501:	Self-Configuration of Network Elements; Concepts and Integration Reference Point (IRP) Requirements
32.502:	Self-Configuration of Network Elements Integration Reference Point (IRP); Information Service (IS)
32.503:	Self-Configuration of Network Elements Integration Reference Point (IRP); Common Object Request Broker Architecture (CORBA) Solution Set (SS)

## 1 Scope

The present document describes the concepts how self-configuration works and what IRP requirements need to be met to support this functionality. The document also captures if a requirement shall be met via the Itf-N interface or via other protocols. This version of the TS is restricted to self-configuration of eNBs. The requirements in this document are not imposed on HNBs.

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 32.101: "Telecommunication management; Principles and high level requirements".
- [3] 3GPP TS 32.102: "Telecommunication management; Architecture".
- [4] 3GPP TR 32.816: "Telecommunication management; Study on Management of Evolved Universal Terrestrial Radio Access Network (E-UTRAN) and Evolved Packet Core (EPC)".
- [5] 3GPP TS 32.531: "Telecommunication management; Architecture; Software Management Concepts and IRP Requirements ".

## 3 Definitions and abbreviations

For the purposes of the present document, the terms and definitions given in TS 32.101 [2], TS 32.102 [3] and TS 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TS 32.101 [1], TS 32.102 [2] and TS 21.905 [5], in that order.

### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

**Self Configuration:** The process which brings a network element into service requiring minimal human operator intervention or none at all.

### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

SC Self Configuration

## 4 Concepts and background

Provide here an update of See TS 32.816 [4] §5.1.3.1.1 'Establishment of new eNodeB in network'

## 4.1 Self-Configuration Concept

### 4.1.1 Logical Function Blocs

### 4.1.1.1 Address Allocation Function (AAF):

This functional bloc supports the following functions: [SC1], [SC3].

### 4.1.1.2 OAM Connectivity Establishment Function (OAM CO\_EF):

This functional bloc supports the following functions: [SC2], [SC3], [SC4], [SC5], [SC13].

### 4.1.1.3 Software Management Function (SW\_MF):

This functional bloc supports the following functions: [SC3], [SC6], [SC7], [SC8], [SC20], [SC21].

### 4.1.1.4 Inventory Update Function (Inv\_UF):

This functional bloc supports the following functions: [SC15].

### 4.1.1.5 Self-Test Function (ST\_F):

This function performs eNodeB self-tests.

### 4.1.1.6 Self-Configuration Monitoring and Management Function (SC\_MMF):

This functional bloc supports the following functions: FFS

This function monitors the self-configuration process and provides the operator with this information. This function must be able to get information about all other functional blocs. In addition to this it allows the operator to control the execution of the self-configuration process.

### 4.1.1.6.1 Self-Configuration Monitoring and Management Function (SC\_MMF\_NM):

SC\_MMF\_NM (IRP Manager): representing the NM portion of SC\_MMF (necessary monitoring and limited interaction capabilities to support an automated optimization), as well as related IRPManager functionality

### 4.1.1.6.2 Self-Configuration Monitoring and Management Function (SC\_MMF\_EM):

SC\_MMF\_EM (IRP Agent): representing the portion of SC\_MMF operating below Itf-N, as well as related IRPAgent functionality

### 4.1.1.7 Call Processing Link (CPL) Set Up Function (CPL\_SUF):

This functional bloc supports the following functions: [SC14], [SC15].

### 4.1.1.8 Radio Network Configuration Data Function (R\_CD\_F):

This functional bloc supports the following functions: [SC9], [SC11], [SC12].

### 4.1.1.9 Transport Network Configuration Data Function (T\_CD\_F):

This functional bloc supports the following functions: [SC9], [SC11], [SC12].

### 4.1.1.10 NRM IRP Update Function (NRM\_UF):

This function updates the E-UTRAN and EPC NRM IRP with information about the new eNodeB.

### 4.1.1.11 Radio Network and Transport Network Configuration Data Preparation Function

This functional bloc supports the following functions: [SC10].

## 5 Business Level Requirements

### 5.1 Self- Configuration of eNodeB"s

**REQ\_SCMAN\_CON\_1** The actor on NM level shall be able to manage the self-configuration process.

**REQ\_SCMON\_CON\_1** The actor on NM level shall be able to monitor the execution of the self-configuration process.

**REQ\_SCMON\_CON\_2** To support the monitoring of the execution of the self-configuration process, existing capabilities shall be reused as much as possible.

**REQ\_SCSW\_CON\_1** The software download, installation, activation and fallback should be automated as much as possible so that no or only minimal manual intervention is required.

**REQ\_SCSW\_CON\_1** see **REQ\_SW\_CON\_4** 

REQ\_SCSW\_CON\_2 see REQ\_SW\_CON\_2

**REQ\_SCOCE\_\_CON\_1** The OAM connectivity (incl. the IP address allocation) should be established in a fully automated manner.

**REQ\_SCOCE\_CON\_2** The amount of parameters that needs to be preconfigured should be minimized.

**REQ\_SCIU\_CON\_1** Inventory information about the new equipment shall be reported to the actor at NM level as part of the self-configuration process.

**REQ\_SCIU\_CON\_2** Inventory information shall be made available to the IRPManager reusing existing capabilities as much as possible.

**REQ\_SCRCD\_CON\_1** The radio configuration data shall be made available to the eNodeB as part of the self-configuration process.

**REQ\_SCTCD\_CON\_1** The transport configuration data shall be made available to the eNodeB as part of the self-configuration process.

**REQ\_SCCPLSU\_CON\_1** X2- and S1-interfaces shall be set up as part of the self-configuration process, based on the radio configuration, the transport configuration and Neighbour cell Relation information made available to the eNodeB.

Note: If there is no Neighbour cell Relation information provided, then no X2 interface is set up as part of the selfconfiguration process.

### 5.1.1 Actor roles

- 5.1.2 Telecommunications resources
- 5.1.3 High-level use cases

## 6 Specification level requirements

- 6.1 General
- 6.2 Actor roles
- 6.3 Telecommunications resources
- 6.4 Use cases

## 6.4.1 Use case Automatic Radio Network Configuration Data Preparation

FFS

6.4.2 Use case Self-configuration of a new eNodeB

This use case starts with the first initial self test and ends when the eNodeB is taken into operation.

Goal (*)         Put the eNodeB after physical installation into the operational state in an automated manner.           Actors and RFS.         Roles (*)           Telecom         The E-UTRAN/EPC network including its OSS.           Presources         IP network connectivity exists between the eNodeB and the OAM (sub) systems providing support for the self-configuration process.           Pre conditions         The eNodeB is physically installed and physically connected to an IP network.           Begins when         The field personnel start the self-configuration of an eNodeB self-test.           Step 1 (*)         The order of the builter points in the list below does not imply any statements on the order of execution.           ISC1] An eNodeB IP address is allocated to the new eNodeB.         ISC2] Basic information about the transport network (e. g. gateways) environment is provide to the eNodeB, with this information the eNodeB is able to exchange IP packets with other internet hosts.           ISC3] The eNodeB provides information about its type, hardware and other relevant data about itself to the CAM (sub) system(s) providing support for normal OAM functions after completion of the eself-configuration process (e. g. subsystem) providing support for normal OAM functions after completion of the eNodeB.           IsC3] The eNodeB provides information about its type, hardware and other relevant data about itself secless (to eNA (sub) system(s) providing support for normal OAM functions after completion of the eNodeB.           IsC3] The eNodeB provides information about its type, and when a dother eNodeB.           IsC3] The eNode	Use Case Stage	Evolution / Specification	< <uses>&gt; Related use</uses>					
Reles (*)         The E-UTRAN/EPC network including its OSS.           Telecorm         IP network connectivity exists between the eNodeB and the OAM (sub) systems providing support for the self-configuration process.           Pre conditions         The eNodeB is physically installed and physically connected to an IP network.           Begins when         The eNodeB is physically connected to an IP network.           Begins when         The ender of the builts points in the list below does not imply any statements on the order of execution.           (M(O)         (Sc1) An eNodeB IP address is allocated to the new eNodeB.           (SC2) Basic information about the transport network (e.g. gateways) environment is provided to the eNodeB. With this information about its type, hardware and other relevant data about itself to the OAM (sub) systems providing support for the self-configuration process.           (SC3) The eNodeB provides information about its type, hardware and other relevant data about itself to the OAM (sub) system(s) providing support for the self-configuration data download, subsystem for configuration data download, subsystem for configuration data download is provided to the eNodeB.           (SC3) The eNodeB provides the OAM (sub) system(s) providing support for normal OAM functions after completion of the self-configuration process are grounded to the eNodeB.           (SC3) The eNodeB connects to the OAM system providing support for the software download.           (SC4) The docision which software or software packages have to be downloaded to the eNodeB.           (SC5) The eNodeB connects to the OAM system providing support for the	Goal (*)							
resources         Prevork connectivity exists between the eNodeB and the OAM (sub) systems providing support for the self-configuration process.           Pre conditions         The eNodeB is physically installed and physically connected to an IP network.           Begins when         The field personnel start the self-configuration process. It is also possible that the process is triggered automatially after the completion of an eNodeB self-test.           Step 1 (*)         The order of the builtet points in the list below does not imply any statements on the order of execution.           [SC1] An eNodeB IP address is allocated to the new eNodeB.         [SC2] Basic information about the transport network (e.g., gateways) environment is provided to the eNodeB. With this information the eNodeB is able to exchange IP packets with other internet hosts.           [SC3] The eNodeB Drovides information about its type, hardware and other relevant data about itself to the OAM (sub) system providing support for the self- configuration process (e.g. outpsystem for software download, subsystem for configuration data download) is provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.           [SC5] The address(es) of the OAM (sub)system providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.           [SC6] The eNodeB connects to the OAM system providing support for the software download.         [SC6] The eNodeB connects to the OAM system providing support for the configuration data download.           [SC6] The eNodeB connects to the OAM system providing support for the	Roles (*)							
support for the self-configuration process.           Pre conditions.         The eNodeB is physically installed and physically connected to an IP network.           Begins when         The field personnel start the self-configuration process. It is also possible that the process is triggered automatically after the completion of an eNodeB self-test.           Step 1 (*)         The order of the bullet points in the list below does not imply any statements on the order of execution.           [SC1] Basic information about the transport network (e.g. gateways) environment is provided to the eNodeB. With this information about its type, hardware and other relevant data about tissel to the CAM (sub) systems providing support for the self-configuration process.           [SC3] The eNodeB provides information about its type, hardware and other relevant data about tissel to the CAM (sub) systems providing support for the self-configuration process.           (SC4] The address(es) of the OAM (sub) systems providing support for the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or a DIN ame and port number, or a DIN ame and port number, or a DIN.           [SC6] The address(es) of the OAM (sub)system troviding support for normal OAM functionad.         [SC7] The eNodeB connects to the OAM system providing support for the software download.           [SC7] The eNodeB connects to the OAM system providing support for the configuration data download.         [SC7] The decision which software or software packages have to be downloaded to the eNodeB. [SC1] The eNodeB connects to the OAM system providing support for the configuration data savailable.           [SC6]		The E-UTRAN/EPC network including its OSS.						
Begins when         The field personnel start the self-configuration process. It is also possible that the process is triggered automatically after the completion of an eNodeB self-test.           Step 1 (*)         The order of the bullet points in the list below does not imply any statements on the order of execution.           [SC1] An eNodeB IP address is allocated to the new eNodeB.         [SC2] Basic information about the transport network (e.g. gateways) environment is provided to the eNodeB. With this information the eNodeB is able to exchange IP packets with other internet hosts.           [SC3] The eNodeB provides information about its type, hardware and other relevant data about itself to the OAM (sub) system sproviding support for the self-configuration data download) is provided to the eNodeB. The address is equal to an IP address and a port number, or a DNS name and port number, or an URI.           [SC5] The address(e) of the OAM (sub)system(s) providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.           [SC6] The eNodeB connects to the OAM system providing support for the software download.           [SC7] The decision which software or software packages have to be downloaded to the eNodeB. Is taken.           [SC8] The eNodeB connects to the OAM system providing support for the configuration data download.           [SC7] The decision which software or software packages have to be downloaded to the eNodeB. Staken.           [SC6] The eNodeB connects to the OAM system providing support for the configuration data adownload.           [SC7] The decision wh	Assumptions	support for the self-configuration process.						
Is triggered automatically after the completion of an eNodeB self-test.           Step 1 (*)         The order of the bullet points in the list below does not imply any statements on the order of execution.           [SC1] An eNodeB IP address is allocated to the new eNodeB.         [SC2] Basic information about the transport network (e. g. gateways) environment is provided to the eNodeB. With this information about its type, hardware and other relevant data about itself to the OAM (sub) systems providing support for the self-configuration process. (SC3] The eNodeB provided to the eNodeB. To ame and port number, or a DNS name and port number, or an URI.           [SC6] The decision which software or software packages have to be downloaded to the eNodeB is taken.         [SC6] The eNodeB connects to the OAM system providing support for the configuration data download.           [SC1] The decision which software or software packages have to be downloaded to the eNodeB.         [SC2] The decision which software or software packages have to be downloaded to the eNo	Pre conditions	The eNodeB is physically installed and physically connected to an IP network.						
Step 1 (') (M[O)         The order of the bullet points in the list below does not imply any statements on the order of execution.           [SC1] An eNodeB IP address is allocated to the new eNodeB.         [SC2] Basic information about the transport network (e. g. gateways) environment is provided to the eNodeB. With this information the eNodeB is able to exchange IP packets with other internet hosts.           [SC3] The eNodeB provides information about its type, hardware and other relevant data about itself to the OAM (sub) systems providing support for the self- configuration process (e. g. subsystem for osfotware download, subsystem for configuration data download) is provided to the eNodeB. The address is equal to an IP address and a port number, or a DNS name and port number, or an URI.           [SC3] The eXideB connects to the OAM (sub) system (s) providing support for the self- configuration of the Self-configuration process are provided to the eNodeB. The address (se) of the OAM (sub)system(s) providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB.           [SC6] The eNodeB connects to the OAM system providing support for the software download.         [SC7] The decision which software or software packages have to be downloaded to the eNodeB is taken.           [SC6] The software is downloaded into the eNodeB.         [SC7] The decision which software or software packages have to be download subble by either preparing it or making prepared configuration data available.           [SC1] The dodeB connects to the OAM system providing support for the eNodeB.           [SC1] The dodeB connects to the OAM (sub) system(s) providing support for normal OAM functions after completion of the self-configurati	Begins when	The field personnel start the self-configuration process. It is also possible that the process is triggered automatically after the completion of an eNodeB self-test.						
<ul> <li>[SC2] Basic information about the transport network (e. g. gateways) environment is provided to the eNodeB with this information the eNodeB is able to exchange IP packets with other internet hosts.</li> <li>[SC3] The eNodeB provides information about its type, hardware and other relevant data about itself to the OAM (sub) systems providing support for the self-configuration process. (g. q. subsystem for software download, subsystem for configuration addited about itself to the CAM (sub) systems for software download, subsystem for configuration addited advecting on a DNS name and port number, or an URI.</li> <li>[SC5] The address(es) of the OAM (sub) system(s) providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.</li> <li>[SC6] The address(es) of the OAM (sub)system(s) providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.</li> <li>[SC6] The eNodeB connects to the OAM system providing support for the software download.</li> <li>[SC7] The deNodeB connects to the OAM system providing support for the configuration data download.</li> <li>[SC6] The software is downloaded into the eNodeB.</li> <li>[SC6] The eNodeB connects to the OAM system providing support for the configuration data download.</li> <li>[SC6] The eNodeB connects to the OAM system providing support for the enodeB.</li> <li>[SC71] The eNodeB connects to the OAM system for configuration data as a download.</li> <li>[SC6] The software is downloaded into the eNodeB.</li> <li>[SC71] The eNodeB connects to the OAM system for configuration data as well (if required).</li> <li>[SC13] The eNodeB connects to the OAM system for configuration the eNodeB.</li> <li>[SC14] The envortedB connects to the OAM (sub) system(s) providing sup</li></ul>								
OAM functions after completion of the self-configuration process.         [SC14] The S1-links are be set up.         [SC15] The (planned) X2-links are be set up.         [SC16] The inventory system in the OAM is informed that a new eNodeB is in the field.         [SC17] The eNodeB performs a self-test. Self-tests of different types can run at different places within the self-configuration procedure.         [SC18] The operator is informed about the progess of the self-configuration process and important events occuring during the self-configuration process.         [SC19] The network resource models visible over Itf-N are updated during and after the self-configuration process.         [SC20] SW is installed, i.e. prepared in such a way, that the NE is ready to use it. For some implementations this step is done not at all or considered part of [SC21] or of [SC8].         [SC21] SW is activated, i.e. final provisions are done such that the NE is allowed to use the SW. For some implementations this step is considered part of [SC20] or of [SC8].         Ends when (*)       Ends when all steps identified above are successfully completed or when an exception occurs.         Exceptions       FFS.		<ul> <li>[SC2] Basic information about the transport network (e. g. gateways) environment is provided to the eNodeB. With this information the eNodeB is able to exchange IP packets with other internet hosts.</li> <li>[SC3] The eNodeB provides information about its type, hardware and other relevant data about itself to the OAM (sub) systems providing support for the self-configuration process.</li> <li>[SC4] The address(es) of the OAM (sub) system(s) providing support for the self-configuration process (e.g. subsystem for software download, subsystem for configuration data download) is provided to the eNodeB. The address is equal to an IP address and a port number, or a DNS name and port number, or an URI.</li> <li>[SC5] The address(es) of the OAM (sub)system(s) providing support for normal OAM functions after completion of the self-configuration process are provided to the eNodeB. The address is equal to an IP address and a port number, or an URI.</li> <li>[SC6] The eNodeB connects to the OAM system providing support for the software download.</li> <li>[SC7] The decision which software or software packages have to be downloaded to the eNodeB is taken.</li> <li>[SC8] The eNodeB connects to the OAM system providing support for the configuration data download.</li> <li>[SC9] The eNodeB connects to the OAM system providing support for the configuration data download.</li> <li>[SC10] The (transport and radio) configuration data for the eNodeB is made available by either preparing it or making prepared configuration data available.</li> <li>[SC11] The (transport and radio) configuration data is downloaded into the eNodeB.</li> <li>[SC12] Dependent nodes (MMEs, eNodeBs) are updated with new configuration data as well (if required).</li> </ul>						
important events occuring during the self-configuration process.         [SC19] The network resource models visible over ltf-N are updated during and after the self-configuration process.         [SC20] SW is installed, i.e. prepared in such a way, that the NE is ready to use it. For some implementations this step is done not at all or considered part of [SC21] or of [SC8].         [SC21] SW is activated, i.e. final provisions are done such that the NE is allowed to use the SW. For some implementations this step is considered part of [SC20] or of [SC8].         Ends when (*)       Ends when all steps identified above are successfully completed or when an exception occurs.         Exceptions       FFS.		OAM functions after completion of the self-configuration process. [SC14] The S1-links are be set up. [SC15] The (planned) X2-links are be set up. [SC16] The inventory system in the OAM is informed that a new eNodeB is in the field. [SC17] The eNodeB performs a self-test. Self-tests of different types can run at different places within the self-configuration procedure.						
Ends when (*)       Ends when all steps identified above are successfully completed or when an exception occurs.         Exceptions       FFS.		important events occuring during the self-configuration process. [SC19] The network resource models visible over ltf-N are updated during and after the self-configuration process. [SC20] SW is installed, i.e. prepared in such a way, that the NE is ready to use it. For some implementations this step is done not at all or considered part of [SC21] or of [SC8]. [SC21] SW is activated, i.e. final provisions are done such that the NE is allowed to use						
Exceptions FFS.	Ends when (*)	Ends when all steps identified above are successfully completed or when an exception						
	Exceptions							
	Post	The eNodeB is operational and able to carry traffic.						
Conditions Traceability (*)		-						

Editor's note: Security aspects are FFS.

### 6.5 Requirements

### 6.5.1 Automatic Radio Network Configuration Data Preparation

FFS

### 6.5.2 Self-configuration of a new eNodeB

The following requirements apply to the macro eNB only. Requirements for the HNB can be found in TR 32.821.

The way to make any information available to eNB is outside the scope of standardisation.

Conflict resolution in case of contradicting information made aware to the eNodeB is outside the scope of standardisation.

### 6.5.2.1 Self-Configuration Management and Monitoring

#### 6.5.2.1.1 Management Part

#### REQ\_SCMAN\_FUN\_1

It shall be possible for an IRPManager to retrieve

- information regarding how an NE or a group of NEs behaves during self-configuration, i.e. in which sequence the essential steps of self-configuration are executed

- information regarding where the IRPManager can interact with a self-configuration - by suspending the self-configuration process at one or more self-configuration stop points.

Steps, their sequence and their stop point qualification are not imposed by the standard.

#### REQ\_SCMAN\_FUN\_2

If choices for stop points to suspend the SWM process are offered, then it shall be possible for an IRPManager to choose/select among them where it will suspend (stop) a self-configuration process (i.e. to ensure fulfillment of preconditions for the step like the fulfillment of the presence of required input data for the step). The IRPManager shall be able to read or select or de-select the stop points offered.

The IRPManager shall be informed about creation and deletion of a profile which is a holder of information regarding the offered self configuration steps, the offered sequence of the steps and the configuration steps stop points. The IRPManager should be able to change the content of a created profile and be informed about the change.

#### REQ\_SCMAN\_FUN\_3

It shall be possible for an IRPM anager to resume a suspended self-configuration for one or multiple NEs.

#### REQ\_SCMAN\_FUN\_4

It shall be possible for an IRPManager to terminate an currently ongoing self-configuration for one or multiple NEs. After a termination it is not possible to resume the self-configuration.

### 6.5.2.1.2 Monitoring Part

#### REQ\_SCMON\_FUN\_1

The IRPAgent shall send an alarm in case of failures during the self-configuration process.

#### REQ\_SCMON\_FUN\_2

The IRPAgent should report the progress of a self-configuration of one or multiple NEs to the IRPManager.

#### REQ\_SCMON\_FUN\_3

#### 3GPP TS 32.501 version 8.0.0 Release 8

When a self-configuration profile is created or deleted, then the IRPAgent shall inform the IRPManager about this creation and deletion.

When the optional change of a self-configuration profile is performed, then the IRPAgent shall inform the IRPManager about such a change.

#### REQ\_SCMON\_FUN\_4

It shall be possible for IRPManager to retrieve information about the progress of a self-configuration.

#### REQ\_SCMON\_FUN\_5

The IRPAgent shall send a notification about the start, stop, completion and optionally cancellation of a self-configuration.

#### REQ\_SCMON\_FUN\_6

The IRPAgent shall inform the IRPManager whenever the self-configuration process has been suspended or resumed

6.5.2.2 Software Management

REQ_SCSW_FUN_1	see REQ_SWM_FUN_1 in 32.531
REQ_SCSW_FUN_2	see REQ_SWM_FUN_2 in 32.531
REQ_SCSW_FUN_3	see REQ_SWM_FUN_4 in 32.531
REQ_SCSW_FUN_4	see REQ_SWM_FUN_5 in 32.531
<b>REQ SCSW FUN 5</b>	see REQ_ASWM_FUN_1 in 32.531
REQ_SCSW_FUN_6	see REQ_ASWM_FUN_2 in 32.531
REQ_SCSW_FUN_7	see REQ_ASWM_FUN_3 in 32.531
REQ_SCSW_FUN_8	see REQ_ASWM_FUN_4 in 32.531
REQ_SCSW_FUN_9	see REQ_ASWM_FUN_5 in 32.531

### 6.5.2.3 Address Allocation and OAM Connectivity Establishment

#### REQ\_SCOCE\_FUN\_1

The automatic establishment of the OAM connectivity shall be fully secured.

#### REQ\_SCOCE\_FUN\_2

The IRPManager shall be informed that the eNB has reached OAM connectivity.

#### 6.5.2.4 Inventory Update

Editor"s note: The details of the inventory information to be reported are FFS.

#### 6.5.2.5 Self-Test

#### REQ\_SCST\_ffs\_1 FFS

Editor"s note: The self-test may have to be separated out into a separate use case.

- 6.5.2.6 Radio Configuration Data
- FFS
- 6.5.2.7 Transport Configuration Data
- FFS

#### Call Processing Link Set-Up 6.5.2.8

#### FFS

#### NRM IRP Update 6.5.2.9

**REQ\_SCNRMU\_FUN\_1** The related E-UTRAN NRM IRP and EPC NRM IRP instances shall be created and updated.

## 7. Functions and Architecture

## 7.1 Self-Configuration Logical Architecture

The lines between the functional blocks do not indicate specific 3GPP interfaces.

For the abbreviations used, please see the headlines of chapter 4.

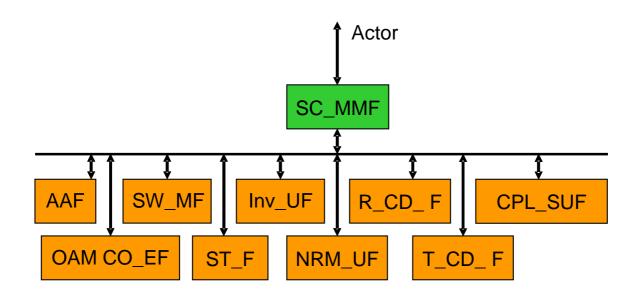


Figure 7.1-1: Self-Configuration Logical Architecture

## 7.2 Self-Configuration Reference Model

The SC\_MMF has a part located in the EM and a part located at the NM.

For the abbreviations used, please refer to Chapter 4.

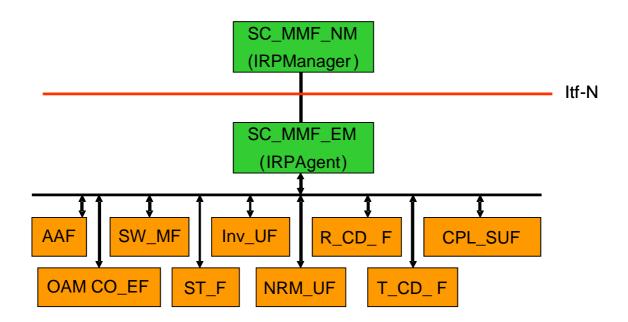


Figure 7.2-1: Self-Configuration Reference Model

## Annex A (informative): Change history

	Change history						
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2008-12	SP-42	SP-080713			Submitted to SA#42 information and approval	1.0.0	8.0.0

## History

Document history				
V8.0.0 January 2009 Publication				