ETSI TS 136 579-2 V14.3.0 (2019-07)



LTE;

Mission Critical (MC) services over LTE; Part 2: Mission Critical Push To Talk (MCPTT) User Equipment (UE) Protocol conformance specification (3GPP TS 36.579-2 version 14.3.0 Release 14)



Reference

RTS/TSGR-0536579-2ve30

Keywords

LTE

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: <u>http://www.etsi.org/standards-search</u>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <u>https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx</u>

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommiteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI. The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2019. All rights reserved.

DECT[™], PLUGTESTS[™], UMTS[™] and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP[™]** and LTE[™] are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M[™]** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **ORM**[®] and the OSM large are trademarked and sugged by the OSM Association

 $\ensuremath{\mathsf{GSM}}\xspace^{\ensuremath{\$}}$ and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the ETSI Drafting Rules (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intelle	ectual Property Rights	2
Legal	Notice	2
Moda	l verbs terminology	2
Forew	/ord	6
1	Scope	7
2	References	7
3	Definitions, symbols and abbreviations	9
3.1	Definitions	
3.2 3.3	Symbols	
4	General	
4.1 4.1.1	Test methodology Testing of optional functions and procedures	
4.1.2	Test interfaces and facilities	
4.2	Implicit testing	
4.3	Repetition of tests	
4.4	Handling of differences between conformance requirements in different releases of cores specifications	
4.5	Reference conditions	
4.6	Generic setup procedures	11
5	MCPTT Client Configuration	12
5.1	Configuration / Authentication / User Authorisation / UE Configuration / User Profile / Key Generation	
5.2	Configuration / Group Creation / Group Regroup Creation / Group Regroup Teardown	
5.3	Configuration / Group Affiliation / Remote change / De-affiliation / Home MCPTT system	36
5.4	Configuration / Pre-established Session Establishment / Pre-established Session Modification / Pre-	51
	established Session Release	
6	MCPTT Client on-network operation	
6.1	Group Calls	
6.1.1	Pre-arranged Group Call	62
6.1.1.1	On-network / On-demand Pre-arranged Group Call / Automatic Commencement Mode / End-to- end communication security / Floor Control / Upgrade to Emergency Group Call / Cancel Emergency State / Upgrade to Imminent Peril Group Call / Cancel Imminent Peril State / Client	
	Originated (CO)	62
6.1.1.2	β	
	Control / Upgrade to Emergency Group Call / Cancel Emergency State / Upgrade to Imminent Peril Group Call / Cancel Imminent Peril State / Client Terminated (CT)	90
6.1.1.3		
	Originated (CO)	.112
6.1.1.4		
< 1 1 F	Terminated (CT)	.117
6.1.1.5		105
6.1.1.6	established Session Release with associated MCPTT session / Client Originated (CO) On-network / Pre-arranged Group Call using pre-established session / Automatic	.123
0.1.1.0	Commencement Mode / Server originated Pre-established Session Release with associated	
	MCPTT session / Client Terminated (CT)	.131
6.1.1.7		
	Mode / Client Terminated (CT)	.133
6.1.1.8		
6.1.1.9		
6.1.1.1		
6.1.1.1		
6.1.1.1 6.1.1.1		
0.1.1.1	on network/ rie ananged Emergency Group can/ chent Originated (CO)	

6.1.1.1		
6.1.1.1		
6.1.1.1		
6.1.2	Chat Group Calls	
6.1.2.1		174
6.1.2.2		
	Imminent Peril Calls / Client Server originated Pre-established Session Release with associated	
	MCPTT session / Client Origination (CO)	
6.1.2.3		196
6.1.2.4		
	affiliation	
6.1.2.5		
6.1.2.6	1 1	
6.1.2.7		
6.1.2.8		
6.1.2.9		
6.1.2.1	1 1	
6.2	Private Calls	221
6.2.1	On-network / Private Call / On-demand / Automatic Commencement Mode / With Floor Control /	221
())	Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Originated (CO) On-network / Private Call / On-demand / Automatic Commencement Mode / With Floor Control /	
6.2.2	Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Terminated (CT)	220
6.2.3	On-network / Private Call / On-demand / Automatic Commencement Mode / Without Floor Control	239
0.2.5	/ Client Originated (CO)	254
6.2.4	On-network / Private Call / On-demand / Automatic Commencement Mode / Without Floor Control	234
0.2.4	/ Client Terminated (CT)	260
6.2.5	On-network / Private Call / Emergency Private Call / On-demand / Automatic Commencement	200
0.2.5	Mode / Force of automatic commencement mode / Without Floor Control / Client Originated (CO)	265
6.2.6	On-network / Private Call / Emergency Private Call / On-demand / Automatic Commencement	
0.2.0	Mode / Force of automatic commencement mode / Without Floor Control / Client Terminated (CT)	273
6.2.7	On-network / Private Call / On-demand / Manual Commencement Mode / Without Floor Control /	/0
	Client Originated (CO)	278
6.2.8	On-network / Private Call / On-demand / Manual Commencement Mode / Without Floor Control /	
	Client Terminated (CT)	284
6.2.9	On-network / Private Call / Within a pre-established session / Automatic Commencement Mode /	
	Without Floor Control / Client Originated (CO)	289
6.2.10	On-network / Private Call / Within a pre-established session / Automatic Commencement Mode /	
	Without Floor Control / Client Terminated (CT).	295
6.2.11	On-network / Private Call / Within a pre-established session / Manual Commencement Mode /	
	Without Floor Control / Release of the Call and the pre-established session / Client Terminated (CT)	302
6.2.12	On-network / Private Call / Private Call Call-Back Request / Private Call Call-Back Cancel Request	210
6 0 10	/ Client Originated (CO) / Private call call-back fulfilment	310
6.2.13	On-network / Private Call / Private Call Call-Back Request / Private Call Call-Back Cancel Request	210
6.2.14	/ Client Terminated (CT) / Private call call-back fulfilment	
0.2.14	On-network / Private Call / Ambient listening call / Remotely initiated Ambient listening call / Remotely initiated embient listening call release / Suspense / Client Originated (CO) / Server initiated	
	Remotely initiated ambient listening call release / Success / Client Originated (CO) / Server initiated ambient call release	220
6.2.15	On-network / Private Call / Ambient listening call / Remotely initiated Ambient listening call /	329
0.2.13	Remotely initiated ambient listening call release / Success / Client Terminated (CT)	228
6.2.16	On-network / Private Call / Ambient listening call / Locally initiated Ambient listening call / Locally	
0.2.10	initiated ambient listening call release / Success / Client Originated (CO) / Server initiated ambient	
	call release	343
6.2.17	On-network / Private Call / Ambient listening call / Locally initiated Ambient listening call / Locally	
0.2.17	initiated ambient listening call release / Success / Client Terminated (CT)	351
6.3	Location	
6.3.1	On-network / Location / Event Triggered Location Information report	
6.3.2	On-network / Location / On-demand Location Information Request	
6.4	MBMS	
6.4.1	On-network / MBMS / MBMS Bearer Announcement / MBMS Bearer Listening Status / Transition	
	to MBMS from Unicast / MBMS Floor Control / Transition to Unicast from MBMS	379
7	MCPTT Client off-network operation	307
1		.571

7.1	Off-network Group Calls	.397
7.1.1	Off-network / Group Call / Floor Control / Upgrade to Emergency Call / Downgrade from	
	Emergency / Upgrade to Imminent Peril / Downgrade from Imminent Peril / Release Call / Client	
	Originated (CO)	.397
7.1.2	Off-network / Group Call / Floor Control / Upgrade to Emergency Call / Downgrade from	
	Emergency / Upgrade to Imminent Peril / Downgrade from Imminent Peril / Release Call / Client	
	Terminated (CT)	.423
7.1.3	Off-network / Group Call / Leave Group Call when GROUP CALL PROBE sent / Initiate Group	
	Call for Released Call / Receive GROUP CALL ANNOUNCEMENT for Released call / No	
	GROUP CALL ANNOUNCEMENT for Released Call / Receive Response to GROUP CALL	
	PROBE	.448
7.1.4	Off-network / Group Call / MCPTT User Acknowledgement Required / With Confirm Indication /	
	MCPTT User Reject / MCPTT User Accept / Client Terminated (CT)	.456
7.1.5	Off-network / Group Call / MCPTT User Acknowledgement Required / Without Confirm Indication	
	/ MCPTT User Reject / MCPTT User Accept / Client Terminated (CT)	.462
7.1.6	Off-network / Group Call / Merge Two Calls	
7.1.7	Off-network / Group Call / Emergency Call / Imminent Peril Call / Client Originated (CO)	
7.1.8	Off-network / Group Call / Emergency Call / Imminent Peril Call / Client Terminated (CT)	
7.1.9	Off-network / Group Call / Emergency Alert / Emergency Alert Retransmission / Cancel Emergency	
	Alert / Client Originated (CO)	.492
7.1.10	Off-network / Group Call / Emergency Alert / Emergency Alert Retransmission / Cancel Emergency	
	Alert / Client Terminated (CT)	.496
7.1.11	Off-network / Group Call / Broadcast Group Call / Broadcast Group Call Retransmitting / Broadcast	
	Group Call Release / Client Originated (CO)	.501
7.1.12	Off-network / Group Call / Broadcast Group Call / MCPTT User Ack Not Required / Originator	
	Releases Call / Client Terminated (CT).	.506
7.1.13	Off-network / Group Call / Broadcast Group Call / MCPTT User Ack Required / MCPTT User	
	Reject / MCPTT User Accept / MCPTT User Releases Call / Client Terminated (CT)	.509
7.2	Off-network Private Calls	.515
7.2.1	Off-network / Private Call / On-demand / Automatic Commencement Mode / No Response to	
	Private Call Setup Request / Private call setup success / With Floor Control / Upgrade to Emergency	
	Call / Cancellation of Emergency on User request / Client Originated (CO)	.515
7.2.2	Off-network / Private Call / On-demand / Automatic Commencement Mode / No Response to	
	Private Call Setup Accept / Private call setup success / With Floor Control / Upgrade to Emergency	
	Call / Cancellation of Emergency on User request / Client Terminated (CT)	.533
7.2.3	Off-network / Private Call / On-demand / Automatic Commencement Mode / Upgrade to	
	Emergency Call Reject / Downgrade from Emergency Call Failure / Client Originated (CO)	.550
7.2.4	Off-network / Private Call / On-demand / Manual Commencement Mode / Call Released before	
	establishment completion / Call request Rejected / Call establishment successful / Client Originated	
	(CO)	.559
7.2.5	Off-network / Private Call / On-demand / Manual Commencement Mode / Call Released before	
	establishment completion / User does not answer to Ringing / User Rejects call request / Call	
	establishment successful / Client Terminated (CT)	.568
Annex	A (informative): Change history	.579
History		584
y		

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

The present document is part 2 of a multi-part deliverable covering conformance test specification for Mission Critical Services over LTE consisting of:

3GPP TS 36.579-1 [2]: "Mission Critical (MC) services over LTE; Part 1: Common test environment"

3GPP TS 36.579-2: "Mission Critical (MC) services **over LTE; Part 2:** Mission Critical Push To Talk (MCPTT) User Equipment (UE) Protocol conformance specification" (the present document);

3GPP TS 36.579-3 [3]: "Mission Critical (MC) services over LTE; Part 3: Mission Critical Push To Talk (MCPTT) Server Application conformance specification";

3GPP TS 36.579-4 [4]: "Mission Critical (MC) services over LTE; Part 4: Test Applicability and Implementation Conformance Statement (ICS) proforma specification";

3GPP TS 36.579-5 [5]: "Mission Critical (MC) services over LTE; Part 5: Abstract test suite (ATS)".

1 Scope

The present document specifies the protocol conformance testing for testing a MCPTT Client for compliance to the Mission Critical Push To Talk (MCPTT) over LTE protocol requirements defined by 3GPP.

In particular the present document contains:

- the overall test structure;
- the test configurations;
- the conformance requirement and reference to the core specifications;
- the test purposes; and
- a brief description of the test procedure, the specific test requirements and short message exchange table.

The present document is valid for MCPTT Clients implemented according to 3GPP releases starting from Release 13 up to the Release indicated on the cover page of the present document.

The following information relevant to testing specified in the present document could be found in accompanying specifications:

- default setting of the test parameters TS 36.579-1 [2];
- Implementation Conformance Statement (ICS) TS 36.579-4 [4] and Implementation eXtra Information for Testing (IXIT) TS 36.579-5 [5];
- the applicability of each test case TS 36.579-4 [4].

The test cases are expected to be executed through the 3GPP radio interface. The present document does not specify the protocol conformance testing for the EPS (LTE) bearers which carry the MCPTT data sent or received by the MCPTT Client and which are required to be supported by the UE in which the MCPTT Client is installed. This is defined in TS 36.523-1 [6].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 36.579-1: "Mission Critical (MC) services over LTE; Part 1: Common test environment".
- [3] 3GPP TS 36.579-3: "Mission Critical (MC) services over LTE; Part 3: Mission Critical Push To Talk (MCPTT) Server Application test specification".
- [4] 3GPP TS 36.579-4: "Mission Critical (MC) services over LTE; Part 4: Test Applicability and Implementation Conformance Statement (ICS).
- [5] 3GPP TS 36.579-5: "Mission Critical (MC) services over LTE; Part 5: Abstract test suite (ATS)".

[6] 3GPP TS 36.523-1: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC); User Equipment (UE) conformance specification; Part 1: Protocol conformance specification". 3GPP TS 22.179: "Mission Critical Push To Talk (MCPTT) over LTE; Stage 1". [7] 3GPP TS 23.179: "Functional architecture and information flows to support mission critical [8] communication services; Stage 2". [9] 3GPP TS 24.379: "Mission Critical Push To Talk (MCPTT) call control; Protocol specification". 3GPP TS 24.380: "Mission Critical Push To Talk (MCPTT) media plane control; Protocol [10] specification ". [11] 3GPP TS 24.481: "Mission Critical Services (MCS) group management; Protocol specification". 3GPP TS 24.482: "Mission Critical Services (MCS) identity management; Protocol specification". [12] [13] 3GPP TS 24.483: "Mission Critical Services (MCS) Management Object (MO)". 3GPP TS 24.484: "Mission Critical Services (MCS) configuration management; Protocol [14] specification". 3GPP TS 33.179: " Security of Mission Critical Push To Talk (MCPTT) over LTE ". [15] [16] 3GPP TS 24.229: "IP multimedia call control protocol based on Session Initiation Protocol (SIP) and Session Description Protocol (SDP); Stage 3". [17] Void. Void. [18] [19] 3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System (EPS); Stage 3" [20] 3GPP TS 24.008: "Mobile Radio Interface Layer 3 specification; Core Network Protocols; Stage 3". [21] Void. [22] Void. [23] 3GPP TS 36.509: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Special conformance testing functions for User Equipment (UE)". 3GPP TS 36.508: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal [24] Terrestrial Radio Access (E-UTRAN); Common Test Environments for User Equipment (UE) Conformance Testing". OpenID Connect 1.0: "OpenID Connect Core 1.0 incorporating errata set 1", [25] http://openid.net/specs/openid-connect-core-1_0.html. [26] Void. [27] Void [28] Void. Void. [29] 3GPP TS 33.310: "Network Domain Security (NDS); Authentication Framework (AF)". [30] [31] Void. 3GPP TS 23.003: "Numbering, addressing and identification". [32]

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

For the purpose of the present document, the following terms and definitions given in 3GPP TS 24.379 [9] apply:

An MCPTT user is affiliated to an MCPTT group An MCPTT user is affiliated to an MCPTT group at an MCPTT client **Affiliation status** Group identity In-progress emergency private call state In-progress imminent peril group state **MCPTT client ID MCPTT** emergency alert state **MCPTT** emergency group state MCPTT emergency group call state MCPTT emergency private call state MCPTT emergency private priority state MCPTT imminent peril group call state **MCPTT** imminent peril group state **MCPTT** private emergency alert state **MCPTT speech** Media-floor control entity **Temporary MCPTT group identity** Trusted mutual aid Untrusted mutual aid

For the purposes of the present document, the following terms and definitions given in 3GPP TS 22.179 [7] apply:

In-progress emergency MCPTT emergency alert MCPTT emergency group call MCPTT emergency state Partner MCPTT system Primary MCPTT system

For the purpose of the present document, the following terms and definitions given in 3GPP TS 24.380 [10] apply:

MBMS subchannel

For the purpose of the present document, the following terms and definitions given in 3GPP TS 23.179 [8] apply:

Pre-selected MCPTT user profile

3.2 Symbols

For the purposes of the present document, the following symbols apply:

None.

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

ECGI	E-UTRAN Cell Global Identification
FFS	For Further Study
ICS	Implementation Conformance Statement
IPEG	In-Progress Emergency Group
IPEPC	In-Progress Emergency Private Call
IPIG	In-Progress Imminent peril Group
IUT	Implementation Under Test
IXIT	Implementation eXtra Information for Testing
MBMS	Multimedia Broadcast and Multicast Service
MBSFN	Multimedia Broadcast multicast service Single Frequency Network
MCPTT	Mission Critical Push To Talk
MCPTT group I	D MCPTT group IDentity
MEA	MCPTT Emergency Alert
MEG	MCPTT Emergency Group
MEGC	MCPTT Emergency Group Call
MEPC	MCPTT Emergency Private Call
MEPP	MCPTT Emergency Private Priority
MES	MCPTT Emergency State
MIME	Multipurpose Internet Mail Extensions
MIG	MCPTT Imminent peril Group
MIGC	MCPTT Imminent peril Group Call
MONP	MCPTT Off-Network Protocol
MPEA	MCPTT Private Emergency Alert
NAT	Network Address Translation
PLMN	Public Land Mobile Network
QCI	QoS Class Identifier
RTP	Real-time Transport Protocol
SAI	Service Area Identifier
SDP	Session Description Protocol
SIP	Session Initiation Protocol
SS	System Simulator
SSRC	Synchronization SouRCe
TGI	Temporary MCPTT Group Identity
TMGI	Temporary Mobile Group Identity
TP	Transmission Point
TP	Test Purpose
UE	User Equipment
URI	Uniform Resource Identifier

4 General

4.1 Test methodology

4.1.1 Testing of optional functions and procedures

Any function or procedure which is optional, may be subject to a conformance test if it is implemented in the MCPTT Client.

A declaration by the MCPTT Client supplier (to use the Implementation Conformance Statement (ICS) proforma specified in TS 36.579-4 [4]) is used to determine whether an optional function/procedure has been implemented.

4.1.2 Test interfaces and facilities

Detailed descriptions of the MCPTT Client test interfaces and special facilities for testing are provided in 3GPP TS 36.509 [23].

4.2 Implicit testing

For some 3GPP MCPTT protocol features conformance is not verified explicitly in the present document. This does not imply that correct functioning of these features is not essential, but that these are implicitly tested to a sufficient degree in tests which are not explicitly dedicated to test the feature.

4.3 Repetition of tests

As a general rule, the test cases specified in the present document are highly reproducible and do not need to be repeated unless otherwise stated.

4.4 Handling of differences between conformance requirements in different releases of cores specifications

The conformance requirements which determine the scope of each test case are explicitly copy-pasted from relevant core specifications in the especially dedicated for this clause of each test with the title 'Conformance requirements'.

NOTE: When in the copy/pasted text there are references to other specifications the reference numbers will not match the reference numbers used in the present document. This approach has been taken in order to allow easy copy and then search for conformance requirements in those specifications.

When differences between conformance requirements in different releases of the cores specifications have impact on the Pre-test conditions, Test procedure sequence or/and the Specific message contents, the Conformance requirements related to different releases are specified separately with clear indication of the Release of the spec from which they were copied.

When there is no Release indicated for a conformance requirement text, this should be understood either as the Conformance requirements in the latest version of the spec with release = the TC Applicability release (which can be found in TS 36.579-4 [4], Table 4-1: Applicability of tests and additional information for testing, column 'Release'), or, as the Conformance requirements in the latest version of the spec of the release when the feature was introduced to the core specs.

4.5 Reference conditions

The reference environments used by all signalling and protocol tests is specified in TS 36.579-1 [2]. Where a test requires an environment that is different, this will be specified in the test itself.

4.6 Generic setup procedures

A set of basic generic procedures for MCPTT Client-Server communication are described in TS 36.579-1 [2]. These procedures will be used in numerous test cases throughout the present document.

5 MCPTT Client Configuration

5.1 Configuration / Authentication / User Authorisation / UE Configuration / User Profile / Key Generation

5.1.1 Test Purpose (TP)

(1)

```
with { UE (MCPTT Client) attached to EPS services }
ensure that {
  when \{ the MCPTT User activates an MCPTT application and requests MCPTT initialisation \}
   then { UE (MCPTT Client) performs MCPTT User Authentication }
            }
(2)
with { UE (MCPTT Client) user authenticated }
ensure that {
  when { the UE (MCPTT Client) has established a secure HTPP tunnel
   then { UE (MCPTT Client) performs key management authorization and obtains identity management
key material }
(3)
with { UE (MCPTT Client) has obtained identity management key material }
ensure that {
  when { the UE (MCPTT Client) requests user service authorization }
    then { UE (MCPTT Client) sends a user authorization request to the MCPTT Server }
            }
(4)
with { UE (MCPTT Client) authorized for user services }
ensure that {
 when { the UE (MCPTT Client) requests configuration management authorization}
   then { UE (MCPTT Client) requests subscription to multiple documents simultaneously and request
the retrieval of the MCPTT UE Configuration document, the MCPTT User Profile Configuration Document
and the MCPTT Service Configuration Document }
            }
(5)
with { UE (MCPTT Client) having obtained user configuration data }
ensure that {
```

when { the UE (MCPTT Client) requests group management authorization }
 then { UE (MCPTT Client) receives the group profile including group traffic keys }
 }
}

(6)

with { UE (MCPTT Client) having obtained all required configuration data }
ensure that {
 when { the UE (MCPTT Client) requires to refresh its service settings }
 then { UE (MCPTT Client) sends a SIP PUBLISH request }
 }
}

5.1.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TR 24.980 clauses 4.2.1 and 4.3.1, TS 24.482 clause 6.2.1 and Annex A.2.1.2, TS 24.484 clauses 4.2.1, 4.2.2, 6.2.2, 6.3.1.1, 6.3.2.1, 6.3.2.2, 6.3.13.2.1 and 6.3.13.2.2, TS 24.481 clauses 6.2.2.2, 6.2.3, 6.3.3.2.1, 6.3.3.2.2 and 6.3.13.2.1, TS 24.379 clauses 7.2.1, 7.2.1A, 7.2.2 and 7.2.3, TS 33.179 clauses 5.6.1, 6.2, 7.2.3 and Annex D. Unless otherwise stated these are Rel-13 requirements.

[TR 24.980, clause 4.2.1]

The MCPTT UE follows the SIP registration procedures defined in 3GPP TS 24.229 [4]. In addition, when the conditions for performing IMS registration in bullets 2, 3, 4, 5 and 6 in subclause L.3.1.2 of 3GPP TS 24.229 [4] evaluate to true, the MCPTT UE registers with the IMS.

[TR 24.980, clause 4.3.1]

The MCPTT UE follows the procedures defined in 3GPP TS 24.229 [4] and 3GPP TS 33.203 [7] for authentication with IMS Authentication and Key Agreement (IMS-AKA), Sec-Agree and IPSec. The MCPTT UE supports integrity protection.

[TS 24.482, clause 6.2.1]

Upon an indication from the MCPTT client to initiate MCPTT user authentication, the IdM client shall perform the user authentication procedure according to 3GPP TS 33.179 [2] with the following clarifications:

- shall establish a TLS tunnel to the authorisation endpoint of the IdM server as specified in 3GPP TS 33.179 [2] using the configured URL of the authorisation endpoint of the IdM server as specified in the "/<x>/OnNetwork/AppServerInfo/IDMSAuthEndpoint" leaf node defined in 3GPP TS 24.383 [11] and the clarifications in annex A;
- 2) shall generate an OIDC Authentication Request message as specified in the OpenID Connect 1.0 [6] and IETF RFC 6749 [5] with the following clarifications:
 - a) shall generate an HTTP GET request method according to IETF RFC 2616 [4];
 - b) shall include the configured parameter IdM client id as the client_id parameter specified in 3GPP TS 33.179 [2] in the query component of the authorization endpoint's URI using the "application/xwww-form-urlencoded" format as specified in W3C.REC-html401-19991224 [7]; and

NOTE 1: The configuration of client_id is specified in 3GPP TS 24.383 [11].

- c) shall include the remaining required parameters as specified in 3GPP TS 33.179 [2] in the query component of the authorization endpoint's URI using the "application/x-www-form-urlencoded" format as specified in W3C.REC-html401-19991224 [7]; and
- 3) shall send the HTTP GET request method towards the IdM server.
- NOTE 2: The OpenID Connect 1.0 [6] specification allows for an alternative mechanism for sending the OIDC Authentication request message using an HTTP POST request method which can be used in place of steps 1, 2, and 3 above.

Upon receipt of an HTTP 200 (OK) response from the IdM server, the IdM client:

- 1) shall prompt the MCPTT user for their username and password;
- NOTE 3: Other types of authentication are supported and are not defined by the OIDC specifications. 3GPP TS 33.179 [2] has defined username and password as a mandatory authentication method to be supported; hence a procedure to realize that method is included here.
- 2) shall generate an HTTP POST request method containing the MCPTT user's username and password; and
- 3) shall send the HTTP POST request method towards the IdM server.

Upon receipt of an OIDC Authentication Response message, the IdM client:

- shall establish a TLS tunnel to the token endpoint of the IdM server as specified in 3GPP TS 33.179 [2] using the configured URL of the token endpoint of the IdM server as specified in the "/<x>/OnNetwork/AppServerInfo/IDMSTokenEndpoint" leaf node defined in 3GPP TS 24.383 [11] and the clarifications in annex A;
- 2) shall generate an OIDC Token Request message as specified in OpenID Connect 1.0 [6] and IETF RFC 6749 [5] with the following clarifications:
 - a) shall generate an HTTP POST request method according to IETF RFC 2616 [4]; and
 - b) shall include the grant_type parameter set to a value of "authorization_code" and the other required parameters in the entity body of the HTTP POST request method using the using the "application/x-www-form-urlencoded" format as specified in 3GPP TS 33.179 [2]; and
- 3) shall send the HTTP POST request method towards the IdM server.

Upon receipt of an OIDC Token Response message, the IdM client:

- 1) shall validate the id_token, access_token and refresh token in the received OIDC Token Response message as specified in the OpenID Connect 1.0 [6] specification; and
- 2) shall provide the id_token and access_token in the received OIDC Token Response message to the MCPTT client.
- NOTE 4: The method in which the IdM client provides the id_token and access_token to the MCPTT client is implementation specific.

[TS 24.482, Annex A.2.1.2]

The HTTP client in the UE shall establish a TCP connection towards the home HTTP proxy FQDN and the home HTTP proxy port, unless the specific TCP connection is to be used for the IdM client to IdM server procedures described in subclause 6.2 and subclause 6.3 in the present document, in which case the HTTP client shall establish a TCP connection towards the IdM server.

The HTTP client in the UE shall establish a TLS tunnel via the TCP connection as specified in 3GPP TS 33.179 [2]. When establishing the TLS tunnel, the HTTP client in the UE shall act as a TLS client and the UE shall perform the TLS tunnel authentication using the TLS authentication method indicated by the TLS tunnel authentication method parameter according to 3GPP TS 33.179 [2]. The UE shall use the configured TLS tunnel authentication X.509 certificate and the configured TLS tunnel authentication pre-shared key when applicable for the used TLS authentication method. In order to prevent man-in-the-middle attacks, the HTTP client in the UE shall check the home HTTP proxy FQDN against the server's identity as presented in the received server's certificate message if the TCP connection terminates on the HTTP proxy, but shall do so if the TCP connection terminates on the IdM server.

NOTE: The TLS tunnel can be terminated in the HTTP proxy (rather than in the HTTP server providing the dereferenced HTTP URL).

The HTTP client in the UE shall send and receive all HTTP messages via the TLS tunnel.

If the HTTP client in the UE has an access token of the "bearer" token type as specified in IETF RFC 6750 [14], the HTTP client in the UE shall include an Authorization header field with the "Bearer" authentication scheme as specified in IETF RFC 6750 [14] in HTTP requests.

[TS 33.179 Annex D]

All KMS communications are made via HTTPS. The MCPTT key management client is provisioned via XML content in the KMS's response. The XML content is designed to be extendable to allow KMS/client providers to add further information in the XML. Where the interface is extended, a different XML namespace should be used (so that may be ignored by non-compatible clients).

It is assumed that transmissions between the KMS and the key management client are secure and that the KMS has authenticated the identity of the key management client.

Additionally, to allow the transmission of key material securely between a secure element within the KMS and a secure element within the key management client, a security extension is defined which allows messages to be signed and key material to be encrypted using a shared Transport Key (TrK).

[TS 33.179 clause 5.6.1]

For key management authorization, the KM client in the UE presents an access token to the KMS over HTTP. The KMS validates the access token and if successful, provides user specific key material back to the UE KM client based on the MCPTT ID of the user. This includes identity based key information used for media and signalling protection.

For user service authorization, the MCPTT client in the UE presents an access token to the MCPTT server over SIP. The MCPTT server validates the access token and if successful, authorizes the user for full MCPTT services and sends an acknowledgement back to the MCPTT client. The MCPTT server then maps and maintains the IMPU to MCPTT ID association. The MCPTT ID to IMPU association shall only be known to the application layer. The SIP message used to convey the access token from the MCPTT client to the MCPTT server may be either a SIP REGISTER or SIP PUBLISH message.

The UE can now perform configuration management authorization and download the user profile. Following the flow described in subclause 10.1.4.2 of 3GPP TS 23.179 [2] "MCPTT user obtains the user profile (UE initiated)", the Configuration Management (CM) client in the UE sends an access token in the user profile query to the Configuration Management server over HTTP. The CM server receives the request and validates the access token, and if valid, the CM server uses the MCPTT ID to obtain the user profile from the MCPTT user database. The CM server then sends the user profile back to the CM client over HTTP.

Upon receiving the user's profile, the Group Management (GM) client in the UE can now perform group management authorization. The GM client obtains the user's group membership information from the user's profile, and following the flow shown in clause 10.1.5.2 of 3GPP TS 23.179 [2] "Retrieve group configurations at the group management client", the Group Management (GM) client in the UE sends an access token in the Get group configuration request to the host GM server of the group membership over HTTP. The GM server validates the access token, and if valid, completes the flow. As part of group management authorization, group key information is provided as per subclause 7.3.2 of the present document.

[TS 33.179 clause 7.2.3]

Case that HTTP proxy is used between the KMC and KMS

- 0) The key management client establishes a connection to the MCPTT KMS. As with other elements in the Common Services Core, the connection routed via, and secured by, the HTTP Proxy. The message flow below is within this secure connection.
- NOTE: Additionally, the connection between the MCPTT KMS and the HTTP Proxy is secured according to clause 8.
- 1) The key management client makes a request for user key material from the MCPTT KMS. The request contains details of the identity (e.g. the MCPTT ID) requested for key management, and the time for which the key material is required.
- 2) The KMS provides a response containing key material. The response includes the type of key material, the period of use for the material and any domain-specific parameters required for its use. For public safety use, the key material itself shall be wrapped using a 256-bit transport key (TrK). The TrK is distributed via an out-of-band mechanism along with a 32-bit identifier, TrK-ID.

Case that HTTP proxy is not used between the KMC and KMS

- 0) The key management client establishes a direct HTTPS connection to the MCPTT KMS. The following message flow is within this secure connection.
- 1) The key management client makes a request for user key material from the MCPTT KMS. The request contains details of the identity requested for key management, and the time at which the key material is required.
- 2) The KMS provides a response containing key material. The response includes the type of key material, the period of use for the material and any domain-specific parameters required for its use. Optionally, the key material itself may also be wrapped using a 256-bit transport key (TrK), distributed via an out-of-band mechanism along with a 32-bit identifier (TrK-ID).

[TS 24.484, clause 4.2.1]

Upon start up the MCPTT UE bootstraps the required information (e.g. FQDN or IP address) to locate the configuration management server for configuration of the MCPTT UE initial configuration management object (MO) and the default MCPTT user profile configuration management object (MO).

In order to obtain access to the MCPTT service the MCPTT UE needs to obtain configuration data either online via the network or offline using some external device (e.g. a laptop). As part of the bootstrap process the MCPTT UE needs to discover either:

- 1. the online configuration management server in the network that configures the MPCTT UE initial configuration MO and the default MCPTT user profile configuration MO, then the MCPTT UE:
 - a) using the URI of the configuration management server obtained from the MPCTT UE initial configuration MO, obtains:
 - the MCPTT UE configuration document;
 - the MCPTT user profile configuration document; and
 - the MCPTT service configuration document; and
 - b) using the URI of the group management server obtained from the MPCTT UE initial configuration MO obtain the MCPTT group document; or

[TS 24.484, clause 4.2.2]

The MCPTT UE contacts the identity management server using the HTTPS URI stored in the MCPTT UE initial configuration MO and performs MCPTT User authentication as specified in 3GPP TS 24.382 [6].

The MCPTT UE, using the MCPTT ID obtained during MCPTT user authentication, subscribes to the MCPTT UE configuration document, the MCPTT user profile configuration document and the MCPTT service configuration document using the procedure for subscribing to multiple documents simultaneously using the subscription proxy function specified in subclause 6.3.13.2.2 (i.e., the CMS acts as a Subscription Proxy) and subscribes to the MCPTT group document using the procedure specified in 3GPP TS 24.381 [5]. If these documents have been updated since the current version stored in the MCPTT UE, then the MCPTT UE will receive a SIP NOTIFY request with an XCAP Diff document (see IETF RFC 5875 [11]), in which case the CMC updates its local document copies. Retrieval by the MCPTT UE using the notified HTTPS URI of the MCPTT group document is performed as specified in 3GPP TS 24.381 [5].

[TS 24.484, clause 6.2.2]

The CMC shall send the HTTP request over TLS connection as specified for the HTTP client in the UE in annex A of 3GPP TS 24.382 [6].

[TS 24.484, clause 6.3.1.1]

A CMC shall support subclause 6.1.1 "*Document Management*" of OMA OMA-TS-XDM_Core-V2_1 [2] and subclause 6.3.13.2.2 for subscribing to configuration management documents.

[TS 24.484, clause 6.3.3.2.1]

In order to retrieve a configuration management document, a GC shall send an HTTP GET request with the Request URI that references the document to be updated to the network according to procedures specified in IETF RFC 4825 [14] "*Retrieve a Document*".

[TS 24.484, clause 6.3.3.2.2]

In order to retrieve a configuration management document, a CMC shall perform the procedures in subclause 6.3.3.2.1 specified for GC. The CMC shall set the Request-URI of the HTTP GET request to the "CMSXCAPRootURI" configured as per 3GPP TS 24.383 [4] and include the "auid" as per the appropriate application usage in clause 7.

Subclause 7.5 specifies which configuration management documents can be retrieved from the CMS over the CSC-4 reference point.

[TS 24.484, clause 6.3.13.2.1]

This procedure enables the CMC to subscribe to notification of changes of one or more configuration management documents defined in clause 7.

This procedure enables the MCPTT server to subscribe to notification of changes of the MCPTT service configuration document.

[TS 24.484, clause 6.3.13.2.2]

In order to subscribe to Configuration management document, a CMC shall send an initial SIP SUBSCRIBE request to the network according to the UE originating procedures specified in 3GPP TS 24.229 [22] and IETF RFC 5875 [11]. In the initial SIP SUBSCRIBE request, the CMC:

a) ...

- b) if subscription to multiple documents simultaneously using the subscription proxy function is used:
 - 1) shall include an application/resource-lists+xml MIME body. In the application/resource-lists+xml MIME body, the CMC shall include one <entry> element for each document or element to be subscribed to, such that the "uri" attribute of the <entry> element contains a relative path reference:
 - A) with the base URI being equal to the "CMSXCAPRootURI" configured in the CMC as per 3GPP TS 24.383 [4]; and
 - B) with the "auid" parameter set to the appropriate application usage identifying a configuration management document as described in clause 7;
 - 2) shall set the Request-URI to the configured public service identity for performing subscription proxy function of the CMS;
- c) shall include an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcptt-access-token> element set to the value of the access token received during authentication procedure as described in 3GPP TS 24.382 [6];
- d) if identity hiding is required:
 - shall perform the confidentiality protection procedures and integrity protection procedures defined in 3GPP TS 24.379 [9] for MCPTT client on the application/vnd.3gpp.mcptt-info+xml MIME body and on the application/resource-lists+xml MIME body; and
 - 2) shall include an application/mikey MIME body with the CSK as specified in 3GPP TS 24.379 [9];
- e) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [22]), in a P-Preferred-Service header field according to IETF RFC 6050 [23]; and
- f) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field.

Upon receiving a SIP NOTIFY request associated with a subscription created as result of the sent initial SIP SUBSCRIBE request:

- 1) if identity hiding is required, the CMC shall perform the confidentiality protection procedures and integrity protection procedures defined in 3GPP TS 24.379 [9] for MCPTT client; and
- 2) shall handle the SIP NOTIFY request according to IETF RFC 5875 [11].

[TS 24.481, clauses 6.2.2.2]

In order to address an existing group document defining a group ID known by GC, the GC shall set the Request-URI of an HTTP request to a XCAP URI identifying a group document addressed by a group ID as described in subclause 7.2.10.2, where the group ID is set to the group ID known by GC and where the XCAP root URI is the XCAP root URI configured in the UE.

[TS 24.481, clauses 6.2.3]

The GMC shall send the HTTP request over a TLS connection as specified for the HTTP client in the UE in annex A of 3GPP TS 24.382 [10].

The GMC shall perform the procedures in subclause 6.2.2 specified for GC.

[TS 24.481, clauses 6.3.3.2.1]

In order to retrieve a group document, a GC shall send an HTTP GET request with the Request URI that references the document to be retrieved to the network according to procedures specified in IETF RFC 4825 [22] "*Fetch a Document*".

[TS 24.481, clauses 6.3.3.2.2]

In order to retrieve a group document, a GMC shall perform the procedures in subclause 6.3.3.2.1 specified for GC.

[TS 24.481, clauses 6.3.13.2.1]

In order to subscribe to notification of changes of:

a) one or more MCPTT group documents of MCPTT groups identified by MCPTT group IDs;

•••

a GMC shall send an initial SIP SUBSCRIBE request to the network according to the UE originating procedures specified in 3GPP TS 24.229 [12] and IETF RFC 5875 [13]. In the initial SIP SUBSCRIBE request, the GMC:

- a) shall include an application/resource-lists+xml MIME body. In the application/resource-lists+xml MIME body, the GMC shall include one <entry> element for each document or element to be subscribed to, such that the "uri" attribute of the <entry> element:
 - 1) contains a relative path reference:
 - A) with the base URI being equal to the XCAP root URI configured in the GMC; and
 - B) identifying a group document addressed by a group ID as described in subclause 7.2.10.2 where the group ID is set to the MCPTT group ID; or

•••

- b) shall set the Request-URI to the configured public service identity for performing subscription proxy function of the GMS;
- c) shall include an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcptt-access-token> element set to the value of the access token received during authentication procedure as described in 3GPP TS 24.382 [49];
- d) if identity hiding is required:
 - shall perform the confidentiality protection procedures and integrity protection procedures defined in 3GPP TS 24.379 [5] for MCPTT client on the application/vnd.3gpp.mcptt-info+xml MIME body and on the application/resource-lists+xml MIME body; and
 - 2) shall include an application/mikey MIME body with the CSK as specified in 3GPP TS 24.379 [5];
- e) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [12]), in a P-Preferred-Service header field according to IETF RFC 6050 [14]; and
- f) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field.

Upon receiving a SIP NOTIFY request associated with a subscription created as result of the sent initial SIP SUBSCRIBE request:

- 1) if identity hiding is required, the GMC shall perform the confidentiality protection procedures and integrity protection procedures defined in 3GPP TS 24.379 [5] for MCPTT client; and
- 2) shall handle the SIP NOTIFY request according to IETF RFC 5875 [13].

[TS 24.379, clause 7.2.1]

When the MCPTT client performs SIP registration the MCPTT client shall perform the registration procedures as specified in 3GPP TS 24.229 [4].

The MCPTT client shall include the following media feature tags in the Contact header field of the SIP REGISTER request:

- 1) the g.3gpp.mcptt media feature tag; and
- 2) the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt".

•••

If the MCPTT client, upon performing SIP registration:

- 1) has successfully finished the user authentication procedure as described in 3GPP TS 24.382 [49];
- 2) has an available access-token;
- 3) based on implementation decides to use SIP REGISTER for service authorization; and
- 4) either confidentiality protection is enabled as specified in subclause 6.6.2.3.1 or integrity protection is enabled as specified in subclause 6.6.3.3.1;

then the MCPTT client:

•••

 if confidentiality protection is enabled as specified in subclause 6.6.2.3.1, shall encrypt the received access-token using the client server key (CSK) and shall include in the body of the SIP REGISTER request, an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcptt-access-token> element set to the encrypted access-token, as specified in subclause 6.6.2.3.3;

•••

4) if integrity protection is enabled as specified in subclause 6.6.3.3.1, shall use the CSK to integrity protect the application/vnd.3gpp.mcptt-info+xml MIME body by following the procedures in subclause 6.6.3.3.

[TS 24.379, clause 7.2.1A]

This procedure is only referenced from other procedures.

When populating the SIP PUBLISH request, the MCPTT client shall:

- 1) shall set the Request-URI to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- 2) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9];
- 3) shall set the Event header field to the "poc-settings" value; and
- 4) shall set the Expires header field according to IETF RFC 3903 [37], to 4294967295, if the MCPTT user is not removing the MCPTT service settings, otherwise to remove the MCPTT service settings the MCPTT client shall set the Expires header field to zero.

[TS 24.379, clause 7.2.2]

If based on implementation the MCPTT client decides to use SIP PUBLISH for MCPTT server settings to also perform service authorization and

- 1) has successfully finished the user authentication procedure as described in 3GPP TS 24.382 [49]; and
- 2) has available an access-token;

then the MCPTT client:

- 1) shall perform the procedures in subclause 7.2.1A;
- •••

- 3) if either confidentiality protection is enabled as specified in subclause 6.6.2.3.1 or integrity protection is enabled as specified in subclause 6.6.3.3.1 shall include an application/mikey MIME body with the CSK as MIKEY-SAKKE I_MESSAGE as specified in 3GPP TS 33.179 [46] in the body of the SIP PUBLISH request;
- 4) if confidentiality protection is enabled as specified in subclause 6.6.2.3.1, shall include in the body of the SIP PUBLISH request an application/vnd.3gpp.mcptt-info+xml MIME body with:
 - a) the <mcptt-access-token> element set to the received access-token encrypted using the client server key (CSK), as specified in subclause 6.6.2.3.3; and
 - b) the <mcptt-client-id> element set to the encrypted MCPTT client ID of the originating MCPTT client, as specified in subclause 6.6.2.3.3;

•••

- 6) shall include an application/poc-settings+xml MIME body containing the Answer-Mode Indication setting in the <am-settings> element of the poc-settings event package set to the current answer mode setting ("auto-answer" or "manual-answer") of the MCPTT client according to IETF RFC 4354 [55]; and
- 7) if integrity protection is enabled as specified in subclause 6.6.3.3.1, shall use the CSK to integrity protect the application/vnd.3gpp.mcptt-info+xml MIME body and application/poc-settings+xml MIME body by following the procedures in subclause 6.6.3.3.

The MCPTT client shall send the SIP PUBLISH request according to 3GPP TS 24.229 [4].

[TS 24.379, clause 7.2.3]

To set, update, remove or refresh the MCPTT service settings, the MCPTT client shall generate a SIP PUBLISH request according 3GPP TS 24.229 [4], IETF RFC 3903 [37] and IETF RFC 4354 [55]. In the SIP PUBLISH request, the MCPTT client:

- 1) shall perform the procedures in subclause 7.2.1A;
- 2) if confidentiality protection is enabled as specified in subclause 6.6.2.3.1, shall include in the body of the SIP PUBLISH request, an application/vnd.3gpp.mcptt-info+xml MIME body with:
 - a) the <mcptt-request-uri> element set to the targeted MCPTT ID encrypted using the client server key (CSK), as specified in subclause 6.6.2.3.3; and
 - b) the <mcptt-client-id> element set to the encrypted MCPTT client ID of the originating MCPTT client, as specified in subclause 6.6.2.3.3;

•••

- 4) shall include an application/poc-settings+xml MIME body containing the Answer-Mode Indication setting in the <am-settings> element of the poc-settings event package set to the current answer mode setting ("auto-answer" or "manual-answer") of the MCPTT client according to IETF RFC 4354 [55]; and
- 5) if integrity protection is enabled as specified in subclause 6.6.3.3.1, shall use the CSK to integrity protect the application/vnd.3gpp.mcptt-info+xml MIME body and application/poc-settings+xml MIME body by following the procedures in subclause 6.6.3.3.3.

The MCPTT client shall send the SIP PUBLISH request according to 3GPP TS 24.229 [4].

On receiving the SIP 200 (OK) response to the SIP PUBLISH request the MCPTT client may indicate to the MCPTT User the successful communication of the MCPTT service settings to the MCPTT server.

[TS 33.179, clause 6.2]

The support of Transport Layer Security (TLS) on HTTP-1 is mandatory. The profile for TLS implementation and usage shall follow the provisions given in 3GPP TS 33.310 [5], annex E.

If the PSK TLS based authentication mechanism is supported, the HTTP client in the MCPTT UE and the HTTP Proxy shall support the TLS version, PSK ciphersuites and TLS Extensions as specified in the TLS profile given in 3GPP TS 33.310 [5], annex E. The usage of pre-shared key ciphersuites for TLS is specified in the TLS profile given in 3GPP TS 33.310 [5], annex E.

5.1.3 Test description

5.1.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server).
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10, is inserted.
- The MCPTT Client has been provisioned with the Initial UE Configuration Data as specified in TS 36.579-1 [2], clause 5.5.8.1 allowing for the location of the configuration management server for configuration of the MCPTT UE initial configuration management object (MO) and the default MCPTT user profile configuration management object (MO).
- A single APN (px_MCPTT_ALL_APN, TS 36.579-5 [5]) shall be provided in the Initial UE Configuration Data which the UE shall use to access each and all MCPTT relevant services including the MCPTT SIP-1 reference point, the MC common core services for the HTTP-1 reference point and the MC identity management service for the CSC-1 reference point.
- UE is configured to support the general 3GPP TLS profile as specified in 3GPP TS 33.310 [30] Annex E using pre-shared key (psk) cipher suites with TLS extensions.
- The UE User is provided with username/password for user authentication (px_MCPTT_User_A_username, px_MCPTT_User_A_password as provided in TS 36.579-5 [5], Table 9.2-1: MCPTT Client Common PIXIT)

Preamble:

- The MCPTT client is attached to EPS services and then the UE is Switched OFF (state 1) according to TS 36.508 [24].

5.1.3.2 Test procedure sequence

Table 5.1.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict	
		U - S	Message			
1	The UE is switched-on.	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC related actions which step 1 above will trigger are described in TS 36.579-1 [2], subclause 5.4.2 'Generic Test Procedure for MCPTT UE registration''. The test sequence below shows only the MCPTT relevant messages being exchanged.	-	-	-	-	
2	Make the UE user request MCPTT service authorisation/configuration. NOTE: This is expected to be done via a suitable implementation dependent mechanism and may be manually or	-	-	-	-	
	automatically initiated.					
-	EXCEPTION: Steps 3a1-3b1 describe behaviour that depends on UE implementation of the OpenID Connect protocol; the "lower case letter" identifies a step sequence that take place when one or the other is the case.	-	-	-	-	
3a1	Check: Does the UE (MCPTT client) establish a secure TLS tunnel as specified by 3GPP TS 33.310 [30], to the authorisation endpoint of the IdM server as specified in 3GPP TS 33.179 [15] using the configured URL of the authorisation endpoint of the IdM server as specified in the " <x>/OnNetwork/AppServerInfo/IDMSAuthEnd point" leaf node, Table 5.5.8.1-1, TS 36.579-1 [2]?</x>	-	-	1	Ρ	
3a2	Check: Does the UE (MCPTT client) send an OpenID Connect Authentication Request using HTTP GET?	>	HTTP GET (Authorization)	1	Р	
3b1	Check: Does the UE (MCPTT client) send an OpenID Connect Authentication Request using HTTP POST?	>	HTTP POST (Authorization)	1	Р	
4	The SS sends a HTTP 200 (OK) including the HTML form requesting username and password.	<	HTTP 200 (OK)	-	-	
5	Make the UE user provide user credentials: username and password (px_MCPTT_User_A_username, px_MCPTT_User_A_password). NOTE: The UE is expected to prompt the MCPTT user for their username and password, or it may be stored on the UE. The provision of the username/password is expected to be done via a suitable implementation dependent	-	-	-	-	
6	MMI. Check: Does the UE (MCPTT client) send an HTTP POST Request message to the SS	>	HTTP POST	1	Р	
7	containing user name and password. The SS sends a HTTP 302 (Found) as the OpenID Connect Authentication Response containing an authorization code.	<	HTTP 302 (Found)	-	-	
-	EXCEPTION: Step 8a1 describes behaviour that depends on step 3 above. Step 8a1 only happens if the UE follows step 3b1, otherwise step 8a1 is skipped.	-	-	-	-	

8a1	Check: Does the UE (MCPTT client) establish a secure TLS tunnel as specified by 3GPP TS 33.310 [30] to the token endpoint of the IdM server as specified in 3GPP TS 33.179 [15] using the configured URL of the token endpoint of the IdM server as specified in the	-	-	1	Р
	"/ <x>/OnNetwork/AppServerInfo/IDMSTokenE ndpoint" leaf node, Table 5.5.8.1-1, TS 36.579- 1 [2]?</x>				
9	Check: Does the UE (MCPTT client) send an HTTP POST Request message to the SS over the TLS connection established to the IdM token endpoint (OIDC Token Request message), passing the authorization code obtained in step 7?	-^	HTTP POST	1	Ρ
10	The SS sends a HTTP 200 (OK) providing id_token, access_token and refresh token.	<	HTTP 200 (OK)	-	-
11	Check: Does the UE (MCPTT client) send a	>	HTTP POST	2	Р
	HTTP POST message presenting the access token obtained in step 10 to the SS over HTTP for Key Management Initialisation?				
12	The SS replies to the UE with identity specific key information.	<	HTTP 200 (OK)	-	-
13	Check: Does the UE (MCPTT client) send a HTTP POST message presenting an access token to the SS over HTTP for Key Material Request?	>	HTTP POST	2	Ρ
14	The SS replies to the UE with identity specific key information.	<	HTTP 200 (OK)	-	-
-	EXCEPTION: Steps 15a1 to 15b1 describe behaviour that depends on UE implementation; the "lower case letter" identifies a step sequence that take place	-	-	-	-
15a1	when one or the other is the case. Check: Does the UE (MCPTT client) send a SIP REGISTER request for service authorisation?	>	SIP REGISTER	2	Р
15b1	Check: Does the UE (MCPTT client) send a SIP PUBLISH request for service authorisation?	>	SIP PUBLISH	2	Р
16	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
17	Check: Does the UE (MCPTT client) sends a SIP SUBSCRIBE - subscription to multiple documents simultaneously - to the SS containing the access token and a resource list mime body containing a list of the following documents: MCPTT UE Configuration document, MCPTT User Profile Configuration Document, and the MCPTT Service configuration document. The base URI of each list entry is set to the CMS XCAP-ROOT-URI?	>	SIP SUBSCRIBE	3	Ρ
18	The SS sends a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
19	The SS sends a SIP NOTIFY message to the UE that contains the XCAP-URI of the documents.	<	SIP NOTIFY	-	-
20	The UE (MCPTT client) sends a SIP 200 (OK) message.	>	SIP 200 (OK)	-	-
21	Check: Does the UE (MCPTT client) send an HTTP GET Request message to the SS that contains the access token and the XCAP-URI of the MCPTT UE Configuration document?	>	HTTP GET	4	Р
22	The SS sends the HTTP 200 (OK) message including the MCPTT UE Configuration Document.	<	HTTP 200 (OK)	-	-

23	Check: Does the UE (MCPTT client) send an HTTP GET Request message to the SS that contains the access token and the XCAP-URI of the MCPTT User Profile Configuration Document?	>	HTTP GET	4	Ρ
24	The SS sends the HTTP 200 (OK) message including the MCPTT User Profile Configuration Document.	<	НТТР 200 (ОК)	-	-
25	Check: Does the UE (MCPTT client) send an HTTP GET Request message to the SS that contains the access token and the XCAP-URI of the MCPTT Service Configuration Document?	>	HTTP GET	4	Ρ
26	The SS sends the HTTP 200 (OK) message including the MCPTT Service Configuration Document.	<	HTTP 200 (OK)	-	-
27	Check: does the UE (MCPTT client) send a SIP SUBSCRIBE to the SS, containing the access token and a resource list mime body and a list of the Groups to be obtained. The base URI of each list entry is set to the GMS XCAP-ROOT-URI, and the MCPTT group ID identifies a group document?	>	SIP SUBSCRIBE	5	Ρ
28	The SS sends a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
29	The SS sends a SIP NOTIFY message to the UE that contains the XCAP-URI of the Group documents.	<	SIP NOTIFY	-	-
30	The UE (MCPTT client) sends a SIP 200 (OK) message.	>	SIP 200 (OK)	-	-
31	Check: Does the UE (MCPTT client) send an HTTP GET Request message to the SS that contains the access token and the XCAP-URI of the Group Configuration document?	>	HTTP GET	5	Ρ
32	The SS sends the HTTP 200 (OK) message including the Group Document 'MCPTT UE Configuration document'.	<	HTTP 200 (OK)	-	-
33	Check: Does the UE (MCPTT client) send the SIP PUBLISH message to the SS including the IMPU and Answer-mode indication?	>	SIP PUBLISH	6	Р
34	The SS sends a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

5.1.3.3

Specific message contents

Table 5.1.3.3-1: HTTP GET (Step 3a2, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.2-1, condition AUTH

Table 5.1.3.3-2: HTTP POST (Step 3b1, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.1-1, condition AUTH

Derivation Path: Table 5.5.4.10-	1			
Information Element	Value/remark	Comment	Reference	Condition
Message-body	<pre><!DOCTYPE html> <html> <body> <form action=""> Username: <input name="user" type="text"/> Password: <input name="password" type="password"/></form></body></html></pre>	Comment	Keterence	Condition

Table 5.1.3.3-2A: HTTP 200 (OK) (Step 4, Table 5.1.3.2-1)

Table 5.1.3.3-3: HTTP POST (Step 6, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.1-1, condition USERAUTH

Table 5.1.3.3-4: HTTP 302 (Found) (Step 7, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition AUTH.

Table 5.1.3.3-5: HTTP POST (Step 9, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.1-1, condition TOKEN

Table 5.1.3.3-6: HTTP 200 (OK) (Step 10, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition TOKEN

Table 5.1.3.3-7: HTTP POST (Step 11, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.1-1, condition KMSINIT.

Table 5.1.3.3-8: HTTP 200 (OK) (Step 12, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition KMSINIT.

Table 5.1.3.3-9: HTTP POST (Step 13, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.1-1, condition KMSKEY.

Table 5.1.3.3-10: HTTP 200 (OK) (Step 14, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition KMSKEY.

Table 5.1.3.3-11: SIP REGISTER (Step 15a1, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.13-1, condition CONFIG

Table 5.1.3.3-12: SIP PUBLISH (Step 15b1, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1, condition CONFIG

Table 5.1.3.3-13: SIP SUBSCRIBE (Step 17, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.14-1, condition CONFIG

Table 5.1.3.3-14: SIP NOTIFY (Step 19, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1, condition CONFIG

Table 5.1.3.3-15: HTTP GET (Step 21, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.2-1, condition UECONFIG.

Table 5.1.3.3-16: HTTP GET (Step 23, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.2-1, condition UEUSERPROF.

Table 5.1.3.3-17: HTTP GET (Step 25, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.2-1, condition UESERVCONFIG.

Table 5.1.3.3-18: HTTP 200 (OK) (Step 22, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition UECONFIG.

Table 5.1.3.3-19: HTTP 200 (OK) (Step 24, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition UEUSERPROF.

Table 5.1.3.3-20: HTTP 200 (OK) (Step 26, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition UESERVCONFIG.

Table 5.1.3.3-21: SIP SUBSCRIBE (Step 27, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.14-1, condition GROUPCONFIG					
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 5.2.2.4-21A				

Table 5.3.2.4-21A: MCPTT-INFO in SIP SUBSCRIBE (Table 5.3.2.4-22)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1 condition CONFIG

Table 5.1.3.3-21B: SIP NOTIFY (Step 29, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1, condition GROUPCONFIG

Table 5.1.3.3-22: HTTP GET (Step 31, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.2-1, condition GROUPCONFIG

Table 5.1.3.3-23: HTTP 200 (OK) (Step 32, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.1-1, condition GROUPCONFIG.

Table 5.1.3.3-24: SIP PUBLISH (Step 33, Table 5.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1						
Information Element	Value/remark	Comment	Reference	Condition		
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"		TS 24.379 [9] clause F.1			
MCPTT-Info	As described in Table 5.1.3.3-25					
MIME-Content-Type	"application/poc- settings+xml"					
Answer-Mode						
answer-mode-value	"Auto"					

Table 5.1.3.3-25: MCPTT-Info (Table 5.1.3.3-27)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
mcptt-request-uri	px_MCPTT_User_A_ID	The URI of the MCPTT ID encrypted with the CSK				
mcptt-client-id	px_MCPTT_Client_A_I D	The URI of the MCPTT Client encrypted with the CSK				

Table 5.1.3.3-26: Void

Table 5.1.3.3-27: SIP 200 (OK) (Step 16, 18, 28, 34, Table 5.1.3.2-1))

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not included				

5.2 Configuration / Group Creation / Group Regroup Creation / Group Regroup Teardown

5.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) attached to EPS services }

```
3GPP TS 36.579-2 version 14.3.0 Release 14
```

```
ensure that {
   when { the UE (MCPTT Client) requests formation of a new MCPTT group }
    then { on successful group creation the UE (MCPTT Client) has access to the new group }
   }

(2)
with { UE (MCPTT Client) having access to at least two MCPTT groups }
ensure that {
   when { the UE (MCPTT Client) requests the groups to be combined }
    then { on successful group regrouping the UE (MCPTT Client) has access to the temporary group }
   }

(3)
with { UE (MCPTT Client) having access to a temporary group }
```

```
ensure that {
    when { the UE (MCPTT Client) requests temporary group tear down }
    then { on successful group tear down the UE (MCPTT Client) removes the temporary group }
    }
}
```

5.2.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.481 clauses 6.3.2.2.1, 6.3.2.2.2, 6.3.14.1, 6.3.14.2, 6.3.15.1 and 6.3.15.2; TS 33.179 clauses 7.3.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.481 clause 6.3.2.2.1]

In order to create a group document, a GC shall create an XML document of the application usage specified in subclause 7.2.1 and shall send the XML document to the network according to procedures specified in IETF RFC 4825 [22] "*Create or Replace a Document*". The GC shall set the Request-URI of the HTTP PUT request to an XCAP URI in users' tree where the XUI is set to a group creation XUI configuration parameter.

[TS 24.481 clause 6.3.2.2.2]

In order to create a group document, a GMC shall perform the procedures in subclause 6.3.2.2.1 specified for GC.

[TS 24.481 clause 6.3.14.1]

This procedure enables a GMC to initiate creation of a temporary MCPTT group by combining MCPTT groups.

[TS 24.481 clause 6.3.14.2]

In order to form a temporary MCPTT group, a GMC shall send a HTTP POST request according to procedures specified in IETF RFC 2616 [21] and subclause 6.2.3. In the HTTP POST request, the GMC:

- a) shall set the Request-URI to an XCAP URI:
 - 1) in users tree where the XUI is set to a group creation XUI configuration parameter; and
 - 2) with the document selector identifying the temporary MCPTT group to be created; and
- b) shall include an application/vnd.3gpp.GMOP+xml MIME body containing a GMOP document requesting group regroup creation specified in subclause 7.3.4.3, with a <group> element containing a group document for an MCPTT group. In the group document, the GMC shall include the <on-network-temporary> element according to subclause 7.2. In the <on-network-temporary> element, the GMC shall include <constituent-MCPTT-group-IDs> element according to subclause 7.2. In the <constituent-MCPTT-group-IDs> element, the GMC shall include one <constituent-MCPTT-group-ID> element according to subclause 7.2 for each MCPTT group to be combined.

Upon reception of an HTTP 2xx response to the sent HTTP POST request, the GMC shall consider the temporary MCPTT group formation as successful.

Upon reception of an HTTP 409 (Conflict) response with at least one <alt-value> element in the <uniqueness-failure> error element, the GMC may repeat procedures of the present subclause and identify the temporary MCPTT group being formed with an MCPTT Group ID indicated in an <alt-value> element.

[TS 24.481 clause 6.3.15.1] This procedure enables a GMC to initiate tear down of a temporary MCPTT group.

[TS 24.481 clause 6.3.15.2]

In order to tear down a temporary MCPTT group, the GMC shall send an HTTP DELETE request with Request-URI with an XCAP URI identifying a group document of the temporary MCPTT group according to procedures specified in IETF RFC 4825 [22] "*Delete an Element*".

[TS 33.179 clause 7.3.4]

Group creation procedure is described in clause 10.4.3 of 3GPP TS 23.179 [2]. To create the security context for the group, the GMS follows the procedures in clause 7.3.1, creating a new GMK and GMK-ID for the temporary group.

An encapsulated GMK and GUK-ID is sent to group members by the GMS within a notification message (step 4 within clause 10.4.3 of 3GPP TS 23.179 [2]). The procedure is equivalent to that described in clause 7.3.2.

- 5.2.3 Test description
- 5.2.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- E-UTRA related parameters are set to the default parameters for the basic single cell environment, as defined in TS 36.508 [6] clause 4.4.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10, is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

5.2.3.2 Test procedure sequence

Table 5.2.3.2-1: Main behaviour

St	Procedure		Message Sequence		Verdict	
		U - S	Message			
1	Make the UE user select the default MCPTT	-	-	-	-	
	Group A.					
	NOTE 1: This is expected to be done via a					
	suitable implementation dependent					
	mechanism and may be manually or					
	automatically initiated.					
-	EXCEPTION: The E-UTRA/EPC related actions which step 1 above will trigger are	-	-	-	-	
	described in TS 36.579-1 [2], subclause 5.4.3					
	'Generic Test Procedure for MCPTT CO					
	communication in E-UTRA'. The test sequence					
	below shows only the MCPTT relevant					
2	messages being exchanged. Make the UE user request the creation of a	-	-	-	-	
2	new group, MCPTT Group B, for	_	-	_		
	communication with the user and two other					
	users, MCPTT Client B and MCPTT Client C.					
	NOTE 1. This is expected to be done via a					
	NOTE 1: This is expected to be done via a suitable implementation dependent					
	mechanism and may be manually or					
	automatically initiated.					
3	Check: Does the UE (MCPTT Client) send a	>	HTTP PUT	(1)	Р	
	HTTP PUT to the SS to request creation of the new group?					
4	The SS sends a SIP NOTIFY informing that		SIP NOTIFY	-	-	
•	the new group has been created and supplies	<				
	the group configuration data.					
5	The UE sends a SIP 200 (OK) message to the SS.	>	SIP 200 (OK)	-	-	
6	The SS (MCPTT Server) sends a HTTP 201	<	HTTP 201 (Created)	-	-	
Ũ	(Created) containing the new group identifier.					
7	Check: Does the UE (MCPTT client) notify the	-	-	(1)	Р	
	user that the MCPTT User is now part of					
	Group C?					
	NOTE 2: This is expected to be done via a					
	suitable implementation dependent MMI.					
8	Make the UE user request the creation of a	-	-	-	-	
	new group, MCPTT Group C, for communication with the user and two other					
	users, MCPTT Client B and MCPTT Client C.					
	NOTE 1: This is expected to be done via a					
	suitable implementation dependent mechanism and may be manually or					
	automatically initiated.					
9	The UE (MCPTT Client) sends a HTTP PUT to	>	HTTP PUT	-	-	
	the SS to request creation of the new group.					
10	The SS sends a SIP NOTIFY informing that		SIP NOTIFY	-	-	
	the new group has been created and supplies the group configuration data.	<				
11	The UE sends a SIP 200 (OK) message to the	>	SIP 200 (OK)	-	-	
	SS.					
12	The SS (MCPTT Server) sends a HTTP 201	<	HTTP 201 (Created)	-	-	
	(Created) containing the new group identifier.					

	· · · · · · · · · · · · · · · · · · ·	1		1	1
13	Make the UE user request the creation of a	-	-	-	-
	temporary group formed from MCPTT Group B				
	and MCPTT Group C to communicate with				
	itself and MCPTT Client B and MCPTT Client				
	C.				
	NOTE 1: This is expected to be done via a				
	suitable implementation dependent				
	mechanism and may be manually or				
	automatically initiated.				
14	Check: Does the UE (MCPTT Client) send a	>	HTTP POST	(2)	Р
	HTTP POST to the SS to request creation of				
	the new temporary group?				
15	The SS (MCPTT Server) sends a HTTP 409	<	HTTP 409 (Conflict)	-	-
	(Conflict).				
16	Check: Does the UE (MCPTT Client) send a	>	HTTP POST	(2)	Р
	HTTP POST to the SS to request creation of				
	the new temporary group?				
17	The SS sends a SIP NOTIFY informing that		SIP NOTIFY	-	-
	the new group has been created and supplies	<			
	the group configuration data.				
18	The UE sends a SIP 200 (OK) message to the	>	SIP 200 (OK)	-	-
	SS.				
19	The SS (MCPTT Server) sends a HTTP 200	<	HTTP 200 (OK)	-	-
	(OK).				
20	Check: Does the UE (MCPTT client) notify the	-	-	(2)	Р
	user that the MCPTT User is now part of a			. ,	
	temporary group?				
	NOTE 2: This is expected to be done via a				
	suitable implementation dependent MMI.				
21	Make the UE user request tear down of the	-	-	-	-
	temporary group.				
	NOTE 1: This is expected to be done via a				
	suitable implementation dependent				
	mechanism and may be manually or				
	automatically initiated.				
22	Check: Does the UE (MCPTT Client) send a	>	HTTP DELETE	(3)	Р
	HTTP DELETE to the SS to request tear down				
	of the temporary group?				
23	The SS sends a SIP NOTIFY informing that		SIP NOTIFY	-	-
	the temporary group has been removed.	<			
24	The UE sends a SIP 200 (OK) message to the	>	SIP 200 (OK)	-	-
	SS.				
25	The SS (MCPTT Server) sends a HTTP 200	<	HTTP 200 (OK)	-	-
	(OK) indicating group tear down completed.				
26	Check: Does the UE (MCPTT client) notify the	-	-	(3)	Р
	user that the MCPTT User is no longer part of			(-)	
	the temporary group?				
	1 7 5 - 1				
	NOTE 2: This is expected to be done via a				
	suitable implementation dependent MMI.				
NOT	E 1: This is expected to be done via a suitable imp	lemental	ion dependent mechanism and may	be man	ually or
	automatically initiated.		,		
NOTE	E 2: This is expected to be done via a suitable imp	lementat	ion dependent MMI.		

5.2.3.3

Specific message contents

Table 5.2.3.3-1: HTTP PUT (Step 3, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.4-1, condition GROUPCONFIG

Table 5.2.3.3-2: HTTP PUT (Step 9, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.4-1, condition GROUPCONFIG

Table 5.2.3.3-3: SIP NOTIFY (Step 4, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type	"application/mikey"				
mikey	As described in Table 5.2.3.3-5	MIKEY message, containing the GMK	TS 33.179 [15]		
MCPTT-Info				GROUP- CALL	
mcptt-Params					
mcptt-calling-group-id	px_MCPTT_Group_B_I D	Group identifier	TS 24.481 [11]		

Table 5.2.3.3-4: SIP NOTIFY (Step 10, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1				
Information Element	Value/remark	Comment	Reference	Condition
Message-body				
MIME-Content-Type	"application/mikey"			
mikey	As described in Table 5.2.3.3-6	MIKEY message, containing the GMK	TS 33.179 [15]	
MCPTT-Info				GROUP- CALL
mcptt-Params				
mcptt-calling-group-id	px_MCPTT_Group_C_I D	Group identifier	TS 24.481 [11]	

Table 5.2.3.3-5: MIKEY-SAKKE I_MESSAGE (Step 4, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.9.1-1				
Information Element	Value/remark	Comment	Reference	Condition
General Extension payload				
MCPTT Group ID	px_MCPTT_Group_B_I D	Group identifier	TS 33.179 [15]	

Table 5.2.3.3-6: MIKEY-SAKKE I_MESSAGE (Step 10, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.9.1-1				
Information Element	Value/remark	Comment	Reference	Condition
General Extension payload				
MCPTT Group ID	px_MCPTT_Group_C_I D	Group identifier	TS 33.179 [15]	

Table 5.2.3.3-7: HTTP 201 (Created) (Step 6, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.7-1, condition GROUPCONFIG NOTE: ue-group-configuration is as specified in TS 36.579-1 [2], Table 5.5.7.1-1 with MCPTTGroupID specified as px_MCPTT_Group_B_ID

Table 5.2.3.3-8: HTTP 201 (Created) (Step 12, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.7-1, condition GROUPCONFIG
NOTE: ue-group-configuration is as specified in TS 36.579-1 [2], Table 5.5.7.1-1 with MCPTTGroupID specified as
px_MCPTT_Group_C_ID

Table 5.2.3.3-9: HTTP POST (Step 14 & 16, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2				
Information Element	Value/remark	Comment	Reference	Condition
Request-line				
Method	"POST"			
Request-URI	px_MCPTT_XCAP_Gro	Points to the group	TS 24.481 [11]	
	up_Config_URI	configuration document		
Content-Type	application/vnd.3gpp.G			
	MOP+xml;			
	charset="utf-8			
Message-body				
gmop:document				
xmlns	"urn:oma:xml:poc:list-	list-service xml	TS 24.481 [11]	
	service"	namespace identifier		
xmlns:rl	"urn:ietf:params:xml:ns:	resource-lists xml	TS 24.481 [11]	
	resource-lists"	namespace identifier		
xmlns:cp	"urn:ietf:params:xml:ns:	common-policy xml	TS 24.481 [11]	
	common-policy"	namespace identifier		
xmlns:ocp	"urn:oma:xml:xdm:com	common-policy xml	TS 24.481 [11]	
-	mon-policy"	namespace identifier		
xmlns:oxe	"urn:oma:xml:xdm:exte	extensions xml	TS 24.481 [11]	
	nsions"	namespace identifier		
xmlns:rmcpttgi	"urn:3gpp:ns:mcpttGrou	MCPTT group info	TS 24.481 [11]	
	pInfo:1.0"	namespace identifier		
xmlns:gmop	"urn:3gpp:ns:mcpttGM OP:1.0"			
gmop:request				
group				
list-service				
uri	temp group uri	uri of the temporary MCPTT group	TS 24.481 [11]	A1, A2
invite-members	"true"	Allow users to invite	TS 24.481 [11]	
		members to this group		
supported-services				
service-enabler	"urn:urn-7:3gpp-			
	service.ims.icsi.mcptt"			
MCPTT-group-IDs	•			
mcptt-group-id	px_MCPTT_Group_B_I	uri of the group to be	TS 24.481 [11]	
	D	part of the temporary group		
mcptt-group-ld	px_MCPTT_Group_C_I	uri of the group to be	TS 24.481 [11]	
	D	part of the temporary		
		group		

Condition	Explanation
A1	temp group uri equals "mcptt-group-T@mcptt-op.err" in Step 14
A2	temp group uri equals px_MCPTT_Group_T_ID in Step 16

Table 5.2.3.3-10: HTTP 409 (Conflict) (Step 15, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.9-1

Derivation Path: TS 36.579-1 [2],	Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1						
Information Element	Value/remark	Comment	Reference	Condition			
Message-body							
MIME-Content-Type	"application/mikey"						
mikey	As described in Table 5.2.3.3-11	MIKEY message, containing the GMK	TS 33.179 [15]				
MCPTT-Info				GROUP- CALL			
mcptt-Params							
mcptt-calling-group-id	px_MCPTT_Group_T_I D	Group identifier	TS 24.481 [11]				

Table 5.2.3.3-11: SIP NOTIFY (Step 17, Table 5.2.3.2-1)

Table 5.2.3.3-12: MIKEY-SAKKE I_MESSAGE (Step 4, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.9.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
General Extension payload					
MCPTT Group ID	px_MCPTT_Group_T_I D	Group identifier	TS 33.179 [15]		

Table 5.2.3.3-13: HTTP 200 (OK) (Step 19, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.10-1, condition GROUPCONFIG NOTE: ue-group-configuration is as specified in TS 36.579-1 [2], Table 5.5.7.1-1 with MCPTTGroupID specified as px_MCPTT_Group_T_ID.

Table 5.2.3.3-14: HTTP DELETE (Step 22, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.4.5-1, condition GROUPCONFIG

Table 5.2.3.3-15: SIP NOTIFY (Step 23, Table 5.2.3.2-1)

Derivation Path: TS 36.579-1 [2],	Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1					
Information Element	Value/remark	Comment	Reference	Condition		
Message-body						
MIME-Content-Type	"application/mikey"					
mikey	As described in Table 5.2.3.3-3 and 5.2.3.3-4	MIKEY message, containing the GMK	TS 33.179 [15]			
MCPTT-Info				GROUP- CALL		
mcptt-Params						
mcptt-calling-group-id	px_MCPTT_Group_T_I D	Group identifier	TS 24.481 [11]			

5.3 Configuration / Group Affiliation / Remote change / Deaffiliation / Home MCPTT system

5.3.1 Test Purpose (TP)

(1)

with { MCPTT Client already provisioned with the group information or a pointer to the group information, that the MCPTT Client is allowed to be affiliated } ensure that {

when { MCPTT User requests for current affiliation status and to subscribe to affiliation status changes for the MCPTT User }

then { UE (MCPTT Client) requests to subscribe to affiliation status changes for the MCPTT User by sending the SS a SIP SUBSCRIBE message and starts informing the MCPTT User of any affiliation status changes for the MCPTT User after the subscription is accepted } }

(2)

with { MCPTT Client already provisioned with the group information or a pointer to the group
information, that the MCPTT Client is allowed to be affiliated }
ensure that {
 when { MCPTT User requests to affiliate to an MCPTT group }
 then { UE (MCPTT Client) requests to affiliate to a MCPTT group by sending the SS a SIP PUBLISH
message }

(3)

}

}

}

with { MCPTT Client already provisioned with the group information or a pointer to the group information, that the MCPTT Client is allowed to be affiliated } ensure that {

when { MCPTT User requests for current affiliation status and to subscribe to affiliation status changes for a target user }

then { UE (MCPTT Client) requests to subscribe to affiliation status changes for the target user by sending the SS a SIP SUBSCRIBE message and starts informing the MCPTT User of any affiliation status changes for the target user after the subscription is accepted }

(4)

with { MCPTT client already provisioned with the group information or a pointer to the group
information that the MCPTT client is allowed to make affiliation changes for another user }
ensure that {
 when { MCPTT User requests that a target user be affiliated to an MCPTT group via mandatory mode }
 then { UE (MCPTT Client) requests that a target user be affiliated to an MCPTT group via
 mandatory mode by sending the SS a SIP PUBLISH message }

(5)

with { MCPTT client already provisioned with the group information or a pointer to the group information that the MCPTT client is allowed to make affiliation changes for another user } ensure that {

when { MCPTT User requests that a target user be de-affiliated to an MCPTT group via mandatory mode }

then { UE (MCPTT Client) requests that a target user be de-affiliated to an MCPTT group via
mandatory mode by sending the SS a SIP PUBLISH message }
}

(6)

with { MCPTT client already provisioned with the group information or a pointer to the group information that the MCPTT client is allowed to make affiliation changes for another user } ensure that {

when { MCPTT User requests that a target user be affiliated to an MCPTT group via negotiated mode }

then { UE (MCPTT Client) requests that a target user be affiliated to an MCPTT group via negotiated mode by sending the SS a SIP MESSAGE message }
}

(7)

with { MCPTT Client already provisioned with the group information or a pointer to the group information, that the MCPTT Client is allowed to be affiliated } ensure that {

when { MCPTT User requests to de-subscribe to affiliation status changes for a target user }
 then { UE (MCPTT Client) requests to de-subscribe to affiliation status changes for a target
 user by sending the SS a SIP SUBSCRIBE message }
 }
}

(8)

with { MCPTT Client already affiliated with a MCPTT group }

,

}

Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 9.2.1.2, 9.2.1.3, 9.2.1.4, and 9.2.1.5. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 9.2.1.2]

In order:

5.3.2

- to indicate that an MCPTT user is interested in one or more MCPTT group(s) at an MCPTT client;
- to indicate that the MCPTT user is no longer interested in one or more MCPTT group(s) at the MCPTT client;
- to refresh indication of an MCPTT user interest in one or more MCPTT group(s) at an MCPTT client due to near expiration of the expiration time of an MCPTT group with the affiliation status set to the "affiliated" state received in a SIP NOTIFY request in subclause 9.2.1.3;
- to send an affiliation status change request in mandatory mode to another MCPTT user; or
- any combination of the above;

the MCPTT client shall generate a SIP PUBLISH request according to 3GPP TS 24.229 [4], IETF RFC 3903 [37], and IETF RFC 3856 [51].

In the SIP PUBLISH request, the MCPTT client:

- 1) shall set the Request-URI to the public service identity identifying the originating participating MCPTT function serving the MCPTT user;
- shall include an application/vnd.3gpp.mcptt-info+xml MIME body. In the application/vnd.3gpp.mcptt-info+xml MIME body, the MCPTT client shall include the <mcptt-request-uri> element set to the MCPTT ID of the MCPTT user;
- 3) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9];
- 4) if the targeted MCPTT user is interested in at least one MCPTT group at the targeted MCPTT client, shall set the Expires header field according to IETF RFC 3903 [37], to 4294967295;

NOTE 1: 4294967295, which is equal to 2³²-1, is the highest value defined for Expires header field in IETF RFC 3261 [24].

- 5) if the targeted MCPTT user is no longer interested in any MCPTT group at the targeted MCPTT client, shall set the Expires header field according to IETF RFC 3903 [37], to zero; and
- 6) shall include an application/pidf+xml MIME body indicating per-user affiliation information according to subclause 9.3.1. In the MIME body, the MCPTT client:
 - a) shall include all MCPTT groups where the targeted MCPTT user indicates its interest at the targeted MCPTT client;

- b) shall include the MCPTT client ID of the targeted MCPTT client;
- c) shall not include the "status" attribute and the "expires" attribute in the <affiliation> element; and
- d) shall set the <p-id> child element of the <presence> root element to a globally unique value.

The MCPTT client shall send the SIP PUBLISH request according to 3GPP TS 24.229 [4].

[TS 24.379, clause 9.2.1.3]

NOTE 1: The MCPTT UE also uses this procedure to determine which MCPTT groups the MCPTT user successfully affiliated to.

In order to discover MCPTT groups:

- 1) which the MCPTT user at an MCPTT client is affiliated to; or
- 2) which another MCPTT user is affiliated to;

the MCPTT client shall generate an initial SIP SUBSCRIBE request according to 3GPP TS 24.229 [4], IETF RFC 3856 [51], and IETF RFC 6665 [27].

In the SIP SUBSCRIBE request, the MCPTT client:

- 1) shall set the Request-URI to the public service identity identifying the originating participating MCPTT function serving the MCPTT user;
- shall include an application/vnd.3gpp.mcptt-info+xml MIME body. In the application/vnd.3gpp.mcptt-info+xml MIME body, the MCPTT client shall include the <mcptt-request-uri> element set to the MCPTT ID of the targeted MCPTT user;
- 3) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9];
- 4) if the MCPTT client wants to receive the current status and later notification, shall set the Expires header field according to IETF RFC 6665 [26], to 4294967295;
- NOTE 2: 4294967295, which is equal to 2³²-1, is the highest value defined for Expires header field in IETF RFC 3261 [24].
- 5) if the MCPTT client wants to fetch the current state only, shall set the Expires header field according to IETF RFC 6665 [26], to zero; and
- 6) shall include an Accept header field containing the application/pidf+xml MIME type; and
- if requesting MCPTT groups where the MCPTT user is affiliated to at the MCPTT client, shall include an application/simple-filter+xml MIME body indicating per client restrictions of presence event package notification information according to subclause 9.3.2.

In order to re-subscribe or de-subscribe, the MCPTT client shall generate an in-dialog SIP SUBSCRIBE request according to 3GPP TS 24.229 [4], IETF RFC 3856 [51], and IETF RFC 6665 [26]. In the SIP SUBSCRIBE request, the MCPTT client:

- 1) if the MCPTT client wants to receive the current status and later notification, shall set the Expires header field according to IETF RFC 6665 [26], to 4294967295;
- NOTE 3: 4294967295, which is equal to 2³²-1, is the highest value defined for Expires header field in IETF RFC 3261 [24].
- 2) if the MCPTT client wants to de-subscribe, shall set the Expires header field according to IETF RFC 6665 [26], to zero; and
- 3) shall include an Accept header field containing the application/pidf+xml MIME type.

Upon receiving a SIP NOTIFY request according to 3GPP TS 24.229 [4], IETF RFC 3856 [51], and IETF RFC 6665 [26], if SIP NOTIFY request contains an application/pidf+xml MIME body indicating per-user affiliation information constructed according to subclause 9.3.1, then the MCPTT client shall determine affiliation

status of the MCPTT user for each MCPTT group at the MCPTT client(s) in the MIME body. If the <p-id> child element of the <presence> root element of the application/pidf+xml MIME body of the SIP NOTIFY request is included, the <p-id> element value indicates the SIP PUBLISH request which triggered sending of the SIP NOTIFY request.

[TS 24.379, clause 9.2.1.4]

NOTE: Procedure for sending affiliation status change request in negotiated mode to several target MCPTT users is not supported in this version of the specification.

Upon receiving a request from the MCPTT user to send an affiliation status change request in negotiated mode to a target MCPTT user, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33]. In the SIP MESSAGE request, the MCPTT client:

- 1) shall set the Request-URI to the public service identity identifying the originating participating MCPTT function serving the MCPTT user;
- shall include an application/vnd.3gpp.mcptt-info+xml MIME body. In the application/vnd.3gpp.mcptt-info+xml MIME body, the MCPTT client shall include the <mcptt-request-uri> element set to the MCPTT ID of the target MCPTT user;
- 3) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP MESSAGE request;
- 4) shall include an application/vnd.3gpp.mcptt-affiliation-command+xml MIME body as specified in Annex F.4; and
- 5) shall send the SIP MESSAGE request according to rules and procedures of 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP MESSAGE request, the MCPTT client shall indicate to the user that the request has been delivered to an MCPTT client of the target MCPTT user.

[TS 24.379, clause 9.2.1.5]

Upon receiving a SIP MESSAGE request containing:

- 1) the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Asserted-Service header field according to IETF RFC 6050 [9]; and
- an application/vnd.3gpp.mcptt-affiliation-command+xml MIME body with a list of MCPTT groups for affiliation under the <affiliate> element and a list of MCPTT groups for de-affiliation under the <de-affiliate> element;

then the MCPTT client:

- 1) shall send a 200 (OK) response to the SIP MESSAGE request;
- shall seek confirmation of the list of MCPTT groups for affiliation and the list of MCPTT groups for deaffiliation, resulting in an accepted list of MCPTT groups for affiliation and an accepted list of MCPTT groups for de-affiliation; and
- 3) if the user accepts the request:
 - a) shall perform affiliation for each entry in the accepted list of MCPTT groups for affiliation for which the MCPTT client is not affiliated, as specified in subclause 9.2.1.2; and
 - b) shall perform de-affiliation for each entry in the accepted list of MCPTT groups for de-affiliation for which the MCPTT client is affiliated, as specified in subclause 9.2.1.2.

5.3.3 Test description

5.3.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble:
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

5.3.3.2 Test procedure sequence

Table 5.3.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User send a request to discover which groups the MCPTT User is affiliated to and to subscribe to affiliation status changes for the MCPTT User. NOTE: This is expected to be done via a	-	-	-	-
-	suitable implementation dependent MMI. EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message to subscribe to its own affiliation status changes?	>	SIP SUBSCRIBE	1	Р
3	The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
4	The SS sends a SIP NOTIFY informing that the affiliation status of the MCPTT USER with GROUP A is "affiliated", but no other group is "affiliated"	<	SIP NOTIFY	-	-
5	Make the MCPTT User send a request to affiliate to a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
6	Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to affiliate with GROUP D?	>	SIP PUBLISH	2	P
7	The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
8	The SS sends a SIP NOTIFY informing that the affiliation status of the MCPTT USER with GROUP D is "affiliating"	<	SIP NOTIFY	-	-
9	The SS sends a SIP NOTIFY informing that the affiliation status of the MCPTT USER with GROUP D is "affiliated"	<	SIP NOTIFY	-	-
10	Check: Does the UE (MCPTT client) notify the user that the MCPTT User is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р
11	Make the MCPTT User send a request to discover which groups a target user is affiliated to and to subscribe to affiliation status changes for that target user. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
12	Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message to subscribe to affiliation status changes of a target user?	>	SIP SUBSCRIBE	3	Р
13	The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
14	Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (mandatory mode). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
15	Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to have to target user affiliate with GROUP D?	>	SIP PUBLISH	4	Р
16	The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
17	The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliating"	<	SIP NOTIFY	-	-

18 The SS sends SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - - - 19 Check Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - - 20 Make the MCPTT User send a request to have a stuzble implementation dependent MM. - - - - 21 Check Does the UE (MCPTT Client) send a sutzble implementation dependent MM. - - - - 21 Check Does the UE (MCPTT Client) send a sutzble implementation dependent MM. - - - - 21 The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message. - SIP PUBLISH - - 23 The SS sends a SIP NOTFY informing that the affiliator with GROUP D? - - - - 24 Check Does the UE (MCPTT Glient) notify the user that the target user is now de-affiliated with GROUP D? - - - - 25 Make the MCPTT User send a request to have a stutzble implementation dependent MM. - - - - 26 Check Does the UE (MCPTT Glient) notify the user that the target user with GROUP D (nogoitated node). -> SIP MOTIFY<				•		
GROUP D is "affiliated" - <td>18</td> <td>The SS sends a SIP NOTIFY informing that</td> <td></td> <td>SIP NOTIFY</td> <td>-</td> <td>-</td>	18	The SS sends a SIP NOTIFY informing that		SIP NOTIFY	-	-
19 Check: Does the UE (MCPTT client) notify the values of the the target user is now affiliated with GRUP D? 3 P 20 Make the MCPTI User is now affiliated with GRUP D? - - - 21 Make the MCPTI User send a request to have a suitable implementation dependent MM. - - - 21 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MM. - - - - 21 The SS repends to the SIP PUBLISH end-affiliate with GROUP D? - - - - - 22 The SS sends a SIP ADO (DK) message. <-		the affiliation status of the target user with	<			
19 Check: Does the UE (MCPTT client) notify the values of the the target user is now affiliated with GRUP D? 3 P 20 Make the MCPTI User is now affiliated with GRUP D? - - - 21 Make the MCPTI User send a request to have a suitable implementation dependent MM. - - - 21 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MM. - - - - 21 The SS repends to the SIP PUBLISH end-affiliate with GROUP D? - - - - - 22 The SS sends a SIP ADO (DK) message. <-						
user that the target user is now affiliated with GROUP D? Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation dependent MMI. Image: Sequence of the done via a suitable implementation	19		-	_	3	P
GROUP D7 . NOTE: This is expected to be done via a suitable implementation dependent MMI. .	10				J	•
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 20 Make the MCPTT User send a request to have a target user de-affiliate to a MCPTT group, GROUP D(mandatory mode). - - - 21 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 22 The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message. - SIP 200 (OK) - - 23 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with cROUP D Is "disaffiliating" - SIP NOTIFY - - 24 Check: Does the UE (MCPTT Client) notify the user that the target user is now de-affiliated with GROUP D via negotiated mode). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - - 26 Check: Does the UE (MCPTT Client) notify the user that the target user sing with a SIP to the SIP MCSAGE -						
suitable implementation dependent MMI. - - - - 20 Meke the MCPTT users end a request to have a target user de-affiliate to a MCPTT group, GROUP D/mandatory mode). - - - - - 80 suitable implementation dependent MMI. - - SIP PUBLISH 5 P 21 Thes Sresponds to the SIP PUBLISH message with a SIP 200 (DK) message. SIP PUBLISH 5 P 23 Thes Sresponds to the SIP PUBLISH ediliation status of the target user with GROUP D is 'disaffiliation' SIP NOTIFY - - 24 Check: Does the UE (MCPTT client) notify the user that the target user is now de-affiliate with GROUP D is 'disaffiliation' -						
20 Make the MCPTT User send a request to have a suitable implementation dependent MMI. -						
a target user de-affiliate to a MCPTT group, GROUP Dimandatory mode). SIP PUBLISH - 21 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to have the target user de-affiliate with GROUP 0? SIP PUBLISH 5 P 21 The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message. SIP PUBLISH - - 23 The SS sends a SIP NOTIFY informing that the affiliation status of the target user in now de-affiliated with GROUP DP - - - 24 Check: Does the UE (MCPTT client) notify the user that the target user is now de-affiliated with GROUP DP - - - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negoriated mode). - - - - 26 GRedue SAGE <-						
a target user de-affiliate to a MCPTT group, GROUP Dimandatory mode). SIP PUBLISH - 21 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to have the target user de-affiliate with GROUP 0? SIP PUBLISH 5 P 21 The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message. SIP PUBLISH - - 23 The SS sends a SIP NOTIFY informing that the affiliation status of the target user in now de-affiliated with GROUP DP - - - 24 Check: Does the UE (MCPTT client) notify the user that the target user is now de-affiliated with GROUP DP - - - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negoriated mode). - - - - 26 GRedue SAGE <-	20	Make the MCPTT User send a request to have	-	-	-	-
GROUP D(mandatory mode). NOTE: This is expected to be done via a suitable implementation dependent MMI.						
NOTE: This is expected to be done via a suitable implementation dependent MMI.						
suitable implementation dependent MMI.						
21 Check: Does the UE (MCPTT Client) send a Gamma and target user de-affiliate with GROUP D?						
SIP PUBLISH message to have the target user deadfiliate with GROUP D? SIP 200 (OK) - 22 The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message. - SIP 200 (OK) - 23 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "disafiliating" - SIP 200 (OK) - - 24 Check: Does the UE (MCPTT client) notify the user that the target user is now deadlinet with GROUP D? - - - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negotiated mode). - - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. - SIP MESSAGE 6 P 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - - - - 29 The SS sends a SIP NOTIFY informing that the affiliaton status of the target user with GROUP D is "affiliated" - - - - - 30 Check: Does the UE (MCPTT Client) notify the user that the target user. NOTE: Th						
de-affiliate with GROUP D?	21		>	SIP PUBLISH	5	Р
22 The SS responds to the SIP PUBLISH <		SIP PUBLISH message to have the target user				
22 The SS responds to the SIP PUBLISH <						
message with a SIP 200 (OK) message. < 23 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "disafiliating" <	22			SIP 200 (OK)		-
23 The SS sends a SIP NOTIFY informing that the affiliaton status of the target user with GROUP D is "disaffiliating" - <	~~		<	011 200 (010)		
the affiliation status of the target user with GROUP D is "disaffiliated"						
GROUP D is 'disafiliating' - 24 Check: Does the UE (MCPTT client) notify the user that the target user is now de-affiliated with GROUP D? - - 3 P 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D is explaited mode). - - - - - - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - <td>23</td> <td></td> <td></td> <td>SIPNOTIFY</td> <td>-</td> <td>-</td>	23			SIPNOTIFY	-	-
24 Check: Does the UE (MCPTT client) notify the with GROUP D? -<			<			
24 Check: Does the UE (MCPTT client) notify the with GROUP D? -<		GROUP D is "disaffiliating"				
user that the target user is now de-affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negotiated mode). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. > SIP MESSAGE 6 P 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. > SIP 200 (OK) - - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D is "affiliated" - - - - 31 Make the MCPTT User send a request to de- subtable implementation dependent MMI. - - - - 32 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. > SIP SUBSCRIBE 7 P <td>24</td> <td></td> <td>-</td> <td>-</td> <td>3</td> <td>Р</td>	24		-	-	3	Р
with GROUP D ⁷ NOTE: This is expected to be done via a suitable implementation dependent MMI. - </td <td></td> <td></td> <td></td> <td></td> <td>Ĭ</td> <td>•</td>					Ĭ	•
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negotiated mode). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - SIP MESSAGE 6 P 27 The SS responds to the SIP MESSAGE message to have a target user affiliate with GROUP D via negotiated mode? - SIP 200 (OK) - - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - SIP NOTIFY - - - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - SIP NOTIFY - <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td></t<>						
suitable implementation dependent MMI. - - 25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negotiated mode). -						
25 Make the MCPTT User send a request to have a target user affiliate to a MCPTT group, GROUP D (negotiated mode). NOTE: This is expected to be done via a suitable implementation dependent MMI. -<						
a target user affiliate to a MCPTT group, GROUP D (negotiated mode).						
a target user affiliate to a MCPTT group, GROUP D (negotiated mode).	25	Make the MCPTT User send a request to have	-	-	-	-
GROUP D (negotiated mode). NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP MESSAGE 6 P 26 Check: Does the UE (MCPTT Client) send a SIP MESSAGE message to have a target user affiliate with GROUP D via negotiated mode? > SIP MESSAGE 6 P 27 The SS responds to the SIP MESSAGE message with as IP 200 (OK) message. <						
NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP MESSAGE 6 P 26 Check: Does the UE (MCPTT Client) send a SIP MESSAGE message to have a target user affiliate with GROUP D via negotiated mode? > SIP MESSAGE 6 P 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. > SIP NOTIFY - - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
suitable implementation dependent MMI.						
26 Check: Does the UE (MCPTT Client) send a SIP MESSAGE message to have a target user affiliate with GROUP D via negotiated mode? > SIP MESSAGE 6 P 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. > SIP 200 (OK) - - 28 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. > SIP 200 (OK) - - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - - 31 Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. - - - - 32 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - - 33 The SS responds to the SIP SUBSCRIBE message with the SIP SUBSCRIBE message with the SIP SUBSCRIBE message with the SIP SUBSCRIBE message with the SUP SUBSCRIBE message with the SUP SUBSCRIBE message with the SUP SUBSCRIBE message with the SUP SUBSCRIBE message with the SIP SUBSCRIBE me						
SIP MESSAGE message to have a target user affiliate with GROUP D via negotiated mode? SIP 200 (OK) - 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. - SIP 200 (OK) - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliating" SIP NOTIFY - - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - - 31 Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. - - - - 32 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. - - - - 33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. - - - - 34 Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI.						
affiliate with GROUP D'via negotiated mode? - 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliating" SIP NOTIFY - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - 31 Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. - - - - 32 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 32 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. - - - - 34 Make the MCPTT User send a request to de- afiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 33 The SS responds to the SIP S	26	Check: Does the UE (MCPTT Client) send a	>	SIP MESSAGE	6	Р
affiliate with GROUP D'via negotiated mode? - 27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliating" SIP NOTIFY - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - 31 Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. - - - - 32 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 32 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. - - - - 34 Make the MCPTT User send a request to de- afiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 33 The SS responds to the SIP S		SIP MESSAGE message to have a target user				
27 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message. SIP 200 (OK) - - 28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" <						
message with a SIP 200 (OK) message.<<28The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated"SIP NOTIFY-29The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated"SIP NOTIFY-30Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI35Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI36The SS responds to the SIP MESSAGESIP PUBLISH837PSIP PUBLISH8P	27					
28 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliating" SIP NOTIFY - - 29 The SS sends a SIP NOTIFY informing that the affiliated" SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - - - 31 Make the MCPTT User send a request to de-subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - 32 Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user? -	21		<	SIF 200 (OR)	-	-
the affiliation status of the target user with GROUP D is "affiliating"<SIP NOTIFY29The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated"SIP NOTIFY-30Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI>SIP SUBSCRIBE7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message>SIP 200 (OK)34Make the MCPTT User send a request to de- affiliation status changes to de- affiliation status changes to de- affiliation status changes to de- affiliation status changes for a target user?>SIP 200 (OK)33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI>SIP PUBLISH8P35Check: Does the UE (MCPTT Client) send a SIP PUBLISH>SIP 200 (OK)36The SS responds to the SIP MESSAGE>SI						
GROUP D is "affiliating" - 29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" - SIP NOTIFY - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - 3 P 31 Make the MCPTT User send a request to desubscribe from affiliation status changes of a target user. - <td< td=""><td>28</td><td></td><td></td><td>SIP NOTIFY</td><td>-</td><td>-</td></td<>	28			SIP NOTIFY	-	-
29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? -		the affiliation status of the target user with	<			
29 The SS sends a SIP NOTIFY informing that the affiliation status of the target user with GROUP D is "affiliated" SIP NOTIFY - - - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? -		GROUP D is "affiliating"				
the affiliation status of the target user with GROUP D is "affiliated"<30Check: Does the UE (MCPTT client) notify the User that the target user is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE SIP 200 (OK)7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message34Make the MCPTT User send a request to de- affiliater from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI>SIP 200 (OK)35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?36The SS responds to the SIP MESSAGE<->SIP 200 (OK)	29	The SS sends a SIP NOTIEY informing that	1	SIP NOTIFY	-	-
GROUP D is "affiliated" - 30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? - - 3 P 31 Make the MCPTT User send a request to desubscribe from affiliation status changes of a target user. - </td <td>20</td> <td></td> <td></td> <td></td> <td></td> <td></td>	20					
30 Check: Does the UE (MCPTT client) notify the user that the target user is now affiliated with GROUP D? -			<			
user that the target user is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a affiliation status changes for a target user?>SIP SUBSCRIBE7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI>SIP 200 (OK)-35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP PUBLISH8P36The SS responds to the SIP MESSAGE>SIP 200 (OK)						
GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE SIP 200 (OK)7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. SIP PUBLISH<	30		-	-	3	Р
NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE SIP 200 (OK)7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) messageSIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMISIP 200 (OK)-35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP PUBLISH8P36The SS responds to the SIP MESSAGE>SIP 200 (OK)		user that the target user is now affiliated with				
NOTE: This is expected to be done via a suitable implementation dependent MMI31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE SIP 200 (OK)7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) messageSIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMISIP 200 (OK)-35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP PUBLISH8P36The SS responds to the SIP MESSAGE>SIP 200 (OK)		GROUP D?				
suitable implementation dependent MMI.Image: Constraint of the subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI.Image: Constraint of the subscribe from affiliation status changes of a target user. SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?Image: Constraint of the subscribe from affiliation status changes for a target user?Image: Constraint of the subscribe from affiliation status changes for a target user?Image: Constraint of the subscribe from affiliation status changes for a target user?Image: Constraint of the subscribe from affiliate from a MCPTT User send a request to de-affiliate from a MCPTT User send a request to de-affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI.SIP PUBLISH8P35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP PUBLISH8P36The SS responds to the SIP MESSAGE>SIP 200 (OK)>						
31Make the MCPTT User send a request to de- subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE SIP 200 (OK)7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message.<						
subscribe from affiliation status changes of a target user. NOTE: This is expected to be done via a suitable implementation dependent MMI>SIP SUBSCRIBE7P32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE7P33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) messageSIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMISIP PUBLISH8P35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP 200 (OK)36The SS responds to the SIP MESSAGE<>SIP 200 (OK)	04		<u> </u>	1		
target user. NOTE: This is expected to be done via a suitable implementation dependent MMI.SIP SUBSCRIBE732Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE733The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message>SIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI>SIP PUBLISH8P35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP 200 (OK)36The SS responds to the SIP MESSAGE>SIP 200 (OK)	31		-	-	-	-
NOTE: This is expected to be done via a suitable implementation dependent MMI.Image: Subscript of the subscript o						
suitable implementation dependent MMI.Image: solution of the second						
suitable implementation dependent MMI.Image: solution of the second		NOTE: This is expected to be done via a				
32Check: Does the UE (MCPTT Client) send a SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE Neader field set to zero to de-subscribe from affiliation status changes for a target user?>SIP SUBSCRIBE Neader field set to zero to de-subscribe from affiliation status changes for a target user?>SIP 200 (OK)33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) messageSIP 200 (OK)34Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI35Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D?>SIP 200 (OK)36The SS responds to the SIP MESSAGE>SIP 200 (OK)						
SIP SUBSCRIBE message with the Expires header field set to zero to de-subscribe from affiliation status changes for a target user?SIP 200 (OK)-33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message.<	30		>		7	P
header field set to zero to de-subscribe from affiliation status changes for a target user?SIP 200 (OK)-33The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message.<	52					Г
affiliation status changes for a target user? Image: status changes for a target user? Image: status changes for a target user? 33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. - SIP 200 (OK) - - 34 Make the MCPTT User send a request to de-affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. - <t< td=""><td></td><td></td><td> </td><td></td><td></td><td></td></t<>						
33 The SS responds to the SIP SUBSCRIBE message with a SIP 200 (OK) message. SIP 200 (OK) - - 34 Make the MCPTT User send a request to deafiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
message with a SIP 200 (OK) message. <						
message with a SIP 200 (OK) message. <	33	The SS responds to the SIP SUBSCRIBE	. 	SIP 200 (OK)	- T	-
34 Make the MCPTT User send a request to de- affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. - </td <td></td> <td></td> <td><</td> <td></td> <td></td> <td></td>			<			
affiliate from a MCPTT group, GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI. Image: Since the structure in t	34		L -	-		-
NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP PUBLISH 8 P 35 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D? > SIP PUBLISH 8 P 36 The SS responds to the SIP MESSAGE SIP 200 (OK) - -	0-1					-
suitable implementation dependent MMI. > SIP PUBLISH 8 P 35 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D? > SIP PUBLISH 8 P 36 The SS responds to the SIP MESSAGE SIP 200 (OK) - -						
35 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D? > SIP PUBLISH 8 P 36 The SS responds to the SIP MESSAGE SIP 200 (OK) - -						
35 Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to de-affiliate with GROUP D? > SIP PUBLISH 8 P 36 The SS responds to the SIP MESSAGE SIP 200 (OK) - -						
SIP PUBLISH message to de-affiliate with GROUP D? Image: SIP 200 (OK) Image: SIP 200 (OK) 36 The SS responds to the SIP MESSAGE SIP 200 (OK) Image: SIP 200 (OK)	35		>	SIP PUBLISH	8	Р
GROUP D? GROUP D? 36 The SS responds to the SIP MESSAGE				-	-	
36 The SS responds to the SIP MESSAGE SIP 200 (OK)						
	20					
message with a SIP 200 (OK) message.	36		<	SIP 200 (UK)	-	-
		message with a SIP 200 (OK) message.				

37	The SS sends a SIP NOTIFY informing that the affiliation status of the user with GROUP D is "disaffiliating"	<	SIP NOTIFY	-	-
38	Check: Does the UE (MCPTT client) notify the user that the MCPTT User is no longer affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Ρ
39	The SS sends a SIP MESSAGE to the MCPTT Client to affiliate the MCPTT User to GROUP D via negotiated mode	<	SIP MESSAGE	-	-
40	Check: Does the UE (MCPTT Client) send a SIP 200 (OK) message in response to the SIP MESSAGE message?	>	SIP 200 (OK	9	Р
41	Check: Does the UE (MCPTT client) notify the user that another user is requesting the MCPTT User affiliate to GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	9	Р
42	Make the MCPTT User accept to affiliate to GROUP D. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
43	Check: Does the UE (MCPTT Client) send a SIP PUBLISH message to affiliate with GROUP D?	>	SIP PUBLISH	9	Ρ
44	The SS responds to the SIP PUBLISH message with a SIP 200 (OK) message.	<	SIP 200 (OK)	-	-
45	The SS sends a SIP NOTIFY informing that the affiliation status of the MCPTT USER with GROUP D is "affiliating"	<	SIP NOTIFY	-	-
46	The SS sends a SIP NOTIFY informing that the affiliation status of the MCPTT USER with GROUP D is "affiliated"	<	SIP NOTIFY	-	-
47	Check: Does the UE (MCPTT client) notify the user that the MCPTT User is now affiliated with GROUP D? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Ρ
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

5.3.3.3

Specific message contents

Table 5.3.3.3-1: SIP SUBSCRIBE (step 2, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.14-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 5.3.3.3-2				

Table 5.3.3.3-2: MCPTT-INFO in SIP SUBSCRIBE (Table 5.3.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
mcptt-request-uri	px_MCPTT_User_A_ID				

Derivation Path: TS 36.579-1 [2]	, Table 5.5.2.14-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-4			
MIME-Content-Type	"application/simple- filter+xml"			
SIMPLE-FILTER	As described in Table 5.3.3.3-5			

Table 5.3.3.3-3: SIP SUBSCRIBE (step 12, Table 5.3.3.2-1)

Table 5.3.3.3-4: MCPTT-INFO in SIP SUBSCRIBE (Table 5.3.3.3-3)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
mcptt-request-uri	px_MCPTT_User_B_ID				

Table 5.3.3.3-5: SIMPLE-FILTER in SIP SUBSCRIBE (Table 5.3.3.3-3)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.6-1					
Information Element	Value/remark	Comment	Reference	Condition	
filter-set	px_MCPTT_Client_B_I D				
nc-bindings	px_MCPTT_Client_B_I D				

Table 5.3.3.3-6: SIP SUBSCRIBE (step 32, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.14-1			
Information Element	Value/remark	Comment	Reference	Condition
Expires				
delta-seconds	"0"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-7			
MIME-Content-Type	"application/simple- filter+xml"			
SIMPLE-FILTER	As described in Table 5.3.3.3-8			

Table 5.3.3.3-7: MCPTT-INFO in SIP SUBSCRIBE (Table 5.3.3.3-6)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
mcptt-request-uri	px_MCPTT_User_B_ID			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.6-1				
Information Element	Value/remark	Comment	Reference	Condition
filter-set	px_MCPTT_Client_B_I D			
nc-bindings	px_MCPTT_Client_B_I D			

Table 5.3.3.3-8: SIMPLE-FILTER in SIP SUBSCRIBE (Table 5.3.3.3-6)

Table 5.3.3.3-9: SIP 200 (OK) (steps 3, 7, 13, 16, 27, 44, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Expires				
delta-seconds	"4294967295"			
Content-Type				
Content-Length	"0"			
Message-body	not present	No message body included - end of SIP message		

Table 5.3.3.3-10: SIP 200 (OK) (steps 22, 33, 36, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Expires					
delta-seconds	"0"				
Content-Type					
Content-Length	"0"				
Message-body	not present	No message body included - end of SIP message			

Table 5.3.3.3-11: SIP 200 (OK) (step 40, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Expires				
delta-seconds	"4294967295"			
Content-Type				
Content-Length	"0"			
Message-body	not present	No message body included - end of SIP message		

Table 5.3.3.3-12: SIP PUBLISH (steps 6, 43, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-13			
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-14			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
mcptt-request-uri	px_MCPTT_User_A_ID			

Table 5.3.3.3-13: MCPTT-INFO in SIP PUBLISH (Table 5.3.3.3-12)

Table 5.3.3.3-14: PIDF in SIP PUBLISH (Table 5.3.3.3-12)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity				
tuple id				
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status	not present			
expires	not present			
p-id	any allowed value			

Table 5.3.3.3-15: SIP PUBLISH (step 15, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2	Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1				
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 5.3.3.3-16				
MIME-Content-Type	"application/pidf+xml"				
PIDF	As described in Table 5.3.3.3-17				

Table 5.3.3.3-16: MCPTT-INFO in SIP PUBLISH (Table 5.3.3.3-15)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
mcptt-request-uri	px_MCPTT_User_B_ID			

Table 5.3.3.3-17: PIDF in SIP PUBLISH (Table 5.3.3.3-15)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity	px_MCPTT_Client_B_I D			
tuple id	px_MCPTT_Client_B_I D			
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status	not present			
expires	not present			
p-id	any allowed value			

Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1				
Information Element	Value/remark	Comment	Reference	Condition
Expires				
delta-seconds	"0"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-19			
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-20			

Table 5.3.3.3-18: SIP PUBLISH (step 21, Table 5.3.3.2-1)

Table 5.3.3.3-19: MCPTT-INFO in SIP PUBLISH (Table 5.3.3.3-18)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
mcptt-request-uri	px_MCPTT_User_B_ID			

Table 5.3.3.3-20: PIDF in SIP PUBLISH (Table 5.3.3.3-18)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity	px_MCPTT_Client_B_I D			
tuple id	px_MCPTT_Client_B_I D			
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status	not present			
expires	not present			
p-id	any allowed value			

Table 5.3.3.3-21: SIP PUBLISH (step 35, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.11-1			
Information Element	Value/remark	Comment	Reference	Condition
Expires				
delta-seconds	"0"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-22			
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-23			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
mcptt-request-uri	px_MCPTT_User_A_ID			

Table 5.3.3.3-22: MCPTT-INFO in SIP PUBLISH (Table 5.3.3.3-21)

Table 5.3.3.3-23: PIDF in SIP PUBLISH (Table 5.3.3.3-21)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity				
tuple id				
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status	not present			
expires	not present			
p-id	any allowed value			

Table 5.3.3.3-24: SIP NOTIFY (step 4, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-25			

Table 5.3.3.3-25: PIDF in SIP NOTIFY (Table 5.3.3.3-24)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1			
Information Element	Value/remark	Comment	Reference	Condition
presence entity				
tuple id				
status				
affiliation				
status				
affiliating	not present			
affiliated				
p-id	not present			

Table 5.3.3.3-26: SIP NOTIFY (steps 8, 45, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-27			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity				
tuple id				
status				
affiliation				
group	px_MCPTT_Group_D_I D			

Table 5.3.3.3-27: PIDF in SIP NOTIFY (Table 5.3.3.3-26)

Table 5.3.3.3-28: SIP NOTIFY (steps 9, 46, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDE	As described in Table			
FIDE	5.3.3.3-29			

Table 5.3.3.3-29: PIDF in SIP NOTIFY (Table 5.3.3.3-28)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1				
Information Element	Value/remark	Comment	Reference	Condition
presence entity				
tuple id				
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status				
affiliating	not present			
affiliated				

Table 5.3.3.3-30: SIP NOTIFY (steps 17, 28, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-31			

Table 5.3.3.3-31: PIDF in SIP NOTIFY (Table 5.3.3.3-30)

Derivation Path: TS 36.579-1 [2 Information Element	Value/remark	Comment	Reference	Condition
presence entity	px_MCPTT_Client_B_I D			
tuple id	px_MCPTT_Client_B_I D			
status				
affiliation				
group	px_MCPTT_Group_D_I D			

Derivation Path: TS 36.579-1 [2], Table 5.5.2.8-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-33			

Table 5.3.3.3-32: SIP NOTIFY (steps 18, 29, Table 5.3.3.2-1)

Table 5.3.3.3-33: PIDF in SIP NOTIFY (Table 5.3.3.3-32)

Derivation Path: TS 36.579-1 [2]	, Table 5.5.3.5-1			
Information Element	Value/remark	Comment	Reference	Condition
presence entity	px_MCPTT_Client_B_I D			
tuple id	px_MCPTT_Client_B_I D			
status				
affiliation				
group	px_MCPTT_Group_D_I D			
status				
affiliating	not present			
affiliated				

Table 5.3.3.3-34: SIP NOTIFY (step 23, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2]	, Table 5.5.2.8-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-35			

Table 5.3.3.3-35: PIDF in SIP NOTIFY (Table 5.3.3.3-34)

Derivation Path: TS 36.579-1 [2],	Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1					
Information Element	Value/remark	Comment	Reference	Condition		
presence entity	px_MCPTT_Client_B_I D					
tuple id	px_MCPTT_Client_B_I D					
status						
affiliation						
group	px_MCPTT_Group_D_I D					
status						
affiliating	not present					
disaffiliating						

Derivation Path: TS 36.579-1 [2]	, Table 5.5.2.8-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/pidf+xml"			
PIDF	As described in Table 5.3.3.3-37			

Table 5.3.3.3-36: SIP NOTIFY (step 37, Table 5.3.3.2-1)

Table 5.3.3.3-37: PIDF in SIP NOTIFY (Table 5.3.3.3-36)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.5-1					
Information Element	Value/remark	Comment	Reference	Condition	
presence entity					
tuple id					
status					
affiliation					
group	px_MCPTT_Group_D_I D				
status					
affiliating	not present				
disaffiliating					

Table 5.3.3.3-38: SIP MESSAGE (step 26, Table 5.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.7.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 5.3.3.3-39				
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"				
MCPTT-Affiliation- Command	As described in Table 5.3.3.3-40				

Table 5.3.3.3-39: MCPTT-INFO in SIP MESSAGE (Table 5.3.3.3-38)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
mcptt-request-uri	px_MCPTT_User_B_ID				

Table 5.3.3.3-40: MCPTT-AFFILIATION-COMMAND in SIP MESSAGE (Table 5.3.3.3-38)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.7-1					
Information Element	Value/remark	Comment	Reference	Condition	
command-list					
affiliate					
group	px_MCPTT_Group_D_I D				

Derivation Path: TS 36.579-1 [2 Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 5.3.3.3-42			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MCPTT-Affiliation- Command	As described in Table 5.3.3.43			

Table 5.3.3.3-42: MCPTT-INFO in SIP MESSAGE (Table 5.3.3.3-41)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
mcptt-request-uri	px_MCPTT_User_A_ID				

Table 5.3.3.3-43: MCPTT-AFFILIATION-COMMAND in SIP MESSAGE (Table 5.3.3.3-41)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.7-1					
Information Element	Value/remark	Comment	Reference	Condition	
command-list					
affiliate					
group	px_MCPTT_Group_D_I D				

5.4 Configuration / Pre-established Session Establishment / Pre-established Session Modification / Pre-established Session Release

5.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service }
ensure that {
 when { MCPTT User requests the creation of a pre-established session }

then { UE (MCPTT Client) requests the creation of a pre-establish session by sending a SIP
INVITE message, and, after indication from the MCPTT Server that the pre-established session request
was accepted, the UE notifies the user }
}

(2)

}

with { the MCPTT client already having a pre-established session created }
ensure that {
 when { MCPTT User requests the modification of a pre-established session }
 then { UE (MCPTT Client) requests the modification of a pre-establish session by sending a SIP
 re-INVITE message or a SIP UPDATE message (depending on UE implementation), and, after indication
 from the MCPTT Server that the pre-established session modification request was accepted, the UE
 notifies the user }

ETSI

```
(3)
```

(4)

```
with { the MCPTT client already having a pre-stablished session created }
ensure that {
   when { MCPTT User requests the release of a pre-established session }
    then { UE (MCPTT Client) requests the release of a pre-establish session by sending a SIP INVITE
message, and, after indication from the MCPTT Server that the pre-established session release
request was accepted, the UE notifies the user }
   }
   (5)
```

```
with { the MCPTT client already having a pre-stablished session created }
ensure that {
   when { MCPTT Server requests the release of a pre-established session by sending either a SIP BYE
message }
   then { UE (MCPTT Client) responds the pre-established session release request by sending a SIP
200 (OK) message, and then UE notifies the user of that the pre-established session has been
released }
```

5.4.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clause 8. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 8.2.1]

When the MCPTT client initiates a pre-established session the MCPTT client shall:

1) gather ICE candidates according to IETF RFC 5245 [17]; and

NOTE 1: ICE candidates are only gathered on interfaces that the MCPTT UE uses to obtain MCPTT service.

2) generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- shall set the Request-URI of the SIP INVITE request to the public service identity of the participating MCPTT function serving the MCPTT user;
- may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field with the media feature tag g.3gpp.mcptt along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref set to the value "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 7) shall include the "timer" option tag in the Supported header field;

- 8) should include the Session-Expires header field according to IETF RFC 4028 [7] and should not include the "refresher" header field. The "refresher" header field parameter shall be set to "uac" if included;
- 9) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1, and include ICE candidates in the SDP offer as per IETF RFC 5245 [17]; and

10) shall send the SIP INVITE request according to 3GPP TS 24.229 [4].

Upon receiving a SIP 2xx response to the SIP INVITE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

NOTE 2: If ICE candidate evaluation results in candidate pairs other than the default candidate pair being selected a further offer answer exchange using the procedures in subclause 8.3 will be needed.

[TS 24.379, clause 8.3.1.1]

When the MCPTT client needs to modify the pre-established session outside of an MCPTT session, the MCPTT client:

- 1) shall generate a SIP UPDATE request or a SIP re-INVITE request according to 3GPP TS 24.229 [4];
- 2) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1, and include ICE candidates in the SDP offer as per IETF RFC 5245 [17], if required; and
- 3) shall send the SIP request towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4].

On receipt of the SIP 200 (OK) response the MCPTT client:

- 1) shall interact with media plane as specified in 3GPP TS 24.380 [5], if there is change in media parameters or codecs in the received SDP answer, compared to those in the previously agreed SDP; and
- 2) shall interact with media plane as specified in 3GPP TS 24.380 [5], if there is a media stream that is currently used in the pre-established session, marked as rejected in the received SDP answer.
- NOTE: The MCPTT client keeps resources for previously agreed media stream, media parameters and codecs until it receives a SIP 200 (OK) response.

[TS 24.379, clause 8.3.1.2]

Upon receiving a SIP UPDATE request or a SIP re-INVITE request to modify an existing pre-established session without associated MCPTT session, the MCPTT client:

- shall validate that the received SDP offer includes at least one media stream for which the media parameters and at least one codec is acceptable by the MCPTT client and if not reject the request with a SIP 488 (Not Acceptable Here) response. Otherwise, continue with the rest of the steps; and
- 2) shall generate a SIP 200 (OK) response as follows:
- a) shall include an SDP answer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2, and include ICE candidates in the SDP answer as per IETF RFC 5245 [17]. if required.[TS 24.379, clause 8.4.1.1]
- NOTE: The MCPTT client needs to be prepared to release the pre-established session when receiving a SIP BYE request generated by the SIP core (e.g. due to network release of media plane resources).

When a MCPTT client needs to release a pre-established session as created in subclause 8.2.1, the MCPTT client:

- 1) shall generate a SIP BYE request according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall set the Request-URI of the SIP BYE request to the URI that identifies the pre-established session;
- 3) shall send the SIP BYE request towards the participating MCPTT function within the SIP dialog of the preestablished session according to rules and procedures of the 3GPP TS 24.229 [4]; and
- 4) shall, upon receiving a SIP 200 (OK) response to the SIP BYE request interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 8.4.1.2]

Upon receiving a SIP BYE request from the participating MCPTT function within a pre-established session the MCPTT client shall check whether there are any MCPTT sessions using the pre-established session, and:

- if there is an established MCPTT session then the MCPTT client shall remove the MCPTT client from the MCPTT session by performing the procedures for session release for each MCPTT session as specified in 3GPP TS 24.380 [5]; and
- 2) if there is no MCPTT session using the pre-established session, then the MCPTT client shall:
 - a) interact with the media plane as specified in 3GPP TS 24.380 [5] for disconnecting the media plane resources towards the participating MCPTT function; and
 - b) shall generate and send a SIP 200 (OK) response to the SIP BYE request according to rules and procedures of 3GPP TS 24.229 [4].

5.4.3 Test description

5.4.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

5.4.3.2 Test procedure sequence

Table 5.4.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User request the creation of a pre-established session NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT Client) send a SIP INVITE message in order to create pre- established session?	>	SIP INVITE	1	Р
3	The SS responds to the SIP INVITE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
4	Make the MCPTT User request to modify the pre-established session NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: Steps 5a1-5b1 describe behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE uses the SIP UPDATE message or the SIP re- INVITE message to modify an existing pre- established session.	-	-	-	-
5a1	Check: Does the UE (MCPTT Client) send a SIP UPDATE message to modify a pre- established session?	>	SIP UPDATE	2	Р
5b1	Check: Does the UE (MCPTT Client) send a SIP re-INVITE message to modify a pre- established session?	>	SIP re-INVITE	2	Р
6	The SS responds to the SIP UPDATE message or the SIP re-INVITE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
7	The SS sends a SIP UPDATE message to modify a pre-established session.	<	SIP UPDATE	-	-
8	Check: Does the UE (MCPTT Client) respond to the SIP UPDATE message with a SIP 200 (OK) message	>	SIP 200 (OK)	3	Р
9	The SS sends a SIP re-INVITE message to modify a pre-established session.	<	SIP re-INVITE	-	-
10	Check: Does the UE (MCPTT Client) respond to the SIP re-INVITE message with a SIP 200 (OK) message	>	SIP 200 (OK)	3	Р
11	Make the MCPTT User request to release the pre-established session NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
12	Check: Does the UE (MCPTT Client) send a SIP BYE message in order to release pre- established session?	>	SIP BYE	4	Р
13	The SS responds to the SIP BYE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-
14	Make the MCPTT User request the creation of a pre-established session NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-

-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
15	Check: Does the UE (MCPTT Client) send a SIP INVITE message in order to create pre- established session?	>	SIP INVITE	1	Ρ
16	The SS responds to the SIP INVITE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
17	The SS sends a SIP BYE message in order to release a pre-established session.	<	SIP BYE	-	-
18	Check: Does the UE (MCPTT Client) respond to the SIP BYE message with a SIP 200 (OK) message	>	SIP 200 (OK)	5	Ρ
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

5.4.3.3 Specific message contents

Table 5.4.3.3-1: SIP INVITE (steps 2, 15, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 condition (GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Answer-Mode	not present			
answer-mode-value	not present			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	not present			

Table 5.4.3.3-2: SIP 200 (OK) (steps 3, 6, 16, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Contact					
addr-spec	px_sesson_B_ID	The URI that identifies the pre-established session			

Table 5.4.3.3-3: SIP 200 (OK) (steps 8, 10, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length	"0"				
Message-body	not present	No message body included - end of SIP message			

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Contact				
addr-spec	px_sesson_B_ID	The URI that identifies the pre-established session		
Content-Type				
Content-Length	"0"			
Message-body	not present	No message body included - end of SIP message		

Table 5.4.3.3-4: SIP 200 (OK) (step 13, Table 5.4.3.2-1)

Table 5.4.3.3-5: SIP 200 (OK) (step 18, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2]	, Table 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Contact				
addr-spec	px_sesson_B_ID	The URI that identifies the pre-established session		
Content-Type				
Content-Length	"0"			
Message-body	not present	No message body included - end of SIP message		

Table 5.4.3.3-6: SIP re-INVITE (step 5b1, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 conditior	GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Contact				
addr-spec	px_sesson_B_ID	The URI that identifies the pre-established session		
Answer-Mode	not present			
answer-mode-value	not present			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	not present			

Table 5.4.3.3-7: SIP re-INVITE (step 9, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.2-1 conditior	GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Contact				
addr-spec	px_sesson_B_ID	The URI that identifies the pre-established session		
Answer-Mode	not present			
answer-mode-value	not present			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	not present			

Derivation Path: TS 36.579-1 [2], Table 5.5.2.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Request-Line					
Request-URI	px_sesson_B_ID	The URI that identifies the pre-established			
		session			

Table 5.4.3.3-8: SIP BYE (step 12, Table 5.4.3.2-1)

Table 5.4.3.3-9: SIP BYE (step 17, Table 5.4.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.2.2-1				
Information Element	Value/remark	Comment	Reference	Condition
Request-Line				
Request-URI	px_sesson_B_ID	The URI that identifies the pre-established session		

6 MCPTT Client on-network operation

- 6.1 Group Calls
- 6.1.1 Pre-arranged Group Call
- 6.1.1.1 On-network / On-demand Pre-arranged Group Call / Automatic Commencement Mode / End-to-end communication security / Floor Control / Upgrade to Emergency Group Call / Cancel Emergency State / Upgrade to Imminent Peril Group Call / Cancel Imminent Peril State / Client Originated (CO)
- 6.1.1.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service } ensure that {

when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Group Call
requesting force of Automatic Commencement Mode at the invited MCPTT client(s) and implicit floor
control }

then { UE (MCPTT Client) requests On-demand Automatic Commencement Mode Pre-arranged Group Call
establishment with implicit floor control by sending a SIP INVITE message, and, after indication
from the MCPTT Server that the call was established notifies the user }
}

(2)

with { UE (MCPTT Client) having established an MCPTT On-demand Pre-arranged Group Call with Automatic Commencement Mode }

ensure that {

when { the MCPTT User (MCPTT Client) engages in communication with the invited MCPTT User(s) }
 then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server (Floor Request
 during a talk burst, Floor granting/release, Floor idle, Floor deny, Floor taken/revoked, Floor
 request queued and queue handling) }
 }
}

(3)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode }

<pre>ensure that { when { the SS (MCPTT Server) needs to terminate the ongoing MCPTT Group Call and the SS (MCPTT Server) sends a SIP BYE request } then { UE (MCPTT Client) responds with a SIP 200 (OK) and leaves the MCPTT session } } }</pre>
(4)
<pre>with { UE (MCPTT Client) having established an On-demand Pre-arranged Group Call with Automatic Commencement Mode and the MCPTT User being authorised for initiating an MCPTT Emergency Group Call } ensure that { when { the MCPTT User (MCPTT Client) wants to upgrade the ongoing MCPTT Group Call to an MCPTT Emergency Group Call with floor control } then { UE (MCPTT Client) sends a SIP re-INVITE request and upon receipt of a SIP 2xx response considers the call as being upgraded to Emergency Group Call (emergency group call state = "MEGC 3: emergency-call-granted") } } } </pre>
(5)
<pre>with { UE (MCPTT Client) having upgraded to an Emergency Group Call } ensure that { when { the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) } then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server } } }</pre>
(6)
<pre>with { UE (MCPTT Client) having upgraded an On-demand Pre-arranged Group Call with Automatic Commencement Mode to an Emergency Group Call and the MCPTT User being authorised for cancelling an MCPTT Emergency state (MCPTT in-progress emergency cancel) } ensure that { when { the MCPTT User (MCPTT Client) wants to cancel the ongoing MCPTT Emergency state } then { UE (MCPTT Client) sends a SIP re-INVITE request and upon receipt of a SIP 2xx response considers the emergency condition cancelled } } }</pre>
(7)
<pre>with { UE (MCPTT Client) having established an On-demand Pre-arranged Group Call with Automatic Commencement Mode and the MCPTT User being authorised for initiating an MCPTT Imminent Peril Group Call } ensure that {</pre>

ensure that $\{$

when { the MCPTT User (MCPTT Client) wants to upgrade the ongoing MCPTT Group Call to an MCPTT Imminent Peril Group Call with floor control } then { UE (MCPTT Client) sends a SIP re-INVITE request and upon receipt of a SIP 2xx response considers the call as being upgraded to Imminent Peril Group Call (imminent peril group call state = "MIG 2: in-progress") } }

(8)

with { UE (MCPTT Client) having upgraded to an Imminent Peril Group Call } ensure that { when { the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) } then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server } }

(9)

with { UE (MCPTT Client) having upgraded an On-demand Pre-arranged Group Call with Automatic Commencement Mode to an Imminent Peril Group Call and the MCPTT User being authorised for cancelling an MCPTT Imminent Peril state (MCPTT in-progress imminent peril cancel) } ensure that {

when { the MCPTT User (MCPTT Client) wants to cancel the ongoing MCPTT Imminent Peril state } then { UE (MCPTT Client) sends a SIP re-INVITE request and upon receipt of a SIP 2xx response considers the imminent peril condition cancelled } }

(10)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode } ensure that {

```
when { the MCPTT User (MCPTT Client) wants to terminate the ongoing MCPTT Group Call }
   then { UE (MCPTT Client) sends a SIP BYE request and leaves the MCPTT session }
   }
}
```

6.1.1.1.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 10.1.1.2.1.1, 6.2.1, 6.2.3.1.2, 6.4, 6.5, 6.2.6, 10.1.1.2.1.3, 10.1.1.2.1.4, 6.2.8.1.3, 10.1.1.2.1.5, 6.2.8.1.11, 6.2.4.1, TS 24.380, clauses 6.2.4.5.3, 6.2.4.6.4, 6.2.4.3.5, 6.2.4.4.2, 6.2.4.5.4, 6.2.4.6.5, 6.2.4.4.4, 6.2.4.4.9, 6.2.4.9.9, 6.2.4.9.6, 6.2.4.9.4. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT prearranged group call and the MCPTT emergency state is already set, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.1;
- 2) if the MCPTT user has requested the origination of an MCPTT imminent peril group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.9;
- 3) if the MCPTT user has requested the origination of a broadcast group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.2;
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 7) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 12) if the MCPTT emergency state is already set or the MCPTT client emergency group state for this group is set to "MEG 2: in-progress", the MCPTT client shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2;

- 13) if the MCPTT client imminent peril group state for this group is set to "MIG 2: in-progress" or "MIG 3: confirmpending" shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.
- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.381 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.

15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;

16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and

17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4; and
- 3) may subscribe to the conference event package as specified in subclause 10.1.3.1.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

- 1) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or
- 2) if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:
 - i) if the MCPTT client is initiating a call to a group identity;
 - ii) if the <preferred-voice-encodings> element is present in the group document retrieved by the group management client as specified in 3GPP TS 24.381 [31] containing an <encoding> element with a "name" attribute; and
 - iii) if the MCPTT client supports the encoding name indicated in the value of the "name" attribute;

then the MCPTT client:

- i) shall insert the value of the "name" attribute in the <encoding name> field of the "a=rtpmap" attribute as defined in IETF RFC 4566 [12]; and
- c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];
- 3) if floor control shall be used during the session, shall include an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12 for a media-floor control entity, consisting of:
 - a) the port number for the media-floor control entity selected as specified in 3GPP TS 24.380 [5]; and
 - b) the 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14; and
- 4) if end-to-end security is required for a private call and the SDP offer is not for establishing a pre-established session, shall include the MIKEY-SAKKE I_MESSAGE in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 6.2.3.1.2]

When performing the automatic commencement mode procedures, the MCPTT client shall follow the procedures in subclause 6.2.3.1.1 with the following clarification:

- The MCPTT client may include a P-Answer-State header field with the value "Confirmed" as specified in IETF RFC 4964 [34] in the SIP 200 (OK) response.

[TS 24.379, clause 6.4]

An initial SIP INVITE request fulfilling the following criteria shall be regarded by the MCPTT server as an implicit floor request when the MCPTT client:

- 1) initiates an MCPTT speech session or initiates a pre-established session; and
- 2) includes the "mc_implicit_request" 'fmtp' attribute in the associated UDP stream for the floor control in the SDP offer/answer as specified in 3GPP TS 24.380 [5] clause 12.

A SIP re-INVITE request fulfilling the following criteria shall be regarded by the MCPTT server as an implicit floor request when the MCPTT client:

- 1) performs an upgrade of:
 - a) an MCPTT group call to an emergency MCPTT group call;
 - b) an MCPTT private call to an emergency MCPTT private call; or
 - c) an MCPTT group call to an imminent peril MCPTT group call; and

2) includes the "mc_implicit_request" 'fmtp' attribute in the associated UDP stream for the floor control in the SDP offer/answer as specified in 3GPP TS 24.380 [5] clause 12.

In all other cases the SIP (re-)INVITE request shall be regarded as received without an implicit floor request.

[TS 24.379, clause 6.5]

The MCPTT client and the MCPTT server shall support several MIME bodies in SIP request and SIP responses.

When the MCPTT client or the MCPTT server sends a SIP message and the SIP message contains more than one MIME body, the MCPTT client or the MCPTT server:

- 1) shall, as specified in IETF RFC 2046 [21], include one Content-Type header field with the value set to multipart/mixed and with a boundary delimiter parameter set to any chosen value;
- 2) for each MIME body:
 - a) shall insert the boundary delimiter;
 - b) shall insert the Content-Type header field with the MIME type of the MIME body; and
 - c) shall insert the content of the MIME body;
- 3) shall insert a final boundary delimiter; and
- 4) if an SDP offer or an SDP answer is one of the MIME bodies, shall insert the application/sdp MIME body as the first MIME body.
- NOTE: The reason for inserting the application/sdp MIME body as the first body is that if a functional entity in the underlying SIP core does not understand multiple MIME bodies, the functional entity will ignore all MIME bodies with the exception of the first MIME body. The order of multiple MCPTT application MIME bodies in a SIP message is irrelevant.

When the MCPTT client or the MCPTT server sends a SIP message and the SIP message contains only one MIME body, the MCPTT client or the MCPTT server:

- 1) shall include a Content-Type header field set to the MIME type of the MIME body; and
- 2) shall insert the content of the MIME body.

[TS 24.380, clause 6.2.4.5.3]

Upon receiving an indication from the user to release the permission to send RTP media, the floor participant:

- 1. shall send a Floor Release message towards the floor control server The Floor Release message:
 - a. may include the first bit in the subtype of the Floor Release message set to '1' (acknowledgement is required) as specified in subclause 8.2.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
 - b. if the session is a broadcast call and if the session was established as a normal call, shall include the Floor Indicator with the A-bit set to '1' (Normal call); and
 - c. if the Floor Granted message included the G-bit set to '1' (Dual floor), shall include the Floor Indicator with the G-bit set to '1' (Dual floor);
- 2. shall remove the indication that the participant is overriding without revoke if this indication is stored;
- 3. shall start timer T100 (Floor Release) and initialize counter C100 (Floor Release) to 1; and
- 4. shall enter the 'U: pending Release' state.

[TS 24.380, Clause 6.2.4.6.4]

Upon receiving a Floor Idle message, the floor participant:

- 1. if the first bit in the subtype of the Floor Idle message to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '5' (Floor Idle); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. may provide a floor idle notification to the MCPTT user;
- 3. if the Floor Indicator field is included and the B-bit set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. shall stop timer T100 (Floor Release);
- 5. if the session is not a broadcast group call or if the A-bit in the Floor Indicator field is set to '1' (Normal call), shall enter the 'U: has no permission' state; and
- 6. if the session was initiated as a broadcast group call:
 - a. shall indicate to the MCPTT client the media transmission is completed; and
 - b shall enter the 'Releasing' state.

[TS 24.380, clause 6.2.4.3.5]

Upon receiving an indication from the user to request permission to send media, the floor participant:

- 1. shall send the Floor Request message toward the floor control server; The Floor Request message:
 - a. if a different priority than the normal priority is required, shall include the Floor Priority field with the priority not higher than negotiated with the floor control server as specified in subclause 14.3.3; and
 - b. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall start timer T101 (Floor Request) and initialise counter C101 (Floor Request) to 1; and
- 3. shall enter the 'U: pending Request' state.

[TS 24.380, clause 6.2.4.4.2]

Upon receiving a Floor Granted message from the floor control server or a floor granted indication in an SIP 200 (OK) response in the application and signalling layer, the floor participant:

- 1. if the first bit in the subtype of the Floor Granted message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '1' (Floor Granted); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor granted notification to the user, if not already done;
- NOTE: Providing the floor granted notification to the user prior to receiving the Floor Granted message is an implementation option.
- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. if the G-bit in the Floor Indicator is set to '1' (Dual floor) shall store an indication that the participant is overriding without revoke;
- 5. shall stop the optional timer T103 (End of RTP media), if running;
- 6. shall stop timer T101 (Floor Request); and
- 7. shall enter the 'U: has permission' state.

[TS 24.380, clause 6.2.4.5.4]

Upon receiving a Floor Revoke message, the floor participant:

- 1. shall inform the user that the permission to send RTP media is being revoked;
- 2. may give information to the user about the reason for revoking the permission to send media;
- 3. shall request the media in the MCPTT client discard any remaining buffered RTP media packets and to stop forwarding of encoded voice to the MCPTT server;
- 4 if the G-bit in the Floor Indicator is set to '1' (Dual floor):
 - a. shall send a Floor Release message. In the Floor Release message:
 - i. shall include the Floor Indicator with the G-bit set to '1' (Dual floor); and
 - ii. may set the first bit in the subtype to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- 5 if the G-bit in the Floor Indicator is set to '0' (not Dual floor):
 - a. shall send a Floor Release message. In the Floor Release message:
 - i. shall include the Floor Indicator with the G-bit set to '0' (not Dual floor); and
 - ii. may set the first bit in the subtype to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
- 6. shall start timer T100 (Floor Release) and initialize counter C100 (Floor Release) to 1; and
- 7. shall enter the 'U: pending Release' state.

[TS 24.380, Clause 6.2.4.6.5]

Upon receiving a Floor Taken message, the floor participant:

- 1. if the first bit in the subtype of the Floor Taken message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '2' (Floor Taken); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. may provide floor taken notification to the user;
- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. should start the optional timer T103 (End of RTP media);
- 5. shall stop timer T100 (Floor Release); and
- 6. shall enter the 'U: has no permission' state.

[TS 24.380, clause 6.2.4.4.4]

Upon receiving a Floor Deny message, the floor participant:

- 1. if the first bit in the subtype of the Floor Deny message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '3' (Floor Deny); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor deny notification to the user;

- 3. may display the floor deny reason to the user using information in the Reject Cause field;
- 4. shall stop timer T101 (Floor Request); and
- 5. shall enter the 'U: has no permission' state.

[TS 24.380, clause 6.2.4.4.9]

Upon receiving a Floor Queue Position Info message, the floor participant:

- 1. if the first bit in the subtype of the Floor Queue Position Info message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '9' (Floor Queue Position Info); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor request queued response notification to the MCPTT user;
- 3. may provide the queue position and priority to the MCPTT user; and
- 4. shall enter the 'U: queued' state.

```
[TS 24.380, clause 6.2.4.9.9]
```

Upon receipt of an indication from the MCPTT client to request the queue position, the floor participant:

- 1. shall send the Floor Queue Position Request message;
- shall start timer T104 (Floor Queue Position Request) and initialize counter C104 (Floor Queue Position Request) to 1; and
- 3. remain in the 'U: queued' state.

[TS 24.380, clause 6.2.4.9.6]

Upon receiving an indication from the MCPTT user to release the queued floor request, the floor participant:

- 1. shall send a Floor Release message: The Floor Release message:
 - a. may include the Floor Indicator field changing a broadcast group call to a normal call;
- 2. may set the first bit in the subtype of the Floor Release message to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
- 3. shall start timer T100 (Floor Release) and initialise counter C10 (Floor Release) to 1;
- 4. shall stop timer T104 (Floor Queue Position Request), if running; and
- 5. shall enter the 'U: pending Release' state.

[TS 24.380, clause 6.2.4.9.4]

Upon receiving a Floor Granted message, the floor participant:

- 1. if the first bit in the subtype of the Floor Granted message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '1' (Floor Granted); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide a floor granted notification to the MCPTT user;

- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. shall stop timer T104 (Floor Queue Position Request), if running;
- 5. shall start timer T132 (Queued granted user action);
- 6. shall indicate the user that the floor is granted; and
- 7. shall remain in the 'U: queued' state.

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 10.1.1.2.1.3]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to upgrade the MCPTT group session to an emergency condition or an imminent peril condition on an MCPTT prearranged group, the MCPTT client shall generate a SIP re-INVITE request as specified in 3GPP TS 24.229 [4], with the clarifications given below.

- 1) if the MCPTT user is requesting to upgrade the MCPTT group session to an in-progress emergency group state and this is an unauthorised request for an MCPTT emergency call as determined by the procedures of subclause 6.2.8.1.8, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to upgrade the MCPTT group session to an in-progress emergency group state; and
 - b) shall skip the remaining steps of the current subclause;
- 2) if the MCPTT user is requesting to upgrade the MCPTT group session to an in-progress imminent peril state and this is an unauthorised request for an MCPTT imminent peril group call as determined by the procedures of subclause 6.2.8.1.8, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to upgrade the MCPTT group session to an in-progress imminent peril group state; and
 - b) shall skip the remaining steps of the current subclause;
- 3) if the MCPTT user has requested to upgrade the MCPTT group session to an MCPTT emergency call, the MCPTT client:
 - a) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.1;
 - b) if an indication of an MCPTT emergency alert is to be included, shall perform the procedures specified in subclause 6.2.9.1 for the MCPTT emergency alert trigger; and
 - c) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2.
- 4) if the MCPTT user has requested to upgrade the MCPTT group session to an MCPTT imminent peril call, the MCPTT client:
 - a) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.9; and
 - b) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 5) if the SIP re-INVITE request is to be sent within an on-demand session, shall include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;

- 6) if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session;
- NOTE: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 7) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 8) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall perform the actions specified in subclause 6.2.8.1.4.

[TS 24.379, clause 10.1.1.2.1.4]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to cancel the in-progress emergency condition on a prearranged MCPTT group, the MCPTT client shall generate a SIP re-INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user is not authorised to cancel the in-progress emergency group state of the MCPTT group as determined by the procedures of subclause 6.2.8.1.7, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to cancel the in-progress emergency group state of the MCPTT group; and
 - b) shall skip the remaining steps of the current subclause;
- shall, if the MCPTT user is cancelling an in-progress emergency condition and optionally an MCPTT emergency alert originated by the MCPTT user, include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.3;
- shall, if the MCPTT user is cancelling an in-progress emergency condition and an MCPTT emergency alert originated by another MCPTT user, include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.14;
- 4) shall include in the application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged"; and
 - b) the <mcptt-request-uri> element set to the group identity;
- NOTE 1: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP INVITE request that is sent by the originating participating MCPTT function.
- 5) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP re-INVITE request according to IETF RFC 3840 [16];
- 6) if the SIP re-INVITE request is to be sent within an on-demand session, shall include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session;

- NOTE 2: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 8) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2; and
- 9) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) shall set the MCPTT emergency group state of the group to "MEG 1: no-emergency";
- 3) shall set the MCPTT emergency group call state of the group to "MEGC 1: emergency-gc-capable"; and
- 4) if the MCPTT emergency alert state is set to "MEA 4: Emergency-alert-cancel-pending", the sent SIP re-INVITE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body and the SIP 2xx response to the SIP request for a priority group call does not contain a Warning header field as specified in subclause 4.4 with the warning text containing the mcptt-warn-code set to "149", shall set the MCPTT emergency alert state to "MEA 1: no-alert".

[TS 24.379, clause 6.2.8.1.3]

This subclause is referenced from other procedures.

If the MCPTT emergency group call state is set to "MEGC 3: emergency-call-granted" and the MCPTT emergency alert state is set to "MEA 1: no-alert", the MCPTT client shall generate a SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given below.

NOTE 1: This procedure assumes that the calling procedure has verified that the MCPTT user has made an authorised request for cancelling MCPTT in-progress emergency group state of the group.

The MCPTT client:

- 1) shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <emergency-ind> element set to "false";
- 2) shall clear the MCPTT emergency state; and
- 3) shall set MCPTT emergency group state of the MCPTT group to "MEG 3: cancel-pending"
- NOTE 2: This is the case of an MCPTT user who has initiated an MCPTT emergency group call and wants to cancel it.

If the MCPTT emergency group call state is set to "MEGC 3: emergency-call-granted" and the MCPTT emergency alert state is set to a value other than "MEA 1: no-alert" and the MCPTT user has indicated only the MCPTT emergency group call should be cancelled, the MCPTT client:

- 1) shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <emergency-ind> element set to "false"; and
- 2) shall set the MCPTT emergency group state of the MCPTT group to "MEG 3: cancel-pending".
- NOTE 3: This is the case of an MCPTT user has initiated both an MCPTT emergency group call and an MCPTT emergency alert and wishes to only cancel the MCPTT emergency group call. This leaves the MCPTT emergency state set.

If the MCPTT emergency group call state is set to "MEGC 3: emergency-call-granted" and the MCPTT emergency alert state is set to a value other than "MEA 1: no-alert" and the MCPTT user has indicated that the MCPTT emergency alert on the MCPTT group should be cancelled in addition to the MCPTT emergency group call, the MCPTT client:

 shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <emergency-ind> element set to "false";

- 2) shall if this is an authorised request to cancel an MCPTT emergency alert as determined by the procedures of subclause 6.2.8.1.6:
 - a) include in the application/vnd.3gpp.mcptt-info+xml MIME body an <alert-ind> element set to "false";
 - b) set the MCPTT emergency alert state to "MEA 4: Emergency-alert-cancel-pending"; and
 - c) clear the MCPTT emergency state;
- 3) should, if this is not an authorised request to cancel an MCPTT emergency alert as determined by the procedures of subclause 6.2.8.1.6, indicate to the MCPTT user that they are not authorised to cancel the MCPTT emergency alert; and
- 4) shall set the MCPTT emergency group state of the MCPTT group to "MEG 3: cancel-pending".
- NOTE 4: This is the case of an MCPTT user that has initiated both an MCPTT emergency group call and an MCPTT emergency alert and wishes to cancel both.

[TS 24.379, clause 10.1.1.2.1.5]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to cancel the in-progress imminent peril condition on a prearranged MCPTT group, the MCPTT client shall generate a SIP re-INVITE request by following the procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user is not authorised to cancel the in-progress imminent peril group state of the MCPTT group as determined by the procedures of subclause 6.2.8.1.10, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to cancel the in-progress imminent peril group state of the MCPTT group; and
 - b) shall skip the remaining steps of the current subclause;
- 2) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.11; and
- 3) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 4) shall include in the application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged"; and
 - b) the <mcptt-request-uri> element set to the group identity;
- NOTE 1: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP re-INVITE request that is sent by the originating participating MCPTT function.
- 5) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP re-INVITE request according to IETF RFC 3840 [16];
- 6) if the SIP re-INVITE request is to be sent within an on-demand session, shall include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session; and
- NOTE 2: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 8) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) shall set the MCPTT imminent peril group state of the group to "MIG 1: no-imminent-peril"; and
- 3) shall set the MCPTT imminent peril group call state of the group to "MIGC 1: imminent-peril-gc-capable".

[TS 24.379, clause 6.2.8.1.11]

This subclause is referenced from other procedures.

If the MCPTT imminent peril group call state is set to "MIGC 3: imminent-peril-call-granted" or the MCPTT imminent peril group state of the MCPTT group is set to "MIG 2: in-progress", the MCPTT client shall generate a SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given below.

NOTE 1: This procedure assumes that the calling procedure has verified that the MCPTT user has made an authorised request for cancelling the in-progress imminent peril group state of the group.

The MCPTT client:

- 1) shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <imminentperil-ind> element set to "false"; and
- 2) shall set MCPTT imminent peril group state of the MCPTT group to "MIG 4: cancel-pending".
- NOTE 2: This is the case of an MCPTT user who has initiated an MCPTT imminent peril group call and wants to cancel it, or another authorised member of the group who wishes to cancel the in-progress imminent peril state of the group.

[TS 24.379, clause 6.2.4.1]

Upon receiving a request from an MCPTT user to leave an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to leave; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

6.1.1.1.3 Test description

6.1.1.1.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.1.3.2 Test procedure sequence

Table 6.1.1.1.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User request the	-	-	-	-
	establishment of an MCPTT on-demand pre-				
	arranged group call using Group A, automatic				
	commencement mode, with explicit request for				
	floor control (implicit floor control).				
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
	EXCEPTION: The E-UTRA/EPC actions which	-	-		-
_	are related to the MCPTT call establishment	_	_	_	_
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
2	Check: Does the UE (MCPTT client) send an	>	SIP INVITE	1	Р
	initial SIP INVITE request requesting the				
	establishment of an MCPTT on-demand pre-				
	arranged group call, automatic				
	commencement mode, applying End-to-end				
	communication security with implicit floor control?				
3	The SS sends SIP 100 Trying	<	SIP 100 Trying	-	-
4	The SS sends SIP 180 Ringing	<	SIP 180 Ringing		-
5	The SS sends a SIP 200 (OK) message	<	SIP 200 (OK)		_
5	indicating that it has accepted the SIP INVITE			_	_
	request				
6	Check: Does the UE (MCPTT client) send a	>	SIP ACK	1	Р
_	SIP ACK in response to the SIP 200 (OK)				
7	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
8	Make the MCPTT User indicate end of talking				
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
9	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р
	Floor Release message? EXCEPTION: Step 10a1 describes behaviour				
-	that depends on the UE implementation; the	-	-	-	-
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
10a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
	response to the Floor Release message				
11	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
	acknowledgement required				
12	Make the MCPTT User request to speak (e.g.	-	-	-	-
	pressing the PTT button).				
	NOTE: This is expected to be done via a				
40	suitable implementation dependent MMI.		Floor Doguest		
13	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	2	Р
14	The SS sends a Floor Granted message with	<	Floor Granted		
1.4	an acknowledgement required				
15	Check: Does the UE (MCPTT client) send a	>	Floor Ack	2	Р
	Floor Ack message in response to the Floor				
	Granted message?				
16	Check: Does the MCPTT Client provide floor	-	-	2	Р
	granted notification to the MCPTT User?				
1	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				

Release message Interview Interview Interview Interview 20 The SS sends a Floor Taken message with no acknowledgement required - Floor Taken - 21 Make the MCPTT User request to speak (e.g. pressing the PT button). - - - 22 Check: Does the UE (MCPTT client) send a statistic message with no acknowledgement required and Cause Code #255 - - - 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 - - - 2 24 Check: Does the MCPTT Client provide floor - acknowledgement required and Cause Code #255 - - - - 25 Make the MCPTT User request to speak (e.g pressing the PTT button). NOTE: This is sepacted to be done via a suitable implementation dependent MMI. - - Floor Request 2 26 Check: Does the MCPTT Client provide floor - message indicating that the Floor Request was age endicating that the Floor Request was age endicating that the Floor Request was age endicating that the Floor Request message? - - 2 27 The SS sends a Floor Queue Position Info - - 2 - 28 Check: Does the MCPTT Client provide floor relaxes - <						
Client.	17		-	-	-	-
18 The SS sends a Floor Revoke message with the rempted.		grants the floor to a higher priority MCPTT				
the Reject Cause set to #4 - Media Burst pre- empted.						
empted.	18		<	Floor Revoke	-	-
19 Check: Does the MCPTT Client send a Floor →> Floor Release 2 20 The SS sends a Floor Taken message with no acknowledgement required Floor Taken 21 Make the MCPTT User request to speak (e.g., pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. 22 Check: Does the UE (MCPTT Client) send a floor Deny message with no acknowledgement required and Cause Code 4 Floor Request message? 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code 4 Floor Request 2 24 Check: Does the MCPTT Client provide floor 4 25 Make the MCPTT Client provide floor 4 26 Check: Does the UE (MCPTT Client provide floor 4 26 Check: Does the UE (MCPTT Client provide floor 4 Floor Request 2 27 The SS sends a Floor Queue Position Info 7 28 Check: Does the MCPTT Client provide floor 4 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. <t< td=""><td></td><td>the Reject Cause set to #4 - Media Burst pre-</td><td></td><td></td><td></td><td></td></t<>		the Reject Cause set to #4 - Media Burst pre-				
Release message - 20 The SS sends a Floor Taken message with no acknowledgement required - 21 Make the MCPTT Uer request to speak (e.g., pressing the PTT button), MOTE: This is expected to be done via a suitable implementation dependent MMI. - 22 Check: Does the UE (MCPTT Client) send a relation to the MCPTT User? - 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 - 24 Check: Does the MCPTT Client provide floor deny notification to the MCPTT User? - 25 Make the MCPTT User request to pseak (e.g., pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. - 26 Check: Does the UCMCPTT Client provide floor reguest message? - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued - - 28 Check: Does the UCMCPTT Client provide floor request message indicating that the Floor Request was queued - - 29 The SS sends a Floor Queue Position Info message indicating that the Floor Request message? - - 20 Check: Does the UCPTT Client provide floor request was queued - - - 20 Check: Does the UE (MCPTT Client provide floor reque						
20 The SS sends a Floor Taken message with no acknowledgement required Floor Taken 21 Make the MCPTT User request to speak (e.g. pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. 22 Check: Does the UE (MCPTT Client) send a floor Request message? Floor Request 2 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 2 24 Check: Does the UE (MCPTT Client provide floor - acknowledgement required and Cause Code #255 2 25 Make the MCPTT User request to speak (e.g. pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. 26 Check: Does the UE (MCPTT Client provide floor request was gueed Floor Request message? Floor Queue Position Info 27 The SS sends a Floor Queue Position Info - - 2 2 28 Check: Does the UE (MCPTT Client provide floor request was gueed - - - 2 29 Make the MCPTT User request the current position in the queue - - - -	19	Check: Does the MCPTT Client send a Floor	>	Floor Release	2	Р
20 The SS sends a Floor Taken message with no acknowledgement required Floor Taken 21 Make the MCPTT User request to speak (e.g. pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. 22 Check: Does the UE (MCPTT Client) send a floor Request message? Floor Request 2 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 2 24 Check: Does the UE (MCPTT Client provide floor - acknowledgement required and Cause Code #255 2 25 Make the MCPTT User request to speak (e.g. pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. 26 Check: Does the UE (MCPTT Client provide floor request was gueed Floor Request message? Floor Queue Position Info 27 The SS sends a Floor Queue Position Info - - 2 2 28 Check: Does the UE (MCPTT Client provide floor request was gueed - - - 2 29 Make the MCPTT User request the current position in the queue - - - -		Release message.				
acknowledgement required - 21 Make the MCPTT User request to speak (e.g., pressing the PTT button). - 22 The KS sended to be done via a suitable implementation dependent MMI. - 22 Check: Does the UE (MCPTT client) send a case Code acknowledgement required and Cause Code acknowledgement required acknowledgement required acknowledgement required acknowledgement speak (e.g., acknowledgement required acknowledgement MMI. - 26 Check: Does the UCPTT Client provide floor request message? - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued acknowledgement MMI. - - 28 Check: Does the UCPTT Client provide floor request queued regords acknowledgement MMI. - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 20 Make the MCPTT Use	20		<	Floor Taken	-	-
21 Make the MCPTT User request to speak (e.g., pressing the PT button), NOTE: This is expected to be done via a suitable implementation dependent MM.	-					
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Request message? 2 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code > Floor Request 2 24 The SS sends a Floor Deny message with no acknowledgement required and Cause Code > Floor Request 2 25 Make the MCPTT Client provide floor - - - 2 26 Check: Does the UE (MCPTT Client provide floor - - - - 26 Make the MCPTT User request poseak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Request 2 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was gueued response notification to the MCPTT User? - - - 28 Check: Does the MCPTT Client provide floor - - - 2 30 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 30 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - -	21		-	-	-	-
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Request 2 22 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Deny - 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 - Floor Deny - 24 Check: Does the MCPTT User request to speak (e.g. pressing the PTT buton). - - - 25 Make the MCPTT User request to speak (e.g. pressing the PTT buton). - - - 26 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued - - Floor Queue Position Info 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user ; NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 30 Check: Does the UE (MCPTTT client) send a Floor Queue Position Request and end be						
suitable implementation dependent MMI. > Floor Request 2 22 Check: Does the UE (MCPTT client) send a > Floor Request 2 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 2 24 Check: Does the MCPTT Client provide floor deny notification to the MCPTT User? - - - 2 25 Make the MCPTT User requests to speak (e.g - - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request message? - - - - 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - - - 2 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 30 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - -						
22 Check: Does the UE (MCPTT client) send a > Floor Request message? 2 23 The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255 Floor Deny - 24 Check: Does the MCPTT Client provide floor deny notification to the MCPTT User? - - 2 255 Make the MCPTT User request to speak (e.g. pressing the PTT button). - - - 26 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued - - Floor Request message? 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 29 Make the MCPTT User request the current position in the queue (e.g. releasing the PTT buton). - - 30 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - 31 The SS sends a Floor Queue Position Request as a suitable implementation dependent MMI. - - 32 Make the MCPTT User reques						
Floor Request message?	22		>	Floor Request	2	Р
23 The SS sends a Floor Deny message with no achowledgement required and Cause Code #255			-		-	•
acknowledgement required and Cause Code	23		<	Floor Denv		-
#255 -	20			Theor Deny		
24 Check: Does the MCPTT Client provide floor - - - 2 25 Make the MCPTT User request to speak (e.g., pressing the PTT button). - - - - 26 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request message? - - Floor Request message? 2 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT User request dueued response notification to the MCPTT T. This is expected to be done via a suitable implementation dependent MMI. - - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request and end being in the queue (e.g. releasing the PTT button) - - - - 31 The SS sends a Floor Queue - - Floor Queue Position Info - - 32 Make the MCPTT User request to cancel the pleueu (e.g. releasing the PTT button) - - - - 33 Ch						
deny notification to the MCPTT User? - 25 Make the MCPTT User request to speak (e.g., pressing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. - 26 Check: Does the UE (MCPTT client) send a Floor Request message? > 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued > 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - 29 Make the MCPTT User request the current position in the queue - 29 Make the MCPTT User request the current position in the queue - 30 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - 30 Check: Does the UE (MCPTT client) send a floor Queue Position Request 2 10 The SS sends a Floor Queue - - 31 The SS sends a Floor Queue - - 32 Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - 33 </td <td>24</td> <td></td> <td></td> <td></td> <td>2</td> <td>Р</td>	24				2	Р
25 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - <t< td=""><td>24</td><td></td><td>-</td><td></td><td>2</td><td>ľ</td></t<>	24		-		2	ľ
pressing the PTT button). Provide the provide to be done via a suitable implementation dependent MMI. Provide the UE (MCPTT client) send a Floor Request message? Provide the UE (MCPTT client) send a floor Queue Position Info Provide the UE (MCPTT client) send a gueued Provide the MCPTT client provide floor request queue dresponse notification to the MCPTT user? Provide the MCPTT Client provide floor request queued response notification to the MCPTT user? Provide the MCPTT User request the current position in the queue MCPTT User request the current position in the queue MCPTT User request the current position in the queue MCPTT User request to be done via a suitable implementation dependent MMI. Provide the MCPTT User request to cancel the Floor Queue Position Request Queue Position Request a suitable implementation dependent MMI. Provide the U (MCPTT Client) send a suitable implementation dependent MMI. Provide the UE (MCPTT User request to cancel the Floor Queue Position Request to cancel the Floor Request and end being in the queue (e.g., releasing the PTT button) Provide the QUE (MCPTT Client) send a suitable implementation dependent MMI. Provide the UE (MCPTT Client) send a suitable implementation dependent MMI. Provide the Client Send a floor Queue Position Request QUE (e.g., releasing the PTT button) Provide the QUE (MCPTT Client) send a suitable implementation. Provide the QUE (MCPTT Client) send a suitable implementation. Provide the QUE (MCPTT Client) send a suitable implementation. Provide the QUE (MCPTT Client) send a suitable implementation. Provide the QUE (MCPTT Client) send a suitable implementation. Provide the QUE (MCPTT Client) send a suitatable implementation. Provid	25		_	+		_
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Request 2 26 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Queue Position Info message indicating that the Floor Request was queued > Floor Queue Position Info 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - - 2 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? - Floor Queue Position Request 2 31 The SS sends a Floor Queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 33 Check: Does the UE (MCPTT client) send a Floor Request and end being in the queue (e.g. releasing the PTT button) - - - 33 Check: Does the UE (MCPTT dlient) send a Floor Release message to cancel the queue position? - - - 4 Floor Release 2 - - - 34	20		-		-	-
suitable implementation dependent MMI. > Floor Request 2 26 Check: Does the UE (MCPTT client) send a queued message indicating that the Floor Request was queued response notification to the MCPTT user? > Floor Queue Position Info - 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - - 2 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? - - - 31 The SS sends a Floor Queue to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 33 Check: Does the UE (MCPTT client) send a Floor Request an acknowledgement to the Floor Release message to cancel the queue position? - - - 4 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "low relea						
26 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 27 The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued <						
Floor Request message?	20			Elear Derweet		
27 The SS sends a Floor Queue Position Info	20		>	Floor Request	2	Р
message indicating that the Floor Request was queued - 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - NOTE: This is expected to be done via a suitable implementation dependent MMI. - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? -> 31 The SS sends a Floor Queue <	07			Elear Oueue Desition Infe		
queued - 28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > 31 The SS sends a Floor Queue <> 32 Make the MCPTT User request to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > 4 Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. > 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - 34a1 The SS sends a Floor Ack message Floor Request message? - 35 Make the M	21		<	Floor Queue Position Info	-	-
28 Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? - - 2 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 31 Check: Does the UE (MCPTT client) send a Floor Queue Position Info - - 32 Make the MCPTT User request to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) - - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? - - 4 Floor Release message to cancel the queue position? - - - 5 Make the MCPTT User requests an acknowledgement to the Floor Release message. - - 34a1 The SS sends a Floor Ack message - - - 35 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
request queued response notification to the MCPTT user? request queued response notification to the MCPTT user? 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > 31 The SS sends a Floor Queue <> 32 Make the MCPTT User request to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation, the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - 34a1 The SS sends a Floor Ack message message? - - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - 36 Check: Does the UE (MCPTT client) send a floor Request message? - - - Floor Ack - - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button)					0	_
MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? - Floor Queue Position Request 2 31 The SS sends a Floor Queue <	28		-	-	2	Р
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > Floor Queue Position Request 2 31 The SS sends a Floor Queue <						
suitable implementation dependent MMI. - - 29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > Floor Queue Position Request message? 2 31 The SS sends a Floor Queue <						
29 Make the MCPTT User request the current position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
position in the queue NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Queue Position Request 2 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > Floor Queue Position Request 2 31 The SS sends a Floor Queue <						
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Queue Position Request 2 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > Floor Queue Position Request 2 31 The SS sends a Floor Queue <	29		-	-	-	-
suitable implementation dependent MMI. > Floor Queue Position Request 2 30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request > Floor Queue Position Request 2 31 The SS sends a Floor Queue > Floor Queue Position Info - 32 Make the MCPTT User request to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message message. - - - - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 36 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - 36 Check: Does the UE (MCPTT client) send a Floor Request message?						
30 Check: Does the UE (MCPTT client) send a Floor Queue Position Request message? > Floor Queue Position Request 2 31 The SS sends a Floor Queue <						
Floor Queue Position Request message?						
31 The SS sends a Floor Queue <	30		>	Floor Queue Position Request	2	Р
32 Make the MCPTT User request to cancel the Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message suitable implementation dependent MMI. - - - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 36 Check: Does the UE (MCPTT client) send a Floor Request message? - - Floor Request 2 37 The SS sends a Floor Queue Position Info <> Floor Queue Position Info - -					_	
Floor Request and end being in the queue (e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI			<	Floor Queue Position Info	-	-
(e.g. releasing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Release 2 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message suitable implementation) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 36 Check: Does the UE (MCPTT client) send a Floor Request message? - - Floor Request 2 37 The SS sends a Floor Queue Position Info <	32	Make the MCPTT User request to cancel the	-	-	-	-
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message message. <						
suitable implementation dependent MMI. > Floor Release 2 33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message message <						
33 Check: Does the UE (MCPTT client) send a Floor Release message to cancel the queue position? > Floor Release 2 - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 36 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 37 The SS sends a Floor Queue Position Info <						
Floor Release message to cancel the queue position? - - - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - 34a1 The SS sends a Floor Ack message <	ļ	suitable implementation dependent MMI.	ļ		\downarrow \downarrow	_
position? - EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - 34a1 The SS sends a Floor Ack message <	33		>	Floor Release	2	Р
- EXCEPTION: Step 34a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 34a1 The SS sends a Floor Ack message message. <						
that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message34a1The SS sends a Floor Ack message<						
"lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - 34a1 The SS sends a Floor Ack message <	-		-	-	-	-
that take place if the UE requests an acknowledgement to the Floor Release message. - - 34a1 The SS sends a Floor Ack message Floor Ack - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 36 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 37 The SS sends a Floor Queue Position Info <						
acknowledgement to the Floor Release message. - Floor Ack - 34a1 The SS sends a Floor Ack message <						
message. - Floor Ack - 34a1 The SS sends a Floor Ack message Floor Ack - 35 Make the MCPTT User request to speak (e.g. pressing the PTT button) - - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 36 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 37 The SS sends a Floor Queue Position Info <						
34a1 The SS sends a Floor Ack message <		-				
35 Make the MCPTT User request to speak (e.g. pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. - <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
pressing the PTT button) NOTE: This is expected to be done via a suitable implementation dependent MMI. 36 Check: Does the UE (MCPTT client) send a Floor Request message? 37 The SS sends a Floor Queue Position Info			<	Floor Ack	-	-
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Request 2 36 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 37 The SS sends a Floor Queue Position Info <	35		-	-	-	-
suitable implementation dependent MMI.						
36 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 2 37 The SS sends a Floor Queue Position Info <						
Floor Request message? Floor Queue Position Info 37 The SS sends a Floor Queue Position Info <						
37 The SS sends a Floor Queue Position Info < Floor Queue Position Info -	36		>	Floor Request	2	Р
message indicating that the Floor Request was	37	The SS sends a Floor Queue Position Info	<	Floor Queue Position Info	-	-
		message indicating that the Floor Request was				
queued		queued				

38	Check: Does the MCPTT Client provide floor	-	-	2	Р
	request queued response notification to the				
	MCPTT user?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
39	The SS sends a Floor Granted message with	<	Floor Granted		_
55	5	`	Tiber Granted	_	_
40	no acknowledgement required			-	
40	Check: Does the MCPTT Client provide a floor	-	-	2	Р
	granted notification to the MCPTT user?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
41	Make the MCPTT User indicate end of talking	-	-	-	-
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
42	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р
42		>	TIOUI IVelease	2	I
	Floor Release message?				
-	EXCEPTION: Step 43a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
43a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
-541	response to the Floor Release message	`		_	
4.4	The CC condo o Floor Idle message				
44	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
	acknowledgement required				
45	The SS sends a SIP BYE message to end the	<	SIP BYE	-	-
	On-demand Pre-arranged Group Call				
46	Check: Does the UE (MCPTT client) respond	>	SIP 200 (OK)	3	Р
	to the SIP BYE message with a SIP 200 (OK)				
	message?				
_	EXCEPTION: SS releases the E-UTRA	-	-	-	
-		-	-	-	-
47	connection.			+ +	
47	Make the MCPTT User request the	-	-	-	-
	establishment of an MCPTT on-demand pre-				
	arranged group call, automatic				
	commencement mode, with explicit request for				
	floor control (implicit floor control).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
	EXCEPTION: The E-UTRA/EPC actions which		-		
-		-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
48	Check: Does the UE (MCPTT client) send an	>	SIP INVITE	1	Р
	initial SIP INVITE request requesting the				
	establishment of an MCPTT on-demand pre-				
	arranged group call, automatic				
	commencement mode, with explicit request for				
L	floor control (implicit floor control)?				
49	The SS sends SIP 100 Trying	<	SIP 100 Trying	-	-
50	The SS sends SIP 180 Ringing	<	SIP 180 Ringing	-	-
51	The SS sends SIP 200 (OK) message	<	SIP 200 (OK)	-	-
	indicating that it has accepted the SIP INVITE				
	request				
52	Check: Does the UE (MCPTT client) send a	>	SIP ACK	1	Р
52		>			Ľ
50	SIP ACK in response to the SIP 200 (OK)				
53	Check: Does the UE (MCPTT client) notify the	-	-	-	-
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.			1	
1		1			

54 Make the MCPT User indicate end of taiking (e.g., releasing the PT buton), NOTE: This is expected to be done via a suitable implementation dependent MM. > Floor Release 2 P 55 Check: Does the UE (MCPTT client) send a that depends on the UE implementation, the 'that depends the UE implementation dependent MM. -						
NOTE: This is expected to be done via a suitable implementation dependent MML. -> Floor Release 2 P 55 Check: Does the UE (MCPTT client) send a Floor Release message? -> Floor Release message? -> Floor Release message? -> Floor Release 2 P 56 EXCEPTION: Step 56at describes behaviour that take place (if the UE requests an each owledgement to the Floor Release message - <	54	Make the MCPTT User indicate end of talking				
suitable implementation dependent MMI. →> Floor Release 2 P 50 Check: Does the UE (MCPTT client) send a field depends on the UE implementation; the "over case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message -						
55 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 2 P • EXCEPTION: Step 561 describes behaviour that depends on the UE implementation; the "were case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - - 5641 The SS sends a Floor Ack message with no acknowledgement required - Floor Taken - - 58 The SS sends a Floor Taken message with no acknowledgement required - Floor Taken - - 59 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call to MCPTT Emergency Group Call with explicit requery. In the control (mplicit floor control). - - - - 60 Oheck Does the UE (MCPTT client) send a suitable implementation dependent MM. -						
Floor Release message? - EXCEPTION: Step 56d describes behaviour that depends on the UE implementation; the "over case letter identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - 5611 The SS sends a Floor Ack message in response to the Floor Release message - - 652 The SS sends a Floor Taken message with no acknowledgement to traken message with no acknowledgement required - - 69 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call to MCPTT Emergency Group Call whe splicit request for floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MML an emergency call with implicit floor control? - - 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message to upgrade the call to an emergency call with implicit floor control? - SIP 200 (OK) - 62 Make the MCPTT User indicate end of talking (e.g. releasing the YT burr indicate end of talking the the MCPTT User indicate end of talking the the the MCPTT Us		suitable implementation dependent MMI.				
- EXCEPTION: Step 56at describes behaviour -	55	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р
- EXCEPTION: Step 56at describes behaviour -		Floor Release message?				
that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - 561 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 67 The SS sends a Floor Taken message with no acknowledgement required - Floor Idle - 68 The SS sends a Floor Taken message with no acknowledgement required - Floor Taken - 59 Make the MCPTT Lever request upgrade of the ongoing On-Demand Pre-arranged Group Call - - - 60 Check Does the UE (MCPTT Clent) send a suitable implementation dependent MM. -> SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message SIP re-INVITE message - - 62 Make the MCPTT User indicate and of talking (e OF releasing the PT button). -> SIP re-INVITE 4 P 63 The SS sends a SIP 200 (OK) message - - - 641 The SS sends a Floor Ack message with no acknowledgement to dependent MM. - - - 65 The SS sends a Floor Release message <t< td=""><td>-</td><td></td><td>-</td><td>-</td><td>-</td><td>-</td></t<>	-		-	-	-	-
"lower case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - - 56at The SS sends a Floor Ack message with no acknowledgement equired. - Floor Ack - - 57 The SS sends a Floor Taken message with no acknowledgement equired. - Floor Taken - - 58 The SS sends a Floor Taken message with no acknowledgement equired. - Floor Taken - - 59 Make the MCPTT User request upgrade of the origoing On-Demand Pre-arranged Group Call - - - - 60 Check: Does the UE (MCPTT cleint) send a suitable implementation dependent MML - - - - 61 The SS sends a SIP 200 (OK) message indicating that is has accepted th SIP re- INVITE message - SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 63 Check: Does the UE (MCPTT Cleint) send a suitable implementation dependent MML - - - - 64 Recease the Sing a discoscibes behavio						
that take place if the UE requests an acknowledgement to the Floor Release message. - F6a1 The SS sends a Floor Ack message in response to the Floor Release message. - F0 The SS sends a Floor Taken message with no acknowledgement required acknowledgement required for acknowledgement required for acknowledgement required for acknowledgement required for the explore the explore the MCPT Lever request upgrade of the ongoing On-Demand Pre-arranged Group Call to NCPT There request for floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 60 Chock: Does the UE (MCPTT client) send a scepted the SIP re-INVITE message to upgrade the Call to an emergency call with implicit floor control? - SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message in indicate end of talking (e.g. releasing the PTT butron). Not TE: This is expected to be done via a suitable implementation dependent MMI. - - - - 62 Make the MCPTT User indicate end of talking (e.g. release the MCPTT User indicate end of talking (e.g. release message?) -						
acknowledgement to the Floor Release message. 56a1 The SS sends a Floor Ack message in response to the Floor Release message. 57 The SS sends a Floor Idle message with no acknowledgement required. 58 The SS sends a Floor Taken message with no acknowledgement required. 59 Make the MCPTT User request upgrade of the orgoning On-Demand Pre-arranged Group Call to MCPTT Emergency Group Call with explicit request for floor control (implicit floor control). 60 Check: Does the UE (MCPTT client) send a suitable implementation dependent that. 61 The SS sends a SIP 200 (OK) message (
message. response to the Floor Release message in response to the Floor Release message Floor Ack 57 The SS sends a Floor Cale message with no acknowledgement required 58 The SS sends a Floor Taken message with no acknowledgement required 59 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call with explicit request Ior floor control (implicit floor control). 60 Check: Does the UE (MCPTT Client) send a sutable implementation dependent MM. > SIP re-INVITE 4 P 61 The SS sends a SIP 200 (CK) message SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PT button). SIP 200 (OK) - - 63 The SS sends a Floor Ack message in response to the Floor Release message? - - - 64 The SS sends a Floor Ack message with no acknowledgement to the Floor Release - - - 65 The SS sends a Floor Ack message with no acknowledgement to the Floor Release - - - <						
56a1 The SS sends a Floor Ack message in response to the Floor Release message - - - 57 The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 58 The SS sends a Floor Idle message with no acknowledgement required - Floor Taken - - 58 The SS sends a Floor Taken message with no acknowledgement required - - - - 59 Make the MCPTT Lererquest upgrade of the ongoing On-Demand Pre-aranged Group Call to mostly for control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. -		-				
response to the Floor Release message	5621		1	Eloor Ack		
57 The SS sends a Floor ldle message with no acknowledgement required Floor Taken - - 58 The SS sends a Floor Taken message with no acknowledgement required - Floor Taken - - 59 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call with explicit to control (mplicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 60 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. -> SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message. SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - Floor Release 5 P 63 Check: Does the UE (MCPTT client) send a suitable implementation; the Tower case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. -	50a i		_	TIOOT ACK	-	-
acknowledgement required - Floor Taken - 58 The SS sends a Floor Taken message with no acknowledgement required - - - 59 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call with explicit request for floor control (implicit floor control). -	57	The SS condo a Floor Idle manage with no		FloorIdle		
58 The SS sends a Floor Taken message with no acknowledgement required Floor Taken 59 Make the MCPTT User request upgrade of the one via a suitable implementation dependent MML. 60 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML. SIP re-INVITE 4 P 61 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML. > SIP re-INVITE 4 P 62 Make the MCPTT User indicate end of talking indicating that is has accepted the SIP re-INVITE message. SIP 200 (OK) - - 63 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML. > Floor Release 5 P 64 This is expected to be done via a suitable implementation dependent MML. - <td>57</td> <td></td> <td><</td> <td>Floor Idle</td> <td>-</td> <td>-</td>	57		<	Floor Idle	-	-
acknowledgement required	= 0	acknowledgement required				
59 Make the MCPTT User request upgrade of the ongoing On-Demand Pre-arranged Group Call with explicit request for floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. -	58		<	Floor Taken	-	-
ongoing On-Demand Pre-irranged Group Call to MCPTT Emergency Group Call with explicit request for floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP re-INVITE 4 P 60 Check: Does the UE (MCPTT client) send a SIP re-INVITE message to ugrade the call to an emergency call with implicit floor control? > SIP re-INVITE 4 P 61 The SS sends a SIP 200 (CK) message indicating that is has accepted the SIP re- INVITE message > SIP 200 (CK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 63 Check: Does the UE (MCPTT client) send a acknowledgement to the Floor Release -> Floor Release 5 P 64a1 The SS sends a Floor Ack message in response to the Floor Release message. <-						
to MCPTT Emergency Group Call with explicit request for floor control) (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP re-INVITE 4 P 60 Check: Does the UG(NPTT Cleint) send a an emergency call with implicit floor control) > SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message > SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 63 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - - 64 The SS sends a Floor Ack message in response to the Floor Release message - - - - - 65 The SS sends a Floor Ack message in response to the Floor release message - - - - - 66 The SS sends a Floor Ack message with no acknowledgement required - - - - - 67 The SS sends a Floor Client genesage with a acknowledgement required - - - - <td>59</td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>	59		-	-	-	-
request for floor control (mplicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP re-INVITE 4 P 60 Check: Does the UE (MCPTT client) send a nemergency call with implicit floor control? > SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message. SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 63 Check: Does the UE (MCPTT client) send a chock us a suitable implementation dependent MMI. - - - - 63 Check: Does the UE (MCPTT client) send a chock us a suitable implementation; the 'lower case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 641 The SS sends a Floor Idle message in response to the Floor Release message. - Floor Ack - - 65 The SS sends a Floor Idle message with a suitable implementation dependent MMI. - - - - 66 Make the MCPTT User requests on acknowledgement required - - - - -						
NOTE: This is expected to be done via a suitable implementation dependent MMI. > SIP re-INVITE 4 P 60 Check: Does the UE (MCPTT client) send a one mergency call with implicit floor control? > SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message indicate end of talking (e.g. releasing the PTT button). SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 63 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 63 Check: Does the UE (MCPTT client) send a release message? -> Floor Release 5 P 64a1 The SS sends a Floor Ack message in response to the Floor Release message - - - - - 65 The SS sends a Floor Ack message in response to the Floor Release message - - Floor Ack - - 66 Make the MCPTT User request to speak (e.g. response to the Floor Release message? - - - - - 67 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
suitable implementation dependent MMI.						
suitable implementation dependent MMI.						
60 Check: Does the UE (MCPTT client) send a one mergency call with implicit floor control? -> SIP re-INVITE 4 P 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message control? - SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 63 Check: Does the UE (MCPTT client) send a suitable implementation, the message? - - Floor Release 5 P 64 The SS sends a Floor Ack message in response to the Floor Release message - <						
SIP re-INVITE message to upgrade the call to an emergency call with implicit floor control? - 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - 63 Check: Does the UE (MCPTT client) send a Floor Release message? - 64 The SS sends a Floor Ack message in response to the Floor Release message? - 64a1 The SS sends a Floor Ack message in response to the Floor Release message. - 65 The SS sends a Floor Ack message in response to the Floor Release message. - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - 67 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - 68 The SS sends a Floor Ack message with no acknowledgement required - - 68 The SS sends a Floor Ack message with no acknowledgement required - - 69 The SS sends a Floor Ack message with no acknowledgement required - - 68 The SS sends a Floor Ack message with no acknowledgement req	60		>	SIP re-INVITE	4	Р
an emergency call with implicit floor control? - 61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message - SIP 200 (OK) - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 63 Check: Does the UE (MCPTT client) send a Floor Release message? - Floor Release 5 P 64 The SS sends a Floor Ack message in response to the Floor Release message - - - - 65 The SS sends a Floor Ide message with no acknowledgement required - - Floor Ack - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 67 Check: Does the UE (MCPTT client) send a Floor Request message? - - - - 68 The SS sends a Floor Cliently send a suitable implementation dependent MMI. - - - - 69 Check: Does the UE (MCPTT client) send a Floor Request message? - - - - - 69 Check: Does the UE (MCPTT client						
61 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message SIP 200 (OK) - - 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 63 Check: Does the UE (MCPTT client) send a Floor Release message? - Floor Release 5 P - that depends on the UE implementation; the "ower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <						
indicating that is has accepted the SIP re- INVITE message indicating that is has accepted the SIP re- INVITE message indicating that is has accepted the SIP re- INVITE message indicating the PTT button). 62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - indicating the PTT button). 63 Check: Does the UE (MCPTT client) send a Floor Release message? ->> Floor Release 5 P - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "ower case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - - - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 67 Check: Does the UE (MCPTT client) send a Floor Request message? - - - - - 68 The SS sends a Floor Granted message with an acknowledgement required - - Floor Ack 5 P 69 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI.	61		/	SIP 200 (OK)		
INVITE message Image: Second Seco	01		_	SII 200 (OR)	-	-
62 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 63 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 5 P - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - - 64a1 The SS sends a Floor Ack message in acknowledgement to the Floor Release message <						
(e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 63 Check: Does the UE (MCPTT client) send a Floor Release message? - - - 64 EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message. <	00					
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Release 5 P 63 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 5 P - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <	62		-	-		
suitable implementation dependent MMI. > Floor Release 5 P 63 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 5 P - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <						
63 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 5 P - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <						
Floor Release message? - - - EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <						
- EXCEPTION: Step 64a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. -	63		>	Floor Release	5	Р
that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.64a1The SS sends a Floor Ack message in response to the Floor Release message-Floor Ack-65The SS sends a Floor Idle message with no acknowledgement required<						
"lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message64a1The SS sends a Floor Ack message in response to the Floor Release message-Floor Ack-65The SS sends a Floor Idle message with no acknowledgement required-Floor Idle66Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI67Check: Does the UE (MCPTT client) send a Floor Request message?Floor Granted68The SS sends a Floor Granted message with an acknowledgement required-Floor Granted69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted messageFloor Ack5P70Check: Does the MCPTT User roycide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI	-	EXCEPTION: Step 64a1 describes behaviour	-	-	-	-
that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - 64a1 The SS sends a Floor Ack message in response to the Floor Release message <		that depends on the UE implementation; the				
acknowledgement to the Floor Release message. - Floor Ack - 64a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 65 The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 67 Check: Does the UE (MCPTT client) send a Floor Request message? - - - - - 68 The SS sends a Floor Granted message with an acknowledgement required - - Floor Request 5 P 69 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message > Floor Ack 5 P 70 Check: Does the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 72 Check: Does the UE (MCPTT client		"lower case letter" identifies a step sequence				
acknowledgement to the Floor Release message. - Floor Ack - 64a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 65 The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 67 Check: Does the UE (MCPTT client) send a Floor Request message? - - - - - 68 The SS sends a Floor Granted message with an acknowledgement required - - Floor Request 5 P 69 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message > Floor Ack 5 P 70 Check: Does the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 72 Check: Does the UE (MCPTT client						
message. response to the Floor Ack message in response to the Floor Release message Floor Ack 65 The SS sends a Floor Idle message with no acknowledgement required Floor Idle 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. 67 Check: Does the UE (MCPTT client) send a Floor Request message? Floor Request 5 P 68 The SS sends a Floor Granted message with an acknowledgement required 67 Check: Does the UE (MCPTT client) send a Floor Request message? Floor Granted - 68 The SS sends a Floor Granted message with an acknowledgement required > Floor Granted - 69 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message > Floor Ack 5 P 70 Check: Does the MCPTT User? - - - - - - - - - - - - - - - - -						
64a1 The SS sends a Floor Ack message in response to the Floor Release message Floor Ack - - 65 The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 67 Check: Does the UE (MCPTT client) send a Floor Granted message? > Floor Granted - - 68 The SS sends a Floor Granted message with an acknowledgement required > Floor Request 5 P 68 The SS sends a Floor Granted message with an acknowledgement required > Floor Ack 5 P 69 Check: Does the UE (MCPTT client) send a Suitable implementation dependent MMI. > Floor Ack 5 P 70 Check: Does the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 72 Check: Does		-				
response to the Floor Release message65The SS sends a Floor Idle message with no acknowledgement requiredFloor Idle-66Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI67Check: Does the UE (MCPTT client) send a Floor Request message?>Floor Request5P68The SS sends a Floor Granted message with an acknowledgement required>Floor Granted69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI>Floor Release5P	64a1		<	Floor Ack	-	-
65 The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 67 Check: Does the UE (MCPTT client) send a Floor Request message? > Floor Request 5 P 68 The SS sends a Floor Granted message with an acknowledgement required > Floor Request 5 P 69 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message > Floor Ack 5 P 70 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 72 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. > Floor Release 5 P	onar					
acknowledgement required-66Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI67Check: Does the UE (MCPTT client) send a Floor Request message?>Floor Request568The SS sends a Floor Granted message with an acknowledgement required>Floor Ack569Check: Does the UE (MCPTT client) send a Floor Ack message>Floor Ack570Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI>Floor Ack571Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI>Floor Release5	65			Eleor Idle		
66 Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - <t< td=""><td>05</td><td></td><td><</td><td></td><td>-</td><td>-</td></t<>	05		<		-	-
pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMIFloor Request5P67Check: Does the UE (MCPTT client) send a Floor Request message?>Floor Request5P68The SS sends a Floor Granted message with an acknowledgement required>Floor Granted69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI>Floor Release5P	00					
NOTE: This is expected to be done via a suitable implementation dependent MMI	00		-	-	-	-
suitable implementation dependent MMI>Floor Request5P67Check: Does the UE (MCPTT client) send a Floor Request message?>Floor Request5P68The SS sends a Floor Granted message with an acknowledgement required<						
67Check: Does the UE (MCPTT client) send a Floor Request message?>Floor Request5P68The SS sends a Floor Granted message with an acknowledgement required<						
Floor Request message?Floor Granted68The SS sends a Floor Granted message with an acknowledgement required<			ļ			
68The SS sends a Floor Granted message with an acknowledgement required<Floor Granted69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI5P71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a>Floor Release5P	67		>	Floor Request	5	Р
68The SS sends a Floor Granted message with an acknowledgement required<Floor Granted69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI5P71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a>Floor Release5P						
an acknowledgement required>Floor Ack5P69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI5P71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a>Floor Release5P	68		<	Floor Granted	-	-
69Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message>Floor Ack5P70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI5P71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a>Floor Release5P						
Floor Ack message in response to the Floor Granted message70Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI71Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI72Check: Does the UE (MCPTT client) send a>Floor Release5	69		>	Floor Ack	5	Р
Granted message - - 70 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P			-			
70 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 5 P 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P						
granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P	70		-	-	5	Р
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P	10		_		5	I
suitable implementation dependent MMI. - - 71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P						
71 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P						
(e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. 72 Check: Does the UE (MCPTT client) send a > Floor Release 5	74					
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Release 5 P 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P	/1		-	-	-	-
suitable implementation dependent MMI. Floor Release Floor Release 72 Check: Does the UE (MCPTT client) send a > Floor Release 5 P						
72 Check: Does the UE (MCPTT client) send a> Floor Release 5 P						
			ļ			
Floor Release message?	72		>	Floor Release	5	Р
		Floor Release message?				

-	EXCEPTION: Step 73a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
70-4					
73a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
	response to the Floor Release message				
74	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
	acknowledgement required				
75	Make the MCPTT User cancel the Emergency			-	-
	State.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
70			SIP re-INVITE	<u>^</u>	Р
76	Check: Does the UE (MCPTT client) send a	>	SIP re-INVITE	6	Р
	SIP re-INVITE message to cancel the				
	emergency state?				
77	The SS sends a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
	indicating that is has accepted the SIP re-				
	INVITE message				
78	Make the MCPTT User indicate end of talking	-	-		-
10		_		-	-
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
79	Check: Does the UE (MCPTT client) send a	>	Floor Release	5	Р
	Floor Release message?				
-	EXCEPTION: Step 80a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
80a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
	response to the Floor Release message				
81	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
	acknowledgement required				
82	Make the MCPTT User request upgrade of the	-	-	-	-
02	ongoing On-Demand Pre-arranged Group Call				
	to MCPTT Imminent Peril Group Call with				
	explicit request for floor control (implicit floor				
	control).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
83	Check: Does the UE (MCPTT client) send a	>	SIP re-INVITE	7	Р
	SIP re-INVITE message to upgrade the call to				
	an imminent peril call?				
84	The SS sends a SIP 200 (OK) message	<	SIP 200 (OK)		-
04		<u> </u>		-	-
	indicating that is has accepted the SIP re-				
	INVITE message				
85	Make the MCPTT User indicate end of talking	-	-		
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
86	Check: Does the UE (MCPTT client) send a	>	Floor Release	8	Р
	Floor Release message?			Ĭ	•
-	EXCEPTION: Step 87a1 describes behaviour	-	-	-	
-		-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
87a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
0141		1	1		
0741	response to the Floor Release message				
	response to the Floor Release message	٤	Floor Idle	-	-
88	response to the Floor Release message The SS sends a Floor Idle message with no acknowledgement required	<	Floor Idle	-	-

88 Make the MCPTT User request to speak (e.g., pressing the PTT button), NOTE: This is separated to be done via a suitable implementation dependent MM. -						
NOTE: This is expected to be done via a suitable implementation dependent MM. > Floor Request 8 P 90 Check: Does the UE (MCPTT client) send a> Floor Granted > Floor Ack 8 P 91 The SS sends a Floor Granted message with Floor Ack 8 P 92 Check: Does the UE (MCPTT Client) rovide floor Granted message? > Floor Ack 8 P 93 Check: Does the MCPTT User rovide floor Granted notification to the MCPTT User? - 8 P 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 95 Check: Does the UE (MCPTT Client) send a> Floor Release 8 P 96 Floor Release message? - - - - 96 Check: Does the UE (MCPTT Client) send a> Floor Release 8 P 97 The SS send a Floor Ack message in response to the Floor Release - - - 98 The SS send a Floor Ack message in response to the Floor Release - - - </td <td>89</td> <td>Make the MCPTT User request to speak (e.g.</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>	89	Make the MCPTT User request to speak (e.g.	-	-	-	-
suitable implementation dependent MMI. → Floor Request 8 P 90 Check: Does the UE (MCPTT client) send a an acknowledgement required → Floor Granted -> 91 The SS sends a Floor Granted message with an acknowledgement required -> Floor Ack 8 P 92 Check: Does the UE (MCPTT client) send a granted message? -> Floor Ack 8 P 93 Check: Does the UE (MCPTT Client) provide floor granted nollication to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT User) - - - - 95 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - - - 96 The SS sends a Floor Ack message in ressage. -> Floor Ack - - 97 The SS sends a Floor Ack message in ressage. - - - - 97 The SS sends a Floor Ack message in ressage. - - - - <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td></t<>						
90 Check: Does the UE (MCPTT client) send a Floor Request message? →> Floor Granted 8 P 91 The SS sends a Floor Granted message with an acknowledgement required →> Floor Ack 8 P 92 Check: Does the UE (MCPTT Client) rowide floor Granted message? →> Floor Ack 8 P 93 Check: Does the MCPTT User! rowide floor granted notification to the MCPTT User? - - 8 P 94 Make the MCPTT User indicate and of talking (e.g. releasing the PTT button). - - - - 95 Check: Does the UC (MCPTT client) rowide floor granted notification to the MCPTT User via a suitable implementation dependent MMI. - - - - 95 Check: Does the UC (MCPTT client) rowide floor is called to be done via a suitable implementation dependent MMI. - - - 95 Check: Does the UC (MCPTT client) rowide floor it hat depends on the UE implementation; the "response to the Floor Ack message in response to the Floor Ack message in that take place if the UE requests an acknowledgement to the Floor Release message. - - - 96 Theck: Stands a Floor Ack message in cancel the imminent Peri Istate. - - - - 97 The Stands a Floor Ack message in cancel the imminent Peri Istate. - - - - <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
Floor Request message? Floor Granted 91 The Ss sends a Floor Granted message with an acknowledgement required Floor Granted 92 Check. Does the UK (PCTT Client) send a message in response to the Floor Granted message? -> 93 Check. Does the UK (PCTT Client provide floor granted notification to the MCPTT User? - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - 95 Check. Does the UK (MCPTT Client) send a sutable implementation; the "wave case letter' identifies a step sequence that take place if the UL requests an acknowledgement to the Floor Release message. - - 95 Standa Floor Ack message with no acknowledgement caquired. - - - 96 Make the MCPTT User indicate below with a suitable implementation dependent MMI. - - - 97 The SS sends a Floor Ack message in exactor with a step sequence with a suitable glace if the UC requests an acknowledgement to the Floor Release message. - - - 97 The SS sends a Floor Ack message in exactor with a step sequence with a suitable implementation dependent MMI. - - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
91 The SS sends a Floor Granted message with or an acknowledgement required message? Floor Ack 8 P 92 Check, Does the UE (MCPTT Client) send a suitable implementation dependent MMI. 8 P 93 Check, Does the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 8 P 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - <td>90</td> <td></td> <td>></td> <td>Floor Request</td> <td>8</td> <td>Р</td>	90		>	Floor Request	8	Р
an acknowledgement required		Floor Request message?				
92 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? ->> Floor Ack 8 P 93 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - - 95 Check: Does the UE (MCPTT dient) send a SUItable implementation dependent MMI. - - - - - 95 Check: Does the UE (MCPTT dient) send a Floor Release message? - - - - - 96 The SS sends a Floor Ack message in resonge. - - - - - 96a1 The SS sends a Floor Ack message in resonge. - - Floor Ack - - 97 The SS sends a Floor Ack message in resonge. - - Floor Ack - - 98 Make the MCPTT User cancel the Imminent Parl State. - - - - - 98 Check Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 99 Check Does the UE (MCPTT Client) send a suitable implementation dependent MM	91		<	Floor Granted		
Floor Ack message in response to the Floor Granted message? - 8 P 33 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? - - 8 P 34 Make the MCPTT User indicate end of talking (e.g. releasing the PTD button). - - - - - 35 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - <						
Granted message? - - 8 93 Check: Does the MCPTT Client provide floor granted notification to the MCPT User? - - 8 P NOTE: This is expected to be done via a suitable implementation dependent MMI. -<	92	Check: Does the UE (MCPTT client) send a	>	Floor Ack	8	Р
93 Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - - 95 Check: Does the UE (MCPTT Client) send a Floor Release message? - - - - - - 96 Check: Does the UE (IMCPTT Client) send a response to the Floor Release message that take place if the UE requests an acknowledgement to the Floor Release message. - <td></td> <td>Floor Ack message in response to the Floor</td> <td></td> <td></td> <td></td> <td></td>		Floor Ack message in response to the Floor				
granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MM. 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - 95 Check: Does the UE (MCPTT client) send a Floor Release 8 P 95 Check: Does the UE (MCPTT client) send a Floor Release - - - 96 Check: Does the UE (MCPTT client) send a acknowledgement to the Floor Release message? - - - 97 The SS sends a Floor Ack message in response to the Floor Release message. - - - 96a1 The SS sends a Floor Ack message in response to the Floor Release message. - - - 97 The SS sends a Floor Ide message with no acknowledgement required. - - - 98 Make the MCPTT User cancel the Imminent Paril State. - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML - - - 90 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML		Granted message?				
granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MM. 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - 95 Check: Does the UE (MCPTT client) send a Floor Release 8 P 95 Check: Does the UE (MCPTT client) send a Floor Release - - - 96 Check: Does the UE (MCPTT client) send a acknowledgement to the Floor Release message? - - - 97 The SS sends a Floor Ack message in response to the Floor Release message. - - - 96a1 The SS sends a Floor Ack message in response to the Floor Release message. - - - 97 The SS sends a Floor Ide message with no acknowledgement required. - - - 98 Make the MCPTT User cancel the Imminent Paril State. - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML - - - 90 Check: Does the UE (MCPTT client) send a suitable implementation dependent MML	93	Check: Does the MCPTT Client provide floor	-	-	8	Р
suitable implementation dependent MMI. - - - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 95 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - Floor Release 8 P 96 Check: Does the UE (INCPTT client) send a acknowledgement to the Floor Release message. - </td <td></td> <td>granted notification to the MCPTT User?</td> <td></td> <td></td> <td></td> <td></td>		granted notification to the MCPTT User?				
suitable implementation dependent MMI. - - - - 94 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 95 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - Floor Release 8 P 96 Check: Does the UE (INCPTT client) send a acknowledgement to the Floor Release message. - </td <td></td> <td>NOTE: This is expected to be done via a</td> <td></td> <td></td> <td></td> <td></td>		NOTE: This is expected to be done via a				
94 Make the MCPTT User indicate end of talking (e.g. releasing the PT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 95 Check: Does the UE (MCPTT client) send a row case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - - 96 The SS sends a Floor Ack message in response to the Floor Idle message with no acknowledgement required. - - - - 97 The SS sends a Floor Idle message with no acknowledgement required. - - Floor Idle - 98 Make the MCPTT User cancel the Imminent Parl State. - - - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 90 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 91 The SS sends a SIP 200 (OK) - - - - - - 92 Check: Does the UE (MCPTT client) send a suitable implementation the floor cance with a suitable implementation, the floor cance with the SS sends a SIOP 200 (OK) - - -						
(e.g., releasing the PTT button),	94		-	-	-	-
NOTE: This is expected to be done via a suitable implementation dependent MMI. > Floor Release 8 P 95 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 96a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement required. - - - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - - 97 The SS sends a Floor Ack message in acknowledgement required. - Floor Idle - - 98 Make the MCPTT User cancel the Imminent Peril State. - - - - 99 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. > SIP re-INVITE 9 P 90 The SS sends a SIP 200 (K) message indicating that is has accepted the SIP re- INVTE message -> SIP 200 (OK) - - 100 The SS sends a SIP 200 (K) message indicating that is has accepted the SIP re- INVTE message -> Floor Release 8 P 102 Check: Does the UE (MCPTT Client) send a suitable implementation the pen	•					
suitable implementation dependent MMI. > Floor Release 8 P 95 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 96a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. -						
95 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 96a1 describes behaviour that depends on the UE implementation, the "lower case letter" (lower case letter") (lower case letter") (lower case letter") - - - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - - 97 The SS sends a Floor Ack message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Ack - - 98 Make the MCPTT User cancel the Imminent imment peril state? - - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 90 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message - SIP re-INVITE 9 P 101 Make the MCPTT User indicate end of talking (e.g. releasing the PT buttor). - - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation, the "lower case letter" identifies as tap sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
Floor Release message? - • EXCEPTION: Step 96a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 97 The SS sends a Floor Idle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - 98 Make the MCPTT User cancel the Imminent Peri State. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 99 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message - - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - - 103a The SS sends a Floor Ack message in that depace if the UE	95		>	Floor Release	8	Р
- EXCEPTION: Step 96at describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. -			-			-
that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 97 The SS sends a Floor Ack message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - 98 Make the MCPTT User cancel the Imminent Peri IState. - - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message to cancel the imminent peri Istate? - - - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - -	-		-	-	-	-
"lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - 97 The SS sends a Floor dle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - 98 Make the MCPTT User cancel the Imminent Peril State. - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - SIP re-INVITE 9 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - SIP 200 (OK) - - 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- invitable implementation, dependent MMI. - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation, the riower case letter' identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 102 Check: Does the UE (MCPTT client) send a response to the Floor Release message in acknowledgement to the Floor Release message. - - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - 96a1 The SS sends a Floor Ack message in response to the Floor Release message. - Floor Idle - 97 The SS sends a Floor Idle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - 98 Make the MCPTT User cancel the Imminent Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 99 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. - - SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message to cancel the imminent peril state? - SIP 200 (OK) - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
acknowledgement to the Floor Release message. - Floor Ack - 96a1 The SS sends a Floor Ack message in response to the Floor Release message. - Floor Ack - 97 The SS sends a Floor Idle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - 98 Make the MCPTT User cancel the Imminent Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 99 Check: Does the UE (MCPTT Client) send a SIP re-INVITE message to cancel the imminent peril state? - SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message - SIP 200 (OK) - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button), NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 102 Check: Does the UE (MCPTT client) send a Floor Release message. - - - - 103 The SS sends a Floor Ack message in resonse. - - - - - 103a The SS sends a Floor Ack message with no acknowledgement tequired <						
message. - Floor Ack - 96a1 The SS sends a Floor Ack message in response to the Floor Release message - - 97 The SS sends a Floor Idle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - - 98 Make the MCPTT User cancel the Imminent Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP relinViTE message - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 1033 The SS sends a Floor Ack message in response to the Floor Release message in tesponse to the Fl						
96a1 The SS sends a Floor Ack message in response to the Floor Release message - Floor Ack - - 97 The SS sends a Floor Ack message with no acknowledgement required. <-		-				
response to the Floor Release message	0651		1	Floor Ack		
97 The SS sends a Floor Idle message with no acknowledgement required. Floor indicator bit is D-Emergency Call - Floor Idle - - 98 Make the MCPTT User cancel the Imminent Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 99 Check: Does the UE (MCPTT client) send a SIP re-INVITE message to cancel the imminent peril state? - - SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message -	30a i		<		_	-
acknowledgement required. - Floor indicator bit is D-Emergency Call - 98 Make the MCPTT User cancel the Imminent Peril State. - 99 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - 99 Check: Does the UE (MCPTT client) send a siltable implementation dependent MMI. > 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - 102 Check: Does the UE (MCPTT client) send a suitable implementation; the rilower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - 103a The SS sends a Floor Ack message in ressage. - 104 The SS sends a Floor Ack message in ressage. - 105 Make the MCPTT User end the on-demand group call. - 106 Check: Does the UE (MCPTT Client) send a suitable implementation dependent MMI. -	07		1	Eloor Idle		
Floor indicator bit is D-Emergency Call - - 98 Make the MCPTT User cancel the Imminent Perif State. - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 99 Check: Does the UE (MCPTT Client) send a SIP re-INVITE message to cancel the imminent peril state? > SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message > SIP 200 (OK) - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 102 Check: Does the UE (MCPTT Client) send a Floor Release message? -> Floor Release 8 P 103a The SS sends a Floor Ack message in acknowledgement to the Floor Release message. - - - - 104 The SS sends a Floor Idle message with no acknowledgement required - - - - 103a The SS sends a Floor Idle message message - - Floor Ack - - 104 The SS sends a Floor Idle message with no acknowledgement required - -<	31		N ==		_	_
98 Make the MCPTT User cancel the Imminent Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI.						
Peril State. NOTE: This is expected to be done via a suitable implementation dependent MMI. 99 Check: Does the UE (MCPTT client) send a SIP re-INVITE message to cancel the imminent peril state? > SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message > SIP 200 (OK) - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? - Floor Release message? 8 P 102 Check: Does the UE (MCPTT client) send a Floor Release the step sequence that take place if the UE requests an acknowledgement to the Floor Release message -	00					
NOTE: This is expected to be done via a suitable implementation dependent MMI.	90		-	-	-	-
suitable implementation dependent MMI. > SIP re-INVITE 9 P 99 Check: Does the UE (MCPTT client) send a imminent peril state? > SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re-INVITE message SIP 200 (OK) - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). - - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation dependent MMI. - - - - 102 Check: Does the UE (MCPTT client) send a suitable implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 103a The SS sends a Floor Ack message in response to the Floor Release message. <						
99 Check: Does the UE (MCPTT client) send a SIP re-INVITE message to cancel the imminent peril state? > SIP re-INVITE 9 P 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message SIP 200 (OK) - - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? - Floor Release 8 P - that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - Floor Ack - - 103a The SS sends a Floor Idle message with no acknowledgement required - Floor Idle - - 104 The SS sends a Floor Idle message with no acknowledgement required - - Floor Idle - - 105 Make the MCPTT User end the on-demand group call. - - - - - 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. > SIP BYE 10						
SIP re-INVITE message to cancel the imminent peril state? SIP 200 (OK) - 100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message SIP 200 (OK) - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 103a The SS sends a Floor Ack message in 1 <	00			SID to INIV/ITE	0	D
imminent peril state?	99		>	SIFIE	9	Г
100 The SS sends a SIP 200 (OK) message indicating that is has accepted the SIP re- INVITE message <						
indicating that is has accepted the SIP re- INVITE message indicating that is has accepted the SIP re- INVITE message - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - 103a The SS sends a Floor Release message - Floor Ack - - 104 The SS sends a Floor Release message - - - - 105 Make the MCPTT User end the on-demand group call. - - - - - 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. - - SIP BYE 10 P	100		-	SID 200 (OK)		
INVITE message - 101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 103a The SS sends a Floor Ack message in response to the Floor Release message <	100		<	Sil 200 (OR)	-	-
101 Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - 103a The SS sends a Floor Ack message in response to the Floor Release message <						
(e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - - - - - 103a The SS sends a Floor Ack message in response to the Floor Release message. <	101					
NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 102 Check: Does the UE (MCPTT client) send a Floor Release message? > Floor Release 8 P - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message - - - - - 103a The SS sends a Floor Ack message in response to the Floor Release message <	101		-	-		
suitable implementation dependent MMI102Check: Does the UE (MCPTT client) send a Floor Release message?>Floor Release8P-EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message103aThe SS sends a Floor Ack message in response to the Floor Release message<						
102Check: Does the UE (MCPTT client) send a Floor Release message?>Floor Release8P-EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message103aThe SS sends a Floor Ack message in response to the Floor Release message<						
Floor Release message? - - EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. -	100			Eleor Polossa	0	П
- EXCEPTION: Step 103a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message. - <td< td=""><td>102</td><td></td><td>></td><td>FIUUL RELEASE</td><td>0</td><td>٢</td></td<>	102		>	FIUUL RELEASE	0	٢
that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release messageFloor Ack-103aThe SS sends a Floor Ack message in response to the Floor Release message<						
"lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release messageFloor Ack-103a 1The SS sends a Floor Ack message in response to the Floor Release message<	-		-	-	-	-
that take place if the UE requests an acknowledgement to the Floor Release message. -						
acknowledgement to the Floor Release message. - - - 103a The SS sends a Floor Ack message in response to the Floor Release message <						
message. Floor Ack 103a The SS sends a Floor Ack message in response to the Floor Release message <						
103a The SS sends a Floor Ack message in response to the Floor Release message Floor Ack - - 104 The SS sends a Floor Idle message with no acknowledgement required <		-				
1 response to the Floor Release message - - - 104 The SS sends a Floor Idle message with no acknowledgement required - - Floor Idle - - 105 Make the MCPTT User end the on-demand group call. -	100			Floor Ack		
104 The SS sends a Floor Idle message with no acknowledgement required <			<		-	-
acknowledgement required - 105 Make the MCPTT User end the on-demand group call. - NOTE: This is expected to be done via a suitable implementation dependent MMI. - 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. >						
105 Make the MCPTT User end the on-demand group call. -	104		<	Floor Idle	-	-
group call. NOTE: This is expected to be done via a suitable implementation dependent MMI. Implementation dependent MMI. 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. > SIP BYE 10 P	4.07					
NOTE: This is expected to be done via a suitable implementation dependent MMI. Implementation dependent MMI. 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. > SIP BYE 10 P	105		-	-	-	-
suitable implementation dependent MMI. Implementation dependent MMI. 106 Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call. > SIP BYE 10 P						
106 Check: Does the UE (MCPTT Client) send a > SIP BYE 10 P SIP BYE message to end the on-demand group call. > SIP BYE 10 P						
SIP BYE message to end the on-demand group call.	L					_
group call.	106		>	SIP BYE	10	Р
107 I he SS sends a SIP 200 (OK) <						
	107	The SS sends a SIP 200 (OK)	<	SIP 200 (OK)	-	-

-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				

6.1.1.1.3.3 Specific message contents

Table 6.1.1.1.3.3-1: SIP INVITE (steps 2, 48, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1			
Information Element	Value/remark	Comment	Reference	Condition

Table 6.1.1.1.3.3-2: MCPTT-INFO in SIP INVITE (Table 6.1.1.1.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	

Table 6.1.1.1.3.3-3: SIP 200 (OK) (step 46, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1							
Information Element	Value/remark	Comment	Reference	Condition			
Content-Type							
Content-Length	"0"						
Message-body	not present	No message body included - end of SIP message					

Table 6.1.1.1.3.3-4: SIP 200 (OK) (step 107, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length	"0"			
Message-body	not present	No message body included - end of SIP message		

Table 6.1.1.1.3.3-5: SIP re-INVITE (step 60, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2],	Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1 condition EMERGENCY-CALL							
Information Element	Value/remark	Comment	Reference	Condition				
Content-Type								
Content-Length								
Message-body								
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"							
MCPTT-Info	As described in Table 6.1.1.1.3.3-6							
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	Whether this is included or not depends on the MCPTT-Info 'alert-ind' in Table 6.1.1.1.3.3-6						
Location-info	As described in Table 6.1.1.1.3.3-7	Included only if 'alert- ind' is set to "true" in Table 6.1.1.1.3.3-6						

Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
alert-ind	Not present or when present any allowed value ("true" or "false")	Although alert indication is not explicitly indicated to be requested in the present test case 'any allowed value' is included to handle UEs which cannot request emergency without alert indication If the UE sends "true" then it shall include an application/vnd.3gpp.m cptt-location-info+xml MIME body in the SIP INVITE message Table 6.1.1.1.3.3-3		

Table 6.1.1.1.3.3-6: MCPTT-INFO in SIP re-INVITE	(Table 6.1.1.1.3.3-5)
--	-----------------------

Table 6.1.1.1.3.3-7: Location-info in SIP INVITE (Table 6.1.1.1.3.3-5)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.1-1 condition GROUP-CALL and EMERGENCY-CALL				
Information Element	Value/remark	Comment	Reference	Condition

Table 6.1.1.1.3.3-8: SIP re-INVITE (step 76, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.1.1.1.3.3-9				

Table 6.1.1.1.3.3-9: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.1.3.3-8)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
emergency-ind	"false"			
alert-ind	"false"			

Table 6.1.1.1.3.3-10: SIP re-INVITE (step 83, Table 6.1.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1 condition IMMPERIL-CALL				
Information Element	Value/remark	Comment	Reference	Condition

Table 6.1.1.1.3.3-11: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.1.3.3-10)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1 condition GROUP-CALL and IMMPERIL-CALL				
Information Element	Value/remark	Comment	Reference	Condition

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.1.1.1.3.3-13				

Table 6.1.1.1.3.3-12: SIP re-INVITE (step 99, Table 6.1.1.1.3.2-1)

Table 6.1.1.1.3.3-13: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.1.3.3-12)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
imminentperil-ind	"false"			

Table 6.1.1.1.3.3-14: Floor Request (steps 13, 22, 26, 36, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK

Table 6.1.1.1.3.3-15: Floor Request (step 67, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	"00010X000000000"	bit D=1 (Emergency call) bit F=X (Queueing supported) any value		

Table 6.1.1.1.3.3-16: Floor Request (step 90, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	"00001X000000000"	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value			

Table 6.1.1.1.3.3-17: Floor Granted (step 39, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Subtype	"00001"	Acknowledgment not required for Floor Granted message		
Floor Indicator				
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)		

Table 6.1.1.1.3.3-18: Floor Release (steps 9, 19, 33, 42, 55, 79, 102, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK

Table 6.1.1.1.3.3-19: Floor Release (steps 63, 72, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"00010X0000000000"	bit D=1 (Emergency call) bit F=X (Queueing supported) any value	

Table 6.1.1.1.3.3-20: Floor Release (steps 86, 95, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"00001X0000000000"	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value	

Table 6.1.1.1.3.3-21: Floor Idle (steps 11, 44, 57, 81, 104, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			
Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-22: Floor Idle (steps 65, 74, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			
Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"0001010000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"000011000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-23: Floor Idle (steps 88, 97, Table 6.1.1.1.3.2-1)

Table 6.1.1.1.3.3-24: Floor Granted (step 14, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK			
Information Element	Value/remark	Comment	Condition
Subtype	"10001"	Acknowledgment is required for Floor Granted message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-25: Floor Granted (step 68, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Subtype	"10001"	Acknowledgment is required for Floor Granted message		
Floor Indicator				
Floor Indicator	"0001010000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)		

Table 6.1.1.1.3.3-26: Floor Granted (step 91, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Subtype	"10001"	Acknowledgment is required for Floor Granted message		
Floor Indicator				
Floor Indicator	"0000110000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)		

Information Element	Value/remark	Comment	Condition
SSRC of floor participant	"10000000 11111111 00000000 00000001"		
Source			
Source	"0"	The floor participant is the source	
Message Type			
Message Type	"10001"	Floor Ack message for Floor Granted message which requested acknowledgment	

Table 6.1.1.1.3.3-27: Floor Ack (steps 15, 69, 92, Table 6.1.1.1.3.2-1)

Table 6.1.1.1.3.3-28: Floor Revoke (step 18, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.8-1			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-29: Floor Taken (steps 20, 58, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK			
Information Element	Value/remark	Comment	Condition
Subtype	"00010"	Acknowledgment not required for Floor Taken message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-30: Floor Deny (step 23, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition	ON-NETWORK		
Information Element	Value/remark	Comment	Condition
Subtype	"00011"	Acknowledgment not required for Floor Deny message	
Reject Cause			
Reject Cause	"255"	Cause #255 - Other reason	
Reject Phrase	"Other reason"		
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Information Element	Value/remark	Comment	Condition
Subtype	"01001"	Acknowledgment not required for Floor Queue Position Info message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.1.3.3-31: Floor Queue Position Info (steps 27, 31, 37, Table 6.1.1.1.3.2-1)

Table 6.1.1.1.3.3-32: Floor Queue Position Request (step 30, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.9-1 condition ON-NETWORK

6.1.1.2 On-network / On-demand Pre-arranged Group Call / Automatic Commencement Mode / Floor Control / Upgrade to Emergency Group Call / Cancel Emergency State / Upgrade to Imminent Peril Group Call / Cancel Imminent Peril State / Client Terminated (CT)

6.1.1.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT } ensure that {

when { the SS (MCPTT Server) initiates an On-demand Pre-arranged group call with Automatic Commencement Mode and implicit floor control

then { UE (MCPTT Client) responds by sending a SIP 200 (OK) message and after indication from the MCPTT Server that the call was established notifies the user } }

(2)

with { UE (MCPTT Client) having an ongoing MCPTT On-demand Pre-arranged Group Call with Automatic Commencement Mode }

ensure that {

when { the MCPTT User (MCPTT Client) engages in communication with the invited MCPTT User(s) } then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server (Floor Request during a talk burst, Floor granting/release, Floor idle, Floor deny, Floor taken/revoked, Floor request queued and queue handling) } }

(3)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode }

ensure that {

when { the MCPTT User (MCPTT Client) wants to terminate the ongoing MCPTT Group Call } then { UE (MCPTT Client) sends a SIP BYE request and leaves the MCPTT session } }

(4)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode } ensure that {

when { the SS (MCPTT Server) upgrades the ongoing MCPTT Group Call to an MCPTT Emergency Group Call with floor control }

3GPP TS 36.579-2 version 14.3.0 Release 14

91

then { UE (MCPTT Client) responds to the SIP re-INVITE request with a SIP 200 (OK) response and considers the call as being upgraded to an Emergency Group Call (emergency group call state = "MEGC 3: emergency-call-granted") } } (5) with { UE (MCPTT Client) in an upgraded Emergency Group Call } ensure that { when $\{$ the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) $\}$ then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server } } (6) with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode which was upgraded to an Emergency Group Call } ensure that { when { the SS (MCPTT Server) cancels the ongoing MCPTT Emergency state } then { UE (MCPTT Client) responds to the SIP re-INVITE request with a SIP 200 (OK) and considers the emergency condition cancelled } (7)with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode } ensure that { when { the SS (MCPTT Server) upgrades the ongoing MCPTT Group Call to an MCPTT Imminent Peril Group Call with floor control } then { UE (MCPTT Client) responds to the SIP re-INVITE request with a SIP 200 (OK) response and considers the call as being upgraded to an cImminent Peril Group Call (imminent peril group call state = "MIG 2: in-progress") } } (8) with { UE (MCPTT Client) in an upgraded Imminent Peril Group Call } ensure that { when { the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) } then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server } } (9) with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic Commencement Mode which was upgraded to an Imminent Peril Group Call } ensure that { when { the SS (MCPTT Server) cancels the ongoing MCPTT Imminent Peril state } then { UE (MCPTT Client) responds to the SIP re-INVITE request with a SIP 200 (OK) and considers the imminent peril condition cancelled } ł (10)with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Automatic

Commencement Mode }

ensure that {
 when { the SS (MCPTT Server) needs to terminate the ongoing MCPTT Group Call }
 then { the SS (MCPTT Server) sends a SIP BYE request and the UE (MCPTT Client) responds with a
 SIP 200 (OK) and leaves the MCPTT session }
 }
}

6.1.1.2.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.1.1.2.1.2, 6.2.2, 6.2.3.1.2, 6.2.6, 10.1.1.2.1.6, 6.2.5.1, 10.1.1.2.3.1, 10.1.1.2.3.3 and TS 24.380, clauses 6.2.4.5.3, 6.2.4.3.5, 6.2.4.4.2, 6.2.4.5.4, 6.2.4.4.4, 6.2.4.4.9, 6.2.4.9.9, 6.2.4.9.6, 6.2.4.9.4. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.2]

In the procedures in this subclause:

- 1) emergency indication in an incoming SIP INVITE request refers to the <emergency-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
- 2) imminent peril indication in an incoming SIP INVITE request refers to the <imminentperil-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body.

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

- 1) may reject the SIP INVITE request if either of the following conditions are met:
 - a) MCPTT client does not have enough resources to handle the call; or
 - b) any other reason outside the scope of this specification;

and skip the rest of the steps;

- 2) if the SIP INVITE request is rejected in step 1), shall respond toward participating MCPTT function either with appropriate reject code as specified in 3GPP TS 24.229 [4] and warning texts as specified in subclause 4.4.2 or with SIP 480 (Temporarily unavailable) response not including warning texts if the user is authorised to restrict the reason for failure and skip the rest of the steps of this subclause;
- NOTE: If the SIP INVITE request contains an emergency indication or imminent peril indication, the MCPTT client can by means beyond the scope of the present document choose to accept the request.
- shall check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 4) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - ii) should display the MCPTT group identity of the group with the emergency condition contained in the <mcptt-calling-group-id> element; and
 - iii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - b) shall set the MCPTT emergency group state to "MEG 2: in-progress";
 - c) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - d) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable"; otherwise
- 5) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT imminent peril group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT imminent peril group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) should display the MCPTT group identity of the group with the imminent peril condition contained in the <mcptt-calling-group-id> element; and

- b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";
- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode, yet the invited MCPTT client allows the call to be answered with automatic commencement mode;
- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and
- 4) if included in the SDP offer, shall include the media-level section of the offered media-floor control entity consisting of:
 - a) an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12; and
 - b) 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14.

[TS 24.379, clause 6.2.3.1.2]

When performing the automatic commencement mode procedures, the MCPTT client shall follow the procedures in subclause 6.2.3.1.1 with the following clarification:

- The MCPTT client may include a P-Answer-State header field with the value "Confirmed" as specified in IETF RFC 4964 [34] in the SIP 200 (OK) response.

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 10.1.1.2.1.6]

This subclause covers both on-demand session and pre-established sessions.

Upon receipt of a SIP re-INVITE request the MCPTT client:

- if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user the MCPTT ID of the originator of the MCPTT emergency group call and an indication that this is an MCPTT emergency group call;
 - b) if the <mcpttinfo> element containing the <mcptt-Params> element contains an <alert-ind> element set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - c) shall set the MCPTT emergency group state to "MEG 2: in-progress";
 - d) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - e) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable";
- 2) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user the MCPTT ID of the originator of the MCPTT imminent peril group call and an indication that this is an MCPTT imminent peril group call; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";
- 3) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "false":
 - a) should display to the MCPTT user the MCPTT ID of the MCPTT user cancelling the MCPTT emergency group call;
 - b) if the <mcpttinfo> element containing the <mcptt-Params> element contains an <alert-ind> element set to "false":
 - i) should display to the MCPTT user an indication of the MCPTT emergency alert cancellation and the MCPTT ID of the MCPTT user cancelling the MCPTT emergency alert; and
 - ii) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body including an <originated-by> element:
 - A) should display to the MCPTT user the MCPTT ID contained in the <originated-by> element of the MCPTT user that originated the MCPTT emergency alert; and
 - B) if the MCPTT ID contained in the <originated-by> element is the MCPTT ID of the receiving MCPTT user shall set the MCPTT emergency alert state to "MEA 1: no-alert";
 - c) shall set the MCPTT emergency group state to "MEG 1: no-emergency"; and
 - d) if the MCPTT emergency group call state of the group is set to "MEGC 3: emergency-call-granted", shall set the MCPTT emergency group call state of the group to "MEGC 1: emergency-gc-capable";

- 4) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "false":
 - a) should display to the MCPTT user the MCPTT ID of the MCPTT user cancelling the MCPTT imminent peril group call and an indication that this is an MCPTT imminent peril group call;
 - b) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - c) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable";
- 5) shall check if a Resource-Priority header field is included in the incoming SIP re-INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) shall accept the SIP re-INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 8) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- 9) if the SIP re-INVITE request was received within an on-demand session, shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- 10) if the SIP re-INVITE request was received within a pre-established session, shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the pre-established session;
- NOTE: The SIP re-INVITE request can be received within an on-demand session or a pre-established session. If the SIP re-INVITE request is received within a pre-established session, the media-level section for the MCPTT speech media stream and the media-level section of the media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 11) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and

12) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 6.2.5.1]

When the MCPTT client wants to release an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to release; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 10.1.1.2.3.1]

When an MCPTT client wants to leave the MCPTT session that has been established using on-demand session, the MCPTT client shall follow the procedures as specified in subclause 6.2.4.1.

[TS 24.379, clause 10.1.1.2.3.3]

Upon receiving a SIP BYE request for releasing the prearranged MCPTT group call, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

[TS 24.380, clause 6.2.4.5.3]

Upon receiving an indication from the user to release the permission to send RTP media, the floor participant:

- 1. shall send a Floor Release message towards the floor control server The Floor Release message:
 - a. may include the first bit in the subtype of the Floor Release message set to '1' (acknowledgement is required) as specified in subclause 8.2.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
 - b. if the session is a broadcast call and if the session was established as a normal call, shall include the Floor Indicator with the A-bit set to '1' (Normal call); and
 - c. if the Floor Granted message included the G-bit set to '1' (Dual floor), shall include the Floor Indicator with the G-bit set to '1' (Dual floor);
- 2. shall remove the indication that the participant is overriding without revoke if this indication is stored;
- 3. shall start timer T100 (Floor Release) and initialize counter C100 (Floor Release) to 1; and
- 4. shall enter the 'U: pending Release' state.

[TS 24.380, clause 6.2.4.3.5]

Upon receiving an indication from the user to request permission to send media, the floor participant:

- 1. shall send the Floor Request message toward the floor control server; The Floor Request message:
 - a. if a different priority than the normal priority is required, shall include the Floor Priority field with the priority not higher than negotiated with the floor control server as specified in subclause 14.3.3; and
 - b. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall start timer T101 (Floor Request) and initialise counter C101 (Floor Request) to 1; and
- 3. shall enter the 'U: pending Request' state.

[TS 24.380, clause 6.2.4.4.2]

Upon receiving a Floor Granted message from the floor control server or a floor granted indication in an SIP 200 (OK) response in the application and signalling layer, the floor participant:

- 1. if the first bit in the subtype of the Floor Granted message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '1' (Floor Granted); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor granted notification to the user, if not already done;
- NOTE: Providing the floor granted notification to the user prior to receiving the Floor Granted message is an implementation option.
- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. if the G-bit in the Floor Indicator is set to '1' (Dual floor) shall store an indication that the participant is overriding without revoke;
- 5. shall stop the optional timer T103 (End of RTP media), if running;
- 6. shall stop timer T101 (Floor Request); and
- 7. shall enter the 'U: has permission' state.

[TS 24.380, clause 6.2.4.5.4]

Upon receiving a Floor Revoke message, the floor participant:

- 1. shall inform the user that the permission to send RTP media is being revoked;
- 2. may give information to the user about the reason for revoking the permission to send media;
- 3. shall request the media in the MCPTT client discard any remaining buffered RTP media packets and to stop forwarding of encoded voice to the MCPTT server;
- 4 if the G-bit in the Floor Indicator is set to '1' (Dual floor):
 - a. shall send a Floor Release message. In the Floor Release message:
 - i. shall include the Floor Indicator with the G-bit set to '1' (Dual floor); and
 - ii. may set the first bit in the subtype to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- 5 if the G-bit in the Floor Indicator is set to '0' (not Dual floor):
 - a. shall send a Floor Release message. In the Floor Release message:
 - i. shall include the Floor Indicator with the G-bit set to '0' (not Dual floor); and
 - ii. may set the first bit in the subtype to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
- 6. shall start timer T100 (Floor Release) and initialize counter C100 (Floor Release) to 1; and
- 7. shall enter the 'U: pending Release' state.

[TS 24.380, clause 6.2.4.4.4]

Upon receiving a Floor Deny message, the floor participant:

- 1. if the first bit in the subtype of the Floor Deny message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '3' (Floor Deny); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor deny notification to the user;
- 3. may display the floor deny reason to the user using information in the Reject Cause field;
- 4. shall stop timer T101 (Floor Request); and
- 5. shall enter the 'U: has no permission' state.

[TS 24.380, clause 6.2.4.4.9]

Upon receiving a Floor Queue Position Info message, the floor participant:

- 1. if the first bit in the subtype of the Floor Queue Position Info message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '9' (Floor Queue Position Info); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor request queued response notification to the MCPTT user;
- 3. may provide the queue position and priority to the MCPTT user; and
- 4. shall enter the 'U: queued' state.

[TS 24.380, clause 6.2.4.9.9]

Upon receipt of an indication from the MCPTT client to request the queue position, the floor participant:

- 1. shall send the Floor Queue Position Request message;
- shall start timer T104 (Floor Queue Position Request) and initialize counter C104 (Floor Queue Position Request) to 1; and
- 3. remain in the 'U: queued' state.

[TS 24.380, clause 6.2.4.9.6]

Upon receiving an indication from the MCPTT user to release the queued floor request, the floor participant:

- 1. shall send a Floor Release message: The Floor Release message:
 - a. may include the Floor Indicator field changing a broadcast group call to a normal call;
- 2. may set the first bit in the subtype of the Floor Release message to '1' (Acknowledgment is required) as described in subclause 8.3.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
- 3. shall start timer T100 (Floor Release) and initialise counter C10 (Floor Release) to 1;
- 4. shall stop timer T104 (Floor Queue Position Request), if running; and
- 5. shall enter the 'U: pending Release' state.

[TS 24.380, clause 6.2.4.9.4]

Upon receiving a Floor Granted message, the floor participant:

- 1. if the first bit in the subtype of the Floor Granted message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '1' (Floor Granted); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide a floor granted notification to the MCPTT user;
- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. shall stop timer T104 (Floor Queue Position Request), if running;
- 5. shall start timer T132 (Queued granted user action);
- 6. shall indicate the user that the floor is granted; and
- 7. shall remain in the 'U: queued' state.
- 6.1.1.2.3 Test description

6.1.1.2.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4.

The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.2.3.2 Test procedure sequence

Table 6.1.1.2.3.2-1: Main Behaviour

St	Procedure	Procedure Message Sequence TP		Message Sequence TP Ver		Verdict
		U - S	Message			
1	SS initiates an on-demand pre-arranged group call with automatic commencement mode and implicit floor control	<	SIP INVITE	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 Generic Test Procedure for MCPTT CT communication in E-UTRA '. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
-	EXCEPTION: Step 2a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-	
2a1	The UE may send SIP 100 Trying message	>	SIP 100 Trying	-	-	
3a1	Void					
4a1 5	Void Check: Does the UE (MCPTT Client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р	
6	The SS responds to the SIP 200 (OK) with a SIP ACK	<	SIP ACK	-	-	
7	Void			-	-	
8	Void	-	-	1	Р	
9	Void			-	-	
10	Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
11	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	2	Р	
12	The SS sends a Floor Granted message with an acknowledgement required	<	Floor Granted			
13	Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message?	>	Floor Ack	2	Р	
14	Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	2	Р	
15	The SS overrides the MCPTT Client and grants the floor to a higher priority MCPTT Client.	-	-	-	-	
16	The SS sends a Floor Revoke message with the Reject Cause set to #4 - Media Burst pre- empted.	<	Floor Revoke	-	-	
17	Check: Does the MCPTT Client send a Floor Release message.	>	Floor Release	2	Р	
18	The SS sends a Floor Taken message with no acknowledgement required	<	Floor Taken	-	-	
19	Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
20	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	2	Р	
21	The SS sends a Floor Deny message with no acknowledgement required and Cause Code #255	<	Floor Deny	-	-	
22	Check: Does the MCPTT Client provide floor deny notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	2	Р	

23					
	Make the MCPTT User request to speak (e.g.	-	-	-	-
	pressing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
24	Check: Does the UE (MCPTT client) send a	>	Floor Request	2	Р
	Floor Request message?				
25	The SS sends a Floor Queue Position Info	<	Floor Queue Position Info	-	-
	message indicating that the Floor Request was				
	queued				
26	Check: Does the MCPTT Client provide floor	-	-	2	Р
	request queued response notification to the				
	MCPTT user?				
27	Make the MCPTT User request the current	-	-	-	-
	position in the queue				
28	Check: Does the UE (MCPTT client) send a	>	Floor Queue Position Request	2	Р
	Floor Queue Position Request message?				
29	The SS sends a Floor Queue Position Info	<	Floor Queue Position Info	-	-
	message with no acknowledgement required				
	indicating the current queue position				
30	Make the MCPTT User request to cancel the	-	-	-	-
	Floor Request and end being in the queue				
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
31	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р
0.	Floor Release message to cancel the queue	-		-	•
	position?				
-	EXCEPTION: Step 32a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
32a1	The SS sends a Floor Ack message	1	Floor Ack	-	
33	Make the MCPTT User request to speak (e.g.	<	-		-
33	pressing the PTT button)	-	-	-	-
34	Check: Does the UE (MCPTT client) send a	>	Fleer Derweet		
54				2	D
		>	Floor Request	2	Р
	Floor Request message?		· · · · · · · · · · · · · · · · · · ·	2	P
35	Floor Request message? The SS sends a Floor Queue Position Info	<	Floor Queue Position Info	2	P -
	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was		· · · · · · · · · · · · · · · · · · ·	2	P -
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued	<	Floor Queue Position Info	-	-
	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor		· · · · · · · · · · · · · · · · · · ·	2 - 2 2	P - P
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the	<	Floor Queue Position Info	-	-
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?	<	Floor Queue Position Info	-	-
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a	<	Floor Queue Position Info	-	-
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	Floor Queue Position Info	-	-
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with	<	Floor Queue Position Info	-	-
35 36 37	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required		Floor Queue Position Info - Floor Granted	2	- P -
35	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor	-	Floor Queue Position Info	-	-
35 36 37 38	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user?		Floor Queue Position Info - Floor Granted	2	- P -
35 36 37	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking		Floor Queue Position Info - Floor Granted	2	- P -
35 36 37 38	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).		Floor Queue Position Info - Floor Granted	2	- P -
35 36 37 38	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a		Floor Queue Position Info - Floor Granted	2	- P -
35 36 37 38 39	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	< - - -	Floor Queue Position Info - Floor Granted	2	- P - P
35 36 37 38	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. Check: Does the UE (MCPTT client) send a		Floor Queue Position Info - Floor Granted	2	- P -
35 36 37 38 39 40	Floor Request message? The SS sends a Floor Queue Position Info message indicating that the Floor Request was queued Check: Does the MCPTT Client provide floor request queued response notification to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI. The SS sends a Floor Granted message with no acknowledgement required Check: Does the MCPTT Client provide a floor granted notification to the MCPTT user? Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI. Check: Does the UE (MCPTT client) send a Floor Release message?	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour	< - - -	Floor Queue Position Info - Floor Granted	2	- P - P
35 36 37 38 39 40	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39 40	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39 40	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39 40	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39 40 -	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.	< - - > -	Floor Queue Position Info Floor Granted Floor Granted Floor Release -	- 2 - 2 - 2 - 2 - 2 -	- P - P
35 36 37 38 39 40	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.The SS sends a Floor Ack message in	< - - >	Floor Queue Position Info Floor Granted Floor Granted Floor Release	2 2 - 2 - 2 - 2 2	- P - P
35 36 37 38 39 40 - 41a1	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.The SS sends a Floor Ack message in response to the Floor Release message	< - - > >	Floor Queue Position Info Floor Granted Floor Granted Floor Release Floor Ack	- 2 - 2 - 2 - 2 - - -	- P - P
35 36 37 38 39 40 -	Floor Request message?The SS sends a Floor Queue Position Info message indicating that the Floor Request was queuedCheck: Does the MCPTT Client provide floor request queued response notification to the MCPTT user?NOTE: This is expected to be done via a suitable implementation dependent MMI.The SS sends a Floor Granted message with no acknowledgement requiredCheck: Does the MCPTT Client provide a floor granted notification to the MCPTT user?Make the MCPTT User indicate end of talking (e.g. releasing the PTT button).NOTE: This is expected to be done via a suitable implementation dependent MMI.Check: Does the UE (MCPTT client) send a Floor Release message?EXCEPTION: Step 41a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.The SS sends a Floor Ack message in	< - - > -	Floor Queue Position Info Floor Granted Floor Granted Floor Release -	- 2 - 2 - 2 - 2 - 2 -	- P - P

43	Make the MCPTT User end the on-demand	-	-	-	-
	group call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
44	Check: Does the UE (MCPTT Client) send a	>	SIP BYE	10	Р
	SIP BYE message to end the on-demand				
	group call.				
45	The SS sends a SIP 200 (OK)	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
46	SS initiates an on-demand pre-arranged group	<	SIP INVITE	-	-
	call with automatic commencement mode and				
	implicit floor control				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.4 Generic Test Procedure for MCPTT CT				
	communication in E-UTRA '. The test				
	sequence below shows only the MCPTT				
	relevant messages exchanged.				
-	EXCEPTION: Step 47a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE responds to a SIP				
	INVITE prior to the MCPTT user's				
	acknowledgment.				
47a1	The UE may send a 100 Trying message	>	SIP 100 Trying		
48a1	Void				
49a1	Void				
50	Check: Does the UE (MCPTT Client) answer	>	SIP 200 (OK)	1	Р
50	the call with a SIP 200 (OK)?	/	SII 200 (OR)	1	ſ
51	The SS responds to the SIP 200 (OK) with a	<	SIP ACK	-	-
51	SIP ACK	_	SII AGK	-	-
52	The SS sends a Floor Taken message with no	<	Floor Taken	-	
52	acknowledgement required	_		-	-
53	SS upgrades the On-Demand Pre-arranged	<	SIP re-INVITE	-	-
55	Group Call to MCPTT Emergency Group Call	_	SILIE-INVIL	-	-
54	Check: Does the UE (MCPTT Client) respond	>	SIP 200 (OK)	1	Р
54	to the upgrade to an emergency call with a SIP	>	SIF 200 (OK)	1	Г
	200 (OK)?				
55	The SS sends a Floor Idle message with no		Floor Idle		
55		<		-	-
50	acknowledgement required				
56	Make the MCPTT User request to speak (e.g.	-	-	-	-
	pressing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.			_	
57	Check: Does the UE (MCPTT client) send a	>	Floor Request	5	Р
-	Floor Request message?				
58	The SS sends a Floor Granted message with	<	Floor Granted	-	-
	an acknowledgement required			<u> </u>	
59	Check: Does the UE (MCPTT client) send a	>	Floor Ack	5	Р
	Floor Ack message in response to the Floor				
	Granted message				
60	Check: Does the MCPTT Client provide floor	-	-	5	Р
	granted notification to the MCPTT User?				
1	NOTE: This is expected to be done via a				
-	suitable implementation dependent MMI.				
61	Make the MCPTT User indicate end of talking	-	-	-	-
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.			<u> </u>	
62	Check: Does the UE (MCPTT client) send a	>	Floor Release	5	Р
	Floor Release message?				

-	EXCEPTION: Step 63a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.	-	-	-	-
63a1	The SS sends a Floor Ack message in response to the Floor Release message	<	Floor Ack	-	-
64	The SS sends a Floor Idle message with no acknowledgement required		Floor Idle	-	-
65	SS sends a SIP re-INVITE message to cancel the emergency state	<	SIP re-INVITE	-	-
66	Check: Does the UE (MCPTT Client) respond to the emergency state cancel with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
67	The SS sends a Floor Taken message with no acknowledgement required	<	Floor Taken	-	-
68	The SS sends a Floor Idle message with no acknowledgement required	<	Floor Idle	-	-
69	Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
70	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	5	Р
71	The SS sends a Floor Granted message with an acknowledgement required	<	Floor Granted	-	-
72	Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message	>	Floor Ack	5	Р
73	Check: Does the MCPTT Client provide floor granted notification to the MCPTT User? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	5	Р
74	Make the MCPTT User indicate end of talking (e.g. releasing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
75	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	5	Р
-	EXCEPTION: Step 76a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.	-	-	-	-
76a1	The SS sends a Floor Ack message in response to the Floor Release message	<	Floor Ack	-	-
77	The SS sends a Floor Idle message with no acknowledgement required	<	Floor Idle	-	-
78	SS upgrades the On-Demand Pre-arranged Group Call to MCPTT Imminent Peril Group Call	<	SIP re-INVITE	-	-
79	Check: Does the UE (MCPTT Client) respond to the upgrade to an imminent peril call with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
80	The SS sends a Floor Idle message with no acknowledgement required	<	Floor Idle	-	-
81	Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
82	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	5	Р
83	The SS sends a Floor Granted message with an acknowledgement required	<	Floor Granted	-	-

84	Check: Does the UE (MCPTT client) send a	>	Floor Ack	5	Р
	Floor Ack message in response to the Floor				
	Granted message				
85	Check: Does the MCPTT Client provide floor	-	T _	5	Р
00	granted notification to the MCPTT User?			Ŭ	•
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
86	Make the MCPTT User indicate end of talking	-	-	-	-
	(e.g. releasing the PTT button).				
87	Check: Does the UE (MCPTT client) send a	>	Floor Release	5	Р
01	Floor Release message?	-		Ŭ	•
-	EXCEPTION: Step 88a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
88a1	The SS sends a Floor Ack message in	<	Floor Ack	-	-
0041		<	I IOOI ACK	-	-
	response to the Floor Release message				
89	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
	acknowledgement required				
90	SS sends a SIP re-INVITE message to cancel	<	SIP re-INVITE	-	-
	the imminent peril state				
91	Check: Does the UE (MCPTT Client) respond	>	SIP 200 (OK)	1	Р
31		>			Г
	to the imminent peril state cancel with a SIP				
	200 (OK)?				
92	The SS sends a Floor Taken message with no	<	Floor Taken	-	-
	acknowledgement required				
93	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
00	acknowledgement required				
0.4					
94	Make the MCPTT User request to speak (e.g.	-	-	-	-
	pressing the PTT button)				
95	Check: Does the UE (MCPTT client) send a	>	Floor Request	5	Р
	Floor Request message?		-		
96	The SS sends a Floor Granted message with	<	Floor Granted	-	-
00	an acknowledgement required		riber eranted		
97	Check: Does the UE (MCPTT client) send a	>	Floor Ack	5	Р
91		>	FIOULACK	5	Г
	Floor Ack message in response to the Floor				
	Granted message				
98	Check: Does the MCPTT Client provide floor	-	-	5	Р
	granted notification to the MCPTT User?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
99	Make the MCPTT User indicate end of talking	_			-
33		-	_	-	-
	(e.g. releasing the PTT button).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
100	Check: Does the UE (MCPTT client) send a	>	Floor Release	5	Р
	Floor Release message?				
-	EXCEPTION: Step 101a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE requests an				
	acknowledgement to the Floor Release				
	message.				
101a	The SS sends a Floor Ack message in	<	Floor Ack	-	-
1	response to the Floor Release message				
102	The SS sends a Floor Idle message with no	<	Floor Idle	-	-
102				_	
400	acknowledgement required				
103	The SS sends a SIP BYE message to end the	<	SIP BYE	-	-
	On-demand Pre-arranged Group Call				
104	Check: Does the UE (MCPTT client) respond	>	SIP 200 (OK)	3	Р
	to the SIP BYE message with a SIP 200 (OK)				
	message?				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
		-	1	-	-
	connection.				

6.1.1.2.3.3 Specific message contents

Table 6.1.1.2.3.3-1: SIP INVITE (steps 1, 46, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL

Table 6.1.1.2.3.3-2: SIP 200 (OK) (step 45, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length	"0"					
Message-body	not present	No message body included - end of SIP message				

Table 6.1.1.2.3.3-3: SIP re-INVITE (step 53, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL and EMERGENCY-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.1.1.2.3.3-4					

Table 6.1.1.2.3.3-4: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.2.3.3-3)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1 condition GROUP-CALL and EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
alert-ind	"false"				

Table 6.1.1.2.3.3-5: SIP re-INVITE (step 65, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.1.1.2.3.3-6				

Table 6.1.1.2.3.3-6: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.1.3.3-5)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
emergency-ind	"false"				
alert-ind	"false"				

Table 6.1.1.2.3.3-7: SIP re-INVITE (step 78, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL and IMMPERIL-CALL

Table 6.1.1.2.3.3-8: SIP re-INVITE (step 90, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.1.1.2.3.3-9				

Table 6.1.1.2.3.3-9: MCPTT-INFO in SIP re-INVITE (Table 6.1.1.2.3.3-8)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1 condition GROUP-CALL							
Information Element	Value/remark	Comment	Reference	Condition			
mcpttinfo							
mcptt-Params							
imminentperil-ind	"false"						

Table 6.1.1.2.3.3-10: SIP 200 (OK) (step 104, Table 6.1.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length	"0"					
Message-body	not present	No message body included - end of SIP message				

Table 6.1.1.2.3.3-11: Floor Taken (steps 7, 18, 52, 67, 92, Table 6.1.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
Subtype	"00010"	Acknowledgment not required for Floor Taken message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-12: Floor Idle (steps 9, 42, 68, 77, 93, 102, Table 6.1.1.2.3.2-1)

Table 6.1.1.2.3.3-13: Floor Idle (steps 55, 64, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			
Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"000101000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-14: Floor Idle (steps 80, 89, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			1
Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"000011000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-15: Floor Request (steps 11, 20, 24, 34, 70, 95, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 con Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"00010X000000000"	bit D=1 (Emergency call) bit F=X (Queueing supported) any value	

Table 6.1.1.2.3.3-16: Floor Request (step 57, Table 6.1.1.2.3.2-1)

Table 6.1.1.2.3.3-17: Floor Request (step 82, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"00001X000000000"	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value	

Table 6.1.1.2.3.3-18: Floor Granted (step 12, 71, 96, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 co Information Element	Value/remark	Comment	Condition
Subtype	"10001"	Acknowledgment is required for Floor Granted message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-19: Floor Granted (step 37, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition	Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition		
Subtype	"00001"	Acknowledgment not required for Floor Granted message			
Floor Indicator					
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)			

Information Element	Value/remark	Comment	Condition
Subtype	"10001"	Acknowledgment is required for Floor Granted message	
Floor Indicator			
Floor Indicator	"0001010000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-20: Floor Granted (step 58, Table 6.1.1.2.3.2-1)

Table 6.1.1.1.3.3-21: Floor Granted (step 83, Table 6.1.1.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition	Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition		
Subtype	"10001"	Acknowledgment is required for Floor Granted message			
Floor Indicator					
Floor Indicator	"0000110000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)			

Table 6.1.1.2.3.3-22: Floor Ack (steps 13, 59, 72, 84, 97, Table 6.1.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
SSRC of floor participant	"10000000 11111111 00000000 00000001"		
Source			
Source	"0"	The floor participant is the source	
Message Type			
Message Type	"10001"	Floor Ack message for Floor Granted message which requested acknowledgment	

Table 6.1.1.2.3.3-23: Floor Revoke (step 16, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.8-1			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call)	
		bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-24: Floor Release (steps 17,	, 31, 40, 75, 100, Table 6.1.1.2.3.2-1)
--	---

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 6.1.1.2.3.3-25: Floor Release (steps 62, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	"00010X000000000"	bit D=1 (Emergency call) bit F=X (Queueing supported) any value			

Table 6.1.1.2.3.3-26: Floor Release (steps 87, Table 6.1.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"00001X000000000"	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value	

Table 6.1.1.2.3.3-27: Floor Deny (step 21, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition ON-NETWORK					
Information Element	Value/remark	Comment	Condition		
Subtype	"00011"	Acknowledgment not required for Floor Deny message			
Reject Cause					
Reject Cause	"255"	Cause #255 - Other reason			
Reject Phrase	"Other reason"				
Floor Indicator					
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)			

Information Element	Value/remark	Comment	Condition
Subtype	"01001"	Acknowledgment not required for Floor Queue Position Info message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.1.1.2.3.3-28: Floor Queue Position Info (steps 25, 29, 35, Table 6.1.1.2.3.2-1)

Table 6.1.1.2.3.3-29: Floor Queue Position Request (step 28, Table 6.1.1.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.9-1 condition ON-NETWORK

6.1.1.3 On-network / On-demand Pre-arranged Group Call / Manual Commencement Mode / Client Originated (CO)

6.1.1.3.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service } ensure that {

when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Group Call requesting Manual Commencement Mode at the invited MCPTT client(s) and implicit floor control } then { UE (MCPTT Client) requests On-demand Manual Commencement Mode Pre-arranged Group Call establishment with implicit floor control by sending a SIP INVITE message } }

(2)

```
with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Manual
Commencement Mode }
ensure that {
  when { the MCPTT User (MCPTT Client) wants to terminate the ongoing MCPTT Group Call }
```

then { UE (MCPTT Client) sends a SIP BYE request and leaves the MCPTT session } }

6.1.1.3.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 10.1.1.2.1.1, 6.2.1, 10.1.1.2.3.1, 6.2.4.1. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT prearranged group call and the MCPTT emergency state is already set, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.1;
- 2) if the MCPTT user has requested the origination of an MCPTT imminent peril group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.9;

- 3) if the MCPTT user has requested the origination of a broadcast group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.2;
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 12) if the MCPTT client emergency group state for this group is set to "MEG 2: in-progress" or "MEG 4: confirmpending", the MCPTT client shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2;
- 13) if the MCPTT client imminent peril group state for this group is set to "MIG 2: in-progress" or "MIG 3: confirmpending" shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.
- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.381 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.

15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;

16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and

17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4; and
- 3) may subscribe to the conference event package as specified in subclause 10.1.3.1.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

- 1) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or
- if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:
 - i) if the MCPTT client is initiating a call to a group identity;
 - ii) if the <preferred-voice-encodings> element is present in the group document retrieved by the group management client as specified in 3GPP TS 24.381 [31] containing an <encoding> element with a "name" attribute; and
 - iii) if the MCPTT client supports the encoding name indicated in the value of the "name" attribute;

then the MCPTT client:

- i) shall insert the value of the "name" attribute in the <encoding name> field of the "a=rtpmap" attribute as defined in IETF RFC 4566 [12]; and
- c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];
- 3) if floor control shall be used during the session, shall include an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12 for a media-floor control entity, consisting of:

- a) the port number for the media-floor control entity selected as specified in 3GPP TS 24.380 [5]; and
- b) the 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14; and
- 4) if end-to-end security is required for a private call and the SDP offer is not for establishing a pre-established session, shall include the MIKEY-SAKKE I_MESSAGE in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 10.1.1.2.3.1]

When an MCPTT client wants to leave the MCPTT session that has been established using on-demand session, the MCPTT client shall follow the procedures as specified in subclause 6.2.4.1.

[TS 24.379, clause 6.2.4.1]

Upon receiving a request from an MCPTT user to leave an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to leave; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

6.1.1.3.3 Test description

6.1.1.3.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.3.3.2

Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User request the establishment of an MCPTT on-demand pre- arranged group call, manual commencement mode, with explicit request for floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT on-demand pre- arranged group call with manual commencement mode and implicit floor control?	>	SIP INVITE	1	Ρ
3	The SS sends SIP 100 Trying	<	SIP 100 Trying	-	-
4	The SS sends SIP 180 Ringing	<	SIP 180 Ringing	-	-
5	SS sends SIP 200 (OK), indicating that the MCPTT call has been established	<	SIP 200 (OK)	-	-
6	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)	>	SIP ACK	1	Р
7	Make the MCPTT User end the on-demand group call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
8	Check: Does the UE (MCPTT Client) send a SIP BYE message to end the on-demand group call.	>	SIP BYE	2	Р
9	The SS sends a SIP 200 (OK)	<	SIP 200 (OK)		
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.3.3.3

Specific message contents

Table 6.1.1.3.3.3-1: SIP INVITE (step 2, Table 6.1.1.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1 condition GROUP-CALL					
Information Element Value/remark Comment Reference Condition					
Answer-Mode					
value	"Manual"				

Table 6.1.1.3.3.3-2: SIP 200 (OK) (step 9, Table 6.1.1.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length	"0"					
Message-body	not present	No message body included - end of SIP message				

6.1.1.4 On-network / On-demand Pre-arranged Group Call / Manual Commencement Mode / Client Terminated (CT)

6.1.1.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT }
ensure that {
 when { the SS (MCPTT Server) initiates an On-demand Pre-arranged group call with Manual
 Commencement Mode }
 then { UE (MCPTT Client) responds by sending a SIP 200 (OK) message and notifies the user that
 the call was established and respects the floor control imposed by the MCPTT Server }
 }
 (2)
with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call with Manual
 Commencement Mode }
ensure that {
 when { the SS (MCPTT Server) ends the ongoing MCPTT Group Call by sending a SIP BYE message}
 then { the UE (MCPTT Client) responds with a SIP 200 (OK) }
}

(3)

```
with { UE (MCPTT Client) registered and authorised for MCPTT }
ensure that {
    when { the SS (MCPTT Server) initiates an On-demand Pre-arranged group call with Manual
    Commencement Mode and the MCPTT User (MCPTT Client) chooses to reject the call }
    then { UE (MCPTT Client) responds by sending a SIP 480 (Temporarily unavailable) message to the
    SS in order to reject the call }
    }
}
```

6.1.1.4.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 10.1.1.2.1.2, 6.2.2, 6.2.3.2.2, 6.5, 10.1.1.2.3.3, 6.2.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.2]

In the procedures in this subclause:

- 1) emergency indication in an incoming SIP INVITE request refers to the <emergency-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
- 2) imminent peril indication in an incoming SIP INVITE request refers to the <imminentperil-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body.

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

- 1) may reject the SIP INVITE request if either of the following conditions are met:
 - a) MCPTT client does not have enough resources to handle the call; or
 - b) any other reason outside the scope of the present document;

and skip the rest of the steps;

2) if the SIP INVITE request is rejected in step 1), shall respond toward participating MCPTT function either with appropriate reject code as specified in 3GPP TS 24.229 [4] and warning texts as specified in subclause 4.4.2 or with SIP 480 (Temporarily unavailable) response not including warning texts if the user is authorised to restrict the reason for failure and skip the rest of the steps of this subclause;

- NOTE: If the SIP INVITE request contains an emergency indication or imminent peril indication, the MCPTT client can by means beyond the scope of the present document choose to accept the request.
- shall check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 4) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - ii) should display the MCPTT group identity of the group with the emergency condition contained in the <mcptt-calling-group-id> element; and
 - iii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - b) shall set the MCPTT emergency group state to "MEG 2: in-progress";
 - c) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - d) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable"; otherwise
- 5) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT imminent peril group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT imminent peril group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) should display the MCPTT group identity of the group with the imminent peril condition contained in the <mcptt-calling-group-id> element; and
 - b) shall set the MCPTT imminent peril group state to "MIG 3: in-progress";
- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode, yet the invited MCPTT client allows the call to be answered with automatic commencement mode;
- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and
- 4) if included in the SDP offer, shall include the media-level section of the offered media-floor control entity consisting of:
 - a) an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12; and
 - b) 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14.

[TS 24.379, clause 6.2.3.2.2]

When performing the manual commencement mode procedures:

- 1) the terminating MCPTT client may automatically generate a SIP 183 (Session Progress) in accordance with 3GPP TS 24.229 [4], prior to the MCPTT user's acknowledgement; and
- 2) if the MCPTT user declines the MCPTT session invitation the MCPTT client shall send a SIP 480 (Temporarily Unavailable) response towards the MCPTT server with the warning text set to: "110 user declined the call invitation" in a Warning header field as specified in subclause 4.4, and not continue with the rest of the steps in this subclause.

When generating a SIP 183 (Session Progress) response, the MCPTT client:

- 1) shall include the following in the Contact header field:
 - a) the g.3gpp.mcptt media feature tag; and
 - b) the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt"; and
- 2) may include a P-Answer-State header field with the value "Unconfirmed" as specified in IETF RFC 4964 [34];

When sending the SIP 200 (OK) response to the incoming SIP INVITE request, the MCPTT client shall follow the procedures in subclause 6.2.3.1.2.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.5]

The MCPTT client and the MCPTT server shall support several MIME bodies in SIP request and SIP responses.

When the MCPTT client or the MCPTT server sends a SIP message and the SIP message contains more than one MIME body, the MCPTT client or the MCPTT server:

- 1) shall, as specified in IETF RFC 2046 [21], include one Content-Type header field with the value set to multipart/mixed and with a boundary delimiter parameter set to any chosen value;
- 2) for each MIME body:
 - a) shall insert the boundary delimiter;
 - b) shall insert the Content-Type header field with the MIME type of the MIME body; and
 - c) shall insert the content of the MIME body;
- 3) shall insert a final boundary delimiter; and
- 4) if an SDP offer or an SDP answer is one of the MIME bodies, shall insert the application/sdp MIME body as the first MIME body.
- NOTE: The reason for inserting the application/sdp MIME body as the first body is that if a functional entity in the underlying SIP core does not understand multiple MIME bodies, the functional entity will ignore all MIME bodies with the exception of the first MIME body. The order of multiple MCPTT application MIME bodies in a SIP message is irrelevant.

When the MCPTT client or the MCPTT server sends a SIP message and the SIP message contains only one MIME body, the MCPTT client or the MCPTT server:

- 1) shall include a Content-Type header field set to the MIME type of the MIME body; and
- 2) shall insert the content of the MIME body.

[TS 24.379, clause 10.1.1.2.3.3]

Upon receiving a SIP BYE request for releasing the prearranged MCPTT group call, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].
- 6.1.1.4.3 Test description
- 6.1.1.4.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.4.3.2 Test procedure sequence

Table 6.1.1.4.3.2-1: Main Behaviour

St	Procedure		ge Sequence	TP	Verdict
		U - S	Message		
1	SS initiates an on-demand pre-arranged group call with manual commencement mode and implicit floor control	<	SIP INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 Generic Test Procedure for MCPTT CT	-	-	-	-
	communication in E-UTRA '. The test sequence below shows only the MCPTT relevant messages exchanged.				
-	EXCEPTION: Steps 2a1 and 2a2 describe behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-
2a1	(Optional) The UE responds with a SIP 100 Trying provisional response.	>	SIP 100 (Trying)	-	-
2a2	Check: Does the UE (MCPTT Client) respond with a SIP 183 (Session Progress)?	>	SIP 183 (Session Progress)	-	-
-	EXCEPTION: Steps 3a1 and 3a2 describe behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-
3a1	The SS responds to the SIP 183 (Session Progress) with a SIP PRACK	<	SIP PRACK		
3a2	The UE responds to PRACK with 200 OK	>	SIP 200 (OK)	-	-
-	EXCEPTION: Step 4a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that takes place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-		-
4a1	Check: Does the UE (MCPTT Client) respond with a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
	EXCEPTION: Steps 4Aa1 and 4Aa2 are optional and describe behaviour that depends on the UE implementation	-	-	-	-
4Aa1	(Optional) SS shall send PRACK only if the 180 response contains 100rel option tag within the Require header.	<	SIP PRACK	-	-
4Aa2	(Optional) The UE acknowledges the PRACK with 200 OK.	>	SIP 200 (OK)	-	-
5	Make the MCPTT User answer the call NOTE: This is expected to be done via a suitable implementation dependent MMI command.	-	-	-	-
6	Check: Does the UE (MCPTT Client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
6A	The SS acknowledges the receipt of 200 OK for INVITE.	<	SIP ACK		
7	Check: Does the UE (MCPTT client) notify the user that the call has been successfully established and that floor control is taken by the caller? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	P
8	The SS sends a SIP BYE message to end the On-demand Pre-arranged Group Call	<	SIP BYE	-	-
9	Check: Does the UE (MCPTT client) respond to the SIP BYE message with a SIP 200 (OK) message?	>	SIP 200 (OK)	2	Р

			1	1	
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
10	SS initiates an on-demand pre-arranged group	<	SIP INVITE	-	-
	call with manual commencement mode and				
	implicit floor control				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	are described in 15 30.579-1 [2], subclause				
	5.4.4 Generic Test Procedure for MCPTT CT				
	communication in E-UTRA '. The test				
	sequence below shows only the MCPTT				
	relevant messages exchanged.				
-	EXCEPTION: Steps 11a1 11a2 describe	-	-	-	-
	behaviour that depends on the UE				
	implementation; the "lower case letter"				
	identifies a step sequence that take place if the				
	UE responds to a SIP INVITE prior to the				
	MCPTT user's acknowledgment.				
11a1	(Optional) The UE responds with a SIP 100		SIP 100 (Truing)		
Tian		>	SIP 100 (Trying)	-	-
L	Trying provisional response.				
11a2	Check: Does the UE (MCPTT Client) respond	>	SIP 183 (Session Progress)	1	Р
	with a SIP 183 (Session Progress)?				
-	EXCEPTION: Steps 12a1 and 12a2 describe	-	-	-	-
	behaviour that depends on the UE				
	implementation; the "lower case letter"				
	identifies a step sequence that take place if the				
	UE responds to a SIP INVITE prior to the				
	MCPTT user's acknowledgment.				
12a1	The SS responds to the SIP 183 (Session	<	SIP PRACK		
1201		<	SIFFRACK		
10.0	Progress) with a SIP PRACK				
12a2	The UE responds to PRACK with 200 OK	>	SIP 200 (OK)	-	-
-	EXCEPTION: Step 13a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE responds to a SIP				
	INVITE prior to the MCPTT user's				
	acknowledgment.				
13a1	Check: Does the UE (MCPTT Client) respond	>	SIP 180 (Ringing)	1	Р
1001	with a SIP 180 (Ringing)?	-			•
	EXCEPTION: Steps 13Aa1 and 13Aa2 are		-		
		-	-	-	-
	optional and describe behaviour that depends				
	on the UE implementation				
13Aa	(Optional) SS shall send PRACK only if the	<	SIP PRACK	-	-
1	180 response contains 100rel option tag within				
	the Require header.				
13Aa	(Optional) The UE acknowledges the PRACK	>	SIP 200 (OK)	-	-
2	with 200 OK.				
14	Make the MCPTT User decline the call.	-	-	-	-
, T	NOTE: This is expected to be done via a				
45	suitable implementation dependent MMI.				
15	Check: Does the UE (MCPTT Client) answer	>	SIP 480 (Temporarily unavailable)	3	Р
	the call with a SIP 480 (Temporarily				
	unavailable)?				
16	SS responds to the SIP 480 (Temporarily	<	SIP ACK	-	-
	unavailable) with a SIP ACK				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
L					

6.1.1.4.3.3

Specific message contents

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL					
Information Element Value/remark Comment Reference Condition					
Answer-Mode					
value	"Manual"				

Table 6.1.1.4.3.3-1: SIP INVITE (steps 1, 10, Table 6.1.1.4.3.2-1)

Table 6.1.1.4.3.3-2: SIP 200 (OK) (step 9, Table 6.1.1.4.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1							
Information Element Value/remark Comment Reference Conditi							
Content-Type							
Content-Length	"0"						
	not present	No message body					
Message-body		included - end of SIP					
		message					

6.1.1.5 On-network / Pre-arranged Group Call using pre-established session / Client originated Pre-established Session Release with associated MCPTT session / Client Originated (CO)

6.1.1.5.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service and having a pre-established
session with the MCPTT Server }
ensure that {

when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Group Call
using a pre-established session requesting Automatic Commencement Mode at the invited MCPTT
client(s) and implicit floor control }

then { UE (MCPTT Client) requests On-demand Pre-arranged Group Call using a pre-established
session establishment by sending a SIP REFER message and responds to the SS with correct MCPC
messages }
}

(2)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call using a pre-established session }

ensure that {
 when { the MCPTT User (MCPTT Client) wants to terminate the ongoing MCPTT Group Call but keep the
 pre-established session }
 then { UE (MCPTT Client) sends a SIP REFER request and leaves the MCPTT session }
 }
}

6.1.1.5.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 10.1.1.2.2.1, 10.1.1.3.1.2, 10.1.1.2.3.2, 6.2.4.2, 10.1.1.3.3.2, 6.3.2.1.7 and TS 24.380, clauses 4.1.2.2, 4.1.2.3. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT group session using an MCPTT group identity identifying a prearranged MCPTT group within the pre-established session, the MCPTT client shall generate a SIP REFER request as specified in IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27], and in accordance with the UE procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client shall follow the procedures specified in subclause 10.1.2.2.2.1 with the clarification in step 3) of subclause 10.1.2.2.2.1 that:

- 1) the <entry> element in the application/resource-lists MIME body shall contain a "uri" attribute set to the prearranged MCPTT group identity;
- 2) the <session-type> element of the application/vnd.3gpp.mcptt-info MIME body in the hname "body" URI header field shall be set to a value of "prearranged"; and
- 3) if the MCPTT user has requested the origination of a broadcast group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.2.

[TS 24.379, clause 10.1.1.3.1.2]

Upon receipt of a "SIP REFER request for a pre-established session", with:

- the Refer-To header field containing a Content-ID ("cid") Uniform Resource Locator (URL) as specified in IETF RFC 2392 [62] that points to an application/resource-lists MIME body as specified in IETF RFC 5366 [20] containing an <entry> element with a "uri" attribute containing a SIP-URI set to a pre-arranged group identity;
- 2) a body" URI header field of the SIP-URI specified above containing an application/vnd.3gpp.mcptt-info MIME body with the <session-type> element set to "prearranged"; and
- 3) a Content-ID header field set to the "cid" URL;

the participating MCPTT function:

- if unable to process the request due to a lack of resources or a risk of congestion exists, may reject the SIP INVITE request with a SIP 500 (Server Internal Error) response. The participating MCPTT function may include a Retry-After header field to the SIP 500 (Server Internal Error) response as specified in IETF RFC 3261 [24] and shall not continue with the rest of the steps;
- NOTE 1: If the application/vnd.3gpp.mcptt-info MIME body included in the SIP REFER request as described at the top of the present subclause contains an <emergency-ind> element or <imminentperil-ind> element set to a value of "true", and this is an authorised request for originating a priority call as determined by subclause 6.3.2.1.8.1, the participating MCPTT function can according to local policy choose to accept the request.
- 2) shall check if the number of maximum simultaneous MCPTT group calls supported for the MCPTT user as specified in the <MaxSimultaneousCallsN6> element of the <MCPTT-group-call> element of the MCPTT user profile document (see the MCPTT user profile document in 3GPP TS 24.384 [50]) has been exceeded. If exceeded, the participating MCPTT function shall respond with a SIP 486 (Busy Here) response with the warning text set to "103 maximum simultaneous MCPTT group calls reached" in a Warning header field as specified in subclause 4.4 and shall not continue with the rest of the steps;
- 3) shall determine the MCPTT ID of the calling user from public user identity in the P-Asserted-Identity header field of the SIP REFER request;
- NOTE 2: The MCPTT ID of the calling user is bound to the public user identity at the time of service authorisation, as documented in subclause 7.3.
- 4) if the participating MCPTT function cannot find a binding between the public user identity and an MCPTT ID or if the validity period of an existing binding has expired, then the participating MCPTT function shall reject the SIP REFER request with a SIP 404 (Not Found) response with the warning text set to "141 user unknown to the participating function" in a Warning header field as specified in subclause 4.4, and shall not continue with any of the remaining steps;
- 5) if through local policy in the participating MCPTT function, the user identified by the MCPTT ID is not authorised to initiate prearranged group calls, shall reject the "SIP REFER request for pre-established session" with a SIP 403 (Forbidden) response to the SIP INVITE request, with warning text set to "109 user not authorised to make prearranged group calls" in a Warning header field as specified in subclause 4.4;
- 6) if the "SIP REFER request for a pre-established session" contained a Refer-Sub header field containing "false" value and a Supported header field containing "norefersub" value, shall handle the SIP REFER request as

specified in 3GPP TS 24.229 [4], IETF RFC 3515 [25] as updated by IETF RFC 6665 [26], and IETF RFC 4488 [22] without establishing an implicit subscription;

- 7) if received SIP REFER request includes an application/vnd.3gpp.mcptt-info+xml MIME body with an <emergency-ind> element included or an <imminent-peril> element included, shall validate the request as described in subclause 6.3.2.1.8.3;
- 8) if the SIP REFER request contains in the application/vnd.3gpp.mcptt-info+xml MIME body:
 - a) an <emergency-ind> element set to a value of "true" and this is an unauthorised request for an MCPTT emergency group call as determined by subclause 6.3.2.1.8.1;
 - b) an <alert-ind> element set to a value of "true" and this is an unauthorised request for an MCPTT emergency alert as determined by subclause 6.3.2.1.8.2; or
 - c) an <imminent-peril> element set to a value of "true" and this is an unauthorised request for an MCPTT imminent peril group call as determined by subclause 6.3.2.1.8.1;

then shall reject the SIP REFER request with a SIP 403 (Forbidden) response and skip the rest of the steps;

- 9) shall retrieve the group identity within the <entry> element of the application/resource-lists MIME body, referenced by the "cid" URL contained in the Refer-To header field of the SIP REFER request;
- 10) shall determine the public service identity of the controlling MCPTT function associated with the group identity in the application/resource-lists MIME body referenced by the Refer-To header of the SIP REFER request. If the participating MCPTT function is unable to identify the controlling MCPTT function associated with the group identity, it shall reject the REFER request with a SIP 404 (Not Found) response with the warning text "142 unable to determine the controlling function" in a Warning header field as specified in subclause 4.4, and shall not continue with any of the remaining steps;
- NOTE 3: The public service identity can identify the controlling function in the primary MCPTT system or a partner MCPTT system.
- NOTE 4: How the participating MCPTT server discovers the public service identity of the controlling MCPTT function associated with the group identity is out of scope of the current document.
- 11) if the user identified by the MCPTT ID is not affiliated to the group identified in the SIP REFER request as determined by subclause 9.2.2.2.11 and this is an authorised request for originating a priority call as determined by subclause 6.3.2.1.8.1, shall perform the actions specified in subclause 9.2.2.2.12 for implicit affiliation;
- 12) if the actions for implicit affiliation specified in step 11) above were performed but not successful in affiliating the MCPTT user due to the MCPTT user already having N2 simultaneous affiliations, shall reject the SIP REFER request with a SIP 486 (Busy Here) response with the warning text set to "102 too many simultaneous affiliations" in a Warning header field as specified in subclause 4.4. and skip the rest of the steps.
- NOTE 5: N2 is the total number of MCPTT groups that an MCPTT user can be affiliated to simultaneously as specified in 3GPP TS 23.179 [3].
- NOTE 6: if the SIP INVITE request contains an emergency indication set to a value of "true" or an imminent peril indication set to a value of "true" and this is an authorised request for originating a priority call as determined by subclause 6.3.2.1.8.1, the participating MCPTT function can according to local policy choose to allow an exception to the N2 limit. Alternatively, a lower priority affiliation of the MCPTT user could be cancelled to allow for the new affiliation.
- 13) shall generate a final SIP 200 (OK) response to the "SIP REFER request for a pre-established session" according to 3GPP TS 24.229 [4];
- NOTE 7: In accordance with IETF RFC 4488 [22], the participating MCPTT function inserts the Refer-Sub header field containing the value "false" in the SIP 200 (OK) response to the SIP REFER request to indicate that it has not created an implicit subscription.

[TS 24.379, clause 10.1.1.3.1.2]

When an MCPTT client wants to leave the MCPTT session within a pre-established session, the MCPTT client shall follow the procedures as specified in subclause 6.2.4.2.

[TS 24.379, clause 6.2.4.2]

Upon receiving a request from an MCPTT user to leave an MCPTT session within a pre-established session, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- shall generate an initial SIP REFER request outside a dialog in accordance with the procedures specified in 3GPP TS 24.229 [4], IETF RFC 4488 [22] and IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27];
- 3) shall set the Request-URI of the SIP REFER request to the public service identity identifying the pre-established session on the MCPTT server serving the MCPTT user;
- 4) shall include the Refer-Sub header field with value "false" according to rules and procedures of IETF RFC 4488 [22];
- 5) shall include the Supported header field with value "norefersub" according to rules and procedures of IETF RFC 4488 [22];
- 6) shall set the Refer-To header field of the SIP REFER request to the MCPTT session identity to leave;
- 7) shall include the "method" SIP URI parameter with the value "BYE" in the URI in the Refer-To header field;
- shall include a Target-Dialog header field as specified in IETF RFC 4538 [23] identifying the pre-established session; and
- 9) shall send the SIP REFER request according to 3GPP TS 24.229 [4].

Upon receiving a SIP 2xx response to the SIP REFER request, the MCPTT client shall interact with media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 10.1.1.3.3.2]

Upon receiving from the MCPTT client a SIP REFER request when using a pre-established session with the method SIP-URI parameter set to value "BYE" in the URI in the Refer-To header field the participating MCPTT function shall follow the procedures as specified in subclause 6.3.2.1.7.

[TS 24.379, clause 6.3.2.1.7]

Upon receiving a SIP REFER request with the "method" SIP URI parameter set to value "BYE" in the URI in the Refer-To header field from the MCPTT client, the participating MCPTT function:

- 1) if the user identified by the MCPTT ID is not authorised, shall reject the "SIP REFER request for pre-established session" with a SIP 403 (Forbidden) response to the SIP BYE request, with warning text set to "100 function not allowed due to <detailed reason>" as specified in subclause 4.4, and shall not continue with the rest of the steps;
- 2) if the SIP REFER request contained a Refer-Sub header field containing "false" value and a Supported header field containing "norefersub" value, shall handle the SIP REFER request as specified in 3GPP TS 24.229 [4], IETF RFC 3515 [25] as updated by IETF RFC 6665 [26], and IETF RFC 4488 [22] without establishing an implicit subscription;
- 3) shall generate a SIP 200 (OK) response to the SIP REFER request, and in the SIP 200 (OK) response:
 - a) shall include the Supported header field with value "norefersub" according to rules and procedures of IETF RFC 4488 [22]; and
 - b) shall check the presence of the Refer-Sub header field of the SIP REFER request and if it is present and set to the value "false" shall include the Refer-Sub header field with value "false" according to rules and procedures of IETF RFC 4488 [22];
- NOTE: In accordance with IETF RFC 4488 [22], the participating MCPTT function inserts the Refer-Sub header field containing the value "false" in the SIP 200 (OK) response to the SIP REFER request to indicate that it has not created an implicit subscription.

4) shall send the SIP 200 (OK) response to the SIP REFER request towards MCPTT client according to 3GPP TS 24.229 [4];

[TS 24.380, clause 4.1.2.2]

For a pre-arranged group call, when the originator initiates the call setup indicating the use of a pre-established session using SIP messages as specified in 3GPP TS 24.379 [2], the participating MCPTT function (which serves the originating MCPTT client) sends to the originating MCPTT client a Connect message after the controlling MCPTT function accepts the initiation of this call. After the reception of this Connect message the originating MCPTT client sends an Acknowledgment message by indicating that the connection is accepted or by indicating that the connection is not accepted. If the connection is accepted by the originating MCPTT client, the floor control for this call continues a specified in clause 6.

[TS 24.380, clause 4.1.2.3]

For a pre-arranged group call if the controlling MCPTT function as triggered by an originating group member initiates a call as specified in 3GPP TS 24.379 [2], the participating MCPTT function which serves the terminating MCPTT client sends a Connect message to all affiliated MCPTT clients of this group. After the reception of the Connect message the terminating MCPTT client sends an Acknowledgment message by indicating that the connection is accepted or by indicating that the connection is not accepted. If the connection is accepted by the terminating MCPTT client, the floor control for this call continues a specified in clause 6.

NOTE: If a terminating client does not have an available pre-established session, the call setup proceeds as in ondemand call setup as specified in 3GPP TS 24.379 [2].

6.1.1.5.3 Test description

6.1.1.5.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.5.3.2

Test procedure sequence

St	Procedure		Message Sequence		Verdict
		U - S	Message		
1	Make the MCPTT User request the establishment of an MCPTT pre-arranged group call using a pre-established session, automatic commencement mode, with Floor Control NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP REFER request requesting the establishment of an MCPTT pre-arranged group call using a pre-established session with automatic commencement mode?	>	SIP REFER	1	P
3	SS sends SIP 200 (OK), indicating that the MCPTT call has been established	<	SIP 200 (OK)	-	-
4	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
5	SS sends a Connect message	<	Connect	-	-
6	Check: Does the UE (MCPTT Client) send an Acknowledgement message in response to the Connect message?	>	Acknowledgment	1	Р
7	Make the MCPTT User leave the MCPTT session	-	-	-	-
8	Check: Does the UE (MCPTT Client) send a SIP REFER message to end the on-demand group call.	>	SIP REFER	2	Р
9	The SS sends a SIP 200 (OK)	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.5.3.3

Specific message contents

Table 6.1.1.5.3-1: SIP 200 (OK) (steps 3, 9, Table 6.1.1.5.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length	"0"					
Message-body	not present	No message body included - end of SIP message				

Derivation Path: TS 36.579-1 [2],	Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1						
Information Element	Value/remark	Comment	Reference	Condition			
Refer-To	px_sesson_B_ID	The MCPTT session identity to leave					
addr-spec	not present						
method	"BYE"						
Content-Type							
Content-Length	"0"						
Message-body	not present	No message body included - end of SIP message					

Table 6.1.1.5.3-2: SIP REFER (step 8, Table 6.1.1.5.3.2-1)

6.1.1.6 On-network / Pre-arranged Group Call using pre-established session / Automatic Commencement Mode / Server originated Pre-established Session Release with associated MCPTT session / Client Terminated (CT)

6.1.1.6.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service and having a pre-established
session with the MCPTT Server }
ensure that {

when { the MCPTT Server requests the establishment of an MCPTT On-demand Pre-arranged Group Call
using a pre-established session requesting Automatic Commencement Mode to the UE (MCPTT Client) by
sending a Connect}

then { UE (MCPTT Client) accepts the On-demand Pre-arranged Group Call by sending a
Acknowledgement }
}

(2)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call using a pre-established
session with Automatic Commencement Mode }

ensure that {

when { the MCPTT Server wants to terminate the ongoing MCPTT Group Call and sends a Disconnect }
 then { UE (MCPTT Client) accepts the ending of the MCPTT Group Call by sending a Acknowledgement
}
}

6.1.1.6.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.380, clauses 4.1.2.2, 4.1.2.3, 9.2.2.3.2, 9.2.2.3.4. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.380, clause 4.1.2.2]

For a pre-arranged group call if the controlling MCPTT function as triggered by an originating group member initiates a call as specified in 3GPP TS 24.379 [2], the participating MCPTT function which serves the terminating MCPTT client sends a Connect message to all affiliated MCPTT clients of this group. After the reception of the Connect message the terminating MCPTT client sends an Acknowledgment message by indicating that the connection is accepted or by indicating that the connection is not accepted. If the connection is accepted by the terminating MCPTT client, the floor control for this call continues a specified in clause 6.

NOTE: If a terminating client does not have an available pre-established session, the call setup proceeds as in ondemand call setup as specified in 3GPP TS 24.379 [2].

[TS 24.380, clause 4.1.2.3]

When a call is released by the controlling MCPTT function (as specified in 3GPP TS 24.379 [2]), the participating MCPTT function sends a Disconnect message to all MCPTT clients which used a pre-established session for this call. Then the call is released (see also 3GPP TS 24.379 [2]) and the pre-established session can be used for another call. When an MCPTT client leaves a call (as specified in 3GPP TS 24.379 [2]) which was setup over a pre-established session without releasing the pre-established session, this pre-established session can be used for another call.

[TS 24.380, clause 9.2.2.3.2]

Upon reception of a Connect message:

- 1. if the MCPTT client accepts the incoming call the MCPTT client:
 - a. shall send the Acknowledgement message with Reason Code field set to 'Accepted';
 - b. shall use only the media streams of the pre-established session which are indicated as used in the associated call session Media Streams field, if the Connect contains a Media Streams field;
 - c. shall create an instance of the 'Floor participant state transition diagram for basic operation' as specified in subclause 6.2.4; and
 - d. shall enter the 'U: Pre-established session in use' state; or
- 2. Otherwise the MCPTT client:
 - a. shall send the Acknowledgement message with the Reason Code field set to 'Busy' or 'Not Accepted'; and
 - b. shall remain in 'U: Pre-established session not in use' state.

[TS 24.380, clause 9.2.2.3.4]

Upon reception of a Disconnect message the MCPTT client:

- 1. if the first bit in the subtype of the Disconnect message is set to '1' (acknowledgement is required), shall send the Acknowledgement message with the Reason Code set to 'Accepted'; and
- 2. shall remain in 'U: Pre-established session not in use' state.
- 6.1.1.6.3 Test description
- 6.1.1.6.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.
- 6.1.1.6.3.2 Test procedure sequence

Table 6.1.1.6.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict
		U - S	Message		
1	SS initiates an on-demand pre-arranged group call with automatic commencement mode using a pre-established session by sending a Connect message	<	Connect	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an Acknowledgement to accept the incoming pre- arranged group call using a pre-established session?	>	Acknowledgement	1	Р
3	SS releases the call by sending a Disconnect message	<	Disconnect	-	-
4	Check: Does the UE (MCPTT client) send an Acknowledgement to accept the release of the group call?	>	Acknowledgement	2	Р
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.6.3.3 Specific message contents

Table 6.1.1.6.3.3-1: Connect (step 1, Table 6.1.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.12-1			
Information Element	Value/remark	Comment	Condition
Answer State field			
Answer State	"0"	unconfirmed	
Inviting MCPTT User Identity field			
Inviting MCPTT User Identity	Px_MCPTT_User_B_ID		

6.1.1.7 On-network / Pre-arranged Group Call using pre-established session / Manual Commencement Mode / Client Terminated (CT)

6.1.1.7.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service and having a pre-established session with the MCPTT Server } ensure that {

when { the MCPTT Server requests the establishment of an MCPTT On-demand Pre-arranged Group Call
using a pre-established session requesting Manual Commencement Mode to the UE (MCPTT Client) by
sending a SIP re-INVITE}

then { UE (MCPTT Client) accepts the On-demand Pre-arranged Group Call by sending an SIP 200
(OK) and responds to MCPC messages with a Acknowledgement }
}

(2)

with { UE (MCPTT Client) having an ongoing On-demand Pre-arranged Group Call using a pre-established
session with Automatic Commencement Mode }
ensure that {
 when { the MCPTT Server wants to terminate the ongoing MCPTT Group Call and sends a Disconnect }
 then { UE (MCPTT Client) accepts the ending of the MCPTT Group Call by sending a Acknowledgement

}

6.1.1.7.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.380, clauses 4.1.2.2, 4.1.2.3, 9.2.2.3.2, 9.2.2.3.4, 9.2.2.3.3 and TS 24.379, clause 10.1.1.2.2.2, 10.1.1.2.1.2. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.380, clause 4.1.2.2]

}

For a pre-arranged group call if the controlling MCPTT function as triggered by an originating group member initiates a call as specified in 3GPP TS 24.379 [2], the participating MCPTT function which serves the terminating MCPTT client sends a Connect message to all affiliated MCPTT clients of this group. After the reception of the Connect message the terminating MCPTT client sends an Acknowledgment message by indicating that the connection is accepted or by indicating that the connection is not accepted. If the connection is accepted by the terminating MCPTT client, the floor control for this call continues a specified in clause 6.

NOTE: If a terminating client does not have an available pre-established session, the call setup proceeds as in ondemand call setup as specified in 3GPP TS 24.379 [2].

[TS 24.380, clause 4.1.2.3]

When a call is released by the controlling MCPTT function (as specified in 3GPP TS 24.379 [2]), the participating MCPTT function sends a Disconnect message to all MCPTT clients which used a pre-established session for this call. Then the call is released (see also 3GPP TS 24.379 [2]) and the pre-established session can be used for another call. When an MCPTT client leaves a call (as specified in 3GPP TS 24.379 [2]) which was setup over a pre-established session without releasing the pre-established session, this pre-established session can be used for another call.

[TS 24.380, clause 9.2.2.3.2]

Upon reception of a Connect message:

- 1. if the MCPTT client accepts the incoming call the MCPTT client:
 - a. shall send the Acknowledgement message with Reason Code field set to 'Accepted';
 - b. shall use only the media streams of the pre-established session which are indicated as used in the associated call session Media Streams field, if the Connect contains a Media Streams field;
 - c. shall create an instance of the 'Floor participant state transition diagram for basic operation' as specified in subclause 6.2.4; and
 - d. shall enter the 'U: Pre-established session in use' state; or
- 2. Otherwise the MCPTT client:
 - a. shall send the Acknowledgement message with the Reason Code field set to 'Busy' or 'Not Accepted'; and
 - b. shall remain in 'U: Pre-established session not in use' state.

[TS 24.380, clause 9.2.2.3.4]

Upon reception of a Disconnect message the MCPTT client:

- 1. if the first bit in the subtype of the Disconnect message is set to '1' (acknowledgement is required), shall send the Acknowledgement message with the Reason Code set to 'Accepted'; and
- 2. shall remain in 'U: Pre-established session not in use' state.

[TS 24.380, clause 9.2.2.3.3]

When the associated pre-established session between the MCPTT client and the MCPTT server is released the MCPTT client:

- 1. shall release any user plane resources including any running timers associated with the pre-established session; and
- 2. shall enter the 'Start-stop' state and then the 'Call setup control over pre-established session state machine' is released.

[TS 24.379, clause 10.1.1.2.2.2]

Upon receiving a SIP re-INVITE request within a pre-established Session without an associated MCPTT session or when generating SIP responses to the SIP re-INVITE request, the MCPTT client shall follow the procedures in subclause 10.1.1.2.1.2.

NOTE: In subclause 10.1.1.2.1.2, the reader is assumed to replace occurrences of SIP INVITE request with SIP re-INVITE request.

[TS 24.379, clause 10.1.1.2.2.2]

In the procedures in this subclause:

- 1) emergency indication in an incoming SIP INVITE request refers to the <emergency-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
- 2) imminent peril indication in an incoming SIP INVITE request refers to the <imminentperil-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body.

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

- 1) may reject the SIP INVITE request if either of the following conditions are met:
 - a) MCPTT client does not have enough resources to handle the call; or
 - b) any other reason outside the scope of this specification;
- 2) if the SIP INVITE request is rejected in step 1), shall respond toward participating MCPTT function either with appropriate reject code as specified in 3GPP TS 24.229 [4] and warning texts as specified in subclause 4.4.2 or with SIP 480 (Temporarily unavailable) response not including warning texts if the user is authorised to restrict the reason for failure and skip the rest of the steps of this subclause;
- NOTE: If the SIP INVITE request contains an emergency indication or imminent peril indication, the MCPTT client can by means beyond the scope of this specification choose to accept the request.
- shall check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of this specification to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 4) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;

- ii) should display the MCPTT group identity of the group with the emergency condition contained in the <mcptt-calling-group-id> element; and
- iii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
- b) shall set the MCPTT emergency group state to "MEG 2: in-progress";
- c) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
- d) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable"; otherwise
- 5) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT imminent peril group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT imminent peril group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) should display the MCPTT group identity of the group with the imminent peril condition contained in the <mcptt-calling-group-id> element; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";
- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode, yet the invited MCPTT client allows the call to be answered with automatic commencement mode;
- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.6.1.1.7.3 Test description
- 6.1.1.7.3 Test description
- 6.1.1.7.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.7.3.2 Test procedure sequence

Table 6.1.1.7.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	SS initiates an on-demand pre-arranged group call with manual commencement mode using a pre-established session by sending an SIP re- INVITE	<	SIP re-INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
-	EXCEPTION: Step 2a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-
2a1	Check: Does the UE (MCPTT Client) respond with a SIP 183 (Session Progress)?	>	SIP 183 (Session Progress)	1	Р
-	EXCEPTION: Step 3a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-
3a1	The SS responds to the SIP 183 (Session Progress) with a SIP PRACK	<	SIP PRACK		
-	EXCEPTION: Step 4a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE responds to a SIP INVITE prior to the MCPTT user's acknowledgment.	-	-	-	-
4a1	Check: Does the UE (MCPTT Client) respond with a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
5	Make the MCPTT User answer the call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
6	Check: Does the UE (MCPTT Client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
7	SS sends a Connect message	<	Connect	-	-
8	Check: Does the UE (MCPTT Client) send an Acknowledgement in response to the Connect message?	>	Acknowledgment	1	Р
9	SS releases the call by sending a Disconnect message	<	Disconnect	-	-
10	Check: Does the UE (MCPTT client) send an Acknowledgement message to accept the release of the group call?	>	Acknowledgement	2	Р
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.7.3.3 Specific message contents

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1 condition GROUP-CALL					
Information Element Value/remark Comment Reference Conc					
Answer-Mode	not present				
answer-mode-value	not present				

Table 6.1.1.7.3.3-1: SIP re-INVITE (step 1, Table 6.1.1.7.3.2-1)

Table 6.1.1.7.3.3-2: Connect (step 7, Table 6.1.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.12-1			
Information Element	Value/remark	Comment	Condition
Inviting MCPTT User Identity field			
Inviting MCPTT User Identity	Px_MCPTT_User_B_ID		

6.1.1.8 On-network / Pre-arranged Broadcast Group Call / Client Originated (CO)

6.1.1.8.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {

when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Broadcast
Group Call }

then { UE (MCPTT Client) requests On-demand Pre-arranged Broadcast Group Call by sending a SIP
INVITE message and responds to the SS with correct SIP messages }
}

6.1.1.8.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 4.12, 6.2.8.2 and 10.1.1.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 4.12]

A broadcast group call is a group call where the initiating MCPTT user expects no response from the other MCPTT users, so that when the user's transmission is complete, so is the call. The functionality in the present release of the specification for broadcast group calls is not compliant to the requirements for user-broadcast group and group-broadcast group calls as specified in 3GPP TS 22.179 [2], 3GPP TS 22.280 [76] and 3GPP TS 23.379 [3]. In the present release of the specification, a broadcast group call can be initiated by an MCPTT user on any MCPTT group that the MCPTT user is part of.

- NOTE 1: Configuration related to the authorisation to create a user-broadcast group or a group-broadcast exists in the user profile document as specified in 3GPP TS 24.484 [50], but is not used by any procedures in 3GPP TS 24.481 [31] in the current release, as the ability for an authorised user to create user-broadcast groups and group-broadcast groups is not provided in the current release.
- NOTE 2: Configuration related to broadcast group hierarchies can be found in the group document as specified in 3GPP TS 24.481 [31] and in the service configuration document as specified in 3GPP TS 24.484 [50]. However, this configuration is not used by any procedures in 3GPP TS 24.380 [5] in the current release.

[TS 24.379, clause 6.2.8.2]

NOTE: This subclause is referenced from other procedures.

When the MCPTT user initiates a broadcast group call, the MCPTT client:

1) in the case of the prearranged group call is initiated on-demand, shall include in the application/vnd.3gpp.mcpttinfo+xml MIME body the
broadcast-ind> element set to "true" as defined in clause F.1; and

2) in the case the prearranged group call is initiated using a pre-established session, shall include in the application/vnd.3gpp.mcptt-info+xml MIME body in the "body" URI header field in the Refer-To header field the
broadcast-ind> element set to "true" as defined in clause F.1.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

•••

- 3) if the MCPTT user has requested the origination of a broadcast group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.2;
- 4) shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

•••

- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.

- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.481 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.

15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;

16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and

17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];

•••

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

6.1.1.8.3 Test description

6.1.1.8.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.8.3.2

Test procedure sequence

Table 6.1.1.8.3.2-1: Main Behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand pre- arranged broadcast group call for the selected MCPTT broadcast group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand pre- arranged broadcast group call?	>	SIP INVITE	1	P
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.8.3.3 Specific message contents

Table 6.1.1.8.3.3-1: SIP INVITE (step 2, Table 6.1.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Resource-Priority	not included in header					
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"					
MCPTT-Info	As described in Table 6.1.1.8.3.3-2					

Table 6.1.1.8.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.8.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.32.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
session-type	"prearranged"					
mcptt-request-uri	px_MCPTT_Group_A_ID					
broadcast-ind	"true"					

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

Table 6.1.1.8.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.1.8.3.2-1)

6.1.1.9 On-network / Pre-arranged Broadcast Group Call / Client Terminated (CT)

6.1.1.9.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT Client receives a SIP INVITE message of an MCPTT On-demand Pre-arranged Broadcast
Group Call }
then { the MCPTT Client displays an indication for the Pre-arranged MCPTT group call to the user and
responds to the SS with correct SIP messages }
 }
}

(2)

with { UE (MCPTT Client) having an incoming Pre-arranged MCPTT group call and the Answer-Mode header in the SIP INVITE message is set to Manual } ensure that { when { the user answers the MCPTT group call } then { UE sends a SIP 200 OK as a response to the SIP INVITE message } }

6.1.1.9.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clauses 4.12, and 10.1.1.2.1.2. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 4.12]

A broadcast group call is a group call where the initiating MCPTT user expects no response from the other MCPTT users, so that when the user's transmission is complete, so is the call. The functionality in the present release of the specification for broadcast group calls is not compliant to the requirements for user-broadcast group and group-broadcast group calls as specified in 3GPP TS 22.179 [2], 3GPP TS 22.280 [76] and 3GPP TS 23.379 [3]. In the present release of the specification, a broadcast group call can be initiated by an MCPTT user on any MCPTT group that the MCPTT user is part of.

- NOTE 1: Configuration related to the authorisation to create a user-broadcast group or a group-broadcast exists in the user profile document as specified in 3GPP TS 24.484 [50], but is not used by any procedures in 3GPP TS 24.481 [31] in the current release, as the ability for an authorised user to create user-broadcast groups and group-broadcast groups is not provided in the current release.
- NOTE 2: Configuration related to broadcast group hierarchies can be found in the group document as specified in 3GPP TS 24.481 [31] and in the service configuration document as specified in 3GPP TS 24.484 [50]. However, this configuration is not used by any procedures in 3GPP TS 24.380 [5] in the current release.

[TS 24.379, clause 10.1.1.2.1.2]

In the procedures in this subclause:

•••

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode, yet the invited MCPTT client allows the call to be answered with automatic commencement mode;
- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.

6.1.1.9.3 Test description

6.1.1.9.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.9.3.2

Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The SS initiates an On-demand pre-arranged MCPTT broadcast group call with manual commencement mode, with explicit floor control by sending an SIP INVITE message.	<	SIP INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) respond with a SIP 183 (Session Progress)?	>	SIP 183 (Session Progress)	1	Р
3	The SS responds to the SIP 183 (Session Progress) with a SIP PRACK	<	SIP PRACK		
4	Check: Does the UE (MCPTT client) respond with a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
5	Check: Dose the MCPTT client display an indication for the Pre-arranged MCPTT group call to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р
6	Make the MCPTT User answer the call	-	-	-	-
7	Check: Does the UE (MCPTT client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
8	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
9	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

Table 6.1.1.9.3.2-1: Main Behaviour

6.1.1.9.3.3

Specific message contents

Table 6.1.1.9.3.3-1: SIP INVITE (step 1, Table 6.1.1.9.3.2-1)

Information Element	Value/remark	Comment	Reference	Condition
Answer-Mode				
answer-mode-value	"Manual"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"			
MCPTT-Info	As described in Table 6.1.1.9.3.3-2			

Table 6.1.1.9.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.9.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1, condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
broadcast-ind	"true"				
alert-ind	"true"				

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

Table 6.1.1.9.3.3-3: SIP 200 (OK) (Step 9, Table 6.1.1.9.3.2-1)

6.1.1.10 On-network / Broadcast Group Call with Temporary Group / Client Originated (CO)

6.1.1.10.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Broadcast

Group Call with Temporary Group }

then { UE (MCPTT Client) requests On-demand Pre-arranged Broadcast Group Call by sending a SIP
INVITE message via HTTP POS }
}

6.1.1.10.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 4.12, 6.2.8.2 and 10.1.1.2.1.1, and TS 24.481 clause 6.3.14. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 4.12]

A broadcast group call is a group call where the initiating MCPTT user expects no response from the other MCPTT users, so that when the user's transmission is complete, so is the call. The functionality in the present release of the specification for broadcast group calls is not compliant to the requirements for user-broadcast group and group-broadcast group calls as specified in 3GPP TS 22.179 [2], 3GPP TS 22.280 [76] and 3GPP TS 23.379 [3]. In the present release of the specification, a broadcast group call can be initiated by an MCPTT user on any MCPTT group that the MCPTT user is part of.

- NOTE 1: Configuration related to the authorisation to create a user-broadcast group or a group-broadcast exists in the user profile document as specified in 3GPP TS 24.484 [50], but is not used by any procedures in 3GPP TS 24.481 [31] in the current release, as the ability for an authorised user to create user-broadcast groups and group-broadcast groups is not provided in the current release.
- NOTE 2: Configuration related to broadcast group hierarchies can be found in the group document as specified in 3GPP TS 24.481 [31] and in the service configuration document as specified in 3GPP TS 24.484 [50]. However, this configuration is not used by any procedures in 3GPP TS 24.380 [5] in the current release.

[TS 24.379, clause 6.2.8.2]

NOTE: This subclause is referenced from other procedures.

When the MCPTT user initiates a broadcast group call, the MCPTT client:

- 1) in the case of the prearranged group call is initiated on-demand, shall include in the application/vnd.3gpp.mcpttinfo+xml MIME body the
broadcast-ind> element set to "true" as defined in clause F.1; and
- 2) in the case the prearranged group call is initiated using a pre-established session, shall include in the application/vnd.3gpp.mcptt-info+xml MIME body in the "body" URI header field in the Refer-To header field the
broadcast-ind> element set to "true" as defined in clause F.1.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

• • •

- 3) if the MCPTT user has requested the origination of a broadcast group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.2;
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

• • •

- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.
- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.481 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.
- 15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;
- 16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];

•••

3) may subscribe to the conference event package as specified in subclause 10.1.3.1.

•••

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

[TS 24.481, clause 6.3.14]

In order to form a temporary MCS group, a GMC shall send a HTTP POST request according to procedures specified in IETF RFC 2616 [21] and subclause 6.2.3. In the HTTP POST request, the GMC:

- a) shall set the Request-URI to an XCAP URI:
 - 1) in users tree where the XUI is set to a group creation XUI configuration parameter; and
 - 2) with the document selector identifying the temporary MCS group to be created; and
- b) shall include an application/vnd.3gpp.GMOP+xml MIME body containing a GMOP document requesting group regroup creation specified in subclause 7.3.4.3, with a <group> element containing a group document for an MCS group. In the group document, the GMC shall include the <on-network-temporary> element according to subclause 7.2. In the <on-network-temporary> element, the GMC shall include <constituent-MCPTT-group-IDs> element according to subclause 7.2. In the <constituent-MCPTT-group-IDs> element, the GMC shall include one <constituent-MCPTT-group-ID> element according to subclause 7.2 for each MCS group to be combined.

Upon reception of an HTTP 2xx response to the sent HTTP POST request, the GMC shall consider the temporary MCS group formation as successful.

Upon reception of an HTTP 409 (Conflict) response with at least one <alt-value> element in the <uniqueness-failure> error element, the GMC may repeat procedures of the present subclause and identify the temporary MCS group being formed with an MCS Group ID indicated in an <alt-value> element.

- 6.1.1.10.3 Test description
- 6.1.1.10.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The UE has affiliated to a MCPTT temporary group identity TGI, identifying a MCPTT temporary group GROUP B as a member of MCPTT broadcast group GROUP A.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.
- 6.1.1.10.3.2 Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand pre- arranged broadcast group call for the selected MCPTT temporary group GROUP B as a member of the MCPTT broadcast group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand pre- arranged broadcast group call with temporary group?	>	HTTP POS SIP INVITE	1	Р
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	HTTP 2xx SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

Table 6.1.1.10.3.2-1: Main Behaviour

6.1.1.10.3.3

Specific message contents

Table 6.1.1.10.3.3-1: SIP INVITE (step 2, Table 6.1.1.10.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Resource-Priority	not included in header				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				

MCPTT-Info	As described in Table		
	6.1.1.10.3.3-2		

Table 6.1.1.10.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.10.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1, condition GROUP-CALL					
Information Element Value/remark Comment Reference Condition					
mcpttinfo					
mcptt-Params					
broadcast-ind	"true"				

Table 6.1.1.10.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.1.10.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

6.1.1.11 On-network / Pre-arranged Emergency Group Call / Client Originated (CO)

6.1.1.11.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Emergency
Group Call }
 then { UE (MCPTT Client) requests On-demand Pre-arranged Emergency Group Call by sending a SIP

then { UE (MCPTT Client) requests On-demand Pre-arranged Emergency Group Call by sending a SIP
INVITE message and responds to the SS with correct SIP messages }
}

6.1.1.11.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 6.2.8.2 and 10.1.1.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 6.2.8.2]

NOTE: This subclause is referenced from other procedures.

When the MCPTT user initiates a broadcast group call, the MCPTT client:

- 1) in the case of the prearranged group call is initiated on-demand, shall include in the application/vnd.3gpp.mcpttinfo+xml MIME body the
broadcast-ind> element set to "true" as defined in clause F.1; and
- 2) in the case the prearranged group call is initiated using a pre-established session, shall include in the application/vnd.3gpp.mcptt-info+xml MIME body in the "body" URI header field in the Refer-To header field the
broadcast-ind> element set to "true" as defined in clause F.1.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

 if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT prearranged group call and the MCPTT emergency state is already set, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.1;

•••

- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 12) if the MCPTT client emergency group state for this group is set to "MEG 2: in-progress" or "MEG 4: confirmpending", the MCPTT client shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2;

•••

- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.
- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.481 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.
- 15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;
- 16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4; and
- 3) may subscribe to the conference event package as specified in subclause 10.1.3.1.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

1) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or

...

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

6.1.1.11.3 Test description

6.1.1.11.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.11.3.2

Test procedure sequence

Table 6.1.1.11.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand pre- arranged emergency group call for the selected MCPTT emergency group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand pre- arranged emergency group call?	>	SIP INVITE	1	Р
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.11.3.3 Specific message contents

Table 6.1.1.11.3.3-1: SIP INVITE (step 2, Table 6.1.1.11.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1, condition EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.1.11.3.3-2				

Table 6.1.1.11.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.11.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"prearranged"				
mcptt-request-uri	px_MCPTT_Group_A_ID				
broadcast-ind	"true"				

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

Table 6.1.1.11.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.1.11.3.2-1)

6.1.1.12 On-network / Pre-arranged Emergency Group Call / Client Terminated (CT)

6.1.1.12.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT Client receives a SIP INVITE message with a emergency indication of an MCPTT Ondemand Pre-arranged emergency Group Call }
 then { the MCPTT Client displays an indication for the Pre-arranged MCPTT emergency group call
to the user and responds to the SS with correct SIP messages }
 }
 (2)

with { UE (MCPTT Client) having an incoming Pre-arranged MCPTT emergency group call and the Answer-Mode header in the SIP INVITE message is set to Manual } ensure that { when { the user answers the MCPTT emergency group call } then { UE sends a SIP 200 OK as a response to the SIP INVITE message }

. [011 5

6.1.1.12.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clauses 4.12, 6.2.8.2 and 10.1.1.2.1.2. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 4.12]

A broadcast group call is a group call where the initiating MCPTT user expects no response from the other MCPTT users, so that when the user's transmission is complete, so is the call. The functionality in the present release of the specification for broadcast group calls is not compliant to the requirements for user-broadcast group and group-broadcast group calls as specified in 3GPP TS 22.179 [2], 3GPP TS 22.280 [76] and 3GPP TS 23.379 [3]. In the present release of the specification, a broadcast group call can be initiated by an MCPTT user on any MCPTT group that the MCPTT user is part of.

- NOTE 1: Configuration related to the authorisation to create a user-broadcast group or a group-broadcast exists in the user profile document as specified in 3GPP TS 24.484 [50], but is not used by any procedures in 3GPP TS 24.481 [31] in the current release, as the ability for an authorised user to create user-broadcast groups and group-broadcast groups is not provided in the current release.
- NOTE 2: Configuration related to broadcast group hierarchies can be found in the group document as specified in 3GPP TS 24.481 [31] and in the service configuration document as specified in 3GPP TS 24.484 [50]. However, this configuration is not used by any procedures in 3GPP TS 24.380 [5] in the current release.

[TS 24.379, clause 6.2.8.2]

NOTE: This subclause is referenced from other procedures.

When the MCPTT user initiates a broadcast group call, the MCPTT client:

- 1) in the case of the prearranged group call is initiated on-demand, shall include in the application/vnd.3gpp.mcpttinfo+xml MIME body the
broadcast-ind> element set to "true" as defined in clause F.1; and
- 2) in the case the prearranged group call is initiated using a pre-established session, shall include in the application/vnd.3gpp.mcptt-info+xml MIME body in the "body" URI header field in the Refer-To header field the
broadcast-ind> element set to "true" as defined in clause F.1.

[TS 24.379, clause 10.1.1.2.1.2]

In the procedures in this subclause:

1) emergency indication in an incoming SIP INVITE request refers to the <emergency-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and

...

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 4) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - ii) should display the MCPTT group identity of the group with the emergency condition contained in the <mcptt-calling-group-id> element; and
 - iii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - b) shall set the MCPTT emergency group state to "MEG 2: in-progress";

• • •

6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;

...

- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.
- 6.1.1.12.3 Test description
- 6.1.1.12.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.12.3.2 Test procedure sequence

Table 6.1.1.12.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict	
		U - S	Message			
1	The SS initiates an On-demand pre-arranged MCPTT emergency group call with manual commencement mode, with explicit floor control by sending an SIP INVITE message.	<	SIP INVITE	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	Check: Does the UE (MCPTT client) respond with a SIP 183 (Session Progress)?	>	SIP 183 (Session Progress)	1	Р	
3	The SS responds to the SIP 183 (Session Progress) with a SIP PRACK	<	SIP PRACK			
4	Check: Does the UE (MCPTT client) respond with a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р	
5	Check: Dose the MCPTT client display an indication for the Pre-arranged MCPTT emergency group call to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р	
6	Make the MCPTT User answer the call	-	-	-	-	
7	Check: Does the UE (MCPTT client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р	
8	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-	
9	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-	
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-	

6.1.1.12.3.3

Specific message contents

Information Element], Table 5.5.2.5.2-1, condition EME Value/remark	Comment	Reference	Condition
Answer-Mode	Valuo, i omark	oonnent	Reference	Condition
answer-mode-value	"Manual"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"			
MCPTT-Info	As described in Table 6.1.1.12.3.3-2			

Table 6.1.1.12.3.3-1: SIP INVITE (step 1, Table 6.1.1.12.3.2-1)

Table 6.1.1.12.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.12.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
session-type	"prearranged"					
mcptt-calling-group-id	px_MCPTT_Group_A_ID					
broadcast-ind	"true"					

Table 6.1.1.12.3.3-3: SIP 200 (OK) (Step 9, Table 6.1.1.12.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

6.1.1.13 On-network / Pre-arranged Emergency Group Call / Client Originated (CO)

6.1.1.13.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT User requests the establishment of an MCPTT On-demand Pre-arranged Imminent Peril
Group Call }
 the function of the MCPTT Client) conde a SID INVITE measure to get the the Imminent Peril Croup Call }

then { $U\!E$ (MCPTT Client) sends a SIP INVITE message to setup the Imminent Peril Group Call } }

6.1.1.13.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clauses 6.2.8.2 and 10.1.1.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT prearranged group session the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

•••

2) if the MCPTT user has requested the origination of an MCPTT imminent peril group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.9;

•••

- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 8) should include the "timer" option tag in the Supported header field;
- 9) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the "refresher" header field parameter is omitted. If included, the "refresher" header field parameter shall be set to "uac";
- 10) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 11)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

...

- 13) if the MCPTT client imminent peril group state for this group is set to "MIG 2: in-progress" or "MIG 3: confirmpending" shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 14) shall contain in an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "prearranged";
 - b) the <mcptt-request-uri> element set to the group identity;
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client; and
- NOTE 2: The MCPTT client does not include the MCPTT ID of the originating MCPTT user in the body, as this will be inserted into the body of the SIP INVITE request that is sent from the originating participating MCPTT function.
 - d) if the group identity can be determined to be a TGI and if the MCPTT client can associate the TGI with a MCPTT group ID, the <associated-group-id> element set to the MCPTT group ID;
- NOTE 3: The text "can associate the TGI with a MCPTT group ID" means that the MCPTT client is able to determine that there is a constituent group of the temporary group that it is a member of.
- NOTE 4: The MCPTT client is informed about temporary groups and regrouping of MCPTT groups that the user is a member of as specified in 3GPP TS 24.481 [31].
- NOTE 5: If the MCPTT user selected a TGI where there are several MCPTT groups where the MCPTT user is a member, the MCPTT client selects one of those MCPTT groups.
- 15) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.1;
- 16) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 17) shall send the SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4; and
- 3) may subscribe to the conference event package as specified in subclause 10.1.3.1.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

•••

- 2) if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";
- the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

6.1.1.13.3 Test description

6.1.1.13.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.13.3.2

Test procedure sequence

Table 6.1.1.13.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand pre- arranged imminent peril group call for the selected MCPTT imminent peril group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand pre- arranged imminent peril group call?	>	SIP INVITE	1	Р
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.13.3.3 Specific message contents

Table 6.1.1.13.3.3-1: SIP INVITE (step 2, Table 6.1.1.13.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1, condition IMMPERIL-CALL and GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.1.13.3.3-2				

Table 6.1.1.13.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.13.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
mcptt-request-uri	px_MCPTT_Group_A_ID				

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

Table 6.1.1.13.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.1.13.3.2-1)

6.1.1.14 On-network / Pre-Arranged Imminent Peril Group Call / Client Terminated (CT)

6.1.1.14.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT Client receives a SIP INVITE message of an MCPTT On-demand Pre-arranged Imminent
Peril Group Call }

```
then { the MCPTT Client displays an indication for the Pre-arranged MCPTT imminent peril group
call to the user and responds to the SS with correct SIP messages }
}
```

(2)

```
with { UE (MCPTT Client) having an incoming Pre-arranged MCPTT imminent peril group call and the
Answer-Mode header in the SIP INVITE message is set to Manual }
ensure that {
   when { the user answers the MCPTT imminent peril group call }
    then { UE sends a SIP 200 OK as a response to the SIP INVITE message }
   }
}
```

6.1.1.14.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.1.2.1.2. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.1.2.1.2]

In the procedures in this subclause:

•••

2) imminent peril indication in an incoming SIP INVITE request refers to the <imminentperil-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body.

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 5) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT imminent peril group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT imminent peril group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) should display the MCPTT group identity of the group with the imminent peril condition contained in the <mcptt-calling-group-id> element; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";

- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode, yet the invited MCPTT client allows the call to be answered with automatic commencement mode;
- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.2 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is to use manual commencement mode; or
 - b) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode, yet the invited MCPTT client allows the call to be answered with manual commencement mode; and
- 9) when the SIP 200 (OK) response to the SIP INVITE request is sent, may subscribe to the conference event package as specified in subclause 10.1.3.1.

6.1.1.14.3 Test description

6.1.1.14.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.14.3.2

Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The SS initiates an On-demand pre-arranged MCPTT imminent peril group call with manual commencement mode, with explicit floor control by sending an SIP INVITE message.	<	SIP INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) respond with a SIP 183 (Session Progress)?	>	SIP 183 (Session Progress)	1	Р
3	The SS responds to the SIP 183 (Session Progress) with a SIP PRACK.	<	SIP PRACK		
4	Check: Does the UE (MCPTT client) respond with a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
5	Check: Dose the MCPTT client display an indication for the Pre-arranged MCPTT imminent peril group call to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р
6	Make the MCPTT User answer the call.	-	-	-	-
7	Check: Does the UE (MCPTT client) answer the call with a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
8	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
9	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.1.14.3.3

Specific message contents

Table 6.1.1.14.3.3-1: SIP INVITE (step 1, Table 6.1.1.14.3.2-1)

Information Element	, Table 5.5.2.5.2-1, condition IMM Value/remark	Comment	Reference	Condition
Answer-Mode				
answer-mode-value	"Manual"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"			
MCPTT-Info	As described in Table 6.1.1.14.3.3-2			

Table 6.1.1.14.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.1.14.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
alert-ind	"true"				
mcptt-calling-group-id	px_MCPTT_Group_A_ID				

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element Value/remark Comment Reference Condition					
Content-Type	Not Included				

Table 6.1.1.14.3.3-3: SIP 200 (OK) (Step 9, Table 6.1.1.14.3.2-1)

6.1.1.15 On-network / Emergency Alert / Cancel Emergency Alert / Client Originated (CO)

6.1.1.15.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate an emergency alert } ensure that {

```
when { the MCPTT User requests to send an emergency alert with the location of emergency }
    then { UE (MCPTT Client) sends a SIP MESSAGE initiating an emergency alert and reporting the
    specific location information }
    }
}
```

(2)

```
with { UE (MCPTT Client) in the "MEA3: emergency-alert-initiated" state}
ensure that {
   when { the MCPTT User requests to cancel the emergency alert}
     then { UE (MCPTT Client) sends a SIP MESSAGE requesting the cancelation of the emergency alert}
   }
}
```

6.1.1.15.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 12.1.1.1, 12.1.1.2. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379 clause 12.1.1.1]

Upon receiving a request from the MCPTT user to send an MCPTT emergency alert to the indicated MCPTT group and this is an authorised request for an MCPTT emergency alert as determined by subclause 6.2.8.1.6, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33] with the clarifications given below.

NOTE 1: this SIP MESSAGE request is assumed to be sent out-of-dialog.

The MCPTT client:

- 1) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP MESSAGE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 3) may include a P-Preferred-Identity header field in the SIP MESSAGE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 4) shall include an application/vnd.3gpp.mcptt-info+xml MIME body as specified in clause F.1 with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <mcptt-request-uri> element set to the group identity;
 - b) the <alert-ind> element set to a value of "true"; and
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;

- 5) shall include an application/vnd.3gpp.mcptt-location-info+xml MIME body as specified in Annex F.3 with a <Report> element included in the <location-info> root element;
- 6) shall include in the <Report> element the specific location information configured for the MCPTT emergency alert location trigger;
- 7) shall set the MCPTT emergency state if not already set;
- 8) shall set the MCPTT emergency alert state to "MEA 2: emergency-alert-confirm-pending";
- 9) shall set the Request-URI to the public service identity identifying the participating MCPTT function serving the group identity; and
- 10) shall send the SIP MESSAGE request according to rules and procedures of 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP MESSAGE request, the MCPTT client shall set the MCPTT emergency alert state to "MEA 3: emergency-alert-initiated".

On receiving a SIP 4xx response a SIP 5xx response or a SIP 6xx response to the SIP MESSAGE request, the MCPTT client shall set the MCPTT emergency alert state to "MEA 1: no-alert".

NOTE 2: the MCPTT emergency state is left set in this case as the MCPTT user presumably is in the best position to determine whether or not they are in a life-threatening condition. The assumption is that the MCPTT user can clear the MCPTT emergency state manually if need be.

[TS 24.379 clause 12.1.1.2]

Upon receiving a request from the MCPTT user to send an MCPTT emergency alert cancellation to the indicated MCPTT group and this is an authorised request for an MCPTT emergency alert cancellation as determined by subclause 6.2.8.1.6, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33] with the clarifications given below.

NOTE 1: This SIP MESSAGE request is assumed to be sent out-of-dialog.

The MCPTT client:

- 1) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP MESSAGE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 3) may include a P-Preferred-Identity header field in the SIP MESSAGE request containing the public user identity of the originator as specified in 3GPP TS 24.229 [4];
- 4) shall include an application/vnd.3gpp.mcptt-info+xml MIME body as specified in clause F.1 with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <mcptt-request-uri> element set to the MCPTT group identity;
 - b) the <alert-ind> element set to a value of "false"; and
 - c) if the MCPTT user is cancelling an MCPTT emergency alert originated by another MCPTT user, include the <originated-by> element set to the MCPTT ID of the MCPTT user who originated the MCPTT emergency alert;
- 5) if the MCPTT user has additionally requested the cancellation of the in-progress emergency state of the MCPTT group and this is an authorised request for an in-progress emergency group state cancellation as determined by subclause 6.2.8.1.7, shall include an <emergency-ind> element set to a value of "false" in the <mcpttinfo> element containing the <mcptt-Params> element;
- 6) shall set the Request-URI to the public service identity identifying the participating MCPTT function serving the group identity;

- 7) if the generated SIP MESSAGE request does not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body, shall set the MCPTT emergency alert state to "MEA 4: Emergency-alert-cancel-pending"; and
- 8) shall send the SIP MESSAGE request according to rules and procedures of 3GPP TS 24.229 [4].

On receipt of a SIP MESSAGE request containing an application/vnd.3gpp.mcptt-info+xml MIME body with an <alert-ind-rcvd> element set to true and an <mcptt-client-id> matching the MCPTT client ID included in the sent SIP MESSAGE request:

- if the <alert-ind> element is set to a value of "false" in the application/vnd.3gpp.mcptt-info+xml MIME body of the received SIP MESSAGE request and the sent SIP MESSAGE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body, shall:
 - a) set the MCPTT emergency alert state to "MEA 1: no-alert"; and
 - b) clear the MCPTT emergency state if not already cleared;
- 2) if the <alert-ind> element in the application/vnd.3gpp.mcptt-info+xml MIME body of the received SIP MESSAGE request is set to a value of "true" and if the MCPTT emergency alert state is set to "MEA 4: Emergency-alert-cancel-pending" and the sent SIP MESSAGE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body, shall set the MCPTT emergency alert state to "MEA 3: emergency-alert-initiated"; and
- NOTE 2: It would appear to be an unusual situation for the initiator of an MCPTT emergency alert to not be able to clear their own alert. Nevertheless, an MCPTT user can be configured to be authorised to initiate MCPTT emergency alerts but not have the authority to clear them. Hence, the case is covered here.
- 3) if an <emergency-ind> element is present in the application/vnd.3gpp.mcptt-info+xml MIME body of received SIP MESSAGE request and is set to a value of "false":
 - a) shall set the MCPTT emergency group call state of the group to "MEGC 1: emergency-gc-capable"; and
 - b) shall set the MCPTT emergency group state of the group to "MEG 1: no-emergency".
- NOTE 3: The case where an <emergency-ind> element is set to true is possible but not handled specifically above as it results in no state changes.

On receiving a SIP 4xx response, SIP 5xx response or SIP 6xx response to the sent SIP MESSAGE request:

- if the received SIP 4xx response, SIP 5xx response or SIP 6xx response contains an application/vnd.3gpp.mcpttinfo+xml MIME body as specified in clause F.1 with the <mcpttinfo> element containing the <mcptt-Params> element with the <alert-ind> element set to a value of "true", the sent SIP MESSAGE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body and the MCPTT emergency alert state is set to "MEA 4: Emergency-alert-cancel-pending", shall set the MCPTT emergency alert state to "MEA 3: emergency-alert-initiated"; and
- NOTE 4: In this case, an <emergency-ind> element would either not be present or would be set to true. In either case, no change in state would result. Hence, this case is not specified above.
- 2) if the received SIP 4xx response, SIP 5xx response or a SIP 6xx response to the SIP MESSAGE request does not contain an application/vnd.3gpp.mcptt-info+xml MIME body with an <alert-ind> element, the sent SIP MESSAGE request does not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body and the MCPTT emergency alert state is set to "MEA 4: Emergency-alert-cancel-pending", shall set the MCPTT emergency alert state to "MEA 3: emergency-alert-initiated".
- 6.1.1.15.3 Test description
- 6.1.1.15.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)

- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- GNSS simulator to simulate a location.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 to provide a location, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.15.3.2

Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
0	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may				
	be performed by MMI or AT command				
	(+CUTCR).				
1	Make the MCPTT User request the	-	-	-	-
	establishment of an emergency alert.				
	Note: This is expected to be done via a				
	suitable implementation dependent MMI				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				_
2	Check: Does the UE (MCPTT Client) send a	>	SIP MESSAGE	1	Р
	SIP MESSAGE request for an emergency alert				
	providing location information?				
3	SS (MCPTT Server) responds with 200 OK	<	SIP 200 (OK)		
4	Make the MCPTT User request to send an	-	-	-	-
	emergency alert cancellation to the MCPTT				
	group.				
	Note: This is expected to be done via a				
	suitable implementation dependent MMI				
5	Check: Does the UE (MCPTT Client) send a	>	SIP MESSAGE	2	Р
	SIP MESSAGE request to cancel the				
	emergency alert?				
6	SS (MCPTT Server) responds with 200 OK	<	SIP 200 (OK)		
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				

6.1.1.15.3.3 Specific message contents

Table 6.1.1.15.3.3-1: SIP MESSAGE (Step 2, Table 6.1.1.15.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.4.1-1, Table 5.5.2.22.2.1-1, Condition EMERGENCY-ALERT						
Information Element Value/remark Comment Condi						
alert-ind	"true"		EMERGEN			
			CY-ALERT			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.1-1.						
Information Element	Value/remark	Comment	Reference	Condition		
location-info	present					
Report	present					
TriggerID	a unique string to identify what triggered the location report	The value need not be checked however the inclusion of a non-zero length string shall be verified. For the string semantics see TS 24.379 [9] clause F.3.				
CurrentLocation						
CurrentCoordinate		As per the location simulated by the GNSS simulator at the time of transmission of the message				
longitude	The longitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.					
latitude	The latitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3+/- 0.00013 degrees.					

Table 6.1.1.15.3.3-1A: Location-Info in SIP MESSAGE (Table 6.1.1.15.3.3-1)

Table 6.1.1.15.3.3-2: SIP 200 (OK) (steps 3, 6, Table 6.1.1.15.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17-1.2-1			
Information Element	Value/remark	Comment	Condition
Content-Type	Not Included		

Table 6.1.1.15.3.3-3: SIP MESSAGE (Step 5, Table 6.1.1.15.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1					
Information Element	Value/remark	Comment	Condition		
alert-ind	"false"				

6.1.1.16 On-network / Emergency Alert / Client Terminated (CT)

6.1.1.16.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service}
ensure that {
 when { MCPTT Server notifies the UE (MCPTT client) with an emergency alert with the location of
 emergency by sending the UE (MCPTT Client) a SIP MESSAGE }
 then {UE (MCPTT client) acknowledges the emergency alert by sending a SIP 200 (OK) response and
 notifies the user of the emergency alert }
 }
}

(2)

with { UE (MCPTT Client) having been previously notified of an emergency alert}
ensure that {
 when { MCPTT Server sends an emergency alert cancellation to the UE (MCPTT client) }

then {UE (MCPTT client) acknowledges the cancellation of the emergency state by sending a SIP
200 (OK) response and notifies the user of the cancellation }
}

6.1.1.16.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clause 12.1.1.3. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379 clause 12.1.1.3]

Upon receipt of a "SIP MESSAGE request for emergency notification", the MCPTT client:

- 1) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <alert-ind> element set to a value of "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information, including:
 - a) the MCPTT group identity contained in <mcptt-calling-group-id> element application/vnd.3gpp.mcpttinfo+xml MIME body;
 - b) the originator of the MCPTT emergency alert contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - c) the mission critical organization of the MCPTT emergency alert originator contained in the <mc-org> element of the application/vnd.3gpp.mcptt-info+xml MIME body;

NOTE 1: This is the case of the MCPTT client receiving the notification of another MCPTT user's emergency alert.

- 2) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <alert-ind> element set to a value of "false":
 - a) should display to the MCPTT user an indication of the MCPTT emergency alert cancellation and associated information, including:
 - i) the MCPTT group identity contained in the <mcptt-calling-group-id> element application/vnd.3gpp.mcptt-info+xml MIME body;
 - ii) the originator of the MCPTT emergency alert contained in:
 - A) if present, the <originated-by> element of the application/vnd.3gpp.mcptt-info+xml MIME body; or
 - B) the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - b) if the MCPTT ID contained in the <originated-by> element is the MCPTT ID of the receiving MCPTT user, shall set the MCPTT emergency alert state to "MEA 1: no-alert"; and
 - c) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <emergency-ind> element set to a value of "false":
 - i) shall set the MCPTT emergency group state to "MEG 1: no-emergency"; and
 - ii) shall set the MCPTT emergency group call state to "MEGC 1: emergency-gc-capable";
- NOTE 2: This is the case of the MCPTT client receiving the notification of the cancellation by a third party of an MCPTT emergency alert. This can be the MCPTT emergency alert of another MCPTT user or the MCPTT emergency alert of the recipient, as determined by the contents of the <originated-by> element. Optionally, notification of the cancellation of the in-progress emergency state of the MCPTT group can be included.
- 3) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication of the additional emergency MCPTT user participating in the MCPTT emergency group call including the following if not already displayed as part of step 1):

- i) the MCPTT group identity contained in the <mcptt-calling-group-id> element application/vnd.3gpp.mcptt-info+xml MIME body; and
- ii) the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
- b) shall set the MCPTT emergency group state to "MEG 2: in-progress" if not already set to that value;
- NOTE 3: This is the case of the MCPTT client receiving notification of an additional MCPTT user in an MCPTT emergency state (i.e., not the MCPTT user that originally triggered the in-progress emergency state of the group) joining the in-progress emergency group call. An emergency alert indication, if included, is handled in step 1).
- 4) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <emergency-ind> element set to a value of "false":
 - a) should display to the MCPTT user an indication of the cancellation of the in-progress emergency state of the MCPTT group call including the following if not already displayed as part of step 2):
 - i) the MCPTT group identity contained in the <mcptt-calling-group-id> element application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - b) shall set the MCPTT emergency group state to "MEG 1: no-emergency"; and
 - c) shall set the MCPTT emergency group call state to "MEGC 1: emergency-gc-capable";
- NOTE 4: This is the case of the MCPTT client receiving the notification of the cancellation of the in-progress emergency state of the MCPTT group. In this case, the receiving MCPTT client is affiliated with the MCPTT group but not participating in the session. An emergency alert cancellation, if included, is handled in step 2).
- 5) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication of the MCPTT user participating in the MCPTT imminent peril group call including the following if not already displayed as part of step 1):
 - i) the MCPTT group identity contained in the <mcptt-calling-group-id> element application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress" if not already set to that value;
- NOTE 5: This is the case of the MCPTT client receiving notification of an additional MCPTT user initiating an imminent peril group call when there is already an in-progress imminent peril state in effect on the group.
- 6) if the received SIP MESSAGE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <imminentperil-ind> element set to a value of "false":
 - a) should display to the MCPTT user an indication of the cancellation of the in-progress imminent peril state of the MCPTT group including the following if not already displayed as part of step 2):
 - i) the MCPTT group identity contained in the <mcptt-calling-group-id> element application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - b) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - c) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable";
- NOTE 6: This is the case of the MCPTT client receiving notification of the cancellation of the in-progress imminent peril state of the group.
- 7) shall generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4]; and

3GPP TS 36.579-2 version 14.3.0 Release 14

172

- 8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4].
- 6.1.1.16.3 Test description
- 6.1.1.16.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- GNSS simulator to simulate a location.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 to provide a location, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.1.16.3.2

Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict	
		U - S	Message			
0	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may					
	be performed by MMI or AT command (+CUTCR).					
1	SS sends an emergency alert providing location information.	<	SIP MESSAGE	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 Generic Test Procedure for MCPTT CT communication in E-UTRA '. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	Check: Does the UE (MCPTT Client) respond with a 200 (OK)?	>	SIP 200 (OK)	1	Р	
3	Check: Does the UE (MCPTT Client) notify the user of the emergency alert? Note: This is expected to be done via a suitable implementation dependent MMI	-	-	1	Р	
4	SS sends an emergency alert cancel	<	SIP MESSAGE	-	-	
5	Check: Does the UE (MCPTT Client) respond with a 200 (OK)?	>	SIP 200 (OK)	2	Р	
6	Check: Does the UE (MCPTT Client) notify the user of the emergency alert cancellation? Note: This is expected to be done via a suitable implementation dependent MMI	-	-	2	Р	
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-	

6.1.1.16.3.3 Specific message contents

Table 6.1.1.16.3.3-1: SIP MESSAGE (Step 1, Table 6.1.1.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7, Table 5.5.2.22.2.1-1, Condition EMERGENCY-ALERT					
Information Element Value/remark Comment					
alert-ind	"true"		EMERGEN		
			CY-ALERT		

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.1-1			
Information Element	Value/remark	Comment	Reference	Condition
location-info	present			
Report	present			
TriggerID	"EMERGENCY ALERT"	A randomly chosen string to reflect the trigger of the message.		
CurrentLocation				
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message is for location number #1. The #7 is chosen below to simulate an Emergency alert coming from an User hypothetically located in location #7. No need for GNSS simulaiton for this.		
longitude	The longitude value as specified for location number #7 defined in TS 36.508 [24] Table 4.11.2-3.			
latitude	The latitude value as specified for location number #7 defined in TS 36.508 [24] Table 4.11.2-3.			

Table 6.1.1.16.3.3-1A: Location-Info in SIP MESSAGE (Table 6.1.1.16.3.3-1)

Table 6.1.1.16.3.3-2: SIP 200 (OK) (steps 2, 5, Table 6.1.1.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Condition
Content-Type	Not Included		

Table 6.1.1.16.3.3-3: SIP MESSAGE (Step 4, Table 6.1.1.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.22.2.1-1			
Information Element	Value/remark	Comment	Condition
alert-ind	"false"		

6.1.2 Chat Group Calls

6.1.2.1 On-network / On-demand Chat Group Call / Client Origination (CO)

6.1.2.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service } ensure that {

when { the MCPTT User requests the establishment of an on-demand MCPTT group session using an
MCPTT group identity identifying an chat MCPTT group }
 then { UE (MCPTT Client) requests to join the Chat Group Call by generating a SIP INVITE message

then { UE (MCPTT Client) requests to join the Chat Group Call by generating a SIP INVITE message and, after indication from the MCPTT Server that the join request has been accepted, the UE (MCPTT

3GPP TS 36.579-2 version 14.3.0 Release 14

175

Client) generates a FLOOR REQUEST, and after indication from the MCPTT server that the Floor is granted, the user can participate in the group call $\}$

(2)

```
with { UE (MCPTT Client) having established an on-demand Chat Group Call }
ensure that {
  when { the MCPTT User (MCPTT Client) requests to leave the Chat Group Call }
   then { UE (MCPTT Client) requests to leave the chat group call by sending a Floor Release and,
after indication from the MCPTT server that the Floor Release is accepted, the UE leaves the Chat
Group Call }
            }
(3)
with { UE (MCPTT Client) registered and authorised for MCPTT Services }
ensure that {
  when { the MCPTT User (MCPTT Client) requests the origination of an emergency group call }
    then { UE (MCPTT Client) requests the set up and is able to join an emergency group call, or if
unauthorised indicates to the user that they are not authorised to set up emergency calls and no
call is set up }
            }
(4)
with { UE (MCPTT Client) having established an on-demand Chat Group Call }
ensure that {
  when { the MCPTT User (MCPTT Client) requests the origination of an imminent peril group call }
    then { UE (MCPTT Client) requests the set up and is able to join an imminent peril group call,
or if unauthorised indicates to the user that they are not authorised to set up imminent peril calls
and no call is set up }
            }
```

(5)

```
with { UE (MCPTT Client) having established an on-demand Chat Group Call }
ensure that {
  when { the UE (MCPTT Client) wishes to leave the MCPTT session }
    then { UE (MCPTT Client) initiates leaving by sending a SIP INVITE and leaves the call }
    }
```

6.1.2.1.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.4.1, 10.1.2.2.1.1, 10.1.2.2.1.2, 10.1.2.2.1.3, 10.1.2.2.1.4, 10.1.2.2.1.5, 10.1.2.2.3.1 and 10.1.2.2.3.3. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379 clause 6.2.4.1]

Upon receiving a request from an MCPTT user to leave an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to leave; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379 clause 10.1.2.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT group session using an MCPTT group identity, identifying a chat MCPTT group, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT chat group call and the MCPTT emergency state is already set, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.1;
- 2) if the MCPTT user has requested the origination of an MCPTT imminent peril group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.9;
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 7) should include the "timer" option tag in the Supported header field;
- 8) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the refresher parameter is omitted. If included, the refresher parameter shall be set to "uac";
- 9) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 10)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

• • •

- 13) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "chat";
 - b) the <mcptt-request-uri> element set to the group identity; and
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;
- NOTE 2: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP INVITE request that is sent by the originating participating MCPTT function.
- 14) shall include in the SIP INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- 15) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 16) shall send the SIP INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and

[TS 24.379 clause 10.1.2.2.1.2]

This subclause covers both on-demand session and pre-established sessions.

Upon receipt of a SIP re-INVITE request the MCPTT client:

- if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user the MCPTT ID of the originator of the MCPTT emergency group call and an indication that this is an MCPTT emergency group call;
 - b) if the <mcpttinfo> element containing the <mcptt-Params> element contains an <alert-ind> element set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - c) shall set the MCPTT emergency group state to "MEG 2: in-progress";
 - d) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - e) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable";
- 2) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user the MCPTT ID of the originator of the MCPTT imminent peril group call and an indication that this is an MCPTT imminent peril group call; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";
- 3) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "false":
 - a) should display to the MCPTT user the MCPTT ID of the MCPTT user cancelling the MCPTT emergency group call;
 - b) if the <mcpttinfo> element containing the <mcptt-Params> element contains an <alert-ind> element set to "false":
 - i) should display to the MCPTT user an indication of the MCPTT emergency alert cancellation and the MCPTT ID of the MCPTT user cancelling the MCPTT emergency alert; and
 - ii) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body including an <originated-by> element:
 - A) should display to the MCPTT user the MCPTT ID contained in the <originated-by> element of the MCPTT user that originated the MCPTT emergency alert; and
 - B) if the MCPTT ID contained in the <originated-by> element is the MCPTT ID of the receiving MCPTT user, shall set the MCPTT emergency alert state to "MEA 1: no-alert";
 - c) shall set the MCPTT emergency group state to "MEG 1: no-emergency"; and
 - d) if the MCPTT emergency group call state of the group is set to "MEGC 3: emergency-call-granted", shall set the MCPTT emergency group call state of the group to "MEGC 1: emergency-gc-capable";
- 4) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "false":
 - a) should display to the MCPTT user the MCPTT ID of the MCPTT user cancelling the MCPTT imminent peril group call and an indication that this is an MCPTT imminent peril group call;
 - b) shall set the MCPTT imminent peril group state to "MIG 1: no-imminent-peril"; and
 - c) shall set the MCPTT imminent peril group call state to "MIGC 1: imminent-peril-gc-capable";

- 5) may check if a Resource-Priority header field is included in the incoming SIP re-INVITE request and may perform further actions outside the scope of this specification to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) shall accept the SIP re-INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 8) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- 9) if the SIP re-INVITE request was received within an on-demand session, shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- 10) if the SIP re-INVITE request was received within a pre-established session, shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the pre-established session; and
- NOTE: The SIP re-INVITE request can be received within an on-demand session or a pre-established session associated with an MCPTT group session. If the SIP re-INVITE request is received within a pre-established session, the media-level section for the MCPTT speech media stream and the media-level section of the media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 11) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4].

[TS 24.379 10.1.2.2.1.3]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to cancel the in-progress emergency condition on a chat MCPTT group, the MCPTT client shall generate a SIP re-INVITE request as specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user is not authorised to cancel the in-progress emergency group state of the MCPTT group as determined by the procedures of subclause 6.2.8.1.7, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to cancel the in-progress emergency group state of the MCPTT group; and
 - b) shall skip the remaining steps of the current subclause;
- shall, if the MCPTT user is cancelling an in-progress emergency condition and optionally an MCPTT emergency alert originated by the MCPTT user, include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.3;
- shall, if the MCPTT user is cancelling an in-progress emergency condition and optionally an MCPTT emergency alert originated by another MCPTT user, include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.14;
- 4) shall, if the SIP re-INVITE request is to be sent within an on-demand session, include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session;

- NOTE 1: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session associated with an MCPTT group session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the MCPTT speech media stream and the media-level section of the media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 6) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2; and
- 7) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request, the MCPTT client:

- 1) shall set the MCPTT emergency group state of the group to "MEG 1: no-emergency";
- 2) shall set the MCPTT emergency group call state of the group to "MEGC 1: emergency-gc-capable"; and
- 3) if the MCPTT emergency alert state is set to "MEA 4: Emergency-alert-cancel-pending", the sent SIP re-INVITE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body and the SIP 2xx response to the SIP request for a priority group call does not contain a Warning header field as specified in subclause 4.4 with the warning text containing the mcptt-warn-code set to "149", shall set the MCPTT emergency alert state to "MEA 1: no-alert".

On receiving a SIP 4xx response, SIP 5xx response or SIP 6xx response to the SIP re-INVITE request:

- 1) shall set the MCPTT emergency group state as "MEG 2: in-progress";
- 2) if the SIP 4xx response, SIP 5xx response or SIP 6xx response contains an application/vnd.3gpp.mcptt-info+xml MIME body with an <alert-ind> element set to a value of "true" and the sent SIP re-INVITE request did not contain an <originated-by> element in the application/vnd.3gpp.mcptt-info+xml MIME body, the MCPTT client shall set the MCPTT emergency alert state to "MEA 3: emergency-alert-initiated"; and
- 3) if the SIP 4xx response, SIP 5xx response or SIP 6xx response did not contain an application/vnd.3gpp.mcpttinfo+xml MIME body with an <alert-ind> element and did not contain an <originated-by> element, the MCPTT emergency alert (MEA) state shall revert to its value prior to entering the current procedure.
- NOTE 3: If the in-progress emergency group state cancel request is rejected, the state of the session does not change, i.e. continues with MCPTT emergency group call level priority.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

[TS 24.379 10.1.2.2.1.4]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to upgrade the MCPTT group session to an emergency condition or an imminent peril condition on a chat MCPTT group, the MCPTT client shall generate a SIP re-INVITE request as specified in 3GPP TS 24.229 [4], with the clarifications given below.

- 1) if the MCPTT user is requesting to upgrade the MCPTT group session to an in-progress emergency group state and is not authorised to do so as determined by the procedures of subclause 6.2.8.1.8, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to upgrade the MCPTT group session to an in-progress emergency group state; and
 - b) shall skip the remaining steps of the current subclause;
- 2) if the MCPTT user is requesting to upgrade the MCPTT group session to an in-progress imminent peril state and is not authorised to do so as determined by the procedures of subclause 6.2.8.1.8, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to upgrade the MCPTT group session to an in-progress imminent peril group state; and
 - b) shall skip the remaining steps of the current subclause;

- 3) if the MCPTT user has requested to upgrade the MCPTT group session to an MCPTT emergency call, the MCPTT client:
 - a) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.1; and
 - b) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2.
- 4) if the MCPTT user has requested to upgrade the MCPTT group session to an MCPTT imminent peril call, the MCPTT client:
 - a) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.9; and
 - b) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 5) if the SIP re-INVITE request is to be sent within an on-demand session, shall include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session;
- NOTE: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session associated with an MCPTT group session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 7) if an implicit floor request is required, shall indicate this as specified in subclause 6.4;
- 8) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.2; and
- 9) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall perform the actions specified in subclause 6.2.8.1.4.

On receiving a SIP 4xx response, SIP 5xx response or SIP 6xx response to the SIP re-INVITE request the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

[TS 24.379 10.1.2.2.1.5]

This subclause covers both on-demand session and pre-established sessions.

Upon receiving a request from an MCPTT user to cancel the in-progress imminent peril condition on a chat MCPTT group, the MCPTT client shall generate a SIP re-INVITE request by following the procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user is not authorised to cancel the in-progress imminent peril group state of the MCPTT group as determined by the procedures of subclause 6.2.8.1.10, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to cancel the in-progress imminent peril group state of the MCPTT group; and
 - b) shall skip the remaining steps of the current subclause;
- shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.1.11;

- 3) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;
- 4) shall include in the application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "chat"; and
 - b) the <mcptt-request-uri> element set to the group identity;
- NOTE 1: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP re-INVITE request that is sent by the originating participating MCPTT function.
- 5) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP re-INVITE request according to IETF RFC 3840 [16];
- 6) if the SIP re-INVITE request is to be sent within an on-demand session, shall include in the SIP re-INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- if the SIP re-INVITE request is to be sent within a pre-established session, shall include an SDP offer in the SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the preestablished session; and
- NOTE 2: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session associated with an MCPTT group session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 8) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) shall set the MCPTT imminent peril group state of the group to "MIG 1: no-imminent-peril"; and
- 3) shall set the MCPTT imminent peril group call state of the group to "MIGC 1: imminent-peril-gc-capable".

On receiving a SIP 4xx response, SIP 5xx response or SIP 6xx response to the SIP re-INVITE request:

- 1) if the SIP 4xx response, SIP 5xx response or SIP 6xx response:
 - a) contains an application/vnd.3gpp.mcptt-info+xml MIME body with an <imminentperil-ind> element set to a value of "true"; or
 - b) does not contain an application/vnd.3gpp.mcptt-info+xml MIME body with an <imminentperil-ind> element;

then the MCPTT client shall set the MCPTT imminent peril group state as "MIG 2: in-progress".

NOTE 2: This is the case where the MCPTT client requested the cancellation of the MCPTT imminent peril inprogress state and was rejected.

[TS 24.379 clause 10.1.2.2.3.1]

When an MCPTT client wants to leave the MCPTT session that has been established using on-demand session, the MCPTT client shall follow the procedures as specified in subclause 6.2.4.1.

[TS 24.379 clause 10.1.2.2.3.3]

Upon receiving a SIP BYE request for releasing the MCPTT chat session, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

3GPP TS 36.579-2 version 14.3.0 Release 14

182

6.1.2.1.3 Test description

6.1.2.1.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server).
- E-UTRA related parameters are set to the default parameters for the basic single cell environment, as defined in TS 36.508 [24] subclause 4.4.

IUT:

- UE (MCPTT client) has been provisioned with the Initial UE Configuration Data as specified in TS 36.579-1 [2], subclause 5.5.8.1 allowing for the location of the configuration management server for configuration of the MCPTT UE initial configuration management object (MO) and the default MCPTT user profile configuration management object (MO).
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2] subclause 5.3.2.
- UE States at the end of the preamble:
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and user has registered-in as the MCPTT User with the Server as active user at the client.

6.1.2.1.3.2 Test procedure sequence

Table 6.1.2.1.3.2-1: Main behaviour

St	Procedure	1	Message Sequence	TP	Verdict
51	FIOCEGUIE	U - S	Message Sequence		Veruici
1	Make the UE user initiate an on-demand chat	-	-	-	-
	group call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent				
	mechanism and may be manually or				
	automatically initiated.				
-	EXCEPTION: The E-UTRA/EPC related	-	-	-	-
	actions which step 1 above will trigger are				
	described in TS 36.579-1 [2], subclause 5.4.3				
	'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages being exchanged.				
2	Check: Does the UE (MCPTT Client) send a	>	SIP INVITE	1	Р
	SIP INVITE request.				
3	The SS sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
4	Check: Does the UE (MCPTT Client) send a	>	Floor Request	1	Р
	Floor Request?		·		
5	The SS sends Floor Granted	<	Floor Granted	-	-
6	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent				
7	MMI Make the UE user leave an on-demand chat				
'	group call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent				
	mechanism and may be manually or				
	automatically initiated.				
8	Check: Does the UE (MCPTT Client) sends a	>	Floor Release	2	Р
9	Floor Release? The SS sends a SIP BYE (terminates the		SIP BYE		
9	media plane)	<	SIF BIE	-	-
10	Make the UE user request an MCPTT	-	-	-	-
	emergency group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism				
	and may be manually or automatically				
	initiated.				
11	Check: Does the UE (MCPTT Client) send a	>	SIP INVITE	3	Р
	SIP INVITE request with <emergency_ind> set</emergency_ind>				
10	true?		SID 402 (Earbiddoo)		
12 13	The SS sends SIP 403 (Forbidden). Check: Does the UE (MCPTT client) notify the	<	SIP 403 (Forbidden)	- 3	- P
13	user that the emergency call is not allowed	-	-	3	
	and that the call is not set up?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent				
	MMI.				
14	Make the UE user request an MCPTT	-	-	-	-
	emergency chat group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism				
	and may be manually or automatically				
45	initiated.				<u> </u>
15	Check: Does the UE (MCPTT Client) send a	>	SIP INVITE	3	Р
16	SIP INVITE request? The SS sends SIP re-INVITE request		SIP re-INVITE		_
17	Check: Does the UE (MCPTT Client) send a	< >	SIP 200 (OK)	3	- P
	SIP 200 (OK)?			Ŭ	
l		1	l	1	L

18 Check: Does the UE (MCPTT client) notify the user that the emergency call has been successfully established? - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - - 19 Make the UE user cancel the emergency chat - -	3 P
user that the emergency call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	
successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	
NOTE: This is expected to be done via a suitable implementation dependent MMI.	
suitable implementation dependent MMI.	
MMI.	
10 Make the LIE upper equal the emergency chet	
group session.	
NOTE: This is expected to be done via a	
suitable implementation mechanism	
and may be manually or automatically	
initiated.	
20 The UE sends a SIP INVITE request> SIP INVITE	
21 The SS sends SIP 200 (OK). < SIP 200 (O	()
22 Make the UE user request an imminent peril	
chat group session.	
NOTE: This is expected to be done via a	
suitable implementation mechanism	
and may be manually or automatically	
initiated.	
23 Check: Does the UE (MCPTT Client) send a> SIP INVITE	4 P
SIP INVITE request with <imminentperil_ind></imminentperil_ind>	
set true?	
	riciala e e)
24 The SS sends SIP 403 (Forbidden). < SIP 403 (Forbidden).	
25 Check: Does the UE (MCPTT client) notify the	4 P
user that the imminent peril call is not allowed	
and that the call is not set up?	
NOTE: This is expected to be done via a	
suitable implementation dependent	
MMI.	
26 Make the UE user re-request an imminent peril	
chat group session.	
NOTE: This is expected to be done via a	
suitable implementation mechanism	
and may be manually or automatically	
initiated.	
27 Check: Does the UE (MCPTT Client) send a> SIP INVITE	4 P
SIP INVITE request with <imminentperil_ind></imminentperil_ind>	
set true?	
28 The SS sends SIP re-INVITE request. < SIP re-INV	
29 Check: Does the UE (MCPTT Client) send a> SIP 200 (O	() 4 P
SIP 200 (OK)?	
30 Check: Does the UE (MCPTT client) notify the	4 P
	4 7
user that the imminent peril call has been	
successfully established?	
NOTE: This is expected to be done via a	
suitable implementation dependent	
MMI.	
	- -
group call.	
NOTE: This is expected to be done via a	
suitable implementation mechanism	
suitable implementation mechanism and may be manually or automatically	
suitable implementation mechanism and may be manually or automatically initiated.	
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a > SIP INVITE	5 P
suitable implementation mechanism and may be manually or automatically initiated. . 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE	
suitable implementation mechanism and may be manually or automatically initiated. . 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE	
suitable implementation mechanism and may be manually or automatically initiated. . 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()
suitable implementation mechanism and may be manually or automatically initiated. > SIP INVITE 32 Check: Does the UE (MCPTT Client) send a SIP INVITE to initiate call termination? > SIP INVITE 33 The SS sends SIP 200 (OK) <	()

6.1.2.1.3.3

Specific message contents

Table 6.1.2.1.3.3-1: SIP INVITE (Step 2, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1				
Information Element	Value/remark	Comment	Reference	Condition
Message-body				
MIME-Content-Type				
MCPTT-Info	As described in Table 6.1.2.1.3.3-2			

Table 6.1.2.1.3.3-2: MCPTT-Info in SIP INVITE (Step 2, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.1.3.3-3: SIP INVITE (Step 11 and 15, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.1.3.3-4				

Table 6.1.2.1.3.3-4: MCPTT-Info in SIP INVITE (Step 11 and 15, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.1.3.3-5: SIP INVITE (Step 23 and 27, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1				
Information Element	Value/remark	Comment	Reference	Condition
Message-body				
MIME-Content-Type				
MCPTT-Info	As described in Table 6.1.2.1.3.3-6			

Table 6.1.2.1.3.3-6: MCPTT-Info in SIP INVITE (Step 23 and 27, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition IMMPERIL-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.2.3.3-7: SIP re-INVITE (Step 28, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1, condition IMMPERIL-CALL

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1				
Information Element	Value/remark	Comment	Reference	Condition
Request-Line				
Method	"BYE"			
Content-Type	Not included			

Table 6.1.2.1.3.3-8: SIP INVITE (Step 32, Table 6.1.2.1.3.2-1)

Table 6.1.2.1.3.3-9: SIP 200 (OK) (Step 3, 21 and 33, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not included			

Table 6.1.2.1.3.3-10: SIP 403 (Forbidden) (Step 12, Table 6.1.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.19.1-1				
Information Element	Value/remark	Comment	Reference	Condition
Warning				
mcptt-warn-text	"function not allowed			
	due to user			
	authorisation"			

6.1.2.2 On-network / Chat Group Call Using Pre-established Session Including Emergency and Imminent Peril Calls / Client Server originated Preestablished Session Release with associated MCPTT session / Client Origination (CO)

6.1.2.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {

when { the MCPTT User requests the establishment of an MCPTT group session using an MCPTT group
identity identifying a chat MCPTT group that is within a pre-established session}
 then { UE (MCPTT Client) requests to join the Chat Group Call within a pre-established session

by generating a SIP REFER message **and**, after indication from the MCPTT Server that the join request has been accepted, the user can participate in the group call }

(2)

with { UE (MCPTT Client) having established a Chat Group Call within a pre-established session } ensure that {

when { the MCPTT User (MCPTT Client) requests the origination of an emergency group call }
 then { UE (MCPTT Client) requests the set up and is able to join an emergency group call, or if
 unauthorised indicates to the user that they are not authorised to set up emergency calls and no
 call is set up }
 }

(3)

with { UE (MCPTT Client) having established a Chat Group Call within a pre-established session } ensure that {

when { the MCPTT User (MCPTT Client) requests the origination of an imminent peril group call }
 then { UE (MCPTT Client) requests the set up and is able to join an imminent peril group call,
 or if unauthorised indicates to the user that they are not authorised to set up imminent peril calls
 and no call is set up }

}

```
(4)
```

```
with { UE (MCPTT Client) having established a Chat Group Call within a pre-established session }
ensure that {
   when { the UE (MCPTT Client) wishes to leave the MCPTT session within a pre-established session }
   then { UE (MCPTT Client) initiates leaving by sending a SIP REFER and leaves the call }
   }
}
```

6.1.2.2.2 Conformance Requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 4.9, 6.2.4.2, 10.1.2.2.2, 10.1.2.2.3.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 4.9]

When establishing a pre-established session, the MCPTT client negotiates the media parameters, including establishing IP addresses and ports using interactive connectivity establishment (ICE) as specified in IETF RFC 5245 with the participating MCPTT function, prior to using the pre-established session for establishing MCPTT sessions with other MCPTT users.

The pre-established session can later be used in MCPTT calls. This avoids the need to negotiate media parameters (including evaluating ICE candidates) and reserving bearer resources during the MCPTT call establishment that results in delayed MCPTT call establishment.

The use of pre-established session on the origination side is compatible with the use of on demand session on the termination side. The use of pre-established session on the termination side is compatible with the use of on demand session on the origination side.

[TS 24.379, clause 10.1.2.2.2]

Upon receiving a request from an MCPTT user to establish an MCPTT group session using an MCPTT group identity identifying a chat MCPTT group within the pre-established session, the MCPTT client shall generate a SIP REFER request as specified in IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27], and in accordance with the UE procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) shall set the Request URI of the SIP REFER request to the session identity of the pre-established session;
- 2) shall set the Refer-To header field of the SIP REFER request as specified in IETF RFC 3515 [25] with a Content-ID ("cid") Uniform Resource Locator (URL) as specified in IETF RFC 2392 [62] that points to an application/resource-lists MIME body as specified in IETF RFC 5366 [20], and with the Content-ID header field set to this "cid" URL;
- 3) shall include in the application/resource-lists MIME body a single <entry> element containing a "uri" attribute set to the chat group identity, extended with the following URI header fields:
- NOTE: Characters that are not formatted as ASCII characters are escaped in the following URI header fields;
 - a) the Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
 - b) an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6]; and
 - c) an hname "body" URI header field populated with:
 - i) an application/sdp MIME body containing an SDP offer, if the session parameters of the pre-established session require modification or if implicit floor control is required, according to the conditions specified in subclause 6.4; and
 - ii) an application/vnd.3gpp.mcptt-info MIME body with:
 - A) the <session-type> element set to a value of "chat"; and
 - B) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;

- 4) if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT group call and the MCPTT emergency state is already set:
 - a) if this is an authorised request for an MCPTT emergency group call as determined by the procedures of subclause 6.2.8.8.1.8, shall comply with the procedures in subclause 6.2.8.1.1; and
 - b) if this is an unauthorised request for an MCPTT emergency group call as determined in step a) above, should indicate to the MCPTT user that they are not authorised to initiate an MCPTT emergency group call;

•••

- 6) if the MCPTT user has requested the origination of an MCPTT imminent peril group call:
 - a) if this is an authorised request for an MCPTT imminent peril group call as determined by the procedures of subclause 6.2.8.1.8, shall comply with the procedures in subclause 6.2.8.1.9;
 - b) if this is an unauthorised request for an MCPTT imminent peril group call as determined in step a) above, should indicate to the MCPTT user that they are not authorised to initiate an MCPTT imminent peril group call;

•••

- 8) shall include a P-Preferred-Service header field set to the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), according to IETF RFC 6050 [9];
- 9) shall include the following according to IETF RFC 4488 [22]:
 - a) the option tag "norefersub" in the Supported header field; and
 - b) the value "false" in the Refer-Sub header field.
- 10) shall include a Target-Dialog header field as specified in IETF RFC 4538 [23] identifying the pre-established session;
- 11) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP REFER request according to IETF RFC 3840 [16]; and
- 12) shall send the SIP REFER request according to 3GPP TS 24.229 [4].

On receiving a final SIP 2xx response to the SIP REFER request, the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

On receiving a SIP 4xx response, SIP 5xx response or a SIP 6xx response to the SIP REFER request:

- if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or
- 2) if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5 and shall skip the remaining steps.

On receiving a SIP re-INVITE request within the pre-established session targeted by the sent SIP REFER request, and if the sent SIP REFER request was a request for an MCPTT emergency group call or an MCPTT imminent peril group call, the MCPTT client:

- 1) shall perform the actions specified in subclause 6.2.8.1.16;
- 2) shall check if a Resource-Priority header field is included in the incoming SIP re-INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 3) shall accept the SIP re-INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];

- shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP re-INVITE request according to 3GPP TS 24.229 [4], based upon the parameters already negotiated for the pre-established session; and
- 5) shall send the SIP 200 (OK) response towards the participating MCPTT function according to rules and procedures of 3GPP TS 24.229 [4].

On call release by interaction with the media plane as specified in subclause 9.2.2 of 3GPP TS 24.380 [5] if the sent SIP REFER request was a request for an MCPTT emergency group call or an MCPTT imminent peril group call, the MCPTT client shall perform the procedures specified in subclause 6.2.8.1.17.

[TS 24.379, clause 6.2.4.2]

Upon receiving a request from an MCPTT user to leave an MCPTT session within a pre-established session, the MCPTT client:

•••

- shall generate an initial SIP REFER request outside a dialog in accordance with the procedures specified in 3GPP TS 24.229 [4], IETF RFC 4488 [22] and IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27];
- 3) shall set the Request-URI of the SIP REFER request to the public service identity identifying the pre-established session on the MCPTT server serving the MCPTT user;
- 4) shall include the Refer-Sub header field with value "false" according to rules and procedures of IETF RFC 4488 [22];
- 5) shall include the Supported header field with value "norefersub" according to rules and procedures of IETF RFC 4488 [22];
- 6) shall set the Refer-To header field of the SIP REFER request to the MCPTT session identity to leave;
- 7) shall include the "method" SIP URI parameter with the value "BYE" in the URI in the Refer-To header field;
- 8) shall include a Target-Dialog header field as specified in IETF RFC 4538 [23] identifying the pre-established session; and
- 9) shall send the SIP REFER request according to 3GPP TS 24.229 [4].

[TS 24.379, clause 10.1.2.2.3.2]

When an MCPTT client wants to leave the MCPTT session within a pre-established session, the MCPTT client shall follow the procedures as specified in subclause 6.2.4.2.

6.1.2.2.3 Test description

6.1.2.2.3.1 Pre-test conditions

System Simulator:

SS (MCPTT server)

For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10, is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT client has followed the steps defined in TS 36.579-1 [2], subclause 5.3.3 Generic Test Procedure for MCPTT pre-established session establishment CO.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.2.3.2 Test procedure sequence

Table 6.1.2.2.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
	110000010	U - S	Message		
1	Make the UE user initiate a chat group call	-	-	-	-
	over the pre-established session.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent mechanism and may be manually or				
	automatically initiated.				
-	EXCEPTION: The E-UTRA/EPC related	-	-		-
	actions which step 1 above will trigger are				
	described in TS 36.579-1 [2], subclause 5.4.3				
	'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages being exchanged.				_
2	Check: Does the UE (MCPTT Client) send a SIP REFER request.	>	SIP REFER	1	Р
3	The SS sends SIP 200 (OK).	<	SIP 200 (OK)		_
4	The SS sends a Connect message.	<	Connect	-	_
5	Check: Does the UE (MCPTT Client) send an	>	Acknowledge	1	Р
Ĭ	Acknowledge?				
6	The SS sends Floor Granted.	<	Floor Granted	-	-
7	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
0	suitable implementation dependent MMI. The SS sends Disconnect (terminates the		Disconnect		
8	media plane).	<	Disconnect	-	-
9	The UE (MCPTT Client) sends a media plane	>	Acknowledge	-	-
Ĩ	Acknowledge.				
10	Make the UE user request an MCPTT	-	-	-	-
	emergency group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism and may be manually or automatically initiated.				
11	Check: Does the UE (MCPTT Client) send a	>	SIP REFER	2	Р
	SIP REFER request with <emergency_ind> set</emergency_ind>				
	true?				
12	The SS sends SIP 403 (Forbidden).	<	SIP 403 (Forbidden)	-	-
13	Check: Does the UE (MCPTT client) notify the	-	-	2	Р
	user that the emergency call is not allowed				
	and that the call is not set up?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
14	Make the UE user request an MCPTT	-	-	-	-
	emergency chat group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism and may				
15	be manually or automatically initiated.		SIP REFER	2	Р
10	Check: Does the UE (MCPTT Client) send a SIP REFER request?	>		2	Г
16	The SS sends SIP re-INVITE request	<	SIP re-INVITE	-	-
17	Check: Does the UE (MCPTT Client) send a	>	SIP 200 (OK)	2	Р
	SIP 200 (OK)?				
18	Check: Does the UE (MCPTT client) notify the	-	-	2	Р
	user that the emergency call has been				
	successfully established?				
	NOTE: This is expected to be dependent				
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
L		L	1		

10	Make the LIE upper equal the emergency shot			T I	1
19	Make the UE user cancel the emergency chat	-	-	-	-
	group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism and may				
	be manually or automatically initiated.				
20	The UE sends a SIP REFER request.		SIP REFER		
		>		-	-
21	The SS sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
22	Make the UE user request an imminent peril	-	-	-	-
	chat group session.				
	NOTE: This is supported to be done via a				
	NOTE: This is expected to be done via a suitable implementation mechanism and may				
23	be manually or automatically initiated. Check: Does the UE (MCPTT Client) send a		SIP REFER	3	Р
23		>	SIP REFER	3	Р
	SIP REFER request with <imminentperil_ind> set true?</imminentperil_ind>				
24	The SS sends SIP 403 (Forbidden).	-	SID 402 (Earbiddon)		
24		<	SIP 403 (Forbidden)	- 3	- P
25	Check: Does the UE (MCPTT client) notify the	-	-	3	Р
	user that the imminent peril call is not allowed				
	and that the call is not set up?				
	NOTE: This is expected to be done via a				
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
26					
26	Make the UE user re-request an imminent peril	-	-	-	-
	chat group session.				
	NOTE: This is expected to be done via a				
	suitable implementation mechanism and may				
27	be manually or automatically initiated. Check: Does the UE (MCPTT Client) send a		SIP REFER	3	Р
21	SIP REFER request with <imminentperil_ind></imminentperil_ind>	>	SIF KEFEK	3	F
	set true?				
28	The SS sends SIP re-INVITE request.	<	SIP re-INVITE		
20	Check: Does the UE (MCPTT Client) send a	>	SIP 200 (OK)	- 3	- P
29	SIP 200 (OK)?	>	SIF 200 (OK)	3	F
30	Check: Does the UE (MCPTT client) notify the		-	3	Р
30	user that the imminent peril call has been	-	-	3	Г
	successfully established?				
	successivily established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
31	Make the US user request to leave the chat	_		_	-
51	group call.	_			-
	NOTE: This is expected to be done via a				
	suitable implementation mechanism and may				
	be manually or automatically initiated.				
32	Check: Does the UE (MCPTT Client) send a	>	SIP REFER	4	Р
~-	SIP REFER to initiate call termination?	-			
33	The SS sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
34	Check: Does the UE (MCPTT Client) leave the	-	-	4	Р
57	chat group call and indicate this to the user?			Ť	•
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: After the step 35 is completed,	-	-	-	-
	the SS releases the E-UTRA connection.				
I		I	1	1 1	

6.1.2.2.3.3

Specific message contents

Table 6.1.2.2.3.3-1: SIP REFER (Step 2, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.2.3.3-2				

Table 6.1.2.2.3.3-2: MCPTT-Info in SIP REFER (Step 2, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition GROUP-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
session-type	"chat"					

Table 6.1.2.2.3.3-3: SIP REFER (Step 11 and 15, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.2.3.3-4				

Table 6.1.2.2.3.3-4: MCPTT-Info in SIP REFER (Step 11 and 15, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition EMERGENCY-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
session-type	"chat"			

Table 6.1.2.2.3.3-5: SIP REFER (Step 23 and 27, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.2.3.3-6				

Table 6.1.2.2.3.3-6: MCPTT-Info in SIP REFER (Step 23 and 27, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition IMMPERIL-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.2.3.3-7: SIP re-INVITE (Step 28, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1, condition IMMPERIL-CALL

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element Value/remark Comment Reference Condition					
Request-Line					
Method	"BYE"				
Content-Type	Not included				

Table 6.1.2.2.3.3-8: SIP REFER (Step 32, Table 6.1.2.2.3.2-1)

Table 6.1.2.2.3.3-9: SIP 200 (OK) (Step 3, 21 and 33, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not included					

Table 6.1.2.2.3.3-10: SIP 403 (Forbidden) (Step 12, Table 6.1.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.19.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Warning					
mcptt-warn-text	"function not allowed				
	due to user				
	authorisation"				

6.1.2.3 On-network / Chat Group Call / Late Entry

6.1.2.3.1 Test Purpose (TP)

(1)

```
with { UE (MCPTT Client) being part of an ongoing chat group call }
ensure that {
   when { the MCPTT user disconnects and later reconnects to the ongoing chat group call }
    then { UE (MCPTT Client) performs a late entry to the chat group call }
    }
}
```

(2)

```
with { UE (MCPTT Client) having joined an ongoing chat group call via late entry }
ensure that {
  when { the chat group call is ended by the originator }
    then { UE (MCPTT Client) leaves the group call and notifies the user }
    }
}
```

6.1.2.3.2 Conformance Requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 10.1.2.2.1.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.6]

Upon receipt of an initial SIP INVITE request, the MCPTT client:

•••

- 6) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 8) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 9) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;

- 10) shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. If no "refresher" parameter was included in the received SIP INVITE request the "refresher" parameter in the Session-Expires header field shall be set to "uas", otherwise shall include a "refresher" parameter set to the value received in the Session-Expires header field the received SIP INVITE request;
- 11) shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- 12) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and
- 13) shall interact with the media plane as specified in 3GPP TS 24.380 [5].
- 6.1.2.3.3 Test description
- 6.1.2.3.3.1 Pre-test conditions

System Simulator:

SS (MCPTT server)

For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10, is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.3.3.2

Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the UE user initiate a chat group call.	-	-	-	-
	NOTE: This is expected to be done via a				
	suitable implementation dependent				
	mechanism and may be manually or				
	automatically initiated.				
-	EXCEPTION: The E-UTRA/EPC related	-	-	-	-
	actions which step 1 above will trigger are described in TS 36.579-1 [2], subclause 5.4.3				
	'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages being exchanged.				
2	The UE (MCPTT Client) sends a SIP INVITE	>	SIP INVITE	-	-
	request.				
3	The SS sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
4	The SS sets the active serving E-UTRA cell	-	-	-	-
	to Non-suitable "Off" as specified in with TS				
	36.508 [24] Table 6.2.2.1-1.				
5	The UE (MCPTT Client) indicates the device is	-	-	-	-
	no longer in service.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI, e.g.				
	No service prompt or RF indication icon.				
6	The SS sets the E-UTRA cell switched to Non-	-	-	-	-
	suitable "Off" cell in step 4 to "Serving cell" as specified in with TS 36.508 [24] Table 6.2.2.1-				
7	The Generic Test Procedure for MCPTT UE	-	-		_
'	registration as specified in TS 36.579-1 [2],				
	subclause 5.4.2. takes place.				
8	The SS sends a SIP INVITE to re-invite the	<	SIP INVITE	-	-
	user to the chat group call.				
9	Check: The UE (MCPTT Client) sends a SIP	>	SIP 200 (OK)	1	Р
	200 (OK)?				
10	The SS sends a Connect message.	<	Connect	-	-
11	Check: Does the UE (MCPTT Client) send an	>	Acknowledge	1	Р
	Acknowledge?				
12	The SS sends Floor Taken	<	Floor Taken	-	-
13	Check: The UE (MCPTT Client) notifies the	-	-	1	Р
	user that they have re-joined an ongoing call?				
	NOTE: This is expected to be dependent.				
	NOTE: This is expected to be done via a				
14	suitable implementation dependent MMI. The SS sends a SIP BYE message to end the	-	SIP BYE	-	
14	Group Call	<		-	-
15	Check: Does the UE (MCPTT client) respond	>	SIP 200 (OK)	2	Р
	to the SIP BYE message with a SIP 200 (OK)	>		2	Г
	message?				
16	Check: The UE (MCPTT Client) notifies the	-	-	2	Р
	user that they have left the ongoing call?			2	
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: After the step 13 is completed,	-	-	-	-
	the SS releases the E-UTRA connection.				

6.1.2.3.3.3

Specific message contents

Table 6.1.2.3.3.3-1: SIP INVITE (Step 2, Table 6.1.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.12-1					
Information Element	Value/remark	Comment	Reference	Condition	
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.3.3.3-2				

Table 6.1.2.3.3.3-2: MCPTT-Info in SIP INVITE (Step 2, Table 6.1.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1-1, condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.3.3.3-3: SIP INVITE (Step 8, Table 6.1.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Session-Expires					
generic-param	no value				
Message-body					
MIME-Content-Type					
MCPTT-Info	As described in Table 6.1.2.3.3.2-2				

Table 6.1.2.3.3.3-4: MCPTT-Info in SIP INVITE (Step 8, Table 6.1.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.22.2.1, condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				

Table 6.1.2.3.3.3-5: SIP 200 (OK) (Step 9, Table 6.1.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Session-Expires					
generic-param	no value				
refresher	"uas"				

6.1.2.4 On-network / Chat Group Call / Rejection Upon Join Attempt / Join Attempt Successful / De-affiliation

6.1.2.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered but not authorised for chat group calls } ensure that {

when { the MCPTT User requests the establishment of an MCPTT group session using an MCPTT group
identity identifying a chat MCPTT group}

then { UE (MCPTT Client) requests to join the Chat Group Call by generating SIP INVITE message
and, after indication from the MCPTT Server that the join request has been rejected, the user is not
allowed to participate in the chat group call }
}

(2)

```
with { UE (MCPTT Client) registered and authorised for chat group calls }
ensure that {
   when { the MCPTT User requests to join a MCPTT group session, using an MCPTT group identity
   identifying a chat MCPTT group that the user is not allowed to join}
      then { UE (MCPTT Client) requests to join the Chat Group Call by generating SIP INVITE message
   and, after indication from the MCPTT Server that the join request has been rejected, the user is not
   allowed to participate in the chat group call }
   }
}
```

6.1.2.4.2 Conformance Requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 10.1.2.2.1.1, 10.1.2.3.1.1, 10.1.2.4.1.1. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.1]

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

- 1) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or
- if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

[TS 24.379, clause 10.1.2.3.1.1]

3) if through local policy in the originating participating MCPTT function, the user identified by the MCPTT ID is not authorised to make chat group calls, shall reject the "SIP INVITE request for originating participating MCPTT function" with a SIP 403 (Forbidden) response to the SIP INVITE request, with warning text set to "108 user not authorised to make chat group calls" in a Warning header field as specified in subclause 4.4;

[TS 24.379, clause 10.1.2.4.1.1]

- 5) if the MCPTT user identified by the MCPTT ID in the SIP INVITE request is not affiliated with the MCPTT group identified by the group identity in the SIP INVITE request as determined by the procedures of subclause 6.3.6:
 - a) shall check if the MCPTT user is eligible to be implicitly affiliated with the MCPTT chat group as determined by subclause 9.2.2.3.6; and
 - b) if the MCPTT user is not eligible for implicit affiliation, shall reject the SIP INVITE request with a SIP 403 (Forbidden) response with the warning text set to "120 user is not affiliated to this group" in a Warning header field as specified in subclause 4.4 and skip the rest of the steps below;
- 6.1.2.4.3 Test description
- 6.1.2.4.3.1 Pre-test conditions

System Simulator:

SS (MCPTT server)

For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10, is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.4.3.2

Test procedure sequence

Table 6.1.2.4.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the UE user request a chat group call on the selected group.	-	-	-	-
	NOTE: This is expected to be done via a suitable implementation dependent mechanism and may be manually or automatically initiated.				
-	EXCEPTION: The E-UTRA/EPC related actions which step 1 above will trigger are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages being exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT Client) send a SIP INVITE request?	>	SIP INVITE	1	Р
3	The SS sends SIP 403 (Forbidden) to indicate UE is not authorised to make a chat group call.	<	SIP 403 (Forbidden)	-	-
4	Check: The UE (MCPTT Client) notifies the user that they are not allowed to make a chat group call?	-	-	1	Р
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
5	Make the UE user request a chat group call on the selected group. NOTE: This is expected to be done via a suitable implementation dependent mechanism and may be manually or automatically initiated.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC related actions which step 5 above will trigger are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages being exchanged.	-	-	-	-
6	Check: Does the UE (MCPTT Client) send a SIP INVITE request?	>	SIP INVITE	2	Р
7	The SS sends SIP 403 (Forbidden) to indicate user is not affiliated to this group.	<	SIP 403 (Forbidden)	-	-
8	Check: The UE (MCPTT Client) notifies the user that they are not allowed to make a chat group call on this group?	-	-	2	Р
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				

6.1.2.4.3.3 Specific message contents

Derivation Path: TS 36.579-1 [2], Table 5.5.2.19.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Warning					
mcptt-warn-code	"108"				
mcptt-warn-text	user not authorised to				
	make chat group calls				

Table 6.1.2.4.3.3-1: SIP 403 (Forbidden) (Step 3, Table 6.1.2.4.3.2-1)

Table 6.1.2.4.3.3-2: SIP 403 (Forbidden) (Step 7, Table 6.1.2.4.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.19.1-1				
Information Element	Value/remark	Comment	Reference	Condition
Warning				
mcptt-warn-code	"120"			
mcptt-warn-text	user is not affiliated to this group			

6.1.2.5 On-network / Chat Group Broadcast Group Call / Client Originated (CO)

6.1.2.5.1 Test Purpose (TP)

(1)

6.1.2.5.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.1]

Upon receiving a request from an MCPTT user to initiate or join an MCPTT group session using an MCPTT group identity, identifying a chat MCPTT group, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

•••

- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 7) should include the "timer" option tag in the Supported header field;

- 8) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the refresher parameter is omitted. If included, the refresher parameter shall be set to "uac";
- 9) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 10)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

•••

- 13) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "chat";
 - b) the <mcptt-request-uri> element set to the group identity; and
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;
- NOTE 2: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP INVITE request that is sent by the originating participating MCPTT function.
- 14) shall include in the SIP INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;

15) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and

16) shall send the SIP INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and

•••

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

- 6.1.2.5.3 Test description
- 6.1.2.5.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.
- 6.1.2.5.3.2 Test procedure sequence

Table	6.1.2.5.3.2-1:	Main	behaviour
-------	----------------	------	-----------

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand chat group call for the selected MCPTT broadcast group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand chat group call?	>	SIP INVITE	1	Ρ
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.2.5.3.3

Specific message contents

Table 6.1.2.5.3.3-1: SIP INVITE (step 2, Table 6.1.2.5.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Resource-Priority	not included in header				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.2.5.3.3-2				

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				
mcptt-request-uri	px_MCPTT_Client_A_ID				
broadcast-ind	"true"				

Table 6.1.2.5.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.5.3.3-1)

Table 6.1.2.5.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.2.5.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not Included			

6.1.2.6 On-network / Chat Group Broadcast Group Call / Client Terminated (CT)

6.1.2.6.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT Client receives a SIP INVITE message of an On-demand MCPTT Chat Group Broadcast
Group Call }
 then { the MCPTT Client displays an indication for the On-demand MCPTT chat group call to the

user and sends a SIP 200 OK as a response to the SIP INVITE message }

6.1.2.6.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.6. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.6]

Upon receipt of an initial SIP INVITE request, the MCPTT client:

•••

- 5) shall check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 8) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 9) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- 10) shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. If no "refresher" parameter was included in the received SIP INVITE request the "refresher" parameter in the Session-Expires header field shall be set to "uas", otherwise shall include a "refresher" parameter set to the value received in the Session-Expires header field the received SIP INVITE request;
- 11) shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;

12) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and

13) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

- 6.1.2.6.3 Test description
- 6.1.2.6.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.6.3.2 Test procedure sequence

Table 6.1.2.6.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The SS initiates an On-demand MCPTT chat group call, with explicit floor control by sending an SIP INVITE message.	<	SIP INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) respond with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
3	Check: Dose the MCPTT client display an indication for the MCPTT On-demand chat group call to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р

4	The SS (MCPTT server) sends a SIP BYE	<	SIP BYE	-	-
	request to terminate the MCPTT session.				
5	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.2.6.3.3 Specific message contents

Table 6.1.2.6.3.3-1: SIP INVITE (step 1, Table 6.1.2.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.2.6.3.3-2				

Table 6.1.2.6.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.6.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				
broadcast-ind	"true"				
alert-ind	"true"				
mcptt-calling-group-id	px_MCPTT_Group_A_ID				

Table 6.1.2.6.3.3-3: SIP 200 (OK) (Step 5, Table 6.1.2.6.3.2-1)

Derivation Path: TS 36.579-1 [2], t	able 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not Included			

6.1.2.7 On-network / Chat Group Emergency Group Call / Client Originated (CO)

6.1.2.7.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT User requests the establishment of an MCPTT On-demand Chat Group Emergency Group
 Call }
 then { UE (MCPTT Client) requests Chat Group Emergency Group Call by sending a SIP INVITE
 message and responds to the SS with correct SIP messages }
 }
}

6.1.2.7.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.1]

Upon receiving a request from an MCPTT user to initiate or join an MCPTT group session using an MCPTT group identity, identifying a chat MCPTT group, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

1) if the MCPTT user has requested the origination of an MCPTT emergency group call or is originating an MCPTT chat group call and the MCPTT emergency state is already set, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.1;

•••

- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 7) should include the "timer" option tag in the Supported header field;
- 8) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the refresher parameter is omitted. If included, the refresher parameter shall be set to "uac";
- 9) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 10)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 11) if the MCPTT client emergency group state for this group is set to "MEG 2: in-progress" or "MEG 4: confirmpending", the MCPTT client shall comply with the procedures in subclause 6.2.8.1.2;

•••

- 13) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "chat";
 - b) the <mcptt-request-uri> element set to the group identity; and
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;
- NOTE 2: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP INVITE request that is sent by the originating participating MCPTT function.
- 14) shall include in the SIP INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- 15) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 16) shall send the SIP INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and

2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

1) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted"; or

•••

the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

6.1.2.7.3 Test description

6.1.2.7.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.7.3.2

Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand chat group emergency group call for the selected MCPTT chat group emergency group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand chat group emergency group call?	>	SIP INVITE	1	Р
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.2.7.3.3 Specific message contents

Table 6.1.2.7.3.3-1: SIP INVITE (step 2, Table 6.1.2.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1, condition EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.2.7.3.3-2				

Table 6.1.2.7.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.7.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				
mcptt-request-uri	px_MCPTT_Group_A_ID				

Derivation Path: TS 36.579-1 [2],				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not Included			

Table 6.1.2.7.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.2.7.3.2-1)

6.1.2.8 On-network / Chat Group Emergency Group Call / Client Terminated (CT)

6.1.2.8.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }
ensure that {
 when { the MCPTT Client receives a SIP INVITE message with a emergency indication of an MCPTT On demand Chat Group Emergency Group Call }
 then { the MCPTT Client displays an indication for the MCPTT Chat Group Emergency Group call to
 the user and sends a SIP 200 OK as a response to the SIP INVITE message }

6.1.2.8.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.6. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.6]

}

This procedure is used for MCPTT emergency and MCPTT imminent peril calls when the MCPTT client is affiliated but not joined to the chat group.

In the procedures in this subclause:

1) emergency indication in an incoming SIP INVITE request refers to the <emergency-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and

...

Upon receipt of an initial SIP INVITE request, the MCPTT client:

•••

- 3) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body;
 - ii) should display the MCPTT group identity of the group with the emergency condition contained in the <mcptt-calling-group-id> element; and
 - iii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information;
 - b) shall set the MCPTT emergency group state to "MEG 2: in-progress";

...

- 6) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;

- 8) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 9) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- 10) shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. If no "refresher" parameter was included in the received SIP INVITE request the "refresher" parameter in the Session-Expires header field shall be set to "uas", otherwise shall include a "refresher" parameter set to the value received in the Session-Expires header field the received SIP INVITE request;
- 11) shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- 12) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and
- 13) shall interact with the media plane as specified in 3GPP TS 24.380 [5].
- 6.1.2.8.3 Test description
- 6.1.2.8.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.8.3.2

Test procedure sequence

Table 6.1.2.8.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The SS initiates an On-demand MCPTT chat group emergency group call, with explicit floor control by sending an SIP INVITE message.	<	SIP INVITE	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) respond with a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
3	Check: Dose the MCPTT client display an indication for the MCPTT On-demand chat group emergency group call to the MCPTT user? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Ρ
4	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
5	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.2.8.3.3 Specific message contents

Table 6.1.2.8.3.3-1: SIP INVITE (step 1, Table 6.1.2.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1, condition EMERGENCY-CALL							
Information Element	Value/remark	Comment	Reference	Condition			
Content-Type							
Content-Length							
Message-body							
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"						
MCPTT-Info	As described in Table 6.1.2.8.3.3-2						

Table 6.1.2.8.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.8.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
session-type	"chat"					

Table 6.1.2.8.3.3-3: SIP 200 (OK) (Step 5, Table 6.1.2.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

6.1.2.9 On-network / Chat Group Imminent Peril Group Call / Client Originated (CO)

6.1.2.9.1 Test Purpose (TP)

```
(1)
```

with { UE (MCPTT Client) registered and authorised for MCPTT Service }

ensure that {

}

- when { the MCPTT User requests the establishment of an MCPTT On-demand Chat Group Imminent Peril
 Group Call }
 then { UE (MCPTT Client) sends a SIP INVITE message to setup the Chat Group Imminent Peril Group
- Call }

6.1.2.9.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.1. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.1]

Upon receiving a request from an MCPTT user to initiate or join an MCPTT group session using an MCPTT group identity, identifying a chat MCPTT group, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- •••
- 2) if the MCPTT user has requested the origination of an MCPTT imminent peril group call, the MCPTT client shall comply with the procedures in subclause 6.2.8.1.9;
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 7) should include the "timer" option tag in the Supported header field;
- 8) should include the Session-Expires header field according to IETF RFC 4028 [7]. It is recommended that the refresher parameter is omitted. If included, the refresher parameter shall be set to "uac";
- 9) shall set the Request-URI of the SIP INVITE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- NOTE 1: The MCPTT client is configured with public service identity identifying the participating MCPTT function serving the MCPTT user.
- 10)may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];

•••

12) if the MCPTT client imminent peril group state for this group is set to "MIG 2: in-progress" or "MIG 4: confirmpending" shall include the Resource-Priority header field and comply with the procedures in subclause 6.2.8.1.12;

- 13) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with:
 - a) the <session-type> element set to a value of "chat";
 - b) the <mcptt-request-uri> element set to the group identity; and
 - c) the <mcptt-client-id> element set to the MCPTT client ID of the originating MCPTT client;
- NOTE 2: The MCPTT ID of the originating MCPTT user is not included in the body, as this will be inserted into the body of the SIP INVITE request that is sent by the originating participating MCPTT function.
- 14) shall include in the SIP INVITE request an SDP offer according to 3GPP TS 24.229 [4] with the clarifications specified in subclause 6.2.1;
- 15) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 16) shall send the SIP INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and
- 2) if the MCPTT emergency group call state is set to "MEGC 2: emergency-call-requested" or "MEGC 3: emergency-call-granted" or the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-callrequested" or "MIGC 3: imminent-peril-call-granted", the MCPTT client shall perform the actions specified in subclause 6.2.8.1.4.

On receiving a SIP 4xx response, a SIP 5xx response or a SIP 6xx response to the SIP INVITE request:

•••

- 2) if the MCPTT imminent peril group call state is set to "MIGC 2: imminent-peril-call-requested" or "MIGC 3: imminent-peril-call-granted";
- the MCPTT client shall perform the actions specified in subclause 6.2.8.1.5.

On receiving a SIP INFO request where the Request-URI contains an MCPTT session ID identifying an ongoing group session, the MCPTT client shall follow the actions specified in subclause 6.2.8.1.13.

- 6.1.2.9.3 Test description
- 6.1.2.9.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.
- 6.1.2.9.3.2 Test procedure sequence

Table	6.1.2.9.3.2	2-1: Main	Behaviour
-------	-------------	-----------	-----------

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the MCPTT User requesting the establishment of an MCPTT On-demand chat group call for the selected MCPTT imminent peril group GROUP A, with explicit floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579- 1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request requesting the establishment of an MCPTT On-demand chat group imminent peril group call?	>	SIP INVITE	1	Р
3	The SS (MCPTT server) sends SIP 183 (Session Progress).	<	SIP 183 (Session Progress)		
4	The SS sends SIP 200 (OK), indicating that the MCPTT call has been established.	<	SIP 200 (OK)	-	-
5	Check: Does the UE (MCPTT client) send a SIP ACK in response to the SIP 200 (OK)?	>	SIP ACK	1	Р
6	The SS (MCPTT server) sends a SIP BYE request to terminate the MCPTT session.	<	SIP BYE	-	-
7	The UE (MCPTT client) send a SIP 200 (OK).	>	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.1.2.9.3.3

Specific message contents

Table 6.1.2.9.3.3-1: SIP INVITE (step 2, Table 6.1.2.9.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1, condition IMMPERIL-CALL and GROUP-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"					
MCPTT-Info	As described in Table 6.1.2.9.3.3-2					

Derivation Path: TS 36.579-1 [2],	Table 5.5.3.2.1-1			
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
session-type	"chat"			

Table 6.1.2.9.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.9.3.3-1)

Table 6.1.2.9.3.3-3: SIP 200 (OK) (Step 7, Table 6.1.2.9.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1					
Information Element Value/remark Comment Reference Co				Condition	
Content-Type	Not Included				

6.1.2.10 On-network Chat Group Imminent Peril Group Call / Client Terminated (CT)

6.1.2.10.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service }

ensure that {

when { the MCPTT Client receives a SIP INVITE message of an On-demand MCPTT Chat Group Imminent
Peril Group Call }

then { the MCPTT Client displays an indication for the On-demand MCPTT chat group imminent peril
group call to the user and sends a SIP 200 OK as a response to the SIP INVITE message }
}

6.1.2.10.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in TS 24.379, clause 10.1.2.2.1.6. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 10.1.2.2.1.6]

This procedure is used for MCPTT emergency and MCPTT imminent peril calls when the MCPTT client is affiliated but not joined to the chat group.

In the procedures in this subclause:

•••

2) imminent peril indication in an incoming SIP INVITE request refers to the <imminentperil-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body.

Upon receipt of an initial SIP INVITE request, the MCPTT client:

• • •

- 4) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <imminentperil-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT imminent peril group call and:
 - i) should display the MCPTT ID of the originator of the MCPTT imminent peril group call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) should display the MCPTT group identity of the group with the imminent peril condition contained in the <mcptt-calling-group-id> element; and
 - b) shall set the MCPTT imminent peril group state to "MIG 2: in-progress";

- 5) shall check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 7) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 8) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 9) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- 10) shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. If no "refresher" parameter was included in the received SIP INVITE request the "refresher" parameter in the Session-Expires header field shall be set to "uas", otherwise shall include a "refresher" parameter set to the value received in the Session-Expires header field the received SIP INVITE request;
- 11) shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- 12) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and

13) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

- 6.1.2.10.3 Test description
- 6.1.2.10.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)

The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.1.2.10.3.2

Test procedure sequence

Table 6.1.2.10.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The SS initiates an On-demand MCPTT chat	<	SIP INVITE	-	-
	group imminent group call, with explicit floor				
	control by sending an SIP INVITE message.				
-	EXCEPTION: The E-UTRA/EPC actions	-	-	-	-
	which are related to the MCPTT call				
	establishment are described in TS 36.579-				
	1 [2], subclause 5.4.4 'Generic Test				
	Procedure for MCPTT CT communication in				
	E-UTRA'. The test sequence below shows				
	only the MCPTT relevant messages				
	exchanged.				
2	Check: Does the UE (MCPTT client) respond	>	SIP 200 (OK)	1	Р
	with a SIP 200 (OK)?				
3	Check: Dose the MCPTT client display an	-	-	1	Р
	indication for the MCPTT On-demand chat				
	group imminent peril group call to the				
	MCPTT user?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
4	The SS (MCPTT server) sends a SIP BYE	<	SIP BYE	-	-
	request to terminate the MCPTT session.				
5	The UE (MCPTT client) send a SIP 200	>	SIP 200 (OK)	-	-
	(OK).				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				

6.1.2.10.3.3 Specific message contents

Table 6.1.2.10.3.3-1: SIP INVITE (step 1, Table 6.1.2.10.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.2-1, condition IMMPERIL-CALL and GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp.mcpt t-info+xml"				
MCPTT-Info	As described in Table 6.1.2.10.3.3-2				

Table 6.1.2.10.3.3-2: MCPTT-Info in SIP INVITE (Table 6.1.2.10.3.3-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.2.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"chat"				
alert-ind	"true"				
mcptt-calling-group-id	px_MCPTT_Group_A_ID				

Table 6.1.2.10.3.3-3: SIP 200 (OK) (Step 5, Table 6.1.2.10.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

6.2 Private Calls

6.2.1 On-network / Private Call / On-demand / Automatic Commencement Mode / With Floor Control / Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Originated (CO)

6.2.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement } ensure that {

when { the MCPTT User requests the establishment of an MCPTT private call, on-demand Automatic Commencement Mode, no Force of automatic commencement, applying End-to-end communication security with Floor Control }

then { UE (MCPTT Client) sends a SIP INVITE message requesting private call on-demand Automatic Commencement Mode, applying End-to-end communication security, and offering a media-level section for a media-floor control entity, and, after indication from the MCPTT Server that the call was established notifies the user } }

(2)

with { UE (MCPTT Client) having established an MCPTT private call, on-demand Automatic Commencement
Mode with Floor Control }
ensure that {
 when { the MCPTT User engages in communication with the invited MCPTT User }

then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server (Floor
granting/release/deny) applying Floor Control confidentiality and integrity protection }
}

(3)

with { UE (MCPTT Client) having established an MCPTT private call, on-demand Automatic Commencement Mode with Floor Control } ensure that {

when { the MCPTT User wants to upgrade the ongoing MCPTT private call to an MCPTT emergency private call with floor control }

then { UE (MCPTT Client) sends a SIP re-INVITE message requesting private emergency call ondemand Automatic Commencement Mode offering a media-level section for a media-floor control entity, and, upon receipt of a SIP 200 (OK) response considers the call as being upgraded to emergency private call (emergency private call state = "MEPC 3: emergency-pc-granted") } }

(4)

with { UE (MCPTT Client) having upgraded an MCPTT private call, on-demand Automatic Commencement Mode with Floor Control to emergency private call with floor control } ensure that {

when { the MCPTT User engages in communication with the invited MCPTT User }

then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server including
override of the invited MCPTT user (who is not in MCPTT emergency state) and applying Floor Control
confidentiality and integrity protection }
}

(5)

with { UE (MCPTT Client) having upgraded an MCPTT private call, on-demand Automatic Commencement Mode with Floor Control to emergency private call with floor control } ensure that { when { the MCPTT User wants to cancel the ongoing MCPTT emergency private call } then { UE (MCPTT Client) sends a SIP re-INVITE request requesting the emergency state cancellation, and. upon receipt of a SIP 200 (OK) response considers the emergency condition cancelled and the call being reverted back to MCPTT Private Call }

}

```
(6)
```

```
with { UE (MCPTT Client) having an ongoing MCPTT private call, on-demand Automatic Commencement Mode
with Floor Control }
ensure that {
   when { the MCPTT User wants to terminate the ongoing MCPTT private call }
    then { UE (MCPTT Client) sends a SIP BYE request and after receiving a SIP 200 (OK) leaves the
   MCPTT session }
   }
}
```

6.2.1.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 4.6.2, 4.7, 6.2.1, 6.2.5.1, 6.2.8.3.4, 6.2.8.3.6, 11.1.1.2.1.1, 11.1.1.2.1.4, 11.1.1.2.1.5, 11.1.3.1.1.1, TS 24.380 clauses 4.1.1.2, 5.2.1, 5.2.2, 12.1.2.2, 13.1, 13.3.3, TS 33.179, clause 7.2.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 4.6.2]

Key aspects of MCPTT emergency private calls include:

- adjusted EPS bearer priority for both participants whether or not they are both in an emergency condition (i.e. both have their MCPTT emergency state set). This is achieved by using the Resource-Priority header field as specified in IETF RFC 4412 [29] with namespaces defined for use by MCPTT specified in draft-holmberg-dispatch-mcptt-rp-namespace [48];
- the initiator of the MCPTT emergency private call can override the other MCPTT user in the MCPTT emergency private call unless that user also has their MCPTT emergency state set;

•••

- restoration of normal floor control priority participants when the emergency elevated priority is cancelled;
- requires the MCPTT user to be authorised to either originate or cancel an MCPTT emergency private call;

•••

- the originator of the MCPTT emergency private call can request that the call use either manual or automatic commencement mode.

[TS 24.379, clause 4.7]

If a mission critical organisation requires MCPTT users to communicate using end-to-end security, a security context needs to be established between the initiator of the call and the recipient(s) of the call, prior to the establishment of media, or floor control signalling. This provides assurance to MCPTT users that no unauthorised access to communications is taking place within the MCPTT network. An MCPTT key management server (KMS) manages the security domain. For any end-point to use or access end-to-end secure communications, it needs to be provisioned with keying material associated to its identity by the KMS as specified in 3GPP TS 33.179 [46].

•••

For private calls, the security context is initiated at call setup. An end-to-end security context is established that is unique to the pair of users involved in the call. The procedure involves transferral of an encapsulated private call key (PCK) and private call key id (PCK-ID) from the initiator to the terminator. The PCK is encrypted using the terminator's MCPTT ID and domain-specific material provided from the KMS. The PCK and PCK-ID are distributed within a MIKEY payload within the SDP offer of the private call request. This payload is called a MIKEY-SAKKE I_MESSAGE, as defined in IETF RFC 6509 [75], which ensures the confidentiality, integrity and authenticity of the payload. The encoding of the MIKEY payload in the SDP offer is described in IETF RFC 4567 [47] using an "a=key-mgmt" attribute. The payload is signed using a key associated to the identity of the initiating user. At the terminating side, the signature is validated. If valid, the UE extracts and decrypts the encapsulated PCK. The MCPTT UE also extracts the PCK-ID. This process is described in 3GPP TS 33.179 [46]. With the PCK successfully shared between the two MCPTT UEs, the UEs are able to use SRTP/SRTCP to create an end-to-end secure session.

End-to-end security is independent of the transmission path and hence is applicable to both on and off-network communications. With a security context established, the group call key and private call key can be used to encrypt media and, if required, floor control traffic between the end-points as described in 3GPP TS 24.380 [5] clause 13.

[TS 33.179, clause 7.2.4]

End-to-end communication security for either group or private calls requires the provisioning of key material from the KMS. The key material required to be provisioned to each user is listed below:

- Domain specific key material, also known as a MCPTT KMS Certificate, which includes:
 - The MCPTT KMS Public Authentication Key (KPAK in IETF RFC 6507 [9]).
 - The MCPTT KMS Public Confidentiality Key (Z_T in IETF RFC 6508 [10]).
 - The UID conversion (as described below).
 - Choice of cryptographic domain parameters (such as those listed in IETF RFC 6509 [8]).
 - The time period for which this information is valid.
- A user signing key for each UID for the upcoming time period (SSK and PVT in IETF RFC 6507 [9]).
- A user decryption key for each UID for the upcoming time period (RSK in IETF RFC 6508 [10]).
- The time period, for which the user key material is valid (e.g. month).

The UID conversion mechanism defines how UIDs are generated. Using this information a MCPTT client can take a user identifier (e.g. an MCPTT ID), and the current time, (e.g. the year and month) and convert these to a UID.

EXAMPLE: UID = Hash (MCPTT ID, KMS URI, validity period info).

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:

...

- c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];
- 3) if floor control shall be used during the session, shall include an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12 for a media-floor control entity, consisting of:
 - a) the port number for the media-floor control entity selected as specified in 3GPP TS 24.380 [5]; and
 - b) the 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14; and
- 4) if end-to-end security is required for a private call and the SDP offer is not for establishing a pre-established session, shall include the MIKEY-SAKKE I_MESSAGE in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 6.2.5.1]

When the MCPTT client wants to release an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to release; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 6.2.8.3.4]

On receiving a SIP 2xx response to a SIP request for an MCPTT emergency private call and if the MCPTT emergency private call state is set to "MEPC 2: emergency-pc-requested" or "MEPC 3: emergency-pc-granted", the MCPTT client:

- shall set the MCPTT emergency private priority state of the call to "MEPP 2: in-progress" if it was not already set;
- 2) shall set the MCPTT emergency private call state to "MEPC 3: emergency-pc-granted"; and

[TS 24.379, clause 6.2.8.3.6]

When the MCPTT emergency private call state is set to "MEPC 3: emergency-pc-granted" and the MCPTT emergency alert state is set to "MPEA 1: no-alert", the MCPTT client shall generate a SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given below.

NOTE 1: This procedure assumes that the MCPTT client in the calling procedure has verified that the MCPTT user has made an authorised request for cancelling MCPTT the in-progress emergency private call state of the call.

The MCPTT client:

- shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <emergency-ind> element set to "false";
- 2) shall clear the MCPTT emergency state; and
- shall set MCPTT emergency private priority state of the MCPTT emergency private call to "MEPP 3: cancelpending".
- NOTE 2: This is the case of an MCPTT user who has initiated an MCPTT emergency private call and wants to cancel it.

[TS 24.379, clause 11.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT private call the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;

•••

- 3) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];

- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 8) shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the invited MCPTT user, according to rules and procedures of IETF RFC 5366 [20];
- 9) if an end-to-end security context needs to be established then:
 - a) if necessary, shall instruct the key management client to request keying material from the key management server as described in 3GPP TS 33.179 [46];
 - b) shall use the keying material to generate a PCK as described in 3GPP TS 33.179 [46];
 - c) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.179 [46];
 - d) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID of the invited user and a time related parameter as described in 3GPP TS 33.179 [46];
 - e) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.179 [46]; and
 - g) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46]; and
 - f) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.179 [46].
- 10) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1 and with a media stream of the offered media-floor control entity;
- 11)if implicit floor control is required, shall comply with the conditions specified in subclause 6.4;
- ...13) if force of automatic commencement mode at the invited MCPTT client is not requested by the MCPTT user and:
 - a) if automatic commencement mode at the invited MCPTT client is requested by the MCPTT user, shall include in the SIP INVITE request an Answer-Mode header field with the value "Auto" according to the rules and procedures of IETF RFC 5373 [18]; and

...

14) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <session-type> element set to a value of "private";

•••

16) shall send SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 183(Session Progress) response to the SIP INVITE request the MCPTT client:

1) may indicate the progress of the session establishment to the inviting MCPTT user.

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

•••

3) shall notify the user that the call has been successfully established.

[TS 24.379, clause 11.1.1.2.1.4]

Upon receiving a request from an MCPTT user to cancel the in-progress emergency condition on an MCPTT emergency private call, the MCPTT client shall generate a SIP re-INVITE request by following the UE session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) if the MCPTT user is not authorised to cancel the in-progress emergency condition on an MCPTT emergency private call as determined by the procedures of subclause 6.2.8.3.1.2, the MCPTT client:
 - a) should indicate to the MCPTT user that they are not authorised to cancel the in-progress emergency condition on an MCPTT emergency private call; and
 - b) shall skip the remaining steps of the current subclause;
- shall, if the MCPTT user is cancelling an in-progress emergency condition and optionally an MCPTT emergency alert originated by the MCPTT user, include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.3.6;

•••

- 4) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.3.3;
- 5) shall include in the SIP re-INVITE request an SDP offer the media parameters as currently established;
- NOTE 1: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session associated with an MCPTT group session. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 6) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 7) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request, the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5];
- 2) shall set the MCPTT emergency private priority state of the MCPTT private call to "MEPP 1: no-emergency";
- 3) shall set the MCPTT emergency private call state of the call to "MEPC 1: emergency-pc-capable"; and

[TS 24.379, clause 11.1.1.2.1.5]

Upon receiving a request from an MCPTT user to upgrade the ongoing MCPTT private call to an MCPTT emergency private call, the MCPTT client shall generate a SIP re-INVITE request as specified in 3GPP TS 24.229 [4], with the clarifications given below.

- 1) shall include an application/vnd.3gpp.mcptt-info+xml MIME body populated as specified in subclause 6.2.8.3.2;
- 2) shall include a Resource-Priority header field and comply with the procedures in subclause 6.2.8.3.3.
- 3) shall include an SDP offer with the media parameters as currently established according to 3GPP TS 24.229 [4];
- NOTE: The SIP re-INVITE request can be sent within an on-demand session or a pre-established session associated with an MCPTT private call. If the SIP re-INVITE request is sent within a pre-established session, the media-level section for the offered MCPTT speech media stream and the media-level section of the offered media-floor control entity are expected to be the same as was negotiated in the existing pre-established session.
- 4) if an implicit floor request is required, shall indicate this as specified in subclause 6.4; and
- 5) shall send the SIP re-INVITE request according to 3GPP TS 24.229 [4].

On receiving a SIP 2xx response to the SIP re-INVITE request the MCPTT client:

- 1) shall interact with the user plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall perform the actions specified in subclause 6.2.8.3.4.

[TS 24.379, clause 11.1.3.1.1.1]

Upon receiving a request from an MCPTT user to release an MCPTT private call session established using on-demand session signalling, the MCPTT client shall follow the procedures as specified in subclause 6.2.5.1.

[TS 24.380, clause 4.1.1.2]

At any point in time a group member can request permission to talk.

When all group members are silent, a group member can press the PTT button, meaning the request for permission to talk. The floor participant entity of this user reflects this request to the floor control server by sending a Floor Request message. If the floor control server decides to permit, it informs this permission for this request by sending a Floor Granted message to the requesting group member. The floor control server informs the initiation of the talk to the other group members by sending a Floor Taken message. Once the group member receives the permission, a permission indication (permission tone) is generated and the user can talk. The media packets (encoded voice) are sent to the controlling MCPTT server and from there they are distributed to all listeners of this group. The release of the PTT button indicates the user's intension to end talking. Once the PTT button is released, the floor participant sends a Floor Release message to the floor control server indicating that this user has finished talking. This cycle, starting from the Floor Granted message and ending with Floor Release message, is known as 'talk burst' or 'media burst'.

In the beginning of a call the initial talk permission request can be implied by the SIP message which initiates the call as specified in 3GPP TS 24.379 [2] without any specific Floor Request message.

A group member can also request for permission to talk by sending a Floor Request message during a talk burst. The floor control server can resolve this request in several ways.

- 1. If this request has higher priority than the ongoing talk burst, the floor control server revokes the current talk burst by sending a Floor Revoke message to the current talker. The current talker is interrupted and the current media burst is ended by the current floor participant by sending a Floor Release message. Then the floor control server sends a Floor Granted message to the revoking user and send Floor Taken message to other group members. Then a new media burst starts.
- 2. If this request does not have higher priority and floor request queuing is not used the floor control server rejects this request by sending a Floor Deny message to the requester. Then a reject indication (reject tone) is generated for the user. The ongoing talk burst continues.

•••

During silence (when no talk burst is ongoing), the floor control server can send Floor Idle message to all floor participants from time to time. The floor control server sends Floor Idle message in the beginning of silence.

[TS 24.380, clause 5.2.1]

To be compliant with the procedures in the present document, an MCPTT client shall:

- 1. support the role of an MCPTT client as specified 3GPP TS 23.179 [5];
- 2. support the on-network MCPTT client role as specified in 3GPP TS 24.379 [2];

•••

4. support media plane security as specified in clause 13.

To be compliant with the on-network procedures in the present document, an MCPTT client shall:

- 1. provide the role of a floor participant in on-network mode as specified in subclause 5.2.2;
- 2. provide the media mixer function as described in subclause 4.2.2 and support the related procedures in subclause 6.2;

...

4. provide PTT button events towards the on-network floor participant as specified in subclause 6.2;

- 5. provide means (sound, display, etc.) for indications towards the MCPTT user as specified in subclause 6.2;
- 6. support negotiating media plane control channel media level attributes as specified in subclause 4.3; and

[TS 24.380, clause 5.2.2]

To be compliant with the on-network procedures in the present document, a floor participant in on-network mode shall:

- 1. support the on-network floor control procedures as defined in 3GPP TS 23.179 [5];
- 2. support acting as an on-network floor participant as specified in subclause 6.2; and
- 3. support the on-network mode floor control protocol elements as specified in the clause 8.

A floor participant in on-network mode may:

1. support queuing of floor requests as specified in subclause 6.2 and subclause 4.1.1.2.

[TS 24.380, clause 12.1.2.2]

In an SDP offer, the "mc_priority" fmtp attribute indicates (using an integer value between '1' and '255') the maximum floor priority that the offerer requests to be used with Floor Request messages sent by the offerer. In an SDP answer, the attribute parameter indicates the maximum priority level that the answerer has granted to the offerer. The value has to be equal or less than the value provided in the associated SDP offer.

NOTE 1: If the "mc_priority" fmtp attribute is not used within an SDP offer or answer, a default priority value is assumed.

In an SDP offer, the "mc_granted" fmtp attribute parameter indicates that the offerer supports the procedure where the answerer indicates, using the fmtp attribute in the associated SDP answer, that the floor has been granted to the offerer.

- NOTE 2: When the "mc_granted" fmtp attribute is used in an SDP offer, it does not indicate an actual request for the floor. The SDP "mc_implicit_request" fmtp attribute can be used to request the floor. In an SDP answer, the attribute indicates that the floor has been granted to the offerer.
- NOTE 3: Once the offerer has been granted the floor, the offerer has the floor until it receives a Floor Revoke message, or until the offerer itself releases the floor by sending a Floor Release message, as described in the present specification.

In an SDP offer, the "mc_implicit_request" fmtp attribute indicates that the offerer implicitly requests the floor (without the need to send a Floor Request message). In an SDP answer, the attribute parameter indicates that the answerer has accepted the implicit floor request. Once the answerer grants the floor to the offerer, the answerer will send a Floor Granted message.

NOTE 4: The usage of the "mc_implicit_request" fmtp attribute in an SDP answer does not mean that the answerer has granted the floor to the offerer, only that the answerer has accepted the implicit floor request.

[TS 24.380, clause 13.1]

Media plane security provides integrity and confidentiality protection of individual media streams and media plane control messages in MCPTT sessions.

The media plane security is based on 3GPP MCPTT security solution including key management and end-to-end media and floor control messages protection as defined in 3GPP TS 33.179 [14].

Various keys and associated key identifiers protect:

- 1. RTP transported media;
- 2. RTCP transported media control messages (i.e. RTCP SR packets, RTCP RR packets, RTCP SDES packets);
- 3. RTCP APP transported floor control messages;

•••

In an on-network private call:

- 1. if protection of media is negotiated, the PCK and the PCK-ID protect media sent and received by the MCPTT clients;
- 2. if protection of floor control messages sent using unicast between the MCPTT client and the participating MCPTT function serving the MCPTT client is negotiated, the CSK and the CSK-ID protect the floor control messages sent and received by the MCPTT client and by the participating MCPTT function;

•••

4. if protection of media control messages sent using unicast between the MCPTT client and the participating MCPTT function serving the MCPTT client is negotiated, the CSK and the CSK-ID protect the media control messages sent and received using unicast by the MCPTT client and by a participating MCPTT function; and

•••

The CSK and the CSK-ID are generated by the MCPTT client and provided to the participating MCPTT function serving the MCPTT client using SIP signalling according to 3GPP TS 24.379 [2].

••

The PCK and the PCK-ID are generated by the MCPTT client initiating the private call and provided to the MCPTT client receiving the private call using SIP signalling according to 3GPP TS 24.379 [2], using Connect message described in subclause 8.3.4 or using MONP signalling according to 3GPP TS 24.379 [2].

[TS 24.380, clause 13.3.3]

3. in an on-network private call:

A) if:

i) protection of media is negotiated in originating call and the PCK and the PCK-ID were sent to the remote MCPTT client using SIP signalling according to 3GPP TS 24.379 [2]; or

...

- then:
- i) shall encrypt sent media according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the PCK and PCK-ID as specified in subclause 13.2; and
- ii) shall decrypt received media according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the PCK and PCK-ID as specified in subclause 13.2;
- B) if protection of floor control messages is negotiated and the CSK and the CSK-ID were sent to the participating MCPTT function using SIP signalling according to 3GPP TS 24.379 [2]:
 - i) shall encrypt sent floor control messages according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and
 - ii) shall decrypt received floor control messages according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and
- D) if protection of media control messages sent using unicast between the participating MCPTT function and the MCPTT client is negotiated and the CSK and the CSK-ID were sent to the participating MCPTT function using SIP signalling according to 3GPP TS 24.379 [2]:
 - i) shall encrypt media control messages sent using unicast according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and
 - ii) shall decrypt media control messages received using unicast according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2;

6.2.1.3 Test description

6.2.1.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.1.3.2 Test procedure sequence

Table 6.2.1.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
0.	Trocedure	U - S	Message		Veralet
1	Make the UE (MCPTT User) request the	-	-	-	-
	establishment of an MCPTT private call, on-				
	demand Automatic Commencement Mode, no				
	Force of automatic commencement, applying				
	End-to-end communication security with Floor				
	Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
2	messages exchanged. Check: Does the UE (MCPTT client) send an		SIP INVITE	1	Р
2	initial SIP INVITE message requesting the	>	SIPINVITE	1	Р
	establishment of an MCPTT private call, on-				
	demand Automatic Commencement Mode, no				
	Force of automatic commencement, applying				
	End-to-end communication security with Floor				
	Control?				
3	The SS (MCPTT server) sends SIP	<	SIP 183 (Session Progress)	-	-
Ŭ	183(Session Progress).				
-	EXCEPTION: Steps 4a1-4b4 describe	-	-	-	-
	behaviour that depends on the UE				
	implementation; the "lower case letter"				
	identifies a step sequence that take place if the				
	UE requests or not implicit floor control in step				
	2 (i.e. the "mc_implicit_request" fmtp attribute				
	included in the SDP offer media-level section				
	for the media-floor control entity).				
4a1	IF implicit floor control was requested in step 2	<	SIP 200 (OK)	-	-
	THEN the SS (MCPTT server) sends SIP 200				
	(OK), indicating that it has accepted the implicit				
	floor request, SSRC identifier is assigned.				
4a2	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
4b1	ELSE the SS (MCPTT server) sends SIP 200	<	SIP 200 (OK)	-	-
	(OK) without indication for acceptance of an				
	implicit floor request, SSRC identifier is				
160	assigned.			4	Р
4b2	Check: Does the UE (MCPTT client) notify the	-	-	1	р Р
	user that the call has been successfully established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
4b3	Make the UE (MCPTT User) press the PTT	<u> </u>	-		
-03	button requesting to speak.			-	
	NOTE: The User shall keep the button pressed				
	until otherwise written.				
4b4	Check: Does the UE (MCPTT client) send a	>	Floor Request	2	Р
	Floor Request message?				
5	The SS (MCPTT server) sends a Floor	<	Floor Granted	-	-
-	Granted message.				
6	Make the UE (MCPTT User) release the PTT	-	-	-	-
-	button indicating end of talking.				
7	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р
	Floor Release message?				

-	EXCEPTION: Step 8a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE can handle Floor Ack message.	-	-	-	-
8a1	IF the UE (MCPTT Client) include the first bit in the subtype of the Floor Release message set to '1' (acknowledgement is required) THEN SS sends a Floor Ack message.	<	Floor Ack	-	-
9	The SS (MCPTT server) sends a Floor Taken message.	<	Floor Taken	-	-
10	Make the UE (MCPTT User) press the PTT button requesting to speak. NOTE: The User shall keep the button pressed until otherwise written.	-	-	-	-
11	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	2	Р
12	The SS (MCPTT server) sends a Floor Deny message.	<	Floor Deny	-	-
13	Make the UE (MCPTT User) release the PTT button indicating end of talking.	I	-	-	-
14	The SS (MCPTT server) sends a Floor Idle message.	<	Floor Idle	-	-
15	Make the UE (MCPTT User) press the PTT button requesting to speak. NOTE: The User shall keep the button pressed until otherwise written.	-	-	-	-
16	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	2	Р
17	The SS (MCPTT server) sends a Floor Granted message.	<	Floor Granted	-	-
18	Make the UE (MCPTT User) release the PTT button indicating end of talking.	-	-	-	-
19	Make the UE (MCPTT User) request upgrade of the ongoing private call to MCPTT emergency private call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
20	Check: Does the UE (MCPTT client) send a SIP re-INVITE message requesting the establishment (upgrade) of an MCPTT private emergency call on-demand offering a media- level section for a media-floor control entity?	>	SIP re-INVITE	3	Р
-	EXCEPTION: Steps 21a1-21b3 describe behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests or not implicit floor control in step 33.	-	-	-	-
21a 1	IF implicit floor control was requested in step 33 THEN the SS (MCPTT server) sends SIP 200 (OK) indicating that it has accepted the implicit floor request.	<	SIP 200 (OK)	-	-
21b 1	ELSE the SS (MCPTT server) sends SIP 200 (OK) without indication for acceptance of an implicit floor request.	<	SIP 200 (OK)	-	-
21b 2	Make the UE (MCPTT User) press the PTT button requesting to speak. NOTE: The User shall keep the button pressed until otherwise written.	-	-	-	-
21b 3	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	4	Р
22	The SS (MCPTT server) sends a Floor Granted message. NOTE: Override granted.	<	Floor Granted	-	-
23	Make the UE (MCPTT User) release the PTT button indicate end of talking.	-	-	-	-

24	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	4	Р
-	EXCEPTION: Step 25a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE can handle Floor Ack				
	message.				
25a	IF the UE (MCPTT client) include the first bit in	<	Floor Ack	-	-
1	the subtype of the Floor Release message set				
	to '1' (acknowledgement is required) THEN SS				
	(MCPTT server) sends a Floor Ack message.				
26	The SS (MCPTT server) sends a Floor Taken	<	Floor Taken	-	-
07	message.				
27	Make the UE (MCPTT User) press the PTT	-	-	-	-
	button requesting to speak. NOTE: Request to override.				
	NOTE: The User shall keep the button pressed				
	until otherwise written.				
28	Check: Does the UE (MCPTT client) send a	>	Floor Request	4	Р
20	Floor Request message?	-			•
29	The SS (MCPTT server) sends a Floor	<	Floor Granted	-	-
	Granted message.				
	NOTE: Override granted.				
30	Make the UE (MCPTT User) release the PTT	-	-	-	-
	button indicating end of talking.				
31	Check: Does the UE (MCPTT client) send a	>	Floor Release	4	Р
	Floor Release message?				
-	EXCEPTION: Step 32a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE can handle Floor Ack				
	message.				
32a	IF the UE (MCPTT client) include the first bit in	<	Floor Ack	-	-
1	the subtype of the Floor Release message set				
	to '1' (acknowledgement is required) THEN SS				
33	(MCPTT server) sends a Floor Ack message.		-		
33	Make the UE (MCPTT User) request cancelling of MCPTT emergency private call.	-	-	-	-
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
34	Check: Does the UE (MCPTT client) send a	>	SIP re-INVITE	5	Р
04	SIP re-INVITE message requesting the	_		Ŭ	
	cancelation of the MCPTT private emergency				
	call?				
-	EXCEPTION: Steps 35a1-35b3 describe	-	-	-	-
	behaviour that depends on the UE				
	implementation; the "lower case letter"				
	identifies a step sequence that take place if the				
	UE requests or not implicit floor control in step				
	51.	<u> </u>			
35a	IF implicit floor control was requested in step	<	SIP 200 (OK)	-	-
1	51 THEN the SS (MCPTT server) sends SIP				
	200 (OK) indicating that it has accepted the				
	implicit floor request.				
35b	ELSE the SS (MCPTT server) sends SIP 200	<	SIP 200 (OK)	-	-
1	(OK) without indication for acceptance of an				
0.51	implicit floor request.				
35b	Make the UE (MCPTT User) press the PTT	-	-	-	-
2	button requesting to speak. NOTE: The User shall keep the button pressed				
	until otherwise written.				
35b	Check: Does the UE (MCPTT client) send a	>	Floor Request	2	Р
3	Floor Request message?	>			Г
36	The SS (MCPTT server) sends a Floor	<	Floor Granted	-	-
50	Granted message.			_	-
	NOTE: Override granted.				
37	Make the UE (MCPTT User) release the PTT	-	-	- 1	-
	button indicating end of talking.				
L					

38	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	2	Р
-	EXCEPTION: Step 39a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE can handle Floor Ack message.	-	-	-	-
39a 1	IF the UE (MCPTT client) include the first bit in the subtype of the Floor Release message set to '1' (acknowledgement is required) THEN SS (MCPTT server) sends a Floor Ack message.	<	Floor Ack	-	-
40	Make the UE (MCPTT User) request termination of the MCPTT private call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
41	Check: Does the UE (MCPTT client) send a SIP BYE request?	>	SIP BYE	5	Р
42	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
43	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.1.3.3 Specific message contents

Table 6.2.1.3.3-1: SIP INVITE (Step 2, Table 6.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, condition PRIVATE-CALL

Table 6.2.1.3.3-2: SIP re-INVITE (Step 20, Table 6.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, condition EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.2.1.3.3-3				
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	Whether this is included or not depends on the MCPTT-Info 'alert-ind' in Table 6.2.1.3.3-3.			

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, conditions PRIVATE-CALL and EMERGENCY-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
alert-ind	Not present or when present any allowed value ("true" or "false")	Although alert indication is not explicitly indicated to be requested in the present test case 'any allowed value' is included to handle UEs which cannot request emergency without alert indication If the UE sends "true" then it shall include an application/vnd.3gpp.m cptt-location-info+xml MIME body in the SIP INVITE message Table 6.2.1.3.3-1				

Table 6.2.1.3.3-4: SIP re-INVITE (Step 34, Table 6.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.1.3.3-5					

Table 6.2.1.3.3-5: MCPTT-Info in SIP re-INVITE (Table 6.2.1.3.3-4)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
emergency-ind	"false"					
alert-ind	"false"					

Table 6.2.1.3.3-6: SIP 200 (OK) (Step 42, Table 6.2.1.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1							
Information Element Value/remark Comment Reference				Condition			
Content-Type	Not Included						

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.1.3.3-7: Floor Release (Step 7, Table 6.2.1.3.2-1)

Table 6.2.1.3.3-8: Floor Taken (Step 9, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value			

Table 6.2.1.3.3-9: Floor Request (Steps 4b4, 11, 16, 35b3, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 ca Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.1.3.3-10: Floor Deny (Step 12, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition ON-NETWORK.						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value				

Table 6.2.1.3.3-11: Floor Idle (Step 14, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1.						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value				

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.1.3.3-12: Floor Granted (Steps 5, 17, 36, Table 6.2.1.3.2-1)

Table 6.2.1.3.3-13: Floor Request (Steps 21b3, 28, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK. Information Element Value/remark Comment Condit						
	Value/Terriark	Comment	Condition			
Floor Indicator						
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value				

Table 6.2.1.3.3-14: Floor Granted (Steps 22, 29, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 co Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Table 6.2.1.3.3-15: Floor Release (Steps 24, 31, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK.						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value				

Table 6.2.1.3.3-16: Floor Taken (Step 26, Table 6.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK.						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value				

6.2.2 On-network / Private Call / On-demand / Automatic Commencement Mode / With Floor Control / Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Terminated (CT)

6.2.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private and private emergency calls with automatic commencement } ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT private call, ondemand Automatic Commencement Mode, no Force of automatic commencement, applying End-to-end communication security with Floor Control }

communication security with Floor Control }
 then { UE (MCPTT Client) sends a SIP 200 (OK) accepting the establishment of an MCPTT private
 call, on-demand Automatic Commencement Mode applying End-to-end communication security with Floor
 Control, and, notifies the user for the call establishment }

(2)

with { UE (MCPTT Client) having established an On-demand Automatic Commencement Mode Private Call with Floor Control }

ensure that {

when { the MCPTT User (MCPTT Client) engages in communication with the inviting MCPTT User }
then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server (Floor

granting/release/deny) applying Floor Control confidentiality and integrity protection }
}

(3)

with { UE (MCPTT Client) having established an MCPTT private call, on-demand Automatic Commencement Mode with Floor Control }

ensure that {

when { the MCPTT User (MCPTT Client) receives a request for upgrade of the ongoing MCPTT private
call to an MCPTT emergency private call with floor control }

then { UE (MCPTT Client) accepts the request and upon sending SIP 200 (OK) message considers the
call as being upgraded to emergency private call (emergency private call state = "MEPC 3: emergencypc-granted") }

(4)

with { UE (MCPTT Client) having upgraded an On-demand Automatic Commencement Mode Private Call to emergency private call }

ensure that {

when { the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User }
 then { UE (MCPTT Client) respects the floor control imposed by the MCPTT Server including being
 able to handle override requested by the inviting MCPTT user and applying Floor Control
 confidentiality and integrity protection }
 }

(5)

with { UE (MCPTT Client) having upgraded an On-demand Automatic Commencement Mode Private Call to an
Emergency Private Call }
ensure that {

when { the MCPTT User (MCPTT Client) receives a request to cancel the ongoing MCPTT emergency
private call }

then { UE (MCPTT Client) accepts the request and after sending a SIP 200 (OK) response considers the emergency condition cancelled and the call being reverted back to MCPTT Private Call }

(6)

with { UE (MCPTT Client) having an ongoing On-demand Automatic Commencement Mode Private Call }
ensure that {

when { the MCPTT User (MCPTT Client) receives a request for termination of the ongoing MCPTT
private call }

then { UE (MCPTT Client) accept the request and after sending a SIP 200 (OK) response leaves the MCPTT session }

}

6.2.2.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 4.6.2, 4.7, 6.2.2, 6.2.3.1.1, 6.2.6, 11.1.1.2.1.2, 11.1.1.2.1.3, 11.1.3.1.1.2, TS 24.380 clauses 4.1.1.2, 5.2.1, 5.2.2, 12.1.2.2, 13.1, 13.3.3, TS 33.179, clause 7.2.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 4.6.2]

Key aspects of MCPTT emergency private calls include:

- adjusted EPS bearer priority for both participants whether or not they are both in an emergency condition (i.e. both have their MCPTT emergency state set). This is achieved by using the Resource-Priority header field as specified in IETF RFC 4412 [29] with namespaces defined for use by MCPTT specified in draft-holmberg-dispatch-mcptt-rp-namespace [48];
- the initiator of the MCPTT emergency private call can override the other MCPTT user in the MCPTT emergency private call unless that user also has their MCPTT emergency state set;

...

- restoration of normal floor control priority participants when the emergency elevated priority is cancelled;

•••

- requires the targeted MCPTT user to be authorised to receive an MCPTT emergency private call;

[TS 24.379, clause 4.7]

If a mission critical organisation requires MCPTT users to communicate using end-to-end security, a security context needs to be established between the initiator of the call and the recipient(s) of the call, prior to the establishment of media, or floor control signalling. This provides assurance to MCPTT users that no unauthorised access to communications is taking place within the MCPTT network. An MCPTT key management server (KMS) manages the security domain. For any end-point to use or access end-to-end secure communications, it needs to be provisioned with keying material associated to its identity by the KMS as specified in 3GPP TS 33.179 [46].

•••

For private calls, the security context is initiated at call setup. An end-to-end security context is established that is unique to the pair of users involved in the call. The procedure involves transferral of an encapsulated private call key (PCK) and private call key id (PCK-ID) from the initiator to the terminator. The PCK is encrypted using the terminator's MCPTT ID and domain-specific material provided from the KMS. The PCK and PCK-ID are distributed within a MIKEY payload within the SDP offer of the private call request. This payload is called a MIKEY-SAKKE I_MESSAGE, as defined in IETF RFC 6509 [75], which ensures the confidentiality, integrity and authenticity of the payload. The encoding of the MIKEY payload in the SDP offer is described in IETF RFC 4567 [47] using an "a=key-mgmt" attribute. The payload is signed using a key associated to the identity of the initiating user. At the terminating side, the signature is validated. If valid, the UE extracts and decrypts the encapsulated PCK. The MCPTT UE also extracts the PCK-ID. This process is described in 3GPP TS 33.179 [46]. With the PCK successfully shared between the two MCPTT UEs, the UEs are able to use SRTP/SRTCP to create an end-to-end secure session.

End-to-end security is independent of the transmission path and hence is applicable to both on and off-network communications. With a security context established, the group call key and private call key can be used to encrypt media and, if required, floor control traffic between the end-points as described in 3GPP TS 24.380 [5] clause 13.

[TS 33.179, clause 7.2.4]

End-to-end communication security for either group or private calls requires the provisioning of key material from the KMS. The key material required to be provisioned to each user is listed below:

- Domain specific key material, also known as a MCPTT KMS Certificate, which includes:

- The MCPTT KMS Public Authentication Key (KPAK in IETF RFC 6507 [9]).
- The MCPTT KMS Public Confidentiality Key (Z_T in IETF RFC 6508 [10]).
- The UID conversion (as described below).
- Choice of cryptographic domain parameters (such as those listed in IETF RFC 6509 [8]).
- The time period for which this information is valid.
- A user signing key for each UID for the upcoming time period (SSK and PVT in IETF RFC 6507 [9]).
- A user decryption key for each UID for the upcoming time period (RSK in IETF RFC 6508 [10]).
- The time period, for which the user key material is valid (e.g. month).

The UID conversion mechanism defines how UIDs are generated. Using this information a MCPTT client can take a user identifier (e.g. an MCPTT ID), and the current time, (e.g. the year and month) and convert these to a UID.

EXAMPLE: UID = Hash (MCPTT ID, KMS URI, validity period info).

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and
- 4) if included in the SDP offer, shall include the media-level section of the offered media-floor control entity consisting of:
 - a) an "m=application" media-level section as specified in 3GPP TS 24.380 [5] clause 12; and
 - b) 'fmtp' attributes as specified in 3GPP TS 24.380 [5] clause 14.

[TS 24.379, clause 6.2.3.1.1]

When performing the automatic commencement mode procedures, the MCPTT client:

- 1) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;

 shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. The "refresher" parameter in the Session-Expires header field shall be set to "uas";

•••

- 7) shall, if the incoming SIP INVITE request does not contain a Replaces header field, include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- NOTE: In the case of a new emergency call where the terminating client is using a pre-established session, the SIP INVITE request containing a Replaces header is used to replace the pre-established session.
- 8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];

•••

10) shall interact with the media plane as specified in 3GPP TS 24.380 [5] subclause 6.2.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.1.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 3) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency private call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency private call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and

.

- b) shall set the MCPTT emergency private priority state to "MEPP 2: in-progress" for this private call;
- 4) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];
 - d) if authentication verification of the MIKEY-SAKKE I_MESSAGE fails, shall reject the SIP INVITE request with a SIP 488 (Not Acceptable Here) response as specified in IETF RFC 4567 [47], and include warning

text set to "136 authentication of the MIKEY-SAKE I_MESSAGE failed" in a Warning header field as specified in subclause 4.4; and

- e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.
- 5) may check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of this specification to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;
- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.1 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode;

[TS 24.379, clause 11.1.1.2.1.3]

Upon receipt of a SIP re-INVITE request for an existing private call session, the MCPTT client shall:

- if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP re-INVITE request to upgrade this call to an MCPTT emergency private call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency private call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - ii) if the <alert-ind> element is set to "true", should display to the MCPTT user an indication of the MCPTT emergency alert and associated information; and
 - b) shall set the MCPTT emergency private priority state to "MEPP 2: in-progress" for this private call;
- 2) if the SIP re-INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "false":
 - a) should display to the MCPTT user an indication that this is a SIP re-INVITE request to downgrade this emergency private call to a normal priority private call and:
 - i) should display the MCPTT ID of the sender of the SIP re-INVITE request contained in the <mcpttcalling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and

••

- b) shall set the MCPTT emergency private priority state to "MEPP 1: no-emergency" for this private call; and
- c) if the MCPTT emergency private call state of the call is set to "MEPC 3: emergency-call-granted", shall set the MCPTT emergency private call state of the call to "MEPC 1: emergency-pc-capable";
- may check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of this specification to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 4) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user if not done so in step 1 or step 2 above;

- NOTE 1: As this is a re-INVITE for an existing MCPTT private call session, there is no attempt made to change the answer-mode from its current state.
- 5) shall accept the SIP re-INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 6) if the SIP re-INVITE request was received within an on-demand session, shall include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;

•••

- 8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4]; and
- 9) shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 11.1.3.1.1.2]

Upon receiving a SIP BYE request for private call session, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

[TS 24.380, clause 4.1.1.2]

At any point in time a group member can request permission to talk.

When all group members are silent, a group member can press the PTT button, meaning the request for permission to talk. The floor participant entity of this user reflects this request to the floor control server by sending a Floor Request message. If the floor control server decides to permit, it informs this permission for this request by sending a Floor Granted message to the requesting group member. The floor control server informs the initiation of the talk to the other group members by sending a Floor Taken message. Once the group member receives the permission, a permission indication (permission tone) is generated and the user can talk. The media packets (encoded voice) are sent to the controlling MCPTT server and from there they are distributed to all listeners of this group. The release of the PTT button indicates the user's intension to end talking. Once the PTT button is released, the floor participant sends a Floor Release message to the floor control server indicating that this user has finished talking. This cycle, starting from the Floor Granted message and ending with Floor Release message, is known as 'talk burst' or 'media burst'.

In the beginning of a call the initial talk permission request can be implied by the SIP message which initiates the call as specified in 3GPP TS 24.379 [2] without any specific Floor Request message.

A group member can also request for permission to talk by sending a Floor Request message during a talk burst. The floor control server can resolve this request in several ways.

- If this request has higher priority than the ongoing talk burst, the floor control server revokes the current talk burst by sending a Floor Revoke message to the current talker. The current talker is interrupted and the current media burst is ended by the current floor participant by sending a Floor Release message. Then the floor control server sends a Floor Granted message to the revoking user and send Floor Taken message to other group members. Then a new media burst starts.
- 2. If this request does not have higher priority and floor request queuing is not used the floor control server rejects this request by sending a Floor Deny message to the requester. Then a reject indication (reject tone) is generated for the user. The ongoing talk burst continues.

•••

During silence (when no talk burst is ongoing), the floor control server can send Floor Idle message to all floor participants from time to time. The floor control server sends Floor Idle message in the beginning of silence.

[TS 24.380, clause 5.2.1]

To be compliant with the procedures in the present document, an MCPTT client shall:

- 1. support the role of an MCPTT client as specified 3GPP TS 23.179 [5];
- 2. support the on-network MCPTT client role as specified in 3GPP TS 24.379 [2];

- •••
- 4. support media plane security as specified in clause 13.

To be compliant with the on-network procedures in the present document, an MCPTT client shall:

- 1. provide the role of a floor participant in on-network mode as specified in subclause 5.2.2;
- 2. provide the media mixer function as described in subclause 4.2.2 and support the related procedures in subclause 6.2;

•••

- 4. provide PTT button events towards the on-network floor participant as specified in subclause 6.2;
- 5. provide means (sound, display, etc.) for indications towards the MCPTT user as specified in subclause 6.2;
- 6. support negotiating media plane control channel media level attributes as specified in subclause 4.3; and

[TS 24.380, clause 5.2.2]

To be compliant with the on-network procedures in the present document, a floor participant in on-network mode shall:

- 1. support the on-network floor control procedures as defined in 3GPP TS 23.179 [5];
- 2. support acting as an on-network floor participant as specified in subclause 6.2; and
- 3. support the on-network mode floor control protocol elements as specified in the clause 8.

A floor participant in on-network mode may:

1. support queuing of floor requests as specified in subclause 6.2 and subclause 4.1.1.2.

[TS 24.380, clause 12.1.2.2]

In an SDP offer, the "mc_priority" fmtp attribute indicates (using an integer value between '1' and '255') the maximum floor priority that the offerer requests to be used with Floor Request messages sent by the offerer. In an SDP answer, the attribute parameter indicates the maximum priority level that the answerer has granted to the offerer. The value has to be equal or less than the value provided in the associated SDP offer.

NOTE 1: If the "mc_priority" fmtp attribute is not used within an SDP offer or answer, a default priority value is assumed.

In an SDP offer, the "mc_granted" fmtp attribute parameter indicates that the offerer supports the procedure where the answerer indicates, using the fmtp attribute in the associated SDP answer, that the floor has been granted to the offerer.

- NOTE 2: When the "mc_granted" fmtp attribute is used in an SDP offer, it does not indicate an actual request for the floor. The SDP "mc_implicit_request" fmtp attribute can be used to request the floor. In an SDP answer, the attribute indicates that the floor has been granted to the offerer.
- NOTE 3: Once the offerer has been granted the floor, the offerer has the floor until it receives a Floor Revoke message, or until the offerer itself releases the floor by sending a Floor Release message, as described in the present specification.

In an SDP offer, the "mc_implicit_request" fmtp attribute indicates that the offerer implicitly requests the floor (without the need to send a Floor Request message). In an SDP answer, the attribute parameter indicates that the answerer has accepted the implicit floor request. Once the answerer grants the floor to the offerer, the answerer will send a Floor Granted message.

NOTE 4: The usage of the "mc_implicit_request" fmtp attribute in an SDP answer does not mean that the answerer has granted the floor to the offerer, only that the answerer has accepted the implicit floor request.

[TS 24.380, clause 13.1]

Media plane security provides integrity and confidentiality protection of individual media streams and media plane control messages in MCPTT sessions.

The media plane security is based on 3GPP MCPTT security solution including key management and end-to-end media and floor control messages protection as defined in 3GPP TS 33.179 [14].

Various keys and associated key identifiers protect:

- 1. RTP transported media;
- 2. RTCP transported media control messages (i.e. RTCP SR packets, RTCP RR packets, RTCP SDES packets);
- 3. RTCP APP transported floor control messages;

...

In an on-network private call:

- 1. if protection of media is negotiated, the PCK and the PCK-ID protect media sent and received by the MCPTT clients;
- 2. if protection of floor control messages sent using unicast between the MCPTT client and the participating MCPTT function serving the MCPTT client is negotiated, the CSK and the CSK-ID protect the floor control messages sent and received by the MCPTT client and by the participating MCPTT function;

...

4. if protection of media control messages sent using unicast between the MCPTT client and the participating MCPTT function serving the MCPTT client is negotiated, the CSK and the CSK-ID protect the media control messages sent and received using unicast by the MCPTT client and by a participating MCPTT function; and

•••

The CSK and the CSK-ID are generated by the MCPTT client and provided to the participating MCPTT function serving the MCPTT client using SIP signalling according to 3GPP TS 24.379 [2].

••

The PCK and the PCK-ID are generated by the MCPTT client initiating the private call and provided to the MCPTT client receiving the private call using SIP signalling according to 3GPP TS 24.379 [2], using Connect message described in subclause 8.3.4 or using MONP signalling according to 3GPP TS 24.379 [2].

[TS 24.380, clause 13.3.3]

3. in an on-network private call:

A) if:

...

ii) protection of media is negotiated in terminating call and the PCK and the PCK-ID were received from the remote MCPTT client using SIP signalling according to 3GPP TS 24.379 [2];

then:

- i) shall encrypt sent media according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the PCK and PCK-ID as specified in subclause 13.2; and
- ii) shall decrypt received media according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the PCK and PCK-ID as specified in subclause 13.2;
- B) if protection of floor control messages is negotiated and the CSK and the CSK-ID were sent to the participating MCPTT function using SIP signalling according to 3GPP TS 24.379 [2]:
 - i) shall encrypt sent floor control messages according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and

- ii) shall decrypt received floor control messages according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and
- D) if protection of media control messages sent using unicast between the participating MCPTT function and the MCPTT client is negotiated and the CSK and the CSK-ID were sent to the participating MCPTT function using SIP signalling according to 3GPP TS 24.379 [2]:
 - i) shall encrypt media control messages sent using unicast according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2; and
 - ii) shall decrypt media control messages received using unicast according to IETF RFC 3711 [16] and 3GPP TS 33.179 [14] using SRTP-MK, SRTP-MS and SRTP-MKI generated using the CSK and CSK-ID as specified in subclause 13.2;

6.2.2.3 Test description

6.2.2.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.2.3.2 Test procedure sequence

Table 6.2.2.3.2-1: Main behaviour

St	Procedure	Procedure Message Sequence TP		Procedure Message Sequence TP		Verdict
		U - S	Message			
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-	
	are related to the MCPTT call establishment					
	are described in TS 36.579-1 [2], subclause					
	5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence					
	below shows only the MCPTT relevant					
	messages exchanged.					
1	The SS (MCPTT server) sends SIP INVITE to	<	SIP INVITE	-	-	
	request establishment of an MCPTT private					
	call, on-demand Automatic Commencement					
	Mode, no Force of automatic commencement,					
	applying End-to-end communication security with Floor Control including a "text/plain" MIME					
	body.					
2	Check: Does the UE (MCPTT client) send a	>	SIP 200 (OK)	1	Р	
_	SIP 200 (OK) accepting the establishment of	-				
	an MCPTT private call, on-demand Automatic					
	Commencement Mode applying End-to-end					
	communication security with Floor Control?					
3	Check: Does the UE shows to the user the	>	-	1	Р	
	message received in the SIP INVITE					
	"text/plain" MIME body? NOTE: UE may provide additional information					
	e.g. MCPTT ID of the originator and other					
	incoming call relevant information.					
4	SS (MCPTT server) sends a Floor Taken	<	Floor Taken	-	-	
	message.					
5	Make the UE (MCPTT User) request to speak	-	-	-	-	
	(e.g. pressing the PTT button)					
6	Check: Does the UE (MCPTT client) send a	>	Floor Request	2	Р	
7	Floor Request message? SS (MCPTT server) sends a Floor Deny		Floor Dony			
7	message.	<	Floor Deny	-	-	
8	SS (MCPTT server) sends a Floor Idle	<	Floor Idle	-	-	
	message.					
9	Make the UE (MCPTT User) request to speak	-	-	-	-	
	(e.g. pressing the PTT button)					
10	Check: Does the UE (MCPTT client) send a	>	Floor Request	2	Р	
44	Floor Request message?		Floor Cronted			
11	SS (MCPTT server) sends a Floor Granted	<	Floor Granted	-	-	
12	message. Make the UE (MCPTT User) indicate end of	-	-		-	
12	talking (e.g. releasing the PTT button).					
13	Check: Does the UE (MCPTT client) send a	>	Floor Release	2	Р	
	Floor Release message?					
-	EXCEPTION: Step 14a1 describes behaviour	-	-	-	-	
	that depends on the UE implementation; the					
	"lower case letter" identifies a step sequence					
	that take place if the UE can handle Floor Ack					
14a	message. IF the UE (MCPTT client) include the first bit in	<	Floor Ack		-	
14a	the subtype of the Floor Release message set	_		_	_	
	to '1' (acknowledgement is required) THEN SS					
	(MCPTT server) sends a Floor Ack message.					
15	SS (MCPTT server) sends a Floor Idle	<	Floor Idle	-	-	
	message.					
16	The SS (MCPTT server) sends SIP re-INVITE	<	SIP re-INVITE	-	-	
	requesting the establishment (upgrade) of an					
	MCPTT private emergency call on-demand Automatic Commencement Mode offering a					
	media-level section for a media-floor control					
	entity.					
17	Check: Does the UE (MCPTT client) send a	>	SIP 200 (OK)	3	Р	
	SIP 200 (OK)?		·			

				-	
-	EXCEPTION: Step 18a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE displays information to				
	the User upon accepting				
	establishment/releasing of Emergency call.				
100	IF pc_DisplayIfoEmergencyCall THEN			5	Р
18a	IF pc_DisplayitoEmergencyCall THEN	-	-	Э	Р
1					
	Check: Does the UE (MCPTT client) notify the				
	user about the upgrade of the private call to an				
	emergency private call?				
	NOTE 1: This is expected to be done via a				
	suitable implementation dependent MMI.				
	NOTE 2: The display information may include				
	- indication for upgrade of the private call to an				
	emergency private call				
	- the MCPTT ID of the sender of the SIP re-				
	INVITE request.				
19	SS (MCPTT server) sends a Floor Taken	<	Floor Taken	-	-
	message.				
20	SS (MCPTT server) transmits 1 media packet	<	RTP media	-	-
	(encoded voice).				
21	SS (MCPTT server) sends a Floor Idle	<	Floor Idle	-	-
	message.				
22	Make the UE (MCPTT User) request to speak	-	-	-	-
22		-		-	-
	(e.g. pressing the PTT button)			4	
23	Check: Does the UE (MCPTT client) send a	>	Floor Request	4	Р
	Floor Request message?				
24	SS (MCPTT server) sends a Floor Granted	<	Floor Granted	-	-
	message.				
25	SS (MCPTT server) sends a Floor Revoke	<	Floor Revoke	-	-
	message.				
	NOTE: The initiating entity has requested				
	override.				
26	Check: Does the UE (MCPTT client) notify the		-		
20	user that the permission to send RTP media is	-	-	-	-
	being revoked?				
27	Check: Does the UE (MCPTT client) send a	>	Floor Release	4	Р
	Floor Release message?				
-	EXCEPTION: Step 28a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the				
	"lower case letter" identifies a step sequence				
	that take place if the UE can handle Floor Ack				
	message.				
28a	IF the UE (MCPTT client) include the first bit in	<	Floor Ack	1_	_
20a	the subtype of the Floor Release message set	<u> </u>		_	_
'	to '1' (acknowledgement is required) THEN SS				
	(MCPTT server) sends a Floor Ack message.			+	
29	SS (MCPTT server) sends a Floor Taken	<	Floor Taken	-	-
	message.				
30	SS (MCPTT server) transmits 1 media packet	<	RTP media	-	-
	(encoded voice).				
31	SS (MCPTT server) sends a Floor Idle	<	Floor Idle	-	-
	message.				
32	Make the UE (MCPTT User) request to speak	-	-	-	-
	(e.g. pressing the PTT button)				
33	Check: Does the UE (MCPTT client) send a	>	Floor Request	4	Р
55	Floor Request message?	/		⁻	1
24			Floor Cropted	+	
34	SS (MCPTT server) sends a Floor Granted	<	Floor Granted	-	-
	message.				
35	The SS (MCPTT server) sends SIP re-INVITE	<	SIP re-INVITE	-	-
	to cancel the emergency.				
36	Check: Does the UE (MCPTT client) send a	>	SIP 200 (OK)	5	Р
	SIP 200 (OK)?				

-	EXCEPTION: Step 37a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE displays information to the User upon accepting establishment/releasing of Emergency call.	-	-	-	-
37a 1	IF pc_DisplayIfoEmergencyCall THEN Check: Does the UE (MCPTT client) notify the user about the downgrade of the emergency private call to a normal priority private call? NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: The display information may include - indication for downgrade of the emergency private call to a normal priority private call - the MCPTT ID of the sender of the SIP re- INVITE request.	-	-	5	Ρ
38	SS (MCPTT server) sends a Floor Taken message.	<	Floor Taken	-	-
39	SS (MCPTT server) transmits media packet(s) (encoded voice).	-	-	-	-
40	SS (MCPTT server) sends a Floor Idle message.	<	Floor Idle	-	-
41	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
42	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	6	Р
-	EXCEPTION: SS releases the E-UTRA connection	-	-	-	-

6.2.2.3.3 Specific message contents

Table 6.2.2.3.3-1: SIP INVITE (Step 1, Table 6.2.2.3.2-1)

Derivation path: TS 36.579-1 [2], table 5.5.2.5.2-1, condition PRIVATE-CALL

Table 6.2.2.3.3-2: SIP re-INVITE (Step 16, Table 6.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.2-1, condition EMERGENCY-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.2.3.3-3					

Table 6.2.2.3.3-3: MCPTT-Info in SIP re-INVITE (Table 6.2.2.3.3-2)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, conditions PRIVATE-CALL and EMERGENCY-CALL

Derivation Path: TS 36.579-1 [2],	table 5.5.2.5.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 6.2.2.3.3-5			

Table 6.2.2.3.3-4: SIP re-INVITE (Step 35, Table 6.2.2.3.2-1)

Table 6.2.2.3.3-5: MCPTT-Info in re-SIP INVITE (Table 6.2.2.3.3-4)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL				
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
emergency-ind	"false"			
alert-ind	"false"			

Table 6.2.2.3.3-6: SIP 200 (OK) (Step 42, Table 6.2.2.3.2-1)

Derivation Path: TS 36.579-1 [2], t	able 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not Included			

Table 6.2.2.3.3-7: Floor Release (Step 13, Table 6.2.2.3.2-1)

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-8: Floor Taken (Steps 4, 5439, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition	ON-NETWORK.		
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-9: Floor Request (Steps 6, 10, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'10000x00 000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 conditior	NON-NETWORK.		
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-10: Floor Deny (Step 7, Table 6.2.2.3.2-1)

Table 6.2.2.3.3-11: Floor Idle (Steps 8, 15, 40, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-12: Floor Granted (Step 11, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition ON-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000'	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-13: Floor Request (Steps 23, 32, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value		

Table 6.2.2.3.3-14: Floor Granted (Steps 24, 34, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condit	ion ON-NETWORK.		
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 cond	dition ON-NETWORK.		
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-15: Floor Release (Steps 27, Table 6.2.2.3.2-1)

Table 6.2.2.3.3-16: Floor Taken (Steps 19, 29, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK.						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value				

Table 6.2.2.3.3-17: Floor Revoke (Step 25, Table 6.2.2.3.2-1)

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Table 6.2.2.3.3-18: Floor Idle (Step 31, Table 6.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000'	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

6.2.3 On-network / Private Call / On-demand / Automatic Commencement Mode / Without Floor Control / Client Originated (CO)

6.2.3.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private calls with automatic commencement } ensure that {

when { the MCPTT User requests the establishment of an MCPTT private call, on-demand Automatic

Commencement Mode, no Force of automatic commencement, without floor control }
then { UE (MCPTT Client) sends a SIP INVITE message requesting on-demand Automatic Commencement Mode and not offering a media-level section for a media-floor control entity, and, after indication from the MCPTT Server that the call was established notifies the user, and, does not apply floor control } }

```
(2)
with { UE (MCPTT Client) having an ongoing On-demand Automatic Commencement Mode Private Call
without Floor control }
ensure that {
  when { the MCPTT User wants to terminate the ongoing MCPTT private call }
    them { UE (MCPTT Client) sends a SIP BYE request and after receiving a SIP 200 (OK) leaves the
    MCPTT session }
    }
}
```

6.2.3.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.1, 6.2.5.1, 11.1.1.2.1.1, 11.1.2.2, 11.1.3.1.1.1. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:
 - i) if the MCPTT client is initiating a call to a group identity;
 - ii) if the <preferred-voice-encodings> element is present in the group document retrieved by the group management client as specified in 3GPP TS 24.381 [31] containing an <encoding> element with a "name" attribute; and
 - iii) if the MCPTT client supports the encoding name indicated in the value of the "name" attribute;

then the MCPTT client:

- i) shall insert the value of the "name" attribute in the <encoding name> field of the "a=rtpmap" attribute as defined in IETF RFC 4566 [12]; and
- c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];

[TS 24.379, clause 6.2.5.1]

When the MCPTT client wants to release an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to release; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 11.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT private call the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;

•••

- 3) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 7) shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 8) shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the invited MCPTT user, according to rules and procedures of IETF RFC 5366 [20];

•••

- 13) if force of automatic commencement mode at the invited MCPTT client is not requested by the MCPTT user and:
 - a) if automatic commencement mode at the invited MCPTT client is requested by the MCPTT user, shall include in the SIP INVITE request an Answer-Mode header field with the value "Auto" according to the rules and procedures of IETF RFC 5373 [18]; and

•••

14) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <session-type> element set to a value of "private";

•••

16) shall send SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 183(Session Progress) response to the SIP INVITE request the MCPTT client:

1) may indicate the progress of the session establishment to the inviting MCPTT user.

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

•••

3) shall notify the user that the call has been successfully established.

[TS 24.379, clause 11.1.2.2]

When the MCPTT user wants to make an on-demand private call without floor control, the MCPTT client shall follow the procedures in subclause 11.1.1.2.1.1 with the following exceptions:

- 1) in step 10) of subclause 11.1.1.2.1.1, the MCPTT client shall not offer a media-level section for a media-floor control entity; and
- 2) step 11) of subclause 11.1.1.2.1.1 shall be ignored.

[TS 24.379, clause 11.1.3.1.1.1]

Upon receiving a request from an MCPTT user to release an MCPTT private call session established using on-demand session signalling, the MCPTT client shall follow the procedures as specified in subclause 6.2.5.1.

6.2.3.3 Test description

6.2.3.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.3.3.2

Test procedure sequence

Table 6.2.3.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the UE (MCPTT User) request the	-	-	-	-
	establishment of an MCPTT private call, on-				
	demand Automatic Commencement Mode, no				
	Force of automatic commencement, without				
	Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
2	Check: Does the UE (MCPTT client) send an	>	SIP INVITE	1	Р
	initial SIP INVITE message requesting the				
	establishment of an MCPTT private call, on-				
	demand Automatic Commencement Mode, no				
	Force of automatic commencement, without				
	Floor Control?				
3	The SS (MCPTT server) sends SIP	<	SIP 183 (Session Progress)	-	-
	183(Session Progress).				
4	The SS (MCPTT server) sends SIP 200 (OK),	<	SIP 200 (OK)	-	-
	indicates that it has accepted the call without				
	floor control, SSRC identifier is assigned.				
5	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
6	Make the UE (MCPTT User) request to speak	-	-	-	-
	(e.g. pressing the PTT button).				
7	Check: Does the UE (MCPTT client) send a	>	Floor Request	1	F
	Floor Request message in the next 5 sec?				
8	Make the UE (MCPTT User) request	-	-	-	-
	termination of the MCPTT private call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
9	Check: Does the UE (MCPTT client) send a	>	SIP BYE	2	Р
_	SIP BYE request?				
10	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
11	Wait for 5 sec to capture any not allowed	-	-	-	-
	behaviour.				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection				
	00111001011		l		

6.2.3.3.3

Specific message contents

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Priv-Answer-Mode	Optional				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.3.3.2-2				

Table 6.2.3.3.3-1: SIP INVITE (Step 2, Table 6.2.3.3.2-1)

Table 6.2.3.3.3-2: SDP Message in SIP INVITE (Table 6.2.3.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
media attribute	Not included	a= line attribute = fmtp			
		No Floor control requested			

Table 6.2.3.3.3-3: SIP 200 (OK) (Step 4, Table 6.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"application/sdp"					
Content-Length	length of message- body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.3.3.3-4					

Table 6.2.3.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.3.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Table 6.2.3.3.3-5: SIP 200 (OK) (Step 10, Table 6.2.3.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1				
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	Not Included			

6.2.4 On-network / Private Call / On-demand / Automatic Commencement Mode / Without Floor Control / Client Terminated (CT)

6.2.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private and private emergency calls with automatic commencement } ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT private call, ondemand Automatic Commencement Mode, no Force of automatic commencement, without Floor Control }

then { UE (MCPTT Client) sends a SIP 200 (OK) accepting the establishment of an MCPTT private call, on-demand Automatic Commencement Mode and not offering a media-level section for a media-floor control entity, and, does not apply floor control }

(2)

with { UE (MCPTT Client) having an ongoing On-demand Automatic Commencement Mode Private Call } ensure that {

when { the MCPTT User (MCPTT Client) receives a request for termination of the ongoing MCPTT
private call }

then { UE (MCPTT Client) accept the request and after sending a SIP 200 (OK) response leaves the MCPTT session }

6.2.4.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.2, 6.2.3.1.1, 6.2.6, 11.1.1.2.1.2, 11.1.2.2, 11.1.3.1.1.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and

[TS 24.379, clause 6.2.3.1.1]

When performing the automatic commencement mode procedures, the MCPTT client:

- shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;

- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. The "refresher" parameter in the Session-Expires header field shall be set to "uas";

•••

8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.2.2]

Upon receipt of an initial SIP INVITE request for the private call with an SDP offer not including a media-level section for a media-floor control entity, the MCPTT client shall consider it as the request for private call without floor control and shall follow the procedures as specified in subclause 11.1.1.2.1.2 for on-demand session and subclause 11.1.1.2.2.2 for pre-established session.

[TS 24.379, clause 11.1.1.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

- 4) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];

•••

- e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.

•••

- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.1 if one of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Auto" and the MCPTT service setting at the invited MCPTT client for answering the call is set to automatic commencement mode;

[TS 24.379, clause 11.1.3.1.1.2]

Upon receiving a SIP BYE request for private call session, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

6.2.4.3 Test description

6.2.4.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.4.3.2

Test procedure sequence

Table 6.2.4.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
-	EXCEPTION: The E-UTRA/EPC related actions which are related to the call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
1	The SS (MCPTT server) sends SIP INVITE to request establishment of an MCPTT private call, on-demand Automatic Commencement, no Force of automatic commencement, without Floor Control.	<	SIP INVITE	-	-
2	Check: Does the UE (MCPTT client) send a SIP 200 (OK) accepting the establishment of an MCPTT private call, on-demand Automatic Commencement Mode without Floor Control?	>	SIP 200 (OK)	1	Ρ
3	Make the MCPTT User request to speak (e.g. pressing the PTT button).	-	-	-	-
4	Check: Does the UE (MCPTT client) send a Floor Request message in the next 5 sec?	>	Floor Request	1	F
5	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
6	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
7	Wait for 5 sec to capture any not allowed behaviour.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection	-	-	-	-

6.2.4.3.3 Specific message contents

Table 6.2.4.3.3-1: SIP INVITE (Step 1, Table 6.2.4.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Priv-Answer-Mode	Not included					
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.4.3.3-2					

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Table 6.2.4.3.3-2: SDP Message in SIP INVITE (Table 6.2.4.3.3-1)

Table 6.2.4.3.3-3: SIP 200 (OK) (Step 2, Table 6.2.4.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"application/sdp"				
Content-Length	length of message- body				
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.3.3.3-4				

Table 6.2.4.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.4.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Table 6.2.4.3.3-5: SIP 200 (OK) (Step 6, Table 6.2.4.3.2-1)

	Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1					
Information Element Va	alue/remark	Comment	Reference	Condition		
Content-Type Not Inc	luded					

6.2.5 On-network / Private Call / Emergency Private Call / On-demand / Automatic Commencement Mode / Force of automatic commencement mode / Without Floor Control / Client Originated (CO)

6.2.5.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service including authorization to initiate and cancel emergency calls } ensure that {

when { the MCPTT User requests the establishment of an MCPTT private emergency call, on-demand, automatic commencement mode, Force of automatic commencement mode without floor control } then { UE (MCPTT Client) requests Private Emergency Call establishment without floor control by sending a SIP INVITE message including a Priv-Answer-Mode header field with the value "Auto" not offering a media-level section for a media-floor control entity, and, after indication from the MCPTT Server that the call was established notifies the user, and, does not apply floor control } }

(2)

with { UE (MCPTT Client) having established an Emergency Private Call }
ensure that {
 when { the MCPTT User wants to terminate the ongoing MCPTT emergency private call }
 then { UE (MCPTT Client) sends a SIP BYE request and after receiving a SIP 200 (OK) leaves the
 MCPTT session }
 }

6.2.5.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.1, 6.2.5.1, 6.2.8.3.2, 6.2.8.3.3, 6.2.8.3.4, 6.2.8.3.6, 11.1.1.2.1.1, 11.1.2.2, 11.1.3.1.1.1. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];
- 4) if end-to-end security is required for a private call and the SDP offer is not for establishing a pre-established session, shall include the MIKEY-SAKKE I_MESSAGE in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 6.2.5.1]

...

When the MCPTT client wants to release an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to release; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 6.2.8.3.2]

When the MCPTT emergency private call state is set to "MEPC 1: emergency-pc-capable" and this is an authorised request for an MCPTT emergency private call as determined by the procedures of subclause 6.2.8.3.1.1, the MCPTT client:

- 1) shall set the MCPTT emergency state if not already set;
- 2) shall include in the application/vnd.3gpp.mcptt-info+xml MIME body in the SIP request an <emergency-ind> element set to "true" and set the MCPTT emergency private call state to "MEPC 2: emergency-pc-requested";
- 3) if the MCPTT user has also requested an MCPTT emergency alert to be sent and this is an authorised request for MCPTT emergency alert as determined by the procedures of subclause 6.2.8.3.1.3, shall:
 - a) include in the application/vnd.3gpp.mcptt-info+xml MIME body the <alert-ind> element set to "true" and set the MCPTT private emergency alert state to "MPEA 2: emergency-alert-confirm-pending"; and
 - b) include in the SIP request the specific location information for MCPTT emergency alert as specified in subclause 6.2.9.1;
- 4) if the MCPTT user has not requested an MCPTT emergency alert to be sent, shall set the <alert-ind> element of the application/vnd.3gpp.mcptt-info+xml MIME body to "false"; and
- 5) if the MCPTT emergency private priority state of this private call is set to a value other than "MEPP 2: inprogress" shall set the MCPTT emergency private priority state to "MEPP 4: confirm-pending".

[TS 24.379, clause 6.2.8.3.3]

If the MCPTT emergency private call state is set to either "MEPC 2: emergency-pc-requested" or "MEPC 3: emergency-pc-granted" and this is an authorised request for an MCPTT emergency private call as determined by the procedures of subclause 6.2.8.3.1.1, or the MCPTT emergency private priority state of the call is set to "MEPP 2: in-progress", the MCPTT client shall include in the SIP request a Resource-Priority header field populated with the values for an MCPTT emergency private call as specified in subclause 6.2.8.1.15.

NOTE: The MCPTT client ideally would not need to maintain knowledge of the in-progress emergency state of the call (as tracked on the MCPTT client by the MCPTT client emergency private state) but can use this knowledge to provide a Resource-Priority header field set to emergency level priority, which starts the infrastructure priority adjustment process sooner than otherwise would be the case.

[TS 24.379, clause 6.2.8.3.4]

On receiving a SIP 2xx response to a SIP request for an MCPTT emergency private call and if the MCPTT emergency private call state is set to "MEPC 2: emergency-pc-requested" or "MEPC 3: emergency-pc-granted", the MCPTT client:

- 1) shall set the MCPTT emergency private priority state of the call to "MEPP 2: in-progress" if it was not already set;
- 2) shall set the MCPTT emergency private call state to "MEPC 3: emergency-pc-granted"; and

[TS 24.379, clause 6.2.8.3.6]

When the MCPTT emergency private call state is set to "MEPC 3: emergency-pc-granted" and the MCPTT emergency alert state is set to "MPEA 1: no-alert", the MCPTT client shall generate a SIP re-INVITE request according to 3GPP TS 24.229 [4] with the clarifications given below.

NOTE 1: This procedure assumes that the MCPTT client in the calling procedure has verified that the MCPTT user has made an authorised request for cancelling MCPTT the in-progress emergency private call state of the call.

The MCPTT client:

- shall include in the SIP re-INVITE request an application/vnd.3gpp.mcptt-info+xml MIME body as defined in clause F.1 with the <emergency-ind> element set to "false";
- 2) shall clear the MCPTT emergency state; and
- 3) shall set MCPTT emergency private priority state of the MCPTT emergency private call to "MEPP 3: cancelpending".
- NOTE 2: This is the case of an MCPTT user who has initiated an MCPTT emergency private call and wants to cancel it.

[TS 24.379, clause 11.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT private call the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;
- 2) if the MCPTT user has requested the origination of an MCPTT emergency private call or is originating an MCPTT private call and the MCPTT emergency state is already set, the MCPTT client:
 - a) shall, if this is an authorised request for an MCPTT emergency private call as determined by the procedures of subclause 6.2.8.3.1.1, comply with the procedures in subclause 6.2.8.3.2; and
 - b) should, if this is an unauthorised request for an MCPTT emergency private call as determined in step a) above, indicate to the MCPTT user that they are not authorised to initiate an MCPTT emergency private call;
- 3) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 8) shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the invited MCPTT user, according to rules and procedures of IETF RFC 5366 [20];
- 9) if an end-to-end security context needs to be established then:
 - a) if necessary, shall instruct the key management client to request keying material from the key management server as described in 3GPP TS 33.179 [46];

- b) shall use the keying material to generate a PCK as described in 3GPP TS 33.179 [46];
- c) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.179 [46];
- d) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID of the invited user and a time related parameter as described in 3GPP TS 33.179 [46];
- e) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.179 [46]; and
- g) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46]; and
- f) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.179 [46].
- 10) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1 and with a media stream of the offered media-floor control entity;

...

12) if force of automatic commencement mode at the invited MCPTT client is requested by the MCPTT user, shall include in the SIP INVITE request a Priv-Answer-Mode header field with the value "Auto" according to the rules and procedures of IETF RFC 5373 [18];

...

- 14) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <session-type> element set to a value of "private";
- 15) if the MCPTT emergency private call state is set to either "MEPC 2: emergency-pc-requested" or "MEPC 3: emergency-pc-granted" or the MCPTT emergency private priority state for this private call is set to "MEPP 2: in-progress", the MCPTT client shall comply with the procedures in subclause 6.2.8.3.3; and
- 16) shall send SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 183(Session Progress) response to the SIP INVITE request the MCPTT client:

1) may indicate the progress of the session establishment to the inviting MCPTT user.

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) if the MCPTT emergency private call state is set to "MEPC 2: emergency-pc-requested" or "MEPC 3: emergency-pc-granted", shall perform the actions specified in subclause 6.2.8.3.4; and
- 3) shall notify the user that the call has been successfully established.

[TS 24.379, clause 11.1.2.2]

Upon receipt of an initial SIP INVITE request for the private call with an SDP offer not including a media-level section for a media-floor control entity, the MCPTT client shall consider it as the request for private call without floor control and shall follow the procedures as specified in subclause 11.1.1.2.1.2 for on-demand session and subclause 11.1.1.2.2.2 for pre-established session.

[TS 24.379, clause 11.1.3.1.1.]

Upon receiving a request from an MCPTT user to release an MCPTT private call session established using on-demand session signalling, the MCPTT client shall follow the procedures as specified in subclause 6.2.5.1.

6.2.5.3 Test description

6.2.5.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.5.3.2

Test procedure sequence

Table 6.2.5.3.2-1: Main behaviour

St	Procedure	J		TP	Verdict	
		U - S	Message			
1	Make the UE (MCPTT User) request the	-	-	-	-	
	establishment of an MCPTT private					
	emergency call, force of automatic					
	commencement mode, without Floor Control.					
	NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-	
	are related to the MCPTT call establishment					
	are described in TS 36.579-1 [2], subclause					
	5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence					
	below shows only the MCPTT relevant					
	messages exchanged.					
2	Check: Does the UE (MCPTT client) send an		SIP INVITE	1	Р	
2	initial SIP INVITE request, including a Priv-	>			- F	
	Answer-Mode header field with the value					
	"Auto" and not offering a media-level section					
	for a media-floor control entity requesting the					
	establishment of an MCPTT private call,					
	automatic commencement mode?					
3	The SS (MCPTT server) sends SIP	<	SIP 183 (Session Progress)	-	_	
Ŭ	183(Session Progress).					
4	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-	
	SSRC identifier is assigned.					
5	Check: Does the UE (MCPTT client) notify the	-	-	1	Р	
Ũ	user that the call has been successfully					
	established?					
	NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
6	Make the UE (MCPTT User) request to speak	-	-	-	-	
-	(e.g. pressing the PTT button)					
7	Check: Does the UE (MCPTT client) send a	>	Floor Request	1	F	
	Floor Request message in the next 5 sec?					
8	Make the UE (MCPTT User) request	-	-	-	-	
	termination of the MCPTT private emergency					
	call.					
	NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
9	Check: Does the UE (MCPTT client) send a	>	SIP BYE	2	Р	
	SIP BYE request?					
10	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-	
11	Wait for 5 sec to capture any not allowed	-	-	-	-	
	behaviour.					
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-	
	connection					

6.2.5.3.3

Specific message contents

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, conditions PRIVATE-CALL and EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Answer-Mode	Not present				
Priv-Answer-Mode					
answer-mode-value	"Auto"				
require	Parameter has no value				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.5.3.3-2				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.2.1.3.3-3				
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	Whether this is included or not depends on the MCPTT-Info 'alert-ind' in Table 6.2.5.3.3-3.			

Table 6.2.5.3.3-1: SIP INVITE (Step 2, Table 6.2.5.3.2-1)

Table 6.2.5.3.3-2: SDP Message in SIP INVITE (Table 6.2.5.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.22.1.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
media description	Not included	m= line media = application	No Floor control requested		
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP			
media attribute	Not included	a= line attribute = fmtp			

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, conditions PRIVATE-CALL and EMERGENCY-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
alert-ind	Not present or when present any allowed value ("true" or "false")	Although alert indication is not explicitly indicated to be requested on the present test case 'any allowed value' is included to handle UEs which cannot request emergency without alert indication If the UE sends "true" then it shall include an application/vnd.3gpp.m			
		cptt-location-info+xml MIME body in the SIP INVITE message Table 6.2.5.3.3-1			

Table 6.2.5.3.3-4: SIP 200 (OK) (Step 2, Table 6.2.5.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"application/sdp"				
Content-Length	length of message- body				
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.5.3.3-5				

Table 6.2.5.3.3-5: SDP Message in SIP 200 (OK) (Table 6.2.5.3.3-4)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
media description	Not included	m= line media = application	No Floor control requested		
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP			
media attribute	Not included	a= line attribute = fmtp			

Table 6.2.5.3.3-6: SIP 200 (OK) (Step 10, Table 6.2.5.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

6.2.6 On-network / Private Call / Emergency Private Call / On-demand / Automatic Commencement Mode / Force of automatic commencement mode / Without Floor Control / Client Terminated (CT)

6.2.6.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service including authorization to receive an MCPTT private call, the MCPTT service setting for answering the call is set to manual commencement mode } ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT emergency private
call, On-demand Automatic Commencement Mode, Force of automatic commencement mode without floor
control }

then { UE (MCPTT Client) accepts the call (automatic commencement) by sending a SIP 200 (OK)
message accepting the private emergency call, on-demand Automatic Commencement Mode, not offering a
media-level section for a media-floor control entity, and, optionally notifies the user, and, does
not apply floor control }
}

(2)

with { UE (MCPTT Client) having established an MCPTT Emergency Private Call }
ensure that {
 when { the UE (MCPTT Client) is informed by the remote client that the ongoing MCPTT emergency
private call has been cancelled }
 then { UE (MCPTT Client) accept the request and after sending a SIP 200 (OK) response leaves the
MCPTT session }
 }
}

6.2.6.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.2, 6.2.3.1.1, 6.2.6, 11.1.1.2.1.2, 11.1.2.2, 11.1.3.1.1.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and

[TS 24.379, clause 6.2.3.1.1]

When performing the automatic commencement mode procedures, the MCPTT client:

- 1) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. The "refresher" parameter in the Session-Expires header field shall be set to "uas";

•••

- shall, if the incoming SIP INVITE request does not contain a Replaces header field, include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- NOTE: In the case of a new emergency call where the terminating client is using a pre-established session, the SIP INVITE request containing a Replaces header is used to replace the pre-established session.
- 8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];

•••

10) shall interact with the media plane as specified in 3GPP TS 24.380 [5] subclause 6.2.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.1.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 3) if the SIP INVITE request contains an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <emergency-ind> element set to a value of "true":
 - a) should display to the MCPTT user an indication that this is a SIP INVITE request for an MCPTT emergency private call and:
 - i) should display the MCPTT ID of the originator of the MCPTT emergency private call contained in the <mcptt-calling-user-id> element of the application/vnd.3gpp.mcptt-info+xml MIME body; and

...

b) shall set the MCPTT emergency private priority state to "MEPP 2: in-progress" for this private call;

•••

5) may check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];

•••

- 7) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.1 if one of the following conditions are met:
 - •••
 - c) SIP INVITE request contains a Priv-Answer-Mode header field with the value of "Auto"; and

[TS 24.379, clause 11.1.2.2]

Upon receipt of an initial SIP INVITE request for the private call with an SDP offer not including a media-level section for a media-floor control entity, the MCPTT client shall consider it as the request for private call without floor control and shall follow the procedures as specified in subclause 11.1.1.2.1.2 for on-demand session and subclause 11.1.1.2.2.2 for pre-established session.

[TS 24.379, clause 11.1.3.1.1.2]

Upon receiving a SIP BYE request for private call session, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

6.2.6.3 Test description

6.2.6.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
 - receive emergency calls; MCPTT service setting for answering the call is set to manual commencement mode (3GPP TS 24.483 [12], /<x>/<x>/Common/PrivateCall/AutoCommence="false", /<x>/Common/PrivateCall/ManualCommence="true")
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.6.3.2

Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
-	EXCEPTION: The E-UTRA/EPC related	-	-	-	-
	actions which are related to the call				
	establishment are described in TS 36.579-				
	1 [2], subclause 5.4.4 'Generic Test Procedure				
	for MCPTT CT communication in E-UTRA'.				
	The test sequence below shows only the				
	MCPTT relevant messages exchanged.				
1	The SS (MCPTT server) sends SIP INVITE to	<	SIP INVITE	-	-
	request establishment of an MCPTT private				
	emergency call with force of automatic				
	commencement mode without floor control.				Р
2	Check: Does the UE (MCPTT client) send a	>	SIP 200 (OK)	1	Р
	SIP 200 (OK)?				
-	EXCEPTION: Step 3a1 describes behaviour	-	-	-	-
	that depends on the UE implementation; the "lower case letter" identifies a step sequence				
	that take place if the UE displays information to				
	the User upon accepting				
	establishment/releasing of private call.				
3a1	IF pc_DisplayIfoPrivateCall THEN			1	Р
341	IF pc_DisplayiloFilvateGall THEN	-	-		Г
	Check: Does the UE (MCPTT client) notify the				
	user about the emergency call establishment?				
	NOTE 1: This is expected to be done via a				
	suitable implementation dependent MMI.				
	NOTE 2: The display information may include				
	- indication for a request for an MCPTT private				
	call				
	- the MCPTT ID of the originator of the MCPTT				
	private call.				
4	Make the UE (MCPTT User) request to speak	-	-	-	-
	(e.g. pressing the PTT button)				
5	Check: Does the UE (MCPTT client) send a	>	Floor Request	1	F
	Floor Request message in the next 5 sec?				
6	The SS (MCPTT server) sends a SIP BYE	<	SIP BYE	-	-
	request.				
7	Check: Does the UE (MCPTT client) send a	>	SIP 200 (OK)	2	Р
	SIP 200 (OK)?				
8	Wait for 5 sec to capture any not allowed	-	-	-	-
	behaviour.				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection				

6.2.6.3.3

Specific message contents

Table 6.2.6.3.3-1: MCPTT User Profile (Preamble, USIM)

Derivation Path: TS 36.579-1 [2], table 5.5.8.3-1.						
Information Element	Value/remark	Comment	Reference	Condition		
Node						
Common						
PrivateCall						
AutoCommence	"false"	Indicates the authorisation to make a MCPTT private call with automatic commencement				

Table 6.2.6.3.3-2: SIP INVITE (Step 1, Table 6.2.6.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.2-1, conditions PRIVATE-CALL and EMERGENCY-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Answer-Mode	Not present					
Priv-Answer-Mode						
answer-mode-value	"Auto"					
require	Parameter has no value					
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.6.3.3-2					

Table 6.2.6.3.3-3: SDP Message in SIP INVITE (Table 6.2.6.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Table 6.2.6.3.4-3: SIP 200 (OK) (Step 2, Table 6.2.6.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"application/sdp"					
Content-Length	length of message- body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.6.3.3-4					

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute	Not included	a= line attribute = fmtp No Floor control requested				

Table 6.2.6.3.3-5: SDP Message in SIP 200 (OK) (Table 6.2.6.3.3-3)

Table 6.2.6.3.3-6: SIP 200 (OK) (Step 7, Table 6.2.6.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

6.2.7 On-network / Private Call / On-demand / Manual Commencement Mode / Without Floor Control / Client Originated (CO)

6.2.7.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate
private calls with manual commencement }
ensure that {

when { the MCPTT User requests the establishment of an MCPTT on-demand Manual Commencement private
call without floor control }

then { UE (MCPTT Client) requests On-demand Manual Commencement Mode Private Call establishment
without floor control by sending a SIP INVITE message not offering a media-level section for a
media-floor control entity, and, after indication from the MCPTT Server that the call was
established the UE notifies the user, and, does not apply floor control }
}

(2)

```
with { UE (MCPTT Client) having established an MCPTT on-demand Manual Commencement private call
without floor control }
ensure that {
    when { the MCPTT User wants to cancel the ongoing MCPTT on-demand Manual Commencement private call
}
    then { UE (MCPTT Client) sends a SIP BYE request and after receiving a SIP 200 (OK) response
leaves the MCPTT session }
    }
}
```

6.2.7.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.1, 6.2.5.1, 11.1.1.2.1.1, 11.1.2.2, 11.1.3.1.1.1. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

- 1) shall set the IP address of the MCPTT client for the offered MCPTT speech media stream and, if floor control shall be used, for the offered media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP offer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.

- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - a) the port number for the media stream selected; and
 - b) the codec(s) and media parameters and attributes with the following clarification:
 - •••
 - i) shall insert the value of the "name" attribute in the <encoding name> field of the "a=rtpmap" attribute as defined in IETF RFC 4566 [12]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4];

•••

4) if end-to-end security is required for a private call and the SDP offer is not for establishing a pre-established session, shall include the MIKEY-SAKKE I_MESSAGE in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 6.2.5.1]

When the MCPTT client wants to release an MCPTT session established using on-demand session signalling, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) shall generate a SIP BYE request according to 3GPP TS 24.229 [4];
- 3) shall set the Request-URI to the MCPTT session identity to release; and
- 4) shall send a SIP BYE request towards MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 200 (OK) response to the SIP BYE request, the MCPTT client shall interact with the media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 11.1.1.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT private call the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;

9...

- 3) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 5) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 6) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 8) shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the invited MCPTT user, according to rules and procedures of IETF RFC 5366 [20];

- 9) if an end-to-end security context needs to be established then:
 - a) if necessary, shall instruct the key management client to request keying material from the key management server as described in 3GPP TS 33.179 [46];
 - b) shall use the keying material to generate a PCK as described in 3GPP TS 33.179 [46];
 - c) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.179 [46];
 - d) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID of the invited user and a time related parameter as described in 3GPP TS 33.179 [46];
 - e) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.179 [46]; and
 - g) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46]; and
 - f) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.179 [46].
- 10) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1 and with a media stream of the offered media-floor control entity;

```
•••
```

- 13) if force of automatic commencement mode at the invited MCPTT client is not requested by the MCPTT user and:
 - b) if manual commencement mode at the invited MCPTT client is requested by the MCPTT user, shall include in the SIP INVITE request an Answer-Mode header field with the value "Manual" according to the rules and procedures of IETF RFC 5373 [18];
- 14) shall contain an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcpttinfo> element containing the <mcptt-Params> element with the <session-type> element set to a value of "private";

•••

16) shall send SIP INVITE request towards the MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a SIP 183(Session Progress) response to the SIP INVITE request the MCPTT client:

1) may indicate the progress of the session establishment to the inviting MCPTT user.

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

•••

3) shall notify the user that the call has been successfully established.

[TS 24.379, clause 11.1.2.2]

When the MCPTT user wants to make an on-demand private call without floor control, the MCPTT client shall follow the procedures in subclause 11.1.1.2.1.1 with the following exceptions:

- 1) in step 10) of subclause 11.1.1.2.1.1, the MCPTT client shall not offer a media-level section for a media-floor control entity; and
- 2) step 11) of subclause 11.1.1.2.1.1 shall be ignored.

[TS 24.379, clause 11.1.3.1.1.1]

Upon receiving a request from an MCPTT user to release an MCPTT private call session established using on-demand session signalling, the MCPTT client shall follow the procedures as specified in subclause 6.2.5.1.

6.2.7.3 Test description

6.2.7.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.7.3.2

Test procedure sequence

Table 6.2.7.3.2-1: Main behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	Make the UE (MCPTT User) request the	-	-	-	-
	establishment of an MCPTT private call,				
	manual commencement mode, and no floor				
	control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.			-	
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE request not offering a media-	>	SIP INVITE	1	Р
	level section for a media-floor control entity				
	requesting the establishment of an MCPTT				
	private call, manual commencement mode?				
3	The SS (MCPTT server) sends SIP 180	<	SIP 180 (Ringing)	-	-
3	(Ringing).	<	SIF 100 (Kinging)	-	-
4	The SS (MCPTT server) sends SIP 183	<	SIP 183 (Session Progress)	-	
т	(Session Progress).				_
5	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
Ŭ	SSRC identifier is assigned.				
6	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
Ū	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
7	Make the UE (MCPTT User) request to speak	-	-	-	-
	(e.g. pressing the PTT button)				
8	Check: Does the UE (MCPTT client) send a	>	Floor Request	1	F
	Floor Request message in the next 5 sec?				
9	Make the UE (MCPTT User) request	-	-	-	-
	termination of the MCPTT private call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
10	Check: Does the UE (MCPTT client) send a	>	SIP BYE	2	Р
	SIP BYE request?				
11	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
12	Wait for 5 sec to capture any not allowed	-	-	-	-
	behaviour.				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				

6.2.7.3.3

Specific message contents

Table 6.2.7.3.3-1: SIP INVITE (Step 2, Table 6.2.7.3.2-1)

Information Element	Value/remark	Comment	Reference	Condition
Answer-Mode				
answer-mode-value	"Manual"			
Content-Type				
Content-Length				
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.7.3.3-2			

Table 6.2.7.3.3-2: SDP Message in SIP INVITE (Table 6.2.7.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Table 6.2.7.3.3-3: SIP 200 (OK) (Steps 5, Table 6.2.7.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"application/sdp"					
Content-Length	length of message- body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.7.3.3-4					

Table 6.2.7.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.7.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
media description	Not included	m= line media = application	No Floor control requested			
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP				
media attribute	Not included	a= line attribute = fmtp				

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

Table 6.2.7.3.3-5: SIP 200 (OK) (Step 11, Table 6.2.7.3.2-1)

6.2.8 On-network / Private Call / On-demand / Manual Commencement Mode / Without Floor Control / Client Terminated (CT)

6.2.8.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service including authorization to
receive an MCPTT private call }
ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT private call, Ondemand Manual Commencement Mode without floor control }

then { UE (MCPTT Client) notifies the User for the incoming call responding to the Server with a SIP 183 (Ringing) message, and, after the User accepts the call sends to the Server a SIP 200 (OK) message, and, does not apply floor control }

(2)

6.2.8.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.2, 6.2.3.2.1, 6.2.6, 11.1.1.2.1.2, 11.1.1.2.1.3, 11.1.3.1.1.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.2]

When the MCPTT client receives an initial SDP offer for an MCPTT session, the MCPTT client shall process the SDP offer and shall compose an SDP answer according to 3GPP TS 24.229 [4].

When composing an SDP answer, the MCPTT client:

- 1) shall accept the MCPTT speech media stream in the SDP offer;
- 2) shall set the IP address of the MCPTT client for the accepted MCPTT speech media stream and, if included in the SDP offer, for the accepted media-floor control entity;
- NOTE: If the MCPTT client is behind a NAT the IP address and port included in the SDP answer can be a different IP address and port than the actual IP address and port of the MCPTT client depending on the NAT traversal method used by the SIP/IP Core.
- 3) shall include an "m=audio" media-level section for the accepted MCPTT speech media stream consisting of:
 - a) the port number for the media stream;
 - b) media-level attributes as specified in 3GPP TS 24.229 [4]; and
 - c) "i=" field set to "speech" according to 3GPP TS 24.229 [4]; and

[TS 24.379, clause 6.2.3.2.1]

The MCPTT client:

- 1) shall accept the SIP INVITE request and generate a SIP 180 (Ringing) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 180 (Ringing) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 180 (Ringing) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 180 (Ringing) response; and
- 5) shall send the SIP 180 (Ringing) response to the MCPTT server.

When sending the SIP 200 (OK) response to the incoming SIP INVITE request, the MCPTT client shall follow the procedures in subclause 6.2.3.1.1.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.1.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 4) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];
 - d) if authentication verification of the MIKEY-SAKKE I_MESSAGE fails, shall reject the SIP INVITE request with a SIP 488 (Not Acceptable Here) response as specified in IETF RFC 4567 [47], and include warning text set to "136 authentication of the MIKEY-SAKE I_MESSAGE failed" in a Warning header field as specified in subclause 4.4; and
 - e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.
- 5) may check if a Resource-Priority header field is included in the incoming SIP INVITE request and may perform further actions outside the scope of the present document to act upon an included Resource-Priority header field as specified in 3GPP TS 24.229 [4];
- 6) may display to the MCPTT user the MCPTT ID of the inviting MCPTT user;

•••

- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.1 if either of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode; or

[TS 24.379, clause 11.1.2.2]

Upon receipt of an initial SIP INVITE request for the private call with an SDP offer not including a media-level section for a media-floor control entity, the MCPTT client shall consider it as the request for private call without floor control and shall follow the procedures as specified in subclause 11.1.1.2.1.2 for on-demand session and subclause 11.1.1.2.2.2 for pre-established session.

[TS 24.379, clause 11.1.3.1.1.2]

Upon receiving a SIP BYE request for private call session, the MCPTT client shall follow the procedures as specified in subclause 6.2.6.

6.2.8.3 Test description

6.2.8.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.8.3.2

Test procedure sequence

St	Procedure		Message Sequence		Verdict
		U - S	Message		
-	EXCEPTION: The E-UTRA/EPC related actions which are related to the call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
1	The SS (MCPTT server) sends SIP INVITE to request establishment of an MCPTT private call, on-demand Manual Commencement Mode and no floor control.	<	SIP INVITE	-	-
2	Check: Does the UE (MCPTT client) send a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
3	Check: Does the UE (MCPTT client) notifies the User for the incoming call request?	-	-	1	Р
4	Make the UE (MCPTT User) accept the establishment of an MCPTT private call, on- demand Manual Commencement Mode. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
5	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
6	Make the UE (MCPTT User) request to speak (e.g. pressing the PTT button)	-	-	-	-
7	Check: Does the UE (MCPTT client) send a Floor Request message in the next 5 sec?	>	Floor Request	1	F
8	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
9	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
10	Wait for 5 sec to capture any not allowed behaviour.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection	-	-	-	-

6.2.8.3.3

Specific message contents

Table 6.2.8.3.3-1: SIP INVITE (Step 1, Table 6.2.8.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.2-1, conditions PRIVATE-CALL							
Information Element	Value/remark	Comment	Reference	Condition			
Answer-Mode							
answer-mode-value	"Manual"						
Content-Type							
Content-Length							
Message-body							
MIME-Content-Type	"application/sdp"						
SDP Message	As described in Table 6.2.8.3.3-2						

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1, condition PRIVATE-CALL				
Information Element	Value/remark	Comment	Reference	Condition
media description	Not included	m= line media = application	No Floor control requested	
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP		
media attribute	Not included	a= line attribute = fmtp		

Table 6.2.8.3.3-2: SDP Message in SIP INVITE (Table 6.2.8.3.3-1)

Table 6.2.8.3.3-3: SIP 200 (OK) (Step 3, Table 6.2.8.3.2-1)

Derivation Path: TS 36.579-1 [2],	table 5.5.2.17.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"application/sdp"			
Content-Length	length of message-			
	body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.8.3.3-4			

Table 6.2.8.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.8.3.3-3)

Derivation Path: TS 36.579-1 [2]	, table 5.5.3.1.1-1			
Information Element	Value/remark	Comment	Reference	Condition
media description	Not included	m= line media = application	No Floor control requested	
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP		
media attribute	Not included	a= line attribute = fmtp		

Table 6.2.8.3.3-5: SIP 200 (OK) (Step 9, Table 6.2.8.3.2-1)

	.2.17.1.1-1			
Information Element Va	alue/remark	Comment	Reference	Condition
Content-Type Not Inc	luded			

6.2.9 On-network / Private Call / Within a pre-established session / Automatic Commencement Mode / Without Floor Control / Client Originated (CO)

6.2.9.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to
initiate/cancel private calls with automatic commencement, and, having established a pre-established
session }

ensure that {

when { the MCPTT User requests the establishment of an MCPTT private call within the preestablished session, Automatic Commencement Mode, no Force of automatic commencement, without floor control }

then { UE (MCPTT Client) sends a SIP REFER request outside a dialog indicating Automatic Commencement Mode and not offering a media-level section for a media-floor control entity, and, after receiving a Connect message from the participating MCPTT function sends an Acknowledgment message indicating that the connection is accepted }
}

(2)

with { UE (MCPTT Client) having Private Call Within a pre-established session, Automatic Commencement Mode Private Call without Floor control } ensure that { when { the MCPTT User wants to release the ongoing MCPTT private call } then { UE (MCPTT Client) sends a REFER request with the value "BYE" in the URI in the Refer-To header field and after receiving a SIP 200 (OK) leaves the MCPTT session } } }

6.2.9.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.2.2, 11.1.1.2.2.1, 11.1.3.1.2.1, 6.2.5.2, TS 24.380 clauses 4.1.2.1, 4.1.2.2, 9.2.2.3.2, 9.2.2.4.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.1.2.2]

When the MCPTT user wants to make a private call without floor control using a pre-established session, the MCPTT client shall follow the procedures in subclause 11.1.1.2.2.1 with the exception that step 8 c) i) is re-written as:

- if the SDP parameters of the pre-established session contain a media-level section of a media-floor control entity or if end-to-end security is required for the private call, an application/sdp MIME body containing the SDP parameters of the pre-established session according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1. If the pre-established session was established with implicit floor control, then the application/sdp MIME body shall not contain the implicit floor request as specified in subclause 6.4.

[TS 24.379, clause 11.1.1.2.2.1]

Upon receiving a request from an MCPTT user to establish an MCPTT private call within a pre-established session the MCPTT client shall generate a SIP REFER request outside a dialog in accordance with the procedures specified in 3GPP TS 24.229 [4], IETF RFC 4488 [22] and IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27], with the clarifications given below.

•••

The MCPTT client populates the SIP REFER request as follows:

- 1) shall include the Request-URI set to the public service identity identifying the pre-established session on the MCPTT server serving the MCPTT user;
- 2) shall include the Refer-Sub header field with value "false" according to rules and procedures of IETF RFC 4488 [22];

- 3) shall include the Supported header field with value "norefersub" according to rules and procedures of IETF RFC 4488 [22];
- 4) shall include the option tag "multiple-refer" in the Require header field;
- 5) may include a P-Preferred-Identity header field in the SIP REFER request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 6) shall include a P-Preferred-Service header field set to the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), according to IETF RFC 6050 [9];
- 7) shall set the Refer-To header field of the SIP REFER request as specified in IETF RFC 3515 [25] with a Content-ID ("cid") Uniform Resource Locator (URL) as specified in IETF RFC 2392 [62] that points to an application/resource-lists MIME body as specified in IETF RFC 5366 [20], and with the Content-ID header field set to this "cid" URL.
- 8) shall include in the application/resource-lists MIME body a single <entry> element containing a "uri" attribute set to the MCPTT ID of the called user, extended with the following URI header fields:
- NOTE: Characters that are not formatted as ASCII characters are escaped in the following URI header fields

•••

- b) if force of automatic commencement mode at the invited MCPTT client is not requested by the MCPTT user and:
 - if automatic commencement mode at the invited MCPTT client is requested by the MCPTT user, shall include an Answer-Mode header field with the value "Automatic" according to rules and procedures of IETF RFC 5373 [18]; and

...

c) shall include in a hname "body" URI header field:

i) ...

- ii) an application/vnd.3gpp.mcptt-info MIME body with the <session-type> element set to "private"; and
- iii) an application/resources-list MIME body with an <entry> element containing a "uri" attribute set to the MCPTT ID of the called user;

•••

11) shall include a Target-Dialog header field as specified in IETF RFC 4538 [23] identifying the pre-established session.

The MCPTT client shall send the SIP REFER request towards the MCPTT server according to 3GPP TS 24.229 [4].

Upon receiving a final SIP 2xx response to the SIP REFER request the MCPTT client shall interact with media plane as specified in 3GPP TS 24.380 [5].

[TS 24.379, clause 11.1.3.1.2.1]

Upon receiving a request from an MCPTT user to release an MCPTT private call within a pre-established session, the MCPTT client shall follow the procedures as specified in subclause 6.2.5.2.

[TS 24.379, clause 6.2.5.2]

When the MCPTT client wants to release an MCPTT session using a pre-established session, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- shall generate an initial SIP REFER request outside a dialog in accordance with the procedures specified in 3GPP TS 24.229 [4], IETF RFC 4488 [22] and IETF RFC 3515 [25] as updated by IETF RFC 6665 [26] and IETF RFC 7647 [27];

- 3) shall set the Request-URI of the SIP REFER request to the public service identity identifying the pre-established session on the MCPTT server serving the MCPTT user;
- 4) shall include the Refer-Sub header field with value "false" according to rules and procedures of IETF RFC 4488 [22];
- 5) shall include the Supported header field with value "norefersub" according to rules and procedures of IETF RFC 4488 [22];
- 6) shall set the Refer-To header field of the SIP REFER request to the MCPTT session identity to release;
- 7) shall include the "method" SIP URI parameter with the value "BYE" in the URI in the Refer-To header field;
- 8) shall include a Target-Dialog header field as specified in IETF RFC 4538 [23] identifying the pre-established session; and
- 9) shall send the SIP REFER request according to 3GPP TS 24.229 [4].

Upon receiving a SIP 2xx response to the SIP REFER request, the MCPTT client shall interact with media plane as specified in 3GPP TS 24.380 [5].

[TS 24.380, clause 4.1.2.1]

A pre-established session can be used when initiating a pre-arranged group call, a chat group call or a private call. Similarly a pre-established session can be released for reuse after the termination of a pre-arranged group call, chat group call and private call.

The media plane control messages related to call setup over a pre-established session are sent over the channel used for media plane control. The media plane control messages related to the release of a call which was setup over a pre-established session, without terminating the pre-established session, are sent over the channel used for media plane control. The unicast channel for media plane control is over the MCPTT-4 reference point.

[TS 24.380, clause 4.1.2.2]

For a pre-arranged group call, when the originator initiates the call setup indicating the use of a pre-established session using SIP messages as specified in 3GPP TS 24.379 [2], the participating MCPTT function (which serves the originating MCPTT client) sends to the originating MCPTT client a Connect message after the controlling MCPTT function accepts the initiation of this call. After the reception of this Connect message the originating MCPTT client sends an Acknowledgment message by indicating that the connection is accepted or by indicating that the connection is not accepted. If the connection is accepted by the originating MCPTT client, the floor control for this call continues a specified in clause 6.

[TS 24.380, clause 9.2.2.3.2]

Upon reception of a Connect message:

- 1. if the MCPTT client accepts the incoming call the MCPTT client:
 - a. shall send the Acknowledgement message with Reason Code field set to 'Accepted';
 - b. shall use only the media streams of the pre-established session which are indicated as used in the associated call session Media Streams field, if the Connect contains a Media Streams field;
 - c. shall create an instance of the 'Floor participant state transition diagram for basic operation' as specified in subclause 6.2.10; and
 - d. shall enter the 'U: Pre-established session in use' state; or

[TS 24.380, clause 9.2.2.4.6]

Upon receiving a 2xx response to the sent SIP REFER request as described in 3GPP TS 24.379 [2] when the call is released, but the Pre-established Session is kept alive the MCPTT client:

- 1. shall enter the 'U: Pre-established session not in use' state; and
- 2. shall terminate the instance of 'Floor participant state transition diagram for basic operation' state machine as specified in subclause 6.2.4.

6.2.9.3 Test description

6.2.9.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.9.3.2

Test procedure sequence

Table 6.2.9.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Make the UE (MCPTT User) request the establishment of an MCPTT private call within a pre-established session, Automatic Commencement Mode, no Force of automatic commencement, without Floor Control.	-	-	-	-
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
2	Check: Does the UE (MCPTT client) send an initial SIP REFER message requesting the establishment of an MCPTT private call, within a pre-established session, Automatic Commencement Mode without Floor Control?	>	SIP REFER	1	Р
3	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
4	The SS (MCPTT server) sends a Connect message.	<	Connect	-	-
5	Check: Does the UE (MCPTT Client) send an Acknowledgement?	>	Acknowledgement	1	Р
6	Make the UE (MCPTT User) request release of the MCPTT private call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
7	Check: Does the UE (MCPTT client) send a SIP REFER request with the "method" SIP URI parameter set to value "BYE" in the URI in the Refer-To header field?	>	SIP REFER	2	Р
8	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
9	Wait for 5 sec to capture any not allowed behaviour.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-
NOTE	 The media plane control messages related to over the channel used for media plane control 		up/release over a pre-established	session ar	e sent

6.2.9.3.3 Specific message contents

Table 6.2.9.3.3-1: SIP REFER (Step 2, Table 6.2.9.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.2.12-1, condition PRIVATE-CALL				
Information Element	Value/remark	Comment	Reference	Condition
Answer-Mode				
answer-mode-value	"Auto"			
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.9.3.3-2			

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL				
Information Element	Value/remark	Comment	Reference	Condition
media description	Not included	m= line media = application	No Floor control requested	
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP		
media attribute	Not included	a= line attribute = fmtp		

Table 6.2.9.3.3-2: SDP Message in SIP REFER (Table 6.2.9.3.3-1)

Table 6.2.9.3.3-3: SIP 200 (OK) (Step 3, Table 6.2.9.3.2-1)

Derivation Path: TS 36.579-1 [2],	table 5.5.2.17.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"application/sdp"			
Content-Length	length of message- body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.9.3.3-4			

Table 6.2.9.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.9.3.3-3)

Derivation Path: TS 36.579-1 [2]	, table 5.5.3.1.2-1			
Information Element	Value/remark	Comment	Reference	Condition
media description	Not included	m= line media = application	No Floor control requested	
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP		
media attribute	Not included	a= line attribute = fmtp		

Table 6.2.9.3.3-5: SIP 200 (OK) (Step 8, Table 6.2.9.3.2-1)

	Condition
Content-Type Not Included	

Derivation Path: 36.579-1 [2], Table 5.5.6.12-1, condition	on PRIVATE-CALL		
Information Element	Value/remark	Comment	Condition
MCPTT Session Identity field			
Session Type	0000001	private	
Media Streams			
Control Channel	0	no floor control is used during the session	
Answer State field			
Answer State	1	Confirmed (using automatic commencement mode)	

Table 6.2.9.3.3-3: Connect (Step 4, Table 6.2.9.3.2-1)

Table 6.2.9.3.3-4: Acknowledgement (Step 5, Table 6.2.9.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.14-1.

Table 6.2.9.3.3-5: SIP REFER (Step 7, Table 6.2.9.3.2-1)

Derivation Path: 36.579-1 [2], Tat	le 5.5.2.12-1.			
Information Element	Value/remark	Comment	Reference	Condition
Refer-To				
method	"BYE"			
Content-Type	Not included			

6.2.10 On-network / Private Call / Within a pre-established session / Automatic Commencement Mode / Without Floor Control / Client Terminated (CT)

6.2.10.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private calls with automatic commencement, and, having established a pre-established session, Automatic Commencement Mode without End-to-end communication security and without floor control }

ensure that {

when { the UE (MCPTT Client) receives a media plane control Connect message as a part of request
for establishment of a client Terminated MCPTT private call, within the pre-established session }
 then { UE (MCPTT Client) sends a media plane control Acknowledgement message accepting the
 establishment of the media plane and thereby the establishment of the MCPTT private call }

(2)

with { UE (MCPTT Client) having Private Call Within a pre-established session }
ensure that {
 when { the MCPTT User (MCPTT Client) receives a media plane control Disconnect message for
 termination of the ongoing MCPTT private call }
 then { UE (MCPTT Client) accept the request by sending a media plane control Acknowledgement
 message and releases the call but keeps the pre-established session, and, does not terminate the
 pre-established session }
 }
}

6.2.10.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.380 clauses 4.1.2.1, 4.1.2.3, 9.2.2.3.2, 9.2.2.3.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.380, clause 4.1.2.1]

A pre-established session can be used when initiating a pre-arranged group call, a chat group call or a private call. Similarly a pre-established session can be released for reuse after the termination of a pre-arranged group call, chat group call and private call.

The media plane control messages related to call setup over a pre-established session are sent over the channel used for media plane control. The media plane control messages related to the release of a call which was setup over a pre-established session, without terminating the pre-established session, are sent over the channel used for media plane control. The unicast channel for media plane control is over the MCPTT-4 reference point.

[TS 24.380, clause 4.1.2.3]

When an MCPTT client leaves a call (as specified in 3GPP TS 24.379 [2]) which was setup over a pre-established session without releasing the pre-established session, this pre-established session can be used for another call.

[TS 24.380, clause 9.2.2.3.2]

Upon reception of a Connect message:

- 1. if the MCPTT client accepts the incoming call the MCPTT client:
 - a. shall send the Acknowledgement message with Reason Code field set to 'Accepted';
 - b. shall use only the media streams of the pre-established session which are indicated as used in the associated call session Media Streams field, if the Connect contains a Media Streams field;
 - c. shall create an instance of the 'Floor participant state transition diagram for basic operation' as specified in subclause 6.2.10; and
 - d. shall enter the 'U: Pre-established session in use' state; or

[TS 24.380, clause 9.2.2.3.4]

Upon reception of a Disconnect message the MCPTT client:

- 1. if the first bit in the subtype of the Disconnect message is set to '1' (acknowledgement is required), shall send the Acknowledgement message with the Reason Code set to 'Accepted'; and
- 2. shall remain in 'U: Pre-established session not in use' state.

6.2.10.3 Test description

6.2.10.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.10.3.2

Test procedure sequence

Table 6.2.10.3.2-1: Main behaviour

64	Drecedure	Magaga Saguanaa T		Vardiat	
St	Procedure	U - S	Message Sequence	TP	Verdict
_	EXCEPTION: The E-UTRA/EPC related	0-3	Message		
-	actions which are related to the call	-	-	-	-
	establishment are described in TS 36.579-				
	1 [2], subclause 5.4.4 'Generic Test Procedure				
	for MCPTT CT communication in E-UTRA'.				
	The test sequence below shows only the				
	MCPTT relevant messages exchanged.				
1	The SS (MCPTT server) sends a Connect	<	Connect	-	-
	message.				
	Note: The session has been established by the				
	UE (MCPTT Client) and the request is for				
	automatic answer mode therefore no INVITE is				
	used for establishing the call as specified in TS				
	24.380 [10], clause 9.3.2.3.3.				
2	Check: Does the UE (MCPTT Client) send an	>	Acknowledgement	1	Р
	Acknowledgement?				
3	Check: Does the UE (MCPTT client) notify the	-	-	1	Р
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI				
4	Wait for 5 sec.	-	-	-	-
5	The SS (MCPTT server) sends a Disconnect	<	Disconnect	-	-
	message to release the call.			-	<u> </u>
6	Check: Does the UE (MCPTT Client) send an	>	Acknowledgement	2	Р
	Acknowledgement accepting the release of the				
7	call?			2	P
	Check: Does the UE (MCPTT client) notify the user that the call has been terminated?	-	-	2	P
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI				
8	Wait for 5 sec to capture any not allowed		-	-	-
0	behaviour.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA	-			<u> </u>
	connection.				
9	Make the UE (MCPTT User) request the	-	-	-	-
Ŭ	establishment of an MCPTT private call within				
	a pre-established session, Automatic				
	Commencement Mode without Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
	NOTE: This is to verify that although the Client				
	has released the call it has not terminated the				
	pre-established session.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
10	messages exchanged. Check: Does the UE (MCPTT client) send an	>	SIP REFER	2	P
	initial SIP REFER message requesting the	>		2	
	establishment of an MCPTT private call, within				
	a pre-established session, Automatic				
	Commencement Mode, no Force of automatic				
	commencement, without Floor Control?				
11	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	- 1
12	Check: Does the UE (MCPTT client) notify the	-	- , , , ,	-	-
	user that the call has been successfully				
	established?				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
13	Wait for 5 sec.	-	-	-	-

14	Make the UE (MCPTT User) request release of	-	-	-	-
	the MCPTT private call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
15	The UE (MCPTT client) send a SIP REFER	>	SIP REFER	-	-
	request with the value "BYE" in the URI in the				
	Refer-To header field.				
16	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection				
NOTE	NOTE: The media plane control messages related to call setup/release over a pre-established session are sent				
	over the channel used for media plane contr	ol.			

6.2.10.3.3

Specific message contents

Table 6.2.10.3.3-1: Connect (Step 1, Table 6.2.10.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.12-1, conditi	Derivation Path: 36.579-1 [2], Table 5.5.6.12-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Condition				
MCPTT Session Identity field							
Session Type	0000001	private					
Media Streams							
Control Channel	0	no floor control is used during the session					
Answer State field							
Answer State	1	Confirmed (using automatic commencement mode)					

Table 6.2.10.3.3-2: Acknowledgement (Steps 2, 6, Table 6.2.10.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.14-1.

Table 6.2.10.3.3-3: Disconnect (Step 5, Table 6.2.10.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.13-1.			
Information Element	Value/remark	Comment	Condition
MCPTT Session Identity field			
Session Type	0000001	private	

Table 6.2.10.3.3-4: SIP REFER (Step 10, Table 6.2.10.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.2.12-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Answer-Mode						
answer-mode-value	"Auto"					
Content-Type	"multipart/mixed;bound ary="any allowed value					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.10.3.3-5					

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL							
Information Element	Value/remark	Comment	Reference	Condition			
media description	Not included	m= line media = application	No Floor control requested				
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP					
media attribute	Not included	a= line attribute = fmtp					

Table 6.2.10.3.3-5: SDP Message in SIP REFER (Table 6.2.10.3.3-4)

Table 6.2.10.3.3-6: SIP 200 (OK) (Step 11, Table 6.2.10.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"application/sdp"				
Content-Length	length of message- body				
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.10.3.3-7				

Table 6.2.10.3.3-7: SDP Message in SIP 200 (OK) (Table 6.2.10.3.3-6)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1							
Information Element	Value/remark	Comment	Reference	Condition			
media attribute	Not included	a= line attribute = fmtp No Floor control requested					

Table 6.2.10.3.3-8: SIP 200 (OK) (Step 16, Table 6.2.10.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

Table 6.2.10.3.3-9: SIP REFER (Step 15, Table 6.2.10.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.2.12-1.					
Information Element	Value/remark	Comment	Reference	Condition	
Refer-To					
method	"BYE"				
Content-Type	Not included				

6.2.11 On-network / Private Call / Within a pre-established session / Manual Commencement Mode / Without Floor Control / Release of the Call and the pre-established session / Client Terminated (CT)

6.2.11.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to
receive private calls with manual commencement, and, having established a pre-established session,
without End-to-end communication security and without floor control }
ensure that {

when { the UE (MCPTT Client) receives a SIP re-INVITE message as a part of request for
establishment of a client Terminated MCPTT private call, within the pre-established session, Manual
Commencement Mode }

then { UE (MCPTT Client) notifies the User for the incoming call responding to the Server with a
SIP 183 (Ringing) message, and, after the User accepts the call sends to the Server a SIP 200 (OK)
message }

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private calls with automatic commencement, and, having established a pre-established session, Automatic Commencement Mode without End-to-end communication security and without floor control, and, the User having accepted a request for the establishment of a client Terminated MCPTT private call within the pre-established session }

ensure that {

when { the UE (MCPTT Client) receives a media plane control Connect message as a part of request
for establishment of a client Terminated MCPTT private call, within the pre-established session }
 then { UE (MCPTT Client) sends a media plane control Acknowledgement message accepting the
 establishment of the media plane and thereby the establishment of the MCPTT private call }

(3)

with { UE (MCPTT Client) having Private Call Within a pre-established session }
ensure that {

when { the MCPTT User (MCPTT Client) is informed for the termination of the ongoing MCPTT private
call by the Server sending a SIP BYE message }

then { UE (MCPTT Client) accepts the request and after sending a SIP 200 (OK) response terminates the call and the pre-established MCPTT session }

6.2.11.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 6.2.3.1.1, 6.2.3.2.1, 6.2.6, 11.1.1.2.1.2, 11.1.1.2.2.2, 11.1.2.2, TS 24.380 clauses 4.1.2.1, 4.1.2.3, 9.2.2.3.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 6.2.3.1.1]

- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;
- shall include the Session-Expires header field in the SIP 200 (OK) response and start the SIP session timer according to IETF RFC 4028 [7]. The "refresher" parameter in the Session-Expires header field shall be set to "uas";
- shall, if the incoming SIP INVITE request contains a Replaces header field, include in the SDP answer in the SIP 200 (OK) response to the SDP offer the parameters used for the pre-established session identified by the contents of the Replaces header field;

- 7) shall, if the incoming SIP INVITE request does not contain a Replaces header field, include an SDP answer in the SIP 200 (OK) response to the SDP offer in the incoming SIP INVITE request according to 3GPP TS 24.229 [4] with the clarifications given in subclause 6.2.2;
- NOTE: In the case of a new emergency call where the terminating client is using a pre-established session, the SIP INVITE request containing a Replaces header is used to replace the pre-established session.
- 8) shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];
- 9) shall, if the incoming SIP INVITE request contains a Replaces header field, release the pre-established session identified by the contents of the Replaces header field; and

10) shall interact with the media plane as specified in 3GPP TS 24.380 [5] subclause 6.2.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.2.3.2.1]

The MCPTT client:

- shall accept the SIP INVITE request and generate a SIP 180 (Ringing) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 180 (Ringing) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 180 (Ringing) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 180 (Ringing) response; and
- 5) shall send the SIP 180 (Ringing) response to the MCPTT server.

When sending the SIP 200 (OK) response to the incoming SIP INVITE request, the MCPTT client shall follow the procedures in subclause 6.2.3.1.1.

When NAT traversal is supported by the MCPTT client and when the MCPTT client is behind a NAT, generation of SIP responses is done as specified in this subclause and as specified in IETF RFC 5626 [15].

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.1.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 4) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];

- d) if authentication verification of the MIKEY-SAKKE I_MESSAGE fails, shall reject the SIP INVITE request with a SIP 488 (Not Acceptable Here) response as specified in IETF RFC 4567 [47], and include warning text set to "136 authentication of the MIKEY-SAKE I_MESSAGE failed" in a Warning header field as specified in subclause 4.4; and
- e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.

•••

- 8) shall perform the manual commencement procedures specified in subclause 6.2.3.2.1 if either of the following conditions are met:
 - a) SIP INVITE request contains an Answer-Mode header field with the value "Manual" and the MCPTT service setting at the invited MCPTT client for answering the call is set to manual commencement mode; or

[TS 24.379, clause 11.1.1.2.2.2]

The MCPTT client shall follow the procedures for termination of multimedia sessions as specified in subclause 11.1.1.2.1.2 with the following clarifications:

•••

2) if the MCPTT client is targeted for a new normal priority private call, the MCPTT client receives a SIP re-INVITE request rather than a SIP INVITE request.

[TS 24.379, clause 11.1.2.2]

Upon receipt of an initial SIP INVITE request for the private call with an SDP offer not including a media-level section for a media-floor control entity, the MCPTT client shall consider it as the request for private call without floor control and shall follow the procedures as specified in subclause 11.1.1.2.1.2 for on-demand session and subclause 11.1.1.2.2.2 for pre-established session.

[TS 24.380, clause 4.1.2.1]

A pre-established session can be used when initiating a pre-arranged group call, a chat group call or a private call. Similarly a pre-established session can be released for reuse after the termination of a pre-arranged group call, chat group call and private call.

The media plane control messages related to call setup over a pre-established session are sent over the channel used for media plane control. The media plane control messages related to the release of a call which was setup over a pre-established session, without terminating the pre-established session, are sent over the channel used for media plane control. The unicast channel for media plane control is over the MCPTT-4 reference point.

[TS 24.380, clause 4.1.2.3]

A call setup over a pre-established session can also be released by using the specifications in 3GPP TS 24.379 [2] (without the use of Disconnect message) as a result the pre-established session, which has been used for this call, is also released.

[TS 24.380, clause 9.2.2.3.2]

Upon reception of a Connect message:

- 1. if the MCPTT client accepts the incoming call the MCPTT client:
 - a. shall send the Acknowledgement message with Reason Code field set to 'Accepted';
 - b. shall use only the media streams of the pre-established session which are indicated as used in the associated call session Media Streams field, if the Connect contains a Media Streams field;

- c. shall create an instance of the 'Floor participant state transition diagram for basic operation' as specified in subclause 6.2.11; and
- d. shall enter the 'U: Pre-established session in use' state; or
- 6.2.11.3 Test description
- 6.2.11.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT pre-established session establishment CO as specified in TS 36.579-1 [2], subclause 5.3.3.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.11.3.2 Test procedure sequence

Table 6.2.11.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
	Tocedure	U - S	Message Sequence		* GI UICL
-	EXCEPTION: The E-UTRA/EPC related actions which are related to the call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant mesonance evolution		-	-	-
1	MCPTT relevant messages exchanged. The SS (MCPTT server) sends SIP re-INVITE to request establishment of an MCPTT private call using the pre-established in the preamble session, Manual Commencement Mode and no floor control. Note: The session has been established by the UE (MCPTT Client) and the request is for manual answer mode therefore INVITE is used for establishing the call as specified in TS 24.380 [10], clause 9.3.2.3.3.	<	SIP re-INVITE	-	-
2	Check: Does the UE (MCPTT client) send a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	1	Р
3	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	1	Р
4	The SS (MCPTT server) sends a Connect message.	<	Connect	-	-
5	Check: Does the UE (MCPTT Client) send an Acknowledge?	>	Acknowledgement	1	Р
6	Check: Does the UE (MCPTT client) notify the user that the call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI	-	-	1	P
7	Wait for 5 sec.	-	-	-	-
8	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
9	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
10	Check: Does the UE (MCPTT client) notify the user that the call has been terminated? NOTE: This is expected to be done via a suitable implementation dependent MMI	-	-	2	Р
11	Wait for 5 sec to capture any not allowed behaviour.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection	-	-	-	-
12	Make the UE (MCPTT User) request the establishment of an MCPTT private call, manual commencement mode, and no floor control. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
13	Check: Does the UE (MCPTT client) send an initial SIP INVITE request not offering a media- level section for a media-floor control entity requesting the establishment of an MCPTT private call, manual commencement mode? Note: If the session was not terminated then the UE (MCPTT client) will send a REFER.	>	SIP INVITE	2	Ρ
14	The SS (MCPTT server) sends SIP 180 (Ringing).	<	SIP 180 (Ringing)	-	-

15	The SS (MCPTT server) sends SIP 183	<	SIP 183 (Session Progress)	-	-		
	(Session Progress).						
16	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-		
	SSRC identifier is assigned.						
17	Make the UE (MCPTT User) request	-	-	-	-		
	termination of the MCPTT private call.						
	NOTE: This is expected to be done via a						
	suitable implementation dependent MMI.						
18	The UE (MCPTT client) sends a SIP BYE	>	SIP BYE	-	-		
	request.						
19	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-		
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-		
	connection						
NOT	NOTE 1: The media plane control messages related to call setup/release over a pre-established session are sent						
	over the channel used for media plane contr	ol.					

6.2.11.3.3

Specific message contents

Table 6.2.11.3.3-1: SIP re-INVITE (Step 1, Table 6.2.11.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, conditions PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Answer-Mode						
answer-mode-value	"Manual"					
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.11.3.3-2					

Table 6.2.11.3.3-2: SDP Message in SIP re-INVITE (Table 6.2.11.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1, condition PRIVATE-CALL								
Information Element Value/remark Comment Reference Condition								
media description	Not included	m= line media = application	No Floor control requested					
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP						
media attribute	Not included	a= line attribute = fmtp						

Table 6.2.11.3.3-3: SIP 200 (OK) (Steps 3, 16, Table 6.2.11.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"application/sdp"				
Content-Length	length of message- body				
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.11.3.3-4				

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1							
Information Element	Value/remark	Comment	Reference	Condition			
media description	Not included	m= line media = application	No Floor control requested				
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP					
media attribute	Not included	a= line attribute = fmtp					

Table 6.2.11.3.3-4: SDP Message in SIP 200 (OK) (Table 6.2.11.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

Table 6.2.11.3.3-6: Connect (Step 4, Table 6.2.11.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.12-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Condition			
MCPTT Session Identity field						
Session Type	0000001	private				
Media Streams						
Control Channel	0	no floor control is used during the session				
Answer State field						
Answer State	1	Confirmed (using automatic commencement mode)				

Table 6.2.11.3.3-7: Acknowledgement (Step 5, Table 6.2.11.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.14-1.

Table 6.2.11.3.3-8: SIP INVITE (Step 13, Table 6.2.11.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, conditions PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Answer-Mode						
answer-mode-value	"Manual"					
Content-Type						
Content-Length						
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.11.3.3-9					

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL							
Information Element	Value/remark	Comment	Reference	Condition			
media description	Not included	m= line media = application	No Floor control requested				
Connection Data	Not included	c= line Included if the media plane control channel uses a different IP address than other media described in the SDP					
media attribute	Not included	a= line attribute = fmtp					

Table 6.2.11.3.3-9: SDP Message in SIP INVITE (Table 6.2.11.3.3-8)

6.2.12 On-network / Private Call / Private Call Call-Back Request / Private Call Call-Back Cancel Request / Client Originated (CO) / Private call call-back fulfilment

6.2.12.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back } ensure that {

when { the MCPTT User requests sending a private call call-back request to a targeted user }
 then { UE (MCPTT Client) sends a SIP MESSAGE message requesting the call-back and including the
MCPTT ID of the targeted MCPTT user, and, upon receiving a SIP MESSAGE request for private call
call-back response for terminating client with an <mcptt-calling-user-id> element in the
 application/vnd.3gpp.mcptt-info+xml MIME body set to an MCPTT-ID matching a "PCCB requesting client
 entry" stored on the client then the MCPTT client sets the private call call-back requesting client
 state to "PCCB-I3: confirmed" }
 }
}

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back, and, the MCPTT client private call call-back requesting client state equal to "PCCB-I3: confirmed" } ensure that {

when { the MCPTT User wants to cancel the private call call-back }

then { UE (MCPTT Client) sends a SIP MESSAGE message cancelling the call-back and including the
MCPTT ID of the targeted MCPTT user, and, upon receiving a SIP MESSAGE request for private call
call-back cancel response for terminating client with an <mcptt-calling-user-id> element in the
application/vnd.3gpp.mcptt-info+xml MIME body set to an MCPTT-ID matching a "PCCB requesting client
entry" stored on the client then the MCPTT client sets the private call call-back requesting client
state to "PCCB-I1: no-call-back" }

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back, and, the MCPTT client private call call-back requesting client state equal to "PCCB-I3: confirmed" } ensure that {

when { the UE (MCPTT Client) receives a request for private call establishment from the target for a call-back MCPTT User (MCPTT-ID matching a "PCCB requesting client entry") }

then { UE (MCPTT Client) upon sending a SIP 200 (OK) response to the request for establishment
of a private call, sets the private call call-back requesting client state to "PCCB-II: no-callback" and shall delete the "PCCB requesting client entry" associated with the target MCPTT user }
}

6.2.12.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.5.2.1, 11.1.5.2.3. Unless otherwise stated these are Rel-14 requirements.

[TS 24.379, clause 11.1.5.2.1]

Upon receiving a request from the requesting MCPTT user to send a private call call-back request or to send a private call call-back cancel request, that has been authorised successfully by the requesting MCPTT client, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33] with the clarifications given below.

The MCPTT client:

- 1) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP MESSAGE request;
- shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 3) may include a P-Preferred-Identity header field in the SIP MESSAGE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 4) shall set the Request-URI to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- 5) shall include in an application/resource-lists+xml MIME body, the MCPTT ID of the targeted MCPTT user, according to rules and procedures of IETF RFC 5366 [20];
- 6) shall include an application/vnd.3gpp.mcptt-info+xml MIME body as specified in clause F.1 with the <mcpttinfo> element containing the <mcptt-Params> element with the <anyExt> element containing:
 - a) if the request is a private call call-back request:
 - i) the <request-type> set to a value of "private-call-call-back-request>;
 - ii) the <urgency-ind> set to a value of "low", "normal" or "high" to indicate the urgency of the call-back request; and
 - iii) the <time-of-request> set to the date and time of the request using the format specified in clause F.1.3; and
 - b) if the request is a private call call-back cancel request, the <request-type> set to a value of "private-call-call-back-cancel-request";
- 7) shall store a "PCCB requesting client entry" containing the MCPTT ID of the targeted user and:
 - a) if the request is a private call call-back request, shall set the private call call-back requesting client state to "PCCB-I2: confirm-pending"; and
 - b) if the request is a private call call-back cancel request, shall set the private call call-back requesting client state to "PCCB-I4: cancel-pending"; and
- 8) shall send the SIP MESSAGE request according to rules and procedures of 3GPP TS 24.229 [4].

Upon receiving a "SIP MESSAGE request for private call call-back response for terminating client" with an <mcpttcalling-user-id> element in the application/vnd.3gpp.mcptt-info+xml MIME body set to an MCPTT-ID matching a "PCCB requesting client entry" stored on the client, if the private call call-back requesting client state is set to "PCCB-I2: confirm-pending", then the MCPTT client shall set the private call call-back requesting client state to "PCCB-I3: confirmed".

Upon receiving a "SIP MESSAGE request for private call call-back cancel response for terminating client" with an <mcptt-calling-user-id> element in the application/vnd.3gpp.mcptt-info+xml MIME body set to the an MCPTT-ID

^{••••}

matching a "PCCB requesting client entry" entry stored on the client, if the private call call-back requesting client state is set to "PCCB-I4: cancel-pending", then the MCPTT client set the private call call-back requesting client state to "PCCB-I1: no-call-back" and shall delete the "PCCB requesting client entry" associated with the target MCPTT user.

[TS 24.379, clause 11.1.5.2.3]

When the target MCPTT user wants to make a private call call-back, the target MCPTT client shall initiate a private call in manual commencement mode towards the requesting MCPTT client using the MCPTT ID of the requesting MCPTT user as found in the "PCCB target client entry" stored on the UE, by following the procedures in:

•••

2) subclause 11.1.2.2 for private call without floor control;

Upon sending a SIP 200 (OK) response to the request for establishment of a private call as specified in subclause 11.1.1.2.1.1, subclause 11.1.1.2.2.1 or subclause 11.1.2.2, if the "PCCB requesting client entry" of the target MCPTT user contains a private call call-back requesting client state set to "PCCB-I3: confirmed", then the requesting MCPTT client shall set the private call call-back requesting client state to "PCCB-I1: no-call-back" and shall delete the "PCCB requesting client entry" associated with the target MCPTT user.

6.2.12.3 Test description

6.2.12.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
 - The MCPTT User is authorized to request private call call-back: the <allow-request-private-call-call-back> element of the <ruleset> element is present in the MCPTT user profile document and is set to "true"
 - The MCPTT User is authorized to cancel private call call-back: the <allow-cancel-private-call-call-back> element of the <ruleset> element is present in the MCPTT user profile document and is set to "true"
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.12.3.2 Test procedure sequence

Table 6.2.12.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
0.	rioodare	U - S	Message		Veralet
1	Make the UE (MCPTT User) request sending a	-	-	-	-
	private call call-back request.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
2	Check: Does the UE (MCPTT client) send a	>	SIP MESSAGE	1	Р
	SIP MESSAGE message requesting a private				
	call call-back providing the MCPTT ID of the				
2	targeted MCPTT user?				
3	The SS (MCPTT server) sends SIP MESSAGE	<	SIP MESSAGE	-	-
4	accepting the request. Make the UE (MCPTT User) request				
4		-	-	-	-
1	cancelling of the private call call-back request (based on the MCPTT ID of the targeted				
1	MCPTT user).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
5	Check: Does the UE (MCPTT client) send a	>	SIP MESSAGE	2	P
	SIP MESSAGE message cancelling the private	>		2	
	call call-back providing the MCPTT ID of the				
	targeted MCPTT user?				
6	The SS (MCPTT server) sends SIP MESSAGE	<	SIP MESSAGE	-	-
0	accepting the cancellation.			_	
7	Make the UE (MCPTT User) request		-	_	-
'	cancelling of the private call call-back request				
	(based on the MCPTT ID of the same targeted				
	MCPTT user as in step 5).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
	Depending on the implementation the User				
	may not be provided with an entry for pending				
	call-back.				
8	Check: Does, in the next 5 sec, the UE	>	SIP MESSAGE	2	F
	(MCPTT client) send a SIP MESSAGE				
	message cancelling the private call call-back				
	providing the MCPTT ID of the targeted				
	MCPTT user?				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
9	Make the UE (MCPTT User) request sending a	-	-	-	-
1	private call call-back request.				
1	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				ļ
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
1	are related to the MCPTT call establishment				
1	are described in TS 36.579-1 [2], subclause				
1	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
10	messages exchanged.				P
10	Check: Does the UE (MCPTT client) send a	>	SIP MESSAGE	1	
1	SIP MESSAGE message requesting a private				
1	call call-back providing the MCPTT ID of the				
11	targeted MCPTT user? The SS (MCPTT server) sends SIP	-	SIP MESSAGE		
	MESSAGE. The SS (MCPTT server) sends	<	SIF WESSAGE	-	-
1	SIP MESSAGE accepting the request.				
	EXCEPTION: SS releases the E-UTRA				
-	connection.	-	-	-	-
L		I			1

12	Wait for 5 sec (randomly chosen value to simulate realistic behaviour at the targeted side).	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC related actions which are related to the call establishment are described in TS 36.579- 1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
13	The SS (MCPTT server) sends SIP INVITE to request establishment of an MCPTT private call (Private call call-back fulfilment), on-demand Manual Commencement Mode and no floor control.	<	SIP INVITE	-	-
14	Check: Does the UE (MCPTT client) send a SIP 180 (Ringing)?	>	SIP 180 (Ringing)	3	Р
15	Make the UE (MCPTT User) accept the establishment of an MCPTT private call, on- demand Manual Commencement Mode. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
16	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	3	Р
17	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
18	The UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	-	-
19	Make the UE (MCPTT User) request cancelling of the private call call-back request (based on the MCPTT ID of the same targeted MCPTT user as in step 10). NOTE: This is expected to be done via a suitable implementation dependent MMI. Depending on the implementation the User may not be provided with an entry for pending call-back.	-	-	-	-
20	Check: Does, in the next 5 sec, the UE (MCPTT client) send a SIP MESSAGE message cancelling the private call call-back providing the MCPTT ID of the targeted MCPTT user?	>	SIP MESSAGE	3	F
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.12.3.3

Specific message contents

Table 6.2.12.3.3-1: SIP MESSAGE (Steps 2, 10, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.12.3.3-2					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included				

Derivation Path: TS 36.579-1 [2],	,		Deference	Condition
Information Element	Value/remark	Comment	Reference	Condition
mcpttinfo				
mcptt-Params				
anyExt		The anyExt field may contain other values - these need not be checked		
request-type	"private-call-call-back- request"			
urgency-ind	"low", "normal" or "high"			
time-of-request	"YYYY-MM- DDThh:mm:ss"	set to the date and time of the request		

Table 6.2.12.3.3-2: MCPTT-Info in SIP MESSAGE (Table 6.2.12.3.3-1)

Table 6.2.12.3.3-3: SIP MESSAGE (Steps 3, 11, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.2-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"multipart/mixed"				
Content-Length	length of message body				
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.2.12.3.3-4				
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included			
MIME-Content-Type	"application/resource- lists"				
Resource-lists	As described in Table 6.2.12.3.3-5				

Table 6.2.12.3.3-4: MCPTT-Info in SIP MESSAGE (Table 6.2.12.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
anyExt		The anyExt field may contain other values - these need not be checked			
response-type	"private-call-call-back- response"				

Information Element	Value/remark	Comment	Reference	Condition
resource-lists				
list				
entry	the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/ vnd.3gpp.mcptt- info+xml MIME body of the received SIP MESSAGE request</mcptt-calling-user-id>			

Table 6.2.12.3.3-5: Resource-lists in SIP MESSAGE (Table 6.2.12.3.3-3)

Table 6.2.12.3.3-6: SIP MESSAGE (Step 5, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"multipart/mixed"				
Content-Length	length of message body				
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.2.12.3.3-7				
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included			

Table 6.2.12.3.3-7: MCPTT-Info in SIP MESSAGE (Table 6.2.12.3.3-6)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
anyExt		The anyExt field may contain other values - these need not be checked			
request-type	"private-call-call-back- cancel-request"				

Derivation Path: TS 36.579-1 [2		PRIVATE-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed"			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 6.2.12.3.3-9			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included		
MIME-Content-Type	"application/resource- lists"			
Resource-lists	As described in Table 6.2.12.3.3-10			

Table 6.2.12.3.3-9: MCPTT-Info in SIP MESSAGE (Table 6.2.12.3.3-8)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
anyExt		The anyExt field may contain other values - these need not be checked			
response-type	"private-call-call-back- cancel-response"				

Table 6.2.12.3.3-10: Resource-lists in SIP MESSAGE (Table 6.2.12.3.3-8)

Derivation Path: TS 36.579-1 [2], table 5.5.3.3.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
resource-lists					
list					
entry	the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/ vnd.3gpp.mcptt- info+xml MIME body of the received SIP MESSAGE request</mcptt-calling-user-id>				

Table 6.2.12.3.3-11: SIP INVITE (Step 13, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.2-1, conditions PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Answer-Mode					
answer-mode-value	"Manual"				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.12.3.3-12				

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
media attribute	Not included	a= line attribute = fmtp No Floor control requested			

Table 6.2.12.3.3-12: SDP Message in SIP INVITE (Table 6.2.12.3.3-11)

Table 6.2.12.3.3-13: SIP 200 (OK) (Step 16, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"application/sdp"					
Content-Length	length of message- body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.12.3.3-14					

Table 6.2.12.3.3-14: SDP Message in SIP 200 (OK) (Table 6.2.12.3.3-13)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute	Not included	a= line attribute = fmtp No Floor control requested				

Table 6.2.12.3.3-15: SIP 200 (OK) (Step 18, Table 6.2.12.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

6.2.13 On-network / Private Call / Private Call Call-Back Request / Private Call Call-Back Cancel Request / Client Terminated (CT) / Private call call-back fulfilment

6.2.13.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back } ensure that {

when { the UE (MCPTT Client) receives a SIP MESSAGE message request for a private call call-back request for terminating client }

then { UE (MCPTT Client) shall store a "PCCB target client entry" and notify the user of the stored information related to the private call call back request, and, send a SIP MESSAGE message response acknowledging the request, including in an application/resource-lists+xml MIME body, the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/ vnd.3gpp.mcptt-info+xml MIME body of the received SIP MESSAGE request }

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back, and, the MCPTT client having responded positively to a private call call-back request and set the private call call-back receiving client state set to "PCCB-R2: private-call-pending" } ensure that {

when { the UE (MCPTT Client) receives a SIP MESSAGE message request for private call call-back
cancel request for terminating client where the "PCCB target client entry" associated with the MCPTT
ID in the <mcptt-calling-user-id> element in the application/vnd.3gpp.mcptt-info+xml MIME body
contains a private call call-back requesting client state set to "PCCB-R2: private-call-pending" }

then { UE (MCPTT Client) the MCPTT client shall set the private call call-back requesting client
state to "PCCB-R1: no-call-back" and shall delete the "PCCB target client entry" associated with the
requesting MCPTT user and sends a SIP MESSAGE message acknowledging the cancelling of the call-back
}

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service and authorized to initiate and receive private calls with manual commencement and to request and cancel private call call-back, and, the MCPTT client having responded positively to a private call call-back request and set the private call call-back receiving client state set to "PCCB-R2: private-call-pending" } ensure that {

when { the target MCPTT user wants to make a private call call-back using the MCPTT ID of the requesting MCPTT user as found in the "PCCB target client entry" stored on the UE }

then { UE (MCPTT Client), the target MCPTT client, shall initiate a private call in manual commencement mode towards the requesting MCPTT client, and, upon receiving a SIP 2xx response to the SIP INVITE request for establishment of the private call shall set the private call call-back target client state to "PCCB-R1: no-call-back" and shall delete the "PCCB target client entry" associated with the requesting MCPTT user } }

6.2.13.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.5.2.2, 11.1.5.2.3. Unless otherwise stated these are Rel-14 requirements.

[TS 24.379, clause 11.1.5.2.2]

Upon receiving a "SIP MESSAGE request for private call call-back request for terminating client", the MCPTT client:

- 1) shall store a "PCCB target client entry" entry with:
 - a) the MCPTT ID set to the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/vnd.3gpp.mcptt-info+xml MIME body;
 - b) the private call call-back receiving client state set to "PCCB-I2: private-call-pending";
 - c) the urgency set to the value of the <urgency-ind> element in the application/vnd.3gpp.mcptt-info+xml MIME body; and
 - d) the time-of-request set to the value of the <time-of-request> element in the application/vnd.3gpp.mcpttinfo+xml MIME body; and
- 2) shall notify the user of the stored information related to the private call call back request.

Upon receiving a "SIP MESSAGE request for private call call-back cancel request for terminating client" where the "PCCB target client entry" associated with the MCPTT ID in the <mcptt-calling-user-id> element in the application/vnd.3gpp.mcptt-info+xml MIME body contains a private call call-back requesting client state set to "PCCB-R2: private-call-pending", the MCPTT client shall set the private call call-back requesting client state to "PCCB-R1: no-call-back" and shall delete the "PCCB target client entry" associated with the requesting MCPTT user.

The MCPTT client:

- 1) shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33]:
- 2) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP MESSAGE request;

- 3) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6] in the SIP MESSAGE request
- 4) may include a P-Preferred-Identity header field in the SIP MESSAGE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- 5) shall set the Request-URI in the SIP MESSAGE request to the public service identity identifying the participating MCPTT function serving the MCPTT user;
- 6) shall include in an application/resource-lists+xml MIME body, the MCPTT ID contained in the <mcptt-callinguser-id> element in the application/ vnd.3gpp.mcptt-info+xml MIME body of the received SIP MESSAGE request;
- 7) shall include an application/vnd.3gpp.mcptt-info+xml MIME body as specified in clause F.1 with the <mcpttinfo> element containing the <mcptt-Params> element with the <anyExt> element containing:
 - a) if the received SIP MESSAGE was a "SIP MESSAGE request for private call call-back request for terminating MCPTT client", the <response-type> element set to a value of "private-call-call-back-response"; and
 - b) if the received SIP MESSAGE was a "SIP MESSAGE request for private call call-back cancel request for terminating MCPTT client", the <response-type> element set to a value of "private-call-call-back-cancelresponse"; and
- 8) shall send the SIP MESSAGE request according to rules and procedures of 3GPP TS 24.229 [4].

[TS 24.379, clause 11.1.5.2.3]

When the target MCPTT user wants to make a private call call-back, the target MCPTT client shall initiate a private call in manual commencement mode towards the requesting MCPTT client using the MCPTT ID of the requesting MCPTT user as found in the "PCCB target client entry" stored on the UE, by following the procedures in:

•••

2) subclause 11.1.2.2 for private call without floor control;

•••

Upon receiving a SIP 2xx response to the SIP INVITE request or SIP REFER request for establishment of the private call, as specified in subclause 11.1.1.2.1.1, subclause 11.1.1.2.2.1 or subclause 11.1.2.2, if the "PCCB target client entry" of the requesting MCPTT user contains a private call call-back target client state set to "PCCB-R2: private-call-pending", then the target MCPTT client shall set the private call call-back target client state to "PCCB-R1: no-call-back" and shall delete the "PCCB target client entry" associated with the requesting MCPTT user.

6.2.13.3 Test description

6.2.13.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.13.3.2 Test procedure sequence

Table 6.2.13.3.2-1: Main behaviour

St	St Procedure		Message Sequence		Verdict	
31	Flocedule	U - S	Message	TP	veruici	
-	EXCEPTION: The E-UTRA/EPC related	-	-	-	-	
	actions which are related to the call					
	establishment are described in TS 36.579-					
	1 [2], subclause 5.4.4 'Generic Test Procedure					
	for MCPTT CT communication in E-UTRA'.					
	The test sequence below shows only the					
	MCPTT relevant messages exchanged.					
1	The SS (MCPTT server) sends SIP MESSAGE	<	SIP MESSAGE	-	-	
	message requesting a private call call-back					
	providing the MCPTT ID of the UE (MCPTT					
	User).					
-	EXCEPTION: In parallel to the events	-	-	-	-	
	described in step 2 the step specified in Table					
	6.2.13.3.2-1 takes place.					
2	Check: Does the UE (MCPTT client) send SIP	>	SIP MESSAGE	1	Р	
	MESSAGE accepting the request?					
3	The SS (MCPTT server) sends SIP MESSAGE	<	SIP MESSAGE	-	-	
	message cancelling the private call call-back					
	providing the MCPTT ID of the UE (MCPTT					
	User).					
4	Check: Does the UE (MCPTT client) send SIP	>	SIP MESSAGE	2	Р	
	MESSAGE accepting the cancellation?					
5	Make the UE (MCPTT User) request	-	-	-	-	
	cancelling of the private call call-back request					
	(based on the MCPTT ID of the MCPTT user					
	provided in step 1 and shown to the User in					
	step 1 in Table 6.2.13.3.2-1).					
	NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
	Depending on the implementation the User					
	may not be provided with an entry for pending					
	call-back.					
6	Check: Does, in the next 5 sec, the UE	>	SIP MESSAGE	2	F	
	(MCPTT client) send a SIP MESSAGE					
	message cancelling the private call call-back					
	providing the MCPTT ID of the MCPTT user					
	provided in step 1 and shown to the User in					
	step 1 in Table 6.2.13.3.2-1?					
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-	
	connection.					
-	EXCEPTION: The E-UTRA/EPC related	-	-	-	-	
	actions which are related to the call					
	establishment are described in TS 36.579-					
	1 [2], subclause 5.4.4 'Generic Test Procedure					
	for MCPTT CT communication in E-UTRA'.					
	The test sequence below shows only the					
	MCPTT relevant messages exchanged.			 		
7	The SS (MCPTT server) sends SIP MESSAGE	<	SIP MESSAGE	-	-	
	message requesting a private call call-back					
	providing the MCPTT ID of the UE (MCPTT					
	User).			 		
-	EXCEPTION: In parallel to the events	-	-	-	-	
	described in step 8 the step specified in Table					
	6.2.13.3.2-1 takes place.				<u> </u>	
8	Check: Does the UE (MCPTT client) send SIP	>	SIP MESSAGE	1	P	
	MESSAGE accepting the request?					
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-	
	connection.					
9	Make the UE (MCPTT User) request private	-	-	-	-	
	call call-back to the requesting MCPTT client					
	(Private call call-back fulfilment) using the					
	MCPTT ID of the requesting MCPTT user					
	provided in step 7 and shown to the User in					
	step 1 in Table 6.2.13.3.2-1.					
	NOTE: This is expected to be done via a suitable implementation dependent MMI.					
		1	1		1	

-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
10	Check: Does the UE (MCPTT client) send an	>	SIP INVITE	3	Р
	initial SIP INVITE request using the MCPTT ID				
	of the requesting MCPTT user provided in step				
	7 and shown to the User in step 1 in Table				
	6.2.13.3.2-1, and, not offering a media-level				
	section for a media-floor control entity				
	requesting the establishment of an MCPTT				
	private call, manual commencement mode?				
11	The SS (MCPTT server) sends SIP 180	<	SIP 180 (Ringing)	-	-
	(Ringing).				
12	The SS (MCPTT server) sends SIP 183	<	SIP 183 (Session Progress)	-	-
	(Session Progress).				
13	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)		
15	SSRC identifier is assigned.		Sil 200 (OR)	-	-
14	Make the UE (MCPTT User) request		-		
14		-	-	-	-
	termination of the MCPTT private call.				
	NOTE: This is expected to be done via a				
4.5	suitable implementation dependent MMI.				
15	The UE (MCPTT client) sends a SIP BYE	>	SIP BYE	-	-
10	request.				
16	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-
17	Make the UE (MCPTT User) request	-	-	-	-
	cancelling of the private call call-back request				
	(based on the MCPTT ID of the MCPTT user				
	provided in step 7 and shown to the User in				
	step 1 in Table 6.2.13.3.2-1).				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
	Depending on the implementation the User				
	may not be provided with an entry for pending				
	call-back.				
18	Check: Does, in the next 5 sec, the UE	>	SIP MESSAGE	3	F
	(MCPTT client) send a SIP MESSAGE				
	message cancelling the private call call-back				
	providing the MCPTT ID of the MCPTT user				
	provided in step 7 and shown to the User in				
	step 1 in Table 6.2.13.3.2-1?				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
L					

Table 6.2.13.3.2-2: Main behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	Check: Does the UE (MCPTT client) notify the user about the stored information related to the private call call back request (mcptt-calling- user-id, the call back urgency, time-of- request)? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Ρ

6.2.13.3.3 Spec

Specific message contents

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message					
	body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.13.3.3-2					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included				

Table 6.2.13.3.3-1: SIP MESSAGE (Steps 1, 7, Table 6.2.13.3.2-1)

Table 6.2.13.3.3-2: MCPTT-Info in SIP MESSAGE (Table 6.2.13.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
anyExt		The anyExt field may contain other values - these need not be checked				
request-type	"private-call-call-back- request"					
urgency-ind	"low", "normal" or "high"					
time-of-request	"YYYY-MM- DDThh:mm:ss"	set to the date and time of the request				

Table 6.2.13.3.3-3: SIP MESSAGE (Steps 2, 8, Table 6.2.13.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.13.3.3-4					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included				
MIME-Content-Type	"application/resource- lists"					
Resource-lists	As described in Table 6.2.13.3.3-5					

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
anyExt		The anyExt field may contain other values - these need not be checked				
response-type	"private-call-call-back- response"					

Table 6.2.13.3.3-4: MCPTT-Info in SIP MESSAGE (Table 6.2.13.3.3-3)

Table 6.2.13.3.3-5: Resource-lists in SIP MESSAGE (Table 6.2.13.3.3-3)

Derivation Path: TS 36.579-1 [2], table 5.5.3.3.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
resource-lists					
list					
entry	the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/ vnd.3gpp.mcptt- info+xml MIME body of the received SIP MESSAGE request</mcptt-calling-user-id>				

Table 6.2.13.3.3-6: SIP MESSAGE (Step 3, Table 6.2.13.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.13.3.3-7					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included				

Table 6.2.13.3.3-7: MCPTT-Info in SIP MESSAGE (Table 6.2.13.3.3-6)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.2-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
anyExt		The anyExt field may contain other values - these need not be checked				
request-type	"private-call-call-back- cancel-request"					

Derivation Path: TS 36.579-1 [2], table 5.5.2.7.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.13.3.3-9					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"	Not included				
MIME-Content-Type	"application/resource- lists"					
Resource-lists	As described in Table 6.2.13.3.3-10					

Table 6.2.13.3.3-8: SIP MESSAGE (Step 4, Table 6.2.13.3.2-1)

Table 6.2.13.3.3-9: MCPTT-Info in SIP MESSAGE (Table 6.2.13.3.3-8)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
anyExt		The anyExt field may contain other values - these need not be checked				
response-type	"private-call-call-back- cancel-response"					

Table 6.2.13.3.3-10: Resource-lists in SIP MESSAGE (Table 6.2.13.3.3-8)

Derivation Path: TS 36.579-1 [2], table 5.5.3.3.1-1						
Information Element	Value/remark	Comment	Reference	Condition		
resource-lists						
list						
entry	the MCPTT ID contained in the <mcptt-calling-user-id> element in the application/ vnd.3gpp.mcptt- info+xml MIME body of the received SIP MESSAGE request</mcptt-calling-user-id>					

Table 6.2.13.3.3-11: SIP INVITE (Step 10, Table 6.2.13.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, conditions PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
Answer-Mode					
answer-mode-value	"Manual"				
Content-Type					
Content-Length					
Message-body					
MIME-Content-Type	"application/sdp"				
SDP Message	As described in Table 6.2.13.3.3-12				

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
media attribute	Not included	a= line attribute = fmtp No Floor control requested			

Table 6.2.13.3.3-12: SDP Message in SIP INVITE (Table 6.2.13.3.3-11)

Table 6.2.13.3.3-13: SIP 200 (OK) (Step 13, Table 6.2.13.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"application/sdp"					
Content-Length	length of message- body					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.13.3.3-14					

Table 6.2.13.3.3-14: SDP Message in SIP 200 (OK) (Table 6.2.13.3.3-13)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute	Not included	a= line attribute = fmtp No Floor control requested				

Table 6.2.13.3.3-15: SIP 200 (OK) (Step 16, Table 6.2.13.3.2-1)

[Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
	Information Element	Value/remark	Comment	Reference	Condition		
•	Content-Type	Not Included					

6.2.14 On-network / Private Call / Ambient listening call / Remotely initiated Ambient listening call / Remotely initiated ambient listening call release / Success / Client Originated (CO) / Server initiated ambient call release

6.2.14.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to
initiate Remotely initiated ambient listening }

ensure that

when { UE (MCPTT User) requests the establishment of a remotely initiated ambient listening call }
 then { UE (MCPTT Client) sends a SIP INVITE message (end-to-end security context provided)
 requesting the establishment of a remotely initiated ambient listening call, and, after indication
 from the MCPTT Server that the call was established notifies the MCPTT user }
 }

```
}
```

6.2.14.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.6.2.1.1, 11.1.6.2.1.3, 11.1.6.2.1.4, 6.2.1, 6.4, F.1.3. Unless otherwise stated these are Rel-14 requirements.

then { UE (MCPTT Client) sends a SIP 200 (OK) response and terminates the call }

[TS 24.379, clause 11.1.6.2.1.1]

Upon receiving a request from an MCPTT user to establish an MCPTT ambient listening call that has been authorised successfully by the requesting MCPTT client, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;
- 2) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];
- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- shall include an application/vnd.3gpp.mcptt-info+xml MIME body with the <session-type> element set to a
 value of "ambient-listening";
- shall include in the application/vnd.3gpp.mcptt-info+xml MIME body an <ambient-listening-type> element set to a value of:

•••

- b) "remote-init", if the MCPTT user has requested a remotely initiated ambient listening call;
- shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the targeted MCPTT user, according to rules and procedures of IETF RFC 5366 [20];
- NOTE 1: the targeted MCPTT user is the listened-to MCPTT user in the case of a remotely initiated ambient listening call or the listening MCPTT user in the case of a locally initiated listening call.

10) if an end-to-end security context needs to be established then:

- a) if necessary, shall instruct the key management client to request keying material from the key management server as described in 3GPP TS 33.180 [78];
- b) shall use the keying material to generate a PCK as described in 3GPP TS 33.180 [78];
- c) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.180 [78];
- d) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID and KMS URI of the invited user and a time related parameter as described in 3GPP TS 33.180 [78];
- e) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.180 [78];
- f) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.180 [78]; and
- g) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.180 [78];
- 11) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1 and with a media stream of the offered media-floor control entity;

...

- 13) if this is a remotely initiated ambient listening call, shall comply with the conditions for an implicit request to grant the floor to the terminating MCPTT client as specified in subclause 6.4;
- 14) shall include in the SIP INVITE request a Priv-Answer-Mode header field with the value "Auto" according to the rules and procedures of IETF RFC 5373 [18]; and
- 15) shall send the SIP INVITE request towards the participating MCPTT function according to 3GPP TS 24.229 [4].

•••

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 2) if this is a remotely initiated ambient listening call, shall notify the user that the call has been successfully established;

[TS 24.379, clause 11.1.6.2.1.3]

Upon receiving a request from an MCPTT user to release an MCPTT ambient listening call:

The MCPTT client:

•••

- 2) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- shall generate a SIP BYE request according to rules and procedures of 3GPP TS 24.229 [4] and IETF RFC 6086 [64]; and
- 4) shall send the SIP BYE request within the dialog of the MCPTT ambient call session as specified in 3GPP TS 24.229 [4].

Upon receipt of the SIP 200 (OK) response to the SIP BYE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

[TS 24.379, clause 11.1.6.2.1.4]

Upon receipt of a SIP BYE request in the dialog of an ambient listening session, the MCPTT client:

1) shall comply with the procedures of subclause 6.2.6;

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

•••

- 2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:
 - •••
 - c) if the SDP offer is for an ambient listening call:
 - i) if this is a remotely initiated ambient listening call, include an "a=recvonly" attribute; or

[TS 24.379, clause 6.4]

An initial SIP INVITE request fulfilling the following criteria shall be regarded by the MCPTT server as an implicit request to grant the floor to the terminating MCPTT client when the originating MCPTT client:

- 1) initiates a remotely initiated MCPTT ambient listening call; and
- 2) includes the "mc_implicit_request" 'fmtp' attribute in the associated UDP stream for the floor control in the SDP offer/answer as specified in 3GPP TS 24.380 [5] clause 12.

[TS 24.379, clause F.1.3]

If the <mcpttinfo> contains the <mcptt-Params> element then:

- •••
- 2) the <session-type> can be included with:

•••

e) a value of "ambient-listening" to indicate the MCPTT client wants to make an ambient listening call;

•••

19)the <anyExt> can be included with the following elements not declared in the XML schema:

- a) an <ambient-listening-type> of type "xs:string":
 - i) set to a value of "remote-init" when the listening MCPTT user of an ambient listening call initiates the call; or

6.2.14.3 Test description

6.2.14.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
 - The MCPTT User is authorized to initiate Remotely initiated ambient listening: the <allow-request-remoteinitiated-ambient-listening> element of the <ruleset> element is present in the MCPTT user profile document and is set to "true"
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.14.3.2 Test procedure sequence

Table 6.2.14.3.2-1: Main behaviour

St	Procedure	Message Sequence		TP	Verdict	
		U - S	Message			
1	Make the UE (MCPTT User) request the establishment of an MCPTT remotely initiated ambient listening call. NOTE: This is expected to be done via a	-	-	-	-	
	suitable implementation dependent MMI. EXCEPTION: The E-UTRA/EPC actions which					
-	are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	Check: Does the UE (MCPTT client) send a SIP INVITE message (end-to-end security context provided) requesting the establishment of an MCPTT remotely initiated ambient listening call?	>	SIP INVITE	1	P	
3	The SS (MCPTT server) sends SIP 200 (OK), indicating that the MCPTT server is capable of receiving a SIP BYE from the MCPTT client to release an ambient-listening call (TS 24.379 [9], clause D.3).	<	SIP 200 (OK)	-	-	
4	The SS (MCPTT server) sends a Floor Taken message, the Permission to Request the Floor field set to '0'.	<	Floor Taken	-	-	
5	Check: Does the UE (MCPTT client) notify the user that the remotely initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	Р	
6	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-	
7	Make the UE (MCPTT User) request the release of the Remotely initiated ambient listening call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
8	Check: Does the UE (MCPTT client) send a SIP BYE request?	>	SIP BYE	2	Р	
9	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-	
10	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-	
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-	
11	Make the UE (MCPTT User) request the establishment of an MCPTT remotely initiated ambient listening call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
12	The UE (MCPTT client) send a SIP INVITE message (end-to-end security context provided) requesting the establishment of an MCPTT remotely initiated ambient listening call.	>	SIP INVITE	-	-	

13	The SS (MCPTT server) sends SIP 200 (OK), indicating that the MCPTT server is capable of receiving a SIP BYE from the MCPTT client to release an ambient-listening call (TS 24.379 [9], clause D.3).	<	SIP 200 (OK)	-	-
14	The SS (MCPTT server) sends a Floor Taken message, the Permission to Request the Floor field set to '0'.	<	Floor Taken	-	-
15	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
16	The SS (MCPTT server) sends a SIP BYE request including a <release-reason> element set to "administrator-action".</release-reason>	<	SIP BYE	-	-
17	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	3	Р
18	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.14.3.3 Specific message contents

Table 6.2.14.3.3-1: SIP INVITE (Steps 2, 12, Table 6.2.14.3.2-1)

Derivation Path: TS 36.579-1 [2]	, table 5.5.2.5.1-1, condition P	RIVATE-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Priv-Answer-Mode				
answer-mode-value	"Auto"			
require	Parameter has no			
	value			
Content-Type	"multipart/mixed"			
Content-Length	length of message			
	body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table			
SDP Message	6.2.14.3.3-3			
MIME-Content-Type	"application/vnd.3gpp.			
MIME-Content-Type	mcptt-info+xml"			
MCPTT-Info	As described in Table			
	6.2.14.3.3-2			

Table 6.2.14.3.3-2: MCPTT-Info in SIP INVITE (Table 6.2.14.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
mcpttinfo						
mcptt-Params						
session-type	"ambient-listening"					
anyExt						
ambient-listening-type	"remote-init"	The anyExt field may contain other values - these need not be checked				

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute		a=line attribute=recvonly				
flag	"recvonly"					

Table 6.2.14.3.3-3: SDP Message in SIP INVITE (Table 6.2.14.3.3-1)

Table 6.2.14.3.3-4: SIP 200 (OK) (Steps 3, 13, Table 6.2.14.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Feature-Caps						
fcap-name	"g.3gpp.mcptt.ambient- listening-call-release"	Indicates that the MCPTT server is capable of receiving a SIP BYE from an MCPTT client to release an ambient- listening call				

Table 6.2.14.3.3-5: Floor Taken (Steps 4, 14, Table 6.2.14.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK.						
Information Element	Value/remark	Comment	Condition			
Permission to Request the Floor						
Permission to Request the Floor	"0"	The receiver is NOT permitted to request floor				
Floor Indicator						
Floor Indicator	'10xxxx00 0000000	Bit A=1 (Normal call) bits=x mean any value				

Table 6.2.14.3.3-6: SIP 200 (OK) (Steps 9, 17, Table 6.2.14.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

Table 6.2.14.3.3-7: SIP BYE (Step 16, Table 6.2.14.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.2.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	"multipart/mixed"					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.14.3.3-8					

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-2, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"ambient-listening"				
anyExt					
ambient-listening-type	"remote-init"				
release-reason	"administrator-action"				

Table 6.2.14.3.3-8: MCPTT-Info in SIP BYE (Table 6.2.14.3.3-7)

6.2.15 On-network / Private Call / Ambient listening call / Remotely initiated Ambient listening call / Remotely initiated ambient listening call release / Success / Client Terminated (CT)

6.2.15.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private calls }

ensure that {
 when { the UE (MCPTT Client) receives a request for establishment of an MCPTT remotely initiated
 ambient listening call the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute
 field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE }

then { UE (MCPTT Client) sends a SIP 200 (OK) accepting the establishment of the MCPTT remotely
initiated ambient listening call applying End-to-end communication security, and, does not notify
the user for the call establishment }
}

(2)

6.2.15.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.6.2.1.2, 11.1.6.2.1.4, 6.2.3.1.1, 6.2.6. Unless otherwise stated these are Rel-14 requirements.

[TS 24.379, clause 11.1.6.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 3) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.180 [78];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.180 [78];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.180 [78];

- d) if authentication verification of the MIKEY-SAKKE I_MESSAGE fails, shall reject the SIP INVITE request with a SIP 488 (Not Acceptable Here) response as specified in IETF RFC 4567 [47], and include warning text set to "136 authentication of the MIKEY-SAKKE I_MESSAGE failed" in a Warning header field as specified in subclause 4.4; and
- e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.180 [78]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.180 [78];
- NOTE 1: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.

•••

6) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.1;

•••

- if the received SIP INVITE request includes an alert-info header field as specified in IETF RFC 3261 [24] and as updated by IETF RFC 7462 [77] set to a value of "<<u>file:///dev/null</u>>" shall not give any indication of the progress of the call to the MCPTT user;
- NOTE 3: The alert-info header field having the value of "<<u>file:///dev/null</u>>" is intended to result in having a "null" alert, i.e. an alert with no content or physical manifestation of any kind.

[TS 24.379, clause 11.1.6.2.1.4]

Upon receipt of a SIP BYE request in the dialog of an ambient listening session, the MCPTT client:

- 1) shall comply with the procedures of subclause 6.2.6;
- 2) if the cached ambient listening client role is equal to "listened-to MCPTT user", shall provide no indication that an ambient listening call has been terminated;

[TS 24.379, clause 6.2.3.1.1]

When performing the automatic commencement mode procedures, the MCPTT client:

- 1) shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;

•••

 shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];

•••

10) shall interact with the media plane as specified in 3GPP TS 24.380 [5] subclause 6.2.

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

6.2.15.3 Test description

6.2.15.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.15.3.2

Test procedure sequence

Table 6.2.15.3.2-1: Main behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
1	The SS (MCPTT server) sends SIP INVITE message requesting the establishment of an MCPTT remotely initiated ambient listening call.	<	SIP INVITE	-	-
2	Check: Does the UE (MCPTT client) send a SIP 200 (OK) accepting the establishment of the MCPTT remotely initiated ambient listening call?	>	SIP 200 (OK)	1	Р
3	SS (MCPTT server) sends a Floor Granted message, the Permission to Request the Floor field set to '0'.	<	Floor Granted	-	-
4	Check: Does the UE (MCPTT client) notify the user that the remotely initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	F
5	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
6	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
7	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
8	Check: Does the UE (MCPTT client) notify the user that the remotely initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	2	F
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.15.3.3

Specific message contents

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-2, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
Priv-Answer-Mode						
answer-mode-value	"Auto"					
require	Parameter has no					
	value					
Alert-Info						
value	" <file: dev="" null="">"</file:>					
Message-body						
MIME-Content-Type	"application/sdp"					
SDP Message	As described in Table 6.2.15.3.3-3					
Message-body						
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"					
MCPTT-Info	As described in Table 6.2.15.3.3-2					

Table 6.2.15.3.3-1: SIP INVITE (Step 1, Table 6.2.15.3.2-1)

Table 6.2.15.3.3-2: MCPTT-Info in SIP INVITE (Table 6.2.15.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"ambient-listening"				
anyExt					
ambient-listening-type	"remote-init"				

Table 6.2.15.3.3-3: SDP Message in SIP INVITE (Table 6.2.15.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL						
Information Element Value/remark Comment Reference Condi						
media attribute		a=line attribute=recvonly				
flag	"recvonly"					

Table 6.2.15.3.3-4: Floor Granted (Step 3, Table 6.2.15.3.2-1)

Information Element	Value/remark	Comment	Condition
Permission to Request the Floor			
Permission to Request the Floor	"0"	The receiver is NOT permitted to request floor	
Floor Indicator			
Floor Indicator	'10xxxx00 0000000	Bit A=1 (Normal call) bits=x mean any value	

Table 6.2.15.3.3-5: SIP 200 (OK) (Step 7, Table 6.2.15.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	Not Included				

6.2.16 On-network / Private Call / Ambient listening call / Locally initiated Ambient listening call / Locally initiated ambient listening call release / Success / Client Originated (CO) / Server initiated ambient call release

6.2.16.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate Locally initiated ambient listening } ensure that {

when { the MCPTT User requests the establishment of a MCPTT Locally initiated ambient listening call }

then { UE (MCPTT Client) sends a SIP INVITE message requesting the establishment of a locally
initiated ambient listening call, and, upon indication from the MCPTT Server for the call progress
and that the call was established does not notify the user }
}

(2)

with { UE (MCPTT Client) having initiated a locally initiated ambient listening call, and, having been notified by the server that the MCPTT server is capable of receiving a SIP BYE from an MCPTT client to release an ambient-listening call } ensure that {

when { the MCPTT User wants to release the MCPTT locally initiated ambient listening call }
 then { UE (MCPTT Client) sends a SIP BYE request and after receiving a SIP 200 (OK) terminates
 the call, and, does not notify the user }
 }
}

(3)

with { UE (MCPTT Client) having initiated a remotely initiated ambient listening call }
ensure that {
 when { the UE (MCPTT client) receives a SIP BYE message including a <release-reason> element set
to "administrator-action" }
 then { UE (MCPTT Client) sends a SIP 200 (OK) response and terminates the call, and, does not

notify the user }

6.2.16.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.6.2.1.1, 11.1.6.2.1.3, 11.1.6.2.1.4, 6.2.1, 6.4, F.1.3. Unless otherwise stated these are Rel-14 requirements.

[TS 24.379, clause 11.1.6.2.1.1]

}

Upon receiving a request from an MCPTT user to establish an MCPTT ambient listening call that has been authorised successfully by the requesting MCPTT client, the MCPTT client shall generate an initial SIP INVITE request by following the UE originating session procedures specified in 3GPP TS 24.229 [4], with the clarifications given below.

The MCPTT client:

- 1) shall set the Request-URI of the SIP INVITE request to a public service identity of the participating MCPTT function serving the MCPTT user;
- 2) may include a P-Preferred-Identity header field in the SIP INVITE request containing a public user identity as specified in 3GPP TS 24.229 [4];
- shall include the g.3gpp.mcptt media feature tag and the g.3gpp.icsi-ref media feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" in the Contact header field of the SIP INVITE request according to IETF RFC 3840 [16];
- 4) shall include an Accept-Contact header field containing the g.3gpp.mcptt media feature tag along with the "require" and "explicit" header field parameters according to IETF RFC 3841 [6];

- 5) shall include the ICSI value "urn:urn-7:3gpp-service.ims.icsi.mcptt" (coded as specified in 3GPP TS 24.229 [4]), in a P-Preferred-Service header field according to IETF RFC 6050 [9] in the SIP INVITE request;
- 6) shall include an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref contain with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
- 7) shall include an application/vnd.3gpp.mcptt-info+xml MIME body with the <session-type> element set to a value of "ambient-listening";
- 8) shall include in the application/vnd.3gpp.mcptt-info+xml MIME body an <ambient-listening-type> element set to a value of:
 - a) "local-init", if the MCPTT user has requested a locally initiated ambient listening call; or

•••

- 9) shall insert in the SIP INVITE request a MIME resource-lists body with the MCPTT ID of the targeted MCPTT user, according to rules and procedures of IETF RFC 5366 [20];
- NOTE 1: the targeted MCPTT user is the listened-to MCPTT user in the case of a remotely initiated ambient listening call or the listening MCPTT user in the case of a locally initiated listening call.

10) if an end-to-end security context needs to be established then:

- a) if necessary, shall instruct the key management client to request keying material from the key management server as described in 3GPP TS 33.180 [78];
- b) shall use the keying material to generate a PCK as described in 3GPP TS 33.180 [78];
- c) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.180 [78];
- d) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID and KMS URI of the invited user and a time related parameter as described in 3GPP TS 33.180 [78];
- e) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.180 [78];
- f) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.180 [78]; and
- g) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.180 [78];
- 11) shall include an SDP offer according to 3GPP TS 24.229 [4] with the clarification given in subclause 6.2.1 and with a media stream of the offered media-floor control entity;
- 12) if this is a locally initiated ambient listening call, shall comply with the conditions for implicit floor control as specified in subclause 6.4;

•••

- 14) shall include in the SIP INVITE request a Priv-Answer-Mode header field with the value "Auto" according to the rules and procedures of IETF RFC 5373 [18]; and
- 15) shall send the SIP INVITE request towards the participating MCPTT function according to 3GPP TS 24.229 [4].

Upon receiving a SIP 183(Session Progress) response to the SIP INVITE request the MCPTT client:

if the SIP 183(Session Progress) response includes an alert-info header field as specified in IETF RFC 3261 [24] and as updated by IETF RFC 7462 [77] set to a value of "<<u>C:\dev\null</u>file:///dev/null>" shall not give any indication of the progress of the call setup to the MCPTT user; and

NOTE 2: The alert-info header field having the value of "<<u>C:\dev\null</u>file:///dev/null>" is intended to result in having a "null" alert, i.e. an alert with no content or physical manifestation of any kind.

•••

Upon receiving a SIP 200 (OK) response to the SIP INVITE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

...

3) if this is a locally initiated ambient listening call, shall not provide any indication to the user that the call has been successfully established;

[TS 24.379, clause 11.1.6.2.1.3]

Upon receiving a request from an MCPTT user to release an MCPTT ambient listening call:

The MCPTT client:

•••

- 2) shall interact with the media plane as specified in 3GPP TS 24.380 [5];
- 3) shall generate a SIP BYE request according to rules and procedures of 3GPP TS 24.229 [4] and IETF RFC 6086 [64]; and
- 4) shall send the SIP BYE request within the dialog of the MCPTT ambient call session as specified in 3GPP TS 24.229 [4].

Upon receipt of the SIP 200 (OK) response to the SIP BYE request the MCPTT client:

1) shall interact with the media plane as specified in 3GPP TS 24.380 [5];

[TS 24.379, clause 11.1.6.2.1.4]

Upon receipt of a SIP BYE request in the dialog of an ambient listening session, the MCPTT client:

- 1) shall comply with the procedures of subclause 6.2.6;
- 2) if the cached ambient listening client role is equal to "listened-to MCPTT user", shall provide no indication that an ambient listening call has been terminated;

[TS 24.379, clause 6.2.1]

The SDP offer shall contain only one SDP media-level section for MCPTT speech according to 3GPP TS 24.229 [4] and, if floor control shall be used during the session, shall contain one SDP media-level section for a media-floor control entity according to 3GPP TS 24.380 [5].

When composing an SDP offer according to 3GPP TS 24.229 [4] the MCPTT client:

•••

2) shall include an "m=audio" media-level section for the MCPTT media stream consisting of:

•••

- c) if the SDP offer is for an ambient listening call:
 - •••
 - ii) if this is a locally initiated ambient listening call, include an "a=sendonly" attribute; and

[TS 24.379, clause F.1.3]

If the <mcpttinfo> contains the <mcptt-Params> element then:

•••

2) the <session-type> can be included with:

••••

e) a value of "ambient-listening" to indicate the MCPTT client wants to make an ambient listening call;

•••

19) the <anyExt> can be included with the following elements not declared in the XML schema:

- a) an <ambient-listening-type> of type "xs:string":
 - •••
 - ii) set to a value of "local-init" when the listened-to MCPTT user of an ambient listening call initiates the call; and
- 6.2.16.3 Test description
- 6.2.16.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
 - The MCPTT User is authorized to initiate locally initiated ambient listening call: the <allow-request-locallyinitiated-ambient-listening> element of the <ruleset> element is present in the MCPTT user profile document and is set to "true"
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.16.3.2 Test procedure sequence

Table 6.2.16.3.2-1: Main behaviour

St	St Procedure		Message Sequence	TP	Verdict	
0.	rioodalo	U - S	Message		Voraiot	
1	Make the UE (MCPTT User) request the establishment of an MCPTT locally initiated ambient listening call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	Check: Does the UE (MCPTT client) send an initial SIP INVITE message requesting the establishment of an MCPTT locally initiated ambient listening call?	>	SIP INVITE	1	Р	
3	The SS (MCPTT server) sends SIP 180 (Ringing).	<	SIP 180 (Ringing)	-	-	
4	Check: Does the UE (MCPTT client) notify the user for the progress of the locally initiated ambient listening call? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	F	
5	The SS (MCPTT server) sends SIP 200 (OK), indicating that the MCPTT server is capable of receiving a SIP BYE from the MCPTT client to release an ambient-listening call (TS 24.379 [9], clause D.3).	<	SIP 200 (OK)	-	-	
6	The SS (MCPTT server) sends a Floor Granted message, the Permission to Request the Floor field set to '0'.	<	Floor Granted	-	-	
7	Check: Does the UE (MCPTT client) notify the user that the locally initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	1	F	
8	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-	
9	Make the UE (MCPTT User) request the release of the Locally initiated ambient listening call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
10	Check: Does the UE (MCPTT client) send a SIP BYE request?	>	SIP BYE	2	Р	
11	The SS (MCPTT server) sends SIP 200 (OK).	<	SIP 200 (OK)	-	-	
12	Check: Does the UE (MCPTT client) notify the user that the locally initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	2	F	
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-	
13	Make the UE (MCPTT User) request the establishment of an MCPTT locally initiated ambient listening call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	

14	The UE (MCPTT client) send an initial SIP INVITE message requesting the establishment of an MCPTT locally initiated ambient listening call.	>	SIP INVITE	-	-
15	The SS (MCPTT server) sends SIP 180 (Ringing).	<	SIP 180 (Ringing)	-	-
16	The SS (MCPTT server) sends SIP 200 (OK), indicating that the MCPTT server is capable of receiving a SIP BYE from the MCPTT client to release an ambient-listening call (TS 24.379 [9], clause D.3).	<	SIP 200 (OK)	-	-
17	The SS (MCPTT server) sends a Floor Taken message, the Permission to Request the Floor field set to '0'.	<	Floor Granted	-	-
18	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
19	The SS (MCPTT server) sends a SIP BYE request including a <release-reason> element set to "administrator-action".</release-reason>	<	SIP BYE	-	-
20	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	3	Р
21	Check: Does the UE (MCPTT client) notify the user that the locally initiated ambient listening call has been successfully established? NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	3	F
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.16.3.3

Specific message contents

Table 6.2.16.3.3-1: SIP INVITE (Steps 2, 14, Table 6.2.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.5.1-1, condition P	RIVATE-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Priv-Answer-Mode				
answer-mode-value	"Auto"			
require	Parameter has no value			
Content-Type	"multipart/mixed"			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.16.3.3-3			
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 6.2.16.3.3-2			

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"ambient-listening"				
anyExt		The anyExt field may contain other values - these need not be checked			
ambient-listening-type	"local-init"				

Table 6.2.16.3.3-2: MCPTT-Info in SIP INVITE (Table 6.2.16.3.3-1)

Table 6.2.16.3.3-3: SDP Message in SIP INVITE (Table 6.2.16.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute		a=line attribute=sendonly				
flag	"sendonly"					

Table 6.2.16.3.3-4: SIP 200 (OK) (Steps 5, 16, Table 6.2.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Feature-Caps						
fcap-name	"g.3gpp.mcptt.ambient- listening-call-release"	Indicates that the MCPTT server is capable of receiving a SIP BYE from an MCPTT client to release an ambient- listening call				

Table 6.2.16.3.3-5: Floor Granted (Steps 6, 17, Table 6.2.16.3.2-1)

Information Element	Value/remark	Comment	Condition
Permission to Request the Floor			
Permission to Request the Floor	"0"	The receiver is NOT permitted to request floor	
Floor Indicator			
Floor Indicator	'10xxxx00 0000000	Bit A=1 (Normal call) bits=x mean any value	

Table 6.2.16.3.3-6: SIP 200 (OK) (Steps 9, 17, Table 6.2.16.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1						
Information Element	Value/remark	Comment	Reference	Condition		
Content-Type	Not Included					

Derivation Path: TS 36.579-1 [2], Table 5.5.2.2.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"multipart/mixed"				
Content-Length	length of message				
	body				
Message-body					
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"				
MCPTT-Info	As described in Table 6.2.16.3.3-8				

Table 6.2.16.3.3-7: SIP BYE (Step 20, Table 6.2.16.3.2-1)

Table 6.2.16.3.3-8: MCPTT-Info in SIP BYE (Table 6.2.16.3.3-7)

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"ambient-listening"				
anyExt					
ambient-listening-type	"local-init"				
release-reason	"administrator-action"				

6.2.17 On-network / Private Call / Ambient listening call / Locally initiated Ambient listening call / Locally initiated ambient listening call release / Success / Client Terminated (CT)

6.2.17.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private calls } ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT locally initiated ambient listening call the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE } then { UE (MCPTT Client) sends a SIP 200 (OK) accepting the establishment of the MCPTT locally initiated ambient listening call applying End-to-end communication security } }

(2)

with { UE (MCPTT Client) having accepted a locally initiated ambient listening call }
ensure that {
 when { the UE (MCPTT Client) receives a SIP BYE request for release of the MCPTT locally initiated
 ambient listening call }
 then { UE (MCPTT Client) sends a SIP 200 (OK) response and terminates the call }
 }
}

6.2.17.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.1.6.2.1.2, 11.1.6.2.1.4, 6.2.3.1.1, 6.2.6. Unless otherwise stated these are Rel-14 requirements.

[TS 24.379, clause 11.1.6.2.1.2]

Upon receipt of an initial SIP INVITE request, the MCPTT client shall follow the procedures for termination of multimedia sessions in the IM CN subsystem as specified in 3GPP TS 24.229 [4] with the clarifications below.

The MCPTT client:

•••

- 3) if the SDP offer of the SIP INVITE request contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.180 [78];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.180 [78];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.180 [78];
 - d) if authentication verification of the MIKEY-SAKKE I_MESSAGE fails, shall reject the SIP INVITE request with a SIP 488 (Not Acceptable Here) response as specified in IETF RFC 4567 [47], and include warning text set to "136 authentication of the MIKEY-SAKKE I_MESSAGE failed" in a Warning header field as specified in subclause 4.4; and
 - e) if the signature of the MIKEY-SAKKE I_MESSAGE was successfully validated:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.180 [78]; and
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.180 [78];
- NOTE 1: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.

•••

6) shall perform the automatic commencement procedures specified in subclause 6.2.3.1.1;

[TS 24.379, clause 11.1.6.2.1.4]

Upon receipt of a SIP BYE request in the dialog of an ambient listening session, the MCPTT client:

1) shall comply with the procedures of subclause 6.2.6;

[TS 24.379, clause 6.2.3.1.1]

When performing the automatic commencement mode procedures, the MCPTT client:

- shall accept the SIP INVITE request and generate a SIP 200 (OK) response according to rules and procedures of 3GPP TS 24.229 [4];
- 2) shall include the option tag "timer" in a Require header field of the SIP 200 (OK) response;
- 3) shall include the g.3gpp.mcptt media feature tag in the Contact header field of the SIP 200 (OK) response;
- 4) shall include the g.3gpp.icsi-ref media feature tag containing the value of "urn:urn-7:3gppservice.ims.icsi.mcptt" in the Contact header field of the SIP 200 (OK) response;

•••

 shall send the SIP 200 (OK) response towards the MCPTT server according to rules and procedures of 3GPP TS 24.229 [4];

•••

10) shall interact with the media plane as specified in 3GPP TS 24.380 [5] subclause 6.2.

[TS 24.379, clause 6.2.6]

Upon receiving a SIP BYE request, the MCPTT client:

- 1) shall interact with the media plane as specified in 3GPP TS 24.380 [5]; and
- 2) shall send SIP 200 (OK) response towards MCPTT server according to 3GPP TS 24.229 [4].

6.2.17.3 Test description

6.2.17.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
- For the underlining "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.2.17.3.2

Test procedure sequence

Table 6.2.17.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
1	The SS (MCPTT server) sends SIP INVITE message requesting the establishment of an MCPTT locally initiated ambient listening call.	<	SIP INVITE	-	-
2	Check: Does the UE (MCPTT client) send a SIP 200 (OK) accepting the establishment of the MCPTT locally initiated ambient listening call?	>	SIP 200 (OK)	1	Р
3	SS (MCPTT server) sends a Floor Granted message, the Permission to Request the Floor field set to '0'.	<	Floor Taken	-	-
4	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
5	The SS (MCPTT server) sends a SIP BYE request.	<	SIP BYE	-	-
6	Check: Does the UE (MCPTT client) send a SIP 200 (OK)?	>	SIP 200 (OK)	2	Р
7	Wait for 5 sec to capture any not allowed behaviour (e.g. the UE shall not sent any floor control messages).	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.2.17.3.3

Specific message contents

Table 6.2.17.3.3-1: SIP INVITE (Step 1, Table 6.2.17.3.2-1)

Derivation Path: TS 36.579-1 [2	, table 5.5.2.5.1-2, condition P	RIVATE-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Priv-Answer-Mode				
answer-mode-value	"Auto"			
require	Parameter has no value			
Alert-Info				
value	" <file: dev="" null="">"</file:>			
Content-Type	"multipart/mixed"			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	"application/sdp"			
SDP Message	As described in Table 6.2.17.3.3-3			
MIME-Content-Type	"application/vnd.3gpp. mcptt-info+xml"			
MCPTT-Info	As described in Table 6.2.17.3.3-2			

Derivation Path: TS 36.579-1 [2], table 5.5.3.2.1-1, condition PRIVATE-CALL					
Information Element	Value/remark	Comment	Reference	Condition	
mcpttinfo					
mcptt-Params					
session-type	"ambient-listening"				
anyExt					
ambient-listening-type	"remote-init"				

Table 6.2.17.3.3-2: MCPTT-Info in SIP INVITE (Table 6.2.17.3.3-1)

Table 6.2.17.3.3-3: SDP Message in SIP INVITE (Table 6.2.17.3.3-1)

Derivation Path: TS 36.579-1 [2], table 5.5.3.1.1-1, condition PRIVATE-CALL						
Information Element	Value/remark	Comment	Reference	Condition		
media attribute		a=line attribute=recvonly				
flag	"recvonly"					

Table 6.2.17.3.3-4: Floor Taken (Step 3, Table 6.2.17.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-7 condition ON-NETWORK.							
Information Element	Value/remark	Comment	Condition				
Permission to Request the Floor							
Permission to Request the Floor	"0"	The receiver is NOT permitted to request floor					
Floor Indicator							
Floor Indicator	'10xxxx00 0000000	Bit A=1 (Normal call) bits=x mean any value					

Table 6.2.17.3.3-5: SIP 200 (OK) (Step 6, Table 6.2.17.3.2-1)

Derivation Path: TS 36.579-1 [2], table 5.5.2.17.1.2-1							
Information Element	Value/remark	Comment	Reference	Condition			
Content-Type	Not Included						

6.3 Location

6.3.1 On-network / Location / Event Triggered Location Information report

6.3.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client)registered and authorized for MCPTT service and not in an emergency state
and having received a location information configuration message providing configuration parameters
for NonEmergencyLocationInformation requesting indication of ESGIs and location information, and,
TriggeringCriteria set to Cell change, and, a none zero minimumReportInterval timer }
ensure that {

when { UE moves to a different cell }

then { UE (MCPTT Client) sends location report obeying the set in the location configuration
parameters for NonEmergencyLocationInformation including waiting for the expiry of
minimumIntervalLength timer for before reporting }

}

(2)

with { UE (MCPTT Client)registered and authorized for MCPTT service and not in an emergency state
and having received a location information configuration message providing configuration parameters
for NonEmergencyLocationInformation requesting indication of ESGIs and location information, and,
TriggeringCriteria set to PLMN change and PERIODIC, and, a none zero minimumReportInterval timer }
ensure that {

when { UE moves to a cell belonging to different however allowed for communication PLMN }
 then { UE (MCPTT Client) sends location report obeying the set in the location configuration
 parameters for NonEmergencyLocationInformation and resets all triggers }
 }
}

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT service and having received a location
information configuration message providing configuration parameters for
NonEmergencyLocationInformation requesting indication of ESGIs and location information, and,
TriggeringCriteria set to PLMN change and PERIODIC, and, a none zero minimumReportInterval timer }
ensure that {
 when { when the PERIODIC trigger fires up }
 then { UE (MCPTT Client) sends location report obeying the set in the location configuration
 parameters for NonEmergencyLocationInformation }

6.3.1.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clause 13.3.2, 13.3.4.1, 13.3.4.2. Unless otherwise stated, these are Rel-13 requirements.

[TS24.379 clause 13.3.2]

}

Upon receiving a SIP MESSAGE request containing:

- 1) an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref set to the value "urn:urn-7:3gpp-service.ims.icsi.mcptt";
- 2) a Content-Type header field set to "application/vnd.3gpp.mcptt-location-info+xml"; and
- 3) an application/vnd.3gpp.mcptt-location-info+xml MIME body with a <Configuration> root element included in the <location-info> root element;

then the MCPTT client:

- 1) shall store the contents of the <Configuration> elements;
- 2) shall set the location reporting triggers accordingly; and
- 3) shall start the minimumReportInterval timer.

[TS 24.379 clause 13.3.4.1]

If a location reporting trigger fires the MCPTT client checks if the minimumReportInterval timer is running. If the timer is running the MCPTT client waits until the timer expires. When the minimumReportInterval timer fires, the MCPTT client:

1) shall, if any of the reporting triggers are still true, send a location information report as specified in subclause 13.3.4.2.

[TS 24.379 clause 13.3.4.2]

If the MCPTT client does not need to send a SIP request for other reasons, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33]. The MCPTT client;

- 1) shall include in the Request-URI, the SIP URI received in the P-Asserted-Identity header field in the received SIP MESSAGE request for location report configuration;
- 2) shall include a Content-Type header field set to "application/vnd.3gpp.mcptt-location-info+xml";

- 3) shall include an application/vnd.3gpp.mcptt-location-info+xml MIME body and in the <location-info> root element include:
 - a) a <Report> element and if the Report was triggered by a location request include the <ReportID> attribute set to the value of the <RequestID> attribute in the received Request;
 - b) a <TriggerId> child element set to the value of each <Trigger-Id> value of the triggers that have fired; and
 - c) the location reporting elements corresponding to the triggers that have fired;
- 4) shall include an Accept-Contact header field with the media feature tag g.3gpp.mcptt along with parameters "require" and "explicit" in accordance with IETF RFC 3841 [6];
- 5) shall set the minimumReportInterval timer to the minimumReportInterval time and start the timer;
- 6) shall reset all triggers; and
- 7) shall send the SIP MESSAGE request as specified in 3GPP TS 24.229 [4].

6.3.1.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 and Cell 2 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document). The simulated Cell 4 shall belong to PLMN2. Which cell is simulated at which time and with what power is described in TS 36.579-1 [2], subclause 5.4.9 'Generic Test Procedure for MCPTT communication in E-UTRA / Change of cells' which is called during the test sequence.
- GNSS simulator to simulate a location.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 to provide a location, as defined in TS 36.508 [24] Table 4.11.2-2, step 1 of scenario #4.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state.
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.3.1.3.2 Test procedure sequence

Table 6.3.1.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message	— "	
0	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command				
	(+CUTCR).				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.4 'Generic Test Procedure for MCPTT CT communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
1	The SS sends a location reporting	<	SIP MESSAGE	-	-
	configuration containing the cell change trigger				
	criteria and the minimum report interval to the				
	UE (MCPTT Client). Provision of serving and				
	neighbouring cells ECGIs is requested in addition to the Location Information. The				
	minimumReportInterval time is set to 25 sec.				
1A	SS starts timer=25 sec (the non-emergency	-	-	-	-
	minimumReportInterval interval length defined				
	in the SIP MESSAGE sent in step 1).				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
4.0	connection				
1B	Trigger the GNSS simulator to start step 2 of	-	-	-	-
	Scenario #4 to simulate the UE moving to location #7 inside Geographical area #1 as				
	defined in TS 36.508 [24] Table 4.11.2-2.				
1C	Wait 10 sec to allow the simulated location to	-	-	-	-
	move approximately 100 m from the original				
	location to location #7.				
2	Make the SS simulate cell change (same	-	-	-	-
	PLMN). The related E-UTRA/EPC actions are				
	described in TS 36.579-1 [2], subclause 5.4.9 'Generic Test Procedure for MCPTT				
	communication in E-UTRA / Change of cells'				
	steps 1 and 2. The test sequence below shows				
	only the MCPTT relevant messages				
	exchanged.				
	NOTE: Cell 2 and Cell 1 will be active.				
2A	Timer=25 sec expires.	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment	-	-	-	-
	are described in TS 36.579-1 [2], subclause				
	5.4.3 'Generic Test Procedure for MCPTT CO				
	communication in E-UTRA'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
3	Check: Does the UE (MCPTT Client) send a	>	SIP MESSAGE	1	Р
	SIP MESSAGE containing the Cell change trigger identification along with the location				
	information report, the current location				
	coordinates as specified in step 1B, and, the				
	ECGIs of Cells 1 and 2?				
4-8	Void	-	-	-	-
9	The SS sends a location reporting	<	SIP MESSAGE	-	-
	configuration containing the PLMN change				
	trigger criteria, and, periodic trigger criteria with <i>PeriodicReport</i> reporting interval set to 60 sec				
	and the minimum report interval to the UE				
	(MCPTT Client). Provision of cells ECGIs is				
	requested in addition to the Location				
	Information. The minimumReportInterval time				
	is set to 10 sec.				

9A SS starts time=60 sec (the PenduReport interval defined in the IVM ESSAGE sen in step 9). - - - - NOTE: The value of 60 sec has been chosen arbitrary however if the behaviour described in sleps 99. - - - - 0 EXCEPTION: SS releases the E-UTRA connection - - - - - 9B Tigger the GNSS simulator to start step 4 of Scenario #4 to simulate the UE moving to location 78 inside Geographical area f1 as defined in TS 36:500 [24] Table 4.11.2-2. - - - - - 0C Wart 10 sec to allow the simulated focation to move approximately 100 m from the original location to location #4.11 Communication in E- UTRA / Change ot cells steps 3 and 4. The test sequence bolew shows only the MCPTT referse the MSC 574-1 [2], subclause 4.4.9 Generic Test Procedure for MCPTT call setablishment are destribed in TS 36.574-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT call establishment are destribed in TS 36.574-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT call establishment are destribed in TS 36.574-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT call establishment are destribed in TS 36.574-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT call establishment active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. - - - - 111 Check: Does the UE (MCPTT Callens) end active at this moment of time)? NOTE: The minimumReportinterval time (set in s					-	
step 9). NOTE: The value of 60 sec has been chosen arbitrary however if the behaviour described in steps 99-11 takes longer than 60 sec inheritant value needs to be adjusted. - EXCEPTION: SS releases the E-UTRA connection - - - 98 Trigger the GNSS simulator to start step 4 of Scenario #4 to simulate the UE moving to location 48 inside Geographical area #1 as defined in TS 36:508 [24] Table 4.11.2-2. - - - 90 Wait 10 sec to allow the simulated tocation to move approximately 100 m from the original location to location #8. - - - 10 Make the SS simulator PLMN change. The releated to URALFCE cactions are described in TS 36:573-1[2], subclause 5.4.9 'Generic Test Procedure for MCPTT call estabilishment are described in TS 36:579-1[2], subclause 5.4.3 'Generic Test PTC cactions which messages exchanged. - - - 11 Check Does the UE (MCPTT Calevant messages suchanged. - - - - 11 Check Does the UE (MCPTT Calevant messages suchanged. - - - - 12 Check Does the UE (MCPTT calevant messages suchanged. - - - - 13 Check Does the UE (MCPTT Clent) send step 9B, as already expired latest at the end of step 9B, as already expired latest at the end of step 9B, as already expire	9A	SS starts timer=60 sec (the PeriodicReport	-	-	-	-
NOTE: The value of 60 sec has been chosen arbitrary however if the behavour described in steps 9B-11 takes longer than 60 sec then this value needs to be adjusted. - - EXCEPTION: SS releases the E-UTRA connection - - - 9B Trigger the GNSS simulator to start stop 4 of Scenario 44 to simulate the UE moving to location 48 inside Geographical area 41 as defineed in TS 36:508 [241 Table 4.11 2.2. - - - 9C Walt 10 sect to allow the simulated location to move approximately 100 m from the original location 16 location 48. - - - 10 Make the SS simulate 2.41 Table 4.11 2.2. - - - - 10 Make the SS simulate 2.43 for the original location 16 location 48. - - - - 10 Make the SS simulate 5.4.3 (Seneric Test Procedure for MCPTT communication in E- UTRA / Change of cells steps 3 and 4. The tast sequence below shows only the MCPTT relevant messages exchanged. - - - - EXCEPTION: The CITRA/EPC actions which are related to the MCPTT cell establishment are destrole 11 TS 35.5712 [2], subleause 5.4.3 Generic Test Procedure for MCPTT cells and the ECGI oc all 4 (the only cell being active 11 merefile. - - - 111 Check: Does in the GE containing the PLINA' change trigger identification along with the tocation information report, the ourent location the Coll cell 4 (the		interval defined in the SIP MESSAGE sent in				
arbitrary however if the behaviour described in steps 99-11 takes longer than 60 set then this value needs to be adjusted. EXCEPTION: SS releases the E-UTRA connection BB Trigger the GNSS simulator to start step 4 of Scenario #4 to simulate the UE moving to location 48 inside Geographical array 41 as defined in TS 38.508 [24] Table 4.11.2-2. 9C Wait 10 sec to allow the simulated location to move approximately 100 m from the original location to location #8. 10 Make the SS simulate PLMN change. The releted E-UTRA/EPC actions are described in TS 36.579-1[2], subclause 5.4.9 Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. 11 Check: Does the UE (MCPTT Client) short messages exchanged. 11 Check: Does the UE (MCPTT Client) short messages exchanged. 11 Check: Does the UE (MCPTT Client) short messages exchanged. 12 Check: Does the UE (MCPTT Client) short messages exchanged. 13 SS starts Timer=60. 14 SS starts Timer=60. 15 SX 3.579-1[2], subclause 14 SS cancels Timer=60. 15 EXCEPTION: St releases the E-UTRA 16 Check: Does the UE (MCPTT Client) short messages exchanged. 17 Check: Does the UE (MCPTT Client) short messages exchanged. 18 SS starts Timer=60. 19 EXCEPTION: St releases the E-UTRA 10 Check: Does the UE (MCPTT Client) short messages exchanged. 10 Check: Does the UE (MCPTT Client) short are related to the MCPTT relevant messages exchanged. 14 SS starts Timer=60. 15 EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT relevant messages exchanged. 14 SS starts Timer=60. 15 EXCEPTION: St releases the E-UTRA 16 Check: Does the UE (MCPTT Client) short are related to the MCPTT relevant messages exchanged. 16 Check: Does the UE (MCPTT Client) short are related to the MCPTT relevant messages exchanged. 17 Check: Does the UE (MCPTT Client) short are related to the MCPTT relevant messages exchanged. 18 SIP MESSAGE containing the period trigger below shows only the CLITR						
steps 98-11 takes longer than 60 sec then this		NOTE: The value of 60 sec has been chosen				
value needs to be adjusted. - EXCEPTION: SS releases the E-UTRA - - 9B Trigger the GNSS simulator to start step 4 of Somaria #4 to simulate the UE moving to location f% inside Geographical area #1 as defined in TS 36.508 [24] Table 4.11.2-2. - - 9C Wait To set to allow the simulated beloation to move approximately 100 m trom the original location to location #8. - - - 10 Make the SS simulate PLMN change. The related E-UTRA/EPC actions are described in TS 36.579+1 [2], subclause 5.4.9 Generic Test Procedure for MCPTT communication in E-UTRA/EPC actions are described in TS 36.579+1 [2], subclause 5.4.9 Generic Test Procedure for MCPTT communication in E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 66.579+1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT relevant messages exchanged. - - 11 Check: Does the UE (MCPTT Client) send (NCPTT COC communication in FUTRA/EPC actions which the folication informating the PLMN change trigger identification along with the folication informating the PLMN change trigger identification along with the location coordinates as specified in step 98, and the ECGI of cell (the only cell being active at this moment of time)? SIP MESSAGE 2 P 113 SS cancels Timer=60. - - - - - 113 Starts Timer=60. - - - - - - - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
EXCEPTION: SS releases the E-UTRA - - - - 9B Trigger the GNSS simulator to start step 4 of Scenario #4 to simulate the UE moving to Location #8 inside Geographical area #1 as defined in TS 36.508 [24] Table 4.11.2.2. -		steps 9B-11 takes longer than 60 sec then this				
connection connection 9B Trigger the GNSS simulator to start step 4 of Scenario #4 to simulate the UE moving to location #8 inside Geographical area #1 as defined in T3 38.508 [24] Table 4.11.2.2. - - - - 9C Wait To Sac to allow the simulated blocation to incation to location #8. - - - - 9C Wait To Sac to allow the simulated blocation to incation to location #8. - - - - 10 Make the SS simulate PLMN change. The related E-UTRA/EPC actions are described in TS 35.79+1 (2) subclause 5.4.9 Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells steps 3 and 4. The test sequence below shows only the MCPTT relevent messages exchanged. - - - 10 Make the SS Simulate PLMN change. The test sequence below shows only the MCPTT coll communication in E-UTRA. The test sequence below shows only the MCPTT cell establishment are described in TS 36.73-1 (2) subclause 5.4.3 Generic Test Procedure for MCPTT COC communication in FUTRA: The test sequence below shows only the MCPTT cell establishment active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 98. - - - 11 S cancels Timer-60. - - - - - 113 S stanst Timer-60. - -		value needs to be adjusted.				
9B Trigger the GNSS simulator to start step 4 of Scenario 44 to simulate the UE moving to location #8 inside Geographical area #1 as defined in TS 36.508 [24] Table 4.11.2-2. -	-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
Scienario #4 to simulate the UE moving to location #8 inside Geographical area #1 as defined in TS 36.508 [24] Table 4.11.2-2. - - - 9C Wait 10 secto allow the simulated location to move approximately 100 m from the original location to location #8. - - - 10 Make the SS simulate PLMN change. The related E-UTRA/EPC actions are described in TS 36.579+ [2], subclause 5.4.3 Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 1 EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT cell establishment are described in TS 36.579+ [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA.'The test sequence below shows only the MCPTT relevant messages exchanged. >> SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B. as already expired latest at the end of step 9B. - - - - 11 Starts Timer=60. - - - - - - 12 Void. - - - - - - - 13 Starts Timer=60. - -		connection				
Scienario #4 to simulate the UE moving to location #8 inside Geographical area #1 as defined in TS 36.508 [24] Table 4.11.2-2. - - - 9C Wait 10 secto allow the simulated location to move approximately 100 m from the original location to location #8. - - - 10 Make the SS simulate PLMN change. The related E-UTRA/EPC actions are described in TS 36.579+ [2], subclause 5.4.3 Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 1 EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT cell establishment are described in TS 36.579+ [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA.'The test sequence below shows only the MCPTT relevant messages exchanged. >> SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B. as already expired latest at the end of step 9B. - - - - 11 Starts Timer=60. - - - - - - 12 Void. - - - - - - - 13 Starts Timer=60. - -	9B	Trigger the GNSS simulator to start step 4 of	-	-	-	-
location #8 inside Geographical area #1 as defined in TS 36.508 [24] Table 4.112.2. - - - 9C Wait 10 sect to allow the simulated location to move approximately 100 m from the original location to location #8. - - - 10 Make the SS simulate PLMN change. The related LUTRA/PC actions are described in TS 36.579-1[2], subclause 5.4.9 (Generic Test Procedure for MCPTT communication in E- UTRA / Change of cell's steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - - - - EXCEPTION: The E-UTRA/PCPC actions which are related to the MCPTT cell establishment are described in TS 36.579-1[2], subclause 5.4.3 (Generic Test Procedure for MCPTT CO communication in E-UTRA. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE: The minimumReportInterval time (set in step 3) has already expired latest at the end of step 39. > SIP MESSAGE 2 P 11A SS cancels Timer=60. - - - - - 12 Void. - - - - - - 11A SS cancels Timer=60. - - - - - - - 11B SS stards Timer=60. -<						
defined in TS 36.508 [24] Table 4.11.2-2. - 9C Wait 10 secto allow the simulated location to incation #8. - 10 Make the SS simulate PLMN change. The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.9 Genetic Test Procedure for MCPTT communication in E-UTRA/EPC actions with the MCPTT relevant messages exchanged. - 11 Charles Coll Steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - 12 EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA/EPC actions which the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Clent) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE - - 13 Timer=60. - - - - - 14 Scacells Timer=60. - - - - - 14 Scacells Timer=60. - - - - -						
9C Wait 10 sec to allow the simulated location to move approximately 100 m from the original location to location #8. - <						
move approximately 100 m from the original location to location with - <td< td=""><td>90</td><td></td><td></td><td>-</td><td>- I</td><td>_</td></td<>	90			-	- I	_
location to location #8.	50					
10 Make the SS simulate PLNN change. The related F-UTRAPPC actions are described in TS 36.579-1 [2], subclause 5.4.9 'Generic Test Procedure for MCPTT communication in E-UTRA/Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
related E-UTRA/EPC actions are described in TS 36:579 + 1(2), subclause 5.4 9 Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36:579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 11 Check: Does the UE (MCPTT Client) send (NCTE:) A SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time]? NOTE: The minimumReportInterval time (set in step 9] has already expired latest at the end of step 9B. - - - 11A SS cancels Time=60. - - - - 11B SS starts Time=60. - - - - 12 Void. - - - - 12 Void. - - - - 13 Time=60 sexpires - - - - 14 Check: Does the UE (MCPTT Cellont) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interva	10					
TS 36:579-1 [2], subclause 5.4.9 'Generic Test Procedure for MCPTT communication in E- UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36:579-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT CO communication in E-UTRA?. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 98, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9 has already expired latest at the end of step 98. - - - 11A SS cancels Timer=60. - - - - 12 Void. - - - - 13 Timere60 sec expires - - - - 14 Check: Does the UE (MCPTT cell establishment are related to the MCPTT relevant messages exchanged. - - - 14 Streefer Tost Procedure for MCPTT cell communication in 15 discover 1[2], subclause 5.4.3 'Generic Test Procedure for MCPTT cell communication in the UTRA? The test sequence below shows only the MCPTT relevant messages exchanged. -	10		-	-	-	-
Procedure for MCPTT communication in E-UTRA/ Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - • EXCEPTION: The E-UTRA/EPC actions which are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 11 Check: Does the UE (MCPTT Client) send (NCPT) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P 11A SS cancels Time=60. - - - - 11B SS starts Time=60. - - - - 11B SS tasters Time=60. - - - - 12 Void. - - - - 12 Void. - - - - 14 Check: Does expires - - - - 12 Void. - - - - 13 Time=60. - - - - - 14 Check: Does						
UTRA / Change of cells' steps 3 and 4. The test sequence below shows only the MCPTT relevant messages exchanged. - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT cellent) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECG I oc ell 4 (the only cell being active at this moment of time)? > SIP MESSAGE - - 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECG of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P 11A AS cancels Timer=60. - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - 14 Check: Does the UE (MCPTT Cellent) send a SIP MESSAGE containing the periodic trigger identification along with becken berger Minimum interval length expired? - - - 14 Check: Does the UE (MCPTT Cellent) send a SIP MESSAGE - - - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
test sequence below shows only the MCPTT relevant messages exchanged. - - NOTE: Cell 4 only will be active. - - are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5 4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA. The test sequence below shows only the MCPTT relevant messages exchanged. - - 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLINN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? - - 11A SS cancels Timer=60. - - - 11B Starady expired latest at the end of step 9B. - - - 11A SS cancels Timer=60. - - - - 11B Staratis Timer=60. - - - - 12 Void. - - - - 12 Void. - - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with MCPTT relevant messages exchanged. - - - 12 Void. - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
relevant messages exchanged. - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location information report, the current location information report, the current of the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P 11A SS cancels Timer=60. - - - - 11B SS tasts Timer=60. - - - - 11B SS tastars Timer=60. - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - 14 SS cancels Timer=60. - - - - 12 Void. - - - - - 13 Timer=60 sec expires - - - - -						
NOTE: Cell 4 only will be active. - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 98, and the ECGI of cell 4 (the only cell being active at this moment of time? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 98. - - 11A SS cancels Timer=60. - - - 11B SS starts Timer=60. - - - 12 Void. - - - 13 Timer=60 sec expires - - - - EXCEPTION: SS releases the E-UTRA - - - 13 Timer=60 sec expires - - - - 14 Check: Does the UE (MCPTT Cell send stables ment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT cell send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergen						
• EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. -						
are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? > SIP MESSAGE 2 P 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - 11B SS starts Timer=60. - - - 12 Void. - - - 12 Void. - - - 13 Timer=60 sec expires - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT cell establishment are described in TS 36.579-1[2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? > SIP MESSAGE			<u> </u>			
are described in TS 36.579-1 [2], subclause	-		-	-	-	-
5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - 11B SS cancels Timer=60. - - - - 12 Void. - - - - - 12 Void. - - - - - - 13 Timer=60 sec expires -						
communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLUMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECG of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9B. SIP MESSAGE 2 P 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT cell establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-mergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - - - <td></td> <td>are described in TS 36.579-1 [2], subclause</td> <td></td> <td></td> <td></td> <td></td>		are described in TS 36.579-1 [2], subclause				
below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. - - - - 118 SS cancels Timer=60. - - - - - 118 SS starts Timer=60. - - - - - 119 SS starts Timer=60. - - - - - - 114 SS cancels Timer=60. -						
below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 2 P 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. - - - - 118 SS cancels Timer=60. - - - - - 118 SS starts Timer=60. - - - - - 119 SS starts Timer=60. - - - - - - 114 SS cancels Timer=60. -		communication in E-UTRA'. The test sequence				
messages exchanged. > 11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? SIP MESSAGE 2 P NOTE: The minimumReportInterval time (set in step 9B. - - - - 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA/EPC actions which are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA/EPC actions which are telated to the MCPTT relevant messages exchanged. - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - -						
11 Check: Does the UE (MCPTT Client) send (NOTE) a SIP MESSAGE containing the PLIMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. - - - 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - 12 Void. - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - 12 Void. - - - - 13 Timer=60 sec expires - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.						
(NOTE) a SIP MESSÀGE containing the PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9B. SS starts Timer=60. - EXCEPTION: SS releases the E-UTRA - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment rae described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - EXCEPTION: SS releases the E-UTRA -	11		>	SIP MESSAGE	2	Р
PLMN change trigger identification along with the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. - - - 11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - 12 Void. - - - - 12 Void. - - - - - EXCEPTION: SS releases the E-UTRA connection - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - - - - EXCEPTION: SS releases the E-UTRA - - -			-		_	-
the location information report, the current location coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9B. - - 11A SS cancels Timer=60. - - - 11B SS starts Timer=60. - - - - EXCEPTION: SS releases the E-UTRA connection - - - 12 Void. - - - - EXCEPTION: SS releases the E-UTRA connection - - - 13 Timer=60 sec expires - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? - - - EXCEPTION: SS releases the E-UTRA - - -						
Iocation coordinates as specified in step 9B, and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B. 11A SS cancels Timer=60. - - 11B SS cancels Timer=60. - - - EXCEPTION: SS releases the E-UTRA connection - - 12 Void. - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? > SIP MESSAGE 3 P - EXCEPTION: SS releases the E-UTRA - - - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE - - - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? - -						
and the ECGI of cell 4 (the only cell being active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B11ASS cancels Timer=6011BSS starts Timer=60EXCEPTION: SS releases the E-UTRAEXCEPTION: SS releases the E-UTRA12VoidEXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged>14Check: Does the UE (MCPTT Client) send a SIP MESSAGE>14Check: Does the UE (MCPTT Client) send a site P Mas already expired before step 13>-EXCEPTION: SS releases the E-UTRA>						
active at this moment of time)? NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B.11ASS cancels Timer=6011BSS starts Timer=60EXCEPTION: SS releases the E-UTRA connection-12VoidEXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged>14Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13>-EXCEPTION: SS releases the E-UTRA-						
NOTE: The minimumReportInterval time (set in step 9) has already expired latest at the end of step 9B.11ASS cancels Timer=6011BSS starts Timer=60EXCEPTION: SS releases the E-UTRA connection-12VoidEXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged>14Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13>-EXCEPTION: SS releases the E-UTRA-						
step 9) has already expired latest at the end of step 9B. - - 11A SS cancels Timer=60. - - 11B SS starts Timer=60. - - - EXCEPTION: SS releases the E-UTRA connection - - 12 Void. - - 13 Timer=60 sec expires - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - - EXCEPTION: SS releases the E-UTRA - - -						
step 9B						
11A SS cancels Timer=60. - - - - 11B SS starts Timer=60. - - - - - EXCEPTION: SS releases the E-UTRA connection - - - - 12 Void. - - - - - 13 Timer=60 sec expires - - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? -<						
11B SS starts Timer=60. - - - - - EXCEPTION: SS releases the E-UTRA connection - - - - 12 Void. - - - - - 13 Timer=60 sec expires - - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? - SIP MESSAGE 3 P NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - - - - EXCEPTION: SS releases the E-UTRA - - - - -	44.0					
- EXCEPTION: SS releases the E-UTRA - - - - - 12 Void. - - - - - - 13 Timer=60 sec expires - - - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. -			-	-	-	-
connection12Void13Timer=60 sec expiresEXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged14Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13EXCEPTION: SS releases the E-UTRA	11B		-	-		-
12 Void. - - - - - 13 Timer=60 sec expires - - - - - - EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. -	-		-	-	-	-
13 Timer=60 sec expires -	<u> </u>		ļ			
- EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. -			-	-	-	-
- EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. -	13	Timer=60 sec expires	-	-	-	-
are described in TS 36.579-1 [2], subclause subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger > identification along with location information > report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - EXCEPTION: SS releases the E-UTRA -	-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
are described in TS 36.579-1 [2], subclause subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger > identification along with location information > report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - EXCEPTION: SS releases the E-UTRA -		are related to the MCPTT call establishment				
5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? > SIP MESSAGE 3 P 						
communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. > SIP MESSAGE 3 P - EXCEPTION: SS releases the E-UTRA - - - - -						
below shows only the MCPTT relevant messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. > SIP MESSAGE 3 P - EXCEPTION: SS releases the E-UTRA - - - - -						
messages exchanged. > SIP MESSAGE 3 P 14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. > SIP MESSAGE 3 P - EXCEPTION: SS releases the E-UTRA - - - - -						
14 Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The <i>minimumReportInterval</i> time (set in step 9) has already expired before step 13. > SIP MESSAGE 3 P - EXCEPTION: SS releases the E-UTRA - - - - -						
SIP MESSAGE containing the periodic trigger identification along with location information report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - - EXCEPTION: SS releases the E-UTRA - -	1/		>	SIP MESSAGE	3	P
identification along with location information report after the non-emergency minimum interval length expired? NOTE: The <i>minimumReportInterval</i> time (set in step 9) has already expired before step 13. - EXCEPTION: SS releases the E-UTRA	'+				5	
report after the non-emergency minimum interval length expired? NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. - EXCEPTION: SS releases the E-UTRA		identification along with location information				
interval length expired? NOTE: The <i>minimumReportInterval</i> time (set in step 9) has already expired before step 13. - EXCEPTION: SS releases the E-UTRA						
NOTE: The minimumReportInterval time (set in step 9) has already expired before step 13. -						
step 9) has already expired before step 13. - - EXCEPTION: SS releases the E-UTRA - - - -						
- EXCEPTION: SS releases the E-UTRA						
	-		-	-	-	-
		connection				

6.3.1.3.3

Specific message contents

Table 6.3.1.3.3-1: SIP MESSAGE (Step 1, Table 6.3.1.3.2-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-2			

Derivation Path: TS 36.579-1 [2], Information Element	Value/remark	Comment	Reference	Condition
location-info	Value/Ternark	Comment	Reference	Condition
Configuration				
Configuration				
NonEmergencyLocationInformat ion				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	present	Provision of information in the report is requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	present			
minimumIntervalLength	"25"	the value in seconds		
EmergencyLocationInformation"				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	present	Provision of information in the report is requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	present	Provision of information in the report is requested.		
minimumIntervalLength	"30"	the value in seconds		
TriggeringCriteria				
CellChange				
AnyCellChange				
TriggerID	"CELLCHANGE"			

Table 6.3.1.3.3-2: Location-Info in SIP MESSAGE (Table 6.3.1.3.3-1)

Table 6.3.1.3.3-3: SIP MESSAGE (Step 3, Table 6.3.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-4			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.1-1			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Report				
TriggerID	"CELLCHANGE"			
CurrentLocation				
CurrentServingEcgi	The E-UTRAN Cell Global Identification (ECGI) of Cell 2			
NeighbouringEcgi	The ECGI of Cell 1			
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message.		
longitude	The longitude value as specified for location number #7 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.			
latitude	The latitude value as specified for location number #7 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00013 degrees.			
ReportType	"NonEmergency"			

Table 6.3.1.3.3-4: Location-Info in SIP MESSAGE (Table 6.3.1.3.3-3)

Table 6.3.1.3.3-5: Void

Table 6.3.1.3.3-6: Void

Table 6.3.1.3.3-7: Void

Table 6.3.1.3.3-8: Void

Table 6.3.1.3.3-9: SIP MESSAGE (Step 9, Table 6.3.1.3.2-1)

Derivation Path: TS 36.579-1 [2 Information Element	J, Table 5.5.2.7.2-1 Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-10			

Information Element	Value/remark	Comment	Reference	Condition
location-info				
Configuration				
NonEmergencyLocationInformat				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	present	Provision of information in the report is requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	present	Provision of information in the report is requested.		
minimumIntervalLength	"10"	the value in seconds		
EmergencyLocationInformation"				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	present	Provision of information in the report is requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	present	Provision of information in the report is requested.		
minimumIntervalLength	"70"	the value in seconds		
TriggeringCriteria				
PLMNChange				
AnyPLMNChange				
TriggerID	"ANY PLMN"			
PeriodicReport				
extension base	"60"	the value in seconds of the time which determines the periodic provision of the report		
TiggerID	"PERIODIC"			

Table 6.3.1.3.3-10: Location-Info in SIP MESSAGE (Table 6.3.1.3.3-9)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-12			

Table 6.3.1.3.3-12: Location-Info in SIP MESSAGE (Table 6.3.1.3.3-11)

Derivation Path: TS 36.579-1 [2	2], Table 5.5.3.4.1-1			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Report				
TriggerID	"ANY PLMN"			
CurrentLocation				
CurrentServingEcgi	The ECGI of Cell 4			
NeighbouringEcgi	not present	Only Cell 4 is active at this moment of time (see TS 36.579-1 [2], subclause 5.4.9)		
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message.		
longitude	The longitude value as specified for location number #8 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.			
latitude	The latitude value as specified for location number #8 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00013 degrees.			
ReportType	"NonEmergency"			1

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-14			

Table 6.3.1.3.3-14: Location-Info in SIP MESSAGE (Table 6.3.1.3.3-13)

Information Element	Value/remark	Comment	Reference	Condition
location-info				
Report				
TriggerID	"PERIODIC"			
CurrentLocation				
CurrentServingEcgi	The ECGI of Cell 4			
NeighbouringEcgi	not present			
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message.		
longitude	The longitude value as specified for location number #8 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.			
latitude	The latitude value as specified for location number #8 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00013 degrees.			
ReportType	"NonEmergency"			

6.3.2 On-network / Location/ On-demand Location Information Request

6.3.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client)registered and authorized for MCPTT service and not in an emergency state
and having received a location information configuration message providing configuration parameters
for both NonEmergencyLocationInformation and EmergencyLocationInformation }
ensure that {

when { UE (MCPTT Client) receives a location information requestbefore the minimumReportInterval
timer has expired }

then { UE (MCPTT Client)does not wait for the minimumReportInterval timer to expire, and, sends"immediately" a SIP MESSAGE containing location information report including information in

accordance with the NonEmergencyLocationInformation configuration and the <ReportID> attribute set to the value of the <RequestID> attribute in the received Request, and, resets the minimumReportInterval timer } }

(2)

with { UE (MCPTT Client)registered and authorized for MCPTT service and not in an emergency state
and having received a location information configuration message }
ensure that {

when { UE (MCPTT Client) receives a new location information configuration message and ConfigScope set to 'Full' }

then { UE (MCPTT Client) stores the contents of the <Configuration> elements thereby overriding the previous configuration }

}

6.3.2.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clauses 13.3.1, 13.3.2, 13.3.3, 13.3.4.2, F.3.3. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379 clause 13.3.2]

The MCPTT client sends a location report when one of the trigger criteria is fulfilled or when it receives a request from the participating MCPTT function to send a location report. To send the location report the MCPTT client can use an appropriate SIP message that it needs to send for other reasons, or it can include the location report in a SIP MESSAGE request.

To send a location report, the MCPTT client includes in the SIP MESSAGE request an application/vnd.3gpp.mcpttlocation-info+xml MIME body as specified in clause F.3. The MCPTT client populates the elements in accordance with its reporting configuration. Further location information may also be included in the P-Access-Network-Info header field.

[TS 24.379 clause 13.3.2]

Upon receiving a SIP MESSAGE request containing:

- 1) an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref set to the value "urn:urn-7:3gppservice.ims.icsi.mcptt";
- 2) a Content-Type header field set to "application/vnd.3gpp.mcptt-location-info+xml"; and
- 3) an application/vnd.3gpp.mcptt-location-info+xml MIME body with a <Configuration> root element included in the <location-info> root element;

then the MCPTT client:

1) shall store the contents of the <Configuration> elements;

•••

3) shall start the minimumReportInterval timer.

[TS 24.379 clause 13.3.3]

Upon receiving a SIP MESSAGE request containing

- 1) an Accept-Contact header field with the media feature tag g.3gpp.icsi-ref set to the value "urn:urn-7:3gpp-service.ims.icsi.mcptt";
- 2) a Content-Type header field set to "application/vnd.3gpp.mcptt-location-info+xml"; and
- 3) an application/vnd.3gpp.mcptt-location-info+xml MIME body with a <Request> element included in the <location-info> root element;

then the MCPTT client:

1) shall send a location report as specified in subclause 13.3.4; and

2) shall reset the minimumReportInterval timer.

[TS 24.379 clause 13.3.4.2]

If the MCPTT client does not need to send a SIP request for other reasons, the MCPTT client shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33]. The MCPTT client;

- 1) shall include in the Request-URI, the SIP URI received in the P-Asserted-Identity header field in the received SIP MESSAGE request for location report configuration;
- 2) shall include a Content-Type header field set to "application/vnd.3gpp.mcptt-location-info+xml";
- 3) shall include an application/vnd.3gpp.mcptt-location-info+xml MIME body and in the <location-info> root element include:
 - a) a <Report> element and if the Report was triggered by a location request include the <ReportID> attribute set to the value of the <RequestID> attribute in the received Request;

. . .

- 4) shall include an Accept-Contact header field with the media feature tag g.3gpp.mcptt along with parameters "require" and "explicit" in accordance with IETF RFC 3841 [6];
- 5) shall set the minimumReportInterval timer to the minimumReportInterval time and start the timer;

•••

7) shall send the SIP MESSAGE request as specified in 3GPP TS 24.229 [4].

[TS 24.379 clause F.3.3]

<Configuration> element has a <ConfigScope> attribute that can assume the values "Full" and "Update". The value "Full" means that the Configuration> element contains the full location configuration which replaces any previous location configuration. The value "Update" means that the location configuration is in addition to any previous location configuration. To remove configuration elements a "Full" configuration is needed. The <Configuration> element contains the following child elements:

- 6.3.2.3 Test description
- 6.3.2.3.1 Pre-test conditions

System Simulator:

- SS (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 and Cell 2 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- GNSS simulator to simulate a location.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

Preamble:

- 2 cells are simulated by the SS. Cell 1=Serving cell, Cell 2 = Suitable neighbour intra-frequency cell in accordance with TS 36.508 [24].

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 to provide a location, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- UE States at the end of the preamble
 - The UE is in E-UTRA Registered, Idle Mode state on Cell 1 (Serving cell).
 - The MCPTT Client Application has been activated and User has registered-in as the MCPTT User with the Server as active user at the Client.

6.3.2.3.2 Test procedure sequence

Table 6.3.2.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
0	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command				
	(+CUTCR).				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the connection establishment for				
	the purpose of MCPTT sending the				
	message(s) below are described in TS 36.579-				
	1 [2], subclause 5.4.4 'Generic Test Procedure				
	for MCPTT CT communication in E-UTRA'.				
	The test sequence below shows only the MCPTT relevant messages exchanged.				
1	The SS sends a location reporting	<	SIP MESSAGE	-	-
•	configuration containing configuration				
	parameters for both				
	NonEmergencyLocationInformation and				
	EmergencyLocationInformation, and,				
	minimumReportInterval timer set to 20 sec				
	and, periodic trigger criteria with <i>PeriodicReport</i> reporting interval set to 15 sec.				
	NOTE: The handling of the <i>PeriodicReport</i> is				
	not tested in this test. It is added here for the				
	purpose of verifying that the UE restarts the				
	minimumReportInterval - when the Periodic				
	report trigger fires before the expiration of the				
	minimumReportInterval the UE needs to wait				
	for its expiry before sending the periodic				
1 ^	report.				
1A	Start timer=20 sec (<i>minimumReportInterval</i> timer set in step 1).	-	-	-	-
1B	Start timer=15 sec (<i>PeriodicReport</i> timer set in	-	-		-
10	step 1).				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection				
1C	Wait for 10 sec.	-	-	-	-
	NOTE: The value is arbitrary chose. However,				
	it needs to be long enough to ensure that if the UE did not reset the <i>minimumReportInterval</i>				
	after it sent the message in step 3 the UE will				
	send the SIP MESSAGE for the periodic				
	reporting before step 3D and will fail, and, it				
	needs to be short enough so that step 2				
	happens reasonably before PeriodicReport				
	fires up.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the connection establishment for the purpose of MCPTT sending the				
	message(s) below are described in TS 36.579-				
	1 [2], subclause 5.4.4 'Generic Test Procedure				
	for MCPTT CT communication in E-UTRA'.				
	The test sequence below shows only the				
	MCPTT relevant messages exchanged.				
2	The SS sends an on-demand location	<	SIP MESSAGE	-	-
2	reporting request.			1	P
3	Check: Does the UE (MCPTT Client) send a SIP MESSAGE containing the location	>	SIP MESSAGE	T T	
	information report with the correct ReportID				
	providing only the parameters set in the				
	NonEmergencyLocationInformation				
	configuration provided in step 1?				
ЗA	Re-start timer=20 sec	-	-	-	-
	(minimumReportInterval).				
3B	Re-start timer=15 sec (<i>PeriodicReport</i>).	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection				l

3C	Timer=15 sec expires (<i>PeriodicReport</i>).	-	-] - [-
3D	Timer=20 sec expires	-	-	-	-
	(minimumReportInterval).				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the connection establishment for				
	the purpose of MCPTT sending the				
	message(s) below are described in TS 36.579-				
	1 [2], subclause 5.4.3 'Generic Test Procedure				
	for MCPTT CO communication in E-UTRA'.				
	The test sequence below shows only the MCPTT relevant messages exchanged.				
25	Check: Does the UE (MCPTT Client) send a		SIP MESSAGE	1	P
3E	SIP MESSAGE containing the periodic trigger	>	SIP MESSAGE	1	Р
	identification along with location information				
	report after the non-emergency minimum				
	interval length expired?				
4	The SS sends a location reporting	<	SIP MESSAGE	-	-
	configuration with new configuration changing				
	some of the parameters and not including				
	periodic trigger criteria, and, ConfiScope set to				
	'Full'.				
5	The SS sends on-demand location reporting	<	SIP MESSAGE	-	-
	request.				
6	Check: Does the UE (MCPTT Client) send a	>	SIP MESSAGE	2	Р
	SIP MESSAGE containing the location				
	information report with the correct ReportID and in accordance with the latest configuration				
	parameters provided in step 4?				
7	Start timer=15 sec (<i>PeriodicReport</i> timer set in	-		-	
	step 1).				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection.				
8	Timer=15 sec expires (PeriodicReport).	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the connection establishment for				
	the purpose of MCPTT sending the				
	message(s) below are described in TS 36.579-			1	
	1 [2], subclause 5.4.3 'Generic Test Procedure				
	for MCPTT CO communication in E-UTRA'.				
	The test sequence below shows only the				
	MCPTT relevant messages exchanged.				
9	Check: Does the UE (MCPTT Client) send in	>	SIP MESSAGE	2	F
	the next 10 sec a SIP MESSAGE containing				
	the periodic trigger identification along with			1	
	location information report after the non- emergency minimum interval length expired?				
1		1		1	

6.3.2.3.3

Specific message contents

Derivation Path: TS 36.579-1 [2], Table 5.5.2.7.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type	"multipart/mixed;bound ary="any allowed value				
Content-Length	length of message body				
Message-body					
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"			
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3		
Location-Info	As described in Table 6.3.1.3.3-2				

Table 6.3.2.3.3-1: SIP MESSAGE (Step 1, Table 6.3.2.3.2-1)

Table 6.3.2.3.3-2: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-1)

Derivation Path: TS 36.579-1 [2],	Table 5.5.3.4.2-1			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Configuration				
NonEmergencyLocationInformat ion				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	not present	Provision of information in the report is not requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	present	Provision of information in the report is requested.		
minimumIntervalLength	"20"			
EmergencyLocationInformation				
NeighbouringEcgi	present	Provision of information in the report is requested.		
TriggeringCriteria				
PeriodicReport				
extension base	"15"	the value in seconds of the time which determines the periodic provision of the report		
TiggerID	"PERIODIC"			

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-4			

Table 6.3.2.3.3-3: SIP MESSAGE (Step 2, Table 6.3.2.3.2-1)

Table 6.3.2.3.3-4: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-3)

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.3-1.

Table 6.3.2.3.3-5: SIP MESSAGE (Step 3, Table 6.3.2.3.2-1)

Derivation Path: TS 36.579-1 [2]	, Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-6			

Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
location-info					
Report					
CurrentLocation					
CurrentServingEcgi	The ECGI of Cell 1	The serving cell			
NeighbouringEcgi	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2			
MbmsSald	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2			
MbsfnArea	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2			
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message.			
longitude	The longitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.				
latitude	The latitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00013 degrees.				
ReportID	"1"	The same as the ID in the request message.			
ReportType	"NonEmergency"				

Table 6.3.2.3.3-6: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-5)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-6			

Table 6.3.2.3.3-6A: SIP MESSAGE (Step 3E, Table 6.3.2.3.2-1)

Table 6.3.2.3.3-6B: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-6A)

Derivation Path: TS 36.579-1 [2	2], Table 5.5.3.4.1-1			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Report				
TriggerID	"PERIODIC"			
CurrentLocation				
CurrentServingEcgi	The ECGI of Cell 1			
NeighbouringEcgi	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2		
MbmsSald	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2		
MbsfnArea	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-2		
CurrentCoordinate		The location simulated by the GNSS simulator at the time of transmission of the message.		
longitude	The longitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00016 degrees.			
latitude	The latitude value as specified for location number #1 defined in TS 36.508 [24] Table 4.11.2-3 +/- 0.00013 degrees.			
ReportType	"NonEmergency"			

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-8			

Table 6.3.2.3.3-8: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-7)

Derivation Path: TS 36.579-1 [2],	Table 5.5.3.4.2-1.			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Configuration				
ConfigureScope	"Update"			
NonEmergencyLocationInformat ion	not present			
ServingEcgi	not present	Provision of information in the report is not requested.		
NeighbouringEcgi	present	Provision of information in the report is requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	not present	Provision of information in the report is not requested.		
minimumIntervalLength	not present			
EmergencyLocationInformation"				
ServingEcgi	present	Provision of information in the report is requested.		
NeighbouringEcgi	not present	Provision of information in the report is not requested.		
MbmsSald	not present	Provision of information in the report is not requested.		
MbsfnArea	not present	Provision of information in the report is not requested.		
GeographicalCoordinate	not present	Provision of information in the report is not requested.		
minimumIntervalLength	"5"			
TriggeringCriteria	not present			

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.7.2-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-10			

Table 6.3.2.3.3-9: SIP MESSAGE (Step 5, Table 6.3.2.3.2-1)

Table 6.3.2.3.3-10: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-9)

Derivation Path: TS 36.579-1 [2]	, Table 5.5.3.4.3-1.			
Information Element	Value/remark	Comment	Reference	Condition
location-info				
Request				
RequestID	"2"	The RequestID that the MCPTT Client shall reference in the Report		

Table 6.3.2.3.3-11: SIP MESSAGE (Step 6, Table 6.3.2.3.2-1)

Derivation Path: TS 36.579-1 [2	?], Table 5.5.2.7.1-1			
Information Element	Value/remark	Comment	Reference	Condition
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-info+xml"		
MIME-Content-Type	not present	"application/vnd.3gpp. mcptt-affiliation- command+xml"		
MIME-Content-Type	"application/vnd.3gpp. mcptt-location- info+xml"	"application/vnd.3gpp. mcptt-affiliation- command+xml"	TS 24.379 [9] clause F.3	
Location-Info	As described in Table 6.3.1.3.3-12			

Derivation Path: TS 36.579-1 [2	2], Table 5.5.3.4.2-1		Derivation Path: TS 36.579-1 [2], Table 5.5.3.4.2-1					
Information Element	Value/remark	Comment	Reference	Condition				
location-info	present							
Report	present							
CurrentLocation	present							
CurrentServingEcgi	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-8						
NeighbouringEcgi	The ECGI of Cell 2	The neighbouring (non- srving) cell						
MbmsSald	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-8						
MbsfnArea	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-8						
CurrentCoordinate	not present	The report shall include parameters requested only for NonEmergencyLocatio nInformation in table 6.3.2.3.3-8						
ReportID	"2"	The same as the ID in the request message.						
ReportType	"NonEmergency"							

Table 6.3.2.3.3-12: Location-Info in SIP MESSAGE (Table 6.3.2.3.3-11)

6.4 MBMS

6.4.1 On-network / MBMS / MBMS Bearer Announcement / MBMS Bearer Listening Status / Transition to MBMS from Unicast / MBMS Floor Control / Transition to Unicast from MBMS

6.4.1.1 Test Purpose (TP)

(1)

when { the UE (MCPTT Client) receives MBMS subchannel control messages }

then { UE (MCPTT Client) responds by sending an MBMS listening status message via SIP MESSAGE }
}

(3)

Idle)}

6.4.1.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379, clause 14.3.3.2, TS 24.380, clauses 10.3.2, 10.3.3, 10.3.4, 6.2.4.3.5, 6.2.4.5.3, 6.2.4.2, 6.2.4.3.2. Unless otherwise stated, these are Rel-13 requirements.

[TS 24.379, clause 14.3.3.2]

}

When the MCPTT client wants to report the MBMS bearer listening status, the MCPTT client:

- NOTE 1: The application/vnd.3gpp.mcptt-mbms-usage-info+xml can contain both the listening status "listening" and "not listening" at the same time.
- 1) shall generate a SIP MESSAGE request in accordance with 3GPP TS 24.229 [4] and IETF RFC 3428 [33]; and
- 2) the SIP MESSAGE request:
 - a) shall include in the Request-URI the MBMS public service identity of the participating MCPTT function received in the P-Asserted-Identity header field of the announcement message;
 - b) shall include an Accept-Contact header field with the g.3gpp.icsi-ref media-feature tag with the value of "urn:urn-7:3gpp-service.ims.icsi.mcptt" along with parameters "require" and "explicit" according to IETF RFC 3841 [6];
 - should include a public user identity in the P-Preferred-Identity header field as specified in 3GPP TS 24.229 [4];
 - d) shall include a P-Preferred-Service header field with the value "urn:urn-7:3gpp-service.ims.icsi.mcptt";
 - e) shall include an application/vnd.3gpp.mcptt-mbms-usage-info+xml MIME body with the <version> element set to "1";
 - f) if the MCPTT client is listening to the MBMS bearer, the application/vnd.3gpp.mcptt-mbms-usage-info+xml MIME body:
 - i) shall include an <mbms-listening-status> element set to "listening";
 - ii) if the intention is to report that the MCPTT client is listening to the MBMS subchannel for an ongoing conversation in a session (e.g. as the response to the Map Group To Bearer message), shall include the MCPTT session identity of the ongoing conversation in <session-identity> element;
 - iii) shall include one or more <TGMI> elements for which the listening status applies; and
 - iv) if the intention is to report that the MCPTT client is listening to the general purpose MBMS subchannel, shall include the <general-purpose> element set to "true";

- g) if the MCPTT client is not listening, the application/vnd.3gpp.mcptt-mbms-usage-info+xml MIME body:
 - i) shall include an <mbms-listening-status> element set to "not-listening";
 - iii) shall include one or more <TGMI> elements for which the listening status applies;
 - iii) if the intention is to report that the MCPTT client is no longer listening to the MBMS subchannel in an ongoing session (e.g. as the response to Unmap Group to Bearer message), shall include the MCPTT session identity in <session-identity> elements; and
 - iv) if the intention is to report that the MCPTT client is no longer listening to general purpose MBMS subchannel, shall include the <general-purpose> element set to "false"; and
- NOTE 2: If the MCPTT client reports that the MCPTT client is no longer listening to the general purpose MBMS subchannel, it is implicitly understood that the MCPTT client no longer listens to any MBMS subchannel in ongoing conversations that the MCPTT client previously reported status "listening".
 - h) shall include an application/vnd.3gpp.mcptt-info+xml MIME body with the <mcptt-request-uri> set to the MCPTT ID; and
- 3) shall send the SIP MESSAGE request according to 3GPP TS 24.229 [4].

[TS 24.380, clause 10.3.2]

When receiving a Map Group To Bearer message over the general purpose MBMS subchannel, the MBMS interface in the MCPTT client:

1. shall associate the TMGI in the TMGI field, the MBMS subchannel for audio and for floor control with the MCPTT group identity in the MCPTT Group ID field.

[TS 24.380, clause 10.3.3]

If the MBMS interface receives RTP media packets or floor control messages over the MBMS subchannel, the MBMS interface in the MCPTT client:

- 1. if there is an association between the TMGI, the MBMS subchannel for audio and for floor control to an ongoing conversation in a group session:
 - a. shall forward the received floor control messages to the floor participant in the conversation; and
 - b. if the received RTP medias contains a different SSRC value than the SSRC value used by the MCPTT client, shall forward the received RTP packets to the media mixer in the conversation; and
- 2. if there is no such association:
 - a. shall ignore the received floor control message or received RTP media packet.

[TS 24.380, clause 10.3.4]

When receiving the Unmap Group To Bearer message over a MBMS subchannel, the MBMS interface in the MCPTT client:

1. shall remove the association between the TMGI, the MBMS subchannel for audio and for floor control from the conversation in the group session identified by the MCPTT Group ID field, if such an association exists.

[TS 24.380, clause 6.2.4.3.5]

Upon receiving an indication from the user to request permission to send media, the floor participant:

- 1. shall send the Floor Request message toward the floor control server; The Floor Request message:
 - a. if a different priority than the normal priority is required, shall include the Floor Priority field with the priority not higher than negotiated with the floor control server as specified in subclause 14.3.3; and
 - b. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;

- 2. shall start timer T101 (Floor Request) and initialise counter C101 (Floor Request) to 1; and
- 3. shall enter the 'U: pending Request' state.

[TS 24.380, clause 6.2.4.5.3]

Upon receiving an indication from the user to release the permission to send RTP media, the floor participant:

- 1. shall send a Floor Release message towards the floor control server The Floor Release message:
 - a. may include the first bit in the subtype of the Floor Release message set to '1' (acknowledgement is required) as specified in subclause 8.2.2;
- NOTE: It is an implementation option to handle the receipt of the Floor Ack message and what action to take if the Floor Ack message is not received.
 - b. if the session is a broadcast call and if the session was established as a normal call, shall include the Floor Indicator with the A-bit set to '1' (Normal call); and
 - c. if the Floor Granted message included the G-bit set to '1' (Dual floor), shall include the Floor Indicator with the G-bit set to '1' (Dual floor);
- 2. shall remove the indication that the participant is overriding without revoke if this indication is stored;
- 3. shall remove the indication that the participant is overridden without revoke if this indication is stored;
- 4. shall start timer T100 (Floor Release) and initialize counter C100 (Floor Release) to 1; and
- 5. shall enter the 'U: pending Release' state.

[TS 24.380, clause 6.2.4.4.2]

Upon receiving a Floor Granted message from the floor control server or a floor granted indication in an SIP 200 (OK) response in the application and signalling layer, the floor participant:

- 1. if the first bit in the subtype of the Floor Granted message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '1' (Floor Granted); and
 - b. shall include the Source field set to '0' (the floor participant is the source);
- 2. shall provide floor granted notification to the user, if not already done;
- NOTE: Providing the floor granted notification to the user prior to receiving the Floor Granted message is an implementation option.
- 3. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call;
- 4. if the G-bit in the Floor Indicator is set to '1' (Dual floor) shall store an indication that the participant is overriding without revoke;
- 5. shall stop the optional timer T103 (End of RTP media), if running;
- 6. shall stop timer T101 (Floor Request); and
- 7. shall enter the 'U: has permission' state.

[TS 24.380, clause 6.2.4.3.2]

Upon receiving a Floor Idle message, the participant:

- 1. if the first bit in the subtype of the Floor Idle message is set to '1' (Acknowledgment is required) as described in subclause 8.3.2, shall send a Floor Ack message. The Floor Ack message:
 - a. shall include the Message Type field set to '5' (Floor Idle); and

- b. shall include the Source field set to '0' (the floor participant is the source);
- 2. may provide floor idle notification to the user, if it has not already done so;
- 3. shall stop the optional timer T103 (End of RTP media), if it is running; and
- 4. shall remain in the 'U: has no permission' state.
- 6.4.1.3 Test description
- 6.4.1.3.1 Pre-test conditions

System Simulator:

- Void

IUT:

- Void

Preamble:

- A pre-activated MBMS bearer exists

6.4.1.3.2 Test procedure sequence

Table 6.4.1.3.2-1: Main Behaviour

St	t Procedure		Message Sequence	TP	Verdict	
	i loodui o	U - S	Message		, or anot	
1	Make the MCPTT User request the establishment of an MCPTT on-demand pre- arranged group call, automatic commencement mode, with explicit request for	-	-	-	-	
	floor control (implicit floor control). NOTE: This is expected to be done via a suitable implementation dependent MMI.					
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.3 'Generic Test Procedure for MCPTT CO communication in E-UTRA'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	The UE (MCPTT client) sends an initial SIP INVITE request requesting the establishment of an MCPTT on-demand pre-arranged group call, automatic commencement mode, applying End-to-end communication security with Floor Control	>	SIP INVITE	-	-	
3	The SS sends SIP 100 Trying	<	SIP 100 Trying	-	-	
4	The SS sends SIP 180 Ringing	<	SIP 180 Ringing	-	-	
5	The SS sends a SIP 200 (OK) message indicating that it has accepted the SIP INVITE request	<	SIP 200 (OK)	-	-	
6	The UE (MCPTT client) sends a SIP ACK in response to the SIP 200 (OK)	>	SIP ACK	-	-	
7	The UE (MCPTT client) notifies the user that the call has been successfully established NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
8	Make the MCPTT User request to speak (e.g. pressing the PTT button). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
9	The UE (MCPTT client) sends a Floor Release message	>	Floor Release	-	-	
-	EXCEPTION: Step 10a1 describes behaviour that depends on the UE implementation; the "lower case letter" identifies a step sequence that take place if the UE requests an acknowledgement to the Floor Release message.	-	-	-	-	
10a1	The SS sends a Floor Ack message in response to the Floor Release message	<	Floor Ack	-	-	
11	The SS sends a Floor Idle message with no acknowledgement required	<	Floor Idle	-	-	
12	The SS pre-activates an MBMS bearer and sends an MBMS bearer announcement message via SIP MESSAGE to announce the availability of an MBMS bearer. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged.	<	SIP MESSAGE	-	-	
13	Check: Does the UE (MCPTT client) send a SIP 200 (OK) message in response to the SIP MESSAGE message?	>	SIP 200 (OK)	1	P	
14	Check: Does the UE (MCPTT Client) send an MBMS Bearer listening status report via a SIP MESSAGE message to the SS?	>	SIP MESSAGE	1	P	
15	The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-	

16 Make the MCPTT User request to speak (e.g. pressing the PTT button). - - - - NOTE: This is expected to be done via a suitable implementation dependent MMI. - - Floor Request - 17 The US (MCPTT client) sends a Floor Request message > Floor Request - 18 The SS decides that a MBMS subchannel shall be used for a conversation and sends a Map Group To Bearer message over the general purpose MBMS subchannel. < Map Group To Bearer - NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant message exchanged. SIP MESSAGE 2 19 Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message? SIP 200 (OK) - 20 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client) send a Floor Ack message in response to the Floor Granted message? > Floor Ack 3 21 The SS sends a Floor Taken (by client A) message with no acknowledgement required using unicast messaging to the MCPTT Client) send a Floor Ack message? > Floor Ack 3 23 The SS sends a Floor Taken (by client A) mes	- - - - - - P
NOTE: This is expected to be done via a suitable implementation dependent MMI.	-
suitable implementation dependent MMI.	-
17 The UE (MCPTT client) sends a Floor Request message > Floor Request - 18 The SS decides that a MBMS subchannel shall be used for a conversation and sends a Map Group To Bearer message over the general purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant message sexchanged. > SIP MESSAGE 2 19 Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message? > SIP MESSAGE 2 20 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client <> Floor Granted 22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT client <> Floor Ack 3 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel <	-
message18The SS decides that a MBMS subchannel shall be used for a conversation and sends a Map Group To Bearer message over the general purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged>SIP MESSAGE SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message with a SIP 200 (OK) message>SIP MESSAGE SIP 200 (OK)-20The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client<	-
18 The SS decides that a MBMS subchannel shall be used for a conversation and sends a Map Group To Bearer message over the general purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged. SIP MESSAGE 2 19 Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message? > SIP MESSAGE 2 20 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message <	-
be used for a conversation and sends a Map Group To Bearer message over the general purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged.SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message an acknowledgement required using unicast messaging to the MCPTT Client<	-
Group To Bearer message over the general purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 	-
purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant message exchanged.SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message<	-
purpose MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged.SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message>SIP 200 (OK)-21The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client) send a Floor Ack message in response to the Floor Granted message?>Floor Ack323The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel<	-
NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged.SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message<	-
Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged>SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message>SIP 200 (OK)-21The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client) send a Floor Ack message?>Floor Granted-22Check: Does the UE (MCPTT client) send a Floor Ack message?>Floor Ack323The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel<	-
Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged>SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message>SIP 200 (OK)-21The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client) send a Floor Ack message?>Floor Granted-22Check: Does the UE (MCPTT client) send a Floor Ack message?>Floor Ack323The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel<	-
sequence below shows only the MCPTT relevant messages exchanged.SIP MESSAGE219Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) messageSIP 200 (OK)-21The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client<	-
relevant messages exchanged.19Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) messageSIP 200 (OK)-21The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client<	-
19Check: Does the UE (MCPTT Client) respond to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message?>SIP MESSAGE SIP 200 (OK)220The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message<	-
to the Map Group To Bearer message by sending an MBMS Bearer listening status report via a SIP MESSAGE message? SIP 200 (OK) 20 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message <	-
sending an MBMS Bearer listening status report via a SIP MESSAGE message? sending an MBMS Bearer listening status report via a SIP MESSAGE message? sending an MBMS Bearer listening status report via a SIP MESSAGE message? 20 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message sending an MBMS Bearer listening status message with a SIP 200 (OK) message sending an MEMS Message 21 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client sending an Acknowledgement required using unicast message in response to the Floor Granted message? sending an Acknowledgement required message? sending an Acknowledgement required over the MBMS subchannel sending an Acknowledgement required over the MBMS subchannel	- - P
report via a SIP MESSAGE message? - 20 The SS responds to the SIP MESSAGE message 21 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client 22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? > 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required using unicast >	- - P
20 The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message <	- - P
message with a SIP 200 (OK) message - 21 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client Floor Granted - 22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? > Floor Ack 3 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel <	- - P
21 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client <	- P
21 The SS sends a Floor Granted message with an acknowledgement required using unicast messaging to the MCPTT Client <	- P
an acknowledgement required using unicast messaging to the MCPTT Client > Floor Ack 3 22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? > Floor Ack 3 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel <	P
messaging to the MCPTT Client > Floor Ack 3 22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? > Floor Ack 3 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel <	P
22 Check: Does the UE (MCPTT client) send a Floor Ack message in response to the Floor Granted message? > Floor Ack 3 23 The SS sends a Floor Taken (by client A) message with no acknowledgement required over the MBMS subchannel <	P
Granted message?	
23 The SS sends a Floor Taken (by client A) <	
message with no acknowledgement required over the MBMS subchannel	
message with no acknowledgement required over the MBMS subchannel	-
over the MBMS subchannel	
24 Make the MCPTT User indicate end of talking	
(e.g. releasing the PTT button).	
NOTE: This is expected to be done via a	
suitable implementation dependent MMI.	
25 Check: Does the UE (MCPTT client) send a> Floor Release 3	Р
Floor Release message?	
- EXCEPTION: Step 26a1 describes behaviour	-
that depends on the UE implementation; the	
"lower case letter" identifies a step sequence	
that take place if the UE requests an	
acknowledgement to the Floor Release	
message.	
26a1 The SS sends a Floor Ack message in < Floor Ack	-
response to the Floor Release message using	
unicast messaging	
27 The SS sends a Floor Idle message with < Floor Idle -	-
acknowledgement required over the MBMS	
subchannel	
28 Check: Does the UE (MCPTT Client) respond > Floor Ack 3	Р
to the Floor Idle message over the MBMS	
subchannel with a Floor Ack message?	
29 The SS sends a Floor Taken message with no < Floor Taken -	-
acknowledgement required over the MBMS	
subchannel	
- EXCEPTION: Step 30a1 describes behaviour	-
that depends on the UE implementation; the	
"lower case letter" identifies a step sequence	
that take place if the UE (MCPTT Client)	
notifies the user of the status of the floor; i.e. if	
the UE (MCPTT Client) notifies the user when	
the floor is idle or who currently has the floor.	
30a1 Check: Does the UE (MCPTT Client) notify the 3	Р
user that the floor is taken?	
NOTE: This is expected to be done via a	
suitable implementation dependent MMI.	

31	The SS sends a Floor Idle message with acknowledgement required over the MBMS subchannel	<	Floor Idle	-	-
32	Check: Does the UE (MCPTT Client) respond to the Floor Idle message over the MBMS subchannel with a Floor Ack message?	>	Floor Ack	3	Р
33	The SS ends the conversation on the MBMS subchannel and sends an Unmap Group to Bearer message on the MBMS subchannel. NOTE: The related E-UTRA/EPC actions are described in TS 36.579-1 [2], subclause 5.4.12 Generic Test Procedure for MCPTT communication over MBMS'. The test sequence below shows only the MCPTT relevant messages exchanged.	<	Unmap Group to Bearer		
34	Check: does the UE (MCPTT Client) respond to the Unmap Group TO Bearer message with a MBMS bearer listening status report via a SIP MESSAGE message?	>	SIP MESSAGE	2	Р
35	The SS responds to the SIP MESSAGE message with a SIP 200 (OK) message	<	SIP 200 (OK)	-	-
36	The SS cancels the MBMS bearer announcement and sends a SIP MESSAGE message	<	SIP MESSAGE	-	-
37	Check: Does the UE (MCPTT client) send a SIP 200 (OK) message in response to the SIP MESSAGE message?	>	SIP 200 (OK)	1	Р
38	Check: Does the UE (MCPTT Client) send an MBMS Bearer listening status report via a SIP MESSAGE message to the SS?	>	SIP MESSAGE	1	Р
39	The SS sends a Floor Idle message with an acknowledgement required over the unicast channel	<	Floor Idle	-	-
40	Check: Does the UE respond to the Floor Idle message with a Floor Ack message	>	Floor Ack	4	Р
41	Make the MCPTT User end the on-demand group call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
42	The UE (MCPTT Client) sends a SIP BYE message to end the on-demand group call.	>	SIP BYE	-	-
43	The SS sends a SIP 200 (OK)	<	SIP 200 (OK)	-	-
-	EXCEPTION: SS releases the E-UTRA connection.	-	-	-	-

6.4.1.3.3 Specific message contents

Table 6.4.1.3.3-1: SIP INVITE (step 2, Table 6.4.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1 condition GROUP-CALL				
Information Element	Value/remark	Comment	Reference	Condition

	Derivation Path: TS 36.579-1 [2], Table 5.5.2.5.1-1 condition GROUP-CALL					
Information Element	Value/remark	Comment	Reference	Condition		
Accept-Contact						
ac-value	"+g.3gpp.icsi- ref=urn:urn-7:3gpp- service.ims.icsi.mcptt"					
req-param	"require"					
explicit-param	"explicit"					
P-Asserted-Service						
Service-ID	"urn:urn-7:3gpp- service.ims.icsi.mcptt"					
P-Asserted-Identity						
addr-spec	px_MBMS_Service_ID	The MBMS public service identity of the participating MCPTT function				
Content-Type	"multipart/mixed;bound ary="any allowed value					
Content-Length	length of message body					
Message-body						
MIME-Content-Type	"application/sdp"					
Content-Disposition	"render"					
SDP Message	As described in Table 6.4.1.3.3-3					
MIME-Content-Type	application/vnd.3gpp.m cptt-mbms-usage- info+xml					
MCPTT-MBMS-Usage-Info	As described in Table 6.4.1.3.3-4					
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"					
MCPPT-Affiliation- Command		Not present				

Table 6.4.1.3.3-2: SIP MESSAGE ((step 12, Table 6.4.1.3.2-1)
TABLE 0.4.110.0 Z. OII MILOOAGE	(0.00 12, 10.00 0.7.1.0.2 1)

Table 6.4.1.3.3-3: SDP in SIP MESSAGE (6.4.1.3.3-2)

Information Element	Value/remark	Comment	Reference	Condition
Media descriptions				
media description		m= line media = audio		
media	"audio"			
port	"9"			
proto	"RTP/AVP"			
fmt	"99"			
Connection Data		c= line		
nettype	"IN"			
addrtype	"IP4"			
connection-address	"0.0.0.0"			
media description		m= line media = application		
media	"application"			
port	"9"			
proto	"udp"			
fmt	"MCPTT"			
Connection Data		c= line		
nettype	"IN"			
addrtype	"IP4"			
connection-address	"0.0.0.0"			

Derivation Path: TS 24.379 [9] Clause F.2				
Information Element	Value/remark	Comment	Reference	Condition
mcptt-mbms-usage-info				
mbms-listening-status	not present			
announcement				
TMGI				
MBMS Service ID	"0F0F0F"	The selected value is randomly chosen - a 6 digit hexadecimal number between 000000 and FFFFFF (see TS 23.003 [X] clause 15.2. The coding of the MBMS Service ID is the responsibility of each administration		
MCC	The same value as for PLMN1 specified in Table 5.5.8.1-x	Mobile Country Code		
MNC	The same value as for PLMN1 specified in Table 5.5.8.1-x	Mobile Network Code		
QCI	"65"	Mission Critical user plane Push To Talk voice		
mbms-service-area	"0"	The selected value is randomly chosen. The value 0 has a special meaning; it shall denote the whole PLMN as the MBMS Service Area		
GPMS	"2"	The number of the "m=application" media line in the application/sdp MIME		
version	"1"			

Table 6.4.1.3.3-4: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-2)

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 condition	GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Request-Line				
Request-URI	px_MBMS_Service_ID	The value received in the P-Asserted-Identity header field of the announcement message		
Accept-Contact				
ac-value	"+g.3gpp.icsi- ref=urn:urn-7:3gpp- service.ims.icsi.mcptt"			
req-param	"require"			
explicit-param	"explicit"			
P-Preferred-Identity				
PPreferredID-value	px_MCPTT_User_A_ID			
P-Asserted-Service				
Service-ID	"urn:urn-7:3gpp- service.ims.icsi.mcptt"			
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	application/vnd.3gpp.m cptt-mbms-usage- info+xml			
MCPTT-MBMS-Usage-Info	As described in Table 6.4.1.3.3-6			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MCPTT-Affiliation- Command		Not present		

Table 6.4.1.3.3-6: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-5)

Derivation Path: TS 24.379 [9] Clause F.2					
Information Element	Value/remark	Comment	Reference	Condition	
mcptt-mbms-usage-info					
mbms-listening-status					
mbms-listening-status	"listening"				
session-id	not present				
general-purpose	"true"				
TMGI	same value as the announcement in the SIP MESSAGE				
announcement	not present				
version	"1"				

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 condition	GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Request-Line				
Request-URI	px_MBMS_Service_ID	The value received in the P-Asserted-Identity header field of the announcement message		
Accept-Contact				
ac-value	"+g.3gpp.icsi- ref=urn:urn-7:3gpp- service.ims.icsi.mcptt"			
req-param	"require"			
explicit-param	"explicit"			
P-Preferred-Identity	·			
PPreferredID-value	px_MCPTT_User_A_ID			
P-Asserted-Service				
Service-ID	"urn:urn-7:3gpp- service.ims.icsi.mcptt"			
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	application/vnd.3gpp.m cptt-mbms-usage- info+xml			
MCPTT-MBMS-Usage-Info	As described in Table 6.4.1.3.3-8			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MCPPT-Affiliation- Command		Not present		

Table 6.4.1.3.3-7: SI	P MESSAGE (step 1	19, Table 6.4.1.3.2-1)
-----------------------	-------------------	------------------------

Table 6.4.1.3.3-8: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-7)

Derivation Path: TS 24.379 [9] Clause F.2					
Information Element	Value/remark	Comment	Reference	Condition	
mcptt-mbms-usage-info					
mbms-listening-status					
mbms-listening-status	"listening"				
session-id	px_sesson_A_ID				
general-purpose	not present				
TMGI	same value as the announcement in the SIP MESSAGE				
announcement	not present				
version	"1"				

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 condition	GROUP-CALL		
Information Element	Value/remark	Comment	Reference	Condition
Request-Line				
Request-URI	px_MBMS_Service_ID	The value received in the P-Asserted-Identity header field of the announcement message		
Accept-Contact				
ac-value	"+g.3gpp.icsi- ref=urn:urn-7:3gpp- service.ims.icsi.mcptt"			
req-param	"require"			
explicit-param	"explicit"			
P-Preferred-Identity				
PPreferredID-value	px_MCPTT_User_A_ID			
P-Asserted-Service				
Service-ID	"urn:urn-7:3gpp- service.ims.icsi.mcptt"			
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	application/vnd.3gpp.m cptt-mbms-usage- info+xml			
MCPTT-MBMS-Usage-Info	As described in Table 6.4.1.3.3-10			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MCPTT-Affiliation- Command		Not present		

Table 6.4.1.3.3-10: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-10)

Derivation Path: TS 24.379 [9] Clause F.2					
Information Element	Value/remark	Comment	Reference	Condition	
mcptt-mbms-usage-info					
mbms-listening-status					
mbms-listening-status	"not-listening"				
session-id	px_sesson_A_ID				
general-purpose	not present				
TMGI	same value as the announcement in the SIP MESSAGE				
announcement	not present				
version	"1"				

Derivation Path: TS 36.579-1 [2], Information Element	Value/remark	Comment	Reference	Condition
	value/lellialk	Comment	Reiefence	Condition
Accept-Contact				
ac-value	"+g.3gpp.icsi-			
	ref=urn:urn-7:3gpp-			
	service.ims.icsi.mcptt"			
req-param	"require"			
explicit-param	"explicit"			
P-Asserted-Service				
Service-ID	"urn:urn-7:3gpp-			
	service.ims.icsi.mcptt"			
P-Asserted-Identity	P P P P P P P P P P P P P P P P P P P			
addr-spec	px_MBMS_Service_ID	The MBMS public		
	, _ · _ · · _ · · _	service identity of the		
		participating MCPTT		
		function		
Content-Type	"multipart/mixed;bound			
	ary="any allowed value			
Content-Length	length of message			
g	body			
Message-body				
MIME-Content-Type	application/vnd.3gpp.m			
	cptt-mbms-usage-			
	info+xml			
MCPTT-MBMS-Usage-Info	As described in Table			
	6.4.1.3.3-12			
MIME-Content-Type	"application/vnd.3gpp.		1	
	mcptt-affiliation-			
	command+xml"			
MCPTT-Affiliation-		Not present	+	+
		Not present		
Command				

Table 6.4.1.3.3-12: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-11)

Derivation Path: TS 24.379 [9]	Clause F.2			
Information Element	Value/remark	Comment	Reference	Condition
mcptt-mbms-usage-info				
mbms-listening-status	not present			
announcement				
TMGI				
MBMS Service ID	"OFOFOF"	The selected value is randomly chosen - a 6 digit hexadecimal number between 000000 and FFFFFF (see TS 23.003 [X] clause 15.2. The coding of the MBMS Service ID is the responsibility of each administration		
MCC	The same value as for PLMN1 specified in Table 5.5.8.1-x	Mobile Country Code		
MNC	The same value as for PLMN1 specified in Table 5.5.8.1-x	Mobile Network Code		
QCI	"65"	Mission Critical user plane Push To Talk voice		
mbms-service-area	not present			
GPMS	not present			
version	"1"			

Derivation Path: TS 36.579-1 [2],	Table 5.5.2.5.1-1 condition	GROUP-CALL		
Information Element Value/remark Comment Re				Condition
Request-Line				
Request-URI	px_MBMS_Service_ID	The value received in the P-Asserted-Identity header field of the announcement message		
Accept-Contact				
ac-value	"+g.3gpp.icsi- ref=urn:urn-7:3gpp- service.ims.icsi.mcptt"			
req-param	"require"			
explicit-param	"explicit"			
P-Preferred-Identity				
PPreferredID-value	px_MCPTT_User_A_ID			
P-Asserted-Service				
Service-ID	"urn:urn-7:3gpp- service.ims.icsi.mcptt"			
Content-Type	"multipart/mixed;bound ary="any allowed value			
Content-Length	length of message body			
Message-body				
MIME-Content-Type	application/vnd.3gpp.m cptt-mbms-usage- info+xml			
MCPTT-MBMS-Usage-Info	As described in Table 6.4.1.3.3-14			
MIME-Content-Type	"application/vnd.3gpp. mcptt-affiliation- command+xml"			
MCPTT-Affiliation- Command		Not present		

Table 6.4.1.3.3-14: MCPTT-MBMS-Usage-Info in SIP MESSAGE (6.4.1.3.3-13)

Derivation Path: TS 24.379 [9] Clause F.2					
Information Element	Value/remark	Comment	Reference	Condition	
mcptt-mbms-usage-info					
mbms-listening-status					
mbms-listening-status	"not-listening"				
session-id	not present				
general-purpose	"false"				
TMGI	same value as the announcement in the SIP MESSAGE				
announcement	not present				
version	"1"				

Table 6.4.1.3.3-15: SIP 200 (OK) (steps 13, 37, Table 6.4.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.1-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length	"0"				
Message-body	not present	No message body included - end of SIP message			

Derivation Path: TS 36.579-1 [2], Table 5.5.2.17.1.2-1					
Information Element	Value/remark	Comment	Reference	Condition	
Content-Type					
Content-Length	"0"				
Message-body	not present	No message body included - end of SIP message			

Table 6.4.1.3.3-16: SIP 200 (OK) (steps 15, 20, 35, 40, Table 6.4.1.3.2-1)

Table 6.4.1.3.3-17: Floor Release (steps 9, 25, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value		

Table 6.4.1.3.3-18: Floor Idle (step 11, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			
Information Element	Value/remark	Comment	Condition
Subtype	"00101"	Acknowledgment not required for Floor Idle message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.4.1.3.3-19: Floor Idle (steps 27, 31, 39, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.6-1			
Information Element	Value/remark	Comment	Condition
Subtype	"10101"	Acknowledgment required for Floor Idle message	
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 6.4.1.3.3-20: Floor Request (step 17, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value		

Information Element	Value/remark	Comment	Condition
Subtype	"10001"	Acknowledgment is required for Floor Granted message	
Floor Indicator			
Floor Indicator	"000101000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 6.4.1.3.3-21: Floor Granted (step 21, Table 6.4.1.3.2-1)

Table 6.4.1.3.3-21: Floor Ack (step 22, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.11-1			
Information Element	Value/remark	Comment	Condition
SSRC of floor participant	"10000000 11111111 00000000 00000001"		
Source			
Source	"0"	The floor participant is the source	
Message Type			
Message Type	"10001"	Floor Ack message for Floor Granted message which requested acknowledgment	

Table 6.4.1.3.3-22: Floor Ack (steps 28, 32, 40, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.11-1			
Information Element	Value/remark	Comment	Condition
SSRC of floor participant	"10000000 11111111 00000000 00000001"		
Source			
Source	"O"	The floor participant is the source	
Message Type			
Message Type	"10101"	Floor Ack message for Floor Idle message which requested acknowledgment	

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition	ON-NETWORK		
Information Element	Value/remark	Comment	Condition
Subtype	"00010"	Acknowledgment not required for Floor Taken message	
Granted Party's Identity			
Granted Party's Identity	Px_MCPTT_User_A_ID		
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	
SSRC of granted floor participant	"10000000 11111111 00000000 00000001"		

Table 6.4.1.3.3-23: Floor Taken (step 23, Table 6.4.1.3.2-1)

Table 6.4.1.3.3-24: Floor Taken (step 29, Table 6.4.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition	Derivation Path: 36.579-1 [2], Table 5.5.6.7-1 condition ON-NETWORK				
Information Element	Value/remark	Comment	Condition		
Subtype	"00010"	Acknowledgment not required for Floor Taken message			
Floor Indicator					
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)			

7 MCPTT Client off-network operation

7.1 Off-network Group Calls

7.1.1 Off-network / Group Call / Floor Control / Upgrade to Emergency Call / Downgrade from Emergency / Upgrade to Imminent Peril / Downgrade from Imminent Peril / Release Call / Client Originated (CO)

7.1.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to initiate/cancel group calls in off-network environment, and the UE (MCPTT Client) is in an offnetwork environment } ensure that {

when { the MCPTT User requests the establishment of an MCPTT pre-arranged group call }
 then { UE (MCPTT Client) requests a pre-arranged group call by sending a GROUP CALL PROBE
 message and, upon not receiving a response to the GROUP CALL PROBE, sends a GROUP CALL ANNOUNCEMENT
 message }
 }
}

(2)


with { UE (MCPTT Client) having established an off-network MCPTT Pre-arranged Group Call } ensure that {

3GPP TS 36.579-2 version 14.3.0 Release 14

398

when $\{$ the MCPTT User (MCPTT Client) engages in communication with the invited MCPTT User(s) $\}$ then { UE (MCPTT Client) respects the floor control imposed by the floor control entity/arbitrator (Floor Request during a talk burst, Floor granting/release, Floor idle, Floor deny, Floor taken/revoked, Floor request queued and queue handling) } }

(3)

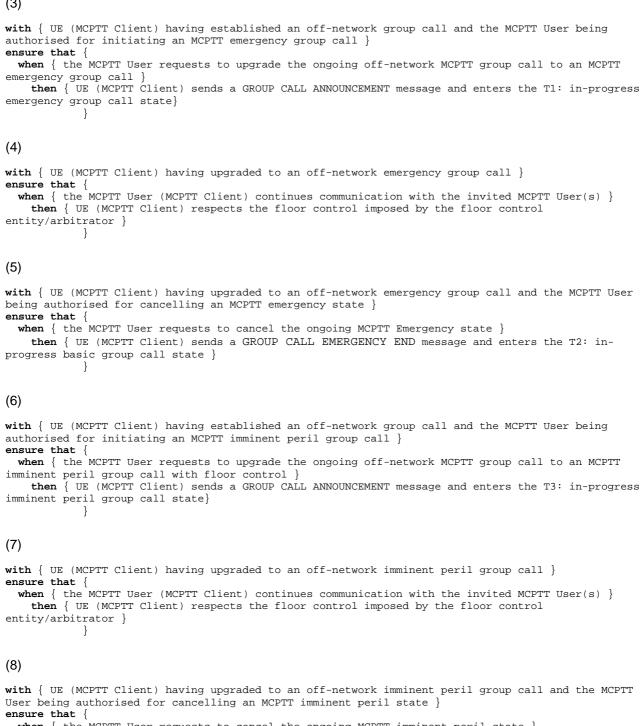

when { the MCPTT User requests to cancel the ongoing MCPTT imminent peril state } then { UE (MCPTT Client) sends a GROUP CALL IMMINENT PERIL END message and enters the T2: in-progress basic group call state } }

7.1.1.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.2.1, 10.2.2.4.3.1, 10.2.3.4.2, 10.2.3.4.7.1, 10.2.3.4.8.1, 10.2.3.4.8.4, 10.2.2.4.5.1, 10.2.2.4.5.4, 10.2.3.4.10, TS 24.380 clauses 7.2.3.2.2, 7.2.3.5.5, 7.2.3.3.2, 7.2.3.6.7, 7.2.3.5.4, 7.2.3.5.8, 7.2.3.5.6, 7.2.3.7.3, 7.2.3.7.5, 7.2.3.3.4, 7.2.3.4.3,

7.2.3.3.6, 7.2.3.4.2, 7.2.3.6.4, 7.2.3.6.3, 7.2.3.8.11, 7.2.3.8.3, 7.2.3.8.6, 7.2.3.5.7, 7.2.3.6.9, 7.2.3.6.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.2.1]

When in the "S1: start-stop" state, upon an indication from an MCPTT user to initiate a group call for an MCPTT group ID, the MCPTT client:

•••

- 3) shall generate a GROUP CALL PROBE message as specified in subclause 15.1.2. In the GROUP CALL PROBE message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
- 4) shall send the GROUP CALL PROBE message as specified in subclause 10.2.1.1.1;
- 5) shall start timer TFG3 (call probe retransmission);
- 6) shall start timer TFG1 (wait for call announcement); and

[TS 24.379, clause 10.2.2.4.3.1]

When in the "S2: waiting for call announcement" state, upon expiry of timer TFG1 (wait for call announcement), the MCPTT client:

1) shall stop timer TFG3 (call probe retransmission), if running;

•••

- 7) shall generate a GROUP CALL ANNOUNCEMENT message as specified in subclause 15.1.3. In the GROUP CALL ANNOUNCEMENT message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Call type IE to the stored current call type associated with the call type control state machine;
 - c) shall set the Refresh interval IE to the stored refresh interval of the call;
 - d) shall set the SDP IE to the stored SDP body of the call;
 - e) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call;
 - f) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
 - g) shall set the Call start time IE to the stored call start time of the call;
 - h) shall set the Last call type change time IE to the stored last call type change time of the call associated with call type control state machine;
 - i) shall set the Last user to change call type IE to last user to change call type associated with call type control state machine; and
 - j) may include the Confirm mode indication IE;
- 8) shall send the GROUP CALL ANNOUNCEMENT message as specified in subclause 10.2.1.1.1;
- 9) shall establish a media session based on the stored SDP body of the call;

10) shall start floor control as originating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];

[TS 24.379, clause 10.2.3.4.2]

When in the "T0: waiting for the call to establish " state, upon an indication from an MCPTT user to initiate a group call probe for an MCPTT group, the MCPTT client:

- if the stored emergency state associated with emergency alert state machine described in 12.2.2.2 is set to "true" and the value of "/<x>/<x>/Common/AllowedEmergencyCall" leaf node present in group configuration as specified in 3GPP TS 24.383 [45] is set to "true":
 - a) shall set the stored current call type to "EMERGENCY GROUP CALL"; and
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
- 2) if the stored emergency state associated with emergency alert state machine described in 12.2.2.2 is set to "false", and:
 - a) if the user initiates an MCPTT emergency call and the values of "/<x>/<x>/Common/MCPTTGroupCall/EmergencyCall/Enabled" leaf node present in the user profile and "/<x>/<x>/Common/AllowedEmergencyCall" leaf node present in group configuration as specified in 3GPP TS 24.383 [45] are set to "true":
 - i) shall set the stored current call type to "EMERGENCY GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - b) if the user initiates an MCPTT imminent peril group call and the values of "/<x>/<x>/Common/MCPTTGroupCall/ImminentPerilCall/Authorised" leaf node present in the user profile "/<x>/Common/AllowedImminentPerilCall " leaf node present in group configuration as specified in 3GPP TS 24.383 [45] are set to "true":
 - i) shall set the stored current call type to "IMMINENT PERIL GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45]; and
 - c) if the user initiates an MCPTT group call which is not an MCPTT emergency call and which is not an MCPTT imminent peril group call:
 - i) shall set the stored current call type to "BASIC GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45];

[TS 24.379, clause 10.2.3.4.7.1]

When in the "T2: in-progress basic group call" state, upon receiving an indication from the user to upgrade the call to "IMMINENT PERIL GROUP CALL" or "EMERGENCY GROUP CALL" or when in the "T3: in-progress imminent peril group call" state, upon receiving an indication from the user to upgrade the call to "EMERGENCY GROUP CALL", the MCPTT client:

- 1) if the user request is to upgrade the call to "EMERGENCY GROUP CALL" and the value of $"/\langle x \rangle/\langle x \rangle/OffNetwork/EmergencyCallChange"$ leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true":
 - a) shall set the stored current call type to "EMERGENCY GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - c) shall store the current UTC time as last call type change time of the call;
 - d) shall store own MCPTT user ID as last user to change call type of the call;
 - e) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1;
 - f) shall stop timer TFG11 (emergency end retransmission), if running;
 - g) shall stop timer TFG14 (implicit downgrade imminent peril), if running; and
 - h) shall enter "T1: in-progress emergency group call" state;

- 2) if the user request is to upgrade the call to "IMMINENT PERIL GROUP CALL" and the value of "/<x>/<x>/OffNetwork/ ImminentPerilCallChange" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] set to "true":
 - a) shall set the stored current call type to "IMMINENT PERIL GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45];
 - c) shall store the current UTC time as last call type change time of the call;
 - d) shall store own MCPTT user ID as last user to change call type of the call;
 - e) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2;
 - f) shall stop timer TFG12 (imminent peril end retransmission), if running; and
 - g) shall enter "T3: in-progress imminent peril group call" state;
- 3) shall generate a GROUP CALL ANNOUNCEMENT message as specified in subclause 15.1.3. In the GROUP CALL ANNOUNCEMENT message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call associated with the basic call control state machine;
 - b) shall set the Call type IE to the stored current call type;
 - c) shall set the Refresh interval IE to the stored refresh interval of the call associated with the basic call control state machine;
 - d) shall set the SDP IE to the stored SDP body of the call associated with the basic call control state machine;
 - e) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call associated with the basic call control state machine;
 - f) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call associated with the basic call control state machine;
 - g) shall set the call start time IE to the stored call start time of the call;
 - h) shall set the Last call type change time IE to the stored last call type change time of the call; and
 - i) shall set the Last user to change call type IE to the stored last user to change call type of the call; and
- 4) shall send the GROUP CALL ANNOUNCEMENT message as specified in subclause 10.2.1.1.1;

[TS 24.379, clause 10.2.3.4.8.1]

When in the "T1: in-progress emergency group call" state, upon receiving an indication from:

- 1) the MCPTT user who upgraded the MCPTT group call; or
- an authorized MCPTT user with the value of "/<x>/<x>/Common/MCPTTGroupCall/EmergencyCall/CancelMCPTTGroup" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true",

to downgrade "EMERGENCY GROUP CALL", the MCPTT client:

•••

- 5) shall generate a GROUP CALL EMERGENCY END message as specified in subclause 15.1.15. In the GROUP CALL EMERGENCY END message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call associated with the basic call control state machine;

- b) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call associated with the basic call control state machine;
- c) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call associated with the basic call control state machine;
- d) shall set the Last call type change time IE to the stored last call type change time of the call; and
- e) shall set the Last user to change call type IE to the stored last user to change call type of the call;
- 6) shall send the GROUP CALL EMERGENCY END message as specified in subclause 10.2.1.1.1;

[TS 24.379, clause 10.2.3.4.8.4]

When in the "T3: in-progress imminent peril group call" state, upon receiving an indication from:

- 1) the MCPTT user who upgraded the call; or
- 2) an authorized with the value of "/<*x*>/<*x*>/Common/MCPTTGroupCall/ImminentPerilCall/Cancel" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true",

to downgrade "IMMINENT PERIL GROUP CALL", the MCPTT client:

•••

- 5) shall generate a GROUP CALL IMMINENT PERIL END message as specified in subclause 15.1.14. In the GROUP CALL IMMINENT PERIL END message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call associated with the basic call control state machine;
 - b) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call associated with the basic call control state machine;
 - c) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call associated with the basic call control state machine;
 - d) shall set the Last call type change time IE to the stored last call type change time of the call; and
 - e) shall set the Last user to change call type IE to the stored last user to change call type of the call;
- 6) shall send the GROUP CALL IMMINENT PERIL END message as specified in subclause 10.2.1.1.1;

[TS 24.379, clause 10.2.2.4.5.1]

When in the "S3: part of ongoing call" state, the "S5: pending user action with confirm indication" state, or the "S4: pending user action without confirm indication" state, upon an indication from the MCPTT user to release the group call, the MCPTT client:

1) shall release the media session, if established;

[TS 24.379, clause 10.2.2.4.5.4]

When in the "S6: ignoring incoming call announcements" state, upon expiration of timer TFG5 (not present incoming call announcements), the MCPTT client:

- 1) shall release the stored SDP body of the call;
- 2) shall release the stored call identifier of the call;
- 3) shall release the stored originating MCPTT user ID of the call;
- 4) shall release the stored refresh interval of the call;
- 5) shall release the stored MCPTT group ID of the call;
- 6) shall release the call start time of the call;

- 7) shall destroy the call type control state machine; and
- 8) shall enter the "S1: start-stop" state.

[TS 24.379, clause 10.2.3.4.10]

When in state T1: in-progress emergency group call" or "T2: in-progress basic group call" or "T3: in-progress imminent peril group call" or upon receiving an indication from MCPTT user to release the call, the MCPTT client:

- 1) shall release stored current call type;
- 2) shall release stored ProSe per-packet priority;
- 3) shall release Last call type change time;
- 4) shall release Last user to change call type; and
- 5) shall enter "T0: waiting for the call to establish" state.

[TS 24.380, clause 7.2.3.2.2]

When an MCPTT call is established with session announcement including an explicit floor request, the originating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall send Floor Granted message towards other floor participants. The Floor Granted message:
 - a. shall include the granted priority in the Floor priority field;
 - b. shall include the MCPTT user's own MCPTT ID in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 3. shall set the stored SSRC of the current floor arbitrator to its own SSRC; and
- 4. shall enter 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.5]

Upon receiving an indication from the MCPTT user to release permission to send RTP media, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall send a Floor Release message towards other floor participants, if no queued requests exist: The Floor Release message:
 - a. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - b. if the session is not initiated as a broadcast group call with the B-bit set to '1' (Broadcast group call), shall include a Floor Indicator field set to '0' (normal call);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the current arbitrator; and
- 6. shall enter 'O: silence' state.
- [TS 24.380, clause 7.2.3.3.2]

If the floor participant receives an indication from the MCPTT user to send media, the floor participant:

1. shall send the Floor Request message to other floor participants. The Floor Request message:

- a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
- b. shall include the MCPTT ID of the MCPTT user in the <User ID> value of the User ID field; and
- c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T201 (Floor Request); and
- 5. shall enter 'O: pending request' state.
- [TS 24.380, clause 7.2.3.6.7]

Upon receiving Floor Granted message and if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC;
- 3. shall stop timer T203 (End of RTP media), if running;
- 4. shall stop timer T201 (Floor Request);
- 5. may provide a floor granted notification to the MCPTT user;
- 6. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 7. shall enter 'O: has permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

- 1. shall set the stored SSRC of the current arbitrator to its own SSRC;
- 2. shall stop timer T203 (End of RTP media);
- 3. shall stop timer T201 (Floor Request);
- 4. may provide a floor granted notification to the MCPTT user;
- 5. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 6. shall enter 'O: has permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall set the stored SSRC of the current arbitrator to its own SSRC;
- 2. shall stop timer T203 (End of RTP media);
- 3. shall stop timer T201 (Floor Request);
- 4. may provide a floor granted notification to the MCPTT user;
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and

- 7. shall enter 'O: has permission' state.
- [TS 24.380, clause 7.2.3.5.4]

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, in a session where:

- 1. the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "false"; or
- the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" but the F-bit in the Floor Indicator field is set to '0' (i.e. indicating that queuing of floor requests is not supported) or the Floor Indicator field is not included in the Floor Request message;

then the floor participant:

- 1. shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #1 (Another MCPTT client has permission);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 2. shall remain in 'O: has permission' state.

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, and the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" and the F-bit in the Floor Indicator field is set to '1' (i.e. indicating that queuing of the floor requests is supported) in the Floor Request message, the floor participant:

- 1. shall store the received Floor Request messages;
- 2. if the pending request queue is not full, shall send the Floor Queue Position Info message. The Floor Queue Position Info message:
 - a. shall include in the User ID field the MCPTT ID of the floor participant sending the Floor Request message;
 - b. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - c. shall include the position in the floor request queue in the Queue Info field; and
 - d. shall include the floor priority in the Queue Info field;
- 3. if the pending request queue is full, shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #7 (Queue full);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 4. shall remain in 'O: has permission' state.
- [TS 24.380, clause 7.2.3.5.8]

Upon receiving a Floor Queue Position Request message, the floor participant:

- 1. shall send the Floor Queue Position Info message. The Floor Queue Position Info message:
 - a. shall include the MCPTT ID of the queued floor participant in the Queued User ID field;
 - b. shall include the queue position and floor priority in the Queue Info field;

- c. shall include the SSRC of floor participant sending Floor Queue Position Request message in SSRC of queue floor participant field; and
- d. shall include the User ID of floor participant sending Floor Queue Position Request message in User ID field; and
- 2. remain in the 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.6]

When no more encoded media is received from the user and if at least one Floor Request message is stored (i.e. queuing mode is used in the session), the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall request the MCPTT client to stop sending RTP media packets towards other MCPTT clients;
- 4. shall send the Floor Granted message toward the other floor participants. The Floor Granted message:
 - a. shall include the MCPTT ID of the first floor participant in the queue in the User ID field;
 - b. shall include the SSRC of the first floor participant in the queue in the SSRC of the granted floor participant field;
 - c. shall remove the first floor participant from the queue;
 - d for the remaining floor participants in the queue:
 - i. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - ii. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - iii. shall include the queue position of the floor participant in the Queue Info field; and
 - iv. shall include the priority of the floor participant in the Queue Info field; and
 - e. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 5. shall set the stored SSRC of the current arbitrator to the SSRC of user to whom the floor was granted in the Floor Granted message;
- 6. shall start timer T205 (Floor Granted) and shall initiate counter C205 (Floor Granted) to 1; and
- 7 shall enter the 'O: pending granted' state.
- [TS 24.380, clause 7.2.3.7.3]

On expiry of timer T205 (Floor Granted) and counter C205 (Floor Granted) is less than the upper limit, the floor participant:

- 1. shall send again the Floor Granted message toward the other floor participants. For each participant in the queue the Floor Granted message:
 - a. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - b. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - c. shall include the queue position of the floor participant in the Queue Info field; and
 - d. shall include the priority of the floor participant in the Queue Info field;
- 2. shall restart timer T205 (Floor Granted) and shall increment counter C205 (Floor Granted) by 1; and
- 3. shall remain in 'O: pending granted' state.

[TS 24.380, clause 7.2.3.7.5]

On the expiry of timer T205 (Floor Granted) for the configured upper limit of counter C205 (Floor Granted) with no request pending in the queue, the floor participant:

- 1. shall reset the value of counter C205 (Floor Granted) to 1;
- 2. shall start timer T230 (Inactivity);
- 3. shall clear the stored SSRC of the current arbitrator; and
- 4. shall enter 'O: silence' state.
- [TS 24.380, clause 7.2.3.3.4]

When a Floor Granted message is received and if the User ID in the Floor Granted message does not match its own User ID, the floor participant:

- 1. may provide a floor taken notification to the MCPTT user;
- 2. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating that this is a broadcast group call;
- 3. shall set the stored SSRC of the candidate arbitrator to the SSRC of user to whom the floor was granted in the Floor Granted message;
- 4. shall stop timer T230 (Inactivity);
- 5. shall start timer T203 (End of RTP media); and
- 6. shall enter 'O: has no permission' state.
- [TS 24.380, clause 7.2.3.4.3]

When a Floor Release message is received and if the SSRC in the Floor Release message matches with the stored SSRC of the current arbitrator or with the stored SSRC of the candidate arbitrator, the floor participant:

- 1. may provide floor idle notification to the MCPTT user.
- 2. shall request the MCPTT client to stop rendering received RTP media packets;
- 3. shall stop timer T203 (End of RTP media);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. shall clear the stored SSRC of the current arbitrator; and
- 7. shall enter 'O: silence' state;
- [TS 24.380, clause 7.2.3.3.6]

When a Floor Taken message is received, the floor participant:

- 1. may provide a floor taken notification to the MCPTT user;
- shall set the stored SSRC of the current arbitrator to the SSRC of granted floor participant field in the Floor Taken message;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T203 (End of RTP media); and
- 5. shall enter 'O: has no permission' state.
- [TS 24.380, clause 7.2.3.4.2]

If the floor participant receives an indication from the MCPTT user that the MCPTT user wants to send media, the floor participant:

- 1. shall send the Floor Request message to other clients. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall start timer T201 (Floor Request); and
- 4. shall enter 'O: pending request' state.
- [TS 24.380, clause 7.2.3.6.4]

Upon receiving Floor Deny message, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Deny message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall stop the timer T201 (Floor Request);
- 2. shall provide floor deny notification to the user;
- 3. shall restart the timer T203 (End of RTP media);
- 4. may display the floor deny reason to the user using information in the Reject Cause field; and
- 5. shall enter 'O: has no permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

- 1. shall stop the timer T201 (Floor Request);
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Deny message;
- 3. shall restart the timer T203 (End of RTP media);
- 4. shall provide floor deny notification to the user;
- 5. may display the floor deny reason to the user using information in the Reject Cause field; and
- 6. shall enter 'O: has no permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Deny message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall stop the timer T201 (Floor Request);
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Deny message;
- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. shall restart the timer T203 (End of RTP media);
- 5. shall provide floor deny notification to the user;
- 6. may display the floor deny reason to the user using information in the Reject Cause field; and
- 7. shall enter 'O: has no permission' state.

[TS 24.380, clause 7.2.3.6.3]

Upon receiving Floor Queue Position Info message, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and the value in the SSRC of floor control server field as received in the Floor Queue Position Info message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 3. shall stop timer T201 (Floor Request); and
- 4. shall enter 'O: queued' state.

Otherwise, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Queue Position Info message;
- 3. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 4. shall stop timer T201 (Floor Request); and
- 5. shall enter 'O: queued' state.

Otherwise, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and the value in the SSRC of floor control server field as received in the Floor Queue Position Info message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. shall set the stored SSRC of the current arbitrator to the value in the SSRC of the floor control server field as received in the Floor Queue Position Info message;
- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 5. shall stop timer T201 (Floor Request); and
- 6. shall enter 'O: queued' state.
- [TS 24.380, clause 7.2.3.8.11]

Upon receipt of an indication from the MCPTT client to request the queue position information, the floor participant:

- 1. shall send the Floor Queue Position Request message; The Floor Queue Position Request message:
 - a. shall include the SSRC of sent Floor Request message in SSRC of floor participant field; and
 - b. shall include the own MCPTT User ID in User ID field;
- 2. shall initialize the counter C204 (Floor Queue Position request) with value set to 1;
- 3. shall start timer T204 (Floor Queue Position request); and
- 4. remain in the 'O: queued' state.

[TS 24.380, clause 7.2.3.8.3]

Upon receiving Floor Queue Position Info message, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Queue Position Info message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall update the queue position;
- 2. shall notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 3. shall stop timer T204 (Floor Queue Position request); and
- 4. shall remain in 'O: queued' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Queue Position Info message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall update the queue position;
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Queue Position Info message;
- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. shall notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 5. shall stop timer T204 (Floor Queue Position request); and
- 6. shall remain in 'O: queued' state.
- [TS 24.380, clause 7.2.3.8.6]

Upon receiving Floor Granted message and if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall start timer T233(Pending user action), if not running already;
- 3. shall notify the MCPTT user about of the floor grant;
- 4. if the Floor Indicator field is included, and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 5. shall remain in 'O: queued' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall start timer T233(Pending user action), if not running already;
- 3. shall notify the MCPTT user about of the floor grant;
- 4. shall set the stored SSRC of the current arbitrator to its own SSRC;
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. if the Floor Indicator field is included, and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 7. shall remain in 'O: queued' state.

[TS 24.380, clause 7.2.3.8.8]

If the floor participant receives an indication from the user that the user wants to send media and the timer T233 (pending user action) is running, the floor participant:

- 1. shall stop the timer T233 (Pending user action);
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC; and
- 3. shall enter 'O: has permission' state.
- [TS 24.380, clause 7.2.3.5.7]

Upon receiving a Floor Request message which is pre-emptive as determined by subclause 4.1.1.5, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall request the MCPTT client to stop sending RTP media packets towards other MCPTT clients;
- 4. shall send a Floor Granted message towards the other floor participants. The Floor Granted message:
 - a. shall include the MCPTT ID of the Floor Request message received in the User ID field;
 - b. shall include the SSRC of floor participant sending the Floor Request message in the SSRC of floor control server field; and
 - c. if the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.483 [4] is set to "true", for each floor participant in the queue:
 - i. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - ii. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - iii. shall include the queue position of the floor participant in the Queue Info field; and
 - iv. shall include the priority of the floor participant in the Queue Info field;
- 5. shall start timer T205 (Floor Granted) and shall initiate counter C205 (Floor Granted) to 1;
- 6. shall set the stored SSRC of the current floor arbitrator to the SSRC of the user to whom the floor was granted in the Floor Granted message; and
- 7. shall enter the 'O: pending granted' state.
- [TS 24.380, clause 7.2.3.6.9]

On expiry of timer T201 (Floor Request) if the counter C201 (Floor Request) has not reached its upper limit, the floor participant:

- 1. shall send the Floor Request message to other floor participants. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the own MCPTT user in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall restart the timer T201 (Floor Request) and increment counter C201 (Floor Request) by 1; and
- 3. shall remain in the 'O: pending request' state.

[TS 24.380, clause 7.2.3.6.6]

When timer T201 (Floor Request) expires and counter C201 (Floor Request) reaches its upper limit, the floor participant:

- 1. shall send the Floor Taken message toward the other floor participants. The Floor Taken message:
 - a. shall include the floor participant's own SSRC in the SSRC of the granted floor participant field;
 - b. shall include the floor participant's own MCPTT ID in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC;
- 3. shall stop timer T203 (End of RTP media), if running; and
- 4. shall enter 'O: has permission' state.
- 7.1.1.3 Test description

7.1.1.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- -- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.1.3.2 Test procedure sequence

Table 7.1.1.3.2-1: Main behaviour

St	Procedure Message Sequence			Procedure Message Sequence		Message Sequence TP		Verdict
		U - S	Message					
1	Power up the UE	-	-	-	-			
1A	Trigger the UE to reset UTC time and location.	-	-	-	-			
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).							
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-			
3	Make the UE (MCPTT Client) initiate an off- network basic group call (NOTE 1)	-	-	-	-			
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-			
4	Check: Does the UE (MCPTT client) send a GROUP CALL PROBE message to determine the current call status of the group? (NOTE 2)	>	GROUP CALL PROBE	1	Р			
-	EXCEPTION: Step 5 is executed a total of 3 times							
5	Check: At the expiration of timer TFG3 (call probe retransmission), does the UE (MCPTT Client) send a retransmission of the GROUP CALL PROBE sent in step 4?	>	GROUP CALL PROBE	1	Р			
6	Check: At the expiration of timer TFG1 (wait for call announcement), and after receiving no response to the GROUP CALL PROBE, does the UE (MCPTT Client) send a GROUP CALL ANNOUNCEMENT message to initiate an off- network basic group call?	>	GROUP CALL ANNOUNCEMENT	1	Ρ			
7	The SS-UE1 (MCPTT client) sends a GROUP CALL ACCEPT accepting the GROUP CALL ANNOUNCEMENT	<	GROUP CALL ACCEPT	-	-			
8	Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants?	>	Floor Granted	2	Р			
9	Make the UE (MCPTT User) release the floor (NOTE 1), (NOTE 3)	-	-	-	-			
10	Check: Does the UE (MCPTT Client) send a Floor Release message to the other floor participants?	>	Floor Release	2	Р			
11	Make the UE (MCPTT User) request the floor (NOTE 1), (NOTE 4)	-	-	-	-			
12	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	2	Р			
13	The SS-UE1 (MCPTT client) sends a Floor Granted message granting the floor to the UE (MCPTT Client)	<	Floor Granted	-	-			
14	The SS-UE1 (MCPTT client), having the same priority as the UE (MCPTT Client), sends a Floor Request message to the UE (MCPTT Client) with the F bit in the Floor Indication field set to '0' indicating that the requesting UE does not support queueing	<	Floor Request	-	-			

15	Check: Does the UE (MCPTT Client) send a Floor Deny message to the sender of the Floor Request message with the Reject Cause field set to #1 (Another MCPTT client has permission)?	>	Floor Deny	2	Р
16	The SS-UE1 (MCPTT client), having the same priority as the UE (MCPTT Client), sends a Floor Request message to the UE (MCPTT Client) with the F bit in the Floor Indication field set to '1'	<	Floor Request	-	-
17	Check: Does the UE (MCPTT Client) add the requester to the queue and send a Floor Queue Position Info message to the sender of the Floor Request message?	>	Floor Queue Position Info	2	Ρ
18	The SS-UE1 (MCPTT client) sends a Floor Queue Position Request message to the UE (MCPTT Client)	\- \	Floor Queue Position Request	-	-
19	Check: Does the UE (MCPTT Client) respond to the Floor Queue Position Request message with e a Floor Queue Position Info message?	>	Floor Queue Position Info	2	Р
20	Make the UE (MCPTT User) release the floor (NOTE 1), (NOTE 5)	-	-	-	-
21	Check: Does the UE (MCPTT Client) send a Floor Granted message to the floor participants indicating the queued participant now has the floor? (NOTE 6)	>	Floor Granted	2	Ρ
-	EXCEPTION: Step 22 is executed a total of 3 times	-	-	-	-
22	Check: Upon expiry of timer T205 (Floor Granted) and while counter C205 (Floor Granted) is less than its maximum value, does the UE (MCPTT Client) retransmit the Floor Granted message send in step 21?	>	Floor Granted	2	Р
23	Void	-	-	2	Р
24	The SS-UE1 (MCPTT client) sends a Floor Taken message to the UE (MCPTT Client)	<	Floor Taken	-	-
25	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
26	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	2	Р
27	The SS-UE1 (MCPTT client) responds with a Floor Deny message	<	Floor Deny	-	-
28	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
29	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	2	Р
30	The SS-UE1 (MCPTT client) responds with a Floor Queue Position Info message and places the UE (MCPTT Client) in the queue	<	Floor Queue Position Info	-	-
31	Make the UE (MCPTT User) request the queue position of the UE (MCPTT Client) (NOTE 1)	-	-	-	-
32	Check: Does the UE (MCPTT Client) send a Floor Queue Position Request message?	>	Floor Queue Position Request	2	Р
33	The SS-UE1 (MCPTT client) responds with a Floor Queue Position Info message	<	Floor Queue Position Info	-	-
34	The SS-UE1 (MCPTT client) sends a Floor Granted message to the UE (MCPTT Client) granting the floor to the UE (MCPTT Client)	<	Floor Granted	-	-
35	Check: Does the UE (MCPTT Client) notify the user (MCPTT User) of the floor grant? (NOTE 1)	-	-	2	Р

36	Make the UE (MCPTT User) accept the floor	-	-	-	-
	grant (NOTE 1)				
37	The SS-UE1 (MCPTT client), with a higher	<	Floor Request	-	
01	priority than the UE (MCPTT Client), sends a				
	Floor Request message with preemption				
38	Check: Does the UE (MCPTT Client) respond	>	Floor Granted	2	Р
	by sending a Floor Granted message?				
	(NOTE 6)				
-	EXCEPTION: Step 39 is executed a total of 3	-	-	-	-
39	times Check: Upon expiry of timer T205 (Floor		Floor Granted	2	Р
39	Granted) and while counter C205 (Floor	>	FIOU Granted	2	Г
	Granted) is less than its maximum value, does				
	the UE (MCPTT Client) retransmit the Floor				
	Granted message send in step 38?				
40	Void	-	-	2	Р
41	Make the UE (MCPTT User) request the floor	-	-	-	-
	(NOTE 1)				
42	Check: Does the UE (MCPTT Client) send a	>	Floor Request	2	Р
	Floor Request message to the floor				
	participants? (NOTE 7)				
-	EXCEPTION: Step 43 is executed a total of 2	-	-	-	
	times				
43	Check: Upon expiry of timer T201 (Floor	>	Floor Request	2	Р
	Request) and while counter C201 (Floor				
	Request) is less than its maximum value, does				
	the UE (MCPTT Client) retransmit the Floor				
11	Request message send in step 42?		Floor Taken	2	Р
44	Check: Upon expiry of timer T201 (Floor Request) and with counter C201 (Floor	>	FIOOFTAKEN	2	Р
	Request) equal to its maximum value, does the				
	UE (MCPTT Client) send a Floor Taken				
	message?				
45	Make the UE (MCPTT User) release the floor	-	-	-	-
	(NOTE 1)			-	
46	Check: Does the UE (MCPTT Client) send a	>	Floor Release	2	Р
	Floor Release message to the other floor participants?				
47	Make the UE (MCPTT Client) upgrade the off-	-	-	-	-
77	network group call to an emergency call				
	(NOTE 1)				
48	Check: Does the UE (MCPTT Client) send a	>	GROUP CALL ANNOUNCEMENT	3	Р
	GROUP CALL ANNOUNCEMENT to upgrade				
	the call to an emergency call?				
49	Check: Does the UE (MCPTT Client) send a	>	Floor Granted	4	Р
	Floor Granted message towards the other floor participants?				
50	Make the UE (MCPTT User) release the floor	-	-	-	-
00	(NOTE 1)				
51	Check: Does the UE (MCPTT Client) send a	>	Floor Release	4	Р
	Floor Release message to the other floor				
	participants?				
52	Make the UE (MCPTT Client) downgrade the	-	-	-	-
	off-network group call from an emergency call				
E2	(NOTE 1) Check: Does the UE (MCPTT Client) send a			5	Р
53	GROUP CALL EMERGENCY END to	>	GROUP CALL EMERGENCY END	5	г
	downgrade the emergency call?				
54	Make the UE (MCPTT Client) upgrade the off-				
	network group call to an imminent peril call				
	(NOTE 1)				
55	Check: Does the UE (MCPTT Client) send a	>	GROUP CALL ANNOUNCEMENT	6	Р
	GROUP CLL ANNOUNCEMENT to upgrade the call to an imminent peril call?				
	Line calito an imminent peril call?	1			

56	Check: Does the UE (MCPTT Client) send a	>	Floor Granted	7	Р
	Floor Granted message towards the other floor			-	_
	participants?				
57	Make the UE (MCPTT User) release the floor	-	-	-	-
	(NOTE 1)				
58	Check: Does the UE (MCPTT Client) send a	>	Floor Release	7	Р
	Floor Release message to the other floor			-	-
	participants?				
59	Make the UE (MCPTT Client) downgrade the	-	-	-	-
00	off-network group call from an imminent peril				
	call				
	(NOTE 1)				
60	Check: Does the UE (MCPTT Client) send a	>	GROUP CALL IMMINENT PERIL	8	Р
00	GROUP CALL IMMINENT PERIL END to	_	END	Ŭ	
	downgrade the imminent peril call?		END		
61	Make the UE (MCPTT Client) release the				
01	group call	-	-	-	-
	(NOTE 1)				
NOTE	1: This is expected to be done via a suitable imp	lamentat	ion dependent MMI		
				l and T	
NOTE	2: Timer TFG3 (call probe retransmission)=40ms				
	for call announcement)=150ms as defined in	15 30.57	9-1 [2], Table 5.5.6.1-1 are started up	on the	senaing of
NOTE	the GROUP CALL PROBE message	hoforo tir	nor T207 (Stop tolking) evolves then	the MC	ртт
NOTE	3: If the MCPTT User does not release the floor				
	Client will enter the 'O: silence' state per TS 2				
	(Stop talking warning) is started upon the sen				
	starts upon the expiration of Timer T206 (Stop				
	to TransmitTimeout=60s, as defined in TS 36			nvvarnir	ng=50s,
	as defined in TS 36.579-1 [2], Table 5.5.8.4-1				
	TransmissionWarning=50s, as defined in TS				t is found
NOTE	that the specified timer(s) value(s) are not large				
NOTE	1				
	will enter the 'O: 'Start-stop" state per 24.380				
	(Inactivity) is started upon the sending of the I				
	defined in TS 36.579-1 [2], Table 5.5.8.1-1. If			ied time	er value is
	not large enough, then a new value needs to				
NOTE					
	Client will enter the 'O: silence' state per 24.3				
	(Stop talking warning) is started upon the rece				
	(Stop talking) starts upon the expiration of Tin				
	warning)=10s is set to TransmitTimeout=60s,	as define	ed in TS 36.579-1 [2], Table 5.5.8.4-1,	minus	
	TransmissionWarning=50s, as defined in TS	36.579-1	[2], Table 5.5.8.4-1. Timer T207 (Stop	o talking	g)=50s is
	set to TransmissionWarning=50s, as defined				
	found that the specified timer(s) value(s) are r				
NOTE	6: Timer T205 (Floor Granted) and Counter C20				
	Granted message. Timer T205 (Floor Granted				
	C205 (Floor Granted) is set to 1 and the maxi				
	36.579-1 [2], Table 5.5.8.1-1.				
NOTE	7: Timer T201 (Floor Request) and Counter C20	1 (Floor	Request) are started upon the sending	a of the	Floor
	Request message. Timer T201 (Floor Request				
	201 (Floor Request) is set to 1 and the maxim				
	36.579-1 [2], Table 5.5.8.1-1.				
1					

7.1.1.3.3 Specific message contents

Table 7.1.1.3.3-1: GROUP CALL ANNOUNCEMENT (step 48, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency group	
		call	

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent peril	
		group call	

Table 7.1.1.3.3-2: GROUP CALL ANNOUNCEMENT (step 55, Table 7.1.1.3.2-1)

Table 7.1.1.3.3-3: Floor Granted (step 8, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK					
Information Element	Value/remark	Comment	Condition		
Duration					
Duration	any allowed value				
Floor priority	"0"				
Floor Indicator					
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value			

Table 7.1.1.3.3-4: Floor Granted (steps 13, 34, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	ʻ100001000000000'	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.1.3.3-5: Floor Granted (steps 21, 22, 38, 39, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-	1 condition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value	128 sec (an arbitrary value)	
SSRC of granted floor participant	"10000000 11111111 00000000 10000000"	The SSRC of the floor participant being granted the floor, in this case the SSRC of MCPTT-client-B	
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition	ion OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value	128 sec (an arbitrary value)	
Floor priority	"0"		
Floor Indicator			
Floor Indicator	'00010X000000000'	bit D=1 (Emergency call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-6: Floor Granted (step 49, Table 7.1.1.3.2-1)

Table 7.1.1.3.3-7: Floor Granted (step 56, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condi	tion OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value	128 sec (an arbitrary value)	
Floor priority	"0"		
Floor Indicator			
Floor Indicator	'00001X000000000'	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-8: Floor Release (steps 10, 46, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-9: Floor Release (step 51, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 con	dition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010X000000000'	bit D=1 (Emergency call) bit F=X (Queueing supported) any value	

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00001X000000000'	bit E=1 (Imminent Peril call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-10: Floor Release (step 58, Table 7.1.1.3.2-1)

Table 7.1.1.3.3-11: Floor Request (steps 12, 26, 29, 42, 43, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2- Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-12: Floor Request (step 14, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"100000000000000000"	bit A=1 (Normal call) bit F=0 (Queueing not supported)	

Table 7.1.1.3.3-13: Floor Request (step 16, Table 7.1.1.3.2-1)

Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"1000010000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.1.3.3-14: Floor Request (step 37, Table 7.1.1.3.2-1)

Information Element	Value/remark	Comment	Condition
Floor Priority	"12"	Priority is higher than mcptt-client- A	
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"1000010000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Information Element	Value/remark	Comment	Condition
Reject Cause			
Reject Cause	any allowed value		
Reject Phrase	not present or any allowed value		
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-15: Floor Deny (step 15, Table 7.1.1.3.2-1)

Table 7.1.1.3.3-16: Floor Deny (step 27, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"1000010000000000"	bit A=1 (Normal	
		call) bit F=1 (Queueing	
		supported)	

Table 7.1.1.3.3-17: Floor Queue Position Info (steps 17, 19, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.10-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_A_ID		
Queued User ID			
Queued User ID	Px_MCPTT_User_B_ID		
Queue Info			
Queue Position Info	"1"		
Queue Priority Level	any allowed value		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.1.3.3-18: Floor Queue Position Info (steps 30, 33, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.10-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Queued User ID			
Queued User ID	Px_MCPTT_User_A_ID		
Queue Info			
Queue Position Info	"1"		
Queue Priority Level	"0"		
Floor Indicator			
Floor Indicator	'100001000000000'	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.9-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		

Table 7.1.1.3.3-19: Floor Queue Position Request (step 18, Table 7.1.1.3.2-1)

Table 7.1.1.3.3-20: Floor Taken (step 24, Table 7.1.1.3.2-1)

Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Granted Party's Identity			
Granted Party's Identity	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	'100001000000000'	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.1.3.3-21: Floor Taken (step 44, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.7-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Granted Party's Identity			
Granted Party's Identity	Px_MCPTT_User_A_ID		
Floor Indicator			
Floor Indicator	"10000X0000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	
SSRC of granted floor participant	"10000000 11111111 00000000 00000001"		

7.1.2 Off-network / Group Call / Floor Control / Upgrade to Emergency Call / Downgrade from Emergency / Upgrade to Imminent Peril / Downgrade from Imminent Peril / Release Call / Client Terminated (CT)

7.1.2.1 Test Purpose (TP)

}

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
receive group calls in off-network environment, and the UE configured that user acknowledgement is
not required, and the UE (MCPTT Client) is in an off-network environment }
ensure that {

when { UE (MCPTT Client) receives a GROUP CALL ANNOUNCEMENT message with Confirm mode indication
present }

then { UE (MCPTT Client) enters the "S3: part of ongoing call" state and sends a GROUP CALL ACCEPT message}

(2)

with { UE (MCPTT Client) being in an off-network MCPTT Pre-arranged Group Call }
ensure that {
 when { the MCPTT User (MCPTT Client) engages in communication with the invited MCPTT User(s) }

then { UE (MCPTT Client) respects the floor control imposed by the floor control entity/arbitrator (Floor Request during a talk burst, Floor granting/release, Floor idle, Floor deny, Floor taken/revoked, Floor request queued and queue handling) } } (3)with { UE (MCPTT Client) being in an upgraded off-network emergency group call } ensure that { when { the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) } then { UE (MCPTT Client) respects the floor control imposed by the floor control entity/arbitrator } } (4)with { UE (MCPTT Client) being in an upgraded off-network imminent peril group call } ensure that { when $\{$ the MCPTT User (MCPTT Client) continues communication with the invited MCPTT User(s) $\}$ then { UE (MCPTT Client) respects the floor control imposed by the floor control

7.1.2.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.3.3, 10.2.3.4.5, 10.2.3.4.7.2, 10.2.3.4.8.3, 10.2.3.4.8.6, 10.2.2.4.5.4, TS 24.380 clauses 7.2.3.2.7, 7.2.3.5.5, 7.2.3.3.2, 7.2.3.6.7, 7.2.3.5.4, 7.2.3.5.6, 7.2.3.7.3, 7.2.3.7.5, 7.2.3.3.4, 7.2.3.4.3, 7.2.3.3.6, 7.2.3.4.2, 7.2.3.6.4, 7.2.3.6.3, 7.2.3.8.11, 7.2.3.8.3, 7.2.3.8.6, 7.2.3.5.7, 7.2.3.6.9, 7.2.3.6.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.3.3]

entity/arbitrator }
}

When in the "S1: start-stop" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE not matching MCPTT group ID of the call stored for other state machines, the MCPTT client:

- shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL ANNOUNCEMENT message as the MCPTT group ID of the call;
- 6) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 7) shall create a call type control state machine as described in subclause 10.2.3.2;

•••

- 9) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - a) shall establish a media session based on the stored SDP body of the call;
 - b) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
 - c) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE:
 - i) shall generate a GROUP CALL ACCEPT message as specified in subclause 15.1.4. In the GROUP CALL ACCEPT message, the MCPTT client:

- A) shall set the Call identifier IE to the stored call identifier of the call;
- B) shall set the Sending MCPTT user ID IE to own MCPTT user id;
- C) shall set the Call type IE to the stored current call type associated with the call type control state machine; and
- D) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
- ii) shall send the GROUP CALL ACCEPT message as specified in subclause 10.2.1.1.1;
- d) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
- e) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
- f) shall enter the "S3: part of ongoing call" state.

[TS 24.379, clause 10.2.3.4.5]

When in the "T0: waiting for the call to establish" state, upon receipt of a GROUP CALL ANNOUNCEMENT message by an idle MCPTT client when MCPTT user acknowledgement is not required, the MCPTT client:

- 1) shall set the stored last call type change time to the Last call type change time IE of the GROUP CALL ANNOUNCEMENT message;
- 2) shall set the last user to change call type to the Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message;
- 3) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "EMERGENCY GROUP CALL":
 - a) shall set the stored current call type to "EMERGENCY GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - c) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and
 - d) shall enter "T1: in-progress emergency group call" state;
- 4) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "IMMINENT PERIL GROUP CALL":
 - a) shall set the stored current call type to "IMMINENT PERIL GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45];
 - c) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - d) shall enter "T3: in-progress imminent peril group call" state; and
- 5) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "BASIC GROUP CALL":
 - a) shall set the stored current call type to "BASIC GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45]; and
 - c) shall enter "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.3.4.7.2]

When in the "T1: in-progress emergency group call" state or "T2: in-progress basic group call" state or "T3: in-progress imminent peril group call" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE matching with MCPTT group ID of the ongoing call and the Call Identifier IE being the same as the stored call identifier of the call, the MCPTT client:

- if the stored last user to change call type of the call is same as the Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message and the stored last call type change time is smaller than Last call type change time IE of the GROUP CALL ANNOUNCEMENT message:
 - a) shall set the stored last call type change time of the call to Last call type change time IE of the GROUP CALL ANNOUNCEMENT message;
 - b) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "EMERGENCY GROUP CALL" and the stored call type is other than "EMERGENCY GROUP CALL":
 - i) shall set the stored current call type to "EMERGENCY GROUP CALL";
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - iii) shall stop timer TFG14 (implicit downgrade imminent peril), if running;
 - iv) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and
 - v) shall enter "T1: in-progress emergency group call" state;
 - c) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "IMMINENT PERIL GROUP CALL" and the stored call type is other than "IMMINENT PERIL GROUP CALL":
 - i) shall set the stored current call type to "IMMINENT PERIL GROUP CALL";
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45];
 - iii) shall stop timer TFG13 (implicit downgrade emergency), if running;
 - iv) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - v) shall enter "T3: in-progress imminent peril group call" state; and
 - d) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "BASIC GROUP CALL" and the stored call type is other than "BASIC GROUP CALL":
 - i) shall set the stored current call type to "BASIC GROUP CALL";
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45];
 - iii) shall stop timer TFG13 (implicit downgrade emergency), if running;
 - iv) shall stop timer TFG14 (implicit downgrade imminent peril), if running; and
 - v) shall enter "T2: in-progress basic group call" state; and
- if the stored last user to change call type of the call is different from the Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message and:
 - a) if the stored call type is same as Call type IE in the received GROUP CALL ANNOUNCEMENT message and the stored last call type change time is smaller than Last call type change time IE of the GROUP CALL ANNOUNCEMENT message:
 - i) shall set the stored last call type change time of the call to Last call type change time IE of the GROUP CALL ANNOUNCEMENT message; and

- ii) shall set the stored last user to change call type of the call to Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message;
- b) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "EMERGENCY GROUP CALL" and the stored call type is other than "EMERGENCY GROUP CALL":
 - i) shall set the stored last call type change time of the call to Last call type change time IE of the GROUP CALL ANNOUNCEMENT message;
 - ii) shall set the stored last user to change call type of the call to Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message;
 - iii) shall set the stored current call type to "EMERGENCY GROUP CALL";
 - iv) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - v) shall stop timer TFG14 (implicit downgrade imminent peril), if running;
 - vi) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and
 - vii)shall enter "T1: in-progress emergency group call" state; and
- c) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "IMMINENT PERIL GROUP CALL" and the stored call type is "BASIC GROUP CALL":
 - i) shall set the stored last call type change time of the call to Last call type change time IE of the GROUP CALL ANNOUNCEMENT message;
 - ii) shall set the stored last user to change call type of the call to Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message;
 - iii) shall set the stored current call type to "IMMINENT PERIL GROUP CALL ";
 - iv) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45];
 - v) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - vi) shall enter "T3: in-progress imminent peril group call" state; and
- d) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "BASIC GROUP CALL" and the stored call type is other than "BASIC GROUP CALL":
 - i) shall set the stored current call type to "BASIC GROUP CALL";
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.483 [45];
 - iii) shall stop timer TFG13 (implicit downgrade emergency), if running;
 - iv) shall stop timer TFG14 (implicit downgrade imminent peril), if running; and
 - v) shall enter "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.3.4.8.3]

When in the "T1: in-progress emergency group call" state, upon receiving GROUP CALL EMERGENCY END message, the MCPTT client:

- shall set the stored last call type change time to the Last call type change time IE of the received GROUP CALL EMERGENCY END message;
- shall set the stored last user to change call type to the Last user to change call type IE of the received GROUP CALL EMERGENCY END message;

- 3) shall set the stored current call type to "BASIC GROUP CALL";
- shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45];
- 5) shall stop timer TFG13 (implicit downgrade emergency); and
- 6) shall enter the "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.3.4.8.6]

When in the "T3: in-progress imminent peril group call" state, upon receiving GROUP CALL IMMINENT PERIL END message, the MCPTT client:

- 1) shall set the stored last call type change time to the Last call type change time IE of the received GROUP CALL IMMINENT PERIL END message;
- 2) shall set the stored last user to change call type to the Last user to change call type IE of the received GROUP CALL IMMINENT PERIL END message;
- 3) shall set the stored current call type to "BASIC GROUP CALL";
- 4) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45];
- 5) shall stop timer TFG14 (implicit downgrade imminent peril); and
- 6) shall enter the "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.2.4.5.4]

When in the "S6: ignoring incoming call announcements" state, upon expiration of timer TFG5 (not present incoming call announcements), the MCPTT client:

- 1) shall release the stored SDP body of the call;
- 2) shall release the stored call identifier of the call;
- 3) shall release the stored originating MCPTT user ID of the call;
- 4) shall release the stored refresh interval of the call;
- 5) shall release the stored MCPTT group ID of the call;
- 6) shall release the call start time of the call;
- 7) shall destroy the call type control state machine as specified in subclause 10.2.3.4.10 or 10.2.3.4.11; and
- 8) shall enter the "S1: start-stop" state.

[TS 24.380, clause 7.2.3.2.7]

When a Floor Granted message is received and if the User ID in the Floor Granted message does not match its own User ID, the floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. may provide a floor taken notification to the MCPTT user;
- 3. shall set the stored SSRC of the candidate arbitrator to the SSRC of user to whom the floor was granted in the Floor Granted message;
- 4. shall start timer T203 (End of RTP media); and
- 5. shall enter 'O: has no permission' state.

[TS 24.380, clause 7.2.3.5.5]

Upon receiving an indication from the MCPTT user to release permission to send RTP media, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall send a Floor Release message towards other floor participants, if no queued requests exist: The Floor Release message:
 - a. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - b. if the session is not initiated as a broadcast group call with the B-bit set to '1' (Broadcast group call), shall include a Floor Indicator field set to '0' (normal call);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the current arbitrator; and
- 6. shall enter 'O: silence' state.
- [TS 24.380, clause 7.2.3.3.2]

If the floor participant receives an indication from the MCPTT user to send media, the floor participant:

- 1. shall send the Floor Request message to other floor participants. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the <User ID> value of the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T201 (Floor Request); and
- 5. shall enter 'O: pending request' state.

[TS 24.380, clause 7.2.3.6.7]

Upon receiving Floor Granted message and if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC;
- 3. shall stop timer T203 (End of RTP media), if running;
- 4. shall stop timer T201 (Floor Request);
- 5. may provide a floor granted notification to the MCPTT user;
- 6. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 7. shall enter 'O: has permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

1. shall set the stored SSRC of the current arbitrator to its own SSRC;

- 2. shall stop timer T203 (End of RTP media);
- 3. shall stop timer T201 (Floor Request);
- 4. may provide a floor granted notification to the MCPTT user;
- 5. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 6. shall enter 'O: has permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall set the stored SSRC of the current arbitrator to its own SSRC;
- 2. shall stop timer T203 (End of RTP media);
- 3. shall stop timer T201 (Floor Request);
- 4. may provide a floor granted notification to the MCPTT user;
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. if the Floor Indicator field is included and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 7. shall enter 'O: has permission' state.
- [TS 24.380, clause 7.2.3.5.4]

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, in a session where:

- 1. the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "false"; or
- the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" but the F-bit in the Floor Indicator field is set to '0' (i.e. indicating that queuing of floor requests is not supported) or the Floor Indicator field is not included in the Floor Request message;

then the floor participant:

- 1. shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #1 (Another MCPTT client has permission);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 2. shall remain in 'O: has permission' state.

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, and the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" and the F-bit in the Floor Indicator field is set to '1' (i.e. indicating that queuing of the floor requests is supported) in the Floor Request message, the floor participant:

- 1. shall store the received Floor Request messages;
- 2. if the pending request queue is not full, shall send the Floor Queue Position Info message. The Floor Queue Position Info message:
 - a. shall include in the User ID field the MCPTT ID of the floor participant sending the Floor Request message;

- b. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
- c. shall include the position in the floor request queue in the Queue Info field; and
- d. shall include the floor priority in the Queue Info field;
- 3. if the pending request queue is full, shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #7 (Queue full);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 4. shall remain in 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.8]

Upon receiving a Floor Queue Position Request message, the floor participant:

- 1. shall send the Floor Queue Position Info message. The Floor Queue Position Info message:
 - a. shall include the MCPTT ID of the queued floor participant in the Queued User ID field;
 - b. shall include the queue position and floor priority in the Queue Info field;
 - c. shall include the SSRC of floor participant sending Floor Queue Position Request message in SSRC of queue floor participant field; and
 - d. shall include the User ID of floor participant sending Floor Queue Position Request message in User ID field; and
- 2. remain in the 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.6]

When no more encoded media is received from the user and if at least one Floor Request message is stored (i.e. queuing mode is used in the session), the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall request the MCPTT client to stop sending RTP media packets towards other MCPTT clients;
- 4. shall send the Floor Granted message toward the other floor participants. The Floor Granted message:
 - a. shall include the MCPTT ID of the first floor participant in the queue in the User ID field;
 - b. shall include the SSRC of the first floor participant in the queue in the SSRC of the granted floor participant field;
 - c. shall remove the first floor participant from the queue;
 - d for the remaining floor participants in the queue:
 - i. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - ii. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - iii. shall include the queue position of the floor participant in the Queue Info field; and
 - iv. shall include the priority of the floor participant in the Queue Info field; and
 - e. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;

- 5. shall set the stored SSRC of the current arbitrator to the SSRC of user to whom the floor was granted in the Floor Granted message;
- 6. shall start timer T205 (Floor Granted) and shall initiate counter C205 (Floor Granted) to 1; and
- 7 shall enter the 'O: pending granted' state.
- [TS 24.380, clause 7.2.3.7.3]

On expiry of timer T205 (Floor Granted) and counter C205 (Floor Granted) is less than the upper limit, the floor participant:

- 1. shall send again the Floor Granted message toward the other floor participants. For each participant in the queue the Floor Granted message:
 - a. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - b. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - c. shall include the queue position of the floor participant in the Queue Info field; and
 - d. shall include the priority of the floor participant in the Queue Info field;
- 2. shall restart timer T205 (Floor Granted) and shall increment counter C205 (Floor Granted) by 1; and
- 3. shall remain in 'O: pending granted' state.
- [TS 24.380, clause 7.2.3.7.5]

On the expiry of timer T205 (Floor Granted) for the configured upper limit of counter C205 (Floor Granted) with no request pending in the queue, the floor participant:

- 1. shall reset the value of counter C205 (Floor Granted) to 1;
- 2. shall start timer T230 (Inactivity);
- 3. shall clear the stored SSRC of the current arbitrator; and
- 4. shall enter 'O: silence' state.
- [TS 24.380, clause 7.2.3.3.4]

When a Floor Granted message is received and if the User ID in the Floor Granted message does not match its own User ID, the floor participant:

- 1. may provide a floor taken notification to the MCPTT user;
- 2. if the Floor Indicator field is included and the B-bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating that this is a broadcast group call;
- 3. shall set the stored SSRC of the candidate arbitrator to the SSRC of user to whom the floor was granted in the Floor Granted message;
- 4. shall stop timer T230 (Inactivity);
- 5. shall start timer T203 (End of RTP media); and
- 6. shall enter 'O: has no permission' state.
- [TS 24.380, clause 7.2.3.4.3]

When a Floor Release message is received and if the SSRC in the Floor Release message matches with the stored SSRC of the current arbitrator or with the stored SSRC of the candidate arbitrator, the floor participant:

- 1. may provide floor idle notification to the MCPTT user.
- 2. shall request the MCPTT client to stop rendering received RTP media packets;

- 3. shall stop timer T203 (End of RTP media);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. shall clear the stored SSRC of the current arbitrator; and
- 7. shall enter 'O: silence' state;
- [TS 24.380, clause 7.2.3.3.6]

When a Floor Taken message is received, the floor participant:

- 1. may provide a floor taken notification to the MCPTT user;
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of granted floor participant field in the Floor Taken message;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T203 (End of RTP media); and
- 5. shall enter 'O: has no permission' state.

[TS 24.380, clause 7.2.3.4.2]

If the floor participant receives an indication from the MCPTT user that the MCPTT user wants to send media, the floor participant:

- 1. shall send the Floor Request message to other clients. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall start timer T201 (Floor Request); and
- 4. shall enter 'O: pending request' state.

[TS 24.380, clause 7.2.3.6.4]

Upon receiving Floor Deny message, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Deny message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall stop the timer T201 (Floor Request);
- 2. shall provide floor deny notification to the user;
- 3. shall restart the timer T203 (End of RTP media);
- 4. may display the floor deny reason to the user using information in the Reject Cause field; and
- 5. shall enter 'O: has no permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

1. shall stop the timer T201 (Floor Request);

- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Deny message;
- 3. shall restart the timer T203 (End of RTP media);
- 4. shall provide floor deny notification to the user;
- 5. may display the floor deny reason to the user using information in the Reject Cause field; and
- 6. shall enter 'O: has no permission' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Deny message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall stop the timer T201 (Floor Request);
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Deny message;
- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. shall restart the timer T203 (End of RTP media);
- 5. shall provide floor deny notification to the user;
- 6. may display the floor deny reason to the user using information in the Reject Cause field; and
- 7. shall enter 'O: has no permission' state.
- [TS 24.380, clause 7.2.3.6.3]

Upon receiving Floor Queue Position Info message, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and the value in the SSRC of floor control server field as received in the Floor Queue Position Info message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 3. shall stop timer T201 (Floor Request); and
- 4. shall enter 'O: queued' state.

Otherwise, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and there is no stored SSRC of the current arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Queue Position Info message;
- 3. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 4. shall stop timer T201 (Floor Request); and
- 5. shall enter 'O: queued' state.

Otherwise, if the <User ID> value in the Queued User ID field matches its own MCPTT ID and the value in the SSRC of floor control server field as received in the Floor Queue Position Info message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall update the queue status;
- 2. shall set the stored SSRC of the current arbitrator to the value in the SSRC of the floor control server field as received in the Floor Queue Position Info message;

- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. may notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 5. shall stop timer T201 (Floor Request); and
- 6. shall enter 'O: queued' state.
- [TS 24.380, clause 7.2.3.8.11]

Upon receipt of an indication from the MCPTT client to request the queue position information, the floor participant:

- 1. shall send the Floor Queue Position Request message; The Floor Queue Position Request message:
 - a. shall include the SSRC of sent Floor Request message in SSRC of floor participant field; and
 - b. shall include the own MCPTT User ID in User ID field;
- 2. shall initialize the counter C204 (Floor Queue Position request) with value set to 1;
- 3. shall start timer T204 (Floor Queue Position request); and
- 4. remain in the 'O: queued' state.
- [TS 24.380, clause 7.2.3.8.3]

Upon receiving Floor Queue Position Info message, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Queue Position Info message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall update the queue position;
- 2. shall notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 3. shall stop timer T204 (Floor Queue Position request); and
- 4. shall remain in 'O: queued' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Queue Position Info message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall update the queue position;
- 2. shall set the stored SSRC of the current arbitrator to the SSRC of the floor control server as received in the Floor Queue Position Info message;
- 3. shall clear the stored SSRC of the candidate arbitrator;
- 4. shall notify the MCPTT user about the queue position received in the <Queue position info> value in the Queue Info field;
- 5. shall stop timer T204 (Floor Queue Position request); and
- 6. shall remain in 'O: queued' state.
- [TS 24.380, clause 7.2.3.8.6]

Upon receiving Floor Granted message and if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall start timer T233(Pending user action), if not running already;
- 3. shall notify the MCPTT user about of the floor grant;

- 4. if the Floor Indicator field is included, and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 5. shall remain in 'O: queued' state.

Otherwise, if the <User ID> value in the User ID field matches its own MCPTT ID and SSRC of floor participant sending the Floor Granted message matches the stored SSRC of candidate arbitrator, the floor participant:

- 1. shall request the MCPTT client to stop rendering received RTP media packets;
- 2. shall start timer T233(Pending user action), if not running already;
- 3. shall notify the MCPTT user about of the floor grant;
- 4. shall set the stored SSRC of the current arbitrator to its own SSRC;
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. if the Floor Indicator field is included, and the B bit is set to '1' (Broadcast group call), shall provide a notification to the user indicating the type of call; and
- 7. shall remain in 'O: queued' state.

[TS 24.380, clause 7.2.3.8.8]

If the floor participant receives an indication from the user that the user wants to send media and the timer T233 (pending user action) is running, the floor participant:

- 1. shall stop the timer T233 (Pending user action);
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC; and
- 3. shall enter 'O: has permission' state.
- [TS 24.380, clause 7.2.3.5.7]

Upon receiving a Floor Request message which is pre-emptive as determined by subclause 4.1.1.5, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall request the MCPTT client to stop sending RTP media packets towards other MCPTT clients;
- 4. shall send a Floor Granted message towards the other floor participants. The Floor Granted message:
 - a. shall include the MCPTT ID of the Floor Request message received in the User ID field;
 - b. shall include the SSRC of floor participant sending the Floor Request message in the SSRC of floor control server field; and
 - c. if the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.483 [4] is set to "true", for each floor participant in the queue:
 - i. shall include the MCPTT ID of the floor participant in the Queued User ID field;
 - ii. shall include the SSRC of the floor participant in the SSRC of queued floor participant field;
 - iii. shall include the queue position of the floor participant in the Queue Info field; and
 - iv. shall include the priority of the floor participant in the Queue Info field;
- 5. shall start timer T205 (Floor Granted) and shall initiate counter C205 (Floor Granted) to 1;
- 6. shall set the stored SSRC of the current floor arbitrator to the SSRC of the user to whom the floor was granted in the Floor Granted message; and

- 7. shall enter the 'O: pending granted' state.
- [TS 24.380, clause 7.2.3.6.9]

On expiry of timer T201 (Floor Request) if the counter C201 (Floor Request) has not reached its upper limit, the floor participant:

- 1. shall send the Floor Request message to other floor participants. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the own MCPTT user in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall restart the timer T201 (Floor Request) and increment counter C201 (Floor Request) by 1; and
- 3. shall remain in the 'O: pending request' state.
- [TS 24.380, clause 7.2.3.6.6]

When timer T201 (Floor Request) expires and counter C201 (Floor Request) reaches its upper limit, the floor participant:

- 1. shall send the Floor Taken message toward the other floor participants. The Floor Taken message:
 - a. shall include the floor participant's own SSRC in the SSRC of the granted floor participant field;
 - b. shall include the floor participant's own MCPTT ID in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall set the stored SSRC of the current floor arbitrator to its own SSRC;
- 3. shall stop timer T203 (End of RTP media), if running; and
- 4. shall enter 'O: has permission' state.
- 7.1.2.3 Test description

7.1.2.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - -- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.2.3.2 Test procedure sequence

Table 7.1.2.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict	
		U - S	Message			
1	Power up the UE.	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).					
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
3	SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT	<	GROUP CALL ANNOUNCEMENT	-	-	
4	Check: Does the UE (MCPTT Client) send a GROUP CALL ACCEPT message?	>	GROUP CALL ACCEPT	1	Р	
5	SS-UE1 (MCPTT client) sends a Floor Granted message notifying the recipients that it now has the floor	<	Floor Granted	-	-	
6	Make the UE (MCPTT User) request the floor (NOTE 1), (NOTE 2)	-	-	-	-	
7	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	2	Р	
8	The SS-UE1 (MCPTT client) sends a Floor Granted message granting the floor to the UE (MCPTT Client)	<	Floor Granted	-	-	
9	The SS-UE1 (MCPTT client), having the same priority as the UE (MCPTT Client), sends a Floor Request message to the UE (MCPTT Client) with the F bit in the Floor Indication field set to '0'	<	Floor Request	-	-	
10	Check: Does the UE (MCPTT Client) send a Floor Deny message to the sender of the Floor Request message with the Reject Cause field set to #1 (Another MCPTT client has permission)?	>	Floor Deny	2	P	
11	The SS-UE1 (MCPTT client), having the same priority as the UE (MCPTT client), sends a Floor Request message to the UE (MCPTT Client) with the F bit in the Floor Indication field set to '1'	<	Floor Request	-	-	
12	Check: Does the UE (MCPTT Client) add the requester to the queue and send a Floor Queue Position Info message to the sender of the Floor Request message?	>	Floor Queue Position Info	2	Р	
13	The SS-UE1 (MCPTT client) sends a Floor Queue Position Request message to the UE (MCPTT Client)	<	Floor Queue Position Request	-	-	
14	Check: Does the UE (MCPTT Client) respond to the Floor Queue Position Request message with e a Floor Queue Position Info message?	>	Floor Queue Position Info	2	Р	
15	Make the UE (MCPTT User) release the floor.(NOTE 1)	-	-	-	-	

16 Check: Does the UE (MCPTT Client) send a Floor Granted message to the floor participants indicating the queued participant now has the floor? (NOTE 4) > Floor Granted - EXCEPTION: Step 17 is executed a total of 3 times - - 17 Check: Upon expiry of timer T205 (Floor > Floor Granted	2	Р
participants indicating the queued participant now has the floor? (NOTE 4) - - EXCEPTION: Step 17 is executed a total of 3 times - 17 Check: Upon expiry of timer T205 (Floor >		
now has the floor? (NOTE 4) - EXCEPTION: Step 17 is executed a total of 3 times 17 Check: Upon expiry of timer T205 (Floor > Floor Granted		
now has the floor? (NOTE 4) - EXCEPTION: Step 17 is executed a total of 3 times 17 Check: Upon expiry of timer T205 (Floor > Floor Granted		
(NOTE 4) - - EXCEPTION: Step 17 is executed a total of 3 times - 17 Check: Upon expiry of timer T205 (Floor >		
times 17 Check: Upon expiry of timer T205 (Floor > Floor Granted		
17 Check: Upon expiry of timer T205 (Floor> Floor Granted	-	-
	2	Р
Granted) and while counter C205 (Floor		
Granted) is less than its maximum value, does		
the UE (MCPTT Client) retransmit the Floor		
Granted message send in step 16?		
18 Void	-	-
19 The SS-UE1 (MCPTT client) sends a Floor < Floor Taken		-
Taken message to the UE (MCPTT Client)	_	_
20 Make the UE (MCPTT User) request the floor		-
	-	-
21 Check: Does the UE (MCPTT Client) send a> Floor Request	2	Р
Floor Request message to the floor		
participants?		L
22 The SS-UE1 (MCPTT client) responds with a < Floor Deny	-	-
Floor Deny message		
23 Make the UE (MCPTT User) request the floor	-	-
(NOTE 1)		
24 Check: Does the UE (MCPTT Client) send a> Floor Request	2	Р
Floor Request message to the floor		
participants?		
25 The SS-UE1 (MCPTT client) responds with a < Floor Queue F	Position Info -	
Floor Queue Position Info message and places		_
the UE (MCPTT Client) in the queue		
26 Make the UE (MCPTT User) request the	-	-
queue position of the UE (MCPTT Client)		
(NOTE 1)		
	Position Request 2	Р
Floor Queue Position Request message?		
28 The SS-UE1 (MCPTT client) responds with a < Floor Queue F	Position Info -	-
Floor Queue Position Info message		
29 The SS-UE1 (MCPTT client) sends a Floor < Floor Granted	-	-
Granted message to the UE (MCPTT Client)		
granting the floor to the UE (MCPTT Client)		
30 Check: Does the UE (MCPTT Client) notify the	2	Р
user (MCPTT User) of the floor grant?		
(NOTE 1)		
31 Make the UE (MCPTT User) accept the floor		-
grant		
(NOTE 1)		
	· _	<u> </u>
32 The SS-UE1 (MCPTT client), with a higher < Floor Request priority than the UE (MCPTT client), sends a	· -	-
Floor Request message with preemption		
33 Check: Does the UE (MCPTT Client) respond> Floor Granted	2	Р
by sending a Floor Granted message?		
(NOTE 4)		
- EXCEPTION: Step 34 is executed a total of 3	-	-
times		
34 Check: Upon expiry of timer T205 (Floor> Floor Granted	2	Р
Granted) and while counter C205 (Floor		
Granted) is less than its maximum value, does		
the UE (MCPTT Client) retransmit the Floor		
Granted message send in step 33?		
35 Void	-	-
36 Make the UE (MCPTT User) request the floor		-
(NOTE 1)	_	
37 Check: Does the UE (MCPTT Client) send a> Floor Request	2	Р
Floor Request message to the floor		
participants?		
(NOTE 5)		

-	EXCEPTION: Step 38 is executed a total of 2	_	1_		_
-	times	-	-	-	-
38	Check: Upon expiry of timer T201 (Floor Request) and while counter C201 (Floor Request) is less than its maximum value, does the UE (MCPTT Client) retransmit the Floor Request message send in step 37?	>	Floor Request	2	Ρ
39	Check: Upon expiry of timer T201 (Floor Request) and with counter C201 (Floor Request) equal to its maximum value, does the UE (MCPTT Client) send a Floor Taken message?	>	Floor Taken	2	Ρ
40	Make the UE (MCPTT User) release the floor (NOTE 1)	-	-	-	-
41	Check: Does the UE (MCPTT Client) send a Floor Release message to the other floor participants?	>	Floor Release	2	Р
42	The SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT to upgrade the call to an emergency call	<	GROUP CALL ANNOUNCEMENT	-	-
43	SS-UE1 (MCPTT client) sends a Floor Granted message notifying the recipients that it now has the floor	<	Floor Granted	-	-
44	Void	-	-	3	Р
45	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
46	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	3	Р
47	The SS-UE1 (MCPTT client) responds with a Floor Deny message	<	Floor Deny	-	-
48	SS-UE1 (MCPTT client) sends a Floor Release message	<	Floor Release	-	-
49	The SS-UE1 (MCPTT client) sends a GROUP CALL EMERGENCY END to downgrade the emergency call	<	GROUP CALL EMERGENCY END		
50	Void	-	-	-	-
51	The SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT to upgrade the call to an imminent peril call	<	GROUP CALL ANNOUNCEMENT	-	-
52	SS-UE1 (MCPTT client) sends a Floor Granted message notifying the recipients that it now has the floor	<	Floor Granted	-	-
53	Void	•	-	-	-
54	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
55	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	4	Р
56	The SS-UE1 (MCPTT client) responds with a Floor Deny message	<	Floor Deny	-	-
57	SS-UE1 (MCPTT client) sends a Floor Release message	<	Floor Release	-	-
58	The SS-UE1 (MCPTT client) sends a GROUP CALL IMMINENT PERIL END to downgrade the imminent peril call	<-	GROUP CALL IMMINENT PERIL END		
59	Void	-	-	8	Р
60	Make the UE (MCPTT Client) release the group call	-	-	-	-
	(NOTE 1)				

NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: If the user does not request the floor before timer T203 (End of RTP media) expires, then the MCPTT Client will enter 'O: silence' state per 24.380 [10] and the remaining steps will not be valid. Timer T203 (End of RTP media)=5s as defined in TS 36.579-1 [2], Table 5.5.8.1-1 and is started upon the reception of the Floor Granted message in step 5. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified. NOTE 3: If the MCPTT User does not release the floor before timer T207 (Stop talking) expires, then the MCPTT Client will enter the 'O: silence' state per TS 24.380 [10] and the remaining steps will not be valid. Timer T206 (Stop talking warning) is started upon the receiving of the Floor Granted message in step 8. Timer T207 (Stop talking) starts upon the expiration of Timer T206 (Stop talking warning). Timer T206 (Stop talking warning)=10s is set to TransmitTimeout=60s, as defined in TS 36.579-1 [2], Table 5.5.8.4-1, minus TransmissionWarning=50s, as defined in TS 36.579-1 [2], Table 5.5.8.4-1. Timer T207 (Stop talking)=50s is set to TransmissionWarning=50s, as defined in TS 36.579-1 [2], Table 5.5.8.4-1. If during test execution it is found that the specified timer(s) value(s) are not large enough, then new value(s) need to be specified. NOTE 4: Timer T205 (Floor Granted) and Counter C205 (Floor Granted) are started upon the sending of the Floor Granted message. Timer T205 (Floor Granted)=1s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. Counter C205 (Floor Granted) is set to 1 and the maximum value of C205 (Floor Granted)=4, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. NOTE 5: Timer T201 (Floor Request) and Counter C201 (Floor Request) are started upon the sending of the Floor Request message. Timer T201 (Floor Request)=1s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. Counter 201 (Floor Request) is set to 1 and the maximum value of Counter C201 (Floor Request)=3, as defined in TS 36.579-1 [2], Table 5.5.8.1-1.

7.1.2.3.3 Specific message contents

Table 7.1.2.3.3-1: GROUP CALL ANNOUNCEMENT (step 42, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency group call	

Table 7.1.2.3.3-2: GROUP CALL ANNOUNCEMENT (step 51, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent peril group call	

Table 7.1.2.3.3-3: Floor Granted (step 5, Table 7.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value		
Floor priority	"0"		
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-4: Floor Granted (steps 8, 29, Table 7.1.2.3.2-1)

Table 7.1.2.3.3-5: Floor Granted (steps 16, 17, 33, 34, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
Duration				
Duration	any allowed value	128 sec (an arbitrary value)		
User ID				
User ID	Px_MCPTT_User_B_ID			
Floor Indicator				
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value		

Table 7.1.2.3.3-6: Floor Granted (step 43, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-			
Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value	128 sec (an arbitrary value)	
Floor priority	"0"		
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"000101000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-7: Floor Granted (step 52, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-	1 condition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Duration			
Duration	any allowed value	128 sec (an arbitrary value)	
Floor priority	"0"		
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"000011000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value			

Table 7.1.2.3.3-8: Floor Request (steps 7, 21, 37, 38, 46, 55, Table 7.1.2.3.2-1)

Table 7.1.2.3.3-9: Floor Request (step 9, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK					
Information Element	Value/remark	Comment	Condition		
User ID					
User ID	Px_MCPTT_User_B_ID				
Floor Indicator					
Floor Indicator	"10000000000000000"	bit A=1 (Normal call) bit F=0 (Queueing not supported)			

Table 7.1.2.3.3-10: Floor Request (step 11, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condit	tion OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"10000100000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-11: Floor Request (step 32, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2	-1 condition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Floor Priority	"12"	Priority is higher than mcptt-client- A	
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"1000010000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.4-1	condition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
Reject Cause			
Reject Cause	any allowed value		
Reject Phrase	not present or any allowed value		
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.2.3.3-12: Floor Deny (step 10, Table 7.1.2.3.2-1)

Table 7.1.2.3.3-13: Floor Deny (step 22, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_A_ID		
Floor Indicator			
Floor Indicator	"1000010000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-14: Floor Deny (step 47, Table 7.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_A_ID		
Floor Indicator			
Floor Indicator	"0001010000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-15: Floor Deny (step 56, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
User ID				
User ID	Px_MCPTT_User_A_ID			
Floor Indicator				
Floor Indicator	"00001100000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)		

Derivation Path: TS 36.579-1 [2], Table 5.5.6.10-1 con-	dition OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_A_ID		
Queued User ID			
Queued User ID	Px_MCPTT_User_B_ID		
Queue Info			
Queue Position Info	"1"		
Queue Priority Level	any allowed value		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.2.3.3-16: Floor Queue Position Info (steps 12, 14, Table 7.1.2.3.2-1)

Table 7.1.2.3.3-17: Floor Queue Position Info (steps 25, 28, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.10-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-18: Floor Queue Position Request (step 13, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.9-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
User ID				
User ID	Px_MCPTT_User_B_ID			

Table 7.1.2.3.3-19: Floor Taken (step 19, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.7-1 condition	tion OFF-NETWORK		
Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"100001000000000"	bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-20: Floor Taken (step 39, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.7-1 condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition
Granted Party's Identity			
Granted Party's Identity	Px_MCPTT_User_A_ID		
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	"10000X000000000"	bit A=1 (Normal call) bit F=X (Queueing supported) any value	

Table 7.1.2.3.3-21: Floor Release (step 41, Table 7.1.2.3.2-1)

Table 7.1.2.3.3-22: Floor Release (step 48, Table 7.1.2.3.2-1)

Information Element	Value/remark	Comment	Condition
User ID			
User ID	Px_MCPTT_User_B_ID		
Floor Indicator			
Floor Indicator	"000101000000000"	bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 7.1.2.3.3-23: Floor Release (step 57, Table 7.1.2.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK							
Information Element	Value/remark	Comment	Condition				
User ID							
User ID	Px_MCPTT_User_B_ID						
Floor Indicator							
Floor Indicator	"0000110000000000"	bit E=1 (Imminent Peril call) bit F=1 (Queueing supported)					

7.1.3 Off-network / Group Call / Leave Group Call when GROUP CALL PROBE sent / Initiate Group Call for Released Call / Receive GROUP CALL ANNOUNCEMENT for Released call / No GROUP CALL ANNOUNCEMENT for Released Call / Receive Response to GROUP CALL PROBE

7.1.3.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to initiate/cancel group calls in off-network environment, and the UE (MCPTT Client) is in an offnetwork environment }

ensure that {

when { the MCPTT User requests the establishment of an MCPTT pre-arranged group call and UE (MCPTT Client) requests a pre-arranged group call by sending a GROUP CALL PROBE message and the MCPTT User requests the release of the call before the expiration of the TFG3 (call probe retransmission)timer }

then { the UE (MCPTT Client) releases the call and enters the "S7: Waiting for call announcement
after call release" state and does not send a GROUP CALL PROBE at the expiry of the TFG3 (call probe
retransmission)timer }
}

(2)

with { UE (MCPTT Client) in the "S7: Waiting for call announcement after call release" state }

```
then { the UE (MCPTT Client) enters the "S3: part of ongoing call" state as a terminating floor
participant and respects the floor control imposed by the floor control entity/arbitrator }
}
```

7.1.3.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.2.1, 10.2.2.4.5.5, 10.2.2.4.5.6, 10.2.2.4.5.7, 10.2.2.4.5.4, 10.2.2.4.5.8, 10.2.2.4.3.2, TS 24.380 clause 7.2.3.2.3. The following represents a copy/paste extraction of the requirements relevant to the test purpose; any references within the copy/paste text should be understood within the scope of the core spec they have been copied from. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.2.1]

When in the "S1: start-stop" state, upon an indication from an MCPTT user to initiate a group call for an MCPTT group ID, the MCPTT client:

- 1) shall store the MCPTT group ID as the MCPTT group ID of the call;
- 2) shall create a call type control state machine as described in subclause 10.2.3.2;
- 3) shall generate a GROUP CALL PROBE message as specified in subclause 15.1.2. In the GROUP CALL PROBE message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
- 4) shall send the GROUP CALL PROBE message as specified in subclause 10.2.1.1.1;
- 5) shall start timer TFG3 (call probe retransmission);
- 6) shall start timer TFG1 (wait for call announcement); and
- 7) shall enter the "S2: waiting for call announcement" state.

[TS 24.379, clause 10.2.2.4.5.5]

When in the "S2: waiting for call announcement" state, upon an indication from the MCPTT user to release the group call, the MCPTT client:

- 1) shall stop timer TFG3 (call probe retransmission); and
- 2) shall enter the "S7: Waiting for call announcement after call release" state.

[TS 24.379, clause 10.2.2.4.5.6]

When in the "S7: Waiting for call announcement after call release" state, upon an indication from the MCPTT user to initiate a group call for an MCPTT group ID matching the stored MCPTT group ID of the call, the MCPTT client:

- 1) shall stop timer TFG1 (wait for call announcement);
- 2) shall generate a GROUP CALL PROBE message as specified in subclause 15.1.2. In the GROUP CALL PROBE message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
- 3) shall send the GROUP CALL PROBE message as specified in subclause 10.2.1.1.1;

- 4) shall start timer TFG3 (call probe retransmission);
- 5) shall start timer TFG1 (wait for call announcement); and
- 6) shall enter the "S2: waiting for call announcement" state.

[TS 24.379, clause 10.2.2.4.5.7]

When in the "S7: Waiting for call announcement after call release" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE matching the stored MCPTT group ID of the call, the MCPTT client:

- 1) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- 4) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 6) shall stop timer TFG1 (wait for call announcement);
- 7) shall start timer TFG5 (not present incoming call announcements); and
- 8) shall enter the "S6: ignoring incoming call announcements" state.

[TS 24.379, clause 10.2.2.4.5.4]

When in the "S6: ignoring incoming call announcements" state, upon expiration of timer TFG5 (not present incoming call announcements), the MCPTT client:

- 1) shall release the stored SDP body of the call;
- 2) shall release the stored call identifier of the call;
- 3) shall release the stored originating MCPTT user ID of the call;
- 4) shall release the stored refresh interval of the call;
- 5) shall release the stored MCPTT group ID of the call;
- 6) shall release the call start time of the call;
- 7) shall destroy the call type control state machine as specified in subclause 10.2.3.4.10 or 10.2.3.4.11; and
- 8) shall enter the "S1: start-stop" state.

[TS 24.379, clause 10.2.2.4.5.8]

When in the "S7: Waiting for call announcement after call release" state, upon expiration of timer TFG1 (wait for call announcement), the MCPTT client:

- 1) shall release the stored MCPTT group ID of the call;
- 2) shall destroy the call type control state machine as specified in subclause 10.2.3.4.11; and
- 3) shall enter the "S1: start-stop" state.

[TS 24.379, clause 10.2.2.4.3.2]

When in the "S2: waiting for call announcement" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE matching the stored MCPTT group ID of the call, the MCPTT client:

- 1) shall stop timer TFG3 (call probe retransmission);
- 2) shall stop timer TFG1 (wait for call announcement);
- 3) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 4) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 5) shall store the value of the originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the Originating MCPTT user ID of the call;
- 6) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 7) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 8) shall establish a media session based on the stored SDP body of the call;
- 9) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];

10) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;

11) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and

12) shall enter the "S3: part of ongoing call" state.

[TS 24.380, clause 7.2.3.2.3]

When an MCPTT call is established the terminating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall start timer T230 (Inactivity); and
- 3. shall enter 'O: silence' state.

7.1.3.3 Test description

7.1.3.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - -- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24]

clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
 - TFG1 (wait for call announcement) set to 25 seconds (25,000 ms) ("/<x>/OffNetwork/Timers/TFG1" leaf
 node present in the UE initial configuration as specified in 3GPP TS 24.483 [13]; related to the D2D Sidelink
 period)
 - TFG3 (call probe retransmission) set to 15 seconds (15,000 ms) ("/<x>/OffNetwork/Counters/TFG3" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
 - TFG5 (not present incoming call announcement) set to 30 seconds ("/<x>/OffNetwork/Timers/TFG5" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13].)
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.3.3.2 Test procedure sequence

Table 7.1.3.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict	
		U - S	Message			
1	Power up the UE	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).					
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-	
3	Make the UE (MCPTT Client) initiate an off- network basic group call (NOTE 1)	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
4	The UE (MCPTT client) sends a GROUP CALL PROBE message to determine the current call status of the group (NOTE 2)	>	GROUP CALL PROBE	-	-	
4A	SS starts Timer=15s (TFG3 (call probe retransmission))	-	-	-	-	
5	Make the UE (MCPTT Client) release the off- network basic group call (NOTE 1), (NOTE 3)	-	-	-	-	
5A	Timer=15s expires	-	-	-	-	
6	Check: Does the UE (MCPTT Client) in the next 5 seconds send a retransmission of the GROUP CALL PROBE sent in step 4?	>	GROUP CALL PROBE	1	F	
6A	Wait 5 seconds GROUP CALL PROBE	-	-	-	-	
7	Make the UE (MCPTT Client) initiate an off- network basic group call (NOTE 1), (NOTE 4)	-	-	-	-	
8	Check: Does the UE (MCPTT client) send a GROUP CALL PROBE message to determine the current call status of the group? (NOTE 2)	>	GROUP CALL PROBE	2	Р	
9	Make the UE (MCPTT Client) release the off- network basic group call (NOTE 1), (NOTE 3)	-	-	-	-	
10	The SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT message to the UE (MCPTT Client) with the MCPTT group ID IE matching the stored MCPTT group ID of the released call	<	GROUP CALL ANNOUNCEMENT	-	-	
11	Void	-	-	-	-	
12	Void	-	-	-		
13 14	Void Make the UE (MCPTT Client) initiate an off-	-	-	-	-	
	network basic group call (NOTE 1)					

-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
15	The UE (MCPTT client) sends a GROUP CALL PROBE message to determine the current call status of the group (NOTE 2)	>	GROUP CALL PROBE	-	-
15A	SS starts Timer=25s (TFG1 (wait for call announcement))	-	-	-	-
16	Make the UE (MCPTT Client) release the off- network basic group call (NOTE 1), (NOTE 3)	-	-	-	-
16A	Timer=25s expires	-	-	-	-
17	Void	-	-	4	Р
18	Make the UE (MCPTT Client) initiate an off- network basic group call (NOTE 1)	-	-	-	-
	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-		-
19	The UE (MCPTT client) sends a GROUP CALL PROBE message to determine the current call status of the group (NOTE 2)	>	GROUP CALL PROBE	-	-
20	The SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT message to the UE (MCPTT Client) with the MCPTT group ID IE matching the stored MCPTT group ID of the released call (NOTE 5)	<	GROUP CALL ANNOUNCEMENT	-	-
20A	Make the UE (MCPTT Client) request the floor (NOTE 1)	-	-	-	-
21	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	-	-	5	Р
21A	The SS-UE1 (MCPTT client) responds with a Floor Deny message	<	Floor Deny	-	-
22	Make the UE (MCPTT Client) release the group call (NOTE 1)	-	-	-	-

NOTE 1:	This is expected to be done via a suitable implementation dependent MMI.
NOTE 2:	Timer TFG3 (call probe retransmission)=15s as defined in the Pre-test conditions and TFG1 (wait for call
	announcement)=25s as defined in the Pre-test conditions are started upon the sending of the GROUP CALL
	PROBE message.
NOTE 3:	If the MCPTT User does not release the call before timer TFG3 (call probe retransmission) expires, then the
	MCPTT Client will resend the GROUP CALL PROBE message per TS 24.379 [9] and the remaining steps
	will not be valid. If during test execution it is found that the specified timer value is not large enough, then a
	new value needs to be specified.
NOTE 4:	If the MCPTT User does not perform an action before timer TFG1 (wait for call announcement) expires, then
	the MCPTT Client will enter the "S1: start-stop" state per TS 24.379 [9] and the remaining steps will not be
	valid. If during test execution it is found that the specified timer value is not large enough, then a new value
	needs to be specified.
NOTE 5:	Timer TFG6 (max duration) and timer TFG2 (call announcement) are started upon the receiving of the
	GROUP CALL ANNOUNCEMENT message while in the "S2: waiting for call announcement" state. The value
	of TFG6 (max duration) is a variable equation as defined in TS 36.379 [2], clause 10.2.2.4.1.2. The value of
	TFG2 (call announcement) is a variable equation as defined in TS 36.379 [2], clause 10.2.2.4.1.1.

7.1.3.3.3 Specific message contents

Table 7.1.3.3.3-1: GROUP CALL ANNOUNCEMENT (step 20, Table 7.1.1.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.2-1			
Information Element	Value/remark	Comment	Condition
Probe response	present	GROUP CALL ANNOUNCEMEN T is in response to a GROUP CALL PROBE	

7.1.4 Off-network / Group Call / MCPTT User Acknowledgement Required / With Confirm Indication / MCPTT User Reject / MCPTT User Accept / Client Terminated (CT)

7.1.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
receive group calls in off-network environment, and the UE (MCPTT Client) is configured such that
user acknowledgement is required upon a terminating call request reception, and the UE (MCPTT
Client) is in an off-network environment }
ensure that {
 when { the UE (MCPTT Client) receives an off-network group call request via a GROUP CALL
ANNOUNCEMENT message, and the MCPTT User accepts the call}
 then { the UE (MCPTT Client) accepts the call and sends a GROUP CALL ACCEPT message }
 }
}

7.1.4.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.3.3, 10.2.2.4.3.7, 10.2.2.4.3.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.3.3]

When in the "S1: start-stop" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE not matching MCPTT group ID of the call stored for other state machines, the MCPTT client:

- 1) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;

- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- 4) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL ANNOUNCEMENT message as the MCPTT group ID of the call;
- 6) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 7) shall create a call type control state machine as described in subclause 10.2.3.2;
- 8) if the terminating UE is configured that the terminating MCPTT user acknowledgement is required upon a terminating call request reception:
 - a) shall start timer TFG4 (waiting for the user);
 - b) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE, shall enter the "S5: pending user action with confirm indication" state; and
 - c) if the GROUP CALL ANNOUNCEMENT message does not contains the Confirm mode indication IE, shall enter the "S4: pending user action without confirm indication" state; and
- 9) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - a) shall establish a media session based on the stored SDP body of the call;
 - b) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
 - c) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE:
 - i) shall generate a GROUP CALL ACCEPT message as specified in subclause 15.1.4. In the GROUP CALL ACCEPT message, the MCPTT client:
 - A) shall set the Call identifier IE to the stored call identifier of the call;
 - B) shall set the Sending MCPTT user ID IE to own MCPTT user id;
 - C) shall set the Call type IE to the stored current call type associated with the call type control state machine; and
 - D) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
 - ii) shall send the GROUP CALL ACCEPT message as specified in subclause 10.2.1.1.1;
 - d) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
 - e) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
 - f) shall enter the "S3: part of ongoing call" state.

[TS 24.379, clause 10.2.2.4.3.7]

When in the "S5: pending user action with confirm indication" state or the "S4: pending user action without confirm indication" state, upon an indication from the MCPTT user to reject the incoming group call, the MCPTT client:

- 1) shall stop timer TFG4 (waiting for the user);
- 2) shall start timer TFG5 (not present incoming call announcements); and
- 3) shall enter the "S6: ignoring incoming call announcements" state.

[TS 24.379, clause 10.2.2.4.3.4]

When in the "S5: pending user action with confirm indication" state, upon indication from the MCPTT user to accept the incoming group call, the MCPTT client:

- 1) shall establish a media session based on the stored SDP body of the call;
- 2) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 3) shall generate a GROUP CALL ACCEPT message as specified in subclause 15.1.4. In the GROUP CALL ACCEPT message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Sending MCPTT user ID IE to own MCPTT user id;
 - c) shall set the Call type IE to the stored current call type associated with the call type control state machine; and
 - d) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
- 4) shall send the GROUP CALL ACCEPT message as specified in subclause 10.2.1.1.1;
- 5) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
- 6) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
- 7) shall enter the "S3: part of ongoing call" state.

7.1.4.3 Test description

7.1.4.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - -- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.

- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- UE (MCPTT Client) is configured such that user acknowledgement is required upon a terminating call request reception
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.4.3.2 Test procedure sequence

Table 7.1.4.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Power up the UE	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may				
	be performed by MMI or AT command				
	(+CUTCR).				
2	Activate the MCPTT Client Application and	-	-	-	-
	register User A as the MCPTT User (TS				
	36.579-5 [5], px_MCPTT_User_A_username,				
	px_MCPTT_User_A_password).				
	(NOTE 1)				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT				
	communication over ProSe direct one-to-many				
	communication out of E-UTRA coverage /				
	Announcing/Discoveree procedure for group				
	member discovery / One-to-many				
	communication'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
3	SS-UE1 (MCPTT client) sends a GROUP	<	GROUP CALL ANNOUNCEMENT	-	-
	CALL ANNOUNCEMENT				
	(NOTE 3)				
4	Void	-	-	-	-
5	While the UE (MCPTT Client) is in the "S5:	-	-	-	-
	pending user action with confirm indication" state, make the UE (MCPTT Client) reject the				
	call request				
	(NOTE 1), (NOTE 2)				
6	Void	-	-	-	-
7	Void	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.10 'Generic Test Procedure for MCPTT CT				
	communication over ProSe direct one-to-many				
	communication out of E-UTRA coverage /				
	Announcing/Discoveree procedure for group member discovery / One-to-many				
	communication'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
8	SS-UE1 (MCPTT client) sends a GROUP	<	GROUP CALL ANNOUNCEMENT	-	-
	CALL ANNOUNCEMENT				
	(NOTE 3)				
9	Void	-	-	-	-
10	While the UE (MCPTT Client) is in the "S5:	-	-	-	-
	pending user action with confirm indication"				
	state, make the UE (MCPTT Client) accept the				
	call request				
11	(NOTE 1), (NOTE 2) Check: Does the UE (MCPTT Client) send a	>	GROUP CALL ACCEPT	1	Р
	GROUP CALL ACEEPT message?				
12	Void	-	-	-	-
13	Make the UE (MCPTT Client) release the	-	-	-	-
	group call				
	(NOTE 1)				
	1: This is expected to be done via a suitable imp				
	2: If the MCPTT User does not act before the ex	piration c	of timer TFG4 (waiting for the user), the		
	Client will enter the "S6: ignoring incoming cal				
	valid. Timer TFG4 (waiting for the user)=20s a				
	upon the receiving of the GROUP CALL ANN			on it is f	ound that
	the specified timer value is not large enough,				

7.1.4.3.3 Specific message contents

None

7.1.5 Off-network / Group Call / MCPTT User Acknowledgement Required / Without Confirm Indication / MCPTT User Reject / MCPTT User Accept / Client Terminated (CT)

7.1.5.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
receive group calls in off-network environment, and the UE (MCPTT Client) is configured such that
user acknowledgement is required upon a terminating call request reception, and the UE (MCPTT
Client) is in an off-network environment and the UE (MCPTT Client) receives an off-network group
call request via a GROUP CALL ANNOUNCEMENT message that does not contains the Confirm mode
indication IE, and the MCPTT User accepts the call }
ensure that {
 when { the MCPTT User requests the floor }
 then { the UE (MCPTT Client) sends a Floor Request nessage to the floor participants and
respects the floor control imposed by the floor control entity/arbitrator }

}

7.1.5.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.3.3, 10.2.2.4.3.7, 10.2.2.4.3.5. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.3.3]

When in the "S1: start-stop" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE not matching MCPTT group ID of the call stored for other state machines, the MCPTT client:

- 1) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- 4) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL ANNOUNCEMENT message as the MCPTT group ID of the call;
- 6) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 7) shall create a call type control state machine as described in subclause 10.2.3.2;
- 8) if the terminating UE is configured that the terminating MCPTT user acknowledgement is required upon a terminating call request reception:
 - a) shall start timer TFG4 (waiting for the user);
 - b) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE, shall enter the "S5: pending user action with confirm indication" state; and

- c) if the GROUP CALL ANNOUNCEMENT message does not contains the Confirm mode indication IE, shall enter the "S4: pending user action without confirm indication" state; and
- 9) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - a) shall establish a media session based on the stored SDP body of the call;
 - b) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
 - c) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE:
 - i) shall generate a GROUP CALL ACCEPT message as specified in subclause 15.1.4. In the GROUP CALL ACCEPT message, the MCPTT client:
 - A) shall set the Call identifier IE to the stored call identifier of the call;
 - B) shall set the Sending MCPTT user ID IE to own MCPTT user id;
 - C) shall set the Call type IE to the stored current call type associated with the call type control state machine; and
 - D) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
 - ii) shall send the GROUP CALL ACCEPT message as specified in subclause 10.2.1.1.1;
 - d) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
 - e) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
 - f) shall enter the "S3: part of ongoing call" state.

[TS 24.379, clause 10.2.2.4.3.7]

When in the "S5: pending user action with confirm indication" state or the "S4: pending user action without confirm indication" state, upon an indication from the MCPTT user to reject the incoming group call, the MCPTT client:

- 1) shall stop timer TFG4 (waiting for the user);
- 2) shall start timer TFG5 (not present incoming call announcements); and
- 3) shall enter the "S6: ignoring incoming call announcements" state.

[TS 24.379, clause 10.2.2.4.3.5]

When in the "S4: pending user action without confirm indication" state, upon an indication from the MCPTT user to accept the incoming group call, the MCPTT client:

- 1) shall establish a media session based on the stored SDP body of the call;
- 2) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 3) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
- 4) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
- 5) shall enter the "S3: part of ongoing call" state.

7.1.5.3 Test description

7.1.5.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)

- For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- UE (MCPTT Client) is configured such that user acknowledgement is required upon a terminating call request reception
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.5.3.2 Test procedure sequence

Table 7.1.5.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Power up the UE.	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).				
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
3	SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT (NOTE 2)	<	GROUP CALL ANNOUNCEMENT	-	-
4	Void	-	-	-	-
5	While the UE (MCPTT Client) is in the "S4: pending user action without confirm indication" state, make the UE (MCPTT Client) reject the call request (NOTE 1), (NOTE 3)	-	-	-	-
6	Void	-	-	-	-
7		-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
8	SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT (NOTE 2)	<	GROUP CALL ANNOUNCEMENT	-	-
9	Void	-	-	-	-
10	While the UE (MCPTT Client) is in the "S4: pending user action without confirm indication" state, make the UE (MCPTT Client) accept the call request (NOTE 1), (NOTE 3)	-	-	-	-
10A	Make the UE (MCPTT Client) request the floor (NOTE 1)	>	Floor Request		
11	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	-	-	1	Р
11A	The SS-UE1 (MCPTT client) responds with a Floor Deny message	<	Floor Deny	-	-
12	Make the UE (MCPTT Client) release the group call (NOTE 1)	-	-	-	-

NOTE 1: This is expected to be done via a suitable implementation dependent MMI.
NOTE 2: The UE (MCPTT Client) enters the "S4: pending user action without confirm indication" state
NOTE 3: If the MCPTT User does not act before the expiration of timer TFG4 (waiting for the user), then the MCPTT Client will enter the "S6: ignoring incoming call announcements" state and the remaining steps will not be valid. Timer TFG4 (waiting for the user)=20s as defined in TS 36.579-1 [2], Table 5.5.8.1-1 and is started upon the receiving of the GROUP CALL ANNOUNCEMENT message. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.

7.1.5.3.3 Specific message contents

Table 7.1.5.3.3-1: GROUP CALL ANNOUNCEMENT (steps 3, 8, Table 7.1.5.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.2-1			
Information Element	Value/remark	Comment	Condition
Confirm mode indication	Not present	The terminating MCPTT client is expected to confirm call acceptance	

7.1.6 Off-network / Group Call / Merge Two Calls

7.1.6.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) having established an off-network MCPTT Pre-arranged Group Call }
ensure that {

when { the UE (MCPTT Client) receives a GROUP CALL ANNOUNCEMENT message with the same call type as
the current call, the same start time as the current call, but with a lower Call identifier IE }
then { UE (MCPTT Client) merges the two calls and restarts floor control as a terminating floor
participant and respects the floor control imposed by the floor control entity/arbitrator }
}

7.1.6.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clause 10.2.2.4.6.1, TS 24.380 clause 7.2.3.2.3. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.6.1]

When in the "S3: part of ongoing call" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE matching the stored MCPTT group ID of the call and:

- 1) the Originating MCPTT user ID IE is different from the stored originating MCPTT user ID of the call; or
- 2) the Call identifier IE is different from the stored call identifier of the call;

then:

- if the stored current call type associated with the call type control state machine is "BASIC GROUP CALL" and the value of the Call type IE of GROUP CALL ANNOUNCEMENT message is either "IMMINENT PERIL GROUP CALL" or "EMERGENCY GROUP CALL";
- if the stored current call type associated with the call type control state machine is "IMMINENT PERIL GROUP CALL" and the value of the Call type IE of GROUP CALL ANNOUNCEMENT message is "EMERGENCY GROUP CALL";
- 3) if the stored current call type associated with the call type control state machine being equal to the Call type IE of the GROUP CALL ANNOUNCEMENT message and the Call start time IE of the GROUP CALL ANNOUNCEMENT message being lower than the stored call start time of the call; or

4) if the stored current call type associated with the call type control state machine being equal to the Call type IE of the GROUP CALL ANNOUNCEMENT message and the Call start time IE of the GROUP CALL ANNOUNCEMENT message being equal to the stored call start time of the call and the Call identifier IE of the GROUP CALL ANNOUNCEMENT message being lower than the stored call identifier of the call;

the MCPTT client:

- 1) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- 4) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 6) shall adjust the media session based on the stored SDP body of the call and restart floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 7) shall stop timer TFG6 (max duration);
- 8) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
- 9) shall stop timer TFG2 (call announcement); and
- 10) shall start timer TFG2 (call announcement) with value according to rules and procedures as specified in subclause 10.2.2.4.1.1.1; and
- 11) shall remain in the "S3: part of ongoing call" state.

[TS 24.380, clause 7.2.3.2.3]

When an MCPTT call is established the terminating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall start timer T230 (Inactivity); and
- 3. shall enter 'O: silence' state.
- 7.1.6.3 Test description
- 7.1.6.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".

- SS-NW (MCPTT server)
 - -- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.6.3.2 Test procedure sequence

Table 7.1.6.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict	
			Message			
1	Power up the UE	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).					
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-	
3	Make the UE (MCPTT Client) initiate an off- network basic group call (NOTE 1)	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
4	Check: Does the UE (MCPTT client) send a GROUP CALL PROBE message to determine the current call status of the group? (NOTE 2)	>	GROUP CALL PROBE	-	-	
-	EXCEPTION: Step 5 is executed a total of 3 times	-	-	-	-	
5	At the expiration of TFG3 (call probe retransmission), the UE (MCPTT Client) sends a retransmission of the GROUP CALL PROBE sent in step 4	>	GROUP CALL PROBE	-	-	
6	At the expiration of TFG1 (wait for call announcement), and after receiving no response to the GROUP CALL PROBE, the UE (MCPTT Client) sends a GROUP CALL ANNOUNCEMENT message to initiate an off- network basic group call	>	GROUP CALL ANNOUNCEMENT	-	-	
7	The SS-UE1 (MCPTT client) sends a GROUP CALL ACCEPT accepting the GROUP CALL ANNOUNCEMENT	<	GROUP CALL ACCEPT	-	-	
8	The UE (MCPTT Client) sends a Floor Granted message towards the other floor participants	>	Floor Granted	-	-	
9	Void	-	-	-	-	
10	The SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT message with the same call type as the current call, the same start time as the current call, but with a lower Call identifier IE	<	GROUP CALL ANNOUNCEMENT	-	-	
11	The SS-UE1 (MCPTT client) sends a Floor Granted message to the UE (MCPTT Client) (NOTE 3)	<	Floor Granted	-	-	
12	Void	-	-	-	- 1	
13	Make the UE (MCPTT User) request the floor (NOTE 4)	-	-	-	-	
14	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	1	Р	
15	The SS-UE1 (MCPTT client) sends a Floor Granted message granting the floor to the UE (MCPTT Client)	<	Floor Granted	-	-	

16	Make the UE (MCPTT User) release the floor (NOTE 1), (NOTE5)	-	-	-	-		
17	Check: Does the UE (MCPTT Client) send a	>	Floor Release	1	Р		
	Floor Release message to the other floor	-			-		
	participants?						
18	Make the UE (MCPTT Client) release the	-	-	-	-		
_	group call						
	(NOTE 1)						
NOTE	1: This is expected to be done via a suitable imp	lementat	on dependent MMI.	•			
	2: Timer TFG3 (call probe retransmission)=40ms			1 and T	FG1 (wait		
	for call announcement)=150ms as defined in	TS 36.57	9-1 [2], Table 5.5.8.1-1 are started up	on the	sending of		
	the GROUP CALL PROBE message				-		
NOTE	3: The UE (MCPTT Client) merges the 2 calls ar	nd relinqu	ishes floor control to the sender of the	e GROl	JP CALL		
	ANNOUNCEMENT in step 10						
NOTE	I						
	will enter the 'O: 'Start-stop" state per 24.380						
	(Inactivity) is started upon the receiving of the						
	defined in TS 36.579-1 [2], Table 5.5.8.1-1. If			ied time	er value is		
	not large enough, then a new value needs to						
NOTE							
	Client will enter the 'O: silence' state per TS 24.380 [10] and the remaining steps will not be valid. Timer T206						
	(Stop talking warning) is started upon the receiving of the Floor Granted message. Timer T207 (Stop talking)						
		starts upon the expiration of Timer T206 (Stop talking warning). Timer T206 (Stop talking warning)=10s is set					
	to TransmitTimeout=60s, as defined in TS 36.			onWarni	ng=50s,		
	as defined in TS 36.579-1 [2], Table 5.5.8.4-1						
1	TransmissionWarning=50s, as defined in TS 3				t is found		
	that the specified timer(s) value(s) are not large	ge enougl	n, then new value(s) need to be spec	ified.			

7.1.6.3.3 Specific message contents

Table 7.1.6.3.3-1: GROUP CALL ANNOUNCEMENT (step 10, Table 7.1.6.3.2-1)

Information Element	Value/remark	Comment	Condition
Call identifier	A value less than the Call identifier used in the GROUP CALL ANNOUNCEMENT sent in step 5		
Call start time	The same Call start time used in the GROUP CALL ANNOUNCEMENT sent in step 5		

Table 7.1.6.3.3-2: Floor Granted (step 8, Table 7.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK						
Information Element	Value/remark	Comment	Condition			
Duration						
Duration	any allowed value					
Floor priority	"0"					
Floor Indicator						
Floor Indicator	'10000X000000000'	bit A=1 (Normal call) bit F=X (Queueing supported) any value				

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK						
Information Element	Value/remark	Comment	Condition			
Duration						
Duration	any allowed value					
Floor priority	"0"					
User ID						
User ID	Px_MCPTT_User_B_ID					
Floor Indicator						
Floor Indicator	'100001000000000'	bit A=1 (Normal call) bit F=1 (Queueing supported) any value				

Table 7.1.6.3.3-3: Floor Granted (step 10, Table 7.1.6.3.2-1)

Table 7.1.6.3.3-4: Floor Granted (step 14, Table 7.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK						
Information Element	Value/remark	Comment	Condition			
Duration						
Duration	any allowed value					
Floor priority	"0"					
Floor Indicator						
Floor Indicator	ʻ100001000000000'	bit A=1 (Normal call) bit F=1 (Queueing supported) any value				

Table 7.1.6.3.3-5: Floor Request (step 13, Table 7.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'10000X000000000'	bit A=1 (Normal call) bit F=X (Queueing supported) any value				

Table 7.1.6.3.3-6: Floor Release (step 16, Table 7.1.6.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK						
Information Element	Value/remark	Comment	Condition			
Floor Indicator						
Floor Indicator	'10000X000000000'	bit A=1 (Normal call) bit F=X (Queueing supported) any value				

7.1.7 Off-network / Group Call / Emergency Call / Imminent Peril Call / Client Originated (CO)

7.1.7.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
initiate/cancel emergency group calls in off-network environment, and the UE (MCPTT Client) is in an
off-network environment }
environment {

ensure that {

when { the MCPTT User requests the establishment of an MCPTT emergency group call }
 then { UE (MCPTT Client) requests an MCPTT emergency group call by sending a GROUP CALL
ANNOUNCEMENT message, and respects the floor control imposed by the floor control entity/arbitrator
}
}

(2)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
initiate/cancel imminent peril group calls in off-network environment, and the UE (MCPTT Client) is
in an off-network environment }

ensure that {

when { the MCPTT User requests the establishment of an MCPTT imminent peril group call }
 then { UE (MCPTT Client) requests an MCPTT imminent peril group call by sending a GROUP CALL
ANNOUNCEMENT message, and respects the floor control imposed by the floor control entity/arbitrator
}

7.1.7.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.2.1, 10.2.3.4.2, 10.2.3.4.6, 10.2.2.4.3.1, TS 24.380 clause 7.2.3.2.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.2.1]

}

When in the "S1: start-stop" state, upon an indication from an MCPTT user to initiate a group call for an MCPTT group ID, the MCPTT client:

- 1) shall store the MCPTT group ID as the MCPTT group ID of the call;
- 2) shall create a call type control state machine as described in subclause 10.2.3.2;
- 3) shall generate a GROUP CALL PROBE message as specified in subclause 15.1.2. In the GROUP CALL PROBE message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
- 4) shall send the GROUP CALL PROBE message as specified in subclause 10.2.1.1.1;
- 5) shall start timer TFG3 (call probe retransmission);
- 6) shall start timer TFG1 (wait for call announcement); and
- 7) shall enter the "S2: waiting for call announcement" state.

[TS 24.379, clause 10.2.3.4.2]

When in the "T0: waiting for the call to establish " state, upon an indication from an MCPTT user to initiate a group call probe for an MCPTT group, the MCPTT client:

- if the stored emergency state associated with emergency alert state machine described in 12.2.2.2 is set to "true" and the value of "/<x>/<x>/Common/AllowedEmergencyCall" leaf node present in group configuration as specified in 3GPP TS 24.383 [45] is set to "true":
 - a) shall set the stored current call type to "EMERGENCY GROUP CALL"; and

- b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
- 2) if the stored emergency state associated with emergency alert state machine described in 12.2.2.2 is set to "false", and:
 - a) if the user initiates an MCPTT emergency call and the values of "/<x>/<x>/Common/MCPTTGroupCall/EmergencyCall/Enabled" leaf node present in the user profile and "/<x>/<x>/Common/AllowedEmergencyCall" leaf node present in group configuration as specified in 3GPP TS 24.383 [45] are set to "true":
 - i) shall set the stored current call type to "EMERGENCY GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - b) if the user initiates an MCPTT imminent peril group call and the values of "/<x>/<x>/Common/MCPTTGroupCall/ImminentPerilCall/Authorised" leaf node present in the user profile "/<x>/<x>/Common/AllowedImminentPerilCall " leaf node present in group configuration as specified in 3GPP TS 24.383 [45] are set to "true":
 - i) shall set the stored current call type to "IMMINENT PERIL GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45]; and
 - c) if the user initiates an MCPTT group call which is not an MCPTT emergency call and which is not an MCPTT imminent peril group call:
 - i) shall set the stored current call type to "BASIC GROUP CALL"; and
 - ii) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45];
- 3) shall set the stored last call type change time to current UTC time;
- 4) shall set the last user to change call type to own MCPTT user ID; and
- 5) shall remain in "T0: waiting for the call to establish" state.

[TS 24.379, clause 10.2.3.4.6]

When in state "T0: waiting for the call to establish", if:

- a) the MCPTT user accepts the call when MCPTT user acknowledgement is required; or
- b) the MCPTT client sends a GROUP CALL ANNOUNCEMENT message on expiry of timer TFG1 (wait for call announcement) associated with the basic call control state machine;

the MCPTT client:

- 1) if the stored current call type is set to "EMERGENCY GROUP CALL"
 - a) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and
 - b) shall enter "T1: in-progress emergency group call" state;
- 2) if the stored current call type is set to "IMMINENT PERIL GROUP CALL"
 - a) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - b) shall enter "T3: in-progress imminent peril group call" state; or
- 3) if the stored current call type is set to "BASIC GROUP CALL"

a) shall enter "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.2.4.3.1]

When in the "S2: waiting for call announcement" state, upon expiry of timer TFG1 (wait for call announcement), the MCPTT client:

- 1) shall stop timer TFG3 (call probe retransmission), if running;
- 2) shall generate an SDP body as specified in subclause 10.2.1.1.2 and store it as the SDP body of the call;
- 3) shall generate a random number with uniform distribution between 0 and 65535 and store it as the call identifier of the call;
- 4) shall select refresh interval value and store it as the refresh interval of the call;
- 5) shall store own MCPTT user ID as the originating MCPTT user ID of the call;
- 6) shall store the current UTC time as the call start time of the call;
- shall generate a GROUP CALL ANNOUNCEMENT message as specified in subclause 15.1.3. In the GROUP CALL ANNOUNCEMENT message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Call type IE to the stored current call type associated with the call type control state machine;
 - c) shall set the Refresh interval IE to the stored refresh interval of the call;
 - d) shall set the SDP IE to the stored SDP body of the call;
 - e) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call;
 - f) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
 - g) shall set the Call start time IE to the stored call start time of the call;
 - h) shall set the Last call type change time IE to the stored last call type change time of the call associated with call type control state machine;
 - i) shall set the Last user to change call type IE to last user to change call type associated with call type control state machine; and
 - j) may include the Confirm mode indication IE;
- 8) shall send the GROUP CALL ANNOUNCEMENT message as specified in subclause 10.2.1.1.1;
- 9) shall establish a media session based on the stored SDP body of the call;
- 10) shall start floor control as originating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 11) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
- 12) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
- 13) shall enter the "S3: part of ongoing call" state.
- NOTE: In this release of the present document, the refresh interval of the call is fixed to 10 seconds.

[TS 24.380, clause 7.2.3.2.2]

When an MCPTT call is established with session announcement including an explicit floor request, the originating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall send Floor Granted message towards other floor participants. The Floor Granted message:

- a. shall include the granted priority in the Floor priority field;
- b. shall include the MCPTT user's own MCPTT ID in the User ID field; and
- c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 3. shall set the stored SSRC of the current florr arbitrator to its own SSRC; and
- 4. shall enter 'O: has permission' state.
- 7.1.7.3 Test description
- 7.1.7.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - -- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.

- UE States at the end of the preamble:
 - The UE is in state 'switched-off'.

7.1.7.3.2 Test procedure sequence

Table 7.1.7.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict	
			Message			
1	Power up the UE	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may					
	be performed by MMI or AT command					
	(+CUTCR).					
2	Activate the MCPTT Client Application and	-	-	-	-	
	register User A as the MCPTT User (TS					
	36.579-5 [5], px_MCPTT_User_A_username,					
	px_MCPTT_User_A_password).					
	(NOTE 1)					
3	Make the UE (MCPTT Client) initiate an off-	-	-	-	-	
	network emergency group call (NOTE 1)					
-	EXCEPTION: The E-UTRA/EPC actions which	_	-	_	_	
-	are related to the MCPTT off-network call	-	-	-	-	
	establishment are described in TS 36.579-					
	1 [2], subclause 5.4.11 'Generic Test					
	Procedure for MCPTT CO communication over					
	ProSe direct one-to-many communication out					
	of E-UTRA coverage / Monitoring/Discoverer					
	procedure for group member discovery / One-					
	to-many communication'. The test sequence					
	below shows only the MCPTT relevant					
	messages exchanged.					
4	The UE (MCPTT client) sends a GROUP	>	GROUP CALL PROBE	-	-	
	CALL PROBE message to determine the					
	current call status of the group					
-	EXCEPTION: Step 5 is executed a total of 3 times	-	-	-	-	
5	At the expiration of TFG3 (call probe	>	GROUP CALL PROBE	-	-	
Ŭ	retransmission), the UE (MCPTT Client) send	-				
	a retransmission of the GROUP CALL PROBE					
	sent in step 4					
6	Check: At the expiration of TFG1 (wait for call	>	GROUP CALL ANNOUNCEMENT	1	Р	
	announcement), and after receiving no					
	response to the GROUP CALL PROBE, does					
	the UE (MCPTT Client) send a GROUP CALL					
	ANNOUNCEMENT message to initiate an off-					
	network emergency group call?					
7	The SS-UE1 (MCPTT client) sends a GROUP CALL ACCEPT accepting the GROUP CALL	<	GROUP CALL ACCEPT	-	-	
	ANNOUNCEMENT					
8	Check: Does the UE (MCPTT Client) send a	>	Floor Granted	1	Р	
Ŭ	Floor Granted message towards the other floor			'		
	participants?					
9	Make the UE (MCPTT User) release the floor	-	-	-	-	
	(NOTE 1), (NOTE 2)					
10	Check: Does the UE (MCPTT Client) send a	>	Floor Release	1	Р	
	Floor Release message to the other floor					
	participants?					
11	Make the UE (MCPTT Client) release the	-	-	-	-	
	emergency group call					
40	(NOTE 1)					
12	Void	-	-	-	-	
13	Void Make the LIE (MCDTT Client) initiate on off	-	-	-	-	
14	Make the UE (MCPTT Client) initiate an off- network imminent peril group call	-	-	-	-	
	(NOTE 1)					
		I	1	I	1	

-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
15	Check: Does the UE (MCPTT client) send a GROUP CALL PROBE message to determine the current call status of the group?	>	GROUP CALL PROBE	-	-
-	EXCEPTION: Step 16 is executed a total of 3 times	-	-	-	-
16	Check: At the expiration of TFG3 (call probe retransmission), does the UE (MCPTT Client) send a retransmission of the GROUP CALL PROBE sent in step 15?	>	GROUP CALL PROBE	-	-
17	Check: At the expiration of TFG1 (wait for call announcement), and after receiving no response to the GROUP CALL PROBE, does the UE (MCPTT Client) send a GROUP CALL ANNOUNCEMENT message to initiate an off- network imminent peril group call?	>	GROUP CALL ANNOUNCEMENT	2	Р
18	The SS-UE1 (MCPTT client) sends a GROUP CALL ACCEPT accepting the GROUP CALL ANNOUNCEMENT	<	GROUP CALL ACCEPT	-	-
19	Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants?	>	Floor Granted	2	Р
20	Make the UE (MCPTT User) release the floor (NOTE 1), (NOTE 2)	-	-	-	-
21	Check: Does the UE (MCPTT Client) send a Floor Release message to the other floor participants?	>	Floor Release	2	Р
22	Make the UE (MCPTT Client) release the imminent peril group call (NOTE 1)	-	-	-	-
	 This is expected to be done via a suitable imp If the MCPTT User does not perform an action Client will enter the 'O: 'Silence' state per 24.3 (Stop talking) is started upon the expiration of sending of the Floor Granted message. T207 And T206 (Stop talking warning)=27s, as defin is found that the specified timer(e) value(s) are 	n before t 80 [10] a time T20 (Stop tall ned in TS	imer T207 (Stop talking) expires, then nd the remaining steps will not be vali 6 (Stop talking warning), which is star king)=3s, as defined in TS 24.380 [10] 24.380 [10], Table 11.1.2-1. If during	id. Time ted at t , Table test ex	er T207 he 11.1.2-1. ecution it

7.1.7.3.3 Specific message contents

Table 7.1.7.3.3-1: GROUP CALL ANNOUNCEMENT (step 6, Table 7.1.7.3.2-1)

is found that the specified timer(s) value(s) are not large enough, then new value(s) need to be specified.

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency Group Call	

Table 7.1.7.3.3-2: GROUP CALL ANNOUNCEMENT (step 17, Table 7.1.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent Peril Group Call	

Derivation Path: TS 36.579-1 [2], Table 5.5.5.3.2-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency Group	
		Call	

Table 7.1.7.3.3-3: GROUP CALL ACCEPT (step 7, Table 7.1.7.3.2-1)

Table 7.1.7.3.3-4: GROUP CALL ACCEPT (step 18, Table 7.1.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.3.2-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent Peril	
		Group Call	

Table 7.1.7.3.3-5: Floor Granted (step 8, Table 7.1.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
Duration				
Duration	any allowed value			
Floor Indicator				
Floor Indicator	'00010X000000000'	bit D=1 (Emergency call) bit F=X (Queueing supported) any value		

Table 7.1.7.3.3-6: Floor Granted (step 19, Table 7.1.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
Duration				
Duration	any allowed value			
Floor Indicator				
Floor Indicator	'00001X000000000'	bit E=1 (Imminent peril call) bit F=X (Queueing supported) any value		

Table 7.1.7.3.3-7: Floor Release (step 10, Table 7.1.7.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'00010X000000000'	bit D=1 (Emergency call) bit F=X (Queueing supported) any value		

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00001X000000000'	bit E=1 (Imminent peril call) bit F=X (Queueing supported) any value	

Table 7.1.7.3.3-8: Floor Release (step 21, Table 7.1.7.3.2-1)

7.1.8 Off-network / Group Call / Emergency Call / Imminent Peril Call / Client Terminated (CT)

7.1.8.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to receive emergency group calls in off-network environment, and the UE (MCPTT Client) is in an offnetwork environment } ensure that {

when { the UE (MCPTT Client) receives GROUP CALL ANNOUNCEMENT to initiate an MCPTT emergency group
call }

then { UE (MCPTT Client) responds by sending a GROUP CALL ACCEPT message, and respects the floor control imposed by the floor control entity/arbitrator }
}

(2)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to receive imminent peril group calls in off-network environment, and the UE (MCPTT Client) is in an off-network environment } ensure that { when { the UE (MCPTT Client) receives GROUP CALL ANNOUNCEMENT to initiate an MCPTT imminent peril group call }

then { UE (MCPTT Client) responds by sending a GROUP CALL ACCEPT message, and respects the floor
control imposed by the floor control entity/arbitrator }
}

7.1.8.2

Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.2.2.4.3.3, 10.2.3.4.5, 10.2.3.4.6. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.2.2.4.3.3]

When in the "S1: start-stop" state, upon receiving a GROUP CALL ANNOUNCEMENT message with the MCPTT group ID IE not matching MCPTT group ID of the call stored for other state machines, the MCPTT client:

- 1) shall store the value of the SDP IE of the GROUP CALL ANNOUNCEMENT message as the SDP body of the call;
- 2) shall store the value of the Call identifier IE of the GROUP CALL ANNOUNCEMENT message as the call identifier of the call;
- 3) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL ANNOUNCEMENT message as the originating MCPTT user ID of the call;
- 4) shall store the value of the Refresh interval IE of the GROUP CALL ANNOUNCEMENT message as the refresh interval of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL ANNOUNCEMENT message as the MCPTT group ID of the call;

- 6) shall store the value of the Call start time IE of the GROUP CALL ANNOUNCEMENT message as the call start time of the call;
- 7) shall create a call type control state machine as described in subclause 10.2.3.2;
- 8) if the terminating UE is configured that the terminating MCPTT user acknowledgement is required upon a terminating call request reception:
 - a) shall start timer TFG4 (waiting for the user);
 - b) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE, shall enter the "S5: pending user action with confirm indication" state; and
 - c) if the GROUP CALL ANNOUNCEMENT message does not contains the Confirm mode indication IE, shall enter the "S4: pending user action without confirm indication" state; and
- 9) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - a) shall establish a media session based on the stored SDP body of the call;
 - b) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
 - c) if the GROUP CALL ANNOUNCEMENT message contains the Confirm mode indication IE:
 - shall generate a GROUP CALL ACCEPT message as specified in subclause 15.1.4. In the GROUP CALL ACCEPT message, the MCPTT client:
 - A) shall set the Call identifier IE to the stored call identifier of the call;
 - B) shall set the Sending MCPTT user ID IE to own MCPTT user id;
 - C) shall set the Call type IE to the stored current call type associated with the call type control state machine; and
 - D) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
 - ii) shall send the GROUP CALL ACCEPT message as specified in subclause 10.2.1.1.1;
 - d) shall start timer TFG6 (max duration) with value as specified in subclause 10.2.2.4.1.2;
 - e) shall start timer TFG2 (call announcement) with value as specified in subclause 10.2.2.4.1.1.1; and
 - f) shall enter the "S3: part of ongoing call" state.

[TS 24.379, clause 10.2.3.4.5]

When in the "T0: waiting for the call to establish" state, upon receipt of a GROUP CALL ANNOUNCEMENT message by an idle MCPTT client when MCPTT user acknowledgement is not required, the MCPTT client:

- 1) shall set the stored last call type change time to the Last call type change time IE of the GROUP CALL ANNOUNCEMENT message;
- 2) shall set the last user to change call type to the Last user to change call type IE of the GROUP CALL ANNOUNCEMENT message;
- 3) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "EMERGENCY GROUP CALL":
 - a) shall set the stored current call type to "EMERGENCY GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network emergency group call as described in 3GPP TS 24.383 [45];
 - c) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and

- d) shall enter "T1: in-progress emergency group call" state;
- 4) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "IMMINENT PERIL GROUP CALL":
 - a) shall set the stored current call type to "IMMINENT PERIL GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network imminent peril group call as described in 3GPP TS 24.383 [45];
 - c) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - d) shall enter "T3: in-progress imminent peril group call" state; and
- 5) if the Call type IE of the received GROUP CALL ANNOUNCEMENT message is set to "BASIC GROUP CALL":
 - a) shall set the stored current call type to "BASIC GROUP CALL";
 - b) shall set the stored current ProSe per-packet priority to value corresponding to MCPTT off-network basic group call as described in 3GPP TS 24.383 [45]; and
 - c) shall enter "T2: in-progress basic group call" state.

[TS 24.379, clause 10.2.3.4.6]

When in state "T0: waiting for the call to establish", if:

- a) the MCPTT user accepts the call when MCPTT user acknowledgement is required; or
- b) the MCPTT client sends a GROUP CALL ANNOUNCEMENT message on expiry of timer TFG1 (wait for call announcement) associated with the basic call control state machine;

the MCPTT client:

- 1) if the stored current call type is set to "EMERGENCY GROUP CALL"
 - a) shall start timer TFG13 (implicit downgrade emergency) with value as specified in subclause 10.2.3.4.1.1; and
 - b) shall enter "T1: in-progress emergency group call" state;
- 2) if the stored current call type is set to "IMMINENT PERIL GROUP CALL"
 - a) shall start timer TFG14 (implicit downgrade imminent peril) with value as specified in subclause 10.2.3.4.1.2; and
 - b) shall enter "T3: in-progress imminent peril group call" state; or
- 3) if the stored current call type is set to "BASIC GROUP CALL"
 - a) shall enter "T2: in-progress basic group call" state.

7.1.8.3 Test description

7.1.8.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
 - UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception
 - TFG1 (wait for call announcement) set to 150 ms (default value) ("/<x>/OffNetwork/Counters/TFG1" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
 - TFG3 (call probe retransmission) set to 40 ms (default value) ("/<x>/OffNetwork/Counters/TFG3" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble:
 - The UE is in state 'switched-off'.

7.1.8.3.2 Test procedure sequence

Table 7.1.8.3.2-1: Main Behaviour

St	Procedure Message Sequence		TP	Verdict	
		U - S	Message		, or anot
1	Power up the UE	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).				
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
3	SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT for the initiation of an emergency group call	<	GROUP CALL ANNOUNCEMENT	-	-
4	Check: Does the UE (MCPTT Client) send a GROUP CALL ACEEPT message? (NOTE 2)	>	GROUP CALL ACCEPT	1	Р
5	Void	-	-	1	Р
6	SS-UE1 (MCPTT client) sends a Floor Granted message	<	Floor Granted	-	-
7	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
8	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	1	Р
9	SS-UE1 (MCPTT client) sends a Floor Deny message	<	Floor Deny	-	-
10	SS-UE1 (MCPTT client) sends a Floor Release message	<	Floor Release	-	-
11	Make the UE (MCPTT Client) release the group call (NOTE 1)	-	-	-	-
12	Void	-	-	-	-
13	Void	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
14	SS-UE1 (MCPTT client) sends a GROUP CALL ANNOUNCEMENT for the initiation of an imminent peril group call	<	GROUP CALL ANNOUNCEMENT	-	-
15	Check: Does the UE (MCPTT Client) send a GROUP CALL ACEEPT message? (NOTE 2)	>	GROUP CALL ACCEPT	2	Р
16	Void	-	-	2	Р
17	SS-UE1 (MCPTT client) sends a Floor Granted	<	Floor Granted	-	-
	message				

18	Make the UE (MCPTT User) request the floor (NOTE 1)	-	-	-	-
19	Check: Does the UE (MCPTT Client) send a Floor Request message to the floor participants?	>	Floor Request	2	Р
20	SS-UE1 (MCPTT client) sends a Floor Deny	<	Floor Deny	-	-
	message				
21	SS-UE1 (MCPTT client) sends a Floor	<	Floor Release	-	-
	Release message				
22	Make the UE (MCPTT Client) release the	-	-	-	-
	group call				
	(NOTE 1)				
NOTE	NOTE 1: This is expected to be done via a suitable implementation dependent MMI.				
NOTE	NOTE 2: The UE (MCPTT Client) enters the "S3: part of ongoing call" state as a terminating floor participant				

7.1.8.3.3 Specific message contents

Table 7.1.8.3.3-1: GROUP CALL ANNOUNCEMENT (step 3, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency Group	
		Call	
Originating MCPTT user ID	"sip:mcptt-client-	pre-set MCPTT	
	B@mcptt-op.gov"	user ID	

Table 7.1.8.3.3-2: GROUP CALL ANNOUNCEMENT (step 14, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.2.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent Peril Group Call	
Originating MCPTT user ID	"sip:mcptt-client- B@mcptt-op.gov"	pre-set MCPTT user ID	

Table 7.1.8.3.3-3: GROUP CALL ACCEPT (step 4, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.3.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000011"	Emergency Group Call	

Table 7.1.8.3.3-4: GROUP CALL ACCEPT (step 15, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.3.1-1			
Information Element	Value/remark	Comment	Condition
Call type	"00000100"	Imminent Peril	
		Group Call	

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3-1	condition OFF-NETWORK			
Information Element	Value/remark	Comment	Condition	
Duration				
Duration	any allowed value			
Floor priority	any allowed value			
User ID				
User ID	"sip:mcptt-client- B@mcptt-op.gov"			
Queue Size				
Queue Size	"0"	the numbers of queued MCPTT clients in the MCPTT call		
SSRC of queued floor participant	Not present			
Queued User ID	Not present			
Queued User ID	Not present			
Queue Info	Not present			
Queue Position Info	Not present			
Queue Priority Level	Not present			
Floor Indicator				
Floor Indicator	ʻ00010000000000'	bit D=1 (Emergency call)		

Table 7.1.8.3.3-5: Floor Granted (step 6, Table 7.1.8.3.2-1)

Table 7.1.8.3.3-6: Floor Granted (step 17, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.3- Information Element		Commont	Condition
	Value/remark	Comment	Condition
Duration			
Duration	any allowed value		
Floor priority	any allowed value		
User ID			
User ID	"sip:mcptt-client- B@mcptt-op.gov"		
Queue Size			
Queue Size	"0"	the numbers of queued MCPTT clients in the MCPTT call	
SSRC of queued floor participant	Not present		
Queued User ID	Not present		
Queued User ID	Not present		
Queue Info	Not present		
Queue Position Info	Not present		
Queue Priority Level	Not present		
Floor Indicator	· · ·		
Floor Indicator	'00001000000000'	bit E=1 (Imminent peril call)	

Table 7.1.8.3.3-7: Floor Request (step 8, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK						
Information Element	Value/remark Comment					
User ID						
User ID	"sip:mcptt-client- A@mcptt-op.gov"					
Floor Indicator						
Floor Indicator	'00010X0000000000'	bit D=1 (Emergency call) bit F=X (Queueing supported) any value				

Derivation Path: TS 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK					
Information Element	Value/remark	Comment	Condition		
User ID					
User ID	"sip:mcptt-client- A@mcptt-op.gov"				
Floor Indicator					
Floor Indicator	'00001X000000000'	bit E=1 (Imminent peril call) bit F=X (Queueing supported) any value			

Table 7.1.8.3.3-8: Floor Request (step 19, Table 7.1.8.3.2-1)

Table 7.1.8.3.3-9: Floor Deny (step 9, Table 7.1.8.3.2-1)

Information Element	Value/remark	Value/remark Comment			
Reject Cause					
Reject Phrase	"Another MCPTT client has permission"				
User ID					
User ID	"sip:mcptt-client- A@mcptt-op.gov"				
Floor Indicator					
Floor Indicator	ʻ00010000000000'	bit D=1 (Emergency call)			

Table 7.1.8.3.3-10: Floor Deny (step 20, Table 7.1.8.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK						
Information Element						
Reject Cause						
Reject Phrase	"Another MCPTT client has permission"					
User ID						
User ID	"sip:mcptt-client- A@mcptt-op.gov"					
Floor Indicator						
Floor Indicator	'000010000000000'	bit E=1 (Imminent peril call)				

Table 7.1.8.3.3-11: Floor Release (step 10, Table 7.1.8.3.2-1)

Information Element	Value/remark Comment				
User ID					
User ID	"sip:mcptt-client- B@mcptt-op.gov"				
Floor Indicator					
Floor Indicator	ʻ00010000000000'	bit D=1 (Emergency call)			

Derivation Path: TS 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK					
Information Element	Value/remark	remark Comment			
User ID					
User ID	"sip:mcptt-client- B@mcptt-op.gov"				
Floor Indicator					
Floor Indicator	'000010000000000'	bit E=1 (Imminent peril call)			

Table 7.1.8.3.3-12: Floor Release (step 21, Table 7.1.8.3.2-1)

7.1.9 Off-network / Group Call / Emergency Alert / Emergency Alert Retransmission / Cancel Emergency Alert / Client Originated (CO)

7.1.9.1 Test Purpose (TP)

}

(1)

```
with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
initiate emergency alerts in off-network environment, and the UE (MCPTT Client) is in an off-network
environment }
ensure that {
   when { the MCPTT User requests to initiate an MCPTT emergency alert }
    then { UE (MCPTT Client) sends a GROUP EMERGENCY ALERT message and enters the "E2: Emergency
state" state }
```

(2)

```
with { UE (MCPTT Client) in the "E2: Emergency state" state, and the UE (MCPTT Client) is in an off-
network environment }
ensure that {
   when { the timer TFE2 (emergency alert retransmission) expires }
    then { UE (MCPTT Client) retransmits the MCPTT emergency alert by sending a GROUP EMERGENCY
ALERT message}
```

(3)

```
with { UE (MCPTT Client) in the "E2: Emergency state" state, and the UE (MCPTT Client) is in an off-
network environment }
ensure that {
   when { the MCPTT User requests to cancel the MCPTT emergency alert }
    then { UE (MCPTT Client) sends a GROUP EMERGENCY ALERT CANCEL message and enters the "E1: Not in
emergency state" state }
   }
}
```

7.1.9.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 12.2.3.1, 12.2.3.2, 12.2.3.5. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 12.2.3.1]

When in state "E1: Not in emergency state", upon receiving an indication from the MCPTT user to transmit an emergency alert for an MCPTT group ID, and the values of "/<x>/<x>/Common/MCPTTGroupCall/EmergencyAlert/Authorised" leaf node present in the user profile and "/<x>/<x>/Common/AllowedEmergencyAlert" present in group configuration as specified in 3GPP TS 24.383 [45] are set to "true", the MCPTT client:

- 1) shall set the stored emergency state as "true";
- 2) shall set the stored MCPTT group ID to the indicated MCPTT group ID;

- 3) shall generate a GROUP EMERGENCY ALERT message as specified in subclause 15.1.16. In the GROUP EMERGENCY ALERT message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID;
 - b) shall set the Originating MCPTT user ID IE to own MCPTT user ID;
 - c) shall set the Organization name IE to own organization name; and
 - d) may set the User location IE with client's current location, if requested;
- 4) shall send the GROUP EMERGENCY ALERT message as specified in subclause 10.2.1.1.1;
- 5) shall start timer TFE2 (emergency alert retransmission); and
- 6) shall enter "E2: Emergency state" state.

[TS 24.379, clause 12.2.3.2]

When in state "E2: Emergency state", upon expiry of timer TFE2 (emergency alert retransmission), the MCPTT client:

- 1) shall generate a GROUP EMERGENCY ALERT message as specified in subclause 15.1.16. In the GROUP EMERGENCY ALERT message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID;
 - b) shall set the originating MCPTT user ID IE to own MCPTT user ID;
 - c) shall set the Organization name IE to own organization name; and
 - d) may set the Location IE with client's current location, if requested; and
- 2) shall send the GROUP EMERGENCY ALERT message as specified in subclause 10.2.1.1.1;
- 3) shall start the timer TFE2 (emergency alert retransmission); and
- 4) shall remain in the current state.

[TS 24.379, clause 12.2.3.5]

When in "E2: Emergency state", upon receiving an indication from the MCPTT user to cancel an emergency alert and the value of "/<x>/<x>/Common/MCPTTGroupCall/EmergencyAlert/Cancel" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] set to "true", the MCPTT client:

- 1) shall set the stored emergency state as "false";
- 2) shall generate a GROUP EMERGENCY ALERT CANCEL message as specified in subclause 15.1.18. In the GROUP EMERGENCY ALERT CANCEL message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the stored MCPTT group ID;
 - b) shall set the Originating MCPTT user ID IE to own MCPTT user ID; and
 - c) shall set the Sending MCPTT user ID IE to own MCPTT user ID;
- 3) shall send the GROUP EMERGENCY ALERT CANCEL message as specified in subclause 10.2.1.1.1;
- 4) shall stop timer TFE2 (emergency alert retransmission); and
- 5) shall enter "E1: Not in emergency state" state.

7.1.9.3 Test description

7.1.9.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.9.3.2

Test procedure sequence

Table 7.1.9.3.2-1: Main Behaviour

St	Procedure Message Sequence		TP	Verdict	
		U - S	Message		
1	Power up the UE	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may				
	be performed by MMI or AT command				
	(+CUTCR).				
2	Activate the MCPTT Client Application and	-	-	-	-
	register User A as the MCPTT User (TS				
	36.579-5 [5], px_MCPTT_User_A_username,				
	px_MCPTT_User_A_password).				
	(NOTE 1)				
3	Make the UE (MCPTT Client) initiate an off-	-	-	-	-
	network emergency alert (NOTE 1)				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT off-network call				
	establishment are described in TS 36.579-				
	1 [2], subclause 5.4.11 'Generic Test				
	Procedure for MCPTT CO communication over				
	ProSe direct one-to-many communication out				
	of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One-				
	to-many communication'. The test sequence				
	below shows only the MCPTT relevant				
	messages exchanged.				
4	Check: Does the UE (MCPTT client) send a	>	GROUP EMERGENCY ALERT	1	Р
	GROUP EMERGENCY ALERT message?				
4.0	(NOTE 2)				-
4A	SS starts Timer=10s (TFE2 (emergency alert retransmission))	-	-	-	-
5	The SS-UE1 (MCPTT client) responds to the	<	GROUP EMERGENCY ALERT	-	-
C	GROUP EMERGENCY ALERT by sending a		ACK		
	GROUP EMERGENCY ALERT ACK				
6	Timer=10s expires	-	-	-	-
7	Check: Does the UE (MCPTT client) send a	>	GROUP EMERGENCY ALERT	2	P
	GROUP EMERGENCY ALERT message? (NOTE 2)				
8	Make the UE (MCPTT Client) cancel the	_	-	_	_
0	emergency alert		-	_	_
	(NOTE 1), (NOTE 3)				
9	Check: Does the UE (MCPTT client) send a	>	GROUP EMERGENCY ALERT	3	Р
	GROUP EMERGENCY ALERT CANCEL		CANCEL		
	message?				
10	(NOTE The SS-UE1 (MCPTT client) responds to the		GROUP EMERGENCY ALERT		
10	GROUP EMERGENCY ALERT CANCEL by	<	CANCEL ACK	-	-
	sending a GROUP EMERGENCY ALERT				
	CANCEL ACK				
	1: This is expected to be done via a suitable imp				
NOTE	2: Timer TFE2 (emergency alert retransmission)				
	ALERT message. Timer TFE2 (emergency ale	ert retran	smission)=10s, as defined in TS 36.5	579-1 [2]	, I able
	5.5.8.1-1. At the expire of TFE2, the MCPTT (3: If the MCPTT User does not perform an action				message.
NOIL	retransmission), then the MCPTT Client will re				e and the
	remaining steps will not be valid. Timer TFE2	(emergei	ncy alert retransmission) is started up	oon the	sending o
	the GROUP EMERGENCY ALERT message.	Timer TI	E2 (emergency alert retransmission)=10s, a	as defined
	in TS 36.579-1 [2], Table 5.5.8.1-1. At the exp	ire of TF	E2, the MCPTT Client retransmits the	e GROU	IP
	EMERGENCY ALERT message. If during test	t executio	on it is found that the specified timer	value is	not large
					•
NOTE	enough, then a new value needs to be specific 4: The MCPP Client stops the TFE2 (emergency	ed.			-

7.1.9.3.3 Specific message contents

None

7.1.10 Off-network / Group Call / Emergency Alert / Emergency Alert Retransmission / Cancel Emergency Alert / Client Terminated (CT)

7.1.10.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to receive emergency alerts in off-network environment, and the UE (MCPTT Client) is in an off-network environment } ensure that {

```
when { UE (MCPTT Client) receives an MCPTT emergency alert via a GROUP EMERGENCY ALERT message }
    then { UE (MCPTT Client) responds by sending a GROUP EMERGENCY ALERT ACK }
    }
```

(2)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, having received an MCPTT
emergency alert, and the UE (MCPTT Client) is in an off-network environment }
ensure that {
 when { UE (MCPTT Client) receives a GROUP EMERGENCY ALERT message from the same MCPTT Client that
 sent the previous GROUP EMERGENCY ALERT message, and the timer TFE1 (Emergency Alert) has yet to
 expire }

then { UE (MCPTT Client) shall not send a GROUP EMERGENCY ALERT ACK in response }

(3)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, having received an MCPTT
emergency alert, and the UE (MCPTT Client) is in an off-network environment }
ensure that {
 when { UE (MCPTT Client) receives a GROUP EMERGENCY ALERT message from the same MCPTT Client that
 sent the previous GROUP EMERGENCY ALERT message, and the timer TFE1 (Emergency Alert) expired }

then { UE (MCPTT Client) responds by sending a GROUP EMERGENCY ALERT ACK }
}

(4)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, having received an MCPTT emergency alert, and the UE (MCPTT Client) is in an off-network environment } ensure that {

when { UE (MCPTT Client) receives a GROUP EMERGENCY ALERT CANCEL message from the same MCPTT
Client that sent the previous GROUP EMERGENCY ALERT message }
 then { UE (MCPTT Client) responds by sending a GROUP EMERGENCY ALERT CANCEL ACK }
 }
}

7.1.10.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 12.2.3.3, 12.2.3.4, 12.2.3.6, 12.2.3.7. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 12.2.3.3]

}

When in state "E1: Not in emergency state" or in "E2: Emergency state", upon receiving a GROUP EMERGENCY ALERT message with the Originating MCPTT user ID IE not stored in the list of users in emergency, the MCPTT client:

- 1) shall store the Originating MCPTT user ID IE and location IE in the list of users in emergency;
- 2) shall generate a GROUP EMERGENCY ALERT ACK message as specified in subclause 15.1.17. In the GROUP EMERGENCY ALERT ACK message, the MCPTT client:

- a) shall set the MCPTT group ID IE to the MCPTT group ID IE of the received GROUP EMERGENCY ALERT message;
- b) shall set the Sending MCPTT user ID IE to own MCPTT user ID; and
- c) shall set the Originating MCPTT user ID IE to the Originating MCPTT user ID IE of the received GROUP EMERGENCY ALERT message; and
- 3) shall send the GROUP EMERGENCY ALERT ACK message as specified in subclause 10.2.1.1.1;
- 4) shall start timer TFE1 (Emergency Alert); and
- 5) shall remain in the current state.
- NOTE: Each instance of timer TFE1 is per MCPTT user ID.

[TS 24.379, clause 12.2.3.4]

When in state "E1: Not in emergency state" or in "E2: Emergency state", upon receiving a GROUP EMERGENCY ALERT message with the Originating MCPTT user ID IE stored in the list of users in emergency, the MCPTT client:

- 1) may update the stored location of the user with the received Location IE;
- 2) shall restart the associated timer TFE1 (Emergency Alert); and
- 3) shall remain in the current state.

[TS 24.379, clause 12.2.3.6]

When in state "E1: Not in emergency state" or in "E2: Emergency state", upon receiving a GROUP EMERGENCY ALERT CANCEL message with the Originating MCPTT user ID IE stored in the list of users in emergency, the MCPTT client:

- 1) shall remove the MCPTT user ID and associated location information from the stored list of users in emergency;
- 2) shall generate a GROUP EMERGENCY ALERT CANCEL ACK message as specified in subclause 15.1.19. In the GROUP EMERGENCY ALERT CANCEL ACK message, the MCPTT client:
 - a) shall set the MCPTT group ID IE to the MCPTT group ID IE of the received GROUP EMERGENCY ALERT CANCEL message; and
 - b) shall set the Sending MCPTT user ID IE to own MCPTT user ID; and
 - c) shall set the Originating MCPTT user ID IE to the Originating MCPTT user ID IE of the received GROUP EMERGENCY ALERT message;
- 3) shall send the GROUP EMERGENCY ALERT CANCEL ACK message as specified in subclause 10.2.1.1.1;
- 4) shall stop the associated timer TFE1 (Emergency Alert); and5) shall remain in the current state.

[TS 24.379, clause 12.2.3.7]

When in state "E1: Not in emergency state" or in "E2: Emergency state", upon expiry of timer TFE1 (Emergency Alert) associated with a stored MCPTT user ID, the MCPTT client:

- 1) shall remove the MCPTT user ID and associated location information from the stored list of users in emergency; and
- 2) shall remain in the current state.

7.1.10.3 Test description

7.1.10.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- TFE1(emergency alert) set to 15 seconds ("/<x>/OffNetwork/Timers/TFE1" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.10.3.2

Test procedure sequence

Table 7.1.10.3.2-1: Main Behaviour

St	Procedure		Message Sequence		Verdict	
		U - S	Message			
1	Power up the UE	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).					
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
3	SS-UE1 (MCPTT client) sends a GROUP EMERGENCY ALERT (NOTE 2), (NOTE 3), (NOTE 4)	<	GROUP EMERGENCY ALERT	-	-	
ЗA	SS starts Timer=10s (TFE2 (emergency alert retransmission))	-	-	-	-	
3B	SS starts Timer=15s (TFE1 (Emergency Alert))					
4	Void	-	-	-	-	
5	Check: Does the UE (MCPTT Client) respond to the GROUP EMERGENCY ALERT by sending a GROUP EMERGENCY ALERT ACK?	>	GROUP EMERGENCY ALERT ACK	1	Р	
5A	Timer=10s expires (TFE2 (emergency alert retransmission))	-	-	-	-	
6	Upon expiry of the timer TFE2 (emergency alert retransmission), the SS-UE1 (MCPTT client) retransmits the emergency alert by sending a GROUP EMERGENCY ALERT	<	GROUP EMERGENCY ALERT	-	-	
6A	SS starts Timer=10s (TFE2 (emergency alert retransmission))	-	-	-	-	
7	Check: Does the UE (MCPTT Client) respond to the GROUP EMERGENCY ALERT by sending in the next 5 seconds a GROUP EMERGENCY ALERT ACK?	>	GROUP EMERGENCY ALERT ACK	2	F	
7A	Wait 5 seconds for GROUP EMERGENCY ALERT ACK	-	-	-	-	
8	Timer=15s expires (TFE1 (Emergency Alert)) (NOTE 5)	-	-	-	-	
8A	Wait 5 seconds for expiration of timer TFE2 (emergency alert retransmission)					
8B	Timer=10s expires (TFE2 (emergency alert retransmission))	-	-	-	-	
9	SS-UE1 (MCPTT client) sends a GROUP EMERGENCY ALERT (NOTE 4)	<	GROUP EMERGENCY ALERT	-	-	
10	Void	-	-	-	-	
11	Check: Does the UE (MCPTT Client) respond to the GROUP EMERGENCY ALERT by sending a GROUP EMERGENCY ALERT ACK?	>	GROUP EMERGENCY ALERT ACK	3	Р	
12	SS-UE1 (MCPTT client) sends a GROUP EMERGENCY ALERT	<	GROUP EMERGENCY ALERT CANCEL	-	-	
13	Void	-	-	-	-	

14	Check: Does the UE (MCPTT Client) respond	>	GROUP EMERGENCY ALERT	4	Р
	to the GROUP EMERGENCY ALERT		CANCEL ACK		
	CANCEL by sending a GROUP EMERGENCY				
	ALERT CANCEL ACK?				
NOTE	1: This is expected to be done via a suitable imp	lementati	ion dependent MMI.		
NOTE	2: Timer TFE1(emergency alert) is started by the	• MCPTT	Client upon the receiving of the GRC	OUP	
	EMERGENCY ALERT message. Timer TFE1	(emerge	ncy alert)=15s, as defined as defined	in the F	Pre-test
	conditions. At the expire of TFE1, the MCPTT	Client as	sumes the end of the emergency sta	te and r	emoves
	the associated user from the list.				
NOTE	3: Timer TFE2 (emergency alert retransmission)	is started	d by the SS upon the sending of the C	GROUP	
	EMERGENCY ALERT message. Timer TFE2	(emerge	ncy alert retransmission)=10s, as def	ined in [·]	TS
	36.579-1 [2], Table 5.5.8.1-1. At the expire of	TFE2, the	e SS retransmits the GROUP EMER	GENCY	ALERT
	message.				
NOTE	The UE (MCPTT Client) stores the Originating	MCPTT	user ID IE in the list of users in emer	gency.	
NOTE	5: Upon expiry of the timer TFE1 (Emergency Al	ert), the l	JE (MCPTT Client) removes the MCF	TT use	r ID from
	the stored list of users in emergency		. ,		

7.1.10.3.3 Specific message contents

None

7.1.11 Off-network / Group Call / Broadcast Group Call / Broadcast Group Call Retransmitting / Broadcast Group Call Release / Client Originated (CO)

7.1.11.1 Test Purpose (TP)

(1)

```
with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
initiate broadcast calls in off-network environment, and the UE (MCPTT Client) is in an off-network
environment
ensure that
  when \{ the MCPTT User requests to initiate an MCPTT broadcast call \}
   then { UE (MCPTT Client) sends a GROUP CALL BROADCAST message and enters the "B2: in-progress
broadcast group call" state }
            }
(2)
with { UE (MCPTT Client) in the "B2: in-progress broadcast group call" state, and the UE (MCPTT
Client) is in an off-network environment }
ensure that {
 when { the timer TFB2 (broadcast retransmission) expires }
   then { UE (MCPTT Client) retransmits the GROUP CALL BROADCAST message }
            }
(3)
with { UE (MCPTT Client) in the "B2: in-progress broadcast group call" state, and the UE (MCPTT
Client) is in an off-network environment }
ensure that {
 when { the MCPTT User requests to end the MCPTT broadcast call }
   then { UE (MCPTT Client) sends a GROUP CALL BROADCAST END message and enters the "B1: start-
stop" state
```

7.1.11.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.3.2.4.1, 10.3.2.4.9, 10.3.2.4.7, TS 24.380 clause 7.2.3.2.2. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.3.2.4.1]

When in the "B1: start-stop" state, upon the indication from MCPTT user to initiate the broadcast group call, the MCPTT client:

- 1) shall generate an SDP body as specified in subclause 10.2.1.1.2 and store it as the SDP body of the call;
- 2) shall generate a random number with uniform distribution between 0 and 65535 and store it as the call identifier of the call;
- 3) shall store own MCPTT user ID as the originating MCPTT user ID of the call;
- 4) shall store "BROADCAST GROUP CALL" as the current call type;
- 5) shall generate a GROUP CALL BROADCAST message as specified in subclause 15.1.20. In the GROUP CALL BROADCAST message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Call type IE to the stored current call type;
 - c) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call;
 - d) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
 - e) shall set the SDP IE to the stored SDP body of the call;
- 6) shall set the ProSe per-packet priority to the value corresponding to MCPTT off-network broadcast callas described in 3GPP TS 24.383 [45];
- 7) shall start floor control as originating floor participant as described specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 8) shall send the GROUP CALL BROADCAST message as specified in subclause 10.2.1.1.1;
- 9) shall establish a media session based on the stored SDP body of the call;
- 10) shall start timer TFB2 (broadcast retransmission); and
- 11) shall enter the "B2: in-progress broadcast group call" state.

[TS 24.379, clause 10.3.2.4.9]

When in the "B2: in-progress broadcast group call" state, upon expiry of timer TFB2 (broadcast retransmission), the MCPTT client:

- shall generate a GROUP CALL BROADCAST message as specified in subclause 15.1.20. In the GROUP CALL BROADCAST message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Call type IE to the stored current call type;
 - c) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call;
 - d) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call; and
 - e) shall set the SDP IE to the stored SDP body of the call;
- 2) shall send the GROUP CALL BROADCAST message as specified in subclause 10.2.1.1.1;
- 3) shall restart timer TFB2 (broadcast retransmission); and
- 4) shall remain in the "B2: in-progress broadcast group call" state.

[TS 24.379, clause 10.3.2.4.7]

When in the "B2: in-progress broadcast group call" state, upon an indication from the originating MCPTT user to release the in-progress broadcast group call, the MCPTT client:

- 1) shall release the media session;
- 2) shall generate a GROUP CALL BROADCAST END message as specified in subclause 15.1.21. In the GROUP CALL BROADCAST END message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier of the call;
 - b) shall set the Originating MCPTT user ID IE to the stored originating MCPTT user ID of the call; and
 - c) shall set the MCPTT group ID IE to the stored MCPTT group ID of the call;
- 3) shall send the GROUP CALL BROADCAST END message as specified in subclause 10.2.1.1.1;
- 4) shall stop timer TFB2 (broadcast retransmission);
- 5) shall clear the stored call identifier;
- 6) shall stop floor control; and
- 7) shall enter the "B1: start-stop" state.

[TS 24.380, clause 7.2.3.2.2]

When an MCPTT call is established with session announcement including an explicit floor request, the originating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall send Floor Granted message towards other floor participants. The Floor Granted message:
 - a. shall include the granted priority in the Floor priority field;
 - b. shall include the MCPTT user's own MCPTT ID in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 3. shall set the stored SSRC of the current florr arbitrator to its own SSRC; and
- 4. shall enter 'O: has permission' state.
- 7.1.11.3 Test description

7.1.11.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).

NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.11.3.2

Test procedure sequence

U-S Message 1 Power up the UE - - - 1A Trigger the UE to reset UTC time and location. - - - 1A Trigger the UE to reset UTC time and location reset may be performed by MMI or AT command (4CUTCR). - - - 2 Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px.MCPTT. User, A_username, px.MCPTT. User, A_assword). - <t< th=""><th>St</th><th>Procedure</th><th></th><th>Message Sequence</th><th>TP</th><th>Verdict</th></t<>	St	Procedure		Message Sequence	TP	Verdict
1A Trigger the UE to reset UTC time and location. - - - - NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR). - - - - 2 Activate the MCPTT Client Application and register User As the MCPTT User (TS 36.579-5 [5], px.MCPTT_User, A_username, px.MCPTT_User, A_password). -<			U - S	Message		
NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR). - - - 2 Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], p.X.MCPTT_User_A_password). - - - 3 Make the UE (MCPTT Client) initiate an off- network broadcast call (NOTE 1) - - - - 3 Make the UE (MCPTT Client) initiate an off- network broadcast call (NOTE 1) - - - - 4 EXCEPTION: The E-UTRA/EPC actions which establishment are described in TS 36.579- 1 [2], subclause 5.4.11 Geneir Test Procedure for MCPTT Co communication over Procedure for MCPTT Client) send a messages exchanged. - - - 4 Check: Does the UE (MCPTT client) send a frock over / One- to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. - - - 4 Check: Does the UE (MCPTT Client) send a floor Granted message towards the other floor participants? - - - 6 Timer-10s (Timer TFB2 (broadcast retransmission)) - - - 7 Check: Does the UE (MCPTT Client) send a floor Granted message towards the other floor participants? - - - 8	1		-	-	-	-
be performed by MMI or AT command	1A	Trigger the UE to reset UTC time and location.	-	-	-	-
be performed by MMI or AT command						
Image: Current of the construction of the constructin of the construction of the construction o						
2 Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_password). -						
register User A as the MCPTT User (TS 36 679-6 [5], px, MCPTT User, A_password). (NOTE 1) 3 Make the UE (MCPTT Client) initiate an off- network broadcast call (NOTE 1) - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call - • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call - • Toccedure for MCPTT CO communication over Procedure for MCPTT Co communication over procedure for Group member discovery / One- to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. > 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? > 6 Timer=10s (Timer TFB2 (broadcast retramsission)) > 5 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? > 6 Timer=10s (Timer TFB2 (broadcast retramsission)) > 7 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? > 6 Timer=10s (Client) cancel the broadcast call (NOTE 3) > 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier E as used in step 4? >	2		-	-	-	-
36.579-5 (5), px, MCPTT_User_A_username, px, MCPTT_User_A_password). . 3 Make the UE (MCPTT Client) initiate an off- network broadcast call (NOTE 1) . . 3 EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication, The test sequence below shows only the MCPTT relevant messages exchanged. . 4 Check: Does the UE (MCPTT Client) send a (NOTE 2) > GROUP CALL BROADCAST 1 5 Check: Does the UE (MCPTT Client) send a retransmission)) > Floor Granted 1 P 6 Timer-10s (Timer TFB2 (broadcast retransmission)) > GROUP CALL BROADCAST 2 P 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST > Floor Granted 1 P 8 Make the UE (MCPTT client) send a GROUP CALL BROADCAST END message using the same Call identifier IE as used in step 4? 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? 	-					
px.MCPTT_Üser_A_password).						
3 Make the UE (MCPTT Client) initiate an off- network broadcast call (NOTE 1) - </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
network broadcast call (NOTE 1) • EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579-1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One-to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. - 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 6 Timer=10s expires - - - - 7 Check: Does the UE (MCPTT Client) send a GROUP CALL BROADCAST 2 P P 7 Check: Does the UE (MCPTT Client) send a GROUP CALL BROADCAST 2 P G 7 Check: Does the UE (MCPTT Client) send a GROUP CALL BROADCAST 2 P G 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST 2 P G 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST 1 - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST 1 - - - - - - - - - - - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
(NOTE 1) EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579-112], subclause 5.4.11 Generic Test Procedure for MCPTT CC communication over ProSe direct one-to-many communication over procedure for Group member discoverer procedure for group member discovery / One-to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST discover retransmission) 5 Check: Does the UE (MCPTT client) send a Floor Granted discover di	3		-	-	-	-
- EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT off-network call establishment are described in TS 36.579-1 [2], subclause 5.4.11 Generic Test Procedure for MCPTT CC communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One-to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. - - 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > GROUP CALL BROADCAST message? (NOTE 2) 1 P 4A S starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 1 P 5 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > Floor Granted 1 P 6 Timer=10s (Timer TFB2 (broadcast retransmission)) > GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? > GROUP CALL BROADCAST 2 P 8 Make the UE (MCPTT client) send a GROUP CALL BROADCAST END as used in step 4? > > - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END as used in step 4? > - - - - - - - - - - - - - - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
are related to the MCPTT off-network call establishment are described in TS 36.579- 1 [2], subclause 5.4.11 (Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-mary communication. The test sequence below shows only the MCPTT relevant messages exchanged. > GROUP CALL BROADCAST 1 P 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > GROUP CALL BROADCAST 1 P 5 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer-10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? > GROUP CALL BROADCAST 2 P 6 Timer-10s expires - - - - - - 7 Check: Does the UE (MCPTT client) send a (NOTE 1), (NOTE 3) > GROUP CALL BROADCAST 2 P 8 Make the UE (MCPTT Client) send a (NOTE 4) - - - - - 9 Check: Does the UE (MCPTT Client) send a (NOTE 4) -> GR						
establishment are described in TS 36.579- 1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CC communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged. > GROUP CALL BROADCAST 1 P 4 Check: Does the UE (MCPTT relevant messages exchanged. > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - <t< td=""><td>-</td><td></td><td>-</td><td>-</td><td>-</td><td>-</td></t<>	-		-	-	-	-
1 [2], subclause 5.4.11 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication. The test sequence below shows only the MCPTT relevant messages exchanged. 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? 6 Timer-10s expires 7 Check: Does the UE (MCPTT client) send a Floor Granted message using the same Call identifier IE as used in step 4? 8 Make the UE (MCPTT client) cancel the broadcast call (NOTE 1), (NOTE 3) GROUP CALL BROADCAST END additional start-stop" state? (NOTE 4) 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4)						
Procedure for MCPTT CO communication over ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged. > 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? - - - 6 Timer-10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? -						
ProSe direct one-to-many communication out of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged. > GROUP CALL BROADCAST 1 P 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? - Floor Granted 1 P 6 Timer=10s expires - - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? -						
of E-UTRA coverage / Monitoring/Discoverer procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged. 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? 6 Timer=10s expires 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? 8 Make the UE (MCPTT Client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? 8 Make the UE (MCPTT Client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? 19 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1.1 at the expire of timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1.1 at the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 1: This is expected to be done vi						
procedure for group member discovery / One- to-many communication'. The test sequence below shows only the MCPTT relevant > 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? > GROUP CALL BROADCAST 1 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - - - - 8 Make the UE (MCPTT client) cancel the broadcast call (NOTE 1), (NOTE 13) > GROUP CALL BROADCAST END 3 P 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? > GROUP CALL BROADCAST END 3 P 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1.1.4 the expire of timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1.1.4 the expire of timer TFB2 (broadcast retransmission)) expires, then the MCPTT User does no						
below shows only the MCPTT relevant messages exchanged. GROUP CALL BROADCAST P 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a Floor Granted message using the same Call identifier IE as used in step 4? -						
messages exchanged. GROUP CALL BROADCAST P 4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT client) send a retransmission) > Floor Granted 1 P 6 Timer=10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? -<						
4 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message? (NOTE 2) > GROUP CALL BROADCAST 1 P 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) > Floor Granted 1 P 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
GROUP CALL BROADCAST message? (NOTE 2)						
(NOTE 2) 4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted message towards the other floor participants? 6 Timer=10s expires - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - - 8 Make the UE (MCPTT client) cancel the broadcast call (NOTE 1), (NOTE 3) - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? - - - 10 NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer valu	4		>	GROUP CALL BROADCAST	1	Р
4A SS starts Timer=10s (Timer TFB2 (broadcast retransmission)) 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST 2 P P 8 Make the UE (MCPTT client) cancel the broadcast call identifier IE as used in step 4? - - - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? - <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td></td<>						
retransmission)) retransmission)) 5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - - - - 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) - - - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? - - - - - 10 NOTE 1: NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT User does not cancel the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	4.0					
5 Check: Does the UE (MCPTT Client) send a Floor Granted message towards the other floor participants? > Floor Granted 1 P 6 Timer=10s expires - - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? > GROUP CALL BROADCAST 2 P 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) - - - - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) -	4A					
Floor Granted message towards the other floor participants? - - - 6 Timer=10s expires - - - - 7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - - - 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) - - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) - - - - NOTE 1: This is expected to be done via a suitable implementation dependent MMI. - - - - NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified	5		>	Floor Granted	1	Р
participants? - <	Ū		-		•	
7 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? > GROUP CALL BROADCAST 2 P 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) - - - - - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) - <						
GROUP CALL BROADCAST message using the same Call identifier IE as used in step 4? - 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) - 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) > NOTE 1: This is expected to be done via a suitable implementation dependent MMI. - NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	6		-	-	-	-
the same Call identifier IE as used in step 4? 8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	7		>	GROUP CALL BROADCAST	2	Р
8 Make the UE (MCPTT Client) cancel the broadcast call (NOTE 1), (NOTE 3) -						
broadcast call (NOTE 1), (NOTE 3) > GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) > GROUP CALL BROADCAST END 3 P NOTE 1: This is expected to be done via a suitable implementation dependent MMI. > ROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) > GROUP CALL BROADCAST END 3 P NOTE 1: This is expected to be done via a suitable implementation dependent MMI. > Check: Comparison of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	-					
Image: Note 1, (Note 3) Image: Note 1, (Note 3) 9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? Image: Start-Stop" State? Image: Note 1: This is expected to be done via a suitable implementation dependent MMI. Image: Start-Stop Started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	8		-	-	-	-
9 Check: Does the UE (MCPTT client) send a GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) > GROUP CALL BROADCAST END 3 P NOTE 1: This is expected to be done via a suitable implementation dependent MMI. 3 P NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.						
GROUP CALL BROADCAST END message and enter the "B1: start-stop" state? (NOTE 4) Image: Start-stop of the start	Q		>	GROUP CALL BROADCAST END	3	P
and enter the "B1: start-stop" state? (NOTE 4) NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	3			SILOUI CALL DICADOADT LIND	0	•
(NOTE 4) NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.						
 NOTE 1: This is expected to be done via a suitable implementation dependent MMI. NOTE 2: Timer TFB2 (broadcast retransmission) is started by the MCPTT Client upon the sending of the GROUP CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified. 		(NOTE 4)				
 CALL BROADCAST message. Timer TFB2 (broadcast retransmission)=10s, as defined in TS 36.579-1 [2], Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified. 		1: This is expected to be done via a suitable imp				
 Table 5.5.8.1-1. At the expire of timer TFB2 (broadcast retransmission), the MCPTT Client resends the GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified. 	NOTE					
 GROUP CALL BROADCAST message. NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified. 						
NOTE 3: If the MCPTT User does not cancel the broadcast call before timer TFB2 (broadcast retransmission) expires, then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.			proadcast	retransmission), the MCPTT Client re	esends	tne
then the MCPTT Client will resend the GROUP CALL BROADCAST message per TS 24.379 [9] and the remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.				oforo timor TER2 (broodcoot retronor	nicolor	
remaining steps will not be valid. If during test execution it is found that the specified timer value is not large enough, then a new value needs to be specified.	NOTE					
enough, then a new value needs to be specified.						
						iot lui go
NOTE 4: Timer TFB2 (broadcast retransmission) is stopped by the MCPTT Client upon the sending of the GROUP	NOTE			he MCPTT Client upon the sending of	the GI	ROUP
CALL BROADCAST END message.				. 5		

7.1.11.3.3 Specific message contents

Table 7.1.11.3.3-1: GROUP CALL BROADCAST (step 7, Table 7.1.11.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.6.1-1			
Information Element	Value/remark	Comment	Condition
Call identifier	Use the same Call		
	identifier as used in the		
	GROUP CALL		
	BROADCAST message		
	sent in step 3		

7.1.12 Off-network / Group Call / Broadcast Group Call / MCPTT User Ack Not Required / Originator Releases Call / Client Terminated (CT)

7.1.12.1 Test Purpose (TP)

(1)

```
with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to
receive broadcast calls in off-network environment, and the UE (MCPTT Client) is in an off-network
environment, and the UE (MCPTT Client) has received a GROUP CALL BROADCAST message }
ensure that {
   when { MCPTT User requests the floor }
    then { UE (MCPTT Client) does not send a Floor Request message }
   }
}
```

7.1.12.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.3.2.4.2, 10.3.2.4.8, TS 24.380 clause 7.2.3.2.9. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.3.2.4.2]

When in the "B1: start-stop" state, upon receiving a GROUP CALL BROADCAST message with the Call identifier IE not matching any in-progress broadcast group call, the MCPTT client:

- 1) shall store the value of the Call identifier IE of the GROUP CALL BROADCAST message as the call identifier of the call;
- 2) shall store the value of the Call type IE of the GROUP CALL BROADCAST message as the received current call type;
- 3) shall store the value of the SDP IE of the GROUP CALL BROADCAST message as the SDP body of the call;
- 4) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL BROADCAST message as the originating MCPTT user ID of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL BROADCAST message as the MCPTT group ID of the call;
- 6) if the terminating UE is configured that the terminating MCPTT user acknowledgement is required upon a terminating call request reception:
 - i) shall start timer TFB3 (waiting for the user); and
 - ii) shall enter the "B3: pending user action" state; and
- 7) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - i) shall establish a media session based on the stored SDP body of the call;
 - ii) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];

- iii) shall start timer TFB1 (max duration); and
- iv) shall enter the "B2: in-progress broadcast group call" state.

[TS 24.379, clause 10.3.2.4.8]

When in the "B2: in-progress broadcast group call" state or "B4: ignoring same call ID" state, upon receiving GROUP CALL BROADCAST END message with the same Call identifier IE as the stored call identifier, the MCPTT client:

- 1) shall release media session;
- 2) shall stop timer TFB1 (max duration);
- 3) shall clear the stored call identifier;
- 4) shall stop floor control, if running; and
- 5) shall enter the "B1: start-stop" state.

[TS 24.380, clause 7.2.3.2.9]

When an MCPTT broadcast call is established the terminating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall start timer T203 (End of RTP media); and
- 3. shall enter 'O: has no permission' state.
- NOTE: In MCPTT broadcast call, only originating MCPTT user is allowed to request floor and transmit media. A Floor Request message is locally denied to terminating MCPTT user, if requested.
- 7.1.12.3 Test description
- 7.1.12.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)

- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
- TFG4 (waiting for the user) set to 0 (a value to suit the test case sequence) ("/<x>/OffNetwork/Timers/TFB1" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.12.3.2

Test procedure sequence

Table 7.1.12.3.2-1: Main Behavi	our
---------------------------------	-----

St	Procedure	Message Sequence			Verdict
		U - S	Message		
1	Power up the UE	-	-	-	-
1A	Trigger the UE to reset UTC time and location. NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).	-	-	-	-
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
3	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST (NOTE 2)	<	GROUP CALL BROADCAST	-	-
ЗA	Make the UE (MCPTT User) request the floor (NOTE 1), (NOTE 3)				
4	Check: Does the UE (MCPTT Client) send in the next 5 seconds a Floor Request message to the floor participants?	>	Floor Request	1	F
5	Wait 5 seconds for the Floor Request message				
6	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST END (NOTE 4)	<	GROUP CALL BROADCAST END	-	-
NOTE NOTE	 This is expected to be done via a suitable imp Timer TFB1 (max duration) is started by the M BROADCAST message. Timer TFB1 (max du At the expire of TFB1 (max duration), the MCF It is possible that the MCPTT Client may not a Timer TFB1 (max duration) is stopped by the BROADCAST END message. 	ICPTT C uration)= PTT Clier Illow the	lient upon the receiving of the GROUF 300s, as defined in TS 36.579-1 [2], Ta nt will terminate participation in the bro MCPTT User to request the floor.	able 5. adcast	5.8.1-1. call.

7.1.12.3.3 Specific message contents

None

7.1.13 Off-network / Group Call / Broadcast Group Call / MCPTT User Ack Required / MCPTT User Reject / MCPTT User Accept / MCPTT User Releases Call / Client Terminated (CT)

7.1.13.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorised for MCPTT Service, including authorised to receive broadcast calls in off-network environment, and the UE (MCPTT Client) configured that MCPTT

3GPP TS 36.579-2 version 14.3.0 Release 14

510

user acknowledgement is required upon a terminating call request reception, and the UE (MCPTT Client) is in an off-network environment } ensure that { when { UE (MCPTT Client) receives a GROUP CALL BROADCAST message with a Call identifier that has not been previously received} then { UE (MCPTT Client) enters the "B3: pending user action" state and requests the user to reject or accept the incoming broadcast call } } }

(2)

with { UE (MCPTT Client) having received a GROUP CALL BROADCAST message }
ensure that {
 when { the MCPTT User rejects the incoming off-network broadcast call}
 then { UE (MCPTT Client) enters the "B4: ignoring same call ID" state and ignores subsequent
GROUP CALL BROADCAST messages that match with the stored Call identifier }
 }
}

7.1.13.2 Conformance requirements

References: The conformance requirements covered in the current TC are specified in: TS 24.379 clauses 10.3.2.4.2, 10.3.2.4.4, 10.3.2.4.8, 10.3.2.4.3, 10.3.2.4.6, 10.3.2.4.10, 10.3.2.4.11. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 10.3.2.4.2]

When in the "B1: start-stop" state, upon receiving a GROUP CALL BROADCAST message with the Call identifier IE not matching any in-progress broadcast group call, the MCPTT client:

- 1) shall store the value of the Call identifier IE of the GROUP CALL BROADCAST message as the call identifier of the call;
- shall store the value of the Call type IE of the GROUP CALL BROADCAST message as the received current call type;
- 3) shall store the value of the SDP IE of the GROUP CALL BROADCAST message as the SDP body of the call;
- 4) shall store the value of the Originating MCPTT user ID IE of the GROUP CALL BROADCAST message as the originating MCPTT user ID of the call;
- 5) shall store the value of the MCPTT group ID IE of the GROUP CALL BROADCAST message as the MCPTT group ID of the call;
- 6) if the terminating UE is configured that the terminating MCPTT user acknowledgement is required upon a terminating call request reception:
 - i) shall start timer TFB3 (waiting for the user); and
 - ii) shall enter the "B3: pending user action" state; and
- 7) if the terminating UE is configured that the terminating MCPTT user acknowledgement is not required upon a terminating call request reception:
 - i) shall establish a media session based on the stored SDP body of the call;
 - ii) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
 - iii) shall start timer TFB1 (max duration); and
 - iv) shall enter the "B2: in-progress broadcast group call" state.

[TS 24.379, clause 10.3.2.4.4]

When in the "B3: pending user action" state, upon an indication from the MCPTT user to reject the incoming broadcast group call, the MCPTT client:

- 1) shall stop timer TFB3 (waiting for the user);
- 2) shall start timer TFB1 (max duration); and

3) shall enter the "B4: ignoring same call ID" state.

[TS 24.379, clause 10.3.2.4.8]

When in the "B2: in-progress broadcast group call" state or "B4: ignoring same call ID" state, upon receiving GROUP CALL BROADCAST END message with the same Call identifier IE as the stored call identifier, the MCPTT client:

- 1) shall release media session;
- 2) shall stop timer TFB1 (max duration);
- 3) shall clear the stored call identifier;
- 4) shall stop floor control, if running; and
- 5) shall enter the "B1: start-stop" state.

[TS 24.379, clause 10.3.2.4.3]

When in the "B3: pending user action" state, upon indication from the MCPTT user to accept the incoming broadcast group call, the MCPTT client:

- 1) shall establish a media session based on the stored SDP body of the call;
- 2) shall start floor control as terminating floor participant as described specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 3) shall stop timer TFB3 (waiting for the user);
- 4) shall start timer TFB1 (max duration); and
- 5) shall enter the "B2: in-progress broadcast group call" state.

[TS 24.379, clause 10.3.2.4.6]

When in the "B2: in-progress broadcast group call" state, upon an indication from the terminating MCPTT user to release the in-progress broadcast group call, the MCPTT client:

- 1) shall release the media session;
- 2) shall stop floor control; and
- 3) shall enter the "B4: ignoring same call ID" state.

[TS 24.379, clause 10.3.2.4.10]

When in the "B4: ignoring same call ID" state, upon receiving GROUP CALL BROADCAST message and if the call identifier in GROUP CALL BROADCAST message matches with the stored call identifier the MCPTT client:

- 1) shall restart timer TFB1 (max duration); and
- 2) shall remain in "B4: ignoring same call ID" state.

[TS 24.379, clause 10.3.2.4.11]

When in the "B2: in-progress broadcast group call" state or "B4: ignoring same call ID" state, upon expiry of timer TFB1 (max duration) the MCPTT client:

- 1) shall release the media session;
- 2) shall clear the stored call identifier;
- 3) shall stop floor control, if running; and
- 4) shall enter the "B1: start-stop" state.

7.1.13.3 Test description

7.1.13.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server)
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The UE has performed the Generic Test Procedure for MCPTT UE registration as specified in TS 36.579-1 [2], subclause 5.4.2.
 - UE (MCPTT Client) is configured such that user acknowledgement is required upon a terminating call request reception
- TFB1 (max duration) set to 60 seconds ("/<x>/OffNetwork/Timers/TFB1" leaf node present in the UE initial configuration as specified in 3GPP TS 24.483 [13])
- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is switched-off.
- UE States at the end of the preamble
 - The UE is in state 'switched-off'.

7.1.13.3.2 Test procedure sequence

Table 7.1.13.3.2-1: Main Behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Power up the UE.	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).				
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). (NOTE 1)	-	-	-	-
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.10 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-many communication out of E-UTRA coverage / Announcing/Discoveree procedure for group member discovery / One-to-many communication'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
3	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST (NOTE 2)	<	GROUP CALL BROADCAST	-	-
4	Check: Does the UE (MCPTT Client) enter the "B3: pending user action" state and notifies the MCPTT User of an incoming broadcast call? (NOTE 3).	-	-	1	Р
5	Make the UE (MCPTT Client) reject the incoming off-network broadcast call (NOTE 1), (NOTE 4)	-	-	-	-
6	Void	-	-	-	-
7	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST with the same Call identifier as used in step 3	<	GROUP CALL BROADCAST	-	-
8	Check: Does the UE (MCPTT Client) notify the MCPTT User in the next 60 seconds of an incoming broadcast call? (NOTE 3)	-	-	2	F
9	Wait 60 seconds (TFB1 (max duration))	-	-	-	-
10	Void	-	-	3	Р
11	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST with a different Call identifier as used in step 3	<	GROUP CALL BROADCAST	-	-
12	Check: Does the UE (MCPTT Client) notify the MCPTT User of an incoming broadcast call? (NOTE 3)	-	-	1	Р
13	Make the UE (MCPTT Client) accept the incoming off-network broadcast call (NOTE 1), (NOTE 5)	-	-	-	-
14	Void	-	-	4	Р
15	Void	-	-	-	-
16	Void	-	-	-	-
17	SS-UE1 (MCPTT client) sends a GROUP CALL BROADCAST END (NOTE 6)	<	GROUP CALL BROADCAST END	-	-
18	Void	-	-	3	Р

NOTE 1:	This is expected to be done via a suitable implementation dependent MMI.
NOTE 2:	Timer TFB3 (waiting for the user) is started by the MCPTT Client upon the receiving of the GROUP CALL
	BROADCAST message. Timer TFB3 (waiting for the user)=20s, as defined in TS 36.579-1 [2], Table 5.5.8.1-
	1. At the expire of TFB3 (waiting for the user), the MCPTT Client will terminate the incoming call notification.
NOTE 3:	Notification to the MCPTT User that there is an incoming call requiring user approval or rejection is expected
	to be done via a suitable implementation dependent MMI
NOTE 4:	If the MCPTT User does not perform an action before timer TFB3 (waiting for the user) expires, then, the
	MCPTT Client will terminate the incoming call notification. Timer TFB1 (max duration) is started upon the
	MCPTT User rejecting the terminating call. Timer TFB1 (max duration)=60s, as defined in the Pre-test
	conditions. The MCPTT Client stops timer TFB3 (waiting for the user) upon rejecting the call. If during test
	execution it is found that the specified timer(s) value(s) are not large enough, then new value(s) need to be
	specified.
NOTE 5:	Timer TFB1 (max duration) is started upon the MCPTT User accepting the terminating call. Timer TFB1 (max
	duration)=60s, as defined in the Pre-test conditions. The MCPTT Client stops timer TFB3 (waiting for the
	user).
NOTE 6:	The MCPTT Client stops stop timer TFB1 (max duration).

7.1.13.3.3 Specific message contents

Table 7.1.13.3.3-1: GROUP CALL BROADCAST (steps 7, 11, Table 7.1.13.3.2-1)

Derivation Path: TS 36.579-1 [2], Table 5.5.5.6.1-1			
Information Element	Value/remark	Comment	Condition
Call identifier	Use the same Call identifier as used in the GROUP CALL BROADCAST message sent in step 2		

7.2 Off-network Private Calls

7.2.1 Off-network / Private Call / On-demand / Automatic Commencement Mode / No Response to Private Call Setup Request / Private call setup success / With Floor Control / Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Originated (CO)

7.2.1.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement in off-network environment, and, the UE is in an off-network environment } ensure that {

when { the MCPTT User requests the establishment of an MCPTT private call, on-demand Automatic Commencement Mode }

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement in off-network environment, and, the UE is in an off-network environment, and, UE (MCPTT Client) having sent a PRIVATE CALL SETUP REQUEST message requesting establishment of a private call } ensure that {

when { the UE (MCPTT Client) does not receive response to the request until the timer TFP1
(private call request retransmission) expires }

then { UE (MCPTT Client) retransmits the PRIVATE CALL SETUP REQUEST message requesting private call if the counter CFP1 (private call request retransmission) has not reached its max value and

3GPP TS 36.579-2 version 14.3.0 Release 14

516

increments the counter CFP1 with one, and, stops re-transmitting if the counter CFP1 (private call request retransmission) has reached its max value } }

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement in off-network environment, and, the UE is in an off-network environment, and, UE (MCPTT Client) having sent a PRIVATE CALL SETUP REQUEST message requesting establishment of a private call } ensure that { when { the UE (MCPTT Client) receives a PRIVATE CALL ACCEPT message } then { UE (MCPTT Client) transmits a PRIVATE CALL ACCEPT ACK message and considers the call as being established } } (4)with { UE (MCPTT Client) having established an MCPTT private call in off-network environment } ensure that { when { the MCPTT User engages in communication with the invited MCPTT User } then { UE (MCPTT Client) respects the floor control procedures in off-network environment imposed by Client having the floor (Floor request/grant/release/deny) } } (5)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment } ensure that {

when $\{$ the MCPTT User wants to upgrade the ongoing MCPTT private call to an MCPTT emergency private call }

then { UE (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST message requesting private emergency call on-demand Automatic Commencement Mode, and, after receiving a PRIVATE CALL ACCEPT message the UE (MCPTT Client) sends a PRIVATE CALL ACCEPT ACK message and considers the emergency call as being established }

(6)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment, and, having successfully upgraded it to an MCPTT Private Emergency call } ensure that {

when { the MCPTT User wants to downgrade the ongoing MCPTT private emergency call to a normal MCPTT private call }

then { UE (MCPTT Client) sends a PRIVATE CALL EMERGENCY CANCEL message, and, after receiving a PRIVATE CALL EMERGENCY CANCEL ACK message, the UE (MCPTT Client) considers the call downgraded to a Private normal call } }

(7)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment } ensure that {

when { the MCPTT User wants to terminate the ongoing MCPTT private call }

then { UE (MCPTT Client) sends a PRIVATE CALL RELEASE request and after receiving a PRIVATE CALL RELEASE ACK messages, leaves the MCPTT session } }

7.2.1.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.2.1.1.1, 11.2.1.1.2, 11.2.2.4.2.1, 11.2.2.4.2.2, 11.2.2.4.2.4, 11.2.2.4.2.8, 11.2.2.4.5.7, TS 24.380 clauses 7.1, 7.2.3.2.2, 7.2.3.5.2, 7.2.3.4.2, 7.2.3.5.4, 7.2.3.5.5, 7.2.3.4.3, 7.2.3.3.2, 7.2.3.3.5, 7.2.3.7.2, 11.2.3.4.5.1, 11.2.3.4.6.1, 11.2.3.4.6.3, 11.2.2.4.5.1, 11.2.2.4.5.5. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.2.1.1.1]

In order to participate in a private call, the MCPTT client:

1) shall send the MONP message as a UDP message to the local IP address of the MCPTT user, on UDP port TBD, with an IP time-to-live set to 255; and

Editor's note [CT1#95, C1-160392]: Port number for the message is FFS.

2) shall treat UDP messages received on the port TBD as received MONP messages.

NOTE: An MCPTT client that supports IPv6 is supposed to listen to the IPv6 addresses.

[TS 24.379, clause 11.2.1.1.2]

For an off-network MCPTT session, only MCPTT speech is used.

One off-network MCPTT session includes one media-floor control entity.

The MCPTT client shall generate an SDP body for a private call in accordance with rules and procedures of IETF RFC 4566 [12] and IETF RFC 3264 [44].

The MCPTT client:

- 1) shall include in the session-level section:
 - a) the "o=" field with the <username> portion set to a dash;
 - b) the "s=" field with the <session name> portion set to a dash; and
 - c) the "c=" field with the <nettype> portion set to "IN", the <addrtype> portion set to the IP version of the unicast IP address of the MCPTT client and the <connection-address> portion set to the unicast IP address of the MCPTT client;
- 2) shall include the media-level section for MCPTT speech consisting of:
 - a) the "m=" field with the <media> portion set to "audio", the <port> portion set to a port number for MCPTT speech of the MCPTT group, the <proto> field set to "RTP/AVP" and <fmt> portion set indicating RTP payload type numbers;
 - b) the "i=" field with the <session description> portion set to "speech";
 - c) the "a=fmtp:" attribute(s), the "a=rtpmap:" attribute(s) or both, indicating the codec(s) and media parameters of the MCPTT speech; and
 - d) the "a=rtcp:" attribute indicating port number to be used for RTCP at the MCPTT client selected according to the rules and procedures of IETF RFC 3605 [13], if the media steam uses other than the default IP address;
- 3) shall include the media-level section for media-floor control entity consisting of:
 - a) an "m=" line, with the <media> portion set to "application", the <port> portion set to a port number for media-floor control entity of the MCPTT group, the <proto> field set to "udp" and <fmt> portion set to "MCPTT"; and
 - b) the "a=fmtp:MCPTT" attribute indicating the parameters of the media-floor control entity as specified 3GPP TS 24.380 [5]; and
- 4) shall include the MIKEY-SAKKE I_MESSAGE, if generated by the MCPTT client, in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 11.2.2.4.2.1]

When in the "P0: start-stop" state or "P1: ignoring same call id", upon an indication from MCPTT User to initiate a private call and the value of "/<x>//common/PrivateCall/Authorised" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true", the MCPTT client:

- 1) shall generate and store the call identifier as a random number uniformly distributed between (0, 65536);
- 2) shall store own MCPTT user ID as caller ID;
- 3) shall store MCPTT user ID of the callee as callee ID;
- 4) shall store "AUTOMATIC COMMENCEMENT MODE" as commencement mode, if requested and the value of "/<x>/<x>/Common/PrivateCall/AutoCommence" leaf node present in the user profile as specified in

3GPP TS 24.383 [45] is set to "true". Otherwise if the value of "/<x>/<x>/Common/PrivateCall/ManualCommence" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true", store "MANUAL COMMENCEMENT MODE" as commencement mode;

- 5) shall create a call type control state machine as described in subclause 11.2.3.2;
- 6) if an end-to-end security context needs to be established then:
 - a) shall use keying material provided by the key management server to generate a PCK as described in 3GPP TS 33.179 [46];
 - b) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0001" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.179 [46];
 - c) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID of the invited user and a time related parameter as described in 3GPP TS 33.179 [46];
 - d) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.179 [46];
 - e) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - f) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.179 [46] and;
 - g) shall store the MIKEY-SAKKE I_MESSAGE for later inclusion in an SDP body;
- 7) may store current user location as user location;
- 8) shall generate and store offer SDP, as defined in subclause 11.2.1.1.2;
- 9) shall generate a PRIVATE CALL SETUP REQUEST message as specified in subclause 15.1.5. In the PRIVATE CALL SETUP REQUEST message, the MCPTT client:
 - a) shall set the Call identifier IE with the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID;
 - d) shall set the Commencement mode IE with the stored commencement mode;
 - e) shall set the Call type IE with the stored current call type associated with the call type control state machine;
 - f) shall set the SDP offer IE with the stored offer SDP; and
 - g) may set the User location IE with the stored user location if the stored current call type associated with the call type control state machine is "EMERGENCY PRIVATE CALL".
- 10) shall send the PRIVATE CALL SETUP REQUEST message towards other MCPTT client according to rules and procedures as specified in subclause 11.2.1.1.1;
- 11) shall initialize the counter CFP1 (private call request retransmission) with the value set to 1;
- 12) shall start timer TFP1 (private call request retransmission); and
- 13) shall enter the "P2: waiting for call response" state.
- [TS 24.379, clause 11.2.2.4.2.2]

When in the "P2: waiting for call response" state, upon expiry of timer TFP1 (private call request retransmission), the MCPTT client:

1) may update the stored user location with current user location;

- 2) shall increment the value of counter CFP1 (private call request retransmission) by 1;
- 3) shall generate a PRIVATE CALL SETUP REQUEST message as specified in subclause 15.1.5. In the PRIVATE CALL SETUP REQUEST message, the MCPTT client:
 - a) shall set the Call identifier IE with the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID;
 - d) shall set the Commencement mode IE with the stored commencement mode;
 - e) shall set the Call type IE with the stored current call type associated with the call type control state machine;
 - f) shall set the SDP offer IE with the stored offer SDP; and
 - g) may set the User location IE with stored user location if the stored current call type is "EMERGENCY PRIVATE CALL" associated with the call type control state machine.
- shall send the PRIVATE CALL SETUP REQUEST message towards other MCPTT client according to rules and procedures as specified in subclause 11.2.1.1.1;
- 5) shall start timer TFP1 (private call request retransmission); and
- 6) shall remain in the "P2: waiting for call response" state.

[TS 24.379, clause 11.2.2.4.2.4]

In the "P2: waiting for call response" state, when timer TFP1 (private call request retransmission) expires and the value of the counter CFP1 (private call request retransmission) is equal to the upper limit and the stored commencement mode is "AUTOMATIC COMMENCEMENT MODE", the MCPTT client:

- 1) shall start timer TFP7 (waiting for any message with same call identifier); and
- 2) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.2.8]

When in the "P2: waiting for call response" state, upon receiving a PRIVATE CALL ACCEPT message response to PRIVATE CALL SETUP REQUEST message with the same call identifier, the MCPTT client:

- 1) shall store the SDP answer IE received in the PRIVATE CALL ACCEPT message as answer SDP;
- 2) shall generate a PRIVATE CALL ACCEPT ACK message as specified in subclause 15.1.11:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID.
- shall send the PRIVATE CALL ACCEPT ACK message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.;
- 4) shall stop timer TFP1 (call setup retransmission), if running;
- 5) shall stop timer TFP2 (waiting for call response message), if running;
- 6) shall establish a media session based on the SDP body of the stored answer SDP;
- 7) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 8) shall start timer TFP5 (max duration); and
- 9) shall enter the "P4: part of ongoing call" state.

[TS 24.379, clause 11.2.2.4.5.7]

When in the "P1: ignoring same call id" state, upon expiry of timer TFP7 (waiting for any message with same call identifier) the MCPTT client:

- 1) shall clear the stored call identifier; and
- 2) shall enter the "P0: start-stop" state.

[TS 24.380, clause 7.1]

In off-network, floor control is performed using floor control messages among the MCPTT clients without a centralized floor arbitrator. When off-network, if a floor control session is active, the floor arbitrator and the floor participant are co-located in the MCPTT client (see 3GPP TS 23.179 [5]). During a floor control session the MCPTT client currently speaking serves as the temporary floor arbitrator. All other MCPTT clients in the call play the role of floor participant. When the floor arbitrator grants the floor to another MCPTT client, that new MCPTT client, when starts to send media, becomes the new floor arbitrator and the former (the MCPTT client which granted the floor) becomes a floor participant.

...

It is assumed that the MCPTT user presses the PTT for requesting talk permission and it keeps it pressed until the request is resolved. If queuing of floor requests is not supported, this request is either granted or rejected or no answer is received. If the request is granted the user is notified with talk permission tone (or equivalent) and the user continues to press the PTT until it finishes the talk burst. If the request is rejected or no answer is received the user is notified and releases the PTT button.

[TS 24.380, clause 7.2.3.2.2]

When an MCPTT call is established with session announcement including an explicit floor request, the originating floor participant:

- 1. shall create an instance of a floor participant state transition diagram for basic operation state machine;
- 2. shall send Floor Granted message towards other floor participants. The Floor Granted message:
 - a. shall include the granted priority in the Floor priority field;
 - b. shall include the MCPTT user's own MCPTT ID in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 3. shall set the stored SSRC of the current floor arbitrator to its own SSRC; and
- 4. shall enter 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.2]

Upon receiving encoded media from the user or if encoded media is already buffered the floor participant:

- 1. shall start timer T206 (Stop talking warning), if not running;
- 2. shall request the MCPTT client to start sending RTP media packets towards other MCPTT clients; and
- 3. shall remain in 'O: has permission' state.

[TS 24.380, clause 7.2.3.4.2]

If the floor participant receives an indication from the MCPTT user that the MCPTT user wants to send media, the floor participant:

- 1. shall send the Floor Request message to other clients. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the User ID field; and

- c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall start timer T201 (Floor Request); and
- 4. shall enter 'O: pending request' state.

[TS 24.380, clause 7.2.3.5.4]

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, in a session where:

- 1. the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "false"; or
- the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" but the F-bit in the Floor Indicator field is set to '0' (i.e. indicating that queuing of floor requests is not supported) or the Floor Indicator field is not included in the Floor Request message;

then the floor participant:

- 1. shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #1 (Another MCPTT client has permission);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 2. shall remain in 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.5]

Upon receiving an indication from the MCPTT user to release permission to send RTP media, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall send a Floor Release message towards other floor participants, if no queued requests exist: The Floor Release message:
 - a. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - b. if the session is not initiated as a broadcast group call with the B-bit set to '1' (Broadcast group call), shall include a Floor Indicator field set to '0' (normal call);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the current arbitrator; and
- 6. shall enter 'O: silence' state.

[TS 24.380, clause 7.2.3.4.3]

When a Floor Release message is received and if the SSRC in the Floor Release message matches with the stored SSRC of the current arbitrator or with the stored SSRC of the candidate arbitrator, the floor participant:

- 1. may provide floor idle notification to the MCPTT user.
- 2. shall request the MCPTT client to stop rendering received RTP media packets;
- 3. shall stop timer T203 (End of RTP media);

- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. shall clear the stored SSRC of the current arbitrator; and
- 7. shall enter 'O: silence' state;

[TS 24.380, clause 7.2.3.3.2]

If the floor participant receives an indication from the MCPTT user to send media, the floor participant:

- 1. shall send the Floor Request message to other floor participants. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the <User ID> value of the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T201 (Floor Request); and
- 5. shall enter 'O: pending request' state.

[TS 24.380, clause 7.2.3.3.5]

The transition is used in private call only. When a Floor Request message is received, the floor participant:

- 1. shall send a Floor Granted message toward the other floor participant. The Floor Granted message:
 - a. shall include the MCPTT ID of the Floor Request message received in User ID value of the User ID field;
 - b. shall include the SSRC of the Floor Request message received in the SSRC of floor control server field;
 - c. shall include the max duration as configured in the MCPTT client in the OffNetwork/MaxDuration parameter in the <Duration> value of the Duration field; and
 - d. shall include the priority of the Floor Request message received in the <Floor Priority> value of the Floor Priority field;
- 2. shall stop timer T230 (Inactivity);
- 3. shall start timer T205 (Floor Granted); and
- 4. shall enter 'O: pending granted' state.

[TS 24.380, clause 7.2.3.7.2]

Upon receiving the RTP media and the SSRC of RTP media packet matches with the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to render the received RTP media packets;
- 2. shall stop timer T205 (Floor Granted), if running;
- 3. shall stop timer T233 (Pending user action), if running;
- 4. shall start timer T203 (End of RTP media); and
- 5. shall enter 'O: has no permission' state.

[TS 24.379, clause 11.2.3.4.5.1]

When in the "Q1: in-progress private call" state, upon an indication from MCPTT User to upgrade the call to emergency and the value of " $/\langle x \rangle /\langle x \rangle /$ Common/PrivateCall/EmergencyCall/Authorised" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true", the MCPTT client:

- 1) shall generate and store emergency offer SDP as defined in subclause 11.2.1.1.2;
- 2) shall update caller ID as own MCPTT user ID;
- 3) shall update callee ID as MCPTT user ID of the other user;
- 4) shall store current user location as user location;
- 5) shall set the stored current call type to "EMERGENCY PRIVATE CALL";
- 6) shall generate a PRIVATE CALL SETUP REQUEST message as specified in subclause 15.1.5. In the PRIVATE SETUP REQUEST message, the MCPTT client:
 - a) shall set the Call identifier IE with the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID;
 - d) shall set the Commencement mode IE as "AUTOMATIC COMMENCEMENT MODE";
 - e) shall set the Call type IE to the stored current call type;
 - f) shall set the SDP offer IE with emergency offer SDP; and
 - g) may set the User location IE with user location.
- shall set the ProSe per-packet priority to the value corresponding to MCPTT off-network emergency private call as described in 3GPP TS 24.383 [45];
- shall send the PRIVATE CALL SETUP REQUEST message towards other MCPTT client according to rules and procedures as specified in subclause 11.2.1.1.1;
- 9) shall initialize the counter CFP1 (private call request retransmission) with value set to 1;
- 10) shall start timer TFP1 (private call request retransmission); and
- 11) shall enter the "Q2: in-progress emergency private call" state.

[TS 24.379, clause 11.2.3.4.6.1]

When in the "Q2: in-progress emergency private call" state, upon an indication from:

1) the caller of the emergency private call; or

•••

to cancel the emergency private call, the MCPTT client:

- shall generate a PRIVATE CALL EMERGENCY CANCEL message as specified in subclause 15.1.12. In the PRIVATE CALL EMERGENCY CANCEL message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller; and
 - c) shall set the MCPTT user ID of the callee IE with the stored callee.
- 2) shall send the PRIVATE CALL EMERGENCY CANCEL message according to rules and procedures as specified in subclause 11.2.1.1;
- 3) shall stop TFP8 (implicit downgrade) timer;
- 4) shall initialize the counter CFP6 (emergency private call cancel retransmission) with the value set to 1;

- 5) shall start timer TFP6 (emergency private call cancel retransmission);
- 6) shall set the stored current call type to "PRIVATE CALL"; and
- 7) shall enter the "Q1: in-progress private call" state.

[TS 24.379, clause 11.2.3.4.6.3]

When in the "Q1: in-progress private call" state, upon receiving a PRIVATE CALL EMERGENCY CANCEL ACK message response to PRIVATE CALL EMERGENCY CANCEL message with the same "call identifier", the MCPTT client:

- 1) shall stop timer TFP6 (emergency private call cancel retransmission), if running;
- 2) shall establish a media session based on the SDP body of the stored answer SDP;
- 3) shall set the ProSe per-packet priority to the value corresponding to MCPTT off-network private call as described in 3GPP TS 24.383 [45]; and
- 4) shall remain in the "Q1: in-progress private call" state.

[TS 24.379, clause 11.2.2.4.5.1]

When in the "P4: part of ongoing call" state, upon an indication from MCPTT User to release a private call, the MCPTT client:

- 1) shall generate a PRIVATE CALL RELEASE message as specified in subclause 15.1.9. In the PRIVATE CALL RELEASE message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with stored caller ID; and
 - c) shall set the MCPTT user ID of the callee IE with stored callee ID.
- 2) shall send the PRIVATE CALL RELEASE message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall initialize the counter CFP3 (private call release retransmission) with the value set to 1;
- 4) shall start timer TFP3 (private call release retransmission); and
- 5) shall enter the "P3: waiting for release response" state.

[TS 24.379, clause 11.2.2.4.5.5]

When in the "P3: waiting for release response" state, upon receiving a PRIVATE CALL RELEASE ACK to PRIVATE CALL RELEASE message, the MCPTT client:

- 1) shall stop timer TFP3 (private call release retransmission), if running;
- 2) shall terminate the media session;
- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall release the call type control state machine; and
- 5) shall enter the "P1: ignoring same call id" state.
- 7.2.1.3 Test description
- 7.2.1.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)

- For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server) in the Preamble
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2..

IUT:

- UE (MCPTT client)
 - The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is Switched OFF (state 1) according to TS 36.508 [24].

7.2.1.3.2 Test procedure sequence

Table 7.2.1.3.2-1: Main behaviour

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	Power up the UE.	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).				
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). NOTE: This is expected to be done via a	-	-	-	-
3	suitable implementation dependent MMI. Make the UE (MCPTT User) request the establishment of an MCPTT private call, on- demand Automatic Commencement Mode, with Floor Control. NOTE: This is expected to be done via a	-	-	-	-
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.5 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- establishment'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
-	EXCEPTION: Steps 4-6 are repeated CFP1=3 times (CFP1 defined in 36.579-1 [2] Table 5.5.8.1-1)	-	-	-	-
4	Check: Does the UE (MCPTT client) send a PRIVATE CALL SETUP REQUEST, Commencement mode set to AUTOMATIC COMMENCEMENT MODE, Call type set to Private Call? NOTE: It is expected that the UE - shall initialize the counter CFP1 (private call request retransmission) with the value set to 1 on the first transmission, and, increase it by 1 with each re-transmission. - shall start timer TFP1 (private call request retransmission)	>	PRIVATE CALL SETUP REQUEST	1,2	Ρ
5	Start TFP1 (private call request retransmission) 2000 milliseconds as defined in 36.579-1 [2] Table 5.5.8.1-1.	-	-	-	-
6	TFP1 expires.	-	-	-	-
13	Start TFP7 (waiting for any message with same call identifier) 6 sec (value chosen to facilitate the test sequence in steps 14-16) and defined in 36.579-1 [2] Table 5.5.8.1-1. NOTE: TFP7 is expected to be started after TFP1 expires and CFP1 is equal to the upper limit. NOTE: It is expected that the UE considers at this moment of time the Private call establishment attempt as failed	-	-	-	-
14	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT message,	<	PRIVATE CALL ACCEPT	-	-
-	EXCEPTION: Steps 15a1-15b1 depend on UE complience; the "lower case letter" identifies a step sequence that takes place depending on UE behaviour.	-	-	-	-
15a 1	Check: Does the UE (MCPTT client) send a PRIVATE CALL ACCEPT ACK?	>	PRIVATE CALL ACCEPT ACK	2	F

15b	Check: Does the TFP7 (waiting for any	-	-	2	Р
1	message with same call identifier) expire? Void.	-	-	-	-
-	EXCEPTION: UE releases the E-UTRA	_	-	_	-
	connection. The E-UTRA/EPC actions which				
	are related to the MCPTT call release are				
	described in TS 36.579-1 [2], subclause 5.4.8,				
	'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	release by the UE'.				
17	Make the UE (MCPTT User) request the	-	-	-	-
	establishment of an MCPTT private call, on-				
	demand Automatic Commencement Mode,				
	with Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI. EXCEPTION: The E-UTRA/EPC actions which	_	-	_	
-	are related to the MCPTT call establishment	-	-	-	-
	are described in TS 36.579-1 [2], subclause				
	5.4.5 'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
1	communication out of E-UTRA coverage-				
1	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
18	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL SETUP	1	Р
	PRIVATE CALL SETUP REQUEST,		REQUEST		
	Commencement mode set to AUTOMATIC				
	COMMENCEMENT MODE, Call type set to				
	Private Call?				
19	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT message,	<	PRIVATE CALL ACCEPT	-	-
20	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL ACCEPT ACK	3	Р
20	PRIVATE CALL ACCEPT ACK?	-		Ŭ	
21	Make the UE (MCPTT User) press the PTT	-	-	-	-
	button requesting permission to talk.				
	NOTE 1: Depending on UE implementation the				
	PTT button may already been pressed in step				
	17.				
	NOTE 2: The UE (MCPTT User) shall keep the				
	button pressed until otherwise written.			4	
22	Check: Does the UE (MCPTT client) send	>	Floor Granted	4	Р
	Floor Granted message, Floor Indicator set to Normal call?				
23	SS-UE1 (MCPTT Client) sends a Floor	<	Floor Request	-	
23	Request message	<u>_</u>			-
24	Check: Does the UE (MCPTT client) send	>	Floor Deny	4	Р
_ <u>∠</u> →	Floor Deny message?				I
25	Make the UE (MCPTT User) release the PTT	-	-	-	-
	button.				
26	Check: Does the UE (MCPTT client) send	>	Floor Release	4	Р
	Floor Release message?				
27	SS-UE1 (MCPTT Client) sends a Floor	<	Floor Request	-	-
	Request message				
28	Check: Does the UE (MCPTT client) send	>	Floor Granted	4	Р
	Floor Granted message?				
29	SS continuously sends RTP media until step	-	-	-	-
1	34 below.				
	NOTE: The UE (Client) needs to receive RTP				
1	media because otherwise the sending of Floor				
20	Deny in step 32 will not be a valid behaviour.			+	
30	Make the UE (MCPTT User) press the PTT button requesting permission to talk.	-	-	-	-
1	NOTE: The UE (MCPTT User) shall keep the				
1	button pressed until otherwise written.				
31	Check: Does the UE (MCPTT client) send	>	Floor Request	4	Р
	Floor Request message?				
	· · · · · · · · · · · · · · · · · · ·	•	•	• •	

32	SS-UE1 (MCPTT Client) sends a Floor Deny message.	<	Floor Deny	-	-
33	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
34	SS-UE1 (MCPTT Client) sends a Floor Release message.	<	Floor Release	-	-
35	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the	-	-	-	-
	button pressed until otherwise written.				
36	Check: Does the UE (MCPTT client) send Floor Request message?	>	Floor Request	4	Р
37	SS-UE1 (MCPTT Client) sends a Floor Granted message.	<	Floor Granted	-	-
38	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
39	Check: Does the UE (MCPTT client) send Floor Release message?	>	Floor Release	4	Р
40	Make the UE (MCPTT User) request upgrade of the ongoing call to Emergency call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
41	Check: Does the UE (MCPTT client) send PRIVATE CALL SETUP REQUEST message, Call type set to EMERGENCY PRIVATE CALL?	>	PRIVATE CALL SETUP REQUEST	6	Р
42	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT message.	<	PRIVATE CALL ACCEPT	-	-
43	Check: Does the UE (MCPTT client) send PRIVATE CALL ACCEPT ACK message?	>	PRIVATE CALL ACCEPT ACK	5	Р
44	Make the UE (MCPTT User) to press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
45	Check: Does the UE (MCPTT client) send Floor Request message?	>	Floor Request	5,4	Р
46	SS-UE1 (MCPTT Client) sends a Floor Granted message	<	Floor Granted	-	-
47	Make the UE (MCPTT User) to release the PTT button.	-	-	-	-
48	Check: Does the UE (MCPTT client) send Floor Release message?	>	Floor Release	5,4	Р
49	Make the UE (MCPTT User) request downgrade of the ongoing Emergency call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
50	Check: Does the UE (MCPTT client) send PRIVATE CALL EMERGENCY CANCEL message?	>	PRIVATE CALL EMERGENCY CANCEL	6	Р
51	SS-UE1 (MCPTT Client) sends a PRIVATE CALL EMERGENCY CANCEL ACK message.	<	PRIVATE CALL EMERGENCY CANCEL ACK	-	-
52	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
53	Check: Does the UE (MCPTT client) send Floor Request message?	>	Floor Request	6,4	Р
54	SS-UE1 (MCPTT Client) sends a Floor Granted message.	<	Floor Granted	-	-
55	Make the UE (MCPTT User) to release the PTT button.	-	-	-	-
56	Check: Does the UE (MCPTT client) send Floor Release message?	>	Floor Release	6,4	Р
57	Make the UE (MCPTT User) request termination of the MCPTT private call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-

58	Check: Does the UE (MCPTT client) send PRIVATE CALL RELEASE message?	>	PRIVATE CALL RELEASE	7	Р
59	SS-UE1 (MCPTT Client) sends a PRIVATE CALL RELEASE ACK message.	<	PRIVATE CALL RELEASE ACK	-	-
-	EXCEPTION: UE releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.8, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the UE'.	-	-	-	-

7.2.1.3.3 Specific message contents

Table 7.2.1.3.3-1: PRIVATE CALL SETUP REQUEST (Step 41 Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.8.1-1.			
Information Element	Value/remark	Comment	Condition
Call type	'00000110'B	EMERGENCY	
		PRIVATE CALL	
User location	Nor present or Any value		

Table 7.2.1.3.3-2: Floor Granted (Step 28, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
User ID				
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS		
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.1.3.3-2A: Floor Granted (Step 22, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
SSRC of granted floor participant	UE (MCPTT client) SSRC			
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.1.3.3-3: Floor Granted (Steps 37, 54, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Information Element	condition OFF-NETWORK. Value/remark	Comment	Condition
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.1.3.3-4: Floor Request (Steps 23, 27, Table 7.2.1.3.2-1)

Table 7.2.1.3.3-5: Floor Request (Step 31, 36, 53, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 7.2.1.3.3-6: Floor Deny (Step 24, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
User ID				
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS		
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.1.3.3-7: Floor Deny (Step 32, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 7.2.1.3.3-8: Floor Release (Steps 26, 39, 56, Table 7.2.1.3.2-1)

Table 7.2.1.3.3-9: Floor Release (Step 34, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition	OFF-NETWORK.		
Information Element	Value/remark	Comment	Condition
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.1.3.3-10: Floor Request (Step 45, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Table 7.2.1.3.3-11: Floor Granted (Step 46, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010100 0000000	Bit D=1 (Emergency call) bit F=1 (Queueing supported)	

Table 7.2.1.3.3-12: Floor Release (Step 48, Table 7.2.1.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.			
Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

7.2.2 Off-network / Private Call / On-demand / Automatic Commencement Mode / No Response to Private Call Setup Accept / Private call setup success / With Floor Control / Upgrade to Emergency Call / Cancellation of Emergency on User request / Client Terminated (CT)

7.2.2.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private and private emergency calls with automatic commencement, and, the UE is in an offnetwork environment }

ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT private call, ondemand Automatic Commencement Mode }

then { UE (MCPTT Client) sends a PRIVATE CALL ACCEPT message accepting the establishment of a
private call on-demand Automatic Commencement Mode }
}

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private and private emergency calls with automatic commencement, and, the UE is in an offnetwork environment, and, UE (MCPTT Client) having sent a PRIVATE CALL ACCEPT message accepting the establishment of a private call }

ensure that {

when { the UE (MCPTT Client) does not receive response from the calling Client until the timer
TFP4 (private call accept retransmission) expires }

then { UE (MCPTT Client) retransmits the PRIVATE CALL ACCEPT message if the counter CFP4
(private call accept retransmission) has not reached its max value and increments the counter CFP4
with one, and, stops re-transmitting if the counter CFP4 (private call accept retransmission) has
reached its max value }
}

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to receive private and private emergency calls with automatic commencement, and, the UE is in an offnetwork environment, and, UE (MCPTT Client) having sent a PRIVATE CALL ACCEPT message accepting the establishment of a private call }

ensure that {

when { the UE (MCPTT Client) receives a PRIVATE CALL ACCEPT ACK message }
 then { UE (MCPTT Client) considers the private call as established }
 }

(4)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment }
ensure that {
 when { the MCPTT User engages in communication with the inviting MCPTT User }
 then { UE (MCPTT Client) respects the floor control procedures in off-network environment
 imposed by Client having the floor (Floor request/grant/release/deny) }
 }
}

(5)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment } ensure that {

when { the UE (MCPTT Client) receives a request from the remote Client to upgrade the ongoing MCPTT private call to an MCPTT emergency private call }

then { UE (MCPTT Client) sends a PRIVATE CALL ACCEPT message accepting the upgrade, and, after
receiving a PRIVATE CALL ACCEPT ACK message, UE (MCPTT Client) considers the emergency private call
as established }
}

(6)

with { UE (MCPTT Client) having established an MCPTT private call, in off-network environment, and, having successfully upgraded it to an MCPTT Private Emergency call }

ensure that {
 when { the UE (MCPTT Client) receives a request from the remote Client to downgrade the ongoing
MCPTT private emergency call to a normal MCPTT private call }
 then { UE (MCPTT Client) sends a PRIVATE CALL EMERGENCY CANCEL ACK message, and, considers the
 call downgraded to a Private normal call }
 }

(7)

with { UE (MCPTT Client) having established an MCPTT private call in off-network environment } ensure that {

when { the MCPTT User receives a request from the remote Client to release the ongoing MCPTT
private call }
 then { UE (MCPTT Client) sends a PRIVATE CALL RELEASE ACK message and leaves the MCPTT session }

}

7.2.2.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.2.1.1, 11.2.1.1.2, 11.2.2.4.3.2, 11.2.2.4.3.3, 11.2.2.4.3.5, 11.2.2.4.3.4, TS 24.380 clauses 7.1, 7.2.3.4.2, 7.2.3.5.4, 7.2.3.5.5, 7.2.3.4.3, 7.2.3.3.2, 7.2.3.3.5, 7.2.3.5.2, 7.2.3.7.2, 11.2.3.4.5.6, 11.2.3.4.6.5, 11.2.2.4.5.4. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.2.1.1.1]

In order to participate in a private call, the MCPTT client:

1) shall send the MONP message as a UDP message to the local IP address of the MCPTT user, on UDP port TBD, with an IP time-to-live set to 255; and

Editor's note [CT1#95, C1-160392]: Port number for the message is FFS.

2) shall treat UDP messages received on the port TBD as received MONP messages.

NOTE: An MCPTT client that supports IPv6 is supposed to listen to the IPv6 addresses.

[TS 24.379, clause 11.2.1.1.2]

For an off-network MCPTT session, only MCPTT speech is used.

One off-network MCPTT session includes one media-floor control entity.

The MCPTT client shall generate an SDP body for a private call in accordance with rules and procedures of IETF RFC 4566 [12] and IETF RFC 3264 [44].

The MCPTT client:

- 1) shall include in the session-level section:
 - a) the "o=" field with the <username> portion set to a dash;
 - b) the "s=" field with the <session name> portion set to a dash; and
 - c) the "c=" field with the <nettype> portion set to "IN", the <addrtype> portion set to the IP version of the unicast IP address of the MCPTT client and the <connection-address> portion set to the unicast IP address of the MCPTT client;
- 2) shall include the media-level section for MCPTT speech consisting of:
 - a) the "m=" field with the <media> portion set to "audio", the <port> portion set to a port number for MCPTT speech of the MCPTT group, the <proto> field set to "RTP/AVP" and <fmt> portion set indicating RTP payload type numbers;
 - b) the "i=" field with the <session description> portion set to "speech";
 - c) the "a=fmtp:" attribute(s), the "a=rtpmap:" attribute(s) or both, indicating the codec(s) and media parameters of the MCPTT speech; and

- d) the "a=rtcp:" attribute indicating port number to be used for RTCP at the MCPTT client selected according to the rules and procedures of IETF RFC 3605 [13], if the media steam uses other than the default IP address;
- 3) shall include the media-level section for media-floor control entity consisting of:
 - a) an "m=" line, with the <media> portion set to "application", the <port> portion set to a port number for media-floor control entity of the MCPTT group, the <proto> field set to "udp" and <fmt> portion set to "MCPTT"; and
 - b) the "a=fmtp:MCPTT" attribute indicating the parameters of the media-floor control entity as specified 3GPP TS 24.380 [5]; and
- 4) shall include the MIKEY-SAKKE I_MESSAGE, if generated by the MCPTT client, in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 11.2.2.4.3.2]

When in the "P0: start-stop" or "P1: ignoring same call id" state, upon receiving a PRIVATE CALL SETUP REQUEST message with Commencement mode IE set to "AUTOMATIC COMMENCEMENT MODE" and Call identifier IE different than stored call identifier and media session declared in SDP body of PRIVATE CALL SETUP REQUEST message can be established, the MCPTT client:

- 1) shall store the Call identifier IE in the received message as call identifier;
- 2) shall create the call type control state machine as described in subclause 11.2.3.2;
- 3) shall store the MCPTT user ID of the caller IE in the received PRIVATE CALL SETUP REQUEST message as caller ID;
- 4) shall store own MCPTT user ID as callee ID;
- 5) if the SDP offer contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT user from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];

•••

- e) if the validation of the signature was successful:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46];
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
 - iii) shall generate and store answer SDP based on received SDP offer IE in PRIVATE CALL SETUP REQUEST message, as defined in subclause 11.2.1.1.2;
 - iv) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7. In the PRIVATE CALL ACCEPT message, the MCPTT client:
 - A) shall set the Call identifier IE to the stored call identifier; and
 - B) shall set the MCPTT user ID of the caller IE with stored caller ID.
 - C) shall set the MCPTT user ID of the callee IE with stored callee ID; and
 - D) shall set the SDP answer IE with the stored answer SDP;
 - v) shall send PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;

- vi) shall establish a media session based on the SDP body of the stored answer SDP;
- vii)shall initialize the counter CFP4 with value set to 1;
- viii) shall start timer TFP4 (private call accept retransmission); and
- ix) shall enter the "P5: pending" state; and
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.
- 6) if the SDP offer does not contain an "a=key-mgmt" attribute, the MCPTT client:
 - a) shall generate and store answer SDP based on received SDP offer IE in PRIVATE CALL SETUP REQUEST message, as defined in subclause 11.2.1.1.2;
 - b) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7:
 - i) shall set the Call identifier IE to the stored call identifier;
 - ii) shall set the MCPTT user ID of the caller IE with stored caller ID.
 - iii) shall set the MCPTT user ID of the callee IE with stored callee ID; and
 - iv) shall set the SDP answer IE with the stored answer SDP;
 - c) shall send PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
 - d) shall establish a media session based on the SDP body of the stored answer SDP;
 - e) shall initialize the counter CFP4 with value set to 1;
 - f) shall start timer TFP4 (private call accept retransmission); and
 - g) shall enter the "P5: pending" state.

[TS 24.379, clause 11.2.2.4.3.3]

When in the "P5: pending" state, upon expiry of timer TFP4 (private call accept retransmission), the MCPTT client:

- 1) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7. In the PRIVATE CALL ACCEPT message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID; and
 - d) shall set the SDP answer IE with the stored answer SDP;
- 2) shall send PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall increment the value of the counter CFP4 (private call accept retransmission) by 1;
- 4) shall start timer TFP4 (private call accept retransmission); and
- 5) shall remain in the "P5: pending" state.
- [TS 24.379, clause 11.2.2.4.3.5]

In the "P5: pending" state, when timer TFP4 (private call accept retransmission) expires and the value of the counter CFP4 (private call accept retransmission) is equal to the upper limit, the MCPTT client:

1) shall start timer TFP7 (waiting for any message with same call identifier);

- 2) shall release the call type control state machine; and
- 3) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.3.4]

When in the "P5: pending" state, upon receiving a PRIVATE CALL ACCEPT ACK message or RTP media from originating user, the MCPTT client:

- 1) shall stop timer TFP4(private call accept retransmission);
- 2) shall start floor control as terminating MCPTT client as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 3) shall start timer TFP5 (max duration); and
- 4) shall enter the "P4: part of ongoing call" state.

[TS 24.379, clause 11.2.2.4.5.7]

When in the "P1: ignoring same call id" state, upon expiry of timer TFP7 (waiting for any message with same call identifier) the MCPTT client:

- 1) shall clear the stored call identifier; and
- 2) shall enter the "P0: start-stop" state.

[TS 24.380, clause 7.1]

In off-network, floor control is performed using floor control messages among the MCPTT clients without a centralized floor arbitrator. When off-network, if a floor control session is active, the floor arbitrator and the floor participant are co-located in the MCPTT client (see 3GPP TS 23.179 [5]). During a floor control session the MCPTT client currently speaking serves as the temporary floor arbitrator. All other MCPTT clients in the call play the role of floor participant. When the floor arbitrator grants the floor to another MCPTT client, that new MCPTT client, when starts to send media, becomes the new floor arbitrator and the former (the MCPTT client which granted the floor) becomes a floor participant.

•••

It is assumed that the MCPTT user presses the PTT for requesting talk permission and it keeps it pressed until the request is resolved. If queuing of floor requests is not supported, this request is either granted or rejected or no answer is received. If the request is granted the user is notified with talk permission tone (or equivalent) and the user continues to press the PTT until it finishes the talk burst. If the request is rejected or no answer is received the user is notified and releases the PTT button.

[TS 24.380, clause 7.2.3.4.2]

If the floor participant receives an indication from the MCPTT user that the MCPTT user wants to send media, the floor participant:

- 1. shall send the Floor Request message to other clients. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall start timer T201 (Floor Request); and
- 4. shall enter 'O: pending request' state.

[TS 24.380, clause 7.2.3.5.4]

Upon receiving a Floor Request message which is not pre-emptive as determined by subclause 4.1.1.5, in a session where:

- 1. the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "false"; or
- the value of "/<x>/<x>/OffNetwork/QueueUsage" leaf node present in the group configuration as specified in 3GPP TS 24.383 [4] is set to "true" but the F-bit in the Floor Indicator field is set to '0' (i.e. indicating that queuing of floor requests is not supported) or the Floor Indicator field is not included in the Floor Request message;

then the floor participant:

- 1. shall send the Floor Deny message. The Floor Deny message:
 - a. shall include in the Reject Cause field the <Reject Cause> value cause #1 (Another MCPTT client has permission);
 - b. may include in the Reject Cause field an additional text string explaining the reason for rejecting the floor request in the <Reject Phrase> value; and
 - c. shall include the User ID field received in the Floor Request message; and
- 2. shall remain in 'O: has permission' state.

[TS 24.380, clause 7.2.3.5.5]

Upon receiving an indication from the MCPTT user to release permission to send RTP media, the floor participant:

- 1. shall stop timer T206 (Stop talking warning), if running;
- 2. shall stop timer T207 (Stop talking), if running;
- 3. shall send a Floor Release message towards other floor participants, if no queued requests exist: The Floor Release message:
 - a. shall include the MCPTT ID of the MCPTT user in the User ID field; and
 - b. if the session is not initiated as a broadcast group call with the B-bit set to '1' (Broadcast group call), shall include a Floor Indicator field set to '0' (normal call);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the current arbitrator; and
- 6. shall enter 'O: silence' state.

[TS 24.380, clause 7.2.3.4.3]

When a Floor Release message is received and if the SSRC in the Floor Release message matches with the stored SSRC of the current arbitrator or with the stored SSRC of the candidate arbitrator, the floor participant:

- 1. may provide floor idle notification to the MCPTT user.
- 2. shall request the MCPTT client to stop rendering received RTP media packets;
- 3. shall stop timer T203 (End of RTP media);
- 4. shall start timer T230 (Inactivity);
- 5. shall clear the stored SSRC of the candidate arbitrator;
- 6. shall clear the stored SSRC of the current arbitrator; and
- 7. shall enter 'O: silence' state;

[TS 24.380, clause 7.2.3.3.2]

If the floor participant receives an indication from the MCPTT user to send media, the floor participant:

- 1. shall send the Floor Request message to other floor participants. The Floor Request message:
 - a. if a priority different than the default floor priority is required, shall include the Floor Priority field with the requested priority in the <Floor Priority> element;
 - b. shall include the MCPTT ID of the MCPTT user in the <User ID> value of the User ID field; and
 - c. if the floor request is a broadcast group call, system call, emergency call or an imminent peril call, shall include a Floor Indicator field indicating the relevant call types;
- 2. shall initialize the counter C201 (Floor request) with value set to 1;
- 3. shall stop timer T230 (Inactivity);
- 4. shall start timer T201 (Floor Request); and
- 5. shall enter 'O: pending request' state.

```
[TS 24.380, clause 7.2.3.3.5]
```

The transition is used in private call only. When a Floor Request message is received, the floor participant:

- 1. shall send a Floor Granted message toward the other floor participant. The Floor Granted message:
 - a. shall include the MCPTT ID of the Floor Request message received in User ID value of the User ID field;
 - b. shall include the SSRC of the Floor Request message received in the SSRC of floor control server field;
 - c. shall include the max duration as configured in the MCPTT client in the OffNetwork/MaxDuration parameter in the <Duration> value of the Duration field; and
 - shall include the priority of the Floor Request message received in the <Floor Priority> value of the Floor Priority field;
- 2. shall stop timer T230 (Inactivity);
- 3. shall start timer T205 (Floor Granted); and
- 4. shall enter 'O: pending granted' state.

[TS 24.380, clause 7.2.3.5.2]

Upon receiving encoded media from the user or if encoded media is already buffered the floor participant:

- 1. shall start timer T206 (Stop talking warning), if not running;
- 2. shall request the MCPTT client to start sending RTP media packets towards other MCPTT clients; and
- 3. shall remain in 'O: has permission' state.

[TS 24.380, clause 7.2.3.7.2]

Upon receiving the RTP media and the SSRC of RTP media packet matches with the stored SSRC of current arbitrator, the floor participant:

- 1. shall request the MCPTT client to render the received RTP media packets;
- 2. shall stop timer T205 (Floor Granted), if running;
- 3. shall stop timer T233 (Pending user action), if running;
- 4. shall start timer T203 (End of RTP media); and
- 5. shall enter 'O: has no permission' state.

[TS 24.379, clause 11.2.3.4.5.6]

When in the "Q1: in-progress private call" state or "Q2: in-progress emergency private call" state, upon receiving a PRIVATE CALL SETUP REQUEST message with the Call identifier IE same as the stored call identifier of the call, the Call type IE set as "EMERGENCY PRIVATE CALL", the MCPTT client:

- 1) if the media session declared in SDP body of PRIVATE CALL SETUP REQUEST message can be established:
 - a) shall generate and store emergency answer SDP based on received SDP offer IE in PRIVATE CALL SETUP REQUEST message, as defined in subclause 11.2.1.1.2;
 - b) shall update the caller ID with the MCPTT user ID of the caller IE as received in the PRIVATE CALL SETUP REQUEST message;
 - c) shall update the callee ID with own MCPTT user ID;
 - d) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7:
 - i) shall set the Call identifier IE to the stored call identifier;
 - ii) shall set the MCPTT user ID of the callee IE with stored callee ID;
 - iii) shall set the MCPTT user ID of the caller IE with stored caller ID; and
 - iv) shall set the SDP answer IE with the stored emergency answer SDP;
 - e) shall set the ProSe per-packet priority to the value corresponding to MCPTT off-network emergency private call as described in 3GPP TS 24.383 [45];
 - f) shall start TFP8 (implicit downgrade) timer;
 - g) shall send PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
 - h) shall set the stored current call type to "EMERGENCY PRIVATE CALL"; and
 - i) shall enter the "Q2: in-progress emergency private call" state;

[TS 24.379, clause 11.2.3.4.6.5]

When in the "Q1: in-progress private call" state or "Q2: in-progress emergency private call" state, upon receiving a PRIVATE CALL EMERGENCY CANCEL message with the same "call identifier" IE, the MCPTT client:

- 1) shall generate a PRIVATE CALL EMERGENCY CANCEL ACK as specified in subclause 15.1.13:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the callee IE with own MCPTT user ID; and
 - c) shall set the MCPTT user ID of the caller IE with MCPTT user ID of the caller IE in received message;
- 2) shall send PRIVATE CALL EMERGENCY CANCEL ACK message according to rules and procedures as specified in subclause 11.2.1.1;
- 3) shall stop TFP8 (implicit downgrade) timer;
- 4) shall establish a media session based on the SDP body of the stored answer SDP;
- 5) shall set the ProSe per-packet priority to the value corresponding to MCPTT off-network private call as described in 3GPP TS 24.383 [45]; and
- 6) shall enter the "Q1: in-progress private call" state and set the stored current call type to "PRIVATE CALL", if current state is the "Q2: in-progress emergency private call" state.

[TS 24.379, clause 11.2.2.4.5.4]

When in the "P4: part of ongoing call" state, upon receiving a PRIVATE CALL RELEASE message, the MCPTT client:

1) shall generate a PRIVATE CALL RELEASE ACK message as specified in subclause 15.1.10;

- a) shall set the Call identifier IE to the stored call identifier;
- b) shall set the MCPTT user ID of the caller IE the stored caller ID; and
- c) shall set the MCPTT user ID of the callee IE with the stored callee ID.
- 2) shall send the PRIVATE CALL RELEASE ACK message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall terminate the media session for private call;
- 4) shall start timer TFP7 (waiting for any message with same call identifier);
- 5) shall release the call type control state machine; and
- 6) shall enter the "P1: ignoring same call id" state.

7.2.2.3 Test description

7.2.2.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server) in the Preamble
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2..

IUT:

- UE (MCPTT client)
 - The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.

- The UE is Switched OFF (state 1) according to TS 36.508 [24].

7.2.2.3.2 Test procedure sequence

Table 7.2.2.3.2-1: Main behaviour

St	Procedure		Message Sequence	ТР	Verdict
		U - S	Message		
1	Power up the UE.	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may				
	be performed by MMI or AT command				
	(+CUTCR).				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause				
	5.4.6 'Generic Test Procedure for MCPTT CT				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
2	exchanged. Activate the MCPTT Client Application and		-		
2	register User A as the MCPTT User (TS	-	-	-	-
	36.579-5 [5], px_MCPTT_User_A_username,				
	px_MCPTT_User_A_password).				
	NOTE: This is expected to be done via a				
3	suitable implementation dependent MMI. SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL SETUP	_	_
5	CALL SETUP REQUEST, Commencement	_ ==	REQUEST	_	-
	mode set to AUTOMATIC COMMENCEMENT				
	MODE, Call type set to Private Call.				
-	EXCEPTION: Steps 4-6 are repeated CFP4=2	-	-	-	-
	times (CFP4 defined in 36.579-1 [2] Table				
4	5.5.8.1-1) Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL ACCEPT	1,2	Р
4	PRIVATE CALL ACCEPT?	>	FRIVATE CALL ACCEPT	1,2	
	NOTE: It is expected that the UE				
	- shall initialize the counter CFP4 (private call				
	accept retransmission) with value set to 1 on				
	the first transmission, and, increase it by 1 with				
	each re-transmission - shall start timer TFP4 (private call accept				
	retransmission).				
5	Start TFP4 (private call accept retransmission)	-	-	-	-
	50 milliseconds as defined in 36.579-1 [2]				
	Table 5.5.8.1-1.				
6 10-	TFP4 expires. Void	-	-	-	-
10-	Volu	-	-	-	-
13	Start TFP7 (waiting for any message with	-	-	-	-
	same call identifier) 6 sec (value chosen to				
	facilitate the test sequence in steps 14-17) and				
	defined in 36.579-1 [2] Table 5.5.8.1-1.				
	NOTE: TFP7 is expected to be started after TFP4 expires and CFP4 is equal to the upper				
	limit.				
	NOTE: It is expected that the UE considers at				
	this moment of time the Private call				
	establishment attempt as failed.				
14	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL ACCEPT ACK	-	-
15	CALL ACCEPT message. Make the UE (MCPTT User) press the PTT				
CI	button requesting permission to talk.	-	-	-	-
	NOTE: The UE (MCPTT User) shall keep the				
	button pressed until otherwise written.				
-	EXCEPTION: Steps 16a1-16b1 depend on UE	-	-	-	-
	complience; the "lower case letter" identifies a				
	step sequence thats take place depending on				
16a	UE behaviour. Check: Does the UE (MCPTT client) sends a	>	Floor Request	2	F
100		-			· ·

16b	Check: Does the TFP7 (waiting for any	-	-	2	Р
1 17	message with same call identifier) expire? Make the UE (MCPTT User) release the PTT	-	-	-	-
-	button. EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.7, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage-	-	-	-	-
18	release by the SS'. Wait for 5 sec to ensure the UE is in stable state - scanning for incoming ProSe	-	-	-	-
-	messages. EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.6 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-one communication out of E-UTRA coverage- establishment'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-
19	SS-UE1 (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST.	<	PRIVATE CALL SETUP REQUEST	-	-
20	Check: Does the UE (MCPTT client) send a PRIVATE CALL ACCEPT?	>	PRIVATE CALL ACCEPT	1	Р
21	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT ACK.	<	PRIVATE CALL ACCEPT ACK	-	-
22	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
23	SS-UE1 (MCPTT Client) continuously sends RTP media until step 28 below. NOTE: The UE (Client) needs to receive RTP media because otherwise the sending of Floor Deny below will not be a valid behaviour.	-	-	-	-
24	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
25	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	3,4	Р
26	SS-UE1 (MCPTT Client) sends Floor Deny message.	<	Floor Deny	-	-
27	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
28	SS-UE1 (MCPTT Client) sends Floor Release message.	<	Floor Release	-	-
29	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
30	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	4	Р
31	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
32	SS-UE1 (MCPTT Client) sends a Floor Request message.	<	Floor Request	-	-
33	Check: Does the UE (MCPTT client) send Floor Deny message?	>	Floor Deny	4	Р
34	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
35	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	4	Р
36	SS-UE1 (MCPTT Client) sends a Floor Request message.	<	Floor Request	-	-

r		1			
37	Check: Does the UE (MCPTT client) send Floor Granted message?	>	Floor Granted	4	Р
38	SS-UE1 (MCPTT Client) sends Floor Release message.	<	Floor Release	-	-
39	SS-UE1 (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST message with Call type IE, call type = "EMERGENCY PRIVATE CALL.	<	PRIVATE CALL SETUP REQUEST	-	-
40	Check: Does the UE (MCPTT client) send a PRIVATE CALL ACCEPT?	>	PRIVATE CALL ACCEPT	5	Р
41	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT ACK.	<	PRIVATE CALL ACCEPT ACK	-	-
42	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
43	SS-UE1 (MCPTT Client) sends Floor Release message.	<	Floor Release	-	-
44	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
45	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	5,4	Р
46	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
47	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
48	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	5,4	Р
49	SS-UE1 (MCPTT Client) sends a PRIVATE CALL EMERGENCY CANCEL message.	<	PRIVATE CALL EMERGENCY CANCEL	-	-
50	Check: Does the UE (MCPTT client) send a PRIVATE CALL EMERGENCY CANCEL ACK message?	>	PRIVATE CALL EMERGENCY CANCEL ACK	6	Р
51	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
52	SS-UE1 (MCPTT Client) sends Floor Release message.	<	Floor Release	-	-
53	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
54	Check: Does the UE (MCPTT client) send a Floor Request message?	>	Floor Request	6,4	Р
55	SS-UE1 (MCPTT Client) sends Floor Granted message.	<	Floor Granted	-	-
56	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
57	Check: Does the UE (MCPTT client) send a Floor Release message?	>	Floor Release	6,4	Р
58	SS-UE1 (MCPTT Client) sends PRIVATE CALL RELEASE message.	<	PRIVATE CALL RELEASE	-	-
59	Check: Does the UE (MCPTT client) send a PRIVATE CALL RELEASE ACK message	>	PRIVATE CALL RELEASE ACK	7	Р
-	EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.7, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the SS'.	-	-	-	-

7.2.2.3.3 Specific message contents

Table 7.2.2.3.3-1: PRIVATE CALL SETUP REQUEST (Step 39 Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.8.2-1.			
Information Element	Value/remark	Comment	Condition
Call type	'00000110'B	EMERGENCY	
		PRIVATE CALL	

Table 7.2.2.3.3-2: Floor Granted (Step 37, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition	OFF-NETWORK.		
Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	SS-UE1 (MCPTT Client) SSRC		
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 7.2.2.3.3-3: Floor Granted (Steps 22, 51, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition	OFF-NETWORK.		
Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	SS-UE1 (MCPTT Client) SSRC		
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.2.3.3-3A: Floor Granted (Steps 31, 55, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)		

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition Information Element	Value/remark	Comment	Condition
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.2.3.3-4: Floor Request (Steps 32, 36, Table 7.2.2.3.2-1)

Table 7.2.2.3.3-5: Floor Request (Step 25, 30, 54, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.2.3.3-6: Floor Deny (Step 33, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
User ID				
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS		
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.2.3.3-7: Floor Deny (Step 26, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.4-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)			

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Table 7.2.2.3.3-8: Floor Release (Steps 35, 57, Table 7.2.2.3.2-1)

Table 7.2.2.3.3-9: Floor Release (Steps 28, 38, 52, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
User ID					
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS			
Floor Indicator					
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)			

Table 7.2.2.3.3-10: Floor Request (Step 45, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value			

Table 7.2.2.3.3-11: Floor Granted (Step 42, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 cc	Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition			
SSRC of granted floor participant	SS-UE1 (MCPTT Client) SSRC					
User ID						
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS				
Floor Indicator						
Floor Indicator	'00010100 0000000	Bit D=1 (Emergency call) bit F=1 (Queueing supported)				

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'00010100 0000000	Bit D=1 (Emergency call) bit F=1 (Queueing supported)			

Table 7.2.2.3.3-11A: Floor Granted (Step 46, Table 7.2.2.3.2-1)

Table 7.2.2.3.3-12: Floor Release (Step 48, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value			

Table 7.2.2.3.3-13: Floor Release (Step 43, Table 7.2.2.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
User ID					
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS			
Floor Indicator					
Floor Indicator	'00010100 0000000	Bit D=1 (Emergency call) bit F=1 (Queueing supported)			

7.2.3 Off-network / Private Call / On-demand / Automatic Commencement Mode / Upgrade to Emergency Call Reject / Downgrade from Emergency Call Failure / Client Originated (CO)

7.2.3.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement in off-network environment, and, the UE is in an off-network environment, and, upon User request the UE (MCPTT Client) has requested upgrade of an established Private Call to an Emergency Private call } ensure that {

when { the called Client rejects the upgrade requests }
 then { UE (MCPTT Client) continues with the established Private call }
 }

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private and private emergency calls with automatic commencement in off-network environment, and, the UE is in an off-network environment, and, upon User request the UE (MCPTT Client) has requested downgrade of an Emergency Private call to a Private call } ensure that {

when { the UE (MCPTT Client) does not receive response to the request until the timer TFP6
(emergency private call cancel retransmission) expires }

then { UE (MCPTT Client) retransmits the PRIVATE CALL EMERGENCY CANCEL message requesting the downgrade of the emergency private call if the counter CFP6 (emergency private call cancel retransmission) has not reached its max value and increments the counter CFP6 with one, and, stops re-transmitting if the counter CFP1 (emergency private call cancel retransmission) has reached its max value and considers the private call as terminated }

7.2.3.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.2.3.4.5.4, 11.2.3.4.6.1, 11.2.3.4.6.2, 11.2.3.4.6.4, 11.2.2.4.5.9, 11.2.2.4.5.9. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.2.3.4.5.4]

When in the "Q2: in-progress emergency private call" state, upon receiving a PRIVATE CALL REJECT message in response to PRIVATE CALL SETUP REQUEST message with Call identifier IE same as stored call identifier, the MCPTT client:

- 1) shall stop timer TFP1 (call setup retransmission), if running;
- 2) shall set the ProSe per-packet priority to the value corresponding to the MCPTT off-network private call as described in 3GPP TS 24.383 [45];
- 3) shall set the stored current call type to "PRIVATE CALL"; and
- 4) shall enter the "Q1: in-progress private call" state.

[TS 24.379, clause 11.2.3.4.6.1]

When in the "Q2: in-progress emergency private call" state, upon an indication from:

1) the caller of the emergency private call; or

•••

to cancel the emergency private call, the MCPTT client:

- 1) shall generate a PRIVATE CALL EMERGENCY CANCEL message as specified in subclause 15.1.12. In the PRIVATE CALL EMERGENCY CANCEL message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller; and
 - c) shall set the MCPTT user ID of the callee IE with the stored callee.
- 2) shall send the PRIVATE CALL EMERGENCY CANCEL message according to rules and procedures as specified in subclause 11.2.1.1;
- 3) shall stop TFP8 (implicit downgrade) timer;
- 4) shall initialize the counter CFP6 (emergency private call cancel retransmission) with the value set to 1;
- 5) shall start timer TFP6 (emergency private call cancel retransmission);
- 6) shall set the stored current call type to "PRIVATE CALL"; and
- 7) shall enter the "Q1: in-progress private call" state.

[TS 24.379, clause 11.2.3.4.6.2]

When in the "Q1: in-progress private call" state, upon expiry of timer TFP6 (emergency private call cancel retransmission), the MCPTT client:

- 1) shall generate a PRIVATE CALL EMERGENCY CANCEL message as specified in subclause 15.1.12. In the PRIVATE CALL EMERGENCY CANCEL message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;

- b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and
- c) shall set the MCPTT user ID of the callee IE with store callee ID.
- 2) shall send the PRIVATE CALL EMERGENCY CANCEL message according to rules and procedures as specified in subclause 11.2.1.1;
- 3) shall increment the value of the timer CFP6 (emergency private call cancel retransmission) by 1;
- 4) shall start timer TFP6 (emergency private call cancel retransmission); and
- 5) shall remain in the "Q1: in-progress private call" state.

[TS 24.379, clause 11.2.3.4.6.4]

In the "Q1: in-progress private call" state, when timer TFP6 (emergency private call cancel retransmission) expires and the value of the counter CFP6 (emergency private call cancel retransmission) is equal to the upper limit, the MCPTT client:

- 1) shall release the stored current call type;
- 2) shall release the stored Prose per-packet priority; and
- 3) shall enter "Q0: waiting for the call to be established".

[TS 24.379, clause 11.2.2.4.5.9]

In the "P4: part of ongoing call" state, when timer TFP6 (emergency private call cancel retransmission) expires and the value of the counter CFP6 (emergency private call cancel retransmission) is equal to the upper limit, the MCPTT client:

- 1) shall start timer TFP7 (waiting for any message with same call identifier);
- 2) shall release the call type control state machine; and
- 3) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.5.9]

When in the "P1: ignoring same call id" state, upon expiry of timer TFP7 (waiting for any message with same call identifier) the MCPTT client:

- 1) shall clear the stored call identifier; and
- 2) shall enter the "P0: start-stop" state.

7.2.3.3 Test description

7.2.3.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server) in the Preamble

- For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is Switched OFF (state 1) according to TS 36.508 [24].

7.2.3.3.2 Test procedure sequence

Table 7.2.3.3.2-1: Main behaviour

St			Message Sequence	TP	Verdict	
		U - S	Message			
1	Power up the UE.	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may					
	be performed by MMI or AT command					
	(+CUTCR).					
2	Activate the MCPTT Client Application and	-	-	-	-	
	register User A as the MCPTT User (TS					
	36.579-5 [5], px_MCPTT_User_A_username,					
	px_MCPTT_User_A_password).					
	NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
3	Make the UE (MCPTT User) request the	-	-	-	-	
	establishment of an MCPTT private call, on-					
	demand Automatic Commencement Mode,					
	with Floor Control. NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-	
	are related to the MCPTT call establishment					
	are described in TS 36.579-1 [2], subclause					
	5.4.5 'Generic Test Procedure for MCPTT CO					
	communication over ProSe direct one-to-one communication out of E-UTRA coverage-					
	establishment'. The test sequence below					
	shows only the MCPTT relevant messages					
	exchanged.					
4	The UE (MCPTT client) sends a PRIVATE	>	PRIVATE CALL SETUP	-	-	
	CALL SETUP REQUEST, Commencement		REQUEST			
	mode set to AUTOMATIC COMMENCEMENT					
5	MODE, Call type set to Private Call. SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL ACCEPT	-	_	
Ŭ	CALL ACCEPT message.					
6	The UE (MCPTT client) send a PRIVATE	>	PRIVATE CALL ACCEPT ACK	-	-	
7	Make the UE (MCPTT User) press the PTT	-	-	-	-	
	button requesting permission to talk. NOTE 1: Depending on UE implementation the					
	PTT button may already been pressed in step					
	3.					
	NOTE 2: The UE (MCPTT User) shall keep the					
	button pressed until otherwise written.					
8	The UE (MCPTT client) sends Floor Granted message.	>	Floor Granted	-	-	
9	Make the UE (MCPTT User) to release the	-	-	-	-	
	PTT button.					
10	The UE (MCPTT client) send Floor Release	>	Floor Release	-	-	
	message.					
11	Make the MCPTT UE (MCPTT User) request	-	-	-	-	
	upgrade of the ongoing call to Emergency call. NOTE: This is expected to be done via a					
	suitable implementation dependent MMI.					
12	The UE (MCPTT client) sends PRIVATE CALL	>	PRIVATE CALL SETUP	1	-	
	SETUP REQUEST message, Call type set to		REQUEST			
	EMERGENCY PRIVATE CALL.					
13	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL REJECT			
4.4	CALL REJECT message.			+		
14	Make the UE (MCPTT User) to press the PTT button requesting permission to talk.	-	-	-	-	
	NOTE: The UE (MCPTT User) shall keep the					
	button pressed until otherwise written.					
		1	<u>I</u>		I	

15	Check: Does the UE (MCPTT client) send	>	Floor Request	1	Р
	Floor Request message, Floor Indicator set to		-		
	Normal call?				
	NOTE: The UE continues operating in the				
	normal Private call.				
16	SS-UE1 (MCPTT Client) sends a Floor	<	Floor Granted	-	_
10	Granted message.		Tiber Granted		
17	Make the UE (MCPTT User) to release the				
11/		-	-	-	-
	PTT button.				
18	The UE (MCPTT client) send Floor Release	>	Floor Release	-	-
	message.				
19	Make the MCPTT UE (MCPTT User) request	-	-	-	-
	upgrade of the ongoing call to Emergency call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
20	The UE (MCPTT client) send PRIVATE CALL	>	PRIVATE CALL SETUP	-	-
20	SETUP REQUEST message, Call type set to	-	REQUEST		
	EMERGENCY PRIVATE CALL.		REGOLOT		
21	SS-UE1 (MCPTT Client) sends a PRIVATE		PRIVATE CALL ACCEPT		
21	CALL ACCEPT manage	<	PRIVATE CALL ACCEPT	-	-
<u> </u>	CALL ACCEPT message.	<u> </u>		+	
22	The UE (MCPTT client) send PRIVATE CALL	>	PRIVATE CALL ACCEPT ACK	-	-
	ACCEPT ACK message.	ļ			
23	Make the UE (MCPTT User) to press the PTT	-	-	-	-
	button requesting permission to talk.				
	NOTE 1: Depending on UE implementation the				
	PTT button may already been pressed in step				
	19.				
	NOTE 2: The UE (MCPTT User) shall keep the				
	button pressed until otherwise written.				
24	The UE (MCPTT client) send Floor Granted	>	Floor Granted	-	
24		>	Floor Granted	-	-
	message, Floor Indicator set to Emergency				
	call.				
25	Void.	-	-	-	-
26	Make the UE (MCPTT User) to release the	-	-	-	-
	PTT button.				
27	The UE (MCPTT client) send Floor Release	>	Floor Release	-	-
	message.				
28	Make the UE (MCPTT User) request	-	-	-	-
	downgrade of the ongoing Émergency call.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
_	EXCEPTION: Steps 29-31 are repeated	_		_	_
_	CFP6=3 times.	_		_	_
- 20	Check: Does the UE (MCPTT client) send			2	Р
29		>	PRIVATE CALL EMERGENCY	2	Р
	PRIVATE CALL EMERGENCY CANCEL		CANCEL		
	message?				
	NOTE: It is expected that the UE				
	- shall initialize the counter CFP6 (emergency				
	private call cancel retransmission) with the				
	value set to 1				
	- shall start timer TFP6 (emergency private call				
	cancel retransmission)				
30	Start TFP6 (private call request	-	-	-	-
	retransmission) 40 milliseconds.				
31	TFP6 expires.	- 1	-	- 1	-
	NOTE: It is expected that the UE considers at				
	this moment of time the Private call being				
	terminated.				
20		<u> </u>		+	
38	Start TFP7 (waiting for any message with	-	-	-	-
	same call identifier) 6 sec (value chosen to				
	facilitate the test sequence in steps 39-43).				
	NOTE 1: TFP7 is expected to be started after				
	TFP6 expires and CFP6 is equal to the upper				
	limit.				
	NOTE 2: Step numbering to reflect that steps				
	29-31 are repeated CFP6=3 times.				
39	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL EMERGENCY	-	-
1	CALL EMERGENCY CÁNCEL ACK message		CANCEL ACK		

40	Make the UE (MCPTT User) to press the PTT button requesting permission to talk. NOTE: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
41	Check: Does the UE (MCPTT client) send Floor Request message in the next 2/3 TFP7 sec?	>	Floor Request	2	F
42	Make the UE (MCPTT User) to release the PTT button.	-	-	-	-
43	TFP7 (waiting for any message with same call identifier) expires.	-	-	-	-
-	EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.8, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the SS'. NOTE: Depending on UE implementation the UE may start independently ProSe release procedure.	-	-	-	-

7.2.3.3.3 Specific message contents

Table 7.2.3.3.3-1: PRIVATE CALL SETUP REQUEST (Steps 12, 20, Table 7.2.3.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.8.1-1.			
Information Element	Value/remark	Comment	Condition
Call type	'00000110'B	EMERGENCY	
		PRIVATE CALL	
User location	Nor present or Any value		

Table 7.2.3.3.3-2: PRIVATE CALL REJECT (Step 13, Table 7.2.3.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.11.2-1.			
Information Element	Value/remark	Comment	Condition
Reason	'00000001'B	MEDIA FAILURE	

Table 7.2.3.3.3-3: Floor Granted (Step 8, Table 7.2.3.3.2-1)

Derivation Path: 36 579-1 [2] Table 5 5 6 3-1 condition OEE-NETWORK

Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	UE (MCPTT client) SSRC		
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Derivation Path: 36.579-1 [2], Table 5.5.6.2-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.3.3.3-4: Floor Request (Step 15, Table 7.2.3.3.2-1)

Table 7.2.3.3.3-5: Floor Granted (Step 16, Table 7.2.3.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 con	dition OFF-NETWORK.		
Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	The UE (MCPTT client) SSRC (received in the corresponding Floor Request)		
Floor priority	The same as the priority included in the corresponding Floor Request, Not Present if there was no priority included		
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.3.3.3-6: Floor Release (Steps 10, 18, Table 7.2.3.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value			

Table 7.2.3.3.3-7: Floor Request (Step 24, Table 7.2.3.3.2-1)

Information Element	Value/remark	Comment	Condition
Floor Indicator			
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value	

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.					
Information Element	Value/remark	Comment	Condition		
Floor Indicator					
Floor Indicator	'00010x00 0000000	Bit D=1 (Emergency call) bit F=x (Queueing supported) any value			

Table 7.2.3.3.3-8: Floor Release (Step 27, Table 7.2.3.3.2-1)

7.2.4 Off-network / Private Call / On-demand / Manual Commencement Mode / Call Released before establishment completion / Call request Rejected / Call establishment successful / Client Originated (CO)

7.2.4.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private calls with manual commencement, and, the UE is in an off-network environment

ensure that {

when { the MCPTT User requests the establishment of an MCPTT private call, on-demand Manual Commencement Mode }

then { UE (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST message requesting the establishment
of an MCPTT private call, on-demand Manual Commencement Mode }

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to
initiate/cancel private calls with manual commencement, and, the UE is in an off-network
environment, and, UE (MCPTT Client) having sent a PRIVATE CALL SETUP REQUEST message requesting
establishment of an MCPTT private call, on-demand Manual Commencement Mode }
ensure that {
 when { the User requests termination of the call after a PRIVATE CALL RINGING message has been

received but before the completion of the call establishment }
 then { UE (MCPTT Client) sends a PRIVATE CALL RELEASE message and terminates the call
 establishment }
 }
}

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private calls with manual commencement, and, the UE is in an off-network environment, and, UE (MCPTT Client) having sent a PRIVATE CALL SETUP REQUEST message requesting establishment of an MCPTT private call, on-demand Manual Commencement Mode } ensure that {

when { the UE (MCPTT Client) receives a PRIVATE CALL REJECT message after a PRIVATE CALL RINGING
message has been received but before the completion of the call establishment }
 then { UE (MCPTT Client) terminates the call establishment }
 }

(4)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including authorized to initiate/cancel private calls with manual commencement, and, the UE is in an off-network environment, and, UE (MCPTT Client) having sent a PRIVATE CALL SETUP REQUEST message requesting establishment of an MCPTT private call, on-demand Manual Commencement Mode } ensure that {

when { the UE (MCPTT Client) receives a PRIVATE CALL RINGING message followed by a PRIVATE CALL ACCEPT message }

then { UE (MCPTT Client) transmits a PRIVATE CALL ACCEPT ACK message and considers the call as being established }

}

7.2.4.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.2.1.1.1, 11.2.1.1.2, 11.2.2.4.4.1, 11.2.2.4.2.7, 11.2.2.4.2.8, 11.2.2.4.4.8. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.2.1.1.1]

In order to participate in a private call, the MCPTT client:

1) shall send the MONP message as a UDP message to the local IP address of the MCPTT user, on UDP port TBD, with an IP time-to-live set to 255; and

Editor's note [CT1#95, C1-160392]: Port number for the message is FFS.

2) shall treat UDP messages received on the port TBD as received MONP messages.

NOTE: An MCPTT client that supports IPv6 is supposed to listen to the IPv6 addresses.

[TS 24.379, clause 11.2.1.1.2]

For an off-network MCPTT session, only MCPTT speech is used.

One off-network MCPTT session includes one media-floor control entity.

The MCPTT client shall generate an SDP body for a private call in accordance with rules and procedures of IETF RFC 4566 [12] and IETF RFC 3264 [44].

The MCPTT client:

- 1) shall include in the session-level section:
 - a) the "o=" field with the <username> portion set to a dash;
 - b) the "s=" field with the <session name> portion set to a dash; and
 - c) the "c=" field with the <nettype> portion set to "IN", the <addrtype> portion set to the IP version of the unicast IP address of the MCPTT client and the <connection-address> portion set to the unicast IP address of the MCPTT client;
- 2) shall include the media-level section for MCPTT speech consisting of:
 - a) the "m=" field with the <media> portion set to "audio", the <port> portion set to a port number for MCPTT speech of the MCPTT group, the <proto> field set to "RTP/AVP" and <fmt> portion set indicating RTP payload type numbers;
 - b) the "i=" field with the <session description> portion set to "speech";
 - c) the "a=fmtp:" attribute(s), the "a=rtpmap:" attribute(s) or both, indicating the codec(s) and media parameters of the MCPTT speech; and
 - d) the "a=rtcp:" attribute indicating port number to be used for RTCP at the MCPTT client selected according to the rules and procedures of IETF RFC 3605 [13], if the media steam uses other than the default IP address;
- 3) shall include the media-level section for media-floor control entity consisting of:
 - a) an "m=" line, with the <media> portion set to "application", the <port> portion set to a port number for media-floor control entity of the MCPTT group, the <proto> field set to "udp" and <fmt> portion set to "MCPTT"; and
 - b) the "a=fmtp:MCPTT" attribute indicating the parameters of the media-floor control entity as specified 3GPP TS 24.380 [5]; and
- 4) shall include the MIKEY-SAKKE I_MESSAGE, if generated by the MCPTT client, in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 11.2.2.4.4.1]

When in the "P0: start-stop" state or "P1: ignoring same call id", upon an indication from MCPTT User to initiate a private call and the value of "/<x>//common/PrivateCall/Authorised" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true", the MCPTT client:

- 1) shall generate and store the call identifier as a random number uniformly distributed between (0, 65536);
- 2) shall store own MCPTT user ID as caller ID;
- 3) shall store MCPTT user ID of the callee as callee ID;
- 4) shall store "AUTOMATIC COMMENCEMENT MODE" as commencement mode, if requested and the value of "/<x>/<x>/Common/PrivateCall/AutoCommence" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true". Otherwise if the value of "/<x>/<x>/Common/PrivateCall/ManualCommence" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true", store "MANUAL COMMENCEMENT MODE" as commencement mode;
- 5) shall create a call type control state machine as described in subclause 11.2.3.2;
- 6) if an end-to-end security context needs to be established then:
 - a) shall use keying material provided by the key management server to generate a PCK as described in 3GPP TS 33.179 [46];
 - b) shall use the PCK to generate a PCK-ID with the four most significant bits set to "0011" to indicate that the purpose of the PCK is to protect private call communications and with the remaining twenty eight bits being randomly generated as described in 3GPP TS 33.179 [46];
 - c) shall encrypt the PCK to a UID associated to the MCPTT client using the MCPTT ID of the invited user and a time related parameter as described in 3GPP TS 33.179 [46];
 - d) shall generate a MIKEY-SAKKE I_MESSAGE using the encapsulated PCK and PCK-ID as specified in 3GPP TS 33.179 [46];
 - e) shall add the MCPTT ID of the originating MCPTT to the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - f) shall sign the MIKEY-SAKKE I_MESSAGE using the originating MCPTT user's signing key provided in the keying material together with a time related parameter, and add this to the MIKEY-SAKKE payload, as described in 3GPP TS 33.179 [46] and;
 - g) shall store the MIKEY-SAKKE I_MESSAGE for later inclusion in an SDP body;
- 7) may store current user location as user location;
- 8) shall generate and store offer SDP, as defined in subclause 11.2.1.1.2;
- 9) shall generate a PRIVATE CALL SETUP REQUEST message as specified in subclause 15.1.5. In the PRIVATE CALL SETUP REQUEST message, the MCPTT client:
 - a) shall set the Call identifier IE with the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID;
 - d) shall set the Commencement mode IE with the stored commencement mode;
 - e) shall set the Call type IE with the stored current call type associated with the call type control state machine;
 - f) shall set the SDP offer IE with the stored offer SDP; and
 - g) may set the User location IE with the stored user location if the stored current call type associated with the call type control state machine is "EMERGENCY PRIVATE CALL".
- 10) shall send the PRIVATE CALL SETUP REQUEST message towards other MCPTT client according to rules and procedures as specified in subclause 11.2.1.1.1;

11) shall initialize the counter CFP1 (private call request retransmission) with the value set to 1;

12) shall start timer TFP1 (private call request retransmission); and

13) shall enter the "P2: waiting for call response" state.

[TS 24.379, clause 11.2.2.4.2.7]

When in the "P2: waiting for call response" state, upon receiving a PRIVATE CALL REJECT message in response to PRIVATE CALL SETUP REQUEST message with Call identifier IE same as the stored call identifier, the MCPTT client:

- 1) shall stop timer TFP1 (call setup retransmission), if running;
- 2) shall stop timer TFP2 (waiting for call response message), if running;
- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall release the call control state machine; and
- 5) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.2.8]

When in the "P2: waiting for call response" state, upon receiving a PRIVATE CALL ACCEPT message response to PRIVATE CALL SETUP REQUEST message with the same call identifier, the MCPTT client:

- 1) shall store the SDP answer IE received in the PRIVATE CALL ACCEPT message as answer SDP;
- 2) shall generate a PRIVATE CALL ACCEPT ACK message as specified in subclause 15.1.11:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID.
- shall send the PRIVATE CALL ACCEPT ACK message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1;
- 4) shall stop timer TFP1 (call setup retransmission), if running;
- 5) shall stop timer TFP2 (waiting for call response message), if running;
- 6) shall establish a media session based on the SDP body of the stored answer SDP;
- 7) shall start floor control as terminating floor participant as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 8) shall start timer TFP5 (max duration); and
- 9) shall enter the "P4: part of ongoing call" state.

[TS 24.379, clause 11.2.2.4.4.8]

When in the "P5: pending" state or "P1: ignoring same call id" state, upon receiving a PRIVATE CALL RELEASE message, the MCPTT client:

- 1) shall generate a PRIVATE CALL RELEASE ACK message as specified in subclause 15.1.10. In the PRIVATE CALL RELEASE ACK message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and.
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID.
- 2) shall send the PRIVATE CALL RELEASE ACK message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;

- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall stop timer TFP4 (private call accept retransmission) if running;
- 5) shall release the call type control state machine, if the current state is "P5: pending" state; and
- 6) shall enter the "P1: ignoring same call id" state, if the current state is "P5: pending" state.
- 7.2.4.3 Test description
- 7.2.4.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server) in the Preamble
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2..

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is Switched OFF (state 1) according to TS 36.508 [24].

7.2.4.3.2 Test procedure sequence

Table 7.2.4.3.2-1: Main behaviour

St	Procedure	Procedure Message Sequence		TP	Verdict
		U - S	Message	1	
1	Power up the UE.	-	-	-	-
1A	Trigger the UE to reset UTC time and location.	-	-	-	-
	NOTE: The UTC time and location reset may				
	be performed by MMI or AT command (+CUTCR).				
2	Activate the MCPTT Client Application and	-	-	-	-
-	register User A as the MCPTT User (TS				
	36.579-5 [5], px_MCPTT_User_A_username,				
	px_MCPTT_User_A_password).				
	NOTE: This is expected to be done via a				
3	suitable implementation dependent MMI. Make the UE (MCPTT User) request the				
3	establishment of an MCPTT private call, on-	-	-	-	-
	demand Manual Commencement Mode, with				
	Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause 5.4.5 'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
4	Check: Does the UE (MCPTT client) send a PRIVATE CALL SETUP REQUEST,	>	PRIVATE CALL SETUP REQUEST	1	Р
	Commencement mode set to MANUAL		REQUEST		
	COMMENCEMENT MODE?				
5	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL RINGING	-	-
	CALL RINGING message.				
6	Make the MCPTT UE (MCPTT User) request	-	-	-	-
	termination of the MCPTT private call.				
	NOTE: This is expected to be done via a suitable implementation dependent MMI.				
7	Check: Does the UE (MCPTT client) send	>	PRIVATE CALL RELEASE	2	Р
	PRIVATE CALL RELEASE message?			_	
8	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL RELEASE ACK	-	-
	CALL RELEASE ACK message				
-	EXCEPTION: UE releases the E-UTRA	-	-	-	-
	connection. The E-UTRA/EPC actions which				
	are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.8,				
	'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	release by the UE'.				
9	Wait for 5 sec to ensure the UE is in stable	-	-	-	-
	state - scanning for incoming ProSe				
10	messages. Make the MCPTT UE (MCPTT User) request		_	-	
	the establishment of an MCPTT private call,	-	-	-	-
	on-demand Manual Commencement Mode,				
	with Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				

-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.5 'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
11	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL SETUP	1	Р
	PRIVATE CALL SETÙP REQUEST,		REQUEST		
	Commencement mode set to MANUAL				
	COMMENCEMENT MODE?				
12	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL RINGING	-	-
	CALL RINGING message.				
12	Wait for 3 sec to ensure that the UE receives	-	-	-	-
A	the message sent in step 12 before the one				
	sent in step 13.				
13	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL REJECT	-	-
10	CALL ACCEPT message.				
13	Wait for 3 sec to ensure that the UE receives	-	-	-	-
A	the message sent in step 13 before the one	_		_	-
	sent in step 14.				
14	SS-UE1 (MCPTT Client) sends a PRIVATE	-	PRIVATE CALL ACCEPT		
14	CALL ACCEPT message.	<		-	-
15	CALL ACCEPT message. Check: Does the UE (MCPTT client) send a		PRIVATE CALL ACCEPT ACK	3	F
15		>	FRIVATE GALL AUGEPT AGK	3	Г
	PRIVATE CALL ACCEPT ACK in the next 1				
	NOTE: It is expected that upon receipt of the				
	message sent in step 13 the UE has entered				
	the "P1: ignoring same call id" state and				
	therefore it shall ignore the message sent in				
	step 14.			_	
-	EXCEPTION: UE releases the E-UTRA	-	-	-	-
	connection. The E-UTRA/EPC actions which				
	are related to the MCPTT call release are				
	described in TS 36.579-1 [2], subclause 5.4.8,				
	'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	release by the UE'.				
16	Wait for 5 sec to ensure the UE is in stable	-	-	-	-
	state - scanning for incoming ProSe				
	messages.				
17	Make the MCPTT UE (MCPTT User) request	-	-	-	-
	the establishment of an MCPTT private call,				
	on-demand Manual Commencement Mode,				
	with Floor Control.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.5 'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
18	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL SETUP	1	Р
10	PRIVATE CALL SETUP REQUEST,	>	REQUEST	· ·	T I
	Commencement mode set to MANUAL				
10	COMMENCEMENT MODE?				
19	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL RINGING	-	-
40	CALL RINGING message.				
19	Wait for 3 sec to ensure that the UE receives	-	-	-	-
A	the message sent in step 19 before the one				
	sent in step 20.	1		1	

20	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT message.	<	PRIVATE CALL ACCEPT	-	-
21	Check: Does the UE (MCPTT client) send a PRIVATE CALL ACCEPT ACK?	>	PRIVATE CALL ACCEPT ACK	4	Р
22	Make the UE (MCPTT User) press the PTT button requesting permission to talk. NOTE 1: Depending on UE implementation the PTT button may already been pressed in step 17. NOTE 2: The UE (MCPTT User) shall keep the button pressed until otherwise written.	-	-	-	-
23	Does the UE (MCPTT client) send a Floor Granted message?	>	Floor Granted	4	Р
24	Make the UE (MCPTT User) release the PTT button.	-	-	-	-
25	Check: Does the UE (MCPTT client) sends a Floor Release message?	>	Floor Release	4	Р
26	Make the MCPTT UE (MCPTT User) request termination of the MCPTT private call. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
27	The UE (MCPTT client) send PRIVATE CALL RELEASE message.	>	PRIVATE CALL RELEASE	-	-
28	SS-UE1 (MCPTT Client) sends a PRIVATE CALL RELEASE ACK message.	<	PRIVATE CALL RELEASE ACK	-	-
-	EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.8, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the SS'.	-	-	-	-

7.2.4.3.3 Specific message contents

Table 7.2.4.3.3-1: PRIVATE CALL SETUP REQUEST (Steps 4, 11, 18, Table 7.2.4.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.8.1-1.			
Information Element	Value/remark	Comment	Condition
Commencement mode	'00000001'B	MANUAL COMMENCEMEN T MODE	
User location	Nor present or Any value		

Table 7.2.4.3.3-2: Floor Granted (Step 23, Table 7.2.4.3.2-1)

Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	UE (MCPTT client) SSRC		
Floor Indicator			
Floor Indicator			
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value	

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.				
Information Element	Value/remark	Comment	Condition	
Floor Indicator				
Floor Indicator	'10000x00 0000000	Bit A=1 (Normal call) bit F=x (Queueing supported) any value		

Table 7.2.4.3.3-3: Floor Release (Step 25, Table 7.2.4.3.2-1)

7.2.5 Off-network / Private Call / On-demand / Manual Commencement Mode / Call Released before establishment completion / User does not answer to Ringing / User Rejects call request / Call establishment successful / Client Terminated (CT)

7.2.5.1 Test Purpose (TP)

(1)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including the MCPTT user being
authorized to receive private calls in manual commencement mode, and, the UE is in an off-network
environment }
ensure that {

when { the UE (MCPTT Client) receives a request for establishment of an MCPTT private call, Ondemand Manual Commencement Mode }

then { UE (MCPTT Client) sends a PRIVATE CALL RINGING message and provides indication to the
user for the incoming call request }
}

(2)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including the MCPTT user being authorized to receive private calls in manual commencement mode, and, the UE is in an off-network environment, and, the UE (MCPTT Client) has responded to a request for establishment of an MCPTT private call, On-demand Manual Commencement Mode by sending a PRIVATE CALL RINGING message } ensure that {

when { the originating Client requests release of the call establishment before the terminating user has accepted the call }

```
then { UE (MCPTT Client) sends a PRIVATE CALL RELEASE ACK message and terminates the call
establishment }
}
```

(3)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including the MCPTT user being authorized to receive private calls in manual commencement mode, and, the UE is in an off-network environment, and, the UE (MCPTT Client) has informed the User for an incoming MCPTT private call request }

ensure that {

when { the terminating User does not answer before the expiry of timer TFP2 (waiting for call response message) }

then { UE (MCPTT Client) rejects the call establishment }
}

(4)

with { UE (MCPTT Client) registered and authorized for MCPTT Service, including the MCPTT user being
authorized to receive private calls in manual commencement mode, and, the UE is in an off-network
environment, and, the UE (MCPTT Client) has informed the User for an incoming MCPTT private call
request }
ensure that {

when { the terminating User rejects the call request }
 then { UE (MCPTT Client) rejects the call establishment }
 }

when { (MCPTT Client) receives a requests from the calling Client for release of the call }
 then { UE (MCPTT Client) sends a PRIVATE CALL RELEASE ACK message and leaves the MCPTT session }
 }
}

7.2.5.2 Conformance requirements

References: The conformance requirements covered in the present TC are specified in: TS 24.379 clauses 11.2.1.1, 11.2.1.1.2, 11.2.2.4.4.1, 11.2.2.4.4.2, 11.2.2.4.4.3, 11.2.2.4.4.5, 11.2.2.4.4.7, 11.2.2.4.4.8. Unless otherwise stated these are Rel-13 requirements.

[TS 24.379, clause 11.2.1.1.1]

In order to participate in a private call, the MCPTT client:

1) shall send the MONP message as a UDP message to the local IP address of the MCPTT user, on UDP port TBD, with an IP time-to-live set to 255; and

Editor's note [CT1#95, C1-160392]: Port number for the message is FFS.

2) shall treat UDP messages received on the port TBD as received MONP messages.

NOTE: An MCPTT client that supports IPv6 is supposed to listen to the IPv6 addresses.

[TS 24.379, clause 11.2.1.1.2]

For an off-network MCPTT session, only MCPTT speech is used.

One off-network MCPTT session includes one media-floor control entity.

The MCPTT client shall generate an SDP body for a private call in accordance with rules and procedures of IETF RFC 4566 [12] and IETF RFC 3264 [44].

The MCPTT client:

- 1) shall include in the session-level section:
 - a) the "o=" field with the <username> portion set to a dash;
 - b) the "s=" field with the <session name> portion set to a dash; and
 - c) the "c=" field with the <nettype> portion set to "IN", the <addrtype> portion set to the IP version of the unicast IP address of the MCPTT client and the <connection-address> portion set to the unicast IP address of the MCPTT client;
- 2) shall include the media-level section for MCPTT speech consisting of:
 - a) the "m=" field with the <media> portion set to "audio", the <port> portion set to a port number for MCPTT speech of the MCPTT group, the <proto> field set to "RTP/AVP" and <fmt> portion set indicating RTP payload type numbers;
 - b) the "i=" field with the <session description> portion set to "speech";

- c) the "a=fmtp:" attribute(s), the "a=rtpmap:" attribute(s) or both, indicating the codec(s) and media parameters of the MCPTT speech; and
- d) the "a=rtcp:" attribute indicating port number to be used for RTCP at the MCPTT client selected according to the rules and procedures of IETF RFC 3605 [13], if the media steam uses other than the default IP address;
- 3) shall include the media-level section for media-floor control entity consisting of:
 - a) an "m=" line, with the <media> portion set to "application", the <port> portion set to a port number for media-floor control entity of the MCPTT group, the <proto> field set to "udp" and <fmt> portion set to "MCPTT"; and
 - b) the "a=fmtp:MCPTT" attribute indicating the parameters of the media-floor control entity as specified 3GPP TS 24.380 [5]; and
- 4) shall include the MIKEY-SAKKE I_MESSAGE, if generated by the MCPTT client, in an "a=key-mgmt" attribute as a "mikey" attribute value in the SDP offer as specified in IETF RFC 4567 [47].

[TS 24.379, clause 11.2.2.4.4.1]

When in the "P0: start-stop" or "P1: ignoring same call id" state, upon receiving a PRIVATE CALL SETUP REQUEST message with Commencement mode IE set to "MANUAL COMMENCEMENT MODE" and Call identifier IE different from stored call identifier, the MCPTT client:

- 1) shall store the Call identifier IE in the received message as call identifier;
- 2) shall create the call type control state machine as described in subclause 11.2.3.2;
- shall store the MCPTT user ID of the caller IE as received in the PRIVATE CALL SETUP REQUEST as caller ID;
- 4) shall store own MCPTT user ID as callee ID;
- 5) shall generate a PRIVATE CALL RINGING message as specified in subclause 15.1.6;
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID;
- 6) shall send PRIVATE CALL RINGING message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 7) shall start timer TFP2 (waiting for call response message); and
- 8) shall enter the "P5: pending" state.

[TS 24.379, clause 11.2.2.4.4.2]

When in the "P5: pending" state, upon expiry of timer TFP2 (waiting for call response message), the MCPTT client:

- 1) shall generate a PRIVATE CALL REJECT message as specified in subclause 15.1.8:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with the stored callee ID; and
 - d) shall set the Reason IE as "FAILED".
- 2) shall send the PRIVATE CALL REJECT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall release the call type control state machine; and

5) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.4.3]

When in the "P5: pending" state, upon an indication from MCPTT User to accept the incoming private call, the MCPTT client:

- if the SDP offer contains an "a=key-mgmt" attribute field with a "mikey" attribute value containing a MIKEY-SAKKE I_MESSAGE:
 - a) shall extract the MCPTT ID of the originating MCPTT user from the initiator field (IDRi) of the I_MESSAGE as described in 3GPP TS 33.179 [46];
 - b) shall convert the MCPTT ID to a UID as described in 3GPP TS 33.179 [46];
 - c) shall use the UID to validate the signature of the MIKEY-SAKKE I_MESSAGE as described in 3GPP TS 33.179 [46];

•••

- e) if the validation of the signature was successful:
 - i) shall extract and decrypt the encapsulated PCK using the terminating user's (KMS provisioned) UID key as described in 3GPP TS 33.179 [46];
 - ii) shall extract the PCK-ID, from the payload as specified in 3GPP TS 33.179 [46];
 - iii) shall generate and store answer SDP based on received SDP offer IE in PRIVATE CALL SETUP REQUEST message, as defined in subclause 11.2.1.1.2;
 - iv) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7. In the PRIVATE CALL ACCEPT message, the MCPTT client:
 - A) shall set the Call identifier IE to the stored call identifier;
 - B) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - C) shall set the MCPTT user ID of the callee IE with the stored callee ID; and
 - D) shall set the SDP answer IE with the stored answer SDP;
 - v) shall send the PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
 - vi) shall establish a media session based on the SDP body of the private call;

vii)shall stop timer TFP2 (waiting for call response message);

- viii) shall initialize the counter CFP4 with value set to 1;
- ix) shall start timer TFP4 (private call accept retransmission); and
- x) shall remain in the "P5: pending" state; and
- NOTE: With the PCK successfully shared between the originating MCPTT client and the terminating MCPTT client, both clients are able to use SRTP/SRTCP to create an end-to-end secure session.
- 2) if the SDP offer does not contain an "a=key-mgmt" attribute, the MCPTT client:
 - a) shall generate and store answer SDP based on received SDP offer IE in PRIVATE CALL SETUP REQUEST message, as defined in subclause 11.2.1.1.2;
 - b) shall generate a PRIVATE CALL ACCEPT message as specified in subclause 15.1.7. In the PRIVATE CALL ACCEPT message, the MCPTT client:
 - i) shall set the Call identifier IE to the stored call identifier;
 - ii) shall set the MCPTT user ID of the caller IE with the stored caller ID;

- iii) shall set the MCPTT user ID of the callee IE with the stored callee ID; and
- iv) shall set the SDP answer IE with the stored answer SDP;
- c) shall send the PRIVATE CALL ACCEPT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- d) shall establish a media session based on the SDP body of the private call;
- e) shall stop timer TFP2 (waiting for call response message);
- f) shall initialize the counter CFP4 with value set to 1;
- g) shall start timer TFP4 (private call accept retransmission); and
- h) shall remain in the "P5: pending" state.

[TS 24.379, clause 11.2.2.4.4.5]

When in the "P5: pending" state, upon receiving a PRIVATE CALL ACCEPT ACK message or RTP media from originating user, the MCPTT client:

- 1) shall stop timer TFP4 (private call accept retransmission);
- 2) shall start floor control as terminating MCPTT client as specified in subclause 7.2 in 3GPP TS 24.380 [5];
- 3) shall start timer TFP5 (max duration); and
- 4) shall enter the "P4: part of ongoing call" state.

[TS 24.379, clause 11.2.2.4.4.7]

When in the "P5: pending" state, upon an indication from MCPTT User to reject the incoming private call, the MCPTT client:

- 1) shall generate a PRIVATE CALL REJECT message as specified in subclause 15.1.8:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID;
 - c) shall set the MCPTT user ID of the callee IE with stored callee ID; and
 - d) shall set the Reason IE as "FAILED", if requested to restrict notification of call failure and the value of "/<x>/<x>/Common/PrivateCall/FailRestrict" leaf node present in the user profile as specified in 3GPP TS 24.383 [45] is set to "true". Otherwise, shall set the Reason IE as "REJECT";
- 2) shall send the PRIVATE CALL REJECT message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall release the call type control state machine; and
- 5) shall enter the "P1: ignoring same call id" state.

[TS 24.379, clause 11.2.2.4.4.8]

When in the "P5: pending" state or "P1: ignoring same call id" state, upon receiving a PRIVATE CALL RELEASE message, the MCPTT client:

- 1) shall generate a PRIVATE CALL RELEASE ACK message as specified in subclause 15.1.10. In the PRIVATE CALL RELEASE ACK message, the MCPTT client:
 - a) shall set the Call identifier IE to the stored call identifier;
 - b) shall set the MCPTT user ID of the caller IE with the stored caller ID; and.

- c) shall set the MCPTT user ID of the callee IE with the stored callee ID.
- 2) shall send the PRIVATE CALL RELEASE ACK message in response to the request message according to rules and procedures as specified in subclause 11.2.1.1.1;
- 3) shall start timer TFP7 (waiting for any message with same call identifier);
- 4) shall stop timer TFP4 (private call accept retransmission) if running;
- 5) shall release the call type control state machine, if the current state is "P5: pending" state; and
- 6) shall enter the "P1: ignoring same call id" state, if the current state is "P5: pending" state.
- 7.2.5.3 Test description

7.2.5.3.1 Pre-test conditions

System Simulator:

- SS-UE1 (MCPTT client)
 - For the underlying "transport bearer" over which the SS and the UE will communicate, the SS is behaving as SS-UE1 as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.
- GNSS simulator to simulate a location and provide a timing reference for the assistance of E-UTRAN offnetwork testing.
- NOTE 1: For operation in off-network environment, it needs be ensured that after the UE is powered up it considers the Geographical area #1 that is simulated by the GNSS simulator as being one of the geographical areas set in the USIM for operation when UE is "not served by E-UTRAN".
- SS-NW (MCPTT server) in the Preamble
 - For the underlying "transport bearer" over which the SS and the UE will communicate Parameters are set to the default parameters for the basic E-UTRA Single cell network scenarios, as defined in TS 36.508 [24] clause 4.4. The simulated Cell 1 shall belong to PLMN1 (the PLMN specified for MCPTT operation in the MCPTT configuration document).
- NOTE 2: The SS operation as NW (MCPTT server) is needed only for the Preamble if the UE has to perform the MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2..

IUT:

- UE (MCPTT client)
- The test USIM set as defined in TS 36.579-1 [2], subclause 5.5.10 is inserted.
- For the underlying "transport bearer" over which the SS and the UE will communicate, the UE is behaving as a ProSe enabled UE as defined in TS 36.508 [24], configured for and operating as ProSe Direct Communication transmitting and receiving device.

Preamble:

- The MCPTT User performs the Generic Test Procedure for MCPTT Authorization/Configuration and Key Generation as specified in TS 36.579-1 [2], subclause 5.3.2.
- The GNSS simulator is configured to simulate a location in the centre of Geographical area #1 and provide a timing reference, as defined in TS 36.508 [24] Table 4.11.2-2 scenario #1.
- The UE is Switched OFF (state 1) according to TS 36.508 [24].

7.2.5.3.2 Test procedure sequence

Table 7.2.5.3.2-1: Main behaviour

St	t Procedure Message S		Message Sequence	TP	Verdict	
		U - S	Message			
1	Power up the UE.	-	-	-	-	
1A	Trigger the UE to reset UTC time and location.	-	-	-	-	
	NOTE: The UTC time and location reset may be performed by MMI or AT command (+CUTCR).					
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.6 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-one communication out of E-UTRA coverage- establishment'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
2	Activate the MCPTT Client Application and register User A as the MCPTT User (TS 36.579-5 [5], px_MCPTT_User_A_username, px_MCPTT_User_A_password). NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-	
3	SS-UE1 (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST, Commencement mode set to MANUAL COMMENCEMENT MODE.	<	PRIVATE CALL SETUP REQUEST	-	-	
4	Check: Does the UE (MCPTT client) send a PRIVATE CALL RINGING message?	>	PRIVATE CALL RINGING	1	Р	
5	Check: Does the UE (MCPTT client) notifies the User for the incoming call request? NOTE: Make the UE (MCPTT User) not to respond.	-	-	1	Р	
6	SS-UE1 (MCPTT Client) sends a PRIVATE CALL RELEASE message.	<	PRIVATE CALL RELEASE	-	-	
7	Check: Does the UE (MCPTT client) send a PRIVATE CALL RELEASE ACK message?	>	PRIVATE CALL RELEASE ACK	2	Р	
-	EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.7, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the SS'.	-	-	-	-	
8	Wait for 5 sec to ensure the UE is in stable state - scanning for incoming ProSe messages.	-	-	-	-	
-	EXCEPTION: The E-UTRA/EPC actions which are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause 5.4.6 'Generic Test Procedure for MCPTT CT communication over ProSe direct one-to-one communication out of E-UTRA coverage- establishment'. The test sequence below shows only the MCPTT relevant messages exchanged.	-	-	-	-	
9	SS-UE1 (MCPTT Client) sends a PRIVATE CALL SETUP REQUEST, Commencement mode set to MANUAL COMMENCEMENT MODE.	<	PRIVATE CALL SETUP REQUEST	-	-	
10	Check: Does the UE (MCPTT client) send a PRIVATE CALL RINGING message?	>	PRIVATE CALL RINGING	1	Р	
11	Check: Does the UE (MCPTT client) notifies the User for the incoming call request?	-	-	1	Р	
12	Start timer TFP2 (waiting for call response message).	-	-	-	-	

13	Make the UE (MCPTT User) not to respond.	-	-	-	-
14	Timer TFP2 (waiting for call response	-	-	-	-
	message) expires.				
15	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL REJECT	3	Р
	PRIVATE CALL ACCEPT message? EXCEPTION: SS releases the E-UTRA				
-	connection. The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call release are				
	described in TS 36.579-1 [2], subclause 5.4.7,				
	'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	release by the SS'.				
16	Wait for 5 sec to ensure the UE is in stable	-	-	-	-
	state - scanning for incoming ProSe messages.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment				
	are described in TS 36.579-1 [2], subclause				
	5.4.6 'Generic Test Procedure for MCPTT CT				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages exchanged.				
17	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL SETUP		
17	CALL SETUP REQUEST, Commencement	<	REQUEST	_	-
	mode set to MANUAL COMMENCEMENT		NEQUEUT		
	MODE.				
18	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL RINGING	1	Р
	PRIVATE CALL RINGING message?				
19	Check: Does the UE (MCPTT client) notifies	-	-	1	Р
	the User for the incoming call request?				
20	Make the UE (MCPTT User) reject the	-	-	-	-
	establishment of an MCPTT private call, on- demand Manual Commencement Mode.				
	NOTE: This is expected to be done via a				
	suitable implementation dependent MMI.				
21	Check: Does the UE (MCPTT client) send a	>	PRIVATE CALL REJECT	4	Р
	PRIVATE CALL ACCEPT message?				
-	EXCEPTION: SS releases the E-UTRA	-	-	-	-
	connection. The E-UTRA/EPC actions which				
	are related to the MCPTT call release are				
	described in TS 36.579-1 [2], subclause 5.4.7, 'Generic Test Procedure for MCPTT CO				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	release by the SS'.				
22	Wait for 5 sec to ensure the UE is in stable	-	-	-	-
	state - scanning for incoming ProSe				
	messages.				
-	EXCEPTION: The E-UTRA/EPC actions which	-	-	-	-
	are related to the MCPTT call establishment are described in TS 36.579-1 [2], subclause				
	5.4.6 'Generic Test Procedure for MCPTT CT				
	communication over ProSe direct one-to-one				
	communication out of E-UTRA coverage-				
	establishment'. The test sequence below				
	shows only the MCPTT relevant messages				
	exchanged.				
23	SS-UE1 (MCPTT Client) sends a PRIVATE	<	PRIVATE CALL SETUP	-	-
	CALL SETUP REQUEST, Commencement		REQUEST		
	mode set to MANUAL COMMENCEMENT				
24	MODE. Check: Does the UE (MCPTT client) send a		PRIVATE CALL RINGING	1	Р
24	PRIVATE CALL RINGING message?	>			٢
		l	l		
25	Check: Does the UE (MCPTT client) notifies	-	-	1	Р

26	Make the UE (MCPTT User) accept the establishment of an MCPTT private call, on- demand Manual Commencement Mode. NOTE: This is expected to be done via a suitable implementation dependent MMI.	-	-	-	-
27	Check: Does the UE (MCPTT client) send a PRIVATE CALL ACCEPT message?	>	PRIVATE CALL ACCEPT	5	Р
28	SS-UE1 (MCPTT Client) sends a PRIVATE CALL ACCEPT ACK.	<	PRIVATE CALL ACCEPT ACK	-	-
28 A	Wait for 3 sec to ensure that the UE receives the message sent in step 28 before the one sent in step 29.	-	-	-	-
29	SS-UE1 (MCPTT Client) sends a Floor Granted message.	<	Floor Granted	-	-
29 A	Wait for 3 sec to ensure that the UE receives the message sent in step 29 before the one sent in step 30.	-	-	-	-
30	SS-UE1 (MCPTT Client) sends a Floor Release message	<	Floor Release	-	-
30 A	Wait for 3 sec to ensure that the UE receives the message sent in step 30 before the one sent in step 31.	-	-	-	-
31	SS-UE1 (MCPTT Client) sends a PRIVATE CALL RELEASE message.	<	PRIVATE CALL RELEASE	-	-
32	Check: Does the UE (MCPTT client) send a PRIVATE CALL RELEASE ACK message?	>	PRIVATE CALL RELEASE ACK	6	Р
-	EXCEPTION: SS releases the E-UTRA connection. The E-UTRA/EPC actions which are related to the MCPTT call release are described in TS 36.579-1 [2], subclause 5.4.7, 'Generic Test Procedure for MCPTT CO communication over ProSe direct one-to-one communication out of E-UTRA coverage- release by the SS'.	-	-	-	-

7.2.5.3.3 Specific message contents

Table 7.2.5.3.3-1: PRIVATE CALL SETUP REQUEST (Steps 3, 9, 17, 23, Table 7.2.5.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.8.2-1.			
Information Element	Value/remark	Comment	Condition
Commencement mode	'0000001'B	MANUAL	
		COMMENCEMEN	
		T MODE	

Table 7.2.5.3.3-2: PRIVATE CALL REJECT (Step 15, Table 7.2.5.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.11.1-1.			
Information Element	Value/remark	Comment	Condition
Reason	'00000100'B	FAILED	

Table 7.2.5.3.3-3: PRIVATE CALL REJECT (Step 21, Table 7.2.5.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.5.11.1-1.			
Information Element	Value/remark	Comment	Condition
Reason	'00000000'B	REJECT	

Derivation Path: 36.579-1 [2], Table 5.5.6.3-1 condition	OFF-NETWORK.		
Information Element	Value/remark	Comment	Condition
SSRC of granted floor participant	SS-UE1 (MCPTT Client) SSRC		
User ID			
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS	
Floor Indicator			
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)	

Table 7.2.5.3.3-4: Floor Granted (Step 29, Table 7.2.5.3.2-1)

Table 7.2.5.3.3-5: Floor Release (Step 30, Table 7.2.5.3.2-1)

Derivation Path: 36.579-1 [2], Table 5.5.6.5-1 condition OFF-NETWORK.							
Information Element	Value/remark	Comment	Condition				
User ID							
User ID	px_MCPTT_User_B_ID	The MCPTT User ID of the one simulated by the SS					
Floor Indicator							
Floor Indicator	'10000100 0000000	Bit A=1 (Normal call) bit F=1 (Queueing supported)					

Annex A (informative): Change history

Change history

Date	Meeting	TDoc	CR	R ev	Cat	Subject/Comment	New version
2017-02	RAN5#74	R5-171299	-	ev	_	Introduction of TS 36.579-2.	0.0.1
2017-05	RAN5#75	R5-172101	-	-	-	Introduced pCR from R5-172080 New MCPTT TC 6.2.1 CO Private Call automatic floor control emergency upgrade R5-172081 New MCPTT TC 6.2.2 CT Private Call automatic floor control emergency upgrade R5-172082 New MCPTT TC 6.2.3 CO Private Call automatic no floor control R5-172083 New MCPTT TC 6.2.4 CT Private Call automatic no floor control	0.0.2
						R5-172084 New MCPTT TC 6.2.5 CO Private Emergency Call Automatic R5-172085 New MCPTT TC 6.2.6 CT Private Emergency Call Force of automatic commencement R5-172086 New MCPTT TC 6.2.7 CO Private Call Manual R5-172087 New MCPTT TC 6.2.8 CT Private Call Manual R5-172970 New MCPTT TC 5.3 Group Affiliation and De-affilitation R5-172971 New MCPTT TC 5.4 Pre-established Session Establishment Modification and Release R5-172972 New MCPTT TC 6.1.1.1 CO On-Demand Pre-arranged Group Call with Floor Control and Upgrades and Automatic Commencement Mode	
						R5-172973 New MCPTT TC 6.1.1.4 CT On-demand Pre-arranged Group Call with Manual Commencement Mode R5-172974 New MCPTT TC 6.1.2.3 On-network / One MCPTT System / Chat Group Call Using Pre-established Session / Client originated Pre-established Session Release with associated MCPTT session / Client Origination (CO) R5-172975 MCPTT Testing: Introduction of test case 5.1 in 36.579-2 R5-172977 MCPTT Testing: Introduction of test case 6.1.2.1 in 36.579-2	
2017-06	RAN5#75	-	-	-	-	lifted to v0.1.0 with small editorial changes, because of technical contents	0.1.0

2017-09 RAN5#76	R5-173767	Introduced pCR from	0.2.0
		R5-173708 Editorial updates of MCPTT TS 36579-2	
		R5-173709 Update of MCPTT TC 6.2.1	
		R5-174601 Update of MCPTT TC 6.2.2	
		R5-173711 Update of MCPTT TC 6.2.3	
		R5-173712 Update of MCPTT TC 6.2.4 R5-173713 Update of MCPTT TC 6.2.5	
		R5-173713 Update of MCPTT TC 6.2.6	
		R5-173715 Update of MCPTT TC 6.2.7	
		R5-173716 Update of MCPTT TC 6.2.8	
		R5-173717 New MCPTT TC 6.2.9 Private call pre-established	
		session automatic CO	
		R5-173718 New MCPTT TC 6.2.10 Private call pre-established	
		session automatic CT R5-173719 New MCPTT TC 6.2.11 Private call pre-established	
		session manual CT	
		R5-173720 New MCPTT TC 7.1.2.1 Private call off-network	
		R5-173721 New MCPTT TC 7.1.2.2 Private call off-network	
		R5-173722 New MCPTT TC 7.1.2.3 Private call off-network	
		R5-173723 New MCPTT TC 7.1.2.4 Private call off-network	
		R5-173724 New MCPTT TC 7.1.2.5 Private call off-network	
		R5-174602 Update of MCPTT TC 6.1.2.2	
		R5-174603 New MCPTT TC 6.1.2.3 On-network / One MCPTT	
		System / Chat Group Call / Late Entry	
		R5-174604 New MCPTT TC 6.1.2.4 On-network / One MCPTT	
		System / Chat Group Call / Rejection Upon Join Attempt / Join	
		Attempt Successful / De-affiliation R5-174605 Update of MCPTT TC 5.3	
		R5-174606 Update of MCPTT TC 5.3	
		R5-174606 Update of MCPTT TC 5.4 R5-174607 Update of MCPTT TC 6.1.1.1	
		R5-174608 Update of MCPTT TC 6.1.1.4	
		R5-174609 New MCPTT TC 6.1.1.2 Group Call Client Terminated	
		with Floor Control	
		R5-174610 New MCPTT TC 6.1.1.3 Group Call CO Manual	
		Commencement	
		R5-174611 New MCPTT TC 6.1.1.5 Group Call CO pre-established	
		R5-174612 New MCPTT TC 6.1.1.6 Group Call CT pre-established	
		session with auto R5-174613 New MCPTT TC 6.1.1.7 Group Call CT pre-established	
		session with manual R5-174614 New MCPTT TC 6.1.1.15 Group Call CO Emergency	
		Alerts R5-174615 New MCPTT TC 6.1.1.16 Group Call CT Emergency	
		Alerts R5-174616 New MCPTT TC 7.1.1.1 Off-Network Group Call - basic	
		call with upgrades and downgrades	
		R5-174617 MCPTT Testing: Additions for test case 5.1 in 36.579-2 R5-174043 MCPTT Testing: Additions for test case 6.1.2.1 in	
		36.579-2 P5 174618 Now MCPTT TC 6 1 1 8 Op potwork / Opo MCPTT	
		R5-174618 New MCPTT TC 6.1.1.8 On-network / One MCPTT System / Pre-arranged Broadcast Group Call / Client Originated	
		R5-174619 New MCPTT TC 6.1.1.9 On-network / One MCPTT	
		System / Pre-arranged Broadcast Group Call / Client Terminated (CT)	
		R5-174620 New MCPTT TC 6.1.1.10 On-network / One MCPTT	
		System / Broadcast Group Call with Temporary Group / Client	
		Originated (CO)	
		R5-174621 New MCPTT TC 6.1.1.11 On-network / One MCPTT	
		System / Pre-arranged Emergency Group Call / Client Originated (CO)	
		R5-174622 New MCPTT TC 6.1.1.12 On-network / One MCPTT System / Pre-arranged Emergency Group Call / Client Terminated	
		(CT)	
		R5-174623 New MCPTT TC 6.1.2.5 On-network / One MCPTT System / Chat Group Group-broadcast Broadcast Group Call / Client	
		Originated (CO) R5-174624 New MCPTT TC 6.1.2.6 On-network / One MCPTT	
		System / Chat Group Broadcast Group Call / Client Terminated (CT)	
		R5-174625 New MCPTT TC 6.1.2.7 On-network / One MCPTT	
		System / Chat Group Emergency Group Call / Client Originated (CO)	
		R5-174626 New MCPTT TC 6.1.2.8 On-network / One MCPTT	
		System / Chat Group Emergency Group Call / Client Terminated	
		(CT)	
		 •	

2017-11	RAN5#77	R5-176836	-	-	-	Updated wit pCR R5-177003, R5-177004, R5-177005, R5-177006, R5-177007, R5- 177008, R5-177009, R5-176270, R5-176271, R5-176272, R5- 176273, R5-176274, R5-176275, R5-176276, R5-176277, R5- 176278, R5-176279, R5-176280, R5-176281, R5-177010, R5-	0.3.0
						177011, R5-177012, R5-177013, R5-177014, R5-177015, R5- 177016, R5-177017, R5-177018, R5-177019, R5-177020, R5-	
						177021, R5-177022, R5-177023, R5-177024, R5-177025, R5-	
						177026, R5-177027, R5-177028, R5-177029, R5-177030, R5-	
						177031, R5-177032, R5-177033, R5-177034, R5-177035, R5- 177036, R5-177037	
						Editor's alignments: sections numbering and adding FFS.	
2017-12	RAN#78	RP-172183	-	-	-	Draft version for information purposes to the RAN Plenary	1.0.0
2018-03	RAN5#78	R5-180685	-	-	-	Updated with pCR	1.1.0
						R5-181242, R5-181243, R5-181244, R5-181245, R5-181246, R5- 181247, R5-181248, R5-181249, R5-181250, R5-181251, R5-	
						181252, R5-181253, R5-181254, R5-181255, R5-181256, R5-	
						181257, R5-181258, R5-181259, R5-181260, R5-180519, R5-	
						180520, R5-180521, R5-180522, R5-180523, R5-180524, R5- 180525, R5-180526, R5-180527, R5-180528, R5-180529, R5-	
						180530, R5-180531, R5-180532, R5-180533, R5-181261, R5-	
						181262, R5-181263, R5-181264, R5-180640, R5-181265, R5-	
						180642, R5-181266, R5-180644, R5-181267, R5-180646, R5- 180647, R5-180648, R5-180649, R5-180650, R5-180651, R5-	
						180652, R5-180653, R5-180654, R5-180655, R5-181268	
2018-03	RAN#79	RP-180127	-	-	-	Draft version for approval to move the spec under revision control to	2.0.0
0040.00						the RAN Plenary	10.0.0
2018-03 2018-06	RAN#79 RAN#80	- R5-182418	- 0001	-	- F	Editorial changes and promoted to v13.0.0 Addition and correction of GNSS information	13.0.0 13.1.0
2018-06	RAN#80	R5-182419	0002	-	F	Editorial correction of typos and incorrect references	13.1.0
2018-06	RAN#80	R5-182430	0003	-	F	Editorial Update of 36.579-2 for style H6	13.1.0
2018-06	RAN#80	R5-182431	0004	-	F	Update of TC 5.1 for MCPTT APN	13.1.0
2018-06	RAN#80	R5-182432	0005	-	F	Updates of Location information messages in 36.579-2	13.1.0
2018-06	RAN#80	R5-182489	8000	-	F	Update of MCPTT TC 6.1.1.1	13.1.0
2018-06	RAN#80	R5-182510	0009	-	F	Correction to MCPTT TC of 6.1.1.8, 6.1.1.11, 6.1.2.5 and 6.1.2.7 Updates of TC 6.3.1	13.1.0
2018-06 2018-06	RAN#80 RAN#80	R5-183167 R5-183168	0006	1	F	Updates of TC 6.3.2	13.1.0 13.1.0
2018-09	RAN#81	R5-184692	0016	-	F	Editorial updates to 36.579-2 Rel-13 TCs	13.2.0
2018-09	RAN#81	R5-184687	0011	-	F	Adding a new Rel-14 TC on Private Call Call-Back Request / Client	14.0.0
0040.00	DANIJOA	D5 404000	0040		_	Terminated (CT) / Private call call-back fulfilment	
2018-09	RAN#81	R5-184689	0013	-	F	Adding a new Rel-14 TC on Private Call / Remotely initiated Ambient listening call Client Terminated (CT)	14.0.0
2018-09	RAN#81	R5-184690	0014	-	F	Adding a new Rel-14 TC on Private Call / Locally initiated Ambient listening call / Client Originated (CO)	14.0.0
2018-09	RAN#81	R5-184691	0015	-	F	Adding a new Rel-14 TC on Private Call / Locally initiated Ambient	14.0.0
2018-09	RAN#81	R5-185123	0010	1	F	listening call / Client Terminated (CT) Adding a new Rel-14 TC on Private Call Call-Back Request / Client	14.0.0
						Originated (CO) / Private call call-back fulfilment	
2018-09	RAN#81	R5-185124	0012	1	F	Adding a new Rel-14 TC on Private Call / Remotely initiated Ambient listening call Client Originated (CO)	14.0.0
2018-12	RAN#82	R5-186882	0017	-	F	Update of MCPTT Client off-network operation TCs Core requirements to reflect latest Rel-13 core specs	14.1.0
2018-12	RAN#82	R5-186883	0018	-	F	Update of MCPTT Private Calls with Floor Control TCs Core	14.1.0
						requirements to reflect latest Rel-13 core specs	
2018-12	RAN#82	R5-186884	0019	-	F	Update of MCPTT Private Calls without Floor Control TCs Core requirements to reflect latest Rel-13 core specs	14.1.0
2018-12	RAN#82	R5-186885	0020	-	F	Update of MCPTT Private Calls within a pre-established session TCs	14.1.0
						Core requirements to reflect latest Rel-13 core specs	
2018-12	RAN#82	R5-187718	0021	1	F	Update of TC 5.1 in 36.579-2	14.1.0
2019-03 2019-03	RAN#83 RAN#83	R5-191903 R5-191904	0022 0023	-	F F	Update to MCPTT TC 7.2.1 Off-network / Private Call CO Update to MCPTT TC 7.2.2 Off-network / Private Call CT	14.2.0 14.2.0
2019-03	RAN#83 RAN#83	R5-191904 R5-191905	0023	-	F	Update to MCPTT TC 7.2.2 Off-network / Private Call CT	14.2.0
2019-03	RAN#83	R5-191907	0024	-	F	Update to MCPTT TC 7.2.5 Off-network / Private Call CC	14.2.0
2019-03	RAN#83	R5-192159	0041	-	F	Update 36.579-2 Typos in Reference and Scope	14.2.0
2019-03	RAN#83	R5-192366	0025	1	F	Update to MCPTT TC 7.2.4 Off-network / Private Call CO	14.2.0
2019-03	RAN#83	R5-192367	0027	1	F	Update to MCPTT TC 7.1.1 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192368	0028	1	F	Update to MCPTT TC 7.1.2 Off-network / Group Call	14.2.0
2019-03 2019-03	RAN#83 RAN#83	R5-192369 R5-192370	0029 0030	1	F F	Update to MCPTT TC 7.1.3 Off-network / Group Call Update to MCPTT TC 7.1.4 Off-network / Group Call	14.2.0 14.2.0
2019-03	RAN#83	R5-192370 R5-192371	0030	1	F	Update to MCPTT TC 7.1.5 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192372	0031	1	F	Update to MCPTT TC 7.1.6 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192373	0033	1	F	Update to MCPTT TC 7.1.7 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192374	0034	1	F	Update to MCPTT TC 7.1.8 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192375	0035	1	F	Update to MCPTT TC 7.1.9 Off-network / Group Call	14.2.0

ETSI TS 136 579-2 V14.3.0 (2019-07)

2019-03	RAN#83	R5-192376	0036	1	F	Update to MCPTT TC 7.1.10 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192377	0037	1	F	Update to MCPTT TC 7.1.11 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192378	0038	1	F	Update to MCPTT TC 7.1.12 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192379	0039	1	F	Update to MCPTT TC 7.1.13 Off-network / Group Call	14.2.0
2019-03	RAN#83	R5-192836	0040	1	F	Update 36.579-2 Typo of 36.579-1 reference throughout spec	14.2.0
2019-06	RAN#83	R5-194666	0045	-	F	Typo for MCPTT in 36.579-2	14.3.0
2019-06	RAN#83	R5-195218	0042	1	F	Correction of floor control messages in test case 6.1.1.1	14.3.0
2019-06	RAN#83	R5-195219	0043	1	F	Correction of call setup in test case 6.1.1.2	14.3.0
2019-06	RAN#83	RP-191440	0044	2	F	Correction of call setup in test case 6.1.1.4	14.3.0

History

Document history							
V14.0.0	October 2018	Publication					
V14.1.0	December 2018	Publication					
V14.2.0	May 2019	Publication					
V14.3.0	July 2019	Publication					