
ETSITS 125 331 V7.1.0 (2006-06)

Technical Specification

Universal Mobile Telecommunications System (UMTS);
Radio Resource Control (RRC);
Protocol specification
(3GPP TS 25.331 version 7.1.0 Release 7)

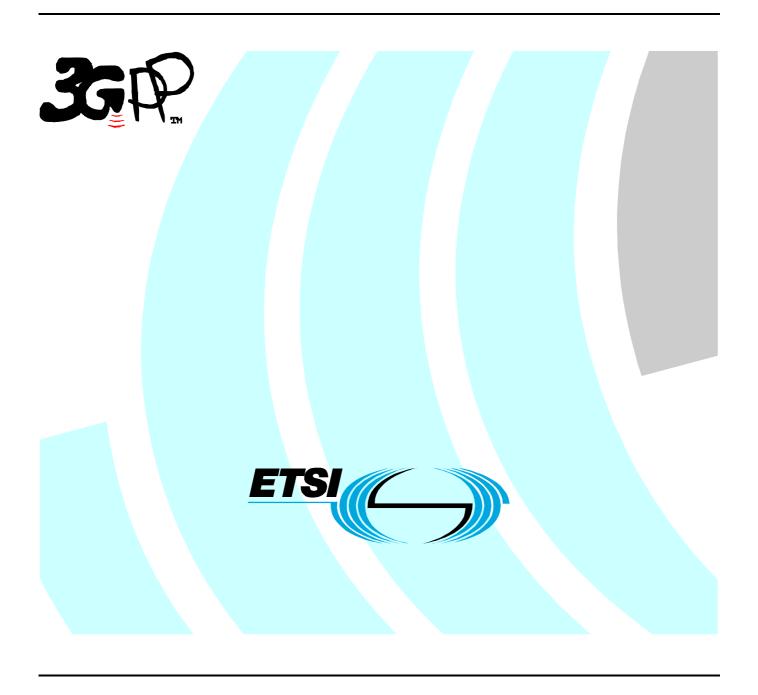

Reference
RTS/TSGR-0225331v710

Keywords
UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2006. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Contents

Intelle	ectual Property Rights	2
Forew	vord	2
Forew	vord	29
1	Scope	30
	-	
2	References	
3	Definitions and abbreviations	
3.1	Definitions	
3.2	Abbreviations	
4	General	
4.1	Overview of the specification	
4.2	RRC Layer Model	
4.3	Protocol specification principles	
5	RRC Functions and Services provided to upper layers	
5.1	RRC Functions	
5.2	RRC Services provided to upper layers	
5.3	Primitives between RRC and upper layers	4(
6	Services expected from lower layers	40
6.1	Services expected from Layer 2	40
6.2	Services expected from Layer 1	
6.3	Signalling Radio Bearers	40
7	Protocol states	41
7.1	Overview of RRC States and State Transitions including GSM	
7.2	Processes in UE modes/states	
7.2.1	UE Idle mode	42
7.2.2	UTRA RRC Connected mode	
7.2.2.1		
7.2.2.2		
7.2.2.3	-	
8	RRC procedures	
8.1	RRC Connection Management Procedures	
8.1.1	Broadcast of system information	
8.1.1.1		
8.1.1.1 8.1.1.1	-	
8.1.1.1	·	
8.1.1.1		
8.1.1.1		
8.1.1.2		
8.1.1.3		
8.1.1.4		
8.1.1.5		
8.1.1.6	· · · · · · · · · · · · · · · · · · ·	
8.1.1.6 8.1.1.6	7	
8.1.1.6	· · · · · · · · · · · · · · · · · · ·	
8.1.1.6		
8.1.1.6	• • • • • • • • • • • • • • • • • • • •	
8.1.1.6	· · · · · · · · · · · · · · · · · · ·	
8.1.1.6	7	
8.1.1.6		
8.1.1.6	5.9 Void	63

8.1.1.6.10	Void	63
8.1.1.6.11	System Information Block type 11	
8.1.1.6.12	System Information Block type 12	
8.1.1.6.13	System Information Block type 13	66
8.1.1.6.14	System Information Block type 14	
8.1.1.6.15	System Information Block type 15	
8.1.1.6.16	System Information Block type 16	
8.1.1.6.17	System Information Block type 17	
8.1.1.6.18	System Information Block type 18	
8.1.1.7	Modification of system information	
8.1.1.7.1	Modification of system information blocks using a value tag	
8.1.1.7.2	Synchronised modification of system information blocks	
8.1.1.7.3	Actions upon system information change	
8.1.1.7.4	Actions upon expiry of a system information expiry timer	
8.1.2	Paging	
8.1.2.1 8.1.2.2	General Ladio and the second s	
8.1.2.2	Initiation	
8.1.3	RRC connection establishment	
8.1.3.1	General	
8.1.3.2	Initiation	
8.1.3.3	RRC CONNECTION REQUEST message contents to set	
8.1.3.4	Reception of an RRC CONNECTION REQUEST message by the UTRAN	
8.1.3.5	Cell re-selection, T300 or T318 timeout	
8.1.3.5a	Abortion of RRC connection establishment.	
8.1.3.6	Reception of an RRC CONNECTION SETUP message by the UE	
8.1.3.7	Physical channel failure or cell re-selection	
8.1.3.8	Invalid RRC CONNECTION SETUP message, unsupported configuration or invalid	
0.1.0.0	configuration	80
8.1.3.9	Reception of an RRC CONNECTION REJECT message by the UE	
8.1.3.10	Invalid RRC CONNECTION REJECT message	
8.1.4	RRC connection release	
8.1.4.1	General	
8.1.4.2	Initiation	
8.1.4.3	Reception of an RRC CONNECTION RELEASE message by the UE	
8.1.4.4	Invalid RRC CONNECTION RELEASE message	
8.1.4.5	Cell re-selection or radio link failure	
8.1.4.6	Expiry of timer T308, unacknowledged mode transmission	87
8.1.4.7	Void	87
8.1.4.8	Reception of an RRC CONNECTION RELEASE COMPLETE message by UTRAN	88
8.1.4.9	Unsuccessful transmission of the RRC CONNECTION RELEASE COMPLETE message,	
	acknowledged mode transmission	
8.1.4.10	Detection of loss of dedicated physical channel by UTRAN in CELL_DCH state	
8.1.4.11	Failure to receive RRC CONNECTION RELEASE COMPLETE message by UTRAN	
8.1.4a	RRC connection release requested by upper layers	88
8.1.4a.1	General	
8.1.4a.2	Initiation	
8.1.5	Void	
8.1.6	Transmission of UE capability information	
8.1.6.1	General	
8.1.6.2	Initiation	
8.1.6.3	Reception of a UE CAPABILITY INFORMATION message by the UTRAN	
8.1.6.4	Reception of the UE CAPABILITY INFORMATION CONFIRM message by the UE	
8.1.6.5	Invalid UE CAPABILITY INFORMATION CONFIRM message	
8.1.6.6	T304 timeout	
8.1.7	UE capability enquiry	
8.1.7.1	General Initiation	
8.1.7.2	Initiation	
8.1.7.3 8.1.7.4	Reception of a UE CAPABILITY ENQUIRY message by the UE	
8.1.7.4 8.1.8	Invalid UE CAPABILITY ENQUIRY message	
8.1.8 8.1.8.1	General	92 93

8.1.8.2	Initiation of Initial direct transfer procedure in the UE	
8.1.8.2a	RLC re-establishment or inter-RAT change	
8.1.8.2ab	Inter-RAT handover from UTRAN to GERAN Iu mode	
8.1.8.2b	Abortion of signalling connection establishment	
8.1.8.3	Reception of INITIAL DIRECT TRANSFER message by the UTRAN	
8.1.9	Downlink Direct transfer	
8.1.9.1	General	
8.1.9.2	Initiation of downlink direct transfer procedure in the UTRAN	
8.1.9.3	Reception of a DOWNLINK DIRECT TRANSFER message by the UE	
8.1.9.3a	No signalling connection exists	
8.1.9.4	Invalid DOWNLINK DIRECT TRANSFER message	
8.1.10	Uplink Direct transfer	
8.1.10.1	General	
8.1.10.2	Initiation of uplink direct transfer procedure in the UE	
8.1.10.2a	RLC re-establishment or inter-RAT change	
8.1.10.2b	Inter-RAT handover from UTRAN to GERAN Iu mode	
8.1.10.3	Reception of UPLINK DIRECT TRANSFER message by the UTRAN	
8.1.11	UE dedicated paging	
8.1.11.1	General	
8.1.11.2	Initiation	
8.1.11.3	Reception of a PAGING TYPE 2 message by the UE	
8.1.11.4	Invalid PAGING TYPE 2 message	
8.1.12	Security mode control	
8.1.12.1	General	
8.1.12.2	Initiation	
8.1.12.2.1	r 6 6 6	
8.1.12.2.2	6 J I	
8.1.12.3	Reception of SECURITY MODE COMMAND message by the UE	
8.1.12.3.1		
8.1.12.4	Void	
8.1.12.4a	Incompatible simultaneous security reconfiguration	
8.1.12.4b	Cell update procedure during security reconfiguration	
8.1.12.4c	Invalid configuration	
8.1.12.5 8.1.12.6	Invalid SECURITY MODE COMPLETE message by the OTRAN	
8.1.13	Signalling connection release procedure	
8.1.13.1	General	
8.1.13.1	Initiation of SIGNALLING CONNECTION RELEASE by the UTRAN	
8.1.13.3	Reception of SIGNALLING CONNECTION RELEASE by the UE	
8.1.13.4	Invalid SIGNALLING CONNECTION RELEASE message	
8.1.13.5	Invalid configuration	
8.1.14	Signalling connection release indication procedure	
8.1.14.1	General	
8.1.14.2	Initiation	
8.1.14.2a	RLC re-establishment or inter-RAT change	
8.1.14.3	Reception of SIGNALLING CONNECTION RELEASE INDICATION by the UTRAN	115
8.1.15	Counter check procedure	
8.1.15.1	General	
8.1.15.2	Initiation	
8.1.15.3	Reception of a COUNTER CHECK message by the UE	116
8.1.15.4	Reception of the COUNTER CHECK RESPONSE message by UTRAN	
8.1.15.5	Cell re-selection	
8.1.15.6	Invalid COUNTER CHECK message	117
8.1.16	Inter RAT handover information transfer	
8.1.16.1	General	
8.1.16.2	Initiation	
8.1.16.3	INTER RAT HANDOVER INFO message contents to set	
8.2	Radio Bearer control procedures	
8.2.1	Radio bearer establishment	119
8.2.2	Reconfiguration procedures	119
8.2.2.1	General	
8.2.2.2	Initiation	122

8.2.2.2a	Initiation of handover from GERAN <i>Iu mode</i>	123
8.2.2.3	Reception of RADIO BEARER SETUP or RADIO BEARER RECONFIGURATION or RADIO BEARER RELEASE or TRANSPORT CHANNEL RECONFIGURATION or	
	PHYSICAL CHANNEL RECONFIGURATION message by the UE	124
8.2.2.3a	Reception of RADIO BEARER RECONFIGURATION message by the UE performing	
0.2.2.4	handover from GERAN <i>Iu mode</i>	
8.2.2.4	Transmission of a response message by the UE, normal case	
8.2.2.5 8.2.2.5a	Reception of a response message by the UTRAN, normal case	
8.2.2.5a 8.2.2.6	Unsupported configuration in the UE	
8.2.2.7	Physical channel failure	
8.2.2.8	Cell re-selection	
8.2.2.9	Transmission of a response message by the UE, failure case	
8.2.2.10	Reception of a response message by the UTRAN, failure case	
8.2.2.11	Invalid configuration	
8.2.2.12	Incompatible simultaneous reconfiguration	
8.2.2.12a	Incompatible simultaneous security reconfiguration	141
8.2.2.12b	Cell update procedure during security reconfiguration	141
8.2.2.13	Invalid received message	
8.2.2.14	Radio link failure	142
8.2.3	Radio bearer release	
8.2.4	Transport channel reconfiguration	
8.2.5	Transport format combination control	
8.2.5.1	General	
8.2.5.2	Initiation	
8.2.5.3	Reception of a TRANSPORT FORMAT COMBINATION CONTROL message by the UE	
8.2.5.4	Invalid configuration	
8.2.5.5 8.2.6	Physical channel reconfiguration — — — — — — — — — — — — — — — — — — —	
8.2.7	Physical Shared Channel Allocation [TDD only]	
8.2.7.1	General	
8.2.7.2	Initiation	
8.2.7.3	Reception of a PHYSICAL SHARED CHANNEL ALLOCATION message by the UE	
8.2.7.4	Invalid PHYSICAL SHARED CHANNEL ALLOCATION message	
8.2.8	PUSCH capacity request [TDD only]	
8.2.8.1	General	
8.2.8.2	Initiation	150
8.2.8.3	PUSCH CAPACITY REQUEST message contents to set	151
8.2.8.4	Reception of a PUSCH CAPACITY REQUEST message by the UTRAN	
8.2.8.5	T310 expiry	
8.2.9	Void	
8.2.10	Uplink Physical Channel Control [TDD only]	
8.2.10.1	General	
8.2.10.2	Initiation	
8.2.10.3	Reception of UPLINK PHYSICAL CHANNEL CONTROL message by the UE	
8.2.10.4	Invalid UPLINK PHYSICAL CHANNEL CONTROL message	
8.2.11	Physical channel reconfiguration failure	
8.2.11.1 8.2.11.2	General	
8.2.11.3	Void	
8.3	RRC connection mobility procedures	
8.3.1	Cell and URA update procedures	
8.3.1.1	General	
8.3.1.2	Initiation	
8.3.1.3	CELL UPDATE / URA UPDATE message contents to set	
8.3.1.4	T305 expiry and the UE detects "out of service area"	
8.3.1.4.1	Re-entering "in service area"	
8.3.1.4.2	Expiry of timer T307	
8.3.1.5	Reception of an CELL UPDATE/URA UPDATE message by the UTRAN	165
8.3.1.6	Reception of the CELL UPDATE CONFIRM/URA UPDATE CONFIRM message by the UE	
8.3.1.7	Transmission of a response message to UTRAN	
8.3.1.7a	Physical channel failure	175

8.3.1.8	Unsupported configuration by the UE	176
8.3.1.9	Invalid configuration	
8.3.1.9a	Incompatible simultaneous reconfiguration	
8.3.1.9b	Security reconfiguration during Cell update procedure	180
8.3.1.10	Confirmation error of URA ID list	
8.3.1.11	Invalid CELL UPDATE CONFIRM/URA UPDATE CONFIRM message	181
8.3.1.12	T302 expiry or cell reselection	
8.3.1.13	T314 expiry	184
8.3.1.14	T315 expiry	
8.3.1.15	Reception of the UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN	186
8.3.2	URA update	
8.3.3	UTRAN mobility information	
8.3.3.1	General	
8.3.3.2	Initiation	
8.3.3.3	Reception of UTRAN MOBILITY INFORMATION message by the UE	
8.3.3.4	Reception of an UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN	
8.3.3.5	Cell re-selection	
8.3.3.5a	Incompatible simultaneous security reconfiguration	
8.3.3.6	Invalid UTRAN MOBILITY INFORMATION message	
8.3.4	Active set update	
8.3.4.1	General	
8.3.4.2	Initiation	
8.3.4.3 8.3.4.4	Reception of an ACTIVE SET UPDATE message by the UE	
	Unsupported configuration in the UE	
8.3.4.5 8.3.4.5a	Invalid configuration	
8.3.4.5b	Incompatible simultaneous reconfiguration	
8.3.4.6	Reception of the ACTIVE SET UPDATE COMPLETE message by the UTRAN	
8.3.4.7	Reception of the ACTIVE SET UPDATE COMPLETE message by the UTRAN	
8.3.4.8	Invalid ACTIVE SET UPDATE message	
8.3.4.9	Reception of an ACTIVE SET UPDATE message in wrong state	
8.3.5	Hard handover	
8.3.5.1	Timing re-initialised hard handover	
8.3.5.1.1	General	
8.3.5.1.2	Initiation	
8.3.5.2	Timing-maintained hard handover	
8.3.5.2.1	General	
8.3.5.2.2	Initiation	198
8.3.6	Inter-RAT handover to UTRAN	199
8.3.6.1	General	199
8.3.6.2	Initiation	
8.3.6.3	Reception of HANDOVER TO UTRAN COMMAND message by the UE	
8.3.6.4	Invalid Handover to UTRAN command message	203
8.3.6.4a	Unsupported configuration in HANDOVER TO UTRAN COMMAND message	
8.3.6.5	UE fails to perform handover	
8.3.6.6	Reception of message HANDOVER TO UTRAN COMPLETE by the UTRAN	
8.3.7	Inter-RAT handover from UTRAN	
8.3.7.1	General	
8.3.7.2	Initiation	
8.3.7.3	Reception of a HANDOVER FROM UTRAN COMMAND message by the UE	
8.3.7.4 8.3.7.5	Successful completion of the inter-RAT handover	
8.3.7.6	UE fails to complete requested handover Invalid HANDOVER FROM UTRAN COMMAND message	
8.3.7.7	Reception of an HANDOVER FROM UTRAN FAILURE message by UTRAN	
8.3.7.8	Unsupported configuration in HANDOVER FROM UTRAN COMMAND message	
8.3.7.8a	Reception of HANDOVER FROM UTRAN COMMAND message by UE in CELL_FACH	
8.3.8	Inter-RAT cell reselection to UTRAN	
8.3.8.1	General	
8.3.8.2	Initiation	
8.3.8.2a	Initiation of inter-RAT cell reselection from GERAN <i>Iu mode</i>	
8.3.8.3	UE fails to complete an inter-RAT cell reselection	
8 3 8 3a	LIE fails to complete an inter-RAT cell reselection from GERAN In mode	210

	The DAME of the Control of the Contr	210
8.3.9	Inter-RAT cell reselection from UTRAN	
8.3.9.1	General	
8.3.9.2	Initiation	
8.3.9.2a	Initiation of inter-RAT cell reselection to GERAN Iu mode	
8.3.9.3	Successful cell reselection.	
8.3.9.4	UE fails to complete an inter-RAT cell reselection.	
8.3.10	Inter-RAT cell change order to UTRAN	211
8.3.10.1	General	211
8.3.10.2	Initiation	211
8.3.10.3	UE fails to complete an inter-RAT cell change order	212
8.3.11	Inter-RAT cell change order from UTRAN	212
8.3.11.1	General	
8.3.11.2	Initiation	212
8.3.11.3	Reception of an CELL CHANGE ORDER FROM UTRAN message by the UE	
8.3.11.4	Successful completion of the cell change order	
8.3.11.5	Expiry of timer T309 or UE fails to complete requested cell change order	
8.3.11.6	Unsupported configuration in CELL CHANGE ORDER FROM UTRAN message	
8.3.11.7	Invalid CELL CHANGE ORDER FROM UTRAN message	
8.4	Measurement procedures	
8.4.0	Measurement related definitions	
8.4.1	Measurement control	
8.4.1.1	General	
8.4.1.1		
8.4.1.2 8.4.1.3	Initiation	
	Reception of MEASUREMENT CONTROL by the UE	
8.4.1.4	Unsupported measurement in the UE	
8.4.1.4a	Configuration Incomplete	
8.4.1.5	Invalid MEASUREMENT CONTROL message	
8.4.1.6	Measurements after transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_H	
8.4.1.6.1	Intra-frequency measurement	
8.4.1.6.2	Inter-frequency measurement	
8.4.1.6.3	Inter-RAT measurement	
8.4.1.6.4	Quality measurement	
8.4.1.6.5	UE internal measurement	
8.4.1.6.6	Traffic volume measurement	
8.4.1.6.7	UE positioning measurement	
8.4.1.6a	Actions in CELL_FACH/CELL_PCH/URA/PCH state upon cell re-selection	
8.4.1.7	Measurements after transition from CELL_FACH to CELL_DCH state	229
8.4.1.7.1	Intra-frequency measurement	229
8.4.1.7.2	Inter-frequency measurement	229
8.4.1.7.3	Inter-RAT measurement	
8.4.1.7.4	Traffic volume measurement	229
8.4.1.7.5	UE positioning measurement	
8.4.1.8	Measurements after transition from idle mode to CELL_DCH state	
8.4.1.8.1	Intra-frequency measurement	
8.4.1.8.2	Inter-frequency measurement	
8.4.1.8.3	Inter-RAT measurement	
8.4.1.8.4	Traffic volume measurement.	
8.4.1.8.5	UE positioning measurement	
8.4.1.9	Measurements after transition from idle mode to CELL_FACH state	
8.4.1.9.1		
	Intra-frequency measurement	
8.4.1.9.2	Inter-frequency measurement	
8.4.1.9.3	Inter-RAT measurement	
8.4.1.9.4	Traffic volume measurement.	
8.4.1.9.5	UE positioning measurement.	
8.4.1.9a	Measurements after transition from connected mode to idle mode	
8.4.1.9a.1	Intra-frequency measurement	
8.4.1.9a.2	1 7	
8.4.1.9a.3		
8.4.1.9a.4		
8.4.1.9b	Measurements after transition from CELL_FACH to CELL_PCH/URA_PCH	
8.4.1.9b.1	Traffic volume measurement	
8 / 1 9h 2	LIE positioning measurement	233

8.4.1.9c	Measurements after transition from CELL_PCH/URA_PCH to CELL_FACH	234
8.4.1.9c.1	Traffic volume measurement	234
8.4.1.9c.2	UE positioning measurement	234
8.4.1.10	Changes in measurement objects	234
8.4.1.10.1		
8.4.1.10.2	Quality measurement	235
8.4.1.10.3	Intra-frequency, Inter-frequency and Inter-RAT measurements	235
8.4.2	Measurement report	
8.4.2.1	General	
8.4.2.2	Initiation	236
8.4.3	Assistance Data Delivery	237
8.4.3.1	General	
8.4.3.2	Initiation	
8.4.3.3	Reception of ASSISTANCE DATA DELIVERY message by the UE	
8.4.3.4	Invalid ASSISTANCE DATA DELIVERY message	
8.5	General procedures	
8.5.1	Selection of initial UE identity	
8.5.2	Actions when entering idle mode from connected mode	
8.5.3	Open loop power control upon establishment of DPCCH	
8.5.4	Physical channel establishment criteria	
8.5.5	Actions in "out of service area" and "in service area"	
8.5.5.1	Detection of "out of service" area	
8.5.5.1.1	Actions following detection of "out of service" area in URA_PCH or CELL_PCH state	
8.5.5.1.2	Actions following detection of "out of service" area in CELL_FACH state	
8.5.5.1.3	Actions following detection of "out of service" area on transition from CELL_DCH to	
	URA_PCH or CELL_PCH	241
8.5.5.1.4	Actions following detection of "out of service" area on transition from CELL_DCH to CELL_FACH	241
8.5.5.2	Detection of "in service" area	
8.5.5.2.1	Actions following Re-entry into "in service area" in URA_PCH or CELL_PCH state	
8.5.5.2.2	Actions following re-entry into "in service area" in CELL_FACH state	
8.5.5.3	T316 expiry	
8.5.5.4	T317 expiry	
8.5.6	Radio link failure criteria and actions upon radio link failure	
8.5.7	Open loop power control	
8.5.8	Maintenance of Hyper Frame Numbers	
8.5.9	START value calculation.	
8.5.10	Integrity protection	
8.5.10.1	Integrity protection in downlink	
8.5.10.2	Integrity protection in uplink	
8.5.10.3	Calculation of message authentication code	
8.5.11	FACH measurement occasion calculation	
8.5.12	Establishment of Access Service Classes	
8.5.13	Mapping of Access Classes to Access Service Classes	
8.5.14	PLMN Type Selection	
8.5.14a	Neighbour cells list narrowing for cell reselection	
8.5.15	CFN calculation	
8.5.15.1	Initialisation for CELL_DCH state after state transition	
8.5.15.2	Initialisation in CELL_DCH state at hard handover	
8.5.15.3	Initialisation for CELL_FACH	
8.5.15.4	Initialisation after intersystem handover to UTRAN	
8.5.15.5	Initialisation for MTCH and/or MSCH carried on S-CCPCH that may be soft combined	
8.5.16	Configuration of CTCH occasions	
8.5.17	PRACH selection.	
8.5.18	Selection of RACH TTI	
8.5.18.1	FDD	
8.5.18.2	1.28 Mcps TDD	
8.5.19	Secondary CCPCH selection	
8.5.19a	Secondary CCPCH and FACH selection for MCCH reception	
8.5.20	Unsupported configuration	
8.5.21	Actions related to Radio Bearer mapping	
8 5 22	Actions when entering another RAT from connected mode	263

8.5.23	Measured results on RACH	
8.5.24	Change of PLMN while in RRC connected mode	
8.5.25	Actions related to HS_DSCH_RECEPTION variable	
8.5.26	Service prioritisation.	
8.5.27	MBMS frequency selection	
8.5.28	Actions related to E_DCH_TRANSMISSION variable	
8.6	Generic actions on receipt and absence of an information element	
8.6.1	CN information elements	
8.6.1.1	Void	
8.6.1.2	CN information info	
8.6.1.3	Signalling connection release indication	
8.6.2	UTRAN mobility information elements	
8.6.2.1	URA identity	
8.6.2.2	Mapping info	
8.6.3	UE information elements	
8.6.3.1	Activation time	
8.6.3.1a 8.6.3.1b	CN domain specific DRX cycle length coefficient	
8.6.3.2	UTRAN DRX Cycle length coefficient	
8.6.3.3	Generic state transition rules depending on received information elements	
8.6.3.4	Ciphering mode info	
8.6.3.5	Integrity protection mode info	
8.6.3.5.1	Initialisation of Integrity Protection	
8.6.3.5.2	Integrity Protection Re-configuration for SRNS Relocation and handover from GERAN Iu	270
0.0.0.0.2	mode	278
8.6.3.5.3	Integrity Protection modification in case of new keys or initialisation of signalling connection	
8.6.3.6	Void	280
8.6.3.7	Void	280
8.6.3.8	Integrity check info	280
8.6.3.9	New C-RNTI	280
8.6.3.9a	New DSCH-RNTI	281
8.6.3.10	New U-RNTI	
8.6.3.11	RRC transaction identifier	
8.6.3.12	Capability Update Requirement	
8.6.3.13	Group release information	
8.6.3.14	New E-RNTI	
8.6.4	Radio bearer information elements	
8.6.4.1	Signalling RB information to setup list	
8.6.4.2 8.6.4.2a	RAB information for setup	
8.6.4.3	RB information to setup	
8.6.4.4	RB information to be affected	
8.6.4.4a	RB information to change list	
8.6.4.5	RB information to reconfigure	
8.6.4.6	RB information to release	
8.6.4.7	RB with PDCP information	
8.6.4.8	RB mapping info	
8.6.4.9	RLC Info	
8.6.4.10	PDCP Info	
8.6.4.11	PDCP SN Info	298
8.6.4.12	NAS Synchronisation Indicator	298
8.6.4.13	PDCP context relocation info	299
8.6.4.14	RLC Info MBMS	
8.6.5	Transport channel information elements	
8.6.5.1	Transport Format Set	
8.6.5.2	Transport format combination set	
8.6.5.3	Transport format combination subset	
8.6.5.4	DCH quality target	
8.6.5.5	Added or Reconfigured UL TrCH information	
8.6.5.5a	Added or reconfigured MAC-d flow	
8.6.5.6	Added or Reconfigured DL TrCH information	
8.6.5.6a	Void	306

8.6.5.6b	HARQ Info	306
8.6.5.7	Deleted UL TrCH information	
8.6.5.8	Deleted DL TrCH information	
8.6.5.9	UL Transport channel information common for all transport channels	
8.6.5.10	DL Transport channel information common for all transport channels	
8.6.5.11	Void	
8.6.5.12	TFCS Reconfiguration/Addition Information	
8.6.5.12a	Additional RACH TFCS for CCCH	
8.6.5.13	TFCS Removal Information	
8.6.5.14	Void	
8.6.5.15	TFCS Explicit Configuration	
8.6.5.16	E-DCH Transmission Time Interval	
8.6.5.17	HARQ Info for E-DCH	
8.6.5.18	Added or reconfigured E-DCH MAC-d flow	
8.6.6	Physical channel information elements	
8.6.6.1	Frequency info	
8.6.6.2	Void	
8.6.6.2a	PNBSCH allocation	
8.6.6.3	Void	
8.6.6.3a	Downlink information per radio link list	
8.6.6.4		
8.6.6.5	Downlink information for each radio link	
	VoidUplink DPCH info	
8.6.6.6 8.6.6.7	Void	
8.6.6.8	Maximum allowed UL TX power	
8.6.6.9	Void	
8.6.6.10	Void	
8.6.6.11	Uplink DPCH power control info	
8.6.6.12	Secondary CPICH info	
8.6.6.13	Primary CPICH usage for channel estimation	
8.6.6.14	DPCH frame offset	
8.6.6.15	DPCH Compressed mode info	
8.6.6.16	Repetition period, Repetition length, Offset (TDD only)	
8.6.6.17	Primary CCPCH info	
8.6.6.18	Primary CPICH info	
8.6.6.19	Void	
8.6.6.20	Void	
8.6.6.21	Void	
8.6.6.22	Secondary Scrambling Code, Code Number	
8.6.6.23	PDSCH Power Control info	
8.6.6.24	Tx Diversity Mode	
8.6.6.25	Void	
8.6.6.26	UL Timing Advance Control (TDD only)	
8.6.6.26a	Uplink synchronisation parameters (TDD only)	
8.6.6.27	Downlink information common for all radio links	
8.6.6.28	Downlink DPCH info common for all radio links	
8.6.6.28a	Downlink F-DPCH info common for all radio links	
8.6.6.29	ASC setting	
8.6.6.30	SRB delay, PC preamble (FDD only)	
8.6.6.31	Void	331
8.6.6.32	Void	
8.6.6.33	HS-SCCH Info	
8.6.6.34	Measurement Feedback Info	
8.6.6.35	DPC Mode	
8.6.6.36	Downlink HS-PDSCH Information	
8.6.6.37	E-DCH Info	
8.6.7	Measurement information elements	
8.6.7.1	Measurement validity	
8.6.7.2	Filter coefficient	334
8.6.7.3	Intra-frequency/Inter-frequency/Inter-RAT cell info list	335
8.6.7.4	Intra-frequency measurement quantity	341
8675	Inter-RAT measurement quantity	3/11

8.6.7.6	Inter-RAT reporting quantity	
8.6.7.7	Cell Reporting Quantities	
8.6.7.8	Periodical Reporting Criteria	
8.6.7.9	Reporting Cell Status	
8.6.7.10	Traffic Volume Measurement	
8.6.7.11	Traffic Volume Measurement Reporting Criteria	
8.6.7.12	FACH measurement occasion info	
8.6.7.13	Measurement Reporting Mode	
8.6.7.14	Inter-frequency measurement	
8.6.7.15	Inter-RAT measurement	
8.6.7.16	Intra-frequency measurement	
8.6.7.17	Quality measurement	
8.6.7.18	UE internal measurement	
8.6.7.18a	Void	
8.6.7.19	UE positioning UE positioning reporting criteria	
8.6.7.19.0		
8.6.7.19.1 8.6.7.19.1	UE positioning reporting quantity UE positioning reporting for UE assisted methods	
8.6.7.19.1		
8.6.7.19.1		
8.6.7.19.2		
8.6.7.19.2	UE positioning GPS assistance data for UE-based	
8.6.7.19.4	UE positioning Ciphering info	
8.6.7.19.5	UE positioning Error	
8.6.7.19.6		
8.6.7.20	Void	
8.6.7.21	Intra-frequency reporting quantity for RACH reporting	
8.6.7.22	Additional Measurement List	
8.6.8	Void	
8.6.9	MBMS specific information elements	
8.6.9.1	Continue MCCH Reading	
8.6.9.1a	MBMS dynamic persistence level	
8.6.9.2	MBMS PL Service Restriction Information	
8.6.9.3	MBMS L1 combining schedule	
8.6.9.3a	MBMS Number of neighbour cells	
8.6.9.4	MBMS Preferred frequency information	
8.6.9.4a	Void	
8.6.9.4b	MBMS p-t-m activation time	363
8.6.9.5	MBMS RB list released to change transfer mode	
8.6.9.6	MBMS Required UE action	364
8.6.9.6a	MBMS re- acquire MCCH	365
8.6.9.7	MBMS Service transmissions info list	366
8.6.9.8	MBMS Short transmission ID	366
8.6.9.9	MBMS Transmission identity	
8.6.9.9a	MBMS transmission time difference	366
8.6.9.9b	MCCH configuration information	367
8.6.9.10	Next scheduling period	
8.7	MBMS specific procedures	
8.7.1	Reception of MBMS control information	
8.7.1.1	General	
8.7.1.2	Initiation	
8.7.1.3	UE requirements on reading of MCCH information	
8.7.1.4	UE requirements on reading of MSCH information	
8.7.2	MCCH acquisition	
8.7.2.1	General Little to an analysis of the second	
8.7.2.2	Initiation	
8.7.2.3	MCCH information to be acquired by the UE	370
8.7.2.4	Reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS	271
0725	UNMODIFIED SERVICES INFORMATION by the UE	
8.7.2.5	Reception of the other MBMS messages by the UE	
8.7.3 8.7.3.1	MBMS Notification	
0.7.3.1	Ouicial	

8.7.3.2	Initiation	372
8.7.3.3	Receiving the MBMS Notification information	372
8.7.3.3.1	Reception via MCCH	372
8.7.3.3.2	Void	373
8.7.3.3.3	Reception via DCCH	
8.7.3.4	UE action upon receiving MBMS MODIFIED SERVICES INFORMATION message	373
8.7.3.5	UE fails to receive MBMS Notification information	374
8.7.4	MBMS counting	374
8.7.4.1	General	374
8.7.4.2	Initiation	375
8.7.4.3	Reception of the MBMS ACCESS INFORMATION	375
8.7.4.4	Termination of the MBMS counting procedure	376
8.7.4.5	Failure of the counting response procedure	376
8.7.5	MBMS p-t-m radio bearer configuration	376
8.7.5.1	General	377
8.7.5.2	Initiation	
8.7.5.3	Reception of the MBMS Current Cell PTM RB information	
8.7.5.4	Reception of the MBMS Neighbouring Cell PTM RB information	
8.7.6	MBMS modification request	
8.7.6.1	General	
8.7.6.2	Initiation	
8.7.6.3	Reception of a MBMS MODIFICATION REQUEST message by the UTRAN	
8.7.7	MBMS service scheduling	
8.7.7.1	General	
8.7.7.2	Initiation	
8.7.7.3	Reception of the MBMS scheduling information	379
9 Ha	ndling of unknown, unforeseen and erroneous protocol data	379
	General	
9.2	ASN.1 violation or encoding error	
	Unknown or unforeseen message type	
	Unsolicited received message	
	Unexpected critical message extension	
	Unknown or unforeseen information element value, mandatory information element	
9.5	Conditional information element error	382
9.6	Unknown or unforeseen information element value, conditional information element	382
9.7	Unknown or unforeseen information element value, optional information element	383
9.8	Unexpected non-critical message extension	383
9.9	Handling of errors in nested information elements	384
10 Me	essage and information element functional definition and content	291
	General	
10.1 10.1.1	Protocol extensions Protocol extensions	
10.1.1	Non-critical extensions.	
10.1.1.1	Extension of an information element with additional values or choices	
10.1.1.1.2	Extension of a message with additional information elements	
10.1.1.2	Critical extensions	
10.1.1.2	Extension of an information element with additional values or choices	
10.1.1.2.1	Extension of a message with additional information elements	
	Radio Resource Control messages	
10.2.1	ACTIVE SET UPDATE	
10.2.2	ACTIVE SET UPDATE COMPLETE	
10.2.2	ACTIVE SET UPDATE FAILURE	
10.2.3	ASSISTANCE DATA DELIVERY	
10.2.4	CELL CHANGE ORDER FROM UTRAN	
10.2.6	CELL CHANGE ORDER FROM UTRAN FAILURE	
10.2.7	CELL UPDATE	
10.2.7	CELL UPDATE CONFIRM.	
10.2.9	COUNTER CHECK	
10.2.10	COUNTER CHECK RESPONSE	
10.2.11	DOWNLINK DIRECT TRANSFER	
10.2.12	Void	

10.2.13	Void	
10.2.14	Void	
10.2.15	HANDOVER FROM UTRAN COMMAND	399
10.2.16	HANDOVER FROM UTRAN FAILURE	401
10.2.16a	HANDOVER TO UTRAN COMMAND	402
10.2.16b	HANDOVER TO UTRAN COMPLETE	405
10.2.16c	INITIAL DIRECT TRANSFER	406
10.2.16d	INTER RAT HANDOVER INFO	407
10.2.16e	MBMS Access Information	408
10.2.16f	MBMS Common p-t-m rb Information	408
10.2.16g	MBMS Current Cell p-t-m rb Information	
10.2.16h	MBMS General Information	
10.2.16i	MBMS Modification request	
10.2.16j	MBMS Modified services Information.	
10.2.16k	MBMS Neighbouring Cell p-t-m rb Information	
10.2.16L	MBMS Scheduling Information	
10.2.16m	MBMS Unmodified services Information	
10.2.17	MEASUREMENT CONTROL	
10.2.17	MEASUREMENT CONTROL FAILURE	
10.2.19	MEASUREMENT REPORT	
10.2.19	PAGING TYPE 1	
10.2.21	PAGING TYPE 2	
10.2.22	PHYSICAL CHANNEL RECONFIGURATION	
10.2.23	PHYSICAL CHANNEL RECONFIGURATION COMPLETE	
10.2.24	PHYSICAL CHANNEL RECONFIGURATION FAILURE	
10.2.25	PHYSICAL SHARED CHANNEL ALLOCATION	
10.2.26	PUSCH CAPACITY REQUEST	
10.2.27	RADIO BEARER RECONFIGURATION	
10.2.28	RADIO BEARER RECONFIGURATION COMPLETE	
10.2.29	RADIO BEARER RECONFIGURATION FAILURE	
10.2.30	RADIO BEARER RELEASE	
10.2.31	RADIO BEARER RELEASE COMPLETE	
10.2.32	RADIO BEARER RELEASE FAILURE	
10.2.33	RADIO BEARER SETUP	
10.2.34	RADIO BEARER SETUP COMPLETE	
10.2.35	RADIO BEARER SETUP FAILURE	
10.2.36	RRC CONNECTION REJECT	447
10.2.37	RRC CONNECTION RELEASE	448
10.2.38	RRC CONNECTION RELEASE COMPLETE	449
10.2.39	RRC CONNECTION REQUEST	449
10.2.40	RRC CONNECTION SETUP	
10.2.41	RRC CONNECTION SETUP COMPLETE	
10.2.41a	RRC FAILURE INFO	
10.2.42	RRC STATUS	
10.2.43	SECURITY MODE COMMAND	
10.2.44	SECURITY MODE COMPLETE	
10.2.45	SECURITY MODE FAILURE	
10.2.46	SIGNALLING CONNECTION RELEASE	
10.2.47	SIGNALLING CONNECTION RELEASE INDICATION	
10.2.47	SYSTEM INFORMATION	
10.2.48	First Segment	
10.2.48.2	First Segment (short)	
10.2.48.3	Subsequent Segment	
10.2.48.4	Last Segment	
10.2.48.5	Last Segment (short)	
10.2.48.6	Complete SIB	
10.2.48.7	Complete SIB (short)	
10.2.48.8	System Information Blocks	
10.2.48.8.1	Master Information Block	
10.2.48.8.2	Scheduling Block 1	
10.2.48.8.3	Scheduling Block 2	
10.2.48.8.4	System Information Block type 1	463

10.2.48.8.5	System Information Block type 2	
10.2.48.8.6	System Information Block type 3	
10.2.48.8.7	System Information Block type 4	
10.2.48.8.8	System Information Block type 5 and 5bis	
10.2.48.8.9	System Information Block type 6	
10.2.48.8.10	System Information Block type 7	
10.2.48.8.11	Void	
10.2.48.8.12	Void	
10.2.48.8.13	Void	
10.2.48.8.14	System Information Block type 11	
10.2.48.8.15	System Information Block type 12	
10.2.48.8.16	System Information Block type 13	
10.2.48.8.16.1	System Information Block type 13.1	
10.2.48.8.16.2	System Information Block type 13.2	
10.2.48.8.16.3 10.2.48.8.16.4	System Information Block type 13.3	
10.2.48.8.17	System Information Block type 13.4 System Information Block type 14	
10.2.48.8.18	System Information Block type 14	
10.2.48.8.18.1	System Information Block type 15.1	
10.2.48.8.18.2	System Information Block type 15.1 System Information Block type 15.2	
10.2.48.8.18.3	System Information Block type 15.2 System Information Block type 15.3 System Informati	
10.2.48.8.18.4	System Information Block type 15.5 System Information Block type 15.4 System Informati	
10.2.48.8.19	System Information Block type 15.4 System Information Block type 16	
10.2.48.8.20	System Information Block type 17	
10.2.48.8.21	System Information Block type 17	
	STEM INFORMATION CHANGE INDICATION	
	ANSPORT CHANNEL RECONFIGURATION	
	ANSPORT CHANNEL RECONFIGURATION COMPLETE	
	ANSPORT CHANNEL RECONFIGURATION COMILETE	
	ANSPORT FORMAT COMBINATION CONTROL	
	ANSPORT FORMAT COMBINATION CONTROL	
	CAPABILITY ENQUIRY	
	CAPABILITY INFORMATION	
	CAPABILITY INFORMATION CONFIRM	
	LINK DIRECT TRANSFER	
	LINK PHYSICAL CHANNEL CONTROL	
	A UPDATE	
	A UPDATE CONFIRM	
	RAN MOBILITY INFORMATION	
	RAN MOBILITY INFORMATION CONFIRM	
	RAN MOBILITY INFORMATION FAILURE	
	ation element functional definitions	
	Information elements	
	CN domain identity	
	CN Domain System Information	
	CN Information info	
10.3.1.3a	CN Information info full	491
10.3.1.3b	Domain Specific Access Restriction	492
	Domain Specific Access Restriction Parameters	
	IMEI	
10.3.1.5	IMSI (GSM-MAP)	492
10.3.1.6	Intra Domain NAS Node Selector	493
10.3.1.7	Location Area Identification	494
	Multiple PLMN List	
10.3.1.8	NAS message	495
	NAS system information (GSM-MAP)	
	Paging record type identifier	
	PLMN identity	
	PLMN identity with Optional MCC	
	PLMN Type	
	P-TMSI (GSM-MAP)	
10.3.1.14	RAB identity	497

10.3.1.15	Routing Area Code	497
10.3.1.16	Routing Area Identification	
10.3.1.17	TMSI (GSM-MAP)	498
10.3.2	UTRAN mobility Information elements	498
10.3.2.1	Cell Access Restriction	498
10.3.2.2	Cell identity	498
10.3.2.3	Cell selection and re-selection info for SIB3/4	
10.3.2.4	Cell selection and re-selection info for SIB11/12	
10.3.2.5	Mapping Info	
10.3.2.6	URA identity	
10.3.3	UE Information elements	
10.3.3.1	Activation time	
10.3.3.2	Capability Update Requirement	
10.3.3.3	Cell update cause	
10.3.3.4	Ciphering Algorithm	
10.3.3.5	Ciphering mode info	
10.3.3.6	CN domain specific DRX cycle length coefficient	
10.3.3.7	Void	
10.3.3.8	C-RNTI	
10.3.3.9	Void	
10.3.3.9a	DSCH-RNTI	
10.3.3.10 10.3.3.10a	Void	
10.3.3.10a 10.3.3.11	E-RNTI Establishment cause	
10.3.3.11	Expiration Time Factor	
10.3.3.12	Failure cause	
10.3.3.14	Failure cause and error information	
10.3.3.14 10.3.3.14o	Group release information	
10.3.3.14a	H-RNTI	
10.3.3.14	Initial UE identity	
10.3.3.16	Integrity check info	
10.3.3.17	Integrity protection activation info	
10.3.3.18	Integrity protection Algorithm	
10.3.3.19	Integrity protection mode info	
10.3.3.19a	Void	
10.3.3.20	Void	
10.3.3.21	Measurement capability	
10.3.3.21a	Measurement capability extension	516
10.3.3.22	Paging cause	519
10.3.3.23	Paging record	519
10.3.3.24	PDCP capability	520
10.3.3.25	Physical channel capability	521
10.3.3.26	Protocol error cause	524
10.3.3.27	Protocol error indicator	525
10.3.3.28	RB timer indicator	525
10.3.3.29	Redirection info	
10.3.3.30	Re-establishment timer	525
10.3.3.31	Rejection cause	
10.3.3.32	Release cause	
10.3.3.32a	RF Capability Compressed	
10.3.3.33	RF capability FDD	
10.3.3.33a	RF capability FDD extension	
10.3.3.33b	RF capability TDD	
10.3.3.33c	RF capability TDD 1.28 Mcps	
10.3.3.34	RLC capability	
10.3.3.35	RLC re-establish indicator	
10.3.3.350	RRC connection release information	
10.3.3.35a	RRC State Indicator	
10.3.3.36	RRC transaction identifier	
10.3.3.37	Security capability	
10.3.3.38	STARTVoid	530

10.3.3.40	Transport channel capability	
10.3.3.41	UE multi-mode/multi-RAT capability	
10.3.3.42	UE radio access capability	
10.3.3.42o	UE radio access capability compressed	
10.3.3.42oa	UE radio access capability comp 2	
10.3.3.42a	UE radio access capability extension	
10.3.3.42b	UE security information	
10.3.3.42c	UE security information2	
10.3.3.43	UE Timers and Constants in connected mode	
10.3.3.44	UE Timers and Constants in idle mode	
10.3.3.45	UE positioning capability	
10.3.3.46	URA update cause	
10.3.3.47	U-RNTI	
10.3.3.47a 10.3.3.48	U-RNTI group U-RNTI Short	
10.3.3.48	UTRAN DRX cycle length coefficient	
10.3.3.49	Wait time	
10.3.3.51	UE Specific Behaviour Information 1 idle	
10.3.3.51	UE Specific Behaviour Information 1 interRAT	
10.3.3.2	Radio Bearer Information elements	
10.3.4.0	Default configuration identity	
10.3.4.1	Downlink RLC STATUS info	
10.3.4.1a	PDCP context relocation info	
10.3.4.2	PDCP info	
10.3.4.2a	PDCP ROHC target mode	
10.3.4.3	PDCP SN info	
10.3.4.4	Polling info	
10.3.4.5	Predefined configuration identity	
10.3.4.5a	Predefined configuration status information	
10.3.4.5b	Predefined configuration status information compressed	
10.3.4.6	Predefined configuration value tag	
10.3.4.7	Predefined RB configuration	547
10.3.4.8	RAB info	547
10.3.4.9	RAB info Post	
10.3.4.10	RAB information for setup	
10.3.4.11	RAB information to reconfigure	
10.3.4.12	NAS Synchronization indicator	
10.3.4.13	RB activation time info	
10.3.4.14	RB COUNT-C MSB information	
10.3.4.15	RB COUNT-C information	
10.3.4.16	RB identity	
10.3.4.17	RB information to be affected	
10.3.4.18	RB information to reconfigure	
10.3.4.19	RB information to release	
10.3.4.20 10.3.4.21	RB information to setup	
10.3.4.21	RB mapping infoRB with PDCP information	
10.3.4.22	RLC info	
10.3.4.23 10.3.4.23a	RLC info MBMS	
10.3.4.24	Signalling RB information to setup	
10.3.4.25	Transmission RLC Discard	
10.3.4.26	UM Duplication Avoidance and Reordering info	
10.3.4.27	UM Out of sequence delivery info	
10.3.4.27	Transport CH Information elements	
10.3.5.1	Added or Reconfigured DL TrCH information	
10.3.5.1a	Added or reconfigured MAC-d flow	
10.3.5.1b	Added or reconfigured E-DCH MAC-d flow	
10.3.5.2	Added or Reconfigured UL TrCH information	
10.3.5.2a	Additional Dynamic Transport Format Information for CCCH	
10.3.5.2b	Additional RACH TFCS for CCCH	
10.3.5.3	Void	
10.3.5.4	Deleted DL TrCH information	563

10.3.5.5	Deleted UL TrCH information	
10.3.5.6	DL Transport channel information common for all transport channels	
10.3.5.7	Void	
10.3.5.7a	HARQ Info	
10.3.5.7b	Void	
10.3.5.7c	MAC-d Flow Identity	
10.3.5.7d	HARQ Info for E-DCH	
10.3.5.7e	E-DCH MAC-d Flow Identity	
10.3.5.8	Power Offset Information	
10.3.5.9	Predefined TrCH configuration	
10.3.5.10	Quality Target	
10.3.5.11	Semi-static Transport Format Information	
10.3.5.12	Void	
10.3.5.13 10.3.5.14	TFCS Explicit Configuration	
10.3.5.14	TFCS Reconfiguration/Addition Information	
10.3.5.16	TFCS Removal Information	
10.3.5.17	Void	
10.3.5.17	Transport channel identity	
10.3.5.19	Transport Format Combination (TFC)	
10.3.5.20	Transport Format Combination (17 C)	
10.3.5.21	Transport Format Combination Set Identity	
10.3.5.22	Transport Format Combination Subset	
10.3.5.23	Transport Format Set	
10.3.5.24	UL Transport channel information common for all transport channels	
10.3.6	Physical CH Information elements	
10.3.6.1	AC-to-ASC mapping	
10.3.6.2	AICH Info	
10.3.6.3	AICH Power offset	
10.3.6.4	Allocation period info	575
10.3.6.5	Alpha	575
10.3.6.6	ASC setting	575
10.3.6.7	Void	
10.3.6.8	CCTrCH power control info	
10.3.6.8a	Cell and Channel Identity info	
10.3.6.9	Cell parameters Id	
10.3.6.10	Common timeslot info	
10.3.6.11	Constant value	
10.3.6.11a	Constant value TDD	
10.3.6.12	Void	
10.3.6.13	Void	
10.3.6.14	Void	
10.3.6.15	Void Default DPCH Offset Value	
10.3.6.16 10.3.6.17		
10.3.6.17 10.3.6.17a	Downlink channelisation codes	
10.3.6.17a	Downlink DPCH info common for all RL	
10.3.6.19	Downlink DPCH info common for all RL Post	
10.3.6.20	Downlink DPCH info common for all RL Pre	
10.3.6.21	Downlink DPCH info for each RL	
10.3.6.22	Downlink DPCH info for each RL Post	
10.3.6.23	Downlink DPCH power control information	
10.3.6.23oa	Downlink F-DPCH info common for all RL	
10.3.6.23ob	Downlink F-DPCH info for each RL	
10.3.6.23a	Downlink HS-PDSCH Information	
10.3.6.24	Downlink information common for all radio links	
10.3.6.25	Downlink information common for all radio links Post	
10.3.6.26	Downlink information common for all radio links Pre	
10.3.6.27	Downlink information for each radio link	
10.3.6.28	Downlink information for each radio link Post	
10.3.6.29	Void	591
10.3.6.30	Void	591

10.3.6.31	Downlink rate matching restriction information	
10.3.6.32	Downlink Timeslots and Codes	591
10.3.6.32a	Downlink Timeslots and Codes VHCR	592
10.3.6.33	DPCH compressed mode info	593
10.3.6.34	DPCH Compressed Mode Status Info	596
10.3.6.35	Dynamic persistence level	597
10.3.6.35a	FPACH info	597
10.3.6.35b	Frequency band indicator	597
10.3.6.35c	Frequency band indicator 2	597
10.3.6.36	Frequency info	598
10.3.6.3600	HS-PDSCH Midamble Configuration	598
10.3.6.360	HS-PDSCH Timeslot Configuration	598
10.3.6.36oa	HS-PDSCH Timeslot Configuration VHCR	599
10.3.6.36a	HS-SCCH Info	
10.3.6.36b	HS-SICH Power Control Info	604
10.3.6.37	Individual timeslot info	
10.3.6.38	Individual Timeslot interference	604
10.3.6.39	Maximum allowed UL TX power	605
10.3.6.40	Void	
10.3.6.40a	Measurement Feedback Info	605
10.3.6.41	Midamble shift and burst type	
10.3.6.42	PDSCH Capacity Allocation info	607
10.3.6.43	Void	607
10.3.6.44	PDSCH info	607
10.3.6.45	PDSCH Power Control info	608
10.3.6.46	PDSCH system information	
10.3.6.47	Void	609
10.3.6.48	Persistence scaling factors	
10.3.6.49	PICH Info	
10.3.6.50	PICH Power offset	611
10.3.6.50a	PLCCH Info	611
10.3.6.51	PRACH Channelisation Code List	611
10.3.6.51a	PRACH Channelisation Code 1.28 Mcps TDD	
10.3.6.51b	PRACH Channelisation Code List VHCR	
10.3.6.52	PRACH info (for RACH)	612
10.3.6.53	PRACH partitioning	
10.3.6.54	PRACH power offset	
10.3.6.55	PRACH system information list	
10.3.6.56	Predefined PhyCH configuration	616
10.3.6.57	Primary CCPCH info	
10.3.6.58	Primary CCPCH info post	
10.3.6.59	Primary CCPCH TX Power	
10.3.6.60	Primary CPICH info	
10.3.6.61	Primary CPICH Tx power	
10.3.6.62	Primary CPICH usage for channel estimation	
10.3.6.63	PUSCH info	
10.3.6.63a	PUSCH info VHCR	
10.3.6.64	PUSCH Capacity Allocation info	
10.3.6.65	PUSCH power control info	
10.3.6.66	PUSCH system information	
10.3.6.66a	PUSCH system information VHCR	
10.3.6.67	RACH transmission parameters	
10.3.6.68	Radio link addition information	
10.3.6.69	Radio link removal information	
10.3.6.69a	E-DCH reconfiguration information	
10.3.6.70	Void	
10.3.6.70a	SCTD indicator	
10.3.6.71	Secondary CCPCH info	
10.3.6.71a	Secondary CCPCH info MBMS	
10.3.6.72	Secondary CCPCH system information	
10.3.6.72a	Secondary CCPCH system information MBMS	
10.3.6.73	Secondary CPICH info	630

10.3.6.74	Secondary scrambling code	630
10.3.6.74a	Serving HS-DSCH cell information	631
10.3.6.75	SFN Time info	631
10.3.6.75a	Special Burst Scheduling	631
10.3.6.76	Void	631
10.3.6.77	Void	631
10.3.6.78	STTD indicator	631
10.3.6.78a	SYNC_UL info	632
10.3.6.79	TDD open loop power control	632
10.3.6.80	TFC Control duration	633
10.3.6.81	Void	633
10.3.6.82	TGPSI	633
10.3.6.83	Time info	634
10.3.6.84	Timeslot number	634
10.3.6.85	TPC combination index	634
10.3.6.85a	TSTD indicator	634
10.3.6.86	TX Diversity Mode	634
10.3.6.87	UL interference	635
10.3.6.87a	UL interference TDD	635
10.3.6.88	Uplink DPCH info	636
10.3.6.89	Uplink DPCH info Post	638
10.3.6.90	Uplink DPCH info Pre	638
10.3.6.91	Uplink DPCH power control info	639
10.3.6.92	Uplink DPCH power control info Post	
10.3.6.93	Uplink DPCH power control info Pre	641
10.3.6.94	Uplink Timeslots and Codes	642
10.3.6.94a	Uplink Timeslots and Codes LCR	643
10.3.6.94b	Uplink Timeslots and Codes VHCR	
10.3.6.95	Uplink Timing Advance	646
10.3.6.95a	Extended Uplink Timing Advance	
10.3.6.96	Uplink Timing Advance Control	
10.3.6.97	E-DCH Info	
10.3.6.98	E-DPCCH Info	
10.3.6.99	E-DPDCH Info	
10.3.6.100	E-AGCH Info	
10.3.6.101	E-HICH Info	
10.3.6.102	E-RGCH Info	
10.3.7	Measurement Information elements	
10.3.7.1	Additional measurements list	
10.3.7.2	Cell info	
10.3.7.3	Cell measured results	
10.3.7.4	Cell measurement event results	
10.3.7.5	Cell reporting quantities	
10.3.7.6	Cell synchronisation information	
10.3.7.7	Event results	
10.3.7.8	FACH measurement occasion info	
10.3.7.9	Filter coefficient	
10.3.7.10	HCS Cell re-selection information	
10.3.7.11	HCS neighbouring cell information	
10.3.7.12	HCS Serving cell information	
10.3.7.13	Inter-frequency cell info list	
10.3.7.14	Inter-frequency event identity	
10.3.7.15 10.3.7.16	Inter-frequency measured results list	
10.3.7.16	Inter-frequency measurement Inter-frequency measurement event results	
10.3.7.17	Inter-frequency measurement quantity	
10.3.7.18	Inter-frequency measurement reporting criteria	
10.3.7.19	Inter-frequency measurement system information	
10.3.7.20 10.3.7.20a	Inter-frequency RACH reporting information	
10.3.7.20a	Inter-frequency reporting quantity	
10.3.7.21	Inter-frequency SET UPDATE	
10.3.7.22	Inter-RAT cell info list	

10.3.7.24	Inter-RAT event identity	
10.3.7.25	Inter-RAT info	
10.3.7.26	Inter-RAT measured results list	
10.3.7.27	Inter-RAT measurement	
10.3.7.28	Inter-RAT measurement event results	
10.3.7.29	Inter-RAT measurement quantity	
10.3.7.30	Inter-RAT measurement reporting criteria	
10.3.7.31	Inter-RAT measurement system information	
10.3.7.32	Inter-RAT reporting quantity	
10.3.7.33	Intra-frequency cell info list	
10.3.7.34	Intra-frequency event identity	
10.3.7.35	Intra-frequency measured results list	
10.3.7.36	Intra-frequency measurement	
10.3.7.37	Intra-frequency measurement event results	
10.3.7.38	Intra-frequency measurement quantity	
10.3.7.39	Intra-frequency measurement reporting criteria	
10.3.7.40	Intra-frequency measurement system information	
10.3.7.41	Intra-frequency reporting quantity	
10.3.7.42	Intra-frequency reporting quantity for RACH reporting	
10.3.7.43	Maximum number of reported cells on RACH	
10.3.7.43a	MBMS preferred frequency information	
10.3.7.44	Measured results	
10.3.7.45	Measured results on RACH	
10.3.7.46	Measurement Command	
10.3.7.47	Measurement control system information	
10.3.7.48	Measurement Identity	
10.3.7.49	Measurement reporting mode	
10.3.7.50	Measurement Type	
10.3.7.51	Measurement validity	
10.3.7.52	Void	
10.3.7.53	Periodical reporting criteria	
10.3.7.53aa	Periodical reporting info-1b	
10.3.7.53a	PLMN identities of neighbour cells	
10.3.7.54	Qhes	
10.3.7.54a 10.3.7.55	Quality measured results list	
10.3.7.56	Quality measurement	
10.3.7.57	Quality measurement event results	
10.3.7.58	Quality measurement reporting criteria	
10.3.7.59	Quality reporting quantity	
10.3.7.60	Reference time difference to cell	
10.3.7.61	Reporting Cell Status	
10.3.7.62	Reporting information for state CELL_DCH	
10.3.7.63	SFN-SFN observed time difference	
10.3.7.64	Time to trigger	
10.3.7.65	Times to trigger Timeslot ISCP info.	
10.3.7.66	Traffic volume event identity	
10.3.7.67	Traffic volume measured results list	
10.3.7.68	Traffic volume measurement	
10.3.7.69	Traffic volume measurement event results	
10.3.7.70	Traffic volume measurement object	
10.3.7.71	Traffic volume measurement quantity	
10.3.7.72	Traffic volume measurement reporting criteria	
10.3.7.73	Traffic volume measurement system information	
10.3.7.74	Traffic volume reporting quantity	
10.3.7.75	UE internal event identity	
10.3.7.76	UE internal measured results	
10.3.7.77	UE internal measurement	
10.3.7.78	UE internal measurement event results	700
10.3.7.79	UE internal measurement quantity	
10.3.7.80	UE internal measurement reporting criteria	
10.3.7.81	Void	702

10.3.7.82	UE Internal reporting quantity	
10.3.7.83	UE Rx-Tx time difference type 1	702
10.3.7.84	UE Rx-Tx time difference type 2	703
10.3.7.85	UE Transmitted Power info	
10.3.7.86	UE positioning Ciphering info	703
10.3.7.87	UE positioning Error	
10.3.7.88	UE positioning GPS acquisition assistance	
10.3.7.88a	UE positioning GPS Additional Assistance Data Request	706
10.3.7.89	UE positioning GPS almanac	707
10.3.7.90	UE positioning GPS assistance data	707
10.3.7.90a	Void	
10.3.7.91	UE positioning GPS DGPS corrections	
10.3.7.91a	UE positioning GPS Ephemeris and Clock Correction parameters	709
10.3.7.92	UE positioning GPS ionospheric model	
10.3.7.93	UE positioning GPS measured results	
10.3.7.94	UE positioning GPS navigation model	
10.3.7.95	UE positioning GPS real-time integrity	
10.3.7.95a	Void	
10.3.7.96	UE positioning GPS reference time	
10.3.7.97	UE positioning GPS UTC model	714
10.3.7.98	UE positioning IPDL parameters	
10.3.7.99	UE positioning measured results	
10.3.7.100	UE positioning measurement	
10.3.7.101	UE positioning measurement event results	
10.3.7.102	Void	
10.3.7.103	UE positioning OTDOA assistance data for UE-assisted	
10.3.7.103a	UE positioning OTDOA assistance data for UE-based	
10.3.7.104	Void	
10.3.7.105	UE positioning OTDOA measured results	
10.3.7.106	UE positioning OTDOA neighbour cell info	
10.3.7.106a	UE positioning OTDOA neighbour cell info for UE-based	
10.3.7.107	UE positioning OTDOA quality	
10.3.7.108	UE positioning OTDOA reference cell info	
10.3.7.108a	UE positioning OTDOA reference cell info for UE-based	
10.3.7.109	UE positioning position estimate info	
10.3.7.109a	UE positioning Relative Time Difference quality	
10.3.7.110	UE positioning reporting criteria	
10.3.7.111	UE positioning reporting quantity	
10.3.7.112	T _{ADV} info	726
10.3.8	Other Information elements	
10.3.8.1	BCCH modification info	
10.3.8.2	BSIC	
10.3.8.3	CBS DRX Level 1 information	
10.3.8.4	Cell Value tag	
10.3.8.4a	Ellipsoid point	
10.3.8.4b	Ellipsoid point with Altitude	
10.3.8.4c	Ellipsoid point with Altitude and uncertainty ellipsoid	
10.3.8.4d	Ellipsoid point with uncertainty Circle	
10.3.8.4e	Ellipsoid point with uncertainty Ellipse	
10.3.8.4f	GERAN system information	
10.3.8.4g	GSM Target Cell Info	
10.3.8.4h	Horizontal Velocity	
10.3.8.4i	Horizontal with Vertical Velocity	
10.3.8.4j	Horizontal Velocity with Uncertainty	
10.3.8.4k	Horizontal with Vertical Velocity and Uncertainty	
10.3.8.5	Inter-RAT change failure	
10.3.8.6	Inter-RAT handover failure	
10.3.8.7	Inter-RAT UE radio access capability	
10.3.8.8	Void	
10.3.8.8a 10.3.8.9	Inter-RAT UE security capability	
10.3.8.9	MIB Value tag	/30

10.3.8.10	PLMN Value tag	
10.3.8.10a	PNBSCH allocation	
10.3.8.11	Predefined configuration identity and value tag	
10.3.8.12	Protocol error information	
10.3.8.13	References to other system information blocks	
10.3.8.14	References to other system information blocks and scheduling blocks	
10.3.8.15	Rplmn information	
10.3.8.16	Scheduling information	
10.3.8.17	SEG COUNT	
10.3.8.18	Segment index	
10.3.8.18a	SIB and SB type	
10.3.8.19	SIB data fixed	
10.3.8.20	SIB data variable	
10.3.8.20a	SIB occurrence identity	
10.3.8.20b	SIB occurrence identity and value tag	
10.3.8.20c	SIB occurrence value tag	
10.3.8.21	SIB type	
10.3.8.22	SIB type SIBs only	
10.3.9	ANSI-41 Information elements	
10.3.9.1	ANSI-41 Core Network Information	
10.3.9.2	ANSI-41 Global Service Redirection information	
10.3.9.3	ANSI-41 NAS parameter	
10.3.9.4	ANSI-41 NAS system information	
10.3.9.5 10.3.9.6	ANSI-41 Private Neighbour List information	
10.3.9.0	ANSI-41 KAND Information ANSI-41 User Zone Identification information	
10.3.9.7	MIN_P_REV	
10.3.9.9	NID	
10.3.9.10	P_REV	
10.3.9.11	SID	
10.3.9a	MBMS Information elements	
10.3.9a.1	MBMS Common CCTrCH identity	
10.3.9a.2	MBMS Common PhyCh identity	
10.3.9a.3	MBMS Common RB identity	
10.3.9a.4	MBMS Common TrCh identity	
10.3.9a.5	MBMS Current cell S-CCPCH identity	746
10.3.9a.6	Void	746
10.3.9a.7	MBMS L1 combining schedule	747
10.3.9a.7o	MBMS p-t-m activation time	747
10.3.9a.7a	MBMS p-t-m RB information	748
10.3.9a.8	MBMS Service identity	749
10.3.9a.8a	MBMS Service ID	
10.3.9a.9	MBMS Session identity	
10.3.9a.10	MBMS Short transmission identity	
10.3.9a.10	6 6	
10.3.9a.11	MBMS specific timers and counters	
10.3.9a.12	MBMS Transmission identity	
10.3.9a.13	MCCH configuration information	
10.3.9a.14	MICH configuration information	
10.3.9a.15	MICH Power offset	
10.3.9a.16	MSCH configuration information	
10.3.10	Multiplicity values and type constraint values	
11 Me	ssage and Information element abstract syntax (with ASN.1)	758
	General	
	General message structure	
	PDU definitions	
	Information element definitions	
	Constant definitions	
11.5	RRC information between network nodes	1015
12 Me	ssage transfer syntax	1032
1710	55450 transion by man	1032

12.1	Structure of encoded RRC messages	
12.1.1	Basic production	
12.1.2	Extension	
12.1.3	Padding	
12.2	ECN link module for RRC	
12.3	ECN modules for RRC	
12.4	RRC messages encoded otherwise	
12.4.1	Messages using tabular encoding specification	
12.4.1.1	TRANSPORT FORMAT COMBINATION CONTROL using transparent DCCH	
12.4.1.1.		
12.4.1.1.		
12.4.1.1.	3 Void	103/
13 P1	rotocol timers, counters, other parameters and default configurations	1038
13.1	Timers for UE.	1038
13.2	Counters for UE	1039
13.3	UE constants and parameters	1040
13.4	UE variables	1040
13.4.ob	AM_RLC_ERROR_PENDING_RB234	1040
13.4.oc	AM_RLC_ERROR_PENDING_RB5_AND_UP	
13.4.0	CELL_INFO_LIST	
13.4.00	Void	
13.4.0a	CELL_UPDATE_STARTED	
13.4.1	CIPHERING_STATUS	
13.4.2	Void	
13.4.2a	CONFIGURATION_INCOMPLETE	
13.4.3	C_RNTI	
13.4.3o	DSAC_PARAM	
13.4.3a	DSCH_RNTI	
13.4.4	Void	
13.4.4o	E_DCH_TRANSMISSION	
13.4.4a	E_RNTI	
13.4.5	ESTABLISHED_RABS	
13.4.5a	ESTABLISHED_SIGNALLING_CONNECTIONS	
13.4.6	ESTABLISHMENT_CAUSE	
13.4.7	FAILURE_CAUSE	
13.4.8	FAILURE_INDICATOR	
13.4.8o 13.4.8oo	H_RNTI	
	HS_DSCH_RECEPTIONINCOMPATIBLE_SECURITY_RECONFIGURATION	
13.4.8a 13.4.9	INCOMPATIBLE_SECURITY_RECONFIGURATIONINITIAL_UE_IDENTITY	
13.4.9 13.4.9a	INTIAL_UE_IDENTITY INTEGRITY PROTECTION ACTIVATION INFO	
13.4.10	INTEGRITY PROTECTION INFOINTEGRITY PROTECTION INFO	
13.4.10 13.4.10a		
13.4.10a	INVALID_CONFIGURATION	
13.4.11a	LATEST_CONFIGURED_CN_DOMAIN	
13.4.11b	LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE	
13.4.11c	MBMS_ACTIVATED_services	
13.4.11d		
13.4.11	MEASUREMENT_IDENTITY	
13.4.13	Void	
13.4.14	ORDERED RECONFIGURATION	
13.4.14a	PDCP_ROHC_TARGET_MODE.	
13.4.15	PDCP SN INFO	
13.4.15a		
13.4.16	PROTOCOL_ERROR_INDICATOR	
13.4.17	PROTOCOL_ERROR_INFORMATION	
13.4.18	PROTOCOL_ERROR_REJECT	
13.4.19	RB_TIMER_INDICATOR	
13.4.20	RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO	
13.4.20a	SECURITY_MODIFICATION	
13.4.21	Void	1054

13.4.22	START_THRESHOLD	
13.4.23	START_VALUE_TO_TRANSMIT	
13.4.24	TFC_SUBSET	
13.4.25	TGPS_IDENTITY	
13.4.26	TGSN_REPORTED	
13.4.26a	TIMERS_AND_CONSTANTS	
13.4.27	TRANSACTIONS	
13.4.27a	TRIGGERED_1A_EVENT	
13.4.27b	TRIGGERED_1B_EVENT	
13.4.27c	TRIGGERED_1C_EVENT	
13.4.27d	BEST_CELL_1D_EVENT	
13.4.27e	TRIGGERED_1E_EVENT	
13.4.27f	TRIGGERED_1F_EVENT	
13.4.27f1 13.4.27f2	TRIGGERED_1G_EVENT	
13.4.27f3	TRIGGERED_1H_EVENTTRIGGERED_1I_EVENT	
13.4.27f4	BEST_FREQUENCY_2A_EVENT	
13.4.27f5	TRIGGERED_2B_EVENT	
13.4.27f6	TRIGGERED_2C_EVENT	
13.4.27f7	TRIGGERED 2D EVENT	
13.4.27f8	TRIGGERED 2E EVENT	
13.4.27f9	TRIGGERED_2F_EVENT	
13.4.27f10		
13.4.27f1		
13.4.27f1		
13.4.27f1		
13.4.27f1		
13.4.27f1:		
13.4.27f1	6 TRIGGERED_6C_EVENT	1064
13.4.27f1	7 TRIGGERED_6D_EVENT	1064
13.4.27f1	8 TRIGGERED_6E_EVENT	1065
13.4.27f19	9 TRIGGERED_6F_EVENT	1065
13.4.27f20		
13.4.27f2	- -	
13.4.27g	UE_CAPABILITY_REQUESTED	
13.4.28	UE_CAPABILITY_TRANSFERRED	
13.4.28a	UE_POSITIONING_GPS_DATA	
13.4.28b	UE_POSITIONING_OTDOA_DATA_UE_ASSISTED	
13.4.28c	UE_POSITIONING_OTDOA_DATA_UE_BASED	
13.4.29	UNSUPPORTED_CONFIGURATION	
13.4.30	URA_IDENTITY	
13.4.31	U_RNTI	
13.4.32	VALUE_TAG	
13.5	UE RRC Procedure Performance	
13.5.1 13.5.2	Definitions	
13.5.2	RRC procedure performance values	1077
13.6a	RB information parameters for SHCCH	
13.6b	RB information parameters for BCCH mapped to FACH	
13.6c	RB information parameters for PCCH mapped to PCH	
13.6d	Parameters for BCCH mapped to BCH	
13.7	Parameter values for default radio configurations	
14 Sp	ecific functions	1146
14.1	Intra-frequency measurements	
14.1.1	Intra-frequency measurement quantities	
14.1.2	Intra-frequency reporting events for FDD	
14.1.2.1	Reporting event 1A: A Primary CPICH enters the reporting range	
14.1.2.2	Reporting event 1B: A primary CPICH leaves the reporting range	
14.1.2.3	Reporting event 1C: A non-active primary CPICH becomes better than an active primary CPICH	
14.1.2.4	Reporting event 1D: Change of best cell	
14 1 2 5	Reporting event 1E: A Primary CPICH becomes better than an absolute threshold	1156

14.1.2.6	Reporting event 1F: A Primary CPICH becomes worse than an absolute threshold	1157
14.1.2.7	Reporting event 1J: A non-active E-DCH but active DCH primary CPICH becomes better than	
	an active E-DCH primary CPICH	
14.1.3	Intra-frequency reporting events for TDD	1162
14.1.3.1	Reporting event 1G: Change of best cell (TDD)	
14.1.3.2	Reporting event 1H: Timeslot ISCP below a certain threshold (TDD)	1163
14.1.3.3	Reporting event 1I: Timeslot ISCP above a certain threshold (TDD)	
14.1.4	Event-triggered periodic intra-frequency measurement reports (informative)	1166
14.1.4.1	Cell addition failure (FDD only)	1166
14.1.4.1a	Cell removal failure (FDD only)	1167
14.1.4.2	Cell replacement failure (FDD only)	1168
14.1.5	Mechanisms available for modifying intra-frequency measurement reporting behaviour	
	(informative)	1168
14.1.5.1	Hysteresis	1168
14.1.5.2	Time-to-trigger	1169
14.1.5.3	Cell individual offsets	1170
14.1.5.4	Forbid a Primary CPICH to affect the reporting range (FDD only)	1171
14.1.6	Report quantities in intra-frequency measurements	1172
14.2	Inter-frequency measurements	1173
14.2.0a	Inter-frequency measurement quantities	1173
14.2.0b	Frequency quality estimate	1173
14.2.0b.1	FDD cells	1173
14.2.0b.2	TDD cells	1174
14.2.0c	Inter-frequency reporting quantities	1174
14.2.1	Inter-frequency reporting events	1175
14.2.1.1	Event 2a: Change of best frequency	1175
14.2.1.2	Event 2b: The estimated quality of the currently used frequency is below a certain threshold and	l
	the estimated quality of a non-used frequency is above a certain threshold	1176
14.2.1.3	Event 2c: The estimated quality of a non-used frequency is above a certain threshold	1177
14.2.1.4	Event 2d: The estimated quality of the currently used frequency is below a certain threshold	1178
14.2.1.5	Event 2e: The estimated quality of a non-used frequency is below a certain threshold	1179
14.2.1.6	Event 2 f: The estimated quality of the currently used frequency is above a certain threshold	1180
14.3	Inter-RAT measurements	1181
14.3.0a	Inter-RAT measurement quantities	1181
14.3.0b	Frequency quality estimate of the UTRAN frequency	1182
14.3.0c	Inter-RAT reporting quantities	1182
14.3.1	Inter-RAT reporting events	1182
14.3.1.1	Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain	
	threshold and the estimated quality of the other system is above a certain threshold	
14.3.1.2	Event 3b: The estimated quality of other system is below a certain threshold	1185
14.3.1.3	Event 3c: The estimated quality of other system is above a certain threshold	1186
14.3.1.4	Event 3d: Change of best cell in other system	1187
14.3.2	GSM measurements in compressed mode	1189
14.3.2.1	GSM RSSI measurements	1189
14.3.2.2	Initial BSIC identification	1189
14.3.2.3	BSIC re-confirmation	1189
14.4	Traffic Volume Measurements	1189
14.4.1	Traffic Volume Measurement Quantity	1189
14.4.2	Traffic Volume reporting triggers	1190
14.4.2.1	Reporting event 4 A: Transport Channel Traffic Volume becomes larger than an absolute	
	threshold	1194
14.4.2.2	Reporting event 4 B: Transport Channel Traffic Volume becomes smaller than an absolute	
	threshold	1194
14.4.3	Traffic volume reporting mechanisms	1195
14.4.3.1	Pending time after trigger	
14.4.3.2	Time-to-trigger	
14.4.4	Interruption of user data transmission	
14.5	Quality Measurements	
14.5.1	Quality reporting measurement quantities	
14.5.2	Quality reporting events	
14.5.2.1	Reporting event 5A: A predefined number of bad CRCs is exceeded	
14.6	UE internal measurements	

14.6.1	UE internal measurement quantities	
14.6.2	UE internal measurement reporting events	
14.6.2.1	Reporting event 6A: The UE Tx power becomes larger than an absolute threshold	
14.6.2.2	Reporting event 6B: The UE Tx power becomes less than an absolute threshold	
14.6.2.3	Reporting event 6C: The UE Tx power reaches its minimum value	
14.6.2.4	Reporting event 6D: The UE Tx power reaches its maximum value	
14.6.2.5	Reporting event 6E: The UE RSSI reaches the UE's dynamic receiver range	.1201
14.6.2.6	Reporting event 6F (FDD): The UE Rx-Tx time difference for a RL included in the active set	
	becomes larger than an absolute threshold	.1201
14.6.2.6a	Reporting event 6F (1.28 Mcps TDD): The time difference indicated by T_{ADV} becomes larger	
44 6 0 7	than an absolute threshold	.1202
14.6.2.7	Reporting event 6G: The UE Rx-Tx time difference for a RL included in the active set becomes	4.000
1.4.7	less than an absolute threshold	
14.7	UE positioning measurements	
14.7.1	UE positioning measurement quantities	
14.7.2	Void	
14.7.3	UE positioning reporting events	
14.7.3.1	Reporting Event 7a: The UE position changes more than an absolute threshold	
14.7.3.2	Reporting Event 7b: SFN-SFN measurement changes more than an absolute threshold	
14.7.3.3	Reporting Event 7c: GPS time and SFN time have drifted apart more than an absolute threshold	
14.8	Void	
14.9 14.9.1	Downlink power control	
14.9.1	Downlink power control in compressed mode	
14.10	Calculated Transport Format Combination	
14.10.1	Default TFCS for MBMS	
14.10.1	S-CCPCH configuration including a FACH carrying MSCH	
14.10.1.1	S-CCPCH configuration not including a FACH carrying MSCH	
14.11	UE autonomous update of virtual active set on non-used frequency (FDD only)	
14.11.1	Initial virtual active set	
14.11.2	Virtual active set update during an inter-frequency measurement	
14.12	Provision and reception of RRC information between network nodes	
14.12.0	General	
14.12.0a	General error handling for RRC messages exchanged between network nodes	
14.12.1	RRC Information to target RNC	
14.12.2	RRC information, target RNC to source RNC	
14.12.3	Void	
14.12.4	RRC messages exchanged between network nodes	.1213
14.12.4.0	HANDOVER TO UTRAN COMMAND	
14.12.4.0	INTER RAT HANDOVER INFO	.1213
14.12.4.1	INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITIES	.1213
14.12.4.2	SRNS RELOCATION INFO	.1214
14.12.4.3	Void	
14.12.4.4	RFC 3095 CONTEXT INFO	.1227
14.13	Void	.1230
14.14	Void	.1230
	(informative): USIM parameters	
A.1	Introduction	
A.2	Ciphering information	
A.3	Frequency information	
A.4	Multiplicity values and type constraint values	.1232
Anney R	(informative): Description of RRC state transitions	1233
B.1	RRC states and state transitions including GSM	
B.2	Transition from Idle Mode to UTRA RRC Connected Mode	
B.2.1	Transitions for Emergency Calls	
B.3	UTRA RRC Connected Mode States and Transitions.	
в.з В.3.1	CELL DCH state	
B.3.1.1	Transition from CELL DCH to Idle Mode	
B.3.1.1	Transition from CELL_DCH to CELL_FACH state	
B 3 1 3		1234

Listory			
Annex 1	E (informative):	Change history	1245
Annex D (Normative):		Implementation of Domain Specific Access Control (DSAC) in UI 3GPP Release 5	
C.2	Examples of the me	thodology	1241
C.1		d 11	
G 1	75 CT 1.1	message	
Annex	C (informative):	Description for the Compressed Coding of Pre-defined configurations included in the INTER RAT HANDOVER INFO	1041
			1240
B.6.2		over GSM / BSS to UTRAN	
в.о В.б.1		over UTRAN to GSM / BSS	
в.э В.б		with PS domain services with simultaneous PS and CS domain services.	
в.4 В.5		with PS domain services	
в.з.з В.4		with CS domain services	
B.3.4.5 B.3.5		itions for Cell Reselection in URA_PCH, CELL_PCH, and CELL_FACH	
B.3.4.4 B.3.4.5		ments (URA_PCH)update of system information (URA_PCH)	
B.3.4.3		tion mobility tasks (URA_PCH)	
B.3.4.2		rce Allocation Tasks (URA_PCH)	
B.3.4.1		om URA_PCH State to CELL_FACH State (URA_PCH)	
B.3.4	URA_PCH State		
B.3.3.5		update of system information (CELL_PCH)	
B.3.3.4		ments (CELL_PCH)	
B.3.3.3	RRC Connection mobility tasks (CELL_PCH)		
B.3.3.2	Radio Resource Allocation Tasks (CELL_PCH)		
B.3.3.1		om CELL_PCH to CELL_FACH state	
B.3.3		e	
B.3.2.8		update of system information (CELL_FACH)	
B.3.2.7		ments (CELL_FACH)	
B.3.2.6		tion mobility tasks (CELL_FACH)	
B.3.2.5		rce Allocation Tasks (CELL_FACH)	
B.3.2.4	Transition from	om CELL_FACH to URA_PCH State	1235
B.3.2.3	Transition from	om CELL_FACH to Idle Mode	1235
B.3.2.2	Transition from	om CELL_FACH to CELL_PCH state	1235
B.3.2.1	Transition from	om CELL_FACH to CELL_DCH state	1235
B.3.2	CELL_FACH st	ate	1235
B.3.1.8	Acquisition of system information (CELL_DCH)		
B.3.1.7	UE Measurements (CELL_DCH)		
B.3.1.6		tion mobility tasks (CELL_DCH)	
B.3.1.5	Radio Resource Allocation tasks (CELL_DCH)		
B.3.1.4	Transition from	om CELL DCH to URA PCH state	1234

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the Radio Resource Control protocol for the UE-UTRAN radio interface.

The scope of the present document also includes:

- the information to be transported in a transparent container between source RNC and target RNC in connection with SRNC relocation;
- the information to be transported in a transparent container between a target RNC and another system.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	3GPP TS 25.301: "Radio Interface Protocol Architecture".
[3]	3GPP TS 25.303: "Interlayer Procedures in Connected Mode".
[4]	3GPP TS 25.304: "UE Procedures in Idle Mode and Procedures for Cell Reselection in Connected Mode".
[5]	3GPP TS 24.008: "Mobile radio interface layer 3 specification; Core Network Protocols; Stage 3".
[6]	3GPP TS 25.103: "RF parameters in support of RRM".
[7]	3GPP TS 25.215: "Physical layer – Measurements (FDD)".
[8]	3GPP TS 25.225: "Physical layer – Measurements (TDD)".
[9]	3GPP TS 25.401: "UTRAN overall description".
[10]	3GPP TS 25.402: "Synchronization in UTRAN; Stage 2".
[11]	3GPP TS 23.003: "Numbering, addressing and identification".
[12]	ICD-GPS-200: "Navstar GPS Space Segment/Navigation User Interface".
[13]	RTCM-SC104: "RTCM Recommended Standards for Differential GNSS Service (v.2.2)".
[14]	3GPP TR 25.921: "Guidelines and principles for protocol description and error handling".
[15]	3GPP TS 25.321: "Medium Access Control (MAC) protocol specification".
[16]	3GPP TS 25.322: "Radio Link Control (RLC) protocol specification".
[17]	3GPP TS 24.007: "Mobile radio interface signalling layer 3; General aspects".
[18]	3GPP TS 25.305: "Stage 2 Functional Specification of UE Positioning in UTRAN".
[19]	3GPP TS 25.133: "Requirements for Support of Radio Resource Management (FDD)".

[20]	3GPP TS 25.123: "Requirements for Support of Radio Resource Management (TDD)".
[21]	3GPP TS 25.101: "UE Radio Transmission and Reception (FDD)".
[22]	3GPP TS 25.102: "UE Radio Transmission and Reception (TDD)".
[23]	3GPP TS 23.060: "General Packet Radio Service (GPRS); Service description; Stage 2".
[24]	3GPP TS 23.032: "Universal Geographical Area Description (GAD)".
[25]	3GPP TS 23.122: "Non-Access-Stratum functions related to Mobile Station (MS) in idle mode".
[26]	3GPP TS 25.211: "Physical channels and mapping of transport channels onto physical channels (FDD)".
[27]	3GPP TS 25.212: "Multiplexing and channel coding (FDD)".
[28]	3GPP TS 25.213: "Spreading and modulation (FDD)".
[29]	3GPP TS 25.214: "Physical layer procedures (FDD)".
[30]	3GPP TS 25.221: "Physical channels and mapping of transport channels onto physical channels (TDD)".
[31]	3GPP TS 25.222: "Multiplexing and channel coding (TDD)".
[32]	3GPP TS 25.223: "Spreading and modulation (TDD)".
[33]	3GPP TS 25.224: "Physical Layer Procedures (TDD)".
[34]	3GPP TS 25.302: "Services provided by the physical layer ".
[35]	3GPP TS 25.306 "UE Radio Access Capabilities".
[36]	3GPP TS 25.323: "Packet Data Convergence Protocol (PDCP) Specification".
[37]	3GPP TS 25.324: "Broadcast/Multicast Control BMC".
[38]	3GPP TR 25.922: "Radio resource management strategies".
[39]	3GPP TR 25.925: "Radio interface for broadcast/multicast services".
[40]	3GPP TS 33.102: "3G Security; Security Architecture".
[41]	3GPP TS 34.108: "Common Test Environments for User Equipment (UE) Conformance Testing".
[42]	3GPP TS 34.123-2: "User Equipment (UE) conformance specification; Part 2: Implementation Conformance Statement (ICS) proforma specification".
[43]	3GPP TS 44.018: "Mobile radio interface layer 3 specification; Radio Resource Control Protocol".
[44]	3GPP TS 44.060: "General Packet Radio Service (GPRS); Mobile Station (MS) - Base Station System (BSS) interface; Radio Link Control/Medium Access Control (RLC/MAC) protocol".
[45]	3GPP TS 45.005: "Radio transmission and reception".
[46]	3GPP TS 45.008: "Radio subsystem link control".
[47]	ITU-T Recommendation X.680 (07/2002) "Information Technology - Abstract Syntax Notation One (ASN.1): Specification of basic notation".
[48]	ITU-T Recommendation X.681 (07/2002) "Information Technology - Abstract Syntax Notation One (ASN.1): Information object specification".
[49]	ITU-T Recommendation X.691 (07/2002) "Information technology - ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
[50]	3GPP TS 31.102: "Characteristics of the USIM Application".

[51]	3GPP TS 25.308: "High Speed Downlink Packet Access (HSDPA): Overall Description; Stage 2".
[52]	IANA ROHC profile identifier definition (http://www.iana.org/assignments/rohc-pro-ids).
[53]	3GPP TS 44.118: "Mobile radio interface layer 3 specification; Radio Resource Control Protocol, Iu Mode".
[54]	3GPP TS 23.246: "Multimedia Broadcast Multicast Service; Architecture and Functional Description".
[55]	3GPP TS 25.346: "Introduction of the Multimedia Broadcast Multicast Service (MBMS) in the Radio Access Network (Stage-2)".
[56]	3GPP TR 25.992: "Multimedia Broadcast Multicast Service (MBMS); UTRAN/GERAN Requirements".
[57]	3GPP TS 25.413: "UTRAN Iu Interface RANAP Signalling".
[58]	3GPP TS 25.309: "FDD Enhanced Uplink; Overall Description; Stage 2".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in [1] apply, together as:

Data Description Indicator (DDI): MAC-e header field used to identify the logical channel, MAC-d flow and the size of the MAC-d PDUs concatenated into a MAC-es PDU.

E-DCH active set: The set of cells which carry the E-DCH for one UE. Only radio links for which an E-HICH configuration is stored are considered part of the E-DCH active set.

HARQ profile: One HARQ profile consists of a power offset attribute and maximum number of transmissions.

MBMS activated services: the MBMS multicast services the UE has joined as well as the broadcast services the UE is interested in.

MCCH acquisition: the procedure for acquiring all MCCH information relevant for the UE ie. includes reception of the RB information for the UE"s MBMS activated services.

MBMS controlling cell: the cell from which the UE receives MCCH.

MBMS notification: a notification provided by UTRAN indicating a change in the provision of one or more MBMS services.

MBMS transmission: a possibly repeated session of an MBMS service. An MBMS transmission is uniquely identified by the combination of the MBMS service identity and the MBMS session identity.

Primary Absolute Grant: Absolute Grant received with the primary E-RNTI.

Secondary Absolute Grant: Absolute Grant received with the secondary E-RNTI.

Serving E-DCH cell: Cell from which the UE receives Absolute Grants from the Node-B scheduler. A UE has one Serving E-DCH cell.

Serving E-DCH RLS or Serving RLS: Set of cells which contains at least the Serving E-DCH cell and from which the UE can receive and combine one Relative Grant. The UE has only one Serving E-DCH RLS.

Non-serving E-DCH RL or Non-serving RL: Cell which belongs to the E-DCH active set but does not belong to the Serving E-DCH RLS and from which the UE can receive one Relative Grant. The UE can have zero, one or several Non-serving E-DCH RL(s).

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

ACK Acknowledgement AG Absolute Grant

AICH Acquisition Indicator CHannel

AM Acknowledged Mode
AS Access Stratum
ASC Access Service Class
ASN.1 Abstract Syntax Notation.1
BCCH Broadcast Control Channel

BCFE Broadcast Control Functional Entity

BER Bit Error Rate
BLER BLock Error Rate
BSS Base Station Sub-system
CCCH Common Control Channel

CCPCH Common Control Physical CHannel

CH Conditional on history
CM Connection Management

CN Core Network C-RNTI Cell RNTI

CTCH Common Traffic CHannel

CTFC Calculated Transport Format Combination

CV Conditional on value

DCA Dynamic Channel Allocation
DCCH Dedicated Control Channel

DCFE Dedicated Control Functional Entity

DCH Dedicated Channel
DC-SAP Dedicated Control SAP
DDI Data Description Indicator

DGPS Differential Global Positioning System

DL Downlink

DSCH Downlink Shared Channel
DTCH Dedicated Traffic Channel
E-AGCH E-DCH Absolute Grant Channel

E-DCH Enhanced uplink DCH

E-DPCCH E-DCH Dedicated Physical Control Channel E-DPDCH E-DCH Dedicated Physical Data Channel

E-HICH E-DCH HARQ Acknowledgement Indicator Channel

E-RGCH E-DCH Relative Grant Channel

E-RNTI E-DCH RNTI

E-TFCI E-DCH Transport Format Combination Indicator

FACH Forward Access Channel FDD Frequency Division Duplex

F-DPCH Fractional DPCH GC-SAP General Control SAP

GERAN GSM/EDGE Radio Access Network

GRA GERAN Registration Area

G-RNTI GERAN Radio Network Temporary Identity

HARQ Hybrid Automatic Repeat Request
HCS Hierarchical Cell Structure
HFN Hyper Frame Number
H-RNTI HS-DSCH RNTI

HS-DSCH High Speed Downlink Shared Channel

ID Identifier

IDNNS Intra Domain NAS Node Selector

IE Information element

IETFInternet Engineering Task ForceIMEIInternational Mobile Equipment IdentityIMSIInternational Mobile Subscriber Identity

IP Internet Protocol

ISCP Interference on Signal Code Power

L1 Layer 1 L2 Layer 2 L3 Layer 3

LAI Location Area Identity
MAC Media Access Control

MBMS Multimedia Broadcast Multicast Service

MCC Mobile Country Code

MCCH MBMS point-to-multipoint Control Channel

MD Mandatory default

MICH MBMS notification Indicator Channel

MM Mobility Management MNC Mobile Network Code MP Mandatory present

MTCH MBMS point-to-multipoint Traffic Channel
MSCH MBMS point-to-multipoint Scheduling Channel

NACC Network Assisted Cell Change

NAS Non Access Stratum
Nt-SAP Notification SAP
NW Network
OP Optional

PCCH Paging Control Channel

PCH Paging Channel

PDCP Packet Data Convergence Protocol PDSCH Physical Downlink Shared Channel

PDU Protocol Data Unit

PLMN Public Land Mobile Network

PNFE Paging and Notification Control Functional Entity

PRACH Physical Random Access CHannel

PSI Packet System Information p-t-m Point-to-Multipoint

p-t-m Point-to-Multipoint

P-TMSI Packet Temporary Mobile Subscriber Identity

p-t-p Point-to-Point

PUSCH Physical Uplink Shared Channel

QoS Quality of Service
RAB Radio access bearer
RACH Random Access CHannel
RAI Routing Area Identity
RAT Radio Access Technology

RB Radio Bearer

RFE Routing Functional Entity

RG Relative Grant
RL Radio Link
RLC Radio Link Control
RLS Radio Link Set

RNC Radio Network Controller

RNTI Radio Network Temporary Identifier

RRC Radio Resource Control
RSCP Received Signal Code Power
RSN Retransmission Sequence Number
RSSI Received Signal Strength Indicator

SAP Service Access Point

SCFE Shared Control Function Entity
SCTD Space Code Transmit Diversity

SCTO Soft Combining Timing Offset (MBMS)

SF Spreading Factor SG Serving grant

SHCCH Shared Control Channel
SI System Information
SIR Signal to Interference Ratio

S-RNTI SRNC - RNTI

TDD Time Division Duplex TF Transport Format

TFCS Transport Format Combination Set

TFS Transport Format Set
TM Transparent Mode
TME Transfer Mode Entity

TMSI Temporary Mobile Subscriber Identity

Tr Transparent

TSN Transmission Sequence Number

Tx Transmission
UE User Equipment

UL Uplink

UM Unacknowledged Mode URA UTRAN Registration Area

U-RNTI UTRAN-RNTI
USCH Uplink Shared Channel

UTRAN Universal Terrestrial Radio Access Network

4 General


If not specified differently, descriptions are relevant for both FDD and TDD. Descriptions for TDD only are relevant for both 1.28 Mcps TDD and 3.84 Mcps TDD and 7.68 Mcps TDD if not specified differently.

4.1 Overview of the specification

This specification is organised as follows:

- subclause 4.2 contains the description of the model of the RRC protocol layer;
- clause 5 lists the RRC functions and the services provided to upper layers;
- clause 6 lists the services expected from the lower layers and specifies the radio bearers available for usage by the RRC messages;
- clause 7 specifies the UE states for the Access Stratum, and also specifies the processes running in the UE in the respective states;
- clause 8 specifies RRC procedures, including UE state transitions;
- clause 9 specifies the procedures for the handling of unknown, unforeseen, and erroneous protocol data by the receiving entity;
- clause 10 describes the message in a Tabular format; these messages descriptions are referenced in clause 8;
- clause 11 specifies the encoding of the messages of the RRC protocol. This is based on the Tabular description in clause 10.
- clause 12 specifies the transfer syntax for RRC PDUs derived from the encoding definition;
- clause 13 lists the protocol timers, counters, constants and variables to be used by the UE;
- clause 14 specifies some of the processes applicable in UTRA RRC connected mode e.g. measurement
 processes, and also the RRC information to be transferred between network nodes. Note that not all the processes
 applicable in UTRA RRC connected mode are specified here i.e. some UTRA RRC connected mode processes
 are described in [4] e.g. cell re-selection;
- Annex A contains recommendations about the network parameters to be stored on the USIM;
- Annex B contains informative Stage 2 description of the RRC protocol states and state transitions.

The following figure summarises the mapping of UE states, including states in GSM, to the appropriate UTRA and GSM specifications that specify the UE behaviour.

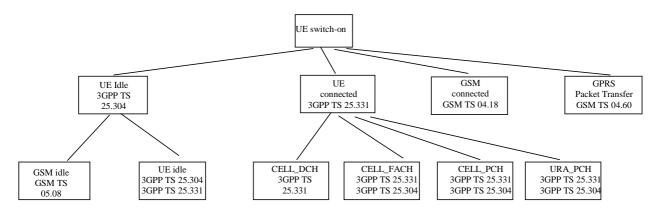

36

Figure 4.1-1: Mapping of UE state to 3GPP Specifications

4.2 RRC Layer Model

The functional entities of the RRC layer are described below:

- Routing of higher layer messages to different MM/CM entities (UE side) or different core network domains (UTRAN side) is handled by the Routing Function Entity (**RFE**).
- Broadcast functions are handled in the broadcast control function entity (**BCFE**). The BCFE is used to deliver the RRC services, which are required at the GC-SAP. The BCFE can use the lower layer services provided by the Tr-SAP and UM-SAP.
- Paging of UEs that do not have an RRC connection is controlled by the paging and notification control function entity (**PNFE**). The PNFE is used to deliver the RRC services that are required at the Nt-SAP. The PNFE can use the lower layer services provided by the Tr-SAP and UM-SAP.
- The Dedicated Control Function Entity (**DCFE**) handles all functions specific to one UE. The DCFE is used to deliver the RRC services that are required at the DC-SAP and can use lower layer services of UM/AM-SAP and Tr-SAP depending on the message to be sent and on the current UE service state.
- In TDD mode, the DCFE is assisted by the Shared Control Function Entity (SCFE) location in the C-RNC, which controls the allocation of the PDSCH and PUSCH using lower layers services of UM-SAP and Tr-SAP.
- The Transfer Mode Entity (TME) handles the mapping between the different entities inside the RRC layer and the SAPs provided by RLC.
- NOTE 1: Logical information exchange is necessary also between the RRC sublayer functional entities. Most of that is implementation dependent and not necessary to present in detail in a specification.
- Figure 4.2-1 shows the RRC model for the UE and Figure 4.2-2 and Figure 4.2-3 show the RRC model for the UTRAN.
 - NOTE 2: The figure shows only the types of SAPs that are used. Multiple instances of Tr-SAP, UM-SAP and AM-SAP are possible. Especially, different functional entities usually use different instances of SAP types.

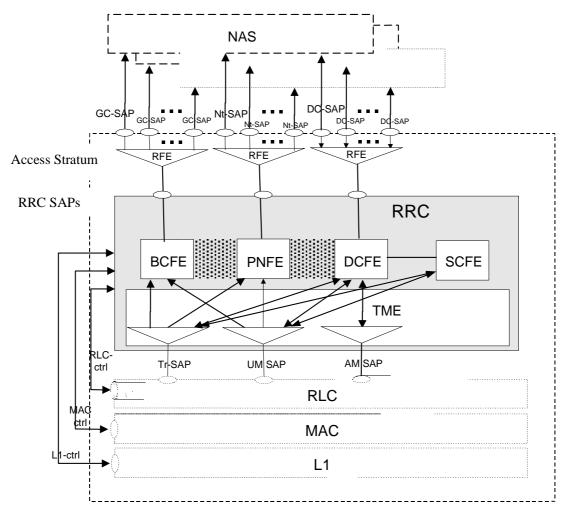


Figure 4.2-1: UE side model of RRC

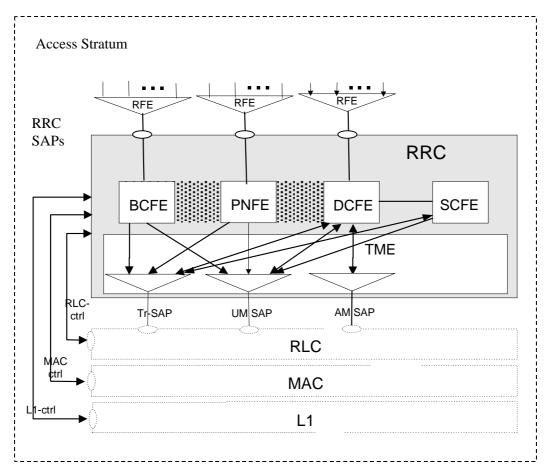


Figure 4.2-2: UTRAN side RRC model (DS-MAP system)

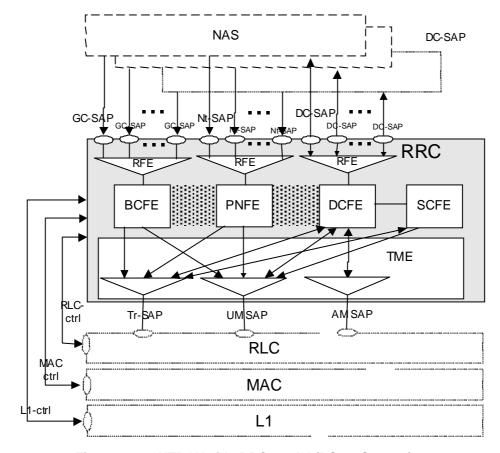


Figure 4.2-3: UTRAN side RRC model (DS-41 System)

4.3 Protocol specification principles

This protocol specification is based on the applicable general guidelines given in [14].

In this specification, a notation of variables is used. The variables are defined in subclause 13.4. Variables are typically used to represent a status or a result of an action, such as reception of an information element in a message, which is used to specify a behaviour somewhere else in the specification, such as when setting the value of an information element in a transmitted message. The variables only serve the purpose of specifying the protocol, and do not therefore impose any particular implementation.

When specifying the UE behaviour at reception of messages, the behaviour that is tied to reception or non-reception of individual information elements, and in some cases combinations of information elements, is specified in one location (subclause 8.6).

5 RRC Functions and Services provided to upper layers

5.1 RRC Functions

The RRC performs the functions listed below. A more detailed description of these functions is provided in [2]:

- Broadcast of information related to the non-access stratum (Core Network);
- Broadcast of information related to the access stratum;
- Establishment, maintenance and release of an RRC connection between the UE and UTRAN;
- Establishment, reconfiguration and release p-t-p of Radio Bearers;
- Establishment, reconfiguration and release of p-t-m Radio Bearers;
- Assignment, reconfiguration and release of radio resources for the RRC connection;
- RRC connection mobility functions;
- Control of requested QoS;
- UE measurement reporting and control of the reporting;
- Outer loop power control;
- Control of ciphering;
- Slow DCA (TDD mode);
- Paging;
- Initial cell selection and cell re-selection;
- Arbitration of radio resources on uplink DCH;
- RRC message integrity protection;
- Timing advance (TDD mode);
- CBS control:
- MBMS control.

5.2 RRC Services provided to upper layers

The RRC offers the following services to upper layers, a description and primitives of these services are provided in [2] and [17].

- General Control;
- Notification;
- Dedicated control.

The RRC layer provides the UE-UTRAN portion of signalling connections to the upper layers to support the exchange of upper layer's information flow. The signalling connection is used between the user equipment and the core network to transfer upper layer information. For each core network domain, at most one signalling connection may exist at the same time. The RRC layer maps the signalling connections for one UE on a single RRC connection. For the upper layer data transfer on signalling connections, the RRC layer supports the discrimination between two different classes, named "High priority" (corresponding to "SAPI 0" for a GSM-MAP based core network) and "Low priority" (corresponding to "SAPI 3" for a GSM-MAP based core network).

5.3 Primitives between RRC and upper layers

The primitives between RRC and the upper layers are described in [17].

6 Services expected from lower layers

6.1 Services expected from Layer 2

The services provided by layer 2 are described in [2], [15] and [16].

6.2 Services expected from Layer 1

The services provided by layer 1 are described in [2].

6.3 Signalling Radio Bearers

The Radio Bearers (RB) available for transmission of RRC messages are defined as "signalling radio bearers" and are specified in the following. The UE and UTRAN shall select the signalling radio bearers for RRC messages using RLC-TM, RLC-UM or RLC-AM on the DCCH and CCCH, according to the following:

- Signalling radio bearer RB0 shall be used for all messages sent on the CCCH (UL: RLC-TM, DL: RLC-UM).
- Signalling radio bearer RB1 shall be used for all messages sent on the DCCH, when using RLC unacknowledged mode (RLC-UM).
- Signalling radio bearer RB2 shall be used for all messages sent on the DCCH, when using RLC acknowledged mode (RLC-AM), except for the RRC messages carrying higher layer (NAS) signalling.
- Signalling radio bearer RB3 and optionally Signalling radio bearer RB4 shall be used for the RRC messages carrying higher layer (NAS) signalling and sent on the DCCH in RLC acknowledged mode (RLC-AM), as specified in subclauses 8.1.8., 8.1.9 and 8.1.10.
- Additionally, RBs whose identities shall be set between 5 and 32 may be used as signalling radio bearer for the RRC messages on the DCCH sent in RLC transparent mode (RLC-TM).
- RRC messages on the SHCCH are mapped either on RACH or on the USCH in the uplink using TM and either on FACH or on the DSCH using RLC-UM. These messages are only specified for TDD mode.

- RRC messages on the MCCH are mapped on FACH using RLC-UM. The transport channel configuration for MCCH is indicated on BCCH. For this signalling radio bearer no identity is applied.
- RRC messages on the MSCH are mapped on FACH using RLC-UM. The transport channel configuration for MSCH is indicated on MCCH. For this signalling radio bearer no identity is applied.


The Radio Bearer configuration for signalling radio bearer RB0, SHCCH, BCCH on FACH, PCCH on PCH and BCCH mapped to BCH are specified in subclauses 13.6, 13.6a, 13.6b and 13.6c.

Ciphering is never applied to signalling radio bearer RB0 or signalling radio bearers using RLC TM.

7 Protocol states

7.1 Overview of RRC States and State Transitions including GSM

Figure 7.1-1 shows the RRC states in UTRA RRC Connected Mode, including transitions between UTRA RRC connected mode and GSM connected mode for CS domain services, and between UTRA RRC connected mode and GSM/GPRS packet modes for PS domain services. It also shows the transitions between Idle Mode and UTRA RRC Connected Mode and furthermore the transitions within UTRA RRC connected mode.

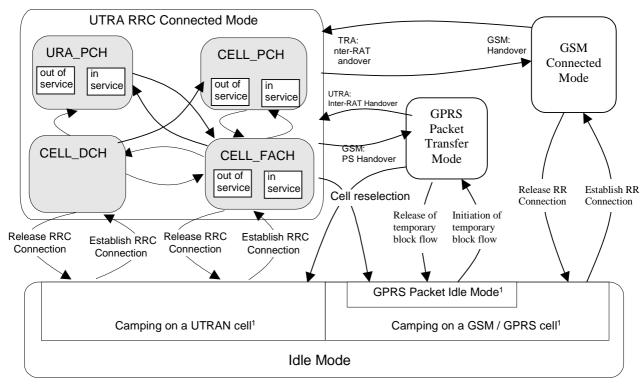

NOTE¹: The indicated division within Idle Mode is only included for clarification and shall not be interpreted as states.

Figure 7.1-1: RRC States and State Transitions including GSM

The RRC connection is defined as a point-to-point bi-directional connection between RRC peer entities in the UE and the UTRAN characterised by the allocation of a U-RNTI. A UE has either zero or one RRC connection.

If NAS informs AS about a new selected PLMN, registered PLMN or equivalent PLMN list while being in connected mode, the UE shall perform the actions according to subclause 8.5.24.

NOTE: The state transitions are specified in clause 8.

7.2 Processes in UE modes/states

NOTE: This subclause specifies what processes shall be active in the UE in the different RRC modes/states. The related procedures and the conditions on which they are triggered are specified either in clause 8 or elsewhere in the relevant process definition.

7.2.1 UE Idle mode

UE processes that are active in UE Idle mode are specified in [4].

The UE shall perform a periodic search for higher priority PLMNs as specified in [25].

7.2.2 UTRA RRC Connected mode

In this specification unless otherwise mentioned "connected mode" shall refer to "UTRA RRC connected mode".

7.2.2.1 URA_PCH or CELL_PCH state

In the URA_PCH or CELL_PCH state the UE shall perform the following actions:

NOTE: Neither DCCH nor DTCH are available in these states.

- 1> if the UE is "in service area":
 - 2> maintain up-to-date system information as broadcast by the serving cell as specified in the subclause 8.1.1;
 - 2> perform cell reselection process as specified in [4];
 - 2> perform a periodic search for higher priority PLMNs as specified in [25];
- NOTE: If the DRX cycle length is 80ms, then a search for higher priority PLMNs may not identify all the available PLMNs due to the paging occasion on the current serving cell coinciding with the MIB of the cell of interest.
 - 2> monitor the paging occasions and PICH monitoring occasions determined according to subclauses 8.6.3.1a and 8.6.3.2 and receive paging information on the PCH mapped on the S-CCPCH selected by the UE according to the procedure in subclause 8.5.19;
 - 2> act on RRC messages received on PCCH and BCCH;
 - 2> perform measurements process according to measurement control information as specified in subclause 8.4 and in subclause 14.4;
 - 2> maintain up-to-date BMC data if it supports Cell Broadcast Service (CBS) as specified in [37];
 - 2> act on RRC messages received on MCCH if it supports MBMS and has activated an MBMS service as specified in subclause 8.7;
 - 2> run timer T305 for periodical URA update if the UE is in URA_PCH or for periodical cell update if the UE is in CELL_PCH.
- 1> if the UE is "out of service area":
 - 2> perform cell selection process as specified in [4];
 - 2> run timer T316;
 - 2> run timer T305 or T307;
 - 2> if the cell selection process fails to find a suitable cell after a complete scan of all RATs and all frequency bands supported by the UE, the UE shall after a minimum of TimerOutOfService time (default value 30 s) of being "out of service area":
 - 3> indicate all available PLMNs to NAS to enable the selection of a new PLMN;

- 3> if an acceptable cell is found then the UE shall camp on that cell to obtain limited service as defined in [4] and, perform actions according to subclause 8.5.24;
- 3> else if no acceptable cell is found, the UE shall continue looking for an acceptable cell as defined in [4].

7.2.2.2 CELL_FACH state

In the CELL_FACH state the UE shall perform the following actions:

NOTE: DCCH and, if configured, DTCH are available in this state.

- 1> if the UE is "in service area":
 - 2> maintain up-to-date system information as broadcast by the serving cell as specified in subclause 8.1.1;
 - 2> perform cell reselection process as specified in [4];
 - 2> perform measurements process according to measurement control information as specified in subclause 8.4 and in subclause 14.4;
 - 2> run timer T305 (periodical cell update);
 - 2> select and configure the RB multiplexing options applicable for the transport channels to be used in this RRC state:
 - 2> listen to all FACH transport channels mapped on the S-CCPCH selected by the UE according to the procedure in subclause 8.5.19;
 - 2> act on RRC messages received on BCCH, CCCH and DCCH;
 - 2> act on RRC messages received on MCCH if it supports MBMS and has activated an MBMS service as specified in subclause 8.7;
 - 2> act on RRC messages received on, if available, SHCCH (TDD only).
- 1> if the UE is "out of service area":
 - 2> perform cell selection process as specified in [4];
 - 2> run timers T305 (periodical cell update), and T317 (cell update when re-entering "in service") or T307 (transition to Idle mode), if started;
 - 2> run timers T314 and/or T315, if started;
 - 2> if the cell selection process fails to find a suitable cell after a complete scan of all RATs and all frequency bands supported by the UE, the UE shall after a minimum of TimerOutOfService time (default value 30 seconds) of being "out of service area":
 - 3> indicate all available PLMNs to NAS to enable the selection of a new PLMN:
 - 3> if an acceptable cell is found then the UE shall camp on that cell to obtain limited service as defined in [4] and perform actions according to subclause 8.5.24;
 - 3> else if no acceptable cell is found, the UE shall continue looking for an acceptable cell as defined in [4].

7.2.2.3 CELL_DCH state

In the CELL_DCH state the UE shall perform the following actions:

NOTE: DCCH and, if configured, DTCH are available in this state.

- 1> read the system information as specified in subclause 8.1.1 (for UEs in TDD mode);
- 1> perform measurements process according to measurement control information as specified in subclause 8.4 and in clause 14;

- 1> select and configure the RB multiplexing options applicable for the transport channels to be used in this RRC state:
- 1> act on RRC messages received on DCCH;
- 1> act on RRC messages received on BCCH (applicable only to UEs with certain capabilities and in FDD mode);
- 1> act on RRC messages received on MCCH if it supports MBMS and has activated an MBMS service as specified in subclause 8.7 (applicable only to UEs supporting MBMS with certain capabilities);
- 1> act on RRC messages received on BCCH (TDD only) and, if available, SHCCH (TDD only).

NOTE: If any of the above procedures results in different HS-DSCH and E-DCH serving cells, the UE behaviour is unspecified.

8 RRC procedures

The UE shall be able to process several simultaneous RRC procedures. After the reception of a message which invoked a procedure, the UE shall be prepared to receive and act on another message which may invoke a second procedure. Whether this second invocation of a procedure (transaction) is accepted or rejected by the UE is specified in the subclauses of this clause, and in particular in subclause 8.6.3.11 (RRC transaction identifier).

On receiving a message the UE shall:

- 1> check that the message is addressed to the UE (e.g. by checking the IE "Initial UE identity" or the IE "U-RNTI" for messages on CCCH);
- 1> discard the messages addressed to other UEs.

and then the UE shall:

- 1> apply integrity check as appropriate;
- 1> proceed with error handling as specified in clause 9;
- 1> act upon the IE "RRC transaction identifier";
- 1> continue with the procedure as specified in the relevant subclause.

NOTE: Due to an error in the Release '99 ASN.1, a Release '99 UE is unable to determine which UE is addressed by a downlink CCCH message corresponding to a protocol version later than Release '99. As a result, the Release '99 UE will not be able to return a protocol error according to subclause 9.3a. Therefore, the UTRAN should only send a Release '99 message version towards UEs that have indicated conformance to Release '99 in the IE "Access stratum release indicator".

The RRC entity in the UE shall consider PDUs to have been transmitted when they are submitted to the lower layers. If the RRC entity in the UE submits a message for transmission using AM RLC, it shall consider the message successfully transmitted when UTRAN reception of all relevant PDUs is acknowledged by RLC. In the UE, timers are started when the PDUs are sent on the radio interface in the case of the transmission using the CCCH.

8.1 RRC Connection Management Procedures

8.1.1 Broadcast of system information

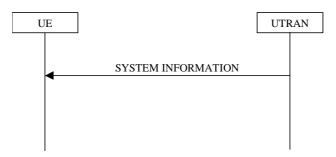


Figure 8.1.1-1: Broadcast of system information

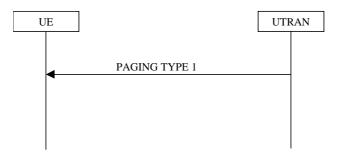


Figure 8.1.1-2: Notification of system information modification for UEs in idle mode, CELL_PCH state and URA_PCH state

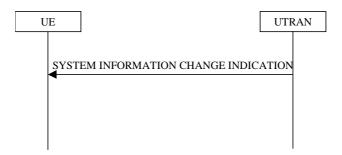


Figure 8.1.1-3: Notification of system information modification for UEs in CELL_FACH and CELL_DCH(TDD only) state

8.1.1.1 General

The purpose of this procedure is to broadcast system information from the UTRAN to UEs in a cell.

8.1.1.1.1 System information structure

The system information elements are broadcast in *system information blocks*. A system information block groups together system information elements of the same nature. Different system information blocks may have different characteristics, e.g. regarding their repetition rate and the requirements on UEs to re-read the system information blocks.

The system information is organised as a tree. A *master information block* gives references and scheduling information to a number of system information blocks in a cell. The system information blocks contain the actual system information. The master information block may optionally also contain reference and scheduling information to one or two *scheduling blocks*, which give references and scheduling information for additional system information blocks. Scheduling information for a system information block may only be included in either the master information block or one of the scheduling blocks.

For all system information blocks except System Information Block types 15.2, 15.3 and 16, the content is the same in each occurrence for system information blocks using value tag. System Information Block types 15.2, 15.3 and 16 may occur more than once with different content. In this case scheduling information is provided for each such occurrence of the system information block. System information blocks that do not use value tag may have different content for each occurrence.

8.1.1.1.2 System information blocks

Table 8.1.1 specifies all system information blocks and their characteristics.

The *area scope column* in table 8.1.1 specifies the area where a system information block's value tag is valid. If the area scope is *cell*, the UE shall consider the system information block to be valid only in the cell in which it was read. If system information blocks have been previously stored for this cell, the UE shall check whether the value tag for the system information block in the entered cell is different compared to the stored value tag. If the area scope is *PLMN* or *Equivalent PLMN*, the UE shall check the value tag for the system information block when a new cell is selected. If the value tag for the system information block in the new cell is different compared to the value tag for the system information block stored in the UE, the UE shall re-read the system information block. If the area scope is *PLMN*, the UE shall consider the system information block to be valid only within the PLMN in which it was read. If the area scope is *Equivalent PLMN*, the UE shall consider the system information block to be valid within the PLMN in which it was received and all PLMNs which are indicated by higher layers to be equivalent.

For System information block types 15.2, 15.3 and 16, which may have multiple occurrences, each occurrence has its own independent value tag. The UE- shall re-read a particular occurrence if the value tag of this occurrence has changed compared to that stored in the UE.

The *UE mode/state column when block is valid* in Table 8.1.1 specifies in which UE mode or UE state the IEs in a system information block shall be regarded as valid by the UE. In other words, the indicated system information block becomes invalid upon change to a mode/state that is not included in this column. System Information Block Type 16 remains also valid upon transition to or from GSM/GPRS. In some cases, the states are inserted in brackets to indicate that the validity is dependent on the broadcast of the associated System Information Blocks by the network as explained in the relevant procedure subclause.

The *UE mode/state column when block is read* in Table 8.1.1 specifies in which UE mode or UE state the IEs in a system information block may be read by the UE. The UE shall have the necessary information prior to execution of any procedure requiring information to be obtained from the appropriate system information block. The requirements on the UE in terms of when to read the system information may therefore be derived from the procedure specifications that specify which IEs are required in the different UE modes/states in conjunction with the different performance requirements that are specified.

The UE shall:

- 1> if System Information Block type 11 is referenced in the master information block or in the scheduling blocks:
 - 2> if System Information Block type 12 is not referenced in the master information block or in the scheduling blocks, or broadcast of System Information Block type 12 is not indicated in System Information Block type 11.
 - 3> have read and acted upon System Information Block type 11 in a cell when the UE transmits an RRC message on RACH.

2> else:

- 3> have read and acted upon System Information Block type 11 in a cell before the UE transmits the RRC CONNECTION REQUEST message.
- 3> have read and acted upon both System Information Block type 11 and System Information Block type 12 in a cell when:
 - 4> the UE transmits an RRC message on RACH in RRC connected mode; or
 - 4> the UE receives a message commanding to enter Cell_DCH state.

- NOTE 1: There are a number of system information blocks that include the same IEs while the UE mode/state in which the information is valid differs. This approach is intended to allows the use of different IE values in different UE mode/states.
- NOTE 2: System Information Block Type 16 is also obtained by a UE while in GSM/GPRS. The details of this are not within the scope of this specification.

The *Scheduling information* column in table 8.1.1 specifies the position and repetition period for the System Information Block.

The *modification of system information* column in table 8.1.1 specifies the update mechanisms applicable for a certain system information block. For system information blocks with a value tag, the UE shall update the information according to subclause 8.1.1.7.1 or 8.1.1.7.2. For system information blocks with an expiration timer, the UE shall, when the timer expires, perform an update of the information according to subclause 8.1.1.7.4.

Table 8.1.1: Specification of system information block characteristics

System information block	Area scope	UE mode/state when block is valid	UE mode/state when block is read	Scheduling information	Modification of system information	Additional comment
Master information block	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	SIB_POS = 0 SIB_REP = 8 (FDD) SIB_REP = 8, 16, 32 (TDD) SIB_OFF=2	Value tag	
Scheduling block 1	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Specified by the IE "Scheduling information" in MIB	Value tag	
Scheduling block 2	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Specified by the IE "Scheduling information" in MIB	Value tag	
System information block type 1	PLMN	Idle mode CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 2	Cell	URA_PCH	URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 3	Cell	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Specified by the IE "Scheduling information"	Value tag	
System information block type 4	Cell	CELL_FACH, CELL_PCH, URA_PCH	CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	If System information block type 4 is not broadcast in a cell, the connected mode UE shall apply information in System information block type 3 in connected mode.
System information block type 5 and 5bis	Cell	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only))	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only))	Specified by the IE "Scheduling information"	Value tag	System information block type 5bis is sent instead of system information block type 5 in cells that use Band IV or Band IX.

System information block	Area scope	UE mode/state when block is valid	UE mode/state when block is read	Scheduling information	Modification of system information	Additional comment
System information block type 6	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Specified by the IE "Scheduling information"	Value tag	If system information block type 6 is not broadcast in a cell, the connected mode UE shall read System information block type 5 or System information block type 5bis.
						If some of the optional IEs are not included in System information block type 6, the UE shall read the corresponding IEs in System information block type 5 or System information block type 5bis.
						In TDD mode system information block 6 shall only be read in CELL_DCH if required for open loop power control as specified in subclause 8.5.7 and/or if shared transport channels are assigned to the UE. If in these cases system information block type 6 is not broadcast the UE shall read system information block type 5.
System information block type 7	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Specified by the IE "Scheduling information"	Expiration timer = MAX(32, SIB_REP * ExpirationTi meFactor)	In TDD mode system information block type 7 shall only be read in CELL_DCH if shared transport channels are assigned to the UE.
System information block type 11	Cell	Idle mode (CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH)	Idle mode (CELL_FACH, CELL_PCH, URA_PCH)	Specified by the IE "Scheduling information"	Value tag	
System information block type 12	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	If system information block type 12 is not broadcast in a cell, the connected mode UE shall read System information block type 11. If some of the optional IEs are not included in System information block type 12, the UE shall read the corresponding IEs in System information block type 11.

System information block	Area scope	UE mode/state when block is valid	UE mode/state when block is read	Scheduling information	Modification of system information	Additional comment
System information block type 13	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.1	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.2	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.3	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.4	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 14	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Specified by the IE "Scheduling information"	Expiration timer = MAX(32, SIB_REP* ExpirationTi meFactor)	This system information block is used in 3.84 Mcps TDD and 7.68 Mcps TDD mode only. System information block type 14 shall only be read in CELL_DCH if required for open loop power control as specified in subclause 8.5.7.
System information block type 15	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.1	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.2	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	For this system information block there may be multiple occurrences
System information block type 15.3	PLMN	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	For this system information block there may be multiple occurrences
System information block type 15.4	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.5	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 16	Equival ent PLMN	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	For this system information block there may be multiple occurrences. This system information block is also valid while in GSM/GPRS.

System information block	Area scope	UE mode/state when block is valid	UE mode/state when block is read	Scheduling information	Modification of system information	Additional comment
System information block type 17	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Specified by the IE "Scheduling information"	Expiration timer = SIB_REP	This system information block is used in TDD mode only. System information block type 17 shall only be read if shared transport channels are assigned to the UE.
System Information Block type 18	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	

8.1.1.1.3 Segmentation and concatenation of system information blocks

A generic SYSTEM INFORMATION message is used to convey the system information blocks on the BCCH. A given BCCH may be mapped onto either a BCH or a FACH transport channel according to subclause 8.1.1.1.2. The size of the SYSTEM INFORMATION message shall fit the size of a BCH or a FACH transport block.

The RRC layer in UTRAN performs segmentation and concatenation of encoded system information blocks. If the encoded system information block is larger than the size of a SYSTEM INFORMATION message, it will be segmented and transmitted in several messages. If the encoded system information block is smaller than a SYSTEM INFORMATION message, UTRAN may concatenate several system information blocks, or the first segment or the last segment into the same message as specified in the remainder of this clause.

Four different segment types are defined:

- First segment;
- Subsequent segment;
- Last segment;
- Complete.

Each of the types - *First*, *Subsequent* and *Last segment* - is used to transfer segments of a master information block, scheduling block or a system information block. The segment type, *Complete*, is used to transfer a complete master information block, complete scheduling block or a complete system information block.

Each segment consists of a header and a data field. The data field carries the encoded system information elements. The header contains the following parameters:

- The number of segments in the system information block (SEG_COUNT). This parameter is only included in the header if the segment type is "First segment".
- SIB type. The SIB type uniquely identifies the master information block, scheduling block or a system information block.
- Segment index. This parameter is only included in the header if the segment type is "Subsequent segment" or "Last segment".

UTRAN may combine one or several segments of variable length in the same SYSTEM INFORMATION message. The following combinations are allowed:

- 1. No segment;
- 2. First segment;
- 3. Subsequent segment;

- 4. Last segment;
- 5. Last segment + First segment;
- 6. Last segment + one or several Complete;
- 7. Last segment + one or several Complete + First segment;
- 8. One or several Complete;
- 9. One or several Complete + First segment;
- 10. One Complete of size 215 to 226;
- 11. Last segment of size 215 to 222.

The "No segment" combination is used when there is no master information block, scheduling block or system information block scheduled for a specific BCH transport block.

UEs are not required to support the reception of multiple occurrences of the same system information block type within one SYSTEM INFORMATION message.

NOTE: Since the SIB type is the same for each occurrence of the system information block, the UE does not know the order in which the occurrences, scheduled for this SYSTEM INFORMATION message, appear. Therefore, the UE is unable to determine which scheduling information, e.g., value tag relates to which occurrence of the system information block.

8.1.1.1.4 Re-assembly of segments

The RRC layer in the UE shall perform re-assembly of segments. All segments belonging to the same master information block, scheduling block or system information block shall be assembled in ascending order with respect to the segment index. When all segments of the master information block, scheduling block or a system information block have been received, the UE shall perform decoding of the complete master information block, scheduling block or system information block. For System Information Block types 15.2, 15.3 and 16, which may have multiple occurrences, each occurrence shall be re-assembled independently.

The UE shall discard system information blocks of which segments were missing, of which segments were received out of sequence and/or for which duplicate segments were received. The only valid sequence is an ascending one with the sequence starting with the First Segment of the associated System Information Block.

If the UE receives a Subsequent segment or Last segment where the index in IE "Segment index" is equal to or larger than the number of segments stated in IE "SEG_COUNT" in the scheduling information for that scheduling block or system information block:

- 1> the UE may:
 - 2> read all the segments to create a system information block as defined by the scheduling information read by the UE;
 - 2> store the content of the system information block with a value tag set to the value NULL; and
 - 2> consider the content of the scheduling block or system information block as valid:
 - 3> until it receives the same type of scheduling block or system information block in a position according to its scheduling information; or
 - 3> at most for 6 hours after reception.
- 1> and the UE shall:
 - 2> re-read scheduling information for that scheduling block or system information block.

If the UE receives a Subsequent segment or Last segment where the index in IE "Segment index" is equal to or larger than the number of segments stated in IE "SEG_COUNT" in the First segment, the UE shall

1> discard all segments for that master information block, scheduling block or system information block; and

1> re-read the scheduling information for that system information block;

1> then re-read all segments for that system information block.

8.1.1.1.5 Scheduling of system information

Scheduling of system information blocks is performed by the RRC layer in UTRAN. If segmentation is used, it should be possible to schedule each segment separately.

To allow the mixing of system information blocks with short repetition period and system information blocks with segmentation over many frames, UTRAN may multiplex segments from different system information blocks. Multiplexing and de-multiplexing is performed by the RRC layer.

The scheduling of each system information block broadcast on a BCH transport channel is defined by the following parameters:

- the number of segments (SEG_COUNT);
- the repetition period (SIB_REP). The same value applies to all segments;
- the position (phase) of the first segment within one cycle of the Cell System Frame Number (SIB_POS(0)). Since system information blocks are repeated with period SIB_REP, the value of SIB_POS(i), i = 0, 1, 2, ... SEG_COUNT-1 must be less than SIB_REP for all segments;
- the offset of the subsequent segments in ascending index order (SIB_OFF(i), i = 1, 2, ... SEG_COUNT-1) The position of the subsequent segments is calculated using the following: SIB_POS(i) = SIB_POS(i-1) + SIB_OFF(i).

The scheduling is based on the Cell System Frame Number (SFN). The SFN of a frame at which a particular segment, i, with i = 0, 1, 2, ... SEG_COUNT-1 of a system information block occurs, fulfils the following relation:

$$SFN \mod SIB_REP = SIB_POS(i)$$

In FDD and TDD the scheduling of the master information block is fixed as defined in table 8.1.1. For TDD, UTRAN may apply one of the values allowed for the master information block's repetition period. The value that UTRAN is using in TDD is not signalled; UEs have to determine it by trial and error.

8.1.1.2 Initiation

The system information is continuously broadcast on a regular basis in accordance with the scheduling defined for each system information block.

8.1.1.3 Reception of SYSTEM INFORMATION messages by the UE

The UE shall read SYSTEM INFORMATION messages broadcast on a BCH transport channel in idle mode and in the connected mode in states CELL_FACH, CELL_PCH, URA_PCH and CELL_DCH (TDD only). In addition, UEs in FDD mode which support simultaneous reception of one SCCPCH and one DPCH shall read system information on a FACH transport channel when in CELL_DCH state.

In idle mode and connected mode different combinations of system information blocks are valid. The UE shall acquire the system information blocks that are needed according to table 8.1.1.

The UE may store system information blocks with *cell*, *PLMN* or *Equivalent PLMN* area scope (including their value tag if applicable) for different cells and different PLMNs, to be used if the UE returns to these cells.

The UE shall consider all stored system information blocks as invalid after it has been switched off. Some information obtained from system information may be stored by the UE or in the USIM for use in a stored information cell selection.

When selecting a new cell the UE shall consider all current system information blocks with area scope cell to be invalid. If the UE has stored valid system information blocks for the newly selected cell, the UE may set those as current system information blocks.

After selecting a new cell and this cell broadcasts an IE "PLMN Identity" in the MIB which is different from the IE "PLMN Identity" broadcast in the MIB in the previously selected cell, the UE shall consider all current system information blocks with area scope *PLMN* to be invalid. If the UE has previously stored valid system information blocks for the selected cell of the new PLMN, the UE may set those as current system information blocks.

When NAS informs AS about a new selected PLMN, the UE shall consider all stored system information blocks with area scope *Equivalent PLMN* to be invalid.

8.1.1.4 Void

8.1.1.5 Actions upon reception of the Master Information Block and Scheduling Block(s)

When selecting a new cell, the UE shall read the master information block. The UE may use the pre-defined scheduling information to locate the master information block in the cell.

Upon reception of the master information block, the UE shall:

- 1> if the IE "Multiple PLMN List" is not present in the Master Information Block:
 - 2> consider the IE "PLMN identity" in the Master Information Block as the PLMN identity of the cell.

1> else:

- 2> consider the PLMN identities in the IE "Multiple PLMN List" as the PLMN identities of the cell;
- 2> when reading the "Multiple PLMN List", read all the PLMN identities in the list as follows:
 - 3> if the IE "MIB PLMN Identity" is set to TRUE:
 - 4> read the "PLMN identity" IE in the MIB and consider it as a part of the "Multiple PLMN List".
 - 3> if the IE "MIB PLMN Identity" is set to FALSE:
 - 4> not consider the "PLMN identity" IE in the MIB as a part of the "Multiple PLMN List";
 - 4> not consider the IE "PLMN identity" in the MIB as a PLMN identity of the cell;
 - 4> not forward the PLMN in the IE "PLMN identity" of the MIB to upper layers.
 - 3> if the MCC is not present when reading a IE "PLMN identity with Optional MCC" in the IE "Multiple PLMN List":
 - 4> set the MCC of this PLMN identity equal to the MCC of the closest preceding "PLMN identity with Optional MCC" in the "Multiple PLMN List" that includes an MCC;
 - 4> or, if no such "PLMN identity with Optional MCC" exists, the UE shall set the MCC of this PLMN identity to the MCC of the "PLMN identity" IE in the Master Information Block irrespective of the value of the IE "MIB PLMN Identity".
- 1> if the UE is operating in "ANSI-41 mode" and the IE "PLMN Type" has the value "ANSI-41" or "GSM-MAP and ANSI-41":
 - 2> store the ANSI-41 Information elements contained in the master information block and perform initial process for ANSI-41.
- 1> compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG;
- 1> if the value tags differ, or if no IEs for the master information block are stored:
 - 2> store the value tag into the variable VALUE_TAG for the master information block;
 - 2> read and store scheduling information included in the master information block.

1> if the value tags are the same the UE may use stored system information blocks and scheduling blocks using value tag that were stored for this cell and this PLMN as valid system information.

For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

- 1> for all system information blocks with area scope "PLMN" or "Equivalent PLMN" that use value tags:
 - 2> compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;
 - 2> if the value tags differ, or if no IEs for the corresponding system information block are stored:
 - 3> store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;
 - 3> read and store the IEs of that system information block.
 - 2> if the value tags are the same the UE may use stored system information blocks using value tag that were stored in this PLMN as valid system information.
- 1> for all system information blocks or scheduling blocks with area scope cell that use value tags:
 - 2> compare the value tag read in scheduling information for that system information block or scheduling block with the value stored within the variable VALUE_TAG for that system information block or scheduling block;
 - 2> if the value tags differ, or if no IEs for the corresponding system information block or scheduling block are stored:
 - 3> store the value tag read in scheduling information for that system information block or scheduling block into the variable VALUE_TAG;
 - 3> read and store the IEs of that system information block or scheduling block.
 - 2> if the value tags are the same the UE may use stored system information blocks using value tags that were stored for this cell and this PLMN as valid system information.
- 1> for system information blocks which may have multiple occurrences:
 - 2> compare the value tag and the configuration or multiple occurrence identity for the occurrence of the system information blocks read in scheduling information with the value tag and configuration or multiple occurrence identity stored within the variable VALUE_TAG:
 - 3> if the value tags differ, or if no IEs from the occurrence with that configuration or multiple occurrence identity of the system information block are stored:
 - 4> store the value tag read in scheduling information for that system information block and the occurrence with that configuration or multiple occurrence identity into the variable VALUE TAG;
 - 4> read and store the IEs of that system information block.
 - 3> if the value tags and the configuration or multiple occurrence identity are identical to those stored, the UE may use stored occurrences of system information blocks that were stored for this cell and this PLMN as valid system information.

For system information blocks, not supported by the UE, but referenced either in the master information block or in the scheduling blocks, the UE may:

- 1> skip reading this system information block;
- 1> skip monitoring changes to this system information block.

If the UE:

1> receives a scheduling block at a position different from its position according to the scheduling information for the scheduling block; or

1> receives a scheduling block for which scheduling information has not been received:

the UE may:

- 1> store the content of the scheduling block with a value tag set to the value NULL; and
- 1> consider the content of the scheduling block as valid until it receives the same type of scheduling block in a position according to its scheduling information or at most for 6 hours after reception.

If the UE does not find a scheduling block in a position where it should be according to its scheduling information, but a transport block with correct CRC was found at that position, the UE shall:

1> read the scheduling information for this scheduling block.

If the UE does not find the master information block in a position fulfilling:

SFN mod 32 = 0

but a transport block with correct CRC was found at that position), the UE shall:

- 1> consider the master information block as not found; and
- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

NOTE: This permits a different repetition for the MIB in later versions for FDD. In TDD it allows for a variable SIB_REP in this and future releases.

If system information block type 1 is not scheduled on BCH, and system information block type 13 is not scheduled on BCH, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

If the UE only supports GSM-MAP but finds a cell that broadcasts System Information Block type 13 but not System Information Block type 1, the UE shall:

1> consider the cell barred.

If:

- system information block type 1 is not scheduled on BCH; and
- the UE is operating in "GSM-MAP mode"; and
- the IE "PLMN type" in the Master Information Block has the value "GSM-MAP" or "GSM-MAP and ANSI-41":

the UE shall:

1> indicate to upper layers that no CN system information is available.

If in idle mode and System Information Block type 3 is not scheduled on BCH, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

If in connected mode and System Information Block type 3 is not scheduled on BCH, and System Information Block type 4 is not scheduled on BCH, the UE shall:

1> consider the cell to be barred according to [4]; and

1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

If in idle mode and neither System Information Block type 5 nor type 5bis is scheduled on BCH, or System Information Block type 5 or type 5bis is scheduled but IE "AICH info" (FDD) or IE "PICH info" is not present, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

If in connected mode and neither System Information Block type 5 nor type 5bis is scheduled on BCH, and System Information Block type 6 is not scheduled on BCH, or any of System Information Block type 5, type 5bis or type 6 is scheduled but IE "AICH info" (FDD) or IE "PICH info" is not present, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

If System Information Block type 7 is not scheduled on BCH, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

In 3.84 Mcps TDD and 7.68 Mcps TDD, if System Information Block type 14 is not scheduled on BCH, the UE shall:

- 1> consider the cell to be barred according to [4]; and
- 1> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

If System Information Block type 5 and System Information Block type 5bis are both scheduled on BCH:

1> the UE behaviour is unspecified.

8.1.1.6 Actions upon reception of system information blocks

The UE may use the scheduling information included within the master information block and the scheduling blocks to locate each system information block to be acquired.

The UE should only expect one occurrence of the scheduling information for a system information block in the master information block and any of the scheduling blocks except for System Information Block type 16, System Information Block type 15.2 and System Information Block type 15.3, which may have multiple occurrences. However, to enable future introduction of new system information blocks, the UE shall also be able to receive system information blocks other than the ones indicated within the scheduling information. The UE may ignore contents of such system information block.

If the UE:

- 1> receives a system information block in a position according to the scheduling information for the system information block; and
- 1> this system information block uses a value tag; or
- 1> this system information block uses a value tag and configuration or multiple occurrence identity:

the UE shall:

1> store the content of the system information block together with the value of its value tag or the values of configuration and multiple occurrence identity and the associated value tag in the scheduling information for the system information block; and

1> consider the content of the system information block valid until, if used, the value tag in the scheduling information for the system information block is changed or at most for 6 hours after reception.

If the UE:

- 1> receives a system information block in a position according to the scheduling information for the system information block; and
- 1> this system information block does not use a value tag according to the system information block type:

the UE shall:

- 1> store the content of the system information block; and
- 1> start an expiration timer using a value as defined in Table 8.1.1 for that system information block type; and
- 1> consider the content of the system information block valid until, the expiration timer expires.

If the UE:

- 1> receives a system information block at a position different from its position according to the scheduling information for the system information block; or
- 1> receives a system information block for which scheduling information has not been received; and
- 1> this system information block uses a value tag:

the UE may:

- 1> store the content of the system information block with a value tag set to the value NULL; and
- 1> consider the content of the system information block as valid until it receives the same type of system information block in a position according to its scheduling information or at most for 6 hours after reception.

If the UE:

- 1> receives a system information block with multiple occurrences at a position different from its position according to the scheduling information for the system information block; or
- 1> receives a system information block with multiple occurrences for which scheduling information has not been received; and
- 1> this system information block uses a value tag and configuration or multiple occurrence identity:

the UE shall:

1> ignore this information.

If the UE does not find a system information block in a position where it should be according to its scheduling information, but a transport block with correct CRC was found at that position, the UE shall read the scheduling information for this system information block.

The UE shall act upon all received information elements as specified in subclause 8.6 unless specified otherwise in the following subclauses.

8.1.1.6.1 System Information Block type 1

The UE should store all relevant IEs included in this system information block if the UE is operating in "GSM-MAP mode" and the IE "PLMN type" in the Master Information Block has the value "GSM-MAP" or "GSM-MAP and ANSI-41". The UE shall also:

- 1> check that the cell, according to information included in IE "CN common GSM-MAP NAS system information", is suitable [4];
- 1> if in connected mode:
 - 2> not forward the content of the IE "CN common GSM-MAP NAS system information" to upper layers.

- 1> if in idle mode:
 - 2> forward the content of the IE "CN common GSM-MAP NAS system information" to upper layers.
- 1> for the IE "CN domain system information list":
 - 2> for each IE "CN domain system information" that is present:
 - 3> check that the cell, according to information included in IE "CN domain specific NAS system information", is suitable [4];
 - 3> if in connected mode:
 - 4> not forward the content of the IE "CN domain specific NAS system information" to upper layers.
 - 3> if in idle mode:
 - 4> forward the content of the IE "CN domain specific NAS system information" and the IE "CN domain identity" to upper layers;
 - 4> use the IE "CN domain specific DRX cycle length coefficient" to calculate frame number for the Paging Occasions as specified in [4];
 - 4> store the value of the IE "CN domain specific DRX cycle length coefficient" for use in connected mode.
 - 2> if an IE "CN domain system information" is not present for a particular CN domain:
 - 3> if in idle mode:
 - 4> indicate to upper layers that no CN system information is available for that CN domain.
- 1> if the UE has not yet entered UTRA RRC connected mode:
 - 2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS_AND_CONSTANTS.
- 1> use the values stored in the variable TIMERS_AND_CONSTANTS for the relevant timers and constants.

8.1.1.6.2 System Information Block type 2

If in connected mode the UE should store all relevant IEs included in this system information block. The UE shall:

1> if in state URA_PCH, start to perform URA updates using the information in the IE "URA identity".

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.3 System Information Block type 3

The UE should store all relevant IEs included in this system information block. The UE shall:

- 1> if in connected mode, and System Information Block 4 is indicated as used in the cell:
 - 2> read and act on information sent in that block.

With respect to Domain Specific Access Control, the UE shall:

- 1> if the IE "Multiple PLMN List" is not included in the Master Information Block:
 - 2> apply the domain specific access restrictions as indicated by the IE "Domain Specific Access Restriction Parameters For PLMN Of MIB".
- 1> else:
 - 2> if the PLMN specified by the IE "PLMN Identity" of the Master Information Block is chosen by the UE:

- 3> apply the domain specific access restrictions as indicated by the IE "Domain Specific Access Restriction Parameters For PLMN Of MIB".
- 2> else, if N-th (N=1..5) PLMN in the IE "Multiple PLMNs" contained in the IE "Multiple PLMN List" is chosen by the UE:
 - 3> if the IE "Domain Specific Access Restriction List" of the IE "Domain Specific Access Restriction For Shared Network" is indicated:
 - 4> if the IE "Domain Specific Access Restriction Parameters For OperatorN" is indicated:
 - 5> apply the domain specific access restrictions as indicated by the IE "Domain Specific Access Restriction Parameters For OperatorN".
 - 3> else, if the IE "Domain Specific Access Restriction Parameters For All" of the IE "Domain Specific Access Restriction For Shared Network" is indicated:
 - 4> apply the domain specific access restrictions as indicated by the IE "Domain Specific Access Restriction Parameters For All".

The UE shall apply the following handling with respect to any Access Class Barring information:

- 1> if in idle mode and any Access Class Barring information is indicated:
 - 2> if no Domain Specific Access Restriction Parameters are included in System Information Block Type 3, the UE shall:
 - 3> act on the IE "Access Class Barred list" when initiating RRC Connection establishment as specified in [4].
 - 2> if the Domain Specific Access Restriction Parameters to be applied are included in System Information Block Type 3 the UE shall:
 - 3> act on the IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating RRC Connection establishment to send an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4];
 - 3> act on the IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating RRC Connection establishment to send an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4];
 - 3> upon transition to UTRA RRC connected, the UE shall:
 - 4> store that Domain Specific Access Restriction Parameters to the variable "DSAC_PARAM" and maintain the variable until it is cleared, the PLMN chosen by the UE is changed or the RRC connection is released;
 - 4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4];
 - 4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4];
- 1> if in connected mode:
 - 2> if no Access Class Barring information is indicated:
 - 3> if the variable "DSAC_PARAM" is set, the UE shall
 - 4> clear the variable "DSAC_PARAM";
 - 4> act as if no Access Class is barred.
 - 2> else if the Domain Specific Access Restriction Parameters to be applied is not included in System Information Block Type 3:

- 3> if the variable "DSAC_PARAM" is set, the UE shall:
 - 4> clear the variable "DSAC_PARAM";
 - 4> act as if no Access Class is barred.
- 2> else if the Domain Specific Access Restriction Parameters to be applied are included in the System Information Block Type 3:
 - 3> if the variable "DSAC_PARAM is not set, the UE shall:
 - 4> store that Domain Specific Access Restriction Parameters to the variable "DSAC_PARAM" and maintain the variable until it is cleared, the PLMN chosen by the UE is changed or the RRC connection is released;
 - 4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS, as specified in [4];
 - 4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4].
 - 3> else (the access class barring information is stored) UE shall:
 - 4> update the variable "DSAC_PARAM" with that Domain Specific Access Restriction Parameters;
 - 4> act on the updated IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4];
 - 4> act on the updated IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4].

8.1.1.6.4 System Information Block type 4

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- 1> if in connected mode:
 - 2> read and act on information sent in this block;
 - 2> read the System Information Block Type 3 for any Access Class Barring information and act on that information as described in subclause 8.1.1.6.3.

If in idle mode, the UE shall not use the values of the IEs included in this system information block.

8.1.1.6.5 System Information Block type 5 and 5bis

The UE should store all relevant IEs included in this system information block. The UE shall:

- 1> if the IE "Frequency band indicator" is included and if the frequency band indicated in the IE is not part of the frequency bands supported in the UE radio access capability; or
- 1> if the IE "Frequency band indicator 2" is included and if the frequency band indicated in the IE is not part of the frequency bands supported in the UE radio access capability; or
- 1> if the IE "Frequency band indicator" is included and set to "extension indicator", and the UE does not support any of the frequency bands that can be indicated by the IE "Frequency band indicator 2" (i.e., Band VIII or beyond); or
- 1> if the IE "Frequency band indicator" is not included in System Information Block type 5, the DL frequency is in between 2110MHz-2170MHz, and Band I is not part of the frequency bands supported by the UE in the UE radio access capability, or

- 1> if the IE "Frequency band indicator" is not included in System Information Block type 5, the DL frequency is in between 1805MHz-1880MHz, and Band III is not part of the frequency bands supported by the UE in the UE radio access capability:
 - 2> consider the cell to be barred according to [4]; and
 - 2> consider the barred cell as using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".
- 1> if the cell belongs to any frequency band equal to Band IV or greater and neither the IE "Frequency band indicator" nor the IE "Frequency band indicator 2" are included in System Information Block type 5 or in System Information Block type 5bis:
 - 2> the UE behaviour is not specified.
- 1> if in connected mode, and System Information Block type 6 is indicated as used in the cell:
 - 2> read and act on information sent in System Information Block type 6.
- 1> replace the TFS of the RACH with the one stored in the UE if any;
- 1> let the physical channel(s) of type PRACH given by the IE(s) "PRACH info" be the default in uplink for the PRACH if UE is in CELL_FACH state;
- 1> start to receive the physical channel of type AICH using the parameters given by the IE "AICH info" (FDD only) when given allocated PRACH is used;
- 1> if the IE "Additional Dynamic Transport Format Information for CCCH" is included for the selected PRACH:
 - 2> use this transport format for transmission of the CCCH.
- 1> else:
 - 2> use the first instance of the list of transport formats as in the IE "RACH TFS" for the used RACH received in the IE "PRACH system information list" when using the CCCH.
- 1> replace the TFS of the FACH/PCH with the one stored in the UE if any;
- 1> select a Secondary CCPCH as specified in [4] and in subclause 8.5.19, and start to receive the physical channel of type PICH associated with the PCH carried by the selected Secondary CCPCH using the parameters given by the IE "PICH info" if UE is in Idle mode or in CELL PCH or URA PCH state;
- 1> start to monitor its paging occasions on the selected PICH if UE is in Idle mode or in CELL_PCH or URA_PCH state;
- 1> start to receive the selected physical channel of type Secondary CCPCH using the parameters given by the IE(s) "Secondary CCPCH info" if UE is in CELL_FACH state;
- 1> in 3.84 Mcps TDD and 7.68 Mcps TDD:
 - 2> use the IE "TDD open loop power control" as defined in subclause 8.5.7 when allocated PRACH is used.
- 1> in TDD:
 - 2> if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included:
 - 3> store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. For every configuration, for which the IE "SFN Time info" is included, the information shall be stored for the duration given there.

If a UE is a 12 kbps class UE according to [35] and the UE has a lower capability than required to support all transport channel configurations mapped on a specific Secondary CCPCH, the UE shall at a certain time instant still be able to decode those transport channels mapped on this Secondary CCPCH that do match the capability supported by the UE. The UE shall use the TFCI bits for that Secondary CCPCH, to distinguish a transport channel configuration that is supported by the UE from a transport channel configuration that is not supported by the UE.

In particular if the UE is a 12 kbps class UE according to [35] and it does not support the processing requirement at a given point in time for a Secondary CCPCH, it shall still be able to decode the same Secondary CCPCH when the processing requirement is consistent with the UE capability. Or if the UE does not support the number of TFs or the coding of a certain transport channel on a Secondary CCPCH, it shall still be able to decode other transport channels mapped on the same Secondary CCPCH that is consistent with what is supported by the UE.

The UE shall:

- 1> if the IE "Secondary CCPCH system information MBMS" is included:
 - 2> apply the Secondary CCPCH and FACH indicated by the IE "FACH carrying MCCH" for receiving MCCH.
- 1> otherwise, if the IE "Secondary CCPCH system information" includes the IE "MCCH configuration information":
 - 2> apply the Secondary CCPCH and FACH indicated by the IE 'MCCH configuration information' for receiving MCCH.

8.1.1.6.6 System Information Block type 6

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- 1> if the IE "Frequency band indicator" is included:
 - 2> if the frequency band indicated in the IE is not part of the frequency bands supported in the UE radio access capability; or
 - 2> if the IE "Frequency band indicator 2" is included and if the frequency band indicated in the IE is not part of the frequency bands supported in the UE radio access capability; or
 - 2> if the IE "Frequency band indicator" is included and set to "extension indicator", and the UE does not support any of the frequency bands that can be indicated by the IE "Frequency band indicator 2" (i.e., Band VIII or beyond):
 - 3> consider the cell to be barred according to [4]; and
 - 3> consider the barred cell as using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".
- 1> replace the TFS of the RACH with the one stored in the UE if any;
- 1> let the physical channel(s) of type PRACH given by the IE(s) "PRACH info" be the default in uplink if UE is in CELL_FACH state. If the IE "PRACH info" is not included, the UE shall read the corresponding IE(s) in System Information Block type 5 or System Information Block type 5bis and use that information to configure the PRACH;
- 1> start to receive the physical channel of type AICH using the parameters given by the IE "AICH info" when associated PRACH is used. If the IE "AICH info" is not included, the UE shall read the corresponding IE in System Information Block type 5 or System Information Block type 5bis and use that information (FDD only);
- 1> if the IE "Additional Dynamic Transport Format Information for CCCH" is included for the selected PRACH:
 - 2> use this transport format for transmission of the CCCH (FDD only).

1> else:

- 2> use the first instance of the list of transport formats as in the IE "RACH TFS" for the used RACH received in the IE "PRACH system information list" when using the CCCH (FDD only).
- 1> replace the TFS of the FACH/PCH with the one stored in the UE if any;
- 1> select a Secondary CCPCH as specified in [4] and in subclause 8.5.19, and start to receive the physical channel of type PICH associated with the PCH carried by the selected Secondary CCPCH using the parameters given by the IE "PICH info" if the UE is in CELL_PCH or URA_PCH state. If the IE "PICH info" is not included, the UE shall read the corresponding IE in System Information Block type 5 or System Information Block type 5bis and use that information;

- 1> start to monitor its paging occasions on the selected PICH if the UE is in CELL_PCH or URA_PCH state;
- 1> start to receive the selected physical channel of type Secondary CCPCH using the parameters given by the IE(s) "Secondary CCPCH info" if the UE is in CELL_FACH state. If the IE "Secondary CCPCH info" is not included, the UE shall read the corresponding IE(s) in System Information Block type 5 or System Information Block type 5bis and use that information:
- 1> in 3.84 Mcps TDD and 7.68 Mcps TDD: use the IE "TDD open loop power control" as defined in subclause 8.5.7;
- 1> in TDD: if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included, store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. For every configuration, for which the IE "SFN Time info" is included, the information shall be stored for the duration given there.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

If a UE is a 12 kbps class UE according to [35] and the UE has a lower capability than required to support all transport channel configurations mapped on a specific Secondary CCPCH, the UE shall at a certain time instant still be able to decode those transport channels mapped on this Secondary CCPCH that do match the capability supported by the UE. The UE shall use the TFCI bits for that Secondary CCPCH, to distinguish a transport channel configuration that is supported by the UE from a transport channel configuration that is not supported by the UE.

In particular if the UE is a 12 kbps class UE according to [35] and it does not support the processing requirement at a given point in time for a Secondary CCPCH, it shall still be able to decode the same Secondary CCPCH when the processing requirement is consistent with the UE capability. Or if the UE does not support the number of TFs or the coding of a certain transport channel on a Secondary CCPCH, it shall still be able to decode other transport channels mapped on the same Secondary CCPCH that is consistent with what is supported by the UE.

8.1.1.6.7 System Information Block type 7

The UE should store all relevant IEs included in this system information block.

8.1.1.6.8 Void

8.1.1.6.9 Void

8.1.1.6.10 Void

8.1.1.6.11 System Information Block type 11

The UE should store all relevant IEs included in this system information block. The UE shall:

1> if in idle mode:

2> clear the variable MEASUREMENT_IDENTITY.

1> if IE "FACH measurement occasion info" is included:

2> act as specified in subclause 8.6.7.

1> else:

2> may perform inter-frequency/inter-RAT measurements or inter-frequency/inter-RAT cell re-selection evaluation, if the UE capabilities permit such measurements while simultaneously receiving the S-CCPCH of the serving cell.

1> clear the variable CELL_INFO_LIST;

- 1> act upon the received IE "Intra-frequency cell info list"/"Inter-frequency cell info list"/"Inter-RAT cell info list" as described in subclause 8.6.7.3;
- 1> if the IE "Inter-frequency RACH reporting information" is included in the system information block:
 - 2> read the IE and use that information for the inter-frequency measurements as specified in subclause 8.5.23.
- 1> if in idle mode: or
- 1> if in connected mode and if System Information Block type 12 is not broadcast in the cell:
 - 2> if no intra-frequency measurement stored in the variable MEASUREMENT_IDENTITY was set up or modified through a MEASUREMENT CONTROL message:
 - 3> if included, store the IE "Intra-frequency reporting quantity" and the IE "Intra-frequency measurement reporting criteria" or "Periodical reporting criteria" in order to activate reporting when state CELL_DCH is entered in the variable MEASUREMENT_IDENTITY. The IE "Cells for measurement" is absent for this measurement. The IE "Measurement Validity" is absent for this measurement after a state transition to CELL_DCH;
- 1> if in connected mode and if System Information Block type 12 is not broadcast in the cell:
 - 2> read the IE "Traffic volume measurement information";
 - 2> if no traffic volume measurement with the measurement identity indicated in the IE "Traffic volume measurement system information" was set up or modified through a MEASUREMENT CONTROL message:
 - 3> update the variable MEASUREMENT_IDENTITY with the measurement information received in that IE.
- 1> if the IE "Cell selection and reselection info" is not included for a new neighbouring cell in the IE "intrafrequency cell info list", the IE "inter-frequency cell info list" or the IE "inter-RAT cell info list" in System Information Block type 11:
 - 2> use the default values specified for the IE "Cell selection and reselection info" for that cell except for the IE "HCS neighbouring cell information".
- 1> if the IE "Use of HCS" is set to "used", indicating that HCS is used, do the following:
 - 2> if IE "HCS neighbouring cell information" is not included for the first new cell in the IE "Intra-frequency cell info list", the IE "Inter-frequency cell info list" or the IE "Inter-RAT cell info list" in System Information Block type 11:
 - 3> use the default values specified for the IE "HCS neighbouring cell information" for that cell.
 - 2> if IE "HCS neighbouring cell information" is not included for any other new cell in the IE "Intra-frequency cell info list", the IE "Inter-frequency cell info list" or the IE "Inter-RAT cell info list" in System Information Block type 11:
 - 3> for that cell use the same parameter values as used for the preceding cell in the same cell info list in System Information Block type 11.
- 1> if the value of the IE "Cell selection and reselection quality measure" is different from the value of the IE "Cell selection and reselection quality measure" obtained from System Information Block type 3 or System Information Block type 4:
 - 2> use the value of the IE from this System Information Block and ignore the value obtained from System Information Block type 3 or System Information Block type 4.
- 1> if in connected mode, and System Information Block type 12 is indicated as used in the cell:
 - 2> read and act on information sent in System Information Block type 12 as indicated in subclause 8.1.1.6.12.

8.1.1.6.12 System Information Block type 12

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- 1> after reception of System Information Block type 11:
 - 2> update the variable MEASUREMENT_IDENTITY with the measurement information in the received IEs unless specified otherwise.
- 1> if IE "FACH measurement occasion info" is included:
 - 2> act as specified in subclause 8.6.7.

1> else:

- 2> may perform inter-frequency/inter-RAT measurements or inter-frequency/inter-RAT cell re-selection evaluation, if the UE capabilities permit such measurements while simultaneously receiving the S-CCPCH of the serving cell.
- 1> act upon the received IE "Intra-frequency cell info list"/"Inter-frequency cell info list"/"Inter-RAT cell info list" as described in subclause 8.6.7.3;
- 1> if any of the IEs "Intra-frequency measurement quantity", "Intra-frequency reporting quantity for RACH reporting", "Maximum number of reported cells on RACH" or "Reporting information for state CELL_DCH" are not included in the system information block:
 - 2> read the corresponding IE(s) in system information block type 11 and use that information for the intrafrequency measurement.
- 1> if the IE "Inter-frequency RACH reporting information" is included in this system information block or in System Information Block type 11:
 - 2> if the IE is not included in the system information block, read the corresponding IE(s) in System Information Block type 11;
 - 2> use the received information for the inter-frequency measurements as specified in subclause 8.5.23.
- 1> if included in this system information block or in System Information Block type 11:
 - 2> if no intra-frequency measurement in the variable MEASUREMENT_IDENTITY was set up or modified through a MEASUREMENT CONTROL message:
 - 3> store the IE "Intra-frequency reporting quantity" and the IE "Intra-frequency measurement reporting criteria" or "Periodical reporting criteria" in order to activate reporting when state CELL_DCH is entered in the variable MEASUREMENT_IDENTITY. The IE "Cells for measurement" is absent for this measurement. The IE "Measurement Validity" is absent for this measurement after a state transition to CELL DCH;
- 1> if the IE "Traffic volume measurement system information" is not included in this system information block:
 - 2> read the corresponding IE in System Information Block type 11.
- 1> if the IE "Traffic volume measurement system information" was received either in this system information block or in System Information Block type 11:
 - 2> if no traffic volume measurement with the measurement identity indicated in the IE "Traffic volume measurement system information" was set up or modified through a MEASUREMENT CONTROL message:
 - 3> update the variable MEASUREMENT_IDENTITY with the measurement information received in that IE.

1> if in CELL FACH state:

- 2> start or continue the traffic volume measurements stored in the variable MEASUREMENT_IDENTITY that are valid in CELL_FACH state.
- 1> if the IE "Cell selection and reselection info" is not included for a new neighbouring cell in the IE "Intrafrequency cell info list", the IE "Inter-frequency cell info list" or the IE "Inter-RAT cell info list" in System Information Block type 12:

- 2> use the default values specified for the IE "Cell selection and reselection info" for that cell except for the IE "HCS neighbouring cell information".
- 1> if the IE "Use of HCS" is set to "used", indicating that HCS is used, do the following:
 - 2> if IE "HCS neighbouring cell information" is not included for the first new cell in the IE "Intra-frequency cell info list", the IE "Inter-frequency cell info list" or the IE "Inter-RAT cell info list" in System Information Block type 12:
 - 3> use the default values specified for the IE "HCS neighbouring cell information" for that cell.
 - 2> if IE "HCS neighbouring cell information" is not included for any other new cell in the IE "Intra-frequency cell info list", the IE "Inter-frequency cell info list" or the IE "Inter-RAT cell info list" in System Information Block type 12:
 - 3> for that cell use the same parameter values as used for the preceding cell in the same cell info list in System Information Block type 12.
- 1> if the value of the IE "Cell selection and reselection quality measure" is different from the value of the IE "Cell selection and reselection quality measure" obtained from System Information Block type 3 or System Information Block type 4:
 - 2> use the value of the IE from this System Information Block and ignore the value obtained from System Information Block type 3 or System Information Block type 4.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.13 System Information Block type 13

If in idle or connected mode, the UE should store all relevant IEs included in this system information block except for the IEs "CN domain specific DRX cycle length coefficient", "UE timers and constants in idle mode" and "Capability update requirement" which shall be stored only in the idle mode case. The UE shall read System Information Block type 13 and the associated System Information Block types 13.1, 13.2, 13.3 and 13.4 only when the UE is operating in "ANSI-41 mode" and the IE "PLMN type" in the Master Information Block has the value "ANSI-41" or "GSM-MAP and ANSI-41". The UE shall also:

- 1> forward the content of the IE "CN domain specific NAS system information" to the non-access stratum entity indicated by the IE "CN domain identity";
- 1> use the IE "CN domain specific DRX cycle length coefficient" to calculate frame number for the Paging Occasions and Page indicator as specified in [4].

Refer to TIA/EIA/IS-2000.5-A for actions on information contained in System Information Block types 13.1, 13.2, 13.3 and 13.4.

8.1.1.6.14 System Information Block type 14

This system information block type is used only in 3.84 Mcps TDD and 7.68 Mcps TDD.

The UE should store all relevant IEs included in this system information block. The UE shall:

1> use the IE "UL Timeslot Interference" to calculate PRACH, DPCH and PUSCH transmit power for TDD uplink open loop power control as defined in subclause 8.5.7.

8.1.1.6.15 System Information Block type 15

If the UE is in idle or connected mode, and supports GPS location services it should store all relevant IEs included in this system information block. The UE shall:

1> if the IE "GPS Data ciphering info" is included:

1> act as specified in the subclause 8.6.7.19.4.- act upon the received IE "Reference position" as specified in subclause 8.6.7.19.3.8;

1> act upon the received IE "GPS reference time" as specified in subclause 8.6.7.19.3.7;

- 1> if IE "Satellite information" is included:
 - 2> act upon this list of bad satellites as specified in subclause 8.6.7.19.3.6.
- NOTE: For efficiency purposes, the UTRAN should broadcast System Information Block type 15 if it is broadcasting System Information Block type 15.2.

8.1.1.6.15.1 System Information Block type 15.1

The UE should store all the relevant IEs included in this system information block in variable UE_POSITIONING_GPS_DATA. The UE shall:

- 1> act on "DGPS information" in the IE "DGPS Corrections" in a similar manner as specified in [13] except that the scale factors for PRC and RRC are different;
- 1> act upon the received IE " UE Positioning GPS DGPS corrections" as specified in subclause 8.6.7.19.3.3.

In this version of the specification, the UE shall:

1> ignore the following IEs: "Delta PRC2", "Delta RRC2", "Delta PRC3" and "Delta RRC3".

8.1.1.6.15.2 System Information Block type 15.2

For System Information Block type 15.2 multiple occurrences may be used; one occurrence for one satellite. To identify the different occurrences, the scheduling information for System Information Block type 15.2 includes IE "SIB occurrence identity and value tag". The UE should store all the relevant IEs included in this system information block in variable UE_POSITIONING_GPS_DATA. The UE shall:

- 1> compare for each occurrence the value tag of the stored occurrence, if any, with the occurrence value tag included in the IE "SIB occurrence identity and value tag" for the occurrence of the System Information Block with the same occurrence identity;
- 1> in case the UE has no SIB occurrence stored with the same identity or in case the occurrence value tag is different:
 - 2> store the occurrence information together with its identity and value tag for later use.
- 1> in case an occurrence with the same identity but different value tag was stored:
 - 2> overwrite this one with the new occurrence read via system information for later use.
- 1> interpret IE "Transmission TOW" as a very coarse estimate of the current time, i.e., the approximate GPS time-of-week when the message is broadcast;
- 1> interpret IE "SatID" as the satellite ID of the data from which this message was obtained;
- 1> act upon the received IEs "Sat ID" and "GPS Ephemeris and Clock Corrections Parameter" as specified in subclause 8.6.7.19.3.4.

The IE "Transmission TOW" may be different each time a particular SIB occurrence is transmitted. The UTRAN should not increment the value tag of the SIB occurrence if the IE "Transmission TOW" is the only IE that is changed.

The UE may not need to receive all occurrences before it can use the information from any one occurrence.

8.1.1.6.15.3 System Information Block type 15.3

For System Information Block type 15.3 multiple occurrences may be used; one occurrence for each set of satellite data. To identify the different occurrences, the scheduling information for System Information Block type 15.3 includes IE "SIB occurrence identity and value tag". The UE should store all the relevant IEs included in this system information block in variable UE POSITIONING GPS DATA. The UE shall:

1> compare for each occurrence the value tag of the stored occurrence, if any, with the occurrence value tag included in the IE "SIB occurrence identity and value tag" for the occurrence of the System Information Block with the same occurrence identity;

- 1> in case the UE has no SIB occurrence stored with the same identity or in case the occurrence value tag is different:
 - 2> store the occurrence information together with its identity and value tag for later use.
- 1> in case an occurrence with the same identity but different value tag was stored:
 - 2> overwrite this one with the new occurrence read via system information for later use.
- 1> interpret IE "Transmission TOW" as a very coarse estimate of the current time, i.e., the approximate GPS time-of-week when the message is broadcast;
- 1> if the IE "GPS Almanac and Satellite Health" is included:
 - 2> interpret IE "SatMask" as the satellites that contain the pages being broadcast in this message;
 - 2> interpret IE "LSB TOW" as the least significant 8 bits of the TOW ([12]);
 - 2> act upon the received IE "GPS Almanac and Satellite Health" as specified in subclause 8.6.7.19.3.2.
- 1> if the IE "GPS ionospheric model" is included:
 - 2> act upon the received IE "GPS ionospheric model" as specified in subclause 8.6.7.19.3.5.
- 1> if the IE "GPS UTC model" is included:
 - 2> act upon the received IE "GPS UTC model" as specified in subclause 8.6.7.19.3.9.

The IE "Transmission TOW" may be different each time a particular SIB occurrence is transmitted. The UTRAN should not increment the value tag of the SIB occurrence if the IE "Transmission TOW" is the only IE that is changed. One SIB occurrence value tag is assigned to the table of subclause 10.2.48.8.18.3.

The UE may not need to receive all occurrences before it can use the information for any one occurrence.

8.1.1.6.15.4 System Information Block type 15.4

If the UE is in idle mode or connected mode, the UE shall:

- 1> if the IE "OTDOA Data ciphering info" is included:
 - 2> act as specified in subclause 8.6.7.19.4.

If the UE is in connected mode, the UE shall:

1> act as specified in subclause 8.6.7.19.2.

8.1.1.6.15.5 System Information Block type 15.5

If the UE is in idle or connected mode, the UE shall:

- 1> if the UE supports UE-based OTDOA positioning:
 - 2> act as specified in subclause 8.6.7.19.2a.

8.1.1.6.16 System Information Block type 16

For System Information Block type 16 multiple occurrences may be used; one occurrence for each predefined configuration. To identify the different predefined configurations, the scheduling information for System Information Block type 16 includes IE "Predefined configuration identity and value tag".

The UE should store all relevant IEs included in this system information block. The UE shall:

1> compare for each predefined configuration the value tag of the stored predefined configuration with the preconfiguration value tag included in the IE "Predefined configuration identity and value tag" for the occurrence of the System Information Block with the same predefined configuration identity;

- 1> in case the UE has no predefined configuration stored with the same identity:
 - 2> store the predefined configuration information together with its identity and value tag for later use e.g. during handover to UTRAN.
- 1> in case a predefined configuration with the same identity but different value tag was stored:
 - 2> overwrite this one with the new configuration read via system information for later use e.g. during handover to UTRAN.

The above handling applies regardless of whether the previously stored predefined configuration information has been obtained via UTRA or via another RAT.

The UE is not required to complete reading of all occurrences of System Information Block type 16 before initiating RRC connection establishment.

The UE is not required to store more than maxPredefConfig preconfigurations even in the case of multiple equivalent PLMNs.

8.1.1.6.17 System Information Block type 17

This system information block type is used only for TDD.

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

1> if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included, store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. This information shall become invalid after the time specified by the repetition period (SIB_REP) for this system information block.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.18 System Information Block type 18

If the System Information Block type 18 is present, a UE shall obtain knowledge of the PLMN identity of the neighbour cells to be considered for cell reselection, and shall behave as specified in this subclause and in subclause 8.5.14a.

The UE should store all the relevant IEs included in this system information block.

A UE in idle mode shall act according to the following rules:

- 1> any PLMN list of a given type (IEs "PLMNs of intra-frequency cells list", "PLMNs of inter-frequency cells list", "PLMNs of inter-RAT cell lists") included in the IE "Idle mode PLMN identities" is paired with the list of cells of the same type derived from System Information Block type 11;
- 1> the PLMN identity located at a given rank in the PLMN list is that of the cell with the same ranking in the paired list of cells, the cells being considered in the increasing order of their associated identities ("Intra-frequency cell id", "Inter-frequency cell id", "Inter-RAT cell id");
- 1> if no identity is indicated for the first PLMN in a list, the UE shall assume that the neighbouring cell broadcasts the same PLMN configuration (i.e. IE "PLMN Identity" and IE "Multiple PLMN List") as the current cell;
- 1> if no identity is indicated for another entry in the list, the UE shall assume that the neighbouring cell broadcasts the same PLMN configuration (i.e. IE "PLMN Identity" and IE "Multiple PLMN List") as the previous cell in the list:
- 1> if the number of identities in a PLMN list exceeds the number of neighbour cells in the paired list (if any), the extra PLMN identities are considered as unnecessary and ignored;
- 1> if the number of identities in a PLMN list (if any) is lower than the number of neighbour cells in the paired list, the missing PLMN identities are replaced by the PLMN configuration for the last cell in the list.

A UE in connected mode shall act in the same manner as a UE in idle mode with the following modifications:

- 1> the PLMN lists to be considered are the ones included, when present, in the IE "Connected mode PLMN identities"; otherwise, the UE shall use, in place of any missing list, the corresponding one in the IE "Idle mode PLMN identities";
- 1> the paired lists of cells are the ones derived from System Information Block type 11, and System Information Block type 12 if present.

8.1.1.7 Modification of system information

For System Information Block type 15.2, 15.3 and 16 that may have multiple occurrences, the UE shall handle each occurrence independently as specified in the previous; that is each occurrence is handled as a separate system information block.

NOTE: It should be noted that for the proper operation of the BCCH Modification Information sent on a PCH, the System Information should not be changed more frequently than can be accommodated by mobile stations operating at the maximum DRX cycle length supported by the UTRAN.

8.1.1.7.1 Modification of system information blocks using a value tag

Upon modifications of system information blocks using value tags, UTRAN should notify the new value tag for the master information block in the IE "BCCH modification info", transmitted in the following way:

- 1> to reach UEs in idle mode, CELL_PCH state and URA_PCH state, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;
- 1> to reach UEs in CELL_FACH state or TDD UEs in CELL_DCH with S-CCPCH assigned, the IE "BCCH modification info" is contained in a SYSTEM INFORMATION CHANGE INDICATION message transmitted on the BCCH mapped on at least one FACH on every Secondary CCPCH in the cell.

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message containing the IE "BCCH modification info" containing the IE "MIB value tag" but not containing the IE "BCCH modification time", the UE shall perform actions as specified in subclause 8.1.1.7.3.

If the IE "BCCH modification time" is included the UE shall perform actions as specified in subclause 8.1.1.7.2.

8.1.1.7.2 Synchronised modification of system information blocks

For modification of some system information elements, e.g. reconfiguration of the channels, it is important for the UE to know exactly when a change occurs. In such cases, the UTRAN should notify the SFN when the change will occur as well as the new value tag for the master information block in the IE "BCCH modification info" transmitted in the following way:

- 1> To reach UEs in idle mode, CELL_PCH state and URA_PCH state, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;
- 1> To reach UEs in CELL_FACH state, the IE "BCCH modification info" is contained in a SYSTEM INFORMATION CHANGE INDICATION message transmitted on the BCCH mapped on at least one FACH on every Secondary CCPCH in the cell.

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message containing the IE "BCCH modification info" containing the IE "MIB value tag" and containing the IE "BCCH modification time", the UE shall:

1> perform the actions as specified in subclause 8.1.1.7.3 at the time, indicated in the IE "BCCH Modification Info".

8.1.1.7.3 Actions upon system information change

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

- 1> if the value tags differ:
 - 2> read the master information block on BCH;
 - 2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE TAG:
 - 3> perform actions as specified in subclause 8.1.1.5.
 - 2> if the value tag of the master information block in the system information is the same as the value tag stored in the variable VALUE TAG:
 - 3> for the next occurrence of the master information block:
 - 4> perform actions as specified in subclause 8.1.1.7.3 again.
 - 2> if the value tag of the master information block in the system information is different from the value tag stored in the variable VALUE_TAG, and is different from the value in IE "MIB value tag" in "BCCH modification info":
 - 3> perform actions as specified in subclause 8.1.1.5;
 - 3> if (VTCI-VTMIB) mod 8 < 4, where VTCI is the value tag in the IE "MIB value tag" in "BCCH modification info" and VTMIB is the value tag of the master information block in the system information:
 - 4> for the next occurrence of the master information block:
 - 5> perform actions as specified in subclause 8.1.1.7.3 again.

8.1.1.7.4 Actions upon expiry of a system information expiry timer

When the expiry timer of a system information block not using a value tag expires

the UE shall:

- 1> consider the content of the system information block invalid;
- 1> re-acquire the system information block again before the content can be used;

In FDD for system information blocks other than System Information Block type 7, or in states other than CELL_FACH, or in TDD for system information blocks other than System Information Block type 14, or in states other than CELL_FACH or CELL_DCH the UE may:

1> postpone reading the system information block until the content is needed.

In FDD for System Information Block type 7, while in state CELL_FACH, and in TDD for System Information Block type 14, while in state CELL_FACH or CELL DCH the UE shall always keep an up to date version of the relevant IEs, unless this is not possible because system information can not be received due to bad radio conditions.

8.1.2 Paging

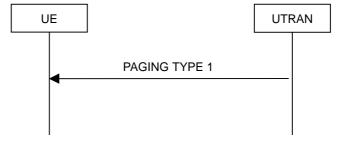


Figure 8.1.2-1: Paging

8.1.2.1 General

This procedure is used to transmit paging information to selected UEs in idle mode, CELL_PCH or URA_PCH state using the paging control channel (PCCH). Upper layers in the network may request paging, to e.g. establish a signalling connection. UTRAN may initiate paging for UEs in CELL_PCH or URA_PCH state to trigger a cell update procedure. In addition, UTRAN may initiate paging for UEs in idle mode, CELL_PCH and URA_PCH state to trigger reading of updated system information. UTRAN may also initiate paging for UEs in CELL_PCH and URA_PCH state to release the RRC connection.

8.1.2.2 Initiation

UTRAN initiates the paging procedure by transmitting a PAGING TYPE 1 message on an appropriate paging occasion on the PCCH.

UTRAN may repeat transmission of a PAGING TYPE 1 message to a UE in several paging occasions to increase the probability of proper reception of a page.

UTRAN may page several UEs in the same paging occasion by including one IE "Paging record" for each UE in the PAGING TYPE 1 message.

For CN originated paging, UTRAN should set the IE "Paging cause" to the cause for paging received from upper layers. If no cause for paging is received from upper layers, UTRAN should set the value "Terminating – cause unknown".

UTRAN may also indicate that system information has been updated, by including the value tag of the master information block in the IE "BCCH modification info" in the PAGING TYPE 1 message. In this case, UTRAN may omit the IEs "Paging record".

8.1.2.3 Reception of a PAGING TYPE 1 message by the UE

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For a UE in idle mode, the paging occasions are specified in [4] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

- 1> if the IE "Used paging identity" is a CN identity:
 - 2> compare the IE "UE identity" with all of its allocated CN UE identities:
 - 2> if one match is found:
 - 3> indicate reception of paging; and
 - 3> forward the IE "CN domain identity", the IE "UE identity" and the IE "Paging cause" to the upper layers.
- 1> otherwise:
 - 2> ignore that paging record.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

- 1> if the IE "Used paging identity" is a UTRAN single UE identity and if this U-RNTI is the same as the U-RNTI allocated to the UE stored in the UE variable U_RNTI:
 - 2> if the optional IE "CN originated page to connected mode UE" is included:
 - 3> indicate reception of paging; and
 - 3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

- 2> if the IE "Release indicator" in the IE "RRC connection release information" has the value "Release":
 - 3> release all its radio resources;
 - 3> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to the upper layers;
 - 3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 3> clear the variable ESTABLISHED_RABS;
 - 3> pass the value of the IE "Release cause" received in the IE "Release information" to upper layers;
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode;
 - 3> and the procedure ends.
- 2> otherwise:
 - 3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.
- 2> ignore any other remaining IE "Paging record" that may be present in the message.
- 1> if the IE "Used paging identity" is a UTRAN group identity and there is a group identity match according to subclause 8.6.3.13:
 - 2> if the IE "Release indicator" in the IE "RRC connection release information" has the value "Release":
 - 3> release all its radio resources;
 - 3> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to the upper layers;
 - 3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 3> clear the variable ESTABLISHED_RABS;
 - 3> pass the value of the IE "Release cause" received in the IE 'Release information' to upper layers;
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode;
 - 3> and the procedure ends.
 - 2> otherwise:
 - 3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.
 - 2> ignore any other remaining IE "Paging record" that may be present in the message.
- 1> otherwise:
 - 2> ignore that paging record.

If the IE "BCCH modification info" is included, any UE in idle mode, CELL_PCH or URA_PCH state shall perform the actions as specified in subclause 8.1.1 in addition to any actions caused by the IE "Paging record" occurrences in the message as specified above.

8.1.3 RRC connection establishment

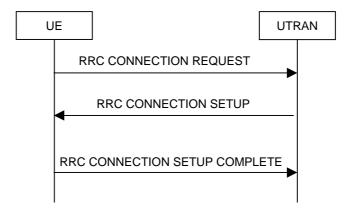


Figure 8.1.3-1: RRC Connection Establishment, network accepts RRC connection

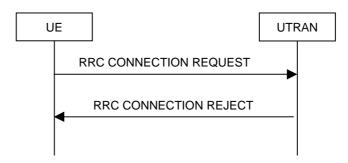


Figure 8.1.3-2: RRC Connection Establishment, network rejects RRC connection

8.1.3.1 General

The purpose of this procedure is to establish an RRC connection.

8.1.3.2 Initiation

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists), as specified in subclause 8.1.8.

Upon initiation of the procedure, the UE shall:

- 1> set the variable PROTOCOL_ERROR_INDICATOR to FALSE;
- 1> if the USIM is present:
 - 2> set the value of "THRESHOLD" in the variable "START_THRESHOLD" to the 20 MSBs of the value stored in the USIM [50] for the maximum value of START for each CN Domain.
- 1> if the SIM is present:
 - 2> set the value of "THRESHOLD" in the variable "START_THRESHOLD" to the default value in [40] for each CN Domain.
- 1> set the IE "Initial UE identity" in the variable INITIAL_UE_IDENTITY according to subclause 8.5.1;
- 1> set the contents of the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
- 1> set CFN in relation to SFN of current cell according to subclause 8.5.15;
- 1> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
- 1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

- 1> set counter V300 to 1; and
- 1> if the variable ESTABLISHMENT_CAUSE is set to "MBMS reception":
 - 2> when the MAC layer indicates success or failure to transmit the message:
 - 3> if the MAC layer indicates failure:
 - 4> enter idle mode;
 - 4> consider the procedure to be unsuccessful;
 - 4> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
 - 4> the procedure ends.

3> else:

- 3> start timer T318;
- 3> apply value 0 for counter N300 regardless of the value included in IE "UE Timers and Constants in idle mode":
- 1> otherwise:
 - 2> start timer T300 when the MAC layer indicates success or failure to transmit the message.
- 1> select a Secondary CCPCH according to [4];
- 1> start receiving all FACH transport channels mapped on the selected Secondary CCPCH.

8.1.3.3 RRC CONNECTION REQUEST message contents to set

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

- 1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;
- 1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;
- 1> set the IE "Protocol error indicator" to the value of the variable PROTOCOL_ERROR_INDICATOR; and
- 1> include the IE "Predefined configuration status information" and set this IE to true if the UE has all preconfigurations stored with the same value tag as broadcast in the cell in which the RRC connection establishment is initiated.
- 1> if the UE is attempting to establish the signalling connection to PS-domain:
 - 2> include the IE "Domain Indicator" and set it to "PS domain".
- 1> else if the UE is attempting to establish the signalling connection to CS domain:
 - 2> include the IE "Domain Indicator" and set it to "CS domain".
- 1> if the UE only supports HS-DSCH but not E-DCH:
 - $2\!\!>$ include the IE "UE capability indication" and set it to the "HS-DSCH" value.
- 1> if the UE supports HS-DSCH and E-DCH:
 - 2> include the IE "UE capability indication" and set it to the "HS-DSCH+E-DCH" value.

The UE shall not include the IE "UE Specific Behaviour Information 1 idle".

8.1.3.4 Reception of an RRC CONNECTION REQUEST message by the UTRAN

Upon receiving an RRC CONNECTION REQUEST message, UTRAN should either:

- 1> accept the request and use a predefined or default radio configuration, in which case it should:
 - 2> include the following information in the RRC CONNECTION SETUP message:
 - 3> the IE "Predefined configuration identity", to indicate which pre-defined configuration of RB and, transport channel parameters shall be used; or
 - 3> the IE "Default configuration mode" and IE "Default configuration identity", to indicate which default configuration of RB and transport channel parameters shall be used;
 - 3> PhyCH information elements.
 - 2> submit the RRC CONNECTION SETUP message to the lower layers for transmission on the downlink CCCH.
- NOTE 1: UTRAN should only apply a predefined radio configuration in case it orders the UE to enter CELL_DCH. This is because the predefined configuration information included in System Information Block 16 mandatorily includes information only required in CELL_DCH state.
- 1> accept the request without using a predefined or default radio configuration, in which case it should:
 - 2> include in the RRC CONNECTION SETUP message the complete set of RB, TrCH and PhyCH information elements to be used;
 - 2> submit the RRC CONNECTION SETUP message to the lower layers for transmission on the downlink CCCH;
- NOTE 2: In R'99, the RRC CONNECTION SETUP message always includes the IEs "Added or Reconfigured TrCH information list", both for uplink and downlink transport channels, even if UTRAN orders the UE to move to CELL_FACH and hence need not configure any transport channels. In these cases, UTRAN may include a configuration that adds little to the encoded message size e.g. a DCH with a single zero size transport format. At a later stage, UTRAN may either remove or reconfigure this configuration.
- 1> submit an RRC CONNECTION REJECT message on the downlink CCCH. In the RRC CONNECTION REJECT message, the UTRAN may direct the UE to another UTRA carrier or to another system. After the RRC CONNECTION REJECT message has been sent, all context information for the UE may be deleted in UTRAN.

8.1.3.5 Cell re-selection, T300 or T318 timeout

- 1> if the UE has not yet received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and
- 1> if cell re-selection or expiry of timer T300 or timer T318 occurs:

the UE shall:

- 1> check the value of V300; and
 - 2> if V300 is equal to or smaller than N300:
 - 3> if cell re-selection occurred:
 - 4> set CFN in relation to SFN of current cell according to subclause 8.5.15.
 - 3> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - 3> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13; and
 - 3> apply the given Access Service Class when accessing the RACH;
 - 3> submit a new RRC CONNECTION REQUEST message to lower layers for transmission on the uplink CCCH;
 - 3> increment counter V300;
 - 3> restart timer T300 when the MAC layer indicates success or failure to transmit the message.

- 2> if V300 is greater than N300:
 - 3> enter idle mode.
 - 3> consider the procedure to be unsuccessful;
 - 3> Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2:
 - 3> the procedure ends.

8.1.3.5a Abortion of RRC connection establishment

If the UE has not yet entered UTRA RRC Connected mode and the RRC connection establishment is to be aborted as specified in subclause 8.1.8, the UE shall:

- 1> consider the procedure to be unsuccessful;
- 1> perform the actions when entering idle mode as specified in subclause 8.5.2.

The procedure ends.

8.1.3.6 Reception of an RRC CONNECTION SETUP message by the UE

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

- 2> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Predefined configuration":
 - 3> initiate the radio bearer and transport channel configuration in accordance with the predefined parameters identified by the IE "Predefined configuration identity" with the following exception;
 - 4> ignore the IE "RB to setup list" and the IE "Re- establishment timer".
- NOTE: IE above IEs are mandatory to include in IE 'Predefined RB configuration' that is included in System Information Block 16 but should be ignored since it is not possible to establish a RAB during RRC connection establishment.
 - 3> initiate the physical channels in accordance with the received physical channel information elements;
 - 2> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Default configuration":
 - 3> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity" with the following exception:
 - 4> ignore the radio bearers other than signalling radio bearers.
 - 3> initiate the physical channels in accordance with the received physical channel information elements.
- NOTE: IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.
 - 2> if IE "Specification mode" is set to "Complete specification":
 - 3> initiate the radio bearer, transport channel and physical channel configuration in accordance with the received radio bearer, transport channel and physical channel information elements.

- 1> clear the variable ESTABLISHMENT_CAUSE;
- 1> stop timer T300 or T318, whichever one is running, and act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:
 - 2> if the UE, according to subclause 8.6.3.3, will be in the CELL_FACH state at the conclusion of this procedure:
 - 3> if the IE "Frequency info" is included:
 - 4> select a suitable UTRA cell according to [4] on that frequency.
 - 3> enter UTRA RRC connected mode;
 - 3> select PRACH according to subclause 8.5.17;
 - 3> select Secondary CCPCH according to subclause 8.5.19;
 - 3> ignore the IE "UTRAN DRX cycle length coefficient" and stop using DRX.
- 1> if the UE, according to subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:
 - 2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);
 - 2> enter UTRA RRC connected mode.
- 1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per subclause 8.6.3.3, with the contents set as specified below:
 - 2> set the IE "RRC transaction identifier" to:
 - 3> the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 3> clear that entry.
 - 2> if the USIM or SIM is present:
 - 3> set the "START" for each CN domain in the IE "START list" in the RRC CONNECTION SETUP COMPLETE message with the corresponding START value that is stored in the USIM [50] if present, or as stored in the UE if the SIM is present; and then
 - 3> set the START value stored in the USIM [50] if present, and as stored in the UE if the SIM is present for any CN domain to the value "THRESHOLD" of the variable START_THRESHOLD.
 - 2> if neither the USIM nor SIM is present:
 - 3> set the "START" for each CN domain in the IE "START list" in the RRC CONNECTION SETUP COMPLETE message to zero;
 - 3> set the value of "THRESHOLD" in the variable "START_THRESHOLD" to the default value [40].
 - 2> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then
 - 2> include this in IE "UE radio access capability" and IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;
 - 2> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then
 - 2> include this in IE "UE system specific capability".

When the RRC CONNECTION SETUP COMPLETE message has been submitted to lower layers for transmission the UE shall:

1> if the UE has entered CELL_FACH state:

- 2> start timer T305 using its initial value if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS.
- 1> store the contents of the variable UE_CAPABILITY_REQUESTED in the variable UE_CAPABILITY_TRANSFERRED;
- 1> initialise variables upon entering UTRA RRC connected mode as specified in subclause 13.4;
- 1> consider the procedure to be successful;

And the procedure ends.

8.1.3.7 Physical channel failure or cell re-selection

- 1> If the UE failed to establish, per subclause 8.5.4, the physical channel(s) indicated in the RRC CONNECTION SETUP message; or
- 1> if the UE performs cell re-selection; or
- 1> if the UE will be in the CELL_FACH state at the conclusion of this procedure; and
- 1> if the received RRC CONNECTION SETUP message included the IE "Frequency info" and the UE could not find a suitable UTRA cell on that frequency but it could find a suitable UTRA cell on another frequency; or
- 1> if the received RRC CONNECTION SETUP message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE; or
- 1> if the contents of the variable C_RNTI is empty;
- 1> after having received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and
- 1> before the RRC CONNECTION SETUP COMPLETE message is delivered to lower layers for transmission:

the UE shall:

- 1> clear the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> check the value of V300, and:
 - 2> if V300 is equal to or smaller than N300:
 - 3> set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - 3> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - 3> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - 3> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - 3> increment counter V300; and
 - 3> restart timer T300 when the MAC layer indicates success or failure in transmitting the message.
 - 2> if V300 is greater than N300:
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - 3> consider the RRC establishment procedure to be unsuccessful;
 - 3> the procedure ends.

8.1.3.8 Invalid RRC CONNECTION SETUP message, unsupported configuration or invalid configuration

If the UTRAN instructs the UE to use a configuration, which it does not support e.g., the message includes a predefined configuration that the UE has not stored and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION or the variable INVALID_CONFIGURATION to be set to TRUE the UE shall perform procedure specific error handling as specified in this subclause.

If the UE receives an RRC CONNECTION SETUP message which contains an IE "Initial UE identity" with a value which is identical to the value of the variable INITIAL_UE_IDENTITY, but the RRC CONNECTION SETUP message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> stop timer T300 or T318, whichever one is running; and
- 1> clear the entry for the RRC CONNECTION SETUP message in the table "Rejected transactions" in the variable TRANSACTIONS and proceed as below.

If the UE receives an RRC CONNECTION SETUP message which contains an IE "Initial UE identity" with a value which is identical to the value of the variable INITIAL_UE_IDENTITY:

- 1> if the RRC CONNECTION SETUP message contained a configuration the UE does not support; and/or
- 1> if the variable UNSUPPORTED_CONFIGURATION becomes set to TRUE due to the received RRC CONNECTION SETUP message; and/or
- 1> if the variable INVALID_CONFIGURATION becomes set to TRUE due to the received RRC CONNECTION SETUP message:

the UE shall:

- 1> stop timer T300 or T318, whichever one is running; and
- 1> clear the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS and proceed as below.

If V300 is equal to or smaller than N300, the UE shall:

- 1> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;
- 1> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
- 1> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13; and
- 1> apply the given Access Service Class when accessing the RACH;
- 1> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
- 1> increment counter V300; and
- 1> restart timer T300 when the MAC layer indicates success or failure in transmitting the message.

If V300 is greater than N300, the UE shall:

- 1> enter idle mode;
- 1> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
- 1> consider the RRC establishment procedure to be unsuccessful;
- 1> the procedure ends.

8.1.3.9 Reception of an RRC CONNECTION REJECT message by the UE

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall:

- 1> stop timer T300 or T318, whichever one is running; and
- 1> clear the entry for the RRC CONNECTION REJECT message in the table "Accepted transactions" in the variable TRANSACTIONS:
- 1> if the UE has disabled cell reselection to a UTRA carrier due to an earlier RRC CONNECTION REJECT message, the UE shall resume cell reselection to that UTRA carrier;
- 1> if the IE "wait time" <> '0'; and
- 1> if the IE "frequency info" is present and:
 - 2> if V300 is equal to or smaller than N300:
 - 3> select a suitable UTRA cell according to [4] on that frequency;
 - 3> after having selected and camped on a suitable cell on the designated UTRA carrier:
 - 4> set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - 4> set the contents of the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - 4> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - 4> transmit an RRC CONNECTION REQUEST message on the uplink CCCH;
 - 4> reset counter V300;
 - 4> start timer T300 when the MAC layer indicates success or failure in transmitting the message;
 - 4> disable cell reselection to original UTRA carrier until the time stated in the IE "wait time" has elapsed or until the RRC connection establishment procedure ends, whichever occurs first;
 - 3> if no suitable cell on the designated UTRA carrier is found:
 - 4> wait for at least the time stated in the IE "wait time";
 - 4> set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - 4> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - 4> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - 4> then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH of the original serving cell;
 - 4> increment counter V300;
 - 4> restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - 2> if V300 is greater than N300:
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;

- 3> consider the RRC establishment procedure to be unsuccessful;
- 3> the procedure ends.
- 1> if the IE "inter-RAT info" is present:
 - 2> if the IE "wait time" = '0':
 - 3> the UE behaviour is not specified.
 - 2> if V300 is equal to or smaller than N300:
 - 3> if the IE "GSM target cell info" is present:
 - 4> attempt to camp on a suitable cell of the list of cells indicated for that RAT;
 - 4> if the UE selects and camps on one of the cells indicated for that RAT:
 - 5> disable cell reselection to the original RAT until the time stated in the IE "wait time" has elapsed.
 - 4> if the UE cannot find any suitable cell from the indicated ones within 10s, the UE is allowed to camp on any suitable cell on that RAT.
 - 3> if the IE "GSM target cell info" is not present:
 - 4> select a suitable cell in the designated RAT;
 - 4> after having selected and camped on a suitable cell on the designated RAT:
 - 5> disable cell reselection to the original RAT until the time stated in the IE "wait time" has elapsed or until the UE successfully establishes a connection on the designated RAT, whichever occurs first.
 - 3> if no suitable cell in the designated RAT is found:
 - 4> wait at least the time stated in the IE "wait time";
 - 4> set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - 4> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.2.
 - 4> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - 4> then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - 4> increment counter V300;
 - 4> restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - 2> if V300 is greater than N300:
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - 3> consider the RRC establishment procedure to be unsuccessful;
 - 3> the procedure ends.
- 1> if the IE "wait time" <> '0'; and
- 1> if neither the IEs "frequency info" nor "inter-RAT info" are present:
 - 2> if V300 is equal to or smaller than N300:
 - 3> wait at least the time stated in the IE "wait time";

- 3> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.2;
- 3> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
- 3> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
- 3> increment counter V300;
- 3> restart timer T300 when the MAC layer indicates success or failure to transmit the message;
- 2> if V300 is greater than N300:
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - 3> consider the RRC establishment procedure to be unsuccessful;
 - 3> the procedure ends.
- 1> if the IE "wait time" = '0':
 - 2> enter idle mode;
 - 2> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - 2> consider the RRC establishment procedure to be unsuccessful;
 - 2> the procedure ends.

8.1.3.10 Invalid RRC CONNECTION REJECT message

If the UE receives an RRC CONNECTION REJECT message which contains an IE "Initial UE identity" with a value which is identical to the value of the IE "Initial UE identity" in the most recent RRC CONNECTION REQUEST message sent by the UE; but the RRC CONNECTION REJECT message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

The UE shall:

- 1> stop timer T300 or T318, whichever one is running; and
- 1> clear the entry for the RRC CONNECTION REJECT message in the table "Rejected transactions" in the variable TRANSACTIONS:
- 1> if V300 is equal to or smaller than N300:
 - 2> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;
 - 2> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - 2> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - 2> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - 2> increment counter V300;
 - 2> restart timer T300 when the MAC layer indicates success or failure to transmit the message.
- 1> if V300 is greater than N300:
 - 2> enter idle mode;

- 2> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
- 2> consider the procedure to be successful;
- 2> the procedure ends.

8.1.4 RRC connection release

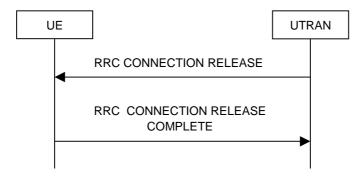


Figure 8.1.4-1: RRC Connection Release procedure on the DCCH



Figure 8.1.4-2: RRC Connection Release procedure on the CCCH

8.1.4.1 General

The purpose of this procedure is to release the RRC connection including all radio bearers and all signalling radio bearers between the UE and the UTRAN. By doing so, all established signalling connections will be released.

8.1.4.2 Initiation

When the UE is in state CELL_DCH or CELL_FACH, the UTRAN may at anytime initiate an RRC connection release by transmitting an RRC CONNECTION RELEASE message using UM RLC.

When UTRAN transmits an RRC CONNECTION RELEASE message the downlink DCCH should be used, if available. If the downlink DCCH is not available in UTRAN and the UE is in CELL_FACH state, the downlink CCCH may be used.

UTRAN may transmit several RRC CONNECTION RELEASE messages to increase the probability of proper reception of the message by the UE. In such a case, the RRC SN for these repeated messages should be the same. The number of repeated messages and the interval between the messages is a network option.

8.1.4.3 Reception of an RRC CONNECTION RELEASE message by the UE

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message; and

- 1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U RNTI; or
- 1> if the message is received on DCCH:

the UE shall perform the RRC connection release procedure as specified below.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, the IE "UTRAN group identity" is present and there is a group identity match according to subclause 8.6.3.13:

the UE shall perform the RRC connection release procedure as specified below.

The UE shall:

- 1> in state CELL_DCH:
 - 2> initialise the counter V308 to zero;
 - 2> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - 2> submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using UM RLC on the DCCH to the UTRAN;
 - 2> if the IE "Rplmn information" is present:
 - 3> the UE may:
 - 4> store the IE on the ME together with the PLMN id for which it applies;
 - 3> the UE may then:
 - 4> utilise this information, typically indicating where a number of BCCH frequency ranges of a RAT may be expected to be found, during subsequent Rplmn selections of the indicated PLMN.
 - 2> start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.

1> in state CELL_FACH:

- 2> if the RRC CONNECTION RELEASE message was received on the DCCH:
 - 3> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - 3> submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using AM RLC on the DCCH to the UTRAN.
 - 3> when the successful transmission of the RRC CONNECTION RELEASE COMPLETE message has been confirmed by the lower layers:
 - 4> release all its radio resources; and
 - 4> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers; and
 - 4> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;
 - 4> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 4> clear the variable ESTABLISHED RABS;
 - 4> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;
 - 4> enter idle mode;

- 4> perform the actions specified in subclause 8.5.2 when entering idle mode.
- 3> and the procedure ends.
- 2> if the RRC CONNECTION RELEASE message was received on the CCCH:
 - 3> release all its radio resources;
 - 3> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to the upper layers;
 - 3> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;
 - 3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 3> clear the variable ESTABLISHED_RABS;
 - 3> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;
 - 3> enter idle mode;
 - 3> perform the actions specified in subclause 8.5.2 when entering idle mode;
 - 3> and the procedure ends.

8.1.4.4 Invalid RRC CONNECTION RELEASE message

If the RRC CONNECTION RELEASE message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, and if the "protocol error cause" in PROTOCOL_ERROR_INFORMATION is set to any cause value except "ASN.1 violation or encoding error", the UE shall perform procedure specific error handling as follows:

The UE shall:

- 1> ignore any IE(s) causing the error but treat the rest of the RRC CONNECTION RELEASE message as normal according to subclause 8.1.4.3, with an addition of the following actions:
 - 2> if the RRC CONNECTION RELEASE message was received on the DCCH:
 - 3> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - 3> include the IE "Error indication" in the RRC CONNECTION RELEASE COMPLETE message with:
 - 4> the IE "Failure cause" set to the cause value "Protocol error"; and
 - 4> the IE "Protocol error information" set to the value of the variable PROTOCOL ERROR INFORMATION.

8.1.4.5 Cell re-selection or radio link failure

If the UE performs cell re-selection or the radio link failure criteria in subclause 8.5.6 are met at any time during the RRC connection release procedure and the UE has not yet entered idle mode, the UE shall:

- 1> if cell re-selection occurred (CELL_FACH state):
 - 2> perform a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection".
- 1> if radio link failure occurred (CELL DCH state):
 - 2> release all its radio resources:

- 2> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 2> clear the variable ESTABLISHED_RABS;
- 2> enter idle mode;
- 2> perform the actions specified in subclause 8.5.2 when entering idle mode;
- 2> and the procedure ends.

8.1.4.6 Expiry of timer T308, unacknowledged mode transmission

When in state CELL_DCH and the timer T308 expires, the UE shall:

- 1> increment V308 by one;
- 1> if V308 is equal to or smaller than N308:
 - 2> prior to retransmitting the RRC CONNECTION RELEASE COMPLETE message:
 - 3> if the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started":
 - 4> include the same IEs as in the last unsuccessful attempt of this message, except for the IE "Integrity check info", which is set as specified in subclause 8.5.10.
 - 3> else:
 - 4> include the same IEs as in the last unsuccessful attempt of this message.
 - 2> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message retransmitted below to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - 2> send the RRC CONNECTION RELEASE COMPLETE message on signalling radio bearer RB1;
 - 2> start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.
- 1> if V308 is greater than N308:
 - 2> release all its radio resources;
 - 2> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> enter idle mode;
 - 2> perform the actions specified in subclause 8.5.2 when entering idle mode;
 - 2> and the procedure ends.

8.1.4.7 Void

8.1.4.8 Reception of an RRC CONNECTION RELEASE COMPLETE message by UTRAN

When UTRAN receives an RRC CONNECTION RELEASE COMPLETE message from the UE, it should:

1> release all UE dedicated resources and the procedure ends on the UTRAN side.

8.1.4.9 Unsuccessful transmission of the RRC CONNECTION RELEASE COMPLETE message, acknowledged mode transmission

When acknowledged mode was used and RLC does not succeed in transmitting the RRC CONNECTION RELEASE COMPLETE message, the UE shall:

- 1> release all its radio resources;
- 1> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 1> clear the variable ESTABLISHED SIGNALLING CONNECTIONS;
- 1> clear the variable ESTABLISHED_RABS;
- 1> enter idle mode;
- 1> perform the actions specified in subclause 8.5.2 when entering idle mode;
- 1> and the procedure ends.

8.1.4.10 Detection of loss of dedicated physical channel by UTRAN in CELL_DCH state

If the release is performed from the state CELL_DCH, and UTRAN detects loss of the dedicated physical channel according to subclause 8.5.6, UTRAN may release all UE dedicated resources, even if no RRC CONNECTION RELEASE COMPLETE message has been received.

8.1.4.11 Failure to receive RRC CONNECTION RELEASE COMPLETE message by UTRAN

If UTRAN does not receive any RRC CONNECTION RELEASE COMPLETE message, it should release all UE dedicated resources.

8.1.4a RRC connection release requested by upper layers

8.1.4a.1 General

The purpose of this procedure is to release the RRC connection and bar the current cell or cells. The procedure is requested by upper layers when they determine that the network has failed an authentication check [5].

8.1.4a.2 Initiation

If the upper layers request the release of the RRC connection, the UE shall:

- 1> release all its radio resources:
- 1> enter idle mode;
- 1> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
- 1> if the UE was in CELL_DCH state prior to entering idle mode:
 - 2> consider all cells that were in the active set prior to entering idle mode to be barred according to [4]; and

- 2> consider the barred cells as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".
- 1> if the UE was in CELL_FACH or CELL_PCH or URA_PCH state prior to entering idle mode:
 - 2> consider the cell on which the UE was camped prior to entering idle mode to be barred according to [4]; and
 - 2> consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

8.1.5 Void

8.1.6 Transmission of UE capability information

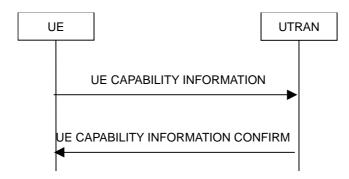


Figure 8.1.6-1: Transmission of UE capability information, normal flow

8.1.6.1 General

The UE capability update procedure is used by the UE to convey UE specific capability information to the UTRAN.

8.1.6.2 Initiation

The UE shall initiate the UE capability update procedure in the following situations:

- 1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN;
- 1> while in connected mode the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED.

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

- 1> include the IE "RRC transaction identifier"; and
- 1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> for the UE capabilities defined prior to REL-6:
 - 2> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and
 - 2> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE CAPABILITY REQUESTED;
 - 2> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and
 - 2> include this in IE "UE system specific capability".

- 1> for the UE capabilities defined in REL-6 or later:
 - 2> include the information elements associated with the capabilities included in the variable UE_CAPABILITY_REQUESTED and the variable UE_CAPABILITY_TRANSFERRED.

If the UE CAPABILITY INFORMATION message is sent because one or more of the UE capabilities change compared to those stored in the variable UE CAPABILITY TRANSFERRED while in connected state, the UE shall:

- 1> for the UE capabilities defined prior to REL-6, include the information elements associated with the capabilities that have changed in the UE CAPABILITY INFORMATION message; and
- 1> for the UE capabilities defined in REL-6 or later, include the information elements associated with the capabilities included in the variable UE_CAPABILITY_TRANSFERRED.

If the UE is in CELL_PCH or URA_PCH state, it shall first perform a cell update procedure using the cause "uplink data transmission", see subclause 8.3.1.

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

8.1.6.3 Reception of a UE CAPABILITY INFORMATION message by the UTRAN

Upon reception of a UE CAPABILITY INFORMATION message, the UTRAN should transmit a UE CAPABILITY INFORMATION CONFIRM message on the downlink DCCH using UM or AM RLC. After the UE CAPABILITY INFORMATION CONFIRM message has been submitted to the lower layers for transmission, the procedure is complete.

8.1.6.4 Reception of the UE CAPABILITY INFORMATION CONFIRM message by the UE

Upon reception of a UE CAPABILITY INFORMATION CONFIRM message, the UE shall:

- 1> stop timer T304;
- 1> if there is an entry for the UE CAPABILITY ENQUIRY message is present in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 2> clear that entry.
- 1> update its variable UE_CAPABILITY_TRANSFERRED with the UE capabilities it has last transmitted to the UTRAN during the current RRC connection;
- 1> clear the variable UE_CAPABILITY_REQUESTED;
- 1> and the procedure ends.

8.1.6.5 Invalid UE CAPABILITY INFORMATION CONFIRM message

If the UE receives a UE CAPABILITY INFORMATION CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> stop timer T304;
- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to UE CAPABILITY INFORMATION CONFIRM; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY INFORMATION CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS; and

- 1> clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> restart timer T304 and continue with any ongoing procedures or processes as if the invalid UE CAPABILITY INFORMATION CONFIRM message has not been received.

8.1.6.6 T304 timeout

Upon expiry of timer T304, the UE shall check the value of V304 and:

- 1> if V304 is smaller than or equal to N304:
 - 2> prior to retransmitting the UE CAPABILITY INFORMATION message:
 - 3> if the IE "Status" in the variable INTEGRITY PROTECTION INFO has the value "Started":
 - 4> include the same IEs as in the last unsuccessful attempt of this message, except for the IE "Integrity check info", which is set as specified in subclause 8.5.10.
 - 3> else:
 - 4> include the same IEs as in the last unsuccessful attempt of this message.
 - 2> send the UE CAPABILITY INFORMATION message on signalling radio bearer RB2;
 - 2> restart timer T304;
 - 2> increment counter V304.
- 1> if V304 is greater than N304:
 - 2> initiate the Cell update procedure as specified in subclause 8.3.1, using the cause "Radio link failure".

8.1.7 UE capability enquiry

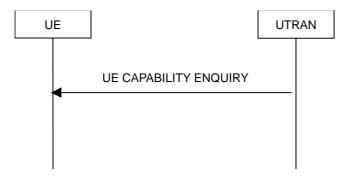


Figure 8.1.7-1: UE capability enquiry procedure, normal flow

8.1.7.1 General

The UE capability enquiry can be used to request the UE to transmit its capability information related to any radio access network that is supported by the UE.

8.1.7.2 Initiation

The UE capability enquiry procedure is initiated by the UTRAN by transmitting a UE CAPABILITY ENQUIRY message on the DCCH using UM or AM RLC.

8.1.7.3 Reception of a UE CAPABILITY ENQUIRY message by the UE

Upon reception of a UE CAPABILITY ENQUIRY message, the UE shall act on the received information elements as specified in subclause 8.6 and initiate the transmission of UE capability information procedure, which is specified in subclause 8.1.6.

8.1.7.4 Invalid UE CAPABILITY ENQUIRY message

If the UE receives a UE CAPABILITY ENQUIRY message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to UE CAPABILITY ENQUIRY; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with the ongoing processes and procedures as if the invalid UE CAPABILITY ENQUIRY message has not been received.

8.1.8 Initial Direct transfer

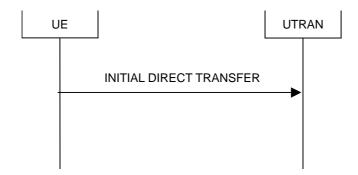


Figure 8.1.8-1: Initial Direct transfer in the uplink, normal flow

8.1.8.1 General

The initial direct transfer procedure is used in the uplink to establish a signalling connection. It is also used to carry an initial upper layer (NAS) message over the radio interface.

8.1.8.2 Initiation of Initial direct transfer procedure in the UE

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

- 1> perform an RRC connection establishment procedure, according to subclause 8.1.3;
- NOTE: If an RRC connection establishment is ongoing, this procedure continues unchanged, i.e. it is not interrupted.
- 1> if the RRC connection establishment procedure was not successful:
 - 2> if the establishment cause for the failed RRC connection establishment was set to "MBMS reception" and a different cause value is stored in the variable "ESTABLISHMENT_CAUSE":
 - 3> UE-AS (RRC) initiates a new RRC connection establishment procedure, using the establishment cause as contained in the variable ESTABLISHMENT CAUSE.

2> otherwise:

- 3> indicate failure to establish the signalling connection to upper layers and end the procedure.
- 1> when the RRC connection establishment procedure is completed successfully:
 - 2> continue with the initial direct transfer procedure as below.

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

- 1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- 1> when the cell update procedure completed successfully:
 - 2> continue with the initial direct transfer procedure as below.

The UE shall, in the INITIAL DIRECT TRANSFER message:

- 1> set the IE "NAS message" as received from upper layers; and
- 1> set the IE "CN domain identity" as indicated by the upper layers; and
- 1> set the IE "Intra Domain NAS Node Selector" as follows:
 - 2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and
 - 2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:
 - 1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;
 - 2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;
 - 3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.
- 1> if the UE, on the existing RRC connection, has received a dedicated RRC message containing the IE "Primary PLMN Identity" in the IE "CN Information Info":
 - 2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the latest PLMN information received via dedicated RRC signalling. If NAS has indicated the PLMN towards which a signalling connection is requested, and this PLMN is not in agreement with the latest PLMN information received via dedicated RRC signalling, then the initial direct transfer procedure shall be aborted, and NAS shall be informed.
- 1> if the UE, on the existing RRC connection, has not received a dedicated RRC message containing the IE "CN Information Info", and if the IE "Multiple PLMN List" was broadcast in the cell where the current RRC connection was established:
 - 2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the PLMN chosen by higher layers [5, 25] amongst the PLMNs in the IE "Multiple PLMN List" broadcast in the cell where the RRC connection was established.
- 1> if the IE "Activated service list" within variable MBMS_ACTIVATED_SERVICES includes one or more MBMS services with the IE "Service type" set to "Multicast" and;

- 1> if the IE "CN domain identity" as indicated by the upper layers is set to "CS domain" and;
- 1> if the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity 'PS domain':
 - 2> include the IE "MBMS joined information";
 - 2> include the IE "P-TMSI" within the IE "MBMS joined information" if a valid PTMSI is available.
- 1> if the variable ESTABLISHMENT_CAUSE_ is initialised:
 - 2> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;
 - 2> clear the variable ESTABLISHMENT_CAUSE.
- 1> calculate the START according to subclause 8.5.9 for the CN domain as set in the IE "CN Domain Identity"; and
- 1> include the calculated START value for that CN domain in the IE "START".

The UE shall:

- 1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;
- 1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:
 - 2> confirm the establishment of a signalling connection to upper layers; and
 - 2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.
- 1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:
 - 2> the procedure ends.

When not stated otherwise elsewhere, the UE may also initiate the initial direct transfer procedure when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

A new signalling connection request may be received from upper layers during transition to idle mode. In those cases, from the time of the indication of release to upper layers until the UE has entered idle mode, any such upper layer request to establish a new signalling connection shall be queued. This request shall be processed after the UE has entered idle mode.

8.1.8.2a RLC re-establishment or inter-RAT change

If a re-establishment of the transmitting side of the RLC entity on signalling radio bearer RB3 occurs before the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC, the UE shall:

1> retransmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3.

If an Inter-RAT handover from UTRAN procedure occurs before the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC, for messages with the IE "CN domain identity" set to "CS domain", the UE shall:

1> retransmit the NAS message as specified in subclause 8.3.7.4.

8.1.8.2ab Inter-RAT handover from UTRAN to GERAN *lu mode*

If an Inter-RAT handover from UTRAN to GERAN *Iu mode* occurs before the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC, for messages for all CN domains, the UE shall:

1> retransmit the NAS message as specified in subclause 8.3.7.4.

8.1.8.2b Abortion of signalling connection establishment

If the UE receives a request from upper layers to release (abort) the signalling connection for the CN domain for which the initial direct transfer procedure is ongoing, the UE shall:

1> if the UE has not yet entered UTRA RRC connected mode:

2> abort the RRC connection establishment procedure as specified in subclause 8.1.3;

the procedure ends.

8.1.8.3 Reception of INITIAL DIRECT TRANSFER message by the UTRAN

On reception of the INITIAL DIRECT TRANSFER message the NAS message should be routed using the IE "CN Domain Identity". UTRAN may also use the IE "Intra Domain NAS Node Selector" and the IE "PLMN identity" for routing among the CN nodes for the addressed CN domain.

If no signalling connection exists towards the chosen node, then a signalling connection is established.

When the UTRAN receives an INITIAL DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

The UTRAN should:

1> set the START value for the CN domain indicated in the IE "CN domain identity" to the value of the IE "START".

8.1.9 Downlink Direct transfer



Figure 8.1.9-1: Downlink Direct transfer, normal flow

8.1.9.1 General

The downlink direct transfer procedure is used in the downlink direction to carry upper layer (NAS) messages over the radio interface.

8.1.9.2 Initiation of downlink direct transfer procedure in the UTRAN

In the UTRAN, the direct transfer procedure is initiated when the upper layers request the transfer of a NAS message after the initial signalling connection is established. The UTRAN may also initiate the downlink direct transfer procedure when another RRC procedure is ongoing, and in that case the state of the latter procedure shall not be affected. The UTRAN shall transmit the DOWNLINK DIRECT TRANSFER message on the downlink DCCH using AM RLC on signalling radio bearer RB3 or signalling radio bearer RB4. The UTRAN should:

- 1> if upper layers indicate "low priority" for this message:
 - 2> select signalling radio bearer RB4, if available. Specifically, for a GSM-MAP based CN, signalling radio bearer RB4 should, if available, be selected when "SAPI 3" is requested;
 - 2> select signalling radio bearer RB3 when signalling radio bearer RB4 is not available.

- 1> if upper layers indicate "high priority" for this message:
 - 2> select signalling radio bearer RB3. Specifically, for a GSM-MAP based CN, signalling radio bearer RB3 should be selected when "SAPI 0" is requested.

The UTRAN sets the IE "CN Domain Identity" to indicate, which CN domain the NAS message is originated from.

8.1.9.3 Reception of a DOWNLINK DIRECT TRANSFER message by the UE

Upon reception of the DOWNLINK DIRECT TRANSFER message, the UE RRC shall, using the IE "CN Domain Identity", route the contents of the IE "NAS message" and the value of the IE"CN Domain Identity" to upper layers.

The UE shall clear the entry for the DOWNLINK DIRECT TRANSFER message in the table "Accepted transactions" in the variable TRANSACTIONS.

When the UE receives a DOWNLINK DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures when not stated otherwise elsewhere.

8.1.9.3a No signalling connection exists

If the UE receives a DOWNLINK DIRECT TRANSFER message, and the signalling connection identified with the IE "CN domain identity" does not exist according to the variable ESTABLISHED_SIGNALLING_CONNECTIONS, the UE shall:

- 1> ignore the content of the DOWNLINK DIRECT TRANSFER message;
- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> include the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state".

When the RRC STATUS message has been submitted to lower layers for transmission, the UE shall:

1> continue with any ongoing processes and procedures as if the DOWNLINK DIRECT TRANSFER message has not been received.

8.1.9.4 Invalid DOWNLINK DIRECT TRANSFER message

If the UE receives a DOWNLINK DIRECT TRANSFER message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

When the RRC STATUS message has been submitted to lower layers for transmission, the UE shall:

1> continue with any ongoing processes and procedures as if the invalid DOWNLINK DIRECT TRANSFER message has not been received.

8.1.10 Uplink Direct transfer

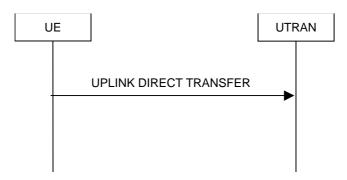


Figure 8.1.10-1: Uplink Direct transfer, normal flow

8.1.10.1 General

The uplink direct transfer procedure is used in the uplink direction to carry all subsequent upper layer (NAS) messages over the radio interface belonging to a signalling connection.

8.1.10.2 Initiation of uplink direct transfer procedure in the UE

In the UE, the uplink direct transfer procedure shall be initiated when the upper layers request a transfer of a NAS message on an existing signalling connection. When not stated otherwise elsewhere, the UE may initiate the uplink direct transfer procedure when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

Upon initiation of the uplink direct transfer procedure in CELL PCH or URA PCH state, the UE shall:

- 1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- 1> when the cell update procedure has been completed successfully:
 - 2> continue with the uplink direct transfer procedure as below.

The UE shall transmit the UPLINK DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3 or signalling radio bearer RB4. The UE shall:

- 1> if upper layers indicate "low priority" for this message:
 - 2> select signalling radio bearer RB4, if available. Specifically, for a GSM-MAP based CN, signalling radio bearer RB4 shall, if available, be selected when "SAPI 3" is requested;
 - 2> select signalling radio bearer RB3 when signalling radio bearer RB4 is not available;
- 1> if upper layers indicate "high priority" for this message:
 - 2> select signalling radio bearer RB3. Specifically, for a GSM-MAP based CN, signalling radio bearer RB3 shall be selected when "SAPI 0" is requested.

The UE shall set the IE "NAS message" as received from upper layers and set the IE "CN domain identity" as indicated by the upper layers.

When the successful delivery of the UPLINK DIRECT TRANSFER message has been confirmed by RLC the procedure ends.

8.1.10.2a RLC re-establishment or inter-RAT change

If signalling radio bearer RB n (where n equals to 3 or 4) was used when transmitting the UPLINK DIRECT TRANSFER message and a re-establishment of the transmitting side of the RLC entity on the same signalling radio bearer RB n occurs before the successful delivery of the UPLINK DIRECT TRANSFER message has been confirmed by RLC, the UE shall:

1> retransmit the UPLINK DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB n.

If an Inter-RAT handover from UTRAN procedure occurs before the successful delivery of the UPLINK DIRECT TRANSFER message has been confirmed by RLC, for messages with the IE "CN domain identity" set to "CS domain", the UE shall:

1> retransmit the NAS message as specified in subclause 8.3.7.4.

8.1.10.2b Inter-RAT handover from UTRAN to GERAN *lu mode*

If an Inter-RAT handover from UTRAN to GERAN *Iu mode* occurs before the successful delivery of the UPLINK DIRECT TRANSFER message has been confirmed by RLC, for messages for all CN domains, the UE shall:

1> retransmit the NAS message as specified in subclause 8.3.7.4.

8.1.10.3 Reception of UPLINK DIRECT TRANSFER message by the UTRAN

On reception of the UPLINK DIRECT TRANSFER message the NAS message should be routed using the value indicated in the IE "CN domain identity".

When the UTRAN receives an UPLINK DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

8.1.11 UE dedicated paging

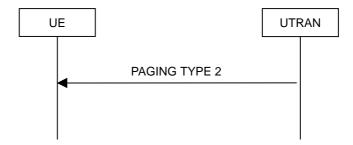


Figure 8.1.11-1: UE dedicated paging

8.1.11.1 General

This procedure is used to transmit dedicated paging information to one UE in connected mode in CELL_DCH or CELL FACH state. Upper layers in the network may request initiation of paging.

8.1.11.2 Initiation

For a UE in CELL_DCH or CELL_FACH state, UTRAN initiates the procedure by transmitting a PAGING TYPE 2 message on the DCCH using AM RLC. When not stated otherwise elsewhere, the UTRAN may initiate the UE dedicated paging procedure also when another RRC procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

UTRAN should set the IE "Paging cause" to the cause for paging received from upper layers. If no cause for paging is received from upper layers, UTRAN should set the value "Terminating – cause unknown".

8.1.11.3 Reception of a PAGING TYPE 2 message by the UE

When the UE receives a PAGING TYPE 2 message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

The UE shall:

- 1> indicate reception of paging; and
- 1> forward the IE "Paging cause" and the IE "Paging record type identifier" to upper layers.

The UE shall:

1> clear the entry for the PAGING TYPE 2 message in the table "Accepted transactions" in the variable TRANSACTIONS.

8.1.11.4 Invalid PAGING TYPE 2 message

If the UE receives a PAGING TYPE 2 message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to PAGING TYPE 2; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the PAGING TYPE 2 message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid PAGING TYPE 2 message has not been received.

8.1.12 Security mode control

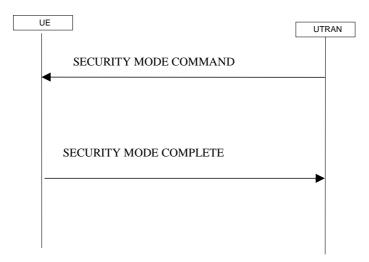


Figure 8.1.12-1: Security mode control procedure

8.1.12.1 General

The purpose of this procedure is to trigger the start of ciphering or to command the restart of the ciphering with a new ciphering configuration, for the radio bearers of one CN domain and for all signalling radio bearers.

It is also used to start integrity protection or to modify the integrity protection configuration for all signalling radio bearers.

8.1.12.2 Initiation

8.1.12.2.1 Ciphering configuration change

To start/restart ciphering, UTRAN sends a SECURITY MODE COMMAND message on the downlink DCCH in AM RLC using the most recent ciphering configuration. If no such ciphering configuration exists then the SECURITY MODE COMMAND is not ciphered. UTRAN should not transmit a SECURITY MODE COMMAND to signal a change in ciphering algorithm.

When configuring ciphering, UTRAN should ensure that the UE needs to store at most two different ciphering configurations (keyset and algorithm) per CN domain, in total over all radio bearers at any given time. For signalling radio bearers the total number of ciphering configurations that need to be stored is at most three. Prior to sending the SECURITY MODE COMMAND, for the CN domain indicated in the IE "CN domain identity" in the SECURITY MODE COMMAND, UTRAN should:

- 1> suspend all radio bearers using RLC-AM or RLC-UM and all signalling radio bearers using RLC-AM or RLC-UM, except the signalling radio bearer used to send the SECURITY MODE COMMAND message on the downlink DCCH in RLC-AM, and except signalling radio bearer RB0, according to the following:
 - 2> not transmit RLC PDUs with sequence number greater than or equal to the number in IE "Radio bearer downlink ciphering activation time info" on all suspended radio bearers and all suspended signalling radio bearers.
- 1> set, for the signalling radio bearer used to send the SECURITY MODE COMMAND, the "RLC sequence number" in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info", at which time the new ciphering configuration shall be applied;
- NOTE: The UTRAN should avoid the situation that the UE is aware of more than one pending downlink ciphering activation times for SRB2. In such a case the UE behaviour is unspecified.
- 1> if a transparent mode radio bearer for this CN domain exists:
 - 2> include the IE "Ciphering activation time for DPCH" in IE "Ciphering mode info", at which time the new ciphering configuration shall be applied and specify a CFN value for this IE that is a multiple of 8 frames (CFN mod 8 = 0).
- NOTE: UTRAN should chose the value for the IE "Ciphering activation time for DPCH" such that the new ciphering configuration will occur after all the pending ciphering activation times have been reached for the transparent mode radio bearers of this CN domain.
- 1> consider a ciphering activation time in downlink to be pending until the RLC sequence number of the next RLC PDU to be transmitted for the first time is equal to or larger than the selected activation time;
- 1> set, for each suspended radio bearer and signalling radio bearer that has no pending ciphering activation time set by a previous security mode control procedure, an "RLC sequence number" in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info", at which time the new ciphering configuration shall be applied;
- 1> set, for each suspended radio bearer and signalling radio bearer that has a pending ciphering activation time set by a previous security mode control procedure, the "RLC sequence number" in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info" to the value used in the previous security mode control procedure, at which time the latest ciphering configuration shall be applied;
- 1> if Integrity protection has already been started for the UE:

- 2> if for the CN domain indicated in the IE "CN domain identity" in the SECURITY MODE COMMAND, a new security key set (new ciphering and integrity protection keys) has been received from upper layers since the transmission of the last SECURITY MODE COMMAND message for that CN domain:
 - 3> include the IE "Integrity protection mode info" in the SECURITY MODE COMMAND.
- 2> if the IE "CN domain identity" in the SECURITY MODE COMMAND is different from the IE "CN domain identity" that was sent in the previous SECURITY MODE COMMAND message to the UE:
 - 3> include the IE "Integrity protection mode info" in the SECURITY MODE COMMAND.
- 1> transmit the SECURITY MODE COMMAND message on RB2.

8.1.12.2.2 Integrity protection configuration change

To start or modify integrity protection, UTRAN sends a SECURITY MODE COMMAND message on the downlink DCCH in AM RLC using the new integrity protection configuration. UTRAN should not "modify" integrity protection for a CN domain to which a SECURITY MODE COMMAND configuring integrity protection has been previously sent for an ongoing signalling connection unless the application of new integrity keys needs to be signalled to the UE. UTRAN should not transmit a SECURITY MODE COMMAND to signal a change in integrity protection algorithm.

In case of Inter-RAT handover to UTRAN, after the reception of the HANDOVER TO UTRAN COMPLETE message and a key set is received, UTRAN should transmit a SECURITY MODE COMMAND message containing IE "Integrity protection mode info" in order to initiate integrity protection with the integrity key of the key set used in the other RAT (see subclause 8.3.6.3).

When configuring Integrity protection, UTRAN should:

- 1> ensure that the UE needs to store at most three different Integrity protection configurations (keysets) at any given time. This includes the total number of Integrity protection configurations for all signalling radio bearers;
- 1> if Ciphering has already been started for the UE for the CN domain to be set in the IE "CN domain identity" in the SECURITY MODE COMMAND:
 - 2> if for the CN domain indicated in the IE "CN domain identity" in the SECURITY MODE COMMAND, a new security key set (new ciphering and integrity protection keys) has been received from upper layers since the transmission of the last SECURITY MODE COMMAND message for that CN domain:
 - 3> include the IE "Ciphering mode info" in the SECURITY MODE COMMAND.
- 1> if Ciphering has already been configured for the UE for a CN domain different from the CN domain to be set in the IE "CN domain identity" in the SECURITY MODE COMMAND:
 - 2> include the IE "Ciphering mode info" in the SECURITY MODE COMMAND.

Prior to sending the SECURITY MODE COMMAND, for the CN domain indicated in the IE "CN domain identity" in the SECURITY MODE COMMAND, UTRAN should:

- 1> if this is the first SECURITY MODE COMMAND sent for this RRC connection:
 - 2> if new keys have been received:
 - 3> initialise the hyper frame numbers as follows:
 - 4> set all bits of the hyper frame numbers of the COUNT-I values for all signalling radio bearers to zero.
 - 2> else (if new keys have not been received):
 - 3> use the value "START" in the most recently received IE "START list" or IE "START" that belongs to the CN domain indicated in the IE "CN domain identity" to initialise all hyper frame numbers of COUNT-I for all the signalling radio bearers by:
 - 4> setting the 20 most significant bits of the hyper frame numbers for all signalling radio bearers to the value "START" in the most recently received IE "START list" or IE "START" for that CN domain;
 - 4> setting the remaining bits of the hyper frame numbers equal to zero.

- 1> else (this is not the first SECURITY MODE COMMAND sent for this RRC connection):
 - 2> if new keys have been received:
 - 3> initialise the hyper frame number for COUNT-I for RB2 as follows:
 - 4> set all bits of the HFN of the COUNT-I value for RB2 to zero.
 - 2> if new keys have not been received:
 - 3> initialise the hyper frame number for COUNT-I for RB2 as follows:
 - 4> set the 20 most significant bits of the HFN of the downlink and uplink COUNT-I to the value of the most recently received IE "START" or IE "START list" for the CN domain to be set in the IE "CN Domain Identity";
 - 4> set the remaining bits of the HFN of the downlink and uplink COUNT-I to zero.
- 1> if the IE "Integrity protection mode command" has the value "Start":
 - 2> prohibit the transmission of signalling messages with any RRC SN on all signalling radio bearers, except RB2;
 - 2> set the FRESH value in the IE "Integrity protection initialisation number", included in the IE "Integrity protection mode info".
- 1> if the IE "Integrity protection mode command" has the value "Modify":
 - 2> for each signalling radio bearer RBn, except RB2:
 - 3> prohibit the transmission of signalling messages with RRC SN greater or equal to the RRC sequence number in entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info".
 - 2> consider an integrity protection activation time in downlink to be pending until the selected activation time is equal to the next RRC sequence number to be used, which means that the last RRC message using the old integrity protection configuration has been submitted to lower layers;
 - 2> set, for each signalling radio bearer RBn, that has no pending integrity protection activation time set by a previous security mode control procedure, an RRC sequence number in entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info", at which time the new integrity protection configuration shall be applied;
 - 2> set, for each signalling radio bearer RBn, that has a pending integrity protection activation time set by a previous security mode control procedure, the RRC sequence number in entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info", to the value used in the previous security mode control procedure, at which time the latest integrity protection configuration shall be applied.
- 1> transmit the SECURITY MODE COMMAND message on RB2 using the new integrity protection configuration.
- NOTE1: In the case of re-initialisation of Integrity Protection at HFN wrap around, the network should take into account the UE actions as described in subclauses 8.5.10.1 and 8.5.10.2.
- NOTE2: After the SECURITY MODE COMMAND message is transmitted, the network should ensure that it can revert back to old integrity protection until it receives the SECURITY MODE COMPLETE message, to take into account the UE actions when security mode control procedure is unsuccessful. The network should also be aware that the UE may revert to old configuration when waiting for the acknowledgement from L2 for the SECURITY MODE COMPLETE message, and act accordingly.
- NOTE3: In the case of the first SECURITY MODE COMMAND message following an SRNS relocation, the network should set the IE "Downlink integrity protection activation info" for SRB3 and SRB4 to at least "the current downlink RRC sequence number +2". As a consequence, at least the first message sent on SRB3 and SRB4 by the Target RNC will use the old integrity protection configuration.

8.1.12.3 Reception of SECURITY MODE COMMAND message by the UE

Upon reception of the SECURITY MODE COMMAND message, the UE shall:

- 1> if neither IE "Ciphering mode info" nor IE "Integrity protection mode info" is included in the SECURITY MODE COMMAND:
 - 2> set the variable INVALID CONFIGURATION to TRUE.
- 1> if the IE "Security capability" is the same as indicated by variable UE_CAPABILITY_TRANSFERRED, and the IE "GSM security capability" (if included in the SECURITY MODE COMMAND) is the same as indicated by the variable UE_CAPABILITY_TRANSFERRED:
 - 2> set the variable LATEST_CONFIGURED_CN_DOMAIN equal to the IE "CN domain identity";
 - 2> set the IE "Status" in the variable SECURITY_MODIFICATION for the CN domain indicated in the IE "CN domain identity" in the received SECURITY MODE COMMAND to the value "Affected";
 - 2> set the IE "Status" in the variable SECURITY_MODIFICATION for all CN domains other than the CN domain indicated in the IE "CN domain identity" to "Not affected";
 - 2> set the IE "RRC transaction identifier" in the SECURITY MODE COMPLETE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":
 - 3> perform the actions as specified in subclause 8.6.3.4.
 - 2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":
 - 3> perform the actions as specified in subclause 8.6.3.5.
- 1> prior to sending the SECURITY MODE COMPLETE message:
 - 2> use the old ciphering configuration for this message;
 - 2> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":
 - 3> include and set the IE "Radio bearer uplink ciphering activation time info" to the value of the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 3> for each radio bearer and signalling radio bearer that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN:
 - 4> start or continue incrementing the COUNT-C values for all RLC-AM and RLC-UM signalling radio bearers at the ciphering activation time as specified in the procedure;
 - 4> start or continue incrementing the COUNT-C values common for all transparent mode radio bearers for this CN domain at the ciphering activation time as specified in the procedure;
 - 4> continue incrementing the COUNT-C values for all RLC-AM and RLC-UM radio bearers.
 - 3> if no new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain as indicated in the variable LATEST CONFIGURED CN DOMAIN:
 - 4> for ciphering on signalling radio bearers using RLC-AM and RLC-UM in the downlink, at the RLC sequence number indicated in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info" included in the SECURITY MODE COMMAND, for each signalling radio bearer:
 - 5> set the 20 most significant bits of the HFN component of the downlink COUNT-C to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;

- 5> set the remaining bits of the hyper frame numbers to zero.
- 3> if new keys have been received:
 - 4> perform the actions in subclause 8.1.12.3.1.
- 2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":
 - 3> include and set the IE "Uplink integrity protection activation info" to the value of the variable INTEGRITY_PROTECTION_ACTIVATION_INFO for each signalling radio bearer;
 - 3> if no new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN, for RR2.
 - 4> in the downlink, for the received SECURITY MODE COMMAND message:
 - 5> set the 20 most significant bits of the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 5> set the remaining bits of the IE "Downlink RRC HFN" to zero.
 - 4> in the uplink, for the transmitted response message, SECURITY MODE COMPLETE:
 - 5> set the 20 most significant bits of the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 5> set the remaining bits of the IE "Uplink RRC HFN" to zero.
 - 3> if no new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN, for each signalling radio bearer other than RB2:
 - 4> if the IE "Integrity protection mode command" has the value "start":
 - 5> in the downlink, for this signalling radio bearer:
 - 6> set the 20 most significant bits of IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to the value START transmitted in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 6> set the remaining bits of the IE "Downlink RRC HFN" in the variable INTEGRITY PROTECTION INFO of the downlink COUNT-I to zero;
 - 4> else:
 - 5> in the downlink, for the first message for which the RRC sequence number in a received RRC message for this signalling radio bearer is equal to or greater than the activation time as indicated in IE "Downlink integrity protection activation info" as included in the IE "Integrity protection mode info", for this signalling radio bearer:
 - 6> set the 20 most significant bits of the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 6> set the remaining bits of the IE "Downlink RRC HFN" to zero.

- 3> if new keys have been received:
 - 4> perform the actions in subclause 8.1.12.3.1.
- 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted SECURITY MODE COMPLETE message;
- 2> transmit the SECURITY MODE COMPLETE message on RB2.
- NOTE: After submission of the SECURITY MODE COMPLETE message to the lower layers, the UE should accept messages received in the DL which require the new security configuration to be applied on them. If the received message is successfully integrity checked, the UE should not discard the message due to lack of completion of the security procedure, caused by the successful delivery of the SECURITY MODE COMPLETE not having yet been confirmed by lower layers, unless the security configuration to be applied has been aborted and the message received requires integrity protection [5].
- 1> when the successful delivery of the SECURITY MODE COMPLETE message has been confirmed by RLC:
 - 2> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":
 - 3> if no new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN:
 - 4> for ciphering on signalling radio bearers using RLC-AM and RLC-UM in the uplink, at the RLC sequence number indicated in IE "Radio bearer uplink ciphering activation time info" included in the SECURITY MODE COMPLETE, for each signalling radio bearer:
 - 5> set the 20 most significant bits of the HFN component of the uplink COUNT-C to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 5> set the remaining bits of the hyper frame numbers to zero.
 - 3> if new keys have been received:
 - 4> perform the actions in subclause 8.1.12.3.1.
 - 3> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;
 - 3> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 3> clear the variable RB UPLINK CIPHERING ACTIVATION TIME INFO.
 - 2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":
 - 3> if no new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN, for each signalling radio bearer other than RB2:
 - 4> if the IE "Integrity protection mode command" has the value "start":
 - 5> in the uplink, for this signalling radio bearer:
 - 6> set the 20 most significant bits of IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to the value START transmitted in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 6> set the remaining bits of the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to zero.

4> else:

- 5> in the uplink, for the first transmitted RRC message for this signalling radio bearer with RRC sequence number equal to the activation time as indicated in IE "Uplink integrity protection activation info" included in the transmitted SECURITY MODE COMPLETE, for this signalling radio bearer:
 - 6> set the 20 most significant bits of the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to the value "START" in the most recently transmitted IE "START list" or IE "START", at the reception of the SECURITY MODE COMMAND, that belongs to the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 6> set the remaining bits of the IE "Uplink RRC HFN" to zero.
- 3> if new keys have been received:
 - 4> perform the actions in subclause 8.1.12.3.1.
- 3> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
- 3> set "Uplink RRC Message sequence number" for signalling radio bearer RB0 in the variable INTEGRITY_PROTECTION_INFO to a value such that next RRC message to be sent on uplink RB0 will use the new integrity protection configuration and the "RRC Message sequence number" in the IE "Integrity check info" in the next RRC message will equal to the activation time for RB0 as indicated in IE "Uplink integrity protection activation info" included in the transmitted SECURITY MODE COMPLETE;
- 3> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
- 3> clear the variable INTEGRITY PROTECTION ACTIVATION INFO.
- 2> clear the variable SECURITY_MODIFICATION;
- 2> notify upper layers upon change of the security configuration;
- 2> and the procedure ends.
- 1> if the IE "Security capability" is not the same as indicated by the variable UE_CAPABILITY_TRANSFERRED, or the IE "GSM security capability" (if included in the SECURITY MODE COMMAND) is not the same as indicated by the variable UE_CAPABILITY_TRANSFERRED, or if the IE "GSM security capability" is not included in the SECURITY MODE COMMAND and is included in the variable UE_CAPABILITY_TRANSFERRED:
 - 2> release all its radio resources;
 - 2> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> clear the variable SECURITY_MODIFICATION;
 - 2> enter idle mode;
 - 2> perform actions when entering idle mode as specified in subclause 8.5.2;
 - 2> and the procedure ends.

8.1.12.3.1 New ciphering and integrity protection keys

NOTE: The actions in this subclause are to be performed only if the new keys were received for an ongoing RRC connection while in UTRA.

If a new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN, the UE shall:

- 1> set the START value for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN to zero:
- 1> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":
 - 2> for integrity protection in the downlink on each signalling radio bearer except RB2:
 - 3> if IE "Integrity protection mode command" has the value "start":
 - 4> for the first received message on this signalling radio bearer:
 - 5> start using the new integrity key;
 - 5> for this signalling radio bearer:
 - 6> set the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to zero.

3> else:

- 4> for the first message for which the RRC sequence number in a received RRC message for this signalling radio bearer is equal to or greater than the activation time as indicated in IE "Downlink integrity protection activation info" as included in the IE "Integrity protection mode info":
 - 5> start using the new integrity key;
 - 5> for this signalling radio bearer:
 - 6> set the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to zero.
- 2> for integrity protection in the uplink on each signalling radio bearer except RB2:
 - 3> for the first message for which the RRC sequence number in a to be transmitted RRC message for this signalling radio bearer is equal to the activation time as indicated in IE "Uplink integrity protection activation info" included in the transmitted SECURITY MODE COMPLETE message:
 - 4> start using the new integrity key;
 - 4> for this signalling radio bearer:
 - 5> set the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to zero.
- 2> for integrity protection in the downlink on signalling radio bearer RB2:
 - 3> at the received SECURITY MODECOMMAND:
 - 4> start using the new integrity key;
 - 4> set the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to zero.
- 2> for integrity protection in the uplink on signalling radio bearer RB2 :
 - 3> at the transmitted SECURITY MODE COMPLETE:
 - 4> start using the new integrity key;
 - 4> set the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to zero.
- 1> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":

- 2> for each signalling radio bearer and for each radio bearer for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN:
 - 3> if the IE "Status" in the variable CIPHERING_STATUS has the value "Started" for this CN domain, then for ciphering on radio bearers using RLC-TM:
 - 4> at the CFN as indicated in the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info":
 - 5> start using the new key in uplink and downlink;
 - 5> set the HFN component of the COUNT-C to zero.
 - 3> if the IE "Status" in the variable CIPHERING_STATUS has the value "Started" for this CN domain, then for ciphering on radio bearers and signalling radio bearers using RLC-AM and RLC-UM:
 - 4> in the downlink, at the RLC sequence number indicated in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info":
 - 5> start using the new key;
 - 5> set the HFN component of the downlink COUNT-C to zero.
 - 4> in the uplink, at the RLC sequence number indicated in IE "Radio bearer uplink ciphering activation time info":
 - 5> start using the new key;
 - 5> set the HFN component of the uplink COUNT-C to zero.
- 1> consider the value of the latest transmitted START value to be zero.

8.1.12.4 Void

8.1.12.4a Incompatible simultaneous security reconfiguration

If the variable INCOMPATIBLE_SECURITY_RECONFIGURATION becomes set to TRUE of the received SECURITY MODE COMMAND message, the UE shall:

- 1> transmit a SECURITY MODE FAILURE message on the uplink DCCH using AM RLC, using the ciphering and integrity protection configurations prior to the reception of this SECURITY MODE COMMAND;
- 1> set the IE "RRC transaction identifier" in the SECURITY MODE FAILURE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "incompatible simultaneous reconfiguration";
- 1> when the response message has been submitted to lower layers for transmission:
 - 2> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to FALSE;
 - 2> continue with any ongoing processes and procedures as if the invalid SECURITY MODE COMMAND message has not been received;
 - 2> only accept a message on SRB 2, with a COUNT-I that:
 - 3> is higher than the COUNT-I used prior to receiving the SECURITY MODE COMMAND message incremented by one; and
 - 3> does not take into account the HFN from the received SECURITY MODE COMMAND message.

2> and the procedure ends.

8.1.12.4b Cell update procedure during security reconfiguration

If:

- a cell update procedure according to subclause 8.3.1 is initiated; and
- the received SECURITY MODE COMMAND message causes either,
 - the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
 - the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:

the UE shall:

- 1> abort the ongoing integrity and/or ciphering reconfiguration;
- 1> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM:
- 1> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
- 1> when the CELL UPDATE message has been submitted to lower layers for transmission:
 - 2> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":
 - 3> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 3> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":
 - 3> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 3> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
 - 2> continue with any ongoing processes and procedures as if the SECURITY MODE COMMAND message has not been received;
 - 2> only accept a message on SRB 2, with a COUNT-I that:
 - 3> is higher than the COUNT-I used prior to receiving the SECURITY MODE COMMAND message incremented by one; and
 - 3> does not take into account the HFN from the received SECURITY MODE COMMAND message.
 - 2> if the UE has already submitted the SECURITY MODE COMPLETE message, use a COUNT-I value for transmission of the next message on SRB2 as stated below:
 - 3> take the COUNT-I used prior to the transmission of the SECURITY MODE COMPLETE message;
 - 3> increment that COUNT-I with 2;
 - 3> apply that COUNT-I on the next message to transmit.
 - 2> clear the variable SECURITY_MODIFICATION;
 - 2> the procedure ends.

8.1.12.4c Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE due to the received SECURITY MODE COMMAND message, the UE shall:

1> transmit a SECURITY MODE FAILURE message on the DCCH using AM RLC after setting the IEs as specified below:

- 2> set the IE "RRC transaction identifier" in the SECURITY MODE FAILURE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 2> clear that entry;
- 2> set the IE "failure cause" to the cause value "invalid configuration".
- 1> when the response message has been submitted to lower layers for transmission:
 - 2> set the variable INVALID_CONFIGURATION to FALSE;
 - 2> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE;
 - 2> continue with any ongoing processes and procedures as if the invalid SECURITY MODE COMMAND message has not been received;
 - 2> only accept a message on SRB 2, with a COUNT-I that:
 - 3> is higher than the COUNT-I used prior to receiving the SECURITY MODE COMMAND message incremented by one; and
 - 3> does not take into account the HFN from the received SECURITY MODE COMMAND message.
 - 2> and the procedure ends.

8.1.12.5 Reception of SECURITY MODE COMPLETE message by the UTRAN

UTRAN should apply integrity protection on the received SECURITY MODE COMPLETE message and all subsequent messages with the new integrity protection configuration, if changed. When UTRAN has received a SECURITY MODE COMPLETE message and the integrity protection has successfully been applied, UTRAN should:

- 1> if the IE "Ciphering mode info" was included in the SECURITY MODE COMMAND message:
 - 2> if new keys were received for the CN domain set in the IE "CN Domain Identity" in the SECURITY MODE COMMAND:
 - 3> set, at the downlink and uplink activation time, all the bits of the hyper frame numbers of the downlink and uplink COUNT-C values respectively for all radio bearers for this CN domain and all signalling radio bearers to zero.
 - 2> else (if new keys were not received):
 - 3> use, at the downlink and uplink activation time, the value "START" in the most recently received IE "START list" or IE "START" that belongs to the CN domain as indicated in the IE "CN domain identity" to initialise all hyper frame numbers of the downlink and uplink COUNT-C values respectively for all the signalling radio bearers as follows:
 - 4> set the 20 most significant bits of the hyper frame numbers of the COUNT-C for all signalling radio bearers to the value "START" in the most recently received IE "START list" or IE "START" for that CN domain;
 - 4> set the remaining bits of the hyper frame numbers equal to zero.
- 1> if the IE "Integrity protection mode info" was included in the SECURITY MODE COMMAND message:
 - 2> if this was not the first SECURITY MODE COMMAND message for this RRC connection:
 - 3> if new keys have been received for the CN domain set in the IE "CN Domain Identity" included in the transmitted SECURITY MODE COMMAND message:
 - 4> initialise, at the downlink and uplink activation time, all hyper frame numbers of the downlink and uplink COUNT-I values respectively for all the signalling radio bearers other than RB2 as follows:
 - 5> set all bits of the hyper frame numbers of the uplink and downlink COUNT-I to zero.

- 3> if no new keys have been received for the CN domain set in the IE "CN Domain Identity" included in the transmitted SECURITY MODE COMMAND message:
 - 4> use, at the downlink and uplink activation time, the value "START" in the most recently received IE "START list" or IE "START" that belongs to the CN domain as indicated in the IE "CN domain identity" to initialise all hyper frame numbers of the downlink and uplink COUNT-I values respectively for all the signalling radio bearers other than RB2 as follows:
 - 5> set the 20 most significant bits of the hyper frame numbers of the downlink and uplink COUNT-I respectively for all signalling radio bearers to the value "START" in the most recently received IE "START list" or IE "START" for that CN domain;
 - 5> set the remaining bits of the hyper frame numbers equal to zero.
- 1> send an indication to upper layers that the new security configuration has been activated;
- 1> resume, in the downlink, all suspended radio bearers and all signalling radio bearers;
- 1> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
- 1> if the IE "Integrity protection mode command" included in the SECURITY MODE COMMAND had the value "Start":
 - 2> start applying integrity protection in the downlink for all signalling radio bearers.
- 1> if the IE "Integrity protection mode command" included in the SECURITY MODE COMMAND had the value "Modify":
 - 2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each signalling radio bearers RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info";
 - 2> continue applying the new integrity configuration for signalling radio bearer RB2;
 - 2> apply the new integrity protection configuration on the received signalling messages with RRC SN greater than or equal to the number associated with the signalling radio bearer in IE "Uplink integrity protection activation info".
- 1> apply the old ciphering configuration for the transmission of RLC PDUs with RLC sequence number less than the number indicated in the IE "Radio bearer downlink ciphering activation time info" included in the IE "Ciphering mode info";
- 1> apply the new ciphering configuration for the transmission of RLC PDUs with RLC sequence number greater than or equal to the number indicated in IE "Radio bearer downlink ciphering activation time info" included in the IE "Ciphering mode info";
- 1> apply the old integrity protection configuration on the received signalling messages with RRC SN smaller than the number associated with the signalling radio bearer in IE "Uplink integrity protection activation info";
- 1> for radio bearers using RLC-AM or RLC-UM:
 - 2> use the old ciphering configuration for received RLC PDUs with RLC sequence number less than the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent by the UE;
 - 2> use the new ciphering configuration for received RLC PDUs with RLC sequence number greater than or equal to the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent by the UE;
 - 2> if an RLC reset or re-establishment of the transmitting side of an RLC entity occurs after the SECURITY MODE COMPLETE message has been received by UTRAN before the downlink activation time for the new ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration in downlink immediately after the RLC reset or RLC re-establishment;
 - 2> if an RLC reset or re-establishment of the receiving side of an RLC entity occurs after the SECURITY MODE COMPLETE message has been received by UTRAN before the uplink activation time for the new

ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration in uplink immediately after the RLC reset or RLC re-establishment.

- 1> for radio bearers using RLC-TM:
 - 2> use the old ciphering configuration for the received RLC PDUs before the CFN as indicated in the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info" as included in the SECURITY MODE COMMAND;
 - 2> use the new ciphering configuration for the received RLC PDUs at the CFN as indicated in the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info" as included in the SECURITY MODE COMMAND.
- 1> and the procedure ends.

8.1.12.6 Invalid SECURITY MODE COMMAND message

If the SECURITY MODE COMMAND message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> transmit a SECURITY MODE FAILURE message on the uplink DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the SECURITY MODE FAILURE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE COMMAND message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the response message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid SECURITY MODE COMMAND message has not been received;
 - 2> only accept a message on SRB 2, with a COUNT-I that:
 - 3> is higher than the COUNT-I used prior to receiving the SECURITY MODE COMMAND message incremented by one; and
 - 3> does not take into account the HFN from the received SECURITY MODE COMMAND message.
 - 2> and the procedure ends.

8.1.13 Signalling connection release procedure

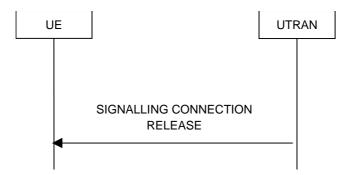


Figure 8.1.13-1: Signalling connection release procedure, normal case

8.1.13.1 General

The signalling connection release procedure is used to notify to the UE that one of its ongoing signalling connections has been released. The procedure does not initiate the release of the RRC connection.

8.1.13.2 Initiation of SIGNALLING CONNECTION RELEASE by the UTRAN

To initiate the procedure, the UTRAN transmits a SIGNALLING CONNECTION RELEASE message on DCCH using AM RLC.

8.1.13.3 Reception of SIGNALLING CONNECTION RELEASE by the UE

Upon reception of a SIGNALLING CONNECTION RELEASE message, the UE shall:

- 1> indicate the release of the signalling connection and pass the value of the IE "CN domain identity" to upper layers;
- 1> remove the signalling connection with the identity indicated by the IE "CN domain identity" from the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 1> clear the entry for the SIGNALLING CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> the procedure ends.

8.1.13.4 Invalid SIGNALLING CONNECTION RELEASE message

If the UE receives a SIGNALLING CONNECTION RELEASE message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> include the IE "Identification of received message"; and
 - 2> set the IE "Received message type" to SIGNALLING CONNECTION RELEASE;
 - 2> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the SIGNALLING CONNECTION RELEASE message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry.
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid SIGNALLING CONNECTION RELEASE message has not been received.

8.1.13.5 Invalid configuration

If radio access bearers for the CN domain indicated by the IE "CN domain identity" exist in the variable ESTABLISHED_RABS, the UE shall:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to SIGNALLING CONNECTION RELEASE; and

- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the SIGNALLING CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS and clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value "Message not compatible with receiver state";
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid SIGNALLING CONNECTION RELEASE message has not been received.

8.1.14 Signalling connection release indication procedure

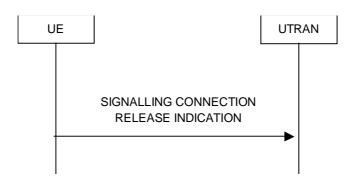


Figure 8.1.14-1: Signalling connection release indication procedure, normal case

8.1.14.1 General

The signalling connection release indication procedure is used by the UE to indicate to the UTRAN that one of its signalling connections has been released. The procedure may in turn initiate the RRC connection release procedure.

8.1.14.2 Initiation

The UE shall, on receiving a request to release (abort) the signalling connection from upper layers for a specific CN domain:

- 1> if a signalling connection in the variable ESTABLISHED_SIGNALLING_CONNECTIONS for the specific CN domain identified with the IE "CN domain identity" exists:
 - 2> initiate the signalling connection release indication procedure.

1> otherwise:

2> abort any ongoing establishment of signalling connection for that specific CN domain as specified in 8.1.3.5a.

Upon initiation of the signalling connection release indication procedure in CELL_PCH or URA_PCH state, the UE shall:

- 1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- 1> when the cell update procedure completed successfully:
 - 2> continue with the signalling connection release indication procedure as below.

The UE shall:

- 1> set the IE "CN Domain Identity" to the value indicated by the upper layers. The value of the IE indicates the CN domain whose associated signalling connection the upper layers are indicating to be released;
- 1> remove the signalling connection with the identity indicated by upper layers from the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> transmit a SIGNALLING CONNECTION RELEASE INDICATION message on DCCH using AM RLC.

When the successful delivery of the SIGNALLING CONNECTION RELEASE INDICATION message has been confirmed by RLC the procedure ends.

8.1.14.2a RLC re-establishment or inter-RAT change

If a re-establishment of the transmitting side of the RLC entity on signalling radio bearer RB2 occurs before the successful delivery of the SIGNALLING CONNECTION RELEASE INDICATION message has been confirmed by RLC, the UE shall:

1> retransmit the SIGNALLING CONNECTION RELEASE INDICATION message on the uplink DCCH using AM RLC on signalling radio bearer RB2.

If an Inter-RAT handover from UTRAN procedure occurs before the successful delivery of the SIGNALLING CONNECTION RELEASE INDICATION message has been confirmed by RLC, the UE shall:

1> abort the signalling connection while in the new RAT.

8.1.14.3 Reception of SIGNALLING CONNECTION RELEASE INDICATION by the UTRAN

Upon reception of a SIGNALLING CONNECTION RELEASE INDICATION message, the UTRAN requests the release of the signalling connection from upper layers. Upper layers may then initiate the release of the signalling connection.

8.1.15 Counter check procedure

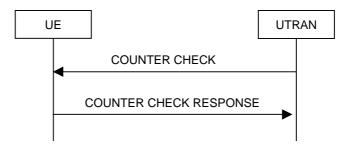


Figure 8.1.15-1: Counter check procedure

8.1.15.1 General

The counter check procedure is used by the UTRAN to perform a local authentication. The purpose of the procedure is to check that the amount of data sent in both directions (uplink and downlink) over the duration of the RRC connection is identical at the UTRAN and at the UE (to detect a possible intruder – a 'man-in-the-middle' – from operating).

This procedure is only applicable to radio bearers, and only to radio bearers using RLC-AM or RLC-UM. It should be noted that this requires that the COUNT-C values for each UL and DL radio bearers using RLC-AM or RLC-UM continue to be incremented even if ciphering is not used. This procedure is not applicable to signalling radio bearers.

8.1.15.2 Initiation

The UTRAN monitors the COUNT-C value associated with each radio bearer using UM or AM RLC. The procedure is triggered whenever any of these values reaches a critical checking value. The granularity of these checking values and the values themselves are defined to the UTRAN by the visited network. The UTRAN initiates the procedure by sending a COUNTER CHECK message on the downlink DCCH.

8.1.15.3 Reception of a COUNTER CHECK message by the UE

When the UE receives a COUNTER CHECK message it shall compare the COUNT-C MSB values received in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message to the COUNT-C MSB values of the corresponding radio bearers.

The UE shall:

- 1> set the IE "RRC transaction identifier" in the COUNTER CHECK RESPONSE message to the value of "RRC transaction identifier" in the entry for the COUNTER CHECK message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry.

If:

- there is one or more radio bearer(s) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS, which is (are) not included in the IE "RB COUNT-C MSB information"; or
- there is one or more radio bearer(s) included in the IE "RB COUNT-C MSB information", which is (are) not stored in the variable ESTABLISHED_RABS; or
- for any radio bearer (excluding signalling radio bearers) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS and included in the IE "RB COUNT-C MSB information" with COUNT-C MSB values different from the MSB part of the COUNT-C values in the UE:

the UE shall:

1> include these radio bearers in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message. For any RB which is included in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message but not stored in the variable ESTABLISHED_RABS in the UE, the MSB part of COUNT-C values in the COUNTER CHECK RESPONSE message shall be set identical to COUNT-C-MSB values in the COUNTER CHECK message. The LSB part shall be filled with zeroes.

The UE shall:

- 1> if no COUNT-C exists for a radio bearer for a given direction (uplink or downlink) because:
 - 2> it is a uni-directional radio bearer configured only for the other direction (downlink or uplink respectively); or
 - 2> it has been configured to RLC-TM mode in one direction (uplink or downlink) and RLC-UM in the other (downlink or uplink respectively):
 - 3> set the COUNT-C in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message, to any value.
- 1> submit a COUNTER CHECK RESPONSE message to lower layers for transmission on the uplink DCCH using AM RLC.

When the COUNTER CHECK RESPONSE message has been submitted to lower layers for transmission the procedure ends.

8.1.15.4 Reception of the COUNTER CHECK RESPONSE message by UTRAN

If the UTRAN receives a COUNTER CHECK RESPONSE message that does not contain any COUNT-C values, the procedure ends.

If the UTRAN receives a COUNTER CHECK RESPONSE message that contains one or several COUNT-C values the UTRAN may release the RRC connection.

8.1.15.5 Cell re-selection

If the UE performs cell re-selection anytime during this procedure it shall, without interrupting the procedure:

1> initiate the cell update procedure according to subclause 8.3.1.

8.1.15.6 Invalid COUNTER CHECK message

If the UE receives a COUNTER CHECK message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to COUNTER CHECK; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE COUNTER CHECK message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid COUNTER CHECK message has not been received.

8.1.16 Inter RAT handover information transfer



Figure 8.1.16-1: Inter RAT handover information transfer, normal flow

8.1.16.1 General

The inter RAT handover information transfer procedure is used by the UE to convey RRC information needed for inter RAT handover to UTRAN.

8.1.16.2 Initiation

If:

- a radio access technology other than UTRA, e.g. GSM, using radio access technology-specific procedures, orders the UE to provide the INTER RAT HANDOVER INFO message; or
- a radio access technology other than UTRA, e.g. GSM, using radio access technology-specific procedures, configures the UE to send the INTER RAT HANDOVER INFO message upon system specific conditions not involving an explicit order e.g. early classmark sending upon entering connected mode; or
- while in connected mode using another radio access technology, the inter RAT handover info changes compared to what has previously been sent via the other radio access technology:

the UE shall:

1> initiate the inter RAT handover information transfer procedure.

To determine if the inter RAT handover info has changed compared to what has previously been sent, the UE shall:

- 1> store the information last sent in the variable INTER_RAT_HANDOVER_INFO_TRANSFERRED;
- 1> if this variable has not yet been set:
 - 2> not initiate the inter RAT handover information transfer procedure due to change of inter RAT handover info.
- NOTE: Currently neither the UE security information nor the predefined configuration status information change while in connected mode using GSM radio access technology.

8.1.16.3 INTER RAT HANDOVER INFO message contents to set

The UE shall:

- 1> include the IE "UE security information", and the IE "UE security information2" if supported by the UE; and
- 1> not include the IE "UE Specific Behaviour Information 1 interRAT".
- 1> in case support for the compressed version of the inter RAT handover info is indicated via the other radio access technology:
 - 2> include of the following IEs the IE that after encoding has the smallest size: IE "Predefined configuration status information compressed" or the IE "Predefined configuration status information";
 - 2> include the IE "UE radio access capability compressed".
- 1> else:
 - 2> include the IE "Predefined configuration status information";
 - 2> include the IE "UE capability container", containing the IE "UE radio access capability" and the IE "UE radio access capability extension", in accordance with the following:
 - 3> if the UE supports multiple UTRA FDD Frequency Bands; or
 - 3> if the UE supports a single UTRA FDD Frequency Band different from Band I [21]:
 - 4> include the IE "UE radio access capability", excluding IEs "RF capability FDD" and "Measurement capability";
 - 4> include the IE "UE radio access capability extension", including the IEs "RF capability FDD extension" and the "Measurement capability extension" associated with each supported UTRA FDD frequency band indicated in the IE "Frequency band".
 - 3> else:
 - 4> include the IE "UE radio access capability", including the IEs "RF capability FDD" and "Measurement capability" associated with the Band I [21];
 - 4> include the IE "UE radio access capability extension", including the IEs "RF capability FDD extension" and the "Measurement capability extension" associated with each supported UTRA FDD frequency band indicated in the IE "Frequency band".
- 1> For FDD, include the IE "UE radio access capability comp 2";
- 1> initiate the transfer of the INTER RAT HANDOVER INFO message via the other radio access technology, using radio access technology-specific procedures;
- 1> store the following in the variable INTER_RAT_HANDOVER_INFO_TRANSFERRED if they were included in the INTER RAT HANDOVER INFO message:
 - 2> the IE "Predefined configuration status information";
 - 2> the IE "Predefined configuration status information compressed";

- 2> the IE "UE security information";
- 2> the IE "UE radio access capability";
- 2> the IE "UE radio access capability extension"; and
- 2> the IE "UE radio access capability compressed";
- 2> if the IE "UE radio access capability compressed" were included in the INTER RAT HANDOVER INFO message:
- 3> set the IE "Security Capability" to the mandatory R99 algorithms.
- 1> and the procedure ends.

8.2 Radio Bearer control procedures

8.2.1 Radio bearer establishment

See subclause 8.2.2 Reconfiguration procedures.

8.2.2 Reconfiguration procedures

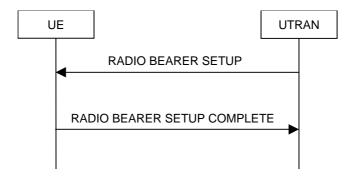


Figure 8.2.2-1: Radio Bearer Establishment, normal case

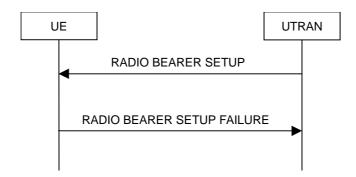


Figure 8.2.2-2: Radio Bearer Establishment, failure case

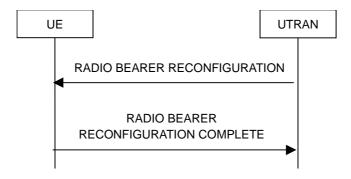


Figure 8.2.2-3: Radio bearer reconfiguration, normal flow

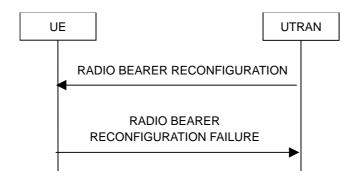


Figure 8.2.2-4: Radio bearer reconfiguration, failure case

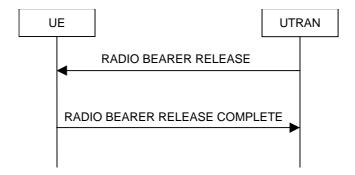


Figure 8.2.2-5: Radio Bearer Release, normal case

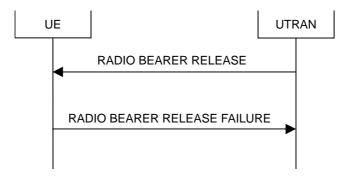


Figure 8.2.2-6: Radio Bearer Release, failure case

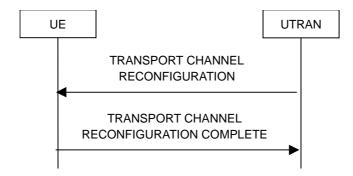


Figure 8.2.2-7: Transport channel reconfiguration, normal flow

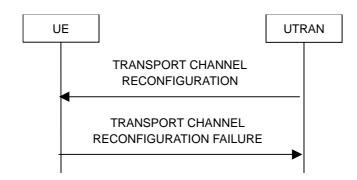


Figure 8.2.2-8: Transport channel reconfiguration, failure case

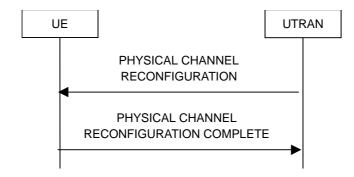


Figure 8.2.2-9: Physical channel reconfiguration, normal flow

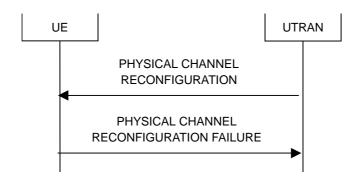


Figure 8.2.2-10: Physical channel reconfiguration, failure case

8.2.2.1 General

Reconfiguration procedures include the following procedures:

- the radio bearer establishment procedure;
- radio bearer reconfiguration procedure;

- the radio bearer release procedure;
- the transport channel reconfiguration procedure; and
- the physical channel reconfiguration procedure.

The radio bearer establishment procedure is used to establish new radio bearer(s).

The radio bearer reconfiguration procedure is used to reconfigure parameters for a radio bearer.

The radio bearer release procedure is used to release radio bearer(s).

The transport channel reconfiguration procedure is used to reconfigure transport channel parameters.

The physical channel reconfiguration procedure is used to establish, reconfigure and release physical channels.

While performing any of the above procedures, these procedures may perform a hard handover (subclause 8.3.5) and/or an HS-DSCH cell change and/or a serving E-DCH cell change. The reconfiguration procedures are also used to change the feedback configuration for HS-DSCH.

8.2.2.2 Initiation

To initiate any one of the reconfiguration procedures, UTRAN should:

- 1> configure new radio links in any new physical channel configuration;
- 1> start transmission and reception on the new radio links;
- 1> for a radio bearer establishment procedure:
 - 2> transmit a RADIO BEARER SETUP message on the downlink DCCH using AM or UM RLC;
 - 2> if signalling radio bearer RB4 is setup with this procedure and signalling radio bearers RB1-RB3 were already established prior to the procedure:
 - 3> if the variable "LATEST_CONFIGURED_CN_DOMAIN" has been initialised:
 - 4> connect any radio bearers setup by the same message as signalling radio bearer RB4 to the CN domain indicated in the variable "LATEST CONFIGURED CN DOMAIN".
- 1> for a radio bearer reconfiguration procedure:
 - 2> transmit a RADIO BEARER RECONFIGURATION message on the downlink DCCH using AM or UM RLC.
- 1> for a radio bearer release procedure:
 - 2> transmit a RADIO BEARER RELEASE message on the downlink DCCH using AM or UM RLC.
- 1> for a transport channel reconfiguration procedure:
 - 2> transmit a TRANSPORT CHANNEL RECONFIGURATION message on the downlink DCCH using AM or UM RLC.
- 1> for a physical channel reconfiguration procedure:
 - 2> transmit a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH using AM or UM RLC.
- 1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:
 - 2> if the transmitted message is a RADIO BEARER RECONFIGURATION:
 - 3> include the IE "New U-RNTI".
 - 2> else:

- 3> include the IE "Downlink counter synchronisation info".
- 2> if ciphering and/or integrity protection are activated:
 - 3> include new ciphering and/or integrity protection configuration information to be used after reconfiguration.
- 2> use the downlink DCCH using AM RLC.
- 1> if transport channels are added, reconfigured or deleted in uplink and/or downlink:
 - 2> set TFCS according to the new transport channel(s).
- 1> if transport channels are added or deleted in uplink and/or downlink, and RB Mapping Info applicable to the new configuration has not been previously provided to the UE, the UTRAN should:
 - 2> send the RB Mapping Info for the new configuration.

In the Radio Bearer Reconfiguration procedure UTRAN may indicate that uplink transmission shall be stopped or continued on certain radio bearers. Uplink transmission on a signalling radio bearer used by the RRC signalling (signalling radio bearer RB1) should not be stopped.

- NOTE 1: The Release '99 RADIO BEARER RECONFIGURATION message always includes the IE "RB information to reconfigure", even if UTRAN does not require the reconfiguration of any RB. In these cases, UTRAN may include only the IE "RB identity" within the IE "RB information to reconfigure".
- NOTE 2: The Release '99 RADIO BEARER RECONFIGURATION message always includes the IE "Downlink information per radio link list", even if UTRAN does not require the reconfiguration of any RL. In these cases, UTRAN may re-send the currently assigned values for the mandatory IEs included within the IE "Downlink information per radio link list".
- NOTE 3: The Release '99 RADIO BEARER RECONFIGURATION message always includes the IE "Primary CPICH Info" (FDD) or IE "Primary CCPCH Info" (TDD) within IE "Downlink information per radio link list". This implies that in case UTRAN applies the RADIO BEARER RECONFIGURATION message to move the UE to CELL_FACH state, it has to indicate a cell. However, UTRAN may indicate any cell; the UE anyhow performs cell selection and notifies UTRAN if it selects another cell than indicated by UTRAN.

If the IE "Activation Time" is included, UTRAN should set it to a value taking the UE performance requirements into account.

UTRAN should take the UE capabilities into account when setting the new configuration.

If the message is used to initiate a transition from CELL_DCH to CELL_FACH state, the UTRAN may assign a C-RNTI to be used in that cell by the UE.

8.2.2.2a Initiation of handover from GERAN *lu mode*

To initiate the handover from GERAN Iu mode, UTRAN should:

- 1> provide a RADIO BEARER RECONFIGURATION message to be encapsulated in INTERSYSTEM HANDOVER TO UTRAN COMMAND message, sent on the downlink SRB2 in GERAN *Iu mode*, as specified in [53].
- 1> in case UTRAN decides to use a predefined or default radio configuration that is stored in the UE, it should include the following information in the RADIO BEARER RECONFIGURATION message:
 - PhyCH information elements; and
 - either:
 - the IE "Predefined configuration identity", to indicate which pre-defined configuration of RB, transport channel and physical channel parameters shall be used; or
 - the IE "Default configuration mode" and IE "Default configuration identity", to indicate which default configuration of RB, transport channel and physical channel parameters shall be used.

8.2.2.3 Reception of RADIO BEARER SETUP or RADIO BEARER RECONFIGURATION or RADIO BEARER RELEASE or TRANSPORT CHANNEL RECONFIGURATION or PHYSICAL CHANNEL RECONFIGURATION message by the UE

The UE shall:

- 1> be able to receive any of the following messages:
 - 2> RADIO BEARER SETUP message; or
 - 2> RADIO BEARER RECONFIGURATION message; or
 - 2> RADIO BEARER RELEASE message; or
 - 2> TRANSPORT CHANNEL RECONFIGURATION message; or
 - 2> PHYSICAL CHANNEL RECONFIGURATION message;
- 1> be able to perform a hard handover and apply physical layer synchronisation procedure A as specified in [29], even if no prior UE measurements have been performed on the target cell and/or frequency.

In case the reconfiguration procedure is used to remove all existing RL(s) in the active set while new RL(s) are established the UE shall:

- 1> if the UE has a pending "TGPS reconfiguration CFN" at the activation time received in the reconfiguration message and the reconfiguration requests a timing re-initialised hard handover (see subclause 8.3.5.1), the UE may:
 - 2> abort the pending CM activation;
 - 2> set the CM_PATTERN_ACTIVATION_ABORTED to TRUE.
- 1> otherwise:
 - 2> set the CM_PATTERN_ACTIVATION_ABORTED to FALSE.

If the UE receives:

- a RADIO BEARER SETUP message; or
- a RADIO BEARER RECONFIGURATION message; or
- a RADIO BEARER RELEASE message; or
- a TRANSPORT CHANNEL RECONFIGURATION message; or
- a PHYSICAL CHANNEL RECONFIGURATION message:

it shall:

- 1> set the variable ORDERED_RECONFIGURATION to TRUE;
- 1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:
 - 2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).
- 1> act upon all received information elements as specified in subclause 8.6, unless specified in the following and perform the actions below.

The UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

The UE may first release the physical channel configuration used at reception of the reconfiguration message. The UE shall then:

1> enter a state according to subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

NOTE: The ASN.1 "r3" version of the RADIO BEARER RECONFIGURATION message always includes the IE "RB information to reconfigure". UTRAN has to include it even if it does not require the reconfiguration of any RB.

In case the UE receives a RADIO BEARER RECONFIGURATION message with the IE "Specification mode" set to "Preconfiguration" while the message is not sent through GERAN *Iu mode*, the UE behaviour is unspecified.

In case the UE receives a RADIO BEARER SETUP message with the IE "Specification mode" set to "Preconfiguration" while the message is sent through GERAN *Iu mode*, the UE behaviour is unspecified.

In case the UE receives a RADIO BEARER SETUP message with the IE "Specification mode" set to "Preconfiguration" while the message is not sent through GERAN *Iu mode*, the UE shall:

- 1> perform the actions related to the IE 'RB information to change list' as specified in subclause 8.6.4.4;
- 1> for radio bearers included in the default configuration identified by the IE "Default configuration mode" and the IE "Default configuration identity" which value is not included in an IE 'IE 'Re-map to default RB' within the IE "RB information to change list":
 - 2> establish the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and the IE "Default configuration identity";
 - 2> if no physical channel information elements are included in the message:
 - 3> initiate the physical channels in accordance with the default parameters identified by the IE "Default configuration mode".
 - 2> otherwise:
 - 3> initiate the physical channels in accordance with the received physical channel information elements;
- 1> construct the Transport format combination set, including all possible combinations of the following, in order of increasing CTFC value:
 - 2> the transport format combinations of the transport channels included in the default configuration as specified for the corresponding default configuration; and
 - 2> the transport format combinations of the other remaining transport channels as specified by the transport format combination set used upon receiving the message.
- 1> apply the signalled gain factor information for the TFC indicated by the IE "Reference TFC" and compute the gain factor for all other TFCs using this reference, in accordance with in [29];
- 1> act upon all received information elements, including the ones identified by the IE "Default configuration mode" and IE "Default configuration identity", as specified in subclause 8.6, unless specified in the following and perform the actions below.
- NOTE 2: The IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.

If after state transition the UE enters CELL DCH state, the UE shall, after the state transition:

- 1> in FDD; or
- 1> in TDD when "Primary CCPCH Info" is included indicating a new target cell and "New C-RNTI" is not specified:
 - 2> remove any C-RNTI from MAC;
 - 2> clear the variable C_RNTI.

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

- 1> if any IEs releated to HS-DSCH are stored in the UE:
 - 2> clear any stored IE "Downlink HS-PDSCH information";
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if any IEs related to E-DCH are stored in the UE:
 - 2> clear any stored IE "E-DCH info";
 - 2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

- 1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;
- 1> in TDD:
 - 2> if "Primary CCPCH Info" is included indicating a new target cell and "New C-RNTI" is not specified:
 - 3> remove any C-RNTI from MAC;
 - 3> clear the variable C_RNTI.
 - 2> if "Primary CCPCH Info" is included indicating a new target cell and "New H-RNTI" is not specified:
 - 3> remove any H-RNTI from MAC;
 - 3> clear the variable H_RNTI;
 - 3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if "DPCH frame offset" is included for one or more RLs in the active set, and the reconfiguration procedure does not request a timing reinitialized hard handover (see subclause 8.3.5.1):
 - 2> use its value to determine the beginning of the DPCH or F-DPCH frame in accordance with the following:
 - 3> if the received IE "DPCH frame offset" is across the value range border compared to the DPCH or F-DPCH frame offset currently used by the UE:
 - 4> consider it to be a request to adjust the timing with 256 chips across the frame border (e.g. if the UE receives value 0 while the value currently used is 38144 consider this as a request to adjust the timing with +256 chips).
 - 3> if after taking into account value range borders, the received IE "DPCH frame offset" corresponds to a request to adjust the timing with a step exceeding 256 chips:
 - 4> set the variable INVALID_CONFIGURATION to TRUE.
 - 3> and the procedure ends.
 - 2> adjust the radio link timing accordingly.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

- 1> if the IE "Frequency info" is included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4] on that frequency;
 - 2> if the UE finds a suitable UTRA cell on that frequency:

- 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> when the cell update procedure completed successfully:
 - 5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
- 2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> when the cell update procedure completed successfully:
 - 4> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
- 1> if the IE "Frequency info" is not included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4];
 - 2> if the UE finds a suitable UTRA cell on the current frequency:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> when the cell update procedure completed successfully:
 - 5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
 - 2> else, if the UE can not find a suitable UTRA cell on the current frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> when the cell update procedure completed successfully:
 - 4> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
- 1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;
- 1> select PRACH according to subclause 8.5.17;
- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> use the transport format set given in system information;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> ignore that IE and stop using DRX.
- 1> if the contents of the variable C RNTI is empty:
 - 2> perform a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

- 2> when the cell update procedure completed successfully:
 - 3> if the UE is in CELL_PCH or URA_PCH state:
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission";
 - 4> proceed as below.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

- 1> if the IE "Frequency info" is included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4] on that frequency;
 - 2> if the UE finds a suitable UTRA cell on that frequency:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "cell reselection";
 - 4> when the cell update procedure completed successfully:
 - 5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
 - 2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> when the cell update procedure completed successfully:
 - 4> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.
- 1> if the IE "Frequency info" is not included in the received reconfiguration message:
 - 2> if the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) is included the UE shall either:
 - 3> ignore the content of the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) and proceed as below;
 - 2> or:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CPCH info" (for TDD), and it is different from the current cell:
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> when the cell update procedure completed successfully:
 - 5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.

If after state transition the UE leaves CELL_FACH state, the UE shall:

1> stop timer T305.

If after state transition the UE enters CELL_PCH or URA_PCH state, the UE shall:

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

The UE shall transmit a response message as specified in subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

- 1> if the received reconfiguration message included the IE "Downlink counter synchronisation info"; or
- 1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:
 - 2> if the variable PDCP_SN_INFO is empty:
 - 3> configure the corresponding RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "stop".
 - 2> else:
 - 3> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "stop";
 - 3> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "stop".
 - 2> re-establish the RLC entity for RB2;
 - 2> for the downlink and the uplink, apply the ciphering configuration as follows:
 - 3> if the received re-configuation message included the IE "Ciphering Mode Info":
 - 4> use the ciphering configuration in the received message when transmitting the response message.
 - 3> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached:
 - 4> if the previous SECURITY MODE COMMAND was received due to new keys being received:
 - 5> consider the new ciphering configuration to include the received new keys;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 as indicated in subclause 8.1.12.3.1.
 - 4> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 5> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 to the most recently transmitted IE "START list" or IE "START" for the LATEST_CONFIGURED_CN_DOMAIN at the reception of the previous SECURITY MODE COMMAND.
 - 4> apply the new ciphering configuration immediately following RLC re-establishment.
 - 3> else:
 - 4> continue using the current ciphering configuration.
 - 2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);
 - 2> increment by one the downlink and uplink values of the HFN of COUNT-C for RB2;
 - 2> calculate the START value according to subclause 8.5.9;

- 2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".
- 1> if the received reconfiguration message did not include the IE "Downlink counter synchronisation info":
 - 2> if the variable START_VALUE_TO_TRANSMIT is set:
 - 3> include and set the IE "START" to the value of that variable.
 - 2> if the variable START_VALUE_TO_TRANSMIT is not set and the IE "New U-RNTI" is included:
 - 3> calculate the START value according to subclause 8.5.9;
 - 3> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".
 - 2> if the received reconfiguration message caused a change in the RLC size for any RB using RLC-AM:
 - 3> calculate the START value according to subclause 8.5.9;
 - 3> include the calculated START values for the CN domain associated with the corresponding RB identity in the IE "START list" in the IE "Uplink counter synchronisation info".
- 1> if the received reconfiguration message contained the IE "Ciphering mode info" or contained the IE "Integrity protection mode info":
 - 2> set the IE "Status" in the variable SECURITY_MODIFICATION for all the CN domains in the variable SECURITY MODIFICATION to "Affected".
- 1> if the received reconfiguration message contained the IE "Ciphering mode info":
 - 2> if the reconfiguration message is not used to perform SRNS relocation with change of ciphering algorithm:
 - 3> the UE behaviour is not specified.
 - 2> if the message is used to perform a timing re-initialised hard handover:
 - 3> if IE "Ciphering activation time for DPCH" is included:
 - 4> the UE behaviour is not specified.
 - 2> else:
 - 3> if the reconfiguration message is used to setup radio bearer(s) using RLC-TM; or
 - 3> if radio bearer(s) using RLC-TM already exist:
 - 4> if IE "Ciphering activation time for DPCH" is not included:
 - 5> the UE behaviour is not specified.
- 1> if the received reconfiguration message did not contain the IE "Ciphering activation time for DPCH" in IE "Ciphering mode info":
 - 2> if prior to this procedure there exist no transparent mode RLC radio bearers:
 - 3> if, at the conclusion of this procedure, the UE will be in CELL_DCH state; and
 - 3> if, at the conclusion of this procedure, at least one transparent mode RLC radio bearer exists:
 - 4> include the IE "COUNT-C activation time" and specify a CFN value for this IE that is a multiple of 8 frames (CFN mod 8 = 0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted.
- NOTE: UTRAN should not include the IE "Ciphering mode info" in any reconfiguration message unless it is also used to perform an SRNS relocation with change of ciphering algorithm.

- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> if the variable PDCP_SN_INFO is not empty:
 - 2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP SN INFO.
- 1> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):
 - 2> set the IE "Uplink Timing Advance" according or the IE "Extended UL Timing Advance" to subclause 8.6.6.26.
- 1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:
 - 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

- 1> if the IE "Frequency info" is included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4] on that frequency.
 - 2> if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:
 - 3> proceed as below.
- 1> if the IE "Frequency info" is not included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4].
- 1> prohibit periodical status transmission in RLC;
- 1> remove any C-RNTI from MAC;
- 1> clear the variable C_RNTI;
- 1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;
- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.
- 1> if the criteria for URA update caused by "URA reselection" according to subclause 8.3.1 are fulfilled after cell selection:
 - 2> initiate a URA update procedure according to subclause 8.3.1 using the cause "URA reselection";
 - 2> when the URA update procedure is successfully completed:
 - 3> the procedure ends.

If after state transition the UE enters CELL_PCH state from CELL_DCH state, the UE shall, after the state transition and transmission of the response message:

- 1> if the IE "Frequency info" is included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4] on that frequency.

- 2> if the UE finds a suitable UTRA cell on that frequency:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> proceed as below.
- 2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> proceed as below.
- 1> if the IE "Frequency info" is not included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4].
 - 2> if the UE finds a suitable UTRA cell on the current frequency:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> proceed as below.
 - 2> else, if the UE can not find a suitable UTRA cell on the current frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> proceed as below.
- 1> prohibit periodical status transmission in RLC;
- 1> remove any C-RNTI from MAC;
- 1> clear the variable C_RNTI;
- 1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;
- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.
- 1> the procedure ends.

If after state transition the UE enters CELL_PCH state from CELL_FACH state, the UE shall, after the state transition and transmission of the response message:

- 1> if the IE "Frequency info" is included in the received reconfiguration message:
 - 2> select a suitable UTRA cell according to [4] on that frequency.
 - 2> if the UE finds a suitable UTRA cell on that frequency:

- 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "cell reselection";
 - 4> proceed as below.
- 2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:
 - 3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 3> proceed as below.
- 1> if the IE "Frequency info" is not included in the received reconfiguration message:
 - 2> if the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) is included the UE shall either:
 - 3> ignore the content of the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) and proceed as below;
 - 2> or:
 - 3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CPCH info" (for TDD), and it is different from the current cell:
 - 4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";
 - 4> proceed as below.
- 1> prohibit periodical status transmission in RLC;
- 1> remove any C-RNTI from MAC;
- 1> clear the variable C_RNTI;
- 1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;
- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.
- 1> the procedure ends.

8.2.2.3a Reception of RADIO BEARER RECONFIGURATION message by the UE performing handover from GERAN *Iu mode*

If the UE is performing handover from GERAN *Iu mode*, the UE shall, in addition to the actions in 8.2.2.3:

- 1> if the IE "Specification mode" is set to "Preconfiguration" and the IE "Preconfiguration mode" is set to "Predefined configuration":
 - 2> initiate the radio bearer and transport channel configuration in accordance with the predefined parameters identified by the IE "Predefined configuration identity";
 - 2> initiate the physical channels in accordance with the predefined parameters identified by the IE "Predefined radio configuration identity" and the received physical channel information elements;

- 2> store information about the established radio access bearers and radio bearers according to the IE "Predefined configuration identity"; and
- 1> if the IE "Specification mode" is set to "Preconfiguration" and the IE "Preconfiguration mode" is set to "Default configuration":
 - 2> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and the IE "Default configuration identity";
 - 2> initiate the physical channels in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity" and the received physical channel information elements:
- NOTE: The IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.
- 1> if IE "Specification mode" is set to "Complete specification":
 - 2> initiate the radio bearer, transport channel and physical channel configuration in accordance with the received radio bearer, transport channel and physical channel information elements.
- 1> perform an open loop estimation to determine the UL transmission power according to subclause 8.5.3;
- 1> set the following variables equal to the corresponding variables in GERAN *Iu mode*:

CIPHERING_STATUS

ESTABLISHED_RABS

ESTABLISHED_SIGNALLING_CONNECTIONS

INTEGRITY_PROTECTION_INFO

INTER_RAT_HANDOVER_INFO_TRANSFERRED

LATEST_CONFIGURED_CN_DOMAIN

START_THRESHOLD

UE_CAPABILITY_TRANSFERRED.

1> set the new uplink and downlink HFN of RB2 to MSB₂₀(MAX(uplink HFN of RB2, downlink HFN of RB2));

NOTE: MSB₂₀() operation provides the HFN mapping from GERAN *Iu mode* to UTRAN. In GERAN *Iu mode* the length of HFN component of the COUNT-C of RB2 is longer than 20 bits.

1> initialise the variable TIMERS_AND_CONSTANTS to the default values and start to use those timer and constants values.

8.2.2.4 Transmission of a response message by the UE, normal case

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

- 1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message; or
- 1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:
 - 2> when RLC has confirmed the successful transmission of the response message:
 - 3> if the variable PDCP_SN_INFO is empty:
 - 4> configure the RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "continue".
 - 3> else:
 - 4> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "continue";
 - 4> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "continue".
 - 3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;
 - 3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;
 - 3> if the IE "PDCP context relocation info" is not present:
 - 4> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].
 - 3> if the IE "PDCP context relocation info" is present:
 - 4> perform the actions as specified in subclause 8.6.4.13.
- 1> if the variable PDCP_SN_INFO is empty:
 - 2> if the received reconfiguration message contained the IE "Ciphering mode info":
 - 3> when RLC has confirmed the successful transmission of the response message:
 - 4> notify upper layers upon change of the security configuration;
 - 4> perform the actions below.
 - 2> if the received reconfiguration message did not contain the IE "Ciphering mode info":
 - 3> when RLC has been requested to transmit the response message:
 - 4> perform the actions below.
- 1> if the variable PDCP_SN_INFO is non-empty:

- 2> when RLC has confirmed the successful transmission of the response message:
 - 3> for each radio bearer in the variable PDCP_SN_INFO:
 - 4> if the IE "RB started" in the variable ESTABLISHED RABS is set to "started":
 - 5> configure the RLC entity for that radio bearer to "continue".
 - 3> perform the actions below.

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

- 1> when RLC has confirmed the successful transmission of the response message:
 - 2> for each radio bearer in the variable PDCP_SN_INFO:
 - 3> if the IE "RB started" in the variable ESTABLISHED RABS is set to "started":
 - 4> configure the RLC entity for that radio bearer to "continue".
 - 2> enter the new state (CELL_PCH or URA_PCH, respectively);
 - 2> perform the actions below.

The UE shall:

- 1> set the variable ORDERED_RECONFIGURATION to FALSE;
- 1> if the received reconfiguration message contained the IE "Ciphering mode info":
 - 2> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;
 - 2> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
- 1> if the received reconfiguration message contained the IE "Integrity protection mode info":
 - 2> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
 - 2> set "Uplink RRC Message sequence number" for signalling radio bearer RB0 in the variable INTEGRITY_PROTECTION_INFO to a value such that next RRC message to be sent on uplink RB0 will use the new integrity protection configuration;
 - 2> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 1> clear the variable PDCP_SN_INFO;
- 1> clear the variable START_VALUE_TO_TRANSMIT;
- 1> clear the variable SECURITY_MODIFICATION.

8.2.2.5 Reception of a response message by the UTRAN, normal case

When UTRAN has received

- the RADIO BEARER SETUP COMPLETE message; or
- the RADIO BEARER RECONFIGURATION COMPLETE message; or
- the RADIO BEARER RELEASE COMPLETE message; or
- the TRANSPORT CHANNEL RECONFIGURATION COMPLETE message; or

the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

UTRAN may:

1> delete the old configuration.

If the procedure caused the UE to leave the CELL_FACH state, UTRAN may:

1> delete the C-RNTI of the UE.

If the IE "UL Timing Advance" or the IE "Extended UL Timing Advance" is included in TDD, UTRAN should:

1> evaluate the timing advance value that the UE has to use in the new cell after handover.

If the IE "START" or the IE "START list" is included, UTRAN should:

- 1> set the START value for each CN domain with the corresponding values as received in this response message;
- 1> consequently, then use the START values to initialise the hyper frame numbers, in the same way as specified for the UE in subclause 8.2.2.3, for any new radio bearers that are established.

If UTRAN has ordered a ciphering reconfiguration by including the IE "Ciphering mode info", UTRAN should:

- 1> for radio bearers using RLC-AM or RLC-UM:
 - 2> on the receiving side of an RLC entity apply the new ciphering configuration in uplink immediately;
 - 2> on the transmitting side of an RLC entity apply the new ciphering configuration in downlink immediately.
- 1> for radio bearers using RLC-TM:
 - 2> begin incrementing the COUNT-C at the CFN only as indicated in:
 - 3> the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info", if included in the message that triggered the radio bearer control procedure; or
 - 3> the IE "COUNT-C activation time", if included in the response message for this procedure.
- 1> and the procedure ends on the UTRAN side.

8.2.2.5a Rejection by the UE

If the UTRAN establishes one or more p-t-p radio bearer(s) for the transmission of a session of an MBMS service, identified by the IE "MBMS Session identity", for which upper layers indicate that it has already been received correctly, the UE shall:

- 1> transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier";
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - 2> clear that entry; and
 - 2> set the IE "failure cause" to "MBMS session already received correctly".
- 1> set the variable UNSUPPORTED CONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.
- 1> the procedure ends.

If the UTRAN establishes one or more p-t-p radio bearer(s) for the transmission of a session of an MBMS service, which will inhibit reception of one or more MBMS services which according to upper layers are of higher priority, the UE may:

- 1> transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier";
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - 2> clear that entry; and
 - 2> set the IE "failure cause" to "Lower priority MBMS service".
- 1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.
- 1> the procedure ends.

8.2.2.6 Unsupported configuration in the UE

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

- 1> transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to "configuration unsupported".
- 1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

8.2.2.7 Physical channel failure

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message or for 3.84 Mcps TDD or 7.68 Mcps TDD failed to establish the physical channel(s) indicated in the received message to which DCCH(s) are mapped the UE shall:

- 1> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:
 - 2> revert to the configuration prior to the reception of the message (old configuration), including any HS-DSCH and E-DCH configuration if existing;
 - 2> if the UE was in Cell DCH state prior to the reconfiguration:
 - 3> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);
 - 3> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and
 - 3> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE or while the physical channel is not considered established;.
- 1> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:
 - 2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";

- 2> after the cell update procedure has completed successfully:
 - 3> proceed as below.
- 1> if the old configuration does not include dedicated physical channels (CELL_FACH state):
 - 2> select a suitable UTRA cell according to [4];
 - 2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:
 - 3> initiate a cell update procedure according to subclause 8.3.1, using the cause "Cell reselection";
 - 3> after the cell update procedure has completed successfully:
 - 4> proceed as below.
- 1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to "physical channel failure".
- 1> set the variable ORDERED_RECONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

8.2.2.8 Cell re-selection

If the UE performs cell re-selection during the reconfiguration procedure, the UE shall:

- 1> initiate a cell update procedure, as specified in subclause 8.3.1;
- 1> continue with the reconfiguration procedure.

NOTE: After the completion of the cell update procedure and completion of the reconfiguration procedure within the UE, the UE will move to the RRC state as indicated in the reconfiguration message.

8.2.2.9 Transmission of a response message by the UE, failure case

The UE shall:

- 1> in case of reception of a RADIO BEARER SETUP message:
 - 2> if the radio bearer establishment procedure affects several radio bearers:
 - 3> (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER SETUP FAILURE message.
 - 2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.
- 1> in case of reception of a RADIO BEARER RECONFIGURATION message:
 - 2> if the radio bearer reconfiguration procedure affects several radio bearers:
 - 3> (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER RECONFIGURATION FAILURE message.
 - 2> transmit a RADIO BEARER RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

- 1> in case of reception of a RADIO BEARER RECONFIGURATION message encapsulated in INTERSYSTEM HANDOVER TO UTRAN COMMAND message in GERAN *Iu mode*:
 - 2> perform the actions as specified in [53].
- 1> in case of reception of a RADIO BEARER RELEASE message:
 - 2> if the radio bearer release procedure affects several radio bearers:
 - 3> (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER RELEASE FAILURE message.
 - 2> transmit a RADIO BEARER RELEASE FAILURE as response message on the DCCH using AM RLC.
- 1> in case of reception of a TRANSPORT CHANNEL RECONFIGURATION message:
 - 2> transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.
- 1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:
 - 2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.
- 1> when the response message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if no reconfiguration attempt had occurred.

8.2.2.10 Reception of a response message by the UTRAN, failure case

When the UTRAN has received:

- the RADIO BEARER SETUP FAILURE message; or
- the RADIO BEARER RECONFIGURATION FAILURE message; or
- the RADIO BEARER RELEASE FAILURE message; or
- the TRANSPORT CHANNEL RECONFIGURATION FAILURE message; or
- the PHYSICAL CHANNEL RECONFIGURATION FAILURE message:

the UTRAN may restore the old and delete the new configuration. Upper layers should be notified of the failure.

The procedure ends on the UTRAN side.

8.2.2.11 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

- 1> keep the configuration existing before the reception of the message;
- 1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 3> clear that entry.
 - 2> set the IE "failure cause" to "invalid configuration".
- 1> set the variable INVALID_CONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

8.2.2.12 Incompatible simultaneous reconfiguration

If the table "Rejected transactions" in the variable TRANSACTIONS is set due to the received message and the variable PROTOCOL_ERROR_REJECT is set to FALSE, the UE shall:

- 1> not apply the configuration contained in the received reconfiguration message;
- 1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to "incompatible simultaneous reconfiguration".
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

8.2.2.12a Incompatible simultaneous security reconfiguration

If the variable INCOMPATIBLE_SECURITY_RECONFIGURATION is set to TRUE due to the received reconfiguration message, the UE shall:

- 1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to the cause value "incompatible simultaneous reconfiguration".
- 1> set the variable INCOMPATIBLE SECURITY RECONFIGURATION to FALSE;
- 1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

8.2.2.12b Cell update procedure during security reconfiguration

If:

- a cell update procedure according to subclause 8.3.1 is initiated; and
- the received reconfiguration message causes either:
 - the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
 - the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:

the UE shall:

1> release all radio resources;

- 1> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers; and
- 1> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;
- 1> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 1> clear the variable ESTABLISHED_RABS;
- 1> if the received reconfiguration message contained the IE "Ciphering mode info":
 - 2> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable SECURITY_MODIFICATION.
- 1> if the received reconfiguration message contained the IE "Integrity protection mode info":
 - 2> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 1> enter idle mode;
- 1> perform the actions specified in subclause 8.5.2 when entering idle mode;
- 1> and the procedure ends.

NOTE: UTRAN should use RB Control messages to perform an SRNS relocation only in case of state transitions from CELL_DCH to CELL_DCH.

8.2.2.13 Invalid received message

If the received reconfiguration message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to the cause value "protocol error";
 - 2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

The procedure ends.

8.2.2.14 Radio link failure

If the criteria for radio link failure are met in the old configuration during the reconfiguration procedure as specified in subclause 8.5.6, the UE shall:

- 1> if UE would have entered CELL_PCH or URA_PCH as a result of this reconfiguration procedure and UE has already submitted a response message to lower layers:
 - 2> act as if the reconfiguration message was not received;

- 2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";
- 2> the procedure ends.
- NOTE: UTRAN should consider the reconfiguration procedure as unsuccessful in this case even if a success response message had been received.
- 1> if the UE would have remained in CELL_DCH state as a result of this reconfiguration procedure:
 - 2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";
 - 2> after the cell update procedure has completed successfully:
 - 3> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - 4> include the IE "RRC transaction identifier"; and
 - 4> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 4> clear that entry;
 - 4> set the IE "failure cause" to "physical channel failure".
 - 3> act as if the reconfiguration message was not received;
 - 3> the procedure ends.

If the criteria for radio link failure are met in the new configuration during the reconfiguration procedure (i.e. while UE is waiting for RLC acknowledgement for a response message.) as specified in subclause 8.5.6, the UE shall:

- 1> if the received reconfiguration causes either:
 - the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
 - the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:
 - 2> perform the actions specified in subclause 8.2.2.12b.
- 1> else, the UE should:
 - 2> release all its radio resources;
 - 2> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> enter idle mode:
 - 2> perform the actions specified in subclause 8.5.2 when entering idle mode; and
 - 2> the procedure ends.

8.2.3 Radio bearer release

See subclause 8.2.2 (Reconfiguration procedures).

8.2.4 Transport channel reconfiguration

See subclause 8.2.2 (Reconfiguration procedures).

8.2.5 Transport format combination control

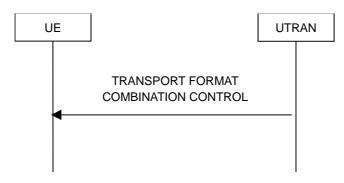


Figure 8.2.5-1: Transport format combination control, normal flow

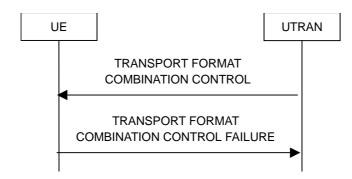


Figure 8.2.5-2: Transport format combination control, failure case

8.2.5.1 General

The transport format combination control procedure is used to control the allowed uplink transport format combinations within the transport format combination set.

8.2.5.2 Initiation

To initiate the transport format combination control procedure, the UTRAN transmits the TRANSPORT FORMAT COMBINATION CONTROL message on the downlink DCCH using AM, UM or TM RLC. When not stated otherwise elsewhere, the UTRAN may initiate the transport format combination control procedure also when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

To change the sub-set of allowed transport format combinations, the UTRAN should:

1> set the allowed TFCs in the IE "Transport Format Combination subset" ("TFC subset"). The UTRAN may specify the duration for which a new TFC sub-set applies by using the IE "TFC Control duration" and independently may specify the time at which a new TFC sub-set shall be applied using the IE "Activation time for TFC subset".

To remove completely the previous restrictions of allowed transport format combinations, the UTRAN should:

 $1\!\!>\!\!$ set the IE "full transport format combination set " in the IE "TFC subset".

8.2.5.3 Reception of a TRANSPORT FORMAT COMBINATION CONTROL message by the UE

If the TRANSPORT FORMAT COMBINATION CONTROL message was received on AM RLC or UM RLC, the UE shall:

- 1> act upon all received information elements as specified in 8.6, unless specified otherwise in the following;
- 1> perform the actions for the transport format combination subset specified in the IE "DPCH/PUSCH TFCS in uplink" according to subclause 8.6.5.3;
- 1> if the variable INVALID CONFIGURATION is set to FALSE:
 - 2> if the IE "TFC Control duration" is included in the message:
 - 3> store the value of the IE "TFC Control duration" in the IE "Duration" in the variable TFC_SUBSET;
 - 3> set the IE "Current TFC subset" (for the CCTrCH indicated by the IE "TFCS Id" in case of TDD) in the variable TFC_SUBSET to the value of the IE "Transport format combination subset";
 - 3> at the CFN indicated by IE "Activation time for TFC subset" apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC_SUBSET for the number of (10 ms) frames specified in the IE "Duration";
 - 3> at the end of the time period defined by the IE "Duration"in the variable TFC_SUBSET:
 - 4> if the IE "Current TFC subset" (for the CCTrCH indicated by the IE "TFCS Id" in case of TDD) in the variable TFC_SUBSET has not subsequently been changed by another message:
 - 5> set the value of the IE "Current TFC subset" to the value of the IE "Default TFC subset" in the variable TFC_SUBSET;
 - 5> clear the IE "Duration" in the variable TFC SUBSET;
 - 5> apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC_SUBSET;
 - 2> if the IE "TFC Control duration" is not included in the message:
 - 3> clear the value of the IE "Duration" in the variable TFC_SUBSET;
 - 3> set both the IE "Current TFC subset" and the IE "Default TFC subset" (for the CCTrCH indicated by the IE "TFCS Id" in case of TDD) in the variable TFC_SUBSET to the value of the IE "Transport format combination subset";
 - 3> at the CFN indicated by the IE "Activation time for TFC subset" apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC_SUBSET.

If the TRANSPORT FORMAT COMBINATION CONTROL message was received on TM RLC, the UE shall:

- 1> if the IE "TFC subset identity" identifies one of the TFC subsets stored in the IE "TFC subset list" in the variable TFC_SUBSET:
 - 2> perform the actions as specified in subclause 8.6.5.3;
 - 2> if the variable INVALID_CONFIGURATION is set to FALSE:
 - 3> in the variable TFC_SUBSET, set the IE "Current TFC subset" and the IE "default TFC subset" to the value of the IE "TFC subset" in "TFC subset list" which is identified by the IE "TFC subset identity";
 - 3> clear the IE "Duration" in the variable TFC SUBSET;
 - 3> apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC_SUBSET.
- 1> if the IE "TFC subset identity" is greater than the maximum number of TFC subsets stored in the IE "TFC subset list" in the variable TFC_SUBSET:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- NOTE: The UTRAN should only send the TRANSPORT FORMAT COMBINATION CONTROL message on TM RLC in order to control the rate of TM RBs (for example, carrying multi-rate AMR or WB-AMR) otherwise the UE behaviour is not specified.

The UE shall:

- 1> clear the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> and the procedure ends.

8.2.5.4 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE due to the received TRANSPORT FORMAT COMBINATION CONTROL message the UE shall:

- 1> if the TRANSPORT FORMAT COMBINATION CONTROL message was received on AM RLC:
 - 2> keep the TFC subset existing before the TRANSPORT FORMAT COMBINATION CONTROL message was received;
 - 2> transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC;
 - 2> set the IE "RRC transaction identifier" in the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to "invalid configuration";
 - 2> when the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message has been submitted to lower layers for transmission the procedure ends.
- 1> if the TRANSPORT FORMAT COMBINATION CONTROL message was received on UM RLC or TM RLC:
 - 2> ignore the TRANSPORT FORMAT COMBINATION CONTROL message;
 - 2> clear the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS.

8.2.5.5 Invalid TRANSPORT FORMAT COMBINATION CONTROL message

If the TRANSPORT FORMAT COMBINATION CONTROL message was received on AM RLC or UM RLC and contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the uplink DCCH using AM RLC setting the information elements as specified below:
 - 2> set the IE "RRC transaction identifier" in the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to the cause value "protocol error";
 - 2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- 1> when the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid TRANSPORT FORMAT COMBINATION CONTROL message has not been received;

2> and the procedure ends.

If the TRANSPORT FORMAT COMBINATION CONTROL message was received on TM RLC and contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> ignore the invalid TRANSPORT FORMAT COMBINATION CONTROL message as if it has not been received:
- 1> the procedure ends.

8.2.6 Physical channel reconfiguration

See subclause 8.2.2 Reconfiguration procedures.

8.2.7 Physical Shared Channel Allocation [TDD only]



Figure 8.2.7-1: Physical Shared Channel Allocation

8.2.7.1 General

The purpose of this procedure is to allocate radio resources to USCH and/or DSCH transport channels in TDD mode, for use by a UE. This procedure can also be used to indicate to the UE, that a PUSCH allocation is pending, in order to prevent further capacity requests from the UE.

UEs are not required to receive FACH and DSCH simultaneously, i.e. if resources are allocated to DSCH the FACH reception may be suspended.

8.2.7.2 Initiation

To initiate the Physical Shared Channel Allocation procedure, the UTRAN sends the "PHYSICAL SHARED CHANNEL ALLOCATION" message on the downlink SHCCH or on the downlink DCCH using UM RLC. The DSCH-RNTI shall be included for UE identification, if the message is sent on the SHCCH.

8.2.7.3 Reception of a PHYSICAL SHARED CHANNEL ALLOCATION message by the UE

Upon reception of a "PHYSICAL SHARED CHANNEL ALLOCATION" message, if the message is received on the downlink SHCCH the UE shall:

- 1> check the DSCH-RNTI to see if the UE is addressed by the message;
- 1> if the UE is addressed by the message, or if the message is received on the downlink DCCH:
 - 2> perform the following actions.
- 1> otherwise:
 - 2> ignore the message.
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:
- 1> if the IE "ISCP Timeslot list" is included:

- 2> store the timeslot numbers given there for future Timeslot ISCP measurements and reports in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION.
- 1> if the IE "PDSCH capacity allocation info" is included:
 - 2> configure the physical resources used for the downlink CCTrCH given by the IE "TFCS ID" according to the following:
 - 3> if the CHOICE "Configuration" has the value "Old configuration":
 - 4> if the UE has stored a PDSCH configuration in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION with the identity given by the IE "PDSCH Identity":
 - 5> configure the physical resources according to that configuration.
 - 4> otherwise:
 - 5> ignore the IE "PDSCH capacity allocation info".
 - 3> if the CHOICE "Configuration" has the value "New configuration":
 - 4> configure the physical resources according to the information given in IE "PDSCH Info". If IE "Common timeslot info" or IE "PDSCH timeslots and codes" IE are not present in IE "PDSCH Info":
 - 5> reuse the configuration stored in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION for this CCTrCH.
 - 4> if the IE "PDSCH Identity" is included:
 - 5> store the new configuration in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION using that identity.
 - 2> start using the new configuration at the CFN specified by the IE "Allocation activation time", and use that for the duration given by the IE "Allocation duration";
 - 2> if the IE "Confirm request" has the value "Confirm PDSCH" and IE "PDSCH Identity" is included in IE "PDSCH capacity allocation info":
 - 3> initiate the PUSCH CAPACITY REQUEST procedure as described in subclause 8.2.8.
- 1> if the IE "PUSCH capacity allocation info" is included:
 - 2> stop the timer T310, if running;
 - 2> if the CHOICE "PUSCH allocation" has the value "PUSCH allocation pending":
 - 3> start the timer T311.
 - 2> if the CHOICE "PUSCH allocation" has the value "PUSCH allocation assignment":
 - 3> stop the timer T311, if running;
 - 3> configure the physical resources used for the uplink CCTrCH given by the IE "TFCS ID" according to the following:
 - 4> if the CHOICE "Configuration" has the value "Old configuration":
 - 5> if the UE has stored a PUSCH configuration with the identity given by the IE "PUSCH Identity" in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION:
 - 6> configure the physical resources according to that configuration.
 - 5> otherwise:
 - 6> ignore the IE "PUSCH capacity allocation info".

- 4> if the CHOICE "Configuration" has the value "New configuration", the UE shall:
 - 5> configure the physical resources according to the information given in IE "PUSCH Info". If IE "Common timeslot info" or IE "PUSCH timeslots and codes" is not present in IE "PUSCH Info":
 - 6> reuse the configuration stored in the variable PHYSICAL SHARED CHANNEL CONFIGURATION for this CCTrCH.
 - 5> if the IE "PUSCH Identity" is included:
 - 6> store the new configuration in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION using that identity.
- 3> if the IE "PUSCH power control info" is present in this message and includes the parameter "UL target SIR" for 3.84 Mcps TDD or 7.68 Mcps TDD, or the parameters "PRX_{PUSCHdes}" and "Beacon PL Est." and "TPC Step Size" for 1.28 Mcps TDD, or the parameters are stored in the variable PHYSICAL SHARED CHANNEL CONFIGURATION for this CCTrCH:
 - 4> start using the new configuration at the CFN specified by the IE "Allocation activation time", and use that for the duration given by the IE "Allocation duration".

3> otherwise:

- 4> ignore the IE "PUSCH capacity allocation info".
- 3> if the IE "PUSCH power control info" is present in this message and includes the parameter "UL target SIR" for 3.84 Mcps TDD or 7.68 Mcps TDD, or the parameters "PRX_{PUSCHdes}" and/or "Beacon PL Est." and/or "TPC Step Size" for 1.28 Mcps TDD:
 - 4> replace the parameters "UL target SIR" or "PRX_{PUSCHdes}" or "TPC Step Size" stored in the variable PHYSICAL SHARED CHANNEL CONFIGURATION for this CCTrCH with the signalled values.
- 3> if the IE "Traffic volume report request " is included:
 - 4> initiate the PUSCH CAPACITY REQUEST procedure as described in subclause 8.2.8 at the time indicated by the IE "Traffic volume report request".
- 3> if the IE "Confirm request" has the value "Confirm PUSCH" and IE "PUSCH Identity" is included in IE "PUSCH capacity allocation info":
 - 4> initiate the PUSCH CAPACITY REQUEST procedure as described in subclause 8.2.8.
- 3> determine the TFCS subset and hence the TFCI values which are possible given the PUSCH allocation for that CCTrCH:
- 3> configure the MAC-c/sh in the UE with this TFCS restriction if necessary;
- 3> transmit USCH Transport Block Sets as required, within the TFCS limits given by the PUSCH allocation.
- NOTE: If the UE has just entered a new cell and System Information Block Type 6 has not yet been scheduled, PUSCH/PDSCH information should be specified in the allocation message.

The UE shall:

- 1> clear the entry for the PHYSICAL SHARED CHANNEL ALLOCATION message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> and the procedure ends.

8.2.7.4 Invalid PHYSICAL SHARED CHANNEL ALLOCATION message

If the UE receives a PHYSICAL SHARED CHANNEL ALLOCATION message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> ignore the invalid PHYSICAL SHARED CHANNEL ALLOCATION message;

- 1> submit the PUSCH CAPACITY REQUEST message for transmission on the uplink SHCCH, setting the information elements in the message as specified in subclause 8.2.8.3;
- 1> reset counter V310;
- 1> start timer T310;
- 1> proceed as described in subclause 8.2.8.

8.2.8 PUSCH capacity request [TDD only]

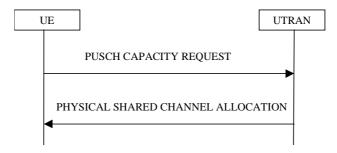


Figure 8.2.8-1: PUSCH Capacity request procedure

8.2.8.1 General

With this procedure, the UE transmits its request for PUSCH resources to the UTRAN. In the normal case, the UTRAN responds with a PHYSICAL SHARED CHANNEL ALLOCATION message, which either allocates the requested PUSCH resources, and/or allocates a PDSCH resource, or may just serve as an acknowledgement, indicating that PUSCH allocation is pending.

This procedure can also be used to acknowledge the reception of a PHYSICAL SHARED CHANNEL ALLOCATION message, or to indicate a protocol error in that message.

With the PUSCH CAPACITY REQUEST message, the UE can request capacity for one or more USCH.

8.2.8.2 Initiation

This procedure is initiated:

- 1> in the CELL_FACH or CELL_DCH state;
- 1> and when at least one RB using USCH has been established;
- 1> and when the UE sees the requirement to request physical resources (PUSCH) for an USCH channel or there is the need to reply to a PHYSICAL SHARED CHANNEL ALLOCATION message as described in clause 8.2.7 (i.e. to confirm the reception of a message, if requested to do so, or to indicate a protocol error).

The procedure can be initiated if:

- Timer T311 is not running.
- The timer T310 (capacity request repetition timer) is not running.

The UE shall:

- 1> set the IEs in the PUSCH CAPACITY REQUEST message according to subclause 8.2.8.3;
- 1> if the procedure is triggered to reply to a previous PHYSICAL SHARED CHANNEL ALLOCATION message by the IE "Confirm request" set to "Confirm PUSCH" and the IE "PUSCH capacity allocation info" is not present:
 - 2> transmit the PUSCH CAPACITY REQUEST message on RACH.

1> else:

- 2> transmit the PUSCH CAPACITY REQUEST message on the uplink SHCCH.
- 1> set counter V310 to 1;
- 1> start timer T310.

8.2.8.3 PUSCH CAPACITY REQUEST message contents to set

With one PUSCH CAPACITY REQUEST message, capacity for one or more USCH can be requested. It shall include these information elements:

- 1> DSCH-RNTI to be used as UE identity if the message is sent on RACH;
- 1> Traffic volume measured results for each radio bearer satisfying the reporting criteria as specified in the MEASUREMENT CONTROL procedure (if no radio bearer satisfies the reporting criteria, traffic volume measured results shall not be included). These results shall include:
 - 2> Radio Bearer ID of the Radio Bearer being reported;
 - 2> RLC buffer payload for these radio bearers, as specified by the MEASUREMENT CONTROL procedure.

The UE shall:

- 1> if the initiation of the procedure is triggered by the IE "Traffic volume report request" in a previously received PHYSICAL SHARED CHANNEL ALLOCATION message:
 - 2> report the traffic volume measurement result for the radio bearer mapped on USCH transport channel specified in the received message. These results shall include:
 - 3> Radio Bearer ID of the Radio Bearer being reported;
 - 3> RLC buffer payload for this radio bearer.
- 1> if the initiation of the procedure is triggered by the IE "Confirm request" set to "Confirm PDSCH" in a previously received PHYSICAL SHARED CHANNEL ALLOCATION message and the IE "PUSCH capacity allocation info" is present in this message:
 - 2> set the CHOICE "Allocation confirmation" to "PDSCH Confirmation" with the value given in the IE "PDSCH Identity" stored in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION.
- 1> if the initiation of the procedure is triggered by the IE "Confirm request" set to "Confirm PUSCH" in a previously received PHYSICAL SHARED CHANNEL ALLOCATION message:
 - 2> set the CHOICE "Allocation confirmation" to "PUSCH Confirmation" with the value given in the IE "PUSCH Identity" stored in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION.
- 1> if the variable PROTOCOL_ERROR_REJECT is set to TRUE:
 - 2> include the IE "RRC transaction identifier" in the response message transmitted below; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the PHYSICAL SHARED CHANNEL ALLOCATION message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "protocol error indicator" to TRUE;
 - 2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- 1> if the value of the variable PROTOCOL_ERROR_ REJECT is FALSE:
 - 2> set the IE "Protocol error indicator" to FALSE.

As an option, the message may include IE "Timeslot ISCP" and IE "Primary CCPCH RSCP".

The timeslots for which "Timeslot ISCP" may be reported shall have been configured with a previous PHYSICAL SHARED CHANNEL ALLOCATION message and stored in the variable PHYSICAL_SHARED_CHANNEL_CONFIGURATION.

"Primary CCPCH RSCP" is reported when requested with a previous PHYSICAL SHARED CHANNEL ALLOCATION message.

8.2.8.4 Reception of a PUSCH CAPACITY REQUEST message by the UTRAN

Upon receiving a PUSCH CAPACITY REQUEST message with traffic volume measurement included for at least one radio bearer, the UTRAN should initiate the PHYSICAL SHARED CHANNEL ALLOCATION procedure, either for allocating PUSCH or PDSCH resources as required, or just as an acknowledgement, indicating a pending PUSCH allocation, as described in subclause 8.2.7.

8.2.8.5 T310 expiry

Upon expiry of timer T310, the UE shall:

- 1> if V310 is smaller than N310:
 - 2> transmit a new PUSCH CAPACITY REQUEST message on the Uplink SHCCH;
 - 2> restart timer T310;
 - 2> increment counter V310:
 - 2> set the IEs in the PUSCH CAPACITY REQUEST message as specified in subclause 8.2.8.3.
- 1> if V310 is greater than or equal to N310:
 - 2> the procedure ends.

8.2.9 Void

8.2.10 Uplink Physical Channel Control [TDD only]

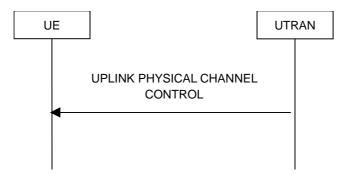


Figure 8.2.10-1: Uplink Physical Channel Control

8.2.10.1 General

The uplink physical channel control procedure is used in TDD to control the uplink outer loop power control and timing advance running in the UE.

8.2.10.2 Initiation

The UTRAN initiates the procedure by transmitting the UPLINK PHYSICAL CHANNEL CONTROL message on the downlink DCCH using AM or UM RLC in order to update parameters for uplink open loop power control in the UE for

one CCTrCH or to inform the UE about a new timing advance value to be applied. Especially, uplink interference information measured by the UTRAN can be included for the uplink timeslots used for the CCTrCH.

8.2.10.3 Reception of UPLINK PHYSICAL CHANNEL CONTROL message by the UE

Upon reception of the UPLINK PHYSICAL CHANNEL CONTROL message, the UE shall:

1> act upon all received information elements as specified in subclause 8.6.

In 1.28 Mcps TDD, if the IE "Uplink DPCH Power Control Info" and IE "PRX_{HS-SICH}" and IE "TPC step size" are transmitted, this information shall be taken into account by the UE for uplink open loop power control and for uplink closed loop power control as described in subclause 8.6.6.11, and the "PRX_{HS-SICH}" shall be taken into account by the UE for open loop power control as described in subclause 8.5.7 and the "TPC step size" for closed loop power control on HS-SICH.

In 3.84 Mcps TDD or 7.68 Mcps TDD, if the IEs "Uplink DPCH Power Control Info", "PRACH Constant Value", "PUSCH Constant Value", "HS-SICH Power Control Info", "Alpha" or IE group "list of UL Timeslot Interference" are transmitted, this information shall be taken into account by the UE for uplink open loop power control as specified in subclause 8.5.7. If the UE is capable of using IPDLs for UE positioning, the IE "IPDL-Alpha" shall be used instead of the IE "Alpha". If the IE "IPDL-Alpha" parameter is not present, the UE shall use IE "Alpha".

If the IE Special Burst Scheduling is transmitted the UE shall:

1> use the new value for the "Special Burst Generation Period".

The UE shall:

- 1> clear the entry for the UPLINK PHYSICAL CHANNEL CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS;
- 1> and the procedure ends.

8.2.10.4 Invalid UPLINK PHYSICAL CHANNEL CONTROL message

If the UE receives a UPLINK PHYSICAL CHANNEL CONTROL message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC, setting the information elements as specified below:
 - 2> include the IE "Identification of received message"; and
 - 2> set the IE "Received message type" to UPLINK PHYSICAL CHANNEL CONTROL; and
 - 2> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UPLINK PHYSICAL CHANNEL CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid UPLINK PHYSICAL CHANNEL CONTROL message has not been received.

8.2.11 Physical channel reconfiguration failure

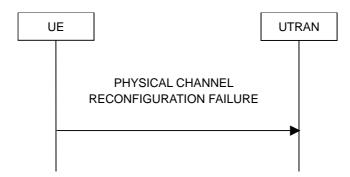


Figure 8.2.11-1: Physical channel reconfiguration failure in case of runtime configuration error

8.2.11.1 General

The physical channel reconfiguration failure procedure is used to indicate to the network a runtime configuration error in the UE.

8.2.11.2 Runtime error due to overlapping compressed mode configurations

When the UE has received from the UTRAN the configurations of several compressed mode transmission gap pattern sequences, and if several of these patterns are to be simultaneously active, the UE shall check to see if these simultaneously active transmission gap pattern sequences create transmission gaps in the same frame. An illegal overlap is created if two or more transmission gap pattern sequences create transmission gaps in the same frame, irrespective of the gaps are created in uplink or downlink.

If the parallel transmission gap pattern sequences create an illegal overlap, the UE shall:

- 1> delete the overlapping transmission gap pattern sequence configuration stored in the variable TGPS_IDENTITY, which is associated with the highest value of IE "TGPSI";
- 1> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the information elements as specified below:
 - 2> not include the IE "RRC transaction identifier";
 - 2> set the cause value in IE "failure cause" to value "compressed mode runtime error".
- 1> terminate the inter-frequency and/or inter-RAT measurements corresponding to the deleted transmission gap pattern sequence;
- 1> when the PHYSICAL CHANNEL RECONFIGURATION FAILURE message has been submitted to lower layers for transmission:
 - 2> the procedure ends.

8.2.11.3 Void

8.3 RRC connection mobility procedures

8.3.1 Cell and URA update procedures

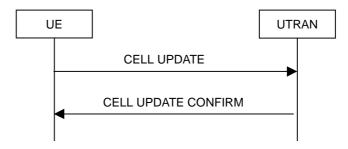


Figure 8.3.1-1: Cell update procedure, basic flow

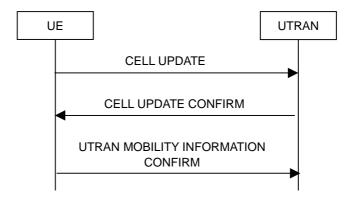


Figure 8.3.1-2: Cell update procedure with update of UTRAN mobility information

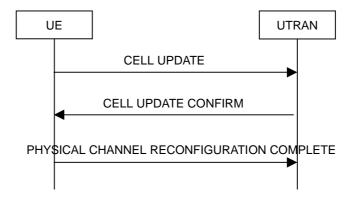


Figure 8.3.1-3: Cell update procedure with physical channel reconfiguration

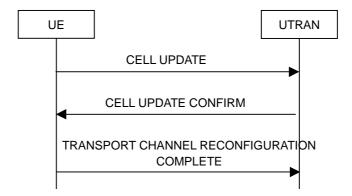


Figure 8.3.1-4: Cell update procedure with transport channel reconfiguration

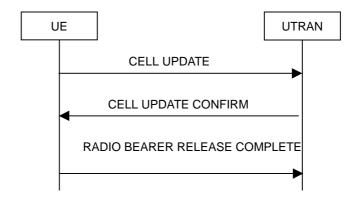


Figure 8.3.1-5: Cell update procedure with radio bearer release

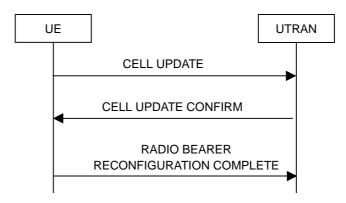


Figure 8.3.1-6: Cell update procedure with radio bearer reconfiguration

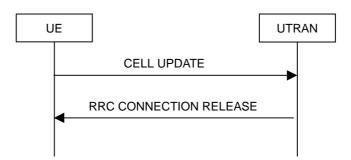


Figure 8.3.1-7: Cell update procedure, failure case

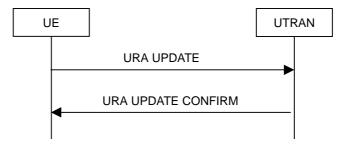


Figure 8.3.1-8: URA update procedure, basic flow

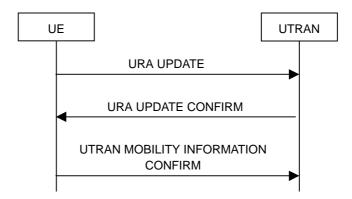


Figure 8.3.1-9: URA update procedure with update of UTRAN mobility information

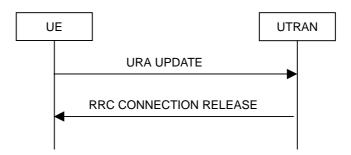


Figure 8.3.1-10: URA update procedure, failure case

8.3.1.1 General

The URA update and cell update procedures serve several main purposes:

- to notify UTRAN after re-entering service area in the URA PCH or CELL PCH state;
- to notify UTRAN of an RLC unrecoverable error [16] on an AM RLC entity;
- to be used as a supervision mechanism in the CELL_FACH, CELL_PCH, or URA_PCH state by means of periodical update.

In addition, the URA update procedure also serves the following purpose:

- to retrieve a new URA identity after cell re-selection to a cell not belonging to the current URA assigned to the UE in URA_PCH state.

In addition, the cell update procedure also serves the following purposes:

- to update UTRAN with the current cell the UE is camping on after cell reselection;
- to act on a radio link failure in the CELL_DCH state;
- to act on the transmission failure of the UE CAPABILITY INFORMATION message;
- when triggered in the URA_PCH or CELL_PCH state, to notify UTRAN of a transition to the CELL_FACH state due to the reception of UTRAN originated paging or due to a request to transmit uplink data;
- to count the number of UEs in URA_PCH, CELL_PCH and CELL_FACH that are interested to receive an MBMS transmission;
- when triggered in the URA_PCH, CELL_PCH and CELL_FACH state, to notify UTRAN of the UEs interest to receive an MBMS service;
- to request the MBMS P-T-P RB setup by the UE in CELL_PCH or URA_PCH state.

The URA update and cell update procedures may:

- 1> include an update of mobility related information in the UE;
- 1> cause a state transition from the CELL_FACH state to the CELL_DCH, CELL_PCH or URA_PCH states or idle mode.

The cell update procedure may also include:

- a re-establish of AM RLC entities;
- a radio bearer release, radio bearer reconfiguration, transport channel reconfiguration or physical channel reconfiguration.

8.3.1.2 Initiation

A UE shall initiate the cell update procedure in the following cases:

- 1> Uplink data transmission:
 - 2> if the UE is in URA PCH or CELL PCH state; and
 - 2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:
 - 3> perform cell update using the cause "uplink data transmission".

1> Paging response:

- 2> if the criteria for performing cell update with the cause specified above in the current subclause are not met;
- 2> if the UE in URA_PCH or CELL_PCH state, receives a PAGING TYPE 1 message fulfilling the conditions for initiating a cell update procedure specified in subclause 8.1.2.3:
 - 3> perform cell update using the cause "paging response".

1> Radio link failure:

- 2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:
 - 3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6; or
 - 3> if the transmission of the UE CAPABILITY INFORMATION message fails as specified in subclause 8.1.6.6:
 - 4> perform cell update using the cause "radio link failure".

1> Re-entering service area:

- 2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
- 2> if the UE is in CELL_FACH or CELL_PCH state; and
- 2> if the UE has been out of service area and re-enters service area before T307 or T317 expires:
 - 3> perform cell update using the cause "re-entering service area".

1> RLC unrecoverable error:

- 2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
- 2> if the UE detects RLC unrecoverable error [16] in an AM RLC entity:
 - 3> perform cell update using the cause "RLC unrecoverable error".

1> Cell reselection:

- 2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:
 - 3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or
 - 3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:
 - 4> perform cell update using the cause "cell reselection".

1> Periodical cell update:

- 2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
- 2> if the UE is in CELL_FACH or CELL_PCH state; and
- 2> if the timer T305 expires; and
- 2> if the criteria for "in service area" as specified in subclause 8.5.5.2 are fulfilled; and
- 2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":
 - 3> perform cell update using the cause "periodical cell update".

1> MBMS reception:

- 2> if the UE is in URA_PCH, Cell_PCH or Cell_FACH state; and
- 2> if the UE should perform cell update for MBMS counting as specified in subclause 8.7.4:
 - 3> perform cell update using the cause "MBMS reception".

1> MBMS ptp RB request:

- 2> if the UE is in URA_PCH or Cell_PCH state; and
- 2> if the UE should perform cell update for MBMS ptp radio bearer request as specified in 8.6.9.6:
 - 3> perform cell update using the cause "MBMS ptp RB request".

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

- 2> if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2; or
- 2> if the list of URA identities in system information block type 2 is empty; or
- 2> if the system information block type 2 can not be found:
 - 3> perform URA update using the cause "change of URA".

1> Periodic URA update:

- 2> if the criteria for performing URA update with the causes as specified above in the current subclause are not met; and
- 2> if the timer T305 expires; and
- 2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":
 - 3> perform URA update using the cause "periodic URA update".

When initiating the URA update or cell update procedure, the UE shall:

- 1> stop timer T305;
- 1> if the UE is in CELL DCH state:
 - 2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;
 - 2> if the stored values of the timer T314 and timer T315 are both equal to zero; or
 - 2> if the stored value of the timer T314 is equal to zero and there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":
 - 3> release all its radio resources;
 - 3> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 3> clear the variable ESTABLISHED_RABS;
 - 3> enter idle mode;
 - 3> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
 - 3> and the procedure ends.
 - 2> if the stored value of the timer T314 is equal to zero:
 - 3> release all radio bearers, associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";
 - 3> in the variable RB_TIMER_INDICATOR set the IE "T314 expired" to TRUE.
 - 2> if the stored value of the timer T315 is equal to zero:
 - 3> release all radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315";
 - 3> in the variable RB_TIMER_INDICATOR set the IE "T315 expired" to TRUE.
 - 2> if the stored value of the timer T314 is greater than zero:
 - 3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314":
 - 4> start timer T314.
 - 3> if there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314" or "useT315":
 - 4> start timer T314.
 - 2> if the stored value of the timer T315 is greater than zero:
 - 3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":
 - 4> start timer T315.
 - 2> for the released radio bearer(s):
 - 3> delete the information about the radio bearer from the variable ESTABLISHED_RABS;
 - 3> when all radio bearers belonging to the same radio access bearer have been released:

- 4> indicate local end release of the radio access bearer to upper layers using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;
- 4> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.
- 2> move to CELL_FACH state;
- 2> select a suitable UTRA cell on the current frequency according to [4];
- 2> select PRACH according to subclause 8.5.17;
- 2> select Secondary CCPCH according to subclause 8.5.19;
- 2> use the transport format set given in system information as specified in subclause 8.6.5.1;
- 2> set the variable ORDERED_RECONFIGURATION to FALSE.
- 1> set the variables PROTOCOL_ERROR_INDICATOR, FAILURE_INDICATOR, UNSUPPORTED_CONFIGURATION and INVALID_CONFIGURATION to FALSE;
- 1> set the variable CELL_UPDATE_STARTED to TRUE;
- 1> if any IEs releated to HS-DSCHare stored in the UE:
 - 2> clear any stored IE "Downlink HS-PDSCH information";
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if any IEs related to E-DCHare stored in the UE:
 - 2> clear any stored IE "E-DCH info";
 - 2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.
- 1> if the UE is not already in CELL_FACH state:
 - 2> move to CELL_FACH state;
 - 2> select PRACH according to subclause 8.5.17;
 - 2> select Secondary CCPCH according to subclause 8.5.19;
 - 2> use the transport format set given in system information as specified in subclause 8.6.5.1.
- 1> if the UE performs cell re-selection:
 - 2> clear the variable C_RNTI; and
 - 2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.
- 1> set CFN in relation to SFN of current cell according to subclause 8.5.15;
- 1> in case of a cell update procedure:
 - $2\!\!>$ set the contents of the CELL UPDATE message according to subclause 8.3.1.3;
 - 2> submit the CELL UPDATE message for transmission on the uplink CCCH.
- 1> in case of a URA update procedure:
 - 2> set the contents of the URA UPDATE message according to subclause 8.3.1.3;
 - 2> submit the URA UPDATE message for transmission on the uplink CCCH.
- 1> set counter V302 to 1;
- 1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

8.3.1.3 CELL UPDATE / URA UPDATE message contents to set

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

In case of URA update procedure the UE shall transmit a URA UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

- 1> set the IE "Cell update cause" corresponding to the cause specified in subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;
- NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.
- 1> if the IE "Cell update cause" is set to "uplink data transmission" and if an event triggered traffic volume measurement has been configured:
 - 2> if the TCTV is larger than the threshold in the IE "Reporting threshold" for a traffic volume measurement stored in the MEASUREMENT_IDENTITY variable and that traffic volume measurement has "measurement identity" equal to 4, "Traffic volume event identity" equal to "4a", "Measurement validity" equal to "all states" or "all states except CELL_DCH":
 - 3> set the IE "Traffic volume indicator" to TRUE.
 - 2> else:
 - 3> set the IE "Traffic volume indicator" to FALSE.
- 1> set the IE "U-RNTI" to the value of the variable U_RNTI;
- 1> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:
 - 2> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> include and set the IE "failure cause" to the cause value "protocol error";
 - 2> set the IE "Protocol error information" set to the value of the variable PROTOCOL ERROR INFORMATION.
- 1> if the value of the variable FAILURE_INDICATOR is TRUE:
 - 2> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.
 - 2> include and set the IE "failure cause" to the value of the variable FAILURE_CAUSE.
- 1> for each CN domain for which an entry exists in the variable ESTABLISHED_RABS or which is indicated in the variable LATEST CONFIGURED CN DOMAIN:
 - 2> include the START value calculated according to subclause 8.5.9.
- 1> if an unrecoverable error [16] in any of the AM RLC entities for the signalling radio bearers RB2, RB3 or RB4 is detected:
 - 2> set the IE "AM_RLC error indication (RB2, RB3 or RB4)" to TRUE;
 - 2> set the variable AM_RLC_ERROR_PENDING_RB234 to TRUE.
- 1> otherwise:
 - 2> if the value of the variable AM_RLC_ERROR_PENDING_RB234 is TRUE:

- 3> set the IE "AM_RLC error indication (RB2, RB3 or RB4)" to TRUE.
- 2> otherwise:
 - 3> set the IE "AM RLC error indication (RB2, RB3 or RB4)" to FALSE.
- 1> if an unrecoverable error [16] in any of the AM RLC entities for the RB5 or upward is detected:
 - 2> set the IE "AM_RLC error indication (RB>4)" to TRUE;
 - 2> set the variable AM_RLC_ERROR_PENDING_RB5_AND_UP to TRUE.
- 1> otherwise:
 - 2> if the value of the variable AM_RLC_ERROR_PENDING_RB5_AND_UP is TRUE:
 - 3> set the IE "AM_RLC error indication (RB>4)" to TRUE.
 - 2> otherwise:
 - 3> set the IE "AM_RLC error indication (RB>4)" to FALSE.
- 1> set the IE "RB Timer indicator" to the value of the variable RB_TIMER_INDICATOR;
- 1> if the variable ESTABLISHMENT_CAUSE is initialised:
 - 2> include the IE "Establishment cause" and set it to the value of the variable ESTABLISHMENT_CAUSE.
- 1> if the variable ORDERED_RECONFIGURATION is set to TRUE:
 - 2> include the IE "Reconfiguration Status Indicator" and set it to TRUE.
- 1> if the IE "Cell update cause" is set to "radio link failure" and the UE has submitted a reconfiguration response message to RLC and the UE has not received the RLC acknowledgement for the response message:
 - 2> include the IE "Reconfiguration Status Indicator" and set it to TRUE.

The UE shall set the IEs in the URA UPDATE message as follows:

- 1> set the IE "U-RNTI" to the value of the variable U_RNTI;
- 1> set the IE "URA update cause" corresponding to which cause as specified in subclause 8.3.1.2 that is valid when the URA UPDATE message is submitted to lower layers for transmission;
- NOTE: During the time period starting from when a URA update procedure is initiated by the UE until when the procedure ends, additional URA UPDATE messages may be transmitted by the UE with different causes, depending on which causes are valid for the respective URA UPDATE message.
- 1> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:
 - 2 > include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> set the IE "Protocol error indicator" to TRUE;
 - 2> include the IE "Protocol error information" set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- 1> if the value of the variable PROTOCOL ERROR INDICATOR is FALSE:
 - 2> if the value of the variable INVALID_CONFIGURATION is TRUE:
 - 3> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS;

- 3> set the IE "Protocol error indicator" to TRUE;
- 3> include the IE "Protocol error information" set to "Information element value not comprehended".
- 2> if the value of the variable INVALID_CONFIGURATION is FALSE:
 - 3> set the IE "Protocol error indicator" to FALSE.

8.3.1.4 T305 expiry and the UE detects "out of service area"

When the T305 expires and the UE detects that it is "out of service area" as specified in subclause 8.5.5.1, the UE shall

- 1> start timer T307;
- 1> act according to subclause 7.2.2.

8.3.1.4.1 Re-entering "in service area"

If the UE detects "in service area" according to subclause 8.5.5.2 and timer T307 or T317 is running, the UE shall:

- 1> check the value of V302; and
- 1> if V302 is equal to or smaller than N302:
 - 2> in case of a cell update procedure:
 - 3> set the contents of the CELL UPDATE message according to subclause 8.3.1.3;
 - 3> submit the CELL UPDATE message for transmission on the uplink CCCH.
 - 2> in case of a URA update procedure:
 - 3> set the contents of the URA UPDATE message according to subclause 8.3.1.3;
 - 3> submit the URA UPDATE message for transmission on the uplink CCCH.
 - 2> increment counter V302;
 - 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> in case of a cell update procedure:
 - 3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> in case of a URA update procedure:
 - 3> clear the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> enter idle mode;

- 2> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
- 2> and the procedure ends.

8.3.1.4.2 Expiry of timer T307

When the T307 expires, the UE shall:

- 1> move to idle mode;
- 1> release all dedicated resources:
- 1> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 1> clear the variable ESTABLISHED SIGNALLING CONNECTIONS;
- 1> clear the variable ESTABLISHED_RABS;
- 1> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
- 1> and the procedure ends.

8.3.1.5 Reception of an CELL UPDATE/URA UPDATE message by the UTRAN

When the UTRAN receives a CELL UPDATE/URA UPDATE message, the UTRAN should:

- 1> in case the procedure was triggered by reception of a CELL UPDATE:
 - 2> if SRNS relocation was performed:
 - 3> transmit a CELL UPDATE CONFIRM message on the downlink DCCH.
 - 2> otherwise:
 - 3> update the START value for each CN domain as maintained in UTRAN (refer to subclause 8.5.9) with "START" in the IE "START list" for the CN domain as indicated by "CN domain identity" in the IE "START list":
 - 3> transmit a CELL UPDATE CONFIRM message on the downlink DCCH or optionally on the CCCH but only if ciphering is not required; and
 - 3> optionally set the IE "RLC re-establish indicator (RB2, RB3 and RB4)" and/or the IE "RLC re-establish indicator (RB5 and upwards)" to TRUE to request a RLC re-establishment in the UE, in which case the corresponding RLC entities should also be re-established in UTRAN; or
- 1> in case the procedure was triggered by reception of a URA UPDATE:
 - 2> if SRNS relocation was performed:
 - 3> transmit a URA UPDATE CONFIRM message on the downlink DCCH.
 - 2> otherwise:
 - 3> transmit a URA UPDATE CONFIRM message on the downlink CCCH or DCCH.
 - 2> include the IE "URA identity" in the URA UPDATE CONFIRM message in a cell where multiple URA identifiers are broadcast; or
- 1> initiate an RRC connection release procedure (see subclause 8.1.4) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH. In particular UTRAN should:
 - 2> if the CELL UPDATE message was sent because of an unrecoverable error in RB2, RB3 or RB4:

3> initiate an RRC connection release procedure (subclause 8.1.4) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH.

UTRAN may transmit several CELL UPDATE CONFIRM/URA UPDATE CONFIRM messages to increase the probability of proper reception of the message by the UE. In such a case, the RRC SN for these repeated messages should be the same.

8.3.1.6 Reception of the CELL UPDATE CONFIRM/URA UPDATE CONFIRM message by the UE

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

the UE shall:

- 1> stop timer T302;
- 1> in case of a cell update procedure and the CELL UPDATE CONFIRM message:
 - 2> includes "RB information elements"; and/or
 - 2> includes "Transport channel information elements"; and/or
 - 2> includes "Physical channel information elements"; and
 - 2> if the variable ORDERED_RECONFIGURATION is set to FALSE:
 - 3> set the variable ORDERED_RECONFIGURATION to TRUE.
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:
 - 2> if the IE "Frequency info" is included in the message:
 - 3> if the IE "RRC State Indicator" is set to the value "CELL FACH" or "CELL PCH" or URA PCH":
 - 4> select a suitable UTRA cell according to [4] on that frequency;
 - 4> if the UE finds a suitable UTRA cell on that frequency:
 - 5> if the received CELL UPDATE CONFIRM message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received CELL UPDATE CONFIRM message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):
 - 6> act as specified in subclause 8.3.1.12.
 - 4> else, if the UE can not find a suitable UTRA cell on the indicated frequency but it finds a suitable UTRA cell on another frequency:
 - 5> act as specified in subclause 8.3.1.12.
 - 3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":
 - 4> act on the IE "Frequency info" as specified in subclause 8.6.6.1.
 - 2> use the transport channel(s) applicable for the physical channel types that is used; and
 - 2> if the IE "TFS" is neither included nor previously stored in the UE for that transport channel(s):

- 3> use the TFS given in system information.
- 2> if none of the TFS stored is compatible with the physical channel:
 - 3> delete the stored TFS:
 - 3> use the TFS given in system information.
- 2> if the IE "RLC re-establish indicator (RB2, RB3 and RB4)" in the CELL UPDATE CONFIRM message is set to TRUE:
 - 3> re-establish the RLC entities for signalling radio bearer RB2, signalling radio bearer RB3 and signalling radio bearer RB4 (if established);
 - 3> if the value of the IE "Status" in the variable CIPHERING_STATUS of the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN is set to "Started":
 - 4> set the HFN component of the respective COUNT-C values for AM RLC entities with RB identity 2,RB identity 3 and RB identity 4 (if established) equal to the START value included in the latest transmitted CELL UPDATE message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN.
- 2> if the IE "RLC re-establish indicator (RB5 and upwards)" in the CELL UPDATE CONFIRM message is set to TRUE:
 - 3> for radio bearers with RB identity 5 and upwards:
 - 4> re-establish the AM RLC entities;
 - 4> if the value of the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Started":
 - 5> set the HFN component of the respective COUNT-C values for AM RLC entities equal to the START value included in this CELL UPDATE message for the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS.
- NOTE: UE actions, in case IE "Downlink counter synchronisation info" is included and either IE "RLC reestablish indicator (RB2, RB3 and RB4)" or IE "RLC re-establish indicator (RB5 and upwards)" are set to TRUE, are not defined.
- 1> if the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message contained the IE "Ciphering mode info" or contained the IE "Integrity protection mode info":
 - 2> set the IE "Status" in the variable SECURITY_MODIFICATION for all the CN domains in the variable SECURITY_MODIFICATION to "Affected".
- 1> if the variable ESTABLISHMENT_CAUSE is set:
 - 2> clear the variable ESTABLISHMENT_CAUSE.
- 1> enter a state according to subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.
- If the UE after state transition enters CELL_DCH state, it shall:
 - 1> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);
 - 1> not prohibit periodical status transmission in RLC.
- If the UE after state transition remains in CELL_FACH state, it shall
 - 1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";
 - 1> select PRACH according to subclause 8.5.17;

- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> not prohibit periodical status transmission in RLC;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> ignore that IE and stop using DRX.

If the UE after state transition enters URA_PCH or CELL_PCH state, it shall:

- 1> prohibit periodical status transmission in RLC;
- 1> clear the variable C_RNTI;
- 1> stop using that C_RNTI just cleared from the variable C_RNTI in MAC;
- 1> start the timer T305 using its initial value if timer T305 is not running and periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";
- 1> select Secondary CCPCH according to subclause 8.5.19;
- 1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - 2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging Occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.
- NOTE: In the case of a cell update procedure during an ongoing reconfiguration procedure moving the UE into CELL_PCH/URA_PCH then the value of the IE "UTRAN DRX Cycle length coefficient" sent in the CELL UPDATE CONFIRM message should be the same as the value sent in the reconfiguration message.
- 1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.

If the UE after the state transition remains in CELL_FACH state; and

1> the contents of the variable C_RNTI are empty:

it shall check the value of V302; and:

- 1> if V302 is equal to or smaller than N302:
 - 2> if, caused by the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:
 - 3> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 3> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> abort the ongoing integrity and/or ciphering reconfiguration;
 - 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 5> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 5> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
 - 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Integrity protection mode info":
 - 5> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 5> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
 - 2> in case of a URA update procedure:
 - 3> stop the URA update procedure;

- 3> clear any entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 3> continue with a cell update procedure.
- 2> set the contents of the CELL UPDATE message according to subclause 8.3.1.3, except for the IE "Cell update cause" which shall be set to "cell reselection";
- 2> submit the CELL UPDATE message for transmission on the uplink CCCH;
- 2> increment counter V302;
- 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> in case of a cell update procedure:
 - 3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> in case of a URA update procedure:
 - 3> clear the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> enter idle mode;
 - 2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2:
 - 2> and the procedure ends.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

or

- the UE after the state transition moves to another state than the CELL_FACH state:

the UE shall:

- 1> in case cell reselection interrupted an ongoing cell update procedure and a CELL UPDATE CONFIRM/URA UPDATE CONFIRM was received with the IE "Downlink counter synchronisation info" present and the response to which was not submitted to the lower layers due to the cell re-selection:
 - 2> include the IE "START list" in the response message transmitted according to subclause 8.3.1.7;
 - 2> if the CELL UPDATE CONFIRM/URA UPDATE CONFIRM, the response to which was not delivered to the lower layers, due to the cell re-selection, included the IE "RB with PDCP information list":
 - 3> include the IE "RB with PDCP information list" in the response message transmitted according to subclause 8.3.1.7.

- 1> in case of a cell update procedure:
 - 2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry.
- 1> in case of a URA update procedure:
 - 2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
- 1> if the variable PDCP_SN_INFO is non-empty:
 - 2> include the IE "RB with PDCP information list" in any response message transmitted below and set it to the value of the variable PDCP_SN_INFO.
- 1> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message included the IE "Downlink counter synchronisation info":
 - 2> if the variable PDCP_SN_INFO is empty:
 - 3> configure the corresponding RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "stop".
 - 2> else:
 - 3> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "stop";
 - 3> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "stop".
 - 2> re-establish the RLC entity for RB2;
 - 2> for the downlink and the uplink, apply the ciphering configuration as follows:
 - 3> if the received re-configuation message included the IE "Ciphering Mode Info":
 - 4> use the ciphering configuration in the received message when transmitting the response message.
 - 3> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached:
 - 4> if the previous SECURITY MODE COMMAND was received due to new keys being received:
 - 5> consider the new ciphering configuration to include the received new keys;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 as indicated in subclause 8.1.12.3.1.
 - 4> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 5> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 to the most recently transmitted IE "START list" or IE "START" for the LATEST_CONFIGURED_CN_DOMAIN at the reception of the previous SECURITY MODE COMMAND.

- 4> apply the new ciphering configuration immediately following RLC re-establishment.
- 3> else:
 - 4> continue using the current ciphering configuration.
- 2> set the new uplink and downlink HFN component of the COUNT-C of RB2 to MAX(uplink HFN component of the COUNT-C of RB2, downlink HFN component of the COUNT-C of RB2);
- 2> increment by one the downlink and uplink values of the HFN component of the COUNT-C for RB2;
- 2> calculate the START value according to subclause 8.5.9;
- 2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in any response message transmitted below.
- 1> transmit a response message as specified in subclause 8.3.1.7;
- 1> if the IE "Integrity protection mode info" was present in the CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:
 - 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.
- 1> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:
 - 2> set the variable ORDERED_RECONFIGURATION to FALSE.
- 1> clear the variable PDCP_SN_INFO;
- 1> when the response message transmitted per subclause 8.3.1.7 to the UTRAN has been confirmed by RLC:
 - 2> if the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 3> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;
 - 3> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 3> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
 - 2> if the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message contained the IE "Integrity protection mode info":
 - 3> set "Uplink RRC Message sequence number" for signalling radio bearer RB0 in the variable INTEGRITY_PROTECTION_INFO to a value such that next RRC message to be sent on uplink RB0 will use the new integrity protection configuration;
 - 3> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
 - 3> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE.
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 1> in case of a cell update procedure:
 - 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
- 1> in case of a URA update procedure:
 - 2> clear the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
- 1> set the variable CELL_UPDATE_STARTED to FALSE;

- 1> if the variable AM_RLC_ERROR_PENDING_RB234 is set to TRUE:
 - 2> set the variable AM_RLC_ERROR_PENDING_RB234 to FALSE.
- 1> if the variable AM RLC ERROR PENDING RB5 AND UP is set to TRUE:
 - 2> set the variable AM_RLC_ERROR_PENDING_RB5_AND_UP to FALSE.
- 1> clear the variable SECURITY_MODIFICATION.
- 1> stop timers T314 and/or T315 if they are running.

The procedure ends.

8.3.1.7 Transmission of a response message to UTRAN

If the CELL UPDATE CONFIRM message:

- includes the IE "RB information to release list":

the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list"; and
- includes the IE "RB information to reconfigure list"; or
- includes the IE "RB information to be affected list":

the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list", nor the IE "RB information to reconfigure list", nor the IE "RB information to be affected list"; and
- includes "Transport channel information elements":

the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list", nor the IE "RB information to reconfigure list", nor the IE "RB information to be affected list"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list", nor the IE "RB information to reconfigure list", nor the IE "RB information to be affected list"; and
- does not include "Transport channel information elements"; and

- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI"; or
- includes the IE "Downlink counter synchronisation info" and the IE "New U-RNTI":

NOTE: In the case of a cell update procedure during an ongoing reconfiguration procedure moving the UE into CELL_PCH/URA_PCH the CELL UPDATE CONFIRM message should include the IE "New C-RNTI".

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

If the URA UPDATE CONFIRM message:

- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes any one or both of the IEs "New C-RNTI" and "New U-RNTI"; or
- includes the IE "Downlink counter synchronisation info" and the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the URA UPDATE CONFIRM message:

- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New U-RNTI"; and

does not include the IE "New C-RNTI":

the UE shall:

1> transmit no response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

- 1> if the IE "Downlink counter synchronisation info" was included in the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:
 - 2> when RLC has confirmed the successful transmission of the response message:
 - 3> if the variable PDCP_SN_INFO is empty:
 - 4> configure the RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "continue".
 - 3> else:
 - 4> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "continue";
 - 4> configure the RLC entity for UM and AM radio bearers for which the IE " PDCP SN Info" is not included to "continue".
 - 3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;
 - 3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;
 - 3> if the IE "PDCP context relocation info" is not present:
 - > re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].
 - 3> if the IE "PDCP context relocation info" is present:
 - 4> perform the actions as specified in subclause 8.6.4.13.
- 1> if the variable PDCP_SN_INFO is empty:
 - 2> if the CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 3> when RLC has confirmed the successful transmission of the response message:
 - 4> continue with the remainder of the procedure.
 - 2> if the CELL UPDATE CONFIRM or URA UPDATE CONFIRM message did not contain the IE "Ciphering mode info":
 - 3> when RLC has been requested to transmit the response message,
 - 4> continue with the remainder of the procedure.
- 1> if the variable PDCP_SN_INFO is non-empty:
 - 2> when RLC has confirmed the successful transmission of the response message:
 - 3> for each radio bearer in the variable PDCP_SN_INFO:
 - 4> if the IE "RB started" in the variable ESTABLISHED RABS is set to "started":

- 5> configure the RLC entity for that radio bearer to "continue".
- 3> continue with the remainder of the procedure.

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted in CELL_FACH state, and the UE shall:

- 1> when RLC has confirmed the successful transmission of the response message:
 - 2> if the IE "Downlink counter synchronisation info" was included in the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:
 - 3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;
 - 3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;
 - 3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].
 - 2> for each radio bearer in the variable PDCP_SN_INFO:
 - 3> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - 4> configure the RLC entity for that radio bearer to "continue".
 - 2> enter the new state (CELL_PCH or URA_PCH, respectively).
- 1> continue with the remainder of the procedure.

8.3.1.7a Physical channel failure

If the received CELL UPDATE CONFIRM message would cause the UE to transit to CELL_DCH state:

- 1> if the UE failed to establish the physical channel(s) indicated in the received CELL UPDATE CONFIRM message according to the criteria defined in subclause 8.5.4 are not fulfilled;
- 1> if the received CELL UPDATE CONFIRM message does not contain dedicated physical channels; or
- 1> for 3.84 Mcps TDD or 7.68 Mcps TDD, if the received CELL UPDATE CONFIRM does not contain physical channels to which DCCH(s) are mapped:

the UE shall:

- 1> if, caused by the received CELL UPDATE CONFIRM message
 - 2> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 2> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 3> abort the ongoing integrity and/or ciphering reconfiguration;
 - 3> if the received CELL UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 4> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 4> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
 - 3> if the received CELL UPDATE CONFIRM message contained the IE "Integrity protection mode info":
 - 4> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and

- 4> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 1> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message:
 - 2> set the IE "failure cause" to "physical channel failure";
 - 2> set the variable ORDERED RECONFIGURATION to FALSE.
- 1> if V302 is equal to or smaller than N302:
 - 2> select a suitable UTRA cell according to [4];
 - 2> set the contents of the CELL UPDATE message according to subclause 8.3.1.3, except for the IE "Cell update cause" which shall be set to "Radio link failure";
 - 2> submit the CELL UPDATE message for transmission on the uplink CCCH;
 - 2> increment counter V302;
 - 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> in case of a cell update procedure:
 - 3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> set the variable CELL_UPDATE_STARTED to FALSE;
 - 2> enter idle mode.

8.3.1.8 Unsupported configuration by the UE

If the UE does not support the configuration in the CELL UPDATE CONFIRM message and/or the variable UNSUPPORTED_CONFIGURATION is set to TRUE, the UE shall:

- 1> if V302 is equal to or smaller than N302, the UE shall:
 - 2> if, caused by the received CELL UPDATE CONFIRM message
 - 3> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 3> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> abort the ongoing integrity and/or ciphering reconfiguration;
 - 4> if the received CELL UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 5> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 5> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.

- 4> if the received CELL UPDATE CONFIRM message contained the IE "Integrity protection mode info":
 - 5> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 5> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 2> if the variable ORDERED_RECONFIGURATION is set to TRUE due to the received CELL UPDATE CONFIRM message in case of a cell update procedure:
 - 3> set the variable ORDERED_RECONFIGURATION to FALSE.
- 2> set the variable FAILURE_INDICATOR to TRUE;
- 2> set the variable FAILURE_CAUSE to "Unsupported configuration";
- 2> set the content of the CELL UPDATE message according to subclause 8.3.1.3;
- 2> submit the CELL UPDATE message for transmission on the uplink CCCH;
- 2> increment counter V302;
- 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302, the UE shall:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;
 - 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> set the variable CELL UPDATE STARTED to FALSE;
 - 2> enter idle mode;
 - 2> Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - 2> and the procedure ends.

8.3.1.9 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE, the UE shall:

- 1> if V302 is equal to or smaller than N302:
 - 2> if, caused by the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message
 - 3> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 3> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> abort the ongoing integrity and/or ciphering reconfiguration;

- 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 5> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 5> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
- 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Integrity protection mode info";
 - 5> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 5> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 2> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:
 - 3> set the variable ORDERED_RECONFIGURATION to FALSE.
- 2> in case of a cell update procedure:
 - 3> set the variable FAILURE_INDICATOR to TRUE;
 - 3> set the variable FAILURE_CAUSE to "Invalid configuration";
 - 3> set the contents of the CELL UPDATE message according to subclause 8.3.1.3;
 - 3> submit the CELL UPDATE message for transmission on the uplink CCCH.
- 2> in case of a URA update procedure:
 - 3> set the contents of the URA UPDATE message according to subclause 8.3.1.3;
 - 3> submit the URA UPDATE message for transmission on the uplink CCCH.
- 2> increment counter V302;
- 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;
 - 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> set the variable CELL_UPDATE_STARTED to FALSE;
 - 2> enter idle mode:
 - 2> Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8 5 2.
 - 2> the procedure ends.

8.3.1.9a Incompatible simultaneous reconfiguration

In case of a cell update procedure and if the received CELL UPDATE CONFIRM message

- includes the IE "RB information to release list", and/or the IE "RB information to reconfigure list", and/or the IE "RB information to be affected list", and/or
- includes "Transport channel information elements"; and/or
- includes "Physical channel information elements"; and
- the variable ORDERED_RECONFIGURATION is set to TRUE because of an ongoing Reconfiguration procedure;

or

If the variable INCOMPATIBLE_SECURITY_RECONFIGURATION is set to TRUE due to the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:

the UE shall:

- 1> if V302 is equal to or smaller than N302:
 - 2> if, caused by the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message
 - 3> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 3> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> abort the ongoing integrity and/or ciphering reconfiguration;
 - 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 5> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 5> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
 - 4> if the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message contained the IE "Integrity protection mode info":
 - 5> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 5> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
 - 2> if the variable ORDERED_RECONFIGURATION is set to TRUE due to the received CELL UPDATE CONFIRM message in case of a cell update procedure:
 - 3> set the variable ORDERED_RECONFIGURATION to FALSE.
 - 2> set the variable FAILURE_INDICATOR to TRUE;
 - 2> set the variable FAILURE_CAUSE to "Incompatible simultaneous reconfiguration";
 - 2> set the content of the CELL UPDATE message according to subclause 8.3.1.3;
 - 2> submit the CELL UPDATE message for transmission on the uplink CCCH;
 - 2> increment counter V302;
 - 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

- 2> clear the variable PDCP_SN_INFO;
- 2> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to FALSE;
- 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
- 2> release all its radio resources:
- 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 2> clear the variable ESTABLISHED_RABS;
- 2> set the variable CELL_UPDATE_STARTED to FALSE;
- 2> enter idle mode;
- 2> Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
- 2> the procedure ends.

8.3.1.9b Security reconfiguration during Cell update procedure

If:

- the variable CELL_UPDATE_STARTED is set to TRUE; and
- the UE receives a SECURITY MODE COMMAND message:

the UE shall

1> ignore the received SECURITY MODE COMMAND and continue with any ongoing processes and procedures as if the SECURITY MODE COMMAND message has not been received.

8.3.1.10 Confirmation error of URA ID list

If the URA UPDATE CONFIRM message causes a confirmation error of URA identity list as specified in subclause 8.6.2.1 the UE shall:

- 1> check the value of V302; and
- 1> if V302 is smaller or equal than N302:
 - 2> if, caused by the received URA UPDATE CONFIRM message
 - 3> the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE; and/or
 - 3> the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> abort the ongoing integrity and/or ciphering reconfiguration;
 - 4> if the received URA UPDATE CONFIRM message contained the IE "Ciphering mode info":
 - 5> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and
 - 5> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
 - 4> if the received URA UPDATE CONFIRM message contained the IE "Integrity protection mode info"
 - 5> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 5> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.

- 2> set the IEs in the URA UPDATE message according to subclause 8.3.1.3;
- 2> submit the URA UPDATE message for transmission on the uplink CCCH;
- 2> increment counter V302:
- 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302:
 - 2> release all its radio resources;
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> set the variable CELL_UPDATE_STARTED to FALSE;
 - 2> enter idle mode;
 - 2> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - 2> the procedure ends.

8.3.1.11 Invalid CELL UPDATE CONFIRM/URA UPDATE CONFIRM message

If the UE receives an CELL UPDATE CONFIRM/URA UPDATE CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- 1> If V302 is equal to or smaller than N302, the UE shall:
 - 2> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;
 - 2> in case of a cell update procedure:
 - 3> set the contents of the CELL UPDATE message according to subclause 8.3.1.3;
 - 3> submit the CELL UPDATE message for transmission on the uplink CCCH.
 - 2> in case of a URA update procedure:
 - 3> set the contents of the URA UPDATE message according to subclause 8.3.1.3;
 - 3> submit the URA UPDATE message for transmission on the uplink CCCH.
 - 2> increment counter V302;
 - 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302, the UE shall:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> in case of a cell update procedure:
 - 3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.

- 2> in case of a URA update procedure:
 - 3> clear the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
- 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 2> clear the variable ESTABLISHED_RABS;
- 2> set the variable CELL_UPDATE_STARTED to FALSE;
- 2> release all its radio resources;
- 2> enter idle mode;
- 2> Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
- 2> the procedure ends.

8.3.1.12 T302 expiry or cell reselection

If any or several of the following conditions are true:

- expiry of timer T302;
- reselection to another UTRA cell (including the previously serving cell) before completion of the cell update or URA update procedure;

the UE shall:

- 1> stop T302 if it is running;
- 1> if the UE was in CELL_DCH state prior to the initiation of the procedure; and
 - 2> if timers T314 and T315 have elapsed while T302 was running:
 - 3> enter idle mode.
 - 3> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers. Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2.
 - 3> and the procedure ends.
 - 2> if timer T314 has elapsed while T302 was running and,
 - 3> if "T314 expired" in the variable RB_TIMER_INDICATOR is set to FALSE and
 - 3> if T315 is still running:
 - 4> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";
 - 4> indicate release of those radio access bearers to upper layers;
 - 4> delete all information about those radio access bearers from the variable ESTABLISHED_RABS;
 - 4> set "T314 expired" in the variable RB TIMER INDICATOR to TRUE.
 - 2> if timer T315 has elapsed while T302 was running and,

- 3> if "T315 expired" in the variable RB_TIMER_INDICATOR is set to FALSE and,
- 3> if T314 is still running:
 - 4> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315";
 - 4> indicate release of those radio access bearers to upper layers;
 - 4> delete all information about those radio access bearers from the variable ESTABLISHED_RABS;
 - 4> set "T315 expired" in the variable RB_TIMER_INDICATOR to TRUE.
- 2> if timers T314 and T315 are not running:
 - 3> enter idle mode;
 - 3> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers. Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - 3> and the procedure ends.
- 1> check whether it is still in "in service area" (see subclause 8.5.5.2);
- 1> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:
 - 2> set the variable ORDERED_RECONFIGURATION to FALSE.
- 1> in case of a cell update procedure:
 - 2> clear any entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.
- 1> in case of a URA update procedure:
 - 2> clear any entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

- 1> if V302 is equal to or smaller than N302, the UE shall:
 - 2> if the UE performed cell re-selection:
 - 3> delete its C-RNTI.
 - 2> in case of a cell update procedure:
 - 3> set the contents of the CELL UPDATE message according to subclauses 8.3.1.3 and 8.5.10;
 - 3> if a CELL UPDATE CONFIRM message was received and caused the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE and/or the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:
 - 4> if the IE "Downlink counter synchronisation info" was included in the received CELL UPDATE CONFIRM message:
 - 5> apply the new security (integrity protection) configuration received in the CELL UPDATE CONFIRM on the CELL UPDATE message.
 - 3> submit the CELL UPDATE message for transmission on the uplink CCCH.
 - 2> in case of a URA update procedure:
 - 3> set the contents of the URA UPDATE message according to subclauses 8.3.1.3 and 8.5.10;

- 3> if a URA UPDATE CONFIRM message was received and caused the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE and/or the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:
 - 4> if the IE "Downlink counter synchronisation info" was included in the received URA UPDATE CONFIRM message:
 - 5> apply the new security (integrity protection) configuration received in the URA UPDATE CONFIRM on the URA UPDATE message.
- 3> submit the URA UPDATE message for transmission on the uplink CCCH.
- 2> increment counter V302;
- 2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- 1> if V302 is greater than N302, the UE shall:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;
 - 2> in case of a cell update procedure:
 - 3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> in case of a URA update procedure:
 - 3> clear the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.
 - 2> release all its radio resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS;
 - 2> set the variable CELL_UPDATE_STARTED to FALSE;
 - 2> enter idle mode;
 - 2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - 2> and the procedure ends.

If the UE detects "out of service area", it shall:

1> act according to subclause 7.2.2.

8.3.1.13 T314 expiry

Upon expiry of timer T314 the UE shall:

- 1> if timer T302 is running:
 - 2> continue awaiting response message from UTRAN.
- 1> if timer T302 is not running and timer T315 is running:

- 2> set IE "T314 expired" in variable RB_TIMER_INDICATOR to TRUE;
- 2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";
- 2> indicate release of those radio access bearers to upper layers;
- 2> delete all information about those radio access bearers from the variable ESTABLISHED RABS.
- 1> if timers T302 and T315 are not running:
 - 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;
 - 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - 2> release all its radio resources:
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED RABS;
 - 2> set the variable CELL_UPDATE_STARTED to FALSE;
 - 2> enter idle mode;
 - 2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - 2> and the procedure ends.

8.3.1.14 T315 expiry

Upon expiry of timer T315 the UE shall:

- 1> if timer T302 is running:
 - 2> continue awaiting response message from UTRAN.
- 1> if timer T302 is not running and timer T314 is running:
 - 2> set IE "T315 expired" in variable RB_TIMER_INDICATOR to TRUE;
 - 2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "use T315";
 - 2> indicate release of those radio access bearers to upper layers;
 - 2> delete all information about those radio access bearers from the variable ESTABLISHED_RABS.
- 1> if timers T302 and T314 are not running:
 - 2> clear the variable RB UPLINK CIPHERING ACTIVATION TIME INFO;
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
 - 2> clear the variable PDCP_SN_INFO;

- 2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
- 2> release all its radio resources;
- 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
- 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
- 2> clear the variable ESTABLISHED_RABS;
- 2> set the variable CELL_UPDATE_STARTED to FALSE;
- 2> enter idle mode;
- 2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
- 2> and the procedure ends.

8.3.1.15 Reception of the UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN

See subclause 8.3.3.4.

8.3.2 URA update

See subclause 8.3.1.

8.3.3 UTRAN mobility information

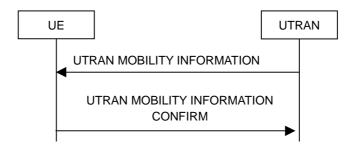


Figure 8.3.3-1: UTRAN mobility information procedure, normal flow

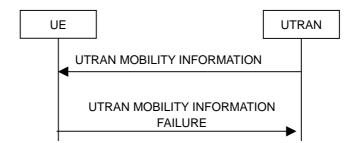


Figure 8.3.3-2: UTRAN mobility information procedure, failure case

8.3.3.1 General

The purpose of this procedure is to allocate any one or a combination of the following to a UE in connected mode:

- a new C-RNTI;

- a new U-RNTI;
- other mobility related information.

8.3.3.2 Initiation

To initiate the procedure UTRAN transmits a UTRAN MOBILITY INFORMATION message to the UE on the downlink DCCH using AM or UM RLC. In case of SRNS relocation, the message is sent using UM RLC only.

8.3.3.3 Reception of UTRAN MOBILITY INFORMATION message by the UE

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

- 1> act on received information elements as specified in subclause 8.6;
- 1> if the IE "UE Timers and constants in connected mode" is present:
 - 2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS AND CONSTANTS, replacing any previously stored value for each timer and constant; and
 - 2> for each updated timer value:
 - 3> start using the new value next time the timer is started;
- NOTE: If a new value of timer T305 is included in the IE "UE Timers and constants in connected mode", and the old value of timer T305 is "infinity", the UE will not use the new value of the timer T305 until the next cell reselection.
 - 2> for each updated constant value:
 - 3> start using the new value directly;
- 1> if the IE "CN domain specific DRX cycle length coefficient" is present:
 - 2> store the value of the IE "CN domain specific DRX cycle length coefficient" for that CN domain, replacing any previously stored value; and
 - 2> use the value to determine the connected mode paging occasions according to [4].
- 1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> if the UTRAN MOBILITY INFORMATION message contained the IE "Ciphering mode info" or contained the IE "Integrity protection mode info":
 - 2> set the IE "Status" in the variable SECURITY_MODIFICATION for all the CN domains in the variable SECURITY_MODIFICATION to "Affected".
- 1> if the variable PDCP_SN_INFO is non-empty:
 - 2> include the IE "RB with PDCP information list" in the UTRAN MOBILITY INFORMATION CONFIRM message and set it to the value of the variable PDCP_SN_INFO.
- 1> if the received UTRAN MOBILITY INFORMATION message included the IE "Downlink counter synchronisation info":
 - 2> if the variable PDCP_SN_INFO is empty:
 - 3> configure the corresponding RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "stop".
 - 2> else:

- 3> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "stop";
- 3> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "stop".
- 2> re-establish the RLC entity for RB2;
- 2> for the downlink and the uplink, apply the ciphering configuration as follows:
 - 3> if the received re-configuation message included the IE "Ciphering Mode Info":
 - 4> use the ciphering configuration in the received message when transmitting the response message.
 - 3> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached:
 - 4> if the previous SECURITY MODE COMMAND was received due to new keys being received:
 - 5> consider the new ciphering configuration to include the received new keys;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 as indicated in subclause 8.1.12.3.1.
 - 4> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 5> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN;
 - 5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 to the most recently transmitted IE "START list" or IE "START" for the LATEST_CONFIGURED_CN_DOMAIN at the reception of the previous SECURITY MODE COMMAND.
 - 4> apply the new ciphering configuration immediately following RLC re-establishment.
 - 3> else:
 - 4> continue using the current ciphering configuration.
- 2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);
- 2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;
- 2> calculate the START value according to subclause 8.5.9;
- 2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the UTRAN MOBILITY INFORMATION CONFIRM message.
- 1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;
- 1> if the IE "Integrity protection mode info" was present in the UTRAN MOBILITY INFORMATION message:
 - 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted UTRAN MOBILITY INFORMATION CONFIRM message.
- 1> if the IE "Downlink counter synchronisation info" was included in the received UTRAN MOBILITY INFORMATION message:
 - 2> when RLC has confirmed the successful transmission of the response message:
 - 3> if the variable PDCP_SN_INFO is empty:

- 4> configure the RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "continue".
- 3> else:
 - 4> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "continue";
 - 4> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "continue".
- 3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;
- 3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;
- 3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;
- 3> if the IE "PDCP context relocation info" is not present:
 - 4> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].
- 3> if the IE "PDCP context relocation info" is present:
 - 4> perform the actions as specified in subclause 8.6.4.13.
- 1> if the variable PDCP_SN_INFO is empty; and
 - 2> if the UTRAN MOBILITY INFORMATION message contained the IE "Ciphering mode info":
 - 3> when RLC has confirmed the successful transmission of the UTRAN MOBILITY INFORMATION CONFIRM message:
 - 4> perform the actions below:
 - 2> if the UTRAN MOBILITY INFORMATION message did not contain the IE "Ciphering mode info":
 - 3> when RLC has been requested to transmit the UTRAN MOBILITY INFORMATION CONFIRM message:
 - 4> perform the actions below.
- 1> if the variable PDCP_SN_INFO is non-empty:
 - 2> when RLC has confirmed the successful transmission of the UTRAN MOBILITY INFORMATION CONFIRM message:
 - 3> for each radio bearer in the variable PDCP_SN_INFO:
 - 4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - 5> configure the RLC entity for that radio bearer to "continue".
 - 3> clear the variable PDCP_SN_INFO; and
 - 3> perform the actions below.

The UE shall:

- 1> if the UTRAN MOBILITY INFORMATION message contained the IE "Ciphering mode info":
 - 2> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;
 - 2> set the IE "Reconfiguration" in the variable CIPHERING STATUS to FALSE; and

- 2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.
- 1> if the UTRAN MOBILITY INFORMATION message contained the IE "Integrity protection mode info":
 - 2> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;
 - 2> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and
 - 2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.
- 1> clear the variable SECURITY_MODIFICATION.

The procedure ends.

8.3.3.4 Reception of an UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN

When the network receives UTRAN MOBILITY INFORMATION CONFIRM message, UTRAN may delete any old U-RNTI. The procedure ends.

8.3.3.5 Cell re-selection

If the UE performs cell re-selection, the UE shall:

- 1> initiate a cell update procedure according to subclause 8.3.1;
- 1> if the UTRAN MOBILITY INFORMATION message contains the IE "New C-RNTI"; and
- 1> if the UE has not yet submitted the UTRAN MOBILITY INFORMATION CONFIRM message to lower layers for transmission; and
- 1> if the IE "Downlink counter synchronisation info" was not included in the received UTRAN MOBILITY INFORMATION message:
 - 2> transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;
 - 2> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry.
 - 2> set the IE "failure cause" to the cause value "cell update occurred";
 - 2> when the UTRAN MOBILITY INFORMATION FAILURE message has been submitted to lower layers for transmission:
 - 3> continue with any ongoing processes and procedures as if the invalid UTRAN MOBILITY INFORMATION message has not been received and the procedure ends.

1> otherwise:

- 2> if a UTRAN MOBILITY INFORMATION message was received and caused the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE and/or the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE; and
- 2> if the IE "Downlink counter synchronisation info" was included in the received UTRAN MOBILITY INFORMATION message:
 - 3> apply the new security (integrity protection) configuration received in the UTRAN MOBILITY INFORMATION message on the CELL UPDATE message to be transmitted.
- 2> continue the procedure normally.

8.3.3.5a Incompatible simultaneous security reconfiguration

If the variable INCOMPATIBLE_SECURITY_RECONFIGURATION becomes set to TRUE of the received UTRAN MOBILITY INFORMATION message, the UE shall:

- 1> transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "incompatible simultaneous reconfiguration";
- 1> when the UTRAN MOBILITY INFORMATION FAILURE message has been delivered to lower layers for transmission:
 - 2> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to FALSE;
 - 2> continue with any ongoing processes and procedures as if the UTRAN MOBILITY INFORMATION message has not been received;
 - 2> and the procedure ends.

8.3.3.6 Invalid UTRAN MOBILITY INFORMATION message

If the UTRAN MOBILITY INFORMATION message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Rejected transactions" in the variable TRANSACTIONS, and;
- 1> clear that entry.
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the UTRAN MOBILITY INFORMATION FAILURE message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid UTRAN MOBILITY INFORMATION message has not been received;
 - 2> and the procedure ends.

8.3.4 Active set update



Figure 8.3.4-1: Active Set Update procedure, successful case

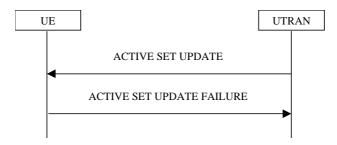


Figure 8.3.4-2: Active Set Update procedure, failure case

8.3.4.1 General

The purpose of the active set update procedure is to update the active set of the connection between the UE and UTRAN. This procedure shall be used in CELL_DCH state. The UE should keep on using the old RLs while configuring the new RLs. Also the UE should keep the transmitter turned on during the procedure. This procedure is only used in FDD mode.

8.3.4.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH state, to make the following modifications of the active set of the connection:

- a) Radio link addition:
- b) Radio link removal;
- c) Combined radio link addition and removal;
- d) Addition of a radio link to the E-DCH active set;
- e) Removal of a radio link from the E-DCH active set.

In case a) and c), UTRAN should:

1> prepare new additional radio link(s) in the UTRAN prior to the command to the UE.

In all cases, UTRAN should:

- 1> send an ACTIVE SET UPDATE message on downlink DCCH using AM or UM RLC;
- 1> create active sets that contain at least one common radio link across a DPCH or F-DPCH frame boundary as the result of one or multiple (parallel) active set update procedures.

UTRAN should include the following information:

- 1> IE "Radio Link Addition Information": Downlink DPCH information and other optional parameters relevant for the radio links to be added along with the IE "Primary CPICH info" used for the reference ID to indicate which radio link to add. This IE is needed in cases a) and c) listed above;
- 1> IE "Radio Link Removal Information": IE "Primary CPICH info" used for the reference ID to indicate which radio link to remove. This IE is needed in cases b) and c) listed above;
- 1> IE "E-DCH reconfiguration information": IE "Primary CPICH info" used for the reference ID along with the IE "E-HICH information" to indicate which radio link to add to the E-DCH active set. This IE is needed in case d) above, when the RL added to the E-DCH active set is already in the DCH active set;
- 1> IE "E-DCH reconfiguration information": IE "Primary CPICH info" used for the reference ID along with the IE "E-HICH release indicator" to indicate which radio link to remove from the E-DCH active set. This IE is needed in case e) above, when the RL removed from the E-DCH active set remains in the DCH active set.

8.3.4.3 Reception of an ACTIVE SET UPDATE message by the UE

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following.

The UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

The UE shall:

- 1> first add the RLs indicated in the IE "Radio Link Addition Information";
- 1> remove the RLs indicated in the IE "Radio Link Removal Information". If the UE active set is full or becomes full, an RL, which is included in the IE "Radio Link Removal Information" for removal, shall be removed before adding RL, which is included in the IE "Radio Link Addition Information" for addition;
- 1> perform the physical layer synchronisation procedure B as specified in [29];
- 1> if the IE "E-HICH information" is included:
 - 2> store this E-HICH configuration for the concerning radio link.
- 1> if the IE "E-HICH information" is included:
 - 2> store this E-RGCH configuration for the concerning radio link, if included.
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28;
- 1> if the radio link currently considered to be the serving HS-DSCH radio link is indicated in the IE "Radio Link Removal Information":
 - 2> no longer consider any radio link as the serving HS-DSCH radio link;
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if "Serving HS-DSCH cell information" IE is present, act on received information elements as specified in subclause 8.6:
 - 2> if the IEs " Δ_{ACK} ", " Δ_{NACK} ", and "HARQ_preamble_mode" are present, act on the received information elements:
 - 2> if the new H-RNTI and "Primary CPICH info" are included:
 - 3> consider the cell indicated in Primary CPICH as serving HS-DSCH cell and no longer consider any other radio link as serving HS-DSCH cell.
 - 2> if the IE "MAC-hs reset indicator" is included:
 - 3> reset the MAC-hs entity [15].
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if the IE "E-DCH reconfiguration information" is included:
 - 2> if the IE "E-DCH RL Info other cells" is present:
 - 3> if the IE "E-HICH Information" is present:
 - 4> store the E-HICH and E-RGCH information (if present), contained therein, for the indicated radio link.
 - 3> if the IE "E-HICH release indicator" is present:

- 4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.
- 3> if the IE "E-RGCH release indicator" is set present:
 - 4> delete the stored E-RGCH configuration for this RL.
- 2> if the IE "E-DCH RL Info new serving cell" is present:
 - 3> consider the cell indicated in "Primary CPICH info" as serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link;
 - 3> store the E-HICH and E-RGCH information (if present), contained therein, for the new serving E-DCH radio link;
 - 3> if the IE "E-RGCH release indicator" is present:
 - 4> delete the stored E-RGCH configuration for this RL.
 - 3> store the newly received E-AGCH configuration.
- 2> if the IEs "E-DPCCH/DPCCH power offset" and/or "Reference E-TFCI PO" and/or "Power offset for scheduling info" are present, act on the received information elements.
- 2> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:
 - 3> if the IE "New Primary E-RNTI" is not included:
 - 4> clear the Primary E-RNTI stored in the variable E_RNTI.
 - 3> if the IE "New Secondary E-RNTI" is not included:
 - 4> clear the Secondary E-RNTI stored in the variable E_RNTI.
- 1> if the radio link currently considered to be the serving E-DCH radio link is indicated in the IE "Radio Link Removal Information":
 - 2> no longer consider any radio link as the serving E-DCH radio link.
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.
- 1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronisation B, as specified in [29];
- 1> the procedure ends on the UE side.

8.3.4.4 Unsupported configuration in the UE

If UTRAN instructs the UE to use a configuration that it does not support, the UE shall:

- 1> keep the active set as it was before the ACTIVE SET UPDATE message was received;
- 1> transmit an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to "configuration unsupported";

- 1> when the ACTIVE SET UPDATE FAILURE message has been submitted to lower layers for transmission:
 - 2> the procedure ends on the UE side.

8.3.4.5 Invalid configuration

If any of the following conditions are valid:

- a radio link indicated by the IE "Downlink DPCH info for each RL" in the IE "Radio link addition information" has a different spreading factor than the spreading factor for the radio links in the active set that will be established at the time indicated by the IE "Activation time"; and/or
- a radio link in the IE "Radio link addition information" is also present in the IE "Radio Link Removal Information"; and/or
- the IE "Radio Link Removal Information" contains all the radio links which are part of or will be part of the active set at the time indicated by the IE "Activation time"; and/or
- the IE "TX Diversity Mode" is not set to "none" and it indicates a diversity mode that is different from the one currently used (<STTD> or <closed loop mode1>) in all or part of the active set; and/or
- a radio link indicated by the IE "Radio Link Removal Information" does not exist in the active set; and/or
- after the removal of all radio links indicated by the IE "Radio Link Removal Information" and the addition of all radio links indicated by the IE "Radio Link Addition Information" the active set would contain more than the maximum allowed number of radio links; and/or
- after the addition of all radio links indicated by the IE "Radio Link Addition Information" the active set would contain radio links indicated by the IE "Downlink DPCH info for each RL" and radio links indicated by the IE "Downlink F-DPCH info for each RL"; and/or
- the variable INVALID_CONFIGURATION is set to TRUE:

the UE shall:

- 1> keep the active set as it was before the ACTIVE SET UPDATE message was received;
- 1> transmit an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to "Invalid configuration";
- 1> When the ACTIVE SET UPDATE FAILURE message has been submitted to lower layers for transmission:
 - 2> the procedure ends on the UE side.

If the following condition is valid:

- the active set update procedure results in active sets that do not contain at least one common radio link before and after a DPCH or F-DPCH frame boundary:

the UE behaviour is not specified.

8.3.4.5a Void

8.3.4.5b Incompatible simultaneous reconfiguration

If the variable ORDERED_RECONFIGURATION is set to TRUE, the UE may:

- 1> if the activation time for the procedure that has set variable ORDERED_RECONFIGURATION and the activation time for the Active Set Update procedure are within a time window of 5 frames:
 - 2> transmit an ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;
 - 2> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "failure cause" to the cause value "incompatible simultaneous reconfiguration";
 - 2> when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:
 - 3> continue with any ongoing processes and procedures as if the ACTIVE SET UPDATE message has not been received.
 - 3> and the procedure ends.

8.3.4.6 Reception of the ACTIVE SET UPDATE COMPLETE message by the UTRAN

When the UTRAN has received the ACTIVE SET UPDATE COMPLETE message,

- 1> the UTRAN may remove radio link(s) that are indicated to remove to the UE in case b) and c); and
- 1> the procedure ends on the UTRAN side.

8.3.4.7 Reception of the ACTIVE SET UPDATE FAILURE message by the UTRAN

When the UTRAN has received the ACTIVE SET UPDATE FAILURE message, the UTRAN may delete radio links that were included in the IE "Radio Link Addition Information" for addition. The procedure ends on the UTRAN side.

8.3.4.8 Invalid ACTIVE SET UPDATE message

If the ACTIVE SET UPDATE message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit a ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid ACTIVE SET UPDATE message has not been received;
 - 2> and the procedure ends.

8.3.4.9 Reception of an ACTIVE SET UPDATE message in wrong state

If the UE is in another state than CELL_DCH state upon reception of the ACTIVE SET UPDATE message, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit a ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;
- 1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state":
- 1> when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the ACTIVE SET UPDATE message has not been received;
 - 2> and the procedure ends.

8.3.5 Hard handover

When performing hard handover with change of frequency, the UE shall:

1> stop all intra-frequency and inter-frequency measurement reporting on the cells listed in the variable CELL_INFO_LIST. Each stopped measurement is restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

8.3.5.1 Timing re-initialised hard handover

8.3.5.1.1 General

The purpose of the timing re-initialised hard handover procedure is to remove all the RL(s) in the active set and establish new RL(s) along with a change in the CFN in the UE according to the SFN of the target cell.(see subclause 8.5.15).

NOTE: During the hard-handover procedure, the UE will align the timing of the uplink transmission as specified in [26].

This procedure is initiated when UTRAN does not know the target SFN timing before hard handover.

8.3.5.1.2 Initiation

Timing re-initialised hard handover initiated by the UTRAN is normally performed by using the procedure "Physical channel reconfiguration" (subclause 8.2.6), but may also be performed by using either one of the following procedures:

- "radio bearer establishment" (subclause 8.2.1);
- "Radio bearer reconfiguration" (subclause 8.2.2);
- "Radio bearer release" (subclause 8.2.3); or
- "Transport channel reconfiguration" (subclause 8.2.4).

In this case of a timing re-initialised hard handover, UTRAN should include the IE "Default DPCH Offset Value" and:

- 1> in FDD mode:
 - 2> set "Default DPCH Offset Value" and "DPCH frame offset" respecting the following relation

(Default DPCH Offset Value) mod 38400 = DPCH frame offset_i

3> where *j* indicates the first radio link listed in the message and the IE values used are the Actual Values of the IEs as defined in clause 11.

If the IE "Default DPCH Offset Value" is included, the UE shall:

- 1> in FDD mode:
 - 2> if the above relation between "Default DPCH Offset Value" and "DPCH frame offset" is not respected:
 - 3> set the variable INVALID_CONFIGURATION to true.

If the IE "Default DPCH Offset Value" is not included, the UE shall:

1> set the variable INVALID_CONFIGURATION to true.

8.3.5.2 Timing-maintained hard handover

8.3.5.2.1 General

The purpose of the Timing-maintained hard handover procedure is to remove all the RL(s) in the active set and establish new RL(s) while maintaining the CFN in the UE.

NOTE: During the hard-handover procedure, the UE will align the timing of the uplink transmission as specified in [26].

This procedure can be initiated only if UTRAN knows the target SFN timing before hard handover. The target SFN timing can be known by UTRAN in the following 2 cases:

- UE reads SFN when measuring "Cell synchronisation information" and sends it to the UTRAN in MEASUREMENT REPORT message.
- UTRAN internally knows the time difference between the cells.

8.3.5.2.2 Initiation

Timing-maintained hard handover initiated by the network is normally performed by using the procedure "Physical channel reconfiguration" (subclause 8.2.6), but may also be performed by using either one of the following procedures:

- "radio bearer establishment" (subclause 8.2.1);
- "Radio bearer reconfiguration" (subclause 8.2.2);
- "Radio bearer release" (subclause 8.2.3); or
- "Transport channel reconfiguration" (subclause 8.2.4).

In this case of a timing maintained hard handover procedure the UTRAN should not include the IE "Default DPCH Offset Value".

If the IE "Default DPCH Offset Value" is included, the UE shall:

1> ignore the IE "Default DPCH Offset Value".

8.3.6 Inter-RAT handover to UTRAN

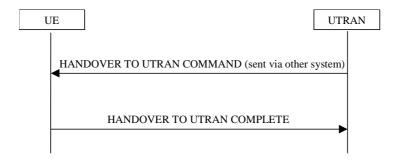


Figure 8.3.6-1: Inter-RAT handover to UTRAN, successful case

8.3.6.1 General

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and another radio access technology (e.g. GSM) to UTRAN.

8.3.6.2 Initiation

The procedure is initiated when a radio access technology other than UTRAN, e.g. GSM, using radio access technology-specific procedures, orders the UE to make a handover to UTRAN.

A HANDOVER TO UTRAN COMMAND message is sent to the UE via the radio access technology from which inter-RAT handover is performed.

In case UTRAN decides to uses a predefined or default radio configuration that is stored in the UE, it should include the following information in the HANDOVER TO UTRAN COMMAND message.

- the IE "New U-RNTI" to be assigned;
- the IE "Predefined configuration identity", to indicate which pre-defined configuration of RB, transport channel and physical channel parameters shall be used; or
- the IE "Default configuration mode" and IE "Default configuration identity", to indicate which default configuration of RB, transport channel and physical channel parameters shall be used;
- PhyCH information elements.
- NOTE 1: When using a predefined or default configuration during handover to UTRAN, UTRAN can only assign values of IEs "New U-RNTI" and "scrambling code" that are within the special subranges defined exclusively for this procedure. UTRAN may re- assign other values after completion of the handover procedure.
- NOTE 2: When using a predefined or default configuration during handover to UTRAN, fewer IEs are signalled; when using this signalling option some parameters e.g. concerning compressed mode, DSCH can not be configured. In this case, the corresponding functionality can not be activated immediately.
- NOTE 3: When using a predefined or default configuration, the HANDOVER TO UTRAN COMMAND should not include more than one radio link. If UTRAN includes more than one radio link in the HANDOVER TO UTRAN COMMAND using a predefined or default configuration, the UE behaviour is unspecified.

In case UTRAN does not use a predefined radio configuration that is stored in the UE, it should include the following information in the HANDOVER TO UTRAN COMMAND message.

- the IE "New U-RNTI" to be assigned;
- the complete set of RB, TrCH and PhyCH information elements to be used.

8.3.6.3 Reception of HANDOVER TO UTRAN COMMAND message by the UE

The UE shall be able to receive a HANDOVER TO UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target UTRAN cell and/or frequency.

The UE shall act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following.

The UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

The UE shall:

- 1> store a U-RNTI value (32 bits), which is derived by the IEs "SRNC identity" (12 bits) and "S-RNTI 2" (10 bits) included in IE "U-RNTI-short". In order to produce a full size U-RNTI value, a full size "S-RNTI" (20 bits) shall be derived by padding the IE "S-RNTI 2" with 10 zero bits in the most significant positions; and
- 1> initialise the variable ESTABLISHED_SIGNALLING_CONNECTIONS with the signalling connections that remains after the handover according to the specifications of the source RAT;
- 1> initialise the variable UE_CAPABILITIES_TRANSFERRED with the UE capabilities that have been transferred to the network up to the point prior to the handover, if any;
- 1> initialise the variable TIMERS_AND_CONSTANTS to the default values and start to use those timer and constants values;
- 1> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Predefined configuration":
 - 2> initiate the radio bearer and transport channel configuration in accordance with the predefined parameters identified by the IE "Predefined configuration identity";
 - 2> initiate the physical channels in accordance with the predefined parameters identified by the IE "Predefined radio configuration identity" and the received physical channel information elements;
 - 2> store information about the established radio access bearers and radio bearers according to the IE "Predefined configuration identity"; and
 - 2> set the IE "RAB Info Post" in the variable ESTABLISHED_RABS and the IE "Re-establishment timer" in the IE "RAB Info" in the variable ESTABLISHED_RABS to "useT314".
- 1> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Default configuration":
 - 2> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity";
 - 2> initiate the physical channels in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity" and the received physical channel information elements;
- NOTE: IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.
 - 2> set the IE "RAB Info Post" in the variable ESTABLISHED_RABS and the IE "Re-establishment timer" in the IE "RAB Info" in the variable ESTABLISHED_RABS to "useT314".
- 1> if IE "Specification mode" is set to "Preconfiguration":
 - 2> use the following values for parameters that are neither signalled within the HANDOVER TO UTRAN COMMAND message nor included within pre-defined or default configuration:
 - 3> 0 dB for the power offset P Pilot-DPDCH bearer in FDD;
 - 3> calculate the Default DPCH Offset Value using the following formula:

3> in FDD:

Default DPCH Offset Value = (SRNTI 2 mod 600) * 512

3> in TDD:

Default DPCH Offset Value = (SRNTI 2 mod 7)

- 3> handle the above Default DPCH Offset Value as if an IE with that value was included in the message, as specified in subclause 8.6.6.21.
- 1> if IE "Specification mode" is set to "Complete specification":
 - 2> initiate the radio bearer, transport channel and physical channel configuration in accordance with the received radio bearer, transport channel and physical channel information elements.
- 1> perform an open loop estimation to determine the UL transmission power according to subclause 8.5.3;
- 1> set the IE "START" for each CN domain, in the IE "START list" in the HANDOVER TO UTRAN COMPLETE message equal to the START value for each CN domain stored in the USIM if the USIM is present, or as stored in the UE for each CN domain if the SIM is present;
- NOTE: Keys received while in another RAT are not regarded as "new" (i.e.do not trigger the actions in subclause 8.1.12.3.1) in a subsequent security mode control procedure in UTRAN, irrespective of whether the keys are already being used in the other RAT or not. If the UE has received new keys in the other RAT before handover, then the START values in the USIM (sent in the HANDOVER TO UTRAN COMPLETE message and in the INTER_RAT_HANDOVER_INFO sent to the BSS while in the other RAT) will not reflect the receipt of these new keys
 - If ciphering has been activated in the other RAT, then during the first security mode control procedure following the Inter-RAT handover to UTRAN procedure, UE activates integrity protection using the integrity key of the same key set as used in the other RAT. The term "used key set" denotes the key set that was stored on USIM/SIM at the last successfully completed RRC Security Mode Control (UTRAN), RR Cipher Mode Control procedure or GMM Authentication and Ciphering procedure (GERAN) after entering connected mode in UTRAN or GERAN.
 - If ciphering has not been activated in the other RAT, then. at a subsequent security mode control procedure in UTRAN, UE activates ciphering and/or integrity protection using the key set stored in the USIM/SIM.
- 1> set the value of "THRESHOLD" in the variable "START_THRESHOLD" to the 20 MSBs of the value stored in the USIM [50] for the maximum value of START for each CN Domain, or to the default value in [40] if the SIM is present;
- 1> if ciphering has been activated in the radio access technology from which inter- RAT handover is performed:
 - 2> for the CN domain included in the IE "CN domain identity" which is included in the IE "RAB info" of the IE "RAB information to setup", or the CS domain when these IEs are not present:
 - 3> set the variable LATEST_CONFIGURED_CN_DOMAIN to the value indicated in the IE "CN domain identity", or to the CS domain when this IE is not present;
 - 3> set the 20 MSB of the HFN component of the COUNT-C variable for all radio bearers using RLC-TM and all signalling radio bearers to the "START" value included in the IE "UE security information" in the variable "INTER_RAT_HANDOVER_INFO_TRANSFERRED";
 - 3> set the remaining LSBs of the HFN component of COUNT-C for all radio bearers using RLC-TM and all signalling radio bearers to zero;
 - 3> not increment the HFN component of COUNT-C for radio bearers using RLC-TM, i.e. keep the HFN value fixed without incrementing every CFN cycle;
 - 3> set the CFN component of the COUNT-C variable to the value of the CFN as calculated in subclause 8.5.15;
 - 3> set the IE "Status" in the variable CIPHERING_STATUS to "Started";

- 3> apply the algorithm according to IE "Ciphering Algorithm" with the ciphering key of the key set used in the other RAT prior to handover and apply ciphering immediately upon reception of the HANDOVER TO UTRAN COMMAND.
- NOTE: The term "used key set" denotes the key set that was stored on USIM/SIM at the last successfully completed RRC Security Mode Control (UTRAN) or RR Cipher Mode Control procedures (GERAN) after entering connected mode in UTRAN or GERAN.

 If ciphering has been activated in the radio access technology from which inter RAT handover is performed, UTRAN should not include the IE "Ciphering mode info" in the SECURITY MODE COMMAND message that starts Integrity protection.
- 1> if ciphering has not been activated in the radio access technology from which inter-RAT handover is performed:
 - 2> for the CN domain(s) included in the IE "CN domain identity" which is included in the IE "RAB info" of the IE "RAB information to setup", or the CS domain when these IEs are not present:
 - 3> set the IE "Status" in the variable CIPHERING_STATUS to "Not Started".

If the UE succeeds in establishing the connection to UTRAN, it shall:

- 1> if CN domain is set to CS domain only indicate to upper layers that no CN system information is available for any domain other than the CS domain;
- 1> if CN domain is set to PS domain only indicate to upper layers that no CN system information is available for any domain other than the PS domain;
- NOTE: After the handover has been completed, the UTRAN should provide the UE with the CN system information of the CN domain to which the UE has no signalling connection as soon as possible, in order not to delay access to that CN domain.
- 1> if the USIM or SIM is present:
 - 2> set the START value stored in the USIM [50] if present, and as stored in the UE if the SIM is present for any CN domain to the value "THRESHOLD" of the variable START_THRESHOLD.
- 1> if the IE "Status" in the variable CIPHERING_STATUS of a CN domain is set to "Started" and transparent mode radio bearers have been established by this procedure for that CN domain:
 - 2> include the IE "COUNT-C activation time" in the response message and specify a CFN value for this IE other than the default, "Now", that is a multiple of 8 frames (CFN mod 8 =0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted;
 - 2> at the CFN value as indicated in the response message in the IE "COUNT-C activation time" for radio bearers using RLC-TM:
 - 3> set the 20 MSB of the HFN component of the COUNT-C variable common for all transparent mode radio bearers of this CN domain to the START value as indicated in the IE "START list" of the response message for the relevant CN domain; and
 - 3> set the remaining LSBs of the HFN component of COUNT-C to zero;
 - 3> increment the HFN component of the COUNT-C variable by one even if the "COUNT-C activation time" is equal to zero;
 - 3> set the CFN component of the COUNT-C to the value of the IE "COUNT-C activation time" of the response message. The HFN component and the CFN component completely initialise the COUNT-C variable;
 - 3> step the COUNT-C variable, as normal, at each CFN value. The HFN component is no longer fixed in value but incremented at each CFN cycle.
- 1> if the IE "Status" in the variable CIPHERING_STATUS of a CN domain is set to "Not Started" and transparent mode radio bearers have been established by this procedure for that CN domain:

- 2> initialise the 20 MSB of the HFN component of COUNT-C common for all transparent mode radio bearers of this CN domain with the START value as indicated in the IE "START list" of the response message for the relevant CN domain:
- 2> set the remaining LSBs of the HFN component of COUNT-C to zero;
- 2> do not increment the COUNT-C value common for all transparent mode radio bearers for this CN domain.
- 1> transmit a HANDOVER TO UTRAN COMPLETE message on the uplink DCCH, using, if ciphering has been started, the new ciphering configuration;
- 1> when the HANDOVER TO UTRAN COMPLETE message has been submitted to lower layers for transmission:
 - 2> enter UTRA RRC connected mode in state CELL_DCH;
 - 2> initialise variables upon entering UTRA RRC connected mode as specified in subclause 13.4;
 - 2> update the variable UE_CAPABILITY_TRANSFERRED with the UE capabilities stored in the variable INTER_RAT_HANDOVER_INFO_TRANSFERRED;
 - 2> for all radio bearers using RLC-AM or RLC-UM:
 - 3> set the 20 MSB of the HFN component of the uplink and downlink COUNT-C variable to the START value indicated in the IE "START list" of the response message for the relevant CN domain; and
 - 3> set the remaining LSBs of the HFN component of COUNT-C to zero;
 - 3> increment the HFN component of the COUNT-C variable by one;
 - 3> start incrementing the COUNT-C values.
- 1> and the procedure ends.

8.3.6.4 Invalid Handover to UTRAN command message

If the UE receives a HANDOVER TO UTRAN COMMAND message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling according to the source radio access technology. The UE shall:

- 1> if allowed by the source RAT:
 - 2> transmit an RRC FAILURE INFO message to the source radio access technology; and
 - 2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> Other details may be provided in the specifications related to the source radio access technology.

NOTE: The other RAT may include the above diagnostics information in a subsequent handover request towards the same RNC.

8.3.6.4a Unsupported configuration in HANDOVER TO UTRAN COMMAND message

If the UE does not support the configuration included in the HANDOVER TO UTRAN COMMAND message, e.g., the message includes a pre-defined configuration that the UE has not stored, the UE shall:

- 1> continue the connection using the other radio access technology; and
- 1> indicate the failure to the other radio access technology.

8.3.6.5 UE fails to perform handover

If the UE does not succeed in establishing the connection to UTRAN, it shall:

1> terminate the procedure including release of the associated resources;

- 1> resume the connection used before the handover; and
- 1> indicate the failure to the other radio access technology.

Upon receiving an indication about the failure from the other radio access technology, UTRAN should release the associated resources and the context information concerning this UE.

8.3.6.6 Reception of message HANDOVER TO UTRAN COMPLETE by the UTRAN

Upon receiving a HANDOVER TO UTRAN COMPLETE message, UTRAN should consider the inter-RAT handover procedure as having been completed successfully and indicate this to the Core Network.

8.3.7 Inter-RAT handover from UTRAN



Figure 8.3.7-1: Inter-RAT handover from UTRAN, successful case

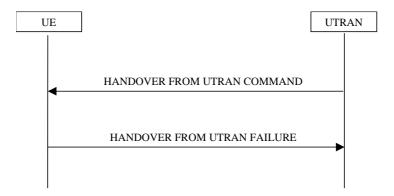


Figure 8.3.7-2: Inter-RAT handover from UTRAN, failure case

8.3.7.1 General

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH state. This procedure may be used to perform CS handover which applies when no RABs are established or when the established RABs are only in the CS domain or when the established RABs are established or when the established RABs are only in the PS domain.

8.3.7.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH state, to make a handover to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a HANDOVER FROM UTRAN COMMAND message.

8.3.7.3 Reception of a HANDOVER FROM UTRAN COMMAND message by the UE

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

- 1> if the UE has a pending "TGPS reconfiguration CFN" at the activation time received in the HANDOVER FROM UTRAN COMMAND the UE may:
 - 2> abort the pending CM activation;
 - 2> set the CM PATTERN ACTIVATION ABORTED to TRUE.
- 1> otherwise:
 - 2> set the CM_PATTERN_ACTIVATION_ABORTED to FALSE.
- 1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

Value of the IE "System type"	Standard to apply	Inter RAT Message
GSM	GSM TS 04.18, version 8.5.0 or later, or 3GPP TS 44.018	HANDOVER COMMAND
	3GPP TS 44.060, version 6.13.0 or later	PS HANDOVER COMMAND
GERAN lu	3GPP TS 44.118	RADIO BEARER RECONFIGURATION
cdma2000	TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later	

- 1> if the IE "System type" has the value "GSM" or "GERAN Iu":
 - 2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":
 - 3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".
 - 2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":
 - 3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".
- 1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.
- 1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:
 - 2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":
 - 3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.
 - 2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "PS domain":
 - 3> connect upper layer entities corresponding to the indicated PS domain RAB to the radio resources indicated in the inter-RAT message.
 - 3> if the "System type" is "GSM":

- 4> use the contents of the IE "GERAN system information" as the system information to begin access on the target GERAN cell.
- NOTE1: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.
- NOTE2: In handover to GERAN *Iu mode*, the RAB information is included in the RADIO BEARER RECONFIGURATION message specified in [53].
- NOTE3: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.
- NOTE4: The UE may ignore the IE "NAS synchronisation indicator" if included in the HANDOVER FROM UTRAN COMMAND message;
- NOTE5: The UE behaviour is undefined if the IE "Re-establishment timer" in the IE "RAB info" indicates a timer different from the timer currently configured for this RAB.
- NOTE6: The IE "GERAN System Information" is constructed in the same way as in 2G to 2G PS Handover in [44].

8.3.7.4 Successful completion of the inter-RAT handover

Upon successfully completing the handover, UTRAN should:

- 1> release the radio connection; and
- 1> remove all context information for the concerned UE.

Upon successfully completing the handover, the UE shall:

- 1> if inter-RAT handover to GERAN *Iu mode* is performed:
 - 2> perform the actions on reception of the RADIO BEARER RECONFIGURATION message as specified in [53].
- 1> if inter-RAT handover to GERAN *Iu mode* is performed and if there are any NAS messages for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 has not yet been confirmed by RLC; or
- 1> if inter-RAT handover to other RAT than GERAN *Iu mode* is performed and if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:
 - 2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.
- 1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

8.3.7.5 UE fails to complete requested handover

If the UE does not succeed in establishing the connection to the target radio access technology, it shall:

- 1> revert back to the UTRA configuration;
- 1> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:
 - 2> establish the UTRA physical channel(s) (including HS-DSCH and E-DCH related channels) used at the time for reception of HANDOVER FROM UTRAN COMMAND;
 - 2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);

- 2> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and
- 2> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE or while the physical channel is not considered established.
- 1> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the UE does not succeed to establish the UTRA physical channel(s):
 - 2> perform a cell update procedure according to subclause 8.3.1 with cause "Radio link failure";
 - 2> when the cell update procedure has completed successfully:
 - 3> proceed as below.
- 1> transmit the HANDOVER FROM UTRAN FAILURE message setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "Inter-RAT handover failure" to "physical channel failure".
- 1> When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:
 - 2> the procedure ends.

8.3.7.6 Invalid HANDOVER FROM UTRAN COMMAND message

If the IE "Inter-RAT message" received within the HANDOVER FROM UTRAN COMMAND message does not include a valid inter RAT handover message in accordance with the protocol specifications for the target RAT, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> set the IE "failure cause" to the cause value "Inter-RAT protocol error";
- 1> include the IE "Inter-RAT message" in accordance with the specifications applicable to the other RAT;
- 1> transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;
- 1> when the transmission of the HANDOVER FROM UTRAN FAILURE message has been confirmed by RLC:
 - 2> continue with any ongoing processes and procedures as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;
 - 2> and the procedure ends.

If the HANDOVER FROM UTRAN COMMAND message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> set the IE "RRC transaction identifier" in the HANDOVER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- 1> transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;

- 1> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;
 - 2> and the procedure ends.

8.3.7.7 Reception of an HANDOVER FROM UTRAN FAILURE message by UTRAN

Upon receiving an HANDOVER FROM UTRAN FAILURE message, UTRAN may initiate the release the resources in the target radio access technology.

8.3.7.8 Unsupported configuration in HANDOVER FROM UTRAN COMMAND message

If:

- the UTRAN instructs the UE to perform a non-supported handover scenario; or
- the UTRAN instructs the UE to use a non-supported configuration; or
- the UE does not support PS Handover to GERAN, and the inter-RAT handover to other RAT than GERAN *Iu mode* is performed and the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message and this IE does not include any IE "RAB Info" with the IE "CN domain Identity" set to "CS domain"; or
- the HANDOVER FROM UTRAN COMMAND message includes the IE "RAB information List" and includes at least one IE "RAB Info" with the IE "CN domain Identity" set to "PS domain", and the IE "GERAN System Information" is not present:

the UE shall:

- 1> transmit a HANDOVER FROM UTRAN FAILURE message, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "Inter-RAT handover failure" to "configuration unacceptable";
 - 2> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:
 - 3> resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;
 - 3> and the procedure ends.

8.3.7.8a Reception of HANDOVER FROM UTRAN COMMAND message by UE in CELL FACH

If the UE receives HANDOVER FROM UTRAN COMMAND while in CELL_FACH, the UE shall:

- 1> transmit a HANDOVER FROM UTRAN FAILURE message, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and

- 2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 2> clear that entry;
- 2> set the IE "Inter-RAT handover failure" to "protocol error", include IE "Protocol error information"; and
- 2> set the value of IE "Protocol error cause" to "Message not compatible with receiver state";
- 2> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:
 - 3> resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;
 - 3> and the procedure ends.

8.3.8 Inter-RAT cell reselection to UTRAN

8.3.8.1 General

The purpose of the inter-RAT cell reselection procedure to UTRAN is to transfer, under the control of the UE and to some extent the source radio access technology, a connection between the UE and another radio access technology (e.g. GSM/GPRS, but not UTRAN) to UTRAN.

8.3.8.2 Initiation

When the UE makes an inter-RAT cell reselection to UTRAN according to the criteria specified in [4], it shall initiate this procedure. The inter-RAT cell reselection made by the UE may use system information broadcast from the source radio access technology or UE dedicated information.

If the NAS procedures associated with inter-system change specified in [5] require the establishment of an RRC connection, the UE shall:

- 1> set the variable ESTABLISHMENT_CAUSE to "Inter-RAT cell reselection";
- NOTE: This value of ESTABLISHMENT_CAUSE has priority over the cause requested by upper layers.
- 1> initiate an RRC connection establishment procedure as specified in subclause 8.1.3;
- 1> after initiating an RRC connection establishment:
 - 2> release all resources specific to the other radio access technology.

If the NAS procedures associated with inter-system change specified in [5] do not require the establishment of an RRC connection, the UE shall:

- 1> enter idle mode in the target cell without accessing the cell; and
- 1> release all resources specific to the other radio access technology.

8.3.8.2a Initiation of inter-RAT cell reselection from GERAN *lu mode*

When the UE performs an inter-RAT cell reselection from GERAN *Iu mode* Cell_Shared state, the UE shall:

1> initiate the cell update procedure as specified for the cell reselection case in CELL_FACH and CELL_PCH states, using the cause "cell reselection" and setting the G-RNTI in the IE "U-RNTI".

When the UE performs an inter-RAT cell reselection from GERAN *Iu mode* GRA_PCH state, the UE shall:

- 1> compare the GRA identity which the MS had been assigned to in GERAN against the URA identities which are broadcast in the UTRAN cell.
- 1> If the assigned GRA identity is not present in the list of URA identities that are broadcast in the UTRAN cell:

2> initiate the URA update procedure as specified for the URA reselection case in URA_PCH state, using the cause "change of URA" and setting the G-RNTI in the IE "U-RNTI".

The UE shall:

1> set the following variables equal to the corresponding variables in GERAN *Iu mode*:

CIPHERING_STATUS

ESTABLISHED_RABS

ESTABLISHED_SIGNALLING_CONNECTIONS

INTEGRITY_PROTECTION_INFO

INTER_RAT_HANDOVER_INFO_TRANSFERRED

LATEST_CONFIGURED_CN_DOMAIN

START_THRESHOLD

UE CAPABILITY TRANSFERRED.

1> set the new uplink and downlink HFN of RB2 to MSB₂₀(MAX(uplink HFN of RB2, downlink HFN of RB2)).

NOTE: MSB₂₀() operation provides the HFN mapping from GERAN *Iu mode* to UTRAN. In GERAN *Iu mode* the length of HFN component of the COUNT-C of RB2 is longer than 20 bits.

1> initialise the variable TIMERS_AND_CONSTANTS to the default values and start to use those timer and constants values.

8.3.8.3 UE fails to complete an inter-RAT cell reselection

If the inter-RAT cell reselection fails before the UE has initiated the RRC connection establishment the UE may return back to the other radio access technology.

If the RRC connection establishment fails, the UE shall enter idle mode.

8.3.8.3a UE fails to complete an inter-RAT cell reselection from GERAN *lu mode*

When the UE performs an inter-RAT cell reselection from GERAN Iu mode to UTRAN, and the cell reselection fails:

1> the UE may return back to the GERAN Iu mode state from which it initiated the inter-RAT cell reselection.

8.3.9 Inter-RAT cell reselection from UTRAN

8.3.9.1 General

The purpose of the inter-RAT cell reselection procedure from UTRAN is to transfer, under the control of the UE and to some extent the UTRAN, a connection between the UE and UTRAN to another radio access technology (e.g. GSM/GPRS).

8.3.9.2 Initiation

This procedure is applicable in states CELL_FACH, CELL_PCH or URA_PCH.

When the UE based on received system information makes a cell reselection to a radio access technology other than UTRAN, e.g. GSM/GPRS, according to the criteria specified in [4], the UE shall:

- 1> If the NAS procedures associated with inter-system change specified in [5] require the establishment of a connection:
 - 2> initiate the establishment of a connection to the target radio access technology according to its specifications.

8.3.9.2a Initiation of inter-RAT cell reselection to GERAN *lu mode*

When the UE in CELL_PCH or CELL_FACH state performs an inter-RAT cell reselection to GERAN *Iu mode*, according to the criteria specified in [4], the UE shall:

1> initiate the cell update procedure according to 3GPP TS 44.118 [53], setting the U-RNTI in the IE "G-RNTI".

When the UE in URA_PCH state performs an inter-RAT cell reselection to GERAN *Iu mode*, according to the criteria specified in [4], the UE shall:

- 1> compare the URA identity which the UE had been assigned to in UTRAN against the GRA identities which are broadcast in the GERAN cell;
- 1> If the assigned URA identity is not present in the list of GRA identities that are broadcast in the GERAN cell:
 - 2> initiate the GRA update procedure as specified in 3GPP TS 44.118 [53], setting the U-RNTI in the IE "G-RNTI".

8.3.9.3 Successful cell reselection

When the UE has succeeded in reselecting a cell in the target radio access technology, the UE shall:

1> release all UTRAN specific resources.

UTRAN should:

1> release all UE dedicated resources upon indication that the UE has completed a connection establishment to the other radio access technology.

8.3.9.4 UE fails to complete an inter-RAT cell reselection

If the inter-RAT cell reselection fails, the UE shall:

1> resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

8.3.10 Inter-RAT cell change order to UTRAN

8.3.10.1 General

The purpose of the inter-RAT cell change order to UTRAN procedure is to transfer, under the control of the source radio access technology, a connection between the UE and another radio access technology (e.g. GSM/GPRS) to UTRAN.

8.3.10.2 Initiation

The procedure is initiated when a radio access technology other than UTRAN, e.g. GSM/GPRS, using procedures specific for that RAT, orders the UE to change to a UTRAN cell.

NOTE: Within the message used to order the UE to change to a UTRAN cell, the source RAT should specify the identity of the target UTRAN cell as specified in the specifications for that RAT.

The UE shall:

1> set the variable ESTABLISHMENT_CAUSE to "Inter-RAT cell change order";

NOTE: This value of ESTABLISHMENT_CAUSE has priority over the cause requested by upper layers.

1> initiate an RRC connection establishment procedure as specified in subclause 8.1.3.

8.3.10.3 UE fails to complete an inter-RAT cell change order

If the inter-RAT cell reselection fails the UE shall return to the other radio access technology and proceed as specified in the appropriate specifications for that RAT.

NOTE 3: The cell change was network ordered. Therefore, failure to change to the target cell should not cause the UE to move to UE- controlled cell selection.

8.3.11 Inter-RAT cell change order from UTRAN



Figure 8.3.11-1: Inter-RAT cell change order from UTRAN

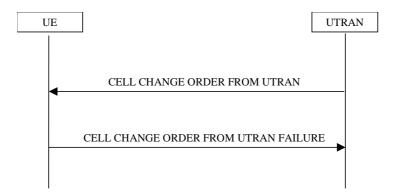


Figure 8.3.11-2: Inter-RAT cell change order from UTRAN, failure case

8.3.11.1 General

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

8.3.11.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

8.3.11.3 Reception of an CELL CHANGE ORDER FROM UTRAN message by the UE

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE shall act as if the message was never received.

The UE shall:

- 1> if the UE has a pending "TGPS reconfiguration CFN" at the activation time received in the CELL CHANGE ORDER FROM UTRAN message the UE may:
 - 2> abort the pending CM activation;
 - 2> set the CM_PATTERN_ACTIVATION_ABORTED to TRUE.
- 1> otherwise:
 - 2> set the CM_PATTERN_ACTIVATION_ABORTED to FALSE.
- 1> start timer T309; and
- 1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and
- 1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:
 - 2> retrieve it from the target cell as specified in [43];
 - 2> act upon IE "NC mode" as specified in [43].
- 1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:
 - 2> ignore the contents of the IE "RAB Information List".
- NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification. In case of GSM/GPRS proceed according to the procedure Network control cell reselection procedure as specified in [44].
- 1> if the UE supports UTRAN to GERAN Network Assisted Cell Change, the IE "Geran System Information" is present and the UE is in CELL_DCH state:
 - 2> if according to [44] the IE "GERAN System Information" includes a correct and consistent set of SI or PSI messages:
 - 3> use this information as the system information to begin access on the target GERAN cell.
 - 2> otherwise:
 - 3> ignore the IE "GERAN System Information" and continue the Cell Change Order procedure.

NOTE: The IE "GERAN System Information" is constructed in the same way as in 2G to 2G NACC, i.e. the PSI messages are encoded as such, whereas the SI messages exclude 2 octets of headers, see [44].

8.3.11.4 Successful completion of the cell change order

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

- 1> stop timer T309;
- 1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

- 1> release the radio connection; and
- 1> remove all context information for the concerned UE.
- NOTE: The release of the UMTS radio resources is initiated from another RAT.

8.3.11.5 Expiry of timer T309 or UE fails to complete requested cell change order

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

- 1> if it received the CELL CHANGE ORDER FROM UTRAN message in state CELL_DCH:
 - 2> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:
 - 3> revert back to the UTRA configuration;
 - 3> establish the UTRA physical channel(s) (including HS-DSCH and E-DCH related channels) used at the time for reception of CELL CHANGE ORDER FROM UTRAN.
 - 2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);
 - 2> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and
 - 2> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE or while the physical channel is not considered established;
 - 2> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the UE does not succeed in establishing the UTRA physical channel(s):
 - 3> perform a cell update procedure according to subclause 8.3.1 with cause "Radio link failure";
 - 3> when the cell update procedure has completed successfully:
 - 4> proceed as below.
 - 2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:
 - 3> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 3> clear that entry;
 - 3> set the IE "Inter-RAT change failure" to "physical channel failure".
 - 2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission, the procedure ends.
- 1> if the UE receives the CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state:
 - 2> revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;
 - 2> if the UE is unable to return to this cell:
 - 3> select a suitable UTRA cell according to [4];
 - 3> initiate the cell update procedure according to subclause 8.3.1 using the cause "cell re-selection";
 - 3> when the cell update procedure completed successfully:
 - 4> proceed as below.

- 2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:
 - 3> include the IE "RRC transaction identifier"; and
 - 3> set it to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 3> clear that entry;
 - 3> set the IE "Inter-RAT change failure" to "physical channel failure".
- 2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:
 - 3> the procedure ends.

8.3.11.6 Unsupported configuration in CELL CHANGE ORDER FROM UTRAN message

If the UTRAN instructs the UE to perform a non-supported cell change order scenario or to use a non-supported configuration, the UE shall:

- 1> transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message, setting the information elements as specified below:
 - 2> include the IE "RRC transaction identifier"; and
 - 2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - 2> clear that entry;
 - 2> set the IE "Inter-RAT change failure" to "configuration unacceptable";
 - 2> when the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:
 - 3> resume normal operation as if the CELL CHANGE ORDER FROM UTRAN message has not been received;
 - 3> and the procedure ends.

8.3.11.7 Invalid CELL CHANGE ORDER FROM UTRAN message

If the CELL CHANGE ORDER FROM UTRAN message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> set the IE "RRC transaction identifier" in the CELL CHANGE ORDER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> set the IE "Inter-RAT change failure" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL ERROR INFORMATION;
- 1> transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;
- 1> when the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

- 2> resume normal operation as if the invalid CELL CHANGE ORDER FROM UTRAN message has not been received;
- 2> and the procedure ends.

8.4 Measurement procedures

8.4.0 Measurement related definitions

UTRAN may control a measurement in the UE either by broadcast of SYSTEM INFORMATION and/or by transmitting a MEASUREMENT CONTROL message.

The following information is used to control the UE measurements and the measurement results reporting:

- 1. **Measurement identity**: A reference number that should be used by the UTRAN when setting up, modifying or releasing the measurement and by the UE in the measurement report.
- 2. **Measurement command**: One out of three different measurement commands.
 - Setup: Setup a new measurement.
 - Modify: Modify a previously defined measurement, e.g. to change the reporting criteria.
 - Release: Stop a measurement and clear all information in the UE that are related to that measurement.
- 3. **Measurement type**: One of the types listed below describing what the UE shall measure.

Presence or absence of the following control information depends on the measurement type

- 4. **Measurement objects:** The objects on which the UE shall measure measurement quantities, and corresponding object information.
- 5. **Measurement quantity:** The quantity the UE shall measure on the measurement object. This also includes the filtering of the measurements.
- 6. **Reporting quantities:** The quantities the UE shall include in the report in addition to the quantities that are mandatory to report for the specific event.
- 7. **Measurement reporting criteria**: The triggering of the measurement report, e.g. periodical or event-triggered reporting.
- 8. **Measurement Validity**: Defines in which UE states the measurement is valid.
- 9. **Measurement reporting mode**: This specifies whether the UE shall transmit the measurement report using AM or UM RLC.
- 10. **Additional measurement identities**: A list of references to other measurements. When this measurement triggers a measurement report, the UE shall also include the reporting quantities for the measurements referenced by the additional measurement identities.

All these measurement parameters depend on the measurement type and are described in more detail in clause 14.

The different types of measurements are:

- **Intra-frequency measurements**: measurements on downlink physical channels at the same frequency as the active set. A measurement object corresponds to one cell. Detailed description is found in subclause 14.1.
- **Inter-frequency measurements**: measurements on downlink physical channels at frequencies that differ from the frequency of the active set and on downlink physical channels in the active set. A measurement object corresponds to one cell. Detailed description is found in subclause 14.2.
- **Inter-RAT measurements**: measurements on downlink physical channels belonging to another radio access technology than UTRAN, e.g. GSM. A measurement object corresponds to one cell. Detailed description is found in subclause 14.3.

- **Traffic volume measurements**: measurements on uplink traffic volume. A measurement object corresponds to one cell. Detailed description is found in subclause 14.4.
- Quality measurements: Measurements of downlink quality parameters, e.g. downlink transport block error rate. A measurement object corresponds to one transport channel in case of BLER. A measurement object corresponds to one timeslot in case of SIR (TDD only). Detailed description is found in subclause 14.5.
- **UE-internal measurements**: Measurements of UE transmission power and UE received signal level. Detailed description is found in subclause 14.6.
- **UE positioning measurements:** Measurements of UE position. Detailed description is found in subclause 14.7.

The UE shall support a number of measurements running in parallel as specified in [19] and [20]. The UE shall also support that each measurement is controlled and reported independently of every other measurement.

Cells that the UE is monitoring are grouped in the UE into three mutually exclusive categories:

- 1. Cells, which belong to the **active set.** User information is sent from all these cells. In FDD, the cells in the active set are involved in soft handover. In TDD the active set always comprises one cell only. The UE shall only consider active set cells included in the variable CELL_INFO_LIST for measurement; i.e. active set cells not included in the CELL_INFO_LIST shall not be considered in any event evaluation and measurement reporting.
- 2. Cells, which are not included in the active set, but are included in the CELL_INFO_LIST belong to the **monitored set.**
- 3. Cells detected by the UE, which are neither in the CELL_INFO_LIST nor in the active set belong to the **detected set.** Reporting of measurements of the detected set is only applicable to intra-frequency measurements made by UEs in CELL_DCH state.

If the IE "Cells for measurement" has been included in a MEASUREMENT CONTROL message, only monitored set cells explicitly indicated for a given intra-frequency (resp. inter-frequency, interRAT) measurement by the IE "Cells for measurement" shall be considered for measurement. If the IE "Cells for measurement" has not been included in a MEASUREMENT CONTROL message, all of the intra-frequency (resp. inter-frequency, inter RAT) cells stored in the variable CELL_INFO_LIST shall be considered for measurement. The IE "Cells for measurement" is not applicable to active set cells e.g. when the triggering condition refers to active set cells, the UE shall consider all active set cells in the CELL_INFO_LIST for measurement irrespective if these cells are explicitly indicated by the IE "Cells for measurement".

8.4.1 Measurement control



Figure 8.4.1-1: Measurement Control, normal case

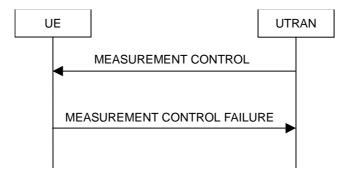


Figure 8.4.1-2: Measurement Control, failure case

8.4.1.1 General

The purpose of the measurement control procedure is to setup, modify or release a measurement in the UE.

8.4.1.2 Initiation

The UTRAN may request a measurement by the UE to be setup, modified or released with a MEASUREMENT CONTROL message, which is transmitted on the downlink DCCH using AM RLC.

The UTRAN should take the UE capabilities into account when a measurement is requested from the UE.

When a new measurement is created, UTRAN should set the IE "Measurement identity" to a value, which is not used for other measurements. UTRAN may use several "Measurement identity" for the same "Measurement type". In case of setting several "Measurement identity" within a same "Measurement type", the measurement object or the list of measurement objects can be set differently for each measurement with different "Measurement identity".

When a current measurement is modified or released, UTRAN should set the IE "Measurement identity" to the value, which is used for the measurement being modified or released. In case of modifying IEs within a "Measurement identity", it is not needed for UTRAN to indicate the IEs other than modified IEs, and the UE continues to use the current values of the IEs that are not modified. UTRAN should not use "modify" to change the type of measurement stored in the variable MEASUREMENT_IDENTITY for a given measurement identity.

8.4.1.3 Reception of MEASUREMENT CONTROL by the UE

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 unless otherwise specified below.

The UE shall:

- 1> read the IE "Measurement command";
- 1> if the IE "Measurement command" has the value "setup":
 - 2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;
 - 2> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:
 - 3> if the UE is in CELL_FACH state:
 - 4> the UE behaviour is not specified.
 - 2> for measurement types "inter-RAT measurement" or "inter-frequency measurement" that require measurements on a frequency other than the actually used frequency:
 - 3> if, according to its measurement capabilities, the UE requires compressed mode to perform that measurement type and after reception of this message a compressed mode pattern sequence with an appropriate measurement purpose is active according to the IE "Current TGPS Status Flag" in UE variable TGPS_IDENTITY; or
 - 3> if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements on at least one supported band of that measurement type:
 - 4> if the measurement is valid in the current RRC state of the UE:
 - 5> begin measurements according to the stored control information for this measurement identity.

NOTE: The UE is not required to perform measurements on cells for which it needs compressed mode but a suitable compressed mode pattern is not activated.

- 2> for measurement type "inter-frequency measurement" that requires measurements only on the same frequency as the actually used frequency:
 - 3> if the measurement is valid in the current RRC state of the UE:

- 4> begin measurements according to the stored control information for this measurement identity.
- 2> for measurement type "UE positioning measurement":
 - 3> if the UE is in CELL_FACH state:
 - 4> if IE "Positioning Method" is set to "OTDOA":
 - 5> if IE "Method Type" is set to "UE assisted":
 - 6> if IE "UE positioning OTDOA assistance data for UE assisted" is not included:
 - 7> if System Information Block type 15.4 is broadcast:
 - 8> read System Information Block type 15.4.
 - 7> act as specified in subclause 8.6.7.19.2.
 - 5> if IE "Method Type" is set to "UE based":
 - 6> if IE "UE positioning OTDOA assistance data for UE based" is not included:
 - 7> if System Information Block type 15.5 is broadcast:
 - 8> read System Information Block type 15.5.
 - 7> act as specified in subclause 8.6.7.19.2a.
- 2> for any other measurement type:
 - 3> if the measurement is valid in the current RRC state of the UE:
 - 4> begin measurements according to the stored control information for this measurement identity.
- 1> if the IE "Measurement command" has the value "modify":
 - 2> for all IEs present in the MEASUREMENT CONTROL message:
 - 3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":
 - 4> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:
 - 5> if the UE is in CELL_FACH state:
 - 6> the UE behaviour is not specified.
 - 4> if measurement type is set to "intra-frequency measurement", for any of the optional IEs "Intra-frequency measurement objects list", "Intra-frequency measurement quantity", "Intra-frequency reporting quantity", "Measurement Validity", "report criteria" and "parameters required for each event" (given "report criteria" is set to "intra-frequency measurement reporting criteria") that are present in the MEASUREMENT CONTROL message:
 - 4> if measurement type is set to "inter-frequency measurement", for any of the optional IEs "Inter-frequency measurement quantity", "Inter-frequency reporting quantity", "Measurement Validity", "Inter-frequency set update" and "parameters required for each event" (given "report criteria" is set to either "inter-frequency measurement reporting criteria" or "intra-frequency measurement reporting criteria") that are present in the MEASUREMENT CONTROL message:
 - 4> if measurement type is set to "inter-RAT measurement", for any of the optional IEs "Inter-RAT measurement objects list", "Inter-RAT measurement quantity", and "Inter-RAT reporting quantity" that are present in the MEASUREMENT CONTROL message:
 - 4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning OTDOA assistance data" is present, for any of the optional IEs "UE positioning OTDOA neighbour cell info for UE-assisted", "UE positioning OTDOA reference cell info for UE-assisted", "UE positioning

- OTDOA reference cell info for UE-based", "UE positioning OTDOA neighbour cell info for UE-based" and "UE positioning" that are present in the MEASUREMENT CONTROL message:
- 4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:
- 4> if measurement type is set to "traffic volume measurement", for any of the optional IEs "Traffic volume measurement Object", "Traffic volume measurement quantity", "Traffic volume reporting quantity", and "Measurement Validity" that are present in the MEASUREMENT CONTROL message:
- 4> if measurement type is set to "quality measurement", for the optional IE "Quality reporting quantity" if it is present in the MEASUREMENT CONTROL message:
- 4> if measurement type is set to "UE internal measurement", for any of the optional IEs "UE internal measurement quantity", and "UE internal reporting quantity" that are present in the MEASUREMENT CONTROL message:
 - 5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;
 - 5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.
- 3> otherwise:
 - 4> set the variable CONFIGURATION INCOMPLETE to TRUE.
- 2> if measurement type is set to "inter-frequency measurement":
 - 3> if "report criteria" is set to "intra-frequency measurement reporting criteria" and "reporting criteria" in "inter-frequency measurement quantity" is set to "intra-frequency reporting criteria":
 - 4> leave the currently stored "inter-frequency measurement reporting criteria" within "report criteria" and "inter-frequency reporting criteria" within "inter-frequency measurement quantity" unchanged, and continue to act on the information stored in these variables.
- NOTE: If the UTRAN wants to modify the inter-frequency cell info list for an inter-frequency measurement configured with event based reporting without repeating any IEs related to the configured events, one possibility is to set the IE "report criteria" to "intra-frequency measurement reporting criteria", not include the IE "parameters required for each event", and set the IE "reporting criteria" in the IE "inter-frequency measurement quantity" to "intra-frequency reporting criteria".
 - 2> for measurement types "inter-frequency measurement" that require measurements on a frequency other than the actually used frequency, or that require measurements on another RAT:
 - 3> if, according to its measurement capabilities, the UE requires compressed mode to perform that measurement type and after reception of this message a compressed mode pattern sequence with an appropriate measurement purpose is active according to the IE "Current TGPS Status Flag" in UE variable TGPS_IDENTITY; or
 - 3> if, according to its measurement capabilities, the UE does not require compressed mode, on at least one supported band of that measurement type, to perform the measurements:
 - 4> resume the measurements according to the new stored measurement control information.
 - 2> for measurement type "inter-frequency measurement" that requires measurements only on the same frequency as the actually used frequency:
 - 3> if the measurement is valid in the current RRC state of the UE:
 - 4> resume measurements according to the new stored control information for this measurement identity.

- 2> for any other measurement type:
 - 3> resume the measurements according to the new stored measurement control information.
- 2> for measurement type "inter-RAT measurement":
 - 3> if "report criteria" is set to "inter-RAT measurement reporting criteria":
 - 4> if the value of "report criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is not "inter-RAT measurement reporting criteria"; or
 - 4> if the value of "report criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is "inter-RAT measurement reporting criteria" and if the IE "Parameters required for each event" is present:
 - 5> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "reporting criteria" received in the MEASUREMENT CONTROL message.
 - 3> if "report criteria" is not set to "inter-RAT measurement reporting criteria":
 - 4> replace the IE "reporting criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "reporting criteria" received in the MEASUREMENT CONTROL message.
- 2> for measurement type "UE positioning measurement":
 - 3> if "reporting criteria" is set to "UE positioning reporting criteria":
 - 4> if the value of "reporting criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is not "UE positioning reporting criteria", or;
 - 4> if the value of "reporting criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is "UE positioning reporting criteria" and if the IE "Parameters required for each event" is present:
 - 5> replace the IE "reporting criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message.
 - 3> if "reporting criteria" is not set to "UE positioning reporting criteria":
 - 4> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message.
- 2> for measurement type "traffic volume measurement":
 - 3> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message.
- 2> for measurement type "quality measurement":
 - 3> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message;
 - 3> if "report criteria" is set to "quality measurement reporting criteria":
 - 4> if the value of "BLER reporting" in any instance of the IE "Quality reporting quantity" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message is set to TRUE:

- 5> the UE behaviour is unspecified.
- 2> for measurement type "UE internal measurement":
 - 3> if "report criteria" is set to "UE internal measurement reporting criteria":
 - 4> if the value of "report criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is not "UE internal measurement reporting criteria"; or
 - 4> if the value of "report criteria" stored in the variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" is "UE internal measurement reporting criteria" and if the IE "Parameters sent for each UE internal measurement event" is present:
 - 5> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message.
 - 3> if "report criteria" is not set to "UE internal measurement reporting criteria":
 - 4> replace the IE "report criteria" (and all its children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IE "report criteria" received in the MEASUREMENT CONTROL message.
- 1> if the IE "measurement command" has the value "release":
 - 2> terminate the measurement associated with the identity given in the IE "measurement identity";
 - 2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.
- 1> if the IE "DPCH Compressed Mode Status Info" is present:
 - 2> if, as the result of this message, UE will have more than one transmission gap pattern sequence with the same measurement purpose active (according to IEs "TGMP" and "Current TGPS Status Flag" in variable TGPS_IDENTITY):
 - 3> set the variable CONFIGURATION_INCOMPLETE to TRUE.
 - 2> if there is any pending "TGPS reconfiguration CFN" or any pending "TGCFN":
 - 3> the UE behaviour is unspecified.
 - 2> if there is a pending "activation time" for a reconfiguration procedure that included the IE "DPCH Compressed mode info":
 - 3> the UE behaviour is unspecified.
 - 2> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag") in the variable TGPS_IDENTITY):
 - 3> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:
 - 4> deactivate this pattern sequence at the beginning of the frame indicated by IE "TGPS reconfiguration CFN" received in the message;
 - 4> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame indicated by IE "TGPS reconfiguration CFN" received in the message.
 - 3> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:
 - 4> deactivate this pattern sequence at the beginning of the frame indicated by IE "TGPS reconfiguration CFN" received in the message.
- NOTE1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.

- NOTE2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.
 - 2> after the time indicated by IE "TGPS reconfiguration CFN" has elapsed:
 - 3> activate the pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" in this message is set to "activate" at the time indicated by IE "TGCFN"; and
 - 3> set the corresponding "Current TGPS status flag" for this pattern sequence in the variable TGPS IDENTITY to "active"; and
 - 3> begin the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
 - 3> if the values of IE "TGPS reconfiguration CFN" and IE "TGCFN" are equal:
 - 4> start the concerned pattern sequence immediately at that CFN.
 - 2> not alter pattern sequences stored in variable TGPS_IDENTITY, if the pattern sequence is not identitifed in IE "TGPSI" in the received message.
- 1> if the UE in CELL_FACH state receives a MEASUREMENT CONTROL message, which indicates the same measurement identity as that stored in the variable MEASUREMENT_IDENTITY:
 - 2> update the stored information with the traffic volume measurement control information in variable MEASUREMENT_IDENTITY; and
 - 2> refrain from updating the traffic volume measurement control information associated with this measurement identity in the variable MEASUREMENT_IDENTITY with the information received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) until this measurement is explicitly released with another MEASUREMENT CONTROL message.
- 1> if the IE "Read SFN indicator" included in the IE "Cell info" of an inter-frequency cell is set to TRUE and the variable UE_CAPABILITY_TRANSFERRED has the DL "Measurement capability" for "FDD measurements" set to TRUE (the UE requires DL compressed mode in order to perform measurements on FDD):
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> clear the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS.

The UE may:

- 1> if the IE "Measurement command" has the value "setup":
 - 2> for measurement type "UE positioning measurement":
 - 3> if the UE is CELL FACH state:
 - 4> if IE "Positioning Method" is set to "GPS":
 - 5> if IE "UE positioning GPS assistance data" is not included and variable UE_POSITIONING_GPS_DATA is empty:
 - 6> if System Information Block types 15, 15.1, 15.2 and 15.3 are broadcast:
 - 7> read System Information Block types 15, 15.1, 15.2 and 15.3.
 - 6> act as specified in subclause 8.6.7.19.3.
- 1> and the procedure ends.

8.4.1.4 Unsupported measurement in the UE

If UTRAN instructs the UE to perform a measurement that is not supported by the UE, or would cause the maximum number of reporting criteria supported by the UE [19] to be exceeded, the UE shall:

- 1> retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received:
- 1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- 1> clear that entry.
- 1> set the cause value in IE "failure cause" to "unsupported measurement";
- 1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;
- 1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received:
- 1> and the procedure ends.

8.4.1.4a Configuration Incomplete

If the variable CONFIGURATION_INCOMPLETE is set to TRUE, the UE shall:

- 1> retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received;
- 1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS and clear that entry;
- 1> clear the variable CONFIGURATION_INCOMPLETE;
- 1> set the cause value in IE "failure cause" to "Configuration incomplete";
- 1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;
- 1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;
- 1> and the procedure ends.

8.4.1.5 Invalid MEASUREMENT CONTROL message

If the MEASUREMENT CONTROL message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry.
- 1> set the IE "failure cause" to the cause value "protocol error";
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL ERROR INFORMATION;

- 1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;
- 1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;
- 1> and the procedure ends.

8.4.1.6 Measurements after transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state

The UE shall apply the following rules for different measurement types after transiting from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state:

8.4.1.6.1 Intra-frequency measurement

Upon transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state, the UE shall:

- 1> stop intra-frequency type measurement reporting;
- 1> if the transition is due to a reconfiguration message which included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects a cell other than that indicated by this IE on the current frequency (in case the IE "Frequency info" is not received) or other than that indicated by this IE on the frequency indicated by the IE "Frequency info" (when the IE "Frequency info" is included); or
- 1> if the transition is due to a reconfiguration message which does not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD); or
- 1> if the transition is not due to a reconfiguration message:
 - 2> delete the measurements of type intra-frequency associated with the variable MEASUREMENT_IDENTITY.
- 1> begin monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11).

8.4.1.6.2 Inter-frequency measurement

Upon transition from CELL_DCH to CELL_FACH/ CELL_PCH/URA_PCH state, the UE shall:

- 1> stop the inter-frequency type measurement reporting assigned in a MEASUREMENT CONTROL message;
- 1> if the transition is due to a reconfiguration message which included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects a cell other than that indicated by this IE on the current frequency (in case the IE "Frequency info" is not received) or other than that indicated by this IE on the frequency indicated by the IE "Frequency info" (when the IE "Frequency info" is included); or
- 1> if the transition is due to a reconfiguration message which does not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD); or
- 1> if the transition is not due to a reconfiguration message:
 - 2> delete the measurements of type inter-frequency associated with the variable MEASUREMENT_IDENTITY and delete the corresponding compressed mode pattern stored in the variable TGPS_IDENTITY.
- 1> for remaining compressed mode patterns, set the IE "TGPS Status Flag" to "deactivate" and the IE "Current TGPS Status Flag" to "inactive" in the variable TGPS_IDENTITY.
- 1> begin monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11);
- 1> in CELL_FACH state:
 - 2> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

8.4.1.6.3 Inter-RAT measurement

Upon transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state, the UE shall:

- 1> stop the inter-RAT type measurement reporting assigned in a MEASUREMENT CONTROL message;
- 1> delete the measurements of type inter-RAT associated with the variable MEASUREMENT_IDENTITY and delete the corresponding compressed mode pattern stored in the variable TGPS_IDENTITY;
- 1> begin monitoring cells listed in the IE "inter-RAT cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11);
- 1> in CELL_FACH state:
 - 2> perform measurements on other systems according to the IE "FACH measurement occasion info".

8.4.1.6.4 Quality measurement

Upon transition from CELL DCH to CELL FACH/CELL PCH/URA PCH state, the UE shall:

- 1> stop quality type measurement reporting;
- 1> delete all measurement control information of measurement type "quality" stored in the variable MEASUREMENT_IDENTITY.

8.4.1.6.5 UE internal measurement

Upon transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state, the UE shall:

- 1> stop UE internal measurement type measurement reporting;
- 1> delete all measurement control information of measurement type "UE internal" stored in the variable MEASUREMENT_IDENTITY.

8.4.1.6.6 Traffic volume measurement

Upon transition from CELL_DCH to CELL_FACH or CELL_PCH or URA_PCH state, the UE shall:

- 1> retrieve each set of measurement control information of measurement type "traffic volume" stored in the variable MEASUREMENT_IDENTITY; and
 - 2> if the optional IE "measurement validity" for this measurement has not been included:
 - 3> delete the measurement associated with the variable MEASUREMENT_IDENTITY.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "CELL_DCH":
 - 3> stop measurement reporting;
 - 3> store the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL DCH state.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states" or "all states except CELL_DCH", and if the state transition is from CELL_DCH to CELL_PCH or URA_PCH state:
 - 3> stop measurement reporting;
 - 3> store the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_FACH state.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states", and if the state transition is from CELL_DCH to CELL_FACH state:
 - 3> continue measurement reporting.

- 2> if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "all states except CELL_DCH", and if the state transition is from CELL_DCH to CELL_FACH state:
 - 3> resume this measurement and associated reporting.
- 1> if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message that is valid in CELL_FACH or CELL_PCH or URA_PCH states (stored in the variable MEASUREMENT_IDENTITY), which has the same identity as the one indicated in the IE "Traffic volume measurement system information":
 - 2> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT_IDENTITY;
 - 2> perform traffic volume measurement reporting according to the assigned information, when in CELL_FACH state.

8.4.1.6.7 UE positioning measurement

Upon transition from CELL_DCH to CELL_FACH and upon transition from CELL_DCH to CELL_PCH or URA_PCH for UE assisted GPS measurements, the UE shall:

- 1> retrieve each set of measurement control information of measurement type "UE positioning" stored in the variable MEASUREMENT_IDENTITY; and
 - 2> if the optional IE "measurement validity" for this measurement has not been included:
 - 3> delete the measurement associated with the variable MEASUREMENT_IDENTITY.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "CELL_DCH":
 - 3> stop measurement reporting;
 - 3> store the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_DCH state.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":
 - 3> upon transition from CELL_DCH to CELL_PCH or URA_PCH:
 - 4> if the choice in the IE "Reporting Criteria" included the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "UE positioning reporting criteria" and the value of the IE "Measurement interval" included in this IE is less than 64 seconds:
 - 5>use a value of 64 seconds for the measurement interval associated with this measurement while the UE remains in CELL_PCH/URA_PCH.
 - 4> if the choice in the IE "Reporting Criteria" included the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "Periodical Reporting Criteria" and the value of the IE "Reporting interval" included in this IE is less than 64 seconds:
 - 5> use a value of 64 seconds for the reporting interval associated with this measurement while the UE remains in CELL_PCH/URA_PCH.
 - 3> continue measurement reporting according to its UE positioning measurement reporting capability.
 - 2> if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "all states except CELL_DCH":
 - 3> upon transition from CELL_DCH to CELL_PCH or URA_PCH:
 - 4> if the choice in the IE "Reporting Criteria" included the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "UE positioning reporting criteria" and the value of the IE "Measurement interval" included in this IE is less than 64 seconds:

- 5> use a value of 64 seconds for the measurement interval associated with this measurement while the UE remains in CELL PCH/URA PCH.
- 4> if the choice in the IE "Reporting Criteria" included the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "Periodical Reporting Criteria" and the value of the IE "Reporting interval" included in this IE is less than 64 seconds:
 - 5> use a value of 64 seconds for the reporting interval associated with this measurement while the UE remains in CELL_PCH/URA_PCH.
- 3> resume this measurement and associated reporting according to its UE Positioning measurement reporting capability.
- 1> if the transition is due to a reconfiguration message which included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects a cell other than that indicated by this IE; or
- 1> if the transition is due to a reconfiguration message which does not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD); or
- 1> if the transition is due to a reconfiguration message which included the IE "Frequency info", and the UE selects a cell on another frequency than that indicated by this IE; or
- 1> if the transition is due to a reconfiguration message which does not include the IE "Frequency info", and the UE can not find a cell on the current frequency, but it selects a cell on another frequency; or
- 1> if the transition is not due to a reconfiguration message:
 - 2> delete the assistance data included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED and UE_POSITIONING_OTDOA_DATA_UE_ASSISTED.
- 1> if the IE "Positioning Methods" stored in the variable MEASUREMENT_IDENTITY is set to "OTDOA" or "OTDOA or GPS":
 - 2> if the IE "Method type" stored in the variable MEASUREMENT_IDENTITY is set to "UE-based" or "UE assisted preferred but UE-based allowed" or "UE-based preferred but UE-assisted allowed":
 - 3> begin monitoring assistance data received in System Information Block type 15.4 and System Information Block type 15.5 according to subclause 8.1.1.6.15.
 - 2> if the IE "Method type" stored in the variable MEASUREMENT_IDENTITY is set to "UE-assisted":
 - 3> begin monitoring assistance data received in System Information Block type 15.4 according to subclause 8.1.1.6.15.
- 1> if the UE is in CELL_FACH state:
 - 2> if the IE "UE positioning OTDOA neighbour cell list for UE assisted" stored in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED or UE_POSITIONING_OTDOA_DATA_UE_BASED contains neighbour cells on other frequencies than the current frequency:
 - 3> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

The UE may:

- 1> if the IE "Positioning Methods" stored in the variable MEASUREMENT_IDENTITY is set to "GPS" or "OTDOA or GPS":
 - 2> begin monitoring assistance data received in System Information Block type 15 and/or System Information Block type 15.1 and/or System Information Block type 15.2 and/or System Information Block type 15.3 according to subclause 8.1.1.6.15.
- NOTE: In the case that the measurement or reporting intervals are modified to 64 seconds during a transition to CELL_PCH/URA_PCH as described above, the UE retains the previously used values of "Measurement interval" and "Reporting interval" for use after transition out of CELL_PCH/URA_PCH.

8.4.1.6a Actions in CELL_FACH/CELL_PCH/URA/PCH state upon cell re-selection

Upon cell reselection while in CELL_FACH/CELL_PCH/URA/PCH state and the cell reselection has occurred after the measurement control information was stored, the UE shall:

- 1> delete all measurements of type intra-frequency, inter-frequency, and inter-RAT associated with the variable MEASUREMENT IDENTITY;
- 1> delete all compressed mode patterns associated with inter-frequency and inter-RAT measurements stored in the variable TGPS_IDENTITY;
- 1> delete the traffic volume measurements that have not been set up or modified through a MEASUREMENT CONTROL message.

8.4.1.7 Measurements after transition from CELL_FACH to CELL_DCH state

The UE shall apply the following rules for different measurement types after transiting from CELL_FACH to CELL_DCH state:

8.4.1.7.1 Intra-frequency measurement

Upon transition from CELL_FACH to CELL_DCH state:

- 1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:
 - 2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:
 - 3> resume the measurement reporting.
 - 2> otherwise, the UE shall:
 - 3> not resume the measurement reporting. The measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

8.4.1.7.2 Inter-frequency measurement

Upon transition from CELL_FACH to CELL_DCH state:

- 1> if inter-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:
 - 2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:
 - 3> resume the measurement reporting.
 - 2> otherwise, the UE shall:
 - 3> not resume the measurement reporting. The measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

8.4.1.7.3 Inter-RAT measurement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

1> stop monitoring the list of cells assigned in the IE "inter-RAT cell info list" in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11).

8.4.1.7.4 Traffic volume measurement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

- 1> retrieve each set of measurement control information of measurement type "traffic volume" stored in the variable MEASUREMENT_IDENTITY;
 - 2> if the optional IE "measurement validity" for this measurement has not been included:
 - 3> delete the measurement associated with the variable MEASUREMENT_IDENTITY.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states except CELL_DCH":
 - 3> stop measurement reporting; and
 - 3> save the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_FACH/CELL_PCH/URA_PCH state.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":
 - 3> continue measurement reporting.
 - 2> if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "CELL_DCH":
 - 3> resume this measurement and associated reporting.
- 1> if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message that is valid in CELL_DCH and has the same identity as the one indicated in the IE "Traffic volume measurement system information":
 - 2> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT_IDENTITY;
 - 2> begin traffic volume measurement reporting according to the assigned information.

8.4.1.7.5 UE positioning measurement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

- 1> retrieve each set of measurement control information of measurement type "UE positioning" stored in the variable MEASUREMENT_IDENTITY; and
 - 2> if the optional IE "Measurement validity" for this measurement has not been included:
 - 3> delete the measurement associated with the variable MEASUREMENT IDENTITY.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states except CELL_DCH":
 - 3> stop measurement reporting; and
 - 3> save the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL FACH/CELL PCH/URA PCH state.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":
 - 3> continue measurement reporting.
 - 2> if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "CELL_DCH":
 - 3> resume this measurement and associated reporting.

1> stop monitoring assistance data received in System Information Block type 15 or System Information Block type 15.1 or System Information Block type 15.2 or System Information Block type 15.3 or System Information Block type 15.4 or System Information Block 15.5.

8.4.1.8 Measurements after transition from idle mode to CELL_DCH state

The UE shall obey the following rules for different measurement types after transiting from idle mode to CELL_DCH state:

8.4.1.8.1 Intra-frequency measurement

Upon transition from idle mode to CELL_DCH state:

- 1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:
 - 2> if the cell in which the UE transited from idle mode is included in the active set for the CELL_DCH state, the UE shall:
 - 3> begin measurement reporting.
 - 2> otherwise, the UE shall:
 - 3> not begin the measurement reporting. The measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

8.4.1.8.2 Inter-frequency measurement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> stop monitoring the list of cells assigned in the IE "inter-frequency cell info list" in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11).

8.4.1.8.3 Inter-RAT measurement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> stop monitoring the list of cells assigned in the IE "inter-RAT cell info list" in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11).

8.4.1.8.4 Traffic volume measurement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> begin a traffic volume type measurement, assigned in System Information Block type 11 (or System Information Block type 12, according to subclause 8.1.1.6.11).

8.4.1.8.5 UE positioning measurement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> stop monitoring assistance data received in System Information Block type 15 or System Information Block type 15.1 or System Information Block type 15.2 or System Information Block type 15.3 or System Information Block type 15.4 or System Information Block type 15.5.

8.4.1.9 Measurements after transition from idle mode to CELL FACH state

The UE shall obey the follow rules for different measurement types after transiting from idle mode to CELL_FACH state:

8.4.1.9.1 Intra-frequency measurement

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> begin or continue monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11).

8.4.1.9.2 Inter-frequency measurement

Upon transition from idle mode to CELL_FACH state, the UE shall:

- 1> begin or continue monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11);
- 1> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

8.4.1.9.3 Inter-RAT measurement

Upon transition from idle mode to CELL_FACH state, the UE shall:

- 1> begin or continue monitoring cells listed in the IE "inter-RAT cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11);
- 1> perform measurements on other systems according to the IE "FACH measurement occasion info".

8.4.1.9.4 Traffic volume measurement

Upon transition from idle mode to CELL_FACH state, the UE shall:

- 1> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT IDENTITY;
- 1> begin traffic volume measurement reporting according to the assigned information.

8.4.1.9.5 UE positioning measurement

Upon transition from idle mode to CELL_FACH state, the UE may:

- 1> begin or continue monitoring assistance data received in System Information Block type 15 or System Information Block type 15.1 or System Information Block type 15.2 or System Information Block type 15.3 or System Information Block type 15.4 or System Information Block type 15.5 according to subclause 8.1.1.6.15;
- 1> if the IE "UE positioning OTDOA neighbour cell list for UE assisted" stored in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED; or
- 1> if the IE "UE positioning OTDOA neighbour cell list for UE based" stored in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED contains neighbour cells on other frequencies than the current frequency:
 - 2> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

8.4.1.9a Measurements after transition from connected mode to idle mode

Upon transition from connected mode to idle mode the UE shall:

- 1> stop measurement reporting for all measurements stored in the variable MEASUREMENT_IDENTITY;
- 1> clear the variable MEASUREMENT_IDENTITY;
- 1> apply the following rules for different measurement types.

8.4.1.9a.1 Intra-frequency measurement

Upon transition from connected mode to idle mode, the UE shall:

- 1> stop monitoring intra-frequency cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (if System Information Block type 12 is transmitted in the cell, according to subclause 8.1.1.6.11);
- 1> begin monitoring intra-frequency cells listed in the IE "intra-frequency cell info list" received in System Information Block type 11.

8.4.1.9a.2 Inter-frequency measurement

Upon transition from connected mode to idle mode, the UE shall:

- 1> stop monitoring inter-frequency cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (if System Information Block type 12 is transmitted in the cell, according to subclause 8.1.1.6.11);
- 1> begin monitoring inter-frequency cells listed in the IE "inter-frequency cell info list" received in System Information Block type 11.

8.4.1.9a.3 Inter-RAT measurement

Upon transition from connected mode to idle mode, the UE shall:

- 1> stop monitoring inter-RAT cells listed in the IE "inter-RAT cell info list" received in System Information Block type 12 (if System Information Block type 12 is transmitted in the cell, according to 8.1.1.6.11);
- 1> begin monitoring inter-RAT cells listed in the IE "inter-RAT cell info list" received in System Information Block type 11.

8.4.1.9a.4 UE positioning measurement

Upon transition from connected mode to idle mode, the UE may:

1> begin or continue monitoring assistance data received in System Information Block type 15 or System Information Block type 15.1 or System Information Block type 15.2 or System Information Block type 15.3 or System Information Block type 15.4 or System Information Block type 15.5.

8.4.1.9b Measurements after transition from CELL_FACH to CELL_PCH/URA_PCH

8.4.1.9b.1 Traffic volume measurement

Upon transition from CELL_FACH to CELL_PCH or URA_PCH, the UE shall:

- 1> stop any ongoing traffic volume measurement, and associated traffic volume measurement reporting.
- 1> store the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_FACH state;
- 1> if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message that is valid in CELL_FACH or CELL_PCH or URA_PCH states (stored in the variable MEASUREMENT_IDENTITY), which has the same identity as the one indicated in the IE "Traffic volume measurement system information":
 - 2> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT IDENTITY.

8.4.1.9b.2 UE positioning measurement

Upon transition from CELL_FACH to CELL_PCH or URA_PCH, the UE shall:

- 1> retrieve each set of measurement control information of measurement type "UE positioning" stored in the variable MEASUREMENT_IDENTITY; and
 - 2> if the optional IE "measurement validity" for this measurement has not been included:
 - 3> delete the measurement associated with the variable MEASUREMENT_IDENTITY.
 - 2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states" or "all states except CELL_DCH":
 - 3> if the choice in the IE "Reporting Criteria" included in the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "UE positioning reporting criteria" and the value of the IE "Measurement interval" included in this IE is less than 64 seconds:
 - 4> use a value of 64 seconds for the measurement interval associated with this measurement while the UE remains in CELL PCH/URA PCH.
 - 3> if the choice in the IE "Reporting Criteria" included in the IE "UE Positioning measurement" stored in the variable MEASUREMENT_IDENTITY is set to "Periodical Reporting Criteria" and the value of the IE "Reporting interval" included in this IE is less than 64 seconds:
 - 4> use a value of 64 seconds for the reporting interval associated with this measurement while the UE remains in CELL_PCH/URA_PCH.

NOTE: In the case that the measurement or reporting intervals are modified to 64 seconds as described above, the UE retains the previously used values of "Measurement interval" and "Reporting interval" for use after transition out of CELL_PCH/URA_PCH.

8.4.1.9c Measurements after transition from CELL_PCH/URA_PCH to CELL_FACH

8.4.1.9c.1 Traffic volume measurement

Upon transition from CELL_PCH or URA_PCH to CELL_FACH, the UE shall resume any traffic volume measurement stored in the variable MEASUREMENT_IDENTITY with measurement validity "all states" or "all states except CELL_DCH", and start the associated traffic volume measurement reporting.

8.4.1.9c.2 UE positioning measurement

Upon transition from CELL_PCH or URA_PCH to CELL_FACH, the UE shall continue any UE positioning measurement stored in the variable MEASUREMENT_IDENTITY with measurement validity "all states" or "all states except CELL_DCH", and continue the associated UE positioning measurement reporting.

NOTE: The UE's values of "Measurement interval" in the IE "UE positioning reporting criteria" and "Reporting interval" in the IE "Periodical Reporting Criteria" after this state transition revert to the values stored during the transition to CELL_PCH/URA_PCH (i.e., the 64-second interval specified in subclause 8.4.1.9b.2 is not retained).

8.4.1.10 Changes in measurement objects

8.4.1.10.1 Traffic volume measurement

When performing traffic volume event evaluation or reporting related to a certain transport channel, the UE shall consider all RBs which are mapped to the concerning transport channel e.g. if an additional RB is established on a transport channel used for event triggering or reporting, the new RB shall be taken into account.

NOTE: In this subclause, an "existing" uplink transport channel refers to a configured uplink transport channel applicable in the current RRC state.

The UE shall:

- 1> if the IE "Traffic volume measurement object" is included for this measurement:
 - 2> while a transport channel that is referenced in the IE "Traffic volume measurement object" does not exist:

3> not perform any reporting related to this transport channel.

1> else:

2> report on all existing uplink transport channels; e.g. if an additional transport channel is established while the measurement is ongoing, this new transport channel shall be taken into account in the traffic volume measurement reporting.

For every traffic volume event, the UE shall:

- 1> if the IE "Uplink transport channel type" is not included in the IE "Traffic volume measurement reporting criteria", or the "Uplink transport channel type" has the value "DCH" or "USCH" and the IE "UL transport channel id" is not included in the IE "Traffic volume measurement reporting criteria":
 - 2> if the IE "Traffic volume measurement object" is not included:
 - 3> take all existing UL transport channels into account for event triggering; e.g. if an additional transport channel is established while the measurement is ongoing, this new transport channel shall be taken into account in the traffic volume event triggering.

2> else:

- 3> while a transport channel that is referenced in the IE "Traffic Volume Measurement object" does not exist:
 - 4> not take this transport channel identity into account in the traffic volume measurement triggering.

1> else:

- 2> while a transport channel that is referenced in the IE "Traffic Volume Measurement Reporting Criteria" does not exist:
 - 3> not take this transport channel identity into account in the traffic volume event triggering.

8.4.1.10.2 Quality measurement

While a transport channel that is explicitly referenced with a transport channel identity in the IE "Quality Reporting Quantity" does not exist, the UE shall:

1> not perform any reporting related to this transport channel identity.

If the IE "Quality Reporting Quantity" does not contain any explicit transport channel identities, the UE shall:

- 1> report the quality of all existing downlink dedicated transport channels;
- 1> if an additional transport channel is established while the measurement is ongoing:
 - 2> take into account this new transport channel in the quality measurement reporting.

While a transport channel that is explicitly referenced with a transport channel id in the IE "Quality Measurement Reporting Criteria" does not exist, the UE shall:

1> not take this transport channel identity into account in the quality measurement event triggering.

8.4.1.10.3 Intra-frequency, Inter-frequency and Inter-RAT measurements

For measurements which include the IE "Cells for measurement" the UE shall:

- 1> while an IE "Intra-frequency cell id" or IE "Inter-frequency cell id" or IE "Inter-RAT cell id" in the IE "Cells for measurement" points to a position in the variable CELL_INFO_LIST which is marked as "vacant":
 - 2> not take this position into account for event triggering and reporting.

8.4.2 Measurement report



Figure 8.4.2-1: Measurement report, normal case

8.4.2.1 General

The purpose of the measurement reporting procedure is to transfer measurement results from the UE to UTRAN.

8.4.2.2 Initiation

In CELL_DCH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing measurements that are being performed in the UE.

In CELL_FACH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing traffic volume measurement or UE positioning measurement that is being performed in the UE.

In TDD, if the Radio Bearer associated with the MEASUREMENT_IDENTITY fulfilling the reporting criteria for an ongoing traffic volume measurement is mapped on transport channel of type USCH, the UE shall:

1> initiate the "PUSCH CAPACITY REQUEST" procedure instead of transmitting a MEASUREMENT REPORT (TDD Only).

In CELL_PCH or URA_PCH state, the UE shall:

- 1> first perform the cell update procedure according to subclause 8.3.1, using the cause "uplink data transmission", in order to transit to CELL_FACH state; and then
- 1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are fulfilled for any ongoing UE positioning measurement which is being performed in the UE.

The reporting criteria are fulfilled if either:

- a periodic MEASUREMENT REPORT message shall be sent according to the IE "Periodical Reporting Criteria"; or
- an event in stored IE "Measurement reporting criteria" was triggered. Events and triggering of reports for different measurement types are described in detail in clause 14.

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

- 1> set the IE "measurement identity" to the measurement identity, which is associated with that measurement in variable MEASUREMENT_IDENTITY;
- 1> set the IE "measured results" to include measurements according to the IE "reporting quantity" of that measurement stored in variable MEASUREMENT_IDENTITY; and
 - 2> if all the reporting quantities are set to "false":
 - 3> not set the IE "measured results".

- 1> set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the "Additional measurements list" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report; and
 - 2> if one or more additional measured results are to be included:
 - 3> include only the available additional measured results, and sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.
- 1> if the MEASUREMENT REPORT message was triggered by an event (i.e. not a periodical report):
 - 2> set the IE "Event results" according to the event that triggered the report.
- 1> if the IE Inter-RAT measured results list or the IE Inter-RAT measurement event results is included in the measurement report:
 - 2> if the indication status of the IE "Inter-RAT cell info indication" in the variable CELL_INFO_LIST is marked "present", include the stored value of the IE "Inter-RAT cell info indication" in the MEASUREMENT REPORT message.

The UE shall:

1> transmit the MEASUREMENT REPORT message on the uplink DCCH using either AM or UM RLC according to the stored IE "measurement reporting mode" associated with the measurement identity that triggered the report.

When the MEASUREMENT REPORT message has been submitted to lower layers for transmission:

1> the procedure ends.

8.4.3 Assistance Data Delivery



Figure 8.4.3-1 Assistance Data Delivery

8.4.3.1 General

The purpose of the assistance data delivery procedure is to transfer UE positioning related assistance data from the UTRAN to the UE.

8.4.3.2 Initiation

When requested by the Core Network, the UTRAN may deliver UE positioning related assistance data with a ASSISTANCE DATA DELIVERY message, which is transmitted on the downlink DCCH using AM RLC

8.4.3.3 Reception of ASSISTANCE DATA DELIVERY message by the UE

Upon reception of a ASSISTANCE DATA DELIVERY message the UE shall:

1> if IE "UE positioning OTDOA assistance data for UE-based" is included:

2> act as specified in subclause 8.6.7.19.2a.

1> if IE "UE positioning GPS assistance data" is included:

2> act as specified in subclause 8.6.7.19.3.

8.4.3.4 Invalid ASSISTANCE DATA DELIVERY message

If the UE receives a ASSISTANCE DATA DELIVERY message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

- 1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- 1> include the IE "Identification of received message"; and
- 1> set the IE "Received message type" to ASSISTANCE DATA DELIVERY; and
- 1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the ASSISTANCE DATA DELIVERY message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- 1> clear that entry;
- 1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid ASSISTANCE DATA DELIVERY message has not been received.

8.5 General procedures

8.5.1 Selection of initial UE identity

The purpose of the IE "Initial UE identity" is to provide a unique UE identification at the establishment of an RRC connection. The type of identity shall be selected by the UE according to the following.

If the UE is operating in "GSM-MAP mode", the UE shall choose "UE id type" in the IE "Initial UE identity" with the following priority:

- 1. TMSI (GSM-MAP): The TMSI (GSM-MAP) shall be chosen if available. The IE "LAI" in the IE "Initial UE identity" shall also be present when TMSI (GSM-MAP) is used, for making it unique.
- 2. P-TMSI (GSM-MAP): The P-TMSI (GSM-MAP) shall be chosen if available and no TMSI (GSM-MAP) is available. The IE "RAI" in the IE "Initial UE identity" shall in this case also be present when P-TMSI (GSM-MAP) is used, for making it unique.
- 3. IMSI (GSM-MAP): The IMSI (GSM-MAP) shall be chosen if available and no TMSI (GSM-MAP) or P-TMSI is available.
- 4. IMEI: The IMEI shall be chosen when none of the above three conditions are fulfilled.

When being used, the IEs "TMSI (GSM-MAP)," "P-TMSI (GSM-MAP)", "IMSI (GSM-MAP)", "LAI" and "RAI" shall be set equal to the values of the corresponding identities stored in the USIM or SIM.

If the UE is operating in "ANSI-41 mode", the UE shall choose "UE id type" in the IE "Initial UE identity" according to the procedure specified in the 3GPP2 document "3GPP2 C.P0004-A".

8.5.2 Actions when entering idle mode from connected mode

When entering idle mode from connected mode, the UE shall:

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4;

- 1> if the RRC CONNECTION RELEASE message was received and the IE "Redirection info" was present therein:
 - 2> attempt to camp on a suitable cell on the indicated UTRA carrier included in the RRC CONNECTION RELEASE message;
 - 2> attempt to camp on a suitable cell of the list of cells for the indicated RAT included in the RRC CONNECTION RELEASE message. If no cells were indicated for that RAT or no suitable cell of the indicated cells for that RAT is found within 10s, attempt to camp on any suitable cell of that RAT; or
 - 2> if no suitable cell is found on the indicated UTRA carrier or RAT camp on any suitable cell.
- 1> attempt to select a suitable cell to camp on.

When leaving connected mode according to [4], the UE shall:

1> perform cell selection.

While camping on a cell, the UE shall:

- 1> acquire system information according to the system information procedure in subclause 8.1;
- 1> perform measurements according to the measurement control procedure specified in subclause 8.4; and
- 1> if the UE is registered:
 - 2> be prepared to receive paging messages according to the paging procedure in subclause 8.2.

If the UE is operating in "GSM-MAP mode", the UE shall:

- 1> delete any NAS system information received in connected mode;
- 1> acquire the NAS system information in system information block type 1; and
- 1> proceed according to subclause 8.6.1.2.

When entering idle mode, the UE shall:

- 1> if the USIM is present, for each CN domain:
 - 2> if a new security key set was received for this CN domain but was not used either for integrity protection or ciphering during this RRC connection:
 - 3> set the START value for this domain to zero; and
 - 3> store this START value for this domain in the USIM.
 - 2> else:
 - 3> if the current "START" value, according to subclause 8.5.9 for a CN domain, is greater than or equal to the value "THRESHOLD" of the variable START_THRESHOLD:
 - 4> delete the ciphering and integrity keys that are stored in the USIM for that CN domain;
 - 4> inform the deletion of these keys to upper layers.
 - 3> else:
 - 4> store the current "START" value for this CN domain on the USIM.
- NOTE: Prior to storing the "START" value, the UE should calculate this "START" value according to subclause 8.5.9.
- 1> else:
 - 2> if the SIM is present, for each CN domain:
 - 3> if a new security key set was received for this CN domain but was not used either for integrity protection or ciphering during this RRC connection:

- 4> set the START value for this domain to zero; and
- 4> store this START value for this domain in the UE

3> else:

- 4> if the current "START" value, according to subclause 8.5.9 for this CN domain, is greater than or equal to the value "THRESHOLD" of the variable START THRESHOLD:
 - 5> delete the Kc key for this CN domain;
 - 5> delete the ciphering and integrity keys that are stored in the UE for that CN domain;
 - 5> set the "START" values for this CN domain to zero and store it the UE;
 - 5> inform the deletion of the key to upper layers.
- 4> else:
 - 5> store the current "START" value for this CN domain in the UE.

NOTE: Prior to storing the "START" value, the UE should calculate this "START" value according to subclause 8.5.9.

8.5.3 Open loop power control upon establishment of DPCCH

This procedure is used in FDD mode only.

When establishing the first DPCCH the UE shall start the UL inner loop power control at a power level according to:

1> DPCCH_Initial_power = DPCCH_Power_offset - CPICH_RSCP

Where

DPCCH_Power_offset shall have the value of IE "DPCCH Power offset" in IE "Uplink DPCH power control info"

The value for the CPICH_RSCP shall be measured by the UE.

8.5.4 Physical channel establishment criteria

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel failure".

NOTE: The criteria defined in this subclause only apply in case the UE performs synchronisation procedure A (FDD only).

8.5.5 Actions in "out of service area" and "in service area"

This subclause specifies the general actions the UE shall perform when it detects "out of service" or "in service" area. The specific UE behaviour when it detects "out of service" or "in service area" and periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" is specified in subclause 8.3.1.

8.5.5.1 Detection of "out of service" area

The UE shall detect "out of service" area as defined in [19].

8.5.5.1.1 Actions following detection of "out of service" area in URA_PCH or CELL_PCH state

If the UE detects the "out of service area" and the UE is in URA_PCH or CELL_PCH state it shall perform the following actions:

- 1> start timer T316;
- 1> perform processes described in subclause 7.2.2.

8.5.5.1.2 Actions following detection of "out of service" area in CELL_FACH state

If the UE detects the "out of service area" and the UE is in CELL_FACH state it shall perform the following actions. The UE shall:

- 1> start timer T317 if not already running;
- 1> perform processes described in subclause 7.2.2.

8.5.5.1.3 Actions following detection of "out of service" area on transition from CELL_DCH to URA_PCH or CELL_PCH

If the UE detects the "out of service area" on transition from CELL_DCH to URA_PCH or CELL_PCH, it shall perform the following actions:

- 1> start timer T316;
- 1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";
- 1> perform processes described in subclause 7.2.2.

8.5.5.1.4 Actions following detection of "out of service" area on transition from CELL DCH to CELL FACH

If the UE detects the "out of service area" on transition from CELL_DCH to CELL_FACH, it shall perform the following actions:

- 1> if the transition is triggered by a reconfiguration procedure:
 - 2> start timer T317;
 - 2> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";
 - 2> perform processes described in subclause 7.2.2.
- 1> otherwise:
 - 2> perform processes described in subclause 7.2.2.

8.5.5.2 Detection of "in service" area

When a suitable cell is found based on the description in [4], the UE considers it as having detected "in service area".

8.5.5.2.1 Actions following Re-entry into "in service area" in URA_PCH or CELL_PCH state

If the UE re-enters "in service area" before T316 expiry the UE shall perform the following actions. The UE shall:

- 1> stop T316;
- 1> if T307 is active:
 - 2> stop T307.
- 1> if the UE is in CELL_PCH state and the UE is camped on a cell different from the one where service was lost:
 - 2> initiate the cell update procedure using the cause "cell-reselection" as specified in subclause 8.3.1.
- 1> perform processes described in subclause 7.2.2.

8.5.5.2.2 Actions following re-entry into "in service area" in CELL_FACH state

If the UE detects "in service area" before T317 expiry the UE shall perform the following actions. If no cell update procedure or URA update procedure is ongoing, the UE shall:

- 1> stop T317;
- 1> if T307 is active:
 - 2> stop T307.
- 1> initiate the cell update procedure using as cause "Re-entering service area" as specified in subclause 8.3.1;
- 1> perform processes described in subclause 7.2.2.

If a cell update procedure or URA update procedure is ongoing, the UE shall:

- 1> stop T317;
- 1> perform the actions as specified in 8.3.1.

8.5.5.3 T316 expiry

On T316 expiry the UE shall perform the following actions. The UE shall:

- 1> if "out of service area" is detected:
 - 2> start timer T317;
 - 2> move to CELL_FACH state;
 - 2> perform processes described in subclause 7.2.2.
- 1> if "in service area" is detected:
 - 2> initiate the cell update procedure using as cause "Re-entering service area" as specified in subclause 8.3.1;
 - 2> perform processes described in subclause 7.2.2.

8.5.5.4 T317 expiry

T317 shall never expire, i.e. all its values shall be assumed to be "infinity".

If T317 is running:

1> the UE behaviour shall be as specified in subclause 7.2.2.2.

8.5.6 Radio link failure criteria and actions upon radio link failure

In CELL_DCH State, after receiving N313 consecutive "out of sync" indications from layer 1 for the established DPCCH or F-DPCH physical channel in FDD, and the physical channels associated with mapped DCCHs in TDD, the UE shall:

- 1> start timer T313;
- 1> upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state:
 - 2> stop and reset timer T313.
- 1> if T313 expires:
 - 2> consider it as a "Radio link failure".

Periods in time where neither "in sync" nor "out of sync" is reported by layer 1 do not affect the evaluation of the number of consecutive (resp. successive) "in sync" or "out of sync" indications.

When a radio link failure occurs, the UE shall:

- 1> clear the dedicated physical channel configuration;
- 1> perform actions as specified for the ongoing procedure;
- 1> if no procedure is ongoing or no actions are specified for the ongoing procedure:
 - 2> perform a cell update procedure according to subclause 8.3.1 using the cause "radio link failure".

8.5.7 Open loop power control

For FDD and prior to PRACH transmission the UE shall:

- 1> acquire valid versions of the necessary System Information IEs as follows:
 - 2> if the UE has stored valid versions of the IEs "Primary CPICH Tx power" and "Constant value":
 - 3> use the stored content of the IEs.
 - 2> otherwise:
 - 3> read and store the IE "Primary CPICH Tx power" and "Constant value" in System Information Block type 6 (or System Information Block type 5 or System Information Block type 5bis, if System Information Block type 6 is not being broadcast).
 - 2> if the UE has a valid version of the IE "UL interference" stored:
 - 3> use the stored content of the IE "UL interference".
 - 2> otherwise:
 - 3> read and store the IE "UL interference" in System Information Block type 7;
 - 3> if the UE fails to read the IE "UL interference" in System Information Block type 7 due to bad radio conditions, the UE shall use the last stored IE "UL interference".
- 1> measure the value for the CPICH_RSCP;
- 1> calculate the power for the first preamble as:

 $\label{eq:preamble_Initial_Power} Primary\ CPICH\ TX\ power - CPICH_RSCP + UL\ interference + Constant\ Value \\ Where.$

Primary CPICH TX power shall have the value of IE "Primary CPICH Tx power",

UL interference shall have the value of IE "UL interference"; and

Constant Value shall have the value of IE "Constant value".

1> as long as the physical layer is configured for PRACH transmission:

- 2> continuously recalculate the Preamble_Initial_Power when any of the broadcast parameters used in the above formula changes; and
- 2> resubmit to the physical layer the new calculated Preamble_Initial_Power.

For 3.84 Mcps TDD or 7.68 Mcps TDD the UE shall:

- 1> if in the IE "Uplink DPCH Power Control info" the "CHOICE UL OL PC info" has the value "Broadcast UL OL PC info":
 - 2> prior to DPCH transmission the UE shall:
 - 3> acquire valid versions of the necessary System Information IEs as follows:
 - 4> if the UE has stored valid versions of the IEs "Primary CCPCH Tx power" and "DPCH Constant value":
 - 5> use the stored content of the IEs.
 - 4> otherwise:
 - 5> read and store the IE "Primary CCPCH Tx power" and "DPCH Constant value" in System Information Block type 6 (or System Information Block type 5, if System Information Block type 6 is not being broadcast).
 - 3> if the UE has a valid version of the IE "UL interference" for each active UL timeslot stored:
 - 4> use the stored content of the IE "UL interference" for each active UL timeslot.
 - 3> otherwise:
 - 4> read and store the IE "UL Timeslot Interference" for each active UL timeslot in System Information Block type 14;
 - 4> if the UE fails to read the IE "UL Timeslot Interference" for each active UL time slot in System Information Block type 14 due to bad radio conditions, the UE shall use the last stored IE "UL Timeslot interference" for each active UL timeslot.

1> otherwise:

- 2> acquire Reference Power, Constant Values and I_{BTS} for all active UL timeslots from the IE "Uplink DPCH Power Control info".
- 1> for PUSCH, PRACH and HS-SICH power control:
 - 2> prior to PUSCH or PRACH transmission the UE shall:
 - 3> acquire valid versions of the necessary System Information IEs as follows:
 - 4> if the UE has stored valid versions of the IEs "Primary CCPCH Tx power" and "PUSCH Constant value" for PUSCH transmissions or "PRACH Constant value" for PRACH transmissions:
 - 5> use the stored content of the IEs.
 - 4> otherwise:
 - 5> read and store the IE "Primary CCPCH Tx power" and "PUSCH Constant value" for PUSCH transmissions or "PRACH Constant value" for PRACH transmissions in System Information Block type 6 (or System Information Block type 5, if System Information Block type 6 is not being broadcast).
 - 3> if the UE has a valid version of the IE "UL interference" for each active UL timeslot stored:
 - 4> use the stored content of the IE "UL interference" for each active UL timeslot.
 - 3> otherwise:

- 4> read and store the IE "UL Timeslot Interference" for each active UL timeslot in System Information Block type 14;
- 4> if the UE fails to read the IE "UL Timeslot Interference" for each active UL time slot in System Information Block type 14 due to bad radio conditions, the UE shall use the last stored IE "UL Timeslot interference" for each active UL timeslot.

calculate the UL transmit power according to the following formula for the PRACH continuously while the physical channel is active:

$$P_{PRACH} = L_{PCCPCH} + I_{BTS} + PRACH$$
 Constant value,

- 2> 3dB shall be added to RACH Constant Value in the above equation for the case where RACH Spreading Factor = 8:
- 2> for 7.68 Mcps TDD, 3dB shall be added to RACH Constant Value in the above equation for the case where RACH Spreading Factor = 16.
- 1> calculate the UL transmit power according to the following formula for the DPCH continuously while the physical channel is active:

$$P_{DPCH} = \alpha L_{PCCPCH} + (1-\alpha)L_0 + I_{BTS} + SIR_{TARGET} + DPCH$$
 Constant value

1> calculate the UL transmit power according to the following formula for the PUSCH continuously while the physical channel is active:

$$P_{PUSCH} = \alpha L_{PCCPCH} + (1-\alpha)L_0 + I_{BTS} + SIR_{TARGET} + PUSCH Constant value$$

1> calculate the initial UL transmit power for HS-SICH according to the following formula:

$$P_{\text{HS-SICH}} = \alpha L_{PCCPCH} + (1-\alpha)L_0 + I_{BTS} + SIR_{TARGET} + HS-SICH Constant value$$

Where, for all the above equations for 3.84 Mcps TDD or 7.68 Mcps TDD the following apply:

- $P_{\text{PRACH,}}\,P_{\text{DPCH}},P_{\text{PUSCH}}$ and $P_{\text{HS-SICH}}\!:$ Transmitter power level in dBm;
- Pathloss values:
 - L_{PCCPCH}: Measurement representing path loss in dB based on beacon channels (the reference transmit power is signalled as the value of the IE "Primary CCPCH Tx Power" on BCH in System Information Block type 6 (or System Information Block type 5, according to subclause 8.1.1.6.5), or individually signalled in the IE" Uplink DPCH Power Control info").
 - L₀: Long term average of path loss in dB;
 - If the midamble is used in the evaluation of L_{PCCPCH} and L₀, and the Tx diversity scheme used for the P-CCPCH involves the transmission of different midambles from the diversity antennas, the received power of the different midambles from the different antennas shall be combined prior to evaluation of the variables.
- I_{BTS}: Interference signal power level at cell's receiver in dBm. I_{BTS} shall have the value of the IE "UL
 Timeslot Interference" (IE "UL Timeslot Interference" is broadcast on BCH in System Information Block
 type 14 or individually signalled to each UE in the IE "Uplink DPCH Power Control info" for each active
 uplink timeslot).
- α : α is a weighting parameter, which represents the quality of path loss measurements. α may be a function of the time delay between the uplink time slot and the most recent down link PCCPCH time slot. α is calculated at the UE. α shall be smaller or equal to the value of the IE "Alpha". If the IE "Alpha" is not explicitly signalled to the UE α shall be set to 1. If UE is capable of estimating its position by using the OTDOA IPDL method, the UE shall use the IPDL- α parameter.
- SIR_{TARGET}: Target SNR in dB. This value is individually signalled to UEs in IE "UL target SIR" in IE "Uplink DPCH Power Control Info" or in IE "PUSCH Power Control Info" or in IE "HS-SICH Power Control Info".

- PRACH Constant value: PRACH Constant value shall have the value of the IE "PRACH Constant value".
- DPCH Constant value: DPCH Constant value shall have the value of the IE "DPCH Constant value".
- PUSCH Constant value: PUSCH Constant value shall have the value of the IE "PUSCH Constant value".
- HS-SICH Constant value: HS-SICH Constant value shall have the value of the IE "HS-SICH Constant value".
- Values received by dedicated signalling shall take precedence over broadcast values.
- If IPDLs are applied, the UE may increase UL Tx power by the value given in the IE "Max power increase". This power increase is only allowed in the slots between an idle slot and the next beacon slot.

For 1.28 Mcps TDD the UE shall:

1> acquire valid versions of the necessary System Information IEs as follows:

- 2> if the UE has stored a valid version of the IE "Primary CCPCH Tx Power":
 - 3> use the stored content of the IE.
- 2> otherwise:
 - 3> read and store the IE "Primary CCPCH Tx Power" from System Information Block type 6 (or System Information Block type 5, if System Information Block type 6 is not being broadcast).
- 1> calculate the UL transmit power according to the following formula for each UpPCH code transmission:

$$P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} + (i-1)* Pwr_{ramp}$$

NOTE: When i equals 1, the initial signature power "Signature_Initial_Power" defined in [33] corresponds to P_{UnPCH} with i set to 1.

1> calculate the UL transmit power according to the following formula for each PRACH transmission:

$$P_{PRACH} = L_{PCCPCH} + PRX_{PRACHdes} + (i_{UpPCH}-1) * Pwr_{ramp}$$

1> calculate the initial UL transmit power according to the following formula for the PUSCH. Once the UE receives TPC bits relating to the PUSCH then it transitions to closed loop power control. If successive PUSCH resource allocations are contiguous then no return is made to open loop power control at the beginning of the succeeding resource allocation.

$$P_{USCH} = PRX_{PUSCHdes} + L_{PCCPCH}$$

1> calculate the initial UL transmit power for HS-SICH according to the following formula:

$$P_{HS\text{-}SICH} = PRX_{HS\text{-}SICH} + L_{PCCPCH}$$

1> calculate the initial UL transmit power according to the following formula for the DPCH. Once the UE receives TPC bits relating to the uplink DPCH then it transitions to closed loop power control.

$$P_{DPCH} = PRX_{DPCHdes} + L_{PCCPCH}$$

Where:

- P_{UpPCH} , P_{PRACH} , P_{DPCH} , $P_{HS-SICH}$ & P_{USCH} : Transmitter power level in dBm.
- L_{PCCPCH}: Measurement representing path loss in dB (reference transmit power "Primary CCPCH Tx Power" is broadcast on BCH in System Information Block type 5 and System Information Block type 6, or individually signalled to each UE in the IE" Uplink DPCH Power Control info").
- i is the number of transmission attempts on UpPCH, i=1...Max SYNC_UL Transmissions.
- i_{UpPCH} is the final value of i.

- PRX_{PRACHdes}: Desired PRACH RX power at the cell's receiver in dBm signalled to the UE by the network in the FPACH response to the UE's successful SYNC_UL transmission.
- PRX_{UpPCHdes}: Desired UpPCH RX power at the cell's receiver in dBm. The value is broadcast in
 "PRX_{UpPCHdes}" in IE "SYNC_UL info" on BCH and shall be read on System Information Block type 5 and
 System Information Block type 6. It can also be signalled directly to the UE in IE "Uplink Timing Advance
 Control" contained in a protocol message triggering a hard handover or a transition from cell FACH to cell
 DCH state.
- PRX_{PUSCHdes}: Desired PUSCH RX power at the cell's receiver in dBm signalled to the UE in IE "PUSCH Power Control Info".
- PRX_{DPCHdes}: Desired DPCH RX power at the cell's receiver in dBm signalled to the UE in IE "Uplink DPCH Info" and IE "Uplink DPCH Power Control Info".
- Pwr_{ramp}: The UE shall increase its transmission power by the value of the IE "Power Ramp step" by every UpPCH transmission. Its value is signalled in the IE "SYNC UL info" in System Information Block type 5 and System Information Block type 6 or is signalled to the UE in the IE "Uplink Timing Advance Control" contained in a protocol message triggering a hard handover or a transition from cell FACH state to cell DCH state.
- PRX_{HS-SICH}: Desired HS-SICH RX power at the cell's receiver in dBm signalled to the UE in IE "Downlink HS-PDSCH Information".
- Ack-Nack Power Offset: Difference in the desired RX power between HS-SICH transmissions conveying an acknowledgement and transmissions conveying a negative acknowledgement signalled to the UE in IE "HS-SCCH Info".

8.5.8 Maintenance of Hyper Frame Numbers

The MSBs of both the ciphering sequence numbers (COUNT-C) and integrity sequence numbers (COUNT-I), for the ciphering and integrity protection algorithms, respectively [40], are called the Hyper Frame Numbers (HFN).

For integrity protection, the UE shall:

1> maintain COUNT-I as specified in subclause 8.5.10.

The following hyper frame numbers types are defined:

MAC-d HFN:

24 MSB of COUNT-C for data sent over RLC TM

RLC UM HFN:

25 MSB of COUNT-C for data sent over RLC UM

RLC AM HFN:

20 MSB of COUNT-C for data sent over RLC AM

RRC HFN:

28 MSB of COUNT-I

For non-transparent mode RLC signalling radio bearers and radio bearers, the UE shall:

- 1> maintain one uplink and one downlink COUNT-C per signalling radio bearer and per radio bearer and one uplink and one downlink COUNT-I per signalling radio bearer;
- 1> increment the RLC UM HFN and RLC AM HFN in uplink and downlink by one each time the RLC sequence number wraps around in uplink and downlink respectively;
- 1> if the activation time for a new ciphering configuration set by an RRC procedure is equal to zero:
 - 2> apply the configured RLC UM HFN or RLC AM HFN at this activation time, i.e. the configured HFN is not incremented.

NOTE: On the receiver side it may happen that the RLC PDU with sequence number equal to the activation time is lost and the first received PDU after the activation time implies a wrap around of the sequence number compared to the activation time. In this case the configured HFN is incremented by one. This action is taken only when the activation time is set to a RLC PDU sequence number value other than zero.

For all transparent mode RLC signalling radio bearers and radio bearers of each CN domain, the UE shall:

- 1> maintain one COUNT-C, common for all radio bearers in uplink and downlink;
- 1> increment the MAC-d HFN by one each time the CFN wraps around;
- 1> if the activation time for a new ciphering configuration set by an RRC procedure is equal to zero:
 - 2> apply the configured MAC-d HFN at this activation time, i.e. the configured HFN is not incremented.
- 1> maintain one uplink and one downlink COUNT-I per signalling radio bearer.

NOTE: In this release of the specification there is only an uplink transparent mode COUNT-I, which is used for signalling radio bearer RB0.

COUNT-C and COUNT-I are defined in [40], with the following supplement for COUNT-C: for transparent mode RLC radio bearers with a transmission time interval of x radio frames (x = 2, 4, 8), the MAC PDU is carried by L1 in x consecutive radio frames due to radio frame segmentation. In this case, the CFN of the first radio frame in the TTI shall be used as the CFN component of COUNT-C for ciphering of all data in the TTI [15].

8.5.9 START value calculation

In connected mode, if a security mode command procedure has been successfully completed for a CN domain during the current RRC connection, the START value for that CN domain is calculated as:

Let $START_X$ = the START value for CN domain 'X' prior to the calculation below:

 $START_{X'} = MSB_{20}$ (MAX {COUNT-I | radio bearers and signalling radio bearers using the most recently configured CK_{X} and IK_{X} }) + 2.

- if $START_X$ '= the maximum value = 1048575 then $START_X$ = $START_X$ ';
- if the current $START_X < START_X$ ' then $START_X = START_X$ ', otherwise $START_X$ is unchanged.

NOTE: Here, "most recently configured" means that if there is more than one key in use for a CN domain, due to non-expiry of the ciphering and/or integrity protection activation time for any signalling radio bearers and/or radio bearers, do not include the COUNT-I/COUNT-C for these signalling radio bearers and/or radio bearers in the calculation of the START x'.

COUNT-C corresponding to non-ciphered radio bearers (i.e. RBs with ciphering status set to "not started") shall not be included in the calculation of the $START_{X}$ '. If a radio bearer is released and the radio bearer was ciphered, the values of the COUNT-C at the time the radio bearer is released shall be taken into account in the calculation of the $START_{X}$ '.

If a security mode command procedure has not been successfully completed for a CN domain during the current RRC connection, the UE shall use the latest transmitted START value for this CN domain.

8.5.10 Integrity protection

If the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" then the UE shall:

1> perform integrity protection (and integrity checking) on all RRC messages, with the following exceptions:

HANDOVER TO UTRAN COMPLETE

PAGING TYPE 1

PUSCH CAPACITY REQUEST

PHYSICAL SHARED CHANNEL ALLOCATION

RRC CONNECTION REQUEST

RRC CONNECTION SETUP

RRC CONNECTION SETUP COMPLETE

RRC CONNECTION REJECT

RRC CONNECTION RELEASE (CCCH only)

SYSTEM INFORMATION

SYSTEM INFORMATION CHANGE INDICATION

TRANSPORT FORMAT COMBINATION CONTROL (TM DCCH only)

If the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Not started" then integrity protection (and integrity checking) shall not be performed on any RRC message.

For each signalling radio bearer, the UE shall use two RRC hyper frame numbers:

- "Uplink RRC HFN";
- "Downlink RRC HFN".

and two message sequence numbers:

- "Uplink RRC Message sequence number";
- "Downlink RRC Message sequence number".

The above information is stored in the variable INTEGRITY_PROTECTION_INFO per signalling radio bearer (RB0-RB4).

Upon the first activation of integrity protection for an RRC connection, UE and UTRAN initialise the "Uplink RRC Message sequence number" and "Downlink RRC Message sequence number" for all signalling radio bearers as specified in subclauses 8.6.3.5 and 8.5.10.1.

The RRC message sequence number (RRC SN) is incremented for every integrity protected RRC message.

If the IE "Integrity Protection Mode Info" is present in a received message, the UE shall:

1> perform the actions in subclause 8.6.3.5 before proceeding with the integrity check of the received message.

8.5.10.1 Integrity protection in downlink

If the UE receives an RRC message on signalling radio bearer with RB identity n, the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is present the UE shall:

- 1> check the value of the IE "RRC message sequence number" included in the IE "Integrity check info";
 - 2> if the "Downlink RRC Message sequence number" is not present in the variable INTEGRITY_PROTECTION_INFO:
 - 3> initialise the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with the value of the IE "RRC message sequence number" included in the IE "Integrity check info" of the received message.
 - 2> if the "Downlink RRC Message sequence number" is present in the variable INTEGRITY_PROTECTION_INFO:
 - 3> if the RRC message sequence number is lower than the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY PROTECTION INFO:
 - 4> increment "Downlink RRC HFN" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with one.

- NOTE: The actions above imply that also for the case the "Downlink RRC HFN" is re-initialised by a security mode control procedure, this "Downlink RRC HFN" value is incremented by one before it is applied for the integrity protection of any received message if the conditions above are fulfilled.
 - 3> if the RRC message sequence number is equal to the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO:
 - 4> discard the message.
- 1> calculate an expected message authentication code in accordance with subclause 8.5.10.3;
- 1> compare the expected message authentication code with the value of the received IE "message authentication code" contained in the IE "Integrity check info";
 - 2> if the expected message authentication code and the received message authentication code are the same, the integrity check is successful:
 - 3> update the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with the value of the IE "RRC message sequence number" included in the IE "Integrity check info" of the received RRC message.
 - 2> if the calculated expected message authentication code and the received message authentication code differ:
 - 3> act as if the message was not received.

If the UE receives an RRC message on signalling radio bearer with identity 0, 1, or 2, the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is not present the UE shall:

1> discard the message.

If the UE receives an RRC message on signalling radio bearer with identity 3 or 4, the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is not present:

- 1> if a security mode command procedure has not been successfully completed during the current RRC connection for the CN domain indicated by IE "CN Domain Identity" in the received message:
 - 2> the UE shall forward the message to upper layer.
- 1> else:
 - 2> the UE shall discard the message.

UTRAN may transmit several copies of the same message in the downlink to increase the probability of proper reception of the message by the UE. In such a case, the RRC SN for these repeated messages should be the same.

8.5.10.2 Integrity protection in uplink

Prior to sending an RRC message using the signalling radio bearer with radio bearer identity n, and the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" the UE shall:

- 1> increment "Uplink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with 1, even if the message is a retransmission of a previously transmitted message.
- 1> if the "Uplink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO equals zero:
 - 2> increment "Uplink RRC HFN" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO by one.
- NOTE 1: The actions above imply that also for the case the "Uplink RRC HFN" is re-initialised by a security mode control procedure, this "Uplink RRC HFN" is incremented before it is applied in the integrity protection of any transmitted message if the conditions above are fulfilled.

- NOTE 2: For SRB0, this is also valid in case the Message Sequence Number has been increased by N302 +2 resulting in an MSN which equals 0 (i.e.: SRB0 UL activation time equals 0). Then the uplink RRC HFN is incremented by 1 after it is re-initialized and before it is applied in the integrity protection of any transmitted message.
- 1> calculate the message authentication code in accordance with subclause 8.5.10.3;
- 1> replace the "Message authentication code" in the IE "Integrity check info" in the message with the calculated message authentication code;
- 1> replace the "RRC Message sequence number" in the IE "Integrity check info" in the message with contents set to the new value of the "Uplink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO.

In the response message for the procedure ordering the security reconfiguration, the UE indicates the activation time, for each signalling radio bearer. When the new integrity configuration is to be applied in uplink, UTRAN should start to apply the new integrity protection configuration according to the activation time for each signalling radio bearer (except for the signalling radio bearer which is used to send the message that is reconfiguring the security configuration where the new configuration is to be applied starting from and including reception of the response message).

8.5.10.3 Calculation of message authentication code

The UE shall calculate the message authentication code in accordance with [40]. The input parameter MESSAGE [40] for the integrity algorithm shall be constructed by:

- 1> setting the "Message authentication code" in the IE "Integrity check info" in the message to the value of the IE "RB identity" for the signalling radio bearer;
- 1> setting the "RRC Message sequence number" in the IE "Integrity check info" in the message to zero;
- 1> encoding the message;
- 1> appending RRC padding (if any) as a bit string to the encoded bit string as the least significant bits.

For usage on an RRC message transmitted or received on the radio bearer with identity n, the UE shall:

- 1> construct the input parameter COUNT-I [40] by appending the following IEs from the IE "Signalling radio bearer specific integrity protection information" for radio bearer n in the variable INTEGRITY_PROTECTION_INFO:
 - 2> for uplink:
 - 3> "Uplink RRC HFN", as the MSB, and "Uplink RRC Message sequence number", as LSB.
 - 2> for downlink:
 - 3> "Downlink RRC HFN", as the MSB, and the IE "RRC message sequence number" included in the IE "Integrity check info", as LSB.

8.5.11 FACH measurement occasion calculation

When in CELL_FACH state and when the variable C_RNTI is non-empty the UE in FDD mode shall perform measurements as specified in subclauses 8.4.1.6 and 8.4.1.9 during the frame(s) with the SFN value fulfilling the following equation:

SFN div
$$N = C_RNTI \mod M_REP + n * M_REP$$

where

- N is the TTI (in number of 10ms frames) of the FACH having the largest TTI on the SCCPCH selected by the UE according to the procedure in subclause 8.5.19. FACHs that only carry MBMS logical channels (MTCH, MSCH, or MCCH) are excluded from measurement occasion calculations.
- C_RNTI is the C-RNTI value of the UE stored in the variable C_RNTI

- M_REP is the Measurement Occasion cycle length. According to the equation above, a FACH Measurement Occasion of N frames will be repeated every $N * M_REP$ frame, and $M_REP = 2^k$.

where,

- k is the FACH Measurement occasion cycle length coefficient.

 The value of the FACH Measurement occasion cycle length coefficient is read in system information in "System Information Block type 11" or "System Information Block type 12" in the IE "FACH measurement occasion info".
- n = 0,1,2... as long as SFN is below its maximum value

The UE is allowed to measure on other occasions in case the UE moves "out of service" area or in case it can simultaneously perform the ordered measurements.

A UE in TDD mode shall use the frame(s) with the SFN value fulfilling the above equation for neighbour cells measurements.

NOTE: For FDD, in order to meet the MBMS demodulation performance requirements [21], a UE receiving MBMS PTM may not be able use the entire measurement occasion.

8.5.12 Establishment of Access Service Classes

The PRACH resources (i.e. access slots and preamble signatures for FDD), timeslot (with specific frame allocation and channelisation code for 3.84 Mcps TDD and 7.68 Mcps TDD, and SYNC_UL codes (with specific frame allocation) for 1.28 Mcps TDD) may be divided between different Access Service Classes in order to provide different priorities of RACH usage. It is possible for more than one ASC or for all ASCs to be assigned to the same access slot/signature space in FDD or frame allocation/channelisation codes in 3.84 Mcps TDD or 7.68 Mcps TDD, or frame allocation/SYNC_UL codes in 1.28 Mcps TDD.

Access Service Classes shall be numbered in the range $0 \le i \le \text{NumASC} \le 7$ (i.e. the maximum number of ASCs is 8). An ASC is defined by an identifier, i, that defines a certain partition of the PRACH resources (SYNC_UL resources in 1.28 Mcps TDD) and an associated persistence value P_i . A set of ASC parameters consists of "NumASC+1" such parameters (i, P_i) , i = 0, ..., NumASC.

PRACH partitions shall be established using the information element "PRACH partitioning". The persistence values P_i to be associated with each ASC shall be derived from the dynamic persistence level N = 1, ..., 8 which is broadcast in System Information Block 7, and the persistence scaling factors s_i , broadcast in System Information Block Type 5 or System Information Block type 5 bis and possibly also in System Information Block Type 6, as follows:

$$P(N) = 2^{-(N-1)}$$

ASC # i	0	1	2	3	4	5	6	7
Pi	1	P(N)	s ₂ P(N)	s ₃ P(N)	s ₄ P(N)	s ₅ P(N)	s ₆ P(N)	s ₇ P(N)

In addition, MBMS specific persistence values may be provided within the MBMS MODIFIED SERVICES INFORMATION message. The UE behaviour upon receiving upon receiving an MBMS dynamic persistence value is specified in subclause 8.6.9.1a.

Scaling factors s_i are provided optionally for i = 2,..., NumASC, where NumASC+1 is the number of ASCs as defined by PRACH partitioning. If no scaling factors are broadcast, default value 1 shall be used if NumASC ≥ 2 .

If $k \ge 1$ scaling factors are broadcast and NumASC $\ge k+2$ then the last scaling factor s_{k+1} shall be used as default for the ASCs where i > k+1.

The set of ASC parameters is provided to MAC with the CMAC-Config-REQ primitive (see [15]), the PRACH partitioning is provided to PHY using the CPHY-RL-Setup-REQ primitive (see [34]).

The ASC enumeration shall be such that it corresponds to the order of priority (ASC 0 = highest priority, ASC 7 = lowest priority). ASC 0 shall be used in case of Emergency Call or for reasons with equivalent priority.

ASCs are numbered according to the order in which the IEs "ASC Setting" appear in the IE "PRACH partitioning", where the first IE "ASC Setting" describes ASC 0, the second IE "ASC Setting" describes ASC 1, etc.

At radio bearer setup/reconfiguration each involved logical channel is assigned a MAC Logical channel Priority (MLP) in the range 1,...,8. When the MAC sublayer is configured for RACH transmission in the UE, these MLP levels shall be employed for ASC selection on MAC.

8.5.13 Mapping of Access Classes to Access Service Classes

Access Classes shall only be applied at initial access, i.e. when sending an RRC CONNECTION REQUEST message. A mapping between Access Class (AC) and Access Service Class (ASC) shall be indicated by the information element "AC-to-ASC mapping" in System Information Block type 5 or System Information Block type 5bis. The correspondence between AC and ASC shall be indicated as follows.

AC	0 - 9	10	11	12	13	14	15
ASC	1 st IE	2 nd IE	3 rd IE	4 th IE	5 th IE	6 th IE	7 th IE

In the table, " n^{th} IE" designates an ASC number i in the range 0 - 7 to AC. If the ASC indicated by the " n^{th} IE" is undefined, the UE behaviour is unspecified.

For the random access, the parameters implied by the respective ASC shall be employed. In case the UE is member of several ACs it shall select the ASC for the highest AC number. In connected mode, AC shall not be applied.

8.5.14 PLMN Type Selection

Depending on UE configuration, the UE is operating in "ANSI-41 mode" or "GSM-MAP mode".

8.5.14a Neighbour cells list narrowing for cell reselection

While a UE is camping on a suitable cell, a UE having performed the PLMN identification of the neighbour cells as specified in subclause 8.1.1.6.18 shall narrow the cell list to be used for cell reselection ([4]) to those neighbour cells for which:

The PLMN identity is part of the PLMNs that can make a cell suitable as defined in [4].

8.5.15 CFN calculation

The DOFF used in the formulas in this clause concerns the value of IE "Default DPCH Offset Value" received in the message that instructs the UE to enter CELL_DCH state or to perform timing re-initialised hard handover.

Subclause 8.5.15.5 is used in FDD to initialise the CFN for MTCH and/or MSCH if the IE "MBMS Soft Combining Timing Offset" is included for an S-CCPCH in MBMS CURRENT CELL P-T-M RB INFORMATION or MBMS NEIGHBOURING CELL P-T-M RB INFORMATION, and if only MTCH and/or MSCH are on the S-CCPCH. Otherwise, subclauses 8.5.15.1 through 8.5.15.4 are used to intialise the CFN.

8.5.15.1 Initialisation for CELL_DCH state after state transition

When the UE receives any of the messages causing the UE to perform a state transition to CELL_DCH, the UE shall set the CFN in relation to the SFN of the first radio link listed in the IE "Downlink information per radio link list" included in that message according to the following formula:

- for FDD:

 $CFN = (SFN - (DOFF \text{ div } 38400)) \mod 256$

where the formula gives the CFN of the downlink DPCH or F-DPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN. DOFF is determined according to subclause 8.6.6.14.

- for TDD:

 $CFN = (SFN - DOFF) \mod 256$.

8.5.15.2 Initialisation in CELL_DCH state at hard handover

When the UE is in CELL_DCH state and receives any of the messages causing the UE to perform a hard handover, the UE shall check the IE "Timing indication" in that message and:

- 1> if IE "Timing indication" has the value "initialise" (i.e. timing re-initialised hard handover):
 - 2> read SFN on target cell identified by the first radio link listed in the IE "Downlink information per radio link list" included in that message;
 - 2> set the CFN according to the following formula:

3> for FDD:

where the formula gives the CFN of the downlink DPCH or F-DPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

3> for TDD:

$$CFN = (SFN - DOFF) \mod 256$$
.

1> if IE "Timing indication" has the value "maintain" (i.e. timing-maintained hard handover), the UE shall keep CFN with no change due to the hard handover, and only increase CFN (mod 256) by 1 every frame.

8.5.15.3 Initialisation for CELL_FACH

Unless the conditions of subclause 8.15.5.5 are met, when the UE performs cell selection, re-selection or changes to CELL_FACH state the UE shall set CFN for all common or shared channels according to:

$$CFN = SFN \mod 256$$

where the formula gives the CFN of the downlink common or shared channel frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

After the initialisation, the CFN in the UE is increased (mod 256) by 1 every frame.

8.5.15.4 Initialisation after intersystem handover to UTRAN

Upon inter RAT handover to UTRAN the UE shall, regardless of the value received within IE "Timing indication" (if received):

1> read SFN on target cell and set the CFN according to the following formula:

2> for FDD:

$$CFN = (SFN - (DOFF \text{ div } 38400)) \mod 256$$

where the formula gives the CFN of the downlink DPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

2> for TDD:

$$CFN = (SFN - DOFF) \mod 256$$
.

8.5.15.5 Initialisation for MTCH and/or MSCH carried on S-CCPCH that may be soft combined

For FDD, if the IE "MBMS Soft Combining Timing Offset" is included for an S-CCPCH in MBMS CURRENT CELL P-T-M RB INFORMATION or MBMS NEIGHBOURING CELL P-T-M RB INFORMATION, and if only MTCH and/or MSCH are on the S-CCPCH, the UE shall set CFN for the S-CCPCH according to:

$$CFN = (SFN - (SCTO \text{ div } 10\text{ms})) \text{ mod } 256$$

where the formula gives the CFN of the downlink S-CCPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

the SCTO used in the formula is the IE "MBMS Soft Combining Timing Offset".

After the initialisation, the CFN in the UE is increased (mod 256) by 1 every frame.

8.5.16 Configuration of CTCH occasions

The CTCH, carrying CBS data is mapped onto only one S-CCPCH. If more than one CTCH is defined, the first CTCH that is configured in the list of S-CCPCHs is the one that is used for CBS data. If the UE is in connected mode it shall ignore any CTCH configuration contained in System Information Block type 6 and use the CTCH configuration contained in System Information Block 5.

The CTCH occasions are identified by the first radio frame of the TTI that can contain CTCH data. The CTCH occasions are fixed on the system frame number cycle 0 .. 4095 (i.e. no modulo calculation) and thus repeated cyclically.

The CTCH occasions are determined by a set of parameters.

M_{TTI}: number of radio frames within the TTI of the FACH used for CTCH

N: period of CTCH allocation on S-CCPCH, integer number of radio frames, $M_{TTI} \le N \le 256$, where N is a multiple of M_{TTI} (see [27] and [31]).

MaxSFN: maximum system frame number = 4095 (see [10]).

K: CBS frame offset, integer number of radio frames $0 \le K \le N-1$ where K is a multiple of M_{TTI} .

The CTCH occasions are calculated as follows:

SFN = (K + m N), m = 0, 1,..., M, with M chosen that $K+MN \le MaxSFN$.

The parameters N and K are broadcast as system information.

If the IE "Period of BMC scheduling messages (P)" is included in System Information Block type 5 or System Information Block type 5 bis then BMC Schedule Messages are transmitted periodically every P CTCH occasions. One BMC Schedule Message may be segmented across more than one CTCH occasion. The CTCH occasions that contain the start of the BMC Schedule Messages are calculated as follows:

SFN =
$$(K + m P N)$$
, where m is an integer and $0 \le SFN \le MaxSFN$

If the IE "Period of BMC scheduling messages (P)" is not included in system information block type 5 then BMC Schedule Messages could be transmitted in any CTCH occasion.

8.5.17 PRACH selection

For this version of the specification, when a UE selects a cell, the uplink frequency to be used for the initial PRACH transmission shall have a default duplex frequency spacing offset from the downlink frequency that the cell was selected on. The default duplex frequency separation to be used by the UE is specified in [21] for each frequency band (for FDD only).

NOTE: The PRACH selection scheme assumes that all PRACHs configured in System Information Block type 5, System Information Block type 5bis and System Information Block type 6 support all (implicitly or explicitly) configurable RLC sizes of the cell, i.e. at least the transport formats corresponding to a single transport block of each applicable RLC size of the cell must be defined for each PRACH.

The UE shall select a "PRACH system information" according to the following rule. The UE shall:

- 1> select a "PRACH system information" from the ones indicated in the IE "PRACH system information list" in System Information Block type 5 or in System Information Block type 5bis (applicable in Idle Mode and Connected Mode) or System Information Block type 6 (applicable in Connected Mode only), as follows:
 - 2> if in connected mode and System Information Block type 6 is defined and includes PRACH info:

3> compile a list of candidate PRACHs that consists of the PRACH system information listed in System Information Block 6, in the order of appearance as in System Information Block 6.

2>otherwise:

- 3> compile a list of candidate PRACHs that consists of the PRACH system information listed in System Information Block 5 or in System Information Block 5bis, in the order of appearance as in System Information Block 5 or in System Information Block 5bis, respectively.
- 2> in FDD:
 - 3> perform RACH TTI selection as specified in subclause 8.5.18.1.
- 2> in 1.28 Mcps TDD:
 - 3> perform RACH TTI selection according to subclause 8.5.18.2.
- 2> remove from the list of candidate PRACHs those PRACHs that have a TTI length different from the selected value:
- 2> select a PRACH randomly from the list of candidate PRACHs as follows:

"Index of selected PRACH" = floor (rand * K)

where K is equal to the number of candidate PRACH system informations, "rand" is a random number uniformly distributed in the range $0 \le \text{rand} < 1$ and "floor" refers to rounding down to nearest integer. The candidate PRACH system informations shall be indexed from 0 to K-1. The random number generator is left to implementation. The scheme shall be implemented such that one of the available PRACH system informations is randomly selected with uniform probability. At start-up of the random number generator in the UE the seed shall be dependent on the IMSI of the UE or time, thereby avoiding that all UEs select the same RACH;

- 2> use the TFCS of the selected PRACH when performing TFC selection (see [15]);
- 2> reselect the PRACH system information when a new cell is selected. RACH reselection may also be performed after each transmission of a Transport Block Set on RACH.
- 1> for emergency call, the UE is allowed to select any of the available PRACH system informations.

After selecting a PRACH system information, the RRC in the UE shall configure the MAC and the physical layer for the RACH access according to the parameters included in the selected "PRACH system information" IE.

8.5.18 Selection of RACH TTI

8.5.18.1 FDD

In FDD mode, a RACH may employ either 10 or 20 ms TTI. The supported TTI is indicated as a semi-static parameter of the RACH Transport Format in system information. The UE shall select an appropriate TTI length from the RACHs included in the list of candidate PRACH(s) according to the following rule.

The UE shall:

- 1> if only RACHs with one particular TTI length are included in the list of candidate PRACH(s):
 - 2> select this TTI length and proceed as specified in subclause 8.5.17.
- 1> if both PRACHs with 10ms and 20ms TTI lengths are included in the list of candidate PRACH(s):
 - 2> perform TTI selection as follows:
 - 3> when the UE calculates the initial preamble transmit power ("Preamble_Initial_Power") as specified in subclause 8.5.7:
 - 4> select a TF to be employed for calculation of a transmit power margin as follows:

- 5> from the TFs supported by all candidate PRACHs keep those which correspond to a single transport block of all configured RLC sizes (i.e., in idle mode, the RLC size applicable for RB0, in connected mode, the RLC sizes configured with explicit "RB mapping info"). If more than a single TF remain applicable, the UE may select any of these. Preferably the UE should select the TF which is intended to be used at the next transmission or, if such information is not available, the TF corresponding to the largest configured RLC size.
- 4> calculate a transmit power margin,

```
\begin{aligned} & \text{Margin} = \{ \text{min}(\text{Maximum allowed UL tx power, P\_MAX}) - \text{max}(\text{Preamble\_Initial\_Power, P-max}) \\ & \text{Preamble\_Initial\_Power} + \Delta \text{Pp-m} + 10* \text{log}_{10} (1 + (\beta_d/\beta_c)^2) \} \end{aligned}
```

where "Maximum allowed UL tx power" is the maximum allowed uplink transmit power indicated in system information (in dBm), and P_MAX is the maximum RF output power of the UE (dBm). The margin shall be calculated for the gain factors β_d and β_c of the TF selected in the step above, using 10ms TTI length.

- NOTE 1: the expression Preamble_Initial_Power + $\Delta Pp-m + 10*log_{10}(1 + (\beta_d/\beta_c)^2)$ represents the total RACH message power if the message would be sent after the initial preamble.
- NOTE 2: For all PRACHs with the same TTI the UTRAN should set each of the IEs "Primary CPICH TX power", "Constant value" to the same value, and within these PRACH configurations, the UTRAN should, for all TFs including a single TB, set each of the IEs "Gain Factor β_c ", "Gain Factor β_d " and "Power offset P pm" to the same value. If these guidelines are not followed, the UE behaviour is unspecified.
- 3> if the resulting "Margin" value is less than 6 dB:
 - 4> select RACH with 20 ms TTI, and proceed as specified in subclause 8.5.17.
 - 3> otherwise, if the last L1 message transmission on PRACH failed (see [15]):
 - 4> the UE may select RACH with 20ms TTI length and proceed as specified in subclause 8.5.17.
 - 3> otherwise:
 - 4> select RACH with 10ms TTI length and proceed as specified in subclause 8.5.17.

8.5.18.2 1.28 Mcps TDD

In 1.28 Mcps TDD, a RACH may be assigned a 5, 10 or 20 ms TTI. If, in one cell, more than one RACH is defined a UE shall select the RACH that is to be used for each transmission according to the following rule:

- 1> if only RACHs with one particular TTI length are assigned a transport format that is suitable for the transmission of the transport block set:
 - 2> select this RACH's TTI length.
- 1> if more than one RACHs are assigned a transport format that is suitable for the transmission of the transport block set:
 - 2> select the longest of the TTI lengths of these RACHs.

8.5.19 Secondary CCPCH selection

In UTRAN Connected mode, the UE shall select the Secondary CCPCH according to the following rules:

- 1> in Cell_DCH state:
 - 2> select Secondary CCPCH according to subclause 8.6.6.4.
- 1> in Cell FACH state:

- 2> if System Information Block type 6 is defined and includes one or more SCCPCH that carry a FACH, compile a list of candidate SCCPCH that consists of these SCCPCH, in the order of appearance in System Information Block type 6.
- NOTE 1: An SCCPCH carries a FACH if the size of the "FACH/PCH information" list within the IE "Secondary CCPCH system information" exceeds 1 or if the size of this list equals 1 while IE "Secondary CCPCH system information" does not contain an IE "PICH info".
 - 2> otherwise:
 - 3> compile a list of candidate SCCPCH that consists of the SCCPCH(s) included in System Information Block type 5 or System Information Block type 5bis that carry a FACH, in the order of appearance in System Information Block type 5 or System Information Block type 5bis.
 - 2> select an SCCPCH from the list of candidate SCCPCHs based on U-RNTI as follows:

"Index of selected SCCPCH" = U-RNTI mod K,

where K is equal to the number of candidate SCCPCHs.

- 1> in Cell_PCH and URA_PCH states:
 - 2> if System Information Block type 6 is defined and includes one or more SCCPCH that carry a PCH, compile a list of candidate SCCPCH that consists of these SCCPCH, in the order of appearance in System Information Block type 6
- NOTE 2: An SCCPCH carries a PCH if the IE "Secondary CCPCH system information" contains IE "PICH info"
 - 2> otherwise compile a list of candidate SCCPCH that consists of the SCCPCH(s) included in System Information Block type 5 or System Information Block type 5bis that that carry a PCH, in the order of appearance in System Information Block type 5 or System Information Block type 5bis;
 - 2> select an SCCPCH from the list of candidate SCCPCHs based on U-RNTI as follows:

"Index of selected SCCPCH" = U-RNTI mod K,

where K is equal to the number of candidate SCCPCHs.

The UE shall set the CFN in relation to the SFN of the current cell according to subclause 8.5.15.

The UE shall decode all transport formats on all FACHs multiplexed on the selected S-CCPCH according to its UE capability, as defined in subclauses 8.1.1.6.5 and 8.1.1.6.6, to find blocks adressed to the UE.

8.5.19a Secondary CCPCH and FACH selection for MCCH reception

The UE shall select the Secondary CCPCH for acquiring MCCH information according to the following rules:

- 1> if System Information Block type 5 or System Information Block type 5bis is defined and includes an S-CCPCH within the IE "Secondary CCPCH system information" including a FACH for which the IE "MCCH configuration information" is included:
 - 2> select that S-CCPCH and FACH for receiving MCCH.
- 1> otherwise if System Information Block type 5 or System Information Block type 5bis is defined and includes an SCCPCH within the IE "Secondary CCPCH system information MBMS" for which the IE "FACH carrying MCCH" is included:
 - 2> select that S-CCPCH and FACH for receiving MCCH.

8.5.20 Unsupported configuration

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

8.5.21 Actions related to Radio Bearer mapping

When the UE receives the IE "RB mapping info" and/or the IE "Transport format set", when transport channels, MAC-d flows or E-DCH MAC-d flows are added or deleted, when the UE performs a cell reselection or a state transition, or when the UE releases a RB, the UE shall for each of the configured Radio Bearers:

- 1> upon moving to CELL_FACH state from CELL_DCH state to initiate a cell update procedure and upon subsequent cell reselections until the first successfully completed cell update procedure, only perform the actions defined in the remainder of this subclause after reception of the CELL UPDATE CONFIRM message;
- 1> for FDD, select the multiplexing option according to the following:
 - 2> if the UE is in CELL_FACH state:
 - 3> if the RB has a multiplexing option with transport channel type "FACH" for the DL and transport channel type "RACH" for the UL:
 - 4> select this multiplexing option.
 - 2> if the UE is in CELL DCH state:
 - 3> if the RB has a multiplexing option with transport channel type "DCH + HS-DSCH" for the DL, and both the corresponding DCH transport channel and MAC-d flow are configured, and with transport channel type "E-DCH" for the UL, and the corresponding E-DCH MAC-d flow is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DCH + HS-DSCH" for the DL, and both the corresponding DCH transport channel and MAC-d flow are configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DCH + DSCH" for the DL:
 - 4> the UE behaviour is unspecified; else
 - 3> if the RB has a multiplexing option with transport channel type "HS-DSCH" for the DL, and the corresponding MAC-d flow is configured, and with transport channel type "E-DCH" for the UL, and the corresponding E-DCH MAC-d flow is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "HS-DSCH" for the DL, and the corresponding MAC-d flow is configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DSCH" for the DL:
 - 4> the UE behaviour is unspecified; else
 - 3> if the RB has a multiplexing option with transport channel type "DSCH" for the DL, and the corresponding DSCH transport channel is configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DCH" for the DL, and the corresponding DCH transport channel is configured, and with transport channel type "E-DCH" for the UL, and the corresponding E-DCH MAC-d flow is configured:
 - 4> select this multiplexing option.

- 3> if the RB has a multiplexing option with transport channel type "DCH" for the DL, and the corresponding DCH transport channel is configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option.
- 1> for TDD, select the multiplexing option according to the following:
 - 2> if the UE is in CELL_FACH state:
 - 3> if the RB has the multiplexing options with the transport channel types "FACH" and "DSCH" for the DL, and the corresponding FACH and DSCH transport channels are configured, and with the transport channel types "RACH" and "USCH" for the UL, and the corresponding RACH and USCH transport channels are configured:
 - 4> if both PUSCH and PDSCH are allocated:
 - 5> select the multiplexing option "DSCH" for DL and "USCH" for UL; else
 - 4> if only PUSCH is allocated:
 - 5> select the multiplexing option "FACH" for DL and "USCH" for UL; else
 - 4> if only PDSCH is allocated:
 - 5> select the multiplexing option "DSCH" for DL and "RACH" for UL; else
 - 4> if neither PUSCH nor PDSCH is allocated:
 - 5> select the multiplexing option "FACH" for DL and "RACH" for UL.
 - 3> if the RB has a single multiplexing option with the transport channel type "FACH" for the DL and the transport channel type "RACH" for the UL:
 - 4> select this multiplexing option; else
 - 3> if the RB has a single multiplexing option with the transport channel type "DSCH" for the DL, and the corresponding DSCH transport channel is configured, and with the transport channel type "USCH" for the UL, and the corresponding USCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 2> if the UE is in CELL_DCH state:
 - 3> if the RB has a multiplexing option with transport channel type "DCH + HS-DSCH" for the DL, and both the corresponding DCH transport channel and MAC-d flow are configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DCH + DSCH" for the DL, and both the corresponding DCH and DSCH transport channels are configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "HS-DSCH" for the DL, and the corresponding MAC-d flow is configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else
 - 3> if the RB has a multiplexing option with transport channel type "DCH" for the DL, and the corresponding DCH transport channel is configured, and with transport channel type "DCH" for the UL, and the corresponding DCH transport channel is configured:
 - 4> select this multiplexing option; else

- 3> if the RB has a multiplexing option with transport channel type "DSCH" for the DL, and the corresponding DSCH transport channel is configured, and with transport channel "USCH" for the UL, and the corresponding USCH transport channel is configured:
 - 4> select this multiplexing option.
- 1> configure the MAC with the appropriate transport format set (with computed transport block sizes) for the transport channel used by that RB;
- 1> in case the selected multiplexing option is a multiplexing option on E-DCH:
 - 2> the set of RLC sizes that apply to the logical channel used by that RB consists of all RLC PDU sizes listed in the IE "RLC PDU size list" in the RB mapping info for E-DCH.

1> else:

- 2> determine the sets of RLC sizes that apply to the logical channels used by that RB, based on the IEs "RLC size list" and/or the IEs "Logical Channel List" included in the applicable "Transport format set" (either the ones received in the same message or the ones stored if none were received);
- 1> in case the selected multiplexing option is a multiplexing option on RACH:
 - 2> ignore the RLC size indexes that do not correspond to any RLC size within the Transport Format Set stored for RACH.
 - 2> if there is no remaining RLC size index corresponding to an RLC size within the Transport Format Set stored for RACH:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if RACH is the transport channel to be used on the uplink, if that RB has a multiplexing option on RACH and if it is using AM:
 - 2> apply the largest size amongst the ones derived according to the previous bullet for the RLC size (or RLC sizes in case the RB is realised using two logical channels) for the corresponding RLC entity.
- NOTE: The IE "RB mapping info" is only included in the IE "Predefined RB configurations" in system information when used for Inter-RAT handover to UTRAN and there is no AM RLC size change involved in this case.
- 1> if that RB is using AM and the RLC size applicable to the uplink logical channel transporting data PDUs is different from the one derived from the previously stored configuration; and
- 1> none of the following conditions is met:
 - the RLC size change is caused by a CELL UPDATE CONFIRM and the CELL UPDATE CONFIRM message includes the IE "Downlink counter synchronisation info".
 - the RLC size change is caused by a reconfiguration message, and a cell update procedure occurs during the reconfiguration procedure and the CELL UPDATE CONFIRM message includes the IE "Downlink counter synchronisation info".
 - the RLC size change is caused by a reconfiguration message, and a cell update procedure occurs during this
 reconfiguration procedure and the CELL UPDATE CONFIRM message includes the IE "RLC re-establish
 indicator" being set to TRUE for the corresponding radio bearer.
 - 2> if the RLC size change is caused by a reconfiguration message or a CELL UPDATE CONFIRM; and
 - 2> the IE "one sided RLC re-establishment" is included in that message and is set to TRUE:
 - 3> re-establish the transmitting side of the corresponding RLC entity.
 - 2> else:
 - 3> re-establish the corresponding RLC entity.
 - 2> configure the corresponding RLC entity with the new uplink RLC size;

- 2> for each AM RLC radio bearer in the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS whose RLC size is changed; and
- 2> for each AM RLC signalling radio bearer in the CN domain as indicated in the IE "CN domain identity" in the variable LATEST_CONFIGURED_CN_DOMAIN whose RLC size is changed:
 - 3> if the IE "Status" in the variable CIPHERING STATUS of this CN domain is set to "Started":
 - 4> if the information causing the RLC re-establishment was included in system information:
 - 5> set the HFN values for the corresponding RLC entity equal to the value of the IE "START" for this CN domain that will be included in the CELL UPDATE message following cell reselection.
- NOTE: Since the UE cannot predict the START value at the time of the next CELL UPDATE transmission in the future, UTRAN should desist from changing the RLC size for a signalling radio bearer within a cell. Other than this case the change in RLC size for a signalling radio bearer is known to the UE when reading system information following cell reselection.
 - 4> if the RLC re-establishment is caused by a CELL UPDATE CONFIRM:
 - 5> if the whole RLC entity was re-established:
 - 6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.
 - 5> if only the transmitting side of the RLC entity was re-established:
 - 6> set the HFN value for the corresponding RLC entity in the uplink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.
 - 4> if the RLC re-establishment is caused by a reconfiguration message:
 - 5> if the whole RLC entity was re-established:
 - 6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.
 - 5> if only the transmitting side of the RLC entity was re-established:
 - 6> set the HFN value for the corresponding RLC entity in the direction uplink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain
- NOTE1: If the UTRAN modifies the RLC size for RB2 on any reconfiguration message or Cell Update Confirm message, the UE behaviour is unspecified in this version of the specification.
- NOTE2: The UE cannot rely on the configured Transport Formats to determine the RLC sizes to be used in downlink for a particular logical channel. This size can be signalled explicitly in the RLC Info IE.
- 1> if that RB is using UM:
 - 2> indicate the largest RLC size applicable for uplink to the corresponding RLC entity.
- 1> configure MAC multiplexing according to the selected multiplexing option (MAC multiplexing shall only be configured for a logical channel if the transport channel it is mapped on according to the selected multiplexing option is the same as the transport channel another logical channel is mapped on according to the multiplexing option selected for it);
- 1> configure the MAC with the logical channel priorities according to selected multiplexing option;
- 1> configure the MAC with the set of applicable RLC Sizes for each of the logical channels used for that RB;
- 1> if there is no multiplexing option applicable for the transport channels and MAC-d flows to be used:

- 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if there is more than one multiplexing option applicable for the transport channels or MAC-d flows to be used:
 - 2> set the variable INVALID CONFIGURATION to TRUE.

If upon cell re-selection or upon moving to CELL_FACH state from CELL_DCH state to initiate cell update procedure the UE sets variable INVALID_CONFIGURATION to TRUE as a result of the actions defined in this subclause, the UE should:

- 1> move to idle mode;
- 1> release (locally) the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and the established radio access bearers (as stored in the variable ESTABLISHED_RABS) and indicate this to upper layers;
- 1> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2.

8.5.22 Actions when entering another RAT from connected mode

NOTE: This section does not apply when entering GERAN Iu mode from UTRAN connected mode.

When entering another RAT from connected mode (due to Inter-RAT handover from UTRAN, Inter-RAT cell change order from UTRAN or Inter-RAT cell reselection from UTRAN), after successful completion of the procedure causing the transition to the other RAT, the UE shall:

- 1> if the USIM is present, for each CN domain:
 - 2> if a new security key set was received for this CN domain but was not used either for integrity protection or ciphering during this RRC connection:
 - 3> set the START value for this domain to zero and:
 - 3> store this START value for this domain in the USIM;
 - 2> else:
 - 3> store the current START value for every CN domain in the USIM [50].
- NOTE: Prior to storing the START value, the UE should calculate this START value according to subclause 8.5.9.
- 1> if the SIM is present, for each CN domain:
 - 2> if a new security key was received for this CN domain but was not used either for integrity protection or ciphering during this RRC connection:
 - 3> set the START value for this domain to zero and;
 - 3> store this START value for this domain in the UE.
 - 2> else:
 - 3> store the current START value for this CN domain in the UE.
- NOTE: Prior to storing the START value, the UE should calculate this START value according to subclause 8.5.9.

8.5.23 Measured results on RACH

When transmitting an uplink RRC message, the UE shall:

- 1> if the uplink RRC message is an RRC CONNECTION REQUEST message:
 - 2> if the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" are included in System Information Block type 11:

- 3> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intrafrequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 11.
- 2> if the IE "Inter-frequency RACH reporting information" is included in System Information Block type 11:
 - 3> if, at the time the message is to be sent, valid measurements are available; and
 - 3> there is one or more cells for which the quantity, indicated by the IE "Reporting quantity" in the IE "Interfrequency RACH reporting information', exceeds the threshold specified by the IE "Inter-frequency RACH reporting threshold":
 - 4> include a measurement report in the IE "Measured results on RACH";
 - 4> include the cells for which the quantity, indicated by the IE "Reporting quantity" in the IE "Interfrequency RACH reporting information', exceeds the threshold specified by the IE "Inter-frequency RACH reporting threshold";
 - 4> set the IE "Inter-frequency cell indication- SIB11" to the following value: Value_Tag MOD 2, with Value_Tag corresponding to the value tag of System Information Block Type 11;
 - 4> set the IE "Inter-frequency cell indication- SIB12" to any value.
- 1> for any other uplink RRC message which optionally includes the IE "Measured results on RACH":
 - 2> if the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" are included in System Information Block type 12 (or "System Information Block Type 11", if these IEs are not included in the broadcast "System Information Block Type 12" or "System Information Block Type 12" is not being broadcast).
 - 3> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intrafrequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if these IEs are not included in the broadcast "System Information Block Type 12" or "System Information Block Type 12" is not being broadcast).
 - 2> if the IE "Inter-frequency RACH reporting information" is included in "System Information Block type 12" (or "System Information Block Type 11" if this IE is not included in the "System Information Block Type 12" or if "System Information Block Type 12" is not being broadcast):
 - 3> if, at the time the message is to be sent, valid measurements are available; and
 - 3> there is one or more cells for which the quantity, indicated by the IE "Reporting quantity" in the IE "Interfrequency RACH reporting information', exceeds the threshold specified by the IE "Inter-frequency RACH reporting threshold":
 - 4> include a measurement report in the IE "Measured results on RACH";
 - 4> include the cells for which the quantity, indicated by the IE "Reporting quantity" in the IE "Interfrequency RACH reporting information", exceeds the threshold specified by the IE "Inter-frequency RACH reporting threshold";
 - 4> set the IE "Inter-frequency cell indication- SIB11" to the following value: Value_Tag MOD 2, with Value_Tag corresponding to the value tag of System Information Block Type 11;
 - 4> if "System Information Block Type 12" is being broadcast:
 - 5> set the IE "Inter-frequency cell indication- SIB12" to the following value: Value_Tag MOD 2, with Value Tag corresponding to the value tag of System Information Block Type 12.
 - 4> else:
 - 5> set the IE "Inter-frequency cell indication- SIB12" to any value.
- 1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

NOTE: The UE only includes measurement results for neighbour cells for which valid measurements are available at the time the message is sent. At cell access following selection or reselection to a cell, the UE may not have had sufficient time to obtain valid measurement results for neighbour cells.

1> for messages transmitted on CCCH, take care that the maximum allowed message size is not exceeded when forming the IE "Measured results on RACH", i.e. limit the number of included neighbour cells or if required omit the IE "Measured results on RACH" altogether. When limiting the number of included neighbouring cells, the number of inter-frequency cells should be limited first i.e. inter-frequency cells should be omitted before limiting the number of intra- frequency cells.

If the IE "Measured results on RACH" is present in the message, the UTRAN should extract the contents to be used for radio resource control.

8.5.24 Change of PLMN while in RRC connected mode

If the UE camps on an acceptable cell to obtain limited service while in RRC connected mode the UE shall:

- 1> keep the RRC connection and its behaviour, while camping on an acceptable cell as if in Idle mode in that PLMN:
- 1> if the UE re-enters "in service area" in a suitable cell, or cannot maintain limited service (i.e. cannot find any acceptable cell of any PLMN), the UE shall resume its RRC Connected mode behaviour as if it had not camped on any cell whilst being in "out of service area".

The UE shall:

- 1> if the NAS indicates the selection of a new PLMN resulting from manual- or automatic mode PLMN selection [25] while the UE is in RRC connected mode; or
- 1> if the UE attempts transmission on an acceptable cell while the UE is in RRC connected mode (i.e. to initiate emergency call), the UE shall:
 - 2> move to idle mode;
 - 2> release all dedicated resources;
 - 2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;
 - 2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;
 - 2> clear the variable ESTABLISHED_RABS; and
 - 2> perform actions specified in subclause 8.5.2 when entering idle mode from connected mode.

NOTE: NAS can inform AS about a new selected PLMN as a result of a PLMN selection (manual- or automatic mode PLMN selection (see [25])), or as a result of network signalling (after inter-RAT handover or inter-PLMN SRNS relocation). Only in the first case (manual- or automatic mode PLMN selection), this will result in an immediate RRC connection release.

8.5.25 Actions related to HS DSCH RECEPTION variable

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

- 1> for FDD and 1.28 Mcps TDD:
 - 2> the UE is in CELL_DCH state.
- 1> for 3.84 Mcps TDD or 7.68 Mcps TDD:
 - 2> a dedicated physical channel is allocated to the UE in the uplink.
- 1> the variable H_RNTI is set;

- 1> the UE has a stored IE "HS-SCCH info";
- 1> the UE has a stored IE "HARQ info";
- 1> for FDD:
 - 2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;
 - 2> the UE has stored the following IEs:
 - IE "Measurement Feedback Info";
 - IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,\ }\Delta_{NACK}\$ and Ack-NACK Repetition factor.
 - 1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:
 - 2> a dedicated physical channel is allocated to the UE in the downlink;
 - 2> the UE has stored D_{hs-sync}.
- 1> for 1.28 Mcps TDD, the UE has stored the IE "HS-PDSCH Midamble Configuration" and either of the following conditions are met:
 - 2> a dedicated physical channel is allocated to the UE in the downlink;
 - 2> the UE has stored "PLCCH Info".
- 1> there is at least one RB mapped to HS-DSCH;
- 1> at least for one of the RB"s mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;
- NOTE 1: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link or, for TDD add/remove H-RNTI upon hard handover.
- NOTE 2: If HS_DSCH_RECEPTION is set to "TRUE" and a reconfiguration, an inter-RAT handover from UTRAN, or a cell change order procedure is initiated, the UE checks the conditions only when the reconfiguration, inter-RAT handover from UTRAN, or cell change order procedure is successfully completed. Doing so ensures that, in case of failure in the reconfiguration, inter-RAT handover from UTRAN, or cell change order procedure, the UE can return to the old configuration as if the message was not received, e.g. without performing a MAC-HS reset.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

- 1> set the variable HS_DSCH_RECEPTION to FALSE;
- 1> stop any HS_SCCH reception procedures;
- 1> stop any HS-DSCH reception procedures;
- 1> clear the variable H_RNTI and remove any stored H-RNTI;
- 1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;
- 1> release all HARQ resources;
- 1> no long consider any radio link to be the HS-DSCH serving radio link;
- 1> for 3.84 Mcps TDD or 7.68 Mcps TDD, if no downlink DPCH is assigned the UE shall clear the uplink DPCH configuration and initiate the Cell Update procedure according to subclause 8.3.1, cause "radio link failure".
- NOTE 3: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

- 1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:
 - 2> subclause 8.6.6.33 for the IE "HS-SCCH Info".
- 1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:
 - 2> subclause 8.6.3.1b for the IE "H-RNTI";
 - 2> subclause 8.6.5.6b for the IE "HARQ info";
 - 2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

- 1> not perform HS_SCCH reception procedures;
- 1> not perform HS-DSCH reception procedures.

8.5.26 Service prioritisation

The UE may perform the Service prioritisation procedure whenever it detects that it becomes incapable of receiving all services it is interested in as well as whenever there are changes concerning the subset of services that it has selected to receive. This may occur upon state transitions, service / session start, service / session stop, service reconfiguration eg. transfer mode change and preferred frequency layer changes.

If the UE detects that it is incapable of receiving all services, the UE may:

- 1> request upper layers to prioritise the services and to initiate release of non- prioritised services that may cause interruption in the reception of the prioritised services;
- 1> if reception of the prioritised MBMS service is inhibited by one or more MBMS service(s) provided via a p-t-p radio bearer:
 - 2> request UTRAN to terminate these MBMS service(s) using the MBMS MODIFICATION REQUEST message as specified in subclause 8.7.6.

NOTE: The termination of MBMS services is performed by RRC procedures, while clearing of non-MBMS services is performed by upper layers.

8.5.27 MBMS frequency selection

The UE shall perform the MBMS frequency layer selection procedure upon receiving the IE "MBMS Preferred frequency information" or when specified explicitly e.g. as in subclause 8.6.9.2.

The UE shall:

- 1> consider MBMS services, for which a preferred frequency layer is specified, to be available only on the concerned frequency;
- 1> consider MBMS services, for which no preferred frequency layer is specified, to be available on all frequencies;
- 1> consider that UTRAN will provide any non- MBMS services on all frequencies unless specified otherwise, i.e. as specified in subclause 8.6.9.2;
- 1> if based on the above, the UE detects that it is incapable of receiving all services:
 - 2> perform the Service prioritisation procedure as specified in subclause 8.5.26.
 - 2> after having completed the release of non-prioritised services inhibiting reception of the prioritised service(s), if applicable, select the frequency corresponding with the service(s) prioritised by upper layers.

1> otherwise:

- 2> if a preferred frequency layer applies for the services included in variable MBMS_ACTIVATED_SERVICES:
 - 3> select that preferred frequency.
- 2> otherwise:
 - 3> select the currently used frequency.
- 1> if the selected frequency is different from the currently used frequency:
 - 2> if the UE is in CELL_DCH:
 - 3> request UTRAN to be moved to the preferred frequency by means of the MBMS MODIFICATION REQUEST message as specified in subclause 8.7.6;
 - 3> upon receiving a request to move to the requested preferred frequency, store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.
 - 2> otherwise:
 - 3> apply the cell-reselection procedure as described in [4], using the received "MBMS Preferred frequency information",
 - 3> if the UE re-selects to a cell on the indicated preferred frequency:
 - 4> if the UE is in CELL FACH, CELL PCH or URA PCH:
 - 5> act according to subclause 8.3.1.2.
 - 4> store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.
 - 4> apply the MCCH acquisition procedure, as specified in subclause 8.7.2.

8.5.28 Actions related to E_DCH_TRANSMISSION variable

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

- 1> the UE is in CELL_DCH state;
- 1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;
 - 1> the UE has stored the following IEs:
 - IE "E-DCH Transmission Time Interval";
 - IE "HARO info for E-DCH";
 - IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
 - one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".
- 1> there is at least one logical channel mapped to E-DCH for which:
 - 2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

- 1> set the variable E_DCH_TRANSMISSION to FALSE;
- 1> stop any E-AGCH, E-HICH and E-RGCH reception procedures;

- 1> stop any E-DPCCH and E-DPDCH transmission procedures;
- 1> clear the variable E_RNTI;
- 1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;
- 1> release all E-DCH HARQ resources;
- 1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

- 1> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:
 - 2> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".
- 1> perform E-HICH reception procedures for all radio links in the E-DCH active set;
- 1> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;
- 1> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:
 - 2> subclause 8.6.6.37 for the IE "E-DPCCH Info";
- 1> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:
 - 2> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";
 - 2> subclause 8.6.5.17 for the IE "HARQ info for E-DCH".
 - 2> subclause 8.6.6.37 for the IE "E-DPDCH Info".
- 1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:
 - 2> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).
- 1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:
 - 2> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and
 - 2> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

- 1> not perform E-AGCH, E-HICH and E-RGCH reception procedures;
- 1> not perform E-DPCCH and E-DPDCH transmission procedures.

8.6 Generic actions on receipt and absence of an information element

8.6.1 CN information elements

8.6.1.1 Void

8.6.1.2 CN information info

If the IE "CN information info" is present in a message, the UE shall:

- 1> if the IE "Primary PLMN Identity" is present:
 - 2> forward the content of the IE "Primary PLMN identity" to upper layers.
- 1> else:
 - 2> if the IE "PLMN Identity" is present:
 - 3> forward the content of the IE "PLMN identity" to upper layers.
- 1> if present, forward the content of the IE "CN common GSM-MAP NAS system information" to upper layers;
- 1> if the IE "CN domain related information" is present:
 - 2> forward each occurrence of the IE "CN domain specific GSM-MAP NAS system info" together with the IE "CN domain identity" to upper layers.
 - 2> if an IE "CN domain specific GSM-MAP NAS system info" is not present for a particular CN domain:
 - 3> indicate to upper layers that no CN system information is available for that CN domain.

NOTE: If UTRAN at SRNS relocation includes and sets the IE "Primary PLMN identity" to the PLMN identity signalled in RANAP RELOCATION REQUEST [57], the UTRAN should also set the IE "PLMN identity" to the PLMN identity in the IE "PLMN Identity" of the Master Information Block transmitted in the cell(s) used by the UE after completed SRNS relocation.

8.6.1.3 Signalling connection release indication

If the IE "Signalling Connection release indication" is present in a message, the UE shall:

- 1> if all radio access bearers for the CN domain identified with the value of the IE "Signalling Connection release indication" would have been released in the variable ESTABLISHED_RABS after processing of the received message:
 - 2> indicate release of the signalling connection identified with the value of the IE "Signalling Connection release indication" to the upper layers;
 - 2> remove the signalling connection identified with the value of the IE "Signalling Connection release indication" from the variable ESTABLISHED_SIGNALLING_CONNECTIONS.
- 1> if radio access bearers for the CN domain identified with the value of the IE "Signalling Connection release indication" would remain in the variable ESTABLISHED_RABS after processing of the received message:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.

8.6.2 UTRAN mobility information elements

8.6.2.1 URA identity

The UE shall:

- 1> if the IE "URA identity" is included in a received message:
 - 2> if the IE "RRC State Indicator" is included and set to "URA_PCH":
 - 3> store this URA identity in the variable URA_IDENTITY;
 - 3> after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read system information block type 2 in the selected cell;
 - 3> if the stored URA identity in the variable URA_IDENTITY is not included in the list of URA identities in System Information Block type 2 in the selected cell, the list of URA identities in system information block type 2 is empty or if the system information block type 2 can not be found, a confirmation error of URA identity list has occurred:

- 4> if no URA update procedure is ongoing:
 - 5> initiate a URA update procedure after entering URA_PCH state; see subclause 8.3.1.2.
- 4> if a URA update procedure is ongoing:
 - 5> take actions as specified in subclause 8.3.1.10.
- 1> if the IE "URA identity" is not included in a received message:
 - 2> if the IE "RRC State Indicator" is included and set to " URA_PCH":
 - 3> after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read System Information Block type 2 in the selected cell;
 - 3> if System Information Block type 2 in the selected cell contains a single URA identity:
 - 4> store this URA identity in the variable URA_IDENTITY.
 - 3> if System Information Block type 2 of the selected cell contains more than one URA identity, the list of URA identities in system information block type 2 is empty or if the system information block type 2 can not be found, a confirmation error of URA identity list has occurred:
 - 4> if no URA update procedure is ongoing:
 - 5> initiate a URA update procedure after entering URA_PCH state, see subclause 8.3.1.2.
 - 4> if a URA update procedure is ongoing:
 - 5> take actions as specified in subclause 8.3.1.10.

8.6.2.2 Mapping info

If the IE "Mapping info" is received, the UE shall in this version of the specification:

1> ignore the contents of this IE.

8.6.3 UE information elements

8.6.3.1 Activation time

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

- 1> let the "reference CCTrCH" be defined as the CCTrCh that includes any transport channel or is associated with any physical channel which is being added, re-configured or removed, or, in the case of HS-DSCH, the CCTrCh including the associated DCH;
- 1> if the frame boundary immediately before the frame with the CFN (Connection Frame Number) value indicated by the IE "Activation Time" is at the TTI boundary common to all the transport channels that are multiplexed onto the reference CCTrCh:
 - 2> select that frame boundary as the activation time T.

1> else:

- 2> select the next TTI boundary, which is common to all the transport channels that are multiplexed onto the reference CCTrCh, after the frame with the CFN (Connection Frame Number) value indicated by the IE "Activation Time", as the activation time T.
- 1> if the IE "Delay restriction flag" is received and activation time T is more than 128 frames from the CFN at which the message was received:

- 2> choose an activation time T as soon as possible after reception of the message, respecting the performance requirements in subclause 13.5, which is common to all the transport channels that are multiplexed onto the reference CCTrCh.
- NOTE: If the UE receives a message containing the IE "Delay restriction flag" and that message causes a transport channel or physical channel reconfiguration of the reference CCTrCH then the UE behaviour is not specified.
- 1> at the activation time T:
 - 2> for a physical channel reconfiguration other than an HS-DSCH related reconfiguration, caused by the received message:
 - 3> release the physical channel configuration, which was present before T;
 - 3> initiate the establishment of the physical channel configuration as specified for the physical channel information elements in the received message as specified elsewhere.
 - 2> for an HS-DSCH related reconfiguration in FDD or 1.28 Mcps TDD caused by the received message:
 - 3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;
 - 3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.
 - 2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:
 - 3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.
 - 2> for actions, other than a physical channel reconfiguration, caused by the received message:
 - 3> perform the actions for the information elements in the received message as specified elsewhere.
- NOTE: In FDD an "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is the default value "Now", the UE shall:

- 1> choose an activation time T as soon as possible after the reception of the message, respecting the performance requirements in subclause 13.5;
- 1> at the activation time T:
 - 2> perform the actions for the information elements in the received message as specified elsewhere.
- NOTE: In FDD, if the UE was in idle mode or CELL_FACH state upon reception of the message, regardless of the state the UE enters after reception of the message, and the value of the IE "Activation time" in the received message is different from "Now", the UE behaviour is unspecified. In TDD, if the UE was in idle mode or CELL_FACH state upon reception of the message, the value of the IE "Activation time" in the received message is relative to the CFN associated with the cell from which the message was received.

8.6.3.1a CN domain specific DRX cycle length coefficient

The UE updates CN domain specific DRX cycle length coefficient as specified in [4]. The UE shall use it to calculate the CN domain specific DRX cycle length, according to the following:

1> set k to the value of the IE "CN domain specific DRX cycle length coefficient".

1> store the result of MAX(2^k, PBP), where PBP is the Paging Block Periodicity, as the CN domain specific DRX cycle length for the CN domain indicated by the IE "CN domain identity". For FDD PBP=1.

The UE shall determine its idle mode paging occasions and PICH monitoring occasions for that CN domain, according to [4], based on the stored CN domain specific DRX cycle length, when using DRX in idle mode.

8.6.3.1b H-RNTI

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> store the value in the variable H RNTI;
- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

If the message that triggers the HS_DSCH_RECEPTION variable to change value from FALSE to TRUE does not contain the IE "New H-RNTI":

1> the UE behaviour is not defined.

When the variable HS DSCH RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

8.6.3.2 UTRAN DRX Cycle length coefficient

If the IE "UTRAN DRX cycle length coefficient" is present, the UE shall use it to calculate the UTRAN DRX cycle length, according to the following:

- 1> set k to the value of the IE "UTRAN DRX cycle length coefficient";
- 1> store the result of MAX(2^kPBP), where PBP is the Paging Block Periodicity, as the DRX cycle length.

The UE shall determine its connected mode paging occasions and PICH monitoring occasions in the same way as for idle mode, according to [4].

The DRX cycle length to use in connected mode is defined in [4].

8.6.3.3 Generic state transition rules depending on received information elements

The IE "RRC State Indicator" indicates the state the UE shall enter. The UE shall enter the state indicated by the IE "RRC State Indicator" even if the received message includes other IEs relevant only for states other than indicated by the IE "RRC State Indicator". E.g. if the RRC state indicator is set to CELL_FACH while other IEs provide information about a configuration including dedicated channels, the UE shall enter CELL_FACH state. If however the UE has no information about the configuration corresponding to the state indicated by the IE "RRC State Indicator", it shall consider the requested configuration as invalid.

The UE shall, if the IE "RRC State Indicator" in the received message has the value:

- 1> "CELL_FACH":
 - 2> enter CELL_FACH state as dictated by the procedure governing the message received.
- 1> "CELL_DCH":
 - 2> if neither DPCH is assigned in the message nor is the UE in CELL_DCH:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
 - 2> else:
 - 3> enter CELL_DCH state as dictated by the procedure governing the message received.
- 1> "CELL_PCH":

- 2> if the received message is RRC CONNECTION SETUP and IE "RRC State Indicator" is set to CELL_PCH:
 - 3> set the variable INVALID CONFIGURATION to TRUE.
- 2> else:
 - 3> enter CELL PCH state as dictated by the procedure governing the message received.
- 1> "URA_PCH":
 - 2> if the received message is RRC CONNECTION SETUP and IE "RRC State Indicator" is set to URA_PCH:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
 - 2> else:
 - 3> enter URA_PCH state as dictated by the procedure governing the message received.

8.6.3.4 Ciphering mode info

The IE "Ciphering mode info" defines the new ciphering configuration. At any given time, the UE needs to store at most two different ciphering configurations (keyset and algorithm) per CN domain at any given time in total for all radio bearers and three configurations in total for all signalling radio bearers.

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE, the UE shall:

- 1> ignore this second attempt to change the ciphering configuration; and
- 1> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to TRUE.

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to FALSE, the UE shall:

- 1> if none of the IE "Status" in the variable CIPHERING STATUS has the value "Started", and this IE "Ciphering mode info" was included in a message that is not the message SECURITY MODE COMMAND; or
- 1> if the IE "Ciphering Mode Info" was received in the message SECURITY MODE COMMAND and there does not exist exactly one ciphering activation time in the IE "Radio bearer downlink ciphering activation time info" for each established RLC-AM and RLC-UM radio bearers included in the IE "RB information" in the IE "ESTABLISHED_RABS" for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN; or
- 1> if the IE "Ciphering Mode Info" was received in the message SECURITY MODE COMMAND and the IE "Ciphering activation time for DPCH" is not included in the message, and there exist radio bearers using RLC-TM according to the IE "RB information" in the IE "ESTABLISHED_RABS" for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN; or
- 1> if the IE "Ciphering Mode Info" was received in the message SECURITY MODE COMMAND and there does not exist exactly one ciphering activation time in the IE "Radio bearer downlink ciphering activation time info" for each established signalling radio bearer included in the IE "Signalling radio bearer information" in the IE "ESTABLISHED_RABS":
 - 2> ignore this attempt to change the ciphering configuration;
 - 2> set the variable INVALID_CONFIGURATION to TRUE;
 - 2> perform the actions as specified in subclause 8.1.12.4c.
- 1> set the IE "Reconfiguration" in the variable CIPHERING STATUS to TRUE;
- 1> set the IE "Status" in the variable CIPHERING_STATUS of the CN domains for which the IE "Status" of the variable SECURITY MODIFICATION is set to "Affected" to "Started";
- 1> apply the new ciphering configuration in the lower layers for all RBs that belong to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

- 2> using the ciphering algorithm (UEA [40]) indicated by the IE "Ciphering algorithm" as part of the new ciphering configuration;
- 2> for each radio bearer that belongs to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:
 - 3> using the value of the IE "RB identity" in the variable ESTABLISHED_RABS minus one as the value of BEARER [40] in the ciphering algorithm.
- 1> for the downlink and the uplink, apply the new ciphering configuration as follows:
 - 2> if the ciphering configuration for a AM or UM radio bearer or signalling radio bearer from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the current received message includes the IE "DL Counter Synch Info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":
 - 3> if the previous SECURITY MODE COMMAND was received due to new keys being received:
 - 4> consider the new ciphering configuration to include the received new keys.
 - 3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 4> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN.
 - 3> apply the new ciphering configuration in uplink and downlink immediately following RLC reestablishment.
 - 2> if the IE "Ciphering activation time for DPCH" is present in the IE "Ciphering mode info" and the UE was in CELL_DCH state prior to this procedure:
 - 3> for radio bearers using RLC-TM:
 - 4> apply the old ciphering configuration for CFN less than the number indicated in the IE "Ciphering activation time for DPCH":
 - 4> apply the new ciphering configuration for CFN greater than or equal to the number indicated in IE "Ciphering activation time for DPCH".
 - 2> if the IE "Radio bearer downlink ciphering activation time info" is present:
 - 3> apply the following procedure for each radio bearer and signalling radio bearers using RLC-AM or RLC-UM indicated by the IE "RB identity":
 - 4> suspend uplink transmission on the radio bearer or the signalling radio bearer (except for the SRB where the response message is transmitted) according to the following:
 - 5> do not transmit RLC PDUs with sequence number greater than or equal to the uplink activation time, where the uplink activation time is selected according to the rules below.
 - 4> select an "RLC sequence number" at which (activation) time the new ciphering configuration shall be applied in uplink for that radio bearer according to the following:
 - 5> consider a ciphering activation time in uplink to be pending until the RLC sequence number of the next RLC PDU to be transmitted for the first time is equal to or larger than the selected activation time;
 - 5> for each radio bearer and signalling radio bearer that has no pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:
 - 6> set a suitable value that would ensure a minimised delay in the change to the latest ciphering configuration.

- 5> for each radio bearer and signalling radio bearer that has a pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:
 - 6> for radio bearers and signalling radio bearers except SRB2:
 - 7> set the same value as the pending ciphering activation time.
 - 6> for signalling radio bearer SRB2:
 - 7> set a suitable value that would ensure a minimised delay in the change to the latest ciphering configuration.
- 4> store the selected "RLC sequence number" for that radio bearer in the entry for the radio bearer in the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
- 4> switch to the new ciphering configuration according to the following:
 - 5> use the old ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers smaller than the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;
 - 5> use the new ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers greater than or equal to the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;
 - 5> for a radio bearer using RLC-AM, when the RLC sequence number indicated in the IE "Radio bearer downlink ciphering activation time info" falls below the RLC receiving window and the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" falls below the RLC transmission window, the UE may release the old ciphering configuration for that radio bearer:
 - 5> if an RLC reset or re-establishment of the transmitting side of an RLC entity occurs before the activation time for the new ciphering configuration has been reached in uplink, ignore the activation time and apply the new ciphering configuration in uplink immediately after the RLC reset or RLC re-establishment;
 - 5> if an RLC reset or re-establishment of the receiving side of an RLC entity occurs before the activation time for the new ciphering configuration has been reached in downlink, ignore the activation time and apply the new ciphering configuration in downlink immediately after the RLC reset or RLC re-establishment.
- 2> if the current received message includes the IE "Downlink counter synchronisation info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":
 - 3> apply the new ciphering configuration in uplink and downlink immediately following RLC reestablishment.

If the IE "Radio bearer downlink ciphering activation time info" was received in another message than SECURITY MODE COMMAND:

1> the UE behaviour is unspecified.

If the IE "Ciphering mode info" is not present, the UE shall:

- 1> for the downlink and the uplink, apply the ciphering configuration as follows:
 - 2> if the ciphering configuration for a AM or UM radio bearer or signalling radio bearer from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the current received message includes the IE "Downlink counter synchronisation info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":
 - 3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

- 4> consider the ciphering configuration to include the received new keys.
- 3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 4> consider the ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN.
- 3> apply the ciphering configuration in uplink and downlink immediately following RLC re-establishment.
- 2> else:
 - 3> not change the ciphering configuration.

8.6.3.5 Integrity protection mode info

The IE "Integrity protection mode info" defines the new integrity protection configuration. At any given time, the UE needs to store at most three different integrity protection configurations (keysets) in total for all signalling radio bearers for all CN domains.

If the IE "Integrity protection mode info" is present and if the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE, the UE shall:

- 1> ignore this second attempt to change the integrity protection configuration; and
- 1> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to TRUE.

If the IE "Integrity protection mode command" has the value "Start", the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Not started" and the IE "Integrity protection mode info" was not included in the message SECURITY MODE COMMAND; or

If the IE "Integrity protection mode command" has the value "Start", the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Not started", the IE "Integrity protection mode info" was included in the message SECURITY MODE COMMAND and the IE "Integrity protection algorithm" is not included; or

If the IE "Integrity protection mode command" has the value "Modify" and the IE "Status" in the variable INTEGRITY PROTECTION INFO has the value "Not Started"; or

If the IE "Integrity protection mode command" has the value "Start", the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE "Integrity protection mode command info" was included in the message SECURITY MODE COMMAND; or

If the IE "Integrity protection mode command" has the value "Modify" and there does not exist exactly one integrity protection activation time in the IE "Downlink integrity protection activation info" for each established signalling radio bearer included in the IE "Signalling radio bearer information" in the IE "ESTABLISHED_RABS"; or

If the IE "Integrity protection mode command" has the value "Modify", the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE "Integrity protection mode info" was not included in the message SECURITY MODE COMMAND:

the UE shall:

- 1> ignore this attempt to change the integrity protection configuration; and
- 1> set the variable INVALID_CONFIGURATION to TRUE.

If the IE "Integrity protection mode info" is not present, the UE shall:

1> not change the integrity protection configuration.

If the IE "Integrity protection mode info" is present and if the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to FALSE, the UE shall:

- 1> set the IE "Reconfiguration" in the variable INTEGRITY PROTECTION INFO to TRUE;
- 1> perform the actions in accordance with subclauses 8.6.3.5.1, 8.6.3.5.2 and 8.6.3.5.3.

8.6.3.5.1 Initialisation of Integrity Protection

The UE shall:

- 1> if the IE "Integrity protection mode command" has the value "start" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Not started", and this IE was included in the message SECURITY MODE COMMAND:
 - 2> initialise the information for all signalling radio bearers in the variable INTEGRITY_PROTECTION_INFO according to the following:
 - 3> set the IE "Uplink RRC Message sequence number" in the variable INTEGRITY_PROTECTION_INFO to zero:
 - 3> do not set the IE "Downlink RRC Message sequence number" in the variable INTEGRITY_PROTECTION_INFO;
 - 3> set the variable INTEGRITY_PROTECTION_ACTIVATION_INFO to zero for each signalling radio bearer in the IE "ESTABLISHED RABS".
- NOTE: The IEs "Integrity protection activation info" and "RRC Message sequence number"included in the IE "Integrity Check Info" in the transmitted message do not have identical values, but integrity protection is applied from the first transmitted message.
 - 2> set the IE "Status" in the variable INTEGRITY_PROTECTION_INFO to the value "Started";
 - 2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1 by:
 - 3> using the algorithm (UIA [40]) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";
 - 3> using the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH [40].
 - 2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer in the IE "ESTABLISHED_RABS" except RB2 at the next received RRC message;
 - 2> start applying the new integrity protection configuration in the downlink for signalling radio bearer RB2 from and including the received SECURITY MODE COMMAND message;
 - 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted SECURITY MODE COMPLETE message;
 - 2> start applying the new integrity protection configuration in the uplink for signalling radio bearers other than RB2 at the uplink activation time included in the IE "Uplink integrity protection activation info".
- NOTE: After Inter-RAT handover to UTRAN, and ciphering was activated in the other RAT, then during the first security mode control procedure following the handover, UE activates integrity protection using the integrity key of the same key set as used in the other RAT (see.subclause 8.3.6.3).

8.6.3.5.2 Integrity Protection Re-configuration for SRNS Relocation and handover from GERAN lu mode

The UE shall:

- 1> if IE "Integrity protection mode command" has the value "start" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was not included SECURITY MODE COMMAND:
- NOTE: This case is used in SRNS relocation and in handover from GERAN *Iu mode*.
 - 2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1 by:

- 3> using the algorithm (UIA [40]) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";
- 3> using the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH [40].
- 2> let RBm be the signalling radio bearer where the reconfiguration message was received and let RBn be the signalling radio bearer where the response message is transmitted;
- 2> prohibit transmission of RRC messages on all signalling radio bearers in the IE "ESTABLISHED_RABS" except on RB0 and the radio bearer where the response message is transmitted;
- 2> for the downlink, for each signalling radio bearer, if for the signalling radio bearer, a security configuration triggered by a previous SECURITY MODE COMMAND has not yet been applied, due to the activation time for the signalling radio bearer not having been reached:
 - 3> set "Down link RRC Message sequence number" for this signalling radio bearer in the variable INTEGRITY_PROTECTION_INFO to (activation time -1), where the activation time is the corresponding activation time for this signalling radio bearer;
 - 3> if the previous SECURITY MODE COMMAND was received due to new keys being received:
 - 4> consider the new integrity protection configuration to include the received new keys.
 - 3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:
 - 4> consider the new Integrity Protection configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN associated with the previously received SECURITY MODE COMMAND.
- 2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer in the IE "ESTABLISHED_RABS" except RBm at the next received RRC message for the corresponding signalling radio bearer;
- 2> start applying the new integrity protection configuration in the downlink for signalling radio bearer RBm from and including the received configuration message;
- 2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RBn from and including the transmitted response message;
- 2> start applying the new integrity protection configuration in the uplink for signalling radio bearers other than RBn from the first message onwards.

8.6.3.5.3 Integrity Protection modification in case of new keys or initialisation of signalling connection

The UE shall:

- 1> if the IE "Integrity protection mode command" has the value "modify" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was included in SECURITY MODE COMMAND:
 - 2> store the (oldest currently used) integrity protection configuration until activation times have elapsed for the new integrity protection configuration to be applied on all signalling radio bearers;
 - 2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer n, at the first received message with RRC Sequence number greater than or equal to the RRC sequence number indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info";
 - 2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1;
 - 3> if present, use the algorithm indicated by the IE "Integrity protection algorithm" (UIA [40]);

- 2> set the content of the variable INTEGRITY_PROTECTION_ACTIVATION_INFO according to the following:
 - 3> for each established signalling radio bearer, stored in the variable ESTABLISHED_RABS:
 - 4> select a value of the RRC sequence number at which (activation) time the new integrity protection configuration shall be applied in uplink for that signalling radio bearer according to the following:
 - 5> for each signalling radio bearer except RB0:
 - 6> set the activation time for the new integrity protection configuration to the next RRC SN.
 - 4> for signalling radio bearer RB0:
 - 5> set the value of the included RRC sequence number to greater than or equal to the current value of the RRC sequence number for signalling radio bearer RB0 in the variable INTEGRITY PROTECTION INFO, plus the value of the constant N302 plus two.
 - 4> prohibit the transmission of RRC messages on all signalling radio bearers, except for RB2, with RRC SN greater than or equal to the value in the "RRC message sequence number list" for the signalling radio bearer in the IE "Uplink integrity protection activation info" of the variable INTEGRITY PROTECTION ACTIVATION INFO.
- 2> start applying the new integrity protection configuration in the uplink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Uplink integrity protection activation info", included in the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;
- 2> start applying the new integrity protection configuration in the uplink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration;
- 2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info";
- NOTE: For signalling radio bearers that have a pending activation time as set for integrity protection by a previous procedure changing the integrity protection configuration, UTRAN should set this value in IE "Downlink integrity protection activation info".
 - 2> start applying the new integrity protection configuration in the downlink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration.
- 8.6.3.6 Void
- 8.6.3.7 Void

8.6.3.8 Integrity check info

If the IE "Integrity check info" is present the UE shall:

1> act as described in subclause 8.5.10.1.

8.6.3.9 New C-RNTI

If the IE "New C-RNTI" is included, the UE shall:

- 1> store the value in the variable C_RNTI, replacing any old stored value;
- 1> use that C-RNTI when using common transport channels of type RACH and FACH in the current cell.

8.6.3.9a New DSCH-RNTI

In TDD if the IE "New DSCH-RNTI" is included, the UE shall:

- 1> if the UE will be in CELL_DCH or CELL_FACH at the end of the procedure where the received message included this IE:
 - 2> if the UE supports DSCH or USCH as indicated in the IE "Physical Channel Capability" included in the IE "UE Radio Access Capability":
 - 3> store the value in the variable DSCH_RNTI, replacing any old stored value;
 - 3> use that DSCH-RNTI when using SHCCH signalling in the current cell.

8.6.3.10 New U-RNTI

If the IE "New U-RNTI" is included in a received message, the UE shall:

1> store the value in the variable U_RNTI, replacing any old stored value.

8.6.3.11 RRC transaction identifier

The IE "RRC transaction identifier" may be used, together with the message type, for identification of an invocation of a downlink procedure (transaction). The UE behaviour for accepting or rejecting transactions based on the message type and the IE "RRC transaction identifier" is specified below.

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER SETUP; or
- RADIO BEARER RECONFIGURATION; or
- RADIO BEARER RELEASE; or
- TRANSPORT CHANNEL RECONFIGURATION: or
- PHYSICAL CHANNEL RECONFIGURATION:

the UE shall:

- 1> if the variable ORDERED_RECONFIGURATION is set to FALSE; and
- 1> if the variable CELL_UPDATE_STARTED is set to FALSE; and
- 1> if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL ERROR REJECT is set to FALSE; and
- 1> if the table "Accepted transactions" in the variable TRANSACTIONS does not contain an entry with an IE "Message Type" set to ACTIVE SET UPDATE:
 - 2> accept the transaction; and
 - 2> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS.

1> else:

- 2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or
- 2> if the variable CELL_UPDATE_STARTED is set to TRUE; or
- 2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

- 2> if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - 3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 4> ignore the transaction; and
 - 4> continue with any ongoing processes and procedures as the message was not received;
 - 4> and end the procedure.
 - 3> else:
 - 4> reject the transaction; and
 - 4> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:
 - 5> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

Else:

If the received message is any of the messages:

- RRC CONNECTION SETUP; or
- CELL UPDATE CONFIRM; or
- URA UPDATE CONFIRM; or
- UE CAPABILITY ENQUIRY:

the UE shall:

- 1> if the IE "Message Type" of the received message is not present in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 2> if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL_ERROR_REJECT is set to FALSE:
 - 3> accept the transaction; and
 - 3> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS.
 - 2> else:
 - 2> if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - 3> reject the transaction; and
 - 3> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:
 - 4> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

1> else:

1> if the IE "Message Type" of the received message is present in the table "Accepted transactions" in the variable TRANSACTIONS:

- 2> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 3> ignore the transaction; and
 - 3> continue with any ongoing processes and procedures as the message was not received; and
 - 3> end the procedure.
- 2> else:
- 2> if the IE "RRC transaction identifier" of the received message is different from the "RRC transaction identifier" stored for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 3> if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL_ERROR_REJECT is set to FALSE:
 - 4> ignore the once accepted transaction and instead accept the new transaction; and
 - 4> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS, replacing the previous entry.
- NOTE 1: The UE is expected to process the first RRC CONNECTION SETUP/CELL UPDATE CONFIRM/URA UPDATE COMFIRM message that it receives after transmitting an RRC CONNECTION REQUEST/CELL_UPDATE/URA_UPDATE message. If the UE receives further RRC CONNECTION SETUP/CELL UPDATE CONFIRM/URA UPDATE COMFIRM messages without having transmitted another RRC CONNECTION REQUEST/CELL_UPDATE/URA_UPDATE message, the UE is not required to process these messages.
- NOTE 2: If the previously accepted transaction was a CELL UPDATE CONFIRM/URA UPDATE CONFIRM that included the IE "Dowlink counter synchronisation info", rather than ignore the first accepted transaction the UE may continue with the first transaction in the case where a cell re-selection interrupted the ongoing procedure causing a cell update procedure to be triggered. In this case the response message acts as an explicit acknowledgement of both the CELL UPDATE CONFIRM/URA UPDATE CONFIRM message signalling an SRNS relocation and the subsequent CELL UPDATE CONFIRM/URA UPDATE CONFIRM.
 - 3> else:
 - 3> if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - 4> reject the transaction; and
 - 4> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:
 - 5> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

Else:

If the received message is any of the messages:

- HANDOVER FROM UTRAN COMMAND; or
- CELL CHANGE ORDER FROM UTRAN:

the UE shall:

- 1> if the variable ORDERED_RECONFIGURATION is set to TRUE;
 - 2> reject the transaction; and
 - 2> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

3> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

Else:

If the received message is any other message, the UE shall:

- 1> if the IE "Message Type" of the received message is not present in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 2> if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL ERROR REJECT is set to FALSE:
 - 3> accept the transaction; and
 - 3> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS.
 - 2> else:
 - 2> if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - 3> reject the transaction; and
 - 3> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

1> else:

- 1> if the IE "Message Type" of the received message is present in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 2> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored in any entry for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 3> ignore the transaction; and
 - 3> continue with any ongoing processes and procedures as the message was not received; and
 - 3> end the procedure.
 - 2> else:
 - 2> if the IE "RRC transaction identifier" of the received message is different from the "RRC transaction identifier" stored in all entries for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - 3> if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL_ERROR_REJECT is set to FALSE:
 - 4> accept the additional transaction; and
 - 4> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS, in addition to the already existing entries.
 - 3> else:
 - 3> if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - 4> reject the transaction; and
 - 4> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

8.6.3.12 Capability Update Requirement

If the IE "Capability Update Requirement" is included the UE shall:

- 1> if the IE "UE radio access FDD capability update requirement" has the value TRUE:
 - 2> if the UE supports FDD mode:
 - 3> store its UTRA FDD capabilities and its UTRA capabilities common to FDD and TDD in the IE "UE radio access capability" and the IE "UE radio access capability extension" in variable UE_CAPABILITY_REQUESTED as specified below:
 - 4> if the UE supports multiple UTRA FDD Frequency Bands; or
 - 4> if the UE supports a single UTRA FDD Frequency Band different from Band I [21]:
 - 5> store the IE "UE radio access capability", excluding IEs "RF capability FDD" and "Measurement capability";
 - 5> store the IE "UE radio access capability extension", including the IEs "RF capability FDD extension" and the "Measurement capability extension" associated with each supported UTRA FDD frequency band indicated in the IE "Frequency band".
 - 4> else:
 - 5> store the IE "UE radio access capability", including the IEs "RF capability FDD" and "Measurement capability" associated with the Band I [21].
- 1> if the IE "UE radio access 3.84 Mcps TDD capability update requirement" has the value TRUE:
 - 2> if the UE supports 3.84 Mcps TDD mode:
 - 3> store its UTRAN-specific 3.84 Mcps TDD capabilities and its UTRAN-specific capabilities common to FDD and TDD in the variable UE_CAPABILITY_REQUESTED.
- 1> if the IE "UE radio access 7.68 Mcps TDD capability update requirement" has the value TRUE:
 - 2> if the UE supports 7.68 Mcps TDD mode:
 - 3> store its UTRAN-specific 7.68 Mcps TDD capabilities and its UTRAN-specific capabilities common to FDD and TDD in the variable UE_CAPABILITY_REQUESTED.
- 1> if the IE "UE radio access 1.28 Mcps TDD capability update requirement" has the value TRUE:
 - 2> if the UE supports 1.28 Mcps TDD mode:
 - 3> store its UTRAN-specific 1.28 Mcps TDD capabilities and its UTRAN-specific capabilities common to FDD and TDD in the variable UE_CAPABILITY_REQUESTED.
- 1> if the IE "System specific capability update requirement list" is present:
 - 2> for each of the RAT requested in the IE "UE system specific capability"
 - 3> if the UE supports the listed RAT:
 - 4> include its inter-RAT radio access capabilities for the listed RAT in the IE "UE system specific capability" from the variable UE_CAPABILITY_REQUESTED.
 - 4> if the listed RAT is GSM and PS Handover to GPRS is supported:
 - 5> include the IE "MS Radio Access Capability" in the variable UE_CAPABILITY_REQUESTED;
- If the IE " Capability update requirement " is not present, the UE shall:
 - 1> assume the default values as specified in subclause 10.3.3.2 and act in accordance with the above.

8.6.3.13 Group release information

The UE shall apply the following procedure to compare the IE "U-RNTI group" with the U-RNTI allocated to the UE stored in the variable U_RNTI.

If the IE "group discriminator" is equal to "All":

1> consider this as a group identity match.

If the IE "group discriminator" is equal to "U-RNTI mask":

- 1> let N be the value of the IE "U-RNTI bit mask index";
- 1> if N is equal to b20, b21, ... or b31:
 - 2> compare pairs of bits, starting from bit b31 downto, and including, bit N of the "SRNC identity" of the IE "U-RNTI" with the corresponding bits stored in the variable U_RNTI;
 - 2> if all pairs of bits are equal:
 - 3> consider this as a group identity match.
- 1> if N is equal to b1, b2, ... or b19:
 - 2> compare pairs of bits, starting from bit b31 downto, and including, bit b20 of the "SRNC identity" in the IE "U-RNTI" with the corresponding bits of the "SRNC identity" stored in the variable U_RNTI;
 - 2> if all pairs of bits are equal:
 - 3> then compare pairs of bits, starting from bit b19 downto, and including, bit N of the "S-RNTI" in the IE "U-RNTI" with the corresponding bits of the "S-RNTI" stored in the variable U_RNTI;
 - 3> if all pairs of bits are equal:
 - 4> consider this as a group identity match.

8.6.3.14 New E-RNTI

If the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> store the new value(s) in the variable E_RNTI;
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

8.6.4 Radio bearer information elements

8.6.4.1 Signalling RB information to setup list

If the IE "Signalling RB information to setup list" is included the UE shall:

- 1> use the same START value to initialise the COUNT-C and COUNT-I variables for all the signalling radio bearers in the list;
- 1> if the IE "Signalling RB information to setup list" was included in the RADIO BEARER SETUP message:

- 2> if the variable LATEST_CONFIGURED_CN_DOMAIN has been initialised:
 - 3> calculate the START value only once during this procedure according to subclause 8.5.9 for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN;
 - 3> store the calculated START value in the variable START_VALUE_TO_TRANSMIT.
- 1> for each occurrence of the IE "Signalling RB information to setup":
 - 2> use the value of the IE "RB identity" as the identity of the signalling radio bearer to setup;
 - 2> if the signalling radio bearer identified with the IE "RB identity" does not exist in the variable ESTABLISHED RABS:
 - 3> create a new entry for the signalling radio bearer in the variable ESTABLISHED_RABS.
 - 2> if the IE "Signalling RB information to setup list" was received in a message other than HANDOVER TO UTRAN COMMAND; and
 - 2> if the variable LATEST_CONFIGURED_CN_DOMAIN has been initialised and the value "STATUS" of the variable CIPHERING_STATUS of the CN domain stored in this variable is "Started":
 - 3> if the IE "Uplink RLC mode" or the IE "Downlink RLC mode" either in the IE "RLC info" or referenced by the RB identity in the IE "Same as RB" is set to "AM RLC" or "UM RLC":
 - 4> initialise the 20 MSB of the hyper frame number component of COUNT-C for this signalling radio bearer with the START value in the variable START_VALUE_TO_TRANSMIT;
 - 4> set the remaining LSB of the hyper frame number component of COUNT-C for this signalling radio bearer to zero;
 - 4> start to perform ciphering on this signalling radio bearer, using the value of the IE "RB identity" minus one as the value of BEARER in the ciphering algorithm.
 - 2> if the IE "Signalling RB information to setup list" was received in a message other than HANDOVER TO UTRAN COMMAND; and
 - 2> if the variable LATEST_CONFIGURED_CN_DOMAIN has been initialised and the value "Status" of the variable "INTEGRITY_PROTECTION_INFO" of the CN domain stored in this variable is "Started":
 - 3> initialise the 20 MSB of the hyper frame number component of COUNT-I for this signalling radio bearer with the START value in the variable START_VALUE_TO_TRANSMIT;
 - 3> set the remaining LSB of the hyper frame number component of COUNT-I for this signalling radio bearer to zero;
 - 3> for this signalling radio bearer, set the IE "Uplink RRC Message sequence number" in the variable INTEGRITY_PROTECTION_INFO to zero;
 - 3> start performing integrity protection according to subclauses 8.5.10.1 and 8.5.10.2.
 - 2> perform the actions for the IE "RLC info" as specified in subclause 8.6.4.9, applied for that signalling radio bearer;
 - 2> perform the actions for the IE "RB mapping info" as specified in subclause 8.6.4.8, applied for that signalling radio bearer.
- 1> apply a default value of the IE "RB identity" equal to 1 for the first IE "Signalling RB information to setup"; and
- 1> increase the default value by 1 for each occurrence.
- NOTE: The UTRAN should only use the default value of the IE "RB identity" within the RRC Connection Setup and Handover to UTRAN Command messages. If the default value of the IE "RB identity" is used in any other message then the UE behaviour is not specified.

8.6.4.2 RAB information for setup

If the IE "RAB information for setup" is included, the procedure is used to establish radio bearers belonging to a radio access bearer, and the UE shall:

- 1> if several IEs "RAB information for setup" are included and the included IEs "CN domain identity" in the IE "RAB info" does not all have the same value:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the radio access bearer identified with the IE "RAB info" does not exist in the variable ESTABLISHED RABS:
 - 2> create a new entry for the radio access bearer in the variable ESTABLISHED_RABS;
 - 2> store the content of the IE "RAB info" in the entry for the radio access bearer in the variable ESTABLISHED RABS;
 - 2> indicate the establishment of the radio access bearer to the upper layer entity using the IE "CN domain identity", forwarding the content of the IE "RAB identity";
 - 2> if prior to this procedure there exists no transparent mode radio bearer for the CN domain included in the IE "CN domain identity" and at least one transparent mode radio bearer is included in the IE "RB information to setup"; or
 - 2> if at least one RLC-AM or RLC-UM radio bearer is included in the IE "RB information to setup":
 - 3> calculate the START value only once during this procedure (the same START value shall be used on all new radio bearers created for this radio access bearer) according to subclause 8.5.9 for the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" part of the IE "RAB information to setup";
 - 3> store the calculated START value in the variable START_VALUE_TO_TRANSMIT.
- 1> for each radio bearer in the IE "RB information to setup":
 - 2> if the radio bearer identified with the IE "RB identity" does not exist in the variable ESTABLISHED_RABS:
 - 3> perform the actions specified in subclause 8.6.4.3;
 - 3> store information about the new radio bearer in the entry for the radio access bearer identified by "RAB info" in the variable ESTABLISHED_RABS;
 - 3> create a new RAB subflow for the radio access bearer;
 - 3> number the RAB subflow in ascending order, assigning the smallest number to the RAB subflow corresponding to the first radio bearer in the list;
 - 3> if the IE "CN domain identity" in the IE "RAB info" is set to "PS domain" and the number of RAB subflows for the radio access bearer is greater than 1:
 - 4> set the variable INVALID_CONFIGURATION to TRUE.
 - 2> if the radio bearer identified with the IE "RB identity" already exists in the variable ESTABLISHED_RABS:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.

8.6.4.2a RAB information to reconfigure

If the IE "RAB information to reconfigure" is included then the UE shall:

1> if the entry for the radio access bearer identified by the IE "CN domain identity" together with the IE "RAB Identity" in the variable ESTABLISHED_RABS already exists:

2> perform the action for the IE "NAS Synchronization Indicator", according to subclause 8.6.4.12.

1> else:

2> set the variable INVALID_CONFIGURATION to TRUE.

8.6.4.3 RB information to setup

If the IE "RB information to setup" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

- 1> use the same START value to initialise the hyper frame number components of COUNT-C variables for all the new radio bearers to setup;
- 1> perform the actions for the IE "PDCP info", if present, according to subclause 8.6.4.10, applied for the radio bearer;
- 1> perform the actions for the IE "RLC info", according to subclause 8.6.4.9, applied for the radio bearer;
- 1> perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer;
- 1> if the IE "Downlink RLC mode" either in the IE "RLC info" or referenced by the RB identity in the IE "Same as RB" is set to "TM RLC":
 - 2> configure delivery of erroneous SDUs in lower layers according to indication from upper layer [5].
- 1> if the IE "RB information to setup" was received in a message other than HANDOVER TO UTRAN COMMAND; and
- 1> if the IE "Uplink RLC mode" or the IE "Downlink RLC mode" either in the IE "RLC info" or referenced by the RB identity in the IE "Same as RB" is set to "AM RLC" or "UM RLC":
 - 2> initialise the 20 MSB of the hyper frame number component of COUNT-C for this radio bearer with the START value in the variable START_VALUE_TO_TRANSMIT;
 - 2> set the remaining LSB of the hyper frame number component of COUNT-C for this radio bearer to zero;
 - 2> start incrementing the COUNT-C values.
- 1> if the IE "RB information to setup" was received in a message other than HANDOVER TO UTRAN COMMAND; and
- 1> if the IE "Uplink RLC mode" and the IE "Downlink RLC mode" either in the IE "RLC info" or referenced by the RB identity in the IE "Same as RB" is set to "TM RLC":
 - 2> if prior to this procedure there exists no transparent mode radio bearer for the CN domain included in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS and at least one transparent mode radio bearer is included in the IE "RB information to setup":
 - 3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Not Started":
 - 4> at the activation time as specified in the IE "Ciphering activation time for DPCH" if included in the IE "Ciphering mode info" in the command message or, if this IE is not included, as specified in the IE "COUNT-C activation time" included in the response message:
 - 5> initialise the 20 most significant bits of the hyper frame number component of COUNT-C common for all transparent mode radio bearers of this CN domain with the START value in the variable START_VALUE_TO_TRANSMIT;
 - 5> set the remaining LSB of the hyper frame number component of COUNT-C to zero;
 - 5> do not increment the COUNT-C value common for all transparent mode radio bearers for this CN domain
 - 3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Started":
 - 4> at the activation time as specified in the IE "Activation Time" in the RADIO BEARER SETUP message:

- 5> initialise the 20 most significant bits of the HFN component of COUNT-C common for all transparent mode RLC radio bearer to the value of the latest transmitted START for this CN domain, while not incrementing the value of the HFN component of COUNT-C at each CFN cycle; and
- 5> set the remaining LSB of the HFN component of COUNT-C to zero;
- 5> start to perform ciphering on the radio bearer in lower layers while not incrementing the HFN.
- 4> at the activation time as specified in the IE "Ciphering activation time for DPCH" if included in the IE "Ciphering mode info" in the command message or, if this IE is not included, as specified in the IE "COUNT-C activation time" included in the response message:
 - 5> initialise the 20 most significant bits of the HFN component of COUNT-C common for all transparent mode radio bearers of this CN domain with the START value in the variable START VALUE TO TRANSMIT;
 - 5> set the remaining LSB of the HFN component of COUNT-C to zero;
 - 5> if the received message is used to perform a Timing re-initialised hard handover:
 - 6> increment the HFN component of the COUNT-C variable by one even if the "COUNT-C activation time" is set to zero.
 - 5> start incrementing the COUNT-C value common for all transparent mode radio bearers of this CN domain as normal, at each CFN value, i.e. the HFN component is no longer fixed in value but incremented at each CFN cycle.
- 2> if prior to this procedure there exists at least one transparent mode radio bearer for the CN domain included in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS:
 - 3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Not Started":
 - 4> do not increment the COUNT-C value common for all transparent mode radio bearers for this CN domain.
 - 3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Started":
 - 4> use the COUNT-C value common for all transparent mode radio bearers of this CN domain.
- 1> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS is set to "Started":
 - 2> start to perform ciphering on the radio bearer in lower layers, using the value of the IE "RB identity" minus one as the value of BEARER in the ciphering algorithm.

NOTE: UTRAN should not use the IE "RB information to setup" to setup radio bearers with RB identity in the range 1-4.

8.6.4.4 RB information to be affected

If the IE "RB information to be affected" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

1> perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer.

8.6.4.4a RB information to change list

The UE shall apply the following actions:

1> if the IE "RB information to change list" is included:

- 2> for the radio bearers identified for which the corresponding value of the IE "RB identity" is included in the IE "RB information to change list" and the IE "RB change" is set to "Release":
 - 3> release the radio bearer, as specified in subclause 8.6.4.6.
- NOTE: This concerns an existing radio bearer. All radio bearers included in the default configuration are part of the configuration that results after completing the radio bearer establishment procedure.
 - 2> for the radio bearers identified for which the corresponding value of the IE "RB identity" is included in the IE "RB information to change list" and the IE "RB change" is set to "Re- map":
 - 3> of the radio bearer, that is included in the default radio bearer configuration and is identified by the IE "Re-map to default RB":
 - 4> apply the IE "RB mapping info";
 - 4> perform a radio bearer reconfiguration in accordance with subclause 8.6.4.5.
- 1> for all other radio bearers ie. all the radio bearers in case the IE "RB information to change list" is absent or the radio bearers for which the corresponding value of the IE "RB identity" is not included in the IE "RB information to change list":
 - 2> continue the radio bearers unchanged.
- 1> for all transport channels on which no radio bearer is mapped:
 - 2> release the transport channel in accordance with subclause 8.6.5.7 or 8.6.5.8

8.6.4.5 RB information to reconfigure

If the IE "RB information to reconfigure" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

- 1> perform the actions for the IE "PDCP info", if present, according to subclause 8.6.4.10, applied for the radio bearer;
- 1> if the IE "RLC info" is present:
 - 2> perform the actions for the IE "RLC info", according to subclause 8.6.4.9, applied for the radio bearer.
- 1> else:
 - 2> continue using the current RLC configuration for the radio bearer.
- 1> perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer;
- 1> if the IE "Downlink RLC mode" in the IE "RLC info" is set to "TM RLC":
 - 2> configure delivery of erroneous SDUs in lower layers according to indication from upper layer [5].
- 1> if the IE "PDCP SN info" is included:
 - 2> perform the actions as specified in subclause 8.6.4.11 applied for the radio bearer.
- 1> if the IE "RB stop/continue" is included; and
 - 2> if the "RB identity" has a value greater than 2; and
 - 3> if the value of the IE "RB stop/continue" is "stop":
 - 4> configure the RLC entity for the radio bearer to stop;
 - 4> set the IE "RB started" in the variable ESTABLISHED_RABS to "stopped" for that radio bearer.
 - 3> if the value of the IE "RB stop/continue" is "continue":
 - 4> configure the RLC entity for the radio bearer to continue;

- 4> set the IE "RB started" in the variable ESTABLISHED_RABS to "started" for that radio bearer.
- 2> if the IE "RB identity" is set to a value less than or equal to 2:
 - 3> set the variable INVALID CONFIGURATION to TRUE.

8.6.4.6 RB information to release

If the IE "RB information to release" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

- 1> if the IE "RB identity" is set to a value less than 4:
 - 2> set the variable INVALID CONFIGURATION to TRUE.
- 1> if the IE "RB identity" refers to a signalling radio bearer:
 - 2> release the RLC entity for the signalling radio bearer;
 - 2> delete the information about the signalling radio bearer from the variable ESTABLISHED_RABS.
- 1> if the IE "RB identity" refers to a radio bearer:
 - 2> release the PDCP and RLC entities for that radio bearer;
 - 2> indicate release of the RAB subflow associated with the radio bearer to upper layers;
 - 2> delete the information about the radio bearer from the variable ESTABLISHED_RABS;
 - 2> when all radio bearers belonging to the same radio access bearer have been released:
 - 3> indicate release of the radio access bearer to upper layers providing the "CN domain identity" together with the "RAB identity" stored in the variable ESTABLISHED_RABS;
 - 3> delete all information about the radio access bearer from the variable ESTABLISHED RABS.

The UE shall:

- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25:
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

8.6.4.7 RB with PDCP information

If the IE "RB with PDCP information" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

- 1> for the IE "PDCP SN info":
 - 2> perform the actions as specified in subclause 8.6.4.11.

8.6.4.8 RB mapping info

If the IE "RB mapping info" is included, the UE shall:

- 1> for each multiplexing option of the RB:
 - 2> if a multiplexing option that maps a logical channel corresponding to a TM-RLC entity onto RACH, FACH, USCH, DSCH (only for TDD), HS-DSCH or E-DCH is included:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.

- 2> if the multiplexing option realises the radio bearer on the uplink (resp. on the downlink) using two logical channels with different values of the IE "Uplink transport channel type" (resp. of the IE "Downlink transport channel type"):
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 2> if that RB is using TM and the IE "Segmentation indication" is set to TRUE and, based on the multiplexing configuration resulting from this message, the logical channel corresponding to it is mapped onto the same transport channel as another logical channel:
 - 3> set the variable INVALID CONFIGURATION to TRUE.
- 2> if the transport channel considered in that multiplexing option is different from RACH and if that RB is using AM and the set of RLC sizes applicable to the uplink logical channel transferring data PDUs has more than one element not equal to zero:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 2> if that RB is using UM or TM and the multiplexing option realises it using two logical channels:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 2> for each logical channel in that multiplexing option:
 - 3> if the value of the IE "RLC size list" is set to "Explicit list":
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value (index) of any IE "RLC size index" in the IE "Explicit list" does not correspond to an "RLC size" in the IE transport format set of that transport channel given in the message; or
 - 4> if the transport channel this logical channel is mapped on in this multiplexing option is different from RACH, and if a "Transport format set" for that transport channel is not included in the same message, and the value (index) of any IE "RLC size index" in the IE "Explicit list" does not correspond to an "RLC size" in the stored transport format set of that transport channel; or
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value of any IE "Logical channel list" in the transport format set is not set to "Configured"; or
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and the value of any IE "Logical channel list" in the stored transport format set of that transport channel is not set to "Configured":
 - 5> set the variable INVALID CONFIGURATION to TRUE.
 - 3> if the value of the IE "RLC size list" is set to "All":
 - 4> if the transport channel this logical channel is mapped on is RACH; or
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value of any IE "Logical channel list" in the transport format set is not set to "Configured"; or
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and the value of any IE "Logical channel list" in the stored transport format set of that transport channel is not set to "Configured":
 - 5> set the variable INVALID_CONFIGURATION to TRUE.
 - 3> if the value of the IE "RLC size list" is set to "Configured":
 - 4> if the transport channel this logical channel is mapped on is RACH; or
 - 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and for none of the RLC sizes defined for that

transport channel in the "Transport format set", the "Logical Channel List" is set to "All" or given as an "Explicit List" which contains this logical channel; or

- 4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and for none of the RLC sizes defined in the transport format set stored for that transport channel, the "Logical Channel List" is set to "All" or given as an "Explicit List" which contains this logical channel:
 - 5> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if, as a result of the message this IE is included in, several radio bearers can be mapped onto the same transport channel, and the IE "Logical Channel Identity" was not included in the RB mapping info of any of those radio bearers for a multiplexing option on that transport channel or the same "Logical Channel Identity" was used more than once in the RB mapping info of those radio bearers for the multiplexing options on that transport channel:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the "RB mapping info" is considered as valid according to the rules above:
 - 2> delete all previously stored multiplexing options for that radio bearer;
 - 2> store each new multiplexing option for that radio bearer;
 - 2> perform the actions as specified in subclause 8.5.21;
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;
 - 2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.
- 1> if the IE "Uplink transport channel type" is set to the value "RACH":
 - 2> in FDD:
 - 3> refer the IE "RLC size index" to the RACH Transport Format Set of the first PRACH received in the IE "PRACH system information list" received in System Information Block 5, System Information Block 5bis or System Information Block 6.
 - 2> in TDD:
 - 3> use the first Transport Format of the PRACH of the IE "PRACH system information list" at the position equal to the value in the IE "RLC size index".

In case IE "RLC info" includes IE "Downlink RLC mode" ("DL RLC logical channel info" is mandatory present) but IE "Number of downlink RLC logical channels" is absent in the corresponding IE "RB mapping info", the parameter values are exactly the same as for the corresponding UL logical channels. In case two multiplexing options are specified for the UL, the first options shall be used as default for the DL. As regards the IE "Channel type", the following rule should be applied to derive the DL channel type from the UL channel included in the IE:

DL channel type implied by "same as"
DCH
FACH
DSCH

If ciphering is applied, UTRAN should not map Transparent Mode RBs of different CN domains on the same transport channel and it should not map transparent mode SRBs and RBs onto the same transport channel. In such cases the UE behaviour is not specified.

For FDD the list of multiplexing options configured in the UE for each RB and SRB should comply with the following rules otherwise the UE behaviour is not specified:

- at most one multiplexing option can contain the combination "FACH" for the DL and "RACH" for the UL;

- at most one multiplexing option can contain the combination "DCH" or "DCH + HS-DSCH" for the DL together with "DCH" for he UL;
- at most one multiplexing option can contain the combination "HS-DSCH" or "DCH + HS-DSCH" for the DL together with "DCH" for the UL;
- at most one multiplexing option can contain the combination "DCH" or "DCH + HS-DSCH" for the DL together with "E-DCH" for the UL; and
- at most one multiplexing option can contain the combination "HS-DSCH" or "DCH + HS-DSCH" for the DL together with "E-DCH" for the UL.

8.6.4.9 RLC Info

Upon reception of the IE "RLC Info", the UE shall:

- 1> if both the IE "Uplink RLC mode" and the IE "Downlink RLC mode" are present in the IE "RLC info":
 - 2> configure the transmitting and receiving RLC entities in the UE for that radio bearer accordingly.
- 1> else, if the IE "Uplink RLC mode" is present and the IE "Downlink RLC mode" is not present in the IE "RLC info":
 - 2> configure the transmitting RLC entity in the UE for that radio bearer accordingly and keep the configuration existing before the reception of the message for the receiving RLC entity.
- 1> else, if the IE "Uplink RLC mode" is not present and the IE "Downlink RLC mode" is present in the IE "RLC info":
 - 2> configure the receiving RLC entity in the UE for that radio bearer accordingly and keep the configuration existing before the reception of the message for the transmitting RLC entity.
- 1> if the IE "Polling info" is present in the IE "RLC info":
 - 2> for each present IE in the IE "Polling info":
 - 3> configure RLC to use the corresponding function according to the value of the IE.
 - 2> for each absent IE in the IE "Polling info":
 - 3> configure RLC to not use the corresponding function.
- 1> if the IE "Polling info" is absent:
 - 2> configure RLC to not use the polling functionality.
- 1> if the IE "Downlink RLC STATUS info" is present in the IE "RLC info" (this IE is present for AM RLC):
 - $2\!\!>$ for each present IE in the IE "Downlink RLC STATUS info":
 - 3> configure RLC to use the corresponding function according to value of the IE.
 - 2> for each absent IE in the IE "Downlink RLC STATUS info":
 - 3> configure RLC to not use the corresponding function.
- 1> if the IE "Transmission RLC discard" is present:
 - 2> configure the discard procedure in RLC according to the IE "Transmission RLC discard"
- 1> if the IE "Transmission RLC discard" is absent (only possible for TM RLC and UM RLC):
 - 2> do not configure SDU discard in RLC.
- 1> if the IE "Uplink RLC mode" is present and is set to "UM RLC":
 - 2> if the IE "Alternative E-bit interpretation" is present:

- 3> configure the uplink RLC entity to use the alternative E-bit interpretation and corresponding LI's.
- 2> if the IE "Alternative E-bit interpretation" is not present:
 - 3> configure the uplink RLC entity to use the normal E-bit interpretation and corresponding LI's.
- 1> if the IE "Downlink RLC mode" is present and is set to "AM RLC":
 - 2> if IE "DL RLC PDU size" is not present:
 - 3> determining the downlink RLC PDU size will be handled at RLC level as described in [16], without any configuration from RRC.
- NOTE: The case where this mandatory IE is not present is meant to handle the interaction with a network using an earlier release of the specification.
 - 2> else, if the IE "DL RLC PDU size" is present and no downlink RLC PDU size is currently set in the RLC entity:
 - 3> configure the corresponding RLC entity with the downlink RLC PDU size.
 - 2> else, if the IE "DL RLC PDU size" is present and its value is different from the one currently set in the RLC entity:
- NOTE: The downlink RLC PDU size set in the RLC entity can either be explicitly configured or, in case no explicit configuration is provided, derived by the first received RLC PDU [16].
 - 3> if the IE "one sided RLC re-establishment" is set to TRUE:
 - 4> re-establish the receiving side of the corresponding RLC entity.
 - 3> else:
 - 4> re-establish the corresponding RLC entity.
 - 3> configure the corresponding RLC entity with the new downlink RLC PDU size;
 - 3> if the UE supports the lossless DL RLC PDU size change and PDCP was configured for that radio bearer with the IE "Support for lossless SRNS relocation or for lossless DL RLC PDU size change" set to TRUE:
 - 4> include the current DL PDCP receive sequence number and the radio bearer identity for that radio bearer in the variable PDCP_SN_INFO.
 - 3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" for this radio bearer is set to "Started":
 - 4> if the RLC re-establishment is caused by a CELL UPDATE CONFIRM:
 - 5> if only the receiving side of the RLC entity was re-established:
 - 6> set the HFN values for the corresponding RLC entity in downlink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.
 - 5> if the whole RLC entity was re-established:
 - 6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.
 - 4> if the RLC re-establishment is caused by a reconfiguration message:
 - 5> if only the receiving side of the RLC entity was re-established:

- 6> set the HFN values for the corresponding RLC entity in downlink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.
- 5> if the whole RLC entity was re-established:
 - 6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.
- 1> if the IE "Downlink RLC mode" is present and is set to "UM RLC":
 - 2> if the IE "DL UM RLC LI size" is not present:
 - 3> configure the corresponding RLC entity with an LI size of 7 bits;
- NOTE: The case where this mandatory IE is not present is meant to handle the interaction with a network using an earlier release of the specification.
 - 2> else:
 - 3> configure the corresponding RLC entity with the LI size indicated in the IE "DL UM RLC LI size".
 - 2> if the IE "DL Reception Window Size" is present:
 - 3> if the variable UE_CAPABILITY_TRANSFERRED indicates "Support of HS-PDSCH" as "Supported":
 - 4> configure the corresponding RLC entity to support out-of-sequence reception with the receive window size indicated in the IE.
 - 3> if the variable UE_CAPABILITY_TRANSFERRED indicates "Support of HS-PDSCH" as "Unsupported":
 - 4> the UE behaviour is not specified.
 - 2> else:
 - 3> configure the corresponding RLC entity without out-of-sequence reception.
- NOTE: If the "Uplink RLC mode" or the "Downlink RLC mode" of an existing radio bearer is modified by a reconfiguration message, the UE behaviour is unspecified.
 - 2> if the IE "Alternative E-bit interpretation" is present:
 - 3> configure the downlink RLC entity to use the alternative E-bit interpretation and corresponding LI's.
 - 2> if the IE "Alternative E-bit interpretation" is not present:
 - 3> configure the downlink RLC entity to use the normal E-bit interpretation and corresponding LI's.

8.6.4.10 PDCP Info

For RFC 3095:

- 1> the chosen MAX_CID shall not be greater than the value "Maximum number of ROHC context sessions" as indicated in the IE "PDCP Capability".
- If IE "PDCP info" is included, the UE shall:
 - 1> if the radio bearer is connected to a CS domain radio access bearer:
 - 2> set the variable INVALID CONFIGURATION to TRUE.
 - 1> if the IE "PDCP PDU header" is set to the value "absent":
 - 2> if the IE "Support for lossless SRNS relocation or for lossless DL RLC PDU size change" is true:

- 3> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the IE "PDCP PDU header" is set to the value "present":
 - 2> include PDCP headers in both uplink and downlink PDCP PDUs;
 - 2> if the IE "Support for lossless SRNS relocation or for lossless DL RLC PDU size change" is false:
 - 3> if the IE "Header compression information" is absent:
 - 4> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the IE "Header compression information" is absent:
 - 2> not use Header compression after the successful completion of this procedure;
 - 2> remove any stored configuration for the IE "Header compression information".
- 1> if the IE "Header compression information" is present:
 - 2> if the IE "Algorithm Type" is set to "RFC 2507":
 - 3> if the UE capability "Maximum header compression context space", as specified in [35], is exceeded with this configuration:
 - 4> set the variable INVALID_CONFIGURATION to TRUE.
 - 2> if the IE "Algorithm Type" is set to "RFC 3095":
 - 3> if the uplink RLC mode for this radio bearer is RLC-TM:
 - 4> the behaviour of the UE is unspecified.
- 1> configure the PDCP entity for that radio bearer accordingly;
- 1> configure the RLC entity for that radio bearer according to the value of the IE "Support for lossless SRNS relocation or for lossless DL RLC PDU size change";
- 1> set the PROFILES parameter, used by inband ROHC profile negotiation, for this PDCP entity for both UL and DL equal to the list of ROHC profiles received in the IE "PDCP info". A UE complying to this version of the protocol shall support ROHC profiles 0x0000 (ROHC uncompressed), 0x0001 (ROHC RTP), 0x0002 (ROHC UDP) and 0x0003 (ROHC ESP) (see [52]).
- 1> if the IE "PDCP ROHC target mode" is received:
 - 2> set the variable "PDCP_ROHC_TARGET_MODE" to the received value.
- 1> if the IE "PDCP ROHC target mode" is not received in either of the CELL UPDATE CONFIRM, the RADIO BEARER RECONFIGURATION or the RADIO BEARER SETUP message:
 - 2> delete the variable "PDCD_ROHC_TARGET_MODE" and act according to actions specified in [36].

8.6.4.11 PDCP SN Info

If the IE "PDCP SN Info" is included, the UE shall:

- 1> transfer the sequence number to the PDCP entity for the radio bearer;
- 1> configure the RLC entity for the radio bearer to stop;
- 1> include the current PDCP receive sequence number and the radio bearer identity for the radio bearer in the variable PDCP_SN_INFO.

8.6.4.12 NAS Synchronisation Indicator

If the IE "NAS Synchronisation Indicator" is present in a message, the UE shall:

1> forward the content to upper layers along with the IE "CN domain identity" of the associated RAB stored in the variable ESTABLISHED_RABS at the CFN indicated in the IE "Activation time" in order to synchronise actions in NAS and AS.

8.6.4.13 PDCP context relocation info

If the IE "PDCP context relocation info" is included, the UE shall, for each radio bearer included in this IE:

- 1> If the IE "Downlink RFC 3095 context relocation indication" is set to TRUE:
 - 2> perform the actions as specified in [36] for all RFC 3095 contexts associated with that radio bearer in the downlink.
- 1> If the IE "Uplink RFC 3095 context relocation indication" is set to TRUE:
 - 2> perform the actions as specified in [36] for all RFC 3095 contexts associated with that radio bearer in the uplink.

8.6.4.14 RLC Info MBMS

Upon reception of the IE "RLC Info MBMS", the UE shall:

- 1> configure the receiving RLC entity in the UE for that radio bearer accordingly;
- 1> configure the corresponding RLC entity with the LI size indicated in the IE "DL UM RLC LI size".
- 1> if the IE "DL Duplication Avoidance and Reordering info" is present:
 - 2> configure the corresponding RLC entity to use the UM duplication avoidance and reordering functionality.
- 1> if the IE "DL Out of sequence delivery info" is present:
 - 2> configure the corresponding RLC entity to use the UM out of sequence delivery functionality.

8.6.5 Transport channel information elements

8.6.5.1 Transport Format Set

If the IE "Transport format set" is included, the UE shall:

- 1> if the transport format set is a RACH TFS received in System Information Block type 5 or System Information Block type 5bis or System Information Block type 6, and CHOICE "Logical Channel List" has a value different from "Configured":
 - 2> ignore that System Information Block.
- NOTE: The TFS added by the IE "Additional Dynamic Transport Format Information for CCCH" has no CHOICE "Logical Channel List" and can thus never be considered as different from "Configured".
- 1> if the transport format set for a downlink transport channel is received in a System Information Block, and CHOICE "Logical Channel List" has a value different from 'ALL':
 - 2> ignore that System Information Block.
- 1> if the transport format set for a downlink transport channel is received in a message on a DCCH, and CHOICE "Logical Channel List" has a value different from 'ALL':
 - 2> keep the transport format set if this exists for that transport channel;
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the value of any IE "RB identity" (and "Logical Channel" for RBs using two UL logical channels) in the IE "Logical channel list" does not correspond to a logical channel indicated to be mapped onto this transport

- channel in any RB multiplexing option (either included in the same message or previously stored and not changed by this message); or
- 1> if the "Logical Channel List" for any of the RLC sizes defined for that transport channel is set to "Configured" while it is set to "All" or given as an "Explicit List" for any other RLC size; or
- 1> if the "Logical Channel List" for any of the RLC sizes defined for that transport channel is set to "All" and for any logical channel mapped to this transport channel, the value of the "RLC size list" (either provided in the IE "RB mapping info" if included in the same message, or stored) is not set to "Configured"; or
- 1> if the "Logical Channel List" for any of the RLC sizes defined for that transport channel is given as an "Explicit List" that contains a logical channel for which the value of the "RLC size list" (either provided in the IE "RB mapping info" if included in the same message, or stored) is not set to "Configured"; or
- 1> if the "Logical Channel List" for all the RLC sizes defined for that transport channel are given as "Explicit List" and if one of the logical channels mapped onto this transport channel is not included in any of those lists; or
- 1> if the "Logical Channel List" for the RLC sizes defined for that transport channel is set to "Configured" and for any logical channel mapped onto that transport channel, the value of the "RLC size list" (either provided in the IE "RB mapping info" if included in the same message, or stored) is also set to "Configured"; or
- 1> if the IE "Transport Format Set" was not received within the IE "PRACH system information list" and if the "Logical Channel List" for the RLC sizes defined for that transport channel is set to "Configured" and for any logical channel mapped onto that transport channel, the "RLC size list" (either provided in the IE "RB mapping info" if included in the same message, or stored) is given as an "Explicit List" that includes an "RLC size index" that does not correspond to any RLC size in this "Transport Format Set"; or
- 1> if the IE "Transport Format Set" was not received within the IE "PRACH system information list", and if that RB is using AM and the set of RLC sizes applicable to the logical channel transferring data PDUs has more than one element not equal to zero:
 - 2> keep the transport format set if this exists for that transport channel;
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the total number of configured transport formats for the transport channel exceeds maxTF:
 - 2> keep the transport format set if this exists for that transport channel;
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the IE "Transport format set" is considered as valid according to the rules above:
 - 2> remove a previously stored transport format set if this exists for that transport channel;
 - 2> store the transport format set for that transport channel;
 - 2> consider the first instance of the parameter *Number of TBs and TTI List* within the *Dynamic transport format information* to correspond to transport format 0 for this transport channel, the second to transport format 1 and so on;
 - 2> if the IE "Transport format Set" has the choice "Transport channel type" set to "Dedicated transport channel":
 - 3> calculate the transport block size for all transport formats in the TFS using the following

TB size = RLC size + MAC header size if "RLC size"
$$\Leftrightarrow$$
 0,
TB size = 0 if "RLC size" = 0,

where:

- MAC header size is calculated according to [15] if MAC multiplexing is used. Otherwise it is 0 bits;
- 'RLC size' reflects the RLC PDU size.
- 2> if the IE "Transport format Set" has the choice "Transport channel type" set to "Common transport channel":
 - 3> calculate the transport block size for all transport formats in the TFS using the following:

TB size = RLC size.

- 2> if the IE "Number of Transport blocks" <> 0 and IE "RLC size" = 0, no RLC PDU data exists but only parity bits exist for that transport format;
- 2> if the IE "Number of Transport blocks" = 0, neither RLC PDU neither data nor parity bits exist for that transport format;
- 2> perform the actions as specified in subclause 8.5.21.

For configuration restrictions on Blind Transport Format Detection, see [27].

8.6.5.2 Transport format combination set

If the IE "Transport format combination set" is included for the uplink, the UE shall for that direction:

- 1> store the new transport format combination set, or (if this exists) modify a previously stored transport format combination set according to IEs included in IE "Transport format combination set";
- 1> start to respect those transport format combinations;
- 1> if IE "Transport format combination subset" is received in this message:
 - 2> perform the actions as specified in subclause 8.6.5.3.
- 1> if IE "Transport format combination subset" is not received in this message:
 - 2> clear the IE "Duration" in the variable TFC_SUBSET;
 - 2> set both the IE "Current TFC subset" and the IE "Default TFC subset" in the variable TFC_SUBSET to the value indicating "full transport format combination set".

If the IE "Transport format combination set" is included for the downlink, the UE shall for that direction:

- 1> store the new transport format combination set, or (if this exists) modify a previously stored transport format combination set according to IEs included in IE "Transport format combination set";
- 1> start to respect those transport format combinations.

If the IE "Transport format combination set" is not included for the uplink and if there is no addition, removal or reconfiguration of transport channels, the UE shall for that direction:

1> use a previously stored transport format combination set if this exists.

If the IE "Transport format combination set" is not included for the downlink and if there is no addition, removal or reconfiguration of transport channels, the UE shall for that direction:

1> use a previously stored transport format combination set if this exists.

If the IE "Transport format combination set" is not included for either the uplink or the downlink and for that direction after the reconfiguration there is one or more DCH; and

- 1> if no transport format combination set is stored in the UE; or
- 1> if transport channels are added or removed in the message; or
- 1> if any transport channel is reconfigured in the message such that the size of the transport format set is changed:

the UE shall:

1> set the variable INVALID_CONFIGURATION to TRUE.

In the uplink TFCS the minimum set of TFCs is the set of TFCs that is needed for the TFC selection algorithm defined in [15] to give a predictable result. Any configured TFCS or TFC subset shall satisfy the requirements as specified by the minimum set. In the definition of the minimum set of TFCs below, only logical channels for which the TFCS or the TFC subset include at least one TFC with non-empty TF for the corresponding transport channel should be considered.

The minimum set of TFCs consists of the following:

- 1> for each UM logical channel:
 - 2> a TFC with one transport block for this transport channel and empty TFs (see [34]) for all the others. If more than one TFC fulfils these criteria, only the TFC with the lowest number of bits should be included in the minimum set of TFCs.
- 1> for each AM logical channel:
 - 2> a TFC with a non-empty TF for the corresponding transport channel and empty TFs for all other transport channels, where the non-empty TF includes one transport block with "Configured RLC Size" equal to the RLC PDU size.
- 1> for each set of "synchronous" TM logical channels (see the definition below) and for each set of SDU sizes associated with it:
 - 2> a TFC with TFs corresponding to any combination of SDU sizes that can be received in a TTI from higher layers on the corresponding transport channels and empty TFs for all other transport channels.
- NOTE: In case an adaptive rate codec is used and the TFCS has been restricted by the IE "TFC subset", the minimum set consists of the set of TFCs with TFs corresponding to any combination of SDU sizes that can be received in a TTI respecting the restricted TFCS.
- 1> for each TM logical channel that is not part of a set of "synchronous" TM logical channels (see the definition below):
 - 2> a TFC with non-empty TFs for the corresponding transport channel, and empty TFs for all other transport channels, where
 - 3> for non-segmented mode TM-RLC logical channels the non-empty TFs include, for the smallest SDU size that can be received in a single TTI from higher layer:
 - 4> a TF with non-zero number of transport blocks with "Configured RLC Size" equal to the corresponding SDU size. If more than one TFC fulfils these criteria, only the TFC with the lowest number of bits in the TFC is included in the minimum set of TFCs.
 - 3> for segmented mode TM-RLC, the non-empty TFs include any TF such that the number of transport blocks multiplied by the "Configured RLC Size" is equal to the smallest SDU size that can be received in a single TTI from higher layer.
- 1> an "empty" TFC (see [34]).

Furthermore, the UTRAN should ensure that the uplink TFCS and any configured TFC Subset satisfies the following rules:

- 1> for each TTI length with which at least one transport channel is configured:
 - 2> for each combination of TFs for the transport channels configured with this TTI length included in the TFCS:
 - 3> a TFC with these TFs for the transport channels configured with this TTI length and empty TFs on all transport channels configured with shorter TTI lengths is also included in the TFCS.

For TDD, the TFCS of a CCTrCH should include those of the above combinations, which include a TF with one transport block for a transport channel used in that CCTrCH, and the "empty" TFC should be included in the TFCS of every CCTrCH.

Synchronous TM logical channels are logical channels on which higher layer traffic is generated in a perfectly correlated fashion (e.g. AMR RAB).

NOTE: The "Configured RLC Size" is defined as the transport block size minus the MAC header size.

8.6.5.3 Transport format combination subset

When configuring a TFC Subset, the UTRAN should follow the guidelines defined in subclause 8.6.5.2.

- If the IE "Transport format combination subset" ("TFC subset") is included, the UE shall:
 - 1> if the IE "Minimum allowed Transport format combination index" is included; and
 - 2> if the value of the IE "Minimum allowed Transport format combination index" is greater than the highest TFCI value in the current transport format combination set:
 - 3> consider the TFC subset to be incompatible with the current transport format combination set.
 - 1> if the IE "Allowed transport format combination list" is included; and
 - 2> if the value of any of the IEs "Allowed transport format combination" included in the IE "Allowed transport format combination list" does not match a TFCI value in the current transport format combination set:
 - 3> consider the TFC subset to be incompatible with the current transport format combination set.
 - 1> if the IE "Non-allowed transport format combination list" is included; and
 - 2> if the value of any of the IEs "Non-allowed transport format combination" included in the IE "Non-allowed transport format combination list" does not match a TFCI value in the current transport format combination set:
 - 3> consider the TFC subset to be incompatible with the current transport format combination set.
 - 1> if the IE "Restricted TrCH information" is included:
 - 2> if the value of any of the IEs "Uplink transport channel type" and "Restricted UL TrCH identity" included in the IE "Restricted TrCH information" do not correspond to any of the transport channels for which the current transport format combination set is valid:
 - 3> consider the TFC subset to be incompatible with the current transport format combination set.
 - 2> if the IE "Allowed TFIs" is included; and
 - 3> if the value of each of the IEs "Allowed TFI" included in the IE "Allowed TFIs" corresponds to a transport format for that transport channel within the current transport format combination set:
 - 4> allow all transport format combinations that include these transport formats for the transport channel;
 - 4> restrict all other transport format combinations.
 - 3> else:
 - 4> consider the TFC subset to be incompatible with the current transport format combination set.
 - 2> if the IE "Allowed TFIs" is not included:
 - 3> restrict all transport format combinations where the transport channel has a transport format of non-zero rate.
 - 1> if the UE considers the TFC subset to be incompatible with the current Transport format combination set according to the above:
 - 2> keep any previous restriction of the transport format combination set;
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
 - 1> if the UE does not consider the TFC subset to be incompatible with the current Transport format combination set according to the above:
 - 2> if the IE "Transport format combination subset" is received in a message other than a TRANSPORT FORMAT COMBINATION CONTROL message:
 - 3> set both the IE "Current TFC subset" and the IE "Default TFC subset" in the variable TFC_SUBSET to the IE "Transport format combination subset" (in case of TDD for the uplink CCTrCH specified by the IE "TFCS Id");

- 3> clear the IE "Duration" in the variable TFC_SUBSET;
- 3> apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC SUBSET.
- 1> if the IE "transport format combination subset" indicates the "full transport format combination set":
 - 2> set both the IE "Current TFC subset" and the IE "Default TFC subset" in the variable TFC_SUBSET to the value indicating "full transport format combination set";
 - 2> clear the IE "Duration" in the variable TFC_SUBSET;
 - 2> if the IE "Transport format combination subset" is received in a TRANSPORT FORMAT COMBINATION CONTROL message, then at the CFN indicated by the IE "Activation time for TFC subset" any restriction on transport format combination set is released and the UE may use the full transport format combination set;
 - 2> else:
 - 3> any restriction on transport format combination set is released and the UE may use the full transport format combination set.

8.6.5.4 DCH quality target

If the IE "DCH quality target" is included, the UE shall:

- 1> set, at physical channel establishment, the initial downlink target SIR value based on the received IE "DCH quality target" for the transport channel with respect to all transport formats;
- 1> adjust the target SIR for the downlink power control to meet the quality target received in the IE "DCH quality target" for the transport channel. The UE shall not compensate for the fact that the required SIR to achieve a target BLER for a particular transport format may be different from the required SIR to achieve the target BLER for another transport format..
- NOTE 1: Adjusting the target SIR is possible to do continuously by the UE if a CRC exists in all transport formats in the downlink TFS for a DCH. If a CRC does not exist in all transport formats, the UE can only adjust the target SIR when receiving transport formats containing a CRC and the UE has knowledge about the transport format according to [27].
- NOTE 2: If the UTRAN configures a UE to use blind transport format detection and configures a transport channel such that single transport format detection [27] must be used to detect the TF, then it is not possible for the UE to maintain a quality target for that transport channel.

8.6.5.5 Added or Reconfigured UL TrCH information

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

- 1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":
 - 2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.
- NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

If the IE "Added or Reconfigured UL TrCH information" is included and E-DCH is included and there is more than one MAC-d flow carried on E-DCH then the UE shall:

- 1> apply the values IE "E-DCH Transmission Time Interval" and the field HARQ info to all E-DCH MAC-d flows.
- NOTE: In case of multiple E-DCH MAC-d flows, IE "Added or Reconfigured UL TrCH information" is only included once. If the IE "Added or Reconfigured UL TrCH information" is included more than once with the IE "Uplink transport channel type" set to 'E-DCH', the UE behaviour is unspecified.
- 1> if the choice "UL parameters" is set to 'EDCH':

- 2> if the IE "HARQ Info" is included:
 - 3> perform the actions specified in subclause 8.6.5.17.
- 2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:
 - 3> for each MAC-d flow identified by the IE "Mac-d flow identity":
 - 4> perform the actions as specified in subclause 8.6.5.18.
- 2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

8.6.5.5a Added or reconfigured MAC-d flow

If the IE "Added or reconfigured MAC-d flow" is included, the UE shall:

- 1> if a MAC-hs queue (identified by the IE "MAC-hs queue Id") is included in both the IE "MAC-hs queue to add or reconfigure list" and the IE "MAC-hs queue to delete list":
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> for each MAC-hs queue included in the IE "MAC-hs queue to add or reconfigure" list:
 - 2> if the UE has previously stored a mapping between this MAC-hs queue and a MAC-d flow:
 - 3> delete the old mapping.
 - 2> map the MAC-d flow indicated in the current message to this MAC-hs queue;
 - 2> set the release timer for each of the MAC-hs queues in the MAC-hs entity to the value in the corresponding IE "T1";
 - 2> set the MAC-hs receiver window size for each of the MAC-hs queues in the MAC-hs entity to the value in the corresponding IE "MAC-hs window size"; and
 - 2> configure MAC-hs with the mapping between MAC-d PDU sizes index and allowed MAC-d PDU sizes as follows:
 - 3> if a MAC-d PDU size has been stored for a MAC-d PDU size index for the corresponding MAC-hs queue and no mapping is provided in the current message for this MAC-d PDU index:
 - 4> continue to use this mapping.
 - 3> if a MAC-d PDU size has been stored for a MAC-d PDU size index for the corresponding MAC-hs queue and a mapping is provided in the current message for this MAC-d PDU index:
 - 4> configure the MAC-hs entity with the mapping indicated in the current message.
- 1> for each MAC-hs queue included in the IE "MAC-hs queue to delete" list:
 - 2> delete any information about the MAC-hs queue identified by the IE "MAC-hs queue Id".
- 1> if the IE "Added or reconfigured MAC-d flow" is considered valid according to the rules above:
 - 2> perform the actions as specified in subclause 8.5.21.

8.6.5.6 Added or Reconfigured DL TrCH information

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

- 1> if the choice "DL parameters" is set to 'explicit':
 - 2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

- 1> if the choice "DL parameters" is set to 'same as uplink':
 - 2> if the IE "UL Transport Channel Identity" indicates an existing or a new UL Transport Channel:
 - 3> store as transport format for this transport channel the transport format associated with the transport channel identified by the IE "UL Transport Channel Identity".
 - 2> else:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the choice "DL parameters" is set to 'HSDSCH':
 - 2> if the IE "HARQ Info" is included:
 - 3> perform the actions specified in subclause 8.6.5.6b.
 - 2> if the IE "Added or Reconfigured MAC-d Flow" is included:
 - 3> perform the actions as specified in subclause 8.6.5.5a.
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 1> if the IE "DCH quality target" is included:
 - 2> perform the actions specified in subclause 8.6.5.4.
- NOTE: The UE stores the DL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted DL TrCH information" or the UE leaves RRC connected mode.
- 8.6.5.6a Void

8.6.5.6b HARQ Info

If the IE "HARQ Info" is included, the UE shall:

- 1> store the received configuration;
- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

- 1> configure the MAC-hs entity with the number of HARQ processes indicated in IE "Number of Processes";
- 1> assign to each of these HARQ processes IDs going from 0 to "Number of Processes" 1;
- 1> if the IE "Memory Partitioning" is set to 'Implicit':
 - 2> partition the soft memory buffer in the MAC-hs entity equally among the processes configured above. In the event that the division of the soft memory buffer results in a non-Integer value the partition memory size is rounded down to the nearerst Integer value.
- 1> if the IE "Memory Partitioning" is set to 'Explicit':
 - 2> if the UE capability "Total number of soft channel bits in HS-DSCH", as specified in [35], is exceeded with this configuration:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
- 2> else:
 - 3> partition the soft memory buffer in the MAC-hs entity according to the IE "Process memory size" assuming that the order in the list follows the order in the HARQ process IDs.

8.6.5.7 Deleted UL TrCH information

If the IE "Deleted UL TrCH information" is included the UE shall:

- 1> if an Uplink transport channel is requested to be deleted:
 - 2> delete any information about the transport channel identified by the IE "UL TrCH identity" and the IE "Uplink transport channel type".
- 1> if an E-DCH MAC-d flow is requested to be deleted:
 - 2> delete any information about the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity";
 - 2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

8.6.5.8 Deleted DL TrCH information

If the IE "Deleted DL TrCH information" is included the UE shall:

- 1> if a Downlink transport channel is requested to be deleted:
 - 2> delete any information about the transport channel identified by the IE "DL TrCH identity".
- 1> if a DL MAC-d flow is requested to be deleted:
 - 2> delete any information about the DL HS-DSCH MAC-d flow identified by the IE "MAC-d Flow Identity", i.e. delete any information about MAC-hs queue(s) mapped onto this MAC-d flow.
 - 2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

8.6.5.9 UL Transport channel information common for all transport channels

If the IE "UL Transport channel information common for all transport channels" is included the UE shall:

- 1> perform actions for the IE "TFC subset" as specified in subclause 8.6.5.3;
- 1> if the IE "PRACH TFCS" is included:
 - 2> set the variable INVALID CONFIGURATION to TRUE.
- 1> if the IE has the choice "mode" set to FDD:
 - 2> perform actions for the IE "UL DCH TFCS" as specified in subclause 8.6.5.2.
- 1> if the IE has the choice "mode" set to TDD:
 - 2> if the IE "Individual UL CCTrCH information" is included:
 - 3> for each TFCS identified by IE "UL TFCS id":
 - 4> perform actions for the IE "UL TFCS" as specified in subclause 8.6.5.2.
- 1> if the IE "TFC subset list" is included:
 - 2> remove a previously stored TFC subset list if this exists in the IE "TFC subset list" in the variable TFC_SUBSET;
 - 2> store the IE "TFC subset list" in the IE "TFC subset list" in the variable TFC_SUBSET;
 - 2> consider the first instance of the IE "TFC subset" in the IE "TFC subset list" as Transport Format Combination Subset 0 (TFC subset identity = 0), the second instance as Transport Format Combination Subset 1 (TFC subset identity = 1) and so on;
 - 2> if the IE"TFC subset list" contains greater than 8 elements then the UE behaviour is not specified.

NOTE: The UTRAN should not modify the TFC subset list when a temporary restriction of the TFC set is being applied, due to the reception of the IE "TFC Control Duration" in a TRANSPORT FORMAT COMBINATION CONTROL message is still being applied.

8.6.5.10 DL Transport channel information common for all transport channels

If the IE "DL Transport channel information common for all transport channels" is included the UE shall:

- 1> if the IE "SCCPCH TFCS" is included:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the IE choice "mode" is set to FDD:
 - 2> if the choice "DL parameters" is set to 'explicit':
 - 3> if the IE "DL DCH TFCS" is included:
 - 4> if the IE "SCCPCH TFCS" is included and the state the UE enters after handling the received information is other than CELL_DCH:
 - 5> ignore the received IE "DL DCH TFCS".
- NOTE: the IE "DL Transport channel information common for all transport channels" always includes a DL DCH TFCS configuration, either by including the IE "DL DCH TFCS" or by specifying that the TFCS is the same as in UL. If UTRAN does not require the reconfiguration of the concerned parameters, UTRAN may replace one TFC with the value that is already assigned for this IE.
 - 4> else:
 - 5> perform actions as specified in subclause 8.6.5.2.
- 1> if the IE choice "mode" is set to TDD:
 - 2> if the IE "Individual DL CCTRCH information" is included:
 - 3> for each DL TFCS identified by the IE "DL TFCS identity":
 - 4> if the IE choice "DL parameters" is set to 'independent':
 - 5> perform actions for the IE "DL TFCS" as specified in subclause 8.6.5.2.
 - 4> if the IE choice "DL parameters" is set to 'same as UL':
 - 5> if the IE "UL DCH TFCS identity" indicates an existing or a new UL TFCS:
 - 6> store for that DL TFCS the TFCS identified by the IE "UL DCH TFCS identity".
 - 5> else:
 - 6> set the variable INVALID_CONFIGURATION to TRUE.

8.6.5.11 Void

8.6.5.12 TFCS Reconfiguration/Addition Information

If the IE "TFCS Reconfiguration/Addition Information" is included the UE shall:

- 1> store the TFCs to be reconfigured/added indicated in the IE "CTFC information" as specified below;
- 1> if the IE "Power offset information" is included:
 - 2> perform actions as specified in [29].

In order to identify the TFCs included in this IE the UE shall calculate the CTFC as specified in subclause 14.10.

- 1> if the IE "Additional Dynamic Transport Format Information for CCCH" was included in the IE "RACH TFS":
 - 2> ignore for the CTFC calculation any TF added by the IE "Additional Dynamic Transport Format Information for CCCH".

If the IE "TFCS Reconfiguration/Addition Information" is used in case of TFCS "Complete reconfiguration" the UE shall:

- 1> remove a previously stored transport format combination set if this exists;
- 1> consider the first instance of the IE "CTFC information" as Transport Format Combination 0 in FDD (TFCI=0) and 1 in TDD (TFCI=1), the second instance as Transport Format Combination 1 in FDD (TFCI=1) and 2 in TDD (TFCI=2) and so on. In TDD the TFCI value = 0 is reserved for physical layer use.

If the IE "TFCS Reconfiguration/Addition Information" is used in case of TFCS "Addition" the UE shall insert the new additional(s) TFC into the first available position(s) in ascending TFCI order in the TFCS.

8.6.5.12a Additional RACH TFCS for CCCH

If the IE "Additional RACH TFCS for CCCH" is included the UE shall:

- 1> if the IE "Power offset information" is included:
 - 2> perform actions as specified in [29].
- 1> add to the TFCS as calculated in 8.6.5.12 for the corresponding PRACH the TFC which consists of the TF added by the IE "Additional Dynamic Transport Format Information for CCCH" into the next position in ascending order after the highest TFCI value already used.

NOTE: On PRACH only one transport channel can be multiplexed.

8.6.5.13 TFCS Removal Information

If the IE "TFCS Removal Information" is included the UE shall:

1> remove the TFC indicated by the IE "TFCI" from the current TFCS, and regard this position (TFCI) in the TFCS as vacant.

8.6.5.14 Void

8.6.5.15 TFCS Explicit Configuration

If the IE "TFCS Explicit Configuration" is included the UE shall:

- 1> if the IE choice "TFCS representation" is set to 'complete reconfiguration':
 - 2> perform the actions for the IE "TFCS Reconfiguration/Addition Information" as specified in subclause 8.6.5.12.
- 1> if the IE choice "TFCS representation" is set to 'addition':
 - 2> perform the actions for the IE "TFCS Reconfiguration/Addition Information" as specified in subclause 8.6.5.12.
- 1> if the IE choice "TFCS representation" is set to 'removal':
 - 2> perform the actions for the IE "TFCS Removal Information" as specified in subclause 8.6.5.13.
- 1> if the IE choice "TFCS representation" is set to 'replace':
 - 2> perform first the actions for the IE "TFCS Removal Information" as specified in subclause 8.6.5.13; and then

2> perform the actions for the IE "TFCS Reconfiguration/Addition Information" as specified in subclause 8.6.5.12.

8.6.5.16 E-DCH Transmission Time Interval

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

- 1> store the received TTI;
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

If the received "E-DCH Transmission Time Interval" is 2 ms and the previously stored TTI was 10 ms:

1> not send any data on E-DPDCH in first 8 TTIs after activation time of new TTI.

8.6.5.17 HARQ Info for E-DCH

If the IE "HARQ Info for E-DCH" is included, the UE shall:

- 1> store the received configuration;
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

8.6.5.18 Added or reconfigured E-DCH MAC-d flow

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

- 1> if the IE "E-DCH MAC-d flow power offset" is included:
 - 2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".
- 1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:
 - 2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".
- 1> if the IE "E-DCH MAC-d flow multiplexing list" is included:
 - 2> only multiplex MAC-d PDU"s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU"s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

- 2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:
 - 3> continue to only multiplex E-DCH PDU"s from the E-DCH MAC-d flow indicated in the IE 'E-DCH MAC-d flow identity' with MAC-d PDU"s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE 'E-DCH MAC-d flow multiplexing list'.
- 2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

- 3> allow multiplexing of MAC-d PDU"s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU"s from any other E-DCH MAC-d flow in the same MAC-e PDU.
- 1> if the IE "Non-scheduled transmission grant info" is included:
 - 2> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:
 - 3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> else:

- 3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".
- 1> if the IE "Scheduled transmission grant info" is included:
 - 2> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).
- 1> perform the actions as specified in subclause 8.5.21;
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

8.6.6 Physical channel information elements

This subclause specifies the actions upon reception and/or non-reception of the physical channel information elements. The combination of the values of those information elements included in a given message shall follow the compatibility rules that are specified in the physical layer specifications. In case those rules are not followed, the UE shall set the variable INVALID_CONFIGURATION to TRUE.

8.6.6.1 Frequency info

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

- 1> if the IE "Frequency info" is included:
 - 2> if the frequency is different from the currently used frequency:
 - 3> store and use the frequency indicated by the IE "Frequency Info";
 - 3> if the received message is used to perform a Timing-maintained hard handover (see subclause 8.3.5.2), and IE "Timing maintained Synchronization indicator" is included:
 - 4> not perform any physical layer synchronisation procedure (FDD only);
 - 3> else:
 - 4> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).
 - 2> if the frequency is the same as the currently used frequency:
 - 3> continue to use the currently used frequency;
 - 3> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).
- 1> if the IE "Frequency info" is not included and the UE has a currently used frequency:
 - 2> continue to use the currently used frequency;

NOTE If the received message is used to perform a Timing-reinitialised hard handover, and the IE "Frequency Info" is not included, the UE may perform the physical layer synchronisation procedure A as specified in [29] (FDD only).

8.6.6.2 Void

8.6.6.2a PNBSCH allocation

The UE shall consider the frame numbers fulfilling the following equation as "PRACH blocked frames" as specified in [33].

$$SFN = \lfloor k * Repetition period \rfloor$$

for an integer k with k {0, 1, 2, 3, 4, ..., value of IE "Number of repetitions per SFN period" - 1}, where:

Repetition period is: 4096 / value of IE "Number of repetitions per SFN period".

The UE shall configure the physical layer for the physical random access procedure accordingly.

8.6.6.3 Void

8.6.6.3a Downlink information per radio link list

If the IE "Downlink information per radio link list" is included in a received message, the UE shall:

- 1> if the active set resulting after the reception of the IE "Downlink information per radio link list" would contain radio links indicated by the IE "Downlink DPCH info for each RL" and radio links indicated by the IE "Downlink F-DPCH info for each RL":
 - 2> set the variable INVALID CONFIGURATION to TRUE.
- 1> if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:
 - 2> for FDD, check whether the radio links included in the IE "Downlink information per radio link list" are part of the current active set considering that a radio link is uniquely identified by the downlink UARFCN and the primary scrambling code;
 - 2> for TDD, check whether the radio links included in the IE "Downlink information per radio link list" are part of the current active set considering that a radio link is uniquely identified by the UARFCN and the primary CCPCH;
 - 2> if all radio links included in the IE "Downlink information per radio link list" are part of the current active set:
 - 3> for radio links part of the current active set, and present in the IE "Downlink information per radio link list":
 - 4> update the downlink physical channel configuration according to the IE "Downlink information for each radio link" as specified in subclause 8.6.6.4.
 - 3> for radio links part of the current active set, and absent in the IE "Downlink information per radio link list":
 - 4> not change its current downlink physical channel configuration;
 - 4> For FDD, in case the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE' for another radio link, no longer consider any of these absent radio links as serving HS-DSCH radio link;

- 4> For FDD, in case the IE "Serving E-DCH radio link indicator" is set to 'TRUE' for another radio link, no longer consider any of these absent radio links as serving E-DCH radio link.
- 2> if all radio links included in the IE "Downlink information per radio link list" are not part of the current active set:
 - 3> perform a hard handover by replacing all the radio links in the current active set with the radio links in the IE "Downlink information per radio link list", each with a downlink physical channel configuration according to the IE "Downlink information for each radio link" as specified in subclause 8.6.6.4;
 - 3> perform the checks on the value of the IE "Default DPCH Offset Value" as specified in subclause 8.3.5.1.2 or 8.3.5.2.2;
 - 3> act on the IE "Timing indication" and the IE "Default DPCH Offset Value", if included, as specified in subclause 8.5.15.2;
- NOTE: UTRAN should not mix radio links which are part of the current active set and radio links which are not part of the current active set in the same IE "Downlink information per radio link list". In such cases the UE behaviour is unspecified.

1> otherwise:

- 2> if the message was received in CELL_FACH state and the UE would transit to CELL_DCH state according to subclause 8.6.3.3 applied on the received message:
 - 3> establish a downlink physical channel configuration for each of the included radio links according to the IE "Downlink information for each radio link" as specified in subclause 8.6.6.4.

8.6.6.4 Downlink information for each radio link

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

- 1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:
 - 2> if the UE is in TDD mode and shared transport channels are assigned to the UE:
 - 3> start to receive the indicated Secondary CCPCH.
 - 2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:
 - 3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.
 - 2> For FDD:
 - 3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':
 - 4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.
 - 2> For FDD:
 - 3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':
 - 4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.
 - 3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:
 - 4> store the newly received E-AGCH configuration.
 - NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.
 - 3> if the IE "E-HICH information" is included:
 - 4> store this E-HICH configuration for the concerning radio link.

- 3> if the IE "E-HICH information" is included or previously stored:
 - 4> store this E-RGCH configuration for the concerning radio link, if included.
- 3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.
- 2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.
- 1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:
 - 2> For FDD:
 - 3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':
 - 4> consider this radio link as the serving HS-DSCH radio link;
 - 4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:
 - 5> clear the variable H_RNTI.
 - 3> if the IE "Serving HS-DSCH radio link indicator" is set to "FALSE" and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:
 - 4> no longer consider this radio link as the serving HS-DSCH radio link.
 - 3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;
 - 3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':
 - 4> consider this radio link as the serving E-DCH radio link;
 - 4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:
 - 5> if the IE "New Primary E-RNTI" is not included:
 - 6> clear the Primary E-RNTI stored in the variable E_RNTI.
 - 5> if the IE "New Secondary E-RNTI" is not included:
 - 6> clear the Secondary E-RNTI stored in the variable E_RNTI.
 - 3> if the IE "Serving E-DCH radio link indicator" is set to "FALSE" and this radio link was considered the serving E-DCH radio link prior to reception of this message:
 - 4> no longer consider this radio link as the serving E-DCH radio link.
 - 3> if the IE "E-HICH release indicator" is present:
 - 4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.
 - 3> if the IE "E-RGCH release indicator" is present:
 - 4> delete the stored E-RGCH configuration for this RL.
 - 3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.
 - 2> For TDD:
 - 3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:
 - 4> clear the variable H RNTI.

- 3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.
- 2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:
 - 3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.
- NOTE: The Release '99 RADIO BEARER RECONFIGURATION message always includes at least one IE "Downlink information for each radio link" containing the mandatory IEs, even if UTRAN does not require the reconfiguration of any radio link.
- 1> if the UE would enter either the CELL_FACH, CELL_PCH or URA_PCH state according to subclause 8.6.3.3 applied on the received message:
 - 2> if IEs other than the IE "Primary CPICH info" (for FDD) or the IE "Primary CCPCH info" (for TDD) are included in the IE "Downlink information for each radio link":
 - 3> ignore these IEs.
 - 2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

8.6.6.5 Void

8.6.6.6 Uplink DPCH info

If the IE "Uplink DPCH info" is included, the UE shall:

For FDD:

- 1> release any active uplink physical channels and activate the given physical channels;
- 1> if the IE "Number of FBI bits" is not included:
 - 2> use 0 FBI bits in the Uplink DPCH.
- 1> use an SF equal to or greater than the minimum SF indicated in the IE "Spreading Factor" during uncompressed frames or compressed frames by HL scheduling;
- 1> use an SF equal to or greater than the minimum SF divided by 2 during compressed frames by SF reduction.

For TDD:

- 1> release the uplink physical channels associated with any CCTrCH that is removed or reconfigured and activate the physical channels assigned to any CCTrCH that is added or reconfigured;
- 1> for 3.84 Mcps TDD or 7.68 Mcps TDD use the IE "UL target SIR" specified for each added or reconfigured CCTrCH as described in subclause 8.5.7. For 1.28 Mcps TDD use the value of IE 'UL target SIR' specified for each added or reconfigured CCTrCH for parameter PRX_{DPCHdes} as described in subclause 8.5.7;
- 1> for 1.28 Mcps TDD:
 - 2> if "PLCCH Info" is included then store PLCCH Info parameters with respect to this uplink DPCH (overwriting parameter values previously stored);
 - 2> if "PLCCH Info" is not included then delete the PLCCH Info stored with respect to this uplink DPCH.
- 1> use the parameters of the IE "Time info" for each added or reconfigured CCTrCH;
- 1> if present, use the IE "Uplink Timing Advance Control" as specified in subclause 8.6.6.26.

8.6.6.7 Void

8.6.6.8 Maximum allowed UL TX power

If the IE "Maximum allowed UL TX power" is included in the Handover to UTRAN Command, in any other dedicated message or in System Information Block type 3 or in System Information Block 4, the UE shall:

1> store and use the value until it is updated.

If the IE "Maximum allowed UL TX power" was not included in any dedicated message, the UE shall:

1> use the value previously stored, when received in an earlier dedicated message, Handover to UTRAN Command message or received in System Information Block type 3 or in System Information Block 4.

For all cases, the UE shall:

- 1> keep the UE uplink transmit power at or below the indicated power value;
- 1> if the current UE uplink transmit power is above the indicated power value:
 - 2> decrease the power to a level at or below the power value.

The maximum UE TX power is defined as the lower of the maximum output power of the UE power class and the maximum allowed UL TX power indicated in this IE. The maximum UE TX power shall not be exceeded.

8.6.6.9 Void

8.6.6.10 Void

8.6.6.11 Uplink DPCH power control info

The UE shall:

1> in FDD:

- 2> if the IE "Uplink DPCH power control info" is included:
 - 3> if a synchronisation procedure A is performed according to [29]:
 - 4> calculate and set an initial uplink transmission power;
 - 4> start inner loop power control as specified in subclause 8.5.3;
 - 4> for the UL inner loop power control:
 - 5> use the parameters specified in the IE.

3> else:

- 4> ignore the IEs "DPCCH Power offset", "PC Preamble" and "SRB delay";
- 4> act on the IE "Power control algorithm" and the IE "TPC step size", if included.
- 3> act on the IEs " Δ_{ACK} ", " Δ_{NACK} " and "Ack-Nack repetition factor", if included;
- 3> use the procedure for transmitting HS-DPCCH preamble and postamble according to [29], if the IE "HARQ_preamble_mode" is set to 1.

1> in 3.84 Mcps TDD or 7.68 Mcps TDD:

- 2> if the IE "Uplink DPCH power control info" is included:
 - 3> use the parameters specified in the IE for open loop power control as defined in subclause 8.5.7.
- 2> else:
 - 3> use the current uplink transmission power.
- 1> in 1.28 Mcps TDD:
 - 2> if the CHOICE UL OL PC info is set to 'Broadcast UL OL PC info':
 - 3> set the variable INVALID_CONFIGURATION to true.
 - 2> if the IE "Uplink DPCH power control info" is included in the UPLINK PHYSICAL CHANNEL CONTROL message:
 - 3> use "Beacon PL Est." and the TPC step size for the closed loop power control of the CCTrCH identified in the message, replacing the existing value used for the CCTrCH.
 - 3> if the IE " UL target SIR " is included:
 - 4> use this value for parameter PRX_{DPCHdes} for open loop power control of the CCTrCH identified in the message in the case of a transition from closed loop to open loop power control as specified in [33].
 - 2> if the IE "Uplink DPCH power control info" is included in the IE "Uplink DPCH info":
 - 3> use the "Beacon PL Est." and TPC step size for the closed loop power control of all CCTrCH added or reconfigured by the IE replacing any existing values used for the CCTrCHs;
 - 3> if the IE " UL target SIR " is included ignore the parameter.
- 1> both in FDD and TDD;
 - 2> if the IE "Uplink DPCH power control info" is not included in a message used to enter CELL_DCH:
 - 3> set the variable INVALID_CONFIGURATION to true.
- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

8.6.6.12 Secondary CPICH info

If the IE Secondary CPICH info is included, the UE may:

- 1> use the channelisation code according to IE "channelisation code", with scrambling code according to IE "DL scrambling code" in the IE "Secondary CPICH info", for channel estimation of that radio link;
- 1> use the pilot bits on DPCCH for channel estimation.

If the IE Secondary CPICH info is not included, the UE shall:

1> not use any previously stored configuration corresponding to the usage of the Secondary CPICH info.

8.6.6.13 Primary CPICH usage for channel estimation

If the IE "Primary CPICH usage for channel estimation" is included and has the value "Primary CPICH may be used" the UE:

- 1> may use the Primary CPICH for channel estimation;
- 1> may use the pilot bits on DPCCH for channel estimation.
- NOTE: If the IE "Primary CPICH usage for channel estimation" has the value "Primary CPICH shall not be used" and the IE "Secondary CPICH info" is not included for that radio link then the UE behaviour is not specified.

If the IE "Primary CPICH usage for channel estimation" is included and has the value "Primary CPICH shall not be used" the UE:

- 1> shall not use the Primary CPICH for channel estimation;
- 1> may use the Secondary CPICH for channel estimation;
- 1> may use the pilot bits on DPCCH for channel estimation.

8.6.6.14 DPCH frame offset

If "DPCH frame offset" is included in a message that instructs the UE to enter CELL_DCH state:

- 1> UTRAN should:
 - 2> if only one Radio Link is included in the message:
 - 3> if the UE is configured for DPCH:
 - 4> set "Default DPCH Offset Value" and "DPCH frame offset" respecting the following relation:

(Default DPCH Offset Value) mod 38400 = DPCH frame offset

- where the IE values used are the Actual Values of the IEs as defined in clause 11.
- 3> if the UE is configured for F-DPCH:
 - 4> set "Default DPCH Offset Value" and "DPCH frame offset" respecting one of the following relations:
 - 5> (Default DPCH Offset Value) mod 38400 = DPCH frame offset; or
 - 5> (Default DPCH Offset Value+256) mod 38400 = DPCH frame offset,
 - where the IE values used are the Actual Values of the IEs as defined in clause 11.
- 2> if more than one Radio Link are included in the message:
 - 3> if the UE is configured for DPCH:
 - 4> set "Default DPCH Offset Value" and "DPCH frame offset" respecting the following relation:

(Default DPCH Offset Value) mod 38400 = DPCH frame offset_i

- where *j* indicates the first radio link listed in the message and the IE values used are the Actual Values of the IEs as defined in clause 11.
- 3> if the UE is configured for F-DPCH:
 - 4> set "Default DPCH Offset Value" and "DPCH frame offset_i" respecting one of the following relations:
 - 5> (Default DPCH Offset Value) mod 38400 = DPCH frame offset_j; or
 - 5> (Default DPCH Offset Value+256) mod 38400 = DPCH frame offset_i,
 - where *j* indicates the first radio link listed in the message and the IE values used are the Actual Values of the IEs as defined in clause 11.
- 1> The UE shall:
 - 2> if only one Radio Link is included in the message:
 - 3> if the UE is configured for DPCH:
 - 4> if (Default DPCH Offset Value) mod 38400 = DPCH frame offset:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value.
 - 4> else:

- 5> set the variable INVALID_CONFIGURATION to true.
- 3> if the UE is configured for F-DPCH:
 - 4> if (Default DPCH Offset Value) mod 38400 = DPCH frame offset:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value.
 - 4> else if (Default DPCH Offset Value+256) mod 38400 = DPCH frame offset:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value + 256.
 - 4> else:
 - 5> set the variable INVALID_CONFIGURATION to true.
- 2> if more than one Radio Links are included in the message:
 - 3> if the UE is configured for DPCH:
 - 4> if (Default DPCH Offset Value) mod 38400 = DPCH frame offset_i,
 - where *j* indicates the first radio link listed in the message:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value.
 - 4> else:
 - 5> set the variable INVALID_CONFIGURATION to true.
 - 3> if the UE is configured for F-DPCH:
 - 4> if (Default DPCH Offset Value) mod 38400 = DPCH frame offset_i,
 - where *j* indicates the first radio link listed in the message:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value.
 - 4> else if (Default DPCH Offset Value+256) mod 38400 = DPCH frame offset_i,
 - where *j* indicates the first radio link listed in the message:
 - 5> set DOFF (see subclause 8.5.15.1) to Default DPCH Offset Value + 256.
 - 4> else:
 - 5> set the variable INVALID_CONFIGURATION to true.

If the IE "DPCH frame offset" is included the UE shall:

1> use its value to determine the beginning of the DPCH or F-DPCH frame.

8.6.6.15 DPCH Compressed mode info

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall for each transmission gap pattern sequence perform the following consistency checks:

- 1> if the UE, according to its measurement capabilities, and for all supported bands of the UTRA mode or RAT associated with the measurement purpose indicated by IE "TGMP", requires UL compressed mode, and CHOICE 'UL/DL mode' indicates 'DL only':
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the UE, according to its measurement capabilities, and for all supported bands of the UTRA mode or RAT associated with the measurement purpose indicated by IE "TGMP", requires DL compressed mode, and CHOICE 'UL/DL mode' indicates 'UL only':

- 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the UE, according to its measurement capabilities, does not require UL compressed mode for any of supported band of the UTRA mode or RAT associated with the measurement purpose indicated by the IE "TGMP", and CHOICE 'UL/DL mode' indicates 'UL only' or 'UL and DL':
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if the UE, according to its measurement capabilities, does not require DL compressed mode for any supported band of the UTRA mode or RAT associated with the measurement purpose indicated by the IE "TGMP", and CHOICE 'UL/DL mode' indicates 'DL only' or 'UL and DL':
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if UE already has an active transmission gap pattern sequence that, according to IE "TGMP", has the same measurement purpose, and both patterns will be active (according to the IE "Current TGPS Status Flag" in variable TGPS_IDENTITY) after the new configuration has been taken into use:
 - 2> set the variable INVALID_CONFIGURATION to TRUE.
- 1> if there is any pending "TGPS reconfiguration CFN" or any pending "TGCFN":
 - 2> the UE behaviour is unspecified.

If variable INVALID_CONFIGURATION has value FALSE after UE has performed the checks above, the UE shall:

- 1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag") in the variable TGPS_IDENTITY):
 - 2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:
 - 3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.
 - 3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.
 - 2> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:
 - 3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.
- NOTE1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.
- NOTE2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.
- 1> update each pattern sequence to the variable TGPS IDENTITY according to the IE "TGPSI";
- 1> update into the variable TGPS_IDENTITY the configuration information defined by IE group" transmission gap pattern sequence configuration parameters ";
- 1> if an F-DPCH is configured:
 - 2> not use the IEs "Downlink compressed mode method", "Downlink frame type", "DeltaSIR1", "DeltaSIRafter1", and if included, the IEs "DeltaSIR2", "DeltaSIRafter2".
- 1> after the instant in which the message is to be executed, as specified in subclause 8.6.3.1:
 - 2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" in the variable TGPS_IDENTITY is set to "activate" at the time indicated by IE "TGCFN"; and

- 2> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".
- NOTE1: If the pattern is activated with a message that includes the IE "Activation time", and if the CFN value indicated by the IE "Activation Time" and the CFN value indicated by the TGCFN are included in the same TTI (but not at the TTI boundary) common to all the transport channels that are multiplexed onto the reference CCTrCh (as defined in subclause 8.6.3.1), and if the CFN value indicated by the TGCFN is equal or higher than the CFN value indicated by the IE "Activation Time" (as defined in subclause 8.6.3.1) value, the UE behaviour is not specified.
- NOTE2: If the pattern is activated with a message used to perform timing re-initialised hard handover, the UE can start evaluating the activation of the pattern (i.e. compare the value of the CFN in the new configuration with the value of the TGCFN) at any time between the message activation time and the completion of the synchronisation procedure A.
 - 2> if the IE "DPCH compressed mode info" is included in a message used to perform a Hard Handover with change of frequency (see subclause 8.3.5); or
 - 2> if the IE "DPCH compressed mode info" is included in a message used to transfer the UE from Cell_FACH to Cell_DCH, and the cell in which the UE transited from CELL_FACH state is not included in the active set for the CELL_DCH state (see subclause 8.4.1.7.2):
 - 3> not begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.
 - 2> else:
 - 3> begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.
 - 2> begin the inter-RAT measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
 - 2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":
 - 3> start the concerned pattern sequence immediately at that CFN.
- 1> monitor if the parallel transmission gap pattern sequences create an illegal overlap, and in case of overlap, take actions as specified in subclause 8.2.11.2.

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is not included, the UE shall:

- 1> if, as the result of this message, UE will have more than one transmission gap pattern sequence with the same measurement purpose active (according to IEs "TGMP" and "Current TGPS Status Flag" in variable TGPS_IDENTITY):
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if there is any pending "TGPS reconfiguration CFN" or any pending "TGCFN":
 - 2> the UE behaviour is unspecified.
- 1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag" in the variable TGPS_IDENTITY):
 - 2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:
 - 3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use:
 - 3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.
 - 2> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:

- 3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.
- NOTE1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.
- NOTE2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.
- 1> after the instant in which the message is to be executed, as specified in subclause 8.6.3.1:
 - 2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" at the time indicated by IE "TGCFN"; and
- NOTE1: If the pattern is activated with a message that includes the IE "Activation time", and if the CFN value indicated by the IE "Activation Time" and the CFN value indicated by the TGCFN are included in the same TTI (but not at the TTI boundary) common to all the transport channels that are multiplexed onto the reference CCTrCh (as defined in subclause 8.6.3.1), and if the CFN value indicated by the TGCFN is equal or higher than the CFN value indicated by the IE "Activation Time" (as defined in subclause 8.6.3.1) value, the UE behaviour is not specified.
- NOTE2: If the pattern is activated with a message used to perform timing re-initialised hard handover, the UE can start evaluating the activation of the pattern (i.e. compare the value of the CFN in the new configuration with the value of the TGCFN) at any time between the message activation time and the completion of the synchronisation procedure A.
 - 2> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active";
 - 2> if the IE "DPCH compressed mode info" is included in a message used to perform a Hard Handover with change of frequency (see subclause 8.3.5); or
 - 2> if the IE "DPCH compressed mode info" is included in a message used to transfer the UE from Cell_FACH to Cell_DCH, and the cell in which the UE transited from CELL_FACH state is not included in the active set for the CELL_DCH state (see subclause 8.4.1.7.2):
 - 3> not begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> else:

- 3> begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.
- 2> begin the inter-RAT measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
- 2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":
 - 3> start the concerned pattern sequence immediately at that CFN.

For transmission gap pattern sequences stored in variable TGPS_IDENTITY, but not identified in IE "TGPSI" (either due to the absence of the IE "DPCH compressed mode info" in the received message or due to not receiving the corresponding TGPSI value in the IE "DPCH compressed mode info"), the UE shall:

- 1> if the received message implies a timing re-initialised hard handover (see subclause 8.3.5.1):
 - 2> deactivate such transmission gap pattern sequences at the beginning of the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message; and
 - 2> set IE "Current TGPS Status Flag" in corresponding UE variable TGPS_IDENTITY to 'inactive'.
- 1> if the received message not implies a timing re-initialised hard handover (see subclause 8.3.5.1):

2> continue such transmission gap pattern sequence according to IE "Current TGPS Status Flag" in the corresponding UE variable TGPS_IDENTITY.

Uplink and downlink compressed mode methods are described in [27]. For UL "higher layer scheduling" compressed mode method and transport format combination selection, see [15].

8.6.6.16 Repetition period, Repetition length, Offset (TDD only)

In case the physical allocations of different channels overlap the following priority rules shall apply for common channels and shall be taken into account by the UE:

- 1> PICH takes precedence over Primary CCPCH;
- 1> PICH takes precedence over Secondary CCPCH;
- 1> MICH takes precedence over Primary CCPCH;
- 1> MICH takes precedence over Secondary CCPCH;
- 1> Secondary CCPCH takes precedence over Primary CCPCH.

The frame allocation can be derived by following rules:

If no IE "Offset" is explicitly given, the parameter "Offset" to be used is calculated by the following equation:

Activation time mod Repetition period = Offset.


Frames from CFN CFN $_{\rm off}$ to CFN $_{\rm off}$ + Repetition length - 1 belong to the allocation with CFN $_{\rm off}$ fulfilling the following equation:

 CFN_{off} mod Repetition period = Offset.

Repetition length is always a multiple of the largest TTI within the CCTrCH fulfilling the following equation:

(largest TTI within CCTrCH) * X = Repetition Length

Example of usage:

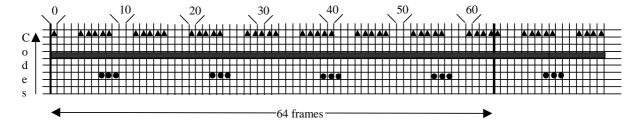

- physic. channel (Code 7; Repetition period=8; Repetition length=5; Activation time = 4 = Offset = 4 = CFN_{off} = 4, 12, 20, 28, 36, 44, 52, 60)
- physic. channel (Code 5; Repetition Period=1 => Repetition length=0; Offset = 0 => $CFN_{off} = 0, 1, 2, 3, 4, ...$ (continuous allocation))
- physic. channel (Code 3; Repetition period=16; Repetition length=3; Activation time
 = 23 =>Offset = 7 => CFN_{off} = 7, 23, 39, 55)

Figure 8.6.6.16-1: Examples for frame allocations in TDD

8.6.6.17 Primary CCPCH info

If the IE "Primary CCPCH info" is included, the UE shall:

1> use the information elements in this IE.

8.6.6.18 Primary CPICH info

If the IE "Primary CPICH info" in FDD is included, the UE shall:

1> use the value of this IE as the primary scrambling code for the downlink radio link.

8.6.6.19 Void

8.6.6.20 Void

8.6.6.21 Void

8.6.6.22 Secondary Scrambling Code, Code Number

The following description applies to FDD.

Code Number can be assigned by following rules:

1> When more than one DL DPDCH is assigned per RL, the segmented physical channel shall be mapped on to DL DPDCHs according to [27]. When *p* number of DL DPDCHs are assigned to each RL, the first pair of Secondary Scrambling Code and Code Number corresponds to "*PhCH number 1*", the second to "*PhCH number 2*", and so on until the *p*th to "*PhCH number p*".

8.6.6.23 PDSCH Power Control info

The UE shall:

- 1> if the IE "PDSCH Power Control info" is included:
 - 2> configure PDSCH power control with the received values.
- 1> if the IE "PDSCH Power Control info" is not included:
 - 2> continue to use the stored values.

8.6.6.24 Tx Diversity Mode

If the IE "Tx Diversity Mode" is included the UE shall:

- 1> if the value of the IE "Tx Diversity Mode" is STTD:
 - 2> configure the Layer 1 to use the Tx diversity mode indicated in the IE "Tx Diversity Mode" for the radio links for which the IE "Closed loop timing adjustment mode" is included, ignoring the actual value of IE "Closed loop timing adjustment mode".
- 1> if the value of the IE "Tx Diversity Mode" is closed loop mode 1:
 - 2> configure the Layer 1 to use the Tx diversity mode indicated in the IE "Tx Diversity Mode" for the radio links for which the IE "Closed loop timing adjustment mode" is included, using the actual value of the IE "Closed loop timing adjustment mode".
- 1> if the value of the IE "Tx Diversity Mode" is "none":
 - 2> configure the Layer 1 not to use Tx diversity for all radio links in the active set.

If the IE "Tx Diversity Mode" is not included, the UE shall:

- 1> continue to use the already configured Tx diversity mode;
- 1> in case no Tx diversity mode has been configured:
 - 2> do not apply Tx diversity.

For HS-SCCH, the UE shall:

- 1> if the DPCH associated with a HS-SCCH is using either open or closed loop transmit diversity on the radio link transmitted from the HS-DSCH serving cell:
 - 2> use STTD for this HS-SCCH;
- 1> if the F-DPCH associated with an HS-SCCH is using open loop transmit diversity on the radio link transmitted from the HS-DSCH serving cell:
 - 2> use STTD for this HS-SCCH.
- 1> otherwise:
 - 2> not use Tx diversity for this HS-SCCH.

For E-AGCH, E-RGCH, and E-HICH from the same cell, the UE shall:

- 1> if the DPCH associated with E-AGCH, E-RGCH, and E-HICH from the same cell is using either open or closed loop transmit diversity on the radio link received from the E-DCH serving cell:
 - 2> use STTD for these E-AGCH, E-RGCH, and E-HICH.
- 1> if the F-DPCH associated with E-AGCH, E-RGCH, and E-HICH from the same cell is using open loop transmit diversity on the radio link received from the E-DCH serving cell:
 - 2> use STTD for these E-AGCH, E-RGCH, and E-HICH.
- 1> otherwise:
 - 2> not use Tx diversity for these E-AGCH, E-RGCH, and E-HICH.

8.6.6.25 Void

8.6.6.26 UL Timing Advance Control (TDD only)

If the IE "UL Timing Advance Control" is present, the UE shall:

- 1> if the IE "Uplink Timing Advance Control" has the value "disabled":
 - 2> reset timing advance to 0;
 - 2> disable calculated timing advance following handover;
 - 2> in case of handover:
 - 3> start uplink transmissions in the target cell without applying timing advance.
- 1> if the IE "Uplink Timing Advance Control" has the value "enabled":
 - 2> in 3.84 Mcps TDD or 7.68 Mcps TDD:
 - 3> in case of no cell change:
 - 4> evaluate and apply the timing advance value for uplink transmission as indicated in the IE "Uplink Timing Advance" or the IE "Extended Uplink Timing Advance" at the CFN indicated in the IE "Activation Time".
 - 3> in case of cell change:

- 4> use the IE "Uplink Timing Advance" or the IE "Extended UL Timing Advance" as TA_{old} and apply TA_{new} for uplink transmission in the target cell at the CFN indicated in the IE "Activation Time" as specified in [33];
- 4> include the value of the applied timing advance in the IE "Timing Advance" or the IE "Extended UL Timing Advance" in the COMPLETE message.

2> in 1.28 Mcps TDD:

- 3> if the IE "Synchronisation parameters" is included:
 - 4> initiate a sequence of UpPCH SYNC_UL code transmissions using a code selected from the set specified and continue until a timing correction is received in the specified FPACH (received for WT sub-frames following the sub-frame in which the transmission was made) or until Max SYNC_UL transmissions have been completed. The power used for each SYNC_UL transmission is as specified in subclause 8.5.7. Each transmission is made in the first sub-frame possible following the end of each FPACH reception interval using the timing specified in [33]. A new code is selected for each transmission. The detection that the FPACH relates to the transmitted SYNC_UL code is described in [33];
 - 4> if a timing correction is received within Max SYNC_UL transmissions the procedure is completed. The assigned uplink resources may then be used, commencing at the first possible TTI boundary or the SFN in which the assignment commences, whichever is the later. The timing of the uplink transmission is described in [33];
 - 4> if no timing correction has been received within Max SYNC_UL transmissions, the synchronisation procedure has failed. If the assigned resources are DCH, the UE should not transmit using these resources and should respond as if a physical channel failure has occurred as specified in subclauses 8.1.3.7 or 8.2.2.7 or 8.3.1.7, or 8.3.6.5. If the assigned resources are USCH then the UE should ignore the USCH allocation.
- 3> if the IE "Synchronisation parameters" is not included:
 - 4> in case of no cell change:
 - 5> continue to use the current uplink timing.
 - 4> in case of cell change:
 - 5> evaluate and apply the timing correction TA_{new} for uplink transmissions using the procedure as specified in [33].

8.6.6.26a Uplink synchronisation parameters (TDD only)

The UE shall apply uplink synchronisation using the values of the IEs "Uplink synchronisation step size" and "Uplink synchronisation frequency" as specified in [33].

8.6.6.27 Downlink information common for all radio links

If the IE "Downlink information common for all radio links" is included the UE shall:

- 1> if the IE "Downlink DPCH info common for all RL" is included:
 - 2> perform actions as specified in subclause 8.6.6.28.
- 1> if the IE "Downlink F-DPCH info common for all RL" is included:
 - 2> perform actions as specified in subclause 8.6.6.28a.
- 1> if the IE choice "mode" is set to 'FDD':
 - 2> perform actions for the IE "DPCH compressed mode info" as specified in subclause 8.6.6.15;
 - 2> perform actions for the IE "Tx Diversity mode" as specified in subclause 8.6.6.24.

- 1> if the IE "MAC-hs reset indicator" is included:
 - 2> if the serving HS-DSCH radio link is the same radio link as prior to the reception of the message:
 - 3> the UE behaviour is unspecified;
 - 2> reset the MAC-hs entity [15].

8.6.6.28 Downlink DPCH info common for all radio links

If the IE "Downlink DPCH info common for all RL" is included the UE shall:

- 1> if:
 - 2> the IE "Downlink DPCH info common for all RL" is included in a reconfiguration message; and
 - 2> the UE was in CELL_DCH state upon reception of the message and remains in CELL_DCH state; and
 - 2> the message is not used to perform a hard handover (as specified in subclause 8.6.6.3a) and the IE "Timing indication" is set to "initialise":
 - 3> the UE behaviour is not specified.
- 1> if the IE "Downlink DPCH power control information" is included:
 - 2> in the case of FDD:
 - 3> perform actions for the IE "DPC Mode" according to [29].
 - 2> in the case of TDD:
 - 3> perform actions for the IE "TPC Step Size" according to [33].
- 1> if the IE choice "mode" is set to 'FDD':
 - 2> if the IE "Downlink rate matching restriction information" is included:
 - 3> set the variable INVALID_CONFIGURATION to TRUE.
 - 2> perform actions for the IE "spreading factor";
 - 2> perform actions for the IE "Fixed or Flexible position";
 - 2> perform actions for the IE "TFCI existence";
 - 2> if the IE choice "SF" is set to 256:
 - 3> store the value of the IE "Number of bits for pilot bits".
 - 2> if the IE choice "SF" is set to 128:
 - 3> store the value of the IE "Number of bits for pilot bits".

If the IE "Downlink DPCH info common for all RL" is included in a message used to perform a Timing re-initialised hard handover or the IE "Downlink DPCH info common for all RL" is included in a message other than RB SETUP used to transfer the UE from a state different from Cell_DCH to Cell_DCH, and ciphering is active for any radio bearer using RLC-TM, the UE shall, after having activated the dedicated physical channels indicated by that IE:

- 1> if any ciphering configuration for a radio bearer using RLC-TM has not been applied, due to that the activation time from a previous procedure has not elapsed:
 - 2> apply the ciphering configuration immediately and consider the activation time from the previous procedure to be elapsed.
- 1> if the IE "MAC-d HFN initial value" is included in the IE "Downlink DPCH info common for all RL":

2> set the HFN component of COUNT-C for TM-RLC to the value of the IE "MAC-d HFN initial value", while not incrementing the value of the HFN component of COUNT-C at each CFN cycle.

NOTE: The UTRAN should choose a value for the IE "MAC-d HFN initial value" using the COUNT-C value of the RBs using RLC-TM indicated by the Source RNC to the Target RNC in the IE "SRNS Relocation Info" and include some margin in such a way that no values of COUNT-C are repeated after the handover.

1> else:

- 2> set the 20 MSB of the HFN component of COUNT-C for TM-RLC to the value of the latest transmitted IE "START" or "START List" for this CN domain, while not incrementing the value of the HFN component of COUNT-C at each CFN cycle; and
- 2> set the remaining LSBs of the HFN component of COUNT-C to zero.
- 1> start to perform ciphering on the radio bearer in lower layers while not incrementing the HFN;
- 1> include the IE "COUNT-C activation time" in the response message and specify a CFN value for this IE other than the default, "Now", that is a multiple of 8 frames (CFN mod 8 =0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted;
- 1> calculate the START value according to subclause 8.5.9;
- 1> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the response message;
- 1> at the CFN value as indicated in the response message in the IE "COUNT-C activation time":
 - 2> set the 20 MSB of the HFN component of the COUNT-C variable common for all transparent mode radio bearers of this CN domain to the START value as indicated in the IE "START list" of the response message for the relevant CN domain; and
 - 2> set the remaining LSBs of the HFN component of COUNT-C to zero;
 - 2> increment the HFN component of the COUNT-C variable by one even if the "COUNT-C activation time" is equal to zero;
 - 2> set the CFN component of the COUNT-C to the value of the IE "COUNT-C activation time" of the response message. The HFN component and the CFN component completely initialise the COUNT-C variable;
 - 2> step the COUNT-C variable, as normal, at each CFN value, i.e. the HFN component is no longer fixed in value but incremented at each CFN cycle.

8.6.6.28a Downlink F-DPCH info common for all radio links

If the IE "Downlink F-DPCH info common for all RL" is included the UE shall:

- 1> if the IE "Downlink F-DPCH info common for all RL" is included in a message used to perform a hard handover:
 - 2> perform actions for the IE "Timing indication" as specified in subclause 8.5.15.2, and subclause 8.3.5.1 or 8.3.5.2.
- 1> if the IE "Downlink DPCH power control information" is included:
 - 2> perform actions for the IE "DPC Mode" according to [29].

8.6.6.29 ASC setting

If the IE "ASC setting" is included, the UE shall:

1> establish the available signatures for this ASC as specified in the following:

- 2> renumber the list of available signatures specified in the IE "Available signature" included in the IE "PRACH info" from signature index 0 to signature index N-1, where N is the number of available signatures, starting with the lowest available signature number and continuing in sequence, in the order of increasing signature numbers;
- 2> consider as available signatures for this ASC the signatures included in this renumbered list from the index specified by the IE "Available signature Start Index" to the index specified by the IE "Available signature End Index".
- 1> establish the available access slot sub-channels for this ASC as specified in the following:
 - 2> if the IE "AICH transmission timing" included in the IE "AICH Info" is set to '0';
 - 3> ignore the leftmost (most significant) bit (bit b3) of the bit string specified by the IE "Assigned Sub-Channel Number";
 - 3> repeat 4 times the 3 rightmost (least significant) bits (bits b2-b0) of the bit string specified by the IE "Assigned Sub-Channel Number" to form a resulting bit string 'b2 b1 b0 b2 b1 b0 b2 b1 b0 b2 b1 b0 of length 12 bits, where the leftmost bit is the most significant.
 - 2> if the IE "AICH transmission timing" included in the IE "AICH Info" is set to '1':
 - 3> repeat 3 times the bit string (bits b3-b0) specified by the IE "Assigned Sub-Channel Number" to form a bit string 'b3 b2 b1 b0 b3 b2 b1 b0 b3 b2 b1 b0' of length 12 bits, where the leftmost bit is the most significant.
 - 2> perform in both cases, for the resulting bit string (that includes the repetitions) bit-wise logical AND operation with the IE "Available Sub Channel number" included in IE "PRACH info (for RACH)";
 - 2> consider as available sub-channels for this ASC the available sub-channels indicated in the resulting bit string, after logical AND operation i.e. each bit set to 1 or 0 indicates availability or non-availability, respectively, of sub-channel number *x*, with *x* from 0 to 11, for the respective ASC.
- NOTE 1: In FDD, the list of available signatures is renumbered from signature index 0 to signature index N-1, where N is the number of available signatures, starting with the lowest available signature number and continuing in sequence, in the order of increasing signature numbers.
 - List of available signatures: 16 or fewer signatures are available.
 - Example: only signatures 0, 5, 10 and 15 are available, then :
 - Signature 0 is: available signature index 0
 - Signature 5 is: available signature index 1
 - Signature 10 is: available signature index 2
 - Signature 15 is: available signature index 3

NOTE 2: In 3.84 Mcps TDD, the list of available channelisation codes (defined in PRACH info) is renumbered from channelisation code index 0 to channelisation code index N-1, where N is the number of available channelisation codes, starting with the lowest available channelisation code number and continuing in sequence, in the order of increasing channelisation code numbers

List of available channelisation codes: 8 or less channelisation codes are available.

The i-th bit of the bitmap defined in the IE "Available Channelisation Code indices" defines whether the channelisation code with the available channelisation code index i is to be used for this ASC (bit set means used, bit unset means not used). Only the low N bits shall be used in the bitmap, where N is the number of available channelisation codes defined in PRACH info.

Ex: spreading factor 16, channelisation codes 16/1, 16/2, 16/5, 16/8 are available:

Channelisation code 16/1 is: available channelisation code index 0 Channelisation code 16/2 is: available channelisation code index 1 Channelisation code 16/5 is: available channelisation code index 2 Channelisation code 16/8 is: available channelisation code index 3

Available Channelisation Code indices has the value '00001100' means: Channelisation Codes 16/5 and 16/8 are available for this ASC.

NOTE 2a: In 7.68 Mcps TDD, the list of available channelisation codes (defined in PRACH info) is renumbered from channelisation code index 0 to channelisation code index N-1, where N is the number of available channelisation codes, starting with the lowest available channelisation code number and continuing in sequence, in the order of increasing channelisation code numbers

List of available channelisation codes: 16 or less channelisation codes are available.

The i-th bit of the bitmap defined in the IE "Available Channelisation Code indices" defines whether the channelisation code with the available channelisation code index i is to be used for this ASC (bit set means used, bit unset means not used). Only the low N bits shall be used in the bitmap, where N is the number of available channelisation codes defined in PRACH info.

Ex: spreading factor 32, channelisation codes 32/1, 32/2, 32/5, 32/8 are available:

Channelisation code 32/1 is: available channelisation code index 0 Channelisation code 32/2 is: available channelisation code index 1 Channelisation code 32/5 is: available channelisation code index 2 Channelisation code 32/8 is: available channelisation code index 3

Available Channelisation Code indices has the value '000000000001100' means: Channelisation Codes 32/5 and 32/8 are available for this ASC.

NOTE 3: In TDD, the subchannel description is found in [33].

NOTE 4: In 1.28 Mcps TDD, the list of available SYNC_UL codes (defined in PRACH info) is numbered from SYNC_UL code index 0 to SYNC_UL code index N-1, where N is the number of available SYNC_UL codes, starting with the lowest available SYNC_UL code number and continuing in sequence, in the order of increasing SYNC_UL code numbers

The i-th bit of the bitmap defined in the IE "Available SYNC_UL codes indices" defines whether the SYNC_UL code with the available SYNC_UL code index i is to be used for this ASC (bit set means used, bit unset means not used). Only the low N bits shall be used in the bitmap, where N is the number of available SYNC_UL codes defined in PRACH info.

- List of available SYNC_UL codes: 8 or fewer SYNC_UL codes are available.

Example: only signatures 0, 5, 6 and 7 are available, then:

- SYNC_UL codes 0 is: available SYNC_UL codes index 0
- SYNC_UL codes 5 is: available SYNC_UL codes index 1
- SYNC UL codes 6 is: available SYNC UL codes index 2
- SYNC UL codes 7 is: available SYNC UL codes index 3

Available SYNC_UL codes indices has the value '00001100' means: SYNC_UL codes 6 and 7 are available for this ASC.

8.6.6.30 SRB delay, PC preamble (FDD only)

When the IE "SRB delay" and IE "PC preamble" is received in a message that results in a configuration of uplink DPCH and synchronisation procedure A is being used as specified in [29], the UE shall:

- 1> store the received IE "SRB delay" and IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE;
- 1> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble"; and
- 1> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" or while the physical channel is not considered established.

8.6.6.31 Void

8.6.6.32 Void

8.6.6.33 HS-SCCH Info

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> store the received configuration.
- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS DSCH RECEPTION is set to TRUE the UE shall:

- 1> in the case of FDD:
 - 2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".
- 1> in the case of TDD:

- 2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.
- 2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.
- 2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".
- 2> in 3.84 Mcps TDD and 7.68 Mcps TDD:
 - 3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.
- 2> in 1.28 Mcps TDD:
 - 3> use the IE " PRX_{HS-SICH} " to calculate and set an initial uplink transmission power;
 - 3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control;
 - 3> use default value of "Uplink synchronisation frequency" and same value of "Uplink synchronisation step size" in "Uplink DPCH info" for HS-SICH upon reception of SS commands for closed loop uplink synchronisation on HS-SICH.

8.6.6.34 Measurement Feedback Info

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> store the received configuration;
- 1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS DSCH RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

8.6.6.35 DPC Mode

If the IE "DPC Mode" is included, the UE shall:

1> apply the indicated DPC mode according to [29].

If the IE "DPC Mode" is not included, the UE shall:

1> continue with the currently used DPC mode.

8.6.6.36 Downlink HS-PDSCH Information

If the IE "Downlink HS-PDSCH Information" is included and the UE would be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> if the IE "HS-SCCH Info" is included:
 - 2> act as specified in subclause 8.6.6.33.
- 1> if the IE "Measurement Feedback Info" is included:
 - 2> act as specified in subclause 8.6.6.34.
- 1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:
 - 2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

8.6.6.37 E-DCH Info

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

- 1> if the IE "E-DPCCH Info" is included:
 - 2> store the newly received E-DPCCH configuration.
- 1> if the IE "E-DPDCH Info" is included:
 - 2> store the newly received E-DPDCH configuration.
- NOTE: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.
- 1> if the IE "MAC-es/e reset indicator" is included:
 - 2> reset the MAC-es/e entity [15].
- NOTE: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.
- 1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

- 1> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;
- 1> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

8.6.7 Measurement information elements

On reception of measurement information elements the UE shall:

- 1> store the received information in the variable MEASUREMENT_IDENTITY and CELL_INFO_LIST as specified;
- 1> perform further actions as specified in subclause 8.6.7 and subclause 8.4, based on the content of the variable MEASUREMENT_IDENTITY.

If a configuration is considered to be invalid the UE may:

1> set the variable CONFIGURATION INCOMPLETE to TRUE.

8.6.7.1 Measurement validity

If the IE "measurement validity" for a given measurement has not been included in measurement control information, the UE shall delete the measurement associated with the variable MEASUREMENT_IDENTITY after the UE makes a transition to a new state.

If the IE "measurement validity" for this measurement has been included in measurement control information, the UE shall save the measurement associated with the variable MEASUREMENT_IDENTITY. The IE "UE state" defines the scope of resuming the measurement.

If the "UE state" is defined as "all states", the UE shall continue the measurement after making a transition to a new state. This scope is assigned for traffic volume measurement type and UE positioning measurement type. For traffic volume measurement type this scope can only be applied by the UE if the IE " traffic volume measurement object" has been included in measurement control information. If the IE " traffic volume measurement object" has not been

included in measurement control information, the UE shall not save the measurement control information in variable MEASUREMENT_IDENTITY, but shall send a MEASUREMENT CONTROL FAILURE message to the UTRAN with failure cause "Configuration incomplete".

If the "UE state" is defined as "all states except CELL_DCH", the UE shall store the measurement to be resumed after a subsequent transition from CELL_DCH state to any of the other states in connected mode. This scope is assigned for traffic volume measurement type or UE positioning measurement type.

If the "UE state" is defined as "CELL_DCH", the UE shall store the measurement to be resumed after a subsequent transition to CELL_DCH state.

If the IE "measurement type" received in a MEASUREMENT CONTROL message is set to "inter-frequency measurement" or "intra-frequency measurement" and the IE "measurement validity" is present and is set to a value other than "CELL DCH", the UE behaviour is unspecified.

8.6.7.2 Filter coefficient

If the IE "Filter coefficient" is received the UE shall, depending on the measurement quantity (see Table 8.6.7.2), apply filtering of the measurements for that measurement quantity according to the formula below. This filtering shall be performed by the UE before UE event evaluation. The UE shall depending on the reporting quantity (see Table 8.6.7.2), also filter the measurements reported in the IE "Measured results". The filtering shall not be performed for the measurements reported in the IE "Measured results on RACH" and for cell-reselection in connected or idle mode.

The filtering shall be performed according to the following formula.

$$F_n = (1 - a) \cdot F_{n-1} + a \cdot M_n$$

The variables in the formula are defined as follows:

 F_n is the updated filtered measurement result

 F_{n-1} is the old filtered measurement result

 M_n is the latest received measurement result from physical layer measurements, the unit used for M_n is the same unit as the reported unit in the MEASUREMENT REPORT message or the unit used in the event evaluation.

 $a = 1/2^{(k/2)}$, where k is the parameter received in the IE "Filter coefficient".

NOTE: if k is set to 0 that will mean no layer 3 filtering.

In order to initialise the averaging filter, F_{θ} is set to M_{I} when the first measurement result from the physical layer measurement is received.

The physical layer measurement results are sampled once every measurement period. The measurement period and the accuracy for a certain measurement is defined in [19] and [20].

Table 8.6.7.2 lists for all measurement quantities and reporting quantities if L3-filtering is applicable or not and used L3-filtering type for each measurement quantity.

Table 8.6.7.2: L3 filtering applicable for each measurement quantity and reporting quantity

Measurement- / Reporting	L3-filtering	Linear or	Comment
quantity	applicable	logarithmic filtering	
Pathloss	Yes	Log	
Cell synchronisation information	No	-	
Cell Identity	No	-	
Frequency quality estimate	No	-	Although the frequency quality estimate itself is not filtered, the inputs to the frequency quality estimate calculation (CPICH Ec/N0 or CPICH RSCP or P-CCPCH RSCP) are filtered
UTRA carrier RSSI	Yes	Log	

GSM carrier RSSI	Yes	Log	
UE transmitted power	Yes	Log	
FDD			
> UE Rx-Tx time difference	No	-	
> CPICH Ec/N0	Yes	Log	
> CPICH RSCP	Yes	Log	
TDD			
> Primary CCPCH RSCP	Yes	Log	
> Proposed TGSN	No	-	
> Timeslot ISCP	Yes	Log	
> TADV (1.28 Mcps TDD)	No	-	
> Applied TA (3.84 Mcps TDD)	No	-	
> Applied TA (7.68 Mcps TDD)	No	-	

The UE shall support 2 different layer 3 filters per measurement type defined in subclause 8.4.0 (i.e. the UE shall be capable to apply at least 2 different L3 filters to intra-frequency measurement results, at least 2 different L3 filters to inter-frequency measurement results, etc.). If a MEASUREMENT CONTROL message is received that would require the UE to configure more than 2 different layer 3 filters, the UE may:

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.3 Intra-frequency/Inter-frequency/Inter-RAT cell info list

If the IE "Intra-frequency cell info list" is received in System Information Block Type 11, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the IE "Intra-frequency cell removal" is received:
 - 2> ignore the IE.
- 1> if the IE "New Intra-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Intra-frequency cell id" is received:
 - 4> store received cell information at this position in the Intra-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".
 - 3> if the IE "Intra-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Intra-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".

If the IE "Intra-frequency cell info list" is received in System Information Block Type 12, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the IE "Intra-frequency cell removal" is received:
 - 2> if it has the value "Remove some intra-frequency cells", at the position indicated by the IE "Intra-frequency cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all intra-frequency cells":
 - 3> for each position referring to an intra-frequency cell in the variable CELL_INFO_LIST:

- 4> clear the cell information stored in the variable CELL_INFO_LIST; and
- 4> mark the position "vacant".
- 2> if it has the value "Remove no intra-frequency cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Intra-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Intra-frequency cell id" is received:
 - 4> store received cell information at this position in the Intra-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".
 - 3> if the IE "Intra-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Intra-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".

If the IE "Intra-frequency cell info list" is received in a MEASUREMENT CONTROL message, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the CHOICE "Intra-frequency cell removal" is received:
 - 2> if it has the value "Remove some intra-frequency cells", at the position indicated by the IE "Intra-frequency cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all intra-frequency cells":
 - 3> for each position referring to an intra-frequency cell in the variable CELL_INFO_LIST:
 - 4> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 4> mark the position "vacant".
 - 2> if it has the value "Remove no intra-frequency cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Intra-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Intra-frequency cell id" is received:
 - 4> store received cell information at this position in the Intra-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".

- 3> if the IE "Intra-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Intra-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".
- 1> if the IE "Cells for measurement" is received, in the measurement configured by this message only:
 - 2> consider Intra-frequency cells whose cell information is stored at the position indicated by the IE "Intra-frequency cell id" in the variable CELL_INFO_LIST.
- 1> if the IE "Cells for measurement" is not received, in the measurement configured by this message:
 - 2> consider all Intra-frequency cells whose cell information is stored in CELL_INFO_LIST.

If the IE "Inter-frequency cell info list" is received in System Information Block Type 11 update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the IE "Inter-frequency cell removal" is received:
 - 2> ignore the IE.
- 1> if the IE "New Inter-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Inter-frequency cell id" is received:
 - 4> store received cell information at this position in the Inter-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".
 - 3> if the IE "Inter-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Inter-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".

If the IE "Inter-frequency cell info list" is received in System Information Block Type 12, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the CHOICE "Inter-frequency cell removal" is received:
 - 2> if it has the value "Remove some inter-frequency cells", at the position indicated by the IE "Inter-frequency cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all inter-frequency cells":
 - 3> for each position referring to an inter-frequency cell in the variable CELL_INFO_LIST:
 - 4> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 4> mark the position "vacant".
 - 2> if it has the value "Remove no inter-frequency cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Inter-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:

- 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Inter-frequency cell id" is received:
 - 4> store received cell information at this position in the Inter-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".
 - 3> if the IE "Inter-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Inter-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".

If the IE "Inter-frequency cell info list" is received in a MEASUREMENT CONTROL message, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order:

- 1> if the CHOICE "Inter-frequency cell removal" is received:
 - 2> if it has the value "Remove some inter-frequency cells", at the position indicated by the IE "Inter-frequency cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all inter-frequency cells":
 - 3> for each position referring to an inter-frequency cell in the variable CELL_INFO_LIST:
 - 4> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 4> mark the position "vacant".
 - 2> if it has the value "Remove no inter-frequency cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Inter-frequency cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> update the variable CELL_INFO_LIST as follows:
 - 3> if the IE "Inter-frequency cell id" is received:
 - 4> store received cell information at this position in the Inter-frequency cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 4> mark the position "occupied".
 - 3> if the IE "Inter-frequency cell id" is not received:
 - 4> store the received cell information at the first vacant position in ascending order in the Inter-frequency cell info list in the variable CELL_INFO_LIST; and
 - 4> mark the position as "occupied".
- 1> if the IE "Cells for measurement" is received, in the measurement configured by this message only:
 - 2> consider Inter-frequency cells whose cell information is stored at the position indicated by the IE "Inter-frequency cell id" in the variable CELL_INFO_LIST.
- 1> if the IE "Cells for measurement" is not received, in the measurement configured by this message:
 - 2> consider all Inter-frequency cells whose cell information is stored in CELL_INFO_LIST.

If the IE "Inter-RAT cell info list" is received in System Information Block Type 11, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> ignore the IE "Inter-RAT cell removal".
- 1> if the IE "New Inter-RAT cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> if the IE "Radio Access Technology" is set to "None":
 - 3> ignore the cell.
 - 2> otherwise:
 - 3> update the variable CELL_INFO_LIST as follows:
 - 4> if the IE "Inter-RAT cell id" is received:
 - 5> store received cell information at this position in the Inter-RAT cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 5> mark the position "occupied".
 - 4> if the IE "Inter-RAT cell id" is not received:
 - 5> store the received cell information at the first vacant position in ascending order in the Inter-RAT cell info list in the variable CELL_INFO_LIST; and
 - 5> mark the position as "occupied".
- 1> if the IE "Cells for measurement" is received:
 - 2> ignore the IE.
- 1> set the "Inter-RAT cell info indication" to the value "0" and mark the indication status "present" in the variable CELL_INFO_LIST.

If the IE "Inter-RAT cell info list" is received in System Information Block Type 12, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the IE "Inter-RAT cell removal" is received:
 - 2> if it has the value "Remove some inter-RAT cells", at the position indicated by the IE "Inter-RAT cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all inter-RAT cells":
 - 3> for each position referring to an inter-RAT cell in the variable CELL_INFO_LIST:
 - 4> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 4> mark the position "vacant".
 - 2> if it has the value "Remove no inter-RAT cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Inter-RAT cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - $2\!\!>$ if the IE "Radio Access Technology" is set to "None":
 - 3> ignore the cell.
 - 2> otherwise:
 - 3> update the variable CELL_INFO_LIST as follows:

- 4> if the IE "Inter-RAT cell id" is received:
 - 5> store received cell information at this position in the Inter-RAT cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 5> mark the position "occupied".
- 4> if the IE "Inter-RAT cell id" is not received:
 - 5> store the received cell information at the first vacant position in ascending order in the Inter-RAT cell info list in the variable CELL_INFO_LIST; and
 - 5> mark the position as "occupied".
- 1> if the IE "Cells for measurement" is received:
 - 2> ignore the IE;
- 1> set the "Inter-RAT cell info indication" to the value "0" and mark the indication status "present" in the variable CELL_INFO_LIST.

If the IE "Inter-RAT cell info list" is received in a MEASUREMENT CONTROL message, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- 1> if the IE "Inter-RAT cell removal" is received:
 - 2> if it has the value "Remove some inter-RAT cells", at the position indicated by the IE "Inter-RAT cell id":
 - 3> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 3> mark the position "vacant".
 - 2> if it has the value "Remove all inter-RAT cells":
 - 3> for each position referring to an inter RAT cell in the variable CELL_INFO_LIST:
 - 4> clear the cell information stored in the variable CELL_INFO_LIST; and
 - 4> mark the position "vacant".
 - 2> if it has the value "Remove no inter-RAT cells":
 - 3> leave the variable CELL_INFO_LIST unchanged.
- 1> if the IE "New Inter-RAT cells" is received, for each cell, and in the same order as the cells appear in the IE:
 - 2> if the IE "Radio Access Technology" is set to "None":
 - 3> ignore the cell.
 - 2> otherwise:
 - 3> update the variable CELL_INFO_LIST as follows:
 - 4> if the IE "Inter-RAT cell id" is received:
 - 5> store received cell information at this position in the Inter-RAT cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
 - 5> mark the position "occupied".
 - 4> if the IE "Inter-RAT cell id" is not received:
 - 5> store the received cell information at the first vacant position in ascending order in the Inter-RAT cell info list in the variable CELL_INFO_LIST; and
 - 5> mark the position as "occupied".

- 1> if the IE "Cells for measurement" is received, in the measurement configured by this message only:
 - 2> consider Inter-RAT cells whose cell information is stored at the position indicated by the IE "Inter-RAT cell id" in the variable CELL_INFO_LIST.
- 1> if the IE "Cells for measurement" is not received, in the measurement configured by this message:
 - 2> consider all Inter-RAT cells whose cell information is stored in CELL INFO LIST.
- 1> if the IE "Cell selection and re-selection info for SIB11/12" is present:
 - 2> ignore the IE.
- 1> if the IE "Inter-RAT cell info indication" is present:
 - 2> store the received value of the IE "Inter-RAT cell info indication" and mark the indication status "present" in the variable CELL_INFO_LIST.
- 1> if the IE "Inter-RAT cell info indication" is not present:
 - 2> clear the "Inter-RAT cell info indication" and mark the indication status "not present" in the variable CELL_INFO_LIST.

8.6.7.4 Intra-frequency measurement quantity

If the IE "Intra-frequency measurement quantity" is received in a MEASUREMENT CONTROL message, the UE shall:

- 1> if the IE "Measurement quantity" is set to "pathloss"; and
- 1> for any intra-frequency cell indicated by the IE "Cells for measurement", the IE "Primary CPICH Tx power" in FDD or the IE "Primary CCPCH TX Power" in TDD in the intra frequency cell info list in the variable CELL_INFO_LIST is not present:
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> else:
 - 2> configure the measurement quantity accordingly.

8.6.7.5 Inter-RAT measurement quantity

If the IE "Inter-RAT measurement quantity" is received in a MEASUREMENT CONTROL message and CHOICE system is GSM, the UE shall:

- 1> if IE "BSIC verification required" is set to "required", for cells that match any of the BCCH ARFCN and BSIC combinations in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list", and that has a "verified" BSIC:
 - 2> report measurement quantities according to IE "inter-RAT reporting quantity" taking into account the restrictions defined in subclause 8.6.7.6;
 - 2> trigger inter-RAT events according to IE "inter-RAT measurement reporting criteria"; and
 - 2> perform event evaluation for event-triggered reporting after BSIC has been verified for a GSM cell as defined in [19]; and
 - 2> trigger periodical reports according to the given "Reporting interval"; and
 - 2> when a periodical measurement report is triggered, include only BSIC verified GSM cells in the IE "Inter-RAT measured results list"; and
 - 3> indicate verified BSIC for a GSM cell in the IE "Inter-RAT measured results list" as defined in subclause 8.6.7.6.
 - 2> when an event triggered measurement report is triggered, include only BSIC verified GSM cells in the IE "Inter-RAT measured results list"; and

- 3> indicate verified BSIC for a GSM cell in the IE "Inter-RAT measured results list" as defined in subclause 8.6.7.6.
- 1> if IE "BSIC verification required" is set to "not required", for cells that match any of the BCCH ARFCN in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list", regardless if the BSIC is "verified" or "non-verified":
 - 2> report measurement quantities according to IE "inter-RAT reporting quantity";
 - 2> trigger inter-RAT events according to IE "inter-RAT measurement reporting criteria";
 - 2> when an event triggered or periodical measurement report is triggered, include GSM cells in the IE "Inter-RAT measured results list" regardless of whether the BSIC of the GSM cell has been verified or not; and
 - 3> for any GSM cell that has not been verified, indicate non-verified BSIC for a GSM cell in the "Inter-RAT measured results list" IE as defined in subclause 8.6.7.6.
 - 3> for any GSM cell that has been verified, indicate verified BSIC for a GSM cell in the "Inter-RAT measured results list" IE as defined in subclause 8.6.7.6.
- 1> if the IE "Measurement quantity" is set to "pathloss":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

NOTE: The requirements for a cell to be considered "verified" or "non-verified" can be found in [19].

8.6.7.6 Inter-RAT reporting quantity

If the IE "Inter-RAT reporting quantity" is received by the UE, the UE shall:

1> store the content of the IE to the variable MEASUREMENT_IDENTITY.

If the IE "Inter-RAT measurement quantity" is received and CHOICE system is GSM, the UE shall check each quantity in the GSM choice. The UE shall include measured results in MEASUREMENT REPORT as specified in the IE "Inter-RAT reporting quantity" with the following restrictions:

- 1> if the UE has not confirmed the BSIC of the measured cell:
 - 2> if no compressed mode pattern sequence specified with measurement purpose "Initial BSIC identification" is active and according to its capabilities the UE requires compressed mode to measure this, the UE is not required to include the "inter-RAT cell id" in the IE "Inter-RAT measured results list", when a MEASUREMENT REPORT is triggered.
- 1> if the UE has confirmed the BSIC of the measured cell, then:
 - 2> if no compressed mode pattern sequence specified with measurement purpose "Initial BSIC identification" nor "BSIC re-confirmation" is active and according to its capabilities the UE requires compressed mode to measure this, the UE is not required to include the "inter-RAT cell id" in the IE "Inter-RAT measured results", when a MEASUREMENT REPORT is triggered. If no compressed mode pattern sequence with measurement purpose "GSM carrier RSSI measurements" is active and according to its capabilities the UE requires compressed mode to measure this, the UE may include "inter-RAT cell id" in MEASUMENT REPORT without "GSM carrier RSSI" even if it is defined in the IE "Inter-RAT reporting quantity".
- 1> if the IE "UTRAN estimated quality" is set to "TRUE":
 - 2> ignore that IE.
- 1> if IE "GSM Carrier RSSI" is set to "TRUE":
 - 2> include optional IE "GSM Carrier RSSI" with a value set to the measured RXLEV to that GSM cell in IE "Inter-RAT measured results list". If no compressed mode pattern sequence specified with measurement purpose "GSM carrier RSSI measurements" is active and according to its capabilities the UE requires compressed mode to measure this, the UE is not required to include the "GSM carrier RSSI" in the IE " Inter-RAT measured results list ", when a MEASUREMENT REPORT is triggered.
- 1> if the BSIC of reported GSM cell is "verified":

- 2> set the CHOICE BSIC to "Verified BSIC" and IE "inter-RAT cell id" to the value that GSM cell had in the IE "Inter-RAT cell info list".
- 1> if the BSIC of reported GSM cell is "non-verified":
 - 2> set the CHOICE BSIC to "Non verified BSIC" and the IE "BCCH ARFCN" to the value of that GSM cells ARFCN.

The requirements for a cell to be considered "verified" or "non-verified" can be found in [19].

8.6.7.7 Cell Reporting Quantities

If the IE "Cell Reporting Quantities" is received by the UE, the UE shall store the content of the IE "Cell Reporting Quantities" to the variable MEASUREMENT_IDENTITY.

The UE shall include measured results in MEASUREMENT REPORT as specified in the IE "Cell Reporting Quantities", except for the following cases:

If the IE "Cell Identity" is set to TRUE, the UE shall in this version of the specification:

1> treat the IE as if the IE "Cell Identity" is set to FALSE.

If the IE "Cell synchronisation information reporting indicator" is set to TRUE, the UE shall:

- 1> include the IE "Cell synchronisation information" in MEASUREMENT REPORT as specified in the IE "Cell Reporting Quantities":
 - 2> if the measurement is performed on another frequency; or
 - 2> if the IE "Read SFN indicator" included in the IE "Cell info" of the measured cell is set to FALSE:
 - 3> the UE may omit the information group "COUNT-C-SFN frame difference" in the IE "Cell synchronisation information".
 - 2> if the measurement is performed on the same frequency and no RLC Transparent Mode COUNT-C exists in the UE:
 - 3> set the IE "COUNT-C-SFN high" to 0.
 - 2> otherwise:
 - 3> include the information group "COUNT-C-SFN frame difference" with IE "COUNT-C-SFN high" set to:

COUNT-C-SFN high = (((SFN - (COUNT-C mod 4096)) mod 4096) div 256) * 256;

- 3> if RLC Transparent Mode COUNT-Cs exist in both CN domains:
 - 4> use the COUNT-C of CS domain in this measurement.

If the IE "Proposed TGSN Reporting required" is set to TRUE, the UE shall:

- 1> if compressed mode was used to monitor a TDD cell and the variable TGSN_REPORTED is set to FALSE:
 - 2> report the IE "Proposed TGSN" indicating the TGSN that suits best to the measured cell;
 - 2> set the variable TGSN_REPORTED to TRUE.
- 1> otherwise
 - 2> omit the IE "Proposed TGSN".

8.6.7.8 Periodical Reporting Criteria

If the IE "Periodical Reporting Criteria" is received by the UE, the UE shall:

1> store the contents of the IE "Amount of Reporting" and IE "Reporting interval" in the variable MEASUREMENT_IDENTITY.

For the first MEASUREMENT REPORT message, the UE shall:

1> send the MEASUREMENT REPORT as soon as all requested reporting quantities are available according to the requirements and the measurement capabilities set in [19] and [20] for at least one measurement object stored in the variable MEASUREMENT_IDENTITY, but never later than one reporting interval after measurement initiation.

Following the first MEASUREMENT REPORT message, the UE shall:

1> send a MEASUREMENT REPORT message one reporting interval after the previous MEASUREMENT REPORT message;

The first and subsequent periodic MEASUREMENT REPORT messages shall only include measured results for reporting quantities that are available according to the requirements and the measurement capabilities set in [19] and [20] i.e. if no measured results are available and the measurement type is not UE positioning, the IE "Measured Results" shall not be included in the MEASUREMENT REPORT message. If no measured results are available and the measurement type is UE positioning, the UE shall include the IE "Measured Results" in the MEASUREMENT REPORT message in order to include the IE "UE positioning error" as specified in 8.6.7.19a and 8.6.7.19b.

After the UE has sent a total number of MEASUREMENT REPORT messages, which equal the value indicated in the IE "Amount of reporting", the UE shall:

- 1> terminate measurement reporting; and
- 1> delete all measurement information linked with the "Measurement identity" of the ongoing measurement from the variable MEASUREMENT_IDENTITY.

If according to subclause 8.6.7.19.1a or 8.6.7.19.1b, a UE configured with a UE positioning measurement is unable to report the requested measurement results due to missing GPS assistance data and sends a MEASUREMENT REPORT containing the IE "UE positioning error" and the IE "Error reason" is set to "Assistance Data Missing", then this is not counted in the total number of MEASUREMENT REPORT messages sent.

8.6.7.9 Reporting Cell Status

If the IE "Reporting Cell Status" is received, the UE shall set the IE "Measured Results" in MEASUREMENT REPORT as follows. The UE shall:

- 1> for intra-frequency measurement and inter-frequency measurement:
 - 2> include the IE "Cell Measured Results" for cells (excluding cells of another RAT) that satisfy the condition (such as "Report cells within active set") specified in the IE "Reporting Cell Status", in descending order by the measurement quantity.
 - 2> the maximum number of the IE "Cell Measured Results" to be included in the IE "Measured Results" per reported frequency is the number specified in the IE "Reporting Cell Status".
- 1> for periodic inter-frequency measurement:
 - 2> include in the IE "Inter-frequency measured results list" the measured results for all non-used frequencies.
- 1> for inter-RAT measurement:
 - 2> include the measurement results for cells of other RAT (e.g., GSM) that satisfy the condition specified in the IE "Reporting Cell Status", in descending order by the measurement quantity.
 - 2> the maximum number of the IE "Measured GSM Cells" to be included in the IE "Measured Results" is the number specified in the IE "Reporting Cell Status".

If the IE "Reporting Cell Status" is not received for intra-frequency, inter-frequency measurement, or inter-RAT measurement, the UE shall:

1> for intra-frequency measurement, inter-frequency measurement and inter-RAT measurement:

2> exclude the IE "Measured Results" in MEASUREMENT REPORT.

NOTE: The IE "Reporting Cell Status" within "Event Criteria List" defines whether "Cell Measured Results" is present for event-based reporting.

The IE "Reporting Cell Status" is not included in System Information Block 11/12 for periodic intra-frequency measurements. In this case the UE shall assume the default values "Report cells within active set and/or monitored set on used frequency" and "6".

8.6.7.10 Traffic Volume Measurement

If the IE "Traffic Volume Measurement" is received by the UE, the UE shall:

1> store the content of the IE to the variable MEASUREMENT_IDENTITY.

If IE "Traffic volume measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", and if the IE "traffic volume reporting quantity" is included, the UE shall:

- 1> if the parameter "Average of RLC Buffer Payload for each RB" or the parameter "Variance of RLC Buffer payload for each RB" is set to "TRUE":
 - 2> if the IE "Traffic volume measurement quantity" is not included:
 - 3> set the variable CONFIGURATION_INCOMPLETE to TRUE.
 - 2> if the IE "Traffic volume measurement quantity" is included:
 - 3> if the parameter "time interval to take an average or a variance" is not included:
 - 4> set the variable CONFIGURATION_INCOMPLETE to TRUE.

If IE "Traffic volume measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Traffic volume reporting quantity" or is not received, the UE shall:

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.11 Traffic Volume Measurement Reporting Criteria

If the IE "Traffic Volume Measurement Reporting Criteria" is received by the UE, the UE shall:

- 1> if the IE "Parameters sent for each transport channel" is absent:
 - 2> set the variable PROTOCOL ERROR REJECT to TRUE;
 - 2> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Information element missing".
- 1> for each IE "Parameters sent for each transport channel":
 - 2> if the IE "Parameters required for each Event" is absent:
 - 3> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.12 FACH measurement occasion info

IE "FACH measurement occasion info" is used to control UE measurement activities in inter-frequency and inter-RAT cells in CELL_FACH state.

If IE "FACH measurement occasion info" is received, UE shall, when in CELL_FACH state:

- 1> if IE "FACH Measurement occasion cycle length coefficient" is included:
 - 2> if, according to its measurement capabilities, UE is not able to perform some of the indicated measurements in this IE simultaneously as receiving the SCCPCH of serving cell:
 - 3> perform those measurements during FACH measurement occasions, see subclause 8.5.11.
 - 2> if, according to its measurement capabilities, UE is able to perform some of the indicated measurements in this IE simultaneously as receiving the SCCPCH of serving cell:
 - 3> UE may perform measurements also on other occasions.
 - 2> if, according to its measurement capabilities, UE is able to perform the measurements and indicated in this IE simultaneously as receiving the SCCPCH of serving cell:
 - 3> perform the measurements simultaneously as receiving the SCCPCH of serving cell.
- 1> if IE "FACH Measurement occasion cycle length coefficient" is not included:
 - 2> perform those indicated measurements indicated in this IE that UE, according to its measurement capabilities, is able to perform simultaneously as receiving the SCCPCH of serving cell.
- 1> if IE "Inter-frequency FDD measurement indicator" is set to TRUE:
 - 2> perform measurements and evaluate cell re-selection criteria according to [4] on inter-frequency FDD cells listed in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".
- 1> if IE "Inter-frequency FDD measurement indicator" is set to FALSE:
 - 2> neither perform measurements nor evaluate cell re-selection criteria on inter-frequency FDD cells.
- 1> if IE "Inter-frequency TDD measurement indicator" is set to TRUE:
 - 2> perform measurements and evaluate cell re-selection criteria according to [4] on inter-frequency TDD cells listed in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".
- 1> if IE "Inter-frequency TDD measurement indicator" is set to FALSE:
 - 2> neither perform measurements nor evaluate cell re-selection criteria on inter-frequency TDD cells.
- 1> if IE "Inter-RAT measurement indicators" is included:
 - 2> perform measurements and evaluate cell re-selection criteria according to [4] on those cells of listed Inter-RAT types that are present in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".

8.6.7.13 Measurement Reporting Mode

If IE "Measurement Reporting Mode" is received by the UE, the UE shall:

- 1> store the contents of the IE "Measurement Report Transfer Mode" in the variable MEASUREMENT_IDENTITY;
- 1> use the indicated RLC mode when sending MEASUREMENT REPORT message(s) related to this measurement;
- 1> ignore IE "Periodical Reporting / Event Trigger Reporting Mode".
- If IE "Measurement Reporting Mode" is not received by the UE in MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", the UE shall:
 - 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.14 Inter-frequency measurement

If the Inter-frequency cell info list, included in the variable CELL_INFO_LIST, includes a number (M) of frequencies that is larger than the number (N) considered in a UE performance requirement defined in [19] and [20]:

- 1> the UE shall:
 - 2> meet this performance requirement on the first relevant (N) frequencies, according to the order defined by the position of the frequencies in the Inter-frequency cell info list, included in the variable CELL_INFO_LIST.
- 1> the UE may:
 - 2> ignore the remaining (M-N) frequencies.

If IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Inter-frequency measurement quantity", IE "Inter-frequency reporting quantity" or IE "parameters required for each event" (given "CHOICE Report criteria" is set to "inter-frequency measurement reporting criteria") is not received, the UE shall:

- 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;
- 1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

If IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "modify":

- 1> if CHOICE "Report criteria" in IE "Inter-frequency measurement" is set to "intra-frequency measurement reporting criteria" and IE "parameters required for each event" is present:
 - 2> the UE behaviour is unspecified.

If IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup" and CHOICE "Report criteria" in IE "Inter-frequency measurement" is set to "intra-frequency measurement reporting criteria":

1> the UE behaviour is unspecified.

In the case of an inter-frequency measurement for FDD, the UE shall:

- 1> if IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", if an inter-frequency event is configured that is different from event 2d or 2f, and if the IE "Inter-frequency SET UPDATE" is not received in that same message:
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

NOTE: The UTRAN should include the IE "Inter-frequency SET UPDATE" in the MEASUREMENT CONTROL message with the IE "measurement command" set to "modify" when event 2a, 2b, 2c or 2e is first configured, and when the UE is requested to measure a frequency that has not been previously measured. Otherwise the UE behaviour is unspecified.

If IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message:

- 1> if CHOICE "Report criteria" is set to "inter-frequency measurement reporting criteria" and CHOICE "reporting criteria" in "inter-frequency measurement quantity" is not set to "inter-frequency reporting criteria"; or
- 1> if CHOICE "Report criteria" is set to "intra-frequency measurement reporting criteria" and CHOICE "reporting criteria" in "inter-frequency measurement quantity" is not set to "intra-frequency reporting criteria":
 - 2> the UE behaviour is not specified.

If the variable CONFIGURATION_INCOMPLETE is set to TRUE, the UE shall:

1> act as described in subclause 8.4.1.4a.

8.6.7.15 Inter-RAT measurement

If the Inter-RAT cell info list, included in the variable CELL_INFO_LIST, includes a number (M) of frequencies that is larger than the number (N) considered in a UE performance requirement defined in [19] and [20]:

- 1> the UE shall:
 - 2> meet this performance requirement on the first relevant (N) frequencies, according to the order defined by the position of the frequencies in the Inter-RAT cell info list, included in the variable CELL_INFO_LIST.
- 1> the UE may:
 - 2> ignore the remaining (M-N) frequencies.

If IE "Inter-RAT measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Inter-RAT measurement quantity", IE "Inter-RAT reporting quantity" or "parameters required for each event" (given "CHOICE Report criteria" is set to "inter-RAT measurement reporting criteria") is not received, the UE shall:

- 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;
- 1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.16 Intra-frequency measurement

If IE "Intra-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Intra-frequency measurement quantity", IE "Intra-frequency reporting quantity", "CHOICE Report criteria" or "parameters required for each event" (given "CHOICE report criteria" is set to "intra-frequency measurement reporting criteria") is not received, the UE shall:

- 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT IDENTITY;
- 1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

In case of 1a or 1e event-triggered reporting:

- 1> if the IE "Intra-frequency measurement quantity" is set to "pathloss", the UE shall:
 - 2> if detected set cells are indicated as possibly triggering the event within the IEs "Triggering condition 2":
 - 3> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.17 Quality measurement

If IE "Quality measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Quality reporting quantity" is not received, the UE shall:

- 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;
- 1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

If Transport Channel BLER reporting is requested in IE "Quality Reporting Quantity", but no transport channels are explicitly referenced with transport channel identities, the UE shall

1> report BLER for all downlink transport channels, for which Transport Channel BLER is defined and can be requested [7, 8].

If a transport channel, for which Transport Channel BLER is not defined and can not be requested [7, 8], is referenced with a transport channel identity in IE "Quality Reporting Quantity" and/or IE "Quality Measurement Reporting Criteria":

1> the UE behaviour is not specified.

8.6.7.18 UE internal measurement

If IE "UE internal measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "UE internal measurement quantity", IE "UE internal reporting quantity" or "parameters sent for each UE internal measurement event" (given "CHOICE report criteria" is set to "UE internal measurement reporting criteria") is not received, the UE shall:

- 1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;
- 1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.18a Void

8.6.7.19 UE positioning

8.6.7.19.0 UE positioning reporting criteria

If IE "UE positioning reporting criteria" is included, the UE shall:

- 1> perform the necessary measurements and evaluate the event in the interval indicated in IE "Measurement Interval";
- 1> if IE "Event ID" is set to "7a" and if IE "Report first fix" is set to TRUE:
 - 2> if the IE "Method Type" included in the variable MEASUREMENT_IDENTITY is set to "UE based":
 - 3> act as specified in subclause 8.6.7.19.1b.

8.6.7.19.1 UE positioning reporting quantity

The UE shall:

- 1> ignore IE "Multiple Sets";
- 1> ignore IE "Response Time";
- 1> if IE "Horizontal Accuracy" and/or IE "Vertical Accuracy" is included:
 - 2> should try to achieve the requested level(s) of positioning accuracy with 67% confidence.
- 1> if IE "Positioning Methods" is set to "Cell ID":
 - 2> act as specified in subclause 8.6.7.19.1a.
- 1> if the IE "Method Type" is set to "UE based":
 - 2> act as specified in subclause 8.6.7.19.1b.
- 1> if the IE "Method Type" is set to "UE assisted":
 - 2> act as specified in subclause 8.6.7.19.1a.
- 1> if the IE "Method Type" is set to "UE-assisted preferred but UE-based allowed" or "UE-based preferred but UE-assisted allowed":
 - 2> act either according to subclause 8.6.7.19.1a or 8.6.7.19.1b depending on the method type chosen by the UE.

If UE according to its capabilities supports Rx-Tx time difference type 2 measurement and if IE "Positioning Methods" is set to "Cell ID" and the IE "Method Type" is set to "UE-based", the UE shall:

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

If UE according to its capabilities supports Rx-Tx time difference type 2 measurement and if IE "Positioning Methods" is set to "Cell ID" and the IE "Measurement validity" stored in the variable MEASUREMENT_IDENTITY is other than "CELL_DCH", the UE shall:

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

The UE shall perform the following consistency check:

- 1> if UE, according to its capabilities, does not support UE-based OTDOA and if IE "Positioning Methods" is set to "OTDOA" and if IE "Method Type" is set to "UE-based":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support UE-assisted OTDOA and if IE "Positioning Methods" is set to "OTDOA" and if IE "Method Type" is set to "UE-assisted":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support UE-based GPS and if IE "Positioning Methods" is set to "GPS" and if IE "Method Type" is set to "UE-based":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support UE-assisted GPS and if IE "Positioning Methods" is set to "GPS" and if IE "Method Type" is set to "UE-assisted":
 - 2> set the variable CONFIGURATION INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support UE-based positioning and if IE "Positioning Methods" is set to "OTDOAorGPS" and if IE "Method Type" is set to "UE-based":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support Rx-Tx time difference type 2 measurement and if IE "Positioning Methods" is set to "Cell ID":
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if UE, according to its capabilities, does not support UE GPS timing of cell frames measurement and if IE "GPS timing of Cell wanted" is set to TRUE:
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.19.1a UE positioning reporting for UE assisted methods

The UE shall:

- 1> when a measurement report is triggered:
 - 2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:
 - 3> if the IE "Vertical Accuracy" is included:
 - 4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.
 - 3> if the IE "Positioning Methods" is set to "GPS":
 - 4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:
 - 5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:
 - 6> if the IE "GPS timing of Cell wanted" is set to TRUE:

- 7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.
- 7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and
- 7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".
- 6> if the IE "GPS timing of Cell wanted" is set to FALSE:
 - 7> include the IE "GPS TOW msec" and set it to the GPS TOW when the measurements included in the MEASUREMENT REPORT were valid.
- 5> if the UE does not support the capability to provide the GPS timing of the cell:
 - 6> include the IE "GPS TOW msec" and set it to the GPS TOW when the measurements included in the MEASUREMENT REPORT were valid.
- 3> if the IE "Positioning Methods" is set to "OTDOA":
 - 4> include the IE "UE positioning OTDOA measured results" in the measurement report and set the contents of the IE as follows:
 - 5> set IE "SFN" to the SFN when the last measurement was performed;
 - 5> if the UE supports the capability to perform the Rx-Tx time difference type 2 measurement:
 - 6> if the UE is in CELL_DCH state:
 - 7> if the measured value is equal to "1279.9375":
 - 8> set the IE "Rx-Tx time difference type 2" in IE "UE positioning OTDOA measured results" for the reference cell to "1279.8750".
 - 7> otherwise:
 - 8> set the IE "Rx-Tx time difference type 2" in IE "UE positioning OTDOA measured results" for the reference cell to the measured value.
 - 7> include the IE group "Rx-Tx time difference type 2 info" for the reference cell and for each neighbour cell listed in variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED that belongs to the active set.
 - 5> if the UE does not support the capability to perform the Rx-Tx time difference type 2 measurement:
 - 6> set the IE "Rx-Tx time difference type 2" in IE "UE positioning OTDOA measured results" for the reference cell to value "1279.9375" to indicate that the measurement is not supported.
 - 4> include IE group "Neighbour" for all neighbour cells listed in variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED on which the SFN-SFN observed time difference type 2 measurement could be performed.
- 3> if IE "Positioning Methods" in the MEASUREMENT CONTROL message has been assigned to value "OTDOA or GPS":
 - 4> the UE may choose to either act as if IE "Positioning Methods" is set to "GPS" or "OTDOA" depending on the method chosen by the UE.
- 3> if the IE "Positioning Methods" is set to "CELL ID":
 - 4> if the UE supports the capability to perform the Rx-Tx time difference type 2 measurement; and
 - 4> if the UE is in CELL DCH state:
 - 5> perform the Rx-Tx time difference type 2 measurement on the cells in the active set; and

- 5> report the measurement results back to the network in the MEASUREMENT REPORT by using IE "UE positioning OTDOA measured results" including measurements on the cells in the active set; and
- 5> report Rx-Tx time difference type 2 measurement of the reference cell (as designated by the UE); and
- 5> for all reported neighbour cells:
 - 6> report Rx-Tx time difference type 2 measurement; and
 - 6> set the IE "SFN-SFN observed time difference type 2" and all IEs within the corresponding IE "UE positioning OTDOA quality" in IE "UE positioning OTDOA measured results" to value "0".
- 2> if the UE is not able to report the requested measurement results:
 - 3> include IE "UE positioning error" in the MEASUREMENT REPORT and set the contents of this IE as specified in subclause 8.6.7.19.5.
- 1> if the UE is unable to report the requested measurement results due to missing GPS assistance data:
 - 2> the UE may at anytime send a measurement report containing the IE "UE positioning error" and set the contents of this IE as specified in subclause 8.6.7.19.5.
 - 2> after sending the measurement report, the UE shall not send another measurement report to request the same GPS assistance data for at least 20s. This requirement does not apply after release of the current RRC connection.

8.6.7.19.1b UE positioning reporting for UE based methods

The UE shall:

- 1> when a measurement report is triggered:
 - 2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or the UE has been able to calculate a position in case of GPS positioning:
 - 3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:
 - 4> if the UE supports the capability to perform the UE GPS timing of cell frames measurement:
 - 5> if the IE "GPS timing of Cell wanted" is set to TRUE:
 - 6> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.
 - 6> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD;
 - 6> include the SFN when the position was determined;
 - 6> include the IE "UE GPS timing of cell frames".
 - 5> if the IE "GPS timing of Cell wanted" is set to FALSE:
 - 6> include the IE "GPS TOW msec" and set it to the GPS TOW when the position estimate was valid.
 - 4> if the UE does not support the capability to provide the GPS timing of the cell:
 - 5> include the IE "GPS TOW msec" and set it to the GPS TOW when the position estimate was valid.
 - 4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

- 5> if the IE "Vertical Accuracy" has been assigned to value "0":
 - 6> if the IE "Horizontal Accuracy" has been assigned a value "0":
 - 7> may include IE "Ellipsoid point with altitude".
 - 6> if the IE "Horizontal Accuracy" has been assigned a value unequal to "0"; and
 - 6> if the UE has been able to calculate a 3-dimensional position
 - 7> include IE "Ellipsoid point with altitude" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.
 - 6> if the UE has not been able to calculate a 3-dimensional position:
 - 7> may act as if IE "Vertical Accuracy" was not included in IE "UE positioning reporting quantity".
- 5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":
 - 6> if the UE has been able to calculate a 3-dimensional position:
 - 7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.
 - 6> if the UE has not been able to calculate a 3-dimensional position:
 - 7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".
- 4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":
 - 5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":
 - 6> may include IE "Ellipsoid point".
 - 5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:
 - 6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.
- 4> if any of the IEs "Ellipsoid point with uncertainty ellipse" or "Ellipsoid point with altitude and uncertainty ellipsoid" is reported:
 - 5> should calculate a value of the IE "Confidence", different from "0", as the probability that the UE is located within the uncertainty region of the one of the IEs "Ellipsoid point with uncertainty ellipse" or "Ellipsoid point with altitude and uncertainty ellipsoid" that is reported.
- NOTE: The value "0" of the IE "Confidence" is interpreted as "no information" by the UTRAN [57].
- 4> if IE "Velocity Requested" has been included in IE "UE positioning reporting quantity":
 - 5> include IE "Velocity estimate" if supported and available.
- 2> if the UE was not able to calculate a position:
 - 3> include IE "UE positioning error" in the MEASUREMENT REPORT and set the contents of this IE as specified in subclause 8.6.7.19.5.
- 1> if the UE is unable to calculate a position due to missing GPS assistance data:
 - 2> the UE may at any time send a measurement report containing the IE "UE positioning error" and set the contents of this IE as specified in subclause 8.6.7.19.5;

2> after sending the measurement report, the UE shall not send another measurement report to request the same GPS assistance data for at least 20s. This requirement does not apply after release of the current RRC connection.

8.6.7.19.2 UE positioning OTDOA assistance data for UE-assisted

If IE "UE positioning OTDOA reference cell info for UE-assisted" is received in System Information Block type 15.4 or in the MEASUREMENT CONTROL message, the UE shall update the variable UE POSITIONING OTDOA DATA UE ASSISTED accordingly. The UE shall:

1> store received cell information in the UE positioning reference cell info in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED, overwriting any existing information.

If IE "UE positioning OTDOA neighbour cell list for UE-assisted" is received in System Information Block type 15.4 or in the MEASUREMENT CONTROL message, the UE shall update the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED accordingly. The UE shall:

1> store received cell information in the neighbour cell info list in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED, overwriting any existing information.

If, according to its capabilities, UE does not support IPDLs and if IE "IPDL parameters" is received for the reference or any of the neighbour cells, the UE shall:

1> ignore this IE.

In 1.28 Mcps TDD, if the IE "IPDL parameters" is received and the UE supports IPDLs, the UE shall:

- 1> ignore the IE IP_Slot;
- 1> if the IE "IP_PCCPCH" is set to FALSE:
 - 2> configure the physical layer with IP_Sub to be first subframe according to [33].
- 1> if the IE "IP_PCCPCH" is set to TRUE:
 - 2> configure the physical layer with IP_Sub to be second subframe according to [33].
- 1> if the IE "IP_PCCPCH" is absent:
 - 2> configure the physical layer with IP_Sub to use both subframes according to [33].

If IE "SFN offset validity" is set to FALSE, the UE shall:

1> ignore the IE "SFN offset".

If IE "UE positioning measurement" is received in the MEASUREMENT CONTROL message, the UE shall also perform the following consistency checks:

- 1> if IE "Positioning Methods" is set to "OTDOA":
 - 2> if IE "UE positioning OTDOA reference cell info for UE-assisted" is not included and if UE positioning OTDOA reference cell info for UE-assisted in variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED is empty:
 - 3> set the variable CONFIGURATION INCOMPLETE to TRUE.
- 1> if IE "Positioning Methods" is set to "OTDOA":
 - 2> if IE "UE positioning OTDOA neighbour cell list for UE-assisted" is not included and if less than two neighbour cells are stored in UE positioning OTDOA neighbour cell info list for UE-assisted in variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED:
 - 3> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.19.2a UE positioning OTDOA assistance data for UE-based

The UE shall:

- 1> if IE "UE positioning OTDOA reference cell info for UE-based" is received in System Information Block type 15.5 or in the MEASUREMENT CONTROL message or in the ASSISTANCE DATA DELIVERY:
 - 2> update the variable UE_POSITIONING_OTDOA_DATA_UE_BASED accordingly;
 - 2> store received cell information in the UE positioning reference cell info for UE-based in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED, overwriting any existing information.
- 1> if IE "UE positioning OTDOA neighbour cell list for UE-based" is received in System Information Block type 15.5 or in the MEASUREMENT CONTROL message or in the ASSISTANCE DATA DELIVERY:
 - 2> update the variable UE_POSITIONING_OTDOA_DATA_UE_BASED accordingly;
 - 2> store received cell information in the neighbour cell info list for UE-based in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED, overwriting any existing information.
- 1> if, according to its capabilities, UE does not support IPDLs and if IE "IPDL parameters" is received for the reference or any of the neighbour cells:
 - 2> ignore this IE.
- 1> in 1.28 Mcps TDD:
 - 2> if the IE "IPDL parameters" is received and the UE supports IPDLs:
 - 3> ignore the IE IP_Slot;
 - 3> if the IE "IP PCCPCH" is set to FALSE:
 - 4> configure the physical layer with IP_Sub to be first subframe according to [33].
 - 3> if the IE "IP_PCCPCH" is set to TRUE:
 - 4> configure the physical layer with IP_Sub to be second subframe according to [33].
 - 3> if the IE "IP_PCCPCH" is absent:
 - 4> configure the physical layer with IP_Sub to use both subframes according to [33].
- 1> if IE "SFN offset validity" is set to FALSE:
 - 2> ignore the IE "SFN offset".
- 1> if IE "UE positioning measurement" is received in the MEASUREMENT CONTROL message:
 - 2> also perform the following consistency checks:
 - 3> if IE "Positioning Methods" is set to "OTDOA":
 - 4> if IE "UE positioning OTDOA reference cell info for UE-based" is not included and if UE positioning OTDOA reference cell info for UE-based in variable UE_POSITIONING_OTDOA_DATA_UE_BASED is empty:
 - 5> set the variable CONFIGURATION_INCOMPLETE to TRUE.
 - 3> if IE "Positioning Methods" is set to "OTDOA":
 - 4> if IE "UE positioning OTDOA neighbour cell list for UE-based" is not included and if less than two neighbour cells are stored in UE positioning OTDOA neighbour cell info list for UE-based in variable UE_POSITIONING_OTDOA_DATA_UE_BASED:
 - 5> set the variable CONFIGURATION_INCOMPLETE to TRUE.
 - 4> if IE "Method Type" is set to "UE based":

- 5> if IE "UE positioning OTDOA reference cell info for UE-based" is included and if IE "Cell Position" for the reference cell is not included:
 - 6> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 5> if the IE "UE positioning OTDOA neighbour cell list for UE-based" is included and if cell position of less than two neighbour cells of the cells included in this IE and stored in variable UE_POSITIONING_OTDOA_DATA_UE_BASED are different and if those cell positions are not different to the one of the reference cell stored in variable UE_POSITIONING_OTDOA_DATA_UE_BASED:
 - 6> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 5> if the IE "UE positioning OTDOA neighbouring cell list for UE-based" is included and only two neighbour cells are included or stored in variable UE_POSITIONING_OTDOA_DATA_UE_BASED and if the IE "Round Trip Time" is neither included for the neighbour cells nor for the reference cell info:
 - 6> set the variable CONFIGURATION_INCOMPLETE to TRUE.

8.6.7.19.3 UE positioning GPS assistance data

The UE may receive GPS assistance data in System Information Block types 15, 15.1, 15.2, or 15.3, or in the ASSISTANCE DATA DELIVERY message, or in the MEASUREMENT CONTROL message.

8.6.7.19.3.1 UE positioning GPS acquisition assistance

If the IE "UE positioning GPS acquisition assistance" is included, the UE shall:

- 1> update the variable UE_POSITIONING_GPS_DATA as follows:
 - 2> delete all information currently stored in the IE "UE positioning GPS acquisition assistance" in the variable UE_POSITIONING_GPS_DATA;
 - 2> store the received acquisition assistance information in the IE "UE positioning GPS acquisition assistance" in the variable UE_POSITIONING_GPS_DATA;
 - 2> store the IE "GPS TOW msec" in the IE "UE positioning GPS acquisition assistance" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

- 1> if the IEs "SFN" and "UTRAN GPS timing of cell frames" are included:
 - 2> if the UE is able to utilise these IEs:
 - 3> store these IEs in the IE "UE positioning GPS acquisition assistance " in variable UE_POSITIONING_GPS_DATA;
 - 3> if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is not included:
 - 4> if the UE is not in CELL_DCH state:
 - 5> use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and radio interface timing of the NODE B transmission in the serving cell.
 - 4> if the UE is in CELL_DCH state:
 - 5> ignore IEs "SFN" and "UTRAN GPS timing of cell frames".
 - 3> if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is also included:
 - 4> store this IE in the IE "UE positioning acquisition assistance" in variable UE_POSITIONING_GPS_DATA;

4> use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the cell indicated by "Primary CPICH info" or "cell parameters id".

8.6.7.19.3.2 UE positioning GPS Almanac

If the IE "UE positioning GPS Almanac" is included, the UE shall:

- 1> if the IE "SV Global Health" is included:
 - 1> store this IE in the IE in the IE "SV Global Health" in the IE "UE positioning GPS Almanac" in variable UE POSITIONING GPS DATA.
- 1> for each satellite:
 - 2> store received GPS almanac information at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Almanac" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.
 - 2> interpret IE "Data ID" as the Data ID field contained in the indicated subframe, word 3, most significant 2 bits, as defined by [12];
 - 2> act on the rest of the IEs in a similar manner as specified in [12].

8.6.7.19.3.3 UE positioning D-GPS Corrections

If the IE "UE positioning GPS DGPS corrections" is included, the UE shall:

- 1> update the variable UE_POSITIONING_GPS_DATA as follows:
 - 2> delete all information currently stored in the IE "UE positioning GPS DGPS corrections" in the variable UE_POSITIONING_GPS_DATA;
 - 2> store the received DGPS corrections in the IE "UE positioning GPS DGPS corrections" in the variable UE_POSITIONING_GPS_DATA.
- 1> use IE "GPS TOW sec" to determine when the differential corrections were calculated;
- 1> use IE "Status/Health" to determine the status of the differential corrections.

8.6.7.19.3.3a UE positioning GPS Navigation Model

If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

- 1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";
- 1> if an update has been provided for this satellite:
 - 2> act as specified in subclause 8.6.7.19.3.4.

8.6.7.19.3.4 UE positioning GPS Ephemeris and Clock Correction Parameters

If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

- 1> update the variable UE_POSITIONING_GPS_DATA as follows:
 - 2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.
- 1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

8.6.7.19.3.5 UE positioning GPS ionospheric model

If IE "UE positioning GPS ionospheric model" is included, the UE shall:

- 1> store this IE in the IE "UE positioning GPS ionospheric model" in variable UE_POSITIONING_GPS_DATA;
- 1> act on these GPS ionospheric model parameters in a manner similar to that specified in [12].

8.6.7.19.3.6 UE positioning GPS real-time integrity

If this list of bad satellites is included, the UE shall:

- 1> update the variable UE_POSITIONING_GPS_DATA as follows:
 - 2> add the Sat IDs that are not yet included in the list of satellites in the IE "UE positioning GPS real time integrity" in the variable UE_POSITIONING_GPS_DATA;
 - 2> remove all Sat IDs in the list of satellites in the IE "UE positioning GPS real time integrity" in the variable UE POSITIONING GPS DATA that are not included in IE UE positioning GPS real time integrity.
- 1> consider the data associated with the satellites identified in the variable UE_POSITIONING_GPS_DATA as invalid.

8.6.7.19.3.7 UE positioning GPS reference time

If the IE "UE positioning GPS reference time" is included, the UE shall:

- 1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;
- 1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

- $1\!\!>$ if the IE "SFN" and IE "UTRAN GPS timing of cell frames" are included:
 - 2> if the UE is able to utilise the IEs:
 - 3> store these IEs in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
 - 3> if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is not included:
 - 4> if the UE is not in CELL_DCH state:
 - 5> use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the serving cell.
 - 4> if the UE is in CELL_DCH state:
 - 5> ignore IEs "SFN" and "UTRAN GPS timing of cell frames".
 - 3> if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is also included:
 - 4> store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
 - 4> use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the cell indicated by "Primary CPICH info" or "cell parameters id".
- 1> if the IE "SFN-TOW Uncertainty" is included:

- 2> store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it to determine if the relationship between GPS time and air-interface timing of the NODE B transmission is known to within at least 10ms.
- 1> if the IE "T_{UTRAN-GPS} drift rate" is included:
 - 2> store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA; and
 - 2> may use it as an estimate of the drift rate of the NODE B clock relative to GPS time.
- 1> if the IE "GPS TOW Assist" is included:
 - 2> for each satellite:
 - 3> delete all information currently stored in the IE "GPS TOW Assist" in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA;
 - 3> store the received GPS TOW Assist information in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA.

8.6.7.19.3.8 UE positioning GPS reference UE position

If the IE "UE positioning GPS reference UE position" is included, the UE shall:

- 1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE POSITIONING GPS DATA; and
- 1> use it as a priori knowledge of the approximate location of the UE.

8.6.7.19.3.9 UE positioning UTC model

If the IE "UE positioning GPS UTC model" is included, the UE shall:

1> store this IE in the IE "UE positioning GPS UTC model" in variable UE_POSITIONING_GPS_DATA.

8.6.7.19.4 UE positioning Ciphering info

The UE shall:

- 1> if deciphering information is received from higher layers for deciphering of GPS assistance data broadcast on system information:
 - 2> store the current key in IE "Current deciphering key" in variable UE_POSITIONING_GPS_DATA;
 - 2> store the next key in IE "Next deciphering key" in variable UE_POSITIONING_GPS_DATA;
 - 2> store the ciphering key flag in UE POSITIONING GPS DATA.
- 1> if deciphering information is received from higher layers for deciphering of OTDOA assistance data broadcast on system information:
 - 2> store the current key in IE "Current deciphering key" in variable UE_POSITIONING_OTDOA_DATA_UE_BASED;
 - 2> store the next key in IE "Next deciphering key" in variable UE_POSITIONING_OTDOA_DATA_UE_BASED;
 - 2> store the ciphering key flag in UE_POSITIONING_OTDOA_DATA_UE_BASED.
- 1> if the IE "GPS Data ciphering info" is included in System Information Block type 15:
 - 2> select one of the two deciphering keys received and stored it in UE_POSITIONING_GPS_DATA according to the following:

- 3> if the value of the received IE "Ciphering Key Flag" is the same as the value of the IE "Ciphering Key Flag" stored in the variable UE_POSITIONING_GPS_DATA:
 - 4> select the current deciphering key.
- 3> if the value of the received IE "Ciphering Key Flag" is different from the value of the IE "Ciphering Key Flag" stored in the variable UE POSITIONING GPS DATA:
 - 4> select the next deciphering key.
- 2> store the received IE in the variable UE_POSITIONING_GPS_DATA;
- 2> use the selected deciphering key to decipher the broadcast UE positioning GPS information contained within the System Information Block types 15.1, 15.2 and 15.3.
- 1> if the IE "OTDOA positioning ciphering info" is included in System Information Block type 15.4:
 - 2> select one of the two deciphering keys and stored it in UE_POSITIONING_OTDOA_DATA_UE_BASED according to the following:
 - 3> if the value of the received IE "Ciphering Key Flag" is the same as the value of the IE "Ciphering Key Flag" stored in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED:
 - 4> select the current deciphering key.
 - 3> if the value of the received IE "Ciphering Key Flag" is different from the value of the IE "Ciphering Key Flag" stored in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED:
 - 4> select the next deciphering key.
 - 2> store the received IE in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED;
 - 2> use the selected deciphering key to decipher the IE "OTDOA assistance data" included in the System Information Block types 15.4.

8.6.7.19.5 UE positioning Error

The UE shall set the contents of the IE "UE positioning Error" as follows:

- 1> if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "OTDOA" and no neighbour cells could be received,
 - 2> set IE "Error reason" to "Not Enough OTDOA Cells";
- 1> if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "GPS":
 - 2> if there were not enough GPS satellites to be received:
 - 3> set IE "Error reason" to "Not Enough GPS Satellites".
 - 2> if some GPS assistance data was missing:
 - 3> set IE "Error reason" to "Assistance Data Missing"; and
 - 3> if the IE "Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to TRUE:
 - 4> include the IE "GPS Additional Assistance Data Request".
 - 3> if the IE "Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to FALSE:
 - 4> not include the IE "GPS Additional Assistance Data Request", and use the assistance data available for doing a positioning estimate.
 - 2> if the UE was not able to read the SFN of the reference cell included in the IE "UE positioning GPS reference time" or in the IE "UE positioning acquisition assistance":

- 3> set IE "Error reason" to "Reference Cell Not Serving Cell".
- 2> if the UE was not able to measure the requested GPS timing of cell frames measurement:
 - 3> set IE "Error reason" to "Not Accomplished GPS Timing Of Cell Frames".
- 1> if none of the conditions above are fulfilled:
 - 2> set IE "Error reason" to "Undefined Error".

The UE shall not set the IE "Error reason" to "Request Denied By User" or "Not Processed and Timeout".

8.6.7.19.6 Void

8.6.7.20 Void

8.6.7.21 Intra-frequency reporting quantity for RACH reporting

If the IE "Intra-frequency reporting quantity for RACH reporting" is included, the UE shall:

- 1> if the IE "SFN-SFN observed time difference reporting indicator" has the value "type 2":
 - 2> act as if the value of the IE "SFN-SFN observed time difference reporting indicator" is "no reporting".
- 1> if the IE "Reporting quantity" (FDD) or all IEs "Reporting quantity" (TDD) have the value "no report":
 - 2> the UE behaviour is unspecified.

8.6.7.22 Additional Measurement List

If the IE "Additional Measurement List" is received in a MEASUREMENT CONTROL message, the UE shall:

- 1> if the received measurement configuration in this MEASUREMENT CONTROL message, or any measurement referenced in the "Additional Measurement List" do not all have the same validity (for this consistency check the UE shall assume "CELL_DCH" as the measurement validity for measurements of type "inter-RAT", "UE internal", and "quality"):
 - 2> set the variable CONFIGURATION_INCOMPLETE to TRUE.
- 1> if any of the measurements referenced in the "Additional Measurement List" is an intra-frequency, interfrequency or inter-RAT measurement, and this measurement is configured with event based reporting:
 - 2> the UE behaviour is not specified.
- 1> if any of the "intra-frequency", "inter-frequency", "traffic volume" or "UE positioning" measurements referenced in the "Additional Measurement List" has been setup without including the IE "measurement validity":
 - 2> the UE behaviour is not specified.
- 1> if the result of this MEASUREMENT CONTROL message is such that more than one additional measurement of the same type will be referenced in the IE "Additional Measurement List" in the MEASUREMENT_IDENTITY variable:
 - 2> the UE behaviour is not specified.
- 1> if the UE has no IE "Additional Measurement List" stored the in variable MEASUREMENT_IDENTITY associated with the identity indicated by the IE "measurement identity":
 - 2> store the received IE "Additional Measurement List" in the variable MEASUREMENT_IDENTITY.

If the IE "Additional Measurement List" is received in a MEASUREMENT CONTROL message with the IE "Measurement command" value set to "modify", and the UE has an IE "Additional Measurement List" stored in the variable MEASUREMENT_IDENTITY associated with the identity indicated by the IE "measurement identity", the UE shall:

1> replace the information stored in "Additional Measurement List" in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the one received in the MEASUREMENT CONTROL message.

If the IE "Additional Measurement List" is not received in a MEASUREMENT CONTROL message and the IE "Measurement command" has the value "modify" and the UE has an IE "Additional Measurement List" stored in the variable MEASUREMENT_IDENTITY associated with the identity indicated by the IE "measurement identity", the UE shall:

1> leave the IE "Additional Measurement List" stored in the variable MEASUREMENT_IDENTITY associated with the identity indicated by the IE "measurement identity" unchanged.

If, at any time during the life-time of a measurement, any measurement referenced in the Additional Measurement List does not exist, the UE shall:

1> remove this measurement identity from the Additional Measurement List.

NOTE: A measurement referenced in the Additional Measurement List which is updated with a measurement command set to "modify", or replaced with a measurement command set to "setup", continues to exist.

If the measurement configured with the MEASUREMENT CONTROL message triggers a measurement report, the UE shall:

1> also include the reporting quantities for the measurements referenced by the additional measurement identities. The contents of the IE "Additional Measured results" are completely determined by the measurement configuration of the referenced additional measurement.

8.6.8 Void

8.6.9 MBMS specific information elements

The UE shall perform the generic actions defined in this subclause only for the information elements corresponding with services that are included in variable MBMS_ACTIVATED_SERVICES.

8.6.9.1 Continue MCCH Reading

If the "Continue MCCH Reading" is included the UE shall:

- 1> if the IE "Continue MCCH reading" is set to 'TRUE':
 - 2> continue receiving the MBMS MODIFIED SERVICES INFORMATION from MCCH in the next modification period and act upon it as specified in subclause 8.7.3.4.

8.6.9.1a MBMS dynamic persistence level

If the IE "MBMS dynamic persistence level" is included the UE shall:

1> Apply the dynamic persistence level in place of that broadcast in SIB 7 for MBMS related PRACH transmissions that are made within the modification period in which this IE was received.

8.6.9.2 MBMS PL Service Restriction Information

The UE shall:

1> if the UE receives a message triggering the reconfiguration procedure, a CELL UPDATE CONFIRM or an MBMS GENERAL INFORMATION message; and

- 1> if that message does include the IE "MBMS PL Service Restriction Information":
 - 2> consider that UTRAN will not provide any non- MBMS services on the MBMS preferred frequencies.
- 1> otherwise:
 - 2> consider that UTRAN will provide any non-MBMS services on the MBMS preferred frequencies.
- 1> perform the MBMS frequency selection procedure as specified in subclause 8.5.27.

8.6.9.3 MBMS L1 combining schedule

If the IE "MBMS L1 combining schedule" is included the UE may:

1> apply L1 combining between the concerned neighbouring cell"s S-CCPCH and the corresponding current cell"s S-CCPCH for the periods indicated by this IE.

8.6.9.3a MBMS Number of neighbour cells

The UE may:

1> apply the number of neighbour cells to identify if all MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages have been received from MCCH.

8.6.9.4 MBMS Preferred frequency information

If the IE "MBMS Preferred frequency information" is included the UE shall:

- 1> if HCS is not used, and the IE "Qoffmbms" is not present for the MBMS preferred frequency:
 - 2> consider the cells on the MBMS preferred frequency having a Qoffmbms equal to "infinity".
- 1> if HCS is used, and the IE "HCS_OFFmbms" is not present for the MBMS preferred frequency:
 - 2> consider the cells on the MBMS preferred frequency having the highest HCS priority level.
- 1> perform the Preferred frequency layer selection procedure as specified in subclause 8.5.27.

8.6.9.4a Void

8.6.9.4b MBMS p-t-m activation time

The UE shall:

- 1> for the services as listed in the IE "MBMS transmission identity" included in the MBMS MODIFIED SERVICES INFORMATION message for which the IE "MBMS required UE action" is set to "Acquire PTM RB info";
- 1> if the IE "MBMS all unmodified p-t-m services" is included in the MBMS MODIFIED SERVICES INFORMATION message, for the services as listed in the IE "MBMS transmission identity" included in the MBMS UNMODIFIED SERVICES INFORMATION message for which the IE "MBMS required UE action" in the MBMS UNMODIFIED SERVICES INFORMATION message is set to "Acquire PTM RB info":
 - 2> if the IE "MBMS p-t-m activation time" is not included:
 - 3> if available continue using the currently used p-t-m configuration for this service until the end of the modification period;
 - 3> start to use the p-t-m configuration received in this modification period from the next modification period onward.

2> else:

- 3> for the cell current cell:
 - 4> stop using any old configuration on TTIs that are after or contain the time instant as indicated by the IE "MBMS p-t-m activation time";
 - 4> start using the configuration for the S-CCPCH received for that p-t-m bearer in the same modification period as the IE "MBMS p-t-m activation time" on TTIs that are after or that contain the time instant as indicated by the IE "MBMS p-t-m activation time".
- 3> for neighbouring cells:
 - 4> for the neighbouring cells for which the IE "MBMS transmission time difference" is included:
 - 5> stop using any old configuration on TTIs corresponding to the TTIs of the cell wherein the UE is reading the MCCH from and where the new p-t-m radio bearer information is valid according to the above;
 - 5> start using the configuration for the S-CCPCH received for that p-t-m bearer in the same modification period as the IE "MBMS p-t-m activation time" on TTIs corresponding to the TTIs of the cell wherein the UE is reading the MCCH from and where the new p-t-m radio bearer information is valid according to the above.
 - 4> for the neighbouring cells for which the IE "MBMS transmission time difference" is not included:
 - 5> stop using any old configuration on TTIs that are after or contain the time instant as indicated by the IE "MBMS p-t-m activation time".
 - 5> start using the configuration for the S-CCPCH received for that p-t-m bearer in the same modification period as the IE "MBMS p-t-m activation time" on TTIs that are after the time instant as indicated by the IE "MBMS p-t-m activation time".

8.6.9.5 MBMS RB list released to change transfer mode

If the IE "MBMS RB list released to change transfer mode" is included the UE shall:

1> perform the service prioritisation procedure as specified in subclause 8.5.26, taking into account that the MBMS service(s) for which the radio bearers are released will be provided via p-t-m radio bearer(s).

8.6.9.6 MBMS Required UE action

If the IE "MBMS required UE action" is included the UE shall:

- 1> if the "MBMS required UE action" is set to 'None':
 - 2> take no action with respect to this IE.
- 1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info- PTM RBs unmodified':
 - 2> perform the MBMS counting procedure as specified in subclause 8.7.4;
- NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.
- 1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or
- 1> if the IE "MBMS required UE action" is set to 'Acquire counting info- PTM RBs unmodified and the UE is not receiving a p-t-m RB for the concerned service:
 - 2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

- 2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;
- 1> if the IE "MBMS required UE action" is set to 'Request PTP RB':
 - 2> if the UE is in idle mode:
 - 3> indicate to upper layers that establishment of an RRC connection is required to receive the concerned MBMS service with the establishment cause set to 'MBMS ptp RB request', unless the UE has already requested p-t-p RB establishment in the current modification period.
 - 2> if the UE is in URA_PCH or Cell_PCH states:
 - 3> perform a cell update procedure with cause "MBMS ptp RB request", as specified in subclause 8.3.1.2, unless the UE has already requested p-t-p RB establishment in the current modification period.
 - 2> if the UE is in CELL_DCH:
 - 3> indicate to upper layers that establishment of an PMM connection is required to receive the concerned MBMS service with the establishment cause set to 'MBMS ptp RB request' unless the UE has already established the PMM connection.
- 1> if the IE "MBMS required UE action" is set to 'Release PTM RB':
 - 2> stop receiving the concerned MBMS service;
 - 2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and
 - 2> if the UE does not decide to receive an MBMS service for which a preferred frequency applies; and
 - 2> if the IE "MBMS dispersion indicator" is set to TRUE; and
 - 2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:
 - 3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:
 - 4> select a suitable UTRA cell in that frequency.
 - 4> if no suitable UTRA cell in that frequency is found:
 - 5> select a suitable UTRA cell in another frequency.
 - 3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.
 - 4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.
 - 5> select a suitable UTRA cell in the selected frequency
 - 5> if no suitable UTRA cell in the selected frequency is found:
 - 6> select a suitable UTRA cell in another frequency.
 - 3> clear the variable MBMS_PREV_FREQUENCY_INFO.
 - 2> clear all service specific information applicable for the concerned service.
- NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

8.6.9.6a MBMS re- acquire MCCH

If the UE receives the IE " MBMS re- acquire MCCH", the UE shall:

1> perform the MCCH acquisition procedure as specified in subclause 8.7.2.

8.6.9.7 MBMS Service transmissions info list

If the UE receives the IE "MBMS Service transmissions info list", the UE may:

1> discontinue reception of the S-CCPCH on which the IE was received, except for the service transmissions indicated by this IE for the concerned scheduling period.

8.6.9.8 MBMS Short transmission ID

If the IE "MBMS short transmission ID" is included the UE shall:

- 1> if the value of the "MBMS short transmission ID" is less than or equal to the number of services identified by the IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION message acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:
 - 2> consider the "MBMS short transmission ID" to be an index to the list of services contained in the IE "Modified services list" and apply the MBMS service identity specified for this entry.

1> otherwise:

- 2> compile a list of available MBMS services, as included in the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:
 - 3> concatenate the services contained in IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION and the services contained in IE "Unmodified services list" included in the MBMS UNMODIFIED SERVICES INFORMATION.
- 2> consider the 'MBMS short transmission ID' to be the index of the entry in the list of available services and apply the MBMS service identity specified for this entry.

8.6.9.9 MBMS Transmission identity

If the IE "MBMS transmission identity" is included the UE shall:

- 1> if upper layers indicate that the MBMS transmission has already been received correctly:
 - 2> ignore the information about this MBMS transmission i.e. continue as if the information about the concerned MBMS transmission was not included in the message.

1> otherwise:

2> act upon the information about the concerned MBMS transmission as specified elsewhere.

The UE behaviour is unspecified if an MBMS transmission identity appears more than once in the combined list of transmissions i.e. the IE is included more than once in the MBMS MODIFIED SERVICES INFORMATION or in the MBMS UNMODIFIED SERVICES INFORMATION, or once in both message.

8.6.9.9a MBMS transmission time difference

The IE "MBMS transmission time difference" indicates the time difference between the transmissions on the current and the neighbour cell i.e. indicating the TTIs that can be L1- combined. The UE shall:

1> derive the parameter Neighbor_Start from the IE MBMS transmission time difference as follows:

MBMS transmission time difference = (Neighbor_Start / Max_TTI_Size) mod 4

where Neighbor_Start is the CFN of the first radio frame in a TTI on the neighbour cell that may be combined with the TTI on the current cell of which the CFN of the first radio frame equals 0 while Max_TTI_Size is the largest TTI size on the S-CCPCHs to be soft combined;

1> in case of partial soft combining, derive the CFN of the first radio frame in a TTI on the neighbour cell that may be combined assuming the same time difference applies.

The maximum delay between S-CCPCH clusters that the UE may combine is set by UE performance requirements.

NOTE: The MBMS transmission time difference is semi-static; it does not vary within or between L1 combining periods nor when full combining is used.

8.6.9.9b MCCH configuration information

If the IE "MCCH configuration information" is included the UE shall:

1> Consider an access information period to start from the frame with the SFN value fulfilling the following equation (where *m* is the modification period coefficient and *a* is the access info period coefficient):

$$SFN \bmod 2^{(m-a)} = 0$$

1> Consider a repetition period to start from the frame with the SFN value fulfilling the following equation (where *m* is the modification period coefficient and *r* is the repetition period coefficient):

$$SFN \bmod 2^{(m-r)} = 0$$

1> Consider a modification period to start from the frame with the SFN value fulfilling the following equation (where *m* is the modification period coefficient):

SFN mod
$$2^m = 0$$

- 1> configure the RLC entity in the UE used for receiving MCCH in accordance with 8.6.4.9;
- 1> configure the MAC entity in the UE, used for receiving MCCH, for receiving TCTF field unless the IE 'TCTF presence' is received;

8.6.9.10 Next scheduling period

If the IE "Next scheduling period" is included the UE may:

1> discontinue reception of the S-CCPCH on which the IE was received for the number of scheduling periods indicated by this IE.

8.7 MBMS specific procedures

8.7.1 Reception of MBMS control information

8.7.1.1 General

The procedure for receiving MBMS control information is used by a UE to receive information from UTRAN concerning the way it provides MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of its state (idle, URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

Most MBMS control information is provided on the MCCH. The information on MCCH is transmitted using a fixed schedule, which is common for all services. MCCH information other than MBMS ACCESS INFORMATION message is transmitted periodically based on a repetition period. This MCCH information is repeated a configurable number of times with exactly the same content; the period in which the content of MCCH information other than MBMS ACCESS INFORMATION message remains unchanged is called the modification period. MBMS ACCESS INFORMATION message may be transmitted more frequently, based on the Access Info period. The transmissions of MBMS ACCESS INFORMATION message within a modification period need not have exactly the same content (the value of some parameters eg. IE 'Access probability factor – Idle' may change). Nevertheless, the transmissions of MBMS ACCESS INFORMATION message within a modification period should concern the same MBMS service(s), although information for a service may be removed eg. upon completion of the counting for that service.

The general principles are illustrated in figure 8.7.1-1, in which different colours indicate potentially different content of the MCCH information.

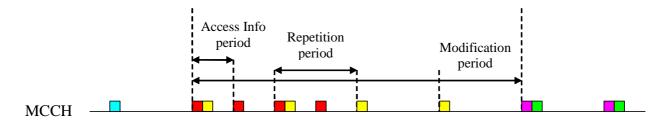


Figure 8.7.1-1: Scheduling of MCCH Information

For services provided via a p-t-m radio bearer scheduling information may be provided on an MSCH mapped on the same S-CCPCH as the p-t-m radio bearer(s). For some of the services provided p-t-m this scheduling information may be provided by signalling an MBMS SCHEDULING INFORMATION message at every scheduling period, while for others the MBMS SCHEDULING INFORMATION message may be signalled less frequently i.e. after a multiple of the scheduling period. In general, the UE is neither required to acquire MSCH information nor to act on it.

In case the UE shall acquire MCCH information that is scheduled at the same time as MSCH information, the reception of the MCCH information shall take precedence.

In order to minimise the time the UE needs to read MCCH upon notification as specified in 8.7.3 to acquire the required information, UTRAN should schedule the MCCH messages in a specific order ie. any message that needs to be read by any UE due to the reception of the MBMS MODIFIED SERVICES INFORMATION message should be scheduled prior to the remaining messages. More specifically, the UE may assume that UTRAN schedules the MCCH messages in the following order:

MBMS MODIFIED SERVICES INFORMATION,

followed by messages that needs to be read by any UE due to the content of the MBMS MODIFIED SERVICES INFORMATION message in the following order: MBMS GENERAL INFORMATION, MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION, one or more MBMS NEIGHBOURING CELL P-T-M RB INFORMATION,

MBMS UNMODIFIED SERVICES INFORMATION,

followed by messages that do not need to be read by any UE due to the content of the MBMS MODIFIED SERVICES INFORMATION message in the following order: MBMS GENERAL INFORMATION, MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION, one or more MBMS NEIGHBOURING CELL P-T-M RB INFORMATION

8.7.1.2 Initiation

The requirements concerning which MBMS control information the UE shall acquire in the different cases is specified in other subclauses. This section specifies common requirements concerning the reception of MCCH information and MSCH information.

8.7.1.3 UE requirements on reading of MCCH information

When requested to acquire MBMS control information other than the MBMS ACCESS INFORMATION message, the UE shall:

- 1> if requested to start reading MCCH at the next modification period:
 - 2> start reading MCCH at the beginning of the next modification period.
- 1> otherwise
 - 2> start reading MCCH at the beginning of the next repetition period.
- 1> if requested to stop reading MCCH at the end of the modification period:
 - 2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly or until the end of the modification period.

1> otherwise:

- 2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;
- 2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly.
- NOTE 1: The UE may combine information received at different repetition periods within a modification period.

When requested to acquire the MBMS ACCESS INFORMATION message, the UE shall:

- 1> if requested to start reading MCCH at the next modification period:
 - 2> start reading MCCH at the beginning of the next modification period.
- 1> otherwise:
 - 2> start reading MCCH at the beginning of the next access info period.
- 1> continue reading MCCH in this manner at every subsequent access info period, until the message is received correctly or until the end of the modification period.

If the UE is CELL_DCH and has a compressed mode pattern that overlaps with the period in which it needs to read MCCH, the UE may temporarily refrain from receiving MCCH unless it is capable of simultaneous operation. If the UE is CELL_FACH and has a measurement occasion that overlaps with the period in which it needs to read MCCH, the UE may temporarily refrain from receiving MCCH unless it is capable of simultaneous operation. A UE in CELL_FACH may omit performing measurements during a measurement occasion in order to receive MCCH provided that this does not prevent it from fulfilling the measurement performance requirements as specified in [19]. In Idle mode as well as in CELL_PCH and URA_PCH states the UE may temporarily refrain from receiving MCCH if needed to fulfil the measurements performance requirements as specified in [19].

NOTE 2: The UTRAN should endeavour to ensure that for each UE in CELL_FACH the assigned measurement occasions do not overlap constantly with the periodic MCCH transmissions.

If the UE selects to another cell, the UE shall re-establish the RLC entity used for MCCH reception.

8.7.1.4 UE requirements on reading of MSCH information

If the UE supports reception of MSCH, UE shall:

- 1> if the UE needs to acquire MCCH information that is transmitted at the same time as the MSCH information and the UE does not support simultaneous reception:
- 2> refrain from reading MSCH.

If the UE supports reception of MSCH, UE should:

- 1> start reading MSCH at the beginning of the next scheduling period;
- 1> continue reading MSCH until the required MBMS control information is received or until the UE detects a TTI in which no MSCH information is transmitted, whichever is first.

8.7.2 MCCH acquisition

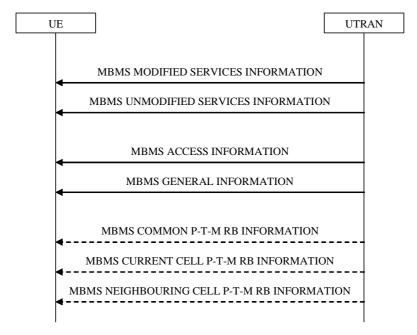


Figure 8.7.2-1: MCCH acquisition, normal

8.7.2.1 General

The UE applies the MCCH acquisition procedure to determine the MBMS services available in the cell and to initiate reception of the services that the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle, URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

8.7.2.2 Initiation

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

8.7.2.3 MCCH information to be acquired by the UE

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

8.7.2.4 Reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION by the UE

If the UE is receiving an MBMS service that is not included in variable MBMS_ACTIVATED_SERVICES and that is using a p-t-m radio bearer, the UE shall:

1> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Upon completing the reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages, the UE shall

- 1> act as follows for each of the services included in these messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services');
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;
- 1> if one or more preferred frequency applies for the applicable services:
 - 2> delay acting upon the "MBMS Preferred frequency information" until receiving the relevant MCCH information i.e. the MBMS GENERAL INFORMATION message;
 - 2> act upon the "MBMS Preferred frequency information" as specified in subclause 8.6.9.4 for the service(s) that upper layers indicate to have highest priority.
- 1> perform the service prioritisation procedure as specified in subclause 8.5.26;
- 1> if the UE receives an MBMS service using a p-t-m radio bearer and the received messages do not contain an IE "MBMS required UE action" set to "Acquire PTM RB info" or set to "Acquire counting info- PTM RBs unmodified" for that service then the UE shall:
 - 2> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

8.7.2.5 Reception of the other MBMS messages by the UE

Upon receiving the MBMS ACCESS INFORMATION message, the UE shall act as specified in subclause 8.7.4.3.

Upon receiving the MBMS GENERAL INFORMATION message, the UE should store all relevant IEs included in this message. The UE shall also:

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following.

Upon receiving the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages, the UE shall act as specified in subclauses 8.7.5.3 and subclause 8.7.5.4 respectively.

The procedure ends.

8.7.3 MBMS Notification

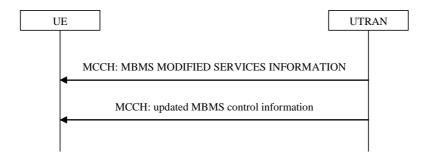


Figure 8.7.3-1: MBMS notification on MCCH

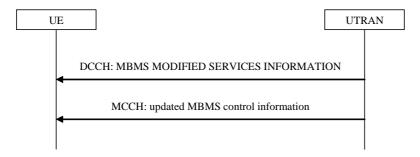


Figure 8.7.3-2: MBMS notification on DCCH

8.7.3.1 General

The MBMS notification procedure is used by the UE to respond to a notification provided by UTRAN, indicating a change applicable for one or more MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH). The actual notification mechanism to be used depends on the UE state.

8.7.3.2 Initiation

UTRAN initiates the notification procedure to inform UEs about a change applicable for one or more MBMS services available in a cell. Some types of MBMS service changes e.g. the establishment of a p-t-m radio bearer, involve a modification of MCCH messages other than the MBMS MODIFIED SERVICES INFORMATION message.

- NOTE 1: On MCCH, the MBMS MODIFIED SERVICES INFORMATION as well as the MBMS UNMODIFIED SERVICES INFORMATION messages are signalled even if no services are contained in the message.
- NOTE 2: A service remains in the MBMS MODIFIED SERVICES INFORMATION message until it enters a 'steady state', upon which it moves to the MBMS UNMODIFIED SERVICES INFORMATION message. In case counting is used, the service remains in the MBMS MODIFIED SERVICES INFORMATION message through the moment UTRAN has decided the transfer mode.

8.7.3.3 Receiving the MBMS Notification information

8.7.3.3.1 Reception via MCCH

The UE may:

- 1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state; and
- 1> if not receiving an MBMS service provided via a p-t-m radio bearer:
 - 2> monitor the MBMS notification Indicator Channel (MICH).
 - 2> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

- 3> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;
- 3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

- 1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:
 - 2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or
 - 2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:
 - 3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;
 - 3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

8.7.3.3.2 Void

8.7.3.3.3 Reception via DCCH

Notification via DCCH is used to notify the UE about the start of a session for which a PL applies, to notify the UE about the establishment of a p-t-m radio bearer and to request a UE in PMM_idle state to establish a PMM connection to enable reception of a service provided via a p-t-p radio bearer.

Upon receiving the MBMS MODIFIED SERVICES INFORMATION message via DCCH, a UE in CELL_DCH shall:

1> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

8.7.3.4 UE action upon receiving MBMS MODIFIED SERVICES INFORMATION message

Upon receiving the MBMS MODIFIED SERVICES INFORMATION message, the UE shall act as follows for each of the services included in this messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services'):

- 1> if the IE "MBMS all unmodified p-t-m services" is included in the MBMS MODIFIED SERVICES INFORMATION messages:
 - 2> for all services listed in the message UNMODIFIED SERVICES INFORMATION, provided that the service is included in variable MBMS_ACTIVATED_SERVICES, upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services') and the IE "MBMS required UE action" in the message MBMS UNMODIFIED SERVICES INFORMATION is set to "Acquire PTM RB info":
 - 3> continue acquiring the MBMS UNMODIFIED SERVICES INFORMATION, MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION, and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3;
 - 3> act upon the MBMS UNMODIFIED SERVICES INFORMATION MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5.
 - 2> if the UE receives an MBMS service using a p-t-m radio bearer and the messages MBMS UNMODIFIED SERVICES INFORMATION and MBMS MODIFIED SERVICES INFORMATION do not contain an IE "MBMS required action" set to "Acquire PTM RB info" or set to "Acquire counting info PTM RBs unmodified" for that service then the UE shall:

- 3> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following
- 1> if one or more preferred frequency applies for the applicable services:
 - 2> if the UE is in CELL_FACH state:
 - 3> acquire the MBMS GENERAL INFORMATION message;
 - 3> act as specified in subclause 8.6.9.2 upon the IE "MBMS PL Service Restriction information" for the corresponding preferred frequency, as received in the MBMS GENERAL INFORMATION message.
 - 2> delay acting upon the "MBMS Preferred frequency information" until receiving the relevant MCCH information i.e. the MBMS GENERAL INFORMATION message;
 - 2> act upon the "MBMS Preferred frequency information" as specified in 8.6.9.2 for the service(s) that upper layers indicate to have highest priority.
- 1> perform the service prioritisation procedure as specified in subclause 8.5.26;
- 1> if applicable, use a single MBMS MODIFICATION REQUEST to request release of radio bearers corresponding with lower priority MBMS services provided p-t-p and/or to request a move to the preferred frequency as specified in subclause 8.5.26 and subclause 8.6.9.2 respectively;
- 1> the procedure ends.

8.7.3.5 UE fails to receive MBMS Notification information

If the UE fails to receive the MBMS MODIFIED SERVICES INFORMATION message within the current modification period, the UE shall:

- 1> Acquire the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and with stopping at the end of that modification period, in accordance with subclause 8.7.1.3;
- 1> act upon the received MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages as specified in subclause 8.7.2.4.

8.7.4 MBMS counting

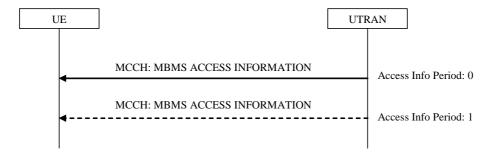


Figure 8.7.4-1: MBMS counting, normal

8.7.4.1 General

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode. In connected mode the procedure applies to the URA_PCH, Cell_PCH and/ or Cell_FACH states dependent upon the value of the IE "Connected mode counting scope".

8.7.4.2 Initiation

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info- PTM RBs unmodified".

8.7.4.3 Reception of the MBMS ACCESS INFORMATION

The UE shall acquire the MBMS ACCESS INFORMATION message without delaying reading of MCCH until the next modification period in accordance with subclause 8.7.1.3. If the procedure the UE would apply to respond to counting (Idle mode: RRC connection establishment, connected mode: Cell update) is ongoing, the UE may defer acquiring the MBMS ACCESS INFORMATION message until this procedure has completed.

The UE behaviour upon receiving an MBMS ACCESS INFORMATION message that is contained in more than one TTI is not specified.

Upon receiving the MBMS ACCESS INFORMATION message including one or more MBMS service(s) it has joined, the UE shall for each joined service:

1> if the UE is in idle mode:

- 2> draw a random number, "rand", uniformly distributed in the range: $0 \le \text{rand} < 1$
- 2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-Idle' for the concerned service:
 - 3> indicate to upper layers that establishment of an RRC connection is required to receive the concerned MBMS service, with the establishment cause set to 'MBMS reception';
 - 3> if the above condition applies for more than one service, initiate a single indication to upper layers;
 - 3> if the RRC connection establishment succeeds, the procedure ends.

2> otherwise:

- 3> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE:
 - 4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

3> otherwise:

- 4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3.
- 1> if the UE is in URA_PCH state, Cell_PCH or Cell_FACH state and the IE "Connected mode counting scope" indicates that counting is applicable for this UE state:
 - 2> draw a random number, "rand", uniformly distributed in the range: $0 \le \text{rand} < 1$.
- 2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-connected' for the concerned service:
 - 3> if a cell update has not been successfully transmitted for this service in the current modification period:
 - 4> initiate the cell update procedure with 'Cell update cause' set to "MBMS reception", in accordance with subclause 8.3.1;
 - 4> if the above condition applies for more than one service, initiate a single cell update;
 - 4> if the cell update procedure succeeds,
 - 5> the procedure ends.

2> otherwise:

- 3> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE:
 - 4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

3> otherwise:

4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends;

Upon receiving the MBMS ACCESS INFORMATION message not including an MBMS service(s) the UE has joined:

1> the procedure ends;

8.7.4.4 Termination of the MBMS counting procedure

If the UE detects that the MBMS ACCESS INFORMATION message is not provided at an access info period; OR

If the UE receives an MBMS ACCESS INFORMATION message not including an MBMS service the UE has joined, the UE shall:

1> terminate the MBMS counting procedure.

8.7.4.5 Failure of the counting response procedure

If the counting response procedure (RRC connection establishment or Cell update) fails, the UE shall:

- 1> if the failure occurs in the same modification period as the one in which the UE initiated the counting response procedure; or
- 1> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE that is applicable in the modification period in which the UE detects the failure:
 - 2> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends.

8.7.5 MBMS p-t-m radio bearer configuration

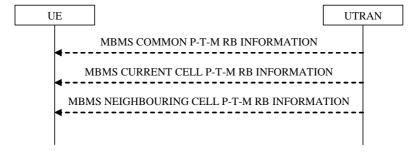


Figure 8.7.5-1: MBMS p-t-m radio bearer modification, normal

8.7.5.1 General

The MBMS p-t-m radio bearer configuration procedure is used by the UE to acquire the (modified) radio bearer configuration for one or more MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

8.7.5.2 Initiation

The UE applies the MBMS p-t-m radio bearer configuration procedure whenever it detects that one of the services it has joined is provided by means of a p-t-m radio bearerer. This may occur as part of the MCCH acquisition or the MBMS Notification procedure.

8.7.5.3 Reception of the MBMS Current Cell PTM RB information

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an MBMS service it has joined, the UE shall:

- 1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:
 - 2> the UE behaviour is undefined.
- NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;
- 1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:
 - 2> re-establish RLC;
 - 2> re-initialise PDCP.
- 1> start immediately to use the indicated configuration unless specified otherwise;
- 1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

8.7.5.4 Reception of the MBMS Neighbouring Cell PTM RB information

Upon receiving the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message for an MBMS service it has joined, the UE shall

- 1> start immediately to use the indicated neighbouring cells and configuration, or a subset of them, for L1- or L2 combining unless specified otherwise;
- 1> start or continue receiving the indicated p-t-m radio bearers from the selected neighbouring cells depending on its UE capabilities.

The UE shall apply MBMS NEIGHBOURING CELL P-T-M RB INFORMATION only in combination with an MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and MBMS CURRENT CELL P-T-M RB INFORMATION message acquired in the same modification period.

8.7.6 MBMS modification request



Figure 8.7.6-1: MBMS modification request, normal

8.7.6.1 General

The MBMS modification request procedure is used by the UE to request UTRAN to release the p-t-p radio bearers ofone or more MBMS services the UE is receiving. The procedure is also used to request to be moved to a preferred frequency applicable for one or more (prioritised) MBMS services, the UE has joined. The procedure applies to all UEs supporting MBMS, that are in state CELL_DCH.

8.7.6.2 Initiation

The UE shall initiate the MBMS modification request procedure in the following cases:

- 1> the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency;
- 1> upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer e.g. because this inhibits reception of a higher priority service.

NOTE: The above case may occur upon receiving a dedicated notification or in other cases eg. a change of transfer mode from p-t-p to p-t-m for the UE's highest priority MBMS service.

The UE shall set the contents of the MBMS MODIFICATION REQUEST message as follows:

- 1> if the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency:
 - 2> include the IE "MBMS preferred frequency request" and set it to the prioritised MBMS service identity;
- 1> if upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer:
 - 2> include the p-t-p radio bearers used for the corresponding MBMS services within the IE "MBMS RB list requested to be released".

8.7.6.3 Reception of a MBMS MODIFICATION REQUEST message by the UTRAN

Upon reception of a MBMS MODIFICATION REQUEST message, the UTRAN may take further action depending on the contents of the received message.

The procedure ends.

8.7.7 MBMS service scheduling

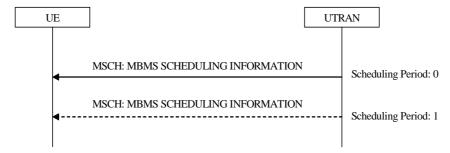


Figure 8.7.7-1: MBMS service scheduling, normal

8.7.7.1 General

The MBMS service scheduling procedure is used by the UE that is receiving one or more MBMS services that the UE has joined to acquire the MBMS scheduling information for the MBMS services. The procedure applies to all UEs that are receiving an MBMS service provided via a p-t-m radio bearer, irrespective of their state (idle and connected mode: URA_PCH, CELL_FACH and CELL_DCH).

8.7.7.2 Initiation

The UE may initiate the MBMS service scheduling procedure for any scheduling period of the concerned MBMS service while receiving an SCCPCH carrying an MBMS service.

8.7.7.3 Reception of the MBMS scheduling information

Upon receiving the MBMS SCHEDULING INFORMATION message, the UE should:

- 1> act as follows for each of the services included in these messages provided that the service is included in variable MBMS ACTIVATED SERVICES;
- 1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following.

The procedure ends.

9 Handling of unknown, unforeseen and erroneous protocol data

9.1 General

This subclause specifies procedures for the handling of unknown, unforeseen, and erroneous protocol data by the receiving entity. These procedures are called "error handling procedures", but in addition to provide recovery mechanisms for error situations they define a compatibility mechanism for future extensions of the protocol.

The error handling procedures specified in this subclause shall apply to all RRC messages. When there is a specific handling for messages received on different logical channels this is specified.

For system information received on the BCCH, the error handling procedures are applied on the BCCH message SYSTEM INFORMATION, the re-assembled system information segments as well as the system information blocks (including the master information block and the scheduling blocks), with specific error handling as specified below.

When the UE receives an RRC message, it shall set the variable PROTOCOL_ERROR_REJECT to FALSE and then perform the checks in the order as defined below.

The error cases specified in the following include the handling upon reception of spare values. This behaviour also applies in case the actual value of the IE results from mapping the originally sent IE value. Moreover, in certain error cases, as specified in the following, default values apply. In this case, the default values specified within the ASN.1, the tabular and the procedure specifications apply.

9.2 ASN.1 violation or encoding error

If the UE receives an RRC message on the DCCH for which the encoded message does not result in any valid abstract syntax value [49] (or "encoding error"), it shall perform the following. The UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

- 1> transmit an RRC STATUS message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to "ASN.1 violation or encoding error";
- 1> when RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid message had not been received.
- NOTE In this case, the UE does not perform procedure specific error handling according to clause 8.

If the UE receives an RRC message sent via a radio access technology other than UTRAN, for which the encoded message does not result in any valid abstract syntax, the UE shall:

- 1> set the variable PROTOCOL_ERROR_REJECT to TRUE;
- 1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "ASN.1 violation or encoding error";
- 1> perform procedure specific error handling according to clause 8.

If a reassembled set of system information segments received in messages on the BCCH does not result in any valid abstract syntax value, the UE shall:

- 1> ignore the reassembled set of system information segments;
- 1> treat the rest of each message containing the ignored system information segments as if those segments were not present.

If the UE receives an RRC message on the BCCH, PCCH, CCCH, MCCH, MSCH or SHCCH for which the encoded message does not result in any valid abstract syntax value, it shall ignore the message.

9.3 Unknown or unforeseen message type

If a UE receives an RRC message on the DCCH with a message type not defined for the DCCH it shall:

- 1> set the variable PROTOCOL_ERROR_REJECT to TRUE;
- 1> transmit an RRC STATUS message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to "Message type non-existent or not implemented";
- 1> when the RRC STATUS message has been submitted to lower layers for transmission:
 - 2> continue with any ongoing processes and procedures as if the invalid message had not been received.

If the UE receives an RRC message on the BCCH, PCCH, CCCH, MCCH, MSCH or SHCCH with a message type not defined for the logical channel type the message was received on, it shall ignore the message.

9.3a Unsolicited received message

If the UE receives any of the following messages:

- an RRC CONNECTION SETUP message addressed to the UE on the CCCH; or
- an RRC CONNECTION REJECT message addressed to the UE on the CCCH; or
- a UE CAPABILITY INFORMATION CONFIRM message on the DCCH; or
- a CELL UPDATE CONFIRM message addressed to the UE on the CCCH or on the DCCH; or
- a URA UPDATE CONFIRM message addressed to the UE on the CCCH or on the DCCH

and no procedure is ongoing according to clause 8 which expects the message to be received:

the UE shall:

1> ignore the received message.

9.3b Unexpected critical message extension

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

- 1> set the variable PROTOCOL_ERROR_REJECT to TRUE;
- 1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";
- 1> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:
 - 2> store the IE "Message type" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - 2> set the IE "RRC transaction identifier" to zero in that table entry.
- 1> perform procedure specific error handling according to clause 8.

If the UE receives an RRC message on the BCCH, MCCH, MSCH or PCCH, containing an undefined critical message extension, the UE shall:

1> ignore the message.

9.4 Unknown or unforeseen information element value, mandatory information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, with a mandatory IE having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the message using the default value of the IE.
- 1> if no default value of the IE is defined:
 - 2> set the variable PROTOCOL_ERROR_REJECT to TRUE;
 - 2> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Information element value not comprehended";
 - 2> perform procedure specific error handling according to clause 8.

If the UE receives a system information block on the BCCH with a mandatory IE having a value reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the system information block using the default value of the IE.
- 1> if no default value of the IE is defined:
 - 2> ignore the system information block.

If the UE receives an RRC message on the BCCH, MCCH, MSCH or PCCH with a mandatory IE having a value reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the message using the default value of the IE.
- 1> if no default value of the IE is defined:

2> ignore the message.

9.5 Conditional information element error

If the UE receives an RRC message on the DCCH, BCCH, PCCH, MCCH, MSCH or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, for which the specified conditions for absence of a conditional IE are met and that IE is present, the UE shall:

- 1> ignore the IE;
- 1> treat the rest of the message as if the IE was not present.

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, for which the specified conditions for presence of a conditional IE are met and that IE is absent, the UE shall:

- 1> set the variable PROTOCOL_ERROR_REJECT to TRUE;
- 1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Information element missing";
- 1> perform procedure specific error handling according to clause 8.

If the UE receives a system information block on the BCCH for which the specified conditions for presence of a conditional IE are met and that IE is absent, the UE shall:

1> ignore the system information block.

If the UE receives an RRC message on the BCCH, MCCH, MSCH or PCCH for which the specified conditions for presence of a conditional IE are met and that IE is absent, the UE shall:

1> ignore the message.

9.6 Unknown or unforeseen information element value, conditional information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, for which the specified conditions for presence of a conditional IE are met, that IE is present, and that IE has a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the message using the default value of the IE.
- 1> if no default value of the IE is defined:
 - 2> set the variable PROTOCOL_ERROR_REJECT to TRUE;
 - 2> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Information element value not comprehended";
 - 2> perform procedure specific error handling according to clause 8.

If the UE receives a system information block on the BCCH for which the specified conditions for presence of a conditional IE are met, that IE is present, and that IE has a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the system information block using the default value of the IE.
- 1> if no default value of the IE is defined:

2> ignore the system information block.

If the UE receives an RRC message on the BCCH, MCCH, MSCH or PCCH for which the specified conditions for presence of a conditional IE are met, that IE is present, and that IE has a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

- 1> if a default value of the IE is defined:
 - 2> treat the rest of the message using the default value of the IE.
- 1> if no default value of the IE is defined:
 - 2> ignore the message.

9.7 Unknown or unforeseen information element value, optional information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, with an optional IE having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), it shall:

- 1> ignore the value of the IE;
- 1> treat the rest of the message as if the IE was not present.

If the UE receives a system information block on the BCCH with an optional IE having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), it shall:

- 1> ignore the value of the IE;
- 1> treat the rest of the system information block as if the IE was not present.

If the UE receives an RRC message on the BCCH, MCCH or MSCH or PCCH with an optional IE having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), it shall:

- 1> ignore the value of the IE;
- 1> treat the rest of the message as if the IE was not present.

9.8 Unexpected non-critical message extension

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined non-critical message extension, the UE shall:

- 1> if the non critical extension is included in the "Variable Length Extension Container":
 - 2> ignore the content of the extension and the contents of this container after the not comprehended extension, and continue decoding the rest of the message.
- 1> otherwise:
 - 2> ignore the content of the extension and the message contents after the extension, but treat the parts of the message up to the extension normally.

If the UE receives a system information block on the BCCH containing an undefined non-critical message extension, the UE shall:

1> ignore the content of the extension and the system information block contents after the extension, but treat the parts of the system information block up to the extension normally.

If the UE receives an RRC message on the BCCH, MCCH or MSCH or PCCH, containing an undefined non-critical message extension, the UE shall:

1> ignore the content of the extension and the message contents after the extension, but treat the parts of the message up to the extension normally.

9.9 Handling of errors in nested information elements

An erroneous IE may be included in another IE, which may be included in another IE and so on. This subclause specifies the handling of errors in mandatory IEs as well as for conditional IEs for which the specified conditions for presence are met, that are nested in another IE.

In case the UE receives an IE (IE1) that includes a mandatory IE (IE1-1) having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

1> consider IE1 to have an undefined value; and

1> apply the corresponding generic error handling to IE1.

In case there are many IE nesting levels, in all of which the IE is mandatory while no default value is defined, this treatment may need to be repeated several times. The following example illustrates the general principle.

```
SEQUENCE {
ExampleMessage ::=
                                                                              OPTIONAL,
    ie1
                                          IE1
    ie2
                                          IE2
IE1 ::=
                                       SEQUENCE
    ie1-1
                                          INTEGER (1..16),
    -- iel-1 values 13..16 are spare and should not be used in this version of the protocol
    ie1-2
                                          IE1-2
                                                                             OPTIONAL,
    ie1-3
                                          IE1-3
```

If in the above example, UTRAN would include ie1 and set ie1-1 to value 13, the UE experiences an error in a mandatory IE. The guideline outlined in the previous then means that the UE shall not discard the entire message but instead consider "ie1" to have an unknown value. Since IE1 is optional, the generic error handling would be to ignore "ie1".

In case the UE receives an IE (IE1) that includes a list of another IE (IE1-1) for which one or more entries in the list have a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

1> consider the list as if these entries were not included.

NOTE: In case the above generic error handling procedures do not result in the desired behaviour, the introduction of spares may need to be reconsidered.

Message and information element functional definition and content

10.1 General

The function of each Radio Resource Control message together with message contents in the form of a list of information elements is defined in subclause 10.2.

Functional definitions of the information elements are then described in subclause 10.3.

Information elements are marked as either MP - Mandatory present, MD - Mandatory with default value, OP - Optional, CV - Conditional on value or CH - Conditional on history (see Table 10.1 with information extracted from [14]).

Table 10.1: Meaning of abbreviations used in RRC messages and information elements

Abbreviation	Meaning
MP	Mandatory present A value for that information is always needed, and no information is provided about a particular default value. If ever the transfer syntax allows absence (e.g., due to extension), then absence leads to an error diagnosis.
MD	Mandatory with default value A value for that information is always needed, and a particular default value is mentioned (in the 'Semantical information' column). This opens the possibility for the transfer syntax to use absence or a special pattern to encode the default value.
CV	Conditional on value The need for a value for that information depends on the value of some other IE or IEs, and/or on the message flow (e.g., channel, SAP). The need is specified by means of a condition, the result of which may be that the information is mandatory present, mandatory with default value, not needed or optional. If one of the results of the condition is that the information is mandatory present, the transfer syntax must allow for the presence of the information. If in this case the information is absent an error is diagnosed. If one of the results of the condition is that the information is mandatory with default value, and a particular default value is mentioned (in the 'Semantical information' column), the transfer syntax may use absence or a special pattern to encode the default value. If one of the results of the condition is that the information is not needed, the transfer syntax must allow encoding the absence. If in this case the information is present, it will be ignored. In specific cases however, an error may be diagnosed instead. If one of the results of the condition is that the information is optional, the transfer syntax must allow for the presence of the information. In this case, neither absence nor
СН	presence of the information leads to an error diagnosis. Conditional on history The need for a value for that information depends on information obtained in the past (e.g., from messages received in the past from the peer). The need is specified by means of a condition, the result of which may be that the information is mandatory present, mandatory with default value, not needed or optional. The handling of the conditions is the same as described for CV.
ОР	Optional The presence or absence is significant and modifies the behaviour of the receiver. However whether the information is present or not does not lead to an error diagnosis.

10.1.1 Protocol extensions

RRC messages may be extended in future versions of this protocol, either by adding values for choices, enumerated and size constrained types or by adding information elements. An important aspect concerns the behaviour of a UE, conforming to this revision of the standard, upon receiving a not comprehended future extension. The details of this error handling behaviour are provided in clause 9.

NOTE 1: By avoiding the need for partial decoding (skipping uncomprehended IEs to continue decoding the remainder of the message), the RRC protocol extension mechanism also avoids the overhead of length determinants for extensions. "Variable length extension containers" (i.e. non critical extension containers that have their abstract syntax defined using the ASN.1 type "BIT STRING") have been defined to support the introduction of extensions to a release after the subsequent release is frozen (and UEs based on that subsequent release may appear). For this container a length determinant is used, which facilitates partial decoding of the container as well as the decoding of the extensions included after the container.

Two kinds of protocol extensions are distinguished: non-critical and critical extensions. In general, a receiver shall process a message including not comprehended non-critical extensions as if the extensions were absent. However, a receiver shall entirely reject a message including not comprehended critical extensions (there is no partial rejection) and notify the sender, as specified in clause 9.

The general mechanism for adding critical extensions is by defining a new version of the message, which is indicated at the beginning of the message.

The UE shall always comprehend the complete transfer syntax specified for the protocol version it supports; if the UE comprehends the transfer syntax defined within protocol version A for message 1, it shall also comprehend the transfer syntax defined within protocol version A for message 2.

The following table shows for which messages only non-critical extensions may be added while for others both critical and non-critical extensions may be added.

NOTE 2: Critical extensions can only be added to certain downlink messages.

Extensions	Message
Critical and non-critical	ACTIVE SET UPDATE 10.2.1
extensions	ASSISTANCE DATA DELIVERY 10.2.4
	CELL CHANGE ORDER FROM UTRAN 10.2.5
	CELL UPDATE CONFIRM 10.2.8
	COUNTER CHECK 10.2.9
	DOWNLINK DIRECT TRANSFER 10.2.11
	HANDOVER TO UTRAN COMMAND 10.2.16a
	HANDOVER FROM UTRAN COMMAND 10.2.15
	MEASUREMENT CONTROL 10.2.17
	PHYSICAL CHANNEL RECONFIGURATION 10.2.22
	PHYSICAL SHARED CHANNEL ALLOCATION 10.2.25
	RADIO BEARER RECONFIGURATION 10.2.27
	RADIO BEARER RELEASE 10.2.30
	RADIO BEARER SETUP 10.2.33
	RRC CONNECTION REJECT 10.2.36
	RRC CONNECTION RELEASE 10.2.37
	RRC CONNECTION SETUP 10.2.40
	SECURITY MODE COMMAND 10.2.43
	SIGNALLING CONNECTION RELEASE 10.2.46
	TRANSPORT CHANNEL RECONFIGURATION 10.2.50
	UE CAPABILITY ENQUIRY 10.2.55
	UE CAPABILITY INFORMATION CONFIRM 10.2.57
	UPLINK PHYSICAL CHANNEL CONTROL 10.2.59
	URA UPDATE CONFIRM 10.2.61
	UTRAN MOBILITY INFORMATION 10.2.62
Non-critical extensions	ACTIVE SET UPDATE COMPLETE 10.2.2
only	ACTIVE SET UPDATE FAILURE 10.2.3
	CELL CHANGE ORDER FROM UTRAN FAILURE 10.2.6
	CELL UPDATE 10.2.7
	COUNTER CHECK RESPONSE 10.2.10
	HANDOVER TO UTRAN COMPLETE 10.2.16b
	INITIAL DIRECT TRANSFER 10.2.16c
	HANDOVER FROM UTRAN FAILURE 10.2.16
	MBMS ACCESS INFORMATION 10.2.16e
	MBMS COMMON P-T-M RB INFORMATION 10.2.16f
	MBMS CURRENT CELL P-T-M RB INFORMATION 10.2.16g
	MBMS GENERAL INFORMATION 10.2.16h
	MBMS MODIFICATION REQUEST 10.2.16i
	MBMS MODIFIED SERVICES INFORMATION 10.2.16j
	MBMS NEIGHBOURING CELL P-T-M RB INFORMATION 10.2.16k

Extensions	Message						
	MBMS SCHEDULING INFORMATION 10.2.16L						
	MBMS UNMODIFIED SERVICES INFORMATION 10.2.16m						
	MEASUREMENT CONTROL FAILURE 10.2.18						
	MEASUREMENT REPORT 10.2.19						
	PAGING TYPE 1 10.2.20						
	PAGING TYPE 2 10.2.21						
	PHYSICAL CHANNEL RECONFIGURATION COMPLETE 10.2.23						
	PHYSICAL CHANNEL RECONFIGURATION FAILURE 10.2.24						
	PUSCH CAPACITY REQUEST 10.2.26						
	RADIO BEARER RECONFIGURATION COMPLETE 10.2.28						
	RADIO BEARER RECONFIGURATION FAILURE 10.2.29						
	RADIO BEARER RELEASE COMPLETE 10.2.31						
	RADIO BEARER RELEASE FAILURE 10.2.32						
	RADIO BEARER SETUP COMPLETE 10.2.34						
	RADIO BEARER SETUP FAILURE 10.2.35						
	RRC CONNECTION RELEASE COMPLETE 10.2.38						
	RRC CONNECTION REQUEST 10.2.39						
	RRC CONNECTION SETUP COMPLETE 10.2.41						
	RRC STATUS 10.2.42						
	SECURITY MODE COMPLETE 10.2.44						
	SECURITY MODE FAILURE 10.2.45						
	SIGNALLING CONNECTION RELEASE INDICATION 10.2.47						
	Master Information Block 10.2.48.8.1						
	System Information Block type 1 to System Information Block type 18 10.2.48.8.4 to 10.2.48.8.21						
	SYSTEM INFORMATION CHANGE INDICATION 10.2.49						
	TRANSPORT CHANNEL RECONFIGURATION COMPLETE 10.2.51						
	TRANSPORT CHANNEL RECONFIGURATION FAILURE 10.2.52						
	TRANSPORT FORMAT COMBINATION CONTROL 10.2.53						
	TRANSPORT FORMAT COMBINATION CONTROL FAILURE 10.2.54						
	UE CAPABILITY INFORMATION 10.2.56						
	UPLINK DIRECT TRANSFER 10.2.58						
	URA UPDATE 10.2.60						
	UTRAN MOBILITY INFORMATION CONFIRM 10.2.63						
	UTRAN MOBILITY INFORMATION FAILURE 10.2.64						
No extensions	SYSTEM INFORMATION 10.2.48						
	First Segment 10.2.48.1						
	Subsequent or last Segment 10.2.48.3						
	Complete SIB 10.2.48.5						
	SIB content 10.2.48.8.1						

NOTE 3: For the SYSTEM INFORMATION message protocol extensions are only possible at the level of system information blocks.

10.1.1.1 Non-critical extensions

10.1.1.1.1 Extension of an information element with additional values or choices

In future versions of this protocol, non-critical values may be added to choices, enumerated and size constrained types.

For choices, enumerated and size constrained types it is possible to indicate how many non-critical spare values need to be reserved for future extension. In this case, the tabular format should indicate the number of spare values that are needed. The value range defined in ASN.1 for the extensible IE should include the number of spares that are needed, since a value outside the range defined for this IE will result in a general ASN.1 violation error.

For downlink messages, spare values may be defined for non-critical information elements for which the need is specified to be MD or OP (or CV case leading to MD or OP). In this case, a receiver not comprehending the received spare value shall consider the information element to have the default value or consider it to be absent respectively.

For uplink messages spare values may be defined for all information elements, including those for which the need is specified to be MP (or CV case leading to MP).

In all cases at most one spare should be defined for choices. In this case, information elements applicable to the spare choices shall be added to the end of the message.

10.1.1.1.2 Extension of a message with additional information elements

In future versions of this protocol, non-critical information elements may be added to RRC messages. These additional information elements shall be normally appended at the end of the message; the transfer syntax specified in this revision of the standard facilitates this. A receiver conformant to this revision of the standard shall accept such extension, and proceed as if it was not included.

A transmitter conformant to this version of the standard shall not include an extension reserved for introducing non critical extensions in later versions of the standard; i.e. the corresponding parameter defined in the ASN.1 shall be absent.

NOTE: If an extension, reserved for future non-critical extensions, is included (even if it is empty), this may result in transfer syntax errors when received by an implementation conforming to a later version of the standard.

Extensions to a release that are introduced after the subsequent release is frozen may however be inserted prior to the end of the message. To facilitate this, "variable length extension containers" have been introduced in most messages.

10.1.1.2 Critical extensions

10.1.1.2.1 Extension of an information element with additional values or choices

In versions of this protocol, choices, enumerated and size constrained types may be extended with critical values. For extension with critical values the general critical extension mechanism is used, i.e. for this no spare values are reserved since backward compatibility is not required.

10.1.1.2.2 Extension of a message with additional information elements

In future versions of this protocol, RRC messages may be extended with new information elements. Since messages including critical extensions are rejected by receivers not comprehending them, these messages may be modified completely, e.g. IEs may be inserted at any place and IEs may be removed or redefined.

10.2 Radio Resource Control messages

10.2.1 ACTIVE SET UPDATE

NOTE: Only for FDD.

This message is used by UTRAN to add, replace or delete radio links in the active set of the UE.

RLC-SAP: AM or UM
Logical channel: DCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message		
			Type		
UE information					
elements					
RRC transaction	MP		RRC		
identifier			transaction		
			identifier		
			10.3.3.36		
Integrity check info	CH		Integrity		
			check info		
			10.3.3.16		
Activation time	MD		Activation	Default value is "now".	
			time		
			10.3.3.1		
New U-RNTI	OP		U-RNTI		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.3.47		
New H-RNTI	OP		H-RNTI 10.3.3.14a		REL-6
New Primary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
New Secondary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
CN information elements					
CN Information info	OP		CN Information info 10.3.1.3		
Phy CH information elements					
Uplink radio resources					
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing "maximum UL TX power.	
Downlink radio resources					
Radio link addition information	OP	1 to <maxrl -1></maxrl 		Radio link addition information required for each RL to add	
>Radio link addition information	MP		Radio link addition information 10.3.6.68		
Radio link removal information	OP	1 to <maxrl ></maxrl 		Radio link removal information required for each RL to remove	
>Radio link removal information	MP		Radio link removal information 10.3.6.69		
TX Diversity Mode	MD		TX Diversity Mode 10.3.6.86	Default value is the TX diversity mode currently used in all or part of the active set.	
DPC Mode	OP		Enumerate d (Single TPC, TPC triplet in soft)	"Single TPC" is DPC_Mode=0 and "TPC triplet in soft" is DPC_mode=1 in [29].	REL-5
Serving HS-DSCH cell information	OP		Serving HS-DSCH cell information 10.3.6.74a		REL-6
E-DCH reconfiguration information	OP		E-DCH reconfigura tion information 10.3.6.69a		REL-6

10.2.2 ACTIVE SET UPDATE COMPLETE

NOTE: For FDD only.

This message is sent by UE when active set update has been completed.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	

10.2.3 ACTIVE SET UPDATE FAILURE

NOTE: Only for FDD.

This message is sent by UE if the update of the active set has failed, e.g. because the radio link is not a part of the active set.

RLC-SAP: AM

Logical channel: DCCH
Direction: UE→UTRAN

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message Type	MP		Message	
-			Туре	
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
Failure cause	MP		Failure	
			cause and	
			error	
			information	
			10.3.3.14	

10.2.4 ASSISTANCE DATA DELIVERY

This message is sent by UTRAN to convey UE positioning assistance data to the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message Type	MP		Message	
			Туре	
UE information elements				
RRC transaction identifier	MP		RRC	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Measurement Information elements				
UE positioning OTDOA assistance data for UE-based	OP		UE positioning OTDOA assistance data for UE- based 10.3.7.103a	
UE positioning GPS assistance data	OP		UE positioning GPS assistance data 10.3.7.90	

10.2.5 CELL CHANGE ORDER FROM UTRAN

This message is used to order a cell change from UTRA to another radio access technology, e.g., GSM.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements					
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	CH		Integrity check info 10.3.3.16		
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
RB Information elements					
RAB information list	OP	1 to <maxra Bsetup></maxra 		This IE should not be included in this version of the protocol.	
>RAB info	MP		RAB info 10.3.4.8		
Other information elements					
Target cell description	MP				
>CHOICE Radio Access Technology	MP			Two spare values are needed.	
>>GSM					·
>>>BSIC	MP		BSIC 10.3.8.2		
>>>Band Indicator	MP		Enumerated (DCS 1800 band used, PCS 1900	Indicates how to interpret the BCCH ARFCN	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			band used)		
>>>BCCH ARFCN	MP		Integer (01023)	[45]	
>>>NC mode	OP		Bit string(3)	Includes bits b1-b3 of the NC mode IE specified in [43]. b1 is the least significant bit. NOTE: The Bit string should be extended to 4 bits in a later version of the message.	
>>>CHOICE GERAN System Info type	OP				REL-5
>>>SI			GERAN system information 10.3.8.4f	See [44]	REL-5
>>>PSI			GERAN system information 10.3.8.4f	See [44]	REL-5
>>IS-2000					

10.2.6 CELL CHANGE ORDER FROM UTRAN FAILURE

This message is sent on the RRC connection used before the Cell change order from UTRAN was executed. The message indicates that the UE has failed to seize the new channel in the other radio access technology.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message	
			Туре	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Other information elements				
Inter-RAT change failure	MP		Inter-RAT change failure 10.3.8.5	

10.2.7 CELL UPDATE

This message is used by the UE to initiate a cell update procedure.

RLC-SAP: TM

Logical channel: CCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements			Турс		
U-RNTI	MP		U-RNTI 10.3.3.47		
RRC transaction identifier	CV- Failure		RRC transactio n identifier 10.3.3.36		
Integrity check info	CH		Integrity check info 10.3.3.16		
START list	MP	1 to <maxcn domains ></maxcn 		START [40] values for all CN domains.	
>CN domain identity	MP		CN domain identity 10.3.1.1		
>START	MP		START 10.3.3.38	START value to be used in this CN domain.	
AM_RLC error indication(RB2, RB3 or RB4)	MP		Boolean	TRUE indicates AM_RLC unrecoverable error [16] occurred on RB2, RB3 or RB4 in the UE	
AM_RLC error indication(RB>4)	MP		Boolean	TRUE indicates AM_RLC unrecoverable error [16] occurred on RB>4 in the UE	
Cell update cause	MP		Cell update cause 10.3.3.3		
Traffic volume indicator	OP		Enumerat ed (true)	This IE shall be set to TRUE when the criteria for event based traffic volume measurement reporting is fulfilled. Absence of this element means not fulfilled.	REL-6
Failure cause	OP		Failure cause and error informatio n 10.3.3.14		
RB timer indicator	MP		RB timer indicator 10.3.3.28		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Establishment cause	OP		Establish ment cause 10.3.3.11		REL-5
CS Call Type	OP		Enumerat ed (CS speech, CS video, other)	One spare value is needed	REL-7
Reconfiguration Status Indicator	OP		Enumerat ed (true)	TRUE indicates a reconfiguration procedure is ongoing within the UE or a response message has been submitted to RLC and the UE is waiting for the layer 2 ACK.	REL-6
Measurement information elements					
Measured results on RACH	OP		Measured results on RACH 10.3.7.45		

Condition	Explanation			
Failure	This IE is mandatory present if the IE "Failure cause"			
	is present and not needed otherwise.			

10.2.8 CELL UPDATE CONFIRM

This message confirms the cell update procedure and can be used to reallocate new RNTI information for the UE valid in the new cell.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE Information Elements			71		
U-RNTI	CV-CCCH		U-RNTI 10.3.3.47		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	CH		Integrity check info 10.3.3.16		
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation or a cell reselection from GERAN <i>Iu mode</i>	
Ciphering mode info	OP		Ciphering mode info	The UTRAN should not include	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.3.5	this IE unless it is performing either an SRNS relocation or a cell reselection from GERAN <i>Iu mode</i> ,	
				and a change in ciphering algorithm.	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP		C-RNTI 10.3.3.8		
New DSCH-RNTI	OP		DSCH-RNTI 10.3.3.9a	Should not be set in FDD. If received, the UE should ignore it	
New H-RNTI	OP		H-RNTI 10.3.3.14a	J	REL-5
New Primary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
New Secondary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
RRC State Indicator	MP		RRC State Indicator 10.3.3.35a		
UTRAN DRX cycle length coefficient	OP		UTRAN DRX cycle length coefficient 10.3.3.49		
RLC re-establish indicator (RB2, RB3 and RB4)	MP		RLC re- establish indicator 10.3.3.35	Should not be set to TRUE if IE "Downlink counter synchronisation info" is included in message.	
RLC re-establish indicator (RB5 and upwards)	MP		RLC re- establish indicator 10.3.3.35	Should not be set to TRUE if IE "Downlink counter synchronisation info" is included in message.	
CN Information Elements				· ·	
CN Information info	OP		CN Information info 10.3.1.3		
UTRAN Information Elements					
URA identity	OP		URA identity 10.3.2.6		
RB information elements	0.0				
RB information to release list	OP	1 to <maxrb></maxrb>			
>RB information to release	MP		RB information to release 10.3.4.19		
RB information to reconfigure list	OP	1 to <maxrb></maxrb>			
>RB information to reconfigure	MP		RB information to reconfigure 10.3.4.18		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RB information to be affected list	OP	1 to <maxrb></maxrb>	1010101100	u00011p11011	
>RB information to be affected	MP	< max No.	RB information to be affected 10.3.4.17		
Downlink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5
>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5
PDCP ROHC target mode	OP		PDCP ROHC target mode 10.3.4.2a		REL-5
TrCH Information Elements					
Uplink transport channels					
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24		
Deleted TrCH information list	OP	1 to <maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5		
Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2		
Downlink transport channels					
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6		
Deleted TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Deleted DL TrCH information	MP		Deleted DL TrCH information		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.5.4	•	
Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1		
PhyCH information elements					
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources					
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88.		
E-DCH Info	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources					
Downlink HS-PDSCH Information	OP		Downlink HS_PDSCH Information 10.3.6.23a		REL-5
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24		
Downlink information per radio link list	OP	1 to <maxrl></maxrl>		Send downlink information for each radio link to be set-up	
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	OP		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6

Condition	Explanation		
CCCH	This IE is mandatory present when CCCH is used and		
	ciphering is not required and not needed otherwise.		

10.2.9 COUNTER CHECK

This message is used by the UTRAN to indicate the current COUNT-C MSB values associated to each radio bearer utilising UM or AM RLC mode and to request the UE to compare these to its COUNT-C MSB values and to report the comparison results to UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group	Presence	Multi	IE type and	Semantics description
name			reference	
Message Type	MP			
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
RB information elements				
RB COUNT-C MSB information	MP	1 to <		For each RB (excluding
		maxRBallR		signalling radio bearers) using
		ABs >		UM or AM RLC.
>RB COUNT-C MSB information	MP		RB COUNT-	
			C MSB	
			information	
			10.3.4.14	

10.2.10 COUNTER CHECK RESPONSE

This message is used by the UE to respond to a COUNTER CHECK message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group	Presence	Multi	IE type and	Semantics description
name			reference	
Message Type	MP			
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
RB information elements				
RB COUNT-C information	OP	1 to <		
		maxRBallR		
		ABs >		
>RB COUNT-C information	MP		RB COUNT-	
			С	
			information	
			10.3.4.15	

10.2.11 DOWNLINK DIRECT TRANSFER

This message is sent by UTRAN to transfer higher layer messages.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN -> UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
CN information elements				
CN Domain Identity	MP		Core Network Domain Identity 10.3.1.1	
NAS message	MP		NAS message 10.3.1.8	

10.2.12 Void

10.2.13 Void

10.2.14 Void

10.2.15 HANDOVER FROM UTRAN COMMAND

This message is used for handover from UMTS to another system e.g. GSM. One or several messages from the other system can be included in the Inter-RAT message information element in this message. These messages are structured and coded according to that systems specification.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements					
RRC transaction identifier	MP		RRC transactio n identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Activation time	MD		Activation	Default value is "now"	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
•			time 10.3.3.1		
RB information elements					
RAB information list	OP	1 to <maxra Bsetup></maxra 		For each RAB to be handed over. In handover to GERAN <i>lu mode</i> the RAB information is included in the GERAN lu message below.	
>RAB info	MP		RAB info 10.3.4.8		
Other information elements					
CHOICE System type	MP			This IE indicates which specification to apply, to decode the transported messages	
>GSM					
>>Frequency band	MP		Enumerat ed (GSM/DC S 1800 band used), GSM/PC S 1900 band used)		
>>GSM message					
>>>Single GSM message	MP		Bit string (no explicit size constraint	Formatted and coded according to GSM specifications The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the GSM message.	
>>>GSM message List	MP	1.to. <ma xInterSy sMessa ges></ma 	Bit string (1512)	Formatted and coded according to GSM specifications. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the GSM message.	
>>CHOICE GERAN System Info type	OP				REL-6
>>>SI			GERAN system informatio n 10.3.8.4f	See [44]	REL-6
>>>PSI			GERAN system informatio n 10.3.8.4f	See [44]	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>GERAN lu			1010101100		REL-5
>>Frequency band	MP		Enumerat ed (GSM/DC S 1800 band used), GSM/PC S 1900 band used)		REL-5
>>GERAN lu message	145		D::		REL-5
>>>Single GERAN lu message	MP		Bit string (no explicit size constraint	Formatted and coded according to [53]. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the message.	REL-5
>>>GERAN lu message List	MP	1 to <maxint erSysMe ssages></maxint 	Bit string (132768)	Formatted and coded according to [53]. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the message.	REL-5
>cdma2000					
>>cdma2000MessageLis t	MP	1.to. <ma xInterSy sMessa ges></ma 			
>>>MSG_TYPE(s)	MP		Bit string (8)	Formatted and coded according to cdma2000 specifications. The MSG_TYPE bits are numbered b0 to b7. The first/leftmost/most significant bit of the bit string contains bit 7 of the MSG_TYPE.	
>>>cdma2000Messagep ayload(s)	MP		Bit string (1512)	Formatted and coded according to cdma2000 specifications. The first/leftmost/most significant bit of the bit string contains the bit 7 of the first octet of the cdma2000 message.	

10.2.16 HANDOVER FROM UTRAN FAILURE

This message is sent on the RRC connection used before the Inter-RAT Handover was executed. The message indicates that the UE has failed to seize the new channel in the other system.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message		
			Туре		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
UE information elements					
RRC transaction identifier	MP		RRC transactio n identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Other information elements					
Inter-RAT handover failure	OP		Inter-RAT handover failure 10.3.8.6		
CHOICE System type	OP			This IE indicates which specification to apply to decode the transported messages	
>GSM			5		
>>GSM message List	MP	1.to. <ma xInterSy sMessa ges></ma 	Bit string (1512)	Formatted and coded according to GSM specifications. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the GSM message.	
>GERAN lu					REL-5
>>GERAN lu message List	MP	1 to <maxint erSysMe ssages></maxint 	Bit string (132768)	Formatted and coded according to [53]. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the message.	REL-5
>cdma2000					
>>cdma2000MessageLis t	MP	1.to. <ma xInterSy sMessa ges></ma 			
>>>MSG_TYPE(s)	MP		Bit string (8)	Formatted and coded according to cdma2000 specifications. The MSG_TYPE bits are numbered b0 to b7. The first/leftmost/most significant bit of the bit string contains bit 7 of the MSG_TYPE.	
>>>cdma2000Messagep ayload(s)	MP		Bit string (1512)	Formatted and coded according to cdma2000 specifications. The first/leftmost/most significant bit of the bit string contains bit 7 of the first octet of the cdma2000 message.	

10.2.16a HANDOVER TO UTRAN COMMAND

This message is sent to the UE via other system to make a handover to UTRAN.

RLC-SAP: N/A (Sent through a different RAT)

Logical channel: N/A (Sent through a different RAT)

Information	Need	Multi	Type and	Semantics	Version
New U-RNTI	MP		reference U-RNTI	description	
New O-KNTI	IVII		Short		
			10.3.3.48		
Ciphering algorithm	OP		Ciphering		
g angerman			algorithm		
			10.3.3.4		
CHOICE specification mode	MP				
>Complete specification					
RB information elements					
>>Signalling RB information	MP	1 to		For each	
to setup list		<maxsrbsetup></maxsrbsetup>		signalling radio bearer established	
>>>Signalling RB	MP		Signalling		
information to setup			RB		
•			information		
			to setup		
			10.3.4.24		
>>RAB information to setup	OP	1 to		For each RAB	
list		<maxrabsetup></maxrabsetup>		established	
>>>RAB information for	MP		RAB		
setup			information		
			for setup		
Unlink transport channels			10.3.4.10		
<pre>Uplink transport channels >>UL Transport channel</pre>	MP		UL		
information common for all	IVIP		Transport		
transport channels			channel		
transport charmers			information		
			common for		
			all transport		
			channels		
			10.3.5.24		
>>Added or Reconfigured	MP	1 to <maxtrch></maxtrch>			
TrCH information >>>Added or Reconfigured	MP		Added or		
UL TrCH information	IVIP		Reconfigure		
			d UL TrCH		
			information		
			10.3.5.2		
Downlink transport			10.0.0.2		
channels					
>>DL Transport channel	MP		DL		
information common for all			Transport		
transport channels			channel		
			information		
			common for		
			all transport		
			channels		
	<u> </u>		10.3.5.6		
>>Added or Reconfigured TrCH information	MP	1 to <maxtrch></maxtrch>			
>>>Added or Reconfigured	MP		Added or		
DL TrCH information			Reconfigure		
			d DL TrCH		
			information		
Unlink radio receives			10.3.5.1		
Uplink radio resources >>Uplink DPCH info	MP		Uplink		
	IVIE		DPCH info		
	l	1	טוווווט וט	L	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Liement Group name			10.3.6.88	acsomption	
E-DCH Info	OP		E-DCH Info		REL-6
	0.		10.3.6.97		0
Downlink radio resources					
Downlink HS-PDSCH	OP		Downlink		REL-6
Information			HS-PDSCH		
			Information		
			10.3.6.23a		
>>Downlink information	MP		Downlink		
common for all radio links			information common for		
			all radio links		
			10.3.6.24		
>>Downlink information per	MP	1 to <maxrl></maxrl>	10.0.0.21		
radio link					
>>>Downlink information for	MP		Downlink		
each radio link			information		
			for each		
			radio link		
Description			10.3.6.27		
>Preconfiguration >>CHOICE Preconfiguration	MP				
mode	1011				
>>>Predefined configuration	MP		Predefined		
G			configuration		
			identity		
			10.3.4.5		
>>>Default configuration					
>>>>Default configuration	MP		Enumerated	Indicates	
mode			(FDD, TDD)	whether the	
				FDD or TDD version of the	
				default	
				configuration	
				shall be used	
>>>>Default configuration	MP		Default		
identity			configuration		
			identity		
			10.3.4.0		
>>RAB info	OP		RAB info	One RAB is	
			Post 10.3.4.9	established	
>>Uplink DPCH info	MP		Uplink		
22 Opinik Di Ori inio	1411		DPCH info		
			Post		
			10.3.6.89		
Downlink radio resources					
>>Downlink information	MP		Downlink		
common for all radio links			information		
			common for		
			all radio links		
			Post		
>>Downlink information per	MP	1 to <maxrl></maxrl>	10.3.6.25	Send	
radio link	1411	. to smaxive		downlink	
				information	
				for each radio	
				link to be set-	
				up.	
				In TDD	
				MaxRL is 1.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>Downlink information for each radio link	MP		Downlink information for each radio link Post 10.3.6.28		
>>CHOICE mode	MP		10.0.0.20		
>>>FDD				(no data)	
>>>TDD					
>>>Primary CCPCH Tx Power	MP		Primary CCPCH Tx Power 10.3.6.59		
Frequency info	MP		Frequency info 10.3.6.36		
Maximum allowed UL TX power	MP		Maximum allowed UL TX power 10.3.6.39		

10.2.16b HANDOVER TO UTRAN COMPLETE

This message is sent by the UE when a handover to UTRAN has been completed.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information elements				
START list	СН	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM.

10.2.16c INITIAL DIRECT TRANSFER

This message is used to initiate a signalling connection based on indication from the upper layers, and to transfer a NAS message.

RLC-SAP: AM

Logical channel: DCCH
Direction: UE -> UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements			Турс		
Integrity check info	СН		Integrity check info 10.3.3.16		
PLMN identity	OP		PLMN identity 10.3.1.11	This IE indicates the PLMN to which the UE requests the signalling connection to be established.	REL-6
CN information elements					
CN domain identity	MP		CN domain identity 10.3.1.1		
Intra Domain NAS Node Selector	MP		Intra Domain NAS Node Selector 10.3.1.6		
NAS message	MP		NAS message 10.3.1.8		
START	OP		START 10.3.3.38	START value to be used in the CN domain as indicated in the IE "CN domain identity". This IE shall always be present in this version of the protocol.	
Establishment cause	OP		Establish ment cause 10.3.3.11		Rel-5
Measurement information elements					
Measured results on RACH	ОР		Measured results on RACH 10.3.7.45		
MBMS joined information	OP				REL-6
>P-TMŚI	ОР		P-TMSI (GSM- MAP) 10.3.1.13		REL-6

10.2.16d INTER RAT HANDOVER INFO

This message is sent by the UE via another radio access technology to provide information to the target RNC when preparing for a handover to UTRAN.

RLC-SAP: N/A (Sent through a different RAT)

Logical channel: N/A (Sent through a different RAT)

Direction: UE \rightarrow UTRAN

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
Radio Bearer IEs					
Predefined configuration status information	ОР		Predefined configuration status information 10.3.4.5a		
Predefined configuration status information compressed	OP		Predefined configuration status information compressed 10.3.4.5b		REL-5
UE Information elements					
UE security information	OP		UE security information 10.3.3.42b		
UE security information2	OP		UE security information2 10.3.3.42c		REL-6
UE Specific Behaviour Information 1 interRAT	OP		UE Specific Behaviour Information 1 interRAT 10.3.3.52	This IE shall not be included in this version of the protocol	
UE capability container	OP				
>UE radio access capability	MP		UE radio access capability 10.3.3.42		
>UE radio access capability extension	MP		UE radio access capability extension 10.3.3.42a	Although this IE is not always required, the need has been set to MP to align with the ASN.1	
UE radio access capability compressed	OP		UE radio access capability compressed 10.3.3.420		REL-5
UE radio access capability comp 2	CV-Fdd		UE radio access capability comp 2 10.3.3.420a		REL6

Condition	Explanation
Fdd	This IE is mandatory present for FDD, otherwise it is
	not needed.

10.2.16e MBMS Access Information

This message is transmitted periodically by UTRAN to inform UEs that have joined a particular MBMS service about the need to establish an RRC connection or to perform a cell update. While the message contents may change within a modification period, all occurances of the information within a modification period concern the same MBMS service(s).

RLC-SAP: UM

Logical channel: MCCH

Direction: UTRAN \rightarrow UE

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
Message type	MP		Message Type		REL-6
Service list	MP	1 to <maxmb MSserv Count></maxmb 	Туре		REL-6
>MBMS short transmission ID	MP		MBMS Short transmissi on identity 10.3.9a.1	Reference/ index to a transmission listed in the MBMS MODIFIED SERVICES INFORMATION or MBMS UNMODIFIED SERVICES INFORMATION	REL-6
>Access probability factor - Idle	MP		Integer (0 to 960 by step of 32, 1000)	Access probability factor for UEs in idle mode. The actual Access Probability (AP) is a function of the Access Probability Factor (APF): AP (APF) = 2 ^{-(APF/100)}	REL-6
>Access probability factor – connected	MD		Integer (0 to 960 by step of 32, 1000)	Access probability factor for UEs in connected mode. The actual Access Probability (AP) is a function of the Access Probability Factor (APF): AP (APF) = 2 ^{-(APF/100)} Default value is the value included in IE "Access probability factor - Idle"	REL-6
>Connected mode counting scope	MP			Tuotoi Tuo	REL-6
>>URA_PCH	MP		BOOLEA N	TRUE means that UEs in URA_PCH state shall participate in counting	REL-6
>>CELL_PCH	MP		BOOLEA N	TRUE means that UEs in CELL_PCH state shall participate in counting	REL-6
>> CELL_FACH	MP		BOOLEA N	TRUE means that UEs in CELL_FACH state shall participate in counting	REL-6

10.2.16f MBMS Common p-t-m rb Information

This message is transmitted periodically by UTRAN to inform UEs about the p-t-m RB configuration information that may be common between different services, applicable in the current and/ or in neighbouring cells. The message contents does not change within a modification period.

RLC-SAP: UM

Logical channel: MCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
RB information list	MP	1 to <maxmb MS- Commo nRB></maxmb 			REL-6
>RB identity	MP		MBMS Common RB identity 10.3.9a.3		REL-6
>PDCP info	MP		PDCP info 10.3.4.2		REL-6
>RLC info	MP		RLC info MBMS 10.3.4.23 a		REL-6
TrCh information for each TrCh	MP	1 to <maxmb MS- Commo nTrCh></maxmb 			REL-6
>Transport channel identity	MP		MBMS Common TrCh identity 10.3.9a.4		REL-6
>TFS	MP		Transport format set 10.3.5.23		REL-6
TrCh information for each CCTrCh	OP	1 to <maxmb MS- Commo nCCTrC h></maxmb 		The list needs not include the CCTrCh for which the default TFCS for MBMS applies, as specified in subclause 14.10.1.	REL-6
>CCTrCH identity	MP		MBMS Common CCTrCh identity 10.3.9a.1		REL-6
>TFCS	MP		Transport format combinati on set 10.3.5.20		REL-6
PhyCh information	MP	1 to <maxmb MS- Commo nPhyCh</maxmb 			REL-6
>PhyCh identity	MP	>	MBMS Common PhyCh identity 10.3.9a.2		REL-6
>Secondary CCPCH info MBMS	MP		Secondar y CCPCH info MBMS 10.3.6.71 a		REL-6

10.2.16g MBMS Current Cell p-t-m rb Information

This message is transmitted periodically by UTRAN to inform UEs about the PTM RB configuration used to in a cell, in case one or more MBMS service is provided using p-t-m radio bearers. The message contents does not change within a modification period.

RLC-SAP: UM

Logical channel: MCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type	Current cell PTM RB info	REL-6
S-CCPCH list	OP	1 to <maxsc CPCH></maxsc 		Absent in case MTCH are only mapped to the S-CCPCH(s) included in SIB type 5 or 5bis	REL-6
>S-CCPCH identity	OP		MBMS Current cell S- CCPCH identity 10.3.9a.5	When L1- combining applies, this identity is used to refer to this S-CCPCH within the NEIGHBOURING CELL P-T-M RB INFORMATION message	REL-6
>Secondary CCPCH info	MP		MBMS Common PhyCh identity 10.3.9a.2	Refers to a configuration in the common RB info	REL-6
>MBMS Soft Combining Timing Offset	CV-Soft- FDD		MBMS Soft Combinin g Timing Offset 10.3.9a.1 0a	Timing offset applied in the CFN calculation in sub-clause 8.5.15.5. The default value is 0 ms.	REL-6
>TrCh information common for all TrCh	MD		MBMS Common CCTrCh identity 10.3.9a.1	Refers to a (TFCS) configuration in the common RB info The default value of the TFCS is specified in subclause 14.10.1	REL-6
>TrCH information list	MP	1 to <maxfa CHPCH ></maxfa 		List of FACH transport channels carrying one or more MTCH and optionally one MSCH	REL-6
>>TrCh information	MP		MBMS Common TrCh identity 10.3.9a.4	Refers to a (TFS) configuration in the common RB info	REL-6
>>RB information list	OP	1 to <maxrb perTrCh</maxrb 		The IE is absent if temporarily no RBs are mapped to this TrCh or if the TrCH only carries MSCH	REL-6
>>>RB information	MP		MBMS p- t-m RB informatio n 10.3.9a.7		REL-6
>>MSCH configuration information	OP		MSCH configurat ion informatio n 10.3.9a.1		REL-6
S-CCPCH in SIB type 5	OP	1 to <maxsc CPCH></maxsc 		Every S-CCPCH"s included in SIB type 5 or 5bis may carry MTCH	REL-6
>S-CCPCH identity			Integer (1maxS CCPCH)	Index of the S-CCPCH within the list included in SIB type 5 or 5bis	REL-6
>TrCH information list	MP	1 to <maxfa CHPCH ></maxfa 		List of FACH transport channels carrying one or more MTCH and optionally one MSCH	REL-6
>>TrCh identity	MP		Integer (1maxF	Index of the FACH within the list of TrChs defined for that S-	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			ACHPCH)	CCPCH as included in SIB type 5 or 5bis	
>>RB information list	OP	1 to <maxrb perTrCh ></maxrb 		The IE is absent if this TrCh only carries MSCH	REL-6
>>>RB information	MP		MBMS p- t-m RB informatio n 10.3.9a.7		REL-6
>>MSCH configuration information	OP		MSCH configurat ion informatio n 10.3.9a.1 6	Included if the TrCH carries MSCH	REL-6

Condition	Explanation		
Soft-FDD	This IE is used only for FDD. It is mandatory default		
	for FDD if the IE "L1 combining" is included in MBMS		
	NEIGHBOURING CELL P-T-M RB INFORMATION.		
	Otherwise it is not needed.		

10.2.16h MBMS General Information

This message is transmitted periodically by UTRAN to inform UEs about the general MBMS (configuration) information. The message contents does not change within a modification period.

RLC-SAP: UM

Logical channel: MCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
MBMS preferred frequency information	OP		MBMS preferred frequency informatio n 10.3.7.43		REL-6
MBMS timers and counters	MP		MBMS specific timers and counters 10.3.9a.1		REL-6
MICH configuration information	MP		MICH configurat ion informatio n 10.3.9a.1		REL-6
Cell group identity	MP		Bit string (12)	Identifies the group of cells for which the same common RLC and PDCP entity is used as the current cell	REL-6
Default MSCH configuration information	OP		MSCH configurat ion informatio n 10.3.9a.1	The default MSCH configuration	REL-6

10.2.16i MBMS Modification request

The UE transmits this message to request UTRAN to take certain actions to improve the UE's ability to receive its (prioritised) activated MBMS services and/ or sessions.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
MBMS preferred frequency request	OP		MBMS service identity 10.3.9a.8	The MBMS preferred frequency the UE would like to be moved to. The MBMS preferred frequency is identified by the identity of the MBMS service the UE would like to receive.	REL-6
MBMS RB list requested to be released	OP	1 to <maxrb ></maxrb 		RBs of lower priority MBMS services inhibiting reception of a higher priority service	REL-6
>RB information to release	MP		RB informatio n to release 10.3.4.19		REL-6

10.2.16j MBMS Modified services Information

This information is transmitted periodically by UTRAN to inform UEs about a change applicable for one or more MBMS services available in the current cell and possibly in neighbouring cells.

RLC-SAP: AM (DCCH only) or UM

Logical channel: MCCH, DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
Modified service list	ОР	1 <maxmb MSserv Modif></maxmb 			REL-6
>MBMS Transmission identity	MP		MBMS Transmis sion identity 10.3.9a.1		REL-6
>MBMS required UE action	MP		Enumerat ed (None, Acquire counting info, Acquire counting info – PTM RBs unmodifie d, Acquire PTM RB info, RequestP TP RB, Release PTM RB)	Indicates required UE action upon receiving the message. When sent on the DCCH, only the following values apply: None (FLC), Acquire PTM RB info, request PTP RB).	REL-6
>MBMS preferred frequency	OP		,	Indicates the frequency that UEs shall consider as the preferred frequency layer for cell reselection during a session for an MBMS service the UE has joined, as specified in [25.304].	REL-6
>>PFL index	CV- MCCH		Integer (1 <maxmb MS- Freq>)</maxmb 	Index pointing to an entry in the list included in MBMS GENERAL INFORMATION.	REL-6
>>PFL info	CV- DCCH		Frequenc y info 10.3.6.36		REL-6
> MBMS dispersion indicator	CV- PTM release		Enumerat ed (True)	Indicates whether or not the UE should attempt a cell selection on another frequency other than the current one.	REL-6
>Continue MCCH reading	MP		BOOLEA N	MCCH in- band notification. Indicates whether or not the UE should continue reading MCCH in the next modification period. Not applicable when sent on the DCCH	REL-6
MBMS re- acquire MCCH	CV- MCCHO P		Enumerat ed (True)		REL-6
MBMS dynamic persistence level	OP		Dynamic persistenc e level 10.3.6.35		REL-6
End of modified MCCH information	OP		Integer (116)	If present: the UE may assume that, in each repetition period, all the MCCH information preceding the MBMS UNMODIFIED SERVICES INFORMATION message is transmitted within the	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
				indicated number of TTIs.	
MBMS number of neighbour cells	MP		Integer (032)	Indicates the number of MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages that are contained within the MCCH transmission.	REL-6
MBMS all unmodified p-t- m services	CV- MCCHO P		Enumerat ed (True)	True means that the UE should re-acquire the PtM information for all services listed in the message MBMS UNMODIFIED SERVICES INFORMATION with the IE 'MBMS required UE action' set to 'Acquire PTM RB info'	REL-6
MBMS p-t-m activation time	CV- MCCHO P		MBMS p- t-m activation time 10.3.9a.7 o		REL-6

Condition	Explanation
MCCH	This IE is mandatory present if the message is sent
	via MCCH and not needed otherwise.
DCCH	This IE is mandatory present if the message is sent
	via DCCH and not needed otherwise.
PTM release	This IE is optionally present if the IE MBMS required
	UE action is set to "Release PTM RB" and not needed
	otherwise
MCCHOP	This IE is optionally present if the message is sent via
	MCCH and not needed otherwise.

10.2.16k MBMS Neighbouring Cell p-t-m rb Information

This message is transmitted periodically by UTRAN to inform UEs about the p-t-m RB configuration used to in neighbouring cells, indicating the UE may perform selection and/ or soft combining. The message content does not change within a modification period.

RLC-SAP: UM

Logical channel: MCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
Neighbouring cell identity	MP		Integer (0 <max CellMeas –1>)</max 	The intra-frequency cell id of the cell obtained from the IE 'Intra-frequency Cell Info list' in SIB 11.	REL-6
Neighbouring cell"s S- CCPCH list	MP	1 to <maxsc CPCH></maxsc 	,		REL-6
>Secondary CCPCH info	MP		MBMS Common PhyCh identity 10.3.9a.2	S-CCPCH configuration used in neighbouring cell. Refers to a configuration in the common RB info of the current cell	REL-6
>Secondary CCPCH Power Offset Difference	MD		Integer (-6, -3, 3, 6)	Difference (Pn – Of) between the S-CCPCH power offset (Pn) of the neighboring cell S-CCPCH and the S-CCPCH power offset (Of) of the serving cell that is going to be combined to this neighbour cell S-CCPCH, in dB. Default value is 0. Note 3 and 4.	REL-6
>L1 combining	OP			L2- combining applies if the IE is absent	REL-6
>>CHOICE mode >>>FDD	MP				REL-6
>>>MBMS Soft Combining Timing Offset	MP		MBMS Soft Combinin g Timing Offset 10.3.9a.1	Timing offset applied in the CFN calculation in subclause 8.5.15.5	REL-6
>>>>MBMS transmission time difference	MP		Integer (03)	Indicates the time difference between the TTIs on the current and the neighbouring cell"s SCCPCH that can be L1- combined	REL-6
>>>>MBMS L1 combining schedule	OP		MBMS L1 combining schedule 10.3.9a.7	If included partial layer 1 combining applies, in which case this IE indicates when L1-combining applies. If the IE is absent, L1 combining applies continuously	REL-6
>>>TDD >CHOICE L23	MP			(no data)	REL-6 REL-6
configuration	1,,,,				
>>SameAs Current cell				Apart from the physical channel configuration and the MSCH configuration information, the same configuration as for the indicated S-CCPCH used in the current cell applies. The MSCH is mapped on the same transport channel as in the current cell.	REL-6
>>>Current cell's S- CCPCH	MP		MBMS Current cell S- CCPCH identity 10.3.9a.5	Reference to the S-CCPCH in the current cell which uses exactly the same configuration (excluding MSCH configuration).	REL-6
>>>MSCH configuration information	OP		MSCH configurat ion informatio		REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			n 10.3.9a.1 6		
>>Different					REL-6
>>>TrCh information for common for all TrCh	MD		MBMS Common CCTrCh identity 10.3.9a.1	Refers to a (TFCS) configuration in the common RB info The default value of the TFCS is specified in subclause 14.10.1	REL-6
>>>TrCH information list	MP	1 to <maxfa CHPCH ></maxfa 		List of FACH transport channels carrying one or more MTCH and optionally one MSCH	REL-6
>>>>TrCh information	MP		MBMS Common TrCh identity 10.3.9a.4	Refers to a (TFS) configuration in the common RB info	REL-6
>>>TrCh combining status	MP		BOOLEA N	Value TRUE means that TrCh combining is used for this transport channel (TDD only). Note 2. The IE shall be ignored in FDD mode.	REL-6
>>>RB information list	OP	1 to <maxrb perTrCh ></maxrb 		The IE is only present for the radio bearers for which selection (FDD) or transport channel (TDD) combining applies.	REL-6
>>>>RB information	MP		MBMS p- t-m RB informatio n 10.3.9a.7 a		REL-6
>>>MSCH configuration information	OP		MSCH configurat ion informatio n 10.3.9a.1	Included if the TrCH carries MSCH	REL-6

- NOTE 1: The signalling supports the option that UTRAN maps one service to L1 combining slots for some neighbours and to the L2 combining slots for other neighbours ie. the use of different combining schemes for different neighbours
- NOTE 2: Transport combining can only be indicated when the complete L2 configuration is provided for the neighbouring cell (i.e. using L2 configuration choice 'different'). Fortunately, a scenario in which the neighbouring cell configuration is different from the current cell is regarded as the typical scenario for using transport combining.
- NOTE 3: For FDD, an S-CCPCH power offset is defined as the offset between the transmitted power of the data part of one S-CCPCH and the transmitted power of the P-CPICH of a given cell (Ps-ccpch Pp-cpich). For TDD, an S-CCPCH power offset is defined as the offset between one S-CCPCH and the P-CCPCH of a given cell (Ps-ccpch Pp-ccpch).
- NOTE 4: The Secondary CCPCH Power Offset Difference IE gives the UE an indication of the S-CCPCH power on the neighbouring cells that may be used to complete the neighbouring cell ranking based on P-CPICH power for FDD or P-CCPCH for TDD.

10.2.16L MBMS Scheduling Information

This message is transmitted periodically by UTRAN to inform UEs when the MBMS services, provided on the same S-CCPCH as the message is sent, are scheduled to be transmitted. The UE may use the scheduling information to discontinue receiving the concerned S-CCPCH. The message is transmitted in accordance with the MSCH configuration applicable for the corresponding S-CCPCH.

RLC-SAP: UM

Logical channel: MSCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
Service scheduling info list	MP	1 to < maxMB MSserv Sched>			REL-6
>MBMS Transmission identity	MP		MBMS Transmis sion identity 10.3.9a.1 2		REL-6
>MBMS Service transmissions info list	OP	1 to < maxMB MSTran smis>		One or more sets of scheduling information comprising of the beginning and duration of an MBMS service transmission for one scheduling period	REL-6
>>Start	MP		Integer (01020) by step of 4	Indicates the start of the transmission relative to the TTI in which the MBMS SCHEDULING INFORMATION message was received. In number of radio frames.	REL-6
>>Duration	MP		Integer (41024)	In number of radio frames	REL-6
>Next scheduling period	MP		Integer (031)	Number of scheduling periods (see 10.3.9a.16), after the current scheduling period, in which no data will be transmitted for the concerned service. If the Next scheduling period is set to 0, data may be transmitted for the concerned service in the scheduling period immediately following the current scheduling period	REL-6

10.2.16m MBMS Unmodified services Information

This message is transmitted periodically by UTRAN to inform UEs about the MBMS services, available in the current cell and possibly in neighbouring cells, that have not changed if the IE "MBMS all unmodified p-t-m services" is not included in the MBMS MODIFIED SERVICES INFORMATION message in this modification period. The message is repeated every repetition period while its contents does not change within a modification period.

RLC-SAP: UM

Logical channel: MCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message type	MP		Message Type		REL-6
Unmodified services list	OP	1 to <maxmb MSserv Unmodif ></maxmb 		If the IE 'MBMS all unmodified p-t-m services' is included in the MBMS MODIFIED SERVICES INFORMATION message in this modification period, the services with the IE 'MBMS required UE action' set to 'Acquire PTM RB info' in the message MBMS UNMODIFIED SERVICES INFORMATION should be considered as modified.	REL-6
>MBMS Transmission identity	MP		MBMS Transmis sion identity 10.3.9a.1 2		REL-6
>MBMS required UE action	MP		Enumerat ed (None, Acquire PTM RB info, Request PTP RB)	Indication of the UE action required to receive the service.	REL-6
>MBMS preferred frequency	OP		Integer (1 <maxmb MS- Freq>)</maxmb 	Information about the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has joined, as specified in [25.304]. Index pointing to an entry in the list included in MBMS GENERAL INFORMATION	REL-6

10.2.17 MEASUREMENT CONTROL

This message is sent by UTRAN to setup, modify or release a measurement in the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Measurement Information elements				
Measurement Identity	MP		Measuremen t Identity 10.3.7.48	
Measurement Command	MP		Measuremen t Command	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			10.3.7.46	
Measurement Reporting Mode	OP		Measuremen	
initiation in the person grind at	0.		t Reporting	
			Mode	
			10.3.7.49	
Additional measurements list	OP		Additional	
			measuremen	
			ts list	
			10.3.7.1	
CHOICE Measurement type	CV-			
	command			
>Intra-frequency measurement			Intra-	
			frequency	
			measuremen	
			t 10.3.7.36	
>Inter-frequency measurement			Inter-	
			frequency	
			measuremen	
			t 10.3.7.16	
>Inter-RAT measurement			Inter-RAT	
			measuremen	
			t 10.3.7.27	
>UE positioning measurement			UE	
			positioning	
			measuremen	
			t 10.3.7.100	
>Traffic Volume measurement			Traffic	
			Volume	
			measuremen	
			t 10.3.7.68	
>Quality measurement			Quality	
			measuremen	
			t 10.3.7.56	<u></u>
>UE internal measurement			UE internal	
			measuremen	
			t 10.3.7.77	
Physical channel information elements				
DPCH compressed mode status	OP		DPCH	
info			compressed	
			mode status	
			info	
			10.3.6.34	

Condition	Explanation
Command	The IE is mandatory present if the IE "Measurement command" is set to "Setup", optional if the IE
	"Measurement command" is set to "modify", otherwise the IE is not needed.

10.2.18 MEASUREMENT CONTROL FAILURE

This message is sent by UE, if it cannot initiate a measurement as instructed by UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.19 MEASUREMENT REPORT

This message is used by UE to transfer measurement results to the UTRAN.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UE→UTRAN

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
Message Type	MP		Message		
			Type		
UE information					
elements					
Integrity check info	CH		Integrity		
			check info		
			10.3.3.16		
Measurement					
Information Elements					
Measurement identity	MP		Measure		
			ment		
			identity		
			10.3.7.48		
Measured Results	OP		Measured		
			Results		
			10.3.7.44		
Measured Results on	OP		Measured		
RACH			Results		
			on RACH		
			10.3.7.45		
Additional Measured	OP	1 to			
results		<maxad< td=""><td></td><td></td><td></td></maxad<>			
		ditional			
		Meas>			
>Measured Results	MP		Measured		
			Results		
			10.3.7.44		
Event results	OP		Event		
			results		
			10.3.7.7		
Inter-RAT cell info	CV-		Integer		REL-5
indication	IRAT		(03)		

Condition	Explanation
IRAT	The IE is optionally present if at least one of the IE
	"Inter-RAT measured results list" and the IE "Inter-
	RAT measurement event results" is included in the
	message. Otherwise, the IE is not needed.

10.2.20 PAGING TYPE 1

This message is used to send information on the paging channel. One or several UEs, in idle or connected mode, can be paged in one message, which also can contain other information.

RLC-SAP: TM

Logical channel: PCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information elements				
Paging record list	OP	1 to <maxpage 1></maxpage 		
>Paging record	MP		Paging record 10.3.3.23	
Other information elements				
BCCH modification info	OP		BCCH modification info 10.3.8.1	

If the encoded message does not fill a transport block, the RRC layer shall add padding according to subclause 12.1.

10.2.21 PAGING TYPE 2

This message is used to page a UE in connected mode, when using the DCCH for CN originated paging.

RLC-SAP: AM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements			Туро	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Paging cause	MP		Paging cause 10.3.3.22	
CN Information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	
Paging Record Type Identifier	MP		Paging Record Type Identifier 10.3.1.10	

10.2.22 PHYSICAL CHANNEL RECONFIGURATION

This message is used by UTRAN to assign, replace or release a set of physical channels used by a UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message		
UE Information Elements			Туре		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	The UTRAN should not include this IE unless it is performing an SRNS relocation and a change in ciphering algorithm	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
Delay restriction flag	OP	Enumerate d (TRUE)		This IE is always set to TRUE and included if the activation time is restricted	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
				according to subclause 8.6.3.1	
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP		C-RNTI		
New DSCH-RNTI	OP		10.3.3.8 DSCH-RNTI 10.3.3.9a	Should not be set in FDD. If received the UE	
New H-RNTI	OP		H-RNTI	should ignore it	REL-5
New Primary E-RNTI	OP		10.3.3.14a E-RNTI 10.3.3.10a		REL-6
New Secondary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
RRC State Indicator	MP		RRC State Indicator 10.3.3.35a		
UTRAN DRX cycle length coefficient	OP		UTRAN DRX cycle length coefficient 10.3.3.49		
CN Information Elements CN Information info	OP		CN Information info 10.3.1.3		
UTRAN mobility information elements					
URA identity	OP		URA identity 10.3.2.6		
RB information elements					
Downlink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5
>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5
PhyCH information elements Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources					
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing value of the maximum allowed UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88		
E-DCH Info	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources					

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Downlink HS-PDSCH Information	OP		Downlink HS_PDSCH Information 10.3.6.23a	description	REL-5
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24		
Downlink information per radio link list	OP	1 to <maxrl></maxrl>		Send downlink information for each radio link	
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	ОР		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6

10.2.23 PHYSICAL CHANNEL RECONFIGURATION COMPLETE

This message is sent from the UE when a physical channel reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements					
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17		
CHOICE mode	MP				
>FDD				(no data)	
>TDD					
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>Extended Uplink Timing	OP		Extended	description	REL-7
Advance	UP				REL-7
Advance			Uplink Timing		
			Advance		
			10.3.6.95a		
>>>7.68 Mcps TDD			10.5.0.558		REL-7
>>>Extended Uplink Timing	OP		Extended		REL-7
Advance	Oi		Uplink		IXLL-7
Advance			Timing		
			Advance		
			10.3.6.95a		
>>>1.28 Mcps TDD				(no data)	REL-4
RB Information elements					
COUNT-C activation time	OP		Activation	Used for radio	
			time	bearers mapped	
			10.3.3.1	on RLC-TM.	
Uplink counter synchronisation	OP				
info					
>RB with PDCP information list	OP	1 to			
		<maxrball< td=""><td></td><td></td><td></td></maxrball<>			
		RABs>			
>>RB with PDCP information	MP		RB with		
			PDCP		
			information		
OTABE II	MD	4.	10.3.4.22	OTA DT (40)	
>START list	MP	1 to <maxcndo< td=""><td></td><td>START [40] values for all CN</td><td></td></maxcndo<>		START [40] values for all CN	
. CN domain identity	MP	mains>	CN domain	domains.	
>>CN domain identity	IMP				
			identity 10.3.1.1		
>>START	MP	+	START	START value to	
>>OTAK1	IVIF		10.3.3.38	be used in this CN	
			10.3.3.30	domain.	
			1	uoillaill.	

10.2.24 PHYSICAL CHANNEL RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to assign, replace or release a set of physical channel(s).

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message type	MP		Message	
			type	
UE information elements				
RRC transaction identifier	OP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
Failure cause	MP		Failure	
			cause and	
			error	
			information	
			10.3.3.14	

10.2.25 PHYSICAL SHARED CHANNEL ALLOCATION

NOTE: Only for TDD.

This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE.

RLC-SAP: UM on SHCCH, UM on DCCH

Logical channel: SHCCH or DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message type	
DSCH-RNTI	OP		DSCH-RNTI 10.3.3.9a	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Uplink timing advance Control	MD		Uplink Timing Advance Control 10.3.6.96	Default value is the existing value for uplink timing advance
PUSCH capacity allocation info	OP		PUSCH Capacity Allocation info 10.3.6.64	
PDSCH capacity allocation info	OP		PDSCH Capacity Allocation info 10.3.6.42	
Confirm request	MD		Enumerated(No Confirm, Confirm PDSCH, Confirm PUSCH)	Default value is No Confirm
Traffic volume report request	OP		Integer (0 255)	Indicates the number of frames between start of the allocation period and sending measurement report. The

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				value should be less than the value for Allocation Duration.
ISCP Timeslot list	OP	1 to maxTS		
>Timeslot number	MP		Timeslot number 10.3.6.84	Timeslot numbers, for which the UE shall report the timeslot ISCP in PUSCH CAPACITY REQUEST message.
Request P-CCPCH RSCP	MP		Boolean	TRUE indicates that a Primary CCPCH RSCP measurement shall be reported by the UE in PUSCH CAPACITY REQUEST message.

10.2.26 PUSCH CAPACITY REQUEST

NOTE: Only for TDD.

This message is used by the UE for request of PUSCH resources to the UTRAN.

RLC-SAP: TM

Logical channel: SHCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message	
			Type	
DSCH-RNTI	OP		DSCH-RNTI	
			10.3.3.9a	
RRC transaction identifier	CV-ProtErr		RRC	
			transaction	
			identifier	
			10.3.3.36	
Traffic Volume	OP		Traffic	
			Volume,	
			measured	
			results list	
			10.3.7.67	
Timeslot list	OP	1 to		
		maxTS		
>Timeslot number	MP		Timeslot	
			number	
T: 1.1100D	MD		10.3.6.84	
>Timeslot ISCP	MP		Timeslot	
			ISCP info	
Drimon, CCDCH DCCD	OD		10.3.7.65	
Primary CCPCH RSCP	OP		Primary CCPCH	
			RSCP info	
			10.3.7.54	
CHOICE Allocation confirmation	OP		10.5.7.54	
>PDSCH Confirmation	OI .		Integer(1hi	
21 DOCT COMMINIATION			PDSCHident	
			ities)	
>PUSCH Confirmation			Integer(1hi	
21 00011 0011111111111111111			PUSCHident	
			ities)	
Protocol error indicator	MD		Protocol	Default value is FALSE
	12		error	20.33.1 70.33 10 17 1202
			indicator	
			10.3.3.27	

Information Element/Group	Need	Multi	Type and Semantics descriptio	
name			reference	
Protocol error information	CV-ProtErr		Protocol	
			error	
			information	
			10.3.8.12	

Condition	Explanation		
ProtErr	This IE is mandatory present if the IE "Protocol error indicator" has the value "TRUE". Otherwise it is not		
	needed.		

10.2.27 RADIO BEARER RECONFIGURATION

This message is sent from UTRAN to reconfigure parameters related to a change of QoS. This procedure can also change the multiplexing of MAC, reconfigure transport channels and physical channels. This message is also used to perform a handover from GERAN *Iu mode* to UTRAN.

RLC-SAP: AM or UM or sent through GERAN Iu mode

Logical channel: DCCH or sent through GERAN Iu mode

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type	,	
UE Information elements			71		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation or a handover from GERAN <i>Iu mode</i>	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	The UTRAN should not include this IE unless it is performing either an SRNS relocation or a handover from GERAN <i>Iu mode</i> and a change in ciphering algorithm	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
Delay restriction flag	OP	Enumerate d (TRUE)		This IE is always set to TRUE and included if the activation time is restricted according to subclause 8,6,3,1	REL-6
New U-RNTI	OP		U-RNTI		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
New C-RNTI	OP		10.3.3.47 C-RNTI		
New C-RIVII	OF		10.3.3.8		
New DSCH-RNTI	OP		DSCH-RNTI	Should not be set	
			10.3.3.9a	in FDD. If	
				received The UE	
New H-RNTI	OP		H-RNTI	should ignore it	REL-5
IVEW I I-IXIVII			10.3.3.14a		INCL-5
New Primary E-RNTI	OP		E-RNTI		REL-6
			10.3.3.10a		
New Secondary E-RNTI	OP		E-RNTI		REL-6
RRC State Indicator	MP		10.3.3.10a RRC State		
RRC State Indicator	IVII		Indicator		
			10.3.3.35a		
UTRAN DRX cycle length	OP		UTRAN DRX		
coefficient			cycle length		
			coefficient		
CN information elements			10.3.3.49		
CN Information elements CN Information info	OP		CN		
CN Information info	OF		Information		
			info 10.3.1.3		
UTRAN mobility information					
elements					
URA identity	OP		URA identity		
CHOICE analification made	MP		10.3.2.6		REL-5
CHOICE specification mode >Complete specification	IVIP				REL-5
RB information elements					
>>RAB information to	OP	1 to <			
reconfigure list		maxRABse			
		tup >			
>>>RAB information to	MP		RAB		
reconfigure			information		
			to reconfigure		
			10.3.4.11		
>>RB information to reconfigure	MP	1to		Although this IE is	
list		<maxrb></maxrb>		not always	
				required, need is	
				MP to align with	
	OP			ASN.1	REL-4
>>>RB information to	MP		RB		NEL-4
reconfigure	1411		information		
			to		
			reconfigure		
55: ((())	0.0	1.	10.3.4.18		
>>RB information to be affected list	OP	1 to <maxrb></maxrb>			
>>>RB information to be	MP	<iiiaxr\d></iiiaxr\d>	RB		
affected	'*''		information		
			to be		
			affected		
		1	10.3.4.17		
>>RB with PDCP context	OP	1 to		This IE is needed	REL-5
relocation info list		<maxrball RABs></maxrball 		for each RB having PDCP and	
		1/409>		performing PDCP and	
				context relocation	
>>>PDCP context relocation info	MP		PDCP		REL-5
			context		
			relocation		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			info	-	
			10.3.4.1a		
PDCP ROHC target mode	OP		PDCP		REL-5
			ROHC target		
			mode		
			10.3.4.2a		
TrCH Information Elements					
Uplink transport channels			l		
>>UL Transport channel	OP		UL Transport		
information common for all			channel		
transport channels			information		
			common for		
			all transport		
			channels		
B.I. I.T.O.I. (II.)	0.0		10.3.5.24		
>>Deleted TrCH information list	OP	1 to			
		<maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
>>>Deleted UL TrCH	MP	>	Deleted UL		
information	IVII		TrCH		
IIIOIIIIatioii			information		
			10.3.5.5		
>>Added or Reconfigured TrCH	OP	1 to	10.0.0.0		
information list		<maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
information not		>			
>>>Added or Reconfigured UL	MP		Added or		
TrCH information			Reconfigure		
			d UL TrČH		
			information		
			10.3.5.2		
Downlink transport channels					
>>DL Transport channel	OP		DL Transport		
information common for all			channel		
transport channels			information		
			common for		
			all transport		
			channels		
			10.3.5.6		
>>Deleted TrCH information list	OP	1 to			
		<maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
Deleted DL T CU	MD	>	Dalata (D)		
>>>Deleted DL TrCH	MP		Deleted DL		
information			TrCH		
			information		
>>Added or Reconfigured TrCH	OP	1 to	10.3.5.4		
information list	OF .	<maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
แบบแบบแบบแอเ		> < < < < < < < < < <			
>>>Added or Reconfigured DL	MP	+	Added or		
TrCH information	1411		Reconfigure		
			d DL TrCH		
			information		
			10.3.5.1		
		1	10.3.3.1		I

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Preconfiguration					REL-5
>>CHOICE Preconfiguration mode	MP			This value only applies in case the message is sent through GERAN <i>lu mode</i>	
>>>Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5		
>>>Default configuration			<u> </u>		
>>>Default configuration mode	MP		Enumerated (FDD, TDD)	Indicates whether the FDD or TDD version of the default configuration shall be used	
>>>Default configuration identity	MP		Default configuration identity 10.3.4.0		
PhyCH information elements					
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources	MD	ļ		D ():	
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88		
E-DCH Info	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources					
Downlink HS-PDSCH Information	OP		Downlink HS-PDSCH Information 10.3.6.23a		REL-5
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24		
Downlink information per radio link list	MP	1 to <maxrl></maxrl>		Although this IE is not always required, need is MP to align with ASN.1	
	OP				REL-4
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	OP		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6

10.2.28 RADIO BEARER RECONFIGURATION COMPLETE

This message is sent from the UE when a RB and signalling link reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements			Туро		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17		
CHOICE mode	MP		10.0.0.11		
>FDD				(no data)	
>TDD				,	
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95		
>>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a		REL-7
>>>7.68 Mcps TDD					REL-7
>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a		REL-7
>>>1.28 Mcps TDD				(no data)	REL-4
RB Information elements				,	
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM.	
Uplink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22		
>START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.	

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
>>CN domain identity	MP		CN domain		
			identity		
			10.3.1.1		
>>START	MP		START	START value to	
			10.3.3.38	be used in this CN	
				domain.	

10.2.29 RADIO BEARER RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to establish the physical channel(s).

RLC-SAP: AM

Logical channel: DCCH
Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded List	OP	1 to <maxrb></maxrb>		
>Radio bearer for which reconfiguration would have succeeded	MP		RB identity, 10.3.4.16	

10.2.30 RADIO BEARER RELEASE

This message is used by UTRAN to release a radio bearer. It can also include modifications to the configurations of transport channels and/or physical channels. It can simultaneously indicate release of a signalling connection when UE is connected to more than one CN domain.

RLC-SAP: AM or UM
Logical channel: DCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE Information Elements					
RRC transaction identifier	MP		RRC		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			transaction		
			identifier 10.3.3.36		
Integrity check info	СН		Integrity		
			check info		
Integrity protection mode info	OP		10.3.3.16 Integrity	The UTRAN should not	
Integrity protection mode into	OF		protection	include this IE unless it is	
			mode info	performing an SRNS	
Ointening was do info	OD		10.3.3.19	relocation. The UTRAN should not	
Ciphering mode info	OP		Ciphering mode info	include this IE unless it is	
			10.3.3.5	performing an SRNS	
				relocation and a change in	
A .: .: .:	MD		A (' ('	ciphering algorithm.	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP	+	C-RNTI		
			10.3.3.8		
New DSCH-RNTI	OP		DSCH-RNTI	Should not be set in FDD. If	
			10.3.3.9a	received the UE should ignore it	
New H-RNTI	OP		H-RNTI	· ·	REL-5
			10.3.3.14a		
New Primary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
New Secondary E-RNTI	OP		E-RNTI		REL-6
•	0.		10.3.3.10a		11220
RRC State Indicator	MP		RRC State		
			Indicator 10.3.3.35a		
UTRAN DRX cycle length	OP		UTRAN DRX		
coefficient			cycle length		
			coefficient		
CN Information Elements			10.3.3.49		
CN Information info	OP		CN		
			Information info 10.3.1.3		
Signalling Connection release	OP		CN domain		
indication			identity		
			10.3.1.1		
UTRAN mobility information elements					
URA identity	OP		URA identity 10.3.2.6		
RB Information Elements					
RAB information to reconfigure list	OP	1 to < maxRABse tup >			
>RAB information to reconfigure	MP	tup >	RAB		
			information		
			to		
			reconfigure 10.3.4.11		
RB information to release list	MP	1 to <maxrb></maxrb>			
>RB information to release	MP		RB		
			information		
			to release 10.3.4.19		
RB information to reconfigure list	OP	1to	10.0.7.10		REL-6
		<maxrb></maxrb>			

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>RB information to reconfigure	MP		RB information to reconfigure		REL-6
RB information to be affected list	OP	1 to	10.3.4.18		
		<maxrb></maxrb>			
>RB information to be affected	MP		RB information to be affected 10.3.4.17		
Downlink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5
>RB with PDCP context relocation info list	OP	1 to <maxrball RABs></maxrball 			REL-5
>>PDCP context relocation info	MP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5
TrCH Information Elements					
Uplink transport channels UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24		
Deleted TrCH information list	OP	1 to <maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5		
Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2		
Downlink transport channels					
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Deleted TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4		
Added or Reconfigured TrCH information list	OP	1 to <maxtrch></maxtrch>			
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1		
PhyCH information elements					
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources					
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88		
E-DCH Info	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources					
Downlink HS-PDSCH Information	OP		Downlink HS-PDSCH Information 10.3.6.23a		REL-5
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24		
Downlink information per radio link list	OP	1 to <maxrl></maxrl>		Send downlink information for each radio link to be set-up	
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	OP		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6
MBMS RB list released to	OP	1 to		<u> </u>	REL-6
change transfer mode >RB information to release	MP	<maxrb></maxrb>	RB information to release 10.3.4.19		REL-6

10.2.31 RADIO BEARER RELEASE COMPLETE

This message is sent from the UE when radio bearer release has been completed.

RLC-SAP: AM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message		
III information along out			Туре		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17		
CHOICE mode	MP				
>FDD				(no data)	
>TDD	1				
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD	0.0				REL-4
>>>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for the new cell after handover in a synchronous TDD network	
>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a		REL-7
>>>7.68 Mcps TDD					REL-7
>>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for the new cell after handover in a synchronous TDD network	REL-7
>>>1.28 Mcps TDD				(no data)	REL-4
RB Information elements	100		1		
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM.	
Uplink counter synchronisation info	OP				

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22		
>START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.	
>>CN domain identity	MP		CN domain identity 10.3.1.1		
>>START	MP		START 10.3.3.38	START value to be used in this CN domain.	

10.2.32 RADIO BEARER RELEASE FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if radio bearer cannot be released.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded	OP	1 to <maxrb></maxrb>		
>Radio bearer for which reconfiguration would have been succeeded	MP		RB identity, 10.3.4.16	

10.2.33 RADIO BEARER SETUP

This message is sent by UTRAN to the UE to establish new radio bearer(s). It can also include modifications to the configurations of transport channels and/or physical channels.

RLC-SAP: AM or UM

Information Element/Group Multi Type and Semantics Need Version reference description name Message Type MP Message Type **UE Information Elements** RRC transaction identifier MP RRC transaction identifier 10.3.3.36 Integrity check info СН Integrity check info 10.3.3.16 Integrity protection mode info OP Integrity The UTRAN protection should not include mode info this IE unless it is performing an 10.3.3.19 SRNS relocation OP Ciphering mode info The UTRAN Ciphering mode should not include info this IE unless it is 10.3.3.5 performing an SRNS relocation and a change in ciphering algorithm MD Activation time Activation Default value is time 10.3.3.1 "now" New U-RNTI OP U-RNTI 10.3.3.47 OP New C-RNTI C-RNTI 10.3.3.8 New DSCH-RNTI OP DSCH-RNTI Should not be set 10.3.3.9a in FDD. If received the UE should ignore it New H-RNTI OP H-RNTI REL-5 10.3.3.14a OP New Primary E-RNTI E-RNTI REL-6 10.3.3.10a New Secondary E-RNTI OP E-RNTI REL-6 10.3.3.10a MP **RRC State Indicator RRC State** Indicator 10.3.3.35a UTRAN DRX cycle length OP **UTRAN DRX** coefficient cycle length coefficient 10.3.3.49 **CN Information Elements** CN Information info OP CN Information info 10.3.1.3 **UTRAN** mobility information elements **URA** identity ΟP **URA** identity 10.3.2.6 **RB Information Elements** CHOICE specification mode MP REL-6 >Complete specification REL-6 OP >>Signalling RB information to 1 to For each <maxSRBs setup list signalling radio bearer established etup> >>>Signalling RB information to Signalling

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
setup			RB information to setup 10.3.4.24		
>>RAB information to setup list	ОР	1 to <maxrabs etup></maxrabs 	10.0.4.24	For each RAB established	
>>>RAB information for setup	MP		RAB information for setup 10.3.4.10		
>>RAB information to reconfigure list	OP	1 to < maxRABse tup >			REL-6
>>>RAB information to reconfigure	MP		RAB information to reconfigure 10.3.4.11		REL-6
>>RB information to reconfigure list	OP	1to <maxrb></maxrb>			REL-6
>>>RB information to reconfigure	MP		RB information to reconfigure 10.3.4.18		REL-6
>>RB information to be affected list	OP	1 to <maxrb></maxrb>			
>>>RB information to be affected	MP		RB information to be affected 10.3.4.17		
>>Downlink counter synchronisation info	OP				
>>>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5
>>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5
>>PDCP ROHC target mode	OP		PDCP ROHC target mode 10.3.4.2a		REL-5
TrCH Information Elements					
>>UL Transport channels >>UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24		
>>Deleted TrCH information list	OP	1 to <maxtrch ></maxtrch 			

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
>>>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5	•	
>>Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>>>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2		
Downlink transport channels					
>>DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels10. 3.5.6		
>>Deleted TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>>>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4		
>>Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>>>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Preconfiguration				This value only applies in case the message is not sent through GERAN <i>lu mode</i>	REL-6
>>RAB info	MP		RAB info 10.3.4.8		REL-6
>>Default configuration mode	MP		Enumerated (FDD, TDD)	Indicates whether the FDD or TDD version of the default configuration shall be used	REL-6
>>Default configuration identity	MP		Default configuration identity 10.3.4.0		REL-6
>>RB information to change list	OP	1 to <maxrb></maxrb>			REL-6
>>>RB identity	MP		RB identity 10.3.4.16	Absence of an RB implies that the RB is to be "maintained"	REL-6
>>>CHOICE RB change	MP				REL-6
>>>Release >>>>Re-map to default RB	MD		DD identity	(no data) Default value is	REL-6 REL-6
·			RB identity 10.3.4.16	the current RB identity	
>>Power offset information short	MP		ļ	11 .:: 11 TEQ1	REL-6
>>>Reference TFC	MP		Transport Format Combination (TFC) 10.3.5.19	Identified by TFCI	REL-6
>>>CHOICE mode					REL-6
>>>FDD	145			5 111 550011	REL-6
>>>> Gain Factor β_c	MP		Integer (015)	For UL DPCCH or control part of PRACH	REL-6
>>>>TDD				(no data)	REL-6
>>>Gain Factor β_d	MP		Integer (015)	For UL DPDCH or data part of PRACH and all uplink channels in TDD	REL-6
PhyCH information elements	OD		F		
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources Maximum allowed UL TX power	MD		Maximum	Default value is	
Maximum allowed OL 1X power	IVID		allowed UL TX power 10.3.6.39	the existing maximum UL TX power	
Uplink DPCH info	ОР		Uplink DPCH info 10.3.6.88		
E-DCH Info Downlink radio resources	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources Downlink HS-PDSCH	OP		Downlink		REL-5
Information			HS-PDSCH Information 10.3.6.23a		IVEL-A
Downlink information common	OP		Downlink		

Information Element/Group	Need	Multi	Type and reference	Semantics	Version
for all radio links			information common for all radio links 10.3.6.24	description	
Downlink information per radio link list	OP	1 to <maxrl></maxrl>		Send downlink information for each radio link	
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	OP		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6

10.2.34 RADIO BEARER SETUP COMPLETE

This message is sent by the UE to confirm the establishment of the radio bearer.

RLC-SAP: AM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements					
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16		
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17		
CHOICE mode	OP				
>FDD				(no data)	
>TDD					
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
				the new cell after handover in a synchronous TDD network	
>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a		REL-7
>>>7.68 Mcps TDD			10.0.0.000		REL-7
>>>Extended Uplink Timing Advance	OP		Extended Uplink Timing Advance 10.3.6.95a	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for the new cell after handover in a synchronous TDD network	REL-7
>>>1.28 Mcps TDD				(No data)	REL-4
RB Information elements	OP		START 10.3.3.38	This information element is not needed for transparent mode RBs if prior to this procedure there exists one RB using RLC-TM.	
COUNT-C activation time	OP		Activation	Used for radio	
			time 10.3.3.1	bearers mapped on RLC-TM.	
Uplink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22		
>START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.	
>>CN domain identity	MP		CN domain identity 10.3.1.1		
>>START	MP		START 10.3.3.38	START value to be used in this CN domain.	

10.2.35 RADIO BEARER SETUP FAILURE

This message is sent by UE, if it does not support the configuration given by UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded	OP	1 to <maxrb></maxrb>		
>Radio bearer for which reconfiguration would have succeeded	MP		RB identity, 10.3.4.16	

10.2.36 RRC CONNECTION REJECT

The network transmits this message when the requested RRC connection cannot be accepted.

RLC-SAP: UM

Logical channel: CCCH

Direction: UTRAN \rightarrow UE

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message Type	MP		Message	
			Type	
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Initial UE identity	MP		Initial UE	
			identity	
			10.3.3.15	
Rejection cause	MP		Rejection	
			cause	
			10.3.3.31	
Wait time	MP		Wait time	
			10.3.3.50	
Redirection info	OP		Redirection	
			info	
			10.3.3.29	

10.2.37 RRC CONNECTION RELEASE

This message is sent by UTRAN to release the RRC connection. The message also releases the signalling connection and all radio bearers between the UE and UTRAN.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements			.,,,,,,		
CHOICE identity type	CV- CCCH				REL-5
>U-RNTI			U-RNTI 10.3.3.47		
> Group identity		1 to <maxur NTIgrou p></maxur 			REL-5
>>Group release information	MP		Group release informatio n 10.3.3.14		REL-5
RRC transaction identifier	MP		RRC transactio n identifier 10.3.3.36		
Integrity check info	CV- DCCH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied	
N308	CH- Cell_DC H		Integer(1 8)		
Release cause	MP		Release cause 10.3.3.32		
Other information elements					
Rplmn information	OP		Rplmn informatio n 10.3.8.15		
Redirection info	OP		Redirecti on info 10.3.3.2 9		REL-6

Condition	Explanation
CCCH	This IE is mandatory present when CCCH is used and
	not needed otherwise.
DCCH	This IE is mandatory present when DCCH is used and
	not needed otherwise.
Cell_DCH	This IE is mandatory present when UE is in
	CELL_DCH state and not needed otherwise.

10.2.38 RRC CONNECTION RELEASE COMPLETE

This message is sent by UE to confirm that the RRC connection has been released.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Error indication	OP		Failure cause and error information 10.3.3.14	

10.2.39 RRC CONNECTION REQUEST

RRC Connection Request is the first message transmitted by the UE when setting up an RRC Connection to the network.

RLC-SAP: TM

Logical channel: CCCH

MP		reference Message	description	
MD		Type		
MD		1,750		
MP		Boolean	True indicates the UE has all preconfigurations stored with the same value tag as broadcast in the cell in which the RRC connection establishment is initiated	REL-5
MD		Initial LIE		
		identity 10.3.3.15		
MP		nt cause 10.3.3.11		
MD		Protocol error indicator 10.3.3.27	Default value is FALSE	
OP		UE Specific Behaviour Information 1 idle 10.3.3.51	This IE shall not be included in this version of the protocol	
MP		CN domain identity 10.3.1.1		REL-6
CV-CS- domain		Enumerated (speech, video, other)	One spare value is needed	REL-6
OP		Enumerated (HS-DSCH, HS- DSCH+E- DCH)	Absence of this IE implies that neither HS-DSCH nor E-DCH are supported by the UE	REL-6
OP		Measured results on RACH 10.3.7.45		
MP		Enumerated(REL-4,	Absence of the IE implies R99. The IE also indicates the release of the RRC transfer syntax supported by the UE 12 spare values are needed	REL-4 REL-5 REL-6
	OP MP CV-CS-domain OP	MP MD OP MP CV-CS-domain OP	identity 10.3.3.15 MP Establishme nt cause 10.3.3.11 MD Protocol error indicator 10.3.3.27 OP UE Specific Behaviour Information 1 idle 10.3.3.51 CN domain identity 10.3.1.1 CV-CS- domain OP Enumerated (speech, video, other) OP Enumerated (HS-DSCH, HS- DSCH+E- DCH) OP Measured results on RACH 10.3.7.45 Enumerated(REL-4,	stored with the same value tag as broadcast in the cell in which the RRC connection establishment is initiated MP Initial UE identity 10.3.3.15 MP Establishme nt cause 10.3.3.11 MD Protocol error indicator 10.3.3.27 OP UE Specific Behaviour Information 1 idle 10.3.3.51 MP CN domain identity 10.3.1.1 CV-CS- domain (speech, video, other) OP Enumerated (speech, video, other) OP Enumerated (HS-DSCH, HS-DSCH DSCH+E-DCH) DSCH+E-DCH) MP OP Measured results on RACH 10.3.7.45 MP MR MR MR MR MR MR MR MR MR

Condition	Explanation
CS-domain	This IE is mandatory present if the IE "Domain
	indicator" has the value "CS domain". Otherwise it is
	not needed.

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1.

10.2.40 RRC CONNECTION SETUP

This message is used by the network to accept the establishment of an RRC connection for a UE, including assignment of signalling link information, transport channel information and optionally physical channel information.

RLC-SAP: UM

Logical channel: CCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message	•	
			Type		
UE Information Elements					
Initial UE identity	MP		Initial UE		
			identity		
			10.3.3.15		
RRC transaction identifier	MP		RRC		
			transaction		
			identifier		
			10.3.3.36		
Activation time	MD		Activation	Default value is	
			time 10.3.3.1	"now"	
New U-RNTI	MP		U-RNTI		
			10.3.3.47		
New C-RNTI	OP		C-RNTI		
			10.3.3.8		
New H-RNTI	OP		H-RNTI		REL-6
			10.3.3.14a		
New Primary E-RNTI	OP		E-RNTI		REL-6
			10.3.3.10a		
New Secondary E-RNTI	OP		E-RNTI		REL-6
			10.3.3.10a		
RRC State Indicator	MP		RRC State		
			Indicator		
			10.3.3.35a		
UTRAN DRX cycle length	MP		UTRAN DRX		
coefficient			cycle length		
			coefficient		
			10.3.3.49		
Capability update requirement	MD		Capability	Default value is	
			update	defined in	
			requirement	subclause	
			10.3.3.2	10.3.3.2	
CHOICE specification mode	MP				REL-5
>Complete specification					
RB Information Elements					
>>Signalling RB information to setup list	MP	3 to 4			
>>>Signalling RB information to	MP		Signalling		
setup			RB		
			information		
			to setup		
			10.3.4.24		
TrCH Information Elements					
Uplink transport channels			 		
>>UL Transport channel	OP		UL Transport		
information common for all			channel		
transport channels			information		
			common for		
			all transport		
			channels		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>Added or Reconfigured TrCH information list	MP	1 to <maxtrch ></maxtrch 	10.3.3.24	Although this IE is not required when the IE "RRC state indicator" is set to "CELL_FACH", need is MP to align with ASN.1	
	OP				REL-4
>>>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2		
Downlink transport channels					
>>DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6		
>>Added or Reconfigured TrCH information list	MP	1 to <maxtrch ></maxtrch 		Although this IE is not required when the IE "RRC state indicator" is set to "CELL_FACH", need is MP to align with ASN.1	
	OP				REL-4
>>>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1		
>Preconfiguration					REL-5
>>CHOICE Preconfiguration mode	MP				REL-5
>>>Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5		REL-5
>>>Default configuration					REL-5
>>>Default configuration mode	MP		Enumerated (FDD, TDD)	Indicates whether the FDD or TDD version of the default configuration shall be used	REL-5
>>>Default configuration identity	MP		Default configuration identity 10.3.4.0		REL-5
PhyCH information elements					
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources	MAD		NAi	Defendent	
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88		

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
E-DCH Info	OP		E-DCH Info		REL-6
			10.3.6.97		
Downlink radio resources					
Downlink HS-PDSCH	OP		Downlink		REL-6
Information			HS-PDSCH		
			information		
			10.3.6.23a		
Downlink information common	OP		Downlink		
for all radio links			information		
			common for		
			all radio links		
			10.3.6.24		
Downlink information per radio	OP	1 to		Send downlink	
link list		<maxrl></maxrl>		information for	
				each radio link to	
				be set-up	
>Downlink information for each	MP		Downlink		
radio link			information		
			for each		
			radio link		
			10.3.6.27		

10.2.41 RRC CONNECTION SETUP COMPLETE

This message confirms the establishment of the RRC Connection by the UE.

RLC-SAP: AM

Logical channel: DCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	START value to be used in this CN domain.
UE radio access capability	ОР		UE radio access capability 10.3.3.42	
UE radio access capability extension	OP		UE radio access capability extension 10.3.3.42a	
Other information elements				
UE system specific capability	OP	1 to <maxinter SysMessa ges></maxinter 		

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
>Inter-RAT UE radio access	MP		Inter-RAT	
capability			UE radio	
			access	
			capability	
			10.3.8.7	

10.2.41a RRC FAILURE INFO

This message is sent by the UE via another radio access technology to provide information about the cause for failure to perform the requested operation.

RLC-SAP: N/A (Sent through a different RAT)

Logical channel: N/A (Sent through a different RAT)

Direction: UE \rightarrow UTRAN

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
Other Information elements				
Failure cause	MP		Failure	
			cause	
			10.3.3.13	
Protocol error information	CV-ProtErr		Protocol	
			error	
			information	
			10.3.8.12	

Condition	Explanation		
ProtErr	Presence is mandatory if the IE "Failure cause" has		
	the value "Protocol error"; otherwise the element is		
	not needed in the message.		

10.2.42 RRC STATUS

This message is sent to indicate a protocol error.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Identification of received message	CV- Message identified			
>Received message type	MP		Message Type	
>RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Other information elements				

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Protocol error information	MP		Protocol	
			error	
			information	
			10.3.8.12	

Condition	Explanation
Message identified	This IE is mandatory present if the IE "Protocol error cause" in the
	IE "Protocol error information" has any other value than "ASN.1
	violation or encoding error" or "Message type non-existent or not
	implemented" and not needed otherwise.

10.2.43 SECURITY MODE COMMAND

This message is sent by UTRAN to start or reconfigure ciphering and/or integrity protection parameters.

RLC-SAP: AM

Logical channel: DCCH
Direction: UTRAN to UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements			- 7/	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
Security capability	MP		Security capability 10.3.3.37	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	Only present if ciphering shall be controlled
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	Only present if integrity protection shall be controlled
CN Information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	Indicates which ciphering and integrity protection keys are applicable
Other information elements				
UE system specific security capability	СН	1 to <maxinter SysMessa ges></maxinter 		This IE is included if the IE "Inter-RAT UE radio access capability" was included in RRC CONNECTION SETUP COMPLETE message
>Inter-RAT UE security capability	MP		Inter-RAT UE security capability 10.3.8.8a	

10.2.44 SECURITY MODE COMPLETE

This message is sent by UE to confirm the reconfiguration of ciphering and/or integrity protection.

RLC-SAP: AM

Logical channel: DCCH
Direction: UE to UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
RB Information elements				
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	

10.2.45 SECURITY MODE FAILURE

This message is sent to indicate a failure to act on a received SECURITY MODE COMMAND message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message Type	MP		Message	
			Type	
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
Failure cause	MP		Failure	
			cause and	
			error	
			information	
			10.3.3.14	

10.2.46 SIGNALLING CONNECTION RELEASE

This message is used to notify the UE that its ongoing signalling connection to a CN domain has been released.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	

10.2.47 SIGNALLING CONNECTION RELEASE INDICATION

This message is used by the UE to indicate to UTRAN the release of an existing signalling connection.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Message Type	MP		Message	
			type	
UE Information Elements				
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
CN information elements				
CN domain identity	MP		CN domain	
			identity	
			10.3.1.1	

10.2.48 SYSTEM INFORMATION

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message type	CV- channel1		Message type	
SFNprime	CV- channel2		Integer(040 94 by step of 2)	SFN=SFNprime (for first 10ms frame of 20ms TTI), SFN=SFNprime+1 (for last 10ms frame of 20ms TTI)
CHOICE Segment combination	MP			Five spares are needed
>Combination 1				(no data)
>Combination 2				

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>First Segment	MP		First Segment,	
O a mark in a time o			10.2.48.1	
>Combination 3 >>Subsequent Segment	MP		Subsequent Segment, 10.2.48.3	
>Combination 4			10.2.40.3	
>>Last segment	MP		Last segment (short),10.2. 48.5	
>Combination 5	1			
>>Last segment	MP		Last Segment (short)10.2.4 8.5	
>>First Segment	MP		First Segment (short), 10.2.48.2	
>Combination 6	MD		Loct	
>>Last Segment	MP		Last Segment (short), 10.2.48.5	
>>Complete list	MP	1 to maxSIBper Msg		Note 1
>>>Complete	MP		Complete SIB (short),10.2. 48.7	
>Combination 7				
>>Last Segment	MP		Last Segment (short), 10.2.48.5	
>>Complete list	MP	1< maxSIBper Msg>		Note 1
>>>Complete	MP		Complete SIB (short),10.2. 48.7	
>>First Segment	MP		First Segment (short), 10.2.48.2	
>Combination 8 >>Complete list	MP	1 to maxSIBper Msg		Note 1
>>>Complete	MP		Complete SIB (short),10.2. 48.7	
>Combination 9				
>>Complete list	MP	1MaxSIB perMsg		Note 1
>>>Complete	MP		Complete SIB (short),10.2. 48.7	
>>First Segment	MP		First	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			Segment (short), 10.2.48.2	
>Combination 10				
>>>Complete SIB of size 215 to 226	MP		Complete SIB,10.2.48.	
>Combination 11				
>>Last segment of size 215 to 222	MP		Last segment,10. 2.48.4	

Condition	Explanation
channel1	The IE is mandatory present if the message is sent on the FACH and not needed otherwise.
channel2	This IE is mandatory present if the channel is BCH, otherwise it is not needed.

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1. Padding is needed e.g. if the remaining space is insufficient to start a new First Segment (which requires several bits for SIB type, SEG_COUNT and SIB data).

NOTE 1: If Combination 6 - 9 contains a Master information block Master information shall be located as the first IE in the list.

10.2.48.1 First Segment

This segment type is used to transfer the first segment of a segmented system information block. The IE is used when the first segment fills the entire transport block (Combination 2).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SEG_COUNT	MP		SEG COUNT, 10.3.8.17	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	

10.2.48.2 First Segment (short)

This segment type is used to transfer the first segment of a segmented system information block. The IE is used when the first segment is concatenated after other segments in a transport block (Combination 5, 7 and 9).

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Other information elements				
SIB type	MP		SIB Type,	
			10.3.8.21	
SEG_COUNT	MP		SEG	
			COUNT,	
			10.3.8.17	
SIB data variable	MP		SIB data	
			variable,	
			10.3.8.20	

10.2.48.3 Subsequent Segment

This segment type is used to transfer a subsequent segment of a segmented system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	

10.2.48.4 Last Segment

This segment type is used to transfer the last segment of a segmented system information block. The IE is used when the last segment has a length, excluding length denominator, from 215 through 222 (Combination 11).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	In case the SIB data is less than 222 bits, padding shall be used. The same padding bits shall be used as defined in clause 12.1

10.2.48.5 Last Segment (short)

This segment type is used to transfer the last segment of a segmented system information block. The IE is used when the last segment has a length, excluding length denominator, of upto 214 bits (Combination 4, 5, 6 and 7).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements			10.0.0.00	
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data variable	MP		SIB data variable, 10.3.8.20	

10.2.48.6 Complete SIB

This segment type is used to transfer a non-segmented system information block. The IE is used when the complete SIB has a length, excluding length denominator, from 215 through 226 (Combination 10).

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SIB data fixed	MP		Bit string (226)	The first/leftmost/most significant bit of the bit string contains the first bit of the segment. In case the SIB data is less than 226 bits, padding shall be used. The same padding bits shall be used as defined in clause 12.1

10.2.48.7 Complete SIB (short)

This segment type is used to transfer a non-segmented system information block. The IE is used when the complete SIB has a length, excluding length denominator, of upto 214 bits (Combination 6, 7, 8 and 9).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SIB data variable	MP		SIB data variable, 10.3.8.20	

10.2.48.8 System Information Blocks

The IE "SIB data" within the IEs, "First Segment", "Subsequent or last Segment" and "Complete SIB" contains either complete system information block or a segment of a system information block. The actual system information blocks are defined in the following clauses.

10.2.48.8.1 Master Information Block

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Other information elements					
MIB Value tag	MP		MIB Value tag 10.3.8.9		
CN information elements					
Supported PLMN types	MP		PLMN Type 10.3.1.12		
PLMN Identity	CV-GSM		PLMN Identity 10.3.1.11		
Multiple PLMN List	OP		Multiple PLMN List 10.3.1.7a	If present, this IE specifies the PLMNs of the cell. If absent, the IE 'PLMN Identity' specifies the PLMN of the cell.	REL-6
ANSI-41 information elements					
ANSI-41 Core Network Information	CV-ANSI- 41		ANSI-41 Core Network Information 10.3.9.1		
References to other system information blocks and scheduling blocks	MP		References to other system information blocks and scheduling blocks 10.3.8.14		

Condition	Explanation
GSM	The IE is mandatory present if the IE "Supported
	PLMN Types" is set to 'GSM-MAP' or 'GSM-MAP
	AND ANSI-41', and not needed otherwise
ANSI-41	The IE is mandatory present if the IE "Supported
	PLMN Types" is set to 'ANSI-41' or 'GSM-MAP AND
	ANSI-41', and not needed otherwise

10.2.48.8.2 Scheduling Block 1

Information Element/Group name	Need	Multi	Type and reference	Semantics description
References to other system	MP		References	
information blocks			to other	
			system	
			information	
			blocks	
			10.3.8.13	

10.2.48.8.3 Scheduling Block 2

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
References to other system	MP		References	
information blocks			to other	
			system	
			information	
			blocks	
			10.3.8.13	

10.2.48.8.4 System Information Block type 1

The system information block type 1 contains NAS system information as well as UE timers and counters to be used in idle mode and in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN information elements			reference	
CN common GSM-MAP NAS system information	MP		NAS system information (GSM-MAP) 10.3.1.9	
CN domain system information list	MP	1 to <maxcndo mains></maxcndo 		Send CN information for each CN domain.
>CN domain system information	MP		CN domain system information 10.3.1.2	
UE information				
UE Timers and constants in idle mode	MD		UE Timers and constants in idle mode 10.3.3.44	The UE behaviour is unspecified if this IE is absent.
UE Timers and constants in connected mode	MD		UE Timers and constants in connected mode 10.3.3.43	Default value means that for all timers and constants - For parameters with need MD, the defaults specified in 10.3.3.43 apply and - For parameters with need OP, the parameters are absent

10.2.48.8.5 System Information Block type 2

The system information block type 2 contains the URA identity.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN mobility information				
elements				
URA identity list	MP	1		
		<maxur< td=""><td></td><td></td></maxur<>		
		A>		
>URA identity	MP		URA identity	
·			10.3.2.6	

10.2.48.8.6 System Information Block type 3

The system information block type 3 contains parameters for cell selection and re-selection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
SIB4 Indicator	MP		Boolean	TRUE indicates that SIB4 is broadcast in the cell.	
UTRAN mobility information elements					
Cell identity	MP		Cell identity 10.3.2.2		
Cell selection and re-selection info	MP		Cell selection and reselection info for SIB3/4 10.3.2.3		
Cell Access Restriction	MP		Cell Access Restriction 10.3.2.1		
Domain Specific Access Restriction Parameters For PLMN Of MIB	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the PLMN in the IE 'PLMN identity' of the Master Information Block.	REL-6
Domain Specific Access Restriction For Shared Network	OP				REL-6
>CHOICE barring representation	MP				REL-6
>>Domain Specific Access Restriction List					REL-6
>>>Domain Specific Access Restriction Parameters For Operator1	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the first PLMN in the IE 'multiplePLMNs' in the IE 'Multiple PLMN List' of the Master Information Block.	REL-6
>>>Domain Specific Access Restriction Parameters For Operator2	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the second PLMN in the IE 'multiplePLMNs' in the IE 'Multiple PLMN List' of the Master Information Block.	REL-6
>>>Domain Specific Access Restriction Parameters For Operator3	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the third PLMN in the IE 'multiplePLMNs' in the IE 'Multiple PLMN List' of the Master Information Block.	REL-6
>>>Domain Specific Access Restriction Parameters For Operator4	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the fourth PLMN in the IE 'multiplePLMNs' in the IE 'Multiple PLMN List' of the Master Information Block.	REL-6
>>>Domain Specific Access Restriction Parameters For Operator5	OP		Domain Specific Access Restriction Parameters 10.3.1.3c	This IE specifies the Domain Specific Access Restriction Parameters for UEs which has chosen the fifth PLMN in the IE 'multiplePLMNs' in the IE 'Multiple PLMN List' of the Master Information Block.	REL-6
>>Domain Specific Access Restriction Parameters For All					REL-6
>>>Domain Specific Access			Domain	This IE specifies the common	REL-6
Restriction Parameters			Specific	Domain Specific Access	

Access Restriction Parameters applied to all PLMNs in the IE Parameters 'multiple PLMNs' in the IE 10.3.1.20 'Multiple PLMNs' in the IE
10.3.1.3c 'Multiple PLMN List' of the
Master Information Block.

10.2.48.8.7 System Information Block type 4

The system information block type 4 contains parameters for cell selection and re-selection to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN mobility information elements				
Cell identity	MP		Cell identity 10.3.2.2	
Cell selection and re-selection info	MP		Cell selection and re- selection info for SIB3/4 10.3.2.3	
Cell Access Restriction	MP		Cell Access Restriction 10.3.2.1	

10.2.48.8.8 System Information Block type 5 and 5bis

The system information block type 5 contains parameters for the configuration of the common physical channels in the cell. System information block type 5bis uses the same structure as System information block type 5. System information block type 5bis is sent instead of system information block type 5 in cells that use Band IV or Band IX..

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
SIB6 Indicator	MP		Boolean	TRUE indicates that SIB6 is broadcast in the cell.	
PhyCH information elements					
PICH Power offset	MP		PICH Power offset 10.3.6.50		
CHOICE mode >FDD	MP				
>>AICH Power offset	MP		AICH Power offset 10.3.6.3	This AICH Power offset also indicates the power offset for AP-AICH and for CD/CA-ICH.	
>TDD					
>>PUSCH system information	OP		PUSCH system informatio n 10.3.6.66		
>>PUSCH system information VHCR	OP		PUSCH system informatio n VHCR 10.3.6.66 a	Only for 7.68 Mcps TDD	REL-7
>>PDSCH system	OP		PDSCH		

Information	Need	Multi	Type and reference	Semantics description	Version
Element/Group name					
information			system		
			informatio		
			n		
			10.3.6.46		
>>TDD open loop power	MP		TDD open		
control			loop		
			power		
			control		
			10.3.6.79		
Primary CCPCH info	OP		Primary	Note 1	
			CCPCH		
			info		
			10.3.6.57		
PRACH system	MP		PRACH		
information list			system		
			informatio		
			n list		
			10.3.6.55		
Secondary CCPCH	MP		Secondar	Note 2	
system information	IVII		y CCPCH	Note 2	
_			system		
			informatio		
			n		
			10.3.6.72		
CBS DRX Level 1	CV-		CBS DRX		
information	CTCH		Level 1		
			informatio		
			n 10.3.8.3		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Frequency band indicator	OP		Frequenc y band indicator 10.3.6.35 b		REL-6
Frequency band indicator 2	OP		Frequenc y band indicator 2 10.3.6.35 c		REL-6
HSDPA cell Indicator	MD		Enumerat ed (HSDPA Capable Cell)	Default is "HSDPA capability not indicated". "HSDPA Capable Cell" means that the UE may consider this cell as part of the HSDPA coverage area for display indication only. This indication shall not be used for any other purpose.	REL-6
E-DCH cell Indicator	MD		Enumerat ed (E- DCH Capable Cell)	Default is "E-DCH capability not indicated". "E-DCH Capable Cell" means that the UE may consider this cell as part of the E-DCH coverage area for display indication only. This indication shall not be used for any other purpose.	REL-6
Secondary CCPCH system information MBMS	OP		Secondar y CCPCH system informatio n MBMS 10.3.6.72 a	Included if MCCH is on an S-CCPCH used only for MBMS. Note 2	REL-6

NOTE 1: DL scrambling code of the Primary CCPCH is the same as the one for Primary CPICH (FDD only).

NOTE 2: There is only one MCCH in a cell, which may either be mapped on to an S-CCPCH also used for non-MBMS purposes or to an S-CCPCH dedicated to MBMS. In the first case the MCCH configuration is specified within the IE "Secondary CCPCH system information", in the latter case the MCCH configuration is provided within the IE "Secondary CCPCH system information MBMS".

Condition	Explanation
CTCH	The IE is mandatory present if the IE "CTCH
	indicator" is equal to TRUE for at least one FACH,
	otherwise the IE is not needed in the message

10.2.48.8.9 System Information Block type 6

The system information block type 6 contains parameters for the configuration of the common and shared physical channels to be used in connected mode.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
PhyCH information					
elements	.45		DIOLI		
PICH Power offset	MP		PICH		
			Power		
			offset		
OHOLOE	145		10.3.6.50		
CHOICE mode	MP				
>FDD					
>>AICH Power offset	MP		AICH	This AICH Power offset	
			Power	also indicates the	
			offset	power offset for AP-	
			10.3.6.3	AICH and for CD/CA-	
				ICH.	
>TDD	0.0		DUIGGU		
>>PUSCH system	OP		PUSCH		
information			system		
			informatio		
			n		
BUIGOU	0.0		10.3.6.66	0 1 (70014 700	DE: -
>>PUSCH system	OP		PUSCH	Only for 7.68 Mcps TDD	REL-7
information VHCR			system		
			informatio		
			n VHCR		
			10.3.6.66		
550011	0.0		a		
>>PDSCH system	OP		PDSCH		
information			system		
			informatio		
			n		
TDD	145		10.3.6.46		
>>TDD open loop power	MP		TDD open		
control			loop		
			power		
			control		
Primary CCDCLL info	OP		10.3.6.79	Note 1	
Primary CCPCH info	OF		Primary CCPCH	INOTE I	
			info		
			10.3.6.57		
PRACH system	OP		PRACH		
information list	OP .		system		
inomation ist			informatio		
			n list		
			10.3.6.55		
Secondary CCPCH	OP		Secondar		
system information	"		y CCPCH		
System information			system		
			informatio		
			n		
			10.3.6.72		
CBS DRX Level 1	CV-		CBS DRX		
information	CTCH		Level 1		
			informatio		
			n 10.3.8.3		
L	1		11 10.0.0.0	1	1

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Frequency band indicator	ОР		Frequenc y band indicator 10.3.6.35 b		REL-6
Frequency band indicator 2	OP		Frequenc y band indicator 2 10.3.6.35 c		REL-6

NOTE 1: DL scrambling code of the Primary CCPCH is the same as the one for Primary CPICH (FDD only).

Condition	Explanation
CTCH	The IE is mandatory present if the IE "CTCH indicator" is equal to TRUE for at least one FACH,
	otherwise the IE is not needed

10.2.48.8.10 System Information Block type 7

The system information block type 7 contains the fast changing parameters UL interference and Dynamic persistence level.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>UL interference	MP		UL interference 10.3.6.87	
>TDD				(no data)
PhyCH information elements				
PRACHs listed in system information block type 5	MP	1 to <maxpr ACH></maxpr 		The order of the PRACHs is the same as in system information block type 5 or 5bis.
>Dynamic persistence level	MP		Dynamic persistence level 10.3.6.35	
PRACHs listed in system information block type 6	OP	1 to <maxpra CH></maxpra 		The order of the PRACHs is the same as in system information block type 6.
>Dynamic persistence level	MP		Dynamic persistence level 10.3.6.35	
Expiration Time Factor	MD		Expiration Time Factor 10.3.3.12	Default is 1.

10.2.48.8.11 Void

10.2.48.8.12 Void

10.2.48.8.13 Void

10.2.48.8.14 System Information Block type 11

The system information block type 11 contains measurement control information to be used in the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB12 Indicator	MP		Boolean	TRUE indicates that SIB12 is broadcast in the cell.
Measurement information elements				
FACH measurement occasion info	OP		FACH measuremen t occasion info 10.3.7.8	
Measurement control system information	MP		Measuremen t control system information 10.3.7.47	

10.2.48.8.15 System Information Block type 12

The system information block type 12 contains measurement control information to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement information elements				
FACH measurement occasion info	OP		FACH measuremen t occasion info 10.3.7.8	
Measurement control system information	MP		Measuremen t control system information 10.3.7.47	

10.2.48.8.16 System Information Block type 13

The system information block type 13 contains ANSI-41 system information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
CN Information Elements				
CN Domain system information list	MP	1 to <maxcndo mains></maxcndo 		Send CN information for each CN domain.
>CN Domain system information	MP		CN Domain system information 10.3.1.2	
UE Information				
UE timers and constants in idle mode	MD		UE timers and constants in idle mode 10.3.3.44	The UE behaviour is unspecified if this IE is absent.
Capability update requirement	MD		Capability update requirement 10.3.3.2	Default value is defined in subclause 10.3.3.2

10.2.48.8.16.1 System Information Block type 13.1

The system information block type 13.1 contains the ANSI-41 RAND information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 RAND information	MP		ANSI-41 RAND information 10.3.9.6	

10.2.48.8.16.2 System Information Block type 13.2

The system information block type 13.2 contains the ANSI-41 User Zone Identification information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 User Zone Identification information	MP		ANSI-41 User Zone Identification information 10.3.9.7	

10.2.48.8.16.3 System Information Block type 13.3

The system information block type 13.3 contains the ANSI-41 Private Neighbour List information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 Private Neighbour List information	MP		ANSI-41 Private Neighbour List information 10.3.9.5	

10.2.48.8.16.4 System Information Block type 13.4

The system information block type 13.4 contains the ANSI-41 Global Service Redirection information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
ANSI-41 information elements				
ANSI-41 Global Service	MP		ANSI-41	
Redirection information			Global	
			Service	
			Redirection	
			information	
			10.3.9.2	

10.2.48.8.17 System Information Block type 14

NOTE: Only for 3.84 Mcps TDD and 7.68 Mcps TDD.

The system information block type 14 contains parameters for common and dedicated physical channel uplink outer loop power control information to be used in both idle and connected mode.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
PhyCH information elements				
Individual Timeslot interference	MP	1 to		
list		<maxts></maxts>		
>Individual Timeslot interference	MP		Individual	
			Timeslot	
			interference	
			10.3.6.38	
Expiration Time Factor	MD		Expiration	Default is 1.
			Time Factor	
			10.3.3.12	

10.2.48.8.18 System Information Block type 15

The system information block type 15 contains information useful for UE-based or UE-assisted positioning methods.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
GPS Data ciphering info	OP		UE positioning Ciphering info 10.3.7.86	If this IE is present then the SIB types 15.1, 15.2 & 15.3 are ciphered in accordance with the Data Assistance Ciphering Algorithm specified in [18]
Reference position	MP		Ellipsoid point with altitude and uncertainty ellipsoid 10.3.8.4c	approximate position where the UE is located
GPS reference time	MP		UE positioning GPS reference time 10.3.7.96	
Satellite information	OP	1 to <maxsat></maxsat>		This IE is present whenever bad (failed/failing) satellites are detected by UTRAN [18].
>BadSatID	MP		Enumerated(063)	

10.2.48.8.18.1 System Information Block type 15.1

The system information block type 15.1 contains information useful for UE positioning DGPS Corrections. The DGPS Corrections message contents are based on a Type-1 message of DGPS specified in [13].

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
DGPS corrections	MP		UE	
			positioning GPS DGPS	
			corrections	
			10.3.7.91	

10.2.48.8.18.2 System Information Block type 15.2

The system information block type 15.2 contains information useful for GPS Navigation Model. These IE fields are based on information extracted from the subframes 1 to 3 of the GPS navigation message [12].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Transmission TOW	MP		Integer (0604799)	The approximate GPS time-of- week when the message is broadcast. in seconds
SatID	MP		Enumerated(063)	Satellite ID
GPS Ephemeris and Clock Correction Parameters	MP		UE positioning GPS Ephemeris and Clock Correction parameters 10.3.7.91a	

10.2.48.8.18.3 System Information Block type 15.3

The system information block type 15.3 contains information useful for ionospheric delay, UTC offset, and Almanac. These IEs contain information extracted from the subframes 4 and 5 of the GPS navigation message, [12].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Transmission TOW	MP		Integer (0604799)	The approximate GPS time-of- week when the message is broadcast. in seconds
GPS Almanac and Satellite Health	OP		UE positioning GPS almanac 10.3.7.89	
GPS ionospheric model	OP		UE positioning GPS ionospheric model 10.3.7.92	
GPS UTC model	OP		UE positioning GPS UTC model 10.3.7.97	
SatMask	CV- Almanac		Bit string(132)	indicates the satellites that contain the pages being broadcast in this data set
LSB TOW	CV- Almanac		Bit string(8)	

Condition	Explanation
Almanac	This IE is mandatory present if the IE "GPS Almanac
	and Satellite Health" is present

10.2.48.8.18.4 System Information Block type 15.4

The system information block type 15.4 contains ciphering information for System Information Block type 15.5 and information useful for OTDOA UE-assisted Positioning method.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
OTDOA Data ciphering info	OP		UE positioning Ciphering info 10.3.7.86	If this IE is present then the for UE-based the System Information Block type 15.5 is ciphered in accordance with the Data Assistance Ciphering Algorithm specified in [18]
OTDOA assistance data for UE-assisted	MP		UE positioning OTDOA assistance data for UE- assisted 10.3.7.103	

10.2.48.8.18.4a System Information Block type 15.5

The system information block type 15.5 contains information useful for OTDOA UE-based Positioning method.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
OTDOA assistance data for UE-	MP		UE	
based			positioning	
			OTDOA	
			assistance	
			data for UE-	
			based	
			10.3.7.103a	

10.2.48.8.19 System Information Block type 16

The system information block type 16 contains radio bearer, transport channel and physical channel parameters to be stored by UE in idle and connected mode for use during handover to UTRAN.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
RB information elements				
Predefined RB configuration	MP		Predefined RB configuration 10.3.4.7	
TrCH Information Elements				
Predefined TrCH configuration	MP		Predefined TrCH configuration 10.3.5.9	
PhyCH Information Elements				
Predefined PhyCH configuration	MP		Predefined PhyCH configuration 10.3.6.56	

10.2.48.8.20 System Information Block type 17

NOTE: Only for TDD.

The system information block type 17 contains fast changing parameters for the configuration of the shared physical channels to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PhyCH information elements					
PUSCH system information	OP		PUSCH		
			system		
			information		
			10.3.6.66		
PUSCH system information VHCR	OP		PUSCH system information VHCR 10.3.6.66a	Only for 7.68 Mcps TDD	REL-7
PDSCH system information	OP		PDSCH system information 10.3.6.46		

10.2.48.8.21 System Information Block type 18

The System Information Block type 18 contains PLMN identities of neighbouring cells to be considered in idle mode as well as in connected mode.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Idle mode PLMN identities	OP		PLMN	
			identities of	
			neighbour	
			cells	
			10.3.7.53a	
Connected mode PLMN	OP		PLMN	
identities			identities of	
			neighbour	
			cells	
			10.3.7.53a	

10.2.49 SYSTEM INFORMATION CHANGE INDICATION

This message is used to send information on FACH to the UEs in state CELL_FACH or CELL_DCH(TDD only) about coming modification of the system information.

RLC-SAP: TM

Logical channel: BCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
Other information elements				
BCCH modification info	MP		BCCH modification info 10.3.8.1	

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1.

10.2.50 TRANSPORT CHANNEL RECONFIGURATION

This message is used by UTRAN to configure the transport channel of a UE. This also includes a possible reconfiguration of physical channels. The message can also be used to assign a TFC subset and reconfigure physical channel.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE Information Elements					
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	The UTRAN should not include this IE unless it is performing an SRNS relocation and a change in ciphering algorithm	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"	
Delay restriction flag	OP	Enumerate d (TRUE)		This IE is always set to TRUE and included if the activation time is restricted according to subclause 8.6.3.1	REL-6
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP		C-RNTI		
New DSCH-RNTI	OP		10.3.3.8 DSCH-RNTI 10.3.3.9a	Should not be set in FDD. If received the UE should ignore it	
New H-RNTI	OP		H-RNTI 10.3.3.14a	<u> </u>	REL-5
New Primary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
New Secondary E-RNTI	OP		E-RNTI 10.3.3.10a		REL-6
RRC State Indicator	MP		RRC State Indicator 10.3.3.35a		
UTRAN DRX cycle length coefficient	OP		UTRAN DRX cycle length coefficient 10.3.3.49		
CN Information Elements					
CN Information info	OP		CN Information info 10.3.1.3		
UTRAN mobility information elements					
URA identity	OP		URA identity 10.3.2.6		
RB information elements					
Downlink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5
TrCH Information Elements					
Uplink transport channels					
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24		
Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2		
Downlink transport channels					
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6		
Added or Reconfigured TrCH information list	OP	1 to <maxtrch ></maxtrch 			
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1		
PhyCH information elements					
Frequency info	OP		Frequency info 10.3.6.36		
Uplink radio resources					
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power	
Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88		
E-DCH Info	OP		E-DCH Info 10.3.6.97		REL-6
Downlink radio resources	OD		Davis lind		חבי ב
Downlink HS-PDSCH Information	OP		Downlink HS-PDSCH Information 10.3.6.23a		REL-5
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24		
Downlink information per radio link list	ОР	1 to <maxrl></maxrl>		Send downlink information for each radio link	

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27		
MBMS PL Service Restriction Information	OP		Enumerated (TRUE)	Absence means that on the MBMS Preferred Layer (PL) no restrictions apply concerning the use of non-MBMS services i.e. the PL is not congested	REL-6

10.2.51 TRANSPORT CHANNEL RECONFIGURATION COMPLETE

This message is sent from the UE when a transport channel reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Message Type	MP		Message		
			Type		
UE information elements					
RRC transaction identifier	MP		RRC		
			transaction		
			identifier		
			10.3.3.36		
Integrity check info	CH		Integrity		
			check info		
			10.3.3.16		
Uplink integrity protection	OP		Integrity		
activation info			protection		
			activation		
			info		
			10.3.3.17		
CHOICE mode	OP				
>FDD				(no data)	
>TDD					
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>Uplink Timing Advance	OP		Uplink		
			Timing		
			Advance		
			10.3.6.95		
>>>Extended Uplink Timing	OP		Extended		REL-7
Advance			Uplink		
			Timing		
			Advance		
7.00 M TDD			10.3.6.95a		DEL 7
>>>7.68 Mcps TDD	OD		Fost and all all		REL-7
>>>Extended Uplink Timing	OP		Extended		REL-7
Advance			Uplink		
			Timing		
			Advance		
1 20 Mana TDD	+		10.3.6.95a	(no dota)	REL-4
>>>1.28 Mcps TDD				(no data)	KEL-4

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RB Information elements			1010101100	dooripaon	
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure	
Uplink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22		
>START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.	
>>CN domain identity	MP		CN domain identity 10.3.1.1		
>>START	MP		START 10.3.3.38	START value to be used in this CN domain.	

10.2.52 TRANSPORT CHANNEL RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to establish the physical channel(s).

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.53 TRANSPORT FORMAT COMBINATION CONTROL

This message is sent by UTRAN to control the uplink transport format combination within the allowed transport format combination set. This message has different structures depending if the message is sent on transparent (TM) or non-transparent mode (AM or UM).

RLC-SAP: AM or UM
Logical channel: DCCH
Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message	
			Туре	
UE information elements				
RRC transaction identifier	MP		RRC	
			transaction	
			identifier	
			10.3.3.36	
Integrity check info	CH		Integrity	
			check info	
			10.3.3.16	
TrCH information elements				
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>TFCS Id	OP		Transport	
			Format	
			Combination	
			Set Identity	
			10.3.5.21	
DPCH/PUSCH TFCS in uplink	MP		Transport	
•			Format	
			Combination	
			subset	
			10.3.5.22	
Activation time for TFC subset	MD		Activation	Default value is "now"
			time	
			10.3.3.1	
TFC Control duration	OP		TFC Control	
			duration	
			10.3.6.80	

In case of transparent mode signalling the following message structure shall be used:

RLC-SAP: TM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFC subset identity	MP		INTEGER (07)	

The encoding of this message is specified in subclause 12.4.1.1.

10.2.54 TRANSPORT FORMAT COMBINATION CONTROL FAILURE

This message is sent to indicate that a received TRANSPORT FORMAT COMBINATION CONTROL message could not be handled by the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.55 UE CAPABILITY ENQUIRY

The UE CAPABILITY ENQUIRY is used by the UTRAN to enquire inter-RAT classmarks from the UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Capability update requirement	MP		Capability update requirement 10.3.3.2	

10.2.56 UE CAPABILITY INFORMATION

This message is sent by UE to convey UE specific capability information to the UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE \rightarrow UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message	
UE information elements			Туре	
RRC transaction identifier	OP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
UE radio access capability	OP		UE radio access capability 10.3.3.42	
UE radio access capability extension	OP		UE radio access capability extension 10.3.3.42a	
Other information elements				
UE system specific capability	OP	1 to <maxinter SysMessa ges></maxinter 		
>Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability10. 3.8.7	

10.2.57 UE CAPABILITY INFORMATION CONFIRM

This message is sent by UTRAN to confirm that UE capability information has been received.

RLC-SAP: AM or UM
Logical channel: DCCH

Direction: UTRAN \rightarrow UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied

10.2.58 UPLINK DIRECT TRANSFER

This message is used to transfer NAS messages for an existing signalling connection.

RLC-SAP: AM

Logical channel: DCCH
Direction: UE ->UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS message	MP		NAS message 10.3.1.8	
Measurement information elements				
Measured results on RACH	OP		Measured results on RACH 10.3.7.45	

10.2.59 UPLINK PHYSICAL CHANNEL CONTROL

NOTE: Only for TDD.

This message is used to transfer uplink physical channel parameters to the UE.

RLC-SAP: AM or UM
Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
Message Type	MP		Message Type		
UE information elements					
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	OP		Integrity check info 10.3.3.16		
PhyCH information elements					
CCTrCH power control info	OP		CCTrCH power control info 10.3.6.8	Power control information for one CCTrCH	
Special Burst Scheduling	OP		Special Burst Scheduling 10.3.6.75a	UL Special Burst generation period in radio frames	
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD					REL-4
>>Alpha	OP		Alpha 10.3.6.5		
>>Timing Advance Control	OP		UL Timing Advance Control 10.3.6.96		
>>PRACH Constant Value	OP		Constant value TDD	Operator controlled PRACH	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
			10.3.6.11a	Margin	
>>PUSCH Constant Value	OP		Constant value TDD 10.3.6.11a	Operator controlled PUSCH Margin	
>>UE positioning related parameters	CV-IPDLs		1010101110	····a.·g···	REL-4
>>>IPDL-Alpha	MP		Alpha 10.3.6.5		REL-4
>>>Max power increase	MP		Integer (03)	In dB	REL-4
>> HS-SICH power control info	OP		HS-SICH Power Control Info 10.3.6.36b	Only applies to TDD 3.84 Mcps	REL-5
>7.68 Mcps TDD					REL-7
>>Alpha	OP		Alpha 10.3.6.5		REL-7
>>Timing Advance Control	OP		UL Timing Advance Control 10.3.6.96		REL-7
>>PRACH Constant Value	OP		Constant value TDD 10.3.6.11a	Operator controlled PRACH Margin	REL-7
>>PUSCH Constant Value	OP		Constant value TDD 10.3.6.11a	Operator controlled PUSCH Margin	REL-7
>>UE positioning related parameters	CV-IPDLs				REL-4
>>>IPDL-Alpha	MP		Alpha 10.3.6.5		REL-4
>>>Max power increase	MP		Integer (03)	In dB	REL-4
>> HS-SICH power control info	OP		HS-SICH Power Control Info 10.3.6.36b	Only applies to TDD 7.68 Mcps	REL-5
>1.28 Mcps TDD					REL-4
>>Uplink synchronisation parameters	MD			Default: Uplink synchronisation step size 1. Uplink synchronisation frequency 1.	REL-4
>>>Uplink synchronisation step size	MP		Integer(18)	This parameter specifies the step size to be used for the adjustment of the uplink transmission timing	REL-4
>>>Uplink synchronisation frequency	MP		Integer(18)	This parameter specifies the frequency of the adjustment of the uplink transmission timing	REL-4
>>PRX _{HS-SICH}	OP		Integer (-12058 by step of 1)	In dBm. Desired power level for HS-SICH.	REL-6
>>TPC step size	ОР		Integer (1, 2, 3)	In dB. For HS- SICH	REL-6

Condition	Explanation		
IPDLs	This IE is present only if idle periods are applied		

10.2.60 URA UPDATE

This message is used by the UE to initiate a URA update procedure.

RLC-SAP: TM

Logical channel: CCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements			1 ''	
U-RNTI	MP		U-RNTI 10.3.3.47	
RRC transaction identifier	CV- ProtErr		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
URA update cause	MP		URA update cause 10.3.3.46	
Protocol error indicator	MD		Protocol error indicator 10.3.3.27	Default value is FALSE
Other information elements				
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	

Condition	Explanation
ProtErr	The IE is mandatory present if the IE "Protocol error
	indicator" has the value "TRUE" and not needed
	otherwise.

10.2.61 URA UPDATE CONFIRM

This message confirms the URA update procedure and can be used to reallocate new RNTI information for the UE valid after the URA update.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Message Type	MP		Message		
			Type		
UE information elements					

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
U-RNTI	CV-CCCH		U-RNTI 10.3.3.47	uescription	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity check info	СН		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	The UTRAN should not include this IE unless it is performing an SRNS relocation and a change in ciphering algorithm	
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP		C-RNTI 10.3.3.8		
RRC State Indicator	MP		RRC State Indicator 10.3.3.35a		
UTRAN DRX cycle length coefficient	OP		UTRAN DRX cycle length coefficient 10.3.3.49		
CN Information Elements					
CN Information info	OP		CN Information info 10.3.1.3		
UTRAN mobility information elements					
URA identity	OP		URA identity 10.3.2.6		
RB information elements					
Downlink counter	OP				
synchronisation info >RB with PDCP information list	ОР	1 to <maxrball RABs></maxrball 			
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP		220		REL-5
>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5

Condition	Explanation		
CCCH	This IE is mandatory present when CCCH is used and		
	not needed otherwise.		

10.2.62 UTRAN MOBILITY INFORMATION

This message is used by UTRAN to allocate a new RNTI and to convey other UTRAN mobility related information to a UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Message Type	MP		Message Type		
UE Information Elements			. , , , ,		
Integrity check info	СН		Integrity check info 10.3.3.16		
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36		
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	The UTRAN should not include this IE unless it is performing an SRNS relocation	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	The UTRAN should not include this IE unless it is performing an SRNS relocation and a change in ciphering algorithm	
New U-RNTI	OP		U-RNTI 10.3.3.47		
New C-RNTI	OP		C-RNTI 10.3.3.8		
UE Timers and constants in connected mode	OP		UE Timers and constants in connected mode 10.3.3.43		
CN Information Elements					
CN Information info	OP		CN Information info full 10.3.1.3a		
UTRAN Information Elements					
URA identity	OP		URA identity 10.3.2.6		
RB Information elements					
Downlink counter synchronisation info	OP				
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 			

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	This IE is needed for each RB having PDCP in the case of lossless SRNS relocation	
	OP				REL-5
>>PDCP context relocation info	OP		PDCP context relocation info 10.3.4.1a	This IE is needed for each RB having PDCP and performing PDCP context relocation	REL-5

10.2.63 UTRAN MOBILITY INFORMATION CONFIRM

This message is used to confirm the new UTRAN mobility information for the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message	
UE information elements			Туре	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Uplink counter synchronisation info	OP			,
>RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
>START list	MP	1 to <maxcndo mains></maxcndo 		START [40] values for all CN domains.
>>CN domain identity	MP		CN domain identity 10.3.1.1	
>>START	MP		START 10.3.3.38	START value to be used in this CN domain.

10.2.64 UTRAN MOBILITY INFORMATION FAILURE

This message is sent to indicate a failure to act on a received UTRAN MOBILITY INFORMATION message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	СН		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.3 Information element functional definitions

10.3.1 CN Information elements

10.3.1.1 CN domain identity

Identifies the type of core network domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN domain identity	MP		Enumerated	
			(CS domain,	
			PS domain)	

10.3.1.2 CN Domain System Information

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CN domain identity	MP		CN domain	
·			identity	
			10.3.1.1	
CHOICE CN Type	MP			
>GSM-MAP				
>>CN domain specific NAS	MP		NAS system	
system information			information	
			(GSM-MAP)	
			10.3.1.9	
>ANSI-41				
>>CN domain specific NAS	MP		ANSI-41	
system information			NAS system	
			information,	
			10.3.9.4	
CN domain specific DRX cycle	MP		CN domain	

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
length coefficient			specific DRX	
			cycle length	
			coefficient,	
			10.3.3.6	

10.3.1.3 CN Information info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PLMN identity	OP		PLMN identity 10.3.1.11		
CN common GSM-MAP NAS system information	OP		NAS system information (GSM-MAP) 10.3.1.9		
CN domain related information	OP	1 to <maxcndo mains></maxcndo 			
>CN domain identity	MP		CN domain identity 10.3.1.1		
>CN domain specific GSM-MAP NAS system info	MP		NAS system information (GSM-MAP) 10.3.1.9		
Primary PLMN identity	OP		PLMN identity 10.3.1.11		REL-6

10.3.1.3a CN Information info full

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PLMN identity	OP		PLMN identity 10.3.1.11		
CN common GSM-MAP NAS system information	OP		NAS system information (GSM-MAP) 10.3.1.9		
CN domain related information	OP	1 to <maxcndo mains></maxcndo 			
>CN domain identity	MP		CN domain identity 10.3.1.1		
>CN domain specific GSM-MAP NAS system info	MP		NAS system information (GSM-MAP) 10.3.1.9		
>CN domain specific DRX cycle length coefficient	MP		CN domain specific DRX cycle length coefficient, 10.3.3.6		
Primary PLMN identity	OP		PLMN identity 10.3.1.11		REL-6

10.3.1.3b Domain Specific Access Restriction

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE restriction status	MP				REL-6
>no restriction				(no data)	REL-6
>restriction					REL-6
>>Domain Specific Access Class Barred List	MD	<maxac></maxac>		The first instance of the parameter corresponds to Access Class 0, the second to Access Class 1 and so on up to Access Class 15. UE reads this IE of its access class stored in SIM. The default value is the Access Control Barred List contained in the IE "Cell Access Restriction" of the System Information Block Type 3.	REL-6
>>>Access Class Barred	MP		Enumerated(barred, not barred)		REL-6

10.3.1.3c Domain Specific Access Restriction Parameters

This IE specifies domain specific access class restriction parameters for CS and PS domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CS Domain Specific Access Restriction	MP		Domain Specific Access Restriction 10.3.1.3b	This IE contains Domain Specific Access Restriction Parameters for CS domain.	REL-6
PS Domain Specific Access Restriction	MP		Domain Specific Access Restriction 10.3.1.3b	This IE contains Domain Specific Access Restriction Parameters for PS domain.	REL-6

10.3.1.4 IMEI

This IE contains an International Mobile Equipment Identity. Setting specified in [11].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
IMEI	MP	15		The first element contains the first IMEI digit, the second element the second IMEI digit and so on.
>IMEI digit	MP		INTEGER(015)	

10.3.1.5 IMSI (GSM-MAP)

This IE contains an International Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN. Setting specified in [11].

		reference	
		i elelelice	
MP	6 to 21		The first element contains the first IMSI digit, the second element the second IMSI digit and so on. Although normally upto 15 digits are used for this IE, a bigger length is used to support future extension.
MP		INTEGER(0.	
	MP	MP	MP INTEGER(09)

10.3.1.6 Intra Domain NAS Node Selector

This IE carries information to be used to route the establishment of a signalling connection to a CN node within a CN domain.

Information Element/Group	Need	Multi	Type and	Semantics description
name	Necu	With	reference	Semantics description
CHOICE version	MP		TOTOTOTIO	
>R99	IVII			This choice shall also be used
21(00				by mobiles that are compliant
				to this version of the protocol
>>CHOICE CN type	MP			to the version of the protection
>>>GSM-MAP				
>>>>CHOICE Routing basis	MP			
>>>>local (P)TMSI				TMSI allocated in the current
. ,				LA or PTMSI allocated in the current RA
>>>>Routing parameter	MP		Bit string (10)	The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI/ PTMSI. The first/leftmost/most significant bit of the bit string contains bit b23 of the TMSI/PTMSI.
>>>>(P)TMSI of same PLMN, different (RA)LA				TMSI allocated in another LA of this PLMN or PTMSI allocated in another RA this PLMN
>>>>Routing parameter	MP		Bit string (10)	The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI/ PTMSI. The first/leftmost/most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI.
>>>>(P)TMSI of different PLMN				TMSI or a PTMSI allocated in another PLMN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>>>Routing parameter >>>>>IMSI(response to IMSI	MP		Bit string (10)	The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant. The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI/ PTMSI. The first/leftmost/most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI. NAS identity is IMSI
paging)				NAS identity is livisi
>>>>Routing parameter	MP		Bit string (10)	The "Routing parameter" bit string consists of DecimalToBinary [(IMSI div 10) mod 1000]. The first/leftmost bit of the bit string contains the most significant bit of the result.
>>>>IMSI(cause UE initiated event)				NAS identity is IMSI
>>>>Routing parameter	MP		Bit string (10)	The "Routing parameter" bit string consists of DecimalToBinary [(IMSI div 10) mod 1000]. The first/leftmost bit of the bit string contains the most significant bit of the result.
>>>>IMEI				NAS parameter is IMEI
>>>>Routing parameter	MP		Bit string (10)	The "Routing parameter" bit string consists of DecimalToBinary [(IMEI div 10) mod 1000]. The first/leftmost bit of the bit string contains the most significant bit of the result.
>>>>Spare 1			Bit string (10)	This choice shall not be used in this version
>>>>Spare 2			Bit string (10)	This choice shall not be used in this version
>>>ANSI-41			Bit string (14)	All bits shall be set to 0
>Later			Bit string(15)	This bit string shall not be sent by mobiles that are compliant to this version of the protocol.

10.3.1.7 Location Area Identification

Identifies uniquely a location area for a GSM-MAP type of PLMN. Setting specified in [5].

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
PLMN identity	MP		PLMN	
			identity	
			10.3.1.11	
LAC	MP		Bit string(16)	The first/leftmost bit of the bit
				string contains the most
				significant bit of the LAC

10.3.1.7a Multiple PLMN List

This information element identifies the multiple Public Land Mobile Networks (for a GSM-MAP type of PLMN) of a cell in a shared network.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
MIB PLMN Identity	MP		Boolean	The PLMN identity IE 10.3.1.11, broadcasted in the MIB, shall be included in the multiple PLMN list if and only if this IE is TRUE.	REL-6
Multiple PLMNs	MP	1 to 5			REL-6
>PLMN identity with Optional MCC			PLMN identity with Optional MCC 10.3.1.11a		REL-6

10.3.1.8 NAS message

A non-access stratum message to be transferred transparently through UTRAN.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
NAS message	MP		Octet string (14095)	The first octet contains octet 1 [17] of the NAS message, the second octet contains octet 2 of the NAS message and so on.

10.3.1.9 NAS system information (GSM-MAP)

This information element contains system information that belongs to the non-access stratum for a GSM-MAP type of PLMN. This information is transparent to RRC. It may contain either information specific to one CN domain (CS or PS) or information common for both CN domains.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
GSM-MAP NAS system information	MP		Octet string(18)	The first octet contains octet 1 [5] of the NAS system information element, the second octet contains octet 2 of the NAS system information element and so on.

10.3.1.10 Paging record type identifier

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Paging record type identifier	MP		Enumerated (IMSI (GSM- MAP), TMSI (GSM-MAP)/ P-TMSI, IMSI (DS- 41), TMSI (DS-41))	

10.3.1.11 PLMN identity

This information element identifies a Public Land Mobile Network for a GSM-MAP type of PLMN. Setting of digits is defined in [11].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MCC	MP	3		The first element contains the first MCC digit, the second element the second MCC digit and so on.
>MCC digit	MP		INTEGER(09)	
MNC	MP	2 to 3		The first element contains the first MNC digit, the second element the second MNC digit and so on.
>MNC digit	MP		INTEGER(09)	

10.3.1.11a PLMN identity with Optional MCC

This information element is a PLMN identity in subclause 10.3.1.11 where MCC is optional. It is used in a shared network and inserted in the Multiple PLMN List in subclause 10.3.1.7a.

Information Element/ Group name	Need	Multi	Type and reference	Semantics description	Version
MCC	MD	3		The first element contains the first MCC digit, the second element the second MCC digit and so on.	REL-6
>MCC digit	MP		Integer (09)		REL-6
MNC	MP	2 to 3		The first element contains the first MNC digit, the second element the second MNC digit and so on.	REL-6
>MNC digit	MP		Integer (09)	-	REL-6

10.3.1.12 PLMN Type

Identifies the type of Public Land Mobile Network (PLMN). This IE shall be used to control the interpretation of network dependent messages and information elements in the RRC protocol.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
PLMN Type	MP		Enumerated	One spare value is needed.
			(GSM-MAP,	
			ANSI-41,	
			GSM-MAP	
			and ANSI-	
			41)	

10.3.1.13 P-TMSI (GSM-MAP)

This IE contains a Packet Temporary Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
P-TMSI	MP		Bit string	Setting specified in [11]. The
			(32)	first/leftmost bit of the bit string
				contains the most significant
				bit of the P-TMSI.

10.3.1.14 RAB identity

This information element uniquely identifies a radio access bearer within a CN domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE RAB identity type	MP			
>RAB identity (GSM-MAP)			Bit string (8)	Formatted according to [5]. The first/leftmost bit of the bit string contains the most significant bit of the RAB identity.
>RAB identity (ANSI-41)			Bit string (8)	The first/leftmost bit of the bit string contains the most significant bit of the RAB identity.

CHOICE NAS binding info type	Condition under which the given RAB identity type is chosen
RAB identity (GSM-MAP)	PLMN is of type GSM-MAP
RAB identity (ANSI-41)	PLMN is of type ANSI-41

10.3.1.15 Routing Area Code

Identifies a routing area within a location area for a GSM-MAP type of PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Routing Area Code	MP		Bit string(8)	Setting specified in [11]. The first/leftmost bit of the bit string contains the most significant bit of the Routing Area Code.

10.3.1.16 Routing Area Identification

Identifies uniquely a routing area for a GSM-MAP type of PLMN. Setting specified in [11].

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
LAI	MP		Location	
			area	
			identification	
			10.3.1.7	
RAC	MP		Routing area	
			code	
			10.3.1.15	

10.3.1.17 TMSI (GSM-MAP)

This IE contains a Temporary Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TMSI (GSM-MAP)	MP		Bit string (32)	Setting specified in [11]. The first/leftmost bit of the bit string contains the most significant bit of the TMSI.

10.3.2 UTRAN mobility Information elements

10.3.2.1 Cell Access Restriction

Indicates the restrictions to cell access.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell Barred	MP		Enumerated(not barred, barred)	
Intra-frequency cell re-selection indicator	CV-Barred		Enumerated(not allowed, allowed)	
T _{barred}	CV-Barred		Integer (10,20,40,80 ,160,320,640 ,1280)	[4] [s]
Cell Reserved for operator use	MP		Enumerated(reserved, not reserved)	
Cell Reservation Extension	MP		Enumerated(reserved, not reserved)	
Access Class Barred list	CV-SIB3- MD	maxAC		Default is no access class barred is applied. The first instance of the parameter corresponds to Access Class 0, the second to Access Class 1 and so on up to Access Class 15. UE reads this IE of its access class stored in SIM.
>Access Class Barred	MP		Enumerated (barred, not barred)	

Condition	Explanation		
Barred	The IE is mandatory present if the IE "Cell Barred"		
	has the value "Barred"; otherwise the element is not		
	needed in the message.		
SIB3-MD	The IE is mandatory and has a default value if the IE		
	"Cell Access Restriction" is included in SIB 3.		
	Otherwise the IE is not needed.		

10.3.2.2 Cell identity

This information element identifies a cell unambiguously within a PLMN.

NOTE: This information element may carry any implementation dependent identity that unambiguously identifies a cell within a PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell identity	MP		bit string(28)	

10.3.2.3 Cell selection and re-selection info for SIB3/4

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Mapping Info	OP		Mapping info 10.3.2.5	This IE should not be sent.	
Cell selection and reselection quality measure	MP		Enumerat ed (CPICH Ec/N0, CPICH RSCP)	Choice of measurement (CPICH Ec/N0 or CPICH RSCP) to use as quality measure Q for FDD cells. This IE is also sent to the UE in SIB11/12. Both occurrences of the IE should be set to the same value.	
CHOICE mode >FDD	MP				
>>S _{intrasearch}	OP		Integer (- 3220 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>S _{intersearch}	OP		Integer (- 3220 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>S _{searchHCS}	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>RAT List	OP	1 to <maxot herRAT ></maxot 			
>>>RAT identifier	MP		Enumerat ed (GSM, cdma200 0)		
>>>Ssearch,RAT	MP		Integer (- 3220 by step of 2)	In case the value 20 is received the UE shall consider this IE as if it was absent according to [4] If a negative value is received the UE shall consider the value to be 0. [dB]	
>>>Shcs,rat	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>>Slimit,SearchRAT	MP		Integer (-	If a negative value is	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
·			3220 by step of 2)	received the UE shall consider the value to be	
				0. [4] [dB]	
>>Qqualmin	MP		Integer (- 240)	Ec/N0, [dB]	
>>Qrxlevmin	MP		Integer (- 11525	RSCP, [dBm]	
			by step of 2)		
>> Delta _{Qrxlevmin}	CV- Delta		Integer(- 42 by step of 2)	If present, the actual value of Qrxlevmin = Qrxlevmin + Delta _{Qrxlevmin}	REL-5
>TDD	0.5				
>>Sintrasearch	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>Sintersearch	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>SsearchHCS	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>RAT List	OP	1 to <maxot herRAT</maxot 			
>>>RAT identifier	MP		Enumerat ed (GSM, cdma200 0)		
>>>S _{search,RAT}	MP		Integer (- 10591 by step of 2)	In case the value 91 is received the UE shall consider this IE as if it was absent according to [4] If a negative value is received the UE shall consider the value to be 0. [dB]	
>>>Shcs,rat	OP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>>Slimit,SearchRAT	MP		Integer (- 10591 by step of 2)	If a negative value is received the UE shall consider the value to be 0. [4] [dB]	
>>Qrxlevmin	MP		Integer (- 11525	RSCP, [dBm]	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			by step of 2)		
>>Delta _{Qrxlevmin}	CV- Delta		Integer(- 42 by step of 2)	If present, the actual value of Qrxlevmin = Qrxlevmin + Delta _{Qrxlevmin}	REL-5
Qhyst1 _s	MP		Integer (040 by step of 2)	[4] [dB]	
Qhyst1 _{s,PCH}	CV-SIB4		Integer (040)	If present, it is used as Qhyst1 _s for UE in CELL_PCH or URA_PCH state [4] [dB]	REL-5
Qhyst1 _{s,FACH}	CV-SIB4		Integer (040)	If present, it is used as Qhyst1s for UE in CELL_FACH state [4] [dB]	REL-5
Qhyst2 _s	CV- FDD- Quality- Measure		Integer (040 by step of 2)	Default value is Qhyst1 _s [4] [dB]	
Qhyst2 _{s,PCH}	CV- SIB4- FDD- Quality- Measure		Integer (040)	If present, it is used as Qhyst2 _s for UE using CPICH Ec/No quality measure in CELL_PCH or URA_PCH state. Default value is Qhyst1 _{s,PCH} [4] [dB]	REL-5
Qhyst2 _{s,FACH}	CV- SIB4- FDD- Quality- Measure		Integer (040)	If present, it is used as Qhyst2 _s for UE using CPICH Ec/No quality measure in CELL_FACH state. Default value is Qhyst1 _{s,FACH} [4] [dB]	REL-5
Treselections	MP		Integer (031)	[s]	
Treselection _{s,PCH}	CV-SIB4		Integer (031)	If present, it is used as Treselections for UE in CELL_PCH or URA_PCH state [4] [s]	REL-5
Treselection _{s,FACH}	CV-SIB4		Real (06.2 by step of 0.2)	If present, it is used as Treselections for UE in CELL_FACH state [4] [s]	REL-5
Speed dependent ScalingFactor for Treselection	OP		Real (01 by step of 0.1)	This IE is used by the UE in high mobility state as scaling factor for Treselections or Treselections, PCH or Treselections, FACH [4].	REL-5
Inter-frequency ScalingFactor for	OP		Real (14.75	If present, it is used by the UE as scaling factor	REL-5

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Treselection			by step of 0.25)	for Treselections or Treselections, PCH or Treselections, FACH for inter-frequency cell reselection evaluation [4].	
Inter-RAT ScalingFactor for Treselection	OP		Real (14.75 by step of 0.25)	If present, it is used by the UE as scaling factor for Treselection _s or Treselection _{s,PCH} or Treselection _{s,FACH} for inter-RAT cell reselection evaluation [4].	REL-5
Non-HCS_T _{CRmax}	MD		Enumerat ed (not used, 30, 60, 120, 180, 240)	[s] Default value is "not used".	REL-5
Non-HCS_N _{CR}	CV-UE speed detector _MD		Integer (116)	Default value = 8	REL-5
Non-HCS_T _{CRmaxHyst}	CV-UE speed detector _MP		Enumerat ed (not used, 10, 20, 30, 40, 50, 60, 70)	[s]	REL-5
HCS Serving cell Information	OP		HCS Serving cell informatio n 10.3.7.12		
Maximum allowed UL TX power	MP		Maximum allowed UL TX power 10.3.6.39	[dBm] UE_TXPWR_MAX_RA CH in [4].	

Condition	Explanation
FDD-Quality-Measure	The IE is not needed if the IE "Cell selection and reselection quality measure" has the value CPICH RSCP, otherwise the IE is mandatory and has a default value.
Delta	This IE is optional if the value of Qrxlevmin is below – 115dBm. It is not needed otherwise.
SIB4	This IE is optional if the IE 'Cell selection and reselection info for SIB3/4' is included in SIB type 4. It is not needed otherwise.
SIB4-FDD-Quality-Measure	This IE is optional if the IE 'Cell selection and reselection info for SIB3/4' is included in SIB type 4, and the IE "Cell selection and reselection quality measure" has the value CPICH Ec/N0. It is not needed otherwise.
UE Speed detector_MD (non-HCS)	This IE is not needed if non-HCS_T _{CRmax} equals 'not used', else it is mandatory default.
UE Speed detector_MP (non-HCS)	This IE is not needed if non-HCS_T _{CRmax} equals 'not used', else it is mandatory present.

10.3.2.4 Cell selection and re-selection info for SIB11/12

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Qoffset1 _{s,n}	MD		Integer(- 5050)	Default value is 0. [dB]	
Qoffset2 _{s,n}	CV- FDD- Quality- Measure		Integer(- 5050)	Default value is 0. [dB]	
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	According to UE_TXPWR_MAX_RA CH in [4], [dBm]. If applied to FDD or TDD cells, the default is the Maximum allowed UL TX power for the serving cell. If applied to a GSM cell, the default is the UE maximum output power applicable for this GSM cell, according to the UE's radio access capability.	
HCS neighbouring cell information	OP		HCS Neighbou ring cell informatio n 10.3.7.11		
CHOICE mode	MP				
>FDD					
>>Qqualmin	CV- FDD- Serving- Cell		Integer (- 240)	Ec/N0, [dB] Default value is Qqualmin for the serving cell	
>>Qrxlevmin	MD		Integer (- 11525 by step of 2)	RSCP, [dBm] Default value is Qrxlevmin for the serving cell	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>Delta _{Qrxlevmin}	CV- Delta		Integer(- 42 by step of 2)	If present, the actual value of Qrxlevmin = Qrxlevmin + Delta _{Qrxlevmin}	REL-5
>TDD					
>>Qrxlevmin	MD		Integer (- 11525 by step of 2)	RSCP, [dBm] Default value is Qrxlevmin for the serving cell	
>> Delta _{Qrxlevmin}	CV- Delta		Integer(- 42 by step of 2)	If present, the actual value of Qrxlevmin = Qrxlevmin + Delta _{Qrxlevmin}	REL-5
>GSM					
>>Qrxlevmin	MD		Integer (- 11525 by step of 2)	GSM RSSI, [dBm] Default value is Qrxlevmin for the serving cell	

Condition	Explanation
FDD-Quality-Measure	This IE is mandatory and has a default value for Intra/Inter Frequency Cells if the IE "Cell selection and reselection quality measure" has the value CPICH Ec/No. Otherwise the IE is absent.
FDD-Serving-Cell	This IE is mandatory and has a default value if the serving cell is an FDD cell. Otherwise the IE is mandatory present.
Delta	This IE is optional if Qrxlevmin is present and the value of Qrxlevmin is below –115dBm. It is not needed otherwise.

10.3.2.5 Mapping Info

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
Mapping List	MP	1 to <maxrat></maxrat>	Reference	dooripaon	
>RAT	MP		Enumerated (UTRA FDD, UTRA TDD 3.84 Mcps, UTRA TDD 1.28 Mcps, GSM, cdma2000)		UTRA TDD 1.28 Mcps is included for REL- 4.
>Mapping Function Parameter List	MP	1 to <maxmeas Intervals></maxmeas 			
>>Function type	MP		Enumerated (linear, function type 2, function type 3, function type 4)	Type of the function within the interval.	
>>Map_parameter_1	MD		Integer (099)	Parameter describing the mapping function between the quality measurement and the representing quality value, see	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
nunc			Keterenee	[4]. Default value is zero for the first interval or otherwise the value of Map_parameter_2 of the interval before.	
>>Map_parameter_2	MP		Integer (099)	Parameter describing the mapping function between the quality measurement and the representing quality value, see [4].	
>>Upper_limit	CV-MaxInt		Integer (1MaxMeas)	Upper limit of interval for which the Map_parameter_1 and Map_parameter_2 are valid. MaxMeas = 25 if RAT = UTRA FDD / CPICH Ec/N0, MaxMeas = 91 if RAT = UTRA TDD 3.84 Mcps or if RAT = UTRA TDD 1.28 Mcps or if RAT = UTRA FDD / CPICH RSCP, MaxMeas = 63 if RAT = GSM.	UTRA TDD 1.28 Mcps is included for REL- 4.

Condition	Explanation		
MaxInt	This IE is mandatory present if Mapping Function		
	Parameter List has not reached maxMeasIntervals		
	and is not needed otherwise.		

10.3.2.6 URA identity

Gives the identity of the UTRAN Registration Area. It can be used to indicate to the UE which URA it shall use in case of overlapping URAs.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA identity	MP		bit string(16)	

10.3.3 UE Information elements

10.3.3.1 Activation time

Activation Time defines the frame number/time at which the operation/changes caused by the related message shall take effect. Values between 0 and 255 indicate the absolute value of CFN (Connection Frame Number) of that frame number/time.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activation time	MP		Integer(0 255)	CFN [10]

10.3.3.2 Capability Update Requirement

This IE indicates to the UE which specific capabilities to transfer to the network.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
UE radio access FDD capability update requirement	MP		Boolean	TRUE indicates update required	
UE radio access 3.84 Mcps TDD capability update requirement	MP		Boolean	TRUE indicates update required	Name changed in REL-4
UE radio access 7.68 Mcps TDD capability update requirement	MP		Boolean	TRUE indicates update required	REL-7
UE radio access 1.28 Mcps TDD capability update requirement	MP		Boolean	TRUE indicates update required	REL-4
System specific capability update requirement list	OP	1 to <maxsyste mCapabilit y></maxsyste 		In this version, a maximum size of 4 of the list shall be applied and any items after the 4 th item in the list shall be ignored.	
>System specific capability update requirement	MP		Enumerated (GSM , GERAN Iu)		REL-5

Default value is:

10.3.3.3 Cell update cause

Indicates the cause for cell update.

[&]quot;UE radio capability FDD update requirement" = false

[&]quot;UE radio capability 3.84 Mcps TDD update requirement" = false

[&]quot;UE radio capability 7.68 Mcps TDD update requirement" = false

[&]quot;UE radio capability 1.28 Mcps TDD update requirement" = false

[&]quot;System specific capability update requirement" not present.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell update cause	MP		Enumerated (cell reselection, periodical cell update, uplink data transmission , paging response, re-entered service area, radio link failure, RLC unrecoverabl e error, MBMS reception, MBMS ptp RB request)	Two spare values are needed.

10.3.3.4 Ciphering Algorithm

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Ciphering algorithm	MP		Enumerated	
			(UEA0,	
			UEA1)	

10.3.3.5 Ciphering mode info

This information element contains the ciphering specific security mode control information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ciphering mode command	MP		Enumerated (start/restart)	
Ciphering algorithm	MP		Ciphering algorithm 10.3.3.4	
Ciphering activation time for DPCH	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is already in CELL_DCH state
Radio bearer downlink ciphering activation time info	OP		RB activation time info, 10.3.4.13	Used for radio bearers mapped on RLC-AM or RLC- UM The UTRAN should not include this IE in a message other than a SECURITY MODE COMMAND

10.3.3.6 CN domain specific DRX cycle length coefficient

A coefficient in the formula to count the paging occasions to be used by a specific UE (specified in [4]) .

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN domain specific DRX cycle length coefficient	MP		Integer(69)	Refers to 'k' in the formula as specified in [4], Discontinuous reception

10.3.3.7 Void

10.3.3.8 C-RNTI

The cell RNTI (C-RNTI) identifies a UE having a RRC connection within a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
C-RNTI	MP		bit string(16)	

10.3.3.9 Void

10.3.3.9a DSCH-RNTI

In TDD, the DSCH-RNTI identifies a UE in CELL_DCH or CELL_FACH using a DSCH or USCH within the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DSCH-RNTI	MP		bit string(16)	

10.3.3.10 Void

10.3.3.10a E-RNTI

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
F-RNTI	MP		bit string(16)		RFL-6

10.3.3.11 Establishment cause

Cause for an RRC connection establishment request.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
	MP	Multi	Type and reference Enumerated(Originating Conversatio nal Call, Originating Streaming Call, Originating Background Call, Originating Subscribed traffic Call, Terminating Conversatio nal Call, Terminating Streaming Call, Terminating Streaming Call, Terminating Background Call, Terminating Streaming Call, Terminating Background Call, Terminating Interactive Call, Terminating Background Call, Terminating Low Priority Signalling, Terminat	Semantics description Eleven spare values are needed.
			MBMS ptp RB request)	

10.3.3.12 Expiration Time Factor

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Expiration Time Factor	MP		Enumerated(2times,	
			4times,	
			8times,	
			16times,	
			32times,	
			64times,	
			128times,	
			256times)	

10.3.3.13 Failure cause

Cause for failure to perform the requested procedure.

Information Element/Group	Need	Multi	Type and	Semantics description
Failure cause	MP	Multi	Enumerated (configuration nunsupported, physical channel failure, incompatible simultaneous reconfiguration, protocol error, compressed mode runtime error, cell update occurred, invalid configuration, configuration incomplete, unsupported measurement, MBMS session already received correctly, lower priority MBMS	Five spare values are needed.
			service)	

10.3.3.14 Failure cause and error information

Cause for failure to perform the requested procedure.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Failure cause	MP		Failure	
			cause	
			10.3.3.13	

Protocol error information	CV-ProtErr	Protocol	
		error	
		information	
		10.3.8.12	
Deleted TGPSI	CV-	TGPSI	
	CompMod	10.3.6.82	
	eErr		

Condition	Explanation
ProtErr	The IE is mandatory present if the IE "Failure cause"
	has the value "Protocol error"; otherwise it is not
	needed in the message.
CompModeErr	The IE is mandatory present if the IE "Failure cause"
	has the value " Compressed mode runtime error";
	otherwise it is not needed in the message

10.3.3.14o Group release information

Contains addressing information to perform a release of a group of RRC connections.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
U-RNTI group	MP		U-RNTI		REL-5
			group		
			10.3.3.47a		

10.3.3.14a H-RNTI

The H-RNTI identifies an UE having a HS-PDSCH assignment within a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
H-RNTI	MP		bit string(16)		REL-5

10.3.3.15 Initial UE identity

This information element identifies the UE at a request of an RRC connection.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE UE id type	MP			
>IMSI (GSM-MAP)			IMSI (GSM-	
			MAP)	
			10.3.1.5	
>TMSI and LAI (GSM-MAP)				
>>TMSI (GSM-MAP)	MP		TMSI (GSM-	
			MAP)	
			10.3.1.17	
>>LAI (GSM-MAP)	MP		Location	
			Area	
			Identification	
			10.3.1.7	
>P-TMSI and RAI (GSM-MAP)				
>>P-TMSI (GSM-MAP)	MP		P-TMSI	
			(GSM-MAP)	
			10.3.1.13	
>>RAI (GSM-MAP)	MP		Routing Area	
			Identification	
			10.3.1.16	
>IMEI			IMEI	
			10.3.1.4	

>ESN (DS-41)		Bit string (SIZE (32))	TIA/EIA/IS-2000-4
>IMSI (DS-41)		Octet string (SIZE (57))	TIA/EIA/IS-2000-4
>IMSI and ESN (DS-41)			TIA/EIA/IS-2000-4
>>IMSI (DS-41)	MP	Octet string (SIZE (57))	TIA/EIA/IS-2000-4
>>ESN (DS-41)	MP	Bit string (SIZE (32))	TIA/EIA/IS-2000-4
>TMSI (DS-41)		Octet string (SIZE (217))	TIA/EIA/IS-2000-4 Although normally upto 12 digits are used for this IE, a bigger length is used to support future extension.

10.3.3.16 Integrity check info

The Integrity check info contains the RRC message sequence number needed in the calculation of XMAC-I [40] and the calculated MAC-I.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Message authentication code	MP		bit string(32)	MAC-I [40]. The first/leftmost bit of the bit string contains the most significant bit of the MAC-I. The 27 MSB of the IE shall be set to zero and the 5 LSB of the IE shall be set to the value of the IE "RB identity" for the used signalling radio bearer when the encoded RRC message is used as the MESSAGE parameter in the integrity protection algorithm.
RRC Message sequence number	MP		Integer (015)	The local RRC hyper frame number (RRC HFN) is concatenated with the RRC message sequence number to form the input parameter COUNT-I for the integrity protection algorithm. The IE value shall be set to zero when the encoded RRC message is used as the MESSAGE parameter in the integrity protection algorithm.

10.3.3.17 Integrity protection activation info

This IE contains the time, in terms of RRC sequence numbers, when a new integrity protection configuration shall be activated for the signalling radio bearers.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RRC message sequence number list	MP	4 to 5		The RRC sequence number when a new integrity protection configuration shall be applied, for signalling radio bearers in the order RB0, RB1, RB2, RB3, RB4. The value for RB1 shall be ignored if this IE was included in a RRC message sent on RB1. The value for RB2 shall be ignored if this IE was included in a RRC message sent on RB1.
>RRC message sequence number	MP		Integer (0 15)	

10.3.3.18 Integrity protection Algorithm

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Integrity protection algorithm	MP		Enumerated (UIA1)	

10.3.3.19 Integrity protection mode info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Integrity protection mode command	MP		Enumerated(start, modify)	
Downlink integrity protection activation info	CV-modify		Integrity protection activation info 10.3.3.17	
Integrity protection algorithm	OP		Integrity protection algorithm 10.3.3.18	
Integrity protection initialisation number	CV-start		Bit string(32)	FRESH [40]. The first/leftmost bit of the bit string contains the most significant bit of the FRESH.

Condition	Explanation
Start	The IE is mandatory present if the IE "Integrity
	protection mode command" has the value "start ",
	otherwise it is not needed in the message.
Modify	The IE is mandatory present if the IE "Integrity
	protection mode command" has the value "modify" and
	not needed otherwise.

10.3.3.19a Void

10.3.3.20 Void

10.3.3.21 Measurement capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Need for downlink compressed mode				•	
FDD measurements	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on FDD	
3.84 Mcps TDD measurements	CV- 3.84_Mcps _tdd_sup		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on 3.84 Mcps TDD	Name changed in REL-4
7.68 Mcps TDD measurements	CV- 7.68_Mcps _tdd_sup		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on 7.68 Mcps TDD	REL-7
1.28 Mcps TDD measurements	CV- 1.28_Mcps _tdd_sup		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on 1.28 Mcps TDD	REL-4
GSM measurements	CV- gsm_sup				
>GSM 900	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on GSM 900	
>DCS 1800	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on DCS 1800	
>GSM 1900	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on GSM 1900	
Multi-carrier measurement	CV- mc_sup		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on	

Information Element/Group name	Need	Multi	Type and reference	Semantics description multi-carrier	Version
Need for uplink compressed mode				muiu-camei	
FDD measurements	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on FDD	
3.84 Mcps TDD measurements	CV- 3.84_Mcps _tdd_sup		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on 3.84 Mcps TDD	Name changed in REL-4
7.68 Mcps TDD measurements	CV- 7.68_Mcps _tdd_sup		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on 7.68 Mcps TDD	REL-7
1.28 Mcps TDD measurements	CV- 1.28_Mcps _tdd_sup		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on 1.28 Mcps TDD	REL-4
GSM measurements	CV- gsm_sup				
>GSM 900	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on GSM 900	
>DCS 1800	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on DCS 1800	
>GSM 1900	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on GSM 1900	
Multi-carrier measurement	CV- mc_sup		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on multi-carrier	

Condition	Explanation
3.84_Mcps_tdd_sup	The IE is mandatory present if an IE "TDD RF capability" is present with the IE "Chip rate capability" set to "3.84 Mcps". Otherwise this field is not needed in the message.
7.68_Mcps_tdd_sup	The IE is mandatory present if an IE 'TDD RF capability' is present with the IE 'Chip rate capability' set to '7.68 Mcps'. Otherwise this field is not needed in the message.
1.28_Mcps_tdd_sup	The IE is mandatory present if an IE "TDD RF capability" is present with the IE "Chip rate capability" set to "1.28 Mcps". Otherwise this field is not needed in the message.
gsm_sup	The IE is mandatory present if the IE "Inter-RAT UE radio access capability" indicates support for GSM900, GSM1800 and/or GSM1900. Otherwise this field is not needed in the message.
mc_sup	The IE is mandatory present if the IE "Support of multi-carrier" has the value TRUE. Otherwise this field is not needed in the message.

10.3.3.21a Measurement capability extension

This IE may be used to replace the measurement capability information provided within IE "Measurement capability".

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
FDD measurements	MP	1 to <maxfre qBands FDD></maxfre 			
>FDD Frequency band	MD		Enumerat ed(Band I, Band II,	The default value is the same as indicated in the IE "Frequency band" included in the IE " UE radio access capability extension". Band numbering is defined in [21].	
			Band III,		REL-5
			Band VI, Band IV, Band V, Band VII, extension indicator)	The default value is the same as R99, if the IE 'FDD Frequency band 2' below is not included. The default value is the same as the IE 'FDD Frequency band 2', if the IE 'FDD Frequency band 2' is included.	REL-6
>FDD Frequency band 2	MD		Enumerat ed(Band VIII, Band IX, extension Indicator)	The default value is the same as indicated in the IE "Frequency band 2" included in the IE " UE radio access capability extension"., if the IE 'FDD Frequency band' above is not included. The default value is the same as the IE 'FDD Frequency band', if the IE 'FDD Frequency band', if the IE 'FDD Frequency band' is included. Thirteen spare values are needed	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Need for DL compressed mode	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on the FDD frequency band indicated by the IE "FDD Frequency band"	
>Need for UL compressed mode	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on the FDD frequency band indicated by the IE "FDD Frequency band"	
TDD measurements	CV- tdd_sup	1 to <maxfre qBands TDD></maxfre 			
>TDD Frequency band	MP		Enumerat ed(a, b, c)		
>Need for DL compressed mode	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on TDD frequency band indicated by the IE "TDD Frequency band"	
>Need for UL compressed mode	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on TDD frequency band indicated by the IE "TDD Frequency band"	
GSM measurements	CV- gsm_su p	1 to <maxfre qBands GSM></maxfre 			
>GSM Frequency band	MP		Enumerat ed(GSM4 50, GSM480, GSM850, GSM900 P, GSM900 E, GSM1800 ,	as defined in [45]. Nine spare values are needed.	
>Need for DL compressed mode	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on GSM frequency band indicated by the IE "GSM Frequency band"	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Need for UL compressed mode	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on GSM frequency band indicated by the IE "GSM Frequency band"	
Multi-carrier	CV-				
measurement	mc_sup				
>Need for DL compressed mode	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on multicarrier	
>Need for UL compressed mode	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on multicarrier	

Condition	Explanation
tdd_sup	The IE is mandatory present if the IE "Multi-mode capability" has the value "TDD" or "FDD/TDD". Otherwise this field is not needed in the message.
gsm_sup	The IE is mandatory present if the IE "Support of GSM" has the value TRUE. Otherwise this field is not needed in the message.
mc_sup	The IE is mandatory present if the IE "Support of multi-carrier" has the value TRUE. Otherwise this field is not needed in the message.

10.3.3.22 Paging cause

Cause for a CN originated page.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Paging cause	MP		Enumerated(Terminating Conversatio nal Call, Terminating Streaming Call, Terminating Interactive Call, Terminating Background Call, Terminating High Priority Signalling, Terminating Low Priority Signalling, Terminating Low Priority Signalling, Terminating unknown)	One spare value is needed.

10.3.3.23 Paging record

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE Used paging identity	MP				
>CN identity					
>>Paging cause	MP		Paging cause 10.3.3.22		
>>CN domain identity	MP		CN domain identity 10.3.1.1		
>>CHOICE UE Identity	MP			Three spare values are needed.	
>>>IMSI (GSM-MAP)			IMSI (GSM- MAP) 10.3.1.5		
>>>TMSI (GSM-MAP)			TMSI (GSM- MAP) 10.3.1.17		
>>>P-TMSI (GSM-MAP)			P-TMSI (GSM- MAP) 10.3.1.13		
>>>IMSI (DS-41)			TIA/EIA/I S-2000-4		
>>>TMSI (DS-41)			TIA/EIA/I S-2000-4		
>UTRAN single UE identity					
>>U-RNTI	MP		U-RNTI 10.3.3.47		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>CN originated page to	OP	+	reference		
connected mode UE	Oi				
>>>Paging cause	MP	1	Paging		
			cause		
			10.3.3.22		
>>>CN domain identity	MP		CN		
			domain		
			identity		
			10.3.1.1		
>>>Paging record type	MP		Paging		
identifier			record		
			type identifier		
			10.3.1.10		
>>RRC connection	MP	1	RRC		REL-5
release information	IVII		connectio		INEE-5
Tologoo iiiiofffiatioff			n release		
			informatio		
			n		
			10.3.3.35		
			0		
>UTRAN group identity		1 to			REL-5
		<maxur< td=""><td></td><td></td><td></td></maxur<>			
		NTIgrou			
>>RRC connection	MP	p>	RRC		REL-5
release information	IVIE		connectio		KEL-3
Telease illioilliation			n release		
			informatio		
			n		
			10.3.3.35		
			0		
>>Group release	MP		Group		REL-5
information			release		
			informatio		
			n		
			10.3.3.14		
			0		

Condition	Explanation
CHOICE Used paging identity	Condition under which the given used paging
	identity is chosen
CN identity	For CN originating pages (for idle mode UEs)
UTRAN single UE identity	For UTRAN originating pages (for connected mode
	UEs), addressing a single UE
UTRAN group identity	For UTRAN originating pages (for connected mode
	UEs), addressing a group of UEs

10.3.3.24 PDCP capability

Indicates which algorithms and which value range of their parameters are supported by the UE.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Support for lossless SRNS	MP		Boolean	TRUE means	
relocation				supported	
Support for lossless DL RLC	CV-		Boolean	TRUE means	REL-5
PDU size change	not_iRAT_			supported Default	
	HoInfo2			value is FALSE	
Support for RFC2507	MP		Boolean	TRUE means	
				supported	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Max HC context space	MP		Integer(1024 , 2048, 4096, 8192,		
			16384, 32768, 65536, 131072)	Note 1	REL-5
Support for RFC 3095	CV- not_iRAT_ HoInfo		Boolean	TRUE means supported	REL-4
>Maximum number of ROHC context sessions	MD		Integer(2, 4, 8, 12, 16, 24, 32, 48, 64, 128, 256, 512, 1024, 16384)	Default value is 16.	REL-4
>Reverse decompression depth	MD		Integer (065535)	Default value is 0 (reverse decompression is not supported).	REL-4
>Support for RFC 3095 context relocation Note 1: The IE "Max HC context relocation relo	MP		Boolean	TRUE means supported	REL-5

Note 1: The IE "Max HC context space" values 16384, 32768, 65536 and 131072 are not used in the INTER RAT HANDOVER INFO message.

Condition	Explanation
not_iRAT_HoInfo	The IE is not needed in the INTER RAT HANDOVER
	INFO message. Otherwise, it is mandatory present.
not_iRAT_HoInfo2	The IE is not needed in the INTER RAT HANDOVER
	INFO message. Otherwise, it is mandatory default.

10.3.3.25 Physical channel capability

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			Reference	description	
Downlink physical channel capability information elements					
FDD downlink physical channel capability	CH- fdd_req_su				
	p				
>Max no DPCH codes	MP		Integer (18)	Maximum number of DPCH codes to be simultaneously received	
>Max no physical channel bits received	MP		Integer (1200, 2400, 3600, 4800, 7200, 9600, 14400, 19200, 28800, 38400, 48000, 57600, 67200, 76800)	Maximum number of physical channel bits received in any 10 ms interval (DPCH, S- CCPCH)	
>Support for SF 512 and 80 ms TTI for DPCH	MP		Boolean	TRUE means supported	
>CHOICE Support of HS- PDSCH	CV- not_iRAT_ HoInfo				REL-5
>>Supported					REL-5
>>>HS-DSCH physical layer	MP		Integer		REL-5

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
category			(164)		
>>Unsupported				(no data)	REL-5
3.84 Mcps TDD downlink	CH-				Name
physical channel capability	3.84_Mcps _tdd_req_s up				changed in REL-4
>Maximum number of timeslots per frame	MP		Integer (114)		
>Maximum number of physical channels per frame	MP		Integer (5224)		
>Minimum SF	MP		Integer (1, 16)		
>Support of PDSCH	MP		Boolean	TRUE means supported	
>CHOICE Support of HS- PDSCH	CV- not_iRAT_ HoInfo			Сирроной	REL-5
>>Supported					REL-5
>>>HS-DSCH physical layer category	MP		Integer (164)		REL-5
>>Unsupported				(no data)	REL-5
>Maximum number of physical channels per timeslot	MP		Integer (516)		
7.68 Mcps TDD downlink physical channel capability	CH- 7.68_Mcps _tdd_req_s up				REL-7
>Maximum number of timeslots per frame	MP		Integer (114)		REL-7
>Maximum number of physical channels per frame	MP		Integer (5448)		REL-7
>Minimum SF	MP		Integer (1, 32)		REL-7
>Support of PDSCH	MP		Boolean	TRUE means supported	REL-7
>CHOICE Support of HS- PDSCH	CV- not_iRAT_ HoInfo				REL-7
>>Supported					REL-7
>>>HS-DSCH physical layer category	MP		Integer (164)		REL-7
>>Unsupported				(no data)	REL-7
>Maximum number of physical channels per timeslot	MP		Integer (532)		REL-7
1.28 Mcps TDD downlink physical channel capability	CH- 1.28_Mcps _tdd_req_s up				REL-4
>Maximum number of timeslots per subframe	MP		Integer (16)		REL-4
>Maximum number of physical channels per subframe	MP		Integer (196)		REL-4
>Minimum SF	MP		Integer (1,		REL-4
>Support of PDSCH	MP		Boolean	TRUE means supported	REL-4
>CHOICE Support of HS- PDSCH	CV- not_iRAT_ HoInfo				REL-5
>>Supported					REL-5
>>>HS-DSCH physical layer category	MP		Integer (164)		REL-5
>>Unsupported				(no data)	REL-5
>Maximum number of physical channels per timeslot	MP		Integer (116)	,	REL-4

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
>Support of 8PSK	MP		Boolean	TRUE means supported	REL-4
Uplink physical channel capability information elements					
FDD uplink physical channel capability	CH- fdd_req_su p				
>Maximum number of DPDCH bits transmitted per 10 ms	MP		Integer (600, 1200, 2400, 4800. 9600, 19200. 28800, 38400, 48000, 57600)		
>CHOICE Support of E-DCH	CV- not_iRAT_ HoInfo				REL-6
>>Supported					REL-6
>>>E-DCH physical layer category	MP		Integer (116)		REL-6
>>Unsupported				(no data)	REL-6
3.84 Mcps TDD uplink physical channel capability	CH- 3.84_Mcps _tdd_req_s up				Name changed in REL-4
>Maximum Number of timeslots per frame	MP		Integer (114)		
>Maximum number of physical channels per timeslot	MP		Integer (1, 2)		
>Minimum SF	MP		Integer (1, 2, 4, 8)		
>Support of PUSCH	MP		Boolean	TRUE means supported	
7.68 Mcps TDD uplink physical channel capability	CH- 7.68_Mcps _tdd_req_s up				REL-7
>Maximum Number of timeslots per frame	MP		Integer (114)		REL-7
>Maximum number of physical channels per timeslot	MP		Integer (1, 2)		REL-7
>Minimum SF	MP		Integer (1, 2, 4, 8)		REL-7
>Support of PUSCH	MP		Boolean	TRUE means supported	REL-7
1.28 Mcps TDD uplink physical channel capability	CH- 1.28_Mcps _tdd_req_s up				REL-4
>Maximum Number of timeslots per subframe	MP		Integer (16)		REL-4
>Maximum number of physical channels per timeslot	MP		Integer (1, 2)		REL-4
>Minimum SF	MP		Integer (1, 2, 4, 8, 16)		REL-4
>Support of PUSCH	MP		Boolean	TRUE means supported	REL-4
>Support of 8PSK	MP		Boolean	TRUE means supported	REL-4

Condition	Explanation
3.84_Mcps_tdd_req_sup	The IE is mandatory present if the IE "TDD RF
	capability" is present with the IE "Chip rate capability"
	set to "3.84 Mcps" and a 3.84 Mcps TDD capability
	update has been requested in a previous message.
	Otherwise this field is not needed in the message.
7.68_Mcps_tdd_req_sup	The IE is mandatory present if the IE "TDD RF
	capability" is present with the IE "Chip rate capability"
	set to "7.68 Mcps" and a 7.68 Mcps TDD capability
	update has been requested in a previous message.
	Otherwise this field is not needed in the message.
1.28_Mcps_tdd_req_sup	The IE is mandatory present if the IE "TDD RF
	capability" is present with the IE "Chip rate capability"
	set to "1.28 Mcps" and a 1.28 Mcps TDD capability
	update has been requested in a previous message.
	Otherwise this field is not needed in the message.
fdd_req_sup	The IE is mandatory present if the IE "Multi-mode
	capability" has the value "FDD" or "FDD/TDD" and a
	FDD capability update has been requested in a
	previous message. Otherwise this field is not needed
	in the message.
not_iRAT_HoInfo	The CHOICE Support of HS-PDSCH is not needed in
	the INTER RAT HANDOVER INFO message.
	Otherwise, it is mandatory present.
not_iRAT_HoInfo	The CHOICE Support of E-DCH is not needed in the
	INTER RAT HANDOVER INFO message.
	Otherwise, it is mandatory present.

10.3.3.26 Protocol error cause

This IE indicates the cause for a message or information that was not comprehended.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error cause	MP		Enumerated (ASN.1 violation or encoding error, Message type non-existent or not implemented , Message not compatible with receiver state, Information element value not comprehend ed, Information element missing, Message extension not comprehend ed)	Two spare values are needed.

10.3.3.27 Protocol error indicator

This IE indicates whether a message was transmitted due to a protocol error or not.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Protocol error indicator	MP		Boolean	TRUE means a protocol error occurred. FALSE means a protocol error did not occur.

10.3.3.28 RB timer indicator

This IE is used to indicate to UTRAN if the timers T314 or T315 has expired in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
T314 expired	MP		Boolean	TRUE means that the timer has expired or the stored value is zero. FALSE means that the timer has not expired.
T315 expired	MP		Boolean	TRUE means that the timer has expired or the stored value is zero. FALSE means that the timer has not expired.

10.3.3.29 Redirection info

This IE is used to redirect the UE to another frequency or other system. With the Release 6 version a list of cells may be provided to the UE, where cell selection shall be started.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE Redirection Information	MP				
>Frequency info			Frequenc y info 10.3.6.36		
>Inter-RAT info			Inter-RAT info 10.3.7.25		

10.3.3.30 Re-establishment timer

This information element indicates which timer to associate with RAB.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Re-establishment timer	MP		Enumerated(useT314,	
			useT315)	

10.3.3.31 Rejection cause

Cause for rejection of RRC connection establishment request.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Rejection cause	MP		Enumerated(
			congestion,	
			unspecified)	

10.3.3.32 Release cause

Cause for release of RRC connection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Release cause	MP		Enumerated (normal event, unspecified, pre-emptive release, congestion, re-establishme nt reject, user inactivity), directed signalling connection re-establishme nt)	One spare value is needed.

10.3.3.32a RF Capability Compressed

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE FDD	MP				REL-5
>Supported					REL-5
>>RF capability band FDD list Compressed	MP	1 <maxf reqband sFDD></maxf 			REL-5
		1 <maxf reqband sFDD- ext></maxf 			REL-6
>>>RF Capability Band FDD Compressed	MP		Enumerated (not supported, default TxRx separation)	TX/RX frequency separation capability for the supported frequency band(s). Default is the TX/RX frequency separation defined in [21] for each frequency band. Two spare values are needed.	REL-5
>Not supported			NULL		REL-5
CHOICE TDD-3.84Mcps	MP				REL-5
>Supported					REL-5
>>Radio Frequency Band TDD List	MP		Enumerated (a, b, c, a+b, a+c, b+c, a+b+c)	As defined in [22]. One spare value needed	REL-5
>Not supported			NULL		REL-5
CHOICE TDD-7.68Mcps	MP				REL-7
>Supported					REL-7
>>Radio Frequency Band TDD List	MP		Enumerated (a, b, c, a+b, a+c, b+c, a+b+c)	As defined in [22]. One spare value needed	REL-7
>Not supported			NULL		REL-7
CHOICE TDD-1.28Mcps	MP				REL-5
>Supported					REL-5
>>Radio Frequency Band TDD List	MP		Enumerated (a, b, c, a+b, a+c, b+c, a+b+c)	As defined in [22]. One spare value needed	REL-5
>Not supported			NULL		REL-5

10.3.3.33 RF capability FDD

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
UE power class	MP		Enumerated(14)	As defined in [21]	
Tx/Rx frequency separation	MP		Enumerated(default TxRx separation)	Default is the TX/RX frequency separation defined in [21] for each frequency band. Two spare values are needed.	

10.3.3.33a RF capability FDD extension

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
UE power class extension	MP		Enumerated(As defined in [21]. Four spare
			14)	values are needed
Tx/Rx frequency separation	MP		Enumerated(default TxRx separation)	Default is the TX/RX frequency separation defined in [21] for each frequency band. Two spare values are needed.

10.3.3.33b RF capability TDD

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE power class	MP		Enumerated (14)	as defined in [22]
Radio frequency bands	MP		Enumerated(a, b, c, a+b, a+c, b+c, a+b+c)	as defined in [22]. One spare value needed.
Chip rate capability	MP		Enumerated(3.84Mcps, 7.68 Mcps,1.28M cps)	as defined in [22]

10.3.3.33c RF capability TDD 1.28 Mcps

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
Radio frequency bands	MP		Enumerated(as defined in [22].
			a, b, c, a+b,	One spare value needed.
			a+c, b+c,	
			a+b+c)	

10.3.3.34 RLC capability

Information Element/Group name	Need	Multi	Type and Referenc e	Semantics description	Version	
Total RLC AM buffer size	MP		Integer (10, 50, 100, 150, 500, 1000, 200, 300,	Total receiving and transmitting RLC AM buffer and MAC-hs reordering buffer capability in kBytes. Note 1.	REL-5	
			400, 750)			
Maximum RLC AM Window Size	MP		Integer(20 47,4095)	Maximum supported RLC TX and RX window in UE		
Maximum number of AM entities	MP		Integer (4,5,6,8,1 6,30)			

10.3.3.35 RLC re-establish indicator

This IE is used to re-configure AM RLC on c-plane and u-plane.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RLC re-establish indicator	MP		Boolean	TRUE means re-establish required FALSE means re-establish not required

10.3.3.350 RRC connection release information

Indicates whether the UE shall perform a release of the RRC connection.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE Release indicator	MD			Default value is	REL-5
				'No release'	
>No release					REL-5
>Release					REL-5
>>Release cause	MP		Release		REL-5
			cause		
			10.3.3.32		

10.3.3.35a RRC State Indicator

Indicates to a UE the RRC state to be entered.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RRC State indicator	MP		Enumerated(CELL_DCH, CELL_FACH, CELL_PCH, URA_PCH)	

10.3.3.36 RRC transaction identifier

This IE contains an identification of the RRC procedure transaction local for the type of the message this IE was included within.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
CHOICE RRC Tr ld type	MP				REL-5
>Normal					
>>RRC transaction	MP		Integer		
identifier			(03)		
>Extended					REL-5
>>RRC transaction	MP		Integer		REL-5
identifier			(015)		

CHOICE RRC Tr Id type	Condition under which the given RRC Tr Id type is chosen
Normal	All cases where the RRC Tr Id type: Extended is not chosen.
Extended	Optional in the MEASUREMENT CONTROL message. Mandatory in
	the MEASUREMENT CONTROL FAILURE message.

10.3.3.37 Security capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ciphering algorithm capability	MP			
>UEA0	MP		Boolean	
>UEA1	MP		Boolean	
>Spare	MP	14	Boolean	Shall be set to FALSE by UEs complying with this version of the protocol.
Integrity protection algorithm capability	MP			
>UIA1	MP		Boolean	The value TRUE means that UIA1, Kasumi, is supported
>Spare	MP	15	Boolean	Shall be set to FALSE by UEs complying with this version of the protocol.

10.3.3.38 START

There is a START value per CN domain. The START is used to initialise the 20~MSBs of all hyper frame numbers (MAC-d HFN, RLC UM HFN, RLC AM HFN, RRC HFN) for a CN domain.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
START	MP		Bit string (20)	START [40]. The first/leftmost bit of the bit string contains the most significant bit of the START.

10.3.3.39 Void

10.3.3.40 Transport channel capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Downlink transport channel capability information elements				
Max no of bits received	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all transport blocks received at an arbitrary time instant
Max convolutionally coded bits received	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all convolutionally coded transport blocks received at an arbitrary time instant
Max turbo coded bits received	CV- turbo_dec_ sup		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680,	Maximum sum of number of bits of all turbo coded transport blocks received at an arbitrary time instant

531

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
			8960, 10240, 20480, 40960, 81920, 163840)	
Maximum number of simultaneous transport channels	MP		Integer(4, 8, 16, 32)	
Maximum number of simultaneous CCTrCH	MP		Integer (18)	
Max no of received transport blocks	MP		Integer(4, 8, 16, 32, 48, 64, 96, 128, 256, 512)	Maximum total number of transport blocks received within TTIs that end at within the same 10ms interval
Maximum number of TFC	MP		Integer(16, 32, 48, 64, 96, 128, 256, 512, 1024)	
Maximum number of TF	MP		Integer(32, 64, 128, 256, 512, 1024)	
Support for turbo decoding	MP		Boolean	TRUE means supported
Uplink transport channel capability information elements				
Max no of bits transmitted	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all transport blocks transmitted at an arbitrary time instant
Max convolutionally coded bits transmitted	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all convolutionally coded transport blocks transmitted at an arbitrary time instant
Max turbo coded bits transmitted	CV- turbo_enc_ sup		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all turbo coded transport blocks transmitted at an arbitrary time instant
Maximum number of simultaneous transport channels	MP		Integer(4, 8, 16, 32)	
Maximum number of simultaneous CCTrCH of DCH type	CH- tdd_req_su p		Integer (18)	
Max no of transmitted transport blocks	MP		Integer(4, 8, 16, 32, 48, 64, 96, 128, 256, 512)	Maximum total number of transport blocks transmitted within TTIs that start at the same time
Maximum number of TFC	MP		Integer(16, 32, 48, 64, 96, 128, 256, 512, 1024)	
Maximum number of TF	MP		Integer(32, 64, 128, 256,	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
			512, 1024)	
Support for turbo encoding	MP		Boolean	TRUE means supported

Condition	Explanation
turbo_dec_sup	The IE is mandatory present if the IE "Support of turbo decoding" = True. Otherwise this field is not needed in the message.
turbo_enc_sup	The IE is mandatory present if the IE "Support of turbo encoding" = True. Otherwise this field is not needed in the message.
tdd_req_sup	The IE is mandatory present if the IE "Multi-mode capability" has the value "TDD" or "FDD/TDD" and a TDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.

10.3.3.41 UE multi-mode/multi-RAT capability

Information Element/Group name	Need	Multi	Type and Referenc e	Semantics description	Version
Multi-RAT capability					
Support of GSM	MP		Boolean		
Support of multi-carrier	MP		Boolean		
Multi-mode capability	MP		Enumerat ed (TDD, FDD, FDD/TDD		
Support of UTRAN to GERAN NACC	CV- not_iRA T_HoInf o		Boolean		REL-5
Support of Handover to GAN	OP		Enumerat ed (DoesSup portHand overToGA N)	Absence of this IE means that the UE does not support Handover to GAN.	REL-6
Support of Inter-RAT PS handover	CV- not_iRA T_HoInf o2		Enumerat ed (DoesSup portInter- RAT-PS- Handover	Absence of this IE means that the UE does not support Inter- RAT PS Handover	REL-6

Condition	Explanation
not_iRAT_HoInfo	The IE is not needed in the INTER RAT HANDOVER
	INFO message. Otherwise, it is mandatory present.
CV-not_iRAT_HoInfo2	The IE is not needed in the INTER RAT HANDOVER
	INFO message. Otherwise, it is optional.

NOTE: The UE sets the capability of Inter-RAT PS Handover (by means of the IE "Support of Inter-RAT PS handover") to the same value as the corresponding GERAN capability in [5].

10.3.3.42 UE radio access capability

Information Element/Group	Need	Multi	Type and	Semantics	Version
name Access stratum release indicator	MP		reference Enumerated(description Indicates the	
Access stratum release indicator	IVIP		R99)	release of the UE	
			1(33)	according to [35].	
				The IE also	
				indicates the	
				release of the	
				RRC transfer	
				syntax supported	
				by the UE	
	CV-		Enumerated(12 spare values	REL-4
	not_rrc_co nnectionSe		REL-4,	are needed.	REL-5
	tupComple		REL-5, REL-6,		REL-5
	te		REL-7)		REL-7
DL capability with simultaneous	CV-		Enumerated(REL-7
HS-DSCH configuration	not_iRAT_		32kbps,		IXLL-5
The Been comiguration	Holnfo		64kbps,		
			128kbps,		
			384kbps)		
PDCP capability	MP		PDCP		
			capability		
			10.3.3.24		
RLC capability	MP		RLC		
			capability		
T	145		10.3.3.34		
Transport channel capability	MP		Transport		
			channel		
			capability 10.3.3.40		
RF capability FDD	OP		RF capability		
	OF		FDD		
			10.3.3.33		
RF capability TDD	OP		RF capability	One "TDD RF	
, ,			TDD '	capability" entity	
			10.3.3.33b	shall be included	
				for every Chip rate	
				capability	
		40		supported.	DEL 4
RF capability TDD 1.28 Mcps	CV-	1 to 2	DE sanahilitu	Note 1	REL-4
RF capability TDD 1.28 Mcps	iRAT_HoIn		RF capability TDD 1.28	Note 1	REL-4
	fo		Mcps		
	10		10.3.3.33c		
Physical channel capability	MP		Physical		
			channel		
			capability		
			10.3.3.25		
UE multi-mode/multi-RAT	MP		UE multi-		
capability			mode/multi-		
			RAT		
			capability 10.3.3.41		
Security capability	MP		Security		
	1411		capability		
			10.3.3.37		
UE positioning capability	MP		UE		
			positioning		
			capability		
	0)/		10.3.3.45		
Measurement capability	CV-		Measuremen		
	fdd_req_su		t capability		
Doving type	<i>p</i>		10.3.3.21	Aboonse of this	DELG
Device type	MD	İ	Enumerated	Absence of this	REL-6

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
			(DoesNotBe nefitFromBat teryConsum ptionOptimis	value means that the device does benefit from NW- based battery	
			ation)	consumption optimisation.	
				UE may set the value to DoesNotBenefitFr	
				omBatteryConsu mptionOptimisatio n when it does not foresee to	
				particularly benefit from NW-based	

Note 1: The second entity of the "RF capability TDD" is not needed in the INTER RAT HANDOVER INFO message: if both TDD 3.84/7.68 Mcps and TDD 1.28 Mcps are supported, the "RF capability TDD 1.28 Mcps" entity shall be used for TDD 1.28 Mcps; the "UE power class" in the "RF capability TDD" entity shall apply for both chip rates.

Condition	Explanation
fdd_req_sup	The IE is mandatory present if the IE "Multi-mode
	capability" has the value "FDD" or "FDD/TDD" and a
	FDD capability update has been requested in a
	previous message. Otherwise this field is not needed
	in the message.
not_rrc_connectionSetupComplete	The IE is not needed in the RRC CONNECTION
	SETUP COMPLETE message. Otherwise the IE is
	mandatory present.
not_iRAT_HoInfo	The IE is not needed in the INTER RAT HANDOVER
	INFO message. Otherwise, it is optional.
iRAT_HoInfo	The IE is optional in the INTER RAT HANDOVER
	INFO message. Otherwise, the IE is not needed.

10.3.3.420 UE radio access capability compressed

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Access stratum release indicator	MP		Enumerated(R99, REL-4, REL-5,	12 spare values are needed	REL-5
			REL-6, REL-7)		REL-6 REL-7
Total AM RLC buffer size exceeds 10 kByte	MP		BOOLEAN		REL-5
RF capability compressed	MP		RF capability compressed 10.3.3.32a		REL-5

10.3.3.42oa UE radio access capability comp 2

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
FDD physical channel capability	OP				REL-6
for HS-PDSCH/E-DCH					
>DL capability with simultaneous	MP		Enumerated (32,	Unit: kbps.	REL-6
HS-DSCH configuration			64, 128, 384)	-	
>HS-DSCH physical layer	MP		Integer (164)		REL-6
category					
>CHOICE Support of E-DCH	MP				REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>Supported					REL-6
>>>E-DCH physical layer category	MP		Integer (116)		REL-6
>>Unsupported				(no data)	REL-6

10.3.3.42a UE radio access capability extension

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Frequency band specific capability list	MP	1 to <maxfre qbandsF DD></maxfre 			
>Frequency band	MP		Enumerat ed(Band I, Band II,		
			Band III, Band VI, Band IV, Band V, Band VII, extension indicator)		REL-5 REL-6
>Frequency band 2	OP		Enumerat ed(Band VIII, Band IX, extension Indicator)	This IE indicates the supported frequency bands Band VIII and beyond. Thirteen spare values are needed	REL-6
>RF capability FDD extension	MD		RF capability FDD extension 10.3.3.33 a	the default values are the same values as in the immediately preceding IE "RF capability FDD extension"; the first occurrence is MP	
>Measurement capability extension	MP		Measure ment capability extension 10.3.3.21 a		

10.3.3.42b UE security information

Upon receiving a UE information request from another system, the UE shall indicate the requested security information. The UE security information includes the following RRC information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE information elements				
START-CS	MP		START	START values to be used in
			10.3.3.38	this CN domain.

10.3.3.42c UE security information2

Upon receiving a UE information request from another system, the UE shall indicate the requested security information. The UE security information includes the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
START-PS	MP		START	START values to be used in	Rel-6
			10.3.3.38	this CN domain.	

10.3.3.43 UE Timers and Constants in connected mode

This information element specifies timer- and constants values used by the UE in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
T301	MD		Integer(10 0, 200 2000 by step of 200, 3000, 4000, 6000, 8000)	Value in milliseconds. Default value is 2000. This IE should not be used by the UE in this release of the protocol. One spare value is needed.	
N301	MD		Integer(0 7)	Default value is 2. This IE should not be used by the UE in this release of the protocol.	
T302	MD		Integer(10 0, 200 2000 by step of 200, 3000, 4000, 6000, 8000)	Value in milliseconds. Default value is 4000. One spare value is needed.	
N302	MD		Integer(0 7)	Default value is 3.	
T304	MD		Integer(10 0, 200, 400, 1000, 2000)	Value in milliseconds. Default value is 2000. Three spare values are needed.	
N304	MD		Integer(0 7)	Default value is 2	
T305	MD		Integer(5, 10, 30, 60, 120, 360, 720, infinity)	Value in minutes. Default value is 30. Infinity means no update	
T307	MD		Integer(5, 10, 15, 20, 30, 40, 50)	Value in seconds. Default value is 30. One spare value is needed.	
T308	MD		Integer(40 , 80, 160, 320)	Value in milliseconds. Default value is 160.	
T309	MD		Integer(1	Value in seconds. Default value is 5.	
T310	MD		Integer(40 320 by step of 40)	Value in milliseconds. Default value is 160.	
N310	MD		Integer(0 7)	Default value is 4.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
T311	MD		Integer(25 0 2000 by step of 250)	Value in milliseconds. Default value is 2000.	
T312	MD		Integer (015)	Value in seconds. Default value is 1. The value 0 is not used in this version of the specification.	
N312	MD		Integer (1, 2, 4, 10, 20, 50, 100, 200, 400, 600, 800, 1000)	Default value is 1.	
T313	MD		Integer (015)	Value in seconds. Default value is 3.	
N313	MD		Integer (1, 2, 4, 10, 20, 50, 100, 200)	Default value is 3.	
T314	MD		Integer(0, 2, 4, 6, 8, 12, 16, 20)	Value in seconds. Default value is 12.	
T315	MD		Integer (0,10, 30, 60, 180, 600, 1200, 1800)	Value in seconds. Default value is 180.	
N315	MD		Integer (1, 2, 4, 10, 20, 50, 100, 200, 400, 600, 800, 1000)	Default value is 1.	
T316	MD		Integer(0, 10, 20, 30, 40, 50, infinity)	Value in seconds. Default value is 30. One spare value is needed.	
T317	MD			Default value is infinity.	
			Enumerat ed (infinity, infinity, infinity)	All the values are changed to "infinity" in the Rel-5.	REL-5

10.3.3.44 UE Timers and Constants in idle mode

This information element specifies timer- and constant values used by the UE in idle mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
T300	MP		Integer(100,	Value in milliseconds. Default

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			200 2000 by step of 200, 3000, 4000, 6000, 8000)	value is 1000. Use of Default is described in 10.2.48.8.4 and in 10.2.48.8.16.
N300	MP		Integer(07)	Default value is 3. Use of Default is described in 10.2.48.8.4 and in 10.2.48.8.16.
T312	MP		Integer(0 15)	Value in seconds. Default value is 1. Use of Default is described in 10.2.48.8.4 and in 10.2.48.8.16. The value 0 is not used in this version of the specification.
N312	MP		Integer (1, 2, 4, 10, 20, 50, 100, 200, 400, 600, 800, 1000)	Default value is 1. Use of Default is described in 10.2.48.8.4 and in 10.2.48.8.16.

10.3.3.45 UE positioning capability

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Standalone location method(s) supported	MP		Boolean	Defines if a UE can measure its location by some means unrelated to UTRAN TRUE means supported
UE based OTDOA supported	MP		Boolean	TRUE means supported
Network Assisted GPS support	MP		Enumerated ('Network based', 'UE based', 'Both', 'None')	Defines if the UE supports network based or UE based GPS methods.
Support for GPS timing of cell frames measurement	MP		Boolean	Defines if a UE has the capability to perform the UE GPS timing of cell frames measurement [7]. TRUE means capable
Support for IPDL	MP		Boolean	Defines if a UE has the capability to use IPDL to enhance its 'SFN-SFN observed time difference –type 2' measurement. TRUE means supported
Support for Rx-Tx time difference type2 measurement	MP		Boolean	TRUE means supported
Support for UP assisted GPS measurement validity in CELL_PCH and URA_PCH states	CV- GPSsuppo rted		Enumerated (true)	
Support for SFN-SFN observed time difference type 2 measurement	OP		Enumerated (true)	Absence of this element means not supported and presence means supported.

Condition	Explanation		
GPSsupported	This IE is mandatory present if the IE 'Network		
	Assisted GPS support' is set to 'Network based', 'UE		
	based' or 'Both'. Otherwise, it is not needed.		

10.3.3.46 URA update cause

Indicates the cause for s URA update.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA update cause	MP		Enumerated(change of URA, periodic URA update)	One spare value is needed.

10.3.3.47 U-RNTI

The U-RNTI (UTRAN Radio Network Temporary Identity) is allocated to a UE having a RRC connection and identifies the UE within UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SRNC identity	MP		bit string(12)	The SRNC identity bits are numbered b20 to b31, where b20 is the least significant bit.
S-RNTI	MP		bit string(20)	The S-RNTI bits are numbered b0 to b19, where b0 is the least significant bit.

10.3.3.47a U-RNTI group

The U-RNTI group is used to identify a group of UEs having an RRC connection.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE group discrimimator	MP				REL-5
>AII				(no data)	REL-5
>U-RNTI mask					REL-5
>>U-RNTI	MP		U-RNTI 10.3.3.47	The bits that are less significant than the bit position indicated by the U-RNTI bit mask index shall be ignored.	REL-5
>>U-RNTI bit mask index	MP		Enumerated(b1, b2,b31)	Values b1 to b19 indicate bit positions in the S-RNTI. Values b20 to b31 indicate bit positions in the SRNC identity.	REL-5

10.3.3.48 U-RNTI Short

The U-RNTI (UTRAN Radio Network Temporary Identity) is allocated to a UE having a RRC connection and identifies the UE within UTRAN.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
SRNC identity	MP		bit string(12)	The SRNC identity bits are
				numbered b20 to b31, where
				b20 is the least significant bit.
S-RNTI 2	MP		bit string(10)	The S-RNTI 2 bits are
				numbered b0 to b9, where b0
				is the least significant bit.

10.3.3.49 UTRAN DRX cycle length coefficient

A coefficient in the formula to count the paging occasions to be used by a specific UE (specified in [4]).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DRX cycle length coefficient	MP		Integer(39)	Refers to 'k' in the formula as specified in [4], Discontinuous reception

10.3.3.50 Wait time

Wait time defines the time period the UE has to wait before repeating the rejected procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Wait time	MP		Integer(0 15)	Wait time in seconds The value 0 indicates that
				repetition is not allowed.

10.3.3.51 UE Specific Behaviour Information 1 idle

This IE indicates the UE conformance typically for RRC connection establishment from idle mode.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE Specific Behaviour	MP		bit string(4)	
Information 1 idle				

10.3.3.52 UE Specific Behaviour Information 1 interRAT

This IE indicates the UE conformance typically for RRC connection establishment from another RAT.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE Specific Behaviour Information 1 interRAT	MP		bit string(8)	

10.3.4 Radio Bearer Information elements

10.3.4.0 Default configuration identity

This information element identifies a default radio parameter configuration. The corresponding default configurations are specified in subclause 13.7.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Default configuration identity	MP		Integer (010,		
			11, 12,		REL-4
			13,	Default	REL-5
				configuration ID 2	
				is not used.	
			14, 15, 16		REL-6
			17,	Used only in RRC	REL-6
				Connection Setup	
				and Handover To	
				UTRAN	
				Command	
				messages.	
			1822,		REL-6
			2331)	Reserved for	REL-6
				future extension	

10.3.4.1 Downlink RLC STATUS info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timer_Status_Prohibit	OP		Integer(105 50 by step of 10, 5501000 by step of 50)	Minimum time in ms between STATUS reports
Missing PDU Indicator	MP		Boolean	Value true indicates that UE should send a STATUS report for each missing PDU that is detected
Timer_STATUS_periodic	OP		Integer(100, 200, 300, 400, 500, 750, 1000, 2000)	Time in milliseconds

10.3.4.1a PDCP context relocation info

This information element indicates that the header compression context relocation is to be performed during SRNS relocation for the given radio bearer.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RB identity	MP		RB identity 10.3.4.16		REL-5
Downlink RFC 3095 context relocation indication	MP		Boolean	TRUE means RFC 3095 context relocation is performed in downlink	REL-5
Uplink RFC 3095 context relocation indication	MP		Boolean	TRUE means RFC 3095 context relocation is performed in uplink	REL-5

10.3.4.2 PDCP info

The purpose of the PDCP info IE is to indicate which algorithms shall be established and to configure the parameters of each of the algorithms.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Support for lossless SRNS relocation or for lossless DL	CV- LosslessCr		Boolean	TRUE means support	
RLC PDU size change Max PDCP SN window size	iteria CV- Lossless		Enumerated(s n255, sn65535)	Maximum PDCP sequence number window size. The handling of sequence number when the Max PDCP SN window size is 255 is specified in [23].	
PDCP PDU header	MP		Enumerated (present, absent)	Whether a PDCP PDU header is existent or not.	
Header compression information	OP	1 to <maxpdc PAlgoTyp e></maxpdc 			
>CHOICE algorithm type	MP				
>>RFC 2507				Header compression according to IETF standard RFC 2507	
>>>F_MAX_PERIOD	MD		Integer (165535)	Largest number of compressed non- TCP headers that may be sent without sending a full header. Default value is 256.	
>>>F_MAX_TIME	MD		Integer (1255)	Compressed headers may not be sent more than F_MAX_TIME seconds after sending last full header. Default value is 5.	
>>>MAX_HEADER	MD		Integer (6065535)	The largest header size in octets that may be compressed. Default value is 168.	
>>>TCP_SPACE	MD		Integer (3255)	Maximum CID value for TCP connections. Default value is 15.	
>>>NON_TCP_SPACE	MD		Integer (365535)	Maximum CID value for non-TCP connections. Default value is 15.	
>>>EXPECT_REORDERING	MD		Enumerated (reordering not expected, reordering expected)	Whether the algorithm shall reorder PDCP SDUs or not. Default value is "reordering not expected".	
>>RFC 3095				Header compression	REL-4

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
name			Totoronoc	according to IETF standard RFC 3095	
>>>Profiles	MP	1 to <maxro HC- Profiles></maxro 		Profiles supported by both compressor and decompressor in both UE and UTRAN. Profile 0 shall always be supported.	REL-4
>>>>Profile instance	MP		Integer(1 3)	1 = 0x0001, 2 = 0x0002, 3 = 0x0003 (see [52])	REL-4
>>>Uplink	OP			Indicates the necessary information elements for Uplink.	REL-4
>>>>CID inclusion info	MP		Enumerated (PDCP header, RFC3095 packet format)	Configures which method shall be used to carry RFC3095 CID values.	REL-4
>>>>Max_CID	MD		Integer (1 16383)	Highest context ID number to be used by the UE compressor. Default value is 15.	REL-4
>>>Downlink	OP			Indicates the necessary information elements for Downlink.	REL-4
>>>>CID inclusion info	MP		Enumerated (PDCP header, RFC3095 packet format)	Configures which method shall be used to carry RFC3095 CID values.	REL-4
>>>>Max_CID	MD		Integer (1 16383)	Highest context ID number to be used by the UE decompressor. Default value is 15.	REL-4
>>>>Reverse_Decompression_ Depth	MD		Integer (065535)	Determines whether reverse decompression should be used or not and the maximum number of packets that can be reverse decompressed by the UE decompressor. Default value is 0 (reverse decompression shall not be used).	REL-4

Condition	Explanation
LosslessCriteria	This IE is mandatory present if the IE "RLC mode" is "Acknowledged", the IE "In-sequence delivery " is "True" and the IE "SDU Discard Mode" is "No discard"
	and not needed otherwise.
Lossless	This IE is mandatory present if the IE "Support for lossless SRNS relocation or for lossless RLC PDU
	size change" Is TRUE, otherwise it is not needed.

10.3.4.2a PDCP ROHC target mode

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
Target Mode	MP		Enumerated (O-mode, R- mode)	The UE shall only transit to the signalled mode for operation of ROHC as decribed in [36].	REL-5

10.3.4.3 PDCP SN info

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Receive PDCP sequence number	MP		Integer(065 535)	The PDCP sequence number, which the sender of the message is expecting next to be received.

10.3.4.4 Polling info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timer_poll_prohibit	OP		Integer(105 50 by step of 10, 6001000 by step of 50)	Minimum time between polls in ms
Timer_poll	OP		Integer(105 50 by step of 10, 6001000 by step of 50)	Time in ms.
Poll_PDU	OP		Integer(1,2,4 ,8,16,32,64,1 28)	Number of PDUs, interval between pollings
Poll_SDU	OP		Integer(1,4,1 6,64)	Number of SDUs, interval between pollings
Last transmission PDU poll	MP		Boolean	TRUE indicates that poll is made at last PDU in transmission buffer
Last retransmission PDU poll	MP		Boolean	TRUE indicates that poll is made at last PDU in retransmission buffer
Poll_Window	OP		Integer(50,6 0,70,80,85,9 0,95,99)	Percentage of transmission window, threshold for polling
Timer_poll_periodic	OP		Integer(100, 200, 300, 400, 500, 750, 1000, 2000)	Time in milliseconds Timer for periodic polling.

10.3.4.5 Predefined configuration identity

This information element identifies a pre- defined radio parameter configuration.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Predefined radio configuration identity	MP		Integer (015)	

10.3.4.5a Predefined configuration status information

Another system may provide the UE with one or more predefined UTRAN configurations, comprising of radio bearer, transport channel and physical channel parameters. If requested, the UE shall indicate the configurations it has stored. The predefined configuration status information should include the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB information elements				
Predefined configurations		maxPredef ConfigCou nt		The list is in order of preconfiguration identity
>Predefined configuration value tag	OP		Predefined configuration value tag 10.3.4.6	The UE shall include the value tag if it has stored the concerned configuration

Multi Bound	Explanation
MaxPredefConfigCount	Maximum number of predefined configurations

10.3.4.5b Predefined configuration status information compressed

Another system may provide the UE with one or more predefined UTRAN configurations, comprising of radio bearer, transport channel and physical channel parameters. If requested, the UE shall indicate the configurations it has stored. The compressed predefined configuration status information should include the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Sets with different value tags	MP				REL-5
>Pre-defined configuration set with different value tags	MP	12			REL-5
>>Start position	MD		INTEGER (010)	Default value is 0, corresponding with the first pre- defined configuration. The pre-defined configuration where the consecutive sequence of pre-defined configurations begins.	REL-5
>>Pre-defined configuration value tag list	MP	6 <max PredefC onfig></max 	Pre-defined configuration value tag 10.3.4.6	Value Tags for each pre-defined configuration starting from the lowest.	REL-5
Other Entries	OP				REL-5
>Pre-defined configuration list with variable size	MP	1 <max PredefC onfig></max 		List of other pre-defined configurations not included within the Sets with different value tags, in consecutive order starting with the lowest. If there are stored pre-defined configurations positioned after a pre-defined configuration that is not stored, the UE shall indicate the not-stored pre-defined configuration by explicitly indicating it to be absent. If there are no stored pre-defined configurations positioned after a pre-defined configuration that is not stored, then the UE may totally omit these pre-defined configurations from the IE, i.e. reduce the size of the list to correspond to the last position that contained a stored pre-defined configuration.	REL-5
>>Predefined configuration value tag	OP		Predefined configuration value tag 10.3.4.6	The UE shall include the value tag if it has stored the concerned configuration	REL-5

10.3.4.6 Predefined configuration value tag

This information element is used to identify different versions of a radio bearer configuration as may be used within one PLMN e.g. to support different UTRAN implementations.

Informa	tion Element/Group name	Need	Multi	Type and Reference	Semantics description
Predefine	d configuration value	MP		Integer(015	
tag)	

10.3.4.7 Predefined RB configuration

This information element concerns a pre- defined configuration of radio bearer parameters

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE information elements				
Re-establishment timer	MP		Re- establishme nt timer 10.3.3.30	Only one RAB supported
Signalling radio bearer information				
Signalling RB information to setup List	MP	1 to <maxsrbs etup></maxsrbs 		For each signalling radio bearer
>Signalling RB information to setup	MP		Signalling RB information to setup 10.3.4.24	
RB information				Only one RAB supported
RB information to setup list	MP	1 to <maxrbpe rRAB></maxrbpe 		
>RB information to setup	MP		RB information to setup 10.3.4.20	

10.3.4.8 RAB info

This IE contains information used to uniquely identify a radio access bearer.

Information Element/Group	Need	Multi	Type and	Semantics description	Version
name			reference	-	
RAB identity	MP		RAB identity		
-			10.3.1.14		
MBMS Session identity	CV-		MBMS		REL-6
-	Message		Session		
			identity		
			10.3.9a.9		
CN domain identity	MP		CN domain		
-			identity		
			10.3.1.1		
NAS Synchronization Indicator	OP		NAS		
			Synchronizat		
			ion indicator		
			10.3.4.12		
Re-establishment timer	MP		Re-		
			establishme		
			nt timer		
			10.3.3.30		

Condition	Explanation
Message	This IE is optionally present in the RADIO BEARER
	SETUP and the SRNS RELOCATION INFO
	messages and not needed otherwise.

10.3.4.9 RAB info Post

This IE contains information used to uniquely identify a radio access bearer.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB identity	MP		RAB identity 10.3.1.14	
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS Synchronization Indicator	OP		NAS Synchronizat ion indicator 10.3.4.12	

10.3.4.10 RAB information for setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB info	MP		RAB info 10.3.4.8	
RB information to setup list	MP	1 to <maxrbpe rRAB></maxrbpe 		
>RB information to setup	MP		RB information to setup 10.3.4.20	

10.3.4.11 RAB information to reconfigure

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RAB identity	MP		RAB Identity	
			10.3.1.14	
CN domain identity	MP		CN domain	
			identity	
			10.3.1.1	
NAS synchronization indicator	MP		NAS	
			Synchronizat	
			ion info	
			10.3.4.12	

10.3.4.12 NAS Synchronization indicator

A container for non-access stratum information to be transferred transparently through UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NAS Synchronization indicator	MP		Bit string(4)	The first/leftmost bit of the bit string contains the most significant bit of the NAS Synchronization indicator.

10.3.4.13 RB activation time info

This IE contains the time, in terms of RLC sequence numbers, when a certain configuration shall be activated, for a number of radio bearers.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Radio bearer activation time	MP	1 to <maxrb></maxrb>		
>RB identity	MP		RB identity 10.3.4.16	
>RLC sequence number	MP		Integer (0 4095)	RLC SN [16] . Used for radio bearers mapped on RLC AM and UM

10.3.4.14 RB COUNT-C MSB information

The MSB of the COUNT-C values of the radio bearer.

Information Element/Group name	Needed	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
COUNT-C-MSB-uplink	MP		Integer (0 2^25-1)	25 MSBs from COUNT-C associated to this RB
COUNT-C-MSB-downlink	MP		Integer (0 2^25-1)	25 MSBs from COUNT-C associated to this RB

10.3.4.15 RB COUNT-C information

The COUNT-C values of the radio bearer.

Information Element/Group name	Needed	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
COUNT-C-uplink	MP		Integer (0 2^32-1)	
COUNT-C-downlink	MP		Integer (0 2^32-1)	

10.3.4.16 RB identity

An identification number for the radio bearer affected by a certain message.

Information Element/Group	Need	Multi	Type and Semantics description	
name			reference	
RB identity	MP		Integer(132	Values 1-4 shall only be used for signalling radio bearers. The IE value minus one shall be used as BEARER in the ciphering algorithm.

10.3.4.17 RB information to be affected

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RB identity	MP		RB identity	
-			10.3.4.16	
RB mapping info	MP		RB mapping	
			info	
			10.3.4.21	

10.3.4.18 RB information to reconfigure

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RB identity	MP		RB identity	
			10.3.4.16	
PDCP info	OP		PDCP info	
			10.3.4.2	
PDCP SN info	OP		PDCP SN	PDCP sequence number info
			info	from the network. Present only
			10.3.4.3	in case of lossless SRNS
				relocation.
RLC info	OP		RLC info	
			10.3.4.23	
RB mapping info	OP		RB mapping	
			info	
			10.3.4.21	
RB stop/continue	OP		Enumerated(
			stop,	
			continue)	

10.3.4.19 RB information to release

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity	
			10.3.4.16	

10.3.4.20 RB information to setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
PDCP info	OP		PDCP info 10.3.4.2	
CHOICE RLC info type	MP			
>RLC info			RLC info 10.3.4.23	
>Same as RB			RB identity 10.3.4.16	Identity of RB with exactly the same RLC info IE values
RB mapping info	MP		RB mapping info 10.3.4.21	

NOTE: This information element is included within IE "Predefined RB configuration".

10.3.4.21 RB mapping info

A multiplexing option for each possible transport channel MAC-d flow or E-DCH MAC-d flow this RB can be multiplexed on.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Information for each multiplexing option	MP	1 to <maxrbm uxOptions></maxrbm 			
>RLC logical channel mapping indicator	CV-UL- RLCLogica IChannels		Boolean	TRUE indicates that the first logical channel shall be used for data PDUs and the second logical channel shall be used for control PDUs. FALSE indicates that control and data PDUs can be sent on either of the two logical channels. This parameter is not used in this release and shall be set to TRUE.	
>Number of uplink RLC logical channels	CV-UL- RLC info	1 to MaxLoCHp erRLC		1 or 2 logical channels per RLC entity or radio bearer RLC [16]	
>>CHOICE Uplink transport channel type					REL-6
>>>DCH, RACH, USCH >>>>Uplink transport channel type	MP		Enumerated(DCH,RACH, USCH	USCH is TDD only	KEL-0
>>>>ULTransport channel identity	CV-UL- DCH/USC H		Transport channel identity 10.3.5.18	This is the ID of a DCH or USCH (TDD only) that this RB could be mapped onto.	
>>>>Logical channel identity	ОР		Integer(115	This parameter is used to distinguish logical channels multiplexed by MAC on a transport channel.	
>>>>CHOICE RLC size list	MP			The RLC sizes that are allowed for this logical channel.	
>>>>All			Null	All RLC sizes listed in the Transport Format Set. 10.3.5.23	
>>>>Configured			Null	The RLC sizes configured for this logical channel in the <i>Transport Format Set</i> . 10.3.5.23 if present in this message or in the	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
				previously stored configuration otherwise	
>>>>Explicit List		1 to <maxtf></maxtf>		Lists the RLC sizes that are valid for the logical channel.	
>>>>>RLC size index	MP		Integer(1m axTF)	The integer number is a reference to the <i>RLC size</i> which arrived at that position in the <i>Transport Format Set</i> 10.3.5.23	
>>>E-DCH	MP		Into no v/4 45	Note 4	REL-6
>>>>Logical channel identity	MP		Integer(115	This parameter is used to distinguish logical channels multiplexed by MAC on a transport channel	REL-0
>>>E-DCH MAC-d flow identity	MP		E-DCH MAC-d flow identity 10.3.5.7e		REL-6
>>>>DDI	MP		Integer (062)	If more than 1 UL RLC PDU size is configured for this RB, the different sizes will use subsequent DDI values starting from this DDI value. Value '0x3F' is reserved	REL-6
>>>>RLC PDU size list	MP	1 to <maxrlc PDUsizeP erLogChan</maxrlc 			REL-6
>>>>RLC PDU size	MP		Integer(165 000 by step of 8)	Unit is bits	REL-6
>>>>Include in Scheduling Info	MP		Boolean	Indicates whether or not this logical channel is to be considered when performing scheduling info reporting, as per [15]	REL-6
>>MAC logical channel priority	MP		Integer(18)	This is priority between a user's different RBs (or logical channels). [15]	
>Downlink RLC logical channel info	CV-DL- RLC info				
>>Number of downlink RLC logical channels	MD	1 to MaxLoCHp erRLC		1 or 2 logical channels per RLC entity or radio bearer RLC [16]	

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
				Default value is that parameter values for DL are exactly the same as for corresponding UL logical channel. In case two multiplexing options are specified for the UL, the first options shall be used as default for the DL. As regards to the IE "Channel type", rule is specified in 8.6.4.8.	
>>>Downlink transport channel type	MP		Enumerated(DCH,FACH, DSCH,DCH+ DSCH , HS-DSCH, DCH + HS- DSCH)	Note 3	REL-5
>>>DL DCH Transport channel identity	CV-DL- DCH		Transport channel identity 10.3.5.18		
>>>DL DSCH Transport channel identity	CV-DL- DSCH		Transport channel identity 10.3.5.18		
>>>DL HS-DSCH MAC-d flow identity	CV-DL-HS- DSCH		MAC-d flow identity 10.3.5.7c		REL-5
>>>Logical channel identity	OP		Integer(115	16 is reserved	
Note 3: The IE "Downlink transport FDD. If received the UE			SCH' and 'DCH	+DSCH " should not b	e used for

FDD. If received the UE behaviour is unspecified.

If included in System Information Block Type 16, the values "HS-DSCH" and "DCH + HS-DSCH" do not apply for the IE "Downlink transport channel type". Furthermore, if included in System Information Block Type 16, the value "E-DCH" for the IE "Uplink transport channel type" does not Note 4: apply.

Condition	Explanation
UL-RLC info	If "CHOICE Uplink RLC mode" in the IE "RLC info"
	that applies for that RB (i.e. either the one stored or
	received in the same message for the RB for which
	the "RB mapping info" was received, or the one stored
	or received in the same message for the RB pointed
	at in the IE "Same as RB" in the IE "RB information to
	setup" stored or received in the same message) is
	present this IE is mandatory present. Otherwise the IE
	is not needed.
DL-RLC info	If "CHOICE Downlink RLC mode" in the IE "RLC info"
	that applies for that RB (i.e. either the one stored or
	received in the same message for the RB for which
	the "RB mapping info" was received, or the one stored
	or received in the same message for the RB pointed
	at in the IE "Same as RB" in the IE "RB information to
	setup" stored or received in the same message) is
	present this IE is mandatory present. Otherwise the IE
	is not needed.

UL-RLCLogicalChannels	If "Number of uplink RLC logical channels" in IE "RB mapping info" is 2, then this IE is mandatory present. Otherwise this IE is not needed.
UL-DCH/USCH	If IE "Uplink transport channel type" is equal to "DCH" or "USCH" (TDD only) this IE is mandatory present. Otherwise the IE is not needed.
DL-DCH	If IE "Downlink transport channel type" is equal to "DCH", "DCH+DSCH" or 'DCH + HS-DSCH' this IE is mandatory present. Otherwise the IE is not needed.
DL-DSCH	If IE "Downlink transport channel type" is equal to "DSCH" or "DCH+DSCH" this IE is mandatory present. Otherwise the IE is not needed.
DL-HS-DSCH	If IE "Downlink transport channel type" is equal to "HSDSCH" or 'DCH + HS-DSCH' this IE is mandatory present. Otherwise the IE is not needed.

10.3.4.22 RB with PDCP information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RB identity	MP		RB identity 10.3.4.16		
PDCP SN info	MP		PDCP SN info 10.3.4.3	PDCP sequence number info from the sender of the message for lossless SRNS relocation.	
				PDCP sequence number info from the sender of the message for lossless SRNS relocation or for lossless DL RLC PDU size change.	REL-5

10.3.4.23 RLC info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE Uplink RLC mode	OP			Indicates if Acknowledged, Unacknowledged or Transparent mode RLC shall be used.	
>AM RLC					
>>Transmission RLC discard	MP		Transmissio n RLC discard 10.3.4.25		
>>Transmission window size	MP		Integer(1,8,1 6,32,64,128, 256,512,768, 1024,1536,2 047,2560,30 72,3584,409 5)	Maximum number of RLC PUs sent without getting them acknowledged. This parameter is needed if acknowledged mode is used. UE shall also assume that the UTRAN receiver window is equal to this value.	
>>Timer_RST	MP		Integer(50, 100, 150, 200, 250, 300, 350, 400, 450, 500, 550, 600, 700, 800, 900, 1000)	Elapsed time in milliseconds. It is used to trigger the retransmission of RESET PDU.	
>>Max_RST	MP		Integer(1, 4, 6, 8, 12 16,	Defined in [16]	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			24, 32)		
>>Polling info	OP		Polling info 10.3.4.4		
>UM RLC					
>>Transmission RLC discard	OP		Transmissio n RLC discard 10.3.4.25		
>TM RLC					
>>Transmission RLC discard	OP		Transmissio n RLC discard 10.3.4.25		
>>Segmentation indication	MP		Boolean	TRUE indicates that segmentation is performed.	
CHOICE Downlink RLC mode	OP			Indicates if Acknowledged, Unacknowledged or Transparent mode RLC shall be used	
>AM RLC					
>>DL RLC PDU size	MP		Integer(165 000 by step of 8)	Unit is bits	REL-5
>>In-sequence delivery	MP		Boolean	TRUE indicates that RLC shall preserve the order of higher layer PDUs when these are delivered. FALSE indicates that receiving RLC entity could allow SDUs to be delivered to the higher layer in different order than submitted to RLC sublayer at the transmitting side.	
>>Receiving window size	MP		Integer(1,8,1 6,32,64,128, 256,512,768, 1024,1536,2 047,2560,30 72,3584,409 5)	Maximum number of RLC PUs allowed to be received. This parameter is needed if acknowledged mode is used. UE shall also assume that the UTRAN transmitter window is equal to this value	
>>Downlink RLC status Info	MP		Downlink RLC status info 10.3.4.1		
>UM RLC					
>>DL UM RLC LI size	MP		Integer(7, 15)	Size in bits to use for the downlink RLC UM LI.	REL-5
>>DL Reception Window Size	CV-Not- SIB160		Integer(32, 48, 64, 80, 96, 112)		REL-6
>TM RLC			. /		
>>Segmentation indication	MP		Boolean	TRUE indicates that segmentation is performed.	
One sided RLC re-establishment	MP		Boolean	TRUE indicates that only one side of the AM RLC entity is re-established.	REL-5
Alternative E-bit interpretation	CV-Not- SIB16o		Enumerated (true)	The absence of this IE implies: "normal E-bit interpretation".	REL-6

Condition	Explanation
Not-SIB160	If included in SYSTEM INFORMATION BLOCK TYPE
	16, this IE is not needed. Otherwise the IE is optional

NOTE: This information element is included within IE "Predefined RB configuration".

10.3.4.23a RLC info MBMS

The IE RLC info MBMS is used for point-to-multipoint radio bearers, featuring only the downlink RLC UMD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
DL UM RLC LI size	MP		Integer (7, 15)	Size in bits to use for the downlink RLC UM LI.	REL-6
DL Duplication Avoidance and Reordering info	CV-MTCH		UM Duplication Avoidance and Reordering info 10.3.4.26		REL-6
DL Out of sequence delivery info	CV-MCCH		UM Out of sequence delivery info 10.3.4.27		REL-6

Condition	Explanation
MTCH	If the IE concerns MTCH, this IE is optional.
	Otherwise the IE is not needed.
MCCH	If the IE concerns MCCH, this IE is optional.
	Otherwise the IE is not needed.

10.3.4.24 Signalling RB information to setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MD		RB identity 10.3.4.16	Default value is specified in subclause 8.6.4.1
CHOICE RLC info type	MP			
>RLC info			RLC info 10.3.4.23	
>Same as RB			RB identity 10.3.4.16	Identity of RB with exactly the same RLC info IE values
RB mapping info	MP		RB mapping info 10.3.4.21	

NOTE: This information element is included within IE "Predefined RB configuration".

10.3.4.25 Transmission RLC Discard

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE SDU Discard Mode	MP			Different modes for discharge the RLC buffer on the transmitter side; "Timer based with explicit signalling", "Timer based without explicit signalling", "Discard after Max_DAT retransmissions" or "No_discard". For unacknowledged mode and transparent mode, only Timer based without explicit signalling is applicable. If

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				"No_discard" is used, reset procedure shall be done after Max_DAT retransmissions
>Timer based explicit				
>>Timer_MRW	MP		Integer(50,6 0, 70, 80, 90, 100, 120, 140, 160, 180, 200, 300, 400, 500, 700, 900)	Elapsed time in milliseconds. It is used to trigger the retransmission of a STATUS PDU containing an MRW SUFI field
>>Timer_discard	MP		Integer(100, 250, 500, 750, 1000, 1250, 1500, 1750, 2000, 2500, 3000, 3500, 4000, 4500, 5000, 7500)	Elapsed time in milliseconds before a SDU is discarded.
>>MaxMRW	MP		Integer(1, 4, 6, 8, 12 16, 24, 32)	Defined in [16]
>Timer based no explicit				
>>Timer_discard	MP		Integer(10,2 0,30,40,50,6 0,70,80,90,1 00)	Elapsed time in milliseconds before a SDU is discarded.
>Max DAT retransmissions				
>>Max_DAT	MP		Integer(1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 35, 40)	Defined in [16]
>>Timer_MRW	MP		Integer(50, 60, 70, 80, 90, 100, 120, 140, 160, 180, 200, 300, 400, 500, 700, 900)	Elapsed time in milliseconds. It is used to trigger the retransmission of a STATUS PDU containing an MRW SUFI field
>>MaxMRW	MP		Integer(1, 4, 6, 8, 12 16, 24, 32)	Defined in [16]
>No discard				
>>Max_DAT	MP		Integer(1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 35, 40)	Defined in [16]

CHOICE SDU Discard Mode	Condition under which the given SDU Discard Mode is chosen
Timer based explicit	If the modes for discharge of the RLC buffer on the transmitter side is "Timer based with explicit signalling"
Timer based no explicit	If the modes for discharge of the RLC buffer on the transmitter side is "Timer based without explicit signalling" For unacknowledged mode, only Timer based without explicit signalling is applicable.
Max DAT retransmissions	If the modes for discharge of the RLC buffer on the transmitter side is "Discard after Max_DAT

	retransmissions"
No discard	If the modes for discharge the of RLC buffer on the transmitter side is "Reset procedure shall be done after Max DAT retransmissions"

10.3.4.26 UM Duplication Avoidance and Reordering info

Information Element/Group	Need	Multi	Type and	Semantics description	Version
name			reference		
Timer_DAR	MP		Integer(40, 80, 120, 160, 240, 320, 480, 640, 960, 1280, 1920, 2560, 3840, 5120)	Timer (in milliseconds) when PDUs are released to the upper layers even though there are outstanding PDUs with lower RLC SN values.	REL-6
Window size DAR	MP		Integer(4, 8, 16, 32, 40, 48, 56, 64)		REL-6

10.3.4.27 UM Out of sequence delivery info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Timer_OSD	CV-		Integer (40,		REL-6
	notMCCH		80, 120, 160,		
			240, 320,		
			480, 640,		
			960, 1280,		
			1920, 2560,		
			3840, 5120)		
Window size OSD	MP		Integer(8,		REL-6
			16, 32,40,		
			48, 56, 64)		

NOTE: This timer used to flush the buffer is configured at RRC level and indicated via a local primitive.

Condition	Explanation
notMCCH	If this concerns a logical channel other than MCCH then this IE is mandatory otherwise it is not needed. In the latter case Timer OSD takes the value of the IE
	Modification Period as indicated within the IE MCCH configuration information

10.3.5 Transport CH Information elements

10.3.5.1 Added or Reconfigured DL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Downlink transport channel type	MP		Enumerated(DCH,DSCH	Note 2	
			,HS-DSCH)	Note 1	REL-5
DL Transport channel identity	MP		Transport channel identity 10.3.5.18		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version	
	CV-not HS-DSCH				REL-5	
CHOICE DL parameters						
>Explicit						
>>TFS	MP		Transport Format Set 10.3.5.23			
>SameAsUL						
>>Uplink transport channel type	MP		Enumerated(DCH,USCH)	USCH is TDD only		
>>UL TrCH identity	MP		Transport channel identity 10.3.5.18	Same TFS applies as specified for indicated UL TrCH		
>HS-DSCH				Note 1	REL-5	
>>HARQ Info	OP		HARQ info 10.3.5.7a		REL-5	
>>Added or reconfigured MAC-d flow	OP		Added or reconfigured MAC-d flow 10.3.5.1a		REL-5	
DCH quality target	OP		Quality target 10.3.5.10			
Note 1: The IE "Downlink transport channel type" value "HS-DSCH" is not used in the RRC CONNECTION SETUP message, nor is the CHOICE <i>DL parameters</i> = "HS-DSCH".						
Note 2: The IE "Downlink transport channel type" value " DSCH " should not be used for FDD. If received the UE behaviour is unspecified.						

Condition	Explanation		
NotHS-DSCH	If the downlink transport channel type is DCH or		
	DSCH then this IE is mandatory otherwise it is not		
	needed.		

10.3.5.1a Added or reconfigured MAC-d flow

This IE is used in relation to the MAC-d flows mapped to the HS-DSCH transport channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
MAC-hs queue to add or reconfigure list	OP	<1 to maxQueue ID>			REL-5
>MAC-hs queue Id	MP		Integer(07)	The MAC-hs queue ID is unique across all MAC-d flows.	REL-5
>MAC-d Flow Identity	MP		MAC-d Flow Identity 10.3.5.7c		REL-5
>T1	MP		Integer(10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 120, 140, 160, 200, 300, 400)	Timer (in milliseconds) when PDUs are released to the upper layers even though there are outstanding PDUs with lower TSN values.	REL-5
>MAC-hs window size	MP		Integer(4, 6, 8, 12, 16, 24, 32)		REL-5
>MAC-d PDU size Info	OP	<1 to max MACdPDU sizes>		Mapping of the different MAC-d PDU sizes configured for the HS-DSCH to the MAC-d PDU size index in the MAC-hs header.	REL-5
>>MAC-d PDU size	MP		Integer (15000)		REL-5
>>MAC-d PDU size index	MP		Integer(07)		REL-5
MAC-hs queue to delete list	OP	<1 to maxQueue ID>			REL-5
>MAC-hs queue Id	MP		Integer(07)	The MAC-hs queue ID is unique across all MAC-d flows.	REL-5

10.3.5.1b Added or reconfigured E-DCH MAC-d flow

This IE is used in relation to MAC-d flows mapped to the E-DCH transport channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
E-DCH MAC-d flow identity	MP		E-DCH MAC-d flow identity 10.3.5.7e		REL-6
E-DCH MAC-d flow power offset	OP		Integer(06)	Only allowed to be absent when already defined for this E-DCH MAC-d flow, unit is dB	REL-6
E-DCH MAC-d flow maximum number of retransmissions	OP		Integer (015)	Only allowed to be absent when already defined for this E-DCH MAC-d flow	REL-6
E-DCH MAC-d flow multiplexing list	OP		Bitstring (maxE- DCHMACdFI ow)	Indicates, if this is the first MAC-d flow for which PDUs are placed in the MAC-e PDU, the other MAC-d flows from which MAC-d PDUs are allowed to be included in the same MAC-e PDU. Bit 0 is for MAC-d flow 0, Bit 1 is for MAC-d flow 1, Value '1' for a bit means multiplexing is allowed. Bit 0 is the first/leftmost bit of the bit string. NOTE: The bit that corresponds to the MAC-d flow itself is ignored.	REL-6
CHOICE transmission grant type	OP			Only allowed to be absent when already defined for this E-DCH MAC-d flow	REL-6
>Non-scheduled transmission grant info					REL-6
>>Max MAC-e PDU contents size	MP		Integer (119982)		REL-6
>>2ms non-scheduled transmission grant HARQ process allocation	MD		Bitstring (8)	MAC-d PDUs for this MAC-d flow are only allowed to be transmitted in those processes for which the bit is set to '1'. Bit 0 corresponds to HARQ process 0, bit 1 corresponds to HARQ process 1, Default value is: transmission in all	REL-6

		HARQ processes is allowed. Bit 0 is the first/leftmost bit of the bit string.
>Scheduled transmission grant info	NULL	REL-6

10.3.5.2 Added or Reconfigured UL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Uplink transport channel type	MP		Enumerated(DCH,USCH	USCH is TDD only	
			,E-DCH)	Note 1	REL-6
UL Transport channel identity	MP		Transport channel identity 10.3.5.18		
	CV-NotE- DCH				REL-6
CHOICE UL parameters					REL-6
>DCH,USCH					REL-6
>>TFS	MP		Transport Format Set 10.3.5.23		
>E-DCH					REL-6
>>E-DCH Transmission Time Interval	MP		Integer(2,10)	Unit is ms.	REL-6
>>HARQ info for E-DCH	MP		10.3.5.7d		REL-6
>>Added or reconfigured E-DCH MAC-d flow list	OP	<1 to maxE- DCHMACd Flow>			REL-6
>>>Added or reconfigured E-DCH MAC-d flow	MP		Added or reconfigured E-DCH MAC-d flow 10.3.5.1b	" does not apply for the IE "Upli	REL-6

Note 1: If included in System Information Block Type 16, the values "E-DCH" does not apply for the IE "Uplink transport channel type".

Condition	Explanation
NotE-DCH	If the uplink transport channel type is DCH or USCH
	then this IE is mandatory otherwise it is not needed.

NOTE: This information element is included within IE "Predefined RB configuration".

10.3.5.2a Additional Dynamic Transport Format Information for CCCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RLC Size	MP		Integer (164968 by step of 8)	Unit is bits	Rel-6
Number of Transport blocks	MP		Integer(1)		Rel-6

10.3.5.2b Additional RACH TFCS for CCCH

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Power offset Information	MP		Power Offset	The actual TFCS	Rel-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			Information 10.3.5.8	is specified in 8.6.5.12a	

10.3.5.3 Void

10.3.5.4 Deleted DL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version	
Downlink transport channel type	MP		Enumerated(DCH,DSCH	Note 1		
			,HS-DSCH)		REL-5	
DL Transport channel identity	MP		Transport channel identity 10.3.5.18			
	CV-notHS- DSCH				REL-5	
DL HS-DSCH MAC-d flow identity	CV-HS- DSCH		MAC-d flow identity 10.3.5.7c		REL-5	
Note 1: The IE "Downlink transport channel type" value " DSCH " should not be used for FDD. If received the UE behaviour is unspecified.						

Condition	Explanation
NotHS-DSCH	If the downlink transport channel type is DCH or DSCH then this IE is mandatory otherwise it is not needed.
HS-DSCH	If the downlink transport channel type is HSDSCH then this IF is mandatory otherwise it is not needed.

10.3.5.5 Deleted UL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Uplink transport channel type	MP		Enumerated(DCH,USCH	USCH is TDD only	
			,E-DCH)		REL-6
UL Transport channel identity	MP		Transport channel identity 10.3.5.18		
	CV-NotE- DCH				REL-6
E-DCH MAC-d flow identity	CV-E-DCH		E-DCH MAC-d flow identity 10.3.5.7e		REL-6

Condition	Explanation
NotE-DCH	If the uplink transport channel type is DCH or USCH
	then this IE is mandatory otherwise it is not needed.
E-DCH	If the uplink transport channel type is E-DCH then this
	IE is mandatory otherwise it is not needed.

10.3.5.6 DL Transport channel information common for all transport channels

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
SCCPCH TFCS	OP		Transport Format Combination Set 10.3.5.20	This IE should not be included in this version of the protocol.	
CHOICE mode	MP			Although this IE is not always required, need is MP to align with ASN.1	
	OP				REL-4
>FDD					
>>CHOICE <i>DL parameters</i> >>>Explicit	OP				
>>>DL DCH TFCS	MP		Transport Format Combination Set 10.3.5.20	Although this IE is not always required, need is MP to align with ASN.1	
	OP				REL-4
>>>SameAsUL				(no data) See note 2	
>TDD					
>>Individual DL CCTrCH information	OP	1 to <maxcctr CH></maxcctr 			
>>>DL TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Identifies a special CCTrCH for shared or dedicated channels.	
>>>CHOICE DL parameters	MP				
>>>Independent					
>>>>DL TFCS	MP		Transport format combination set 10.3.5.20		
>>>SameAsUL				See note 2	
>>>>UL DCH TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Same TFCS applies as specified for the indicated UL DCH TFCS identity except for information applicable for UL only	

NOTE 1: This information element is included within IE "Predefined TrCh configuration".

NOTE 2: The UTRAN should only use the choice "SameAsUL" if the transport channel numbering, the number of TFs in the TFS of each transport channel, and the TFCS are identical in the uplink and downlink.

10.3.5.7 Void

10.3.5.7a HARQ Info

This IE is used in relation to the HS-DSCH transport channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Number of Processes	MP		Integer (18)		REL-5
CHOICE Memory Partitioning	MP				REL-5
>Implicit				UE shall apply memory partitioning of equal size across all HARQ processes	REL-5
>Explicit					REL-5
>>Memory size	MP	<1 to MaxHProc esses>			REL-5
>>>Process Memory size	MP		Integer(800 16000 by step of 800, 17600 32000 by step of 1600, 36000 80000 by step of 4000, 88000 160000 by step of 8000, 176000 304000 by step of	Maximum number of soft channel bits available in the virtual IR buffer [27]	REL-5

10.3.5.7b Void

10.3.5.7c MAC-d Flow Identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
MAC-d flow identity	MP		Integer (07)		REL-5

10.3.5.7d HARQ Info for E-DCH

This IE is used in relation to the E-DCH transport channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
HARQ RV Configuration	MP		Enumerated (rv0, rvtable)	If 'rv0' is indicated, the UE shall only use E_DCH RV index 0. If 'rvtable' is indicated, the UE shall use an RSN based RV index as specified in [27]	REL-6

10.3.5.7e E-DCH MAC-d Flow Identity

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
E-DCH MAC-d flow identity	MP		Integer		REL-6
_			(0maxE-		
			DCHMACdFI		
			ow-1)		

10.3.5.8 Power Offset Information

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE Gain Factors	MP			
>Signalled Gain Factors				
>>CHOICE mode				
>>>FDD				
>>> Gain Factor β_c	MP		Integer (0 15)	For UL DPCCH or control part of PRACH
>>>TDD				(no data)
>>Gain Factor β_d	MP		Integer (015)	For UL DPDCH or data part of PRACH and all uplink channels in TDD
>>Reference TFC ID	OP		Integer (03)	If this TFC is a reference TFC, indicates the reference ID.
>Computed Gain Factors				
>>Reference TFC ID	MP		Integer (0 3)	Indicates the reference TFC Id of the TFC to be used to calculate the gain factors for this TFC. In case of using computed gain factors, at least one signalled gain factor is necessary for reference.
CHOICE mode	MP			
>FDD				
>>Power offset P p-m	OP		Integer(- 510)	In dB. Power offset between the last transmitted preamble and the control part of the message (added to the preamble power to receive the power of the message control part) Needed only for PRACH
>TDD				(no data)

CHOICE Gain Factors	Condition under which the way to signal the Gain Factors is chosen
Signalled Gain Factors	The values for gain factors β_c (only in FDD mode) and β_d are signalled directly for a TFC.
Computed Gain Factors	The gain factors β_c (only in FDD mode) and β_d are computed for a TFC, based on the signalled settings for the associated reference TFC.

10.3.5.9 Predefined TrCH configuration

This information element concerns a pre-defined configuration of transport channel parameters.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UL Transport channel information common for all transport channels	MP		UL Transport channel information common for all transport channels 10.3.5.24	
Added or Reconfigured TrCH information				
Added or Reconfigured UL TrCH information	MP	1 to <maxtrch preconf></maxtrch 		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigure d UL TrCH information 10.3.5.2	
DL Transport channel information common for all transport channels	MP		DL Transport channel information common for all transport channels 10.3.5.6	
Downlink transport channels				
Added or Reconfigured DL TrCH information	MP	1 to <maxtrch preconf></maxtrch 		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigure d DL TrCH information 10.3.5.1	

10.3.5.10 Quality Target

Information Element/Group name	Need	Multi	Type and reference	Semantics description
BLER Quality value	MP		Real(-6.3 0 by step of 0.1)	Signalled value is Log10(Transport channel BLER quality target)

10.3.5.11 Semi-static Transport Format Information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Transmission time interval	MP		Integer(10, 20, 40, 80, dynamic	In ms. The value dynamic is only used in TDD mode. For FDD DCH, the value '80' is applicable only when SF=512.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			5)	5 is only applicable for the RACH in 1.28 Mcps TDD	REL-4
Type of channel coding	MP		Enumerated(No coding, Convolutiona I, Turbo)	The option "No coding" is only valid for TDD.	
Coding Rate	CV-Coding		Enumerated(1/2, 1/3)		
Rate matching attribute	MP		Integer(1hi RM)		
CRC size	MP		Integer(0, 8, 12, 16, 24)	in bits	

Condition	Explanation
Coding	This IE is mandatory present if IE "Type of channel
	coding" is "Convolutional" and not needed otherwise.

10.3.5.12 Void

10.3.5.13 TFCS Explicit Configuration

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE TFCS representation	MP			
>Complete reconfiguration				
>>TFCS complete reconfiguration information	MP		TFCS Reconfigurat ion/Addition information 10.3.5.15	
>Addition				
>>TFCS addition information	MP		TFCS Reconfigurat ion/Addition information 10.3.5.15	
>Removal				
>>TFCS removal information	MP		TFCS Removal Information 10.3.5.16	
>Replace				
>>TFCS removal information	MP		TFCS Removal Information 10.3.5.16	
>>TFCS addition information	MP		TFCS Reconfigurat ion/Addition information 10.3.5.15	

10.3.5.14 Void

10.3.5.15 TFCS Reconfiguration/Addition Information

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE CTFC Size	MP			
>2 bit CTFC				
>>CTFC information	MP	1 to		
22011 Simonnauon		<maxtfc></maxtfc>		
>>>2bit CTFC	MP		Integer(03)	
>>>Power offset Information	OP		Power Offset	Needed only for uplink
	Oi		Information 10.3.5.8	physical channels.
>4 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>4bit CTFC	MP		Integer(015	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>6 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>6 bit CTFC	MP		Integer(063	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>8 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>8 bit CTFC	MP		Integer(025 5)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>12 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>12 bit CTFC	MP		Integer(040 95)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>16 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>16 bit CTFC	MP		Integer(065 535)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>24 bit CTFC				
>>CTFC information	MP	1 to <maxtfc></maxtfc>		
>>>24 bit CTFC	MP		Integer(016 777215)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.

10.3.5.16 TFCS Removal Information

Information Element/Group	Need	Multi	IE type and	Semantics description
name			reference	
Removal TFCI information	MP	1 to		
		<maxtfc></maxtfc>		
>TFCI	MP		Transport	In TDD 0 is a reserved value
			Format	
			Combination	
			(TFC)	
			10.3.5.19	

10.3.5.17 Void

10.3.5.18 Transport channel identity

This information element is used to distinguish transport channels. Transport channels of different type (RACH, USCH, FACH/PCH, DSCH or DCH) have separate series of identities. This also holds for uplink and downlink transport channel identities (i.e. for DCH). Depending on in which context a transport channel identity *n* that is sent, it will have different meaning

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport channel identity	MP		Integer(132	

10.3.5.19 Transport Format Combination (TFC)

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport format combination	MP		Integer (0 1023)	

10.3.5.20 Transport Format Combination Set

Indicates the allowed combinations of already defined Transport formats and the mapping between these allowed TFCs and the corresponding TFCI values.

For TDD, different coded composite transport channels have independent transport format combination sets and thus independent TFCI values.

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
TFCI Field 1 Information	MP		TFCS explicit Configuratio n 10.3.5.13	

10.3.5.21 Transport Format Combination Set Identity

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCS ID	MD		Integer	Indicates the identity of every

		(18)	TFCS within a UE. Default
			value is 1.
Shared Channel Indicator	MP	Boolean	TRUE indicates the use of shared channels. Default is
			false.

10.3.5.22 Transport Format Combination Subset

Indicates which Transport format combinations in the already defined Transport format combination set are allowed.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE Subset representation	MP			
>Minimum allowed Transport			Transport	
format combination index			format	
			combination	
			10.3.5.19	
>Allowed transport format		1 to		
combination list		<maxtfc></maxtfc>		
>>Allowed transport format	MP		Transport	
combination			format	
			combination	
			10.3.5.19	
>Non-allowed transport format		1 to		
combination list		<maxtfc></maxtfc>		
>>Non-allowed transport format	MP		Transport	
combination			format	
			combination	
			10.3.5.19	
>Restricted TrCH information		1 to		
		<maxtrch< td=""><td></td><td></td></maxtrch<>		
		>		
>>Uplink transport channel type	MP		Enumerated(USCH is TDD only
			DCH, USCH)	
>>Restricted UL TrCH identity	MP		Transport	
			channel	
			identity	
			10.3.5.18	
>>Allowed TFIs	OP	1 to		
		<maxtf></maxtf>		
>>>Allowed TFI	MP		Integer(031	
)	(1)
>Full transport format				(No data)
combination set				

10.3.5.23 Transport Format Set

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE Transport channel type	MP				
>Dedicated transport channels				The transport channel that is configured with this TFS is of type DCH	
>>Dynamic Transport Format Information	MP	1 to <maxtf></maxtf>			
>>>RLC Size	MP		Integer(165 000 by step of 8)	Unit is bits	
>>>Number of TBs and TTI List	MP	1 to <maxtf></maxtf>		Present for every valid number of TB's (and TTI) for this RLC Size.	
>>>Transmission Time Interval	CV- dynamicTT		Integer(10,2 0,40,80)	Unit is ms.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
	1				
>>>Number of Transport blocks	MP		Integer(051 2)		
>>>CHOICE Logical Channel List	MP			The logical channels that are allowed to use this RLC Size	
>>>ALL			Null	All logical channels mapped to this transport channel.	
>>>Configured			Null	The logical channels configured to use this RLC size in the <i>RB mapping info</i> . 10.3.4.21 if present in this message or in the previously stored configuration otherwise	
>>>Explicit List		1 to 15		Lists the logical channels that are allowed to use this RLC size.	
>>>>RB Identity	MP		RB identity 10.3.4.16		
>>>>LogicalChannel	CH-UL- RLCLogica IChannels		Integer(01)	Indicates the relevant UL logical channel for this RB. "0" corresponds to the first, "1" corresponds to the second UL logical channel configured for this RB in the IE "RB mapping info".	
>>Semi-static Transport Format Information	MP		Semi-static Transport Format Information 10.3.5.11		
>Common transport channels				The transport channel that is configured with this TFS is of a type not equal to DCH	
>>Dynamic Transport Format Information	MP	1 to <maxtf></maxtf>		Note	
>>>RLC Size	MP		Integer (165000 by step of 8)	Unit is bits. For FDD, values are restricted to: Integer (48296 by step of 8, 3121320 by step of 16, 13844968 by step of 64).	
>>>Number of TBs and TTI List	MP	1 to <maxtf></maxtf>		Present for every valid number of TB's (and TTI) for this RLC Size.	
>>>>Number of Transport blocks	MP		Integer(051 2)		
>>>>CHOICE mode	MP		·		
>>>>FDD				(no data)	
>>>>TDD >>>>>Transmission Time Interval	CV- dynamicTT		Integer(10,2 0,40,80)	Unit is ms.	
>>>CHOICE Logical Channel List	MP			The logical channels that are allowed to use this RLC Size.	
>>>ALL			Null	All logical channels mapped to this transport channel.	
>>>Configured			Null	The logical channels configured to use this RLC size in the <i>RB mapping info</i> . 10.3.4.21 if present in this message or in the previously stored configuration otherwise	
>>>Explicit List		1 to 15		Lists the logical channels that are allowed to use this RLC size.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>>RB Identity	MP		RB identity 10.3.4.16		
>>>>LogicalChannel	CV-UL- RLCLogica IChannels		Integer(01)	Indicates the relevant UL logical channel for this RB. "0" corresponds to the first, "1" corresponds to the second UL logical channel configured for this RB in the IE "RB mapping info".	
>>Semi-static Transport Format Information	MP		Semi-static Transport Format Information 10.3.5.11		

Condition	Explanation
dynamicTTI	This IE is mandatory present if dynamic TTI usage is indicated in IE Transmission Time Interval in Semistatic Transport Format Information. Otherwise it is not needed.
UL-RLCLogicalChannels	If "Number of uplink RLC logical channels" in IE "RB mapping info" in this message is 2 or the IE "RB mapping info" is not present in this message and 2 UL logical channels are configured for this RB, then this IE is mandatory present. Otherwise this IE is not needed.

10.3.5.24 UL Transport channel information common for all transport channels

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
PRACH TFCS	OP		Transport	This IE should not	
			format	be included in this	
			combination	version of the	
			set 10.3.5.20	protocol.	
CHOICE mode	OP				
>FDD					

>>TFC subset	MD		Transport Format Combination Subset 10.3.5.22	Default value is the complete existing set of transport format combinations	
>>UL DCH TFCS	MP		Transport format combination set 10.3.5.20		
>TDD					
>>Individual UL CCTrCH information	OP	1 to <maxcctr CH></maxcctr 			
>>>UL TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Identifies a special CCTrCH for shared or dedicated channels.	
>>>UL TFCS	MP		Transport format combination set 10.3.5.20		
>>>TFC subset	MD		Transport Format Combination Subset 10.3.5.22	Default value is the complete existing set of transport format combinations	
TFC subset list	OP	1 to <maxtfcs ub></maxtfcs 		The maximum number of elements in the TFC subset list is 8.	REL-4
>CHOICE mode	MP				REL-4
>>FDD				(no data)	REL-4
>>TDD				,	REL-4
>>>TFCS Id	OP		Transport Format Combination Set Identity 10.3.5.21		REL-4
>TFC subset	MD		Transport Format Combination Subset 10.3.5.22		REL-4

NOTE: This information element is included within IE "Predefined TrCh configuration".

10.3.6 Physical CH Information elements

10.3.6.1 AC-to-ASC mapping

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
AC-to-ASC mapping table	MP	maxASCm		
		ар		
>AC-to-ASC mapping	MP		Integer(07	Mapping of Access Classes to
)	Access Service Classes (see
				subclause 8.5.13.)

10.3.6.2 AICH Info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Channelisation code	MP		Integer(025 5)	SF is fixed and equal to 256
STTD indicator	MP		STTD Indicator 10.3.6.78	
AICH transmission timing	MP		Enumerated (0, 1)	See parameter AICH_Transmission_Timing in [26]

10.3.6.3 AICH Power offset

NOTE: Only for FDD.

This parameter is used to indicate the power level of AICH, AP-AICH and CD/CA-ICH channels. This is the power per transmitted Acquisition Indicator, AP Acquisition Indicator or CD/CA Indicator minus power of the Primary CPICH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
AICH Power offset	MP		Integer(- 22+5)	Offset in dB

10.3.6.4 Allocation period info

NOTE: Only for TDD.

Parameters used by UE to determine period of shared channel allocation.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	
Allocation Activation Time	MP		Integer (0255)	Start the allocation period at the given CFN.	
Allocation Duration	MP		Integer (1256)	Total number of frames for the allocation period.	

10.3.6.5 Alpha

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Alpha Value	MP		Enumerated(
			0, 1/8, 2/8,	
			3/8, 4/8, 5/8,	
			6/8, 7/8, 1)	

10.3.6.6 ASC setting

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE mode	MP				
>FDD					
>>Available signature Start Index	MP		Integer(015		
>>Available signature End Index	MP		Integer(015		
>>Assigned Sub-Channel	MP		Bit string(4)	This IE defines	

Number the subchannel assignment as specified in 8.6.6.29. The first/leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number	
specified in 8.6.6.29. The first/leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number	
8.6.6.29. The first/leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number	
The first/leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number	
bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number	
contains the most significant bit of the Assigned Sub-Channel Number	
significant bit of the Assigned Sub-Channel Number	
the Assigned Sub-Channel Number	
>TDD Channel Number	
>>CHOICE TDD option MP	REL-4
>>>3.84 Mcps TDD	REL-4
>>>Available Channelisation MD Bit string(8) Each bit indicates	
codes indices availability of a	
channelisation	
code index, where	
the channelisation	
code indices are numbered	
"channelisation	
code index 0" to	
"channelisation	
code index 7".	
The value 1 of a	
bit indicates that	
the channelisation	
code index is	
available for the	
ASC this IE is	
associated to. The	
value 0 of a bit indicates that the	
channelisation	
code index is not	
available for the	
ASC this IE is	
associated to.	
Default is that all	
channelisation	
codes defined in	
PRACH Info are	
available.	55
>>>7.68 Mcps TDD	REL-7
>>>>Available Channelisation MD Bit string(16) Each bit indicates availability of a	REL-7
codes indices availability of a channelisation	
code index, where	
the channelisation	
code indices are	
numbered	
"channelisation	
code index 0" to	
"channelisation	
code index 15".	
The value 1 of a	
bit indicates that	
the channelisation code index is	
code index is available for the	
ASC this IE is	
associated to. The	
value 0 of a bit	
indicates that the	
channelisation	
code index is not	<u></u>

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>1.28 Mcps TDD >>>>Available SYNC_UL codes indices	MD		Bit string(8)	available for the ASC this IE is associated to. Default is that all channelisation codes defined in PRACH Info are available. Each bit indicates availability of a SYNC_UL code index, where the SYNC_UL code indices are numbered	REL-4 REL-4
				"SYNC_UL code index 0" to "SYNC_UL code index 7". The value 1 of a bit indicates that the SYNC_UL code index is available for the ASC this IE is associated to. The value 0 of a bit indicates that the SYNC_UL code index is not available for the ASC this IE is associated to. Default is that all SYNC_UL codes defined in SYNC_UL Info are available.	
>>CHOICE subchannel size	MP				
>>>Size1 >>>>Available Subchannels	MP		null	Indicates that all Subchannels are available	
>>>Size2					
>>>Available Subchannels	MD		Bit string (2)	NOTE	
>>>Size4	MD		Dit -(1)	NOTE	
>>>Available Subchannels	MD		Bit string (4)	NOTE	
>>>Size8	L		1	1	
>>>Available Subchannels	MD		Bit string (8)	NOTE	
>>>Size16					
>>>>Available Subchannels	MD		Bit string (16)	NOTE	

NOTE: Each bit indicates availability of a subchannel, where the subchannels are numbered subchannel 0, subchannel 1 etc. The value 1 of a bit indicates that the subchannel is available for the ASC this IE is associated with. The value 0 of a bit indicates that the subchannel is not available for the ASC this IE is associated with. Default value of the IE is that all subchannels within the size are available for the ASC this IE is associated with.

10.3.6.7 Void

10.3.6.8 CCTrCH power control info

Parameters used by UE to set the SIR target value for uplink open loop power control in TDD.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
TFCS Identity	OP		Transport Format Combination Set Identity 10.3.5.21	TFCS Identity of this CCTrCH. Default value is 1.
Uplink DPCH power control info	MP		Uplink DPCH power control info 10.3.6.91	

10.3.6.8a Cell and Channel Identity info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Burst type	MP		Enumerated (Type1, Type2)	Identifies the channel in combination with the Midamble shift and slot number. It is not used in 1.28 Mcps TDD and may be set to either value. This IE should be ignored by the receiver.
Midamble Shift	MP		Integer (015)	
Time Slot	OP		Timeslot number 10.3.6.84	This IE is present only if no IPDL scheme is configured in the reference cell. Otherwise the slot is defined by the IPDL configuration.
Cell parameters ID	MP		Cell parameters ID 10.3.6.9	Identifies the cell

10.3.6.9 Cell parameters Id

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Cell parameter Id	MP		Integer(012 7)	

10.3.6.10 Common timeslot info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
2 nd interleaving mode	MD		Enumerated(Frame, Timeslot)	Frame timeslot related interleaving. Default value is "Frame"
TFCI coding	MD		Integer(4,8,1 6,32)	Describes the amount of bits for the TFCI bits code word as described in [31]. Defaults is no TFCI bit: In case of 8 PSK in 1.28Mcps TDD: 4 corresponds to 6 TFCI code word bits.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				8 corresponds to 12 TFCI code word bits. 16 corresponds to 24 TFCI code word bits. 32 corresponds to 48 TFCI code word bits.
Puncturing limit	MP		Real(0.401. 0 by step of 0.04)	
Repetition period	MD		Integer(1, 2,4,8,16,32,6 4)	Default is continuous allocation. Value 1 indicate continuous
Repetition length	MP		Integer(1 Repetition period –1)	NOTE: This is empty if repetition period is set to 1.

10.3.6.11 Constant value

NOTE: Only for FDD.

This constant value is used by the UE to calculate the initial output power on PRACH according to the Open loop power control procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Constant value	MP		Integer (- 3510)	In dB

10.3.6.11a Constant value TDD

NOTE: Only for 3.84 Mcps TDD and 7.68 Mcps TDD.

3.84 Mcps TDD and 7.68 Mcps TDD constant values are used for open loop power control of PRACH, USCH, HS-SICH and UL DPCH as defined in subclause 8.5.7.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TDD Constant value	MP		Integer (- 35+10)	In dB

10.3.6.12 Void

10.3.6.13 Void

10.3.6.14 Void

10.3.6.15 Void

10.3.6.16 Default DPCH Offset Value

Indicates the default offset value within interleaving size at a resolution of 512chip (1/5 slot) in FDD and a resolution of one frame in TDD to offset CFN in the UE. This is used to distribute discontinuous transmission periods in time and also to distribute NodeB-RNC transmission traffics in time. Even though the CFN is offset by DOFF, the start timing of the interleaving will be the timing that "CFN mod (interleaving size)"=0 (e.g. interleaving size: 2,4,8) in both UE and SRNC.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode				
>FDD				
>>Default DPCH Offset Value (DOFF)	MP		Integer (0306688 by step of 512)	Number of chips=. 0 to 599 time 512 chips, see [10].
>TDD				
>>Default DPCH Offset Value (DOFF)	MP		Integer(07)	Number of frames; See [10]

10.3.6.17 Downlink channelisation codes

NOTE: Only for 1.28 Mcps TDD and 3.84 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE codes representation	MP			
>Consecutive codes				
>>First channelisation code	MP		Enumerated ((16/1)(16/1 6))	If a TFCI exists in this timeslot, it is mapped to the channelisation code as defined in [30].
>>Last channelisation code	MP		Enumerated ((16/1)(16/1 6))	If this is the same as First channelisation code, only one code is used by the physical layer.
>Bitmap				
>>Channelisation codes bitmap	MP		Bit string(16)	Each bit indicates the availability of a channelisation code for SF16, where the channelisation codes are numbered as channelisation code 1 (SF16) to channelisation code 16 (SF16). (For SF 16, a 1 in the bitmap means that the corresponding code is used, a 0 means that the corresponding code is not used.) If all bits are set to zero, SF 1 shall be used.

10.3.6.17a Downlink channelisation codes VHCR

NOTE: Only for 7.68 Mcps TDD VHCR

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE codes representation	MP			
>Consecutive codes				
>>First channelisation code	MP		Enumerated ((32/1)(32/3 2))	If a TFCI exists in this timeslot, it is mapped to the channelisation code as defined in [30].
>>Last channelisation code	MP		Enumerated ((32/1)(32/3 2))	If this is the same as First channelisation code, only one code is used by the physical layer.
>Bitmap				
>>Channelisation codes bitmap	MP		Bit string(32)	Each bit indicates the availability of a channelisation code for SF32, where the channelisation codes are numbered as channelisation code 1 (SF32) to channelisation code 32 (SF32). (For SF 32, a 1 in the bitmap means that the corresponding code is used, a 0 means that the corresponding code is not used.) If all bits are set to zero, SF 1 shall be used.

10.3.6.18 Downlink DPCH info common for all RL

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Timing Indication	MP		Enumerat ed(Initialis e, Maintain)	NOTE	
Timing maintained Synchronization indicator	CV- Synch		Enumerat ed (false)	FALSE indicates that no synchronisation procedure shall be performed for timing maintained interfrequency hard handover [29]. Absence of this element means that the synchronization procedure A shall be used.	REL-6
Downlink DPCH power control information	OP		Downlink DPCH power control informatio n 10.3.6.23		
MAC-d HFN initial value	CV- Messag e		Bit string(24)		REL-4
CHOICE mode	MP				
>FDD					
>>Power offset P Pilot- DPDCH	MP		Integer(0 24)	Power offset equals P _{Pilot} - P _{DPDCH} , range 06 dB, in steps of 0.25 dB	
>>Downlink rate matching restriction	OP		Downlink rate	If this IE is set to "absent", no Transport	

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
information			matching	CH is restricted in TFI.	
			restriction		
			informatio		
			n		
			10.3.6.31		
>>Spreading factor	MP		Integer(4,		
			8, 16, 32,		
			64, 128,		
			256, 512)		
>>Fixed or Flexible	MP		Enumerat		
Position			ed (Fixed,		
			Flexible)		
>>TFCI existence	MP		Boolean	TRUE indicates that	
				TFCI is used. When	
				spreading factor is less	
				than or equal to 64,	
				FALSE indicates that	
				TFCI is not used and	
				therefore DTX is used	
				in the TFCI field.	
>>CHOICE SF	MP				
>>>SF = 256					
>>>>Number of bits for	MP		Integer	In bits	
Pilot bits			(2,4,8)		
>>>SF = 128					
>>>>Number of bits for	MP		Integer(4,	In bits	
Pilot bits			8)		
>>>Otherwise			ĺ	(no data). In ASN.1	
				choice "Otherwise" is	
				not explicitly available	
				as all values are	
				available, it is implied	
				by the use of any value	
				other than 128 or 256.	
>TDD				(no data)	

CHOICE SF	Condition under which the given SF is chosen
SF=128	"Spreading factor" is set to 128
SF=256	"Spreading factor" is set to 256
Otherwise	"Spreading factor" is set to a value distinct from 128 and 256

Condition	Explanation
Message	This IE is not needed if the IE "Downlink DPCH info common for all RL" is included in RRC CONNECTION SETUP or HANDOVER TO UTRAN COMMAND messages. Otherwise it is optional.
Synch	The IE is not needed in the CELL UPDATE CONFIRM, HANDOVER TO UTRAN COMMAND and the RRC CONNECTION SETUP messages or if the IE "Timing Indication" is set to "Initialise" or if the IE 'Frequency Info' is not included. Otherwise, it is optional.

NOTE: Within the HANDOVER TO UTRAN COMMAND message, only value "initialise" is applicable.

10.3.6.19 Downlink DPCH info common for all RL Post

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Downlink DPCH power control	OP		Downlink	
information			DPCH power	
			control	
			information	
			10.3.6.23	

10.3.6.20 Downlink DPCH info common for all RL Pre

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	Defined in CHOICE SF512- Andpilot with "number of its for pilot bits" in ASN.1
>>Fixed or Flexible Position	MP		Enumerated (Fixed, Flexible)	
>>TFCI existence	MP		Boolean	TRUE indicates that TFCI is used. When spreading factor is less than or equal to 64, FALSE indicates that TFCI is not used and therefore DTX is used in the TFCI field.
>>CHOICE SF	MP			
>>>SF = 256				
>>>Number of bits for Pilot bits	MP		Integer (2,4,8)	In bits
>>>SF = 128				
>>>Number of bits for Pilot bits	MP		Integer(4,8)	In bits
>>>Otherwise				(no data)
>TDD				
>>Common timeslot info	MP		Common Timeslot Info 10.3.6.10	

CHOICE SF	Condition under which the given SF is chosen
SF=128	"Spreading factor" is set to 128
SF=256	"Spreading factor" is set to 256
Otherwise	"Spreading factor" is set to a value distinct from 128
	and 256

10.3.6.21 Downlink DPCH info for each RL

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference	-	
CHOICE mode	MP				
>FDD					
>>Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62		
>>DPCH frame offset	MP		Integer(0 38144 by	Offset (in number of chips) between the	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			step of 256)	beginning of the P- CCPCH frame and the beginning of the DPCH frame This is called τ _{DPCH,n} in [26]	
>>Secondary CPICH info	OP		Secondar y CPICH info 10.3.6.73		
>>DL channelisation code	MP	1 to <maxdp CH- DLchan ></maxdp 		For the purpose of physical channel mapping [27] the DPCHs are numbered, starting from DPCH number 1, according to the order that they are contained in this IE.	
>>>Secondary scrambling code	MD		Secondar y scramblin g code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH	
>>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	Defined in CHOICE SF512- AndCodenumber with "code number" in ASN.1	
>>>Code number	MP		Integer(0 Spreading factor - 1)		
>>>Scrambling code change	CH-SF/2		Enumerat ed (code change, no code change)	Indicates whether the alternative scrambling code is used for compressed mode method 'SF/2'.	
>>TPC combination index	MP		TPC combinati on index 10.3.6.85		
>>Power offset P _{TPC} -	OP		Integer (024)	Power offset equals P _{TPC} - P _{DPDCH} , range 06 dB, in steps of 0.25 dB	REL-5
>>Closed loop timing adjustment mode	CH- TxDivers ity Mode		Integer(1, 2)	It is present if Tx Diversity is used in the radio link.	
>1.28 Mcps TDD or 3.84 Mcps TDD					
>>DL CCTrCh List	OP	1 <max CCTrCH ></max 		DL physical channels to establish or reconfigure list.	
>>>TFCS ID	MD		Integer(1 8)	Identity of this CCTrCh. Default value is 1	
>>>Time info	MP		Time Info 10.3.6.83		
>>>Common timeslot info	MD		Common Timeslot Info 10.3.6.10	Default is the current Common timeslot info	
>>>Downlink DPCH timeslots and codes	MD		Downlink Timeslots and Codes 10.3.6.32	Default is to use the old timeslots and codes.	
>>>UL CCTrCH TPC List	MD	0 <max CCTrCH</max 		UL CCTrCH identities for TPC commands	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
		>		associated with this DL CCTrCH. Default is previous list or all defined UL CCTrCHs. This list is not required for 1.28 Mcps TDD and is to be ignored by the UE.	
>>>UL TPC TFCS Identity	MP		Transport Format Combinati on Set Identity 10.3.5.21		
>>DL CCTrCH List to Remove	OP	1 <max CCTrCH ></max 		DL physical channels to remove list.	
>>>TFCS ID	MP		Integer(1 8)		
>7.68 Mcps TDD					REL-7
>>DL CCTrCh List	OP	1 <max CCTrCH ></max 		DL physical channels to establish or reconfigure list.	REL-7
>>>TFCS ID	MD		Integer(1 8)	Identity of this CCTrCh. Default value is 1	REL-7
>>>Time info	MP		Time Info 10.3.6.83		REL-7
>>>Common timeslot info	MD		Common Timeslot Info 10.3.6.10	Default is the current Common timeslot info	REL-7
>>>Downlink DPCH timeslots and codes VHCR	MD		Downlink Timeslots and Codes VHCR 10.3.6.32	Default is to use the old timeslots and codes.	REL-7
>>>UL CCTrCH TPC List	MD	0 <max CCTrCH ></max 		UL CCTrCH identities for TPC commands associated with this DL CCTrCH. Default is previous list or all defined UL CCTrCHs. This list is not required for 1.28 Mcps TDD and is to be ignored by the UE.	REL-7
>>>UL TPC TFCS Identity	MP		Transport Format Combinati on Set Identity 10.3.5.21		REL-7
>>DL CCTrCH List to Remove	OP	1 <max CCTrCH</max 		DL physical channels to remove list.	REL-7
>>>TFCS ID	MP	>	Integer(1 8)		REL-7

Condition	Explanation
SF/2	The information element is mandatory present if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2". Otherwise the IE is not needed.
TxDiversity Mode	This IE is mandatory present if any TX Diversity Mode is used on the radio link, i.e. if STTD or "closed loop mode 1" is used on the radio link. Otherwise the IE is not needed.

10.3.6.22 Downlink DPCH info for each RL Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62	
>>Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH
>>CHOICE Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	Defined in CHOICE SF512- AndCodenumber with "code number" in ASN.1
>>Code number	MP		Integer(0 Spreading factor - 1)	
>>Scrambling code change	CH-SF/2		Enumerated (code change, no code change)	Indicates whether the alternative scrambling code is used for compressed mode method 'SF/2'.
>>TPC combination index	MP		TPC combination index 10.3.6.85	
>1.28 Mcps TDD or 3.84 Mcps TDD				
>>Downlink DPCH timeslots and codes	MP		Downlink Timeslots and Codes 10.3.6.32	
>7.68 Mcps TDD				REL-7
>>Downlink DPCH timeslots and codes VHCR	MP		Downlink Timeslots and Codes VHCR 10.3.6.32a	REL-7

Condition	Explanation
SF/2	The information element is mandatory present if the
	UE has a compressed mode pattern sequence
	configured in variable TGPS_IDENTITY or included in
	the message including IE "Downlink DPCH info for
	each RL Post", which is using compressed mode
	method "SF/2". Otherwise the IE is not needed.

10.3.6.23 Downlink DPCH power control information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>DPC Mode	MP		Enumerated (Single TPC, TPC triplet in soft)	"Single TPC" is DPC_Mode=0 and "TPC triplet in soft" is DPC_mode=1 in [29].
>TDD				
>>TPC Step Size	OP		Integer (1, 2, 3)	In dB

10.3.6.23oa Downlink F-DPCH info common for all RL

NOTE: For FDD only.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Timing Indication	MP		Enumerated (Initialise, Maintain)		REL-6
Timing maintained Synchronization indicator	CV- Synch		Enumerated (false)	FALSE indicates that no synchronisation procedure shall be performed for timing maintained intra- and interfrequency hard handover [29]. Absence of this element means that the synchronization procedure A shall be used.	REL-6
Downlink F-DPCH power control information	OP		Downlink DPCH power control information 10.3.6.23		REL-6
TPC command error rate target	OP		Real (0.010.1 by step of 0.01)		REL-6

Condition	Explanation
Synch	The IE is not needed in the CELL UPDATE
	CONFIRM, HANDOVER TO UTRAN COMMAND and
	the RRC CONNECTION SETUP messages or if the
	IE "Timing Indication" is set to "Initialise".
	Otherwise, it is optional.

10.3.6.23ob Downlink F-DPCH info for each RL

NOTE: For FDD only.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62		REL-6
F-DPCH frame	MP		Integer (038144	Offset (in	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
offset			by step of 256)	number of chips) between the beginning of the P-CCPCH frame and the beginning of the F-DPCH frame This is called $\tau_{F-DPCH,n}$ in [26]	
Secondary CPICH info	OP		Secondary CPICH info 10.3.6.73		REL-6
Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH	REL-6
Code number	MP		Integer (0255)		REL-6
TPC combination index	MP		TPC combination index 10.3.6.85		REL-6

10.3.6.23a Downlink HS-PDSCH Information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
HS-SCCH Info	OP		HS-SCCH Info 10.3.6.36a		REL-5
Measurement Feedback Info	OP		Measuremen t Feedback Info 10.3.6.40a		REL-5
CHOICE mode	MP				REL-5
>TDD					
>>CHOICE TDD option	MP				REL-5
>>>3.84 Mcps					
>>>HS-PDSCH Timeslot Configuration	OP		HS-PDSCH Timeslot Configuratio n 10.3.6.36o		REL-5
>>>7.68 Mcps					REL-7
>>>HS-PDSCH Timeslot Configuration VHCR	OP		HS-PDSCH Timeslot Configuratio n VHCR 10.3.6.360a		REL-7
>>> 1.28 Mcps					
>>>> HS-PDSCH Midamble Configuration	OP		HS-PDSCH Midamble Configuratio n 10.3.6.3600		REL-5
>FDD				(No data)	

10.3.6.24 Downlink information common for all radio links

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE DPCH info	OP				REL-6
>Downlink DPCH info common	MP		Downlink		
for all RL			DPCH info		

name reference description common for all RL 10.3.6.18 >Downlink F-DPCH info common for all RL DPCH info common for all RL 10.3.6.23oa CHOICE mode >FDD >DPCH compressed mode info OP DPCH compressed	
all RL 10.3.6.18 >Downlink F-DPCH info common for all RL DPCH info common for all RL 10.3.6.23oa CHOICE mode >FDD >DPCH DPCH DPCH DPCH DPCH DPCH DPCH DPCH DPCH DPCH	
>Downlink F-DPCH info common for all RL POPCH info common for all RL CHOICE mode >FDD >DPCH MP Downlink F- DPCH info common for all RL 10.3.6.23oa CHOICE mode >PDD >DPCH DPCH	
>Downlink F-DPCH info common for all RL DPCH info common for all RL 10.3.6.23oa CHOICE mode >FDD >DPCH compressed mode info OP DPCH	
common for all RL DPCH info common for all RL 10.3.6.23oa CHOICE mode >FDD >DPCH compressed mode info OP DPCH	
CHOICE mode MP >FDD >DPCH compressed mode info OP DPCH	REL-6
all RL 10.3.6.230a	
10.3.6.230a	
CHOICE mode MP >FDD DPCH >>DPCH compressed mode info OP DPCH	
>FDD >>DPCH compressed mode info OP DPCH	
>>DPCH compressed mode info OP DPCH	
compressed	
mode info	
10.3.6.33	
>>TX Diversity Mode MD TX Diversity Default value is	
Mode the existing value	
10.3.6.86 of TX Diversity	
mode	
>TDD (no data)	
>>CHOICE TDD option MP	REL-4
>>>3.84 Mcps TDD (no data)	REL-4
>>>7.68 Mcps TDD (no data)	REL-7
>>>1.28 Mcps TDD	REL-4
>>>>TSTD indicator MP TSTD	REL-4
indicator	
10.3.6.85a	
Default DPCH Offset Value OP Default	+
DPCH Offset	
Value,	
10.3.6.16	
MAC-hs reset indicator CV- Enumerated TRUE Indicates	REL-5
message T (true) the MAC-hs entity	I KEE O
ype (true) needs to be reset.	
Post-verification period OP Enumerated TRUE indicates	REL-6
(true) that a post-	
verification period	
shall be used [29].	
Absence of this	
element means	
that a post-	
verification period	
shall not be used.	

Condition	Explanation
MessageType	The IE is not needed in the HANDOVER TO UTRAN COMMAND and the RRC CONNECTION SETUP messages. Otherwise, it is optional.

10.3.6.25 Downlink information common for all radio links Post

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Downlink DPCH info common	MP		Downlink	
for all RL			DPCH info	
			common for	
			all RL Post	
			10.3.6.19	

10.3.6.26 Downlink information common for all radio links Pre

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Downlink DPCH info common	MP		Downlink	
for all RL			DPCH info	
			common for	
			all RL Pre	
			10.3.6.20	

10.3.6.27 Downlink information for each radio link

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Choice mode	MP				
>FDD					
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60		
>>Cell ID	OP		Cell ID 10.3.2.2		REL-4
>>Serving HS-DSCH radio link indicator	MP		Boolean	The value "TRUE" indicates that this radio link is the serving HS-DSCH radio link	REL-5
>> Serving E-DCH radio link indicator	MP		Boolean	The value "TRUE" indicates that this radio link is the serving E-DCH radio link	REL-6
>TDD					
>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57		
CHOICE DPCH info	OP				REL-6
>Downlink DPCH info for each RL	MP		Downlink DPCH info for each RL 10.3.6.21		
>Downlink F-DPCH info for each RL	MP		Downlink F- DPCH info for each RL 10.3.6.23ob		REL-6
E-AGCH Info	OP		E-AGCH Info 10.3.6.100		REL-6
CHOICE E-HICH Information	OP				REL-6
>E-HICH Information	MP		E-HICH Info 10.3.6.101		REL-6
>E-HICH release indicator				(no data)	REL-6
CHOICE E-RGCH Information	OP			•	REL-6
>E-RGCH Information	MP		E-RGCH Info 10.3.6.102		REL-6
>E-RGCH release indicator				(no data)	REL-6

10.3.6.28 Downlink information for each radio link Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Choice mode	MP				
>FDD					
>>Primary CPICH info	MP		Primary		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			CPICH info		
			10.3.6.60		
>>Cell ID	OP		Cell ID		REL-4
			10.3.2.2		
>TDD					
>>Primary CCPCH info	MP		Primary		
			CCPCH info		
			post		
			10.3.6.58		
Downlink DPCH info for each RL	MP		Downlink		
			DPCH info		
			for each RL		
			Post		
			10.3.6.22		

10.3.6.29 Void

10.3.6.30 Void

10.3.6.31 Downlink rate matching restriction information

This IE indicates which TrCH is restricted in TFI.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Restricted TrCH information	OP	1 to <maxtrch< td=""><td></td><td></td></maxtrch<>		
>Downlink transport channel type	MP		Enumerated(DCH)	
>Restricted DL TrCH identity	MP		Transport channel identity 10.3.5.18	
>Allowed TFIs	MP	1 to <maxtf></maxtf>		
>>Allowed TFI	MP		Integer(031	

10.3.6.32 Downlink Timeslots and Codes

NOTE: Only for 1.28 Mcps TDD and 3.84 Mcps TDD.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
First Individual timeslot info	MP		Individual	Individual timeslot info for the
			timeslot info	first timeslot used by the
			10.3.6.37	physical layer.
First timeslot channelisation	MP		Downlink	These codes shall be used by
codes			channelisatio	the physical layer in the
			n codes	timeslot given in First
			10.3.6.17	Individual timeslot info.
CHOICE more timeslots	MP			
>No more timeslots				(no data)
>Consecutive timeslots				

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>Number of additional timeslots	MP		Integer(1m axTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.
>Timeslot list				
>>Additional timeslot list	MP	1 to <maxts- 1></maxts- 		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.
>>>CHOICE parameters	MP			
>>>Same as last				
>>>>Timeslot number	MP		Timeslot Number 10.3.6.84	The physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.
>>>>New parameters				
>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>>>Channelisation codes	MP		Downlink channelisatio n codes 10.3.6.17	

10.3.6.32a Downlink Timeslots and Codes VHCR

NOTE: Only for 7.68 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
First Individual timeslot info	MP		Individual timeslot info 10.3.6.37	Individual timeslot info for the first timeslot used by the physical layer.
First timeslot channelisation codes VHCR	MP		Downlink channelisatio n codes VHCR 10.3.6.17a	These codes shall be used by the physical layer in the timeslot given in First Individual timeslot info.
CHOICE more timeslots	MP			
>No more timeslots				(no data)
>Consecutive timeslots				

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>Number of additional timeslots	MP		Integer(1m axTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.
>Timeslot list				
>>Additional timeslot list	MP	1 to <maxts- 1></maxts- 		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.
>>>CHOICE parameters	MP			
>>>Same as last				
>>>>Timeslot number	MP		Timeslot Number 10.3.6.84	The physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.
>>>New parameters				
>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>>>>Channelisation codes VHCR	MP		Downlink channelisatio n codes VHCR 10.3.6.17a	

10.3.6.33 DPCH compressed mode info

NOTE: Only for FDD.

This information element indicates the parameters of the compressed mode to be used by the UE in order to perform inter-frequency and inter-RAT measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission gap pattern sequence	MP	1 to <maxtgp S></maxtgp 		
>TGPSI	MP		TGPSI 10.3.6.82	
>TGPS Status Flag	MP		Enumerated(activate, deactivate)	This flag indicates whether the Transmission Gap Pattern Sequence shall be activated or deactivated.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>TGCFN	CV-Active		Integer (0255)	Connection Frame Number of the first frame of the first pattern within the Transmission Gap Pattern Sequence.
>Transmission gap pattern sequence configuration parameters	OP			
>>TGMP	MP		Enumerated(TDD measuremen t, FDD measuremen t, GSM carrier RSSI measuremen t, GSM Initial BSIC identification, GSM BSIC re- confirmation, Multi-carrier measuremen t)	Transmission Gap pattern sequence Measurement Purpose.
>>TGPRC	MP		Integer (1511, Infinity)	The number of transmission gap patterns within the Transmission Gap Pattern Sequence.
>>TGSN	MP		Integer (014)	Transmission Gap Starting Slot Number The slot number of the first transmission gap slot within the TGCFN.
>>TGL1	MP		Integer(114	The length of the first Transmission Gap within the transmission gap pattern expressed in number of slots
>>TGL2	MD		Integer (114)	The length of the second Transmission Gap within the transmission gap pattern. If omitted, then TGL2=TGL1. The value of TGL2 shall be ignored if TGD is set to "undefined"
>>TGD	MP		Integer(152 69, undefined)	Transmission gap distance indicates the number of slots between starting slots of two consecutive transmission gaps within a transmission gap pattern. If there is only one transmission gap in the transmission gap pattern, this parameter shall be set to undefined.
>>TGPL1	MP		Integer (1144)	The duration of transmission gap pattern 1.
>>RPP	MP		Enumerated (mode 0, mode 1).	Recovery Period Power control mode during the frame after the transmission gap within the compressed frame. Indicates whether normal PC mode or compressed PC mode is applied

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>ITP	MP		Enumerated (mode 0, mode 1).	Initial Transmit Power is the uplink power control method to be used to compute the initial transmit power after the compressed mode gap.
>>CHOICE UL/DL mode	MP			
>>>DL only				Compressed mode used in DL only
>>>Downlink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating downlink compressed mode gap. If F-DPCH is configured this IE shall not be used by the UE
>>>UL only				Compressed mode used in UL only
>>>Uplink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating uplink compressed mode gap
>>>UL and DL				Compressed mode used in UL and DL
>>>Downlink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating downlink compressed mode gap. If F-DPCH is configured this IE shall not be used by the UE
>>>Uplink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating uplink compressed mode gap
>>Downlink frame type	MP		Enumerated (A, B)	If F-DPCH is configured this IE shall not be used by the UE
>>DeltaSIR1	MP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the first transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase). If F-DPCH is configured this IE shall not be used by the UE
>>DeltaSIRafter1	MP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the first transmission gap in the transmission gap pattern. If F-DPCH is configured this IE shall not be used by the UE
>>DeltaSIR2	OP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the second transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase) When omitted, DeltaSIR2 = DeltaSIR1. If F-DPCH is configured this IE shall not be used by the UE
>>DeltaSIRafter2	OP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the second transmission gap in the

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				transmission gap pattern. When omitted, DeltaSIRafter2 = DeltaSIRafter1. If F-DPCH is configured this IE shall not be used by the UE
>>N Identify abort	CV-Initial BSIC		Integer(112 8)	Indicates the maximum number of repeats of patterns that the UE shall use to attempt to decode the unknown BSIC of the GSM cell in the initial BSIC identification procedure
>>T Reconfirm abort	CV-Re- confirm BSIC		Real(0.510. 0 by step of 0.5)	Indicates the maximum time allowed for the re-confirmation of the BSIC of one GSM cell in the BSIC re-confirmation procedure. The time is given in steps of 0.5 seconds.

Condition	Explanation
Active	This IE is mandatory present when the value of the IE "TGPS Status Flag" is "Activate" and not needed otherwise.
Initial BSIC	This IE is mandatory present when the value of the IE "TGMP" is set to "GSM Initial BSIC identification" and not needed otherwise.
Re-confirm BSIC	This IE is mandatory present when the value of the IE "TGMP" is set to "GSM BSIC re-confirmation" and not needed otherwise.

10.3.6.34 DPCH Compressed Mode Status Info

This information element indicates status information of the compressed mode used by the UE in order to perform interfrequency and inter-RAT measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TGPS reconfiguration CFN	MP		Integer (0255)	
Transmission gap pattern sequence	MP	1 to <maxtgp S></maxtgp 		
>TGPSI	MP		TGPSI 10.3.6.82	Transmission Gap Pattern Sequence Identifier
>TGPS Status Flag	MP		Enumerated(activate, deactivate)	This flag indicates whether the Transmission Gap Pattern Sequence it shall be activated or deactivated.
>TGCFN	CV-Active		Integer (0255)	Connection Frame Number of the first frame of the first pattern within the Transmission Gap Pattern Sequence.

Condition	Explanation		
Active	This IE is mandatory present when the value of the IE "TGPS Status Flag" is "Activate" and not needed otherwise.		

10.3.6.35 Dynamic persistence level

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Dynamic persistence level	MP		Integer(18)	Level shall be mapped to a dynamic persistence value in the range 0 1. The mapping is described in subclause 8.5.12.

10.3.6.35a FPACH info

NOTE: Only for 1.28 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Timeslot number	MP		Integer(06)		REL-4
Channelisation code	MP		Enumerated((16/1)(16/1 6)		REL-4
Midamble Shift and burst type	MP		Midamble shift and burst type 10.3.6.41		REL-4
WT	MP		Integer(14)	The number of sub-frames, following the sub-frame in which the SYNC UL is transmitted, in which the FPACH can be transmitted.	REL-4

10.3.6.35b Frequency band indicator

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Frequency band indicator	MP		Enumerated(Band I, Band II, Band III, Band IV, Band V, Band VI, Band VII, extension indicator)		REL-6

10.3.6.35c Frequency band indicator 2

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Frequency band indicator 2	MP		Enumerated(Band VIII, Band IX, Band XI, Band XII, Band XIII, Band XIIV, Band XVV, Band XVI,	Band X – Band XXII are yet to be defined in this version of the specification	REL-6

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
			Band XVII,		
			Band XVIII,		
			Band XIX,		
			Band XX,		
			Band XXI,		
			Band XXII,		
			extension		
			indicator)		

10.3.6.36 Frequency info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>UARFCN uplink (Nu)	OP		Integer(016 383)	If this IE is not present, the default duplex distance defined for the operating frequency band shall be used [21]
>>UARFCN downlink (Nd)	MP		Integer(0 16383)	[21]
>TDD				
>>UARFCN (Nt)	MP		Integer(0 16383)	[22]

10.3.6.3600 HS-PDSCH Midamble Configuration

NOTE: Only for TDD 1.28 Mcps.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Midamble Allocation Mode	MP		Enumerated(Default midamble, Common midamble, UE specific midamble)	This midamble allocation mode applies to all HS-PDSCH resources assigned to the UE.	REL-5
Midamble Configuration	MP		Integer(2, 4, 6, 8, 10, 12, 14, 16)	This configuration applies to all HS-PDSCH resources assigned to the UE.	REL-5
Midamble Shift	CV-UE		Integer(015)	This shift, when present, applies to all HS-PDSCH resources assigned to the UE.	REL-5

Condition	Explanation
UE	This IE is mandatory present when the value of the IE
	"Midamble Allocation Mode" is "UE specific midamble"
	and not needed otherwise.

10.3.6.360 HS-PDSCH Timeslot Configuration

NOTE: Only for TDD 3.84 Mcps.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
HS-PDSCH Timeslot Configuration List	MP	1 to <maxts- 1></maxts- 			REL-5
>Timeslot Number	MP		Integer (014)		REL-5
>CHOICE Burst Type	MP				REL-5
>>Type 1					REL-5
>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-5
>>>Midamble configuration burst type 1 and 3	MP		Integer (4, 8, 16)	As defined in [30]	REL-5
>>>Midamble Shift	CV-UE		Integer (015)		REL-5
>>Type 2					REL-5
>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-5
>>>Midamble configuration burst type 2	MP		Integer (3, 6)	As defined in [30]	REL-5
>>>Midamble Shift	CV-UE		Integer (05)		REL-5

Condition	Explanation
UE	This IE is mandatory present when the value of the IE
	"Midamble Allocation Mode" is "UE specific midamble"
	and not needed otherwise.

10.3.6.36oa HS-PDSCH Timeslot Configuration VHCR

NOTE: Only for TDD 7.68 Mcps.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
HS-PDSCH Timeslot Configuration List	MP	1 to <maxts- 1></maxts- 	reference	description	REL-5
>Timeslot Number	MP		Integer (014)		REL-5
>CHOICE Burst Type	MP		, ,		REL-5
>>Type 1 >>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-5 REL-5
>>>Midamble configuration burst type 1 and 3	MP		Integer (4, 8, 16)	As defined in [30]	REL-5
>>>Midamble Shift	CV-UE		Integer (015)		REL-5
>>Type 2			,		REL-5
>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-5
>>>Midamble configuration burst type 2	MP		Integer (4, 8)	As defined in [30]	REL-5
>>>Midamble Shift	CV-UE		Integer (07)		REL-5

Condition	Explanation
UE	This IE is mandatory present when the value of the IE
	"Midamble Allocation Mode" is "UE specific midamble"
	and not needed otherwise.

10.3.6.36a HS-SCCH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP				REL-5
>FDD					REL-5
>>DL Scrambling Code	MD		Secondary scrambling code 10.3.6.74	DL Scrambling code to be applied for HS-DSCH and HS-SCCH. Default is same scrambling code as for the primary CPICH.	REL-5
>>HS-SCCH Channelisation Code Information	MP	1 to <maxhss CCHs ></maxhss 			REL-5
>>>HS-SCCH Channelisation Code	MP		Integer (0127)		REL-5
>TDD					REL-5
>>CHOICE TDD option	MP				REL-5
>>>3.84 Mcps					REL-5
>>> Ack-Nack Power Offset	MP		Integer (-78 by step of 1)	dB Note	REL-5
>>>> HS-SICH Power Control Info	MP		HS-SICH Power Control Info 10.3.6.36b	1100	REL-5
>>>> BLER target	MP		Real (-3.150 by step of 0.05)	Signalled value is Log10(HS-SCCH BLER quality target).This IE is Not Present in REL-5.	REL-6
>>>> D _{hs-sync}	OP		Integer (- 20+10)	Value in dB set to indicate the dB difference between the maximum allowed HS-SCCH physical channel transmit power [33] and the beacon reference power (it is one means of controlling the area of HS-DSCH operation within the cell).	REL-6
>>>HS-SCCH Set Configuration	MP	1 to <maxhss CCHs></maxhss 		,	REL-5
>>>>Timeslot number	MP	001132	Integer (014)		REL-5
>>>>Channelisation code	MP		Enumerated ((16/1)(16/16))		REL-5
>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)	HS-SCCH always uses burst type 1.	REL-5
>>>>Midamble configuration	MP		Integer		REL-5

	1	1	(4, 8, 16)		
>>>>Midamble Shift	CV-UE		Integer(015		REL-5
>>>>BLER target	MP		Real (-3.150 by step of 0.05)	Signalled value is Log10(HS-SCCH BLER quality target). This IE is not present in REL-6	REL-5
>>>>HS-SICH configuration				procent in the c	REL-5
>>>>>Timeslot number	MP		Integer (014)		REL-5
>>>>>Channelisation code	MP		Enumerated ((16/1)(16/16))		REL-5
>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, UE specific midamble)	HS-SICH always uses burst type 1.	REL-5
>>>>>Midamble configuration	MP		Integer (4, 8, 16)		REL-5
>>>>Midamble Shift	CV-UE		Integer (015)		REL-5
>>>7.68 Mcps			<u> </u>		REL-7
>>> Ack-Nack Power Offset	MP		Integer (-78 by step of 1)	dB	REL-7
>>>> HS-SICH Power Control Info	MP		HS-SICH Power Control Info 10.3.6.36b		REL-7
>>>> BLER target	MP		Real (-3.150 by step of 0.05)	Signalled value is Log10(HS-SCCH BLER quality target).	REL-7
>>>HS-SCCH Set Configuration	MP	1 to <maxhs- SCCHs></maxhs- 			REL-7
>>>>Timeslot number	MP		Integer (014)		REL-7
>>>>Channelisation code	MP		Enumerated ((32/1)(32/32))		REL-7
>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)	HS-SCCH always uses burst type 1.	REL-7
>>>>Midamble configuration	MP		Integer (4, 8, 16)		REL-7
>>>>Midamble Shift	CV-UE		Integer(015		REL-7
>>>>HS-SICH configuration					REL-5
>>>>>Timeslot number	MP		Integer (014)		REL-5
>>>>Channelisation code	MP		Enumerated ((32/1)(32/32))		REL-5
>>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, UE specific midamble)	HS-SICH always uses burst type 1.	REL-5
>>>>Midamble configuration	MP		Integer (4, 8, 16)		REL-5

603

>>>>Midamble Shift	CV-UE		Integer (015)		REL-5
>>>1.28 Mcps			(013)		REL-5
>>>HS-SCCH Set	MP	1 to			REL-5
Configuration		<maxhss CCHs></maxhss 			
>>>>Timeslot number	MP		Integer (06)		REL-5
>>>>First Channelisation code	MP		Enumerated ((16/1)(16/16))		REL-5
>>>>Second Channelisation code	MP		Enumerated ((16/1)(16/16))		REL-5
>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-5
>>>> Midamble Shift	CV-UE		Integer (015)		REL-5
>>>>Midamble configuration	MP		Integer (2, 4, 6, 8, 10, 12, 14, 16)		REL-5
>>>>BLER target	MP		Real (-3.150 by step of 0.05)	Signalled value is Log10(HS-SCCH BLER quality target). The UE shall use the BLER target signalled in the first occurrence of the HS-SCCH Set Configuration.	REL-5
>>>>HS-SICH configuration				J	REL-5
>>>>>Timeslot number	MP		Integer (06)		REL-5
>>>>>Channelisation code	MP		Enumerated ((16/1)(16/16))		REL-5
>>>>>Midamble Allocation mode	MP		Enumerated (Default midamble, UE specific midamble)		REL-5
>>>>Midamble configuration	MP		Integer (2, 4, 6, 8, 10, 12, 14, 16)		REL-5
>>>> Midamble Shift	CV-UE		Integer (015)		REL-5
>>>>Ack-Nack Power Offset	MP		Integer (-78 by step of 1)	dB.	REL-5
>>>>PRX _{HS-SICH}	MP		Integer (-12058 by step of 1)	dBm. Desired power level for HS-SICH.	REL-5
>>>>>TPC step size	MP		Integer (1, 2, 3)	dB.	REL-5

Note: Ack-Nack Power Offset is the difference in the desired RX power between HS-SICH transmissions conveying an acknowledgement and transmissions conveying a negative acknowledgement signalled to the UE in IE "HS-SCCH Info".

Condition	Explanation		
UE	This IE is mandatory present when the value of the IE "Midamble Allocation Mode" is "UE specific midamble"		
	and not needed otherwise.		

10.3.6.36b HS-SICH Power Control Info

This IE is used to transfer HS-SICH power control info to the UE and only applies to TDD 3.84 Mcps and 7.68 Mcps.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
UL target SIR	MP		Real (-1120 by step of 0.5)	dB	REL-5
HS-SICH Constant value	MP		Constant value TDD 10.3.6.11a		REL-5

10.3.6.37 Individual timeslot info

Information Element/Group	Need	Multi	Type and reference	Semantics	Version
name	MD			description	
Timeslot number	MP		Timeslot	Timeslot within a	
			number	frame	
TEOL	MD		10.3.6.84	TDUE : dit	
TFCI existence	MP		Boolean	TRUE indicates that the TFCI	
				exists. It shall be	
				coded in the	
				physical channel	
				defined in [30] of	
				this timeslot.	
Midamble Shift and burst type	MP		Midamble	tilis tilliesiot.	
Wildambie Offit and burst type	IVII		shift and		
			burst type		
			10.3.6.41		
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD				(no data)	REL-4
>7.68 Mcps TDD				(no data)	REL-7
>1.28 Mcps TDD					REL-4
>>Modulation	MP		Enumerated(REL-4
			QPSK,		
			8PSK)		
>>SS-TPC Symbols	MP		Enumerated(Denotes amount	REL-4
			0, 1, 16/SF)	of SS and TPC	
				bits send in this	
				timeslot	
>>Additional TPC-SS Symbols	OP		Integer(115	Specifies the	REL-4
)	number of	
				additional codes	
				in this timeslot	
				that carry TPC	
				and SS symbols	
				as specified in	
	1			[33]	

10.3.6.38 Individual Timeslot interference

Parameters used by the UE for uplink open loop power control in TDD.

Information element	Need	Multi	Type and	Semantics description
			reference	
Timeslot number	MP		Timeslot	
			number	
			10.3.6.84	
UL Timeslot Interference	MP		UL	
			Interference	
			TDD	
			10.3.6.87a	

10.3.6.39 Maximum allowed UL TX power

This information element indicates the maximum allowed uplink transmit power.

Information Element	Need	Multi	Type and reference	Semantics description
Maximum allowed UL TX power	MP		Integer(- 5033)	In dBm

10.3.6.40 Void

10.3.6.40a Measurement Feedback Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP		1010101100	ucconputon	REL-5
>FDD					REL-5
>>Measurement Power Offset	MP		Real (-6 13 by step of 0.5)	The measurement power offset, Γ , in dB, as described in [29].	REL-5
>>CQI Feedback cycle, k	MP		Integer (0, 2, 4, 8, 10, 20, 40, 80, 160)	In milliseconds.	REL-5
>>CQI repetition factor	MP		Integer (14)		REL-5
>>Δ _{CQI}	MP		Integer (08)	Refer to quantization of the power offset in [28]	REL-5
>TDD				(no data)	REL-5

10.3.6.41 Midamble shift and burst type

NOTE: Only for TDD.

This information element indicates burst type and midamble allocation. Three different midamble allocation schemes exist:

- Default midamble: the midamble shift is selected by layer 1 depending on the associated channelisation code (DL and UL)
- Common midamble: the midamble shift is chosen by layer 1 depending on the number of channelisation codes (possible in DL only)
- UE specific midamble: a UE specific midamble is explicitly assigned (DL and UL).

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD					REL-4
>>CHOICE Burst Type	MP				
>>>Type 1					
>>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		
>>>>Midamble configuration burst type 1 and 3	MP		Integer(4, 8, 16)	As defined in [30]	
>>>>Midamble Shift	CV-UE		Integer(015		
>>>Type 2					
>>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		
>>>>Midamble configuration burst type 2	MP		Integer(3, 6)	As defined in [30]	
>>>Midamble Shift >>>Type 3	CV-UE		Integer(05)		
>>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, UE specific midamble)		
>>>>Midamble configuration burst type 1 and 3	MP		Integer(4, 8, 16)	As defined in [30]	
>>>Midamble Shift	CV-UE		Integer (015)	NOTE: Burst Type 3 is only used in uplink.	
>7.68 Mcps TDD					REL-7
>>CHOICE Burst Type	MP				REL-7
>>>Type 1					REL-7
>>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)		REL-7
>>>>Midamble configuration burst type 2	MP		Integer(4, 8)	As defined in [30]	REL-7
>>>Midamble Shift	CV-UE		Integer(07)		REL-7
>>>Type 3					REL-7
>>>>Midamble Allocation Mode	MP		Enumerated (Default midamble, UE specific midamble)		REL-7
>>>Midamble configuration burst type 1 and 3	MP		Integer(4, 8, 16)	As defined in [30]	REL-7
>>>>Midamble Shift	CV-UE		Integer (015)	NOTE: Burst Type 3 is only used in uplink.	REL-7
>1.28 Mcps TDD	 				REL-4
>>Midamble Allocation Mode	MP		Enumerated (Default		REL-4

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
name			midamble, Common midamble, UE specific midamble)	uescription	
>>Midamble configuration	MP		Integer(2, 4, 6, 8, 10, 12, 14, 16)	As defined in [30]	REL-4
>>Midamble Shift	CV-UE		Integer (015)		REL-4

Condition	Explanation
UE	This IE is mandatory present when the value of the IE
	"Midamble Allocation Mode" is "UE-specific
	midamble" and not needed otherwise.

10.3.6.42 PDSCH Capacity Allocation info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PDSCH allocation period info	MP		Allocation Period Info 10.3.6.4	
CHOICE Configuration	MP			
>Old configuration				
>>TFCS ID	MD		Integer(18)	Default is 1.
>>PDSCH Identity	MP		Integer(1hi PDSCHident ities)	
>New configuration				
>>PDSCH Info	MP		PDSCH Info 10.3.6.44	
>>PDSCH Identity	ОР		Integer(1hi PDSCHident ities)	
>>PDSCH power control info	OP		PDSCH power control info 10.3.6.45	

10.3.6.43 Void

10.3.6.44 PDSCH info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
TFCS ID	MD		Integer(18)	TFCS to be used. Default value is 1.	
Common timeslot info	OP		Common timeslot info 10.3.6.10		
PDSCH timeslots and codes for1.28 Mcps TDD or 3.84 Mcps TDD	OP		Downlink Timeslots and Codes 10.3.6.32	Default is to use the old timeslots and codes.	
PDSCH timeslots and codes for 7.68 Mcps TDD	OP		Downlink Timeslots and Codes VHR 10.3.6.32a	Default is to use the old timeslots and codes.	REL-7

10.3.6.45 PDSCH Power Control info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TPC Step Size	OP		Integer (1, 2, 3)	In dB
UL CCTrCH TPC List	OP	1 <maxcc TrCH></maxcc 		UL CCTrCH identities for TPC commands associated with this DL CCTrCH. This list is not used in 1.28 Mcps TDD.
>UL TPC TFCS Identity	MP		Transport Format Combination Set Identity 10.3.5.21	

10.3.6.46 PDSCH system information

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PDSCH information	MP	1 to <maxpd SCH></maxpd 	101010110		
>PDSCH Identity	MP		Integer(1 hiPDSCHi dentities)		
>PDSCH info	MP		PDSCH info 10.3.6.44		
>SFN Time Info	CH- Block17		SFN Time Info 10.3.6.75		
>DSCH TFS	OP		Transport format set 10.3.5.23		
>DSCH Transport Channels	OP	1 to <maxtr CH></maxtr 		If PDSCH is configured for 3.84Mcps TDD in Rel-5 or for 7.68 Mcps in Rel-7 this IE may be included.	REL-5
>> DSCH Transport channel identity	MP		Transport channel identity 10.3.5.18		REL-5
>>DSCH TFS	MP		Transport format set 10.3.5.23		REL-5
>DSCH TFCS	OP		Transport Format Combinati on Set 10.3.5.20		

Condition	Explanation
Block17	This IE is not needed in System Information Block 17.
	Otherwise it is optional.

10.3.6.47 Void

10.3.6.48 Persistence scaling factors

This IE defines scaling factors associated with ASC 2 – ASC 7 to be applied to the dynamic persistence value.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Access Service Class	MP	1 to maxASCpe rsist		multiplicity corresponds to the number of PRACH partitions minus 2
>Persistence scaling factor	MP		Real(0.90.2 , by step of 0.1)	Scaling factors in the range 0,,1

10.3.6.49 PICH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP				
>FDD					

	T		Г.	T	I
>>Channelisation code	MP		Integer(025 5)	SF is fixed and equal to 256	
>>Number of PI per frame	MP		Integer (18, 36, 72, 144)	- 1	
>>STTD indicator	MP		STTD Indicator 10.3.6.78		
>TDD					
>>Timeslot number	MD		Timeslot number 10.3.6.84	Default value is the timeslot used by the SCCPCH carrying the associated PCH.	
>>Midamble shift and burst type	MP		Midamble shift and burst type 10.3.6.41		
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>Channelisation code	MD		Enumerated ((16/1)(16/1 6))	Default value is the channelisation code used by the SCCPCH carrying the associated PCH.	
>>>7.68 Mcps TDD					REL-7
>>>>Channelisation code	MD		Enumerated ((32/1)(32/3 2))	Default value is the channelisation code used by the SCCPCH carrying the associated PCH.	REL-7
>>>1.28 Mcps TDD					REL-4
>>>Codes list	MP	12			REL-4
>>>>Channelisation code	MP		Enumerated ((16/1)(16/1 6))		REL-4
>>Repetition period/length	MD		Enumerated((4/2),(8/2), (8/4),(16/2), (16/4), (32/2),(32/4), (64/2),(64/4))	Default value is "(64/2)".	
>>Offset	MP		Integer (0Repetitio n period -1)	SFN mod Repetitionperiod = Offset.	
>>Paging indicator length	MD		Integer (4, 8, 16)	Indicates the length of one paging indicator in Bits. Default value is 4.	
>>N _{GAP}	MD		Integer(2, 4, 8)	Number of frames between the last frame carrying PICH for this Paging Occasion and the first frame carrying paging messages for this Paging Occasion. Default value is 4.	
>>N _{PCH}	MD		Integer(1 8)	Number of paging groups. Default value is 2.	

10.3.6.50 PICH Power offset

This is the power transmitted on the PICH minus power of the Primary CPICH in FDD and Primary CCPCH Tx Power in TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PICH Power offset	MP		Integer(-10 +5)	Offset in dB

10.3.6.50a PLCCH Info

NOTE: Only for 1.28 Mcps TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description	
PLCCH sequence number	М		Integer(1 17)		
Timeslot number	М		Integer(0 6)		
Channelisation Code	M		Enumerate d((16/1)(1 6/16))		
TPC command target rate	M		Real(0.01 0.1 by steps of 0.01)	Transmit Power Control command target rate	

10.3.6.51 PRACH Channelisation Code List

NOTE: Only for 3.84 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE SF	MP		reference	description	
>SF16	IVII				
>>Channelisation Code List	MP	1 to 8			
>>>Channelisation code	MP		Enumerated ((16/1)(16/16))	There is a 1:1 mapping between spreading code and midamble shift defined in [30] for channelisation codes (16/1) to (16/8). NOTE: channelisation codes (16/9) to (16/16) are not to be used.	
>SF8					_
>>Channelisation Code List	MP	1 to 8			
>>>Channelisation Code	MP		Enumerated((8/1)(8/8))		

10.3.6.51a PRACH Channelisation Code 1.28 Mcps TDD

NOTE: Only for 1.28 Mcps TDD.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Channelisation Code List	MP	1 to 4			REL-4
>Channelisation Code	MP		Enumerated(REL-4
			(4/1)(4/4),(8		
			/1)(8/8),(16/		
			1)(16/16))		

10.3.6.51b PRACH Channelisation Code List VHCR

NOTE: Only for 7.68 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE SF	MP		1010101100	uooonpiion	REL-7
>SF32					REL-7
>>Channelisation Code List	MP	1 to 16			REL-7
>>>Channelisation code	MP		Enumerated ((32/1)(32/32))	There is a 1:1 mapping between spreading code and midamble shift defined in [30] for channelisation codes (32/1) to (32/16). NOTE: channelisation codes (32/17) to (32/32) are not to be used.	REL-7
>SF16					REL-7
>>Channelisation Code List	MP	1 to 16			REL-7
>>>Channelisation code	MP		Enumerated ((16/1)(16/16))	There is a 1:1 mapping between spreading code and midamble shift defined in [30] for channelisation codes (16/1) to (16/16).	REL-7
>SF8					REL-7
>>Channelisation Code List	MP	1 to 8			REL-7
>>>Channelisation Code	MP		Enumerated((8/1)(8/8))		REL-7

10.3.6.52 PRACH info (for RACH)

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE mode	MP				
>FDD					
>>Available Signature	MP		Bit string(16)	Each bit indicates availability for a signature, where the signatures are numbered "signature 0" up to "signature 15". The value 1 of a bit indicates that	

			the corresponding	
			signature is	
			available and the	
			value 0 that it is	
			not available.	
>>Available SF	MP	Integer	In chips per	
		(32,64,128,2	symbol	
		56)	Defines the	
			minimum allowed	
			SF (i.e. the	
	<u> </u>		maximum rate)	
>>Preamble scrambling code	MP	Integer (0	Identification of	
number		15)	scrambling code	
D	140	D 1/0 40 4	see [28]	
>>Puncturing Limit	MP	Real(0.401.		
		00 by step of		
Assettable Out Observed	MD	0.04)	Facilities diseases	
>>Available Sub Channel	MP	Bit string(12)	Each bit indicates	
Number			availability for a	
			subchannel,	
			where the	
			subchannels are numbered	
			"subchannel 0" to	
			"subchannel 0" to	
			The value 1 of a	
			bit indicates that	
			the corresponding	
			subchannel is	
			available and the	
			value 0 indicates	
			that it is not	
			available.	
>TDD			available.	
>>CHOICE TDD option	MP			REL-4
>>>3.84 Mcps TDD				REL-4
>>>>Timeslot number	MP	Timeslot		
		number		
		10.3.6.84		
>>>>PRACH Channelisation	MP	PRACH		
Code List		Channelisati		
		on Code List		
		10.3.6.51		
>>>>PRACH Midamble	MP	Enumerated	Direct or direct	
		(Direct,	and inverted	
		Direct/Invert	midamble are	
		ed)	used for PRACH	
>>>>PNBSCH allocation	OP	PNBSCH	Identifies frames	REL-4
		allocation	used for cell	
		10.3.8.10a	synchronisation	
			purposes	
>>>7.68 Mcps TDD				REL-7
>>>>Timeslot number	MP	Timeslot		REL-7
		number		
		10.3.6.84		
>>>>PRACH Channelisation	MP	PRACH		REL-7
Code List VHCR		Channelisati		
		on Code List		
		VHCR		
>>> DDACH Midorakia	MD	10.3.6.51b	Direct or direct	DEL 7
>>>>PRACH Midamble	MP	Enumerated	Direct or direct	REL-7
		(Direct, Direct/Invert	and inverted midamble are	
>>> DNRSCH allocation	OP	ed) PNBSCH	used for PRACH Identifies frames	REL-7
>>>>PNBSCH allocation	UF	allocation	used for cell	KEL-/
		10.3.8.10a	synchronisation	
				i .
		10.0.0.104	purposes	

>>>1.28 Mcps TDD				REL-4
>>>SYNC_UL info	MP		SYNC_UL info 10.3.6.78a	REL-4
>>>>PRACH Definition	MP	1 <maxpr ACH_FPA CH></maxpr 		REL-4
>>>>Timeslot number	MP		Timeslot number 10.3.6.84	REL-4
>>>>PRACH Channelisation Code	MP		PRACH Channelisati on Code 1.28 Mcps TDD 10.3.6.51a	REL-4
>>>>Midamble Shift and burst type	MP		Midamble shift and burst type 10.3.6.41	REL-4
>>>>FPACH info	MP		FPACH info 10.3.6.35a	REL-4

10.3.6.53 PRACH partitioning

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Access Service class	MP	1 to maxASC		If only "NumASC+1" (with, NumASC+1 < maxASC) ASCs are listed, the remaining (NumASC+2 through maxASC) ASCs are unspecified.
>ASC Setting	MD		ASC setting 10.3.6.6	The default values are same as the previous ASC. If the "default" is used for the first ASC, the default values are all available signatures and "all available subchannels" for FDD and "all available channelisation codes" and "all available subchannels" with "subchannel size=Size 1" in TDD.

10.3.6.54 PRACH power offset

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Power Ramp Step	MP		Integer (18)	Power step when no acquisition indicator is received in dB
Preamble Retrans Max	MP		Integer (164)	Maximum number of preambles in one preamble ramping cycle

10.3.6.55 PRACH system information list

Information element	Need	Multi	Type and reference	Semantics description	Version
PRACH system information	MP	1 <maxpra CH></maxpra 			
>PRACH info	MP	0112	PRACH info (for RACH) 10.3.6.52		
>Transport channel identity	MP		Transport channel identity 10.3.5.18		
>RACH TFS	MD		Transport format set 10.3.5.23	Default value is the value of "RACH TFS" for the previous PRACH in the list NOTE: The first occurrence is then MP). NOTE: For TDD in this release there is a single TF within the RACH TFS.	
>Additional RACH TFS for CCCH	OP		Additional Dynamic Transport Format Information for CCCH 10.3.5.2a	FDD only	REL-6
>RACH TFCS	MD		Transport Format Combination Set 10.3.5.20	Default value is the value of "RACH TFCS" for the previous PRACH in the list. NOTE: The first occurrence is then MP). NOTE: For TDD in this release there is no TFCS required.	
>Additional RACH TFCS for CCCH	CV-Add- RACH-TFS		Additional RACH TFCS for CCCH 10.3.5.2b		REL-6
>PRACH partitioning	MD		PRACH partitioning 10.3.6.53	Default value is the value of "PRACH partitioning" for the previous PRACH in the list (note : the first occurrence is then MP)	
>Persistence scaling factors	OP		Persistence scaling factors 10.3.6.48	This IE shall not be present if only ASC 0 and ASC 1 are defined. If this IE is absent, value is the value of "Persistence scaling factors" for the previous PRACH in the list if value exists	
>AC-to-ASC mapping	CV-SIB5- MD		AC-to-ASC mapping 10.3.6.1	Only present in SIB 5 and in SIB 5bis. Default value is the value of "AC-to-ASC mapping" for the previous PRACH in the list. NOTE: The first occurrence is then MP in SIB5 and in SIB5bis.	
>CHOICE mode >>FDD	MP				
>>>Primary CPICH TX power	MD		Primary CPICH TX power 10.3.6.61	Default value is the value of "Primary CPICH TX power" for the previous PRACH in the list. NOTE: The first occurrence is	

Information element	Need	Multi	Type and reference	Semantics description	Version
				then MP.	
>>>Constant value	MD		Constant value 10.3.6.11	Default value is the value of "Constant value" for the previous PRACH in the list. NOTE: The first occurrence is then MP.	
>>>PRACH power offset	MD		PRACH power offset 10.3.6.54	Default value is the value of "PRACH power offset" for the previous PRACH in the list. NOTE: The first occurrence is then MP.	
>>>RACH transmission parameters	MD		RACH transmission parameters 10.3.6.67	Default value is the value of "RACH transmission parameters" for the previous PRACH in the list. NOTE: The first occurrence is then MP.	
>>>AICH info	MD		AICH info 10.3.6.2	Default value is the value of "AICH info" for the previous PRACH in the list. NOTE: The first occurrence is then MP.	
>>TDD				(no data)	

Condition	Explanation
SIB5-MD	The information element is present only in SIB 5 and in SIB5bis. In SIB 5 and in SIB 5bis it is mandatory with default.
Add-RACH-TFS	The information element is MP if the IE "Additional RACH TFS for CCCH" is included. Otherwise the information element is not needed.

NOTE: If the setting of the PRACH information results in that a combination of a signature, preamble scrambling code and subchannel corresponds to a RACH with different TFS and/or TFCS, then for that combination only the TFS/TFCS of the PRACH listed first is valid, where PRACHs listed in System Information Block type 5 or 5bis shall be counted first.

10.3.6.56 Predefined PhyCH configuration

This information element concerns a pre- defined configuration of physical channel parameters.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Uplink radio resources				
Uplink DPCH info	MP		Uplink DPCH info Pre 10.3.6.90	
Downlink radio resources				
Downlink information common for all radio links	OP		Downlink information common for all radio links Pre 10.3.6.26	

10.3.6.57 Primary CCPCH info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP				

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>FDD			1010101100		
>>TX Diversity indicator	MP		Boolean	TRUE indicates that transmit diversity is used.	
>TDD					
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>CHOICE SyncCase	OP				
>>>>Sync Case 1					
>>>>Timeslot	MP		Integer (014)	PCCPCH timeslot	
>>>>Sync Case 2					
>>>>Timeslot	MP		Integer(06)		
>>>7.68 Mcps TDD					REL-7
>>>CHOICE SyncCase	OP				REL-7
>>>>Sync Case 1					REL-7
>>>>Timeslot	MP		Integer (014)	PCCPCH timeslot	REL-7
>>>>Sync Case 2					REL-7
>>>>Timeslot	MP		Integer(06)		REL-7
>>>1.28 Mcps TDD					REL-4
>>>TSTD indicator	MP		TSTD indicator 10.3.6.85a		REL-4
>>Cell parameters ID	ОР		Cell parameters Id 10.3.6.9	The Cell parameters ID is described in [32].	
>>SCTD indicator	MP		SCTD indicator 10.3.6.70a		

10.3.6.58 Primary CCPCH info post

NOTE: Only for TDD

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD					REL-4
>>CHOICE SyncCase	MP				
>>>Sync Case 1					
>>>Timeslot	MP		Integer (014)	PCCPCH timeslot	
>>>Sync Case 2					
>>>>Timeslot	MP		Integer(06)		
>7.68 Mcps TDD					REL-7
>>CHOICE SyncCase	MP				REL-7
>>>Sync Case 1					REL-7
>>>Timeslot	MP		Integer (014)	PCCPCH timeslot	REL-7
>>>Sync Case 2					REL-7
>>>>Timeslot	MP		Integer(06)		REL-7
>1.28 Mcps TDD					REL-4
>>TSTD indicator	MP		TSTD		REL-4
			indicator		
			10.3.6.85a		
Cell parameters ID	MP		Cell	The Cell	
			parameters	parameters ID is	

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
			ld 10.3.6.9	described in [32].	
SCTD indicator	MP		SCTD		
			indicator		
			10.3.6.70a		

10.3.6.59 Primary CCPCH TX Power

NOTE: Only for TDD.

Information Element/group name	Need	Multi	Type and reference	Semantics description
Primary CCPCH Tx Power	MP		Integer(643	In dBm

10.3.6.60 Primary CPICH info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary scrambling code	MP		Integer(051	

10.3.6.61 Primary CPICH Tx power

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary CPICH Tx Power	MP		Integer(- 1050)	Power in dBm.

10.3.6.62 Primary CPICH usage for channel estimation

NOTE: Only for FDD.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
Primary CPICH usage for	MP		Enumerated(
channel estimation			Primary	
			CPICH may	
			be used,	
			Primary	
			CPICH shall	
			not be used)	

10.3.6.63 PUSCH info

NOTE: Only for 1.28 Mcps and 3.84 Mcps TDD.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
TFCS ID	MD		Integer(18)	Default value is 1
Common timeslot info	OP		Common	
			timeslot info	
			10.3.6.10	
PUSCH timeslots and codes	OP		Uplink	
			Timeslots	
			and Codes	
			10.3.6.94	

10.3.6.63a PUSCH info VHCR

NOTE: Only 7.68 Mcps TDD (REL-7).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCS ID	MD		Integer(18)	Default value is 1
Common timeslot info	OP		Common timeslot info 10.3.6.10	
PUSCH timeslots and codes VHCR	OP		Uplink Timeslots and Codes VHCR 10.3.6.94b	

10.3.6.64 PUSCH Capacity Allocation info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE PUSCH allocation	MP			
>PUSCH allocation pending				(no data)
>PUSCH allocation assignment				
>>PUSCH allocation period info	MP		Allocation Period Info 10.3.6.4	
>>PUSCH power control info	OP		PUSCH power control info 10.3.6.65	
>>CHOICE Configuration	MP			
>>>Old configuration				
>>>>TFCS ID	MD		Integer(18)	Default is 1.
>>>>PUSCH Identity	MP		Integer(1hi PUSCHident ities)	
>>>New 1.28 Mcps TDD or 3.84 Mcps TDD configuration				
>>>PUSCH info	MP		PUSCH info 10.3.6.63	
>>>PUSCH Identity	OP		Integer(1 hiPUSCHide ntities)	
>>>New 7.68 Mcps TDD configuration				REL-7
>>>>PUSCH info VHCR	MP		PUSCH info VHCR 10.3.6.63a	REL-7
>>>>PUSCH Identity	OP		Integer(1 hiPUSCHide ntities)	REL-7

10.3.6.65 PUSCH power control info

NOTE: Only for TDD.

Interference level measured for a frequency at the UTRAN access point used by UE to set PUSCH output power.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
UL target SIR	MP		Real (-11		
			20 by step of	For 1.28 Mcps	REL-4
			0.5 dB)	TDD this	
				parameter	
				represents	
				PRXPUSCHdes	
				with range	
				Integer(-12058	
				by step of 1) dBm	
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD				(no data)	REL-4
>7.68 Mcps TDD				(no data)	REL-7
>1.28 Mcps TDD					REL-4
>>TPC Step Size	OP		Integer	In dB	REL-4
			(1, 2, 3)		

Need	Multi	Type and	Semantics	Version
		reference	description	
OP		Enumerated (true)	The presence of this IE indicates that the UE may take into account path loss estimated from beacon function physical channels. The absence indicates that UE may not take into account path loss estimated from beacon function physical channels.	REL-6
			P reference Enumerated	reference description Enumerated (true) Enumerated (true) The presence of this IE indicates that the UE may take into account path loss estimated from beacon function physical channels. The absence indicates that UE may not take into account path loss estimated from

10.3.6.66 PUSCH system information

NOTE: Only for 1.28 Mcps or 3.84 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PUSCH information	MP	1 to <maxpu SCH></maxpu 			
>PUSCH Identity	MP		Integer(1 hiPUSCHi dentities)		
>PUSCH info	MP		PUSCH info 10.3.6.63		
>SFN Time Info	CH- Block17		SFN Time Info 10.3.6.75		
>USCH TFS	OP		Transport format set 10.3.5.23		
>USCH Transport Channels	OP	1 to <maxtr CH></maxtr 		If PUSCH is configured for 3.84 Mcps TDD in Rel-5 this IE may be included.	REL-5
>> USCH Transport channel identity	MP		Transport channel identity 10.3.5.18		REL-5
>>USCH TFS	MP		Transport format set 10.3.5.23		REL-5
>USCH TFCS	OP		Transport Format Combinati on Set 10.3.5.20		

Condition	Explanation
Block17	This IE is not needed in System Information Block 17.
	Otherwise it is optional.

10.3.6.66a PUSCH system information VHCR

NOTE: Only for 7.68 Mcps TDD (REL-7).

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PUSCH information	MP	1 to <maxpu SCH></maxpu 			
>PUSCH Identity	MP		Integer(1 hiPUSCHi dentities)		
>PUSCH info VHCR	MP		PUSCH info VHCR 10.3.6.63 a		REL-7
>SFN Time Info	CH- Block17		SFN Time Info 10.3.6.75		REL-7
>USCH TFS	ОР		Transport format set 10.3.5.23		REL-7
>USCH Transport Channels	OP	1 to <maxtr CH></maxtr 		If PUSCH is configured for 7.68 Mcps TDD in Rel-7 this IE may be included.	REL-5
>> USCH Transport channel identity	MP		Transport channel identity 10.3.5.18		REL-5
>>USCH TFS	MP		Transport format set 10.3.5.23		REL-5
>USCH TFCS	OP		Transport Format Combinati on Set 10.3.5.20		

Condition	Explanation
Block17	This IE is not needed in System Information Block 17.
	Otherwise it is optional.

10.3.6.67 RACH transmission parameters

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Mmax	MP		Integer(132	Maximum number of preamble cycles
NB01min	MP		Integer(050	Sets lower bound for random back-off
NB01max	MP		Integer(050	Sets upper bound for random back-off

10.3.6.68 Radio link addition information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Primary CPICH info	MP		Primary CPICH info		
			10.3.6.60		
Cell ID	OP		Cell ID		REL-4
			10.3.2.2		
CHOICE DPCH info	MP				REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Downlink DPCH info for each RL	MP		Downlink DPCH info		
INE			for each RL 10.3.6.21		
>Downlink F-DPCH info for each RL	MP		Downlink F- F-DPCH info for each RL 10.3.6.23ob		REL-6
E-HICH Information	OP		E-HICH Info 10.3.6.101		REL-6
E-RGCH Information	OP		E-RGCH Info 10.3.6.102		REL-6

10.3.6.69 Radio link removal information

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Primary CPICH info	MP		Primary	
			CPICH info	
			10.3.6.60	

10.3.6.69a E-DCH reconfiguration information

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
E-DCH RL Info new serving cell	OP				REL-6
>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	Indicates scheduling E-DCH cell from the active set cells.	REL-6
>E-AGCH Info	MP		E-AGCH Info 10.3.6.100		REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>Serving Grant	OP				REL-6
>>Serving Grant value	MP		Integer (037,38)	(037) indicates E-DCH serving grant index as defined in [15]; index 38 means zero grant.	REL-6
>>Primary/Secondary Grant Selector	MP		Enumerated ('primary', 'secondary')	Indicates whether the Serving Grant is received with a Primary E-RNTI or Secondary E- RNTI.	REL-6
>E-DPCCH/DPCCH power offset	OP		Integer (08)	Refer to quantization of the power offset in [28].	REL-6
>Reference E-TFCIs	OP	1 to 8		See [29].	REL-6
>>Reference E-TFCI	MP		Integer (0127)		REL-6
>>Reference E-TFCI PO	MP		Integer (029)	Refer to quantization of the power offset in [28].	REL-6
>Power Offset for Scheduling Info	OP		Integer (06)	Only used when no MACd PDU"s are included in the same MACe PDU. Unit is in dB.	REL-6
>3-Index-Step Threshold	OP		Integer (037)	Refers to an index in the 'SG-Table' (see [15]).	REL-6
>2-Index-Step Threshold	OP		Integer (037)	Refers to an index in the 'SG-Table' (see [15]).	REL-6
>E-HICH Information	OP		E-HICH Info 10.3.6.101	This IE is not present if the serving E-DCH cell is added to the active set with this message.	REL-6
>CHOICE E-RGCH Information	OP			This IE is not present if the serving E-DCH cell is added to the active set with this message	REL-6
>>E-RGCH Information	MP		E-RGCH Info 10.3.6.102		REL-6
>>E-RGCH release indicator				(no data)	REL-6
E-DCH RL Info other cells	OP	1 to <maxedc HRL></maxedc 		This IE is not allowed to include information on a RL added by this message	REL-6
>Primary CPICH info	MP		Primary CPICH info 10.3.6.60		REL-6
>CHOICE E-HICH Information	OP				REL-6
>>E-HICH Information	MP		E-HICH Info 10.3.6.101		REL-6
>>E-HICH release indicator	1	1		(no data)	REL-6
>CHOICE E-RGCH Information	OP		E DOO! :		REL-6
>>E-RGCH Information	MP		E-RGCH		REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			Info		
			10.3.6.102		
>>E-RGCH release indicator				(no data)	REL-6

10.3.6.70 Void

10.3.6.70a SCTD indicator

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SCTD indicator	MP		Boolean	TRUE indicates that SCTD is used

10.3.6.71 Secondary CCPCH info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP			•	
>FDD >>Secondary scrambling code	OP		Secondary scrambling code 10.3.6.74	May only be sent for SCCPCH channels not carrying the PCH.	
>>STTD indicator	MP		STTD Indicator 10.3.6.78		
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)		
>>Code number	MP		Integer(0Sp reading factor - 1)		
>>Pilot symbol existence	MP		Boolean	TRUE means the existence.	
>>TFCI existence	MP		Boolean	TRUE indicates that TFCI is used. When spreading factor is less than or equal to 64, FALSE indicates that TFCI is not used and therefore DTX is used in the TFCI field.	
>>Fixed or Flexible Position	MP		Enumerated (Fixed, Flexible)		
>>Timing Offset	MD		Integer(038 144 by step of 256)	Chip Delay of the Secondary CCPCH relative to the Primary CCPCH. Default value is 0.	
>1.28 Mcps TDD or 3.84 Mcps TDD					
>>Offset	MP		Integer (0Repetitio n Period -1)	SFN modulo Repetition period = offset. Repetition period is the one indicated in the accompanyi ng Common timeslot info IE	
>>Common timeslot info	MP		Common		

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
- Tamo			timeslot info	ucconpuen	
>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37		
>>Code List	MP	1 to 16			
>>>Channelisation Code	MP		Enumerated((16/1)(16/1 6))		
>7.68 Mcps TDD					REL-7
>>Offset	MP		Integer (0Repetitio n Period -1)	SFN modulo Repetition period = offset. Repetition period is the one indicated in the accompanyi ng Common timeslot info IE	REL-7
>>Common timeslot info	MP		Common timeslot info 10.3.6.10		REL-7
>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37		REL-7
>>Code List	MP	1 to 32			REL-7
>>>Channelisation Code	MP		Enumerated((32/1)(32/3 2))		REL-7

10.3.6.71a Secondary CCPCH info MBMS

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE mode	MP				REL-6
>FDD					REL-6
>>Secondary scrambling code	OP		Secondary scrambling code 10.3.6.74	May only be sent for SCCPCH channels not carrying the PCH.	REL-6
>>STTD indicator	MP		STTD Indicator 10.3.6.78		REL-6
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)		REL-6
>>Code number	MP		Integer(0Sp reading factor – 1)		REL-6
>>Timing Offset	MD		Integer(038 144 by step of 256)	Chip Delay of the Secondary CCPCH relative to the Primary CCPCH. Default value is 0.	REL-6
>TDD					REL-6
>>Downlink Timeslots and Codes	MP		Downlink timeslots and codes 10.3.6.32	One or more timeslots and codes for S-CCPCH supporting MBMS MTCHSFN	REL-6

NOTE: For FDD, the S-CCPCH signalled in this IE is always configured with flexible position, TFCI is always present and pilot is always absent.

10.3.6.72 Secondary CCPCH system information

Information element	Need	Multi	Type and reference	Semantics description	Version
Secondary CCPCH system information list	MP	1 to <maxscc PCH></maxscc 			
>Secondary CCPCH info	MP		Secondary CCPCH info 10.3.6.71	Note 1	
>TFCS	MD		Transport format combination set 10.3.5.20	For FACHs and PCH Default value is the value of "TFCS" for the previous SCCPCH in the list. NOTE: The first occurrence is then MP.	
>FACH/PCH information list	MD	1 to <maxfac HPCH></maxfac 		Default value is the value of "FACH/PCH" for the previous SCCPCH in the list. NOTE: The first occurrence is then MP.	
>>TFS	MP		Transport format set 10.3.5.23	For each FACH and PCH Note 2	
>>Transport channel identity	MP		Transport channel identity 10.3.5.18		
>>CTCH indicator	MP		Boolean	The value "TRUE" indicates that a CTCH is mapped on the FACH, and "FALSE" that no CTCH is mapped.	
>PICH info	OP		PICH info 10.3.6.49	PICH info is present only when PCH is multiplexed on Secondary CCPCH	
MCCH configuration information	CV-SIB type 5		MCCH configuration information 10.3.9a.13	Included if MCCH is on an S- CCPCH used also for Non- MBMS Note 3	REL-6

NOTE 1: The secondary CCPCHs carrying a PCH shall be listed first.

NOTE 2: TFS for PCH shall be the first "FACH/PCH information" in the list if a PCH exists for the respective secondary CCPCH.

NOTE 3: If the IE "MCCH configuration information is included", it applies to the last S-CCPCH in the IE "Secondary CCPCH system information list" and to the last FACH included in the IE "FACH/PCH information list".

Condition	Explanation
SIB type 5	The IE is optional if the IE " Secondary CCPCH
	system information" is included in the SIB type 5 or
	5bis, otherwise the IE is not needed in the message

10.3.6.72a Secondary CCPCH system information MBMS

Information element	Need	Multi	Type and reference	Semantics description	Version
Secondary CCPCH system information	MP			An S-CCPCH carrying MCCH and possibly also MTCH and MSCH	REL-6
>Secondary CCPCH info MBMS	MP		Secondary CCPCH info MBMS 10.3.6.71a		REL-6
>TFCS	MP		Transport format combination set 10.3.5.20		REL-6
>FACH carrying MCCH	MP				REL-6
>>TFS	MP		Transport format set 10.3.5.23		REL-6
>>MCCH configuration information	MP		MCCH configuration information 10.3.9a.13		REL-6
>FACH carrying MTCH list	OP	1 to <maxfac HPCH></maxfac 			REL-6
>>TFS	MP		Transport format set 10.3.5.23		REL-6
>Scheduling information	OP				REL-6
>>FACH carrying MSCH	MP		Transport format set 10.3.5.23	Transport channel carrying MSCH	REL-6
>>MSCH configuration information	MP		MSCH configuration information 10.3.9a.16		REL-6

10.3.6.73 Secondary CPICH info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH
Channelisation code	MP		Integer(025 5)	SF=256

10.3.6.74 Secondary scrambling code

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Secondary scrambling code	MP		Integer(115	

10.3.6.74a Serving HS-DSCH cell information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
ΔΑCΚ	OP		Integer(08)	Refer to quantization of the power offset in [28]	REL-6
Δ_{NACK}	OP		Integer(08)	Refer to quantization of the power offset in [28]	REL-6
HARQ_preamble_mode	MP		Integer(0, 1)	1 indicates that preamble and postamble are used on the HS- DPCCH – see [29]	REL-6
Primary CPICH info	OP		Primary CPICH info 10.3.6.60	Indicate the new HS-DSCH serving cell	REL-6
Downlink HS-PDSCH Information	OP		Downlink HS_PDSCH Information 10.3.6.23a		REL-6
HARQ Info	OP		HARQ info 10.3.5.7a		REL-6
MAC-hs reset indicator	OP		Enumerated (true)	TRUE Indicates the MAC-hs entity needs to be reset.	REL-6

10.3.6.75 SFN Time info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activation time SFN	MP		Integer (04095)	System frame number start of the physical channel existence.
Duration	MP		Integer(140 96)	Total number of frames the physical channel will exist.

10.3.6.75a Special Burst Scheduling

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Special Burst Generation Period	MP		Integer (07)	Value represents number of radio frames 0 = 2 frames, 1 = 4 frames, 2 = 8 frames, 3 = 16 frames, 4 = 32 frames, 5 = 64 frames, 6 = 128 frames, 7 = 256 frames

10.3.6.76 Void

10.3.6.77 Void

10.3.6.78 STTD indicator

NOTE: Only for FDD

Indicates whether STTD is used or not.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
STTD Indicator	MP		Boolean	TRUE means that STTD is
				used

10.3.6.78a SYNC_UL info

NOTE: Only for 1.28 Mcps TDD.

Information Element/ Group name	Need	Multi	Type and reference	Semantics description	Version
SYNC_UL codes bitmap	MP		Bitstring(8)	Each bit indicates availability of a SYNC_UL code, where the SYNC_UL codes are numbered "code 0" to "code 7". The value 1 of a bit indicates that the corresponding SYNC_UL code can be used. The value 0 of a bit indicates that the corresponding SYNC_UL code can be used.	REL-4
PRX _{UpPCHdes}	MP		Integer(- 12058 by step of 1)	In dBm	REL-4
Power Ramp Step	MP		Integer(0,1,2 ,3)	In dB	REL-4
Max SYNC_UL Transmissions	MP		Integer(1,2,4 ,8)	Maximum numbers of SYNC_UL transmissions in a power ramping sequence.	REL-4
Mmax	MP		Integer(132	Maximum number of synchronisation attempts.	REL-4

10.3.6.79 TDD open loop power control

This information element contains parameters for open loop power control setting for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Primary CCPCH Tx Power	MP		Primary CCPCH Tx Power 10.3.6.59	For path loss calculation	
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD					REL-4
>>Alpha	OP		Alpha 10.3.6.5		
>>PRACH Constant Value	MP		Constant Value TDD 10.3.6.11a	Operator controlled PRACH Margin	
>>DPCH Constant Value	MP		Constant	Operator	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			Value TDD 10.3.6.11a	controlled UL DPCH Margin	
>>PUSCH Constant Value	OP		Constant Value TDD 10.3.6.11a	Operator controlled PUSCH Margin	
>>UE positioning related parameters	CV-IPDLs				REL-4
>>>IPDL-Alpha	MP		Alpha 10.3.6.5		REL-4
>>>Max power increase	MP		Integer (03)	In db	REL-4
>7.68 Mcps TDD					REL-7
>>Alpha	OP		Alpha 10.3.6.5		REL-7
>>PRACH Constant Value	MP		Constant Value TDD 10.3.6.11a	Operator controlled PRACH Margin	REL-7
>>DPCH Constant Value	MP		Constant Value TDD 10.3.6.11a	Operator controlled UL DPCH Margin	REL-7
>>PUSCH Constant Value	OP		Constant Value TDD 10.3.6.11a	Operator controlled PUSCH Margin	REL-7
>>UE positioning related parameters	CV-IPDLs			-	REL-7
>>>IPDL-Alpha	MP		Alpha 10.3.6.5		
>>>Max power increase	MP		Integer (03)	In db	REL-7
>1.28 Mcps TDD				(no data)	REL-4

Condition	Explanation
IPDLs	This IE is present only if idle periods are applied

10.3.6.80 TFC Control duration

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFC Control duration	MP		Integer (1, 2, 4, 8, 16, 24, 32, 48, 64, 128, 192, 256, 512)	Defines the period in multiples of 10 ms frames for which the defined TFC sub-set is to be applied.

10.3.6.81 Void

10.3.6.82 TGPSI

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
TGPSI	MP		Integer(1M axTGPS)	Transmission Gap Pattern Sequence Identifier Establish a reference to the compressed mode pattern sequence. Up to <maxtgps> simultaneous compressed mode pattern sequences can be used.</maxtgps>

10.3.6.83 Time info

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Activation time	MD		Activation	Frame number start of the
			time 10.3.3.1	physical channel existence.
				Default value is "Now"
Duration	MD		Integer(140	Total number of frames the
			96, infinite)	physical channel will exist.
			,	Default value is "infinite".

10.3.6.84 Timeslot number

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE TDD option	MP				REL-4
>3.84 Mcps TDD					REL-4
>>Timeslot number	MP		Integer(014	Timeslot within a frame	
>7.68 Mcps TDD					REL-7
>>Timeslot number	MP		Integer(014	Timeslot within a frame	REL-7
>1.28 Mcps TDD					REL-4
>>Timeslot number	MP		Integer(06)	Timeslot within a subframe	REL-4

10.3.6.85 TPC combination index

NOTE: Only for FDD.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
TPC combination index	MP		Integer(0 5)	Radio links with the same index have TPC bits, which for the UE are known to be the same. Radio links that are part of the E-DCH active set and with the same index have acknowledgement feedback signals on the E-HICH which for the UE are known to be the	REL-6
				same.	

10.3.6.85a TSTD indicator

NOTE: Only for 1.28 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
TSTD indicator	MD		Boolean	Default value is "TRUE"	REL-4

10.3.6.86 TX Diversity Mode

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Tx diversity Mode	MP		Enumerated (none, STTD, closed loop mode1)	

10.3.6.87 UL interference

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL interference	MP		Integer (- 11070)	In dBm

NOTE: In TDD, this IE is a timeslot specific value.

10.3.6.87a UL interference TDD

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TDD UL interference	MP		Integer (- 11052)	In dBm

NOTE: This IE is a timeslot specific value.

10.3.6.88 Uplink DPCH info

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference	•	
Uplink DPCH power	OP		Uplink		
control info			DPCH		
			power		
			control		
			info 10.3.6.91		
CHOICE mode	MP		10.3.0.91		
>FDD					
>>Scrambling code type	MP		Enumerat		
			ed(short,		
			long)		
>>Scrambling code	MP		Integer(0		
number			16777215		
>>Number of DPDCH	MD		Integer(0	Default value is 1.	
>>Number of Dr Doff	טועו		maxDPD	Number of DPDCH is 1	
			CH-UL)	in HANDOVER TO	
			002)	UTRAN COMMAND.	
				Value 0 may only be	
				used if target	
				configuration has no	
				uplink DPDCH.	
>>Spreading factor	CV-		Integer(4,	Minimum allowed SF of	
	DPDCH		8, 16, 32,	the channelisation code	
	present		64, 128,	for data part	
>>TFCI existence	MP		256) Boolean	TRUE means	
>> i FCi existence	IVIP		boolean	existence.	
>>Number of FBI bits	OP		Integer (1,	In bits.	
			2)		
>>Puncturing Limit	CV-		Real(0.40		
	DPDCH		1 by		
	present		step of		
>TDD			0.04)		
>>Uplink Timing	OP		Uplink		
Advance Control			Timing		
			Advance		
			Control		
			10.3.6.96		
>>UL CCTrCH List	OP	1 to		UL physical channels to	
		<maxcc< td=""><td></td><td>establish or reconfigure</td><td></td></maxcc<>		establish or reconfigure	
>>>TFCS ID	MD	TrCH>	Integer(1	list. Default value is 1.	
77711 00 15	IVID		8)	Dolault value is 1.	
>>>UL target SIR	MP		Real (-11	In dB	
			20 by	For 1.28 Mcps TDD this	REL-4
			step of	parameter represents	
			0.5dB)	PRX _{DPCHdes} with	
				range Integer(-120	
				58 by step of 1) dBm	
>>>Time info	MP		Time info		
>>>Common timeslot	MD		10.3.6.83 Common	Default is the current	
info	טועו		timeslot	Common timeslot info	
			info	Common timosiot imo	
			10.3.6.10		
>>> CHOICE TDD option					REL-7
>>>> 3.84 Mcps TDD					REL-7
>>>>Uplink DPCH	MD		Uplink	Default is to use the old	
timeslots and codes			Timeslots	timeslots and codes.	
			and		
	1		Codes		1

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
•			10.3.6.94		
>>>>7.68 Mcps TDD					REL-7
>>>>Uplink DPCH timeslots and codes VHCR	MD		Uplink Timeslots and Codes VHCR 10.3.6.94 a	Default is to use the old timeslots and codes	REL-7
>>>> 1.28 Mcps TDD					REL-7
>>>>Uplink DPCH timeslots and codes LCR	MD		Uplink Timeslots and Codes LCR 10.3.6.94 a	Default is to use the old timeslots and codes.	REL-7
>>UL CCTrCH List to Remove	OP	1 <max CCTrCH</max 		UL physical channels to remove list	
>>>TFCS ID	MP		Integer(1 8)		

Condition	Explanation
DPDCHpresent	This IE is mandatory if the target configuration
	includes a DPDCH, otherwise it is not needed.

10.3.6.89 Uplink DPCH info Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink DPCH power control info	MP		Uplink DPCH power control info Post 10.3.6.92	
CHOICE mode	MP			
>FDD				
>>Scrambling code type	MP		Enumerated(short, long)	
>>Reduced scrambling code number	MP		Integer(081 91)	Sub-range of values for initial use upon handover to UTRAN.
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)	SF of the channelisation code for data part There is only one DPDCH for this case
>1.28 Mcps TDD and 3.84 Mcps TDD				
>>Uplink Timing Advance Control	OP		Uplink Timing Advance Control 10.3.6.96	
>>Uplink DPCH timeslots and codes	MP		Uplink Timeslots and Codes 10.3.6.94	
>7.68 Mcps TDD				REL-7
>>Uplink Timing Advance Control	OP		Uplink Timing Advance Control 10.3.6.96	REL-7
>>Uplink DPCH timeslots and codes	MP		Uplink Timeslots and Codes VHCR 10.3.6.94b	REL-7

10.3.6.90 Uplink DPCH info Pre

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Uplink DPCH power control info	OP		Uplink DPCH power control info Pre 10.3.6.93	
CHOICE mode	MP			
>FDD				
>>TFCI existence	MP		Boolean	TRUE means existence. Default value is "TRUE"
>>Puncturing Limit	MP		Real(0.401 by step of 0.04)	
>TDD				
>>Common timeslot info	MP		Common Timeslot Info 10.3.6.10	

Condition	Explanation
Single	This IE is mandatory present if the IE "Number of
	DPDCH" is "1" and not needed otherwise.

10.3.6.91 Uplink DPCH power control info

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control in FDD and 1.28 Mcps TDD and parameters for uplink open loop power control in 3.84 Mcps TDD and 7.68 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP			_	
>FDD					
>>DPCCH Power offset	MP		Integer(- 164,6 by step of 2)	In dB	
>>PC Preamble	MP		Integer (07)	In number of frames	
>>SRB delay	MP		Integer(07)	In number of frames	
>>Power Control Algorithm	MP		Enumerated (algorithm 1, algorithm 2)	Specifies algorithm to be used by UE to interpret TPC commands	
>>TPC step size	CV-algo		Integer (1, 2)	In dB	
>>Δ _{ACK}	OP		Integer (08)	Refer to quantization of the power offset in [28]	REL-5
>>∆nack	OP		Integer (08)	refer to quantization of the power offset in [28]	REL-5
>>Ack-Nack repetition factor	OP		Integer(14)		REL-5
>>HARQ_preamble_mode	MP		Integer (0, 1)	1 indicates that preamble and postamble are used on the HS- DPCCH – see [29]	REL-6
>TDD					
>>>>UL target SIR	OP		Real (-11 20 by step of 0.5dB)	In dB For 1.28 Mcps TDD this parameter represents PRX _{DPCHdes} with range Integer(- 12058 by step of 1) dBm	REL-4
>>CHOICE UL OL PC info	MP				
>>>Broadcast UL OL PC info			Null	No data	
>>>Individually Signalled	OP				
>>>>CHOICE TDD option	MP				REL-4
>>>>3.84 Mcps TDD					REL-4
>>>>Individual timeslot interference info	MP	1 to <maxts></maxts>			
>>>>>Individual timeslot interference	MP		Individual timeslot interference 10.3.6.38		
>>>>DPCH Constant Value	OP		Constant Value TDD 10.3.6.11a	Quality Margin	
>>>>7.68 Mcps TDD					REL-7

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>>Individual timeslot interference info	MP	1 to <maxts></maxts>			REL-7
>>>>>Individual timeslot interference	MP		Individual timeslot interference 10.3.6.38		REL-7
>>>>>DPCH Constant Value	OP		Constant Value TDD 10.3.6.11a	Quality Margin	REL-7
>>>>1.28 Mcps TDD					REL-4
>>>>Beacon PL Est.	CV- houtran		Enumerated (true)	The presence of this IE indicates that the UE may take into account path loss estimated from beacon function physical channels. The absence indicates that UE may not take into account path loss estimated from beacon function physical channels	REL-6
>>>>TPC step size	MP		Integer(1,2,3		REL-4
>>>>Primary CCPCH Tx Power	OP		Primary CCPCH Tx Power 10.3.6.59	For Pathloss Calculation	

Condition	Explanation
algo	The IE is mandatory present if the IE "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is not needed
houtran	This IE is optional in Cell Update Confirm, Physical Channel Reconfiguration, Radio Bearer Reconfiguration, Radio Bearer Release, Radio Bearer Setup, Transport Channel Reconfiguration and Uplink Physical Channel Control. The IE is not included in the Handover To UTRAN Command

10.3.6.92 Uplink DPCH power control info Post

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP			_	
>FDD					
>>DPCCH Power offset	MP		Integer(- 11050 by step of 4)	In dB	
>>PC Preamble	MP		Integer (07)	in number of frames	
>>SRB delay	MP		Integer (07)	In number of frames	
>TDD					
>>UL target SIR	MP		Real (-11	In dB	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			20 by step of 0.5dB)	For 1.28 Mcps TDD this parameter represents PRX _{DPCHdes} with range Integer(- 12058 by step of 1) dBm	REL-4
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>UL Timeslot Interference	MP		UL Interference TDD 10.3.6.87a		
>>>7.68 Mcps TDD					REL-7
>>>>UL Timeslot Interference	MP		UL Interference TDD 10.3.6.87a		REL-7
>>>1.28 Mcps TDD				(no data)	REL-4

Condition	Explanation
algo	The IE is mandatory present if the IE "Power Control
	Algorithm" is set to "algorithm 1", otherwise the IE is
	not needed

10.3.6.93 Uplink DPCH power control info Pre

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control in FDD and parameters for uplink open loop power control in 3.84 Mcps TDD and 7.68 Mcps TDD.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE mode	MP				
>FDD					
>>Power Control Algorithm	MP		Enumerated (algorithm 1, algorithm 2)	Specifies algorithm to be used by UE to interpret TPC commands	
>>TPC step size	CV-algo		Integer (1, 2)	In dB	
>TDD				(No data)	
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>DPCH Constant Value	MP		Constant Value TDD 10.3.6.11a	Quality Margin	
>>>7.68 Mcps TDD					REL-7
>>DPCH Constant Value	MP		Constant Value TDD 10.3.6.11a	Quality Margin	REL-7
>>>1.28 Mcps TDD				(no data)	REL-4

Condition	Explanation		
algo	The IE is mandatory present if the IE "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is		
	not needed		

10.3.6.94 Uplink Timeslots and Codes

NOTE: Only for 1.28 Mcps TDD and 3.84 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Dynamic SF usage	MP		Boolean	
First Individual timeslot info	MP		Individual timeslot info 10.3.6.37	Individual timeslot info for the first timeslot used by the physical layer.
First timeslot Code List	MP	12		Code list used in the timeslot. given in First individual timeslot info.
>Channelisation Code	MP		Enumerated((1/1),)(2/1),(2/2),(4/1)(4/4),(8/1)(8/8),(16/1)(16/16))	
CHOICE more timeslots	MP			
>No more timeslots	1			(no data)
>Consecutive timeslots				(iii data)
>>Number of additional timeslots	MP		Integer(1m axTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k
Time and at the state of the st				the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.
>Timeslot list				
>>Additional timeslot list	MP	1 to <maxts- 1></maxts- 		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.
>>>CHOICE parameters	MP			
>>>Same as last				
>>>>Timeslot number	MP		Timeslot Number 10.3.6.84	This physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.
>>>>New parameters				
>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>>>Code List	MP	12		
>>>>>Channelisation Code	MP		Enumerated((1/1),)(2/1),(2/2),(4/1)(4/ 4),(8/1)(8/8) ,(16/1)(16/1 6))	

10.3.6.94a Uplink Timeslots and Codes LCR

NOTE: Only for 1.28 Mcps TDD

Information	Need	Multi	Type and	Semantics
Element/Group name			reference	description
Dynamic SF usage	MP		Boolean	
First Individual timeslot	MP		Individual	Individual timeslot info
info			timeslot	for the first timeslot
			info	used by the physical
First timeslot Code List	MD	1.0	10.3.6.37	layer. Code list used in the
First timeslot Code List	MP	12		timeslot, given in First
				individual timeslot info.
>Channelisation Code	MP		Enumerate	marviadar timesiot imo.
F Griatinionication Code			d((1/1),)(2/	
			1),(2/2),(4/	
			1)(4/4),(8/	
			1)(8/8),(1	
			6/1)(16/1	
			6))	
>PLCCH Info	CV-		PLCCH	
	no_DL_D		Info	
	PCH		10.3.6.50a	
CHOICE more timeslots	MP			(
>No more timeslots				(no data)
>Consecutive timeslots >>Number of additional	MP		Integer(1	The timeslots used by
timeslots	IVIF		maxTS-1)	the physical layer shall
umesiots			max10-1)	be timeslots:
				N mod maxTS
				(N+1) mod maxTS
				· ′
				(N+k) mod maxTS
				in that order, where N
				is the timeslot number
				in the First individual
				timeslot info and k the
				Number of additional
				timeslots.
				The additional timeslots
				shall use the same parameters (e.g.
				channelisation codes,
				midamble shifts etc.) as
				the first timeslot.
>Timeslot list				o mot amodioti
>>Additional timeslot list	MP	1 to		The first instance of this
		<maxt< td=""><td></td><td>parameter corresponds</td></maxt<>		parameter corresponds
		S-1>		to the timeslot that shall
				be used second by the
				physical layer, the
				second to the timeslot
				that shall be used third
CHOICE ************************************	MD			and so on.
>>>CHOICE parameters >>>>Same as last	MP			
>>>>Timeslot number	MP		Timeslot	This physical layer shall
Timesiot Humber	1411		Number	use the same
			10.3.6.84	parameters (e.g.
				channelisation codes,
				midamble shifts etc.)
				for this timeslot as for
				the last one.
>>>New parameters	145			
>>>>Individual timeslot	MP		Individual	
info			timeslot	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			info 10.3.6.37	
>>>>Code List	MP	12		
>>>>>Channelisation Code	MP		Enumerate d((1/1),)(2/1),(2/2),(4/1)(4/4),(8/1)(8/8),(16/1)(16/16))	
>>>>> PLCCH Info	CV- no_DL_D PCH		PLCCH Info 10.3.6.50a	Default is same as set of parameter values as assigned to last timeslot

Condition	Explanation
No_DL_DPCH	This IE is mandatory present for 1.28 Mcps TDD only in the case that Uplink Timeslots and Codes are assigned for UL DPCH and no DL DPCH is allocated to the UE.

10.3.6.94b Uplink Timeslots and Codes VHCR

NOTE: Only for 7.68 Mcps TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
	MP		Boolean	description	REL-7
Dynamic SF usage First Individual timeslot info	MP		Individual timeslot info 10.3.6.37	Individual timeslot info for the first timeslot used by the physical layer.	REL-7
First timeslot Code List	MP	12		Code list used in the timeslot. given in First individual timeslot info.	REL-7
>Channelisation Code	MP		Enumerated((1/1),)(2/1),(2/2),(4/1)(4/4),(8/1)(8/8. 16/1) (16/16).(32/1)(32/32))		REL-7
CHOICE more timeslots	MP		, , , , , ,		REL-7
>No more timeslots				(no data)	REL-7
>Consecutive timeslots				·	REL-7
>>Number of additional timeslots	MP		Integer(1m axTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.	REL-7
>Timeslot list >>Additional timeslot list	MP	1 to <maxts- 1></maxts- 		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.	REL-7 REL-7
>>>CHOICE parameters	MP				REL-7
>>>Same as last					REL-7
>>>>Timeslot number >>>>New parameters	MP		Timeslot Number 10.3.6.84	This physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.	REL-7

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	-	REL-7
>>>>Code List	MP	12			REL-7
>>>>>Channelisation Code	MP		Enumerated((1/1),)(2/1),(2/2),(4/1)(4/4),(8/1)(8/8) .(16/1) (16/16).(32/1)(32/32))		REL-7

10.3.6.95 Uplink Timing Advance

NOTE: Only for 3.84 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
UL Timing Advance	MP		Integer (063)	Absolute timing advance value to be used to avoid large delay spread at the NodeB	

10.3.6.95a Extended Uplink Timing Advance

NOTE: Only for 3.84 and 7.68 Mcps TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE TDD mode					REL-7
>3.84 Mcps TDD					
>>Extended UL Timing Advance	MP		Integer (0255)	Absolute timing advance value to be used to avoid large delay spread at the NodeB	REL-7
>7.68.Mcps TDD					REL-7
>>Extended UL Timing Advance	MP		Integer (0511)	Absolute timing advance value to be used to avoid large delay spread at the NodeB	REL-7

10.3.6.96 Uplink Timing Advance Control

NOTE: Only for TDD

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
CHOICE Timing Advance	MP				
>Disabled			Null	Indicates that no	
				timing advance is	
				applied	
>Enabled					
>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>UL Timing Advance	MD		Uplink	Absolute timing	
-			Timing	advance value to	
			Advance	be used to avoid	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.6.95	large delay spread at the NodeB. Default value is the existing value for uplink timing advance.	
>>Extended Timing Advance	OP		Extended UL Timing Advance Control 10.3.6.95a		REL-7
>>>Activation Time	OP		Activation Time 10.3.3.1	Frame number timing advance is to be applied. This IE is required when a new UL Timing Advance adjustment is specified and Activation Time is not otherwise specified in the RRC message.	
>>>7.68 Mcps TDD					REL-7
>>>Extended UL Timing Advance	MD		Extended Uplink Timing Advance 10.3.6.95a	Absolute timing advance value to be used to avoid large delay spread at the NodeB. Default value is the existing value for uplink timing advance.	REL-7
>>>Activation Time	OP		Activation Time 10.3.3.1	Frame number timing advance is to be applied. This IE is required when a new UL Timing Advance adjustment is specified and Activation Time is not otherwise specified in the RRC message.	REL-7
>>1.28 Mcps TDD				(no data)	REL-4
>>>Uplink synchronisation parameters	MD			Default: Uplink synchronisation step size is 1. Uplink synchronisation frequency is 1.	REL-4
>>>>Uplink synchronisation step size	MP		Integer(18)	This parameter specifies the step size to be used for the adjustment of the uplink transmission timing	REL-4
>>>>Uplink synchronisation frequency	MP		Integer(18)	This parameter specifies the frequency of the adjustment of the uplink transmission timing	REL-4

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>Synchronisation parameters	OP		1010101		
>>>SYNC_UL codes bitmap	MP		Bitstring(8)	Each bit indicates availability of a SYNC_UL code, where the SYNC_UL codes are numbered "code 0" to "code 7". The value 1 of a bit indicates that the corresponding SYNC_UL code can be used. The value 0 of a bit indicates that the corresponding SYNC_UL code can not be used.	REL-4
>>>FPACH info	MP		FPACH info 10.3.6.35a		REL-4
>>>PRX _{UpPCHdes}	MP		Integer(- 12058 by step of 1)	In dBm	REL-4
>>>SYNC_UL procedure	MD			Default is: Max SYNC_UL Transmission is 2. Power Ramp Step is 2.	REL-4
>>>>Max SYNC_UL Transmissions	MP		Integer(1,2,4 ,8)	Maximum numbers of SYNC_UL transmissions in a power ramping sequence.	REL-4
>>>>Power Ramp Step	MP		Integer(0,1,2 ,3)	In dB	REL-4

10.3.6.97 E-DCH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
MAC-es/e reset indicator	OP		Enumerated (true)	TRUE Indicates the MAC-es/e entity needs to be reset.	REL-6
E-DPCCH info	ОР		E-DPCCH Info 10.3.6.98		REL-6
E-DPDCH info	ОР		E-DPDCH info 10.3.6.99		REL-6
Scheduled Transmission configuration	OP				REL-6
>2ms scheduled transmission grant HARQ process allocation	MD		Bitstring (8)	MAC-d PDUs belonging to MAC-d flows not configured with a 'Max MAC-e PDU contents size' are only allowed to be transmitted in those processes for which the bit is set to '1'. Bit 0 corresponds to HARQ process 0, bit 1 corresponds to HARQ process 1, Default value is: transmission in all HARQ processes is allowed. Bit 0 is the first/leftmost bit of the bit string.	REL-6
>Serving Grant	OP				REL-6
>>Serving Grant value	MP		Integer (037,38)	(037) indicates E-DCH serving grant index as defined in [15]; index 38 means zero grant.	REL-6
>>Primary/Secondary Grant Selector	MP		Enumerated ('primary', 'secondary')	Indicates whether the Serving Grant is received with a Primary E-RNTI or Secondary E- RNTI	REL-6

10.3.6.98 E-DPCCH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
E-DPCCH/DPCCH power offset	MP		Integer (08)	Refer to quantization of the power offset in [28]	REL-6
Happy bit delay condition	MP		Enumerated (2ms, 10ms,20ms, 50ms, 100ms, 200ms, 500ms, 1000ms)	To be used when determining the setting of the happy bit (see [15])	REL-6

10.3.6.99 E-DPDCH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
E-TFCI table index	MP		Integer (01)	Indicates which standardised E- TFCI TB size table shall be used	REL-6
E-DCH minimum set E-TFCI	MD		Integer (0127)	See [15]; Absence means no E-DCH minimum set	REL-6
Reference E-TFCIs	MP	1 to 8		See [29]	REL-6
>Reference E-TFCI	MP		Integer (0127)		REL-6
>Reference E-TFCI PO	MP		Integer (029)	Refer to quantization of the power offset in [28]	REL-6
Maximum channelisation codes	MP		Enumerated (sf256, sf128, sf64, sf32, sf16, sf8, sf4, 2sf4, 2sf2, 2sf2and2sf4)		REL-6
PL _{non-max}	MP		Real (0.44 1.0 by step of 0.04)	As defined in [27]	REL-6
Scheduling Information Configuration	MP		,		REL-6
>Periodicity for Scheduling Info - no grant	MD		Enumerated (everyEDCHT TI,4,10,20,50, 100,200,500,1 000)	Values in ms. Default value is 'no report' NOTE.	REL-6
>Periodicity for Scheduling Info – grant	MD		Enumerated (everyEDCHT TI,4,10,20,50, 100,200,500,1 000)	Values in ms. Default value is 'no report' NOTE.	REL-6
>Power Offset for Scheduling Info	MP		Integer (06)	Only used when no MACd PDUs are included in the same MACe PDU. Unit is in dB.	REL-6
3-Index-Step Threshold	MD		Integer (037)	Refers to an index in the 'SG-Table' (see [15]). Default value is 0.	REL-6
2-Index-Step Threshold	MD		Integer (037)	Refers to an index in the 'SG-Table' (see [15]). Default value is 0.	REL-6
NOTE: If the Periodicity is set periodicity value as 10		E-DCH III	s set to Tums, the l	∪⊏ sna⊪interpret th	e

10.3.6.100 E-AGCH Info

Includes the configuration for the E-DCH related Absolute Grant Channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
E-AGCH Channelisation Code	MP		Integer (0255)	,	REL-6

10.3.6.101 E-HICH Info

Includes the configuration for the E-DCH related HARQ Acknowledgement Indicator Channel.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Channelisation Code	MP		Integer (0127)		REL-6
Signature Sequence	MP		Integer (039)		REL-6

10.3.6.102 E-RGCH Info

Includes the configuration for the E-DCH related Relative Grant Channel. The E-RGCH is using the same channelisation code as configured for the E-HICH channel (see subclause 10.3.6.101).

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Signature Sequence	MP		Integer(039		REL-6
RG combination index	MP		Integer(05)	Cells with an index equal to the index of the Serving E-DCH cell belong to the Serving E-DCH RLS. The E-RGCH from these cells have RG commands which for the UE are known to be the same as the RG commands from the Serving E-DCH cell.	REL-6

10.3.7 Measurement Information elements

10.3.7.1 Additional measurements list

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Additional measurements	MP	1 to <maxadditi onalMeas></maxadditi 		
>Additional measurement identity	MP		Measuremen t identity 10.3.7.48	

10.3.7.2 Cell info

Includes non-frequency related cell info used in the IE "inter-frequency cell info list" and "intra frequency cell info list".

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Cell individual offset	MD		Real(-1010 by step of 0.5)	In dB Default value is 0 dB Used to offset measured quantity value	
Reference time difference to cell	OP		Reference time difference to cell 10.3.7.60	In chips. This IE is absent for serving cell.	
Read SFN indicator	MP		Boolean	TRUE indicates that read of SFN is requested for the target cell	
CHOICE mode	MP			•	
>FDD >>Primary CPICH info	OP		Primary CPICH info 10.3.6.60	This IE is absent only if measuring RSSI only (broadband measurement.)	
>>Primary CPICH Tx power	OP		Primary CPICH Tx power 10.3.6.61	Required if calculating pathloss.	
>>TX Diversity Indicator	MP		Boolean	TRUE indicates that transmit diversity is used.	
>TDD					
>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57		
>>Primary CCPCH TX power	OP		Primary CCPCH TX power 10.3.6.59		
>>Timeslot list	OP	1 to <maxts></maxts>		The UE shall report Timeslot ISCP values according the order of the listed Timeslot numbers	
>>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD >>>>Timeslot number	MP		Integer (014)	Timeslot numbers, for which the UE shall report Timeslot ISCP	REL-4
>>>>Burst Type	MD		Enumerated (Type1, Type2)	Use for Timeslot ISCP measurements only. Default value is "Type1"	
>>>7.68 Mcps TDD	MD		Intorr	Timestat	REL-7
>>>>Timeslot number	MP		Integer (014)	Timeslot numbers, for which the UE shall report Timeslot ISCP	REL-7

>>>>Burst Type	MD	Enumerated (Type1, Type2)	Use for Timeslot ISCP measurements only. Default value is "Type1"	REL-7
>>>>1.28 Mcps TDD				REL-4
>>>>Timeslot number	MP	Integer (06)	Timeslot numbers, for which the UE shall report Timeslot ISCP	REL-4
Cell Selection and Re-selection Info	CV- BCHopt	Cell Selection and Re- selection for SIB11/12Info 10.3.2.4	This IE is absent for the serving cell.	

Condition	Explanation		
BCHopt	This IE is Optional when sent in SYSTEM		
	INFORMATION, Otherwise, the IE is not needed		

10.3.7.3 Cell measured results

Includes non-frequency related measured results for a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Cell Identity	OP		Cell		
			Identity		
			10.3.2.2		
Cell synchronisation	OP		Cell		
information			synchroni		
			sation		
			informatio		
			n 10.3.7.6		
CHOICE mode	MP				
>FDD					
>>Primary CPICH info	MP		Primary		
			CPICH		
			info		
			10.3.6.60		
>>CPICH Ec/N0	OP		Integer(0	According to	
			49)	CPICH_Ec/No in [19]	
				and [20].	
				Fourteen spare values	
			ļ.,,.	are needed.	
>>CPICH RSCP	OP		Integer(0	According to	
			91)	CPICH_RSCP in [19]	
				and [20].	
				Thirty-six spare values	
Dalta	CV-		lata sant	are needed.	REL-5
>>Delta _{CPICH} RSCP	RSCP		Integer(-	If present, the actual value of CPICH RSCP	KEL-5
	KSCP		51)		
				= CPICH RSCP+	
>>Pathloss	OP		Integer/46	Delta _{CPICH RSCP} In dB.	
>>raliiiUSS	UP		Integer(46	Fifteen spare values	
			158)	are needed.	
>TDD	+			are needed.	
>>Cell parameters Id	MP		Cell		
//Geli parameters lu	IVIE		parameter		
			s Id		
			10.3.6.9		
>>Proposed TGSN	OP		Integer	Proposal for the next	
10p0360 10014	J 01	l	micgei	ו וסףספמו וטו נוופ וופאנ	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
-			(014)	TGSN	
>>Primary CCPCH RSCP	OP		Primary CCPCH RSCP info 10.3.7.54		
>>Pathloss	OP		Integer(46 158)	In dB. Fifteen spare values are needed.	
>>Timeslot list	OP	1 to < maxTS>			
>>>Timeslot ISCP	MP		Timeslot ISCP Info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info	

Condition	Explanation
RSCP	This IE is mandatory if the IE "Cell measured results"
	is included in the IE "Measured Results" (i.e. not
	included in the IE "Additional Measured Results") and
	if CPICH RSCP is present and if the value of the
	CPICH RSCP is below 0. It is not needed otherwise.

10.3.7.4 Cell measurement event results

Includes non-frequency related cell reporting quantities.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>Primary CPICH info	MP	1 to <maxcellm eas></maxcellm 	Primary CPICH info 10.3.6.60	
>TDD				
>>Primary CCPCH info	MP	1 to <maxcellm eas></maxcellm 	Primary CCPCH info 10.3.6.57	

10.3.7.5 Cell reporting quantities

Includes non-frequency related cell reporting quantities.

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Cell synchronisation information reporting indicator	MP		Boolean	
Cell Identity reporting indicator	MP		Boolean	
CHOICE mode	MP			
>FDD				
>>CPICH Ec/N0 reporting indicator	MP		Boolean	
>>CPICH RSCP reporting indicator	MP		Boolean	
>>Pathloss reporting indicator	MP		Boolean	
>TDD				

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
>>Timeslot ISCP reporting indicator	MP		Boolean	
>>Proposed TGSN Reporting required	MP		Boolean	
>>Primary CCPCH RSCP reporting indicator	MP		Boolean	
>>Pathloss reporting indicator	MP		Boolean	

10.3.7.6 Cell synchronisation information

The IE "Cell synchronisation information" contains the OFF and Tm as defined in [7] and [8] and the four most significant bits of the difference between the 12 least significant bits of the RLC Transparent Mode COUNT-C in the UE and the SFN of the measured cell. It is notified to SRNC by Measurement Report message or Measurement Information Element in other RRC messages

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>COUNT-C-SFN frame difference	OP			
>>>COUNT-C-SFN high	MP		Integer(038 40 by step of 256)	in frames
>>>OFF	MP		Integer(025 5)	in frames
>>Tm	MP		Integer(038 399)	in chips
>TDD				
>>COUNT-C-SFN frame difference	OP			
>>>COUNT-C-SFN high	MP		Integer(038 40 by step of 256)	in frames
>>>OFF	MP		Integer(025 5)	in frames

10.3.7.7 Event results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE event result	MP		reference	One spare value is needed.
>Intra-frequency			Intra-	•
measurement event results			frequency	
			measuremen	
			t event	
			results	
			10.3.7.37	
>Inter-frequency			Inter-	
measurement event results			frequency	
			measuremen	
			t event	
			results	
			10.3.7.17	
>Inter-RAT measurement			Inter-RAT	For IS-2000 results, include
event results			measuremen	fields of the Pilot Strength
			t event	Measurement Message from
			results	subclause 2.7.2.3.2.5 of
			10.3.7.28	TIA/EIA/IS-2000.5
>Traffic volume measurement			Traffic	
event results			volume	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			measuremen	
			t event	
			results	
			10.3.7.69	
>Quality measurement event			Quality	
results			measuremen	
			t event	
			results	
			10.3.7.57	
>UE internal measurement			UE internal	
event results			measuremen	
			t event	
			results	
			10.3.7.78	
>UE positioning measurement			UE	
event results			positioning	
			measuremen	
			t event	
			results	
			10.3.7.101	

CHOICE event result	Condition under which the given event result is			
	chosen			
Intra-frequency measurement event results	If measurement type = intra-frequency measurement			
Inter-frequency measurement event results	If measurement type = inter-frequency measurement			
Inter-RAT measurement event results	If measurement type = inter-RAT measurement			
Traffic volume measurement event results	If measurement type = traffic volume measurement			
Quality measurement event results	If measurement type = Quality measurement			
UE internal measurement event results	If measurement type = UE internal measurement			
UE positioning measurement event results	If measurement type = UE positioning measurement			

10.3.7.8 FACH measurement occasion info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
FACH Measurement occasion cycle length coefficient	OP		Integer(112	uescription	
Inter-frequency FDD measurement indicator	MP		Boolean	TRUE means that measurements are required	
Inter-frequency TDD 3.84 Mcps measurement indicator	MP		Boolean	TRUE means that measurements are required	REL-4
Inter-frequency TDD 7.68 Mcps measurement indicator	MP		Boolean	TRUE means that measurements are required	REL-7
Inter-frequency TDD 1.28 Mcps measurement indicator	MP		Boolean	TRUE means that measurements are required	REL-4
Inter-RAT measurement indicators	OP	1 to <maxother RAT></maxother 			
>RAT type	MP		Enumerated(GSM, IS2000)		

10.3.7.9 Filter coefficient

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Filter coefficient	MD		Integer(0, 1,	Default value is 0
			2, 3, 4, 5, 6,	
			7, 8, 9, 11,	
			13, 15, 17,	
			19)	

10.3.7.10 HCS Cell re-selection information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Penalty_time	MD		Integer(0, 10, 20, 30, 40, 50, 60)	Default value is 0 which means = not used In seconds
Temporary_offsets	CV-Penalty used			
>Temporary_offset1	MP		Integer(3, 6, 9, 12, 15, 18, 21, inf)	[dB]
>Temporary_offset2	CV-FDD- Quality- Measure		Integer(2, 3, 4, 6, 8, 10, 12, inf)	[dB]

Condition	Explanation
Penalty used	This IE is not needed if the IE "Penalty time" equals
	"not used", else it is mandatory present.
FDD-Quality-Measure	This IE is not needed if the IE "Cell selection and reselection quality measure" has the value CPICH RSCP, otherwise the IE is mandatory present. This conditional presence is implemented in ASN.1 by the use of a specific RSCP and EcN0 variant of 10.3.7.10.

10.3.7.11 HCS neighbouring cell information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
HCS_PRIO	MD		Integer (07)	Default value = 0
Qhcs	MD		Qhcs 10.3.7.54a	Default value = 0
HCS Cell Re-selection Information	MP		HCS Cell Re-selection Information 10.3.7.10	

10.3.7.12 HCS Serving cell information

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
HCS_PRIO	MD		Integer (07)	Default value = 0
Qhcs	MD		Qhcs	Default value = 0
			10.3.7.54a	
T _{CRmax}	MD		Enumerated([s]
			not used, 30,	Default value is not used
			60, 120, 180,	
			240)	
N _{CR}	CV-UE		Integer(116	Default value = 8
	speed)	
	detector			
T _{CrmaxHyst}	CV-UE		Enumerated([s]
	speed		not used, 10,	
	detector		20, 30, 40,	
			50, 60, 70)	

Condition	Explanation
UE Speed detector	This IE is not needed if T _{Crmax} equals 'not used', else it
	is mandatory present.

10.3.7.13 Inter-frequency cell info list

Contains the information for the list of measurement objects for an inter-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Inter-frequency cell removal	OP			
>Remove all inter-frequency cells				No data
>Remove some inter-frequency cells				
>>Removed inter-frequency cells	MP	1 <maxcellm eas></maxcellm 		
>>>Inter-frequency cell id	MP		Integer(0 <maxcellme as>-1)</maxcellme 	
>No inter-frequency cells removed				No data
New inter-frequency cells	OP	1 to <maxcellm eas></maxcellm 		
>Inter-frequency cell id	MD		Integer(0 <maxcellme as>-1)</maxcellme 	
>Frequency info	MD		Frequency info 10.3.6.36	Default value is the value of the previous "frequency info" in the list. NOTE: The first occurrence is then MP.
>Cell info	MP		Cell info 10.3.7.2	
Cells for measurement	CV- BCHopt	1 to <maxcellm eas></maxcellm 		
>Inter-frequency cell id	MP		Integer(0 <maxcellme as>-1)</maxcellme 	

Condition	Explanation		
BCHopt	This IE is not needed when sent in SYSTEM		
	INFORMATION. Otherwise, the IE is Optional		

10.3.7.14 Inter-frequency event identity

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Inter-frequency event identity	MP		Enumerated(Two spare values are needed.
			2a, 2b, 2c,	·
			2d, 2e, 2f)	

10.3.7.15 Inter-frequency measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency measurement results	OP	1 to <maxfreq></maxfreq>		
>Frequency info	MD		Frequency info 10.3.6.36	Default value is the value of the previous "frequency info" in the list. NOTE: The first occurrence is then MP.
>UTRA carrier RSSI	OP		Integer(076	According to UTRA_carrier_RSSI_LEV in [19] and [20]. Fifty-one spare values are needed.
>Inter-frequency cell measurement results	OP	1 to <maxcellm eas></maxcellm 		Only cells for which all reporting quantities are available should be included.
>>Cell measured results	MP		Cell measured results 10.3.7.3	

10.3.7.16 Inter-frequency measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency measurement objects list	MP		Inter- frequency cell info list 10.3.7.13	
Inter-frequency measurement quantity	OP		Inter- frequency measuremen t quantity 10.3.7.18	
Inter-frequency reporting quantity	OP		Inter- frequency reporting quantity 10.3.7.21	
Reporting cell status	CV- reporting		Reporting cell status 10.3.7.61	
Measurement validity	OP		Measuremen t validity 10.3.7.51	
Inter-frequency set update	OP		Inter- frequency	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			set update 10.3.7.22	
CHOICE report criteria	MP			
>Intra-frequency measurement reporting criteria			Intra- frequency measuremen t reporting criteria 10.3.7.39	
>Inter-frequency measurement reporting criteria			Inter- frequency measuremen t reporting criteria 10.3.7.19	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

Condition	Explanation
reporting	This IE is optional if the CHOICE "report criteria" is
	equal to "periodical reporting criteria" or "No
	reporting", otherwise the IE is not needed

10.3.7.17 Inter-frequency measurement event results

This IE contains the measurement event results that are reported to UTRAN for inter-frequency measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency event identity	MP		Inter- frequency event identity 10.3.7.14	
Inter-frequency cells	OP	1 to <maxfreq></maxfreq>		
>Frequency info	MP		Frequency info 10.3.6.36	
>Non frequency related measurement event results	MP		Cell measureme nt event results 10.3.7.4	

10.3.7.18 Inter-frequency measurement quantity

The quantity the UE shall measure in case of inter-frequency measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE reporting criteria	MP		1010101100	
>Intra-frequency reporting				

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
criteria				
>>Intra-frequency measurement	MP		Intra-	
quantity			frequency	
			measuremen	
			t quantity	
			10.3.7.38	
>Inter-frequency reporting				
criteria				
>>Filter coefficient	MP		Filter	
			coefficient	
			10.3.7.9	
>>CHOICE mode	MP			
>>>FDD				
>>>>Measurement quantity for	MP		Enumerated(
frequency quality estimate			CPICH	
			Ec/N0,	
			CPICH	
			RSCP)	
>>>TDD			,	
>>>>Measurement quantity for	MP		Enumerated(
frequency quality estimate			Primary `	
			CCPCH	
			RSCP)	

10.3.7.19 Inter-frequency measurement reporting criteria

The triggering of the event-triggered reporting for an inter-frequency measurements. All events concerning inter-frequency measurements are labelled 2x where x is a,b,c,...

Event 2a: Change of best frequency.

Event 2b: The estimated quality of the currently used frequency is below a certain threshold **and** the estimated quality of a non-used frequency is above a certain threshold.

Event 2c: The estimated quality of a non-used frequency is above a certain threshold.

Event 2d: The estimated quality of the currently used frequency is below a certain threshold.

Event 2e: The estimated quality of a non-used frequency is below a certain threshold.

Event 2f: The estimated quality of the currently used frequency is above a certain threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Parameters required for each event	ОР	1 to <maxme asEvent ></maxme 			
>Inter-frequency event identity	MP		Inter- frequency event identity 10.3.7.14		
>Threshold used frequency	CV- clause 0		Integer(- 1150)	Ranges used depend on measurement quantity. CPICH Ec/No -240dB CPICH/Primary CCPCH RSCP -11525dBm	
			Integer (- 1200)	Ranges used depend on measurement quantity. CPICH Ec/No -240dB CPICH/Primary CCPCH RSCP -12025dBm	REL-6
>Delta _{Threshold} used frequency	CV- clause 3		Integer(- 51)	If present, the actual value of Threshold used frequency = Threshold used frequency + DeltaThreshold used frequency Not used in Release 6	REL-5
				and later	NLL-0
>W used frequency	CV– clause 2		Real(0, 0.12.0 by step of 0.1)		
>Hysteresis	MP		Real(0, 0.514.5 by step of 0.5)	In event 2a, 2b, 2c, 2d, 2e, 2f	
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time during which the event condition has to be satisfied, before sending a Measurement Report. Time in ms.	
>Reporting cell status	OP		Reporting cell status 10.3.7.61		
>Parameters required for each non-used frequency	OP	1 to <maxfre q></maxfre 		In this release, the first listed threshold and W parameter shall apply to all non-used frequencies.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>Threshold non used frequency	CV- clause 1		Integer(- 1150)	Ranges used depend on measurement quantity. CPICH Ec/No -240dB CPICH/Primary CCPCH RSCP -11525dBm. This IE is not needed if the IE "Inter-frequency event identity" is set to 2a. However, it is specified to be mandatory to align with the ASN.1.	
			Integer (- 1200)	Ranges used depend on measurement quantity. CPICH Ec/No -240dB CPICH/Primary CCPCH RSCP -12025dBm This IE is not needed if the IE "Inter-frequency event identity" is set to 2a.	REL-6
>> DeltaThreshold non used frequency	CV- clause 4		Integer(- 51)	If present, the actual value of Threshold non used frequency = Threshold non used frequency + Delta _{Threshold} non used frequency Not used in Release 6	REL-5
>>W non-used frequency	CV- clause 1		Real(0, 0.12.0 by step of	and later	

Condition	Explanation
Clause 0	This IE is mandatory present if the IE "Inter frequency event identity" is set to 2b, 2d, or 2f, otherwise the IE is not needed.
Clause 1	This IE is mandatory present if the IE "Inter frequency event identity" is set to 2a, 2b, 2c or 2e, otherwise the IE is not needed
Clause 2	This IE is mandatory present if the IE "Inter-frequency event identity" is set to 2a, 2b, 2d or 2f, otherwise the IE is not needed.
Clause 3	This IE is optional if the IE "Inter frequency event identity" is set to 2b, 2d, or 2f. Otherwise the IE is not needed. Note that in order to align with the ASN.1, this IE is always included when the IE 'Delta _{Threshold non used frequency} ' is present, but the value shall be ignored if the "Inter-frequency event identity" is not set to 2b, 2d or 2f.
Clause 4	This IE is optional if the IE "Inter frequency event identity" is set to 2a, 2b, 2c or 2e. Otherwise the IE is not needed.

10.3.7.20 Inter-frequency measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Inter-frequency cell info list	OP		Inter- frequency cell info list 10.3.7.13		
Inter-frequency RACH reporting information	OP		Inter- frequency RACH reporting information 10.3.7.20a		REL-6

10.3.7.20a Inter-frequency RACH reporting information

Contains the reporting configuration information for an inter-frequency measurement report, which is sent on the RACH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP			•	REL-6
>FDD					REL-6
>> Inter-frequency RACH reporting quantity	MP		Enumerated(CPICH Ec/N0, CPICH RSCP)		REL-6
>TDD					REL-6
>>Reporting quantity list	MP	1 to 2			REL-6
>>> Inter-frequency RACH reporting quantity	MP		Enumerated(Timeslot ISCP, Primary CCPCH RSCP)		REL-6
Inter-frequency RACH reporting threshold	MP		Integer(-1150)	Ranges used depend on measurement quantity. CPICH Ec/No - 240dB CPICH/Primary CCPCH RSCP - 11525dBm.	REL-6
Maximum number of inter-frequency RACH reporting cells	MP		Integer(18)	Indicates the total number for all non- used frequencies	REL-6

10.3.7.21 Inter-frequency reporting quantity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRA Carrier RSSI	MP		Boolean	TRUE means report is requested.
Frequency quality estimate	MP		Boolean	TRUE means that report is requested. This parameter is not used in this release and should be set to FALSE. It shall be ignored by the UE.
Non frequency related cell reporting quantities	MP		Cell reporting quantities 10.3.7.5	

10.3.7.22 Inter-frequency SET UPDATE

NOTE 1: Only for FDD.

This information makes it possible to use events defined for Intra-frequency measurement within the same non-used frequency for Inter-frequency measurement reporting criteria.

Information Element/group name	Need	Multi	Type and reference	Semantics description
UE autonomous update mode	MP		Enumerated (On with no reporting)	Required for backwards compatibility with a UE not supporting this revision of the standard

10.3.7.23 Inter-RAT cell info list

Contains the information for the list of measurement objects for an inter-RAT measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE Inter-RAT cell removal	MP			,	
>Remove all inter-RAT cells				No data	
>Remove some inter-RAT cells					
>>Removed inter-RAT cells	MP	1 to <maxcellm eas></maxcellm 			
>>>Inter-RAT cell id	MP		Integer(0 <maxcellme as=""> - 1)</maxcellme>		
>Remove no inter-RAT cells					
New inter-RAT cells	MP	1 to <maxcellm eas></maxcellm 		Although this IE is not always required, need is MP to align with ASN.1	
	OP				REL-4
>Inter-RAT cell id	OP		Integer(0 <maxcellme as> - 1)</maxcellme 		
>CHOICE Radio Access Technology	MP		,		
>>GSM					
>>>Cell individual offset	MP		Integer (- 5050)	In dB Used to offset measured quantity value	
>>>Cell selection and re- selection info	OP		Cell selection and re- selection info for SIB11/12 10.3.2.4	See subclause 8.6.7.3	
>>>BSIC	MP		BSIC 10.3.8.2		
>>>Band indicator	MP		Enumerated (DCS 1800 band used, PCS 1900 band used)	Indicates how to interpret the BCCH ARFCN	
>>>BCCH ARFCN	MP		Integer (01023)	[45]	
>>IS-2000			,		
>>>System specific measurement info	MP		enumerated (frequency, timeslot,	For IS-2000, use fields from TIA/EIA/IS-	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			colour code, output power, PN offset)	2000.5, subclause 3. 7.3.3.2.27, Candidate Frequency Neighbour List Message	
>>None			(no data)	This value has been introduced to handle the case when IE "New inter-RAT cells" is not required	
Cell for measurement	OP	1 to <maxcellm eas></maxcellm 			
>Inter-RAT cell id	MP		Integer(0 <maxcellme as="">-1)</maxcellme>		
Inter-RAT cell info indication	CV- Message		Integer (03)	NOTE 1 and 2	REL-5

Condition	Explanation
Message	The IE is optionally present in the MEASUREMENT CONTROL and in the SRNS RELOCATION INFO messages, otherwise the IE is not needed.

NOTE 1: The UTRAN may choose not to use the "Inter-RAT cell info indication" value "0" in the MEASUREMENT CONTROL message, to distinguish that case from those cases where the UE receives the IE "Inter-RAT cell info list" in SIB11 or SIB12.

NOTE 2: In case of an SRNS relocation, if the UE has been sent the "Inter-RAT cell info indication" in the MEASUREMENT CONTROL message and the IE "Inter-RAT cell info list" is included in the SRNS RELOCATION INFO sent from the source RNC to the target RNC, the "Inter-RAT cell info indication" should be included in the IE "Inter-RAT cell info list".

10.3.7.24 Inter-RAT event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT event identity	MP		Enumerated (3a, 3b, 3c,	
			3d)	

10.3.7.25 Inter-RAT info

Inter-RAT info defines the target system for redirected cell selection.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Inter-RAT info	MP		Enumerated		
			(GSM)		
GSM target cell info	CV-GSM		GSM target		REL-6
			cell info		
			10.3.8.4g		

Condition	Explanation
GSM	This IE is optional if the IE "Inter-RAT info" is set to
	"GSM" and not needed otherwise.

10.3.7.26 Inter-RAT measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT measurement results	OP	1 to <maxother RAT-16></maxother 		
>CHOICE system	MP			One spare value is needed.
>>GSM				
>>>Measured GSM cells	MP	1 to <maxrepo rtedGSMC ells></maxrepo 		
>>>GSM carrier RSSI	OP		bit string(6)	RXLEV is mapped to a value between 0 and 63, [46]. When mapping the RXLEV value to the RSSI bit string, the first/leftmost bit of the bit string contains the most significant bit.
>>>>CHOICE BSIC	MP			
>>>>Verified BSIC				
>>>>>inter-RAT cell id	MP		Integer(0< maxCellMea s>-1)	
>>>>Non verified BSIC				
>>>>BCCH ARFCN	MP		Integer (01023)	[45]

10.3.7.27 Inter-RAT measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
	OP		Inter-RAT	
Inter-RAT measurement objects	OP			
list			cell info list	
L. DAT	0.0		10.3.7.23	
Inter-RAT measurement	OP		Inter-RAT	
quantity			measuremen	
			t quantity	
			10.3.7.29	
Inter-RAT reporting quantity	OP		Inter-RAT	
			reporting	
			quantity	
			10.3.7.32	
Reporting cell status	CV-		Reporting	
	reporting		cell status	
			10.3.7.61	
CHOICE report criteria	MP			
>Inter-RAT measurement			Inter-RAT	
reporting criteria			measuremen	
			t reporting	
			criteria	
			10.3.7.30	
>Periodical reporting criteria			Periodical	
			reporting	
			criteria	
			10.3.7.53	
>No reporting				(no data)
				Chosen when this
				measurement only is used as
				additional measurement to
				another measurement
<u> </u>	l .	1	1	

Condition	Explanation
reporting	This IE is optional if the CHOICE "report criteria" is
	equal to "periodical reporting criteria" or "No
	reporting", otherwise the IE is not needed

10.3.7.28 Inter-RAT measurement event results

This IE contains the measurement event results that are reported to UTRAN for inter-RAT measurements.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Inter-RAT event identity	MP		Inter-RAT	
			event	
			identity	
			10.3.7.24	
Cells to report	MP	1 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>CHOICE BSIC	MP			
>>Verified BSIC				
>>>inter-RAT cell id	MP		Integer(0<	
			maxCellMea	
			s>-1)	
>>Non verified BSIC				
>>>BCCH ARFCN	MP		Integer	[45]
			(01023)	

10.3.7.29 Inter-RAT measurement quantity

The quantity the UE shall measure in case of inter-RAT measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement quantity for	OP		Intra-	
UTRAN quality estimate			frequency	
OTTO IT quality commute			measuremen	
			t quantity	
			10.3.7.38	
CHOICE system	MP			
>GSM				
>>Measurement quantity	MP		Enumerated(GSM Carrier	
F114			RSSI)	
>>Filter coefficient	MP		Filter	
			coefficient	
DCIC verification required	MP		10.3.7.9	
>>BSIC verification required	IMP		Enumerated(
			required, not required)	
>IS2000			required)	
>>TADD E ₀ /I ₀	MP		Integer(063	Admission criteria for
>>17(BB E@10	1411		1	neighbours, see subclause
			,	2.6.6.2.6 of TIA/EIA/IS-2000.5
>>TCOMP E ₀ /I ₀	MP		Integer(015	Admission criteria for
)	neighbours, see subclause
			,	2.6.6.2.5.2 of TIA/EIA/IS-
				2000.5
>>SOFT SLOPE	OP		Integer(063	Admission criteria for
)	neighbours, see subclause
				2.6.6.2.3 and 2.6.6.2.5.2 of
				TIA/EIA/IS-2000.5
>>ADD_INTERCEPT	OP		Integer(063	Admission criteria for
)	neighbours, see subclause
				2.6.6.2.5.2 of TIA/EIA/IS-
				2000.5

10.3.7.30 Inter-RAT measurement reporting criteria

The triggering of the event-triggered reporting for an inter-RAT measurement. All events concerning inter-RAT measurements are labelled 3x where x is a,b,c, ...

Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain threshold **and** the estimated quality of the other system is above a certain threshold.

Event 3b: The estimated quality of other system is below a certain threshold.

Event 3c: The estimated quality of other system is above a certain threshold.

Event 3d: Change of best cell in other system.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters required for each event	OP	1 to <maxmeas Event></maxmeas 	reference	
>Inter-RAT event identity	MP		Inter-RAT event identity 10.3.7.24	
>Threshold own system	CV-clause 0		Integer (- 1150)	
>W	CV-clause 0		Real(0, 0.12.0 by step of 0.1)	In event 3a
>Threshold other system	CV-clause 1		Integer (- 1150)	In event 3a, 3b, 3c
>Hysteresis	MP		Real(07.5 by step of 0.5)	
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time during which the event condition has to be satisfied, before sending a Measurement Report.
>Reporting cell status	OP		Reporting cell status 10.3.7.61	

Condition	Explanation
Clause 0	The IE is mandatory present if the IE "Inter-RAT event
	identity" is set to "3a", otherwise the IE is not needed
Clause 1	The IE is mandatory present if the IE "Inter-RAT event
	identity" is set to 3a, 3b or 3c, otherwise the IE is not
	needed

10.3.7.31 Inter-RAT measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT cell info list	OP		Inter-RAT	
			cell info list	
			10.3.7.23	

10.3.7.32 Inter-RAT reporting quantity

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN estimated quality	MP		Boolean	This parameter is not used in this release and should be set to FALSE.
CHOICE system	MP			
>GSM				
>>GSM Carrier RSSI Reporting indicator	MP		Boolean	

10.3.7.33 Intra-frequency cell info list

Contains the information for the list of measurement objects for an intra-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Intra-frequency cell removal	OP			Absence of this IE is equivalent to choice "Remove no intra-frequency cells".
>Remove all intra-frequency cells				No data
>Remove some intra-frequency cells				
>>Removed intra-frequency cells	MP	1 to <maxcell Meas></maxcell 		
>>>Intra-frequency cell id	MP		Integer(0 <maxcellmea s> - 1)</maxcellmea 	
>Remove no intra-frequency cells				
New intra-frequency cells	OP	1 to <maxcell Meas></maxcell 		This information element must be present when "Intra- frequency cell info list" is included in the system information
>Intra-frequency cell id	OP		Integer(0 <maxcellmea s> - 1)</maxcellmea 	
>Cell info	MP		Cell info 10.3.7.2	This IE must be included for the serving cell when the IE "Intra frequency cell info list" is included in System Information Block type 11.
Cells for measurement	CV- BCHopt	1 to <maxcell Meas></maxcell 		
>Intra-frequency cell id	MP		Integer(0 <maxcellmea s>-1)</maxcellmea 	

Condition	Explanation
BCHopt	This IE is not needed when sent in SYSTEM
	INFORMATION. Otherwise, the IE is Optional

10.3.7.34 Intra-frequency event identity

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
Intra-frequency event identity	MP		Enumerated (1a,1b,1c,1d, 1e,1f,1g,1h,1	Seven spare values are needed.	
			i, 1j)	Six spare values	REL-6
				are needed.	

10.3.7.35 Intra-frequency measured results list

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Intra-frequency measurement results	OP	1 to <maxcellm eas></maxcellm 		
>Cell measured results	MP		Cell measured results 10.3.7.3	Only cells for which all reporting quantities are available should be included.

10.3.7.36 Intra-frequency measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency measurement objects list	OP		Intra- frequency cell info list 10.3.7.33	
Intra-frequency measurement quantity	OP		Intra- frequency measuremen t quantity 10.3.7.38	
Intra-frequency reporting quantity	OP		Intra- frequency reporting quantity 10.3.7.41	
Reporting cell status	CV- reporting		Reporting cell status 10.3.7.61	
Measurement validity	OP		Measuremen t validity 10.3.7.51	
CHOICE report criteria	OP			
>Intra-frequency measurement reporting criteria			Intra- frequency measuremen t reporting criteria 10.3.7.39	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

Condition	Explanation
reporting	This IE is optional if the CHOICE "report criteria" is
	equal to "periodical reporting criteria" or "No
	reporting", otherwise the IE is not needed

10.3.7.37 Intra-frequency measurement event results

This IE contains the measurement event results that are reported to UTRAN for intra-frequency measurements.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Intra-frequency event identity	MP		Intra-	
			frequency	
			event	
			identity	
			10.3.7.34	
Cell measurement event results	MP		Cell	
			measureme	
			nt event	
			results	
			10.3.7.4	

10.3.7.38 Intra-frequency measurement quantity

The quantity the UE shall measure in case of intra-frequency measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Filter coefficient	MP		Filter coefficient 10.3.7.9	
CHOICE mode	MP			
>FDD				
>>Measurement quantity	MP		Enumerated(CPICH Ec/N0, CPICH RSCP, Pathloss)	
>TDD				
>>Measurement quantity list	MP	1 to 4		
>>>Measurement quantity	MP		Enumerated(Primary CCPCH RSCP, Pathloss, Timeslot ISCP)	

10.3.7.39 Intra-frequency measurement reporting criteria

The triggering of the event-triggered reporting for an intra-frequency measurement. All events concerning intra-frequency measurements are labelled 1x where x is a, b, c....

- Event 1a: A Primary CPICH enters the Reporting Range (FDD only).
- Event 1b: A Primary CPICH leaves the Reporting Range (FDD only).
- Event 1c: A Non-active Primary CPICH becomes better than an active Primary CPICH (FDD only).
- Event 1d: Change of best cell (FDD only).
- Event 1e: A Primary CPICH becomes better than an absolute threshold (FDD only).
- Event 1f: A Primary CPICH becomes worse than an absolute threshold (FDD only).
- Event 1g: Change of best cell in TDD.
- Event 1h: Timeslot ISCP below a certain threshold (TDD only).
- Event 1i: Timeslot ISCP above a certain threshold (TDD only).

Event 1j: A Non-active E-DCH but active DCH Primary CPICH becomes better than an active E-DCH Primary CPICH (FDD only).

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name		Watti	reference	ocinantics accomption	VCISION
Parameters required for each event	OP	1 to <maxme asEvent ></maxme 			
>Intra-frequency event identity	MP		Intra- frequency event identity 10.3.7.34		
>Triggering condition 1	CV– clause 0		Enumerat ed(Active set cells, Monitored set cells, Active set cells and monitored set cells)	Indicates which cells can trigger the event	
>Triggering condition 2	CV- clause 6 CV- clause 10		Enumerat ed(Active set cells, Monitored set cells, Active set cells and monitored set cells, Detected set cells, Detected set cells and monitored set cells and monitored set cells	Indicates which cells can trigger the event	REL-5
>Reporting Range Constant	CV– clause 2		Real(01 4.5 by step of 0.5)	In dB. In event 1a,1b.	
>Cells forbidden to affect Reporting range	CV– clause 1	1 to <maxcel IMeas></maxcel 		In event 1a,1b	
>>CHOICE mode	MP				
>>>FDD >>>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60		
>>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57		
>W	CV– clause 2		Real(0.0 2.0 by step of 0.1)		
>Hysteresis	MP		Real(07. 5 by step of 0.5)	In dB.	
>Threshold used frequency	CV- clause 3		Integer (- 115165)	Range used depend on measurement quantity. CPICH RSCP -11525 dBm	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
				CPICH Ec/No -240 dB Pathloss 30165dB ISCP -11525 dBm	
			Integer (- 120165)	Range used depend on measurement quantity. CPICH RSCP -12025 dBm CPICH Ec/No -240 dB Pathloss 30165dB ISCP -12025 dBm	REL-6
>DeltaThreshold used frequency	CV- clause 8		Integer(- 51)	If present, the actual value of Threshold used frequency = Threshold used frequency + Delta _{Threshold} used frequency	REL-5
				Not used in Release 6 and later	REL-6
>Reporting deactivation threshold	CV- clause 4		Integer(0, 1, 2, 3, 4, 5, 6, 7)	In event 1a Indicates the maximum number of cells allowed in the active set in order for event 1a to occur. 0 means not applicable	
>Replacement activation threshold	CV- clause 5		Integer(0, 1, 2, 3, 4, 5, 6, 7)	In event 1c Indicates the minimum number of cells allowed in the active set in order for event 1c to occur. 0 means not applicable	
				In event 1j Indicates the minimum number of cells allowed in the E-DCH active set in order for event 1j to occur. For event 1j values 5, 6 and 7 are not applicable. 0 means not applicable	REL-6
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time during which the event condition has to be satisfied, before sending a Measurement Report. Time in ms	
>Amount of reporting	CV- clause 7		Integer(1, 2, 4, 8, 16, 32, 64, Infinity)	In case the IE "Intra- frequency reporting criteria" is included in the IE "Inter-frequency measurement", this IE is not needed.	

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
>Reporting interval	CV– clause 7		Integer(0, 250, 500, 1000, 2000, 4000, 8000, 16000)	Indicates the interval of periodical reporting when such reporting is triggered by an event. Interval in milliseconds. 0 means no periodical reporting. In case the IE "Intra-frequency reporting criteria" is included in the IE "Interfrequency measurement", this IE is not needed.	
>Reporting cell status	OP		Reporting cell status 10.3.7.61		
>Periodical reporting information-1b	CV– clause 9		Periodical reporting info-1b 10.3.7.53 aa	In case the IE "Intra- frequency reporting criteria" is included in the IE "Inter-frequency measurement", this IE is not needed.	REL-5
>Use CIO	CV- clause 10		Boolean	TRUE indicates that the cell individual offset shall be used for event evaluation	REL-5

Condition	Explanation
Clause 0	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1b" or "1f", otherwise the IE is not needed.
Clause 1	The IE is optional if the IE "Intra-frequency event identity" is set to "1a" or "1b", otherwise the IE is not needed.
Clause 2	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1a" or "1b", otherwise the IE is not needed.
Clause 3	The IE is mandatory present if the IE "Intra-frequency event identity" is set to , "1e", "1f", "1h" or "1i", otherwise the IE is not needed.
Clause 4	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1a", otherwise the IE is not needed.
Clause 5	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1c" or 1j, otherwise the IE is not needed.
Clause 6	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1a" or "1e", otherwise the IE is not needed.
Clause 7	The IE is mandatory present if the IE "Intra-frequency event identity" is set to "1a", "1c" or 1j, otherwise the IE is not needed.
Clause 8	The IE is optional if the IE "Intra-frequency event identity" is set to "1e", "1f", "1h" or "1i". Otherwise the IE is not needed.
Clause 9	The IE is optional if the IE "Intra-frequency event identity" is set to "1b", otherwise the IE is not needed.
Clause 10	The IE is optional if the IE "Intra-frequency event identity" is set to "1d", otherwise the IE is not needed.

10.3.7.40 Intra-frequency measurement system information

Need	Multi	Type and	Semantics description
MD			The intra-frequency
			measurement identity has
		10.3.7.48	default value 1.
OP		Intra-	
		frequency	
		cell info list	
		10.3.7.33	
OP		Intra-	
		frequency	
		measuremen	
		t quantity	
		10.3.7.38	
OP		Intra-	
		frequency	
		RACH	
		Reporting	
		10.3.7.42	
OP		Maximum	
		number of	
		cells on	
		RACH	
		10.3.7.43	
OP			Note 1
	MD OP	MD OP OP OP	MD Measuremen t identity 10.3.7.48 OP Intra-frequency cell info list 10.3.7.33 OP Intra-frequency measuremen t quantity 10.3.7.38 OP Intra-frequency measuremen t quantity 10.3.7.38 OP OP Maximum number of reported cells on RACH 10.3.7.43

NOTE 1: The reporting of intra-frequency measurements is activated when state CELL_DCH is entered.

10.3.7.41 Intra-frequency reporting quantity

Contains the reporting quantity information for an intra-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Reporting quantities for active set cells	MP		Cell reporting quantities 10.3.7.5	
Reporting quantities for monitored set cells	MP		Cell reporting quantities 10.3.7.5	
Reporting quantities for detected set cells	OP		Cell reporting quantities 10.3.7.5	

10.3.7.42 Intra-frequency reporting quantity for RACH reporting

Contains the reporting quantity information for an intra-frequency measurement report, which is sent on the RACH.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
SFN-SFN observed time	MP		Enumerated(
difference reporting indicator			No report,	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			type 1, type 2)	
CHOICE mode	MP			
>FDD				
>>Reporting quantity	MP		Enumerated(CPICH Ec/N0, CPICH RSCP, Pathloss, No report)	
>TDD				
>>Reporting quantity list	MP	1 to 2		
>>>Reporting quantity	MP		Enumerated(Timeslot ISCP, Primary CCPCH RSCP, No report)	

10.3.7.43 Maximum number of reported cells on RACH

Contains the maximum number of intra-frequency cells to be reported on RACH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Maximum number of reported cells	MP		Enumerated (no report, current cell, current cell + best neighbour, current cell+2 best neighbours, , current cell+6 best neighbours)	

10.3.7.43a MBMS preferred frequency information

Information	Need	Multi	Type and	Semantics	Version
Element/Group name			reference	description	
MBMS preferred frequency list	MP	1 to < maxMB MS- Freq>			REL-6
>MBMS preferred frequency	OP		Integer(1 <maxmbm S-Freq>)</maxmbm 	Absence of this information element means the currently used frequency. Value n corresponds with the n th frequency included in the IE New interfrequency cells that is specified within SIB 11	REL-6
>CHOICE Layer convergence information	MP				REL-6
>>No HCS					REL-6
>>>Qoffmbms	MP		Enumerate d (4, 8, 12, 16, 20, 30, 40, infinity)	The offset in decibel [dB] added to cells on this MBMS preferred frequency	REL-6
>>HCS					REL-6
>>>HCS_OFF _{mbms}	MP		Integer (07)	Offset added to the normal HCS priority level of cells on this MBMS preferred frequency	REL-6
>MBMS PL Service Restriction Information	OP		Enumerate d (TRUE)	Included if some service restrictions apply for this preferred frequency e.g. congestion	REL-6

10.3.7.44 Measured results

Contains the measured results of the quantity indicated optionally by Reporting Quantity in Measurement Control. "Measured results" can be used for both event trigger mode and periodical reporting mode. For intra-frequency and inter-frequency measurements the list shall be in the order of the value of the measurement quantity (the first cell shall be the best cell). The "best" FDD cell has the largest value when the measurement quantity is "Ec/No" or "RSCP". On the other hand, the "best" cell has the smallest value when the measurement quantity is "Pathloss". The "best" TDD cell has the largest value when measurement quantity is "Primary CCPCH RSCP". For intra-frequency measurements, the ordering shall be applied to all cells included in the IE "Measured results". For other measurements, the order of reported measurement objects is not specified.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Measurement	MP			One spare value is needed.
>Intra-frequency measured			Intra-	
results list			frequency	
			measured	
			results list	
			10.3.7.35	
>Inter-frequency measured			Inter-	
results list			frequency	
			measured	
			results list	
			10.3.7.15	
>Inter-RAT measured results list			Inter-RAT	
			measured	
			results list	
			10.3.7.26	
>Traffic volume measured			Traffic	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
results list			volume	
			measured	
			results list	
			10.3.7.67	
>Quality measured results list			Quality	
			measured	
			results list	
			10.3.7.55	
>UE Internal measured results			UE Internal	
			measured	
			results	
			10.3.7.76	
>UE positioning measured			UE	
results			positioning	
			measured	
			results	
			10.3.7.99	

10.3.7.45 Measured results on RACH

For measurements on used frequency, this IE contains the measured results on RACH of the quantity indicated by Reporting quantity in the IE "Intra-frequency reporting quantity for RACH Reporting" in system information broadcast on BCH. The list, measurement results for monitored cells (not including the current cell) shall be in the order of the value of the measurement quantity as indicated by Reporting Quantity in the IE "Intra-frequency reporting quantity for RACH Reporting" (the first cell shall be the best cell).

For measurements on non-used frequencies, this IE includes the best cell on each non-used frequency, in order of decreasing quality and up to a maximum number as specified by the IE "Maximum number of inter-frequency RACH reporting cells".

The "best" FDD cell has the largest value when the measurement quantity is "Ec/No" or "RSCP". On the other hand, the "best" cell has the smallest value when the measurement quantity is "Pathloss". The "best" TDD cell has the largest value when measurement quantity is "Primary CCPCH RSCP".

Information Element/group	Need	Multi	Type and	Semantics	Version
name			reference	description	

Information Element/group name	Need	Multi	Type and reference	Semantics description	Version
Measurement result for current cell	MP				
>CHOICE mode	MP				
>>FDD					
>>>CHOICE measurement quantity	MP			One spare value is needed.	
>>>>CPICH Ec/N0			Integer(049	In dB. According to CPICH_Ec/No in [19]. Fourteen spare values are needed.	
>>>CPICH RSCP			Integer(091	In dBm. According to CPICH_RSCP_LE V in [19]. Thirty-six spare values are needed.	
>>>Pathloss			Integer(461 58)	In dB. Fifteen spare values are needed.	
>>TDD				.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
>>>CHOICE TDD option	MP				REL-4
>>>3.84 Mcps TDD					REL-4
>>>>Timeslot List	OP	1 to 14		T	
>>>>>Timeslot ISCP	MP		Timeslot ISCP info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info	
>>>7.68 Mcps TDD					REL-7
>>>>Timeslot List	OP	1 to 14	<u> </u>		REL-7
>>>>Timeslot ISCP	MP		Timeslot ISCP info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info	REL-7
>>>>1.28 Mcps TDD					REL-4
>>>>Timeslot List	OP	1 to 6	<u> </u>	T. 115 : "	REL-4
>>>>>Timeslot ISCP	MP		Timeslot ISCP info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info	REL-4
>>>Primary CCPCH RSCP	OP		Primary CCPCH RSCP info 10.3.7.54		
Measurement results for monitored cells on used frequency	OP	1 to 8			
>SFN-SFN observed time difference	OP		SFN-SFN observed time difference 10.3.7.63		
>CHOICE mode	MP				
>>FDD	1		1		
>>>Primary CPICH info	MP		Primary CPICH info		

Information Element/group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.6.60		
>>>CHOICE measurement quantity	OP			One spare value is needed.	
>>>>CPICH Ec/N0			Integer(049	In dB. According to CPICH_Ec/No in [19]. Fourteen spare values are needed.	
>>>CPICH RSCP			Integer(091	In dBm. According to CPICH_RSCP_LE V in [19]. Thirty-six spare values are needed.	
>>>Pathloss			Integer(461 58)	In dB. Fifteen spare values are needed.	
>>TDD					
>>>Cell parameters Id	MP		Cell parameters Id 10.3.6.9		
>>>Primary CCPCH RSCP	MP		Primary CCPCH RSCP info 10.3.7.54		
Measurement results for monitored cells on non-used frequencies	OP				REL-6
>Inter-frequency cell indication- SIB11	MP		Integer (01)		REL-6
>Inter-frequency cell indication- SIB12	MP		Integer (01)		REL-6
>Inter-frequency cell list	MP	1 to <maxfreq ></maxfreq 			REL-6
>>Inter-frequency cell id	MP		Integer(0 <maxcellme as>-1)</maxcellme 		REL-6

NOTE: Monitored cells consist of neighbouring cells.

10.3.7.46 Measurement Command

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement command	MP		Enumerated(Setup,	
			Modify, Release)	

10.3.7.47 Measurement control system information

Information element/Group name	Need	Multi	Type and reference	Semantics description
Use of HCS	MP		Enumerated (Not used, used)	Indicates if the serving cell belongs to a HCS structure
Cell selection and reselection quality measure	MP		Enumerated (CPICH Ec/N0, CPICH RSCP)	Choice of measurement (CPICH Ec/N0 or CPICH RSCP) to use as quality measure Q. NOTE: For TDD,each choice of this parameter represents PCCPCH RSCP.
Intra-frequency measurement system information	OP		Intra- frequency measuremen t system information 10.3.7.40	
Inter-frequency measurement system information	OP		Inter- frequency measuremen t system information 10.3.7.20	
Inter-RAT measurement system information	OP		Inter-RAT measuremen t system information 10.3.7.31	
Traffic volume measurement system information	OP		Traffic volume measuremen t system information 10.3.7.73	

10.3.7.48 Measurement Identity

A reference number that is used by the UTRAN at modification and release of the measurement, and by the UE in the measurement report.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Measurement identity	MP		Integer(116	
)	

10.3.7.49 Measurement reporting mode

Contains the type of Measurement Report transfer mode and the indication of periodical/event trigger.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement Report Transfer Mode	MP		enumerated (Acknowledg ed mode RLC, Unacknowle dged mode RLC)	
Periodical Reporting / Event Trigger Reporting Mode	MP		Enumerated (Periodical reporting, Event trigger)	

10.3.7.50 Measurement Type

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement Type	MP		Enumerated(Intra- frequency, Inter- frequency, Inter-RAT, Traffic volume, Quality, UE internal, UE positioning)	

10.3.7.51 Measurement validity

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE state	MP		Enumerated(
			CELL_DCH,	
			all states	
			except	
			CELL_DCH,	
			all states)	

10.3.7.52 Void

10.3.7.53 Periodical reporting criteria

Contains the periodical reporting criteria information. It is necessary only in the periodical reporting mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Amount of reporting	MD		Integer(1, 2, 4, 8, 16, 32, 64, Infinity)	The default value is infinity.
Reporting interval	MP		Integer(250, 500, 1000, 2000, 3000, 4000, 6000, 8000, 12000, 16000, 20000, 24000, 28000, 32000, 64000)	Indicates the interval of periodical report. Interval in milliseconds

10.3.7.53aa Periodical reporting info-1b

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Amount of reporting	MP		Integer(1, 2, 4, 8, 16, 32, 64, Infinity)		REL-5
Reporting interval	MP		Integer(0, 250, 500, 1000, 2000, 4000, 8000, 16000)	Indicates the interval of periodical reporting when such reporting is triggered by an event. Interval in milliseconds. 0 means no periodical reporting.	REL-5

10.3.7.53a PLMN identities of neighbour cells

This IE contains the PLMN identities of neighbour cells.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
PLMNs of intra-frequency cells	OP	1 to		
list		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>PLMN identity	OP		PLMN identity 10.3.1.11	Action when not present is specified in subclause 8.1.1.6.18.
PLMNs of inter-frequency cells list	OP	1 to <maxcellm eas></maxcellm 		
>PLMN identity	OP		PLMN identity 10.3.1.11	Action when not present is specified in subclause 8.1.1.6.18.
PLMNs of inter-RAT cells list	OP	1 to <maxcellm eas></maxcellm 		
>PLMN identity	OP		PLMN identity 10.3.1.11	Action when not present is specified in subclause 8.1.1.6.18.

10.3.7.54 Primary CCPCH RSCP info

NOTE: Only for TDD

Information Element/Group name	Need	Multi	IE type and reference	Semantics description	Version
Primary CCPCH RSCP	MP		Integer(0 91)	According to P- CCPCH_RSCP_LEV in [19] and [20]. Thirty-six spare values are needed.	
Delta _{Primary} CCPCH RSCP	CV-Rel5		Integer(- 51)	If present, the actual value of Primary CCPCH RSCP = Primary CCPCH RSCP+ Delta _{Primary}	REL-5

Condition	Explanation		
Rel5	This IE is mandatory if the value of Primary CCPCH		
	RSCP is below 0. Othewise the IE is not needed.		

10.3.7.54a Qhcs

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			Referenc		
			е		
Qhcs	MP		Integer(Qhcs, mapped from	
			099)	CPICH Ec/No (FDD), see [4]	
				[dB]	
				0: -24	
				1: -23.5	
				2: -23	
				3: -22.5	
				45: -1.5	
				46: -1 47: -0.5	
				48: 0	
				49: (spare)	
				98: (spare)	
				99: (spare)	
				Ob an arranged from	
				Qhcs, mapped from CPICH RSCP (FDD),	
				see [4]	
				[dBm]	
				0: -115	
				1: -114	
				2: -113	
				:	
				88: -27	
				89: -26 90: -(spare)	
				91: -(spare)	
				: (0ps.0)	
				98: -(spare)	
				99: -(spare)	

Information Element/Group name	Need	Multi	Type and Referenc e	Semantics description	Version
				Qhcs, mapped from PCCPCH RSCP (TDD), see [4] [dBm] 0: -115 1: -114 2: -113 : 88: -27 89: -26	
				90: -(spare) 91: -(spare) : 98: -(spare)	
				99: -(spare) Qhcs level, mapped from Averaged received signal level RSSI (GSM), see [4] [dBm] 0: -110 1: -109 2: -108 : 61: -49 62: -48 63: -47 64: -46 65: -45 66: -44 67: -43 68: -42 69: -41	
				70: -40 71: -39 72: -38 73: -37 74: -(spare) : 98: -(spare) 99: -(spare)	
Delta _{Qhcs-RSCP}	CV- RSCP		Integer(- 51)	If present, the actual value of Qhcs = Qhcs + Delta _{Qhcs-RSCP}	REL-5

Condition	Explanation
RSCP	This IE is optional if Qhcs is mapped from CPICH
	RSCP or PCCPCH RSCP, and if the value of the
	RSCP is below 0 (-115dBm). It is not needed
	otherwise.

10.3.7.55 Quality measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
BLER measurement results	OP	1 to <maxtrch ></maxtrch 		
>DL Transport channel identity	MP		Transport channel identity	transport channel type = DCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			10.3.5.18	
>DL Transport Channel BLER	OP		Integer (063)	According to BLER_LOG in [19] and [20]
CHOICE mode	MP			
>FDD				No data
>TDD				
>>SIR measurement results	OP	1 to <maxcctr CH></maxcctr 		SIR measurements for DL CCTrCH
>>>TFCS ID	MP		Integer(18)	
>>>Timeslot list	MP	1 to <maxts></maxts>		for all timeslot on which the CCTrCH is mapped on
>>>SIR	MP		Integer(063	According to UE_SIR in [20]

10.3.7.56 Quality measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Quality reporting quantity	OP		Quality reporting quantity 10.3.7.59	
CHOICE report criteria	MP			
>Quality measurement reporting criteria >Periodical reporting criteria			Quality measuremen t reporting criteria 10.3.7.58 Periodical reporting criteria 10.3.7.53	Note Given this choice, the IE "DL Transport Channel BLER" shall be set to "False" (see subclause 10.3.7.59) Note
>No reporting				Note (no data) Chosen when this measurement only is used as additional measurement to another measurement

NOTE: In this version of the specification, BLER as additional measurement is not supported.

10.3.7.57 Quality measurement event results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport channels causing the event	ОР	1 to <maxtrch ></maxtrch 		
>DL Transport channel identity	MP		Transport channel identity 10.3.5.18	transport channel type = DCH

10.3.7.58 Quality measurement reporting criteria

Event 5a: Number of bad CRCs on a certain transport channel exceeds a threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters sent for each transport channel	MP	1 to <maxtrch< td=""><td></td><td></td></maxtrch<>		
>DL Transport channel identity	MP		Transport channel identity 10.3.5.18	transport channel type = DCH
>Total CRC	MP		Integer(151 2)	Number of CRCs
>Bad CRC	MP		Integer(151 2)	Number of CRCs
>Pending after trigger	MP		Integer(151 2)	Number of CRCs

10.3.7.59 Quality reporting quantity

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
DL Transport Channel BLER	MP		Boolean	TRUE means report requested
Transport channels for BLER	CV-BLER	1 to		The default, if no transport
reporting	reporting	<maxtrch< td=""><td></td><td>channel identities are present,</td></maxtrch<>		channel identities are present,
		>		is that the BLER is reported for
				all downlink transport channels
>DL Transport channel identity	MP		Transport	transport channel type = DCH
			channel	
			identity	
			10.3.5.18	
CHOICE mode	MP			
>FDD				No data
>TDD				
>>SIR measurement list	OP	1 to		SIR measurements shall be
		<maxcctr< td=""><td></td><td>reported for all listed TFCS IDs</td></maxcctr<>		reported for all listed TFCS IDs
		CH>		
>>>TFCS ID	MP	-	Integer(18)	

Condition	Explanation
BLER reporting	This IE is not needed if the IE "DL Transport Channel
	BLER" is "False" and optional if the IE "DL Transport
	Channel BLER" is "True"

10.3.7.60 Reference time difference to cell

In the System Information message, the reference time difference to cell indicates the timing difference between the primary CCPCH of the current cell and the primary CCPCH of a neighbouring cell..

In the Measurement Control message, the reference time difference to cell indicates the timing difference between UE uplink transmission timing and the primary CCPCH of a neighbouring cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE accuracy	MP			
>40 chips				
>>Reference time difference	MP		Integer(038 400 by step of 40)	In chips
>256 chips				
>>Reference time difference	MP		Integer(0 38400 by step of 256)	In chips
>2560 chips				
>>Reference time difference	MP		Integer(0 38400 by step of 2560)	In chips

10.3.7.61 Reporting Cell Status

Indicates maximum allowed number of cells to report and whether active set cells and/or virtual active set cells and/or monitored set cells on and/or detected set cells used frequency and/or monitored set cells on non used frequency should/should not be included in the IE "Measured results".

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE reported cell	MP			
>Report cells within active set				This choice is not valid for inter-RAT measurements. For inter-frequency measurements it is only valid for reporting events 2D and 2F. See NOTE 1.
>>Maximum number of reported cells	MP		Integer(16)	
>Report cells within monitored set cells on used frequency				This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Integer(16)	
>Report cells within active set and/or monitored set cells on used frequency				This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Integer(16)	
>Report cells within detected set on used frequency				This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Integer(16)	
>Report cells within monitored set and/or detected set on used frequency				This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Integer(16)	
>Report all active set cells + cells within monitored set on used frequency				This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Enumerated (virtual/activ e set cells+1, virtual/active set cells+2,, virtual/active set cells+6)	
>Report all active set cells +				This choice is not valid for

Information Element/Group name	Need	Multi	Type and reference	Semantics description
cells within detected set on used frequency				inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Enumerated (virtual/activ e set cells+1, virtual/active set cells+2,, virtual/active set cells+6)	
>Report all active set cells + cells within monitored set and/or detected set on used frequency			Set CellS+0)	This choice is not valid for inter-RAT or inter-frequency measurements
>>Maximum number of reported cells	MP		Enumerated (virtual/active e set cells+1, virtual/active set cells+2,, virtual/active	measurements
>Report cells within virtual active set			set cells+6)	This choice is not valid for intra-frequency or inter-RAT measurements
>>Maximum number of reported cells per reported non-used frequency	MP		Integer(16)	
>Report cells within monitored set on non-used frequency				This choice is not valid for intra-frequency or inter-RAT measurements
>>Maximum number of reported cells per reported non-used frequency	MP		Integer(16)	
>Report cells within monitored and/or virtual active set on non- used frequency				This choice is not valid for intra-frequency or inter-RAT measurements
>>Maximum number of reported cells per reported non-used frequency	MP		Integer(16)	
>Report all virtual active set cells + cells within monitored set on non-used frequency				This choice is not valid for intra-frequency or inter-RAT measurements
>>Maximum number of reported cells per reported non-used frequency	MP		Enumerated (virtual/activ e set cells+1, virtual/active set cells+2,, virtual/active set cells+6)	
>Report cells within active set or within virtual active set or of the other RAT				If this choice is selected for inter-RAT measurements, the UE shall report only cells of the other RAT. If this choice is selected for intra-frequency measurements, the UE shall report cells within the active set. If this choice is selected for inter-frequency measurements, the UE shall report cells within the virtual active set.
>>Maximum number of reported cells	MP		Integer (112)	
>Report cells within active				This choice is not valid for

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
and/or monitored set on used frequency or within virtual active and/or monitored set on non- used frequency				inter-RAT measurements. If this choice is selected for intra-frequency measurements, the UE shall report cells within the active and/or monitored set. If this choice is selected for inter-frequency measurements, the UE shall report cells within the virtual active set and/or monitored set on non-used frequency.
>>Maximum number of reported cells	MP		Integer(112	·

NOTE 1: For Inter-frequency reporting events 2D and 2F, only CHOICE "Report cells within active set" is valid.

10.3.7.62 Reporting information for state CELL_DCH

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Intra-frequency reporting	MP		Intra-	
quantity			frequency	
			reporting	
			quantity	
			10.3.7.41	
Measurement Reporting Mode	MP		Measuremen	
			t Reporting	
			Mode	
			10.3.7.49	
CHOICE report criteria	MP			
>Intra-frequency measurement			Intra-	
reporting criteria			frequency	
			measuremen	
			t reporting	
			criteria	
			10.3.7.39	
>Periodical reporting criteria			Periodical	
			reporting	
			criteria	
			10.3.7.53	

10.3.7.63 SFN-SFN observed time difference

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE type	MP				
>Type 1			Integer(0 9830399)	According to T1_SFN-SFN_TIME in [19] and [20]. For FDD and 3.84 Mcps TDD and 7.68 Mcps TDD: 6946816 spare values are needed.	
			Integer(0 3276799)	For 1.28 Mcps TDD: 13500416 spare values are needed.	Rel-4
>Type 2			Integer(0 40961)	According to T2_SFN-SFN_TIME in [19] and [20]. 24574 spare values are needed.	
			Integer(0 27649)	For 1.28 Mcps TDD: 37886 spare values are needed.	Rel-4

10.3.7.64 Time to trigger

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Time to trigger	MP		Integer(0, 10, 20, 40, 60, 80, 100, 120, 160, 200, 240, 320, 640, 1280, 2560, 5000)	Time in ms

10.3.7.65 Timeslot ISCP info

NOTE: Only for TDD

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Timeslot ISCP	MP		Integer (091)	According to UE_TS_ISCP_LEV in [20]. Thirty-six spare values are needed.

10.3.7.66 Traffic volume event identity

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Traffic volume event identity	MP		Enumerated(
			4a, 4b)	

10.3.7.67 Traffic volume measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement results	OP	1 to <maxrb></maxrb>		
>RB Identity	MP		RB Identity 10.3.4.16	
>RLC Buffers Payload	ОР		Enumerated(0, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2K, 4K, 8K, 16K, 32K, 64K, 128K, 256K, 512K, 1024K)	In bytes And N Kbytes = N*1024 bytes. Twelve spare values are needed.
>Average of RLC Buffer Payload	ОР		Enumerated(0, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2K, 4K, 8K, 16K, 32K, 64K, 128K, 256K, 512K, 1024K)	In bytes And N Kbytes = N*1024 bytes. Twelve spare values are needed.
>Variance of RLC Buffer Payload	OP		Enumerated(0, 4, 8, 16, 32, 64, 128,	In bytes And N Kbytes = N*1024 bytes. Two spare values are needed.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
			256, 512,	
			1024, 2K,	
			4K. 8K. 16K)	

10.3.7.68 Traffic volume measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement	OP		Traffic	
Object			volume	
			measuremen	
			t Object	
			10.3.7.70	
Traffic volume measurement	OP		Traffic	
quantity			volume	
			measuremen	
			t quantity	
			10.3.7.71	
Traffic volume reporting quantity	OP		Traffic	
			volume	
			reporting	
			quantity	
			10.3.7.74	
Measurement validity	OP		Measuremen	
			t validity	
			10.3.7.51	
CHOICE report criteria	MP			
>Traffic volume measurement			Traffic	
reporting criteria			volume	
			measuremen	
			t reporting	
			criteria	
			10.3.7.72	
>Periodical reporting criteria			Periodical	
			reporting	
			criteria	
			10.3.7.53	
>No reporting				(no data)
				Chosen when this
				measurement only is used as
				additional measurement to
				another measurement

10.3.7.69 Traffic volume measurement event results

Contains the event result for a traffic volume measurement.

Information Element/Group	Need	Multi	Type and	Semantics description
Uplink transport channel type	MP		reference Enumerated(USCH is TDD only.
causing the event	1411		DCH,RACH,	RACH is the currently
			USCH)	configured default in the
				uplink.
UL Transport Channel identity	CV-UL-		Transport	
	DCH/USC		channel	
	Н		identity	
			10.3.5.18	
Traffic volume event identity	MP		Traffic	
			volume	
			event	
			identity	
			10.3.7.66	

Condition	Explanation
UL-DCH/USCH	If IE "Uplink transport channel type" is equal to "DCH" or "USCH" (TDD only) this IE is mandatory present.
	Otherwise the IE is not needed.

10.3.7.70 Traffic volume measurement object

Contains the measurement object information for a traffic volume measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement objects	MP	1 to <maxtrch ></maxtrch 		
>Uplink transport channel type	MP		Enumerated(DCH,RACH, USCH)	USCH is TDD only. RACH is the currently configured default in the uplink.
>UL Target Transport Channel ID	CV-UL- DCH/USC H		Transport channel identity 10.3.5.18	

Condition	Explanation
	If IE "Uplink transport channel type" is equal to "DCH" or "USCH" (TDD only) this IE is mandatory present. Otherwise the IE is not needed.

10.3.7.71 Traffic volume measurement quantity

Contains the measurement quantity information for a traffic volume measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement quantity	MP		Enumerated(RLC buffer payload, Average RLC buffer payload, Variance of RLC buffer payload)	This parameter should be ignored.
Time Interval to take an average or a variance	CV-A/V		Integer(20, 40,260, by steps of 20)	In ms

Condition	Explanation
A/V	This IE is mandatory present when "Average RLC
	buffer" or "Variance of RLC buffer payload" is chosen
	and not needed otherwise.

10.3.7.72 Traffic volume measurement reporting criteria

Contains the measurement reporting criteria information for a traffic volume measurement.

Event 4a: Transport Channel Traffic Volume [15] exceeds an absolute threshold.

Event 4b: Transport Channel Traffic Volume [15] becomes smaller than an absolute threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters sent for each transport channel	OP	1 to <maxtrch< td=""><td>reference</td><td>This IE is always required, need is OP to align with ASN.1</td></maxtrch<>	reference	This IE is always required, need is OP to align with ASN.1
>Uplink transport channel type	OP		Enumerated(DCH,RACH, USCH)	USCH is TDD only. RACH is the currently configured default in the uplink.
>UL Transport Channel ID	CV-UL- DCH/USC H		Transport channel identity 10.3.5.18	
>Parameters required for each Event	OP	1 to <maxmeas parEvent></maxmeas 		
>>Traffic volume event identity	MP		Traffic volume event identity 10.3.7.66	
>>Reporting Threshold	MP		Enumerated(8,16,32,64,1 28,256,512,1 024,2K,3K,4 K,6K,8K,12K ,16K,24K,32 K,48K,64K,9 6K,128K,192 K,256K,384 K,512K,768 K)	Threshold in bytes And N Kbytes = N*1024 bytes
>>Time to trigger	OP		Time to trigger 10.3.7.64	Indicates the period of time during which the event condition has to be satisfied, before sending a Measurement Report. Time in ms
>>Pending time after trigger	OP		Integer(250, 500, 1000, 2000, 4000, 8000, 16000)	Indicates the period of time during which it is forbidden to send any new measurement reports with the same Traffic volume event identity even if the triggering condition is fulfilled. Time in milliseconds
>>Tx interruption after trigger	OP		Integer (250, 500, 1000, 2000, 4000, 8000, 16000)	Time in milliseconds. Indicates how long the UE shall block DTCH transmissions on the RACH after a measurement report is triggered.

Condition	Explanation
UL-DCH/USCH	If IE "Uplink transport channel type" is equal to "DCH" or "USCH" (TDD only) this IE is optional. Otherwise the IE is not needed.

10.3.7.73 Traffic volume measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement identity	MD		Measuremen t identity 10.3.7.48	The traffic volume measurement identity has default value 4.
Traffic volume measurement object	OP		Traffic volume measuremen t object 10.3.7.70	
Traffic volume measurement quantity	OP		Traffic volume measuremen t quantity 10.3.7.71	
Traffic volume reporting quantity	OP		Traffic volume reporting quantity 10.3.7.74	
Measurement validity	OP		Measuremen t validity 10.3.7.51	
Measurement Reporting Mode	MP		Measuremen t Reporting Mode 10.3.7.49	
CHOICE reporting criteria	MP			
>Traffic volume measurement reporting criteria			Traffic volume measuremen t reporting criteria 10.3.7.72	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	

10.3.7.74 Traffic volume reporting quantity

Contains the reporting quantity information for a traffic volume measurement.

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RLC Buffer Payload for each RB	MP		Boolean	
Average of RLC Buffer Payload for each RB	MP		Boolean	
Variance of RLC Buffer Payload for each RB	MP		Boolean	

10.3.7.75 UE internal event identity

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE internal event identity	MP		Enumerated(
			6a,6b,6c,6d,	
			6e, 6f, 6g)	

10.3.7.76 UE internal measured results

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP			•	
>FDD					
>>UE Transmitted Power	ОР		UE Transmitted Power info 10.3.7.85		
>>UE Rx-Tx report entries	OP	1 to <maxrl></maxrl>			
>>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	Primary CPICH info for each cell included in the active set	
>>>UE Rx-Tx time difference type 1	MP		UE Rx-Tx time difference type 1 10.3.7.83	UE Rx-Tx time difference in chip for each RL included in the active set	
>>UE Transmitted Power list	OP	1 to <maxts></maxts>		UE Transmitted Power for each used uplink timeslot in ascending timeslot number order	
>>>UE Transmitted Power	MP		UE Transmitted Power info 10.3.7.85		
>>CHOICE TDD option	MP		10.017.00		REL-4
>>>3.84 Mcps TDD	1411				REL-4
>>>Applied TA	ОР		Uplink Timing Advance 10.3.6.95	Uplink timing advance applied by the UE	1,42
>>>Extended Applied TA	OP		Extended Uplink Timing Advance 10.3.6.95a	Uplink timing advance applied by the UE	REL-7
>>>7.68 Mcps TDD					REL-7
>>>Extended Applied TA	OP		Extended Uplink Timing Advance 10.3.6.95a	Uplink timing advance applied by the UE	REL-7
>>>1.28 Mcps TDD					REL-4
>>>T _{ADV}	ОР		T _{ADV} info 10.3.7.112		REL-4

10.3.7.77 UE internal measurement

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE internal measurement	OP		UE internal	
quantity			measuremen	
			t quantity	
			10.3.7.79	
UE internal reporting quantity	OP		UE internal	
			reporting	
			quantity	
			10.3.7.82	
CHOICE report criteria	MP			
>UE internal measurement			UE internal	
reporting criteria			measuremen	
			t reporting	
			criteria	
B 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			10.3.7.80	
>Periodical reporting criteria			Periodical	
			reporting	
			criteria	
No servention			10.3.7.53	/\\\\\\\\\
>No reporting				(no data) Chosen when this
				measurement only is used as additional measurement to
				another measurement
		l	1	anomer measurement

CHOICE report criteria	Condition under which the given report criteria is
	chosen
UE internal measurement reporting criteria	Chosen when UE internal measurement event
	triggering is required
Periodical reporting criteria	Chosen when periodical reporting is required
No reporting	Chosen when this measurement only is used as
-	additional measurement to another measurement

10.3.7.78 UE internal measurement event results

This IE contains the measurement event results that are reported to UTRAN for UE internal measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE internal event identity	MP		UE internal event identity 10.3.7.75	
CHOICE mode	MP			
>FDD				
>Primary CPICH info	CV-clause 1		Primary CPICH info 10.3.6.60	
>TDD				(no data)

Condition	Explanation
Clause 1	This IE is mandatory present if the IE "UE internal event identity" is set to "6f" or "6g", otherwise the IE is not needed.

10.3.7.79 UE internal measurement quantity

The quantity the UE shall measure in case of UE internal measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode	MP				
>FDD					
>>Measurement quantity	MP		Enumerated(UE Transmitted Power, UTRA Carrier RSSI, UE Rx-Tx time difference)		
>TDD					
>>Measurement quantity	MP		Enumerated(UE Transmitted Power, UTRA Carrier RSSI, T _{ADV})	Measurement on Timing Advance is for 1.28 Mcps	REL-4
				TDD	
Filter coefficient	OP		Filter coefficient 10.3.7.9	If the IE "Measurement quantity" is set to "Rx-Tx time difference" and this IE is present, the UE behaviour is unspecified.	

10.3.7.80 UE internal measurement reporting criteria

The triggering of the event-triggered reporting for a UE internal measurement. All events concerning UE internal measurements are labelled 6x where x is a, b, c.... In TDD, the events 6a - 6d are measured and reported on timeslot basis.

Event 6a: The UE Transmitted Power becomes larger than an absolute threshold

Event 6b: The UE Transmitted Power becomes less than an absolute threshold

Event 6c: The UE Transmitted Power reaches its minimum value

Event 6d: The UE Transmitted Power reaches its maximum value

Event 6e: The UE RSSI reaches the UEs dynamic receiver range

Event 6f (FDD): The UE Rx-Tx time difference for a RL included in the active set becomes larger than an absolute threshold

Event 6f (1.28 Mcps TDD): The time difference indicated by T_{ADV} becomes larger than an absolute threshold

Event 6g: The UE Rx-Tx time difference for a RL included in the active set becomes less than an absolute threshold

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Parameters sent for each UE internal measurement event	OP	1 to <maxmeas Event></maxmeas 			
>UE internal event identity	MP		UE internal event identity 10.3.7.75		

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
>Time-to-trigger	MP		Integer(0, 10, 20, 40, 60, 80, 100, 120, 160, 200, 240, 320, 640, 1280, 2560, 5000)	Time in ms. Indicates the period of time between the timing of event detection and the timing of sending Measurement Report.	
>UE Transmitted Power Tx power threshold	CV-clause 1		Integer(- 5033)	Power in dBm. In event 6a, 6b.	
>UE Rx-Tx time difference threshold	CV-clause 2		Integer(768 1280)	Time difference in chip. In event 6f, 6g.	
>T _{ADV} threshold	CV-clause 3		Real (063 step 0.125)	Time difference in chip. In event 6f	REL-4

Condition	Explanation
Clause 1	The IE is mandatory present if the IE "UE internal
	event identity" is set to "6a" or "6b", otherwise the IE
	is not needed.
Clause 2	In FDD, the IE is mandatory present if the IE "UE
	internal event identity" is set to "6f" or "6g", otherwise
	the IE is not needed.
Clause 3	In 1.28 Mcps TDD the IE is mandatory present if the
	IE "UE internal event identity" is set to "6f", otherwise
	the IE is not needed.

10.3.7.81 Void

10.3.7.82 UE Internal reporting quantity

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
UE Transmitted Power	MP		Boolean		
CHOICE mode	MP				
>FDD					
>>UE Rx-Tx time difference	MP		Boolean		
>TDD					
>>CHOICE TDD option					REL-4
>>>3.84 Mcps TDD				(no data)	REL-4
>>>7.68 Mcps TDD				(no data)	REL-7
>>Applied TA	MP		Boolean		
>>>1.28 Mcps TDD					REL-4
>>>>T _{ADV} info	MP		Boolean		REL-4

10.3.7.83 UE Rx-Tx time difference type 1

The difference in time between the UE uplink DPCCH/DPDCH frame transmission and the first detected path (in time), of the downlink DPCH or F-DPCH frame from the measured radio link, as defined in [7]. This measurement is for FDD only.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE Rx-Tx time difference type 1	MP		Integer(768	In chips.
			1280)	511 spare values are needed.

10.3.7.84 UE Rx-Tx time difference type 2

The difference in time between the UE uplink DPCCH/DPDCH frame transmission and the first detected path (in time), of the downlink DPCH or F-DPCH frame from the measured radio link, as defined in [7].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE Rx-Tx time difference type 2	MP		Integer (08191)	According to [19].

10.3.7.85 UE Transmitted Power info

Information Element/Group	Need	Multi	IE type and	Semantics description
UE Transmitted Power	MP		Integer (0104)	According to UE_TX_POWER in [19] and [20]

10.3.7.86 UE positioning Ciphering info

This IE contains information for the ciphering of UE positioning assistance data broadcast in System Information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
Ciphering Key Flag	MP		Bit string(1)	
Ciphering Serial Number	MP		Integer(065	The serial number used in the
			535)	DES ciphering algorithm

10.3.7.87 UE positioning Error

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Error reason	MP		Enumerated(Not Enough OTDOA Cells, Not Enough GPS Satellites, Assistance Data Missing, Not Accomplishe d GPS Timing Of Cell Frames, Undefined Error, Request Denied By User, Not Processed And Timeout, Reference Cell Not Serving Cell)	Note 1
GPS Additional Assistance Data Request	CV- GPSdataM issing		UE positioning GPS Additional Assistance Data Request 10.3.7.88a	

NOTE 1: The following table describes each value of the IE "Error reason".

Value	Indication
Not Enough OTDOA Cells	There were not enough cells to be received.
Not Enough GPS Satellites	There were not enough GPS satellites to be received.
Assistance Data Missing	UE positioning GPS assistance data missing.
Not Accomplished GPS	UE was not able to accomplish the GPS timing of cell frames measurement.
Timing Of Cell Frames	
Undefined Error	Undefined error.
Request Denied By User	UE positioning request denied by upper layers.
Not Processed And	UE positioning request not processed by upper layers and timeout.
Timeout	
Reference Cell Not Serving	UE was not able to read the SFN of the reference cell.
Cell	

Condition	Explanation
GPSdataMissing	The IE is optional if the IE "Error reason" is "
	Assistance Data Missing " and not needed otherwise.

10.3.7.88 UE positioning GPS acquisition assistance

This IE contains parameters that enable fast acquisition of the GPS signals in UE-assisted GPS positioning.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
GPS TOW msec	MP		Integer(06.	GPS Time of Week in

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
			048*10 ⁸ -1)	milliseconds rounded down to the nearest millisecond unit. It is also the time when satellite information is valid.
UTRAN GPS reference time	OP			
>UTRAN GPS timing of cell frames	MP		Integer(0 2322431999 999)	GPS timing of cell frames in steps of 1 chip.
>CHOICE mode	OP			
>>FDD	-			
>>>Primary CPICH Info	MP		Primary CPICH Info 10.3.6.60	Identifies the reference cell for the GPS TOW-SFN relationship
>>TDD				
>>>cell parameters id	MP		Cell parameters id 10.3.6.9	Identifies the reference cell for the GPS TOW-SFN relationship
>SFN	MP		Integer(040 95)	The SFN which the UTRAN GPS timing of cell frames time stamps.
Satellite information	MP	1 to <maxsat></maxsat>		
>SatID	MP		Integer (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
>Doppler (0 th order term)	MP		Real(- 51205117.5 by step of 2.5)	Hz
>Extra Doppler	OP			
>>Doppler (1 st order term)	MP		Real (- 0.9660.483 by step of 0.023)	Hz/s
>>Doppler Uncertainty	MP		Enumerated (12.5,25,50, 100,200)	Hz. Three spare values are needed. The Doppler experienced by a stationary UE is in the range 'Doppler – Doppler Uncertainty' to 'Doppler + Doppler Uncertainty'.
>Code Phase	MP		Integer(010 22)	GPS chips. Increasing binary values of the field signify increasing predicted pseudoranges.
>Integer Code Phase	MP		Integer(019	Number of code periods that have elapsed since the latest GPS bit boundary, in units of C/A code period.
>GPS Bit number	MP		Integer(03)	Specifies GPS bit number modulo 4
>Code Phase Search Window	MP		Integer(1023 ,1,2,3,4,6,8,1 2,16,24,32,4 8,64,96,128, 192)	Expected code-phase is in the range 'Code Phase – Code Phase Search Window' to 'Code Phase + Code Phase Search Window'.
>Azimuth and Elevation	OP			
>>Azimuth	MP		Real(0348. 75 by step of 11.25)	Degrees An angle of x degrees means the satellite azimuth a is in the range $x \le a < x+11.25$ degrees.
>>Elevation	MP		Real(078.7 5 by step of	Degrees An angle of y degrees means

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
			11.25)	the satellite elevation e is in
				the range y ≤ e < y+11.25
				degrees except for y=78.75
				where the range is extended to
				include 90 degrees.

10.3.7.88a UE positioning GPS Additional Assistance Data Request

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
Almanac	MP		Boolean	TRUE means requested
UTC Model	MP		Boolean	TRUE means requested
Ionospheric model	MP		Boolean	TRUE means requested
Navigation Model	MP		Boolean	TRUE means requested
DGPS Corrections	MP		Boolean	TRUE means requested
Reference Location	MP		Boolean	TRUE means requested
Reference Time	MP		Boolean	TRUE means requested
Acquisition Assistance	MP		Boolean	TRUE means requested
Real-Time Integrity	MP		Boolean	TRUE means requested
Navigation Model Additional	CV-			this IE is present only if
data	Navigation			"Navigation Model" is set to
	Model			TRUE otherwise it is absent
>GPS Week	MP		Integer	
			(01023)	
>GPS_Toe	MP		Integer	GPS time of ephemeris in
			(0167)	hours of the latest ephemeris
				set contained by the UE.
				Eighty-eight spare values
				needed.
>T-Toe limit	MP		Integer	ephemeris age tolerance of
			(010)	the UE to UTRAN in hours.
				Five spare values needed.
>Satellites list related data	MP	0 to		
0.415	145	<maxsat></maxsat>		
>>SatID	MP		Integer	Identifies the satellite and is
			(063)	equal to (SV ID No - 1) where
IODE	MD		lata san	SV ID No is defined in [12].
>>IODE	MP		Integer	Issue of Data Ephemeris for
			(0255)	SatID

10.3.7.89 UE positioning GPS almanac

This IE contains a reduced-precision subset of the ephemeris and clock correction parameters.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
WNa	MP		Bit string(8)	Almanac Reference Week [12]
Satellite information	MP	1 to		
		<maxsat></maxsat>		
>DataID	MP		Integer(03)	See [12]
>SatID	MP		Enumerated(Identifies the satellite and is
			063)	equal to (SV ID No - 1) where
				SV ID No is defined in [12].
>e	MP		Bit string(16)	Eccentricity [12]
>t _{oa}	MP		Bit string(8)	Reference Time of Almanac [12]
>δί	MP		Bit string(16)	
>OMEGADOT	MP		Bit string(16)	Longitude of Ascending Node of Orbit Plane at Weekly
				Epoch (semi-circles/sec) [12]
>SV Health	MP		Bit string(8)	
>A ^{1/2}	MP		Bit string(24)	Semi-Major Axis (meters) ^{1/2} [12]
>OMEGA ₀	MP		Bit string(24)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [12]
>M ₀	MP		Bit string(24)	Mean Anomaly at Reference Time (semi-circles) [12]
>ω	MP		Bit string(24)	Argument of Perigee (semicircles) [12]
>af ₀	MP		Bit string(11)	apparent clock correction [12]
>af ₁	MP		Bit string(11)	apparent clock correction [12]
SV Global Health	OP		Bit	This enables GPS time
			string(364)	recovery and possibly
				extended GPS correlation
				intervals. It is specified in page
				25 of subframes 4 and 5 [12]

10.3.7.90 UE positioning GPS assistance data

This IE contains GPS assistance data.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE positioning GPS reference time	OP		UE positioning GPS reference time 10.3.7.96	
UE positioning GPS reference UE position	OP		Ellipsoid point with altitude and uncertainty ellipsoid 10.3.8.4c	A priori knowledge of UE 3-D position.
UE positioning GPS DGPS corrections	OP		UE positioning GPS DGPS corrections 10.3.7.91	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE positioning GPS navigation model	OP		UE positioning GPS navigation model 10.3.7.94	
UE positioning GPS ionospheric model	OP		UE positioning GPS ionospheric model 10.3.7.92	
UE positioning GPS UTC model	OP		UE positioning GPS UTC model 10.3.7.97	
UE positioning GPS almanac	OP		UE positioning GPS almanac 10.3.7.89	
UE positioning GPS acquisition assistance	OP		UE positioning GPS acquisition assistance 10.3.7.88	
UE positioning GPS real-time integrity	OP		UE positioning GPS real- time integrity 10.3.7.95	

10.3.7.90a Void

10.3.7.91 UE positioning GPS DGPS corrections

This IE contains DGPS corrections to be used by the UE.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
GPS TOW sec	MP		Integer(060 4799)	seconds GPS time-of-week when the DGPS corrections were calculated
Status/Health	MP		Enumerated(UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.2, UDRE scale 0.1, no data, invalid data)	
DGPS information	CV- Status/Hea Ith	1 to <maxsat></maxsat>	·	If the Cipher information is included these fields are ciphered.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
>SatID	MP		Enumerated (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
>IODE	MP		Integer(025 5)	
>UDRE	MP		Enumerated(UDRE ≤ 1.0 m, 1.0m < UDRE ≤ 4.0m, 4.0m < UDRE ≤ 8.0m, 8.0m < UDRE)	The value in this field shall be multiplied by the UDRE Scale Factor in the IE Status/Health to determine the final UDRE estimate for the particular satellite.
>PRC	MP		Real(- 655.04655. 04 by step of 0.32)	meters (different from [13])
>RRC	MP		Real(- 4.0644.064 by step of 0.032)	meters/sec (different from [13])
>Delta PRC2	MP		Integer(- 127127)	In this version of the protocol this IE should be set to zero and the UE shall ignore it
>Delta RRC2	MP		Real(- 0.2240.224 by step of 0.032)	In this version of the protocol this IE should be set to zero and the UE shall ignore it
>Delta PRC3	OP		Integer(- 127127)	This IE should not be included in this version of the protocol and if received the UE shall ignore it
>Delta RRC3	OP		Real(- 0.2240.224 by step of 0.032)	This IE should not be included in this version of the protocol and if received the UE shall ignore it

Condition	Explanation
Status/Health	This IE is mandatory present if "status" is not equal to "no data" or "invalid data", otherwise the IE is not needed.

10.3.7.91a UE positioning GPS Ephemeris and Clock Correction parameters

This IE contains information for GPS ephemeris and clock correction.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
C/A or P on L2	MP		Bit string(2)	Code(s) on L2 Channel [12]
URA Index	MP		Bit string(4)	User Range Accuracy [12]
SV Health	MP		Bit string(6)	[12]
IODC	MP		Bit string(10)	Issue of Data, Clock [12]
L2 P Data Flag	MP		Bit string(1)	[12]
SF 1 Reserved	MP		Bit string(87)	[12]
T _{GD}	MP		Bit string(8)	Estimated group delay differential [12]
toc	MP		Bit string(16)	apparent clock correction [12]
af ₂	MP		Bit string(8)	apparent clock correction [12]

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
af ₁	MP		Bit string(16)	apparent clock correction [12]
af ₀	MP		Bit string(22)	apparent clock correction [12]
C _{rs}	MP		Bit string(16)	Amplitude of the Sine Harmonic Correction Term to the Orbit Radius (meters) [12]
Δη	MP		Bit string(16)	Mean Motion Difference From Computed Value (semi- circles/sec) [12]
M ₀	MP		Bit string(32)	Mean Anomaly at Reference Time (semi-circles) [12]
Cuc	MP		Bit string(16)	Amplitude of the Cosine Harmonic Correction Term To The Argument Of Latitude (radians) [12]
е	MP		Bit string(32)	С
Cus	MP		Bit string(16)	Amplitude of the Sine Harmonic Correction Term To The Argument Of Latitude (radians) [12]
(A) ^{1/2}	MP		Bit string(32)	Semi-Major Axis (meters) ^{1/2} [12]
toe	MP		Bit string(16)	Reference Time Ephemeris [12]
Fit Interval Flag	MP		Bit string(1)	[12]
AODO	MP		Bit string(5)	Age Of Data Offset [12]
C _{ic}	MP		Bit string(16)	Amplitude of the Cosine Harmonic Correction Term To The Angle Of Inclination (radians) [12]
OMEGA ₀	MP		Bit string(32)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [12]
C _{is}	MP		Bit string(16)	Amplitude of the Sine Harmonic Correction Term To The Angle Of Inclination (radians) [12]
i ₀	MP		Bit string(32)	Inclination Angle at Reference Time (semi-circles) [12]
C _{rc}	MP		Bit string(16)	Amplitude of the Cosine Harmonic Correction Term to the Orbit Radius (meters) [12]
ω	MP		Bit string(32)	Argument of Perigee (semi- circles) [12]
OMEGAdot	MP		Bit string(24)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles/sec) [12]
Idot	MP		Bit string(14)	Rate of Inclination Angle (semi-circles/sec) [12]

10.3.7.92 UE positioning GPS ionospheric model

The IE contains fields needed to model the propagation delays of the GPS signals through the ionosphere.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
α_0	MP		Bit string(8)	Note 1
α_1	MP		Bit string(8)	Note 1
α_2	MP		Bit string(8)	Note 1
α ₃	MP		Bit string(8)	Note 1
β_0	MP		Bit string(8)	Note 2
β_1	MP		Bit string(8)	Note 2
β_2	MP		Bit string(8)	Note 2
β_3	MP		Bit string(8)	Note 2

NOTE 1: The parameters αn are the coefficients of a cubic equation representing the amplitude of the vertical delay [12].

NOTE 2: The parameters β n are the coefficients of a cubic equation representing the period of the ionospheric model [12].

10.3.7.93 UE positioning GPS measured results

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
CHOICE Reference Time	MP			
>UTRAN reference time				
>>UE GPS timing of cell frames	MP		Integer(0 3715891199 9999	GPS Time of Week in units of 1/16 th UMTS chips according to [19]. 33209832177664 spare values are needed.
>>CHOICE mode	MP			
>>>FDD				
>>>>Primary CPICH Info	MP		Primary CPICH Info 10.3.6.60	Identifies the reference cell for the GPS TOW-SFN relationship.
>>>TDD				
>>>cell parameters id	MP		Cell parameters id 10.3.6.9	Identifies the reference cell for the GPS TOW-SFN relationship.
>>Reference SFN	MP		Integer(040 95)	The SFN for which the location is valid. This IE indicates the SFN at which the UE timing of cell frames is captured.
>GPS reference time only				
>>GPS TOW msec	MP		Integer(06. 048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).
Measurement Parameters	MP	1 to <maxsat></maxsat>		
>Satellite ID	MP		Enumerated(063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
>C/N _o	MP		Integer(063	the estimate of the carrier-to- noise ratio of the received signal from the particular satellite used in the measurement. It is given in units of dB-Hz (typical levels will be in the range of 20 – 50 dB-Hz).

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
>Doppler	MP		Integer(- 327683276 8)	Hz, scale factor 0.2.
>Whole GPS Chips	MP		Integer(010 22)	Unit in GPS chips. Whole value of the UE GPS code-phase measurement, where increasing binary values of the field signify increasing measured pseudoranges. The UE GPS code-phase measurement is divided into the fields 'Whole GPS Chips' and 'Fractional GPS Chips'.
>Fractional GPS Chips	MP		Integer(0(2 ¹ °-1))	Scale factor 2 ⁻¹⁰ Fractional value of the UE GPS code-phase measurement.
>Multipath Indicator	MP		Enumerated(NM, low, medium, high)	Note 1.
>Pseudorange RMS Error	MP		Enumerated(range index 0range index 63)	Note 2.

NOTE 1: The following table gives the mapping of the multipath indicator field.

Value	Multipath Indication
NM	Not measured
Low	MP error < 5m
Medium	5m < MP error < 43m
High	MP error > 43m

NOTE 2: The following table gives the bitmapping of the Pseudorange RMS Error field.

Range Index	Mantissa	Exponent	Floating-Point value, x _i	Pseudorange value, P
0	000	000	0.5	P < 0.5
1	001	000	0.5625	0.5 <= P < 0.5625
I	X	Υ	0.5 * (1 + x/8) * 2 ^y	$X_{i-1} \leq P \leq X_i$
62	110	111	112	104 <= P < 112
63	111	111		112 <= P

10.3.7.94 UE positioning GPS navigation model

This IE contain information required to manage the transfer of precise navigation data to the GPS-capable UE.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Satellite information	MP	1 to <maxsat></maxsat>		
>SatID	MP		Enumerated(063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
>Satellite Status	MP		Enumerated(NS_NN,	NOTE

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
			ES_SN,	
			ES_NN,	
			REVD)	
>GPS Ephemeris and Clock	CV-		UE	
Correction parameters	Satellite		positioning	
·	status		GPS	
			Ephemeris	
			and Clock	
			Correction	
			parameters	
			10.3.7.91a	

NOTE: The UE shall interpret enumerated symbols as follows.

Value	Indication
NS_NN	New satellite, new Navigation Model
ES_SN	Existing satellite, same Navigation Model
ES_NN	Existing satellite, new Navigation Model
REVD	Reserved

Condition	Explanation		
Satellite status	The IE is not needed if the IE "Satellite status" is		
	ES_SN and mandatory present otherwise.		

10.3.7.95 UE positioning GPS real-time integrity

This IE contains parameters that describe the real-time status of the GPS constellation.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
Satellite information	MP	1 to		
		<maxsat></maxsat>		
>BadSatID	MP		Enumerated(Identifies the satellite and is
			063)	equal to (SV ID No - 1) where
				SV ID No is defined in [12].

10.3.7.95a Void

10.3.7.96 UE positioning GPS reference time

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
GPS Week	MP		Integer(010 23)	
GPS TOW msec	MP		Integer(06. 048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).
UTRAN GPS reference time	OP			
>UTRAN GPS timing of cell frames	MP		Integer(0 2322431999 999)	UTRAN GPS timing of cell frames in steps of 1 chip
>CHOICE mode	OP			
>>FDD				
>>>Primary CPICH Info	MP		Primary CPICH Info 10.3.6.60	Identifies the reference cell for the GPS TOW-SFN relationship
>>TDD				

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
>>>cell parameters id	MP		Cell parameters id 10.3.6.9	Identifies the reference cell for the GPS TOW-SFN relationship
>SFN	MP		Integer(040 95)	The SFN which the UTRAN GPS timing of cell frames time stamps.
SFN-TOW Uncertainty	OP		Enumerated (lessThan10, moreThan10	This field indicates the uncertainty of the relation GPS TOW/SFN. lessThan10 means the relation is accurate to at least 10 ms.
T _{UTRAN-GPS} drift rate	OP		Integer (0, 1, 2, 5, 10, 15, 25, 50, -1, - 2, -5, -10, - 15, -25, -50)	in 1/256 chips per sec.
GPS TOW Assist	OP	1 to <maxsat></maxsat>		
>SatID	MP		Enumerated(063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
>TLM Message	MP		Bit string(14)	
>TLM Reserved	MP		Bit string(2)	
>Alert	MP		Boolean	
>Anti-Spoof	MP		Boolean	

10.3.7.97 UE positioning GPS UTC model

The UTC Model field contains a set of parameters needed to relate GPS time to Universal Time Coordinate (UTC).

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
A ₁	MP		Bit string(24)	sec/sec [12]
A ₀	MP		Bit string(32)	seconds [12]
t _{ot}	MP		Bit string(8)	seconds [12]
WN _t	MP		Bit string(8)	weeks [12]
Δt_{LS}	MP		Bit string(8)	seconds [12]
WN _{LSF}	MP		Bit string(8)	weeks [12]
DN	MP		Bit string(8)	days [12]
Δt_{LSF}	MP		Bit string(8)	seconds [12]

10.3.7.98 UE positioning IPDL parameters

This IE contains parameters for the IPDL mode. The use of this parameters is described in [29].

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			Reference	description	
CHOICE mode					REL-4
>FDD					REL-4
>>IP spacing	MP		Integer(5,7,1	See [29]	
			0,15,20,30,4		
			0,50)		
>>IP length	MP		Integer(5,10)	See [29]	
>>IP offset	MP		Integer(09)	See [29]	
>>Seed	MP		Integer(063	See [29]	
)		
>TDD					REL-4
>>IP spacing	MP		Integer(30,4	See [33]	REL-4
			0,50,70,100)		
>>IP_Start	MP		Integer(040	See [33]	REL-4

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
			95)		
>>IP_Slot	MP		Integer(014	See [33]	REL-4
>>IP_PCCPCH	CV- channel		Boolean	See [33]	REL-4
Burst mode parameters	OP				
>Burst Start	MP		Integer(015	See [29] and [33]	
>Burst Length	MP		Integer(102 5)	See [29] and [33]	
>Burst freq	MP		Integer(116	See [29] and [33]	

Condition	Explanation
channel	This IE is present only if the idle slot carries the
	PCCPCH

10.3.7.99 UE positioning measured results

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE positioning OTDOA	OP		UE	
measured results			positioning	
			OTDOA	
			measured	
			results	
			10.3.7.105	
UE positioning Position estimate	OP		UE	
info			positioning	
			Position	
			estimate info	
115 % : 050	0.0		10.3.7.109	
UE positioning GPS measured	OP		UE	
results			positioning	
			GPS	
			measured	
			results 10.3.7.93	
LIE positioning arror	OP		UE	Included if LIE positioning error
UE positioning error	UF			Included if UE positioning error
			positioning error	occurred
			10.3.7.87	
			10.3.7.87	

10.3.7.100 UE positioning measurement

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE positioning reporting quantity	MP		UE	
			positioning	
			reporting	
			quantity	
			10.3.7.111	
Measurement validity	OP		Measuremen	
			t validity	
			10.3.7.51	
CHOICE reporting criteria	MP			
>UE positioning reporting criteria			UE	
			positioning	
			reporting	
			criteria	
			10.3.7.110	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data)
UE positioning OTDOA assistance data for UE-assisted	OP		UE positioning OTDOA assistance data for UE- assisted 10.3.7.103	
UE positioning OTDOA assistance data for UE-based	OP		UE positioning OTDOA assistance data for UE- based 10.3.7.103a	
UE positioning GPS assistance data	OP		UE positioning GPS assistance data 10.3.7.90	

10.3.7.101 UE positioning measurement event results

This IE contains the measurement event results that are reported to UTRAN for UE positioning measurements.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
CHOICE Event ID	MP		Reference	One spare value is needed.
>7a				
>>UE positioning Position estimate info	MP		UE positioning Position estimate info 10.3.7.109	
>7b				
>>UE positioning OTDOA measured results	MP		UE positioning OTDOA measured results 10.3.7.105	
>7c				
>>UE positioning GPS measurement	MP		UE positioning GPS measured results 10.3.7.93	

10.3.7.102 Void

10.3.7.103 UE positioning OTDOA assistance data for UE-assisted

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
UE positioning OTDOA reference cell info for UE-assisted	OP		UE positioning OTDOA reference cell info 10.3.7.108	
UE positioning OTDOA neighbour cell list for UE- assisted	OP	1 to <maxcellm eas></maxcellm 		
>UE positioning OTDOA neighbour cell info for UE- assisted	MP		UE positioning OTDOA neighbour cell info 10.3.7.106	

10.3.7.103a UE positioning OTDOA assistance data for UE-based

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE positioning OTDOA reference cell info for UE-based	OP		UE positioning OTDOA reference cell info for UE-based 10.3.7.108a	
UE positioning OTDOA neighbour cell list for UE-based	OP	1 to <maxcellm eas></maxcellm 		
>UE positioning OTDOA neighbour cell info for UE-based	MP		UE positioning OTDOA neighbour cell info for UE-based 10.3.7.106a	

10.3.7.104 Void

10.3.7.105 UE positioning OTDOA measured results

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
SFN	MP		Integer(040 95)	SFN during which the last measurement was performed
CHOICE mode				
>FDD				
>>Reference cell id	MP		Primary CPICH info 10.3.6.60	
>>UE Rx-Tx time difference type 2 info	MP			
>>>UE Rx-Tx time difference type 2	MP		UE Rx-Tx time difference	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
			type 2 10.3.7.84	
>>>UE positioning OTDOA quality	MP		UE positioning OTDOA quality 10.3.7.107	Quality of the UE Rx-Tx time difference type 2 measurement from the reference cell.
>TDD				(no data)
>>Reference cell id	MP		Cell parameters ID 10.3.6.9	
Neighbours	MP	0 to <maxcellm eas></maxcellm 		
>CHOICE mode	MP			
>>FDD				
>>>Neighbour Identity	MD		Primary CPICH info 10.3.6.60	Default value is the same as in the first set of multiple sets.
>>>Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
>>>UE Rx-Tx time difference type 2 info	OP			Included for cell in the active set excluding the reference cell.
>>>UE Rx-Tx time difference type 2	MP		UE Rx-Tx time difference type 2 10.3.7.84	
>>>UE positioning OTDOA quality	MP		UE positioning OTDOA quality 10.3.7.107	Quality of the UE Rx-Tx time difference type 2 measurement from the neighbour cell.
>>TDD				
>>>Cell and Channel ID	MD		Cell and Channel Identity info 10.3.6.8a	Default value is the same as in the first set of multiple sets.
>UE positioning OTDOA quality	MP		UE positioning OTDOA quality 10.3.7.107	Quality of the SFN-SFN observed time difference type 2 measurement from the neighbour cell.
>SFN-SFN observed time difference type 2	MP		SFN-SFN observed time difference 10.3.7.63	Gives the timing relative to the reference cell. Only type 2 is allowed.

10.3.7.106 UE positioning OTDOA neighbour cell info

This IE gives approximate cell timing in order to decrease the search window.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	
CHOICE mode	MP			
>FDD				
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>TDD				

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
>>cell and channel ID	MP		Cell and Channel Identity info 10.3.6.8a	Identifies the channel to be measured on.
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
IPDL parameters	CV-IPDLs		UE positioning IPDL parameters 10.3.7.98	
SFN offset	MP		Integer (0 4095)	Although this IE is not always required, need is MP to align with ASN.1. Define Tref as the time of beginning of system frame number SFNref of the reference cell. Define Tnc as the beginning of a frame from the neighbour cell occurring immediately after the time Tref. Let the corresponding system frame number be SFNnc. Then SFNnc = SFNref-SFN offset modulo 4096.
SFN offset validity	MD		Enumerated (false)	Absence of this element means SFN offset is valid. False means SFN offset is not valid.
SFN-SFN relative time difference	MP		Integer(0 38399)	Gives the relative timing compared to the reference cell. Equal to \(\begin{align*} (Tnc-Tref)*(3.84*10^6) \end{align*} \] where \(\begin{align*} () \end{align*} \] denotes rounding to the nearest lower integer. In chips, Tnc = the time of beginning of a system frame from the neighbour cell, Tref = the time of beginning of a system frame from the reference cell.
SFN-SFN drift	OP		Integer (0, - 1, -2, -3, -4, - 5, -8, -10, - 15, -25, -35, -50, -65, -80, -100, 1, 2, 3, 4, 5, 8, 10, 15, 25, 35, 50, 65, 80, 100)	in 1/256 chips per second
Search Window Size	MP		Integer(20, 40, 80, 160, 320, 640, 1280, infinity)	In chips. If the value is X then the expected SFN-SFN observed time difference is in the range [RTD-X, RTD+X] where RTD is the value of the field SFN-SFN relative time difference. Infinity means that the uncertainty is larger than 1280 chips.
CHOICE PositioningMode	MP			
>UE based				(no data)

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
>UE assisted				(no data)

Condition	Explanation
IPDLs	This IE is mandatory present if IPDLs are applied and
	not needed otherwise.

10.3.7.106a UE positioning OTDOA neighbour cell info for UE-based

This IE gives approximate cell timing in order to decrease the search window, as well as the cell locations and fine cell timing for UE based OTDOA.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE positioning OTDOA neighbour cell info	MP		UE positioning OTDOA neighbour cell info 10.3.7.106	
Cell Position	MD			Default is the same as previous cell
>Relative North	OP		Integer(- 200002000 0)	Seconds of angle, scale factor 0.03. Relative position compared to reference cell.
>Relative East	OP		Integer(- 200002000 0)	Seconds of angle, scale factor 0.03. Relative position compared to reference cell.
>Relative Altitude	OP		Integer(- 40004000)	Relative altitude in meters compared to ref. cell.
Fine SFN-SFN	MP		Real(00.93 75 in steps of 0.0625)	Gives finer resolution
UE positioning Relative Time Difference Quality	MP		UE positioning OTDOA quality 10.3.7.109a	Quality of the relative time difference between neighbour and reference cell.
Round Trip Time	OP		Real(876.00 2923.875) in steps of 0.0625	In chips. Included if cell is in active set.

10.3.7.107 UE positioning OTDOA quality

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Std Resolution	MP		Bit string(2)	Std Resolution field includes the resolution used in Std of OTDOA Measurements field. Encoding on two bits as follows: '00' 10 meters '01' 20 meters '10' 30 meters '11' Reserved
Number of OTDOA Measurements	MP		Bit string(3)	The 'Number of OTDOA measurements' field indicates how many OTDOA measurements have been used in the UE to determine the sample standard deviation

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
				of the measurements. Following 3 bit encoding is used: $'001' 5-9$ $'010' 10-14$ $'011' 15-24$ $'100' 25-34$ $'101' 35-44$ $'110' 45-54$ $'111' 55 \text{ or more}$ Special case: $'000'\text{:In this case the field}$ $'Std \text{ of OTDOA}$ measurements' contains the std of the reported SFN-SFN otd value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and $\mu = E[x]$ is the expectation value (i.e. the true value) of x. This std can be used irrespective of the number of measurements and reporting of the number of measurements is not needed. Also other measurements such as Ec/No or Rx levels can be utilised in this case to evaluate the 'Std of OTDOA measurements' reported in this IE.
Std of OTDOA Measurements	MP		Bit string(5)	Std of OTDOA Measurements field includes sample standard deviation of OTDOA measurements (when number of measurements (when number of measurements is reported in 'Number of OTDOA measurements field') or standard deviation of the reported SFN-SFN otd value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and $\mu = E[x]$ is the expectation value (i.e. the true value) of x (when '000' is given in 'Number of OTDOA measurements' field). Following linear 5 bit encoding is used: '00000' 0 - (R*1-1) meters '00001' R*1 - (R*2-1) meters '00010' R*2 - (R*3-1) meters '0011' R*31 meters or more where R is the resolution defined by Std Resolution field. E.g. R=20 m corresponds to 0-19 m, 20-39 m,,620+ m.

10.3.7.108 UE positioning OTDOA reference cell info

This IE defines the cell used for time references in all OTDOA measurements.

Information Element/Group	Need	Multi	Type and	Semantics description
name			Reference	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
SFN	OP		Integer (04095)	Time stamp (SFN of Reference Cell) of the SFN- SFN relative time differences and SFN-SFN drift rates. Included if any SFN-SFN drift value is included in IE UE positioning OTDOA neighbour cell info.
CHOICE mode	MP			
>FDD				
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>TDD				
>>cell and channel ID	MP		Cell and Channel Identity info 10.3.6.8a	Identifies the channel to be measured on.
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information. This IE shall always be set to default value
CHOICE PositioningMode	MP			
>UE based				
>UE assisted				(no data)
IPDL parameters	OP		UE positioning IPDL parameters 10.3.7.98	If this element is not included there are no idle periods present

10.3.7.108a UE positioning OTDOA reference cell info for UE-based

This IE defines the cell used for time references in all OTDOA measurements for UE-based methods.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE positioning OTDOA reference cell info	MP		UE positioning OTDOA reference cell info 10.3.7.108	
CHOICE Cell Position	OP			The position of the antenna that defines the cell. Used for the UE based method.
>Ellipsoid				
>>Ellipsoid point	MP		Ellipsoid point 10.3.8.4a	
>Ellipsoid with altitude				
>>Ellipsoid point with altitude	MP		Ellipsoid point with altitude 10.3.8.4b	
Round Trip Time	OP		Real(876.00 2923.875) in steps of 0.0625	In chips.

10.3.7.109 UE positioning position estimate info

The purpose of this IE is to provide the position estimate from the UE to the network, if the UE is capable of determining its own position.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
CHOICE Reference Time	MP				
>UTRAN GPS reference time					
>>UE GPS timing of cell frames	MP		Integer(0 3715891199 9999)	GPS Time of Week in units of 1/16 th UMTS chips according to [19]. 33209832177664 spare values are needed.	
>>CHOICE mode	MP				
>>>FDD					
>>>Primary CPICH Info	MP		Primary CPICH Info 10.3.6.60	Identifies the reference cell for the GPS TOW-SFN relationship	
>>>TDD					
>>cell parameters id	MP		Cell parameters id 10.3.6.9	Identifies the reference cell for the GPS TOW-SFN relationship.	
>>Reference SFN	MP		Integer(040 95)	The SFN for which the location is valid. This IE indicates the SFN at which the UE timing of cell frame is captured.	
>GPS reference time only					
>>GPS TOW msec	MP		Integer(06. 048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).	
>Cell timing					
>>SFN	MP		Integer(040 95)	SFN during which the position was calculated.	
>>CHOICE mode	MP				
>>>FDD					
>>>Primary CPICH Info	MP		Primary CPICH Info 10.3.6.60	Identifies the reference cell for SFN	
>>>TDD					
>>cell parameters id	MP		Cell parameters id 10.3.6.9	Identifies reference cell for SFN	
CHOICE Position estimate	MP				
>Ellipsoid Point			Ellipsoid Point; 10.3.8.4a		
>Ellipsoid point with uncertainty circle			Ellipsoid point with uncertainty circle 10.3.8.4d		
>Ellipsoid point with uncertainty ellipse			Ellipsoid point with uncertainty ellipse 10.3.8.4e		
>Ellipsoid point with altitude			Ellipsoid point with altitude 10.3.8.4b		
>Ellipsoid point with altitude and uncertainty ellipsoid			Ellipsoid point with altitude and uncertainty ellipsoid 10.3.8.4c		

Information Element/Group	Need	Multi	Type and	Semantics description	Version
name			Reference	•	
CHOICE Velocity estimate	OP				REL-7
>Horizontal Velocity			Horizontal		REL-7
			Velocity		
			10.3.8.4h		
>Horizontal with Vertical Velocity			Horizontal		REL-7
			with Vertical		
			Velocity		
			10.3.8.4i		
>Horizontal Velocity with			Horizontal		REL-7
Uncertainty			Velocity with		
			Uncertainty		
			10.3.8.4j		
>Horizontal with Vertical Velocity			Horizontal		REL-7
and Uncertainty			with Vertical		
-			Velocity and		
			Uncertainty		
			10.3.8.4k		

10.3.7.109a UE positioning Relative Time Difference quality

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Relative Time Difference Std Resolution	MP		Bit string(2)	Std Resolution field includes the resolution used in Std of Relative Time Difference field. Encoding on two bits as follows: '00' 10 meters '01' 20 meters '10' 30 meters '11' Reserved
Std of Relative Time Difference	MP		Bit string(5)	Std of Relative Time difference field includes standard deviation of (SFN-SFN relative time difference + Fine SFN-SFN). Following linear 5 bit encoding is used: '00000' 0 - (R*1-1) meters '00001' R*1 - (R*2-1) meters '00010' R*2 - (R*3-1) meters '11111' R*31 meters or more where R is the resolution defined by Std Resolution field. E.g. R=20 m corresponds to 0-19 m, 20-39 m,,620+ m.

10.3.7.110 UE positioning reporting criteria

The triggering of the event-triggered reporting for a UE positioning measurement.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Parameters required for each event	OP	1 to <maxmeas Event></maxmeas 		
>Amount of reporting	MP		Integer(1, 2, 4, 8, 16, 32, 64,infinite)	
>Report first fix	MP		Boolean	If true the UE reports the position once the measurement control is received, and then each time an event is triggered.
>Measurement interval	MP		Integer(5,15, 60,300,900,1 800,3600,72 00)	Indicates how often the UE should make the measurement In seconds
>CHOICE Event ID	MP			
>>7a				
>>>Threshold Position Change	MP		Integer(10,2 0,30,40,50,1 00,200,300,5 00,1000,200 0,5000,1000 0,20000,500 00,100000)	Meters. Indicated how much the position should change compared to last reported position fix in order to trigger the event.
>>7b				
>>>Threshold SFN-SFN change	MP		Real(0.25,0. 5,1,2,3,4,5,1 0,20,50,100, 200,500,100 0,2000,5000)	Chips. Indicates how much the SFN-SFN measurement of ANY measured cell is allowed to change before the event is triggered.
>>7c				
>>>Threshold SFN-GPS TOW	MP		Integer(1,2,3 ,5,10,20,50,1 00)	Time in ms. When the GPS TOW and SFN timer has drifted apart more than the specified value the event is triggered.

10.3.7.111 UE positioning reporting quantity

The purpose of the element is to express the allowed/required location method(s), and to provide information desired QoS.

Information Element/Group	Need	Multi	Type and	Semantics description	Version
name			Reference		
Method Type	MP		Enumerated(
			UE assisted,		
			UE based,		
			UE based is		
			preferred but		
			UE assisted		
			is allowed,		
			UE assisted		
			is preferred		
			but UE		
			based is		
			allowed)		
Positioning Methods	MP		Enumerated(
			OTDOA,		
			GPS,		
			OTDOA or		
			GPS, Cell		
			ID)		
Response Time	MP		Integer(1,2,4	This IE shall be ignored.	

Information Element/Group name	Need	Multi	Type and Reference	Semantics description	Version
			, 8, 16, 32, 64, 128)		
Horizontal Accuracy	CV- MethodTyp e		Bit string(7)	The uncertainty is derived from the "uncertainty code" k by $r = 10*(1.1^{k}-1)$ in meters.	
Vertical Accuracy	CV- MethodTyp e		Bit string(7)	The uncertainty is derived from the "uncertainty code" k by $r = 45*(1.025^k-1)$ in meters.	
GPS timing of Cell wanted	MP		Boolean	If true the SRNC wants the UE to report the SFN-GPS timing of the reference cell. This is however optional in the UE.	
Multiple Sets Additional Assistance Data Request	MP MP		Boolean Boolean	This IE shall be ignored. TRUE indicates that the UE is requested to send the IE "Additional assistance Data Request" when the IE "UE positioning Error" is present in the UE positioning measured results. FALSE indicates that the UE shall use the assistance data available.	
Environment Characterisation	OP		Enumerated(possibly heavy multipath and NLOS conditions, no or light multipath and usually LOS conditions, not defined or mixed environment)	One spare value is needed.	
Velocity Requested	OP		Enumerated(requested)	If this element is present the UE is requested to send a velocity estimate	REL-7

Condition	Explanation
Method Type	The IE is optional if the IE "Method Type" is "UE
	assisted"; otherwise it is mandatory present.

10.3.7.112 T_{ADV} info

NOTE: Only for 1.28 Mcps TDD.

 $T_{\mbox{\scriptsize ADV}}$ indicates the difference between the Rx timing and Tx timing of a UE.

Information Element/group name	Need	Multi	Type and reference	Semantics description	Version
T _{ADV}	MP		Integer (02047)	As defined in [20].	REL-4
SFN	MP		Integer(040 95)	SFN during which the T _{ADV} measurement was performed.	REL-4

10.3.8 Other Information elements

10.3.8.1 BCCH modification info

Indicates modification of the System Information on BCCH.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
MIB Value tag	MP		MIB Value	
-			tag 10.3.8.9	
BCCH modification time	OP		Integer (0	All SFN values in which MIB
			4088 in step	may be mapped are allowed.
			of 8)	

10.3.8.2 BSIC

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Base transceiver Station Identity Code (BSIC)	MP			[11]
>Network Colour Code (NCC)	MP		bit string(3)	The first/leftmost bit of the bit string contains the most significant bit of the NCC.
>Base Station Colour Code (BCC)	MP		bit string(3)	The first/leftmost bit of the bit string contains the most significant bit of the BCC.

10.3.8.3 CBS DRX Level 1 information

This information element contains the CBS discontinuous reception information to be broadcast for CBS DRX Level 1 calculations in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Period of CTCH allocation (N)	MP		Integer (1256)	$M_{TTI} \le N \le 256$, N multiple of M_{TTI}	
CBS frame offset (K)	MP		Integer (0255)	$0 \le K \le N-1$, K multiple of M_{TTI}	
Period of BMC scheduling messages (P)	CV-SIB5		Integer (8, 16, 32, 64, 128, 256)		REL-6

Condition	Explanation		
SIB5	The IE is optional when the IE "CBS DRX Level 1		
	information" in SIB5, otherwise the IE is not needed		

10.3.8.4 Cell Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell Value tag	MP		Integer (14)	

10.3.8.4a Ellipsoid point

This IE contains the description of an ellipsoid point as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Latitude sign	MP		Enumerated (North, South)	
Degrees Of Latitude	MP		Integer (02 ²³ -1)	The IE value (N) is derived by this formula: $N \le 2^{23} X/90 < N+1$ X being the latitude in degree (0° 90°)
Degrees Of Longitude	MP		Integer (- 2 ²³ 2 ²³ -1)	The IE value (<i>N</i>) is derived by this formula: <i>N</i> ≤2 ²⁴ <i>X</i> /360 < <i>N</i> +1 <i>X</i> being the longitude in degree (-180°+180°)

10.3.8.4b Ellipsoid point with Altitude

This IE contains the description of an ellipsoid point with altitude as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Latitude sign	MP		Enumerated (North, South)	
Degrees Of Latitude	MP		Integer (02 ²³ -1)	The IE value (<i>N</i>) is derived by this formula: $N \le 2^{23} X/90 < N+1$ <i>X</i> being the latitude in degree (0° 90°)
Degrees Of Longitude	MP		Integer (- 2 ²³ 2 ²³ -1)	The IE value (<i>N</i>) is derived by this formula: $N \le 2^{24} X/360 < N+1$ <i>X</i> being the longitude in degree (-180°+180°)
Altitude Direction	MP		Enumerated (Height, Depth)	
Altitude	MP		Integer (02 ¹⁵ -1)	The IE value (N) is derived by this formula: N≤a < N+1 a being the altitude in metres

10.3.8.4c Ellipsoid point with Altitude and uncertainty ellipsoid

This IE contains the description of an ellipsoid point with altitude and uncertainty ellipsoid as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Latitude sign	MP		Enumerated (North, South)	
Degrees Of Latitude	MP		Integer (02 ²³ -1)	The IE value (<i>N</i>) is derived by this formula: <i>N</i> ≤2 ²³ <i>X</i> /90 < <i>N</i> +1 <i>X</i> being the latitude in degree (0° 90°)

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Degrees Of Longitude	MP		Integer (- 2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: $N \le 2^{24} X/360 < N+1$ X being the longitude in degree (-180°+180°)
Altitude Direction	MP		Enumerated (Height, Depth)	
Altitude	MP		Integer (02 ¹⁵ -1)	The IE value (<i>N</i>) is derived by this formula: <i>N</i> ≤ <i>a</i> < <i>N</i> +1 a being the altitude in metres
Uncertainty semi-major	MP		Integer (0127)	The uncertainty r is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Uncertainty semi-minor	MP		Integer (0127)	The uncertainty r is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Orientation of major axis	MP		Integer (089)	The IE value (N) is derived by this formula: $2N \le a < 2(N+1)$ a being the orientation in degree (0° 179°)
Uncertainty Altitude	MP		Integer(012 7)	The uncertainty in altitude, h, expressed in metres is mapped from the IE value (K), with the following formula: $h = C((1+x)^{K} - 1)$ with $C = 45$ and $x = 0.025$.
Confidence	MP		Integer (0100)	in percentage

10.3.8.4d Ellipsoid point with uncertainty Circle

This IE contains the description of an ellipsoid point with an uncertainty circle as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Latitude sign	MP		Enumerated (North, South)	
Degrees Of Latitude	MP		Integer (02 ²³ -1)	The IE value (N) is derived by this formula: $N \le 2^{23} X/90 < N+1 X$ being the latitude in degree $(0^{\circ}90^{\circ})$
Degrees Of Longitude	MP		Integer (- 2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: $N \le 2^{24} X/360 < N+1$ X being the longitude in degree (-180°+180°)
Uncertainty Code	MP		Integer (0127)	The uncertainty r is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$

10.3.8.4e Ellipsoid point with uncertainty Ellipse

This IE contains the description of an ellipsoid point with an uncertainty ellipse as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Latitude sign	MP		Enumerated (North, South)	
Degrees Of Latitude	MP		Integer (02 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²³ X/90 < N+1 X being the latitude in degree (0° 90°)
Degrees Of Longitude	MP		Integer (- 2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²⁴ X/360 < N+1 X being the longitude in degree (-180°+180°)
Uncertainty semi-major	MP		Integer (0127)	The uncertainty r is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Uncertainty semi-minor	MP		Integer (0127)	The uncertainty r is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Orientation of major axis	MP		Integer (089)	The IE value (N) is derived by this formula: $2N \le a < 2(N+1)$ a being the orientation in degree (0° 179°)
Confidence	MP		Integer (0100)	in percentage

10.3.8.4f GERAN system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>> GERAN System Info	MP	1 to <maxgeran SI></maxgeran 			REL-5
>>>> GERAN system info block	MP		Octet string(123)	The first octet contains octet 1 of the GERAN system information block, the second octet contains octet 2 of the GERAN system information block and so on.	REL-5

10.3.8.4g GSM Target Cell Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
GSM Target Cell Info List	MP	1 to <maxgsmtar getCells></maxgsmtar 			REL-6
>BCCH ARFCN	MP		Integer (01023)	[45]	REL-6
>Band indicator	MP		Enumerated	Indicates how to	REL-6

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			(DCS 1800 band used, PCS 1900 band used)	interpret the BCCH ARFCN	
>BSIC	OP		BSIC 10.3.8.2		REL-6

10.3.8.4h Horizontal Velocity

This IE contains the description of a horizontal velocity as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Bearing	MP		Integer (0359)	The direction of movement is given in degrees where "0" represents North, "90" represents East, etc.
Horizontal Speed	MP		Integer (02 ¹¹ -1)	The relationship between (N) and the horizontal speed (h) in kilometers per hour it describes is: $N \le h < N + 0.5$, for (N=0) $N-0.5 \le h < N + 0.5$, for $(0 < N < 2^{11} - 1)$ $N - 0.5 \le h$, for (N = $2^{11} - 1$)

10.3.8.4i Horizontal with Vertical Velocity

This IE contains the description of horizontal with vertical velocity as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Vertical Speed direction	MP		ENUMERAT ED (upward, downward)	
Bearing	MP		Integer (0359)	The direction of movement is given in degrees where "0" represents North, "90" represents East, etc.
Horizontal Speed	MP		Integer (02 ¹¹ -1)	The relationship between (N) and the horizontal speed (h) in kilometers per hour it describes is: $N \le h < N + 0.5$, for (N=0) $N-0.5 \le h < N + 0.5$, for $(0 < N < 2^{11} - 1)$ $N - 0.5 \le h$, for (N = $2^{11} - 1$)
Vertical Speed	MP		Integer (0255)	The relationship between (N) and the vertical speed (v) in kilometres per hour it describes is given by the formula: $N \le v < N + 0.5$, for (N=0) $N-0.5 \le v < N + 0.5$, for (0 <n<2<sup>8-1) $N - 0.5 \le v$, for (N = 2⁸-1)</n<2<sup>

10.3.8.4j Horizontal Velocity with Uncertainty

This IE contains the description of horizontal velocity with uncertainty as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Bearing	MP		Integer (0359)	The direction of movement is given in degrees where "0" represents North, "90" represents East, etc.
Horizontal Speed	MP		Integer (02 ¹¹ -1)	The relationship between (N) and the horizontal speed (h) in kilometers per hour it describes is: $N \le h < N + 0.5$, for (N=0) $N-0.5 \le h < N + 0.5$, for $(0 < N < 2^{11} - 1)$ $N - 0.5 \le h$, for (N = $2^{11} - 1$)
Horizontal Uncertainty Speed	MP		Integer (0255)	The IE value is encoded in increments of 1 kilometer per hour. The value of N give the uncertainty speed except for N=255 which indicates that the uncertainty is not specified

10.3.8.4k Horizontal with Vertical Velocity and Uncertainty

This IE contains the description of horizontal with vertical velocity and uncertainty as in [24].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Vertical Speed direction	MP		ENUMERAT ED (upward, downward)	
Bearing	MP		Integer (0359)	The direction of movement is given in degrees where "0" represents North, "90" represents East, etc.
Horizontal Speed	MP		Integer (02 ¹¹ -1)	The relationship between (N) and the horizontal speed (h) in kilometers per hour it describes is: $N \le h < N + 0.5$, for (N=0) $N-0.5 \le h < N + 0.5$, for (0< $N<2^{11}-1$) $N - 0.5 \le h$, for (N = $2^{11}-1$)
Vertical Speed	MP		Integer (0255)	The relationship between (N) and the vertical speed (v) in kilometres per hour it describes is given by the formula: $N \le v < N + 0.5$, for (N=0) $N-0.5 \le v < N + 0.5$, for $(0 < N < 2^8 - 1)$ $N - 0.5 \le v$, for $(N = 2^8 - 1)$
Horizontal Uncertainty Speed	MP		Integer (0255)	The IE value is encoded in increments of 1 kilometer per hour. The value of N give the uncertainty speed except for N=255 which indicates that the uncertainty is not specified

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Vertical Uncertainty Speed	MP		Integer (0255)	The IE value is encoded in increments of 1 kilometer per hour. The value of N give the uncertainty speed except for N=255 which indicates that the uncertainty is not specified

10.3.8.5 Inter-RAT change failure

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT change failure cause	MP		Enumerated(Configuratio n unacceptabl e, physical channel failure, protocol error, unspecified)	Four spare values are needed.
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	

Condition	Explanation		
ProtErr	The IE is mandatory present if the IE "Inter-RAT		
	change failure cause" has the value "Protocol error"		
	and not needed otherwise.		

10.3.8.6 Inter-RAT handover failure

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Inter-RAT handover failure	MD		Enumerated(Default value is "unspecified".
cause			Configuratio	
			n	Eleven spare values are
			unacceptabl	needed.
			e, physical	
			channel	
			failure,	
			protocol	
			error,	
			inter-RAT	
			protocol	
			error,	
			unspecified)	
Protocol error information	CV-ProtErr		Protocol	
			error	
			information	
			10.3.8.12	

Condition	Explanation
ProtErr	The IE is mandatory present if the IE "Inter-RAT
	handover failure cause" has the value "Protocol error"
	and not needed otherwise.

10.3.8.7 Inter-RAT UE radio access capability

This Information Element contains the inter-RAT UE radio access capability that is structured and coded according to the specification used for the corresponding system type.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE system	MP		Telefelle		
>GSM	. ****		1		
>>Mobile Station Classmark 2	MP		Octet string (5)	This IE is formatted as 'TLV' and is coded in the same way as the Mobile Station Classmark 2 information element in [5]. The first octet is the Mobile station classmark 2 IEI and its value shall be set to 33H. The second octet is the Length of mobile station classmark 2 and its value shall be set to 3. The octet 3 contains the first octet of the value part of the Mobile Station Classmark 2 information element, the octet 4 contains the second octet of the value part of the Mobile Station Classmark 2 information element and so on. For each of these octets, the first/ leftmost/ most significant bit of the octet contains b8 of the corresponding octet of the Mobile Station Classmark 2. In this version of the protocol the first two octets of the Mobile Station Classmark 2 IE containing the Mobile station classmark 2 IEI and the Length of mobile station classmark 2 contents should be ignored by the receiver.	
>>Mobile Station Classmark 3	MP		Octet string (132)	This IE is formatted as 'V' and is coded in the same way as the value part in the Mobile station classmark 3 information element in [5]. The first octet contains octet 1 of the value part of Mobile station classmark 3, the second octet contains octet 2 of the value part of Mobile station classmark 3 and so on.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
•				See NOTE 1.	
>>MS Radio Access Capability	OP		Octet string (164)	This IE is formatted as 'V' and is coded in the same way as the value part in the MS Radio Access Capability information element in [5].	REL-6
>GERAN lu					REL-5
>>MS GERAN Iu mode Radio Access Capability	MP		Bit string (1170)	Formatted and coded according to [53]. The first/leftmost/most significant bit of the bit string contains bit 8 of the first octet of the IE.	REL-5
>cdma2000					
>>cdma2000Message	MP	1.to. <ma xInterSy sMessa ges></ma 			
>>>MSG_TYPE(s)	MP		Bit string (8)	Formatted and coded according to cdma2000 specifications. The first/leftmost/most significant bit of the bit string contains bit 7 of the MSG_TYPE.	
>>>cdma2000Messagep ayload(s)	MP		Bit string (1512)	Formatted and coded according to cdma2000 specifications. The first/leftmost/most significant bit of the bit string contains bit 7 of the first octet of the cdma2000 message.	

NOTE 1: The value part is specified by means of CSN.1, which encoding results in a bit string, to which final padding may be appended upto the next octet boundary [5]. The first/ leftmost bit of the CSN.1 bit string is placed in the first/ leftmost/ most significant bit of the first octet. This continues until the last bit of the CSN.1 bit string, which is placed in the last/ rightmost/ least significant bit of the last octet.

10.3.8.8 Void

10.3.8.8a Inter-RAT UE security capability

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
CHOICE system	MP				
>GSM					
>>GSM security capability	MP			The value TRUE means that the indicated ciphering algorithm is supported.	
>>>A5/7 supported	MP		Boolean		
>>>A5/6 supported	MP		Boolean		
>>>A5/5 supported	MP		Boolean		
>>>A5/4 supported	MP		Boolean		
>>>A5/3 supported	MP		Boolean		
>>>A5/2 supported	MP		Boolean		
>>>A5/1 supported	MP		Boolean		

10.3.8.9 MIB Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MIB Value tag	MP		Integer (18)	

10.3.8.10 PLMN Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN Value tag	MP		Integer (1256)	

10.3.8.10a PNBSCH allocation

UTRAN may use this IE to provide silent periods in the cell that may be used for cell synchronisation purposes.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Number of repetitions per SFN period	MP		Integer(2, 3, 4, 5, 6, 7, 8, 9, 10, 12, 14, 16, 18, 20, 24, 28, 32, 36, 40, 48, 56, 64, 72, 80)		REL-4

10.3.8.11 Predefined configuration identity and value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5	
Predefined configuration value tag	MP		Predefined configuration value tag 10.3.4.6	

10.3.8.12 Protocol error information

This information element contains diagnostics information returned by the receiver of a message that was not completely understood.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE diagnostics type	MP			One spare value is needed.
>Protocol error cause			Protocol	
			error cause	
			10.3.3.26	

10.3.8.13 References to other system information blocks

Information element/Group name	Need	Multi	Type and reference	Semantics description
References to other system information blocks	MP	1 to <maxsib></maxsib>		System information blocks for which multiple occurrences are used, may appear more than once in this list
>Scheduling information	MP		Scheduling information, 10.3.8.16	
>SIB type SIBs only	MP		SIB Type SIBs only, 10.3.8.22	

10.3.8.14 References to other system information blocks and scheduling blocks

Information element/Group	Need	Multi	Type and	Semantics description
name			reference	
References to other system	MP	1 to		System information blocks for
information blocks		<maxsib></maxsib>		which multiple occurrences are
				used, may appear more than
				once in this list
>Scheduling information	MP		Scheduling	
-			information,	
			10.3.8.16	
>SIB and SB type	MP		SIB and SB	
			Type,	
			10.3.8.18a	

10.3.8.15 Rplmn information

Contains information to provide faster RPLMN selection in the UE.

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
GSM BA Range	OP	1 to maxNumG SMFreqRa nges		GSM BA Range	
>GSM Lower Range (UARFCN)	MP		Integer(016 383)	Lower bound for range of GSM BA freqs	
>GSM Upper Range (UARFCN)	MP		Integer(016 383)	Upper bound for range of GSM BA freqs	
FDD UMTS Frequency list	OP	1 to maxNumF DDFreqs			
>UARFCN (Nlow)	MP		Integer(016	[21]	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			383)		
>UARFCN (Nupper)	OP		Integer(016 383)	[21] This IE is only needed when the FDD frequency list is specifying a range.	
3.84 Mcps TDD UMTS Frequency list	OP	1 to maxNumT DDFreqs			
>UARFCN	MP		Integer(016 383)	[22]	
7.68 Mcps TDD UMTS Frequency list	OP	1 to maxNumT DDFreqs	,		REL-7
>UARFCN	MP		Integer(016 383)	[22]	REL-7
1.28 Mcps TDD UMTS Frequency list	OP	1 to maxNumT DDFreqs	,		REL-4
>UARFCN	MP		Integer(016 383)	[22]	REL-4
CDMA2000 UMTS Frequency list	OP	1 to maxNumC DMA200Fr eqs			
>BAND_CLASS	MP		Bit string(5 bits)	TIA/EIA/IS-2000 When mapping the BAND_CLASS to the bit string, the first/leftmost bit of the bit string contains the most significant bit.	
>CDMA_FREQ	MP		Bit string (11 bits)	TIA/EIA/IS-2000 When mapping the CDMA_FREQ to the bit string, the first/leftmost bit of the bit string contains the most significant bit	

10.3.8.16 Scheduling information

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE Value tag	OP			
>PLMN Value tag			PLMN Value	This IE is included if the
			tag 10.3.8.10	following conditions are
				fulfilled:
				the SIB type equals system
				information block type 1
>Predefined configuration			Predefined	This IE is included if the
identity and value tag			configuration	following conditions are
			identity and	fulfilled:
			value tag	the SIB type equals system
			10.3.8.11	information block type 16
>Cell Value tag			Cell Value	This IE is included if the
			tag 10.3.8.4	following conditions are
				fulfilled:
				the area scope for the system
				information block is set to

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				"cell" in table 8.1.1. a value tag is used to indicate changes in the system information block.
>SIB occurrence identity and value tag			SIB occurrence identity and value tag 10.3.8.20b	This IE is included if the following conditions are fulfilled: the SIB type equals system information block types 15.2 and 15.3
Scheduling	MP			
>SEG_COUNT	MD		SEG COUNT 10.3.8.17	Default value is 1
>SIB_REP	MP		Integer (4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096)	Repetition period for the SIB in frames
>SIB_POS	MP		Integer (0 Rep-2 by step of 2)	Position of the first segment Rep is the value of the SIB_REP IE
>SIB_POS offset info	MD	115		see below for default value
>>SIB_OFF	MP		Integer(232 by step of 2)	Offset of subsequent segments

Field	Default value
SIB_POS offset info	The default value is that all segments are
	consecutive, i.e., that the SIB_OFF = 2 for all
	segments except when MIB segment/complete MIB is
	scheduled to be transmitted in between segments
	from same SIB. In that case, SIB_OFF=4 in between
	segments which are scheduled to be transmitted at
	SFNprime = 8 *n-2 and 8*n + 2, and SIB_OFF=2 for
	the rest of the segments.

10.3.8.17 SEG COUNT

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SEG_COUNT	MP		Integer	Number of segments in the
			(116)	system information block

10.3.8.18 Segment index

Each system information segment has an individual segment index.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Segment index	МР		Integer (115)	Segments of a system information block are numbered starting with 0 for the first segment and 1 for the next segment, which can be the first subsequent segment or a last segment.

10.3.8.18a SIB and SB type

The SIB type identifies a specific system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB and SB type	MP		Enumerated, see below	Two spare values are needed

List of enumerated values	Version
	Version
System Information Type 1,	
System Information Type 2,	
System Information Type 3,	
System Information Type 4,	
System Information Type 5,	
System Information Type 6,	
System Information Type 7,	
System Information Type 11,	
System Information Type 12,	
System Information Type 13,	
System Information Type 13.1,	
System Information Type 13.2,	
System Information Type 13.3,	
System Information Type 13.4,	
System Information Type 14,	
System Information Type 15,	
System Information Type 15.1,	
System Information Type 15.2,	
System Information Type 15.3,	
System Information Type 15.4,	
System Information Type 15.5,	
System Information Type 16,	
System Information Type 17,	
System Information Type 18,	
Scheduling Block 1,	
Scheduling Block 2,	
System Information Type 5bis	REL-6

10.3.8.19 SIB data fixed

Contains the result of a master information block or a system information block after encoding and segmentation. The IE is used for segments with fixed length (segments filling an entire transport block).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB data fixed	MP		Bit string (222)	The first bit contains the first bit of the segment.

10.3.8.20 SIB data variable

Contains either a complete system information block or a segment of a system information block. Contains the result of a master information block or a system information block after encoding and segmentation. The IE is used for segments with variable length. The system information blocks are defined in clauses 10.2.48.8.1 to 10.2.48.8.18.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB data variable	MP		Bit string (1214)	The first bit contains the first bit of the segment.

10.3.8.20a SIB occurrence identity

This information element identifies a SIB occurrence for System Information Block types 15.2 and 15.3. For System Information Block type 15.2, this identity is assigned to the visible satellite only. Unused identities are claimed by newly rising satellites.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB occurrence identity	MP		Integer (015)	

10.3.8.20b SIB occurrence identity and value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB occurrence identity	MP		SIB occurrence identity 10.3.8.20a	
SIB occurrence value tag	MP		SIB occurrence value tag 10.3.8.20c	

10.3.8.20c SIB occurrence value tag

This information element is used to identify different versions of SIB occurrence for System Information Block types 15.2 and 15.3.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
SIB occurrence value tag	MP		Integer(015	

10.3.8.21 SIB type

The SIB type identifies a specific system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB type	MP		Enumerated,	One spare value is needed

List of enumerated values	Version
Master information block,	
System Information Type 1,	
System Information Type 2,	
System Information Type 3,	
System Information Type 4,	
System Information Type 5,	
System Information Type 6,	
System Information Type 7,	
System Information Type 11,	
System Information Type 12,	
System Information Type 13,	
System Information Type 13.1,	
System Information Type 13.2,	
System Information Type 13.3,	
System Information Type 13.4,	
System Information Type 14,	
System Information Type 15,	
System Information Type 15.1,	
System Information Type 15.2,	
System Information Type 15.3,	
System Information Type 15.4,	
System Information Type 15.5,	
System Information Type 16,	
System Information Type 17,	
System Information Type 18,	
Scheduling Block 1,	
Scheduling Block 2,	
System Information Type 5bis	REL-6

10.3.8.22 SIB type SIBs only

The SIB type identifies a specific system information block.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
SIB type SIBs only	MP		Enumerated,	Four spare values are needed
			see below	

List of enumerated values	Version
System Information Type 1,	
System Information Type 2,	
System Information Type 3,	
System Information Type 4,	
System Information Type 5,	
System Information Type 6,	
System Information Type 7,	
System Information Type 11,	
System Information Type 12,	
System Information Type 13,	
System Information Type 13.1,	
System Information Type 13.2,	
System Information Type 13.3,	
System Information Type 13.4,	
System Information Type 14,	
System Information Type 15,	
System Information Type 15.1,	
System Information Type 15.2,	
System Information Type 15.3,	
System Information Type 15.4,	
System Information Type 15.5,	
System Information Type 16,	
System Information Type 17,	
System Information Type 18,	
System Information Type 5bis	REL-6

10.3.9 ANSI-41 Information elements

10.3.9.1 ANSI-41 Core Network Information

Information element/Group name	Need	Multi	Type and reference	Semantics description
P_REV	MP		P_REV 10.3.9.10	
MIN_P_REV	MP		MIN_P_REV 10.3.9.8	
SID	MP		SID 10.3.9.11	
NID	MP		NID 10.3.9.9	

10.3.9.2 ANSI-41 Global Service Redirection information

This Information Element contains ANSI-41 Global Service Redirection information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
ANSI-41 Global Service	MP		ANSI-41	Formatted and coded
Redirection information			NAS	according to the 3GPP2
			parameter,	document "G3G CDMA DS on
			10.3.9.3	ANSI-41"

10.3.9.3 ANSI-41 NAS parameter

This Information Element contains ANSI-41 User Zone Identification information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
ANSI-41 NAS parameter	MP		Bit string	The first bit contains the first
			(size	bit of the ANSI-41 information.
			(12048))	

10.3.9.4 ANSI-41 NAS system information

This Information Element contains ANSI-41 system information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NAS (ANSI-41) system information	MP		ANSI-41 NAS	Formatted and coded according to the 3GPP2
			parameter, 10.3.9.3	document "G3G CDMA DS on ANSI-41"

10.3.9.5 ANSI-41 Private Neighbour List information

This Information Element contains ANSI-41 Private Neighbour List information.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
ANSI-41 Private Neighbour List information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.6 ANSI-41 RAND information

This Information Element contains ANSI-41 RAND information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 RAND information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.7 ANSI-41 User Zone Identification information

This Information Element contains ANSI-41 User Zone Identification information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 User Zone Identification information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.8 MIN_P_REV

This Information Element contains minimum protocol revision level.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
MIN_P_REV	MP		Bit string (8)	Minimum protocol revision level. The first/leftmost bit of the bit string contains the most significant bit of the MIN_P_REV.

10.3.9.9 NID

This Information Element contains Network identification.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NID	MP		Bit string (16)	Network identification. The first/leftmost bit of the bit string contains the most significant bit of the NID.

10.3.9.10 P_REV

This Information Element contains protocol revision level.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
P_REV	MP		Bit string (8)	Protocol revision level. The first/leftmost bit of the bit string contains the most significant bit of the P_REV.

10.3.9.11 SID

This Information Element contains System identification.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
SID	MP		Bit string (15)	System identification. The first/leftmost bit of the bit string contains the most significant bit of the SID.

10.3.9a MBMS Information elements

10.3.9a.1 MBMS Common CCTrCH identity

Identifies a Coded Composite Transport channel configuration included within the MBMS COMMON P-T-M RB INFORMATION message.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Common CCTrCh identity	MP		Integer (132)		REL-6

10.3.9a.2 MBMS Common PhyCh identity

Identifies a physical channel configuration included within the MBMS COMMON P-T-M RB INFORMATION message.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Common PhyCh identity	MP		Integer (132)		REL-6

10.3.9a.3 MBMS Common RB identity

Identifies a radio bearer channel configuration included within the MBMS COMMON P-T-M RB INFORMATION message.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Common RB identity	MP		Integer (132)		REL-6

10.3.9a.4 MBMS Common TrCh identity

Identifies a transport channel configuration included within the MBMS COMMON P-T-M RB INFORMATION message.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Common TrCh identity	MP		Integer (132)		REL-6

10.3.9a.5 MBMS Current cell S-CCPCH identity

Identifies one of the current cell's Secondary CCPCH's.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Current cell S- CCPCH identity	MP		Integer (1maxSC CPCH)		REL-6

10.3.9a.6 Void

10.3.9a.7 MBMS L1 combining schedule

Includes information about the MBMS L1 combining schedule.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS L1 combining cycle length	MP		Enumerate d (32, 64, 128, 256, 512, 1024)	In number of radio frames	REL-6
MBMS L1 combining cycle offset	MD		Integer (0 MBMS L1 combining cycle length - 4) by step of 4	Start of the L1 combining cycle (relative to the timing of the current cell) in number of radio frames. Default value is no offset	REL-6
MTCH L1- combining period list	MP	1 to < maxMB MS- L1CP>		One or more periods in which L1 combining is performed	REL-6
>Start	MP		Integer (0 MBMS L1 combining cycle length - 4) by step of 4	Number of frames from the end of the previous combining period or the start of the cycle (for the first period)	REL-6
>Duration	MP		Integer (4 MBMS L1 combining cycle length) by step of 4	Number of frames (see note)	REL-6

NOTE: The MTCH L1- combining period should indicate one or more complete TTIs.

10.3.9a.7o MBMS p-t-m activation time

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version	
MBMS p-t-m activation	MP		Integer	The 11 LSB of the SFN. Note 1	REL-6	
time			(02047)	and 2.		
Note 1: The 'MBMS p-t-m activation time' indicates the start of the 10 ms frame corresponding to the indicated SFN value and of the primary CCPCH of the cell where this IE is transmitted.						
Note 2: The range of the 'MBMS p-t-m activation time' is from 10 ms after the beginning of the MCCH modification period wherein it is transmitted and to the end of next following MCCH modification period. The UE shall consider a value out of this range as expired.						

10.3.9a.7a MBMS p-t-m RB information

Includes information about an MBMS p-t-m radio bearers mapped on a TrCH.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
RB information	CV-Curr		MBMS Common		REL-6
			RB identity 10.3.9a.3		
MBMS short transmission ID	MP		MBMS Short transmissi on identity 10.3.9a.1		REL-6
MBMS logical channel identity	MP		Integer (115)	This identifier is used to distinguish different MTCH mapped on to a TrCh ('MBMS-Id' within the MAC header[15])	REL-6
L1 combining status	CV- Neigh		Boolean	The IE is only applicable in case of partial L1 comining, in which case value TRUE means that L1 combining is used for this radio bearer	REL-6

Condition	Explanation
Curr	The IE is mandatory present if the IE 'MBMS p-t-m RB information list' is included in the MBMS CURRENT CELL P-T-M RB INFORMATION message and not needed otherwise
Neigh	The IE is mandatory present if the IE 'MBMS p-t-m RB information list' is included in the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message and not needed otherwise

10.3.9a.8 MBMS Service identity

Includes information about the identity of an MBMS service.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Service ID	MP		MBMS Service ID 10.3.9a.8a		REL-6
CHOICE PLMN identity	MP				REL-6
>SameAs-MIB				(No data) The PLMN identity is the same as indicated by the IE 'PLMN identity' in MIB	REL-6
>SameAsMIB- MultiPLMN-Id					REL-6
>>Multi PLMN id	MP		Integer (15)	The PLMN identity is one of the PLMN identities (1 to 5) in the IE "Multiple PLMN List" in MIB	REL-6
>ExplicitPLMN-Id					REL-6
>>PLMN identity	MP		PLMN identity 10.3.1.11		REL-6

10.3.9a.8a MBMS Service ID

Uniquely identifies an MBMS bearer service within a PLMN.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Service ID	MP		Octet string (3)	The content of the MBMS Service ID field is coded as octets 3 to 5 of the IE Temporary Mobile Group Identity [5]	REL-6

10.3.9a.9 MBMS Session identity

Includes information about the the identity of a session of an MBMS service.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Session ID	MP		Octet string (1)		REL-6

10.3.9a.10 MBMS Short transmission identity

Includes a short identity of the MBMS transmission identity, which concerns a session of a specific service.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS short transmission identity	MP		Integer (1maxMB MSservUn modif)	Reference/ index to a transmission listed in the MBMS MODIFIED SERVICES INFORMATION or MBMS UNMODIFIED SERVICES INFORMATION	REL-6

10.3.9a.10a MBMS Soft Combining Timing Offset

Indicates the timing offset applied in the CFN calculation in sub-clause 8.5.15.5 for a secondary CCPCH carrying only MBMS logical channels. It is used for FDD only.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
>MBMS Soft Combining	MP		Integer (0,	Timing offset applied in the	REL-6
Timing Offset			10, 20, 40)	CFN calculation in sub-clause	
				8.5.15.5, in ms.	

10.3.9a.11 MBMS specific timers and counters

Includes MBMS specific timers and counters.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
T318	MD		Integer(25 0 2000 by step of	Value in milliseconds. Default value is 1000.	REL-6
			250, 3000, 4000, 6000,		
			8000, 10000,		
			12000, 16000)		

10.3.9a.12 MBMS Transmission identity

Includes information about the MBMS transmission identity, which concerns a session of a specific service.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MBMS Service ID	MP		MBMS Service identity 10.3.9a.8		REL-6
MBMS Session ID	OP		MBMS Session identity 10.3.9a.9		REL-6

10.3.9a.13 MCCH configuration information

Includes information about the MCCH configuration.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
Access Info Period coefficient	MP		Integer (03)	Represents <i>a</i> , the access information coefficient. The number of repetitions per modification period equals 2 ^a while the actual access information period, in number of frames, equals MP DIV 2 ^a	REL-6
Repetition Period coefficient	MP		Integer (03)	Represents <i>r</i> , the repetition period coefficient. The number of repetitions per modification period equals 2 ^r while the actual repetition period, in number of frames, equals MP DIV 2 ^r	REL-6

Modification period coefficient	MP	Integer (710)	Represents <i>m</i> , the modification period coefficient. The actual modification period (MP), in number of frames, equals 2 ^m	REL-6
RLC info	MP	RLC info MBMS 10.3.4.23a		REL-6
TCTF presence	CV- MBMS	Enumerate d (false)	By default the TCTF is present even though the FACH only carries one logical channel (type). When this IE is included, the TCTF is absent	REL-6

Condition	Explanation		
MBMS	This IE is not needed if the IE is contained within the IE 'Secondary CCPCH system information', otherwise		
	the IE is optional.		

10.3.9a.14 MICH configuration information

Includes information about the MICH configuration.

Information element/Group name	Need	Multi	Type and reference	Semantics description	Version
MICH Power offset	MP		MICH Power offset 10.3.9a.15	·	REL-6
CHOICE mode	MP				REL-6
>FDD					REL-6
>>Channelisation code	MP		Integer (0.255)		REL-6
>>Number of NI per frame	MP		Integer (18, 36, 72, 144)		REL-6
>>STTD indicator	MP		STTD Indicator 10.3.6.78		REL-6
>TDD					REL-6
>>Timeslot number	MP		Timeslot number 10.3.6.84		REL-6
>>Midamble shift and burst type	MP		Midamble shift and burst type 10.3.6.41		REL-6
>>CHOICE TDD option	MP				REL-6
>>>3.84 Mcps TDD					REL-6
>>>>Channelisation code	MP		Enumerate d ((16/1)(16 /16))		REL-6
>>>7.68 Mcps TDD			<i>''</i>		REL-7
>>>>Channelisation code	MP		Enumerate d ((32/1)(32 /32))		REL-7
>>>1.28 Mcps TDD			,,		REL-6
>>>Codes list	MP	1 to 2			REL-6
>>>>Channelisation code	MP		Enumerate d ((16/1)(16 /16))		REL-6
>>Repetition period/length	MD			Default value is '(64/2)'.	REL-6
>>Offset	MP		Integer (0Repetit ion period - 1)	SFN mod Repetitionperiod = Offset.	REL-6
>>MBMS Notification indicator length	MD		Integer (4, 8, 16)	Indicates the length of one MBMS Notification indicator in bits. Default value is 4.	REL-6

10.3.9a.15 MICH Power offset

This is the power transmitted on the MICH minus power of the Primary CPICH in FDD and Primary CCPCH Tx Power in TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
MICH Power offset	MP		Integer(-10 +5)	Offset in dB	REL-6

10.3.9a.16 MSCH configuration information

Includes information about the MSCH configuration.

Information	Need	Multi	Type and	Semantics	Version
element/Group name			reference	description	
MSCH configuration information	MP			For FDD, scheduling information is provided starting at (SFN – (SCTO div 10ms)) mod MSCH_REP = MSCH_OFF For TDD, scheduling information is provided starting at SFN mod MSCH_REP = MSCH_OFF	REL-6
>Scheduling period	MD		Enumerate d (32, 64, 128, 256, 512, 1024)	The period, in number of frames, between MBMS scheduling messages (MSCH_REP) Default value is the value included in the MBMS GENERAL INFORMATION message	REL-6
>Scheduling offset	MD		Integer (0(MSCH _REP-1))	The position of MBMS scheduling messages relative to timing of the corresponding cell (MSCH_OFF) Default value is the value included in the MBMS GENERAL INFORMATION message	REL-6
>RLC info	MD		RLC info MBMS 10.3.4.23a	Default value is the one included in the MBMS GENERAL INFORMATION message	REL-6
TCTF presence	OP		Enumerate d (false)	By default the TCTF is present even though the FACH only carries one logical channel (type). When this IE is included, the TCTF is absent	REL-6

10.3.10 Multiplicity values and type constraint values

The following table includes constants that are either used as multi bounds (name starting with "max") or as high or low value in a type specification (name starting with "lo" or "hi"). Constants are specified only for values appearing more than once in the RRC specification. In case a constant is related to one or more other constants, an expression is included in the "value" column instead of the actual value.

Constant	Explanation	Value	Version	
CN information				
maxCNdomains	Maximum number of CN domains	4		
UTRAN mobility information				
	Mayinayna nyurahay ay Dadia Assasa Tashyalayina	many Oth and AT + 4		
maxRAT maxOtherRAT	Maximum number or Radio Access Technologies	maxOtherRAT + 1		
	Maximum number or other Radio Access Technologies	15		
maxURA	Maximum number of URAs in a cell	8		
maxInterSysMessages	Maximum number of Inter System Messages	4		
maxRABsetup	Maximum number of RABs to be established	16		
UE information				
maxtransactions	Maximum number of parallel RRC transactions in downlink	25		
maxPDCPalgoType	Maximum number of PDCP algorithm types	8		
maxFreqBandsFDD	Maximum number of frequency bands supported by the UE as defined in [21]	8		
maxFreqBandsFDD-ext	Maximum number of frequency bands as defined in [21] and treated by RRC	22	REL-6	
maxFreqBandsTDD	Maximum number of frequency bands supported by the UE as defined in [22]	4		
maxFreqBandsGSM	Maximum number of frequency bands supported by the UE as defined in [45]	16		
maxPage1	Number of UEs paged in the Paging Type 1 message	8		
maxSystemCapability	Maximum number of system specific capabilities that can be requested in one message.	16		
MaxURNTIgroup	Maximum number of U-RNTI groups in one message	8	REL-5	
RB information	moodago			
maxPredefConfig	Maximum number of predefined configurations	16		
maxRB	Maximum number of RBs	32		
maxSRBsetup	Maximum number of signalling RBs to be established	8		
maxRBperRAB	Maximum number of RBs per RAB	8		
maxRBallRABs	Maximum number of non signalling RBs	27		
maxRBperTrCh	Maximum number of RB per TrCh	16	REL-6	
maxRBMuxOptions	Maximum number of RB multiplexing options	8	INEE O	
maxLoCHperRLC	Maximum number of logical channels per RLC entity	2		
maxRLCPDUsizePerLogCha n	Maximum number of RLC PDU sizes per logical channel mapped on E-DCH	32	REL-6	
MaxROHC-PacketSizes	Maximum number of packet sizes that are allowed to be produced by ROHC.	16		
MaxROHC-Profiles	Maximum number of profiles supported by ROHC on a given RB.	8		
maxRFC 3095-CID	Maximum number of available CID values per radio bearer	16384	REL-5	
TrCH information				
maxE-DCHMACdFlow	Maximum number of E-DCH MAC-d flows	8	REL-6	
MaxHProcesses	Maximum number of H-ARQ processes	8	REL-5	
MaxHSDSCH_TB_index	Maximum number of TB set size configurations for the HS-DSCH.	64 (FDD and 1.28 MCPS TDD); 512 (3.84 Mcps TDD); 1024 (7.68 Mcps TDD)	REL-5	

Constant	Explanation	Value	Version
maxMACdPDUSizes	Maximum number of MAC-d PDU sizes per queue permitted for MAC-hs	8	REL-5
maxTrCH	Maximum number of transport channels used in one direction (UL or DL)	32	
maxTrCHpreconf	Maximum number of preconfigured Transport channels, per direction	16	
maxCCTrCH	Maximum number of CCTrCHs	8	
maxQueueID	Maximum number of Mac-hs queues	8	REL-5
MaxTF	Maximum number of different transport formats that can be included in the Transport format set for one transport channel	32	
maxTFC	Maximum number of Transport Format Combinations	1024	
maxTFCsub	Maximum number of Transport Format Combinations Subset	1024	
maxSIBperMsg	Maximum number of complete system information blocks per SYSTEM INFORMATION message	16	
maxSIB	Maximum number of references to other system information blocks.	32	
maxSIB-FACH	Maximum number of references to system information blocks on the FACH	8	
PhyCH information			
maxHSSCCHs	Maximum number of HSSCCH codes that can be assigned to a UE	4	REL-5
maxAC	Maximum number of access classes	16	
maxASC	Maximum number of access service classes	8	
maxASCmap	Maximum number of access class to access service classes mappings	7	
maxASCpersist	Maximum number of access service classes for which persistence scaling factors are specified	6	
maxPRACH	Maximum number of PRACHs in a cell	16	
MaxPRACH_FPACH	Maximum number of PRACH / FPACH pairs in a cell (1.28 Mcps TDD)	8	REL-4
maxFACHPCH	Maximum number of FACHs and PCHs mapped onto one secondary CCPCHs	8	
maxRL	Maximum number of radio links	8	
maxEDCHRL	Maximum number of E-DCH radio links	4	REL-6
maxSCCPCH	Maximum number of secondary CCPCHs per cell	16	
maxDPDCH-UL	Maximum number of DPDCHs per cell	6	
maxDPCH-DLchan	Maximum number of channelisation codes used for DL DPCH	8	
maxPUSCH	Maximum number of PUSCHs	(8)	
maxPDSCH	Maximum number of PDSCHs	8	
maxTS	Maximum number of timeslots used in one direction (UL or DL)	14 (3.84 Mcps TDD and 7.68 Mcps TDD) 6 (1.28 Mcps	REL-4
		TDD)	
hiPUSCHidentities	Maximum number of PUSCH Identities	64	
hiPDSCHidentities	Maximum number of PDSCH Identities	64	
Measurement information			
maxTGPS	Maximum number of transmission gap pattern sequences	6	
maxAdditionalMeas	Maximum number of additional measurements for a given measurement identity	4	
maxMeasEvent	Maximum number of events that can be listed in measurement reporting criteria	8	
maxMeasParEvent	Maximum number of measurement parameters (e.g. thresholds) per event	2	
maxMeasIntervals	Maximum number of intervals that define the mapping function between the measurements for the cell quality Q of a cell and the representing quality value	1	
maxCellMeas	Maximum number of cells to measure	32	

Constant	Explanation	Value	Version
maxReportedGSMCells	Maximum number of GSM cells to be reported	8	
maxFreq	Maximum number of frequencies to measure	8	
maxSat	Maximum number of satellites to measure	16	
maxSatAlmanacStorage	Maximum number of satellites for which to store GPS Almanac information	32	
HiRM	Maximum number that could be set as rate matching attribute for a transport channel	256	
Frequency information			
MaxFDDFreqList	Maximum number of FDD carrier frequencies to be stored in USIM	4	
MaxTDDFreqList	Maximum number of TDD carrier frequencies to be stored in USIM	4	
MaxFDDFreqCellList	Maximum number of neighbouring FDD cells to be stored in USIM	32	
MaxTDDFreqCellList	Maximum number of neighbouring TDD cells to be stored in USIM	32	
MaxGSMCellList	Maximum number of GSM cells to be stored in USIM	32	
Other information			
MaxGERANSI	Maximum number of GERAN SI blocks that can be provided as part of NACC information	8	REL-5
maxNumGSMFreqRanges	Maximum number of GSM Frequency Ranges to store	32	
MaxNumFDDFreqs	Maximum number of FDD centre frequencies to store	8	
MaxNumTDDFreqs	Maximum number of TDD centre frequencies to store	8	
maxNumCDMA200Freqs	Maximum number of CDMA2000 centre frequencies to store	8	
maxGSMTargetCells MBMS information	Maximum number of GSM target cells	32	REL-6
maxMBMS-	Maximum number of CCTrCh configurations	32	REL-6
CommonCCTrCh	included in the MBMS COMMON P-T-M RB INFORMATION message	02	INCL 0
maxMBMS-	Maximum number of PhyCh configurations	32	REL-6
CommonPhyCh	included in the MBMS COMMON P-T-M RB INFORMATION message		
maxMBMS-CommonRB	Maximum number of RB configurations included in the MBMS COMMON P-T-M RB INFORMATION message	32	REL-6
maxMBMS-CommonTrCh	Maximum number of TrCh configurations included in the MBMS COMMON P-T-M RB INFORMATION message	32	REL-6
maxMBMS-Freq	Maximum number of MBMS preferred frequencies	4	REL-6
maxMBMS-L1CP	Maximum number of periods in which layer 1 combining applies	4	REL-6
maxMBMSservCount	Maximum number of MBMS services in a Access Info message	8	REL-6
maxMBMSservModif	Maximum number of MBMS services in a MBMS MODIFIED SERVICES INFORMATION message	32	REL-6
maxMBMSservSched	Maximum number of MBMS services in a MBMS SCHEDULING INFORMATION message	16	REL-6
maxMBMSservUnmodif	Maximum number of MBMS services in a MBMS UNMODIFIED SERVICES INFORMATION message	64	REL-6
maxMBMSTransmis	Maximum number of transmissions for which scheduling information is provided within a scheduling period	4	REL-6

11 Message and Information element abstract syntax (with ASN.1)

This clause contains definitions for RRC PDUs and IEs using a subset of ASN.1 as specified in [14]. PDU and IE definitions are grouped into separate ASN.1 modules.

11.0 General

Some messages and/or IEs may include one or more IEs with name "dummy" that are included only in the ASN.1. The UE should avoid sending information elements that are named "dummy" to UTRAN. Likewise, UTRAN should avoid sending IEs with name "dummy" to the UE. If the UE anyhow receives an information element named "dummy", it shall ignore the IE and process the rest of the message as if the IE was not included.

NOTE: An IE with name "dummy" concerns an information element that was (erroneously) included in a previous version of the specification and has been removed by replacing it with a dummy with same type.

The UE shall only include the "variable length extension container" when it sends a non critical extension that according to this specification shall be transferred within this container.

If the abstract syntax of an IE is defined using the ASN.1 type "BIT STRING", and this IE corresponds to a functional IE definition in tabular format, in which the significance of bits is semantically defined, the following general rule shall be applied:

The bits in the ASN.1 bit string shall represent the semantics of the functional IE definition in decreasing order of bit significance;

- with the first (or leftmost) bit in the bit string representing the most significant bit; and
- with the last (or rightmost) bit in the bit string representing the least significant bit.

11.1 General message structure

```
Class-definitions DEFINITIONS AUTOMATIC TAGS ::=
```

BEGIN IMPORTS

> ActiveSetUpdate, ActiveSetUpdateComplete. ActiveSetUpdateFailure, AssistanceDataDelivery, CellChangeOrderFromUTRAN CellChangeOrderFromUTRANFailure, CellUpdate, CellUpdateConfirm-CCCH, CellUpdateConfirm, CounterCheck, CounterCheckResponse, DownlinkDirectTransfer HandoverToUTRANComplete, InitialDirectTransfer, HandoverFromUTRANCommand-GERANIu, HandoverFromUTRANCommand-GSM, HandoverFromUTRANCommand-CDMA2000, HandoverFromUTRANFailure, MBMSAccessInformation, MBMSCommonPTMRBInformation, MBMSCurrentCellPTMRBInformation, MBMSGeneralInformation, MBMSModificationRequest, MBMSModifiedServicesInformation. ${\tt MBMSNeighbouringCellPTMRBInformation},$ MBMSSchedulingInformation, ${\tt MBMSUnmodifiedServicesInformation,}$ MeasurementControl MeasurementControlFailure,

```
MeasurementReport,
    PagingType1,
    PagingType2,
    PhysicalChannelReconfiguration,
    PhysicalChannelReconfigurationComplete,
    PhysicalChannelReconfigurationFailure,
    PhysicalSharedChannelAllocation,
    PUSCHCapacityRequest,
    RadioBearerReconfiguration,
    RadioBearerReconfigurationComplete,
    RadioBearerReconfigurationFailure,
    RadioBearerRelease,
    RadioBearerReleaseComplete,
    RadioBearerReleaseFailure,
    RadioBearerSetup,
    RadioBearerSetupComplete,
    RadioBearerSetupFailure,
    RRCConnectionReject,
    RRCConnectionRelease,
    RRCConnectionRelease-CCCH,
    RRCConnectionReleaseComplete,
    RRCConnectionRequest,
    RRCConnectionSetup,
    RRCConnectionSetupComplete,
    RRCStatus.
    SecurityModeCommand,
    SecurityModeComplete,
    SecurityModeFailure,
    SignallingConnectionRelease,
    {\tt SignallingConnectionReleaseIndication,}
    SystemInformation-BCH,
    SystemInformation-FACH,
    SystemInformationChangeIndication,
    TransportChannelReconfiguration,
    {\tt TransportChannelReconfigurationComplete,}
    TransportChannelReconfigurationFailure,
    TransportFormatCombinationControl,
    {\tt TransportFormatCombinationControlFailure,}
    UECapabilityEnquiry,
    UECapabilityInformation,
    UECapabilityInformationConfirm,
    UplinkDirectTransfer,
    UplinkPhysicalChannelControl,
    URAUpdate,
    URAUpdateConfirm,
    URAUpdateConfirm-CCCH,
    UTRANMobilityInformation,
    UTRANMobilityInformationConfirm,
    UTRANMobilityInformationFailure
FROM PDU-definitions
-- User Equipment IEs :
    IntegrityCheckInfo
FROM InformationElements;
__**********************
-- Downlink DCCH messages
__**********************
DL-DCCH-Message ::= SEQUENCE {
    integrityCheckInfo IntegrityCheckInfo
                                                  OPTIONAL,
                           DL-DCCH-MessageType
    message
}
DL-DCCH-MessageType ::= CHOICE {
   activeSetUpdate
                                       ActiveSetUpdate,
    assistanceDataDelivery
                                       AssistanceDataDelivery
    cellChangeOrderFromUTRAN
                                       CellChangeOrderFromUTRAN,
    {\tt cellUpdateConfirm}
                                       CellUpdateConfirm,
    counterCheck
                                       CounterCheck,
    downlinkDirectTransfer
                                       DownlinkDirectTransfer,
    handoverFromUTRANCommand-GSM
                                       HandoverFromUTRANCommand-GSM,
   handoverFromUTRANCommand-CDMA2000 HandoverFromUTRANCommand-CDMA2000,
    measurementControl
                                       MeasurementControl,
    pagingType2
                                       PagingType2.
                                       PhysicalChannelReconfiguration,
    physicalChannelReconfiguration
```

```
physicalSharedChannelAllocation
                                       PhysicalSharedChannelAllocation,
    radioBearerReconfiguration
                                       RadioBearerReconfiguration,
    radioBearerRelease
                                       RadioBearerRelease,
    radioBearerSetup
                                       RadioBearerSetup,
    rrcConnectionRelease
                                       RRCConnectionRelease,
    security Mode Command
                                       SecurityModeCommand,
    signallingConnectionRelease
                                       SignallingConnectionRelease,
    transportChannelReconfiguration
                                       TransportChannelReconfiguration,
    transportFormatCombinationControl
                                       {\tt TransportFormatCombinationControl}\,,
    ueCapabilityEnquiry
                                       UECapabilityEnquiry,
    ueCapabilityInformationConfirm
                                       UECapabilityInformationConfirm,
    uplinkPhysicalChannelControl
                                       UplinkPhysicalChannelControl,
    uraUpdateConfirm
                                       URAUpdateConfirm,
    utranMobilityInformation
                                       UTRANMobilityInformation,
    handoverFromUTRANCommand-GERANIu
                                       HandoverFromUTRANCommand-GERANIu,
    mbmsModifiedServicesInformation
                                       MBMSModifiedServicesInformation,
                                       NULT.
    spare5
    spare4
                                       NULL,
    spare3
                                       NULL.
    spare2
                                       NULL,
                                       NULL
    spare1
}
__*********************
-- Uplink DCCH messages
__*********************
UL-DCCH-Message ::= SEQUENCE {
    integrityCheckInfo
                           IntegrityCheckInfo
                                                   OPTIONAL,
    message
                           UL-DCCH-MessageType
}
UL-DCCH-MessageType ::= CHOICE {
    activeSetUpdateComplete
                                       ActiveSetUpdateComplete,
    activeSetUpdateFailure
                                       ActiveSetUpdateFailure,
    cellChangeOrderFromUTRANFailure
                                       CellChangeOrderFromUTRANFailure,
    counterCheckResponse
                                       CounterCheckResponse,
    {\tt handoverToUTRANComplete}
                                       HandoverToUTRANComplete,
    initialDirectTransfer
                                       InitialDirectTransfer,
    handoverFromUTRANFailure
                                       HandoverFromUTRANFailure.
    measurementControlFailure
                                       MeasurementControlFailure,
    measurementReport
                                       MeasurementReport,
    \verb|physicalChannelReconfigurationComplete| \\
                                       PhysicalChannelReconfigurationComplete,
    physicalChannelReconfigurationFailure
                                       PhysicalChannelReconfigurationFailure,
    radio Bearer Reconfiguration Complete \quad Radio Bearer Reconfiguration Complete \,, \\
    radioBearerReconfigurationFailure RadioBearerReconfigurationFailure,
    radioBearerReleaseComplete
                                       RadioBearerReleaseComplete,
    radioBearerReleaseFailure
                                       RadioBearerReleaseFailure,
    radioBearerSetupComplete
                                       RadioBearerSetupComplete,
    radioBearerSetupFailure
                                       RadioBearerSetupFailure,
    rrcConnectionReleaseComplete
                                       RRCConnectionReleaseComplete,
    rrcConnectionSetupComplete
                                       RRCConnectionSetupComplete,
    rrcStatus
                                       RRCStatus,
    securityModeComplete
                                       SecurityModeComplete,
    securityModeFailure
                                       SecurityModeFailure,
    signallingConnectionReleaseIndication
                                       SignallingConnectionReleaseIndication,
    transport {\tt Channel Reconfiguration Complete}
                                       TransportChannelReconfigurationComplete,
    transportChannelReconfigurationFailure
                                       TransportChannelReconfigurationFailure,
    transportFormatCombinationControlFailure
                                       {\tt TransportFormatCombinationControlFailure,}
    ueCapabilityInformation
                                       UECapabilityInformation,
    uplinkDirectTransfer
                                       UplinkDirectTransfer,
    \verb"utranMobilityInformationConfirm"
                                       {\tt UTRANMobilityInformationConfirm,}\\
    utranMobilityInformationFailure
                                       UTRANMobilityInformationFailure,
    mbmsModificationRequest
                                       MBMSModificationRequest,
    spare1
                                       NULL
}
-- Downlink CCCH messages
```

```
__**********************
DL-CCCH-Message ::= SEQUENCE {
   integrityCheckInfo IntegrityCheckInfo message DL-CCCH-MessageType
                                        OPTIONAL,
}
DL-CCCH-MessageType ::= CHOICE {
  cellUpdateConfirm
                    Cellupdateconfilm coon,
RRCConnectionReject,
RRCConnectionRelease-CCCH,
RRCConnectionSetup,
                                CellUpdateConfirm-CCCH,
  rrcConnectionReject
  rrcConnectionRelease
  rrcConnectionSetup
  uraUpdateConfirm
                               URAUpdateConfirm-CCCH,
   spare3
                                NULL,
                                NULL,
   spare2
                                NULL
   spare1
}
__********************
-- Uplink CCCH messages
__*********************
UL-CCCH-Message ::= SEQUENCE {
   integrityCheckInfo IntegrityCheckInfo
                     UL-CCCH-MessageType
   message
}
UL-CCCH-MessageType ::= CHOICE {
  cellUpdate
                                CellUpdate,
   rrcConnectionRequest
                                RRCConnectionRequest,
                                URAUpdate,
   uraUpdate
   spare
                                NULL
__********************
-- PCCH messages
__********************
PCCH-Message ::= SEQUENCE {
  message PCCH-MessageType
PCCH-MessageType ::= CHOICE {
  pagingType1
                                PagingType1,
   spare
}
__*********************
-- Downlink SHCCH messages
DL-SHCCH-Message ::= SEQUENCE {
            DL-SHCCH-MessageType
  message
DL-SHCCH-MessageType ::= CHOICE {
  physicalSharedChannelAllocation PhysicalSharedChannelAllocation,
                                NULL
   spare
__*********************
-- Uplink SHCCH messages
__*********************
UL-SHCCH-Message ::= SEQUENCE {
   message
                      UL-SHCCH-MessageType
UL-SHCCH-MessageType ::= CHOICE {
```

```
puschCapacityRequest
                                  PUSCHCapacityRequest,
   spare
}
__**********************
-- BCCH messages sent on FACH
__*********************
BCCH-FACH-Message ::= SEQUENCE {
   message
                    BCCH-FACH-MessageType
{\tt BCCH-FACH-MessageType} \; ::= \; {\tt CHOICE} \; \; \big\{
   systemInformation
                                  SystemInformation-FACH,
   {\tt systemInformationChangeIndication} \qquad {\tt SystemInformationChangeIndication},
   spare1
                                  NULL
}
__**********************
-- BCCH messages sent on BCH
__********************
BCCH-BCH-Message ::= SEQUENCE {
                    SystemInformation-BCH
    *****************
-- MCCH messages
__********************
MCCH-Message ::= SEQUENCE {
              MCCH-MessageType
\verb|MCCH-MessageType| ::= CHOICE \{ |
   {\tt mbmsAccessInformation}
                                  MBMSAccessInformation,
                                MBMSCommonPTMRBInformation,
   {\tt mbmsCommonPTMRBInformation}
   mbmsCurrentCellPTMRBInformation
                                  MBMSCurrentCellPTMRBInformation,
   mbmsGeneralInformation
                                  MBMSGeneralInformation.
   mbmsModifiedServicesInformation
                                  MBMSModifiedServicesInformation,
   {\tt mbmsNeighbouringCellPTMRBInformation}
                                  MBMSNeighbouringCellPTMRBInformation,
   mbmsUnmodifiedServicesInformation
                                  MBMSUnmodifiedServicesInformation,
   spare9
                                  NULL,
   spare8
                                  NULL,
                                  NULL,
   spare7
                                  NULL,
   spare6
                                  NULL,
   spare5
   spare4
                                  NULL,
                                  NULL,
   spare3
   spare2
                                  NULL,
   spare1
                                  NULL
}
__**********************
-- MSCH messages
__*********************
MSCH-Message ::= SEQUENCE {
   message
                    MSCH-MessageType
MSCH-MessageType ::= CHOICE {
   {\tt mbmsSchedulingInformation}
                                  MBMSSchedulingInformation,
   spare3
                                  NULL,
   spare2
                                  NULL,
   spare1
                                  NULL
```

END

11.2 PDU definitions

```
-- TABULAR: The message type and integrity check info are not
-- visible in this module as they are defined in the class module.
-- Also, all FDD/TDD specific choices have the FDD option first
-- and TDD second, just for consistency.
___*********************
PDU-definitions DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__********************
-- IE parameter types from other modules
__********************
TMPORTS
-- Core Network IEs :
   CN-DomainIdentity,
   CN-InformationInfo,
   CN-InformationInfo-r6,
   CN-InformationInfoFull,
   NAS-Message,
   PagingRecordTypeID,
   PLMN-Identity,
-- UTRAN Mobility IEs :
   CellIdentity,
   CellIdentity-PerRL-List,
   URA-Identity,
-- User Equipment IEs :
   UE-RadioAccessCapabilityComp-r7,
   UE-RadioAccessCapability-v7xyext,
   UE-RadioAccessCapabBandFDDList2,
   UE-RadioAccessCapabBandFDDList-ext,
   AccessStratumReleaseIndicator,
   ActivationTime,
   C-RNTT.
   CapabilityUpdateRequirement,
   CapabilityUpdateRequirement-r4,
   CapabilityUpdateRequirement-r4-ext,
   CapabilityUpdateRequirement-r5,
   CapabilityUpdateRequirement-r7-ext,
   CellUpdateCause,
   CellUpdateCause-ext,
   CipheringAlgorithm,
   CipheringModeInfo,
   DelayRestrictionFlag,
   DSCH-RNTI,
   E-RNTI,
   EstablishmentCause.
   FailureCauseWithProtErr,
   FailureCauseWithProtErrTrId,
   GroupReleaseInformation,
   H-RNTI.
   UESpecificBehaviourInformation1idle,
   UESpecificBehaviourInformationlinterRAT,
   InitialUE-Identity,
   IntegrityProtActivationInfo,
   IntegrityProtectionModeInfo,
   N - 308,
   PagingCause,
   PagingRecordList,
   PagingRecord2List-r5,
   ProtocolErrorIndicator,
   ProtocolErrorIndicatorWithMoreInfo,
   RadioFrequencyBandTDDList,
   Rb-timer-indicator,
   RedirectionInfo,
```

```
RedirectionInfo-r6,
   RejectionCause,
   ReleaseCause,
   RF-CapabilityComp,
   RRC-StateIndicator,
   RRC-TransactionIdentifier,
   SecurityCapability,
   START-Value,
   STARTList,
   SystemSpecificCapUpdateReq-v590ext,
   U-RNTI,
   U-RNTI-Short.
   UE-CapabilityContainer-IEs,
   UE-RadioAccessCapability,
   UE-RadioAccessCapability-v370ext,
   UE-RadioAccessCapability-v380ext,
   UE-RadioAccessCapability-v3a0ext,
   UE-RadioAccessCapability-v3g0ext,
   UE-RadioAccessCapability-v4b0ext,
   UE-RadioAccessCapability-v590ext,
   {\tt UE-RadioAccessCapability-v5c0ext},\\
   UE-RadioAccessCapability-v650ext,
   UE-RadioAccessCapability-v680ext,
   UE-RadioAccessCapabilityComp,
   UE-RadioAccessCapabilityComp-ext,
   UE-RadioAccessCapabilityComp2,
   DL-PhysChCapabilityFDD-v380ext,
   UE-ConnTimersAndConstants,
   UE-ConnTimersAndConstants-v3a0ext,
   UE-ConnTimersAndConstants-r5,
   UE-SecurityInformation,
   UE-SecurityInformation2,
   URA-UpdateCause,
   UTRAN-DRX-CycleLengthCoefficient,
   WaitTime,
-- Radio Bearer IEs :
   DefaultConfigIdentity,
   DefaultConfigIdentity-r4,
   DefaultConfigIdentity-r5,
   DefaultConfigIdentity-r6,
   DefaultConfigMode,
   DL-CounterSynchronisationInfo,
   DL-CounterSynchronisationInfo-r5,
   PDCP-ROHC-TargetMode,
   PredefinedConfigIdentity,
   PredefinedConfigStatusList,
   PredefinedConfigStatusListComp,
   PredefinedConfigSetWithDifferentValueTag,
   RAB-Info,
   RAB-Info-r6,
   RAB-Info-Post,
   RAB-InformationList,
   RAB-InformationList-r6,
   RAB-InformationReconfigList,
   RAB-InformationSetupList,
   RAB-InformationSetupList-r4,
   RAB-InformationSetupList-r5,
   RAB-InformationSetupList-r6-ext,
   RAB-InformationSetupList-r6,
   RB-ActivationTimeInfoList,
   RB-COUNT-C-InformationList,
   RB-COUNT-C-MSB-InformationList,
   RB-IdentityList,
   RB-InformationAffectedList,
   RB-InformationAffectedList-r5,
   RB-InformationAffectedList-r6,
   RB-InformationChangedList-r6,
   RB-InformationReconfigList,
   RB-InformationReconfigList-r4,
   RB-InformationReconfigList-r5,
   RB-InformationReconfigList-r6,
   RB-InformationReleaseList,
   RB-PDCPContextRelocationList
   SRB-InformationSetupList,
   SRB-InformationSetupList-r5,
   SRB-InformationSetupList-r6,
   SRB-InformationSetupList2,
   SRB-InformationSetupList2-r6,
```

```
UL-CounterSynchronisationInfo,
-- Transport Channel IEs:
   CPCH-SetID,
   DL-AddReconfTransChInfo2List,
   DL-AddReconfTransChInfoList,
   DL-AddReconfTransChInfoList-r4,
   DL-AddReconfTransChInfoList-r5,
   DL-CommonTransChInfo,
   DL-CommonTransChInfo-r4,
   DL-DeletedTransChInfoList,
   DL-DeletedTransChInfoList-r5,
   DRAC-StaticInformationList,
   PowerOffsetInfoShort,
   TFC-Subset,
   TFCS-Identity,
   UL-AddReconfTransChInfoList,
   UL-AddReconfTransChInfoList-r6,
   UL-CommonTransChInfo,
   UL-CommonTransChInfo-r4,
   UL-DeletedTransChInfoList,
   UL-DeletedTransChInfoList-r6,
-- Physical Channel IEs :
   Alpha,
   BEACON-PL-Est,
   CCTrCH-PowerControlInfo.
   CCTrCH-PowerControlInfo-r4,
   CCTrCH-PowerControlInfo-r5,
   CCTrCH-PowerControlInfo-r7,
   ConstantValue,
   ConstantValueTdd,
   CPCH-SetInfo,
   DHS-Sync,
   DL-CommonInformation,
   DL-CommonInformation-r4,
   DL-CommonInformation-r5,
   DL-CommonInformation-r6,
   DL-CommonInformation-r7,
   DL-CommonInformationPost,
   DL-HSPDSCH-Information.
   DL-HSPDSCH-Information-r6,
   DL-HSPDSCH-Information-r7,
   DL-InformationPerRL-List,
   DL-InformationPerRL-List-r4,
   DL-InformationPerRL-List-r5
   DL-InformationPerRL-List-r5bis,
   DL-InformationPerRL-List-r6,
   DL-InformationPerRL-List-r7,
   DL-InformationPerRL-ListPostFDD,
   DL-InformationPerRL-PostTDD,
   DL-InformationPerRL-PostTDD-LCR-r4,
   DL-PDSCH-Information,
   DL-TPC-PowerOffsetPerRL-List,
   DPC-Mode,
   DPCH-CompressedModeStatusInfo,
   DynamicPersistenceLevel,
   E-DCH-ReconfigurationInfo,
   EXT-UL-TimingAdvance,
   FrequencyInfo,
   FrequencyInfoFDD,
   FrequencyInfoTDD,
   HARQ-Preamble-Mode,
   HS-SICH-Power-Control-Info-TDD384,
   HS-SICH-Power-Control-Info-TDD768,
   MaxAllowedUL-TX-Power,
   OpenLoopPowerControl-IPDL-TDD-r4,
   PDSCH-CapacityAllocationInfo,
   PDSCH-CapacityAllocationInfo-r4,
   PDSCH-CapacityAllocationInfo-r7,
   PDSCH-Identity,
   PrimaryCPICH-Info,
   PrimaryCCPCH-TX-Power,
   PUSCH-CapacityAllocationInfo,
   PUSCH-CapacityAllocationInfo-r4,
   PUSCH-CapacityAllocationInfo-r7,
   PUSCH-Identity,
   PUSCH-SysInfoList-HCR-r5,
   PDSCH-SysInfoList-HCR-r5,
   RL-AdditionInformationList,
```

```
RL-AdditionInformationList-r6,
   RL-RemovalInformationList,
   Serving-HSDSCH-CellInformation,
   SpecialBurstScheduling,
   SSDT-Information.
   SSDT-Information-r4,
   TFC-ControlDuration,
   SSDT-UL,
   TimingMaintainedSynchInd,
   TimeslotList,
   TimeslotList-r4,
   TX-DiversityMode,
   UL-ChannelRequirement,
   UL-ChannelRequirement-r4,
   UL-ChannelRequirement-r5,
   UL-ChannelRequirementWithCPCH-SetID,
   UL-ChannelRequirementWithCPCH-SetID-r4,
   UL-ChannelRequirementWithCPCH-SetID-r5,
   UL-DPCH-Info,
   UL-DPCH-Info-r4,
   UL-DPCH-Info-r5,
   UL-DPCH-Info-r6,
   UL-DPCH-Info-r7,
   UL-DPCH-InfoPostFDD,
   UL-DPCH-InfoPostTDD,
   UL-DPCH-InfoPostTDD-LCR-r4,
   UL-EDCH-Information-r6,
   UL-SynchronisationParameters-r4,
   UL-TimingAdvance,
   UL-TimingAdvanceControl,
   UL-TimingAdvanceControl-r4,
   UL-TimingAdvanceControl-r7,
   UL-TimingAdvance-VHCR,
-- Measurement IEs :
   AdditionalMeasurementID-List,
   DeltaRSCP,
   Frequency-Band,
   EventResults,
   Inter-FreqEventCriteriaList-v590ext,
   Intra-FreqEventCriteriaList-v590ext,
   IntraFreqReportingCriteria-1b-r5,
   IntraFreqEvent-1d-r5,
   IntraFreqCellID,
   InterFreqEventResults-LCR-r4-ext,
   InterRATCellInfoIndication,
   InterRAT-TargetCellDescription,
   MeasuredResults,
   MeasuredResults-v390ext,
   MeasuredResults-v590ext,
   MeasuredResultsList,
   MeasuredResultsList-LCR-r4-ext,
   MeasuredResultsOnRACH,
   MeasuredResultsOnRACHinterFreq,
   MeasurementCommand,
   MeasurementCommand-r4,
   MeasurementCommand-r6,
   MeasurementIdentity,
   MeasurementReportingMode,
   PrimaryCCPCH-RSCP,
   SFN-Offset-Validity
   TimeslotListWithISCP,
   TrafficVolumeMeasuredResultsList,
   UE-Positioning-GPS-AssistanceData,
   UE-Positioning-Measurement-v390ext,
   UE-Positioning-Measurement-v7xyext,
   UE-Positioning-OTDOA-AssistanceData,
   UE-Positioning-OTDOA-AssistanceData-r4ext,
   UE-Positioning-OTDOA-AssistanceData-UEB,
   VelocityEstimate,
   UE-InternalMeasuredResults-r7,
-- Other IEs :
   BCCH-ModificationInfo,
   CDMA2000-MessageList,
   GSM-TargetCellInfoList,
   GERANIu-MessageList,
   GERAN-SystemInformation,
   GSM-MessageList,
   InterRAT-ChangeFailureCause,
   InterRAT-HO-FailureCause,
```

```
InterRAT-UE-RadioAccessCapabilityList,
    InterRAT-UE-RadioAccessCapability-v590ext,
    InterRAT-UE-SecurityCapList,
    IntraDomainNasNodeSelector,
    ProtocolErrorMoreInformation,
    Rplmn-Information,
    Rplmn-Information-r4,
    SegCount,
    SegmentIndex,
    SFN-Prime,
    SIB-Data-fixed,
    SIB-Data-variable,
    SIB-Type,
-- MBMS IEs:
   MBMS-CellGroupIdentity-r6,
    MBMS-CommonRBInformationList-r6,
    MBMS-CurrentCell-SCCPCHList-r6,
    MBMS-JoinedInformation-r6,
    MBMS-MICHConfigurationInfo-r6,
    MBMS-MICHConfigurationInfo-r7,
    MBMS-ModifedServiceList-r6,
    MBMS-MSCH-ConfigurationInfo-r6,
    MBMS-NeighbouringCellSCCPCHList-r6,
    MBMS-NumberOfNeighbourCells-r6,
   MBMS-PhyChInformationList-r6,
    MBMS-PL-ServiceRestrictInfo-r6,
    MBMS-PreferredFreqRequest-r6,
    MBMS-PreferredFrequencyList-r6,
    MBMS-PTMActivationTime-r6.
    MBMS-ServiceAccessInfoList-r6,
    MBMS-ServiceIdentity-r6,
    MBMS-ServiceSchedulingInfoList-r6,
    MBMS-SIBType5-SCCPCHList-r6,
    MBMS-TimersAndCounters-r6,
    MBMS-TranspChInfoForEachCCTrCh-r6,
    MBMS-TranspChInfoForEachTrCh-r6,
    MBMS-UnmodifiedServiceList-r6
FROM InformationElements
    maxSIBperMsg,
   maxURNTI-Group
FROM Constant-definitions;
__ ***************************
-- ACTIVE SET UPDATE (FDD only)
__ ******************************
ActiveSetUpdate ::= CHOICE {
                                   SEQUENCE {
   r3
                                   ActiveSetUpdate-r3-IEs,
        activeSetUpdate-r3
                                       SEQUENCE {
        laterNonCriticalExtensions
            -- Container for additional R99 extensions
           activeSetUpdate-r3-add-ext BIT STRING
                                                           OPTIONAL.
           v4b0NonCriticalExtensions
                                           SEQUENCE {
               activeSetUpdate-v4b0ext
                                         ActiveSetUpdate-v4b0ext-IEs,
               v590NonCriticalExtensions
                                             SEQUENCE {
                   activeSetUpdate-v590ext
                                                  ActiveSetUpdate-v590ext-IEs,
                   v690NonCriticalExtensions
                                                  SEQUENCE {
                       activeSetUpdate-v690ext
                                                      ActiveSetUpdate-v690ext-IEs,
                       nonCriticalExtensions
                                                      SEQUENCE {} OPTIONAL
                       OPTIONAL
                   OPTIONAL
           } OPTIONAL
        } OPTIONAL
                                   SEQUENCE {
    later-than-r3
       {\tt rrc-TransactionIdentifier}
                                       RRC-TransactionIdentifier,
                                       CHOICE {
        criticalExtensions
                                       SEQUENCE {
               activeSetUpdate-r6
                                             ActiveSetUpdate-r6-IEs,
               activeSetUpdate-r6-add-ext
                                               BIT STRING
                                                           OPTIONAL,
               nonCriticalExtensions
                                               SEQUENCE {}
                                                               OPTIONAL
           criticalExtensions
                                           SEQUENCE {}
        }
    }
}
```

```
ActiveSetUpdate-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier RRC-TransactionIdentifier,
         -- dummy and dummy2 are not used in this version of the specification, they should
         -- not be sent and if received they should be ignored.
                                       IntegrityProtectionModeInfo OPTIONAL,
        dummy
                                       CipheringModeInfo
        dummy2
                                                                               OPTIONAL,
        activationTime
                                           ActivationTime
                                                                                    OPTIONAL,
        newU-RNTI
                                            U-RNTI
                                                                                    OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                           CN-InformationInfo
                                                                                    OPTIONAL.
    -- Radio bearer TEs
        -- dummy3 is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
                               DL-CounterSynchronisationInfo
        dummy3
        maxAllowedUL-TX-Power
rl-AdditionInformationList
rl-RemovalInformationList
tx-DiversityMode

MaxAllowedUL-TX-Power
RL-AdditionInformationList
RL-RemovalInformationList
TX-DiversityMode

TX-DiversityMode
    -- Physical channel IEs
                                                                                   OPTIONAL,
                                                                                   OPTIONAL,
                                                                                   OPTIONAL.
         -- \operatorname{dummy4} is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
                                           SSDT-Information
}
ActiveSetUpdate-v4b0ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
         -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
        dummy
                                                SSDT-UL
                                                                                        OPTIONAL.
         -- The order of the RLs in IE cell-lq-Perku-List IS CINC II
-- in IE RL-AdditionInformationList included in this message
CellIdentity-PerRL-List OPTIONAL
        cell-id-PerRL-List
}
ActiveSetUpdate-v590ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        dpc-Mode
                                               DPC-Mode,
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                                           OPTIONAL
}
ActiveSetUpdate-v690ext-IEs ::= SEQUENCE {
    -- Core network IEs
                                             PLMN-Identity
       primary-plmn-Identity
                                                                                      OPTIONAL
}
ActiveSetUpdate-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
        activationTime
                                                ActivationTime
                                                                                        OPTIONAL,
        newU-RNTI
                                                U-RNTI
                                                                                        OPTIONAL,
        newH-RNTI
                                                H-RNTT
                                                                                        OPTIONAL,
        newPrimary-E-RNTI
                                               E-RNTI
                                                                                        OPTIONAL,
        newSecondary-E-RNTI
                                                E-RNTI
                                                                                        OPTIONAL.
    -- Core network IEs
                                              CN-InformationInfo-r6
        cn-InformationInfo
                                                                                        OPTIONAL,
        maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL, rl-AdditionInformationList RL-AdditionInformationList-r6 OPTIONAL, rl-RemovalInformationList RL-RemovalInformationList OPTIONAL, tx-DiversityMode TX-DiversityMode OPTIONAL, dpc-Mode
    -- Physical channel IEs
        dpc-ModeDPC-Modeserving-HSDSCH-CellInformationServing-HSDSCH-CellInformatione-dch-ReconfigurationInfoE-DCH-ReconfigurationInfo
                                                                                       OPTIONAL,
                                                                                        OPTIONAL
}
__ ***************
-- ACTIVE SET UPDATE COMPLETE (FDD only)
__ *****************
ActiveSetUpdateComplete ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier RRC-TransactionIdentifier,
         -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
                                       IntegrityProtActivationInfo
                                                                             OPTIONAL,
         dummy
```

```
-- Radio bearer IEs
      -- dummy2 and dummy3 are not used in this version of the specification, they should
       -- not be sent and if received they should be ignored.
                         RB-ActivationTimeInfoList
                                                            OPTIONAL.
      dummy3
                              UL-CounterSynchronisationInfo
                                                            OPTIONAL,
      laterNonCriticalExtensions SEQUENCE {
          -- Container for additional R99 extensions
          activeSetUpdateComplete-r3-add-ext BIT STRING
                                                         OPTIONAL,
                                  SEQUENCE {} OPTIONAL
          nonCriticalExtensions
         OPTIONAL
}
__ ***************
-- ACTIVE SET UPDATE FAILURE (FDD only)
__ ***************
ActiveSetUpdateFailure ::= SEQUENCE {
   -- User equipment IEs
                                RRC-TransactionIdentifier,
      rrc-TransactionIdentifier
      failureCause
laterNonCriticalExtensions
FailureCauseWithProtErr,
SEQUENCE {
         -- Container for additional R99 extensions
         activeSetUpdateFailure-r3-add-ext BIT STRING
                                                         OPTIONAL.
         OPTIONAL
}
__ ****************
-- Assistance Data Delivery
__ ***************
AssistanceDataDelivery ::= CHOICE {
                              SEQUENCE {
                             AssistanceDataDelivery-r3-IEs, SEQUENCE {
      assistanceDataDelivery-r3
      v3a0NonCriticalExtensions
          {\tt assistanceDataDelivery-v3a0ext} \quad {\tt AssistanceDataDelivery-v3a0ext},
                                    SEQUENCE {
          laterNonCriticalExtensions
             -- Container for additional R99 extensions
             assistanceDataDelivery-r3-add-ext BIT STRING OPTIONAL,
             v4b0NonCriticalExtensions SEQUENCE {
                assistanceDataDelivery-v4b0ext
                                           AssistanceDataDelivery-v4b0ext-IEs,
                nonCriticalExtensions
                                           SEQUENCE {}
                                                                       OPTIONAL
               OPTIONAL
             OPTIONAL
      } OPTIONAL
                              SEQUENCE {
   later-than-r3
                             RRC-TransactionIdentifier,
      rrc-TransactionIdentifier
                                 SEQUENCE {}
      criticalExtensions
   }
}
AssistanceDataDelivery-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
   rrc-TransactionIdentifier
                             RRC-TransactionIdentifier,
   -- Measurement Information Elements
   ue-positioning-GPS-AssistanceData
                                        UE-Positioning-GPS-AssistanceData
   OPTIONAL,
   ue-positioning-OTDOA-AssistanceData-UEB UE-Positioning-OTDOA-AssistanceData-UEB
   OPTIONAL
}
AssistanceDataDelivery-v3a0ext ::= SEQUENCE {
                                 SFN-Offset-Validity OPTIONAL
   sfn-Offset-Validity
AssistanceDataDelivery-v4b0ext-IEs ::= SEQUENCE {
  __ ********************************
-- CELL CHANGE ORDER FROM UTRAN
```

```
__ *****************
CellChangeOrderFromUTRAN ::= CHOICE {
                                 SEQUENCE {
       cellChangeOrderFromUTRAN-IES CellChangeOrderFromUTRAN-r3-IEs, laterNonCriticalExtensions SEQUENCE {
                                    SEQUENCE {
           -- Container for additional R99 extensions
           cellChangeOrderFromUTRAN-r3-add-ext BIT STRING
           v590NonCriticalExtensions
                                           SEQUENCE {
              cellChangeOrderFromUTRAN-v590ext CellChangeOrderFromUTRAN-v590ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
           } OPTIONAL
       ) OPTIONAL
   later-than-r3
                                SEQUENCE {
       }
CellChangeOrderFromUTRAN-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier
                                  RRC-TransactionIdentifier,
       -- dummy is not used in this version of the specification, it should
       -- not be sent and if received it should be ignored.
                                    IntegrityProtectionModeInfo
                                                                      OPTIONAL,
       activationTime
                                     ActivationTime
       -- the IE rab-InformationList is not used in this version of the specification, it should
       -- not be sent and if received it should be ignored. The IE may be used in a later
       -- version of the protocol and hence it is not changed into a dummy
                                   RAB-InformationList
       rab-InformationList
       {\tt interRAT-TargetCellDescription} \quad {\tt InterRAT-TargetCellDescription}
}
CellChangeOrderFromUTRAN-v590ext-IEs ::= SEQUENCE {
       geran-SystemInfoType CHOICE
                                            GERAN-SystemInformation,
          sI
                                            GERAN-SystemInformation
          pSI
             OPTIONAL
}
__ ****************
-- CELL CHANGE ORDER FROM UTRAN FAILURE
__ *****************
CellChangeOrderFromUTRANFailure ::= CHOICE {
       cellChangeOrderFromUTRANFailure-r3
       CellChangeOrderFromUTRANFailure-r3-IEs, laterNonCriticalExtensions SEQUENCE {
           -- Container for additional R99 extensions
           cellChangeOrderFromUTRANFailure-r3-add-ext BIT STRING OPTIONAL,
                                       SEQUENCE {} OPTIONAL
           nonCriticalExtensions
          OPTIONAL
   -- dummy is not used in this version of the specification and it
   -- should be ignored.
                                SEQUENCE {
   dummy
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
       criticalExtensions
                                    SEQUENCE { }
}
CellChangeOrderFromUTRANFailure-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
                                   RRC-TransactionIdentifier,
       rrc-TransactionIdentifier
       -- dummy is not used in this version of the specification, it should
       -- not be sent and if received it should be ignored.
       dummy IntegrityProtectionModeInfo interRAT-ChangeFailureCause InterRAT-ChangeFailureCause
                                                                   OPTIONAL,
}
__ ****************
-- CELL UPDATE
```

```
__ *******************************
CellUpdate ::= SEQUENCE {
         -- User equipment IEs
                                                                            U-RNTI,
               u-RNTI
               startList
                                           STARTList,
               am-RLC-ErrorIndicationRb2-3or4
                                                                                    BOOLEAN,
                am-RLC-ErrorIndicationRb5orAbove BOOLEAN,
                cellUpdateCause
                                                                              CellUpdateCause,
                -- TABULAR: RRC transaction identifier is nested in FailureCauseWithProtErrTrId
               rb-timer-indicator
                                                                              FailureCauseWithProtErrTrId OPTIONAL,
                                                                              Rb-timer-indicator,
        -- Measurement IEs
               measuredResultsOnRACH
               measuredResultsOnRACH
laterNonCriticalExtensions
MeasuredResultsOnRACH
sequence {
                                                                                                                                                     OPTIONAL,
                        -- Container for additional R99 extensions
                       cellUpdate-r3-add-ext BIT STRING OPTIONAL, v590NonCriticalExtensions SEQUENCE {
                                cellUpdate-v590ext CellUpdate-v590ext,
                                       Cellupdate-v690ext Cellupdate-v690ext-IEs,
v7xyNonCriticalExtensions cellupdate-v7xyext Cellupdate-v7xyext-
nonCriticalExtensions SEQUENCE {} OPTIONAL
                                v690NonCriticalExtensions SEQUENCE {
                                                                                                    CellUpdate-v7xyext-IEs,
                                                                                                             SEQUENCE {} OPTIONAL
                                               OPTIONAL
                                        OPTIONAL
                       OPTIONAL
}
CellUpdate-v590ext ::= SEQUENCE {
        establishmentCause
                                                                      EstablishmentCause OPTIONAL
CellUpdate-v690ext-IEs ::=
                                                                     SEQUENCE {
       -- User equipment IEs
               User equipment IEs

cellUpdateCause-ext

trafficVolumeIndicator
                                                                              CellUpdateCause-ext
                                                                                                                                                     OPTIONAL,
                                                                              ENUMERATED { true }
               trafficVolumeIndicator
                                                                                                                                                       OPTIONAL,
        -- Measurement IEs
               measuredResultsOnRACHinterFreq MeasuredResultsOnRACHinterFreq OPTIONAL reconfigurationStatusIndicator ENUMERATED { true }
}
CellUpdate-v7xyext-IEs ::= SEQUENCE {
        -- Call Type IE
                                                                                ENUMERATED { speech, video, other, spare } OPTIONAL
              csCallType
}
__ ***************
-- CELL UPDATE CONFIRM
__ ***************
CellUpdateConfirm ::= CHOICE {
               v3a0NonCriticalExtensions SEOTIENCE (
cellUpdateConfirm-r3-IEs,
SEOTIENCE (
SE
                                                                      SEQUENCE {
                       -- Container for additional R99 extensions
                               cellUpdateConfirm-v690ext CellUpdateConfirm-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                                                                    OPTIONAL
                                                               OPTIONAL
                                                        OPTIONAL
                                        OPTIONAL
                                OPTIONAL
```

},

```
SEQUENCE {
    later-than-r3
                                    RRC-TransactionIdentifier,
       rrc-TransactionIdentifier
        criticalExtensions
                                        CHOICE {
                                       SEQUENCE {
                                             CellUpdateConfirm-r4-IEs,
                cellUpdateConfirm-r4
                                                SEQUENCE {
                v4d0NonCriticalExtensions
                    -- Container for adding non critical extensions after freezing REL-5
                    cellUpdateConfirm-r4-add-ext BIT STRING
                                                                    OPTIONAL,
                        cellUpdateConfirm-v590ext v5d0NonCriticals:
                    v590NonCriticalExtenstions
                        v5d0NonCriticalExtenstions

CellUpdateConfirm-v590ext-IEs,

SEQUENCE [
                            cellUpdateConfirm-v5d0ext
                                                            CellUpdateConfirm-v5d0ext-IEs,
                            v690NonCriticalExtensions
                                                             SEQUENCE {
                                cellUpdateConfirm-v690ext
                                                                CellUpdateConfirm-v690ext-IEs,
                                                                 SEQUENCE {}
                                nonCriticalExtensions
                                                                               OPTIONAL
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
                    OPTIONAL
            criticalExtensions
                                            CHOICE {
                                                SEQUENCE {
                r5
                    cellUpdateConfirm-r5
                                                    CellUpdateConfirm-r5-IEs,
                    -- Container for adding non critical extensions after freezing REL-6
                    cellUpdateConfirm-r5-add-ext BIT STRING v5d0NonCriticalExtenstions SEQUENCE {
                                                                 OPTIONAL,
                                                   CellUpdateConfirm-v5d0ext-IEs,
                        cellUpdateConfirm-v5d0ext
                        v690NonCriticalExtensions
                                                        SEQUENCE {
                            {\tt cellUpdateConfirm-v690ext} \qquad {\tt CellUpdateConfirm-v690ext-IEs}\,,
                            nonCriticalExtensions
                                                            SEQUENCE {}
                                                                            OPTIONAL
                            OPTIONAL
                    }
                        OPTIONAL
                },
                criticalExtensions
                                                CHOICE {
                                                   SEQUENCE {
                        cellUpdateConfirm-r6
                                                        CellUpdateConfirm-r6-IEs,
                        -- Container for adding non critical extensions after freezing REL-7
                                                                      OPTIONAL,
OPTIONAL
                        cellUpdateConfirm-r6-add-ext BIT STRING
                        nonCriticalExtensions
                                                        SEQUENCE {}
                    criticalExtensions
                                                    CHOICE {
                                                    SEQUENCE {
                        r7
                                                            CellUpdateConfirm-r7-IEs,
                            cellUpdateConfirm-r7
                            -- Container for adding non critical extensions after freezing REL-8
                            cellUpdateConfirm-r7-add-ext BIT STRING OPTIONAL,
                            nonCriticalExtensions
                                                            SEQUENCE {}
                                                                            OPTIONAL
                        criticalExtensions
                                                       SEQUENCE {}
                    }
               }
          }
       }
    }
}
CellUpdateConfirm-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
       rrc-TransactionIdentifier
                                        RRC-TransactionIdentifier,
        integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                             OPTIONAL.
                                        CipheringModeInfo
        cipheringModeInfo
                                                                             OPTIONAL.
        activationTime
                                        ActivationTime
                                                                             OPTIONAL,
        new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL,
       new-C-RNTI
                                        C-RNTI
                                                                             OPTIONAL,
                                      RRC-StateIndicator,
UTRAN-DRX-CycleLengthCoefficient
        rrc-StateIndicator
        utran-DRX-CycleLengthCoeff
                                                                           OPTIONAL,
        rlc-Re-establishIndicatorRb2-3or4
                                              BOOLEAN,
        rlc-Re-establishIndicatorRb5orAbove
                                                BOOLEAN,
    -- CN information elements
        cn-InformationInfo
                                        CN-InformationInfo
                                                                             OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                        URA-Identity
                                                                             OPTIONAL,
    -- Radio bearer IEs
       rb-InformationReleaseList
                                      RB-InformationReleaseList
                                                                             OPTIONAL.
       rb-InformationAeconfigList RB-InformationAffectedList RB-InformationAffectedList
                                                                            OPTIONAL,
                                                                            OPTIONAL,
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                            OPTIONAL,
    -- Transport channel IEs
```

```
ul-CommonTransChInfo
UL-CommonTransChInfo
ul-deletedTransChInfoList
UL-DeletedTransChInfoList
UL-AddReconfTransChInfoList
UL-AddReconfTransChInfoList
CHOICE {
fdd
SECULEMOR (
                                                                                     OPTIONAL,
                                                                                     OPTIONAL,
                                                                                   OPTIONAL,
                  -- dummy and dummy2 are not used in this version of the specification, they should
                  -- not be sent and if received they should be ignored.
                  dummy
                                                      CPCH-Set.ID
                                                                                     OPTIONAL.
                  dummy2
                                                      DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                                 NULL
        dl-CommonTransChInfo
dl-DeletedTransChInfoList
dl-AddReconfTransChInfoList
DL-AddReconfTransChInfoList
                                                                                    OPTIONAL.
                                            _ DeleteurransChInfoList
DL-AddReconfTransChInfoList
                                                                                     OPTIONAL,
                                                                                     OPTIONAL,
    -- Physical channel IEs
        frequencyInfo FrequencyInfo
maxAllowedUL-TX-Power
ul-ChannelRequirement UL-ChannelRequirement
modeSpecificPhysChInfo CHOICE {
fdd
                                                                                     OPTIONAL.
                                                                                     OPTIONAL.
                  -- dummy is not used in this version of specification, it should
                  -- not be sent and if received it should be ignored.
                  dummy
                                                     DL-PDSCH-Information
             },
             tdd
                                                 NULL
        dl-CommonInformation DL-CommonInformation
dl-InformationPerRL-List DL-InformationPerRL-List
                                                                                    OPTIONAL
}
CellUpdateConfirm-v3a0ext ::= SEQUENCE {
    -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received the UE behaviour
    -- is unspecified
    new-DSCH-RNTI
                                  DSCH-RNTI
                                                                                 OPTIONAL.
}
CellUpdateConfirm-v4b0ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
         -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
         dummy
                                                 SSDT-UL
                                                                                         OPTIONAL.
         -- The order of the RLs in IE cell-id-PerRL-List is the same as
         -- in IE DL-InformationPerRL-List included in this message
                                                 CellIdentity-PerRL-List
         cell-id-PerRL-List
                                                                                        OPTIONAL
}
CellUpdateConfirm-v590ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                                   OPTIONAL
}
CellUpdateConfirm-v5d0ext-IEs ::= SEQUENCE {
    --Radio Bearer IEs
        pdcp-ROHC-TargetMode PDCP-ROHC-TargetMode
                                                                                    OPTIONAL
CellUpdateConfirm-r4-IEs ::= SEQUENCE {
      - User equipment IEs
         integrityProtectionModeInfo
                                          IntegrityProtectionModeInfo
                                                                                     OPTIONAL,
                                           CipheringModeInfo
         cipheringModeInfo
                                                                                     OPTIONAL.
         activationTime
                                            ActivationTime
                                                                                     OPTIONAL,
         new-U-RNTI
                                            U-RNTI
                                                                                     OPTIONAL,
         new-C-RNTI
                                            C-RNTI
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
        new-DSCH-RNTIDSCH-RNTIOPTIONAL,rrc-StateIndicatorRRC-StateIndicator,OPTIONAL,utran-DRX-CycleLengthCoeffUTRAN-DRX-CycleLengthCoefficientOPTIONAL,
         rlc-Re-establishIndicatorRb2-3or4
                                                     BOOLEAN.
         rlc-Re-establishIndicatorRb5orAbove BOOLEAN,
    -- CN information elements
        cn-InformationInfo
                                            CN-InformationInfo
                                                                                     OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                          URA-Identity
                                                                                     OPTIONAL,
    -- Radio bearer IEs
        rb-InformationReleaseList rb-InformationReconfigList rb-InformationAffectedList RB-InformationAffectedList
                                                                                    OPTIONAL,
                                            RB-InformationReconfigList-r4
                                                                                     OPTIONAL,
                                                                                     OPTIONAL.
```

```
dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                                  OPTIONAL.
    -- Transport channel IEs
        ul-CommonTransChInfo
                                          UL-CommonTransChInfo-r4
                                                                                 OPTIONAL,
        ul-deletedTransChInfoList
ul-AddReconfTransChInfoList
UL-AddReconfTransChInfo
CHOICE {
                                          UL-DeletedTransChInfoList
                                                                                  OPTIONAL,
                                           UL-AddReconfTransChInfoList
                                                                                  OPTIONAL,
                                               SEQUENCE {
                 -- dummy and dummy2 are not used in this version of the specification, they should
                 -- not be sent and if received they should be ignored.
                 dummy
                                                    CPCH-SetID
                                                                                  OPTIONAL,
                 dummy2
                                                    DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                               NULL
        dl-CommonTransChInfo DL-CommonTransChInfo-r4
dl-DeletedTransChInfoList DL-DeletedTransChInfoList
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r4
                                                                                  OPTIONAL,
                                                                                  OPTIONAL,
                                                                                 OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                          FrequencyInfo
                                                                                 OPTIONAL.
        maxAllowedUL-TX-Power
                                          MaxAllowedUL-TX-Power
                                                                                  OPTIONAL.
        ul-ChannelRequirement
                                           UL-ChannelRequirement-r4
                                                                                  OPTIONAL,
        modeSpecificPhysChInfo
                                          CHOICE {
                                               SEQUENCE {
             fdd
                 -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                                                   DL-PDSCH-Information
                 dummy
             },
             tdd
                                               NULL
        dl-CommonInformation
                                          DL-CommonInformation-r4
                                                                                  OPTIONAL.
        dl-InformationPerRL-List
                                          DL-InformationPerRL-List-r4
                                                                                 OPTIONAL
CellUpdateConfirm-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
        \verb|integrityProtectionModeInfo|\\
                                          IntegrityProtectionModeInfo
                                                                                  OPTIONAL,
        cipheringModeInfo
                                           CipheringModeInfo
                                                                                  OPTIONAL.
                                           ActivationTime
        activationTime
                                                                                  OPTIONAL.
        new-U-RNTI
                                           U-RNTI
                                                                                  OPTIONAL,
        new-C-RNTI
                                          C-RNTI
                                                                                  OPTIONAL,
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
        -- the UE behaviour is unspecified
                                          DSCH-RNTT
        new-DSCH-RNTT
                                                                                  OPTIONAL.
        new-H-RNTI
                                          H-RNTI
                                                                                  OPTIONAL,
        rrc-StateIndicator
                                          RRC-StateIndicator,
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
        rlc-Re-establishIndicatorRb2-3or4
                                                   BOOLEAN.
        rlc-Re-establishIndicatorRb5orAbove BOOLEAN,
    -- CN information elements
        cn-InformationInfo
                                           CN-InformationInfo
                                                                                  OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                          URA-Identity
                                                                                  OPTIONAL.
    -- Radio bearer IEs
        rb-InformationReleaseList RB-InformationReleaseList rb-InformationReconfigList RB-InformationReconfigList-r5 rb-InformationAffectedList RB-InformationAffectedList-r5
                                                                                  OPTIONAL.
                                                                                  OPTIONAL,
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                                 OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo
                                          UL-CommonTransChInfo-r4
                                                                                  OPTIONAL.
        ul-deletedTransChInfoList
                                          UL-DeletedTransChInfoList
        ul-AddReconfTransChInfoList
modeSpecificTransChInfo
fdd
                                                                                  OPTIONAL.
                                          UL-AddReconfTransChInfoList
                                                                                 OPTIONAL.
                                          CHOICE {
                                              SEQUENCE {
                 -- dummy and dummy2 are not used in this version of the specification, they should
                 -- not be sent and if received they should be ignored.
                 dummy
                                                   CPCH-Set ID
                                                                                  OPTIONAL.
                 dummy2
                                                   DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                               NULL
        dl-CommonTransChInfo
                                           DL-CommonTransChInfo-r4
                                                                                  OPTIONAL.
        dl-DeletedTransChInfoList
                                           DL-DeletedTransChInfoList-r5
                                                                                  OPTIONAL,
        dl-AddReconfTransChInfoList
                                          DL-AddReconfTransChInfoList-r5
                                                                                  OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                          FrequencyInfo
                                                                                 OPTIONAL,
        maxAllowedUL-TX-Power
                                          MaxAllowedUL-TX-Power
                                                                                 OPTIONAL,
                                           UL-ChannelRequirement-r5
        ul-ChannelRequirement
                                                                                  OPTIONAL,
        modeSpecificPhysChInfo
                                          CHOICE {
```

```
fdd
                                             SEQUENCE {
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                                                 DL-PDSCH-Information
                                                                              OPTIONAL
            },
            tdd
                                             NULL
        dl-HSPDSCH-Information DL-HSPDSCH-Information dl-CommonInformation DL-CommonInformation-r5
                                                                             OPTIONAL.
        dl-InformationPerRL-List
                                        DL-InformationPerRL-List-r5
                                                                             OPTIONAL
}
CellUpdateConfirm-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                         IntegrityProtectionModeInfo
                                                                              OPTIONAL,
        cipheringModeInfo
                                         CipheringModeInfo
                                                                              OPTIONAL,
        activationTime
                                         ActivationTime
                                                                              OPTIONAL,
        new-U-RNTI
                                         U-RNTI
                                                                              OPTIONAL,
        new-C-RNTI
                                         C-RNTI
                                                                              OPTIONAL.
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
        new-DSCH-RNTI
                                        DSCH-RNTI
                                                                              OPTIONAL,
        new-H-RNTI
                                        H-RNTI
                                                                              OPTIONAL,
        newPrimary-E-RNTI
                                        E-RNTT
                                                                              OPTIONAL.
        newSecondary-E-RNTI
                                        E-RNTI
                                                                              OPTIONAL,
        rrc-StateIndicator
                                        RRC-StateIndicator,
        rrc-StateIndicator RRC-StateIndicator, utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
        rlc-Re-establishIndicatorRb2-3or4
                                                 BOOLEAN.
        rlc-Re-establishIndicatorRb5orAbove
                                                 BOOLEAN.
    -- CN information elements
        cn-InformationInfo
                                        CN-InformationInfo-r6
                                                                              OPTIONAL.
    -- UTRAN mobility IEs
        ura-Identity
                                        URA-Identity
                                                                              OPTIONAL,
    -- Radio bearer IEs
        rb-InformationReleaseList
rb-InformationReconfigList
rb-InformationAffectedList
RB-InformationAffectedList
RB-InformationAffectedList-r6
                                                                              OPTIONAL,
                                                                              OPTIONAL,
                                                                             OPTIONAL.
        {\tt dl-CounterSynchronisationInfo-DL-CounterSynchronisationInfo-r5} \qquad {\tt OPTIONAL}\,,
        pdcp-ROHC-TargetMode
                                        PDCP-ROHC-TargetMode
                                                                              OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo
                                        UL-CommonTransChInfo-r4
                                                                              OPTIONAL.
        ul-deletedTransChInfoList
                                        UL-DeletedTransChInfoList-r6
                                                                              OPTIONAL,
        ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList-r6
                                                                             OPTIONAL,
        dl-CommonTransChInfo
                                        DL-CommonTransChInfo-r4
                                                                              OPTIONAL,
        dl-DeletedTransChInfoList
                                        DL-DeletedTransChInfoList-r5
                                                                             OPTIONAL,
        dl-AddReconfTransChInfoList
                                        DL-AddReconfTransChInfoList-r5
                                                                             OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                        FrequencyInfo
                                                                              OPTIONAL,
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                                                              OPTIONAL,
        ul-DPCH-Info
                                        UL-DPCH-Info-r6
                                                                              OPTIONAL,
        ul-EDCH-Information
                                        UL-EDCH-Information-r6
                                                                              OPTIONAL,
        dl-HSPDSCH-Information
                                         DL-HSPDSCH-Information-r6
                                                                              OPTIONAL,
        dl-CommonInformation
                                        DL-CommonInformation-r6
                                                                              OPTIONAL.
        dl-InformationPerRL-List
                                        DL-InformationPerRL-List-r6
                                                                              OPTIONAL.
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo
                                      MBMS-PL-ServiceRestrictInfo-r6
                                                                              OPTIONAL
}
CellUpdateConfirm-v690ext-IEs ::= SEQUENCE {
    -- Core network IEs
        primary-plmn-Identity
                                        PLMN-Identity
                                                                              OPTIONAL,
    -- Physical channel IEs
        -- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
        -- If included in the r3 or r4 version of the message, the UE should ignore the IE
        harq-Preamble-Mode
                                         HARQ-Preamble-Mode
                                                                              OPTIONAL,
                                        BEACON-PL-Est
        beaconPLEst.
                                                                              OPTIONAL.
        postVerificationPeriod
                                        ENUMERATED { true }
                                                                              OPTIONAL,
        dhs-sync
                                        DHS-Sync
                                                                              OPTIONAL,
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
}
CellUpdateConfirm-r7-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                              OPTIONAL,
        cipheringModeInfo
                                         CipheringModeInfo
                                                                              OPTIONAL,
                                                                              OPTIONAL,
        activationTime
                                         ActivationTime
        new-U-RNTI
                                         II-RNTT
                                                                              OPTIONAL,
```

```
new-C-RNTI
                                                                           C-RNTI
                                                                                                                                                OPTIONAL,
               -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
               -- and if received the UE behaviour is unspecified
                                                                          DSCH-RNTI
               new-DSCH-RNTT
                                                                                                                                                OPTIONAL,
               new-H-RNTI
                                                                           H-RNTI
                                                                                                                                                OPTIONAL,
               newPrimary-E-RNTI
                                                                          E-RNTI
                                                                                                                                                OPTIONAL,
                                                                         E-RNTI
RRC-StateIndicator,
               newSecondary-E-RNTI
                                                                                                                                                OPTIONAL,
               rrc-StateIndicator
               utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                                                                                               OPTIONAL,
               rlc-Re-establishIndicatorRb2-3or4
                                                                                          BOOLEAN,
               rlc-Re-establishIndicatorRb5orAbove
                                                                                          BOOLEAN,
        -- CN information elements
               cn-InformationInfo
                                                                          CN-InformationInfo-r6
                                                                                                                                                OPTIONAL.
       -- UTRAN mobility IEs
              ura-Identity
                                                                          URA-Identity
                                                                                                                                                OPTIONAL,
        -- Radio bearer IEs
              rb-InformationReleaseList RB-InformationReleaseList rb-InformationReconfigList RB-InformationReconfigList-r6 rb-InformationAffectedList RB-InformationAffectedList-r6
                                                                                                                                               OPTIONAL.
                                                                                                                                               OPTIONAL,
              dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                                                                                               OPTIONAL,
               pdcp-ROHC-TargetMode
                                                                          PDCP-ROHC-TargetMode
                                                                                                                                                OPTIONAL,
        -- Transport channel IEs
              ul-CommonTransChInfo
UL-CommonTransChInfo-r4
Ul-deletedTransChInfoList
UL-DeletedTransChInfoList-r6
UL-AddReconfTransChInfoList-r6
UL-AddReconfTransChInfoList-r6
OPTIONAL,
Ul-CommonTransChInfo-r4
OPTIONAL,
OPTIONAL,
              dl-CommonTransChInfo DL-CommonTransChInfo-r4
dl-DeletedTransChInfoList DL-DeletedTransChInfoList-r5
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r5
                                                                                                                                             OPTIONAL,
                                                                                                                                              OPTIONAL,
        -- Physical channel IEs
             ### PrequencyInfo
| MaxAllowedUL-TX-Power | MaxAllowedUL-TX-Power |
| ul-DPCH-Info | UL-DPCH-Info-r7 |
| ul-EDCH-Information | UL-EDCH-Information-r6 |
| dl-HSPDSCH-Information | DL-HSPDSCH-Information-r7 |
| dl-CommonInformation | DL-CommonInformation-r7 |
| dl-InformationPerRL-List | DL-InformationPerRL-List |
| MBMS IES | DL-InformationPerRL-List |
| MBMS IES | DL-InformationPerRL-List |
| MaxAllowedUL-TX-Power |
| UL-DPCH-Info-ration-r6 |
| UL-EDCH-Information-r6 |
| DL-HSPDSCH-Information-r7 |
| DL-InformationPerRL-List                frequencyInfo
                                                                                                                                               OPTIONAL.
                                                                                                                                                OPTIONAL.
                                                                                                                                               OPTIONAL,
                                                                                                                                              OPTIONAL,
                                                                                                                                               OPTIONAL,
                                                                          DL-InformationPerRL-List-r7
                                                                                                                                               OPTIONAL,
        -- MBMS IEs
              mbms-PL-ServiceRestrictInfo
                                                                          MBMS-PL-ServiceRestrictInfo-r6
                                                                                                                                             OPTIONAL
}
__ ***************
-- CELL UPDATE CONFIRM for CCCH
__ *****************
CellUpdateConfirm-CCCH ::= CHOICE {
                                                                    SECUENCE {
               -- User equipment IEs
                     u-RNTI
                                                                           U-RNTI,
               -- The rest of the message is identical to the one sent on DCCH.
                      cellUpdateConfirm-r3 CellUpd
laterNonCriticalExtensions SEQUENCE {
                                                                                       CellUpdateConfirm-r3-IEs,
                                 - Container for additional R99 extensions
                              cellUpdateConfirm-CCCH-r3-add-ext
                                                                                                                 BIT STRING OPTIONAL,
                              cellUpdateConfirm-v690ext CellUpdateConfirm-v690ext-IEs,
                                                            nonCriticalExtensions
                                                                                                                      SEQUENCE {} OPTIONAL
                                                           OPTIONAL
                                                     OPTIONAL
                                             OPTIONAL
                                      OPTIONAL
                      }
                           OPTIONAL
        later-than-r3
                                                                  SEQUENCE {
              u-RNTI
rrc-TransactionIdentifier RRC-Trans
CHOICE {
SEQUE
                                                                           RRC-TransactionIdentifier,
                                                                            SEQUENCE {
                               -- The rest of the message is identical to the one sent on DCCH.
                              {\tt cellUpdateConfirm-r4-IEs},\\
                                                                                                  SEQUENCE {
                              v4d0NonCriticalExtensions
```

```
-- Container for adding non critical extensions after freezing REL-5
                cellUpdateConfirm-CCCH-r4-add-ext BIT STRING OPTIONAL,
                nonCriticalExtensions
                                                   SEQUENCE {}
                         OPTIONAL
                      OPTIONAL
                   OPTIONAL
                OPTIONAL
         criticalExtensions
                                   CHOICE {
                cellUpdateConfirm-r5
cellUpdateConfirm-r5
            r5
                                        CellUpdateConfirm-r5-IEs,
                cellUpdateConfirm-CCCH-r5-add-ext BIT STRING OPTIONAL,
                cellUpdateConfirm-v690ext CellUpdateConfirm-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                      OPTIONAL
                }
                   OPTIONAL
             },
                                      CHOICE {
             criticalExtensions
                   rб
                   nonCriticalExtensions
                                           SEQUENCE {}
                                                         OPTIONAL
                },
                criticalExtensions
                                        CHOICE {
                      cellUpdateConfirm-r7-add-ext BIT STRING OPTIONAL, nonCriticalExtensions SEQUENCE {} OPTIONAL
                   criticalExtensions
                                           SEQUENCE {}
                }
            }
         }
     }
   }
}
  ***************
-- COUNTER CHECK
__ ***************
CounterCheck ::= CHOICE {
      counterCheck-r3
                             SEQUENCE {
      counterCheck-r3
laterNonCriticalExtensions
CounterCheck-r3-IEs,
SEQUENCE {
         -- Container for additional R99 extensions
         counterCheck-r3-add-ext     BIT STRING OPTIONAL,
nonCriticalExtensions     SEQUENCE {} OPTIONAL
        OPTIONAL
   later-than-r3
                            SEQUENCE {
                           RRC-TransactionIdentifier,
      rrc-TransactionIdentifier
      criticalExtensions
                               SEQUENCE {}
}
CounterCheck-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
      rrc-TransactionIdentifier
                             RRC-TransactionIdentifier.
   -- Radio bearer IEs
      rb-COUNT-C-MSB-InformationList RB-COUNT-C-MSB-InformationList
}
__ ***************
-- COUNTER CHECK RESPONSE
```

```
__ ***************
CounterCheckResponse ::= SEQUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier
                                   RRC-TransactionIdentifier,
   -- Radio bearer IEs
       rb-COUNT-C-InformationList RB-COUNT-C-InformationList laterNonCriticalExtensions SEQUENCE {
                                                                 OPTIONAL,
           -- Container for additional R99 extensions
           nonCriticalExtensions
       } OPTIONAL
}
__ ***************
-- DOWNLINK DIRECT TRANSFER
__ ****************************
DownlinkDirectTransfer ::= CHOICE {
       SEQUENCE {

downlinkDirectTransfer-r3 | DownlinkDirectTransfer-r3-IEs,

laterNonCriticalExtensions | SEQUENCE {
           -- Container for additional R99 extensions
           downlinkDirectTransfer-r3-add-ext BIT STRING OPTIONAL, nonCriticalExtensions SEQUENCE {} OPTIONAL
          nonCriticalExtensions
       } OPTIONAL
      er-than-r3 SEQUENCE {
    rrc-TransactionIdentifier RRC-TransactionIdentifier,
    criticalExtensions SEQUENCE {}
   later-than-r3
       criticalExtensions
}
DownlinkDirectTransfer-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
      rrc-TransactionIdentifier RRC-TransactionIdentifier,
   -- Core network IEs
      Core network IEs cn-DomainIdentity
                                    CN-DomainIdentity,
       nas-Message
                                     NAS-Message
}
__ *************************
-- HANDOVER TO UTRAN COMMAND
__ ****************************
HandoverToUTRANCommand ::= CHOICE {
                                 SEQUENCE {
       handoverToUTRANCommand-r3 HandoverToUTRANCommand-r3-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
       nonCriticalExtensions
                            CHOICE {
   criticalExtensions
                                  SEQUENCE {
                                   HandoverToUTRANCommand-r4-IEs,
SEQUENCE {} OPTIONAL
           handoverToUTRANCommand-r4
           nonCriticalExtensions
       criticalExtensions
                                CHOICE {
                                      SEQUENCE {
                                        HandoverToUTRANCommand-r5-IEs,
              handoverToUTRANCommand-r5
              nonCriticalExtensions
                                           SEQUENCE {} OPTIONAL
                                  CHOICE {
           criticalExtensions
                                         SEQUENCE {
                                          HandoverToUTRANCommand-r6-IEs,
SEQUENCE {} OPTIONAL
                  handoverToUTRANCommand-r6
                  nonCriticalExtensions
                      criticalExtensions
                  criticalExtensions
                                        SEQUENCE {}
               }
           }
```

```
}
    }
}
HandoverToUTRANCommand-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
       new-U-RNTI
                                       U-RNTI-Short.
        \mbox{--}\mbox{ dummy} is not used in this version of specification, it should
        -- not be sent and if received it should be ignored.
                                        ActivationTime
                                                                            OPTIONAL,
        cipheringAlgorithm
                                        CipheringAlgorithm
                                                                            OPTIONAL,
    -- Radio bearer IEs
    -- Specification mode information
        specificationMode
                                       CHOICE {
                                          SEQUENCE {
            complete
                                            SRB-InformationSetupList,
               srb-InformationSetupList
                rab-InformationSetupList
                                                RAB-InformationSetupList
                                                                                    OPTIONAL.
                ul-CommonTransChInfo
                                                UL-CommonTransChInfo,
                ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList,
                dl-CommonTransChInfo
                                                DL-CommonTransChInfo,
                                                DL-AddReconfTransChInfoList,
                dl-AddReconfTransChInfoList
                ul-DPCH-Info
                                                UL-DPCH-Info,
                modeSpecificInfo
                                                CHOICE {
                                                   SEQUENCE {
                        -- dummy and dummy2 are not used in this version of specification,
                        -- they should not be sent and if received they should be ignored.
                        dummy
                                                        DL-PDSCH-Information OPTIONAL,
                        dummy2
                                                        CPCH-SetInfo
                                                                            OPTIONAL
                    },
                                                    NULL
                    tdd
                dl-CommonInformation
                dl-CommonInformation
dl-InformationPerRL-List
                                              DL-CommonInformation,
                                                DL-InformationPerRL-List,
                frequencyInfo
                                                FrequencyInfo
            },
            preconfiguration
                                           SEQUENCE {
-- All IEs that include an FDD/TDD choice are split in two IEs for this message,
-- one for the FDD only elements and one for the TDD only elements, so that one
-- FDD/TDD choice in this level is sufficient.
                preConfigMode
                                                CHOICE {
                    predefinedConfigIdentity
                                                PredefinedConfigIdentity,
                                                    SEQUENCE {
                    defaultConfig
                                                   DefaultConfigMode,
                        defaultConfigMode
                        defaultConfigIdentity
                                                        DefaultConfigIdentity
                },
                rab-Info
                                                RAB-Info-Post
                                                                    OPTIONAL.
                modeSpecificInfo
                                                CHOICE {
                                                   SEQUENCE {
                        ul-DPCH-Info
                                                     UL-DPCH-InfoPostFDD,
                        dl-CommonInformationPost
                                                        DL-CommonInformationPost,
                        dl-InformationPerRL-List
                                                        DL-InformationPerRL-ListPostFDD,
                        frequencyInfo
                                                       FrequencyInfoFDD
                    tdd
                                                        SEQUENCE {
                        ul-DPCH-Info
                                                        UL-DPCH-InfoPostTDD,
                        {\tt dl-CommonInformationPost}
                                                        DL-CommonInformationPost,
                                                    DL-Commonthicolmacton of ,
DL-InformationPerRL-PostTDD,
                        dl-InformationPerRL
                        frequencyInfo
                                                        FrequencyInfoTDD,
                        primaryCCPCH-TX-Power
                                                       PrimaryCCPCH-TX-Power
                    }
                }
            }
        },
    -- Physical channel IEs
        maxAllowedUL-TX-Power
                                      MaxAllowedUL-TX-Power
}
HandoverToUTRANCommand-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
       new-U-RNTI
                                        U-RNTI-Short,
       cipheringAlgorithm
                                        CipheringAlgorithm
                                                                           OPTIONAL,
    -- Radio bearer IEs
    -- Specification mode information
        specificationMode
                                        CHOICE {
                                          SEQUENCE {
                                           SRB-InformationSetupList,
                srb-InformationSetupList
                rab-InformationSetupList
                                                RAB-InformationSetupList-r4
                                                                                    OPTIONAL,
```

```
ul-CommonTransChInfo
                                                UL-CommonTransChInfo-r4,
                ul-AddReconfTransChInfoList
                                                UL-AddReconfTransChInfoList,
                dl-CommonTransChInfo
                                                DL-CommonTransChInfo-r4,
                dl-AddReconfTransChInfoList
                                                DL-AddReconfTransChInfoList-r4,
                ul-DPCH-Info
                                                UL-DPCH-Info-r4,
                modeSpecificInfo
                                                CHOICE {
                                                    SEQUENCE {
                    fdd
                        -- dummy and dummy2 are not used in this version of specification,
                        -- they should not be sent and if received they should be ignored.
                                                        DL-PDSCH-Information OPTIONAL,
                        dummy2
                                                        CPCH-SetInfo
                    },
                    tdd
                                                    NULL
                dl-CommonInformation
                                                DL-CommonInformation-r4,
                dl-InformationPerRL-List
                                                DL-InformationPerRL-List-r4,
                frequencyInfo
                                                FrequencyInfo
            },
                                            SEQUENCE {
            preconfiguration
-- All IEs that include an FDD/TDD choice are split in two IEs for this message,
-- one for the FDD only elements and one for the TDD only elements, so that one
-- FDD/TDD choice in this level is sufficient.
                preConfigMode
                                                CHOICE {
                                                    PredefinedConfigIdentity,
                    predefinedConfigIdentity
                                                    SEQUENCE {
                    defaultConfig
                        defaultConfigMode
                                                        DefaultConfigMode,
                        defaultConfigIdentity
                                                        DefaultConfigIdentity-r4
                rab-Info
                                                RAB-Info-Post
                                                                    OPTIONAL,
                modeSpecificInfo
                                                CHOICE {
                                                    SEQUENCE {
                    fdd
                        ul-DPCH-Info
                                                        UL-DPCH-InfoPostFDD,
                        dl-CommonInformationPost
                                                        DL-CommonInformationPost,
                        dl-InformationPerRL-List
                                                        DL-InformationPerRL-ListPostFDD,
                                                        FrequencyInfoFDD
                        frequencyInfo
                    },
                    tdd
                                                    CHOICE {
                        tdd384
                                                        SEQUENCE {
                            ul-DPCH-Info
                                                            UL-DPCH-InfoPostTDD,
                            dl-InformationPerRL
                                                            DL-InformationPerRL-PostTDD,
                            frequencyInfo
                                                            FrequencyInfoTDD,
                            primaryCCPCH-TX-Power
                                                            PrimaryCCPCH-TX-Power
                        tdd128
                                                        SEQUENCE {
                            ul-DPCH-Info
                                                            UL-DPCH-InfoPostTDD-LCR-r4,
                                                            DL-InformationPerRL-PostTDD-LCR-r4,
                            dl-InformationPerRL
                            frequencyInfo
                                                            FrequencyInfoTDD,
                            primaryCCPCH-TX-Power
                                                           PrimaryCCPCH-TX-Power
                    }
               }
            }
    -- Physical channel IEs
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
}
HandoverToUTRANCommand-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
       new-U-RNTI
                                        U-RNTI-Short,
        {\tt cipheringAlgorithm}
                                        CipheringAlgorithm
                                                                           OPTIONAL.
    -- Radio bearer IEs
    -- Specification mode information
        specificationMode
                                        CHOICE {
                                            SEQUENCE {
            complete
                                                SRB-InformationSetupList-r5,
                srb-InformationSetupList
                rab-InformationSetupList
                                                RAB-InformationSetupList-r5
                                                                                     OPTIONAL,
                ul-CommonTransChInfo
                                                UL-CommonTransChInfo-r4,
                ul-AddReconfTransChInfoList
                                                UL-AddReconfTransChInfoList,
                dl-CommonTransChInfo
                                                DL-CommonTransChInfo-r4,
                dl-AddReconfTransChInfoList
                                                DL-AddReconfTransChInfoList-r5,
                ul-DPCH-Info
                                                UL-DPCH-Info-r5,
                modeSpecificInfo
                                                CHOICE {
                                                    SEQUENCE {
                    fdd
                        -- dummy and dummy2 are not used in this version of specification,
                        -- they should not be sent and if received they should be ignored.
                        dummy
                                                        DL-PDSCH-Information OPTIONAL,
```

```
dummy2
                                                           CPCH-SetInfo
                                                                               OPTIONAL
                     },
                     tdd
                                                       NULL
                 dl-CommonInformation
                                                   DL-CommonInformation-r4,
                 dl-InformationPerRL-List
                                                   DL-InformationPerRL-List-r5,
                 frequencyInfo
                                                   FrequencyInfo
            },
            preconfiguration
                                             SEQUENCE {
-- All IEs that include an FDD/TDD choice are split in two IEs for this message,
-- one for the FDD only elements and one for the TDD only elements, so that one
-- FDD/TDD choice in this level is sufficient.
                preConfigMode
                                                   CHOICE {
                     predefinedConfigIdentity
                                                      PredefinedConfigIdentity,
                                                       SEQUENCE {
                     defaultConfig
                                                      DefaultConfigMode,
                         defaultConfigMode
                         defaultConfigIdentity
                                                           DefaultConfigIdentity-r5
                 rab-Info
                                                   RAB-Info-Post
                                                                      OPTIONAL.
                                                   CHOICE {
                 modeSpecificInfo
                                                      SEQUENCE {
                     fdd
                                                           UL-DPCH-InfoPostFDD,
                         ul-DPCH-Info
                         dl-CommonInformationPost
                                                           DL-CommonInformationPost,
                                                          DL-InformationPerRL-ListPostFDD,
                         dl-InformationPerRL-List
                          frequencyInfo
                                                           FrequencyInfoFDD
                     },
                     tdd
                                                       CHOICE {
                                                          SEQUENCE {
                         tdd384
                                                                UL-DPCH-InfoPostTDD,
                              ul-DPCH-Info
                              dl-InformationPerRL
                                                                DL-InformationPerRL-PostTDD,
                              frequencyInfo
                                                                FrequencyInfoTDD,
                              primaryCCPCH-TX-Power
                                                               PrimaryCCPCH-TX-Power
                          tdd128
                                                           SEQUENCE {
                              ul-DPCH-Info
                                                            UL-DPCH-InfoPostTDD-LCR-r4,
                              dl-InformationPerRL
                                                                DL-InformationPerRL-PostTDD-LCR-r4,
                              frequencyInfo
                                                               FrequencyInfoTDD,
                              primaryCCPCH-TX-Power
                                                              PrimaryCCPCH-TX-Power
                     }
                }
            }
    -- Physical channel IEs
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
}
HandoverToUTRANCommand-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
        new-U-RNTI
                                          U-RNTI-Short,
        cipheringAlgorithm
                                          CipheringAlgorithm
                                                                               OPTIONAL,
    -- Radio bearer IEs
    -- Specification mode information
        specificationMode
                                          CHOICE {
                 srb-InformationSetupList SPB.TE
rab-Informatic
            complete
                srb-InformationSetupList
rab-InformationSetupList
rab-InformationSetupList
rab-InformationSetupList
rab-InformationSetupList
rab-InformationSetupList-r6
ul-CommonTransChInfo
UL-CommonTransChInfo-r4,
UL-AddReconfTransChInfoList
dl-CommonTransChInfo
UL-CommonTransChInfoList-r6,
                                                                                     OPTIONAL.
                 dl-CommonTransChInfo
                                                  DL-CommonTransChInfo-r4,
                 dl-AddReconfTransChInfoList DL-CommonTransChInfo-r4, DL-AddReconfTransChInfoList-r5,
                 ul-DPCH-Info
                                                  UL-DPCH-Info-r6,
                 ul-EDCH-Information
                                                  UL-EDCH-Information-r6
                                                                                     OPTIONAL,
                 dl-HSPDSCH-Information
                                                 DL-HSPDSCH-Information-r6
                                                                                     OPTIONAL,
                 dl-CommonInformation
                                                  DL-CommonInformation-r6.
                 dl-InformationPerRL-List DL-InformationPerRL-List-r6,
                 frequencyInfo
                                                  FrequencyInfo
                                              SEQUENCE {
            preconfiguration
                 -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
                 -- one for the FDD only elements and one for the TDD only elements, so that one
                 -- FDD/TDD choice in this level is sufficient.
                 preConfigMode
                                                 CHOICE {
                     predefinedConfigIdentity
                                                     PredefinedConfigIdentity,
                     defaultConfig
                                                      SEQUENCE {
                         defaultConfigMode
                                                           DefaultConfigMode,
                         defaultConfigIdentity
                                                           DefaultConfigIdentity-r6
```

```
},
                rab-Info
                                                 RAB-Info-Post
                                                                      OPTIONAL,
                modeSpecificInfo
                                                 CHOICE {
                    fdd
                                                  SEQUENCE {
                        ul-DPCH-Info
                                                        UL-DPCH-InfoPostFDD,
                        dl-CommonInformationPost
                                                          DL-CommonInformationPost,
                                                       DL-InformationPerRL-ListPostFDD,
                        dl-InformationPerRL-List
                         frequencyInfo
                                                        FrequencyInfoFDD
                     },
                     tdd
                                                     CHOICE {
                                                         SEQUENCE {
                         tdd384
                             ul-DPCH-Info
                                                             UL-DPCH-InfoPostTDD,
                             dl-InformationPerRL
                                                              DL-InformationPerRL-PostTDD,
                             frequencyInfo
                                                              FrequencyInfoTDD,
                             primaryCCPCH-TX-Power
                                                             PrimaryCCPCH-TX-Power
                         tdd128
                                                         SEQUENCE {
                             ul-DPCH-Info
                                                            UL-DPCH-InfoPostTDD-LCR-r4,
                             dl-InformationPerRL
                                                              DL-InformationPerRL-PostTDD-LCR-r4,
                             frequencyInfo
                                                              FrequencyInfoTDD,
                             primaryCCPCH-TX-Power
                                                            PrimaryCCPCH-TX-Power
                    }
                }
            }
    -- Physical channel IEs
        maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
}
HandoverToUTRANCommand-r7-IEs ::= SEQUENCE {
    -- User equipment IEs
        new-U-RNTI
                                         U-RNTI-Short.
        cipheringAlgorithm
                                         CipheringAlgorithm
                                                                                  OPTIONAL,
    -- Radio bearer IEs
    -- Specification mode information
        specificationMode
                                        CHOICE {
                                             SEQUENCE {
            complete
                                             SRB-InformationSetupList-r6,
                srb-InformationSetupList
                rab-InformationSetupList
ul-CommonTransChInfo-r4,
ul-AddReconfTransChInfoList
UL-AddReconfTransChInfoList-r6,
DL-CommonTransChInfo-r4,

DL-CommonTransChInfo-r4,
                                                                                   OPTIONAL,
                dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r5,
                ul-DPCH-Info
                                                 UL-DPCH-Info-r7,
                dl-CommonInformation
                                                DL-CommonInformation-r4.
                dl-InformationPerRL-List DL-InformationPerRL-List-r7,
                frequencyInfo
                                                 FrequencyInfo
            },
            preconfiguration
                                             SEQUENCE {
                -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
                -- one for the FDD only elements and one for the TDD only elements, so that one
                -- FDD/TDD choice in this level is sufficient.
                preConfigMode
                                                 CHOICE {
                    {\tt predefinedConfigIdentity}
                                                    PredefinedConfigIdentity,
                    defaultConfig
                                                     SEQUENCE {
                                                     DefaultConfigMode,
                        defaultConfigMode
                        defaultConfigIdentity
                                                         DefaultConfigIdentity-r6
                rab-Info
                                                 RAB-Info-Post
                                                                      OPTIONAL,
                modeSpecificInfo
                                                 CHOICE {
                                                     SEQUENCE {
                                                         UL-DPCH-InfoPostFDD,
                        ul-DPCH-Info
                         dl-CommonInformationPost
                                                         DL-CommonInformationPost,
                         dl-InformationPerRL-List
                                                         DL-InformationPerRL-ListPostFDD,
                         frequencyInfo
                                                        FrequencyInfoFDD
                    },
                     bb+
                                                      CHOICE {
                         tdd384
                                                        SEQUENCE {
                             ul-DPCH-Info
                                                             UL-DPCH-InfoPostTDD,
                             dl-InformationPerRL
                                                              DL-InformationPerRL-PostTDD,
                                                            FrequencyInfoTDD,
PrimaryCCPCH-TX-Power
                             frequencyInfo
                            primaryCCPCH-TX-Power
                         tdd128
                                                         SEOUENCE {
                             ul-DPCH-Info
                                                              UL-DPCH-Info-r7,
```

```
dl-InformationPerRL DL-InformationPerRL-PostTDD-LCR-r4,
                         frequencyInfo
                                                     FrequencyInfoTDD,
                                                    PrimaryCCPCH-TX-Power
                        primaryCCPCH-TX-Power
                                                UL-DPCH-Info-r7,
DL-Information
                     tdd768
                        ul-DPCH-Info
                        dl-InformationPerRL DL-InformationPerRL-List-r7, frequencyInfo FrequencyInfoTDD, primaryCCPCH-TX-Power PrimaryCCPCH-TX-Power
                 }
              }
   -- Physical channel IEs
      maxAllowedUL-TX-Power
                                  MaxAllowedUL-TX-Power
}
__ *****************
-- HANDOVER TO UTRAN COMPLETE
__ ****************
HandoverToUTRANComplete ::= SEQUENCE {
   -- TABULAR: Integrity protection shall not be performed on this message.
   -- User equipment IEs
   -- TABULAR: startList is conditional on history.
      startList
                                  STARTList
                                                                    OPTIONAL,
   -- Radio bearer IEs
       OPTIONAL,
           -- Container for additional R99 extensions
          {\tt handoverToUTRANComplete-r3-add-ext} \qquad {\tt BIT\ STRING\ OPTIONAL},
                                SEQUENCE {}
          nonCriticalExtensions
                                                   OPTIONAL
         OPTIONAL
}
__ **************************
-- INITIAL DIRECT TRANSFER
__ ***************
InitialDirectTransfer ::= SEQUENCE {
   -- Core network IEs
       -- Measurement IEs
       measuredResultsOnRACH MeasuredResultsOnRACH v3a0NonCriticalExtensions SEQUENCE {
                                                                  OPTIONAL,
       initialDirectTransfer-v3a0ext
laterNonCriticalExtensions
InitialDirectTransfer-v3a0ext,
SEQUENCE {
           -- Container for additional R99 extensions
          initialDirectTransfer-v690ext InitialDirectTransfer-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                        OPTIONAL
                    OPTIONAL
                 OPTIONAL
          OPTIONAL
}
InitialDirectTransfer-v3a0ext ::= SEQUENCE {
   \mbox{--} start-value shall always be included in this version of the protocol
   start-Value
                                START-Value
                                                                OPTIONAL
InitialDirectTransfer-v590ext ::= SEQUENCE {
   establishmentCause EstablishmentCause OPTIONAL
InitialDirectTransfer-v690ext-IEs ::= SEQUENCE {
   -- Core network IEs
                                   PLMN-Identity
                                                                   OPTIONAL,
      plmn-Identity
```

```
-- Measurement IEs
       measuredResultsOnRACHinterFreq MeasuredResultsOnRACHinterFreq
                                                                     OPTIONAL,
   -- MBMS IEs
                                    MBMS-JoinedInformation-r6
       mbms-JoinedInformation
                                                                     OPTIONAL
}
__ ***************
-- HANDOVER FROM UTRAN COMMAND
__ *****************
HandoverFromUTRANCommand-GSM ::= CHOICE {
                                 SEQUENCE {
       handoverFromUTRANCommand-GSM-r3
                                    HandoverFromUTRANCommand-GSM-r3-IEs,
       -- UTRAN should not include the IE laterNonCriticalExtensions when it sets the IE
       -- gsm-message included in handoverFromUTRANCommand-GSM-r3 to single-GSM-Message. The UE
       -- behaviour upon receiving a message with this combination of IE values is unspecified.
       -- Container for additional R99 extensions
           \verb| handoverFromUTRANCommand-GSM-r3-add-ext| & \verb| BIT STRING | OPTIONAL|, \\
           -- UTRAN may apply the r3 version of the message to perform PS handover
           -- for a single RAB only
                                        SEQUENCE {
           v690NonCriticalExtensions
                                                   HandoverFromUTRANCommand-GSM-v690ext-IEs,
              handoverFromUTRANCommand-GSM-v690ext
               nonCriticalExtensions
                                           SEQUENCE {} OPTIONAL
              OPTIONAL
       }
          OPTIONAL
   later-than-r3
                                SEQUENCE {
      rrc-TransactionIdentifier RRC-TransactionIdentifier,
                                   CHOICE {
       criticalExtensions
                                     SEQUENCE {
          rб
              handoverFromUTRANCommand-GSM-r6 HandoverFromUTRANCommand-GSM-r6-IEs,
              handoverFromUTRANCommand-GSM-r6-add-ext BIT STRING OPTIONAL,
                                           SEQUENCE {} OPTIONAL
              nonCriticalExtensions
           },
           criticalExtensions
                                  SEQUENCE {}
       }
   }
}
HandoverFromUTRANCommand-GSM-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
       User equipment IEs
rrc-TransactionIdentifier RRC-TransactionIdentifier,
       activationTime
                                    ActivationTime
                                                                      OPTIONAL.
   -- Radio bearer IEs
       toHandoverRAB-Info
                                    RAB-Info
                                                                      OPTIONAL,
   -- Measurement IEs
       frequency-band
                                    Frequency-Band,
   -- Other IEs
       gsm-message
                                    CHOICE {
           -- In the single-GSM-Message case the following rules apply:
           -- 1> the GSM message directly follows the basic production; the final padding that
           -- results when PER encoding the abstract syntax value is removed prior to appending
                the GSM message.
           -- 2> the RRC message excluding the GSM part, does not contain a length determinant;
                there is no explicit parameter indicating the size of the included GSM message.
           -- 3> depending on need, final padding (all '0's) is added to ensure the final result
                comprises a full number of octets
           gsm-MessageList
                                        SEQUENCE {
                                            GSM-MessageList
              gsm-Messages
       }
}
HandoverFromUTRANCommand-GSM-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
       activationTime
                                    ActivationTime
                                                                      OPTIONAL,
   -- Radio bearer IEs
       toHandoverRAB-Info
                                   RAB-InformationList-r6
                                                                      OPTIONAL,
   -- Measurement IEs
       frequency-band
                                    Frequency-Band,
   -- Other IEs
       gsm-message
                                    CHOICE {
           -- In the single-GSM-Message case the following rules apply:
```

```
-- 1> the GSM message directly follows the basic production; the final padding that
                 results when PER encoding the abstract syntax value is removed prior to appending
                 the GSM message.
            -- 2> the RRC message excluding the GSM part, does not contain a length determinant;
                 there is no explicit parameter indicating the size of the included GSM message.
            -- 3> depending on need, final padding (all '0's) is added to ensure the final result
                 comprises a full number of octets
            single-GSM-Message
                                           SEQUENCE { },
            gsm-MessageList
                                           SEQUENCE {
               gsm-Messages
                                               GSM-MessageList
        },
        geran-SystemInfoType
                                           CHOICE {
                                               GERAN-SystemInformation,
           sI
           pSI
                                               GERAN-SystemInformation
               OPTIONAL
}
HandoverFromUTRANCommand-GSM-v690ext-IEs ::= SEQUENCE {
       geran-SystemInfoType
                                         CHOICE {
                                               GERAN-SystemInformation,
           sI
           pSI
                                               GERAN-SystemInformation
                OPTIONAL
}
HandoverFromUTRANCommand-GERANIu ::= SEQUENCE {
    rrc-TransactionIdentifier RRC-TransactionIdentifier,
    handoverFromUTRANCommand-GERANIu CHOICE {
                                          SEQUENCE {
           handoverFromUTRANCommand-GERANIu-r5
                                           HandoverFromUTRANCommand-GERANIu-r5-IEs,
            -- UTRAN should not include the IE nonCriticalExtensions when it sets
            -- the IE geranIu-message included in handoverFromUTRANCommand-GERANIu-r5 to
            -- single-GERANIu-Message
            -- The UE behaviour upon receiving a message including this combination of IE values is
            -- not specified
                                           SEQUENCE {} OPTIONAL
           nonCriticalExtensions
        },
        later-than-r5
                                      SEQUENCE {
           criticalExtensions
                                           SEQUENCE {}
    }
}
HandoverFromUTRANCommand-GERANIu-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
                                                                          OPTIONAL,
       activationTime
                                      ActivationTime
    -- Measurement IEs
       frequency-Band
                                       Frequency-Band,
    -- Other IEs
       geranIu-Message
                                           CHOICE {
           -- In the single-GERANIu-Message case the following rules apply:
            -- 1> the GERAN Iu message directly follows the basic production; the final padding that
                 results when PER encoding the abstract syntax value is removed prior to appending
                 the GERAN Iu message.
            -- 2> the RRC message excluding the GERAN Iu part does not contain a length determinant;
      there is no explicit parameter indicating the size of the included GERAN Iu
            -- 3> depending on need, final padding (all '0's) is added to ensure the final result
                 comprises a full number of octets.
            single-GERANIu-Message
                                         SEQUENCE {},
SEQUENCE {
            geranIu-MessageList
               geranIu-Messages
                                               GERANIu-MessageList
        }
}
HandoverFromUTRANCommand-CDMA2000 ::= CHOICE {
                                   SEQUENCE {
       hand over {\tt FromUTRANCommand-CDMA2000-r3}
                                     HandoverFromUTRANCommand-CDMA2000-r3-IEs,
        laterNonCriticalExtensions
                                          SEQUENCE {
            -- Container for additional R99 extensions
            handoverFromUTRANCommand-CDMA2000-r3-add-ext
                                               BIT STRING
                                                               OPTIONAL,
           nonCriticalExtensions
                                               SEOUENCE {}
        }
          OPTIONAL
    },
```

```
later-than-r3
                            SEQUENCE {
                            RRC-TransactionIdentifier,
      rrc-TransactionIdentifier
      criticalExtensions
                                SEQUENCE {}
}
HandoverFromUTRANCommand-CDMA2000-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
     rrc-TransactionIdentifier RRC-TransactionIdentifier,
      activationTime
                                ActivationTime
                                                             OPTIONAL,
   -- Radio bearer IEs
      toHandoverRAB-Info
                              RAB-Info
                                                             OPTIONAL.
   -- Other IEs
     cdma2000-MessageList
                              CDMA2000-MessageList
}
__ ***************
-- HANDOVER FROM UTRAN FAILURE
__ ***************
HandoverFromUTRANFailure ::= SEQUENCE {
   -- User equipment IEs
      rrc-TransactionIdentifier
                              RRC-TransactionIdentifier.
   -- Other IEs
     Other IEs interRAT-HO-FailureCause InterRAT-HO-FailureCause
      -- In case the interRATMessage to be transferred is for GERAN Iu mode, the
      -- message should be placed in the HandoverFromUtranFailure-v590ext-IEs
      -- non-critical extension container.
                       CHOICE {
      interRATMessage
                                  SEQUENCE {
         gsm
            gsm-MessageList
                                       GSM-MessageList
         },
         cdma2000
                                     SEQUENCE {
           cdma2000-MessageList
                                         CDMA2000-MessageList
                  OPTIONAL,
      -- Container for additional R99 extensions
         handoverFromUTRANFailure-r3-add-ext BIT STRING OPTIONAL,
         v590NonCriticalExtensions SEQUENCE {
            handoverFromUTRANFailure-v590ext HandoverFromUtranFailure-v590ext-IEs,
             OPTIONAL
         OPTIONAL
}
HandoverFromUtranFailure-v590ext-IEs ::= SEQUENCE {
                                  GERANIu-MessageList OPTIONAL
  geranIu-MessageList
}
__ *****************
-- INTER RAT HANDOVER INFO
__ ***************
InterRATHandoverInfo ::= SEQUENCE {
   -- This structure is defined for historical reasons, backward compatibility with 44.018
   absent
                                NULL,
                                PredefinedConfigStatusList
      present
   uE-SecurityInformation CHOICE {
      absent
                               NULL,
                                UE-SecurityInformation
      present
   },
   ue-CapabilityContainer CHOICE {
                               NULL,
      -- present is an octet aligned string containing IE UE-RadioAccessCapabilityInfo
                            OCTET STRING (SIZE (0..63))
      present
   SEQUENCE {
         interRATHandoverInfo-v390ext InterRATHandoverInfo-v390ext-IEs,
```

```
v3a0NonCriticalExtensions SEQUENCE {
                 interRATHandoverInfo-v3a0ext
laterNonCriticalExtensions
InterRATHandoverInfo-v3a0ext-IEs,
SEQUENCE {
                     \verb|interRATH| and over Info-v3d0ext | \verb|InterRATH| and over Info-v3d0ext-IEs|, \\
                      - Container for additional R99 extensions
                     interRATHandoverInfo-r3-add-ext
                                                         BIT STRING
                                  (CONTAINING InterRATHandoverInfo-r3-add-ext-IEs) OPTIONAL,
                         UNONCriticalExtensions SEQUENCE {
interRATHandoverInfo-v3g0ext
v4b0NonCriticalExtensions

SEQUENCE {
InterRATHandoverInfo-v3g0ext-IEs,
V4b0NonCriticalExtensions
                     v3q0NonCriticalExtensions
                         v4b0NonCriticalExtensions
                                                           SEQUENCE {
                             interRATHandoverInfo-v4b0ext InterRATHandoverInfo-v4b0ext-IEs, v4d0NonCriticalExtensions SEQUENCE {
                                  interRATHandoverInfo-v4d0ext InterRATHandoverInfo-v4d0ext-IEs,
                                  -- Reserved for future non critical extension
                                  v590NonCriticalExtensions
                                                                   SEQUENCE {
                                      interRATHandoverInfo-v590ext
                                                                   InterRATHandoverInfo-v590ext-IEs,
                                      v690NonCriticalExtensions
                                                                       SEQUENCE {
                                          interRATHandoverInfo-v690ext
                                                                   InterRATHandoverInfo-v690ext-IEs,
                                          v7xyNonCriticalExtensions
                                                                       SEQUENCE {
                                               interRATHandoverInfo-v7xyext
                                                                    InterRATHandoverInfo-v7xyext-IEs,
                                                                                SEQUENCE {} OPTIONAL
                                              nonCriticalExtensions
                                              OPTIONAL
                                          OPTIONAL
                                      OPTIONAL
                                  OPTIONAL
                             OPTIONAL
                         OPTIONAL.
                     OPTIONAL
           ) OPTIONAL
        }
    }
}
InterRATHandoverInfo-v390ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v380ext
                                              UE-RadioAccessCapability-v380ext
                                                                                         OPTIONAL,
        dl-PhysChCapabilityFDD-v380ext
                                            DL-PhysChCapabilityFDD-v380ext
}
InterRATHandoverInfo-v3a0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v3a0ext UE-RadioAccessCapability-v3a0ext
                                                                                       OPTIONAL
}
InterRATHandoverInfo-v3d0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        uESpecificBehaviourInformationlinterRAT
                                                     UESpecificBehaviourInformationlinterRAT
    OPTIONAL
}
InterRATHandoverInfo-v3g0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v3g0ext UE-RadioAccessCapability-v3g0ext
                                                                                         OPTIONAL
}
InterRATHandoverInfo-r3-add-ext-IEs ::= SEQUENCE {
        interRATHandoverInfo-v690ext1
                                             InterRATHandoverInfo-v690ext1-IEs.
        nonCriticalExtensions
                                              SEQUENCE {}
                                                               OPTIONAL
InterRATHandoverInfo-v4b0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        accessStratumReleaseIndicator
                                            AccessStratumReleaseIndicator
}
InterRATHandoverInfo-v4d0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
    tdd128-RF-Capability
                                          RadioFrequencyBandTDDList
                                                                          OPTIONAL
}
InterRATHandoverInfo-v590ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        predefinedConfigStatusListComp ue-RadioAccessCapabilityComp UE-RadioAccessCapabilityComp
                                                                                         OPTIONAL,
                                                                                         OPTIONAL
}
```

```
InterRATHandoverInfo-v690ext1-IEs ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v650ext UE-RadioAccessCapability-v650ext
                                                                                   OPTIONAL
InterRATHandoverInfo-v690ext-IEs ::= SEQUENCE {
    -- User equipment IEs

      ue-SecurityInformation2
      UE-SecurityInformation2

      ue-RadioAccessCapabilityComp
      UE-RadioAccessCapabilityComp - e

      ue-RadioAccessCapabilityComp2
      UE-RadioAccessCapabilityComp2

                                                                                   OPTIONAL,
                                           UE-RadioAccessCapabilityComp-ext
                                                                                   OPTIONAL,
}
InterRATHandoverInfo-v7xyext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v7xyext UE-RadioAccessCapability-v7xyext
                                                                                   OPTIONAL,
                                           UE-RadioAccessCapabilityComp-r7
       ue-RadioAccessCapabilityComp
                                                                                   OPTIONAL
}
__ ****************
-- MEASUREMENT CONTROL
__ ****************
MeasurementControl ::= CHOICE {
    -- The Rel-4 functionality of UE Positioning OTDOA AssistanceData TDD is only available
    -- in the later-than-r3 branch of this message (i.e. through the use of the IE
    -- ue-Positioning-OTDOA-AssistanceData-r4)
       v390nonCriticalExtensions MeasurementControl-r3-IEs,
measurementC
                                  SEQUENCE {
           MeasurementControl-v3a0ext,
                    -- Container for additional R99 extensions
                    measurementControl-r3-add-ext BIT STRING OPTIONAL,
                   v4b0NonCriticalExtensions
                                                      SEQUENCE {
                        -- The content of the v4b0 non-critical extension has been removed. If sent
                        -- to a UE of AS release 4, the UE behaviour is unspecified. A UE of AS
                       -- release 5 onward shall comply with the v4b0 and later extensions in this
                        -- branch of the message.
                                                  SEQUENCE {
                       v590NonCriticalExtensions
                           {\tt measurementControl-v5b0ext-IEs,}
                                                               SEQUENCE {
                               v7xvNonCriticalExtensions
                                   {\tt measurementControl-v7xyext} \qquad {\tt MeasurementControl-v7xyext-IEs}\,,
                                   nonCriticalExtensions
                                                                   SEQUENCE {} OPTIONAL
                               }
                                                       OPTIONAL
                           }
                                                   OPTIONAL
                       }
                                               OPTIONAL
                  }
                                           OPTIONAL
                                        OPTIONAL
           }
                                   OPTIONAL
       }
                               OPTIONAL
    later-than-r3
                                   SEQUENCE {
                                  RRC-TransactionIdentifier,
       rrc-TransactionIdentifier
       criticalExtensions
                                       CHOICE {
               measurementControl-r4 SEQUENCE {
               weasurementControl-r4-IEs, v4d0NonCriticalExtensions SECTION (
                    -- Container for adding non critical extensions after freezing REL-5
                   measurementControl-r4-add-ext BIT STRING OPTIONAL,
                   v590NonCriticalExtensions
                                                  SEQUENCE {
                       measurementControl-v590ext MeasurementControl-v590ext-IEs, v5b0NonCriticalExtensions SEQUENCE {
                                                       SEQUENCE {
                           )NonCriticalExcensions
measurementControl-v5b0ext
                                                           MeasurementControl-v5b0ext-IEs,
                            v7xyNonCriticalExtensions
                                                           SEQUENCE {
                               {\tt measurementControl-v7xyext} \qquad {\tt MeasurementControl-v7xyext-IEs}\,,
                               nonCriticalExtensions
                                                               SEQUENCE { } OPTIONAL
                               OPTIONAL
                           OPTIONAL
                       OPTIONAL
                    OPTIONAL
            later-than-r4
                                           SEQUENCE {
```

```
-- Most significant part of "RRC transaction identifier" (MSP),
                -- "RRC transaction identifier" = rrc-TransactionIdentifier-MSP * 4 +
                -- rrc-TransactionIdentifier
                                                    RRC-TransactionIdentifier.
                rrc-TransactionIdentifier-MSP
                criticalExtensions
                                                CHOICE {
                                                 SEQUENCE {
                    rб
                        measurementControl-r6
                        v6a0NonCriticalExtensions
                                                        MeasurementControl-r6-IEs.
                                                        SEQUENCE {
                            SEQUENCE {
                                measurementControl-v7xyext MeasurementControl-v7xyext-IEs,
                                                                 SEQUENCE {} OPTIONAL
                                nonCriticalExtensions
                               ODTTONAT.
                            OPTIONAL
                    criticalExtensions
                                                   SEQUENCE {}
               }
          }
      }
   }
}
MeasurementControl-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
                                      RRC-TransactionIdentifier.
       rrc-TransactionIdentifier
    -- Measurement IEs
       measurement les
measurementIdentity MeasurementIdentity,
        -- TABULAR: The measurement type is included in MeasurementCommand.
       measurementCommand MeasurementCommand,
measurementReportingMode additionalMeasurementList AdditionalMeasurementID-I.
                                                                             OPTIONAL.
                                       AdditionalMeasurementID-List
                                                                             OPTIONAL,
    -- Physical channel IEs
       dpch-CompressedModeStatusInfo DPCH-CompressedModeStatusInfo
                                                                            OPTIONAL
MeasurementControl-v390ext ::= SEQUENCE {
                                               UE-Positioning-Measurement-v390ext OPTIONAL
       ue-Positioning-Measurement-v390ext
}
MeasurementControl-v3a0ext ::= SEQUENCE {
   sfn-Offset-Validity
                                    SFN-Offset-Validity OPTIONAL
MeasurementControl-r4-IEs ::= SEQUENCE {
    -- Measurement IEs
       measurementIdentity MeasurementIdentity,
        -- TABULAR: The measurement type is included in measurementCommand.
       measurementCommand MeasurementCommand-r4,
measurementReportingMode
additionalMeasurementList AdditionalMeasurementID-List
                                                                            OPTIONAL,
    -- Physical channel IEs
        dpch-CompressedModeStatusInfo DPCH-CompressedModeStatusInfo
                                                                            OPTIONAL
}
MeasurementControl-v590ext-IEs ::= SEQUENCE {
       surementCommand-v590ext ^{\circ} CHOICE { -- the choice 'intra-frequency' shall be used for the case of intra-frequency measurement,
    measurementCommand-v590ext
        -- as well as when intra-frequency events are configured for inter-frequency measurement
        intra-frequency
                                            Intra-FreqEventCriteriaList-v590ext,
        inter-frequency
                                            Inter-FreqEventCriteriaList-v590ext
           OPTIONAL,
    intraFreqReportingCriteria-1b-r5
                                            IntraFreqReportingCriteria-1b-r5
                                                                                 OPTIONAL,
    intraFregEvent-1d-r5
                                            IntraFreqEvent-1d-r5
                                                                                 OPTIONAL,
    -- most significant part of "RRC transaction identifier" (MSP),
    -- "RRC transaction identifier" = rrc-TransactionIdentifier-MSP-v590ext * 4 +
    -- rrc-TransactionIdentifier
   rrc-TransactionIdentifier-MSP-v590ext RRC-TransactionIdentifier
}
MeasurementControl-v5b0ext-IEs ::= SEQUENCE {
    interRATCellInfoIndication
                                        InterRATCellInfoIndication
}
MeasurementControl-r6-IEs ::= SEQUENCE {
    -- Measurement IEs
       measurementIdentity
                               MeasurementIdentity,
        -- TABULAR: The measurement type is included in measurementCommand.
        measurementCommand
                                        MeasurementCommand-r6,
```

```
measurementReportingMode MeasurementReportingMode additionalMeasurementList AdditionalMeasurementID-List
                                                                            OPTIONAL.
                                                                            OPTIONAL,
    -- Physical channel IEs
       dpch-CompressedModeStatusInfo DPCH-CompressedModeStatusInfo
                                                                            OPTIONAL
}
MeasurementControl-v6a0ext-IEs ::= SEQUENCE {
                                      IntraFreqReportingCriteria-1b-r5 OPTIONAL
    intraFreqReportingCriteria-1b-r5
MeasurementControl-v7xyext-IEs ::= SEQUENCE {
    __ ********************
-- MEASUREMENT CONTROL FAILURE
__ ****************
MeasurementControlFailure ::= SEQUENCE {
       ### RRC-TransactionIdentifier failureCause FailureCauseWithProtErr, SEQUENCE | SEQUENCE |
    -- User equipment IEs
                                        RRC-TransactionIdentifier,
            erNonCriticalExtensions SEQUENCE {
-- Container for additional R99 extensions
           nonCriticalExtensions
                                              SEQUENCE {}
               OPTIONAL
        } OPTIONAL
}
MeasurementControlFailure-v590ext-IEs ::= SEQUENCE {
    -- most significant part of "RRC transaction identifier" (MSP),
    -- "RRC transaction identifier" = rrc-TransactionIdentifier-MSP-v590ext * 4 +
    -- rrc-TransactionIdentifier
    -- If the rrc-TransactionIdentifier-MSP-v590ext was not received in the MEASUREMENT CONTROL
    -- message, then the rrc-TransactionIdentifier-MSP-v590ext shall be set to zero
    rrc-TransactionIdentifier-MSP-v590ext RRC-TransactionIdentifier
}
__ *************************
-- MEASUREMENT REPORT
__ ****************************
MeasurementReport ::= SEQUENCE {
    -- Measurement IEs
       measurementIdentity MeasurementIdentity,
       measuredResults MeasuredResults
measuredResultsOnRACH MeasuredResultsOnRACH
additionalMeasuredResults MeasuredResultsList
eventResults EventResults
                                                                            OPTIONAL,
                                        MeasuredResultsOnRACH
                                                                             OPTIONAL.
                                                                             OPTIONAL,
                                                                             OPTIONAL,
    -- Non-critical extensions
        v390nonCriticalExtensions
                                           SEQUENCE {
           measurementReport-v390ext MeasurementReport-v390ext, laterNonCriticalExtensions SEQUENCE {
                -- Container for additional R99 extensions
                measurementReport-r3-add-ext
v4b0NonCriticalExtensions
measurementReport-v4b0ext

MeasurementReport-v4b0ext

BIT STRING
OPTIONAL,
SEQUENCE {
    MeasurementReport-v4b0ext-IEs,
                    -- Extension mechanism for non-Rel4 information
                    v590NonCriticalExtensions SEQUENCE {
                        measurementReport-v5b0ext MeasurementReport-v5b0ext-IEs, v690NonCriticalExtensions SEQUENCE {
    measurementReport-v690ext MeasurementReport-v690ext-
                                                                MeasurementReport-v690ext-IEs,
                                v7xyNonCriticalExtensions
                                                                SEQUENCE {
                                    measurementReport-v7xyext MeasurementReport-v7xyext-IEs,
                                    nonCriticalExtensions
                                                                     SEQUENCE {}
                                                                                             OPTIONAL
                                       OPTIONAL
                            }
                                    OPTIONAL
                        }
                                OPTIONAL
```

```
OPTIONAL
                       OPTIONAL
                 OPTIONAL
       }
              OPTIONAL
MeasurementReport-v390ext ::= SEQUENCE {
      measuredResults-v390ext
                                  MeasuredResults-v390ext OPTIONAL
-- additionalMeasuredResults-LCR shall contain measurement results and additional measurement
   -- results list.
   additionalMeasuredResults-LCR MeasuredResultsList-LCR-r4-ext
                                                                 OPTIONAL,
   -- dummy is not used in this version of the specification. It should not be sent and
   -- if received it should be ignored.
                               PrimaryCPICH-Info
                                                                  OPTIONAL
}
MeasurementReport-v590ext-IEs ::= SEQUENCE {
   measuredResults-v590ext
                                 MeasuredResults-v590ext
                                                                 OPTIONAL
{\tt MeasurementReport-v5b0ext-IEs} \; ::= \; \; {\tt SEQUENCE} \; \big\{
   OPTIONAL
MeasurementReport-v690ext-IEs ::= SEQUENCE {
   measuredResultsOnRACHinterFreq MeasuredResultsOnRACHinterFreq
                                                                 OPTIONAL
MeasurementReport-v7xyext-IEs ::= SEQUENCE {
   ue-InternalMeasuredResults
   velocitvEstimate
                                  VelocityEstimate
                                                                 OPTIONAL,
                                  UE-InternalMeasuredResults-r7
                                                                OPTIONAL
__ ***************
-- PAGING TYPE 1
__ ***************
PagingType1 ::= SEQUENCE {
   -- User equipment IEs
      pagingRecordList
                                 PagingRecordList
                                                                 OPTIONAL,
   -- Other TEs
      Dther IES
bcch-ModificationInfo
laterNonCriticalExtensions

BCCH-ModificationInfo
SEQUENCE {
                                                                 OPTIONAL,
          -- Container for additional R99 extensions
          SEQUENCE {} OPTIONAL
            OPTIONAL
       } OPTIONAL
PagingType1-v590ext-IEs ::= SEQUENCE {
   -- User equipment IEs
      pagingRecord2List
                                  PagingRecord2List-r5
                                                                 OPTIONAL
__ ****************
-- PAGING TYPE 2
__ ****************
PagingType2 ::= SEQUENCE {
   -- User equipment IEs
      User equipment iss
rrc-TransactionIdentifier RRC-TransactionIdentifier,
pagingCause PagingCause,
   -- Core network IEs
       cn-DomainIdentity
pagingRecordTypeID
laterNonCriticalExtensions
CN-DomainIdentity,
PagingRecordTypeID,
SEQUENCE {
      cn-DomainIdentity
      pagingRecordTypeID
          -- Container for additional R99 extensions
```

```
pagingType2-r3-add-ext
                                         BIT STRING
                                                        OPTIONAL,
           nonCriticalExtensions
                                          SEQUENCE {}
                                                         OPTIONAL
           OPTIONAL
}
   ************
-- PHYSICAL CHANNEL RECONFIGURATION
__ *********************
PhysicalChannelReconfiguration ::= CHOICE {
                                  SEOUENCE {
       physicalChannelReconfiguration-r3
                                     PhysicalChannelReconfiguration-r3-IEs,
                                         SEQUENCE {
       v3a0NonCriticalExtensions
           physicalChannelReconfiguration-v3a0ext
                                                     PhysicalChannelReconfiguration-v3a0ext,
                                        SEQUENCE {
           laterNonCriticalExtensions
               -- Container for additional R99 extensions
               physicalChannelReconfiguration-r3-add-ext
                                                                BIT STRING
                                                                                OPTIONAL,
                                              SEQUENCE {
               v4b0NonCriticalExtenstions
                   {\tt physicalChannelReconfiguration-v4b0ext}
                                             PhysicalChannelReconfiguration-v4b0ext-IEs,
                   v590NonCriticalExtenstions
                                                    SEQUENCE {
                       physicalChannelReconfiguration-v590ext
                                                PhysicalChannelReconfiguration-v590ext-IEs,
                       v690NonCriticalExtensions
                                                     SEQUENCE {
                          physicalChannelReconfiguration-v690ext
                                                     PhysicalChannelReconfiguration-v690ext-IEs,
                                                                 SEQUENCE {} OPTIONAL
                          nonCriticalExtensions
                          OPTIONAL
                       OPTIONAL
                   OPTIONAL
               OPTIONAL
       }
          OPTIONAL
                                  SEQUENCE {
   later-than-r3
       rrc-TransactionIdentifier
                                      RRC-TransactionIdentifier,
           criticalExtensions
                                          CHOICE {
                                          SEQUENCE {
               physicalChannelReconfiguration-r4
                                             PhysicalChannelReconfiguration-r4-IEs,
               v4d0NonCriticalExtensions
                                                 SEQUENCE {
                    - Container for adding non critical extensions after freezing REL-5
                   physicalChannelReconfiguration-r4-add-ext
                                                                BIT STRING
                                                                               OPTIONAL,
                                                     SEQUENCE {
                   v590NonCriticalExtenstions
                       {\tt physicalChannelReconfiguration-v590ext}
                                             PhysicalChannelReconfiguration-v590ext-IEs,
                       v690NonCriticalExtensions
                                                     SEQUENCE {
                          physicalChannelReconfiguration-v690ext
                                                    PhysicalChannelReconfiguration-v690ext-IEs,
                          nonCriticalExtensions
                                                         SEQUENCE {}
                                                                        OPTIONAL
                          OPTIONAL
                       OPTIONAL
                   OPTIONAL
           criticalExtensions
                                          CHOICE {
                                             SEQUENCE {
               r5
                   physicalChannelReconfiguration-r5
                                                 PhysicalChannelReconfiguration-r5-IEs,
                   -- Container for adding non critical extensions after freezing REL-6
                   physicalChannelReconfiguration-r5-add-ext
                                                            BIT STRING OPTIONAL,
                   v690NonCriticalExtensions SEQUENCE {
                       physicalChannelReconfiguration-v690ext
                                                     PhysicalChannelReconfiguration-v690ext-IEs,
                       nonCriticalExtensions
                                                     SEQUENCE {} OPTIONAL
                   }
                      OPTIONAL
               {\tt criticalExtensions}
                                              CHOICE {
                                                  SEQUENCE {
                       physicalChannelReconfiguration-r6
                                                     PhysicalChannelReconfiguration-r6-IEs,
                       -- Container for adding non critical extensions after freezing REL-7
                                                                  BIT STRING OPTIONAL,
                       physicalChannelReconfiguration-r6-add-ext
                                                     SEQUENCE {}
                       nonCriticalExtensions
                                                                    OPTIONAL
                                                 CHOICE {
                   criticalExtensions
                                                      SEQUENCE {
                       r7
```

```
physicalChannelReconfiguration-r7
                                                        PhysicalChannelReconfiguration-r7-IEs,
                            -- Container for adding non critical extensions after freezing REL-8
                            physicalChannelReconfiguration-r7-add-ext BIT STRING OPTIONAL,
                            nonCriticalExtensions
                                                                        SEQUENCE {}
                                                                                        OPTIONAL
                        criticalExtensions
                                                      SEQUENCE {}
                   }
          }
      }
   }
}
PhysicalChannelReconfiguration-r3-IEs ::= SEQUENCE {
       Jser equipment IEs
rrc-TransactionIdentifier
integrityProtectionModeInfo
cipheringModeInfo
CipheringModeInfo
CipheringModeInfo
    -- User equipment IEs
                                                                           OPTIONAL,
        activationTime
                                        ActivationTime
                                                                             OPTIONAL,
       new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL,
        new-C-RNTI
                                       C-RNTI
                                                                            OPTIONAL,
        rrc-StateIndicator
                                       RRC-StateIndicator,
       rrc-StateIndicator RRC-StateIndicator,
utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
    -- Core network TEs
                                       CN-InformationInfo
       cn-InformationInfo
                                                                            OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                             OPTIONAL,
    -- Radio bearer IEs
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                            OPTIONAL.
    -- Physical channel IEs
       frequencyInfo
                                       FrequencyInfo
        maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                            OPTIONAL,
        -- Note: the reference to CPCH in the element name below is incorrect. The name is not
        -- changed to keep it aligned with R99.
        ul-ChannelRequirement UL-ChannelRequirementWithCPCH-SetID
        modeSpecificInfo
                                       CHOICE {
                                            SEQUENCE {
           fdd
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                                                DL-PDSCH-Information
            },
            tdd
                                            NULL
        dl-CommonInformation
                                      DL-CommonInformation
                                                                            OPTIONAL,
        dl-InformationPerRL-List
                                       DL-InformationPerRL-List
                                                                            OPTIONAL
}
PhysicalChannelReconfiguration-v3a0ext ::= SEQUENCE {
   -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received the UE behaviour
    -- is unspecified
   new-DSCH-RNTI
                                    DSCH-RNTT
                                                                        OPTIONAL
}
PhysicalChannelReconfiguration-v4b0ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        -- dummy is not used in this version of the specification, it should
        -- not be sent and if received it should be ignored.
                                            SSDT-UL
                                                                                OPTIONAL,
        -- The order of the RLs in IE cell-id-PerRL-List is the same as
        -- in IE DL-InformationPerRL-List included in this message
        cell-id-PerRL-List
                                            CellIdentity-PerRL-List
                                                                                OPTIONAL
}
PhysicalChannelReconfiguration-v590ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
       dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                           OPTIONAL
}
PhysicalChannelReconfiguration-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                            OPTIONAL,
        cipheringModeInfo
                                       CipheringModeInfo
                                                                            OPTIONAL,
        activationTime
                                       ActivationTime
                                                                             OPTIONAL,
       new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL,
       new-C-RNTI
                                        C-RNTI
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
        -- the UE behaviour is unspecified
```

```
new-DSCH-RNTI
                                       DSCH-RNTI
                                                                           OPTIONAL,
       rrc-StateIndicator
                                       RRC-StateIndicator,
       rrc-StateIndicator RRC-StateIndicator,
utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                          OPTIONAL,
    -- Core network IEs
       cn-InformationInfo
                                       CN-InformationInfo
                                                                           OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                      URA-Identity
                                                                           OPTIONAL.
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                           OPTIONAL,
    -- Physical channel IEs
                                     FrequencyInfo
                                                                           OPTIONAL.
       frequencyInfo
       maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                           OPTIONAL.
        -- Note: the reference to CPCH in the element name below is incorrect. The name is not
        -- changed to keep it aligned with R99.
        \verb"ul-ChannelRequirement" UL-ChannelRequirementWith CPCH-SetID-r4 OPTIONAL,\\
       modeSpecificInfo
                                       CHOICE {
                                           SEQUENCE {
           fdd
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                                               DL-PDSCH-Information
                                                                          OPTIONAL
               dummy
           },
           tdd
                                           NULL
        dl-CommonInformation
                                     DL-CommonInformation-r4
       dl-CommonInformation
dl-InformationPerRL-List
                                     DL-InformationPerRL-List-r4
                                                                          OPTIONAL
}
PhysicalChannelReconfiguration-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                      IntegrityProtectionModeInfo
                                                                           OPTIONAL.
        cipheringModeInfo
                                       CipheringModeInfo
                                                                           OPTIONAL,
       activationTime
                                       ActivationTime
       new-U-RNTI
                                       U-RNTI
                                                                           OPTIONAL,
       new-C-RNTI
                                       C-RNTI
                                                                           OPTIONAL.
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
        -- the UE behaviour is unspecified
       new-DSCH-RNTI
                                      DSCH-RNTI
       new-H-RNTI
                                       H-RNTI
                                                                           OPTIONAL,
       rrc-StateIndicator
                                       RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                           OPTIONAL,
    -- Core network IEs
       cn-InformationInfo
                                       CN-InformationInfo
                                                                           OPTIONAL.
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                           OPTIONAL,
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                           OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                     FrequencyInfo
                                                                           OPTIONAL,
       maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                           OPTIONAL,
        -- Note: the reference to CPCH in the element name below is incorrect. The name is not
        -- changed to keep it aligned with R99.
       ul-ChannelRequirement UL-ChannelRequirementWithCPCH-SetID-r5 OPTIONAL,
        modeSpecificInfo
                                       CHOICE {
                                           SEQUENCE {
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
               dummy
                                               DL-PDSCH-Information
                                                                          OPTIONAL
           },
           tdd
                                           NULL
       dl-HSPDSCH-Information
dl-CommonInformation
dl-Information
DL-GommonInformation-r5
dl-InformationPerRL-List
DL-InformationPerRL-List-r5
                                                                          OPTIONAL,
                                                                           OPTIONAL,
}
PhysicalChannelReconfiguration-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
       OPTIONAL,
        cipheringModeInfo
                                       CipheringModeInfo
                                                                           OPTIONAL.
        activationTime
                                       ActivationTime
                                                                           OPTIONAL,
                                     DelayRestrictionFlag
        delayRestrictionFlag
                                                                           OPTIONAL,
       new-U-RNTI
                                       U-RNTI
                                                                           OPTIONAL,
       new-C-RNTI
                                       C-RNTI
                                                                           OPTIONAL,
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
       new-DSCH-RNTI
                                      DSCH-RNTI
                                                                           OPTIONAL,
       new-H-RNTI
                                       H-RNTI
                                                                           OPTIONAL,
       newPrimary-E-RNTI
                                       E-RNTI
                                                                           OPTIONAL,
```

```
newSecondary-E-RNTI
                                      E-RNTI
                                                                            OPTIONAL,
        rrc-StateIndicator
                                       RRC-StateIndicator,
                                     UTRAN-DRX-CycleLengthCoefficient
       utran-DRX-CycleLengthCoeff
                                                                           OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                       CN-InformationInfo-r6
                                                                            OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                            OPTIONAL.
    -- Radio bearer IEs
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                            OPTIONAL,
    -- Physical channel IEs
                                       FrequencyInfo
                                                                            OPTIONAL.
       frequencyInfo
        maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                            OPTIONAL.
        ul-DPCH-Info
                                                                            OPTIONAL,
                                       III.-DPCH-Info-r6
        ul-EDCH-Information
                                      UL-EDCH-Information-r6
                                                                           OPTIONAL,
       dl-HSPDSCH-Information DL-HSPDSCH-Information-r6
dl-CommonInformation DL-CommonInformation-r6
dl-InformationPerRL-List DL-InformationPerRL-List-r6
                                                                           OPTIONAL,
                                                                           OPTIONAL,
                                                                           OPTIONAL,
    -- MBMS IEs
       mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
}
PhysicalChannelReconfiguration-v690ext-IEs ::= SEQUENCE {
     -- User Equipment IEs
       delayRestrictionFlag
                                      DelayRestrictionFlag
                                                                            OPTIONAL,
    -- Core network IEs
                                      PLMN-Identity
        primary-plmn-Identity
                                                                            OPTIONAL,
    -- Physical channel IEs
        -- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
        -- If included in the r3 or r4 version of the message, the UE should ignore the IE
                                       HARQ-Preamble-Mode
                                                                           OPTIONAL.
        harg-Preamble-Mode
        beaconPLEst
                                       BEACON-PL-Est
                                                                            OPTIONAL.
                                       ENUMERATED { true }
       postVerificationPeriod
        dhs-sync
                                       DHS-Sync
                                                                           OPTIONAL,
        timingMaintainedSynchInd
                                       {\tt TimingMaintainedSynchInd}
                                                                           OPTIONAL.
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo
                                       MBMS-PL-ServiceRestrictInfo-r6
                                                                           OPTIONAL
}
PhysicalChannelReconfiguration-r7-IEs ::= SEQUENCE \{
    -- User equipment IEs
        cipheringModeInfo
                                                                           OPTIONAL.
                                      ActivationTime
DelayRestrictionFlag
        activationTime
                                                                           OPTIONAL,
        delayRestrictionFlag
                                                                           OPTIONAL,
        new-U-RNTI
                                      U-RNTI
                                                                            OPTIONAL,
        new-C-RNTI
                                       C-RNTI
                                                                            OPTIONAL,
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
        new-DSCH-RNTI
                                       DSCH-RNTI
                                                                            OPTIONAL,
       new-H-RNTI
                                       H-RNTI
                                                                            OPTIONAL,
                                       E-RNTI
        newPrimary-E-RNTI
                                                                            OPTIONAL,
       newSecondary-E-RNTI
rrc-StateIndicator
                                       E-RNTI
                                                                            OPTIONAL,
       rrc-StateIndicator RRC-StateIndicator, utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                           OPTIONAL.
    -- Core network IEs
       cn-InformationInfo
                                       CN-InformationInfo-r6
                                                                            OPTIONAL.
    -- UTRAN mobility IEs
       ura-Identity
                                      URA-Identity
                                                                            OPTIONAL,
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                           OPTIONAL.
    -- Physical channel IEs
        frequencyInfo
                                       FrequencyInfo
                                                                            OPTIONAL,
        maxAllowedUL-TX-Power
                                      MaxAllowedUL-TX-Power
                                                                            OPTIONAL,
                                       UL-DPCH-Info-r7
        ul-DPCH-Info
                                                                            OPTIONAL,
        ul-EDCH-Information
                                       UL-EDCH-Information-r6
                                                                            OPTIONAL,
       dl-HSPDSCH-Information
dl-CommonInformation
dl-InformationPerRL-List
                                     DL-HSPDSCH-Information-r7
                                                                           OPTIONAL,
                                       DL-CommonInformation-r7
                                                                            OPTIONAL,
                                      DL-InformationPerRL-List-r7
                                                                           OPTIONAL,
    -- MBMS IEs
       mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                          OPTIONAL
}
__ ****************************
-- PHYSICAL CHANNEL RECONFIGURATION COMPLETE
```

```
PhysicalChannelReconfigurationComplete ::= SEQUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier RRC-TransactionIdentifier, ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                       OPTIONAL,
       -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
                             UL-TimingAdvance
       ul-TimingAdvance
                                                                       OPTIONAL.
   -- Radio bearer IEs
       count-C-ActivationTime
                                    ActivationTime
                                                                       OPTIONAL,
        -- dummy is not used in this version of the specification and
        -- it should be ignored by the receiver.
       dummy RB-ActivationTimeInfoList OPTIONAL, ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo OPTIONAL, laterNonCriticalExtensions SEQUENCE {
           -- Container for additional R99 extensions
           physicalChannelReconfigurationComplete-r3-add-ext
                                                              BIT STRING
                                                                              OPTIONAL,
           v7xyNonCriticalExtensions SEQUENCE {
              physicalChannelReconfigurationComplete-v7xyext
                              PhysicalChannelReconfigurationComplete-v7xyext-IEs,
                                            SEQUENCE {} OPTIONAL
               nonCriticalExtensions
              OPTIONAL
       ) OPTIONAL
PhysicalChannelReconfigurationComplete-v7xyext-IEs ::= SEQUENCE {
                                   EXT-UL-TimingAdvance
                                                                      OPTIONAL
       ext-ul-TimingAdvance
  ***********
-- PHYSICAL CHANNEL RECONFIGURATION FAILURE
__ ******************
PhysicalChannelReconfigurationFailure ::= SEQUENCE {
     - User equipment IEs
       rrc-TransactionIdentifier
                                   RRC-TransactionIdentifier
       failureCause FailureCauseWithProtErr, laterNonCriticalExtensions SEQUENCE {
           -- Container for additional R99 extensions
           physicalChannelReconfigurationFailure-r3-add-ext BIT STRING OPTIONAL,
           nonCriticalExtensions
                                  SEQUENCE { } OPTIONAL
       } OPTIONAL
__ ****************
-- PHYSICAL SHARED CHANNEL ALLOCATION (TDD only)
__ **************
PhysicalSharedChannelAllocation ::= CHOICE {
                                 SEQUENCE {
       physicalSharedChannelAllocation-r3
                                  PhysicalSharedChannelAllocation-r3-IEs,
                                     SEQUENCE {
       laterNonCriticalExtensions
           -- Container for additional R99 extensions
           physicalSharedChannelAllocation-r3-add-ext
                                                       BIT STRING
                                                                      OPTIONAL,
           nonCriticalExtensions
                                     SEQUENCE {} OPTIONAL
       } OPTIONAL
    later-than-r3
                                SEQUENCE {
                                 DSCH-RNTI
       dsch-RNTI
                                                                       OPTIONAL,
       rrc-TransactionIdentifier
                                     RRC-TransactionIdentifier,
       criticalExtensions CHOICE {
                                      SEQUENCE {
               physicalSharedChannelAllocation-r4
                                         PhysicalSharedChannelAllocation-r4-IEs,
               v4d0NonCriticalExtensions
                                            SEQUENCE {
                    - Container for adding non critical extensions after freezing REL-5
                  physicalSharedChannelAllocation-r4-add-ext BIT STRING OPTIONAL,
                   v690NonCriticalExtensions SEQUENCE {
                      physicalSharedChannelAllocation-v690ext
                      PhysicalSharedChannelAllocation-v690ext-IEs, v7xyNonCriticalExtensions SEQUENCE {
                          physicalSharedChannelAllocation-v7xyext
                                                   PhysicalSharedChannelAllocation-v7xyext-IEs,
                          nonCriticalExtensions
                                                        SEQUENCE {} OPTIONAL
```

```
OPTIONAL
                             OPTIONAL
                       OPTIONAL
           criticalExtensions
                                          SEQUENCE {}
       }
   }
}
PhysicalSharedChannelAllocation-r3-IEs ::= SEQUENCE {
   -- TABULAR: Integrity protection shall not be performed on this message.
   -- User equipment IEs
       dsch-RNTI
                                     DSCH-RNTI
                                                                         OPTIONAL.
   rrc-TransactionIdentifier RRC-TransactionIdentifier,
-- Physical channel IEs
       ul-TimingAdvance
                                     UL-TimingAdvanceControl
                                                                        OPTIONAL,
       -- TABULAR: If confirmRequest is not present, the default value "No Confirm"
        -- shall be used as specified in 10.2.25.
                               ENUMERATED {
       confirmRequest
                                         confirmPDSCH, confirmPUSCH } OPTIONAL,
       trafficVolumeReportRequest INTEGER (0..255)
                                                                         OPTIONAL,
       iscpTimeslotList
                                       TimeslotList
                                                                            OPTIONAL.
       requestPCCPCHRSCP
                                          BOOLEAN
}
PhysicalSharedChannelAllocation-r4-IEs ::= SEQUENCE {
    -- TABULAR: Integrity protection shall not be performed on this message.
   -- Physical channel IEs
       ul-TimingAdvance
                                     UL-TimingAdvanceControl-r4
       pusch-CapacityAllocationInfo PUSCH-CapacityAllocationInfo-r4 OPTIONAL, pdsch-CapacityAllocationInfo PDSCH-CapacityAllocationInfo-r4 OPTIONAL,
        -- TABULAR: If confirmRequest is not present, the default value "No Confirm"
       -- shall be used as specified in 10.2.25.
                              ENUMERATED {
       confirmRequest
       trafficVolumeReportRequest INTEGER (0..255)

TimeslotList-r4
                                         confirmPDSCH, confirmPUSCH }
                                                                         OPTIONAL.
                                                                         OPTIONAL,
                                                                         OPTIONAL,
                                    BOOLEAN
       requestPCCPCHRSCP
}
PhysicalSharedChannelAllocation-v690ext-IEs ::= SEQUENCE {
    -- Physical Channel IEs
       beaconPLEst
                                     BEACON-PL-Est
}
PhysicalSharedChannelAllocation-v7xyext-IEs ::= SEQUENCE {
                                   UL-TimingAdvanceControl-r7
PUSCH-CapacityAllocationInfo-r7
       ul-TimingAdvance
                                                                        OPTIONAL,
       pusch-CapacityAllocationInfo
                                                                        OPTIONAL,
       pdsch-CapacityAllocationInfo PDSCH-CapacityAllocationInfo-r7
                                                                        OPTIONAL
__ *******************
-- PUSCH CAPACITY REQUEST (TDD only)
__ *****************
PUSCHCapacityRequest ::= SEQUENCE {
    -- User equipment IEs
       dsch-RNTI
                                    DSCH-RNTI
                                                                         OPTIONAL,
    -- Measurement IEs
       trafficVolume TrafficVolumeMeasuredResultsList
timeslotListWithISCP
primaryCCPCH-RSCP
PrimaryCCPCH-RSCP
                                                                        OPTIONAL,
                                                                         OPTIONAL.
                                                                         OPTIONAL,
       allocationConfirmation CHOICE {
   pdschConfirmation PDSCH
   puschConfirmation PUSCH
                                     PDSCH-Identity,
PUSCH-Identity
       OPTIONAL,
           -- Container for additional R99 extensions
           puschCapacityRequest-r3-add-ext BIT STRING OPTIONAL,
           v590NonCriticalExtensions SEQUENCE {
              puschCapacityRequest-v590ext PUSCHCapacityRequest-v590ext,
                                             SEQUENCE {} OPTIONAL
               nonCriticalExtensions
           }
                  OPTIONAL
```

```
} OPTIONAL
}
PUSCHCapacityRequest-v590ext ::= SEQUENCE {
   primaryCCPCH-RSCP-delta
                                    DeltaRSCP
                                                       OPTIONAL
  *************
-- RADIO BEARER RECONFIGURATION
__ ****************************
RadioBearerReconfiguration ::= CHOICE {
                                SEQUENCE {
       radioBearerReconfiguration-r3 RadioBearerReconfiguration-r3-IEs,
       -- Prefix "v3ao" is used (in one instance) to keep alignment with R99 \,
                                  SEQUENCE {
       v3aoNonCriticalExtensions
           {\tt radioBearerReconfiguration-v3a0ext} \quad {\tt RadioBearerReconfiguration-v3a0ext} \,,
           -- Container for additional R99 extensions
               radioBearerReconfiguration-r3-add-ext BIT STRING
                                                                     OPTIONAL.
                                               SEQUENCE {
               v4b0NonCriticalExtensions
                  {\tt radioBearerReconfiguration-v4b0ext}
                                               RadioBearerReconfiguration-v4b0ext-IEs,
                                                   SEQUENCE {
                  v590NonCriticalExtensions
                      radioBearerReconfiguration-v590ext
                                               RadioBearerReconfiguration-v590ext-IEs,
                                                      SEQUENCE {
                      v5d0NonCriticalExtenstions
                          radioBearerReconfiguration-v5d0ext
                                                       RadioBearerReconfiguration-v5d0ext-IEs,
                          v690NonCriticalExtensions
                                                       SEQUENCE {
                             radioBearerReconfiguration-v690ext
                                                    RadioBearerReconfiguration-v690ext-IEs,
                                                           SEQUENCE {} OPTIONAL
                             nonCriticalExtensions
                            OPTIONAL
                          OPTIONAL
                      OPTIONAL
                  OPTIONAL
              OPTIONAL
       } OPTIONAL
   later-than-r3
                                 SEQUENCE {
                                RRC-TransactionIdentifier,
       rrc-TransactionIdentifier
       criticalExtensions
                                    CHOICE {
                                      SEQUENCE {
               {\tt radioBearerReconfiguration-r4-IEs}\,,
                                             SEQUENCE {
               v4d0NonCriticalExtensions
                  -- Container for adding non critical extensions after freezing REL-5
                  radioBearerReconfiguration-r4-add-ext BIT STRING OPTIONAL,
                                                  SEQUENCE {
                  v590NonCriticalExtensions
                      radioBearerReconfiguration-v590ext
                                               RadioBearerReconfiguration-v590ext-IEs,
                      v5d0NonCriticalExtenstions
                                                       SEQUENCE {
                          radioBearerReconfiguration-v5d0ext
                                                       RadioBearerReconfiguration-v5d0ext-IEs,
                                                       SEQUENCE {
                          v690NonCriticalExtensions
                             radioBearerReconfiguration-v690ext
                                                    RadioBearerReconfiguration-v690ext-IEs,
                             nonCriticalExtensions
                                                           SEQUENCE {} OPTIONAL
                             OPTIONAL
                         OPTIONAL
                      OPTIONAL
                  OPTIONAL
           },
           criticalExtensions
                                        CHOICE {
                                               SEQUENCE {
                  radioBearerReconfiguration-r5
                                                RadioBearerReconfiguration-r5-IEs,
                  -- Container for adding non critical extensions after freezing REL-6
                  radioBearerReconfiguration-r5-add-ext
                                                         BIT STRING OPTIONAL,
                  v5d0NonCriticalExtenstions
                                                  SEQUENCE {
                      \verb|radioBearerReconfiguration-v5d0ext-RadioBearerReconfiguration-v5d0ext-IEs|, \\
                      v690NonCriticalExtensions
                                                       SEQUENCE {
                          radioBearerReconfiguration-v690ext
                                                      RadioBearerReconfiguration-v690ext-IEs,
                          nonCriticalExtensions
                                                           SEQUENCE {}
                         OPTIONAL
                      OPTIONAL
                  }
```

```
criticalExtensions
                                                   CHOICE {
                                                           SEQUENCE {
                         radioBearerReconfiguration-r6
                                                            RadioBearerReconfiguration-r6-IEs,
                         -- Container for adding non critical extensions after freezing REL-7
                         radioBearerReconfiguration-r6-add-ext
                                                                     BIT STRING
                                                                                       OPTIONAL,
                                                               SEQUENCE {}
                         nonCriticalExtensions
                                                                              OPTIONAL
                     },
                                                       CHOICE {
                     criticalExtensions
                                                               SEQUENCE {
                         r7
                             radioBearerReconfiguration-r7
                                                                  RadioBearerReconfiguration-r7-IEs,
                             -- Container for adding non critical extensions after freezing REL-8
                             radioBearerReconfiguration-r7-add-ext
                                                                           BIT STRING
                                                                                            OPTIONAL.
                             nonCriticalExtensions
                                                                   SEQUENCE {}
                                                                                    OPTIONAL
                                                         SEQUENCE {}
                         criticalExtensions
                     }
                }
           }
       }
    }
}
RadioBearerReconfiguration-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier
                                          RRC-TransactionIdentifier,
        integrityProtectionModeInfo
                                          IntegrityProtectionModeInfo
                                                                                OPTIONAL.
        cipheringModeInfo
                                          CipheringModeInfo
                                                                                OPTIONAL,
        activationTime
                                         ActivationTime
        new-U-RNTI
                                          U-RNTI
                                                                                OPTIONAL.
        new-C-RNTI
                                         C-RNTI
                                                                                OPTIONAL.
                                         RRC-StateIndicator,
        rrc-StateIndicator
        utran-DRX-CycleLengthCoeff
                                         UTRAN-DRX-CycleLengthCoefficient
                                                                                OPTIONAL.
    -- Core network IEs
        cn-InformationInfo
                                         CN-InformationInfo
                                                                                OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                         URA-Identity
                                                                                OPTIONAL,
    -- Radio bearer IEs
        rab-InformationReconfigList RAB-InformationReconfigList
        -- NOTE: IE rb-InformationReconfigList should be optional in later versions
        -- of this message
        rb-InformationReconfigList
                                         RB-InformationReconfigList,
        rb-InformationAffectedList
                                         RB-InformationAffectedList
                                                                               OPTIONAL.
    -- Transport channel IEs
        ul-CommonTransChInfo
                                         UL-CommonTransChInfo
                                                                               OPTIONAL.
        ul-deletedTransChInfoList UL-DeletedTransChInfoList ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                               OPTIONAL,
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification, -- they should not be sent and if received they should be ignored.
        dummy
                                          CHOICE {
            fdd
                                              SEQUENCE {
                                                  CPCH-Set.ID
                dummy1
                                                  DRAC-StaticInformationList OPTIONAL
                 dummy2
            tdd
                                              NULL
        dl-DeletedTransChInfo
dl-DeletedTransChInfoList
dl-AddReconfTransChInfoList
DL-AddReconfTransChInfoList
Physical channel IFS
                                                                                OPTIONAL.
                                                                                OPTIONAL,
                                                                                OPTIONAL,
                                         DL-AddReconfTransChInfo2List
                                                                                OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                         FrequencyInfo
                                                                                OPTIONAL,
                                         MaxAllowedUL-TX-Power
        maxAllowedIII.-TX-Power
                                                                                OPTIONAL.
        ul-ChannelRequirement
                                         UL-ChannelRequirement
                                                                                OPTIONAL,
                                         CHOICE {
        modeSpecificPhysChInfo
            fdd
                                             SEQUENCE {
                 -- dummy is not used in this version of specification, it should
                \mbox{--} not be sent and if received it should be ignored.
                                                  DL-PDSCH-Information
                                                                                OPTIONAL
            },
            tdd
                                              NULL
        dl-CommonInformation
                                         DL-CommonInformation
                                                                                OPTIONAL,
        -- NOTE: IE dl-InformationPerRL-List is optional in later versions
        -- of this message
        dl-InformationPerRL-List
                                        DL-InformationPerRL-List
}
RadioBearerReconfiguration-v3a0ext ::= SEQUENCE {
    -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received the UE behaviour
```

```
-- is unspecified
    new-DSCH-RNTI
                                      DSCH-RNTI
                                                                             OPTIONAL
}
RadioBearerReconfiguration-v4b0ext-IEs ::= SEQUENCE {
     -- Physical channel IEs
        -- dummy is not used in this version of the specification, it should
        -- not be sent and if received it should be ignored.
        dummy
                                               SSDT-UL
                                                                                     OPTIONAL,
        -- The order of the RLs in IE cell-id-PerRL-List is the same as
         -- in IE DL-InformationPerRL-List included in this message
                                              CellIdentity-PerRL-List
        cell-id-PerRL-List
                                                                                    OPTIONAL
}
RadioBearerReconfiguration-v590ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                               OPTIONAL
}
RadioBearerReconfiguration-v5d0ext-IEs ::= SEQUENCE {
    --Radio Bearer IEs
        pdcp-ROHC-TargetMode
                                         PDCP-ROHC-TargetMode
                                                                                 OPTIONAL
RadioBearerReconfiguration-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                         IntegrityProtectionModeInfo
                                                                                 OPTIONAL,
                                          CipheringModeInfo
        cipheringModeInfo
        activationTime
                                          ActivationTime
                                                                                 OPTIONAL,
        new-U-RNTT
                                          II-RNTT
                                                                                 OPTIONAL,
        new-C-RNTI
                                          C-RNTI
                                                                                 OPTIONAL.
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
        new-DSCH-RNTI
                                          DSCH-RNTI
                                                                                 OPTIONAL.
                                         RRC-StateIndicator,
        rrc-StateIndicator
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                                 OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                          CN-InformationInfo
                                                                                 OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                         URA-Identity
                                                                                 OPTIONAL,
    -- Radio bearer IEs
        rab-InformationReconfigList
rb-InformationReconfigList
rb-InformationAffectedList
RB-InformationReconfigList-r4
rb-InformationAffectedList
RB-InformationAffectedList
                                                                                 OPTIONAL.
                                                                                 OPTIONAL,
                                                                                 OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo
                                          UL-CommonTransChInfo-r4
                                                                                 OPTIONAL,
        ul-deletedTransChInfoList
ul-AddReconfTransChInfoList
UL-AddReconfTransChInfoList
        ul-deletedTransChInfoList
                                                                                OPTIONAL.
                                                                                 OPTIONAL
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
        -- they should not be sent and if received they should be ignored.
                                          CHOICE {
        dummy
            fdd
                                              SEQUENCE {
                 dummy1
                                                   CPCH-SetID
                                                                                 OPTIONAL.
                                                   DRAC-StaticInformationList OPTIONAL
                 dummy2
            },
                                              NULL
            tdd
                                                                                 OPTIONAL,
        dl-CommonTransChInfo DL-CommonTransChInfo-r4
dl-DeletedTransChInfoList DL-DeletedTransChInfoList
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r4
                                                                                 OPTIONAL,
                                                                                 OPTIONAL,
                                                                                OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                          FrequencyInfo
                                                                                 OPTIONAL,
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                       UL-ChannelRequirement-r4
CHOICE {
        ul-ChannelRequirement
                                                                                 OPTIONAL,
        modeSpecificPhysChInfo
                                              SEQUENCE {
                 -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                 dummy
                                                   DL-PDSCH-Information
                                                                               OPTIONAL
            },
            tdd
                                              NIII.T.
        dl-CommonInformation
                                          DL-CommonInformation-r4
                                                                                OPTIONAL,
        dl-InformationPerRL-List
                                        DL-InformationPerRL-List-r4
}
RadioBearerReconfiguration-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
```

}

```
OPTIONAL,
         cipheringModeInfo
                                            CipheringModeInfo
                                                                                    OPTIONAL,
         activationTime
                                           ActivationTime
                                                                                    OPTIONAL,
         new-II-RNTT
                                                                                    OPTIONAL,
                                            II-RNTT
        new-C-RNTI
                                            C-RNTI
                                                                                    OPTIONAL.
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
                                            DSCH-RNTI
        new-DSCH-RNTI
                                                                                    OPTIONAL.
         new-H-RNTI
                                           H-RNTI
                                                                                    OPTIONAL,
         rrc-StateIndicator
                                           RRC-StateIndicator,
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                           CN-InformationInfo
                                                                                    OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                           URA-Identity
                                                                                    OPTIONAL,
    -- Specification mode information
         specificationMode
                                           CHOICE {
             complete
                                                SEQUENCE {
             -- Radio bearer IEs
                 rab-InformationReconfigList RAB-InformationReconfigList rb-InformationAffectedList RB-InformationAffectedList rb-PDCPContextRelocationList RB-PDCPContextRelocationList
                                                                                             OPTIONAL,
                                                                                            OPTIONAL.
                                                                                             OPTIONAL,
                                                                                            OPTIONAL,
             -- Transport channel IEs
                 ul-CommonTransChInfo
                                                    UL-CommonTransChInfo-r4
                                                                                            OPTIONAL.
                 ul-deletedTransChInfoList UL-DeletedTransChInfoList ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                 ul-deletedTransChInfoList
                                                                                            OPTIONAL,
                  -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the
                  -- specification, they should not be sent and if received they should be ignored.
                                                     CHOICE {
                 dummy
                      fdd
                                                         SEQUENCE {
                                                             CPCH-SetID
                          dummy1
                          dummy2
                                                              DRAC-StaticInformationList OPTIONAL
                      tdd
                                                         NULL
                                                                                             OPTIONAL,
                 dl-CommonTransChInfo
dl-DeletedTransChInfoList
dl-AddReconfTransChInfoList
DL-CommonTransChInfo-r4
DL-DeletedTransChInfoList-r5
DL-AddReconfTransChInfoList-r5
                                                                                             OPTIONAL,
                                                                                             OPTIONAL,
                                                                                            OPTIONAL
                                                SEQUENCE {
             -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
             -- one for the FDD only elements and one for the TDD only elements, so that one
             -- FDD/TDD choice in this level is sufficient.
                                                    CHOICE {
                 preConfigMode
                                                    PredefinedConfigIdentity,
                      predefinedConfigIdentity
                      defaultConfig
                                                        SEQUENCE {
                                                       DefaultConfigMode,
                          defaultConfigMode
                          defaultConfigIdentity
                                                             DefaultConfigIdentity-r5
                      }
                 }
             }
    -- Physical channel IEs
                                                                                   OPTIONAL,
        frequencyInfo
                                           FrequencyInfo
                                         MaxAllowedUL-TX-Power
        maxAllowedUL-TX-Power ul-ChannelRequirement
                                                                                    OPTIONAL,
                                           UL-ChannelRequirement-r5
                                                                                    OPTIONAL,
         modeSpecificPhysChInfo
                                          CHOICE {
                                                SEQUENCE {
                  -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                                                     DL-PDSCH-Information
                                                                                   OPTIONAL
             },
             tdd
                                                NULL
        dl-HSPDSCH-Information DL-HSPDSCH-Information DL-CommonInformation-r5 dl-InformationPerRL-List DL-InformationPerRL-List-r5
                                                                                   OPTIONAL.
                                                                                    OPTIONAL,
                                           DL-InformationPerRL-List-r5
                                                                                    OPTIONAL
{\tt RadioBearerReconfiguration-r6-IEs} \; ::= \; {\tt SEQUENCE} \; \{ \\
    -- User equipment IEs
        Jser equipment 125
integrityProtectionModeInfo IntegrityProtection
CipheringModeInfo
                                            IntegrityProtectionModeInfo
                                                                                    OPTIONAL,
                                                                                    OPTIONAL,
         activationTime
                                           ActivationTime
                                                                                    OPTIONAL.
        delayRestrictionFlag
                                           DelayRestrictionFlag
                                                                                    OPTIONAL,
        new-U-RNTI
                                           U-RNTI
                                                                                    OPTIONAL,
        new-C-RNTI
                                            C-RNTI
                                                                                    OPTIONAL,
```

```
-- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
         -- and if received the UE behaviour is unspecified
         new-DSCH-RNTI
                                            DSCH-RNTI
                                                                                      OPTIONAL,
         new-H-RNTI
                                            H-RNTT
                                                                                      OPTIONAL,
         newPrimary-E-RNTI
                                            E-RNTI
                                                                                      OPTIONAL,
                                           E-RNTI
         newSecondary-E-RNTI
                                                                                      OPTIONAL,
        rrc-StateIndicator RRC-StateIndicator,
utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
    -- Core network IEs
         cn-InformationInfo
                                            CN-InformationInfo-r6
                                                                                      OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                            URA-Identity
                                                                                     OPTIONAL.
    -- Specification mode information
         specificationMode
                                            CHOICE {
             complete
                                               SEQUENCE {
             -- Radio bearer IEs
                 rab-InformationReconfigList
rb-InformationReconfigList
rb-InformationAffectedList
RB-InformationReconfigList-r6
RB-InformationAffectedList-r6
                                                                                               OPTIONAL,
                                                                                              OPTIONAL,
                 rb-PDCPContextRelocationList
pdcp-ROHC-TargetMode

RB-PDCPContextRelocationList
pdcp-ROHC-TargetMode

RB-PDCP-ROHC-TargetMode
                                                                                               OPTIONAL,
                                                                                               OPTIONAL,
             -- Transport channel IEs
                  ul-CommonTransChInfo
                                                     UL-CommonTransChInfo-r4
                                                                                              OPTIONAL,
                 ul-CommonTransChInfoUL-CommonTransChInfo-r4ul-deletedTransChInfoListUL-DeletedTransChInfoList-r6ul-AddReconfTransChInfoListUL-AddReconfTransChInfoList-r6dl-CommonTransChInfoDL-CommonTransChInfo-r4dl-DeletedTransChInfoListDL-DeletedTransChInfoList-r5dl-AddReconfTransChInfoListDL-AddReconfTransChInfoList-r5
                                                     UL-AddreconfTransChInfoList-r6 OPTIONAL.

DL-CommonTransChInfo...4
                                                                                              OPTIONAL,
                                                 SEQUENCE {
             preconfiguration
              -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
             -- one for the FDD only elements and one for the TDD only elements, so that one
             -- FDD/TDD choice in this level is sufficient.
                          aultConfig SEQUENCE {
defaultConfigIdentity
defaultConfigIdentity

DefaultConfigMode,
DefaultConfigTdentity
                  preConfiqMode
                      predefinedConfigIdentity
                      defaultConfig
                                                              DefaultConfigIdentity-r6
                      }
                 }
             }
    -- Physical channel IEs
         frequencyInfo
                                            FrequencyInfo
                                                                                     OPTIONAL,
         maxAllowedUL-TX-Power
                                          MaxAllowedUL-TX-Power
                                                                                     OPTIONAL,
         ul-DPCH-Info
                                            UL-DPCH-Info-r6
                                                                                      OPTIONAL,
                                           UL-EDCH-Information-r6
         ul-EDCH-Information
                                                                                     OPTIONAL.
                                        DL-HSPDSCH-Information-r6
DL-CommonInformation-r6
         dl-HSPDSCH-Information
                                                                                     OPTIONAL,
         dl-CommonInformation
                                                                                     OPTIONAL,
        dl-InformationPerRL-List DL-InformationPerRL-List-r6
                                                                                     OPTIONAL,
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo
                                            MBMS-PL-ServiceRestrictInfo-r6
                                                                                     OPTIONAL
}
RadioBearerReconfiguration-v690ext-IEs ::= SEQUENCE {
    -- User Equipment IEs
                                           DelayRestrictionFlag
        delayRestrictionFlag
                                                                                      OPTIONAL,
    -- Core network IEs
        primary-plmn-Identity
                                       PLMN-Identity
                                                                                     OPTIONAL,
    -- Physical channel IEs
         -- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
         -- If included in the r3 or r4 version of the message, the UE should ignore the IE
         harq-Preamble-Mode
                                            HARQ-Preamble-Mode
         beaconPLEst
                                            BEACON-PL-Est
                                                                                     OPTIONAL,
         postVerificationPeriod
                                            ENUMERATED { true }
                                                                                     OPTIONAL.
         dhs-sync
                                            DHS-Sync
                                                                                     OPTIONAL.
         timingMaintainedSynchInd
                                            TimingMaintainedSynchInd
                                                                                     OPTIONAL,
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                    OPTIONAL
}
RadioBearerReconfiguration-r7-IEs ::= SEQUENCE {
    -- User equipment IEs
         OPTIONAL,
         cipheringModeInfo
                                            CipheringModeInfo
                                                                                      OPTIONAL,
         activationTime
                                            ActivationTime
         delayRestrictionFlag
                                            DelayRestrictionFlag
                                                                                     OPTIONAL,
         new-U-RNTI
                                            U-RNTI
                                                                                      OPTIONAL,
```

}

```
new-C-RNTI
                                                         C-RNTI
                                                                                                             OPTIONAL,
           -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
           -- and if received the UE behaviour is unspecified
                                                       DSCH-RNTI
           new-DSCH-RNTT
                                                                                                             OPTIONAL,
           new-H-RNTI
                                                         H-RNTI
                                                                                                              OPTIONAL,
           newPrimary-E-RNTI
                                                        E-RNTI
          newSecondary-E-RNTI E-RNTI
rrc-StateIndicator RRC-StateIndicator,
utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
Core network IEs
                                                                                                             OPTIONAL.
                                                                                                             OPTIONAL,
     -- Core network IEs
           cn-InformationInfo
                                                       CN-InformationInfo-r6
                                                                                                             OPTIONAL,
     -- UTRAN mobility IEs
                                                       URA-Identity
           ura-Identity
                                                                                                             OPTIONAL.
     -- Specification mode information
           {\tt specificationMode} \qquad \qquad {\tt CHOICE} \ \big\{
                                                        SEQUENCE {
                complete
                 -- Radio bearer IEs
                      Radio bearer IEs

rab-InformationReconfigList RAB-InformationReconfigList OPTIONAL,
rb-InformationReconfigList RB-InformationReconfigList-r6 OPTIONAL,
rb-InformationAffectedList RB-InformationAffectedList-r6 OPTIONAL,
rb-PDCPContextRelocationList RB-PDCPContextRelocationList OPTIONAL,

DDCP-ROHC-TargetMode OPTIONAL,
                      pdcp-ROHC-TargetMode
                                                                  PDCP-ROHC-TargetMode
                                                                                                                        OPTIONAL,
                 -- Transport channel IEs
                      ul-CommonTransChInfo UL-CommonTransChInfo-r4 OPTIONAL, ul-deletedTransChInfoList UL-DeletedTransChInfoList-r6 OPTIONAL, ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList-r6 OPTIONAL, dl-CommonTransChInfo DL-CommonTransChInfo-r4 OPTIONAL, dl-DeletedTransChInfoList DL-DeletedTransChInfoList-r5 OPTIONAL, dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r5 OPTIONAL
                 },
                 preconfiguration
                                                              SEQUENCE {
                 -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
                 -- one for the FDD only elements and one for the TDD only elements, so that one
                 -- \mbox{FDD/TDD} choice in this level is sufficient.
                                                                CHOICE {
                      preConfigMode
                            predefinedConfigIdentity
defaultConfig
defaultConfigMode
defaultConfigIdentity
DefaultConfigMode,
DefaultConfigIdentity-r6
                            }
                      }
                }
          rrequencyInfo FrequencyInfo
maxAllowedUL-TX-Power MaxAllowedUL-TX-Power
ul-DPCH-Info UL-DPCH-Info-r7
ul-EDCH-Information UL-EDCH-Information-r6
dl-HSPDSCH-Information DL-HSPDSCH-Information-r7
dl-CommonInformation DL-CommonInformation-r7
dl-InformationPerRL-List DL-InformationPerRI-T.ight-m7

MBMS IES
     -- Physical channel IEs
                                                                                                           OPTIONAL,
                                                                                                             OPTIONAL.
                                                                                                             OPTIONAL.
                                                                                                            OPTIONAL,
                                                        DL-InformationPerRL-List-r7
                                                                                                             OPTIONAL,
     -- MBMS TES
           mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                                            OPTIONAL
-- RADIO BEARER RECONFIGURATION COMPLETE
__ ****************
RadioBearerReconfigurationComplete ::= SEQUENCE {
     -- User equipment IEs
          rrc-TransactionIdentifier RRC-TransactionIdentifier,
ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                                                             OPTIONAL.
           -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
           ul-TimingAdvance
                                                        UL-TimingAdvance
                                                                                                              OPTIONAL,
     -- Radio bearer IEs
           count-C-ActivationTime
                                                       ActivationTime
                                                                                                             OPTIONAL.
           -- dummy is not used in this version of the specification and
           -- it should be ignored by the receiver.
           dummy RB-ActivationTimeInfoList
ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo
laterNonCriticalExtensions SEQUENCE {
                                                                                                             OPTIONAL,
                                                                                                           OPTIONAL,
                 -- Container for additional R99 extensions
                 radioBearerReconfigurationComplete-r3-add-ext BIT STRING OPTIONAL, v7xyNonCriticalExtensions SEQUENCE {
                      radioBearerReconfigurationComplete-v7xyext
```

```
RadioBearerReconfigurationComplete-v7xyext-IEs,
                                                     SEQUENCE {} OPTIONAL
                 nonCriticalExtensions
                 OPTIONAL
             OPTIONAL
         }
RadioBearerReconfigurationComplete-v7xyext-IEs ::= SEQUENCE {
                                           EXT-UL-TimingAdvance
                                                                                 OPTIONAL
        ext-ul-TimingAdvance
  ***************
-- RADIO BEARER RECONFIGURATION FAILURE
__ ****************
RadioBearerReconfigurationFailure ::= SEOUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier RRC-TransactionIdentifier,
        failureCause
                                           FailureCauseWithProtErr,
    -- Radio bearer IEs
        {\tt potentiallySuccesfulBearerList} \quad {\tt RB-IdentityList}
                                                                                  OPTIONAL,
         laterNonCriticalExtensions
                                           SEQUENCE {
             -- Container for additional R99 extensions
                                                                BIT STRING
             radioBearerReconfigurationFailure-r3-add-ext
                                                                                       OPTIONAL.
                                                SEQUENCE {} OPTIONAL
             nonCriticalExtensions
         } OPTIONAL
}
__ ****************
-- RADIO BEARER RELEASE
__ ****************
RadioBearerRelease ::= CHOICE {
                                 SEQUENCE {
        radioBearerRelease-r3 RadioBearerRelease-r3-IEs,
v3a0NonCriticalExtensions SEQUENCE {
    radioBearerRelease-v3a0ext
laterNonCriticalExtensions SEQUENCE {
    SEQUENCE {
             -- Container for additional R99 extensions
             radioBearerRelease-r3-add-ext BIT STRING OPTIONAL,
v4b0NonCriticalExtensions SEQUENCE {
    radioBearerRelease-v4b0ext
    v590NonCriticalExtensions SEQUENCE {

                          ONONCriticalExtensions SEQUENCE {
radioBearerRelease-v590ext
r690NonCriticalExtensions SEQUENCE {
                              radioBearerRelease-v690ext RadioBearerRelease-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                                  OPTIONAL
                          OPTIONAL
                      OPTIONAL
                 OPTIONAL
        } OPTIONAL
                                       SEQUENCE {
    later-than-r3
        rrc-TransactionIdentifier RRC-TransactionIdentifier, criticalExtensions CHOICE {
                 Lextensions CHOICE {
SEQUENCE {
radioBearerRelease-r4 RadioBearerRelease-r4-IEs,
v4d0NonCriticalExtensions SEQUENCE {
             r4
                      -- Container for adding non critical extensions after freezing REL-5
                      radioBearerRelease-r4-add-ext BIT STRING OPTIONAL,
                      v590NonCriticalExtensions
                                                         SEQUENCE {
                          radioBearerRelease-v590ext RadioBearerRelease-v590ext-IEs, v690NonCriticalExtensions SEQUENCE {
                              radioBearerRelease-v690ext RadioBearerRelease-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                              OPTIONAL
                          OPTIONAL
                    OPTIONAL
             criticalExtensions
                                              CHOICE {
                      radioBearerRelease-r5 SEQUENCE {
                                                        RadioBearerRelease-r5-IEs,
                      -- Container for adding non critical extensions after freezing REL-6
                      radioBearerRelease-r5-add-ext BIT STRING OPTIONAL,
```

```
v690NonCriticalExtensions
                                                    SEQUENCE {
                                                        RadioBearerRelease-v690ext-IEs,
                        radioBearerRelease-v690ext
                                                        SEQUENCE {}
                        nonCriticalExtensions
                                                                       OPTIONAL
                        OPTIONAL
                },
                criticalExtensions
                                                CHOICE {
                                                   SEQUENCE {
                    r6
                        radioBearerRelease-r6
                                                        RadioBearerRelease-r6-IEs,
                         -- Container for adding non critical extensions after freezing REL-7
                        radioBearerRelease-r6-add-ext BIT STRING
                                                                        OPTIONAL,
                        nonCriticalExtensions
                                                        SEQUENCE {}
                                                                        OPTIONAL
                    },
                    criticalExtensions
                                                    CHOICE {
                                                        SEQUENCE {
                        r7
                            radioBearerRelease-r7
                                                            RadioBearerRelease-r7-IEs,
                             - Container for adding non critical extensions after freezing REL-8
                            radioBearerRelease-r7-add-ext BIT STRING
                                                            SEQUENCE {}
                            nonCriticalExtensions
                                                                            OPTIONAL
                                                      SEQUENCE {}
                        criticalExtensions
                    }
                }
           }
       }
    }
}
RadioBearerRelease-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier
                                        RRC-TransactionIdentifier,
        integrityProtectionModeInfo
                                       IntegrityProtectionModeInfo
                                                                             OPTIONAL,
        cipheringModeInfo
                                        CipheringModeInfo
                                                                             OPTIONAL,
        activationTime
                                        ActivationTime
                                                                             OPTIONAL,
        new-U-RNTI
                                        II-RNTT
                                                                             OPTIONAL,
        new-C-RNTI
                                        C-RNTI
                                                                             OPTIONAL,
        rrc-StateIndicator
                                       RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff
                                        UTRAN-DRX-CycleLengthCoefficient
                                                                            OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                        CN-InformationInfo
                                                                             OPTIONAL,
        signallingConnectionRelIndication CN-DomainIdentity
                                                                             OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                        URA-Identity
                                                                             OPTIONAL.
    -- Radio bearer IEs
        rab-InformationReconfigList RAB-InformationReconfigList
                                                                             OPTIONAL,
       rb-InformationReleaseList RB-InformationReleaseList, rb-InformationAffectedList RB-InformationAffectedList
                                                                             OPTIONAL,
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                            OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo
                                       UL-CommonTransChInfo
                                                                             OPTIONAL,
        ul-deletedTransChInfoList
                                        UL-DeletedTransChInfoList
                                                                             OPTIONAL.
        ul-AddReconfTransChInfoList
                                       UL-AddReconfTransChInfoList
                                                                             OPTIONAL.
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
        -- they should not be sent and if received they should be ignored.
        dummy
                                        CHOICE {
            fdd
                                            SEQUENCE {
                dummv1
                                                CPCH-Set ID
                                                                             OPTIONAL.
                dummy2
                                                DRAC-StaticInformationList OPTIONAL
            },
            tdd
                                            NULL
                                                                             OPTIONAL.
        dl-CommonTransChInfo
                                        DL-CommonTransChInfo
                                                                             OPTIONAL.
       dl-AddReconfTransChInfoList
                                       DL-DeletedTransChInfoList
                                                                             OPTIONAL.
                                        DL-AddReconfTransChInfo2List
                                                                             OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                        FrequencyInfo
                                                                             OPTIONAL,
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                                                             OPTIONAL,
        ul-ChannelRequirement
                                        UL-ChannelRequirement
                                                                             OPTIONAL,
        modeSpecificPhysChInfo
                                        CHOICE {
            fdd
                                           SEQUENCE {
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                                                DL-PDSCH-Information
                dummy
                                                                            OPTIONAL
            },
            tdd
                                        NULL
        dl-CommonInformation
                                        DL-CommonInformation
                                                                             OPTIONAL,
        dl-InformationPerRL-List
                                       DL-InformationPerRL-List
                                                                             OPTIONAL
}
```

```
RadioBearerRelease-v3a0ext ::= SEQUENCE {
    -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received the UE behaviour
    -- is unspecified
    new-DSCH-RNTI
                                        DSCH-RNTT
                                                                                 OPTIONAL
}
RadioBearerRelease-v4b0ext-IEs ::= SEOUENCE {
     -- Physical channel IEs
         -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
         dummy
                                                 SSDT-UL
                                                                                          OPTIONAL.
         -- The order of the RLs in IE cell-id-PerRL-List is the same as
         -- in IE DL-InformationPerRL-List included in this message
         cell-id-PerRL-List
                                                 CellIdentity-PerRL-List
                                                                                          OPTIONAL
}
RadioBearerRelease-v590ext-IEs ::= SEQUENCE {
     -- Physical channel IEs
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                                    OPTIONAL
}
RadioBearerRelease-r4-IEs ::= SEQUENCE {
      - User equipment IEs
         integrityProtectionModeInfo
                                             IntegrityProtectionModeInfo
                                                                                      OPTIONAL.
         cipheringModeInfo
                                             CipheringModeInfo
                                                                                      OPTIONAL,
         activationTime
                                             ActivationTime
                                                                                      OPTIONAL,
         new-U-RNTI
                                             U-RNTI
                                                                                      OPTIONAL,
        new-C-RNTI
                                             C-RNTI
                                                                                      OPTIONAL,
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
                               DSCH-RNTI
         new-DSCH-RNTI
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
Core network IEs
cn-InformationInfo CN Information
    -- Core network IEs
         signallingConnectionRelIndication CN-DomainIdentity
                                                                                      OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                            URA-Identity
                                                                                      OPTIONAL,
    -- Radio bearer IEs
        rab-InformationReconfigList RAB-InformationReconfigList rb-InformationReleaseList RB-InformationReleaseList, rb-InformationAffectedList RB-InformationAffectedList dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                                     OPTIONAL.
                                                                                     OPTIONAL,
    -- Transport channel IEs
         ul-CommonTransChInfo UL-CommonTransChInfo-r4
ul-deletedTransChInfoList UL-DeletedTransChInfoList
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                      OPTIONAL,
                                                                                     OPTIONAL.
                                                                                     OPTIONAL
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
                                            CHOICE {
         dummy
                                                 SEQUENCE {
             fdd
                  dummy1
                                                      CPCH-SetID
                                                                                      OPTIONAL.
                                                      DRAC-StaticInformationList OPTIONAL
                  dummy2
             },
                                                 NULL
             tdd
        dl-DeletedTransChInfo DL-CommonTransChInfo-r4
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList
                                                                                      OPTIONAL,
                                                                                     OPTIONAL,
                                                                                     OPTIONAL.
                                            DL-AddReconfTransChInfoList-r4
                                                                                     OPTIONAL,
    -- Physical channel IEs
         frequencyInfo
                                             FrequencyInfo
                                                                                      OPTIONAL,
        maxAllowedUL-TX-Power
ul-ChannelRequirement
modeSpecificPhysChInfo

MaxAllowedUL-TX-Power
UL-ChannelRequirement-r4
CHOICE {
                                                                                     OPTIONAL,
                                                                                     OPTIONAL,
                                                 SEQUENCE {
                  -- dummy is not used in this version of specification, it should
                  -- not be sent and if received it should be ignored.
                  dummy
                                                      DL-PDSCH-Information
                                                                                    OPTIONAL
             },
             t dd
                                             NULL
         dl-CommonInformation
                                             DL-CommonInformation-r4
                                                                                     OPTIONAL,
                                          DL-InformationPerRL-List-r4
         dl-InformationPerRL-List
                                                                                    OPTIONAL
}
RadioBearerRelease-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
```

```
integrityProtectionModeInfo
                                       IntegrityProtectionModeInfo
                                                                             OPTIONAL,
        cipheringModeInfo
                                        CipheringModeInfo
                                                                             OPTIONAL,
        activationTime
                                        ActivationTime
                                                                             OPTIONAL,
        new-II-RNTT
                                        II-RNTT
                                                                             OPTIONAL,
        new-C-RNTI
                                        C-RNTI
                                                                             OPTIONAL,
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
        new-DSCH-RNTI
                                        DSCH-RNTI
                                                                             OPTIONAL.
        new-H-RNTI
                                        H-RNTI
                                                                             OPTIONAL,
        rrc-StateIndicator
                                        RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                             OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                        CN-InformationInfo
                                                                             OPTIONAL.
        signallingConnectionRelIndication CN-DomainIdentity
                                                                             OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                        URA-Identity
                                                                             OPTIONAL,
    -- Radio bearer IEs
        rab-InformationReconfigList rb-InformationReleaseList rb-InformationAffectedList RB-InformationAffectedList-r
                                                                             OPTIONAL,
                                        RB-InformationAffectedList-r5
                                                                             OPTIONAL,
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                             OPTIONAL,
    -- Transport channel IEs
        ul-AddReconfTransChInfoList
-- 'dummv' 'damma'.
                                                                             OPTIONAL,
                                        UL-AddReconfTransChInfoList
                                                                             OPTIONAL.
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
        -- they should not be sent and if received they should be ignored.
        dummy
                                        CHOICE {
            fdd
                                            SEQUENCE {
                                                CPCH-Set ID
                dummy1
                                                                             OPTIONAL.
                dummy2
                                                 DRAC-StaticInformationList OPTIONAL
            },
            tdd
                                            NULL
       dl-DeletedTransChInfo

dl-AddReconfTransChInfoList

DL-AddReconfTransChInfoList

Physical channel TE-
                                                                             OPTIONAL,
                                                                             OPTIONAL,
                                        DL-DeletedTransChInfoList-r5
                                                                             OPTIONAL.
                                        DL-AddReconfTransChInfoList-r5
                                                                             OPTIONAL.
    -- Physical channel IEs
        frequencyInfo
                                        FrequencyInfo
                                                                             OPTIONAL,
        maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
        ul-ChannelRequirement
                                        UL-ChannelRequirement-r5
                                                                             OPTIONAL,
                                        CHOICE {
        modeSpecificPhysChInfo
                                            SEQUENCE {
            fdd
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                dummy
                                                DL-PDSCH-Information
                                                                             OPTIONAL
            },
            tdd
                                        NULL
        dl-HSPDSCH-Information
                                      DL-HSPDSCH-Information
                                                                            OPTIONAL,
        dl-CommonInformation
                                        DL-CommonInformation-r5
                                                                            OPTIONAL.
        dl-InformationPerRL-List
                                       DL-InformationPerRL-List-r5
                                                                            OPTIONAL
}
RadioBearerRelease-v690ext-IEs ::= SEQUENCE {
    -- Core network IEs
       primary-plmn-Identity
                                       PLMN-Identity
                                                                             OPTIONAL,
    -- Physical channel IEs
       -- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
        -- If included in the r3 or r4 version of the message, the UE should ignore the IE
                                        HARQ-Preamble-Mode
        harg-Preamble-Mode
                                                                             OPTIONAL.
        beaconPLEst
                                        BEACON-PL-Est
                                                                             OPTIONAL,
                                        ENUMERATED { true }
        postVerificationPeriod
                                                                             OPTIONAL,
        dhs-sync
                                        DHS-Sync
                                                                             OPTIONAL.
        timingMaintainedSynchInd
                                        TimingMaintainedSynchInd
                                                                             OPTIONAL.
    -- MBMS TES
        mbms-PL-ServiceRestrictInfo
                                        MBMS-PL-ServiceRestrictInfo-r6
                                                                            OPTIONAL,
        mbms-RB-ListReleasedToChangeTransferMode
                                        RB-InformationReleaseList
                                                                             OPTIONAL
}
RadioBearerRelease-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
       integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                             OPTIONAL,
        cipheringModeInfo
                                        CipheringModeInfo
                                                                             OPTIONAL,
        activationTime
                                        ActivationTime
                                                                             OPTIONAL,
       new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL.
        new-C-RNTI
                                        C-RNTT
                                                                             OPTIONAL.
```

-- The IE 'new-DSCH-RNTI' should not be included in FDD mode,

```
-- and if received the UE behaviour is unspecified
             new-DSCH-RNTI
                                                                   DSCH-RNTI
                                                                                                                                   OPTIONAL,
             new-H-RNTI
                                                                    H-RNTT
                                                                                                                                   OPTIONAL,
             newPrimary-E-RNTI
                                                                    E-RNTI
                                                                                                                                   OPTIONAL,
             newSecondary-E-RNTI
                                                                   E-RNTI
                                                                                                                                   OPTIONAL,
             Thinkel, and the second state of the second 
       -- Core network IEs
              cn-InformationInfo
                                                                    CN-InformationInfo-r6
              signallingConnectionRelIndication CN-DomainIdentity
                                                                                                                                   OPTIONAL,
       -- UTRAN mobility IEs
             ura-Identity
                                                                    URA-Identity
                                                                                                                                   OPTIONAL.
             Radio bearer IEs
rab-InformationReconfigList RAB-InformationReconfigList,
RB-InformationReleaseList,
       -- Radio bearer IEs
                                                                   RAB-InformationReconfigList
                                                                                                                                  OPTIONAL,
             rb-InformationReceaseList RB-InformationReleaseList,
rb-InformationAffectedList RB-InformationAffectedList RB-InformationAffectedList and RB-InformationReleaseList.
                                                                                                                               OPTIONAL,
                                                                                                                                  OPTIONAL,
             dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5 OPTIONAL,
       -- Transport channel IEs
                                                                   UL-CommonTransChInfo-r4
             ul-CommonTransChInfo
                                                                                                                                   OPTIONAL.
              ul-deletedTransChInfoList UL-DeletedTransChInfoList-r6
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList-r6
dl-CommonTransChInfo DL-CommonTransChInfo-r4
                                                                                                                                  OPTIONAL,
                                                                    UL-AddReconfTransChInfoList-r6
                                                                                                                                   OPTIONAL,
                                                                                                                                  OPTIONAL.
                                                                    DL-DeletedTransChInfoList-r5
              dl-DeletedTransChInfoList
                                                                                                                                   OPTIONAL.
             dl-AddReconfTransChInfoList
                                                                    DL-AddReconfTransChInfoList-r5
                                                                                                                                   OPTIONAL,
       -- Physical channel IEs
              frequencyInfo
                                                                    FrequencyInfo
                                                                                                                                   OPTIONAL,
             maxAllowedUL-TX-Power
                                                                   MaxAllowedUL-TX-Power
                                                                                                                                  OPTIONAL,
                                                                                                                                   OPTIONAL,
              ul-DPCH-Info
                                                                    UL-DPCH-Info-r6
              ul-EDCH-Information
                                                                    UL-EDCH-Information-r6
                                                                                                                                   OPTIONAL,
              dl-HSPDSCH-Information
                                                                 DL-HSPDSCH-Information-r6
              dl-CommonInformation
                                                                    DL-CommonInformation-r6
                                                                                                                                   OPTIONAL,
             dl-InformationPerRL-List
                                                                    DL-InformationPerRL-List-r6
                                                                                                                                  OPTIONAL.
       -- MBMS IEs
             mbms-PL-ServiceRestrictInfo
                                                                   MBMS-PL-ServiceRestrictInfo-r6
             mbms-RB-ListReleasedToChangeTransferMode
                                                                    RB-InformationReleaseList
                                                                                                                                   OPTIONAL
}
RadioBearerRelease-r7-IEs ::= SEQUENCE {
       -- User equipment IEs
              integrityProtectionModeInfo
                                                                   IntegrityProtectionModeInfo
                                                                                                                                   OPTIONAL.
             cipheringModeInfo
                                                                     CipheringModeInfo
                                                                                                                                   OPTIONAL,
              activationTime
                                                                    ActivationTime
                                                                                                                                   OPTIONAL,
             new-U-RNTI
                                                                    U-RNTI
                                                                                                                                   OPTIONAL,
             new-C-RNTI
                                                                    C-RNTI
                                                                                                                                   OPTIONAL.
              -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
              -- and if received the UE behaviour is unspecified
             new-DSCH-RNTI
                                                                DSCH-RNTI
                                                                                                                                   OPTIONAL,
             new-H-RNTI
                                                                    H-RNTI
                                                                                                                                   OPTIONAL,
             newPrimary-E-RNTI
                                                                   E-RNTT
                                                                                                                                   OPTIONAL.
             newSecondary-E-RNTI
                                                                  E-RNTI
                                                                                                                                   OPTIONAL,
             utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
Core network IEs
                                                                                                                                  OPTIONAL,
       -- Core network IEs
              cn-InformationInfo
                                                                    CN-InformationInfo-r6
                                                                                                                                   OPTIONAL,
              signallingConnectionRelIndication CN-DomainIdentity
                                                                                                                                   OPTIONAL,
       -- UTRAN mobility IEs
             ura-Identity
                                                                    URA-Identity
                                                                                                                                   OPTIONAL.
       -- Radio bearer IEs
             rab-InformationReconfigList rb-InformationReleaseList RB-InformationReleaseList,
                                                                                                                                   OPTIONAL,
             rb-InformationReleaseList
rb-InformationReconfigList
rb-InformationAffectedList
                                                                   RB-InformationReconfigList-r6
                                                                                                                                  OPTIONAL,
                                                                                                                                   OPTIONAL,
                                                                    RB-InformationAffectedList-r6
              dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                                                                                  OPTIONAL,
       -- Transport channel IEs
             ul-CommonTransChInfo
                                                                    UL-CommonTransChInfo-r4
                                                                                                                                   OPTIONAL,
             ul-deletedTransChInfoList
ul-AddReconfTransChInfoList
              ul-deletedTransChInfoList
                                                                   UL-DeletedTransChInfoList-r6
                                                                                                                                   OPTIONAL,
                                                                   UL-AddReconfTransChInfoList-r6
                                                                                                                                   OPTIONAL,
              dl-CommonTransChInfo
                                                                   DL-CommonTransChInfo-r4
                                                                                                                                   OPTIONAL,
                                                                    DL-DeletedTransChInfoList-r5
              dl-DeletedTransChInfoList
                                                                                                                                   OPTIONAL,
             dl-AddReconfTransChInfoList
                                                                    DL-AddReconfTransChInfoList-r5
                                                                                                                                  OPTIONAL,
       -- Physical channel IEs
              frequencyInfo
                                                                    FrequencyInfo
                                                                                                                                   OPTIONAL,
                                                                   MaxAllowedUL-TX-Power
              maxAllowedUL-TX-Power
              ul-DPCH-Info
                                                                    UL-DPCH-Info-r7
                                                                                                                                   OPTIONAL.
              ul-EDCH-Information
                                                                    UL-EDCH-Information-r6
                                                                                                                                   OPTIONAL,
```

```
dl-HSPDSCH-Information DL-HSPDSCH-Information-r7
dl-CommonInformation DL-CommonInformation-r7
dl-InformationPerRL-List DL-InformationPerRL-List-r7
                                                                                   OPTIONAL,
                                                                                   OPTIONAL,
                                                                                   OPTIONAL,
    -- MBMS IEs
        mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                   OPTIONAL,
        {\tt mbms-RB-ListReleasedToChangeTransferMode}
                                           RB-InformationReleaseList
                                                                                   OPTIONAL
}
__ ******************
-- RADIO BEARER RELEASE COMPLETE
__ ******************************
RadioBearerReleaseComplete ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier RRC-TransactionIdentifier, ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                                  OPTIONAL.
         -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
        ul-TimingAdvance
                                   UL-TimingAdvance
                                                                                   OPTIONAL,
    -- Radio bearer IEs
                                     ActivationTime
        count-C-ActivationTime
                                                                                   OPTIONAL,
         -- dummy is not used in this version of the specification and
         -- it should be ignored by the receiver.
                                          RB-ActivationTimeInfoList
        dummy
                                                                                  OPTIONAL,
        ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo laterNonCriticalExtensions SEQUENCE {
                                                                                 OPTIONAL,
             -- Container for additional R99 extensions
                                                            BIT STRING OPTIONAL,
             radioBearerReleaseComplete-r3-add-ext
             v7xyNonCriticalExtensions SEQUENCE {
                 radioBearerReleaseComplete-v7xyext
                                                    RadioBearerReleaseComplete-v7xyext-IEs,
                                                    SEQUENCE {} OPTIONAL
                 nonCriticalExtensions
             } OPTIONAL
             OPTIONAL
}
{\tt RadioBearerReleaseComplete-v7xyext-IEs} \ ::= \ {\tt SEQUENCE} \ \big\{
        ext-ul-TimingAdvance EXT-UL-TimingAdvance
                                                                                  OPTIONAL
__ ****************
-- RADIO BEARER RELEASE FAILURE
__ **************************
RadioBearerReleaseFailure ::= SEQUENCE {
        User equipment IEs

rrc-TransactionIdentifier RRC-TransactionIdentifier,

foilureCause FailureCauseWithProtErr,
    -- User equipment IEs
    -- Radio bearer IEs
        potentiallySuccesfulBearerList RB-IdentityList laterNonCriticalExtensions SEQUENCE {
                                                                                  OPTIONAL.
             -- Container for additional R99 extensions
                                                             BIT STRING
                                                                             OPTIONAL,
             radioBearerReleaseFailure-r3-add-ext
             nonCriticalExtensions
                                              SEQUENCE {} OPTIONAL
        } OPTIONAL
}
__ ******************
-- RADIO BEARER SETUP
__ **************
RadioBearerSetup ::= CHOICE {
        SEQUENCE {
radioBearerSetup-r3 RadioBearerSetup-r3-IEs,
v3a0NonCriticalExtensions SEQUENCE {
radioBearerSetup-v3a0ext RadioBearerSetup-v3a0ext,
laterNonCriticalExtensions SEQUENCE {
                 -- Container for additional R99 extensions
                 radioBearerSetup-r3-add-ext BIT STRING OPTIONAL, v4b0NonCriticalExtensions SEQUENCE { RadioBearerSetup-v4b0ext-IEs, v590NonCriticalExtensions SEQUENCE {
```

RadioBearerSetup-v590ext-IEs,

radioBearerSetup-v590ext

```
SEQUENCE {
                        v5d0NonCriticalExtenstions
                            radioBearerSetup-v5d0ext
                                                             RadioBearerSetup-v5d0ext-IEs,
                             v690NonCriticalExtensions
                                                             SEQUENCE {
                                radioBearerSetup-v690ext
                                                                 RadioBearerSetup-v690ext-IEs,
                                nonCriticalExtensions
                                                                  SEQUENCE {} OPTIONAL
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
                    OPTIONAL
                ÓPTIONAL
            OPTIONAL
    later-than-r3
                                     SEQUENCE {
        rrc-TransactionIdentifier
                                        RRC-TransactionIdentifier,
        criticalExtensions
                                         CHOICE {
                                            SEQUENCE {
            r4
                radioBearerSetup-r4
                                                 RadioBearerSetup-r4-IEs,
                v4d0NonCriticalExtensions
                                                 SEQUENCE {
                    -- Container for adding non critical extensions after freezing REL-5
                    radioBearerSetup-r4-add-ext BIT STRING v590NonCriticalExtensions SEQUENCE {
                                                                     OPTIONAL,
                        radioBearerSetup-v590ext
                        v5d0NonCriticalExtenstions
                                                         RadioBearerSetup-v590ext-IEs,
                                                         SEQUENCE {
                            v690NonCriticalExtensions SEOUENCE (
radioBearerSetup-v5d0ext | RadioBearerSetup-v5d0ext-IEs,
SEOUENCE (
                                 radioBearerSetup-v690ext
                                                              RadioBearerSetup-v690ext-IEs,
                                                                  SEQUENCE {}
                                nonCriticalExtensions
                                                                                  OPTIONAL
                                OPTIONAL
                            OPTIONAL.
                        OPTIONAL
                    OPTIONAL
                }
            },
            criticalExtensions
                                             CHOICE {
                                                 SEQUENCE {
                r5
                    radioBearerSetup-r5
                                                    RadioBearerSetup-r5-IEs,
                    -- Container for adding non critical extensions after freezing REL-6
                    radioBearerSetup-r5-add-ext BIT STRING v5d0NonCriticalExtenstions SEQUENCE {
                                                                  OPTIONAL,
                                                     RadioBearerSetup-v5d0ext-IEs,
                        radioBearerSetup-v5d0ext
                                                         SEQUENCE {
                        v690NonCriticalExtensions
                                                          RadioBearerSetup-v690ext-IEs,
                            radioBearerSetup-v690ext
                                                             SEQUENCE {}
                             nonCriticalExtensions
                                                                             OPTIONAL
                            OPTIONAL
                        OPTIONAL
                                                 CHOICE {
                criticalExtensions
                                                  SEQUENCE {
                        radioBearerSetup-r6
                                                         RadioBearerSetup-r6-IEs,
                         -- Container for adding non critical extensions after freezing REL-7
                                                                     OPTIONAL,
                        radioBearerSetup-r6-add-ext BIT STRING
                        nonCriticalExtensions
                                                         SEQUENCE {}
                                                                         OPTIONAL
                                              CHOICE {
                    criticalExtensions
                                                   SEQUENCE {
                        r7
                            radioBearerSetup-r7
                                                             RadioBearerSetup-r7-IEs,
                             -- Container for adding non critical extensions after freezing REL-8
                             {\tt radioBearerSetup-r7-add-ext} \qquad {\tt BIT\ STRING} \qquad {\tt OPTIONAL},
                            nonCriticalExtensions
                                                             SEQUENCE {}
                                                                             OPTIONAL
                        criticalExtensions
                                                        SEQUENCE {}
                    }
          }
       }
    }
RadioBearerSetup-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier
                                         RRC-TransactionIdentifier,
        integrityProtectionModeInfo
                                         IntegrityProtectionModeInfo
                                                                              OPTIONAL,
        cipheringModeInfo
                                         CipheringModeInfo
                                                                              OPTIONAL,
        activationTime
                                         ActivationTime
                                                                              OPTIONAL.
        new-U-RNTI
                                         U-RNTI
                                                                              OPTIONAL,
        new-C-RNTI
                                        C-RNTI
                                                                              OPTIONAL,
        rrc-StateIndicator
                                         RRC-StateIndicator.
        utran-DRX-CycleLengthCoeff
                                         UTRAN-DRX-CycleLengthCoefficient
                                                                              OPTIONAL,
```

```
-- UTRAN mobility IEs
        ura-Identity
                                           URA-Identity
                                                                                      OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                           CN-InformationInfo
                                                                                     OPTIONAL.
    -- Radio bearer IEs
        Radio bearer IES
srb-InformationSetupList
rab-InformationSetupList
rb-InformationAffectedList
RB-InformationAffectedList
        rab-InformationSetupList RAB-InformationSetupList OPTIONAL, rb-InformationAffectedList RB-InformationAffectedList OPTIONAL, dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo OPTIONAL,
        Transport channel IES

ul-CommonTransChInfo

ul-deletedTransChInfoList

ul-AddReconfTransChInfoList

UL-DeletedTransChInfoList

UL-AddReconfTransChInfoList
    -- Transport channel IEs
                                                                                     OPTIONAL.
                                                                                     OPTIONAL
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
                                           CHOICE {
         dummy
             fdd
                                                 SEQUENCE {
                 dummy1
                                                      CPCH-SetID
                                                                                      OPTIONAL.
                                                      DRAC-StaticInformationList OPTIONAL
                  dummy2
             },
                                                 NULL
             tdd
                                                                                     OPTIONAL,
        }
dl-CommonTransChInfo
dl-DeletedTransChInfoList
dl-AddReconfTransChInfoList
DL-AddReconfTransChInfoList
                                                                                     OPTIONAL,
                                                                                     OPTIONAL.
                                                                                     OPTIONAL.
        IlequencyInfo FrequencyInfo
maxAllowedUL-TX-Power
ul-ChannelRequirement UL-ChannelRequirement
modeSpecificPhysChInfo
fdd SEOUENCE {
SEOUENCE {
    -- Physical channel IEs
                                                                                     OPTIONAL,
                  -- dummy is not used in this version of specification, it should
                  -- not be sent and if received it should be ignored.
                                                      DL-PDSCH-Information
                 dummy
             },
             tdd
                                                 NULL
        },
dl-CommonInformation
DL-CommonInformation
dl-InformationPerRL-List
DL-InformationPerRL-List
                                                                                    OPTIONAL,
}
RadioBearerSetup-v3a0ext ::= SEQUENCE {
    -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received the UE behaviour
    -- is unspecified
    new-DSCH-RNTI
                                       DSCH-RNTI
                                                                                 OPTIONAL
}
RadioBearerSetup-v4b0ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
        dummy
                                                 SSDT-III.
                                                                                         OPTIONAL.
         -- The order of the RLs in IE cell-id-PerRL-List is the same as
         -- in IE DL-InformationPerRL-List included in this message cell-id-PerRL-List CellIdentity-PerRL-List
        cell-id-PerRL-List
                                                                                         OPTIONAL
}
RadioBearerSetup-v590ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List OPTIONAL
}
RadioBearerSetup-v5d0ext-IEs ::= SEQUENCE {
    --Radio Bearer IEs
        pdcp-ROHC-TargetMode PDCP-ROHC-TargetMode
                                                                         OPTIONAL
}
RadioBearerSetup-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
                                          {\tt IntegrityProtectionModeInfo}
         integrityProtectionModeInfo
                                                                                    OPTIONAL.
         cipheringModeInfo
                                             CipheringModeInfo
                                                                                      OPTIONAL,
         activationTime
                                             ActivationTime
                                                                                      OPTIONAL,
        new-U-RNTI
                                             U-RNTI
                                                                                      OPTIONAL,
         new-C-RNTI
                                             C-RNTI
                                                                                      OPTIONAL,
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
                            DSCH-RNTI
         new-DSCH-RNTI
                                                                                     OPTIONAL.
         rrc-StateIndicator
                                            RRC-StateIndicator,
```

```
utran-DRX-CycleLengthCoeff
                                           UTRAN-DRX-CycleLengthCoefficient
                                                                                     OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                            URA-Identity
                                                                                     OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                            CN-InformationInfo
                                                                                     OPTIONAL,
    -- Radio bearer IEs
        srb-InformationSetupListSRB-InformationSetupListrab-InformationSetupListRAB-InformationSetupList-r4rb-InformationAffectedListRB-InformationAffectedList
                                                                                     OPTIONAL.
                                                                                     OPTIONAL,
                                                                                     OPTIONAL,
         dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                                     OPTIONAL,
    -- Transport channel IEs
         ul-CommonTransChInfo
                                            UL-CommonTransChInfo-r4
                                                                                    OPTIONAL.
        ul-deletedTransChInfoList UL-DeletedTransChInfoList ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                    OPTIONAL,
                                                                                    OPTIONAL,
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
                                            CHOICE {
         dummy
             fdd
                                                 SEQUENCE {
                  dummy1
                                                     CPCH-SetID
                                                     DRAC-StaticInformationList OPTIONAL
                  dummy2
             },
             tdd
                                                 NULL
        dl-DeletedTransChInfo DL-CommonTransChInfo-r4
dl-DeletedTransChInfoList DL-DeletedTransChInfoList
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList
                                                                                     OPTIONAL,
                                                                                    OPTIONAL.
                                            DL-AddReconfTransChInfoList-r4
                                                                                     OPTIONAL,
    -- Physical channel IEs
         frequencyInfo
                                            FrequencyInfo
                                                                                     OPTIONAL,
        maxAllowedUL-TX-Power
                                            MaxAllowedUL-TX-Power
                                                                                    OPTIONAL,
         ul-ChannelRequirement
                                            UL-ChannelRequirement-r4
                                                                                    OPTIONAL,
         modeSpecificPhysChInfo
                                            CHOICE {
                                                SEQUENCE {
                  -- dummy is not used in this version of specification, it should
                  \operatorname{\mathsf{--}} not be sent and if received it should be ignored.
                                                     DL-PDSCH-Information
                                                                                     OPTIONAL
             },
             tdd
                                                 NULL
         dl-CommonInformation
                                           DL-CommonInformation-r4
                                                                                    OPTIONAL,
        dl-InformationPerRL-List
                                          DL-InformationPerRL-List-r4
                                                                                    OPTIONAL
}
RadioBearerSetup-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
         integrityProtectionModeInfo
                                            IntegrityProtectionModeInfo
                                                                                     OPTIONAL,
                                            CipheringModeInfo
         cipheringModeInfo
                                                                                     OPTIONAL,
         activationTime
                                            ActivationTime
                                                                                     OPTIONAL,
        new-U-RNTI
                                            II-RNTT
                                                                                     OPTIONAL,
        new-C-RNTI
                                            C-RNTI
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
        new-DSCH-RNTI
                                            DSCH-RNTI
                                                                                     OPTIONAL,
        new-H-RNTI
                                                                                     OPTIONAL,
                                            H-RNTI
                                            RRC-StateIndicator,
         rrc-StateIndicator
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                                     OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                            URA-Identity
                                                                                     OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                            CN-InformationInfo
                                                                                     OPTIONAL,
    -- Radio bearer IEs
        srb-InformationSetupListSRB-InformationSetupList-r5rab-InformationSetupListRAB-InformationSetupList-r5rb-InformationAffectedListRB-InformationAffectedList-r5
                                                                                     OPTIONAL,
                                                                                     OPTIONAL,
                                                                                     OPTIONAL.
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                                    OPTIONAL,
    -- Transport channel IEs
         ul-CommonTransChInfo
                                            UL-CommonTransChInfo-r4
                                                                                    OPTIONAL.
         ul-deletedTransChInfoList
                                            UL-DeletedTransChInfoList
                                                                                    OPTIONAL,
         ul-AddReconfTransChInfoList
                                            UL-AddReconfTransChInfoList
                                                                                    OPTIONAL,
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
         dummy
                                            CHOICE {
             fdd
                                                 SEQUENCE {
                 dummy1
                                                     CPCH-Set.ID
                                                                                     OPTIONAL,
                  dummy2
                                                     DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                                                                     OPTIONAL.
         dl-CommonTransChInfo
                                           DL-CommonTransChInfo-r4
                                                                                     OPTIONAL,
```

```
dl-DeletedTransChInfoList
                                     DL-DeletedTransChInfoList-r5
                                                                           OPTIONAL.
        dl-AddReconfTransChInfoList
                                       DL-AddReconfTransChInfoList-r5
                                                                           OPTIONAL,
    -- Physical channel IEs
       {\tt frequencyInfo}
                                       FrequencyInfo
                                                                           OPTIONAL.
        maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                           OPTIONAL,
        ul-ChannelRequirement
                                       UL-ChannelRequirement-r5
                                                                           OPTIONAL,
        modeSpecificPhysChInfo
                                       CHOICE {
                                           SEQUENCE {
            fdd
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
               dummy
                                               DL-PDSCH-Information
            },
            tdd
                                           NULL
        dl-HSPDSCH-Information
                                       DL-HSPDSCH-Information
                                                                           OPTIONAL,
       dl-CommonInformation
                                       DL-CommonInformation-r5
                                                                           OPTIONAL,
        dl-InformationPerRL-List
                                       DL-InformationPerRL-List-r5
                                                                           OPTIONAL
}
RadioBearerSetup-v690ext-IEs ::= SEQUENCE {
    -- Core network IEs
       primary-plmn-Identity
                                       PLMN-Identity
                                                                           OPTIONAL,
    -- Physical channel IEs
       -- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
        -- If included in the r3 or r4 version of the message, the UE should ignore the IE
                                       HARQ-Preamble-Mode
       harq-Preamble-Mode
                                                                           OPTIONAL,
       beaconPLEst
                                       BEACON-PL-Est
                                                                           OPTIONAL,
       postVerificationPeriod
                                       ENUMERATED { true }
                                                                           OPTIONAL,
                                       DHS-Sync
                                                                           OPTIONAL.
       dhs-sync
        timingMaintainedSynchInd
                                       TimingMaintainedSynchInd
                                                                           OPTIONAL.
    -- Radio bearer IEs
       rab-InformationSetupList
                                       RAB-InformationSetupList-r6-ext
                                                                           OPTIONAL,
    -- MBMS IEs
       mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                           OPTIONAL
}
RadioBearerSetup-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                       IntegrityProtectionModeInfo
                                                                           OPTIONAL,
        cipheringModeInfo
                                       CipheringModeInfo
                                                                           OPTIONAL,
        activationTime
                                       ActivationTime
                                                                           OPTIONAL.
       new-U-RNTI
                                       U-RNTI
                                                                           OPTIONAL.
       new-C-RNTI
                                       C-RNTI
                                                                           OPTIONAL,
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
        new-DSCH-RNTI
                                       DSCH-RNTI
                                                                           OPTIONAL,
       new-H-RNTT
                                       H-RNTT
                                                                           OPTIONAL,
        newPrimary-E-RNTI
                                       E-RNTT
                                                                           OPTIONAL,
                                       E-RNTI
        newSecondary-E-RNTI
                                                                           OPTIONAL,
        rrc-StateIndicator
                                       RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff
                                       UTRAN-DRX-CycleLengthCoefficient
                                                                           OPTIONAL.
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                           OPTIONAL,
    -- Core network IEs
       cn-InformationInfo
                                       CN-InformationInfo-r6
                                                                           OPTIONAL,
        specificationMode
                                       CHOICE {
            complete
                                           SEQUENCE {
            -- Radio bearer IEs
                srb-InformationSetupList
                                               SRB-InformationSetupList-r6
                                                                                   OPTIONAL,
               rab-InformationSetupList
                                               RAB-InformationSetupList-r6
                                                                                   OPTIONAL.
                rab-InformationReconfigList
                                                                                   OPTIONAL,
                                               RAB-InformationReconfigList
                rb-InformationReconfigList
                                               RB-InformationReconfigList-r6
                                                                                   OPTIONAL,
                rb-InformationAffectedList
                                               RB-InformationAffectedList-r6
                                                                                   OPTIONAL,
                dl-CounterSynchronisationInfo
                                               DL-CounterSynchronisationInfo-r5
                                                                                   OPTIONAL.
                pdcp-ROHC-TargetMode
                                               PDCP-ROHC-TargetMode
                                                                                   OPTIONAL,
            -- Transport channel IEs
               ul-CommonTransChInfo
                                               UL-CommonTransChInfo-r4
                                                                                   OPTIONAL,
                ul-deletedTransChInfoList
                                               UL-DeletedTransChInfoList-r6
                                                                                   OPTIONAL,
                ul-AddReconfTransChInfoList
                                               UL-AddReconfTransChInfoList-r6
                                                                                   OPTIONAL,
                dl-CommonTransChInfo
                                               DL-CommonTransChInfo-r4
                                                                                   OPTIONAL,
                dl-DeletedTransChInfoList
                                               DL-DeletedTransChInfoList-r5
                                                                                   OPTIONAL,
               dl-AddReconfTransChInfoList
                                               DL-AddReconfTransChInfoList-r5
                                                                                   OPTIONAL
            },
                                           SEQUENCE {
            preconfiguration
                                               RAB-Info-r6,
                rab-Info
                defaultConfigMode
                                               DefaultConfigMode,
                defaultConfigIdentity
                                               DefaultConfigIdentity-r6,
                rb-InformationChangedList
                                               RB-InformationChangedList-r6
                                                                                   OPTIONAL,
```

```
powerOffsetInfoShort
                                                                    PowerOffsetInfoShort
                 }
            },
      -- Physical channel IEs
           frequencyInfo
maxAllowedUL-TX-Power
ul-DPCH-Info
ul-EDCH-Information
dl-HSPDSCH-Information
dl-CommonInformation
dl-Information
DL-CommonInformation-r6
dl-InformationPerRL-List
DL-InformationPerRL-List
DL-InformationPerRL-List-r6
           frequencyInfo
                                                         FrequencyInfo
                                                                                                                OPTIONAL,
                                                                                                              OPTIONAL,
                                                                                                                OPTIONAL,
                                                                                                                OPTIONAL,
                                                                                                               OPTIONAL,
                                                                                                                OPTIONAL,
                                                                                                                OPTIONAL,
      -- MBMS IEs
           mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                                              OPTIONAL
}
RadioBearerSetup-r7-IEs ::= SEQUENCE {
      -- User equipment IEs
                                                      IntegrityProtectionModeInfo
            integrityProtectionModeInfo
                                                                                                              OPTIONAL,
           cipheringModeInfo
                                                          CipheringModeInfo
                                                                                                                OPTIONAL.
           activationTime
                                                           ActivationTime
                                                                                                                 OPTIONAL,
           new-U-RNTI
                                                           U-RNTI
                                                                                                                 OPTIONAL,
           new-C-RNTI
                                                          C-RNTI
                                                                                                                 OPTIONAL,
            -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
            -- and if received the UE behaviour is unspecified
                                                          DSCH-RNTI
           new-DSCH-RNTT
                                                                                                                 OPTIONAL.
           newPrimary-E-RNTI E-RNTI OPTIONAL,
newSecondary-E-RNTI E-RNTI OPTIONAL,
rrc-StateIndicator RRC-StateIndicator,
utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
UTRAN mobility IEs
           new-H-RNTT
                                                          H-RNTT
                                                                                                                 OPTIONAL,
      -- UTRAN mobility IEs
           ura-Identity
                                                         URA-Identity
                                                                                                                OPTIONAL,
      -- Core network IEs
           cn-InformationInfo CN-InformationInfo-r6
specificationMode CHOICE {
    complete SEQUENCE {
    -- Radio bearer IES
                                                                                                                OPTIONAL.
                       Radio bearer IES
srb-InformationSetupList SRB-InformationSetupList-r6 OPTIONAL,
rab-InformationSetupList RAB-InformationSetupList-r6 OPTIONAL,
rb-InformationReconfigList RB-InformationReconfigList-r6 OPTIONAL,
rb-InformationAffectedList RB-InformationAffectedList-r6 OPTIONAL,
                       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5 OPTIONAL,
                                                                    PDCP-ROHC-TargetMode
                        pdcp-ROHC-TargetMode
                                                                                                                            OPTIONAL,
                  -- Transport channel IEs
                       ul-CommonTransChInfo-r4 OPTIONAL,
ul-deletedTransChInfoList UL-DeletedTransChInfoList-r6 OPTIONAL,
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList-r6 OPTIONAL,
dl-CommonTransChInfo DL-CommonTransChInfo-r4 OPTIONAL,
dl-DeletedTransChInfoList DL-DeletedTransChInfoList-r5 OPTIONAL,
dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r5 OPTIONAL
                 },
                 preconfiguration
                                                                 SEOUENCE {
                       rab-Info RAB-Inio-ro,
defaultConfigMode DefaultConfigMode,
defaultConfigIdentity DefaultConfigIdentity-r6,
rb-InformationChangedList RB-InformationChangedList-r6 OPTIONAL,
PowerOffsetInfoShort
                                                                 RAB-Info-r6,
                 }
      -- Physical channel IEs
           frequencyInfo FrequencyInfo
maxAllowedUL-TX-Power
ul-DPCH-Info UL-DPCH-Info-r7
ul-EDCH-Information UL-EDCH-Information-r6
dl-HSPDSCH-Information DL-HSPDSCH-Information-r7
dl-CommonInformation DL-CommonInformation-r7
                                                                                                               OPTIONAL,
                                                                                                                OPTIONAL,
                                                                                                               OPTIONAL,
                                                                                                              OPTIONAL,
                                                                                                                OPTIONAL,
           dl-InformationPerRL-List
                                                          DL-InformationPerRL-List-r7
                                                                                                                OPTIONAL,
      -- MBMS IEs
           mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                                              OPTIONAL
}
__ *****************************
-- RADIO BEARER SETUP COMPLETE
__ *******************
RadioBearerSetupComplete ::= SEQUENCE {
```

```
-- User equipment IEs
        rrc-TransactionIdentifier RRC-TransactionIdentifier, ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                                     OPTIONAL,
         -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
        ul-TimingAdvance UL-TimingAdvance start-Value START-Value
                                                                                       OPTIONAL,
        start-Value
                                                                                      OPTIONAL,
    -- Radio bearer IEs
        count-C-ActivationTime
                                        ActivationTime
                                                                                      OPTIONAL.
         -- dummy is not used in this version of the specification and
         -- it should be ignored by the receiver.
                                           RB-ActivationTimeInfoList
        RB-ActivationTimeInfoList OPTIONAL,
ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo OPTIONAL,
laterNonCriticalExtensions SEQUENCE {
    -- Container for additional Pool
             -- Container for additional R99 extensions
             radioBearerSetupComplete-r3-add-ext BIT STRING OPTIONAL,
             v7xyNonCriticalExtensions SEQUENCE {
                  radioBearerSetupComplete-v7xyext
                                                      RadioBearerSetupComplete-v7xyext-IEs,
                                                     SEQUENCE {} OPTIONAL
                 nonCriticalExtensions
                 OPTIONAL
         ) OPTIONAL
}
RadioBearerSetupComplete-v7xyext-IEs ::= SEQUENCE {
                                                                                     OPTIONAL
        ext-ul-TimingAdvance EXT-UL-TimingAdvance
__ **************
-- RADIO BEARER SETUP FAILURE
__ ****************************
RadioBearerSetupFailure ::= SEQUENCE {
        User equipment IEs
rrc-TransactionIdentifier RRC-TransactionIdentifier,
failureCause FailureCauseWithProtErr,
    -- User equipment IEs
    -- Radio bearer IEs
        {\tt potentiallySuccesfulBearerList} \quad {\tt RB-IdentityList}
                                                                                     OPTIONAL,
         laterNonCriticalExtensions SEQUENCE {
             -- Container for additional R99 extensions
             radioBearerSetupFailure-r3-add-ext BIT STRING OPTIONAL,
             nonCriticalExtensions SEQUENCE {} OPTIONAL
         } OPTIONAL
}
__ **************************
-- RRC CONNECTION REJECT
__ ***************
RRCConnectionReject ::= CHOICE {
        SEQUENCE {
rrcConnectionReject-r3 RRCConnectionReject-r3-IEs,
laterNonCriticalExtensions SEQUENCE {
             -- Container for additional R99 extensions
             rrcConnectionReject-r3-add-ext BIT STRING OPTIONAL,
v690NonCriticalExtensions SEQUENCE {
    rrcConnectionReject-v690ext nonCriticalExtensions SEQUENCE {} OPTIONAL
             } OPTIONAL
        ) OPTIONAL
        er-than-r3 SEQUENCE {
  initialUE-Identity Initial
  rrc-Transort --
    later-than-r3
        initialUE-Identity InitialUE-Identity, rrc-TransactionIdentifier RRC-TransactionIdentifier, criticalExtensions SEQUENCE {}
}
RRCConnectionReject-r3-IEs ::= SEQUENCE {
    -- TABULAR: Integrity protection shall not be performed on this message.
    -- User equipment IEs
        User equipment IEs
initialUE-Identity InitialUE-Identity,
rrc-TransactionIdentifier RRC-TransactionIdentifier,
rejectionCause RejectionCause,
         waitTime
                                             WaitTime,
```

```
redirectionInfo
                                       RedirectionInfo
                                                                              OPTIONAL
}
RRCConnectionReject-v690ext-IEs ::= SEQUENCE {
    redirectionInfo-v690ext
                                        GSM-TargetCellInfoList
                                                                         OPTIONAL
__ ****************
-- RRC CONNECTION RELEASE
__ ****************
RRCConnectionRelease ::= CHOICE {
                                     SEQUENCE {
        rrcConnectionRelease-r3
        -- Container for additional R99 extensions
            rrcConnectionRelease-r3-add-ext BIT STRING OPTIONAL,
v690NonCriticalExtensions SEQUENCE {
   rrcConnectionRelease-v690ext RRCConnectionRelease-v690ext-IEs,
   nonCriticalExtensions SEQUENCE {} OPTIONAL
            } OPTIONAL
        ) OPTIONAL
    later-than-r3
                                    SEQUENCE {
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
criticalExtensions CHOICE {
    r4 SEQUENCE {
        rrcConnectionRelease-r4 RRCConnectionRelease-r4-IEs,
        v4d0NonCriticalExtensions SEQUENCE {
                    -- Container for adding non critical extensions after freezing REL-6
                    rrcConnectionRelease-r4-add-ext BIT STRING OPTIONAL, v690NonCriticalExtensions SEQUENCE {
                       rrcConnectionRelease-v690ext
                                               RRCConnectionRelease-v690ext-IEs,
                        nonCriticalExtensions
                                                        SEQUENCE { } OPTIONAL
                     } OPTIONAL
                    OPTIONAL
            },
            \verb| criticalExtensions | SEQUENCE | \{ \} \\
        }
    }
}
RRCConnectionRelease-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
       User equipment IEs rrc-TransactionIdentifier RRC-TransactionIdentifier,
        \ensuremath{\text{--}} n-308 is conditional on the UE state
       n-308
                                         N - 308
                                                                             OPTIONAL,
       releaseCause
                                        ReleaseCause,
       rplmn-information
                                        Rplmn-Information
                                                                             OPTIONAL
}
RRCConnectionRelease-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
       -- n-308 is conditional on the UE state.
        n-308
                                        N - 308
                                                                              OPTIONAL,
       releaseCause
                                         ReleaseCause,
        rplmn-information
                                         Rplmn-Information-r4
                                                                              OPTIONAL
}
RRCConnectionRelease-v690ext-IEs ::= SEQUENCE {
  redirectionInfo-v690ext
                                      RedirectionInfo-r6 OPTIONAL
__ ****************
-- RRC CONNECTION RELEASE for CCCH
__ *******************************
RRCConnectionRelease-CCCH ::= CHOICE {
                                SEQUENCE {
        rrcConnectionRelease-CCCH-r3 RRCConnectionRelease-CCCH-r3-IEs,
        laterNonCriticalExtensions
                                        SEQUENCE {
            -- Container for additional R99 extensions
            rrcConnectionRelease-CCCH-r3-add-ext
                                                        BIT STRING OPTIONAL,
```

```
v690NonCriticalExtensions SEQUENCE {
               rrcConnectionRelease-v690ext RRCConnectionRelease-CCCH-v690ext-IEs,
               nonCriticalExtensions
                                               SEQUENCE {} OPTIONAL
              OPTIONAL
           OPTIONAL
    },
       Trc-TransactionIdentifier RRC-TransactionIdentifier, CHOICE {

r4

CEOURITE {

U-RNTI,

RRC-TransactionIdentifier,

CHOICE {
                                  SEQUENCE {
    later-than-r3
               rrcConnectionRelease-CCCH-r4 RRCConnectionRelease-CCCH-r4-IEs, v4d0NonCriticalExtensions SEQUENCE {
                    -- Container for adding non critical extensions after freezing REL-5
                                                              BIT STRING OPTIONAL,
                    rrcConnectionRelease-CCCH-r4-add-ext
                    v690NonCriticalExtensions SEQUENCE {
                       rrcConnectionRelease-v690ext RRCConnectionRelease-CCCH-v690ext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                    } OPTIONAL
               }
                       OPTIONAL
            criticalExtensions
                                           SEQUENCE {
                -- TABULAR: CHOICE IdentityType (U-RNTI, GroupIdentity) is replaced with the
                -- optional element groupIdentity, since the U-RNTI is mandatory in ASN.1.
                -- In case CHOICE IdentityType is equal to GroupIdentity the value of the U-RNTI
                -- shall be ignored by a UE complying with this version of the message.
               groupIdentity SEQUENCE ( SIZE (1 .. maxURNTI-Group) ) OF
                                      GroupReleaseInformation OPTIONAL,
               criticalExtensions
                                               CHOICE {
                                                 SEQUENCE {
                       rrcConnectionRelease-CCCH-r5 RRCConnectionRelease-CCCH-r5-IEs,
                        -- Container for adding non critical extensions after freezing REL-6
                       rrcConnectionRelease-CCCH-r5-add-ext BIT STRING v690NonCriticalExtensions SEQUENCE {
                                                                                OPTIONAL.
                            {\tt rrcConnectionRelease-v690ext-IEs,}
                            nonCriticalExtensions
                                                           SEQUENCE {} OPTIONAL
                          OPTIONAL
                    criticalExtensions SEQUENCE {}
               }
          }
       }
   }
RRCConnectionRelease-CCCH-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
       u-RNTI
    -- The rest of the message is identical to the one sent on DCCH.
       rrcConnectionRelease
                                       RRCConnectionRelease-r3-IEs
}
RRCConnectionRelease-CCCH-r4-IEs ::= SEQUENCE {
   -- The rest of the message is identical to the one sent on DCCH.
       rrcConnectionRelease
                                       RRCConnectionRelease-r4-IEs
-- The R5 and R4 sequence of IEs are identical in this message
RRCConnectionRelease-CCCH-r5-IEs ::= RRCConnectionRelease-CCCH-r4-IEs
-- The R6 non-critical extension is identical to the one sent on DCCH.
RRCConnectionRelease-CCCH-v690ext-IEs ::= RRCConnectionRelease-v690ext-IEs
__ ***************
-- RRC CONNECTION RELEASE COMPLETE
RRCConnectionReleaseComplete ::= SEQUENCE {
    -- User equipment IEs
       rrc-TransactionIdentifier
                                       RRC-TransactionIdentifier,
       errorIndication FailureCauseWithProtErr laterNonCriticalExtensions SEQUENCE {
                                                                           OPTIONAL,
            -- Container for additional R99 extensions
           rrcConnectionReleaseComplete-r3-add-ext BIT STRING
                                          SEQUENCE {} OPTIONAL
           nonCriticalExtensions
          OPTIONAL
```

```
}
__ ***************
-- RRC CONNECTION REQUEST
__ **************
RRCConnectionRequest ::= SEQUENCE {
        -- TABULAR: Integrity protection shall not be performed on this message.
        -- User equipment IEs
                                                                             InitialUE-Identity,
EstablishmentCause,
                initialUE-Identity
                establishmentCause
                -- protocolErrorIndicator --
-- has been assigned to it.
-- ProtocolErrorIndicator,
                -- protocolErrorIndicator is MD, but for compactness reasons no default value
                protocolErrorIndicator
        ...casuredResultsOnRACH MeasuredResultsOnRACH
-- Non critical Extensions
v3d0NonCritical
                                                                                                                                     OPTIONAL,
                       ONOnCriticalExtensions SEQUENCE {
rRCConnectionRequest-v3d0ext RRCConnectionRequest-v3d0ext-IEs,
                -- Reserved for future non critical extension
                               ONOnCriticalExtensions

SEQUENCE {
rrcConnectionRequest-v4b0ext RRCConnectionRequest-v4b0ext-IEs,
v590NonCriticalExtensions SEQUENCE {
rrcConnectionRequest-v590ext RRCConnectionRequest-v590ext-IEs,
v690NonCriticalExtensions SEQUENCE {
rrcConnectionRequest-v690ext RRCConnectionRequest-v690ext-IEs,
RRCConnectionRequest-v690ext RRCConnectionRequest-v690ext-IEs,
                       v4b0NonCriticalExtensions
                                                 -- Reserved for future non critical extension
                                                                                                                SEQUENCE {}
                                                nonCriticalExtensions
                                                                                                                                               OPTIONAL
                                               OPTIONAL
                                         OPTIONAL
                                OPTIONAL
                } OPTIONAL
}
RRCConnectionRequest-v3d0ext-IEs ::= SEQUENCE {
       -- User equipment IEs
               uESpecificBehaviourInformationlidle UESpecificBehaviourInformationlidle OPTIONAL
}
RRCConnectionRequest-v4b0ext-IEs ::= SEQUENCE {
        -- User equipment IEs
                accessStratumReleaseIndicator AccessStratumReleaseIndicator
}
RRCConnectionRequest-v590ext-IEs ::= SEQUENCE {
       -- User equipment IEs
               predefinedConfigStatusInfo BOOLEAN
}
RRCConnectionRequest-v690ext-IEs ::= SEQUENCE {
        -- User equipment IEs
                                                                                       ENUMERATED { hsdch, hsdch-edch } OPTIONAL,
                ueCapabilityIndication
        -- Measurement IEs
                measuredResultsOnRACHinterFreq MeasuredResultsOnRACHinterFreq
                                                                                                                                                                          OPTIONAL,
                domainIndicator
                                                                                         CHOICE {
                                                                                             SEQUENCE {
                      cs-domain
                                csCallType
                                                                                                         ENUMERATED {speech, video, other, spare }
                       ps-domain
}
__ ****************
-- RRC CONNECTION SETUP
__ ****************
RRCConnectionSetup ::= CHOICE {
                rrcConnectionSetup-r3
                                                                        SEQUENCE {
                rrcConnectionSetup-r3
laterNonCriticalExtensions
RRCConnectionSetup-r3-IEs,
SEQUENCE {
                          -- Container for additional R99 extensions
                        rrcConnectionSetup-r3-add-ext BIT STRING
v4b0NonCriticalExtensions SEQUENCE {
    rrcConnectionSetup-v4b0ext RRCCCOnnectionSetup-
                                                                                               RRCConnectionSetup-v4b0ext-IEs,
```

}

```
v590NonCriticalExtensions SEQUENCE {
                                                                                          RRCConnectionSetup-v590ext-IEs, SEQUENCE {
                                     rrcConnectionSetup-v590ext
                                      v690NonCriticalExtensions
                                             rrcConnectionSetup-v7xyext RRCConnectionSetup-v7xyext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                                                    OPTIONAL
                                             OPTIONAL
                                     OPTIONAL
                              ÓPTIONAL
                      OPTIONAL
       later-than-r3
                                                                    SEQUENCE {
               initialUE-Identity
                                                                           InitialUE-Identity,
              rrc-TransactionIdentifier
                                                                           RRC-TransactionIdentifier,
               criticalExtensions
                                                                          CHOICE {
                                                                            SEQUENCE {
                              v4d0NonCriticalExtensions SECTIONS (SECTION OF THE SECTION OF THE 
                                      -- Container for adding non critical extensions after freezing REL-5
                                      rrcConnectionSetup-r4-add-ext BIT STRING
                                                                                                                             OPTIONAL,
                                             ONONCriticalExtensions SEQUENCE {
rrcConnectionSetup-v590ext
v690NonCriticalExtensions SEQUENCE {
}
SEQUENCE {
                                      v590NonCriticalExtensions
                                                     rrcConnectionSetup-v690ext RRCConnectionSetup-v690ext-IEs, v7xyNonCriticalExtensions SEQUENCE {
                                                            {\tt rrcConnectionSetup-v7xyext} \qquad {\tt RRCConnectionSetup-v7xyext-IEs},
                                                                                                                         SEQUENCE {} OPTIONAL
                                                            nonCriticalExtensions
                                                           OPTIONAL
                                                     OPTIONAL
                                             OPTIONAL
                                     OPTIONAL
                              }
                      criticalExtensions
                                                                                           CHOICE {
                                                                                        SEQUENCÈ {
                                     rrcConnectionSetup-r5
                                                                                          RRCConnectionSetup-r5-IEs,
                                      -- Container for adding non critical extensions after freezing REL-6
                                     rrcConnectionSetup-v7xyext RRCConnectionSetup-v7xyext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                                                     nonCriticalExtensions
                                                                                                                SEQUENCE {} OPTIONAL
                                                   OPTIONAL
                                             OPTIONAL
                                      }
                              criticalExtensions
                                                                                           CHOICE {
                                                                                          SEQUENCE {
    RRCConnectionSetup-r6-IEs,
                                             rrcConnectionSetup-r6
                                              -- Container for adding non critical extensions after freezing REL-7
                                             rrcConnectionSetup-r6-add-ext BIT STRING v7xyNonCriticalExtensions SEQUENCE {
                                                     rrcConnectionSetup-v7xyext RRCConnectionSetup-v7xyext-IEs,
                                                     nonCriticalExtensions
                                                                                                                 SEQUENCE {}
                                                                                                                                                                       OPTIONAL
                                                    OPTIONAL
                                      },
                                      criticalExtensions
                                                                                                CHOICE {
                                                    rrcConnectionSetup-r7 SEQUENCE {
                                                                                                               RRCConnectionSetup-r7-IEs,
                                                     -- Container for adding non critical extensions after freezing REL-8
                                                     rrcConnectionSetup-r7-add-ext BIT STRING
                                                                                                                                                                      OPTIONAL,
                                                     nonCriticalExtensions
                                                                                                                 SEQUENCE { }
                                                                                                                                                                       OPTIONAL
                                                                                          SEQUENCE {}
                                             criticalExtensions
                                     }
                    }
              }
       }
RRCConnectionSetup-r3-IEs ::= SEQUENCE {
       -- TABULAR: Integrity protection shall not be performed on this message.
       -- User equipment IEs
              initialUE-Identity
                                                                           InitialUE-Identity,
               {\tt rrc-TransactionIdentifier} \qquad {\tt RRC-TransactionIdentifier},
              activationTime
                                                                           ActivationTime
                                                                                                                                                 OPTIONAL,
```

```
new-U-RNTI
                                                                                         U-RNTI,
                 new-c-RNTI
                                                                                         C-RNTI
                                                                                                                                                                           OPTIONAL,
                 rrc-StateIndicator
                                                                                        RRC-StateIndicator,
                 utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient,
                   -- TABULAR: If capabilityUpdateRequirement is not present, the default value
                  -- defined in 10.3.3.2 shall be used.
                 capabilityUpdateRequirement CapabilityUpdateRequirement
         -- Radio bearer IEs
                 srb-InformationSetupList
                                                                                     SRB-InformationSetupList2,
                                                                     UL-CommonTransChInfo
         -- Transport channel IEs
                 ul-CommonTransChInfo
                  -- NOTE: ul-AddReconfTransChInfoList should be optional in later versions of
                  -- this message
                  ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList,
                  dl-CommonTransChInfo
                                                                                         DL-CommonTransChInfo
                  -- NOTE: dl-AddReconfTransChInfoList should be optional in later versions
                   -- of this message
                 {\tt dl-AddReconfTransChInfoList} \qquad {\tt DL-AddReconfTransChInfoList}\,,
         -- Physical channel IEs
                 frequencyInfo
                                                                                         FrequencyInfo
                                                                                                                                                                          OPTIONAL,
                 maxAllowedUL-TX-Power
                                                                                        MaxAllowedUL-TX-Power
                                                                                                                                                                         OPTIONAL,
                                                                                    UL-ChannelRequirement
                  ul-ChannelRequirement
                                                                                                                                                                         OPTIONAL,
                  dl-CommonInformation
                                                                                        DL-CommonInformation
                                                                                                                                                                         OPTIONAL,
                 dl-InformationPerRL-List DL-InformationPerRL-List
}
RRCConnectionSetup-v4b0ext-IEs ::= SEQUENCE {
                 capabilityUpdateRequirement-r4-ext CapabilityUpdateRequirement-r4-ext OPTIONAL,
         -- Physical channel IEs
                  \mbox{--}\mbox{ dummy} is not used in this version of the specification, it should
                  -- not be sent and if received it should be ignored.
                                                                                                  SSDT-UL
                   -- The order of the RLs in IE cell-id-PerRL-List is the same as
                  -- in IE DL-InformationPerRL-List included in this message
                 cell-id-PerRL-List
                                                                                                  CellIdentity-PerRL-List
                                                                                                                                                                                   OPTIONAL
}
RRCConnectionSetup-v590ext-IEs ::= SEQUENCE {
         -- User equipment IEs
                 systemSpecificCapUpdateReq
                                                                                     SystemSpecificCapUpdateReq-v590ext
                                                                                                                                                                                 OPTIONAL,
         -- Physical channel IEs
                 dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
                                                                                                                                                                       OPTIONAL
}
RRCConnectionSetup-r4-IEs ::= SEQUENCE {
         -- TABULAR: Integrity protection shall not be performed on this message.
                 activationTime
                                                                                        ActivationTime
                                                                                                                                                                           OPTIONAL.
                 new-U-RNTT
                                                                                         U-RNTI,
                 new-c-RNTI
                                                                                         C-RNTI
                 utran-DRX-CycleLengthCoeff
- TABULAR: If and its control of the co
                                                                                                                                                                           OPTIONAL,
                                                                                        UTRAN-DRX-CycleLengthCoefficient,
                  -- TABULAR: If capabilityUpdateRequirement is not present, the default value
                  -- defined in 10.3.3.2 shall be used.
                  capabilityUpdateRequirement CapabilityUpdateRequirement-r4
         -- Radio bearer IEs
                 srb-InformationSetupList
                                                                                     SRB-InformationSetupList2,
         -- Transport channel IEs
                 ul-AddreconfTransChInfo
UL-CommonTransChInfo-r4
UL-AddReconfTransChInfoList
UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL-Draw UL
                 ul-CommonTransChInfo
                                                                                                                                                                         OPTIONAL,
                                                                                        UL-AddReconfTransChInfoList
                                                                                                                                                                          OPTIONAL.
                                                                                                                                                                          OPTIONAL.
                 dl-AddReconfTransChInfoList
                                                                                        DL-AddReconfTransChInfoList-r4
                                                                                                                                                                          OPTIONAL,
         -- Physical channel IEs
                 frequencyInfo
                                                                                        FrequencyInfo
                 maxAllowedUL-TX-Power MaxAllowedUL-TX-Power ul-ChannelRequirement UL-ChannelRequirement-r4 dl-CommonInformation DL-CommonInformation-r4 dl-InformationPerRL-List DL-InformationPerRL-List-r4
                                                                                                                                                                          OPTIONAL,
                                                                                                                                                                         OPTIONAL.
                                                                                                                                                                          OPTIONAL,
                                                                                        DL-InformationPerRL-List-r4
                                                                                                                                                                          OPTIONAL
}
RRCConnectionSetup-r5-IEs ::= SEQUENCE {
          -- TABULAR: Integrity protection shall not be performed on this message.
                 activationTime
                                                                                        ActivationTime
                                                                                                                                                                          OPTIONAL,
                 new-U-RNTI
                                                                                         U-RNTI,
                 new-c-RNTI
                                                                                        C-RNTI
                                                                                                                                                                           OPTIONAL,
                  rrc-StateIndicator
                                                                                        RRC-StateIndicator,
                 utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient,
                   -- TABULAR: If capabilityUpdateRequirement is not present, the default value
                  -- defined in 10.\overline{3}.3.2 shall be used.
```

```
capabilityUpdateRequirement
                                     CapabilityUpdateRequirement-r5
                                                                       OPTIONAL,
    -- Specification mode information
       specificationMode
                                      CHOICE {
                                         SEQUENCE {
           complete
               -- Radio bearer IEs
                                            SRB-InformationSetupList2,
               srb-InformationSetupList
               -- Transport channel IEs
               ul-CommonTransChInfo
                                             UL-CommonTransChInfo-r4
                                                                                OPTIONAL.
               ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                OPTIONAL,
               dl-CommonTransChInfo
                                             DL-CommonTransChInfo-r4
                                                                                OPTIONAL,
               dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r4
                                                                                OPTIONAL
           },
           preconfiguration
                                         SEQUENCE {
               -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
               -- one for the FDD only elements and one for the TDD only elements, so that one
               -- FDD/TDD choice in this level is sufficient.
               preConfigMode
                                             CHOICE {
                   predefinedConfigIdentity
                                               PredefinedConfigIdentity,
                   defaultConfig
                                                 SEQUENCE {
                      defaultConfigMode
                                                     DefaultConfigMode,
                      defaultConfigIdentity
                                                     DefaultConfigIdentity-r5
                   }
               }
           }
    -- Physical channel IEs
       frequencyInfo
                                     FrequencyInfo
       maxAllowedUL-TX-Power
                                     MaxAllowedUL-TX-Power
                                                                        OPTIONAL,
       ul-ChannelRequirement
                                     UL-ChannelRequirement-r4
                                                                        OPTIONAL.
       dl-CommonInformation
                                     DL-CommonInformation-r4
                                                                        OPTIONAL.
       dl-InformationPerRL-List
                                     DL-InformationPerRL-List-r5bis
                                                                        OPTIONAL
}
RRCConnectionSetup-v690ext-IEs ::= SEQUENCE {
    -- Physical Channel IEs
       beaconPLEst
                                      BEACON-PL-Est
                                                                        OPTIONAL,
                                     ENUMERATED { true }
       postVerificationPeriod
                                                                        OPTIONAL
}
RRCConnectionSetup-r6-IEs ::= SEQUENCE {
    -- TABULAR: Integrity protection shall not be performed on this message.
       activationTime
                                     ActivationTime
                                                                        OPTIONAL.
       new-U-RNTI
                                      U-RNTI,
       new-c-RNTI
                                      C-RNTI
                                                                         OPTIONAL,
       new-H-RNTI
                                     H-RNTI
                                                                         OPTIONAL,
                                                                         OPTIONAL,
       newPrimarv-E-RNTI
                                     E-RNTI
       newSecondary-E-RNTI
                                     E-RNTT
                                                                         OPTIONAL.
       -- TABULAR: If capabilityUpdateRequirement is not present, the default value
       -- defined in 10.3.3.2 shall be used.
       capabilityUpdateRequirement
                                     CapabilityUpdateRequirement-r5
                                                                       OPTIONAL,
    -- Specification mode information
       specificationMode
                                     CHOICE {
           complete
                                         SEQUENCE {
               -- Radio bearer IEs
               srb-InformationSetupList
                                             SRB-InformationSetupList2-r6,
               -- Transport channel IEs
               ul-CommonTransChInfo
                                             UL-CommonTransChInfo-r4
                                                                                OPTIONAL,
               ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList-r6
                                                                              OPTIONAL,
                                                                                OPTIONAL,
               dl-CommonTransChInfo
                                             DL-CommonTransChInfo-r4
               dl-AddReconfTransChInfoList
                                             DL-AddReconfTransChInfoList-r5
                                                                                OPTIONAL
           },
                                         SEQUENCE {
           preconfiguration
               -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
               -- one for the FDD only elements and one for the TDD only elements, so that one
               -- FDD/TDD choice in this level is sufficient.
               preConfigMode
                                            CHOICE {
                   {\tt predefinedConfigIdentity}
                                              PredefinedConfigIdentity,
                   defaultConfig
                                                 SEQUENCE {
                      defaultConfigMode
                                                    DefaultConfigMode,
                      defaultConfigIdentity
                                                     DefaultConfigIdentity-r6
                   }
               }
           }
    -- Physical channel IEs
       frequencyInfo
                                     FrequencyInfo
                                                                        OPTIONAL,
```

```
maxAllowedUL-TX-Power
                                      MaxAllowedUL-TX-Power
                                                                                       OPTIONAL,
         ul-DPCH-Info
                                             UL-DPCH-Info-r6
                                                                                      OPTIONAL,
                                           UL-EDCH-Information-r6
        ul-EDCH-InformationUL-EDCH-Information-r6dl-HSPDSCH-InformationDL-HSPDSCH-Information-r6dl-CommonInformationDL-CommonInformation-r6dl-InformationPerRL-ListDL-InformationPerRL-List-r6
         ul-EDCH-Information
                                                                                      OPTIONAL,
                                                                                     OPTIONAL,
                                                                                      OPTIONAL,
}
RRCConnectionSetup-r7-IEs ::= SEQUENCE {
    -- TABULAR: Integrity protection shall not be performed on this message.
        activationTime
                                            ActivationTime
         new-U-RNTI
                                             U-RNTI.
                                             C-RNTT
        new-c-RNTT
                                                                                       OPTIONAL,
         new-H-RNTI
                                             H-RNTI
                                                                                       OPTIONAL,
         newPrimary-E-RNTI
                                             E-RNTI
                                                                                       OPTIONAL,
        newSecondary-E-RNTI
                                             E-RNTI
                                                                                       OPTIONAL,
        rrc-StateIndicator RRC-StateIndicator, utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient,
         -- TABULAR: If capabilityUpdateRequirement is not present, the default value
         -- defined in 10.3.3.2 shall be used.
         capabilityUpdateRequirement CapabilityUpdateRequirement-r5
                                                                                     OPTIONAL.
    -- Specification mode information
                                  CHOICE {
         specificationMode
             complete
                                              SEQUENCE {
                  -- Radio bearer TEs
                  srb-InformationSetupList
                                                     SRB-InformationSetupList2-r6,
                  -- Transport channel IEs
ul-CommonTransChInfo
                 ul-CommonTransChInfoUL-CommonTransChInfo-r4ul-AddReconfTransChInfoListUL-AddReconfTransChInfoList-r6dl-CommonTransChInfoDL-CommonTransChInfo-r4dl-AddReconfTransChInfoListDL-AddReconfTransChInfoList-r5
                                                                                               OPTIONAL,
                                                                                              OPTIONAL,
                                                                                               OPTIONAL,
                                                                                                OPTIONAL
             },
                                                 SEQUENCE {
             preconfiguration
                  -- All IEs that include an FDD/TDD choice are split in two IEs for this message,
                  -- one for the FDD only elements and one for the TDD only elements, so that one
                  -- FDD/TDD choice in this level is sufficient.
                                                   CHOICE {
                  preConfigMode
                                                       PredefinedConfigIdentity, SEQUENCE {
                      predefinedConfigIdentity
                      defaultConfig
                           aultConfig SEQUENCE {
defaultConfigMode DefaultConfigMode,
defaultConfigIdentity DefaultConfigIdent
                                                               DefaultConfigIdentity-r6
                      }
                  }
             }
         },
    -- Physical channel IEs
                                          FrequencyInfo
MaxAllowedUL-TX-Power
                                                                                      OPTIONAL.
        frequencyInfo
                                                                                     OPTIONAL,
         maxAllowedUL-TX-Power
        UL-DPCH-Info-r7

UL-EDCH-Information UL-EDCH-Information-r6

dl-HSPDSCH-Information DL-HSPDSCH-Information-r7

dl-CommonInformation DL-CommonInformation-r7

dl-InformationPerRL-List DL-InformationPerRL-
                                                                                      OPTIONAL,
                                                                                      OPTIONAL,
                                                                                      OPTIONAL.
                                                                                      OPTIONAL
}
RRCConnectionSetup-v7xyext-IEs ::= SEQUENCE {
        capabilityUpdateRequirement-r7-ext CapabilityUpdateRequirement-r7-ext
                                                                                              OPTIONAL
__ ****************
-- RRC CONNECTION SETUP COMPLETE
__ ***************
RRCConnectionSetupComplete ::= SEQUENCE {
    -- TABULAR: Integrity protection shall not be performed on this message.
    -- User equipment IEs
         rrc-TransactionIdentifier
                                           RRC-TransactionIdentifier,
         startList
                                             STARTList,
        ue-RadioAccessCapability
Other IEs
                                           UE-RadioAccessCapability
    -- Other IEs
        ue-RATSpecificCapability
                                            InterRAT-UE-RadioAccessCapabilityList OPTIONAL,
    -- Non critical extensions
        v370NonCriticalExtensions
                                                 SEQUENCE {
             {\tt rrcConnectionSetupComplete-v370ext} \quad {\tt RRCConnectionSetupComplete-v370ext},
             v380NonCriticalExtensions
                                                      SEQUENCE {
                  \verb|rrcConnectionSetupComplete-v380ext| RRCConnectionSetupComplete-v380ext-IEs|,
```

```
-- Reserved for future non critical extension
                v3a0NonCriticalExtensions
                                                    SEQUENCE {
                    rrcConnectionSetupComplete-v3a0ext RRCConnectionSetupComplete-v3a0ext-IEs,
                    laterNonCriticalExtensions
                                                        SEOUENCE {
                         -- Container for additional R99 extensions
                        rrcConnectionSetupComplete-r3-add-ext
                                                                    BIT STRING
                                (CONTAINING RRCConnectionSetupComplete-r3-add-ext-IEs) OPTIONAL,
                        v3q0NonCriticalExtensions
                                                            SEOUENCE {
                            \verb|rrcConnectionSetupComplete-v3g0ext-RRCConnectionSetupComplete-v3g0ext-IEs|, \\
                            v4b0NonCriticalExtensions
                                                                 SEQUENCE {
                                rrcConnectionSetupComplete-v4b0ext
                                                                 RRCConnectionSetupComplete-v4b0ext-IEs,
                                v590NonCriticalExtensions
                                                                    SEQUENCE {
                                    rrcConnectionSetupComplete-v590ext
                                                                RRCConnectionSetupComplete-v590ext-IEs,
                                                                        SEQUENCE {
                                    v5c0NonCriticalExtensions
                                        \verb|rrcConnectionSetupComplete-v5c0ext|
                                                                 RRCConnectionSetupComplete-v5c0ext-IEs,
                                        v690NonCriticalExtensions
                                                                            SEQUENCE {
                                            rrcConnectionSetupComplete-v690ext
                                                                RRCConnectionSetupComplete-v690ext-IEs,
                                            v7xyNonCriticalExtensions
                                                                             SEQUENCE {
                                                {\tt rrcConectionSetupComplete-v7} xyext
                                                                RRCConnectionSetupComplete-v7xyext-IEs,
                                                                            SEQUENCE {}
                                                nonCriticalExtensions
                                                    OPTIONAL
                                                OPTIONAL
                                            OPTIONAL
                                        OPTIONAL
                                    OPTIONAL.
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
            }
                    OPTIONAL
                OPTIONAL
}
RRCConnectionSetupComplete-v370ext ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v370ext
                                            UE-RadioAccessCapability-v370ext OPTIONAL
}
RRCConnectionSetupComplete-v380ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v380ext
                                            UE-RadioAccessCapability-v380ext
                                                                                     OPTIONAL,
        dl-PhysChCapabilityFDD-v380ext
                                            DL-PhysChCapabilityFDD-v380ext
}
RRCConnectionSetupComplete-v3a0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v3a0ext
                                            UE-RadioAccessCapability-v3a0ext
                                                                                 OPTIONAL
}
RRCConnectionSetupComplete-v3g0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
                                            UE-RadioAccessCapability-v3g0ext
       ue-RadioAccessCapability-v3g0ext
                                                                                 OPTIONAL
}
RRCConnectionSetupComplete-r3-add-ext-IEs ::= SEQUENCE {
       rrcConnectionSetupComplete-v650ext
                                                RRCConnectionSetupComplete-v650ext-IEs OPTIONAL,
        v680NonCriticalExtensions
                                                SEQUENCE {
            rrcConnectionSetupComplete-v680ext
                                                    RRCConnectionSetupComplete-v680ext-IEs,
            nonCriticalExtensions
                                                    SEQUENCE {}
                                                                    OPTIONAL
        }
                OPTIONAL
}
RRCConnectionSetupComplete-v4b0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       \verb"ue-RadioAccessCapability-v4b0ext"
                                                UE-RadioAccessCapability-v4b0ext
                                                                                         OPTIONAL
}
RRCConnectionSetupComplete-v590ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v590ext
                                                UE-RadioAccessCapability-v590ext
                                                                                        OPTIONAL.
    -- Other IEs
       ue-RATSpecificCapability-v590ext
                                                InterRAT-UE-RadioAccessCapability-v590ext OPTIONAL
}
```

```
RRCConnectionSetupComplete-v5c0ext-IEs ::= SEQUENCE {
   -- User equipment IEs
      ue-RadioAccessCapability-v5c0ext UE-RadioAccessCapability-v5c0ext OPTIONAL
}
RRCConnectionSetupComplete-v650ext-IEs ::= SEQUENCE {
   -- User equipment IEs
      ue-RadioAccessCapability-v650ext UE-RadioAccessCapability-v650ext
}
RRCConnectionSetupComplete-v680ext-IEs ::= SEQUENCE {
   -- User equipment IEs
      ue-RadioAccessCapability-v680ext UE-RadioAccessCapability-v680ext
}
{\tt RRCConnectionSetupComplete-v690ext-IEs} \; ::= \; {\tt SEQUENCE} \; \; \{
   -- User equipment IEs
       ueCapabilityContainer
                                       BIT STRING
                                          (CONTAINING UE-CapabilityContainer-IEs) OPTIONAL
}
RRCConnectionSetupComplete-v7xyext-IEs ::= SEQUENCE {
      ue-RadioAccessCapability-v7xyext UE-RadioAccessCapability-v7xyext OPTIONAL
__ ****************************
-- RRC FAILURE INFO
__ ****************
RRC-FailureInfo ::= CHOICE {
                                           SEQUENCE {
       rRC-FailureInfo-r3
                                              RRC-FailureInfo-r3-IEs,
       laterNonCriticalExtensions SEQUENCE {
           -- Container for additional R99 extensions
          rrc-FailureInfo-r3-add-ext BIT STRING
                                                    OPTIONAL,
          nonCriticalExtensions
                                                 SEQUENCE {} OPTIONAL
         OPTIONAL
   criticalExtensions
                                           SEQUENCE {}
}
RRC-FailureInfo-r3-IEs ::= SEQUENCE {
   -- Non-RRC IEs
      failureCauseWithProtErr
                                                  FailureCauseWithProtErr
}
__ *******************************
-- RRC STATUS
__ ****************
RRCStatus ::= SEQUENCE {
   -- Other IEs
       -- TABULAR: Identification of received message is nested in
       -- ProtocolErrorMoreInformation
       -- Container for additional R99 extensions
          rrcStatus-r3-add-ext BIT STRING nonCriticalExtensions SEQUENCE {
                                                 OPTIONAL,
                                     SEQUENCE { } OPTIONAL
       } OPTIONAL
}
__ **************
-- SECURITY MODE COMMAND
__ ******************************
SecurityModeCommand ::= CHOICE {
       SEQUENCE {
securityModeCommand-r3
laterNonCriticalExtensions
SEQUENCE {
SecurityModeCommand-r3-IEs,
SEQUENCE {
          -- Container for additional R99 extensions
                                          BIT STRING
          securityModeCommand-r3-add-ext
                                                       OPTIONAL,
```

```
} OPTIONAL
      er-than-r3 SEQUENCE {
rrc-TransactionIdentifier RRC-TransactionIdentifier,
criticalExtensions SEQUENCE {}
   later-than-r3
}
SecurityModeCommand-r3-IEs ::= SEQUENCE {
-- TABULAR: Integrity protection shall always be performed on this message.
   -- User equipment IEs
      rrc-TransactionIdentifier RRC-TransactionIdentifier,
securityCapability SecurityCapability,
cipheringModeInfo CipheringModeInfo OPTIONAL,
integrityProtectionModeInfo IntegrityProtectionModeInfo OPTIONAL,
   -- Core network IEs
       cn-DomainIdentity
                                     CN-DomainIdentity,
   -- Other IEs
       OPTIONAL
}
__ *********************
-- SECURITY MODE COMPLETE
__ **************************
SecurityModeComplete ::= SEQUENCE {
-- TABULAR: Integrity protection shall always be performed on this message.
   -- User equipment IEs
       rrc-TransactionIdentifier RRC-TransactionIdentifier, ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                       OPTIONAL.
   -- Radio bearer IEs
       rb-UL-CiphActivationTimeInfo RB-ActivationTimeInfoList laterNonCriticalExtensions SEQUENCE {
                                                                        OPTIONAL,
           -- Container for additional R99 extensions
           securityModeComplete-r3-add-ext BIT STRING OPTIONAL,
           } OPTIONAL
}
__ **************
-- SECURITY MODE FAILURE
__ ****************************
SecurityModeFailure ::= SEQUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
       failureCause
laterNonCriticalExtensions
FailureCauseWithProtErr,
SEQUENCE {
           -- Container for additional R99 extensions
           securityModeFailure-r3-add-ext BIT STRING OPTIONAL, nonCriticalExtensions SEQUENCE {} OPTIONAL
       } OPTIONAL
}
__ **************************
-- SIGNALLING CONNECTION RELEASE
__ ****************
SignallingConnectionRelease ::= CHOICE {
                               SEQUENCE {
       signallingConnectionRelease-r3 SignallingConnectionRelease-r3-IEs,
laterNonCriticalExtensions SEQUENCE {
           -- Container for additional R99 extensions
           signallingConnectionRelease-r3-add-ext BIT STRING
                                                                    OPTIONAL,
           nonCriticalExtensions
                                         SEQUENCE {} OPTIONAL
       } OPTIONAL
                           SEQUENCE {
    later-than-r3
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
       criticalExtensions
                                      SEOUENCE {}
```

```
}
}
SignallingConnectionRelease-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
      rrc-TransactionIdentifier RRC-TransactionIdentifier,
   -- Core network IEs
       cn-DomainIdentity
                                    CN-DomainIdentity
}
  ***************
-- SIGNALLING CONNECTION RELEASE INDICATION
__ ***************
SignallingConnectionReleaseIndication ::= SEQUENCE {
    -- Core network IEs
       CN-DomainIdentity, laterNonCriticalExtensions
-- Container f
           -- Container for additional R99 extensions
           signallingConnectionReleaseIndication-r3-add-ext BIT STRING OPTIONAL,
           nonCriticalExtensions
                                SEQUENCE {} OPTIONAL
          OPTIONAL
}
__ ***************
-- SYSTEM INFORMATION for BCH
__ ***************
SystemInformation-BCH ::= SEQUENCE {
   -- Other information elements
                                    SFN-Prime,
       sfn-Prime
                                    CHOICE {
       payload
          noSegment
                                       NULL,
           firstSegment
                                        FirstSegment,
          firstSegment
subsequentSegment
lastSegmentShort
lastAndFirst
lastSegmentShort
                                        SubsequentSegment,
                                            LastSegmentShort,
                                        SEQUENCE {
                                        LastSegmentShort,
              firstSegment
                                            FirstSegmentShort
                               SEQUENCE {
           lastAndComplete
              lastSegmentShort
                                        LastSegmentShort,
              completeSIB-List
                                            CompleteSIB-List
           lastAndCompleteAndFirst SEQUENCE {
  lastSegmentShort LastSeg
  completeSIB-List Complet
                                        LastSegmentShort,
                                            CompleteSIB-List,
              firstSegment
                                            FirstSegmentShort
                                   CompleteSIB-List,
              pleteSIB-List
pleteAndFirst
completeSIB-List
           completeSIB-List
           completeAndFirst
                                        SEQUENCE {
                                            CompleteSIB-List,
              firstSegment
                                            FirstSegmentShort
           completeSIB
                                        CompleteSIB,
           lastSegment
                                        LastSegment,
           spare5
                                        NULL,
           spare4
                                        NULL,
           spare3
                                        NULL,
           spare2
                                        NULL.
           spare1
                                        NULL
}
-- SYSTEM INFORMATION for FACH
__ ***************
SystemInformation-FACH ::= SEQUENCE {
   -- Other information elements
     payload
                                     CHOICE {
          noSegment
                                        NULL,
```

```
LastSegmentShort,
FirstSegmentShort
                                   candcomplete SEQUENCE {
lastSegmentShort LastSeg
completeSIB-List
                           lastAndComplete
                                                                                                    LastSegmentShort,
                                                                                                           CompleteSIB-List
                           lastAndCompleteAndFirst SEQUENCE {
   lastSegmentShort LastSeg
   completeSIB-List Complet
   firstSegment
                                                                                                 LastSegmentShort,
                                                                                                            CompleteSIB-List,
                                 CompleteSIB-List, pleteAndFirst SEQUENCE {
   completeSIB-List CompleteSIB-I CompleteS
                                    firstSegment
                                                                                                            FirstSegmentShort
                           },
                           completeSIB-List
                           completeAndFirst
                                                                                                           CompleteSIB-List,
                                                                                                            FirstSegmentShort
                           },
                                                                                            CompleteSIB,
                           completeSIB
                           lastSegment
                                                                                                    LastSegment,
                           spare5
                                                                                                   NULL,
                                                                                                   NULL,
                           spare4
                           spare3
                                                                                                   NULL,
                           spare2
                                                                                                   NULL,
                           spare1
                                                                                                    NULL
}
__ ***************
-- First segment
__ ******************************
                                                                               SEQUENCE {
FirstSegment ::=
         -- Other information elements
                                                                                SIB-Type,
               sib-Type
                 seg-Count
                                                                                          SegCount,
                 sib-Data-fixed
                                                                                         SIB-Data-fixed
}
__ *****************
-- First segment (short)
__ **************
        stSegmentShort ::= SEQUENCE {
-- Other information elements
    sib-Type SIB-Type,
    seg-Count SegCount,
    sib-Data-variable SIB-Data-variable
FirstSegmentShort ::=
}
__ *****************
-- Subsequent segment
__ ***************
SubsequentSegment ::=
                                                                               SEQUENCE {
        -- Other information elements
                                                                              SIB-Type,
Seamentin
                 sib-Type
                 segmentIndex
                                                                                         SegmentIndex,
                                                                                     Segmenting.
SIB-Data-fixed
                 sib-Data-fixed
}
__ ***************
-- Last segment
__ ******************************
                                                                                SEQUENCE {
LastSegment ::=
         -- Other information elements
```

```
sib-Type
                                    SIB-Type,
       segmentIndex
                                    SegmentIndex,
       -- For sib-Data-fixed, in case the SIB data is less than 222 bits, padding
       -- shall be used. The same padding bits shall be used as defined in clause 12.1
       sib-Data-fixed
                                    SIB-Data-fixed
}
LastSegmentShort ::=
                                        SEQUENCE {
   -- Other information elements
       sib-Type
                                    SIB-Type,
       segmentIndex
                                    SegmentIndex,
                                    SIB-Data-variable
       sib-Data-variable
}
__ ****************************
-- Complete SIB
__ ****************************
CompleteSIB-List ::=
                                SEQUENCE (SIZE (1..maxSIBperMsg)) OF
                                    CompleteSIBshort
                                SEQUENCE {
CompleteSIB ::=
   -- Other information elements
       sib-Type
                                    SIB-Type,
       -- For sib-Data-fixed, in case the SIB data is less than 226 bits, padding
       -- shall be used. The same padding bits shall be used as defined in clause 12.1
       sib-Data-fixed
                                    BIT STRING (SIZE (226))
}
CompleteSIBshort ::=
                                       SEQUENCE {
   -- Other information elements
      sib-Type
                                  SIB-Type,
       sib-Data-variable
                                    SIB-Data-variable
}
  ***********
-- SYSTEM INFORMATION CHANGE INDICATION
__ ***************
SystemInformationChangeIndication ::= SEQUENCE {
    -- Other IEs
       bcch-ModificationInfo
                                        BCCH-ModificationInfo,
       laterNonCriticalExtensions
                                        SEQUENCE {
           -- Container for additional R99 extensions
           systemInformationChangeIndication-r3-add-ext nonCriticalExtensions SEQUENCE {} OPTIONAL
                                                      BIT STRING OPTIONAL,
          nonCriticalExtensions
         OPTIONAL
}
__ *****************
-- TRANSPORT CHANNEL RECONFIGURATION
__ ****************
TransportChannelReconfiguration ::= CHOICE {
                                SEQUENCE {
       transportChannelReconfiguration-r3
                               TransportChannelReconfiguration-r3-IEs,
SEQUENCE {
       v3a0NonCriticalExtensions
           transportChannelReconfiguration-v3a0ext
                                      TransportChannelReconfiguration-v3a0ext,
                                           SEQUENCE {
           laterNonCriticalExtensions
               -- Container for additional R99 extensions
              transportChannelReconfiguration-r3-add-ext BIT STRING OPTIONAL,
              v4b0NonCriticalExtensions SEQUENCE {
                  transportChannelReconfiguration-v4b0ext
                                           TransportChannelReconfiguration-v4b0ext-IEs,
SEQUENCE {
                  v590NonCriticalExtensions
                      transportChannelReconfiguration-v590ext
                                                   TransportChannelReconfiguration-v590ext-IEs,
                      v690NonCriticalExtensions
                                                  SEQUENCE {
                         transportChannelReconfiguration-v690ext
                                                   TransportChannelReconfiguration-v690ext-IEs,
```

OPTIONAL

SEQUENCE {}

nonCriticalExtensions

```
OPTIONAL
                            OPTIONAL
                        OPTIONAL
            }
                    OPTIONAL.
        }
                OPTIONAL
    later-than-r3
                                    SEQUENCE {
        rrc-TransactionIdentifier
                                        RRC-TransactionIdentifier,
        criticalExtensions
                                        CHOICE {
                                           SEQUENCE {
           r4
                {\tt transportChannelReconfiguration-r4}
                                                TransportChannelReconfiguration-r4-IEs,
                v4d0NonCriticalExtensions
                                                   SEQUENCE {
                    -- Container for adding non critical extensions after freezing REL-5
                    transportChannelReconfiguration-r4-add-ext
                                                                  BIT STRING
                                                                                   OPTIONAL,
                    v590NonCriticalExtensions
                                                   SEQUENCE {
                        transportChannelReconfiguration-v590ext
                                                    TransportChannelReconfiguration-v590ext-IEs,
                        v690NonCriticalExtensions
                                                       SEQUENCE {
                            transport {\tt Channel Reconfiguration-v690ext}
                                                        TransportChannelReconfiguration-v690ext-IEs,
                            nonCriticalExtensions
                                                            SEQUENCE {}
                                                                           OPTIONAL
                           OPTIONAL
                        OPTIONAL
                    OPTIONAL
            },
            criticalExtensions
                                            CHOICE {
                                               SEQUENCE {
                r5
                    transportChannelReconfiguration-r5
                                                    TransportChannelReconfiguration-r5-IEs,
                    -- Container for adding non critical extensions after freezing REL-6
                    transportChannelReconfiguration-r5-add-ext
                                                                                   OPTIONAL.
                                                                 BIT STRING
                    v690NonCriticalExtensions
                                                   SEQUENCE {
                        transportChannelReconfiguration-v690ext
                                                        TransportChannelReconfiguration-v690ext-IEs,
                                                        SEQUENCE {}
                        nonCriticalExtensions
                                                                      OPTIONAL
                    }
                        OPTIONAL
                criticalExtensions
                                                CHOICE {
                                                   SEQUENCE {
                   rб
                        transportChannelReconfiguration-r6
                                                        TransportChannelReconfiguration-r6-IEs,
                        -- Container for adding non critical extensions after freezing REL-7
                        transportChannelReconfiguration-r6-add-ext
                                                                     BIT STRING
                                                       SEQUENCE {}
                        nonCriticalExtensions
                                                                        OPTIONAL
                    },
                    criticalExtensions
                                                    CHOICE {
                                                       SEQUENCE {
                        r7
                            transportChannelReconfiguration-r7
                                                        TransportChannelReconfiguration-r7-IEs,
                            -- Container for adding non critical extensions after freezing REL-8
                            transportChannelReconfiguration-r7-add-ext BIT STRING OPTIONAL,
                            nonCriticalExtensions
                                                           SEQUENCE {}
                                                                           OPTIONAL
                        criticalExtensions
                                                       SEQUENCE {}
                   }
              }
          }
       }
    }
}
TransportChannelReconfiguration-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
                                       RRC-TransactionIdentifier,
        rrc-TransactionIdentifier
        integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                            OPTIONAL,
                                        CipheringModeInfo
                                                                            OPTIONAL,
        cipheringModeInfo
        activationTime
                                        ActivationTime
                                                                            OPTIONAL,
        new-U-RNTI
                                        U-RNTI
                                                                            OPTIONAL,
       new-C-RNTI
                                       C-RNTI
                                                                            OPTIONAL,
                                       RRC-StateIndicator.
        rrc-StateIndicator
        utran-DRX-CycleLengthCoeff
                                       UTRAN-DRX-CycleLengthCoefficient
                                                                            OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                       CN-InformationInfo
                                                                            OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                            OPTIONAL.
    -- Radio bearer IEs
```

```
dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                                 OPTIONAL.
    -- Transport channel IEs
        ul-CommonTransChInfo UL-CommonTransChInfo
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                  OPTIONAL,
                                                                                  OPTIONAL,
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
                                         CHOICE {
        dummy
                                               SEQUENCE {
            fdd
                 dummy1
                                                    CPCH-SetID
                                                                                  OPTIONAL,
                 dummy2
                                                    DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                               NULL
        DL-CommonTransChInfo DL-AddReconfTransChInfo DL-AddReconfTransChInfoList DL-AddReconfTransChInfo
                                                                                  OPTIONAL.
                                                                                  OPTIONAL,
                                          DL-AddReconfTransChInfoList
                                                                                  OPTIONAL,
    -- Physical channel IEs
        frequencyInfo FrequencyInfo
maxAllowedUL-TX-Power
ul-ChannelRequirement UL-ChannelRequirement
modeSpecificPhysChInfo
fdd

fdd

FrequencyInfo
MaxAllowedUL-TX-Power
UL-ChannelRequirement
CHOICE {
                                                                                  OPTIONAL,
                                                                                  OPTIONAL.
                                             SEQUENCE {
            fdd
                 -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                                                   DL-PDSCH-Information
                 dummy
             },
            tdd
                                          NULL
        dl-CommonInformation DL-CommonInformation
dl-InformationPerRL-List DL-InformationPerRL-List
}
TransportChannelReconfiguration-v3a0ext ::= SEQUENCE {
    -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
    -- the UE behaviour is unspecified
                                       DSCH-RNTT
    new-DSCH-RNTI
                                                                              OPTIONAL.
TransportChannelReconfiguration-v4b0ext-IEs ::= SEQUENCE {
    -- Physical channel IEs
        -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
        dummy
                                               SSDT-UL
                                                                                      OPTIONAL.
        -- The order of the RLs in IE cell-id-PerRL-List is the same as
        -- in IE DL-InformationPerRL-List included in this message
        cell-id-PerRL-List
                                               CellIdentity-PerRL-List
                                                                                     OPTIONAL
}
{\tt TransportChannelReconfiguration-v590ext-IEs} \ ::= \ {\tt SEQUENCE} \ \{
    -- Physical channel IEs
        dl-TPC-PowerOffsetPerRL-List DL-TPC-PowerOffsetPerRL-List
}
TransportChannelReconfiguration-r4-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                          IntegrityProtectionModeInfo
                                                                                  OPTIONAL,
        cipheringModeInfo
                                                                                  OPTIONAL.
                                           CipheringModeInfo
        activationTime
                                           ActivationTime
                                                                                  OPTIONAL,
        new-U-RNTI
                                           U-RNTI
                                                                                   OPTIONAL,
        new-C-RNTI
                                           C-RNTI
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
                               DSCH-RNTI
        new-DSCH-RNTI
                                                                                   OPTIONAL,
        rrc-StateIndicator
                                          RRC-StateIndicator,
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                                  OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                         CN-InformationInfo
                                                                                  OPTIONAL.
    -- UTRAN mobility IEs
        ura-Identity
                                         URA-Identity
                                                                                  OPTIONAL,
    -- Radio bearer IEs
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                                  OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo UL-CommonTransChInfo-r4
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                  OPTIONAL,
                                                                                  OPTIONAL,
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
                                           CHOICE {
            fdd
                                               SEOUENCE {
                 dummy1
                                                    CPCH-SetID
                                                                                  OPTIONAL,
```

```
dummy2
                                                     DRAC-StaticInformationList OPTIONAL
             },
             tdd
                                                NULL
                                                                                    OPTIONAL.
        dl-CommonTransChInfo DL-CommonTransChInfo-r4 dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r4
                                                                                    OPTIONAL,
                                                                                   OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                           FrequencyInfo
                                                                                   OPTIONAL.
        maxAllowedUL-TX-Power
ul-ChannelRequirement
modeSpecificPhysChInfo

MaxAllowedUL-TX-Power
UL-ChannelRequirement-:
CHOICE {
                                                                                    OPTIONAL,
                                           UL-ChannelRequirement-r4
                                                                                    OPTIONAL,
                                                SEOUENCE {
                 -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                                                    DL-PDSCH-Information
             },
             tdd
                                           NITIT.
        },
        dl-CommonInformation
                                           DL-CommonInformation-r4
                                                                                   OPTIONAL.
        dl-InformationPerRL-List
                                           DL-InformationPerRL-List-r4
                                                                                   OPTIONAL
}
TransportChannelReconfiguration-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo
                                           IntegrityProtectionModeInfo
                                                                                    OPTIONAL,
        cipheringModeInfo
                                            CipheringModeInfo
                                                                                    OPTIONAL,
        activationTime
                                           ActivationTime
                                                                                    OPTIONAL,
        new-U-RNTI
                                            U-RNTI
                                                                                    OPTIONAL,
        new-C-RNTT
                                            C-RNTT
                                                                                    OPTIONAL.
         -- The IE 'new-DSCH-RNTI' should not be included in FDD mode, and if received
         -- the UE behaviour is unspecified
                                           DSCH-RNTI
        new-DSCH-RNTI
                                                                                    OPTIONAL.
        new-H-RNTI
                                           H-RNTI
                                                                                    OPTIONAL,
        rrc-StateIndicator
                                           RRC-StateIndicator,
        utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient
                                                                                    OPTIONAL,
    -- Core network IEs
        cn-InformationInfo
                                           CN-InformationInfo
                                                                                    OPTIONAL.
    -- UTRAN mobility IEs
        ura-Identity
                                           URA-Identity
                                                                                    OPTIONAL,
    -- Radio bearer IEs
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                                   OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo UL-CommonTransChInfo-r4
ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList
                                                                                    OPTIONAL.
         -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
         -- they should not be sent and if received they should be ignored.
        dummy
                                            CHOICE {
             fdd
                                                SEQUENCE {
                 dummy1
                                                     CPCH-SetID
                                                                                    OPTIONAL,
                                                     DRAC-StaticInformationList OPTIONAL
                 dummv2
             },
             tdd
                                                NULL
                                                                                    OPTIONAL,
        dl-CommonTransChInfo DL-CommonTransChInfo-r4 dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList-r5
                                                                                    OPTIONAL,
                                                                                    OPTIONAL,
    -- Physical channel IEs
        frequencyInfo
                                            FrequencyInfo
                                                                                    OPTIONAL,
        maxAllowedUL-TX-Power MaxAllow ul-ChannelRequirement UL-Channel modeSpecificPhysChInfo CHOICE {
                                           MaxAllowedUL-TX-Power
                                                                                    OPTIONAL,
                                           UL-ChannelRequirement-r5
                                                                                    OPTIONAL.
                                               SEQUENCE {
                 -- dummy is not used in this version of specification, it should
                 -- not be sent and if received it should be ignored.
                                                    DL-PDSCH-Information
                 dummy
                                                                                   OPTIONAL
             },
             t.dd
                                           NULL
        dl-HSPDSCH-Information DL-HSPDSCH-Information dl-CommonInformation DL-CommonInformation-r5 dl-InformationPerRL-List DL-InformationPerRL-List-r5
                                                                                   OPTIONAL,
                                                                                   OPTIONAL,
                                                                                   OPTIONAL
}
TransportChannelReconfiguration-v690ext-IEs ::= SEQUENCE {
    -- User Equipment IEs
        delayRestrictionFlag
                                          DelavRestrictionFlag
                                                                                   OPTIONAL,
    -- Core network IEs
        primary-plmn-Identity
                                         PLMN-Identity
                                                                                    OPTIONAL,
    -- Physical channel IEs
```

```
-- The IE harq-Preamble-Mode should not be used in the r3 and r4 versions of the message
        -- If included in the r3 or r4 version of the message, the UE should ignore the IE
       harq-Preamble-Mode
                                      HARQ-Preamble-Mode
                                                                         OPTIONAL,
       beaconPLEst
                                      BEACON-PL-Est
                                                                         OPTIONAL,
       postVerificationPeriod
                                      ENUMERATED { true }
                                                                         OPTIONAL,
       dhs-svnc
                                      DHS-Sync
       timingMaintainedSynchInd
                                      TimingMaintainedSynchInd
                                                                         OPTIONAL.
    -- MBMS IEs
       mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                         OPTIONAL
TransportChannelReconfiguration-r6-IEs ::= SEQUENCE {
    -- User equipment IEs
       OPTIONAL,
       cipheringModeInfo
                                      CipheringModeInfo
                                                                         OPTIONAL,
       activationTime
                                      ActivationTime
                                                                         OPTIONAL,
       delayRestrictionFlag
                                      DelayRestrictionFlag
                                                                         OPTIONAL,
       new-U-RNTI
                                      U-RNTI
                                                                         OPTIONAL,
       new-C-RNTI
                                      C-RNTI
                                                                         OPTIONAL.
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
       -- and if received the UE behaviour is unspecified
       new-DSCH-RNTI
                                      DSCH-RNTI
                                                                         OPTIONAL,
                                      H-RNTI
       new-H-RNTI
                                                                         OPTIONAL,
       newPrimary-E-RNTI
                                      E-RNTI
                                                                         OPTIONAL.
       newSecondary-E-RNTI
                                                                         OPTIONAL.
                                      E-RNTT
       rrc-StateIndicator
                                      RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff
                                    UTRAN-DRX-CycleLengthCoefficient
                                                                         OPTIONAL,
    -- Core network IEs
       cn-InformationInfo
                                      CN-InformationInfo-r6
                                                                         OPTIONAL,
   -- UTRAN mobility IEs
       ura-Identity
                                      URA-Identity
                                                                         OPTIONAL.
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                         OPTIONAL,
   -- Transport channel IEs
                                                                         OPTIONAL,
       ul-CommonTransChInfo
                                      UL-CommonTransChInfo-r4
       ul-AddReconfTransChInfoList
                                      UL-AddReconfTransChInfoList-r6
                                                                         OPTIONAL,
       dl-CommonTransChInfo
                                      DL-CommonTransChInfo-r4
                                                                         OPTIONAL,
       dl-AddReconfTransChInfoList
                                      DL-AddReconfTransChInfoList-r5
                                                                         OPTIONAL,
    -- Physical channel IEs
       frequencyInfo
                                      FrequencyInfo
                                                                         OPTIONAL,
       maxAllowedUL-TX-Power
                                      MaxAllowedUL-TX-Power
                                                                         OPTIONAL,
                                      UL-DPCH-Info-r6
       ul-DPCH-Info
                                                                         OPTIONAL.
       ul-EDCH-Information
                                      UL-EDCH-Information-r6
                                                                         OPTIONAL,
       dl-HSPDSCH-Information
                                      DL-HSPDSCH-Information-r6
                                                                         OPTIONAL,
       dl-CommonInformation
                                      DL-CommonInformation-r6
       dl-InformationPerRL-List
                                      DL-InformationPerRL-List-r6
                                                                         OPTIONAL,
    -- MBMS IEs
       mbms-PL-ServiceRestrictInfo
                                      MBMS-PL-ServiceRestrictInfo-r6
                                                                         OPTIONAL.
TransportChannelReconfiguration-r7-IEs ::= SEQUENCE {
    -- User equipment IEs
       integrityProtectionModeInfo
                                      IntegrityProtectionModeInfo
                                                                         OPTIONAL,
       cipheringModeInfo
                                      CipheringModeInfo
                                                                         OPTIONAL.
       activationTime
                                      ActivationTime
                                                                         OPTIONAL,
       delayRestrictionFlag
                                      DelayRestrictionFlag
                                                                         OPTIONAL,
       new-U-RNTI
                                      U-RNTI
                                                                         OPTIONAL,
       new-C-RNTI
                                      C-RNTI
        -- The IE 'new-DSCH-RNTI' should not be included in FDD mode,
        -- and if received the UE behaviour is unspecified
                                                                         OPTIONAL,
       new-DSCH-RNTI
                                      DSCH-RNTI
       new-H-RNTI
                                      H-RNTI
                                                                         OPTIONAL,
       newPrimary-E-RNTI
                                      E-RNTI
                                                                         OPTIONAL,
       newSecondary-E-RNTI
                                      E-RNTI
                                                                         OPTIONAL,
       rrc-StateIndicator
                                      RRC-StateIndicator,
       utran-DRX-CycleLengthCoeff
                                      UTRAN-DRX-CycleLengthCoefficient
                                                                         OPTIONAL.
    -- Core network IEs
       cn-InformationInfo
                                      CN-InformationInfo-r6
                                                                         OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                      URA-Identity
                                                                         OPTIONAL,
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
                                                                         OPTIONAL,
    -- Transport channel IEs
       ul-CommonTransChInfo
                                      UL-CommonTransChInfo-r4
                                                                         OPTIONAL,
                                                                         OPTIONAL,
       ul-AddReconfTransChInfoList
                                      UL-AddReconfTransChInfoList-r6
       dl-CommonTransChInfo
                                      DL-CommonTransChInfo-r4
                                                                         OPTIONAL,
       dl-AddReconfTransChInfoList
                                      DL-AddReconfTransChInfoList-r5
                                                                         OPTIONAL.
    -- Physical channel IEs
```

```
frequencyInfo FrequencyInfo
maxAllowedUL-TX-Power MaxAllowedUL-TX-Power
ul-DPCH-Info UL-DPCH-Info-r7
                                                                                OPTIONAL,
                                                                                OPTIONAL,
                                                                               OPTIONAL,

    ul-EDCH-Information
    UL-EDCH-Information-r6

    dl-HSPDSCH-Information
    DL-HSPDSCH-Information-r7

    dl-CommonInformation
    DL-CommonInformation-r7

    dl-InformationPerRL-List
    DL-InformationPerRL-List-r7

                                                                               OPTIONAL,
                                                                               OPTIONAL,
                                                                               OPTIONAL.
    -- MBMS IEs
                                                                              OPTIONAL
        mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
}
__ ***************
-- TRANSPORT CHANNEL RECONFIGURATION COMPLETE
__ **************
TransportChannelReconfigurationComplete ::= SEQUENCE {
    -- User equipment IEs
        rro-TransactionIdentifier RRC-TransactionIdentifier, ul-IntegProtActivationInfo IntegrityProtActivationInfo
                                                                               OPTIONAL,
        -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
        ul-TimingAdvance UL-TimingAdvance
                                                                                OPTIONAL,
    -- Radio bearer IEs
        count-C-ActivationTime
                                        ActivationTime
                                                                                OPTIONAL.
        -- dummy is not used in this version of the specification and
        dummy RB-ActivationTimeInfoList OPTIONAL, ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo OPTIONAL, laterNonCriticalExtensions SEQUENCE {
-- Container for additional Pool CounterSynchronisationInfo OPTIONAL,
            transportChannelReconfigurationComplete-r3-add-ext BIT STRING
            v7xyNonCriticalExtensions SEQUENCE {
                transportChannelReconfigurationComplete-v7xyext
                                         TransportChannelReconfigurationComplete-v7xyext-IEs,
                nonCriticalExtensions
                                                 SEQUENCE { } OPTIONAL
                OPTIONAL
            OPTIONAL
}
TransportChannelReconfigurationComplete-v7xyext-IEs ::= SEQUENCE {
       ext-ul-TimingAdvance EXT-UL-TimingAdvance
                                                                              OPTIONAL
}
__ ***************************
-- TRANSPORT CHANNEL RECONFIGURATION FAILURE
__ ******************************
TransportChannelReconfigurationFailure ::= SEOUENCE {
    -- User equipment IEs
       User equipment IEs
rrc-TransactionIdentifier RRC-TransactionIdentifier,
                                       FailureCauseWithProtErr,
        failureCause
        laterNonCriticalExtensions
                                            SEQUENCE {
            -- Container for additional R99 extensions
            transportChannelReconfigurationFailure-r3-add-ext
                                                                     BIT STRING OPTIONAL,
                                            SEQUENCE {} OPTIONAL
            nonCriticalExtensions
        } OPTIONAL
}
__ *******************
-- TRANSPORT FORMAT COMBINATION CONTROL in AM or UM RLC mode
__ ****************
TransportFormatCombinationControl ::= SEQUENCE {
        -- rrc-TransactionIdentifier is always included in this version of the specification
        rrc-TransactionIdentifier RRC-TransactionIdentifier
                                                                               OPTIONAL.
                                             CHOICE {
        modeSpecificInfo
                                                  NULL,
            fdd
                                                  SEQUENCE {
            tdd
                 tfcs-ID
                                                      TFCS-Identity OPTIONAL
        dpch-TFCS-InUplink
                                             TFC-Subset,
        activationTimeForTFCSubset
                                            ActivationTime
                                                                                    OPTIONAL,
```

```
laterNonCriticalExtensions

-- Container C
                                                                             OPTIONAL,
           -- Container for additional R99 extensions
                                             SEQUENCE {} OPTIONAT
           transportFormatCombinationControl-r3-add-ext
                                                                           OPTIONAL,
              nonCriticalExtensions
       } OPTIONAL
}
__ ****************
-- TRANSPORT FORMAT COMBINATION CONTROL FAILURE
__ ****************************
TransportFormatCombinationControlFailure ::= SEQUENCE {
   -- User equipment IEs
                                    RRC-TransactionIdentifier,
       rrc-TransactionIdentifier
       laterNonCriticalExtensions

-- Container for
           -- Container for additional R99 extensions
           transportFormatCombinationControlFailure-r3-add-ext BIT STRING
                                                                               OPTIONAL,
           nonCriticalExtensions
                                         SEQUENCE {} OPTIONAL
       } OPTIONAL
}
__ ****************
-- UE CAPABILITY ENQUIRY
__ ****************
UECapabilityEnquiry ::= CHOICE {
       ueCapabilityEnquiry-r3
       ueCapabilityEnquiry-r3 UECapabilityEnquiry-r3-IEs, laterNonCriticalExtensions SEQUENCE {
            - Container for additional R99 extensions
           ueCapabilityEnquiry-r3-add-ext BIT STRING v4b0NonCriticalExtensions SEQUENCE {
                                                           OPTIONAL,
               ueCapabilityEnquiry-v4b0ext UECapabilityEnquiry-v4b0ext-IEs, v590NonCriticalExtensions SEQUENCE {
                   ueCapabilityEnquiry-v590ext
v7xyNonCriticalExtensions
UECapabilityEnquiry-v590ext-IEs,
v7xyNonCriticalExtensions
                       ueCapabilityEnquiry-v7xyext UECapabilityEnquiry-v7xyext-IEs, nonCriticalExtensions SEQUENCE {} OPTIONAL
                       OPTIONAL
                   OPTIONAL
              OPTIONAL
       } OPTIONAL
   later-than-r3
                                 SEQUENCE {
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
       criticalExtensions
                                      SEQUENCE {}
}
UECapabilityEnquiry-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
      User equipment IEs rrc-TransactionIdentifier RRC-TransactionIdentifier,
       capabilityUpdateRequirement CapabilityUpdateRequirement
}
UECapabilityEnquiry-v4b0ext-IES ::= SEQUENCE {
      capabilityUpdateRequirement-r4-ext CapabilityUpdateRequirement-r4-ext
}
UECapabilityEnquiry-v590ext-IEs ::= SEQUENCE {
       systemSpecificCapUpdateReq SystemSpecificCapUpdateReq-v590ext
UECapabilityEnquiry-v7xyext-IEs ::= SEQUENCE {
       capabilityUpdateRequirement-r7-ext
                                              CapabilityUpdateRequirement-r7-ext
}
__ ***************
-- UE CAPABILITY INFORMATION
```

```
UECapabilityInformation ::= SEQUENCE {
   -- User equipment IEs
                                      RRC-TransactionIdentifier
       rrc-TransactionIdentifier
                                                                         OPTIONAL,
       ue-RadioAccessCapability
                                      UE-RadioAccessCapability
                                                                         OPTIONAL,
    -- Other IEs
       OPTIONAL.
           {\tt ueCapabilityInformation-v370ext} \ \ {\tt UECapabilityInformation-v370ext},
           v380NonCriticalExtensions
                                              SEQUENCE {
               {\tt ueCapabilityInformation-v380ext} \qquad {\tt UECapabilityInformation-v380ext-IEs},
               v3a0NonCriticalExtensions
                                                 SEQUENCE {
                   ueCapabilityInformation-v3a0ext
                                                      UECapabilityInformation-v3a0ext-IEs,
                   laterNonCriticalExtensions
                                                      SEQUENCE {
                       -- Container for additional R99 extensions
                       ueCapabilityInformation-r3-add-ext
                                                            BIT STRING
                                   (CONTAINING UECapabilityInformation-r3-add-ext-IEs) OPTIONAL,
                       -- Reserved for future non critical extension
                       v4b0NonCriticalExtensions SEQUENCE {
                           ueCapabilityInformation-v4b0ext
                                                              UECapabilityInformation-v4b0ext,
                           v590NonCriticalExtensions
                                                              SEQUENCE {
                               ueCapabilityInformation-v590ext
                                                                 UECapabilityInformation-v590ext,
                               v5c0NonCriticalExtensions
                                                                 SEQUENCE {
                                  ueCapabilityInformation-v5c0ext
                                                                 UECapabilityInformation-v5c0ext,
                                   v690NonCriticalExtensions
                                                                     SEQUENCE {
                                      ueCapabilityInformation-v690ext
                                                             UECapabilityInformation-v690ext-IEs,
                                      v7xyNonCriticalExtensions
                                                                         SEQUENCE {
                                          ueCapabilityInformation-v7xyext
                                                             UECapabilityInformation-v7xyext-IEs,
                                          nonCriticalExtensions
                                                                         SEQUENCE {}
                                              OPTIONAL
                                          OPTIONAL
                                      OPTIONAL
                                   OPTIONAL
                              OPTIONAL
                           OPTIONAL
                       OPTIONAL
                   OPTIONAL
               OPTIONAL
}
UECapabilityInformation-v370ext ::= SEQUENCE {
   -- User equipment IEs
       ue-RadioAccessCapability-v370ext
                                              UE-RadioAccessCapability-v370ext
                                                                                     OPTIONAL
}
UECapabilityInformation-v380ext-IEs ::= SEQUENCE {
   -- User equipment IEs
       ue-RadioAccessCapability-v380ext
                                              UE-RadioAccessCapability-v380ext
                                                                                     OPTIONAL,
       dl-PhysChCapabilityFDD-v380ext
                                              DL-PhysChCapabilityFDD-v380ext
}
UECapabilityInformation-v3a0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v3a0ext
                                              UE-RadioAccessCapability-v3a0ext
                                                                                     OPTIONAL
}
UECapabilityInformation-r3-add-ext-IEs ::= SEQUENCE {
       ueCapabilityInformation-v650ext UECapabilityInformation-v650ext-IEs
                                                                                OPTIONAL,
       v680NonCriticalExtensions
                                          SEQUENCE {
           ueCapabilityInformation-v680ext
                                              UECapabilityInformation-v680ext-IEs,
           nonCriticalExtensions
                                              SEQUENCE {}
                                                           OPTIONAL
       }
               OPTIONAL
}
UECapabilityInformation-v4b0ext ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v4b0ext
                                              UE-RadioAccessCapability-v4b0ext
                                                                                     OPTIONAL
}
UECapabilityInformation-v590ext ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v3g0ext
                                              UE-RadioAccessCapability-v3g0ext
                                                                                     OPTIONAL,
                                              UE-RadioAccessCapability-v590ext
       ue-RadioAccessCapability-v590ext
                                                                                     OPTIONAL,
    -- Other IEs
       ue-RATSpecificCapability-v590ext InterRAT-UE-RadioAccessCapability-v590ext
                                                                                    OPTIONAL
```

```
}
UECapabilityInformation-v5c0ext ::= SEQUENCE {
    -- User equipment IEs
        ue-RadioAccessCapability-v5c0ext
                                                UE-RadioAccessCapability-v5c0ext
                                                                                          OPTIONAL
}
UECapabilityInformation-v650ext-IEs ::= SEQUENCE {
        ue-RadioAccessCapability-v650ext UE-RadioAccessCapability-v650ext
UECapabilityInformation-v680ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       ue-RadioAccessCapability-v680ext UE-RadioAccessCapability-v680ext
}
UECapabilityInformation-v690ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       ueCapabilityContainer
                                                  (CONTAINING UE-CapabilityContainer-IEs) OPTIONAL
}
UECapabilityInformation-v7xyext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v7xyext UE-RadioAccessCapability-v7xyext OPTIONAL
}
__ ***************
-- UE CAPABILITY INFORMATION CONFIRM
__ ****************
UECapabilityInformationConfirm ::= CHOICE {
                                     SEQUENCE {
        UECapabilityInformationConfirm-r3-IEs,
laterNonCriticalExtensions SEOUENCE {
        ueCapabilityInformationConfirm-r3
           -- Container for additional R99 extensions
ueCapabilityInformationConfirm-r3-add-ext BIT STRING OPTIONAL,
nonCriticalExtensions SEQUENCE {} OPTIONAL
        } OPTIONAL
       er-than-r3

er-than-r3

seQUENCE {

rrc-TransactionIdentifier

rrc-TransactionIdentifier,

SeQUENCE {}
    later-than-r3
}
UECapabilityInformationConfirm-r3-IEs ::= SEQUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier
                                      RRC-TransactionIdentifier
}
__ ****************************
-- UPLINK DIRECT TRANSFER
__ ****************
UplinkDirectTransfer ::= SEQUENCE {
    -- Core network IEs
        cn-DomainIdentity
                                         CN-DomainIdentity,
                                       NAS-Message,
        nas-Message
    -- Measurement IEs
        measuredResultsOnRACH MeasuredResultsOnRACH laterNonCriticalExtensions SEQUENCE {
                                                                   OPTIONAL,
             -- Container for additional R99 extensions
            -- Container for additional R99 extensions
uplinkDirectTransfer-r3-add-ext
v690NonCriticalExtensions
uplinkDirectTransfer-v690ext
nonCriticalExtensions
SEQUENCE {
UplinkDirectTransfer-v690ext-IEs,
SEQUENCE {}
OPTIONAL
                OPTIONAL
        ) OPTIONAL
}
UplinkDirectTransfer-v690ext-IEs ::= SEQUENCE {
    -- Measurement IEs
    measuredResultsOnRACHinterFreq
                                       MeasuredResultsOnRACHinterFreq
                                                                                       OPTIONAL
```

```
}
  ************
-- UPLINK PHYSICAL CHANNEL CONTROL
  **************
UplinkPhysicalChannelControl ::= CHOICE {
                                SEQUENCE {
       {\tt uplinkPhysicalChannelControl-r3\ UplinkPhysicalChannelControl-r3-IEs,}
                                       SEQUENCE {
       laterNonCriticalExtensions
           -- Container for additional R99 extensions
                                                                OPTIONAL,
           uplinkPhysicalChannelControl-r3-add-ext
                                                  BIT STRING
          -- Extension mechanism for non-release 4 information
              noncriticalExtensions
                                           SEQUENCE {}
                                                                        OPTIONAL
              OPTIONAL
          OPTIONAL
       }
                               SEQUENCE {
   later-than-r3
                               RRC-TransactionIdentifier,
CHOICE {
       rrc-TransactionIdentifier
       criticalExtensions
                                     SECTIENCE {
              uplinkPhysicalChannelControl-r4 UplinkPhysicalChannelControl-r4-IEs,
              v4d0NonCriticalExtensions
                                              SEQUENCE {
                  -- Container for adding non critical extensions after freezing REL-5
                  uplinkPhysicalChannelControl-r4-add-ext BIT STRING
                                                                       OPTIONAL,
                  v690NonCriticalExtensions SEQUENCE { uplinkPhysicalChannelControl-v690ext UplinkPhysicalChannelControl-v690ext-IEs,
                                                 SEQUENCE {} OPTIONAL
                     nonCriticalExtensions
                     OPTIONAL
                  OPTIONAL
                                    CHOICE {
           criticalExtensions
                                           SEQUENCE {
              r5
                  uplinkPhysicalChannelControl-r5 UplinkPhysicalChannelControl-r5-IEs,
                  -- Container for adding non critical extensions after freezing REL-6 \,
                  uplinkPhysicalChannelControl-r5-add-ext
                                                        BIT STRING OPTIONAL,
                  v690NonCriticalExtensions SEQUENCE {
                     uplinkPhysicalChannelControl-v690ext
                                                         UplinkPhysicalChannelControl-v690ext-IEs,
                     v6a0NonCriticalExtensions SEQUENCE{
                         uplinkPhysicalChannelControl-v6a0ext
                                                          UplinkPhysicalChannelControl-v6a0ext-IEs,
                                                      SEQUENCE {} OPTIONAL
                         nonCriticalExtensions
                         OPTIONAL
                  }
                     OPTIONAL
              criticalExtensions
                                           CHOICE {
                                             SEQUENCE {
                     uplinkPhysicalChannelControl-r7 UplinkPhysicalChannelControl-r7-IEs,
                      -- Container for adding non critical extensions after freezing REL-8
                                                            BIT STRING
                      uplinkPhysicalChannelControl-r7-add-ext
                                                  SEQUENCE { } OPTIONAL
                     nonCriticalExtensions
                                              SEQUENCE {}
                  criticalExtensions
              }
         }
      }
   }
UplinkPhysicalChannelControl-r3-IEs ::= SEOUENCE {
   -- User equipment IEs
       rrc-TransactionIdentifier
                                  RRC-TransactionIdentifier,
   -- Physical channel IEs
       ccTrCH-PowerControlInfo
                                  CCTrCH-PowerControlInfo
                                                                    OPTIONAL,
                                                                    OPTIONAL,
       timingAdvance
                                   UL-TimingAdvanceControl
       alpha
                                    Alpha
                                 SpecialBurstScheduling
       specialBurstScheduling
                                                                    OPTIONAL,
       prach-ConstantValue
                                    ConstantValueTdd
                                                                     OPTIONAL,
                                   ConstantValueTdd
       pusch-ConstantValue
                                                                     OPTIONAL
}
UplinkPhysicalChannelControl-v4b0ext-IEs ::= SEQUENCE {
   -- In case of TDD, openLoopPowerControl-IPDL-TDD is included instead of IE
   -- up-IPDL-Parameters in up-OTDOA-AssistanceData
```

```
openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4
                                                                     OPTIONAL
}
UplinkPhysicalChannelControl-r4-IEs ::= SEQUENCE {
    -- Physical channel IEs
        ccTrCH-PowerControlInfo
                                       CCTrCH-PowerControlInfo-r4
                                                                          OPTIONAL,
        specialBurstScheduling
                                       SpecialBurstScheduling
                                                                          OPTIONAL,
        tddOption
                                       CHOICE {
           tdd384
                                           SEQUENCE {
               timingAdvance
                                               UL-TimingAdvanceControl-r4 OPTIONAL,
               alpha
                                               Alpha
               prach-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL.
                                                                          OPTIONAL,
               pusch-ConstantValue
                                               ConstantValueTdd
               openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4
                                                                                 OPTIONAL
           tdd128
                                           SEQUENCE {
               ul-SynchronisationParameters
                                              UL-SynchronisationParameters-r4 OPTIONAL
        }
}
{\tt UplinkPhysicalChannelControl-r5-IEs} \; ::= \; {\tt SEQUENCE} \; \big\{
    -- Physical channel IEs
        ccTrCH-PowerControlInfo
                                     CCTrCH-PowerControlInfo-r5
        specialBurstScheduling
                                       SpecialBurstScheduling
        tddOption
                                       CHOICE {
           tdd384
                                           SEQUENCE {
               timingAdvance
                                               UL-TimingAdvanceControl-r4 OPTIONAL,
               alpha
                                               Alpha
               prach-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL.
               pusch-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL,
               openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4
                                                                                  OPTIONAL,
               hs-SICH-PowerControl
                                              HS-SICH-Power-Control-Info-TDD384
                                                                                 OPTIONAL
           t.dd128
                                          SEQUENCE {
               ul-SynchronisationParameters
                                              UL-SynchronisationParameters-r4 OPTIONAL
        }
}
UplinkPhysicalChannelControl-v690ext-IEs ::= SEQUENCE {
    -- Physical Channel IEs
       beaconPLEst
                                       BEACON-PL-Est
                                                                          OPTIONAL
UplinkPhysicalChannelControl-v6a0ext-IEs ::= SEQUENCE {
    -- Physical Channel IEs
       desired-HS-SICH-PowerLevel
                                       INTEGER (-120..-58)
                                                                          OPTIONAL.
                                       ENUMERATED { s1, s2, s3 , sparel } OPTIONAL
        tpc-Step-Size
}
UplinkPhysicalChannelControl-r7-IEs ::= SEQUENCE {
    -- Physical channel IEs
                                       CCTrCH-PowerControlInfo-r7
        ccTrCH-PowerControlInfo
        specialBurstScheduling
                                       SpecialBurstScheduling
                                       CHOICE {
        tddOption
           tdd384
                                           SEQUENCE {
               timingAdvance
                                              UL-TimingAdvanceControl-r4 OPTIONAL,
               alpha
                                               Alpha
                                                                          OPTIONAL.
               prach-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL.
               pusch-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL,
               openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4
                                                                                  OPTIONAL,
                                              HS-SICH-Power-Control-Info-TDD384 OPTIONAL
               hs-SICH-PowerControl
            },
            t.dd768
                                           SEQUENCE {
               timingAdvance
                                               UL-TimingAdvanceControl-r7 OPTIONAL,
               alpha
                                               Alpha
                                                                          OPTIONAL,
               prach-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL,
               pusch-ConstantValue
                                               ConstantValueTdd
                                                                          OPTIONAL.
               openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4
                                                                                  OPTIONAL.
               hs-SICH-PowerControl
                                               HS-SICH-Power-Control-Info-TDD768
           tdd128
                                          SEOUENCE {
               ul-SynchronisationParameters
                                               UL-SynchronisationParameters-r4 OPTIONAL,
               desired-HS-SICH-PowerLevel
                                               INTEGER (-120..-58) OPTIONAL,
                                               ENUMERATED { s1, s2, s3 , spare1 } OPTIONAL
               tpc-Step-Size
           }
        }
```

```
}
__ ***************
-- URA UPDATE
__ ***************
URAUpdate ::= SEQUENCE {
    -- User equipment IEs
       u-RNTI
                                      U-RNTI,
        ura-UpdateCause URA-UpdateCause,
protocolErrorIndicator ProtocolErrorIndicatorWithMoreInfo,
laterNonCriticalExtensions SEQUENCE {
            -- Container for additional R99 extensions
            uraUpdate-r3-add-ext BIT STRING OPTIONAL, nonCriticalExtensions SEGUENCE {} OPTIO
           nonCriticalExtensions
                                           SEQUENCE {} OPTIONAL
        } OPTIONAL
}
__ ****************
-- URA UPDATE CONFIRM
__ ***************
URAUpdateConfirm ::= CHOICE {
                               SEQUENCE {
   r3
        uraUpdateConfirm-r3
laterNonCriticalExtensions
URAUpdateConfirm-r3-IEs,
laterNonCriticalExtensions
SEQUENCE {
            -- Container for additional R99 extensions
            OPTIONAL
        ) OPTIONAL
                           SEQUENCE {
    later-than-r3
        rrc-TransactionIdentifier RRC-TransactionIdentifier,
        criticalExtensions
                                        CHOICE {
                uraUpdateConfirm-r5
           r5
                uraUpdateConfirm-r5
v690NonCriticalExtensions
uraUpdateConfirm-v690ext
nonCriticalExtensions
} OPTIONAL
}
URAUpdateConfirm-r5-IEs,
SEQUENCE {
URAUpdateConfirm-v690ext-IEs,
SEQUENCE {} OPTIONAL
                } OPTIONAL
            criticalExtensions
                                   SEQUENCE {}
        }
    }
}
URAUpdateConfirm-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
       Jser equipment its
rrc-TransactionIdentifier RRC-TransactionIdentifier,
integrityProtectionModeInfo IntegrityProtectionModeInfo
cipheringModeInfo CipheringModeInfo
                                        IntegrityProtectionModeInfo
                                                                             OPTIONAL,
                                                                             OPTIONAL,
        new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL.
        new-C-RNTI
                                        C-RNTI
                                                                             OPTIONAL,
        rrc-StateIndicator
                                       RRC-StateIndicator,
        utran-DRX-CycleLengthCoeff
                                        UTRAN-DRX-CycleLengthCoefficient
                                                                             OPTIONAL,
    -- CN information elements
       cn-InformationInfo
                                        CN-InformationInfo
                                                                             OPTIONAL.
    -- UTRAN mobility IEs
       ura-Identity
                                        URA-Identity
                                                                             OPTIONAL,
    -- Radio bearer IEs
        {\tt dl-CounterSynchronisationInfo} \quad {\tt DL-CounterSynchronisationInfo}
                                                                             OPTIONAL
}
URAUpdateConfirm-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
       integrityProtectionModeInfo
                                        IntegrityProtectionModeInfo
                                                                             OPTIONAL,
        cipheringModeInfo
                                        CipheringModeInfo
                                                                             OPTIONAL,
        new-U-RNTI
                                        U-RNTI
                                                                             OPTIONAL,
        new-C-RNTI
                                        C-RNTI
                                                                             OPTIONAL,
                                        RRC-StateIndicator,
        rrc-StateIndicator
        utran-DRX-CycleLengthCoeff
                                        UTRAN-DRX-CycleLengthCoefficient
                                                                           OPTIONAL,
```

```
-- CN information elements
       cn-InformationInfo
                                   CN-InformationInfo
                                                                     OPTIONAL,
   -- UTRAN mobility IEs
      ura-Identity
                                   URA-Identity
                                                                     OPTIONAL.
   -- Radio bearer IEs
      dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5
}
URAUpdateConfirm-v690ext-IEs ::= SEQUENCE {
   -- Core network IEs
      primary-plmn-Identity
                                       PLMN-Identity
                                                                    OPTIONAL
}
__ *******************************
-- URA UPDATE CONFIRM for CCCH
************
URAUpdateConfirm-CCCH ::= CHOICE {
                                SEQUENCE {
   r3
       uraUpdateConfirm-CCCH-r3
       -- Container for additional R99 extensions
          uraUpdateConfirm-CCCH-r3-add-ext BIT STRING OPTIONAL,
          v690NonCriticalExtensions SEQUENCE {
   uraUpdateConfirm-v690ext
   nonCriticalExtensions SEQUENCE {} OPTIONAL
}
            OPTIONAL
       } OPTIONAL
                       SEQUENCE {
   later-than-r3
      u-RNTI U-RNTI, rrc-TransactionIdentifier RRC-TransactionIdentifier,
       criticalExtensions
                                   SEQUENCE {}
}
URAUpdateConfirm-CCCH-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
      u-RNTI
   -- The rest of the message is identical to the one sent on DCCH.
      uraUpdateConfirm
                                   URAUpdateConfirm-r3-IEs
__ ****************
-- UTRAN MOBILITY INFORMATION
__ ***************
UTRANMobilityInformation ::= CHOICE {
                            SEQUENCE {
       utranMobilityInformation-r3 UTRANMobilityInformation-r3-IEs, v3a0NonCriticalExtensions SEQUENCE {
          utranMobilityInformation-v3a0ext UTRANMobilityInformation-v3a0ext-IEs, laterNonCriticalExtensions SEQUENCE {
              -- Container for additional R99 extensions
                                                              OPTIONAL,
              utranMobilityInformation-r3-add-ext BIT STRING
              v690NonCriticalExtensions SEQUENCE {
                 utranMobilityInformation-v690ext UtranMobilityInformation-v690ext-IEs,
                  nonCriticalExtensions
                                                   SEQUENCE { } OPTIONAL
              OPTIONAL
                    OPTIONAL
          }
       }
              OPTIONAL
                                SEQUENCE {
   later-than-r3
      rrc-TransactionIdentifier RRC-TransactionIdentifier,
criticalExtensions CHOICE {
    r5 SEQUENCE {
              utranMobilityInformation-r5 UTRANMobilityInformation-r5-IEs, v690NonCriticalExtensions SEQUENCE {
                 utranMobilityInformation-v690ext UtranMobilityInformation-v690ext-IEs,
                  } OPTIONAL
           criticalExtensions
                                      SEQUENCE {}
```

```
}
}
UTRANMobilityInformation-r3-IEs ::= SEQUENCE {
       User equipment IES
rrc-TransactionIdentifier
rntegrityProtectionModeInfo
cipheringModeInfo
CipheringModeInfo
CipheringModeInfo
    -- User equipment IEs
                                                                            OPTIONAL,
                                                                              OPTIONAL,
        new-U-RNTI
                                         U-RNTI
                                                                              OPTIONAL,
    new-C-RNTI C-RNTI
ue-ConnTimersAndConstants UE-ConnTimersAndConstants
-- CN information elements
cn-InformationInfo CN-InformationInfoFull
-- UTRAN mobility IEs
        new-C-RNTI
                                         C-RNTI
                                                                               OPTIONAL,
                                                                               OPTIONAL,
                                                                              OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                         URA-Identity
                                                                               OPTIONAL,
    -- Radio bearer IEs
       dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo
                                                                             OPTIONAL,
    -- Extension mechanism for non- release99 information
       nonCriticalExtensions
                                       SEQUENCE {}
}
UTRANMobilityInformation-v3a0ext-IEs ::= SEQUENCE {
    ue-ConnTimersAndConstants-v3a0ext UE-ConnTimersAndConstants-v3a0ext
UTRANMobilityInformation-r5-IEs ::= SEQUENCE {
    -- User equipment IEs
        integrityProtectionModeInfo IntegrityProtectionModeInfo CipheringModeInfo CipheringModeInfo
                                                                           OPTIONAL,
                                                                               OPTIONAL,
        new-U-RNTI
                                         U-RNTT
                                                                               OPTIONAL,
        new-C-RNTI
                                         C-RNTI
                                                                               OPTIONAL,
    ue-ConnTimersAluccia-
-- CN information elements
--formationInfo
        ue-ConnTimersAndConstants UE-ConnTimersAndConstants-r5
                                                                              OPTIONAL,
                                       CN-InformationInfoFull
                                                                              OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                        URA-Identity
                                                                               OPTIONAL,
    -- Radio bearer IEs
        dl-CounterSynchronisationInfo DL-CounterSynchronisationInfo-r5 OPTIONAL
}
UtranMobilityInformation-v690ext-IEs ::= SEQUENCE {
   -- Core network IEs
       primary-plmn-Identity
                                            PLMN-Identity
                                                                                   OPTIONAL
}
__ ***************
-- UTRAN MOBILITY INFORMATION CONFIRM
__ **************
UTRANMobilityInformationConfirm ::= SEQUENCE {
    -- User equipment IEs
       User equipment IES
rrc-TransactionIdentifier
RRC-TransactionIdentifier,
ul-IntegProtActivationInfo
Radio bearer IES
                                                                              OPTIONAL,
    -- Radio bearer IEs
        count-C-ActivationTime
                                        ActivationTime
                                                                               OPTIONAL,
        -- dummy is not used in this version of the specification and
        -- it should be ignored by the receiver.
        dummy
                                      RB-ActivationTimeInfoList
                                                                              OPTIONAL.
        ul-CounterSynchronisationInfo UL-CounterSynchronisationInfo
                                                                              OPTIONAL,
        laterNonCriticalExtensions
                                             SEQUENCE {
            -- Container for additional R99 extensions
            utranMobilityInformationConfirm-r3-add-ext BIT STRING OPTIONAL, nonCriticalExtensions SEQUENCE {} OPTIONAL
        } OPTIONAL
}
__ ****************************
-- UTRAN MOBILITY INFORMATION FAILURE
__ ***************
UTRANMobilityInformationFailure ::= SEQUENCE {
    -- UE information elements
       UE information elements
rrc-TransactionIdentifier
                                         RRC-TransactionIdentifier.
        failureCause
                                         FailureCauseWithProtErr,
```

```
laterNonCriticalExtensions
                                        SEQUENCE {
           -- Container for additional R99 extensions
                                         re-r3-add-ext BIT STRING SEQUENCE {} OPTIONAL
           utranMobilityInformationFailure-r3-add-ext
                                                                       OPTIONAL,
           nonCriticalExtensions
          OPTIONAL
}
__ ***************
-- MBMS ACCESS INFORMATION
__ ***************
MBMSAccessInformation ::= SEQUENCE {
   -- Access Information IEs
      mbms-ServiceAccessInfoList MBMS-ServiceAccessInfoList-r6,
   -- Non critical extensions
       nonCriticalExtensions
                                     SEQUENCE { } OPTIONAL
}
__ ***************
-- MBMS COMMON PTM RB INFORMATION
__ ***************
MBMSCommonPTMRBInformation ::= SEQUENCE {
   -- Common PTM RB Information IEs
       mbms-CommonRBInformationList MBMS-CommonRBInformationList-r6,
       \verb|mbms-TranspChInfoForEachTrCh| & \verb|MBMS-TranspChInfoForEachTrCh-r6|, \\
       \verb|mbms-TranspChInfoForEachCCTrCh| MBMS-TranspChInfoForEachCCTrCh-r6| OPTIONAL, \\
       mbms-PhyChInformationList MBMS-PhyChInformationList-r6,
    -- Non critical extensions
       nonCriticalExtensions
                                     SEQUENCE {}
                                                     OPTIONAL
}
__ ***************
-- MBMS CURRENT CELL PTM RB INFORMATION
***********
MBMSCurrentCellPTMRBInformation ::= SEQUENCE {
   -- Current Cell PTM RB Information IEs
      mbms-CurrentCell-SCCPCHList MBMS-CurrentCell-SCCPCHList-r6 OPTIONAL, mbms-SIBType5-SCCPCHList MBMS-SIBType5-SCCPCHList-r6 OPTIONAL,
       mbms-SIBType5-SCCPCHList
   -- Non critical extensions
                                     SEQUENCE { } OPTIONAL
       nonCriticalExtensions
__ ***************
-- MBMS GENERAL INFORMATION
__ ****************
MBMSGeneralInformation ::= SEQUENCE {
   -- MBMS General Information IEs

mbms-PreferredFrequencyInfo
mbms-TimersAndCounters
michConfigurationInfo
cellGroupIdentity

-- MBMS General Information IEs

MBMS-PreferredFrequencyList-r6
MBMS-TimersAndCounters-r6,
MBMS-MICHConfigurationInfo-r6,
MBMS-CellGroupIdentity-r6,
       mschDefaultConfigurationInfo MBMS-MSCH-ConfigurationInfo-r6
   -- Non critical extensions
v7xyNonCriticalExtensions
SEQUENCE {
           \verb|mbmsGenerAlInformation-v7xyext| & \verb|MBMSGeneralInformation-v7xyext-IEs|, \\
                                          SEQUENCE {} OPTIONAL
           nonCriticalExtensions
}
MBMSGeneralInformation-v7xyext-IEs ::= SEQUENCE {
       mbmsMICHConfiguration-v7xyext MBMS-MICHConfigurationInfo-r7
                                                                        OPTIONAL
__ ****************
-- MBMS MODIFICATION REQUEST
```

```
__ ****************************
MBMSModificationRequest ::= SEQUENCE {
   -- MBMS Modification Request IEs

mbms-PreferredFreqRequest MBMS-ServiceIdentity-r6
rb-InformationReleaseList RB-InformationReleaseList
-- Non critical extensions
nonCriticalExtensions SEQUENCE {} OPTIONAL
                                                                      OPTIONAL,
                                                                     OPTIONAL,
}
__ ****************************
-- MBMS MODIFIED SERVICES INFORMATION
__ *****************
MBMSModifiedServicesInformation ::= SEQUENCE {
   -- MBMS Modified Services Information IEs
                             MBMS-ModifedServiceList-r6 OPTIONAL, ENUMERATED { true } OPTIONAL,
       modifedServiceList
       mbms-ReacquireMCCH ENUMERATED { true }
mbms-DynamicPersistenceLevel DynamicPersistenceLevel
                                                                      OPTIONAL,
       endofModifiedMCCHInformation
mbmsNumberOfNeighbourCells
mbms-AllUnmodifiedPTMServices

MBMS-NumberOfNeighbourCells-r6,
ENUMERATED { true }
                                                                     OPTIONAL,
       mbms-PTMActivationTime
                                   MBMS-PTMActivationTime-r6
                                                                      OPTIONAL.
   -- Non critical extensions nonCriticalExtensions
                                    SEQUENCE {}
                                                   OPTIONAL
}
__ ***************
-- MBMS NEIGHBOURING CELL PTM RB INFORMATION
__ ****************
MBMSNeighbouringCellPTMRBInformation ::= SEQUENCE {
  -- MBMS Neighbouring Cell PTM RB Information IEs
      neighbouringCellsCCPCHList MBMS-NeighbouringCellsCCPCHList-r6,
   -- Non critical extensions
       nonCriticalExtensions
                                    SEQUENCE {}
}
__ ****************
-- MBMS SCHEDULING INFORMATION
__ ****************************
MBMSSchedulingInformation ::= SEQUENCE {
   }
__ *****************
-- MBMS UNMODIFIED SERVICES INFORMATION
__ ******************
MBMSUnmodifiedServicesInformation ::= SEQUENCE {
   -- MBMS Unmodified Services Information IEs
                               MBMS-UnmodifiedServiceList-r6 OPTIONAL,
      unmodifiedServiceList
   -- Non critical extensions
                                   SEQUENCE { } OPTIONAL
       nonCriticalExtensions
}
END
```

11.3 Information element definitions

```
CORE NETWORK INFORMATION ELEMENTS (10.3.1)
__ **************
BEGIN
IMPORTS
   hiPDSCHidentities,
   hiPUSCHidentities,
   hiRM,
   maxAC,
   maxAdditionalMeas,
   maxASC,
   maxASCmap,
   maxASCpersist,
   maxCCTrCH,
   maxCellMeas,
   maxCellMeas-1,
   maxCNdomains,
   maxCPCHsets,
   maxDPCH-DLchan,
   maxDPDCH-UL,
   maxDRACclasses,
   maxE-DCHMACdFlow,
   maxE-DCHMACdFlow-1,
   maxFACHPCH,
   maxFreq,
   maxFreqBandsFDD,
   maxFreqBandsFDD-ext,
   maxFreqBandsTDD,
   maxFreqBandsGSM,
   maxGERAN-SI,
   maxHProcesses,
   maxHSDSCHTBIndex,
   maxHSDSCHTBIndex-tdd384,
   maxHSSCCHs,
   maxInterSysMessages,
   maxLoCHperRLC,
   maxMAC-d-PDUsizes,
   maxMBMS-CommonCCTrCh,
   maxMBMS-CommonPhyCh,
   maxMBMS-CommonRB,
   maxMBMS-CommonTrCh,
   maxMBMS-Freq,
   maxMBMS-L1CP,
   maxMBMSservCount,
   maxMBMSservModif,
   maxMBMSservSched,
   maxMBMSservUnmodif,
   maxMBMSTransmis,
   maxMeasEvent,
   maxMeasIntervals,
   maxMeasParEvent,
   maxNumCDMA2000Freqs,
    maxNumFDDFreqs,
    maxNumGSMFreqRanges,
   maxGSMTargetCells,
   maxNumTDDFreqs,
   maxOtherRAT,
   maxOtherRAT-16,
   maxPage1,
   maxPCPCH-APsig,
   maxPCPCH-APsubCh,
   maxPCPCH-CDsig,
   maxPCPCH-CDsubCh,
   maxPCPCH-SF,
   maxPCPCHs,
   maxPDCPAlgoType,
   maxPDSCH,
   maxPDSCH-TFCIgroups,
   maxPRACH,
   maxPRACH-FPACH,
   maxPredefConfig,
   maxPUSCH,
    maxQueueIDs,
   maxRABsetup,
    maxRAT,
    maxRB,
```

```
maxRBallRABs,
   maxRBperTrCh,
   maxRBMuxOptions,
   maxRBperRAB,
   maxReportedGSMCells,
   maxRLCPDUsizePerLogChan,
   maxSRBsetup,
   maxRL,
    {\tt maxRL-1}
    maxEDCHRL,
   maxROHC-PacketSizes-r4,
    maxROHC-Profile-r4,
   maxSCCPCH,
   maxSat,
   maxSIB,
   maxSIB-FACH.
   maxSystemCapability,
   maxTF,
   maxTF-CPCH,
   maxTFC.
   maxTFCsub,
   maxTFCI-2-Combs,
   maxTGPS,
   maxTrCH,
   maxTrCHpreconf,
   maxTS,
   maxTS-1,
   maxTS-2,
   maxTS-LCR,
   maxTS-LCR-1,
   maxURA,
   maxURNTI-Group
FROM Constant-definitions;
                                            BIT STRING (SIZE (14))
Ansi-41-IDNNS ::=
CN-DomainIdentity ::=
                                    ENUMERATED {
                                        cs-domain,
                                        ps-domain }
                                    SEQUENCE {
CN-DomainInformation ::=
                                        CN-DomainIdentity,
    cn-DomainIdentity
    cn-DomainSpecificNAS-Info
                                        NAS-SystemInformationGSM-MAP
                                   SEQUENCE {
CN-DomainInformationFull ::=
    cn-DomainIdentity
                                      CN-DomainIdentity,
    cn-DomainSpecificNAS-Info
                                        NAS-SystemInformationGSM-MAP,
    cn-DRX-CycleLengthCoeff
                                        CN-DRX-CycleLengthCoefficient
}
CN-DomainInformationList ::=
                                    SEQUENCE (SIZE (1..maxCNdomains)) OF
                                        CN-DomainInformation
CN-DomainInformationListFull ::=
                                    SEQUENCE (SIZE (1..maxCNdomains)) OF
                                        CN-DomainInformationFull
CN-DomainSysInfo ::=
                                    SEQUENCE {
                                        CN-DomainIdentity,
   cn-DomainIdentity
                                        CHOICE {
    cn-Type
       gsm-MAP
                                            NAS-SystemInformationGSM-MAP,
                                            NAS-SystemInformationANSI-41
       ansi-41
    }.
    cn-DRX-CycleLengthCoeff
                                        CN-DRX-CycleLengthCoefficient
}
CN-DomainSysInfoList ::=
                                    SEQUENCE (SIZE (1..maxCNdomains)) OF
                                        CN-DomainSysInfo
CN-InformationInfo ::=
                                    SEQUENCE {
                                        PLMN-Identity
   plmn-Identity
                                                                            OPTIONAL,
    cn-CommonGSM-MAP-NAS-SysInfo
                                        NAS-SystemInformationGSM-MAP
                                                                            OPTIONAL,
    cn-DomainInformationList
                                        CN-DomainInformationList
                                                                            OPTIONAL
CN-InformationInfo-r6 ::=
                                    SEOUENCE {
                                       PLMN-Identity
                                                                            OPTIONAL,
    plmn-Identity
    cn-CommonGSM-MAP-NAS-SysInfo
                                        NAS-SystemInformationGSM-MAP
                                                                             OPTIONAL,
    cn-DomainInformationList
                                        CN-DomainInformationList
                                                                             OPTIONAL,
```

```
primary-plmn-Identity
                                      PLMN-Identity
                                                                            OPTIONAL
}
CN-InformationInfoFull ::=
                                    SEQUENCE {
   plmn-Identity
                                       PLMN-Identity
                                        PLMN-Identity
NAS-SystemInformationGSM-MAP
                                                                            OPTIONAL,
    cn-CommonGSM-MAP-NAS-SysInfo
                                                                           OPTIONAL,
   cn-DomainInformationListFull
                                       CN-DomainInformationListFull
                                                                           OPTIONAL
}
Digit ::=
                                    INTEGER (0..9)
Gsm-map-IDNNS ::=
                                            SEQUENCE {
   routingbasis
                                                    CHOICE {
       localPTMSI
                                                        SEQUENCE {
           routingparameter
                                                           RoutingParameter
        tMSIofsamePLMN
                                                        SEQUENCE {
           routingparameter
                                                           RoutingParameter
        tMSIofdifferentPLMN
                                                        SEQUENCE {
                                                           RoutingParameter
           routingparameter
        iMSIresponsetopaging
                                                        SEQUENCE {
                                                            RoutingParameter
           routingparameter
        iMSIcauseUEinitiatedEvent
                                                        SEQUENCE {
          routingparameter
                                                           RoutingParameter
        iMEI
                                                        SEQUENCE {
           routingparameter
                                                           RoutingParameter
                                                        SEQUENCE {
        spare2
                                                            RoutingParameter
           routingparameter
        spare1
                                                        SEQUENCE {
           routingparameter
                                                            RoutingParameter
    -- dummy is not used in this version of the specification and
    -- it should be ignored by the receiver.
                                            BOOLEAN
}
IMEI ::=
                                    SEQUENCE (SIZE (15)) OF
                                       IMEI-Digit
                                    INTEGER (0..15)
IMEI-Digit ::=
IMSI-GSM-MAP ::=
                                    SEQUENCE (SIZE (6..21)) OF
                                        Digit
                                                SEQUENCE {
IntraDomainNasNodeSelector ::=
   version
                                                    CHOICE {
                                                        SEQUENCE {
       release99
           cn-Type
                                                           CHOICE {
               gsm-Map-IDNNS
                                                                Gsm-map-IDNNS,
                ansi-41-IDNNS
                                                                Ansi-41-IDNNS
       later
                                                        SEQUENCE {
           futurecoding
                                                            BIT STRING (SIZE (15))
    }
}
LAI ::=
                                    SEQUENCE {
   plmn-Identity
                                        PLMN-Identity,
                                        BIT STRING (SIZE (16))
   lac
}
MCC ::=
                                    SEQUENCE (SIZE (3)) OF
                                       Digit
MNC ::=
                                    SEQUENCE (SIZE (2..3)) OF
                                        Digit
MultiplePLMN-List-r6 ::=
                                    SEQUENCE {
   mibPLMN-Identity
                                        BOOLEAN,
```

847

```
multiplePLMNs
                                     SEQUENCE (SIZE (1..5)) OF
                                        PLMN-IdentityWithOptionalMCC-r6
}
NAS-Message ::=
                                 OCTET STRING (SIZE (1..4095))
NAS-Synchronisation-Indicator ::= BIT STRING(SIZE(4))
NAS-SystemInformationGSM-MAP ::=
                               OCTET STRING (SIZE (1..8))
P-TMSI-GSM-MAP ::=
                                 BIT STRING (SIZE (32))
PagingRecordTypeID ::=
                                 ENUMERATED {
                                     imsi-GSM-MAP,
                                     tmsi-GSM-MAP-P-TMSI,
                                     imsi-DS-41,
                                     tmsi-DS-41 }
PLMN-Identity ::=
                                 SEQUENCE {
                                     MCC,
   mcc
                                     MNC
   mnc
}
PLMN-IdentityWithOptionalMCC-r6 ::= SEQUENCE {
                                                           OPTIONAL.
                                     MCC
   mcc
   mnc
                                     MNC
}
PLMN-Type ::=
                                 CHOICE {
                                   SEQUENCE {
   gsm-MAP
     plmn-Identity
                                     PLMN-Identity
                                 SEQUENCE {
   ansi-41
       p-REV
                                    P-REV.
                                    Min-P-REV,
       min-P-REV
       sid
                                     SID,
       nid
                                    NID
   },
   gsm-MAP-and-ANSI-41
plmn-Identity
                                SEQUENCE {
                                 PLMN-Identity,
       p-REV
                                     P-REV,
       min-P-REV
                                    Min-P-REV,
                                    SID,
       sid
       nid
                                    NID
   spare
                                 NULL
}
RAB-Identity ::=
                                 CHOICE {
  gsm-MAP-RAB-Identity
                                 BIT STRING (SIZE (8)),
   ansi-41-RAB-Identity
                                    BIT STRING (SIZE (8))
}
RAI ::=
                                 SEQUENCE {
                                    LAI,
  lai
                                     RoutingAreaCode
   rac
RoutingAreaCode ::=
                                BIT STRING (SIZE (8))
                                            BIT STRING (SIZE (10))
RoutingParameter ::=
TMSI-GSM-MAP ::=
                                BIT STRING (SIZE (32))
__ ****************
     UTRAN MOBILITY INFORMATION ELEMENTS (10.3.2)
__ ****************
                                 ENUMERATED {
AccessClassBarred ::=
                                    barred, notBarred }
AccessClassBarredList ::=
                                 SEQUENCE (SIZE (maxAC)) OF
                                    AccessClassBarred
                                 ENUMERATED {
AllowedIndicator ::=
                                     allowed, notAllowed }
```

```
SEQUENCE {
CellAccessRestriction ::=
    cellBarred
                                       CellBarred,
   cellReservedForOperatorUse
cellReservationExtension
                                       ReservedIndicator,
    cellReservationExtension
                                       ReservedIndicator,
    -- NOTE: IE accessClassBarredList should not be included if the IE CellAccessRestriction
    -- is included in the IE SysInfoType4
                                        AccessClassBarredList
    accessClassBarredList
                                                                            OPTIONAL
}
                                    CHOICE {
CellBarred ::=
                                        SEQUENCE {
   barred
                                           AllowedIndicator,
        intraFreqCellReselectionInd
       t-Barred
                                            T-Barred
                                        NULL
   notBarred
}
CellIdentity ::=
                                   BIT STRING (SIZE (28))
                                   SEQUENCE (SIZE (1..maxRL)) OF CellIdentity
CellIdentity-PerRL-List ::=
CellSelectReselectInfoSIB-3-4 ::= SEQUENCE {
   mappingInfo
                                        MappingInfo
                                                                             OPTIONAL.
   mappinginio
cellSelectQualityMeasure
                                        CHOICE {
       cpich-Ec-N0
                                           SEQUENCE {
           -- Default value for q-HYST-2-S is q-HYST-1-S
            a-HYST-2-S
                                               O-Hvst-S
                                                                            OPTIONAL
            -- Default value for q-HYST-2-S is q-HYST-1-S
        },
        cpich-RSCP
                                            NULL
    },
                                        CHOICE {
    modeSpecificInfo
        fdd
                                            SEQUENCE {
                                                                           OPTIONAL,
            s-Intrasearch
                                                S-SearchQual
            s-Intersearch
                                                S-SearchQual
                                                                            OPTIONAL.
                                                S-SearchRXLEV
            s-SearchHCS
                                                                            OPTIONAL.
            rat-List
                                                RAT-FDD-InfoList
                                                                            OPTIONAL,
            q-QualMin
                                                Q-QualMin,
            q-RxlevMin
                                                Q-RxlevMin
        },
        tdd
                                            SEQUENCE {
            s-Intrasearch
                                               S-SearchRXLEV
                                                                            OPTIONAL.
                                                S-SearchRXLEV
            s-Intersearch
                                                                            OPTIONAL,
            s-SearchHCS
                                                S-SearchRXLEV
                                                                            OPTIONAL,
                                                RAT-TDD-InfoList
            rat-List
                                                                            OPTIONAL,
            q-RxlevMin
                                                O-RxlevMin
    },
    a-Hvst-1-S
                                       Q-Hyst-S,
    t-Reselection-S
                                       T-Reselection-S,
                                                                           OPTIONAL,
   hcs-ServingCellInformation
                                       HCS-ServingCellInformation
    maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
}
DomainSpecificAccessRestrictionForSharedNetwork-v670ext ::= CHOICE {
        domainSpecificAccessRestictionList
                                                            DomainSpecificAccessRestrictionList-
        {\tt domainSpecificAccessRestrictionParametersForAll} \qquad {\tt DomainSpecificAccessRestrictionParametersForAll}
v670ext
}
DomainSpecificAccessRestrictionList-v670ext ::= SEQUENCE {
        {\tt domainSpecificAccessRestrictionParametersForOperator1}
                                    DomainSpecificAccessRestrictionParam-v670ext
                                                                                     OPTIONAL,
        {\tt domainSpecificAccessRestrictionParametersForOperator2}
                                    DomainSpecificAccessRestrictionParam-v670ext
                                                                                     OPTIONAL,
        {\tt domainSpecificAccessRestrictionParametersForOperator3}
                                    DomainSpecificAccessRestrictionParam-v670ext
                                                                                     OPTIONAL,
        {\tt domainSpecificAccessRestrictionParametersForOperator 4}
                                   DomainSpecificAccessRestrictionParam-v670ext
                                                                                     OPTIONAL,
        domainSpecificAccessRestrictionParametersForOperator5
                                    DomainSpecificAccessRestrictionParam-v670ext
                                                                                     OPTIONAL
}
DomainSpecificAccessRestrictionParam-v670ext ::= SEQUENCE {
        cSDomainSpecificAccessRestriction DomainSpecificAccessRestriction-v670ext,
        pSDomainSpecificAccessRestriction
                                                DomainSpecificAccessRestriction-v670ext
```

```
}
DomainSpecificAccessRestriction-v670ext ::= CHOICE {
       noRestriction NULL,
       restriction
                           SEQUENCE {
           domainSpecficAccessClassBarredList
                                                 AccessClassBarredList OPTIONAL
}
MapParameter ::=
                                   INTEGER (0..99)
Mapping ::=
                                   SEQUENCE {
                                       RAT,
   mappingFunctionParameterList
                                       MappingFunctionParameterList
}
Mapping-LCR-r4 ::=
                                   SEQUENCE {
                                   MappingFunctionParameterList
   mappingFunctionParameterList
MappingFunctionParameter ::=
                                   SEQUENCE {
    functionType
                                       MappingFunctionType,
   mapParameter1
                                       MapParameter
                                                                           OPTIONAL,
   mapParameter2
                                       MapParameter,
    -- The presence of upperLimit is conditional on the number of repetition
   upperLimit
                                       UpperLimit
                                                                           OPTIONAL
                                   SEQUENCE (SIZE (1..maxMeasIntervals)) OF
MappingFunctionParameterList ::=
                                       MappingFunctionParameter
MappingFunctionType ::=
                                   ENUMERATED {
                                       linear,
                                       functionType2,
                                        functionType3,
                                        functionType4 }
-- In MappingInfo list, mapping for FDD and 3.84Mcps TDD is defined.
-- For 1.28Mcps TDD, Mapping-LCR-r4 is used instead.
MappingInfo ::=
                                   SEQUENCE (SIZE (1..maxRAT)) OF
                                       Mapping
-- Actual value Q-Hyst-S = IE value * 2
Q-Hyst-S ::=
                                   INTEGER (0..20)
Q-Hyst-S-Fine ::= INTEGER (0..40)
RAT ::=
                                   ENUMERATED {
                                       utra-FDD,
                                       utra-TDD,
                                       gsm,
                                       cdma2000 }
RAT-FDD-Info ::=
                                    SEQUENCE {
   rat-Identifier
                                       RAT-Identifier,
   s-SearchRAT
                                       S-SearchQual,
    s-HCS-RAT
                                       S-SearchRXLEV
                                                                               OPTIONAL,
   s-Limit-SearchRAT
                                       S-SearchQual
RAT-FDD-InfoList ::=
                                   SEQUENCE (SIZE (1..maxOtherRAT)) OF
                                       RAT-FDD-Info
RAT-Identifier ::=
                                   ENUMERATED {
                                       gsm, cdma2000 }
RAT-TDD-Info ::=
                                   SEQUENCE {
   rat-Identifier
                                      RAT-Identifier,
                                       S-SearchRXLEV,
    s-SearchRAT
    s-HCS-RAT
                                       S-SearchRXLEV
                                                                          OPTIONAL,
    s-Limit-SearchRAT
                                       S-SearchRXLEV
}
RAT-TDD-InfoList ::=
                                   SEQUENCE (SIZE (1..maxOtherRAT)) OF
                                       RAT-TDD-Info
ReservedIndicator ::=
                                   ENUMERATED {
                                       reserved,
```

```
notReserved }
-- Actual value S-SearchQual = IE value * 2
S-SearchOual ::=
                                       INTEGER (-16..10)
-- Actual value S-SearchRXLEV = (IE value * 2) + 1
S-SearchRXLEV ::=
                                       INTEGER (-53..45)
-- Actual value ScalingFactor = IE value * 0.1
SpeedDependentScalingFactor ::=
                                  INTEGER (0..10)
T-Barred ::=
                                   ENUMERATED {
                                       s10, s20, s40, s80,
                                       s160, s320, s640, s1280 }
                                   INTEGER (0..31)
T-Reselection-S ::=
-- Actual value T-Reselection-S-Fine = IE value * 0.2
T-Reselection-S-Fine ::=
                                   INTEGER (0..31)
-- Actual value ScalingFactor = IE value * 0.25
TreselectionScalingFactor ::=
                                  INTEGER (4..19)
-- For UpperLimit, the used range depends on the RAT used.
                                   INTEGER (1..91)
UpperLimit ::=
URA-Identity ::=
                                   BIT STRING (SIZE (16))
URA-IdentityList ::=
                                   SEQUENCE (SIZE (1..maxURA)) OF
                                       URA-Identity
__ ****************
      USER EQUIPMENT INFORMATION ELEMENTS (10.3.3)
__ *****************************
AccessStratumReleaseIndicator ::= ENUMERATED {
                                       rel-4, rel-5, rel-6, rel-7,
                                       spare12, spare11, spare10, spare9, spare8,
                                       spare7, spare6, spare5, spare4, spare3,
                                       spare2, spare1 }
-- TABULAR : for ActivationTime, value 'now' always appear as default, and is encoded
-- by absence of the field
ActivationTime ::=
                                   INTEGER (0..255)
BackoffControlParams ::=
                                  SEQUENCE {
   n-AP-RetransMax
                                      N-AP-RetransMax,
   n-AccessFails
                                       N-AccessFails,
   nf-BO-NoAICH
                                       NF-BO-NoAICH,
                                      NS-BO-Busy,
   ns-BO-Busy
   nf-BO-AllBusy
                                      NF-BO-AllBusy,
                                       NF-BO-Mismatch,
    nf-BO-Mismatch
                                       T-CPCH
    t-CPCH
}
C-RNTI ::=
                                   BIT STRING (SIZE (16))
CapabilityUpdateRequirement ::=
                                   SEOUENCE {
    ue-RadioCapabilityFDDUpdateRequirement BOOLEAN,
    -- ue-RadioCapabilityTDDUpdateRequirement is for 3.84Mcps TDD update requirement
    ue-RadioCapabilityTDDUpdateRequirement BOOLEAN,
                                      SystemSpecificCapUpdateReqList OPTIONAL
    systemSpecificCapUpdateReqList
}
CapabilityUpdateRequirement-r4-ext ::= SEQUENCE {
   ue-RadioCapabilityUpdateRequirement-TDD128 BOOLEAN
CapabilityUpdateRequirement-r4 ::= SEQUENCE {
    ue-RadioCapabilityFDDUpdateRequirement-FDD BOOLEAN,
   ue-RadioCapabilityTDDUpdateRequirement-TDD384 BOOLEAN, ue-RadioCapabilityTDDUpdateRequirement-TDD128 BOOLEAN,
    ue-RadioCapabilityTDDUpdateRequirement-TDD128
    systemSpecificCapUpdateReqList
                                   SystemSpecificCapUpdateReqList OPTIONAL
CapabilityUpdateRequirement-r7-ext ::= SEQUENCE {
```

```
ue-RadioCapabilityUpdateRequirement-TDD768 BOOLEAN
}
-- If the IE CellUpdateCause has the value 'cellUpdateCause-ext', the actual value is
-- defined in the IE CellUpdateCause-ext.
                                    ENUMERATED {
CellUpdateCause ::=
                                        cellReselection,
                                        periodicalCellUpdate,
                                        uplinkDataTransmission,
                                        utran-pagingResponse,
                                        re-enteredServiceArea,
                                        radiolinkFailure,
                                        rlc-unrecoverableError,
                                        cellUpdateCause-ext }
-- The IE CellUpdateCause-ext shall be present, if the IE CellUpdateCause has the
-- value 'cellUpdateCause-ext'.
CellUpdateCause-ext ::=
                                    ENUMERATED {
                                        mbms-Reception,
                                        mbms-PTP-RB-Request, spare2, spare1 }
ChipRateCapability ::=
                                    ENUMERATED {
                                       mcps3-84, mcps1-28 }
ChipRateCapability-r7 ::=
                                        ENUMERATED {
                                        mcps3-84, mcps7-68, mcps1-28 }
CipheringAlgorithm ::=
                                    ENUMERATED {
                                        uea0, uea1 }
CipheringModeCommand ::=
                                    CHOICE {
    startRestart
                                       CipheringAlgorithm,
                               NULL
    dummy
CipheringModeInfo ::=
                                    SEQUENCE {
    -- TABULAR: The ciphering algorithm is included in the CipheringModeCommand.
   cipheringModeCommand CipheringModeCommand, activationTimeForDPCH ActivationTime
                                                                            OPTIONAL,
                                      RB-ActivationTimeInfoList
    rb-DL-CiphActivationTimeInfo
                                                                            OPTIONAL
CN-DRX-CycleLengthCoefficient ::= INTEGER (6..9)
CN-PagedUE-Identity ::=
                                    CHOICE {
    imsi-GSM-MAP
                                        IMSI-GSM-MAP,
    tmsi-GSM-MAP
                                        TMSI-GSM-MAP.
    p-TMSI-GSM-MAP
                                        P-TMSI-GSM-MAP,
    imsi-DS-41
                                        IMSI-DS-41,
    tmsi-DS-41
                                        TMSI-DS-41,
    spare3
                                        NULL,
    spare2
                                        NULTITA .
    spare1
                                        NULL
{\tt CompressedModeMeasCapability ::= SEQUENCE } \{
    fdd-Measurements
                                       BOOLEAN,
    -- TABULAR: The IEs tdd-Measurements, gsm-Measurements and multiCarrierMeasurements
    -- are made optional since they are conditional based on another information element.
    -- Their absence corresponds to the case where the condition is not true.
    tdd-Measurements
                                       BOOLEAN
                                                                             OPTIONAL,
    gsm-Measurements
                                        GSM-Measurements
                                                                             OPTIONAL,
    multiCarrierMeasurements
                                                                             OPTIONAL
}
CompressedModeMeasCapability-LCR-r4 ::= SEQUENCE {
    tdd128-Measurements
                                                                             OPTIONAL
                                            BOOLEAN
CompressedModeMeasCapabFDDList ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                        {\tt CompressedModeMeasCapabFDD}
CompressedModeMeasCapabFDDList2 ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                        {\tt Compressed Mode Meas Capab FDD 2}
CompressedModeMeasCapabFDDList-ext ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                            CompressedModeMeasCapabFDD-ext
```

```
CompressedModeMeasCapabFDD ::=
                                  SEQUENCE {
    radioFrequencyBandFDD
                                       RadioFrequencyBandFDD OPTIONAL,
    dl-MeasurementsFDD
                                        BOOLEAN,
                                        BOOLEAN
    ul-MeasurementsFDD
    oressedModeMeasCapabFDD2 ::= SEQUENCE {
-- UE may omit both IEs if this IE indicates the compressed mode capability within the same
CompressedModeMeasCapabFDD2 ::=
    -- frequency band. Otherwise, the UE shall include either one of the following OPTIONAL IEs.
    radioFrequencyBandFDD
                                       RadioFrequencyBandFDD OPTIONAL,
                                        RadioFrequencyBandFDD2 OPTIONAL,
    radioFrequencyBandFDD2
    dl-MeasurementsFDD
                                        BOOLEAN.
    ul-MeasurementsFDD
                                       BOOLEAN
}
CompressedModeMeasCapabFDD-ext ::= SEQUENCE {
    radioFrequencyBandFDD2
                                        RadioFrequencyBandFDD2,
    dl-MeasurementsFDD
                                        BOOLEAN,
    ul-MeasurementsFDD
                                        BOOLEAN
}
CompressedModeMeasCapabTDDList ::= SEQUENCE (SIZE (1..maxFreqBandsTDD)) OF
                                       CompressedModeMeasCapabTDD
{\tt CompressedModeMeasCapabTDD} ::= \\ {\tt SEQUENCE} \ \{
                                    {	t RadioFrequencyBandTDD} ,
   radioFrequencyBandTDD
    dl-MeasurementsTDD
                                        BOOLEAN,
    ul-MeasurementsTDD
                                        BOOLEAN
}
CompressedModeMeasCapabGSMList ::= SEQUENCE (SIZE (1..maxFreqBandsGSM)) OF
                                       CompressedModeMeasCapabGSM
                                    SEQUENCE {
CompressedModeMeasCapabGSM ::=
    radioFrequencyBandGSM
                                       RadioFrequencyBandGSM,
    dl-MeasurementsGSM
                                        BOOLEAN,
   ul-MeasurementsGSM
                                       BOOLEAN
}
CompressedModeMeasCapabMC ::=
                                    SEQUENCE {
    dl-MeasurementsMC
                                        BOOLEAN,
                                        BOOLEAN
    ul-MeasurementsMC
}
CPCH-Parameters ::=
                                    SEQUENCE {
    initialPriorityDelayList
                                       InitialPriorityDelayList
                                                                          OPTIONAL,
                                        BackoffControlParams.
    backoffControlParams
    -- TABULAR: TPC step size nested inside PowerControlAlgorithm
    powerControlAlgorithm
                                       PowerControlAlgorithm,
    dl-DPCCH-BER
                                       DL-DPCCH-BER
}
DL-CapabilityWithSimultaneousHS-DSCHConfig ::= ENUMERATED{kbps32, kbps64, kbps128, kbps384}
DL-DPCCH-BER ::=
                                   INTEGER (0..63)
DL-PhysChCapabilityFDD ::=
                                   SEQUENCE {
    -- The IE 'maxNoDPCH-PDSCH-Codes' only gives information on the maximum number of DPCH Codes.
    maxNoDPCH-PDSCH-Codes
                                        INTEGER (1..8),
   maxNoPhysChBitsReceived
                                        MaxNoPhysChBitsReceived,
    supportForSF-512
                                       BOOLEAN,
    -- dummy and dummy2 are not used in this version of the specification
    -- and if received they should be ignored.
    dummy
                                        BOOLEAN,
    dummy2
                                        SimultaneousSCCPCH-DPCH-Reception
}
DL-PhysChCapabilityFDD-v380ext ::=
                                           SEQUENCE {
    -- dummy is not used in this version of the specification, it should
    \mbox{--} not be sent and if received it should be ignored.
                                                SupportOfDedicatedPilotsForChEstimation
                                                                                            OPTIONAL
}
SupportOfDedicatedPilotsForChEstimation ::=
                                                  ENUMERATED { true }
DL-PhysChCapabilityTDD ::=
   maxTS-PerFrame
                                        MaxTS-PerFrame.
    maxPhysChPerFrame
                                        MaxPhysChPerFrame,
```

```
minimumSF
                                        MinimumSF-DL,
    supportOfPDSCH
                                        BOOLEAN,
   maxPhysChPerTS
                                        MaxPhysChPerTS
}
DL-PhysChCapabilityTDD-LCR-r4 ::= SEQUENCE {
   maxTS-PerSubFrame
                                        MaxTS-PerSubFrame-r4,
   maxPhysChPerFrame
                                        MaxPhysChPerSubFrame-r4,
   minimumSF
                                        MinimumSF-DL,
    supportOfPDSCH
                                        BOOLEAN,
                                        MaxPhysChPerTS,
   maxPhysChPerTS
    supportOf8PSK
                                        BOOLEAN
}
DL-PhysChCapabilityTDD-768 ::= SEQUENCE {
                                     MaxTS-PerFrame,
   maxTS-PerFrame
   maxPhysChPerFrame
                                        MaxPhysChPerFrame-768,
   minimumSF
                                        MinimumSF-DL-768,
   supportOfPDSCH
                                        BOOLEAN.
   maxPhysChPerTS
                                        MaxPhysChPerTS-768
}
DL-TransChCapability ::=
                                 SEQUENCE {
   maxNoBitsReceived
                                      MaxNoBits,
   maxConvCodeBitsReceived
                                        MaxNoBits.
    turboDecodingSupport
                                        TurboSupport,
   maxSimultaneousTransChs
                                      MaxSimultaneousTransChsDL,
   maxSimultaneousCCTrCH-Count
                                    MaxSimultaneous.
MaxTransportBlocksDL,
                                       MaxSimultaneousCCTrCH-Count,
   maxReceivedTransportBlocks
                                        MaxNumberOfTFC-DL,
   maxNumberOfTFC
    maxNumberOfTF
                                        MaxNumberOfTF
}
DRAC-SysInfo ::=
                                    SEQUENCE {
    transmissionProbability
                                        TransmissionProbability,
   maximumBitRate
                                        MaximumBitRate
}
DRAC-SysInfoList ::=
                                    SEQUENCE (SIZE (1..maxDRACclasses)) OF
                                        DRAC-SysInfo
DSCH-RNTI ::=
                                    BIT STRING (SIZE (16))
                                    ENUMERATED { true }
DelayRestrictionFlag ::=
E-RNTI ::=
                                    BIT STRING (SIZE (16))
ESN-DS-41 ::=
                                    BIT STRING (SIZE (32))
EstablishmentCause ::=
                                    ENUMERATED {
                                        originatingConversationalCall,
                                        {\tt originatingStreamingCall,}
                                        originatingInteractiveCall,
                                        originatingBackgroundCall,
                                        originatingSubscribedTrafficCall,
                                        terminatingConversationalCall,
                                        terminatingStreamingCall,
                                        terminatingInteractiveCall,
                                        terminatingBackgroundCall,
                                        emergencyCall,
                                        interRAT-CellReselection,
                                        interRAT-CellChangeOrder,
                                        registration,
                                        detach,
                                        originatingHighPrioritySignalling,
                                        originatingLowPrioritySignalling,
                                        callRe-establishment,
                                        terminatingHighPrioritySignalling,
                                        terminatingLowPrioritySignalling,
                                        terminatingCauseUnknown,
                                        mbms-Reception,
                                        mbms-PTP-RB-Request,
                                        spare10,
                                        spare9,
                                        spare8,
                                        spare7,
                                        spare6,
                                        spare5,
```

```
spare4,
                                        spare3,
                                        spare2,
                                        spare1 }
FailureCauseWithProtErr ::=
                                   CHOICE {
    configurationUnsupported
                                       NULL.
    physicalChannelFailure
                                       NULL,
    {\tt incompatible Simultaneous Reconfiguration}
   compressedModeRuntimeError
                                       TGPSI,
                                       ProtocolErrorInformation,
   protocolError
                                      NULL,
    cellUpdateOccurred
    invalidConfiguration
                                     NULL,
    configurationIncomplete
                                       NULL,
    unsupportedMeasurement
                                       NULL,
    mbmsSessionAlreadyReceivedCorrectly NULL,
    lowerPriorityMBMSService
                                       NULL.
    spare5
                                       NULL.
    spare4
                                       NULL,
                                       NULL,
    spare3
    spare2
                                       NULL,
    spare1
                                       NULL
}
FailureCauseWithProtErrTrId ::=
                                  SEQUENCE {
       rrc-TransactionIdentifier
                                   RRC-TransactionIdentifier,
        failureCause
                                       FailureCauseWithProtErr
}
                                          SEQUENCE {
GroupIdentityWithReleaseInformation ::=
       rrc-ConnectionReleaseInformation
                                           RRC-ConnectionReleaseInformation,
       groupReleaseInformation
                                               GroupReleaseInformation
GroupReleaseInformation ::=
                                  SEQUENCE {
   uRNTI-Group
                                       U-RNTI-Group
}
GSM-Measurements ::=
                                   SEQUENCE {
   gsm900
                                       BOOLEAN,
    dcs1800
                                       BOOLEAN,
    gsm1900
                                       BOOLEAN
H-RNTI ::=
                                   BIT STRING (SIZE (16))
HSDSCH-physical-layer-category ::=
                                      INTEGER (1..64)
UESpecificBehaviourInformation1idle ::= BIT STRING (SIZE (4))
UESpecificBehaviourInformationlinterRAT ::= BIT STRING (SIZE (8))
IMSI-and-ESN-DS-41 ::=
                                   SEQUENCE {
                                       IMSI-DS-41,
    imsi-DS-41
    esn-DS-41
                                       ESN-DS-41
TMST-DS-41 ::=
                                   OCTET STRING (SIZE (5..7))
InitialPriorityDelayList ::=
                                   SEQUENCE (SIZE (1..maxASC)) OF
                                       NS-IP
InitialUE-Identity ::=
                                   CHOICE {
    imsi
                                       IMSI-GSM-MAP,
    tmsi-and-LAI
                                       TMSI-and-LAI-GSM-MAP,
   p-TMSI-and-RAI
                                       P-TMSI-and-RAI-GSM-MAP,
    imei
                                       IMEI.
    esn-DS-41
                                       ESN-DS-41,
    imsi-DS-41
                                       IMSI-DS-41,
    imsi-and-ESN-DS-41
                                       IMSI-and-ESN-DS-41,
    tmsi-DS-41
                                       TMSI-DS-41
}
IntegrityCheckInfo ::=
                                   SEQUENCE {
   messageAuthenticationCode
                                       MessageAuthenticationCode,
    rrc-MessageSequenceNumber
                                       RRC-MessageSequenceNumber
```

```
}
IntegrityProtActivationInfo ::=
                                   SEQUENCE {
                                      RRC-MessageSequenceNumberList
   rrc-MessageSequenceNumberList
                                  ENUMERATED {
IntegrityProtectionAlgorithm ::=
                                        uial }
IntegrityProtectionModeCommand ::= CHOICE {
    startIntegrityProtection SEQUENCE {
   integrityProtInitNumber Integr
                                          IntegrityProtInitNumber
   modify
                                        SEQUENCE {
      dl-IntegrityProtActivationInfo
                                          IntegrityProtActivationInfo
}
IntegrityProtectionModeInfo ::=
                                    SEOUENCE {
    -- TABULAR: DL integrity protection activation info and Integrity
    -- protection intialisation number have been nested inside
    -- IntegrityProtectionModeCommand.
    \verb|integrityProtectionModeCommand| IntegrityProtectionModeCommand|,
    integrityProtectionAlgorithm
                                        {\tt IntegrityProtectionAlgorithm}
                                                                            OPTIONAL
}
IntegrityProtInitNumber ::= BIT STRING (SIZE (32))
-- dummy is not used in this version of the specification, it should
-- not be sent and if received it should be ignored.
MaxHcContextSpace ::=
                                         ENUMERATED {
                                             dummy, by1024, by2048, by4096,
                                             by8192 }
                                         ENUMERATED {
MaxHcContextSpace-r5-ext ::=
                                            by16384, by32768, by65536, by131072 }
                                    ENUMERATED {
MaxROHC-ContextSessions-r4 ::=
                                            s2, s4, s8, s12, s16, s24, s32, s48,
                                             s64, s128, s256, s512, s1024, s16384 }
                                    ENUMERATED {
MaximumAM-EntityNumberRLC-Cap ::=
                                        dummy, am4, am5, am6,
                                         am8, am16, am30 }
-- Actual value MaximumBitRate = IE value * 16
MaximumBitRate ::=
                                     INTEGER (0..32)
MaximumRLC-WindowSize ::=
                                    ENUMERATED { mws2047, mws4095 }
MaxNoDPDCH-BitsTransmitted ::=
                                     ENUMERATED {
                                         b600, b1200, b2400, b4800,
                                         b9600, b19200, b28800, b38400,
                                         b48000, b57600 }
MaxNoBits ::=
                                     ENUMERATED {
                                         b640, b1280, b2560, b3840, b5120, b6400, b7680, b8960, b10240,
                                         b20480, b40960, b81920, b163840 }
MaxNoPhysChBitsReceived ::=
                                     ENUMERATED {
                                         dummy, b1200, b2400, b3600, b4800, b7200, b9600, b14400,
                                         b19200, b28800, b38400, b48000,
                                         b57600, b67200, b76800 }
MaxNoSCCPCH-RL ::=
                                     ENUMERATED {
                                        rl1 }
MaxNumberOfTF ::=
                                     ENUMERATED {
                                        tf32, tf64, tf128, tf256,
                                         tf512, tf1024 }
MaxNumberOfTFC-DL ::=
                                     ENUMERATED {
                                         tfc16, tfc32, tfc48, tfc64, tfc96,
                                         tfc128, tfc256, tfc512, tfc1024 }
```

```
ENUMERATED {
MaxNumberOfTFC-UL ::=
                                        dummy1, dummy2, tfc16, tfc32, tfc48, tfc64,
                                         tfc96, tfc128, tfc256, tfc512, tfc1024 }
-- the values 1 ...4 for MaxPhysChPerFrame are not used in this version of the protocol
MaxPhysChPerFrame ::=
                                    INTEGER (1..224)
MaxPhysChPerFrame-768 ::=
                                   INTEGER (1..448)
MaxPhysChPerSubFrame-r4 ::=
                                   INTEGER (1..96)
MaxPhysChPerTimeslot ::=
                                    ENUMERATED {
                                        ts1, ts2 }
-- the values 1 ...4 for MaxPhysChPerTS are not used in this version of the protocol
MaxPhysChPerTS ::=
                                    INTEGER (1..16)
MaxPhysChPerTS-768 ::=
                                    INTEGER (1..32)
MaxSimultaneousCCTrCH-Count ::=
                                    INTEGER (1..8)
MaxSimultaneousTransChsDL ::=
                                     ENUMERATED {
                                        e4, e8, e16, e32 }
MaxSimultaneousTransChsUL ::=
                                    ENUMERATED {
                                        dummy, e4, e8, e16, e32 }
MaxTransportBlocksDL ::=
                                    ENUMERATED {
                                         tb4, tb8, tb16, tb32, tb48,
                                         tb64, tb96, tb128, tb256, tb512 }
                                    ENUMERATED {
MaxTransportBlocksUL ::=
                                         dummy, tb4, tb8, tb16, tb32, tb48,
                                         tb64, tb96, tb128, tb256, tb512 }
MaxTS-PerFrame ::=
                                    INTEGER (1..14)
MaxTS-PerSubFrame-r4 ::=
                                    INTEGER (1..6)
-- TABULAR: MeasurementCapability contains dependencies to UE-MultiModeRAT-Capability,
-- the conditional fields have been left mandatory for now.
                             SEQUENCE {
    Compres
MeasurementCapability ::=
    downlinkCompressedMode
                                        CompressedModeMeasCapability,
    uplinkCompressedMode
                                        CompressedModeMeasCapability
}
                                   SEQUENCE {
MeasurementCapabilityExt ::=
    compressedModeMeasCapabFDDList
                                        CompressedModeMeasCapabFDDList,
                                         CompressedModeMeasCapabTDDList OPTIONAL,
    compressedModeMeasCapabTDDList
    compressedModeMeasCapabGSMList
                                        CompressedModeMeasCapabGSMList OPTIONAL,
    {\tt compressedModeMeasCapabMC}
                                        CompressedModeMeasCapabMC
                                                                         OPTIONAL
}
MeasurementCapabilityExt2 ::=
                                    SEQUENCE {
    compressedModeMeasCapabFDDList
                                         CompressedModeMeasCapabFDDList2,
    {\tt compressed Mode Meas Capab TDD List}
                                         {\tt Compressed Mode Meas Capab TDD List \ OPTIONAL,}
    {\tt compressed Mode Meas Capab GSMList}
                                         CompressedModeMeasCapabGSMList OPTIONAL,
    compressedModeMeasCapabMC
                                         CompressedModeMeasCapabMC
}
MeasurementCapability-r4-ext ::=
                                    SEQUENCE {
    downlinkCompressedMode-LCR
                                         CompressedModeMeasCapability-LCR-r4,
    uplinkCompressedMode-LCR
                                         CompressedModeMeasCapability-LCR-r4
MessageAuthenticationCode ::=
                                    BIT STRING (SIZE (32))
MinimumSF-DL ::=
                                     ENUMERATED {
                                        sf1, sf16 }
                                    ENUMERATED {
MinimumSF-DL-768 ::=
                                        sf1, sf32 }
MinimumSF-UL ::=
                                     ENUMERATED {
                                        sf1, sf2, sf4, sf8, dummy }
```

```
ENUMERATED {
MultiModeCapability ::=
                                        tdd, fdd, fdd-tdd }
MultiRAT-Capability ::=
                                    SEQUENCE {
   supportOfGSM
                                         BOOLEAN,
    supportOfMulticarrier
                                          BOOLEAN
}
{\tt MultiModeRAT-Capability-v590ext} \; ::= \; {\tt SEQUENCE} \; \left\{ \right. \\
   supportOfUTRAN-ToGERAN-NACC BOOLEAN
MultiModeRAT-Capability-v680ext ::= SEQUENCE {
   supportOfHandoverToGAN
                                         ENUMERATED { doesSupportHandoverToGAN } OPTIONAL
N-300 ::=
                                      INTEGER (0..7)
N-301 ::=
                                      INTEGER (0..7)
N-302 ::=
                                      INTEGER (0..7)
N-304 ::=
                                      INTEGER (0..7)
N-308 ::=
                                      INTEGER (1..8)
N-310 ::=
                                      INTEGER (0..7)
                                      ENUMERATED {
N-312 ::=
                                          s1, s50, s100, s200, s400,
                                          s600, s800, s1000 }
N-312ext ::=
                                      ENUMERATED {
                                          s2, s4, s10, s20 }
N-312-r5 ::=
                                          ENUMERATED {
                                          s1, s2, s4, s10, s20,
s50, s100, s200, s400,
                                          s600, s800, s1000 }
N-313 ::=
                                      ENUMERATED {
                                         s1, s2, s4, s10, s20,
                                           s50, s100, s200 }
                                      ENUMERATED {
N-315 ::=
                                         s1, s50, s100, s200, s400, s600, s800, s1000 }
N-315ext ::=
                                      ENUMERATED {
                                         s2, s4, s10, s20 }
N-315-r5 ::=
                                          ENUMERATED {
                                          s1, s2, s4, s10, s20,
s50, s100, s200, s400,
                                          s600, s800, s1000 }
N-AccessFails ::=
                                     INTEGER (1..64)
N-AP-RetransMax ::=
                                      INTEGER (1..64)
NetworkAssistedGPS-Supported ::=
                                      ENUMERATED {
                                         networkBased,
                                          ue-Based,
                                          bothNetworkAndUE-Based,
                                          noNetworkAssistedGPS }
NF-BO-AllBusy ::=
                                     INTEGER (0..31)
NF-BO-NoAICH ::=
                                      INTEGER (0..31)
NF-BO-Mismatch ::=
                                      INTEGER (0..127)
                                      INTEGER (0..63)
NS-BO-Busy ::=
NS-IP ::=
                                      INTEGER (0..28)
P-TMSI-and-RAI-GSM-MAP ::=
                                      SEQUENCE {
```

```
p-TMSI
                                           P-TMSI-GSM-MAP,
    rai
                                           RAI
}
PagingCause ::=
                                      ENUMERATED {
                                           terminatingConversationalCall,
                                           terminatingStreamingCall,
                                           terminatingInteractiveCall,
                                           terminatingBackgroundCall,
                                           terminatingHighPrioritySignalling,
                                           terminatingLowPrioritySignalling,
                                           terminatingCauseUnknown,
                                           spare
PagingRecord ::=
                                      CHOICE {
                                           SEQUENCE {
    cn-Identity
        pagingCause
                                               PagingCause,
        cn-DomainIdentity
                                               CN-DomainIdentity,
        cn-pagedUE-Identity
                                               CN-PagedUE-Identity
    },
    utran-Identity
                                           SEOUENCE {
                                               U-RNTI
        u-RNTI
        cn-OriginatedPage-connectedMode-UE
                                              SEQUENCE {
            pagingCause
                                                   PagingCause,
            cn-DomainIdentity
                                                   CN-DomainIdentity,
            pagingRecordTypeID
                                                   PagingRecordTypeID
                                                                                 OPTIONAL
    }
}
PagingRecord2-r5 ::=
                                      CHOICE {
    utran-SingleUE-Identity
                                           SEQUENCE {
        u-RNTI
                                               U-RNTI.
        cn-OriginatedPage-connectedMode-UE SEQUENCE {
                                                   PagingCause,
            pagingCause
            cn-DomainIdentity
                                                   CN-DomainIdentity,
                                                   PagingRecordTypeID
            pagingRecordTypeID
                                                                                 OPTIONAL,
        rrc-ConnectionReleaseInformation
                                                   RRC-ConnectionReleaseInformation
    utran-GroupIdentity
                                               SEQUENCE ( SIZE (1 .. maxURNTI-Group) ) OF
                                                   {\tt GroupIdentityWithReleaseInformation}
PagingRecordList ::=
                                      SEQUENCE (SIZE (1..maxPage1)) OF
                                           PagingRecord
PagingRecord2List-r5 ::=
                                      SEQUENCE (SIZE (1..maxPage1)) OF
                                          PagingRecord2-r5
                                      SEQUENCE {
PDCP-Capability ::=
    losslessSRNS-RelocationSupport
                                          BOOLEAN,
    -- If present, the "maxHcContextSpace" in the IE "PDCP-Capability-r5-ext" overrides the -- "supported" value in this IE. The value in this IE may be used by a pre-REL-5 UTRAN.
    supportForRfc2507
                                           CHOICE {
        notSupported
                                               NULL,
        supported
                                               MaxHcContextSpace
    }
}
PDCP-Capability-r4-ext ::=
                                      SEQUENCE {
    supportForRfc3095
                                      CHOICE {
        notSupported
                                               NULL,
        supported
                                               SEOUENCE {
            maxROHC-ContextSessions
                                                   MaxROHC-ContextSessions-r4 DEFAULT s16,
            {\tt reverseCompressionDepth}
                                                   INTEGER (0..65535)
                                                                                 DEFAULT 0
    }
}
PDCP-Capability-r5-ext ::=
                                      SEQUENCE {
    supportForRfc3095ContextRelocation
                                               BOOLEAN,
    {\tt maxHcContextSpace}
                                               MaxHcContextSpace-r5-ext OPTIONAL
PDCP-Capability-r5-ext2 ::=
                                      SEOUENCE {
    losslessDLRLC-PDUSizeChange
                                          ENUMERATED { true }
                                                                                 OPTIONAL
```

```
}
PhysicalChannelCapability ::=
                                 SEOUENCE {
        fddPhysChCapability
                                           SEQUENCE {
           downlinkPhysChCapability
                                               DL-PhysChCapabilityFDD,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityFDD
                                                   OPTIONAL,
        -- tddPhysChCapability describes the 3.84Mcps TDD physical channel capability
        tddPhysChCapability
                                    SEQUENCE {
           downlinkPhysChCapability
                                               DL-PhysChCapabilityTDD,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityTDD
                                                    OPTIONAL
        }
}
PhysicalChannelCapability-r7 ::=
                                       SEQUENCE {
                                         SEQUENCE {
        fddPhysChCapability
            downlinkPhysChCapability
                                               DL-PhysChCapabilityFDD,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityFDD
                                                  OPTIONAL,
        -- tddPhysChCapability describes the 3.84Mcps TDD physical channel capability
                                      SEQUENCE {
        tddPhysChCapability
            downlinkPhysChCapability
                                            DL-PhysChCapabilityTDD,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityTDD
                                                   OPTIONAL,
        -- tddPhysicalChaCapability-768 describes the 7.68 TDD physical channel capability
           downlinkPhysChCapability DI.-DhyscuplinkPhysChCapability
        tddPhysChCapability-768
                                           DL-PhysChCapabilityTDD-768,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityTDD
        }
}
-- PhysicalChannelCapability-LCR-r4 describes the 1.28Mcps TDD physical channel capability
PhysicalChannelCapability-LCR-r4 ::= SEQUENCE {
        tdd128-PhysChCapability
                                               SEQUENCE {
           l28-PhysChCapability
downlinkPhysChCapability
uplinkPhysChCapability
                                               DL-PhysChCapabilityTDD-LCR-r4,
            uplinkPhysChCapability
                                               UL-PhysChCapabilityTDD-LCR-r4
                                                    OPTIONAL
}
-- PhysicalChannelCapability-hspdsch-r5 describes the HS-PDSCH physical channel capability
PhysicalChannelCapability-hspdsch-r5 ::= SEQUENCE {
                                                   CHOICE {
    fdd-hspdsch
        supported
                                                        SEQUENCE {
           hsdsch-physical-layer-category
                                                           HSDSCH-physical-layer-category,
            -- dummy and dummy2 are not used in this version of the specification
            -- and if received they should be ignored.
           dummy
                                                            BOOLEAN.
           dummy2
                                                            BOOLEAN
        unsupported
                                                        NULL
    tdd384-hspdsch
                                                    CHOICE {
        supported
                                                        HSDSCH-physical-layer-category,
        unsupported
                                                        NULL
    tdd128-hspdsch
                                                    CHOICE {
        supported
                                                        HSDSCH-physical-layer-category,
        unsupported
    }
}
PNBSCH-Allocation-r4 ::=
                                        SEQUENCE {
       numberOfRepetitionsPerSFNPeriod ENUMERATED {
                                            c2, c3, c4, c5, c6, c7, c8, c9, c10,
                                            c12, c14, c16, c18, c20, c24, c28, c32,
                                            c36, c40, c48, c56, c64, c72, c80 }
}
                                    ENUMERATED {
ProtocolErrorCause ::=
                                        asn1-ViolationOrEncodingError,
                                        messageTypeNonexistent,
                                        messageNotCompatibleWithReceiverState,
                                        ie-ValueNotComprehended,
                                        informationElementMissing,
                                        messageExtensionNotComprehended,
                                        spare2, spare1 }
                                    ENUMERATED {
ProtocolErrorIndicator ::=
```

```
noError, errorOccurred }
ProtocolErrorIndicatorWithMoreInfo ::=
                                     CHOICE {
    noError
                                         NULL,
    errorOccurred
                                         SEQUENCE {
                                             RRC-TransactionIdentifier,
        rrc-TransactionIdentifier
        protocolErrorInformation
                                             ProtocolErrorInformation
}
                                     SEOUENCE {
ProtocolErrorMoreInformation ::=
                                         CHOICE {
    diagnosticsType
        type1
                                             CHOICE {
            asn1-ViolationOrEncodingError
                                                 NULL,
            messageTypeNonexistent
                                                 NULL,
            {\tt messageNotCompatibleWithReceiverState}
                                                 IdentificationOfReceivedMessage,
            ie-ValueNotComprehended
                                                 IdentificationOfReceivedMessage,
            \verb|conditionalInformationElementError| IdentificationOfReceivedMessage|,
            messageExtensionNotComprehended
                                                 IdentificationOfReceivedMessage,
            spare1
                                                 NULL,
            spare2
                                                 NULL
        },
        spare
                                             NIII.T.
    }
}
RadioFrequencyBandFDD ::=
                                    ENUMERATED {
    -- fdd2100, fdd1900, fdd1800 correspond to Band I, Band II and Band III respectively
                                         fdd2100,
                                         fdd1900,
                                         fdd1800,
                                         bandVI,
                                         bandIV,
                                         bandV,
                                         bandVII,
                                         extension-indicator }
RadioFrequencyBandFDD2 ::=
                                     ENUMERATED {
                                         bandVIII,
                                         bandIX.
                                         bandX,
                                         bandXI,
                                         bandXII,
                                         bandXIII,
                                         bandXIV.
                                         bandXV,
                                         bandXVI
                                         bandXVII,
                                         bandXVIII,
                                         bandXIX.
                                         bandXX,
                                         bandXXI
                                         bandXXII,
                                         extension-indicator }
RadioFrequencyBandTDDList ::=
                                     ENUMERATED {
                                         a, b, c, ab, ac, bc, abc, spare }
RadioFrequencyBandTDD ::=
                                     ENUMERATED {a, b, c, spare}
                                     ENUMERATED {
RadioFrequencyBandGSM ::=
                                         asm450,
                                         qsm480,
                                         gsm850,
                                         gsm900P,
                                         gsm900E,
                                         qsm1800,
                                         gsm1900,
                                         spare9, spare8, spare7, spare6, spare5,
                                         spare4, spare3, spare2, spare1}
Rb-timer-indicator ::=
                                     SEQUENCE {
    t314-expired
                                         BOOLEAN,
    t315-expired
                                         BOOLEAN }
Re-EstablishmentTimer ::=
                                     ENUMERATED {
```

```
useT314, useT315
}
                                    CHOICE {
RedirectionInfo ::=
    frequencyInfo
                                        FrequencyInfo,
    \verb"interRATInfo"
                                        InterRATInfo
}
RedirectionInfo-r6 ::=
                                    CHOICE {
    frequencyInfo
                                        FrequencyInfo,
    interRATInfo
                                        InterRATInfo-r6
}
RejectionCause ::=
                                    ENUMERATED {
                                        congestion,
                                        unspecified }
                                    ENUMERATED {
ReleaseCause ::=
                                        normalEvent,
                                        unspecified,
                                        pre-emptiveRelease,
                                        congestion,
                                        re-establishmentReject,
                                        directedsignallingconnectionre-establishment,
                                        userInactivity,
                                        spare }
RF-Capability ::=
                                   SEQUENCE {
                                       SEQUENCE {
        fddRF-Capability
                                            UE-PowerClass,
           ue-PowerClass
            txRxFrequencySeparation
                                            TxRxFrequencySeparation
                                          OPTIONAL,
        tddRF-Capability
                                                    SEQUENCE {
                                      UE-PowerClass,
           ue-PowerClass
            {\tt radioFrequencyTDDB} and {\tt List} \qquad {\tt RadioFrequencyB} and {\tt TDDL} {\tt ist} \,,
            chipRateCapability
                                       ChipRateCapability
                                            OPTIONAL
}
                                       SEQUENCE {
RF-Capability-r4-ext ::=
        tddRF-Capability
                                                    SEQUENCE {
                                       UE-PowerClass,
           ue-PowerClass
            radioFrequencyBandTDDList RadioFrequencyBandTDDList,
            chipRateCapability
                                        ChipRateCapability
                                            OPTIONAL
}
                                   SEQUENCE {
RF-Capability-r7 ::=
                                  sequence {
        fddRF-Capability
           ue-PowerClass
                                        UE-PowerClass,
           txRxFrequencySeparation
                                            TxRxFrequencySeparation
                                           OPTIONAL,
        tddRF-Capability
                                      SEQUENCE {
                                           UE-PowerClass,
           ue-PowerClass
           radioFrequencyTDDBandList
                                           RadioFrequencyBandTDDList,
           chipRateCapability
                                            ChipRateCapability-r7
        } OPTIONAL
}
                                   SEQUENCE {
RLC-Capability ::=
    -- If present, the "totalRLC-AM-BufferSize" in the IE "RLC-Capability-r5-ext" overrides the
    -- corresponding value in this IE. The value in this IE may be used by a pre-REL-5 UTRAN.
    totalRLC-AM-BufferSize
                                       TotalRLC-AM-BufferSize,
   maximumRLC-WindowSize
                                       MaximumRLC-WindowSize,
   maximumAM-EntityNumber
                                       MaximumAM-EntityNumberRLC-Cap
}
RLC-Capability-r5-ext ::=
                                            SEQUENCE {
                                 TotalRLC-AM-BufferSize-r5-ext OPTIONAL
    totalRLC-AM-BufferSize
RRC-ConnectionReleaseInformation ::=
                                       CHOICE {
   noRelease
                                           NULL,
                                            SEQUENCE {
   release
        releaseCause
                                                ReleaseCause
}
```

```
RRC-MessageSequenceNumber ::=
                                   INTEGER (0..15)
RRC-MessageSequenceNumberList ::= SEQUENCE (SIZE (4..5)) OF
                                         RRC-MessageSequenceNumber
RRC-StateIndicator ::=
                                    ENUMERATED {
                                         cell-DCH, cell-FACH, cell-PCH, ura-PCH }
RRC-TransactionIdentifier ::=
                                     INTEGER (0..3)
S-RNTI ::=
                                     BIT STRING (SIZE (20))
S-RNTI-2 ::=
                                     BIT STRING (SIZE (10))
SecurityCapability ::=
                                     SEQUENCE {
                                         BIT STRING {
    \verb|cipheringAlgorithmCap||
                                         -- For each bit value '0' means false/ not supported
                                             spare15(0),
                                             spare14(1),
                                             spare13(2),
                                             spare12(3),
                                             spare11(4),
                                             spare10(5),
                                             spare9(6),
                                             spare8(7),
                                             spare7(8),
                                             spare6(9),
                                             spare5(10),
                                             spare4(11),
                                             spare3(12),
                                             spare2(13),
                                             uea1(14),
                                             uea0(15)
                                                (SIZE (16)),
                                         BIT STRING {
    \verb|integrityProtectionAlgorithmCap| \\
                                         -- For each bit value '0' means false/ not supported
                                             spare15(0),
                                             spare14(1),
                                             spare13(2),
                                             spare12(3),
                                             spare11(4).
                                             spare10(5),
                                             spare9(6),
                                             spare8(7),
                                             spare7(8),
                                             spare6(9),
                                             spare5(10),
                                             spare4(11),
                                             spare3(12),
                                             spare2(13),
                                             uia1(14),
                                             spare0(15)
                                                  (SIZE (16))
}
Serving-HSDSCH-CellInformation ::=
                                        SEQUENCE {
                                    DeltaACK
                                                                 OPTIONAL,
    deltaACK
    deltaNACK
                                    DeltaNACK
                                                                 OPTIONAL,
   harq-Preamble-Mode
                                   HARQ-Preamble-Mode,
                                    PrimaryCPICH-Info
                                                                 OPTIONAL,
    primaryCPICH-Info
    dl-hspdsch-Information
                                    DL-HSPDSCH-Information
                                                                 OPTIONAL,
   harqInfo
                                    HARQ-Info
                                                                 OPTIONAL,
    mac-hsResetIndicator
                                    ENUMERATED { true }
                                                                 OPTIONAL
}
SimultaneousSCCPCH-DPCH-Reception ::= CHOICE {
    notSupported
                                        NULL,
                                         SEQUENCE {
    supported
        maxNoSCCPCH-RL
                                             MaxNoSCCPCH-RL,
        -- simultaneousSCCPCH-DPCH-DPDCH-Reception is applicable only if
        -- the IE Support of PDSCH = TRUE
        -- Note: the reference to DPDCH in the element name below is incorrect (see tabular). The
        -- name is not changed, to keep it aligned with R99.
        simultaneousSCCPCH-DPCH-DPDCH-Reception
                                                     BOOLEAN
    }
}
```

```
SRNC-Identity ::=
                                                                            BIT STRING (SIZE (12))
START-Value ::=
                                                                              BIT STRING (SIZE (20))
STARTList ::=
                                                                               SEQUENCE (SIZE (1..maxCNdomains)) OF
                                                                                       STARTSingle
                                                                               SEQUENCE {
STARTSingle ::=
        cn-DomainIdentity
                                                                                       CN-DomainIdentity,
                                                                                       START-Value
        start-Value
}
CapabilityUpdateRequirement-r5 ::= SEQUENCE {
        ue-RadioCapabilityFDDUpdateRequirement-FDD BOOLEAN,
        ue-RadioCapabilityTDDUpdateRequirement-TDD384 BOOLEAN, ue-RadioCapabilityTDDUpdateRequirement-TDD128 BOOLEAN,
         ue-RadioCapabilityTDDUpdateRequirement-TDD128
         systemSpecificCapUpdateReqList SystemSpecificCapUpdateReqList-r5 OPTIONAL
SystemSpecificCapUpdateReq ::=
                                                                           ENUMERATED {
                                                                                       gsm }
                                                                                            ENUMERATED {
SystemSpecificCapUpdateReq-v590ext ::=
                                                                                       geranIu }
SystemSpecificCapUpdateReq-r5 ::=
                                                                                   ENUMERATED {
                                                                                       gsm, geranIu }
SystemSpecificCapUpdateReqList ::= SEQUENCE (SIZE (1..maxSystemCapability)) OF
                                                                                       SystemSpecificCapUpdateReq
{\tt SystemSpecificCapUpdateReqList-r5} \ ::= \ {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxSystemCapability})) \ {\tt OF} \ {\tt SIZE} \ ({\tt 1..maxSystemCapability})) \ {\tt OF} \ {\tt SIZE} \ ({\tt 1..maxSystemCapability})) \ {\tt OF} \ {\tt Index of the content of
                                                                                        SystemSpecificCapUpdateReq-r5
T-300 ::=
                                                                               ENUMERATED {
                                                                                      ms100, ms200, ms400, ms600, ms800,
                                                                                        ms1000, ms1200, ms1400, ms1600,
                                                                                       ms1800, ms2000, ms3000, ms4000,
                                                                                       ms6000, ms8000 }
T-301 ::=
                                                                               ENUMERATED {
                                                                                       ms100, ms200, ms400, ms600, ms800,
                                                                                        {\tt ms1000,\ ms1200,\ ms1400,\ ms1600,}
                                                                                       ms1800, ms2000, ms3000, ms4000,
                                                                                       ms6000, ms8000, spare }
                                                                               ENUMERATED {
T-302 ::=
                                                                                        ms100, ms200, ms400, ms600, ms800,
                                                                                        ms1000, ms1200, ms1400, ms1600,
                                                                                       ms1800, ms2000, ms3000, ms4000, ms6000, ms8000, spare }
T-304 ::=
                                                                               ENUMERATED {
                                                                                      ms100, ms200, ms400,
                                                                                       ms1000, ms2000, spare3, spare2, spare1 }
T-305 ::=
                                                                               ENUMERATED {
                                                                                       noUpdate, m5, m10, m30, m60, m120, m360, m720 }
                                                                               ENUMERATED {
T-307 ::=
                                                                                      s5, s10, s15, s20,
                                                                                       s30, s40, s50, spare }
T-308 ::=
                                                                               ENUMERATED {
                                                                                       ms40, ms80, ms160, ms320 }
                                                                               INTEGER (1..8)
T-309 ::=
T-310 ::=
                                                                               ENUMERATED {
                                                                                        ms40, ms80, ms120, ms160,
                                                                                        ms200, ms240, ms280, ms320 }
T-311 ::=
                                                                               ENUMERATED {
                                                                                       ms250, ms500, ms750, ms1000,
                                                                                        ms1250, ms1500, ms1750, ms2000 }
```

```
-- The value 0 for T-312 is not used in this version of the specification
                                    INTEGER (0..15)
T-313 ::=
                                    INTEGER (0..15)
T-314 ::=
                                     ENUMERATED {
                                        s0, s2, s4, s6, s8,
                                        s12, s16, s20 }
T-315 ::=
                                     ENUMERATED {
                                        s0, s10, s30, s60, s180,
                                        s600, s1200, s1800 }
                                    ENUMERATED {
T-316 ::=
                                        s0, s10, s20, s30, s40,
                                        s50, s-inf, spare }
-- All the values are changed to "infinity" in Rel-5
                                        infinity0, infinity1, infinity2, infinity3, infinity4,
infinity5, infinity6, infinity7}
T-318 ::=
                                     ENUMERATED {
                                        ms250, ms500, ms750, ms1000, ms1250, ms1500,
                                        ms1750, ms2000, ms3000, ms4000, ms6000, ms8000,
                                        ms10000, ms12000, ms16000 }
T-CPCH ::=
                                    ENUMERATED {
                                        ct0, ct1 }
TMSI-and-LAI-GSM-MAP ::=
                                    SEQUENCE {
                                        TMSI-GSM-MAP,
    lai
TMSI-DS-41 ::=
                                    OCTET STRING (SIZE (2..17))
TotalRLC-AM-BufferSize ::=
                                    ENUMERATED {
                                        dummy, kb10, kb50, kb100,
                                        kb150, kb500, kb1000, spare }
                                    ENUMERATED {
TotalRLC-AM-BufferSize-r5-ext ::=
                                        kb200, kb300, kb400, kb750 }
-- Actual value TransmissionProbability = IE value * 0.125
TransmissionProbability ::=
                                INTEGER (1..8)
TransportChannelCapability ::= SEQUENCE {
                                    DL-TransChCapability,
   dl-TransChCapability
   ul-TransChCapability
                                        UL-TransChCapability
}
TurboSupport ::=
                                    CHOICE {
   notSupported
    supported
                                        MaxNoBits
-- Values defined as spare shall not be sent in this version of the protocol. If a spare value is
 -- received, it should be interpreted as 'default-RxTX-sparation'.
                                ENUMERATED {
TxRxFrequencySeparation ::=
                                        default-TxRx-separation, spare2, spare1 }
U-RNTI ::=
                                    SEQUENCE {
   srnc-Identity
                                        SRNC-Identity,
    s-RNTI
                                        S-RNTI
U-RNTI-Group ::=
                                    CHOICE {
-- TABULAR: not following the tabular strictly, but this will most likely save bits
   all
                                        NULL,
   u-RNTI-BitMaskIndex-bl
                                        BIT STRING (SIZE (31)),
   u-RNTI-BitMaskIndex-b2
                                        BIT STRING (SIZE (30)),
                                        BIT STRING (SIZE (29)),
   u-RNTI-BitMaskIndex-b3
   u-RNTI-BitMaskIndex-b4
                                       BIT STRING (SIZE (28)),
   u-RNTI-BitMaskIndex-b5
                                        BIT STRING (SIZE (27)),
   u-RNTI-BitMaskIndex-b6
                                      BIT STRING (SIZE (26)),
                                     BIT STRING (SIZE (25)),
BIT STRING (SIZE (24)),
    u-RNTI-BitMaskIndex-b7
    u-RNTI-BitMaskIndex-b8
```

```
u-RNTI-BitMaskIndex-b9
                                         BIT STRING (SIZE (23)),
    u-RNTI-BitMaskIndex-b10
                                         BIT STRING (SIZE (22)),
    u-RNTI-BitMaskIndex-b11
                                        BIT STRING (SIZE (21)),
    u-RNTI-BitMaskIndex-b12
                                        BIT STRING (SIZE (20)),
    u-RNTI-BitMaskIndex-b13
                                         BIT STRING (SIZE (19)),
                                        BIT STRING (SIZE (18)),
    u-RNTI-BitMaskIndex-b14
                                       BIT STRING (SIZE (17)),
BIT STRING (SIZE (16)),
    u-RNTI-BitMaskIndex-b15
    u-RNTI-BitMaskIndex-b16
    u-RNTI-BitMaskIndex-b17
                                       BIT STRING (SIZE (15)),
    u-RNTI-BitMaskIndex-b18
                                         BIT STRING (SIZE (14)),
                                        BIT STRING (SIZE (13)),
    u-RNTI-BitMaskIndex-b19
                                       BIT STRING (SIZE (12)),
BIT STRING (SIZE (11)),
    u-RNTI-BitMaskIndex-b20
    u-RNTI-BitMaskIndex-b21
    u-RNTI-BitMaskIndex-b22
                                       BIT STRING (SIZE (10)),
    u-RNTI-BitMaskIndex-b23
                                         BIT STRING (SIZE (9)),
                                        BIT STRING (SIZE (8)),
   u-RNTI-BitMaskIndex-b24
                                        BIT STRING (SIZE (7)),
    u-RNTI-BitMaskIndex-b25
    u-RNTI-BitMaskIndex-b26
                                         BIT STRING (SIZE (6)),
                                        BIT STRING (SIZE (5)),
    u-RNTI-BitMaskIndex-b27
                                        BIT STRING (SIZE (4)),
BIT STRING (SIZE (3)),
    u-RNTI-BitMaskIndex-b28
    u-RNTI-BitMaskIndex-b29
    u-RNTI-BitMaskIndex-b30
                                        BIT STRING (SIZE (2)),
    u-RNTI-BitMaskIndex-b31
                                         BIT STRING (SIZE (1))
}
                                     SEQUENCE {
U-RNTI-Short ::=
    srnc-Identity
                                         SRNC-Identity,
    s-RNTI-2
                                          S-RNTI-2
}
UE-CapabilityContainer-IEs ::=
                                         SEQUENCE {
-- Container for transparent transfer of capability information not related to
-- features for which early implementation is desired
        ue-RadioAccessCapability-v690extUE-RadioAccessCapability-v690ext,ue-RATSpecificCapability-v690extInterRAT-UE-RadioAccessCapability-v690extOPTIONAL,
        nonCriticalExtensions
                                             SEQUENCE {}
                                                            OPTIONAL
}
UE-ConnTimersAndConstants ::=
                                 SEQUENCE {
-- Optional is used also for parameters for which the default value is the last one read in SIB1
-- t-301 and n-301 should not be used by the UE in this version of the specification
                                          T-301
   t.-301
                                                                               DEFAULT ms2000.
   n - 301
                                          N - 301
                                                                                DEFAULT 2,
    t-302
                                          T-302
                                                                                DEFAULT ms4000,
    n-302
                                          N - 302
                                                                                DEFAULT 3,
    t-304
                                          T - 304
                                                                                DEFAULT ms2000,
                                          N - 304
                                                                                DEFAULT 2.
    n - 304
    t-305
                                          T-305
                                                                                DEFAULT m30,
    t-307
                                          T-307
                                                                                DEFAULT s30,
    t-308
                                          T-308
                                                                                DEFAULT ms160,
    t-309
                                          T-309
                                                                                DEFAULT 5.
    t-310
                                          T = 310
                                                                                DEFAULT ms160.
    n-310
                                          N - 310
                                                                                DEFAULT 4,
    t.-311
                                          T - 311
                                                                                DEFAULT ms2000.
                                          T-312
                                                                                DEFAULT 1,
    -- n-312 shall be ignored if n-312 in UE-ConnTimersAndConstants-v3a0ext is present, and the
    -- value of that element shall be used instead.
    n-312
                                                                                DEFAULT s1,
                                          N - 312
    t-313
                                          T-313
                                                                                DEFAULT 3,
   n-313
                                          N = 313
                                                                                DEFAULT s20.
    t-314
                                          T-314
                                                                                DEFAULT s12,
                                          T-315
                                                                                DEFAULT s180,
    -- n-315 shall be ignored if n-315 in UE-ConnTimersAndConstants-v3a0ext is present, and the
    -- value of that element shall be used instead.
    n-315
                                                                                DEFAULT s1,
                                          N = 315
    t-316
                                          T-316
                                                                                DEFAULT s30,
                                          T-317
    t-317
                                                                                DEFAULT infinity4
}
UE-ConnTimersAndConstants-v3a0ext ::=
                                             SEOUENCE {
                                          N-312ext
                                                                                    OPTIONAL,
   n-312
   n-315
                                                                                    OPTIONAL
}
                                   SEQUENCE {
UE-ConnTimersAndConstants-r5 ::=
-- Optional is used also for parameters for which the default value is the last one read in SIB1
-- t-301 and n-301 should not be used by the UE in this version of the specification
                                          T-301
    t - 301
                                                                                DEFAULT ms2000,
```

```
n-301
                                        N - 301
                                                                             DEFAULT 2,
   t-302
                                        T-302
                                                                             DEFAULT ms4000,
   n-302
                                        N-302
                                                                             DEFAULT 3,
    t-304
                                        T-304
                                                                             DEFAULT ms2000.
   n-304
                                        N - 304
                                                                             DEFAULT 2,
    t-305
                                        T-305
                                                                             DEFAULT m30
    t-307
                                        T-307
                                                                             DEFAULT s30,
    t.-308
                                        T-308
                                                                             DEFAULT ms160.
    t-309
                                        T-309
                                                                             DEFAULT 5,
    t-310
                                        T-310
                                                                             DEFAULT ms160,
   n-310
                                        N - 310
                                                                             DEFAULT 4,
                                                                             DEFAULT ms2000,
    t.-311
                                        T - 311
                                        т-312
    t - 312
                                                                            DEFAULT 1,
   n-312
                                        N-312-r5
                                                                            DEFAULT s1,
    t-313
                                        T-313
                                                                             DEFAULT 3,
   n-313
                                        N-313
                                                                            DEFAULT s20,
                                                                            DEFAULT s12,
   t-314
                                        T-314
   t-315
                                        T-315
                                                                            DEFAULT s180.
   n-315
                                        N-315-r5
                                                                            DEFAULT s1,
                                        T-316
                                                                            DEFAULT s30,
    t-316
                                        T-317
                                                                            DEFAULT infinity4
    t-317
}
                                    SEQUENCE {
UE-IdleTimersAndConstants ::=
                                        T-300,
   t-300
                                        N-300.
   n-300
   t-312
                                        T-312,
    -- n-312 shall be ignored if n-312 in UE-IdleTimersAndConstants-v3a0ext is present, and the
    -- value of that element shall be used instead.
   n-312
                                        N = 312
}
UE-IdleTimersAndConstants-v3a0ext ::=
                                            SEQUENCE {
                                                                                OPTIONAL
   n - 312
                                        N-312ext
}
UE-MultiModeRAT-Capability ::=
                                    SEQUENCE {
   multiRAT-CapabilityList
                                        MultiRAT-Capability,
   multiModeCapability
                                        MultiModeCapability
}
UE-PowerClass ::=
                                   INTEGER (1..4)
UE-PowerClassExt ::=
                                    ENUMERATED {class1, class2, class3, class4,
                                         spare4, spare3, spare2, spare1 }
                                   SEOUENCE {
UE-RadioAccessCapability ::=
    -- UE-RadioAccessCapability is compatible with R99, although accessStratumReleaseIndicator
    -- is removed from this IE, since its encoding did not does in bits. The
    -- accessStratumReleaseIndicator is provided in the relevant REL-4 extension IEs.
   pdcp-Capability
                                        PDCP-Capability,
   rlc-Capability
                                        RLC-Capability,
    transportChannelCapability
                                       TransportChannelCapability,
   rf-Capability
                                        RF-Capability,
                                       PhysicalChannelCapability,
   physicalChannelCapability
                                        UE-MultiModeRAT-Capability,
    ue-MultiModeRAT-Capability
    securityCapability
                                        SecurityCapability,
    ue-positioning-Capability
                                       UE-Positioning-Capability,
   measurementCapability
                                        MeasurementCapability
                                                                    OPTIONAL
}
UE-RadioAccessCapabilityInfo ::=
                                       SEQUENCE {
                                        UE-RadioAccessCapability,
   ue-RadioAccessCapability
   ue-RadioAccessCapability-v370ext
                                        UE-RadioAccessCapability-v370ext
}
UE-RadioAccessCapability-v370ext ::=
                                        SEQUENCE {
   ue-RadioAccessCapabBandFDDList
                                        UE-RadioAccessCapabBandFDDList
UE-RadioAccessCapability-v380ext ::=
                                        SEQUENCE {
   ue-PositioningCapabilityExt-v380
                                            UE-PositioningCapabilityExt-v380
UE-RadioAccessCapability-v3a0ext ::=
                                        SEQUENCE {
   ue-PositioningCapabilityExt-v3a0
                                           UE-PositioningCapabilityExt-v3a0
}
```

```
SEQUENCE {
UE-RadioAccessCapability-v3g0ext ::=
    ue-PositioningCapabilityExt-v3g0
                                            UE-PositioningCapabilityExt-v3g0
}
UE-RadioAccessCapability-v650ext ::=
                                        SEQUENCE {
                                      UE-RadioAccessCapabBandFDDList2,
   ue-RadioAccessCapabBandFDDList2
    -- This IE shall be included if the UE also supports Band I-VII
    ue-RadioAccessCapabBandFDDList-ext UE-RadioAccessCapabBandFDDList-ext OPTIONAL
}
UE-RadioAccessCapability-v690ext ::= SEQUENCE {
        \verb|physicalchannelcapability-edch| Physical Channel Capability-edch-r6|,
        -- TABULAR: deviceType is MD in tabular description
        -- Default value is 'doesBenefitFromBatteryConsumptionOptimisation'
                       ENUMERATED { doesNotBenefitFromBatteryConsumptionOptimisation } OPTIONAL
}
UE-RadioAccessCapability-v7xyext ::=
                                            SEQUENCE {
   rf-Capability
                                                RF-Capability-r7
                                                                                 OPTIONAL.
   physicalChannelCapability-r7
                                                PhysicalChannelCapability-r7
                                                                                 OPTIONAL
UE-RadioAccessCapabBandFDDList2 ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                            UE-RadioAccessCapabBandFDD2
UE-RadioAccessCapabBandFDD2 ::= SEQUENCE {
    radioFrequencyBandFDD2
                                        RadioFrequencyBandFDD2,
    fddRF-Capability
                                        SEQUENCE {
       ue-PowerClass
                                            UE-PowerClassExt,
        txRxFrequencySeparation
                                            TxRxFrequencySeparation
           OPTIONAL,
    {\tt measurementCapability2}
                                        MeasurementCapabilityExt2
}
UE-PositioningCapabilityExt-v380 ::=
                                        SEQUENCE {
   rx-tx-TimeDifferenceType2Capable
                                            BOOLEAN
UE-PositioningCapabilityExt-v3a0 ::=
                                        SEQUENCE {
    validity-CellPCH-UraPCH
                                            ENUMERATED { true }
UE-PositioningCapabilityExt-v3g0 ::=
                                        SEQUENCE {
    sfn-sfnType2Capability
                                        ENUMERATED { true }
UE-RadioAccessCapabBandFDDList ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                            UE-RadioAccessCapabBandFDD
UE-RadioAccessCapabBandFDDList-ext ::= SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
                                        UE-RadioAccessCapabBandFDD-ext
UE-RadioAccessCapabBandFDD ::= SEQUENCE{
   radioFrequencyBandFDD
                                        RadioFrequencyBandFDD,
                                        SEQUENCE {
    fddRF-Capability
        ue-PowerClass
                                            UE-PowerClassExt,
        txRxFrequencySeparation
                                            {\tt TxRxFrequencySeparation}
                                                                     OPTIONAL,
    measurementCapability
                                        MeasurementCapabilityExt
}
UE-RadioAccessCapabBandFDD-ext ::= SEQUENCE {
    radioFrequencyBandFDD
                                        RadioFrequencyBandFDD,
    \verb|compressed| Mode Meas Capab FDD List-ext| Compressed Mode Meas Capab FDD List-ext|
UE-RadioAccessCapability-v4b0ext ::=
                                        SEQUENCE {
                                        PDCP-Capability-r4-ext,
    pdcp-Capability-r4-ext
    tdd-CapabilityExt
                                        SEQUENCE {
                                            RF-Capability-r4-ext,
        rf-Capability
        physicalChannelCapability-LCR
                                            PhysicalChannelCapability-LCR-r4,
                                            MeasurementCapability-r4-ext
        measurementCapability-r4-ext
                                                OPTIONAL,
     - IE " AccessStratumReleaseIndicator" is not needed in RRC CONNECTION SETUP COMPLETE
    accessStratumReleaseIndicator
                                                AccessStratumReleaseIndicator OPTIONAL
}
```

```
UE-RadioAccessCapabilityComp ::= SEQUENCE {
    totalAM-RLCMemoryExceeds10kB
                                            BOOLEAN.
    rf-CapabilityComp
                                            RF-CapabilityComp
}
UE-RadioAccessCapabilityComp-ext ::= SEQUENCE {
    rf-CapabilityFDDComp
                                        RF-CapabBandListFDDComp-ext
UE-RadioAccessCapabilityComp-r7 ::= SEQUENCE {
    totalAM-RLCMemoryExceeds10kB
                                            BOOLEAN,
    rf-CapabilityComp
                                            RF-CapabilityComp-r7
}
UE-RadioAccessCapabilityComp2 ::=
                                        SEQUENCE {
    fddPhysicalChannelCapab-hspdsch-edch
                                            SEOUENCE {
        dl-CapabilityWithSimultaneousHS-DSCHConfig
                                                DL-CapabilityWithSimultaneousHS-DSCHConfig
        physicalChannelCapabComp-hspdsch-r6
                                                HSDSCH-physical-layer-category,
                                                PhysicalChannelCapability-edch-r6
        physicalChannelCapability-edch-r6
            OPTIONAL
}
RF-CapabilityComp ::= SEQUENCE {
    fdd
                            CHOICE {
        notSupported
                                        NULL,
        supported
                                        RF-CapabBandListFDDComp
    tdd384-RF-Capability
                            CHOICE {
        notSupported
                                        NULL,
                                        RadioFrequencyBandTDDList
        supported
    tdd128-RF-Capability
                            CHOICE {
        notSupported
                                        NULL.
        supported
                                        RadioFrequencyBandTDDList
}
RF-CapabilityComp-r7 ::= SEQUENCE {
                            CHOICE {
       notSupported
                                        NULL.
        supported
                                        RF-CapabBandListFDDComp
    tdd384-RF-Capability
                            CHOICE {
        notSupported
                                        NULL,
                                        RadioFrequencyBandTDDList
        supported
    tdd768-RF-Capability
                            CHOICE {
        notSupported
        supported
                                        RadioFrequencyBandTDDList
    tdd128-RF-Capability
                            CHOICE {
        notSupported
                                        RadioFrequencyBandTDDList
        supported
}
-- NOTE: This IE defines the supported TX/RX frequency separation for the respective supported
-- frequency band. Values defined as spare shall not be sent in this version of the protocol.
-- If a spare value is received, it should be interpreted as 'default-RxTX-sparation'.
RF-CapabBandFDDComp ::=
                                    ENUMERATED { notSupported,
                                        default-TxRx-separation, spare2, spare1 }
RF-CapabBandListFDDComp ::=
                                    SEQUENCE (SIZE (1..maxFreqBandsFDD)) OF
    -- The first entry corresponds with the first value of IE RadioFrequencyBandFDD,
    -- fdd2100, and so on. No more than seven entries should be included in this IE. The
    -- 8'th entry, if present, shall be ignored.
    -- An extension of this IE may be provided using the IE 'RF-CapabBandListFDDComp-ext'.
    RF-CapabBandFDDComp
RF-CapabBandListFDDComp-ext ::=
                                    SEQUENCE (SIZE (1..maxFreqBandsFDD-ext)) OF
    -- The first entry corresponds with the first value of IE RadioFrequencyBandFDD2,
    -- bandVIII, and so on.
    RF-CapabBandFDDComp
UE-RadioAccessCapability-v590ext ::=
                                      SEQUENCE {
```

```
dl-CapabilityWithSimultaneousHS-DSCHConfig DL-CapabilityWithSimultaneousHS-DSCHConfig
    OPTIONAL,
    pdcp-Capability-r5-ext
                                         PDCP-Capability-r5-ext,
    rlc-Capability-r5-ext
                                         RLC-Capability-r5-ext,
    physicalChannelCapability
                                          PhysicalChannelCapability-hspdsch-r5,
    multiModeRAT-Capability-v590ext MultiModeRAT-Capability-v590ext
}
UE-RadioAccessCapability-v5c0ext ::= SEQUENCE {
    pdcp-Capability-r5-ext2
                                          PDCP-Capability-r5-ext2
UE-RadioAccessCapability-v680ext ::= SEQUENCE {
    multiModeRAT-Capability-v680ext MultiModeRAT-Capability-v680ext
}
    PhysChCapabilityFDD ::= SEQUENCE {
maxNoDPDCH-BitsTransmitted,
MaxNoDPDCH-BitsTransmitted,
UL-PhysChCapabilityFDD ::=
    -- dummy is not used in this version of the specification and
    -- it should be ignored by the receiver.
    dummy
                                         BOOLEAN
}
UL-PhysChCapabilityFDD-r6 ::=
                                          SEQUENCE {
    maxNoDPDCH-BitsTransmitted
                                              MaxNoDPDCH-BitsTransmitted.
    physicalchannelcapability-edch
                                              PhysicalChannelCapability-edch-r6
\mbox{UL-PhysChCapabilityTDD} ::= \mbox{SEQUENCE} \ \{ \mbox{}
    maxTS-PerFrame
                                         MaxTS-PerFrame,
    maxPhysChPerTimeslot
                                          MaxPhysChPerTimeslot,
    minimumSF
                                          MinimumSF-UL,
    supportOfPUSCH
                                          BOOLEAN
}
UL-PhysChCapabilityTDD-LCR-r4 ::= SEQUENCE {
                                         MaxTS-PerSubFrame-r4,
   maxTS-PerSubFrame
    maxPhysChPerTimeslot
                                          MaxPhysChPerTimeslot,
    minimumSF
                                          MinimumSF-UL,
    supportOfPUSCH
                                          BOOLEAN,
    supportOf8PSK
                                          BOOLEAN
}
PhysicalChannelCapability-edch-r6 ::= SEQUENCE {
    fdd-edch
                                              CHOICE {
                                                 SEQUENCE {
        supported
             edch-PhysicalLayerCategory
                                                       INTEGER (1..16)
        unsupported
                                                  NULL
    }
}
UL-TransChCapability ::=
                                     SEQUENCE {
                                         MaxNoBits,
    maxNoBitsTransmitted
    maxConvCodeBitsTransmitted
                                          MaxNoBits,
    turboEncodingSupport
                                          TurboSupport,
    maxSimultaneousTransChs
                                          MaxSimultaneousTransChsUL,
    modeSpecificInfo
                                          CHOICE {
        fdd
                                              NULL,
                                              SEQUENCE {
        tdd
            maxSimultaneousCCTrCH-Count
                                                  MaxSimultaneousCCTrCH-Count
    maxTransmittedBlocks
                                          MaxTransportBlocksUL,
    maxNumberOfTFC
                                          MaxNumberOfTFC-UL,
    maxNumberOfTF
                                          MaxNumberOfTF
}
UE-Positioning-Capability ::= SEQUENCE {
    standaloneLocMethodsSupported BOOLEAN,
    ue-BasedOTDOA-Supported BOOLEAN,
    NetworkA
    networkAssistedGPS-Supported
                                              NetworkAssistedGPS-Supported,
    supportForUE-GPS-TimingOfCellFrames
                                              BOOLEAN,
    {\tt supportForIPDL}
                                              BOOLEAN
UE-SecurityInformation ::=
                                     SEQUENCE {
                                          START-Value
    start-CS
```

```
}
\label{eq:ue-securityInformation2} \mbox{ ::= } \mbox{ SEQUENCE } \{
                                    START-Value
   start-PS
URA-UpdateCause ::=
                                  ENUMERATED {
                                      changeOfURA,
                                      periodicURAUpdate,
                                      dummy,
                                      spare1 }
UTRAN-DRX-CycleLengthCoefficient ::= INTEGER (3..9)
WaitTime ::=
                                  INTEGER (0..15)
__ ***************
      RADIO BEARER INFORMATION ELEMENTS (10.3.4)
AlgorithmSpecificInfo ::=
                                 CHOICE {
   rfc2507-Info
                                    RFC2507-Info
}
AlgorithmSpecificInfo-r4 ::=
                                CHOICE {
                                 RFC2507-Info,
RFC3095-Info-r4
   rfc2507-Info
   rfc3095-Info
}
CID-InclusionInfo-r4 ::=
                                  ENUMERATED {
                                    pdcp-Header,
                                      rfc3095-PacketFormat }
 -- Upper limit of COUNT-C is 2^32 - 1
COUNT-C ::=
                                  INTEGER (0..4294967295)
-- Upper limit of COUNT-C-MSB is 2^25 - 1
COUNT-C-MSB ::=
                                  INTEGER (0..33554431)
DefaultConfigIdentity ::=
                                 INTEGER (0..10)
DefaultConfigIdentity-r4 ::=
                                 INTEGER (0..12)
DefaultConfigIdentity-r5 ::=
                                 INTEGER (0..13)
-- DefaultConfigIdentity-r6 values 23..31 are spare and shall not be used in this version of
-- the protocol
DefaultConfigIdentity-r6 ::=
                                 INTEGER (0..31)
                                  ENUMERATED {
DefaultConfigMode ::=
                                      fdd,
DDI ::=
                                  INTEGER (0..62)
DL-AM-RLC-Mode ::=
                                  SEQUENCE {
                                  BOOLEAN,
   inSequenceDelivery
   receivingWindowSize
                                      ReceivingWindowSize,
   dl-RLC-StatusInfo
                                     DL-RLC-StatusInfo
                                  SEQUENCE {
OctetModeRLC-SizeInfoTypel,
DL-AM-RLC-Mode-r5 ::=
   dl-RLC-PDU-size
   inSequenceDelivery
                                    BOOLEAN,
   receivingWindowSize
                                      ReceivingWindowSize,
   dl-RLC-StatusInfo
                                    DL-RLC-StatusInfo
}
DL-CounterSynchronisationInfo ::= SEQUENCE {
                                      RB-WithPDCP-InfoList OPTIONAL
   rB-WithPDCP-InfoList
DL-CounterSynchronisationInfo-r5 ::= SEQUENCE {
   rb-PDCPContextRelocationList RB-PDCPContextRelocation
   rb-WithPDCP-InfoList
                                        RB-PDCPContextRelocationList OPTIONAL
}
```

```
DL-LogicalChannelMapping ::= SEQUENCE {
   -- TABULAR: DL-TransportChannelType contains TransportChannelIdentity as well.
   dl-TransportChannelType DL-TransportChannelType,
   logicalChannelIdentity
                                      LogicalChannelIdentity
                                                                         OPTIONAL
}
DL-LogicalChannelMapping-r5 ::= SEQUENCE {
    -- TABULAR: DL-TransportChannelType contains TransportChannelIdentity as well.
   dl-TransportChannelType
                                      {	t DL-TransportChannelType-r5},
   logicalChannelIdentity
                                      LogicalChannelIdentity
                                                                         OPTIONAL
}
DL-LogicalChannelMappingList ::= SEQUENCE (SIZE (1..maxLoCHperRLC)) OF
                                      DL-LogicalChannelMapping
DL-LogicalChannelMappingList-r5 ::= SEQUENCE (SIZE (1..maxLoCHperRLC)) OF
                                      DL-LogicalChannelMapping-r5
DL-Reception-Window-Size-r6 ::=
                                   ENUMERATED { size32, size48, size64, size80, size96, size112 }
DL-RFC3095-r4 ::=
                                   SEQUENCE {
   cid-InclusionInfo
                                      CID-InclusionInfo-r4,
   max-CID
                                       INTEGER (1..16383)
                                                                         DEFAULT 15.
                                      INTEGER (0..65535)
   reverseDecompressionDepth
                                                                         DEFAULT 0
}
DL-RLC-Mode ::=
                                  CHOICE {
   dl-AM-RLC-Mode
                                     DL-AM-RLC-Mode,
   dl-UM-RLC-Mode
                                       NULL.
   dl-TM-RLC-Mode
                                       DL-TM-RLC-Mode
DL-RLC-Mode-r5 ::=
                                   CHOICE {
                                      DL-AM-RLC-Mode-r5,
   dl-AM-RLC-Mode
   dl-UM-RLC-Mode
                                       DL-UM-RLC-Mode-r5,
   dl-TM-RLC-Mode
                                      DL-TM-RLC-Mode
}
DL-RLC-Mode-r6 ::=
                                  CHOICE {
   dl-AM-RLC-Mode
                                   DL-AM-RLC-Mode-r5,
   dl-UM-RLC-Mode
                                      DL-UM-RLC-Mode-r6,
   dl-TM-RLC-Mode
                                      DL-TM-RLC-Mode
DL-RLC-StatusInfo ::=
                                  SEQUENCE {
                                      TimerStatusProhibit
   timerStatusProhibit
   -- dummy is not used in this version of the specification, it should not be sent
   -- and if received they should be ignored.
                            TimerEPC
                                                                      OPTIONAL,
   missingPDU-Indicator
                                          BOOLEAN,
                                      TimerStatusPeriodic
   timerStatusPeriodic
                                                                         OPTIONAL
}
DL-TM-RLC-Mode ::=
                                 SEQUENCE {
   segmentationIndication
                                          BOOLEAN
DL-TransportChannelType ::=
                                   CHOICE {
   dch
                                      TransportChannelIdentity,
   fach
                                      NULL,
   -- The choice 'dsch' should not be used in FDD mode, and if received
    -- the UE behaviour is unspecified.
                                       TransportChannelIdentity,
   -- The choice 'dch-and-dsch' should not be used in FDD mode, and if received the UE
   -- behaviour is unspecified
   dch-and-dsch
                                       {\tt TransportChannelIdentityDCHandDSCH}
}
                                       CHOICE {
DL-TransportChannelType-r5 ::=
                                       TransportChannelIdentity,
   fach
                                      NULL,
   -- The choice 'dsch' should not be used in FDD mode, and if received
   -- the UE behaviour is unspecified.
                                       TransportChannelIdentity,
    -- The choice 'dch-and-dsch' should not be used in FDD mode, and if received the UE
    -- behaviour is unspecified
   dch-and-dsch
                                       TransportChannelIdentityDCHandDSCH,
```

```
hsdsch
                                        MAC-d-FlowIdentity,
                                        MAC-d-FlowIdentityDCHandHSDSCH
   dch-and-hsdsch
}
DL-UM-RLC-LI-size ::=
                                        ENUMERATED {
                                        size7, size15 }
DL-UM-RLC-Mode-r5 ::=
                                        SEOUENCE {
   dl-UM-RLC-LI-size
                                        DL-UM-RLC-LI-size
DL-UM-RLC-Mode-r6 ::=
                                   SEQUENCE {
                                        DL-UM-RLC-LI-size,
   dl-UM-RLC-LI-size
   dl-Reception-Window-Size
                                        DL-Reception-Window-Size-r6 OPTIONAL
ExpectReordering ::=
                                    ENUMERATED {
                                        reorderingNotExpected,
                                        reorderingExpected }
ExplicitDiscard ::=
                                    SEQUENCE {
                                        TimerMRW,
    timerMRW
    timerDiscard
                                        TimerDiscard,
   maxMRW
                                        MaxMRW
}
HeaderCompressionInfo ::=
                                    SEQUENCE {
   algorithmSpecificInfo
                                    AlgorithmSpecificInfo
HeaderCompressionInfoList ::=
                                   SEQUENCE (SIZE (1..maxPDCPAlgoType)) OF
                                       HeaderCompressionInfo
HeaderCompressionInfo-r4 ::=
                                   SEQUENCE {
                                      AlgorithmSpecificInfo-r4
   algorithmSpecificInfo
                                  SEQUENCE (SIZE (1..maxPDCPAlgoType)) OF
HeaderCompressionInfoList-r4 ::=
                                        HeaderCompressionInfo-r4
LogicalChannelIdentity ::=
                                    INTEGER (1..15)
LosslessSRNS-RelocSupport ::=
                                    CHOICE {
                                        MaxPDCP-SN-WindowSize,
    supported
   notSupported
                                        NULL
MAC-d-HFN-initial-value ::=
                                    BIT STRING (SIZE (24))
MAC-LogicalChannelPriority ::=
                                    INTEGER (1..8)
                                    ENUMERATED {
MaxDAT ::=
                                        dat1, dat2, dat3, dat4, dat5, dat6,
dat7, dat8, dat9, dat10, dat15, dat20,
dat25, dat30, dat35, dat40 }
MaxDAT-Retransmissions ::=
                                    SEQUENCE {
   maxDAT
                                       MaxDAT,
   timerMRW
                                        TimerMRW,
   maxMRW
                                        MaxMRW
MaxMRW ::=
                                    ENUMERATED {
                                        mm1, mm4, mm6, mm8, mm12, mm16,
                                        mm24, mm32 }
MaxPDCP-SN-WindowSize ::=
                                    ENUMERATED {
                                        sn255, sn65535 }
MaxRST ::=
                                    ENUMERATED {
                                        rst1, rst4, rst6, rst8, rst12,
                                        rst16, rst24, rst32 }
NoExplicitDiscard ::=
                                    ENUMERATED {
                                        dt10, dt20, dt30, dt40, dt50,
                                        dt60, dt70, dt80, dt90, dt100 }
                                    SEQUENCE {
PDCP-Info ::=
```

```
losslessSRNS-RelocSupport
                                      LosslessSRNS-RelocSupport
                                                                          OPTIONAL.
    -- TABULAR: pdcp-PDU-Header is MD in the tabular format and it can be encoded
    -- in one bit, so the OPTIONAL is removed for compactness.
    pdcp-PDU-Header
                                      PDCP-PDU-Header,
   headerCompressionInfoList
                                      HeaderCompressionInfoList
                                                                         OPTIONAL
}
PDCP-Info-r4 ::=
   P-Info-r4 ::= SEQUENCE {
losslessSRNS-RelocSupport LosslessSRNS-RelocSupport
    -- TABULAR: pdcp-PDU-Header is MD in the tabular format and it can be encoded
    -- in one bit, so the OPTIONAL is removed for compactness.
   pdcp-PDU-Header
                                      PDCP-PDU-Header,
                                      HeaderCompressionInfoList-r4 OPTIONAL
   headerCompressionInfoList
}
PDCP-InfoReconfig ::=
                                   SEQUENCE {
   pdcp-Info
                                      PDCP-Info,
    -- dummy is not used in this version of the specification and
    -- it should be ignored.
                                      INTEGER (0..65535)
   dummy
}
PDCP-InfoReconfig-r4 ::= SEQUENCE {
   pdcp-Info
                                      PDCP-Info-r4
PDCP-PDU-Header ::=
                                   ENUMERATED {
                                     present, absent }
PDCP-ROHC-TargetMode ::=
                                   ENUMERATED { o-Mode, r-Mode }
PDCP-SN-Info ::=
                                   INTEGER (0..65535)
Poll-PDU ::=
                                   ENUMERATED {
                                       pdu1, pdu2, pdu4, pdu8, pdu16,
                                       pdu32, pdu64, pdu128 }
Poll-SDU ::=
                                   ENUMERATED {
                                      sdu1, sdu4, sdu16, sdu64 }
PollingInfo ::=
                                   SEQUENCE {
   timerPollProhibit
                                     TimerPollProhibit
                                                                          OPTIONAL.
    timerPoll
                                      TimerPoll
                                                                          OPTIONAL,
   poll-PDU
                                      Poll-PDU
                                                                          OPTIONAL,
   poll-SDU
                                      Poll-SDU
                                                                          OPTIONAL,
    lastTransmissionPDU-Poll
                                      BOOLEAN,
   lastRetransmissionPDU-Poll
                                      BOOLEAN,
   pollWindow
                                      PollWindow
                                                                         OPTIONAL,
    timerPollPeriodic
                                      TimerPollPeriodic
                                                                          OPTIONAL
}
PollWindow ::=
                                   ENUMERATED {
                                      pw50, pw60, pw70, pw80, pw85,
                                       pw90, pw95, pw99 }
PredefinedConfigIdentity ::=
                                   INTEGER (0..15)
PredefinedConfigValueTag ::=
                                  INTEGER (0..15)
PredefinedRB-Configuration ::= re-EstablishmentTimer
                                   SEQUENCE {
                                   Re-EstablishmentTimer,
    srb-InformationList
                                       SRB-InformationSetupList,
   rb-InformationList
                                      RB-InformationSetupList
}
PreDefRadioConfiguration ::= SEQUENCE {
   -- Radio bearer IEs
       predefinedRB-Configuration
                                         PredefinedRB-Configuration,
   -- Transport channel IEs
                                         PreDefTransChConfiguration,
       preDefTransChConfiguration
    -- Physical channel IEs
       preDefPhyChConfiguration
                                          PreDefPhyChConfiguration
}
PredefinedConfigStatusList ::=
                                           SEQUENCE (SIZE (maxPredefConfig)) OF
                                           PredefinedConfigStatusInfo
PredefinedConfigStatusInfo ::=
                                 CHOICE {
```

```
storedWithValueTagSameAsPrevius NULL,
                                      CHOICE {
       notStored
                                          NULL.
       storedWithDifferentValueTag
                                          PredefinedConfigValueTag
}
PredefinedConfigStatusListComp ::= SEQUENCE {
   setsWithDifferentValueTag
                                      PredefinedConfigSetsWithDifferentValueTag,
   otherEntries
                                       PredefinedConfigStatusListVarSz
                                                                                 OPTIONAL
PredefinedConfigSetsWithDifferentValueTag ::= SEQUENCE (SIZE (1..2)) OF
                                              PredefinedConfigSetWithDifferentValueTag
PredefinedConfigSetWithDifferentValueTag ::= SEQUENCE {
                                              INTEGER (0..10)
                                                                DEFAULT 0.
   startPosition
    -- numberOfEntries
                                              INTEGER (6..16),
   -- numberOfEntries is covered by the size of the list in IE PredefinedConfigValueTagList
                                              PredefinedConfigValueTagList
   valueTaqList
}
PredefinedConfigValueTagList ::=
                                      SEQUENCE (SIZE (1..maxPredefConfig)) OF
                                          PredefinedConfigValueTag
PredefinedConfigStatusListVarSz ::=
                                    SEQUENCE (SIZE (1..maxPredefConfig)) OF
                                          PredefinedConfigStatusInfo
RAB-Info ::=
                                   SEQUENCE {
   rab-Identity
                                      RAB-Identity,
   cn-DomainIdentity
                                      CN-DomainIdentity,
   nas-Synchronisation-Indicator
                                      NAS-Synchronisation-Indicator OPTIONAL,
   re-EstablishmentTimer
                                      Re-EstablishmentTimer
}
RAB-Info-r6-ext ::=
                                  SEQUENCE {
   mbms-SessionIdentity
                                      MBMS-SessionIdentity
                                                                        OPTIONAL
RAB-Info-r6 ::=
                                   SEQUENCE {
   rab-Identity
                                     RAB-Identity,
   mbms-SessionIdentity
                                      MBMS-SessionIdentity
                                                                        OPTIONAL,
   cn-DomainIdentity
                                      CN-DomainIdentity,
   nas-Synchronisation-Indicator
                                      NAS-Synchronisation-Indicator
                                                                        OPTIONAL,
   re-EstablishmentTimer
                                      Re-EstablishmentTimer
RAB-InformationList ::=
                                 SEQUENCE (SIZE (1..maxRABsetup)) OF
                                      RAB-Info
                                   SEQUENCE (SIZE (1..maxRABsetup)) OF
RAB-InformationList-r6 ::=
                                      RAB-Info-r6
RAB-InformationReconfigList ::=
                                   SEQUENCE (SIZE (1.. maxRABsetup)) OF
                                      RAB-InformationReconfig
RAB-InformationReconfig ::=
                                  SEQUENCE {
   rab-Identity
                                      RAB-Identity,
   cn-DomainIdentity
                                       CN-DomainIdentity.
   nas-Synchronisation-Indicator
                                      NAS-Synchronisation-Indicator
RAB-Info-Post ::=
                                      SEQUENCE {
   rab-Identity
                                      RAB-Identity,
   cn-DomainIdentity
                                      CN-DomainIdentity,
   nas-Synchronisation-Indicator
                                      NAS-Synchronisation-Indicator OPTIONAL
}
{\tt RAB-InformationSetup} \ ::= \\ {\tt SEQUENCE} \ \big\{
                                     RAB-Info,
   rab-Info
   rb-InformationSetupList
                                      RB-InformationSetupList
}
RAB-InformationSetup-r4 ::= SEQUENCE {
   rb-InformationSetupList
                                      RB-InformationSetupList-r4
```

```
RAB-InformationSetup-r5 ::=
                                  SEQUENCE {
   rab-Info
                                      RAB-Info,
                                       RB-InformationSetupList-r5
   rb-InformationSetupList
RAB-InformationSetup-r6-ext ::= SEQUENCE {
                                       RAB-Info-r6-ext
    rab-Info-r6-ext
}
RAB-InformationSetup-r6 ::=
                                   SEQUENCE {
   rab-Info
                                       RAB-Info-r6.
    rb-InformationSetupList
                                       RB-InformationSetupList-r6
                                   SEQUENCE (SIZE (1..maxRABsetup)) OF
RAB-InformationSetupList ::=
                                       RAB-InformationSetup
                                   SEQUENCE (SIZE (1..maxRABsetup)) OF
RAB-InformationSetupList-r4 ::=
                                       RAB-InformationSetup-r4
RAB-InformationSetupList-r5 ::=
                                   SEQUENCE (SIZE (1..maxRABsetup)) OF
                                       RAB-InformationSetup-r5
RAB-InformationSetupList-r6 ::=
                                   SEQUENCE (SIZE (1..maxRABsetup)) OF
                                       RAB-InformationSetup-r6
-- The IE 'RAB-InformationSetupList-r6-ext' provides elements of extension information, which
-- are added to the corresponding elements of the IE 'RAB-InformationSetupList/-r4/-r5'.
RAB-InformationSetupList-r6-ext ::= SEQUENCE (SIZE (1..maxRABsetup)) OF
                                       RAB-InformationSetup-r6-ext
RB-ActivationTimeInfo ::=
                                  SEQUENCE {
   rb-Identity
                                       RB-Identity,
                                       RLC-SequenceNumber
    rlc-SequenceNumber
                                  SEQUENCE (SIZE (1..maxRB)) OF
RB-ActivationTimeInfoList ::=
                                       RB-ActivationTimeInfo
RB-COUNT-C-Information ::=
                                   SEQUENCE {
                                      RB-Identity,
   rb-Identity
    count-C-UL
                                       COUNT-C,
    count-C-DL
                                       COUNT-C
}
                                   SEQUENCE (SIZE (1..maxRBallRABs)) OF
RB-COUNT-C-InformationList ::=
                                      RB-COUNT-C-Information
RB-COUNT-C-MSB-Information ::=
                                   SEQUENCE {
   rb-Identity
                                      RB-Identity,
    count-C-MSB-III.
                                       COUNT-C-MSB.
    count-C-MSB-DL
                                       COUNT-C-MSB
RB-COUNT-C-MSB-InformationList ::= SEQUENCE (SIZE (1..maxRBallRABs)) OF
                                       RB-COUNT-C-MSB-Information
RB-Identity ::=
                                   INTEGER (1..32)
RB-IdentityList ::=
                                   SEQUENCE (SIZE (1..maxRB)) OF
                                       RB-Identity
RB-InformationAffected ::=
                                   SEQUENCE {
   rb-Identity
                                       RB-Identity,
   rb-MappingInfo
                                       RB-MappingInfo
RB-InformationAffected-r5 ::=
                                   SEQUENCE {
   rb-Identity
                                       RB-Identity,
   rb-MappingInfo
                                       RB-MappingInfo-r5
}
RB-InformationAffected-r6 ::=
                                   SEQUENCE {
   rb-Identity
                                       RB-Identity,
                                       RB-MappingInfo-r6
   rb-MappingInfo
}
```

```
RB-InformationAffectedList ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationAffected
RB-InformationAffectedList-r5 ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationAffected-r5
RB-InformationAffectedList-r6 ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationAffected-r6
RB-InformationChanged-r6 ::=
                                    SEQUENCE {
   rb-Identity
                                        RB-Identity,
                                         CHOICE {
    rb-Change
       release
                                            NULL
        re-mapToDefaultRb
                                            RB-Identity
}
                                        SEQUENCE (SIZE (1..maxRB)) OF
RB-InformationChangedList-r6 ::=
                                            RB-InformationChanged-r6
RB-InformationReconfig ::=
                                    SEQUENCE {
    rb-Identity
                                        RB-Identity,
   pdcp-Info
                                         PDCP-InfoReconfig
                                                                             OPTIONAL,
   pdcp-SN-Info
                                        PDCP-SN-Info
                                                                             OPTIONAL,
    rlc-Info
                                        RLC-Info
                                                                             OPTIONAL.
    rb-MappingInfo
                                        RB-MappingInfo
                                                                             OPTIONAL,
    rb-StopContinue
                                        RB-StopContinue
                                                                             OPTIONAL
}
RB-InformationReconfig-r4 ::=
                                    SEQUENCE {
    rb-Identity
                                        RB-Identity,
                                         PDCP-InfoReconfig-r4
   pdcp-Info
                                                                             OPTIONAL,
   pdcp-SN-Info
                                        PDCP-SN-Info
                                                                             OPTIONAL,
   rlc-Info
                                        RLC-Info
                                                                             OPTIONAL,
    rb-MappingInfo
                                        RB-MappingInfo
                                                                             OPTIONAL,
    rb-StopContinue
                                        RB-StopContinue
                                                                             OPTIONAL
}
RB-InformationReconfig-r5 ::=
                                    SEQUENCE {
   rb-Identity
                                        RB-Identity,
   pdcp-Info
                                         PDCP-InfoReconfig-r4
                                                                             OPTIONAL,
   pdcp-SN-Info
                                        PDCP-SN-Info
                                                                             OPTIONAL.
    rlc-Info
                                        RLC-Info-r5
                                                                             OPTIONAL,
    rb-MappingInfo
                                        RB-MappingInfo-r5
                                                                             OPTIONAL,
    rb-StopContinue
                                        RB-StopContinue
                                                                             OPTIONAL
}
                                    SEQUENCE {
RB-InformationReconfig-r6 ::=
    rb-Identity
                                        RB-Identity,
   pdcp-Info
                                        PDCP-InfoReconfig-r4
                                                                             OPTIONAL,
   pdcp-SN-Info
                                                                             OPTIONAL,
                                        PDCP-SN-Info
   rlc-Info
                                        RLC-Info-r6
                                                                             OPTIONAL,
    rb-MappingInfo
                                        RB-MappingInfo-r6
                                                                             OPTIONAL,
    rb-StopContinue
                                        RB-StopContinue
                                                                             OPTIONAL
}
RB-InformationReconfigList ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationReconfig
                                    SEOUENCE (SIZE (1..maxRB)) OF
RB-InformationReconfigList-r4 ::=
                                        {\tt RB-InformationReconfig-r4}
RB-InformationReconfigList-r5 ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationReconfig-r5
RB-InformationReconfigList-r6 ::=
                                    SEQUENCE (SIZE (1..maxRB)) OF
                                        RB-InformationReconfig-r6
                                    SEQUENCE (SIZE (1..maxRB)) OF
RB-InformationReleaseList ::=
                                        RB-Identity
RB-InformationSetup ::=
                                    SEQUENCE {
   rb-Identity
                                        RB-Identity,
                                                                             OPTIONAL,
    pdcp-Info
                                        PDCP-Info
    rlc-InfoChoice
                                        RLC-InfoChoice,
    rb-MappingInfo
                                        RB-MappingInfo
}
```

```
RB-InformationSetup-r4 ::=
                                   SEQUENCE {
                                       RB-Identity,
    rb-Identity
   pdcp-Info
                                       PDCP-Info-r4
                                                                           OPTIONAL,
    rlc-InfoChoice
                                       RLC-InfoChoice,
    rb-MappingInfo
                                       RB-MappingInfo
}
                                   SEQUENCE {
RB-InformationSetup-r5 ::=
   rb-Identity
                                       RB-Identity,
   pdcp-Info
                                       PDCP-Info-r4
                                                                           OPTIONAL,
   rlc-InfoChoice
                                       RLC-InfoChoice-r5,
   rb-MappingInfo
                                       RB-MappingInfo-r5
}
RB-InformationSetup-r6 ::=
                                   SEQUENCE {
   rb-Identity
                                      RB-Identity,
    pdcp-Info
                                       PDCP-Info-r4
                                                                           OPTIONAL.
    rlc-InfoChoice
                                       RLC-InfoChoice-r6,
   rb-MappingInfo
                                       RB-MappingInfo-r6
RB-InformationSetupList ::=
                                   SEQUENCE (SIZE (1..maxRBperRAB)) OF
                                       RB-InformationSetup
RB-InformationSetupList-r4 ::=
                                   SEQUENCE (SIZE (1..maxRBperRAB)) OF
                                       RB-InformationSetup-r4
RB-InformationSetupList-r5 ::=
                                   SEQUENCE (SIZE (1..maxRBperRAB)) OF
                                       RB-InformationSetup-r5
RB-InformationSetupList-r6 ::=
                                   SEQUENCE (SIZE (1..maxRBperRAB)) OF
                                       RB-InformationSetup-r6
                                   SEQUENCE (SIZE (1..maxRBMuxOptions)) OF
RB-MappingInfo ::=
                                       RB-MappingOption
RB-MappingInfo-r5 ::=
                                       SEQUENCE (SIZE (1..maxRBMuxOptions)) OF
                                       RB-MappingOption-r5
RB-MappingInfo-r6 ::=
                                       SEQUENCE (SIZE (1..maxRBMuxOptions)) OF
                                       RB-MappingOption-r6
                                   SEQUENCE {
RB-MappingOption ::=
   ul-LogicalChannelMappings
                                       UL-LogicalChannelMappings
                                                                          OPTIONAL,
                                       DL-LogicalChannelMappingList
    dl-LogicalChannelMappingList
}
RB-MappingOption-r5 ::=
                                      SEQUENCE {
    ul-LogicalChannelMappings
                                       UL-LogicalChannelMappings
                                                                           OPTIONAL,
    dl-LogicalChannelMappingList DL-LogicalChannelMappingList-r5
                                                                          OPTIONAL
}
RB-MappingOption-r6 ::=
                                      SEQUENCE {
                                       UL-LogicalChannelMappings-r6
    ul-LogicalChannelMappings
                                                                           OPTIONAL,
    dl-LogicalChannelMappingList
                                      DL-LogicalChannelMappingList-r5
                                                                           OPTIONAL
}
RB-PDCPContextRelocation ::=
                                       SEQUENCE {
    rb-Identity
                                           RB-Identity,
    dl-RFC3095-Context-Relocation
                                           BOOLEAN,
                                           BOOLEAN
    ul-RFC3095-Context-Relocation
RB-PDCPContextRelocationList ::=
                                           SEQUENCE (SIZE (1..maxRBallRABs)) OF
                                           RB-PDCPContextRelocation
RB-StopContinue ::=
                                   ENUMERATED {
                                       stopRB, continueRB }
RB-WithPDCP-Info ::=
                                   SEQUENCE {
   rb-Identity
                                       RB-Identity,
   pdcp-SN-Info
                                       PDCP-SN-Info
RB-WithPDCP-InfoList ::=
                                   SEQUENCE (SIZE (1..maxRBallRABs)) OF
                                       RB-WithPDCP-Info
ReceivingWindowSize ::=
                                   ENUMERATED {
```

```
rw1, rw8, rw16, rw32, rw64, rw128, rw256,
                                       rw512, rw768, rw1024, rw1536, rw2047,
                                       rw2560, rw3072, rw3584, rw4095 }
RFC2507-Info ::=
                                   SEQUENCE {
                                       JENCE

INTEGER (1..055)

INTEGER (1..255)

INTEGER (60..65535)

TEGER (3..255)
  f-MAX-PERIOD
                                      INTEGER (1..65535)
                                                                           DEFAULT 256,
   f-MAX-TIME
                                                                           DEFAULT 5,
   max-HEADER
                                                                           DEFAULT 168,
    tcp-SPACE
                                                                           DEFAULT 15,
   non-TCP-SPACE
                                                                           DEFAULT 15,
    -- TABULAR: expectReordering has only two possible values, so using Optional or Default
    -- would be wasteful
    expectReordering
                                       ExpectReordering
}
RFC3095-Info-r4 ::= rohcProfileList
                              SEQUENCE {
                                       ROHC-ProfileList-r4,
                                                                           OPTIONAL,
    111-RFC3095
                                       UL-RFC3095-r4
   dl-RFC3095
                                       DL-RFC3095-r4
                                                                           OPTIONAL
}
RLC-Info ::=
                                   SEQUENCE {
   ul-RLC-Mode
                                       UL-RLC-Mode
                                                                           OPTIONAL,
   dl-RLC-Mode
                                       DL-RLC-Mode
                                                                           OPTIONAL
}
RLC-Info-r5 ::=
                                   SEQUENCE {
                                                                           OPTIONAL,
   ul-RLC-Mode
                                    UL-RLC-Mode
                                       DL-RLC-Mode-r5
   dl-RLC-Mode
                                                                           OPTIONAL,
   rlc-OneSidedReEst
                                       BOOLEAN
}
RLC-Info-r6 ::=
                                   SEQUENCE {
   ul-RLC-Mode
                                       UL-RLC-Mode
                                                                           OPTIONAL.
    dl-RLC-Mode
                                       DL-RLC-Mode-r6
                                                                           OPTIONAL,
   rlc-OneSidedReEst
   rlc-OneSidedReEst
altE-bitInterpretation
                                       BOOLEAN,
                                       ENUMERATED { true }
                                                                          OPTIONAL
}
RLC-Info-MCCH-r6 ::=
                                   SEQUENCE {
                                       DL-UM-RLC-LI-size,
   dl-UM-RLC-LI-size
   dl-UM-RLC-OutOSeqDelivery-Info
                                       UM-RLC-OutOSeqDelivery-Info-r6
                                                                          OPTIONAL
}
   dl-UM-RLC-LI-size
RLC-Info-MSCH-r6 ::=
                                   SEQUENCE {
                                       DL-UM-RLC-LI-size
RLC-Info-MTCH-r6 ::=
                                   SEQUENCE {
                                    DL-UM-RLC-LI-size,
   dl-UM-RLC-LI-size
   dl-UM-RLC-DuplAvoid-Reord-Info
                                       UM-RLC-DuplAvoid-Reord-Info-r6
                                                                         OPTIONAL
}
RLC-InfoChoice ::=
                                   CHOICE {
   rlc-Info
                                       RLC-Info,
                                       RB-Identity
    same-as-RB
}
RLC-InfoChoice-r5 ::=
                                   CHOICE {
                                       RLC-Info-r5,
   rlc-Info
                                       RB-Identity
   same-as-RB
RLC-InfoChoice-r6 ::=
                                   CHOICE {
   rlc-Info
                                       RLC-Info-r6,
    same-as-RB
                                       RB-Identity
RLC-PDU-Size ::=
                                   OctetModeRLC-SizeInfoType1
RLC-PDU-SizeList ::=
                                   SEQUENCE (SIZE (1..maxRLCPDUsizePerLogChan)) OF
                                       RLC-PDU-Size
RLC-SequenceNumber ::=
                                   INTEGER (0..4095)
RLC-SizeInfo ::=
                                   SEQUENCE {
   rlc-SizeIndex
                                       INTEGER (1..maxTF)
```

```
RLC-SizeExplicitList ::= SEQUENCE (SIZE (1..maxTF)) OF
                                     RLC-SizeInfo
ROHC-Profile-r4 ::=
                                  INTEGER (1..3)
                                 SEQUENCE (SIZE (1..maxROHC-Profile-r4)) OF
ROHC-ProfileList-r4 ::=
                                      ROHC-Profile-r4
ROHC-PacketSize-r4 ::=
                                  INTEGER (2..1500)
ROHC-PacketSizeList-r4 ::=
                                 SEQUENCE (SIZE (1..maxROHC-PacketSizes-r4)) OF
                                     ROHC-PacketSize-r4
SRB-InformationSetup ::= SEQUENCE {
  -- The default value for rb-Identity is the smallest value not used yet.
   rb-Identity
                                     RB-Identity
                                                                        OPTIONAL.
   rlc-InfoChoice
                                      RLC-InfoChoice,
   rb-MappingInfo
                                     RB-MappingInfo
SRB-InformationSetup-r5 ::= SEQUENCE {
    -- The default value for rb-Identity is the smallest value not used yet.
                                     RB-Identity
   rb-Identity
   rlc-InfoChoice
                                      RLC-InfoChoice-r5.
   rb-MappingInfo
                                      RB-MappingInfo-r5
SRB-InformationSetup-r6 ::= SEQUENCE {
   -- The default value for rb-Identity is the smallest value not used yet.
   rb-Identity
                                      RB-Identity
                                                                        OPTIONAL.
                                      RLC-InfoChoice-r6,
   rlc-InfoChoice
   rb-MappingInfo
                                      RB-MappingInfo-r6
SRB-InformationSetupList ::= SEQUENCE (SIZE (1..maxSRBsetup)) OF
                                     SRB-InformationSetup
SRB-InformationSetup-r5
SRB-InformationSetupList-r6 ::=
                                  SEQUENCE (SIZE (1..maxSRBsetup)) OF
                                     SRB-InformationSetup-r6
SRB-InformationSetupList2 ::=
                                  SEQUENCE (SIZE (3..4)) OF
                                      SRB-InformationSetup
SRB-InformationSetupList2-r6 ::=
                                  SEQUENCE (SIZE (3..4)) OF
                                     SRB-InformationSetup-r6
TimerDAR-r6 ::=
                                  ENUMERATED {
                                      ms40, ms80, ms120, ms160, ms240, ms320, ms480, ms640,
                                      ms960, ms1280, ms1920, ms2560, ms3840, ms5120 }
TimerDiscard ::=
                                  ENUMERATED {
                                      td0-1, td0-25, td0-5, td0-75,
                                      td1, td1-25, td1-5, td1-75,
                                      td2, td2-5, td3, td3-5, td4,
                                      td4-5, td5, td7-5 }
TimerEPC ::=
                                  ENUMERATED {
                                      te50, te60, te70, te80, te90,
                                      te100, te120, te140, te160, te180,
                                      te200, te300, te400, te500, te700,
                                      te900 }
TimerMRW ::=
                                  ENUMERATED {
                                     te50, te60, te70, te80, te90, te100,
                                      te120, te140, te160, te180, te200,
                                      te300, te400, te500, te700, te900 }
TimerOSD-r6 ::=
                                  ENUMERATED {
                                     ms40, ms80, ms120, ms160, ms240, ms320, ms480, ms640,
                                      {\tt ms960}, {\tt ms1280}, {\tt ms1920}, {\tt ms2560}, {\tt ms3840}, {\tt ms5120}
TimerPoll ::=
                                      tp10, tp20, tp30, tp40, tp50, tp60, tp70, tp80, tp90, tp100,
```

```
tp110, tp120, tp130, tp140, tp150,
                                            tp160, tp170, tp180, tp190, tp200,
                                            tp210, tp220, tp230, tp240, tp250,
                                            tp260, tp270, tp280, tp290, tp300,
                                            tp310, tp320, tp330, tp340, tp350,
                                            tp360, tp370, tp380, tp390, tp400,
                                            tp410, tp420, tp430, tp440, tp450, tp460, tp470, tp480, tp490, tp500,
                                            tp510, tp520, tp530, tp540, tp550,
                                            tp600, tp650, tp700, tp750, tp800, tp850, tp900, tp950, tp1000 }
                                       ENUMERATED {
TimerPollPeriodic ::=
                                            tper100, tper200, tper300, tper400,
                                            tper500, tper750, tper1000, tper2000 }
TimerPollProhibit ::=
                                       ENUMERATED {
                                            tpp10, tpp20, tpp30, tpp40, tpp50,
                                            tpp60, tpp70, tpp80, tpp90, tpp100,
                                            tpp110, tpp120, tpp130, tpp140, tpp150, tpp160, tpp170, tpp180, tpp190, tpp200,
                                            tpp210, tpp220, tpp230, tpp240, tpp250,
                                            tpp260, tpp270, tpp280, tpp290, tpp300,
                                            tpp310, tpp320, tpp330, tpp340, tpp350,
                                            tpp360, tpp370, tpp380, tpp390, tpp400, tpp410, tpp410, tpp420, tpp430, tpp440, tpp450,
                                            tpp460, tpp470, tpp480, tpp490, tpp500,
                                            tpp510, tpp520, tpp530, tpp540, tpp550,
                                            tpp600, tpp650, tpp700, tpp750, tpp800,
                                            tpp850, tpp900, tpp950, tpp1000 }
TimerRST ::=
                                           tr50, tr100, tr150, tr200, tr250, tr300,
                                            tr350, tr400, tr450, tr500, tr550,
                                            tr600, tr700, tr800, tr900, tr1000 }
TimerStatusPeriodic ::=
                                           tsp100, tsp200, tsp300, tsp400, tsp500, tsp750, tsp1000, tsp2000 }
                                       ENUMERATED {
TimerStatusProhibit ::=
                                           tsp10,tsp20,tsp30,tsp40,tsp50,
                                            tsp60,tsp70,tsp80,tsp90,tsp100,
                                            tsp110,tsp120,tsp130,tsp140,tsp150,
                                            tsp160,tsp170,tsp180,tsp190,tsp200,
                                            tsp210,tsp220,tsp230,tsp240,tsp250,
                                            tsp260,tsp270,tsp280,tsp290,tsp300,
                                            tsp310,tsp320,tsp330,tsp340,tsp350,
                                            tsp360,tsp370,tsp380,tsp390,tsp400,
                                            tsp410,tsp420,tsp430,tsp440,tsp450,
                                            tsp460,tsp470,tsp480,tsp490,tsp500,
                                            tsp510,tsp520,tsp530,tsp540,tsp550,
                                            tsp600,tsp650,tsp700,tsp750,tsp800,
                                            tsp850,tsp900,tsp950,tsp1000 }
TransmissionRLC-Discard ::=
                                     CHOICE {
    timerBasedExplicit
                                           ExplicitDiscard,
    timerBasedNoExplicit
                                           NoExplicitDiscard,
    maxDAT-Retransmissions
                                           MaxDAT-Retransmissions,
    noDiscard
                                           MaxDAT
TransmissionWindowSize ::=
                                       ENUMERATED {
                                           tw1, tw8, tw16, tw32, tw64, tw128, tw256, tw512, tw768, tw1024, tw1536, tw2047,
                                           tw2560, tw3072, tw3584, tw4095 }
UL-AM-RLC-Mode ::=
                                       SEQUENCE {
    transmissionRLC-Discard
                                           TransmissionRLC-Discard.
    transmissionWindowSize
                                           TransmissionWindowSize,
                                           TimerRST,
    timerRST
    max-RST
                                           MaxRST,
                                                                                   OPTIONAL
    pollingInfo
                                           PollingInfo
UL-CounterSynchronisationInfo ::= SEQUENCE {
   rB-WithPDCP-InfoList
                                               RB-WithPDCP-InfoList OPTIONAL,
                                                STARTList
    startList.
```

```
}
UL-LogicalChannelMapping ::=
                             SEQUENCE {
    \hbox{\tt -- TABULAR: UL-TransportChannelType contains TransportChannelIdentity as well.}
    \verb"ul-TransportChannelType" UL-TransportChannelType",
                                      LogicalChannelIdentity
    logicalChannelIdentity
                                                                         OPTIONAL,
                                       CHOICE {
   rlc-SizeList
                                           NULL,
       allSizes
       configured
                                           NULL,
       explicitList
                                           RLC-SizeExplicitList
    },
   mac-LogicalChannelPriority MAC-LogicalChannelPriority
}
UL-LogicalChannelMapping-r6 ::= SEQUENCE {
                                   CHOICÈ {
   ul-TrCH-Type
       dch-rach-usch
                                          SEOUENCE {
            -- TABULAR: UL-TransportChannelType contains TransportChannelIdentity as well.
           \verb"ul-TransportChannelType" UL-TransportChannelType",
           ul-Transportenant logicalChannelIdentity
                                               LogicalChannelIdentity
                                                                                  OPTIONAL,
                                               CHOICE {
               allSizes
                                                   NULL,
               configured
                                                   NULL,
                                                   RLC-SizeExplicitList
               explicitList
           }
        },
        e-dch
                                           SEQUENCE {
                                          LogicalChannelIdentity,
           logicalChannelIdentity
e-DCH-MAC-d-FlowIdentity
                                               E-DCH-MAC-d-FlowIdentity,
                                              DDI,
           ddi
                                               RLC-PDU-SizeList,
           rlc-PDU-SizeList
           includeInSchedulingInfo
                                               BOOLEAN
                                     MAC-LogicalChannelPriority
    mac-LogicalChannelPriority
}
UL-LogicalChannelMappingList ::= SEQUENCE {
    \mbox{--} rlc-LogicalChannelMappingIndicator shall be set to TRUE in this version
    -- of the specification
    rlc-LogicalChannelMappingIndicator BOOLEAN,
                                      SEQUENCE (SIZE (maxLoCHperRLC)) OF
   ul-LogicalChannelMapping
                                       UL-LogicalChannelMapping
UL-LogicalChannelMappingList-r6 ::= SEQUENCE {
    -- rlc-LogicalChannelMappingIndicator shall be set to TRUE in this version
    -- of the specification
    rlc-LogicalChannelMappingIndicator BOOLEAN,
    ul-LogicalChannelMapping
                                       SEQUENCE (SIZE (maxLoCHperRLC)) OF
                                           UL-LogicalChannelMapping-r6
}
UL-LogicalChannelMappings ::=
                                   CHOICE {
   oneLogicalChannel
                                      UL-LogicalChannelMapping,
                                       UL-LogicalChannelMappingList
    twoLogicalChannels
}
UL-LogicalChannelMappings-r6 ::=
                                 CHOICE {
                                   UL-LogicalChannelMapping-r6,
   oneLogicalChannel
                                       UL-LogicalChannelMappingList-r6
   twoLogicalChannels
UL-RFC3095-r4 ::=
                                   SEQUENCE {
   cid-InclusionInfo
                                       CID-InclusionInfo-r4,
   max-CID
                                       INTEGER (1..16383)
                                                                          DEFAULT 15.
    -- dummy is not used in this version of the specification and
    -- it should be ignored by the receiver.
                                       ROHC-PacketSizeList-r4
   dummy
}
UL-RLC-Mode ::=
                                   CHOICE {
   ul-AM-RLC-Mode
                                      UL-AM-RLC-Mode,
    ul-UM-RLC-Mode
                                       UL-UM-RLC-Mode,
   ul-TM-RLC-Mode
                                       UL-TM-RLC-Mode,
    spare
                                       NULL
}
```

```
TM-RLC-Mode ::= SEQUENCE {
transmissionRLC-Discard TransmissionRLC-Discard OPTIONAL,
segmentationIndication BOOLEAN
UL-TM-RLC-Mode ::=
}
   transmissionRLC-Discard SEQUENCE {
UL-UM-RLC-Mode ::=
                                 TransmissionRLC-Discard OPTIONAL
UL-TransportChannelType ::= CHOICE {
   dch
                                   TransportChannelIdentity,
                                    NULL,
   -- dummy is not used in this version of the specification and
   -- if received the UE behaviour is not specified.
   dummy
                                    NULL,
                                     TransportChannelIdentity
   usch
}
UM-RLC-DuplAvoid-Reord-Info-r6 ::= SEQUENCE {
   timer-DAR
                                     TimerDAR-r6,
   widowSize-DAR
                                     WindowSizeDAR-r6
UM-RLC-OutOSeqDelivery-Info-r6 ::= SEQUENCE {
   timer-OSD
                                     TimerOSD-r6
                                                                     OPTIONAL,
                                     WindowSizeOSD-r6
   windowSize-OSD
WindowSizeDAR-r6 ::=
                                 ENUMERATED {
                                    ws4, ws8, ws16, ws32, ws40, ws48,
                                     ws56, ws64 }
WindowSizeOSD-r6 ::=
                                 ENUMERATED {
                                    ws8, ws16, ws32, ws40, ws48,
                                     ws56, ws64 }
__ **************
      TRANSPORT CHANNEL INFORMATION ELEMENTS (10.3.5)
__ ******************
                                SEQUENCE {
AddOrReconfMAC-dFlow ::=
   mac-hs-AddReconfQueue-List
                                            MAC-hs-AddReconfQueue-List OPTIONAL,
   mac-hs-DelQueue-List
                                            MAC-hs-DelQueue-List OPTIONAL
AllowedTFC-List ::=
                                SEQUENCE (SIZE (1..maxTFC)) OF
                                     TFC-Value
AllowedTFI-List ::=
                                 SEQUENCE (SIZE (1..maxTF)) OF
                                    INTEGER (0..31)
BitModeRLC-SizeInfo ::= CHOICE {
                                    INTEGER (0..127),
   sizeType1
   -- Actual value sizeType2 = (part1 * 8) + 128 + part2
   sizeType2
                                     SEQUENCE {
                                        INTEGER (0..15),
                                         INTEGER (1..7)
                                                                      OPTIONAL
    -- Actual value sizeType3 = (part1 * 16) + 256 + part2
   sizeType3
                                     SEQUENCE {
                                        INTEGER (0..47),
      part1
                                         INTEGER (1..15)
                                                                     OPTIONAL
    -- Actual value sizeType4 = (part1 * 64) + 1024 + part2
                                    SEQUENCE {
   sizeType4
                                        INTEGER (0..62),
      part1
                                                              OPTIONAL
                                         INTEGER (1..63)
       part2
-- Actual value BLER-QualityValue = IE value * 0.1
BLER-QualityValue ::=
                                INTEGER (-63..0)
ChannelCodingType ::=
                                CHOICE {
   -- noCoding is only used for TDD in this version of the specification,
   -- otherwise it should be ignored
```

```
noCoding
                                        NULL,
    convolutional
                                        CodingRate,
    turbo
                                        NULL
}
CodingRate ::=
                                    ENUMERATED {
                                        half.
                                        third }
CommonDynamicTF-Info ::=
                                    SEQUENCE {
   rlc-Size
                                       CHOICE {
                                            SEQUENCE {
       fdd
            octetModeRLC-SizeInfoType2
                                                OctetModeRLC-SizeInfoType2
                                            SEQUENCE {
                                            CHOICÈ {
            commonTDD-Choice
                                                 BitModeRLC-SizeInfo,
                bitModeRLC-SizeInfo
                octetModeRLC-SizeInfoType1
                                                    OctetModeRLC-SizeInfoType1
        }
    },
                                    SEQUENCE (SIZE (1..maxTF)) OF
    numberOfTbSizeList
                                            NumberOfTransportBlocks,
    logicalChannelList
                                    LogicalChannelList
}
CommonDynamicTF-Info-DynamicTTI ::= SEQUENCE {
       bitModeRLC-SizeInfo
    commonTDD-Choice
                                         BitModeRLC-SizeInfo,
       octetModeRLC-SizeInfoType1
                                          OctetModeRLC-SizeInfoType1
                                   NumberOfTbSizeAndTTIList,
    numberOfTbSizeAndTTIList
    logicalChannelList
                                       LogicalChannelList
}
CommonDynamicTF-InfoList ::=
                                  SEQUENCE (SIZE (1..maxTF)) OF
                                        CommonDynamicTF-Info
\texttt{CommonDynamicTF-InfoList-DynamicTTI} \ ::= \ \texttt{SEQUENCE} \ (\texttt{SIZE} \ (\texttt{1..maxTF})) \ \texttt{OF}
                                        CommonDynamicTF-Info-DynamicTTI
CommonTransChTFS ::=
                                    SEQUENCE {
                                        CHOICE {
    tti
        tti10
                                            CommonDynamicTF-InfoList,
        tti20
                                            CommonDynamicTF-InfoList,
        tti40
                                            CommonDynamicTF-InfoList,
        tti80
                                            CommonDynamicTF-InfoList,
       dynamic
                                            CommonDynamicTF-InfoList-DynamicTTI
                                      SemistaticTF-Information
    semistaticTF-Information
}
CommonTransChTFS-LCR ::=
                                        SEQUENCE {
                                        CHOICE {
    tti
        tti5
                                            CommonDynamicTF-InfoList,
        tti10
                                            CommonDynamicTF-InfoList,
        tti20
                                            CommonDynamicTF-InfoList,
        tti40
                                            CommonDynamicTF-InfoList,
        tti80
                                            CommonDynamicTF-InfoList,
                                            CommonDynamicTF-InfoList-DynamicTTI
       dvnamic
    semistaticTF-Information
                                       SemistaticTF-Information
}
CPCH-SetID ::=
                                    INTEGER (1..maxCPCHsets)
                                    ENUMERATED {
CRC-Size ::=
                                        crc0, crc8, crc12, crc16, crc24 }
DedicatedDynamicTF-Info ::=
                                    SEQUENCE {
   rlc-Size
       bitMode
                                            BitModeRLC-SizeInfo,
       octetModeType1
                                            OctetModeRLC-SizeInfoType1
    numberOfTbSizeList
                                    SEQUENCE (SIZE (1..maxTF)) OF
   NumberOfTransportBlocks,
    logicalChannelList
                                   LogicalChannelList
```

```
DedicatedDynamicTF-Info-DynamicTTI ::= SEQUENCE {
    rlc-Size
                                          CHOICE {
        bitMode
                                               BitModeRLC-SizeInfo,
        octetModeType1
                                               OctetModeRLC-SizeInfoType1
    numberOfTbSizeAndTTIList
                                          NumberOfTbSizeAndTTIList.
                                     LogicalChannelList
    logicalChannelList
DedicatedDynamicTF-InfoList ::= SEQUENCE (SIZE (1..maxTF)) OF
                                           DedicatedDynamicTF-Info
DedicatedDynamicTF-InfoList-DynamicTTI ::= SEQUENCE (SIZE (1..maxTF)) OF
                                           DedicatedDynamicTF-Info-DynamicTTI
DedicatedTransChTFS ::=
                                      SEQUENCE {
                                           CHOICE {
    tti
        tti10
                                               DedicatedDynamicTF-InfoList,
                                               DedicatedDynamicTF-InfoList,
        tti20
                                               DedicatedDynamicTF-InfoList,
        tti40
                                               DedicatedDynamicTF-InfoList,
        tti80
                                               DedicatedDynamicTF-InfoList-DynamicTTI
        dynamic
    semistaticTF-Information
                                          SemistaticTF-Information
}
-- The maximum allowed size of DL-AddReconfTransChInfo2List sequence is 16
DL-AddReconfTransChInfo2List ::= SEQUENCE (SIZE (1..maxTrCHpreconf)) OF
                                          DL-AddReconfTransChInformation2
-- The maximum allowed size of DL-AddReconfTransChInfoList sequence is 16
{\tt DL-AddReconfTransChInfoList} ::= \\ {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxTrCHpreconf})) \ {\tt OF} \\
                                           DL-AddReconfTransChInformation
 -- The maximum allowed size of DL-AddReconfTransChInfoList-r4 sequence is 16
DL-AddReconfTransChInfoList-r4 ::= SEQUENCE (SIZE (1..maxTrCHpreconf)) OF
                                           DL-AddReconfTransChInformation-r4
-- The maximum allowed size of DL-AddReconfTransChInfoList-r5 sequence is 16
DL-AddReconfTransChInfoList-r5 ::= SEQUENCE (SIZE (1..maxTrCHpreconf)) OF
                                           DL-AddReconfTransChInformation-r5
-- ASN.1 for IE "Added or Reconfigured DL TrCH information"
-- in case of messages other than: Radio Bearer Release message and
-- Radio Bearer Reconfiguration message
{\tt DL-AddReconfTransChInformation} ::= {\tt SEQUENCE} \ \big\{
    dl-transportChannelType DL-TrCH-Type,
dl-transportChannelIdentity TransportChant
tfs-SignallingMode CHOICE {
    explicit-config
                                          TransportChannelIdentity,
                                               TransportFormatSet,
        {\tt sameAsULTrCH}
                                               UL-TransportChannelIdentity
    dch-QualityTarget
                                          QualityTarget
                                                                                  OPTIONAL.
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
    dummy
                                           TM-SignallingInfo
                                                                                  OPTIONAL
}
DL-AddReconfTransChInformation-r4 ::= SEQUENCE {
    dl-TransportChannelType DL-TrCH-Type,
dl-transportChannelIdentity TransportChan
tfs-SignallingMode CHOICE {
                                           TransportChannelIdentity,
        explicit-config
                                               TransportFormatSet,
        sameAsULTrCH
                                               UL-TransportChannelIdentity
                                                                                  OPTIONAL
    dch-QualityTarget
                                           QualityTarget
}
DL-AddReconfTransChInformation-r5 ::= SEQUENCE {
    dl-TransportChannelType
tfs-SignallingMode
                                          DL-TrCH-TypeId1-r5,
                                          CHOICE {
        explicit-config
                                               TransportFormatSet,
                                               UL-TransportChannelIdentity,
        sameAsULTrCH
        hsdsch
                                               HSDSCH-Info
    dch-QualityTarget
                                         QualityTarget
                                                                                 OPTIONAL
```

```
-- ASN.1 for IE "Added or Reconfigured DL TrCH information"
-- in case of Radio Bearer Release message and
-- Radio Bearer Reconfiguration message
DL-AddReconfTransChInformation2 ::= SEQUENCE {
                                 DL-TrCH-Type,
   dl-TransportChannelType
    transportChannelIdentity
                                        TransportChannelIdentity,
    tfs-SignallingMode
                                        CHOICE {
        explicit-config
                                            TransportFormatSet,
        {\tt sameAsULTrCH}
                                            UL-TransportChannelIdentity
    },
    qualityTarget
                                        QualityTarget
                                                                             OPTIONAL
}
DL-CommonTransChInfo ::=
                                    SEQUENCE {
   sccpch-TFCS
                                       TFCS
                                                                             OPTIONAL,
    -- modeSpecificInfo should be optional. A new version of this IE should be defined
    -- to be used in later versions of messages using this {\tt IE}
    modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
       fdd
            dl-Parameters
                                                CHOICE {
                dl-DCH-TFCS
                                                    TFCS,
                sameAsUL
                                                    NULL
            }
                                                                             OPTIONAL
        },
                                            SEQUENCE {
        tdd
            individualDL-CCTrCH-InfoList
                                               IndividualDL-CCTrCH-InfoList
                                                                             OPTIONAL
        }
    }
}
DL-CommonTransChInfo-r4 ::=
                                   SEQUENCE {
    sccpch-TFCS
                                        TFCS
                                                                             OPTIONAL.
    {\tt modeSpecificInfo}
                                        CHOICE {
       fdd
                                            SEQUENCE {
            dl-Parameters
                                                CHOICE {
                                                    SEQUENCE {
                dl-DCH-TFCS
                    tfcs
                                                        TECS
                                                                             OPTIONAL
                sameAsUL
                                                    NULL
            }
                                                                             OPTIONAL
        },
        tdd
                                            SEQUENCE {
            individualDL-CCTrCH-InfoList
                                              IndividualDL-CCTrCH-InfoList
                                                                             OPTIONAL
        OPTIONAL
DL-DeletedTransChInfoList ::=
                                  SEQUENCE (SIZE (1..maxTrCH)) OF
                                        DL-TransportChannelIdentity
DL-DeletedTransChInfoList-r5 ::=
                                    SEQUENCE (SIZE (1..maxTrCH)) OF
                                        DL-TransportChannelIdentity-r5
DL-TransportChannelIdentity ::=
                                        SEQUENCE {
    dl-TransportChannelType
                                        DL-TrCH-Type,
   dl-TransportChannelIdentity
                                        TransportChannelIdentity
}
DL-TransportChannelIdentity-r5 ::=
                                        SEQUENCE {
   dl-TransportChannelType
                                        DL-TrCH-TypeId2-r5
-- The choice 'dsch' should not be used in FDD mode, and if received the UE behaviour is unspecified
DL-TrCH-Type ::=
                                    ENUMERATED {dch, dsch}
DL-TrCH-TypeId1-r5 ::=
                                    CHOICE {
                                        TransportChannelIdentity,
    -- The choice 'dsch' should not be used in FDD mode, and if received
    -- the UE behaviour is unspecified.
                                        TransportChannelIdentity,
   dsch
   hsdsch
                                        NULL
DL-TrCH-TypeId2-r5 ::=
                                   CHOICE {
   dch
                                        TransportChannelIdentity,
```

```
-- The choice 'dsch' should not be used in FDD mode, and if received
    -- the UE behaviour is unspecified.
   dsch
                                       TransportChannelIdentity,
   hsdsch
                                       MAC-d-FlowIdentity
DRAC-ClassIdentity ::=
                                  INTEGER (1..maxDRACclasses)
DRAC-StaticInformation ::=
                                  SEQUENCE {
   transmissionTimeValidity
                                      TransmissionTimeValidity,
   timeDurationBeforeRetry
                                       TimeDurationBeforeRetry,
   drac-ClassIdentity
                                      DRAC-ClassIdentity
}
DRAC-StaticInformationList ::=
                                  SEQUENCE (SIZE (1..maxTrCH)) OF
                                      DRAC-StaticInformation
E-DCH-AddReconf-MAC-d-Flow ::= SEQUENCE {
   mac-d-FlowIdentity
                                     E-DCH-MAC-d-FlowIdentity,
   mac-d-FlowPowerOffset
                                       E-DCH-MAC-d-FlowPowerOffset
                                                                         OPTIONAL,
                                      E-DCH-MAC-d-FlowMaxRetrans
   mac-d-FlowMaxRetrans
                                                                         OPTIONAL,
   mac-d-FlowMultiplexingList
                                     E-DCH-MAC-d-FlowMultiplexingList OPTIONAL,
   transmissionGrantType
                                      CHOICE {
       non-ScheduledTransGrantInfo SEQUENCE {
                                              INTEGER (1..19982),
           maxMAC-e-PDIIContents
           ms2-NonSchedTransmGrantHARQAlloc BIT STRING (SIZE (8))
                                                                         OPTIONAL
       scheduledTransmissionGrantInfo
      OPTIONAL
}
E-DCH-AddReconf-MAC-d-FlowList ::= SEQUENCE (SIZE (1..maxE-DCHMACdFlow)) OF
                          E-DCH-AddReconf-MAC-d-Flow
E-DCH-MAC-d-FlowIdentity ::=
                                  INTEGER (0..maxE-DCHMACdFlow-1)
E-DCH-MAC-d-FlowMaxRetrans ::=
                                  INTEGER (0..15)
E-DCH-MAC-d-FlowMultiplexingList ::= BIT STRING (SIZE (maxE-DCHMACdFlow))
E-DCH-MAC-d-FlowPowerOffset ::=
                                   INTEGER (0..6)
E-DCH-TTI ::=
                                   ENUMERATED { tti2, tti10 }
ExplicitTFCS-Configuration ::=
                                   CHOICE {
   complete
                                       TFCS-ReconfAdd,
   addition
                                       TFCS-ReconfAdd.
   removal
                                       TFCS-RemovalList
   replacement
                                       SEQUENCE {
                                          TFCS-RemovalList,
       tfcsRemoval
       tfcsAdd
                                          TFCS-ReconfAdd
   }
}
GainFactor ::=
                                  INTEGER (0..15)
GainFactorInformation ::=
                                   CHOICE {
   signalledGainFactors
                                      SignalledGainFactors,
   computedGainFactors
                                      ReferenceTFC-ID
}
HSDSCH-Info ::=
                                   SEQUENCE {
                                     HARQ-Ìnfo
  harqInfo
                                                              OPTIONAL,
   addOrReconfMAC-dFlow
                                      AddOrReconfMAC-dFlow
                                                              OPTIONAL
}
HARQ-Info ::=
                                   SEQUENCE {
   numberOfProcesses
                                      INTEGÈR (1..8),
   memoryPartitioning
                                       CHOICE {
       implicit
                                          NULL,
       explicit
                                           SEQUENCE (SIZE (1..maxHProcesses)) OF
                                              HARQMemorySize
   }
}
                                   ENUMERATED {
HARQMemorySize ::=
                                       hms800, hms1600, hms2400, hms3200, hms4000,
                                       hms4800, hms5600, hms6400, hms7200, hms8000,
```

```
hms8800, hms9600, hms10400, hms11200, hms12000,
                                           hms12800, hms13600, hms14400, hms15200, hms16000,
                                           hms17600, hms19200, hms20800, hms22400, hms24000,
                                           hms25600, hms27200, hms28800, hms30400, hms32000, hms36000, hms40000, hms44000, hms48000, hms52000,
                                           hms56000, hms60000, hms64000, hms68000, hms72000,
                                           hms76000, hms80000, hms88000, hms96000, hms104000, hms112000, hms120000, hms128000, hms136000, hms144000,
                                           hms152000, hms160000, hms176000, hms192000, hms208000, hms224000, hms240000, hms256000, hms272000, hms288000,
                                           hms304000 }
                                     SEQUENCE {
IndividualDL-CCTrCH-Info ::=
    dl-TFCS-Identity
                                          TFCS-Identity,
    tfcs-SignallingMode
                                           CHOICE {
        explicit-config
                                               TFCS,
        sameAsUL
                                               TFCS-Identity
}
IndividualDL-CCTrCH-InfoList ::= SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                           IndividualDL-CCTrCH-Info
IndividualUL-CCTrCH-Info ::=
                                      SEQUENCE {
    ul-TFCS-Identity
                                           TFCS-Identity,
                                           TFCS ,
    ul-TFCS
    tfc-Subset
                                           TFC-Subset
IndividualUL-CCTrCH-InfoList ::=
                                      SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                           IndividualUL-CCTrCH-Info
LogicalChannelByRB ::=
                                      SEQUENCE {
                                           RB-Identity,
    rb-Identity
                                           INTEGER (0..1)
                                                                                OPTIONAL
    logChOfRb
LogicalChannelList ::=
                                      CHOICE {
        allSizes
                                               NULL,
                                               NULL,
        configured
        explicitList
                                               SEQUENCE (SIZE (1..15)) OF
                                                   LogicalChannelBvRB
}
MAC-d-FlowIdentityDCHandHSDSCH ::= SEQUENCE {
    dch-transport-ch-id TransportChannella
MAC-d-FlowIdentity
                                      TransportChannelIdentity,
}
                                     INTEGER (0..7)
MAC-d-FlowIdentity ::=
MAC-d-PDU-SizeInfo-List ::=
                                      SEQUENCE (SIZE(1.. maxMAC-d-PDUsizes)) OF
                                          MAC-d-PDUsizeInfo
--MAC-d-Pdu sizes need to be defined
MAC-d-PDUsizeInfo ::=
                                      SEQUENCE {
    mac-d-PDU-Size
                                           INTEGER (1..5000),
    mac-d-PDU-Index
                                           INTEGER(0..7)
}
MAC-hs-AddReconfQueue-List ::=
                                               SEQUENCE (SIZE(1..maxQueueIDs)) OF
                                         MAC-hs-AddReconfQueue
MAC-hs-AddReconfQueue ::=
                                      SEQUENCE {
   mac-hsQueueId
                                          INTEGER(0..7),
    mac-dFlowId
                                           MAC-d-FlowIdentity,
    reorderingReleaseTimer
                                           T1-ReleaseTimer,
    mac-hsWindowSize
                                          MAC-hs-WindowSize,
    mac-d-PDU-SizeInfo-List
                                          MAC-d-PDU-SizeInfo-List
                                                                                OPTIONAL
                                           SEQUENCE (SIZE(1..maxQueueIDs)) OF
MAC-hs-DelQueue-List ::=
                                           MAC-hs-DelOueue
MAC-hs-DelQueue ::=
                                     SEQUENCE {
    mac-hsQueueId
                                          INTEGER(0..7)
}
```

```
MAC-hs-WindowSize ::=
                                    ENUMERATED {
                                      mws4, mws6, mws8, mws12, mws16, mws24, mws32 }
NumberOfTbSizeAndTTIList ::=
                                   SEQUENCE (SIZE (1..maxTF)) OF SEQUENCE {
       numberOfTransportBlocks
                                           NumberOfTransportBlocks,
       transmissionTimeInterval
                                           TransmissionTimeInterval
}
MessType ::=
                                    ENUMERATED {
                                       transportFormatCombinationControl }
Non-allowedTFC-List ::=
                                    SEQUENCE (SIZE (1..maxTFC)) OF
                                       TFC-Value
NumberOfTransportBlocks ::=
                                    CHOICE {
  zero
                                      NULL,
                                       NULT.
   one
   small
                                        INTEGER (2..17),
                                       INTEGER (18..512)
   large
}
OctetModeRLC-SizeInfoType1 ::= CHOICE {
    -- Actual size = (8 * sizeType1) + 16
                                       INTEGER (0..31),
                                        SEQUENCE {
    sizeType2
       -- Actual size = (32 * part1) + 272 + (part2 * 8)
       part1
                                           INTEGER (0..23),
                                           INTEGER (1..3)
                                                                          OPTIONAL
       part2
                                       SEQUENCE {
    sizeType3
       -- Actual size = (64 * part1) + 1040 + (part2 * 8)
                                           INTEGER (0..61),
       part2
                                           INTEGER (1..7)
                                                                          OPTIONAL
    }
}
OctetModeRLC-SizeInfoType2 ::= CHOICE {
    -- Actual size = (sizeType1 * 8) + 48
                                       INTEGER (0..31),
   sizeType1
    -- Actual size = (sizeType2 * 16) + 312
                                        INTEGER (0..63),
    sizeType2
    -- Actual size = (sizeType3 *64) + 1384
                                       INTEGER (0..56)
    sizeType3
}
PowerOffsetInfoShort ::=
                                  SEQUENCE {
                                       TFC-Value,
   referenceTFC
   modeSpecificInfo
                                        CHOICE {
                                        SEQUENCE {
       fdd
        gainFactorBetaC
                                             GainFactor
       tdd
                                          NULL
   gainFactorBetaD
                                       GainFactor
}
PowerOffsetInformation ::= SEQUENCE {
    gainFactorInformation GainFactorInformation
                                    GainFactorInformation,
    -- PowerOffsetPp-m is always absent in TDD
   powerOffsetPp-m
                                       PowerOffsetPp-m
                                                                          OPTIONAL
}
PowerOffsetPp-m ::=
                                  INTEGER (-5..10)
{\tt PreDefTransChConfiguration ::= SEQUENCE \ \{}
                                   UL-CommonTransChInfo,
    ul-CommonTransChInfo
   ul-CommonTranschinto
ul-AddReconfTrChInfoList
                                       UL-AddReconfTransChInfoList,
   dl-CommonTransChInfo
                                       DL-CommonTransChInfo,
   dl-TrChInfoList
                                       DL-AddReconfTransChInfoList
}
QualityTarget ::=
                                   SEQUENCE {
  bler-QualityValue
                                      BLER-QualityValue
RateMatchingAttribute ::= INTEGER (1..hiRM)
```

```
ReferenceTFC-ID ::=
                                  INTEGER (0..3)
   ul-TransportChannelType UL-TrCF restrictedTrChIdentity TransportChannelType allowedTFT-72-1
RestrictedTrChInfo ::=
                                   UL-TrCH-Type,
                                       TransportChannelIdentity,
    allowedTFI-List
                                      AllowedTFI-List
                                                                          OPTIONAL
}
RestrictedTrChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
                                       RestrictedTrChInfo
SemistaticTF-Information ::= SEQUENCE {
    -- TABULAR: Transmission time interval has been included in the IE CommonTransChTFS.
    channelCodingType
                                      ChannelCodingType,
   rateMatchingAttribute
                                       RateMatchingAttribute,
   crc-Size
                                       CRC-Size
}
SignalledGainFactors ::= SEQUENCE {
   modeSpecificInfo
                                       CHOICE {
                                        SEQUENCE {
       fdd
          gainFactorBetaC
                                              GainFactor
       tdd
                                          NULL
    gainFactorBetaD
                                       GainFactor,
   referenceTFC-ID
                                      ReferenceTFC-ID
                                                                         OPTIONAL
}
SplitTFCI-Signalling ::= SEQUENCE {
                                   SplitType
   splitType
                                                                       OPTIONAL,
                                       INTEGER (1..10) OPTIONAL,
ExplicitTFCS-Configuration OPTIONAL,
TFCI-Field2-Information OPTIONAL
    tfci-Field2-Length
    tfci-Field1-Information
    tfci-Field2-Information
}
SplitType ::=
                                   ENUMERATED {
                                       hardSplit, logicalSplit }
T1-ReleaseTimer ::=
                                   ENUMERATED {
                                       rt10, rt20, rt30, rt40, rt50,
                                       rt60, rt70, rt80, rt90, rt100,
                                       rt120, rt140, rt160, rt200, rt300,
                                       rt400 }
TFC-Subset ::=
                                   CHOICE {
                                   TFC-Value,
   minimumAllowedTFC-Number
   non-allowedTFC-List
                                       AllowedTFC-List,
                                       Non-allowedTFC-List,
   restrictedTrChInfoList
                                      RestrictedTrChInfoList,
   fullTFCS
                                       NULL
}
                             SEQUENCE (SIZE (1.. maxTFCsub)) OF SEQUENCE {
TFC-SubsetList ::=
                                   CHOICE {
   modeSpecificInfo
       fdd
                                           NULL.
                                           SEQUENCE {
        tdd
           tfcs-ID
                                               TFCS-Identity
                                                                         OPTIONAL
       }
                                       TFC-Subset
    tfc-Subset
TFC-Value ::=
                                   INTEGER (0..1023)
TFCI-Field2-Information ::=
                                   CHOICE {
   tfci-Range
                                       TFCI-RangeList,
   explicit-config
                                       ExplicitTFCS-Configuration
}
TFCI-Range ::=
                                   SEQUENCE {
   maxTFCIField2Value
                                       INTEGER (1..1023),
                                       TFCS-InfoForDSCH
   tfcs-InfoForDSCH
}
TFCI-RangeList ::=
                                   SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
                                       TFCI-Range
```

```
TFCS ::=
                                   CHOICE {
                                      ExplicitTFCS-Configuration,
   normalTFCI-Signalling
    -- dummy is not used in this version of specification, it should
    -- not be sent and if received the UE behaviour is not specified.
                                       SplitTFCI-Signalling
}
TFCS-Identity ::=
                                   SEQUENCE {
    tfcs-ID
                                      TFCS-IdentityPlain
                                                                          DEFAULT 1,
    sharedChannelIndicator
                                       BOOLEAN
}
                                   INTEGER (1..8)
TFCS-IdentityPlain ::=
TFCS-InfoForDSCH ::=
                                   CHOICE {
                                     INTEGER (0..3),
   ctfc2bit
                                       INTEGER (0..15),
INTEGER (0..63),
   ctfc4bit
   ctfc6bit
                                       INTEGER (0..255),
   ct.fc8bit
                                       INTEGER (0..4095),
   ctfc12bit
                                       INTEGER (0..65535),
   ctfc16bit
   ctfc24bit
                                       INTEGER (0..16777215)
}
TFCS-ReconfAdd ::=
                                   SECUENCE {
                                    CHOICE{
   ctfcSize
       ctfc2Bit
                                         SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
                                            INTEGER (0..3),
                                               INIEGER (U..3),
PowerOffsetInformation
           powerOffsetInformation
        ctfc4Bit
                                           SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
                                             INTEGER (0..15),
          ctfc4
           powerOffsetInformation
                                               PowerOffsetInformation
                                                                              OPTIONAL
        ct.fc6Bit
                                           SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
           ctfc6
                                               INTEGER (0..63),
           powerOffsetInformation
                                               PowerOffsetInformation
        },
        ctfc8Bit
                                           SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
           ctfc8
                                             INTEGER (0..255),
                                               PowerOffsetInformation
           powerOffsetInformation
        },
        ctfc12Bit
                                           SEQUENCE (SIZE(1..maxTFC)) OF SEQUENCE {
           ctfc12
                                               INTEGER (0..4095),
           powerOffsetInformation
                                              PowerOffsetInformation
                                           SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
        ctfc16Bit
           ctfc16
                                              INTEGER(0..65535),
           powerOffsetInformation
                                               PowerOffsetInformation
        },
       ctfc24Bit
                                          SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
                                              INTEGER(0..16777215),
           ctfc24
           powerOffsetInformation
                                               PowerOffsetInformation
                                                                              OPTIONAL
    }
}
TFCS-Removal ::=
                                   SEQUENCE {
                                       INTEGER (0..1023)
   tfci
TFCS-RemovalList ::=
                                   SEQUENCE (SIZE (1..maxTFC)) OF
                                       TFCS-Removal
TimeDurationBeforeRetry ::=
                                   INTEGER (1..256)
TM-SignallingInfo ::=
                                   SEQUENCE {
   messType
                                       MessType,
                                       CHOICE {
    tm-SignallingMode
       mode1
                                           NULL,
                                           SEQUENCE {
       mode2
           -- in ul-controlledTrChList, TrCH-Type is always DCH
           ul-controlledTrChList
                                               UL-ControlledTrChList
        }
}
TransmissionTimeInterval ::=
                                  ENUMERATED {
```

```
tti10, tti20, tti40, tti80 }
TransmissionTimeValidity ::=
                                INTEGER (1..256)
TransportChannelIdentity ::=
                                INTEGER (1..32)
TransportChannelIdentityDCHandDSCH ::= SEQUENCE {
                       TransportChannelIdentity,
TransportChannelIdentity
   dch-transport-ch-id
   dsch-transport-ch-id
                               CHOICE {
TransportFormatSet ::=
                                 DedicatedTransChTFS,
   dedicatedTransChTFS
   commonTransChTFS
                                    CommonTransChTFS
}
TransportFormatSet-LCR ::=
                                    CHOICE {
   dedicatedTransChTFS
                                    DedicatedTransChTFS,
   commonTransChTFS-LCR
                                    CommonTransChTFS-LCR
}
-- The maximum allowed size of UL-AddReconfTransChInfoList sequence is 16
UL-AddReconfTransChInformation
-- The maximum allowed size of UL-AddReconfTransChInfoList-r6 sequence is 32
UL-AddReconfTransChInfoList-r6 ::= SEQUENCE (SIZE (1..maxTrCH)) OF
                                    UL-AddReconfTransChInformation-r6
UL-AddReconfTransChInformation ::= SEQUENCE {
   ul-TransportChannelType UL-TrCH-Type,
   transportChannelIdentity
                                    TransportChannelIdentity,
                                    TransportFormatSet
   transportFormatSet
}
UL-AddReconfTransChInformation-r6 ::= CHOICE {
       dch-usch
                                       UL-TrCH-Type,
       transportChannelIdentity
                                        TransportChannelIdentity,
                                        TransportFormatSet
       transportFormatSet
   },
                                    SEQUENCE {
   e-dch
                                        E-DCH-TTI,
       tti
       harg-Info
                                        ENUMERATED { rv0, rvtable },
       addReconf-MAC-d-FlowList
                                        E-DCH-AddReconf-MAC-d-FlowList OPTIONAL
   }
}
                                SEQUENCE {
UL-CommonTransChInfo ::=
   -- TABULAR: tfc-subset is applicable to FDD only, TDD specifies tfc-subset in individual
   -- CCTrCH Info.
   tfc-Subset
                                     TFC-Subset
                                                                      OPTIONAL,
   prach-TFCS
                                     TFCS
                                                                      OPTIONAL,
   modeSpecificInfo
                                     CHOICE {
                                        SEQUENCE {
       fdd
         ul-TFCS
                                        TFCS
       },
       tdd
                                        SEQUENCE {
           individualUL-CCTrCH-InfoList
                                         IndividualUL-CCTrCH-InfoList
                                                                      OPTIONAL
       }
   }
                                                                      OPTIONAL
}
UL-CommonTransChInfo-r4 ::=
                                SEQUENCE {
   -- TABULAR: tfc-subset is applicable to FDD only, TDD specifies tfc-subset in individual
   -- CCTrCH Info.
   tfc-Subset
                                    TFC-Subset
                                                                      OPTIONAL.
   prach-TFCS
                                     TFCS
                                                                      OPTIONAL,
   modeSpecificInfo
                                     CHOICE {
                                        SEQUENCE {
      fdd
           ul-TFCS
                                            TFCS
       tdd
                                       SEQUENCE {
           individualUL-CCTrCH-InfoList
                                          IndividualUL-CCTrCH-InfoList OPTIONAL
```

```
OPTIONAL,
                                     TFC-SubsetList
                                                                       OPTIONAL
   tfc-SubsetList
}
-- In UL-ControlledTrChList, TrCH-Type is always DCH
UL-ControlledTrChList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
                                     TransportChannelIdentity
UL-DeletedTransChInfoList ::=
                                  SEQUENCE (SIZE (1..maxTrCH)) OF
                                     UL-TransportChannelIdentity
UL-DeletedTransChInfoList-r6 ::=
                                 SEQUENCE (SIZE (1..maxTrCH)) OF
                                     UL-TransportChannelIdentity-r6
UL-TransportChannelIdentity ::=
                                  SEQUENCE {
                                  UL-TrCH-Type,
   ul-TransportChannelType
   ul-TransportChannelIdentity
                                     TransportChannelIdentity
}
UL-TransportChannelIdentity-r6 ::= CHOICE {
       ul-TransportChannelType SEQUENCE {
   dch-usch
                                     UL-TrCH-Type,
       ul-TransportChannelIdentity
                                         TransportChannelIdentity
   e-dch
                                     E-DCH-MAC-d-FlowIdentity
}
                                  ENUMERATED {dch, usch}
UL-TrCH-Type ::=
USCH-TransportChannelsInfo ::=
                                 SEQUENCE (SIZE (1..maxTrCH)) OF
                                     SEQUENCE {
                                         TransportChannelIdentity,
   usch-TransportChannelIdentity
   usch-TFS
                                         TransportFormatSet
  ************
      PHYSICAL CHANNEL INFORMATION ELEMENTS (10.3.6)
__ **************************
ACK-NACK-repetitionFactor ::=
AC-To-ASC-Mapping ::=
                                 INTEGER (0..7)
AC-To-ASC-MappingTable ::= SEQUENCE (SIZE (maxASCmap)) OF
                                     AC-To-ASC-Mapping
AccessServiceClass-FDD ::=
                                 SEQUENCE {
                                     INTEGER (0..15),
   availableSignatureStartIndex
                                     INTEGER (0..15),
   availableSignatureEndIndex
   assignedSubChannelNumber
                                     BIT STRING {
                                         b3(0),
                                         b2(1),
                                         b1(2),
                                         b0(3)
                                              (SIZE(4))
}
AccessServiceClass-TDD ::=
                                  SEQUENCE {
   channelisationCodeIndices
                                     BIT STRING {
                                         chCodeIndex7(0),
                                         chCodeIndex6(1),
                                         chCodeIndex5(2),
                                         chCodeIndex4(3),
                                         chCodeIndex3(4),
                                         chCodeIndex2(5),
                                         chCodeIndex1(6),
                                         chCodeIndex0(7)
                                         } (SIZE(8))
                                                                OPTIONAL,
   subchannelSize
                                     CHOICE {
       size1
                                         NULL,
                                         SEQUENCE {
       size2
           -- subch0 means bitstring '01' in the tabular, subch1 means bitsring '10'
           subchannels
                                             ENUMERATED { subch0, subch1 } OPTIONAL
       },
       size4
                                         SEQUENCE {
           subchannels
                                             BIT STRING {
```

```
subCh3(0),
                                                      subCh2(1),
                                                      subCh1(2),
                                                      subCh0(3)
                                                      } (SIZE(4))
                                                                      OPTIONAL
        },
        size8
                                             SEQUENCE {
                                                 BIT STRING {
            subchannels
                                                      subCh7(0),
                                                      subCh6(1),
                                                      subCh5(2),
                                                      subCh4(3),
                                                      subCh3(4),
                                                      subCh2(5),
                                                      subCh1(6),
                                                      subCh0(7)
                                                      } (SIZE(8))
                                                                      OPTIONAL
        }
    }
}
AccessServiceClass-TDD-r7 ::=
                                         SEQUENCE {
    {\tt channelisationCodeIndices}
                                         BIT STRING
                                             chCodeIndex15(0),
                                             chCodeIndex14(1),
                                             chCodeIndex13(2),
                                             chCodeIndex12(3),
                                             chCodeIndex11(4),
                                             chCodeIndex10(5),
                                             chCodeIndex9(6),
                                             chCodeIndex8(7),
                                             chCodeIndex7(8),
                                             chCodeIndex6(9),
                                             chCodeIndex5(10),
                                             chCodeIndex4(11),
                                             chCodeIndex3(12),
                                             chCodeIndex2(13),
                                             chCodeIndex1(14),
                                             chCodeIndex0(15)
                                             } (SIZE(16))
                                                                          OPTIONAL,
    subchannelSize
                                         CHOICE {
                                             NULL,
        size1
                                             SEQUENCE {
        size2
            -- subch0 means bitstring '01' in the tabular, subch1 means bitsring '10'
            subchannels
                                                 ENUMERATED { subch0, subch1 } OPTIONAL
        },
        size4
                                             SEQUENCE {
            subchannels
                                                 BIT STRING {
                                                      subCh3(0),
                                                      subCh2(1),
                                                      subCh1(2),
                                                      subCh0(3)
                                                      } (SIZE(4))
                                                                      OPTIONAL
        size8
                                             SEQUENCE {
                                                 BIT STRING {
            subchannels
                                                      subCh7(0),
                                                      subCh6(1),
                                                      subCh5(2),
                                                      subCh4(3),
                                                      subCh3(4),
                                                      subCh2(5),
                                                      subCh1(6),
                                                      subCh0(7)
                                                      } (SIZE(8))
                                                                      OPTIONAL
        size16
                                             SEQUENCE {
            subchannels
                                                 BIT STRING {
                                                     subCh15(0),
                                                      subCh14(1),
                                                      subCh13(2),
                                                      subCh12(3),
                                                      subCh11(4),
                                                      subCh10(5),
                                                      subCh9(6),
                                                      subCh8(7),
                                                      subCh7(8),
                                                      subCh6(9),
```

```
subCh5(10),
                                                    subCh4(11),
                                                    subCh3(12),
                                                    subCh2(13),
                                                    subCh1(14),
                                                    subCh0(15)
                                                    } (SIZE(16))
                                                                  OPTIONAL
        }
    }
                                    SEQUENCE {
AccessServiceClass-TDD-LCR-r4 ::=
                                        BIT STRING {
    availableSYNC-UlCodesIndics
                                            sulCodeIndex7(0),
                                            sulCodeIndex6(1),
                                            sulCodeIndex5(2),
                                            sulCodeIndex4(3),
                                            sulCodeIndex3(4),
                                            sulCodeIndex2(5),
                                            sulCodeIndex1(6),
                                            sulCodeIndex0(7)
                                            } (SIZE(8))
                                                                      OPTIONAL,
    subchannelSize
                                        CHOICE {
       size1
                                            NULL,
                                            SEQUENCE {
        size2
            -- subch0 means bitstring '01' in the tabular, subch1 means bitsring '10'.
            subchannels
                                                ENUMERATED { subch0, subch1 } OPTIONAL
        },
        size4
                                            SEQUENCE {
                                                BIT STRING {
            subchannels
                                                    subCh3(0),
                                                    subCh2(1),
                                                    subCh1(2),
                                                    subCh0(3)
                                                                       OPTIONAL
                                                    } (SIZE(4))
                                            SEQUENCE {
            subchannels
                                                BIT STRING {
                                                    subCh7(0),
                                                    subCh6(1),
                                                    subCh5(2),
                                                    subCh4(3),
                                                    subCh3(4),
                                                    subCh2(5),
                                                    subCh1(6),
                                                    subCh0(7)
                                                                       OPTIONAL
                                                    } (SIZE(8))
        }
    }
}
AdditionalPRACH-TF-and-TFCS-CCCH-IEs ::= SEQUENCE {
                              PowerOffsetInformation,
DynamicTFInformationCCCH
   powerOffsetInformation
    dynamicTFInformationCCCH
}
AdditionalPRACH-TF-and-TFCS-CCCH ::=
                                      SEQUENCE {
   additionalPRACH-TF-and-TFCS-CCCH-IEs AdditionalPRACH-TF-and-TFCS-CCCH-IEs
                                                                                    OPTIONAL
-- The order is the same as in the PRACH-SystemInformationList
AdditionalPRACH-TF-and-TFCS-CCCH-List ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                       AdditionalPRACH-TF-and-TFCS-CCCH
AICH-Info ::=
                                    SEQUENCE {
    channelisationCode256
                                       ChannelisationCode256,
    sttd-Indicator
                                        BOOLEAN,
    aich-TransmissionTiming
                                       AICH-TransmissionTiming
}
AICH-PowerOffset ::=
                                    INTEGER (-22..5)
AICH-TransmissionTiming ::=
                                    ENUMERATED {
                                       e0, e1 }
AllocationPeriodInfo ::=
                                    SEQUENCE {
                                        INTEGER (0..255),
    allocationActivationTime
```

```
allocationDuration
                                      INTEGER (1..256)
}
-- Actual value Alpha = IE value * 0.125
Alpha ::=
                                   INTEGER (0..8)
AP-AICH-ChannelisationCode ::=
                                  INTEGER (0..255)
AP-PreambleScramblingCode ::=
                                  INTEGER (0..79)
AP-Signature ::=
                                   INTEGER (0..15)
AP-Signature-VCAM ::=
                                  SEQUENCE {
   ap-Signature
                                     AP-Signature,
   availableAP-SubchannelList
                                      AvailableAP-SubchannelList OPTIONAL
                                   INTEGER (0..11)
AP-Subchannel ::=
                                       SEQUENCE {
ASCSetting-FDD ::=
    -- TABULAR: accessServiceClass-FDD is MD in tabular description
    -- Default value is previous ASC
    -- If this is the first ASC, the default value is all available signature and sub-channels
   accessServiceClass-FDD
                                           AccessServiceClass-FDD OPTIONAL
}
ASCSetting-TDD ::=
                                       SEQUENCE {
   -- TABULAR: accessServiceClass-TDD is MD in tabular description
    -- Default value is previous ASC
    -- If this is the first ASC, the default value is all available channelisation codes and
    -- all available sub-channels with subchannelSize=size1.
                                          AccessServiceClass-TDD OPTIONAL
   accessServiceClass-TDD
}
ASCSetting-TDD-r7 ::=
                                          SEOUENCE {
     - TABULAR: accessServiceClass-TDD is MD in tabular description
    -- Default value is previous ASC
    -- If this is the first ASC, the default value is all available channelisation codes and
    -- all available sub-channels with subchannelSize=size1.
   accessServiceClass-TDD
                                               AccessServiceClass-TDD-r7 OPTIONAL
}
ASCSetting-TDD-LCR-r4 ::=
                                               SEQUENCE {
    -- TABULAR: accessServiceClass-TDD-LCR is MD in tabular description
    -- Default value is previous ASC
    -- If this is the first ASC, the default value is all available SYNC_UL codes and
    -- all available sub-channels with subchannelSize=size1.
   accessServiceClass-TDD-LCR
                                              AccessServiceClass-TDD-LCR-r4 OPTIONAL
AvailableAP-Signature-VCAMList ::= SEQUENCE (SIZE (1..maxPCPCH-APsig)) OF
                                      AP-Signature-VCAM
AvailableAP-SignatureList ::= SEQUENCE (SIZE (1..maxPCPCH-APsig)) OF
                                      AP-Signature
AvailableAP-SubchannelList ::=
                                   SEQUENCE (SIZE (1..maxPCPCH-APsubCh)) OF
                                      AP-Subchannel
AvailableMinimumSF-ListVCAM ::=
                                  SEQUENCE (SIZE (1..maxPCPCH-SF)) OF
                                      AvailableMinimumSF-VCAM
AvailableMinimumSF-VCAM ::=
                                 SEQUENCE {
   minimumSpreadingFactor
                                  MinimumSpreadingFactor,
   nf-Max
                                      NF-Max,
   maxAvailablePCPCH-Number
                                      MaxAvailablePCPCH-Number,
   availableAP-Signature-VCAMList
                                     AvailableAP-Signature-VCAMList
}
AvailableSignatures ::=
                               BIT STRING {
                                   signature15(0),
                                   signature14(1),
                                   signature13(2).
                                   signature12(3),
                                   signature11(4),
                                   signature10(5),
                                   signature9(6).
                                   signature8(7),
```

```
signature7(8),
                                   signature6(9),
                                   signature5(10),
                                   signature4(11),
                                   signature3(12),
                                   signature2(13),
                                   signature1(14).
                                   signature0(15)
                                       (SIZE(16))
AvailableSubChannelNumbers ::=
                                  BIT STRING {
                                      subCh11(0),
                                      subCh10(1),
                                      subCh9(2),
                                      subCh8(3),
                                      subCh7(4),
                                      subCh6(5),
                                      subCh5(6),
                                      subCh4(7),
                                      subCh3(8),
                                      subCh2(9),
                                      subCh1(10),
                                       subCh0(11)
                                          (SIZE(12))
                                  ENUMERATED { true }
BEACON-PL-Est ::=
BurstType ::=
                                   ENUMERATED {
                                      type1, type2 }
-- Actual value Bler-Target = IE value * 0.05
                                 INTEGER (-63..0)
Bler-Target ::=
CCTrCH-PowerControlInfo ::= SEQUENCE { tfcs-Identity TFCS-I
                                 TFCS-Identity
    tfcs-Identity
                                                                        OPTIONAL,
    ul-DPCH-PowerControlInfo
                                      UL-DPCH-PowerControlInfo
}
CCTrCH-PowerControlInfo-r4 ::= SEQUENCE {
                                  TFCS-Identity
   tfcs-Identity
                                                                         OPTIONAL,
   ul-DPCH-PowerControlInfo
                                      UL-DPCH-PowerControlInfo-r4
}
TFCS-Identity
   tfcs-Identity
                                                                        OPTIONAL,
   ul-DPCH-PowerControlInfo
                                      UL-DPCH-PowerControlInfo-r5
}
\texttt{CCTrCH-PowerControlInfo-r7} ::= \\ \texttt{SEQUENCE} \ \{
                                   TFCS-Identity
   tfcs-Identity
                                                                        OPTIONAL,
   ul-DPCH-PowerControlInfo
                                      UL-DPCH-PowerControlInfo-r7
}
CD-AccessSlotSubchannel ::= INTEGER (0..11)
{\tt CD-AccessSlotSubchannelList} ::= \\ {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxPCPCH-CDsubCh})) \ OF
                                      CD-AccessSlotSubchannel
CD-CA-ICH-ChannelisationCode ::= INTEGER (0..255)
                                 INTEGER (0..79)
CD-PreambleScramblingCode ::=
CD-SignatureCode ::=
                                  INTEGER (0..15)
CD-SignatureCodeList ::=
                                  SEQUENCE (SIZE (1..maxPCPCH-CDsig)) OF
                                      CD-SignatureCode
CellAndChannelIdentity ::=
                                  SEQUENCE {
    -- burstType may be set to either value and should be ignored by the receiver for 1.28 Mcps TDD.
   burstType
                                      BurstType,
   midambleShift
                                      MidambleShiftLong,
    timeslot
                                      TimeslotNumber,
    cellParametersID
                                      CellParametersID
                                 INTEGER (0..127)
CellParametersID ::=
Cfntargetsfnframeoffset ::=
                                     INTEGER(0..255)
```

```
ChannelAssignmentActive ::=
                                   CHOICE {
   notActive
                                       NULL,
                                        AvailableMinimumSF-ListVCAM
    isActive
ChannelisationCode256 ::=
                                   INTEGER (0..255)
ChannelReqParamsForUCSM ::=
                                  SEQUENCE {
    availableAP-SignatureList
                                       AvailableAP-SignatureList,
    availableAP-SubchannelList
                                        AvailableAP-SubchannelList
                                                                           OPTIONAL
}
ClosedLoopTimingAdjMode ::=
                                    ENUMERATED {
                                       slot1, slot2 }
CodeNumberDSCH ::=
                                    INTEGER (0..255)
CodeRange ::=
                                    SEQUENCE {
                                        PDSCH-CodeMapList
   pdsch-CodeMapList
CodeWordSet ::=
                                    ENUMERATED {
                                        longCWS,
                                        mediumCWS.
                                        shortCWS.
                                        ssdtOff }
CommonTimeslotInfo ::=
                                    SEQUENCE {
   -- TABULAR: secondInterleavingMode is MD, but since it can be encoded in a single
    -- bit it is not defined as OPTIONAL.
   secondInterleavingMode SecondInterleavingMode, tfci-Coding TFCI-Coding
   tfci-Coding
                                                                           OPTIONAL,
                                        TFCI-Coding
   puncturingLimit
                                       PuncturingLimit,
   {\tt repetitionPeriodAndLength}
                                      RepetitionPeriodAndLength
                                                                           OPTIONAL
}
CommonTimeslotInfoSCCPCH ::=
                                SEQUENCE {
    -- TABULAR: secondInterleavingMode is MD, but since it can be encoded in a single
    -- bit it is not defined as OPTIONAL.
    secondInterleavingMode, SecondInterleavingMode,
   tfci-Coding
                                       TFCI-Coding
                                                                            OPTIONAL.
    puncturingLimit
                                       PuncturingLimit,
   repetitionPeriodLengthAndOffset RepetitionPeriodLengthAndOffset OPTIONAL
}
                                   INTEGER (-35..-10)
ConstantValue ::=
ConstantValueTdd ::=
                                    INTEGER (-35..10)
CPCH-PersistenceLevels ::=
                                    SEOUENCE {
    cpch-SetID
                                       CPCH-SetID,
    dynamicPersistenceLevelTF-List
                                        DynamicPersistenceLevelTF-List
                                    SEQUENCE (SIZE (1..maxCPCHsets)) OF
CPCH-PersistenceLevelsList ::=
                                        CPCH-PersistenceLevels
CPCH-SetInfo ::=
                                    SEQUENCE {
    cpch-SetID
                                       CPCH-SetID.
    transportFormatSet
                                        TransportFormatSet,
                                        TFCS,
    tfcs
    ap-PreambleScramblingCode
                                      AP-PreambleScramblingCode,
    ap-AICH-ChannelisationCode
                                       AP-AICH-ChannelisationCode,
    cd-PreambleScramblingCode
                                       CD-PreambleScramblingCode,
    cd-CA-ICH-ChannelisationCode
                                       CD-CA-ICH-ChannelisationCode,
    cd-AccessSlotSubchannelList
                                        CD-AccessSlotSubchannelList
                                                                             OPTIONAL,
    cd-SignatureCodeList
                                       CD-SignatureCodeList
                                                                            OPTIONAL,
    deltaPp-m
                                        DeltaPp-m,
   ul-DPCCH-SlotFormat
                                        UL-DPCCH-SlotFormat,
   n-StartMessage
                                        N-StartMessage,
                                       N-EOT,
    -- TABULAR: VCAM info has been nested inside ChannelAssignmentActive,
    -- which in turn is mandatory since it's only a binary choice.
   channelAssignmentActive ChannelAssignmentActive, cpch-StatusIndicationMode CPCH-StatusIndicationMode, pcpch-ChannelInfoList PCPCH-ChannelInfoList
```

```
SEQUENCE (SIZE (1..maxCPCHsets)) OF
CPCH-SetInfoList ::=
                                      CPCH-SetInfo
CPCH-StatusIndicationMode ::=
                                  ENUMERATED {
                                     pa-mode,
                                      pamsf-mode }
CQI-RepetitionFactor ::=
                                  INTEGER(1..4)
CSICH-PowerOffset ::=
                                  INTEGER (-10..5)
-- DefaultDPCH-OffsetValueFDD and DefaultDPCH-OffsetValueTDD corresponds to
-- IE "Default DPCH Offset Value" depending on the mode.
-- Actual value DefaultDPCH-OffsetValueFDD = IE value * 512
DefaultDPCH-OffsetValueFDD ::=
                                 INTEGER (0..599)
DefaultDPCH-OffsetValueTDD ::=
                                 INTEGER (0..7)
DeltaPp-m ::=
                                  INTEGER (-10..10)
DeltaCOI ::=
                                  INTEGER (0..8)
DeltaNACK ::=
                                  INTEGER (0..8)
DeltaACK ::=
                                  INTEGER (0..8)
-- Actual value DeltaSIR = IE value * 0.1
DeltaSIR ::=
                                  INTEGER (0..30)
DHS-Sync ::=
                                  INTEGER (-20..10)
DL-CCTrCh ::=
                                  SEQUENCE {
                                      TFCS-IdentityPlain
                                                                       DEFAULT 1,
   t.fcs-ID
   timeInfo
                                      TimeInfo,
   commonTimeslotInfo
                                      CommonTimeslotInfo
                                                                        OPTIONAL,
   dl-CCTrCH-TimeslotsCodes
                                     DownlinkTimeslotsCodes
                                                                        OPTIONAL,
   ul-CCTrChTPCList
                                     UL-CCTrChTPCList
                                                                        OPTIONAL
}
DL-CCTrCh-r4 ::=
                                  SEQUENCE {
                                     TFCS-IdentityPlain
   tfcs-ID
                                                                       DEFAULT 1.
                                      TimeInfo,
   timeInfo
   commonTimeslotInfo
                                      CommonTimeslotInfo
                                                                        OPTIONAL,
   tddOption
                                      CHOICE {
                                        SEQUENCE {
       tdd384
          dl-CCTrCH-TimeslotsCodes
                                             DownlinkTimeslotsCodes OPTIONAL
                                       SEQUENCE {
       tdd128
         dl-CCTrCH-TimeslotsCodes
                                            DownlinkTimeslotsCodes-LCR-r4 OPTIONAL
   ul-CCTrChTPCList
                                    UL-CCTrChTPCList OPTIONAL
}
DL-CCTrCh-r7 ::=
                                  SEQUENCE {
   tfcs-ID
                                      TFCS-IdentityPlain
                                                                         DEFAULT 1,
   timeInfo
                                      TimeInfo,
   commonTimeslotInfo
                                      CommonTimeslotInfo
                                                                         OPTIONAL.
   tddOption
                                      CHOICE {
       tdd384
                                        SEQUENCE {
         dl-CCTrCH-TimeslotsCodes
                                          DownlinkTimeslotsCodes OPTIONAL
       tdd768
                                         SEQUENCE {
                                          DownlinkTimeslotsCodes-VHCR OPTIONAL
           dl-CCTrCH-TimeslotsCodes
       tdd128
                                          SEQUENCE {
                                             DownlinkTimeslotsCodes-LCR-r4 OPTIONAL
           dl-CCTrCH-TimeslotsCodes
   ul-CCTrChTPCList
                                    UL-CCTrChTPCList OPTIONAL
}
DL-CCTrChList ::=
                                  SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                      DL-CCTrCh
DL-CCTrChList-r7 ::=
                                  SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                      DL-CCTrCh-r7
```

```
DL-CCTrChList-r4 ::=
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       DL-CCTrCh-r4
DL-CCTrChListToRemove ::=
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       TFCS-IdentityPlain
DL-CCTrChTPCList ::=
                                   SEQUENCE (SIZE (0..maxCCTrCH)) OF
                                           TFCS-Identity
DL-ChannelisationCode ::=
                                   SEQUENCE {
                                      SecondaryScramblingCode
    secondaryScramblingCode
                                                                         OPTIONAL.
                                       SF512-AndCodeNumber.
    sf-AndCodeNumber
    scramblingCodeChange
                                       ScramblingCodeChange
                                                                         OPTIONAL
}
DL-ChannelisationCodeList ::=
                                   SEQUENCE (SIZE (1..maxDPCH-DLchan)) OF
                                       DL-ChannelisationCode
DL-CommonInformation ::=
                                   SEQUENCE {
                                      DL-DPCH-InfoCommon
    dl-DPCH-InfoCommon
                                                                  OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
                                           SEQUENCE {
        fdd
           defaultDPCH-OffsetValue
                                              DefaultDPCH-OffsetValueFDD OPTIONAL,
           dpch-CompressedModeInfo
                                               DPCH-CompressedModeInfo OPTIONAL,
           tx-DiversityMode
                                              TX-DiversityMode
                                                                          OPTIONAL,
           -- dummy is not used in this version of the specification, it should
           -- not be sent and if received it should be ignored.
                                               SSDT-Information
           dummy
        tdd
                                          SEQUENCE {
           defaultDPCH-OffsetValue
                                             DefaultDPCH-OffsetValueTDD OPTIONAL
    }
}
DL-CommonInformation-r4 ::=
                                   SEQUENCE {
    dl-DPCH-InfoCommon
                                      DL-DPCH-InfoCommon-r4
                                                                OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
        fdd
                                           SEQUENCE {
           defaultDPCH-OffsetValue
                                              DefaultDPCH-OffsetValueFDD OPTIONAL,
           dpch-CompressedModeInfo
                                               DPCH-CompressedModeInfo OPTIONAL,
           tx-DiversityMode
                                              TX-DiversityMode
                                                                          OPTIONAL,
           -- dummy is not used in this version of the specification, it should
            -- not be sent and if received it should be ignored.
           dummy
                                               SSDT-Information-r4
        },
        tdd
                                           SEQUENCE {
            tddOption
                                               CHOICE {
               tdd384
                                                  NULL,
                                                   SEQUENCE {
               t.dd128
                   tstd-Indicator
                                                       BOOLEAN
           defaultDPCH-OffsetValue
                                             DefaultDPCH-OffsetValueTDD OPTIONAL
       }
    }
}
DL-CommonInformation-r5 ::=
                                   SEQUENCE {
    dl-DPCH-InfoCommon
                                       DL-DPCH-InfoCommon-r4
                                                                     OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
        fdd
                                           SEQUENCE {
           defaultDPCH-OffsetValue
                                               DefaultDPCH-OffsetValueFDD OPTIONAL,
           dpch-CompressedModeInfo
                                               DPCH-CompressedModeInfo OPTIONAL,
           tx-DiversityMode
                                               TX-DiversityMode
                                                                          OPTIONAL,
           -- dummy is not used in this version of the specification, it should
            -- not be sent and if received it should be ignored.
                                               SSDT-Information-r4
        },
                                           SEQUENCE {
           tddOption
                                              CHOICE {
               tdd384
                                                 NULL,
               tdd128
                                                   SEQUENCE {
                   tstd-Indicator
                                                       BOOLEAN
           },
```

```
DefaultDPCH-OffsetValueTDD OPTIONAL
            defaultDPCH-OffsetValue
                                         ENUMERATED { true }
    mac-hsResetIndicator
DL-CommonInformation-r6 ::= SEQUENCE {
                                    CHOICE {
    dl-dpchInfoCommon
        dpchInfoCommon
dl-DPCH-InfoCommon
dl-FDPCH-InfoCommon
                                           DL-DPCH-InfoCommon-r6,
        dl-FDPCH-InfoCommon
                                              DL-FDPCH-InfoCommon-r6
                                                                                OPTIONAL,
                                        CHOICE {
    modeSpecificInfo
           SEQUENCE {

defaultDPCH-OffsetValue Default

dpch-CompressedModeInfo DPCH-Cc

tx-DiversityMode TX-Dive
                                              DefaultDPCH-OffsetValueFDD OPTIONAL,
DPCH-CompressedModeInfo OPTIONAL,
TX-DiversityMode OPTIONAL
        tdd
                                             SEQUENCE {
             tddOption
                                                  CHOICE {
                tdd384
                                                      NULL,
                 tdd128
                                                       SEQUENCE {
                    tstd-Indicator
                                                            BOOLEAN
            defaultDPCH-OffsetValue
                                                 DefaultDPCH-OffsetValueTDD OPTIONAL
        }
    mac-hsResetIndicator ENUMERATED { true } OPTIONAL, postVerificationPeriod ENUMERATED { true } OPTIONAL
}
DL-CommonInformation-r7 ::=
                                    SEQUENCE {
                                     CHOICE {
    dl-dpchInfoCommon
                                          DL-DPCH-InfoCommon-r6,
DL-FDPCH-InfoCommon-r6
        dl-DPCH-InfoCommon
        dl-FDPCH-InfoCommon
                                                                                 OPTIONAL,
                                        CHOICE {
    modeSpecificInfo
                                          SEQUENCE {
        fdd
            defaultDPCH-OffsetValue
dpch-CompressedModeInfo
tx-DiversityMode
                                              DefaultDPCH-OffsetValueFDD OPTIONAL,
DPCH-CompressedModeInfo OPTIONAL,
                                                                                 OPTIONAL
                                                   TX-DiversityMode
        },
        t.dd
                                               SEQUENCE {
            tddOption
                                                   CHOICE {
                tdd384
                                                      NULL,
                 tdd768
                                                        NULL,
                 tdd128
                                                        SEOUENCE {
                   tstd-Indicator
                                                           BOOLEAN
             defaultDPCH-OffsetValue
                                                 DefaultDPCH-OffsetValueTDD OPTIONAL
    mac-hsResetIndicator ENUMERATED { true } OPTIONAL postVerificationPeriod ENUMERATED { true } OPTIONAL
                                                                        OPTIONAL,
}
DL-CommonInformationPost ::=
                                   SEQUENCE {
                                         DL-DPCH-InfoCommonPost
    dl-DPCH-InfoCommon
DL-CommonInformationPredef ::= SEQUENCE {
                                        DL-DPCH-InfoCommonPredef OPTIONAL
   dl-DPCH-InfoCommon
DL-CompressedModeMethod ::=
                                     ENUMERATED {
        -- dummy is not used in this version of the specification, it should
        -- not be sent and if received the UE behaviour is not specified.
                                           dummy, sf-2,
                                          higherLayerScheduling }
DL-DPCH-InfoCommon ::=
                                      SEQUENCE {
                                        CHOICE {
    cfnHandling
        initialise
                                               SEQUENCE {
             -- IE dummy is not used in this version of the specification
             -- The IE should not be sent and if received it should be ignored
                                                   Cfntargetsfnframeoffset
                                                                                          OPTIONAL
```

```
}
    },
    modeSpecificInfo
                                         CHOICE {
            SEQUENCE {

dl-DPCH-PowerControlInfo DL-DPCH-PowerControlInfo OPTIONAL,
powerOffsetPilot-pdpdch PowerOffsetPilot-pdpdch,
dl-rate-matching-restriction Dl-rate-matching-restriction OPTIONAL,
        fdd
            -- TABULAR: The number of pilot bits is nested inside the spreading factor.
            spreadingFactorAndPilot SF512-AndPilot, positionFixedOrFlexible PositionFixedOr
            positionFixedOrFlexible
                                                   PositionFixedOrFlexible,
                                                  BOOLEAN
            tfci-Existence
        },
            dl-DPCH-PowerControlInfo SEQUENCE {
        bb+
                                                 DL-DPCH-PowerControlInfo OPTIONAL
    }
}
DL-DPCH-InfoCommon-r4 ::= SEQUENCE {
    cfnHandling
                                           CHOICE {
                                            NULL,
        maintain
        initialise
                                               SEQUENCE {
             -- IE dummy is not used in this version of the specification
             -- The IE should not be sent and if received it should be ignored
            dummy
                                                   Cfntargetsfnframeoffset
                                                                                          OPTIONAL
        }
    modeSpecificInfo
                                           CHOICE {
            SEQUENCE {

dl-DPCH-PowerControlInfo DL-DPCH-PowerControlInfo OPTIONAL,
powerOffsetPilot-pdpdch PowerOffsetPilot-pdpdch,
dl-rate-matching-restriction Dl-rate-matching-restriction OPTIONAL,
        fdd
             -- TABULAR: The number of pilot bits is nested inside the spreading factor.
            spreadingFactorAndPilot SF512-AndPilot, positionFixedOrFlexible PositionFixedOrFlexible
                                                  PositionFixedOrFlexible,
             tfci-Existence
                                                   BOOLEAN
        },
                                             SEQUENCE {
        tdd
            dl-DPCH-PowerControlInfo
                                                  DL-DPCH-PowerControlInfo OPTIONAL
-- The IE mac-d-HFN-initial-value should be absent in the RRCConnectionSetup-r4-IEs or
-- RRCConnectionSetup-r5-IEs or HandoverToUTRANCommand-r4-IEs or HandoverToUTRANCommand-r5-IEs and
-- if the IE is included, the general error handling for conditional IEs applies.
    mac-d-HFN-initial-value
                                         MAC-d-HFN-initial-value
}
DL-DPCH-InfoCommon-r6 ::=
                                          SEQUENCE {
                                              CHOICE {
   cfnHandling
                                                 SEQUENCE {
        maintain
                                                       TimingMaintainedSynchInd
            timingmaintainedsynchind
                                                                                             OPTIONAL
        initialise
                                                   NULL
    },
    modeSpecificInfo
                                               CHOICE {
                                              SEQUENCE {
        fdd
            dl-DPCH-PowerControlInfo
powerOffsetPilot-pdpdch
dl-rate-matching-restriction
                                                   DL-DPCH-PowerControlInfo OPTIONAL,
                                                       PowerOffsetPilot-pdpdch,
                                                      powerOffsetPifot-papach,
Dl-rate-matching-restriction OPTIONAL,
             -- TABULAR: The number of pilot bits is nested inside the spreading factor.
             spreadingFactorAndPilot
                                                       SF512-AndPilot,
                                                       PositionFixedOrFlexible,
            positionFixedOrFlexible
             tfci-Existence
                                                       BOOLEAN
                                             SEQUENCE {
            dl-DPCH-PowerControlInfo
                                              DL-DPCH-PowerControlInfo
    -- The IE \max-d-HFN-initial-value should be absent in the RRCConnectionSetup and the
    -- HandoverToUTRANCommand messages. If the IE is included, the general error handling
    -- for conditional IEs applies.
                                          MAC-d-HFN-initial-value
    mac-d-HFN-initial-value
                                                                                 OPTIONAL
}
DL-DPCH-InfoCommonPost ::= SEQUENCE { dl-DPCH-PowerControlInfo DL-DPCH
                                     DL-DPCH-PowerControlInfo
                                                                                    OPTIONAL
```

```
DL-DPCH-InfoCommonPredef ::=
                              SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
        fdd
                                          SEQUENCE {
             -- TABULAR: The number of pilot bits is nested inside the spreading factor.
            spreadingFactorAndPilot SF512-AndPilot,
                                                PositionFixedOrFlexible, BOOLEAN
            positionFixedOrFlexible
            tfci-Existence
        },
        tdd
                                             SEQUENCE {
           commonTimeslotInfo
                                                CommonTimeslotInfo
}
DL-DPCH-InfoPerRL ::=
                                    CHOICE {
                                     SEQUENCE {
                                        PCPICH-UsageForChannelEst,
DPCH-FrameOffset,
        pCPICH-UsageForChannelEst
        dpch-FrameOffset
                                          SecondaryCPICH-Info
DL-ChannelisationCodeList,
        secondaryCPICH-Info
                                                                              OPTIONAL,
        dl-ChannelisationCodeList
                                            TPC-CombinationIndex,
        tpc-CombinationIndex
         -- dummy is not used in this version of the specification, it should
        -- not be sent and if received it should be ignored.
                                             SSDT-CellIdentity
        dummy
                                                                              OPTIONAL.
                                             ClosedLoopTimingAdjMode
        closedLoopTimingAdjMode
                                                                              OPTIONAL
       dl-CCTrChListToEstablish DL-CCTrdListToRemove
                                        DL-CCTrChList
                                                                             OPTIONAL.
                                             DL-CCTrChListToRemove
                                                                              OPTIONAL
}
DL-DPCH-InfoPerRL-r4 ::=
                                   CHOICE {
                                     SEQUENCE {
                                       PCPICH-UsageForChannelEst,
DPCH-FrameOffset,
        pCPICH-UsageForChannelEst
        dpch-FrameOffset
                                     SecondaryCPICH-Info
DL-ChannelisationCodeList,
TPC-CombinationIndex,
        secondaryCPICH-Info
                                                                             OPTIONAL,
        dl-ChannelisationCodeList
        tpc-CombinationIndex
        -- dummy is not used in this version of the specification, it should
        -- not be sent and if received it should be ignored.
                                             SSDT-CellIdentity OPTIONAL, ClosedLoopTimingAdjMode OPTIONAL
        dummy
        closedLoopTimingAdjMode
    },
                                       SEQUENCE {
    t.dd
        dl-CCTrChListToEstablish
                                        DL-CCTrChList-r4
                                                                             OPTIONAL.
                                             DL-CCTrChListToRemove
        dl-CCTrChListToRemove
                                                                             OPTIONAL
    }
}
DL-DPCH-InfoPerRL-r5 ::= CHOICE {
        SEQUENCE {

pCPICH-UsageForChannelEst pCPICU

dpch-FrameOffca:
                                        PCPICH-UsageForChannelEst,
DPCH-FrameOffset,
        dpch-FrameOffset
secondaryCPICH-Info
dl-ChannelisationCodeList
                                         SecondaryCPICH-Info
DL-ChannelisationCodeLis
TPC-CombinationIndex,
                                                                             OPTIONAL,
                                             DL-ChannelisationCodeList,
        tpc-CombinationIndex
                                                                      OPTIONAL,
                                             PowerOffsetTPC-pdpdch
        powerOffsetTPC-pdpdch
        -- dummy is not used in this version of the specification, it should
        -- not be sent and if received it should be ignored.
        dummy
                                             SSDT-CellIdentity
        closedLoopTimingAdjMode
                                             ClosedLoopTimingAdjMode
                                                                              OPTIONAL
        dl-CCTrChListToEstablish DL-CCTrdListToRemove
    tdd.
                                        DL-CCTrChList-r4
                                                                             OPTIONAL,
                                             DL-CCTrChListToRemove
                                                                              OPTIONAL
    }
}
DL-DPCH-InfoPerRL-r6 ::=
    fdd
                                      SEQUENCE {
                                        PCPICH-UsageForChannelEst,
DPCH-FrameOffset,
        pCPICH-UsageForChannelEst
        dpch-FrameOffset
secondaryCPICH-Info
                                     SecondaryCPICH-Info
DL-ChannelisationCodeList,
TPC-Combination
                                                                              OPTIONAL,
        dl-ChannelisationCodeList
        tpc-CombinationIndex
                                            TPC-CombinationIndex,
        powerOffsetTPC-pdpdch
                                             PowerOffsetTPC-pdpdch
                                                                             OPTIONAL,
```

```
closedLoopTimingAdjMode
                                               ClosedLoopTimingAdjMode
                                                                                     OPTIONAL
        dl-CCTrChListToEstablish dl-CCTrChListToRemove
    tdd
                                            DL-CCTrChList-r4
                                                                                     OPTIONAL,
                                                 DL-CCTrChListToRemove
                                                                                      OPTIONAL
}
DL-DPCH-InfoPerRL-r7 ::=
                                      CHOICE {
                                         SEQUENCE {
    fdd
                                             PCPICH-UsageForChannelEst,
         pCPICH-UsageForChannelEst
                                                DPCH-FrameOffset,
SecondaryCPICH-Info
         dpch-FrameOffset
secondaryCPICH-Info
                                                                                      OPTIONAL,
         secondaryCPICH-INFO
dl-ChannelisationCodeList
tpc-CombinationIndex
powerOffsetTPC-pdpdch
closedLoopTimingAdjMode

SecondaryCPICH-INFO
SecondaryCPICH-INFO
SecondaryCPICH-INFO
SecondaryCPICH-INFO
SecondaryCPICH-INFO
ClosedLoopTimingAdjMode

DL-ChannelisationCodeList,
TPC-CombinationIndex,
PowerOffsetTPC-pdpdch
ClosedLoopTimingAdjMode
                                                                                     OPTIONAL,
                                                                                     OPTIONAL
                                           SEQUENCE {
    t.dd
         dl-CCTrChListToEstablish
                                                 DL-CCTrChList-r7
                                                                                     OPTIONAL,
                                                 DL-CCTrChListToRemove
         dl-CCTrChListToRemove
                                                                                      OPTIONAL
}
                                      SEQUENCE {
DI.-FDPCH-InfoPerRI.-r6 ::=
    pCPICH-UsageForChannelEst fdpch-FrameOffset secondaryCPICH-Info
                                       PCPICH-UsageForChannelEst, DPCH-FrameOffset,
    secondaryCPICH-Info SecondaryCPICH-Info OPTIONAL, secondaryScramblingCode SecondaryScramblingCode OPTIONAL, dl-ChannelisationCode INTEGER (0..255), tpc-CombinationIndex TPC-CombinationIndex
        DL-DPCH-InfoPerRL-PostFDD ::=
}
DL-DPCH-InfoPerRL-PostTDD ::=
                                                 SEOUENCE {
                                                    DownlinkTimeslotsCodes
    dl-DPCH-TimeslotsCodes
DL-DPCH-InfoPerRL-PostTDD-LCR-r4 ::= SEQUENCE {
   dl-CCTrCH-TimeslotsCodes
                                                      DownlinkTimeslotsCodes-LCR-r4
DL-DPCH-PowerControlInfo ::= SEQUENCE {
    modeSpecificInfo
                                                 CHOICE {
                                                      SEQUENCE {
         fdd
             dpc-Mode
                                                         DPC-Mode
         tdd
                                                      SEQUENCE {
             tpc-StepSizeTDD
                                                          TPC-StepSizeTDD OPTIONAL
         }
    }
DL-FDPCH-InfoCommon-r6 ::= cfnHandling
                                        SEQUENCE {
                                            CHOICE {
         maintain
                                               SEQUENCE {
            timingmaintainedsynchind
                                                      TimingMaintainedSynchInd
                                                                                              OPTIONAL
                                                 NULL
         initialise
    dl-FDPCH-PowerControlInfo
                                           DL-DPCH-PowerControlInfo
                                                                                    OPTIONAL.
-- Actual value dl-FDPCH-TPCcommandErrorRate = IE value * 0.01
-- dl-FDPCH-TPCcommandErrorRate values 11..16 are spare and shall not be used in this version of
-- the protocol
    dl-FDPCH-TPCcommandErrorRate INTEGER (1..16) OPTIONAL
DL-FrameType ::=
                                         ENUMERATED {
                                             dl-FrameTypeA, dl-FrameTypeB }
DL-HSPDSCH-Information ::=
    hs-scch-Info
                                         HS-SCCH-Info
                                                          OPTIONAL.
    measurement-feedback-Info
                                        Measurement-Feedback-Info OPTIONAL,
```

```
modeSpecificInfo
                                   CHOICE {
    tdd
                                   CHOICE {
                                           SEQUENCE {
               dl-HSPDSCH-TS-Configuration DL-HSPDSCH-TS-Configuration
                                                                          OPTIONAL
           tdd128
                                           SEQUENCE {
               hs-PDSCH-Midamble-Configuration-tdd128
                                                               OPTIONAL
                       HS-PDSCH-Midamble-Configuration-TDD128
        fdd
                                   NULL
    }
}
DL-HSPDSCH-Information-r6 ::=
                              SEQUENCE {
                                  HS-SCCH-Info-r6
   hs-scch-Info
                                                                           OPTIONAL,
    measurement-feedback-Info
                                   Measurement-Feedback-Info
                                                                           OPTIONAL,
    modeSpecificInfo
                                   CHOICE {
                                       CHOICE {
        t.dd
                                         SEQUENCE {
           tdd384
               dl-HSPDSCH-TS-Configuration DL-HSPDSCH-TS-Configuration OPTIONAL
           tdd128
                                           SEQUENCE {
               hs-PDSCH-Midamble-Configuration-tdd128
                       HS-PDSCH-Midamble-Configuration-TDD128
                                                                         OPTIONAL
        fdd
                                   NULL
    }
}
DL-HSPDSCH-Information-r7 ::=
                              SEQUENCE {
   hs-scch-Info
                                   HS-SCCH-Info-r7
                                                                          OPTIONAL,
   measurement-feedback-Info
                                   Measurement-Feedback-Info
                                                                           OPTIONAL,
   modeSpecificInfo
                                   CHOICE {
                                   CHOICE {
       tdd
                                         SEQUENCE {
               dl-HSPDSCH-TS-Configuration DL-HSPDSCH-TS-Configuration OPTIONAL
                                           SEQUENCE {
               dl-HSPDSCH-TS-Configuration
                                               DL-HSPDSCH-TS-Configuration-VHCR
                                                                                   OPTIONAL
           tdd128
                                           SEQUENCE {
               hs-PDSCH-Midamble-Configuration-tdd128
                      HS-PDSCH-Midamble-Configuration-TDD128
                                                                                   OPTIONAL
        fdd
                                   NIII.T.
    }
}
-- The IE 'DL-HSPDSCH-TS-Configuration' applies to tdd-384 REL-5 onward
{\tt DL-HSPDSCH-TS-Configuration} \ ::= \ \ {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxTS-1})) \ {\tt OF}
                                       SEQUENCE {
    timeslot
                                           TimeslotNumber,
   midambleShiftAndBurstType
                                           MidambleShiftAndBurstType-DL
-- The IE 'DL-HSPDSCH-TS-Configuration-VHCR' applies to tdd-768 REL-7 onward
DL-HSPDSCH-TS-Configuration-VHCR ::= SEQUENCE (SIZE (1..maxTS-1)) OF
                                       SEQUENCE {
                                           TimeslotNumber,
   midambleShiftAndBurstType
                                           MidambleShiftAndBurstType-DL-VHCR
}
DL-InformationPerRL ::=
                                   SEQUENCE {
                                       CHOICE {
   modeSpecificInfo
       fdd
                                         SEQUENCE {
           primaryCPICH-Info
                                               PrimaryCPICH-Info,
           -- dummy1 and dummy 2 are not used in this version of specification, they should
           -- not be sent and if received they should be ignored.
           dummv1
                                               PDSCH-SHO-DCH-Info
                                                                           OPTIONAL.
                                               PDSCH-CodeMapping
                                                                           OPTIONAL
           dummy2
        tdd
                                           PrimaryCCPCH-Info
    dl-DPCH-InfoPerRL
                                      DL-DPCH-InfoPerRL
                                                                          OPTIONAL.
    -- dummy is not used in this version of the specification, it should
```

```
-- not be sent and if received it should be ignored.
                                        SCCPCH-InfoForFACH
    dummy
                                                                            OPTIONAL
}
DL-InformationPerRL-r4 ::=
                                  SEQUENCE {
                                    CHOICE {
   modeSpecificInfo
                                       SEQUENCE {
        fdd
            primaryCPICH-Info
                                                PrimaryCPICH-Info,
            -- dummy1 and dummy 2 are not used in this version of specification, they should
            -- not be sent and if received they should be ignored.
            dummy1
                                                PDSCH-SHO-DCH-Info
                                                PDSCH-CodeMapping
                                                                            OPTIONAL
            dummv2
        },
        tdd
                                            PrimaryCCPCH-Info-r4
    dl-DPCH-InfoPerRL
                                       DL-DPCH-InfoPerRL-r4
                                                                            OPTIONAL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                                        hould be ignored.
SCCPCH-InfoForFACH-r4
                                                                           OPTIONAL.
    dummy
    cell-id
                                        CellIdentity
                                                                             OPTIONAL
}
DL-InformationPerRL-r5 ::= SEQUENCE {
                               CHOICE {

SEQUENCE {

PrimaryCPICH-Info,
    modeSpecificInfo
            primaryCPICH-Info
            -- dummy1 and dummy 2 are not used in this version of specification, they should
            -- not be sent and if received they should be ignored.
                                                PDSCH-SHO-DCH-Info OPTIONAL,
PDSCH-CodeMapping OPTIONAL,
BOOLEAN
            dummy2
            servingHSDSCH-RL-indicator
                                                BOOLEAN
        },
        tdd
                                           PrimaryCCPCH-Info-r4
    dl-DPCH-InfoPerRL
                                      DL-DPCH-InfoPerRL-r5
                                                                            OPTIONAL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                                        should be ignored.

SCCPCH-InfoForFACH-r4
                                                                            OPTIONAL.
    dummy
    cell-id
                                        CellIdentity
                                                                             OPTIONAL
}
DL-InformationPerRL-r5bis ::= SEQUENCE {
                                   CHOICE {
    modeSpecificInfo
                                        SEQUENCE {
           primaryCPICH-Info
                                                PrimaryCPICH-Info,
            -- dummy1 and dummy 2 are not used in this version of specification, they should
            -- not be sent and if received they should be ignored.
            dummy1
                                                PDSCH-SHO-DCH-Info
                                                                            OPTIONAL,
            dummy2
                                                 PDSCH-CodeMapping
        },
        tdd
                                            PrimaryCCPCH-Info-r4
    dl-DPCH-InfoPerRL
                                        DL-DPCH-InfoPerRL-r5
                                                                            OPTIONAL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                                        hould be ignored.
SCCPCH-InfoForFACH-r4
    dummy
                                                                           OPTIONAL.
    cell-id
                                                                            OPTIONAL
                                        CellIdentity
}
DL-InformationPerRL-r6 ::= SEQUENCE {
   modeSpecificInfo CHOICE {
    fdd SEQUENCE {
        primaryCPICH-Info
                                       SEQUENCE {
           primaryCPICH-Info PrimaryCPICH-Info, servingHSDSCH-RL-indicator BOOLEAN, servingEDCH-RL-indicator BOOLEAN
           primaryCPICH-Info
        tdd
                                           PrimaryCCPCH-Info-r4
    dl-dpchInfo
                                        CHOICE {
        dl-DPCH-InfoPerRL
                                         DL-DPCH-InfoPerRL-r6,
        dl-FDPCH-InfoPerRL
                                            DL-FDPCH-InfoPerRL-r6
                                                                             OPTIONAL,
    e-AGCH-Information
                                      E-AGCH-Information
                                                                             OPTIONAL,
                                        CHOICE {
    e-HICH-Info
       e-HICH-Information
                                         E-HICH-Information,
        releaseIndicator
                                            NULL
       OPTIONAL.
    e-RGCH-Info
                                        CHOICE {
```

```
e-RGCH-Information
                                         E-RGCH-Information,
       releaseIndicator
                                          NULL
       OPTIONAL,
   cell-id
                                     CellIdentity
                                                                        OPTIONAL
DL-InformationPerRL-r7 ::= SEQUENCE {
                                     CHOICE {
   modeSpecificInfo
       fdd
                                         SEQUENCE {
           primaryCPICH-Info
                                             PrimaryCPICH-Info,
           servingHSDSCH-RL-indicator
                                              BOOLEAN,
           servingEDCH-RL-indicator
                                            BOOLEAN
       tdd
                                         PrimaryCCPCH-Info-r7
   dl-dpchInfo
                                     CHOICE {
                                          DL-DPCH-InfoPerRL-r7,
       dl-DPCH-InfoPerRI
       dl-FDPCH-InfoPerRL
                                          DL-FDPCH-InfoPerRL-r6
                                                                        OPTIONAL.
   e-AGCH-Information
                                      E-AGCH-Information
                                                                        OPTIONAL,
                                      CHOICE {
   e-HICH-Info
       e-HICH-Information
                                          E-HICH-Information,
       releaseIndicator
                                          NULL
      OPTIONAL,
   e-RGCH-Info
                                     CHOICE {
       e-RGCH-Information
                                        E-RGCH-Information,
       releaseIndicator
                                         NULL
       OPTIONAL,
   cell-id
                                     CellIdentity
                                                                        OPTIONAL
}
DL-InformationPerRL-List ::=
                                 SEQUENCE (SIZE (1..maxRL)) OF
                                      DL-InformationPerRL
DL-InformationPerRL-List-r4 ::=
                                  SEQUENCE (SIZE (1..maxRL)) OF
                                      DL-InformationPerRL-r4
DL-InformationPerRL-List-r5 ::=
                                  SEOUENCE (SIZE (1..maxRL)) OF
                                      DL-InformationPerRL-r5
DL-InformationPerRL-List-r6 ::=
                                  SEQUENCE (SIZE (1..maxRL)) OF
                                     DL-InformationPerRL-r6
DL-InformationPerRL-List-r5bis ::=
                                      SEQUENCE (SIZE (1..maxRL)) OF
                                          DL-InformationPerRL-r5bis
                                 SEQUENCE (SIZE (1..maxRL)) OF
DL-InformationPerRL-List-r7 ::=
                                      DL-InformationPerRL-r7
DL-InformationPerRL-ListPostFDD ::= SEQUENCE (SIZE (1..maxRL)) OF
                                      DL-InformationPerRL-PostFDD
                                  SEQUENCE {
DL-InformationPerRL-PostFDD ::=
          primaryCPICH-Info
                                              PrimaryCPICH-Info,
   dl-DPCH-InfoPerRL
                                      DL-DPCH-InfoPerRL-PostFDD
}
DL-InformationPerRL-PostTDD ::= SEQUENCE {
   primaryCCPCH-Info
                                     PrimaryCCPCH-InfoPost,
                                      DL-DPCH-InfoPerRL-PostTDD
   dl-DPCH-InfoPerRI
}
DL-InformationPerRL-PostTDD-LCR-r4 ::= SEQUENCE {
   primaryCCPCH-Info
                                      PrimaryCCPCH-InfoPostTDD-LCR-r4,
   dl-DPCH-InfoPerRL
                                      DL-DPCH-InfoPerRL-PostTDD-LCR-r4
DL-PDSCH-Information ::=
                                 SEOUENCE {
   -- dummy1 and dummy 2 are not used in this version of specification, it should
   -- not be sent and if received it should be ignored.
                                      PDSCH-SHO-DCH-Info
                                                                        OPTIONAL,
                                                                        OPTIONAL
   dummy2
                                      PDSCH-CodeMapping
}
Dl-rate-matching-restriction ::= SEQUENCE {
   restrictedTrCH-InfoList
                                     RestrictedTrCH-InfoList
                                                                       OPTIONAL
}
```

```
DL-TPC-PowerOffsetPerRL ::=
                               SEQUENCE {
                                            PowerOffsetTPC-pdpdch
       powerOffsetTPC-pdpdch
                                                                             OPTIONAL
}
-- NOTE: The radio links in the following list have a one-to-one mapping with the
-- radio links in the message.
DL-TPC-PowerOffsetPerRL-List ::=
                                   SEQUENCE (SIZE (1..maxRL)) OF
                                        DL-TPC-PowerOffsetPerRL
DL-TS-ChannelisationCode ::=
                                    ENUMERATED {
                                        cc16-1, cc16-2, cc16-3, cc16-4,
                                        cc16-5, cc16-6, cc16-7, cc16-8,
                                        cc16-9, cc16-10, cc16-11, cc16-12,
                                        cc16-13, cc16-14, cc16-15, cc16-16 }
                                    ENUMERATED {
DL-TS-ChannelisationCode-VHCR ::=
                                        cc32-1, cc32-2, cc32-3, cc32-4,
                                        cc132-5, cc32-6, cc32-7, cc32-8,
                                        cc32-9, cc32-10, cc32-11, cc32-12,
                                        cc32-13, cc32-14, cc32-15, cc32-16,
                                        cc32-17, cc32-18, cc32-19, cc32-20,
                                        cc32-21, cc32-22, cc32-23, cc32-24,
                                        cc32-25, cc32-26, cc32-27, cc32-28,
                                        cc32-29, cc32-30, cc32-31, cc32-32 }
DL-TS-ChannelisationCodesShort ::= SEQUENCE {
    codesRepresentation
                                        CHOICE {
                                            SEQUENCE {
        consecutive
           firstChannelisationCode
                                                DL-TS-ChannelisationCode,
                                                DL-TS-ChannelisationCode
            lastChannelisationCode
        bitmap
                                            BIT STRING {
                                                chCode16-SF16(0),
                                                chCode15-SF16(1),
                                                 chCode14-SF16(2),
                                                 chCode13-SF16(3),
                                                chCode12-SF16(4),
                                                 chCode11-SF16(5),
                                                chCode10-SF16(6),
                                                 chCode9-SF16(7),
                                                chCode8-SF16(8),
                                                chCode7-SF16(9),
                                                 chCode6-SF16(10),
                                                 chCode5-SF16(11),
                                                 chCode4-SF16(12),
                                                chCode3-SF16(13),
                                                chCode2-SF16(14),
                                                 chCode1-SF16(15)
                                                    (SIZE (16))
    }
}
DL-TS-ChannelisationCodesShort-VHCR ::= SEQUENCE {
    codesRepresentation
                                            SEQUENCE {
        consecutive
            firstChannelisationCode
                                                DL-TS-ChannelisationCode-VHCR,
            lastChannelisationCode
                                                DL-TS-ChannelisationCode-VHCR
        bitmap
                                            BIT STRING {
                                                chCode32-SF32(0),
                                                 chCode31-SF32(1),
                                                 chCode30-SF32(2),
                                                chCode29-SF32(3),
                                                 chCode28-SF32(4),
                                                chCode27-SF32(5),
                                                 chCode26-SF32(6),
                                                 chCode25-SF32(7),
                                                chCode24-SF32(8),
                                                 chCode23-SF32(9).
                                                chCode22-SF32(10),
                                                 chCode21-SF32(11),
                                                chCode20-SF32(12),
                                                chCode19-SF32(13),
                                                 chCode18-SF32(14),
                                                 chCode17-SF32(15),
                                                chCode16-SF32(16),
                                                 chCode15-SF32(17).
                                                chCode14-SF32(18),
```

```
chCode13-SF32(19),
                                                 chCode12-SF32(20),
                                                 chCode11-SF32(21),
                                                 chCode10-SF32(22),
                                                 chCode9-SF32(23),
                                                 chCode8-SF32(24),
                                                 chCode7-SF32(25),
                                                 chCode6-SF32(26),
                                                 chCode5-SF32(27),
                                                 chCode4-SF32(28),
                                                 chCode3-SF32(29),
                                                 chCode2-SF32(30).
                                                 chCode1-SF32(31)
                                                     (SIZE (32))
                                     SEQUENCE {
DownlinkAdditionalTimeslots ::=
   parameters
                                         CHOICE {
        sameAsLast
                                             SEQUENCE {
            timeslotNumber
                                                 TimeslotNumber
        },
        newParameters
                                             SEQUENCE {
            individualTimeslotInfo
                                                 IndividualTimeslotInfo,
            dl-TS-ChannelisationCodesShort
                                                 DL-TS-ChannelisationCodesShort
    }
}
DownlinkAdditionalTimeslots-VHCR ::= SEQUENCE {
    parameters
                                         CHOICE {
        sameAsLast
                                             SEQUENCE {
            timeslotNumber
                                                 TimeslotNumber
        },
        newParameters
                                             SEQUENCE {
            individualTimeslotInfo
                                                 IndividualTimeslotInfo-VHCR,
            dl-TS-ChannelisationCodesShort
                                                 DL-TS-ChannelisationCodesShort-VHCR
    }
}
DownlinkAdditionalTimeslots-LCR-r4 ::= SEQUENCE {
    parameters
                                         CHOICE {
        sameAsLast
                                             SEQUENCE {
            {\tt timeslotNumber}
                                                 TimeslotNumber-LCR-r4
        newParameters
                                             SECUENCE {
            individualTimeslotInfo
                                                 IndividualTimeslotInfo-LCR-r4,
            dl-TS-ChannelisationCodesShort
                                                 DL-TS-ChannelisationCodesShort
        }
    }
DownlinkTimeslotsCodes ::=
                                SEQUENCE {
    firstIndividualTimeslotInfo
                                         IndividualTimeslotInfo,
    dl-TS-ChannelisationCodesShort
                                         DL-TS-ChannelisationCodesShort,
    moreTimeslots
                                         CHOICE {
        noMore
                                             NULL,
        additionalTimeslots
                                             CHOICE {
                                                 INTEGER (1..maxTS-1),
            consecutive
                                                 SEQUENCE (SIZE (1..maxTS-1)) OF
            timeslotList
                                                     DownlinkAdditionalTimeslots
}
DownlinkTimeslotsCodes-VHCR ::=
                                     SEQUENCE {
    {\tt firstIndividualTimeslotInfo}
                                         IndividualTimeslotInfo-VHCR,
    dl-TS-ChannelisationCodesShort
                                         DL-TS-ChannelisationCodesShort,
    moreTimeslots
                                         CHOICE {
        noMore
                                             NULL,
        additionalTimeslots
                                             CHOICE {
                                                 INTEGER (1..maxTS-1),
            consecutive
                                                 SEQUENCE (SIZE (1..maxTS-1)) OF
            timeslotList
                                                     DownlinkAdditionalTimeslots-VHCR
        }
    }
```

```
{\tt DownlinkTimeslotsCodes-LCR-r4} ::= \quad {\tt SEQUENCE} \ \{
   dl-TS-ChannelisationCodesShort DL-TS-ChannelisationCodesShort moreTimeslots
                                       DL-TS-ChannelisationCodesShort,
                                       CHOICE {
                                           NULL,
       additionalTimeslots
                                           CHOICE {
                                                INTEGER (1..maxTS-LCR-1),
           consecutive
           timeslotList
                                                SEQUENCE (SIZE (1..maxTS-LCR-1)) OF
                                                    DownlinkAdditionalTimeslots-LCR-r4
       }
    }
}
DPC-Mode ::=
                                    ENUMERATED {
                                       singleTPC.
                                        tpcTripletInSoft }
-- Actual value DPCCH-PowerOffset = IE value * 2
DPCCH-PowerOffset ::=
                                   INTEGER (-82..-3)
-- Actual value DPCCH-PowerOffset2 = 2 + (IE value * 4)
DPCCH-PowerOffset2 ::=
                                   INTEGER (-28..-13)
DPCH-CompressedModeInfo ::= SEQUENCE {
   tgp-SequenceList
                                     TGP-SequenceList
{\tt DPCH-CompressedModeStatusInfo} ::= {\tt SEQUENCE} \ \{
   tgps-Reconfiguration-CFN TGPS-Reconfiguration-CFN, tgp-SequenceShortList SEQUENCE (SIZE (1..ma
                                           SEQUENCE (SIZE (1..maxTGPS)) OF
                                            TGP-SequenceShort
}
-- Actual value DPCH-FrameOffset = IE value * 256
DPCH-FrameOffset::=
                                   INTEGER (0..149)
DSCH-Mapping ::=
                                    SEQUENCE {
   maxTFCI-Field2Value
                                       MaxTFCI-Field2Value,
   spreadingFactor
                                       SF-PDSCH,
   codeNumber
                                       CodeNumberDSCH,
   multiCodeInfo
                                       MultiCodeInfo
}
DSCH-MappingList ::=
                                    SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
                                        DSCH-Mapping
DSCH-RadioLinkIdentifier ::=
                                   INTEGER (0..511)
DSCH-TransportChannelsInfo ::=
                                    SEQUENCE (SIZE (1..maxTrCH)) OF
                                        SEQUENCE {
    dsch-transport-channel-identity
                                            TransportChannelIdentity,
                                            TransportFormatSet
                                   INTEGER (1..4096)
DurationTimeInfo ::=
DynamicPersistenceLevel ::=
                                  INTEGER (1..8)
DynamicPersistenceLevelList ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                        DynamicPersistenceLevel
DynamicPersistenceLevelTF-List ::= SEQUENCE (SIZE (1..maxTF-CPCH)) OF
                                       DynamicPersistenceLevel
DynamicTFInformationCCCH ::=
                                    SEQUENCE {
   octetModeRLC-SizeInfoType2
                                     OctetModeRLC-SizeInfoType2
E-AGCH-ChannelisationCode ::= INTEGER (0..255)
E-AGCH-Information ::=
                                  SEQUENCE {
   e-AGCH-ChannelisationCode
                                    E-AGCH-ChannelisationCode
E-DCH-MinimumSet-E-TFCI ::=
                                  INTEGER (0..127)
E-DCH-ReconfigurationInfo ::= SEQUENCE {
    e-DCH-RL-InfoNewServingCell E-DCH-RL-InfoNewServingCell
                                                                                OPTIONAL,
```

```
e-DCH-RL-InfoOtherCellList
                                         SEQUENCE (SIZE (1..maxEDCHRL)) OF
                                                E-DCH-RL-InfoOtherCell
                                                                                        OPTIONAL
}
E-DCH-RL-InfoNewServingCell ::= SEQUENCE {
   primaryCPICH-Info
                                         PrimaryCPICH-Info,
    e-AGCH-Information
                                            E-AGCH-Information,
                                            SEOUENCE {
    servingGrant
        value
                                               INTEGER (0..38)
                                                                                        OPTIONAL,
        primary-Secondary-GrantSelector
                                                ENUMERATED { primary, secondary }
   OPTIONAL,
e-DPCCH-DPCCH-PowerOffset

reference-E-TFCIs
powerOffsetForSchedInfo
threeIndexStepThreshold
twoIndexStepThreshold
e-HICH-Information

F-DPCCH-DPCCH-PowerOffset
E-DPCCH-DPCCH-PowerOffset
E-DPCCH-DPCCH-PowerOffset
INTEGER (0..6)
INTEGER (0..37)
E-HICH-Information OPTIONAL,
CHOICE {
                                                                                        OPTIONAL.
                                                                                        OPTIONAL,
                                                                                        OPTIONAL,
                                                                                        OPTIONAL,
                                                                                        OPTIONAL,
                                           CHOICE {
                                               E-RGCH-Information,
        e-RGCH-Information
        releaseIndicator
                                                NULL
       OPTIONAL
}
E-DCH-RL-InfoOtherCell ::= SEQUENCE {
    primaryCPICH-Info Primary
                                           PrimaryCPICH-Info,
    e-HICH-Info
                                            CHOICE {
        e-HICH-Information
                                               E-HICH-Information,
        releaseIndicator
                                                NULL
       OPTIONAL,
    e-RGCH-Info
                                          CHOICE {
        e-RGCH-Information
                                                E-RGCH-Information,
        releaseIndicator
       OPTIONAL
}
E-DPCCH-Info ::=
                                      SEQUENCE {
    e-DPCCH-DPCCH-PowerOffset
happyBit-DelayCondition
                                       E-DPCCH-DPCCH-PowerOffset,
                                           HappyBit-DelayCondition
E-DPCCH-DPCCH-PowerOffset ::=
                                       INTEGER (0..8)
E-DPDCH-Info ::=
                                      SEQUENCE {
                                      E-TFCI-TableIndex,
    e-TFCI-TableIndex
    e-DCH-MinimumSet-E-TFCI
                                           E-DCH-MinimumSet-E-TFCI
                                                                                  OPTIONAL,
    reference-E-TFCIs
                                           E-DPDCH-Reference-E-TFCIList,
    maxChannelisationCodes
                                           E-DPDCH-MaxChannelisationCodes,
    pl-NonMax
                                           E-DPDCH-PL-NonMax,
    schedulingInfoConfiguration
                                           E-DPDCH-SchedulingInfoConfiguration,
    threeIndexStepThreshold
                                           INTEGER (0..37)
                                                                                    OPTIONAL,
    twoIndexStepThreshold
                                           INTEGER (0..37)
                                                                                    OPTIONAL
                                       ENUMERATED {
E-DPDCH-PeriodicyOfSchedInfo ::=
                                           everyEDCHTTI, ms4, ms10, ms20, ms50, ms100, ms200, ms500,
                                            ms1000 }
-- The actual value of E-DPDCH-PL-NonMax is: IE value * 0.04
E-DPDCH-PL-NonMax ::=
                                      INTEGER (11..25)
E-DPDCH-Reference-E-TFCI ::=
                                     SEQUENCE {
    reference-E-TFCI
                                            INTEGER (0..127),
    reference-E-TFCI-PO
                                            INTEGER (0..29)
}
E-DPDCH-Reference-E-TFCIList ::=
                                     SEQUENCE (SIZE (1..8)) OF E-DPDCH-Reference-E-TFCI
E-DPDCH-SchedulingInfoConfiguration ::= SEQUENCE {
    periodicityOfSchedInfo-NoGrant E-DPDCH-PeriodicyOfSchedInfo OPTIONAL, periodicityOfSchedInfo-Grant E-DPDCH-PeriodicyOfSchedInfo OPTIONAL,
    periodicityOfSchedInfo-Grant
    powerOffsetForSchedInfo
                                           INTEGER (0..6)
}
E-DPDCH-SchedulingTransmConfiguration ::= SEQUENCE {
    ms2-SchedTransmGrantHARQAlloc BIT STRING (SIZE (8))
servingGrant SEQUENCE {
                                                                         OPTIONAL,
        value
                                                INTEGER (0..38),
        primary-Secondary-GrantSelector
                                                ENUMERATED { primary, secondary }
```

```
OPTIONAL
{\tt E-DPDCH-MaxChannelisationCodes} \ ::= \ {\tt ENUMERATED} \ \{
                                        sf256, sf128, sf64, sf32, sf16, sf8, sf4, sf4x2, sf2x2,
sf4x2-and-sf2x2 }
E-HICH-ChannelisationCode ::=
                                   INTEGER (0..127)
E-HICH-Information ::=
                                    SEQUENCE {
                                    	ilde{	t E-HICH-ChannelisationCode},
   channelisationCode
                                        E-HICH-RGCH-SignatureSequence
    signatureSequence
}
E-HICH-RGCH-SignatureSequence ::= INTEGER (0..39)
E-RGCH-CombinationIndex ::=
                                   INTEGER (0..5)
                          SEQUENCE {
E-HICH-
E-RGCH-Information ::=
    signatureSequence
                                        E-HICH-RGCH-SignatureSequence,
    rg-CombinationIndex
                                        E-RGCH-CombinationIndex
E-TFCI-TableIndex ::=
                                   INTEGER (0..1)
                                   SEQUENCE {
EXT-UL-TimingAdvance ::=
   modeSpecificInfo
                                  CHOICE {
                                    SEQUENCE {
INTEGER (0..255)
        tdd384
           ex-ul-TimingAdvance
                                     SEQUENCE {
INTEGER (0..511)
       tdd768
         ex-ul-TimingAdvance
    }
}
FACH-PCH-Information ::= transportFormatSet
                                    SEQUENCE {
                                   TransportFormatSet,
TransportChannelIdentity,
   ctch-Indicator
                                       BOOLEAN
FACH-PCH-InformationList ::= SEQUENCE (SIZE (1..maxFACHPCH)) OF
                                        FACH-PCH-Information
Feedback-cycle ::=
                                    ENUMERATED {
                                        fc0, fc2, fc4, fc8, fc10, fc20, fc40, fc80, fc160}
FPACH-Info-r4 ::=
                                        SEQUENCE {
                                       TimeslotNumber-LCR-r4,
   timeslot
   channelisationCode
                                        TDD-FPACH-CCode16-r4,
   midambleShiftAndBurstType
                                        MidambleShiftAndBurstType-LCR-r4,
                                        Wi-LCR
}
FrequencyInfo ::=
                                    SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
      fdd
                                         FrequencyInfoFDD,
       tdd
                                            FrequencyInfoTDD }
}
FrequencyInfoFDD ::=
                                    SEQUENCE {
   uarfcn-UL
                                      UARFCN
                                                           OPTIONAL,
   uarfcn-DL
                                        UARFCN
}
FrequencyInfoTDD ::=
                                    SEQUENCE {
                                        UARFCN
   uarfcn-Nt
HappyBit-DelayCondition ::=
                                    ENUMERATED {
                                        ms2, ms10, ms20, ms50, ms100, ms200, ms500, ms1000 }
HARQ-Preamble-Mode ::=
                                    INTEGER (0..1)
                                    ENUMERATED {
HS-ChannelisationCode-LCR ::=
                                        cc16-1, cc16-2, cc16-3, cc16-4, cc16-5, cc16-6, cc16-7, cc16-8,
```

```
cc16-9, cc16-10, cc16-11, cc16-12,
                                        cc16-13, cc16-14, cc16-15, cc16-16 }
HS-PDSCH-Midamble-Configuration-TDD128 ::= SEQUENCE {
   midambleAllocationMode
                                        CHOICE {
       defaultMidamble
                                            NULL
        commonMidamble
                                            NULL,
       ueSpecificMidamble
                                            INTEGER (0..15)
     - Actual value midambleConfiguration = IE value * 2
    midambleConfiguration
                                       INTEGER (1..8)
}
HS-SCCH-Info ::=
                                    SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
       fdd
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
            hS-SCCHChannelisationCodeInfo
                                                    HS-SCCH-Codes,
                                                SecondaryScramblingCode
            dl-ScramblingCode
        },
                                            CHOICE {
        t.dd
            t.dd384
                                                SEQUENCE {
                nack-ack-power-offset
                                                   INTEGER (-7..8),
                hs-SICH-PowerControl-Info
                                                   HS-SICH-Power-Control-Info-TDD384,
                hS-SCCH-SetConfiguration
                                                   SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                       HS-SCCH-TDD384
            tdd128
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                    HS-SCCH-TDD128
        }
    }
HS-SCCH-Info-r6 ::=
                                    SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
       fdd
                                            SEQUENCE {
            hS-SCCHChannelisationCodeInfo
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                    HS-SCCH-Codes,
            dl-ScramblingCode
                                                SecondaryScramblingCode
                                                                                OPTIONAL
        },
        tdd
                                            CHOICE {
            tdd384
                                                SEQUENCE {
                                                    INTEGER (-7..8),
                nack-ack-power-offset
                hs-SICH-PowerControl-Info
                                                    HS-SICH-Power-Control-Info-TDD384,
                dhs-sync
                                                    DHS-Sync
                bler-target
                                                    Bler-Target,
                hS-SCCH-SetConfiguration
                                                    SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                        HS-SCCH-TDD384-r6
            tdd128
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                    HS-SCCH-TDD128
        }
HS-SCCH-Info-r7 ::=
                                    SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
            hS-SCCHChannelisationCodeInfo
                                                   HS-SCCH-Codes,
                                                SecondaryScramblingCode
            dl-ScramblingCode
                                                                               OPTIONAL
        },
        tdd
                                            CHOICE {
                                                SEQUENCE {
            tdd384
                                                    INTEGER (-7..8),
                nack-ack-power-offset
                hs-SICH-PowerControl-Info
                                                    HS-SICH-Power-Control-Info-TDD384,
                dhs-sync
                                                    DHS-Sync
                                                                                OPTIONAL,
                hS-SCCH-SetConfiguration
                                                    SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                        HS-SCCH-TDD384-r6
            tdd768
                                                SEQUENCE {
                                                    INTEGER (-7..8),
                nack-ack-power-offset
                hs-SICH-PowerControl-Info
                                                    HS-SICH-Power-Control-Info-TDD768,
                dhs-sync
                                                    DHS-Sync
                                                                                OPTIONAL,
                bler-target
                                                    Bler-Target,
                hS-SCCH-SetConfiguration
                                                    SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                        HS-SCCH-TDD768
                },
```

913

```
tdd128
                                                SEQUENCE (SIZE (1..maxHSSCCHs)) OF
                                                    HS-SCCH-TDD128
        }
    }
HS-SCCH-Codes ::=
                                   INTEGER (0..127)
HS-SCCH-TDD128 ::=
                                SEQUENCE {
    timeslotNumber
                                        TimeslotNumber-LCR-r4,
    firstChannelisationCode
                                        HS-ChannelisationCode-LCR,
    secondChannelisationCode
                                        HS-ChannelisationCode-LCR,
    midambleAllocationMode
                                        CHOICE {
        defaultMidamble
                                            NULL,
        commonMidamble
                                            NULL,
       ueSpecificMidamble
                                            INTEGER(0..15)
    -- Actual value midambleConfiguration = IE value * 2
    midambleConfiguration
                                       INTEGER (1..8),
    bler-target
                                        Bler-Target,
   hs-sich-configuration
                                        HS-SICH-Configuration-TDD128
}
HS-SICH-Configuration-TDD128 ::= SEQUENCE {
    timeslotNumber
                                        TimeslotNumber-LCR-r4.
    channelisationCode
                                        HS-ChannelisationCode-LCR,
    midambleAllocationMode
                                        CHOICE {
        defaultMidamble
                                            NULL.
        ueSpecificMidamble
                                            SEQUENCE {
           midambleShift
                                                MidambleShiftLong
    -- Actual value midambleConfiguration = IE value * 2
                                        INTEGER (1..8),
   midambleConfiguration
    nack-ack-power-offset
                                        INTEGER (-7..8),
    power-level-HSSICH
                                        INTEGER (-120..-58),
                                        ENUMERATED { s1, s2, s3 , spare1}
    tpc-step-size
}
HS-SCCH-TDD384 ::=
                                SEQUENCE {
    timeslotNumber
                                        TimeslotNumber,
    channelisationCode
                                        DL-TS-ChannelisationCode,
    midambleAllocationMode
                                        CHOICE {
        defaultMidamble
                                            NULL,
        commonMidamble
                                            NULL.
        ueSpecificMidamble
                                            SEQUENCE {
            midambleShift
                                                MidambleShiftLong
                                       MidambleConfigurationBurstTypeland3,
    midambleconfiguration
    bler-target
                                        Bler-Target,
    hs-sich-configuration
                                        HS-SICH-Configuration-TDD384
}
HS-SCCH-TDD384-r6 ::=
                                    SEQUENCE {
    timeslotNumber
                                        TimeslotNumber,
    channelisationCode
                                        DL-TS-ChannelisationCode,
    midambleAllocationMode
                                        CHOICE {
        defaultMidamble
                                            NULL,
        {\tt commonMidamble}
                                            NULL,
        ueSpecificMidamble
                                            SEQUENCE {
            midambleShift
                                                MidambleShiftLong
    midambleconfiguration
                                        MidambleConfigurationBurstTypeland3,
    hs-sich-configuration
                                       HS-SICH-Configuration-TDD384
}
HS-SCCH-TDD768 ::=
                                SEQUENCE {
    timeslotNumber
                                        TimeslotNumber,
    channelisationCode
                                        DL-TS-ChannelisationCode-VHCR,
                                        CHOICE {
    midambleAllocationMode
        defaultMidamble
                                            NULL,
        commonMidamble
        ueSpecificMidamble
                                            SEQUENCE {
           midambleShift
                                                MidambleShiftLong
```

```
MidambleConfigurationBurstTypeland3,
    midambleconfiguration
                                       HS-SICH-Configuration-TDD768
   hs-sich-configuration
{\tt HS-SICH-Configuration-TDD384} ::= \qquad {\tt SEQUENCE} \ \{
    channelisationCode
                                        TimeslotNumber,
                                        DL-TS-ChannelisationCode,
    midambleAllocationMode
                                         CHOICE {
                                         NULÌ,
       defaultMidamble
        ueSpecificMidamble
                                             SEQUENCE {
            midambleShift
                                                 MidambleShiftLong
    midambleconfiguration
                                       MidambleConfigurationBurstTypeland3
}
HS-SICH-Configuration-TDD768 ::= SEQUENCE {
    timeslotNumber
                                         TimeslotNumber,
    channelisationCode
                                         DL-TS-ChannelisationCode-VHCR,
    midambleAllocationMode
                                        CHOICE {
                                         NULL,
SEQUENCE {
        defaultMidamble
        ueSpecificMidamble
           midambleShift
                                                 MidambleShiftLong
    midambleconfiguration MidambleConfigurationBurstTypeland3
}
HS-SICH-Power-Control-Info-TDD384 ::= SEQUENCE {
    -- Actual value ul-target-SIR = IE value * 0.5
    ul-target-SIR
                                         INTEGER (-22..40),
   hs-sich-ConstantValue
                                         ConstantValue
}
HS-SICH-Power-Control-Info-TDD768 ::= SEQUENCE {
    -- Actual value ul-target-SIR = IE value * 0.5
                                         INTEGER (-22..40),
   ul-target-SIR
   hs-sich-ConstantValue
                                         ConstantValue
IndividualTimeslotInfo ::= SEQUENCE {
                                    TimeslotNumber,
    timeslotNumber
    tfci-Existence
   midambleShiftAndBurstType
                                         MidambleShiftAndBurstType
}
\label{eq:continuous} \begin{array}{lll} \mbox{Individual Timeslot Info-VHCR} &::= & \mbox{SEQUENCE} \; \{ \\ & \mbox{timeslot Number} & \mbox{Timeslot Number} \,, \end{array}
                                         BOOLEAN,
    tfci-Existence
   midambleShiftAndBurstType-VHCR
                                        MidambleShiftAndBurstType-VHCR
}
IndividualTimeslotInfo-LCR-r4 ::= SEQUENCE {
    timeslotNumber
                                         TimeslotNumber-LCR-r4,
    tfci-Existence
                                         BOOLEAN,
    midambleShiftAndBurstType
                                        MidambleShiftAndBurstType-LCR-r4,
                                        ENUMERATED { mod-QPSK, mod-8PSK },
ENUMERATED { zero, one, sixteenOverSF },
    modulation
    ss-TPC-Symbols
    additionalSS-TPC-Symbols
                                        INTEGER(1..15)
                                                             OPTIONAL
}
IndividualTimeslotInfo-LCR-r4-ext ::=
                                             SEOUENCE {
-- timeslotNumber and tfci-Existence is taken from IndividualTimeslotInfo.
-- midambleShiftAndBurstType in IndividualTimeslotInfo shall be ignored.
   midambleShiftAndBurstType MidambleShiftAndBurstType-LCR-r4,
                                         ENUMERATED { mod-QPSK, mod-8PSK },
   modulation
    {\tt ss-TPC-Symbols}
                                         ENUMERATED { zero, one, sixteenOverSF }
IndividualTS-Interference ::=
                                    SEQUENCE {
   timeslot
                                         TimeslotNumber,
    ul-TimeslotInterference
                                         TDD-UL-Interference
IndividualTS-InterferenceList ::= SEQUENCE (SIZE (1..maxTS)) OF
                                         IndividualTS-Interference
```

```
ITP ::=
                                                                                                                               ENUMERATED {
                                                                                                                                            mode0, mode1 }
NidentifyAbort ::= INTEGER (1..128)
MaxAllowedUL-TX-Power ::=
                                                                                                                              INTEGER (-50..33)
MaxAvailablePCPCH-Number ::=
                                                                                                                              INTEGER (1..64)
MaxPowerIncrease-r4 ::=
                                                                                                                              INTEGER (0..3)
MaxTFCI-Field2Value ::=
                                                                                                                              INTEGER (1..1023)
Measurement-Feedback-Info ::=
                                                                                                                              SEQUENCE {
             modeSpecificInfo
                                                                                                                              CHOICE {
                                                                                                                                           SEQUENCE {
                           fdd
                                          measurementPowerOffset
                                                                                                                                                         MeasurementPowerOffset,
                                          feedback-cycle
                                                                                                                                                         Feedback-cycle,
                                          cqi-RepetitionFactor
                                                                                                                                                         CQI-RepetitionFactor,
                                          deltaCQI
                                                                                                                                                         DeltaCQI
                            },
                            tdd
                                                                                                                                            NULL
              }
}
MidambleConfigurationBurstTypeland3 ::= ENUMERATED {ms4, ms8, ms16}
MidambleConfigurationBurstType2 ::=
                                                                                                                                           ENUMERATED {ms3, ms6}
MidambleConfigurationBurstType2-VHCR ::=
                                                                                                                                                                        ENUMERATED {ms4, ms8}
MidambleShiftAndBurstType ::=
                                                                                                                               SEQUENCE {
              burstType
                                                                                                                                            CHOICE {
                                                                                                                                                          SEQUENCE {
                            type1
                                          midambleAllocationMode
                                                                                                                                                                        CHOICE {
                                                        defaultMidamble
                                                                                                                                                                                       NULL,
                                                        commonMidamble
                                                                                                                                                                                       NULL,
                                                        ueSpecificMidamble
                                                                                                                                                                                       SEQUENCE {
                                                                      midambleShift
                                                                                                                                                                                                    MidambleShiftLong
                                          }
                                                                                                                                                           SEQUENCE {
                                          midambleConfigurationBurstType2
                                                                                                                                                                        MidambleConfigurationBurstType2,
                                                                                                                                                                         CHOICE {
                                          midambleAllocationMode
                                                        defaultMidamble
                                                                                                                                                                                       NULL.
                                                        commonMidamble
                                                                                                                                                                                       NULL,
                                                        ueSpecificMidamble
                                                                                                                                                                                       SEQUENCE {
                                                                      midambleShift
                                                                                                                                                                                                    MidambleShiftShort
                                          }
                             },
                                                                                                                                                         SEQUENCE {
                                          \verb|midamble| Configuration BurstType| and 3 \verb|Midamble| Configuration BurstType| and 3 \verb|, in the configuration b
                                          midambleAllocationMode
                                                                                                                                                                        CHOICE {
                                                        defaultMidamble
                                                                                                                                                                                       NULL,
                                                        ueSpecificMidamble
                                                                                                                                                                                       SEQUENCE {
                                                                     midambleShift
                                                                                                                                                                                                    MidambleShiftLong
                                         }
                           }
              }
}
MidambleShiftAndBurstType-VHCR ::= SEQUENCE {
                                                                                                                                            CHOICE {
             burstType
                                                                                                                                                           SEQUENCE {
                                          \verb|midamble| Configuration Burst Type 1 and 3 \verb| Midamble| Configuration Burst Type 1 and 3 \verb|, in the configuration Burst Type 2 and 3 \verb|, in the configuration Burst Type 3 and 3
                                                                                                                                                                         CHOICE {
                                          midambleAllocationMode
                                                        defaultMidamble
                                                                                                                                                                                      NULL,
                                                        commonMidamble
                                                                                                                                                                                      NULL,
                                                        ueSpecificMidamble
                                                                                                                                                                                       SEOUENCE {
                                                                      midambleShift
                                                                                                                                                                                                    MidambleShiftLong
                                          }
                            },
```

```
type2
                                          SEQUENCE {
           midambleConfigurationBurstType2
                                             MidambleConfigurationBurstType2-VHCR,
                                              CHOICE {
           midambleAllocationMode
               defaultMidamble
                                                 NULL,
               commonMidamble
                                                 NULL,
               ueSpecificMidamble
                                                  SEQUENCE {
                   midambleShift
                                                     MidambleShiftShort-VHCR
           }
       },
                                          SEQUENCE {
       type3
           \verb|midambleConfigurationBurstTypeland3| MidambleConfigurationBurstTypeland3|,\\
                                              CHOICE {
           midambleAllocationMode
                                                  NULL,
               defaultMidamble
               ueSpecificMidamble
                                                  SEQUENCE {
                   midambleShift
                                                     MidambleShiftLong
           }
       }
   }
}
MidambleShiftAndBurstType-DL ::=
                                      SEQUENCE {
                                      CHOICE {
   burstType
                                          SECUENCE {
       type1
           {\tt midambleAllocationMode}
                                              CHOICE {
               defaultMidamble
                                                  NULL,
               commonMidamble
                                                  NULL,
               ueSpecificMidamble
                                                  SEQUENCE {
                   midambleShift
                                                     MidambleShiftLong
           }
       },
                                          SEQUENCE {
           midambleConfigurationBurstType2
                                             MidambleConfigurationBurstType2,
           midambleAllocationMode
                                              CHOICE {
               defaultMidamble
                                                 NULL,
               commonMidamble
                                                 NULL,
               ueSpecificMidamble
                                                  SEQUENCE {
                   midambleShift
                                                     MidambleShiftShort
           }
       }
   }
}
MidambleShiftAndBurstType-DL-VHCR ::= SEQUENCE
   burstType
                                      CHOICE
                                          SEQUENCE {
       type1
           midambleAllocationMode
                                              CHOICE {
               defaultMidamble
                                                  NULL,
               commonMidamble
                                                  NULL.
               ueSpecificMidamble
                                                 SEQUENCE {
                   midambleShift
                                                     MidambleShiftLong
           }
       },
                                          SEOUENCE {
           \verb|midamble| Configuration BurstType2|
                                             MidambleConfigurationBurstType2-VHCR,
           {\tt midambleAllocationMode}
                                              CHOICE {
               defaultMidamble
                                                 NULL,
               commonMidamble
                                                  NULL,
               ueSpecificMidamble
                                                 SEQUENCE {
                   midambleShift
                                                     MidambleShiftShort-VHCR
           }
       }
   }
}
MidambleShiftAndBurstType-LCR-r4 ::=
                                      SEQUENCE {
                                      CHOICE {
   midambleAllocationMode
       defaultMidamble
                                          NULL,
       commonMidamble
       ueSpecificMidamble
                                          SEQUENCE {
           midambleShift
                                              INTEGER (0..15)
```

```
}
    -- Actual value midambleConfiguration = IE value * 2
    midambleConfiguration
                                      INTEGER (1..8)
MidambleShiftLong ::=
                                  INTEGER (0..15)
MidambleShiftShort ::=
                                   INTEGER (0..5)
MidambleShiftShort-VHCR ::=
                                  INTEGER (0..7)
MinimumSpreadingFactor ::=
                                   ENUMERATED {
                                       sf4, sf8, sf16, sf32,
                                       sf64, sf128, sf256 }
MultiCodeInfo ::=
                                   INTEGER (1..16)
N-EOT ::=
                                   INTEGER (0..7)
                                   ENUMERATED {
N-GAP ::=
                                       f2, f4, f8 }
N-PCH ::=
                                   INTEGER (1..8)
N-StartMessage ::=
                                   INTEGER (1..8)
NB01 ::=
                                   INTEGER (0..50)
                                   INTEGER (1..64)
NF-Max ::=
NumberOfDPDCH ::=
                                   INTEGER (1..maxDPDCH-UL)
NumberOfFBI-Bits ::=
                                   INTEGER (1..2)
OpenLoopPowerControl-TDD ::= SEQUENCE {
   primaryCCPCH-TX-Power
                                       PrimaryCCPCH-TX-Power,
    -- alpha, prach-ConstantValue, dpch-ConstantValue and pusch-ConstantValue
    -- shall be ignored in 1.28Mcps TDD mode.
   alpha
                                       Alpha
                                                                   OPTIONAL,
   prach-ConstantValue
                                       ConstantValueTdd,
                                     ConstantValueTdd,
ConstantValueTdd
   dpch-ConstantValue
                                                           OPTIONAL
   pusch-ConstantValue
}
OpenLoopPowerControl-IPDL-TDD-r4 ::= SEQUENCE {
    ipdl-alpha
                                       Alpha.
    maxPowerIncrease
                                       MaxPowerIncrease-r4
PagingIndicatorLength ::=
                                  ENUMERATED {
                                       pi4, pi8, pi16 }
PC-Preamble ::=
                                   INTEGER (0..7)
                                   ENUMERATED {
PCP-Length ::=
                                       as0, as8 }
PCPCH-ChannelInfo ::=
                                   SEQUENCE {
                                   INTEGÈR (0..79),
   pcpch-UL-ScramblingCode
   pcpch-DL-ChannelisationCode
                                       INTEGER (0..511),
   pcpch-DL-ScramblingCode
                                       SecondaryScramblingCode
                                                                         OPTIONAL,
   pcp-Length
                                       PCP-Length,
   ucsm-Info
                                       UCSM-Info
                                                                           OPTIONAL
}
PCPCH-ChannelInfoList ::=
                                   SEQUENCE (SIZE (1..maxPCPCHs)) OF
                                       PCPCH-ChannelInfo
                                   ENUMERATED {
PCPICH-UsageForChannelEst ::=
                                       mayBeUsed,
                                       shallNotBeUsed }
                                  SEQUENCE {
PDSCH-CapacityAllocationInfo ::=
    \operatorname{\mathsf{--}} pdsch-PowerControlInfo is conditional on new-configuration branch below, if this
    -- selected the IE is OPTIONAL otherwise it should not be sent
```

```
pdsch-PowerControlInfo
                                    PDSCH-PowerControlInfo
                                                                       OPTIONAL,
   pdsch-AllocationPeriodInfo
                                   AllocationPeriodInfo,
   configuration
                                     CHOICE {
       figuration
old-Configuration
                                         SEQUENCE {
           tfcs-ID
                                             TFCS-IdentityPlain
                                                                                DEFAULT 1,
           pdsch-Identity
                                             PDSCH-Identity
       },
                                         SEQUENCE {
       new-Configuration
           pdsch-Info
                                             PDSCH-Info,
           pdsch-Identity
                                             PDSCH-Identity
                                                                       OPTIONAL
   }
}
PDSCH-CapacityAllocationInfo-r4 ::= SEQUENCE {
   pdsch-AllocationPeriodInfo AllocationPeriodInfo,
   configuration
                                     CHOICE {
       old-Configuration
                                         SEQUENCE {
          tfcs-ID
                                             TFCS-IdentityPlain
                                                                               DEFAULT 1,
           pdsch-Identity
                                             PDSCH-Identity
       },
                                         SEQUENCE {
       new-Configuration
                                         PDSCH-Info-r4,
          pdsch-Info
                                             PDSCH-Identity OPTIONAL PDSCH-PowerControlInfo OPTIONAL
           pdsch-Identity
                                                                      OPTIONAL.
           pdsch-PowerControlInfo
       }
   }
}
PDSCH-CapacityAllocationInfo-r7 ::= SEQUENCE {
   configuration
                                     CHOICE {
       old-Configuration
                                         SEQUENCE {
                                             TFCS-IdentityPlain
           tfcs-ID
                                                                               DEFAULT 1,
                                             PDSCH-Identity
           pdsch-Identity
                                       SEQUENCE {
       new-Configuration
                                         PDSCH-Info-r7,
PDSCH-Identity
          pdsch-Info
                                            PDSCH-Identity OPTIONAL,
PDSCH-PowerControlInfo OPTIONAL
           pdsch-Identity
           pdsch-PowerControlInfo
   }
}
PDSCH-CodeInfo ::=
                                  SEQUENCE {
   spreadingFactor
                                     SF-PDSCH,
                                      CodeNumberDSCH,
   codeNumber
   multiCodeInfo
                                     MultiCodeInfo
PDSCH-CodeInfoList ::=
                                  SEQUENCE (SIZE (1..maxTFCI-2-Combs)) OF
                                     PDSCH-CodeInfo
PDSCH-CodeMap ::=
                                  SEQUENCE {
                                     SF-PDSCH,
   spreadingFactor
   multiCodeInfo
                                     MultiCodeInfo,
   codeNumberStart
                                      CodeNumberDSCH,
   codeNumberStop
                                     CodeNumberDSCH
}
PDSCH-CodeMapList ::=
                                  SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
                                     PDSCH-CodeMap
PDSCH-CodeMapping ::=
                                  SEQUENCE {
                                      SecondaryScramblingCode OPTIONAL,
   dl-ScramblingCode
   signallingMethod
                                      CHOICE {
       codeRange
                                         CodeRange,
       tfci-Range
                                         DSCH-MappingList,
                                         PDSCH-CodeInfoList,
       explicit-config
       replace
                                         ReplacedPDSCH-CodeInfoList
}
                                 INTEGER (1..hiPDSCHidentities)
PDSCH-Identity ::=
PDSCH-Info ::=
                                  SEQUENCE {
                                      TFCS-IdentityPlain
                                                                       DEFAULT 1,
   tfcs-ID
```

```
commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                          OPTIONAL,
                                                                          OPTIONAL
   pdsch-TimeslotsCodes
                                       DownlinkTimeslotsCodes
}
PDSCH-Info-r4 ::=
                                       SEQUENCE {
   tfcs-ID
                                       TFCS-IdentityPlain
                                                                         DEFAULT 1,
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                          OPTIONAL,
   tddOption
                                       CHOICE {
       tdd384
                                          SEQUENCE {
         pdsch-TimeslotsCodes
                                             DownlinkTimeslotsCodes
                                                                         OPTIONAL
       tdd128
                                          SEQUENCE {
                                               DownlinkTimeslotsCodes-LCR-r4 OPTIONAL
           pdsch-TimeslotsCodes
   }
}
PDSCH-Info-r7 ::=
                                       SEQUENCE {
                                       TFCS-IdentityPlain
   tfcs-ID
                                                                         DEFAULT 1.
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                          OPTIONAL,
   tddOption
                                       CHOICE {
                                          SEQUENCE {
       tdd384
           pdsch-TimeslotsCodes
                                              DownlinkTimeslotsCodes OPTIONAL
       tdd768
                                          SECUENCE {
                                             DownlinkTimeslotsCodes-VHCR
          pdsch-TimeslotsCodes
                                                                             OPTIONAL
       tdd128
                                           SEQUENCE {
           pdsch-TimeslotsCodes
                                              DownlinkTimeslotsCodes-LCR-r4 OPTIONAL
   }
PDSCH-Info-LCR-r4 ::=
                                   SEQUENCE {
   tfcs-ID
                                      TFCS-IdentityPlain
                                                                         DEFAULT 1,
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                          OPTIONAL,
   pdsch-TimeslotsCodes
                                      DownlinkTimeslotsCodes-LCR-r4
                                                                          OPTIONAL
}
PDSCH-PowerControlInfo ::=
                                   SEQUENCE {
   tpc-StepSizeTDD
                                      TPC-StepSizeTDD
                                                                          OPTIONAL,
   ul-CCTrChTPCList
                                      UL-CCTrChTPCList
                                                                          OPTIONAL
}
PDSCH-SHO-DCH-Info ::=
                                   SEQUENCE {
   CH-SHO-DCH-Info ::=
dsch-RadioLinkIdentifier
                                      DSCH-RadioLinkIdentifier,
   rl-IdentifierList
                                      RL-IdentifierList
                                                                          OPTIONAL
}
PDSCH-SysInfo ::=
                                   SEQUENCE {
                                      PDSCH-Identity,
   pdsch-Identity
   pdsch-Info
                                       PDSCH-Info,
   dsch-TFS
                                       TransportFormatSet
                                                                          OPTIONAL,
   dsch-TFCS
                                                                          OPTIONAL
                                       TFCS
}
                                   SEQUENCE {
PDSCH-SysInfo-r7 ::=
   pdsch-Identity
                                     PDSCH-Identity,
   pdsch-Info
                                       PDSCH-Info-r7,
   dsch-TransportChannelsInfo
                                      DSCH-TransportChannelsInfo
                                                                          OPTIONAL.
   dsch-TFCS
                                       TFCS
                                                                          OPTIONAL
PDSCH-SysInfo-HCR-r5 ::=
                                           SEQUENCE {
                                     PDSCH-Identity,
   pdsch-Identity
   pdsch-Info
                                      PDSCH-Info,
   dsch-TransportChannelsInfo
                                       DSCH-TransportChannelsInfo
                                                                          OPTIONAL,
   dsch-TFCS
                                                                          OPTIONAL
                                       TFCS
}
PDSCH-SysInfo-LCR-r4 ::=
                                   SEQUENCE {
   pdsch-Identity
                                       PDSCH-Identity,
   pdsch-Info
                                       PDSCH-Info-LCR-r4,
                                                                          OPTIONAL.
   dsch-TFS
                                       TransportFormatSet
   dsch-TFCS
                                       TFCS
                                                                          OPTIONAL
}
PDSCH-SysInfoList ::=
                                  SEQUENCE (SIZE (1..maxPDSCH)) OF
```

```
PDSCH-SysInfo
PDSCH-SysInfoList-r7 ::=
                                   SEQUENCE (SIZE (1..maxPDSCH)) OF PDSCH-SysInfo-r7
PDSCH-SysInfoList-HCR-r5 ::=
                                        SEQUENCE (SIZE (1..maxPDSCH)) OF PDSCH-SysInfo-HCR-r5
                                   SEQUENCE (SIZE (1..maxPDSCH)) OF
PDSCH-SysInfoList-LCR-r4 ::=
                                       PDSCH-SysInfo-LCR-r4
PDSCH-SysInfoList-SFN ::=
                                   SEQUENCE (SIZE (1..maxPDSCH)) OF
                                       SEQUENCE {
                                           PDSCH-SysInfo,
    pdsch-SysInfo
                                           SFN-TimeInfo
    sfn-TimeInfo
                                                                           OPTIONAL.
}
                                           SEQUENCE (SIZE (1..maxPDSCH)) OF
PDSCH-SysInfoList-SFN-HCR-r5 ::=
                                       SEQUENCE {
   pdsch-SysInfo
                                           PDSCH-SysInfo-HCR-r5,
   sfn-TimeInfo
                                           SFN-TimeInfo
                                                                           OPTIONAL
}
PDSCH-SysInfoList-SFN-LCR-r4 ::=
                                  SEQUENCE (SIZE (1..maxPDSCH)) OF
                                       SEQUENCE {
   pdsch-SysInfo
                                           PDSCH-SysInfo-LCR-r4,
                                           SFN-TimeInfo
    sfn-TimeInfo
                                                                           OPTIONAL
}
PersistenceScalingFactor ::=
                                   ENUMERATED {
                                       psf0-9, psf0-8, psf0-7, psf0-6,
                                       psf0-5, psf0-4, psf0-3, psf0-2 }
PersistenceScalingFactorList ::=
                                   SEQUENCE (SIZE (1..maxASCpersist)) OF
                                       PersistenceScalingFactor
                                   ENUMERATED {
PI-CountPerFrame ::=
                                       e18, e36, e72, e144 }
PichChannelisationCodeList-LCR-r4 ::= SEQUENCE (SIZE (1..2)) OF
                                           DL-TS-ChannelisationCode
PICH-Info ::=
                                   CHOICE {
                                       SEQUENCE {
    fdd
       channelisationCode256
                                           ChannelisationCode256,
       pi-CountPerFrame
                                           PI-CountPerFrame,
       sttd-Indicator
                                           BOOLEAN
    bb†
                                       SEOUENCE {
        channelisationCode
                                           TDD-PICH-CCode
                                                                           OPTIONAL.
        timeslot
                                           TimeslotNumber
                                                                           OPTIONAL,
       midambleShiftAndBurstType
                                           MidambleShiftAndBurstType,
                                           RepPerLengthOffset-PICH
       repetitionPeriodLengthOffset
                                                                           OPTIONAL.
       pagingIndicatorLength
                                           PagingIndicatorLength
                                                                           DEFAULT pi4,
       n-GAP
                                           N-GAP
                                                                           DEFAULT f4,
                                           N-PCH
                                                                           DEFAULT 2
       n-PCH
    }
}
PICH-Info-r7 ::=
                                   CHOICE {
                                       SEQUENCE {
       channelisationCode256
                                           ChannelisationCode256.
       pi-CountPerFrame
                                           PI-CountPerFrame,
       sttd-Indicator
                                           BOOLEAN
    },
    tdd384
                                           SEQUENCE {
                                           TDD-PICH-CCode
        channelisationCode
                                                                           OPTIONAL.
        timeslot
                                           TimeslotNumber
                                                                           OPTIONAL,
       midambleShiftAndBurstType
                                           MidambleShiftAndBurstType,
       repetitionPeriodLengthOffset
                                           RepPerLengthOffset-PICH
                                                                           OPTIONAL,
                                           PagingIndicatorLength
       pagingIndicatorLength
                                                                           DEFAULT pi4,
       n-GAP
                                           N-GAP
                                                                           DEFAULT f4,
       n-PCH
                                                                           DEFAULT 2
                                           N-PCH
    tdd768
                                           SEQUENCE {
        {\tt channelisationCode}
                                           TDD768-PICH-CCode
                                                                           OPTIONAL,
                                           TimeslotNumber
                                                                           OPTIONAL,
        timeslot
                                           MidambleShiftAndBurstType,
       midambleShiftAndBurstType
       repetitionPeriodLengthOffset
                                           RepPerLengthOffset-PICH
                                                                           OPTIONAL.
       pagingIndicatorLength
                                           PagingIndicatorLength
                                                                           DEFAULT pi4,
```

```
n-GAP
                                           N-GAP
                                                                           DEFAULT f4,
                                                                           DEFAULT 2
       n-PCH
                                           N-PCH
    }
}
PICH-Info-LCR-r4 ::=
                                   SEQUENCE {
    timeslot
                                       TimeslotNumber-LCR-r4
                                                                           OPTIONAL.
    pichChannelisationCodeList-LCR-r4 PichChannelisationCodeList-LCR-r4,
   midambleShiftAndBurstType
                                      MidambleShiftAndBurstType-LCR-r4,
   repetitionPeriodLengthOffset
                                       RepPerLengthOffset-PICH
                                                                          OPTIONAL,
                                                                       DEFAULT pi4,
   pagingIndicatorLength
                                      PagingIndicatorLength
                                                                       DEFAULT f4,
   n-GAP
                                       N-GAP
                                                                       DEFAULT 2
   n-PCH
                                       N-PCH
}
                                   INTEGER (-10..5)
PICH-PowerOffset ::=
PilotBits128 ::=
                                   ENUMERATED {
                                       pb4, pb8 }
                                   ENUMERATED {
PilotBits256 ::=
                                      pb2, pb4, pb8 }
    -- Actual measurement power offset value = IE value * 0.5
MeasurementPowerOffset ::=
                                  INTEGER (-12..26)
PLCCH-Info
               ::=
                                  SEQUENCE {
                               INTEGER(1..17),
TimeslotNumber-LCR-r4,
   plcchSequenceNumber
    timeslotNumber
    channelisationCode
                                   DL-TS-ChannelisationCode,
    tpcCommandTargetRate
                                   TPC-CommandTargetRate
                                   ENUMERATED {
PositionFixedOrFlexible ::=
                                       fixed.
                                       flexible }
PowerControlAlgorithm ::=
                                   CHOICE {
                                       TPC-StepSizeFDD,
   algorithm1
                                       NULL
   algorithm2
                                   INTEGER (0..24)
PowerOffsetPilot-pdpdch ::=
PowerOffsetTPC-pdpdch ::=
                                  INTEGER (0..24)
PowerRampStep ::=
                                   INTEGER (1..8)
PRACH-ChanCodes-LCR-r4 ::=
                                   SEQUENCE (SIZE (1..4)) OF
                                       TDD-PRACH-CCode-LCR-r4
PRACH-Definition-LCR-r4 ::=
                                   SEOUENCE {
                                    TimeslotNumber-PRACH-LCR-r4,
   timeslot
    prach-ChanCodes-LCR
                                       PRACH-ChanCodes-LCR-r4,
   midambleShiftAndBurstType
                                       MidambleShiftAndBurstType-LCR-r4,
                                       FPACH-Info-r4
   fpach-Info
                                   ENUMERATED {
PRACH-Midamble ::=
                                       direct.
                                       direct-Inverted }
PRACH-Partitioning ::=
                                   CHOICE {
                                       SEQUENCE (SIZE (1..maxASC)) OF
    -- TABULAR: If only "NumASC+1" (with, NumASC+1 < maxASC) ASCSetting-FDD are listed,
    -- the remaining (NumASC+2 through maxASC) ASCs are unspecified.
                                          ASCSetting-FDD,
                                       SEQUENCE (SIZE (1..maxASC)) OF
    -- TABULAR: If only "NumASC+1" (with, NumASC+1 < maxASC) ASCSetting-TDD are listed,
    -- the remaining (NumASC+2 through maxASC) ASCs are unspecified.
                                           ASCSetting-TDD
}
PRACH-Partitioning-r7 ::=
                                   CHOICE {
                                       SEQUENCE (SIZE (1..maxASC)) OF
    -- TABULAR: If only "NumASC+1" (with, NumASC+1 < maxASC) ASCSetting-FDD are listed,
    -- the remaining (NumASC+2 through maxASC) ASCs are unspecified.
                                           ASCSetting-FDD,
```

```
SEQUENCE (SIZE (1..maxASC)) OF
   tdd
    -- TABULAR: If only "NumASC+1" (with, NumASC+1 < maxASC) ASCSetting-TDD are listed,
   -- the remaining (NumASC+2 through maxASC) ASCs are unspecified.
                                         ASCSetting-TDD-r7
                                 SEQUENCE (SIZE (1..maxASC)) OF
PRACH-Partitioning-LCR-r4 ::=
   -- TABULAR: If only "NumASC+1" (with, NumASC+1 < maxASC) ASCSetting-TDD-LCR-r4 are listed,
   -- the remaining (NumASC+2 through maxASC) ASCs are unspecified.
                                         ASCSetting-TDD-LCR-r4
PRACH-PowerOffset ::=
                                  SEOUENCE {
   powerRampStep
                                     PowerRampStep,
   preambleRetransMax
                                     PreambleRetransMax
}
PRACH-RACH-Info ::=
                                  SEQUENCE {
                                     CHOICE {
   modeSpecificInfo
       fdd
                                         SEQUENCE {
           availableSignatures
                                             AvailableSignatures,
           availableSF
                                             SF-PRACH.
           preambleScramblingCodeWordNumber
                                           PreambleScramblingCodeWordNumber,
           puncturingLimit
                                             PuncturingLimit,
           puncturingLimit PuncturingLimit,
availableSubChannelNumbers AvailableSubChannelNumbers
       },
       tdd
                                        SEQUENCE {
           timeslot
                                           TimeslotNumber,
           channelisationCodeList
                                              TDD-PRACH-CCodeList,
           prach-Midamble
                                             PRACH-Midamble
       }
   }
PRACH-RACH-Info-r7 ::= modeSpecificInfo
                                  SEQUENCE {
                                      CHOICE {
   modeSpecificInfo
                                      SEQUENCE {
       fdd
                                          AvailableSignatures,
           availableSignatures
                                             SF-PRACH,
           availableSF
           puncturingLimit
                                             PuncturingLimit,
           availableSubChannelNumbers
                                             AvailableSubChannelNumbers
       },
       tdd384
                                             SEQUENCE {
           timeslot
                                             TimeslotNumber,
           channelisationCodeList
                                             TDD-PRACH-CCodeList,
           prach-Midamble
                                             PRACH-Midamble
       },
       tdd768
                                             SEQUENCE {
           timeslot
                                             TimeslotNumber,
           channelisationCodeList
                                             TDD768-PRACH-CCodeList,
           prach-Midamble
                                             PRACH-Midamble
   }
PRACH-RACH-Info-LCR-r4 ::=
                                SEQUENCE {
   sync-UL-Info
                                     SYNC-UL-Info-r4,
   prach-DefinitionList
                                      SEQUENCE (SIZE (1..maxPRACH-FPACH)) OF
                                         PRACH-Definition-LCR-r4
}
PRACH-SystemInformation ::=
                                 SEQUENCE {
                                  PRACH-RACH-Info,
   prach-RACH-Info
   transportChannelIdentity
                                     TransportChannelIdentity,
                                     TransportFormatSet
   rach-TransportFormatSet
                                                                        OPTIONAL.
                                                                        OPTIONAL,
   rach-TFCS
                                     TFCS
                                     PRACH-Partitioning
   prach-Partitioning
                                                                        OPTIONAL,
   persistenceScalingFactorList
                                     PersistenceScalingFactorList
                                                                        OPTIONAL,
   ac-To-ASC-MappingTable
                                     AC-To-ASC-MappingTable
                                                                        OPTIONAL,
   modeSpecificInfo
                                      CHOICE {
       fdd
                                      SEQUENCE {
                                         PrimaryCPICH-TX-Power
          primaryCPICH-TX-Power
                                                                        OPTIONAL,
                                             ConstantValue
PRACH-PowerOffset
           constantValue
                                                                        OPTIONAL,
           prach-PowerOffset
                                                                        OPTIONAL,
           rach-TransmissionParameters
                                             RACH-TransmissionParameters OPTIONAL,
                                             AICH-Info
           aich-Info
                                         NULL
       t.dd
```

```
}
}
PRACH-SystemInformation-r7 ::=
                                  SEQUENCE {
                                    PRACH-RACH-Info-r7,
    prach-RACH-Info
    transportChannelIdentity
                                         TransportChannelIdentity,
    rach-TransportFormatSet
                                        TransportFormatSet
                                                                             OPTIONAL,
                                       TFCS
    rach-TFCS
                                                                             OPTIONAL,
    prach-Partitioning
                                       PRACH-Partitioning-r7
                                                                             OPTIONAL,
    persistenceScalingFactorList
ac-To-ASC-MappingTable
                                        PersistenceScalingFactorList
                                                                              OPTIONAL,
    ac-To-ASC-MappingTable
                                        AC-To-ASC-MappingTable
                                                                             OPTIONAL,
    modeSpecificInfo
                                        CHOICE {
        fdd
                                            SEQUENCE {
            primaryCPICH-TX-Power
                                                                            OPTIONAL,
                                               PrimaryCPICH-TX-Power
                                                ConstantValue
PRACH-PowerOffset
            constantValue
                                                                             OPTIONAL,
            prach-PowerOffset
                                                                             OPTIONAL,
                                               RACH-TransmissionParameters OPTIONAL,
            rach-TransmissionParameters
            aich-Info
                                                 AICH-Info
                                                                              OPTIONAL
        },
        tdd
                                             NULL
    }
}
PRACH-SystemInformation-LCR-r4 ::= SEQUENCE {
    prach-RACH-Info-LCR PRACH-RACH-Info-LCR-r4, rach-TransportFormatSet-LCR prach-Partitioning-LCR PRACH-Partitioning-LCR-r4
                                                                         OPTIONAL,
                                                                        OPTIONAL
}
PRACH-SystemInformationList ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                         PRACH-SystemInformation
PRACH-SystemInformationList-r7 ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                         PRACH-SystemInformation-r7
PRACH-SystemInformationList-LCR-r4 ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                            PRACH-SystemInformation-LCR-r4
                                     INTEGER (1..64)
PreambleRetransMax ::=
PreambleScramblingCodeWordNumber ::= INTEGER (0..15)
PreDefPhyChConfiguration ::= SEQUENCE {
    ul-DPCH-InfoPredef
                                        UL-DPCH-InfoPredef,
    ul-DPCH-InfoPredef UL-DPCH-InfoPredef, dl-CommonInformationPredef DL-CommonInformationPredef OPTIONAL
PrimaryCCPCH-Info ::=
                                    CHOICE {
                                      SEQUENCE {
        tx-DiversityIndicator
                                            BOOLEAN
                                        SEQUENCE {
    tdd.
        -- syncCase should be ignored for 1.28Mcps TDD mode
        syncCase
                                             CHOICE {
            syncCase1
                                                 SEQUENCE {
                timeslot
                                                     TimeslotNumber
            syncCase2
                                                 SEQUENCE {
                timeslotSync2
                                                     TimeslotSync2
                                                                              OPTIONAL,
        cellParametersID
                                            CellParametersID
                                                                              OPTIONAL,
        sctd-Indicator
                                             BOOLEAN
    }
}
PrimaryCCPCH-Info-r4 ::=
                                    CHOICE {
                                        SEQUENCE {
    fdd
                                            BOOLEAN
        tx-DiversityIndicator
    tdd
                                         SEQUENCE {
        tddOption
                                            CHOICE {
            tdd384
                                                 SEOUENCE {
                                                     CHOICE {
                syncCase
                    syncCasel
                                                         SEQUENCE {
                                                             TimeslotNumber
                        timeslot
                    syncCase2
                                                         SEQUENCE {
```

```
timeslotSync2
                                                       TimeslotSync2
                  }
              }
                                                                       OPTIONAL
           tdd128
                                             SEQUENCE {
             tstd-Indicator
                                               BOOLEAN
       cellParametersID
                                       CellParametersID
                                                                OPTIONAL,
       sctd-Indicator
                                         BOOLEAN
   }
}
PrimaryCCPCH-Info-r7 ::=
                                     SEQUENCE {
       tx-DiversityIndicator
                                       BOOLEAN
                                     SEQUENCE {
   tdd
                                         CHOICÈ {
       tddOption
                                             SEQUENCE {
           tdd384
               syncCase
                                                CHOICE {
                  syncCase1
                                                    SEQUENCE {
                     timeslot
                                                        TimeslotNumber
                                                    SEQUENCE {
                  syncCase2
                     timeslotSync2
                                                        TimeslotSync2
               }
                                                                      OPTIONAL
           t.dd768
                                     SEQUENCE {
                                             CHOICE {
               syncCase
                  syncCase1
                                                SEQUENCE {
                     timeslot
                                                    TimeslotNumber
                  syncCase2
                                                    SEQUENCE {
                      timeslotSync2
                                                        TimeslotSync2
              }
                                                                      OPTIONAL
                                             SEQUENCE {
               tstd-Indicator
                                                BOOLEAN
       cellParametersID
                                         CellParametersID
                                                             OPTIONAL,
       sctd-Indicator
                                         BOOLEAN
PrimaryCCPCH-Info-LCR-r4 ::=
                                 SEQUENCE {
                                  BOOLEAN,
  tstd-Indicator
                                     CellParametersID
   cellParametersID
                                                                  OPTIONAL,
   sctd-Indicator
                                     BOOLEAN
}
-- For 1.28Mcps TDD, the following IE includes elements for the PCCPCH Info additional to those
-- in PrimaryCCPCH-Info
PrimaryCCPCH-Info-LCR-r4-ext ::=
                                 SEQUENCE {
   tstd-Indicator
                                     BOOLEAN
                                  SEQUENCE {
PrimaryCCPCH-InfoPost ::=
   syncCase
                                     CHOICE {
                                       SEQUENCE {
      syncCase1
         timeslot
                                            TimeslotNumber
       syncCase2
                                        SEQUENCE {
          timeslotSync2
                                             TimeslotSync2
   cellParametersID
                                     CellParametersID,
   sctd-Indicator
                                     BOOLEAN
}
PrimaryCCPCH-InfoPostTDD-LCR-r4 ::= SEQUENCE {
   tstd-Indicator
                                     BOOLEAN,
                                     CellParametersID,
   cellParametersID
   sctd-Indicator
                                     BOOLEAN
}
```

```
PrimaryCCPCH-TX-Power ::=
                                 INTEGER (6..43)
                                 SEOUENCE {
PrimaryCPICH-Info ::=
   primaryScramblingCode
                                    PrimaryScramblingCode
                                INTEGER (-10..50)
PrimaryCPICH-TX-Power ::=
PrimaryScramblingCode ::=
                                 INTEGER (0..511)
PuncturingLimit ::=
                                 ENUMERATED {
                                     pl0-40, pl0-44, pl0-48, pl0-52, pl0-56,
                                     pl0-60, pl0-64, pl0-68, pl0-72, pl0-76,
                                     pl0-80, pl0-84, pl0-88, pl0-92, pl0-96, pl1 }
                                 SEQUENCE {
PUSCH-CapacityAllocationInfo ::=
   pusch-Allocation
                                    CHOICE {
       pusch-AllocationPending
                                       NULL.
       pusch-AllocationAssignment
                                         SEQUENCE {
           pusch-AllocationPeriodInfo
                                            AllocationPeriodInfo,
           pusch-PowerControlInfo
                                            UL-TargetSIR
                                                                     OPTIONAL,
           configuration
                                            CHOICE {
              old-Configuration
                                               SEQUENCE {
                                                    TFCS-IdentityPlain
                  tfcs-TD
                                                                             DEFAULT 1.
                  pusch-Identity
                                                    PUSCH-Identity
               new-Configuration
                                               SEQUENCE {
                                                   PUSCH-Info.
                  pusch-Info
                                                    PUSCH-Identity OPTIONAL
                  pusch-Identity
           }
       }
   }
}
PUSCH-CapacityAllocationInfo-r4 ::= SEQUENCE {
       pusch-AllocationPending NULL
   pusch-Allocation
                                        NULL,
       pusch-AllocationAssignment
                                         SEQUENCE {
           pusch-AllocationPeriodInfo
                                            AllocationPeriodInfo,
           pusch-PowerControlInfo
                                            PUSCH-PowerControlInfo-r4 OPTIONAL,
           configuration
                                            CHOICE {
               old-Configuration
                                                SEQUENCE {
                  tfcs-ID
                                                    TFCS-IdentityPlain
                                                                          DEFAULT 1,
                  pusch-Identity
                                                    PUSCH-Identity
               new-Configuration
                                               SEQUENCE {
                  pusch-Info
                                                   PUSCH-Info-r4,
                                                    PUSCH-Identity OPTIONAL
                  pusch-Identity
          }
       }
   }
}
PUSCH-CapacityAllocationInfo-r7 ::= SEQUENCE {
   pusch-Allocation
                            CHOICE {
                                     NULÌ,
       pusch-AllocationPending
       pusch-AllocationAssignment
                                         SEQUENCE {
                                        AllocationPeriodInfo,
           pusch-AllocationPeriodInfo
           pusch-PowerControlInfo
                                            PUSCH-PowerControlInfo-r7 OPTIONAL,
                                            CHOICE {
           configuration
               old-Configuration
                                               SEQUENCE {
                  tfcs-ID
                                                    TFCS-IdentityPlain DEFAULT 1,
                                                    PUSCH-Identity
                  pusch-Identity
               },
                                               SEQUENCE {
              new-Configuration
                  pusch-Info
                                                  PUSCH-Info-VHCR,
                  pusch-Identity
                                                    PUSCH-Identity
                                                                     OPTIONAL
              }
          }
       }
}
                                INTEGER (1..hiPUSCHidentities)
PUSCH-Identity ::=
```

```
SEQUENCE {
PUSCH-Info ::=
                                       TFCS-IdentityPlain
   tfcs-ID
                                                                           DEFAULT 1,
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                           OPTIONAL,
   pusch-TimeslotsCodes
                                       UplinkTimeslotsCodes
                                                                           OPTIONAL
                                   SEQUENCE {
PUSCH-Info-r4 ::=
    tfcs-ID
                                       TFCS-IdentityPlain
                                                                          DEFAULT 1.
    commonTimeslotInfo
                                        CommonTimeslotInfo
                                                                           OPTIONAL,
    tddOption
                                        CHOICE {
                                           SEQUENCE {
       tdd384
           pusch-TimeslotsCodes
                                               UplinkTimeslotsCodes
                                                                         OPTIONAL
       tdd128
                                           SEQUENCE {
           pusch-TimeslotsCodes
                                               UplinkTimeslotsCodes-LCR-r4 OPTIONAL
    }
}
PUSCH-Info-VHCR ::=
                                   SEQUENCE {
                                    TFCS-IdentityPlain
                                                                           DEFAULT 1,
   tfcs-ID
                                                                           OPTIONAL,
    commonTimeslotInfo
                                       CommonTimeslotInfo
    pusch-TimeslotsCodes-VHCR
                                       UplinkTimeslotsCodes-VHCR
                                                                           OPTIONAL
PUSCH-Info-LCR-r4 ::=
                                   SEQUENCE {
   tfcs-ID
                                       TFCS-IdentityPlain
                                                                           DEFAULT 1,
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                           OPTIONAL,
    pusch-TimeslotsCodes
                                       UplinkTimeslotsCodes-LCR-r4
                                                                           OPTIONAL
}
PUSCH-PowerControlInfo-r4 ::=
                                  SEQUENCE {
    -- The IE ul-TargetSIR corresponds to PRX-PUSCHdes for 1.28Mcps TDD \,
    -- Actual value PRX-PUSCHdes = (value of IE "ul-TargetSIR" - 120)
    ul-TargetSIR
                                       UL-TargetSIR,
    tddOption
                                       CHOICE {
       tdd384
                                           NULL,
       tdd128
                                           SEQUENCE {
           tpc-StepSize
                                               TPC-StepSizeTDD
                                                                          OPTIONAL
    }
}
PUSCH-PowerControlInfo-r7 ::= SEQUENCE {
    -- The IE ul-TargetSIR corresponds to PRX-PUSCHdes for 1.28Mcps TDD
    -- Actual value PRX-PUSCHdes = (value of IE "ul-TargetSIR" - 120)
                                       UL-TargetSIR,
    ul-TargetSIR
                                       CHOICE {
    tddOption
       tdd384
                                           NULL,
       tdd768
                                           NULL,
                                           SEQUENCE {
       tdd128
           tpc-StepSize
                                               TPC-StepSizeTDD
                                                                          OPTIONAL
    }
}
PUSCH-SysInfo ::=
                                   SEQUENCE {
                                       PUSCH-Identity,
   pusch-Identity
   pusch-Info
                                       PUSCH-Info,
    usch-TFS
                                       TransportFormatSet
                                                                           OPTIONAL,
   usch-TFCS
                                       TFCS
                                                                           OPTIONAL
}
PUSCH-SysInfo-VHCR ::=
                                       SEQUENCE {
   pusch-Identity
                                       PUSCH-Identity,
    pusch-Info-VHCR
                                       PUSCH-Info-VHCR,
   usch-TransportChannelsInfo
                                       USCH-TransportChannelsInfo
                                                                           OPTIONAL,
                                       TFCS
                                                                           OPTIONAL
    usch-TFCS
}
PUSCH-SysInfo-HCR-r5 ::=
                                           SEQUENCE {
                                       PUSCH-Identity,
   pusch-Identity
                                       PUSCH-Info,
    pusch-Info
    usch-TransportChannelsInfo
                                       USCH-TransportChannelsInfo
                                                                           OPTIONAL,
    usch-TFCS
                                                                           OPTIONAL
}
```

```
PUSCH-SysInfo-LCR-r4 ::=
                                 SEQUENCE {
   pusch-Identity
                                      PUSCH-Identity,
   pusch-Info
                                       PUSCH-Info-LCR-r4,
   usch-TFS
                                                                          OPTIONAL,
                                       TransportFormatSet
   usch-TFCS
                                       TFCS
                                                                          OPTIONAL
}
                                 SEQUENCE (SIZE (1..maxPUSCH)) OF
PUSCH-SysInfoList ::=
                                      PUSCH-SysInfo
PUSCH-SysInfoList-HCR-r5 ::=
                                      SEQUENCE (SIZE (1..maxPUSCH)) OF PUSCH-SysInfo-HCR-r5
PUSCH-SysInfoList-LCR-r4 ::= SEQUENCE (SIZE (1..maxPUSCH)) OF
                                       PUSCH-SysInfo-LCR-r4
                                  SEQUENCE (SIZE (1..maxPUSCH)) OF
PUSCH-SysInfoList-SFN ::=
                                       SEQUENCE {
   pusch-SysInfo
                                           PUSCH-SysInfo,
                                                                         OPTIONAL
   sfn-TimeInfo
                                           SFN-TimeInfo
}
PUSCH-SysInfoList-SFN-HCR-r5 ::=
                                          SEQUENCE (SIZE (1..maxPUSCH)) OF
                                       SEQUENCE {
   pusch-SysInfo
                                          PUSCH-SysInfo-HCR-r5,
                                           SFN-TimeInfo
   sfn-TimeInfo
                                                                         OPTIONAL
}
                                 SEQUENCE (SIZE (1..maxPUSCH)) OF
PUSCH-SysInfoList-SFN-LCR-r4 ::=
                                       SEQUENCE {
                                           PUSCH-SysInfo-LCR-r4,
   pusch-SysInfo
   sfn-TimeInfo
                                           SFN-TimeInfo
                                                                          OPTIONAL
}
PUSCH-SysInfoList-SFN-VHCR ::= SEQUENCE (SIZE (1..maxPUSCH)) OF
                                      SEQUENCE {
   pusch-SysInfo-VHCR
                                          PUSCH-SysInfo-VHCR,
   sfn-TimeInfo
                                           SFN-TimeInfo
                                                                         OPTIONAL
}
RACH-TransmissionParameters ::= SEQUENCE {
                                       INTEGER (1..32),
   mmax
   nb01Min
                                       NB01.
   nb01Max
                                       NB01
ReducedScramblingCodeNumber ::=
                                   INTEGER (0..8191)
RepetitionPeriodAndLength ::=
                                CHOICE {
   repetitionPeriod1
    -- repetitionPeriod2 could just as well be NULL also.
                                      INTEGER (1..1),
   repetitionPeriod2
                                       INTEGER (1..3),
   repetitionPeriod4
   repetitionPeriod8
                                      INTEGER (1..7),
                                       INTEGER (1..15),
   repetitionPeriod16
                                      INTEGER (1..31),
   repetitionPeriod32
   repetitionPeriod64
                                      INTEGER (1..63)
RepetitionPeriodLengthAndOffset ::= CHOICE {
   repetitionPeriod1
                                      NIII.I.
   repetitionPeriod2
                                       SEQUENCE {
       length
                                           NULL,
                                           INTEGER (0..1)
       offset
   repetitionPeriod4
                                       SEQUENCE {
       length
                                           INTEGER (1..3),
       offset
                                           INTEGER (0..3)
                                       SEQUENCE {
   repetitionPeriod8
                                           INTEGER (1..7),
       length
                                           INTEGER (0..7)
       offset
   repetitionPeriod16
                                       SEQUENCE {
       length
                                           INTEGER (1..15),
       offset
                                           INTEGER (0..15)
   repetitionPeriod32
                                       SEQUENCE {
                                           INTEGER (1..31),
       length
```

```
offset
                                         INTEGER (0..31)
    },
   repetitionPeriod64
                                    SEQUENCE {
                                          INTEGER (1..63),
       length
       offset
                                          INTEGER (0..63)
}
MaxTFCI-Field2Value,
                                      SF-PDSCH,
   codeNumber
                                      CodeNumberDSCH,
   multiCodeInfo
                                     MultiCodeInfo
}
ReplacedPDSCH-CodeInfoList ::= SEQUENCE (SIZE (1..maxTFCI-2-Combs)) OF
                                     ReplacedPDSCH-CodeInfo
RepPerLengthOffset-PICH ::= CHOICE {
   rpp4-2
                                      INTEGER (0..3),
                                      INTEGER (0..7),
   rpp8-2
   rpp8-4
                                      INTEGER (0..7),
   rpp16-2
                                      INTEGER (0..15),
                                     INTEGER (0..15),
   rpp16-4
                                      INTEGER (0..31),
INTEGER (0..31),
   rpp32-2
   rpp32-4
   rpp64-2
                                     INTEGER (0..63),
   rpp64-4
                                      INTEGER (0..63)
}
                                CHOICE {
RepPerLengthOffset-MICH ::=
                                     INTEGER (0..3),
   rpp4-2
   rpp8-2
                                      INTEGER (0..7),
                                      INTEGER (0..7),
   rpp8-4
   rpp16-2
                                     INTEGER (0..15),
   rpp16-4
                                      INTEGER (0..15),
                                     INTEGER (0..31),
   rpp32-2
                                      INTEGER (0..31),
INTEGER (0..63),
   rpp32-4
   rpp64-2
   rpp64-4
                                     INTEGER (0..63)
}
   trictedTrCH ::= SEQUENCE {
    dl-restrictedTrCh-Type DL-TrCH-Type,
    restrictedDL-TrCH-Identity TransportChannelIdentity,
    allowedTFIList
RestrictedTrCH ::=
}
RestrictedTrCH-InfoList ::= SEQUENCE (SIZE(1..maxTrCH)) OF
                                    RestrictedTrCH
RL-AdditionInformation ::=
                                 SEOUENCE {
   primaryCPICH-Info
                                  PrimaryCPICH-Info,
                                      DL-DPCH-InfoPerRL,
   dl-DPCH-InfoPerRL
   -- dummy and dummy2 are not used in this version of specification
    -- and the IEs should be ignored.
   dummy
                                      BOOLEAN,
    dummy2
                                     SCCPCH-InfoForFACH
                                                                        OPTIONAL
}
PrimaryCPICH-Info,
   primaryCPICH-Info
   cell-Id
                                      CellIdentity
                                                                        OPTIONAL,
   dl-dpchInfo
                                     CHOICE {
                                      DL-DPCH-InfoPerRL-r5,
       dl-DPCH-InfoPerRL
       dl-FDPCH-InfoPerRL
                                        DL-FDPCH-InfoPerRL-r6
    e-HICH-Information
                                    E-HICH-Information
                                                                        OPTIONAL,
    e-RGCH-Information
                                     E-RGCH-Information
                                                                        OPTIONAL
}
RL-AdditionInformationList ::= SEQUENCE (SIZE (1..maxRL-1)) OF
                                     RL-AdditionInformation
RL-AdditionInformationList-r6 ::= SEQUENCE (SIZE (1..maxRL-1)) OF
                                      RL-AdditionInformation-r6
                                  SEQUENCE (SIZE (1..maxRL)) OF
RL-IdentifierList ::=
```

PrimaryCPICH-Info

```
RL-RemovalInformationList ::=
                                   SEQUENCE (SIZE (1..maxRL)) OF
                                       PrimaryCPICH-Info
                                    ENUMERATED {
RPP ::=
                                       mode0, mode1 }
S-Field ::=
                                    ENUMERATED {
                                       elbit, e2bits }
                                   ENUMERATED {
SCCPCH-ChannelisationCode ::=
                                       cc16-1, cc16-2, cc16-3, cc16-4,
                                        cc16-5, cc16-6, cc16-7, cc16-8,
                                        cc16-9, cc16-10, cc16-11, cc16-12,
                                        cc16-13, cc16-14, cc16-15, cc16-16 }
SCCPCH-ChannelisationCode-VHCR ::= ENUMERATED {
                                       cc32-1, cc32-2, cc32-3, cc32-4,
                                        cc32-5, cc32-6, cc32-7, cc32-8,
                                        cc32-9, cc32-10, cc32-11, cc32-12,
                                        cc32-13, cc32-14, cc32-15, cc32-16,
                                        cc32-17, cc32-18, cc32-19, cc32-20,
                                       cc32-21, cc32-22, cc32-23, cc32-24,
                                        cc32-25, cc32-26, cc32-27, cc32-28,
                                        cc32-29, cc32-30, cc32-31, cc32-32 }
SCCPCH-ChannelisationCodeList ::= SEQUENCE (SIZE (1..16)) OF
                                       SCCPCH-ChannelisationCode
SCCPCH-ChannelisationCodeList-VHCR ::= SEQUENCE (SIZE (1..32)) OF
                                       SCCPCH-ChannelisationCode-VHCR
SCCPCH-InfoForFACH ::=
                                   SEQUENCE {
                                       SecondaryCCPCH-Info,
    secondaryCCPCH-Info
    tfcs
                                       TFCS,
   modeSpecificInfo
                                   CHOICE {
                                       SEQUENCE {
       fdd
                                              FACH-PCH-InformationList,
           fach-PCH-InformationList
           sib-ReferenceListFACH
                                               SIB-ReferenceListFACH
                                      SEQUENCE {
        t.dd
           fach-PCH-InformationList
                                               FACH-PCH-InformationList
        }
    }
}
SCCPCH-InfoForFACH-r4 ::=
                                       SEOUENCE {
    secondaryCCPCH-Info
                                       SecondaryCCPCH-Info-r4,
    fach-PCH-InformationList
                                       FACH-PCH-InformationList,
                                 CHOICE {
   modeSpecificInfo
                                     SEQUENCE {
       fdd
                                        SIB-ReferenceListFACH
           sib-ReferenceListFACH
       },
                                       NULL
       tdd
    }
}
                                   SEQUENCE {
SCCPCH-SystemInformation ::=
    secondaryCCPCH-Info
                                       SecondaryCCPCH-Info,
    tfcs
                                       TFCS
                                                                           OPTIONAL,
    fach-PCH-InformationList
                                       FACH-PCH-InformationList
                                                                           OPTIONAL,
                                       PICH-Info
                                                                           OPTIONAL
   pich-Info
}
SCCPCH-SystemInformation-LCR-r4-ext ::= SEQUENCE {
   secondaryCCPCH-LCR-Extensions SecondaryCCPCH-Info-LCR-r4-ext,
    -- pich-Info in the SCCPCH-SystemInformation IE shall be absent,
    -- and instead the following used.
                                   PICH-Info-LCR-r4
                                                                           OPTIONAL
   pich-Info
}
SCCPCH-SystemInformation-r7 ::= SEQUENCE {
    secondaryCCPCH-Info
                                       SecondaryCCPCH-Info-r7,
                                                                          OPTIONAL,
    fach-PCH-InformationList
                                       FACH-PCH-InformationList
                                                                           OPTIONAL,
    pich-Info
                                       PICH-Info-r7
                                                                           OPTIONAL
```

```
}
SCCPCH-SystemInformationList ::=
                                  SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                        SCCPCH-SystemInformation
SCCPCH-SystemInformationList-r7 ::= SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                        SCCPCH-SystemInformation-r7
-- SCCPCH-SystemInformationList-LCR-r4-ext includes elements additional to those in
-- SCCPCH-SystemInformationList for the 1.28 \text{Mcps} TDD. The order of the IEs
-- indicates which SCCPCH-SystemInformation-LCR-r4-ext IE extends which
-- SCCPCH-SystemInformation IE.
SCCPCH-SystemInformationList-LCR-r4-ext ::= SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                                SCCPCH-SystemInformation-LCR-r4-ext
-- The SCCPCH-SystemInformation-MBMS-r6 is used for an S-CCPCH dedicated for MBMS purposes.
SCCPCH-SystemInformation-MBMS-r6 ::= SEQUENCE {
    secondaryCCPCHInfo-MBMS
                                        SecondaryCCPCHInfo-MBMS-r6,
    transportFormatCombinationSet
    fachCarryingMCCH
                                        SEQUENCE {
       mcch-transportFormatSet
                                           TransportFormatSet,
        mcch-ConfigurationInfo
                                            MBMS-MCCH-ConfigurationInfo-r6
    fachCarryingMTCH-List
                                      MBMS-FACHCarryingMTCH-List
                                                                       OPTIONAL.
    -- If schedulingInformation is provided
       hCarryingMSCH SEQUENCE {
msch-transportFormatSet TransportFormatSet,
msch-ConfigurationInfo MBMS-MSCH-ConfigurationInfo
    fachCarryingMSCH
                                            MBMS-MSCH-ConfigurationInfo-r6
           OPTIONAL
}
-- The SCCPCH-SystemInformation-MBMS-r7 is used for an S-CCPCH dedicated for MBMS purposes.
SCCPCH-SystemInformation-MBMS-r7 ::= SEQUENCE {
                                       SecondaryCCPCHInfo-MBMS-r7,
    secondaryCCPCHInfo-MBMS
    transportFormatCombinationSet
                                       TFCS,
    fachCarryingMCCH
                                        SEQUENCE {
                                        TransportFormatSet,
       mcch-transportFormatSet
       mcch-ConfigurationInfo
                                            MBMS-MCCH-ConfigurationInfo-r6
    fachCarryingMTCH-List
                                       MBMS-FACHCarryingMTCH-List
                                                                           OPTIONAL,
    -- If schedulingInformation is provided
                               SEQUENCE {
    fachCarryingMSCH
       msch-transportFormatSet
                                            TransportFormatSet,
        msch-ConfigurationInfo
                                            MBMS-MSCH-ConfigurationInfo-r6
           OPTIONAL
}
ScramblingCodeChange ::=
                                   ENUMERATED {
                                        codeChange, noCodeChange }
                                    ENUMERATED {
ScramblingCodeType ::=
                                        shortSC
                                        longSC }
SecondaryCCPCH-Info ::=
                                    SEQUENCE {
                                    CHOICE {
   modeSpecificInfo
       fdd
                                       SEQUENCE {
            -- dummyl is not used in this version of the specification and should be ignored.
                                            PCPICH-UsageForChannelEst,
            dummv1
            -- dummy2 is not used in this version of the specification. It should not
            -- be sent and if received it should be ignored.
            dummy2
                                            SecondaryCPICH-Info
                                                                             OPTIONAL,
            secondaryScramblingCode
                                            SecondaryScramblingCode
                                                                            OPTIONAL,
                                            BOOLEAN,
            sttd-Indicator
                                            SF256-AndCodeNumber,
            sf-AndCodeNumber
            pilotSymbolExistence
                                            BOOLEAN,
            tfci-Existence
                                            BOOLEAN,
            positionFixedOrFlexible
                                            PositionFixedOrFlexible,
                                                                             DEFAULT 0
            timingOffset
                                            TimingOffset
        },
                                       SEQUENCE {
             -- TABULAR: the offset is included in CommonTimeslotInfoSCCPCH
            {\tt commonTimeslotInfo} \qquad \qquad {\tt CommonTimeslotInfoSCCPCH},
            individualTimeslotInfo
                                           IndividualTimeslotInfo,
            channelisationCode
                                            SCCPCH-ChannelisationCodeList
        }
    }
}
```

```
SEQUENCE {
SecondaryCCPCH-Info-r4 ::=
   modeSpecificInfo
                                  CHOICE {
       fdd
                                     SEQUENCE {
                                       SecondaryScramblingCode
           secondaryScramblingCode
                                                                         OPTIONAL,
           sttd-Indicator
                                          BOOLEAN,
           sf-AndCodeNumber
                                          SF256-AndCodeNumber,
                                          BOOLEAN,
           pilotSymbolExistence
           tfci-Existence
                                          BOOLEAN,
           positionFixedOrFlexible
                                           PositionFixedOrFlexible,
           timingOffset
                                          TimingOffset
                                                                          DEFAULT 0
       },
                                      SEQUENCE {
       +44
            -- TABULAR: the offset is included in CommonTimeslotInfoSCCPCH
           commonTimeslotInfo
                                          CommonTimeslotInfoSCCPCH,
           tddOption
                                          CHOICE {
               tdd384
                                              SEQUENCE {
                   individualTimeslotInfo
                                                 IndividualTimeslotInfo
               tdd128
                                              SEQUENCE {
                   individualTimeslotInfo
                                                  IndividualTimeslotInfo-LCR-r4
           channelisationCode
                                   SCCPCH-ChannelisationCodeList
       }
   }
}
SecondaryCCPCH-Info-r7 ::=
                              SEQUENCE {
   modeSpecificInfo
                               CHOICE {
       fdd
                                    SEQUENCE {
           secondaryScramblingCode
                                        SecondaryScramblingCode
                                                                        OPTIONAL,
                                          BOOLEAN,
           sttd-Indicator
           sf-AndCodeNumber
                                          SF256-AndCodeNumber,
           pilotSymbolExistence
                                          BOOLEAN,
           tfci-Existence
                                          BOOLEAN,
                                          PositionFixedOrFlexible,
           positionFixedOrFlexible
           timingOffset
                                          TimingOffset
                                                                          DEFAULT 0
                                      SEQUENCE {
            -- TABULAR: the offset is included in CommonTimeslotInfoSCCPCH
           commonTimeslotInfo
                                          CommonTimeslotInfoSCCPCH,
           tddOption
                                           CHOICE {
               tdd384
                                              SEQUENCE {
                   individualTimeslotInfo
                                                 IndividualTimeslotInfo,
                   channelisationCode
                                                  SCCPCH-ChannelisationCodeList
               tdd768
                                             SEQUENCE {
                                              IndividualTimeslotInfo-VHCR,
SCCPCH-ChannelisationCodeList-VHCR
                   individualTimeslotInfo
                   channelisationCode
               tdd128
                                              SEQUENCE {
                                               IndividualTimeslotInfo-LCR-r4,
                   individualTimeslotInfo
                   channelisationCode
                                                  SCCPCH-ChannelisationCodeList
               }
           }
   }
}
SecondaryCCPCH-Info-LCR-r4-ext ::= SEQUENCE {
   individualTimeslotLCR-Ext
                                  IndividualTimeslotInfo-LCR-r4-ext
SecondaryCCPCHInfo-MBMS-r6 ::=
                                   SEQUENCE {
   modeSpecificInfo
                                   CHOICE {
       fdd
                                       SEQUENCE {
                                          {\tt SecondaryScramblingCode}
           {\tt secondaryScramblingCode}
                                                                          OPTIONAL.
           sttd-Indicator
                                           BOOLEAN,
           sf-AndCodeNumber
                                           SF256-AndCodeNumber,
           timingOffset
                                          TimingOffset
                                                                          DEFAULT 0
       tdd384
                                      DownlinkTimeslotsCodes,
       tdd128
                                       DownlinkTimeslotsCodes-LCR-r4
   }
}
SecondaryCCPCHInfo-MBMS-r7 ::=
                                  SEQUENCE {
```

```
SEQUENCE {

SEQUENCE {

SecondaryScramblingCode SecondaryScramblingCode OPTIONAL,

std-Indicator BOOLEAN,

sf-AndCodeNumber SF256-AndCodeNumber timingOffset
   modeSpecificInfo CHOICE {
        fdd
                                       DownlinkTimeslotsCodes,
        t.dd384
        tdd768
                                         DownlinkTimeslotsCodes-VHCR,
        tdd128
                                          DownlinkTimeslotsCodes-LCR-r4
    }
}
   ondaryCPICH-Info ::= SEQUENCE {
secondaryDL-ScramblingCode SecondaryScramblingCode ChannelisationCode256
SecondaryCPICH-Info ::=
                                                                               OPTIONAL,
}
SecondaryScramblingCode ::=
                                    INTEGER (1..15)
SecondInterleavingMode ::=
                                    ENUMERATED {
                                         frameRelated, timeslotRelated }
-- SF256-AndCodeNumber encodes both "Spreading factor" and "Code Number"
SF256-AndCodeNumber ::= CHOICE {
   sf4
                                         INTEGER (0..3),
   sf8
                                          INTEGER (0..7),
   sf16
                                          INTEGER (0..15),
                                          INTEGER (0..31),
   sf32
                                          INTEGER (0..63),
   sf64
    sf128
                                          INTEGER (0..127),
                                         INTEGER (0..255)
   sf256
}
-- SF512-AndCodeNumber encodes both "Spreading factor" and "Code Number"
SF512-AndCodeNumber ::= CHOICE {
   sf4
                                         INTEGER (0..3),
                                         INTEGER (0..7),
INTEGER (0..15),
   sf8
   sf16
   sf32
                                         INTEGER (0..31),
   sf64
                                          INTEGER (0..63),
                                          INTEGER (0..127),
   sf128
                                          INTEGER (0..255),
   sf256
    sf512
                                          INTEGER (0..511)
}
-- SF512-AndPilot encodes both "Spreading factor" and "Number of bits for Pilot bits"
SF512-AndPilot ::=
                                  CHOICE {
    sfd4
                                          NULL,
   sfd8
   sfd16
                                          NULL,
   sfd32
                                         NULL,
   sfd64
                                         NULL,
                                         PilotBits128,
   sfd128
   sfd256
                                         PilotBits256,
                                         NULL
   sfd512
SF-PDSCH ::=
                                      ENUMERATED {
                                         sfp4, sfp8, sfp16, sfp32,
                                          sfp64, sfp128, sfp256 }
                                      ENUMERATED {
SF-PRACH ::=
                                        sfpr32, sfpr64, sfpr128, sfpr256 }
  activationTimeSFN
physChDuration
SFN-TimeInfo ::=
                                      SEQUENCE {
                                         INTEGER (0..4095),
                                     DurationTimeInfo
}
-- actual scheduling value = 2^{(\text{signalled value }+1)} and is the periodicity of sending special burst frames
SpecialBurstScheduling ::=
                                         INTEGER (0..7)
SpreadingFactor ::=
                                     ENUMERATED {
                                         sf4, sf8, sf16, sf32,
                                          sf64, sf128, sf256 }
SRB-delav ::=
                                     INTEGER (0..7)
```

```
SSDT-CellIdentity ::=
                                    ENUMERATED {
                                        ssdt-id-a, ssdt-id-b, ssdt-id-c,
                                        ssdt-id-d, ssdt-id-e, ssdt-id-f,
                                        ssdt-id-g, ssdt-id-h }
SSDT-Information ::=
                                   SEQUENCE {
   s-Field
                                        S-Field,
    codeWordSet
                                        CodeWordSet
}
SSDT-Information-r4 ::=
                                   SEQUENCE {
   s-Field
                                        S-Field.
   codeWordSet
                                        CodeWordSet,
   ssdt-UL-r4
                                        SSDT-UL
                                                                                 OPTIONAL
}
SSDT-III. ::=
                                    ENUMERATED {
                                        ul, ul-AndDL }
SynchronisationParameters-r4 ::=
                                    SEQUENCE {
                                      BIT STRING {
   sync-UL-CodesBitmap
                                            code7(0),
                                             code6(1),
                                            code5(2),
                                             code4(3),
                                             code3(4),
                                             code2(5),
                                             code1(6),
                                            code0(7)
                                             } (SIZE (8)),
                                        FPACH-Info-r4,
    -- Actual value prxUpPCHdes = IE value - 120
    prxUpPCHdes
                                        INTEGER (0..62),
                                        SYNC-UL-Procedure-r4
                                                                                OPTIONAL
    sync-UL-Procedure
}
SYNC-UL-Procedure-r4 ::=
   NC-UL-Procedure-r4 ::=
max-SYNC-UL-Transmissions
                                   SEQUENCE {
                                    ENUMERATED { tr1, tr2, tr4, tr8 },
   powerRampStep
                                        INTEGER (0..3)
}
   C-UL-Info-r4 ::=
sync-UL-Codes-Bitmap
SYNC-UL-Info-r4 ::=
                                    SEQUENCE {
                                        BIT STRING {
                                             code7(0),
                                            code6(1),
                                            code5(2),
                                            code4(3),
                                             code3(4),
                                             code2(5),
                                            code1(6),
                                             code0(7)
   } ( SIZE (8)),
-- Actual value prxUpPCHdes = IE value - 120
                    INTEGER (0..62),
   prxUpPCHdes
                                        INTEGER (0..3),
   powerRampStep
   max-SYNC-UL-Transmissions
                                        ENUMERATED { tr1, tr2, tr4, tr8 } ,
   mmax
                                        INTEGER(1..32)
}
                                    ENUMERATED {
TDD-FPACH-CCode16-r4 ::=
                                        cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                        cc16-9, cc16-10, cc16-11, cc16-12,
                                        cc16-13, cc16-14, cc16-15, cc16-16 }
TDD-UL-Interference ::=
                                    INTEGER (-110..-52)
TDD-PICH-CCode ::=
                                    ENUMERATED {
                                        cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                        cc16-9, cc16-10, cc16-11, cc16-12,
                                        cc16-13, cc16-14, cc16-15, cc16-16 }
TDD768-PICH-CCode ::=
                                    ENUMERATED {
                                        cc32-1, cc32-2, cc32-3, cc32-4,
                                        cc32-5, cc32-6, cc32-7, cc32-8,
                                        cc32-9, cc32-10, cc32-11, cc32-12, cc32-13, cc32-14, cc32-15, cc32-16,
```

```
cc32-17, cc32-18, cc32-19, cc32-20,
                                         cc32-21, cc32-22, cc32-23, cc32-24, cc32-25, cc32-26, cc32-27, cc32-28,
                                         cc32-29, cc32-30, cc32-31, cc32-32 }
TDD-PRACH-CCode8 ::=
                                     ENUMERATED {
                                        cc8-1, cc8-2, cc8-3, cc8-4,
                                         cc8-5, cc8-6, cc8-7, cc8-8 }
TDD-PRACH-CCode16 ::=
                                     ENUMERATED {
                                        cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                         cc16-9, cc16-10, cc16-11, cc16-12,
                                         cc16-13, cc16-14, cc16-15, cc16-16 }
                                     ENUMERATED {
TDD-PRACH-CCode-LCR-r4 ::=
                                         cc4-1, cc4-2, cc4-3, cc4-4,
                                         cc8-1, cc8-2, cc8-3, cc8-4,
                                         cc8-5, cc8-6, cc8-7, cc8-8,
                                         cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                         cc16-9, cc16-10, cc16-11, cc16-12,
                                         cc16-13, cc16-14, cc16-15, cc16-16 }
TDD-PRACH-CCodeList ::=
                                     CHOICE {
                                        SEQUENCE (SIZE (1..8)) OF
   sf8
                                            TDD-PRACH-CCode8,
-- Channelisation codes cc16-9, cc16-10, cc16-11, cc16-12, cc16-13, cc16-14,
-- cc16-15 and cc16-16 shall not be used
                                         SEQUENCE (SIZE (1..8)) OF
    sf16
                                             TDD-PRACH-CCode16
TDD768-PRACH-CCode8 ::=
                                     ENUMERATED {
                                         cc8-1, cc8-2, cc8-3, cc8-4,
                                         cc8-5, cc8-6, cc8-7, cc8-8 }
TDD768-PRACH-CCode16 ::=
                                         ENUMERATED {
                                         cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                         cc16-9, cc16-10, cc16-11, cc16-12,
                                         cc16-13, cc16-14, cc16-15, cc16-16 }
TDD768-PRACH-CCode32 ::=
                                         ENUMERATED {
                                         cc32-1, cc32-2, cc32-3, cc32-4,
                                         cc32-5, cc32-6, cc32-7, cc32-8,
                                         cc32-9, cc32-10, cc32-11, cc32-12,
                                         cc32-13, cc32-14, cc32-15, cc32-16 }
TDD768-PRACH-CCodeList ::= CHOICE {
                                        SEQUENCE (SIZE (1..16)) OF
                                            TDD768-PRACH-CCode32,
-- Channelisation codes cc32-17, cc32-18, cc32-19, cc32-20, cc32-21, cc32-22,
-- cc32-23, cc32-24, cc32-25, cc32-26, cc32-27, cc32-28, cc32-29, cc32-30, cc32-31
-- and cc32-32 shall not be used
                                         SEQUENCE (SIZE (1..16)) OF
   sf16
                                            TDD768-PRACH-CCode16,
   sf8
                                         SEQUENCE (SIZE (1..8)) OF
                                             TDD768-PRACH-CCode8
}
TFC-ControlDuration ::=
                                     ENUMERATED {
                                        tfc-cd1, tfc-cd2, tfc-cd4, tfc-cd8,
                                         tfc-cd16, tfc-cd24, tfc-cd32, tfc-cd48, tfc-cd64, tfc-cd128,
                                         tfc-cd192, tfc-cd256, tfc-cd512 }
TFCI-Coding ::=
                                     ENUMERATED {
                                         tfci-bits-4, tfci-bits-8,
                                         tfci-bits-16, tfci-bits-32 }
TGCFN ::=
                                     INTEGER (0..255)
-- In TGD, value 270 represents "undefined" in the tabular description.
TGD ::=
                                     INTEGER (15..270)
TGL ::=
                                     INTEGER (1..14)
```

```
TGMP ::=
                                    ENUMERATED {
                                        tdd-Measurement, fdd-Measurement,
                                        gsm-CarrierRSSIMeasurement,
                                        gsm-initialBSICIdentification, gsmBSICReconfirmation,
                                        multi-carrier }
                                    SEQUENCE {
TGP-Sequence ::=
                                        TGPSI,
    tgpsi
    tgps-Status
                                        CHOICE {
       activate
                                            SEQUENCE {
          tgcfn
                                                TGCFN
       deactivate
                                            NULL
    tgps-ConfigurationParams
                                       TGPS-ConfigurationParams
                                                                           OPTIONAL
}
TGPS-Reconfiguration-CFN ::=
                                   INTEGER (0..255)
TGP-SequenceList ::=
                                    SEQUENCE (SIZE (1..maxTGPS)) OF
                                        TGP-Sequence
                                    SEQUENCE {
TGP-SequenceShort ::=
    tgpsi
                                        TGPSI,
    tgps-Status
                                        CHOICE {
                                           SEQUENCE {
       activate
          tgcfn
                                               TGCFN
       deactivate
                                            NULL
    }
}
TGPL ::=
                                    INTEGER (1..144)
-- TABULAR: In TGPRC, value 0 represents "infinity" in the tabular description.
                                    INTEGER (0..511)
                                    SEQUENCE {
TGPS-ConfigurationParams ::=
    tgmp
                                        TGMP.
    tgprc
                                        TGPRC,
    tgsn
                                        TGSN,
    tgl1
                                        TGL.
                                                                            OPTIONAL.
    tq12
                                        TGL
    tgd
                                        TGD
                                       TGPL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it shall be ignored.
   dummy
                                    TGPL
                                                                       OPTIONAL.
                                        RPP,
   itp
                                        ITP,
    -- TABULAR: Compressed mode method is nested inside UL-DL-Mode
   ul-DL-Mode
                                        UL-DL-Mode,
   dl-FrameType
                                        DL-FrameType,
   deltaSIR1
                                        DeltaSIR,
   deltaSIRAfter1
                                       DeltaSIR,
                                                                            OPTIONAL,
   deltaSIR2
                                       DeltaSIR
   {\tt deltaSIRAfter2}
                                        DeltaSIR
                                                                            OPTIONAL,
   nidentifyAbort
                                       NidentifyAbort
                                                                            OPTIONAL,
   treconfirmAbort
                                        TreconfirmAbort
                                                                            OPTIONAL
}
TGPSI ::=
                                    INTEGER (1..maxTGPS)
TGSN ::=
                                    INTEGER (0..14)
TimeInfo ::=
                                    SEQUENCE {
   activationTime
                                       ActivationTime
                                                                            OPTIONAL,
   durationTimeInfo
                                        DurationTimeInfo
                                                                            OPTIONAL
}
TimeslotList ::=
                                    SEQUENCE (SIZE (1..maxTS)) OF
                                       TimeslotNumber
TimeslotList-r4 ::=
                                    CHOICE {
-- the choice for 7.68 Mcps TDD is as for 3.84 Mcps TDD \, --
    tdd384
                                        SEQUENCE (SIZE (1..maxTS)) OF
                                            TimeslotNumber,
    tdd128
                                        SEQUENCE (SIZE (1..maxTS-LCR)) OF
```

```
TimeslotNumber-LCR-r4
}
-- If TimeslotNumber is included for a 1.28Mcps TDD description, it shall take values from 0..6
TimeslotNumber ::=
                                       INTEGER (0..14)
TimeslotNumber-LCR-r4 ::=
                                      INTEGER (0..6)
TimeslotNumber-PRACH-LCR-r4 ::= INTEGER (1..6)
TimeslotSync2 ::=
                              INTEGER (0..6)
-- Actual value TimingOffset = IE value * 256
TimingOffset ::=
TimingMaintainedSynchInd ::=
                                  ENUMERATED { false }
TPC-CombinationIndex ::=
                                  INTEGER (0..5)
                                  INTEGER (0..10)
TPC-CommandTargetRate ::=
-- Actual value TPC-StepSizeFDD = IE value + 1
TPC-StepSizeFDD ::=
TPC-StepSizeTDD ::=
                                  INTEGER (1..3)
-- Actual value TreconfirmAbort = IE value * 0.5 seconds
TreconfirmAbort ::= INTEGER (1..20)
                                   ENUMERATED {
TX-DiversityMode ::=
                                      noDiversity,
                                      sttd,
                                      closedLoopModel,
       \mbox{--}\mbox{ dummy} is not used in this version of the specification, it should
       -- not be sent and if received it should be ignored.
                                       dummy }
UARFCN ::=
                              INTEGER (0..16383)
UCSM-Info ::=
                                   SEQUENCE {
   minimumSpreadingFactor
                                      MinimumSpreadingFactor,
                                       NF-Max,
   nf-Max
   channelReqParamsForUCSM
                                      ChannelReqParamsForUCSM
UL-CCTrCH ::=
                                   SEQUENCE {
                                                                         DEFAULT 1,
                                      TFCS-IdentityPlain
   tfcs-ID
   ul-TargetSIR
                                      UL-TargetSIR,
   timeInfo
                                      TimeInfo,
   commonTimeslotInfo
                                      CommonTimeslotInfo
                                                                          OPTIONAL,
   ul-CCTrCH-TimeslotsCodes
                                      UplinkTimeslotsCodes
                                                                          OPTIONAL
                              SEQUENCE {
UL-CCTrCH-r4 ::=
                                     TFCS-IdentityPlain
   tfcs-ID
                                                                          DEFAULT 1,
   -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
   -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
                                      UL-TargetSIR,
   ul-TargetSIR
                                       TimeInfo,
   timeInfo
   commonTimeslotInfo
                                       CommonTimeslotInfo
                                                                         OPTIONAL.
   tddOption
                                       CHOICE {
                                       SEQUENCE {
                                              UplinkTimeslotsCodes
          ul-CCTrCH-TimeslotsCodes
                                                                         OPTIONAL
                                         SEQUENCE {
       tdd128
          ul-CCTrCH-TimeslotsCodes
                                             UplinkTimeslotsCodes-LCR-r4 OPTIONAL
   }
}
UL-CCTrCH-r7 ::=
                                   SEQUENCE {
   tfcs-ID
                                      TFCS-IdentityPlain
                                                                          DEFAULT 1,
   -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
   -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
                                       UL-TargetSIR,
   ul-TargetSIR
   timeInfo
                                      TimeInfo,
                                       CommonTimeslotInfo
   commonTimeslotInfo
                                                                         OPTIONAL.
   tddOption
                                       CHOICE {
```

```
SEQUENCE {
        t.dd384
                                               UplinkTimeslotsCodes
          ul-CCTrCH-TimeslotsCodes
                                                                         OPTIONAL
        tdd768
                                           SEOUENCE {
                                            UplinkTimeslotsCodes-VHCR OPTIONAL
         ul-CCTrCH-TimeslotsCodes
        tdd128
                                           SEOUENCE {
           ul-CCTrCH-TimeslotsCodes
                                               UplinkTimeslotsCodes-LCR-r7 OPTIONAL
    }
}
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
III.-CCTrCHList ::=
                                       UL-CCTrCH
UL-CCTrCHList-r4 ::=
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       UL-CCTrCH-r4
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
UL-CCTrCHList-r7 ::=
                                       UL-CCTrCH-r7
UL-CCTrCHListToRemove ::=
                                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       TFCS-IdentityPlain
III.-CCTrChTPCList ::=
                                   SEQUENCE (SIZE (0..maxCCTrCH)) OF
                                           TFCS-Identity
UL-ChannelRequirement ::=
                                   CHOICE {
   ul-DPCH-Info
                                       UL-DPCH-Info,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received the UE behaviour is not specified.
                                       CPCH-SetInfo
}
UL-ChannelRequirement-r4 ::= CHOICE {
   ul-DPCH-Info
                                      UL-DPCH-Info-r4,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received the UE behaviour is not specified.
   dummy
                                       CPCH-SetInfo
}
UL-ChannelRequirement-r5 ::=
                                 CHOICE {
                                      UL-DPCH-Info-r5,
   ul-DPCH-Info
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received the UE behaviour is not specified.
                                       CPCH-SetInfo
}
-- Note: the reference to CPCH in the element name below is incorrect. The name is not
-- changed to keep it aligned with R99.
UL-ChannelRequirementWithCPCH-SetID ::= CHOICE {
   ul-DPCH-Info
                                       UL-DPCH-Info,
    -- dummy1 and dummy 2 are not used in this version of the specification, they should
    -- not be sent and if received the UE behaviour is not specified.
                                       CPCH-SetInfo,
   dummy1
                                       CPCH-Set.ID
    dummy2
}
-- Note: the reference to CPCH in the element name below is incorrect. The name is not
-- changed to keep it aligned with R99.
UL-ChannelRequirementWithCPCH-SetID-r4 ::= CHOICE {
   ul-DPCH-Info
                                       UL-DPCH-Info-r4,
    -- dummy1 and dummy2 are not used in this version of the specification, they
    -- should not be sent and if received the UE behaviour is not specified.
                                       CPCH-SetInfo,
   dummy1
                                       CPCH-Set.ID
    dummy2
}
-- Note: the reference to CPCH in the element name below is incorrect. The name is not
-- changed to keep it aligned with R99.
UL-ChannelRequirementWithCPCH-SetID-r5 ::= CHOICE {
   ul-DPCH-Info
                                       UL-DPCH-Info-r5,
    -- dummy1 and dummy2 are not used in this version of the specification, they should
    -- not be sent and if received the UE behaviour is not specified.
                                       CPCH-SetInfo,
                                       CPCH-SetID
    dummy2
}
```

```
UL-CompressedModeMethod ::=
                                    ENUMERATED {
                                        sf-2,
                                        higherLayerScheduling }
UL-DL-Mode ::=
                                    CHOICE {
   ul
                                        UL-CompressedModeMethod,
    dl
                                        DL-CompressedModeMethod,
    ul-and-dl
                                            SEQUENCE {
                                            UL-CompressedModeMethod,
        ul
        dl
                                            DL-CompressedModeMethod
    }}
UL-DPCCH-SlotFormat ::=
                                    ENUMERATED {
                                        slf0, slf1, slf2 }
UL-DPCH-Info ::=
                                    SEQUENCE {
    ul-DPCH-PowerControlInfo
                                        UL-DPCH-PowerControlInfo
                                                                           OPTIONAL.
    modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
            scramblingCodeType
                                                ScramblingCodeType,
                                                UL-ScramblingCode,
            scramblingCode
                                                                            DEFAULT 1,
            numberOfDPDCH
                                                NumberOfDPDCH
            spreadingFactor
                                                SpreadingFactor,
            tfci-Existence
                                                BOOLEAN,
            -- numberOfFBI-Bits is conditional based on history
            numberOfFBI-Bits
                                                NumberOfFBI-Bits
                                                                            OPTIONAL,
            puncturingLimit
                                                PuncturingLimit
        },
        tdd
                                            SEQUENCE {
            ul-TimingAdvance
                                                UL-TimingAdvanceControl
                                                                            OPTIONAL.
            ul-CCTrCHList
                                                UL-CCTrCHList
                                                                            OPTIONAL.
            ul-CCTrCHListToRemove
                                                UL-CCTrCHListToRemove
                                                                            OPTIONAL
    }
}
                                    SEQUENCE {
UL-DPCH-Info-r4 ::=
    ul-DPCH-PowerControlInfo
                                        UL-DPCH-PowerControlInfo-r4
                                                                           OPTIONAL,
    modeSpecificInfo
                                        CHOICE {
        fdd
                                            SEQUENCE {
            scramblingCodeType
                                                ScramblingCodeType,
                                                UL-ScramblingCode,
            scramblingCode
                                                NumberOfDPDCH
                                                                            DEFAULT 1.
            numberOfDPDCH
            spreadingFactor
                                                SpreadingFactor,
            tfci-Existence
                                                BOOLEAN,
            -- numberOfFBI-Bits is conditional based on history
                                                NumberOfFBI-Bits
                                                                            OPTIONAL,
            numberOfFBI-Bits
            puncturingLimit
                                                PuncturingLimit
        },
        tdd
                                            SEQUENCE {
                                               UL-TimingAdvanceControl-r4 OPTIONAL,
            ul-TimingAdvance
            ul-CCTrCHList
                                                UL-CCTrCHList-r4
                                                                            OPTIONAL,
            ul-CCTrCHListToRemove
                                                UL-CCTrCHListToRemove
                                                                            OPTIONAL
        }
    }
}
UL-DPCH-Info-r5 ::=
                                    SEQUENCE {
    ul-DPCH-PowerControlInfo
                                        UL-DPCH-PowerControlInfo-r5
                                                                            OPTIONAL,
    modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
            scramblingCodeType
                                                ScramblingCodeType,
            scramblingCode
                                                UL-ScramblingCode,
            numberOfDPDCH
                                                NumberOfDPDCH
                                                                            DEFAULT 1.
            spreadingFactor
                                                SpreadingFactor,
            tfci-Existence
                                                BOOLEAN,
            -- numberOfFBI-Bits is conditional based on history
            numberOfFBI-Bits
                                                NumberOfFBI-Bits
                                                                            OPTIONAL,
            puncturingLimit
                                                PuncturingLimit
        },
                                            SEQUENCE {
        t.dd
            ul-TimingAdvance
                                                UL-TimingAdvanceControl-r4 OPTIONAL,
                                                                      OPTIONAL,
            ul-CCTrCHList
                                                UL-CCTrCHList-r4
            ul-CCTrCHListToRemove
                                                UL-CCTrCHListToRemove
        }
    }
}
```

```
SEQUENCE {
UL-DPCH-Info-r6 ::=
                                  .
UL-DPCH-PowerControlInfo-r6
   ul-DPCH-PowerControlInfo
                                                                       OPTIONAL,
   modeSpecificInfo
                                     CHOICE {
       fdd
                                         SEQUENCE {
           scramblingCodeType
                                             ScramblingCodeType,
           scramblingCode
                                              UL-ScramblingCode,
           dpdchPresence
                                              CHOICE {
                                                 SEQUENCE {
               present
                  numberOfDPDCH
                                                     NumberOfDPDCH
                                                                                DEFAULT 1,
                   spreadingFactor
                                                     SpreadingFactor,
                   tfci-Existence
                                                     BOOLEAN,
                   -- numberOfFBI-Bits is conditional based on history
                   numberOfFBI-Bits
                                                     NumberOfFBI-Bits
                                                                               OPTIONAL,
                  puncturingLimit
                                                     PuncturingLimit
               },
                                                 SEQUENCE {
               notPresent
                  tfci-Existence
                                                     BOOLEAN,
                   -- numberOfFBI-Bits is conditional based on history
                                                     NumberOfFBI-Bits
                                                                                OPTIONAL
                   numberOfFBI-Bits
               }
           }
       },
                                          SEQUENCE {
           ul-TimingAdvance
                                             UL-TimingAdvanceControl-r4 OPTIONAL,
           ul-CCTrCHList
                                             UL-CCTrCHList-r4
                                                                        OPTIONAL,
           ul-CCTrCHListToRemove
                                             UL-CCTrCHListToRemove
                                                                        OPTIONAL
   }
}
UL-DPCH-Info-r7 ::=
                                  SEQUENCE {
   ul-DPCH-PowerControlInfo
                                  UL-DPCH-PowerControlInfo-r6
   modeSpecificInfo
                                      CHOICE {
                                          SEQUENCE {
       fdd
                                              ScramblingCodeType,
           scramblingCodeType
           scramblingCode
                                              UL-ScramblingCode,
           dpdchPresence
                                              CHOICE {
               present
                                                 SEQUENCE {
                  numberOfDPDCH
                                                     NumberOfDPDCH
                                                                                DEFAULT 1,
                   spreadingFactor
                                                     SpreadingFactor,
                   tfci-Existence
                                                     BOOLEAN,
                   -- numberOfFBI-Bits is conditional based on history
                   numberOfFBI-Bits
                                                     NumberOfFBI-Bits
                                                                               OPTIONAL,
                  puncturingLimit
                                                     PuncturingLimit
                    },
               notPresent
                                                 SEQUENCE {
                  tfci-Existence
                                                     BOOLEAN,
                   -- numberOfFBI-Bits is conditional based on history
                   numberOfFBI-Bits
                                                     NumberOfFBI-Bits
                                                                               OPTIONAL
               }
           }
       },
                                          SEQUENCE {
           ul-TimingAdvance
                                             UL-TimingAdvanceControl-r7 OPTIONAL,
                                             UL-CCTrCHList-r7 OPTIONAL UL-CCTrCHListToRemove OPTIONAL
           ul-CCTrCHList
                                                                        OPTIONAL,
           ul-CCTrCHListToRemove
       }
   }
}
   UL-DPCH-InfoPostFDD ::=
                                       ScramblingCodeType,
           reducedScramblingCodeNumber
                                             ReducedScramblingCodeNumber,
           spreadingFactor
                                             SpreadingFactor
}
UL-DPCH-InfoPostTDD ::=
                                  SEQUENCE {
                                 {\tt UL-DPCH-PowerControlInfoPostTDD},\\
   ul-DPCH-PowerControlInfo
   ul-TimingAdvance
                                     UL-TimingAdvanceControl
                                                                           OPTIONAL,
   ul-CCTrCH-TimeslotsCodes
                                     UplinkTimeslotsCodes
}
UL-DPCH-InfoPostTDD-LCR-r4 ::= SEQUENCE {
                                  \hbox{\tt UL-DPCH-PowerControlInfoPostTDD-LCR-r4,}
   ul-DPCH-PowerControlInfo
   ul-TimingAdvance
                                      UL-TimingAdvanceControl-LCR-r4
                                                                                OPTIONAL.
   ul-CCTrCH-TimeslotsCodes
                                     UplinkTimeslotsCodes-LCR-r4
```

```
}
UL-DPCH-InfoPredef ::=
                                   SEQUENCE {
                                       UL-DPCH-PowerControlInfoPredef,
    ul-DPCH-PowerControlInfo
    {\tt modeSpecificInfo}
                                       CHOICE {
       fdd
                                        SEQUENCE {
           tfci-Existence
                                               BOOLEAN,
                                               PuncturingLimit
           puncturingLimit
        tdd
                                           SEQUENCE {
           commonTimeslotInfo
                                              CommonTimeslotInfo
}
                                  CHOICE {
UL-DPCH-PowerControlInfo ::=
                                       SEQUENCE {
        dpcch-PowerOffset
                                           DPCCH-PowerOffset,
                                           PC-Preamble,
       pc-Preamble
        sRB-delay
                                          SRB-delay,
        -- TABULAR: TPC step size nested inside PowerControlAlgorithm
       powerControlAlgorithm
                                          PowerControlAlgorithm
    tdd
                                       SEQUENCE {
                                           UL-TargetSIR
                                                                      OPTIONAL.
        ul-TargetSIR
        ul-OL-PC-Signalling
                                           CHOICE {
           broadcast-UL-OL-PC-info NULL,
individuallySignalled SEOUE
           individuallySignalled
                                              SEQUENCE {
                                              IndividualTS-InterferenceList,
               individualTS-InterferenceList
               dpch-ConstantValue
                                                  ConstantValueTdd,
               primaryCCPCH-TX-Power
                                                  PrimaryCCPCH-TX-Power
           }
       }
                                                                      OPTIONAL
    }
}
UL-DPCH-PowerControlInfo-r4 ::=
                                  CHOICE {
                                       SEQUENCE {
        dpcch-PowerOffset
                                           DPCCH-PowerOffset,
       pc-Preamble
                                           PC-Preamble,
       sRB-delay
                                           SRB-delay,
        -- TABULAR: TPC step size nested inside PowerControlAlgorithm
       powerControlAlgorithm
                                          PowerControlAlgorithm
    },
                                      SEQUENCE {
    tdd
        -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
        -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
                             UL-TargetSIR
        ul-TargetSIR
                                                                       OPTIONAL,
                                          CHOICE {
        ul-OL-PC-Signalling
           broadcast-UL-OL-PC-info
                                              NULL.
                                               SEQUENCE {
           individuallySignalled
               tddOption
                                                  CHOICE {
                   tdd384
                                                     SEQUENCE {
                       individualTS-InterferenceList
                                                          IndividualTS-InterferenceList,
                       dpch-ConstantValue
                                                           ConstantValue
                   tdd128
                                                       SEOUENCE {
                                                          TPC-StepSizeTDD
                       tpc-StepSize
               primaryCCPCH-TX-Power
                                                  PrimaryCCPCH-TX-Power
           }
       }
    }
}
UL-DPCH-PowerControlInfo-r5 ::=
                                   CHOICE {
   fdd
                                       SEOUENCE {
       dpcch-PowerOffset
                                           DPCCH-PowerOffset,
       pc-Preamble
                                           PC-Preamble,
                                           SRB-delay,
        -- TABULAR: TPC step size nested inside PowerControlAlgorithm
        powerControlAlgorithm
                                           PowerControlAlgorithm,
        deltaACK
                                           DeltaACK OPTIONAL,
        deltaNACK
                                           DeltaNACK
                                                     OPTIONAL,
       ack-NACK-repetition-factor
                                         ACK-NACK-repetitionFactor OPTIONAL
    tdd
                                       SEQUENCE {
```

```
-- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
        -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
        ul-TargetSIR
                                           UL-TargetSIR
        ul-OL-PC-Signalling
                                           CHOICE {
           broadcast-UL-OL-PC-info
                                               NULL,
            individuallySignalled
                                                SEQUENCE {
                tddOption
                                                   CHOICE {
                                                        SEQUENCE {
                    t.dd384
                        individualTS-InterferenceList
                                                          IndividualTS-InterferenceList,
                        dpch-ConstantValue
                                                            ConstantValue
                    }.
                    tdd128
                                                        SEQUENCE {
                        tpc-StepSize
                                                            TPC-StepSizeTDD
                primaryCCPCH-TX-Power
                                                   PrimaryCCPCH-TX-Power
           }
       }
    }
}
UL-DPCH-PowerControlInfo-r6 ::=
                                   CHOICE {
                                       SEQUENCE {
        dpcch-PowerOffset
                                           DPCCH-PowerOffset,
        pc-Preamble
                                            PC-Preamble,
        sRB-delay
                                           SRB-delay,
        -- TABULAR: TPC step size nested inside PowerControlAlgorithm
        {\tt powerControlAlgorithm} \qquad \qquad {\tt PowerControlAlgorithm}\,,
                                           DeltaACK OPTIONAL,
                                           DeltaNACK OPTIONAL,
        deltaNACK
        ack-NACK-repetition-factor
                                           ACK-NACK-repetitionFactor OPTIONAL,
       harq-Preamble-Mode
                                           HARQ-Preamble-Mode
    },
                                       SEQUENCE {
        -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
        -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
        ul-TargetSIR
                                           UL-TargetSIR
                                                                        OPTIONAL.
        ul-OL-PC-Signalling
                                           CHOICE {
           broadcast-UL-OL-PC-info
                                                NULL,
            individuallySignalled
                                                SEQUENCE {
                tddOption
                                                   CHOICE {
                    tdd384
                                                       SEQUENCE {
                        individualTS-InterferenceList
                                                          IndividualTS-InterferenceList,
                        dpch-ConstantValue
                                                            ConstantValue
                    tdd128
                                                        SEQUENCE {
                        beaconPLEst
                                                            BEACON-PL-Est
                                                                              OPTIONAL,
                        tpc-StepSize
                                                            TPC-StepSizeTDD
                    }
               primaryCCPCH-TX-Power
                                                  PrimaryCCPCH-TX-Power
           }
       }
    }
}
UL-DPCH-PowerControlInfo-r7 ::= CHOICE {
                                       SEQUENCE {
        dpcch-PowerOffset
                                           DPCCH-PowerOffset,
        pc-Preamble
                                            PC-Preamble,
                                           SRB-delay,
        sRB-delay
        -- TABULAR: TPC step size nested inside PowerControlAlgorithm
        powerControlAlgorithm
                                           PowerControlAlgorithm,
                                           DeltaACK OPTIONAL,
DeltaNACK OPTIONAL,
        deltaACK
        deltaNACK
                                           ACK-NACK-repetitionFactor OPTIONAL,
        ack-NACK-repetition-factor
       harq-Preamble-Mode
                                          HARQ-Preamble-Mode
                                       SEQUENCE {
        -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
        -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
                                                                        OPTIONAL,
        ul-TargetSIR
                                           UL-TargetSIR
        ul-OL-PC-Signalling
                                           CHOICE {
           broadcast-UL-OL-PC-info
                                               NULL,
            individuallySignalled
                                                SEQUENCE {
                tddOption
                                                   CHOICE {
                                                       SEQUENCE {
                    tdd384
                        individualTS-InterferenceList
                                                           IndividualTS-InterferenceList,
```

```
dpch-ConstantValue
                                                        ConstantValue
                                                    SEQUENCE {
                      individualTS-InterferenceList
                                                        IndividualTS-InterferenceList,
                      dpch-ConstantValue
                                                         ConstantValue
                   tdd128
                                                     SEQUENCE {
                      beaconPLEst
                                                         BEACON-PL-Est
                                                                          OPTIONAL.
                      tpc-StepSize
                                                         TPC-StepSizeTDD
               },
               primaryCCPCH-TX-Power
                                     PrimaryCCPCH-TX-Power
          }
      }
   }
}
UL-DPCH-PowerControlInfoPostFDD ::= SEQUENCE {
   -- DPCCH-PowerOffset2 has a smaller range to save bits
   dpcch-PowerOffset
                                     DPCCH-PowerOffset2,
   pc-Preamble
                                      PC-Preamble.
   sRB-delay
                                      SRB-delay
}
UL-DPCH-PowerControlInfoPostTDD ::= SEQUENCE {
                           UL-TargetSIR,
   ul-TargetSIR
   ul-TimeslotInterference
                                     TDD-UL-Interference
}
UL-DPCH-PowerControlInfoPostTDD-LCR-r4 ::= SEQUENCE {
   -- The IE ul-TargetSIR corresponds to PRX-DPCHdes for 1.28Mcps TDD
   -- Actual value PRX-DPCHdes = (value of IE "ul-TargetSIR" - 120)
   ul-TargetSIR
                                     UL-TargetSIR
}
UL-DPCH-PowerControlInfoPredef ::=
                                     CHOICE {
                                     SEQUENCE {
       -- TABULAR: TPC step size nested inside PowerControlAlgorithm
       powerControlAlgorithm
                                        PowerControlAlgorithm
   tdd
                                     SEQUENCE {
       -- dpch-ConstantValue shall be ignored if in 1.28Mcps TDD mode.
       dpch-ConstantValue
                                         ConstantValueTdd
}
III.-EDCH-Information-r6 ::=
  mac-es-e-resetIndicator
                                  SEQUENCE {
                                 ENUMERATED { true }
                                                                            OPTIONAL,
   e-DPCCH-Info
                                     E-DPCCH-Info
                                                                            OPTIONAL,
   e-DPDCH-Info
                                     E-DPDCH-Info
                                                                            OPTIONAL,
   schedulingTransmConfiguration
                                     E-DPDCH-SchedulingTransmConfiguration OPTIONAL
                                 INTEGER (-110..-70)
UL-Interference ::=
UL-ScramblingCode ::=
                                 INTEGER (0..16777215)
UL-SynchronisationParameters-r4 ::= SEQUENCE {
                                      INTEGER (1..8),
   stepSize
                                      INTEGER (1..8)
   frequency
-- Actual value UL-TargetSIR = (IE value * 0.5) - 11
UL-TargetSIR ::=
                                  INTEGER (0..62)
UL-TimingAdvance ::=
                                 INTEGER (0..63)
UL-TimingAdvance-VHCR ::=
                                 INTEGER (0..127)
UL-TimingAdvanceControl ::=
                                 CHOICE {
   disabled
                                     NULL,
                                      SEQUENCE {
   enabled
       ul-TimingAdvance
                                        UL-TimingAdvance
                                                                       OPTIONAL,
       activationTime
                                         ActivationTime
                                                                        OPTIONAL
   }
}
```

```
UL-TimingAdvanceControl-r4 ::=
                                     CHOICE {
    disabled
    enabled
                                         SEQUENCE {
        tddOption
                                             CHOICE {
            tdd384
                                                  SEQUENCE {
                ul-TimingAdvance
                                                      UL-TimingAdvance
                                                                                       OPTIONAL,
                activationTime
                                                      ActivationTime
                                                                                       OPTIONAL
                                                  SEQUENCE {
            tdd128
                ul-SynchronisationParameters
                                                      UL-SynchronisationParameters-r4 OPTIONAL,
                synchronisationParameters
                                                      SynchronisationParameters-r4
                                                                                       OPTIONAL
            }
        }
    }
}
UL-TimingAdvanceControl-r7 ::=
                                     CHOICE {
    disabled
                                         NULL,
    enabled
                                         SEQUENCE {
        tddOption
                                             CHOICE {
            tdd384
                                                  SEQUENCE {
                ul-TimingAdvance
                                                      UL-TimingAdvance
                                                                                       OPTIONAL,
                ext-ul-TimingAdvance
                                                      EXT-UL-TimingAdvance
                                                                                       OPTIONAL,
                activationTime
                                                                                       OPTIONAL
                                                      ActivationTime
            tdd768
                                                  SEQUENCE {
                ext-ul-TimingAdvance
                                                      EXT-UL-TimingAdvance
                                                                                       OPTIONAL,
                activationTime
                                                      ActivationTime
                                                                                       OPTIONAL
            tdd128
                                                  SEQUENCE {
                ul-SynchronisationParameters
                                                      UL-SynchronisationParameters-r4 OPTIONAL,
                synchronisationParameters
                                                      SynchronisationParameters-r4
            }
        }
    }
}
UL-TimingAdvanceControl-LCR-r4 ::= CHOICE {
    disabled
    enabled
                                         SEQUENCE {
        ul-SynchronisationParameters
                                             UL-SynchronisationParameters-r4 OPTIONAL,
        synchronisationParameters
                                             SynchronisationParameters-r4
                                                                             OPTIONAL.
}
                                     ENUMERATED {
UL-TS-ChannelisationCode ::=
                                         cc1-1, cc2-1, cc2-2,
                                         cc4-1, cc4-2, cc4-3, cc4-4,
                                         cc8-1, cc8-2, cc8-3, cc8-4,
                                         cc8-5, cc8-6, cc8-7, cc8-8,
                                         cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                         cc16-9, cc16-10, cc16-11, cc16-12,
                                         cc16-13, cc16-14, cc16-15, cc16-16 }
UL-TS-ChannelisationCodeList ::=
                                     SEQUENCE (SIZE (1..2)) OF
                                         UL-TS-ChannelisationCode
UL-TS-ChannelisationCodeList-r7 ::=
                                         SEQUENCE (SIZE (1..2)) OF
                                             SEOUENCE {
        ul-TS-Channelisation-Code
                                                  UL-TS-ChannelisationCode,
                                                  PLCCH-Info
        plcch-info
                                                                 OPTIONAL
}
                                         ENUMERATED {
UL-TS-ChannelisationCode-VHCR ::=
                                         cc1-1, cc2-1, cc2-2,
                                         cc4-1, cc4-2, cc4-3, cc4-4,
cc8-1, cc8-2, cc8-3, cc8-4,
                                         cc8-5, cc8-6, cc8-7, cc8-8,
                                         cc16-1, cc16-2, cc16-3, cc16-4,
                                         cc16-5, cc16-6, cc16-7, cc16-8,
                                         cc16-9, cc16-10, cc16-11, cc16-12,
                                         cc16-13, cc16-14, cc16-15, cc16-16,
                                         cc32-1, cc32-2, cc32-3, cc32-4,
                                         cc32-5, cc32-6, cc32-7, cc32-8,
                                         cc32-9, cc32-10, cc32-11, cc32-12,
                                         cc32-13, cc32-14, cc32-15, cc32-16,
                                         cc32-17, cc32-18, cc32-19, cc32-20,
```

```
cc32-21, cc32-22, cc32-23, cc32-24,
                                         cc32-25, cc32-26, cc32-27, cc32-28, cc32-29, cc32-30, cc32-31, cc32-32 }
UL-TS-ChannelisationCodeList-VHCR ::=
                                         SEQUENCE (SIZE (1..2)) OF
                                             UL-TS-ChannelisationCode-VHCR
                                     SEQUENCE {
UplinkAdditionalTimeslots ::=
    parameters
                                         CHOICE {
        sameAsLast
                                              SEQUENCE {
            timeslotNumber
                                                  TimeslotNumber
        }.
        newParameters
                                              SEQUENCE {
            individualTimeslotInfo
                                                          IndividualTimeslotInfo,
            ul-TS-ChannelisationCodeList
                                                          UL-TS-ChannelisationCodeList
    }
}
UplinkAdditionalTimeslots-LCR-r4 ::=
                                         SEQUENCE {
    parameters
                                         CHOICE {
                                              SEQUENCE {
        sameAsLast
            timeslotNumber
                                                  TimeslotNumber
        },
        newParameters
                                              SEQUENCE {
            individualTimeslotInfo
                                                          IndividualTimeslotInfo-LCR-r4,
            ul-TS-ChannelisationCodeList
                                                          UL-TS-ChannelisationCodeList
    }
}
UplinkAdditionalTimeslots-LCR-r7 ::=
                                         SEQUENCE {
                                          CHOICE {
    parameters
                                              SEQUENCE {
        sameAsLast
            timeslotNumber
                                                  TimeslotNumber
            -- plcch-info assigned as previously defined slot
        newParameters
                                             SEQUENCE {
            individualTimeslotInfo
                                                 IndividualTimeslotInfo-LCR-r4,
            ul-TS-ChannelisationCodeList
                                                 UL-TS-ChannelisationCodeList-r7
    }
}
                                     SEQUENCE {
UplinkTimeslotsCodes ::=
    dynamicSFusage
                                         BOOLEAN,
    firstIndividualTimeslotInfo
                                          IndividualTimeslotInfo,
    ul-TS-ChannelisationCodeList
                                          UL-TS-ChannelisationCodeList,
                                         CHOICE {
    moreTimeslots
                                             NULL
        noMore
        additionalTimeslots
                                              CHOICE {
            consecutive
                                                  SEQUENCE {
               numAdditionalTimeslots
                                                      INTEGER (1..maxTS-1)
            timeslotList
                                                  SEQUENCE (SIZE (1..maxTS-1)) OF
                                                      UplinkAdditionalTimeslots
        }
    }
}
UplinkTimeslotsCodes-VHCR ::=
                                     SEQUENCE {
    dynamicSFusage
                                         BOOLEAN,
                                         IndividualTimeslotInfo-VHCR,
    firstIndividualTimeslotInfo
    \verb"ul-TS-ChannelisationCodeList"
                                          UL-TS-ChannelisationCodeList-VHCR,
    moreTimeslots
                                         CHOICE {
                                             NULL,
        noMore
        additionalTimeslots
                                              CHOICE {
                                                  SEQUENCE {
            consecutive
                numAdditionalTimeslots
                                                      INTEGER (1..maxTS-1)
                                                  SEQUENCE (SIZE (1..maxTS-1)) OF
            timeslotList
                                                      UplinkAdditionalTimeslots
    }
}
UplinkTimeslotsCodes-LCR-r4 ::=
                                     SEQUENCE {
                                         BOOLEAN,
    dynamicSFusage
```

```
IndividualTimeslotInfo-LCR-r4,
   firstIndividualTimeslotInfo
   ul-TS-ChannelisationCodeList
                                      UL-TS-ChannelisationCodeList,
   moreTimeslots
                                      CHOICE {
                                          NULL,
       noMore
       additionalTimeslots
                                          CHOICE {
           consecutive
                                              SEQUENCE {
               numAdditionalTimeslots
                                                  INTEGER (1..maxTS-LCR-1)
           timeslotList
                                              SEQUENCE (SIZE (1..maxTS-LCR-1)) OF
                                                  UplinkAdditionalTimeslots-LCR-r4
       }
   }
}
                                  SEQUENCE {
UplinkTimeslotsCodes-LCR-r7 ::=
                                   BOOLEAN,
   dynamicSFusage
   firstIndividualTimeslotInfo
                                      IndividualTimeslotInfo-LCR-r4,
   ul-TS-ChannelisationCodeList
                                      UL-TS-ChannelisationCodeList-r7,
   moreTimeslots
                                      CHOICE {
                                          NULL,
       noMore
       additionalTimeslots
                                          CHOICE {
                                             SEQUENCE {
           consecutive
           -- the choice of 'consecutive' is not needed because there is only 1 option.
               numAdditionalTimeslots
                                                  INTEGER (1..maxTS-LCR-1)
           timeslotList
                                              SEQUENCE (SIZE (1..maxTS-LCR-1)) OF
                                                  UplinkAdditionalTimeslots-LCR-r7
       }
   }
}
Wi-LCR ::=
                                                                      INTEGER(1..4)
__ ***************
      MEASUREMENT INFORMATION ELEMENTS (10.3.7)
__ ****************
AcquisitionSatInfo ::=
                                  SEQUENCE {
                                      SatID,
    -- Actual value dopplerOthOrder = IE value * 2.5
                                      INTEGER (-2048..2047),
   doppler0thOrder
   extraDopplerInfo
                                      ExtraDopplerInfo
                                                                         OPTIONAL,
   codePhase
                                      INTEGER (0..1022),
   integerCodePhase
                                      INTEGER (0..19),
                                      INTEGER (0..3),
   aps-BitNumber
   codePhaseSearchWindow
                                      CodePhaseSearchWindow.
   azimuthAndElevation
                                     AzimuthAndElevation
                                                                         OPTIONAL
AcquisitionSatInfoList ::=
                                 SEQUENCE (SIZE (1..maxSat)) OF
                                      AcquisitionSatInfo
                                  SEOUENCE (SIZE (1..maxAdditionalMeas)) OF
AdditionalMeasurementID-List ::=
                                      MeasurementIdentity
AlmanacSatInfo ::=
                                  SEQUENCE {
                                      INTEGER (0..3),
   dataID
   sat.ID
                                      SatID.
                                      BIT STRING (SIZE (16)),
                                      BIT STRING (SIZE (8)),
   t-oa
   deltaI
                                      BIT STRING (SIZE (16)),
   omegaDot
                                      BIT STRING (SIZE (16)),
   satHealth
                                      BIT STRING (SIZE (8)),
   a-Sgrt
                                      BIT STRING (SIZE (24)),
   omega0
                                      BIT STRING (SIZE (24)),
                                      BIT STRING (SIZE (24)),
   m0
   omega
                                      BIT STRING (SIZE (24)),
   af0
                                      BIT STRING (SIZE (11)),
   af1
                                      BIT STRING (SIZE (11))
}
AlmanacSatInfoList ::=
                                  SEQUENCE (SIZE (1..maxSat)) OF
                                      AlmanacSatInfo
AverageRLC-BufferPayload ::=
                                  ENUMERATED {
```

```
pla0, pla4, pla8, pla16, pla32,
                                         pla64, pla128, pla256, pla512, pla1024, pla2k, pla4k, pla8k, pla16k,
                                         pla32k, pla64k, pla128k, pla256k,
                                         pla512k, pla1024k, spare12, spare11,
                                         spare10, spare9, spare8, spare7, spare6,
                                         spare5, spare4, spare3, spare2, spare1 }
AzimuthAndElevation ::=
                                    SEQUENCE {
     -- Actual value azimuth = IE value * 11.25
                                         INTEGER (0..31),
    -- Actual value elevation = IE value * 11.25
    elevation
                                         INTEGER (0..7)
BadSatList ::=
                                     SEQUENCE (SIZE (1..maxSat)) OF
                                         INTEGER (0..63)
                                     ENUMERATED {
Frequency-Band ::=
                                         dcs1800BandUsed, pcs1900BandUsed }
BCCH-ARFCN ::=
                                     INTEGER (0..1023)
BLER-MeasurementResults ::=
                                     SEQUENCE {
    transportChannelIdentity
                                         TransportChannelIdentity,
    dl-TransportChannelBLER
                                         DL-TransportChannelBLER
                                                                              OPTIONAL
BLER-MeasurementResultsList ::=
                                    SEQUENCE (SIZE (1..maxTrCH)) OF
                                         BLER-MeasurementResults
BLER-TransChIdList ::=
                                     SEQUENCE (SIZE (1..maxTrCH)) OF
                                         TransportChannelIdentity
BSIC-VerificationRequired ::=
                                     ENUMERATED {
                                        required, notRequired }
    Reported ::= CHOICE {
-- Value maxCellMeas is not allowed for verifiedBSIC
BSICReported ::=
    verifiedBSTC
                                         INTEGER (0..maxCellMeas),
    nonVerifiedBSIC
                                         BCCH-ARFCN
}
BurstModeParameters ::=
                                     SEQUENCE {
    burstStart
                                        INTEGER (0..15),
    burstLength
                                         INTEGER (10..25),
                                         INTEGER (1..16)
    burstFreq
}
CellDCH-ReportCriteria ::= CHOICE {
   intraFreqReportingCriteria Intra
   periodicalReportingCriteria Perio
                                   IntraFreqReportingCriteria,
                                        PeriodicalReportingCriteria
CellDCH-ReportCriteria-LCR-r4 ::= CHOICE {
    intraFreqReportingCriteria
periodicalReportingCriteria
                                         IntraFreqReportingCriteria-LCR-r4,
                                         PeriodicalReportingCriteria
-- Actual value CellIndividualOffset = IE value * 0.5
CellIndividualOffset ::=
                                     INTEGER (-20..20)
                                     SEQUENCE {
CellInfo ::=
    cellIndividualOffset
                                         CellIndividualOffset
                                                                              DEFAULT 0.
                                         ReferenceTimeDifferenceToCell OPTIONAL,
    referenceTimeDifferenceToCell
    modeSpecificInfo
                                         CHOICE {
                                           SEOUENCE {
        fdd
                                                 PrimaryCPICH-TX-Power OPTIONAL,
            primaryCPICH-Info
            primaryCPICH-TX-Power
            readSFN-Indicator
                                                 BOOLEAN,
                                                 BOOLEAN
            tx-DiversityIndicator
        },
                                             SEQUENCE {
            primaryCCPCH-Info
                                                 PrimaryCCPCH-Info,
                                                 PrimaryCCPCH-TX-Power
            primaryCCPCH-TX-Power
                                                                             OPTIONAL,
                                                 TimeslotInfoList
            timeslotInfoList
                                                                              OPTIONAL.
            readSFN-Indicator
                                                 BOOLEAN
```

```
}
    }
}
CellInfo-r4 ::=
                                   SEOUENCE {
   cellIndividualOffset
                                    CellIndividualOffset
                                                                           DEFAULT 0,
    referenceTimeDifferenceToCell
                                       ReferenceTimeDifferenceToCell
                                                                           OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
        fdd
                                           SEQUENCE {
           primaryCPICH-Info
                                               PrimaryCPICH-Info
                                                                           OPTIONAL,
           primaryCPICH-TX-Power
                                               PrimaryCPICH-TX-Power
                                                                           OPTIONAL,
           readSFN-Indicator
                                               BOOLEAN,
           tx-DiversityIndicator
                                               BOOLEAN
                                           SEQUENCE {
           primaryCCPCH-Info
                                              PrimaryCCPCH-Info-r4,
           primaryCCPCH-TX-Power
                                               PrimaryCCPCH-TX-Power
                                                                           OPTIONAL,
           timeslotInfoList
                                               TimeslotInfoList-r4
                                                                           OPTIONAL,
           readSFN-Indicator
                                               BOOLEAN
        }
    }
}
CellInfoST-RSCP ::=
                                   SECTIENCE {
    cellIndividualOffset
                                      CellIndividualOffset
                                                                           DEFAULT 0,
    referenceTimeDifferenceToCell
                                       ReferenceTimeDifferenceToCell
                                                                           OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
        fdd
                                           SEQUENCE {
                                               PrimaryCPICH-Info
           primaryCPICH-Info
                                                                           OPTIONAL.
           primaryCPICH-TX-Power
                                               PrimaryCPICH-TX-Power
                                                                           OPTIONAL,
           readSFN-Indicator
           tx-DiversityIndicator
                                               BOOLEAN
                                           SEQUENCE {
           primaryCCPCH-Info
                                               PrimaryCCPCH-Info,
           primaryCCPCH-TX-Power
                                               PrimaryCCPCH-TX-Power
                                                                           OPTIONAL,
           timeslotInfoList
                                               TimeslotInfoList
                                                                          OPTIONAL,
           readSFN-Indicator
                                               BOOLEAN
    },
    cellSelectionReselectionInfo
                                     CellSelectReselectInfoSIB-11-12-RSCP
                                                                                   OPTIONAL
}
CellInfoSI-RSCP-LCR-r4 ::=
                                   SEQUENCE {
    cellIndividualOffset
                                       CellIndividualOffset
                                                                           DEFAULT 0,
    referenceTimeDifferenceToCell
                                       ReferenceTimeDifferenceToCell
                                                                           OPTIONAL.
    primaryCCPCH-Info
                                       PrimaryCCPCH-Info-LCR-r4,
    primaryCCPCH-TX-Power
                                       PrimaryCCPCH-TX-Power
                                                                          OPTIONAL,
    timeslotInfoList
                                      TimeslotInfoList-LCR-r4
    readSFN-Indicator
                                       BOOLEAN,
    cellSelectionReselectionInfo
                                       CellSelectReselectInfoSIB-11-12-RSCP
                                                                                   OPTIONAL
CellInfoSI-ECN0 ::=
                                   SEQUENCE {
    cellIndividualOffset
                                       CellIndividualOffset
                                                                           DEFAULT 0,
    referenceTimeDifferenceToCell
                                       ReferenceTimeDifferenceToCell
                                                                           OPTIONAL,
    modeSpecificInfo
                                       CHOICE {
                                           SEQUENCE {
           primaryCPICH-Info
                                               PrimaryCPICH-Info
                                                                          OPTIONAL.
           primaryCPICH-TX-Power
                                               PrimaryCPICH-TX-Power
                                                                           OPTIONAL,
           readSFN-Indicator
                                               BOOLEAN,
           tx-DiversityIndicator
                                               BOOLEAN
                                           SEQUENCE {
        bb+
           primaryCCPCH-Info
                                               PrimaryCCPCH-Info,
           primaryCCPCH-TX-Power
                                               PrimaryCCPCH-TX-Power
                                                                           OPTIONAL,
           timeslotInfoList
                                               TimeslotInfoList
                                                                           OPTIONAL,
           readSFN-Indicator
                                               BOOLEAN
    cellSelectionReselectionInfo
                                     CellSelectReselectInfoSIB-11-12-ECN0
}
CellInfoSI-ECN0-LCR-r4 ::=
                                   SEQUENCE {
                                      CellIndividualOffset
    cellIndividualOffset
                                                                           DEFAULT 0,
    referenceTimeDifferenceToCell
                                       ReferenceTimeDifferenceToCell
                                                                           OPTIONAL.
                                       PrimaryCCPCH-Info-LCR-r4,
    primaryCCPCH-Info
```

```
primaryCCPCH-TX-Power
                                      PrimaryCCPCH-TX-Power
                                                                          OPTIONAL.
   timeslotInfoList
                                      TimeslotInfoList-LCR-r4
                                                                         OPTIONAL,
   readSFN-Indicator
                                      BOOLEAN,
   cellSelectionReselectionInfo
                                      CellSelectReselectInfoSIB-11-12-ECN0
                                                                             OPTIONAL
                                SEQUENCE {
CellInfoSI-HCS-RSCP ::=
   cellIndividualOffset
                                      CellIndividualOffset
                                                                        DEFAULT 0.
   referenceTimeDifferenceToCell
                                      ReferenceTimeDifferenceToCell OPTIONAL,
   modeSpecificInfo
                                      CHOICE {
       fdd
                                        SEQUENCE {
                                              PrimaryCPICH-Info
                                              PrimaryCPICH-Info OPTIONAL, PrimaryCPICH-TX-Power OPTIONAL,
           primaryCPICH-Info
           primaryCPICH-TX-Power
           readSFN-Indicator
                                              BOOLEAN,
           tx-DiversityIndicator
                                              BOOLEAN
       },
       tdd
                                          SEQUENCE {
           primaryCCPCH-Info
                                              PrimaryCCPCH-Info,
           primaryCCPCH-TX-Power
                                              PrimaryCCPCH-TX-Power
           timeslotInfoList
                                              TimeslotInfoList
                                                                          OPTIONAL,
           readSFN-Indicator
                                              BOOLEAN
   cellSelectionReselectionInfo CellSelectReselectInfoSIB-11-12-HCS-RSCP
}
CellInfoSI-HCS-RSCP-LCR-r4 ::= SEQUENCE {
   cellIndividualOffset CellIndividualOffset referenceTimeDifferenceToCell ReferenceTimeDifferenceToCell
                                                                          DEFAULT 0,
                                                                          OPTIONAL,
                                      PrimaryCCPCH-Info-LCR-r4,
   primaryCCPCH-Info
   primaryCCPCH-TX-Power
                                      PrimaryCCPCH-TX-Power
                                                                          OPTIONAL.
   timeslotInfoList
                                      TimeslotInfoList-LCR-r4
   readSFN-Indicator
                                      BOOLEAN,
   cellSelectionReselectionInfo
                                      CellSelectReselectInfoSIB-11-12-HCS-RSCP
                                                                                 OPTIONAL
}
CellInfoSI-HCS-ECN0 ::=
                                 SEQUENCE {
                                  CellIndividualOffset
   cellIndividualOffset
                                                                         DEFAULT 0,
                                      ReferenceTimeDifferenceToCell
   \tt referenceTimeDifferenceToCell
                                                                         OPTIONAL,
   modeSpecificInfo
                                      CHOICE {
       fdd
                                          SEQUENCE {
                                              PrimaryCPICH-Info OPTIONAL,
PrimaryCPICH-TX-Power OPTIONAL.
           primaryCPICH-Info
                                              PrimaryCPICH-Info
           primaryCPICH-TX-Power
           readSFN-Indicator
                                              BOOLEAN,
           tx-DiversityIndicator
                                              BOOLEAN
       },
       tdd
                                          SEOUENCE {
           primaryCCPCH-Info
                                              PrimaryCCPCH-Info,
           primaryCCPCH-TX-Power
                                              PrimaryCCPCH-TX-Power
                                                                        OPTIONAL,
           timeslotInfoList
                                              TimeslotInfoList
           readSFN-Indicator
                                              BOOLEAN
   cellSelectionReselectionInfo CellSelectReselectInfoSIB-11-12-HCS-ECNO
}
CellInfoSI-HCS-ECN0-LCR-r4 ::= SEQUENCE {
                                  CellIndividualOffset
   cellIndividualOffset
                                                                         DEFAULT 0,
   referenceTimeDifferenceToCell
                                      ReferenceTimeDifferenceToCell
                                                                         OPTIONAL,
                                      PrimaryCCPCH-Info-LCR-r4,
   primaryCCPCH-Info
   primaryCCPCH-TX-Power
                                      PrimaryCCPCH-TX-Power
                                                                          OPTIONAL,
   timeslotInfoList
                                      TimeslotInfoList-LCR-r4
                                                                          OPTIONAL,
   readSFN-Indicator
                                     BOOLEAN,
                                 CellSelectReselectInfoSIB-11-12-HCS-ECN0
   cellSelectionReselectionInfo
                                                                                 OPTIONAL
}
CellMeasuredResults ::=
                                  SEQUENCE {
                                     CellIdentity
   cellIdentity
                                                                          OPTIONAL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                  SFN-SFN-ObsTimeDifference
                                                     OPTIONAL,
   cellSynchronisationInfo CellSynchronisationInfo
   modeSpecificInfo
                                      CHOICE {
       fdd
                                           SEQUENCE {
           primaryCPICH-Info
                                              PrimaryCPICH-Info,
                                              CPICH-Ec-N0
           cpich-Ec-N0
                                                                         OPTIONAL.
           cpich-RSCP
                                               CPICH-RSCP
                                                                         OPTIONAL,
                                              Pathloss
                                                                          OPTIONAL
           pathloss
```

```
},
        tdd
                                            SEQUENCE {
           cellParametersID
                                                CellParametersID,
           proposedTGSN
                                                TGSN
                                                                            OPTIONAL,
           primaryCCPCH-RSCP
                                                PrimaryCCPCH-RSCP
                                                                            OPTIONAL,
                                                Pathloss
           pathloss
                                                                            OPTIONAL,
            timeslotISCP-List
                                                TimeslotISCP-List
                                                                           OPTIONAL
        }
    }
                                    CHOICE {
CellMeasurementEventResults ::=
                                        SEQUENCE (SIZE (1..maxCellMeas)) OF
                                           PrimaryCPICH-Info,
    tdd
                                        SEQUENCE (SIZE (1..maxCellMeas)) OF
                                            PrimaryCCPCH-Info
}
CellMeasurementEventResults-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                           PrimaryCCPCH-Info-LCR-r4
CellReportingQuantities ::=
                                  SEQUENCE {
    -- dummy is not used in this version of the specification
    -- and if received it should be ignored.
                           SFN-SFN-OTD-Type,
    dummy
    cellIdentity-reportingIndicator
                                                        BOOLEAN,
    cellSynchronisationInfoReportingIndicator
                                                        BOOLEAN,
                         CHOICE {
    modeSpecificInfo
        fdd
                                           SEQUENCE {
            cpich-Ec-N0-reportingIndicator
                                                                    BOOLEAN.
            cpich-RSCP-reportingIndicator
                                                                    BOOLEAN.
           pathloss-reportingIndicator
                                                                BOOLEAN
        },
        tdd.
                                          SEQUENCE {
           timeslotISCP-reportingIndicator
                                                                BOOLEAN,
           proposedTGSN-ReportingRequired
                                                                BOOLEAN,
           primaryCCPCH-RSCP-reportingIndicator
                                                                   BOOLEAN,
           pathloss-reportingIndicator
                                                                BOOLEAN
    }
}
CellSelectReselectInfoSIB-11-12 ::= SEQUENCE {
    q	ext{-Offset1S-N}
                                        Q-OffsetS-N
                                                                            DEFAULT 0,
    q-Offset2S-N
                                        Q-OffsetS-N
                                                                            OPTIONAL,
    maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                                                            OPTIONAL,
                                               HCS-NeighbouringCellInformation-RSCP
   hcs-NeighbouringCellInformation-RSCP
    OPTIONAL
    modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
        fdd
           q-OualMin
                                                Q-QualMin
                                                                            OPTIONAL.
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
                                            SEQUENCE {
        tdd
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        },
       gsm
                                            SEQUENCE {
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
    }
}
                                           SEQUENCE {
CellSelectReselectInfoSIB-11-12-RSCP ::=
                                    Q-OffsetS-N
    q-OffsetS-N
                                                                    DEFAULT 0.
    maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                                                            OPTIONAL.
    modeSpecificInfo
                                        CHOICE {
        fdd
                                            SEQUENCE {
           q-QualMin
                                                Q-QualMin
                                                                            OPTIONAL,
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        tdd
                                            SEQUENCE {
           q-RxlevMin
                                               Q-RxlevMin
                                                                            OPTIONAL
        },
                                            SEQUENCE {
        gsm
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
    }
}
```

```
CellSelectReselectInfoSIB-11-12-ECNO ::= SEQUENCE {
    q-Offset1S-N
                                        Q-OffsetS-N
                                                                        DEFAULT 0,
    q-Offset2S-N
                                        O-OffsetS-N
                                                                        DEFAULT 0,
    maxAllowedUL-TX-Power
                                        MaxAllowedUL-TX-Power
                                                                            OPTIONAL,
    modeSpecificInfo
                                        CHOICE {
        fdd
                                            SEQUENCE {
            q-QualMin
                                                                            OPTIONAL.
                                                O-OualMin
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        },
        tdd
                                            SEQUENCE {
                                                Q-RxlevMin
            q-RxlevMin
                                                                            OPTIONAL
        },
                                            SEQUENCE {
       gsm
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        }
    }
}
CellSelectReselectInfoSIB-11-12-HCS-RSCP ::=
                                               SEQUENCE {
                           Q-OffsetS-N
    q-OffsetS-N
                                                                    DEFAULT 0,
    maxAllowedUL-TX-Power
                                       MaxAllowedUL-TX-Power
                                                                            OPTIONAL.
    hcs-NeighbouringCellInformation-RSCP
                                                HCS-NeighbouringCellInformation-RSCP
    OPTIONAL,
    modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
       fdd
            q-QualMin
                                                Q-QualMin
                                                                            OPTIONAL,
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        },
                                            SECUENCE {
        t.dd
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        },
                                            SEQUENCE {
       gsm
                                                Q-RxlevMin
                                                                            OPTIONAL
            q-RxlevMin
        }
    }
}
CellSelectReselectInfoSIB-11-12-HCS-ECNO ::= SEQUENCE {
    q-Offset1S-N
                                        Q-OffsetS-N
                                                                        DEFAULT 0,
    q-Offset2S-N
                                        Q-OffsetS-N
                                                                        DEFAULT 0,
                                        MaxAllowedUL-TX-Power
    maxAllowedUL-TX-Power
                                                                           OPTIONAL,
    hcs-NeighbouringCellInformation-ECN0
                                               HCS-NeighbouringCellInformation-ECN0
    OPTIONAL,
                                        CHOICE {
    modeSpecificInfo
        fdd
                                            SEQUENCE {
                                                O-OualMin
                                                                            OPTIONAL,
           α-OualMin
            q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
                                            SEQUENCE {
        tdd
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        },
                                            SEQUENCE {
       gsm
           q-RxlevMin
                                                Q-RxlevMin
                                                                            OPTIONAL
        }
    }
}
CellSelectReselectInfo-v590ext ::= SEQUENCE {
    deltaOrxlevmin
                                   DeltaOrxlevmin
                                                                    OPTIONAL.
    deltaQhcs
                                    DeltaRSCP
                                                                    OPTIONAL
CellSelectReselectInfoPCHFACH-v5b0ext ::= SEQUENCE {
    q-Hyst-l-S-PCH
                               Q-Hyst-S-Fine
                                                                    OPTIONAL.
    q-Hyst-1-S-FACH
                               Q-Hyst-S-Fine
                                                                    OPTIONAL,
    q-Hyst-2-S-PCH
                               Q-Hyst-S-Fine
                                                                    OPTIONAL,
    q-Hyst-2-S-FACH
                               Q-Hyst-S-Fine
                                                                    OPTIONAL,
                                                                    OPTIONAL,
    t-Reselection-S-PCH
                               T-Reselection-S
                               T-Reselection-S-Fine
    t-Reselection-S-FACH
                                                                    OPTIONAL
CellSelectReselectInfoTreselectionScaling-v5c0ext ::= SEQUENCE {
    -- For speed detection, the same HCS parameters are utilised
   non-HCS-t-CR-Max
                                                T-CRMax
                                                                                        OPTIONAL,
    speedDependentScalingFactor
                                                SpeedDependentScalingFactor
                                                                                        OPTIONAL,
    interFrequencyTreselectionScalingFactor
                                                TreselectionScalingFactor
                                                                                        OPTIONAL,
    interRATTreselectionScalingFactor
                                                TreselectionScalingFactor
                                                                                        OPTIONAL
```

```
}
CellsForInterFreqMeasList ::=
                                  SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       InterFreqCellID
CellsForInterRATMeasList ::=
                                        SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       InterRATCellID
                                   SEQUENCE (SIZE (1..maxCellMeas)) OF
CellsForIntraFreqMeasList ::=
                                       IntraFreqCellID
CellSynchronisationInfo ::=
                                    SEQUENCE {
                                    CHOICÈ {
   modeSpecificInfo
                                          SEQUENCE {
       fdd
                                               CountC-SFN-Frame-difference OPTIONAL,
           countC-SFN-Frame-difference
                                               INTEGER(0..38399)
        },
                                          SEQUENCE {
       tdd
           countC-SFN-Frame-difference
                                              CountC-SFN-Frame-difference OPTIONAL
    }
}
CellToReport ::=
                                   SEQUENCE {
   bsicReported
                                      BSICReported
                                    SEQUENCE (SIZE (1..maxCellMeas)) OF
CellToReportList ::=
                                       CellToReport
CodePhaseSearchWindow ::=
                                    ENUMERATED {
                                       w1023, w1, w2, w3, w4, w6, w8, w12, w16, w24, w32, w48, w64,
                                       w96, w128, w192 }
CountC-SFN-Frame-difference ::= SEQUENCE {
   -- Actual value countC-SFN-High = IE value * 256
   countC-SFN-High
                                   INTEGER(0..15),
   off
                                    INTEGER(0..255)
}
-- SPARE: CPICH-Ec-No, Max = 49
-- Values above Max are spare
CPICH-Ec-N0 ::=
                                    INTEGER (0..63)
-- SPARE: CPICH- RSCP, Max = 91
-- Values above Max are spare
CPICH-RSCP ::=
                                    INTEGER (0..127)
DeltaPRC ::=
                                   INTEGER (-127..127)
--Actual value DeltaQrxlevmin = IE value * 2
DeltaQrxlevmin ::= INTEGER (-2..-1)
DeltaRSCP ::= INTEGER (-5..-1)
DeltaRSCPPerCell ::= SEQUENCE {
   deltaRSCP
                                    DeltaRSCP OPTIONAL
-- Actual value DeltaRRC = IE value * 0.032
                                   INTEGER (-7..7)
DeltaRRC ::=
DGPS-CorrectionSatInfo ::=
                                    SEQUENCE {
   satID
                                        SatID,
    iode
                                        IODE.
   udre
                                        UDRE,
   prc
                                        PRC,
                                       RRC,
   rrc
-- dummy1 and dummy2 are not used in this version of the specification and should be ignored.
   dummy1
                                   DeltaPRC,
                                   DeltaRRC,
    -- dummy3 and dummy4 are not used in this version of the specification. They should not
    -- be sent and if received they should be ignored.
                                   DeltaPRC
                                                       OPTIONAL,
   dummy3
    dummy4
                                   DeltaRRC
                                                       OPTIONAL
DGPS-CorrectionSatInfoList ::=
                                  SEQUENCE (SIZE (1..maxSat)) OF
```

```
DGPS-CorrectionSatInfo
DiffCorrectionStatus ::=
                                             ENUMERATED {
                                                  udre-1-0, udre-0-75, udre-0-5, udre-0-3,
                                                  udre-0-2, udre-0-1, noData, invalidData }
DL-TransportChannelBLER ::=
                                             INTEGER (0..63)
DopplerUncertainty ::=
                                             ENUMERATED {
                                                  hz12-5, hz25, hz50, hz100, hz200,
                                                  spare3, spare2, spare1 }
EllipsoidPoint ::= SEQUENCE {
  latitudeSign ENUMERATED { north, south },
  latitude INTEGER (0..8388607),
  longitude INTEGER (-8388608..8388607)
}
EllipsoidPointAltitude ::=
                                             SEQUENCE {
    latitudeSign ENUMERATED { north, south }, latitude INTEGER (0..8388607), longitude INTEGER (-8388608..8388607),
     altitudeDirection ENUMERATED {height, depth},
     altitude INTEGER (0..32767)
}
EllipsoidPointAltitudeEllipsoide ::=
                                               SEQUENCE {
     latitude INTEGER (0..8388600/, longitude INTEGER (-8388608..8388607), altitudeDirection ENUMERATED {height, depth}, linteger (0..32767),
     uncertaintySemiMajor INTEGER (0..127), uncertaintySemiMinor INTEGER (0..127),
     -- Actual value orientationMajorAxis = IE value * 2
    orientationMajorAxis INTEGER (0..89),
uncertaintyAltitude INTEGER (0..127),
confidence INTEGER (0..100)
}
EllipsoidPointUncertCircle ::= SEQUENCE {
    latitudeSign ENUMERATED { north, south }, latitude INTEGER (0..8388607), longitude INTEGER (-8388608..8388607), uncertaintyCode INTEGER (0..127)
EllipsoidPointUncertEllipse ::=
                                            SEOUENCE {
     INTEGER (0..8388607),
INTEGER (-8388608..8388607),
     latitude
     longitude
     uncertaintySemiMajor INTEGER (0..127), uncertaintySemiMinor INTEGER (0..127),
     -- Actual value orientationMajorAxis = IE value * 2
     orientationMajorAxis INTEGER (0..89), confidence INTEGER (0..100)
}
EnvironmentCharacterisation ::=
                                             ENUMERATED {
                                                  possibleHeavyMultipathNLOS,
                                                  lightMultipathLOS,
                                                  notDefined,
                                                  spare }
                                             SEQUENCE {
Eventla ::=
     triggeringCondition
                                                  TriggeringCondition2,
     reportingRange
                                                  ReportingRange,
     forbiddenAffectCellList
                                                  ForbiddenAffectCellList
                                                                                              OPTIONAL,
     reportDeactivationThreshold
                                                 ReportDeactivationThreshold,
     reportingAmount
                                                 ReportingAmount,
     reportingInterval
                                                 ReportingInterval
}
```

```
SEQUENCE {
Eventla-r4 ::=
   triggeringCondition
                                        TriggeringCondition2,
                                        ReportingRange,
    reportingRange
    {\tt forbiddenAffectCellList}
                                        ForbiddenAffectCellList-r4
                                                                            OPTIONAL,
   reportDeactivationThreshold
                                        ReportDeactivationThreshold,
   reportingAmount
                                        ReportingAmount,
    reportingInterval
                                        ReportingInterval
                                    SEQUENCE {
Eventla-LCR-r4 ::=
                                        TriggeringCondition2,
    triggeringCondition
    reportingRange
                                        ReportingRange,
    forbiddenAffectCellList
                                        ForbiddenAffectCellList-LCR-r4
                                                                                OPTIONAL,
                                        W,
   reportDeactivationThreshold
                                        ReportDeactivationThreshold,
    reportingAmount
                                        ReportingAmount,
    reportingInterval
                                        ReportingInterval
}
Event1b ::=
                                    SEQUENCE {
   triggeringCondition
                                        TriggeringCondition1,
   reportingRange
                                        ReportingRange,
    forbiddenAffectCellList
                                        ForbiddenAffectCellList
                                                                           OPTIONAL.
Event1b-r4 ::=
                                    SEQUENCE {
    triggeringCondition
                                        TriggeringCondition1,
    reportingRange
                                        ReportingRange,
    forbiddenAffectCellList
                                        ForbiddenAffectCellList-r4
                                                                           OPTIONAL,
}
Event1b-LCR-r4 ::=
                                    SEQUENCE {
   triggeringCondition
                                       TriggeringCondition1,
    reportingRange
                                        ReportingRange,
    {\tt forbiddenAffectCellList}
                                        ForbiddenAffectCellList-LCR-r4
                                                                         OPTIONAL,
}
                                    SEQUENCE {
Event1c ::=
   {\tt replacementActivationThreshold}
                                        ReplacementActivationThreshold,
   reportingAmount
                                        ReportingAmount,
   reportingInterval
                                        ReportingInterval
}
Event1d ::=
                                    SEQUENCE {
                                        TriggeringCondition2
                                                              OPTIONAL,
   triggeringCondition
                                        BOOLEAN
   useCIO
                                                                 OPTIONAL
}
Eventle ::=
                                SEQUENCE {
                                        TriggeringCondition2,
   triggeringCondition
    thresholdUsedFrequency
                                        ThresholdUsedFrequency
}
                                SEQUENCE {
Eventle-r6 ::=
    {\tt triggeringCondition}
                                        TriggeringCondition2,
    thresholdUsedFrequency
                                        ThresholdUsedFrequency-r6
}
                                SEQUENCE {
Event1f ::=
    triggeringCondition
                                        TriggeringCondition1,
    thresholdUsedFrequency
                                        ThresholdUsedFrequency
}
Event1f-r6 ::=
                                SEQUENCE {
    {\tt triggeringCondition}
                                        TriggeringCondition1,
    thresholdUsedFrequency
                                        ThresholdUsedFrequency-r6
}
Event1j-r6 ::=
                                SEQUENCE {
   replacementActivationThreshold
                                    ReplacementActivationThreshold,
   reportingAmount
                                        ReportingAmount,
    reportingInterval
                                        ReportingInterval
}
```

```
Event2a ::=
                                  SEQUENCE {
   -- dummy is not used in this version of the specification and should be ignored
                                      Threshold,
   dummy
   usedFreqW
                                      W,
                                      HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
                                                                        OPTIONAL.
   reportingCellStatus
                                      ReportingCellStatus
                                     NonUsedFreqParameterList
   nonUsedFreqParameterList
                                                                        OPTIONAL
                                  SEQUENCE {
Event2a-r6 ::=
   usedFreqW
                                      W,
                                      HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                      ReportingCellStatus
                                                                         OPTIONAL,
   nonUsedFreqParameterList
                                     NonUsedFreqWList-r6
                                                                         OPTIONAL
}
Event2b ::=
                                  SEQUENCE {
   usedFreqThreshold
                                     Threshold,
   usedFreqW
                                      W,
   hysteresis
                                      HysteresisInterFreq,
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                      ReportingCellStatus
                                                                         OPTIONAL.
                                      NonUsedFreqParameterList
   nonUsedFreqParameterList
                                                                         OPTIONAL
}
Event2b-r6 ::=
                                  SEQUENCE {
   usedFreqThreshold
                                      Threshold-r6,
   usedFreqW
                                      W,
                                     HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
                                     ReportingCellStatus
   reportingCellStatus
                                                                         OPTIONAL.
                                    NonUsedFreqParameterList-r6
   nonUsedFreqParameterList
                                                                         OPTIONAL
}
                                  SEQUENCE {
Event2c ::=
                                      HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                      ReportingCellStatus
                                                                         OPTIONAL,
   nonUsedFreqParameterList
                                      NonUsedFreqParameterList
                                                                        OPTIONAL
}
Event2c-r6 ::=
                                  SEQUENCE {
   hysteresis
                                   HysteresisInterFreq,
                                      TimeToTrigger,
   timeToTrigger
   reportingCellStatus
                                      ReportingCellStatus
                                                                         OPTIONAL,
                                      NonUsedFreqParameterList-r6
   nonUsedFreqParameterList
                                                                         OPTIONAL
}
Event2d ::=
                                  SEOUENCE {
   usedFreqThreshold
                                      Threshold,
   usedFreqW
                                      HysteresisInterFreq,
   hysteresis
                                      TimeToTrigger,
   timeToTrigger
   reportingCellStatus
                                      ReportingCellStatus
                                                                        OPTIONAL
}
Event2d-r6 ::=
                                  SEQUENCE {
   usedFreqThreshold
                                      Threshold-r6,
   usedFreqW
                                      W,
                                      HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
                                                                        OPTIONAL
   reportingCellStatus
                                      ReportingCellStatus
}
Event2e ::=
                                  SEQUENCE {
                                      HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                      ReportingCellStatus
                                                                        OPTIONAL,
   nonUsedFreqParameterList
                                      NonUsedFreqParameterList
                                                                         OPTIONAL
}
Event2e-r6 ::=
                                  SEQUENCE {
                                     HysteresisInterFreq,
   hysteresis
   timeToTrigger
                                      TimeToTrigger.
                                                                         OPTIONAL,
   reportingCellStatus
                                      ReportingCellStatus
```

```
nonUsedFreqParameterList
                                      NonUsedFreqParameterList-r6
                                                                            OPTIONAL
}
Event2f ::=
                                    SEQUENCE {
   usedFreqThreshold
                                        Threshold,
   usedFreqW
   hysteresis
                                        HysteresisInterFreq,
   timeToTrigger
                                        TimeToTrigger,
   reportingCellStatus
                                       ReportingCellStatus
                                                                            OPTIONAL
Event2f-r6 ::=
                                    SEQUENCE {
   usedFreqThreshold
                                        Threshold-r6,
   usedFreqW
   hysteresis
                                        HysteresisInterFreq,
   timeToTrigger
                                        TimeToTrigger,
                                        ReportingCellStatus
   reportingCellStatus
                                                                            OPTIONAL
}
Event3a ::=
                                    SEQUENCE {
   thresholdOwnSystem
                                       Threshold,
                                        W,
   thresholdOtherSystem
                                        Threshold,
   hysteresis
                                        Hysteresis,
                                        TimeToTrigger,
   timeToTrigger
                                                                            OPTIONAL
   reportingCellStatus
                                        ReportingCellStatus
}
Event3b ::=
                                    SEQUENCE {
   thresholdOtherSystem
                                       Threshold,
   hysteresis
                                        Hysteresis,
   timeToTrigger
                                        TimeToTrigger,
   reportingCellStatus
                                        ReportingCellStatus
                                                                            OPTIONAL
}
Event3c ::=
                                    SEQUENCE {
                                    Threshold,
Hysteresis,
   thresholdOtherSystem
   hvsteresis
   timeToTrigger
                                        TimeToTrigger,
   reportingCellStatus
                                        ReportingCellStatus
                                                                            OPTIONAL
}
Event3d ::=
                                    SEQUENCE {
  hysteresis
                                      Hysteresis,
   timeToTrigger
                                        TimeToTrigger,
                                                                            OPTIONAL
   reportingCellStatus
                                        ReportingCellStatus
EventIDInterFreq ::=
                                    ENUMERATED {
                                        e2a, e2b, e2c, e2d, e2e, e2f, spare2, spare1 }
EventIDInterRAT ::=
                                    ENUMERATED {
                                        e3a, e3b, e3c, e3d }
EventIDIntraFreq ::=
                                    ENUMERATED {
                                        ela, elb, elc, eld, ele,
                                         elf, elg, elh, eli, elj,
                                        spare6, spare5, spare4, spare3, spare2,
spare1 }
EventResults ::=
                                    CHOICE {
                                    IntraFreqEventResults,
   intraFreqEventResults
    interFreqEventResults
                                        InterFreqEventResults,
                                       InterRATEventResults,
    interRATEventResults
   trafficVolumeEventResults TrafficVolumeEventResults, qualityEventResults QualityEventResults, ue-InternalEventResults UE-InternalEventResults,
    ue-positioning-MeasurementEventResults
                                                  UE-Positioning-MeasurementEventResults,
    spare
                                        NULL
}
                                   SEQUENCE {
ExtraDopplerInfo ::=
    -- Actual value doppler1stOrder = IE value * 0.023
   doppler1stOrder
                                        INTEGER (-42..21),
   dopplerUncertainty
                                        DopplerUncertainty
}
```

```
{\tt FACH-MeasurementOccasionInfo} ::= \\ {\tt SEQUENCE} \ \{
    fACH-meas-occasion-coeff
                                        INTEGER (1..12)
                                                                              OPTIONAL,
                                        BOOLEAN,
    inter-freg-FDD-meas-ind
    -- inter-freq-TDD-meas-ind is for 3.84 \text{Mcps} TDD and 7.68 Mcps TDD. For 1.28 \text{Mcps} TDD, the IE in
    -- FACH-MeasurementOccasionInfo-LCR-r4-ext is used.
    inter-freq-TDD-meas-ind
                                        BOOLEAN,
    inter-RAT-meas-ind
                                        SEQUENCE (SIZE (1..maxOtherRAT)) OF
                                                                              OPTIONAL
                                            RAT-Type
}
FACH-MeasurementOccasionInfo-LCR-r4-ext ::= SEQUENCE {
    inter-freq-TDD128-meas-ind
FilterCoefficient ::=
                                    ENUMERATED {
                                       fc0, fc1, fc2, fc3, fc4, fc5,
                                         fc6, fc7, fc8, fc9, fc11, fc13,
                                         fc15, fc17, fc19, spare1 }
-- Actual value FineSFN-SFN = IE value * 0.0625
FineSFN-SFN ::=
                                    INTEGER (0..15)
ForbiddenAffectCell ::=
                                    CHOICE {
    fdd
                                        PrimaryCPICH-Info,
    tdd
                                        PrimaryCCPCH-Info
}
ForbiddenAffectCell-r4 ::=
                                    CHOICE {
                                         PrimaryCPICH-Info,
    fdd
    t.dd
                                        PrimaryCCPCH-Info-r4
ForbiddenAffectCell-LCR-r4 ::=
                                    SEQUENCE {
                                        PrimaryCCPCH-Info-LCR-r4
ForbiddenAffectCellList ::=
                                    SEQUENCE (SIZE (1..maxCellMeas)) OF
                                        ForbiddenAffectCell
ForbiddenAffectCellList-r4 ::=
                                         SEQUENCE (SIZE (1..maxCellMeas)) OF
                                         ForbiddenAffectCell-r4
ForbiddenAffectCellList-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                         ForbiddenAffectCell-LCR-r4
{\tt FreqQualityEstimateQuantity-FDD} ::= {\tt ENUMERATED} \ \{
                                         cpich-Ec-N0,
                                         cpich-RSCP }
FreqQualityEstimateQuantity-TDD ::= ENUMERATED {
                                        primaryCCPCH-RSCP }
GPS-MeasurementParam ::=
                                    SEQUENCE {
                                        INTEGER (0..63),
INTEGER (0..63),
    satelliteID
    c-N0
    doppler
                                        INTEGER (-32768..32768),
    wholeGPS-Chips
                                        INTEGER (0..1022),
    fractionalGPS-Chips
                                        INTEGER (0..1023),
    multipathIndicator
                                        MultipathIndicator,
    pseudorangeRMS-Error
                                        INTEGER (0..63)
GPS-MeasurementParamList ::=
                                   SEQUENCE (SIZE (1..maxSat)) OF
                                         GPS-MeasurementParam
GSM-CarrierRSSI ::=
                                    BIT STRING (SIZE (6))
GSM-MeasuredResults ::=
                                    SEQUENCE {
                                        GSM-CarrierRSSI
                                                                              OPTIONAL,
   gsm-CarrierRSSI
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                                        INTEGER (46..173)
                                                                              OPTIONAL,
                                        BSICReported,
    -- dummy2 is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                                        ObservedTimeDifferenceToGSM
                                                                            OPTIONAL
    dummy2
```

```
GSM-MeasuredResultsList ::=
                              SEQUENCE (SIZE (1..maxReportedGSMCells)) OF
                                    GSM-MeasuredResults
GPS-TOW-1msec ::=
                                INTEGER (0..604799999)
                                SEQUENCE {
GPS-TOW-Assist ::=
   satID
                                    SatID,
   tlm-Message
                                    BIT STRING (SIZE (14)),
   tlm-Reserved
                                    BIT STRING (SIZE (2)),
   alert
                                   BOOLEAN.
                                    BOOLEAN
   antiSpoof
}
GPS-TOW-AssistList ::=
                                SEQUENCE (SIZE (1..maxSat)) OF
                                   GPS-TOW-Assist
                                       SEQUENCE {
HCS-CellReselectInformation-RSCP ::=
   -- TABULAR: The default value for penaltyTime is "notUsed"
   -- Temporary offset is nested inside PenaltyTime-RSCP
   penaltyTime
                                           PenaltyTime-RSCP
}
HCS-CellReselectInformation-ECN0 ::=
                                      SEQUENCE {
   -- TABULAR: The default value for penaltyTime is "notUsed"
   -- Temporary offset is nested inside PenaltyTime-ECN0
   penaltyTime
                                   PenaltyTime-ECN0
}
hcs-PRIO
                                   HCS-PRIO
                                                                    DEFAULT 0,
                                                                    DEFAULT 0,
   hcs-CellReselectInformation
                                   HCS-CellReselectInformation-RSCP
}
HCS-NeighbouringCellInformation-ECN0 ::= SEQUENCE {
   hcs-PRIO
                                   HCS-PRIO
                                                                    DEFAULT 0,
                                                                    DEFAULT 0,
   a-HCS
                                    O-HCS
   hcs-CellReselectInformation
                                   HCS-CellReselectInformation-ECN0
}
HCS-PRIO ::=
                               INTEGER (0..7)
HCS-ServingCellInformation ::= SEQUENCE {
   hcs-PRIO
                                   HCS-PRIO
                                                                    DEFAULT 0,
   q-HCS
                                    Q-HCS
                                                                    DEFAULT 0,
   t.-CR-Max
                                    T-CRMax
                                                                    OPTIONAL
}
\label{eq:horizontalVelocity} \mbox{ ::= } \qquad \qquad \mbox{ SEQUENCE } \{
                                    INTEGER (0..359),
   bearing
                                    INTEGER (0..2047)
   horizontalSpeed
HorizontalWithVerticalVelocity ::= SEQUENCE {
   verticalSpeedDirection
                                   ENUMERATED { upward, downward },
   bearing
                                    INTEGER (0..359),
   horizontalSpeed
                                    INTEGER (0..2047),
   verticalSpeed
                                    INTEGER (0..255)
}
INTEGER (0..359),
  bearing
   horizontalSpeed
                                    INTEGER (0..2047),
   horizontalSpeedUncertainty INTEGER (0..255)
HorizontalWithVerticalVelocityAndUncertainty ::= SEQUENCE {
   bearing
                                   INTEGER (0..359),
   horizontalSpeed
                                   INTEGER (0..2047),
                                   INTEGER (0..255),
   verticalSpeed
   horizontalSpeedUncertainty
                                   INTEGER (0..255)
}
-- Actual value Hysteresis = IE value * 0.5
Hysteresis ::=
                               INTEGER (0..15)
```

```
-- Actual value HysteresisInterFreq = IE value * 0.5
HysteresisInterFreq ::=
                                    INTEGER (0..29)
InterFreqCell ::=
                                    SEQUENCE {
    frequencyInfo
                                         FrequencyInfo,
    nonFreqRelatedEventResults
                                         CellMeasurementEventResults
}
InterFreqCell-LCR-r4 ::=
                                   SEQUENCE {
    frequencyInfo
                                        FrequencyInfo,
    nonFreqRelatedEventResults
                                         CellMeasurementEventResults-LCR-r4
InterFreqCellID ::=
                                    INTEGER (0..maxCellMeas-1)
InterFreqCellInfoList ::=
                                   SEQUENCE {
    removedInterFreqCellList
newInterFreqCellList
cellsForInterFreqMeasList
                                    RemovedInterFreqCellList
                                                                             OPTIONAL,
                                         NewInterFreqCellList
                                                                              OPTIONAL,
                                     CellsForInterFreqMeasList
}
InterFreqCellInfoList-r4 ::= SEQUENCE {
   removedInterFreqCellList Removed
   removedInterFreqCellList Removed
                                   RemovedInterFreqCellList OPTIONAL,
NewInterFreqCellList-r4 OPTIONAL,
   newInterFreqCellList
   cellsForInterFreqMeasList
                                        CellsForInterFreqMeasList
}
InterFreqCellInfoSI-List-RSCP ::= SEQUENCE {
  removedInterFreqCellList
  newInterFreqCellList NewInterFreqCellSI-List-R
                                       RemovedInterFreqCellList
NewInterFreqCellSI-List-RSCP
                                                                             OPTIONAL
InterFreqCellInfoSI-List-ECN0 ::= SEQUENCE {
  removedInterFreqCellList
  newInterFreqCellList
    NewInterFreqCellSI-List-EC
                                                                             OPTIONAL,
                                       RemovedInterFreqCellList
NewInterFreqCellSI-List-ECN0
    newInterFreqCellList
}
OPTIONAL,
InterFreqCellInfoSI-List-HCS-ECN0 ::=
                                            SECUENCE {
   removedInterFreqCellList

newInterFreqCellList

NowInterFreqCellList
                                        RemovedInterFreqCellList OPTIONAL, NewInterFreqCellSI-List-HCS-ECNO OPTIONAL
   newInterFreqCellList
}
InterFreqCellInfoSI-List-RSCP-LCR ::=
                                           SEQUENCE {
   removedInterFreqCellList

newInterFreqCellList

NowInterFreqCellList
                                        NewInterFreqCellSI-List-RSCP-LCR-r4 OPTIONAL
   newInterFreqCellList
}
InterFreqCellInfoSI-List-ECNO-LCR ::= SEQUENCE {
   removedInterFreqCellList RemovedInterFreqCellList
   newInterFreqCellList
                                        NewInterFreqCellSI-List-ECN0-LCR-r4 OPTIONAL
}
InterFreqCellInfoSI-List-HCS-RSCP-LCR ::= SEQUENCE {
   removedInterFreqCellList

newInterFreqCellList

NowInterFreqCellList
                                                                             OPTIONAL,
                                        NewInterFreqCellSI-List-HCS-RSCP-LCR-r4 OPTIONAL
   newInterFreqCellList
InterFreqCellInfoSI-List-HCS-ECNO-LCR ::=
                                                 SEQUENCE {
   removedInterFreqCellList RemovedInterFreqCellList OPTIONAL, newInterFreqCellList NewInterFreqCellSI-List-HCS-ECNO-LCR-r4 OPTIONAL
}
                          SEQUENCE (SIZE (1..maxFreq)) OF
InterFreqCellList ::=
                                        InterFreqCell
InterFreqCellList-LCR-r4-ext ::= SEQUENCE (SIZE (1..maxFreq)) OF
                                        InterFreqCell-LCR-r4
CellMeasuredResults
InterFreqEvent ::=
                                     CHOICE {
                                         Event2a,
    event.2a
    event.2b
                                         Event 2b,
    event2c
                                         Event2c,
```

```
event2d
                                       Event2d,
    event2e
                                       Event2e,
    event2f
                                       Event2f
}
InterFreqEvent-r6 ::=
                                  CHOICE {
                                      Event2a-r6,
    event.2a
    event.2b
                                       Event.2b-r6.
    event2c
                                       Event2c-r6,
    event2d
                                       Event2d-r6,
    event2e
                                       Event2e-r6,
                                       Event2f-r6
    event.2f
}
InterFreqEventList ::=
                                  SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                       InterFregEvent
InterFreqEventList-r6 ::=
                                  SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                       InterFreqEvent-r6
--Following IE shall be used regardless of CPICH RSCP(FDD) or Primary CCPCH RSCP(TDD)
--The order of the list corresponds to the order of the cells in InterFrequencyMeasuredResultsList
--The IE is only used for measured results and not for additional measured results.
InterFrequencyMeasuredResultsList-v590ext ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                               DeltaRSCPPerCell
Inter-FreqEventCriteria-v590ext ::= SEQUENCE {
    threholdUsedFrequency-delta
                                           DeltaRSCP,
    threholdNonUsedFrequency-deltaList
                                           ThreholdNonUsedFrequency-deltaList
}
--The order of the list corresponds to the order of the events in Inter-FreqEventList
Inter-FreqEventCriteriaList-v590ext ::= SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                           Inter-FregEventCriteria-v590ext
--The order of the list corresponds to the order of relevant events in Intra-FreqEventCriteriaList
--i.e. the first element of the list corresponds to the first occurance of event le, lf, lh, li,
--the second element of the list corresponds to the second occurance of event 1e, 1f, 1h, 1i
Intra-FreqEventCriteriaList-v590ext ::= SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                           DeltaRSCP
--Following IE shall be used regardless of CPICH RSCP(FDD) or Primary CCPCH RSCP(TDD)
--The order of the list corresponds to the order of the cells in IntraFrequencyMeasuredResultsList
--The IE is only used for measured results and not for additional measured results.
IntraFrequencyMeasuredResultsList-v590ext ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                               DeltaRSCPPerCell
IntraFreqReportingCriteria-1b-r5 ::= SEQUENCE {
   periodicReportingInfo-1b
                                       PeriodicReportingInfo-1b
}
PeriodicReportingInfo-1b ::= SEQUENCE {
   reportingAmount
                                       ReportingAmount,
   reportingInterval
                                       ReportingInterval
}
InterFreqEventResults ::=
                                  SEQUENCE {
                                      EventIDInterFreq,
   eventID
    interFreqCellList
                                       InterFreqCellList
                                                                         OPTIONAL
}
InterFreqEventResults-LCR-r4-ext ::=
                                       SEQUENCE {
   eventID
                                       EventIDInterFreq,
    interFreqCellList
                                       InterFreqCellList-LCR-r4-ext OPTIONAL
}
InterFreqMeasQuantity ::= SEQUENCE {
                                    CHOICE {
   reportingCriteria
        intraFreqReportingCriteria
                                           SEQUENCE {
           intraFreqMeasQuantity
                                               IntraFreqMeasQuantity
        interFreqReportingCriteria
                                           SEQUENCE {
           filterCoefficient
                                               FilterCoefficient
                                                                         DEFAULT fc0,
           {\tt modeSpecificInfo}
                                               CHOICE {
                                                   SEQUENCE {
               fdd
                   freqQualityEstimateQuantity-FDD
                                                      FreqQualityEstimateQuantity-FDD
                                                   SEQUENCE {
               t.dd
```

```
freqQualityEstimateQuantity-TDD
                                                       FreqQualityEstimateQuantity-TDD
               }
           }
       }
    }
}
                                   SEQUENCE {
InterFreqMeasuredResults ::=
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL,
    utra-CarrierRSSI
                                       UTRA-CarrierRSSI
                                                                           OPTIONAL,
    interFreqCellMeasuredResultsList
                                       InterFreqCellMeasuredResultsList
                                                                           OPTIONAL
}
InterFreqMeasuredResultsList ::= SEQUENCE (SIZE (1..maxFreq)) OF
                                       InterFreqMeasuredResults
InterFreqMeasurementSysInfo-RSCP ::=
                                       SEQUENCE {
    interFreqCellInfoSI-List
                                           InterFreqCellInfoSI-List-RSCP
}
InterFreqMeasurementSysInfo-ECN0 ::=
                                         SEQUENCE {
    interFreqCellInfoSI-List
                                       InterFreqCellInfoSI-List-ECN0
                                                                         OPTIONAL
InterFreqMeasurementSysInfo-HCS-RSCP ::=
                                             SEQUENCE {
    interFreqCellInfoSI-List
                                      InterFreqCellInfoSI-List-HCS-RSCP OPTIONAL
InterFreqMeasurementSysInfo-HCS-ECN0 ::=
                                             SEQUENCE {
    interFreqCellInfoSI-List
                                      InterFreqCellInfoSI-List-HCS-ECNO OPTIONAL
InterFreqMeasurementSysInfo-RSCP-LCR-r4 ::= SEQUENCE {
    interFreqCellInfoSI-List
                                           InterFreqCellInfoSI-List-RSCP-LCR
                                                                                  OPTIONAL
InterFreqMeasurementSysInfo-ECN0-LCR-r4 ::=
                                            SEOUENCE {
    interFreqCellInfoSI-List
                                       InterFreqCellInfoSI-List-ECN0-LCR
                                                                              OPTIONAL
}
InterFregMeasurementSysInfo-HCS-RSCP-LCR-r4 ::=
                                                  SEQUENCE {
    interFreqCellInfoSI-List
                                       InterFreqCellInfoSI-List-HCS-RSCP-LCR OPTIONAL
InterFreqMeasurementSysInfo-HCS-ECN0-LCR-r4 ::=
                                                   SEOUENCE {
    interFreqCellInfoSI-List
                                      InterFreqCellInfoSI-List-HCS-ECNO-LCR OPTIONAL
InterFreqRACHRepCellsList ::=
                                 SEQUENCE (SIZE (1..maxFreq)) OF
{\tt InterFreqCellID}
InterFreqRACHReportingInfo ::= SEQUENCE {
                                       CHOICE {
   modeSpecificInfo
                                           SEQUENCE {
        fdd
           \verb|interFreqRepQuantityRACH-FDD||
                                               InterFreqRepQuantityRACH-FDD
                                           SEQUENCE {
           interFreqRepQuantityRACH-TDDList
                                              InterFreqRepQuantityRACH-TDDList
    interFreqRACHReportingThreshold
                                      Threshold,
    maxReportedCellsOnRACHinterFreq
                                      MaxReportedCellsOnRACHinterFreq
}
InterFreqReportCriteria ::=
                                   CHOICE {
    intraFreqReportingCriteria
                                      IntraFreqReportingCriteria,
    interFreqReportingCriteria
                                       InterFreqReportingCriteria,
    periodicalReportingCriteria
                                      PeriodicalWithReportingCellStatus,
    noReporting
                                       ReportingCellStatusOpt
InterFreqReportCriteria-r4 ::=
                                   CHOICE {
    intraFreqReportingCriteria
                                      IntraFreqReportingCriteria-r4,
    interFreqReportingCriteria
                                       InterFreqReportingCriteria,
   {\tt periodicalReportingCriteria}
                                      PeriodicalWithReportingCellStatus,
                                       ReportingCellStatusOpt
    noReporting
```

```
CHOICE {
InterFreqReportCriteria-r6 ::=
                                                               IntraFreqReportingCriteria-r6,
       intraFreqReportingCriteria
       interFreqReportingCriteria
                                                                         InterFreqReportingCriteria-r6,
       periodicalReportingCriteria
                                                                          PeriodicalWithReportingCellStatus,
                                                                         ReportingCellStatusOpt
       noReporting
}
InterFreqReportingCriteria ::= SEQUENCE {
       interFreqEventList
                                                                         InterFreqEventList
                                                                                                                                             OPTIONAL
InterFreqReportingCriteria-r6 ::= SEQUENCE {
       interFreqEventList
                                                                       InterFreqEventList-r6
                                                                                                                                            OPTIONAL
}
                                                                  SEQUENCE {
InterFreqReportingQuantity ::=
                                                                  BOOLEAN,
       utra-Carrier-RSSI
       frequencyQualityEstimate
                                                                         BOOLEAN,
       nonFreqRelatedQuantities
                                                                         CellReportingQuantities
}
InterFreqRepQuantityRACH-FDD ::=
                                                                  ENUMERATED {
                                                                         cpich-EcN0, cpich-RSCP }
                                                                   ENUMERATED {
InterFreqRepQuantityRACH-TDD ::=
                                                                          timeslotISCP,
                                                                          primaryCCPCH-RSCP }
InterFreqRepQuantityRACH-TDDList ::= SEQUENCE (SIZE (1..2)) OF
                                                                          InterFreqRepQuantityRACH-TDD
\label{eq:continuous_section} \mbox{InterFrequencyMeasurement} \ ::= \ \ \mbox{SEQUENCE} \ \big\{
                                                                         InterFreqCellInfoList,
       interFreqCellInfoList
                                                                                                                                             OPTIONAL,
       interFreqMeasQuantity
                                                                         InterFreqMeasQuantity
       interFreqReportingQuantity
                                                                  Interrrequese.

MeasurementValidity
                                                                          InterFreqReportingQuantity
                                                                                                                                             OPTIONAL,
       measurementValidity
                                                                                                                                            OPTIONAL,
       interFreqSetUpdate
                                                                                                                                            OPTIONAL,
                                                                         UE-AutonomousUpdateMode
       reportCriteria
                                                                         InterFreqReportCriteria
}
InterFrequencyMeasurement-r4 ::= SEQUENCE {
                                                   InterFreqCellInfoList-r4,
       interFreqCellInfoList
       interFreqMeasQuantity
                                                                          InterFreqMeasQuantity
                                                                                                                                            OPTIONAL,
       interFreqReportingQuantity
                                                                        InterFreqReportingQuantity
                                                                                                                                          OPTIONAL,
       measurementValidity
                                                                         MeasurementValidity
                                                                                                                                            OPTIONAL,
                                                                         UE-AutonomousUpdateMode
       interFreqSetUpdate
                                                                                                                                             OPTIONAL,
       reportCriteria
                                                                         InterFreqReportCriteria-r4
\label{eq:continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous_continuous
                                                                {\tt InterFreqCellInfoList-r4},\\
       interFreqCellInfoList
       interFreqMeasQuantity
                                                                         InterFreqMeasQuantity
                                                                                                                                             OPTIONAL,
                                                                   InterFreqReportingQuantity
MeasurementValidity
       interFreqReportingQuantity
                                                                                                                                            OPTIONAL,
       measurementValidity
                                                                                                                                             OPTIONAL,
                                                                         UE-AutonomousUpdateMode
                                                                                                                                             OPTIONAL,
       interFreqSetUpdate
       reportCriteria
                                                                          InterFreqReportCriteria-r6
}
InterRAT-TargetCellDescription ::= SEQUENCE {
       technologySpecificInfo
                                                                          CHOICE {
                                                                                  SEQUENCE {
              gsm
                      bsic
                                                                                        BSIC,
                      frequency-band
                                                                                         Frequency-Band,
                      bcch-ARFCN
                                                                                         BCCH-ARFCN,
                      ncMode
                                                                                         NC-Mode
                                                                                                                              OPTIONAL
               },
               is-2000
                                                                                 NULL,
               spare2
                                                                                 NULL,
               spare1
                                                                                 NULL
       }
}
InterRATCellID ::=
                                                         INTEGER (0..maxCellMeas-1)
InterRATCellInfoIndication ::=
                                                                 INTEGER (0..3)
InterRATCellInfoList ::=
                                                                  SEQUENCE {
```

```
RemovedInterRATCellList,
   removedInterRATCellList
    -- NOTE: Future revisions of dedicated messages including IE newInterRATCellList
    -- should use a corrected version of this IE
   newInterRATCellList NewInterRATCellList, cellsForInterRATMeasList CellsForInterPAT
                                      CellsForInterRATMeasList
                                                                           OPTIONAL
}
InterRATCellInfoList-B ::= SEQUENCE {
   removedInterRATCellList RemovedInterRATCellList,
    -- NOTE: IE newInterRATCellList should be optional. However, system information
    -- does not support message versions. Hence, this can not be corrected
                                   NewInterRATCellList-B
   newInterRATCellList
}
InterRATCellInfoList-r4 ::=
  cerRATCellInfoList-r4 ::=
removedInterRATCellList
                                   SEQUENCE {
                                    RemovedInterRATCellList,
   newInterRATCellList
                                            NewInterRATCellList
                                                                                OPTIONAL.
    cellsForInterRATMeasList
                                            CellsForInterRATMeasList
                                                                                OPTIONAL
}
InterRATCellInfoList-r6 ::=
    removedInterRATCellList
                                  SEQUENCE {
                                    RemovedInterRATCellList,
                                                                               OPTIONAL,
    newInterRATCellList
                                            NewInterRATCellList
   cellsForInterRATMeasList
                                                                               OPTIONAL,
                                           CellsForInterRATMeasList
                                           InterRATCellInfoIndication
   interRATCellInfoIndication-r6
                                                                               OPTIONAL
}
InterRATCellIndividualOffset ::=
                                          INTEGER (-50..50)
                               CHOICE {
InterRATEvent ::=
    event3a
                                        Event3a,
    event3b
                                        Event3b,
   event3c
                                        Event3c,
    event3d
                                        Event3d
}
                              SEQUENCE (SIZE (1..maxMeasEvent)) OF
InterRATEventList ::=
                                       InterRATEvent
InterRATEventResults ::=
                                    SEQUENCE {
    eventID
                                       EventIDInterRAT,
                                       CellToReportList
   cellToReportList
}
InterRATInfo ::=
                                    ENUMERATED {
                                       gsm }
InterRATInfo-r6 ::=
                                    SEQUENCE {
                                       InterRATInfo,
                                       GSM-TargetCellInfoList
   gsm-TargetCellInfoList
}
InterRATMeasQuantity ::=
                                       SEQUENCE {
   measQuantityUTRAN-QualityEstimate
                                            IntraFreqMeasQuantity OPTIONAL,
                                        CHOICE {
   ratSpecificInfo
                                                SEQUENCE {
        qsm
                                                    MeasurementQuantityGSM, FilterCoefficient DEFAULT fc0,
           measurementQuantity
            filterCoefficient
           bsic-VerificationRequired
                                                    BSIC-VerificationRequired
        },
        is-2000
                                                SEQUENCE {
           tadd-EcIo
                                                   INTEGER (0..63),
                                                    INTEGER (0..15),
           tcomp-EcIo
                                                                     OPTIONAL,
OPTIONAL
                                                    INTEGER (0..63)
           softSlope
                                                    INTEGER (0..63)
           addIntercept
        }
    }
}
InterRATMeasuredResults ::= CHOICE {
                                        GSM-MeasuredResultsList,
   spare
}
InterRATMeasuredResultsList ::= SEQUENCE (SIZE (1..maxOtherRAT-16)) OF
                                       InterRATMeasuredResults
InterRATMeasurement ::=
                              SEOUENCE {
```

```
interRATCellInfoList
                                          InterRATCellInfoList
                                                                                  OPTIONAL,
    interRATMeasQuantity
                                           InterRATMeasQuantity
                                                                                   OPTIONAL,
    interRATMeasQuantity InterRATMeasQuantity OPTIO interRATReportingQuantity InterRATReportingQuantity OPTIONAL,
    reportCriteria
                                          InterRATReportCriteria
InterRATMeasurement-r4 ::= SEQUENCE {
  interRATCellInfoList InterRatInterRATMeasQuantity InterRation
                                     InterRATCellInfoList-r4 OPTIONAL,
                                          InterRATMeasQuantity
                                                                                  OPTIONAL,
    interRATReportingQuantity
                                           InterRATReportingQuantity OPTIONAL,
    reportCriteria
                                           InterRATReportCriteria
}
InterRATCellInfoList-r6
InterRATMeasQuantity
                                                                            OPTIONAL,
                                          InterRATMeasQuantity OPTIO InterRATReportingQuantity OPTIONAL,
    interRATReportingQuantity
    reportCriteria
                                           InterRATReportCriteria
}
InterRATMeasurementSysInfo ::= SEQUENCE {
    interRATCellInfoList
                                          InterRATCellInfoList
                                                                                 OPTIONAL
InterRATMeasurementSysInfo-B ::= SEQUENCE {
                                         InterRATCellInfoList-B
                                                                            OPTIONAL
    interRATCellInfoList
InterRATReportCriteria ::= CHOICE {
    inter RATR eporting Criteria \\ Inter RATR eporting Criteria,
    interRATKeportingCriteria PeriodicalWithReportingCriteria PeriodicalWithReportingCriteria ReportingCellStatusOpt
                                           PeriodicalWithReportingCellStatus,
    noReporting
}
{\tt InterRATReportingCriteria} ::= {\tt SEQUENCE} \; \{
    interRATEventList
                                    InterRATEventList
                                                                        OPTIONAL
InterRATReportingQuantity ::= SEQUENCE {
    erRATKeportinggument
                                       BOOLEAN,
    ratSpecificInfo
                                       CHOICE {
                                               SEOUENCE {
        qsm
             \mbox{--}\mbox{ dummy} and dummy2 are not used in this version of the specification
             -- and when received they should be ignored.
                                                    BOOLEAN,
             dummy2
                                                    BOOLEAN,
             gsm-Carrier-RSSI
                                                    BOOLEAN
         }
    }
}
                                      INTEGER (0..maxCellMeas-1)
IntraFreqCellID ::=
IntraFreqCellInfoList ::=
    removedIntraFreqCellList
                                      SEQUENCE {
                                       RemovedIntraFreqCellList OPTIONAL,
                                                                                  OPTIONAL,
    newIntraFreqCellList
                                           NewIntraFreqCellList
    cellsForIntraFreqMeasList
                                           CellsForIntraFreqMeasList
                                                                                  OPTIONAL
}
IntraFreqCellInfoList-r4 ::= SEQUENCE {
  removedIntraFreqCellList Removed
  newIntraFreqCellList NewInt:
  cellsForIntraFreqMeasList CellsForIntraFreqMeasList
                                       RemovedIntraFreqCellList
                                                                                 OPTIONAL,
                                           NewIntraFreqCellList-r4
                                                                                  OPTIONAL,
                                           CellsForIntraFreqMeasList
}
IntraFreqCellInfoSI-List-RSCP ::= SEQUENCE {
    removedIntraFreqCellList
                                           RemovedIntraFreqCellList
                                                                                  OPTIONAL,
                                           NewIntraFreqCellSI-List-RSCP
    newIntraFreqCellList
}
IntraFreqCellInfoSI-List-ECN0 ::= SEQUENCE {
   removedIntraFreqCellList RemovedIntraFreqCellList NewIntraFreqCellList
                                           RemovedIntraFreqCellList
                                                                                  OPTIONAL,
                                           NewIntraFreqCellSI-List-ECN0
    newIntraFreqCellList
}
IntraFreqCellInfoSI-List-HCS-RSCP ::=
                                             SEQUENCE {
    removedIntraFreqCellList RemovedIntraFreqCellList newIntraFreqCellList NewIntraFreqCellSI-List-HCS-RSCP
                                                                                  OPTIONAL.
```

```
}
OPTIONAL,
\label{eq:continuous} IntraFreqCellInfoSI-List-RSCP-LCR-r4 ::= SEQUENCE \; \{
   removedIntraFreqCellList RemovedIntraFreqCellList NewIntraFreqCellSI-List-RSCP-LCR-r4
                                                                              OPTIONAL,
}
IntraFreqCellInfoSI-List-ECN0-LCR-r4 ::= SEQUENCE {
   removedIntraFreqCellList RemovedIntraFreqCellList NewIntraFreqCellSI-List-ECN0-LCR-r4

NewIntraFreqCellSI-List-ECN0-LCR-r4
}
IntraFreqCellInfoSI-List-HCS-RSCP-LCR-r4 ::= SEQUENCE {
   removedIntraFreqCellList

newIntraFreqCellList

NewIntraFreqCellList

NewIntraFreqCellList
                                        NewIntraFreqCellSI-List-HCS-RSCP-LCR-r4
   newIntraFreqCellList
}
IntraFreqCellInfoSI-List-HCS-ECNO-LCR-r4 ::= SEQUENCE {
   removedIntraFreqCellList RemovedIntraFreqCellList OPT.
newIntraFreqCellList NewIntraFreqCellSI-List-HCS-ECN0-LCR-r4
                                     CHOICE {
IntraFreqEvent ::=
    e1a
                                         Eventla,
    e1b
                                         Event1b,
    e1c
                                         Event1c,
                                         NULL,
    e1d
    e1e
                                         Eventle,
    e1f
                                         Event1f,
    e1g
    e1h
                                         ThresholdUsedFrequency,
    eli
                                         ThresholdUsedFrequency
}
IntraFreqEvent-r4 ::=
                                   CHOICE {
                                         Eventla-r4,
    e1a
    e1b
                                         Event1b-r4,
    e1c
                                         Event1c,
    e1d
                                         Eventle,
    e1e
    e1f
                                         Event1f,
    e1g
                                         NULL,
    e1h
                                         ThresholdUsedFrequency,
    eli
                                         ThresholdUsedFrequency
}
IntraFreqEvent-LCR-r4 ::=
                                     CHOICE {
                                        Eventla-LCR-r4,
   e1a
                                         Event1b-LCR-r4,
    e1b
                                         Event1c,
    e1c
    e1d
                                         NULL,
                                         Event1e,
    e1e
    e1f
                                         Event1f,
                                         NULL,
    e1a
                                         ThresholdUsedFrequency,
    e1h
                                         ThresholdUsedFrequency
    eli
}
                                     CHOICE {
IntraFreqEvent-r6 ::=
                                         Eventla-r4,
                                         Event1b-r4,
    e1c
                                         Event1c,
                                         Event1d,
    e1d
    e1e
                                         Eventle-r6,
                                         Event1f-r6,
    e1f
    e1g
                                         ThresholdUsedFrequency-r6,
    e1h
    eli
                                         ThresholdUsedFrequency-r6,
    e1j
                                         Event1j-r6
}
IntraFreqEvent-1d-r5 ::=
                               SEQUENCE {
    triggeringCondition
                                         TriggeringCondition2 OPTIONAL,
```

```
useCI0
                                     BOOLEAN
                                                           OPTIONAL
}
IntraFreqEventCriteria ::=
                                  SEQUENCE {
   event
                                     IntraFreqEvent,
   hysteresis
                                      Hysteresis,
   timeToTrigger
                                      TimeToTrigger,
                                                                       OPTIONAL
   reportingCellStatus
                                     ReportingCellStatus
}
IntraFreqEventCriteria-r4 ::=
                                SEQUENCE {
                                      IntraFreqEvent-r4,
   event.
   hvsteresis
                                      Hysteresis,
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                     ReportingCellStatus
                                                                       OPTIONAL
}
IntraFreqEventCriteria-LCR-r4 ::= SEQUENCE {
                                     IntraFreqEvent-LCR-r4,
   hysteresis
                                      Hysteresis,
   timeToTrigger
                                      TimeToTrigger,
   reportingCellStatus
                                     ReportingCellStatus
                                                                       OPTIONAL
IntraFreqEventCriteria-r6 ::= SEQUENCE {
   event
                                     IntraFreqEvent-r6,
   hysteresis
                                      Hysteresis,
   timeToTrigger
                                      TimeToTrigger
   reportingCellStatus
                                     ReportingCellStatus
                                                                        OPTIONAL
IntraFreqEventCriteriaList ::=
                                SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                      IntraFreqEventCriteria
IntraFreqEventCriteriaList-r4 ::= SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                      IntraFreqEventCriteria-r4
IntraFreqEventCriteriaList-LCR-r4 ::= SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                      IntraFreqEventCriteria-LCR-r4
IntraFreqEventCriteriaList-r6 ::=
                                      SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                      IntraFreqEventCriteria-r6
IntraFreqEventResults ::=
                                  SEQUENCE {
   eventID
                                      EventIDIntraFreq,
   cellMeasurementEventResults
                                      CellMeasurementEventResults
}
IntraFreqMeasQuantity ::=
                                  SEQUENCE {
                                     FilterCoefficient
   filterCoefficient
                                                              DEFAULT fc0,
                                      CHOICE {
   modeSpecificInfo
       fdd
                                      SEQUENCE {
           intraFreqMeasQuantity-FDD
                                         IntraFreqMeasQuantity-FDD
                                      SEQUENCE {
       tdd
           }
}
-- If IntraFreqMeasQuantity-FDD is used in InterRATMeasQuantity, then only
-- cpich-Ec-NO and cpich-RSCP are allowed.
-- dummy is not used in this version of the specification, it should
-- not be sent and if received the UE behaviour is not specified.
                                 ENUMERATED {
IntraFreqMeasQuantity-FDD ::=
                                      cpich-Ec-N0,
                                      cpich-RSCP,
                                      pathloss,
                                      dummy }
-- dummy is not used in this version of the specification, it should
-- not be sent and if received the UE behaviour is not specified.
                                 ENUMERATED {
IntraFreqMeasQuantity-TDD ::=
                                      primaryCCPCH-RSCP,
                                      pathloss,
                                      timeslotISCP,
                                      dummy }
```

```
IntraFreqMeasQuantity-TDDList ::=
                                     SEQUENCE (SIZE (1..4)) OF
                                         IntraFreqMeasQuantity-TDD
IntraFreqMeasuredResultsList ::=
                                     SEQUENCE (SIZE (1..maxCellMeas)) OF
                                         CellMeasuredResults
                                         SEOUENCE {
IntraFreqMeasurementSysInfo-RSCP ::=
                                         MeasurementIdentity
    intraFreqMeasurementID
                                                                     DEFAULT 1,
                                                                              OPTIONAL,
    intraFreqCellInfoSI-List
                                         IntraFreqCellInfoSI-List-RSCP
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    intraFreqReportingQuantityForRACH
                                         {\tt IntraFreqReportingQuantityForRACH}
                                                                              OPTIONAL,
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
                                                                              OPTIONAL,
                                         ReportingInfoForCellDCH
    reportingInfoForCellDCH
                                                                              \cap DTT \cap M\Delta T.
}
IntraFreqMeasurementSysInfo-ECN0 ::=
                                             SEQUENCE {
                                         MeasurementIdentity
    intraFreqMeasurementID
                                                                     DEFAULT 1.
    intraFreqCellInfoSI-List
                                         IntraFreqCellInfoSI-List-ECN0
                                                                              OPTIONAL,
                                         IntraFreqMeasQuantity
    intraFreqMeasQuantity
                                                                              OPTIONAL.
    intraFreqReportingQuantityForRACH
                                         IntraFreqReportingQuantityForRACH
                                                                             OPTIONAL,
                                         MaxReportedCellsOnRACH
                                                                              OPTIONAL,
    maxReportedCellsOnRACH
    {\tt reportingInfoForCellDCH}
                                         {\tt ReportingInfoForCellDCH}
                                                                              OPTIONAL
}
IntraFreqMeasurementSysInfo-HCS-RSCP ::=
                                             SECUENCE {
                                                                     DEFAULT 1,
    intraFreqMeasurementID
                                       MeasurementIdentity
    intraFreqCellInfoSI-List
                                        IntraFreqCellInfoSI-List-HCS-RSCP
                                                                              OPTIONAL,
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH
                                                                            OPTIONAL,
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
                                                                              OPTIONAL.
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH
                                                                              OPTIONAL
IntraFreqMeasurementSysInfo-HCS-ECN0 ::=
                                             SEQUENCE {
                                        MeasurementIdentity
                                                                     DEFAULT 1.
    intraFreqMeasurementID
    intraFreqCellInfoSI-List
                                         IntraFreqCellInfoSI-List-HCS-ECN0 OPTIONAL,
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    intraFreqReportingQuantityForRACH
                                        IntraFreqReportingQuantityForRACH
                                                                             OPTIONAL,
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
                                                                              OPTIONAL.
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH
                                                                              OPTIONAL
IntraFreqMeasurementSysInfo-RSCP-LCR-r4 ::= SEQUENCE {
    intraFreqMeasurementID
                                         MeasurementIdentity
                                                                     DEFAULT 1,
    intraFreqCellInfoSI-List
                                         {\tt IntraFreqCellInfoSI-List-RSCP-LCR-r4}
                                                                                  OPTIONAL,
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    intraFreqReportingQuantityForRACH
                                         IntraFreqReportingQuantityForRACH
                                                                              OPTIONAL,
                                                                              OPTIONAL,
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH-LCR-r4
                                                                              OPTIONAL
}
IntraFreqMeasurementSysInfo-ECN0-LCR-r4 ::=
                                                 SEOUENCE {
                              MeasurementIdentity
    intraFreqMeasurementID
                                                                     DEFAULT 1,
    intraFreqCellInfoSI-List
                                         IntraFreqCellInfoSI-List-ECN0-LCR-r4
                                                                                  OPTIONAL.
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    intraFreqMeasQuantity
    intraFreqReportingQuantityForRACH
                                       {\tt IntraFreqReportingQuantityForRACH}
                                                                              OPTIONAL.
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
                                                                              OPTIONAL.
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH-LCR-r4
                                                                              OPTIONAL
{\tt IntraFreqMeasurementSysInfo-HCS-RSCP-LCR-r4} \ ::= \ {\tt SEQUENCE} \ \big\{
    intraFreqMeasurementID
                                         MeasurementIdentity
                                                                     DEFAULT 1,
                                         IntraFreqCellInfoSI-List-HCS-RSCP-LCR-r4
    intraFreqCellInfoSI-List
                                                                                      OPTIONAL,
                                                                              OPTIONAL,
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
    intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH
                                                                              OPTIONAL.
                                                                              OPTIONAL,
    maxReportedCellsOnRACH
                                         MaxReportedCellsOnRACH
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH-LCR-r4
                                                                              OPTIONAL
}
{\tt IntraFreqMeasurementSysInfo-HCS-ECN0-LCR-r4} \ ::= \ {\tt SEQUENCE} \ \big\{
                                         MeasurementIdentity
    intraFreqMeasurementID
                                                                     DEFAULT 1,
    intraFreqCellInfoSI-List
                                         IntraFreqCellInfoSI-List-HCS-ECN0-LCR-r4
                                                                                      OPTIONAL,
    intraFreqMeasQuantity
                                         IntraFreqMeasQuantity
                                                                              OPTIONAL,
    \verb|intraFreqReportingQuantityForRACH| \\
                                        IntraFreqReportingQuantityForRACH
                                                                              OPTIONAL,
    maxReportedCellsOnRACH
                                         {\tt MaxReportedCellsOnRACH}
                                                                              OPTIONAL,
    reportingInfoForCellDCH
                                         ReportingInfoForCellDCH-LCR-r4
}
```

```
IntraFreqReportCriteria ::=
                                    CHOICE {
    intraFreqReportingCriteria
                                       IntraFreqReportingCriteria,
    periodicalReportingCriteria
                                        PeriodicalWithReportingCellStatus,
    noReporting
                                       ReportingCellStatusOpt
                                    CHOICE {
IntraFreqReportCriteria-r4 ::=
                                       IntraFreqReportingCriteria-r4,
    intraFreqReportingCriteria
    periodicalReportingCriteria
                                        PeriodicalWithReportingCellStatus,
    noReporting
                                       ReportingCellStatusOpt
}
                                    CHOICE {
IntraFreqReportCriteria-r6 ::=
    intraFreqReportingCriteria
                                       IntraFreqReportingCriteria-r6,
    periodicalReportingCriteria
                                        PeriodicalWithReportingCellStatus,
                                       ReportingCellStatusOpt
   noReporting
}
IntraFreqReportingCriteria ::=
                                    SEQUENCE {
    eventCriteriaList
                                        IntraFreqEventCriteriaList
                                                                        OPTIONAL
IntraFreqReportingCriteria-r4 ::=
                                    SEQUENCE {
    eventCriteriaList
                                       IntraFreqEventCriteriaList-r4 OPTIONAL
}
IntraFreqReportingCriteria-LCR-r4 ::= SEQUENCE {
                                        IntraFreqEventCriteriaList-LCR-r4 OPTIONAL
    eventCriteriaList
}
IntraFreqReportingCriteria-r6 ::= SEQUENCE {
                                       IntraFreqEventCriteriaList-r6 OPTIONAL
    eventCriteriaList
IntraFreqReportingQuantity ::=
                                    SEQUENCE {
    activeSetReportingQuantities
                                       CellReportingQuantities,
    monitoredSetReportingQuantities
                                        CellReportingQuantities,
    detectedSetReportingQuantities
                                       CellReportingQuantities
                                                                           OPTIONAL
}
IntraFreqReportingQuantityForRACH ::= SEQUENCE {
    sfn-SFN-OTD-Type
                                        SFN-SFN-OTD-Type,
    modeSpecificInfo
                                        CHOICE {
        fdd
                                            SEQUENCE {
            \verb"intraFreqRepQuantityRACH-FDD"
                                             IntraFreqRepQuantityRACH-FDD
        t.dd
                                            SEQUENCE {
            intraFreqRepQuantityRACH-TDDList
                                                IntraFreqRepQuantityRACH-TDDList
    }
}
IntraFreqRepQuantityRACH-FDD ::=
                                    ENUMERATED {
                                        cpich-EcNO, cpich-RSCP,
                                        pathloss, noReport }
IntraFreqRepQuantityRACH-TDD ::=
                                    ENUMERATED {
                                        timeslotISCP,
                                        primaryCCPCH-RSCP,
                                        noReport }
IntraFreqRepQuantityRACH-TDDList ::= SEQUENCE (SIZE (1..2)) OF
                                       IntraFreqRepQuantityRACH-TDD
                                    SEQUENCE {
IntraFrequencyMeasurement ::=
    intraFreqCellInfoList
                                       IntraFreqCellInfoList
                                                                            OPTIONAL,
    intraFreqMeasQuantity
                                        IntraFreqMeasQuantity
                                                                            OPTIONAL,
    \verb"intraFreqReportingQuantity"
                                        IntraFreqReportingQuantity
                                                                           OPTIONAL,
    measurementValidity
                                        MeasurementValidity
                                                                           OPTIONAL.
    reportCriteria
                                        IntraFreqReportCriteria
                                                                            OPTIONAL
IntraFrequencyMeasurement-r4 ::=
                                   SEQUENCE {
                                        IntraFreqCellInfoList-r4
    {\tt intraFreqCellInfoList}
                                                                           OPTIONAL,
    intraFreqMeasQuantity
                                        IntraFreqMeasQuantity
                                                                            OPTIONAL,
    intraFreqReportingQuantity
                                       IntraFreqReportingQuantity
    measurementValidity
                                       MeasurementValidity
                                                                            OPTIONAL,
    reportCriteria
                                        IntraFreqReportCriteria-r4
                                                                            OPTIONAL
```

```
}
IntraFreqCellInfoList-r4
        intraFreqCellInfoList
                                                                                                                                                      OPTIONAL,
        intraFreqMeasQuantity
                                                                                IntraFreqMeasQuantity
                                                                                                                                                       OPTIONAL,
                                                                           IntraFreqReportingQuantity
        intraFreqReportingQuantity
                                                                                                                                                      OPTIONAL,
       measurementValidity
                                                                               MeasurementValidity
                                                                                                                                                      OPTIONAL,
        reportCriteria
                                                                               IntraFreqReportCriteria-r6
}
IODE ::=
                                                                        INTEGER (0..255)
IP-Length ::=
                                                                        ENUMERATED {
                                                                               ip15, ip110 }
IP-PCCPCH-r4 ::=
                                                                        BOOLEAN
IP-Spacing ::=
                                                                        ENUMERATED {
                                                                               e5, e7, e10, e15, e20,
                                                                                e30, e40, e50 }
IP-Spacing-TDD ::=
                                                                                ENUMERATED {
                                                                                e30, e40, e50, e70, e100}
                                                                        ENUMERATED {
IS-2000SpecificMeasInfo ::=
                                                                                frequency, timeslot, colourcode,
                                                                                outputpower, pn-Offset }
MaxNumberOfReportingCellsType1 ::= ENUMERATED {
                                                                               e1, e2, e3, e4, e5, e6}
MaxNumberOfReportingCellsType2 ::= ENUMERATED {
                                                                                e1, e2, e3, e4, e5, e6, e7, e8, e9, e10, e11, e12}
MaxNumberOfReportingCellsType3 ::= ENUMERATED {
                                                                                viactCellsPlus1,
                                                                                viactCellsPlus2,
                                                                                viactCellsPlus3,
                                                                                viactCellsPlus4,
                                                                                viactCellsPlus5,
                                                                                viactCellsPlus6 }
                                                                       ENUMERATED {
MaxReportedCellsOnRACH ::=
                                                                                noReport,
                                                                                currentCell,
                                                                                currentAnd-1-BestNeighbour,
                                                                                currentAnd-2-BestNeighbour,
                                                                                currentAnd-3-BestNeighbour,
                                                                                currentAnd-4-BestNeighbour,
                                                                                currentAnd-5-BestNeighbour,
                                                                                currentAnd-6-BestNeighbour }
MaxReportedCellsOnRACHinterFreq ::=
                                                                              INTEGER (1..8)
MeasuredResults ::=
                                                                        CHOICE {
       intraFreqMeasuredResultsList IntraFreqMeasuredResults InterFreqMeasuredResultsList InterFreqMeasuredResultsList,
                                                                              IntraFreqMeasuredResultsList,
                                                                                InterFreqMeasuredResultsList,
        {\tt traffic Volume Measured Results List} \qquad {\tt Traffic Volume Measured Results List} \,,
        qualityMeasuredResults
        ue-positioning-MeasuredResults
ue-positioning-MeasuredResults
upare

LinethalmeasuredResults
UE-InternalMeasuredResults,
UE-InternalMeasuredResults,
UE-Positioning-MeasuredResults,
UE-InternalMeasuredResults,
UE-InternalMeasur
                                                                                OualityMeasuredResults,
                                                                              UE-Positioning-MeasuredResults,
}
MeasuredResults-v390ext ::=
                                                                                        SEQUENCE {
       ue-positioning-MeasuredResults-v390ext
                                                                                                                        UE-Positioning-MeasuredResults-v390ext
MeasuredResults-v590ext ::= CHOICE {
        intraFrequencyMeasuredResultsList
                                                                                        IntraFrequencyMeasuredResultsList-v590ext,
                                                                                       InterFrequencyMeasuredResultsList-v590ext
        \verb|interFrequencyMeasuredResultsList|
}
MeasuredResults-v7xyext ::= CHOICE {
       ueInternalMeasuredResults
                                                                        UE-InternalMeasuredResults-r7
```

```
CHOICE {
MeasuredResults-LCR-r4 ::=
    intraFreqMeasuredResultsList IntraFreqMeasuredResultsList, interFreqMeasuredResultsList InterFreqMeasuredResultsList, interRATMeasuredResultsList InterRATMeasuredResultsList,
    {\tt trafficVolumeMeasuredResultsList} \qquad {\tt TrafficVolumeMeasuredResultsList},
    qualityMeasuredResults
                                          QualityMeasuredResults,
                                 QualityMeasuredResults,
UE-InternalMeasuredResults-LCR-r4,
    ue-InternalMeasuredResults
    ue-positioniing-MeasuredResults
                                          UE-Positioning-MeasuredResults,
                                          NULL
}
                                      SEQUENCE (SIZE (1..maxAdditionalMeas)) OF
MeasuredResultsList ::=
                                          MeasuredResults
MeasuredResultsList-LCR-r4-ext ::= SEQUENCE (SIZE (1..maxAdditionalMeas)) OF
                                          MeasuredResults-LCR-r4
                                      SEQUENCE {
MeasuredResultsOnRACH ::=
                                          SEQUENCE {
    currentCell
                                              CHOICE {
        modeSpecificInfo
            fdd
                                                   SEQUENCE {
                 measurementQuantity
                                                       CHOICE {
                     cpich-Ec-N0
                                                           CPICH-Ec-N0,
                     cpich-RSCP
                                                           CPTCH-RSCP.
                     pathloss
                                                            Pathloss,
                                                           NULL
                     spare
                 }
            },
                                                   SEQUENCE {
            tdd
                 -- For 3.84 Mcps and 7.68 Mcps TDD
                 timeslotISCP
                                                       TimeslotISCP-List
                                                                               OPTIONAL,
                primaryCCPCH-RSCP
                                                       PrimaryCCPCH-RSCP
                                                                                OPTIONAL
            }
    },
    monitoredCells
                                          MonitoredCellRACH-List
                                                                                OPTIONAL
}
MeasuredResultsOnRACHinterFreq ::=
                                          SEQUENCE {
    interFreqCellIndication-SIB11
                                              INTEGER (0..1),
                                              INTEGER (0..1),
    interFreqCellIndication-SIB12
    interFreqRACHRepCellsList
                                              InterFreqRACHRepCellsList
}
MeasurementCommand ::=
                                      CHOICE {
    setup
                                          MeasurementType,
    modify
                                           SEQUENCE {
                                                                                 OPTIONAL
        measurementType
                                              MeasurementType
                                          NULL
    release
}
                                      CHOICE {
MeasurementCommand-r4 ::=
                                          MeasurementType-r4,
    setup
    modify
                                          SEQUENCE {
        measurementType
                                              MeasurementType-r4
                                                                                OPTIONAL
    release
                                          NULL
}
MeasurementCommand-r6 ::=
                                      CHOICE {
                                          MeasurementType-r6,
    setup
                                          SEQUENCE {
    modify
        measurementType
                                              MeasurementType-r6
                                                                               OPTIONAL
    release
                                          NULL
}
MeasurementControlSysInfo ::=
                                 SEQUENCE {
    -- CHOICE cellSelectQualityMeasure represents PCCPCH-RSCP in TDD mode.
                                          CHOICE {
    use-of-HCS
                                          SEOUENCE
        hcs-not-used
            cellSelectQualityMeasure
                                          CHOICE {
                cpich-RSCP
                                          SEQUENCE
                                                       {
                     intraFreqMeasurementSysInfo
                                                           IntraFreqMeasurementSysInfo-RSCP
    OPTIONAL.
                     interFreqMeasurementSysInfo
                                                          InterFreqMeasurementSysInfo-RSCP
                                                                                                  OPTIONAL
```

```
cpich-Ec-N0
                                     SEQUENCE
                  intraFreqMeasurementSysInfo
                                                    IntraFreqMeasurementSvsInfo-ECN0
   OPTIONAL.
                   interFreqMeasurementSysInfo
                                                    InterFreqMeasurementSysInfo-ECN0
                                                                                      OPTIONAL
           }.
                                       InterRATMeasurementSysInfo-B OPTIONAL
           interRATMeasurementSysInfo
       hcs-used
                                     SEQUENCE
                                                 {
                                     CHOICE {
           cellSelectQualityMeasure
              cpich-RSCP
                                     SEOUENCE 
                  intraFreqMeasurementSysInfo
                                                    IntraFreqMeasurementSysInfo-HCS-RSCP
   OPTIONAL,
                  interFreqMeasurementSysInfo
                                                   InterFreqMeasurementSysInfo-HCS-RSCP
   OPTIONAL
               cpich-Ec-N0
                                     SEOUENCE
                  intraFreqMeasurementSysInfo
                                                    IntraFreqMeasurementSysInfo-HCS-ECN0
   OPTIONAL,
                  interFreqMeasurementSysInfo
                                                   InterFreqMeasurementSysInfo-HCS-ECN0
   OPTIONAL
           interRATMeasurementSysInfo
                                       InterRATMeasurementSysInfo
       }
   },
   trafficVolumeMeasSysInfo
                                    TrafficVolumeMeasSysInfo
   -- dummy is not used in this version of specification and it shall be ignored by the UE.
              UE-InternalMeasurementSysInfo
                                                OPTIONAL
}
MeasurementControlSysInfo-LCR-r4-ext ::= SEQUENCE {
   -- CHOICE use-of-HCS shall have the same value as the use-of-HCS
   -- in MeasurementControlSysInfo
   -- CHOICE cellSelectQualityMeasure represents PCCPCH-RSCP in TDD mode.
                                     CHOICE {
   use-of-HCS
       hcs-not-used
                                     SEOUENCE
           -- CHOICE cellSelectQualityMeasure shall have the same value as the
           -- cellSelectQualityMeasure in MeasurementControlSysInfo
           cellSelectQualityMeasure CHOICE {
               cpich-RSCP
                                     SEQUENCE
                   intra \texttt{FreqMeasurementSysInfo-RSCP-LCR-r4~OPTIONAL},\\
                   cpich-Ec-N0
                                     SEQUENCE
                   \verb|intraFreqMeasurementSysInfo-ECN0-LCR-r4| OPTIONAL|,
                   interFreqMeasurementSysInfo InterFreqMeasurementSysInfo-ECN0-LCR-r4 OPTIONAL
           }
       },
       hcs-used
                                     SEQUENCE
           -- CHOICE cellSelectQualityMeasure shall have the same value as the
           -- cellSelectQualityMeasure in MeasurementControlSysInfo
           cellSelectQualityMeasure CHOICE {
                                     SEQUENCE
               cpich-RSCP
                  \verb|intraFreqMeasurementSysInfo| IntraFreqMeasurementSysInfo-HCS-RSCP-LCR-r4|
   OPTIONAL,
                  interFreqMeasurementSysInfo InterFreqMeasurementSysInfo-HCS-RSCP-LCR-r4 OPTIONAL
               cpich-Ec-N0
                                     SEQUENCE
                  intraFreqMeasurementSysInfo IntraFreqMeasurementSysInfo-HCS-ECN0-LCR-r4
   OPTIONAL,
                  interFreqMeasurementSysInfo InterFreqMeasurementSysInfo-HCS-ECN0-LCR-r4 OPTIONAL
           }
       }
   }
}
MeasurementIdentity ::= INTEGER (1..16)
                                 ENUMERATED {
MeasurementQuantityGSM ::=
                                     gsm-CarrierRSSI,
                                     dummy }
MeasurementReportingMode ::=
                                 SEOUENCE {
   measurementReportTransferMode
                                     TransferMode,
```

```
periodicalOrEventTrigger
                                      PeriodicalOrEventTrigger
}
                                   CHOICE {
MeasurementType ::=
                                   IntraFrequencyMeasurement,
InterFrequencyMeasurement,
    intraFrequencyMeasurement
    interFrequencyMeasurement
                                    InterRATMeasurement,
UE-Positioning-Measurement,
    interRATMeasurement
   ue-positioning-Measurement
    trafficVolumeMeasurement
                                      TrafficVolumeMeasurement,
    qualityMeasurement
                                        QualityMeasurement,
    ue-InternalMeasurement
                                       UE-InternalMeasurement
}
MeasurementType-r4 ::=
                                   CHOICE {
                                   {\tt IntraFrequencyMeasurement-r4,}
    intraFrequencyMeasurement
    interFrequencyMeasurement
                                       InterFrequencyMeasurement-r4,
    interRATMeasurement
                                      InterRATMeasurement-r4,
UE-Positioning-Measurement-r4,
    up-Measurement
    trafficVolumeMeasurement
                                      TrafficVolumeMeasurement,
    qualityMeasurement
                                       QualityMeasurement,
    ue-InternalMeasurement
                                       UE-InternalMeasurement-r4
}
                                   CHOICE {
MeasurementType-r6 ::=
                                   IntraFrequencyMeasurement-r6,
    intraFrequencyMeasurement
    interFrequencyMeasurement
                                       InterFrequencyMeasurement-r6,
    interRATMeasurement
                                      InterRATMeasurement-r6,
    up-Measurement
                                       UE-Positioning-Measurement-r4,
   trafficVolumeMeasurement
                                      TrafficVolumeMeasurement,
    qualityMeasurement
                                       QualityMeasurement,
    ue-InternalMeasurement
                                       UE-InternalMeasurement-r4
MeasurementValidity ::= SEQUENCE {
   ue-State
                                       ENUMERATED {
                                           cell-DCH, all-But-Cell-DCH, all-States }
}
MonitoredCellRACH-List ::=
                                   SEQUENCE (SIZE (1..8)) OF
                                       MonitoredCellRACH-Result
                                   SEQUENCE {
MonitoredCellRACH-Result ::=
                                    SFN-SFN-ObsTimeDifference
    sfn-SFN-ObsTimeDifference
                                                                          OPTIONAL,
    {\tt modeSpecificInfo}
                                        CHOICE {
                                           SEQUENCE {
           primaryCPICH-Info
                                               PrimaryCPICH-Info,
                                                CHOICE {
            measurementQuantity
               cpich-Ec-N0
                                                   CPICH-Ec-N0,
               cpich-RSCP
                                                    CPICH-RSCP,
               pathloss
                                                   Pathloss,
                                                   NULL
               spare
            }
                                                                           OPTIONAL
                                           SEQUENCE {
           cellParametersID
                                               CellParametersID,
           primaryCCPCH-RSCP
                                               PrimaryCCPCH-RSCP
}
                                   ENUMERATED {
MultipathIndicator ::=
                                       nm,
                                        low,
                                       medium,
                                       high }
                                   SEQUENCE {
N-CR-T-CRMaxHyst ::=
                                       INTEGER (1..16)
                                                                           DEFAULT 8,
   n-CR
    t-CRMaxHyst
                                       T-CRMaxHyst
}
NavigationModelSatInfo ::=
                                   SEQUENCE {
   satID
                                      SatID,
    satelliteStatus
                                       SatelliteStatus,
    ephemerisParameter
                                       EphemerisParameter OPTIONAL
NavigationModelSatInfoList ::=
                                  SEQUENCE (SIZE (1..maxSat)) OF
```

NavigationModelSatInfo

```
EphemerisParameter ::=
                                           SEQUENCE {
                                       BIT STRING (SIZE (2)),
    codeOnI<sub>2</sub>2
    uraIndex
                                       BIT STRING (SIZE (4)),
   satHealth
                                       BIT STRING (SIZE (6)),
                                       BIT STRING (SIZE (10)),
    iodc
                                       BIT STRING (SIZE (1)),
   12Pflag
    sf1Revd
                                       SubFrame1Reserved,
    t-GD
                                       BIT STRING (SIZE (8))
                                       BIT STRING (SIZE (16)),
   t-oc
                                       BIT STRING (SIZE (8)),
   af2
                                       BIT STRING (SIZE (16)),
   af1
   af0
                                       BIT STRING (SIZE (22)),
   c-rs
                                       BIT STRING (SIZE (16)),
                                       BIT STRING (SIZE (16)),
   delta-n
                                       BIT STRING (SIZE (32)),
   mΩ
   c-uc
                                       BIT STRING (SIZE (16)),
                                       BIT STRING (SIZE (32)),
   e
   c-us
                                       BIT STRING (SIZE (16)),
                                       BIT STRING (SIZE (32)),
   a-Sgrt
    t-oe
                                       BIT STRING (SIZE (16)),
   fitInterval
                                       BIT STRING (SIZE (1)),
                                       BIT STRING (SIZE (5)),
   aodo
                                       BIT STRING (SIZE (16)),
   c-ic
                                       BIT STRING (SIZE (32)),
   omega0
   c-is
                                       BIT STRING (SIZE (16)),
                                       BIT STRING (SIZE (32)),
   i0
   c-rc
                                       BIT STRING (SIZE (16)),
                                       BIT STRING (SIZE (32)),
   omega
    omegaDot
                                       BIT STRING (SIZE (24)),
                                       BIT STRING (SIZE (14))
    iDot
NC-Mode ::=
                                   BIT STRING (SIZE (3))
                                    SEQUENCE {
Neighbour ::=
   modeSpecificInfo
                                    CHOICE {
                                       SEQUENCE {
       fdd
           neighbourIdentity
                                        PrimaryCPICH-Info
                                                                                    OPTIONAL,
           uE-RX-TX-TimeDifferenceType2Info UE-RX-TX-TimeDifferenceType2Info
                                                                                    OPTIONAL
                                       SEQUENCE {
        t.dd
           neighbourAndChannelIdentity CellAndChannelIdentity
                                                                                    OPTIONAL
        }
    neighbourQuality
                                       NeighbourQuality,
    neighbourQuality
sfn-SFN-ObsTimeDifference2
                                       SFN-SFN-ObsTimeDifference2}
Neighbour-v390ext ::=
                                           SEQUENCE {
   ghbour-v390ext ::=
modeSpecificInfo
                                 CHOICE {
       fdd
                                    SEQUENCE {
           frequencyInfo
                                               FrequencyInfo
       tdd
                                       NULL
    }
}
NeighbourList ::=
                                    SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       Neighbour
-- The order of the cells in IE NeighbourList-v390ext shall be the
-- same as the order in IE NeighbourList
                                            SEQUENCE (SIZE (1..maxCellMeas)) OF
NeighbourList-v390ext ::=
                                       Neighbour-v390ext
NeighbourQuality ::=
                                  SEQUENCE {
   ue-Positioning-OTDOA-Quality
                                    UE-Positioning-OTDOA-Quality
NewInterFreqCell ::=
                                    SEQUENCE {
   interFreqCellID
                                       InterFreqCellID
                                                                           OPTIONAL,
    frequencyInfo
                                        FrequencyInfo
                                                                           OPTIONAL,
                                       CellInfo
   cellInfo
}
NewInterFreqCell-r4 ::= interFreqCellID
                                  SEQUENCE {
                                       InterFreqCellID
                                                                           OPTIONAL.
    frequencyInfo
                                       FrequencyInfo
                                                                            OPTIONAL,
```

```
cellInfo
                                      CellInfo-r4
}
                                  SEQUENCE (SIZE (1..maxCellMeas)) OF
NewInterFreqCellList ::=
                                       NewInterFreqCell
NewInterFreqCellList-r4 ::=
                                  SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCell-r4
NewInterFreqCellSI-RSCP ::=
                                       SEQUENCE {
   interFreqCellID
                                       InterFreqCellID
                                                                           OPTIONAL,
                                                                           OPTIONAL,
    frequencyInfo
                                       FrequencyInfo
                                       CellInfoST-RSCP
    cellInfo
NewInterFreqCellSI-ECN0 ::=
                                     SEQUENCE {
    interFreqCellID
                                       InterFregCellID
                                                                           OPTIONAL,
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL,
                                       CellInfoSI-ECN0
   cellInfo
}
                                           SEQUENCE {
NewInterFreqCellSI-HCS-RSCP ::=
                                      InterFreqCellID
    interFreqCellID
                                                                           OPTIONAL,
    frequencyInfo
                                      FrequencyInfo
                                                                           OPTIONAL,
   cellInfo
                                       CellInfoSI-HCS-RSCP
}
                                    SEQUENCE (
InterFreqCellID
NewInterFreqCellSI-HCS-ECN0 ::=
    interFreqCellID
                                                                           OPTIONAL,
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL,
    cellInfo
                                       CellInfoSI-HCS-ECN0
NewInterFreqCellSI-RSCP-LCR-r4 ::=
                                           SEQUENCE {
                                      InterFreqCellID
                                                                           OPTIONAL,
    interFreqCellID
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL,
                                       CellInfoSI-RSCP-LCR-r4
   cellInfo
}
NewInterFreqCellSI-ECN0-LCR-r4 ::=
                                           SEQUENCE {
    interFreqCellID
                                       InterFreqCellID
                                                                           OPTIONAL,
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL.
                                       CellInfoSI-ECN0-LCR-r4
    cellInfo
NewInterFreqCellSI-HCS-RSCP-LCR-r4 ::=
                                           SEQUENCE {
   interFregCellID
                                       InterFreqCellID
                                                                           OPTIONAL.
    frequencyInfo
                                       FrequencyInfo
                                                                           OPTIONAL,
    cellInfo
                                       CellInfoSI-HCS-RSCP-LCR-r4
}
NewInterFreqCellSI-HCS-ECN0-LCR-r4 ::=
                                           SEOUENCE {
   interFreqCellID
                                       InterFreqCellID
                                                                           OPTIONAL,
                                                                           OPTIONAL,
    frequencyInfo
                                       FrequencyInfo
                                       CellInfoSI-HCS-ECN0-LCR-r4
   cellInfo
                                           SEQUENCE (SIZE (1..maxCellMeas)) OF
NewInterFreqCellSI-List-ECN0 ::=
                                       NewInterFreqCellSI-ECN0
NewInterFreqCellSI-List-HCS-RSCP ::=
                                               SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-HCS-RSCP
NewInterFreqCellSI-List-HCS-ECN0 ::=
                                               SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-HCS-ECN0
NewInterFreqCellSI-List-RSCP ::=
                                       SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-RSCP
NewInterFreqCellSI-List-ECN0-LCR-r4 ::=
                                           SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-ECN0-LCR-r4
NewInterFreqCellSI-List-HCS-RSCP-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-HCS-RSCP-LCR-r4
NewInterFreqCellSI-List-HCS-ECN0-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewInterFreqCellSI-HCS-ECN0-LCR-r4
```

```
NewInterFreqCellSI-List-RSCP-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                      NewInterFreqCellSI-RSCP-LCR-r4
NewInterRATCell ::=
                              SEQUENCE {
   technologySpecificInfo CHOIGE (
                                                             OPTIONAL,
                                         SEQUENCE {
           cellSelectionReselectionInfo
                                             CellSelectReselectInfoSIB-11-12 OPTIONAL,
           interRATCellIndividualOffset
                                              InterRATCellIndividualOffset,
           bsic
                                              BSIC,
           frequency-band
                                              Frequency-Band,
           bcch-ARFCN
                                              BCCH-ARFCN,
           -- dummy is not used in this version of the specification, it should
           -- not be sent and if received it should be ignored.
                                              NULL
        },
                                          SEQUENCE {
        is-2000
           is-2000SpecificMeasInfo
                                              IS-2000SpecificMeasInfo
        -- ASN.1 inconsistency: NewInterRATCellList should be optional within
        -- InterRATCellInfoList. The UE shall consider IE NewInterRATCell with
        -- technologySpecificInfo set to "absent" as valid and handle the
        -- message as if the IE NewInterRATCell was absent
       absent
                                          NULL,
                                          NIII.T.
       spare1
    }
}
NewInterRATCell-B ::=
  interRATCellID
  technologySpecificInfo
                                 SEQUENCE {
                                InterRATCellID
                                                                OPTIONAL,
                                      CHOICE {
                                        SEQUENCE {
                                          CellSelectReselectInfoSIB-11-12 OPTIONAL,
           cellSelectionReselectionInfo
           interRATCellIndividualOffset
                                              InterRATCellIndividualOffset,
           bsic
                                              BSIC,
           frequency-band
                                              Frequency-Band,
           bcch-ARFCN
                                              BCCH-ARFCN,
           -- dummy is not used in this version of the specification, it should
           -- not be sent and if received it should be ignored.
                                              NULL
                                                                  OPTIONAL
        is-2000
                                          SEQUENCE {
                                              IS-2000SpecificMeasInfo
           is-2000SpecificMeasInfo
        -- ASN.1 inconsistency: NewInterRATCellList-B should be optional within
        -- InterRATCellInfoList-B. The UE shall consider IE NewInterRATCell-B with
        -- technologySpecificInfo set to "absent" as valid and handle the
        -- message as if the IE NewInterRATCell-B was absent
                                          NULL,
       spare1
    }
NewInterRATCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                      NewInterRATCell
NewInterRATCellList-B ::=
                                  SEQUENCE (SIZE (1..maxCellMeas)) OF
                                     NewInterRATCell-B
NewIntraFregCell ::=
                                   SEQUENCE {
                                      IntraFreqCellID
   intraFreqCellID
                                                                        OPTIONAL,
   cellInfo
                                      CellInfo
}
NewIntraFreqCell-r4 ::=
                                  SEQUENCE {
   intraFreqCellID
                                     IntraFreqCellID
                                                                        OPTIONAL,
   cellInfo
                                      CellInfo-r4
NewIntraFreqCellList ::=
                                 SEQUENCE (SIZE (1..maxCellMeas)) OF
                                      NewIntraFreqCell
NewIntraFreqCellList-r4 ::=
                                 SEQUENCE (SIZE (1..maxCellMeas)) OF
                                     NewIntraFreqCell-r4
NewIntraFreqCellSI-RSCP ::=
                                      SEQUENCE {
   intraFreqCellID
                                      IntraFreqCellID
                                                                        OPTIONAL.
    cellInfo
                                      CellInfoSI-RSCP
```

```
}
NewIntraFreqCellSI-ECNO ::= SEQUENCE {
                                    IntraFreqCellID
    intraFreqCellID
                                                                            OPTIONAL,
    cellInfo
                                       CellInfoSI-ECN0
NewIntraFreqCellSI-HCS-RSCP ::= SEQUENCE {
                                  IntraFreqCellID
   intraFreqCellID
                                                                            OPTIONAL,
   cellInfo
                                       CellInfoSI-HCS-RSCP
\label{eq:new_new_new_problem} \mbox{NewIntraFreqCellSI-HCS-ECNO} \ ::= \ \ \mbox{SEQUENCE} \ \{ \mbox{}
                                  IntraFreqCellID
   intraFreqCellID
                                                                           OPTIONAL,
   cellInfo
                                       CellInfoSI-HCS-ECN0
}
NewIntraFreqCellSI-RSCP-LCR-r4 ::= SEQUENCE {
   intraFreqCellID
                                        IntraFreqCellID
                                                                            OPTIONAL,
                                       CellInfoSI-RSCP-LCR-r4
   cellInfo
}
NewIntraFreqCellSI-ECN0-LCR-r4 ::= SEQUENCE {
                                        IntraFreqCellID
   intraFreqCellID
                                                                            OPTIONAL,
   cellInfo
                                        CellInfoSI-ECN0-LCR-r4
{\tt NewIntraFreqCellSI-HCS-RSCP-LCR-r4} \ ::= \ {\tt SEQUENCE} \ \{
  intraFreqCellID
                                        IntraFreqCellID
                                                                           OPTIONAL,
   cellInfo
                                        CellInfoSI-HCS-RSCP-LCR-r4
}
NewIntraFreqCellSI-HCS-ECN0-LCR-r4 ::= SEQUENCE {
   intraFreqCellID
                                        IntraFreqCellID
                                                                           OPTIONAL,
                                        CellInfoSI-HCS-ECN0-LCR-r4
    cellInfo
NewIntraFreqCellSI-List-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                            NewIntraFreqCellSI-RSCP
                                  SEQUENCE (SIZE (1..maxCellMeas)) OF
NewIntraFreqCellSI-List-ECN0 ::=
                                       NewIntraFreqCellSI-ECN0
NewIntraFreqCellSI-List-HCS-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewIntraFreqCellSI-HCS-RSCP
NewIntraFreqCellSI-List-HCS-ECN0 ::=
                                      SEQUENCE (SIZE (1..maxCellMeas)) OF
                                        NewIntraFreqCellSI-HCS-ECN0
NewIntraFreqCellSI-List-RSCP-LCR-r4 ::=
                                            SEQUENCE (SIZE (1..maxCellMeas)) OF
                                            NewIntraFreqCellSI-RSCP-LCR-r4
NewIntraFreqCellSI-List-ECN0-LCR-r4 ::=
                                          SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewIntraFreqCellSI-ECN0-LCR-r4
NewIntraFreqCellSI-List-HCS-RSCP-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                        NewIntraFreqCellSI-HCS-RSCP-LCR-r4
NewIntraFreqCellSI-List-HCS-ECN0-LCR-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewIntraFreqCellSI-HCS-ECN0-LCR-r4
    -- IE "nonUsedFreqThreshold" is not needed in case of event 2a
    -- In case of event 2a UTRAN should include value 0 within IE "nonUsedFreqThreshold"
    -- In case of event 2a, the UE shall be ignore IE "nonUsedFreqThreshold"
    -- In later versions of the message including this IE, a special version of
    -- IE "NonUsedFreqParameterList" may be defined for event 2a, namely a
    -- version not including IE "nonUsedFreqThreshold"
NonUsedFreqParameter ::=
                                  SEQUENCE {
   nonUsedFreqThreshold
                                        Threshold,
    {\tt nonUsedFreqW}
}
NonUsedFreqParameter-r6 ::= SEQUENCE {
    nonUsedFreqThreshold Threshold
                                       Threshold-r6.
    nonUsedFreqW
NonUsedFreqParameterList ::= SEQUENCE (SIZE (1..maxFreq)) OF
                                       NonUsedFreqParameter
```

```
NonUsedFreqParameterList-r6 ::= SEQUENCE (SIZE (1..maxFreq)) OF
                                   NonUsedFreqParameter-r6
NonUsedFreqWList-r6 ::= SEQUENCE (SIZE (1..maxFreq)) OF W
ObservedTimeDifferenceToGSM ::=
                               INTEGER (0..4095)
OTDOA-SearchWindowSize ::= ENUMERATED {
                                   c20, c40, c80, c160, c320,
                                   c640, c1280, moreThan1280 }
-- SPARE: Pathloss, Max = 158
-- Values above Max are spare
Pathloss ::=
                               INTEGER (46..173)
PenaltyTime-RSCP ::=
                                CHOICE {
   notUsed
                                   NULL,
   pt10
                                   TemporaryOffset1,
                                   TemporaryOffset1,
   pt20
   pt30
                                   TemporaryOffset1,
                                   TemporaryOffset1,
   pt40
   pt50
                                   TemporaryOffset1,
                                   TemporaryOffset1
   pt60
}
PenaltyTime-ECN0 ::=
                               CHOICE {
  notUsed
                                   NULL,
                                   TemporaryOffsetList,
   pt10
   pt20
                                   TemporaryOffsetList,
                                   TemporaryOffsetList,
   pt30
   pt40
                                   TemporaryOffsetList,
                                   TemporaryOffsetList,
   pt50
                                   TemporaryOffsetList
   pt60
}
PendingTimeAfterTrigger ::=
                               ENUMERATED {
                                   ptat0-25, ptat0-5, ptat1,
                                   ptat2, ptat4, ptat8, ptat16 }
PeriodicalOrEventTrigger ::=
                                ENUMERATED {
                                 periodical,
                                   eventTrigger }
{\tt PeriodicalReportingCriteria} ::= \\ {\tt SEQUENCE} \ \big\{
                               ReportingAmount
  reportingAmount
                                                              DEFAULT ra-Infinity,
   reportingInterval
                                   ReportingIntervalLong
}
PeriodicalWithReportingCellStatus ::= SEQUENCE {
  periodicalReportingCriteria PeriodicalReportingCriteria, reportingCellStatus ReportingCellStatus
   reportingCellStatus
                                   ReportingCellStatus
                                                                   OPTIONAL
}
}
PLMNsOfInterFreqCellsList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                      SEQUENCE {
                                          PLMN-Identity
   plmn-Identity
                                                                  OPTIONAL
PLMNsOfIntraFreqCellsList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                     SEQUENCE {
                                       PLMN-Identity
                                                                  OPTIONAL
   plmn-Identity
}
PLMNsOfInterRATCellsList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                     SEQUENCE {
                                          PLMN-Identity OPTIONAL
   plmn-Identity
   PositionEstimate ::=
```

```
ellipsoidPointAltitude
                                        EllipsoidPointAltitude,
    ellipsoidPointAltitudeEllipse
                                        EllipsoidPointAltitudeEllipsoide
}
PositioningMethod ::=
                                    ENUMERATED {
                                        otdoa,
                                         aps,
                                         otdoaOrGPS, cellID }
-- Actual value PRC = IE value * 0.32
                                    INTEGER (-2047..2047)
-- SPARE: PrimaryCCPCH-RSCP, Max = 91
-- Values above Max are spare
PrimaryCCPCH-RSCP ::=
                                    INTEGER (0..127)
O-HCS ::=
                                    INTEGER (0..99)
Q-OffsetS-N ::=
                                    INTEGER (-50..50)
Q-QualMin ::=
                                    INTEGER (-24..0)
-- Actual value Q-RxlevMin = (IE value * 2) + 1
                                    INTEGER (-58..-13)
Q-RxlevMin ::=
                                    SEQUENCE (SIZE (1..maxTrCH)) OF
QualityEventResults ::=
                                        TransportChannelIdentity
QualityMeasuredResults ::=
                                    SEQUENCE {
                                        BLER-MeasurementResultsList
    blerMeasurementResultsList
                                                                            OPTIONAL.
    modeSpecificInfo
                                         CHOICE {
                                            NULL,
        fdd
        tdd
                                             SEQUENCE {
                                                 SIR-MeasurementList
                                                                              OPTIONAL
            sir-MeasurementResults
        }
    }
}
QualityMeasurement ::=
                                    SEOUENCE {
    qualityReportingQuantity
                                         QualityReportingQuantity
                                                                            OPTIONAL,
    reportCriteria
                                         QualityReportCriteria
}
QualityReportCriteria ::=
                                    CHOICE {
    qualityReportingCriteria
                                         QualityReportingCriteria,
    periodicalReportingCriteria
                                         PeriodicalReportingCriteria,
                                        NULL
    noReporting
}
QualityReportingCriteria ::=
                                    SEQUENCE (SIZE (1..maxTrCH)) OF
                                         QualityReportingCriteriaSingle
QualityReportingCriteriaSingle ::= SEQUENCE {
    transportChannelIdentity
                                         TransportChannelIdentity,
    totalCRC
                                         INTEGER (1..512),
                                        INTEGER (1..512),
INTEGER (1..512)
    badCRC
    pendingAfterTrigger
}
                                    SEQUENCE {
QualityReportingQuantity ::=
    dl-TransChBLER
                                        BOOLEAN,
    bler-dl-TransChIdList
                                         BLER-TransChIdList
                                                                             OPTIONAL,
    modeSpecificInfo
                                         CHOICE {
        fdd
                                            NULL,
                                             SEQUENCE {
        t.dd
            sir-TFCS-List
                                                SIR-TFCS-List
                                                                             OPTIONAL
    }
}
RAT-Type ::=
                                     ENUMERATED {
                                        gsm, is2000 }
ReferenceCellPosition ::=
                                    CHOICE {
    ellipsoidPoint
                                        EllipsoidPoint,
    ellipsoidPointWithAltitude
                                        EllipsoidPointAltitude
}
```

```
-- ReferenceLocation, as defined in 23.032
                                                         SEQUENCE {
ReferenceLocation ::=
       ellipsoidPointAltitudeEllipsoide
                                                                                EllipsoidPointAltitudeEllipsoide
}
ReferenceTimeDifferenceToCell ::= CHOICE {
       -- Actual value accuracy40 = IE value * 40
                                                                         INTEGER (0..960),
       accuracy40
        -- Actual value accuracy256 = IE value * 256
       accuracy256
                                                                        INTEGER (0..150),
         -- Actual value accuracy2560 = IE value * 2560
                                                                        INTEGER (0..15)
       accuracy2560
}
RemovedInterFreqCellList ::=
                                                                 CHOICE {
      removeAllInterFreqCells
                                                                     NULL,
                                                                        SEQUENCE (SIZE (1..maxCellMeas)) OF
       removeSomeInterFreqCells
                                                                               InterFreqCellID,
      removeNoInterFreqCells
}
RemovedInterRATCellList ::= CHOICE {
                                                    NULL,
SEQUENCE (SIZE (1..maxCellMeas)) OF
       removeAllInterRATCells
       removeSomeInterRATCells
                                                                                InterRATCellID.
       removeNoInterRATCells
                                                                NULL
}
RemovedIntraFreqCellList ::=
                                                              CHOICE {
       removeAllIntraFreqCells
                                                                  NULL,
       removeSomeIntraFreqCells
                                                                         SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                                               IntraFreqCellID,
                                                                         NULL
       removeNoIntraFreqCells
}
ReplacementActivationThreshold ::= ENUMERATED {
                                                                         notApplicable, t1, t2,
                                                                         t3, t4, t5, t6, t7 }
ReportDeactivationThreshold ::=
                                                                  ENUMERATED {
                                                                         notApplicable, t1, t2,
                                                                         t3, t4, t5, t6, t7 }
ReportingAmount ::=
                                                                  ENUMERATED {
                                                                        ra1, ra2, ra4, ra8, ra16, ra32,
                                                                         ra64, ra-Infinity }
                                                                  CHOICE {
ReportingCellStatus ::=
       withinActiveSet
                                                                         MaxNumberOfReportingCellsType1,
       withinMonitoredSetUsedFreq
                                                                         MaxNumberOfReportingCellsType1,
       within {\tt Active And Or Monitored Used Freq} \quad {\tt Max Number Of Reporting Cells Type 1},
       withinDetectedSetUsedFreq
                                                                         MaxNumberOfReportingCellsType1,
       {\tt withinMonitoredAndOrDetectedUsedFreq}
                                                                        MaxNumberOfReportingCellsType1,
                                                                        MaxNumberOfReportingCellsType3,
       allActiveplusMonitoredSet
       allActivePlusDetectedSet
                                                                        MaxNumberOfReportingCellsType3,
       \verb|allActivePlusMonitoredAndOrDetectedSet|\\
                                                                       MaxNumberOfReportingCellsType3,
                                                                MaxNumberOfReportingCellsType1,
       withinVirtualActSet
       withinMonitoredSetNonUsedFreq
                                                                      MaxNumberOfReportingCellsType1,
       within \verb|Monitored| And \verb|OrVirtual| Active SetNon \verb|UsedFreq|
                                                                         MaxNumberOfReportingCellsType1,
       \verb|allVirtualActSetplusMonitoredSetNonUsedFreq|\\
                                                                         MaxNumberOfReportingCellsType3,
       withinActSetOrVirtualActSet-InterRATcells
                                                                         MaxNumberOfReportingCellsType2,
       with \verb|inActSetAndOrMonitoredUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtualActSetAndOrMonItoredNonUsedFreqOrVirtualActSetAndOrMonitoredNonUsedFreqOrVirtu
                                                                        MaxNumberOfReportingCellsType2
}
ReportingCellStatusOpt ::=
                                                                SEQUENCE {
       reportingCellStatus
                                                                  ReportingCellStatus
                                                                                                                                        OPTIONAL
ReportingInfoForCellDCH ::=
                                                                  SEQUENCE {
       intraFreqReportingQuantity
                                                                  IntraFreqReportingQuantity,
       measurementReportingMode
                                                                         MeasurementReportingMode,
```

```
reportCriteria
                                      CellDCH-ReportCriteria
}
ReportingInfoForCellDCH-LCR-r4 ::= SEQUENCE {
   intraFreqReportingQuantity IntraFreqReportingQuantity,
   measurementReportingMode
                                      MeasurementReportingMode,
   reportCriteria
                                      CellDCH-ReportCriteria-LCR-r4
ReportingInterval ::=
                                   ENUMERATED {
                                     noPeriodicalreporting, ri0-25,
                                       ri0-5, ri1, ri2, ri4, ri8, ri16 }
ReportingIntervalLong ::=
                                   ENUMERATED {
                                      ril0, ril0-25, ril0-5, ril1,
                                       ril2, ril3, ril4, ril6, ril8,
                                      ril12, ril16, ril20, ril24,
                                       ril28, ril32, ril64 }
                                   -- When the value 'ril0' is used, the UE behaviour is not
                                   -- defined.
-- Actual value ReportingRange = IE value * 0.5
                                   INTEGER (0..29)
ReportingRange ::=
RL-AdditionInfoList ::=
                                  SEQUENCE (SIZE (1..maxRL)) OF
                                      PrimaryCPICH-Info
                         SEQUENCE {
RL-InformationLists ::=
   rl-AdditionInfoList
                                      RL-AdditionInfoList
                                                                         OPTIONAL.
                                      RL-RemovalInformationList OPTIONAL
    rL-RemovalInformationList
RLC-BuffersPayload ::=
                                   ENUMERATED {
                                       pl0, pl4, pl8, pl16, pl32,
                                       pl64, pl128, pl256, pl512, pl1024,
                                       pl2k, pl4k, pl8k, pl16k, pl32k,
                                       pl64k, pl128k, pl256k, pl512k, pl1024k,
                                       spare12, spare11, spare10, spare9, spare8,
                                       spare7, spare6, spare5, spare4, spare3,
                                       spare2, spare1 }
-- Actual value RRC = IE value * 0.032
RRC ::=
                                   INTEGER (-127..127)
SatData ::=
                                   SEQUENCE {
   satID
                                       SatID,
    iode
                                       TODE:
                                   SEQUENCE (SIZE (0..maxSat)) OF
SatDataList ::=
                                       SatData
SatelliteStatus ::=
                                   ENUMERATED {
                                      ns-NN-U,
                                       es-SN,
                                       es-NN-U,
                                       rev2,
                                       rev }
-- Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [12].
SatID ::=
                                   INTEGER (0..63)
SFN-Offset-Validity ::=
                              ENUMERATED { false }
                                   ENUMERATED {
SFN-SFN-Drift ::=
                                       sfnsfndrift0, sfnsfndrift1, sfnsfndrift2,
                                       sfnsfndrift3, sfnsfndrift4, sfnsfndrift5,
                                       sfnsfndrift8, sfnsfndrift10, sfnsfndrift15,
                                       sfnsfndrift25, sfnsfndrift35, sfnsfndrift50,
                                       sfnsfndrift65, sfnsfndrift80, sfnsfndrift100,
                                       sfnsfndrift-1, sfnsfndrift-2, sfnsfndrift-3,
                                       sfnsfndrift-4, sfnsfndrift-5, sfnsfndrift-8,
                                       sfnsfndrift-10, sfnsfndrift-15, sfnsfndrift-25,
                                       sfnsfndrift-35, sfnsfndrift-50, sfnsfndrift-65,
                                       sfnsfndrift-80, sfnsfndrift-100}
SFN-SFN-ObsTimeDifference ::=
                                 CHOICE {
                                       SFN-SFN-ObsTimeDifferencel,
    type1
```

```
SFN-SFN-ObsTimeDifference2
  type2
}
-- SPARE: SFN-SFN-ObsTimeDifference1, Max = 9830399
-- For 1.28Mcps TDD, Max value of SFN-SFN-ObsTimeDifferencel is 3276799.
-- Values above Max are spare
SFN-SFN-ObsTimeDifference1 ::=
                                   INTEGER (0..16777215)
-- SPARE: SFN-SFN-ObsTimeDifference2, Max = 40961
-- For 1.28Mcps TDD, Max value of SFN-SFN-ObsTimeDifference2 is 27649.
-- Values above Max are spare
                                  INTEGER (0..65535)
SFN-SFN-ObsTimeDifference2 ::=
SFN-SFN-OTD-Type ::=
                                   ENUMERATED {
                                      noReport,
                                        type1,
                                       type2 }
{\tt SFN-SFN-RelTimeDifference1} ::= \\ {\tt SEQUENCE} \ \{
                                       INTEGER (0 .. 4095),
INTEGER (0.. 38399)
   sfn-Offset
   sfn-sfn-Reltimedifference
SFN-TOW-Uncertainty ::=
                                   ENUMERATED {
                                       lessThan10,
                                        moreThan10 }
SIR ::=
                                    INTEGER (0..63)
SIR-MeasurementList ::=
                                    SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       SIR-MeasurementResults
SIR-MeasurementResults ::=
                                   SEQUENCE {
  tfcs-ID
                                       TFCS-IdentityPlain,
   sir-TimeslotList
                                        SIR-TimeslotList
SIR-TFCS ::=
                                    TFCS-IdentityPlain
SIR-TFCS-List ::=
                                    SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                       SIR-TFCS
                                    SEQUENCE (SIZE (1..maxTS)) OF
SIR-TimeslotList ::=
-- SubFramelReserved, reserved bits in subframe 1 of the GPS navigation message
SubFramelReserved ::=
                                    SEQUENCE {
                                       BIT STRING (SIZE (23)),
   reserved1
   reserved2
                                        BIT STRING (SIZE (24)),
                                       BIT STRING (SIZE (24)),
   reserved3
                                       BIT STRING (SIZE (16))
   reserved4
}
T-ADVinfo ::=
                                    SEQUENCE {
                                       INTEGER(0..2047),
INTEGER(0..4095)
               t-ADV
               sfn
}
T-CRMax ::=
                                    CHOICE {
   notUsed
                                       NULL,
                                       N-CR-T-CRMaxHyst,
   t30
   t60
                                       N-CR-T-CRMaxHyst,
   t120
                                       N-CR-T-CRMaxHyst,
   t180
                                       N-CR-T-CRMaxHyst,
   t240
                                       N-CR-T-CRMaxHyst
}
T-CRMaxHyst ::=
                                    ENUMERATED {
                                      notUsed, t10, t20, t30,
                                       t40, t50, t60, t70 }
TemporaryOffset1 ::=
                                    ENUMERATED {
                                       to3, to6, to9, to12, to15,
                                        to18, to21, infinite }
```

```
ENUMERATED {
TemporaryOffset2 ::=
                                      to2, to3, to4, to6, to8,
                                       to10, to12, infinite }
TemporaryOffsetList ::=
                                   SEQUENCE {
                                      TemporaryOffset1,
       temporaryOffset1
       temporaryOffset2
                                      TemporaryOffset2
                                  INTEGER (-115..0)
Threshold ::=
Threshold-r6 ::=
                                          INTEGER (-120..0)
 -- The order of the list corresponds to the order of frequency defined in Inter-FreqEventCriteria
DeltaRSCPPerCell
ThresholdPositionChange ::=
                                   ENUMERATED {
                                      pc10, pc20, pc30, pc40, pc50,
                                       pc100, pc200, pc300, pc500,
                                       pc1000, pc2000, pc5000, pc10000,
                                       pc20000, pc50000, pc100000 }
ThresholdSFN-GPS-TOW ::=
                                   ENUMERATED {
                                      ms1, ms2, ms3, ms5, ms10,
                                      ms20, ms50, ms100 }
ThresholdSFN-SFN-Change ::=
                                   ENUMERATED {
                                      c0-25, c0-5, c1, c2, c3, c4, c5, c10, c20, c50, c100, c200, c500,
                                      c1000, c2000, c5000 }
ThresholdUsedFrequency ::=
                                  INTEGER (-115..165)
ThresholdUsedFrequency-r6 ::=
                                  INTEGER (-120..165)
-- Actual value TimeInterval = IE value * 20.
TimeInterval ::=
                                   INTEGER (1..13)
TimeslotInfo ::=
                                   SEOUENCE {
   timeslotNumber
                                      TimeslotNumber,
   burstType
                                      BurstType
}
TimeslotInfo-LCR-r4 ::=
                                  SEOUENCE {
   timeslotNumber
                                      TimeslotNumber-LCR-r4
                                   SEQUENCE (SIZE (1..maxTS)) OF
TimeslotInfoList ::=
                                      TimeslotInfo
TimeslotInfoList-LCR-r4 ::=
                                   SEQUENCE (SIZE (1..maxTS-LCR)) OF
                                      TimeslotInfo-LCR-r4
TimeslotInfoList-r4 ::=
                                   CHOICE {
   -- the choice for 7.68 Mcps TDD is the same as for 3.84 Mcps TDD --
   tdd384
                                      SEQUENCE (SIZE (1..maxTS)) OF
                                         TimeslotInfo,
   tdd128
                                      SEQUENCE (SIZE (1..maxTS-LCR)) OF
                                          TimeslotInfo-LCR-r4
}
-- SPARE: TimeslotISCP, Max = 91
-- Values above Max are spare
TimeslotISCP ::=
                                  INTEGER (0..127)
-- TimeslotISCP-List shall not include more than 6 elements in 1.28Mcps TDD mode.
                                   SEQUENCE (SIZE (1..maxTS)) OF
TimeslotISCP-List ::=
                                      TimeslotISCP
TimeslotListWithISCP ::=
                                   SEQUENCE (SIZE (1..maxTS)) OF
                                      TimeslotWithISCP
TimeslotWithISCP ::=
                                   SECUENCE {
   timeslot
                                      TimeslotNumber,
```

```
timeslotISCP
                                         TimeslotISCP
}
TimeToTrigger ::=
                                     ENUMERATED {
                                         ttt0, ttt10, ttt20, ttt40, ttt60,
                                          ttt80, ttt100, ttt120, ttt160,
                                          ttt200, ttt240, tt320, ttt640,
                                          ttt1280, ttt2560, ttt5000 }
TrafficVolumeEventParam ::=
                                     SEQUENCE {
                                       TrafficVolumeEventType,
   eventID
    reportingThreshold
                                         TrafficVolumeThreshold,
                                         TimeToTrigger
    timeToTrigger
                                                                              OPTIONAL,
                                         PendingTimeAfterTrigger
    pendingTimeAfterTrigger
                                                                              OPTIONAL,
    tx-InterruptionAfterTrigger
                                         TX-InterruptionAfterTrigger
                                                                               OPTIONAL
}
TrafficVolumeEventResults ::= SEQUENCE {
   ul-transportChannelCausingEvent UL-TrCH-Identity,
    trafficVolumeEventIdentity
                                         TrafficVolumeEventType
}
TrafficVolumeEventType ::=
                                     ENUMERATED {
                                         e4a,
                                         e4h }
TrafficVolumeMeasQuantity ::=
                                     CHOICE {
                                     NULL,
   rlc-BufferPayload
   averageRLC-BufferPayload
                                         TimeInterval,
    varianceOfRLC-BufferPayload
                                        TimeInterval
}
    trafficVolumeMeasurementID Moorum
TrafficVolumeMeasSysInfo ::=
                                     MeasurementIdentity DEFAULT 4,
    {\tt trafficVolumeMeasurementObjectList} \quad {\tt TrafficVolumeMeasurementObjectList} \quad {\tt OPTIONAL}, \\
    trafficVolumeMeasQuantity TrafficVolumeMeasQuantity OPTIONAL, trafficVolumeReportingQuantity TrafficVolumeReportingQuantity OPTIONAL,
    -- dummy is not used in this version of specification, it should
    -- not be sent and if received it should be ignored.
                                         TrafficVolumeReportingCriteria
                                                                             OPTIONAL,
    dummy
    measurementValidity
                                         MeasurementValidity
                                                                               OPTIONAL,
   measurementReportingMode
                                         MeasurementReportingMode.
    reportCriteriaSysInf
                                        TrafficVolumeReportCriteriaSysInfo
}
TrafficVolumeMeasuredResults ::= SEQUENCE {
                                  RB-Identity,
    rb-Identity
    rlc-BuffersPayload
                                         RLC-BuffersPayload
                                                                               OPTIONAL,
   averageRLC-BufferPayload
varianceOfRLC-BufferPayload
                                         AverageRLC-BufferPayload
                                                                              OPTIONAL,
                                         VarianceOfRLC-BufferPayload
                                                                               OPTIONAL
TrafficVolumeMeasuredResultsList ::= SEQUENCE (SIZE (1..maxRB)) OF
                                         TrafficVolumeMeasuredResults
TrafficVolumeMeasurement ::=
                                     SEQUENCE {
    {\tt trafficVolumeMeasurementObjectList} \quad {\tt TrafficVolumeMeasurementObjectList} \quad {\tt OPTIONAL}, \\
    trafficVolumeMeasQuantity TrafficVolumeReportingQuantity TrafficVolumeReportingQuantity
                                         TrafficVolumeMeasQuantity OPTIONAL,
                                                                               OPTIONAL.
    {\tt measurementValidity}
                                         MeasurementValidity
                                                                               OPTIONAL,
    reportCriteria
                                         TrafficVolumeReportCriteria
{\tt TrafficVolumeMeasurementObjectList} ::= {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxTrCH})) \ {\tt OF}
                                              UL-TrCH-Identity
TrafficVolumeReportCriteria ::= CHOICE {
                                     TrafficVolumeReportingCriteria,
    trafficVolumeReportingCriteria
    periodicalReportingCriteria
                                         PeriodicalReportingCriteria,
   noReporting
}
TrafficVolumeReportCriteriaSysInfo ::= CHOICE {
   trafficVolumeReportingCriteria TrafficVolumeReportingCriteria periodicalReportingCriteria PeriodicalReportingCriteria
                                         TrafficVolumeReportingCriteria,
}
```

```
TrafficVolumeReportingCriteria ::= SEQUENCE {
    -- NOTE: transChCriteriaList should be mandatory in later versions of this message
    transChCriteriaList
                                        TransChCriteriaList
                                                                            OPTIONAL
}
TrafficVolumeReportingQuantity ::= SEQUENCE {
                                       BOOLEAN,
   rlc-RB-BufferPavload
   rlc-RB-BufferPayloadAverage
                                        BOOLEAN.
   rlc-RB-BufferPayloadVariance
                                       BOOLEAN
TrafficVolumeThreshold ::=
                                    ENUMERATED {
                                        th8, th16, th32, th64, th128,
                                        th256, th512, th1024, th2k, th3k,
                                        th4k, th6k, th8k, th12k, th16k,
                                        th24k, th32k, th48k, th64k, th96k,
                                        th128k, th192k, th256k, th384k,
                                        th512k, th768k }
TransChCriteria ::=
                                    SEQUENCE {
                                       UL-TrCH-Identity
   ul-transportChannelID
                                                                            OPTIONAL,
    eventSpecificParameters
                                        SEQUENCE (SIZE (1..maxMeasParEvent)) OF
                                            TrafficVolumeEventParam
                                                                            OPTIONAL
                               SEQUENCE (SIZE (1..maxTrCH)) OF
TransChCriteriaList ::=
                                        TransChCriteria
TransferMode ::=
                                    ENUMERATED {
                                        acknowledgedModeRLC,
                                        unacknowledgedModeRLC }
TransmittedPowerThreshold ::=
                                    INTEGER (-50..33)
TriggeringCondition1 ::=
                                    ENUMERATED {
                                        activeSetCellsOnly,
                                        monitoredSetCellsOnly,
                                        activeSetAndMonitoredSetCells }
TriggeringCondition2 ::=
                                    ENUMERATED {
                                        activeSetCellsOnly,
                                        monitoredSetCellsOnly,
                                        activeSetAndMonitoredSetCells,
                                        detectedSetCellsOnly,
                                        detectedSetAndMonitoredSetCells }
TX-InterruptionAfterTrigger ::=
                                    ENUMERATED {
                                        txiat0-25, txiat0-5, txiat1,
                                        txiat2, txiat4, txiat8, txiat16 }
UDRE ::=
                                    ENUMERATED {
                                        lessThan1,
                                        between1-and-4,
                                        between4-and-8,
                                        over8 }
UE-6AB-Event ::=
                                    SEOUENCE {
   timeToTrigger
                                        TimeToTrigger,
   transmittedPowerThreshold
                                        TransmittedPowerThreshold
}
UE-6FG-Event ::=
                                    SEQUENCE {
   timeToTrigger
                                        TimeToTrigger,
    -- in 1.28 Mcps TDD ue-RX-TX-TimeDifferenceThreshold corresponds to T_{ADV} Threshold
   \verb"ue-RX-TX-TimeDifferenceThreshold" UE-RX-TX-TimeDifferenceThreshold"
-- dummy and dummy2 are not used in this version of the specification, they should
-- not be sent and if received the UE behaviour is not specified.
UE-AutonomousUpdateMode ::=
                                   CHOICE {
    onWithNoReporting
                                        NULL,
                                        RL-InformationLists
    dummy2
}
UE-InternalEventParam ::=
                                    CHOICE {
   event.6a
                                        UE-6AB-Event.
    event.6b
                                        UE-6AB-Event,
```

```
event6c
                                        TimeToTrigger,
    event6d
                                        TimeToTrigger,
    event6e
                                        TimeToTrigger,
                                        UE-6FG-Event,
    event6f
    event6g
                                        UE-6FG-Event
                                    SEQUENCE (SIZE (1..maxMeasEvent)) OF
UE-InternalEventParamList ::=
                                        UE-InternalEventParam
UE-InternalEventResults ::=
                                    CHOICE {
    event.6a
                                        NULL.
    event6b
                                        NULT.
    event6c
                                        NULL,
    event6d
                                        NULL.
    event6e
                                        NULL,
                                        PrimaryCPICH-Info,
    event6f
    event6g
                                        PrimaryCPICH-Info,
    spare
}
                                    SEQUENCE {
UE-InternalMeasQuantity ::=
    measurementQuantity
                                        UE-MeasurementQuantity,
                                                                             DEFAULT fc0
    filterCoefficient
                                        FilterCoefficient
}
UE-InternalMeasuredResults ::=
                                    SEQUENCE {
   modeSpecificInfo
                                        CHOICE {
                                            SEQUENCE {
        fdd
            ue-TransmittedPowerFDD
                                                UE-TransmittedPower
                                                                             OPTIONAL.
            ue-RX-TX-ReportEntryList
                                                UE-RX-TX-ReportEntryList
                                                                             OPTIONAL
        },
        tdd
                                            SEQUENCE {
            ue-TransmittedPowerTDD-List
                                                UE-TransmittedPowerTDD-List OPTIONAL,
            appliedTA
                                                UL-TimingAdvance
                                                                             OPTIONAL
    }
}
                                        SEQUENCE {
UE-InternalMeasuredResults-r7 ::=
   modeSpecificInfo
                                        CHOICE {
       fdd
                                            SEOUENCE {
            ue-TransmittedPowerFDD
                                                                            OPTIONAL,
                                                UE-TransmittedPower
            ue-RX-TX-ReportEntryList
                                                UE-RX-TX-ReportEntryList
                                                                             OPTIONAL
        },
        tdd
                                            SEQUENCE {
                                                UE-TransmittedPowerTDD-List OPTIONAL,
           ue-TransmittedPowerTDD-List
            appliedTA
                                                UL-TimingAdvance-VHCR
                                                                            OPTIONAL
    }
}
UE-InternalMeasuredResults-LCR-r4 ::=
                                        SEQUENCE {
                                            UE-TransmittedPowerTDD-List
        ue-TransmittedPowerTDD-List
                                                                             OPTIONAL.
        t-ADVinfo
                                            T-ADVinfo
                                                                             OPTIONAL
}
                                    SEQUENCE {
UE-InternalMeasurement ::=
    ue-InternalMeasQuantity
                                        UE-InternalMeasQuantity
                                                                             OPTIONAL,
    ue-InternalReportingQuantity
                                        UE-InternalReportingQuantity
                                                                             OPTIONAL.
   reportCriteria
                                        UE-InternalReportCriteria
}
                                    SEQUENCE {
UE-InternalMeasurement-r4 ::=
    ue-InternalMeasQuantity
                                        UE-InternalMeasQuantity
                                                                             OPTIONAL.
    ue-InternalReportingQuantity
                                        UE-InternalReportingQuantity-r4
                                                                             OPTIONAL,
                                        UE-InternalReportCriteria
   reportCriteria
}
UE-InternalMeasurementSysInfo ::=
                                    SEQUENCE {
   ue-InternalMeasurementID
                                        MeasurementIdentity
                                                                    DEFAULT 5,
   ue-InternalMeasQuantity
                                        UE-InternalMeasQuantity
}
UE-InternalReportCriteria ::=
                                    CHOICE {
   ue-InternalReportingCriteria
                                        UE-InternalReportingCriteria,
    periodicalReportingCriteria
                                        PeriodicalReportingCriteria,
    noReporting
                                        NULL
```

```
}
UE-InternalReportingCriteria ::= SEQUENCE {
   ue-InternalEventParamList
                                     UE-InternalEventParamList
                                                                         OPTIONAL
{\tt UE-Internal Reporting Quantity ::= SEQUENCE } \{
   ue-TransmittedPower
                                       BOOLEAN,
   modeSpecificInfo
                                       CHOICE {
       fdd
                                         SEQUENCE {
           ue-RX-TX-TimeDifference
                                               BOOLEAN
        },
       tdd
                                           SEOUENCE {
           appliedTA
                                               BOOLEAN
        }
    }
}
UE-InternalReportingQuantity-r4 ::= SEQUENCE {
    ue-TransmittedPower
                                       BOOLEAN,
   modeSpecificInfo
                                       CHOICE {
        fdd
                                          SEQUENCE {
           ue-RX-TX-TimeDifference
                                               BOOLEAN
        },
                                           SEQUENCE {
        tdd
           tddOption
                                               CHOICE {
            -- appliedTA applies to both 3.84 Mcps TDD and to 7.68 Mcps TDD.
            -- Therefore, no additional choice of TDD mode is necessary
                                                   SEQUENCE {
                tdd384
                   appliedTA
                                                       BOOLEAN
                                                   SEQUENCE {
                tdd128
                   t-ADVinfo
                                                       BOOLEAN
           }
       }
   }
}
-- TABULAR: UE-MeasurementQuantity, for 3.84 Mcps TDD only the first two values
-- ue-TransmittedPower and utra-Carrier-RSSI are used.
-- For 1.28 Mcps TDD ue-RX-TX-TimeDifference corresponds to T-ADV in the tabular
UE-MeasurementQuantity ::=
                                  ENUMERATED {
                                       ue-TransmittedPower,
                                       utra-Carrier-RSSI,
                                       ue-RX-TX-TimeDifference }
UE-RX-TX-ReportEntry ::=
                                   SEQUENCE {
                                    PrimaryCPICH-Info,
   primaryCPICH-Info
    ue-RX-TX-TimeDifferenceType1
                                       UE-RX-TX-TimeDifferenceType1
UE-RX-TX-ReportEntryList ::=
                                  SEQUENCE (SIZE (1..maxRL)) OF
                                       UE-RX-TX-ReportEntry
-- SPARE: UE-RX-TX-TimeDifferenceType1, Max = 1280
-- Values above Max are spare
UE-RX-TX-TimeDifferenceType1 ::=
                                          INTEGER (768..1791)
UE-RX-TX-TimeDifferenceType2 ::= INTEGER (0..8191)
{\tt UE-RX-TX-TimeDifferenceType2Info} ::= \qquad {\tt SEQUENCE} \ \big\{
   ue-RX-TX-TimeDifferenceType2
                                        UE-RX-TX-TimeDifferenceType2,
   neighbourQuality
                                           NeighbourQuality
}
-- In 1.28 Mcps TDD, actual value for
-- T-ADV Threshold = (UE-RX-TX-TimeDifferenceThreshold - 768) * 0.125
UE-RX-TX-TimeDifferenceThreshold ::= INTEGER (768..1280)
UE-TransmittedPower ::=
                                   INTEGER (0..104)
UE-TransmittedPowerTDD-List ::=
                                  SEQUENCE (SIZE (1..maxTS)) OF
                                       UE-TransmittedPower
UL-TrCH-Identity ::=
                                       CHOICE {
                                        TransportChannelIdentity,
   dch
```

```
-- Note: the reference to CPCH in the element name below is incorrect. The name is not changed
    -- to keep it aligned with R99.
   rachorcoch
                                        NULL,
                                        TransportChannelIdentity
    usch
                                            BIT STRING (SIZE (7))
UE-Positioning-Accuracy ::=
UE-Positioning-CipherParameters ::=
                                            SEQUENCE {
   cipheringKeyFlag
                                        BIT STRING (SIZE (1)),
                                        INTEGER (0..65535)
    cipheringSerialNumber
}
UE-Positioning-Error ::=
                                                SEQUENCE {
                                       UE-Positioning-ErrorCause,
   errorReason
    ue-positioning-GPS-additionalAssistanceDataRequest
                                                                UE-Positioning-GPS-
AdditionalAssistanceDataRequest OPTIONAL
                                                ENUMERATED {
UE-Positioning-ErrorCause ::=
                                        notEnoughOTDOA-Cells,
                                        notEnoughGPS-Satellites,
                                        assistanceDataMissing,
                                        notAccomplishedGPS-TimingOfCellFrames,
                                        undefinedError,
                                        requestDeniedByUser,
                                        notProcessedAndTimeout,
                                        referenceCellNotServingCell }
UE-Positioning-EventParam ::=
                                                SEQUENCE {
   reportingAmount
                                        ReportingAmount,
    reportFirstFix
                                        BOOLEAN,
                                        UE-Positioning-MeasurementInterval,
   measurement.Interval
    eventSpecificInfo
                                        UE-Positioning-EventSpecificInfo
                                                SEQUENCE (SIZE (1..maxMeasEvent)) OF
UE-Positioning-EventParamList ::=
                                        UE-Positioning-EventParam
UE-Positioning-EventSpecificInfo ::=
                                                CHOICE {
                                        ThresholdPositionChange,
   e7a
                                        ThresholdSFN-SFN-Change,
    e7b
    e7c
                                        ThresholdSFN-GPS-TOW
UE-Positioning-GPS-AcquisitionAssistance ::=
                                                SEQUENCE {
                           INTEGER (0..604799999),
UTRAN-GPSReferenceTime
    gps-ReferenceTime
    utran-GPSReferenceTime
                                                                        OPTIONAL,
    satelliteInformationList
                                     AcquisitionSatInfoList
}
UE-Positioning-GPS-AdditionalAssistanceDataRequest ::=
                                                           SEQUENCE {
    almanacRequest
                                       BOOLEAN.
    utcModelRequest
                                        BOOLEAN,
                                       BOOLEAN.
    ionosphericModelRequest
    navigationModelRequest
                                       BOOLEAN,
    dgpsCorrectionsRequest
                                       BOOLEAN,
    referenceLocationRequest
                                       BOOLEAN,
   referenceTimeRequest
                                       BOOLEAN.
    aquisitionAssistanceRequest
                                       BOOLEAN,
    realTimeIntegrityRequest
                                        BOOLEAN,
    navModelAddDataRequest
                                       UE-Positioning-GPS-NavModelAddDataReq
                                                                                    OPTIONAL
}
                                                SEQUENCE {
UE-Positioning-GPS-Almanac ::=
                                        BIT STRING (SIZE (8)),
    almanacSatInfoList
                                        AlmanacSatInfoList,
    sv-GlobalHealth
                                        BIT STRING (SIZE (364))
                                                                            OPTIONAL
}
UE-Positioning-GPS-AssistanceData ::=
                                                SEQUENCE {
   ue-positioning-GPS-ReferenceTime
                                                   UE-Positioning-GPS-ReferenceTime
    OPTIONAL,
    ue-positioning-GPS-ReferenceLocation
                                                    ReferenceLocation
                                                                                     OPTIONAL,
    ue-positioning-GPS-DGPS-Corrections
                                                    UE-Positioning-GPS-DGPS-Corrections
    OPTIONAL,
```

```
ue-positioning-GPS-NavigationModel
                                                  UE-Positioning-GPS-NavigationModel
    OPTIONAL,
   ue-positioning-GPS-IonosphericModel
                                                  UE-Positioning-GPS-IonosphericModel
    OPTIONAL,
    ue-positioning-GPS-UTC-Model
                                                   UE-Positioning-GPS-UTC-Model
   OPTIONAL,
    ue-positioning-GPS-Almanac
                                                  UE-Positioning-GPS-Almanac
   OPTIONAL,
    ue-positioning-GPS-AcquisitionAssistance
                                                  UE-Positioning-GPS-AcquisitionAssistance
   ue-positioning-GPS-Real-timeIntegrity
                                                 BadSatList
                                                                                      OPTIONAL,
    -- dummy is not used in this version of the specification, it should
    -- not be sent and if received it should be ignored.
                  UE-Positioning-GPS-ReferenceCellInfo
                                                              OPTIONAL
}
UE-Positioning-GPS-DGPS-Corrections ::=
                                         SEOUENCE {
    gps-TOW
                                      INTEGER (0..604799),
    statusHealth
                                      DiffCorrectionStatus,
   dgps-CorrectionSatInfoList
                                      DGPS-CorrectionSatInfoList
}
UE-Positioning-GPS-IonosphericModel ::=
                                           SEQUENCE {
                                       BIT STRING (SIZE (8)),
    alfa1
                                       BIT STRING (SIZE (8)),
   alfa2
                                       BIT STRING (SIZE (8)),
   alfa3
                                       BIT STRING (SIZE (8)),
   beta0
                                       BIT STRING (SIZE (8)),
   beta1
                                       BIT STRING (SIZE (8)),
   beta2
                                       BIT STRING (SIZE (8)),
    beta3
                                       BIT STRING (SIZE (8))
                                               SEQUENCE {
UE-Positioning-GPS-MeasurementResults ::=
                                     CHOICE {
   referenceTime
       utran-GPSReferenceTimeResult UTRAN-GPSReferenceTimeResult,
       gps-ReferenceTimeOnly
                                          INTEGER (0..604799999)
    gps-MeasurementParamList GPS-MeasurementParamList
}
UE-Positioning-GPS-NavigationModel ::=
                                              SEQUENCE {
   {\tt navigation Model Sat Info List}
                                      NavigationModelSatInfoList
UE-Positioning-GPS-NavModelAddDataReq ::=
                                              SEQUENCE {
   gps-Week
                                      INTEGER (0..1023),
    -- SPARE: gps-Toe, Max = 167
    -- Values above Max are spare
   gps-Toe
                                      INTEGER (0..255),
    -- SPARE: tToeLimit, Max = 10
    -- Values above Max are spare
    tToeLimit
                                      INTEGER (0..15),
    satDataList
                                       SatDataList
}
UE-Positioning-GPS-ReferenceCellInfo ::=
                                               SEQUENCE {
   modeSpecificInfo
                       CHOICE {
       fdd
                                      SEQUENCE {
           referenceIdentity
                                          PrimarvCPICH-Info
        },
       tdd
                                       SEQUENCE {
           referenceIdentity
                                         CellParametersID
    }
}
UE-Positioning-GPS-ReferenceTime ::=
                                              SEQUENCE {
                                       INTEGER (0..1023),
   gps-Week
    gps-tow-1msec
                                       GPS-TOW-1msec, utran-GPSReferenceTime
                                                                                          UTRAN-
                              OPTIONAL,
GPSReferenceTime
   sfn-tow-Uncertainty
                                      SFN-TOW-Uncertainty
                                                                          OPTIONAL,
   utran-GPS-DriftRate
                                      UTRAN-GPS-DriftRate
                                                                          OPTIONAL,
                                      GPS-TOW-AssistList
    gps-TOW-AssistList
                                                                          OPTIONAL
}
UE-Positioning-GPS-UTC-Model ::=
                                               SEQUENCE {
                                       BIT STRING (SIZE (24)),
   a1
```

```
a0
                                      BIT STRING (SIZE (32)),
   t-ot
                                       BIT STRING (SIZE (8)),
                                      BIT STRING (SIZE (8)),
   wn-t
   delta-t-LS
                                      BIT STRING (SIZE (8)),
   wn-lsf
                                      BIT STRING (SIZE (8)),
                                      BIT STRING (SIZE (8)),
   dn
                                      BIT STRING (SIZE (8))
   delta-t-LSF
}
UE-Positioning-IPDL-Parameters ::=
                                               SEQUENCE {
   ip-Spacing
                                      IP-Spacing,
   ip-Length
                                       IP-Length,
   ip-Offset
                                       INTEGER (0..9),
   seed
                                       INTEGER (0..63),
   burstModeParameters
                                       BurstModeParameters
                                                                  OPTIONAL
}
                                              SEQUENCE {
UE-Positioning-IPDL-Parameters-r4 ::=
   modeSpecificInfo
       fdd
                                          SEQUENCE {
           ip-Spacing
                                              IP-Spacing,
           ip-Length
                                               IP-Length,
           ip-Offset
                                               INTEGER (0..9),
           seed
                                              INTEGER (0..63)
        },
       t dd
                                          SEQUENCE {
           ip-Spacing-TDD
                                              IP-Spacing-TDD,
                                               INTEGER (0..14)
           ip-slot
           ip-Start
                                              INTEGER (0..4095),
           ip-PCCPCG
                                              IP-PCCPCH-r4
                                                                      OPTIONAL
   burstModeParameters
                                      BurstModeParameters
                                                                      OPTIONAL
}
UE-Positioning-IPDL-Parameters-TDD-r4-ext ::=
                                             SEQUENCE {
   ip-Spacing
                                      IP-Spacing-TDD,
                                       INTEGER (0..14),
   ip-slot
                                      INTEGER (0..4095),
   ip-Start
   ip-PCCPCG
                                       IP-PCCPCH-r4
                                                                      OPTIONAL,
   burstModeParameters
                                       BurstModeParameters
}
   ue-positioning-OTDOA-Measurement SEQUENCE {
UE-Doc
OPTIONAL,
UE-Positioning-MeasuredResults ::=
                                                 UE-Positioning-OTDOA-Measurement
   ue-positioning-PositionEstimateInfo
                                                 UE-Positioning-PositionEstimateInfo
       OPTIONAL,
   ue-positioning-GPS-Measurement
                                                  UE-Positioning-GPS-MeasurementResults
       OPTIONAL,
   ue-positioning-Error
                                                  UE-Positioning-Error
   OPTIONAL
}
UE-Positioning-MeasuredResults-v390ext ::=
                                              SEQUENCE {
   ue-Positioning-OTDOA-Measurement-v390ext
                                                  UE-Positioning-OTDOA-Measurement-v390ext
                                    SEQUENCE {
UE-Positioning-Measurement ::=
   ue-positioning-ReportingQuantity
                                              UE-Positioning-ReportingQuantity,
                                     UE-Positioning-ReportCriteria,
   reportCriteria
   ue-positioning-OTDOA-AssistanceData
                                          UE-Positioning-OTDOA-AssistanceData
   OPTIONAL,
   ue-positioning-GPS-AssistanceData
                                                  UE-Positioning-GPS-AssistanceData
   OPTIONAL
}
UE-Positioning-Measurement-v390ext ::=
                                             SEQUENCE {
                                                  UE-Positioning-ReportingQuantity-v390ext
   ue-positioning-ReportingQuantity-v390ext
   OPTIONAL,
   measurementValidity
                                     MeasurementValidity
                                                                          OPTIONAL,
   ue-positioning-OTDOA-AssistanceData-UEB UE-Positioning-OTDOA-AssistanceData-UEB
   OPTIONAL
}
UE-Positioning-Measurement-r4 ::=
                                             SEQUENCE {
   ue-positioning-ReportingQuantity
                                              UE-Positioning-ReportingQuantity-r4,
```

```
measurementValidity
                                                   MeasurementValidity
    OPTIONAL,
                                                  UE-Positioning-ReportCriteria,
   reportCriteria
   ue-positioning-OTDOA-AssistanceData
                                                  UE-Positioning-OTDOA-AssistanceData-r4
    OPTIONAL,
    ue-positioning-GPS-AssistanceData
                                                  UE-Positioning-GPS-AssistanceData
   OPTIONAL
}
UE-Positioning-Measurement-v7xyext ::=
                                             SEQUENCE {
                                                 UE-Positioning-ReportingQuantity-v7xyext
   ue-positioning-ReportingQuantity
UE-Positioning-MeasurementEventResults ::=
                                              CHOICE {
   event7a
                                       UE-Positioning-PositionEstimateInfo,
    event7b
                                       UE-Positioning-OTDOA-Measurement,
                                       UE-Positioning-GPS-MeasurementResults,
    event7c
    spare
                                       NULL
}
                                             ENUMERATED {
UE-Positioning-MeasurementInterval ::=
                                       e5, e15, e60, e300,
                                       e900, e1800, e3600, e7200 }
                                               ENUMERATED {
UE-Positioning-MethodType ::=
                                       ue-Assisted,
                                       ue-Based,
                                       ue-BasedPreferred,
                                       ue-AssistedPreferred }
   ue-positioning-OTDOA-ReferenceCellInfo UF OPTIONAL,
UE-Positioning-OTDOA-AssistanceData ::=
                                             UE-Positioning-OTDOA-ReferenceCellInfo
    ue-positioning-OTDOA-NeighbourCellList
                                                      UE-Positioning-OTDOA-NeighbourCellList
       OPTIONAL
}
{\tt UE-Positioning-OTDOA-AssistanceData-r4 ::= SEQUENCE } \{
                                           UE-Positioning-OTDOA-ReferenceCellInfo-r4
   ue-positioning-OTDOA-ReferenceCellInfo
       OPTIONAL,
    ue-positioning-OTDOA-NeighbourCellList
                                                 UE-Positioning-OTDOA-NeighbourCellList-r4
       OPTIONAL
}
UE-Positioning-OTDOA-AssistanceData-r4ext ::= SEQUENCE {
    -- In case of TDD these IPDL parameters shall be used for the reference cell instead of
    -- IPDL Parameters in IE UE-Positioning-OTDOA-ReferenceCellInfo
   ue-Positioning-IPDL-Parameters-TDD-r4-ext
                                                 UE-Positioning-IPDL-Parameters-TDD-r4-ext
   OPTIONAL,
   -- These IPDL parameters shall be used for the neighbour cells in case of TDD instead of
    -- IPDL Parameters in IE UE-Positioning-OTDOA-NeighbourCellInfoList. The cells shall be
    -- listed in the same order as in IE UE-Positioning-OTDOA-NeighbourCellInfoList
    ue-Positioning-IPDL-Parameters-TDDList-r4-ext UE-Positioning-IPDL-Parameters-TDDList-r4-ext
   OPTIONAL
}
UE-Positioning-OTDOA-AssistanceData-UEB ::= SEQUENCE {
   ue-positioning-OTDOA-ReferenceCellInfo-UEB UE-Positioning-OTDOA-ReferenceCellInfo-UEB
               OPTIONAL,
   ue-positioning-OTDOA-NeighbourCellList-UEB
                                                         UE-Positioning-OTDOA-NeighbourCellList-
UEB
               OPTIONAL
}
UE-Positioning-IPDL-Parameters-TDDList-r4-ext ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                          UE-Positioning-IPDL-Parameters-TDD-r4-ext
UE-Positioning-OTDOA-Measurement ::=
                                               SEQUENCE {
                                    INTEGER (0..4095),
                                  CHOICE {
    modeSpecificInfo
        fdd
                                      SEQUENCE {
           referenceCellIDentity
                                            PrimaryCPICH-Info,
           \verb"ue-RX-TX-TimeDifferenceType2Info" UE-RX-TX-TimeDifferenceType2Info"
        }.
       tdd
                                          SEQUENCE {
           referenceCellIdentity
                                           CellParametersID
    neighbourList
                                      NeighbourList
                                                                          OPTIONAL
```

```
}
UE-Positioning-OTDOA-Measurement-v390ext ::=
                                                       SEQUENCE {
   neighbourList-v390ext
                                                NeighbourList-v390ext
UE-Positioning-OTDOA-NeighbourCellInfo ::= SEQUENCE {
   modeSpecificInfo
                       CHOICE {
        fdd
                                        SEOUENCE {
           primaryCPICH-Info
                                                PrimaryCPICH-Info
        },
        tdd
                                        SEOUENCE {
           cellAndChannelIdentity
                                                CellAndChannelIdentity
        }
    frequencyInfo
                                        FrequencyInfo
                                                                            OPTIONAL,
    ue-positioning-IPDL-Paremeters
                                                   UE-Positioning-IPDL-Parameters
    OPTIONAL,
    sfn-SFN-RelTimeDifference
                                        SFN-SFN-RelTimeDifferencel,
    sfn-SFN-Drift
                                        SFN-SFN-Drift
                                                                           OPTIONAL,
    searchWindowSize
                                        OTDOA-SearchWindowSize,
    positioningMode
                       CHOICE {
                                                SEQUENCE {},
        ueBased
        ueAssisted
                                                SEQUENCE {}
    }
}
UE-Positioning-OTDOA-NeighbourCellInfo-r4 ::= SEQUENCE {
   modeSpecificInfo CHOICE {
        fdd
                                        SEOUENCE {
           primaryCPICH-Info
                                                PrimaryCPICH-Info
        tdd
                                        SEQUENCE {
           cellAndChannelIdentity
                                                CellAndChannelIdentity
        }
    frequencyInfo
                                       FrequencyInfo
                                                                            OPTIONAL,
    ue-positioning-IPDL-Paremeters
                                       UE-Positioning-IPDL-Parameters-r4 OPTIONAL,
    sfn-SFN-RelTimeDifference
                                       SFN-SFN-RelTimeDifference1,
    sfn-Offset-Validity
                                        SFN-Offset-Validity
                                                                            OPTIONAL,
    sfn-SFN-Drift
                                        SFN-SFN-Drift
                                                                            OPTIONAL,
    searchWindowSize
                                        OTDOA-SearchWindowSize.
    positioningMode
                      CHOICE {
        ueBased
                                                SEQUENCE {
           relativeNorth
                                                INTEGER (-20000..20000)
                                                                                    OPTIONAL,
           relativeEast
                                                INTEGER (-20000..20000)
                                                                                    OPTIONAL,
                                                INTEGER (-4000..4000)
            relativeAltitude
                                                                                    OPTIONAL.
            fineSFN-SFN
                                                FineSFN-SFN
                                                                                    OPTIONAL,
            -- actual value roundTripTime = (IE value * 0.0625) + 876
                                                INTEGER (0.. 32766)
           roundTripTime
                                                                                    OPTIONAL
        },
                                                SEQUENCE {}
        ueAssisted
    }
}
UE-Positioning-OTDOA-NeighbourCellInfo-UEB ::= SEQUENCE {
    modeSpecificInfo CHOICE {
                                        SEQUENCE {
        fdd
           primaryCPICH-Info
                                                PrimaryCPICH-Info
        },
        tdd
                                        SEQUENCE {
           cellAndChannelIdentity
                                                CellAndChannelIdentity
        }
                                                                            OPTIONAL,
    frequencyInfo
                                        FrequencyInfo
    ue-positioning-IPDL-Paremeters
                                        UE-Positioning-IPDL-Parameters
                                                                            OPTIONAL,
    sfn-SFN-RelTimeDifference
                                        SFN-SFN-RelTimeDifference1,
    sfn-SFN-Drift
                                        SFN-SFN-Drift
                                                                            OPTIONAL,
    searchWindowSize
                                        OTDOA-SearchWindowSize,
    relativeNorth
                                        INTEGER (-20000..20000)
                                                                            OPTIONAL,
    relativeEast
                                        INTEGER (-20000..20000)
                                                                            OPTIONAL,
    relativeAltitude
                                        INTEGER (-4000..4000)
                                                                            OPTIONAL,
                                        FineSFN-SFN,
   fineSFN-SFN
    -- actual value roundTripTime = (IE value * 0.0625) + 876
    roundTripTime
                                        INTEGER (0..32766)
                                                                            OPTIONAL
}
UE-Positioning-OTDOA-NeighbourCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
```

```
UE-Positioning-OTDOA-NeighbourCellInfo
UE-Positioning-OTDOA-NeighbourCellList-r4 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                              UE-Positioning-OTDOA-NeighbourCellInfo-r4
UE-Positioning-OTDOA-NeighbourCellList-UEB ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                          UE-Positioning-OTDOA-NeighbourCellInfo-UEB
UE-Positioning-OTDOA-Quality ::=
                                          SEQUENCE {
   stdResolution
                                      BIT STRING (SIZE (2)),
   numberOfOTDOA-Measurements
                                     BIT STRING (SIZE (3)),
   stdOfOTDOA-Measurements
                                     BIT STRING (SIZE (5))
}
UE-Positioning-OTDOA-ReferenceCellInfo ::=
                                                  SEOUENCE {
                                      INTEGER (0..4095)
   sfn
   OPTIONAL
   modeSpecificInfo CHOICE {
                                              SEQUENCE {
         primaryCPICH-Info
                                              PrimaryCPICH-Info
       tdd
                                              SEQUENCE {
           cellAndChannelIdentity
                                              CellAndChannelIdentity
       }
                                      FrequencyInfo
   frequencyInfo
                                                                         OPTIONAL,
   positioningMode CHOICE {
                                               SEQUENCE { },
       ueBased
       ueAssisted
                                              SEQUENCE {}
   ue-positioning-IPDL-Paremeters
                                              UE-Positioning-IPDL-Parameters OPTIONAL
{\tt UE-Positioning-OTDOA-ReferenceCellInfo-r4 ::= SEQUENCE } \{
                                       INTEGER (0..4095)
   sfn
   OPTIONAL
   modeSpecificInfo CHOICE {
       fdd
                                              SEOUENCE {
          primaryCPICH-Info
                                              PrimaryCPICH-Info
       tdd
                                               SEOUENCE {
          cellAndChannelIdentity
                                              CellAndChannelIdentity
   frequencyInfo
                                    FrequencyInfo
                                                                         OPTIONAL,
   positioningMode CHOICE {
                                              SEQUENCE {
       ueBased
                                                      ReferenceCellPosition OPTIONAL,
          cellPosition
           -- actual value roundTripTime = (IE value * 0.0625) + 876
                                              INTEGER (0..32766)
           roundTripTime
       },
                                              SEQUENCE {}
       ueAssisted
   ue-positioning-IPDL-Paremeters
                                              UE-Positioning-IPDL-Parameters-r4 OPTIONAL
}
UE-Positioning-OTDOA-ReferenceCellInfo-UEB ::=
                                                      SEQUENCE {
                                  INTEGER (0..4095)
                                                                         OPTIONAL,
   modeSpecificInfo CHOICE {
       fdd
                                              SECUENCE {
           primaryCPICH-Info
                                              PrimaryCPICH-Info
       tdd
                                              SEQUENCE {
           cellAndChannelIdentity
                                              CellAndChannelIdentity
       }
   frequencyInfo
                                       FrequencyInfo
                                                                          OPTIONAL,
                                      ReferenceCellPosition
   cellPosition
                                                                          OPTIONAL,
    -- actual value roundTripTime = (IE value * 0.0625) + 876
                                      INTEGER (0..32766)
                                                                         OPTIONAL.
   roundTripTime
   ue-positioning-IPDL-Paremeters UE-Positioning-IPDL-Parameters
                                                                         OPTIONAL
}
UE-Positioning-PositionEstimateInfo ::=
                                                      SEQUENCE {
                                 CHOICE {
   referenceTime
       \verb| utran-GPSReferenceTimeResult| \\ | UTRAN-GPSReferenceTimeResult|,
       gps-ReferenceTimeOnly
                                          INTEGER (0..604799999),
       cell-Timing
                                           SEQUENCE {
```

```
sfn
                                                       INTEGER (0..4095),
           modeSpecificInfo
                                           CHOICE {
                                                   SEQUENCE {
               fdd
                   primaryCPICH-Info
                                                       PrimaryCPICH-Info
               tdd
                                                  SEQUENCE {
                                                      CellAndChannelIdentity
                   cellAndChannelIdentity
           }
       }
    },
   positionEstimate
                                       PositionEstimate
}
UE-Positioning-ReportCriteria ::=
                                               CHOICE {
   ue-positioning-ReportingCriteria
                                                 UE-Positioning-EventParamList,
    periodicalReportingCriteria
                                       PeriodicalReportingCriteria,
    noReporting
                                       NULL
}
                                              SEQUENCE {
UE-Positioning-ReportingQuantity ::=
   methodType
                                       UE-Positioning-MethodType,
   positioningMethod
                                       PositioningMethod,
    -- dummyl is not used in this version of specification and it should
    -- be ignored.
                                       UE-Positioning-ResponseTime,
   dummy1
   horizontal-Accuracy
                                       UE-Positioning-Accuracy
                                                                          OPTIONAL,
   gps-TimingOfCellWanted
                                       BOOLEAN,
    -- dummy2 is not used in this version of specification and it should
    -- be ignored.
   dummy2
                                       BOOLEAN,
    additionalAssistanceDataRequest BOOLEAN,
    environmentCharacterisation
                                      EnvironmentCharacterisation
                                                                         OPTIONAL
}
UE-Positioning-ReportingQuantity-v390ext ::=
                                                   SEOUENCE {
   vertical-Accuracy
                                             UE-Positioning-Accuracy
UE-Positioning-ReportingQuantity-r4 ::=
                                              SEQUENCE {
   methodType
                                      UE-Positioning-MethodType,
                                       PositioningMethod,
   positioningMethod
   horizontalAccuracy
                                       UE-Positioning-Accuracy
                                                                          OPTIONAL.
    verticalAccuracy
                                       UE-Positioning-Accuracy
                                                                          OPTIONAL,
   gps-TimingOfCellWanted
                                     BOOLEAN,
   additionalAssistanceDataReq
                                      BOOLEAN,
                                      EnvironmentCharacterisation
    environmentCharacterisation
                                                                         OPTIONAL
}
UE-Positioning-ReportingQuantity-v7xyext ::=
                                               SEQUENCE {
                                      ENUMERATED { true }
   velocityRequested
                                                                          OPTIONAL
UE-Positioning-ResponseTime ::=
                                           ENUMERATED {
                                       s1, s2, s4, s8, s16,
                                       s32, s64, s128 }
-- SPARE: UTRA-CarrierRSSI, Max = 76
 - Values above Max are spare
                                  INTEGER (0..127)
IJTRA-CarrierRSST ::=
UTRAN-GPS-DriftRate ::=
                                   ENUMERATED {
                                   utran-GPSDrift0, utran-GPSDrift1, utran-GPSDrift2,
                                   utran-GPSDrift5, utran-GPSDrift10, utran-GPSDrift15,
                                   utran-GPSDrift25, utran-GPSDrift50, utran-GPSDrift-1,
                                   utran-GPSDrift-2, utran-GPSDrift-5, utran-GPSDrift-10,
                                   utran-GPSDrift-15, utran-GPSDrift-25, utran-GPSDrift-50}
UTRAN-GPSReferenceTime ::=
                                       SEOUENCE {
    -- For utran-GPSTimingOfCell values above 2322431999999 are not
    -- used in this version of the specification
    -- Actual value utran-GPSTimingOfCell = (ms-part * 4294967296) + ls-part
    utran-GPSTimingOfCell
                                  SEQUENCE {
                                       INTEGER (0..1023),
       ms-part
       ls-part
                                       INTEGER (0..4294967295)
    modeSpecificInfo
                                  CHOICE {
                                       SEQUENCE {
       fdd
```

```
referenceIdentity
                                      PrimaryCPICH-Info
       tdd
                                  SEQUENCE {
                                      CellParametersID
          referenceIdentity
   }
                OPTIONAL,
                                   INTEGER (0..4095)
   sfn
}
UTRAN-GPSReferenceTimeResult ::=
                                           SEQUENCE {
   -- For ue-GPSTimingOfCell values above 37158911999999 are not
   -- used in this version of the specification
   -- Actual value ue-GPSTimingOfCell = (ms-part * 4294967296) + ls-part
   ms-part
                                    INTEGER (0.. 16383),
      ls-part
                                    INTEGER (0..4294967295)
   modeSpecificInfo
                                CHOICE {
                                  SEQUENCE {
                                      PrimaryCPICH-Info
         referenceIdentity
                                  SEQUENCE {
       tdd
          referenceIdentity
                                      CellParametersID
   },
                                   INTEGER (0..4095)
   sfn
VarianceOfRLC-BufferPayload ::=
                               ENUMERATED {
                                   plv0, plv4, plv8, plv16, plv32, plv64,
                                    plv128, plv256, plv512, plv1024,
                                    plv2k, plv4k, plv8k, plv16k, spare2, spare1 }
                                CHOICE {
VelocityEstimate
                 ::=
                                             HorizontalVelocity,
   horizontalVelocity
   horizontalWithVerticalVelocity
                                              HorizontalWithVerticalVelocity,
                                              HorizontalVelocityWithUncertainty,
   horizontalVelocityWithUncertainty
   horizontalWithVerticalVelocityAndUncertainty HorizontalWithVerticalVelocityAndUncertainty
}
-- Actual value W = IE value * 0.1
                                INTEGER (0..20)
__ ****************
     OTHER INFORMATION ELEMENTS (10.3.8)
__ ***************************
                                INTEGER (0..7)
BCCH-ModificationInfo ::=
                                SEOUENCE {
  mib-ValueTag
                                 MIB-ValueTag,
   bcch-ModificationTime
                                    BCCH-ModificationTime
                                                           OPTIONAL
}
-- Actual value BCCH-ModificationTime = IE value * 8
BCCH-ModificationTime ::=
                         INTEGER (0..511)
BSIC ::=
                                SEQUENCE {
   ncc
                                   NCC.
   bcc
                                    BCC
}
CBS-DRX-Level1Information ::=
                               SEQUENCE {
   ctch-AllocationPeriod
                                    INTEGER (1..256),
   cbs-FrameOffset
                                    INTEGER (0..255)
}
CBS-DRX-LevellInformation-extension-r6 ::= ENUMERATED {p8, p16, p32, p64, p128, p256}
CDMA2000-Message ::=
                                SEQUENCE {
  msg-Type
                                   BIT STRING (SIZE (8)),
                                    BIT STRING (SIZE (1..512))
   payload
                                  SEQUENCE (SIZE (1..maxInterSysMessages)) OF
CDMA2000-MessageList ::=
                                       CDMA2000-Message
```

```
SEQUENCE (SIZE (1..maxNumCDMA2000Freqs)) OF
CDMA2000-UMTS-Frequency-List ::=
                                           FrequencyInfoCDMA2000
CellValueTag ::=
                                       INTEGER (1..4)
--Actual value = 2^(IE value)
                                      INTEGER (1..8)
ExpirationTimeFactor ::=
FDD-UMTS-Frequency-List ::=
                                       SEQUENCE (SIZE (1..maxNumFDDFreqs)) OF
                                          FrequencyInfoFDD
FrequencyInfoCDMA2000 ::=
                                       SEOUENCE {
                                           band-Class BIT STRING (SIZE (5)),
                                           cdma-Freq
                                                          BIT STRING (SIZE(11))
}
GERAN-SystemInfoBlock ::=
                                      OCTET STRING (SIZE (1..23))
GERAN-SystemInformation ::=
                                      SEQUENCE (SIZE (1..maxGERAN-SI)) OF GERAN-SystemInfoBlock
                                       SEQUENCE {
GSM-BA-Range ::=
                                           gsmLowRangeUARFCN
                                                                  UARFCN,
                                           gsmUpRangeUARFCN
}
GSM-BA-Range-List ::=
                                       SEQUENCE (SIZE (1..maxNumGSMFreqRanges)) OF
                                           GSM-BA-Range
-- This IE is formatted as 'TLV' and is coded in the same way as the Mobile Station Classmark 2
-- information element in [5]. The first octet is the Mobile station classmark 2 IEI and its value
-- shall be set to 33H. The second octet is the Length of mobile station classmark 2 and its value
-- shall be set to 3. The octet 3 contains the first octet of the value part of the Mobile Station
-- Classmark 2 information element, the octet 4 contains the second octet of the value part of the
-- Mobile Station Classmark 2 information element and so on. For each of these octets, the first/
-- leftmost/ most significant bit of the octet contains b8 of the corresponding octet of the Mobile
-- Station Classmark 2.
GSM-Classmark2 ::=
                                  OCTET STRING (SIZE (5))
-- This IE is formatted as 'V' and is coded in the same way as the value part in the Mobile station
-- classmark 3 information element in [5]
-- The value part is specified by means of CSN.1, which encoding results in a bit string, to which
-- final padding may be appended upto the next octet boundary [5]. The first/ leftmost bit of the
-- CSN.1 bit string is placed in the first/ leftmost/ most significant bit of the first
-- octet. This continues until the last bit of the CSN.1 bit string, which is placed in the last/
-- rightmost/ least significant bit of the last octet.
GSM-Classmark3 ::=
                                   OCTET STRING (SIZE (1..32))
GSM-MessageList ::=
                                   SEQUENCE (SIZE (1..maxInterSysMessages)) OF
                                       BIT STRING (SIZE (1..512))
GSM-MS-RadioAccessCapability ::=
                                 OCTET STRING (SIZE (1..64))
GsmSecurityCapability ::=
                                   BIT STRING {
                                       -- For each bit value '0' means false/ not supported
                                       a5-7(0),
                                       a5-6(1),
                                       a5-5(2),
                                       a5-4(3),
                                       a5-3(4),
                                       a5-2(5),
                                       a5-1(6)
                                         (SIZE (7))
                                       }
GSM-TargetCellInfoList ::=
                             SEQUENCE (SIZE (1..maxGSMTargetCells)) OF
                                           GSM-TargetCellInfo
                                   SEQUENCE {
GSM-TargetCellInfo ::=
   bcch-ARFCN
                                       BCCH-ARFCN,
    frequency-band
                                       Frequency-Band,
                                                      OPTIONAL
   bsic
}
IdentificationOfReceivedMessage ::= SEQUENCE {
       rrc-TransactionIdentifier RRC-TransactionIdentifier,
       receivedMessageType
                                       ReceivedMessageType
```

```
}
\label{linear} \mbox{InterRAT-ChangeFailureCause} \ \mbox{::=} \ \ \ \mbox{CHOICE} \ \big\{
                                 NULL,
    configurationUnacceptable
    physicalChannelFailure
                                      NULL.
   protocolError
                                     ProtocolErrorInformation,
   unspecified
                                     NULL.
                                     NULL,
    spare4
    spare3
                                     NULL,
    spare2
                                      NULL,
                                      NULL
    spare1
}
GERANIu-MessageList ::=
                                SEQUENCE (SIZE (1..maxInterSysMessages)) OF
                                     BIT STRING (SIZE (1..32768))
GERANIu-RadioAccessCapability ::= BIT STRING (SIZE (1..170))
InterRAT-UE-RadioAccessCapability ::= CHOICE {
                                      SEQUENCE {
   qsm
       qsm-Classmark2
                                         GSM-Classmark2,
       gsm-Classmark3
                                         GSM-Classmark3
   cdma2000
                                     SEQUENCE {
       cdma2000-MessageList
                                         CDMA2000-MessageList
}
InterRAT-UE-RadioAccessCapabilityList ::= SEQUENCE (SIZE(1..maxInterSysMessages)) OF
                                         InterRAT-UE-RadioAccessCapability
InterRAT-UE-RadioAccessCapability-v590ext ::= SEQUENCE {
    geranIu-RadioAccessCapability GERANIu-RadioAccessCapability
}
InterRAT-UE-RadioAccessCapability-v690ext ::= SEQUENCE {
   }
InterRAT-UE-SecurityCapability ::= CHOICE {
                                     SEQUENCE {
   qsm
       gsmSecurityCapability
                                      GsmSecurityCapability
}
                                  SEQUENCE (SIZE(1..maxInterSysMessages)) OF
InterRAT-UE-SecurityCapList ::=
                                     InterRAT-UE-SecurityCapability
InterRAT-HO-FailureCause ::=
                                 CHOICE {
    configurationUnacceptable
                                   NULL,
    physicalChannelFailure
                                     NULTITA.
   protocolError
                                     ProtocolErrorInformation,
    interRAT-ProtocolError
                                     NULL,
   unspecified
                                     NULL,
    spare11
                                     NULL,
    spare10
                                     NULL,
                                     NULL,
    spare9
    spare8
                                      NULL,
    spare7
                                     NULT.
    spare6
                                     NULL,
    spare5
                                      NULL,
    spare4
                                     NULL,
    spare3
                                      NULL,
    spare2
                                      NULL.
                                      NULL
    spare1
}
MasterInformationBlock ::= SEQUENCE {
       mib-ValueTag
                                   MIB-ValueTag,
        -- TABULAR: The PLMN identity and ANSI-41 core network information
        -- are included in PLMN-Type.
                                     PLMN-Type,
       plmn-Type
                            SIBSb-ReferenceList,
       sibSb-ReferenceList
    -- Extension mechanism for non- release99 information
       v690NonCriticalExtensions SEQUENCE {
           masterInformationBlock-v690ext, MasterInformationBlock-v690ext,
                                             SEQUENCE {}
                                                                                OPTIONAL
           nonCriticalExtensions
```

```
} OPTIONAL
}
{\tt MasterInformationBlock-v690ext ::= SEQUENCE \{}
    multiplePLMN-List
                                       MultiplePLMN-List-r6
                                                                      OPTIONAL
                                   INTEGER (1..8)
MIB-ValueTag ::=
NCC ::=
                                   INTEGER (0..7)
PLMN-ValueTag ::=
                                   INTEGER (1..256)
PredefinedConfigIdentityAndValueTag ::= SEQUENCE {
   predefinedConfigIdentity
                                       PredefinedConfigIdentity,
    predefinedConfigValueTag
                                           PredefinedConfigValueTag
}
ProtocolErrorInformation ::=
                                  SEQUENCE {
    diagnosticsType
                                     CHOICE {
                                           SEQUENCE {
       protocolErrorCause
},
        type1
                                               ProtocolErrorCause
                                           NULL
        spare
}
ReceivedMessageType ::=
                                   ENUMERATED {
                                        activeSetUpdate,
                                        cellChangeOrderFromUTRAN,
                                        cellUpdateConfirm,
                                        counterCheck,
                                        downlinkDirectTransfer,
                                        interRATHandoverCommand,
                                        measurementControl,
                                       pagingType2,
                                        physicalChannelReconfiguration,
                                        physicalSharedChannelAllocation,
                                        radioBearerReconfiguration,
                                        radioBearerRelease,
                                       radioBearerSetup,
                                        rrcConnectionRelease,
                                        rrcConnectionReject,
                                        rrcConnectionSetup,
                                        securityModeCommand,
                                        signallingConnectionRelease,
                                        transportChannelReconfiguration,
                                        transportFormatCombinationControl,
                                        ueCapabilityEnquiry,
                                        ueCapabilityInformationConfirm,
                                        uplinkPhysicalChannelControl,
                                        uraUpdateConfirm,
                                        utranMobilityInformation,
                                        assistanceDataDelivery,
                                        spare6, spare5, spare4, spare3, spare2,
                                        spare1
}
                                        SEQUENCE {
Rplmn-Information ::=
                                            gsm-BA-Range-List GSM-BA-Range-List OPTIONAL,
                                            fdd-UMTS-Frequency-List FDD-UMTS-Frequency-List
   OPTIONAL,
                                           tdd-UMTS-Frequency-List TDD-UMTS-Frequency-List
   OPTIONAL,
                                            cdma2000-UMTS-Frequency-List CDMA2000-UMTS-Frequency-
       OPTIONAL
List
}
OPTIONAL,
                                   FDD-UMTS-Frequency-List
                                                                           OPTIONAL,
    -- the option is the same for 7.68 Mcps TDD as for 3.84 Mcps TDD
    -- i.e. TDD-UMTS-Frequency-List applies
    tdd384-UMTS-Frequency-List TDD-UMTS-Frequency-List tdd128-UMTS-Frequency-List TDD-UMTS-Frequency-List
                                                                           OPTIONAL,
    cdma2000-UMTS-Frequency-List CDMA2000-UMTS-Frequency-List
                                                                           OPTIONAL
```

```
SEQUENCE {
SchedulingInformation ::=
                                       SEQUENCE {
    scheduling
                                           SegCount
        segCount
                                                                            DEFAULT 1.
                                           CHOICE {
        sib-Pos
           -- The element name indicates the repetition period and the value
            -- (multiplied by two) indicates the position of the first segment.
                                               INTEGER (0..1),
           rep4
           rep8
                                               INTEGER (0..3),
           rep16
                                               INTEGER (0..7),
           rep32
                                               INTEGER (0..15),
           rep64
                                               INTEGER (0..31),
                                               INTEGER (0..63),
           rep128
           rep256
                                               INTEGER (0..127),
           rep512
                                               INTEGER (0..255),
           rep1024
                                               INTEGER (0..511),
                                               INTEGER (0..1023),
           rep2048
           rep4096
                                               INTEGER (0..2047)
       sib-PosOffsetInfo
                                           SibOFF-List
                                                                           OPTIONAL
    }
}
SchedulingInformationSIB ::=
                                     SEQUENCE {
    sib-Type
                                       SIB-TypeAndTag,
    scheduling
                                       SchedulingInformation
}
                                     SEQUENCE {
SchedulingInformationSIBSb ::=
                                       SIBSb-TypeAndTag,
    sibSb-Type
    scheduling
                                       SchedulingInformation
                                   INTEGER (1..16)
SegCount ::=
SegmentIndex ::=
                                   INTEGER (1..15)
-- Actual value SFN-Prime = 2 * IE value
                                   INTEGER (0..2047)
SFN-Prime ::=
SIB-Data-fixed ::=
                                  BIT STRING (SIZE (222))
SIB-Data-variable ::=
                                  BIT STRING (SIZE (1..214))
                               INTEGER (0..15)
SIBOccurIdentity ::=
SIBOccurrenceIdentityAndValueTag ::= SEQUENCE {
   sibOccurIdentity
                                 SIBOccurIdentity,
    sibOccurValueTag
                                   SIB0ccurValueTag
SIBOccurValueTag ::= INTEGER (0..15)
                                   SEQUENCE (SIZE (1..maxSIB)) OF
SIB-ReferenceList ::=
                                       SchedulingInformationSIB
SIBSb-ReferenceList ::=
                                   SEQUENCE (SIZE (1..maxSIB)) OF
                                       SchedulingInformationSIBSb
SIB-ReferenceListFACH ::=
                                   SEQUENCE (SIZE (1..maxSIB-FACH)) OF
                                       SchedulingInformationSIB
                                   ENUMERATED {
SIB-Type ::=
                                       masterInformationBlock,
                                       systemInformationBlockType1,
                                       systemInformationBlockType2,
                                       systemInformationBlockType3,
                                       systemInformationBlockType4,
                                       systemInformationBlockType5,
                                       systemInformationBlockType6,
                                       systemInformationBlockType7,
        -- dummy, dummy2 and dummy3 are not used in this version of the specification,
        -- they should not be sent. If they are received the UE behaviour is not specified.
                                       dummy,
                                       dummy2,
                                       dummy3,
```

systemInformationBlockType11,

```
systemInformationBlockType12,
                                         systemInformationBlockType13,
                                         systemInformationBlockType13-1,
                                         systemInformationBlockType13-2,
                                         systemInformationBlockType13-3,
                                         systemInformationBlockType13-4,
                                         systemInformationBlockType14,
                                         systemInformationBlockType15,
                                         systemInformationBlockType15-1,
                                         systemInformationBlockType15-2,
                                         systemInformationBlockType15-3,
                                         systemInformationBlockType16,
                                         systemInformationBlockType17,
                                         systemInformationBlockType15-4,
                                         systemInformationBlockType18,
                                         schedulingBlock1,
                                         schedulingBlock2,
                                         systemInformationBlockType15-5,
                                         systemInformationBlockType5bis,
                                         spare1 }
SIB-TypeAndTag ::=
                                     CHOICE {
                                         PLMN-ValueTag,
    sysInfoType1
                                         CellValueTag,
    sysInfoType2
    sysInfoType3
                                         CellValueTag
    sysInfoType4
                                         CellValueTag,
    sysInfoType5
                                         CellValueTag,
                                         CellValueTag,
    sysInfoType6
                                         NULL,
    sysInfoType7
    -- dummy, dummy2 and dummy3 are not used in this version of the specification,
    -- they should not be sent. If they are received the UE behaviour is not specified.
    dummy
                                         CellValueTag,
    dummy2
                                         NULL.
    dummy3
                                         NULL,
    sysInfoType11
                                         CellValueTag,
    sysInfoType12
                                         CellValueTag,
    sysInfoType13
                                         CellValueTag,
    sysInfoType13-1
                                         CellValueTag,
    sysInfoType13-2
                                         CellValueTag,
    sysInfoType13-3
                                         CellValueTag,
                                         CellValueTag,
    sysInfoType13-4
                                         NULL,
    sysInfoType14
    sysInfoType15
                                         CellValueTag,
    sysInfoType16
                                         PredefinedConfigIdentityAndValueTag,
    sysInfoType17
                                         NULL,
    sysInfoType15-1
                                         CellValueTag.
    sysInfoType15-2
                                         SIBOccurrenceIdentityAndValueTag,
    sysInfoType15-3
                                         SIBOccurrenceIdentityAndValueTag,
    sysInfoType15-4
                                        CellValueTag,
                                         CellValueTag,
    svsInfoTvpe18
    sysInfoType15-5
                                         CellValueTag,
    sysInfoType5bis
                                         CellValueTag,
    spare4
                                         NULL.
    spare3
                                         NULL,
                                         NULL,
    spare2
    spare1
                                         NULL
}
SIBSb-TypeAndTag ::=
                                        CHOICE {
    sysInfoType1
                                         PLMN-ValueTag,
    sysInfoType2
                                         CellValueTag,
    sysInfoType3
                                         CellValueTag,
                                         CellValueTag,
    sysInfoType4
                                         CellValueTag,
    sysInfoType5
    sysInfoType6
                                         CellValueTag,
                                         NULL,
    -- dummy, dummy2 and dummy3 are not used in this version of the specification,
    -- they should not be sent. If they are received the UE behaviour is not specified.
    dummy
                                         CellValueTag,
    dummy2
                                         NULL,
    dummy3
                                         NULL,
    sysInfoType11
                                         CellValueTag,
    sysInfoType12
                                         CellValueTag,
    sysInfoType13
                                         CellValueTag,
    sysInfoType13-1
                                        CellValueTag,
    sysInfoType13-2
                                         CellValueTag,
    sysInfoType13-3
                                         CellValueTag,
```

```
sysInfoType13-4
                                        CellValueTag,
    sysInfoType14
                                        NULL,
    sysInfoType15
                                        CellValueTag,
                                        PredefinedConfigIdentityAndValueTag,
    sysInfoType16
    sysInfoType17
                                        NULL,
    sysInfoTypeSB1
                                       CellValueTag,
    sysInfoTypeSB2
                                        CellValueTag,
    sysInfoType15-1
                                       CellValueTag,
    sysInfoType15-2
                                        SIBOccurrenceIdentityAndValueTag,
    sysInfoType15-3
                                        SIBOccurrenceIdentityAndValueTag,
    sysInfoType15-4
                                       CellValueTag,
                                        CellValueTag,
    sysInfoType18
    sysInfoType15-5
                                        CellValueTag,
    sysInfoType5bis
                                        CellValueTag,
    spare2
                                        NULL,
                                        NULL
    spare1
                                    ENUMERATED {
SibOFF ::=
                                        so2, so4, so6, so8, so10,
                                        so12, so14, so16, so18,
                                        so20, so22, so24, so26,
                                        so28, so30, so32 }
                                    SEQUENCE (SIZE (1..15)) OF
SibOFF-List ::=
                                        SibOFF
SysInfoType1 ::=
                                    SEQUENCE {
    -- Core network IEs
        \verb"cn-CommonGSM-MAP-NAS-SysInfo" NAS-SystemInformationGSM-MAP",
        cn-DomainSysInfoList
                                        CN-DomainSysInfoList,
    -- User equipment IEs
       ue-ConnTimersAndConstantsUE-ConnTimersAndConstantsue-IdleTimersAndConstantsUE-IdleTimersAndConstants
                                                                           OPTIONAL,
                                                                            OPTIONAL,
    -- Extension mechanism for non- release99 information
       v3a0NonCriticalExtensions SEQUENCE {
   sysInfoType1-v3a0ext SysInfoType1-v3a0ext-IEs,
   nonCriticalExtensions SEQUENCE {} OPTIONAL
           nonCriticalExtensions
        }
                                   OPTIONAL
}
SysInfoType1-v3a0ext-IEs ::= SEQUENCE {
                                            UE-ConnTimersAndConstants-v3a0ext,
    ue-ConnTimersAndConstants-v3a0ext
    ue-IdleTimersAndConstants-v3a0ext
                                            UE-IdleTimersAndConstants-v3a0ext
}
                                    SEQUENCE {
SysInfoType2 ::=
    -- UTRAN mobility IEs
       ura-IdentityList
                                        URA-IdentityList,
    -- Extension mechanism for non- release99 information
       nonCriticalExtensions
                                       SEQUENCE {}
                                                                            OPTIONAL
}
SysInfoType3 ::=
                                   SEQUENCE {
       sib4indicator
                                       BOOLEAN,
    -- UTRAN mobility IEs
       cellIdentity
                                       CellIdentity,
       cellSelectReselectInfo CellSelectReselectInfoSIB-3-4,
       cellAccessRestriction
                                       CellAccessRestriction,
    -- Extension mechanism for non- release99 information
        v5c0NoncriticalExtension
                                                SEQUENCE {
                    sysInfoType3-v5c0ext
                                                   SysInfoType3-v5c0ext-IEs,
                    v670NonCriticalExtension
                                                        SEQUENCE {
                        sysInfoType3-v670ext
                                                            SysInfoType3-v670ext,
                                                        SEQUENCE {}
                                                                                        OPTIONAL
                        nonCriticalExtensions
                    }
                                                OPTIONAL
               }
                                            OPTIONAL
                                        OPTIONAL
            }
        }
                                    OPTIONAL
}
SysInfoType3-v4b0ext-IEs ::= SEQUENCE {
   mapping-LCR
                                  Mapping-LCR-r4
                                                                            OPTIONAL
```

```
SysInfoType3-v590ext ::= SEQUENCE {
    cellSelectReselectInfo-v590ext
                                           CellSelectReselectInfo-v590ext
                                                                                      OPTIONAL
}
SysInfoType3-v5c0ext-IEs ::= SEQUENCE {
    cellSelectReselectInfoTreselectionScaling-v5c0ext
                                              CellSelectReselectInfoTreselectionScaling-v5c0ext OPTIONAL
}
SysInfoType3-v670ext ::= SEQUENCE {
         {\tt domainSpecificAccessRestrictionParametersForPLMNOfMIB}
                                         DomainSpecificAccessRestrictionParam-v670ext
                                                                                                 OPTIONAL,
         domainSpecificAccessRestictionForSharedNetwork
                                         DomainSpecificAccessRestrictionForSharedNetwork-v670ext OPTIONAL
}
                                        SEQUENCE {
SysInfoType4 ::=
    -- UTRAN mobility IEs
         cellIdentity
                                             CellIdentity,
         cellSelectReselectInfo
cellAccessRestriction
                                             CellSelectReselectInfoSIB-3-4,
                                             CellAccessRestriction,
    -- Extension mechanism for non- release99 information
         v4b0NonCriticalExtensions SEQUENCE {
    sysInfoType4-v4b0ext SysInfo
             sysInfoType4-v4b0ext SysInfoType4-v4b0ext-IEs,
v590NonCriticalExtension SEQUENCE {
    sysInfoType4-v590ext SysInfoType4-v590ext,
    v5b0NonCriticalExtension SeQUENCE {
        sysInfoType4-v5b0ext SysInfoType4-v5b0ext
                       sysInfoType4-v5b0ext SysInfoType4-v5b0ext-IEs,
v5c0NonCriticalExtension SEQUENCE {
    sysInfoType4-v5c0ext SysInfoType4-v5c0ext
    nonCriticalExtensions SEQUENCE {}
} OPTIONAL.
                                                                    SysInfoType4-v5c0ext-IEs,
                                                                                                      OPTIONAL
                           OPTIONAL
                       OPTIONAL
                  OPTIONAL
             OPTIONAL
}
SysInfoType4-v4b0ext-IEs ::= SEQUENCE {
                                        Mapping-LCR-r4
                                                                                       OPTIONAL
    mapping-LCR
SysInfoType4-v590ext ::= SEQUENCE {
    cellSelectReselectInfo-v590ext
                                           CellSelectReselectInfo-v590ext
                                                                                       OPTIONAL
SysInfoType4-v5b0ext-IEs ::= SEQUENCE {
    cellSelectReselectInfoPCHFACH-v5b0ext CellSelectReselectInfoPCHFACH-v5b0ext
                                                                                                     OPTIONAL
}
SysInfoType4-v5c0ext-IEs ::= SEQUENCE {
    {\tt cellSelectReselectInfoTreselectionScaling-v5c0ext}
                                             CellSelectReselectInfoTreselectionScaling-v5c0ext OPTIONAL
}
                                         SEQUENCE {
SysInfoType5 ::=
        sib6indicator
                                            BOOLEAN,
     -- Physical channel IEs
         pich-PowerOffset
                                             PICH-PowerOffset.
         modeSpecificInfo
                                             CHOICE {
             fdd
                                               SEQUENCE {
                  aich-PowerOffset
                                                       AICH-PowerOffset
             },
             tdd
                                                  SEQUENCE {
    -- If PDSCH/PUSCH is configured for 1.28Mcps TDD, the following IEs should be absent
         and the info included in the tdd128SpecificInfo instead.
    -- If PDSCH/PUSCH is configured for 3.84Mcps TDD in R5, HCR-r5-SpecificInfo should also be
    -- included.
                  pusch-SysInfoList-SFN
                                                       PUSCH-SysInfoList-SFN
                                                                                       OPTIONAL.
                  pdsch-SysInfoList-SFN
                                                       PDSCH-SysInfoList-SFN
                  openLoopPowerControl-TDD
                                                      OpenLoopPowerControl-TDD
             }
         primaryCCPCH-Info
                                             PrimaryCCPCH-Info
                                                                                       OPTIONAL,
         primaryccrch-info Frimaryccrch-info
prach-SystemInformationList PRACH-SystemInformationList,
sCCPCH-SystemInformationList,
         -- cbs-DRX-LevellInformation is conditional on any of the CTCH indicator IEs in
```

```
-- sCCPCH-SystemInformationList
         cbs-DRX-Level1Information CBS-DRX-Level1Information
                                                                                         OPTIONAL,
     -- Extension mechanism for non- release99 information
         v4b0NonCriticalExtensions SEQUENCE {
    sysInfoType5-v4b0ext SysInf
                                                                                         OPTIONAL,
                                                 SysInfoType5-v4b0ext-IEs
          -- Extension mechanism for non- rel-4 information
             v590NonCriticalExtensions SEQUENCE {
   sysInfoType5-v590ext SysInfoType5-v590ext-IEs OPTIONAL,
   v650NonCriticalExtensions SEQUENCE {
   sysInfoType5-v650ext SysInfoType5-v650ext-IEs OPTIONAL,

                        sysInfoType5-v650ext SysInfoType5-v650ext-IEs
v680NonCriticalExtensions SEQUENCE {
    sysInfoType5-v680ext SysInfoType5-v680ext-IEs
    v690NonCriticalExtensions SEQUENCE {
        sysInfoType5-v690ext SysInfoType5-v690ext-IE

                                                                                                     OPTIONAL,
                                                                                                         OPTIONAL.
                                 sysInfoType5-v690ext SysInfoType5-v690ext-IEs,
v7xyNonCriticalExtensions SEQUENCE {
    sysInfoType5-v7xyext SysInfoType5-v7xyext-IEs,
    nonCriticalExtensions SEQUENCE {} OI
                                                                                                         OPTIONAL
                                           OPTIONAL
                                      OPTIONAL
                                 OPTIONAL
                             OPTIONAL
                        OPTIONAL
                   OPTIONAL
}
SysInfoType5-v4b0ext-IEs ::= SEQUENCE {
    --The following IE PNBSCH-Allocation-r4 shall be used for 3.84Mcps TDD only.
    pNBSCH-Allocation-r4
                                    PNBSCH-Allocation-r4 OPTIONAL,
    -- In case of TDD, the following IE is included instead of the
    -- IE up-IPDL-Parameter in up-OTDOA-AssistanceData.
    openLoopPowerControl-IPDL-TDD OpenLoopPowerControl-IPDL-TDD-r4 OPTIONAL,
-- If SysInfoType5 is sent to describe a 1.28Mcps TDD cell, the IE PRACH-RACH-Info included in
-- PRACH-SystemInformationList shall be ignored, the IE PRACH-Partitioning and the
-- IE rach-TransportFormatSet shall be absent and the corresponding IE in the following
-- PRACH-SystemInformationList-LCR-r4 shall be used
    prach-SystemInformationList-LCR-r4 PRACH-SystemInformationList-LCR-r4 OPTIONAL,
         128SpecificInfo SEQUENCE {
   pusch-SysInfoList-SFN PUSCH-SysInfoList-SFN-LCR-r4 OPTIONAL,
   pdsch-SysInfoList-SFN PDSCH-SysInfoList-SFN-LCR-r4 OPTIONAL,
   pCCPCH-LCR-Extensions PrimaryCCPCH-Info-LCR-r4-ext OPTIONAL,
   sCCPCH-LCR-ExtensionsList SCCPCH-SystemInformationList-LCR-r4-ext
    tdd128SpecificInfo
                                                                                 OPTIONAL.
     frequencyBandIndicator
                                        RadioFrequencyBandFDD
                                                                                  OPTIONAL
{\tt SysInfoType5-v590ext-IEs} \; ::= \; {\tt SEQUENCE} \; \left\{ \right. \\
    hcr-r5-SpecificInfo SEQUENCE {
                                         PUSCH-SysInfoList-SFN-HCR-r5 OPTIONAL,
         pusch-SysInfoList-SFN
         pdsch-SysInfoList-SFN
                                               PDSCH-SysInfoList-SFN-HCR-r5
                                                                                       OPTIONAL
    }
                                                                                       OPTIONAL
}
SysInfoType5-v650ext-IEs ::= SEQUENCE {
    frequencyBandIndicator2 RadioFrequencyBandFDD2
SysInfoType5-v680ext-IEs ::= SEQUENCE {
    -- TABULAR: HSDPA Cell Indicator is MD in tabular description
     -- Default value is "HSDPA Capability not indicated"
                              ENUMERATED { hsdpa-CapableCell }
                                                                             OPTIONAL
    hsdpa-CellIndicator
                                         SEQUENCE {
SysInfoType5-v690ext-IEs ::=
    -- TABULAR: E-DCH Cell Indicator is MD in tabular description
    -- Default value is "E-DCH Capability not indicated"
    edch-CellIndicator
                                        ENUMERATED { edch-CapableCell }
    sccpch-SystemInformation-MBMS
         MBMS-MCCH-ConfigurationInfo-r6, mcchOnSCCPCHusedOnlyForMBMS SCCPCH-SvstemInfo-r6, OPTIONAL.
                                               CHOICE {
         mcchOnSCCPCHusedForNonMBMS
                                                   SCCPCH-SystemInformation-MBMS-r6
              OPTIONAL,
    additionalPRACH-TF-and-TFCS-CCCH-List AdditionalPRACH-TF-and-TFCS-CCCH-List OPTIONAL,
    cBS-DRX-Level1Information-extension
                                                    CBS-DRX-Level1Information-extension-r6 OPTIONAL
}
                                           PUSCH-SysInfoList-SFN-VHCR
PRACH-SystemInformationTist---
PDSCH-CH-T
    pusch-SysInfoList-SFN-VHCR prach-System (
SysInfoType5-v7xyext-IEs ::=
                                                                                    OPTIONAL.
    prach-SystemInformationList-r7
                                               PRACH-SystemInformationList-r7 OPTIONAL,
    pdsch-SysInfoList-SFN-r7
                                               PDSCH-SysInfoList-r7
                                                                                       OPTIONAL.
```

```
sccpch-SystemInformation-MBMS
                                        CHOICE {
        mcchOnSCCPCHusedForNonMBMS
                                           MBMS-MCCH-ConfigurationInfo-r6,
        mcchOnSCCPCHusedOnlyForMBMS
                                            SCCPCH-SystemInformation-MBMS-r7
           OPTIONAL,
    sCCPCH-SystemInformationList-r7
                                        SCCPCH-SystemInformationList-r7 OPTIONAL
}
-- SysInfoType5bis uses the same structure as SysInfoType5
SysInfoType5bis ::= SysInfoType5
SysInfoType6 ::=
                                   SEQUENCE {
    -- Physical channel IEs
       pich-PowerOffset
                                        PICH-PowerOffset,
        modeSpecificInfo
                                        CHOICE {
                                        SEQUENCE {
           fdd
                aich-PowerOffset
                                               AICH-PowerOffset,
                -- dummy is not used in this version of specification, it should
                -- not be sent and if received it should be ignored.
                                                CSICH-PowerOffset
                                                                           OPTIONAL
                dummy
            },
            t.dd
                                           SEQUENCE {
                -- If PDSCH/PUSCH is configured for 1.28Mcps TDD, pusch-SysInfoList-SFN,
                -- pdsch-SysInfoList-SFN and openLoopPowerControl-TDD should be absent
                -- and the info included in the tdd128SpecificInfo instead.
                -- If PDSCH/PUSCH is configured for 3.84Mcps TDD in R5, HCR-r5-SpecificInfo should
                -- also be included.
                pusch-SysInfoList-SFN
                                               PUSCH-SysInfoList-SFN
                                                                            OPTIONAL,
                pdsch-SysInfoList-SFN
                                               PDSCH-SysInfoList-SFN
                                                                            OPTIONAL,
                openLoopPowerControl-TDD
                                               OpenLoopPowerControl-TDD
            }
        },
        primaryCCPCH-Info
                                       PrimaryCCPCH-Info
                                                                            OPTIONAL,
        prach-SystemInformationList PRACH-SystemInformationList
                                                                           OPTIONAL,
        sCCPCH-SystemInformationList cbs-DRX-LevellInformation CBS-DRX-LevellInformation
                                                                           OPTIONAL,
                                                                            OPTIONAL,
        -- Conditional on any of the CTCH indicator IEs in
        -- sCCPCH-SystemInformationList
    -- Extension mechanism for non- release99 information
       v4b0NonCriticalExtensions SEQUENCE {
           sysInfoType6-v4b0ext
                                          SysInfoType6-v4b0ext-IEs
                                                                          OPTIONAL,
        -- Extension mechanism for non- rel-4 information
            {\tt v590NonCriticalExtensions} \hspace{0.5cm} {\tt SEQUENCE} \hspace{0.1cm} \{
                sysInfoType6-v590ext
                                               SysInfoType6-v590ext-IEs
                                                                         OPTIONAL,
                v650nonCriticalExtensions
                                                SEQUENCE {
                    sysInfoType6-v650ext
                                                SysInfoType6-v650ext-IEs
                                                                                    OPTIONAL,
                    v690nonCriticalExtensions
                                                    SEQUENCE {
                        sysInfoType6-v690ext
                                                        SysInfoType6-v690ext-IEs,
                        v7xyNonCriticalExtensions
                                                        SEQUENCE {
                            sysInfoType6-v7xyext
                                                           SysInfoType6-v7xyext-IEs,
                            nonCriticalExtensions
                                                            SEQUENCE {}
                                                                                        OPTIONAL
                            OPTIONAL
                    }
                                                OPTIONAL
               }
                                           OPTIONAL
                                        OPTIONAL
           }
        }
                                    OPTIONAL
SysInfoType6-v4b0ext-IEs ::= SEQUENCE {
    -- openLoopPowerControl-IPDL-TDD is present only if IPDLs are applied for TDD
                                   OpenLoopPowerControl-IPDL-TDD-r4
                                                                      OPTIONAL,
    openLoopPowerControl-IPDL-TDD
     -- If SysInfoType6 is sent to describe a 1.28Mcps TDD cell, the IE PRACH-RACH-Info included
    -- in PRACH-SystemInformationList shall be ignored, the IE PRACH-Partitioning and the
    -- IE rach-TransportFormatSet shall be absent and the corresponding IEs in the following
    -- PRACH-SystemInformationList-LCR-r4 shall be used
    prach-SystemInformationList-LCR-r4 PRACH-SystemInformationList-LCR-r4 OPTIONAL,
    tdd128SpecificInfo
                                   SEQUENCE {
       pusch-SysInfoList-SFN
                                      PUSCH-SysInfoList-SFN-LCR-r4
                                                                        OPTIONAL,
                                                                     OPTIONAL,
        pdsch-SysInfoList-SFN
                                        PDSCH-SysInfoList-SFN-LCR-r4
        pCCPCH-LCR-Extensions
                                       PrimaryCCPCH-Info-LCR-r4-ext
                                                                       OPTIONAL.
        sCCPCH-LCR-ExtensionsList
                                     SCCPCH-SystemInformationList-LCR-r4-ext OPTIONAL
                                                                   OPTIONAL,
    frequencyBandIndicator
                                  RadioFrequencyBandFDD
                                                                    OPTIONAL
}
SysInfoType6-v590ext-IEs ::= SEQUENCE {
   hcr-r5-SpecificInfo SEQUENCE {
       pusch-SysInfoList-SFN
                                       PUSCH-SysInfoList-SFN-HCR-r5
                                                                        OPTIONAL,
```

```
pdsch-SysInfoList-SFN
                                         PDSCH-SysInfoList-SFN-HCR-r5
                                                                              OPTIONAL
    }
                                                                               OPTIONAL
}
SysInfoType6-v650ext-IEs ::= SEQUENCE {
   frequencyBandIndicator2 RadioFrequencyBandFDD2
SysInfoType6-v690ext-IEs ::= SEQUENCE {
    additionalPRACH-TF-and-TFCS-CCCH-List AdditionalPRACH-TF-and-TFCS-CCCH-List
SysInfoType6-v7xyext-IEs::= SEQUENCE {
   pusch-SysInfoList-SFN-VHCR PUSCH-SysInfoList-SFN-VHCR OPTIONAL,
   pdsch-SysInfoList-SFN-r7 PDSCH-SysInfoList-r7 OPTIONAL,
   prach-SystemInformationList-r7 PRACH-SystemInformationList-r7 OPTIONAL,
   sCCPCH-SystemInformationList-r7 OPTIONAL
}
SysInfoType7 ::=
                                      SEQUENCE {
    -- Physical channel IEs
        modeSpecificInfo
                                           CHOICE {
                                            SEQUENCE {
            fdd
               ul-Interference
                                                    UL-Interference
             },
                                                NULL
             tdd
        prach-Information-SIB5-List DynamicPersistenceLevelList, prach-Information-SIB6-List DynamicPersistenceLevelList
                                                                                 OPTIONAL,
                                           ExpirationTimeFactor
         expirationTimeFactor
                                                                                   OPTIONAL.
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions
                                          SEQUENCE {}
                                                                                  OPTIONAL
}
-- This IE is not used in this version of the specification.
-- It was kept only for backwards compatibility reasons
SysInfoType8 ::=
                                      SEQUENCE {
    -- User equipment IEs
        -- dummy1, dummy2, dummy3 are not used in this version of the specification and
         -- they should be ignored by the receiver.
                                           CPCH-Parameters,
    -- Physical channel IEs
                                           CPCH-SetInfoList,
        dummy2
        dummy3
                                           CSICH-PowerOffset,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions
                                           SEQUENCE {}
                                                                                  OPTIONAL
}
-- This IE is not used in this version of the specification.
-- It was kept only for backwards compatibility reasons
                                       SEQUENCE {
SysInfoType9 ::=
    -- Physical channel IEs
        -- dummy is not used in this version of the specification and
        -- it should be ignored by the receiver.
                                           CPCH-PersistenceLevelsList,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions
                                           SEQUENCE {}
                                                                                  OPTIONAL
}
-- This IE is not used in this version of the specification.
-- It was kept only for backwards compatibility reasons
SysInfoType10 ::=
                                      SEQUENCE {
    -- User equipment IEs
         -- dummy is not used in this version of the specification, it should
         -- not be sent and if received it should be ignored.
                                           DRAC-SysInfoList,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions
                                           SEQUENCE {}
                                                                                   OPTIONAL
}
SysInfoType11 ::=
                                     SEQUENCE {
                            BOOLEAN,
        sib12indicator
    -- Measurement IEs
        fach-MeasurementOccasionInfo FACH-MeasurementOccasionInfo measurementControlSysInfo MeasurementControlSysInfo,
                                                                                 OPTIONAL.
    -- Extension mechanism for non- release99 information
        v4b0NonCriticalExtensions SEQUENCE {
   sysInfoType11-v4b0ext SysInf
                                               SysInfoType11-v4b0ext-IEs
                                                                                  OPTIONAL,
```

```
v590NonCriticalExtension
                                            SEQUENCE {
                sysInfoType11-v590ext
                                                SysInfoType11-v590ext-IEs,
                v690NonCriticalExtensions
                                                    SEQUENCE {
                                                    SysInfoType11-v690ext-IEs,
                    sysInfoType11-v690ext
                    {\tt nonCriticalExtensions}
                                                    SEQUENCE {}
                                                                                     OPTIONAL
                                            OPTIONAL
            }
                                        OPTIONAL
        }
                                    OPTIONAL
}
SysInfoType11-v4b0ext-IEs ::= SEQUENCE {
    fach-MeasurementOccasionInfo-LCR-Ext
                                             FACH-MeasurementOccasionInfo-LCR-r4-ext OPTIONAL.
    {\tt measurementControlSysInfo-LCR}
                                            MeasurementControlSysInfo-LCR-r4-ext
SysInfoType11-v590ext-IEs ::= SEQUENCE {
    --The order of the list corresponds to the order of cell in newIntraFrequencyCellInfoList
    newIntraFrequencyCellInfoList-v590ext
                                            SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                CellSelectReselectInfo-v590ext OPTIONAL,
    --The order of the list corresponds to the order of cell in newInterFrequencyCellInfoList
   newInterFrequencyCellInfoList-v590ext SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                 CellSelectReselectInfo-v590ext OPTIONAL,
    --The order of the list corresponds to the order of cell in newInterRATCellInfoList
   newInterRATCellInfoList-v590ext
                                            SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                CellSelectReselectInfo-v590ext OPTIONAL,
    intraFreqEventCriteriaList-v590ext
                                            Intra-FreqEventCriteriaList-v590ext OPTIONAL,
    intraFreqReportingCriteria-1b-r5
                                            IntraFreqReportingCriteria-1b-r5 OPTIONAL,
    intraFreqEvent-1d-r5
                                            IntraFreqEvent-1d-r5
                                                                                 OPTIONAL
}
SysInfoType11-v690ext-IEs ::= SEQUENCE {
    -- Measurement IEs
    interFreqRACHReportingInfo
                                                                            OPTIONAL
                                        InterFreqRACHReportingInfo
}
SysInfoType12 ::=
                                    SEQUENCE {
    -- Measurement IEs
        fach-MeasurementOccasionInfo
                                        FACH-MeasurementOccasionInfo
                                                                             OPTIONAL,
        measurementControlSvsInfo
                                        MeasurementControlSysInfo,
    -- Extension mechanism for non- release99 information
        v590NonCriticalExtension SysInfoType12-v4b0ext SysInfoType12-v4b0ext SysInfoType12-v4b0ext-IEs

v590NonCriticalExtension SEQUENCE {

SysInfoType12-v590ext

v690NonCriticalType12-v590ext
                                                                             OPTIONAL.
                                                 SysInfoType12-v590ext-IEs,
                v690NonCriticalExtensions
                                                     SEQUENCE {
                    sysInfoType12-v690ext
                                                     SysInfoType12-v690ext-IEs,
                                                                                     OPTIONAL
                    nonCriticalExtensions
                                                     SEOUENCE {}
                                            OPTIONAL
                                        OPTIONAL
            }
        }
                                    OPTIONAL
}
SysInfoType12-v4b0ext-IEs ::= SEQUENCE {
    fach-MeasurementOccasionInfo-LCR-Ext
                                             FACH-MeasurementOccasionInfo-LCR-r4-ext OPTIONAL,
                                            MeasurementControlSysInfo-LCR-r4-ext
    measurementControlSysInfo-LCR
}
SysInfoType12-v590ext-IEs ::= SEQUENCE {
    -- The order of the list corresponds to the order of cell in newIntraFrequencyCellInfoList
   newIntraFrequencyCellInfoList-v590ext SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                CellSelectReselectInfo-v590ext OPTIONAL,
    --The order of the list corresponds to the order of cell in newInterFrequencyCellInfoList
   newInterFrequencyCellInfoList-v590ext SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                CellSelectReselectInfo-v590ext OPTIONAL,
    --The order of the list corresponds to the order of cell in newInterRATCellInfoList
    newInterRATCellInfoList-v590ext
                                            SEQUENCE (SIZE (1..maxCellMeas)) OF
                                                CellSelectReselectInfo-v590ext OPTIONAL,
    intraFreqEventCriteriaList-v590ext
                                             Intra-FreqEventCriteriaList-v590ext
                                                                                     OPTIONAL,
                                                                                 OPTIONAL,
    intraFreqReportingCriteria-1b-r5
                                            IntraFreqReportingCriteria-1b-r5
    intraFreqEvent-1d-r5
                                             IntraFreqEvent-1d-r5
                                                                                 OPTIONAL
SysInfoType12-v690ext-IEs ::= SEQUENCE {
    -- Measurement IEs
    interFreqRACHReportingInfo
                                        InterFreqRACHReportingInfo
                                                                           OPTIONAL
                                    SEQUENCE {
SysInfoType13 ::=
```

```
-- Core network IEs
       cn-DomainSysInfoList
                                    CN-DomainSysInfoList,
   -- User equipment IEs

    ue-IdleTimersAndConstants
    UE-IdleTimersAndConstants

    capabilityUpdateRequirement
    CapabilityUpdateRequirement

                                                                       OPTIONAL,
       ue-IdleTimersAndConstants
                                                                         OPTIONAL,
   -- Extension mechanism for non- release99 information
       v3a0NonCriticalExtensions SEQUENCE {
    sysInfoType13-v3a0ext
    SysInfoType13-v3a0ext-IEs,
           v4b0NonCriticalExtensions SEQUENCE {
    sysInfoType13-v4b0ext SysInf
    Extension machini
                                             SysInfoType13-v4b0ext-IEs,
           -- Extension mechanism for non- release99 information
               OPTIONAL
           }
                                    OPTIONAL
       }
                                 OPTIONAL
}
SysInfoType13-v3a0ext-IEs ::= SEQUENCE {
                                          UE-IdleTimersAndConstants-v3a0ext
   ue-IdleTimersAndConstants-v3a0ext
SysInfoType13-v4b0ext-IEs ::= SEQUENCE {
   capabilityUpdateRequirement-r4Ext CapabilityUpdateRequirement-r4-ext OPTIONAL
SysInfoType13-v7xyext-IEs ::= SEQUENCE {
   capabilityUpdateRequirement-r7Ext CapabilityUpdateRequirement-r7-ext OPTIONAL
                                 SEQUENCE {
SysInfoType13-1 ::=
   -- ANSI-41 IEs
       ansi-41-RAND-Information
                                     ANSI-41-RAND-Information,
   -- Extension mechanism for non- release99 information
       OPTIONAL
}
SysInfoType13-2 ::=
                                 SEQUENCE {
   -- ANSI-41 IEs
       ansi-41-UserZoneID-Information ANSI-41-UserZoneID-Information,
   -- Extension mechanism for non- release99 information
                                     SEQUENCE {}
       nonCriticalExtensions
                                                                        OPTIONAL
SysInfoType13-3 ::=
                                  SEQUENCE {
   -- ANSI-41 IEs
       ansi-41-PrivateNeighbourListInfo ANSI-41-PrivateNeighbourListInfo,
   -- Extension mechanism for non- release99 information
       nonCriticalExtensions
                                                                        OPTIONAL
}
SysInfoType13-4 ::=
                                  SEQUENCE {
   -- ANSI-41 IEs
       ansi-41-GlobalServiceRedirectInfo
                                      ANSI-41-GlobalServiceRedirectInfo,
   -- Extension mechanism for non- release99 information
      nonCriticalExtensions
                                     SEQUENCE {}
                                                                         OPTIONAL
}
   -- Physical channel IEs
SysInfoType14 ::=
       individualTS-InterferenceList IndividualTS-InterferenceList,
                                      ExpirationTimeFactor
                                                                         OPTIONAL,
       expirationTimeFactor
   -- Extension mechanism for non- release99 information
      nonCriticalExtensions
                                     SEQUENCE {}
                                                                         OPTIONAL
}
                                 SEQUENCE {
SysInfoType15 ::=
    -- Measurement IEs
       ue-positioning-GPS-CipherParameters
                                              UE-Positioning-CipherParameters OPTIONAL,
       ue-positioning-GPS-ReferenceLocation ReferenceLocation,
       ue-positioning-GPS-ReferenceTime
                                            UE-Positioning-GPS-ReferenceTime,
       ue-positioning-GPS-Real-timeIntegrity
                                                BadSatList
                                                                                     OPTIONAL,
    -- Extension mechanism for non- release99 information
       v4b0NonCriticalExtensions
                                          SEOUENCE {
```

```
sysInfoType15-v4b0ext
                                              SysInfoType15-v4b0ext-IEs,
        -- Extension mechanism for non- release4 information
          nonCriticalExtensions
                                              SEQUENCE {}
                                                                    OPTIONAL
       } OPTIONAL
SysInfoType15-v4b0ext-IEs ::= SEQUENCE {
   SysInfoType15-1 ::=
                                  SEQUENCE {
   -- DGPS corrections
       ue-positioning-GPS-DGPS-Corrections
                                                 UE-Positioning-GPS-DGPS-Corrections,
    -- Extension mechanism for non- release99 information
                                      SEQUENCE {}
                                                             OPTIONAL
       nonCriticalExtensions
}
                                 SEQUENCE {
SysInfoType15-2 ::=
   -- Ephemeris and clock corrections
                                      INTEGER (0..604799),
       transmissionTOW
       satID
                                      SatID,
       ephemerisParameter
                                      EphemerisParameter,
   -- Extension mechanism for non- release99 information
       nonCriticalExtensions
                                      SEQUENCE {}
                                                          OPTIONAL
}
SysInfoType15-3 ::=
                                  SEQUENCE {
   InfoType15-3 ::= 5
-- Almanac and other data
    transmissionTOW
                                      INTEGER (0.. 604799),
       transmissionTOW
       ue-positioning-GPS-Almanac
                                                  UE-Positioning-GPS-Almanac
   OPTIONAL,
       ue-positioning-GPS-IonosphericModel
                                                 UE-Positioning-GPS-IonosphericModel
   OPTIONAL,
       ue-positioning-GPS-UTC-Model
                                                  UE-Positioning-GPS-UTC-Model
   OPTIONAL,
                                      BIT STRING (SIZE (1..32)) OPTIONAL,
       satMask
                                      BIT STRING (SIZE (8))
       lsbTOW
                                                                  OPTIONAL,
    -- Extension mechanism for non- release99 information
       OPTIONAL
}
SysInfoType15-4 ::=
                                  SEQUENCE {
    -- Measurement IEs
       ue-positioning-OTDOA-CipherParametersUE-Positioning-CipherParametersue-positioning-OTDOA-AssistanceDataUE-Positioning-OTDOA-AssistanceData,
                                                                                    OPTIONAL,
       v3a0NonCriticalExtensions SEQUENCE {
    sysInfoType15-4-v3a0ext SysInf
                                              SysInfoType15-4-v3a0ext,
        -- Extension mechanism for non- release99 information
           v4b0NonCriticalExtensions SEQUENCE {
   sysInfoType15-4-v4b0ext SysInfoType15-4-v4b0ext,
   nonCriticalExtensions SEQUENCE {} OPTIONAL
              OPTIONAL
       ) OPTIONAL
}
SysInfoType15-4-v3a0ext ::= SEQUENCE {
   sfn-Offset-Validity SFN-Offset-Validity OPTIONAL
}
SysInfoType15-4-v4b0ext ::= SEQUENCE {
  ue-Positioning-OTDOA-AssistanceData-r4ext UE-Positioning-OTDOA-AssistanceData-r4ext OPTIONAL
SysInfoType15-5 ::=
                                 SEQUENCE {
   -- Measurement IEs
       ue-positioning-OTDOA-AssistanceData-UEB UE-Positioning-OTDOA-AssistanceData-UEB,
       v3a0NonCriticalExtensions SEQUENCE {
   sysInfoType15-5-v3a0ext SysInfoType15-5-v3a0ext,
        -- Extension mechanism for non- release99 information
           nonCriticalExtensions
                                              SEQUENCE {}
       } OPTIONAL
}
SysInfoType15-5-v3a0ext ::= SEQUENCE {
   sfn-Offset-Validity SFN-Offset-Validity OPTIONAL
```

```
SEQUENCE {
SysInfoType16 ::=
       -- Radio bearer IEs
              preDefinedRadioConfiguration PreDefRadioConfiguration,
        -- Extension mechanism for non- release99 information
              nonCriticalExtensions
                                                                          SEQUENCE {}
                                                                                                                                               OPTIONAL
}
SysInfoType17 ::=
                                                                   SEQUENCE {
        -- Physical channel IEs
               -- If PDSCH/PUSCH is configured for 1.28Mcps TDD, pusch-SysInfoList and
                -- pdsch-SysInfoList should be absent and the info included in the
               -- tdd128SpecificInfo instead.
               -- If PDSCH/PUSCH is configured for 3.84Mcps TDD in R5, HCR-r5-SpecificInfo should also be
                -- included.
                                                       PUSCH-SysInfoList
PDSCH-SysInfoList
               pusch-SysInfoList
               pdsch-SysInfoList
                                                                                                                                        OPTIONAL.
        -- Extension mechanism for non- release99 information
               v4b0NonCriticalExtensions SEQUENCE {
    sysInfoType17-v4b0ext Sys
                      SysInfoType17-v4b0ext-IEs,
                                                                   OPTIONAL
                       }
                                                                   OPTIONAL
}
SysInfoType17-v4b0ext-IEs ::= SEQUENCE {
       tddl28SpecificInfo SEQUENCE {
   pusch-SysInfoList PUSCH-SysInfoList-LCR-r4 OPTIONAL,
   pdsch-SysInfoList PDSCH-SysInfoList-LCR-r4 OPTIONAL
                                                                                                                                         OPTIONAL
}
SysInfoType17-v590ext-IEs ::= SEQUENCE {
       hcr-r5-SpecificInfo SEQUENCE {
   pusch-SysInfoList PUSCH-SysInfoList-HCR-r5 OPTIONAL,
   pdsch-SysInfoList PDSCH-SysInfoList-HCR-r5 OPTIONAL
                                                                    PDSCH-SysInfoList-HCR-r5
                                                                                                                          OPTIONAL
}
}
               idleModePLMNIdentities SEQUENCE {
connectedModePLMNIdentities
SysInfoType18 ::=
               idleModePLMNIdentities PLMNIdentitiesOfNeighbourCells OPTIONAL, connectedModePLMNIdentities PLMNIdentitiesOfNeighbourCells OPTIONAL,
        -- Extension mechanism for non- release99 information
              }
                                                                  SEQUENCE {
SysInfoTypeSB1 ::=
      -- Other IEs
               sib-ReferenceList
                                                                           SIB-ReferenceList,
        -- Extension mechanism for non- release99 information
                                                                           SEQUENCE {}
              nonCriticalExtensions
                                                                                                                                                OPTIONAL
}
                                                                 SEQUENCE {
SysInfoTypeSB2 ::=
       -- Other IEs
               sib-ReferenceList
                                                                          SIB-ReferenceList,
        -- Extension mechanism for non- release99 information
              OPTIONAL
}
TDD-UMTS-Frequency-List ::=
                                                                           SEQUENCE (SIZE (1..maxNumTDDFreqs)) OF
                                                                                    FrequencyInfoTDD
__ ***************
             ANSI-41 INFORMATION ELEMENTS (10.3.9)
```

```
Min-P-REV ::=
                                    BIT STRING (SIZE (8))
NAS-SystemInformationANSI-41 ::=
                                    ANSI-41-NAS-Parameter
NID ::=
                                    BIT STRING (SIZE (16))
P-REV ::=
                                    BIT STRING (SIZE (8))
                                    BIT STRING (SIZE (15))
__ ***************
      MBMS INFORMATION ELEMENTS (10.3.9a)
MBMS-AccessProbabilityFactor ::=
                                 ENUMERATED {
                                     apf0, apf32, apf64, apf96, apf128, apf160, apf192,
                                     apf224, apf256, apf288, apf320, apf352, apf384, apf416,
                                     apf448, apf480, apf512, apf544, apf576, apf608, apf640,
                                     apf672, apf704, apf736, apf768, apf800, apf832, apf864,
                                     apf896, apf928, apf960, apf1000 }
MBMS-CellGroupIdentity-r6 ::=
                                BIT STRING (SIZE (12))
MBMS-CommonCCTrChIdentity ::=
                                INTEGER (1..32)
MBMS-CommonPhyChIdentity ::=
                                INTEGER (1..32)
MBMS-CommonRBIdentity ::=
                                INTEGER (1..32)
MBMS-CommonRBInformation-r6 ::=
                                 SEOUENCE {
   commonRBIdentity
                                    MBMS-CommonRBIdentity,
   pdcp-Info
                                     PDCP-Info-r4,
   rlc-Info
                                    RLC-Info-MTCH-r6
}
MBMS-CommonRBInformationList-r6 ::= SEQUENCE (SIZE (1..maxMBMS-CommonRB)) OF
                                    MBMS-CommonRBInformation-r6
MBMS-CommonTrChIdentity ::=
                                INTEGER (1..32)
MBMS-ConnectedModeCountingScope ::= SEQUENCE {
  countingForUraPCH
                                               BOOLEAN,
                                                BOOLEAN,
   countingForCellPCH
                                                BOOLEAN
   countingForCellFACH
}
MBMS-SCCPCHIdentity OPTIONAL,
MBMS-CommonPhyChIdentity,
MBMS-SoftComb-TimingOffset OPTIONAL,
   sccpchIdentity
   secondaryCCPCH-Info
   softComb-TimingOffset
   -- If the IE transpCh-InfoCommonForAllTrCh is absent, the default TFCS as specified
   -- in 14.10.1 applies
   transpCh-InfoCommonForAllTrCh

MBMS-CommonCCTrChIdentity
                                                                     OPTIONAL,
   transpCHInformation
                                    MBMS-TrCHInformation-CurrList
}
MBMS-CurrentCell-SCCPCHList-r6 ::= SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                    MBMS-CurrentCell-SCCPCH-r6
MBMS-FACHCarryingMTCH-List ::=
                               SEQUENCE (SIZE (1..maxFACHPCH)) OF
                                        TransportFormatSet
MBMS-JoinedInformation-r6 ::= SEQUENCE {
                                    P-TMSI-GSM-MAP
   p-TMSI
                                                                     OPTIONAL
MBMS-L1CombiningSchedule-32 ::= SEQUENCE {
   -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
                          INTEGER (0..7)
   cycleOffset
                                                                     OPTIONAL
   mtch-L1CombiningPeriodList
                                    SEQUENCE (SIZE (1..maxMBMS-L1CP)) OF SEQUENCE {
```

```
periodStart
                                             INTEGER (0..7),
        periodDuration
                                              INTEGER (1..8)
    }
}
MBMS-L1CombiningSchedule-64 ::= SEQUENCE {
    -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
                                          INTEGER (0..15)
                                                                                OPTIONAL
    cycleOffset
    cycleOffset
mtch-LlCombiningPeriodList
   periodStart
                                          SEQUENCE (SIZE (1..maxMBMS-L1CP)) OF SEQUENCE {
       periodStart
                                           INTEGER (0..15),
                                              INTEGER (1..16)
        periodDuration
}
MBMS-L1CombiningSchedule-128 ::= SEQUENCE {
   -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
    mtch-LlCombiningPeriodList SEQUENCE (SIZE (periodStart
                                                                                OPTIONAL.
                                          SEQUENCE (SIZE (1..maxMBMS-L1CP)) OF SEQUENCE {
                                           INTEGER (0..31),
        periodDuration
                                              INTEGER (1..32)
}
MBMS-L1CombiningSchedule-256 ::= SEQUENCE {
    -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
    cycleOffset INTEGER (0..63) OPTIONAL,
mtch-LlCombiningPeriodList SEQUENCE (SIZE (1..maxMBMS-LlCP)) OF SEQUENCE {
      periodStart
                                              INTEGER (0..63),
        periodDuration
                                              INTEGER (1..64)
}
MBMS-L1CombiningSchedule-512 ::= SEQUENCE {
    -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
   mtch-LlCombiningPeriodList periodStart periodDuration INTEGER (0..127)

TOTAL COLLSET, Start, INTEGER (0..127)

SEQUENCE (SIZE (1.. INTEGER (0..127)
                                                                                     OPTIONAL.
                                          SEQUENCE (SIZE (1..maxMBMS-L1CP)) OF SEQUENCE {
                                              INTEGER (0..127),
                                              INTEGER (1..128)
}
MBMS-L1CombiningSchedule-1024 ::= SEQUENCE {
    -- Actual L1 combining schedule values (offset, start, duration) = IE value * 4
    mtch-L1CombiningPeriodList
periodStart
periodDuration
    cycleOffset
                                          INTEGER (0..255)
                                                                                     OPTIONAL,
                                          SEQUENCE (SIZE (1..maxMBMS-L1CP)) OF SEQUENCE {
                                              INTEGER (0..255),
                                              INTEGER (1..256)
        periodDuration
    }
}
{\tt MBMS-L1CombiningSchedule ::= CHOICE } \{
   S-L1Combiningson
                                      MBMS-L1CombiningSchedule-32,
    cycleLength-64
                                          MBMS-L1CombiningSchedule-64,
    cycleLength-128
                                          MBMS-L1CombiningSchedule-128,
                                         MBMS-L1CombiningSchedule-256,
    cycleLength-256
                                          MBMS-L1CombiningSchedule-512,
    cycleLength-512
    cycleLength-1024
                                          MBMS-L1CombiningSchedule-1024
}
MBMS-L1CombiningTransmTimeDiff ::= INTEGER (0..3)
MBMS-L23Configuration ::=
                                    CHOICE {
       current SEQUENCE {
currentCell-SCCPCH MBMS-SC
msch-ConfigurationInfo MBMS-MS
ferent
                                         MBMS-SCCPCHIdentity,
   sameAsCurrent
                                              MBMS-MSCH-ConfigurationInfo-r6 OPTIONAL
                                         SEQUENCE {
    different
       -- If the IE transpCh-InfoCommonForAllTrCh is absent, the default TFCS as specified
        -- in 14.10.1 applies
transpCh-InfoCommonForAllTrCh
MBMS-CommonCCTrChIdentity
MBMS-TrCHInformation-Neigh
                                                                                     OPTIONAL.
                                              MBMS-TrCHInformation-NeighbList
    }
}
MBMS-LogicalChIdentity ::=
                                INTEGER (1..15)
MBMS-MCCH-ConfigurationInfo-r6 ::= SEQUENCE {
    accessInfoPeriodCoefficient
                                         INTEGER (0..3),
```

```
repetitionPeriodCoefficient
                                        INTEGER (0..3),
    modificationPeriodCoefficient
                                         INTEGER (7..10),
   rlc-Info
                                         RLC-Info-MCCH-r6,
    tctf-Presence
                                         MBMS-TCTF-Presence
                                                                             OPTIONAL
                                   SEQUENCE {
MBMS-MICHConfigurationInfo-r6 ::=
                                        MBMS-MICHPowerOffset,
    michPowerOffset
                                         CHOICE {
    {\tt mode}
                                             SEOUENCE {
            channelisationCode256
                                                 ChannelisationCode256,
                                                 MBMS-NI-CountPerFrame,
            ni-CountPerFrame
            sttd-Indicator
                                                 BOOLEAN
        tdd384
                                             SEQUENCE {
            timeslot
                                                 TimeslotNumber,
            midambleShiftAndBurstType
                                                 MidambleShiftAndBurstType,
            channelisationCode
                                                 DL-TS-ChannelisationCode,
                                                 RepPerLengthOffset-MICH
            repetitionPeriodLengthOffset
                                                                             OPTIONAL.
            mbmsNotificationIndLength
                                                 MBMS-MICHNotificationIndLength DEFAULT mn4
        },
        tdd128
                                             SEQUENCE {
            timeslot
                                                 TimeslotNumber-LCR-r4,
            midambleShiftAndBurstType
                                                 MidambleShiftAndBurstType-LCR-r4,
                                                 SEQUENCE (SIZE (1..2)) OF
            channelisationCodeList
                                                    DL-TS-ChannelisationCode,
            repetitionPeriodLengthOffset
                                                 RepPerLengthOffset-MICH
                                                                             OPTIONAL,
            mbmsNotificationIndLength
                                                 MBMS-MICHNotificationIndLength DEFAULT mn4
        }
    }
}
MBMS-MICHConfigurationInfo-r7 ::=
                                    SEQUENCE {
                                         MBMS-MICHPowerOffset,
    michPowerOffset
    mode
                                         CHOICE {
        fdd
                                             SEOUENCE {
            channelisationCode256
                                                 ChannelisationCode256,
            ni-CountPerFrame
                                                 MBMS-NI-CountPerFrame,
            sttd-Indicator
                                                 BOOLEAN
        tdd384
                                             SEQUENCE {
            timeslot
                                                 TimeslotNumber.
                                                 MidambleShiftAndBurstType,
            midambleShiftAndBurstType
            {\tt channelisationCode}
                                                 DL-TS-ChannelisationCode,
                                                 RepPerLengthOffset-MICH
            {\tt repetitionPeriodLengthOffset}
                                                                             OPTIONAL,
            mbmsNotificationIndLength
                                                 MBMS-MICHNotificationIndLength DEFAULT mn4
        },
        tdd768
                                             SEQUENCE {
            timeslot
                                                 TimeslotNumber,
            midambleShiftAndBurstType
                                                 MidambleShiftAndBurstType-VHCR,
                                                 DL-TS-ChannelisationCode,
            channelisationCode
            repetitionPeriodLengthOffset
                                                 RepPerLengthOffset-MICH
                                                                             OPTIONAL.
            {\tt mbmsNotificationIndLength}
                                                 MBMS-MICHNotificationIndLength DEFAULT mn4
        tdd128
                                             SEQUENCE {
                                                 TimeslotNumber-LCR-r4,
            timeslot
            {\tt midambleShiftAndBurstType}
                                                 MidambleShiftAndBurstType-LCR-r4,
            channelisationCodeList
                                                 SEQUENCE (SIZE (1..2)) OF
                                                     DL-TS-ChannelisationCode,
            repetitionPeriodLengthOffset
                                                 RepPerLengthOffset-MTCH
                                                                            OPTIONAL
            mbmsNotificationIndLength
                                                 MBMS-MICHNotificationIndLength DEFAULT mn4
    }
}
MBMS-MICHNotificationIndLength ::= ENUMERATED { mn4, mn8, mn16 }
MBMS-MICHPowerOffset ::=
                                    INTEGER (-10..5)
MBMS-ModifedService-r6 ::=
                                     SEQUENCE {
    mbms-TransmissionIdentity
                                        MBMS-TransmissionIdentity,
    mbms-RequiredUEAction
                                         MBMS-RequiredUEAction-Mod,
    mbms-PreferredFrequency
                                        CHOICE {
                                            MBMS-PFLIndex,
        mcch
        dcch
                                            MBMS-PFLInfo
            OPTIONAL,
                                        ENUMERATED { true }
    mbms-DispersionIndicator
                                                                            OPTIONAL.
    continueMCCHReading
                                         BOOLEAN
```

```
}
MBMS-ModifedServiceList-r6 ::= SEQUENCE (SIZE (1..maxMBMSservModif)) OF
                                               MBMS-ModifedService-r6
MBMS-MSCH-ConfigurationInfo-r6 ::= SEQUENCE {
    mschShedulingInfo
                                               MBMS-MSCHSchedulingInfo
                                                                                          OPTIONAL.
                                               RLC-Info-MSCH-r6
                                                                                          OPTIONAL,
    rlc-Info
    tctf-Presence
                                               MBMS-TCTF-Presence
                                                                                          OPTIONAL
    S-MSCHSchedulingInfo ::= CHOICE {
schedulingPeriod-32-Offset INTEGER (0..31),
schedulingPeriod-64-Offset INTEGER (0..63),
schedulingPeriod-128-Offset INTEGER (0..127),
schedulingPeriod-256-Offset INTEGER (0..255),
schedulingPeriod-512-Offset INTEGER (0..511),
schedulingPeriod-1024-Offset INTEGER (0..1023)
MBMS-MSCHSchedulingInfo ::=
}
MBMS-NeighbouringCellSCCPCH-r6 ::= SEQUENCE {
    MBMS-CommonPhyChIdentity, secondaryCCPCHPwrOffsetDiff MBMS-SCCPCHPwrOffsetDiff layer1Combining
                                                                                         OPTIONAL,
             CHOICE {
SEQUENCE {
softComb-TimingOffset
mbms-L1CombiningT
    layer1Combining
         fdd
             softComb-TimingOffset MBMS-SoftComb-TimingOffset,
mbms-L1CombiningTransmTimeDiff MBMS-L1CombiningTransmTimeDiff,
mbms-L1CombiningSchedule OPTIONAL
                                                  NULL
             OPTIONAL.
    , OFITONAL, mbms-L23Configuration
                                             MBMS-L23Configuration
}
MBMS-NeighbouringCellSCCPCHList-r6 ::= SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                               MBMS-NeighbouringCellSCCPCH-r6
                                          ENUMERATED { ni18, ni36, ni72, ni144 }
MBMS-NI-CountPerFrame ::=
MBMS-NumberOfNeighbourCells-r6 ::=
                                              INTEGER (0..32)
MBMS-PFLIndex ::=
                                           INTEGER (1..maxMBMS-Freq)
MBMS-PFLInfo ::=
                                           FrequencyInfo
MBMS-PhyChInformation-r6 ::=
                                           SEQUENCE {
                                           MBMS-CommonPhyChIdentity,
    mbms-CommonPhyChIdentity
    secondaryCCPCHInfo-MBMS
                                               SecondaryCCPCHInfo-MBMS-r6
MBMS-PhyChInformationList-r6 ::=
                                        SEQUENCE (SIZE (1..maxMBMS-CommonPhyCh)) OF
                                               MBMS-PhyChInformation-r6
MBMS-PL-ServiceRestrictInfo-r6 ::= ENUMERATED { true }
MBMS-PreferredFreqRequest-r6 ::= SEQUENCE {
    preferredFreqRequest
                                               FrequencyInfo
MBMS-PreferredFrequencyInfo-r6 ::= SEQUENCE {
    mbmsPreferredFrequency INTEGER (1..maxMBMS-Freq)
layerConvergenceInformation CHOICE {
   mbms-Qoffset MBMS-Qoffset,
   TAMPEGER (0..maxMBMS-Freq)
                                                                                         OPTIONAL,
         mbms-HCSoffset
                                                   INTEGER (0..7)
    mbms-PL-ServiceRestrictInfo MBMS-PL-ServiceRestrictInfo-r6
                                                                                         OPTIONAL
}
MBMS-PreferredFrequencyList-r6 ::= SEQUENCE (SIZE (1..maxMBMS-Freq)) OF
                                               MBMS-PreferredFrequencyInfo-r6
MBMS-PTMActivationTime-r6 ::=
                                           INTEGER (0..2047)
MBMS-PTM-RBInformation-C ::=
                                           SEOUENCE {
    rbInformation
                                               MBMS-CommonRBIdentity,
    shortTransmissionID
                                               MBMS-ShortTransmissionID,
    logicalChIdentity
                                               MBMS-LogicalChIdentity
```

```
MBMS-PTM-RBInformation-CList ::=
                                 SEQUENCE (SIZE (1..maxRBperTrCh)) OF
                                       MBMS-PTM-RBInformation-C
MBMS-PTM-RBInformation-N ::=
                                   SEQUENCE {
                                    MBMS-ShortTransmissionID,
    shortTransmissionID
    logicalChIdentity
                                       MBMS-LogicalChIdentity,
    layer1-CombiningStatus
                                       BOOLEAN }
MBMS-PTM-RBInformation-NList ::=
                                   SEQUENCE (SIZE (1..maxRBperTrCh)) OF
                                       MBMS-PTM-RBInformation-N
                                   ENUMERATED { q4, q8, q12, q16, q20, q30, q40, qInfinity }
MBMS-Ooffset ::=
MBMS-RequiredUEAction-Mod ::=
                                   ENUMERATED {
                                       none,
                                        acquireCountingInfo,
                                       acquireCountingInfoPTM-RBsUnmodified,
                                       acquirePTM-RBInfo,
                                        requestPTPRB,
                                        releasePTM-RB }
                                   ENUMERATED {
MBMS-RequiredUEAction-UMod ::=
                                       none,
                                        acquirePTM-RBInfo,
                                        requestPTPRB }
MBMS-SCCPCHIdentity ::=
                                   INTEGER (1..maxSCCPCH)
MBMS-SCCPCHPwrOffsetDiff ::=
                                   ENUMERATED { mcpo-minus6, mcpo-minus3, mcpo-plus3, mcpo-plus6 }
MBMS-ServiceAccessInfo-r6 ::=
                                       MBMS-ShortTransmissionID,
   shortTransmissionID
    accessprobabilityFactor-Idle
    accessprobabilityFactor-UraPCH
                                       MBMS-AccessProbabilityFactor,
                                       MBMS-AccessProbabilityFactor
                                                                          OPTIONAL,
   mbms-ConnectedModeCountingScope
                                       MBMS-ConnectedModeCountingScope
}
MBMS-ServiceAccessInfoList-r6 ::= SEQUENCE (SIZE (1..maxMBMSservCount)) OF
                                       MBMS-ServiceAccessInfo-r6
MBMS-ServiceIdentity-r6 ::=
                                   SEQUENCE {
    serviceIdentity
                                       OCTET STRING (SIZE (3)),
    plmn-Identity
                                       CHOICE {
        -- The 'sameAsMIB-PLMN-Id' choice refers to the 'PLMN Identity' (R99) in MIB.
        sameAsMIB-PLMN-Id
                                           NULL,
                                           CHOICE {
        other
           -- The 'sameAsMIB-MultiPLMN-Id' choice refers to one of the (1..5) PLMN Identities
           -- provided in the 'Multiple PLMN List' (REL-6) in MIB.
           sameAsMIB-MultiPLMN-Id INTEGER (1..5),
           explicitPLMN-Id
                                               PLMN-Identity
        }
    }
mbms-TransmissionIdentity MBMS-TransmissionIdentity, mbms-ServiceTransmInfoList MBMS-ServiceTransmInfoList
                                      MBMS-ServiceTransmInfoList
                                                                          OPTIONAL,
   {\tt nextSchedulingperiod}
                                       INTEGER (0..31)
}
MBMS-ServiceSchedulingInfoList-r6 ::= SEQUENCE (SIZE (1..maxMBMSservSched)) OF
                                       MBMS-ServiceSchedulingInfo-r6
MBMS-ServiceTransmInfo ::=
                                   SEOUENCE {
    -- Actual values (start, duration) = IE values * 4
    start
                                        INTEGER (0..255),
                                       INTEGER (1..256)
    duration
}
MBMS-ServiceTransmInfoList ::=
                                   SEQUENCE (SIZE (1..maxMBMSTransmis)) OF
                                       MBMS-ServiceTransmInfo
MBMS-SessionIdentity ::=
                                   OCTET STRING (SIZE (1))
                                   INTEGER (1..maxMBMSservUnmodif)
MBMS-ShortTransmissionID ::=
                                   SEQUENCE {
MBMS-SIBType5-SCCPCH-r6 ::=
```

END

```
sccpchIdentity
                                        MBMS-SCCPCHIdentity,
    transpCHInformation
                                        MBMS-TrCHInformation-SIB5List
}
MBMS-SIBType5-SCCPCHList-r6 ::=
                                    SEQUENCE (SIZE (1..maxSCCPCH)) OF
                                        MBMS-SIBType5-SCCPCH-r6
                                    ENUMERATED { ms0, ms10, ms20, ms40 }
MBMS-SoftComb-TimingOffset ::=
MBMS-TCTF-Presence ::=
                                    ENUMERATED { false }
                                    SEQUENCE {
MBMS-TimersAndCounters-r6 ::=
    t-318
                                                                             DEFAULT ms1000
                                        T-318
                                    SEQUENCE {
MBMS-TransmissionIdentity ::=
    mbms-ServiceIdentity
                                        MBMS-ServiceIdentity-r6,
    mbms-SessionIdentity
                                        MBMS-SessionIdentity
                                                                             OPTIONAL
}
MBMS-TranspChInfoForCCTrCh-r6 ::= SEQUENCE {
    {\tt commonCCTrChIdentity}
                                        MBMS-CommonCCTrChIdentity,
    {\tt transportFormatCombinationSet}
                                        TFCS
}
MBMS-TranspChInfoForEachCCTrCh-r6 ::= SEQUENCE (SIZE (1..maxMBMS-CommonCCTrCh)) OF
                                        MBMS-TranspChInfoForCCTrCh-r6
MBMS-TranspChInfoForEachTrCh-r6 ::= SEQUENCE (SIZE (1..maxMBMS-CommonTrCh)) OF
                                        MBMS-TranspChInfoForTrCh-r6
MBMS-TranspChInfoForTrCh-r6 ::=
                                    SEQUENCE {
                                        MBMS-CommonTrChIdentity,
    commonTrChIdentity
    transportFormatSet
                                        TransportFormatSet
                                    SEQUENCE {
MBMS-TrCHInformation-Curr ::=
    transpCh-Info
                                        MBMS-CommonTrChIdentity,
    rbInformation
                                        MBMS-PTM-RBInformation-CList
                                                                             OPTIONAL,
   msch-ConfigurationInfo
                                        MBMS-MSCH-ConfigurationInfo-r6
                                                                             OPTIONAL
}
MBMS-TrCHInformation-CurrList ::=
                                    SEQUENCE (SIZE (1..maxFACHPCH)) OF
                                        MBMS-TrCHInformation-Curr
MBMS-TrCHInformation-Neighb ::=
                                    SEQUENCE {
    transpCh-Info
                                       MBMS-CommonTrChIdentity,
    transpCh-CombiningStatus
                                        BOOLEAN,
   rbInformation
                                        MBMS-PTM-RBInformation-NList
                                                                             OPTIONAL,
                                        MBMS-MSCH-ConfigurationInfo-r6
   msch-ConfigurationInfo
                                                                             OPTIONAL
MBMS-TrcHInformation-NeighbList ::= SEQUENCE (SIZE (1..maxFACHPCH)) OF
                                        MBMS-TrCHInformation-Neighb
MBMS-TrCHInformation-SIB5 ::=
                                    SEQUENCE {
    transpCh-Identity
                                       INTEGER (1..maxFACHPCH),
    rbInformation
                                        MBMS-PTM-RBInformation-CList
                                                                             OPTIONAL,
   msch-ConfigurationInfo
                                        MBMS-MSCH-ConfigurationInfo-r6
                                                                            OPTIONAL
MBMS-TrCHInformation-SIB5List ::=
                                    SEQUENCE (SIZE (1..maxFACHPCH)) OF
                                        MBMS-TrCHInformation-SIB5
MBMS-UnmodifiedService-r6 ::=
                                    SEQUENCE {
    mbms-TransmissionIdentity
                                        MBMS-TransmissionIdentity,
    mbms-RequiredUEAction
                                        MBMS-RequiredUEAction-UMod,
    mbms-PreferredFrequency
                                        MBMS-PFLIndex
                                                                             OPTIONAL
}
MBMS-UnmodifiedServiceList-r6 ::=
                                    SEQUENCE (SIZE (1..maxMBMSservUnmodif)) OF
                                        MBMS-UnmodifiedService-r6
```

11.4 Constant definitions

Constant-definitions DEFINITIONS AUTOMATIC TAGS ::=

```
BEGIN
```

```
hiPDSCHidentities
hiPUSCHidentities
                                                                      INTEGER ::= 64
                                                                       INTEGER ::= 64
                                                                           INTEGER ::= 256
                                                                         INTEGER ::= 16
  maxAC
                                                                       INTEGER ::= 4
INTEGER ::= 8
  maxAdditionalMeas
  maxASC
  maxASCmap
                                                                       INTEGER ::= 7
                                                                  INTEGER ::= 6
INTEGER ::= 8
INTEGER ::= 32
INTEGER ::= 31
INTEGER ::= 4
  maxASCpersist
  maxCCTrCH
  maxCellMeas
  maxCellMeas-1
  maxCNdomains
                                                                       INTEGER ::= 16
INTEGER ::= 8
  maxCPCHsets
  maxDPCH-DLchan
 maxDPDCH-UL
maxDPACclasses
maxE-DCHMACdFlow
maxE-DCHMACdFlow-1
                                                                      INTEGER ::= 6
                                                                      INTEGER ::= 8
INTEGER ::= 8
                                                                      INTEGER ::= 7
INTEGER ::= 4
                                                                       INTEGER ::= 8
  maxFACHPCH
 maxGERAN-SI INTEGER ::= 8
maxGSMTargetCells INTEGER ::= 32
maxHProcesses INTEGER ::= 8
maxHSDSCHTBIndex INTEGER ::= 64
maxHSDSCHTBIndex-tdd384 INTEGER ::= 512
maxHSSCCHs

        maxHSDSCHTBIndex-tdd384
        INTEGER
        ::=
        512

        maxHSSCCHS
        INTEGER
        ::=
        4

        maxInterSysMessages
        INTEGER
        ::=
        2

        maxLoCHperRLC
        INTEGER
        ::=
        2

        maxMAC-d-PDUsizes
        INTEGER
        ::=
        32

        maxMBMS-CommonCCTrCh
        INTEGER
        ::=
        32

        maxMBMS-CommonPhyCh
        INTEGER
        ::=
        32

        maxMBMS-CommonTrCh
        INTEGER
        ::=
        32

        maxMBMS-Freq
        INTEGER
        ::=
        4

        maxMBMS-L1CP
        INTEGER
        ::=
        4

        maxMBMSservCount
        INTEGER
        ::=
        8

        maxMBMSservSched
        INTEGER
        ::=
        16

        maxMBMSservUnmodif
        INTEGER
        ::=
        64

        maxMBMSTransmis
        INTEGER
        ::=
        4

        maxMeasEvent
        INTEGER
        ::=
        8

maxMBMSTrans...maxMeasEventINTEGER ... _maxMeasIntervalsINTEGER ... _maxMeasParEventINTEGER ... = 2maxNumCDMA2000FreqsINTEGER ... = 8maxNumGSMFreqRangesINTEGER ... = 32maxNumFDDFreqsINTEGER ... = 8maxNumTDDFreqsINTEGER ... = 8INTEGER ... = 16INTEGER ... = 15
                                                                     INTEGER ::= 15
INTEGER ::= 16
INTEGER ::= 8
  maxOtherRAT-16
 maxOtherRATIOINTEGER...CmaxPagelINTEGER...16maxPCPCH-APsubChINTEGER...12maxPCPCH-CDsigINTEGER...16INTEGER...12
  maxPCPCH-CDsubCh
                                                                       INTEGER ::= 7
  maxPCPCH-SF
                                                                       INTEGER ::= 64
INTEGER ::= 8
  maxPCPCHs
  maxPDCPAlgoType
                                                                        INTEGER ::= 8
  maxPDSCH
  \begin{array}{lll} \text{maxPDSCH-TFCIgroups} & \text{INTEGER} & ::= 256 \\ \text{maxPRACH} & \text{INTEGER} & ::= 16 \end{array}
                                                                       INTEGER ::= 8
  maxPRACH-FPACH
  maxPredefConfig
                                                                       INTEGER ::= 16
INTEGER ::= 8
  maxPUSCH
                                                                           INTEGER ::= 8
  maxOueueIDs
                                                                           INTEGER ::= 16
  maxRABsetup
```

```
maxRAT
                                              INTEGER ::= 16
                                              INTEGER ::= 32
 maxRB
                                             INTEGER ::= 27
maxRBallRABs
 maxRBMuxOptions
                                           INTEGER ::= 8
INTEGER ::= 8
maxRBMuxOptions
maxRBperRAB INTEGER ::= 8
maxRBperTrCh INTEGER ::= 16
maxReportedGSMCells INTEGER ::= 8
INTEGER ::= 8
maxRL-1 INTEGER ::= 0
maxRLCPDUsizePerLogChan INTEGER ::= 32
maxRFC3095-CID INTEGER ::= 16384
maxROHC-PacketSizes-r4 INTEGER ::= 16
maxROHC-Profile-r4 INTEGER ::= 8
maxSat INTEGER ::= 16
                                            INTEGER ::= 16
INTEGER ::= 32
maxSCCPCH
maxSIB-FACH INTEGER ::= 32
maxSIB-FACH INTEGER ::= 8
maxSIBperMsg INTEGER ::= 16
maxSRBsetup INTEGER ::= 8
maxSystemCapability INTEGER ::= 16
maxTF INTEGER ::= 32
maxTF-CPCH INTEGER ::= 16
maxSIB
                                            INTEGER ::= 16
INTEGER ::= 1024
INTEGER ::= 1024
 {\tt maxTFC}
maxTFCsub
                                  INTEGER ::= 512
INTEGER ::= 6
maxTFCI-2-Combs
maxTGPS
                                             INTEGER ::= 32
 maxTrCH
 -- maxTrCHpreconf should be 16 but has been set to 32 for compatibility
maxTrCHpreconf INTEGER ::= 32
                                             INTEGER ::= 14
 maxTS
 maxTS-1
                                              INTEGER ::= 13
                                            INTEGER ::= 12
 \max TS-2
                                            INTEGER ::= 6
INTEGER ::= 5
 maxTS-LCR
maxTS-LCR-1
 maxURA
                                              INTEGER ::= 8
 maxURNTI-Group
                                               INTEGER ::= 8
```

11.5 RRC information between network nodes

```
Internode-definitions DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
TMPORTS
    HandoverToUTRANCommand,
   MeasurementReport,
    PhysicalChannelReconfiguration,
    RadioBearerReconfiguration,
    RadioBearerRelease,
    RadioBearerSetup,
   RRCConnectionSetupComplete-r3-add-ext-IEs,
    RRC-FailureInfo,
    TransportChannelReconfiguration,
    UECapabilityInformation-r3-add-ext-IEs
FROM PDU-definitions
-- Core Network IEs :
    CN-DomainIdentity,
    CN-DomainInformationList,
    CN-DomainInformationListFull,
    CN-DRX-CycleLengthCoefficient,
   NAS-SystemInformationGSM-MAP,
-- UTRAN Mobility IEs :
   CellIdentity,
   URA-Identity,
-- User Equipment IEs :
   AccessStratumReleaseIndicator,
    C-RNTI,
    ChipRateCapability,
    DL-CapabilityWithSimultaneousHS-DSCHConfig,
    DL-PhysChCapabilityFDD-v380ext,
    DL-PhysChCapabilityTDD,
    DL-PhysChCapabilityTDD-LCR-r4,
    GSM-Measurements,
```

```
HSDSCH-physical-layer-category,
   FailureCauseWithProtErr,
   MaxHcContextSpace,
   MaximumAM-EntityNumberRLC-Cap,
   MaximumRLC-WindowSize,
   MaxNoPhysChBitsReceived,
   MaxNoDPDCH-BitsTransmitted,
   MaxPhysChPerFrame,
   MaxPhysChPerSubFrame-r4,
   MaxPhysChPerTS,
   MaxROHC-ContextSessions-r4,
   MaxTS-PerFrame,
   MaxTS-PerSubFrame-r4.
   MinimumSF-DL,
   MultiModeCapability,
   MultiRAT-Capability,
   NetworkAssistedGPS-Supported,
   PhysicalChannelCapability-edch-r6,
   PhysicalChannelCapability-r7,
   RadioFrequencyBandTDDList,
   RF-Capability-r7,
   RLC-Capability,
   RRC-MessageSequenceNumber,
   SecurityCapability,
   SimultaneousSCCPCH-DPCH-Reception,
   STARTList,
   STARTSingle,
   START-Value,
   SupportOfDedicatedPilotsForChEstimation,
   TransportChannelCapability,
   TxRxFrequencySeparation,
   UE-CapabilityContainer-IEs,
   UE-MultiModeRAT-Capability,
   UE-PowerClassExt,
   UE-RadioAccessCapabBandFDDList,
   UE-RadioAccessCapabBandFDDList2,
   UE-RadioAccessCapabBandFDDList-ext,
   UE-RadioAccessCapability,
   UE-RadioAccessCapability-v370ext,
   UE-RadioAccessCapability-v380ext,
   UE-RadioAccessCapability-v3a0ext,
   UE-RadioAccessCapability-v3g0ext,
   UE-RadioAccessCapability-v4b0ext,
   UE-RadioAccessCapability-v590ext,
   UE-RadioAccessCapability-v5c0ext,
   UE-RadioAccessCapability-v7xyext,
   UL-PhysChCapabilityFDD,
   UL-PhysChCapabilityFDD-r6,
   UL-PhysChCapabilityTDD,
   UL-PhysChCapabilityTDD-LCR-r4,
-- Radio Bearer IEs :
   PredefinedConfigStatusList,
   PredefinedConfigValueTag,
   RAB-InformationSetupList,
   RAB-InformationSetupList-r4,
   RAB-InformationSetupList-r5,
   RAB-InformationSetupList-r6-ext,
   RAB-InformationSetupList-r6,
   RB-Identity,
   SRB-InformationSetupList,
   SRB-InformationSetupList-r5,
   SRB-InformationSetupList-r6,
-- Transport Channel IEs :
   CPCH-SetID,
   DL-CommonTransChInfo,
   DL-CommonTransChInfo-r4,
   DL-AddReconfTransChInfoList,
   DL-AddReconfTransChInfoList-r4,
   DL-AddReconfTransChInfoList-r5,
   DRAC-StaticInformationList,
   UL-CommonTransChInfo,
   UL-CommonTransChInfo-r4,
   UL-AddReconfTransChInfoList,
   UL-AddReconfTransChInfoList-r6,
-- Physical Channel IEs :
   PrimaryCPICH-Info,
   TPC-CombinationIndex,
```

```
ScramblingCodeChange,
    TGCFN,
    TGPSI,
   TGPS-ConfigurationParams,
-- Measurement IEs :
   Eventlj-r6,
    Hysteresis.
    Inter-FreqEventCriteriaList-v590ext,
    Intra-FreqEventCriteriaList-v590ext,
    IntraFreqEvent-1d-r5,
    IntraFreqReportingCriteria-1b-r5,
    InterRATCellInfoIndication,
    MeasuredResultsOnRACHinterFreq,
    MeasurementIdentity,
    MeasurementReportingMode,
   MeasurementType,
    {\tt MeasurementType-r4},
    MeasurementType-r6,
    AdditionalMeasurementID-List,
    PositionEstimate,
    ReportingCellStatus,
   TimeToTrigger,
-- MBMS IEs :
   MBMS-JoinedInformation-r6,
-- Other TEs :
    GERANIu-RadioAccessCapability,
    GSM-MS-RadioAccessCapability,
    InterRAT-UE-RadioAccessCapabilityList,
    InterRAT-UE-RadioAccessCapability-v590ext,
    InterRAT-UE-RadioAccessCapability-v690ext,
    UESpecificBehaviourInformationlidle,
    UESpecificBehaviourInformationlinterRAT
FROM InformationElements
    maxCNdomains,
   maxNoOfMeas,
   maxRB,
   maxRBallRABs,
   maxRFC3095-CID,
   maxSRBsetup,
   maxRL,
    maxTGPS
FROM Constant-definitions
-- Part 1: Class definitions similar to what has been defined in 11.1 for RRC messages
-- Information that is tranferred in the same direction and across the same path is grouped
__ ***************
-- RRC information, to target RNC
-- RRC Information to target RNC sent either from source RNC or from another RAT
ToTargetRNC-Container ::= CHOICE {
    interRATHandoverInfo
                                        InterRATHandoverInfoWithInterRATCapabilities-r3,
    srncRelocation
                                        SRNC-RelocationInfo-r3.
                                        RFC3095-ContextInfo-r5,
    rfc3095-ContextInfo
    extension
                                        NULL
}
__ ****************
-- RRC information, target RNC to source RNC
__ ****************
TargetRNC-ToSourceRNC-Container ::= CHOICE {
    radioBearerSetup RadioBearerSetup, radioBearerReconfiguration RadioBearerReconfiguration, radioBearerRelease RadioBearerPelosso
   radioBearerSetup
   radioBearerRelease RadioBearerRelease,
transportChannelReconfiguration
physicalChannelReconfiguration
rrc-FailureInfo RRC-FailureInfo,
```

```
-- IE dl-DCCHmessage consists of an octet string that includes the IE DL-DCCH-Message
   dL-DCCHmessage
                                    OCTET STRING,
   extension
}
-- Part 2: Container definitions, similar to the PDU definitions in 11.2 for RRC messages
-- In alphabetical order
__ ****************
-- Handover to UTRAN information
__ *******************************
InterRATHandoverInfoWithInterRATCapabilities-r3 ::= CHOICE {
                                 SEQUENCE {
       -- IE InterRATHandoverInfoWithInterRATCapabilities-r3-IEs also
       -- includes non critical extensions
       interRATHandoverInfoWithInterRATCapabilities-v390ext
                                    InterRATHandoverInfoWithInterRATCapabilities-v390ext-IEs,
           -- Reserved for future non critical extension
                                       SEQUENCE {
          v690NonCriticalExtensions
              interRATHandoverInfoWithInterRATCapabilities-v690ext
                                  {\tt InterRATHandoverInfoWithInterRATCapabilities-v690ext-IEs,}
              nonCriticalExtensions
                                         SEQUENCE {} OPTIONAL
               OPTIONAL
              OPTIONAL
                                SEQUENCE {}
   criticalExtensions
}
InterRATHandoverInfoWithInterRATCapabilities-r3-IEs ::=
                                                      SEOUENCE {
       -- The order of the IEs may not reflect the tabular format
       -- but has been chosen to simplify the handling of the information in the BSC
   -- Other IEs
                                   InterRAT-UE-RadioAccessCapabilityList OPTIONAL,
       ue-RATSpecificCapability
       -- interRATHandoverInfo, Octet string is used to obtain 8 bit length field prior to
       -- actual information. This makes it possible for BSS to transparently handle information -- received via GSM air interface even when it includes non critical extensions.
       -- The octet string shall include the InterRATHandoverInfo information
       -- The BSS can re-use the 44.018 length field received from the MS
       interRATHandoverInfo
                                   OCTET STRING (SIZE (0..255))
}
InterRATHandoverInfoWithInterRATCapabilities-v390ext-IEs ::= SEQUENCE {
   -- User equipment IEs
      failureCauseWithProtErr
                                      FailureCauseWithProtErr
}
InterRATHandoverInfoWithInterRATCapabilities-v690ext-IEs ::= SEQUENCE {
    - Other IEs
      ue-RATSpecificCapability-v690ext InterRAT-UE-RadioAccessCapability-v690ext OPTIONAL
}
__ ***************************
-- RFC3095 context, source RNC to target RNC
************
RFC3095-ContextInfo-r5 ::= CHOICE {
                                SEQUENCE {
       rFC3095-ContextInfoList-r5
                                   RFC3095-ContextInfoList-r5,
        -- Reserved for future non critical extension
       nonCriticalExtensions
                                   SEQUENCE {} OPTIONAL
                                SEQUENCE {}
   criticalExtensions
}
RFC3095-ContextInfoList-r5 ::=
                               SEQUENCE (SIZE (1..maxRBallRABs)) OF
                                    RFC3095-ContextInfo
__ ****************
```

```
-- SRNC Relocation information
__ ******************
SRNC-RelocationInfo-r3 ::= CHOICE {
                                    SEQUENCE {
                                        SRNC-RelocationInfo-r3-IEs,
        sRNC-RelocationInfo-r3
        v380NonCriticalExtensions
                                            SEOUENCE {
            sRNC-RelocationInfo-v380ext SRNC-RelocationInfo-v380ext-IEs,
             - Reserved for future non critical extension
            v390NonCriticalExtensions
                                              SEQUENCE {
                sRNC-RelocationInfo-v390ext
                                                    SRNC-RelocationInfo-v390ext-IEs,
                v3a0NonCriticalExtensions
                                                    SEQUENCE {
                    sRNC-RelocationInfo-v3a0ext
                                                        SRNC-RelocationInfo-v3a0ext-IEs,
                    v3b0NonCriticalExtensions
                                                        SEQUENCE {
                        sRNC-RelocationInfo-v3b0ext
                                                            SRNC-RelocationInfo-v3b0ext-IEs,
                        v3c0NonCriticalExtensions
                                                            SEQUENCE {
                            sRNC-RelocationInfo-v3c0ext
                                                                SRNC-RelocationInfo-v3c0ext-IEs,
                            laterNonCriticalExtensions
                                                                SEQUENCE {
                                                                    SRNC-RelocationInfo-v3d0ext-IEs,
                                sRNC-RelocationInfo-v3d0ext
                                -- Container for additional R99 extensions
                                sRNC-RelocationInfo-r3-add-ext
                                                                    BIT STRING
                                                (CONTAINING SRNC-RelocationInfo-v3h0ext-IEs)
                                                                                                  OPTIONAL,
                                v3g0NonCriticalExtensions
                                                                    SEQUENCE {
                                    sRNC-RelocationInfo-v3g0ext
                                                                        SRNC-RelocationInfo-v3q0ext-IEs,
                                    v4b0NonCriticalExtensions
                                                                        SEQUENCE {
                                        sRNC-RelocationInfo-v4b0ext
                                                                            SRNC-RelocationInfo-v4b0ext-IEs,
                                        v590NonCriticalExtensions
                                                                            SEQUENCE {
                                            sRNC-RelocationInfo-v590ext
                                                                            SRNC-RelocationInfo-v590ext-IEs,
                                            v5a0NonCriticalExtensions
                                                                                SEQUENCE {
                                                sRNC-RelocationInfo-v5a0ext
                                                                            SRNC-RelocationInfo-v5a0ext-IEs,
                                                v5b0NonCriticalExtensions
                                                                                    SEOUENCE {
                                                    sRNC-RelocationInfo-v5b0ext
                                                                            SRNC-RelocationInfo-v5b0ext-IEs,
                                                    v5c0NonCriticalExtensions
                                                                                        SEQUENCE {
                                                        sRNC-RelocationInfo-v5c0ext
                                                                            SRNC-RelocationInfo-v5c0ext-IEs,
                                                        v690NonCriticalExtensions
                                                                                         SEQUENCE {
                                                            sRNC-RelocationInfo-v690ext
                                                                            SRNC-RelocationInfo-v690ext-IEs,
                                                            {\tt v7xyNonCriticalExtensions} \ {\tt SEQUENCE} \ \{
                                                                {\tt sRNC-RelocationInfo-v7xyext}
                                                                            SRNC-RelocationInfo-v7xyext-IEs,
                                                                 -- Reserved for future non critical extension
                                                                \verb"nonCriticalExtensions" SEQUENCE {} \} \verb" OPTIONAL"
                                                                    OPTIONAL
                                                                OPTIONAL
                                                            OPTIONAL
                                                        OPTIONAL
                                                    OPTIONAL
                                                OPTIONAL
                                            OPTIONAL
                                        OPTIONAL
                                    OPTIONAL
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
            }
                    OPTIONAL.
       }
                OPTIONAL
    later-than-r3
                                    CHOICE {
                                        SEQUENCE {
       r4
                                            SRNC-RelocationInfo-r4-IEs,
            sRNC-RelocationInfo-r4
            v4d0NonCriticalExtensions
                                            SEQUENCE {
                sRNC-RelocationInfo-v4d0ext
                                               SRNC-RelocationInfo-v4d0ext-IEs,
                -- Container for adding non critical extensions after freezing REL-5
                sRNC-RelocationInfo-r4-add-ext
                                                    BIT STRING
                                                                    OPTIONAL,
                v590NonCriticalExtensions
                                                    SEQUENCE {
                    sRNC-RelocationInfo-v590ext
                                                        SRNC-RelocationInfo-v590ext-IEs,
                    v5a0NonCriticalExtensions
                                                        SEQUENCE {
                        sRNC-RelocationInfo-v5a0ext
                                                            SRNC-RelocationInfo-v5a0ext-IEs,
                                                            SEQUENCE {
                        v5b0NonCriticalExtensions
                            sRNC-RelocationInfo-v5b0ext
                                                                SRNC-RelocationInfo-v5b0ext-IEs,
                            v5c0NonCriticalExtensions
                                sRNC-RelocationInfo-v5c0ext
                                                                    SRNC-RelocationInfo-v5c0ext-IEs.
                                v690NonCriticalExtensions
                                                                    SEQUENCE {
```

```
sRNC-RelocationInfo-v690ext
                                                                    SRNC-RelocationInfo-v690ext-IEs,
                                    v7xyNonCriticalExtensions
                                                                        SEQUENCE {
                                        sRNC-RelocationInfo-v7xyext
                                                                    SRNC-RelocationInfo-v7xyext-IEs,
                                            nonCriticalExtensions
                                                                            SEQUENCE {} OPTIONAL
                                        OPTIONAL
                                    OPTIONAL
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
                    OPTIONAL
                OPTIONAL
            }
        criticalExtensions
                                        CHOICE {
                                           SEQUENCE {
                sRNC-RelocationInfo-r5
                                            SRNC-RelocationInfo-r5-IEs,
                sRNC-RelocationInfo-r5-add-ext BIT STRING
                                                                OPTIONAL,
                v5a0NonCriticalExtensions
                                               SEQUENCE {
                    {\tt SRNC-RelocationInfo-v5a0ext} \qquad {\tt SRNC-RelocationInfo-v5a0ext-IEs},
                    v5b0NonCriticalExtensions
                                                   SEQUENCE {
                        sRNC-RelocationInfo-v5b0ext SRNC-RelocationInfo-v5b0ext-IEs,
                        v5c0NonCriticalExtensions
                                                          SEQUENCE {
                            sRNC-RelocationInfo-v5c0ext
                                                                SRNC-RelocationInfo-v5c0ext-IEs,
                            v690NonCriticalExtensions
                                                                SEQUENCE {
                                sRNC-RelocationInfo-v690ext
                                                                   SRNC-RelocationInfo-v690ext-IEs.
                                    v7xyNonCriticalExtensions
                                                                    SEQUENCE {
                                        sRNC-RelocationInfo-v7xyext
                                                                    SRNC-RelocationInfo-v7xyext-IEs,
                                        nonCriticalExtensions
                                                                        SEQUENCE {}
                                                                                      OPTIONAL
                                    OPTIONAL
                                OPTIONAL
                            OPTIONAL
                        OPTIONAL
                    OPTIONAL
                }
            },
            criticalExtensions
                                            CHOICE {
                                            SEQUENCE {
               rб
                                                   SRNC-RelocationInfo-r6-IEs,
                    sRNC-RelocationInfo-r6
                    sRNC-RelocationInfo-r6-add-ext BIT STRING
                                                                   OPTIONAL,
                    v7xyNonCriticalExtensions SEQUENCE {
                        SRNC-RelocationInfo-v7xyext SRNC-RelocationInfo-v7xyext-IEs,
                        nonCriticalExtensions
                                                       SEQUENCE {}
                                                                      OPTIONAL
                        OPTIONAL
                criticalExtensions
                                                    SEQUENCE {}
           }
       }
    }
}
                                   SEQUENCE {
SRNC-RelocationInfo-r3-IEs ::=
    -- Non-RRC TES
       stateOfRRC
                                        StateOfRRC,
                                       StateOfRRC-Procedure,
        stateOfRRC-Procedure
    -- Ciphering related information IEs
    -- If the extension v380 is included use the extension for the ciphering status per CN domain
        cipheringStatus
                                       CipheringStatus,
         -- If ciphering status is started and the IE latestConfiguredCN-Domain should be included,
        -- the IE cn-DomainIdentity (in SRNC-RelocationInfo-v380ext-IEs) shall be used instead.
        calculationTimeForCiphering
                                    CalculationTimeForCiphering
                                                                            OPTIONAL.
        -- The order of occurrence in the IE cipheringInfoPerRB-List is the
        -- same as the RBs in SRB-InformationSetupList in RAB-InformationSetupList.
        -- The signalling RBs are supposed to be listed
        -- first. Only UM and AM RBs that are ciphered are listed here
        cipheringInfoPerRB-List
                                       CipheringInfoPerRB-List
                                                                            OPTIONAL.
        count-C-List
                                        COUNT-C-List
                                                                            OPTIONAL,
        {\tt integrityProtectionStatus}
                                        IntegrityProtectionStatus,
        -- In the IE srb-SpecificIntegrityProtInfo, the first information listed corresponds to
      -- signalling radio bearer RBO and after the order of occurrence is the same as the SRBs in
     -- SRB-InformationSetupList
        -- The target RNC may ignore the IE srb-SpecificIntegrityProtInfo if the
        -- IE integrityProtectionStatus has the value "not started".
        \verb|srb-SpecificIntegrityProtInfo| SRB-SpecificIntegrityProtInfoList|,\\
        \verb|implementationSpecificParams| ImplementationSpecificParams|
                                                                            OPTIONAL.
    -- User equipment IEs
        u-RNTI
                                       U-RNTI,
        C-RNTI
                                        C-RNTI
                                                                            OPTIONAL.
        ue-RadioAccessCapability
                                        UE-RadioAccessCapability,
```

```
ue-Positioning-LastKnownPos
                                      UE-Positioning-LastKnownPos
                                                                           OPTIONAL.
    -- Other IEs
       ue-RATSpecificCapability
                                      InterRAT-UE-RadioAccessCapabilityList OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                           OPTIONAL,
    -- Core network IEs
       \verb| cn-CommonGSM-MAP-NAS-SysInfo| & \verb| NAS-SystemInformationGSM-MAP|, \\
       cn-DomainInformationList
                                      CN-DomainInformationList
                                                                           OPTIONAL.
    -- Measurement IEs
       ongoingMeasRepList
                                       OngoingMeasRepList
                                                                           OPTIONAL,
    -- Radio bearer IEs
       predefinedConfigStatusList
                                      PredefinedConfigStatusList.
       srb-InformationList
                                       SRB-InformationSetupList,
        rab-InformationList
                                       RAB-InformationSetupList
                                                                           OPTIONAL,
    -- Transport channel IEs
       ul-CommonTransChInfo
                                      UL-CommonTransChInfo
                                                                           OPTIONAL,
       ul-TransChInfoList
                                      UL-AddReconfTransChInfoList
                                                                          OPTIONAL,
                                       CHOICE {
                                          SEQUENCE {
               -- dummy and dummy2 are not used in this version of the specification, they should
               \mbox{--} not be sent and if received they should be ignored.
               dummy
                                               CPCH-SetID
                                                                           OPTIONAL.
               dummy2
                                               DRAC-StaticInformationList OPTIONAL
           },
           tdd
                                           NULL
        dl-CommonTransChInfo
                                     DL-CommonTransChInfo
                                                                           OPTIONAL,
       dl-TransChInfoList
                                      DL-AddReconfTransChInfoList
                                                                          OPTIONAL,
    -- Measurement report
       measurementReport
                                      MeasurementReport
                                                                           OPTIONAL
}
SRNC-RelocationInfo-v380ext-IEs ::= SEQUENCE {
    -- Ciphering related information IEs
        -- In the SRNC-RelocationInfo-r3-IEs, the IE 'cn-DomainIdentity' is used to represent the
        -- IE 'Latest configured CN domain' in the tabular.
       cn-DomainIdentity
                                           CN-DomainIdentity,
       cipheringStatusList
                                           CipheringStatusList
}
SRNC-RelocationInfo-v390ext-IEs ::= SEQUENCE {
       cn-DomainInformationList-v390ext CN-DomainInformationList-v390ext
                                                                                   OPTIONAL.
                                                                                   OPTIONAL,
        ue-RadioAccessCapability-v370ext
                                           UE-RadioAccessCapability-v370ext
       ue-RadioAccessCapability-v380ext
                                           UE-RadioAccessCapability-v380ext
                                                                                   OPTIONAL,
        dl-PhysChCapabilityFDD-v380ext
                                           DL-PhysChCapabilityFDD-v380ext,
        failureCauseWithProtErr
                                           FailureCauseWithProtErr
                                                                                   OPTIONAL
}
SRNC-RelocationInfo-v3a0ext-IEs ::= SEQUENCE {
       cipheringInfoForSRB1-v3a0ext CipheringInfoPerRB-List-v3a0ext,
       ue-RadioAccessCapability-v3a0ext
                                           UE-RadioAccessCapability-v3a0ext
                                                                                   OPTIONAL,
        -- cn-domain identity for IE startValueForCiphering-v3a0ext is specified
        -- in subsequent extension (SRNC-RelocationInfo-v3b0ext-IEs)
                                           START-Value
        startValueForCiphering-v3a0ext
}
SRNC-RelocationInfo-v3b0ext-IEs ::= SEQUENCE {
        -- cn-domain identity for IE startValueForCiphering-v3a0ext included in previous extension
                                      CN-DomainIdentity,
        cn-DomainIdentity
        -- the IE startValueForCiphering-v3b0ext contains the start values for each CN Domain. The
        -- value of start indicated by the IE startValueForCiphering-v3a0ext should be set to the
        -- same value as the start-Value for the corresponding cn-DomainIdentity in the IE
        -- startValueForCiphering-v3b0ext
        startValueForCiphering-v3b0ext
                                           STARTList2
                                                                                   OPTIONAL
}
SRNC-RelocationInfo-v3c0ext-IEs ::= SEQUENCE {
        -- IE rb-IdentityForHOMessage includes the identity of the RB used by the source SRNC
        -- to send the message contained in the IE 'TargetRNC-ToSourceRNC-Container'.
        -- Only included if type is 'UE involved'
        rb-IdentityForHOMessage
                                           RB-Identity
}
SRNC-RelocationInfo-v3d0ext-IEs ::= SEQUENCE {
    -- User equipment IEs
        uESpecificBehaviourInformationlidle UESpecificBehaviourInformationlidle
        uESpecificBehaviourInformationlinterRAT UESpecificBehaviourInformationlinterRAT
    OPTIONAL
```

```
}
SRNC-RelocationInfo-v3q0ext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v3g0ext UE-RadioAccessCapability-v3g0ext
                                                                              OPTIONAL
SRNC-RelocationInfo-v3h0ext-IEs ::= SEQUENCE {
       tpc-CombinationInfoList TPC-CombinationInfoList OPTIONAL, nonCriticalExtension SEQUENCE {} OPTIONAL
{\tt SRNC-RelocationInfo-v4d0ext-IEs} \; ::= \; {\tt SEQUENCE} \; \{
       tpc-CombinationInfoList TPC-CombinationInfoList OPTIONAL
TPC-CombinationInfoList ::= SEQUENCE (SIZE (1..maxRL)) OF
       TPC-Combination-Info
STARTList2 ::=
                                 SEQUENCE (SIZE (2..maxCNdomains)) OF
                                     STARTSingle
SRNC-RelocationInfo-v4b0ext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v4b0ext UE-RadioAccessCapability-v4b0ext OPTIONAL
SRNC-RelocationInfo-v590ext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v590ext UE-RadioAccessCapability-v590ext OPTIONAL, ue-RATSpecificCapability-v590ext InterRAT-UE-RadioAccessCapability-v590ext OPTIONAL
}
SRNC-RelocationInfo-v5a0ext-IEs ::= SEQUENCE {
      storedCompressedModeInfo StoredCompressedModeInfo OPTIONAL
}
SRNC-RelocationInfo-v5b0ext-IEs ::= SEQUENCE {
   interRATCellInfoIndication InterRATCellInfoIndication
                                                                      OPTIONAL
SRNC-RelocationInfo-v5c0ext-IEs ::= SEQUENCE {
       ue-RadioAccessCapability-v5c0ext UE-RadioAccessCapability-v5c0ext
                                                                             OPTIONAL
}
SRNC-RelocationInfo-v7xyext-IEs ::= SEQUENCE {
       }
CipheringInfoPerRB-List-v3a0ext ::= SEQUENCE {
       dl-UM-SN
                                     BIT STRING (SIZE (7))
CipheringStatusCNdomain
CipheringStatusCNdomain ::=

cn-DomainIdentity
                                     SEQUENCE {
                                     CN-DomainIdentity,
       cipheringStatus
                                     CipheringStatus
CodeChangeStatusList ::= SEQUENCE (SIZE (1..maxRL)) OF
       CodeChangeStatus
CodeChangeStatus ::= SEQUENCE {
                                      PrimaryCPICH-Info,
       scramblingCodeChange
                                         ScramblingCodeChange
}
StoredCompressedModeInfo ::= SEQUENCE {
      storedTGP-SequenceList StoredTGP-SequenceList, codeChangeStatusList CodeChangeStatusList OPTIONAL
}
StoredTGP-SequenceList ::= SEQUENCE (SIZE (1..maxTGPS)) OF
                                     StoredTGP-Sequence
StoredTGP-Sequence ::= SEQUENCE {
                                  TGPSI,
   current-tgps-Status
                                     CHOICE {
                                         SEQUENCE {
       active
```

```
tgcfn
                                                   TGCFN
                                              NULL
        inactive
    tgps-ConfigurationParams
                                         TGPS-ConfigurationParams
                                                                                OPTIONAL
}
SRNC-RelocationInfo-r4-IEs ::=
                                         SEQUENCE {
    -- Non-RRC IEs
        -- IE rb-IdentityForHOMessage includes the identity of the RB used by the source SRNC
         -- to send the message contained in the IE 'TargetRNC-ToSourceRNC-Container'.
        -- Only included if type is 'UE involved'
        rb-IdentityForHOMessage RB-Identity stateOfRRC StateOfRRC,
                                                                                 OPTIONAL,
        stateOfRRC-Procedure
                                          StateOfRRC-Procedure,
        CipheringStatusList CipheringStatusList-r4,
latestConfiguredCN-Domain CN-DomainIdentity,
calculationTimeForCiphering CalculationTimeForCiphering
count-C-List Count-C-List
cipheringInfoPerRB-List CipheringInfoPerRB-List
Integrity protection and Count-C-List
    -- Ciphering related information IEs
                                                                                 OPTIONAL,
                                                                                 OPTIONAL.
    -- Integrity protection related information IEs
        -- The target RNC may ignore the IE srb-SpecificIntegrityProtInfo if the
        -- IE integrityProtectionStatus has the value "not started".
        srb-SpecificIntegrityProtInfoSRB-SpecificIntegrityProtInfoList,implementationSpecificParamsImplementationSpecificParams
                                                                                 OPTIONAL,
    -- User equipment IEs
        u-RNTI
                                         U-RNTI,
        c-RNTI
        ue-RadioAccessCapability
                                          C-RNTI
                                                                                 OPTIONAL.
                                          UE-RadioAccessCapability-r4,
        ue-RadioAccessCapability-ext UE-RadioAccessCapabBandFDDList ue-Positioning-LastKnownPos UE-Positioning-LastKnownPos
                                                                                 OPTIONAL,
        uESpecificBehaviourInformationlidle UESpecificBehaviourInformationlidle
                                                                                             OPTIONAL.
        uESpecificBehaviourInformationlinterRAT UESpecificBehaviourInformationlinterRAT
    OPTIONAL,
    -- Other IEs
        ue-RATSpecificCapability InterRAT-UE-RadioAccessCapabilityList OPTIONAL,
    -- UTRAN mobility IEs
        ura-Identity
                                         URA-Identity
                                                                                 OPTIONAL,
    -- Core network IEs
        cn-CommonGSM-MAP-NAS-SysInfo NAS-SystemInformationGSM-MAP,
        cn-DomainInformationList
                                       CN-DomainInformationListFull
                                                                                 OPTIONAL.
    -- Measurement IEs
        ongoingMeasRepList
                                          OngoingMeasRepList-r4
                                                                                 OPTIONAL,
    -- Radio bearer IEs
        predefinedConfigStatusList
                                        PredefinedConfigStatusList,
        srb-InformationList
                                          SRB-InformationSetupList,
        rab-InformationList
                                          RAB-InformationSetupList-r4
                                                                                 OPTIONAL,
    -- Transport channel IEs
        ul-CommonTransChInfo
                                          UL-CommonTransChInfo-r4
                                                                                OPTIONAL,
                                          UL-AddReconfTransChInfoList
        ul-TransChInfoList
                                                                                 OPTIONAL.
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
        -- they should not be sent and if received they should be ignored.
                                          CHOICE {
        dummy
            fdd
                                               SEQUENCE {
                 dummy1
                                                   CPCH-SetID
                                                                                 OPTIONAL,
                                                   DRAC-StaticInformationList OPTIONAL
                 dummy2
            },
            tdd
                                              NULL
                                                                                 OPTIONAL,
        dl-CommonTransChInfo
                                          DL-CommonTransChInfo-r4
                                                                                 OPTIONAL,
        dl-TransChInfoList
                                          DL-AddReconfTransChInfoList-r4
                                                                                OPTIONAL,
    -- Measurement report
        measurementReport
                                          MeasurementReport
                                                                                 OPTIONAL.
        failureCause
                                          FailureCauseWithProtErr
}
SRNC-RelocationInfo-r5-IEs ::=
                                          SEQUENCE {
    -- Non-RRC IEs
        -- IE rb-IdentityForHOMessage includes the identity of the RB used by the source SRNC
        -- to send the message contained in the IE 'TargetRNC-ToSourceRNC-Container'.
        -- Only included if type is "UE involved"
        rb-IdentityForHOMessage
                                        RB-Identity
        stateOfRRC
                                          StateOfRRC,
        stateOfRRC-Procedure
                                          StateOfRRC-Procedure,
    -- Ciphering related information IEs
        cipheringStatusList
                                         CipheringStatusList-r4,
```

```
CN-DomainIdentity,
       latestConfiguredCN-Domain
       calculationTimeForCiphering
                                      CalculationTimeForCiphering
                                                                           OPTIONAL,
       count-C-List
                                       COUNT-C-List
                                                                           OPTIONAL,
       cipheringInfoPerRB-List
                                       CipheringInfoPerRB-List-r4
                                                                           OPTIONAL,
    -- Integrity protection related information IEs
                                     IntegrityProtectionStatus,
       integrityProtectionStatus
       srb-SpecificIntegrityProtInfo
                                       SRB-SpecificIntegrityProtInfoList OPTIONAL,
       implementationSpecificParams
                                       ImplementationSpecificParams
                                                                           OPTIONAL.
    -- User equipment IEs
       u-RNTI
                                       U-RNTI,
       c-RNTI
                                       C-RNTI
                                                                           OPTIONAL,
                                       UE-RadioAccessCapability-r5,
       ue-RadioAccessCapability
       ue-RadioAccessCapability-ext
                                       UE-RadioAccessCapabBandFDDList
                                                                           OPTIONAL.
       ue-Positioning-LastKnownPos
                                       UE-Positioning-LastKnownPos
                                                                           OPTIONAL,
       uESpecificBehaviourInformationlidle
                                       UESpecificBehaviourInformation1idle
                                                                               OPTIONAL,
       uESpecificBehaviourInformationlinterRAT
                                       UESpecificBehaviourInformationlinterRAT
                                                                                   OPTIONAL,
   -- Other IEs
       ue-RATSpecificCapability
                                       InterRAT-UE-RadioAccessCapabilityList-r5
                                                                                   OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                           OPTIONAL,
    -- Core network IEs
       cn-CommonGSM-MAP-NAS-SysInfo NAS-SystemInformationGSM-MAP,
       cn-DomainInformationList
                                      CN-DomainInformationListFull
                                                                           OPTIONAL.
    -- Measurement IEs
       ongoingMeasRepList
                                       OngoingMeasRepList-r5
                                                                           OPTIONAL,
    -- Radio bearer IEs
       {\tt predefinedConfigStatusList} \qquad {\tt PredefinedConfigStatusList},
                                       SRB-InformationSetupList-r5,
       srb-InformationList
       rab-InformationList
                                       RAB-InformationSetupList-r5
                                                                           OPTIONAL.
    -- Transport channel IEs
       ul-CommonTransChInfo
                                       UL-CommonTransChInfo-r4
                                                                           OPTIONAL,
       ul-TransChInfoList
                                      UL-AddReconfTransChInfoList
                                                                           OPTIONAL.
        -- 'dummy', 'dummy1' and 'dummy2' are not used in this version of the specification,
        -- they should not be sent and if received they should be ignored.
       dummy
                                       CHOICE {
           fdd
                                           SEQUENCE {
               dummv1
                                               CPCH-Set ID
                                                                           OPTIONAL.
               dummy2
                                               DRAC-StaticInformationList OPTIONAL
           },
           tdd
                                           NULL
                                                                           OPTIONAL.
       dl-CommonTransChInfo
                                       DL-CommonTransChInfo-r4
                                                                           OPTIONAL,
       dl-TransChInfoList
                                       DL-AddReconfTransChInfoList-r5
                                                                           OPTIONAL,
    -- PhyCH IEs
       tpc-CombinationInfoList
                                      TPC-CombinationInfoList
                                                                           OPTIONAL,
    -- Measurement report
       measurementReport
                                       MeasurementReport
                                                                           OPTIONAL,
    -- Other IEs
       failureCause
                                       FailureCauseWithProtErr
                                                                           OPTIONAL
SRNC-RelocationInfo-v690ext-IEs ::= SEQUENCE {
    -- User equipment IEs
       -- IE ueCapabilityContainer is used for the transparent transfer of capability information
        -- received from the UE
       ueCapabilityContainer
                                       BIT STRING
                                           (CONTAINING UE-CapabilityContainer-IEs) OPTIONAL,
       -- IE ueCapabilityContainer-RSC and IE ueCapabilityContainer-UCI are used for the
        -- transparent transfer of capability information received from the UE that was introduced
        -- in a release independent manner, i.e., transferred within a VLEC. These UE capabilities
       -- are included both in the RRC CONNECTION SETUP COMPLETE and the UE CAPABILITY INFORMATION
        -- messages. Only the VLEC of one message needs to be included i.e. the one from these
        -- messages that was last received.
        -- Case 1: If the last received message was a RRC CONNECTION SETUP COMPLETE (RSC)
       ueCapabilityContainer-RSC
                                      BIT STRING
                           (CONTAINING RRCConnectionSetupComplete-r3-add-ext-IEs) OPTIONAL,
       -- Case 2: If the last received message was a UE CAPABILITY INFORMATION (UCI)
       ueCapabilityContainer-UCI
                                       BIT STRING
                           (CONTAINING UECapabilityInformation-r3-add-ext-IEs)
    -- Radio bearer TEs
       rab-InformationSetupList
                                      RAB-InformationSetupList-r6-ext
                                                                          OPTIONAL,
    -- Measurement report
       measuredResultsOnRACHinterFreq MeasuredResultsOnRACHinterFreq
                                                                           OPTIONAL,
    -- MBMS IEs
       mbms-JoinedInformation
                                     MBMS-JoinedInformation-r6
                                                                          OPTIONAL,
    -- Measurement IEs
```

```
intraFreqReportingCriteria
                                      IntraFreqReportingCriteria-r6-ext
                                                                               OPTIONAL
}
SRNC-RelocationInfo-r6-IEs ::=
                                       SEQUENCE {
    -- Non-RRC IEs
       -- IE rb-IdentityForHOMessage includes the identity of the RB used by the source SRNC
        -- to send the message contained in the IE 'TargetRNC-ToSourceRNC-Container'.
        -- Only included if type is "UE involved"
                                      RB-Identity
        rb-IdentityForHOMessage
                                                                            OPTIONAL,
        stateOfRRC
                                       StateOfRRC,
       stateOfRRC-Procedure
                                       StateOfRRC-Procedure,
    -- Ciphering related information IEs
        \begin{tabular}{ll} {\tt cipheringStatusList} & {\tt CipheringStatusList-r4,} \\ {\tt latestConfiguredCN-Domain} & {\tt CN-DomainIdentity,} \\ \end{tabular}
        calculationTimeForCiphering
                                       CalculationTimeForCiphering
        count-C-List
                                       COUNT-C-List
                                                                           OPTIONAL,
                                       CipheringInfoPerRB-List-r4
        cipheringInfoPerRB-List
                                                                           OPTIONAL.
    -- Integrity protection related information IEs
        srb-SpecificIntegrityProtInfo
                                       SRB-SpecificIntegrityProtInfoList OPTIONAL,
        implementationSpecificParams
                                       ImplementationSpecificParams
                                                                            OPTIONAL.
    -- User equipment IEs
        u-RNTI
                                       U-RNTI,
       C-RNTI
                                       C-RNTI
                                                                            OPTIONAL.
        ue-RadioAccessCapability
                                       UE-RadioAccessCapability-r6,
        ue-RadioAccessCapability-ext
                                       UE-RadioAccessCapabBandFDDList
                                                                            OPTIONAL,
        ue-Positioning-LastKnownPos
                                       UE-Positioning-LastKnownPos
                                                                           OPTIONAL,
        uESpecificBehaviourInformationlidle
                                       UESpecificBehaviourInformation1idle
                                                                               OPTIONAL,
        {\tt uESpecificBehaviourInformationlinterRAT}
                                       UESpecificBehaviourInformationlinterRAT
                                                                                   OPTIONAL.
        -- IE ueCapabilityContainer is used for the transparent transfer of capability information
        -- received from the UE
                                       BIT STRING
        ueCapabilityContainer
                                            (CONTAINING UE-CapabilityContainer-IEs) OPTIONAL,
        -- IE ueCapabilityContainer-RSC and IE ueCapabilityContainer-UCI are used for the
        -- transparent transfer of capability information received from the UE that was introduced
        -- in a release independent manner, i.e., transferred within a VLEC. These UE capabilities
        -- are included both in the RRC CONNECTION SETUP COMPLETE and the UE CAPABILITY INFORMATION
        -- messages. Only the VLEC of one message needs to be included i.e. the one from these
        -- messages that was last received.
        -- Case 1: If the last received message was a RRC CONNECTION SETUP COMPLETE (RSC)
        ueCapabilityContainer-RSC
                                      BIT STRING
                           (CONTAINING RRCConnectionSetupComplete-r3-add-ext-IEs) OPTIONAL,
        -- Case 2: If the last received message was a UE CAPABILITY INFORMATION (UCI)
        ueCapabilityContainer-UCI
                                       BIT STRING
                           (CONTAINING UECapabilityInformation-r3-add-ext-IEs)
                                                                                    OPTIONAL.
   -- Other IEs
       ue-RATSpecificCapability
                                       InterRAT-UE-RadioAccessCapabilityList-r5
                                                                                    OPTIONAL,
    -- UTRAN mobility IEs
       ura-Identity
                                       URA-Identity
                                                                            OPTIONAL,
    -- Core network IEs
       cn-CommonGSM-MAP-NAS-SysInfo NAS-SystemInformationGSM-MAP,
        cn-DomainInformationList
                                       CN-DomainInformationListFull
                                                                            OPTIONAL.
   -- Measurement IEs
        ongoingMeasRepList
                                        OngoingMeasRepList-r6
                                                                            OPTIONAL.
        interRATCellInfoIndication
                                       InterRATCellInfoIndication
                                                                            OPTIONAL,
    -- Radio bearer IEs
       predefinedConfigStatusList
                                       PredefinedConfigStatusList,
        srb-InformationList
                                       SRB-InformationSetupList-r6.
       rab-InformationList
                                       RAB-InformationSetupList-r6
                                                                            OPTIONAL,
    -- Transport channel IEs
       ul-CommonTransChInfo
                                       UL-CommonTransChInfo-r4
                                                                            OPTIONAL,
        ul-TransChInfoList
                                       UL-AddReconfTransChInfoList-r6
                                                                            OPTIONAL,
       dl-CommonTransChInfo
                                       DL-CommonTransChInfo-r4
                                                                            OPTIONAL.
       dl-TransChInfoList
                                       DL-AddReconfTransChInfoList-r5
                                                                            OPTIONAL,
    -- PhyCH IEs
       tpc-CombinationInfoList
                                       TPC-CombinationInfoList
                                                                            OPTIONAL.
        storedCompressedModeInfo
                                       StoredCompressedModeInfo
                                                                           OPTIONAL,
   -- Measurement report
       measurementReport
                                       BIT STRING
                           (CONTAINING MeasurementReport)
                                                                           OPTIONAL,
    -- Other IEs
       failureCause
                                       FailureCauseWithProtErr
                                                                           OPTIONAL,
    -- MBMS IEs
       mbms-JoinedInformation
                                       MBMS-JoinedInformation-r6
                                                                            OPTIONAL
}
```

```
-- IE definitions
CalculationTimeForCiphering ::=
                                    SEQUENCE {
    cell-Id
                                        CellIdentity,
    sfn
                                        INTEGER (0..4095)
}
CipheringInfoPerRB ::=
                                    SEQUENCE {
    dl-HFN
                                        BIT STRING (SIZE (20..25)),
    ul-HFN
                                        BIT STRING (SIZE (20..25))
}
CipheringInfoPerRB-r4 ::=
                                   SEQUENCE {
                                       RB-Identity,
    rb-Identity
    dl-HFN
                                       BIT STRING (SIZE (20..25)),
                                       BIT STRING (SIZE (7))
   dl-UM-SN
                                                                           OPTIONAL,
   ul-HFN
                                       BIT STRING (SIZE (20..25))
}
-- TABULAR: CipheringInfoPerRB-List, multiplicity value numberOfRadioBearers
-- has been replaced with maxRB.
                                   SEQUENCE (SIZE (1..maxRB)) OF
CipheringInfoPerRB-List ::=
                                       CipheringInfoPerRB
CipheringInfoPerRB-List-r4 ::=
                                    SEOUENCE (SIZE (1..maxRB)) OF
                                       CipheringInfoPerRB-r4
CipheringStatus ::=
                                    ENUMERATED {
                                       started, notStarted }
CipheringStatusList-r4 ::=
                                    SEQUENCE (SIZE (1..maxCNdomains)) OF
                                       CipheringStatusCNdomain-r4
                                   SEQUENCE {
CipheringStatusCNdomain-r4 ::=
       cn-DomainIdentity
                                       CN-DomainIdentity,
       cipheringStatus
                                       CipheringStatus,
       start-Value
                                       START-Value
}
CN-DomainInformation-v390ext ::=
                                       SEOUENCE {
   cn-DRX-CycleLengthCoeff
                                       CN-DRX-CycleLengthCoefficient
CN-DomainInformationList-v390ext ::=
                                        SEQUENCE (SIZE (1..maxCNdomains)) OF
                                        CN-DomainInformation-v390ext
CompressedModeMeasCapability-r4 ::= SEQUENCE {
                                       BOOLEAN,
    fdd-Measurements
    -- TABULAR: The IEs tdd-Measurements, gsm-Measurements and multiCarrierMeasurements
    -- are made optional since they are conditional based on another information element.
    \mbox{--} Their absence corresponds to the case where the condition is not true.
    tdd384-Measurements
                                      BOOLEAN
                                                                            OPTIONAL,
    tdd128-Measurements
                                       BOOLEAN
                                                                            OPTIONAL.
                                       GSM-Measurements
                                                                            OPTIONAL,
   gsm-Measurements
   multiCarrierMeasurements
                                       BOOLEAN
                                                                            OPTIONAL
COUNT-C-List ::=
                                       SEQUENCE (SIZE (1..maxCNdomains)) OF
                                        COUNT-CSingle
COUNT-CSingle ::=
                                        SEQUENCE {
                                        CN-DomainIdentity,
   cn-DomainIdentity
                                        BIT STRING (SIZE (32))
   count-C
}
DL-PhysChCapabilityFDD-r4 ::= SEQUENCE {
    -- The IE 'maxNoDPCH-PDSCH-Codes' only gives information on the maximum number of DPCH Codes.
    maxNoDPCH-PDSCH-Codes
                                       INTEGER (1..8),
    maxNoPhysChBitsReceived
                                        MaxNoPhysChBitsReceived,
    supportForSF-512
                                       BOOLEAN,
    -- dummy, dummy2 and dummy3 are not used in this version of the specification
    -- and if received they should be ignored.
    {\tt dummy}
                                        BOOLEAN,
    dummy2
                                        SimultaneousSCCPCH-DPCH-Reception,
                                        SupportOfDedicatedPilotsForChEstimation
    dummy3
}
```

```
SEQUENCE {
DL-PhysChCapabilityFDD-r5 ::=
    -- The IE 'maxNoDPCH-PDSCH-Codes' only gives information on the maximum number of DPCH Codes.
   maxNoDPCH-PDSCH-Codes
maxNoPhysChBitsReceived
                                        INTEGER (1..8),
                                         MaxNoPhysChBitsReceived,
    supportForSF-512
                                         BOOLEAN,
    -- dummy, dumy2 and dummy3 are not used in this version of the specification
    -- and if received they should be ignored.
                                         BOOLEAN,
    dummy
    dummy2
                                         SimultaneousSCCPCH-DPCH-Reception,
    dummy3
                                         SupportOfDedicatedPilotsForChEstimation
                                                                                      OPTIONAL,
    fdd-hspdsch
                                         CHOICE {
                                             SEQUENCE {
        supported
                                                 HSDSCH-physical-layer-category,
            hsdsch-physical-layer-category
            -- dummy and dummy2 are not used in this version of the specification
            -- and if received they should be ignored.
            dummy
                                                 BOOLEAN,
            dummy2
                                                 BOOLEAN
                                             NULL
        unsupported
    }
}
DL-PhysChCapabilityTDD-r5 ::= SEQUENCE {
    maxTS-PerFrame
                                        MaxTS-PerFrame,
    maxPhvsChPerFrame
                                         MaxPhysChPerFrame,
   minimumSF
                                         MinimumSF-DL,
    supportOfPDSCH
                                        BOOLEAN,
    maxPhysChPerTS
                                         MaxPhysChPerTS,
    tdd384-hspdsch
                                         CHOICE {
                                             HSDSCH-physical-layer-category,
        supported
        unsupported
                                             NULL
}
DL-PhysChCapabilityTDD-LCR-r5 ::= SEQUENCE {
    maxTS-PerSubFrame
                                        MaxTS-PerSubFrame-r4,
    maxPhysChPerFrame
                                         MaxPhysChPerSubFrame-r4,
    minimumSF
                                         MinimumSF-DL,
    supportOfPDSCH
                                         BOOLEAN,
    maxPhysChPerTS
                                         MaxPhysChPerTS,
    supportOf8PSK
                                         BOOLEAN,
    tdd128-hspdsch
                                         CHOICE {
                                             HSDSCH-physical-layer-category,
        supported
        unsupported
                                             NULL
    }
}
                                    SEQUENCE {
DL-RFC3095-Context ::=
    rfc3095-Context-Identity
                                         INTEGER (0..16383),
                                         ENUMERATED {u, o, r},
    dl-mode
    dl-ref-ir
                                         OCTET STRING ( SIZE (1..3000)),
    dl-ref-time
                                         INTEGER (0..4294967295) OPTIONAL,
    dl-curr-time
                                         INTEGER (0..4294967295)
                                                                     OPTIONAL,
                                         INTEGER (0..65535)
    dl-syn-offset-id
                                                                      OPTIONAL.
                                         INTEGER (0..4294967295) OPTIONAL,
    dl-syn-slope-ts
                                         BOOLEAN
    dl-dyn-changed
ImplementationSpecificParams ::=
                                   BIT STRING (SIZE (1..512))
IntegrityProtectionStatus ::=
                                     ENUMERATED {
                                       started, notStarted }
InterRAT-UE-RadioAccessCapabilityList-r5 ::=
                                                 SEQUENCE {
    interRAT-UE-RadioAccessCapability InterRAT-UE-RadioAccessCapabilityList, geranIu-RadioAccessCapability GERANIu-RadioAccessCapability
    geranIu-RadioAccessCapability
                                        GERANIu-RadioAccessCapability
                                                                                       OPTIONAL
}
{\tt IntraFreqReportingCriteria-r6-ext} \; ::= \; {\tt SEQUENCE} \; \left\{ \right.
   -- The content of the v690 non-critical extension should be
    -- considered as an extension of IE IntraFreqEventCriteriaList
                                         Eventli-r6,
    event
   hysteresis
                                         Hysteresis,
    timeToTrigger
                                         TimeToTrigger,
                                         ReportingCellStatus
    reportingCellStatus
                                                                             OPTIONAL
}
```

```
-- dummy is not used in this version of the specification, it should
-- not be sent and if received it should be ignored.
MaxHcContextSpace-r5 ::=
                                          ENUMERATED {
                                               dummy, by1024, by2048, by4096, by8192,
                                               by16384, by32768, by65536, by131072 }
MeasurementCapability-r4 ::=
                                      SEQUENCE {
                                          CompressedModeMeasCapability-r4,
    downlinkCompressedMode
    {\tt uplinkCompressedMode}
                                          CompressedModeMeasCapability-r4
                                     CHOICE {
MeasurementCommandWithType ::=
    setup
                                          MeasurementType,
                                          NULL,
    modify
    release
                                          NULL
}
MeasurementCommandWithType-r4 ::=
                                      CHOICE {
                                          MeasurementType-r4,
                                           NULL,
    modify
    release
                                          NULL
}
MeasurementCommandWithType-r6 ::=
                                      CHOICE {
                                          MeasurementType-r6,
    setup
    modify
                                          NULL,
    release
                                          NULL
}
OngoingMeasRep ::=
                                     SEQUENCE {
    measurementIdentity
                                          MeasurementIdentity,
    -- TABULAR: The CHOICE Measurement in the tabular description is included
    -- in MeasurementCommandWithType
    {\tt measurementCommandWithType}
                                          MeasurementCommandWithType,
                                                                                OPTIONAL.
    measurementReportingMode
                                          MeasurementReportingMode
    additionalMeasurementID-List
                                          AdditionalMeasurementID-List
                                                                                 OPTIONAL
}
                            SEQUENCE {
OngoingMeasRep-r4 ::=
    measurementIdentity
                                        MeasurementIdentity,
    -- TABULAR: The CHOICE Measurement in the tabular description is included
    -- in MeasurementCommandWithType-r4.
   measurementCommandWithType MeasurementCommandWithType-r4,
measurementReportingMode MeasurementReportingMode OPTIONAL
additionalMeasurementID-List AdditionalMeasurementID-List OPTIONAL
                                                                               OPTIONAL,
}
OngoingMeasRep-r5 ::=
                                     SEQUENCE {
                                          MeasurementIdentity,
    measurementIdentity
    -- TABULAR: The CHOICE Measurement in the tabular description is included
    -- in MeasurementCommandWithType-r4.
    measurementCommandWithType MeasurementCommandWithType-r4,
measurementReportingMode MeasurementReportingMode
additionalMeasurementID-List
measurementCommand-v590ext CHOICE {
                                                                                 OPTIONAL,
        -- the choice "intra-frequency" shall be used for the case of intra-frequency measurement,
        -- as well as when intra-frequency events are configured for inter-frequency measurement
                                              Intra-FreqEventCriteriaList-v590ext,
        intra-frequency
        inter-frequency
                                              Inter-FreqEventCriteriaList-v590ext
           OPTIONAL.
    intraFreqReportingCriteria-1b-r5
                                              IntraFreqReportingCriteria-1b-r5 OPTIONAL,
    intraFreqEvent-1d-r5
                                               IntraFreqEvent-1d-r5
                                                                                     OPTIONAL
}
OngoingMeasRep-r6 ::=
                                      SEQUENCE {
    measurementIdentity
                                       MeasurementIdentity,
    measurementCommandWithType
                                          MeasurementCommandWithType-r6,
                                                                                 OPTIONAL,
    measurementReportingMode
                                          MeasurementReportingMode
    additionalMeasurementID-List
                                         AdditionalMeasurementID-List
                                                                                OPTIONAL
}
OngoingMeasRepList ::=
                                      SEQUENCE (SIZE (1..maxNoOfMeas)) OF
                                          OngoingMeasRep
OngoingMeasRepList-r4 ::=
                                      SEQUENCE (SIZE (1..maxNoOfMeas)) OF
                                          OngoingMeasRep-r4
                                      SEQUENCE (SIZE (1..maxNoOfMeas)) OF
OngoingMeasRepList-r5 ::=
```

OngoingMeasRep-r5

```
OngoingMeasRepList-r6 ::=
                                     SEQUENCE (SIZE (1..maxNoOfMeas)) OF
                                         OngoingMeasRep-r6
PDCP-Capability-r4 ::=
                                     SEQUENCE {
    losslessSRNS-RelocationSupport
                                         BOOLEAN,
    supportForRfc2507
                                         CHOICE {
        notSupported
                                             NULL,
        supported
                                             MaxHcContextSpace
    },
                                         CHOICE {
    supportForRfc3095
        notSupported
                                             NULL.
        supported
                                             SEQUENCE {
            maxROHC-ContextSessions
                                                 MaxROHC-ContextSessions-r4 DEFAULT s16,
            {\tt reverseCompressionDepth}
                                                 INTEGER (0..65535)
                                                                             DEFAULT 0
        }
}
                                     SEQUENCE {
PDCP-Capability-r5 ::=
    losslessSRNS-RelocationSupport
                                         BOOLEAN,
    supportForRfc2507
                                         CHOICE {
        notSupported
                                             NULL.
        supported
                                             MaxHcContextSpace-r5
    supportForRfc3095
                                         CHOICE {
        notSupported
                                             NULL
        supported
                                             SEQUENCE {
                                                 MaxROHC-ContextSessions-r4 DEFAULT s16,
            maxROHC-ContextSessions
            reverseCompressionDepth
                                                 INTEGER (0..65535)
                                                                              DEFAULT 0,
            supportForRfc3095ContextRelocation BOOLEAN
    }
}
PDCP-Capability-r6 ::=
                                     SEQUENCE {
    losslessSRNS-RelocationSupport
                                         BOOLEAN,
    {\tt losslessDLRLC-PDUSizeChange}
                                         ENUMERATED { true }
                                                                             OPTIONAL,
    supportForRfc2507
                                         CHOICE {
        notSupported
                                             NULL.
                                             MaxHcContextSpace-r5
        supported
    },
    supportForRfc3095
                                         CHOICE {
        notSupported
                                             NULL,
        supported
                                             SEQUENCE {
            maxROHC-ContextSessions
                                                 MaxROHC-ContextSessions-r4 DEFAULT s16,
            reverseCompressionDepth
                                                 INTEGER (0..65535)
                                                                            DEFAULT 0,
            supportForRfc3095ContextRelocation BOOLEAN
        }
    }
}
                                         SEQUENCE {
PhysicalChannelCapability-r4 ::=
                                             SEQUENCE {
        fddPhysChCapability
            {\tt downlinkPhysChCapability}
                                                 DL-PhysChCapabilityFDD-r4,
            uplinkPhysChCapability
                                                 UL-PhysChCapabilityFDD
                                                     OPTIONAL,
        tdd384-PhysChCapability
                                             SEQUENCE {
                                                DL-PhysChCapabilityTDD,
            downlinkPhysChCapability
                                                 UL-PhysChCapabilityTDD
            uplinkPhysChCapability
                                                    OPTIONAL,
        tdd128-PhysChCapability
                                             SEQUENCE {
            downlinkPhysChCapability
                                                 DL-PhysChCapabilityTDD-LCR-r4,
                                                 {\tt UL-PhysChCapabilityTDD-LCR-r4}
            uplinkPhysChCapability
                                                     OPTIONAL
}
PhysicalChannelCapability-r5 ::=
                                         SEQUENCE {
                                             SEQUENCE {
        fddPhysChCapability
            downlinkPhysChCapability
                                                 DL-PhysChCapabilityFDD-r5,
            uplinkPhysChCapability
                                                 UL-PhysChCapabilityFDD
                                                    OPTIONAL,
        tdd384-PhysChCapability
                                             SEQUENCE {
            downlinkPhysChCapability
                                                 DL-PhysChCapabilityTDD-r5,
            uplinkPhysChCapability
                                                 UL-PhysChCapabilityTDD
                                                     OPTIONAL,
        tdd128-PhysChCapability
                                             SEQUENCE {
```

```
downlinkPhysChCapability
                                                DL-PhysChCapabilityTDD-LCR-r5,
            uplinkPhysChCapability
                                                UL-PhysChCapabilityTDD-LCR-r4
        }
                                                    OPTIONAL
}
RF-Capability-r4 ::=
                                    SEQUENCE {
        fddRF-Capability
                                       SEQUENCE {
                                           UE-PowerClassExt,
           ue-PowerClass
            txRxFrequencySeparation
                                           TxRxFrequencySeparation
                                                                        OPTIONAL,
        tdd384-RF-Capability
                                       SEQUENCE {
                                           UE-PowerClassExt,
           ue-PowerClass
            radioFrequencyBandTDDList
                                           RadioFrequencyBandTDDList,
            chipRateCapability
                                           ChipRateCapability
                                                                        OPTIONAL,
        tdd128-RF-Capability
                                       SEQUENCE {
           ue-PowerClass
                                           UE-PowerClassExt,
            radioFrequencyBandTDDList
                                           RadioFrequencyBandTDDList,
           chipRateCapability
                                           ChipRateCapability
        }
                                                                        OPTIONAL
}
RFC3095-ContextInfo ::=
                                   SEQUENCE {
   rb-Identity
                                       RB-Identity,
    rfc3095-Context-List
                                        RFC3095-Context-List
}
RFC3095-Context-List ::=
                                   SEQUENCE (SIZE (1..maxRFC3095-CID)) OF SEQUENCE {
                                       DL-RFC3095-Context OPTIONAL,
   dl-RFC3095-Context
    ul-RFC3095-Context
                                       UL-RFC3095-Context
                                                               OPTIONAL
}
RLC-Capability-r5 ::=
                                   SEQUENCE {
    totalRLC-AM-BufferSize
                                       TotalRLC-AM-BufferSize-r5,
    maximumRLC-WindowSize
                                       MaximumRLC-WindowSize,
    maximumAM-EntityNumber
                                        MaximumAM-EntityNumberRLC-Cap
}
SRB-SpecificIntegrityProtInfo ::= SEQUENCE {
    ul-RRC-HFN
                                       BIT STRING (SIZE (28)),
    dl-RRC-HFN
                                        BIT STRING (SIZE (28)),
    ul-RRC-SequenceNumber
                                        RRC-MessageSequenceNumber,
    dl-RRC-SequenceNumber
                                        RRC-MessageSequenceNumber
}
SRB-SpecificIntegrityProtInfoList ::= SEQUENCE (SIZE (4..maxSRBsetup)) OF
                                        SRB-SpecificIntegrityProtInfo
StateOfRRC ::=
                                    ENUMERATED {
                                        cell-DCH, cell-FACH,
                                        cell-PCH, ura-PCH }
StateOfRRC-Procedure ::=
                                    ENUMERATED {
                                        awaitNoRRC-Message,
                                        awaitRB-ReleaseComplete,
                                        awaitRB-SetupComplete,
                                        awaitRB-ReconfigurationComplete,
                                        awaitTransportCH-ReconfigurationComplete,
                                        awaitPhysicalCH-ReconfigurationComplete,
                                        awaitActiveSetUpdateComplete,
                                        awaitHandoverComplete,
                                        sendCellUpdateConfirm,
                                        sendUraUpdateConfirm,
                                        -- dummy is not used in this version of specification
                                        -- It should not be sent
                                        dummy,
                                        otherStates
TotalRLC-AM-BufferSize-r5 ::=
                                    ENUMERATED {
                                        kb10, kb50, kb100, kb150, kb200,
                                        kb300, kb400, kb500, kb750, kb1000 }
TPC-Combination-Info ::= SEQUENCE {
       primaryCPICH-Info
                                           PrimaryCPICH-Info,
        tpc-CombinationIndex
                                           TPC-CombinationIndex
}
```

```
UE-MultiModeRAT-Capability-r5 ::= SEQUENCE {
   multiRAT-CapabilityList
                                       MultiRAT-Capability,
    {\tt multiModeCapability}
                                        MultiModeCapability,
    supportOfUTRAN-ToGERAN-NACC
                                        BOOLEAN
}
UE-Positioning-Capability-r4 ::=
                                    SEQUENCE {
    standaloneLocMethodsSupported
                                            BOOLEAN,
    ue-BasedOTDOA-Supported
                                            BOOLEAN,
    networkAssistedGPS-Supported
                                            NetworkAssistedGPS-Supported,
    supportForUE-GPS-TimingOfCellFrames
                                            BOOLEAN.
    supportForIPDL
                                            BOOLEAN.
    rx-tx-TimeDifferenceType2Capable
                                            BOOLEAN,
    validity-CellPCH-UraPCH
                                            ENUMERATED { true }
                                                                    OPTIONAL,
    sfn-sfnType2Capability
                                            ENUMERATED { true }
                                                                     OPTIONAL
}
UE-Positioning-LastKnownPos ::= SEQUENCE {
                                        INTEGER (0..4095),
        sfn
        cell-id
                                        CellIdentity,
        positionEstimate
                                        PositionEstimate
                                    SEQUENCE {
UE-RadioAccessCapability-r4 ::=
    \verb"accessStratumReleaseIndicator"
                                       AccessStratumReleaseIndicator,
    pdcp-Capability
                                        PDCP-Capability-r4,
    rlc-Capability
                                        RLC-Capability,
    transportChannelCapability
                                        TransportChannelCapability,
                                        RF-Capability-r4,
    rf-Capability
    physicalChannelCapability
                                        PhysicalChannelCapability-r4,
    ue-MultiModeRAT-Capability
                                        UE-MultiModeRAT-Capability,
    securityCapability
                                        SecurityCapability,
    ue-positioning-Capability
                                        UE-Positioning-Capability-r4,
    measurementCapability
                                        MeasurementCapability-r4
                                                                         OPTIONAL
}
                                    SEQUENCE {
UE-RadioAccessCapability-r5 ::=
                                       AccessStratumReleaseIndicator,
    accessStratumReleaseIndicator
    dl-CapabilityWithSimultaneousHS-DSCHConfig
                                        DL-CapabilityWithSimultaneousHS-DSCHConfig OPTIONAL,
                                        PDCP-Capability-r5,
   pdcp-Capability
                                        RLC-Capability-r5,
    rlc-Capability
    transportChannelCapability
                                        TransportChannelCapability,
    rf-Capability
                                        RF-Capability-r4,
    physicalChannelCapability
                                        PhysicalChannelCapability-r5,
    ue-MultiModeRAT-Capability
                                        UE-MultiModeRAT-Capability-r5,
    securityCapability
                                        SecurityCapability,
    ue-positioning-Capability
                                        UE-Positioning-Capability-r4,
    measurementCapability
                                        MeasurementCapability-r4
                                                                        OPTIONAL
}
UE-RadioAccessCapability-r6 ::=
                                    SEQUENCE {
                                        AccessStratumReleaseIndicator,
    accessStratumReleaseIndicator
    dl-CapabilityWithSimultaneousHS-DSCHConfig
                                        DL-CapabilityWithSimultaneousHS-DSCHConfig OPTIONAL,
    pdcp-Capability
                                        PDCP-Capability-r6,
    rlc-Capability
                                        RLC-Capability-r5,
    transportChannelCapability
                                        TransportChannelCapability,
    rf-Capability
                                        RF-Capability-r4,
    physicalChannelCapability
                                        PhysicalChannelCapability-r5,
    ue-MultiModeRAT-Capability
                                        UE-MultiModeRAT-Capability-r5,
    securityCapability
                                        SecurityCapability,
    ue-positioning-Capability
                                        UE-Positioning-Capability-r4,
    measurementCapability
                                        MeasurementCapability-r4
                                                                        OPTIONAL
}
UE-RadioAccessCapability-r7 ::=
                                    SEQUENCE {
                                        {\tt AccessStratumReleaseIndicator},
    accessStratumReleaseIndicator
    dl-CapabilityWithSimultaneousHS-DSCHConfig
                                        DL-CapabilityWithSimultaneousHS-DSCHConfig OPTIONAL,
    pdcp-Capability
                                        PDCP-Capability-r6,
    rlc-Capability
                                        RLC-Capability-r5,
    transportChannelCapability
                                        TransportChannelCapability,
    rf-Capability
                                        RF-Capability-r7,
    physicalChannelCapability
                                       PhysicalChannelCapability-r7,
    ue-MultiModeRAT-Capability
                                        UE-MultiModeRAT-Capability-r5,
    securityCapability
                                        SecurityCapability,
```

```
ue-positioning-Capability
                                         UE-Positioning-Capability-r4,
    measurementCapability
                                         MeasurementCapability-r4
                                                                           OPTIONAL
UL-RFC3095-Context ::=
                                     SEQUENCE {
                                         INTEGER (0..16383),
   rfc3095-Context-Identity
                                         ENUMERATED \{u, o, r\},
    ul-mode
    ul-ref-ir
                                         OCTET STRING ( SIZE (1..3000)),
    ul-ref-time
                                         INTEGER (0..4294967295)
                                                                      OPTIONAL,
    ul-curr-time
                                         INTEGER (0..4294967295)
                                                                      OPTIONAL,
    ul-syn-offset-id
                                         INTEGER (0..65535)
                                                                      OPTIONAL,
    ul-syn-slope-ts
                                         INTEGER (0..4294967295)
                                                                      OPTIONAL.
    ul-ref-sn-1
                                         INTEGER (0..65535)
                                                                      OPTIONAL
END
```

12 Message transfer syntax

Transfer syntax for RRC PDUs is derived from their ASN.1 definitions by use of Packed Encoding Rules, unaligned as specified in X.691 [49], and with adapted final padding. If special encoding is used, it is indicated in the ECN module defined for each ASN.1 module. The use of special encoding is defined in [14].

The following encoding rules apply in addition to what has been specified in X.691 [49]:

- When a bit string value is placed in a bit-field as specified in 15.6 to 15.11 in [11], the leading bit of the bit string value shall be placed in the leading bit of the bit-field, and the trailing bit of the bit string value shall be placed in the trailing bit of the bit-field.

NOTE: The terms "leading bit" and "trailing bit" are defined in ITU-T Rec. X.680 | ISO/IEC 8824-1. When using the "bstring" notation, the leading bit of the bit string value is on the left, and the trailing bit of the bit string value is on the right.

12.1 Structure of encoded RRC messages

An RRC PDU, which is the bit string that is exchanged between peer entities/ across the radio interface, is the concatenation of a basic production, an extension and padding, in that order.

RRC PDUs shall be mapped to and from RLC SDUs upon transmission and reception as follows:

- when delivering an RRC PDU as an RLC SDU to the RLC layer for transmission, the first bit of the RRC PDU shall be represented as the first bit in the RLC SDU and onwards; and
- upon reception of an RLC SDU from the RLC layer, the first bit of the RLC SDU shall represent the first bit of the RRC PDU and onwards.

12.1.1 Basic production

The 'basic production' is obtained by applying UNALIGNED PER to the abstract syntax value (the ASN.1 description) as specified in X.691, except for the 0 to 7 bits added at the end to produce a multiple of 8 bits. The basic production can have any positive number of bits, not necessarily a multiple of 8 bits.

12.1.2 Extension

Emitters compliant with this version of the specification of the protocol shall, unless indicated otherwise on a PDU type basis, set the extension part empty. Emitters compliant with a later version might send non-empty extensions.

12.1.3 Padding

Emitters compliant with this version of the specification of the protocol shall, unless indicated otherwise on a PDU type basis, pad the basic production with the smallest number of bits required to meet the size constraints of the lower layers. Padding bits shall be set to 0.

Receivers compliant with this version of the specification have no need to distinguish the extension and padding parts, and shall, unless indicated otherwise on a PDU type basis, accept RRC PDUs with any bit string in the extension and padding parts.

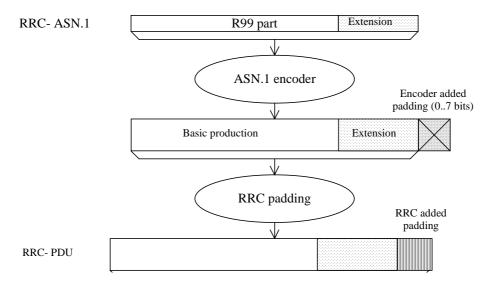


Figure 12.1.3-1: Padding

When using AM or UM mode, RLC requires that the RRC PDU length is a multiple of 8 bits.

When using Tr mode, RLC does neither impose size requirements nor perform padding. This implies that RRC has to take into account the transport format set defined for the transport channel across which the message is to be sent. RRC shall add the lowest number of padding bits required to fit the size specified for the selected transport format.

For system information blocks, building the PDU involves two steps. The first step is the building of the System Information Blocks, in which step padding is not applied (the rules for extension apply). The second step is the building of the RRC PDUs, involving segmentation and concatenation of System Information Blocks, and then padding as described above for Tr mode. The procedure is shown by means of an example as described in Figure 12.1.3-2. The example includes two System Information Blocks, SIBn and SIBn+1, of which only SIBn includes a protocol extension. The two System Information Blocks used in the example do not require segmentation and are concatenated into one SYSTEM INFORMATION message.

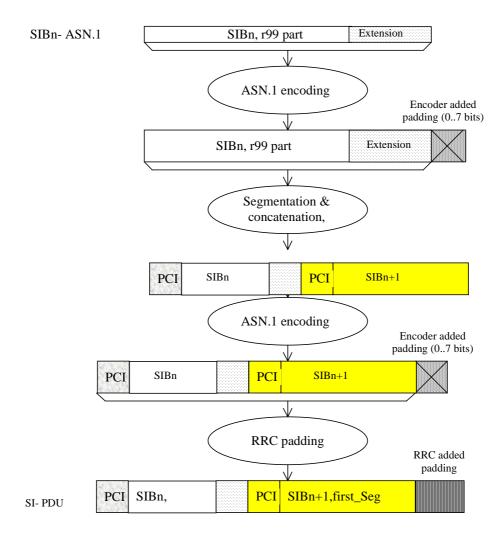


Figure 12.1.3-2: Padding for System Information

PCI: Protocol control information at SYSTEM INFORMATION message level

SI: SYSTEM INFORMATION message

For system information blocks, RRC may also add padding information at the end of IE "SIB data fixed", used both within IE "Last segment" and IE "Complete SIB". The IE "SIB data fixed" has a fixed length i.e. no length denominator used. In case the remaining amount of "SIB data" information is insufficient to fill the IE completely, RRC includes padding bits.

Since no length denominator is included, the receiving RRC cannot remove the padding added by the sender. However, since the padding used is the same as the padding added by the PER encoder to achieve octet alignment, the receiver can handle it.

NOTE 1 The mechanism described above implies that the PDU provided to the ASN.1 decoder may have more than 7 padding bits included. For a complete System Information Block of length 215 bits, 11 padding bits are added by RRC. Since the decoder requires an octet aligned input, 6 additional bits need to be added. In this (worst) case, a total of 17 padding bits is included.

NOTE 2 For the above cases, use of padding bits is possible and more efficient than including a length denominator.

When using the RRC padding described above, the segment has a fixed length, which completely fills the transport block. Therefore, in this case no RRC padding is added within the SYSTEM INFORMATION message. This is illustrated by means of the following figure.

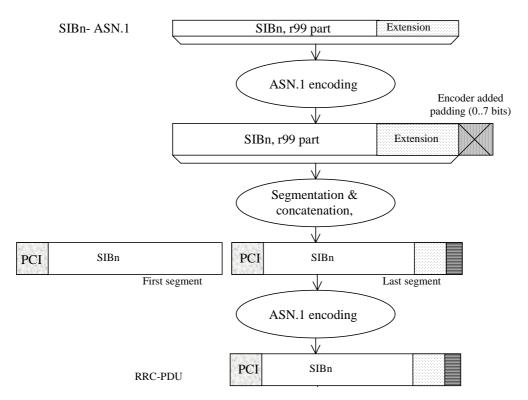


Figure 12.1.3-3: No RRC padding for System Information

12.2 ECN link module for RRC

END

```
RRC-ECN-Link-Module LINK-DEFINITIONS ::=
BEGIN
IMPORTS
   RRC-encodings
                                -- Encoding objects for RRC messages
FROM RRC-Encoding-Definitions;
ENCODE Class-definitions
    WITH RRC-encodings
    COMPLETED BY PER-BASIC-UNALIGNED
ENCODE PDU-definitions
    WITH RRC-encodings
    COMPLETED BY PER-BASIC-UNALIGNED
ENCODE InformationElements
    WITH RRC-encodings
    COMPLETED BY PER-BASIC-UNALIGNED
ENCODE Internode-definitions
    WITH RRC-encodings
    COMPLETED BY PER-BASIC-UNALIGNED
```

12.3 ECN modules for RRC

The encoding definition module "RRC-Encoding-Definitions" contains definition of the encoding object set "RRC-encodings". The encoding object set contains all the specialized encoding for RRC.

```
RRC-Encoding-Definitions ENCODING-DEFINITIONS ::=
BEGIN
EXPORTS
   RRC-encodings;
RRC-encodings \#ENCODINGS ::= \{
    -- Trailing bits
   outer-encoding
}
__*********************
-- The trailing bits in all RRC messages shall be ignored
-- (including unknown message contents & unknown extensions).
-- This overrides the default PER behaviour which pads the last
-- octet with zero bits.
__**********************
outer-encoding #OUTER ::= {
   ENCODER-DECODER {
   DECODE AS IF {
       POST-PADDING
                      encoder-option
}
END
Class-definitions-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END
PDU-definitions-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END
InformationElements-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
Internode-definitions-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
```

12.4 RRC messages encoded otherwise

NOTE: The messages included in this section are not specified by means of ASN.1.

12.4.1 Messages using tabular encoding specification

The encoding of the message is specified by means of a table listing the information elements known in the message and their order of their appearance in the message.

When a field extends over more than one octet, the order of bit values progressively decreases as the octet number increases. The least significant bit of the field is represented by the lowest numbered bit of the highest numbered octet of the field.

12.4.1.1 TRANSPORT FORMAT COMBINATION CONTROL using transparent DCCH

12.4.1.1.1 TRANSPORT FORMAT COMBINATION CONTROL, 3 bit format

The 3 bit format is as follows:

3	2	1	Transport Format Combination Set Identity value
0	0	0	0
0	0	1	1
0	1	0	2
1	1	1	7

12.4.1.1.2 Void

12.4.1.1.3 Void

13 Protocol timers, counters, other parameters and default configurations

The information provided in subclauses 13.1 and 13.2 shall be treated as informative. The normative text is specified in the relevant subclauses in clause 8 and clause 8 shall prevail.

13.1 Timers for UE

Timer	Start	Stop	At expiry
T300	Transmission of RRC CONNECTION REQUEST in case of connection establishment for reasons other than MBMS reception	Reception of RRC CONNECTION SETUP	Retransmit RRC CONNECTION REQUEST if V300 =< N300, else go to Idle mode
T302	Transmission of CELL UPDATE/URA UPDATE	Reception of CELL UPDATE CONFIRM/URA UPDATE CONFIRM	Retransmit CELL UPDATE/URA UPDATE if V302 =< N302, else, go to Idle mode
T304	Transmission of UE CAPABILITY INFORMATION	Reception of UE CAPABILITY INFORMATION CONFIRM	Retransmit UE CAPABILITY INFORMATION if V304 =< N304, else initiate a cell update procedure
T305	Entering CELL_FACH or URA_PCH or CELL_PCH state. Reception of CELL UDPATE CONFIRM/URA UPDATE CONFIRM.	Entering another state.	Transmit CELL UPDATE if T307 is not activated and the UE detects "in service area". Otherwise, if T307 is not active, start T307.
T307	When the timer T305 has expired and the UE detects "out of service area".	When the UE detects "in service area".	Transit to idle mode
T308	Transmission of RRC CONNECTION RELEASE COMPLETE	Not stopped	Transmit RRC CONNECTION RELEASE COMPLETE if V308 <=N308, else go to idle mode.
T309	Upon reception of CELL CHANGE ORDER FROM UTRAN message	Successful response to a connection establishment request in the new cell.	Resume the connection to UTRAN
T310	Transmission of PUSCH CAPACITY REQUEST	Reception of PHYSICAL SHARED CHANNEL ALLOCATION	Transmit PUSCH CAPACITY REQUEST if V310 =< N310, else procedure stops.
T311	Reception of PHYSICAL SHARED CHANNEL ALLOCATION message with the CHOICE "PUSCH allocation" set to "PUSCH allocation pending".	Reception of PHYSICAL SHARED CHANNEL ALLOCATION message with CHOICE "PUSCH allocation" set to "PUSCH allocation assignment".	UE may initiate a PUSCH capacity request procedure.
T312	When the UE starts to establish dedicated CH	When the UE detects N312 "in sync" indication from L1.	The criteria for physical channel establishment failure is fulfilled
T313	When the UE detects consecutive N313 "out of sync" indication from L1.	When the UE detects consecutive N315 "in sync" indication from L1.	The criteria for Radio Link failure is fulfilled.
T314	When the criteria for radio link failure are fulfilled. The timer is started if radio bearer(s) that are associated with T314 exist of if only RRC connection exists.	When the Cell Update procedure has been completed.	See subclause 8.3.1.13.

Timer	Start	Stop	At expiry
T315	When the criteria for radio link failure are fulfilled. The timer is started only if radio bearer(s) that are associated with T315 exist.	When the Cell Update procedure has been completed.	See subclause 8.3.1.14.
T316	When the UE detects "out of service area" in URA_PCH or CELL_PCH state	When the UE detects "in service area".	Initiate cell update procedure if in service area is detected. Otherwise start timer T317, transit to CELL_FACH state and initiate cell update procedure when the UE detects "in service area".
T317	When the T316 expires or when in CELL_FACH state, the UE detects "out of service area".	When the UE detects "in service area".	T317 never expires.
T318	Transmission of RRC CONNECTION REQUEST in case of connection establishment for MBMS reception	Reception of RRC CONNECTION SETUP	Enter idle mode

13.2 Counters for UE

Counter	Reset	Incremented	When reaching max value
V300	When initiating the procedure RRC connection establishment	Upon expiry of T300.	When V300 > N300, the UE enters idle mode.
V302	When initiating the procedure Cell update or URA update	Upon expiry of T302	When V302 > N302 the UE enters idle mode.
V304	When sending the first UE CAPABILITY INFORMATION message.	Upon expiry of T304	When V304 > N304 the UE initiates the Cell update procedure
V308	When sending the first RRC CONNECTION RELEASE COMPLETE message in a RRC connection release procedure.	Upon expiry of T308	When V308 > N308 the UE stops re-transmitting the RRC CONNECTION RELEASE COMPLETE message.
V310	When sending the first PUSCH CAPACITY REQUEST message in a PUSCH capacity request procedure	Upon expiry of T310	When V310 > N310 the UE stops re-transmitting the PUSCH CAPACITY REQUEST message.

13.3 UE constants and parameters

Constant	Usage
N300	Maximum number of retransmissions of the RRC CONNECTION REQUEST message
N302	Maximum number of retransmissions of the CELL UPDATE / URA UPDATE message
N304	Maximum number of retransmissions of the UE CAPABILITY INFORMATION message
N308	Maximum number of retransmissions of the RRC CONNECTION RELEASE COMPLETE
	message
N310	Maximum number of retransmission of the PUSCH CAPACITY REQUEST message
N312	Maximum number of "in sync" received from L1.
N313	Maximum number of successive "out of sync" received from L1.
N315	Maximum number of successive "in sync" received from L1 during T313 is activated.

13.4 UE variables

13.4.ob AM_RLC_ERROR_PENDING_RB234

This variable indicates whether an AM RLC unrecoverable error has been detected during the current cell update procedure on RB 2, 3, or 4.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
AM RLC error pending	MP		Boolean	TRUE means an unrecoverable error was detected on AM RLC during the current cell update procedure Set to FALSE when the cell update procedure is completed.

13.4.oc AM_RLC_ERROR_PENDING_RB5_AND_UP

This variable indicates whether an AM RLC unrecoverable error has been detected during the current cell update procedure on RB 5 or above.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
AM RLC error pending	MP		Boolean	TRUE means an unrecoverable error was detected on AM RLC during the current cell update procedure Set to FALSE when the cell update procedure is completed.

13.4.0 CELL_INFO_LIST

This variable contains cell information on intra-frequency, inter-frequency and inter-RAT cells, as received in messages System Information Block Type 11, System Information Block Type 12, and MEASUREMENT CONTROL.

The first position in Intra-frequency cell info list corresponds to Intra-frequency cell id 0, the second to Intra-frequency cell id 1, etc.

The first position in Inter-frequency cell info list corresponds to Inter-frequency cell id 0, the second to Inter-frequency cell id 1, etc.

The first position in Inter-RAT cell info list corresponds to Intra-frequency cell id 0, the second to Inter-RAT cell id 1, etc.

This variable shall be cleared at cell re-selection, when leaving UTRA RRC connected mode, when switched off as well as at selection of a new PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Intra-frequency cell info	OP	1 <maxcel IMeas></maxcel 			
>CHOICE position status	MP	IIVIOGOZ			
>>Occupied	1011				
>>>Cell info	MP		Cell info 10.3.7.2		
>>Vacant				No data	
Inter-frequency cell info	OP	1 <maxcel IMeas></maxcel 			
>CHOICE position status	MP				
>>Occupied					
>>>Frequency info	MP		Frequency info 10.3.6.36		
>>>Cell info	MP		Cell info 10.3.7.2		
>>Vacant				No data	
Inter-RAT cell info list	OP				REL-5
>Inter-RAT cell info	OP	1 <maxcel IMeas></maxcel 			
>>CHOICE position status	MP				
>>>Occupied					
>>>CHOICE Radio Access Technology					
>>>>GSM					
>>>>>Cell selection and reselection info	MP		Cell selection and re- selection info for SIB11/12 10.3.2.4		
>>>>BSIC	MP		BSIC 10.3.8.2		
>>>>BCCH ARFCN	MP		Integer (01023)	[43]	
>>>>IS-2000					
>>>>System specific measurement info			enumerated (frequency, timeslot, colour code, output power, PN offset)	For IS-2000, use fields from TIA/EIA/IS-2000.5, subclause 3. 7.3.3.2.27, Candidate Frequency Neighbour List Message	
>>>Vacant				No data	
>CHOICE indication status	MP				REL-5
>>Present					REL-5
>>>Inter-RAT cell info indication	OP		Integer (03)		REL-5
>>Not present				No data	REL-5

13.4.00 Void

13.4.0a CELL_UPDATE_STARTED

This variable indicates whether a cell update or URA update procedure is in progress.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Cell update started	MP		Boolean	TRUE means a cell or URA update procedure is in progress. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.1 CIPHERING_STATUS

This variable contains information about the current status of ciphering in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Status for each CN domain	MP	<1 to maxCNDo mains>		
>CN domain identity	MP		CN domain identity 10.3.1.1	
>Status	MP		Enumerated(Not started, Started)	Set to "Not started" when entering UTRA RRC connected mode. Set to "Not started" when leaving UTRA RRC connected mode.
Reconfiguration	MP		Boolean	TRUE means an RRC procedure performing reconfiguration of ciphering is ongoing. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.2 Void

13.4.2a CONFIGURATION_INCOMPLETE

This variable indicates whether a received measurement control message contains invalid an incomplete measurement configuration.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Configuration incomplete	MP		Boolean	TRUE: An incomplete configuration has been detected. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.3 C_RNTI

This variable stores the assigned C-RNTI for this UE when in CELL_FACH state.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
C-RNTI	OP		C-RNTI 10.3.3.8	Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.

13.4.30 DSAC_PARAM

This variable contains Domain Specific Access Restriction Parameters during the connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CS Domain Specific Access Restriction	MP		Domain Access Restriction 10.3.1.3b	This IE contains CS Domain Specific Access Restriction Parameters	REL-6
PS Domain Specific Access Restriction	MP		Domain Access Restriction 10.3.1.3b	This IE contains PS Domain Specific Access Restriction Parameters	REL-6

13.4.3a DSCH_RNTI

In TDD this variable stores the assigned DSCH-RNTI for this UE when in CELL_DCH state.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DSCH-RNTI	OP		DSCH-RNTI 10.3.3.9a	Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.

13.4.4 Void

13.4.40 E_DCH_TRANSMISSION

This variable indicates whether E-DPDCH and E-DPCCH transmission procedures are ongoing. See subclause 8.5.28 for actions related to the setting of this variable.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
E-DCH transmission	MP		Boolean	TRUE: E-DCH transmission is ongoing. Set to FALSE when entering UTRA RRC connected mode when not otherwise stated in the procedure. Set to FALSE when leaving UTRA RRC connected mode.	REL-6

13.4.4a E_RNTI

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Primary E-RNTI	OP		E-RNTI 10.3.3.10a	Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.	REL-6
Secondary E-RNTI	OP		E-RNTI 10.3.3.10a	Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.	REL-6

13.4.5 ESTABLISHED_RABS

This variable is used to store information about the established radio access bearers and signalling radio bearers in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB information	OP	1 to <maxrabs etup></maxrabs 		For each RAB established. Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.
>RAB info	MP		RAB info 10.3.4.8	
>RB information	MP	1 to <maxrbpe r RAB></maxrbpe 		For each RB belonging to the RAB
>>RB identity	MP		RB identity 10.3.4.16	
>>Subflow	MP		Integer(0<	Reference to the RAB subflow

Information Element/Group name	Need	Multi	Type and reference	Semantics description
name			maxSubflow count>)	implemented by this RB
>>RB started	MD		Enumerated(stopped, started)	Default value is started
Signalling radio bearer information	OP	1 to < maxSRBse tup>		In the order of RB0 and upwards. Cleared when leaving UTRA RRC connected mode.
>RB started	MD		Enumerated(stopped, started)	Default value is started

13.4.5a ESTABLISHED_SIGNALLING_CONNECTIONS

This variable is used to store information about established signalling connections.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Signalling connection list	OP	1 to <maxcndo mains></maxcndo 		For each established signalling connection. Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.
>Signalling connection identity	MP		CN domain identity 10.3.1.1	

13.4.6 ESTABLISHMENT_CAUSE

This variable is used to store the cause for establishment of a signalling connection received by upper layers, to be used at RRC connection establishment or Initial Direct Transfer.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Establishment cause	OP		Establishme nt cause 10.3.3.11	Cleared when leaving UTRA RRC connected mode.

13.4.7 FAILURE_CAUSE

This variable contains the cause for failure of a UE initiated procedure, to be reported in a retransmitted message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Failure cause	OP		Failure cause 10.3.3.13	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.8 FAILURE_INDICATOR

This variable indicates whether the procedure has failed for a UE initiated procedure.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Failure indicator	MP		Boolean	TRUE: Procedure has failed. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.80 H_RNTI

This variable stores the assigned H-RNTI for this UE when in CELL-DCH state and a HS-DSCH transport channel has been allocated.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
H-RNTI	OP		H-RNTI 10.3.3.14a	Cleared when entering UTRA RRC connected mode when not otherwise stated in the procedure. Cleared when leaving UTRA RRC connected mode.	REL-5

13.4.800 HS_DSCH_RECEPTION

This variable indicates whether HS-SCCH and HS-DSCH reception procedures are ongoing. See subclause 8.5.25 for actions related to the setting of this variable.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
HS-DSCH reception	MP		Boolean	TRUE: HS-DSCH reception is ongoing. Set to FALSE when entering UTRA RRC connected mode when not otherwise stated in the procedure. Set to FALSE when leaving UTRA RRC connected mode.	REL-5

13.4.8a INCOMPATIBLE_SECURITY_RECONFIGURATION

This variable indicates whether an incompatible simultaneous reconfiguration of a security function has been received.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Incompatible security reconfiguration	MP		Boolean	TRUE: An incompatible simultaneous security reconfiguration has been detected. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.9 INITIAL_UE_IDENTITY

In this variable the identity used by the UE when establishing an RRC connection is stored.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Initial UE identity	OP		Initial UE identity	Cleared when leaving UTRA RRC connected mode.
			10.3.3.15	

13.4.9a INTEGRITY_PROTECTION_ACTIVATION_INFO

This variable contains information to be sent to UTRAN about when a new integrity protection configuration shall be activated in the uplink for signalling radio bearers in case of modification of integrity protection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink Integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.10 INTEGRITY_PROTECTION_INFO

This variable contains information about the current status of the integrity protection in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Status	MP		Enumerated(Not started, Started)	Set to "Not started" when entering UTRA RRC connected mode. Set to "Not started" when leaving UTRA RRC connected mode.
Reconfiguration	MP		Boolean	TRUE means a reconfiguration of integrity protection is ongoing. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.
Signalling radio bearer specific integrity protection information	OP	1 to <maxsrbs etup></maxsrbs 		When integrity protection is started, status information for RB0- RB4 in that order. Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>Uplink RRC HFN	MP		Bit string (28)	

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
>Downlink RRC HFN	MP		Bit string	
			(28)	
>Uplink RRC Message	MP		Integer (0	
sequence number			15)	
>Downlink RRC Message	OP		Integer (0	
sequence number			15)	

13.4.10a INTER_RAT_HANDOVER_INFO_TRANSFERRED

This variable stores information about the inter RAT handover info that has been transferred to another RAT.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			referenc		
Predefined configuration status information	OP		Predefin ed configura tion status informati on 10.3.4.5	Cleared upon entering connected mode in another RAT	
Predefined configuration status information compressed	OP		Predefin ed configura tion status informati on compres sed 10.3.4.5 b	Cleared upon entering connected mode in another RAT	REL-5
UE security information	OP		UE security informati on 10.3.3.4 2b	Cleared upon entering connected mode in another RAT	
UE security information2	OP		UE security informati on2 10.3.3.4 2c	Cleared upon entering connected mode in another RAT	REL-6
UE radio access capability	OP		UE radio access capabilit y 10.3.3.4	Cleared upon entering connected mode in another RAT	
UE radio access capability extension	OP		UE radio access capabilit y extensio n 10.3.3.4 2a	Cleared upon entering connected mode in another RAT	
UE radio access capability compressed	OP		UE radio access capabilit y compres sed 10.3.3.4 20		REL-5
UE system specific capability	OP	1 to <maxsyst emCapab ility></maxsyst 	Inter- RAT UE radio access capabilit y 10.3.8.7	Cleared upon entering connected mode in another RAT	
>Inter-RAT UE radio access capability	MP		Inter- RAT UE radio		

		access capabilit		ì
		у 10.3.8.7		1

13.4.11 INVALID_CONFIGURATION

This variable indicates whether a received message contained an invalid configuration, by means of invalid values or invalid combinations of information elements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Invalid configuration	MP		Boolean	TRUE: An invalid configuration has been detected. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.11a LATEST_CONFIGURED_CN_DOMAIN

This variable stores the CN-domain that was most recently configured to be used for ciphering and integrity protection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Latest configured CN domain	OP		CN domain identity 10.3.1.1	Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure. Cleared when leaving UTRA RRC connected mode.

13.4.11b LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE

This variable stores the SRB delay and PC preamble to be used for establishing the DPCH after failure of hard handover, inter-RAT handover from UTRAN, or cell change order from UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SRB delay	OP		Integer (07)	Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure.
PC preamble	OP		Integer (07)	Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure.

13.4.11c MBMS_ACTIVATED_services

This variable stores the MBMS multicast services the UE has joined as well as the MBMS broadcast services the UE is interested to receive. Whenever the list of joined multicast services and/ or interested broadcast services changes, upper layers provide an indication upon which the UE shall update the variable accordingly.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activated service list	OP	1 to <maxmbm S- Services></maxmbm 		
>Service Identity	MP		MBMS Service identity 10.3.9a.8	
>Service type	MP		Enumerated (Multicast, Broadcast)	

13.4.11d MBMS_PREV_FREQUENCY_INFO

This variable stores the frequency information of the cell the UE is camped on, upon moving to the MBMS preferred layer indicated MBMS FLC preferred frequency information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
PREV Frequency Information					
CHOICE mode					
>FDD cell					
>>UARFCN downlink (Nd)	MP		Integer(0 16383)	[21]	
>3.84 Mcps TDD cell			·		
>>UARFCN (Nt)	MP		Integer(0 16383)	[22]	
>1.28 Mcps TDD cell list					
>>UARFCN (Nt)	MP		Integer(0 16383)	[22]	

13.4.12 MEASUREMENT_IDENTITY

This variable stores the measurements configured in the UE. For each configured measurement, the information below shall be stored.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
MEASUREMENT CONTROL	OP		MEASUREM ENT CONTROL 10.2.17, System Information	Information as contained in these messages. Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure (8.4.1.8-8.4.1.9).
			Block type 11 10.2.48.8.12, System Information Block type 12 10.2.48.8.13	Cleared when leaving UTRA RRC connected mode when not stated otherwise in the procedure (8.4.1.9a).

13.4.13 Void

13.4.14 ORDERED_RECONFIGURATION

This variable stores information about an ongoing Reconfiguration procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ordered reconfiguration	MP		Boolean	TRUE means that a Reconfiguration procedure is ongoing. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.14a PDCP_ROHC_TARGET_MODE

This variable contains the ROHC target mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Target Mode	OP		Enumerated (O-mode, R- mode)	The UE shall only transit to the signalled mode for operation of ROHC as decribed in [36].	REL-5

13.4.15 PDCP_SN_INFO

This variable contains PDCP receive sequence numbers for one or several radio bearers to be included in a response message to UTRAN.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
RB with PDCP information list	OP	1 to <maxrball RABs></maxrball 		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

13.4.15a PHYSICAL_SHARED_CHANNEL_CONFIGURATION

This variable is used only for TDD to store information about the physical shared channel configuration in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PUSCH configuration	OP			Cleared when entering and leaving UTRA RRC connected mode.
>PUSCH info	MP		PUSCH info 10.3.6.63	
>PUSCH Identity	OP		Integer(1 hiPUSCHide ntities)	
>PUSCH power control info	OP		PUSCH power control info 10.3.6.65	
PDSCH configuration	ОР			Cleared when entering and leaving UTRA RRC connected mode.
>PDSCH Info	MP		PDSCH Info 10.3.6.44	
>PDSCH Identity	OP		Integer(1hi PDSCHident ities)	
>PDSCH power control info	OP		PDSCH power control info 10.3.6.45	
ISCP Timeslot list	OP	1 to maxTS		Cleared when entering and leaving UTRA RRC connected mode.
>Timeslot number	MP		Timeslot number 10.3.6.84	Timeslot numbers, for which the UE shall report the timeslot ISCP in PUSCH CAPACITY REQUEST message

13.4.16 PROTOCOL_ERROR_INDICATOR

This variable indicates whether there exist a protocol error that is to be reported to UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error indicator	MP		Protocol error indicator 10.3.3.27	Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.17 PROTOCOL_ERROR_INFORMATION

This variable contains diagnostics to be reported to UTRAN for a message that was not completely understood.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Protocol error information	OP		Protocol	Cleared when entering UTRA
			error	RRC connected mode.
			information	Cleared when leaving UTRA
			10.3.8.12	RRC connected mode.

13.4.18 PROTOCOL_ERROR_REJECT

This variable indicates whether there has occurred a severe protocol error causing the ongoing procedure to fail.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error reject	MP		Boolean	TRUE: a severe protocol error has occurred. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.19 RB_TIMER_INDICATOR

This variable contains information to be sent to UTRAN if any of the timers T314 or T315 has expired when the UE sends a cell update with cause RL failure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB timer indicator	OP		RB timer indicator 10.3.3.28	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.20 RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO

This variable contains information to be sent to UTRAN about when a new ciphering configuration shall be activated in the uplink for radio bearers using RLC-AM or RLC-UM.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.20a SECURITY_MODIFICATION

This variable contains information on which CN domain is affected by the ongoing security reconfiguration.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Status for each CN domain	MP	<1 to maxCNDo mains>		
>CN domain identity	MP		CN domain identity 10.3.1.1	
>Status	MP		Enumerated(Affected, Not Affected)	

13.4.21 Void

13.4.22 START_THRESHOLD

This variable contains information about the maximum allowed value of the START for a CN domain.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
THRESHOLD	OP		Integer (01048576)	20 bits. Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure. Cleared when leaving UTRA
				RRC connected mode.

13.4.23 START_VALUE_TO_TRANSMIT

This variable contains the value of START for new radio bearer(s) to be transmitted in a response message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
START	OP		START 10.3.3.38	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.24 TFC_SUBSET

This variable contains information about the TFC subset(s) applicable to the UE.

Information	Need	Multi	Type and	Semantics description	Version
Element/Group name			reference		
CHOICE mode	MP				
>FDD					
>>Current TFC subset	MP		Transport Format Combinati on Subset 10.3.5.22	Set to "Full transport format set" when entering UTRA RRC connected mode when not stated otherwise in the procedure.	
>>Duration	OP		TFC Control duration 10.3.6.80	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	
>>Default TFC subset	OP		Transport Format Combinati on Subset 10.3.5.22	The TFC subset to go back to when any temporary limitation is released. Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	
>>TFC subset list	MP	1 to <maxtf Csub></maxtf 			REL-4
>>>TFC subset	MP		Transport Format Combinati on Subset 10.3.5.22		REL-4
>TDD	145			0 7500: / :	
>>TFCS list	MP	1 to < maxCCT rCH >		One TFCS is created when entering UTRA RRC connected mode when not stated otherwise in the procedure.	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
>>>TFCS identity	MP		Transport Format Combinati on Set Identity 10.3.5.21	"TFCS ID" is set to 1 when entering UTRA RRC connected mode when not stated otherwise in the procedure. "Shared channel indicator" is set to FALSE when entering UTRA RRC connected mode when not stated otherwise in the procedure.	
>>>Current TFC subset	MP		Transport Format Combinati on Subset 10.3.5.22	Set to "Full transport format set" when entering UTRA RRC connected mode when not stated otherwise in the procedure.	
>>>>Duration	OP		TFC Control duration 10.3.6.80	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	
>>>Default TFC subset	OP		Transport Format Combinati on Subset 10.3.5.22	The TFC subset to go back to when any temporary limitation is released. Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	
>>TFC subset list	MP	1 to <maxtf Csub2></maxtf 			REL-4
>>>TFCS identity	MP		Transport Format Combinati on Set Identity 10.3.5.21		REL-4
>>>TFC subset	MP		Transport Format Combinati on Subset 10.3.5.22		REL-4

13.4.25 TGPS_IDENTITY

This variable contains the configuration parameters of all the configured compressed mode transmission gap pattern sequences.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission gap pattern sequence	OP	1 to <maxtgp S></maxtgp 		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>TGPSI	MP		TGPSI 10.3.6.82	
>TGPS Status Flag	MP		Enumerated(activate, deactivate)	This flag indicates whether the Transmission Gap Pattern Sequence shall be activated or

			deactivated.
> Current TGPS Status Flag	MP	Enumerated(active, inactive)	This flag indicates the current status of the Transmission Gap Pattern Sequence, whether it is active or inactive
>TGCFN	CV-Active	Integer (0255)	Connection Frame Number of the first frame of the first pattern within the Transmission Gap Pattern Sequence.
>Transmission gap pattern sequence configuration parameters	MP		Information as contained in the IE group "Transmission gap pattern sequence configuration parameters" in IE "DPCH compressed mode info" 10.3.6.33.

Condition	Explanation
Active	This IE is mandatory present when the value of the IE "TGPS Status Flag" is "Activate" and not needed otherwise.

13.4.26 TGSN_REPORTED

This variable specifies whether an IE "Proposed TGSN" was reported to the UTRAN

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Proposed TGSN reported	MP		Boolean	Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.26a TIMERS_AND_CONSTANTS

This variable contains the values for all timers and constants used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE Timers and constants in connected mode	MD		UE Timers and constants in connected mode 10.3.3.43	Default value means that for all timers and constants - for parameters with need MD, the defaults specified in 10.3.3.43 apply and - for parameters with need OP, the parameters are absent. All parameters are set to the default value when leaving UTRA RRC connected mode to another RAT.

13.4.27 TRANSACTIONS

This variable stores the identifications of the ongoing RRC procedure transactions.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Accepted transactions	OP	1 to <maxtrans actions></maxtrans 		Cleared when leaving UTRA RRC connected mode.
>Message type	MP		Message Type	
>RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Rejected transactions	OP	1 to <maxtrans actions></maxtrans 		Cleared when leaving UTRA RRC connected mode.
>Message type	MP		Message Type	
>RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	

13.4.27aTRIGGERED_1A_EVENT

This variable contains information about a 1a event that has been triggered in the UE. There is one such variable per 1a event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting
Cells recently triggered	OP	1 to < maxCellMe as>		
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting
Periodical reporting running	MP		Boolean	

13.4.27bTRIGGERED_1B_EVENT

This variable contains information about a 1b event that has been triggered in the UE. There is one such variable per 1b event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Cells triggered	OP	1 to < maxCell Meas>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	
>primary CPICH	MP		Primary CPICH info 10.3.6.60		
>sent reports	MP		Integer(1 Infinity)	Number of reports sent to UTRAN in case of event triggered periodical reporting	REL-5
Cells recently triggered	ОР	1 to < maxCell Meas>			REL-5
>primary CPICH	MP		Primary CPICH info 10.3.6.60		REL-5
>sent reports	MP		Integer(1 Infinity)	Number of reports sent to UTRAN in case of event triggered periodical reporting.	REL-5
Periodical reporting running	MP		Boolean		REL-5

13.4.27c TRIGGERED_1C_EVENT

This variable contains information about a 1c event that has been triggered in the UE. There is one such variable per 1c event configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Cells triggered	OP	1 to < maxCellMe as>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting
Cells recently triggered	OP	1 to < maxCellMe as>		
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting
Periodical reporting running	MP		Boolean	

13.4.27d BEST_CELL_1D_EVENT

This variable contains information about a 1d event that has been triggered in the UE. There is one such variable per 1d event configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Best cell	OP		Primary	Cleared when entering UTRA
			CPICH info	RRC connected mode.
			10.3.6.60	Cleared when leaving UTRA
				RRC connected mode.

13.4.27e TRIGGERED_1E_EVENT

This variable contains information about a 1e event that has been triggered in the UE. There is one such variable per 1e event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
Cells recently triggered	OP	1 to < maxCellMe as>		
>primary CPICH	MP		Primary CPICH info 10.3.6.60	

13.4.27f TRIGGERED_1F_EVENT

This variable contains information about a 1f event that has been triggered in the UE. There is one such variable per 1f event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
>primary CPICH	MP		Primary CPICH info 10.3.6.60	
Cells recently triggered	OP	1 to < maxCellMe as>		
>primary CPICH	MP		Primary CPICH info 10.3.6.60	

13.4.27f1 TRIGGERED_1G_EVENT

This variable contains information about a 1g event that has been triggered in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		
>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	

13.4.27f2 TRIGGERED_1H_EVENT

This variable contains information about a 1h event that has been triggered in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		
>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	

13.4.27f3 TRIGGERED_1I_EVENT

This variable contains information about a 1i event that has been triggered in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cells triggered	OP	1 to < maxCellMe as>		
>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	

13.4.27f4 BEST_FREQUENCY_2A_EVENT

This variable contains information about a 2a event that has been configured in the UE. There is one such variable per 2a event configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Best frequency	MP		Frequency	
			info	
			10.3.6.36	

13.4.27f5 TRIGGERED_2B_EVENT

This variable contains information about a 2b event that has been configured in the UE. There is one such variable per 2b event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Frequency triggered	OP	1 to < maxCellMe as>		
>Frequency	MP	Frequency info 10.3.6.36		

13.4.27f6 TRIGGERED_2C_EVENT

This variable contains information about a 2c event that has been configured in the UE. There is one such variable per 2c event configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Frequency triggered	OP	1 to <		
		maxCellMe		
		as>		
>Frequency	MP	Frequency		
		info		
		10.3.6.36		

13.4.27f7 TRIGGERED_2D_EVENT

This variable contains information about a 2d event that has been configured in the UE. There is one such variable per 2d event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f8 TRIGGERED_2E_EVENT

This variable contains information about a 2e event that has been configured in the UE. There is one such variable per 2e event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Frequency triggered	OP	1 to < maxCellMe as>		
>Frequency	MP	Frequency info 10.3.6.36		

13.4.27f9 TRIGGERED_2F_EVENT

This variable contains information about a 2f event that have been configured in the UE. There is one such variable per 2f event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f10 TRIGGERED_3A_EVENT

This variable contains information about a 3a event that has been configured in the UE. There is one such variable per event 3a configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE system	OP			
>GSM				
>>CHOICE BSIC	MP			
>>>Verified BSIC		0 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>>>Inter-RAT cell id	MP		Integer(0<	
			maxCellMea	
			s>-1)	
>>>Non verified BSIC		0 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>>>BCCH ARFCN	MP		Integer	
			(01023)	

13.4.27f11 TRIGGERED_3B_EVENT

This variable contains information about a 3b event that has been configured in the UE. There is one such variable per event 3b configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE system	OP			
>GSM				
>>CHOICE BSIC	MP			
>>>Verified BSIC		0 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>>>Inter-RAT cell id	MP		Integer(0< maxCellMea s>-1)	
>>>Non verified BSIC		0 to <maxcellm eas></maxcellm 	05 T)	
>>>>BCCH ARFCN	MP		Integer (01023)	

13.4.27f12 TRIGGERED_3C_EVENT

This variable contains information about a 3c event that has been configured in the UE. There is one such variable per event 3c configured in the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
CHOICE system	OP			
>GSM				
>>CHOICE BSIC	MP			
>>>Verified BSIC		0 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>>>>Inter-RAT cell id	MP		Integer(0<	
			maxCellMea	
			s>-1)	
>>>Non verified BSIC		0 to		
		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>>>>BCCH ARFCN	MP		Integer	
			(01023)	

13.4.27f13 BEST_CELL_3D_EVENT

This variable contains information about a 3d event that has been configured in the UE. There is one such variable per event 3a configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE system				
>GSM				
>>CHOICE BSIC	MP			
>>>Verified BSIC				
>>>>Inter-RAT cell id	MP		Integer(0< maxCellMea s>-1)	
>>>Non verified BSIC				
>>>BCCH ARFCN	MP		Integer (01023)	

13.4.27f14 TRIGGERED_6A_EVENT

This variable contains information about a 6a event that has been configured in the UE. There is one such variable per 6a event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f15 TRIGGERED_6B_EVENT

This variable contains information about a 6b event that has been configured in the UE. There is one such variable per 6b event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f16 TRIGGERED_6C_EVENT

This variable contains information about a 6c event that has been configured in the UE. There is one such variable per 6c event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f17 TRIGGERED 6D EVENT

This variable contains information about a 6d event that has been configured in the UE. There is one such variable per 6d event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f18 TRIGGERED_6E_EVENT

This variable contains information about a 6e event that has been configured in the UE. There is one such variable per 6e event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered	OP		Boolean	

13.4.27f19 TRIGGERED_6F_EVENT

This variable contains information about a 6f event that has been configured in the UE. There is one such variable per 6f event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
CHOICE mode					
>FDD					
Event triggered_RL	OP	<maxrl< td=""><td>Boolean</td><td></td><td></td></maxrl<>	Boolean		
		>			
>1.28 Mcps TDD					REL-4
>>T _{ADV}	MP		TADV info		REL-4
			10.3.7.11		
			2		

13.4.27f20 TRIGGERED_6G_EVENT

This variable contains information about a 6g event that has been configured in the UE. There is one such variable per 6g event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Event triggered_RL	OP	<maxrl></maxrl>	Boolean	

13.4.27f21 TRIGGERED_1J_EVENT

This variable contains information about a 1j event that has been triggered in the UE. There is one such variable per 1j event configured in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
Cells triggered	OP	1 to < maxCellMe as>		Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.	REL-6
>primary CPICH	MP		Primary CPICH info 10.3.6.60		REL-6
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting	REL-6
Cells recently triggered	OP	1 to < maxCellMe as>			REL-6
>primary CPICH	MP		Primary CPICH info 10.3.6.60		REL-6
>sent reports	MP		Integer(1Inf inity)	Number of reports sent to UTRAN in case of event triggered periodical reporting	REL-6
Periodical reporting running	MP		Boolean		REL-6

13.4.27g UE_CAPABILITY_REQUESTED

This variable stores information about the UE capabilities that have been requested by UTRAN but that have not yet been transferred to UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE radio access capability	OP		UE radio access capability 10.3.3.42	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
UE radio access capability extension	OP		UE radio access capability extension 10.3.3.42a	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.
UE system specific capability	OP	1 to < maxInterSy sMessages >		
>Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability 10.3.8.7	Includes inter-RAT classmark. Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.28 UE_CAPABILITY_TRANSFERRED

This variable stores information about which UE capabilities that have been transferred to UTRAN.

Information Element/Group	Need	Multi	Type and	Semantics description	Version
name			reference		
UE radio access capability	OP		UE radio	Cleared when entering UTRA	
			access	RRC connected mode when	
			capability	not stated otherwise in the	

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
			10.3.3.42	procedure. Cleared when leaving UTRA RRC connected mode.	
UE radio access capability extension	OP		UE radio access capability extension 10.3.3.42a	Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure. Cleared when leaving UTRA RRC connected mode.	
UE system specific capability	OP	1 to <maxsyste mCapabilit y></maxsyste 			
>Inter-RAT UE radio access capability	МР		Inter-RAT UE radio access capability 10.3.8.7	Includes inter-RAT classmark. Cleared when entering UTRA RRC connected mode when not stated otherwise in the procedure. Cleared when leaving UTRA RRC connected mode.	
UE radio access capability compressed	OP		UE radio access capability compressed 10.3.3.42o		REL-5
Security capability	OP		Security capability 10.3.3.37		REL-5

13.4.28a UE_POSITIONING_GPS_DATA

Information Element/Group name	Need	Multi	Type and reference	Semantics description
GPS Data ciphering info	OP		UE positioning Ciphering info 10.3.7.86	
GPS Deciphering Keys	OP			
>Current deciphering key	MP		Bit string(56)	
>Next deciphering key	MP		Bit string(56)	
UE positioning GPS reference time	OP		UE positioning GPS reference time 10.3.7.96	
UE positioning GPS reference UE position	OP		Ellipsoid point with altitude and uncertainty ellipsoid 10.3.8.4c	A priori knowledge of UE 3-D position.
UE positioning GPS DGPS corrections	OP		UE positioning GPS DGPS corrections 10.3.7.91	
UE positioning GPS navigation model	OP	1 to <maxsat></maxsat>		
>SatID	MP		Enumerated(Satellite ID

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			063)	
>GPS Ephemeris and Clock Correction parameters	MP		UE positioning GPS Ephemeris and Clock Correction parameters 10.3.7.91a	
UE positioning GPS ionospheric model	OP		UE positioning GPS ionospheric model 10.3.7.92	
UE positioning GPS UTC model	OP		UE positioning GPS UTC model 10.3.7.97	
UE positioning GPS almanac	OP			
>SatID	MP	1 to <maxsatal manacStor age></maxsatal 		
>>WN _a	MP	ugor		Same as IE in 10.3.7.89
>>DataID	MP			Same as IE in 10.3.7.89
>>e	MP			Same as IE in 10.3.7.89
>>t _{oa}	MP			Same as IE in 10.3.7.89
	MP			Same as IE in 10.3.7.89
>>OMEGADOT	MP			Same as IE in 10.3.7.89
>>SV Health	MP			Same as IE in 10.3.7.89
>>A ^{1/2}	MP			Same as IE in 10.3.7.89
>>OMEGA ₀	MP			Same as IE in 10.3.7.89
>>M ₀	MP			Same as IE in 10.3.7.89
>>ω	MP			Same as IE in 10.3.7.89
>>af ₀	MP			Same as IE in 10.3.7.89
>>af ₁	MP			Same as IE in 10.3.7.89
>SV Global Health	OP			Same as IE in 10.3.7.89
UE positioning GPS acquisition assistance	OP		UE positioning GPS acquisition assistance 10.3.7.88	
UE positioning GPS real-time integrity	OP		UE positioning GPS real-time integrity 10.3.7.95	

13.4.28b UE_POSITIONING_OTDOA_DATA_UE_ASSISTED

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
UE positioning OTDOA	OP		UE	
reference cell info for UE-			positioning	
assisted			OTDOA	
			reference	
			cell info	
			10.3.7.108	
UE positioning OTDOA	OP	1 to		
neighbour cell list for UE-		<maxcellm< td=""><td></td><td></td></maxcellm<>		
assisted		eas>		
>UE positioning OTDOA	MP		UE	
neighbour cell info for UE-			positioning	
assisted			OTDOA	
			neighbour	
			cell info	
			10.3.7.106	

13.4.28c UE_POSITIONING_OTDOA_DATA_UE_BASED

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
OTDOA Deciphering Keys	OP			
>Current deciphering key	MP		Bit string(56)	
>Next deciphering key	MP		Bit string(56)	
OTDOA Data ciphering info	OP		UE	
			positioning	
			Ciphering	
			info	
			10.3.7.86	
UE positioning OTDOA	OP		UE	
reference cell info for UE-based			positioning	
			OTDOA	
			reference	
			cell info for	
			UE-based	
			10.3.7.108a	
UE positioning OTDOA	OP	1 to		
neighbour cell list for UE-based		<maxcellm< td=""><td></td><td></td></maxcellm<>		
		eas>		
>UE positioning OTDOA	MP		UE	
neighbour cell info for UE-based			positioning	
			OTDOA	
			neighbour	
			cell info for	
			UE-based	
			10.3.7.106	

13.4.29 UNSUPPORTED_CONFIGURATION

This variable indicates whether a received message contained a configuration that is not supported by the UE.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
Unsupported configuration	MP		Boolean	TRUE: An unsupported configuration has been detected. Set to FALSE when entering UTRA RRC connected mode. Set to FALSE when leaving UTRA RRC connected mode.

13.4.30 URA_IDENTITY

This variable stores the assigned URA identity for this UE when in URA_PCH state.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA identity	OP		URA identity 10.3.2.6	Cleared when entering UTRA RRC connected mode. Cleared when leaving UTRA RRC connected mode.

13.4.31 U_RNTI

This variable stores the assigned U-RNTI for this UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
U-RNTI	OP		U-RNTI 10.3.3.47	Cleared when leaving UTRA RRC connected mode.

13.4.32 VALUE_TAG

This variable contains information about the value tag for the last received system information block of a given type, for all system information blocks using value tags. The UE shall maintain one instance of this variable for the current selected cell. The UE may store several instances of this variable, one for each cell, to be used if the UE returns to these cells.

All IEs in this variable shall be cleared when switched off. All IEs in this variable except for the IE "SIB 16 value tag list" shall be cleared at selection of a new cell and this cell broadcasts an IE "PLMN Identity" in the MIB which is different from the IE "PLMN Identity" broadcast in the MIB in the previously selected cell. The IE "SIB 16 value tag list" is cleared when NAS informs AS about a new selected PLMN.

Information Element/Group	Need	Multi	Type and	Semantics description
name			reference	
MIB value tag	OP		MIB value	Value tag for the master
			tag 10.3.8.9	information block
SB 1 value tag	OP		Cell value	Value tag for the scheduling
			tag 10.3.8.4	block type 1
SB 2 value tag	OP		Cell value	Value tag for the scheduling
-			tag 10.3.8.4	block type 2
SIB 1 value tag	CV-GSM		PLMN value	Value tag for the system
			tag 10.3.8.10	information block type 1
SIB 2 value tag	OP		Cell value	Value tag for the system
			tag 10.3.8.4	information block type 2
SIB 3 value tag	OP		Cell value	Value tag for the system
			tag 10.3.8.4	information block type 3
SIB 4 value tag	OP		Cell value	Value tag for the system
			tag 10.3.8.4	information block type 4
SIB 5 value tag	OP		Cell value	Value tag for the system
			tag 10.3.8.4	information block type 5 or
				5bis

SIB 6 value tag OP CHOICE mode >FDD SIB 11 value tag OP Cell value tag 10.3.8.4 information block type 6 CHOICE mode >FDD SIB 11 value tag OP Cell value tag 10.3.8.4 value tag OP Cell value tag 10.3.8.4 value tag CV-ANSI SIB 13 value tag CV-ANSI SIB 13.1 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.5 value tag CV-ANSI SIB 13.5 value tag CV-ANSI SIB 13.5 value tag CV-ANSI SIB 15.1 value tag OP Cell value tag 10.3.8.4 value tag	Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode MP SPDD > TDD SPDD > TDD SPDD > TDD SB 11 value tag		OP		Cell value	
SPDD SIB 11 value tag	CHOICE mode	MP		lag 10.3.6.4	Information block type 6
SIB 11 value tag					
SIB 11 value tag OP Cell value tag 10.3.8.4 SIB 12 value tag OP Cell value tag 10.3.8.4 SIB 13 value tag CV-ANSI SIB 13 value tag CV-ANSI SIB 13.1 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.8 value tag CV-ANSI SIB 15 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 SIB 15 value tag OP Cell value tag 10.3.8.4 SIB 15.2 value tag OP Cell value tag 10.3.8.4 SIB 15.2 value tag OP Cell value tag 10.3.8.4 SIB 15.2 value tag OP Cell value tag 10.3.8.4 SIB 15.3 value tag OP Cell value tag 10.3.8.4 SIB 15.3 value tag MP Cell value tag 10.3.8.4 SIB 15.3 value tag MP Cell value tag 10.3.8.4 SIB 15.2 value tag MP Cell value tag 10.3.8.4 SIB 15.3 value tag MP Cell value tag 10.3.8.4 SIB 15.4 value tag OP 1 to coccurrence identity and value tag 10.3.8.20b SIB 15.3 value tag MP SIB SIB 15.3 value tag MP SIB 15.4 value tag OP Cell value tag 10.3.8.20b List of value tag for the system information block type 15.3 SIB 15.5 value tag NP SIB 15.5 value tag MP SIB SIB 15.5 value tag OP Cell value tag 10.3.8.20b List of value tag for the system information block type 15.3 SIB 15.4 value tag NP SIB SIB 15.5 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.3 SIB 15.5 value tag NP Value tag for the system information block type 15.2 List of value tag for all stored occurrences of system information block type 15.3 SIB 15.5 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.3 SIB 15.5 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.3 List of value tag for the system information block type 15.5 SIB 15.6 value tag OP The defined configuration identity and value tag 10.3.8.11 Value tag for the system information block typ					(no data)
SIB 12 value tag OP Cell value tag 10.3.8.4 information block type 12 SIB 13 value tag CV-ANSI SIB 13.1 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 information block type 13.1 value tag 10.3.8.4 information block type 13.2 value tag for the system information block type 13.2 value tag for the system information block type 13.2 value tag for the system information block type 15.3 value tag for the system information block type 15.2 value tag for the system information block type 15.2 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for all stored occurrence identity and value tag 10.3.8.2 value tag for all stored occurrence identity and value tag 10.3.8.2 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for all stored occurrence identity and value tag 10.3.8.4 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for the system information block type 15.3 value tag for the system information		OP			Value tag for the system
SIB 13 value tag CV-ANSI SIB 13.1 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 tag 10.3.8.4 value tag for the system information block type 13.2 value tag for the system information block type 13.3 value tag for the system information block type 13.3 value tag 10.3.8.4 SIB 15.1 value tag OP 1 to call value tag 10.3.8.4 Value tag for the system information block type 13.2 value tag for the system information block type 13.3 value tag 10.3.8.4 Value tag for the system information block type 15.3 SIB 15.2 value tag list OP 1 to call value tag 10.3.8.4 Value tag for the system information block type 15.1 List of value tag for the system information block type 15.2 SIB 15.2 value tag list OP 1 to call value tag 10.3.8.4 Value tag for the system information block type 15.2 SIB 15.3 value tag list OP 1 to call value tag 10.3.8.4 Value tag for the system information block type 15.2 SIB 15.3 value tag list occurrence identity and value tag 10.3.8.20b SIB 15.3 value tag list OP 1 to call value tag 10.3.8.4 Value tag for the system information block type 15.3 SIB 15.4 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.3 Value tag for all stored occurrence identity and value tag 10.3.8.20b Value tag for the system information block type 15.3 Value tag for all stored occurrence identity and value tag 10.3.8.20b Value tag for the system information block type 15.5 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4	CIP 12 value tog	OB			
SIB 13 value tag CV-ANSI SIB 13.1 value tag CV-ANSI SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 tag 10.3.8.4 value tag for the system information block type 13.2 value tag for the system information block type 13.2 value tag for the system information block type 13.3 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 13.3 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 13.4 value tag for the system information block type 15.4 value tag for the system information block type 15.2 SIB 15.2 value tag MP Cell value tag 10.3.8.4 Value tag for the system information block type 15.2 SIB 15.2 value tag Value tag for the system information block type 15.3 SIB 0ccurrence identity and value tag 10.3.8.20b SIB 15.3 value tag MP SIB SIB 15.3 value tag MP PLMN value tag 10.3.8.10 value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the syst	SIB 12 value tag	OP .			
tag 10.3.8.4 Information block type 13	SIB 13 value tag	CV-ANSI			
SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 information block type 13.2 Value tag for the system information block type 13.3 SIB 15 value tag OP Cell value tag 10.3.8.4 information block type 13.3 SIB 15.1 value tag OP Cell value tag for the system information block type 13.4 Value tag for the system information block type 13.4 Value tag for the system information block type 15.1 SIB 15.2 value tag list OP 1 to	G				information block type 13
SIB 13.2 value tag CV-ANSI SIB 13.3 value tag CV-ANSI Cell value tag 10.3.8.4 Value tag for the system information block type 13.2 Value tag for the system information block type 13.2 Value tag for the system information block type 13.3 Value tag for the system tag 10.3.8.4 information block type 13.4 Value tag for the system tag 10.3.8.4 information block type 13.4 Value tag for the system information block type 13.4 Value tag for the system information block type 13.4 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for all stored occurrences of system information block type 15.2 Value tag for all stored occurrences of system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information bl	SIB 13.1 value tag	CV-ANSI			
SIB 13.3 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag CV-ANSI SIB 15 value tag CP CP CP CP Value tag for the system information block type 13.4 value tag 10.3.8.4 value tag for the system information block type 15.4 value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.10 value tag 10.3.8.20b value tag 10.3.8.20b value tag 10.3.8.20b value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.4 value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.4 value tag 10.3.8.20b value tag 10.3.8.4	SIB 13.2 value tag	CV-ANSI		Cell value	Value tag for the system
SIB 13.4 value tag CV-ANSI SIB 13.4 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 13.4 Value tag for the system information block type 15.4 Cell value tag 10.3.8.4 Value tag for the system information block type 15.1 SIB 15.1 value tag OP 1 to cell value tag 10.3.8.4 SIB 15.2 value tag list OP 1 to cmaxSat> Cell value tag for the system information block type 15.1 SIB 15.2 value tag list OP 1 to cmaxSat> Cell value tag 10.3.8.4 SIB occurrence identity and value tag SIB 15.3 value tag list OP 1 to cmaxSat> SIB 15.3 value tag MP PLMN value tag 10.3.8.10 SIB occurrence identity and value tag 10.3.8.20b SIB 15.3 value tag MP PLMN value tag 10.3.8.10 SIB occurrence identity and value tag 10.3.8.20b SIB 15.5 value tag OP Cell value tag 10.3.8.20b Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 SIB 15.3 value tag OP Cell value tag 10.3.8.20b SIB 15.4 value tag OP Cell value tag 10.3.8.20b SIB 15.5 value tag OP Cell value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag iist OP 1 to cmaxPred efConfig> Predefined configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value value tag for the system information block type 15.5 SIB 18 value tag or the system information block type 15.5 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5	CID 40 0 value to a	CV ANCI			
SIB 13.4 value tag CV-ANSI SIB 15 value tag OP Cell value tag 10.3.8.4 information block type 13.4 information block type 15.4 Value tag for the system information block type 15.1 Value tag 10.3.8.4 information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag so for all stored occurrence of system information block type 15.2 Value tag SIB 15.2 value tag MP Cell value tag 10.3.8.4 SIB occurrence identity and value tag 10.3.8.20b SIB 15.3 value tag MP PLMN value tag 10.3.8.10 Value tag for the system information block type 15.3 SIB occurrence identity and value tag 10.3.8.20b SIB 15.4 value tag OP Cell value tag Cell value tag 10.3.8.20b Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.5 Value tag 10.3.8.20b SIB 15.4 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.4 Value tag 10.3.8.4 Value tag for the system information block type 15.5 Value tag 10.3.8.4 Value tag for the system information block type 15.5 Value tag 10.3.8.4 Value tag for the system information block type 15.5 Value tag 10.3.8.4 Value tag for the system information block type 16 Value tag 10.3.8.1 Value tag for the system information block type 16 Value tag 10.3.8.1 Value tag for the system information block type 16 Value tag 10.3.8.1 Value tag for the system information block type 16 Value tag 10.3.8.1 Value tag 10.3.8.1 Value tag for the system information block type 16 Value tag 10.3.8.1 Value tag for the system information block t	SiB 13.3 value tag	CV-ANSI			
SIB 15 value tag OP Cell value tag 10.3.8.4 Value tag for the system tag 10.3.8.4 Value tag for the system information block type 13.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.1 Value tag for the system information block type 15.1 Value tag for the system information block type 15.2 SIB 15.2 value tag MP Cell value tag 10.3.8.4 SIB 0ccurrence identity and value tag Value tag 10.3.8.4 SIB 0ccurrence identity and value tag Value tag 10.3.8.4 SIB 15.3 value tag Value tag for the system information block type 15.2 List of value tags for all stored occurrences of system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.5 Value tag for the system information block type 15.5 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system in	SIB 13.4 value tag	CV-ANSI			
SIB 15.1 value tag OP Cell value tag 10.3.8.4 SIB 15.2 value tag list OP 1 to	S			tag 10.3.8.4	information block type 13.4
SIB 15.1 value tag OP Cell value tag 10.3.8.4 SIB 15.2 value tag list OP 1 to <maxsat> Cell value tag 10.3.8.4 SIB 15.2 value tag MP Cell value tag 10.3.8.4 SIB occurrence identity and value tag SIB 15.3 value tag MP SIB 15.3 value tag list OP 1 to <maxsat> Cell value tag 10.3.8.4 SIB 0ccurrence identity and value tag 10.3.8.20b SIB 15.3 value tag MP PLMN value tag 10.3.8.10 SIB 0ccurrence identity and value tag SIB 0ccurrence identity and value tag SIB 15.3 value tag MP PLMN value tag for the system information block type 15.2 Value tag for all stored occurrence occurrence occurrence occurrence occurrence occurrence identity and value tag SIB 0ccurrence identity and value tag SIB 0ccurrence identity and value tag SIB 0ccurrence identity and value tag Cell value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.3 Value tag for the system information block type 15.4 Value tag for the system information block type 15.5 Value tag for the system information block type 15.5 Value tag for the system information block type 15.5 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Value tag for the system information block type 16.9 Va</maxsat></maxsat>	SIB 15 value tag	OP			
tag 10.3.8.4 information block type 15.1	CID 45 4 value to 5	OD			Information block type 15
SIB 15.2 value tag list OP 1 to	SIB 15.1 value tag	UP			
SIB 15.2 value tag	SIB 15.2 value tag list	OP	1 to	tag 10.0.0.4	List of value tags for all stored
SIB 15.2 value tag MP Cell value tag 10.3.8.4 SIB occurrence identity and value tag 10.3.8.20b SIB 15.3 value tag list OP 1 to			<maxsat></maxsat>		occurrences of system
SIB occurrence identity and value tag SIB 15.3 value tag list OP 1 to <maxsat> SIB 15.3 value tag list OP PLMN value tag 10.3.8.10 SIB 0ccurrence identity and value tag for all stored occurrences of system information block type 15.3 SIB 15.3 value tag MP PLMN value tag 10.3.8.10 Value tag for the system information block type 15.3 SIB occurrence identity and value tag SIB occurrence identity and value tag Value tag for the system information block type 15.3 SIB 15.4 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to <maxpred 10.3.8.11="" 10.3.8.11<="" 10.3.8.4="" 15.5="" 16="" 18="" all="" and="" block="" cell="" configuration="" efficed="" for="" identity="" information="" list="" occurrences="" of="" op="" predefined="" sib="" stored="" system="" tag="" tags="" td="" the="" type="" value=""><td>SIR 15 2 value tag</td><td>MD</td><td></td><td>Coll value</td><td>information block type 15.2</td></maxpred></maxsat>	SIR 15 2 value tag	MD		Coll value	information block type 15.2
SIB occurrence identity and value tag SIB 15.3 value tag list OP 1 to	731B 13.2 value tag	IVIF			
SIB 15.3 value tag list OP 1 to		MP			
SIB 15.3 value tag list OP 1 to cmaxSat> SIB 15.3 value tag MP PLMN value tag 10.3.8.10 SIB occurrence identity and value tag value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 16 value tag list OP The defined configuration identity and value tag Predefined configuration identity and value tag SIB 18 value tag OP Cell value Value tag for the system information block type 15.5 List of value tag for the system information block type 15.5 List of value tag for the system information block type 15.5 List of value tags for all stored occurrences of the system information block type 16 Predefined configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system information block type 16	value tag				
SIB 15.3 value tag list OP 1 to					
SIB 15.3 value tag list OP 1 to					
SIB 15.3 value tag MP PLMN value tag for the system information block type 15.3 SIB occurrence identity and value tag 10.3.8.20b SIB 15.4 value tag Cell value tag 10.3.8.4 information block type 15.4 SIB 15.5 value tag OP Cell value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to	SIB 15.3 value tag list	OP			
>SIB 15.3 value tag MP PLMN value tag 10.3.8.10 SIB occurrence identity and value tag NP SIB occurrence identity and value tag 10.3.8.20b SIB 15.4 value tag PCell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 16 value tag list OP 1 to			<maxsat></maxsat>		
SIB occurrence identity and value tag SIB occurrence identity and value tag SIB 15.4 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 SIB 16 value tag list OP 1 to	CID 15 2 value to a	MD		DI MNI volue	
>SIB occurrence identity and value tag Value tag SIB occurrence identity and value tag 10.3.8.20b SIB 15.4 value tag OP Cell value tag 10.3.8.4 information block type 15.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to cmaxPred efConfig> Predefined configuration identity and value tag Information block type 16 Predefined configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system information block type 16 Value tag for the system information block type 16	>51B 15.3 value tag	IVIP			
SIB 15.4 value tag OP Cell value tag 10.3.8.20b Value tag for the system information block type 15.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 Cell value tag 10.3.8.4 It to value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to value tag for the system information block type 15.5 List of value tags for all stored occurrences of the system information block type 16 Predefined configuration identity and value tag OP Predefined configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system information block type 16	>SIB occurrence identity and	MP			9
SIB 15.4 value tag OP Cell value tag for the system information block type 15.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 Cell value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to	value tag				
SIB 15.4 value tag OP Cell value tag for the system information block type 15.4 Cell value tag 10.3.8.4 Value tag for the system information block type 15.4 Cell value tag 10.3.8.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to					
SIB 15.4 value tag OP Cell value tag 10.3.8.4 SIB 15.5 value tag OP Cell value tag 10.3.8.4 Value tag for the system information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to					
SIB 15.5 value tag OP Cell value tag 10.3.8.4 information block type 15.4 Value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to	SIB 15.4 value tag	OP			Value tag for the system
SIB 15.5 value tag OP Cell value tag for the system information block type 15.5 SIB 16 value tag list OP 1 to	C.D To. I value tag				
SIB 16 value tag list OP 1 to	SIB 15.5 value tag	OP		Cell value	Value tag for the system
<maxpred efconfig=""> Predefined configuration identity and value tag SIB 18 value tag <maxpred efconfig=""> Predefined configuration identity and value tag To Cell value OP Cell value Occurrences of the system information block type 16 Predefined configuration identity and value tag To Cell value Value tag for the system</maxpred></maxpred>		1		tag 10.3.8.4	
efConfig> information block type 16 >Predefined configuration identity and value tag NP Predefined configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system	SIB 16 value tag list	OP			
>Predefined configuration identity and value tag Predefined configuration identity and value tag SIB 18 value tag OP Predefined configuration identity and value tag 10.3.8.11 Cell value Value tag for the system					
identity and value tag configuration identity and value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system	>Predefined configuration	MP	Crooming/	Predefined	intermation block type 10
value tag 10.3.8.11 SIB 18 value tag OP Cell value Value tag for the system				configuration	
SIB 18 value tag OP 10.3.8.11 Cell value Value tag for the system	_	1			
SIB 18 value tag OP Cell value Value tag for the system					
	SIR 18 value tac	OB			Value tag for the system
	ו סוס זוס ro value tag			tag 10.3.8.4	information block type 18

Condition	Explanation
GSM	This information is optional when the UE is operating in "GSM-MAP mode" and never stored otherwise.
ANSI	This information is optional when the UE is operating in "ANSI-41 mode" and never stored otherwise.

13.5 UE RRC Procedure Performance

This subclause defines the performance requirements related to RRC procedures in the UE. Where the total delay is impacted by processing of variable length on the physical layer (e.g. physical layer synchronisation), references to appropriate specifications are given.

13.5.1 Definitions

The following definitions of N1 and N2 are valid only for this UE RRC Procedure Performance specification.

N1 = upper limit on the time required to execute modifications in UE after the reception of a UTRAN -> UE message has been completed. Where applicable (e.g. the physical layer transmission is impacted), the changes shall be adopted in the beginning of the next TTI starting after N1. N1 is specified as a multiple of 10 ms.

N2 = number of 10 ms radio frames from end of reception of UTRAN -> UE message on UE physical layer before the transmission of the UE -> UTRAN response message must be ready to start on a transport channel with no access delay other than the TTI alignment (e.g. DCH, therefore excluding delays caused by RACH procedure etc). The UE response message transmission from the physical layer shall begin at the latest (N2*10)+TTI ms after completion of the reception of the last TTI carrying the triggering UTRAN -> UE message. When Target State is CELL_DCH, the UE response message transmission from the physical layer may be additionally delayed by the value of IE "SRB delay".

N1 and N2 are independent (e.g. N2-N1 is not restricted to being less than or equal to 10ms).

13.5.2 RRC procedure performance values

NOTE: Times indicated in the table do not include cell reselection.

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
RRC Connection					
Management Procedures					
Broadcast of system information	SYSTEM INFORMATION				N2 is not applicable for any system information messages, because there is no response message from the UE.
Master Information Block	SYSTEM INFORMATION		5	NA	No system information data shall be lost due to processing of a MIB received with no detectable errors. This means that the UE shall buffer all system information data received after the MIB until the data can be processed according to the information in the MIB, unless the MIB was received erroneously.
System Information Block type 1	SYSTEM INFORMATION		10	NA	
System Information Block type 2	SYSTEM INFORMATION		10	NA	
System Information Block type 3	SYSTEM INFORMATION		10	NA	
System Information Block type 4	SYSTEM INFORMATION		10	NA	
System Information Block type 5 or System Information Block type 5bis	SYSTEM INFORMATION		10	NA	
System Information Block type 6	SYSTEM INFORMATION		10	NA	
System Information Block type 7	SYSTEM INFORMATION		5	NA	
System Information Block type 11	SYSTEM INFORMATION		10	NA	
System Information Block type 12	SYSTEM INFORMATION		10	NA	

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
System Information Block type 13	SYSTEM INFORMATION		10	NA	
System Information Block type 14	SYSTEM INFORMATION		10	NA	
System Information Block type 15	SYSTEM INFORMATION		10	NA	
System Information Block type 16	SYSTEM INFORMATION		10	NA	
System Information Block type 18	SYSTEM INFORMATION		10	NA	
RRC connection establishment Target state CELL_DCH	RRC CONNECTION SETUP	RRC CONNECTION SETUP COMPLETE	10	NA	N1 measures time to the start of tx / rx on DPCH. N2 cannot be specified, because RRC CONNECTION SETUP COMPLETE message is transmitted only after physical layer synchronisation, which also depends on the Node B. The performance of the physical layer synchronisation procedure is specified in [19] and [20]
RRC connection establishment Target state CELL_FACH	RRC CONNECTION SETUP	RRC CONNECTION SETUP COMPLETE	10	11	N1 and N2 applicable as defined (N2 can be tested from the initiation of the power ramp on RACH).
RRC connection release From CELL_DCH state	RRC CONNECTION RELEASE	RRC CONNECTION RELEASE COMPLETE	5	8	N1 sets the requirement for the time from the completion of the last repetition of the RRC CONNECTION RELEASE COMPLETE message to the release of the physical channel. N2 sets the requirement from the end of successful reception of the RRC CONNECTION RELEASE message to the start of the first transmission of the RRC CONNECTION RELEASE CONNECTION RELEASE COMPLETE message.
RRC connection release From CELL_FACH state	RRC CONNECTION RELEASE	RRC CONNECTION RELEASE COMPLETE	NA	11	N1 represents UE internal configuration that cannot be externally observed.
Paging	PAGING TYPE 1	CELL UPDATE	10	11+ T	T is the repetition period of SIB7 (applicable for FDD) and SIB14 (applicable for TDD)
UE capability enquiry	UE CAPABILITY ENQUIRY	UE CAPABILITY INFORMATION	NA	8	N1 is not applicable because the UE configuration does not change.
Security mode control	SECURITY MODE COMMAND	SECURITY MODE COMPLETE	5	8	
Signalling connection release procedure	SIGNALLING CONNECTION RELEASE		5	NA	N2 is not applicable because there is no response message.
Counter check	COUNTER CHECK	COUNTER CHECK RESPONSE	NA	8	N1 is not applicable because the UE configuration does not change.
Radio Bearer control procedures					

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
Radio bearer establishment Target state CELL_DCH	RADIO BEARER SETUP	RADIO BEARER SETUP COMPLETE / FAILURE	10	NA	N2 cannot be specified, because the RADIO BEARER SETUP COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
Radio bearer establishment From state CELL_FACH to state CELL_FACH	RADIO BEARER SETUP	RADIO BEARER SETUP COMPLETE / FAILURE	10	11	
Radio bearer establishment From CELL_DCH to CELL_FACH	RADIO BEARER SETUP	RADIO BEARER SETUP COMPLETE	NA	NA	N1 and N2 cannot be specified, because UE need to read SIBs on BCH before sending RADIO BEARER SETUP COMPLETE
Radio bearer reconfiguration Target state CELL_DCH	RADIO BEARER RECONFIGURA TION	RADIO BEARER RECONFIGURAT ION COMPLETE / FAILURE	5 or 10	NA	N2 cannot be specified, because the RADIO BEARER RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B. NOTE 1
Radio bearer reconfiguration From state CELL_FACH to state CELL_FACH	RADIO BEARER RECONFIGURA TION	RADIO BEARER RECONFIGURAT ION COMPLETE / FAILURE	10	11	
Radio bearer reconfiguration From state CELL_DCH to state CELL_FACH	RADIO BEARER RECONFIGURA TION	RADIO BEARER RECONFIGURAT ION COMPLETE	NA	NA	N1 and N2 cannot be specified, because UE need to read SIBs on BCH before sending RADIO BEARER RECONFIGURATION COMPLETE
Radio bearer release Target state CELL_DCH	RADIO BEARER RELEASE	RADIO BEARER RELEASE COMPLETE / FAILURE	10	11	
Radio bearer release From state CELL_FACH to state CELL_FACH	RADIO BEARER RELEASE	RADIO BEARER RELEASE COMPLETE / FAILURE	10	11	
Radio bearer release From state CELL_DCH to state CELL_FACH	RADIO BEARER RELEASE	RADIO BEARER RELEASE COMPLETE	NA	NA	N1 and N2 cannot be specified, because UE need to read SIBs on BCH before sending RADIO BEARER RECONFIGURATION COMPLETE
Transport channel reconfiguration Target state CELL_DCH	TRANSPORT CHANNEL RECONFIGURA TION	TRANSPORT CHANNEL RECONFIGURAT ION COMPLETE / FAILURE	5 or 10	NA	N2 cannot be specified, because the TRANSPORT CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B. NOTE 1
Transport channel reconfiguration From state CELL_FACH to state CELL_FACH	TRANSPORT CHANNEL RECONFIGURA TION	TRANSPORT CHANNEL RECONFIGURAT ION COMPLETE / FAILURE	10	11	

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
Transport channel reconfiguration From state CELL_DCH to state CELL_FACH	TRANSPORT CHANNEL RECONFIGURA TION	TRANSPORT CHANNEL RECONFIGURAT ION COMPLETE	NA	NA	N1 and N2 cannot be specified, because UE need to read SIBs on BCH before sending TRANSPORT CHANNEL RECONFIGURATION COMPLETE
Transport format combination control AM or UM RLC mode	TRANSPORT FORMAT COMBINATION CONTROL	TRANSPORT FORMAT COMBINATION CONTROL FAILURE	5	8	
Transport format combination control Transparent mode	TRANSPORT FORMAT COMBINATION CONTROL		5	NA	N2 is not applicable because no response message is defined.
Physical channel reconfiguration Target state CELL_DCH	PHYSICAL CHANNEL RECONFIGURA TION	PHYSICAL CHANNEL RECONFIGURAT ION COMPLETE / FAILURE	5 or 8	NA	N2 cannot be specified, because the PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B. NOTE 1
Physical channel reconfiguration From state CELL_FACH to state CELL_FACH	PHYSICAL CHANNEL RECONFIGURA TION	PHYSICAL CHANNEL RECONFIGURAT ION COMPLETE / FAILURE	8	9	
Physical channel reconfiguration From state CELL_DCH to state CELL_FACH	PHYSICAL CHANNEL RECONFIGURA TION	PHYSICAL CHANNEL RECONFIGURAT ION COMPLETE	NA	NA	N1 and N2 cannot be specified, because UE need to read SIBs on BCH before sending PHYSICAL CHANNEL RECONFIGURATION COMPLETE
Physical Shared Channel Allocation [TDD only]	PHYSICAL SHARED CHANNEL ALLOCATION		5	NA	N2 is not applicable because no response message is defined.
Uplink Physical Channel Control [TDD only]	UPLINK PHYSICAL CHANNEL CONTROL		8	NA	Requirements for outer loop and timing advance adjustments are defined in [22] and [20]. N2 is not applicable because there is no response message.
RRC connection mobility procedures					
Cell update	CELL UPDATE CONFIRM	UTRAN MOBILITY INFORMATION CONFIRM	5	8	
		PHYSICAL CHANNEL RECONFIGURAT ION COMPLETE Target state CELL_FACH	8	9	

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
		PHYSICAL CHANNEL RECONFIGURAT ION COMPLETE Target state CELL_DCH	8	NA	N2 cannot be specified, because the PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
		TRANSPORT CHANNEL RECONFIGURAT ION COMPLETE Target state CELL_FACH	10	11	
		TRANSPORT CHANNEL RECONFIGURAT ION COMPLETE Target state CELL_DCH	10	NA	N2 cannot be specified, because the PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
		RADIO BEARER RECONFIGURAT ION COMPLETE Target state CELL_FACH	10	11	
		RADIO BEARER RECONFIGURAT ION COMPLETE Target state CELL_DCH	10	NA	N2 cannot be specified, because the PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
		RADIO BEARER RELEASE COMPLETE Target state CELL_DCH	10	11	
URA update	URA UPDATE CONFIRM	UTRAN MOBILITY INFORMATION CONFIRM	5	8	
UTRAN mobility information	UTRAN MOBILITY INFORMATION	UTRAN MOBILITY INFORMATION CONFIRM / FAILURE	5	8	
Active set update	ACTIVE SET UPDATE	ACTIVE SET UPDATE COMPLETE / FAILURE	NA	5	The requirements on UE combining and power control performance for both UL and DL are specified by RAN WG4 in [21] and [19]. Also in case of branch addition the COMPLETE / FAILURE message is transmitted without waiting for the new branch to stabilise, therefore N2 is specified.

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
Inter-RAT handover to UTRAN	HANDOVER TO UTRAN COMMAND (other system)	HANDOVER TO UTRAN COMPLETE	NA	NA	The performance of this procedure is specified in 05.10.
Inter-RAT handover from UTRAN	HANDOVER FROM UTRAN COMMAND	HANDOVER FROM UTRAN FAILURE	NA	NA	The performance of this procedure is specified in [19] and [20].
Measurement procedures					
Measurement control	MEASUREMEN T CONTROL	MEASUREMENT CONTROL FAILURE	5	8	Response to measurement inquiry depends on physical layer measurement. Response time is defined in [19] and [20]. N1 and N2 only define the processing of the message.

NOTE 1: The lower value applies when the UE is ordered to do a serving HS-DSCH cell change, changing no other information than contained in the IE "H-RNTI", the IE "Downlink HS-PDSCH information", the IE "Uplink DPCH power control info" and/or the IE "Serving HS-DSCH radio link indicator" (FDD only).

13.6 RB information parameters for signalling radio bearer RB 0

The following Radio Bearer parameter values apply for signalling radio bearer RB0:

Information element/ Group name	Value	Comment
RLC info		
>Uplink RLC mode	TM	
>>Transmission RLC discard	omitted	Neither discard is used, nor will there be a reset
>>Segmentation indication	FALSE	
>Downlink RLC mode	UM	
RB mapping info		Single multiplexing option
>Uplink mapping info		
>>UL transport channel	RACH	RACH corresponding with selected PRACH
>>RLC size list	N/A	If available the size in the IE 'Additional Dynamic Transport Format Information for CCCH' for the transport channel used. Else the first TF defined in the Transport Format Set for the transport channel is used.
>>MAC logical channel priority	1	
>Downlink mapping info		
>>DL transport channel	FACH	

Procedure descriptions in subclause 8.6.4.8 shall not be applied for the IE "RB mapping info" that is used for signalling radio bearer RB0.

13.6a RB information parameters for SHCCH

The following Radio Bearer parameter values apply for SHCCH:

Information element/ Group name	Value	Comment
RLC info		
>Uplink RLC mode	TM	
>>Transmission RLC discard	omitted	Neither discard is used, nor will there be a reset
>>Segmentation indication	FALSE	
>Downlink RLC mode	UM	
RB mapping info		
>Uplink mapping info		Option 1
>>UL transport channel	RACH	RACH corresponding with selected PRACH
>>RLC size list	N/A	The first TF defined in the Transport Format Set for
		the transport channel that is used
>>MAC logical channel priority	1	
>Downlink mapping info		
>>DL transport channel	FACH	
>Uplink mapping info		Option 2
>>UL transport channel	USCH	
>>UL Transport Channel Identity	1	
>>MAC logical channel priority	1	
>>RLC size list	N/A	The first TF defined in the Transport Format Set for
		the transport channel that is used
>Downlink mapping info		
>>DL transport channel	DSCH	
>>DL Transport Channel Identity	1	

13.6b RB information parameters for BCCH mapped to FACH

The following Radio Bearer parameter values apply for BCCH mapped to FACH:

Information element/ Group name	Value	Comment
Downlink RLC mode	TM	
Segmentation indication	FALSE	

13.6c RB information parameters for PCCH mapped to PCH

The following Radio Bearer parameter values apply for PCCH mapped to PCH:

Information element/ Group name	Value	Comment
Downlink RLC mode	TM	
Segmentation indication	FALSE	

13.6d Parameters for BCCH mapped to BCH

The transport format parameters for BCH are specified in [34].

13.7 Parameter values for default radio configurations

The UE shall support the use of the default radio configurations that are specified in the following.

NOTE 1: These configurations are based on [41] and cover a number of RAB and signalling connection configurations.

In the table that is used to specify the parameter values for these default configurations, the following principles are used:

- Optional IEs that are not used are omitted;
- In case no parameter value is specified in a column, this means the value given the previous (left side) column applies.

- NOTE 2: If needed, signalling radio bearer RB4 is established after the completion of handover.
- NOTE 3: For each default configuration, the value of FDD, 3.84 Mcps TDD, 7.68 Mcps TDD and 1.28 Mcps TDD parameters are specified. All parameters apply to FDD, 3.84 Mcps TDD, 7.68 Mcps and 1.28 Mcps TDD modes, unless explicitly stated otherwise. It should be noted that in this respect default configurations differ from pre-defined configurations, which only include parameter values for one mode.
- NOTE 4: The transport format sizes, indicated in the following table, concern the RLC PDU size, since all configurations concern dedicated channels. The transport block sizes indicated in TS 34.108 are different since these include the size of the MAC header.

NOTE 5: The tabular values included in this subclause, represent the actual IE values as in clause 10, and not the ASN.1 representation of these values.

Configuration	3.4 kbps signalling	13.6 kbps signalling	Unused configuration	12.2 kbps speech +
				3.4 kbps signalling
Ref 34.108	2	3		4
Default configuration identity	0	1	2	3
RB INFORMATION				
rb-Identity	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3		RB1: 1, RB2: 2, RB3: 3, RB5: 5, RB6: 6, RB7: 7
rlc-InfoChoice	RIc-info	RIc-info		RIc-info
>ul-RLC-Mode	RB1: UM RB2- RB3: AM	RB1: UM RB2- RB3: AM		RB1: UM RB2- RB3: AM RB5-RB7: TM
>>transmissionRLC- DiscardMode	RB1: N/A RB2- RB3: NoDiscard	RB1: N/A RB2- RB3: NoDiscard		RB1: N/A RB2- RB3: NoDiscard RB5- RB7: N/A
>>>maxDat	RB1: N/A RB2- RB3: 15	RB1: N/A RB2- RB3: 15		RB1: N/A RB2- RB3: 15 RB5- RB7: N/A
>>transmissionWindowSiz e	RB1: N/A RB2- RB3: 128 for UEs with more than 10 kbyte "total RLC AM buffer size" and 32 otherwise	RB1: N/A RB2- RB3: 128 for UEs with more than 10 kbyte "total RLC AM buffer size" and 32 otherwise		RB1: N/A RB2- RB3: 128 for UEs with more than 10 kbyte "total RLC AM buffer size" and 32 otherwise RB5- RB7: N/A
>>timerRST	RB1: N/A RB2- RB3: 300	RB1: N/A RB2- RB3: 300		RB1: N/A RB2- RB3: 300 RB5- RB7: N/A
>>max-RST	RB1: N/A RB2- RB3: 1	RB1: N/A RB2- RB3: 1		RB1: N/A RB2- RB3: 1 RB5- RB7: N/A
>>pollingInfo	RB1: N/A RB2- RB3: as below	RB1: N/A RB2- RB3: as below		RB1: N/A RB2- RB3: as below RB5- RB7: N/A
>>>lastTransmissionPDU- Poll	RB2- RB3: FALSE	RB2- RB3: FALSE		RB2- RB3: FALSE
>>>lastRetransmissionPD U-Poll	RB2- RB3: FALSE	RB2- RB3: FALSE		RB2- RB3: FALSE
>>>timerPollPeriodic	RB2- RB3: 300	RB2- RB3: 100		RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A		RB1- RB3: N/A RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM RB2- RB3: AM	RB1: UM RB2- RB3: AM		RB1: UM RB2- RB3: AM RB5- RB7: TM
>>inSequenceDelivery	RB1: N/A RB2- RB3: TRUE	RB1: N/A RB2- RB3: TRUE		RB1: N/A RB2- RB3: TRUE RB5- RB7: N/A

Configuration	3.4 kbps signalling	13.6 kbps	Unused	12.2 kbps speech
		signalling	configuration	3.4 kbps signalling
>>receivingWindowSize	RB1: N/A	RB1: N/A		RB1: N/A
	RB2- RB3: 128 for	RB2- RB3: 128 for		RB2- RB3: 128 for
	UEs with more than 10 kbyte "total RLC	UEs with more than 10 kbyte "total RLC		UEs with more than 10 kbyte "total RLC
	AM buffer size" and	AM buffer size" and		AM buffer size" and
	32 otherwise	32 otherwise		32 otherwise
				RB5- RB7: N/A
>>dl-RLC-StatusInfo	RB1: N/A RB2- RB3: as below	RB1: N/A RB2- RB3: as below		RB1: N/A RB2- RB3: as below RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100	RB2- RB3: 100		RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: FALSE	RB2- RB3: FALSE		RB2- RB3: FALSE
>>>timerStatusPeriodic	RB2- RB3: 300	RB2- RB3: 100		RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A		RB1- RB3: N/A RB5- RB7: FALSE
rb-MappingInfo				
>UL- LogicalChannelMappings	OneLogicalChannel	OneLogicalChannel		OneLogicalChannel
>>ul- TransportChannelType	Dch	Dch		Dch
>>>transportChannelldentit y	RB1- RB3: 1	RB1- RB3: 1		RB1- RB3: 4 RB5: 1, RB6: 2, RB7: 3
>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3		RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A
>>rlc-SizeList	RB1- RB3:	RB1- RB3:		RB1- RB3:
	configured	configured		configured RB5- RB7: N/A
>>mac- LogicalChannelPriority	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3		RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5
>DL- logicalChannelMappingList				
>>Mapping option 1	One mapping option	One mapping option		One mapping option
>>>dl-	Dch	Dch		Dch
TransportChannelType	DD4 DD0: 4	DD4 DD0: 4		DD4 DD0: 4
>>>>transportChannelIden tity	RB1- RB3: 1	RB1- RB3: 1		RB1- RB3: 4 RB5: 1, RB6: 2, RB7: 3
>>>logicalChannelIdentity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,		RB1: 1, RB2: 2,
	RB3: 3	RB3: 3		RB3: 3 RB5- RB7: N/A
TrCH INFORMATION PER TrCH				
UL-				
AddReconfTransChInfoList	4-1-	-1 - I-		-1-1-
>Uplink transport channel type	dch	dch		dch
>transportChannelIdentity	TrCH1: 1	TrCH1: 1		TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4
>transportFormatSet	DedicatedTransChT FS	DedicatedTransChT FS		DedicatedTransChT FS
>>dynamicTF-information	T=0114. (0:-4.4.4	T=014. (0:444		T=014. (0::04)
>>>tf0/ tf0,1	TrCH1: (0x144, 1x144)	TrCH1: (0x144, 1x144)		TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144)
>>>rlcSize	BitMode	BitMode		BitMode

1081

Configuration	3.4 kbps signalling	13.6 kbps	Unused	12.2 kbps speech
		signalling	configuration	+ 3.4 kbps signalling
				0.4 Kbp3 Signaming
>>>>sizeType	TrCH1: type 2,	TrCH1: type 2,		TrCH1: type 1: 81
	part1= 2, part2= 0 (144)	part1= 2, part2= 0 (144)		TrCH2: type 1: 103 TrCH3: type 1: 60
	(144)	(144)		TrCH4: 2: type 2,
				part1= 2, part2= 0
				(144)
>>>numberOfTbSizeList	TrCH1: Zero, one	TrCH1: Zero, one		TrCH1: Zero TrCH2-4: Zero, one
>>>logicalChannelList	All	All		All
>>>tf 1	N/A	N/A		TrCH1: (1x39) TrCH2- TrCH4: N/A
>>>>numberOfTransportBl				TrCH1: One
ocks				
>>>rlc-Size				TrCH1: BitMode
>>>>sizeType >>>>numberOfTbSizeList				TrCH1: 1: 39
>>>logicalChannelList				TrCH1: One TrCH1: all
>>>tf 2	N/A	N/A		TrCH1: (1x81)
>>\(\)\(\)\(\)	IN/A	IN/A		TrCH2- TrCH4: N/A
>>>numberOfTransportBl				TrCH1: One
ocks				
>>>rlc-Size				TrCH1: BitMode
>>>>sizeType				TrCH1: type 1: 81
>>>numberOfTbSizeList				TrCH1: One
>>>>logicalChannelList				TrCH1: all
>>semistaticTF-Information	TrCH1: 40	TrCH1: 10		TrCH1- TrCH3: 20
>>>tti				TrCH4: 40
>>>channelCodingType	Convolutional	Convolutional		Convolutional
>>>codingRate	TrCH1: Third	TrCH1: Third		TrCH1- TrCH2: Third
				TrCH3: Half TrCH4: Third
>>>rateMatchingAttribute	TrCH1: 160	TrCH1: 160		TrCH1: 200
- Frateriate in 197 tune ate	11011111100	11011111100		TrCH2: 190
				TrCH3: 235
				TrCH4: 160
>>>crc-Size	TrCH1: 16	TrCH1: 16		TrCH1: 12
				TrCH2- TrCH3: 0 TrCH4: 16
DL-				ПСП4. 16
AddReconfTransChInfoList				
>Downlink transport	dch	dch		dch
channel type				
>dl-	TrCH1: 1	TrCH1: 1		TrCH1: 1, TrCH2: 2,
TransportChannelIdentity				TrCH3: 3, TrCH4: 4
(should be as for UL) >tfs-SignallingMode	SameAsUL	SameAsUL		Fyplicit
>tis-Signallingiviode	SameASUL	SameASUL		Explicit <only on="" td="" tf0="" trch1<=""></only>
				is different and
				shown below>
>>transportFormatSet				DedicatedTransChT FS
>>>dynamicTF-information				
>>>tf0/ tf0,1				TrCH1: (1x0)
>>>rlcSize				bitMode
>>>>sizeType				TrCH1: type 1: 0
>>>>numberOfTbSizeList				TrCH1: One
>>>>logicalChannelList	T-OLIA: 4	T-OLIA: 4		All
>>ULTrCH-Id	TrCH1: 1	TrCH1: 1		TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4
>dch-QualityTarget				

Configuration	3.4 kbps signalling	13.6 kbps	Unused	12.2 kbps speech
		signalling	configuration	3.4 kbps signalling
>>bler-QualityValue	TrCH1: 5x10 ⁻²	TrCH1: 5x10 ⁻²		TrCH1: 7x10 ⁻³ TrCH2- TrCH4: Absent
TrCH INFORMATION, COMMON				
ul-CommonTransChInfo				
>tfcs-ID (TDD only)	1	1		1
>sharedChannelIndicator (TDD only)	FALSE	FALSE		FALSE
>tfc-Subset	Absent, not required	Absent, not required		Absent, not required
>ul-TFCS	Normal TFCI signalling	Normal TFCI signalling		Normal TFCI signalling
>>explicitTFCS- ConfigurationMode	Complete	Complete		Complete
>>>ctfcSize	Ctfc2Bit	Ctfc2Bit		Ctfc6Bit
>>>>TFCS representation	Addition	Addition		Addition
>>>>TFCS list	(TEO)	(TEO)		/TE0 TE0 TE0
>>>>>TFCS 1	(TF0)	(TF0)		(TF0, TF0, TF0, TF0)
>>>>>ctfc	0	0		0
>>>>> gainFactorInform ation	Computed	Computed		Computed
>>>>>referenceTFCld	0	0		0
>>>>TFCS 2	(TF1)	(TF1)		(TF1, TF0, TF0, TF0)
>>>>>ctfc	1	1		1
>>>>> gainFactorInform ation	Signalled	Signalled		Computed
>>>>>βc (FDD only)	11	11		N/A
>>>>>βd	15	15		N/A
>>>>>referenceTFCld	0	0		0
>>>>>TFCS 3				(TF2, TF1, TF1, TF0)
>>>>>ctfc				11
>>>>> gainFactorInform ation				Computed
>>>>>>referenceTFCld				0
>>>>>TFCS 4				(TF0, TF0, TF0, TF1)
>>>>>ctfc				12
>>>>>gainFactorInform ation				Computed
>>>>>βc (FDD only)				N/A
>>>>>βd				N/A
>>>>>>referenceTFCld				0
>>>>TFCS 5				(TF1, TF0, TF0, TF1)
>>>>>ctfc				13
>>>>>gainFactorInform ation				Computed
>>>>>referenceTFCld				0
>>>>TFCS 6				(TF2, TF1, TF1, TF1)
>>>>>ctfc				23
>>>>>gainFactorInform ation				Signalled
>>>>>βc (FDD only)				11
>>>>>βd				15
>>>>>>referenceTFCld				0
dl-CommonTransChInfo				

Configuration	3.4 kbps signalling	13.6 kbps	Unused	12.2 kbps speech
		signalling	configuration	3.4 kbps signalling
>tfcs-SignallingMode	Same as UL	Same as UL		Same as UL
PhyCH INFORMATION				
FDD				
UL-DPCH-InfoPredef				
>ul-DPCH-				
PowerControlInfo				
>>powerControlAlgorithm	Algorithm 1	Algorithm 1		Algorithm 1
>>>tpcStepSize	1 dB	1 dB		1 dB
>tfci-Existence	TRUE	TRUE		TRUE
>puncturingLimit	1	1		0.88
DL-				
CommonInformationPredef				
>dl-DPCH-InfoCommon				
>>spreadingFactor	256	128		128
>>tfci-Existence	FALSE	FALSE		FALSE
>>pilotBits	4	4		4
>>positionFixed	N/A	N/A	1	Fixed
>>positioni ixed	14/71	14/74		1 IACU
PhyCH INFORMATION				
3.84/7.68 Mcps TDD				
UL-DPCH-InfoPredef				
>ul-DPCH-				
PowerControlInfo	_			
>>dpch-ConstantValue	0	0		0
>commonTimeslotInfo				
>>secondInterleavingMode	frameRelated	frameRelated		frameRelated
>>tfci-Coding	4	4		16
>>puncturingLimit	1	0.92		0.88
>>repetitionPeriodAndLeng th	repetitionPeriod1	repetitionPeriod1		repetitionPeriod1
DL-				
CommonInformationPredef				
>dl-DPCH-InfoCommon				
>>commonTimeslotInfo				
>>>secondInterleavingMod	frameRelated	frameRelated		frameRelated
e				
>>>tfci-Coding	4	4		16
>>>puncturingLimit	1	0.92		0.92
>>>repetitionPeriodAndLe	repetitionPeriod1	repetitionPeriod1		repetitionPeriod1
ngth		Topomion onou.		Topounom onou.
PhyCH INFORMATION 1.28 Mcps TDD				
UL-DPCH-InfoPredef				
>commonTimeslotInfo				
>>secondInterleavingMode	frameRelated	frameRelated		frameRelated
>>tfci-Coding	4	4		16
>>puncturingLimit	1	0.64		0.60
>>repetitionPeriodAndLeng	repetitionPeriod1	repetitionPeriod1	+	repetitionPeriod1
th DL-	repetitionFeriodi	repetitionFeriod i		repetitionFeriodi
CommonInformationPredef				
>dl-DPCH-InfoCommon				
>>commonTimeslotInfo			+	
	fromoDolotod	fromoDolotod		from Doloto -
>>>secondInterleavingMod e	frameRelated	frameRelated		frameRelated
>>>tfci-Coding	4	4		16
>>>puncturingLimit	1	0.64		0.60
>>>repetitionPeriodAndLe	repetitionPeriod1	repetitionPeriod1		repetitionPeriod1
ngth	·			

Configuration	28.8 kbps conv.	32 kbps conv. CS-	64kbps conv. CS-	14.4 kbps
	CS- data +	data +	data +	streaming CS-
	3.4 kbps signalling	3.4 kbps signalling	3.4 kbps signalling	data +
Ref 34.108	12	14	13	3.4 kbps signalling
Default configuration	4	5	6	7
identity				•
RB INFORMATION				
rb-Identity	RB1: 1, RB2: 2,			
,	RB3: 3, RB5: 5			
rlc-InfoChoice	RIc-info	RIc-info	RIc-info	RIc-info
>ul-RLC-Mode	RB1: UM	RB1: UM	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM	RB2- RB3: AM	RB2- RB3: AM
	RB5: TM	RB5: TM	RB5: TM	RB5: TM
>>transmissionRLC-	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
DiscardMode	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard
	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>>maxDat	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: 15	RB2- RB3: 15	RB2- RB3: 15	RB2- RB3: 15
	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>transmissionWindowSiz	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
е	RB2- RB3: 128 for			
	UEs with more than			
	10 kbyte "total RLC			
	AM buffer size" and 32 otherwise	AM buffer size" and	AM buffer size" and 32 otherwise	AM buffer size" and
	RB5: N/A	32 otherwise RB5: N/A	RB5: N/A	32 otherwise RB5: N/A
>>timerRST	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
>>timerro1	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300
	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>max-RST	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: 1	RB2- RB3: 1	RB2- RB3: 1	RB2- RB3: 1
	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>pollingInfo	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: as below			
la atTananaisaisa DDII	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>>lastTransmissionPDU- Poll	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE
>>>lastRetransmissionPD	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE
U-Poll	ND2- ND3. I ALSE			
>>>timerPollPeriodic	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A
3 1 1111	RB5: FALSE	RB5: FALSE	RB5: FALSE	RB5: FALSE
>dl-RLC-Mode	RB1: UM	RB1: UM	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM	RB2- RB3: AM	RB2- RB3: AM
	RB5: TM	RB5: TM	RB5: TM	RB5: TM
>>inSequenceDelivery	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: TRUE	RB2- RB3: TRUE	RB2- RB3: TRUE	RB2- RB3: TRUE
>>receivingWindowSize	RB5: N/A RB1: N/A	RB5: N/A RB1: N/A	RB5: N/A RB1: N/A	RB5: N/A RB1: N/A
>>receivingvviridowSize	RB2- RB3: 128 for			
	UEs with more than			
	10 kbyte "total RLC			
	AM buffer size" and			
	32 otherwise	32 otherwise	32 otherwise	32 otherwise
	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>dl-RLC-StatusInfo	RB1: N/A	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: as below			
>>>timor@totuoDrobibit	RB5: N/A	RB5: N/A	RB5: N/A	RB5: N/A
>>>timerStatusProhibit >>>missingPDU-Indicator	RB2- RB3: 100 RB2- RB3: FALSE			
>>>missingPDU-indicator >>>timerStatusPeriodic	RB2- RB3: FALSE RB2- RB3: 300			
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A
Jeginentationinulation	RB5: FALSE	RB5: FALSE	RB5: FALSE	RB5: FALSE
rb-MappingInfo		:= :: / .= :	:= :: / .= :	
· ···	ı	i .	l .	ı

Configuration	28.8 kbps conv. CS- data +	32 kbps conv. CS- data +	64kbps conv. CS- data +	14.4 kbps streaming CS-
	3.4 kbps signalling	3.4 kbps signalling	3.4 kbps signalling	data + 3.4 kbps signalling
>UL-	OneLogicalChannel	OneLogicalChannel	OneLogicalChannel	OneLogicalChannel
LogicalChannelMappings			3	3
>>ul- TransportChannelType	Dch	Dch	Dch	Dch
>>>transportChannelIdenti	RB1- RB3: 2	RB1- RB3: 2	RB1- RB3: 2	RB1- RB3: 2
ty	RB5: 1	RB5: 1	RB5: 1	RB5: 1
>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3
>>rlc-SizeList	RB5: N/A RB1- RB3:	RB5: N/A RB1- RB3:	RB5: N/A RB1- RB3:	RB5: N/A RB1- RB3:
>>IIC-OIZELIST	configured RB5: N/A	configured RB5: N/A	configured RB5: N/A	configured RB5: N/A
>>mac-	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3 RB5: 5	RB3: 3 RB5: 5	RB3: 3 RB5: 5	RB3: 3 RB5: 5
>DL-				
IogicalChannelMappingList				
>>Mapping option 1	One mapping option	One mapping option	One mapping option	One mapping option
>>>dl- TransportChannelType	Dch	Dch	Dch	Dch
>>>transportChannellden	RB1- RB3: 2	RB1- RB3: 2	RB1- RB3: 2	RB1- RB3: 2
tity	RB5: 1	RB5: 1	RB5: 1	RB5: 1
>>>logicalChannelIdentity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
	RB3: 3 RB5: N/A	RB3: 3 RB5: N/A	RB3: 3 RB5: N/A	RB3: 3 RB5: N/A
TrCH INFORMATION PER TrCH	KBS. IVA	NBS. IVA	KBS. N/A	NDS. IVA
UL-				
AddReconfTransChInfoLis t				
>Uplink transport channel type	dch	dch	dch	dch
>transportChannelIdentity	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2
>transportFormatSet	DedicatedTransChT FS	DedicatedTransChT FS	DedicatedTransChT FS	DedicatedTransChT FS
>>dynamicTF-information				
>>>tf0/ tf0,1	TrCH1: (0x576, 1x576, 2x576)	TrCH1: (0x640, 1x640)	TrCH1: (0x640, 2x640)	TrCH1: (0x576, 1x576)
	TrCH2: (0x144,	TrCH2: (0x144,	TrCH2: (0x144,	TrCH2: (0x144,
	1x144)	1x144)	1x144)	1x144)
>>>rlcSize	TrCH1: OctetMode TrCH2:BitMode	TrCH1: OctetMode TrCH2:BitMode	TrCH1: OctetMode TrCH2:BitMode	TrCH1: OctetMode TrCH2:BitMode
>>>>sizeType	TrCH1: type 2,	TrCH1: type 2,	TrCH1: type 2,	TrCH1: type 2,
	part1= 9, part2= 2 (576)	part1= 11, part2= 2 (640)	part1= 11, part2= 2 (640)	part1= 9, part2= 2 (576)
	TrCH2: type 2,	TrCH2: type 2,	TrCH2: type 2,	TrCH2: type 2,
	part1= 2, part2= 0	part1= 2, part2= 0	part1= 2, part2= 0	part1= 2,
	(144)	(144)	(144)	part2= 0 (144)
>>>numberOfTbSizeList	TrCH1: Zero,1, 2 TrCH2: Zero, one	TrCH1: Zero, one TrCH2: Zero, one	TrCH1: Zero, 2 TrCH2: Zero, one	TrCH1: Zero, one, TrCH2: Zero, one
>>>logicalChannelList	All	All	All	All
>>semiStaticTF- Information				
>>>tti	TrCH1: 40 TrCH2: 40	TrCH1: 20 TrCH2: 40	TrCH1: 20 TrCH2: 40	TrCH1: 40 TrCH2: 40
>>>channelCodingType	TrCH1: Turbo	TrCH1: Turbo	TrCH1: Turbo	TrCH1: Turbo
	TrCH2:	TrCH2:	TrCH2:	TrCH2:
andir a Data	Convolutional	Convolutional	Convolutional	Convolutional
>>>codingRate	TrCH1: N/A TrCH2: Third	TrCH1: N/A TrCH2: Third	TrCH1: N/A TrCH2: Third	TrCH1: N/A TrCH2: Third
>>>rateMatchingAttribute	TrCH1: 180	TrCH1: 185	TrCH1: 170	TrCH1: 165
	TrCH2: 160	TrCH2: 160	TrCH2: 160	TrCH2: 160

Configuration	28.8 kbps conv.	32 kbps conv. CS-	64kbps conv. CS-	14.4 kbps
	CS- data + 3.4 kbps signalling	data + 3.4 kbps signalling	data + 3.4 kbps signalling	streaming CS- data + 3.4 kbps signalling
>>>crc-Size	TrCH1: 16 TrCH2: 16	TrCH1: 16 TrCH2: 16	TrCH1: 16 TrCH2: 16	TrCH1: 16 TrCH2: 16
DL- AddReconfTransChInfoLis t				
>Downlink transport channel type	dch	dch	dch	dch
>dl- TransportChannelIdentity (should be as for UL)	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2
>tfs-SignallingMode >>transportFormatSet	SameAsUL	SameAsUL	SameAsUL	SameAsUL
>>>dynamicTF-information				
>>>>tf0/ tf0,1				
>>>rlcSize				
>>>>sizeType				
>>>numberOfTbSizeList				
>>>>logicalChannelList >>ULTrCH-ld	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2
>dch-QualityTarget	IICHI. I, IICHZ. Z	11011. 1, 11012. 2	IICHT. I, IICHZ. Z	11011. 1, 11012. 2
>>bler-QualityValue	TrCH1: 2x10 ⁻³ TrCH2: Absent	TrCH1: 2x10 ⁻³ TrCH2: Absent	TrCH1: 2x10 ⁻³ TrCH2: Absent	TrCH1: 1x10 ⁻² TrCH2: Absent
TrCH INFORMATION, COMMON				
ul-CommonTransChInfo				
>tfcs-ID (TDD only)	1	1	1	1
>sharedChannelIndicator (TDD only)	FALSE	FALSE	FALSE	FALSE
>tfc-Subset	Absent, not required	Absent, not required	Absent, not required	Absent, not required
>ul-TFCS	Normal TFCI signalling	Normal TFCI signalling	Normal TFCI signalling	Normal TFCI signalling
>>explicitTFCS- ConfigurationMode	Complete	Complete	Complete	Complete
>>>ctfcSize	Ctfc4Bit	Ctfc2Bit	Ctfc2Bit	Ctfc4Bit
>>>>TFCS representation	Addition	Addition	Addition	Addition
>>>>TFCS list				
>>>>TFCS 1	(TF0, TF0)	(TF0, TF0)	(TF0, TF0)	(TF0, TF0)
>>>>>ctfc	0	0	0	0
>>>>>gainFactorInform ation	Computed	Computed	Computed	Computed
>>>>>>referenceTFCld	0 (TF1, TF0)	(TE4_TE0)	(TE4_TE0)	(TE4_TE0)
>>>>TFCS 2	1	(TF1, TF0)	(TF1, TF0)	(TF1, TF0)
>>>>>gainFactorInform	Computed	Computed	Computed	Computed
ation	Computed	Computed	Computed	Comparou
ation	N/A	N/A	N/A	N/A
>>>>>βc (FDD only)	N/A	N/A	N/A	N/A
>>>>>βc (FDD only) >>>>>βd	N/A N/A	N/A N/A	N/A N/A	N/A N/A
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCId	N/A N/A 0	N/A N/A 0	N/A N/A 0	N/A N/A 0
>>>>>βc (FDD only) >>>>>βd	N/A N/A	N/A N/A	N/A N/A	N/A N/A
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCId >>>>>TFCS 3 >>>>>ctfc >>>>>gainFactorInform ation	N/A N/A 0 (TF2, TF0) 2 Computed	N/A N/A 0 (TF0, TF1)	N/A N/A 0 (TF0, TF1)	N/A N/A 0 (TF0, TF1)
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCId >>>>>tfC 3 >>>>>ctfc >>>>>>gainFactorInform ation >>>>>>referenceTFCId	N/A N/A 0 (TF2, TF0) 2 Computed 0	N/A N/A 0 (TF0, TF1) 2 Computed	N/A N/A 0 (TF0, TF1) 2 Computed 0	N/A N/A 0 (TF0, TF1) 2 Computed 0
>>>>>βc (FDD only) >>>>>βd >>>>>TFCS 3 >>>>>ctfc >>>>>gainFactorInform ation >>>>>TFCS 4	N/A N/A 0 (TF2, TF0) 2 Computed 0 (TF0, TF1)	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1)	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1)	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1)
>>>>>βc (FDD only) >>>>>>βd >>>>>referenceTFCId >>>>>TFCS 3 >>>>>ctfc >>>>>painFactorInform ation >>>>>TFCS 4 >>>>>ctfc	N/A N/A 0 (TF2, TF0) 2 Computed 0 (TF0, TF1) 3	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1)
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCld >>>>>tfC 3 >>>>>ctfc >>>>>ctfc >>>>>referenceTFCld >>>>>ctfc	N/A N/A 0 (TF2, TF0) 2 Computed 0 (TF0, TF1) 3 Computed	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled
$>>>>> \beta c \text{ (FDD only)} \\ >>>>> \beta d \\ >>>>> \text{referenceTFCId} \\ >>>>> \text{TFCS 3} \\ >>>>> \text{ctfc} \\ >>>>> \text{gainFactorInform ation} \\ >>>>> \text{referenceTFCId} \\ >>>>> \text{ctfc} \\ >>>>> \text{gainFactorInform ation} \\ >>>>> \text{gainFactorInform ation} \\ >>>>> \text{gainFactorInform ation} \\ >>>>> \text{gainFactorInform} \\ >>>>> \text{gainFactorInform} \\ >>>>> \text{gainFactorInform} \\$	N/A N/A 0 (TF2, TF0) 2 Computed 0 (TF0, TF1) 3 Computed	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCld >>>>>tfC 3 >>>>>ctfc >>>>>ctfc >>>>>referenceTFCld >>>>>ctfc	N/A N/A 0 (TF2, TF0) 2 Computed 0 (TF0, TF1) 3 Computed	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled	N/A N/A 0 (TF0, TF1) 2 Computed 0 (TF1, TF1) 3 Signalled

Configuration	28.8 kbps conv.	32 kbps conv. CS-	64kbps conv. CS-	14.4 kbps
	CS- data + 3.4 kbps signalling	data + 3.4 kbps signalling	data + 3.4 kbps signalling	streaming CS- data +
	3.4 Kops signalling	3.4 Kops signalling	3.4 Kops signalling	3.4 kbps signalling
>>>>TFCS 5	(TF1, TF1)	N/A	N/A	i april g
>>>>>ctfc	4			
>>>>>gainFactorInform ation	Computed			
>>>>>>referenceTFCId	0			
>>>>TFCS 6	(TF2, TF1)	N/A	N/A	
>>>>>ctfc	5			
>>>>>gainFactorInform ation	Signalled			
>>>>>βc (FDD only)	8			
>>>>>βd	15			
>>>>>referenceTFCId	0			
>>>>TFCS 7	0			
>>>>>ctfc				
>>>>>gainFactorInform				
ation				
>>>>>referenceTFCId				
>>>>>CtfC				
>>>>>gainFactorInform ation				
>>>>>>referenceTFCId				
>>>>TFCS 9				
>>>>>ctfc				
>>>>>gainFactorInform ation				
>>>>>referenceTFCId				
>>>>TFCS 10				
>>>>>ctfc				
>>>>>gainFactorInform ation				
>>>>>βc (FDD only)				
>>>>>βd				
>>>>>referenceTFCId				
dl-CommonTransChInfo				
>tfcs-SignallingMode	Same as UL	Same as UL	Same as UL	Same as UL
- 100 Olgraming.wodo	Game as 62	Game as 52	Game as of	Game as of
PhyCH INFORMATION FDD				
UL-DPCH-InfoPredef				
>ul-DPCH-				
PowerControlInfo				
>>powerControlAlgorithm	Algorithm 1	Algorithm 1	Algorithm 1	Algorithm 1
>>>tpcStepSize	1 dB	1 dB	1 dB	1 dB
>tfci-Existence	TRUE	TRUE	TRUE	TRUE
>puncturingLimit	0.92	0.8	0.92	1
DL- CommonInformationPrede				
>dl-DPCH-InfoCommon				
>>spreadingFactor	64	64	32	128
>>spreading-actor >>tfci-Existence	TRUE	TRUE	TRUE	TRUE
>>pilotBits	8	8	8	8
>>positionFixed	Flexible	Flexible	Flexible	Flexible
PhyCH INFORMATION	. IOAIDIO	. IOAIDIO	. IOAIDIO	. IOAIDIO
3.84/7.68 Mcps TDD				
UL-DPCH-InfoPredef				
>ul-DPCH-				
PowerControlInfo	0	0	0	0
>>dpch-ConstantValue	0	0	0	0

Configuration	28.8 kbps conv. CS- data + 3.4 kbps signalling	32 kbps conv. CS- data + 3.4 kbps signalling	64kbps conv. CS- data + 3.4 kbps signalling	14.4 kbps streaming CS- data +
	3.4 kbps signalling	3.4 kbps signalling	3.4 kbps signalling	3.4 kbps signalling
>commonTimeslotInfo				<u> </u>
>>secondInterleavingMod	frameRelated	frameRelated	frameRelated	frameRelated
е				
>>tfci-Coding	16	8	8	8
>>puncturingLimit	0.44	0.8	0.56	0.8
>>repetitionPeriodAndLen gth	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1
DL- CommonInformationPrede f				
>dl-DPCH-InfoCommon				
>>commonTimeslotInfo				
>>>secondInterleavingMo de	frameRelated	frameRelated	frameRelated	frameRelated
>>>tfci-Coding	16	8	8	8
>>>puncturingLimit	0.44	0.64	0.56	0.8
>>>repetitionPeriodAndLe ngth	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1
PhyCH INFORMATION 1.28 Mcps TDD				
UL-DPCH-InfoPredef				
>commonTimeslotInfo				
>>secondInterleavingMod	frameRelated	frameRelated	frameRelated	frameRelated
>>tfci-Coding	16	8	8	8
>>puncturingLimit	0.64	0.60	0.64	1
>>repetitionPeriodAndLen gth	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1
DL-				
CommonInformationPrede f				
>dl-DPCH-InfoCommon				
>>commonTimeslotInfo				
>>>secondInterleavingMo	frameRelated	frameRelated	frameRelated	frameRelated
de				
>>>tfci-Coding	16	8	8	8
>>>puncturingLimit	0.64	0.60	0.64	0.88
>>>repetitionPeriodAndLe ngth	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1

1088

Configuration	28.8 kbps streaming CS- data + 3.4 kbps signalling	57.6 kbps streaming CS- data + 3.4 kbps signalling	12.2/7.95/5.9/4.75 kbps speech + 3.4 kbps signalling
Ref 34.108	16	17	4a
Default configuration identity	8	9	10
RB INFORMATION			
rb-Identity	RB1: 1, RB2: 2, RB3: 3, RB5: 5	RB1: 1, RB2: 2, RB3: 3, RB5: 5	RB1: 1, RB2: 2, RB3: 3, RB5: 5, RB6: 6, RB7: 7
rlc-InfoChoice	RIc-info	RIc-info	RIc-info
>ul-RLC-Mode	RB1: UM RB2- RB3: AM RB5: TM	RB1: UM RB2- RB3: AM RB5: TM	RB1: UM RB2- RB3: AM RB5-RB7: TM
>>transmissionRLC-	RB1: N/A	RB1: N/A	RB1: N/A
DiscardMode	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard
	RB5: N/A	RB5: N/A	RB5- RB7: N/A

Configuration	28.8 kbps	57.6 kbps	12.2/7.95/5.9/4.75
	streaming CS- data +	streaming CS- data +	kbps speech + 3.4 kbps signalling
	3.4 kbps signalling	3.4 kbps signalling	
>>>maxDat	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: 15	RB2- RB3: 15	RB2- RB3: 15
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>transmissionWindowSiz	RB1: N/A	RB1: N/A	RB1: N/A
е	RB2- RB3: 128 for	RB2- RB3: 128 for	RB2- RB3: 128 for
	UEs with more than 10 kbyte "total RLC	UEs with more than 10 kbyte "total RLC	UEs with more than 10 kbyte "total RLC
	AM buffer size" and	AM buffer size" and	AM buffer size" and
	32 otherwise	32 otherwise	32 otherwise
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>timerRST	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>max-RST	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: 1	RB2- RB3: 1	RB2- RB3: 1
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>pollingInfo	RB1: N/A	RB1: N/A	RB1: N/A
	RB2- RB3: as below	RB2- RB3: as below	RB2- RB3: as below
>>>lastTransmissionPDU-	RB5: N/A RB2- RB3: FALSE	RB5: N/A RB2- RB3: FALSE	RB5- RB7: N/A RB2- RB3: FALSE
Poll			
>>>lastRetransmissionPD U-Poll	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE
>>>timerPollPeriodic	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A
II DI O M	RB5: FALSE	RB5: FALSE	RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM	RB1: UM RB2- RB3: AM	RB1: UM RB2- RB3: AM
	RB2- RB3: AM RB5: TM	RB5: TM	RB5- RB7: TM
>>inSequenceDelivery	RB1: N/A	RB1: N/A	RB1: N/A
mooquoneo Bonvery	RB2- RB3: TRUE	RB2- RB3: TRUE	RB2- RB3: TRUE
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>receivingWindowSize	RB1: N/A	RB1: N/A	RB1: N/A
, and the second	RB2- RB3: 128 for	RB2- RB3: 128 for	RB2- RB3: 128 for
	UEs with more than	UEs with more than	UEs with more than
	10 kbyte "total RLC	10 kbyte "total RLC	10 kbyte "total RLC
	AM buffer size" and	AM buffer size" and	AM buffer size" and
	32 otherwise	32 otherwise	32 otherwise RB5- RB7: N/A
>>dl-RLC-StatusInfo	RB5: N/A RB1: N/A	RB5: N/A RB1: N/A	RB1: N/A
// Jarineo-Olalusiiiio	RB2- RB3: as below	RB2- RB3: as below	RB2- RB3: as below
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100	RB2- RB3: 100	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: FALSE	RB2- RB3: FALSE	RB2- RB3: FALSE
>>>timerStatusPeriodic	RB2- RB3: 300	RB2- RB3: 300	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A	RB1- RB3: N/A
	RB5: FALSE	RB5: FALSE	RB5- RB7: FALSE
rb-MappingInfo			
>UL-	OneLogicalChannel	OneLogicalChannel	OneLogicalChannel
LogicalChannelMappings	5.	5.1	D .
>>ul-	Dch	Dch	Dch
TransportChannelType >>>transportChannelIdenti	RB1- RB3: 2	RB1- RB3: 2	RB1- RB3: 4
ty	RB5: 1	RB5: 1	RB5: 1, RB6: 2,
'y	INDO. I	INDU. I	RB7: 3
>>logicalChannelIdentity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
- 10 g.co. Orion in Ondoning	RB3: 3	RB3: 3	RB3: 3
	RB5: N/A	RB5: N/A	RB5- RB7: N/A
>>rlc-SizeList	RB1- RB3:	RB1- RB3:	RB1- RB3:
	configured	configured	configured
	RB5: N/A	RB5: N/A	RB5- RB7: N/A

Configuration	28.8 kbps	57.6 kbps	12.2/7.95/5.9/4.75
, and the second	streaming CS- data +	streaming CS- data +	kbps speech + 3.4 kbps signalling
>>mac-	3.4 kbps signalling RB1: 1, RB2: 2,	3.4 kbps signalling RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3 RB5: 5	RB3: 3 RB5: 5	RB3: 3 RB5- RB7: 5
>DL-	1120.0	1120.0	11.50 11.57.0
IogicalChannelMappingList			
>>Mapping option 1	One mapping option	One mapping option	One mapping option
>>>dl-	Dch	Dch	Dch
TransportChannelType	DD4 DD2: 2	RB1- RB3: 2	RB1- RB3: 4
>>>>transportChannelIden tity	RB1- RB3: 2 RB5: 1	RB5: 1	RB5: 1, RB6: 2, RB7: 3
>>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3: 3 RB5: N/A	RB1: 1, RB2: 2, RB3: 3 RB5: N/A	RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A
TrCH INFORMATION PER TrCH			
UL- AddReconfTransChInfoLis t			
>Uplink transport channel type	dch	dch	dch
>transportChannelIdentity	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4
>transportFormatSet	DedicatedTransChT FS	DedicatedTransChT FS	DedicatedTransChT FS
>>dynamicTF-information			
>>>tf0/ tf0,1	TrCH1: (0x576, 1x576, 2x576) TrCH2: (0x144, 1x144)	TrCH1: (0x576, 1x576, 2x576, 3x576, 4x576) TrCH2: (0x144, 1x144)	TrCH1: (0x81) TrCH2: (0x 103 TrCH3: (0x 60) TrCH4: (0x144)
>>>rlcSize	TrCH1: OctetMode TrCH2:BitMode	TrCH1: OctetMode TrCH2:BitMode	BitMode
>>>sizeType	TrCH1: type 2, part1= 9,	TrCH1: type 2, part1= 9,	TrCH1: type 1: 81 TrCH2: type 1: 103
	part2= 2 (576) TrCH2: type 2, part1= 2,	part2= 2 (576) TrCH2: type 2, part1= 2,	TrCH3: type 1: 60 TrCH4: type 2, part1= 2, part2= 0
	part2= 0 (144)	part2= 0 (144)	(144)
>>>>numberOfTbSizeList	TrCH1: Zero, one, 2 TrCH2: Zero, one	TrCH1: Zero, one, 2, 3, 4 TrCH2: Zero, one	TrCH1-4: Zero
>>>logicalChannelList	All	All	All
>>>tf 1			TrCH1: (1x39) TrCH2: (1x53) TrCH3: (1x60) TrCH4: (1x144)
>>>numberOfTransportBl			TrCH1-4: One
>>>rlc-Size			TrCH1-3: BitMode
>>>>sizeType			TrCH1: type 1: 39 TrCH2: type 1: 53 TrCH3: type 1: 60 TrCH4: type 2, part1= 2, part2= 0 (144)
>>>numberOfTbSizeList			TrCH1-4: One
>>>>logicalChannelList			TrCH1-4: all
>>>tf 2			TrCH1: (1x42) TrCH2: (1x63) TrCH3- TrCH4: N/A
>>>numberOfTransportBl ocks			TrCH1-2: One

Configuration	28.8 kbps	57.6 kbps	12.2/7.95/5.9/4.75
	streaming CS- data +	streaming CS- data +	kbps speech + 3.4 kbps signalling
	3.4 kbps signalling	3.4 kbps signalling	
>>>rlc-Size			TrCH1: BitMode
>>>>sizeType			TrCH1: type 1: 42 TrCH2: type 1: 63
>>>>numberOfTbSizeList			TrCH1-2: One
>>>logicalChannelList			TrCH1: all
>>>tf 3			TrCH1: (1x55) TrCH2: (1x84)
			TrCH3- TrCH4: N/A
>>>numberOfTransportBl ocks			TrCH1-2: One
>>>rlc-Size			TrCH1: BitMode
>>>>sizeType			TrCH1: type 1: 55 TrCH2: type 1: 84
>>>>numberOfTbSizeList			TrCH1-2: One
>>>>logicalChannelList			TrCH1: all
>>>tf 4			TrCH1: (1x75)
			TrCH2: (1x103) TrCH3- TrCH4: N/A
>>>numberOfTransportBl			TrCH1-2: One
ocks			
>>>rlc-Size			TrCH1: BitMode
>>>>sizeType			TrCH1: type 1: 75 TrCH2: type 1: 103
>>>numberOfTbSizeList			TrCH2. type 1. 103
>>>logicalChannelList			TrCH1: all
>>>tf 5			TrCH1: (1x81)
			TrCH2- TrCH4: N/A
>>>numberOfTransportBl ocks			TrCH1: One
>>>rlc-Size			TrCH1: BitMode
>>>>sizeType			TrCH1: type 1: 81
>>>numberOfTbSizeList			TrCH1: One
>>>>logicalChannelList			TrCH1: all
>>semiStaticTF- Information			
>>>tti	TrCH1: 40 TrCH2: 40	TrCH1: 40 TrCH2: 40	TrCH1- TrCH3: 20 TrCH4: 40
>>>channelCodingType	TrCH1: Turbo	TrCH1: Turbo	Convolutional
	TrCH2:	TrCH2:	
>>>codingRate	Convolutional TrCH1: N/A	Convolutional TrCH1: N/A	TrCH1- TrCH2:
>>>codingrate	TrCH2: Third	TrCH2: Third	Third
			TrCH3: Half
			TrCH4: Third
>>>rateMatchingAttribute	TrCH1: 155	TrCH1: 145	TrCH1: 200
	TrCH2: 160	TrCH2: 160	TrCH2: 190 TrCH3: 235
			TrCH4: 160
>>>crc-Size	TrCH1: 16	TrCH1: 16	TrCH1: 12
	TrCH2: 16	TrCH2: 16	TrCH2- TrCH3: 0 TrCH4: 16
DL-			
AddReconfTransChInfoLis t			
>Downlink transport channel type	dch	dch	dch
>dl-	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2,
TransportChannelIdentity (should be as for UL)			TrCH3: 3, TrCH4: 4

Configuration	28.8 kbps	57.6 kbps	12.2/7.95/5.9/4.75
	streaming CS- data +	streaming CS-	kbps speech + 3.4 kbps signalling
	3.4 kbps signalling	3.4 kbps signalling	3.4 kbps signaling
>tfs-SignallingMode	SameAsUL	SameAsUL	Independent
			<only on="" td="" tf0="" trch1<=""></only>
			is different and shown below>
>>transportFormatSet			DedicatedTransChT
			FS
>>>dynamicTF-information			
>>>tf0/tf0,1			TrCH1: (1x0)
>>>rlcSize >>>>sizeType			bitMode TrCH1: type 1: 0
>>>numberOfTbSizeList			TrCH1: One
>>>logicalChannelList			All
>>ULTrCH-Id	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2	TrCH1: 1, TrCH2: 2,
			TrCH3: 3, TrCH4: 4
>dch-QualityTarget	2	2	2
>>bler-QualityValue	TrCH1: 1x10 ⁻²	TrCH1: 1x10 ⁻²	TrCH1: 7x10 ⁻³
	TrCH2: Absent	TrCH2: Absent	TrCH2- TrCH4: Absent
TrCH INFORMATION,			Absent
COMMON			
ul-CommonTransChInfo			
>tfcs-ID (TDD only)	1	1	1
>sharedChannelIndicator (TDD only)	FALSE	FALSE	FALSE
>tfc-Subset	Absent, not required	Absent, not required	Absent, not required
>ul-TFCS	Normal TFCI	Normal TFCI	Normal TFCI
	signalling	signalling	signalling
>>explicitTFCS-	Complete	Complete	Complete
ConfigurationMode >>>ctfcSize	Ctfc4Bit	Ctfc4Bit	Ctfc8Bit
>>>TFCS representation	Addition	Addition	Addition
>>>>TFCS list	7 taattori	7 tadition	7 tadition
>>>>TFCS 1	(TF0, TF0)	(TF0, TF0)	(TF0, TF0, TF0,
	0	0	TF0)
>>>>>ctfc >>>>>gainFactorInform	0 Computed	0 Computed	Computed
ation	Computed	Computed	Computed
>>>>>>referenceTFCId	0	0	0
>>>>TFCS 2	(TF1, TF0)	(TF1, TF0)	(TF1, TF0, TF0,
	4	4	TF0)
>>>>>ctfc >>>>>gainFactorInform	1 Computed	Computed	Computed
ation	Computed	Computod	Computod
>>>>>βc (FDD only)	N/A	N/A	N/A
>>>>>βd	N/A	N/A	N/A
>>>>>referenceTFCId	0	0	0
>>>>TFCS 3	(TF2, TF0)	(TF2, TF0)	(TF2, TF1, TF0,
otfo	2	2	TF0) 8
>>>>>ctfc >>>>>gainFactorInform	Computed	Computed	Computed
ation	Joinpalou	Joinpalou	Joinpalou
>>>>>referenceTFCId	0	0	0
>>>>TFCS 4	(TF0, TF1)	(TF3, TF0)	(TF3, TF2, TF0,
>>>>>ctfc	3	3	TF0) 15
>>>>>ctrc >>>>>sgainFactorInform	Computed	Computed	Computed
ation	Joinpalou	Joinpalou	Joinpalou
>>>>>βc (FDD only)	N/A	N/A	N/A
>>>>>βd	N/A	N/A	N/A
>>>>>>referenceTFCId	0	0	0

Configuration	28.8 kbps	57.6 kbps	12.2/7.95/5.9/4.75
	streaming CS- data +	streaming CS- data +	kbps speech + 3.4 kbps signalling
	3.4 kbps signalling	3.4 kbps signalling	
>>>>TFCS 5	(TF1, TF1)	(TF4, TF0)	(TF4, TF3, TF0, TF0)
>>>>>ctfc	4	4	22
>>>>>gainFactorInform	Computed	Computed	Computed
>>>>>>referenceTFCId	0	0	0
>>>>TFCS 6	(TF2, TF1)	(TF0, TF1)	(TF5, TF4, TF1, TF0)
>>>>>ctfc	5	5	59
>>>>>gainFactorInform ation	Signalled	Computed	Computed
>>>>>βc (FDD only)	8	N/A	N/A
>>>>>βd	15	N/A	N/A
>>>>>>referenceTFCId	0	0	0
>>>>TFCS 7		(TF1, TF1)	(TF0,TF0,TF0,TF1)
>>>>>ctfc		6	60
>>>>> gainFactorInform ation		Computed	Computed
>>>>>>referenceTFCId		0	0
>>>>TFCS 8		(TF2, TF1)	(TF1,TF0,TF0,TF1)
>>>>>ctfc		7	61
>>>>>gainFactorInform ation		Computed	Computed
>>>>>referenceTFCld		0	0
>>>>TFCS 9		(TF3, TF1)	(TF2,TF1,TF0,TF1)
>>>>>ctfc		8	68
>>>>>gainFactorInform ation		Computed	Computed
>>>>>referenceTFCId		0	0
>>>>TFCS 10		(TF4, TF1)	(TF3,TF2,TF0,TF1)
>>>>>ctfc		9	75
>>>>> sgainFactorInform ation		Signalled	Computed
>>>>>βc (FDD only)		8	N/A
>>>>>βd		15	N/A
>>>>>referenceTFCId		0	0
>>>>TFCS 11			(TF4,TF3,TF0,TF1)
>>>>>ctfc			82
>>>>>gainFactorInform ation			Computed
>>>>>referenceTFCld			0
>>>>TFCS 12			(TF5,TF4,TF1,TF1)
>>>>>ctfc >>>>>gainFactorInform			119 Signalled
ation			
>>>>>βc (FDD only)			11
>>>>>βd			15
>>>>>referenceTFCld			0
dl-CommonTransChInfo			
>tfcs-SignallingMode PhyCH INFORMATION	Same as UL	Same as UL	Same as UL
FDD UL-DPCH-InfoPredef			
>ul-DPCH-			
PowerControlInfo			
>>powerControlAlgorithm	Algorithm 1	Algorithm 1	Algorithm 1
>>>tpcStepSize	1 dB	1 dB	1 dB
>tfci-Existence	TRUE	TRUE	TRUE
>puncturingLimit	1	1	0.88

Configuration	28.8 kbps streaming CS- data +	57.6 kbps streaming CS- data +	12.2/7.95/5.9/4.75 kbps speech + 3.4 kbps signalling
	3.4 kbps signalling	3.4 kbps signalling	0.4 KDPS Signaling
DL-			
CommonInformationPrede f			
>dl-DPCH-InfoCommon			
>>spreadingFactor	64	32	128
>>tfci-Existence	TRUE	TRUE	FALSE
>>pilotBits	8	8	4
>>positionFixed	Flexible	Flexible	Fixed
PhyCH INFORMATION 3.84/7.68 Mcps TDD			
UL-DPCH-InfoPredef			
>ul-DPCH- PowerControlInfo			
>>dpch-ConstantValue	0	0	0
>commonTimeslotInfo	0		
>>secondInterleavingMod e	frameRelated	frameRelated	frameRelated
>>tfci-Coding	16	16	16
>>puncturingLimit	0.44	0.48	0.88
>>repetitionPeriodAndLen	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1
gth	-		
DL- CommonInformationPrede			
f			
>dl-DPCH-InfoCommon			
>>commonTimeslotInfo			
>>>secondInterleavingMo de	frameRelated	frameRelated	frameRelated
>>>tfci-Coding	16	16	16
>>>puncturingLimit	0.44	0.48	0.92
>>>repetitionPeriodAndLe	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1
PhyCH INFORMATION 1.28 Mcps TDD			
UL-DPCH-InfoPredef			
>commonTimeslotInfo	from a Dalate d	from Deleted	
>>secondInterleavingMod	frameRelated	frameRelated	
e >>tfci-Coding	16	16	
>>puncturingLimit	0.64	0.72	
>>repetitionPeriodAndLen	repetitionPeriod1	repetitionPeriod1	
gth	. spoulion onour	. spoulion onour	
DL-			
CommonInformationPrede f			
>dl-DPCH-InfoCommon			
>>commonTimeslotInfo			
>>>secondInterleavingMo de	frameRelated	frameRelated	frameRelated
>>>tfci-Coding	16	16	16
>>>puncturingLimit	0.64	0.72	0.92
>>>repetitionPeriodAndLe ngth	repetitionPeriod1	repetitionPeriod1	repetitionPeriod1

Configuration	10.2/6.7/5.9/4.75 kbps speech + 3.4 kbps signalling	7.4/6.7/5.9/4.75 kbps speech + 3.4 kbps signalling
	+ 0.15 kbps SRB#5	+ 0.15 kbps SRB#5
Ref 34.108	5a	7a
Default configuration	11	12
identity		
RB INFORMATION	77 77	554 4 554 4
rb-Identity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
	RB3: 3, RB5: 5, RB6: 6, RB7: 7,	RB3: 3, RB5: 5, RB6: 6, RB7: 7
	RB8: 8	11. Do. 0, 11. 7
rlc-InfoChoice	RIc-info	RIc-info
>ul-RLC-Mode	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM
too no principa DLO	RB5-RB7: TM	RB5-RB6: TM
>>transmissionRLC- DiscardMode	RB1: N/A RB2- RB3:	RB1: N/A RB2- RB3:
Discardiviode	NoDiscard	NoDiscard
	RB5- RB7: N/A	RB5- RB6: N/A
>>>maxDat	RB1: N/A	RB1: N/A
	RB2- RB3: 15	RB2- RB3: 15
- transmississIMississO	RB5- RB7: N/A RB1: N/A	RB5- RB6: N/A
>>transmissionWindowSiz	RB1: N/A RB2- RB3: 128 for	RB1: N/A RB2- RB3: 128 for
	UEs with more than	UEs with more than
	10 kbyte "total RLC	10 kbyte "total RLC
	AM buffer size" and	AM buffer size" and
	32 otherwise	32 otherwise
tion a pDOT	RB5- RB7: N/A	RB5- RB6: N/A
>>timerRST	RB1: N/A RB2- RB3: 300	RB1: N/A RB2- RB3: 300
	RB5- RB7: N/A	RB5- RB6: N/A
>>max-RST	RB1: N/A	RB1: N/A
	RB2- RB3: 1	RB2- RB3: 1
	RB5- RB7: N/A	RB5- RB6: N/A
>>pollingInfo	RB1: N/A	RB1: N/A
	RB2- RB3: as below RB5- RB7: N/A	RB2- RB3: as below RB5- RB6: N/A
>>>lastTransmissionPDU-	RB2- RB3: FALSE	RB2- RB3: FALSE
Poll		
>>>lastRetransmissionPD	RB2- RB3: FALSE	RB2- RB3: FALSE
U-Poll	DD0 DD0 000	DD0 DD0 000
>>>timerPollPeriodic	RB2- RB3: 300	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A RB5- RB7: FALSE	RB1- RB3: N/A RB5- RB6: FALSE
>dl-RLC-Mode	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM
	RB5- RB7: TM	RB5- RB6: TM
	RB8: TM	RB7: TM
>>inSequenceDelivery	RB1: N/A	RB1: N/A
	RB2- RB3: TRUE RB5- RB8: N/A	RB2- RB3: TRUE RB5- RB7: N/A
>>receivingWindowSize	RB1: N/A	RB1: N/A
	RB2- RB3: 128 for	RB2- RB3: 128 for
	UEs with more than	UEs with more than
	10 kbyte "total RLC	10 kbyte "total RLC
	AM buffer size" and 32 otherwise	AM buffer size" and 32 otherwise
	RB5- RB8: N/A	RB5- RB7: N/A
>>dl-RLC-StatusInfo	RB1: N/A	RB1: N/A
	RB2- RB3: as below	RB2- RB3: as below
	RB5- RB8: N/A	RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: FALSE	RB2- RB3: FALSE
>>>timerStatusPeriodic	RB2- RB3: 300	RB2- RB3: 300

	T ==	
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A
	RB5- RB8: FALSE	RB5- RB7: FALSE
rb-MappingInfo	0 1 1 101 1	0 1 1 101 1
>UL-	OneLogicalChannel	OneLogicalChannel
LogicalChannelMappings	5.1	5.
>>ul-	Dch	Dch
TransportChannelType	DD4 DD6 4	DD4 DD0 0
>>>transportChannelIdentit	RB1- RB3: 4	RB1- RB3: 3
У	RB5: 1, RB6: 2,	RB5: 1, RB6: 2
1 : 101	RB7: 3,	DD4 4 DD0 0
>>logicalChannelIdentity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
	RB3: 3	RB3: 3
	RB5- RB7: N/A	RB5- RB6: N/A
>>rlc-SizeList	RB1- RB3:	RB1- RB3:
	configured	configured
	RB5- RB7: N/A	RB5- RB6: N/A
>>mac-	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3	RB3: 3
	RB5- RB7: 5	RB5- RB6: 5
>DL-		
IogicalChannelMappingList		
>>Mapping option 1	One mapping option	One mapping option
>>>dl-	Dch	Dch
TransportChannelType	DD4 BD2 4	DD4 DD2 2
>>>>transportChannellden	RB1- RB3: 4	RB1- RB3: 3
tity	RB5: 1, RB6: 2,	RB5: 1, RB6: 2,
	RB7: 3, RB8: 5	RB7:4
>>>logicalChannelIdentity	RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
	RB3: 3	RB3: 3
	RB5- RB8: N/A	RB5- RB7: N/A
TrCH INFORMATION PER		
TrCH		
UL-		
AddReconfTransChInfoList		
>Uplink transport channel	dch	dch
type		
>transportChannelIdentity	TrCH1: 1, TrCH2: 2,	TrCH1: 1, TrCH2: 2,
	TrCH3: 3, TrCH4: 4	TrCH3: 3
>transportFormatSet	DedicatedTransChT	DedicatedTransChT
	FS	FS
>>dynamicTF-information	T 0114 (0.05)	T 0114 (0.04)
>>>tf0/ tf0,1	TrCH1: (0x65)	TrCH1: (0x61)
	TrCH2: (0x 99)	TrCH2: (0x 87)
	TrCH3: (0x 40,	TrCH3: (0x 144,
	1x40)	1x144)
	TrCH4: (0x144,	
	1x144)	DiaMod-
>>>rlcSize	BitMode	BitMode
>>>>sizeType	TrCH1: type 1: 65	TrCH1: type 1: 61
	TrCH2: type 1: 99	TrCH2: type 1: 87
	TrCH3: type 1: 40	TrCH3: 2: type 2,
	TrCH4: 2: type 2,	part1= 2, part2= 0
	part1= 2, part2= 0	(144)
· · · · · · · · · · · · · · · · · · ·	(144)	T-014 0: 7-:
>>>>numberOfTbSizeList	TrCH1-2: Zero	TrCH1-2: Zero
logicalOhamaaniii-t	TrCH3-4: Zero, one	TrCH3: Zero, one
>>>logicalChannelList	All TrCH1: (1x39)	All
>>>tf 1	T THE HIT (TVKU)	TrCH1: (1x39)
		TrCU2. (4.:52)
	TrCH2: (1x 53)	TrCH2: (1x53)
The second secon	TrCH2: (1x 53) TrCH3- TrCH4: N/A	TrCH3: N/A
>>>numberOfTransportBl	TrCH2: (1x 53) TrCH3- TrCH4: N/A TrCH1: One	TrCH3: N/A TrCH1: One
ocks	TrCH2: (1x 53) TrCH3- TrCH4: N/A TrCH1: One TrCH2: One	TrCH3: N/A TrCH1: One TrCH2: One
ocks >>>rlc-Size	TrCH2: (1x 53) TrCH3- TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode	TrCH3: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode
ocks	TrCH2: (1x 53) TrCH3- TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 39	TrCH3: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 39
ocks >>>rlc-Size	TrCH2: (1x 53) TrCH3- TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode	TrCH3: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode

>>>>logicalChannelList	TrCH1: all	TrCH1: all
>>>tf 2	TrCH1: (1x42)	TrCH1: (1x42)
	TrCH2: (1x63)	TrCH2: (1x63)
	TrCH3- TrCH4: N/A	TrCH3: N/A
>>>>numberOfTransportBl	TrCH1: One	TrCH1: One
ocks	TrCh2: One	TrCh2: One
>>>rlc-Size	TrCH1: BitMode	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 42	TrCH1: type 1: 42
0.771.01	TrCH2: type 1: 63	TrCH2: type 1: 63
>>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
logicalChannell ist	TrCH2: One TrCH1: all	TrCH2: One TrCH1: all
>>>logicalChannelList	TrCH1: all	TrCH1: all
>>>tf 3	TrCH1: (1x55)	TrCH1: (1x55)
777410	TrCH2: (1x76)	TrCH2: (1x76)
	TrCH3- TrCH4: N/A	TrCH3: N/A
>>>>numberOfTransportBl	TrCH1: One	TrCH1: One
ocks	TrCh2: One	TrCh2: One
>>>>rlc-Size	TrCH1: BitMode	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 55	TrCH1: type 1: 55
	TrCH2: type 1: 76	TrCH2: type 1: 76
>>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
1	TrCH2: One	TrCH2: One
>>>>logicalChannelList	TrCH1: all	TrCH1: all
	TrCH2: all	TrCH2: all
>>>tf 4	TrCH1: (1x58)	TrCH1: (1x58)
	TrCH2: (1x99) TrCH3- TrCH4: N/A	TrCH2: (1x87) TrCH3: N/A
>>>>numberOfTransportBl	TrCH1: One	TrCH3: N/A
ocks	TrCh2: One	TrCh2: One
>>>rlc-Size	TrCH1: BitMode	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 58	TrCH1: type 1: 58
	TrCH2: type 1: 99	TrCH2: type 1: 87
>>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
	TrCH2: One	TrCH2: One
>>>>logicalChannelList	TrCH1: all	TrCH1: all
	TrCH2: all	TrCH2: all
>>>tf 5	TrCH1: (1x65)	TrCH1: (1x61)
	TrCH2- TrCH4: N/A	TrCH2- TrCH4: N/A
>>>>numberOfTransportBl	TrCH1: One	TrCH1: One
ocks	TrCU1. DitMode	TrCH1: BitMode
>>>rlc-Size	TrCH1: BitMode	
>>>>sizeType	TrCH1: type 1: 65	TrCH1: type 1: 61
>>>numberOfTbSizeList	TrCH1: One TrCH1: all	TrCH1: One TrCH1: all
>>>logicalChannelList >>semistaticTF-Information	IICHT. all	TICHT. all
>>semistatic i F-information	TrCH1- TrCH3: 20	TrCH1- TrCH2: 20
	TrCH4: 40	TrCH1- 11CH2. 20
>>>channelCodingType	Convolutional	Convolutional
>>>codingRate	TrCH1- TrCH2:	TrCH1- TrCH2:
i i i i i i i i i i i i i i i i i i i	Third	Third
	TrCH3: Half	TrCH3: Third
	TrCH4: Third	<u> </u>
>>>rateMatchingAttribute	TrCH1: 200	TrCH1: 200
	TrCH2: 190	TrCH2: 190
	TrCH3: 235	TrCH3: 160
0:	TrCH4: 160	T 014 40
>>>crc-Size	TrCH1: 12	TrCH1: 12
	TrCH2- TrCH3: 0	TrCH2: 0
DL-	TrCH4: 16	TrCH3: 16
AddReconfTransChInfoList		
>Downlink transport	dch	dch
channel type	GOIT	GOIT
>dl-		
TransportChannelldentity		
	l .	ll

(O: II: M I	I	I
>tfs-SignallingMode	Independent	Independent
	<only on="" td="" tf0="" trch1<=""><td><only on="" td="" tf0="" trch1<=""></only></td></only>	<only on="" td="" tf0="" trch1<=""></only>
	and tf0/tf1 on	and tf0/tf1 on
	TrCH5 are different	TrCH4 are different
	and shown below>	and shown below>
>>transportFormatSet		
>>>dynamicTF-information		
>>>>tf0/ tf0,1	TrCH1: (1x0)	TrCH1: (1x0)
	TrCH5: (0x3, 1x3)	TrCH4: (0x3, 1x3)
>>>>rlcSize	BitMode	bitMode
>>>>sizeType	TrCH1: type 1: 0	TrCH1: type 1: 0
	TrCH5: type 1: 3	TrCH4: type 1: 3
>>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
>>>>iiuiiibeiOiibSizeList		
	TrCH5: Zero, one	TrCH4: Zero, one
>>>>logicalChannelList	All	All
>>>semistaticTF-	same as UL except	same as UL except
Information	for TrCH5	for TrCH4
>>>tti	TrCH5: 20	TrCH4: 20
>>>channelCodingType	Convolutional	Convolutional
>>>>codingRate	TrCH5: Third	TrCH4: Third
>>>>rateMatchingAttribute	TrCH5: 200	TrCH4: 200
>>>crc-Size	TrCH5: 12	TrCH4: 12
>>ULTrCH-Id	TrCH1: 1, TrCH2: 2,	TrCH1: 1, TrCH2: 2,
SETION IG	TrCH3: 3, TrCH4: 4,	TrCH3: 3
adab Ovalle Tara	110113. 3, 11004. 4,	110110. 3
>dch-QualityTarget		
>>bler-QualityValue	TrCH1: 7x10 ⁻³	TrCH1: 7x10 ⁻³
	TrCH2- TrCH5:	TrCH2- TrCH4:
	Absent	Absent
TrCH INFORMATION,		
COMMON		
ul-CommonTransChInfo		
>tfcs-ID (TDD only)	1	1
>sharedChannelIndicator	FALSE	FALSE
	FALSE	FALSE
(TDD only)		
> tfc-Subset	Absent, not required	Absent, not required
>ul-TFCS	Normal TFCI	Normal TFCI
	signalling	signalling
>>explicitTFCS-	Complete	Complete
ConfigurationMode		Comp.o.c
>>>ctfcSize	CtfoODit	CtfoCDit
	Ctfc8Bit	Ctfc6Bit
>>>TFCS representation	Addition	Addition
>>>>TFC list		
>>>>TFC 1	(TF0, TF0, TF0,	(TF0, TF0, TF0)
	TF0)	
>>>>>ctfc	0	0
		•
>>>>>gainFactorInform	Computed	Computed
ation		
>>>>>>referenceTFCld	0	0
>>>>TFC 2	(TF1, TF0, TF0,	(TF1, TF0, TF0)
	TF0)	` ' ' ' '
>>>>>ctfc	1	1
		'
>>>>>>		
>>>>>gainFactorInform	Computed	Computed
ation	·	Computed
ation	Computed N/A	N/A
ation >>>>>βc (FDD only)	N/A	N/A
ation >>>>>βc (FDD only) >>>>>βd	N/A N/A	N/A N/A
ation >>>>>βc (FDD only) >>>>>>βd >>>>>referenceTFCId	N/A N/A 0	N/A N/A 0
ation >>>>>βc (FDD only) >>>>>βd	N/A N/A	N/A N/A
ation >>>>>βc (FDD only) >>>>>>βd >>>>>referenceTFCId	N/A N/A 0	N/A N/A 0
ation >>>>>βc (FDD only) >>>>>βd >>>>>TFC 3	N/A N/A 0 (TF2, TF1, TF0, TF0)	N/A N/A 0 (TF2, TF1, TF0)
ation >>>>>βc (FDD only) >>>>>βd >>>>>TFC 3 >>>>>ctfc	N/A N/A 0 (TF2, TF1, TF0, TF0) 8	N/A N/A 0 (TF2, TF1, TF0)
ation >>>>>>βc (FDD only) >>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>gainFactorInform	N/A N/A 0 (TF2, TF1, TF0, TF0)	N/A N/A 0 (TF2, TF1, TF0)
ation >>>>>βc (FDD only) >>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>gainFactorInform ation	N/A N/A 0 (TF2, TF1, TF0, TF0) 8 Computed	N/A N/A 0 (TF2, TF1, TF0) 8 Computed
ation >>>>>>βc (FDD only) >>>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>>gainFactorInform ation >>>>>>referenceTFCld	N/A N/A 0 (TF2, TF1, TF0, TF0) 8 Computed 0	N/A N/A 0 (TF2, TF1, TF0) 8 Computed 0
ation >>>>>βc (FDD only) >>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>gainFactorInform ation	N/A N/A 0 (TF2, TF1, TF0, TF0) 8 Computed	N/A N/A 0 (TF2, TF1, TF0) 8 Computed
ation >>>>>>βc (FDD only) >>>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>>gainFactorInform ation >>>>>>referenceTFCld	N/A N/A 0 (TF2, TF1, TF0, TF0) 8 Computed 0 (TF3, TF2, TF0,	N/A N/A 0 (TF2, TF1, TF0) 8 Computed 0
ation >>>>>>βc (FDD only) >>>>>>βd >>>>>TFC 3 >>>>>ctfc >>>>>>gainFactorInform ation >>>>>referenceTFCld	N/A N/A 0 (TF2, TF1, TF0, TF0) 8 Computed 0	N/A N/A 0 (TF2, TF1, TF0) 8 Computed 0

		T
>>>>>gainFactorInform	Computed	Computed
ation		
>>>>>βc (FDD only)		
>>>>>βd		
>>>>>>referenceTFCId	0	0
>>>>TFC 5	(TF4, TF3, TF0,	(TF4, TF3, TF0)
	TF0)	
>>>>>ctfc	22	22
>>>>>gainFactorInform	Computed	Computed
ation		
>>>>>referenceTFCld	0	(TEE TEA TEO)
>>>>TFC 6	(TF5, TF4, TF1,	(TF5, TF4, TF0)
otfo	TF0) 59	29
>>>>>ctfc >>>>>gainFactorInform	Computed	Computed
ation	Computed	Computed
>>>>>βc (FDD only)	<u> </u>	
>>>>>βd	0	0
>>>>>referenceTFCld	(TEO TEO TEO	(TF0, TF0, TF1)
>>>>> FU	(TF0, TF0, TF0, TF1)	(150, 150, 151)
>>>>>ctfc	60	30
>>>>>gainFactorInform	Computed	Computed
ation	Jonipalou	Joinpaled
>>>>>referenceTFCId	0	0
>>>>TFC 8	(TF1, TF0, TF0,	(TF1, TF0, TF1)
	TF1)	, -, -, ,
>>>>>ctfc	61	31
>>>>>gainFactorInform	computed	computed
ation		
>>>>>βc (FDD only)		
>>>>>βd		
>>>>>>referenceTFCld	0	0
>>>>TFC 9	(TF2, TF1, TF0,	(TF2, TF1, TF1)
	TF1)	
>>>>>ctfc	68	38
>>>>>gainFactorInform	computed	computed
ation		
>>>>>referenceTFCld	0	0
>>>>TFC 10	(TF3, TF2, TF0,	(TF3, TF2, TF1)
>>>>>	TF1)	15
>>>>>ctfc >>>>>gainFactorInform	75 computed	45
ation	Compated	computed
	1	
>>>>>βc (FDD only)	+	+
>>>>>βd		
>>>>>referenceTFCId	(TE4 TE2 TE0	(TE4 TE2 TE4)
>>>>> IFU TT	(TF4, TF3, TF0, TF1)	(TF4, TF3, TF1)
>>>>>ctfc	82	52
>>>>>sciic	computed	computed
ation	Computed	Compated
>>>>>referenceTFCId	0	0
>>>>TFC 12	(TF5, TF4, TF1,	(TF5, TF4, TF1)
	TF1)	,,,
>>>>>ctfc	119	59
>>>>>gainFactorInform	signalled	signalled
ation		
>>>>>βc (FDD only)	11	11
>>>>>βd	15	15
>>>>>referenceTFCId	0	0
> TFC subset list		<u> </u>
		1
>>TFC subset 1	(speech rate 10.2)	(speech rate 7.4)

	/==o + ==o -	/=== . ====
>>> Allowed transport	(TFC1, TFC2,	(TFC1, TFC2,
format combination list	TFC3, TFC4, TFC5,	TFC3, TFC4, TFC5,
	TFC7, TFC8, TFC6,	TFC7, TFC8, TFC6,
	TFC9, TFC10,	TFC9, TFC10,
	TFC11, TFC12)	TFC11, TFC12)
>>TFC subset 2	(speech rate 6.7)	(speech rate 6.7)
>>> Allowed transport	(TFC1, TFC2,	(TFC1, TFC2,
•	(1601, 1602,	
format combination list	TFC3, TFC4, TFC7,	TFC3, TFC4, TFC7,
	TFC8, TFC5, TFC9,	TFC8, TFC5, TFC9,
	TFC10, TFC11)	TFC10, TFC11)
TEO and a at 0		
>>TFC subset 3	(speech rate 5.9)	(speech rate 5.9)
>>> Allowed transport	(TFC1, TFC2,	(TFC1, TFC2,
format combination list	TFC3, TFC7, TFC8,	TFC3, TFC7, TFC8,
	TFC4, TFC9,	TFC4, TFC9,
	TFC10)	TFC10)
>>TFC subset 4	(speech rate 4.75)	(speech rate 4.75)
>>> Allowed transport	(TFC1, TFC2,	(TFC1, TFC2,
<u> </u>		
format combination list	TFC7, TFC8, TFC3,	TFC7, TFC8, TFC3,
	TFC9)	TFC9)
dl-CommonTransChInfo		
	Indopondent	Indopondent
>tfcs-SignallingMode	Independent	Independent
>tfcs-ID (TDD only)	1	1
>sharedChannelIndicator	FALSE	FALSE
(TDD only)		
	A1	A1
> tfc-Subset	Absent, not required	Absent, not required
>dl-TFCS	Normal TFCI	Normal TFCI
	signalling	signalling
II VITEOO	U	<u> </u>
>>explicitTFCS-	Complete	Complete
ConfigurationMode		
>>>ctfcSize	Ctfc8Bit	Ctfc8Bit
>>>>TFCS representation	Addition	Addition
>>>>TFCS list		
>>>>>TFC 1	(TF0, TF0, TF0,	(TF0, TF0, TF0,
1		
	TF0, TF0)	TF0)
>>>>>ctfc	0	0
>>>>>ctfc	0	0
	0 (TF1, TF0, TF0,	0 (TF1, TF0, TF0,
>>>>TFC 2	0 (TF1, TF0, TF0, TF0, TF0)	0 (TF1, TF0, TF0, TF0)
>>>>TFC 2 >>>>>ctfc	0 (TF1, TF0, TF0, TF0, TF0)	0 (TF1, TF0, TF0, TF0)
>>>>TFC 2	0 (TF1, TF0, TF0, TF0, TF0)	0 (TF1, TF0, TF0, TF0)
>>>>TFC 2 >>>>>ctfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0,
>>>>TFC 2 >>>>>ctfc >>>>>TFC 3	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0)	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>>tfc >>>>>>tfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8
>>>>TFC 2 >>>>>ctfc >>>>>TFC 3	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>>tfc >>>>>>tfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>TFC 4	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0)	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0)
>>>>>TFC 2 >>>>>ctfc >>>>>TFC 3 >>>>>tfc 3	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>TFC 3	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>TFC 4 >>>>>TFC 5	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>TFC 4 >>>>>>tfc >>>>>>TFC 5 >>>>>>tfc >>>>>>tfc >>>>>>tfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>TFC 4 >>>>>TFC 5	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>TFC 4 >>>>>>tfc >>>>>>TFC 5 >>>>>>tfc >>>>>>tfc >>>>>>tfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>>TFC 5 >>>>>TFC 5	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 6 >>>>>>tfc >>>>>>tfc >>>>>>>>>>>>>>>>>>	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>>TFC 5 >>>>>TFC 5	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 6 >>>>>>tfc >>>>>>tfc >>>>>>>>>>>>>>>>>>	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>tfc >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>tfc >>>>>TFC 7	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>tfc >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>tfc >>>>>TFC 6 >>>>>TFC 6	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>tfc >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>tfc >>>>>TFC 7	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>tfc >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF1, TF0) 61	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>tfc 3 >>>>>tfc 3 >>>>>tfc 4 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc >>>>>tfc >>>>>tfc >>>>>TFC 6	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF1, TF0) 61	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 4 >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 8	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>tfc 3 >>>>>tfc 3 >>>>>tfc 4 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc 5 >>>>>tfc >>>>>>>tfc	0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0) 59 (TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF1, TF0) 68	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0, TF0, TF0, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF1, TF0, TF1, TF0) 68 (TF3, TF2, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>TFC 4 >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 9 >>>>>TFC 10	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0, TF0, TF0, TF0) 59 (TF0, TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF0, TF1, TF0) 68 (TF3, TF2, TF0, TF1, TF0, TF1, TF0)	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1, TF0)
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>TFC 3 >>>>>TFC 4 >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 8 >>>>>TFC 9 >>>>>>TFC 9	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0, TF0, TF0, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF1, TF0, TF1, TF0) 68 (TF3, TF2, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>tfc >>>>>>TFC 3 >>>>>tfc >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 9 >>>>>TFC 9 >>>>>>TFC 10 >>>>>>TFC 10 >>>>>>TFC 10	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0, TF0, TF0, TF0) 59 (TF0, TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF0, TF1, TF0) 68 (TF3, TF2, TF0, TF1, TF0, TF1, TF0) 75	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1, TF0) 55
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>TFC 3 >>>>>tfc >>>>>TFC 4 >>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 9 >>>>>TFC 9 >>>>>TFC 10	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0) 8 (TF3, TF2, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 59 (TF0, TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF0, TF1, TF0) 68 (TF3, TF2, TF0, TF1, TF0, TF1, TF0) 75 (TF4, TF3, TF0,	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1, TF0) 55 (TF4, TF3, TF1,
>>>>>TFC 2 >>>>>>tfc >>>>>>TFC 3 >>>>>>tfc >>>>>>tfc >>>>>TFC 4 >>>>>>TFC 5 >>>>>TFC 5 >>>>>TFC 6 >>>>>TFC 6 >>>>>TFC 7 >>>>>TFC 7 >>>>>TFC 8 >>>>>TFC 9 >>>>>TFC 9 >>>>>>TFC 10 >>>>>>TFC 10 >>>>>>TFC 10	0 (TF1, TF0, TF0, TF0, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0, TF0, TF0, TF0) 15 (TF4, TF3, TF0, TF0, TF0, TF0, TF0) 22 (TF5, TF4, TF1, TF0, TF0, TF0, TF0, TF0) 59 (TF0, TF0, TF0, TF0, TF1, TF0) 60 (TF1, TF0, TF0, TF0, TF1, TF0) 61 (TF2, TF1, TF0, TF0, TF1, TF0) 68 (TF3, TF2, TF0, TF1, TF0, TF1, TF0) 75	0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 8 (TF3, TF2, TF0, TF0) 15 (TF4, TF3, TF0, TF0) 22 (TF5, TF4, TF0, TF0) 29 (TF0, TF0, TF1, TF0) 30 (TF1, TF0, TF1, TF0) 31 (TF2, TF1, TF1, TF0) 37 (TF3, TF2, TF1, TF0) 55

>>>>TFC 12	(TF5, TF4, TF1,	(TF5, TF4, TF1,
	TF1, TF0)	TF0)
>>>>>ctfc >>>>TFC 13	119	59
>>>>> IFC 13	(TF0, TF0, TF0, TF0, TF0, TF1)	(TF0, TF0, TF0, TF1)
>>>>>ctfc	120	60
>>>>>TFC 14	(TF1, TF0, TF0,	(TF1, TF0, TF0,
>>>>> 1FC 14	TF0, TF1)	TF1, 1F0, 1F0,
>>>>>ctfc	121	61
>>>>TFC 15	(TF2, TF1, TF0,	(TF2, TF1, TF0,
7777711010	TF0, TF1)	TF1)
>>>>>ctfc	128	68
>>>>TFC 16	(TF3, TF2, TF0,	(TF3, TF2, TF0,
	TF0, TF1)	TF1)
>>>>>ctfc	135	75
>>>>TFC 17	(TF4, TF3, TF0,	(TF4, TF3, TF0,
	TF0, TF1)	TF1)
>>>>>ctfc	142	82
>>>>TFC 18	(TF5, TF4, TF1,	(TF5, TF4, TF0,
	TF0, TF1)	TF1)
>>>>>ctfc	179	89
>>>>TFC 19	(TF0, TF0, TF0,	(TF0, TF0, TF1,
>>>>>ctfc	TF1, TF1) 180	TF1) 90
>>>>>TFC 20	(TF1, TF0, TF0,	(TF1, TF0, TF1,
///////////////////////////////////////	TF1, TF1)	TF1, 1F0, 1F1,
>>>>>ctfc	181	91
>>>>TFC 21	(TF2, TF1, TF0,	(TF2, TF1, TF1,
	TF1, TF1)	TF1)
>>>>>ctfc	188	98
>>>>TFC 22	(TF3, TF2, TF0,	(TF3, TF2, TF1,
	TF1, TF1)	TF1)
>>>>>ctfc	195	105
>>>>TFC 23	(TF4, TF3, TF0,	(TF4, TF3, TF1,
	TF1, TF1)	TF1)
>>>>>ctfc	202	112
>>>>TFC 24	(TF5, TF4, TF1,	(TF5, TF4, TF1,
	TF1, TF1)	TF1)
>>>>>Ctfc	239	119
PhyCH INFORMATION FDD		
UL-DPCH-InfoPredef		
>ul-DPCH-		
PowerControlInfo		
>>powerControlAlgorithm	Algorithm 1	Algorithm 1
>>>tpcStepSize	1 dB	1 dB
>tfci-Existence	TRUE	TRUE
>puncturingLimit	0.88	0.88
DL-		
CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>spreadingFactor	128	128
>>tfci-Existence	FALSE	FALSE
>>pilotBits	4	4
>>positionFixed	Fixed	Fixed
PhyCH INFORMATION		
3.84/7.68 Mcps TDD		
UL-DPCH-InfoPredef		
>ul-DPCH-		
PowerControlInfo >>dpch-ConstantValue	0	0
>commonTimeslotInfo	, v	0
>>secondInterleavingMode	frameRelated	frameRelated
>>tfci-Coding	16	16
uor-ooding	10	10

>>puncturingLimit	0.60	0.60
>>repetitionPeriodAndLeng	repetitionPeriod1	repetitionPeriod1
th		
DL-		
CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>commonTimeslotInfo		
>>>secondInterleavingMod	frameRelated	frameRelated
е		
>>>tfci-Coding	16	16
>>>puncturingLimit	0.60	0.60
>>>repetitionPeriodAndLe	repetitionPeriod1	repetitionPeriod1
ngth		
PhyCH INFORMATION		
1.28 Mcps TDD		
UL-DPCH-InfoPredef		
>commonTimeslotInfo		
>>secondInterleavingMode	frame Related	frame Related
>>tfci-Coding	16	16
>>puncturingLimit	0.64	0.64
>>repetitionPeriodAndLeng	repetitionPeriod1	repetitionPeriod1
th		
DL-		
CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>commonTimeslotInfo		
>>>secondInterleavingMod	frame Related	frame Related
е		
>>>tfci-Coding	16	16
>>>puncturingLimit	0.64	0.64
>>>repetitionPeriodAndLe	repetitionPeriod1	repetitionPeriod1
ngth		

NOTE: Default configuration identity 11 can not be used with release 4 UEs.

Configuration	12.65/8.85/6.6 kbps
	speech + 3.4 kbps signalling
	+ 0.15 kbps SRB#5
Ref 34.108	62
Default configuration	13
identity	
RB INFORMATION	RB1: 1, RB2: 2,
rb-Identity	RB3: 1, RB2: 2, RB3: 3, RB5: 5,
	RB6: 6, RB7: 7,
	RB8: 8
rlc-InfoChoice	RIc-info
>ul-RLC-Mode	RB1: UM RB2- RB3: AM
	RB5-RB7: TM
>>transmissionRLC-	RB1: N/A
DiscardMode	RB2- RB3:
	NoDiscard
>>>maxDat	RB5- RB7: N/A RB1: N/A
IIIanDal	RB2- RB3: 15
	RB5- RB7: N/A
>>transmissionWindowSiz	RB1: N/A
е	RB2- RB3: 128 for
	UEs with more than 10 kbyte "total RLC
	AM buffer size" and
	32 otherwise
	RB5- RB7: N/A
>>timerRST	RB1: N/A
	RB2- RB3: 300 RB5- RB7: N/A
>>max-RST	RB1: N/A
Finax No.	RB2- RB3: 1
	RB5- RB7: N/A
>>pollingInfo	RB1: N/A
	RB2- RB3: as below RB5- RB7: N/A
>>>lastTransmissionPDU-	RB2- RB3: FALSE
>>>lastRetransmissionPD	RB2- RB3: FALSE
U-Poll	
>>>timerPollPeriodic	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM
3	RB2- RB3: AM
	RB5- RB7: TM
in On my D. "	RB8: TM
>>inSequenceDelivery	RB1: N/A RB2- RB3: TRUE
	RB5- RB7: N/A
	RB8: N/A
>>receivingWindowSize	RB1: N/A
	RB2- RB3: 128 for
	UEs with more than 10 kbyte "total RLC
	AM buffer size" and
	32 otherwise
	RB5- RB7: N/A
	RB8: N/A
>>dl-RLC-StatusInfo	RB1: N/A RB2- RB3: as below
	RB5- RB7: N/A
	RB8: N/A

>>>timerStatusProhibit	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: FALSE
>>>timerStatusPeriodic	RB2- RB3: 300
>>segmentationIndication	RB1- RB3: N/A
	RB5- RB7: FALSE
	RB8: FALSE
rb-MappingInfo	
>UL-	OneLogicalChannel
LogicalChannelMappings	
>>ul-	Dch
TransportChannelType	
	DD4 DD0: 4
>>>transportChannelIdentit	RB1- RB3: 4
У	RB5: 1, RB6: 2,
	RB7: 3.
>>logicalChannelIdentity	RB1: 1, RB2: 2,
Friegroai Griai in on derinity	RB3: 3
	RB5- RB7: N/A
>>rlc-SizeList	RB1- RB3:
	configured
	RB5- RB7: N/A
>>mac-	RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3
	RB5- RB7: 5
>DL-	
logicalChannelMappingList	
>>Mapping option 1	One mapping option
>>>dl-	Dch
TransportChannelType	
>>>transportChannelIden	RB1- RB3: 4
tity	RB5: 1, RB6: 2,
	RB7: 3, RB8: 5
>>>logicalChannelIdentity	RB1: 1, RB2: 2,
,	RB3: 3
	RB5- RB7: N/A
	RB8: N/A
TrCH INFORMATION PER	
TrCH	
TrCH UL-	
TrCH UL- AddReconfTransChInfoList	RB8: N/A
TrCH UL-	
TrCH UL- AddReconfTransChInfoList >Uplink transport channel	RB8: N/A
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type	RB8: N/A
TrCH UL- AddReconfTransChInfoList >Uplink transport channel	RB8: N/A dch TrCH1: 1, TrCH2: 2,
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144,
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2:
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2,
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2,
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>>rlcSize >>>>sizeType	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>>numberOfTbSizeList	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>logicalChannelList	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>>numberOfTbSizeList	RB8: N/A dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>logicalChannelList	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>logicalChannelList	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78)
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>logicalChannelList	dch TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 4 DedicatedTransChT FS TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40)

numberOfTransportDl	TrCH1: One
>>>>numberOfTransportBl	
ocks	TrCH2: One
>>>rlc-Size	TrCH1-2: BitMode
>>>>sizeType	TrCH1: 1: 40
	TrCH2: 1: 78
>>>numberOfTbSizeList	TrCH1-2: One
>>>logicalChannelList	TrCH1: all
>>>tf 2	TrCH1: (1x54)
	TrCH2: (1x113)
	TrCH3: N/A
	TrCH4: N/A
a construction of the cons	
>>>numberOfTransportBl	TrCH1: One
ocks	TrCh2: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 54
7777 0.20 Typo	TrCH2: type 1: 113
accord a pottle Oi- at int	
>>>numberOfTbSizeList	TrCH1: One
	TrCH2: One
>>>>logicalChannelList	TrCH1: all
	TrCH2: all
>>>tf 3	TrCH1: (1x64)
	TrCU2: (1704)
	TrCH2: (1x181)
	TrCH3: N/A
	TrCH4: N/A
>>>>numberOfTransportBl	TrCH1: One
ocks	TrCh2: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 64
	TrCH2: type 2:
	part1=6, part2= 5
>>>>numberOfTbSizeList	TrCH1: One
- FFF Hamborott Bolzoziot	TrCH2: One
1i10b11 i-t	
>>>>logicalChannelList	TrCH1: all
	TrCH2: all
>>>tf 4	TrCH1: (1x72)
	TrCH2: N/A
	TrCH3: N/A
	TrCH4: N/A
numberOfTransportDl	TrCH1: One
>>>>numberOfTransportBl	TICHT. Offe
ocks	
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 72
>>>numberOfTbSizeList	TrCH1: One
>>>>logicalChannelList	TrCH1: all
>>semistaticTF-Information	
>>>tti	TrCH1- TrCH3: 20
	TrCH4: 40
>>>channelCodingType	Convolutional
>>>codingRate	TrCH1- TrCH3:
	Third
	TrCH4: Third
>>>rateMatchingAttribute	TrCH1: 200
	TrCH2: 190
	TrCH3: 256
	TrCH4: 170
>>>crc-Size	TrCH1: 12
İ	
	TrCH2: 0
	TrCH3: 0
DI	
DL-	TrCH3: 0
AddReconfTransChInfoList	TrCH3: 0 TrCH4: 16
	TrCH3: 0
AddReconfTransChInfoList >Downlink transport	TrCH3: 0 TrCH4: 16
AddReconfTransChInfoList >Downlink transport channel type	TrCH3: 0 TrCH4: 16
AddReconfTransChInfoList >Downlink transport	TrCH3: 0 TrCH4: 16

	la deservade et
>tfs-SignallingMode	Independent
	<only on="" td="" tf0="" trch1<=""></only>
	and tf0/tf1 on
	TrCH5 are different
	and shown below>
>>transportFormatSet	
>>>dynamicTF-information	
>>>tf0/ tf0,1	TrCH1: (1x0)
	TrCH5: (0x3, 1x3)
>>>rlcSize	BitMode
>>>>sizeType	TrCH1: type 1: 0
, , , , , , , , , , , , , , , , , , ,	TrCH5: type 1: 3
>>>numberOfTbSizeList	TrCH1: One
	TrCH5: Zero, one
>>>>logicalChannelList	All
>>>semistaticTF-	same as UL except
Information	for TrCH5
>>>tti	TrCH5: 20
>>>>channelCodingType	Convolutional
>>>>codingRate	TrCH5: Third
>>>rateMatchingAttribute	TrCH5: 205
>>>crc-Size	TrCH5: 8
>>ULTrCH-Id	TrCH1: 1, TrCH2: 2,
	TrCH3: 3, TrCH4: 4,
>dch-QualityTarget	
>>bler-QualityValue	TrCH1: 7x10 ⁻³
	TrCH2: Absent
	TrCH3: Absent TrCH4- TrCH5:
T OLUMES DIAMETERS.	Absent
TrCH INFORMATION, COMMON	
ul-CommonTransChInfo	
>tfcs-ID (TDD only)	1
>sharedChannelIndicator	FALSE
(TDD only)	
> tfc-Subset	Absent, not required
>ul-TFCS	Normal TFCI
	signalling
" '-TEOO	
I >>explicit I FCS-	Complete
>>explicitTFCS- ConfigurationMode	Complete
ConfigurationMode	·
ConfigurationMode >>>ctfcSize	Ctfc6Bit
ConfigurationMode >>>ctfcSize >>>TFCS representation	·
ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFC list	Ctfc6Bit Addition
ConfigurationMode >>>ctfcSize >>>TFCS representation	Ctfc6Bit Addition (TF0, TF0, TF0,
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed
ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>sepainFactorInform ation	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0,
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>>tfc >>>>>TFC 1 >>>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>TFC 1 >>>>>TFC 1 >>>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>TFC 1 >>>>>ctfc >>>>>>tfc >>>>>TFC 1 >>>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>>TFC 1 >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>tfc 1 >>>>>ctfc >>>>>>tfc 1 >>>>>>tfc 1 >>>>>>tfc 1 >>>>>>ctfc >>>>>>tfc 2 >>>>>>tfc 2 >>>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0) 1 Computed N/A
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>>ctfc >>>>>>>>>>	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>>>>>	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0) 1 Computed N/A
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>>>ctfc >>>>>ctfc >>>>>>ctfc	Ctfc6Bit Addition (TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0) 1 Computed N/A N/A 0
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>>>>>	Ctfc6Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed N/A N/A 0 (TF2, TF1, TF0,
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>TFC 2	Ctfc6Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed N/A N/A 0 (TF2, TF1, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>>tfc (FDD only) >>>>>>pc (FDD only) >>>>>TFC 3 >>>>>>tfc (Sample library lib	Ctfc6Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed N/A N/A 0 (TF2, TF1, TF0, TF0, TF0) 7
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed N/A N/A 0 (TF2, TF1, TF0, TF0, TF0)
ConfigurationMode >>>ctfcSize >>>TFCS representation >>>>TFC list >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>>ctfc >>>>>TFC 1	Ctfc6Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 Computed 0 (TF1, TF0, TF0, TF0, TF0) 1 Computed N/A N/A 0 (TF2, TF1, TF0, TF0, TF0) 7

>>>>TFC 4	(TF3, TF2, TF0,
	TF0)
>>>>>ctfc	13
>>>>>gainFactorInform	Computed
ation	
_	
>>>>>βc (FDD only)	
>>>>>βd	
>>>>>>referenceTFCId	0
>>>>TFC 5	(TF4, TF3, TF0,
	TF0)
>>>>>ctfc	19
>>>>>gainFactorInform	Computed
ation	
>>>>>>referenceTFCId	0
>>>>TFC 6	(TF0, TF0, TF0,
77777	TF1)
>>>>>ctfc	20
>>>>>gainFactorInform	Computed
ation	Computed
_	
>>>>>>βc (FDD only)	
>>>>>βd	
>>>>>>referenceTFCld	0
>>>>TFC 7	(TF1, TF0, TF0,
	TF1)
>>>>>ctfc	21
>>>>>gainFactorInform	Computed
ation	Compatou
>>>>>>referenceTFCId	0
>>>>>TFC 8	(TF2, TF1, TF0,
>>>>> 1FC 0	
	TF1)
>>>>>ctfc	27
>>>>>gainFactorInform	computed
ation	
>>>>>>βc (FDD only)	
>>>>>βd	
>>>>>referenceTFCId	0
>>>>TFC 9	(TF3, TF2, TF0,
777771109	TF1)
offo	33
>>>>>>ctfc	
>>>>> gainFactorInform	computed
ation	
>>>>>>referenceTFCld	(TE 4 TE 2 TE 2
>>>>TFC 10	(TF4, TF3, TF0,
	TF1)
>>>>>ctfc	39
>>>>>gainFactorInform	signalled
ation	
>>>>>>βc (FDD only)	11
>>>>>βd	15
>>>>>>referenceTFCld	0
> TFC subset list	/ 1
>>TFC subset 1	(chach rata 6.6)
>>> Allowed transport	(speech rate 6.6)
tormat combination list	(TFC1, TFC2,
format combination list	(TFC1, TFC2, TFC3, TFC6, TFC7,
	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8)
>>TFC subset 2	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85)
	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85)
>>TFC subset 2	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6,
>>TFC subset 2 >>> Allowed transport	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85)
>>TFC subset 2 >>> Allowed transport format combination list	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6, TFC7, TFC8, TFC9)
>>TFC subset 2 >>> Allowed transport format combination list >>TFC subset 3	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6, TFC7, TFC8, TFC9) (speech rate 12.65)
>>TFC subset 2 >>> Allowed transport format combination list	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6, TFC7, TFC8, TFC9) (speech rate 12.65) (TFC1, TFC2,
>>TFC subset 2 >>> Allowed transport format combination list >>TFC subset 3 >>> Allowed transport	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6, TFC7, TFC8, TFC9) (speech rate 12.65) (TFC1, TFC2, TFC3, TFC4, TFC5,
>>TFC subset 2 >>> Allowed transport format combination list >>TFC subset 3 >>> Allowed transport	(TFC1, TFC2, TFC3, TFC6, TFC7, TFC8) (speech rate 8.85) (TFC1, TFC2, TFC3, TFC4, TFC6, TFC7, TFC8, TFC9) (speech rate 12.65) (TFC1, TFC2,

dl-CommonTransChInfo	
>tfcs-SignallingMode	Independent
ul-CommonTransChInfo	•
>tfcs-ID (TDD only)	1
>sharedChannelIndicator	FALSE
(TDD only)	
> tfc-Subset	Absent, not required
>dI-TFCS	Normal TFCI
	signalling
>>explicitTFCS-	Complete
ConfigurationMode	
>>>ctfcSize	Ctfc8Bit
>>>>TFCS representation	Addition
>>>>TFCS list	
>>>>TFC 1	(TF0, TF0, TF0,
	TF0, TF0)
>>>>>ctfc	0
>>>>TFC 2	(TF1, TF0, TF0,
	TF0, TF0)
>>>>>ctfc	1
>>>>TFC 3	(TF2, TF1, TF0,
	TF0, TF0)
>>>>>ctfc	7
>>>>TFC 4	(TF3, TF2, TF0,
	TF0, TF0)
>>>>>ctfc	13
>>>>TFC 5	(TF4, TF3, TF0,
	TF0, TF0)
>>>>>ctfc	19
>>>>>TFC 6	(TF0, TF0, TF0,
	TF1, TF0)
>>>>>ctfc	20
>>>>TFC 7	(TF1, TF0, TF0,
	TF1, TF0)
>>>>>ctfc	21
>>>>TFC 8	(TF2, TF1, TF0,
	TF1, TF0)
>>>>>ctfc	27
>>>>TFC 9	(TF3, TF2, TF0,
	TF1, TF0)
>>>>>ctfc	33
>>>>TFC 10	(TF4, TF3, TF0,
	TF1, TF0)
>>>>>ctfc	39 (TEO TEO
	(TF0, TF0, TF0,
>>>>>ctfc	TF0, TF1) 40
>>>>>TFC 12	(TF1, TF0, TF0,
	TF0, TF1)
>>>>>ctfc	41
>>>>>TFC 13	(TF2, TF1, TF0,
	TF0, TF1)
>>>>>ctfc	47
>>>>TFC 14	(TF3, TF2, TF0,
	TF0, TF1)
>>>>>ctfc	53
>>>>TFC 15	(TF4, TF3, TF0,
	TF0, TF1)
>>>>>ctfc	59
>>>>TFC 16	(TF0, TF0, TF0,
_	TF1, TF1)
>>>>>ctfc	60
>>>>TFC 17	(TF1, TF0, TF0,
	TF1, TF1)
>>>>>ctfc	61

>>>>TFC 18	(TF2, TF1, TF0, TF1, TF1)
	161, 161)
>>>>>ctfc	67
>>>>TFC 19	(TF3, TF2, TF0, TF1, TF1)
>>>>>ctfc	73
>>>>TFC 20	(TF4, TF3, TF0, TF1, TF1)
>>>>>ctfc	79
PhyCH INFORMATION FDD	
UL-DPCH-InfoPredef	
>ul-DPCH-	
PowerControlInfo	
>>powerControlAlgorithm	Algorithm 1
>>>tpcStepSize	1 dB
>tfci-Existence	TRUE
>puncturingLimit	0.84
DL-	
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>spreadingFactor	128
>>tfci-Existence	FALSE
>>pilotBits	4
>>positionFixed	Fixed

Configuration	12.2/7.4/5.9/4.75 kbps speech + 3.4 kbps signalling + 0.15 kbps SRB#5
Ref 34.108	4b
Default configuration identity	14
RB INFORMATION	
rb-Identity	RB1: 1, RB2: 2, RB3: 3, RB5: 5, RB6: 6, RB7: 7, RB8: 8
rlc-InfoChoice	RIc-info
>ul-RLC-Mode	RB1: UM RB2- RB3: AM RB5-RB7: TM
>>transmissionRLC- DiscardMode	RB1: N/A RB2- RB3: NoDiscard RB5- RB7: N/A
>>>maxDat	RB1: N/A RB2- RB3: 25 RB5- RB7: N/A
>>transmissionWindowSiz e	RB1: N/A RB2- RB3: 32 RB5- RB7: N/A
>>timerRST	RB1: N/A RB2- RB3: 200 RB5- RB7: N/A
>>max-RST	RB1: N/A RB2- RB3: 1 RB5- RB7: N/A
>>pollingInfo	RB1: N/A RB2- RB3: as below RB5- RB7: N/A
>>>TimerPoll	RB2- RB3: 200
>>>PollPDU	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1

Configuration	12.2/7.4/5.9/4.75
	kbps speech + 3.4 kbps signalling + 0.15 kbps SRB#5
>>>lastTransmissionPDU-	RB2- RB3: FALSE
>>>lastRetransmissionPD U-Poll	RB2- RB3: TRUE
>>>PollWindow	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM RB2- RB3: AM RB5- RB7: TM RB8: TM
>>inSequenceDelivery	RB1: N/A RB2- RB3: TRUE RB5- RB8: N/A
>>receivingWindowSize	RB1: N/A RB2- RB3: 32 RB5- RB8: N/A
>>dl-RLC-StatusInfo	RB1: N/A RB2- RB3: as below RB5- RB8: N/A
>>>timerStatusProhibit	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: TRUE
>>segmentationIndication	RB1- RB3: N/A RB5- RB8: FALSE
rb-MappingInfo	0 1 101 1
>UL- LogicalChannelMappings	OneLogicalChannel
>>ul- TransportChannelType	Dch
>>>transportChannelIdenti ty	RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3.
>>logicalChannelIdentity	RB7: 3. RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A
>>rlc-SizeList	RB1- RB3: configured RB5- RB7: N/A
>>mac- LogicalChannelPriority	RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5
>DL- logicalChannelMappingList	
>>Mapping option 1	One mapping option
>>>dl- TransportChannelType	Dch
TransportChannelType >>>>transportChannelIden	RB1- RB3: 9
tity	RB5: 1, RB6: 2, RB7: 3, RB8: 5
>>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3: 3 RB5- RB8: N/A
TrCH INFORMATION PER TrCH	
UL- AddReconfTransChInfoLis t	
>Uplink transport channel type	dch
>transportChannelIdentity	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9

Configuration	12.2/7.4/5.9/4.75
Configuration	kbps speech + 3.4 kbps signalling + 0.15 kbps SRB#5
>transportFormatSet	DedicatedTransChT FS
>>dynamicTF-information	-
>>>tf0/ tf0,1	TrCH1: (0x81)
	TrCH2: (0x 103)
	TrCH3: (0x60)
	TrCH4: (0x144, 1x144)
>>>rlcSize	BitMode
>>>>sizeType	TrCH1: type 1: 81
************************************	TrCH2: type 1: 103
	TrCH3: type1: 60
	TrCH4: 2: type 2,
	part1= 2, part2= 0
	(144)
>>>>numberOfTbSizeList	TrCH1-3: Zero
>>>logicalChannelList	TrCH4: Zero, one
>>>tf 1	TrCH1: (1x39)
	TrCH2: (1x53)
	TrCH3: (1x60)
	TrCH4: (1x144)
>>>numberOfTransportBl ocks	TrCH1-3: One
>>>rlc-Size	TrCH1-3: BitMode
>>>>sizeType	TrCH1: 1: 39
	TrCH2: 1: 53
	TrCH3: 1: 60
>>>numberOfTbSizeList	TrCH1-3: One
>>>logicalChannelList	TrCH1-3: all
>>>u 2	TrCH1: (1x42) TrCH2: (1x63)
	TrCH3- TrCH4: N/A
>>>>numberOfTransportBl ocks	TrCH1-2: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 42
	TrCH2: type 1: 63
>>>>numberOfTbSizeList	TrCH1-2: One
>>>logicalChannelList	TrCH1: all
>>>u 3	TrCH1: (1x55) TrCH2: (1x87)
	TrCH3- TrCH4: N/A
>>>numberOfTransportBl	TrCH1-2: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 55
, , ,	TrCH2: type 1: 87
>>>numberOfTbSizeList	TrCH1-2: One
>>>>logicalChannelList	TrCH1: all
>>>tf 4	TrCH1: (1x61)
	TrCH2: (1x103) TrCH3- TrCH4: N/A
>>>numberOfTransportBl	TrCH1-2: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 61
	TrCH2: type 1: 103
>>>numberOfTbSizeList	TrCH1-2: One
>>>>logicalChannelList	TrCH1: all
>>>tf 5	TrCH1: (1x81)
	TrCH2- TrCH4: N/A

Seps signalling	Configuration	12.2/7.4/5.9/4.75 kbps speech + 3.4
>>>numberOfTransportBl ocks >>>>rlc-Size		kbps signalling
ocks TrCH1: BitMode >>>>sizeType TrCH1: type 1: 81 >>>>numberOfTbSizeList TrCH1: One >>>slogicalChannelList TrCH1: all >>>semiStaticTF- Information TrCH1- TrCH3: 20 TrCH4: 40 >>>codingRate TrCH1- TrCH2: Third TrCH3: Half TrCH3: Half TrCH4: Third >>>rch3: Half TrCH4: Third TrCH1: 200 TrCH3: 235 TrCH4: 160 >>>crc-Size TrCH1: 12 TrCH2: TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t 1 TrCH2: TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t 1 Independent Conyling to on TrCH1 and tf0/tf1 on TrCH3: 0 TrCH5: are different and shown belows >>trs-signallingMode Independent Conyling to on TrCH1 and tf0/tf1 on TrCH5: are different and shown belows >>trncH1: type 1: 0 TrCH5: (0x3, 1x3) >>>rCH5: (0x3, 1x3) >>>logicalChannelList >>>>logicalChannelList >>>>tinformation >>>>tir CH5: 2ero, one TrCH5: 2ero, one >>>convolutional TrCH5: Third TrCH5: 205 TrCH5: 8 >>>crc-Size TrCH5: 8 >>UL except for TrCH5: 8 >>>logicalChangAttribute TrCH5: Absent TrCH4: Tx10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4: TCH5: Absent TrCH5: TCH5: TCH5: TC	>>> numberOfTransportBl	
>>>>ric-Size		HOITI. One
>>>>sizeType TrCH1: type 1: 81 >>>>numberOfTbSizeList TrCH1: One >>>logicalChannelList TrCH1: all >>>semiStaticTF- Information TrCH1- TrCH3: 20 TrCH4: 40 >>>convolutional >>>tti TrCH1- TrCH3: 20 TrCH3: Half TrCH4: Third TrCH3: Half TrCH4: Third TrCH3: 235 TrCH4: Third >>>crc-Size TrCH4: 160 >>>crc-Size TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >>tfs-SignallingMode Independent All- TrCH3: are different and shown below> >>trscH1: (1x0) TrCH5: (0x3, 1x3) >>>rlcSize bitMode >>>sizeType TrCH1: (1x0) TrCH5: type 1: 0 TrCH5: type 1: 3 TrCH5: Type 1: 0 TrCH5: Zero, one TrCH5: 20 >>>strinsportChingType Convolutional >>>strinsportChingType TrCH5: 20 >>>strinsportChingType TrCH5: 20 >>>strinsportChingType TrCH5: 20 TrCH5: 20 TrCH5: 20 TrCH5: 20 TrCH5: 20 TrCH5: 20 TrCH5: 3, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 3, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 3, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 3, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH5: 4, TrCH6: 20 TrCH6: 1, TrCH6: 20 TrCH6: 3, TrCH6: 20 TrCH6: 7, TrCH6: 20 TrCH6: 1, TrCH6: 20 TrCH6: 3, TrCH6: 20 TrCH6: 3, TrCH6: 20 TrCH6: 4, TrCH6: 4, TrCH6: 4, TrCH6: 4, Absent TrCH4: 7, TrCH5: 4, Absent TrCH4: 7, TrCH5: 4, Absent TrCH4: 7, Absent TrCH6: Absent TrCH6		TrCH1: BitMode
>>>>numberOfTbSizeList TrCH1: One >>>logicalChannelList TrCH1: all >>semiStaticTF- Information TrCH1- TrCH3: 20 TrCH4: 40 >>>convolutional >>>codingRate TrCH1: TrCH2: Third TrCH3: Half TrCH4: Third TrCH3: Half TrCH4: 160 >>>crc-Size TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >>tfs-SignallingMode Independent <only and="" are="" below="" different="" ff1="" on="" shown="" tf0="" trch1="" trch5=""> >>trochsize TrCH1: (1x0) TrCH5 are different and shown below> >>stransportFormatSet >>>stf0/ tf0,1 TrCH5: (0x3, 1x3) >>>srlcSize bitMode >>>sitMode >>>sitMode >>>sitCH1: type 1: 0 TrCH5: type 1: 3 TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH5: Zero, one >>>logicalChannelList same as UL except Information for TrCH5 >>>stti TrCH-Id TrCH5: 20 >>>convolutional TrCH5: TrCH5: 20 >>>convolutional TrCH5: TrCH5: 20 TrCH5: TrCH5: 20 TrCH5: TrCH5: 20 TrCH5: TrCH5: 20 TrCH5: TrCH5: 20 TrCH5: Absent TrCH3: Absent TrCH4: TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH1: TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent</only>		
>>semiStaticTF- Information >>>tti	>>>>numberOfTbSizeList	TrCH1: One
Information		TrCH1: all
>>>tti		
TrCH4: 40 >>>channelCodingType >>>convolutional TrCH1- TrCH2: Third Third TrCH3: Half TrCH4: 190 TrCH2: 190 TrCH2: 190 TrCH4: 160 >>>crc-Size TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent 		T 0114 T 0110 00
>>>codingRate TrCH1- TrCH2: Third TrCH3: Half TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: 14 TrCH1: 200 TrCH2: 190 TrCH3: 235 TrCH4: 160 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t	>>>tti	
Third TrCH3: Half TrCH4: Third TrCH2: 190 TrCH2: 190 TrCH3: 235 TrCH4: 160 >>>crc-Size TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent		
TrCH3: Half TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 235 TrCH4: 160 >>>crc-Size TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5="" =""> >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>srlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: (yo3, 1x3) >>>snumberOfTbSizeList TrCH1: One TrCH5: Zero, one TrCH5: Zero,</only>	>>>codingRate	
>>>rateMatchingAttribute		
>>>rateMatchingAttribute		TrCH3: Half
TrCH2: 190 TrCH3: 235 TrCH4: 160 >>>crc-Size TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>>dynamicTF-information >>>stfo/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>srlcSize bitMode >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH5: Zero, one >>>sti >>>sti TrCH5: 20 >>>scodingRate TrCH5: 205 >>>>codingRate TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>UTrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10⁻³ TrCH2: Absent TrCH4- TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH1: TrCH5: Absent</only>	>>>rateMatchingAttribute	
TrCH3: 235 TrCH4: 160 >>>crc-Size TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent -(Only tf0 on TrCH1 and tf0/tf1 on TrCH5 are different and shown below> >>transportFormatSet >>>dynamicTF-information >>>>tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>somistaticTF- Information >>>>tin >>>>tin TrCH5: 20 >>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 205 >>>codingRate TrCH5: 8 >>ULTrCH-Id TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	>>>rateiviateriirigAttribute	
>>>crc-Size TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent - <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>srlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH1: One TrCH5: Zero, one >>>stid >>>semistaticTF- Information >>>stid >>>stid TrCH5: 20 >>>codingRate TrCH5: Third >>>srateMatchingAttribute >>>crc-Size TrCH3: 3, TrCH4: 9 >dch-QualityTarget TrCH1: 7x10⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH5: Absent TrCH5: Absent TrCH5: Absent</only>		
DL- AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent		TrCH4: 160
DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent	>>>crc-Size	
DL- AddReconfTransChInfoLis t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent -(Only tf0 on TrCH1 and tf0/ff1 on TrCH5 are different and shown below> >>transportFormatSet >>>dynamicTF-information >>>tf0/tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>rlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one all >>>semistaticTF- Information >>>>tti >>>>tti TrCH5: 20 Convolutional >>>>codingRate TrCH5: 205 >>>>convolutional TrCH5: 205 >>>convolutional TrCH5: 205 >>>convolutional TrCH5: 205 >>>convolutional TrCH5: 205 TrCH5: 8 >ULTrCH-Id TrCH5: 205 TrCH5: 8 >ULTrCH-Id TrCH5: 205 TrCH5: 8 >ULTrCH-Id TrCH5: 205 TrCH5: 8 >TrCH5: Absent TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		TrCH2- TrCH3: 0
AddReconfTransChInfoLis t >Downlink transport channel type >dI- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>>rlcSize >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>>tti TrCH5: 20 Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 20 >>>crc-Size TrCH5: 8 >ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10-3 TrCH2: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent</only>		TrCH4: 16
t >Downlink transport channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode	= =	
channel type >dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>odynamicTF-information >>>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>>rlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>>ti >>>>ti TrCH5: 20 >>>codingRate TrCH5: Third >>>>codingRate TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 7x10⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent</only>	t	
>dl- TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>rlcSize bitMode >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>>tti TrCH5: 20 >>>convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 20 TrCH5: 8 >ULTrCH-Id TrCH5: 20 TrCH5: 8 >ULTrCH-Id TrCH5: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent</only>		
TransportChannelIdentity (should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>rlcSize bitMode >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>tin TrCH5: 20 >>>convolutional >>>>codingRate TrCH5: 20 >>>convolutional >>>codingRate TrCH5: 20 TrCH5: 20 >>>crateMatchingAttribute TrCH5: 20 TrCH5: 20 TrCH5: 20 >>>crc-Size TrCH5: 8 >ULTrCH-Id TrCH5: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent</only>		
(should be as for UL) >tfs-SignallingMode Independent <only and="" are="" below="" different="" on="" shown="" tf0="" tf1="" trch1="" trch5=""> >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>srlcSize bitMode >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>ti TrCH5: 20 >>>convolutional >>>>codingRate TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent</only>	· · · · · · · · · · · · · · · · · · ·	
>tfs-SignallingMode		
<pre></pre>		Independent
and tf0/tf1 on TrCH5 are different and shown below> >>transportFormatSet >>>dynamicTF-information >>>tf0/tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>rlcSize bitMode >>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH5: type 1: 3 TrCH5: Zero, one TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>ti TrCH5: 20 >>>channelCodingType Convolutional >>>codingRate TrCH5: Third >>>rcH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>transportFormatSet >>>dynamicTF-information >>>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) TrCH5: (0x3, 1x3) TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH1: one TrCH5: Zero, one TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information Systi TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rcH5: 8 TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		and tf0/tf1 on
>>transportFormatSet >>>dynamicTF-information >>>>tf0/ tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>>rlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList >>>semistaticTF- Information >>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rcH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>dynamicTF-information >>>>tf0/tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>>rlcSize bitMode TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH5: type 1: 3 TrCH1: One TrCH5: Zero, one >>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>>ti TrCH5: 20 >>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	15 10 1	and shown below>
>>>>tf0/tf0,1 TrCH1: (1x0) TrCH5: (0x3, 1x3) >>>>rlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH1: One TrCH5: Zero, one >>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: TrCH5: 8 >>ULTrCH-Id TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	>>transportFormatSet	
TrCH5: (0x3, 1x3) >>>>rlcSize bitMode TrCH1: type 1: 0 TrCH5: type 1: 3 TrCH5: type 1: 3 TrCH1: One TrCH5: Zero, one >>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>>ti TrCH5: 20 >>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		TrCU1: (1v0)
>>>>rlcSize bitMode >>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bitMode TrCH5: type 1: 0 TrCH5: Zero, one TrCH5: Zero, one TrCH5: 20 TrCH5: 20 TrCH5: Third TrCH5: R >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	>>>>ti0/ ti0, i	
>>>>sizeType TrCH1: type 1: 0 TrCH5: type 1: 3 >>>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>rateMatchingAttribute TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	>>>rlcSize	
>>> numberOfTbSizeList >>> numberOfTbSizeList TrCH1: One TrCH5: Zero, one >>> logicalChannelList >>> semistaticTF- Information >>> tii TrCH5: 20 >>> convolutional >>> codingRate >>> rrCH5: Third >>> rateMatchingAttribute >>> crc-Size >> ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >> bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>>numberOfTbSizeList TrCH1: One TrCH5: Zero, one all same as UL except for TrCH5 all same as UL except for TrCH5 are convolutional for TrCH5: 20 convolutional possible for TrCH5: 20 convolutional possible for TrCH5: Third possible for TrCH5: Third possible for TrCH5: Third possible for TrCH5: 20 convolutional possible for TrCH5: TrCH5: TrCH5: 205 possible for TrCH5: 8 possible for TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 possible for TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4		
TrCH5: Zero, one >>>>logicalChannelList all >>>semistaticTF- Information for TrCH5 >>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent	>>>numberOfTbSizeList	TrCH1: One
>>>semistaticTF- Information for TrCH5 >>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
Information for TrCH5 >>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>>tti TrCH5: 20 >>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
>>>channelCodingType Convolutional >>>>codingRate TrCH5: Third >>>rateMatchingAttribute TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>>codingRate TrCH5: Third >>>>rateMatchingAttribute TrCH5: 205 >>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>>rateMatchingAttribute TrCH5: 205 >>>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH4- TrCH5: Absent		
>>>>crc-Size TrCH5: 8 >>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,	>>>>>UUIIIYKäle	
>>ULTrCH-Id TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
TrCH3: 3, TrCH4: 9 >dch-QualityTarget >>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
>>bler-QualityValue TrCH1: 7x10 ⁻³ TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,		
TrCH2: Absent TrCH3: Absent TrCH4- TrCH5: Absent TrCH INFORMATION,	>>bler-QualityValue	
TrCH4- TrCH5: Absent TrCH INFORMATION,		TrCH2: Absent
TrCH INFORMATION, Absent		
TrCH INFORMATION,		
	TrCH INFORMATION	UNSCH

Configuration	12.2/7.4/5.9/4.75
garanon	kbps speech + 3.4
	kbps signalling
	+ 0.15 kbps SRB#5
ul-CommonTransChInfo	
>tfcs-ID (TDD only)	1
>sharedChannelIndicator	FALSE
(TDD only) >tfc-Subset	Abcost not required
>ul-TFCS	Absent, not required Normal TFCI
>ui-1FC3	signalling
>>explicitTFCS-	Complete
ConfigurationMode	Complete
>>>ctfcSize	Ctfc8Bit
>>>TFCS representation	Addition
>>>>TFCS list	
>>>>TFCS 1	(TF0, TF0, TF0,
	TF0)
>>>>>ctfc	0
>>>>>gainFactorInform	Computed
ation	
>>>>>referenceTFCld	0
>>>>TFCS 2	(TF1, TF0, TF0,
	TF0)
>>>>>>ctfc	1
>>>>>gainFactorInform	Computed
ation	N/A
>>>>>βc (FDD only)	
>>>>>βd	N/A
>>>>>referenceTFCId	0
>>>>TFCS 3	(TF2, TF1, TF0,
	TF0)
>>>>>CtfC	8 Computed
>>>>>gainFactorInform ation	Computed
>>>>>referenceTFCId	0
>>>>TFCS 4	(TF3, TF2, TF0,
	TF0)
>>>>>ctfc	15
>>>>>gainFactorInform	Computed
ation	
>>>>>βc (FDD only)	N/A
>>>>>βd	N/A
>>>>>>referenceTFCId	0
>>>>>TFCS 5	(TF4, TF3, TF0,
	TF0)
>>>>>ctfc	22
>>>>> sgainFactorInform	Computed
ation	
>>>>>referenceTFCId	0
>>>>TFCS 6	(TF5, TF4, TF1,
	TF0)
>>>>>>ctfc	59 Computed
>>>>>gainFactorInform ation	Computed
***	N/A
>>>>>βc (FDD only)	N/A
>>>>>βd	_
>>>>>>referenceTFCld	(TEO TEO TEO TEA)
>>>>TFCS 7	(TF0,TF0,TF0,TF1)
>>>>>CtfC	60 Computed
>>>>>gainFactorInform ation	Computed
>>>>>>referenceTFCId	0
>>>>TFCS 8	(TF1,TF0,TF0,TF1)
	(, 0 , 0 ,)

Configuration	12.2/7.4/5.9/4.75
	kbps speech + 3.4
	kbps signalling + 0.15 kbps SRB#5
>>>>>ctfc	61
>>>>>gainFactorInform	Computed
ation	o simpatio a
>>>>>referenceTFCId	0
>>>>TFCS 9	(TF2,TF1,TF0,TF1)
>>>>>ctfc	68
>>>>>gainFactorInform ation	Computed
>>>>>>referenceTFCId	0
>>>>TFCS 10	(TF3,TF2,TF0,TF1)
>>>>>ctfc	75
>>>>>gainFactorInform ation	Computed
>>>>>βc (FDD only)	N/A
>>>>>βd	N/A
>>>>>referenceTFCId	0
>>>>TFCS 11	(TF4,TF3,TF0,TF1)
>>>>>ctfc	82
>>>>>gainFactorInform ation	Computed
>>>>>referenceTFCId	0
>>>>TFCS 12	(TF5,TF4,TF1,TF1)
>>>>>ctfc	119
>>>>>gainFactorInform	Signalled
>>>>>βc (FDD only)	11
>>>>>βd	15
>>>>>referenceTFCId	0
> TFC subset list	
>>TFC subset 1	(speech rate 4.75)
>>> Allowed transport	(TFC1, TFC2,
format combination list	TFC3, TFC7, TFC8,
>>TFC subset 2	TFC9)
>>> Allowed transport	(speech rate 5.9) (TFC1, TFC2,
format combination list	TFC3, TFC4, TFC7,
	TFC8, TFC9,
	TFC10)
>>TFC subset 3	(speech rate 7.4)
>>> Allowed transport	(TFC1, TFC2,
format combination list	TFC3, TFC4, TFC5,
	TFC7, TFC8, TFC9, TFC10, TFC11)
>>TFC subset 4	(speech rate 12.2)
>>> Allowed transport	(TFC1, TFC2,
format combination list	TFC3, TFC4, TFC5,
	TFC6, TFC7, TFC8,
	TFC9, TFC10,
	TFC11, TFC12)
dl-CommonTransChInfo	
>tfcs-SignallingMode	Independent
ul-CommonTransChInfo >tfcs-ID (TDD only)	1
>tics-iD (TDD only) >sharedChannelIndicator	FALSE
(TDD only)	1 ALUL
> tfc-Subset	Absent, not required
>dl-TFCS	Normal TFCI
	signalling
>>explicitTFCS-	Complete
ConfigurationMode	0.4 0.5.
>>>ctfcSize	Ctfc8Bit

Configuration	12.2/7.4/5.9/4.75
	kbps speech + 3.4 kbps signalling
	+ 0.15 kbps SRB#5
>>>TFCS representation	Addition
>>>>TFCS list	
>>>>TFC 1	(TF0, TF0, TF0,
offo	TF0, TF0)
>>>>>ctfc >>>>TFC 2	(TF1, TF0, TF0,
	TF0, TF0)
>>>>>ctfc	1
>>>>TFC 3	(TF2, TF1, TF0,
-46-	TF0, TF0)
>>>>>ctfc	(TF3, TF2, TF0,
	TF0, TF0)
>>>>>ctfc	15
>>>>TFC 5	(TF4, TF3, TF0,
	TF0, TF0)
>>>>>ctfc	22 /TES TEA TEA TEO
>>>>>TFC 6	(TF5,TF4,TF1,TF0, TF0)
>>>>>ctfc	59
>>>>TFC 7	(TF0, TF0, TF0,
	TF1, TF0)
>>>>>ctfc	60
>>>>TFC 8	(TF1, TF0, TF0, TF1, TF0)
>>>>>ctfc	61
>>>>TFC 9	(TF2, TF1, TF0,
	TF1, TF0)
>>>>>ctfc	68
>>>>TFC 10	(TF3, TF2, TF0, TF1, TF0)
>>>>>ctfc	75
>>>>>TFC 11	(TF4, TF3, TF0, TF1, TF0)
>>>>>ctfc	82
>>>>>TFC 12	(TF5,TF4,TF1,TF1, TF0)
>>>>>ctfc	119
>>>>TFC 13	(TF0, TF0, TF0, TF0, TF1)
>>>>>ctfc	120
>>>>TFC 14	(TF1, TF0, TF0,
	TF0, TF1)
>>>>>ctfc	121
>>>>TFC 15	(TF2, TF1, TF0, TF0, TF1)
>>>>>ctfc	128
>>>>>TFC 16	(TF3, TF2, TF0, TF0, TF1)
>>>>>ctfc	135
>>>>TFC 17	(TF4, TF3, TF0, TF0, TF1)
>>>>>ctfc	142
>>>>TFC 18	(TF5,TF4,TF1,TF0, TF1)
>>>>>ctfc	179 [′]
>>>>TFC 19	(TF0, TF0, TF0, TF1, TF1)
>>>>>ctfc	180
>>>>TFC 20	(TF1, TF0, TF0,
	TF1, TF1)

Configuration	12.2/7.4/5.9/4.75
	kbps speech + 3.4
	kbps signalling + 0.15 kbps SRB#5
>>>>>ctfc	181
>>>>TFC 21	(TF2, TF1, TF0,
	TF1, TF1)
>>>>>ctfc	187
>>>>TFC 22	(TF3, TF2, TF0,
	TF1, TF1) 193
>>>>>ctfc	(TF4, TF3, TF0,
7777711 0 23	TF1, TF1)
>>>>>ctfc	199
>>>>TFC 24	(TF5,TF4,TF1,TF1,
	TF1)
>>>>>ctfc	239
PhyCH INFORMATION FDD	
UL-DPCH-InfoPredef	
>ul-DPCH-	
PowerControlInfo	
>>powerControlAlgorithm	Algorithm 1
>>>tpcStepSize	1 dB
>tfci-Existence	TRUE
>puncturingLimit	0.84
DL- CommonInformationPrede	
f	
>dl-DPCH-InfoCommon	
>>spreadingFactor	128
>>tfci-Existence	FALSE
>>pilotBits	4
>>positionFixed	Fixed
PhyCH INFORMATION	
3.84/7.68 Mcps TDD	
UL-DPCH-InfoPredef >ul-DPCH-	
PowerControlInfo	
>>dpch-ConstantValue	
>commonTimeslotInfo	
>>secondInterleavingMod	
е	
>>tfci-Coding	
>>puncturingLimit	
>>repetitionPeriodAndLen gth	
DL-	
CommonInformationPrede	
f	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>>secondInterleavingMo	
de >>>tfci-Coding	
>>>puncturingLimit	
>>>repetitionPeriodAndLe	
ngth	
PhyCH INFORMATION	
1.28 Mcps TDD	
UL-DPCH-InfoPredef	
>commonTimeslotInfo	
>>secondInterleavingMod	
e >>tfci-Coding	
//uor-couling	

Configuration	12.2/7.4/5.9/4.75 kbps speech + 3.4 kbps signalling + 0.15 kbps SRB#5
>>puncturingLimit	
>>repetitionPeriodAndLen	
gth	
DL-	
CommonInformationPrede	
f	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>>secondInterleavingMo	
de	
>>>tfci-Coding	
>>>puncturingLimit	
>>>repetitionPeriodAndLe	
ngth	

Configuration	7.95 kbps speech
	+ 3.4 kbps signalling
Ref 34.108	6
Default configuration identity	15
RB INFORMATION	
rb-Identity	RB1: 1, RB2: 2, RB3: 3, RB5: 5, RB6: 6, RB7: 7
rlc-InfoChoice	RIc-info
>ul-RLC-Mode	RB1: UM RB2- RB3: AM RB5-RB7: TM
>>transmissionRLC- DiscardMode	RB1: N/A RB2- RB3: NoDiscard RB5- RB7: N/A
>>>maxDat	RB1: N/A RB2- RB3: 25 RB5- RB7: N/A
>>transmissionWindowSiz e	RB1: N/A RB2- RB3: 32 RB5- RB7: N/A
>>timerRST	RB1: N/A RB2- RB3: 200 RB5- RB7: N/A
>>max-RST	RB1: N/A RB2- RB3: 1 RB5- RB7: N/A
>>pollingInfo	RB1: N/A RB2- RB3: as below RB5- RB7: N/A
>>>TimerPoll	RB2- RB3: 200
>>>PolIPDU	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1
>>>lastTransmissionPDU- Poll	RB2- RB3: FALSE
>>>lastRetransmissionPD U-Poll	RB2- RB3: TRUE
>>>PollWindow	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A RB5- RB7: FALSE

3.4 kbps signalling	Configuration	7.95 kbps speech
RB2- RB3: AM RB5- RB7: TM		3.4 kbps signalling
RB2- RB3: AM RB5- RB7: TM	>dl-RLC-Mode	RB1· LIM
>>inSequenceDelivery RB1: N/A RB2- RB3: TRUE RB5- RB7: N/A >>receivingWindowSize RB1: N/A RB2- RB3: 32 RB5- RB7: N/A >>dl-RLC-StatusInfo RB1: N/A RB2- RB3: 32 RB5- RB7: N/A >>tmerStatusProhibit RB2- RB3: as below RB5- RB7: N/A >>missingPDU-Indicator RB1- RB3: N/A RB5- RB7: N/A >>segmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: configured RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>logicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelIdentity RB1- RB3: 9 RB5- RB7: S >DL- logicalChannelMappingList >>Mapping option 1 >>>tronsportChannelIden tity RB1- RB3: 9 RB5- RB7: N/A TCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >\transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >>transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>trCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	Zai NEO Mode	
>>inSequenceDelivery RB1: N/A RB2- RB3: TRUE RB5- RB7: N/A >>receivingWindowSize RB1: N/A RB2- RB3: 32 RB5- RB7: N/A >>dl-RLC-StatusInfo RB1: N/A RB2- RB3: 32 RB5- RB7: N/A >>tmerStatusProhibit RB2- RB3: as below RB5- RB7: N/A >>missingPDU-Indicator RB1- RB3: N/A RB5- RB7: N/A >>segmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: configured RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>logicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelIdentity RB1- RB3: 9 RB5- RB7: S >DL- logicalChannelMappingList >>Mapping option 1 >>>tronsportChannelIden tity RB1- RB3: 9 RB5- RB7: N/A TCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >\transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >>transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>trCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RB5- RB7: TM
RB5- RB7: N/A RB2- RB3: 32 RB5- RB7: N/A RB2- RB3: 32 RB5- RB7: N/A RB2- RB3: 32 RB5- RB7: N/A RB2- RB3: as below RB5- RB7: N/A RB2- RB3: as below RB5- RB7: N/A RB2- RB3: as below RB5- RB7: N/A RB2- RB3: 100 RB2- RB3: TRUE RB3- RB7: FALSE RB3- RB7: FALSE RB3- RB7: FALSE RB5- RB7: FALSE RB1- RB3: 9 RB5- RB7: N/A RB1- RB3: 9 RB5- RB7: N/A RB1- RB3: 3 RB5- RB7: 5 DL- logicalChannelMappingList SMapping option 1 Dch Dch TransportChannelType SystansportChannelIden RB1- RB3: 9 RB5- RB7: N/A RB1-	>>inSequenceDelivery	RB1: N/A
>>receivingWindowSize RB1: N/A RB2- RB3: 32 RB5- RB7: N/A RB1: N/A RB2- RB3: as below RB5- RB7: N/A >>stimerStatusProhibit RB2- RB3: 100 >>missingPDU-Indicator RB2- RB3: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelMappingList >>Mapping option 1 >>one mapping option 1 >>configured RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel dentity >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >odynamicTF-information >>>trCH2: (0x 84 1x84) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
RB2- RB3: 32 RB5- RB7: N/A >>dl-RLC-StatusInfo RB1: N/A RB2- RB3: as below RB5- RB7: N/A >>stimerStatusProhibit RB2- RB3: 100 >>segmentationIndicator RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType NoneLogicalChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>DL- logicalChannelMappingList >>Mapping option 1 >>>d- TransportChannelType >>>stransportChannelIdentity RB1- RB3: 9 RB5- RB7: S DL- logicalChannelMappingList >>Mapping option 1 >>>d- TransportChannelType >>>stransportChannelIdentity RB1: 1, RB2: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5- RB7: S Dch TransportChannelIdentity RB1- RB3: 9 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>trCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
RB5- RB7: N/A RB1: N/A RB2- RB3: as below RB5- RB7: N/A RB2- RB3: as below RB5- RB7: N/A RB2- RB3: 100 RB2- RB3: TRUE RB3- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: FALSE RB5- RB7: SALSE RB5- RB7: SALSE RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB1- RB3: SALSE RB5- RB7: N/A RB5- RB7- N/A RB	>>receivingWindowSize	
>>dl-RLC-StatusInfo RB1: N/A RB2- RB3: as below RB5- RB7: N/A >>>timerStatusProhibit RB2- RB3: 100 >>>missingPDU-Indicator >>segmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>>transportChannelIdentit y >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB1- RB3: 0 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5- 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5- 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>trOH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
RB2- RB3: as below RB5- RB7: N/A >>>timerStatusProhibit RB2- RB3: 100 >>missingPDU-Indicator RB1- RB3: N/A RB5- RB7: FALSE RB1- RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: FALSE RB3: N/A RB5- RB7: SAID RB3: N/A RB5- RB7: N/A RB1- RB3: N/A N/A RB1- RB3: N/A RB1- RB3: N/A N/A RB1- RB3: N/A N/A RB1- RB3: N/A RB1-	and DLC StatusInfo	
RB5- RB7: N/A >>>timerStatusProhibit RB2- RB3: 100 >>missingPDU-Indicator PSegmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>>transportChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: onfigured RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: S >DL- logicalChannelMappingList >>Mapping option 1 >>dh TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity TransportChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet >>dch type >transportFormatSet >>dch type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet >>dch type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportChannelIdentity TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>ui-RLC-Statusiiiio	
>>>timerStatusProhibit RB2- RB3: 100 >>>missingPDU-Indicator RB2- RB3: TRUE >>segmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>>transportChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelMappingList >>Mapping option 1 One mapping option Dch TransportChannelType >>>>transportChannelIden tity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >>transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO,1 TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
>>>missingPDU-Indicator >>segmentationIndication RB1- RB3: N/A RB5- RB7: FALSE rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>>transportChannelIdentity X RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 0 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: S >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5- RB7: S >DL- RB1: 1, RB2: 2, RB3: 3 RB5- RB7: S >NARP5- RB7: S >DL- RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >>transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfOH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>>timerStatusProhibit	
rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>stransportChannelIdentit y >>logicalChannelMappingt >>logicalChannelIdentit y >>logicalChannelIdentity >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1- RB3: configured RB1- RB2: config	>>>missingPDU-Indicator	
rb-MappingInfo >UL- LogicalChannelMappings >>ul- TransportChannelType >>>transportChannelIdentity y RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: 9 configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelPriority RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 Dch TransportChannelType >>>>transportChannelIden tity RB1: 1, RB2: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB7: 3 >>transportChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0/1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RB1- RB3: N/A
SUL-LogicalChannelMappings Dch	_	RB5- RB7: FALSE
LogicalChannelMappings South TransportChannelType South TransportChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB1- RB3: 3 RB5- RB7: N/A South Proceedings RB1- RB3: 3 RB5- RB7: N/A South Procedings RB1- RB3: 3 RB5- RB7: N/A South Procedings RB1- RB3: 3 RB5- RB7: N/A South Procedings RB5- RB7: South Procedings RB5- RB7: South Procedings RB5- RB7: South Procedings RB1- RB3: 9 RB5- RB7: N/A RB1- RB3: 9 RB3: 3 RB5- RB7: N/A RB1- RB3: 9 RB3- RB7- N/A RB1- RB3- RB7- RB7- N/A RB1-		
>>ul- TransportChannelType >>>transportChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>mac- LogicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 Dch logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB1: 1, RB2: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		OneLogicalChannel
TransportChannelType >>>transportChannelIdentit y RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>DL- logicalChannelMappingList >>Mapping option 1 One mapping option >>>dl- TransportChannelType >>>>transportChannelIden tity RB1: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >>transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO/t (0x 84) 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		Deb
>>>transportChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3	1	ncu
y RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >DL- logicalChannelMappingList >>Mapping option 1 One mapping option >>dl- Dch TransportChannelType >>>transportChannelIden tity RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RR1- RR3- 0
>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>transportChannelIden tity RB1: 1, RB2: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >dch type >transportFormatSet >>dch TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	•	
>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A >>DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >>dodatedTransChT FS >>dynamicTF-information >>>tfO/ tfO,1 TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	,	
RB3: 3 RB5- RB7: N/A >>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO/ tfO,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>logicalChannelIdentity	
>>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelIden tity RB1- RB3: 9 RB5- RB7: 3 >>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RB3: 3
configured RB5- RB7: N/A >>mac- LogicalChannelPriority RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
RB5-RB7: N/A >>mac- LogicalChannelPriority RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>rlc-SizeList	
>>mac- LogicalChannelPriority RB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 Dch TransportChannelType >>>stransportChannelIden tity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: 5 Dch TransportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
LogicalChannelPriority RB3: 3 RB5- RB7: 5	>> maa	
RB5- RB7: 5		
SDL- logicalChannelMappingList SMapping option 1 One mapping option 1 Syydl- TransportChannelType SyystransportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList SUplink transport channel type StransportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 StransportFormatSet DedicatedTransChT FS SydynamicTF-information Systfo/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144) TrCH5: (0x144, 1x144) Tr	Logical Chamion Honey	
>>Mapping option 1 >>>dl- TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>DL-	
>>>dl- TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	-	Dch
tity RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		DD1 DD2: 0
RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	I .	
>>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	y	RB7: 3
RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>>logicalChannelIdentity	RB1: 1, RB2: 2,
TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RB3: 3
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		RB5- RB7: N/A
UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
>Uplink transport channel type >transportChannelIdentity >transportFormatSet >transportFormatSet >dch TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		dch
>transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	I	4011
TrCH3:3, TrCH4: 9		TrCH1: 1, TrCH2: 2.
FS >>dynamicTF-information TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144) TrCH4: (0x		
>>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>transportFormatSet	DedicatedTransChT
>>>tf0/ tf0,1 TrCH1: (0x75) TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		FS
TrCH2: (0x 84 1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)		T-014. (0.75)
1x84) TrCH3: (0x 60) TrCH4: (0x144, 1x144)	>>ttU/ ttU,1	
TrCH3: (0x 60) TrCH4: (0x144, 1x144)		
TrCH4: (0x144, 1x144)		
1x144)		
>>>rlcSize BitMode		
DILIVIOUE	>>>rlcSize	BitMode

Configuration	7.95 kbps speech
	3.4 kbps signalling
>>>>sizeType	TrCH1: type 1: 75 TrCH2: type 1: 84 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0
>>>>numberOfTbSizeList	(144) TrCH1: Zero
>>> logicalChannell ist	TrCH2-4: Zero, one
>>>>logicalChannelList >>>tf 1	TrCH1: (1x39) TrCH2- TrCH4: N/A
>>>numberOfTransportBl	TrCH1: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: 1: 39
>>>>numberOfTbSizeList >>>>logicalChannelList >>>tf 2	TrCH1: One TrCH1: all TrCH1: (1x75)
>>>numberOfTransportBl	TrCH2- TrCH4: N/A TrCH1: One
>>>rlc-Size	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 75
>>>numberOfTbSizeList	TrCH1: One
>>>logicalChannelList	TrCH1: all
>>semistaticTF-Information	110111. uii
>>>tti	TrCH1- TrCH4: 20
	TrCH3: 40
>>>channelCodingType	Convolutional
>>>>codingRate	TrCH1- TrCH2: Third TrCH3: Half TrCH4: Third
>>>rateMatchingAttribute	TrCH1: 200 TrCH2: 190 TrCH3: 235 TrCH4: 160
>>>crc-Size	TrCH1: 12 TrCH2-TrCH3: 0 TrCH4: 16
DL- AddReconfTransChInfoList	
>Downlink transport	Dch
channel type	
>dl- TransportChannelIdentity (should be as for UL)	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9
>tfs-SignallingMode	Explicit <only and="" below="" different="" is="" on="" shown="" tf0="" trch1=""></only>
>>transportFormatSet	DedicatedTransChT FS
>>>dynamicTF-information	T-014. (4. 0)
>>>>tf0/ tf0,1	TrCH1: (1x0)
>>>rlcSize	BitMode
>>>>sizeType	TrCH1: type 1: 0
>>>numberOfTbSizeList	TrCH1: One
>>>>logicalChannelList	All
>>ULTrCH-Id	TrCH1: 1, TrCH2: 2, TrCH3:3, TrCH4: 9
>dch-QualityTarget	

Configuration	7.95 kbps speech
	3.4 kbps signalling
>>bler-QualityValue	TrCH1: 7x10-3
	TrCH2- TrCH4:
T-CLUNEODMATION	Absent
TrCH INFORMATION, COMMON	
ul-CommonTransChInfo	
>tfcs-ID (TDD only)	1
>sharedChannelIndicator (TDD only)	FALSE
>tfc-Subset	Absent, not required
>ul-TFCS	Normal TFCI
	signalling
>>explicitTFCS-	Complete
ConfigurationMode	
>>>ctfcSize	Ctfc4Bit
>>>TFCS representation >>>>TFCS list	Addition
>>>>TFCS list	(TF0, TF0, TF0,
7777711 65 1	TF0)
>>>>>ctfc	0
>>>>>gainFactorInform	Computed
ation	
>>>>>>referenceTFCId	0
>>>>TFCS 2	(TF1, TF0, TF0,
	TF0)
>>>>>CtfC	1 Computed
>>>>>gainFactorInform ation	Computed
>>>>>βc (FDD only)	N/A
>>>>>βd	N/A
>>>>>referenceTFCld	0
>>>>TFCS 3	(TF2, TF1, TF0, TF0)
>>>>>ctfc	5
>>>>>gainFactorInform	Computed
ation >>>>>referenceTFCId	0
>>>>TFCS 4	(TF0, TF0, TF0,
	TF1)
>>>>>ctfc	6
>>>>>gainFactorInform ation	Computed
>>>>>βc (FDD only)	N/A
>>>>>βd	N/A
>>>>>>referenceTFCld	0
>>>>TFCS 5	(TF1, TF0, TF0, TF1)
>>>>>ctfc	7
>>>>>gainFactorInform	Computed
ation	
>>>>>referenceTFCld	0
>>>>TFCS 6	(TF2, TF1, TF0, TF1)
>>>>>ctfc	11
>>>>>gainFactorInform ation	Signalled
>>>>>βc (FDD only)	11
>>>>>βd	15
>>>>>>referenceTFCld	0
dl-CommonTransChInfo	-

Configuration	7.95 kbps speech
	+ 3.4 kbps signalling
>tfcs-SignallingMode	Same as UL
PhyCH INFORMATION	
FDD	
UL-DPCH-InfoPredef	
>ul-DPCH-	
PowerControlInfo	A lara vitla va d
>>powerControlAlgorithm	Algorithm 1
>>>tpcStepSize >tfci-Existence	1 dB TRUE
>puncturingLimit	1
DI -	I
CommonInformationPredef	
>dI-DPCH-InfoCommon	
>>spreadingFactor	128
>>tfci-Existence	FALSE
>>pilotBits	4
>>positionFixed	Fixed
PhyCH INFORMATION	
3.84/7.68 Mcps TDD	
UL-DPCH-InfoPredef >ul-DPCH-	
>ul-DPCH- PowerControlInfo	
>>dpch-ConstantValue	0
>commonTimeslotInfo	0
>>secondInterleavingMode	frameRelated
>>tfci-Coding	16
>>puncturingLimit	0.52
>>repetitionPeriodAndLeng	repetitionPeriod1
th	'
DL-	
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>secondInterleavingMod	frameRelated
e >>>tfci-Coding	16
	16 0.52
>>>puncturingLimit >>>repetitionPeriodAndLe	repetitionPeriod1
ngth	repetition enour
PhyCH INFORMATION	
1.28 Mcps TDD	
UL-DPCH-InfoPredef	
>commonTimeslotInfo	
>>secondInterleavingMode	frameRelated
>>tfci-Coding	16
>>puncturingLimit	0.80
>>repetitionPeriodAndLeng	repetitionPeriod1
th	
DL- CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>>secondInterleavingMod	frameRelated
e	
>>>tfci-Coding	16
>>>puncturingLimit	0.80
>>>repetitionPeriodAndLe	repetitionPeriod1
ngth	

Configuration	12.65/8.85/6.6 kbps
	speech +
	3.4 kbps signalling
	(without SRB#5)
Ref 25.993	106
Default configuration	16
identity	
RB INFORMATION	DD4 4 DD0 0
rb-Identity	RB1: 1, RB2: 2,
	RB3: 3, RB5: 5,
was trafa Charina	RB6: 6, RB7: 7,
rlc-InfoChoice >ul-RLC-Mode	RIc-info
>ui-RLC-iviode	RB1: UM RB2- RB3: AM
	RB5-RB7: TM
>>transmissionRLC-	RB1: N/A
DiscardMode	RB2- RB3:
Biocarawioae	NoDiscard
	RB5- RB7: N/A
>>>maxDat	RB1: N/A
	RB2- RB3: 25
	RB5- RB7: N/A
>>transmissionWindowSiz	RB1: N/A
е	RB2- RB3: 32
	RB5- RB7: N/A
>>timerRST	RB1: N/A
	RB2- RB3: 200
	RB5- RB7: N/A
>>max-RST	RB1: N/A
	RB2- RB3: 1
	RB5- RB7: N/A
>>pollingInfo	RB1: N/A
	RB2- RB3: as below
TimorDoll	RB5- RB7: N/A
>>>TimerPoll >>>PollPDU	RB2- RB3: 200
>>>PollSDU	RB2- RB3: n/a RB2- RB3: 1
>>>lastTransmissionPDU-	RB2- RB3: FALSE
Poll	ND2- ND3. I ALGE
>>>lastRetransmissionPD	RB2- RB3: TRUE
U-Poll	1132 1130: 11102
>>>PollWindow	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A
	RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM
	RB2- RB3: AM
	RB5- RB7: TM
>>inSequenceDelivery	RB1: N/A
	RB2- RB3: TRUE
	RB5- RB7: N/A
>>receivingWindowSize	RB1: N/A
	RB2- RB3: 32
	RB5- RB7: N/A
>>dl-RLC-StatusInfo	RB1: N/A
	RB2- RB3: as below
time a "Otato - Do- le ile it	RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: TRUE
>>segmentationIndication	RB1- RB3: N/A
rh ManningInfo	RB5- RB7: FALSE
rb-MappingInfo >UL-	Onel ogicalChannel
LogicalChannelMappings	OneLogicalChannel
>>ul-	Dch
TransportChannelType	5011
The state of the s	<u> </u>

>>>transportChannelIdentit	RB1- RB3: 9
У	RB5: 1, RB6: 2,
	RB7: 3.
la si a al Channa all da mitir :	DD4: 4 DD0: 0
>>logicalChannelIdentity	RB1: 1, RB2: 2,
	RB3: 3
	RB5- RB7: N/A
>>rlc-SizeList	RB1- RB3:
>>IIC-SIZELISI	
	configured
	DDE DDZ: N/A
	RB5- RB7: N/A
>>mac-	RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3
	RB5- RB7: 5
	RD0 RD7.0
>DL-	
logicalChannelMappingList	
>>Mapping option 1	One mapping option
>>>dl-	Dch
TransportChannelType	
>>>>transportChannellden	RB1- RB3: 9
·	
tity	RB5: 1, RB6: 2,
	RB7: 3,
1 1 101	
>>>logicalChannelIdentity	RB1: 1, RB2: 2,
ı	RB3: 3
	RB5- RB7: N/A
T-OLLINGODAATION DED	
TrCH INFORMATION PER	
TrCH	
	
UL-	
=	
AddReconfTransChInfoList	<u> </u>
>Uplink transport channel	Dch
	Don
type	
	TrCU1.1 TrCU1.1
>transportChannelIdentity	TrCH1: 1, TrCH2: 2,
	TrCH3: 3, TrCH4: 9
>transportFormatSet	DedicatedTransChT
	FS
	F5
l >>dvnamic l F-information	
>>dynamicTF-information	= 0 111 (0 =0)
>>dynamic I F-information >>>tf0/ tf0,1	TrCH1: (0x72)
	TrCH1: (0x72)
	TrCH2: (0x 181)
	TrCH2: (0x 181)
	TrCH2: (0x 181) TrCH3: (0x60)
	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144,
	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144,
>>>tf0/ tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144)
	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode
>>>tf0/ tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2:
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2:
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2,
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2,
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144)
>>>tf0/tf0,1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One
>>>tf0/tf0,1 >>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBlocks	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One
>>>tf0/tf0,1 >>>rlcSize >>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One
>>>tf0/tf0,1 >>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>rlc-Size	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode
>>>tf0/tf0,1 >>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBlocks	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40
>>>tf0/tf0,1 >>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>rlc-Size	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>rlc-Size >>>>sizeType	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1: 1: 40 TrCH1: 1: 40 TrCH1: 1: 40 TrCH2: 1: 78
>>>tf0/tf0,1 >>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBlocks >>>rlc-Size	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>rlc-Size >>>>sizeType >>>numberOfTbSizeList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40 TrCH2: 1: 78 TrCH1-2: One
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>>rlc-Size >>>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: 1: 40 TrCH2: One TrCH1-2: One TrCH1: 2: One TrCH1: all
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>rlc-Size >>>>sizeType >>>numberOfTbSizeList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: 1: 40 TrCH2: One TrCH1-2: One TrCH1: 2: One TrCH1: all
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>sizeType >>>sizeType >>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1: 1: 40 TrCH2: 1: 78 TrCH1-2: One TrCH1: all TrCH1: all TrCH1: (1x54)
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>sizeType >>>sizeType >>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: One TrCH1: 1: 78 TrCH1: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>sizeType >>>sizeType >>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: One TrCH1: 1: 78 TrCH1: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>sizeType >>>sizeType >>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: 1: 40 TrCH1: 1: 78 TrCH1: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: 1: 78 TrCH1-2: One TrCH1: all TrCH1: (1x54) TrCH2: (1x113) TrCH3: N/A
>>>tf0/tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>tf 1 >>>numberOfTransportBl ocks >>>sizeType >>>sizeType >>>sizeType >>>logicalChannelList	TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144) BitMode TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-3: Zero TrCH4: Zero, one All TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A TrCH1: One TrCH2: One TrCH1-2: BitMode TrCH1: 1: 40 TrCH2: 1: 78 TrCH1: One TrCH1: 1: 78 TrCH1: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One TrCH1: 1: 40 TrCH2: One

>>>>numberOfTransportBl ocks TrCH2: One >>>>rlc-Size TrCH1: BitMode >>>>ssizeType TrCH1: type 1: 54 TrCH2: type 1: 113 >>>>numberOfTbSizeList TrCH2: type 1: 113 >>>slogicalChannelList TrCH1: One TrCH2: all TrCH2: all TrCH2: all TrCH2: (1x181) TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks TrCH1: BitMode >>>>sizeType TrCH1: BitMode >>>>sizeType TrCH1: BitMode >>>>sizeType TrCH1: bit type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>numberOfTbSizeList TrCH1: One TrCH2: One >>>>logicalChannelList TrCH1: One TrCH2: N/A TrCH2: N/A TrCH2: N/A TrCH2: N/A TrCH2: N/A TrCH4: N/A >>>>numberOfTransportBl ocks TrCH1: Ch1: Dit type 1: 72 >>>>numberOfTbSizeList TrCH1: One >>>>sizeType TrCH1: BitMode >>>>numberOfTransportBl ocks TrCH1: One >>>>numberOfTbSizeList TrCH1: One >>>sizeType TrCH1: TrCH2: 20 TrCH1: BitMode >>>sizeType TrCH1: TrCH2: 20 TrCH1: BitMode >>>solgicalChannelList TrCH1: One >>>solgicalChannelList TrCH1: BitMode >>>codingRate Tr	>>>>numper()rirangnoriki	T::014: 0:
>>>>rlc-Size TrCH1: BitMode >>>>>sizeType TrCH1: type 1: 54 TrCH2: type 1: 113 TrCH2: One >>>>logicalChannelList TrCH1: One >>>logicalChannelList TrCH2: all TrCH2: (1x181) TrCH2: (1x181) TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks TrCH1: One >>>>rlc-Size TrCH1: BitMode >>>>sizeType TrCH1: type 1: 64 TrCH2: one TrCH2: one >>>>numberOfTbSizeList TrCH1: One TrCH2: all TrCH2: all TrCH2: N/A TrCH2: N/A TrCH2: N/A TrCH1: One >>>logicalChannelList TrCH1: One >>>sizeType TrCH1: BitMode >>>>numberOfTransportBl TrCH1: One >>>sizeType TrCH1: BitMode >>>>numberOfTbSizeList TrCH1: Dne >>>sizeType TrCH1: BitMode >>>>numberOfTbSizeList TrCH1: Dne >>>sizeType TrCH1: TrCH2: 20 TrCH4: 40 TrCH2: 10 >>>codingRate TrCH1: TrCH2: 10		
>>>>sizeType TrCH1: type 1: 54	ocks	TrCh2: One
>>>>sizeType TrCH1: type 1: 54	>>>>rlc-Size	TrCH1: BitMode
TrCH2: type 1: 113		
>>>>numberOfTbSizeList TrCH1: One TrCH2: One TrCH2: One TrCH2: One >>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: all TrCH2: (1x181) TrCH2: (1x181) TrCH3: N/A TrCH4: N/A TrCH2: One TrCh2: One TrCh2: One TrCh2: one TrCH2: type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>rlumberOfTbSizeList TrCH1: Dne TrCH2: One TrCH2: One TrCH2: One TrCH2: One TrCH2: All TrCH2: All TrCH2: All TrCH2: All TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A TrCH1: Dne TrCH1: Dne TrCH1: All TrCH1: All TrCH1: All TrCH1: All TrCH1: All TrCH1: All TrCH1: All TrCH1: All TrCH2: All TrCH1: All All TrCH1: All All TrCH1: All All TrCH1: All All TrCH1: All All TrCH1: All All TrCH2: All All TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: All All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All TrCH4: All All TrCH4: All All All All All All All All All Al	>>>>0120 1 ypo	
TrCH2: One	L OCTION IN	T 0114 0
>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: all TrCH2: all TrCH2: (1x181) TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH2: One TrCh2: One TrCh2: One TrCh2: One TrCH1: BitMode >>>>rlc-Size TrCH1: BitMode TrCH2: One TrCH2: All TrCH1: All TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH1: One One One One One One One One One One	>>>>numberOf1bSizeList	
TrCH2: all		TrCH2: One
>>>tf 3	>>>>logicalChannelList	TrCH1: all
>>>tf 3	G	TrCH2: all
TrCH2: (1x181) TrCH3: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH1: One TrCh2: One TrCh2: One TrCH2: type 1: 64 TrCH2: type 2: part1=6, part2=5 TrCH1: Dne TrCH2: One TrCH2: N/A TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH1: One TrCH1: One TrCH1: One TrCH1: One TrCH1: TrCH2: One TrCH1: TrCH2: One TrCH1: TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH1: Indicated TrCH2: One TrCH2: One TrCH2: Indicated TrCH2: Indicated TrCH2: Indicated TrCH2: Indicated TrCH2: Indicated TrCH2: Indicated TrCH3: Indicated TrCH4: Indicated TrCH4: Indicated TrCH3: Indicated TrCH4: Indicated TrCH4: Indicated TrCH3: Indicated TrCH4: Indicated T	>>> ff 3	
TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH2: N/A TrCH2: One TrCh2: One TrCh2: One TrCH1: BitMode TrCH2: type 1: 64 TrCH2: type 2: part1=6, part2= 5 TrCH1: Cone TrCH2: One TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A TrCH3: N/A TrCH4: N/A TrCH3: N/A TrCH4: N/A TrCH1: One TrCH4: All TrCH3: All TrCH4:	/// ti 5	
TrCH4: N/A		
>>>>numberOfTransportBI ocks TrCH1: One TrCh2: One >>>>rlc-Size TrCH1: BitMode >>>>sizeType TrCH1: type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>numberOfTbSizeList TrCH1: One TrCH2: One >>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A TrCH1: One >>>>numberOfTransportBl ocks TrCH1: BitMode >>>>slogicalChannelList TrCH1: One >>>>slogicalChannelList TrCH1: type 1: 72 >>>slogicalChannelList TrCH1: One >>>stii TrCH1: TrCH2: 20 TrCH4: 40 TrCH4: All >>>channelCodingType Convolutional >>>codingRate TrCH1: TrCH3: TrCH3: TrCH3: TrCH4: TrCH3: TricH4: TrCH3: TrCH4: TrO >>>crc-Size TrCH4: TrCH2: 00 TrCH2: 190 TrCH3: 056 TrCH4: 170 TrCH3: 0 TrCH4: 16 DL-AddReconfTransChInfoList Dch >Downlink transport Dch channel type >dl TransportChannelIdentity TrCH1: (1x0) >>>stf0/ tf0,1 TrCH1: (1x0) >>>sologicalChannelList All		
ocks TrCh2: One >>>>rlc-Size TrCH1: BitMode >>>>>sizeType TrCH1: type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>numberOfTbSizeList TrCH1: One TrCH2: One >>>>logicalChannelList TrCH1: all TrCH2: all >>>>tf 4 TrCH1: (1x72) TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks TrCH1: Dne >>>>sizeType TrCH1: Dne >>>>sizeType TrCH1: One >>>>numberOfTbSizeList TrCH1: One >>>somistaticTF-Information TrCH1: TrCH2: 20 TrCH4: 40 >>>codingRate TrCH1- TrCH2: 20 TrCH4: Third TrCH4: Third TrCH2: 190 TrCH2: 190 TrCH2: 190 TrCH2: 190 TrCH2: 190 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL-AddReconfTransChInfoList Dch >Downlink transport channel type Dch >dl-TransportChannelIdentity TrCH1: (1x0) >>stfo/ tf0,1 TrCH1: (1x0) >>>sizeType TrCH1: type 1: 0 >>>logicalChannelList All >>>semistaticTF-Information TrCH1: 0ne >>>semistaticTF-Information <td></td> <td></td>		
>>>>rlc-Size TrCH1: BitMode >>>>sizeType TrCH1: type 1: 64 TrCH2: type 2: part1=6, part2= 5 TrCH1: One TrCH2: One TrCH2: One >>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: N/A TrCH2: N/A TrCH2: N/A TrCH3: N/A TrCH4: N/A TrCH1: One >>>>numberOfTransportBl ocks TrCH1: Done >>>>rlc-Size TrCH1: BitMode >>>>sizeType TrCH1: One >>>sologicalChannelList TrCH1: TrCH2: 20 TrCH4: Thone TrCH1: all >>>sologicalChannelList TrCH1: TrCH2: 20 TrCH4: 40 TrCH1: TrCH2: 20 TrCH4: 40 TrCH1: TrCH3: Third >>>codingRate TrCH1- TrCH3: Third TrCH4: Third TrCH2: 190 TrCH2: 190 TrCH3: 256 TrCH4: 170 TrCH3: 0 TrCH4: 16 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channelIdentity TrCH3: 0 yffs-SignallingMode Independent >>transportFormatSet	>>>>numberOfTransportBl	TrCH1: One
>>>>sizeType TrCH1: type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>numberOfTbSizeList TrCH1: One TrCH2: One TrCH2: One TrCH2: One TrCH2: All TrCH2: All TrCH1: All TrCH2: All TrCH2: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode TrCH1: One TrCH1: All TrCH1: One TrCH1: One TrCH1: One TrCH1: One TrCH1: TrCH1: TrCH1: All TrCH1: All TrCH1: TrCH1: All TrCH1:	ocks	TrCh2: One
>>>>sizeType TrCH1: type 1: 64 TrCH2: type 2: part1=6, part2= 5 >>>>numberOfTbSizeList TrCH1: One TrCH2: One TrCH2: One TrCH2: One TrCH2: All TrCH2: All TrCH1: All TrCH2: All TrCH2: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode TrCH1: One TrCH1: All TrCH1: One TrCH1: One TrCH1: One TrCH1: One TrCH1: TrCH1: TrCH1: All TrCH1: All TrCH1: TrCH1: All TrCH1:	>>>rlc-Size	TrCH1: BitMode
>>> numberOfTbSizeList		
>>>numberOfTbSizeList	>>>>512e i ype	
>>>>numberOfTbSizeList		
>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode TrCH1: type 1: 72 >>>>numberOfTbSizeList TrCH1: One >>>semistaticTF-Information >>>tti TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>>tfo/10,1 TrCH1: (1x0) >>>srlcSize BitMode >>>>slid/Otf0,1 TrCH1: type 1: 0 TrCH1: 10 TrCH1: 10 TrCH2: 10 TrCH2: 10 TrCH3: 0 TrCH4: 16 Dch TrCH4: 16 Dch TrCH4: 16 Dch TrCH4: 16 Dch TrCH4: 16 DrcH4: 17 DrcH4: 16 DrcH4: 17 DrcH4: 18 D		
>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: all TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode TrCH1: One TrCH1: One >>>>logicalChannelList TrCH1: One TrCH1: Uppe 1: 72 >>>numberOfTbSizeList TrCH1: all TrCH1: all TrCH1: TrCH2: 20 TrCH4: 40 >>>channelCodingType TrCH1- TrCH2: 20 TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>odynamicTF-information >>>stf0/tf0,1 TrCH1: (1x0) EitMode >>>>sizeType TrCH1: type 1: 0 T	>>>>numberOfTbSizeList	
>>>logicalChannelList TrCH1: all TrCH2: all TrCH2: all TrCH2: N/A TrCH3: N/A TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode TrCH1: One TrCH1: One >>>>logicalChannelList TrCH1: One TrCH1: Uppe 1: 72 >>>numberOfTbSizeList TrCH1: all TrCH1: all TrCH1: TrCH2: 20 TrCH4: 40 >>>channelCodingType TrCH1- TrCH2: 20 TrCH4: Third TrCH4: Third TrCH4: Third TrCH4: Third TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>odynamicTF-information >>>stf0/tf0,1 TrCH1: (1x0) EitMode >>>>sizeType TrCH1: type 1: 0 T		TrCH2: One
TrCH2: all >>>tf 4 TrCH1: (1x72) TrCH2: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH4: N/A TrCH1: One >>>>numberOfTransportBl ocks >>>>sizeType TrCH1: Uppe 1: 72 >>>numberOfTbSizeList TrCH1: all >>semistaticTF-Information >>>ti TrCH1- TrCH2: 20 TrCH4: 40 >>>codingRate TrCH1- TrCH3: TricH3: TrCH4: Third TrCH4: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 12 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>sizeType TrCH1: type 1: 0 >>>sizeType TrCH1: type 1: 0 >>>sologicalChannelList >>>logicalChannelList >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>>logicalChannelList	
>>>tf 4 TrCH1: (1x72) TrCH2: N/A TrCH3: N/A TrCH4: N/A TrCH4: N/A TrCH1: One ocks >>>>numberOfTransportBl ocks TrCH1: BitMode >>>>sizeType TrCH1: type 1: 72 >>>numberOfTbSizeList TrCH1: all >>semistaticTF-Information >>>tti TrCH1- TrCH2: 20 TrCH4: 40 >>>codingRate TrCH1- TrCH3: Third TrCH4: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 12 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/tf0,1 TrCH1: (1x0) >>>sizeType TrCH1: type 1: 0 >>>sizeType TrCH1: type 1: 0 >>>sizeType TrCH1: type 1: 0 TrCH1: type 1: 0 >>>sizeType TrCH1: type 1: 0 TrCH1: type 1: 0 TrCH1: 1, TrCH2: 2, Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
TrCH2: N/A TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode >>>>sizeType TrCH1: type 1: 72 >>>numberOfTbSizeList >>>logicalChannelList >>>tii TrCH1: TrCH2: 20 TrCH1: all >>>channelCodingType Convolutional TrCH1: TrCH3: Third TrCH4: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>cro-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 TrCH1: type 1: 0 TrCH1: Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>> #f /1	TrCU1: (1,72)
TrCH3: N/A TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size TrCH1: BitMode >>>>subspace	>>>u 4	
TrCH4: N/A >>>>numberOfTransportBl ocks >>>>rlc-Size		
>>>>numberOfTransportBI ocks >>>>rlc-Size		
ocks >>>>rlc-Size >>>>sizeType >>>>numberOfTbSizeList >>>>logicalChannelList >>semistaticTF-Information >>>tii TrCH1: TrCH2: 20 TrCH4: 40 >>>channelCodingType >>>codingRate TrCH1: TrCH3: Third TrCH4: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 >>>stf0/ tf0,1 >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: 0ne >>>logicalChannelList All >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
ocks >>>>rlc-Size >>>>sizeType >>>numberOfTbSizeList >>>>logicalChannelList >>semistaticTF-Information >>>tii TrCH1: TrCH2: 20 TrCH4: 40 >>>channelCodingType >>>codingRate TrCH1: TrCH3: Third TrCH4: Third TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>trCH1: (1x0) >>>srlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>logicalChannelList >>>logicalChannelList >>same as UL Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>>numberOfTransportBl	TrCH1: One
>>>>rlc-Size		
>>>>sizeType >>>>numberOfTbSizeList >>>>numberOfTbSizeList TrCH1: One >>>logicalChannelList >>semistaticTF-Information >>>tti TrCH1: all >>semistaticTF-Information TrCH4: 40 >>>channelCodingType Convolutional TrCH4: Third TrCH4: Third TrCH4: Third TrCH2: 190 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0,1 >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: 0, ne >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		TrCH1: BitMode
>>>>numberOfTbSizeList TrCH1: One >>>>logicalChannelList TrCH1: all >>semistaticTF-Information >>>tti TrCH1: TrCH2: 20 TrCH4: 40 >>>channelCodingType Convolutional >>>>codingRate TrCH1- TrCH3: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode Independent >>transportFormatSet >>>dynamicTF-information >>>tfO/tf0,1 TrCH1: (1x0) >>>>rlcSize BitMode >>>>sizeType TrCH1: One >>>logicalChannelList All >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
>>>>logicalChannelList >>semistaticTF-Information >>>tti TrCH1- TrCH2: 20 TrCH4: 40 >>>channelCodingType Convolutional >>>codingRate TrCH1- TrCH3: Third TrCH4: Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>trCH1: (1x0) >>>srlcSize BitMode >>>>sizeType TrCH1: One >>>logicalChannelList >>me as UL Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
>>semistaticTF-Information >>>tti		
>>>tti		TrCH1: all
TrCH4: 40	>>semistaticTF-Information	
TrCH4: 40	>>>tti	TrCH1- TrCH2: 20
>>>channelCodingType		
>>>codingRate TrCH1- TrCH3: Third TrCH4: Third TrCH2: 190 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>srlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>logicalChannelList >>lone >>ullTrCH-Id TrCH1: 1, TrCH2: 2,	>>>channelCodingType	
Third TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>>logicalChannelList >>lone >>ullTrCH-Id TrCH1: 1, TrCH2: 2,		
TrCH4: Third >>>rateMatchingAttribute TrCH1: 200 TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>>rlcSize BitMode >>>>sizeType TrCH1: one >>>logicalChannelList >>loft TrCH1: 0ne >>>logicalChannelList >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
>>>rateMatchingAttribute		
TrCH2: 190 TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>stf0/ tf0,1 >>>srlcSize BitMode >>>numberOfTbSizeList >>>logicalChannelList >>trCH1: 1, TrCH2: 2, Information TrCH1: 1, TrCH2: 2,		
TrCH3: 256 TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 >>>srlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>u TrCH1: 1, TrCH2: 2, Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>rateMatchingAttribute	TrCH1: 200
TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>srlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList All >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		TrCH2: 190
TrCH4: 170 >>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>srlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList All >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		l = a a=a
>>>crc-Size TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stfo/ tf0,1 >>>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		1rCH3: 256
TrCH2: 0 TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		
TrCH3: 0 TrCH4: 16 DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>stfo/ tf0,1 >>>srlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>crc-Size	TrCH4: 170
DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>rlcSize BitMode >>>sricSize >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>crc-Size	TrCH4: 170 TrCH1: 12
DL- AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 >>>rlcSize BitMode >>>sricSize >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>crc-Size	TrCH4: 170 TrCH1: 12 TrCH2: 0
AddReconfTransChInfoList >Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (1x0) >>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	>>>crc-Size	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0
>Downlink transport channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,		TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0
channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL-	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0
channel type >dI- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL-	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0
>dl- TransportChannelIdentity >tfs-SignallingMode Independent >>transportFormatSet >>>dynamicTF-information >>>stf0/ tf0,1 TrCH1: (1x0) >>>srlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
TransportChannelIdentity >tfs-SignallingMode >transportFormatSet >>dynamicTF-information >>>tf0/tf0,1 >>>rlcSize BitMode >>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList >>>logicalChannelList >>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>tfs-SignallingMode Independent >>transportFormatSet >>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (1x0) >>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>semistaticTF-Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 TrCH1: (1x0) >>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF-Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl-	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>>dynamicTF-information >>>>tf0/ tf0,1 TrCH1: (1x0) >>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF-Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>>dynamicTF-information >>>>tf0/ tf0,1 TrCH1: (1x0) >>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF-Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>>>tf0/ tf0,1 TrCH1: (1x0) >>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF-Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 0 >>>>numberOfTbSizeList TrCH1: One >>>>logicalChannelList All >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16
>>>>sizeType TrCH1: type 1: 0 >>>numberOfTbSizeList TrCH1: One >>>logicalChannelList All >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent
>>>>numberOfTbSizeList TrCH1: One >>>>logicalChannelList All >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>>tf0,1	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0)
>>>>logicalChannelList All >>>semistaticTF- Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>>tf0/ tf0,1 >>>>rlcSize	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode
>>>semistaticTF- Information >>ULTrCH-Id	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>rlcSize >>>sizeType	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0
Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>rlcSize >>>sizeType >>>numberOfTbSizeList	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One
Information >>ULTrCH-Id TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>rlcSize >>>sizeType >>>numberOfTbSizeList	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One
>>ULTrCH-ld TrCH1: 1, TrCH2: 2,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One All
	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF-	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One All
	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF- Information	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One All same as UL
110113. 3, 110114. 9,	DL- AddReconfTransChInfoList >Downlink transport channel type >dl- TransportChannelIdentity >tfs-SignallingMode >>transportFormatSet >>>dynamicTF-information >>>tf0/ tf0,1 >>>>rlcSize >>>>sizeType >>>numberOfTbSizeList >>>logicalChannelList >>>semistaticTF- Information	TrCH4: 170 TrCH1: 12 TrCH2: 0 TrCH3: 0 TrCH4: 16 Dch Independent TrCH1: (1x0) BitMode TrCH1: type 1: 0 TrCH1: One All same as UL

>dch-QualityTarget	
>>bler-QualityValue	TrCH1: 7x10 ⁻³
	TrCH2: Absent
	TrCH3: Absent
	TrCH4: Absent
TrCH INFORMATION,	
COMMON	
ul-CommonTransChInfo	
>tfcs-ID (TDD only)	1
>sharedChannelIndicator	FALSE
	TALOL
(TDD only)	
> tfc-Subset	Absent, not required
>ul-TFCS	Normal TFCI
	signalling
>>explicitTFCS-	Complete
	Complete
ConfigurationMode	
>>>ctfcSize	Ctfc6Bit
>>>>TFCS representation	Addition
>>>>TFC list	
	/
>>>>TFC 1	(TF0, TF0, TF0,
	TF0)
>>>>>ctfc	0
>>>>>gainFactorInform	Computed
	Compated
ation	1
>>>>>>referenceTFCld	0
>>>>TFC 2	(TF1, TF0, TF0,
	TF0)
-ut-	
>>>>>ctfc	1
>>>>>gainFactorInform	Computed
ation	
sassas Ro (EDD only)	N/A
>>>>>βc (FDD only)	
>>>>>βd	N/A
>>>>>referenceTFCld	0
>>>>TFC 3	(TF2, TF1, TF0,
///////////////////////////////////////	
	TF0)
>>>>>ctfc	7
>>>>>gainFactorInform	Computed
ation	•
>>>>>referenceTFCId	0
>>>>TFC 4	(TF3, TF2, TF0,
	TF0)
>>>>>ctfc	13
>>>>>gainFactorInform	Computed
_	Joinputed
ation	-
>>>>>βc (FDD only)	
>>>>>βd	
	10
>>>>>>referenceTFCId	0
>>>>TFC 5	(TF4, TF3, TF0,
	TF0)
>>>>>ctfc	19
>>>>>gainFactorInform	Computed
ation	
>>>>>>referenceTFCld	0
>>>>TFC 6	(TF0, TF0, TF0,
	TF1)
.,	
>>>>>ctfc	20
>>>>>gainFactorInform	Computed
ation	
_	
ation >>>>>βc (FDD only)	·
>>>>>βc (FDD only)	
>>>>>βc (FDD only) >>>>>βd	
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCId	0
>>>>>βc (FDD only) >>>>>βd	(TF1, TF0, TF0,
>>>>>>βc (FDD only) >>>>>>βd >>>>>>referenceTFCId >>>>>TFC 7	(TF1, TF0, TF0, TF1)
>>>>>βc (FDD only) >>>>>βd >>>>>referenceTFCId	(TF1, TF0, TF0,

>>>>>gainFactorInform	
ation	Computed
>>>>>referenceTFCld	0
>>>>TFC 8	(TF2, TF1, TF0,
	TF1)
>>>>>ctfc	27
>>>>>gainFactorInform	computed
ation	
>>>>>βc (FDD only)	
>>>>>βd	
>>>>>>referenceTFCId	0
>>>>TFC 9	(TF3, TF2, TF0,
	TF1)
>>>>>ctfc	33
>>>>>gainFactorInform	computed
ation	
>>>>>>referenceTFCId	0
>>>>TFC 10	(TF4, TF3, TF0,
	TF1)
>>>>>ctfc	39
>>>>>gainFactorInform	signalled
ation	orginalisa
>>>>>βc (FDD only)	11
>>>>>βd	15
>>>>>referenceTFCId	0
> TFC subset list	<u> </u>
>>TFC subset 1	(speech rate 6.6)
>>> Allowed transport	(TFC1, TFC2,
format combination list	TFC3, TFC6, TFC7,
	TFC8)
>>TFC subset 2	(speech rate 8.85)
>>> Allowed transport	(TFC1, TFC2,
format combination list	TFC3, TFC4, TFC6, TFC7, TFC8, TFC9)
	TFC7, TFC8, TFC9)
>>TFC subset 3	(speech rate 12.65)
>>> Allowed transport	(TFC1, TFC2,
format combination list	
Torrida Combination list	TFC3, TFC4, TFC5, TFC6, TFC7, TFC8,
	11 00, 11 07, 11 00,
	TEC9 TEC10)
dl CommonTronaChlafo	TFC9, TFC10)
dl-CommonTransChInfo	TFC9, TFC10)
>tfcs-SignallingMode	TFC9, TFC10) Independent
>tfcs-SignallingMode ul-CommonTransChInfo	TFC9, TFC10)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only)	TFC9, TFC10) Independent 1
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator	TFC9, TFC10)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only)	TFC9, TFC10) Independent 1
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator	TFC9, TFC10) Independent 1
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only)	Independent 1 FALSE
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS-	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dl-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0,
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>>TFC 1	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0,
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1 >>>>>>TFC 2	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0, TF0)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dl-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1 >>>>>>TFC 2 >>>>>>ctfc	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0, TF0) 1
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1 >>>>>>TFC 2	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0) TF0) 0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0,
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>TFC 1 >>>>>>TFC 2 >>>>>>TFC 3	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1 >>>>>>TFC 2 >>>>>>TFC 3 >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	Independent Independent FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 7
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>TFC 1 >>>>>>TFC 2 >>>>>>TFC 3	Independent Independent FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 7 (TF3, TF2, TF0,
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>TFC 1 >>>>>>TFC 2 >>>>>>TFC 3 >>>>>TFC 3	TFC9, TFC10) Independent 1 FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0) 7 (TF3, TF2, TF0, TF0)
>tfcs-SignallingMode ul-CommonTransChInfo >tfcs-ID (TDD only) >sharedChannelIndicator (TDD only) > tfc-Subset >dI-TFCS >>explicitTFCS- ConfigurationMode >>>ctfcSize >>>>TFCS representation >>>>TFCS list >>>>>>TFC 1 >>>>>>TFC 2 >>>>>>TFC 3 >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	Independent Independent FALSE Absent, not required Normal TFCI signalling Complete Ctfc8Bit Addition (TF0, TF0, TF0, TF0, TF0) 0 (TF1, TF0, TF0, TF0) 1 (TF2, TF1, TF0, TF0, TF0) 7 (TF3, TF2, TF0,

>>>>TFC 5	(TF4, TF3, TF0,
	TF0)
>>>>>ctfc	19
>>>>TFC 6	(TF0, TF0, TF0,
	TF1)
>>>>>ctfc	20
>>>>TFC 7	(TF1, TF0, TF0,
	TF1)
>>>>>ctfc	21
>>>>TFC 8	(TF2, TF1, TF0,
	TF1)
>>>>>ctfc	27
>>>>TFC 9	(TF3, TF2, TF0,
	TF1)
>>>>>ctfc	33
>>>>TFC 10	(TF4, TF3, TF0,
	TF1)
>>>>>ctfc	39
>>>>TFC 11	(TF0, TF0, TF0,
	TF0)
>>>>>ctfc	40
>>>>TFC 12	(TF1, TF0, TF0,
	TF0)
>>>>>ctfc	41
>>>>TFC 13	(TF2, TF1, TF0,
	TF0)
>>>>>ctfc	47
>>>>TFC 14	(TF3, TF2, TF0,
	TF0)
>>>>>ctfc	53
>>>>TFC 15	(TF4, TF3, TF0,
	TF0)
>>>>>ctfc	59
>>>>TFC 16	(TF0, TF0, TF0,
	TF1)
>>>>>ctfc	60
>>>>TFC 17	(TF1, TF0, TF0,
	TF1)
>>>>>ctfc	61
>>>>TFC 18	(TF2, TF1, TF0,
	TF1)
>>>>>ctfc	67
>>>>TFC 19	(TF3, TF2, TF0,
	TF1)
>>>>>ctfc	73
>>>>TFC 20	(TF4, TF3, TF0,
	TF1)
>>>>>ctfc	79
PhyCH INFORMATION	
FDD	
UL-DPCH-InfoPredef	
>ul-DPCH-	
PowerControlInfo	
>>powerControlAlgorithm	Algorithm 1
>>>tpcStepSize	1 dB
>tfci-Existence	TRUE
>puncturingLimit	0.84
DL-	-
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>spreadingFactor	128
>>tfci-Existence	FALSE
>>pilotBits	4
>>positionFixed	Fixed
- > poottorn ixou	

Configuration	Signalling on E-DCH on UL depending based on minimum E- DCH UE category + Signalling on HS- DSCH based minimum HS-DSCH UE category
Ref 34.108	FFS
Default configuration identity	17
RB INFORMATION	
rb-Identity	RB1: 1, RB2: 2, RB3: 3
rlc-InfoChoice	RIc-info
>ul-RLC-Mode	RB1: UM
	RB2- RB3: AM
>>transmissionRLC-	RB1: N/A
DiscardMode	RB2- RB3: NoDiscard
>>>maxDat	RB1: N/A RB2- RB3: 25
>>transmissionWindowSiz	RB1: N/A
e	RB2- RB3: 128
>>timerRST	RB1: N/A
	RB2- RB3: 200
>>max-RST	RB1: N/A
	RB2- RB3: 1
>>pollingInfo	RB1: N/A
Family	RB2- RB3: as below
>>>TimerPoll	RB2- RB3: 100
>>>PolIPDU	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1
>>>lastTransmissionPDU-	RB2- RB3: FALSE
Poll	ND2- ND3. FALSE
>>>lastRetransmissionPD U-Poll	RB2- RB3: FALSE
>>>PollWindow	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A
>dl-RLC-Mode	RB1: UM RB2- RB3: AM
>>DL RLC PDU size	RB1-RB3: 144
>>inSequenceDelivery	RB1: N/A
	RB2- RB3: TRUE
>>receivingWindowSize	RB1: N/A RB2- RB3: 128
>>dl-RLC-StatusInfo	RB1: N/A
	RB2- RB3: as below
>>>timerStatusProhibit	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: TRUE
>>segmentationIndication	RB1- RB3: N/A
>>dl-UM-RLC-LI-size	7
Rb-MappingInfo	
>UL-	OneLogicalChannel
LogicalChannelMappings	
>>UplinkTransport	
ChannelTypeChoice	
>>ul-	E-DCH
TransportChannelType	
>>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3: 3
>>>E-DCH MAC-d flow identity	RB1-RB3:0
>>>DDI	PR1: 1 PR2: 2 PR2: 2
	RB1: 1, RB2: 2, RB3: 3
>>>>RLC PDU size	144
>>mac- LogicalChannelPriority	RB1: 1, RB2: 2, RB3: 3
>DL- logicalChannelMappings	OneLogicalChannel
>>Mapping option 1	One mapping option

>>>dl- TransportChannelType >>>Mac-d flow identity >>>logicalChannelIdentity Pipe VIL- AddReconlTransChInfoList VIL- AddReconlTransChinfoList VIL- AddReconlTransChinfoList VIL- AddReconlTransChinfoList VIII Transport channel identity VIL- VIL- VIL- AddReconlTransChinfoList VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport channel identity VIII Transport Channel identity VIII Transp	Configuration	Signalling on E-DCH on UL depending based on minimum E-
>>>dl- TransportChannelType >>>Mac-d flow identity >>>bogicalChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >>LU- Fransport channel identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ info for E-DCH >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow for extransmissions >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow maximum number of retransmission grant typeChoice >>> Non-scheduled transmission grant info >>>> Non-scheduled transmission grant info >>>> MAW MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >>> MAC-hs queue to add or reconfigured ist >>>> MAC-hs queue to add or reconfigure ist >>>> MAC-d PDU size index TrCH INFORMATION, Null		
>>>>Mac-d flow identity >>>logicalChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type SUL Transport channel identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> E-DCH MAC-d flow cidentity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset		
>>>logicalChannelIdentity TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >UL Transport channel identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ info for E-DCH >>> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow maximum number of retransmission grant typeChoice >>>> Non-scheduled transmission grant typeChoice >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>HARQ Info >>> Number of Processes 6 >>>Memory PartitioningChoice >>>> Information >>>> Mac-d flow identity 0 >>>> MAC-d flow size 10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		PR1_ PR3: 0
TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >UL Transport channel identity >UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice DL- AddReconfTransChInfoList AddReconfTransChinfoList Downlink transport channel type >DL-ParametersChoice >>>Number of Processes >>> Memory PartitioningChoice >>>> Mac-hs queue to add or reconfigure list >>>> MAC-hs queue ld >>>> MAC-d PDU size index TrCH INFORMATION, Null		
TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >UL Transport channel identity >UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ info for E-DCH >>> HARQ or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>> DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>> Number of Processes 6 >>> Memory PartitioningChoice >>>> Implicit >>> MAC-hs queue to add or reconfigurel list >>>> MAC-hs queue to add or reconfigure list >>>> MAC-hs queue to add or reconfigure list >>>> MAC-d FDU size info >>>> MAC-d PDU size info >>>> MAC-d PDU size info >>>> MAC-d PDU size info >>>> MAC-d PDU size info Index TrCH INFORMATION, Null		1,1,1,02. 2,100. 0
UL- AddReconfTransChInfoList >Uplink transport channel type >UL Transport channel identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow dentity >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> Transmission grant typeChoice >>>> Mon-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >>Downlink transport channel type >DL-ParametersChoice >>>HARQ info >>>>Implicit >>> Memory PartitioningChoice >>>> Implicit >>> MAC-h squeue to add or reconfigured MAC-d Flow dor reconfigured MAC-d flow >>>> MAC-h squeue to add or reconfigure list >>>> MAC-h squeue ld >>>> MAC-d FDU size info >>>> MAC-d PDU size info endex TrCH INFORMATION, Null		
>Uplink transport channel type >UL Transport channel identity > UL Parameters Choice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow dentity >>> E-DCH MAC-d flow dentity >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant type Choice >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>> Max Mac-e PDU contents of Processes >>> Memory Partitioning Choice >>>> Max Mac-e PDU contents of Processes >>> Max Mac-e PDU contents size DL- AddReconfTransChinfoList >Downlink transport channel type >DL-ParametersChoice >>>Implicit >>>> Max Mac-e PDU contents of Processes >>> Memory Partitioning Choice >>>> Max Max Max Dentify Partitioning Choice >>>> Max Max Dentify Partitioning Choice >>>> Max Max Dentify Partitioning Choice >>>> Max Max Dentify Partitioning Choice >>>> Max Max Dentify Partitioning Choice >>>> Max Max Dentify Partitioning Choice >>>> Max Dentify Partitioning Choice Partitioning Choice Partitioning Choice Partitioning Choice Partitioning Choice Partitioning Choice Partitioning Choice Partitioning Choice	UL-	
type >UL Transport channel identity >UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>Number of Processes >>>Memory PartitioningChoice >>>> MaC-hs queue to add or reconfigure list >>>> MAC-hs queue to d >>>> MAC-hs vindow size 12 >>>> MAC-d PDU size index TrCH INFORMATION, Null		
SUL Transport channel identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmission grant typeChoice >>>> Max MAC-e PDU contents size DL-AddReconfTransChInfoList >Downlink transport channel type >>> L-ParametersChoice >>> Max MaC-e PDU contents of transmission grant info >>> Max MaC-e PDU contents of transmission grant info >>> Max MAC-e PDU contents of transmission grant info >>> Max MAC-e PDU contents of transmission grant info >>> Max MAC-e PDU contents of transmission grant info >>> Max MAC-e PDU contents of transport channel type >DL-ParametersChoice >>> Max Mac-e PDU contents of transport channel type >>> Non-scheduled transmission grant info >>> Max MAC-e PDU contents of transport channel type >DL-ParametersChoice >>>Implicit >>> Max Mac-e PDU contents of transport channel type >DL-ParametersChoice >>> Max Mac-e PDU contents of transport channel type >DL-ParametersChoice >>> Max Mac-e PDU contents of transport channel type >DL-ParametersChoice >>> Max Mac-e PDU contents of transport channel type >DL-ParametersChoice >>> Max Max Max Max Max Max Max Max Max Max	· ·	E-DCH
identity > UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow jower offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Shaw MAC-ePDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>Number of Processes >>> Memory PartitioningChoice >>>> MAC-hs queue to add or reconfigure list >>>> MAC-hs queue to >>>> MAC-hs queue to >>>> MAC-hs window size 12 >>>>MAC-d PDU size index TrCH INFORMATION, Null		
> UL-ParametersChoice >> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> kransmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>HARQ Info >>>>Implicit >>>>Memory PartitioningChoice >>>>Implicit >>>>MAC-hs queue to add or reconfigure list >>>>MAC-hs queue to >>>>MAC-hs queue to >>>>MAC-hs vindow size 12 >>>>MAC-d PDU size index TrCH INFORMATION, Null		
>> E-DCH Transmission Time Interval >> HARQ info for E-DCH >>> Added or reconfigured E-DCH MAC-d flow >> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >>LParametersChoice >>>IMARQ Info >>> Marmory PartitioningChoice >>>> Marmory PartitioningChoice >>>> MAC-hs queue to add or reconfigure list >>>> MAC-hs queue to add or reconfigure list >>>> MAC-hs vindow size 12 >>>> MAC-d PDU size index TrCH INFORMATION, Null		
Time Interval >> HARQ info for E-DCH >>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> MAX MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes >>>Memory PartitioningChoice >>>>Implicit >>> MAC-hs queue to add or reconfigured list >>>>MAC-hs queue ld >>>>MAC-hs queue ld >>>>MAC-hs vindow size 12 >>>>MAC-d PDU size index TrCH INFORMATION, Null		10
>>> HARQ RV Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow jower offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>Number of Processes >>>Implicit >>> MAC-hs queue to add or reconfigure list >>>> MAC-hs queue ld >>>> MAC-hs vindow size 12 >>>> MAC-d PDU size index TrCH INFORMATION, Null		
Configuration >> Added or reconfigured E-DCH MAC-d flow identity >>> E-DCH MAC-d flow jower offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>>Implicit >>>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue ld >>>>MAC-hs queue ld >>>>MAC-hs queue ld >>>>MAC-hs window size 12 >>>>MAC-d PDU size index TrCH INFORMATION, Null		
>> Added or reconfigured E-DCH MAC-d flow >>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> MAC-d flow contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>>HARQ Info >>> Nemory PartitioningChoice >>> Implicit >>> MAC-hs queue to add or reconfigured list >>>> MAC-d Flow Identity >>>> MAC-d Flow Identity >>>> MAC-d PDU size info index TrCH INFORMATION, Null		Rvtable
E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU typeChoice >>>> Max MAC-e PDU typeChoice >>>> Max MAC-e PDU typeChoice DL-AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue to add or reconfigure list >>>>MAC-d Flow Identity >>>>MAC-d PDU size info >>>>MAC-d PDU size info >>>>MAC-d PDU size info idex TrCH INFORMATION, Null		
>>> E-DCH MAC-d flow identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL-AddReconfTransChInfoList >>Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>> Max MAC-e PDU contents size DL-AddReconfTransChinfoList >>Durentity size DL-AddReconfTransChinfoList >>Durentity size >>>L-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>> Memory PartitioningChoice >>>>Implicit >>>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-hs queue Id 0 >>>>MAC-hs queue Id 0 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size info		One MAC-d flow
identity >>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> MAC-d Flow Identity >>> MAC-d Flow Identity >>> MAC-d FDU size info >>>> MAC-d PDU size index		
>>> E-DCH MAC-d flow power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL-AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes >>>Memory PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id >>>>MAC-hs vindow size >>>>MAC-hs window size >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size info >>>>MAC-d PDU size info transport of Pous size index TrCH INFORMATION, Null		0
power offset >>> E-DCH MAC-d flow maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes >>>Memory PartitioningChoice >>>>Implicit >>> MAC-hs queue to add or reconfigured MAC-d flow >>> MAC-hs queue Id >>>>MC-hs queue Id Id-MC-hs queue Id Id-M		4
maximum number of retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU tontents size DL-AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>> Implicit >>Added or reconfigured MAC-d flow MAC-d squeue to add or reconfigure list >>>> MAC-hs queue td >>>> MAC-d Flow Identity >>>> MAC-d PDU size info >>>> MAC-d PDU size index TrCH INFORMATION, Null		
retransmissions >>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL-AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>> Number of Processes >>> Memory PartitioningChoice >>>> Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>> MAC-hs vindow size >>> MAC-b vindow size >>> MAC-d PDU size info >>>> MAC-d PDU size index TrCH INFORMATION, Null	>>> E-DCH MAC-d flow	5
>>> E-DCH MAC-d flow multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>> Number of Processes 6 >>> Memory PartitioningChoice >>>> Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>> MAC-hs vindow size >>> MAC-hs window size >>> MAC-d PDU size index TrCH INFORMATION, Null		
multiplexing list >>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes >>>Memory PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs window size >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>>MAC-d PDU size index TrCH INFORMATION, Null		_
>>> transmission grant typeChoice >>>> Non-scheduled transmission grant info >>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs window size 12 >>>> MAC-d PDU size info >>>> MAC-d PDU size index TrCH INFORMATION, Null		0
typeChoice >>>> Non-scheduled transmission grant info >>>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>> MAC-hs queue Id >>>> MAC-hs window size >>>> MAC-d PDU size info >>>> MAC-d PDU size index TrCH INFORMATION, Null		
>>>> Non-scheduled transmission grant info >>>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id >>>>MAC-hs window size >>>>MAC-hs window size >>>>MAC-d PDU size info >>>>>MAC-d PDU size index TrCH INFORMATION, Null		
>>>>> Max MAC-e PDU contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id >>>>MAC-hs queue Id >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		Non-scheduled
contents size DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>Memory PartitioningChoice >>>Implicit >Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>MAC-d Flow Identity >>> MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null	transmission grant info	
DL- AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>>MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>MAC-d Flow Identity >>>MAC-hs window size 12 >>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null	>>>> Max MAC-e PDU	144
AddReconfTransChInfoList >Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>>MAC-hs queue to add or reconfigure list >>>MAC-d Flow Identity 0 >>>MAC-hs window size 12 >>>MAC-d PDU size info >>>MAC-d PDU size index TrCH INFORMATION, Null		
>Downlink transport channel type >DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>>MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>MAC-d Flow Identity >>>MAC-hs window size 12 >>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		
channel type >DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>MAC-d Flow Identity >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		HS DSCH
>DL-ParametersChoice >>HARQ Info >>Number of Processes 6 >>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id 0 >>>MAC-d Flow Identity 0 >>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		113-03011
>>HARQ Info >>>Number of Processes 6 >>>Memory PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		
>>>Memory PartitioningChoice >>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>>MAC-hs queue Id >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		
PartitioningChoice >>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue ld >>>>MAC-hs queue ld >>>>MAC-d Flow Identity 100 >>>>T1 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		6
>>>>Implicit >>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		
>>Added or reconfigured MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>MAC-hs queue Id >>>>MAC-hs queue Id 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size index TrCH INFORMATION, Null		
MAC-d flow >>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		
>>> MAC-hs queue to add or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		
or reconfigure list >>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		
>>>>MAC-hs queue Id 0 >>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		
>>>>MAC-d Flow Identity 0 >>>>T1 100 >>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		0
>>>>MAC-hs window size 12 >>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		0
>>>>MAC-d PDU size info >>>>MAC-d PDU size 148 >>>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		100
>>>>MAC-d PDU size 148 >>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		12
>>>>MAC-d PDU size 0 index TrCH INFORMATION, Null		110
index TrCH INFORMATION, Null		
TrCH INFORMATION, Null		U
		Null

Configuration	12.2 kbps speech	12.2/7.95/5.9/4.75 kbps speech +
	13.6 kbps signalling	13.6 kbps signalling
Ref 25.993		
Default configuration	18	19
identity		
RB INFORMATION	DD4 4 DD0 0	DD4 4 DD0 0
rb-Identity	RB1: 1, RB2: 2, RB3: 3, RB5: 5,	RB1: 1, RB2: 2, RB3: 3, RB5: 5,
	RB6: 6, RB7: 7	RB6: 6, RB7: 7
rlc-InfoChoice	RIc-info	RIc-info
>ul-RLC-Mode	RB1: UM	RB1: UM
	RB2- RB3: AM RB5-RB7: TM	RB2- RB3: AM RB5-RB7: TM
>>transmissionRLC-	RB1: N/A	RB1: N/A
DiscardMode	RB2- RB3:	RB2- RB3:
	NoDiscard	NoDiscard RB5- RB7: N/A
>>>maxDat	RB5- RB7: N/A RB1: N/A	RB1: N/A
Transaction and an arrangement of the second	RB2- RB3: 15	RB2- RB3: 15
	RB5- RB7: N/A	RB5- RB7: N/A
>>transmissionWindowSiz	RB1: N/A RB2- RB3: 32	RB1: N/A RB2- RB3: 32
е	RB5- RB7: N/A	RB5- RB7: N/A
>>timerRST	RB1: N/A	RB1: N/A
	RB2- RB3: 200	RB2- RB3: 200
>>max-RST	RB5- RB7: N/A RB1: N/A	RB5- RB7: N/A RB1: N/A
>>IIIax-RS1	RB2- RB3: 1	RB2- RB3: 1
	RB5- RB7: N/A	RB5- RB7: N/A
>>pollingInfo	RB1: N/A	RB1: N/A
	RB2- RB3: as below RB5- RB7: N/A	RB2- RB3: as below RB5- RB7: N/A
>>>TimerPoll	RB2- RB3: 100	RB2- RB3: 100
>>>PolIPDU	RB2- RB3: n/a	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1	RB2- RB3: 1
>>>lastTransmissionPDU-	RB2- RB3: FALSE	RB2- RB3: FALSE
Poll >>>lastRetransmissionPD	RB2- RB3: TRUE	RB2- RB3: TRUE
U-Poll	ND2 ND0. TNOL	ND2 ND0. TNOL
>>>PollWindow	RB2- RB3: 99	RB2- RB3: 99
>>>timerPollPeriodic	RB2- RB3: n/a	RB2- RB3: n/a
>>segmentationIndication	RB1- RB3: N/A RB5- RB7: FALSE	RB1- RB3: N/A RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM	RB1: UM
1.5.2.2	RB2- RB3: AM	RB2- RB3: AM
. 0 5 "	RB5- RB7: TM	RB5- RB7: TM
>>inSequenceDelivery	RB1: N/A RB2- RB3: TRUE	RB1: N/A RB2- RB3: TRUE
	RB5- RB7: N/A	RB5- RB7: N/A
>>receivingWindowSize	RB1: N/A	RB1: N/A
	RB2- RB3: 32	RB2- RB3: 32
>>dl-RLC-StatusInfo	RB5- RB7: N/A RB1: N/A	RB5- RB7: N/A RB1: N/A
- arries statustino	RB2- RB3: as below	RB2- RB3: as below
	RB5- RB7: N/A	RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100	RB2- RB3: 100
>>>missingPDU-Indicator >>>timerStatusPeriodic	RB2- RB3: TRUE RB2- RB3: n/a	RB2- RB3: TRUE RB2- RB3: n/a
	1	

13.6 kbps signalling sign	Configuration	12.2 kbps speech	12.2/7.95/5.9/4.75
Signalling Signalling Signalling		+ 13 6 khns	kbps speech +
RB5- RB7: FALSE RB5- RB7: FALSE			
Draw	>>segmentationIndication		
Doch	rb-MappingInfo		
Dch		OneLogicalChannel	OneLogicalChannel
>>>transportChannelIdentity		Dch	Dch
Section Sect			
New York New York	•		
RB3: 3 RB5- RB7: N/A RB5- RB7: N/A RB1- RB3: configured RB1- RB3: configured RB5- RB7: N/A RB5- RB7: S RB5- RB7: N/A RB5- RB7:	У		
>>rlc-SizeList	>>logicalChannelIdentity		
>>rlc-SizeList RB1- RB3: configured RB5- RB7: N/A >>mac- LogicalChannelPriority AB5: RB7: BB3: 3 RB5- RB7: 5 >DL- logicalChannelMappingList >>Mapping option 1 >>>dl- TransportChannelType >>>stransportChannelIden tity Part In In In In In In In In In In In In In			
configured RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: S RB5- RB7: N/A RB5- RB7- RB7- RB5- RB7- RB5- RB7- RB7- RB5- RB7- RB7- RB5- RB7- RB7- RB5- RB7- RB7- RB7- RB5- RB7- RB7- RB7- RB7- RB5- RB7- RB7- RB7- RB7- RB5- RB7- RB7- RB7- RB7- RB7- RB7- RB7- RB7	>>rlc_Sizol ist		
RB5-RB7: N/A RB5-RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB3: 3 RB5-RB7: 5 RB5-RB7: 6 RB1-RB3: 9 RB1-RB3: 9 RB1-RB3: 9 RB5-RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB3: 3 RB5-RB7: N/A	>>IIC-SizeList	-	-
>>mac- LogicalChannelPriority			
RB5-RB7: 5 RB5-RB7: 5		RB1: 1, RB2: 2,	RB1: 1, RB2: 2,
>DL- logicalChannelMapping option 1 One mapping option Dch One mapping option Dch >>>Ald- TransportChannelType RB1- RB3: 9 RB5: 1, RB6: 2, RB5: 1, RB6: 2, RB7: 3 RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, TRCH2: 2, TRCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH3: 3, TrCH4: 9 DedicatedTransChT FS >>dynamicTF-information TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) TrCH1: (0x 81) TrCH3: (0x 60) TrCH4: (0x144) TrCH1: (0x144) TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1 = 2, part2 = 0 (144) TrCH1: type 1: 81 TrCH2: 2; part1 = 2, part2 = 0 (144) TrCH1-4: Zero TrCH4: Zero, one, 2, 3, 4 TrCH1-4: Zero TrCH1-4: Zero	LogicalChannelPriority		
Symbolic Symbolic	. DI	RB5- RB7: 5	RB5- RB7: 5
>>Mapping option 1 One mapping option One mapping option >>>dl- TransportChannelType Dch Dch >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS DedicatedTransChT FS >>dynamicTF-information TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, TrCH4: (0x144, 1x44, 2x144, 3x144, 4x144) TrCH1: (0x 81) TrCH2: (0x 103) TrCH3: (0x 60) TrCH4: (0x144) >>>>rlcSize BitMode BitMode >>>>rlcSize BitMode BitMode >>>>rlcH: type 1: 103 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-4: Zero TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-4: Zero >>>>numberOfTbSizeList TrCH1: Zero TrCH2: Zero, One TrCH4: Zero, one, 2, 3, 4 TrCH1-4: Zero			
>>>Id- TransportChannelType >>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB5: 1, RB6: 2, RB7: 3 RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tfO/ tf0,1 TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode TrCH1: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero TrCH1- 4: Zero		One mapping option	One mapping option
>>>transportChannelIden tity RB1- RB3: 9 RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB7: 3 RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet >>dicatedTransCh1 TrCH: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize >>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero, One TrCH1-4: Zero TrCH1-4: Zero, One TrCH2: Zero TrCH1-4: Zero, One TrCH2: Zero TrCH1-4: Zero, One TrCH1-4: Zero			
tity RB5: 1, RB6: 2, RB7: 3 >>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5: RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH1: Zero TrCH4: Zero One TrCH4: Zero, one 2, 3, 4 TrCH1: Zero TrCH1-4: Zero TrC			
RB7: 3	· ·		
>>>logicalChannelIdentity RB1: 1, RB2: 2, RB3: 3 RB5- RB7: N/A RB5- RB7: N/A RB5- RB7: N/A TrCH INFORMATION PER TrCH UL- AddReconfTransChInfoList >Uplink transport channel type >transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS >>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode BitMode >>>>sizeType TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2; type 2, part1 = 2, part2 = 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH1: Zero TrCH2: Zero One TrCH4: Zero, one, 2, 3, 4	tity		
RB3: 3 RB5- RB7: N/A RB5- RB7: N/A	>>>logicalChannelIdentity		
TrCH INFORMATION PER TrCH	// / / / / / / / / / / / / / / / / / /		
TrCH		RB5- RB7: N/A	RB5- RB7: N/A
AddReconfTransChInfoList Suplink transport channel type StransportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 StransportFormatSet DedicatedTransChT FS DedicatedTransChT FS DedicatedTransChT FS StransportFormation Systf0/ tf0,1 TrCH1: (0x81)	TrCH		
type Image: color of the color			
>transportChannelIdentity TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9 TrCH3: 3, TrCH4: 9 TrCH3: 3, TrCH4: 9 >transportFormatSet DedicatedTransChT FS DedicatedTransChT FS >>dynamicTF-information TrCH1: (0x81) TrCH1: (0x 81) >>>tf0/ tf0,1 TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) TrCH1: type 1: 81 >>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH4: Zero, one, 2, 3, 4 TrCH1-4: Zero	I	dch	dch
>transportFormatSet DedicatedTransChT FS DedicatedTransChT FS >>dynamicTF-information TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 2x144, 3x144, 4x144) TrCH4: (0x144) TrCH2: type 1: 81 TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH4: Zero, one, 2, 3, 4 TrCH1-4: Zero	>transportChannelIdentity		
>>dynamicTF-information >>>tf0/tf0,1 TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH3: (0x 60, 1x44, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH2: Zero, one, 2, 3, 4 TrCH1: (0x 103) TrCH2: (0x 103) TrCH3: (0x 60) TrCH4: (0x144, 1x144, 2x144, 3x144, 3x144, 2x144, 3x144, 3x144, 2x144, 3x144, 3x	>transportFormatSet	DedicatedTransChT	DedicatedTransChT
>>>tf0/ tf0,1 TrCH1: (0x81) TrCH2: (0x 103, 1x103) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: (0x81) TrCH2: (0x 103) TrCH4: (0x144) TrCH4: (0x144) TrCH1: type 1: 81 TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4	>> dynamicTE information	F5	F5
TrCH2: (0x 103, 1x103) TrCH3: (0x 60) TrCH3: (0x 60, 1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH4: Zero, one, 2, 3, 4 TrCH2: (0x 103) TrCH3: (0x 60) TrCH4: (0x144) TrCH4: (0x144) TrCH4: (1x144) TrCH4: (1x144) TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH4: Zero, one, 2, 3, 4		TrCH1: (0x81)	TrCH1: (0x 81)
1x103) TrCH3: (0x 60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH2: Zero, one, 2, 3, 4 TrCH3: (0x 60) TrCH4: (0x144) TrCH4: (0x144) TrCH1: type 1: 81 TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH4: Zero, one, 2, 3, 4			
1x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH2: Zero, One TrCH4: Zero, one, 2, 3, 4 BitMode TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH4: Zero, one, 2, 3, 4		1x103)	TrCH3: (0x 60)
TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144) >>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>numberOfTbSizeList TrCH4: Zero, one, 2, 3, 4 BitMode TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH2: type 2, part1= 2, part2= 0 (144) TrCH4: Zero, one, 2, 3, 4			TrCH4: (0x144)
1x144, 2x144, 3x144, 4x144)			
3x144, 4x144)			
>>>>rlcSize BitMode BitMode >>>>sizeType TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH2: zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4 SitMode BitMode TrCH1: type 1: 81 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH2: type 2, part1= 2, part2= 0 (144) TrCH4: Zero TrCH4: Zero, one, 2, 3, 4			
TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH2: type 1: 103 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4 TrCH2: type 1: 103 TrCH2: type 1: 103 TrCH3: type 1: 103 TrCH3: type 1: 103 TrCH3: type 1: 103 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1-4: Zero		BitMode	
TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>numberOfTbSizeList TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4 TrCH3: type 1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH1-4: Zero	>>>>sizeType		
TrCH4: 2: type 2, part1= 2, part2= 0 (144) >>>numberOfTbSizeList TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4 TrCH4: 2: type 2, part1= 2, part2= 0 (144) TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4			
part1= 2, part2= 0 (144) part1= 2, part2= 0 (144) >>>>numberOfTbSizeList TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4 part1= 2, part2= 0 (144) TrCH1-4: Zero			
>>>numberOfTbSizeList TrCH1: Zero TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4			
TrCH2-3: Zero, One TrCH4: Zero, one, 2, 3, 4		(144)	
TrCH4: Zero, one, 2, 3, 4	>>>>numberOfTbSizeList		TrCH1-4: Zero
2, 3, 4			
	>>>logicalChannelList		All

Configuration	12.2 kbps speech	12.2/7.95/5.9/4.75
	+	kbps speech +
	13.6 kbps	13.6 kbps
	signalling	signalling
>>>tf 1	TrCH1: (1x39)	TrCH1: (1x39)
	TrCH2- TrCH4: N/A	TrCH2: (1x53)
		TrCH3: (1x60)
		TrCH4: (1x144,
		2x144, 3x144,
		4x144)
>>>>numberOfTransportBl	TrCH1: One	TrCH1-3: One
ocks	T-OLIA DIMAI-	TrCH4: One, 2, 3, 4
>>>rlc-Size	TrCH1: BitMode	TrCH1: BitMode
>>>>sizeType	TrCH1: 1: 39	TrCH1: 1: 39 TrCH2: 1: 53
		TrCH2: 1: 60
		TrCH3: 1: 60 TrCH4: 2: type 2,
		part1= 2, part2= 0
		(144)
>>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
>>>logicalChannelList	TrCH1: all	TrCH1: all
>>>tf 2	TrCH1: (1x81)	TrCH1: (1x42)
	TrCH2- TrCH4: N/A	TrCH2: (1x63)
		TrCH3- TrCH4: N/A
>>>numberOfTransportBl	TrCH1: One	TrCH1-2: One
ocks	T 0114 B::14	T 0114 D:14
>>>rlc-Size	TrCH1: BitMode	TrCH1: BitMode
>>>>sizeType	TrCH1: type 1: 81	TrCH1: type 1: 42
>>>>numberOfTbSizeList	TrCH1: One	TrCH2: type 1: 63 TrCH1: One
>>>logicalChannelList	TrCH1: all	TrCH1: all
>>>tf 3	TICITI. all	TrCH1: (1x55)
>>>u 3		TrCH2: (1x84)
		TrCH3- TrCH4: N/A
>>>>numberOfTransportBl		TrCH1-2: One
ocks		
>>>rlc-Size		TrCH1: BitMode
>>>>sizeType		TrCH1: type 1: 55
>>>>numberOfTbSizeList		TrCH2: type 1: 84 TrCH1-2: One
>>>logicalChannelList		TrCH1: all
>>>tf 4		TrCH1: (1x75)
>>>u 4		TrCH2: (1x103)
		TrCH3- TrCH4: N/A
>>>>numberOfTransportBl		TrCH1-2: One
ocks		
>>>rlc-Size		TrCH1: BitMode
>>>>sizeType		TrCH1: type 1: 75
		TrCH2: type 1: 103
>>>numberOfTbSizeList		TrCH1-2: One
>>>logicalChannelList		TrCH1: all
>>>tf 5		TrCH1: (1x81) TrCH2- TrCH4: N/A
>>>>numberOfTransportBl		TrCH2- TrCH4: N/A
ocks		TIOTTI. OILE
>>>rlc-Size		TrCH1: BitMode
>>>>sizeType		TrCH1: type 1: 81
>>>>numberOfTbSizeList		TrCH1: One
>>>>logicalChannelList		TrCH1: all
>>semistaticTF-Information		
>>>tti	TrCH1- TrCH3: 20	TrCH1- TrCH3: 20
	TrCH4: 40	TrCH4: 40
>>>channelCodingType	Convolutional	Convolutional

Configuration	12.2 kbps speech + 13.6 kbps signalling	12.2/7.95/5.9/4.75 kbps speech + 13.6 kbps signalling
>>>>codingRate	TrCH1- TrCH2: Third TrCH3: Half	TrCH1- TrCH2: Third TrCH3: Half
>>>rateMatchingAttribute	TrCH4: Third TrCH1: 200 TrCH2: 190 TrCH3: 235	TrCH4: Third TrCH1: 200 TrCH2: 190 TrCH3: 235
>>>crc-Size	TrCH4: 160 TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16	TrCH4: 160 TrCH1: 12 TrCH2- TrCH3: 0 TrCH4: 16
DL- AddReconfTransChInfoList >Downlink transport	dch	110114. 10
channel type >dl- TransportChannelIdentity	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9
(should be as for UL) >tfs-SignallingMode	Explicit <only and="" below="" different="" is="" on="" shown="" tf0="" trch1=""></only>	Explicit <only and="" below="" different="" is="" on="" shown="" tf0="" trch1=""></only>
>>transportFormatSet	DedicatedTransChT FS	DedicatedTransChT FS
>>>dynamicTF-information		
>>>tf0/ tf0,1	TrCH1: (1x0)	TrCH1: (1x0)
>>>rlcSize	bitMode	bitMode
>>>>sizeType	TrCH1: type 1: 0	TrCH1: type 1: 0
>>>numberOfTbSizeList	TrCH1: One	TrCH1: One
>>>logicalChannelList >>ULTrCH-ld	All TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9	All TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9
>dch-QualityTarget >>bler-QualityValue	TrCH1: 7x10 ⁻³ TrCH2- TrCH4: Absent	TrCH1: 7x10 ⁻³ TrCH2- TrCH4: Absent
TrCH INFORMATION, COMMON	7.000.11	7.200.11
ul-CommonTransChInfo		
>tfcs-ID (TDD only) >sharedChannelIndicator (TDD only)	FALSE	FALSE
>tfc-Subset >ul-TFCS	Absent, not required Normal TFCI	Absent, not required Normal TFCI
>>explicitTFCS- ConfigurationMode	signalling Complete	signalling Complete
>>>ctfcSize >>>TFCS representation	Ctfc6Bit Addition	Ctfc8Bit Addition
>>>>TFCS list >>>>>TFC 1	(TF0, TF0, TF0,	(TF0, TF0, TF0,
>>>>>	TF0) 0	TF0) 0
>>>>>ctfc >>>>>gainFactorInform ation	Computed	Computed
>>>>>referenceTFCld	0 (TF1, TF0, TF0,	0 (TF1, TF0, TF0,
>>>>>ctfc	TF0) 1	TF0) 1
>>>>>gainFactorInform ation	Computed	Computed

Configuration	12.2 kbps speech + 13.6 kbps signalling	12.2/7.95/5.9/4.75 kbps speech + 13.6 kbps signalling
>>>>>>referenceTFCId	0	0
>>>>TFC 3	(TF2, TF1, TF1, TF0)	(TF2, TF1, TF0, TF0)
>>>>>ctfc	11	8
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCld	0	0
>>>>TFC 4	(TF0, TF0, TF0, TF1)	(TF3, TF2, TF0, TF0)
>>>>>ctfc	12	15
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCld	0	0
>>>>TFC 5	(TF1, TF0, TF0, TF1)	(TF4, TF3, TF0, TF0)
>>>>>ctfc	13	22
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCld	0	0
>>>>TFC 6	(TF2, TF1, TF1, TF1)	(TF5, TF4, TF1, TF0)
>>>>>ctfc	23	59
>>>>>gainFactorInform ation	Signalled	Computed
>>>>>βc (FDD only)	10	N/A
>>>>>βd	15	N/A
>>>>>referenceTFCId	0	0
>>>>TFC 7	(TF0, TF0, TF0, TF2)	(TF0,TF0,TF0,TF1)
>>>>>ctfc	24	60
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCld	0	0
>>>>TFC 8	(TF1, TF0, TF0, TF2)	(TF1,TF0,TF0,TF1)
>>>>>ctfc	25	61
>>>>> gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCId	0	0
>>>>TFC 9	(TF0, TF0, TF0, TF3)	(TF2,TF1,TF0,TF1)
>>>>>ctfc	36	68
>>>>>gainFactorInform ation	Computed	Computed
>>>>>referenceTFCId	0	0
>>>>TFC 10	(TF1, TF0, TF0, TF3)	(TF3,TF2,TF0,TF1)
>>>>>ctfc	37	75
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCId	0	0
>>>>TFC 11	(TF0, TF0, TF0, TF4)	(TF4,TF3,TF0,TF1)
>>>>>ctfc	48	82
>>>>>gainFactorInform ation	Computed	Computed
>>>>>>referenceTFCId	0	0
>>>>TFC 12		(TF5,TF4,TF1,TF1)
>>>>>ctfc		119

Configuration	12.2 kbps speech + 13.6 kbps signalling	12.2/7.95/5.9/4.75 kbps speech + 13.6 kbps signalling
>>>>>gainFactorInform		Signalled
ation		40
>>>>>referenceTFCld		10 15
>>>>>ctfc		0
>>>>>gainFactorInform		(TF0,TF0,TF0,TF2)
ation		,
>>>>>βc (FDD only)		120
>>>>>βd		Computed
>>>>>>referenceTFCId		0
>>>>TFC 14		(TF1, TF0, TF0, TF2)
>>>>>ctfc		121
>>>>>gainFactorInform		Computed
>>>>>referenceTFCId		0
>>>>TFC 15		(TF0,TF0,TF0,TF3)
>>>>>ctfc		180
>>>>>gainFactorInform		Computed
ation		'
>>>>>>referenceTFCId		0
>>>>TFC 16		(TF1, TF0, TF0, TF3)
>>>>>ctfc		181
>>>>>gainFactorInform		Computed
ation		
>>>>>>referenceTFCId		0
>>>>TFC 17		(TF0,TF0,TF0,TF4)
>>>>>ctfc		240
>>>>>gainFactorInform		Computed
ation		
>>>>>>referenceTFCld		0
dl-CommonTransChInfo	0	0
>tfcs-SignallingMode	Same as UL	Same as UL
PhyCH INFORMATION		
FDD UL-DPCH-InfoPredef		
>ul-DPCH-		
PowerControlInfo		
>>powerControlAlgorithm	Algorithm 1	Algorithm 1
>>>tpcStepSize	1 dB	1 dB
>tfci-Existence	TRUE	TRUE
>puncturingLimit	0.96	0.96
DL- CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>spreadingFactor	128	128
>>tfci-Existence	TRUE	TRUE
>>pilotBits	4	4
>>positionFixed	Flexible	Flexible
poolion ixou	1.10/10/10	. IOAIDIO

Configuration	64kbps conv. CS-	12.65/8.85/6.6 kbps
	data + 13.6 kbps signalling	speech + 13.6 kbps signalling
	13.0 Kbps signaling	(without SRB#5)
Ref 25.993		
Default configuration identity	20	21
RB INFORMATION		
Rb-Identity	RB1: 1, RB2: 2, RB3:	RB1: 1, RB2: 2, RB3:
	3, RB5: 5	3, RB5: 5, RB6: 6,
		RB7: 7,
rlc-InfoChoice	RIc-info	RIc-info
>ul-RLC-Mode	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM
>>transmissionRLC-DiscardMode	RB5: TM RB1: N/A	RB5-RB7: TM RB1: N/A
>>transmissionRLC-Discardivioue	RB2- RB3: NoDiscard	RB2- RB3: NoDiscard
	RB5: N/A	RB5- RB7: N/A
>>>maxDat	RB1: N/A	RB1: N/A
>>maxbat	RB2- RB3: 25	RB2- RB3: 25
	RB5: N/A	RB5- RB7: N/A
>>transmissionWindowSize	RB1: N/A	RB1: N/A
	RB2- RB3: 32	RB2- RB3: 32
	RB5: N/A	RB5- RB7: N/A
>>timerRST	RB1: N/A	RB1: N/A
	RB2- RB3: 200	RB2- RB3: 200
	RB5: N/A	RB5- RB7: N/A
>>max-RST	RB1: N/A	RB1: N/A
	RB2- RB3: 1	RB2- RB3: 1
n a Historia fo	RB5: N/A	RB5- RB7: N/A
>>pollingInfo	RB1: N/A	RB1: N/A
	RB2- RB3: as below RB5: N/A	RB2- RB3: as below RB5- RB7: N/A
>>>TimerPoll	RB2- RB3: 100	RB2- RB3: 100
>>>PollPDU	RB2- RB3: n/a	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1	RB2- RB3: 1
>>>lastTransmissionPDU-Poll	RB2- RB3: FALSE	RB2- RB3: FALSE
>>lastRetransmissionPDU-Poll	RB2- RB3: TRUE	RB2- RB3: TRUE
>>>PollWindow	RB2- RB3: 99	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A
	RB5: FALSE	RB5- RB7: FALSE
>dl-RLC-Mode	RB1: UM	RB1: UM
	RB2- RB3: AM	RB2- RB3: AM
	RB5: TM	RB5- RB7: TM
>>inSequenceDelivery	RB1: N/A	RB1: N/A
	RB2- RB3: TRUE	RB2- RB3: TRUE
mana is sim mIAC:	RB5: N/A	RB5- RB7: N/A
>>receivingWindowSize	RB1: N/A RB2- RB3: 32	RB1: N/A
	RB2- RB3: 32	RB2- RB3: 32 RB5- RB7: N/A
>>dl-RLC-StatusInfo	RB1: N/A	RB1: N/A
-/ul-IXEO-Glatusifilio	RB2- RB3: as below	RB2- RB3: as below
	RB5: N/A	RB5- RB7: N/A
>>>timerStatusProhibit	RB2- RB3: 100	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: TRUE	RB2- RB3: TRUE
>>segmentationIndication	RB1- RB3: N/A	RB1- RB3: N/A
	RB5: FALSE	RB5- RB7: FALSE
rb-MappingInfo		
>UL-LogicalChannelMappings	OneLogicalChannel	OneLogicalChannel
>>ul-TransportChannelType	Dch	Dch
>>>transportChannelIdentity	RB1- RB3: 9	RB1- RB3: 9
	RB5: 1	RB5: 1, RB6: 2, RB7:
		3.
>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3:	RB1: 1, RB2: 2, RB3:
	3 DDE: N/A	3 DDE DD7: N/A
	RB5: N/A	RB5- RB7: N/A

>>rlc-SizeList	RB1- RB3: configured	RB1- RB3: configured RB5- RB7: N/A
>>mac-LogicalChannelPriority	RB1: 1, RB2: 2, RB3: 3	RB1: 1, RB2: 2, RB3: 3
	RB5: 5	RB5- RB7: 5
>DL-logicalChannelMappingList		
>>Mapping option 1	One mapping option	One mapping option
>>>dl-TransportChannelType >>>>transportChannelIdentity	Dch RB1- RB3: 9	Dch RB1- RB3: 9
>>>transportonalmendentity	RB5: 1	RB5: 1, RB6: 2, RB7: 3,
>>>logicalChannelIdentity	RB1: 1, RB2: 2, RB3:	RB1: 1, RB2: 2, RB3:
	3	3 DDF DD7: N/A
TrCH INFORMATION PER TrCH	RB5: N/A	RB5- RB7: N/A
UL-AddReconfTransChInfoList		
>Uplink transport channel type	dch	Dch
>transportChannelIdentity	TrCH1: 1, TrCH2: 9	TrCH1: 1, TrCH2: 2, TrCH3: 3, TrCH4: 9
>transportFormatSet	DedicatedTransChTF S	DedicatedTransChTF S
>>dynamicTF-information		
>>>tf0/ tf0,1,2,3,4	TrCH1: (0x640, 2x640) TrCH2: (0x144, 1x144, 2x144, 3x144, 4x144)	TrCH1: (0x72) TrCH2: (0x 181) TrCH3: (0x60) TrCH4: (0x144, 1x144, 2x144, 3x144, 4x144)
>>>rlcSize	TrCH1: OctetMode TrCH2:BitMode	BitMode
>>>>sizeType	TrCH1: type 2, part1= 11, part2= 2 (640) TrCH2: type 2, part1= 2, part2= 0 (144)	TrCH1: type 1: 72 TrCH2: type 2: part1= 6, part2= 5 TrCH3: type1: 60 TrCH4: 2: type 2, part1= 2, part2= 0 (144)
>>>>numberOfTbSizeList	TrCH1: Zero, 2 TrCH2: Zero, one, 2, 3, 4	TrCH1-3: Zero TrCH4: Zero, one, 2, 3, 4
>>>logicalChannelList	All	All
>>>tf 1		TrCH1: (1x40) TrCH2: (1x 78) TrCH3: N/A TrCH4: N/A
>>>>numberOfTransportBlocks		TrCH1: One TrCH2: One
>>>rlc-Size		TrCH1-2: BitMode
>>>>sizeType		TrCH1: 1: 40 TrCH2: 1: 78
>>>numberOfTbSizeList		TrCH2: 1: 78 TrCH1-2: One
>>>logicalChannelList		TrCH1: all
>>>tf 2		TrCH1: (1x54)
		TrCH2: (1x113)
		TrCH3: N/A
>>>numberOfTransportBlocks		TrCH4: N/A TrCH1: One
Inditioe Of Harisportblocks		TrCh2: One
>>>rlc-Size		TrCH1: BitMode
>>>>sizeType		TrCH1: type 1: 54
		TrCH2: type 1: 113
>>>>numberOfTbSizeList		TrCH1: One TrCH2: One
>>>>logicalChannelList		TrCH1: all TrCH2: all

		I = 0.11. (1. 0.0)
>>>tf 3		TrCH1: (1x64)
		TrCH2: (1x181)
		TrCH3: N/A
		TrCH4: N/A
>>>>numberOfTransportBlocks		TrCH1: One
•		TrCh2: One
>>>rlc-Size		TrCH1: BitMode
>>>>sizeType		TrCH1: type 1: 64
>>>>312e1ype		TrCH2: type 2:
		part1=6, part2= 5
>>>numberOfTbSizeList		TrCH1: One
>>>numberOrrbSizeList		TrCH1: One
>>>logicalChannelList		TrCH1: all
		TrCH2: all
>>>tf 4		TrCH1: (1x72)
		TrCH2: N/A
		TrCH3: N/A
		TrCH4: N/A
>>>>numberOfTransportBlocks		TrCH1: One
>>>rlc-Size		TrCH1: BitMode
>>>sizeType		TrCH1: type 1: 72
>>>>sizeType		
>>>numberOfTbSizeList		TrCH1: One
>>>>logicalChannelList		TrCH1: all
>>semistaticTF-Information		
>>>tti	TrCH1: 20	TrCH1- TrCH2: 20
	TrCH2: 40	TrCH4: 40
>>>channelCodingType	TrCH1: Turbo	Convolutional
3 77	TrCH2: Convolutional	
>>>codingRate	TrCH1: N/A	TrCH1- TrCH3: Third
		TrCH4: Third
	TrCH2: Third	TIOTI4: TIMIC
>>>rateMatchingAttribute	T 0114 470	TrCH1: 200
	TrCH1: 170	TrCH2: 190
		TrCH3: 256
	TrCH2: 160	TrCH4: 170
	110112. 100	
>>>crc-Size		TrCH1: 12
>>>CIG-SIZE	TrCH1: 16	TrCH2: 0
		TrCH3: 0
	T 0110 10	TrCH3: 0
	TrCH2: 16	11CH4. 16
DL-AddReconfTransChInfoList		
	dch	Dch
>Downlink transport channel type		DCII
>dl-TransportChannelIdentity	TrCH1: 1, TrCH2: 9	
>tfs-SignallingMode	SameAsUL	Independent
>>transportFormatSet		
>>>dynamicTF-information		
>>>tf0/ tf0,1		TrCH1: (1x0)
>>>rlcSize		BitMode
>>>sizeType		TrCH1: type 1: 0
>>>numberOfTbSizeList		TrCH1: One
>>>logicalChannelList	+	All
	-	
>>>semistaticTF-Information	T 0114 4 T 0115 5	same as UL
>>ULTrCH-Id	TrCH1: 1, TrCH2: 9	TrCH1: 1, TrCH2: 2,
		TrCH3: 3, TrCH4: 9,
>dch-QualityTarget		
>>bler-QualityValue	TrCH1: 2x10 ⁻³	TrCH1: 7x10 ⁻³
	TrCH2: Absent	TrCH2: Absent
	TIOTIZ. ADSCIIL	TrCH2: Absent
T-CLUNEODMATION COMMON		TrCH4: Absent
TrCH INFORMATION, COMMON		
ul-CommonTransChInfo		
>tfcs-ID (TDD only)	1	1
>sharedChannelIndicator (TDD	FALSE	FALSE
only)		

> tfc-Subset	Absent, not required	Absent, not required
>ul-TFCS	Normal TFCI	Normal TFCI
	signalling	signalling
>>explicitTFCS-	Complete	Complete
ConfigurationMode		
>>>ctfcSize	Ctfc2Bit	Ctfc6Bit
>>>>TFCS representation	Addition	Addition
>>>>TFC list		
>>>>TFC 1	(TF0, TF0)	(TF0, TF0, TF0, TF0)
>>>>>ctfc	0	0
>>>>>gainFactorInformation	Computed	Computed
>>>>>referenceTFCld	0	0
>>>>TFC 2	(TF1, TF0)	(TF1, TF0, TF0, TF0)
>>>>>ctfc	1	1
>>>>>gainFactorInformation	Computed	Computed
>>>>>βc (FDD only)	N/A	N/A
>>>>>βd	N/A	N/A
>>>>>referenceTFCld	0	0
>>>>TFC 3	(TF0, TF1)	(TF2, TF1, TF0, TF0)
>>>>>ctfc	2	7
>>>>>gainFactorInformation	Computed	Computed
>>>>>referenceTFCld	0	0
>>>>TFC 4	(TF1, TF1)	(TF3, TF2, TF0, TF0)
>>>>>ctfc	3	13
>>>>>gainFactorInformation	Signalled	Computed
>>>>>βc (FDD only)	8	N/A
>>>>>βd	15	N/A

referenceTECId	Ι ο	
>>>>>>referenceTFCld	0 (750, 750)	0
>>>>TFC 5	(TF0, TF2)	(TF4, TF3, TF0, TF0)
>>>>>ctfc	4	19
>>>>>gainFactorInformation	Computed	Computed
>>>>>referenceTFCId	0	0
>>>>TFC 6	(TF0, TF3)	(TF0, TF0, TF0, TF1)
		20
>>>>>ctfc	6	
>>>>>gainFactorInformation	Computed	Computed
>>>>>>referenceTFCld	0	0
>>>>TFC 7	(TF0, TF4)	(TF1, TF0, TF0, TF1)
>>>>>ctfc	8	21
>>>>>gainFactorInformation	Computed	Computed
>>>>>referenceTFCId		0
	0	
>>>>TFC 8		(TF2, TF1, TF0, TF1)
>>>>>ctfc		27
>>>>>gainFactorInformation		computed
>>>>>>referenceTFCId		0
>>>>TFC 9		(TF3, TF2, TF0, TF1)
>>>>>ctfc		33
>>>>>gainFactorInformation		computed
>>>>>>referenceTFCId		0
>>>>TFC 10		(TF4, TF3, TF0, TF1)
>>>>>ctfc		39
>>>>>gainFactorInformation		signalled
>>>>>βc (FDD only)		10
>>>>>βd		15
>>>>>referenceTFCId		0
>>>>TFC 11		(TF0, TF0, TF0, TF2)
>>>>>ctfc		40
>>>>>gainFactorInformation		Computed
>>>>>referenceTFCId		0
>>>>TFC 12		(TF1, TF0, TF0, TF2)
>>>>>ctfc		41
>>>>>gainFactorInformation		Computed
>>>>>referenceTFCld		0
>>>>TFC 13		(TF0, TF0, TF0, TF3)
>>>>>ctfc		60
>>>> sgainFactorInformation		Computed
	-	
>>>>>referenceTFCId		0
>>>>TFC 14		(TF1, TF0, TF0, TF3)
>>>>>ctfc	<u> </u>	61
>>>>>gainFactorInformation		Computed
>>>>>referenceTFCId		0
>>>>TFC 15		(TF0, TF0, TF0, TF4)
>>>>>ctfc		80
>>>>>gainFactorInformation		Computed
>>>>>>referenceTFCId		0
dl-CommonTransChInfo		
>tfcs-SignallingMode	Same as UL	Same as UL
ul-CommonTransChInfo	Jamo do JE	- Ca5 40 OL
		1
>tfcs-ID (TDD only)		1
>sharedChannelIndicator (TDD		FALSE
only)		
> tfc-Subset		Absent, not required
PhyCH INFORMATION FDD		
UL-DPCH-InfoPredef		
>ul-DPCH-PowerControlInfo		
>>powerControlAlgorithm	Algorithm 1	Algorithm 1
>>>tpcStepSize	1 dB	1 dB
>tfci-Existence	TRUE	TRUE
>puncturingLimit	1	0.96
DL-CommonInformationPredef	<u> </u>	0.00
>dl-DPCH-InfoCommon	1	
>>spreadingFactor	32	128

>>tfci-Existence	TRUE	TRUE
>>pilotBits	8	4
>>positionFixed	Flexible	Flexible
PhyCH INFORMATION 3.84 Mcps		
TDD		
UL-DPCH-InfoPredef		
>ul-DPCH-PowerControlInfo		
>>dpch-ConstantValue		
>commonTimeslotInfo		
>>secondInterleavingMode		
>>tfci-Coding		
>>puncturingLimit		
>>repetitionPeriodAndLength		
DL-CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>commonTimeslotInfo		
>>>secondInterleavingMode		
>>>tfci-Coding		
>>>puncturingLimit		
>>>repetitionPeriodAndLength		
PhyCH INFORMATION 1.28 Mcps TDD		
UL-DPCH-InfoPredef		
>commonTimeslotInfo		
>>secondInterleavingMode		
>>tfci-Coding		
>>puncturingLimit		
>>repetitionPeriodAndLength		
DL-CommonInformationPredef		
>dl-DPCH-InfoCommon		
>>commonTimeslotInfo		
>>>secondInterleavingMode		
>>>tfci-Coding		
>>>puncturingLimit		
>>>repetitionPeriodAndLength		

Configuration	13.6 kbps
	signalling
Ref 34.108	3
Default configuration	22
identity	
RB INFORMATION	
rb-Identity	RB1: 1, RB2: 2,
·	RB3: 3
rlc-InfoChoice	RIc-info
>ul-RLC-Mode	RB1: UM
	RB2- RB3: AM
>>transmissionRLC-	RB1: N/A
DiscardMode	RB2- RB3:
	NoDiscard
>>>maxDat	RB1: N/A
	RB2- RB3: 25
>>transmissionWindowSiz	RB1: N/A
е	RB2- RB3: 32
>>timerRST	RB1: N/A
	RB2- RB3: 200
>>max-RST	RB1: N/A
	RB2- RB3: 1
>>pollingInfo	RB1: N/A
	RB2- RB3: as below
>>>TimerPoll	RB2- RB3: 100
>>>PolIPDU	RB2- RB3: n/a
>>>PollSDU	RB2- RB3: 1

Configuration	13.6 kbps signalling
>>>lastTransmissionPDU-	RB2- RB3: FALSE
Poll >>>lastRetransmissionPD	RB2- RB3: TRUE
U-Poll	
>>>PollWindow	RB2- RB3: 99
>>segmentationIndication	RB1- RB3: N/A
>dl-RLC-Mode	RB1: UM
s in Coguenos Delivery	RB2- RB3: AM RB1: N/A
>>inSequenceDelivery	RB2- RB3: TRUE
>>receivingWindowSize	RB1: N/A
>>1Cccivingvvindowoize	RB2- RB3: 32
>>dl-RLC-StatusInfo	RB1: N/A
	RB2- RB3: as below
>>>timerStatusProhibit	RB2- RB3: 100
>>>missingPDU-Indicator	RB2- RB3: TRUE
>>segmentationIndication	RB1- RB3: N/A
rb-MappingInfo	
>UL-	OneLogicalChannel
LogicalChannelMappings	
>>ul-	Dch
TransportChannelType	
>>>transportChannelIdentit	RB1- RB3:9
У	DD4 4 DD0 0
>>logicalChannelIdentity	RB1: 1, RB2: 2,
>>rlc-SizeList	RB3: 3 RB1- RB3:
>>ric-SizeList	
>>mac-	configured RB1: 1, RB2: 2,
LogicalChannelPriority	RB3: 3
>DL-	TCDO. O
logicalChannelMappingList	
>>Mapping option 1	One mapping option
>>>dl-	Dch
TransportChannelType	
>>>>transportChannellden	RB1- RB3: 9
tity	
>>>logicalChannelIdentity	RB1: 1, RB2: 2,
T-OLLINGODAATION DED	RB3: 3
TrCH INFORMATION PER	
TrCH UL-	
AddReconfTransChInfoList	
>Uplink transport channel	Dch
type	Don
>transportChannelIdentity	TrCH1: 9
>transportFormatSet	DedicatedTransChT
·	FS
>>dynamicTF-information	
>>>tf0/ tf0,1	TrCH1: (0x144,
	1x144)
>>>rlcSize	BitMode
>>>>sizeType	TrCH1: type 2,
	part1= 2, part2= 0
	(144)
>>>numberOfTbSizeList	TrCH1: Zero, one
>>>logicalChannelList	All N/A
	IN/A
>>>numberOfTransportBl ocks	
>>>rlc-Size	
>>>sizeType	
>>>>numberOfTbSizeList	
IIUIIIDEIOIIDOIZELISI	

Configuration	13.6 kbps
1 : 101 11: 1	signalling
>>>logicalChannelList	NI/A
>>>ıı 2 >>>numberOfTransportBl	N/A
ocks	
>>>rlc-Size	
>>>>sizeType	
>>>numberOfTbSizeList	
>>>logicalChannelList	
>>semistaticTF-Information	
>>>tti	TrCH1: 10
>>>channelCodingType	Convolutional
>>>codingRate	TrCH1: Third
>>>rateMatchingAttribute	TrCH1: 160
>>>crc-Size	TrCH1: 16
DL-	
AddReconfTransChInfoList	
>Downlink transport	Dch
channel type	
>dl-	TrCH1: 9
TransportChannelIdentity	
(should be as for UL)	
>tfs-SignallingMode	SameAsUL
>>transportFormatSet	
>>>dynamicTF-information	
>>>tf0/ tf0,1	
>>>>rlcSize	
>>>>sizeType	
>>>>numberOfTbSizeList	
>>>>logicalChannelList	T 0114 0
>>ULTrCH-Id	TrCH1: 9
>dch-QualityTarget	2
>>bler-QualityValue	TrCH1: 5x10 ⁻²
TrCH INFORMATION,	
COMMON	
ul-CommonTransChInfo	
>tfcs-ID (TDD only)	1
>sharedChannelIndicator	FALSE
(TDD only)	A h = = = 4 = 4 = = -1
>tfc-Subset >ul-TFCS	Absent, not required Normal TFCI
>ul-1FC5	
>>explicitTFCS-	signalling Complete
ConfigurationMode	Complete
>>>ctfcSize	Ctfc2Bit
>>>TFCS representation	Addition
>>>>TFCS list	, iddition
>>>>TFCS 1	(TF0)
>>>>>ctfc	0
>>>>>gainFactorInform	Computed
ation	
>>>>>referenceTFCId	0
>>>>TFCS 2	(TF1)
>>>>>ctfc	1
>>>>>gainFactorInform	Signalled
ation	J
>>>>>βc (FDD only)	11
>>>>>βd	15
>>>>>>referenceTFCld	0
dl-CommonTransChInfo	
>tfcs-SignallingMode	Same as UL
PhyCH INFORMATION	Carrio ao OL
FDD	
· -	1

Configuration	13.6 kbps signalling
UL-DPCH-InfoPredef	Signaming
>ul-DPCH-	
PowerControlInfo	
>>powerControlAlgorithm	Algorithm 1
>>>tpcStepSize	1 dB
>tfci-Existence	TRUE
>puncturingLimit	1
DL-	<u>'</u>
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>spreadingFactor	128
>>tfci-Existence	FALSE
>>pilotBits	4
>>positionFixed	N/A
>>positioni ixed	IN/A
PhyCH INFORMATION	
3.84 / 7.68 Mcps TDD	
UL-DPCH-InfoPredef	
>ul-DPCH-	
PowerControlInfo	
>>dpch-ConstantValue	0
>commonTimeslotInfo	0
>>secondInterleavingMode	frameRelated
>>tfci-Coding	4
	0.92
>>puncturingLimit >>repetitionPeriodAndLeng	repetitionPeriod1
th	repetitionPeriod i
DL-	
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>>secondInterleavingMod	frameRelated
e	Hamertelated
>>>tfci-Coding	4
>>>puncturingLimit	0.92
>>>repetitionPeriodAndLe	repetitionPeriod1
ngth	repetitioni enour
PhyCH INFORMATION	
1.28 Mcps TDD	
UL-DPCH-InfoPredef	
>commonTimeslotInfo	
>>secondInterleavingMode	frameRelated
>>tfci-Coding	4
>>puncturingLimit	0.64
>>repetitionPeriodAndLeng	repetitionPeriod1
th	repetitioni enour
DL-	
CommonInformationPredef	
>dl-DPCH-InfoCommon	
>>commonTimeslotInfo	
>>>secondInterleavingMod	frameRelated
e	mamer\cialeu
>>>tfci-Coding	4
	0.64
>>>puncturingLimit	
>>>repetitionPeriodAndLe	repetitionPeriod1
ngth	

NOTE: the difference between default configuration #22 and default configuration #1 (13.6 kbps signalling) resides in the RLC configuration.

14 Specific functions

14.1 Intra-frequency measurements

14.1.1 Intra-frequency measurement quantities

A measurement quantity is used to evaluate whether an intra-frequency event has occurred or not. It can be:

- 1 Downlink E_c/N₀.
- 2 Downlink path loss.

For FDD:

Pathloss in dB = Primary CPICH Tx power - CPICH RSCP.

For Primary CPICH Tx power the IE "Primary CPICH Tx power" shall be used. The unit is dBm.

CPICH RSCP is the result of the CPICH RSCP measurement. The unit is dBm.

For TDD:

Pathloss in dB = Primary CCPCH TX power - Primary CCPCH RSCP.

For Primary CCPCH TX power the IE "Primary CCPCH TX Power" shall be used. The unit is dBm.

Primary CCPCH RSCP is the result of the Primary CCPCH RSCP measurement. The unit is dBm.

If necessary Pathloss shall be rounded up to the next higher integer.

Results higher than 158 shall be reported as 158.

Results lower than 46 shall be reported as 46.

- 3 Downlink received signal code power (RSCP) after despreading.
- 4 ISCP measured on Timeslot basis.

A description of those values can be found in [7] and [8].

14.1.2 Intra-frequency reporting events for FDD

Within the measurement reporting criteria field in the Measurement Control message the UTRAN notifies the UE which events should trigger a measurement report. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All the specified events are measured with respect to any of the measurement quantities given in subclause 14.1.1. The measurement quantities are measured on the monitored primary common pilot channels (CPICH) of the cell defined in the measurement object.

Special mechanisms for the events are illustrated in subclause 14.1.4 and 14.1.5.

NOTE: The events below are numbered 1A, 1B, 1C,... since all intra-frequency reporting events would be labelled 1X, inter-frequency reporting events would be labelled 2X, and so on for the other measurement types.

When one intra-frequency measurement identity corresponds to multiple intra-frequency events with identical event identities, the UE behaviour is not specified.

14.1.2.1 Reporting event 1A: A Primary CPICH enters the reporting range

When an intra-frequency measurement configuring event 1a is set up, the UE shall:

- 1> create a variable TRIGGERED_1A_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1A is configured in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell; and
 - 2> if the equations have been fulfilled for a time period indicated by "Time to trigger", and if that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 2", and if that primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1A_EVENT:
 - 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1A_EVENT.
- 1> if the value of "Reporting deactivations threshold" for this event is greater than or equal to the current number of cells in the active set or equal to 0 and any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1A_EVENT:
 - 2> if "Reporting interval" for this event is not equal to 0:
 - 3> if the IE "Periodical reporting running" in the variable TRIGGERED_1A_EVENT is set to FALSE:
 - 4> start a timer with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1A_EVENT to TRUE;
 - 3> set "sent reports" for the primary CPICHs in "cells recently triggered" in the variable TRIGGERED 1A EVENT to 1.
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1a"; and
 - 3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1A_EVENT in descending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;
 - 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 2> move all entries from "cells recently triggered" to "cells triggered" in the variable TRIGGERED 1A EVENT.
- 1> if the timer for the periodical reporting has expired:
 - 2> if any primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1A_EVENT:
 - 3> if "Reporting interval" for this event is not equal to 0, and if "Amount of reporting" is greater than "sent reports" stored for any of these primary CPICHs, in "cells triggered" in the variable TRIGGERED_1A_EVENT:
 - 4> increment the stored counter "sent reports" for all CPICHs in "cell triggered" in variable TRIGGERED_1A_EVENT;
 - 4> start a timer with the value of "Reporting interval" for this event;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1a"; and
 - 5> include in "cell measurement event results" all entries of the variable TRIGGERED_1A_EVENT with value of IE "sent reports" equal to or smaller than value of "Amount of reporting" in descending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells:

- 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
- 4> if "sent reports" in variable TRIGGERED_1A_EVENT is equal to "Amount of reporting" for all entries:
 - 5> set the IE "Periodical Reporting running" in the variable TRIGGERED_1A_EVENT to FALSE and disable the timer for the periodical reporting.
- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH; or
- 1> if a primary CPICH is no longer part of the cells allowed to trigger the event according to the "Triggering condition 2":
 - 2> if that primary CPICH is included in the "cells triggered" or "cells recently triggered" in the variable TRIGGERED_1A_EVENT:
 - 3> remove the entry of that primary CPICH from "cells triggered" or "cells recently triggered" in the variable TRIGGERED 1A EVENT.
 - 3> if no entry in the variable TRIGGERED_1A_EVENT has a value of "sent reports" smaller than "Amount of reporting"; or
 - 3> if there is no entry in the variable TRIGGERED_1A_EVENT:
 - 4> if the reporting interval timer is running:
 - 5> stop the reporting interval timer;
 - 5> set the IE "Periodical reporting running" in the variable TRIGGERED_1A_EVENT to FALSE.

This event is only applicable to the CELL_DCH state. When the measurement is setup in CELL_DCH or upon transition to CELL_DCH the UE shall:

- 1> if the "Triggering condition 2" includes active set cells:
 - 2> include the primary CPICH of all cells in the current active set into the "cells triggered" in the variable TRIGGERED_1A_EVENT with the counter "sent reports" set to "Amount of reporting".

Equation 1 (Triggering condition for pathloss)

$$10 \cdot LogM_{New} + CIO_{New} \leq W \cdot 10 \cdot Log\left(1 / \sum_{i=1}^{N_A} (1 / M_i)\right) + (1 - W) \cdot 10 \cdot LogM_{Best} + (R_{1a} - H_{1a} / 2),$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 \cdot Log M_{New} + CIO_{New} \ge W \cdot 10 \cdot Log \left(\sum_{i=1}^{N_A} M_i \right) + (1 - W) \cdot 10 \cdot Log M_{Best} - (R_{1a} - H_{1a}/2),$$

Equation 3 (Leaving triggering condition for pathloss)

$$10 \cdot Log M_{New} + CIO_{New} > W \cdot 10 \cdot Log \left(1 / \sum_{i=1}^{N_A} (1/M_i) \right) + (1-W) \cdot 10 \cdot Log M_{Best} + (R_{1a} + H_{1a} / 2),$$

Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 \cdot Log M_{New} + CIO_{New} < W \cdot 10 \cdot Log \left(\sum_{i=1}^{N_A} M_i \right) + (1 - W) \cdot 10 \cdot Log M_{Best} - (R_{1a} + H_{1a}/2),$$

The variables in the formula are defined as follows:

 M_{New} is the measurement result of the cell entering the reporting range.

 CIO_{New} is the individual cell offset for the cell entering the reporting range if an individual cell offset is stored for that cell. Otherwise it is equal to 0.

 M_i is a measurement result of a cell not forbidden to affect reporting range in the active set.

 N_A is the number of cells not forbidden to affect reporting range in the current active set.

For pathloss

 M_{Best} is the measurement result of the cell not forbidden to affect reporting range in the active set with the lowest measurement result, not taking into account any cell individual offset.

for other measurements quantities.

 M_{Best} is the measurement result of the cell not forbidden to affect reporting range in the active set with the highest measurement result, not taking into account any cell individual offset.

W is a parameter sent from UTRAN to UE.

 R_{1a} is the reporting range constant.

 H_{1a} is the hysteresis parameter for the event 1a.

If the measurement results are pathloss or CPICH-Ec/No then M_{New} , M_i and M_{Best} are expressed as ratios.

If the measurement result is CPICH-RSCP then M_{New} , M_i and M_{Best} are expressed in mW.

14.1.2.2 Reporting event 1B: A primary CPICH leaves the reporting range

When an intra-frequency measurement configuring event 1b is set up, the UE shall:

- 1> create a variable TRIGGERED_1B_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1B is configures in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger", and if that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 1", and if that primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:
 - 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED 1B EVENT.
- 1> if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1B_EVENT:
 - 2> if "Periodic reporting info-1b" is present, and "Reporting interval" for this event is not equal to 0:
 - 3> if the IE "Periodical reporting running" in the variable TRIGGERED_1B_EVENT is set to FALSE:
 - 4> start a timer with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1B_EVENT to TRUE;
 - 3> set "sent reports" for the primary CPICHs in "cells recently triggered" in the variable TRIGGERED_1B_EVENT to 1.
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1b"; and
 - 3> include in "cell measurement event results" all entries of "cells recently triggered" in the variable TRIGGERED_1B_EVENT in ascending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;

- 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
- 2> move all entries from IE "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1B_EVENT.
- 1> if the timer for the periodical reporting has expired:
 - 2> if any primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:
 - 3> if "Periodic reporting info-1b" is present:
 - 4> if "Reporting interval" is not equal to 0, and if "Amount of reporting" is greater than "sent reports" stored for any of these primary CPICHs, in "cells triggered" in the variable TRIGGERED_1B_EVENT:
 - 5> increment the stored counter "sent reports" for all CPICHs in "cell triggered" in variable TRIGGERED_1B_EVENT;
 - 5> start a timer with the value of "Reporting interval-1b" for this event;
 - 5> send a measurement report with IEs set as below:
 - 6> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1b"; and
 - 6> include in "cell measurement event results" all entries of the variable TRIGGERED_1B_EVENT with value of IE "sent reports" equal to or smaller than value of "Amount of reporting" in ascending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;
 - 6> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 5> if "sent reports" in variable TRIGGERED_1B_EVENT is equal to "Amount of reporting" for all entries:
 - 6> set the IE "Periodical Reporting running" in the variable TRIGGERED_1B_EVENT to FALSE and disable the timer for the periodical reporting.
- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH; or
- 1> if a primary CPICH is no longer part of the cells allowed to trigger the event according to the "Triggering condition 1":
 - 2> if that primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:
 - 3> remove the entry of that primary CPICH from "cells triggered" in the variable TRIGGERED_1B_EVENT;
 - 3> if there is no entry in the variable TRIGGERED_1B_EVENT:
 - 4> if the reporting interval timer is running:
 - 5> stop the reporting interval timer;
 - 5> set the IE "Periodical reporting running" in the variable TRIGGERED_1B_EVENT to FALSE.

Equation 1 (Triggering condition for pathloss)

$$10 \cdot Log M_{Old} + CIO_{Old} \ge W \cdot 10 \cdot Log \left(1 / \sum_{i=1}^{N_A} (1/M_i) \right) + (1-W) \cdot 10 \cdot Log M_{Best} + (R_{1b} + H_{1b} / 2)$$
, Equation 2 (Triggering condition for all the other measurement quantities)

$$10 \cdot Log M_{Old} + CIO_{Old} \le W \cdot 10 \cdot Log \left(\sum_{i=1}^{N_A} M_i\right) + (1-W) \cdot 10 \cdot Log M_{Best} - (R_{1b} + H_{1b}/2)$$
, Equation 3 (Leaving triggering condition for pathloss)

$$10 \cdot LogM_{old} + CIO_{old} < W \cdot 10 \cdot Log\left(1/\sum_{i=1}^{N_A} (1/M_i)\right) + (1-W) \cdot 10 \cdot LogM_{Best} + (R_{1b} - H_{1b} / 2)$$
, Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 \cdot Log M_{Old} + CIO_{Old} > W \cdot 10 \cdot Log \left(\sum_{i=1}^{N_A} M_i\right) + (1-W) \cdot 10 \cdot Log M_{Best} - (R_{1b} - H_{1b}/2)$$
, The variables in the formula are defined as follows:

 M_{Old} is the measurement result of the cell leaving the reporting range.

*CIO*_{Old} is the individual cell offset for the cell leaving the reporting range if an individual cell offset is stored for that cell. Otherwise it is equal to 0.

 M_i is a measurement result of a cell not forbidden to affect reporting range in the active set.

 N_A is the number of cells not forbidden to affect reporting range in the current active set.

For pathloss

 M_{Best} is the measurement result of the cell not forbidden to affect reporting range in the active set with the lowest measurement result, not taking into account any cell individual offset.

for other measurements quantities.

 M_{Best} is the measurement result of the cell not forbidden to affect reporting range in the active set with the highest measurement result, not taking into account any cell individual offset.

W is a parameter sent from UTRAN to UE.

 R_{1b} is the reporting range constant.

 H_{1b} is the hysteresis parameter for the event 1b.

If the measurement results are pathloss or CPICH-Ec/No then M_{Old} , M_i and M_{Best} are expressed as ratios.

If the measurement result is CPICH-RSCP then M_{Old} , M_i and M_{Best} are expressed in mW.

14.1.2.3 Reporting event 1C: A non-active primary CPICH becomes better than an active primary CPICH

When an intra-frequency measurement configuring event 1c is set up, the UE shall:

- 1> create a variable TRIGGERED_1C_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1C is configured in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell; and
 - 2> if the equations have been fulfilled for a time period indicated by "Time to trigger", and if the primary CPICH that is better is not included in the active set but the other primary CPICH is any of the primary CPICHs included in the active set, and if that first primary CPICH is not included in the "cells triggered" in the variable TRIGGERED 1C EVENT:
 - 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1C_EVENT.

- 1> if the value of "Replacement activation threshold" for this event is less than or equal to the current number of cells in the active set or equal to 0 and if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1C_EVENT:
 - 2> if "Reporting interval" for this event is not equal to 0:
 - 3> if the IE "Periodical reporting running" in the variable TRIGGERED_1C_EVENT is set to FALSE:
 - 4> start a timer for with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1C_EVENT to TRUE.
 - 3> set "sent reports" for that primary CPICH in the variable TRIGGERED_1C_EVENT to 1.
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1c"; and
 - 3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1C_EVENT not in the active set as well as the "primary CPICH info" of all the primary CPICHs in the active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell recently triggered" that has the best measured value taking into account their cell individual offset. The "primary CPICH info" for those cells shall be ordered according to their measured value taking into account their cell individual offset, beginning with the best cell to the worst one;
 - 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 2> move all entries from "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1C_EVENT.
- 1> if the timer for the periodical reporting has expired:
 - 2> if any primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1C_EVENT, and not included in the current active set:
 - 3> if "Reporting interval" for this event is not equal to 0, and if "Amount of reporting" is greater than "sent reports" stored for that primary CPICH, in "cells triggered" in the variable TRIGGERED_1C_EVENT:
 - 4> increment the stored counter "sent reports" for all CPICH in "cell triggered" in variable TRIGGERED_1C_EVENT;
 - 4> start a timer with the value of "Reporting interval" for this event;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1c"; and
 - 5> include in "cell measurement event results" all entries of the variable TRIGGERED_1C_EVENT with value of IE "sent report" equal to or smaller than value of "Amount of reporting" and that are not part of the active set as well as the "primary CPICH info" of all the primary CPICHs in the active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell triggered" that has the best measured value, ordering the "primary CPICH info" according to their measured value beginning with the best cell to the worst one, taking into account the cell individual offset for each cell;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 4> if "sent reports" in variable TRIGGERED_1C_EVENT is equal to "Amount of reporting" for all entries:
 - 5> set the IE "Periodical Reporting running" in the variable TRIGGERED_1C_EVENT to FALSE and disable the timer for the periodical reporting.

- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH or;
- 1> if a primary CPICH is added to the active set:
 - 2> if that primary CPICH is included in the "cells triggered" or "cells recently triggered" in the variable TRIGGERED_1C_EVENT:
 - 3> remove the entry of that primary CPICH from "cells triggered" or "cells recently triggered" in the variable TRIGGERED 1C EVENT.
 - 3> if no entry in the variable TRIGGERED_1C_EVENT has a value of "sent reports" smaller than "Amount of reporting" or
 - 3> if there is no entry in the variable TRIGGERED_1C_EVENT:
 - 4> if the reporting interval timer is running:
 - 5> stop the reporting interval timer;
 - 5> set the IE "Periodical reporting running" in the variable TRIGGERED_1C_EVENT to FALSE.

Equation 1 (Triggering condition for pathloss)

$$10 Log M_{ew} + CIQ_{ew} \le 10 Log M_{eAS} + CIQ_{eAS} - H_{lc}/2$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 Log M_{Pew} + CIQ_{Pew} \ge 10 Log M_{PAS} + CIQ_{PAS} + H_{lc}/2$$

Equation 3 (Leaving triggering condition for pathloss)

$$10 Log M_{ev} + CIQ_{ev} > 10 Log M_{AS} + CIQ_{AS} + H_{lc}/2$$

Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 Log M_{ew} + CIQ_{ew} < 10 Log M_{eAS} + CIQ_{eAS} - H_{lc}/2$$

The variables in the formula are defined as follows:

 M_{New} is the measurement result of the cell not included in the active set.

 CIO_{New} is the individual cell offset for the cell becoming better than the cell in the active set if an individual cell offset is stored for that cell. Otherwise it is equal to 0.

For pathloss:

 M_{InAS} is the measurement result of the cell in the active set with the highest measurement result.

For other measurement quantities:

 M_{InAS} is the measurement result of the cell in the active set with the lowest measurement result.

CIO_{tnAS} is the individual cell offset for the cell in the active set that is becoming worse than the new cell.

 H_{1c} is the hysteresis parameter for the event 1c.

If the measurement results are pathloss or CPICH-Ec/No then M_{New} and M_{inAS} are expressed as ratios.

If the measurement result is CPICH-RSCP then M_{New} and M_{inAS} are expressed in mW.

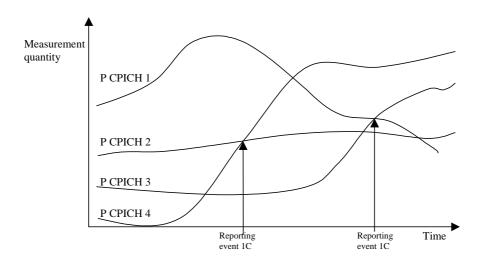


Figure 14.1.2.3-1 [Informative]: A primary CPICH that is not included in the active set becomes better than a primary CPICH that is in the active set

In this figure, the parameters hysteresis and time to trigger, as well as the cell individual offsets for all cells are equal to 0. In this example the cells belonging to primary CPICH 1 and 2 are in the active set, but the cells transmitting primary CPICH 3 and CPICH 4 are not (yet) in the active set.

The first measurement report is sent when primary CPICH 4 becomes better than primary CPICH 2. The "cell measurement event result" of the measurement report contains the information of primary CPICH 4 and CPICH 2.

Assuming that the active set has been updated after the first measurement report (active set is now primary CPICH 1 and primary CPICH 4), the second report is sent when primary CPICH 3 becomes better than primary CPICH 1. The "cell measurement event result" of the second measurement report contains the information of primary CPICH 3 and primary CPICH 1.

14.1.2.4 Reporting event 1D: Change of best cell

When an intra-frequency measurement configuring event 1d is set up, the UE shall:

- 1> create a variable TRIGGERED_1D_EVENT related to that measurement, which shall initially contain the best cell in the active set when the measurement is initiated;
- 1> delete this variable when the measurement is released.
- 1> As soon as the best cell in the active set has been evaluated by the UE (and stored in the TRIGGERED_1D_EVENT variable) and provided that there is more than one cell in the active set, trigger an immediate measurement report with IEs set as below:
 - 2> set in "intra-frequency measurement event results"; "Intrafrequency event identity" to "1d" and "cell measurement event results" to the CPICH info of the primary CPICH stored in the TRIGGERED_1D_EVENT variable;
 - 2> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2

When event 1D is configured in the UE, the UE shall:

- 1> if IE "useCIO" is present and its value is TRUE, take into account the Cell Individual Offset for evaluation of the Equation 1 and 2, otherwise do not take it into account.
- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT:

NOTE: If the equations are simultaneously fulfilled for more than one primary CPICH, the UE should report only one event 1D, triggered by the best primary CPICH.

- 2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger" and if IE "Triggering condition 2" is absent or if it is present and that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 2":
 - 3> set "best cell" in the variable BEST_CELL_1D_EVENT to that primary CPICH that triggered the event;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "intra-frequency measurement event results"; "Intrafrequency event identity" to "1d" and "cell measurement event results" to the CPICH info of the primary CPICH that triggered the report.
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.

This event is only applicable to the CELL_DCH state. Upon transition to CELL_DCH the UE shall:

1> set "best cell" in the variable BEST_CELL_1D_EVENT to the best cell of the primary CPICHs included in the active set.

Equation 1 (Triggering condition for pathloss)

$$10 Log M_{otBest} + CIQ_{otBest} \le 10 Log M_{est} + CIQ_{est} - H_{td}/2$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 Log M_{totBest} + CIQ_{totBest} \ge 10 Log M_{test} + CIQ_{test} + H_{td}/2$$

The variables in the formula are defined as follows:

 $M_{NotBest}$ is the measurement result of a cell not stored in "best cell" in the variable BEST_CELL_1D_EVENT.

CIO_{NotBest} is the cell individual offset of a cell not stored in "best cell" in the variable BEST_CELL_1D_EVENT.

 M_{Best} is the measurement result of the cell stored in "best cell" in variable BEST_CELL_1D_EVENT.

CIO_{Best} is the cell individual offset of a cell stored in "best cell" in the variable BEST_CELL_1D_EVENT.

 H_{1d} is the hysteresis parameter for the event 1d.

If the measurement results are pathloss or CPICH-Ec/No then $M_{Not Best}$ and M_{Best} are expressed as ratios.

If the measurement result is CPICH-RSCP then $M_{Not Best}$ and M_{Best} are expressed in mW.

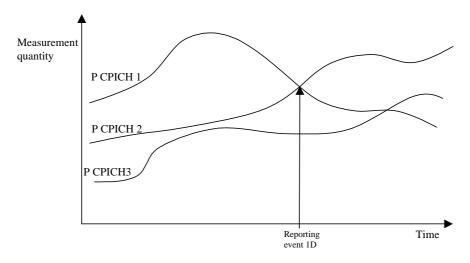


Figure 14.1.2.4-1 [Informative]: A primary CPICH becomes better than the previously best primary CPICH

In this figure, the parameters hysteresis and time to trigger, as well as the cell individual offsets for all cells are equal to 0.

14.1.2.5 Reporting event 1E: A Primary CPICH becomes better than an absolute threshold

When an intra-frequency measurement configuring event 1e is set up, the UE shall:

- 1> create a variable TRIGGERED_1E_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1E is configured in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger", and if that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 2", and that primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1E_EVENT:
 - 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1E_EVENT.
- 1> if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1E_EVENT:
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1e"; and
 - 3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1E_EVENT in descending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;
 - 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 2> move all entries from "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1E_EVENT.
- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH; or
- 1> if a primary CPICH is no longer part of the cells allowed to trigger the event according to the "Triggering condition 2":
 - 2> if that primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1E_EVENT:
 - 3> remove that primary CPICH and sent reports from "cells triggered" in the variable TRIGGERED_1E_EVENT.

This event is only applicable to the CELL_DCH state. When the measurement is setup in CELL_DCH or upon transition to CELL_DCH the UE shall:

- 1> if the "Triggering condition 2" includes active set cells:
 - 2> include the primary CPICH of all cells in the current active set that fulfil the equations 1 or 2 according to the "Measurement quantity" of event 1e into the "cells triggered" in the variable TRIGGERED_1E_EVENT.

Equation 1 (Triggering condition for pathloss)

$$10 Log M_{ev} + CIQ_{ev} \leq T_{le} - H_{le}/2$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 Log M_{ew} + CIQ_{ew} \ge T_{le} + H_{le}/2$$

Equation 3 (Leaving triggering condition for pathloss)

$$10 Log M_{ew} + CIQ_{ew} > T_{le} + H_{le}/2$$

Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 Log M_{ew} + CIQ_{ew} < T_{le} - H_{le}/2$$

The variables in the formula are defined as follows:

 M_{New} is the measurement result of a cell that becomes better than an absolute threshold.

 CIO_{New} is the individual cell offset for the cell becoming better than the absolute threshold. Otherwise it is equal to 0.

 T_{1e} is an absolute threshold.

 H_{1e} is the hysteresis parameter for the event 1e.

If the measurement results are pathloss or CPICH-Ec/No then M_{New} is expressed as ratios.

If the measurement result is CPICH-RSCP then M_{New} is expressed in mW.

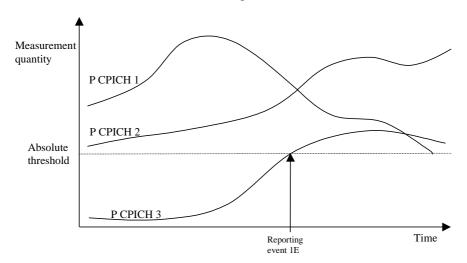


Figure 14.1.2.5-1 [Informative]: Event-triggered report when a Primary CPICH becomes better than an absolute threshold

In this figure, the parameters hysteresis and time to trigger, as well as the cell individual offsets for all cells are equal to 0.

14.1.2.6 Reporting event 1F: A Primary CPICH becomes worse than an absolute threshold

When an intra-frequency measurement configuring event 1F is set up, the UE shall:

- 1> create a variable TRIGGERED_1F_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1F is configured in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger", and if that primary CPICH is part of cells allowed to trigger the event

according to "Triggering condition 1", and that primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1F_EVENT:

- 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1F_EVENT.
- 1> if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1F_EVENT:
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency event measurement results": "Intrafrequency event identity" to "1f"; and
 - 3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1F_EVENT in descending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;
 - 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell;
 - 2> move all entries from "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1F_EVENT.
- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH; or
- 1> if a primary CPICH is no longer part of the cells allowed to trigger the event according to the "Triggering condition 1":
 - 2> if that primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1F_EVENT:
 - 3> remove that primary CPICH from "cells triggered" in the variable TRIGGERED_1F_EVENT.

Equation 1 (Triggering condition for pathloss)

$$10 Log M_{ld} + CIQ_{ld} \ge T_{lf} + H_{lf}/2$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 Log M_{ld} + CI Q_{ld} \leq T_{1f} - H_{1f}/2$$
,

Equation 3 (Leaving triggering condition for pathloss)

$$10 Log M_{ld} + CIQ_{ld} < T_{lf} - H_{lf}/2$$

Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 Log M_{ld} + CIQ_{ld} > T_{1f} + H_{1f}/2$$
,

The variables in the formula are defined as follows:

 M_{Old} is the measurement result of a cell that becomes worse than an absolute threshold

CIO_{old} is the individual cell offset for the cell becoming worse than the absolute threshold. Otherwise it is equal to 0.

 T_{If} is an absolute threshold

 H_{1f} is the hysteresis parameter for the event 1f.

If the measurement results are pathloss or CPICH-Ec/No then M_{Old} is expressed as ratios.

If the measurement result is CPICH-RSCP then M_{Old} is expressed in mW.

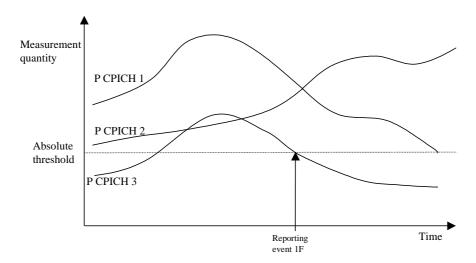


Figure 14.1.2.6-1 [Informative]: Event-triggered report when a Primary CPICH becomes worse than an absolute threshold

In this figure, the parameters hysteresis and time to trigger, as well as the cell individual offsets for all cells are equal to 0.

14.1.2.7 Reporting event 1J: A non-active E-DCH but active DCH primary CPICH becomes better than an active E-DCH primary CPICH

When an intra-frequency measurement configuring event 1j is set up, the UE shall:

- 1> create a variable TRIGGERED_1J_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 1J is configured in the UE, the UE shall:

- 1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:
 - 2> if all required reporting quantities are available for that cell; and
 - 2> if the equations have been fulfilled for a time period indicated by "Time to trigger", and if the primary CPICH that is better is not included in the E-DCH active set but included in DCH active set and the other primary CPICH is any of the primary CPICHs included in the E-DCH active set, and if that first primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1J_EVENT:
 - 3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1J_EVENT.
- 1> if the value of "Replacement activation threshold" for this event is less than or equal to the current number of cells in the E-DCH active set or equal to 0 and if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1J_EVENT:
 - 2> if "Reporting interval" for this event is not equal to 0:
 - 3> if the IE "Periodical reporting running" in the variable TRIGGERED 1J EVENT is set to FALSE:
 - 4> start a timer for with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1J_EVENT to TRUE.
 - 3> set "sent reports" for that primary CPICH in the variable TRIGGERED_1J_EVENT to 1.
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1J"; and

- 3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1J_EVENT not in the E-DCH active set but included in DCH active set as well as the "primary CPICH info" of all the primary CPICHs in the E-DCH active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell recently triggered" that has the best measured value taking into account their cell individual offset. The "primary CPICH info" for those cells shall be ordered according to their measured value taking into account their cell individual offset, beginning with the best cell to the worst one;
- 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
- 2> move all entries from "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1J_EVENT.
- 1> if the timer for the periodical reporting has expired:
 - 2> if any primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1J_EVENT, and not included in the current E-DCH active set but included in DCH active set:
 - 3> if "Reporting interval" for this event is not equal to 0, and if "Amount of reporting" is greater than "sent reports" stored for that primary CPICH, in "cells triggered" in the variable TRIGGERED_1J_EVENT:
 - 4> increment the stored counter "sent reports" for all CPICH in "cell triggered" in variable TRIGGERED_1J_EVENT;
 - 4> start a timer with the value of "Reporting interval" for this event;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1J"; and
 - 5> include in "cell measurement event results" all entries of the variable TRIGGERED_1J_EVENT with value of IE "sent report" equal to or smaller than value of "Amount of reporting" and that are not part of the E-DCH active set but included in DCH active set as well as the "primary CPICH info" of all the primary CPICHs in the E-DCH active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell triggered" that has the best measured value, ordering the "primary CPICH info" according to their measured value beginning with the best cell to the worst one, taking into account the cell individual offset for each cell;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
 - 4> if "sent reports" in variable TRIGGERED_1J_EVENT is equal to "Amount of reporting" for all entries:
 - 5> set the IE "Periodical Reporting running" in the variable TRIGGERED_1J_EVENT to FALSE and disable the timer for the periodical reporting.
- 1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH or;
- 1> if a primary CPICH is added to the E-DCH active set:
 - 2> if that primary CPICH is included in the "cells triggered" or "cells recently triggered" in the variable TRIGGERED_1J_EVENT:
 - 3> remove the entry of that primary CPICH from "cells triggered" or "cells recently triggered" in the variable TRIGGERED_1J_EVENT.
 - 3> if no entry in the variable TRIGGERED_1J_EVENT has a value of "sent reports" smaller than "Amount of reporting" or
 - 3> if there is no entry in the variable TRIGGERED_1J_EVENT:
 - 4> if the reporting interval timer is running:

5> stop the reporting interval timer;

5> set the IE "Periodical reporting running" in the variable TRIGGERED_1J_EVENT to FALSE.

Equation 1 (Triggering condition for pathloss)

$$10 Log M_{ew} + CIQ_{ew} \le 10 Log M_{eAS} + CIQ_{eAS} - H_{ii}/2$$

Equation 2 (Triggering condition for all the other measurement quantities)

$$10 Log M_{ew} + CIQ_{ew} \ge 10 Log M_{hAS} + CIQ_{hAS} + H_{1i}/2$$

Equation 3 (Leaving triggering condition for pathloss)

$$10 Log M_{ew} + CIQ_{ew} > 10 Log M_{hAS} + CIQ_{hAS} + H_{1i}/2$$

Equation 4 (Leaving triggering condition for all the other measurement quantities)

$$10 Log M_{Pew} + CIQ_{Pew} < 10 Log M_{Phas} + CIQ_{Phas} - H_{1i}/2$$

The variables in the formula are defined as follows:

 M_{New} is the measurement result of the cell not included in the E-DCH active set but included in DCH active set.

 CIO_{New} is the individual cell offset for the cell not included in the E-DCH active set but included in DCH active set becoming better than the cell in the E-DCH active set if an individual cell offset is stored for that cell. Otherwise it is equal to 0.

For pathloss:

 M_{InAS} is the measurement result of the cell in the E-DCH active set with the highest measurement result.

For other measurement quantities:

 M_{InAS} is the measurement result of the cell in the E-DCH active set with the lowest measurement result.

CIO_{InAS} is the individual cell offset for the cell in the E-DCH active set that is becoming worse than the new cell.

 H_{1J} is the hysteresis parameter for the event 1J.

If the measurement results are pathloss or CPICH-Ec/No then M_{New} and M_{inAS} are expressed as ratios.

If the measurement result is CPICH-RSCP then M_{New} and M_{inAS} are expressed in mW.

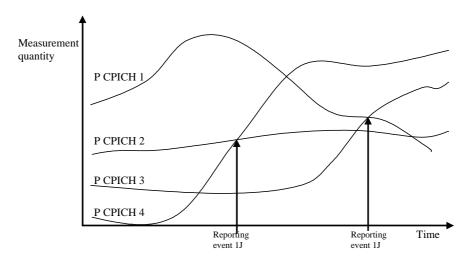


Figure 14.1.2.7-1 [Informative]: A primary CPICH that is not included in the E-DCH active set but included in DCH active set becomes better than a primary CPICH that is in the E-DCH active set

In this figure, the parameters hysteresis and time to trigger, as well as the cell individual offsets for all cells are equal to 0 and replacement activation threshold is equal to 0 or 1 or 2. In this example the cells belonging to primary CPICH 1 and 2 are in the E-DCH active set, but the cells transmitting primary CPICH 3 and CPICH 4 are not (yet) in the E-DCH active set but included in DCH active set.

The first measurement report is sent when primary CPICH 4 becomes better than primary CPICH 2. The "cell measurement event result" of the measurement report contains the information of primary CPICH 4 and CPICH 2.

Assuming that the E-DCH active set has been updated after the first measurement report (E-DCH active set is now primary CPICH 1 and primary CPICH 4), the second report is sent when primary CPICH 3 becomes better than primary CPICH 1. The "cell measurement event result" of the second measurement report contains the information of primary CPICH 3 and primary CPICH 1.

14.1.3 Intra-frequency reporting events for TDD

14.1.3.1 Reporting event 1G: Change of best cell (TDD)

When event 1G is configured in the UE, the UE shall:

- 1> if the equation 1 is fulfilled for a P-CCPCHs during the time "Time to trigger" and if that P-CCPCH is not included in the "primary CCPCH info" in the variable TRIGGERED_1G_EVENT:
 - 2> include that P-CCPCH in "cells triggered" in the variable TRIGGERED_1G_EVENT;
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1g";
 - 3> set the first entry in "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH which was stored in the variable TRIGGERED_1G_EVENT;
 - 3> include all entries in "cells triggered" in variable TRIGGERED_1G_EVENT in "cell measurement event results" in the measurement report in descending order according to:

$$10 \cdot Log M + O$$

where M is the P-CCPCH RSCP and O the individual offset of a cell;

- 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
- 1> if Equation 2 below is fulfilled for a primary CCPCH:
 - 2> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1G_EVENT:
 - 3> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1G_EVENT;

The UE shall use the equations below for evaluation of reporting event 1g:

Equation 1

$$10 \cdot Log M_l + O_l - H_{1g} > 10 \cdot Log M_{\underline{previous} \ best} + O_{\underline{previous} \ best}$$

The variables in the formula are defined as follows:

M_{previous_best} is the current P-CCPCH RSCP of the previous best cell expressed in mW

 $O_{previous_best}$ is the cell individual offset of the previous best cell

 M_i is the current P-CCPCH RSCP of the currently evaluated cell i expressed in mW

 O_i is the cell individual offset of the currently evaluated cell i

 H_{1g} is the hysteresis parameter for the event 1g.

Equation 2

$$10 Log M_l + O_l + H_{lg} < 10 Log M_{previous best} + O_{previous best}$$

The variables in the formula are defined as follows:

M_{previous best} is the current P-CCPCH RSCP of the previous best cell expressed in mW

 $O_{previous\ best}$ is the cell individual offset of the previous best cell

 M_i is the current P-CCPCH RSCP of the currently evaluated cell i expressed in mW

 O_i is the cell individual offset of the currently evaluated cell i

 H_{1g} is the hysteresis parameter for the event 1g.

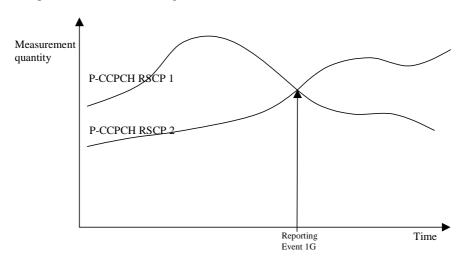


Figure 14.1.3.1-1: A P-CCPCH RSCP becomes better than the previous best P-CCPCH RSCP

14.1.3.2 Reporting event 1H: Timeslot ISCP below a certain threshold (TDD)

When event 1h is configured in the UE, the UE shall:

- 1> if equation 1 is fulfilled for a time period indicated by "Time to trigger" and if that P-CCPCH is not included in the IE "cells triggered" in the variable TRIGGERED_1H_EVENT:
 - 2> include that P-CCPCH in the IE "cells triggered" in the variable TRIGGERED_1H_EVENT;
 - 2> send a measurement report with the IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1h" and in "cell measurement event results" the "Cell parameters ID" of the P-CCPCH that triggered the report;
 - 3> include in "Cell measured results" the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1H_EVENT.
- 1> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1H_EVENT:
 - 2> send a measurement report with IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1h" and "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH that triggered the report;
 - 3> set in "measured results" the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1H_EVENT and "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.
- 1> if Equation 2 below is fulfilled for a primary CCPCH:

- 2> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1H_EVENT:
 - 3> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1H_EVENT.

The UE shall use the equations below for evaluation of reporting event 1h:

Equation 1

 $10 \cdot Log M_i + H_{1h} + O_i < T_{1h},$

Equation 2

$$10 \cdot Log M_i - H_{1h} + O_i > T_{1h},$$

The variables in the formula are defined as follows:

 M_i is the Timeslot ISCP of the currently evaluated cell *i* expressed in mW

 O_i is the cell individual offset of the currently evaluated cell i

 T_{1h} is the Threshold for event 1h

 H_{1h} is the hysteresis parameter for the event 1h.

Before any evaluation is done, the Timeslot ISCP expressed in mW is filtered according to subclause 8.6.7.2.

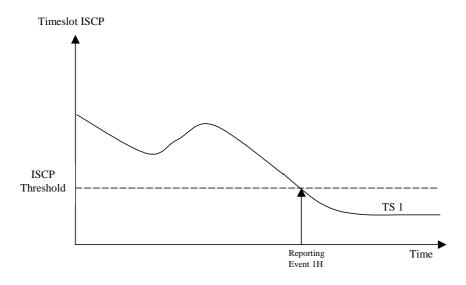


Figure 14.1.3.2-1: An ISCP value of a timeslot drops below an absolute threshold

14.1.3.3 Reporting event 1I: Timeslot ISCP above a certain threshold (TDD)

When event 1i is configured in the UE, the UE shall:

- 1> if equation 1 is fulfilled for a time period indicated by "Time to trigger" and if that P-CCPCH is not included in the IE "cells triggered" in the variable TRIGGERED_1I_EVENT:
 - 2> include that P-CCPCH in the IE "cells triggered" in the variable TRIGGERED_1I_EVENT;
 - 2> send a measurement report with the IEs set as below:
 - 3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1i" and in "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH that triggered the report;
 - 3> include in "measured results" the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1I_EVENT and "additional measured results" according to 8.4.2, not taking into account the cell individual offset for each cell.

- 1> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1I_EVENT:
 - 2> if Equation 2 below is fulfilled for a primary CCPCH:
 - 3> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1I_EVENT:
 - 4> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1I_EVENT.

The UE shall use the equation below for evaluation of reporting event 1i:

Equation 1

$$10 \cdot Log M_i - H_{1i} + O_i > T_{1h},$$

Equation 2

$$10 \cdot Log M_i + H_{1i} + O_i < T_{1h},$$

The variables in the formula are defined as follows:

 M_i is the Timeslot ISCP of the currently evaluated cell i expressed in mW

 O_i is the cell individual offset of the currently evaluated cell i

 T_{Ii} is the Threshold for event 1i

 H_{1i} is the hysteresis parameter for the event 1i.

Before any evaluation is done, the Timeslot ISCP expressed in mW is filtered according to subclause 8.6.7.2.

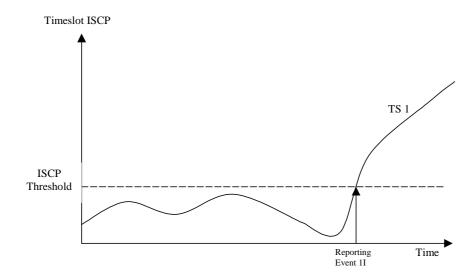


Figure 14.1.3.3-1: An ISCP value of a timeslot exceeds a certain threshold

14.1.4 Event-triggered periodic intra-frequency measurement reports (informative)

14.1.4.1 Cell addition failure (FDD only)

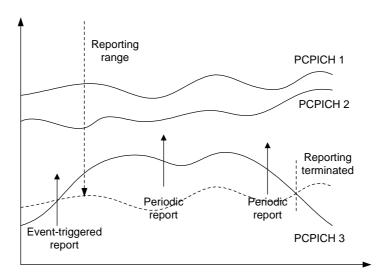


Figure 14.1.4.1-1: Periodic reporting triggered by event 1A

When a cell enters the reporting range and triggers event 1A, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in an update of the active set. However, in some situations the UTRAN may be unable to add a strong cell to the active set typically due to capacity shortage for example.

The UE shall continue reporting after the initial report by reverting to periodical measurement reporting if the reported cell is not added to the active set. This is illustrated in Figure 14.1.4.1-1. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals. The reports shall include reporting information of the cells in the current active set and of the monitored cell(s) in the reporting range.

Event-triggered periodic measurement reporting shall be terminated if:

- 1> there are no longer any monitored cell(s) within the reporting range; or
- 1> the UTRAN has added cells to the active set so that it includes the maximum number of cells (defined by the **reporting deactivation threshold** parameter), which are allowed for event 1A to be triggered; or
- 1> the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the **amount of reporting** parameter).

The reporting period is assigned by the UTRAN (with the **Reporting interval** parameter). If the reporting interval is set to zero event-triggered periodic measurement reporting shall not be applied.

14.1.4.1a Cell removal failure (FDD only)

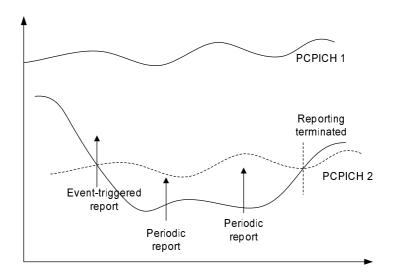


Figure 14.1.4.1a: Periodic reporting triggered by event 1B

When a cell enters the removal range and triggers event 1B, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in the removal of the weakest active cell. If the UTRAN is unable to receive MEASUREMENT REPORT after the maximum retransmission, it is beneficial to receive continuous reports in this case as well.

The UE shall revert to periodical measurement reporting if the UTRAN does not update the active set after the transmission of the measurement report. This is illustrated in Figure 14.1.4.1a. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals.

Event-triggered periodic measurement reporting shall be terminated if:

- 1> there are no longer any monitored cell(s) within the removal range; or
- 1> the UTRAN has removed cells from the active set so that there are no longer the minimum amount of active cells for event 1B to be triggered; or
- 1> the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the "amount of reporting" parameter).

The reporting period is assigned by the UTRAN (with the "Reporting interval" parameter). If the reporting interval is set to zero, event-triggered periodic measurement reporting shall not be applied.

14.1.4.2 Cell replacement failure (FDD only)

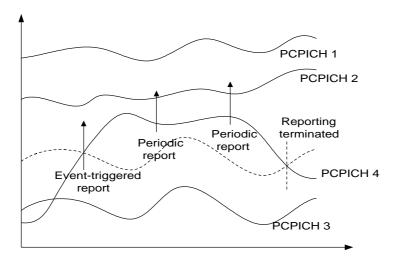


Figure 14.1.4.1-2: Periodic reporting triggered by event 1C

When a cell enters the replacement range and triggers event 1C, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in the replacement of the weakest active cell. If the UTRAN is unable to replace the cell due to for example capacity shortage, it is beneficial to receive continuous reports in this case as well.

The UE shall revert to periodical measurement reporting if the UTRAN does not update the active set after the transmission of the measurement report. This is illustrated in Figure 14.1.4.1-2. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals. The reports shall include reporting information of the cells in the current active set and of the monitored cell(s) in the replacement range.

Event-triggered periodic measurement reporting shall be terminated if:

- 1> there are no longer any monitored cell(s) within the replacement range; or
- 1> the UTRAN has removed cells from the active set so that there are no longer the minimum amount of active cells for event 1C to be triggered (as defined by the **replacement activation threshold** parameter); or
- 1> the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the **amount of reporting** parameter).

The reporting period is assigned by the UTRAN (with the **Reporting interval** parameter). If the reporting interval is set to zero, event-triggered periodic measurement reporting shall not be applied.

14.1.5 Mechanisms available for modifying intra-frequency measurement reporting behaviour (informative)

14.1.5.1 Hysteresis

To limit the amount of event-triggered reports, a hysteresis parameter may be connected with each reporting event given above. The value of the hysteresis is given to the UE in the Reporting criteria field of the Measurement Control message.

In the example in Figure 14.1.5.1-1, the hysteresis ensures that the event 1D (FDD) or IG(TDD) (primary CPICH(FDD)/CCPCH(TDD) 2 becomes the best cell) is not reported until the difference is equal to the hysteresis value. The fact that primary CPICH(FDD)/CCPCH(TDD) 1 becomes best afterwards is not reported at all in the example since the primary CPICH(FDD)/CCPCH(TDD) 1 does not become sufficiently better than the primary CPICH(FDD)/CCPCH(TDD) 2.

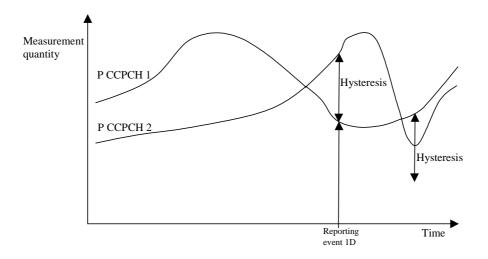


Figure 14.1.5.1-1: Hysteresis limits the amount of measurement reports

14.1.5.2 Time-to-trigger

To limit the measurement signalling load, a time-to-trigger parameter could be connected with each reporting event given above. The value of the time-to-trigger is given to the UE in the Reporting criteria field of the Measurement Control message.

The effect of the time-to-trigger is that the report is triggered only after the conditions for the event have existed for the specified time-to-trigger. In the following FDD example in Figure 14.1.5.2-1, the use of time-to-trigger means that the event (primary CPICH 3 enters the reporting range) is not reported until is has been within the range for the time given by the time-to-trigger parameter.

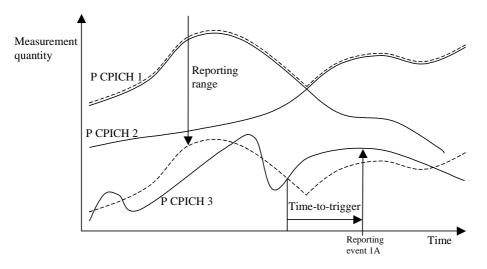


Figure 14.1.5.2-1: Time-to-trigger limits the amount of measurement reports

In the following TDD example in Figure 14.1.5.2-2, the use of time-to-trigger means that the event (Timeslot ISCP upon certain threshold) is not reported until it has been upon the threshold for the time given by the time-to trigger parameter.

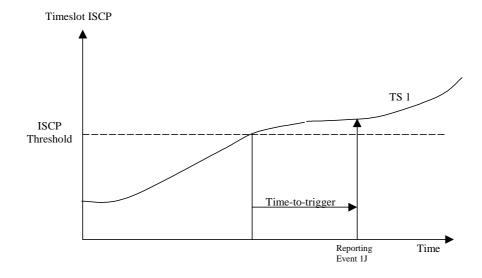


Figure 14.1.5.2-2: Time-to-trigger limits the amount of measurement reports

NOTE: The time-to-trigger could be combined with hysteresis, i.e. a hysteresis value is added to the measurement quantity before evaluating if the time-to-trigger timer should be started.

14.1.5.3 Cell individual offsets

For each cell that is monitored, an offset can be assigned with inband signalling. The offset can be either positive or negative. The offset is added to the measurement quantity before the UE evaluates if an event has occurred. The UE receives the cell individual offsets for each primary CPICH(FDD)/CCPCH(TDD) in the IE "Cell individual offset" included in the IE "Cell info" associated with each measurement object included in the MEASUREMENT CONTROL message.

For the FDD example, in Figure 14.1.5.3-1, since an offset is added to primary CPICH 3, it is the dotted curve that is used to evaluate if an event occurs. Hence, this means that measurement reports from UE to UTRAN are triggered when primary CPICH plus the corresponding offset, i.e. the dotted curve, leaves and enters the reporting range and when it gets better than primary CPICH 1 (if these events have been ordered by UTRAN). This offset mechanism provides the network with an efficient tool to change the reporting of an individual primary CPICH.

By applying a positive offset, as in Figure 14.1.5.3-1, the UE will send measurement reports as if the primary CPICH is offset *x* dB better than what it really is. This could be useful if the operator knows that a specific cell is interesting to monitor more carefully, even though it is not so good for the moment. In the example in Figure 14.1.5.3-1, the operator might know by experience that in this area primary CPICH 3 can become good very quickly (e.g. due to street corners) and therefore that it is worth reporting more intensively. Depending on the implemented handover evaluation algorithm, this may result in the cell with primary CPICH 3 being included in the active set earlier than would have been the case without the positive offset.

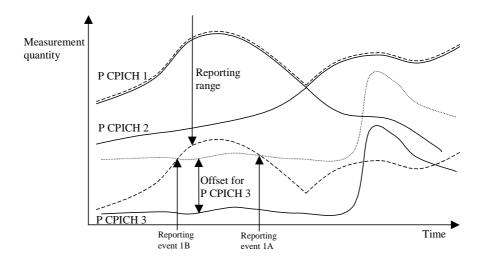


Figure 14.1.5.3-1: A positive offset is applied to primary CPICH 3 before event evaluation in the UE

For the TDD example, in Figure 14.1.5.3-2, an offset is added to primary CCPCH2, it is the dotted curve that is used to evaluate if the primary CCPCH2 becomes better than primary CCPCH1 (ordered by the UTRAN).

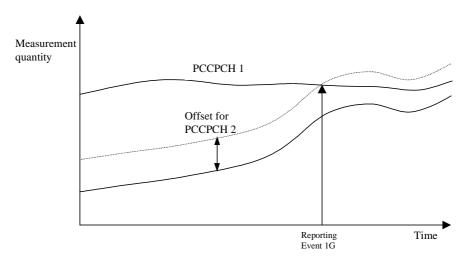


Figure 14.1.5.3-2: A positive offset is applied to primary CCPCH 2

Correspondingly, the operator can choose to apply a negative offset to a primary CCPCH. Then the reporting on that primary CCPCH is limited and the corresponding cell may be, at least temporarily excluded from the active set or as a target cell for handover.

It is important to note that the offset is added before triggering events, i.e. the offset is added by the UE before evaluating if a measurement report should be sent as opposed to offsets that are applied in the network and used for the actual handover evaluation. It should also be noted that the cell individual offset is not used in all measurement reporting events, and that it is not applied to all events in the same way.

14.1.5.4 Forbid a Primary CPICH to affect the reporting range (FDD only)

The reporting range affects the reporting events 1A and 1B presented above. The reporting range is defined as a function of all the Primary CPICHs in the active set (see 14.1.2.1 and 14.1.2.2). If the parameter W is set to 0, the reporting range is defined relative to the best Primary CPICH. However, there could be cases where it is good to forbid a specific Primary CPICH to affect the reporting range. For example in Figure 14.1.5.4-1 the network has requested the UE to not let Primary CPICH 3 affect the reporting range. This mechanism could be effective if the operator knows by experience that the quality of Primary CPICH 3 is very unstable in a specific area and therefore should not affect the reporting of the other Primary CPICHs.

The UE shall ignore that a Primary CPICH is forbidden to affect the reporting range if all of the following conditions are fulfilled:

- the Primary CPICH is included in active set; and
- all cells in active set are defined as Primary CPICHs forbidden to affect the reporting range.

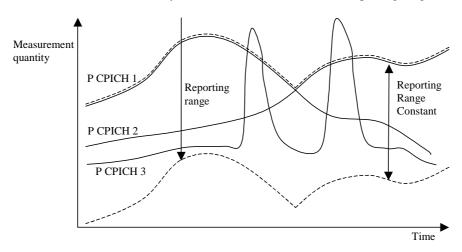


Figure 14.1.5.4-1: Primary CPICH 3 is forbidden to affect the reporting range

14.1.6 Report quantities in intra-frequency measurements

The quantities that the UE shall report to UTRAN when the event is triggered for an intra-frequency measurement are given by the IE "Intra-frequency reporting quantity" stored for this measurement and can be the following:

- 1 SFN-SFN observed time difference
- 2 Cell synchronisation information
- 3 Cell Identity
- 4 Downlink E_c/N₀ (FDD).
- 5 Downlink path loss.

For FDD:

Pathloss in dB = Primary CPICH Tx power - CPICH RSCP.

- For Primary CPICH Tx power the IE "Primary CPICH Tx power" shall be used. The unit is dBm.
- CPICH RSCP is the result of the CPICH RSCP measurement. The unit is dBm.

For TDD:

Pathloss in dB = Primary CCPCH TX power - Primary CCPCH RSCP.

- For Primary CCPCH TX power the IE "Primary CCPCH TX Power" shall be used. The unit is dBm.
- Primary CCPCH RSCP is the result of the Primary CCPCH RSCP measurement. The unit is dBm.

If necessary Pathloss shall be rounded up to the next higher integer.

Results higher than 158 shall be reported as 158.

Results lower than 46 shall be reported as 46.

- 6 Downlink received signal code power (RSCP) after despreading (of a primary CPICH for FDD, and of a primary CCPCH for TDD).
- 7 ISCP measured on Timeslot basis. (TDD)

8 Proposed TGSN (TDD)

A description of those values can be found in [7] and [8].

14.2 Inter-frequency measurements

14.2.0a Inter-frequency measurement quantities

The two first measurement quantities listed below are used by the UE to evaluate whether an inter-frequency measurement event has occurred or not, through the computation of a frequency quality estimate. The quantity to use to compute the frequency quality estimate for an inter-frequency measurement is given in the "Inter-frequency measurement quantity" stored for that measurement.

- 1 Downlink Ec/No (FDD)
- 2 Downlink received signal code power (RSCP) after despreading.
- 3 Downlink path loss.

For FDD:

Pathloss in dB = Primary CPICH Tx power - CPICH RSCP.

- For Primary CPICH Tx power the IE "Primary CPICH Tx power" shall be used. The unit is dBm.
- CPICH RSCP is the result of the CPICH RSCP measurement. The unit is dBm.

For TDD:

Pathloss in dB = Primary CCPCH TX power - Primary CCPCH RSCP.

- For Primary CCPCH TX power the IE "Primary CCPCH TX Power" shall be used. The unit is dBm.
- Primary CCPCH RSCP is the result of the Primary CCPCH RSCP measurement. The unit is dBm.

A description of those values can be found in [7] and [8].

14.2.0b Frequency quality estimate

14.2.0b.1 FDD cells

The frequency quality estimate used in events 2a, 2b 2c, 2d, 2e and 2f is defined as:

$$Q_{\textit{frequency}j} = 10 \cdot Log M_{\textit{frequency}j} = W_{j} \cdot 10 \cdot Log \left(\sum_{i=1}^{N_{A,j}} M_{i,j} \right) + (1 - W_{j}) \cdot 10 \cdot Log M_{\textit{Best }j},$$

The variables in the formula are defined as follows ("the virtual active set on frequency j" should be understood as the active set if frequency j is the used frequency. If frequency j is a non-used frequency, the way the virtual active set is initiated and updated is described in subclause 14.11):

 $Q_{frequency j}$ is the estimated quality of the virtual active set on frequency j.

 $M_{frequency j}$ is the estimated quality of the virtual active set on frequency j.

M_{i i} is a measurement result of cell i in the virtual active set on frequency j.

 $N_{A\,j}$ is the number of cells in the virtual active set on frequency j.

 $M_{Best\,j}$ is the measurement result of the cell in the virtual active set on frequency j with the highest measurement result.

W_i is a parameter sent from UTRAN to UE and used for frequency j.

If the measurement result is CPICH-Ec/No then $M_{Frequency}$, M_{ij} and M_{Best} are expressed as ratios.

If the measurement result is CPICH-RSCP or PCCPCH-RSCP then $M_{Frequency}$, M_{ij} and M_{Best} are expressed in mW.

14.2.0b.2 TDD cells

$$Q_{i, frequency j} = 10 \cdot Log M_{i, frequency j} + O_{i, j}$$

 $Q_{i,frequencyj}$ is the estimated quality of cell i on frequency j.

M_{frequency j} is the measurement result for Primary CCPCH RSCP of cell i on frequency j expressed in mW.

 $O_{i,j}$ is the cell individual offset of the currently evaluated cell i on frequency j. O_{ij} is set by IE "Cell individual offset"

14.2.0c Inter-frequency reporting quantities

The quantities that the UE shall report for each cell to UTRAN when the event is triggered for an inter-frequency measurement is given by the "Inter-frequency reporting quantity" IE stored for this measurement and can be the following, from 1 to 8. The quantity number 9 can be reported for each frequency that triggered the report.

- 1 Cell identity
- 2 SFN-SFN observed time difference
- 3 Cell synchronisation information
- 4 Downlink Ec/No (FDD)
- 5 Downlink path loss.

For FDD:

Pathloss in dB = Primary CPICH Tx power - CPICH RSCP.

- For Primary CPICH Tx power the IE "Primary CPICH Tx power" shall be used. The unit is dBm.
- CPICH RSCP is the result of the CPICH RSCP measurement. The unit is dBm.

For TDD:

Pathloss in dB = Primary CCPCH TX power - Primary CCPCH RSCP.

- For Primary CCPCH TX power the IE "Primary CCPCH TX Power" shall be used. The unit is dBm.
- Primary CCPCH RSCP is the result of the Primary CCPCH RSCP measurement. The unit is dBm.

If necessary Pathloss shall be rounded up to the next higher integer.

Results higher than 158 shall be reported as 158.

Results lower than 46 shall be reported as 46.

- 6 Downlink received signal code power (RSCP) after despreading (of a primary CPICH for FDD, and of a primary CCPCH for TDD).
- 7 ISCP measured on Timeslot basis. (TDD)
- 8 Proposed TGSN (TDD)
- 9 UTRA carrier RSSI

A description of those values can be found in [7] and [8].

14.2.1 Inter-frequency reporting events

Within the measurement reporting criteria field in the MEASUREMENT CONTROL message UTRAN notifies the UE which events should trigger the UE to send a MEASUREMENT REPORT message. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All events are evaluated with respect to one of the measurement quantities given in subclause 14.2.0a. The measurement quantities are measured on the monitored primary common pilot channels (CPICH) in FDD mode and the monitored primary common control channels (PCCPCH) in TDD mode of the cell defined in the measurement object. A "non-used frequency" is a frequency that the UE has been ordered to measure upon but is not used for the connection. A "used frequency" is a frequency that the UE has been ordered to measure upon and is also currently used for the connection.

The "monitored set on non-used frequency" consists of cells in "cells for measurement" (or all cells in CELL_INFO_LIST if "cells for measurement" is not present) that are not part of the virtual active set on that non-used frequency.

When one inter-frequency measurement identity corresponds to multiple inter-frequency events with identical event identities, the UE behaviour is not specified.

14.2.1.1 Event 2a: Change of best frequency.

When event 2a is configured in the UE within a measurement, the UE shall:

- 1> when the measurement is initiated or resumed:
 - 2> store the used frequency in the variable BEST_FREQUENCY_2A_EVENT.
- 1> if equation 1 below has been fulfilled for a time period indicated by "Time to trigger" for a frequency included for that event and which is not stored in the variable BEST_FREQUENCY_2A_EVENT:
 - 2> send a measurement report with IEs set as below:
 - 3> set in "inter-frequency measurement event results":
 - 4> "inter-frequency event identity" to "2a"; and
 - 4> "Frequency info" to the frequency that triggered the event; and
 - 4> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cells parameters ID" of the best primary CCPCH for TDD cells on that frequency, not taking into account the cell individual offset.
 - 3> if a non-used frequency triggered the measurement report:
 - 4> include in IE "Inter-frequency measured results list" the measured results for the non-used frequency that triggered the event, not taking into account the cell individual offset.
 - 3> if the used frequency triggered the measurement report:
 - 4> do not include the IE "Inter-frequency measured results list" in the measurement report.
 - 3> set the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset;
 - 2> update the variable BEST_FREQUENCY_2A_EVENT with that frequency.

Equation 1:

$$Q_{NotRes} \ge Q_{Rest} + H_{2a}/2$$

The variables in the formula are defined as follows:

 $Q_{Not\ Best}$ is the quality estimate of a frequency not stored the "best frequency" in the variable BEST_FREQUENCY_2A_EVENT.

 Q_{Best} is the quality estimate of the frequency stored in "best frequency" in the variable BEST_FREQUENCY_2A_EVENT.

 H_{2a} is the hysteresis parameter for the event 2a in that measurement.

14.2.1.2 Event 2b: The estimated quality of the currently used frequency is below a certain threshold **and** the estimated quality of a non-used frequency is above a certain threshold.

When an inter-frequency measurement configuring event 2b is set up, the UE shall:

- 1> create a variable TRIGGERED_2B_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 2b is configured in the UE within a measurement, the UE shall:

- 1> if equations 1 and 2 below have been fulfilled for a time period indicated by "Time to Trigger" from the same instant, respectively for one or several non-used frequencies included for that event and for the used frequency:
 - 2> if any of those non-used frequency is not stored in the variable TRIGGERED_2B_EVENT:
 - 3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2B_EVENT into that variable;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "inter-frequency measurement event results":
 - 5> "inter-frequency event identity" to "2b"; and
 - 5> for each non-used frequency that triggered the event, beginning with the best frequency:
 - 6> "Frequency info" to that non-used frequency; and
 - 6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset.
 - 4> include in IE "Inter-frequency measured results list" the measured results for each non-used frequency that triggered the event, not taking into account the cell individual offset;
 - 4> set the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset.
- 1> if equation 3 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2B_EVENT:
 - 2> remove that non-used frequency from the variable TRIGGERED_2B_EVENT.
- 1> if equation 4 below is fulfilled for the used frequency:
 - 2> clear the variable TRIGGERED_2B_EVENT.

Triggering conditions:

Equation 1:

$$Q_{Nonused} \ge T_{Nonused} + H_{2b}/2$$

The variables in the formula are defined as follows:

 $Q_{Non used}$ is the quality estimate of a non-used frequency that becomes better than an absolute threshold.

 $T_{Non used 2b}$ is the absolute threshold that applies for this non-used frequency in that measurement.

 H_{2b} is the hysteresis parameter for the event 2b.

Equation 2:

$$Q_{Used} \leq T_{Usedb} - H_{2b}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used 2b}$ is the absolute threshold that applies for the used frequency in that measurement.

 H_{2b} is the hysteresis parameter for the event 2b.

Leaving triggered state condition:

Equation 3:

$$Q_{Nonused} < T_{Nonused} - H_{2b}/2$$

The variables in the formula are defined as follows:

 $Q_{Non used}$ is the quality estimate of a non-used frequency that is stored in the variable TRIGGERED_2B_EVENT.

 $T_{Non used 2b}$ is the absolute threshold that applies for this non-used frequency in that measurement.

 H_{2b} is the hysteresis parameter for the event 2b.

Equation 4:

$$Q_{Used} > T_{Usedb} + H_{2b}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used\ 2b}$ is the absolute threshold that applies for the used frequency in that measurement.

 H_{2b} is the hysteresis parameter for the event 2b.

14.2.1.3 Event 2c: The estimated quality of a non-used frequency is above a certain threshold

When an inter-frequency measurement configuring event 2c is set up, the UE shall:

- 1> create a variable TRIGGERED_2C_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 2c is configured in the UE within a measurement, the UE shall:

- 1> if equation 1 below has been fulfilled for one or several non-used frequencies included for that event during the time "Time to trigger":
 - 2> if any of those non-used frequencies is not stored in the variable TRIGGERED_2C_EVENT:
 - 3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2C_EVENT into that variable;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "inter-frequency measurement event results":
 - 5> "inter-frequency event identity" to "2c"; and

- 5> for each non-used frequency that triggered the event, beginning with the best frequency:
 - 6> "Frequency info" to that non-used frequency; and
 - 6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset.
- 4> include in IE "Inter-frequency measured results list" the measured results for each non-used frequency that triggered the event, not taking into account the cell individual offset;
- 4> set the IE "additional measured results" according to subclause 8.4.2 not taking into account the cell individual offset.
- 1> if equation 2 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2C_EVENT:
 - 2> remove that non-used frequency from the variable TRIGGERED_2C_EVENT.

Equation 1:

$$Q_{Nonused2c} + H_{2c}/2$$

The variables in the formula are defined as follows:

 $Q_{Non\ used}$ is the quality estimate of a non-used frequency that becomes better than an absolute threshold.

 $T_{Non used 2c}$ is the absolute threshold that applies for this non-used frequency in that measurement.

 H_{2c} is the hysteresis parameter for the event 2c.

Leaving triggered state condition:

Equation 2:

$$Q_{Nomsed} < T_{Nomsedic} - H_{2c}/2$$

The variables in the formula are defined as follows:

 $Q_{Non\ used}$ is the quality estimate of a non-used frequency stored in the variable TRIGGERED_2C_EVENT.

 $T_{Non\ used\ 2c}$ is the absolute threshold that applies for this non-used frequency in that measurement.

 H_{2c} is the hysteresis parameter for the event 2c.

14.2.1.4 Event 2d: The estimated quality of the currently used frequency is below a certain threshold

A UE shall be able to perform this measurement and the corresponding event reporting without requiring compressed mode.

When an inter-frequency measurement configuring event 2d is set up, the UE shall:

- 1> create a variable TRIGGERED_2D_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

When event 2d is configured in the UE within a measurement, the UE shall:

- 1> if equation 1 below has been fulfilled for the used frequency during the time "Time to trigger":
 - 2> if the variable TRIGGERED_2D_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED 2D EVENT to TRUE;

- 3> send a measurement report with IEs set as below:
 - 4> set in "inter-frequency event results": "inter-frequency event identity" to "2d" and no IE "Inter-frequency cells", not taking into account the cell individual offset;
 - 4> include in IE "Inter-frequency measured results list" the measured results for the used frequency, not taking into account the cell individual offset;
 - 4> set the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset.
- 1> if the variable TRIGGERED 2D EVENT is set to TRUE and if equation 2 is fulfilled for the used frequency:
 - 2> set the variable TRIGGERED_2D_EVENT to FALSE.

Equation 1:

$$Q_{lsed} \leq T_{llsedd} - H_{2d}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used\ 2d}$ is the absolute threshold that applies for the used frequency and event 2d.

 H_{2d} is the hysteresis parameter for the event 2d.

Leaving triggered state condition:

Equation 2:

$$Q_{lsed} > T_{llsedd} + H_{2d}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used\ 2d}$ is the absolute threshold that applies for the used frequency and event 2d.

 H_{2d} is the hysteresis parameter for the event 2d.

14.2.1.5 Event 2e: The estimated quality of a non-used frequency is below a certain threshold

When an inter-frequency measurement configuring event 2e is set up, the UE shall:

- 1> create a variable TRIGGERED_2E_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 2e is configured in the UE within a measurement, the UE shall:

- 1> if equation 1 below has been fulfilled for one or several non-used frequencies included for that event during the time "Time to trigger":
 - 2> if any of those non-used frequencies is not stored in the variable TRIGGERED_2E_EVENT:
 - 3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2E_EVENT into that variable;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "inter-frequency measurement event results":

- 5> "inter-frequency event identity" to "2e"; and
- 5> for each non-used frequency that triggered the event, beginning with the best frequency:
 - 6> "Frequency info" to that non-used frequency; and
 - 6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset.
 - 4> include in the IE "Inter-frequency measured results list" the measured results for each non-used frequency that triggered the event, not taking into account the cell individual offset;
- 4> set the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset.
- 1> if equation 2 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2E_EVENT:
 - 2> remove that non-used frequency from the variable TRIGGERED_2E_EVENT.

Equation 1:

$$Q_{Nonused} \leq T_{Nonusede} - H_{2e}/2$$

The variables in the formula are defined as follows:

 $Q_{Non used}$ is the quality estimate of a non-used frequency that becomes worse than an absolute threshold.

 $T_{Non\ used\ 2e}$ is the absolute threshold that applies for that non-used frequency for that event.

 H_{2e} is the hysteresis parameter for the event 2e.

Leaving triggered state condition:

Equation 2:

$$Q_{Nonused} > T_{Nonused} + H_{2e}/2$$

The variables in the formula are defined as follows:

Q_{Non used} is the quality estimate of a non-used frequency stored in the variable TRIGGERED_2E_EVENT.

 $T_{Non \, used \, 2e}$ is the absolute threshold that applies for that non-used frequency for that event.

 H_{2e} is the hysteresis parameter for the event 2e.

14.2.1.6 Event 2 f: The estimated quality of the currently used frequency is above a certain threshold

A UE shall be able to perform this measurement and the corresponding event reporting without requiring compressed mode.

When an inter-frequency measurement configuring event 2f is set up, the UE shall:

- 1> create a variable TRIGGERED_2F_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

When event 2f is configured in the UE within a measurement, the UE shall:

- 1> if equation 1 below has been fulfilled for the used frequency during the time "Time to trigger":
 - 2> if the variable TRIGGERED_2F_EVENT is set to FALSE:

- 3> set the variable TRIGGERED_2F_EVENT to TRUE;
- 3> send a measurement report with IEs set as below:
 - 4> set in "inter-frequency event results": "inter-frequency event identity" to "2f", and no IE "Inter-frequency cells";
 - 4> include in IE "Inter-frequency measured results list" the measured results for the used frequency, not taking into account the cell individual offset;
 - 4> set the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset.
- 1> if the variable TRIGGERED_2F_EVENT is set to TRUE and if equation 2 is fulfilled for the used frequency:
 - 2> set the variable TRIGGERED_2F_EVENT to FALSE.

Equation 1:

$$Q_{Used} \ge T_{Used} + H_{2f}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used\ 2f}$ is the absolute threshold that applies for the used frequency and event 2f.

 H_{2f} is the hysteresis parameter for the event 2f.

Leaving triggered state condition:

Equation 2:

$$Q_{U_{Sed}} < T_{U_{Sed}} - H_{2f}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used frequency.

 $T_{Used\ 2f}$ is the absolute threshold that applies for the used frequency and event 2f.

 H_{2f} is the hysteresis parameter for the event 2f.

14.3 Inter-RAT measurements

14.3.0a Inter-RAT measurement quantities

A measurement quantity is used by the UE to evaluate whether an inter-RAT measurement event has occurred or not.

The measurement quantity for UTRAN is used to compute the frequency quality estimate for the active set, as described in the next subclause, and can be:

- 1 Downlink Ec/No.
- 2 Downlink received signal code power (RSCP) after despreading.

The measurement quantity for GSM can be:

1 GSM Carrier RSSI

A description of those values can be found in [7] and [8].

14.3.0b Frequency quality estimate of the UTRAN frequency

The estimated quality of the active set in UTRAN in event 3a is defined as:

$$Q_{UTRAN} = 10 \cdot LogM_{UTRAN} = W \cdot 10 \cdot Log\left(\sum_{i=1}^{N_A} M_i\right) + (1 - W) \cdot 10 \cdot LogM_{Best},$$

The variables in the formula are defined as follows:

 Q_{UTRAN} is the estimated quality of the active set on the currently used UTRAN frequency.

M_{UTRAN} is the estimated quality of the active set on currently used UTRAN frequency expressed in another unit.

 M_i is the measurement result of cell i in the active set, according to what is indicated in the IE "Measurement quantity for UTRAN quality estimate".

N_A is the number of cells in the active set.

M_{Best} is the measurement result of the cell in the active set with the highest measurement result.

W is a parameter sent from UTRAN to UE.

If the measurement result is CPICH-Ec/No M_{UTRAN} , M_i and M_{Best} are expressed as ratios.

If the measurement result is CPICH-RSCP or PCCPCH-RSCP, M_{UTRAN} , M_i and M_{Best} are expressed in mW.

14.3.0c Inter-RAT reporting quantities

The quantities that the UE shall report to UTRAN when the event is triggered for an inter-RAT measurement are given by the IE "Inter-RAT reporting quantity" stored for that measurement, and can be the following:

In the case the other RAT is GSM:

1 GSM carrier RSSI

A description of those values can be found in [7] and [8].

14.3.1 Inter-RAT reporting events

Within the measurement reporting criteria field in the MEASUREMENT CONTROL message the UTRAN notifies the UE which events should trigger the UE to send a MEASUREMENT REPORT message. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All events are measured with respect to one of the measurement quantities given in subclause 14.3.0a, and of the frequency quality estimate given in subclause 14.3.0b. For UTRAN the measurement quantities are measured on the monitored primary common pilot channels (CPICH) in FDD mode and the monitored primary common control channels (PCCPCH) in TDD mode of the cell defined in the measurement object. For other RATs the measurement quantities are system-specific. A "used UTRAN frequency" is a frequency that the UE have been ordered to measure upon and is also currently used for the connection to UTRAN. "Other system" is e.g. GSM.

In the text below describing the events:

- "The BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement" shall be understood as the BCCH ARFCN and BSIC combinations of the inter-RAT cells pointed at in the IE "Cells for measurement" if it has been received for that inter-RAT measurement, or otherwise of the cells included in the "inter-RAT cell info" part of the variable CELL_INFO LIST.
- "The BCCH ARFCNs considered in that inter-RAT measurement" shall be understood as the BCCH ARFCNs of
 the inter-RAT cells pointed at in the IE "Cells for measurement" if it has been received for that inter-RAT
 measurement, or otherwise of the cells included in the "inter-RAT cell info" part of the variable CELL_INFO
 LIST.

When one inter-RAT measurement identity corresponds to multiple inter-RAT events with identical event identities, the UE behaviour is not specified.

14.3.1.1 Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain threshold **and** the estimated quality of the other system is above a certain threshold.

When an inter-RAT measurement configuring event 3a is set up, the UE shall:

- 1> create a variable TRIGGERED 3A EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 3a is configured in the UE within a measurement, the UE shall:

- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":
 - 2> if equations 1 and 2 below have both been fulfilled for a time period indicated by "Time to trigger" from the same instant, respectively for the used UTRAN frequency and for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:
 - 3> if the Inter-RAT cell id of any of those GSM cells is not stored in the variable TRIGGERED_3A_EVENT:
 - 4> store the Inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3A_EVENT into that variable.
 - 4> send a measurement report with IEs set as below:
 - 5> in "inter-RAT measurement event result": "inter-RAT event identity" to "3a", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;
 - 5> "measured results" and possible "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 4 is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3A_EVENT:
 - 3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3A_EVENT.
 - 2> if equation 3 is fulfilled for the used frequency in UTRAN:
 - 3> clear the variable TRIGGERED 3A EVENT.
- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":
 - 2> if equations 1 and 2 below have been fulfilled for a time period indicated by "Time to trigger" from the same instant, respectively for the used UTRAN frequency and for one or several BCCH ARFCNs considered in that inter-RAT measurement:
 - 3> if any of those BCCH ARFCNs is not stored into the variable TRIGGERED_3A_EVENT:
 - 4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3A_EVENT into that variable;
 - 4> send a measurement report with IEs set as below:
 - 5> in "inter-RAT measurement event result": "inter-RAT event identity" to "3a", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;
 - 5> "measured results" and possible "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 4 is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3A_EVENT:

3> remove that BCCH ARFCN from the variable TRIGGERED_3A_EVENT.

2> if equation 3 is fulfilled for the used frequency in UTRAN:

3> clear the variable TRIGGERED_3A_EVENT.

Triggering conditions:

Equation 1:

$$Q_{lsed} \leq T_{llsed} - H_{3a}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used UTRAN frequency.

 T_{Used} is the absolute threshold that applies for the used frequency in that measurement.

 H_{3a} is the hysteresis parameter for event 3a.

Equation 2:

$$M_{OtherRAT} + CIQ_{theRAT} \ge T_{OtherRAT} + H_{3a}/2$$

The variables in the formula are defined as follows:

 $M_{Other\,RAT}$ is the measurement quantity for the cell of the other system.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\,RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3a} is the hysteresis parameter for event 3a.

Leaving triggered state conditions:

Equation 3:

$$Q_{Used} > T_{Used} + H_{3a}/2$$

The variables in the formula are defined as follows:

 Q_{Used} is the quality estimate of the used UTRAN frequency.

 T_{Used} is the absolute threshold that applies for the used frequency in that measurement.

 H_{3a} is the hysteresis parameter for event 3a.

Equation 4:

$$M_{OtherRAT} + CIQ_{theRAT} < T_{OtherRAT} - H_{3a}/2$$

The variables in the formula are defined as follows:

 $M_{Other\,RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\,RAT}$ is expressed in dBm.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3a} is the hysteresis parameter for event 3a.

14.3.1.2 Event 3b: The estimated quality of other system is below a certain threshold

When an inter-RAT measurement configuring event 3b is set up, the UE shall:

- 1> create a variable TRIGGERED_3B_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 3b is configured in the UE within a measurement, the UE shall:

- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":
 - 2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:
 - 3> if the inter-RAT cell id of any of those GSM cell is not stored in the variable TRIGGERED_3B_EVENT:
 - 4> store the inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3B_EVENT into that variable;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3b", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (worst one first), taking into account the cell individual offset of the GSM cells;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 2 below is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3B_EVENT:
 - 3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3B_EVENT.
- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":
 - 2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several of the BCCH ARFCNs considered in that inter-RAT measurement:
 - 3> if any of those BCCH ARFCN is not stored into the variable TRIGGERED_3B_EVENT:
 - 4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3B_EVENT into that variable;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3b", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (worst one first), taking into account the cell individual offset of the GSM cells;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 2 below is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3B_EVENT:
 - 3> remove that BCCH ARFCN from the variable TRIGGERED_3B_EVENT.

Triggering condition:

Equation 1:

$$M_{OtherRAT} + CIQ_{therRAT} \le T_{OtherRAT} - H_{3b}/2$$

The variables in the formula are defined as follows:

 $M_{Other\ RAT}$ is the measurement quantity for the cell of the other system.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3b} is the hysteresis parameter for event 3b.

Leaving triggered state condition:

Equation 2:

$$M_{OtherRAT} + CIQ_{therRAT} > T_{OtherRAT} + H_{3b}/2$$

The variables in the formula are defined as follows:

 $M_{Other\ RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\ RAT}$ is expressed in dBm.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3b} is the hysteresis parameter for event 3b.

14.3.1.3 Event 3c: The estimated quality of other system is above a certain threshold

When an inter-RAT measurement configuring event 3c is set up, the UE shall:

- 1> create a variable TRIGGERED_3C_EVENT related to that measurement, which shall initially be empty;
- 1> delete this variable when the measurement is released.

When event 3c is configured in the UE within a measurement, the UE shall:

- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":
 - 2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:
 - 3> if the inter-RAT cell id of any of those GSM cell is not stored in the variable TRIGGERED_3C_EVENT:
 - 4> store the Inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3C_EVENT into that variable;
 - 4> send a measurement report with IEs set as below:
 - 5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3c", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 2 below is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3C_EVENT:
 - 3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3C_EVENT.
- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":
 - 2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several of the BCCH ARFCNs considered in that inter-RAT measurement:
 - 3> if any of those BCCH ARFCN is not stored into the variable TRIGGERED_3C_EVENT:

- 4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3C_EVENT into that variable;
- 4> send a measurement report with IEs set as below:
 - 5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3c", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;
 - 5> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
- 2> if equation 2 is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3C_EVENT:
 - 3> remove that BCCH ARFCN from the variable TRIGGERED_3C_EVENT.

Equation 1:

$$M_{Other\,RAT} + CIQ_{ther\,RAT} \ge T_{Other\,RAT} + H_{3c}/2$$

The variables in the formula are defined as follows:

 $M_{Other\ RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\ RAT}$ is expressed in dBm.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3c} is the hysteresis parameter for event 3c.

Leaving triggered state condition:

Equation 2:

$$M_{OtherRAT} + CIQ_{therRAT} < T_{OtherRAT} - H_{3c}/2$$

The variables in the formula are defined as follows:

 $M_{Other\,RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\,RAT}$ is expressed in dBm.

CIO_{Other RAT} is the cell individual offset for the cell of the other system.

 $T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

 H_{3c} is the hysteresis parameter for event 3c.

14.3.1.4 Event 3d: Change of best cell in other system

When an inter-RAT measurement configuring event 3d is set up, the UE shall:

1> create a variable BEST_CELL_3D_EVENT related to that measurement;

1> delete this variable when the measurement is released.

When event 3d is configured in the UE within a measurement, the UE shall:

- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":
 - 2> when the measurement is initiated or resumed:
 - 3> store in the variable BEST_CELL_3D_EVENT the Inter-RAT cell id of the GSM cell that has the best measured quantity among the GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement, not taking into account the cell individual offset of the GSM cells;
 - 3> send a measurement report with IE set as below:
 - 4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cell that is stored in the variable BEST CELL 3D EVENT;
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 1 has been fulfilled for a time period indicated by "time to trigger" for a GSM cell that is different from the one stored in BEST_CELL_3D_EVENT and that matches any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:
 - 3> store the Inter-RAT cell id of that GSM cell in the variable BEST_CELL_3D_EVENT;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cell is now stored in BEST_CELL_3D_EVENT;
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
- 1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":
 - 2> when the measurement is initiated or resumed:
 - 3> store in the variable BEST_CELL_3D_EVENT the BCCH ARFCN of the GSM cell that has the best measured quantity among the BCCH ARFCNs considered in that inter-RAT measurement;
 - 3> send a measurement report with IE set as below:
 - 4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to the BCH ARFCN that is stored in the variable BEST_CELL_3D_EVENT;
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.
 - 2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one of the BCCH ARFCNs considered in that inter-RAT measurement and different from the one stored in BEST_CELL_3D_EVENT:
 - 3> store the BCCH ARFCN of that GSM cell in the variable BEST_CELL_3D_EVENT;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to the BCCH ARFCN that is now stored in the variable BEST_CELL_3D_EVENT;
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset.

Equation 1:

$$M_{New} \ge M_{Rest} + H_{3d}/2$$

The variables in the formula are defined as follows:

 M_{New} is the measurement quantity for a GSM cell that is not stored in the variable BEST_CELL_3D_EVENT.

 M_{Best} is the measurement quantity for a GSM cell that is stored in the variable BEST_CELL_3D_EVENT.

 H_{3d} is the hysteresis parameter for event 3d.

14.3.2 GSM measurements in compressed mode

14.3.2.1 GSM RSSI measurements

The UE shall perform GSM RSSI measurements in the gaps of compressed mode pattern sequence specified for GSM RSSI measurement purpose.

14.3.2.2 Initial BSIC identification

The UE shall perform Initial BSIC identification in compressed mode pattern sequence specified for Initial BSIC identification measurement purpose.

The parameter "N identify abort" in the IE "DPCH compressed mode info" indicates the maximum number of patterns that the UE shall use to attempt to decode the unknown BSIC of the GSM cell in the initial BSIC identification procedure.

The BSIC identification procedure is defined in detail in [19].

14.3.2.3 BSIC re-confirmation

The UE shall perform BSIC re-confirmation in compressed mode pattern sequence specified for BSIC re-confirmation measurement purpose.

The parameter "T reconfirm abort" in the IE "DPCH compressed mode info" indicates the maximum time allowed for the re-confirmation of the BSIC of one GSM cell in the BSIC re-confirmation procedure.

The BSIC re-confirmation procedure is defined in detail in [19].

14.4 Traffic Volume Measurements

14.4.1 Traffic Volume Measurement Quantity

Traffic volume measurements may be configured by RRC to assist with dynamic radio bearer control. The reported quantities that can be configured are:

- 1 Buffer Occupancy.
- 2 Average of Buffer Occupancy.
- 3 Variance of Buffer Occupancy.

A description of these values can be found in [15].

When a report is triggered, the UE shall provide the requested quantities for the acknowledged and unacknowledged mode RBs mapped onto the transport channels identified.

When the RLC buffer payload, Average of RLC buffer payload or Variance of RLC buffer payload is reported, the measured quantity shall be rounded upwards to the closest higher value possible to report.

14.4.2 Traffic Volume reporting triggers

Traffic volume measurement reports can be triggered using two different mechanisms, periodical and event triggered. The reporting criteria are specified in the measurement control message.

All the specified events are evaluated with respect to the Transport Channel Traffic Volume (TCTV). This quantity is equal to the sum of the Buffer Occupancy for all logical channels mapped onto a transport channel. The events on a given transport channel shall be evaluated at least at every TTI (may be more often) as described in [15].

When one traffic volume measurement identity corresponds to multiple traffic volume events with identical event identities for the same transport channel, the UE behaviour is not specified.

When a traffic volume measurement is set up, the UE shall:

- 1> if the IE "report criteria" is set to "Traffic volume measurement reporting criteria":
 - 2> for each IE "Parameters sent for each transport channel":
 - 3> if the IE "Uplink transport channel type" is not included; or
 - 3> if the IE "Uplink Transport Channel Type" has the value "DCH" or "USCH" and the IE "UL transport channel id" is not included:
 - 4> for each IE "Parameters required for each Event":
 - 5> for each uplink transport channel on which the UE is supposed to report (see below):
 - 6> configure an event trigger defined by the values in the IEs "Measurement Identity", "Traffic volume event identity", "Reporting threshold", "Time to trigger", "Pending time after trigger" and "Tx Interruption after trigger".
 - 3> else:
 - 4> for each IE "Parameters required for each Event":
 - 5> for the uplink transport channel defined by the IEs "Uplink transport channel type" and "UL transport channel id":
 - 6> configure an event trigger defined by the values in the IEs "Measurement Identity", "Traffic volume event identity", "Reporting threshold", "Time to trigger", "Pending time after trigger" and "Tx Interruption after trigger".

1> else:

- 2> if the IE "report criteria" is set to "Periodical reporting criteria":
 - 2> configure periodical triggers with period equal to the value in the IE "Reporting Interval" and with number of transmissions equal to the value in the IE "Amount of reporting" for the measurement identified by the IE "Measurement Identity".

For each transport channel for which an event trigger has been configured, the UE shall:

- 1> for each event configured for this transport channel:
 - 2> if the TCTV is larger than the threshold in IE "Reporting threshold" at TVM setup or modify; or
 - 2> if the TCTV becomes larger than the threshold in IE "Reporting threshold" while the event is configured:
 - 3> if the IE "Traffic volume event identity" has value "4a":
 - 4> if the IE "Time to trigger" is not present; and
 - 4> if the Pending-time-after-trigger timer for this event is not active:
 - 5> if the IE "Pending time after trigger" is included:
 - 6> start the Pending-time-after-trigger timer for this event with the value in this IE.

- 5> trigger a report for the measurement identified by the IE "Measurement Identity".
- 4> else:
 - 5> start the Time-to-trigger timer for this event with the value in the IE "Time to trigger".
- 3> if the IE "Traffic volume event identity" has value "4b":
 - 4> if the Time-to-trigger timer for this event is active:
 - 5> stop this timer.
- 2> if the TCTV is smaller than the threshold in IE "Reporting threshold" at TVM setup or modify; or
- 2> if the TCTV becomes smaller than the threshold in IE "Reporting threshold" while the event is configured:
 - 3> if the IE "Traffic volume event identity" has value "4a":
 - 4> if the Time-to-trigger timer for this event is active:
 - 5> stop this timer.
 - 3> if the IE "Traffic volume event identity" has value "4b":
 - 4> if the IE "Time to trigger" is not present; and
 - 4> if the Pending-time-after-trigger timer for this event is not active:
 - 5> if the IE "Pending time after trigger" is included:
 - 6> start the Pending-time-after-trigger timer for this event with the value in this IE.
 - 5> trigger a report for the measurement identified by the IE "Measurement Identity".
 - 4> else:
 - 5> start the Time-to-trigger timer for this event with the value in the IE "Time to trigger".

When the Time-to-trigger timer for an event elapses:

- 1> if the Pending-time-after-trigger timer for this event is not active:
 - 2> trigger a report for the measurement identified by the IE "Measurement Identity" corresponding to this event;
 - 2> if the IE "Pending time after trigger" is included:
 - 3> start the Pending-time-after-trigger timer for this event with the value in this IE.

When the Pending-time-after-trigger for an event elapses:

- 1> if the IE "Traffic volume event identity" has value "4a":
 - 2> if the TCTV is larger than the threshold in IE "Reporting threshold":
 - 3> if the IE "Time to trigger" is not present:
 - 4> trigger a report for the measurement identified by the IE "Measurement Identity" corresponding to this event:
 - 4> start the Pending-time-after-trigger timer for this event with the value in the IE "Pending time after trigger".
 - 3> else:
 - 4> start the Time-to-trigger timer for this event with the value in the IE "Time to trigger".
- 1> if the IE "Traffic volume event identity" has value "4b":
 - 2> if the TCTV is smaller than the threshold in IE "Reporting threshold":

- 3> if the IE "Time to trigger" is not present:
 - 4> trigger a report for the measurement identified by the IE "Measurement Identity" corresponding to this event:
 - 4> start the Pending-time-after-trigger timer for this event with the value in the IE "Pending time after trigger".
- 3> else:
 - 4> start the Time-to-trigger timer for this event with the value in the IE "Time to trigger".

When a periodical trigger elapses, the UE shall:

- 1> trigger a report for the measurement identified by the IE "Measurement Identity";
- 1> if the number of reports triggered by this periodical trigger reaches the value in the IE "Amount of reporting":
 - 2> disable this periodical trigger.

When a report is triggered for a given IE "Measurement Identity", the UE shall:

- 1> consider the variable MEASUREMENT_IDENTITY corresponding to this measurement identity;
- 1> if the report is triggered by an event trigger:
 - 2> include the IE "Event results";
 - 2> set the IE "Uplink transport channel type causing the event" to the type of the transport channel which triggered the report;
 - 2> if the transport channel type is "DCH" or "USCH":
 - 3> include the IE "UL Transport Channel identity" and set it to the identity of the transport channel which triggered the report.
 - 2> else:
 - 3> not include the IE "UL Transport Channel identity".
 - 2> set the IE "Traffic volume event identity" to the identity of the event that triggered the report;
 - 2> if the IE "Tx interruption after trigger" for the event that triggered the report is included:
 - 3> if the UE is in CELL_FACH state:
 - 4> prohibit DTCH transmissions on the RACH;
 - 4> if the Tx interruption timer is not running; or
 - 4> if the Tx interruption timer is running and still has a value larger than the IE "Tx interruption after trigger" for the event, i.e. it was started earlier by another event with a larger value in IE "Tx interruption after trigger":
 - 5> start the Tx interruption timer with the value in the IE "Tx interruption after trigger" for this event.
 - 4> when it receives from the UTRAN a message causing the transition to CELL_DCH state; or
 - 4> when the Tx interruption timer elapses:
 - 5> stop the timer;
 - 5> resume these transmissions.
- 1> if the IE "Traffic volume measurement object" is not included:
 - 2> report on all the uplink transport channels as specified below.

- 1> if the IE "Traffic volume measurement object" is included:
 - 2> report on the uplink transport channels identified in this IE as specified below.
- 1> for each UM or AM RB mapped onto a transport channel on which the UE is expected to report:
 - 2> add an element in the IE "Traffic volume measurement results";
 - 2> set the value of the IE "RB Identity" to the identity of the considered radio bearer;
 - 2> if the RB is mapped onto one logical channel:
 - 3> if the IE "RLC Buffer Payload for each RB" is set to TRUE:
 - 4> include the IE "RLC Buffers Payload" and set it to the Buffer Occupancy value for this logical channel, rounded up to the next allowed value.
 - 3> if the IE "Average of RLC Buffer Payload for each RB" is set to TRUE:
 - 4> include and set the IE "Average of RLC Buffer Payload" to the Buffer Occupancy for this logical channel averaged over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]), rounded up to the next allowed value.
 - 3> if the IE "Variance of RLC Buffer Payload for each RB" is set to TRUE:
 - 4> include and set the IE "Variance of RLC Buffer Payload" to the variance of the Buffer Occupancy for this logical channel computed over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]), rounded up to the next allowed value.
 - 2> if the RB is mapped onto two logical channels:
 - 3> if one logical channel is mapped onto transport channels on which the UE is supposed to report:
 - 4> if the IE "RLC Buffer Payload for each RB" is set to TRUE:
 - 5> include and set the IE "RLC Buffers Payload" to the Buffer Occupancy value for this logical channel, rounded up to the next allowed value.
 - 4> if the IE "Average of RLC Buffer Payload for each RB" is set to TRUE:
 - 5> include and set the IE "Average of RLC Buffer Payload" to the Buffer Occupancy for this logical channel averaged over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]), rounded up to the next allowed value.
 - 4> if the IE "Variance of RLC Buffer Payload for each RB" is set to TRUE:
 - 5> include and set the IE "Variance of RLC Buffer Payload" to the variance of the Buffer Occupancy for this logical channel computed over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]), rounded up to the next allowed value.
 - 3> if both logical channels are mapped onto transport channels on which the UE is supposed to report:
 - 4> if the IE "RLC Buffer Payload for each RB" is set to TRUE:
 - 5> include and set the IE "RLC Buffers Payload" to the sum of the Buffer Occupancy values for the two logical channels, rounded up to the next allowed value.
 - 4> if the IE "Average of RLC Buffer Payload for each RB" is set to TRUE:
 - 5> include and set the IE "Average of RLC Buffer Payload" to the sum of the Buffer Occupancy for the two logical channels averaged over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]) and rounded up to the next allowed value.
 - 4> if the IE "Variance of RLC Buffer Payload for each RB" is set to TRUE:

5> include and set the IE "Variance of RLC Buffer Payload" to the variance of the sum of the Buffer Occupancy for the two logical channels, computed over the interval specified in the IE "Time Interval to take an average or a variance" (see [15]) and rounded up to the next allowed value.

14.4.2.1 Reporting event 4 A: Transport Channel Traffic Volume becomes larger than an absolute threshold

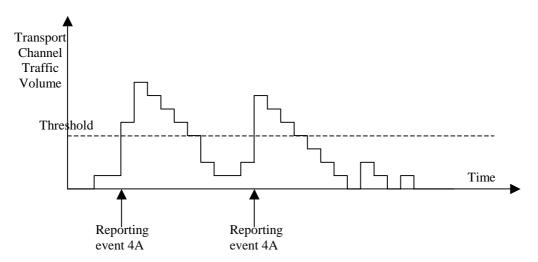


Figure 14.4.2.1-1: Event triggered report when Transport Channel Traffic Volume becomes larger than a certain threshold

If the monitored Transport Channel Traffic Volume (TCTV) [15] is larger than an absolute threshold at TVM setup or modify, or is larger at activation of the monitored transport channel, or becomes larger than an absolute threshold while the event is configured i.e. if TCTV>Reporting threshold, this event could trigger a report. The event could be triggered again only if TCTV becomes smaller than the Reporting threshold and later TCTV>Reporting threshold is verified again.

14.4.2.2 Reporting event 4 B: Transport Channel Traffic Volume becomes smaller than an absolute threshold

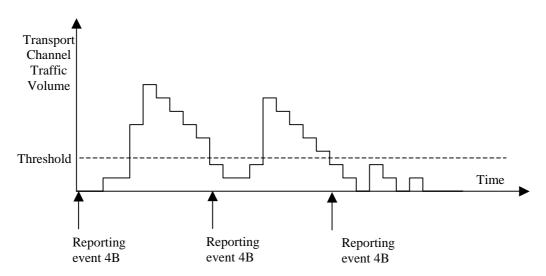


Figure 14.4.2.1-2: Event triggered report when Transport Channel Traffic Volume becomes smaller than certain threshold

If the monitored Transport Channel Traffic Volume (TCTV) [15] is smaller than an absolute threshold at TVM setup or modify, or is smaller at activation of the monitored transport channel, or becomes smaller than an absolute threshold while the event is configured i.e. if TCTV<Reporting threshold, this event could trigger a report. The event could be

triggered again only if TCTV becomes bigger than the Reporting threshold and later TCTV<Reporting threshold is verified again.

14.4.3 Traffic volume reporting mechanisms

Traffic volume measurement triggering could be associated with both a *time-to-trigger* and a *pending time after trigger*. The time-to-trigger is used to get time domain hysteresis, i.e. the condition must be fulfilled during the time-to-trigger time before a report is sent. Pending time after trigger is used to limit consecutive reports when one traffic volume measurement report already has been sent and enables periodic reporting while the TCTV remains above(4a) or below(4b) the threshold. This is described in detail below.

14.4.3.1 Pending time after trigger

This timer is started in the UE when a measurement report has been triggered by a given event. The UE is then forbidden to send new measurement reports triggered by the same event during this time period. Instead the UE waits until the timer has expired. If the Transport Channel Traffic Volume [15] is still above the threshold for event 4a, or below the threshold for event 4b when the timer expires, the UE sends a new measurement report, and the timer is restarted. Otherwise it waits for a new triggering.

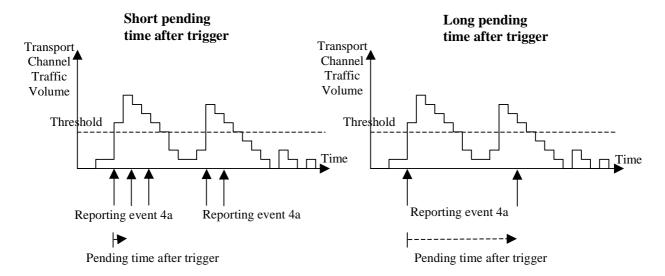


Figure 14.4.3.1-1: Pending time after trigger limits the amount of consecutive measurement reports

Figure 14.4.3.1-1 shows that by increasing the pending time after trigger a triggered second event does not result in a measurement report. The figure assumes absence of the IE "Time to trigger".

14.4.3.2 Time-to-trigger

The timer is started in the UE when the Transport Channel Traffic Volume triggers the event. If the TCTV crosses the threshold before the timer expires, the timer is stopped. If the timer expires then a report is triggered.

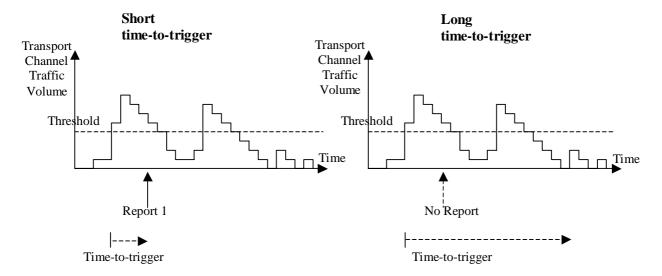


Figure 14.4.3.1-2: Time-to-trigger is used to achieve time hysteresis

Figure 14.4.3.1-2 shows that by increasing the time-to-trigger the report is not triggered.

14.4.4 Interruption of user data transmission

By including the IE "Tx Interruption after trigger", a UE in CELL_FACH state may be instructed by the UTRAN to prohibit transmission of user data on the RACH temporarily after a measurement report has been triggered.

The UE shall only resume transmission of user data, when:

- 1> it receives from the UTRAN a message allocating a dedicated physical channel, leading to the transition to CELL_DCH state; or
- 1> the time period indicated by the IE "Tx Interruption after trigger" elapses.

The transmission on signalling radio bearers shall not be interrupted.

14.5 Quality Measurements

14.5.1 Quality reporting measurement quantities

For quality measurements, the following measurement quantities are used:

- 1. Downlink transport channel BLER
- 2. Timeslot SIR (TDD only)

14.5.2 Quality reporting events

When one measurement identity corresponds to multiple quality events for the same transport channel, the UE behaviour is not specified.

14.5.2.1 Reporting event 5A: A predefined number of bad CRCs is exceeded

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the amount of bad CRCs during a predefined sliding window exceeds a predefined number.

The following three parameters are used in the scheme:

- Total CRC = the length of the sliding window over which the number of bad CRCs are counted.

- **Bad CRC** = the number of bad CRC that is required within the latest "Total CRC" received CRCs for the event to be triggered.
- **Pending after trigger** = a new event can not be triggered until "Pending after trigger" CRCs have been received,

When a DCH is established, the UE shall begin to count the number of bad CRCs within the last "Total CRC" received CRCs. No event can be triggered until at least "Total CRC" CRCs have been received. For each new received CRC, the UE shall compare the number of bad CRCs within the latest "Total CRC" received CRCs with the parameter "Bad CRC". An event shall be triggered if the number of bad CRCs is equal or larger than "Bad CRC".

At the time when the event is triggered a pending time after trigger timer is started with the length of "Pending after trigger" CRCs. A new event can not be triggered until Pending after trigger" CRCs have been received. When Pending after trigger" CRCs have been received the event evaluation start again and a new event can be triggered.

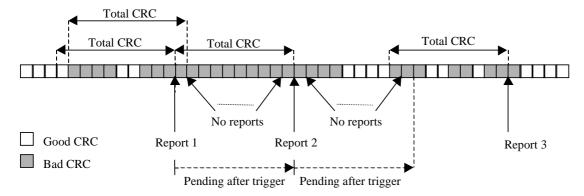


Figure 14.5.2.1-1: Event triggered CRC error reporting

14.6 UE internal measurements

14.6.1 UE internal measurement quantities

For UE internal measurements the following measurement quantities exist:

- 1. UE transmission (Tx) power, for TDD measured on a timeslot basis.
- 2. UE received signal strength power (RSSI).
- 3. UE Rx-Tx time difference (FDD only).
- 4. T_{ADV} (1.28 Mcps TDD).

14.6.2 UE internal measurement reporting events

In the Measurement reporting criteria field in the Measurement Control messages, the UTRAN notifies the UE of which events should trigger a measurement report. UE internal measurement reporting events that can trigger a report are given below. The reporting events are marked with vertical arrows in the figures below. All events can be combined with time-to-trigger.

NOTE: The reporting events are numbered 6A, 6B, 6C,.. where 6 denotes that the event belongs to the type UE internal measurements.

When one measurement identity corresponds to multiple internal events with identical event identities, the UE behaviour is not defined.

14.6.2.1 Reporting event 6A: The UE Tx power becomes larger than an absolute threshold

When a UE internal measurement configuring event 6a is set up, the UE shall:

- 1> create a variable TRIGGERED_6A_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

When this event is ordered by UTRAN in a measurement control message, the UE shall:

- 1> if the UE Tx power (for TDD within a single TS) is greater than the value in IE "UE Transmitted Power Tx power threshold" stored for this event in the variable MEASUREMENT_IDENTITY for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6A_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED_6A_EVENT to TRUE;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6a";
 - 4> set the IE "measured results" and the IE "additional measured results" according to 8.4.2.
- 1> if the variable TRIGGERED_6A_EVENT is set to TRUE and if the UE Tx power (for TDD within a single TS) is less or equal the value in IE "UE Transmitted Power Tx power threshold" stored for this event in the variable MEASUREMENT_IDENTITY:
 - 2> set the variable TRIGGERED_6A_EVENT to FALSE.

14.6.2.2 Reporting event 6B: The UE Tx power becomes less than an absolute threshold

When a UE internal measurement configuring event 6b is set up, the UE shall:

- 1> create a variable TRIGGERED 6B EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

- 1> if the UE Tx power (for TDD within a single TS) is less than the value in IE "UE Transmitted Power Tx power threshold" stored for this event in the variable MEASUREMENT_IDENTITY for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6B_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED_6B_EVENT to TRUE;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6b";
 - 4> set the IE "measured results" and the IE "additional measured results" according to 8.4.2.
- 1> if the variable TRIGGERED_6B_EVENT is set to TRUE and if the UE Tx power (for TDD within a single TS) is greater or equal the value in IE "UE Transmitted Power Tx power threshold" stored for this event in the variable MEASUREMENT_IDENTITY:
 - 2> set the variable TRIGGERED_6B_EVENT to FALSE.

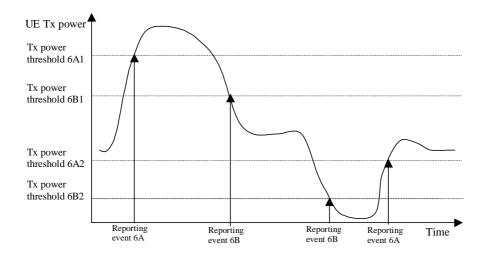


Figure 14.6.2.2-1: Event-triggered measurement reports when the UE Tx power becomes larger or less than absolute thresholds

14.6.2.3 Reporting event 6C: The UE Tx power reaches its minimum value

When a UE internal measurement configuring event 6c is set up, the UE shall:

- 1> create a variable TRIGGERED_6C_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

- 1> if the UE Tx power is equal its minimum value (for TDD its minimum value on a single TS) for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6C_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED_6C_EVENT to TRUE;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6c";
 - 4> set the IE "measured results" and the IE "additional measured results" according to 8.4.2.
- 1> if the variable TRIGGERED_6C_EVENT is set to TRUE and if the UE Tx power is greater than its minimum value:
 - 2> set the variable TRIGGERED_6C_EVENT to FALSE.

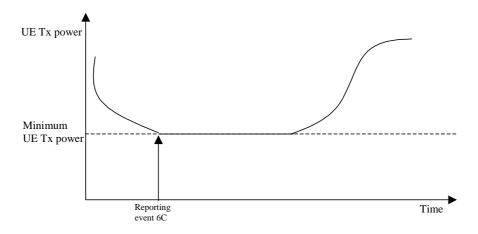


Figure 14.6.2.3-1: Event-triggered measurement report when the UE Tx power reaches its minimum value

14.6.2.4 Reporting event 6D: The UE Tx power reaches its maximum value

When a UE internal measurement configuring event 6d is set up, the UE shall:

- 1> create a variable TRIGGERED_6D_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

When this event is ordered by UTRAN in a measurement control message, the UE shall:

- 1> if the UE Tx power equals the maximum UE TX power (for TDD its maximum value on a single TS) for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6D_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED_6D_EVENT to TRUE;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6d";
 - 4> set the IE "measured results" and the IE "additional measured results" according to 8.4.2.
- 1> if the variable TRIGGERED_6D_EVENT is set to TRUE and if the UE Tx power is less than the maximum UE TX power:
 - 2> set the variable TRIGGERED_6D_EVENT to FALSE.

NOTE: The maximum UE TX power is defined in subclause 8.6.6.8.

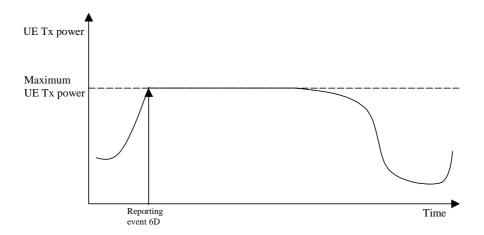


Figure 14.6.2.4-1: Event-triggered report when the UE Tx power reaches its maximum value

14.6.2.5 Reporting event 6E: The UE RSSI reaches the UE's dynamic receiver range

When a UE internal measurement configuring event 6e is set up, the UE shall:

- 1> create a variable TRIGGERED_6E_EVENT related to that measurement, which shall initially be set to FALSE;
- 1> delete this variable when the measurement is released.

When this event is ordered by UTRAN in a measurement control message, the UE shall:

- 1> if the UE RSSI is greater or equal the UE's dynamic receiver range for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6E_EVENT is set to FALSE:
 - 3> set the variable TRIGGERED_6E_EVENT to TRUE;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6e";
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.
- 1> if the variable TRIGGERED_6E_EVENT is set to TRUE and if the UE RSSI is less than the UE's dynamic receiver range:
 - 2> set the variable TRIGGERED_6E_EVENT to FALSE.

14.6.2.6 Reporting event 6F (FDD): The UE Rx-Tx time difference for a RL included in the active set becomes larger than an absolute threshold

When a UE internal measurement configuring event 6f is set up, the UE shall:

- 1> create a variable TRIGGERED_6F_EVENT related to that measurement, which shall initially be set to FALSE for each RL;
- 1> delete this variable when the measurement is released.

- 1> if the UE Rx-Tx time difference for a RL included in the active set is greater than the value in the IE "UE Rx-Tx time difference threshold" stored for this event in the variable MEASUREMENT_IDENTITY for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6F_EVENT is set to FALSE for this RL:

- 3> set the variable TRIGGERED_6F_EVENT to TRUE for this RL;
- 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6f";
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.
- 1> if the variable TRIGGERED_6F_EVENT is set to TRUE for a RL and if the UE RX-Tx time difference for this RL included in the active set is less than or equal to the value in the IE "UE Rx-Tx time difference threshold" stored for this event in the variable MEASUREMENT_IDENTITY:
 - 2> set the variable TRIGGERED_6F_EVENT to FALSE for this RL.

14.6.2.6a Reporting event 6F (1.28 Mcps TDD): The time difference indicated by T_{ADV} becomes larger than an absolute threshold

When a UE internal measurement configuring event 6f is set up, the UE shall:

- 1> create a variable TRIGGERED_6F_EVENT related to that measurement, which shall initially be set to the currently measured T_{ADV};
- 1> delete this variable when the measurement is released.

When this event is ordered by UTRAN in a measurement control message, the UE shall:

- 1> if the absolute value of the difference between the measured T_{ADV} and the T_{ADV} stored in the variable TRIGGERED_6F_EVENT is greater than the predefined threshold configured with the IE "T_{ADV} Threshold" for this event in the variable MEASUREMENT_IDENTITY for a time period indicated by the IE "time_to_trigger":
 - 2> set the variable TRIGGERED_6F_EVENT to the currently measured T_{ADV};
 - 2> send a measurement report with IEs set as below:
 - 3> set the IE " T_{ADV} " to the measured value, and the IE "SFN" to the SFN during which the latest measurement was performed, in the IE " T_{ADV} Info";
 - 3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.

14.6.2.7 Reporting event 6G: The UE Rx-Tx time difference for a RL included in the active set becomes less than an absolute threshold

When a UE internal measurement configuring event 6g is set up, the UE shall:

- 1> create a variable TRIGGERED_6G_EVENT related to that measurement, which shall initially be set to FALSE for each RL:
- 1> delete this variable when the measurement is released.

- 1> if the UE Rx-Tx time difference for a RL included in the active set is less than the value in IE "UE Rx-Tx time difference threshold" stored for this event in the variable MEASUREMENT_IDENTITY for a time period indicated by the IE "time_to_trigger":
 - 2> if the variable TRIGGERED_6G_EVENT is set to FALSE for this RL:
 - 3> set the variable TRIGGERED_6G_EVENT to TRUE for this RL;
 - 3> send a measurement report with IEs set as below:
 - 4> set in "UE internal measurement event results": "UE internal event identity" to "6g";
 - 4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.

1> if the variable TRIGGERED_6G_EVENT is set to TRUE for a RL and if the UE RX-Tx time difference for this RL included in the active set is greater or equal the value in IE "UE Rx-Tx time difference threshold" stored for this event in the variable MEASUREMENT_IDENTITY:

2> set the variable TRIGGERED_6G_EVENT to FALSE for this RL.

14.7 UE positioning measurements

14.7.1 UE positioning measurement quantities

The quantity to measure for UE positioning is dependent on the positioning method and the method type requested in the IE "UE positioning reporting quantity".

- 1 SFN-SFN observed time difference type 2, optional.
- 2 Rx-Tx time difference type 2, optional.
- 3 GPS timing of cell fames, optional.

The definition of other GPS measurements is not within the scope of this specification.

14.7.2 Void

14.7.3 UE positioning reporting events

In the IE "UE positioning reporting criteria" in the Measurement Control messages, the UTRAN notifies the UE of which events should trigger a measurement report. UE positioning reporting events that can trigger a report are given below. The content of the measurement report is dependant on the positioning method and method type requested in the IE "UE positioning reporting quantity" of the Measurement Control message and is described in detail in [18].

When one measurement identity corresponds to multiple positioning events with identical event identities, the UE behaviour is not defined.

14.7.3.1 Reporting Event 7a: The UE position changes more than an absolute threshold

This event is used for UE-based methods only.

- 1> if the UE changes its position compared to the last reported position by more than the threshold defined by the IE "Threshold position change"; or
- 1> if no position has been reported since the event was configured and the UE changes its position compared to the first position estimate obtained after the event was configured by more than the threshold defined by the IE "Threshold position change":
 - 2> send a measurement report as specified in subclause 8.6.7.19.1b;
 - 2> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is greater than zero:
 - 3> decrease IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event by one.
 - 2> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is equal to zero:
 - 3> delete this event from the list of events in variable MEASUREMENT_IDENTITY.
- 1> if the UE is unable to evaluate the event because a position measurement is not available:
 - 2> not send a report.

14.7.3.2 Reporting Event 7b: SFN-SFN measurement changes more than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall:

- 1> send a measurement report when the SFN-SFN time difference measurement type 2 of any measured cell changes more than the threshold defined by the IE "Threshold SFN-SFN change"; and
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE-based":
 - 2> act as specified in subclause 8.6.7.19.1b.
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE-assisted":
 - 2> act as specified in subclause 8.6.7.19.1a.
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE-assisted preferred but UE-based allowed" or "UE-based preferred but UE-assisted allowed":
 - 2> the UE may choose to act according to either subclause 8.6.7.19.1a or 8.6.7.19.1b.
- 1> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is greater than zero:
 - 2> decrease IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event by one.
- 1> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is equal to zero:
 - 2> delete this event from the list of events in variable MEASUREMENT IDENTITY.

14.7.3.3 Reporting Event 7c: GPS time and SFN time have drifted apart more than an absolute threshold

- 1> send a measurement report when the GPS Time Of Week and the SFN timer have drifted apart more than the threshold defined by the IE "Threshold SFN-GPS TOW"; and
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE based":
 - 2> act as specified in subclause 8.6.7.19.1b.
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE assisted":
 - 2> act as specified in subclause 8.6.7.19.1a.
- 1> if UTRAN set IE "Method Type" in "UE positioning reporting quantity" in the MEASUREMENT CONTROL message to "UE assisted preferred but UE based allowed" or "UE based preferred but UE assisted allowed":
 - 2> act as specified in subclause 8.6.7.19.1a or in subclause 8.6.7.19.1b depending on the method type chosen by the UE.
- 1> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is greater than zero:
 - 2> decrease IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event by one.
- 1> if the value of IE "Amount of Reporting" in variable MEASUREMENT_IDENTITY for this event is equal to zero:
 - 2> delete this event from the list of events in variable MEASUREMENT_IDENTITY.

14.8 Void

14.9 Downlink power control

14.9.1 Generalities

This function is implemented in the UE in order to set the SIR target value on each CCTrCH used for the downlink power control. This SIR value shall be adjusted according to an autonomous function in the UE in order to achieve the same measured quality as the quality target set by UTRAN. The quality target is set as the transport channel BLER value for each transport channel as signalled by UTRAN.

When transport channel BLER is used the UE shall run a quality target control loop such that the quality requirement is met for each transport channel, which has been assigned a BLER target.

The UE shall set the SIR target when the physical channel has been set up or reconfigured. It shall not increase the SIR target value before the power control has converged on the current value. The UE may estimate whether the power control has converged on the current value, by comparing the averaged measured SIR to the SIR target value.

NOTE: The power control function for F-DPCH is specified in [29].

14.9.2 Downlink power control in compressed mode

In compressed mode, the target SIR needs to be changed in several frames compared to normal mode. For this purpose, four values DeltaSIR1, DeltaSIRafter1, DeltaSIR2 and DeltaSIRafter2 are signalled by the UTRAN to the UE (see subclause 10.2.9).

For each frame, the target SIR offset during compressed mode, compared to normal mode is:

 $\Delta SIR = max \ (\Delta SIR1_compression, \dots, \Delta SIRn_compression) + \Delta SIR1_coding + \Delta SIR2_coding$

where n is the number of TTI lengths for all TrChs of the CCTrCh, F_i is the length in number of frames of the i-th TTI and where ΔSIR_coding fulfils:

- ΔSIR1_coding= DeltaSIR1 if the start of the first transmission gap in the transmission gap pattern is within the current frame.
- ΔSIR1_coding= DeltaSIRafter1 if the current frame just follows a frame containing the start of the first transmission gap in the transmission gap pattern.
- Δ SIR2_coding= DeltaSIR2 if the start of the second transmission gap in the transmission gap pattern is within the current frame.
- ΔSIR2_coding= DeltaSIRafter2 if the current frame just follows a frame containing the start of the second transmission gap in the transmission gap pattern.
- Δ SIR1_coding= 0 and Δ SIR2_coding= 0 otherwise.

and $\Delta SIRi$ _compression is defined by :

- ΔSIRi_compression = 3 dB for downlink frames compressed by reducing the spreading factor by 2.
- ΔSIRi_compression = 0 dB in all other cases.

Several compressed mode patterns applying to the same frames should be avoided as much as possible.

In case several compressed mode patterns are used simultaneously, a Δ SIR offset is computed for each compressed mode pattern and the sum of all Δ SIR offsets is applied to the frame.

14.10 Calculated Transport Format Combination

The Calculated Transport Format Combination (CTFC) is a tool for efficient signalling of transport format combinations.

Let I be the number of transport channels that are included in the transport format combination. For DCHs, all configured DCHs are included in the transport format combination. Each transport channel TrCH_i, i = 1, 2, ..., I, has L_i transport formats, i.e. the transport format indicator TFI_i can take L_i values, $TFI_i \in \{0,1,2,...,L_i-1\}$.

Define
$$P_i = \prod_{j=0}^{i-1} L_j$$
, where $i = 1, 2, ..., I$, and $L_0 = 1$.

Let $TFC(TFI_1, TFI_2, ..., TFI_l)$ be the transport format combination for which $TrCH_1$ has transport format TFI_1 , $TrCH_2$ has transport format TFI_2 , etc. The corresponding $CTFC(TFI_1, TFI_2, ..., TFI_l)$ is then computed as:

$$CTFC(TFI_1, TFI_2, ..., TFI_I) = \sum_{i=1}^{I} TFI_i \cdot P_i.$$

For FACH and PCH transport channels, "TrCH₁" corresponds to the transport channel listed at the first position in IE "FACH/PCH information" in IE "Secondary CCPCH System Information", "TrCH₂" corresponds to the transport channel listed at the second position in IE "FACH/PCH information" and so on.

For all other transport channels in FDD and for all configured transport channels of the same transport channel type (i.e. DCH, DSCH, USCH) in TDD, "TrCH₁" corresponds to the transport channel having the lowest transport channel identity in the transport format combination mapped to the TFCI field. "TrCH₂" corresponds to the transport channel having the next lowest transport channel identity, and so on.

14.10.1 Default TFCS for MBMS

14.10.1.1 S-CCPCH configuration including a FACH carrying MSCH

In case the S-CCPCH configuration includes a FACH carrying MSCH, the default TFCS is defined according to the following:

Let TrCH 1 be the FACH carrying MSCH, TrCH 2 be the first TrCH carrying MTCH listed in the IE "TrCh information list", TrCH 3 be the second TrCH carrying MTCH listed in the IE "TrCh information list" etc. and let TrCH I be the last TrCH carrying MTCH listed in the IE "TrCh information list".

Each transport channel $TrCH_i$, i = 1, 2, ..., I, has L_i transport formats, i.e. the transport format indicator TFI_i can take L_i values.

Each transport format combination set is defined by the transport formats of each transport channel mapped on this S-CCPCH:

$$TFC = (TFI_1, TFI_2, ..., TFI_I).$$

The "MBMS implicit TFCS" contains then the following set of TFCs:

$$TFCS = \{(0,0,\ldots,0),(0,1,\ldots,0),\ldots,(0,L_2,\ldots,0),(0,0,1,\ldots,0),\ldots,(0,0,L_3,\ldots,0),\ldots,(0,0,0,\ldots,1),\ldots,(0,0,0,\ldots,L_I),\\ (1,0,\ldots,0),(1,1,\ldots,0),\ldots,(1,L_2,\ldots,0),(1,0,1,\ldots,0),\ldots,(1,0,L_3,\ldots,0),\ldots,(1,0,0,\ldots,1),\ldots,(1,0,0,\ldots,L_I),\\ (2,0,\ldots,0),\ldots,(L_1,0,\ldots,0)\}$$

14.10.1.2 S-CCPCH configuration not including a FACH carrying MSCH

In case the S-CCPCH configuration does not include a FACH carrying MSCH, the default TFCS is defined according to the following:

Let TrCH 1 be the first TrCH listed in the IE "TrCh information list", TrCH 2 be the second TrCH listed in the IE "TrCh information list" etc. and let TrCH I be the last TrCH listed in the IE "TrCh information list".

Each transport channel $TrCH_i$, i = 1, 2, ..., I, has L_i transport formats, i.e. the transport format indicator TFI_i can take L_i values.

Each transport format combination set is defined by the transport formats of each transport channel mapped on this S-CCPCH:

$$TFC = (TFI_1, TFI_2, ..., TFI_I).$$

The "MBMS implicit TFCS" contains then the following set of TFCs:

$$TFCS = \{(0,...,0), (1,...,0),..., (L_1,...,0), (0,1,...,0),..., (0,L_2,...,0),..., (0,0,...,1),..., (0,0,...,L_1)\}$$

14.11 UE autonomous update of virtual active set on non-used frequency (FDD only)

In the text that follows:

- a "non-used frequency" is a frequency that the UE has been ordered to measure upon but is not used for the connection. A "used frequency" is a frequency that the UE has been ordered to measure upon and is also currently used for the connection;
- a "non-used frequency (resp. cell) considered in an inter-frequency measurement" shall be understood as a non-used frequency (resp. cell) included in the list of cells pointed at in the IE "cells for measurement" if it was received for that measurement, or otherwise as a non-used frequency (resp. cell) included in the "Inter-frequency cell info" part of the variable CELL_INFO_LIST.

For event-triggered inter frequency measurements it is possible to use intra-frequency measurement reporting events for support of maintenance of an active set associated with a non-used frequency considered in that measurement, a "virtual active set" and used in the evaluation of the frequency quality estimates. The "initial virtual active set" for a frequency is the virtual active set that is associated to that frequency just after a message was received that sets up or modifies the inter-frequency measurement.

The way the virtual active sets are initiated and updated for the non-used frequencies considered in an inter-frequency measurement is described in the two subclauses below.

The UE shall support a single virtual active set per non-used frequency.

The virtual active set is not initialised and maintained for an inter frequency measurement with periodic reporting. A virtual active set initialised and maintained by another inter-frequency measurement does not affect reporting of the periodic inter-frequency measurement.

14.11.1 Initial virtual active set

If the UE receives a MEASUREMENT CONTROL message that sets up or modifies an inter-frequency measurement and includes the IE "Inter-frequency set update"; or

If at least one cell can be measured on a non-used frequency for which the current virtual active set is empty (see subclause 14.11.2), the UE shall:

- 1> for each non-used frequency F_i considered in the measurement where cells can be measured:
 - 2> if event 1a is configured for the used frequency in an intra-frequency measurement:
 - 3> include in the initial virtual active set the N_i cells that have either the greatest downlink E_c/N₀ or the greatest downlink RSCP after despreading or the lowest pathloss (the measurement quantity to be used is determined by the IE "intra-frequency measurement quantity" of the intra-frequency measurement from which the event 1a configuration is taken), among the cells on frequency F_i considered in that interfrequency measurement, where:

$$N_i = \min(N_{la}, N_{Cells Fi})$$
 if $N_{1a} \neq 0$ and $N_i = N_{Cells Fi}$ otherwise.

where:

 N_{1a} is the "Reporting deactivation threshold" included in the intra-frequency measurement for the first event 1a defined in the intra-frequency measurement with the lowest identity at the time the interfrequency measurement was received with the IE "Inter-frequency set update" present.

 $N_{Cells\ Fi}$ is the number of cells on frequency F_i considered in that inter-frequency measurement.

2> else:

$$N_i = N_{Cells Fi}$$

where:

 $N_{Cells\ Fi}$ is the number of cells on frequency F_i considered in that inter-frequency measurement.

NOTE1: The UE initialises the virtual active set with up to the maximum number of inter-frequency cells supported by the UE as defined in [19].

NOTE2: If the UTRAN configures more than one measurement using events 2A, 2B, 2C or 2E the UE measurement capabilities may be exceeded due to the necessary copying of 1A, 1B, 1C criteria. To avoid this the UTRAN may configure one measurement to apply to multiple frequencies so that the 1A, 1B, and 1C criteria will only be copied once.

NOTE3: After a hard handover (see subclause 8.3.5), if the MEASUREMENT CONTROL message that restarts an inter-frequency measurement using the virtual active set does not include the IE "Inter-frequency set update", the UE behaviour regarding the virtual active set is not specified.

14.11.2 Virtual active set update during an inter-frequency measurement

For an inter-frequency measurement, the UE shall:

- 1> apply the events of type 1a, 1b and 1c that were defined for the used frequency in other stored measurements of type "intra-frequency" at the time the inter-frequency measurement was last received with the IE "Inter-frequency set update" present; and
- 1> update the virtual active set for the non-used frequencies considered in that measurement according to the following rules:
 - 2> if several events of type 1a (resp. 1b,1c) were defined for the used frequency when the inter-frequency measurement was last received with the IE "Inter-frequency set update" present, only the first 1a event (resp 1b, 1c) that was defined in the measurement with the lowest measurement identity shall apply to the non-used frequencies;
 - 2> all the cells considered in the inter-frequency measurements shall be able to affect the reporting range for event 1a and 1b. (i.e. the IE "Cells forbidden to affect reporting range" possibly stored for the intra-frequency measurements on the used frequency does not apply to the non-used frequencies considered in the inter-frequency measurement);
 - 2> the IEs "amount of reporting" and "reporting interval" that were stored for the intra-frequency measurements on the used frequency shall not be considered if reports of the virtual active set updates are needed.
 - 2> the measurement quantity and filter coefficient to be used is determined by the IE "intra-frequency measurement quantity" of the intra-frequency measurement from which the intra-frequency event configuration configuration is taken.

NOTE: If the measurement quantity and filter coefficients to be used differ for the 1a, 1b, and 1c events applied then the UE behaviour is unspecified.

- 1> if event 1a is applicable to the non-used frequencies considered in the inter-frequency measurement, always only consider monitored cells that are not in the virtual active set for this event, and:
 - 2> when this event is triggered (according to the criteria described in subclause 14.1.2.1) by a cell for a non-used frequency considered in that measurement:

- 3> if the "Reporting deactivation threshold" is equal to 0, or if the "Reporting deactivation threshold" is different from 0 and the number of cells included in the virtual active set for that frequency is less than or equal to the "Reporting deactivation threshold":
 - 4> add the primary CPICH that enters the reporting range to the "virtual active set".
- 2> if event 1b is applicable for the non-used frequencies considered in that inter-frequency measurement, always only consider cells in the virtual active set for this event, and when this event is triggered (according to the criteria described in subclause 14.1.2.2) by a cell for a non-used frequency considered in that measurement:
 - 3> if the number of cells included in the virtual active set is greater than 1:
 - 4> remove the primary CPICH that leaves the reporting range from the "virtual active set".
- 2> if event 1c is applicable for the non-used frequencies considered in that inter-frequency measurement, always only consider monitored cells for this event, and when this event is triggered (according to the criteria described in subclause 14.1.2.3) by a cell for a non-used frequency considered in that measurement:
 - 3> if the "Reporting activation threshold" is equal to 0, or if the "Reporting activation threshold" is different from 0 and the number of cells included in the virtual active set for that frequency is greater than or equal to the "Reporting activation threshold":
 - 4> rank all active and non-active primary CPICHs and take the *n* best cells to create a new "virtual active set", where *n* is the number of active primary CPICHs in the "virtual active set".
- 1> if Event 1a is not defined for the used frequency in other stored measurements of type "intra-frequency" at the time the inter-frequency measurement was set up:
 - 2> the UE shall continuously update the virtual active set to consist of all cells on frequency F_i considered in that inter-frequency measurement.

NOTE: The UE needs to only update the virtual active set with up to the maximum number of interfrequency cells supported by the UE as defined in [19].

If none of the cells that are considered in the measurement on this frequency were measured, the UE may treat the virtual active set as empty and follow the appropriate initialisation procedured in subclause 14.11.1 when any relevant cell can first be measured.

If a cell is a member of the virtual active set and is removed from the variable CELL_INFO_LIST or removed from the list of cells pointed at by the IE "Cells for measurement" for the inter-frequency measurement then the UE shall remove the cell from the virtual active set.

If an inter-frequency measurement that initialised a virtual active set is released, then any virtual active set associated with this measurement shall also be released.

14.12 Provision and reception of RRC information between network nodes

14.12.0 General

In certain cases, e.g., when performing handover to UTRAN or when performing SRNC relocation, RRC information may need to be transferred between UTRAN nodes, between UTRAN and another RAT, between nodes within another RAT or between the UE and another RAT.

The RRC information exchanged between network nodes or between the UE and another RAT is typically transferred by means of RRC information containers. An RRC information container is a self-contained and extensible RRC information unit that may be used to transfer a number of different RRC messages, one at a time. As stated before, RRC information containers may be used to transfer RRC messages across interfaces other than the Uu interface. The RRC messages that may be included in RRC information containers have similar characteristics as the RRC messages that are transferred across the Uu interface.

The RRC messages that are sent to/ from the UE, e.g., HANDOVER TO UTRAN COMMAND, INTER RAT HANDOVER INFO are covered by (sub)clauses 8, 9, 10, 11.0-11.4 and 12 of this specification. The following subclauses concern RRC messages exchanged between network nodes.

In future versions of this specification, it is possible to extend the RRC messages transferred across interfaces other than Uu. For these RRC messages the same extension mechanism applies as defined for RRC messages transferred across the Uu interface, as is specified in subclause 10.1, i.e., both critical and non-critical extensions may be added.

The transfer syntax for RRC information containers and RRC messages transferred between network nodes is derived from their ASN.1 definitions by use of Packed Encoding Rules, unaligned (X.691). It should be noted that the encoder adds final padding to achieve octet alignment. The resulting octet string is, carried in a container, transferred between the network nodes.

When using a separate RRC information container for each endpoint, the receiving RRC protocol entity is able to interpret the received container; this means that the receiver need not take into account information about the (network interface) message used in transferring the container.

The following encoding rules apply in addition to what has been specified in X.691 [49]:

1> When a bit string value is placed in a bit-field as specified in 15.6 to 15.11 in [11], the leading bit of the bit string value shall be placed in the leading bit of the bit-field, and the trailing bit of the bit string value shall be placed in the trailing bit of the bit-field.

NOTE: The terms "leading bit" and "trailing bit" are defined in ITU-T Rec. X.680 | ISO/IEC 8824-1. When using the "bstring" notation, the leading bit of the bit string value is on the left, and the trailing bit of the bit string value is on the right.

14.12.0a General error handling for RRC messages exchanged between network nodes

The error handling for RRC messages that are exchanged between network nodes applies the same principles as defined for other RRC messages.

Although the same principles apply for network nodes receiving unknown, unforeseen and erroneous RRC messages received in RRC information containers, the notification of the error should be done in a different manner, as specified in the following:

The network node receiving an invalid RRC message from another network node should:

- 1> if the received RRC message was unknown, unforeseen or erroneous:
 - 2> prepare an RRC FAILURE INFO message, including the IE "Failure cause" set to "Protocol error" and the IE "Protocol error information" including an IE "Protocol error cause" which should be set as follows:
 - 3> to "ASN.1 violation or encoding error" upon receiving an RRC message for which the encoded message does not result in any valid abstract syntax value;
 - 3> to "Message type non-existent or not implemented" upon receiving an unknown RRC message type;
 - 3> to "Message extension not comprehended" upon receiving an RRC message including an undefined critical message extension;
 - 3> to "Information element value not comprehended" upon receiving an RRC message including an mandatory IE for which no default value is defined and for which either the value is set to spare or for which the encoded IE does not result in a valid transfer syntax. The same applies for conditional IEs, for which the conditions for presence are met, the IE is present but has a value set to spare or for which the encoded IE does not result in a valid transfer syntax;
 - 3> to "Information element missing" upon receiving an RRC information container with an absent conditional IE for which the conditions for presence are met.
- 1> if there was another failure to perform the operation requested by the received RRC message:

- 2> prepare an RRC FAILURE INFO message, including the IE "Failure cause" set to a value that reflects the failure cause.
- 1> send the RRC FAILURE INFO message to the network node from which the invalid RRC protocol information was received.
- NOTE 1: The appropriate (failure) messages used across the network interfaces may not support the inclusion of a RRC information container. In this case, the information contained in the RRC FAILURE INFO message may need to be transferred otherwise e.g. by mapping to a cause value (e.g. a cause value in the RR-HANDOVER FAILURE message when there is a error associated with the RRC-HANDOVER TO UTRAN COMMAND message).
- NOTE 2 In case the RRC procedure used to perform SRNS relocation fails e.g. due to non comprehension, the source RNC may notify the target RNC by including the diagnostics information (IEs "Protocol error" and "Protocol error information") in the "RRC message "SRNS Relocation" Info sent in the RRC information container" used for a subsequent relocation request.

14.12.1 RRC Information to target RNC

The RRC information container "RRC Information to target RNC" may either be sent from source RNC or from another RAT. In case of handover to UTRAN, this information originates from another RAT, while in case of SRNC relocation the RRC information originates from the source RNC. In case of handover to UTRAN, the RRC information transferred may provide UTRAN specific information, as defined in the INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITIES message, that the target RNC needs when preparing the handover command message. In case of SRNC relocation and handover/cell reselection from GERAN *Iu mode*, the RRC information transferred specifies the configuration of RRC and the lower layers it controls, e.g., including the radio bearer and transport channel configuration. It is used by the target RNC to initialise RRC and the lower layer protocols to facilitate SRNC relocation and handover/cell reselection from GERAN *Iu mode* in a manner transparent to the UE.

RFC 3095 CONTEXT INFO is used to transfer the compressor and decompressor context information of the RFC 3095 protocol from source RNC to target RNC.

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
CHOICE case	MP			At least one spare choice, Criticality: Reject, is needed	
>Handover to UTRAN			INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITI ES 14.12.4.1		
>SRNC relocation			SRNS RELOCATIO N INFO 14.12.4.2		
>RFC 3095 context info			RFC 3095 CONTEXT INFO 14.12.4.4		REL-5

14.12.2 RRC information, target RNC to source RNC

There are 2 possible cases for RNC relocation:

- 1. The UE is already under control of target RNC; and
- 2. The SRNC Relocation with Hard Handover (UE still under control of SRNC), but UE is moving to a location controlled by the target RNC (based on measurement information).

In case 1 the relocation is transparent to the UE and there is no "reverse" direction container. The SRNC just assigns the 'serving' function to the target RNC, which then becomes the Serving RNC.

In case 2 the relocation is initiated by SRNC, which also provides the RRC Initialisation Information to the target RNC. Base on this information, the target RNC prepares the Hard Handover Message ("Physical channel reconfiguration" (subclause 8.2.6), "radio bearer establishment" (subclause 8.2.1), "Radio bearer reconfiguration" (subclause 8.2.2), "Radio bearer release" (subclause 8.2.3) or "Transport channel reconfiguration" (subclause 8.2.4).

In case 2 two possibilities are defined in order to transmit the relocation message from the target RNC to the source RNC which can be chosen by the source RNC by including or not including the IE "RB Id for handover message" in the IE "SRNS Relocation Info".

In case the IE "RB Id for handover message" has been received by the target RNC in the IE "SRNS Relocation Info", the target RNC should choose the IE "DL DCCH message" and include the DL DCCH message that should be transmitted transparently to the UE by the source RNC. In that case, the target RNC is integrity protecting the message if applicable.

If the target RNC did not receive the IE "RB Id for handover message" in the IE "SRNS Relocation Info" the target RNC should use another choice. In that case, the source RNC should integrity protect the message before transmitting it to the UE if applicable.

The source RNC then transmits the Handover Message to the UE, which then performs the handover.

In the successful case, the UE transmits an XXX COMPLETE message, using the new configuration, to the target RNC.

In case of failure, the UE transmits an XXX FAILURE, using the old configuration, to the source RNC and the RRC context remains unchanged (has to be confirmed and checked with the SRNS relocation procedure).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE RRC message	MP			At least one spare choice, Criticality: Reject, is needed
>RADIO BEARER SETUP			RADIO BEARER SETUP 10.2.31	
>RADIO BEARER RECONFIGURATION			RADIO BEARER RECONFIG URATION 10.2.25	
>RADIO BEARER RELEASE			RADIO BEARER RELEASE 10.2.28	
>TRANSPORT CHANNEL RECONFIGURATION			TRANSPOR T CHANNEL RECONFIG URATION 10.2.51	
>PHYSICAL CHANNEL RECONFIGURATION			PHYSICAL CHANNEL RECONFIG URATION 10.2.20	
>RRC FAILURE INFO			RRC FAILURE INFO 10.2.41 a	
>DL DCCH message			OCTET STRING	

14.12.3 Void

14.12.4 RRC messages exchanged between network nodes

14.12.4.0 HANDOVER TO UTRAN COMMAND

This RRC message is sent between network nodes to transfer the actual handover command including the details of the radio configuration to be used upon handover to UTRAN as compiled by the target RNC.

Direction: target RNC →source RAT

The message is exactly the same as the HANDOVER TO UTRAN COMMAND defined in subclause 10.2.16a.

14.12.4.0a INTER RAT HANDOVER INFO

This RRC message is sent between network nodes to transfer information relevant for the target RNC when preparing for handover to UTRAN.

Direction: source RNC/RAT→target RAT

The message is exactly the same as the INTER RAT HANDOVER INFO defined in subclause 10.2.16d

14.12.4.1 INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITIES

This RRC message is sent between network nodes when preparing for an inter RAT handover to UTRAN.

Direction: source RAT→target RNC

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
UE Information elements				
Predefined configuration status information	OP		Predefined configuration status information 10.3.4.5a	
Predefined configuration status information compressed	OP		Predefined configuration status information compressed 10.3.4.5b	REL-5
UE security information	OP		UE security information 10.3.3.42b	
UE security information2	OP		UE security information2 10.3.3.42c	REL-6
UE Specific Behaviour Information 1 interRAT	OP		UE Specific Behaviour Information 1 interRAT 10.3.3.52	This IE shall not be included in this version of the protocol
UE capability container	OP			
>UE radio access capability	MP		UE radio access capability 10.3.3.42	
>UE radio access capability extension	MP		UE radio access capability extension	Although this IE is not always required, the need has been set to MP to align with the ASN.1

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
Hame			10.3.3.42a	
UE radio access capability compressed	OP		UE radio access capability compressed 10.3.3.420	REL-5
UE radio access capability comp 2	OP		UE radio access capability comp 2 10.3.3.42oa	REL-6
Other Information elements				
UE system specific capability	OP	1 to <maxsyste mCapabilit y></maxsyste 		
>Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability 10.3.8.7	
Failure cause	OP		Failure cause 10.3.3.13	Diagnostics information related to an earlier handover to UTRAN request
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	

Condition	Explanation		
ProtErr	This IE is mandatory present if the IE "Protocol error		
	indicator" is included and has the value "TRUE".		
	Otherwise it is not needed.		

NOTE1: To facilitate that network nodes can transparently forward the RRC information received, the INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITIES should include the entire INTER RAT HANDOVER INFO message. The network node, which may not be able to decode the information received, may only append some information to what was received.

NOTE2: The above table does not need to reflect the order of the information elements in the actual encoded message. The order, that is reflected in the ASN.1, should be chosen in a manner that avoids that network nodes need to perform reordering of information elements.

14.12.4.2 SRNS RELOCATION INFO

This RRC message is sent between network nodes when preparing for an SRNS relocation or a handover/cell reselection from GERAN *Iu mode*.

With the presence or absence of the IE "RB identity for Hard Handover message" the source RNC indicates to the target SRNC whether the source RNC expects to receive the choice "DL DCCH message" in the IE "RRC information, target RNC to source RNC" in case the SRNS relocation is of type "UE involved". Furthermore the target RNC uses this information for the calculation of the MAC-I.

Direction: source RNC/RAT→target RNC

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
Non RRC IEs					
>RB identity for Handover message	OP		RB identity 10.3.4.16	Gives the id of the radio bearer on which the source RNC will transmit the RRC message in the case the relocation is of	

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
				type "UE involved". In handover from GERAN <i>lu mode</i> this IE is always set to 2.	
>State of RRC	MP		RRC state indicator, 10.3.3.35a	,	
>State of RRC procedure	MP		Enumerated (await no RRC message, await RB Release Complete, await RB Setup Complete, await RB Reconfigurat ion Complete, await Transport CH Reconfigurat ion Complete, await Physical CH Reconfigurat ion Complete, await Physical CH Reconfigurat ion Complete, await Physical CH Reconfigurat ion Complete, await Physical CH Reconfigurat ion Complete, await Complete, await Handover Complete, send Cell Update Confirm, send URA Update Confirm, send URA		
Ciphering related information			, 5411515)		
>Ciphering status for each CN domain	MP	<1 to maxCNDo mains>			
>>CN domain identity	MP		CN domain identity 10.3.1.1		
>>Ciphering status	MP		Enumerated(Not started, Started)		
>>START	MP		START 10.3.3.38	START value to be used in this CN domain.	
>Latest configured CN domain	MP		CN domain identity 10.3.1.1	Value contained in the variable of the same name. In case this variable is empty, the source RNC can set any CN domain identity. In that case, the Ciphering status and the Integrity protection status should be Not started and the target RNC should not initialise the variable Latest configured	

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
>Calculation time for ciphering related information	CV- Ciphering			CN domain. Time when the ciphering information of the message were calculated, relative to a cell of the target RNC. In handover and cell reselection	
>>Cell Identity	MP		Cell Identity 10.3.2.2	from GERAN <i>lu mode</i> this field is not present. Identity of one of the cells under the target RNC and included in the active set of the	
>>SFN	MP		Integer(040	current call	
>COUNT-C list	ОР	1 to <maxcndo mains></maxcndo 	95)	COUNT-C values for radio bearers using transparent mode RLC	
>>CN domain identity	MP	manio	CN domain identity 10.3.1.1	mode (125	
>>COUNT-C	MP		Bit string(32)		
>Ciphering info per radio bearer	OP	1 to <maxrb></maxrb>		For signalling radio bearers this IE is mandatory.	
>>RB identity	MP		RB identity 10.3.4.16		
>>Downlink HFN	MP		Bit string(2025	This IE is either RLC AM HFN (20 bits) or RLC UM HFN (25 bits)	
>>Downlink SN	CV-SRB1		Bit String(7)	VT(US) of RLC UM	
>>Uplink HFN	MP		Bit string(2025	This IE is either RLC AM HFN (20 bits) or RLC UM HFN (25 bits)	
Integrity protection related information					
>Integrity protection status	MP		Enumerated(Not started, Started)		
>Signalling radio bearer specific integrity protection information	CV-IP	4 to <maxsrbs etup></maxsrbs 			
>>Uplink RRC HFN	MP		Bit string (28)	For each SRB, in the case activation times for the next IP configuration to be applied on this SRB have already been reached this IE corresponds to the last value used. Else this value corresponds to the value the source would have initalized the HFN to at the activation time, not considering any increment of HFN due to RRC SN roll over. Increment of HFN due to RRC SN roll over is taken care of by target based on value sent by the source.	
>>Downlink RRC HFN	MP		Bit string (28)	For each SRB, in the case activation times for the next IP configuration to be applied on this SRB have already been reached this IE corresponds to the last value used. Else this value corresponds to the value the source would have initalized the HFN to at the activation time, not considering	

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
				any increment of HFN due to RRC SN roll over. Increment of HFN due to RRC SN roll over is taken care of by target based on value sent by the source. In particular, for SRB2, this IE should not take into account the RRC message that will trigger the relocation. NOTE: In order to have the possibility of sending downlink messages after the construction of the IE "SRNS RELOCATION INFO", the source may choose a value ahead of the last value used.	
>>Uplink RRC Message sequence number	MP		Integer (0 15)	For each SRB, this IE corresponds to the last value received or in the case activation time was not reached for a configuration the value equals (activation time - 1).	
>>Downlink RRC Message sequence number	MP		Integer (0 15)	For each SRB, this IE corresponds to the last value used or in the case activation time was not reached for a configuration the value equals (activation time -1). In particular, for SRB2, this IE should not take into account the RRC message that will trigger the relocation. NOTE: In order to have the possibility of sending downlink messages after the construction of the IE "SRNS RELOCATION INFO", the source may choose a value ahead of the last value used for SRB3 and SRB4.	
>Implementation specific parameters	OP		Bit string (1512)	TOT SINES and SINE4.	
RRC IEs					
UE Information elements >U-RNTI	MP		U-RNTI 10.3.3.47	G-RNTI is placed in this field when performing handover or cell reselection from GERAN <i>lu mode</i> .	
>C-RNTI	OP		C-RNTI 10.3.3.8		
>UE radio access Capability	MP		UE radio access capability 10.3.3.42		
>UE radio access capability extension	OP		UE radio access capability extension 10.3.3.42a		
>Last known UE position	OP	1			
>>SFN	MP		Integer (04095)	Time when position was estimated	
>>Cell ID	MP		Cell identity; 10.3.2.2	Indicates the cell, the SFN is valid for.	
>>CHOICE Position estimate	MP				

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
>>>Ellipsoid Point			Ellipsoid		
			Point;		
			10.3.8.4a		
>>>Ellipsoid point with			Ellipsoid		
uncertainty circle			point with		
			uncertainty circle		
			10.3.8.4d		
>>>Ellipsoid point with			Ellipsoid		
uncertainty ellipse			point with		
uncertainty ellipse			uncertainty		
			ellipse		
			10.3.8.4e		
>>>Ellipsoid point with altitude			Ellipsoid		
z z z z z z z z z z z z z z z z z z z			point with		
			altitude		
			10.3.8.4b		
>>>Ellipsoid point with altitude			Ellipsoid		
and uncertainty ellipsoid			point with		
, , , , , ,			altitude and		
			uncertainty		
			ellipsoid		
			10.3.8.4c		
>UE Specific Behaviour	OP		UE Specific	This IE should be included if	
Information 1 idle			Behaviour	received via the "INTER RAT	
			Information	HANDOVER INFO", the "RRC	
			idle 1	CONNECTION REQUEST",	
			10.3.3.51	the IE "SRNS RELOCATION	
				INFO" or the "Inter RAT	
				Handover Info with Inter RAT	
				Capabilities"	
>UE Specific Behaviour	OP		UE Specific	This IE should be included if	
Information 1 interRAT			Behaviour	received via the "INTER RAT	
			Information 1	HANDOVER INFO", the "RRC	
			interRAT	CONNECTION REQUEST",	
			10.3.3.52	the IE "SRNS RELOCATION	
				INFO" or the "Inter RAT	
				Handover Info with Inter RAT	
Other Information class set				Capabilities"	
Other Information elements	OB	1 to			
>UE system specific capability	OP	1 to			
		<maxsyste< td=""><td></td><td></td><td></td></maxsyste<>			
		mCapabilit			
>>Intor DATUE radio cocces	MP	y>	Inter-RAT		
>>Inter-RAT UE radio access	IVIE		UE radio		
capability			access		
			capability		
			10.3.8.7		
UTRAN Mobility Information			10.5.0.7		
elements					
>URA Identifier	OP		URA identity		
- OTA CIGOTATIO			10.3.2.6		
CN Information Elements			10.0.2.0		
>CN common GSM-MAP NAS	MP		NAS system		
system information	1		information		
a, atom imorniquon			(GSM-MAP)		
			10.3.1.9		
>CN domain related information	OP	1 to		CN related information to be	
2.1 domain rolated information] .	<maxcndo< td=""><td></td><td>provided for each CN domain</td><td></td></maxcndo<>		provided for each CN domain	
		mains>		p. straca for each off domain	
>>CN domain identity	MP				
>>CN domain specific GSM-	MP		NAS system		
MAP NAS system info	1		information		
			(GSM-MAP)		
			10.3.1.9		
	1	1		1	1

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
>>CN domain specific DRX cycle length coefficient	MP		CN domain specific DRX cycle length coefficient, 10.3.3.6		
Measurement Related Information elements					
>For each ongoing measurement reporting	OP	1 to <maxnoof Meas></maxnoof 		The source RNC should include the measurement IEs for each measurement configured and ongoing in the UE.	
>>Measurement Identity	MP		Measuremen t identity 10.3.7.48		
>>Measurement Command	MP		Measuremen t command 10.3.7.46	This IE should have the value Setup.	
>>Measurement Type	CV-Setup		Measuremen t type 10.3.7.50		
>>Measurement Reporting Mode	OP		Measuremen t reporting mode 10.3.7.49		
>>Additional Measurements list	OP		Additional measuremen ts list 10.3.7.1		
>>CHOICE Measurement	CV-Setup				
>>>Intra-frequency					
>>>>Intra-frequency cell info	OP		Intra- frequency cell info list 10.3.7.33		
>>>>Intra-frequency measurement quantity	OP		Intra- frequency measuremen t quantity 10.3.7.38		
>>>>Intra-frequency reporting quantity	OP		Intra- frequency reporting quantity 10.3.7.41		
>>>Reporting cell status	OP		Reporting cell status 10.3.7.61		
>>>>Measurement validity	OP		Measuremen t validity 10.3.7.51		
>>>>CHOICE report criteria	OP				
>>>>Intra-frequency measurement reporting criteria			Intra- frequency measuremen t reporting criteria		
>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53		
>>>>No reporting			NULL		
>>>Inter-frequency					

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
>>>Inter-frequency cell info	OP		Inter- frequency		
			cell info list 10.3.7.13		
>>>Inter-frequency	OP		Inter-		
measurement quantity			frequency measuremen		
1,			t quantity		
>>>Inter-frequency reporting	OP		10.3.7.18 Inter-		
quantity			frequency		
			reporting quantity		
Deposition call status	OD		10.3.7.21		
>>>Reporting cell status	OP		Reporting cell status		
>>>>Measurement validity	OP		10.3.7.61 Measuremen		
>>>>ivieasurement validity	OP		t validity		
>>>Inter-frequency set update	OP		10.3.7.51 Inter-		
· · · · · · · · · · · · · · · · · · ·			frequency		
			set update 10.3.7.22		
>>>CHOICE report criteria	OP				
>>>>Intra-frequency measurement reporting criteria			Intra- frequency		
			measuremen		
			t reporting criteria		
			10.3.7.39		
>>>>Inter-frequency measurement			Inter- frequency		
reporting criteria			measuremen		
			t reporting criteria		
>>>>Periodical reporting			10.3.7.19 Periodical		
- >>>>i enoulcal reporting			reporting		
			criteria 10.3.7.53		
>>>>No reporting			NULL		
>>>Inter-RAT >>>>Inter-RAT cell info	OP		Inter-RAT		
ZZZIMOT WWW COM MINO			cell info list		
>>>Inter-RAT measurement	OP		10.3.7.23 Inter-RAT		
quantity			measuremen		
			t quantity 10.3.7.29		
>>>Inter-RAT reporting	OP		Inter-RAT		
quantity			reporting quantity		
	0.0		10.3.7.32		
>>>Reporting cell status	OP		Reporting cell status		
M (P.P.	OF		10.3.7.61		
>>>>Measurement validity	OP		Measuremen t validity		
CHOICE roport suits vis	OP		10.3.7.51		
>>>>CHOICE report criteria >>>>>Inter-RAT measurement	UP		Inter-RAT		
reporting criteria			measuremen		
			t reporting criteria		
			10.3.7.30		

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
>>>>Periodical reporting			Periodical		
			reporting		
			criteria		
			10.3.7.53		
>>>>No reporting			NULL		
>>>Traffic Volume					
>>>>Traffic volume	OP		Traffic		
measurement			volume		
Object			measuremen		
			t object		
			10.3.7.70		
>>>Traffic volume	OP		Traffic		
measurement			volume		
quantity			measuremen		
			t quantity		
			10.3.7.71		
>>>>Traffic volume reporting	OP		Traffic		
quantity			volume		
		1	reporting		
			quantity		
			10.3.7.74		
>>>Measurement validity	OP		Measuremen		
			t validity		
			10.3.7.51		
>>>>CHOICE report criteria	OP				
>>>>Traffic volume			Traffic		
measurement			volume		
reporting criteria			measuremen		
			t reporting		
			criteria		
			10.3.7.72		
>>>>Periodical reporting			Periodical		
. •			reporting		
			criteria		
			10.3.7.53		
>>>>No reporting			NULL		
>>>Quality					
>>>Quality measurement	OP		Quality		
quantity			measuremen		
1			t quantity		
			10.3.7.59		
>>>>CHOICE report criteria	OP				
>>>>Quality measurement			Quality		
reporting criteria		1	measuremen		
Top coming contents		1	t reporting		
			criteria		
			10.3.7.58		
>>>>Periodical reporting			Periodical		
· · · · · · · · · · · · · · · · · · ·			reporting		
		1	criteria		
		1	10.3.7.53		
>>>>No reporting			NULL		
>>>UE internal					
>>>UE internal measurement	OP		UE internal		
quantity	1	1	measuremen		
quantity			t quantity		
		1	10.3.7.79		
>>>UE internal reporting	OP		UE internal		
quantity] ~.	1	reporting		
quantity		1	quantity		
		1	10.3.7.82		
>>>>CHOICE report criteria	OP	 	10.3.1.02		
>>>>UE internal measurement	UF	 	UE internal		
reporting criteria		1	measuremen		
			t reporting		

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
			criteria 10.3.7.80		
>>>>Periodical reporting			Periodical		
>>>>i enducar reporting			reporting		
			criteria		
			10.3.7.53		
>>>>No reporting			NULL		
>>>UE positioning					
>>>LCS reporting quantity	OP		LCS		
			reporting		
			quantity		
0110105	0.0		10.3.7.111		
>>>>CHOICE report criteria	OP		1.00		
>>>>LCS reporting criteria			LCS		
			reporting		
			criteria 10.3.7.110		
>>>>Periodical reporting			Periodical		
>>>>Periodical reporting					
			reporting criteria		
			10.3.7.53		
>>>>No reporting			10.0.7.00		
Radio Bearer Information					
Elements					
>Predefined configuration status	OP		Predefined		
information			configuration		
			status		
			information		
			10.3.4.5a		
>Signalling RB information list	MP	1 to		For each signalling radio	
		<maxsrbs< td=""><td></td><td>bearer</td><td></td></maxsrbs<>		bearer	
		etup>			
>>Signalling RB information	MP		Signalling		
			RB		
			information		
			to setup 10.3.4.24		
>RAB information list	OP	1 to	10.3.4.24	Information for each RAB	
>RAB Information list	OP .	<maxrabs< td=""><td></td><td>Information for each KAB</td><td></td></maxrabs<>		Information for each KAB	
		etup>			
>>RAB information	MP	Ctup>	RAB		
	'*''		information		
			to setup		
			10.3.4.10		
Transport Channel					
Information Elements					
Uplink transport channels					
>UL Transport channel	OP		UL Transport		
information common for all			channel		
transport channels			information		
			common for		
			all transport		
			channels		
. III tugugagant ak I	OD	1 12	10.3.5.24		
>UL transport channel	OP	1 to			
information list		<maxtrch< td=""><td></td><td></td><td></td></maxtrch<>			
>>UL transport channel	MP	>	Added or		
information	IVIE		reconfigured		
information			UL TrCH		
			information		
			10.3.5.2		
Downlink transport channels			10.0.0.2		
>DL Transport channel	OP		DL Transport		
information common for all	J .		channel		

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
transport channels			information common for all transport channels 10.3.5.6		
>DL transport channel information list	OP	1 to <maxtrch ></maxtrch 			
>>DL transport channel information	MP		Added or reconfigured DL TrCH information 10.3.5.1		

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
PhyCH information elements	1	1			
>TPC Combination Info list	OP	1 to <maxrl></maxrl>			
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60		
>>TPC combination index	MP		TPC combination index 10.3.6.85		
>Transmission gap pattern sequence	OP	1 to <maxtgp S></maxtgp 			REL-5
>>TGPSI	MP		TGPSI 10.3.6.82		REL-5
>> Current TGPS Status Flag	MP		Enumerated(active, inactive)	This flag indicates the current status of the Transmission Gap Pattern Sequence, whether it is active or inactive	REL-5
>>TGCFN	CV-Active		Integer (0255)	Connection Frame Number of the latest past frame of the first pattern within the Transmission Gap Pattern Sequence.	REL-5
>>Transmission gap pattern sequence configuration parameters	OP				REL-5
>>>TGMP	MP		Enumerated(TDD measuremen t, FDD measuremen t, GSM carrier RSSI measuremen t, GSM Initial BSIC identification, GSM BSIC re- confirmation, Multi-carrier measuremen t)	Transmission Gap pattern sequence Measurement Purpose.	REL-5
>>>TGPRC	MP		Integer (1511, Infinity)	The number of remaining transmission gap patterns within the Transmission Gap Pattern Sequence.	REL-5
>>>TGSN	MP		Integer (014)	Transmission Gap Starting Slot Number The slot number of the first transmission gap slot within the TGCFN.	REL-5
>>>TGL1	MP		Integer(114)	The length of the first Transmission Gap within the transmission gap pattern expressed in number of slots	REL-5
>>>TGL2	MD		Integer (114)	The length of the second Transmission Gap within the transmission gap pattern. If omitted, then TGL2=TGL1. The value of TGL2 shall be ignored if TGD is set to 'undefined'	REL-5
>>>TGD	MP		Integer(152 69,	Transmission gap distance indicates the number of slots	REL-5

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
			undefined)	between starting slots of two consecutive transmission gaps within a transmission gap pattern. If there is only one transmission gap in the transmission gap pattern, this parameter shall be set to undefined.	
>>>TGPL1	MP		Integer (1144)	The duration of transmission gap pattern 1.	REL-5
>>>RPP	MP		Enumerated (mode 0, mode 1).	Recovery Period Power control mode during the frame after the transmission gap within the compressed frame. Indicates whether normal PC mode or compressed PC mode is applied	REL-5
>>>ITP	MP		Enumerated (mode 0, mode 1).	Initial Transmit Power is the uplink power control method to be used to compute the initial transmit power after the compressed mode gap.	REL-5
>>>CHOICE UL/DL mode	MP				REL-5
>>>>DL only				Compressed mode used in DL only	REL-5
>>>>Downlink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating downlink compressed mode gap	REL-5
>>>>UL only				Compressed mode used in UL only	REL-5
>>>>Uplink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating uplink compressed mode gap	REL-5
>>>>UL and DL			Jesticaag/	Compressed mode used in UL and DL	REL-5
>>>>Downlink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating downlink compressed mode gap	REL-5
>>>>Uplink compressed mode method	MP		Enumerated (SF/2, higher layer scheduling)	Method for generating uplink compressed mode gap	REL-5
>>>Downlink frame type	MP		Enumerated (A, B)		REL-5
>>>DeltaSIR1	MP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the first transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase)	REL-5
>>>DeltaSIRafter1	MP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the first transmission gap in the transmission gap pattern.	REL-5
>>>DeltaSIR2	OP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the second transmission gap in the transmission gap pattern	REL-5

Information Element/Group Name	Need	Multi	Type and reference	Semantics description	Version
				(without including the effect of the bit-rate increase) When omitted, DeltaSIR2 = DeltaSIR1.	
>>>DeltaSIRafter2	OP		Real(03 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the second transmission gap in the transmission gap pattern. When omitted, DeltaSIRafter2 = DeltaSIRafter1.	REL-5
>>>N Identify abort	CV-Initial BSIC		Integer(112 8)	Indicates the maximum number of repeats of patterns that the UE shall use to attempt to decode the unknown BSIC of the GSM cell in the initial BSIC identification procedure	REL-5
>>>T Reconfirm abort	CV-Re- confirm BSIC		Real(0.510. 0 by step of 0.5)	Indicates the maximum time allowed for the re-confirmation of the BSIC of one GSM cell in the BSIC re-confirmation procedure. The time is given in steps of 0.5 seconds.	REL-5
>Scrambling Code Change List	CH-SF/2	1 to <maxrl></maxrl>			REL-5
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60		REL-5
>>Scrambling code change	MP		Enumerated (code change, no code change)	Indicates whether the alternative scrambling code is used for compressed mode method 'SF/2'.	REL-5
Other Information elements					
>Measurement report	OP		MEASUREM ENT REPORT 10.2.19	The source RNC should include the Measurement report the UE sent that triggered the SRNS relocation. This information could e.g. be used by the target RNC to set initial power when establishing a DCH.	
>Failure cause	OP		Failure cause 10.3.3.13	Diagnostics information related to an earlier SRNC Relocation request (see NOTE 2 in 14.12.0a)	
>Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12		
MBMS joined information	OP			Included if the UE has joined one or more MBMS services	REL-6
>P-TMSI	ОР		P-TMSI (GSM-MAP) 10.3.1.13	In case the UE is in PMM-Idle	REL-6

Multi Bound	Explanation
MaxNoOfMeas	Maximum number of active measurements, upper
	limit 16

Condition	Explanation
Setup	The IE is mandatory present when the IE Measurement command has the value "Setup", otherwise the IE is not needed.
Ciphering	The IE is mandatory present when the IE Ciphering Status has the value "started" and the ciphering counters need not be reinitialised, otherwise the IE is not needed.
IP	The IE is mandatory present when the IE Integrity protection status has the value "started" and the integrity protection counters need not be reinitialised, otherwise the IE is not needed.
ProtErr	This IE is mandatory present if the IE "Protocol error indicator" is included and has the value "TRUE". Otherwise it is not needed.
SRB1	The IE is mandatory present for RB1. Otherwise it is not needed.
Active	This IE is mandatory present when the value of the IE "Current TGPS Status Flag" is "Active" and not needed otherwise.
Initial BSIC	This IE is mandatory present when the value of the IE "TGMP" is set to "GSM Initial BSIC identification" and not needed otherwise.
Re-confirm BSIC	This IE is mandatory present when the value of the IE "TGMP" is set to "GSM BSIC re-confirmation" and not needed otherwise.
SF/2	The IE is mandatory present if the IE 'Transmission Gap Pattern Sequence' is included and has the value 'SF/2' as the compressed mode method, and already sent the UE the IE 'Scrambling Code Change' for each RL in the active set. Otherwise the IE is not needed.

14.12.4.3 Void

14.12.4.4 RFC 3095 CONTEXT INFO

This RRC message is sent between network nodes in SRNS relocation. It is used to transfer the compressor and decompressor context information of the RFC 3095 protocol.

Direction: source RNC →target RNC

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
RFC 3095 context	MP	1 to <maxrball< td=""><td></td><td></td><td>REL-5</td></maxrball<>			REL-5
>RB identity	MP	RABs>	RB identity 10.3.4.16		REL-5
>RFC 3095 context list	MP	1 to <maxrfc3 095-CID></maxrfc3 			REL-5
>>Downlink RFC 3095 context	OP				REL-5
>>>Downlink RFC 3095 context identity	MP		Integer (016383)		REL-5
>>>DL_MODE	MP		Enumerated (u, o, r)	RFC 3095 mode in downlink before SRNS relocation.	REL-5
>>>REF_IR	MP		Octet string (13000)	The RTP IR header (see section 5.7.7 of RFC3095 for detailed format) corresponding to the oldest header in the compressor sliding window.	REL-5
>>>REF_TIME	OP		Integer (04294967 295)	Arrival time (at the compressor) of REF_IR in milliseconds. See sections 4.5.4 and 6.5.1 of RFC3095.	REL-5
>>>CURR_TIME	OP		Integer (04294967 295)	Current time in milliseconds. See section 6.5.1 of RFC3095.	REL-5
>>>SYN_OFFSET_ID	OP		Integer (065535)	Last synchronized offset of IP-ID. See section 4.5.5 and 6.5.1 of RFC3095 (termed "Offset_I"). It is related to the compression and decompression of IP-ID and is the synchronized offset between the IP-ID value and the SN value (in the same header)	REL-5
>>>SYN_SLOPE_TS	ОР		Integer (04294967 295)	during the last SO state before the relocation procedure. Last synchronized slope of TS. See sections 5.5.1.2 and 5.7 of RFC3095. In SO state, TS(n) = TS(m) + (n-m) *	REL-5
				SYN_SLOPE_TS, where n and m are, the RTP SN of the current and	

				the reference	
				packet,	
				respectively. The	
				unit of	
				SYN_SLOPE_TS	
				depends on	
				whether TS is	
				scaled before	
				compression or	
				not.	
>>>DYN_CHANGED	MP		Boolean	Information	REL-5
				whether dynamic	
				fields other than	
				RTP SN, RTP TS	
				and IP-ID have	
				changed in the	
				headers that are	
				stored in the	
				sliding window.	
				Set to TRUE if	
				changed and	
				FALSE if not	
H II I BEQ 2005	0.5			changed.	5
>>Uplink RFC 3095 context	OP	1	Intores		REL-5
>>>Uplink RFC 3095 context	MP		Integer		REL-5
identity >>>UL_MODE	MP		(016383) Enumerated	RFC 3095 mode	REL-5
>>>UL_WODE	IVIE		(u, o, r)	in uplink	KEL-5
>>>REF_IR	MP		Octet string	The RTP IR	REL-5
>>\CI _II\	'''		(13000)	header (see	IXEE 0
			(13000)	section 5.7.7 of	
				IETF RFC3095 for	
				detailed format)	
				corresponding to	
				the last correctly	
				decompressed	
				header.	
>>>REF_TIME	OP		Integer	Arrival time (at the	REL-5
*** * * * * * * * * * * * * * * * * *			(04294967	decompressor) of	0
			295)	REF_IR in	
			,	milliseconds.	
				See sectionss	
				4.5.4 and 6.5.1 of	
				RFC3095.	
>>>CURR_TIME	OP		Integer	Current time in	REL-5
_		1	(04294967	milliseconds. See	
			295)	section 6.5.1 of	
			•	RFC3095.	
>>>SYN_OFFSET_ID	OP		Integer	Last synchronized	REL-5
		1	(065535)	offset of IP-ID.	
				See sectionss	
		1		4.5.5 and 6.5.1 of	
				RFC3095	
		1		(termed"Offset_I")	
		1			
				It is related to the	
		1		compression and	
				decompression of	
		1		IP-ID and is the	
		1		synchronized	
				offset between the	
		1		IP-ID value and	
		1		the SN value (in	
		1		the same header)	
		1		during the last SO	
				state before the relocation	
	1	<u>I</u>	l .	reiocation	

			procedure.	
>>>SYN_SLOPE_TS	OP	Integer (04294967 295)	Last synchronized slope of TS. See sectionss 5.5.1.2 and 5.7 of RFC3095. In SO state, TS(n) = TS(m) + (n-m) * SYN_SLOPE_TS, where n and m are, the RTP SN of the current and the reference packet, respectively. The unit of SYN_SLOPE_TS depends on whether TS is scaled before compression or not.	REL-5
>>>REF_SN_1	OP	Integer (065535)	Corresponds to the RTP Sequence Number of the predecessor of the latest RTP packet. This could be used to perform local repair of context by decompressor in U or O mode (see 'ref - 1' in section5.3.2.2.5 in IETF RFC3095 for further explanation).	REL-5

14.13 Void

14.14 Void

Annex A (informative): USIM parameters

A.1 Introduction

This annex contains recommendations about the RRC parameters to be stored in the USIM.

A.2 Ciphering information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cipher key for each CN domain	MP	<1 to maxCNDo mains>		Cipher key is described in [40].
>CK	MP		Bit string (128)	
Integrity key for each CN domain	MP	<1 to maxCNDo mains>		Integrity key is described in [40].
>IK	MP		Bit string (128)	
THRESHOLD	MP		Bit string (20)	
START value for each CN domain	MP	<1 to maxCNDo mains>		START value is described in [40].
>START	MP		Bit string (20)	
KSI, Key set identifier for each CN domain	MP	<1 to maxCNDo mains>		Key set identifier is described in [40].
>KSI	MP		Bit string (3)	

A.3 Frequency information

Neighbour cell list.

Information Element/Group name	Need	Multi	Type and reference	Semantics description	Version
FDD cell list	OP	<1 to maxFDDFr eqList>			
>UARFCN downlink (Nd)	MP		Integer(0 16383)	[21]	
>Primary scrambling code	OP	<1 to maxFDDFr eqCellList>	Primary CPICH info 10.3.6.60		
3.84 Mcps TDD cell list	OP	<1 to maxTDDFr eqList>			
>UARFCN (Nt)	MP		Integer(0 16383)	[22]	
>Cell parameters ID	OP	<1 to maxTDDFr eqCellList>	Integer (0127)	The Cell parameters ID is described in [32].	
1.28 Mcps TDD cell list	OP	<1 to maxTDDFr eqList>			REL-4
>UARFCN (Nt)	MP		Integer(0	[22]	REL-4

Information Element/Group	Need	Multi	Type and	Semantics	Version
name			reference	description	
			16383)		
>Cell parameters ID	OP	<1 to maxTDDFr eqCellList>	Integer (0127)	The Cell parameters ID is described in [32].	REL-4
GSM Neighbour cell list	OP				
>GSM neighbour cell info	MP	<1 to maxGSMC ellList>			
>>BSIC	MP				
>>BCCH ARFCN	MP				

A.4 Multiplicity values and type constraint values

Constant	Explanation	Value
Ciphering information		
maxCNDomains	Maximum number of CN domains	4
Frequency information		
maxFDDFreqList	Maximum number of FDD carrier frequencies to be stored in USIM	4
maxTDDFreqList	Maximum number of TDD carrier frequencies to be stored in USIM	4
maxFDDFreqCellList	Maximum number of neighbouring FDD cells on one carrier to be stored in USIM	32
maxTDDFreqCellList	Maximum number of neighbouring TDD cells on one carrier to be stored in USIM	32
maxGSMCellList	Maximum number of GSM cells to be stored in USIM	32

Annex B (informative): Description of RRC state transitions

This annex contains Stage 2 description of RRC states and state transitions.

B.1 RRC states and state transitions including GSM

After power on, the UE stays in Idle Mode until it transmits a request to establish an RRC Connection. In Idle Mode the connection of the UE is closed on all layers of the access stratum. In Idle Mode the UE is identified by non-access stratum identities such as IMSI, TMSI and P-TMSI. In addition, the UTRAN has no own information about the individual Idle Mode UEs, and it can only address e.g. all UEs in a cell or all UEs monitoring a paging occasion. The UE behaviour within this mode is described in [4].

The UTRA RRC Connected Mode is entered when the RRC Connection is established. The UE is assigned a radio network temporary identity (RNTI) to be used as UE identity on common transport channels.

The RRC states within UTRA RRC Connected Mode reflect the level of UE connection and which transport channels that can be used by the UE.

For inactive stationary data users the UE may fall back to PCH on both the Cell and URA levels. That is, upon the need for paging, the UTRAN checks the current level of connection of the given UE, and decides whether the paging message is sent within the URA, or should it be sent via a specific cell.

B.2 Transition from Idle Mode to UTRA RRC Connected Mode

The transition to the UTRA RRC Connected Mode from the Idle Mode can only be initiated by the UE by transmitting a request for an RRC Connection. The event is triggered either by a paging request from the network or by a request from upper layers in the UE.

When the UE receives a message from the network that confirms the RRC connection establishment, the UE enters the CELL_FACH or CELL_DCH state of UTRA RRC Connected Mode.

In the case of a failure to establish the RRC Connection the UE goes back to Idle Mode. Possible causes are radio link failure, a received reject response from the network or lack of response from the network (timeout).

B.2.1 Transitions for Emergency Calls

Refer to [4] for all states and procedures referred to in this subclause. When UE leaves idle mode from state *Camped on any cell* in order to make an emergency call, moving to state *Connected mode (emergency calls only)*, the UE shall attempt to access the current serving cell. If the access attempt to the serving cell fails the UE shall use the *Cell Reselection* procedure. If no acceptable cell is found, the UE shall use the *Any cell selection*. When returning to idle mode, the UE shall use the procedure *Cell selection when leaving connected mode* in order to find an acceptable cell to camp on, state *Camped on any cell*.

B.3 UTRA RRC Connected Mode States and Transitions

B.3.1 CELL_DCH state

The CELL_DCH state is characterised by

- For TDD: A dedicated physical channel is allocated to the UE in uplink and downlink or a dedicated physical channel is allocated to the UE in the uplink and HS_DSCH_RECEPTION is set to TRUE.

- A dedicated physical channel is allocated to the UE in uplink and downlink.
- The UE is known on cell level according to its current active set.
- Dedicated transport channels, downlink and uplink (TDD) shared transport channels, and a combination of these transport channels can be used by the UE.

The CELL_DCH-state is entered from the Idle Mode through the setup of an RRC connection, or by establishing a dedicated physical channel from the CELL_FACH state.

In TDD a PDSCH may be assigned to the UE in this state, to be used for a DSCH. A PUSCH may also be assigned to the UE in this state, to be used for a USCH. If PDSCH or PUSCH are used for TDD, a FACH transport channel may be assigned to the UE for reception of physical shared channel allocation messages.

B.3.1.1 Transition from CELL DCH to Idle Mode

Transition to Idle Mode is realised through the release of the RRC connection.

B.3.1.2 Transition from CELL DCH to CELL FACH state

Transition to CELL FACH state occurs when all dedicated channels have been released, which may be

a) via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

at the end of the time period for which the dedicated channel was allocated (TDD)

B.3.1.3 Transition from CELL DCH to CELL PCH state

Transition to CELL_PCH state occurs via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.1.4 Transition from CELL DCH to URA PCH state

Transition to URA_PCH state occurs via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.1.5 Radio Resource Allocation tasks (CELL_DCH)

For the DCH, several physical channel allocation strategies may be applied. The allocations can be either permanent (needing a DCH release message) or based on time or amount-of-data.

Resource allocation can be done separately for each packet burst with fast signalling on the DCH

For each radio frame the UE and the network indicate the current data rate (in uplink and downlink respectively) using the transport format combination indicator (TFCI). However, in TDD, DCH and DSCH or USCH may be mapped on different CCTrCHs, their TFCI are totally independent. DCH transmission is not modified by the simultaneous existence of DSCH/USCH. If the configured set of combinations (i.e. transport format set for one transport channel) are found to be insufficient to retain the QoS requirements for a transport channel, the network initiates a reconfiguration of the transport format set (TFS) for that transport channel. This reconfiguration can be done during or in between data transmission. Further, the network can reconfigure the physical channel allowing an increase or decrease of the peak data rate.

For the uplink data transmission, the UE reports the observed traffic volume to the network in order for the network to re-evaluate the current allocation of resources. This report contains e.g. the amount of data to be transmitted or the buffer status in the UE.

B.3.1.6 RRC Connection mobility tasks (CELL_DCH)

Depending on the amount and frequency of data macrodiversity (soft handover) may or may not be applied.

The RRC Connection mobility is handled by measurement reporting, soft handover and Timing re-initialised or Timing-maintained hard handover procedures.

B.3.1.7 UE Measurements (CELL DCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the connected mode measurement control information received in other states until new measurement control information has been assigned to the UE.

B.3.1.8 Acquisition of system information (CELL DCH)

FDD UEs with certain capabilities reads system information broadcast on FACH.

TDD UEs reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

B.3.2 CELL_FACH state

The CELL_FACH state is characterised by:

- No dedicated physical channel is allocated to the UE.
- The UE continuously monitors a FACH in the downlink.
- The UE is assigned a default common or shared transport channel in the uplink (e.g. RACH) that it can use anytime according to the access procedure for that transport channel.
- The position of the UE is known by UTRAN on cell level according to the cell where the UE last made a cell update.
- In TDD mode, one or several USCH or DSCH transport channels may have been established.

B.3.2.1 Transition from CELL_FACH to CELL_DCH state

A transition occurs, when a dedicated physical channel is established via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.2.2 Transition from CELL_FACH to CELL_PCH state

The transition occurs when UTRAN orders the UE to move to CELL_PCH state, which is done via explicit signalling (e.g. CELL UPDATE CONFIRM, RADIO BEARER RECONFIGURATION, etc.).

B.3.2.3 Transition from CELL FACH to Idle Mode

Upon release of the RRC connection, the UE moves to the idle mode.

B.3.2.4 Transition from CELL_FACH to URA_PCH State

The transition occurs when UTRAN orders the UE to move to URA _PCH state, which is done via explicit signalling (e.g. URA UPDATE CONFIRM, RADIO BEARER RECONFIGURATION, etc.).

B.3.2.5 Radio Resource Allocation Tasks (CELL_FACH)

In the CELL_ FACH state the UE will monitor an FACH. It is enabled to transmit uplink control signals and it may be able to transmit small data packets on the RACH.

The network can assign the UE transport channel parameters (e.g. transport format sets) in advance, to be used when a DCH is used. Upon assignment of the physical channel for DCH, the UE moves to CELL_DCH state and uses the pre-assigned TFS for the DCH.

If no UE dedicated physical channel or transport channel configuration has been assigned, the UE uses the common physical channel and transport channel configuration according to the system information.

For the uplink data transmission, the UE reports the observed traffic volume to the network in order for the network to re-evaluate the current allocation of resources. This report contains e.g. the amount of data to be transmitted or the buffer status in the UE.

When there is either user or control data to transmit, a selection procedure determines whether the data should be transmitted on a common transport channel, or if a transition to CELL_DCH should be executed. The selection is dynamic and depends on e.g. traffic parameters (amount of data, packet burst frequency).

In the TDD mode, the UTRAN can assign USCH / DSCH resources to the UE in CELL_FACH state. When USCH / DSCH resources are assigned, the UE will continue to monitor FACHs, depending on the UE capability. The UE may use the USCH / DSCH to transmit signalling messages or user data in the uplink and / or the downlink using USCH and / or DSCH when resources are allocated to cell and UE is assigned use of those USCH / DSCH.

For the uplink data transmission on USCH the UE reports to the network the traffic volume (current size of RLC data buffers), The UTRAN can use these measurement reports to re-evaluate the current allocation of the USCH / DSCH resources.

B.3.2.6 RRC Connection mobility tasks (CELL_FACH)

In this state the location of the UE is known on cell level. A cell update procedure is used to report to the UTRAN, when the UE selects a new cell to observe the common downlink channels of a new cell. Downlink data transmission on the FACH can be started without prior paging.

The UE monitors the broadcast channel and system information on BCCH of its own and neighbour cells and from this the need for the updating of cell location is identified.

The UE performs cell reselection and upon selecting a new UTRA cell, it initiates a cell update procedure. Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and makes an access to that system according to its specifications.

B.3.2.7 UE Measurements (CELL_FACH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

By default, the UE uses the measurement control information broadcast within the system information. However, for measurements for which the network also provides measurement control information within a MEASUREMENT CONTROL message, the latter information takes precedence.

B.3.2.8 Transfer and update of system information (CELL_FACH)

The UE reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

When the system information is modified, the scheduling information is updated to reflect the changes in system information transmitted on BCH. The new scheduling information is broadcast on FACH in order to inform UEs about the changes. If the changes are applicable for the UE, the modified system information is read on BCH.

B.3.3 CELL PCH state

The CELL_PCH state is characterised by:

- No dedicated physical channel is allocated to the UE.
- The UE selects a PCH with the algorithm specified in subclause 8.5.19, and uses DRX for monitoring the selected PCH via an associated PICH.
- No uplink activity is possible.
- The position of the UE is known by UTRAN on cell level according to the cell where the UE last made a cell update in CELL_FACH state.

The DCCH logical channel cannot be used in this state. If the network wants to initiate any activity, it needs to make a paging request on the PCCH logical channel in the known cell to initiate any downlink activity.

B.3.3.1 Transition from CELL PCH to CELL FACH state

The UE is transferred to CELL_FACH state:

- a) by paging from UTRAN (PAGING TYPE1 message)
- b) through any uplink access

B.3.3.2 Radio Resource Allocation Tasks (CELL_PCH)

In CELL_PCH state no resources have been granted for data transmission. For this purpose, a transition to another state has to be executed.

The UE may use Discontinuous Reception (DRX) in order to reduce power consumption. When DRX is used the UE needs only to receive at one paging occasion per DRX cycle. The UE may be instructed to use a specific DRX cycle length by the network. The UE determines its paging occasions in the same way as for Idle Mode, see [4].

B.3.3.3 RRC Connection mobility tasks (CELL_PCH)

In the CELL_PCH state, the UE mobility is performed through cell reselection procedures, which may differ from the one defined in [4].

The UE performs cell reselection and upon selecting a new UTRA cell, it moves to CELL_FACH state and initiates a cell update procedure in the new cell. After the cell update procedure has been performed, the UE changes its state back to CELL_PCH state if neither the UE nor the network has any more data to transmit.

Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and make an access to that system according to its specifications.

In case of low UE activity, UTRAN may want to reduce the cell-updating overhead by ordering the UE to move to the URA_PCH State. This transition is made via the CELL_FACH state. UTRAN may apply an inactivity timer, and optionally, a counter, which counts the number of cell updates e.g. UTRAN orders the UE to move to URA_PCH when the number of cell updates has exceeded certain limits (network parameter).

B.3.3.4 UE Measurements (CELL PCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the measurement control information according to the system information when no UE dedicated measurement control information has been assigned.

B.3.3.5 Transfer and update of system information (CELL_PCH)

The UE reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

B.3.4 URA PCH State

The URA_PCH state is characterised by:

- No dedicated channel is allocated to the UE.
- The UE selects a PCH with the algorithm specified in subclause 8.5.19, and uses DRX for monitoring the selected PCH via an associated PICH.
- No uplink activity is possible.
- The location of the UE is known on UTRAN Registration area level according to the URA assigned to the UE during the last URA update in CELL_FACH state.

The DCCH logical channel cannot be used in this state. If the network wants to initiate any activity, it needs to make a paging request on the PCCH logical channel within the URA where the location of the UE is known. If the UE needs to transmit anything to the network, it goes to the CELL_FACH state. The transition to URA_PCH State can be controlled with an inactivity timer, and optionally, with a counter that counts the number of cell updates. When the number of cell updates has exceeded certain limits (a network parameter), then the UE changes to the URA_PCH State.

URA updating is initiated by the UE, which, upon the detection of the Registration area, sends the network the Registration area update information on the RACH of the new cell.

B.3.4.1 Transition from URA_PCH State to CELL_FACH State (URA_PCH)

Any activity causes the UE to be transferred to CELL_FACH State.

- a) Uplink access is performed by RACH.
- b) by paging from UTRAN (PAGING TYPE1 message).

NOTE: The release of an RRC connection is not possible in the URA_PCH State. The UE will first move to CELL_FACH State to perform the release signalling.

B.3.4.2 Radio Resource Allocation Tasks (URA_PCH)

In URA_PCH State no resources have been granted for data transmission. For this purpose, a transition to CELL_FACH State has to be executed.

The UE may use Discontinuous Reception (DRX) in order to reduce power consumption. When DRX is used the UE needs only to receive at one paging occasion per DRX cycle. The UE may be instructed to use a specific DRX cycle length by the network. The UE determines its paging occasions in the same way as for Idle Mode, see [4].

B.3.4.3 RRC Connection mobility tasks (URA_PCH)

In URA_PCH State the location of a UE is known on UTRAN Registration area level.

In this state, the UE mobility is performed through URA reselection procedures, which may differ from the definitions in [4]. The UE performs cell reselection and upon selecting a new UTRA cell belonging to a URA that does not match the URA used by the UE, the UE moves to CELL_FACH state and initiates a URA update towards the network. After the URA update procedure has been performed, the UE changes its state back to URA_PCH state if neither the UE nor the network has any more data to transmit.

Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and makes an access to that system according to its specifications.

B.3.4.4 UE Measurements (URA PCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the measurement control information according to the system information when no UE dedicated measurement control information has been assigned.

B.3.4.5 Transfer and update of system information (URA_PCH)

The same mechanisms to transfer and update system information as for state CELL_PCH are applicable for UEs in URA_PCH state.

B.3.5 States and Transitions for Cell Reselection in URA_PCH, CELL_PCH, and CELL_FACH

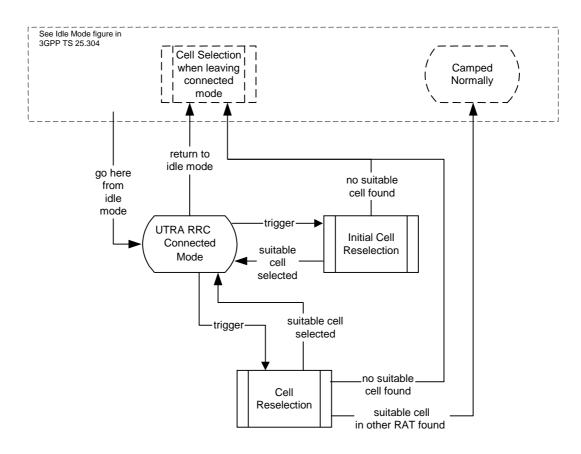


Figure B.3.5-1: UTRA RRC Connected mode cell reselection for URA_PCH, CELL_PCH, and CELL_FACH

In some states the UE performs cell reselection procedures. The UE selects a suitable cell (defined in [4]) and radio access technology based on connected mode radio measurements and cell reselection criteria.

Figure B.3.5-1 shows the states and procedures in the cell reselection process in connected mode.

When a cell reselection is triggered, the UE evaluates the cell reselection criteria based on radio measurements, and if a better cell is found that cell is selected, procedure Cell reselection (see [4]). If the change of cell implies a change of radio access technology, the RRC connection is released, and the UE enters idle mode of the other RAT. If no suitable cell is found in the cell reselection procedure, the UE eventually enters idle mode.

When an Initial cell reselection is triggered, the UE shall use the Initial cell reselection procedure (see [4]) to find a suitable cell. One example where this procedure is triggered is at radio link failure, where the UE may trigger an initial cell reselection in order to request re-establishment of the RRC connection. If the UE is unable to find a suitable cell, the UE eventually enters idle mode.

B.4 Inter-RAT handover with CS domain services

When using CS domain services, UTRAN is using an Inter-Radio access system Handover Procedure and GSM is using a Handover procedure for the transition from UTRA RRC Connected Mode to GSM Connected Mode.

B.5 Inter-RAT handover with PS domain services

When using PS domain services, the UE can initiate cell reselection from a GSM/GPRS cell to a UTRAN cell and then uses the RRC Connection Establishment procedure for the transition to UTRA RRC Connected mode. It is also possible for the BSS to initiate a UTRA Inter-RAT Handover to seamlessly relocate the UE to UTRAN. In this latter case there is no need to return the UE to Idle Mode (GPRS Packet Idle Mode) and the UE immediately moves to RRC connected state in the UTRAN.

In the case that cell reselection is used, when the RRC Connection is established from Idle Mode (GPRS Packet Idle Mode) the RRC CONNECTION REQUEST message contains an indication, that UTRAN needs to continue an already established GPRS UE context from the CN. This indication allows UTRAN to e.g. prioritise the RRC CONNECTION REQUEST from the UE.

In UTRA RRC connected mode UTRAN may use UE or network initiated cell reselection to change from a UTRAN cell to a GSM/GPRS cell. If the cell reselection was successful the UE enters Idle Mode (GPRS Packet Idle Mode). The UE sends a packet channel request from Idle Mode (GPRS Packet Idle mode) to establish a Temporary Block flow and enter GPRS Packet Transfer Mode. In the GPRS Packet Transfer Mode the UE sends a RA Update request message. The RA Update Request message sent from the UE contains an indication that GSM/GPRS need to continue an already established UTRAN UE context from the CN. This means that the RA Update request is always sent for the transition from UTRA RRC Connected Mode to GSM/GPRS regardless if the RA is changed or not.

Alternatively, the UTRAN may use an Inter-System Relocation (PS Handover) to relocate a UTRA RRC connected UE directly to GPRS Packet Transfer Mode in GERAN.

NOTE: The reason for using RA update instead of a new message is to reduce the impact on the existing GSM/GPRS specification.

B.6 Inter-RAT handover with simultaneous PS and CS domain services

B.6.1 Inter-RAT handover UTRAN to GSM / BSS

For a UE in CELL_DCH state using both CS and PS Domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from UTRAN.

The UE performs the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode first. When the UE has sent handover complete message to GSM / BSS the UE initiates a temporary block flow towards GPRS and sends a RA update request.

If the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode was successful the handover is considered as successful regardless if the UE was able to establish a temporary block flow or not towards GPRS.

In case of Inter-RAT handover failure the UE has the possibility to go back to UTRA RRC Connected Mode and reestablish the connection in the state it originated from.

B.6.2 Inter-RAT handover GSM / BSS to UTRAN

For a UE in GSM Connected Mode using both CS and PS domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from GSM / BSS.

The UE performs the Inter-RAT handover from GSM Connected Mode to UTRA RRC Connected Mode.

In UTRA RRC Connected Mode both services are established in parallel.

If the Inter-RAT handover from GSM Connected mode to UTRA RRC Connected Mode was successful the handover is considered as successful.

In case of Inter-RAT handover failure the UE has the possibility to go back to GSM Connected Mode and re-establish the connection in the state it originated from.

Annex C (informative):

Description for the Compressed Coding of Pre-defined configurations included in the INTER RAT HANDOVER INFO message

This annex contains a description of the compressed coding of the IE "Predefined configuration status information compressed" (see subclause 10.3.4.5b) included in the INTER RAT HANDOVER INFO message.

C.1 Definitions

Pre-defined configuration set with different value tags: This is a set of consecutive positions for which pre-defined configurations are stored with different value tags. The set cannot include positions for which no pre-defined configuration is stored.

Pre-defined configuration list with variable size: This is the variable sized list consisting of the value tags corresponding to the remaining positions after the "Pre-defined configuration sets with different value tags" have been formed. This will also indicate not stored pre-defined configurations, either explicitly or implicitly (i.e. in the case that there are no more stored configurations until the end of the variable sized list). This is highlighted in figures C.2-1 and C.2-2.

C.2 Examples of the methodology

From figure C.2-1 it can be seen that there are two "Pre-defined configuration sets with different value tags".

The start position of Set1 is "1" with a list of 7 pre-defined configurations {1, 2, 3, 4, 5, 6, 7}.

The start position of Set2 is "10" with a list of 6 pre-defined configurations {10, 11, 12, 13, 14, 15}.

The "Pre-defined configurations list with variable size" has a start position of 0, and includes all of the pre-defined configurations not included in the sets {0, 8, 9}. The value tag at position 9 is not stored. This does not need to be explicitly indicated in the coding as "not stored" because there are no stored pre-defined configurations positioned after this in the list.

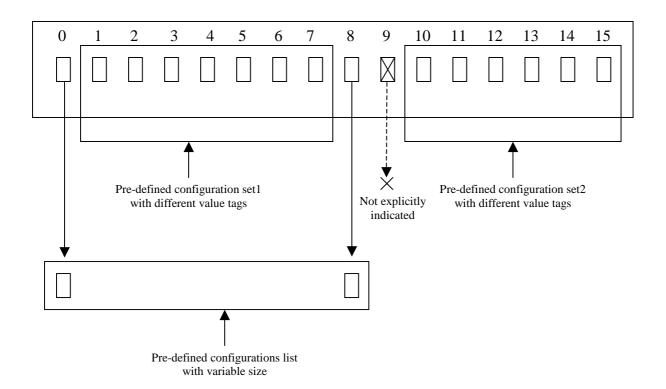


Figure C.2-1: Example scenario where non-stored pre-defined configurations do not need to be explicitly indicated

Figure C.2-2 is similar to Figure C.2-1. However in this case for the "Pre-defined configurations list with variable size", the pre-defined configuration in position 8 is not stored. This needs to be explicitly indicated in the coding as "not stored" because there is a stored pre-defined configuration (position 9) positioned after this in the list.

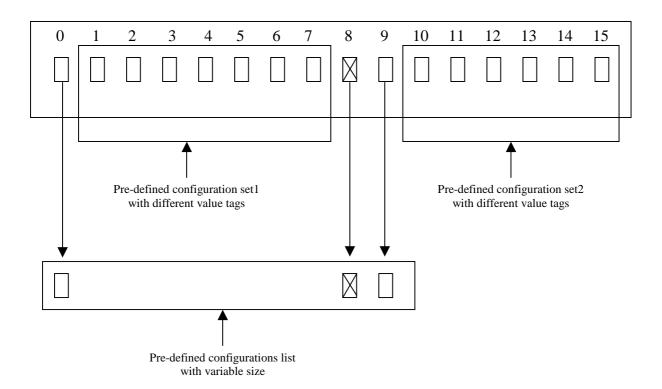


Figure C.2-2: Example scenario where non-stored pre-defined configurations need to be explicitly indicated

Annex D (Normative): Implementation of Domain Specific Access Control (DSAC) in UEs of 3GPP Release 5

UEs of 3GPP Release 5 implementing the domain specific access class control feature but not implementing the network sharing feature shall act on the domain specific access class restriction indicated by the IE "Domain Specific Access Restriction Parameters For PLMN Of MIB" if present, and otherwise apply the access restrictions indicated by the IE "Cell Access Restriction".

Annex E (informative): Change history

Change history												
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Old	New					
10/1999	RP-05	RP-99524	-		Approved at TSG-RAN #5 and placed under Change Control	-	3.0.0					
12/1999	RP-06	RP-99650	001		Modification of RRC procedure specifications	3.0.0	3.1.0					
	RP-06	RP-99654	005	1	Introduction of Information Element for Power Control Algorithm	3.0.0	3.1.0					
	RP-06	RP-99654	007	1	RRC parameters for SSDT	3.0.0	3.1.0					
	RP-06	RP-99656	009	1	Inclusion of information elements for integrity protection	3.0.0	3.1.0					
	RP-06	RP-99656	010	2	Security mode control procedure	3.0.0	3.1.0					
	RP-06	RP-99656	011	3	Updates of the system information procedure	3.0.0	3.1.0					
	RP-06	RP-99656	012	2	Inter-frequency measurements and reporting	3.0.0	3.1.0					
	RP-06	RP-99656	013	1	Inter-system measurements and reporting	3.0.0	3.1.0					
	RP-06	RP-99656	014	1	Additional measurements in RRC measurement messages	3.0.0	3.1.0					
	RP-06	RP-99656	015	3	Value range for Measurement Information Elements	3.0.0	3.1.0					
	RP-06	RP-99656	016	2	Message contents for inter system handover to UTRAN	3.0.0	3.1.0					
	RP-06	RP-99652	017		Inclusion of ciphering information elements	3.0.0	3.1.0					
	RP-06	RP-99651	018		Corrections and editorial changes	3.0.0	3.1.0					
	RP-06	RP-99654	019	1	Algorithm for CTCF Calculation	3.0.0	3.1.0					
	RP-06	RP-99651	025		Logical CH for RRC Connection Re-establishment (RRC Connection Re-establishment deleted in RAN_10, RP-000715)	3.0.0	3.1.0					
	RP-06	RP-99719	026	1	Gain Factors	3.0.0	3.1.0					
	RP-06	RP-99654	027	1	Parameters for CELL UPDATE CONFIRM message	3.0.0	3.1.0					
	RP-06	RP-99651	028		Cell Update Cause	3.0.0	3.1.0					
	RP-06	RP-99654	029	1	RRC Initialisation Information	3.0.0	3.1.0					
	RP-06	RP-99656	034	1	Open loop power control for PRACH	3.0.0	3.1.0					
	RP-06	RP-99652	038		Addition of the UE controlled AMR mode adaptation	3.0.0	3.1.0					
	RP-06	RP-99651	039		Information elements for RLC reset	3.0.0	3.1.0					
	RP-06	RP-99656	040		Support for DS-41 Initial UE Identity	3.0.0	3.1.0					
	RP-06	RP-99656	042	2	Integration of Cell Broadcast Service (CBS)	3.0.0	3.1.0					
	RP-06	RP-99654	044	1	Gated transmission of DPCCH	3.0.0	3.1.0					
	RP-06	RP-99656	045	Ė	Modification to the Transport Format Combination Control message	3.0.0	3.1.0					
	RP-06	RP-99656	046		New Information elements and modifications to messages required in order to support configuration and re-configuration of the DSCH in FDD mode	3.0.0	3.1.0					
	RP-06	RP-99654	047	1	Editorial Corrections and Alignments with Layer 1 specifications	3.0.0	3.1.0					
	RP-06	RP-99654	048	1	Information elements for TDD shared channel operation	3.0.0	3.1.0					
	RP-06	RP-99656	049		Description of CN dependent IEs in Master Information Block	3.0.0	3.1.0					
	RP-06	RP-99650	050		UE capability information elements	3.0.0	3.1.0					
	RP-06	RP-99656	051	1	UTRAN response time to uplink feedback commands of TX diversity control	3.0.0	3.1.0					
	RP-06	RP-99654	052		New and corrected CPCH parameters	3.0.0	3.1.0					
	RP-06	RP-99654	053	2	Compressed mode parameters without gating	3.0.0	3.1.0					
	RP-06	RP-99654	054		Transport format combination set and transport format combination subset	3.0.0	3.1.0					
	RP-06	RP-99656	055	1	Information elements for cell selection and reselection	3.0.0	3.1.0					
	RP-06	RP-99654	056	t	Corrections and Alignments of the RRC to the L1 for TDD	3.0.0	3.1.0					
	RP-06	RP-99656	057	1	Introduction of a SCCH procedure	3.0.0	3.1.0					
	RP-06	RP-99656	061		Support for DS-41 Paging UE Identity	3.0.0	3.1.0					
	RP-06	RP-99656	062	2	Support for cdma2000 Hard Handover	3.0.0	3.1.0					
	RP-06	RP-99656	063	1	Provide necessary signalling to support FDD DSCH	3.0.0	3.1.0					
	RP-06	RP-99654	064	l'	RRC procedure interactions	3.0.0	3.1.0					
	RP-06	RP-99654	066	1	Transfer of UE capabilities	3.0.0	3.1.0					
	RP-06	RP-99654	067	l'	Selection of initial UE identity	3.0.0	3.1.0					
	RP-06	RP-99657	069	-	UE capability verification in the security mode control procedure	3.0.0	3.1.0					
	RP-06	RP-99657		1	DPCH initial power	3.0.0	3.1.0					
1		RP-99657	070 071	₽—	Actions when entering idle mode	3.0.0	3.1.0					
	RP-06											

Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-06			1			IAGM
	RP-06				for FDD		<u> </u>
		RP-99657	073	1	Signalling radio bearers	3.0.0	3.1.0
	RP-06	RP-99654	074		CN information elements	3.0.0	3.1.0
	RP-06	RP-99654	076	4	UE information elements	3.0.0	3.1.0
	RP-06	RP-99657	077	1	Radio bearer, transport channel and physical channel information elements	3.0.0	3.1.0
	RP-06	RP-99654	078		Other information elements	3.0.0	3.1.0
	RP-06	RP-99657	079	2	RRC signalling for PDCP	3.0.0	3.1.0
	RP-06	RP-99654	080		Content of Measurement Control Messages	3.0.0	3.1.0
	RP-06	RP-99654	081		RRC Information Elements to support Block STTD transmission diversity in TDD	3.0.0	3.1.0
	RP-06	RP-99657	082	1	Signalling connection release	3.0.0	3.1.0
1	RP-06	RP-99657	083	1	Addition of cell access restriction information elements to System Information	3.0.0	3.1.0
	RP-06	RP-99655	085	1	RRC Connection Establishment parameters	3.0.0	3.1.0
1	RP-06	RP-99657	092	1	Support of UE autonomous update of a active set on a non-used frequency	3.0.0	3.1.0
	RP-06	RP-99657	095	1	TPC combining for power control	3.0.0	3.1.0
	RP-06	RP-99653	096	1	Editorial Modification of IEs in RRC messages	3.0.0	3.1.0
	RP-06	RP-99655	097		Selection of SCCPCH	3.0.0	3.1.0
	RP-06	RP-99655	098	1	RRC Initialisation Information	3.0.0	3.1.0
	RP-06	RP-99657	100	1	Support of physical channel establishment and failure criteria in the UE	3.0.0	3.1.0
<u> </u>	RP-06	RP-99655	102	1	RRC Connection Re-establishment (Message deleted in RAN_10, RP-000715)	3.0.0	3.1.0
	RP-06	RP-99657	106	1	System information on FACH	3.0.0	3.1.0
	RP-06	RP-99657	108	1	SAPs and Primitives for DS-41 mode	3.0.0	3.1.0
	RP-06	RP-99655	109	1	TX Diversity Mode for Dedicated Channel	3.0.0	3.1.0
	RP-06	RP-99657	110	1	RACH message length signalling on System Information	3.0.0	3.1.0
	RP-06	RP-99657	113	1	Routing of NAS messages in UTRAN	3.0.0	3.1.0
	RP-06	RP-99655	116	3	TBS Identification in TFS	3.0.0	3.1.0
	RP-06	RP-99657	117	1	Merging the hard handover and some radio bearer control procedures	3.0.0	3.1.0
	RP-06	RP-99653	120	1	Selected RRC message transfer syntax	3.0.0	3.1.0
	RP-06	RP-99657	121		Efficient rate command signalling	3.0.0	3.1.0
03/2000	RP-07	RP-000043	122		TDD Mode BCH Reception in Cell DCH State	3.1.0	3.2.0
	RP-07	RP-000043			Uplink Outer Loop Power Control in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000043		1	TFS TB Size Calculation with Bit Aligned TDD MAC Headers	3.1.0	3.2.0
	RP-07	RP-000043			Grouping of DRAC IEs, and detailed definitions of these IEs	3.1.0	3.2.0
<u> </u>	RP-07	RP-000043			Correction of specifications for the 'Dynamic Resource Allocation Control of Uplink DCH' Procedure	3.1.0	3.2.0
	RP-07	RP-000043	131	2	Clarification of PDCP info and PDCP capability IEs	3.1.0	3.2.0
<u> </u>	RP-07	RP-000043			Editorial change to "Specification of system information block characteristics"	3.1.0	3.2.0
	RP-07	RP-000043	133		Additions of CBS related Information Elements	3.1.0	3.2.0
	RP-07	RP-000043			Signalling for computed gain factors	3.1.0	3.2.0
	RP-07	RP-000043		1	General error handling procedures	3.1.0	3.2.0
	RP-07	RP-000043		1	RRC message extensions	3.1.0	3.2.0
	RP-07	RP-000043			Padding of RRC messages using RLC transparent mode	3.1.0	3.2.0
	RP-07	RP-000043		2	UE information elements	3.1.0	3.2.0
	RP-07	RP-000043		1	Other information elements	3.1.0	3.2.0
	RP-07	RP-000043		3	Integrity protection function	3.1.0	3.2.0
	RP-07 RP-07	RP-000043 RP-000043		4	RAB-RB relations Inter-system handover from UTRAN	3.1.0	3.2.0 3.2.0
	RP-07	RP-000043		3	Handover to UTRAN including procedure for pre- configuration	3.1.0	3.2.0
	RP-07	RP-000043		2	RRC measurement filtering parameters	3.1.0	3.2.0
	RP-07	RP-000043			New event "RL out of UE Rx window"	3.1.0	3.2.0
	RP-07	RP-000043		1	Access control on RACH	3.1.0	3.2.0
	RP-07	RP-000044		2	cdma2000 Hard Handover	3.1.0	3.2.0
	RP-07	RP-000044		1	CPCH parameters with corrections	3.1.0	3.2.0

Date	TSG #	TSG Doc.	CR	Pov	Change history Subject/Comment	Old	New
Date	RP-07	RP-000044		Rev	U-plane AM RLC reconfiguration by cell update procedure	3.1.0	3.2.0
	RP-07	RP-000044		3	CPCH	3.1.0	3.2.0
	RP-07	RP-000044	_		Information elements for ASC in TDD		
	RP-07			1		3.1.0	3.2.0
	_	RP-000044			Addition of timing advance value in handover related messages	3.1.0	3.2.0
	RP-07	RP-000044		2	Physical channel description for TDD	3.1.0	3.2.0
	RP-07	RP-000044			Message contents for the intersystem command message to UTRAN operating in TDD mode	3.1.0	3.2.0
	RP-07	RP-000044			Corrections on use of PUSCH power control info and minor corrections	3.1.0	3.2.0
	RP-07	RP-000044	162	2	UE individual DRX cycles in CELL_PCH and URA_PCH states	3.1.0	3.2.0
	RP-07	RP-000044			Correction to Transport Format Combination Control procedure	3.1.0	3.2.0
	RP-07	RP-000044	164	3	Downlink outer loop power control	3.1.0	3.2.0
	RP-07	RP-000044	165	2	Redirection of RRC connection setup	3.1.0	3.2.0
	RP-07	RP-000044	166	2	Inter-frequency measurements in CELL_FACH state	3.1.0	3.2.0
	RP-07	RP-000044	167		List of found editorial mistakes in the Dec99 version of 25.331 (V3.1.0)	3.1.0	3.2.0
	RP-07	RP-000044	168	1	Transport block size	3.1.0	3.2.0
	RP-07	RP-000044	169	1	Cell Access Restriction	3.1.0	3.2.0
	RP-07	RP-000044			Editorial modification	3.1.0	3.2.0
	RP-07	RP-000044		1	Modification of DPCH info	3.1.0	3.2.0
	RP-07	RP-000045		1	Measurement control message	3.1.0	3.2.0
	RP-07	RP-000045		2	Reporting cell status	3.1.0	3.2.0
	RP-07	RP-000045			Additional IE for RB release	3.1.0	3.2.0
	RP-07	RP-000045		-	Available SF in PRACH info	3.1.0	3.2.0
	RP-07	RP-000045			Traffic volume measurement event	3.1.0	3.2.0
	RP-07	RP-000045			Report of multiple cells on an event result	3.1.0	3.2.0
	RP-07	RP-000045			Editorial modification on Direct Transfer	3.1.0	3.2.0
	RP-07	RP-000045			Correction of the Security Mode Control procedure	3.1.0	3.2.0
	RP-07	RP-000045	180	1	Maximum calculated Transport Format Combination	3.1.0	3.2.0
	RP-07	RP-000045	183		Additional DPCH IEs to align 25.331 with 25.214	3.1.0	3.2.0
	RP-07	RP-000045	184	1	RB – DCH mapping	3.1.0	3.2.0
	RP-07	RP-000045	188	1	Modifications related to FDD mode DSCH	3.1.0	3.2.0
	RP-07	RP-000045	189	1	Identification of Shared Channel Physical Configuration in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045	192	1	Uplink Outer Loop Power Control During Hard Handover	3.1.0	3.2.0
	RP-07	RP-000045	193		Support of Multiple CCTrCH's in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045	194	1	Uplink Physical Channel Control in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045		1	Transfer of initial information from UE to target RNC prior to	3.1.0	3.2.0
-	RP-07	RP-000045	202	1	handover to UTRAN CN information elements	3.1.0	3.2.0
	RP-07	RP-000045		+	UTRAN mobility information elements	3.1.0	3.2.0
	RP-07	RP-000045		1	RB information elements	3.1.0	3.2.0
	RP-07	RP-000045		1	Physical channel information elements		3.2.0
					· ·	3.1.0	
	RP-07	RP-000046		1	UE capability information elements	3.1.0	3.2.0
	RP-07	RP-000046		<u> </u>	UE variables	3.1.0	3.2.0
	RP-07	RP-000046		1	Actions when entering idle mode	3.1.0	3.2.0
	RP-07	RP-000046			Usage of pilot bits	3.1.0	3.2.0
	RP-07	RP-000046			System information procedure corrections	3.1.0	3.2.0
	RP-07	RP-000046	212		Reconfiguration of ciphering	3.1.0	3.2.0
	RP-07	RP-000046	213	1	Enhancements to RRC connection re-establishment procedure (Message subsequently deleted in RAN_!), RP-000715)	3.1.0	3.2.0
	RP-07	RP-000046	215		Updates to RRC Initialisation Information transparent container and addition of reverse direction container description	3.1.0	3.2.0
	RP-07	RP-000046	220	1	Changes in RRC messages to support lossless SRNC relocation	3.1.0	3.2.0
	RP-07	RP-000046		1	Measurements of unlisted neighbouring cells	3.1.0	3.2.0
	RP-07	RP-000046		2	Inclusion of Location Services	3.1.0	3.2.0
	RP-07	RP-000046		1	Application of Access Service Classes and relation to Access	3.1.0	3.2.0
	RP-07	RP-000046	252	1	Classes DRX indicator presence and state entering mechanism at the end of a procedure	3.1.0	3.2.0

Deta	TCO "	TCC D	lcr.	In-	Change history	014	New
Date	TSG #	TSG Doc. RP-000046	CR	Rev 1	Subject/Comment Physical shared channel allocation procedure	Old 3.1.0	New 3.2.0
	RP-07	RP-000046		-	Corrections to TDD specific parameters in PICH info	3.1.0	3.2.0
	RP-07	RP-000046			Editorial modifications	3.1.0	3.2.0
	RP-07	RP-000046		2	Introduction of mapping function information in Cell selection and	3.1.0	3.2.0
	RP-07	RP-000046			Ciphering and integrity HFN	3.1.0	3.2.0
	RP-07	RP-000046		-	New SIB for UP	3.1.0	3.2.0
	RP-07	RP-000046 RP-000047			Removal of synchronization Case 3	3.1.0	3.2.0
	RP-07	RP-000047			TX Diversity	3.1.0	3.2.0
	RP-07	RP-000047			Update of tabular format clause 10	3.1.0	3.2.0
	RP-07	RP-000047			ASN.1 description	3.1.0	3.2.0
06/2000	RP-08	RP-000047		5	Downlink power control in compressed mode	3.2.0	3.3.0
00/2000	RP-08	RP-000222		1	Clarification on physical channel allocations in TDD	3.2.0	3.3.0
	RP-08						
	RP-08	RP-000222		4	TDD Measurements and Reporting	3.2.0	3.3.0
		RP-000222		4	Signalling of IEs related to System Information on FACH	3.2.0	3.3.0
	RP-08	RP-000222		3	Transport Format Combination Control	3.2.0	3.3.0
	RP-08	RP-000222		1	Signalling of partial failure in radio bearer related procedures	3.2.0	3.3.0
	RP-08	RP-000222		<u> </u>	Clarification on PDCP info	3.2.0	3.3.0
	RP-08	RP-000222		_	Editorial modification on Transport Ch capability	3.2.0	3.3.0
	RP-08	RP-000222		<u> </u>	Editorial modification on CN IE	3.2.0	3.3.0
	RP-08	RP-000222		3	Editorial modification on Physical CH IE	3.2.0	3.3.0
	RP-08	RP-000222		1	Editorial modification on ASN.1 description	3.2.0	3.3.0
	RP-08	RP-000222		1	IEs on SIB5/6	3.2.0	3.3.0
	RP-08	RP-000222		2	Re-establishment timer	3.2.0	3.3.0
	RP-08	RP-000222	286	1	CN DRX cycle coefficient	3.2.0	3.3.0
	RP-08	RP-000222	287	1	Cell Access Restriction	3.2.0	3.3.0
	RP-08	RP-000222	288	1	Cell selection and re-selection parameters	3.2.0	3.3.0
	RP-08	RP-000222	289	2	Modification on Measurement IE	3.2.0	3.3.0
	RP-08	RP-000222	291	1	RACH Transmission parameters	3.2.0	3.3.0
	RP-08	RP-000222	292	1	SCCPCH System Info	3.2.0	3.3.0
	RP-08	RP-000222	293	1	Addition of HFN for RRC CONNECTION RE-ESTABLISHMENT	3.2.0	3.3.0
					COMPLETE		
	RP-08	RP-000223		1	RLC reconfiguration indicator	3.2.0	3.3.0
	RP-08	RP-000223		3	RLC Info	3.2.0	3.3.0
	RP-08	RP-000223		1	Usage of Transport CH ID	3.2.0	3.3.0
	RP-08	RP-000223		2	Transport format combination set	3.2.0	3.3.0
	RP-08	RP-000223		1	Usage of U-RNTI and C-RNTI in DL DCCH message	3.2.0	3.3.0
	RP-08	RP-000223			Description of Cell Update Procedure	3.2.0	3.3.0
	RP-08	RP-000223		1	System information modification procedure	3.2.0	3.3.0
	RP-08	RP-000223	305		Functional descriptions of the RRC messages	3.2.0	3.3.0
	RP-08	RP-000223	306		Clarification of CTFC calculation	3.2.0	3.3.0
	RP-08	RP-000223	307	3	Compressed mode parameters	3.2.0	3.3.0
	RP-08	RP-000223	309	2	Signalling procedure for periodic local authentication	3.2.0	3.3.0
	RP-08	RP-000223	310	5	Editorial corrections on security	3.2.0	3.3.0
	RP-08	RP-000223	311	2	Security capability	3.2.0	3.3.0
	RP-08	RP-000223	312	1	Corrections on ASN.1 definitions	3.2.0	3.3.0
	RP-08	RP-000223		2	DRX cycle lower limit	3.2.0	3.3.0
	RP-08	RP-000223		1	Removal of CPICH SIR measurement quantity	3.2.0	3.3.0
	RP-08	RP-000223		1	Signalling connection release request	3.2.0	3.3.0
	RP-08	RP-000223		1	Change to IMEI coding from BCD to hexadecimal	3.2.0	3.3.0
	RP-08	RP-000223		1	Removal of RLC sequence numbers from RRC initialisation information	3.2.0	3.3.0
	RP-08	RP-000223	320	3	Addition of the length of PDCP sequence numbers into PDCP info	3.2.0	3.3.0
	RP-08	RP-000224	323	1	BSIC verification of GSM cells	3.2.0	3.3.0
	RP-08	RP-000224			Reporting cell status	3.2.0	3.3.0
	RP-08	RP-000224			RRC measurement filtering parameters	3.2.0	3.3.0
	RP-08	RP-000224			Cell-reselection parameter signalling	3.2.0	3.3.0
4	1 55	RP-000224		3	Multiplicity values	3.2.0	3.3.0

					Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-08	RP-000224			Quality measurements	3.2.0	3.3.0
	RP-08	RP-000224		4	CPCH Status Indication mode correction	3.2.0	3.3.0
	RP-08	RP-000224		4	End of CPCH transmission	3.2.0	3.3.0
	RP-08	RP-000224			Handover to UTRAN procedure	3.2.0	3.3.0
	RP-08	RP-000224	333		Harmonization of access service classes in FDD and TDD	3.2.0	3.3.0
	RP-08	RP-000224	334	1	Correction to usage of primary CCPCH info and primary CPICH info	3.2.0	3.3.0
	RP-08	RP-000224	335		Corrections and clarifications on system information handling	3.2.0	3.3.0
	RP-08	RP-000224	336		Editorial corrections	3.2.0	3.3.0
	RP-08	RP-000224	337	1	Editorial corrections on uplink timing advance	3.2.0	3.3.0
	RP-08	RP-000224	339		Correction of Transport Format Combination tabular format and ASN.1	3.2.0	3.3.0
	RP-08	RP-000224	340	1	UE variables	3.2.0	3.3.0
	RP-08	RP-000224	342	1	General error handling	3.2.0	3.3.0
	RP-08	RP-000224	344	1	System Information extensibility in ASN.1 definitions	3.2.0	3.3.0
	RP-08	RP-000224	345		Usage of pilot bits	3.2.0	3.3.0
	RP-08	RP-000224	346	3	RRC connection release procedure	3.2.0	3.3.0
	RP-08	RP-000225	347	1	Alignment of Section 10.3 on methodology defined in 25.921	3.2.0	3.3.0
	RP-08	RP-000225	348		Modifications of cell (re)selection parameters	3.2.0	3.3.0
	RP-08	RP-000225	350	1	GPS time-of-week represented as seconds and fractions of seconds	3.2.0	3.3.0
	RP-08	RP-000225	351	2	CPCH corrections	3.2.0	3.3.0
	RP-08	RP-000225	352		PLMN type selection	3.2.0	3.3.0
	RP-08	RP-000225	353	3	Paging and establishment cause values	3.2.0	3.3.0
	RP-08	RP-000225	354		Common channel configurations	3.2.0	3.3.0
	RP-08	RP-000225	355	2	Clarification of prioritization of logical channels in UE	3.2.0	3.3.0
	RP-08	RP-000225	357	2	UE capability corrections	3.2.0	3.3.0
	RP-08	RP-000225	358	2	Clarification of HFN	3.2.0	3.3.0
	RP-08	RP-000225	359	3	Clarification of Integrity Protection	3.2.0	3.3.0
	RP-08	RP-000225	360	1	RRC message size optimization regarding TrCH parameters	3.2.0	3.3.0
	RP-08	RP-000225	361		Protocol extensions in ASN	3.2.0	3.3.0
	RP-08	RP-000225	362	1	Downloading of pre- defined configurations via SIB 16	3.2.0	3.3.0
	RP-08	RP-000225	363	1	Optimization of System Information	3.2.0	3.3.0
	RP-08	RP-000225	364	1	CPCH gain factor	3.2.0	3.3.0
	RP-08	RP-000225	368	2	SFN Transmission Rate in TDD Mode	3.2.0	3.3.0
	RP-08	RP-000225	371	1	Integrity Control	3.2.0	3.3.0
	RP-08	RP-000225	372		Modification to measurement event evaluation	3.2.0	3.3.0
	RP-08	RP-000225	373		System Information related parameters	3.2.0	3.3.0
	RP-08	RP-000226	375	1	Changes in RB mapping info	3.2.0	3.3.0
	RP-08	RP-000226	377		Editorial corrections to PRACH system information and Cell info	3.2.0	3.3.0
	RP-08	RP-000226	378		Editorial Corrections to 25.331 Procedures and Tabular Format	3.2.0	3.3.0
	RP-08	RP-000226		1	Corrections to figures and procedures for the failure cases	3.2.0	3.3.0
	RP-08	RP-000226			Corrections on use of ORDERED_CONFIG	3.2.0	3.3.0
	RP-08	RP-000226		1	Corrections to Transport Channel and RB Reconfiguration procedures	3.2.0	3.3.0
	RP-08	RP-000226	383	1	Corrections to INITIAL DIRECT TRANSFER and UE CAPABILITY INFORMATION CONFIRM procedures	3.2.0	3.3.0
	RP-08	RP-000226	384		Corrections to Transparent mode signalling info Tabular format and ASN.1	3.2.0	3.3.0
	RP-08	RP-000226	385		Corrections to Soft Handover messages and procedures	3.2.0	3.3.0
	RP-08	RP-000226	387		Corrections to RRC CONNECTION REJECT procedures	3.2.0	3.3.0
	RP-08	RP-000226	388	1	Transport format combination in TDD and Transport channel ID	3.2.0	3.3.0
	RP-08	RP-000226	389	1	Signalling for dynamic TTI in TDD	3.2.0	3.3.0
	RP-08	RP-000226	390	1	Usage of DCCH for Shared Channel Allocation message	3.2.0	3.3.0
	RP-08	RP-000226	391	1	Correction to physical channel IEs in TDD	3.2.0	3.3.0
	RP-08	RP-000226	392	1	TDD preconfiguration for Handover to UTRAN	3.2.0	3.3.0
	RP-08	RP-000226	393		Corrections to measurement control descriptions and messages	3.2.0	3.3.0
	RP-08	RP-000226	394	1	Corrections on ASN.1 definitions	3.2.0	3.3.0
	RP-08	RP-000226	395		Addition of the Segmentation indication field for transparent	3.2.0	3.3.0

Doto	TCC #	TCC Dec	I C D	Inav	Change history		Mour
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment mode RLC in the RLC Info	Old	New
	RP-08	RP-000226	306	1	Radio Bearer identity for CCCH	3.2.0	3.3.0
	RP-08	RP-000226		1	ASN.1 definitions for RRC information between network nodes	3.2.0	3.3.0
	RP-08	RP-000227	398	1	NAS Routing	3.2.0	3.3.0
	RP-08	RP-000227	399	+	DPCCH power control preamble	3.2.0	3.3.0
	RP-08	RP-000227		2	Modifications of Assisted GPS Messages	3.2.0	3.3.0
	RP-08	RP-000227			Choice of Initial UE Identity	3.2.0	3.3.0
	RP-08	RP-000227		-	ANSI-41 information elements	3.2.0	3.3.0
	RP-08	RP-000227	404	1	RLC value ranges	3.2.0	3.3.0
	RP-08	RP-000227	_	1	HFN Reset	3.2.0	3.3.0
	RP-08	RP-000227		1	Clarification on ciphering parameters and integrity protection	3.2.0	3.3.0
	111 -00	1000227	403	Ι'	procedure in case of SRNS relocation	5.2.0	3.3.0
	RP-08	RP-000227	410	1	Clarification of compressed mode activation and configuration	3.2.0	3.3.0
	RP-08	RP-000227	<i>1</i> 12	1	failure Modification of the RLC Size IE	3.2.0	3.3.0
	RP-08	RP-000227	414	l'	CPCH DL Power control	3.2.0	3.3.0
	RP-08	RP-000227		1	SFN measurements in TDD	3.2.0	3.3.0
09/2000	RP-09	RP-000361		3	Clarification on multiplicity of PCH and PICH and S-CCPCH	3.3.0	3.4.0
09/2000	KF-09	KF-000301	330		selection	3.3.0	3.4.0
	RP-09	RP-000361	403	3	Parameters to be stored in the USIM	3.3.0	3.4.0
	RP-09	RP-000361	413	3	Optimization of Inter-system handover message	3.3.0	3.4.0
	RP-09	RP-000361	416	2	Timing Advance in Handover Procedures	3.3.0	3.4.0
	RP-09	RP-000361	417	2	Synchronization of Timing Advance and Timing Deviation Measurement	3.3.0	3.4.0
	RP-09	RP-000361	418		Downlink Physical Channels Per Timeslot	3.3.0	3.4.0
	RP-09	RP-000361	419		TDD Mode DCH Reception in Cell DCH State	3.3.0	3.4.0
	RP-09	RP-000361	420	2	Downlink Power Control During DTX in TDD Mode	3.3.0	3.4.0
	RP-09	RP-000361	421	1	Paging Indicator Length Definition	3.3.0	3.4.0
	RP-09	RP-000361	422		Updating & alignment of RRC containers & handover to UTRAN information transfer	3.3.0	3.4.0
	RP-09	RP-000361	424		Default values for UE timers and counters	3.3.0	3.4.0
	RP-09	RP-000361		1	Security mode control	3.3.0	3.4.0
	RP-09	RP-000361		1	Corrections and Editorial updates to chapter 8	3.3.0	3.4.0
	RP-09	RP-000361		<u> </u>	Corrections and editorial updates to chapter 10	3.3.0	3.4.0
	RP-09	RP-000361		1	Transition from CELL_DCH to CELL_PCH and URA_PCH state	3.3.0	3.4.0
	RP-09	RP-000361			Assisted GPS Messaging and Procedures	3.3.0	3.4.0
	RP-09	RP-000361	431	2	Corrections to Activation Time use	3.3.0	3.4.0
	RP-09	RP-000361			Editorial Corrections to measurement reporting range	3.3.0	3.4.0
	RP-09	RP-000361		4	Default DPCH offset value and DPCH offset	3.3.0	3.4.0
	RP-09	RP-000361		3	RLC info	3.3.0	3.4.0
	RP-09	RP-000362		Ħ	Clarification of the description of IE semantics in "RB with PDCP	3.3.0	3.4.0
	RP-09	RP-000362	438	1	information" Editorial corrections on security	3.3.0	3.4.0
	RP-09	RP-000362		+	Editorial correction to RB mapping info	3.3.0	3.4.0
	RP-09	RP-000362		1	Compressed mode configuration failure	3.3.0	3.4.0
	RP-09	RP-000362		+	Gain factors for TDD	3.3.0	3.4.0
	RP-09	RP-000362		lacksquare	Introduction of Default DPCH Offset Value in TDD	3.3.0	3.4.0
	RP-09	RP-000362		1	Optimization of handover to UTRAN command	3.3.0	3.4.0
	RP-09	RP-000362		+	Editorial corrections	3.3.0	3.4.0
	RP-09	RP-000362		1	Mapping of channelisation code	3.3.0	3.4.0
	RP-09	RP-000362		2	DL TFCS Limitation	3.3.0	3.4.0
	RP-09	RP-000362		-	SIB offset	3.3.0	3.4.0
	RP-09	RP-000362		1	RRC CONNECTION RELEASE cause	3.3.0	3.4.0
	RP-09	RP-000362		1	Addition of RACH TFCS	3.3.0	3.4.0
	RP-09	RP-000362		2	Cell Identity	3.3.0	3.4.0
	RP-09	RP-000362		 	Editorial Modifications	3.3.0	
				1			3.4.0
	RP-09	RP-000362		1	TDD PRACH Power Control for Spreading Factor 8/16	3.3.0	3.4.0
	RP-09	RP-000362		<u> </u>	TDD CCTrCH Repetition Length Definition	3.3.0	3.4.0
	RP-09	RP-000362	45/	1	Reporting threshold of traffic volume measurements	3.3.0	3.4.0

Date	TSG#	TSG Doc.	CR	Rev	Change history Subject/Comment	Old	New
Date	RP-09	RP-000362		2	UP GPS assistance data for SIB	3.3.0	3.4.0
	RP-09	RP-000362		1	Support of cell update confirm on CCCH	3.3.0	3.4.0
	RP-09	RP-000363		1	Max Window Size in RLC capabilities	3.3.0	3.4.0
	RP-09	RP-000363		3	UE handling of CFN	3.3.0	3.4.0
	RP-09	RP-000363		1	Correction of padding description in clause 12	3.3.0	3.4.0
	RP-09	RP-000363		1	Window size in RLC info	3.3.0	3.4.0
	RP-09	RP-000363		1	TFC Control Duration	3.3.0	3.4.0
	RP-09	RP-000363	467	<u> </u>	System Information Block Tabular Information	3.3.0	3.4.0
	RP-09	RP-000363		1	Frequency encoding in inter-system handover messages	3.3.0	3.4.0
	RP-09	RP-000363		 	RRC message size optimization regarding TFS parameters	3.3.0	3.4.0
	RP-09	RP-000363		2	RACH selection	3.3.0	3.4.0
	RP-09	RP-000363			DRX cycle lower limit	3.3.0	3.4.0
	RP-09	RP-000363			Rx window size in RLC info	3.3.0	3.4.0
	RP-09	RP-000363		1	Corrections & optimizations regarding system information blocks of length 215221	3.3.0	3.4.0
	RP-09	RP-000363	477	1	Corrections on 8.1.1 resulting from RRC review at R2#14	3.3.0	3.4.0
	RP-09	RP-000363		1	Corrections to the RRC connection release procedure	3.3.0	3.4.0
	RP-09	RP-000363		1	New release cause for signalling connection re-establishment	3.3.0	3.4.0
	RP-09	RP-000363	480	1	Correction to IE midamble shift and burst type	3.3.0	3.4.0
	RP-09	RP-000363	481	1	Correction in RLC info	3.3.0	3.4.0
	RP-09	RP-000363		ł –	Description of CTCH occasions	3.3.0	3.4.0
	RP-09	RP-000363		1	TDD CCTrCH UL/DL Pairing for Inner Loop Power Control	3.3.0	3.4.0
	RP-09	RP-000363	486	1	DCCH and BCCH Signalling of TDD UL OL PC Information	3.3.0	3.4.0
	RP-09	RP-000364	487	1	Broadcast SIBs for TDD UL OL PC Information	3.3.0	3.4.0
	RP-09	RP-000364	490	1	CPCH corrections	3.3.0	3.4.0
	RP-09	RP-000364	492	3	Corrections to Security IEs	3.3.0	3.4.0
	RP-09	RP-000364	494	1	Corrections to parameters to be stored in the USIM	3.3.0	3.4.0
	RP-09	RP-000364	496	ľ	Editorial corrections	3.3.0	3.4.0
	RP-09	RP-000364	497	2	Physical Shared Channel Allocation procedure	3.3.0	3.4.0
	RP-09	RP-000364	498		Correction to Transport Format Combination Control Message	3.3.0	3.4.0
	RP-09	RP-000364		1	Usage of Cell Parameter ID	3.3.0	3.4.0
	RP-09	RP-000364		 	RB description for SHCCH	3.3.0	3.4.0
	RP-09	RP-000364		1	Use of LI in UM	3.3.0	3.4.0
	RP-09	RP-000364		1	Minor Corrections to RRC Protocol Specification	3.3.0	3.4.0
	RP-09	RP-000364		1	Correction to Cell Update Cause	3.3.0	3.4.0
	RP-09			<u> </u>	•		
	RP-09	RP-000364 RP-000364			Correction on T307 definition Corrections to relative priorities in RRC Protocol	3.3.0	3.4.0
					·		
	RP-09	RP-000364 RP-000364		1	Unification of Reconfiguration Procedures Changes to section 8.2 proposed at Paris RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000364 RP-000364		1			3.4.0
	RP-09			1_	Establishment Cause	3.3.0	3.4.0
	RP-09	RP-000364		1	PRACH partitioning		3.4.0
	RP-09	RP-000364		1	Editorial Correction on Active Set Update	3.3.0	3.4.0
	RP-09	RP-000364		1	Editorial Correction regarding system information	3.3.0	3.4.0
	RP-09	RP-000365		1	Clarification on Reporting Cell Status	3.3.0	3.4.0
	RP-09	RP-000365	1513	1	Editorial corrections on RRC Connection Establishment and Release procedures NOTE: In subclause 8.1.4.6, the change from "decrease" to "increase" for V308 was decided to be incorrect after discussion on the TSG-RAN WG2 reflector and was not implemented	3.3.0	3.4.0
	RP-09	RP-000365	514	Ī	Gated Transmission Control Info	3.3.0	3.4.0
	RP-09	RP-000365	515	1	Cell selection/reselection parameters for SIB 3/4	3.3.0	3.4.0
	RP-09	RP-000365			Implementation of Ec/N0 parameters and optimization of SIB 11/12	3.3.0	3.4.0
	RP-09	RP-000365	517	Ĭ	PRACH Info	3.3.0	3.4.0
	RP-09	RP-000365	518	1	Uplink DPCH power control info	3.3.0	3.4.0
	RP-09	RP-000365		i i	AICH power offset value range	3.3.0	3.4.0
	RP-09	RP-000365	520		Direct paging of RRC connected UE in CELL_PCH/URA_PCH NOTE: This CR was postponed in TSG-RAN #9 and was wrongly included in v3.4.0. This was corrected in v3.4.1	3.3.0	3.4.0

_		1		-	Change history		I
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-09	RP-000365			Corrections to Sections 1-7	3.3.0	3.4.0
	RP-09	RP-000365			Error handling for Uplink Physical Channel Control procedure	3.3.0	3.4.0
	RP-09	RP-000365			Corrections to downlink outer loop power control in compressed mode	3.3.0	3.4.0
	RP-09	RP-000365	524	1	Clarification on measurement procedure using compressed mode	3.3.0	3.4.0
	RP-09	RP-000365	525	1	Updates to cell and URA update procedures based on RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000365	526	1	Updates to RNTI allocation procedure based on RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000365	528		PRACH constant value	3.3.0	3.4.0
	RP-09	RP-000365	530	1	Corrections to the paging procedure	3.3.0	3.4.0
	RP-09	RP-000365	532	1	Moving of text from 25.304	3.3.0	3.4.0
	RP-09	RP-000365	533	1	Message extensibility	3.3.0	3.4.0
	RP-09	RP-000365	534	1	Additions to "State of RRC Procedure" in RRC Initialisation	3.3.0	3.4.0
	RP-09	RP-000365	EDE	4	information, source RNC to target RNC	3.3.0	3.4.0
	KP-09	RP-000365	535	1	Support of codec negotiation		
	-	-	-		Removal of contents of CR 520 from v3.4.0, because it was postponed at TSG-RAN #9 and by accident included anyway.	3.4.0	3.4.1
12/2000	RP-10	RP-000570	536		Downlink outer-loop power control in compressed mode	3.4.1	3.5.0
	RP-10	RP-000570	537	1	Correction in the use of "U-RNTI Short"	3.4.1	3.5.0
	RP-10	RP-000570	538		Corrections related to UE Timing	3.4.1	3.5.0
	RP-10	RP-000570	539		Corrections to SFN-SFN definition	3.4.1	3.5.0
	RP-10	RP-000570	541	1	Corrections to definition and use of Activation Time	3.4.1	3.5.0
	RP-10	RP-000570			Corrections to logical channel priorities	3.4.1	3.5.0
	RP-10	RP-000570		1	Correction to codec negotiation	3.4.1	3.5.0
	RP-10	RP-000570		1	CFN-SFN observed time difference measurement	3.4.1	3.5.0
	RP-10	RP-000570		1	Correction to timing indication for hard handover	3.4.1	3.5.0
	RP-10	RP-000570		1	UE Radio Access Capability Corrections	3.4.1	3.5.0
	RP-10	RP-000570		1	RRC establishment and paging causes for NAS signalling	3.4.1	3.5.0
	RP-10	RP-000570		-	Corrections to Intra-frequency measurements and Traffic volume	3.4.1	3.5.0
	KF-10	KF-000570	549		measurements	3.4.1	3.3.0
	RP-10	RP-000570	551	1	PRACH/RACH System information	3.4.1	3.5.0
	RP-10	RP-000570	553	1	GSM Measurement reporting	3.4.1	3.5.0
	RP-10	RP-000570	554	1	BLER measurement and quality target	3.4.1	3.5.0
	RP-10	RP-000570	556	1	Clarification of PDCP sequence number window terminology	3.4.1	3.5.0
	RP-10	RP-000570	559	1	Clarification on Error Handling	3.4.1	3.5.0
	RP-10	RP-000570			Removal of compressed mode measurement purpose "other"	3.4.1	3.5.0
	RP-10	RP-000570				3.4.1	3.5.0
	RP-10	RP-000570		2	Reporting multiple GSM cells	3.4.1	3.5.0
	RP-10	RP-000571		1	Number of RLs that can be removed in Active Set update	3.4.1	3.5.0
	RP-10	RP-000571		1	Clarification on Segment Index	3.4.1	3.5.0
	RP-10	RP-000571		3	RRC procedure performance requirements	3.4.1	3.5.0
	RP-10	RP-000571		1	Correction of newInterSystemCellList and	3.4.1	3.5.0
	RP-10	RP-000571		4	MeasurementControlSysInfo in ASN.1 Removal of Flow Id concept while maintaining lu interface	3.4.1	3.5.0
					flexibility		
	RP-10	RP-000571		2	Ciphering and reset	3.4.1	3.5.0
	RP-10	RP-000571	575	1	Corrections and clarifications concerning inter-RAT change procedures	3.4.1	3.5.0
	RP-10	RP-000571	576	1	General Security Clarifications	3.4.1	3.5.0
	RP-10	RP-000571	577		Clarification on RB 0	3.4.1	3.5.0
	RP-10	RP-000571	578		Clarification on the transition of RRC state	3.4.1	3.5.0
	RP-10	RP-000571	580	1	UP measurements for RRC information to target RNC	3.4.1	3.5.0
	RP-10	RP-000571	581		Correction on LCS reporting criteria	3.4.1	3.5.0
	RP-10	RP-000574	583	1	CSICH Corrections	3.4.1	3.5.0
	RP-10	RP-000571		1	Clarification to handling of satellite health issues	3.4.1	3.5.0
	RP-10	RP-000571			Clarification on activation time	3.4.1	3.5.0
	RP-10	RP-000571			Clarification on activation time for ciphering in TM	3.4.1	3.5.0
	RP-10	RP-000571		2	Measurement procedures and messages	3.4.1	3.5.0
	RP-10	RP-000571		1	Inter-RAT UE radio access capability	3.4.1	3.5.0
	RP-10	RP-000571		1	Clarification on cell update/URA update procedures	3.4.1	3.5.0
		000071	JU2		C.aCation on con apacto/ora apacto procedures	Ŭ. ¬. I	0.0.0

	I=0.0 #	I=0.0		_	Change history		1
Date	TSG #	TSG Doc.			Subject/Comment	Old	New
	RP-10	RP-000571		4	Protocol States and Process	3.4.1	3.5.0
	RP-10	RP-000571		1	System Information	3.4.1	3.5.0
	RP-10	RP-000715	597	5	RRC Connection Management Procedures, Generic procedures and actions	3.4.1	3.5.0
	RP-10	RP-000572	598	1	Paging Procedures	3.4.1	3.5.0
	RP-10	RP-000572	599		NAS signalling Procedures	3.4.1	3.5.0
	RP-10	RP-000572		3	Radio Bearer Control Procedures	3.4.1	3.5.0
	RP-10	RP-000572	601	1	Corrections to the Counter Check Procedure	3.4.1	3.5.0
	RP-10	RP-000572	602		Tabular Information and ASN.1	3.4.1	3.5.0
	RP-10	RP-000572	604	2	Corrections to Measurement Occasion concept	3.4.1	3.5.0
	RP-10	RP-000572	606		Corrections concerning optimisation of RB information	3.4.1	3.5.0
	RP-10	RP-000572		1	Corrections to security	3.4.1	3.5.0
	RP-10	RP-000572		1	Ciphering activation time for DPCH	3.4.1	3.5.0
	RP-10	RP-000572			Confirmation of signalling connection establishment	3.4.1	3.5.0
	RP-10	RP-000572		2	RACH Sub-channel signalling	3.4.1	3.5.0
	RP-10	RP-000572		2	Assistance data delivery for UP	3.4.1	3.5.0
	RP-10	RP-000572		1	Clarification of LCS measurements	3.4.1	3.5.0
	RP-10	RP-000572		2	Configuration of RLC PDU sizes for logical channels	3.4.1	3.5.0
	RP-10	RP-000574			PICH power offset for TDD	3.4.1	3.5.0
	RP-10	RP-000572			Correction for PDSCH power control for TDD	3.4.1	3.5.0
	RP-10	RP-000574			Usage of dynamic spreading factor in uplink	3.4.1	3.5.0
	RP-10	RP-000572			Correction of Midamble Shift for Burst Type 3	3.4.1	3.5.0
	RP-10	RP-000572			Correction of text concerning Scheduling of System Information	3.4.1	3.5.0
	RP-10	RP-000572		1	Alignment of GSM'99 BA Range concept and its inclusion in	3.4.1	3.5.0
		111 000072	OZZ	•	UTRA	0.4.1	0.0.0
	RP-10	RP-000572	623	1	Clarification of RB mapping info	3.4.1	3.5.0
	RP-10	RP-000572	624	1	Correction to UE multi-RAT capability	3.4.1	3.5.0
	RP-10	RP-000573	625		Correction to PDCP sequence number exchange during hard	3.4.1	3.5.0
	RP-10	RP-000573	629	2	handover DCH Quality Target	3.4.1	3.5.0
	RP-10	RP-000573		1	Simultaneous release of RBs and signalling connection	3.4.1	3.5.0
	RP-10	RP-000573			Correction on Transport Channel Reconfiguration	3.4.1	3.5.0
	RP-10	RP-000573			Limitation of DRX cycle length	3.4.1	3.5.0
	RP-10	RP-000573			Signalling of the alpha value in TDD for open loop power control	3.4.1	3.5.0
	RP-10	RP-000574			Support for improved compressed mode handling for TDD	3.4.1	3.5.0
	KF-10	KF-000373	033		measurements	3.4.1	3.3.0
	RP-10	RP-000573	636		Usage of secondary CPICH and secondary scrambling code	3.4.1	3.5.0
	RP-10	RP-000573	639		Expiration time of SIB type 7, 14	3.4.1	3.5.0
	RP-10	RP-000573	640		Correction to integrity protection	3.4.1	3.5.0
	RP-10	RP-000684	641		Downlink Outer Loop Control	3.4.1	3.5.0
03/2001	RP-11	RP-010029	642	2	RL Failure in cell update procedure	3.5.0	3.6.0
	RP-11	RP-010029	645	1	Clarification on COUNTER CHECK	3.5.0	3.6.0
	RP-11	RP-010029	646	2	Traffic Volume Measurement corrections	3.5.0	3.6.0
	RP-11	RP-010029		2	Reserved TFCI for the TDD Special Burst	3.5.0	3.6.0
	RP-11	RP-010029	653		Correction to description of RRC state transitions	3.5.0	3.6.0
	RP-11	RP-010029	657		RLC re-establish correction	3.5.0	3.6.0
	RP-11	RP-010029	658	1	Removal of RLC logical channel mapping indicator	3.5.0	3.6.0
	RP-11	RP-010029			New paging and establishment cause "Unknown"	3.5.0	3.6.0
	RP-11	RP-010029		1	Miscellaneous procedure corrections	3.5.0	3.6.0
	RP-11	RP-010029			Corrections to compressed mode pattern sequence handling	3.5.0	3.6.0
	RP-11	RP-010029			Inter-system change clarifications	3.5.0	3.6.0
	RP-11	RP-010029		1	RLC status transmission in CELL_PCH and URA_PCH	3.5.0	3.6.0
	RP-11	RP-010029		1	Clarification of RB information parameter values for SRB0	3.5.0	3.6.0
	RP-11	RP-010029			Encoding for RRC- container	3.5.0	3.6.0
	RP-11	RP-010029		2	Update of message extension and encoding descriptions	3.5.0	3.6.0
	RP-11	RP-010032		4	Introduction of default pre-defined configurations	3.5.0	3.6.0
	RP-11	RP-010029		2	Security corrections	3.5.0	3.6.0
 	RP-11	RP-010029			Clarifications on Blind Handover Support	3.5.0	3.6.0

Doto	TSG #	TCC Dec	CD	Day	Change history	014	Now
Date	RP-11	TSG Doc. RP-010029	CR 671	1	Subject/Comment Missing descriptions of UE actions	Old 3.5.0	New 3.6.0
	RP-11	RP-010029		2	Corrections on UE Positioning information	3.5.0	3.6.0
	RP-11	RP-010029		1	Security related corrections to SRNS	3.5.0	3.6.0
	RP-11	RP-010023		2	Downlink power offsets	3.5.0	3.6.0
	RP-11	RP-010032		2	Checking the integrity of UE security capabilities	3.5.0	3.6.0
	RP-11	RP-010274		1	Clarification to Secondary CCPCH info	3.5.0	3.6.0
	RP-11	RP-010030		1	Miscellaneous corrections	3.5.0	3.6.0
	RP-11	RP-010030		<u> </u>	Removal of Layer 3 filtering for RACH	3.5.0	3.6.0
	RP-11	RP-010030		2		3.5.0	3.6.0
	RP-11			2	Correction of compressed mode parameters Removal of immediate cell evaluation	3.5.0	3.6.0
		RP-010030		_			
	RP-11	RP-010030		2	Scheduling of SIB 15.2 and SIB 15.3	3.5.0	3.6.0
	RP-11	RP-010030		1	Correction to ECN modules	3.5.0	3.6.0
	RP-11	RP-010030		1	Improvement of the description of timing advance for TDD	3.5.0	3.6.0
	RP-11	RP-010030			Correction on timing advance and allocation for shared channels	3.5.0	3.6.0
	RP-11	RP-010030		1	Clarification on SF 1 signalling	3.5.0	3.6.0
	RP-11	RP-010030		1	Correction to power control in TDD	3.5.0	3.6.0
	RP-11	RP-010030			Midamble - Channelisation code association for TDD	3.5.0	3.6.0
	RP-11	RP-010030			Network requested reporting for physical shared channel allocation	3.5.0	3.6.0
	RP-11	RP-010030	693		System Information	3.5.0	3.6.0
	RP-11	RP-010030	694	1	Clarification on Transport Channel Identity	3.5.0	3.6.0
	RP-11	RP-010030	696	1	Editorial Correction	3.5.0	3.6.0
	RP-11	RP-010030	698	2	Correction to add coding of intra domain NAS node selector	3.5.0	3.6.0
	RP-11	RP-010030	700	1	Corrections to system information block characteristics in TDD	3.5.0	3.6.0
	RP-11	RP-010030	701	2	ASN.1 corrections	3.5.0	3.6.0
	RP-11	RP-010030	702	2	Measurement related corrections	3.5.0	3.6.0
	RP-11	RP-010031	703	1	Clarifications on TFC Control procedure	3.5.0	3.6.0
	RP-11	RP-010031	704	2	Association of PLMN ID to neighbour cells	3.5.0	3.6.0
	RP-11	RP-010031	705	1	TFCS Selection Guidelines	3.5.0	3.6.0
	RP-11	RP-010031	710		Special Burst Scheduling During DTX in TDD	3.5.0	3.6.0
	RP-11	RP-010031	711	1	Radio Link Failure Criteria in TDD	3.5.0	3.6.0
	RP-11	RP-010031	712	1	Correction & Clarification to TDD RACH Subchannels	3.5.0	3.6.0
	RP-11	RP-010031	713	1	Number of retransmission of RRC CONNECTION REQUEST	3.5.0	3.6.0
	RP-11	RP-010031	714		Uplink Frequency Notification	3.5.0	3.6.0
	RP-11	RP-010031	715		Clarification of Radio Bearer Mapping for DCH/DSCH Transport Channels	3.5.0	3.6.0
	RP-11	RP-010031	716		Correction of mismatches between tabular and ASN.1	3.5.0	3.6.0
	RP-11	RP-010031			Correction to discontinuous reception in TDD	3.5.0	3.6.0
	RP-11	RP-010031			Power control preamble	3.5.0	3.6.0
	RP-11	RP-010031			Maximum number of AM entity	3.5.0	3.6.0
	RP-11	RP-010031		1	Real-time Integrity Broadcast	3.5.0	3.6.0
	RP-11	RP-010031		3	Moving Real-time Integrity description to different chapter	3.5.0	3.6.0
	RP-11	RP-010031		1	Removal of the payload unit concept	3.5.0	3.6.0
	RP-11	RP-010031		H	Security related corrections to SRNS	3.5.0	3.6.0
	RP-11	RP-010031		1	Periodic PLMN selection correction	3.5.0	3.6.0
	RP-11	RP-010031		1	Modification of "SSDT Information" IE parameters to indicate if	3.6.0	4.0.0
	RP-11	RP-010041	692	1	SSDT is used in the UL only Idle allocation for Node B synchronisation	3.6.0	4.0.0
	RP-11	RP-010041		1	Physical channel configuration information elements for 1.28	3.6.0	4.0.0
					Mcps TDD		
	RP-11	RP-010037		2	Changes to Measurement Related Signalling and Introduction of Cell (Re)selection Parameters for 1.28Mcps TDD	3.6.0	4.0.0
	RP-11	RP-010037		1	Introduction of RACH Parameters for 1.28 Mcps TDD	3.6.0	4.0.0
	RP-11	RP-010037	709		Introduction of UE radio access capability Parameters for 1.28 Mcps TDD	3.6.0	4.0.0
	RP-11	RP-010040	722	1	Introduction of IPDLs for TDD	3.6.0	4.0.0
	RP-11	RP-010039		1	ROHC updates to RRC	3.6.0	4.0.0
06/2001	RP-12	RP-010311			Clarification of the IE 'spreading factor' in Uplink DPCH info for	4.0.0	4.1.0
					FDD mode		

	I=== ::			-	Change history		1
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-12	RP-010311	733		Correction of UE Radio Access Capability depending on UTRAN FDD bands	4.0.0	4.1.0
	RP-12	RP-010311	735		Clarification on Security mode control	4.0.0	4.1.0
	RP-12	RP-010311	738		Correction of TrCH parameter handling	4.0.0	4.1.0
	RP-12	RP-010311	740		TFC Subsets in TDD	4.0.0	4.1.0
	RP-12	RP-010311	746		RRC containers	4.0.0	4.1.0
	RP-12	RP-010311			Various corrections	4.0.0	4.1.0
	RP-12	RP-010311			General error handling for system information	4.0.0	4.1.0
	RP-12	RP-010311			Order of elements in strings	4.0.0	4.1.0
	RP-12	RP-010311			Configuration consistency checks	4.0.0	4.1.0
	RP-12	RP-010312			Compressed mode corrections	4.0.0	4.1.0
	RP-12	RP-010312			Correction concerning inter-RAT procedures	4.0.0	4.1.0
	RP-12	RP-010312			Measurement corrections	4.0.0	4.1.0
	RP-12	RP-010312			RLC Tr Discard	4.0.0	4.1.0
	RP-12	RP-010312			Annex B CPCH Correction	4.0.0	4.1.0
	RP-12	RP-010312			SIB Correction for CSICH Power Offset	4.0.0	4.1.0
	RP-12	RP-010312			Transfer of Last known position in case of SRNS relocation	4.0.0	4.1.0
	RP-12	RP-010312			Corrections to UE Positioning measurements	4.0.0	4.1.0
	RP-12	RP-010312		+	GSM measurements in compressed mode	4.0.0	4.1.0
	RP-12	RP-010312			Correction of Activation Time in Inter-Rat HO Commands	4.0.0	4.1.0
	RP-12	RP-010313			Clarification of FRESH in SRNS relocation	4.0.0	4.1.0
	RP-12	RP-010313			Correction to UE timers and constants in idle mode	4.0.0	4.1.0
	RP-12	RP-010313			Clarification on multiframe allocation in TDD	4.0.0	4.1.0
	RP-12	RP-010313			Predefined parameters for logical channels	4.0.0	4.1.0
	RP-12	RP-010313			Pathloss calculation	4.0.0	4.1.0
	RP-12	RP-010313			Clarification on periodic measurement reporting	4.0.0	4.1.0
	RP-12	RP-010313		1	Handling of IE PRACH TFCS and Primary CPICH/Primary	4.0.0	4.1.0
	1(1 - 12	1010313	003	l'	CCPCH info	4.0.0	4.1.0
	RP-12	RP-010313	805		Correction to FACH measurement occasion in TDD	4.0.0	4.1.0
	RP-12	RP-010313	807		Clarification of L1 synchronization procedures	4.0.0	4.1.0
	RP-12	RP-010313	809		Correction of Activation Time definition	4.0.0	4.1.0
	RP-12	RP-010314	813		Corrections to RRC procedure performance	4.0.0	4.1.0
	RP-12	RP-010314	815		Removal of mapping function	4.0.0	4.1.0
	RP-12	RP-010314	817		Security clarifications	4.0.0	4.1.0
	RP-12	RP-010314	819		Corrections to UE Positioning	4.0.0	4.1.0
	RP-12	RP-010314	825		Definition of DPCH numbering	4.0.0	4.1.0
	RP-12	RP-010314	827		Corrections to System Information Procedure	4.0.0	4.1.0
	RP-12	RP-010314	829		Relation between DOFF and DPCH Frame Offset	4.0.0	4.1.0
	RP-12	RP-010314	831		Procedures for "same as UL"	4.0.0	4.1.0
	RP-12	RP-010314	837		Editorial and minor corrections	4.0.0	4.1.0
	RP-12	RP-010314	839		Editorial Correction	4.0.0	4.1.0
	RP-12	RP-010315			Corrections on OTDOA-IPDL specific burst parameter semantic	4.0.0	4.1.0
					description		
	RP-12	RP-010315			Error handling for messages sent from another RAT	4.0.0	4.1.0
	RP-12	RP-010315			Needed TFC in the TFCS for TDD	4.0.0	4.1.0
	RP-12	RP-010315			Clarification of TFCS selection guidelines	4.0.0	4.1.0
	RP-12	RP-010315			Clarification of Traffic Volume measurements	4.0.0	4.1.0
	RP-12	RP-010315			CFN synchronisation problems at timing re-initialised hard handover	4.0.0	4.1.0
	RP-12	RP-010315			Corrections on UP Assistance Message Descriptions	4.0.0	4.1.0
	RP-12	RP-010315			Correction on Area Scope of SIB 15.3	4.0.0	4.1.0
	RP-12	RP-010315			Correction to AICH power offset	4.0.0	4.1.0
	RP-12	RP-010316			Clarification on IE 'Downlink rate matching restriction information'	4.0.0	4.1.0
	RP-12	RP-010316			Corrections on Tabular/ASN.1	4.0.0	4.1.0
	RP-12	RP-010316			Corrections on Tabular and ASN.1 inconsistencies	4.0.0	4.1.0
	RP-12	RP-010316			Editorial corrections on Tabular and ASN.1 inconsistencies	4.0.0	4.1.0
	RP-12	RP-010316	883	Ī	UE Positioning corrections to ASN.1 and tabular	4.0.0	4.1.0
	RP-12	RP-010316	885		Corrections to resolve inconsistencies between Tabular and	4.0.0	4.1.0
1		1		1	ASN.1	I	

	Change history												
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Old	New						
	RP-12	RP-010316	887		UE positioning OTDOA Neighbour Cell Info	4.0.0	4.1.0						
	RP-12	RP-010316	889		DRAC corrections	4.0.0	4.1.0						
	RP-12	RP-010316	893		ASN.1 Correction of IE TFCS ID	4.0.0	4.1.0						
	RP-12	RP-010316	895		Correction of IE IODE range in AGPS Positioning	4.0.0	4.1.0						
	RP-12	RP-010317	897		Correction to BurstModeParameters in IPDL	4.0.0	4.1.0						
	RP-12	RP-010317	899		Corrections on inconsistencies between Tabular and ASN.1	4.0.0	4.1.0						
	RP-12	RP-010317	901		Naming of message abstract types in ASN.1	4.0.0	4.1.0						
	RP-12	RP-010317	904		Information elements outside the extension container	4.0.0	4.1.0						
	RP-12	RP-010317	906		Correction concerning DRX cycle upon inter-RAT change towards UTRAN	4.0.0	4.1.0						
	RP-12	RP-010323	773		Corrections to IPDLs for TDD	4.0.0	4.1.0						
	RP-12	RP-010323	850	2	Correction to 1.28Mcps TDD RACH parameters and operation	4.0.0	4.1.0						
	RP-12	RP-010323	851		TFCI coding in case of 8PSK	4.0.0	4.1.0						
	RP-12	RP-010323	902	1	Structure and naming of information elements	4.0.0	4.1.0						
09/2001	RP-13	RP-010544			UL Transport Channel Type Correction	4.1.0	4.2.0						
	RP-13	RP-010544			Guidelines concerning conditions, spares, defaults and correction of inconsistencies		4.2.0						
	RP-13	RP-010544	0910		Correction to TDD DL DPCH Common Timeslot Info	4.1.0	4.2.0						
	RP-13	RP-010544		1	TDD System Information Update in Cell_DCH	4.1.0	4.2.0						
	RP-13	RP-010544			Editorial Corrections	4.1.0	4.2.0						
	RP-13	RP-010544			UL DPCH Power Control Info in TDD	4.1.0	4.2.0						
	RP-13	RP-010544			CN-originated paging in CELL_PCH and URA_PCH state	4.1.0	4.2.0						
	RP-13	RP-010544			Corrections to UE variable handling	4.1.0	4.2.0						
	RP-13	RP-010544			Inter-frequency measurements	4.1.0	4.2.0						
	RP-13	RP-010544			Inter-RAT measurements	4.1.0	4.2.0						
	RP-13	RP-010671		1	Intra-frequency measurements	4.1.0	4.2.0						
	RP-13	RP-010545			Multiplexing configuration corrections	4.1.0	4.2.0						
	RP-13	RP-010545			Reception of non-dedicated control channels mapped on FACH	4.1.0	4.2.0						
					in CELL_FACH state								
	RP-13	RP-010545			Removal of C-RNTI when entering CELL_DCH	4.1.0	4.2.0						
	RP-13	RP-010545			TF and TFC set definition	4.1.0	4.2.0						
	RP-13	RP-010545			Correction of remaining ASN.1/Tabular inconsistencies	4.1.0	4.2.0						
	RP-13	RP-010545			CPICH Ec/N0 Range	4.1.0	4.2.0						
	RP-13	RP-010545			Priorities for IDNNS coding	4.1.0	4.2.0						
	RP-13	RP-010545			Dedicated pilots and S-CPICH specification related to UE specific beamforming		4.2.0						
	RP-13	RP-010545	0945		Security corrections		4.2.0						
	RP-13	RP-010546			Intra-frequency measurement events for TDD corrections	4.1.0	4.2.0						
	RP-13	RP-010546			Inconsistencies between ASN.1 and tabular format	4.1.0	4.2.0						
	RP-13	RP-010546	0957		TDD PICH corrections and clarifications	4.1.0	4.2.0						
	RP-13	RP-010546			Messages on CCCH	4.1.0	4.2.0						
	RP-13	RP-010546			Clarification of Parameter Values for Default Radio Configurations	4.1.0	4.2.0						
	RP-13	RP-010546	0963		Clarification to usage of default values in "Cell Selection and Reselection for SIB11/12Info"	4.1.0	4.2.0						
	RP-13	RP-010546	0965		Clarification of handling of System information block 14	4.1.0	4.2.0						
	RP-13	RP-010546	0967		Description of UE behaviour when receiving UE positioning related information	4.1.0	4.2.0						
	RP-13	RP-010546	0982		Clarification on periodic measurement reporting	4.1.0	4.2.0						
	RP-13	RP-010546	0984		Corrections and clarifications on Measurement procedures description	4.1.0	4.2.0						
	RP-13	RP-010547			Lossless Criteria in PDCP Info	4.1.0	4.2.0						
	RP-13	RP-010547			Corrections to cell reselection parameter values	4.1.0	4.2.0						
	RP-13	RP-010547	0990		Correction to signalling connection release	4.1.0	4.2.0						
	RP-13	RP-010547	0992		Corrections to cell update procedures	4.1.0	4.2.0						
	RP-13	RP-010547	0994		PDCP configuration and PS domain configuration checks	4.1.0	4.2.0						
	RP-13	RP-010547	0996		Correction to handling of RRC transaction identifier for Cell Update, URA Update and RRC connection setup	4.1.0	4.2.0						
	RP-13	RP-010547	0998	1	Correction of UE capabilities regarding Rx-Tx time difference type 2 measurement	4.1.0	4.2.0						
	RP-13	RP-010547	 		Correction to handling of IE 'Downlink info for each radio link'	4.1.0	4.2.0						

Dete	T00 "	ITOO D	lor.	lr:	Change history	[INcom
Date	TSG # RP-13	TSG Doc.	CR	Rev	Subject/Comment Redundant IE in Traffic volume measurement system information	Old	New
	RP-13	RP-010547			Editorial corrections	4.1.0	4.2.0
	RP-13	RP-010547 RP-010548			MAC logical channel priority added to definition of RB0 and	4.1.0	4.2.0 4.2.0
	RP-13	RP-010548	1008		SHCCH	4.1.0	4.2.0
	RP-13	RP-010548	1010		Control of primary CCPCH RSCP measurement in PUSCH	4.1.0	4.2.0
					CAPACITY REQUEST message		
	RP-13	RP-010548			Various minor corrections	4.1.0	4.2.0
	RP-13	RP-010548			Range of T312	4.1.0	4.2.0
	RP-13	RP-010548			Bitstring of channelisationCodeIndices	4.1.0	4.2.0
	RP-13	RP-010548			Transmission of UE CAPABILITY INFORMATION message	4.1.0	4.2.0
	RP-13	RP-010548			Multiple UE capabilities procedures	4.1.0	4.2.0
	RP-13	RP-010548	1024		Corrections to information elements outside the extension container	4.1.0	4.2.0
	RP-13	RP-010548	1026		SFN reporting	4.1.0	4.2.0
	RP-13	RP-010548			TFCI combining indicator	4.1.0	4.2.0
	RP-13	RP-010549			RLC reset on a Signalling Radio Bearer	4.1.0	4.2.0
	RP-13	RP-010549			Quality Indication for UE Positioning Parameters	4.1.0	4.2.0
	RP-13	RP-010549			Editorial Correction for UE Positioning	4.1.0	4.2.0
	RP-13	RP-010549			Clarification on the current status of ciphering	4.1.0	4.2.0
	RP-13	RP-010549			Clarification on HFN initialization at SRB and RB setup	4.1.0	4.2.0
	RP-13	RP-010549			Clarification on Inter-RAT measurement	4.1.0	4.2.0
	RP-13	RP-010549			Clarification on re-assembly of segments	4.1.0	4.2.0
	RP-13	RP-010549		 	Minor Corrections	4.1.0	4.2.0
	RP-13	RP-010549			Support of dedicated pilots for channel estimation	4.1.0	4.2.0
	RP-13	RP-010549			Correction to SRNS relocation handling	4.1.0	4.2.0
	RP-13	RP-010549			Correction to SKNS relocation randing Correction to RLC state variables	4.1.0	4.2.0
	RP-13	RP-010550				4.1.0	4.2.0
	RP-13				Reading of CN information in SIB 1 inRRC Connected Mode		4.2.0
		RP-010550			Restricting the maximum amount of preconfigurations in case of equivalent PLMNs	4.1.0	
	RP-13	RP-010554			Order of bits in bitstrings	4.1.0	4.2.0
	RP-13	RP-010554			Selection of the RFC3095 CID transmission	4.1.0	4.2.0
	RP-13	RP-010554			Correction of IPDL parameters for TDD enhancements in ASN.1 description	4.1.0	4.2.0
	RP-13	RP-010554		1	1.28 Mcps TDD PICH, Midamble and UL timing advance control corrections	4.1.0	4.2.0
	RP-13	RP-010554	0972		Introduction of 1.28 Mcps TDD Mode in clause 13.7	4.1.0	4.2.0
	RP-13	RP-010554	0973		Tadv in 1.28 Mcps TDD	4.1.0	4.2.0
	RP-13	RP-010554	0974		Correction and clarification to PRACH in 1.28 Mcps TDD	4.1.0	4.2.0
10/2001	-	-	-		Replacement of incorrect (R'99) version of ASN.1 by correct (Rel-4) version of ASN.1.	4.2.0	4.2.1
12/2001	RP-14	RP-010763	1088		Corrections to RRC information containers	4.2.1	4.3.0
	RP-14	RP-010763	1090		Removal of Block SSTD	4.2.1	4.3.0
	RP-14	RP-010763	1098		COUNT-C-SFN frame difference measurement	4.2.1	4.3.0
	RP-14	RP-010763	1100		Trigger for deletion of ciphering and integrity keys	4.2.1	4.3.0
	RP-14	RP-010763	1102		Correction to P_compensation calculation for GSM neighbour cells	4.2.1	4.3.0
	RP-14	RP-010763	1104		Preconfigurations in case of equivalent PLMNs	4.2.1	4.3.0
	RP-14	RP-010763	1109		Handling of DRX cycle and U-RNTI in RRC connection setup and handling of TrCH information	4.2.1	4.3.0
	RP-14	RP-010763	1111		Correction to Information Element names	4.2.1	4.3.0
	RP-14	RP-010763	1113		Correction of Description of IE "SSDT Information"	4.2.1	4.3.0
	RP-14	RP-010763	1115		Clarification on Cell Identity and correction to reference to BAND_INDICATOR	4.2.1	4.3.0
	RP-14	RP-010764	1117		Clarification to Measured Results on RACH and Measurement Events	4.2.1	4.3.0
	RP-14	RP-010764	1119		Inconsistency between ASN.1 and tabular wrt. RPLMN information	4.2.1	4.3.0
	RP-14	RP-010764	1124		General clarification on Establishment of Access Service Classes	4.2.1	4.3.0
	RP-14	RP-010764	1126		Clarification on TX diversity indicator IE and STTD indicator IE	4.2.1	4.3.0
	RP-14	RP-010764			Different diversity modes used in the same active set	4.2.1	4.3.0
	RP-14	RP-010764	1134		Issues regarding signalling connection establishment and RRC	4.2.1	4.3.0
					connection release		

	_		T		Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-14	RP-010764			Presence of AC to ASC mapping in SIB5 and SIB6	4.2.1	4.3.0
	RP-14	RP-010764	1138		RRC establishment cause at inter-RAT cell change order to UTRAN	4.2.1	4.3.0
	RP-14	RP-010764	1142		Start of timers at radio link failure	4.2.1	4.3.0
	RP-14	RP-010765	1144		Handling of the number of FBI bits sent in Uplink DPCH info	4.2.1	4.3.0
	RP-14	RP-010765	1146		Bit string order when using PER	4.2.1	4.3.0
	RP-14	RP-010765			Clarification on DRX cycle length in connected mode	4.2.1	4.3.0
	RP-14	RP-010765	1152		Correction to error condition on downlink information for each radio link	4.2.1	4.3.0
	RP-14	RP-010765	1154		Correction of inconsistencies between tabular and ASN.1	4.2.1	4.3.0
	RP-14	RP-010765	1156		Measurement related corrections	4.2.1	4.3.0
	RP-14	RP-010765	1158		Inconsistency between hard-coded preconfigurations parameters and procedure text	4.2.1	4.3.0
	RP-14	RP-010765	1166		PLMN search in CELL_PCH/URA_PCH states with 80ms DRX cycle	4.2.1	4.3.0
	RP-14	RP-010765	1168		Correction to CFN calculation for FDD	4.2.1	4.3.0
	RP-14	RP-010765	1170		Correction to radio bearer control	4.2.1	4.3.0
	RP-14	RP-010766			Handling of IE "frequency info"	4.2.1	4.3.0
	RP-14	RP-010766			Correction to Radio Bearer Release	4.2.1	4.3.0
	RP-14	RP-010940		1	Correction to RACH reporting	4.2.1	4.3.0
	RP-14	RP-010766			Correction to URA/Cell update and other minor corrections	4.2.1	4.3.0
	RP-14	RP-010766	1182		Correction to Active Set Update	4.2.1	4.3.0
	RP-14	RP-010766	1184		Correction of Traffic Volume Measurement Criteria	4.2.1	4.3.0
	RP-14	RP-010941	1186	1	Correction of UE Positioning	4.2.1	4.3.0
	RP-14	RP-010766	1203		Invalid RRC CONNECTION REJECT	4.2.1	4.3.0
	RP-14	RP-010766	1214		Security baseline for corrections	4.2.1	4.3.0
	RP-14	RP-010766	1220		Pending integrity protection activation time for UL RB0	4.2.1	4.3.0
	RP-14	RP-010767	1222		Correction of rate matching restriction function	4.2.1	4.3.0
	RP-14	RP-010773	1096		Usage of UM RLC Special Length Indicator	4.2.1	4.3.0
	RP-14	RP-010773	1120		Corrections to REL-4 LCR Tabular Description and ASN1 Code	4.2.1	4.3.0
	RP-14	RP-010773	1199		Correction of FPACH parameter definition for 1.28Mcps TDD	4.2.1	4.3.0
	RP-14	RP-010773	1200		Correction of 1.28Mcps TDD	4.2.1	4.3.0
	RP-14	RP-010773	1201		Correction and Clarification to Open Loop Power Control in 1.28 Mcps TDD	4.2.1	4.3.0
	RP-14	RP-010773	1206		Extensions of IE value ranges in tabular	4.2.1	4.3.0
03/2002	RP-15	RP-020070	1229		Constant value range correction for DPCH and PUSCH in TDD mode	4.3.0	4.4.0
	RP-15	RP-020070	1231		Corrections to open loop power control for TDD and RB information parameters for SHCCH	4.3.0	4.4.0
	RP-15	RP-020070	1233		Removal of unnecessary replication of TFCS ID in Physical Shared Channel Allocation message	4.3.0	4.4.0
	RP-15	RP-020070	1237		Correction to TF selection when using UL RLC TM	4.3.0	4.4.0
	RP-15	RP-020070		1	Correction to the UE behaviour in case of SRNS relocation	4.3.0	4.4.0
	RP-15	RP-020070			Header Compression protocols re-initialisation during SRNS Relocation	4.3.0	4.4.0
	RP-15	RP-020070	1243		Misalignments between tabular and ASN.1 related to UE Positioning, tabular correction	4.3.0	4.4.0
	RP-15	RP-020070	1245	1	Corrections to comments in ASN.1	4.3.0	4.4.0
	RP-15	RP-020070	1247	1	Correction to restarting of T308	4.3.0	4.4.0
	RP-15	RP-020070	1249	1	Clarification of the use of T309 during inter-RAT cell reselections	4.3.0	4.4.0
	RP-15	RP-020071	1251	1	Measurement Corrections	4.3.0	4.4.0
	RP-15	RP-020239	1253	1	Existence of TFCI bits	4.3.0	4.4.0
	RP-15	RP-020071	1258		Corrections of inconsistency between procedural description, tabular and ASN.1	4.3.0	4.4.0
	RP-15	RP-020071	1260		Corrections to Expiration Time Factor and Expiration Time formula for SIB 7 and SIB 14	4.3.0	4.4.0
	RP-15	RP-020071	1262		Corrections to Reporting Cell Status	4.3.0	4.4.0
	RP-15	RP-020071	1268	1	Correction to inter frequency measurements	4.3.0	4.4.0
	RP-15	RP-020071	1271	1	Actions at reception of system information block type 1	4.3.0	4.4.0
	RP-15	RP-020071	1273	1	Tx diversity and no diversity in the same active set	4.3.0	4.4.0
	RP-15	RP-020071	1275	1	Correction to cell update	4.3.0	4.4.0
	RP-15	RP-020071	1277		Successful and unsuccessful procedures	4.3.0	4.4.0

					Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-15	RP-020072			Measurement related corrections	4.3.0	4.4.0
	RP-15	RP-020072			Clarifications on Event 1D	4.3.0	4.4.0
	RP-15	RP-020205		1	Security corrections	4.3.0	4.4.0
	RP-15	RP-020072			Transition from CELL_DCH to CELL_FACH state	4.3.0	4.4.0
	RP-15	RP-020072			Corrections and clarifications of Radio link timing	4.3.0	4.4.0
	RP-15	RP-020072			Spare values in ASN.1	4.3.0	4.4.0
	RP-15	RP-020072			Actions on reception of measurement related IEs	4.3.0	4.4.0
	RP-15	RP-020231		1	Removal of channel coding option "no coding" for FDD and 3.84 Mcps TDD	4.3.0	4.4.0
	RP-15	RP-020072			Timing Indication when moving to CELL_DCH state	4.3.0	4.4.0
	RP-15	RP-020072			Correction to processing RB mapping info	4.3.0	4.4.0
	RP-15	RP-020072			RRC Connection Release following network authentication failure	4.3.0	4.4.0
	RP-15	RP-020072	1317		Clarification on serving cell in SIB11	4.3.0	4.4.0
	RP-15	RP-020073	1319		Treatment of optional elements in RB control messages	4.3.0	4.4.0
	RP-15	RP-020073	1323		Procedure Performance for TDD UL physical Channel Control	4.3.0	4.4.0
	RP-15	RP-020250	1331	1	Clarification to physical channel establishment criteria	4.3.0	4.4.0
	RP-15	RP-020249	1333	1	OTDOA Assistance Data	4.3.0	4.4.0
	RP-15	RP-020073	1337		Retransmission of uplink direct transfer at RLC re-establishment and inter-RAT change	4.3.0	4.4.0
	RP-15	RP-020073	1339		Correction to IE "UL interference" for UTRA TDD	4.3.0	4.4.0
	RP-15	RP-020074	1343		Corrections of UE Positioning requirements	4.3.0	4.4.0
	RP-15	RP-020074	1345		Multimode speech in default configurations	4.3.0	4.4.0
	RP-15	RP-020073	1347		Correction to UE Id for DSCH	4.3.0	4.4.0
	RP-15	RP-020073	1349		Corrections to support combined Cell/URA update and SRNS relocation	4.3.0	4.4.0
	RP-15	RP-020073	1351		Number of UTRAN and Inter-RAT frequencies	4.3.0	4.4.0
	RP-15	RP-020073	1353		Abortion of signalling connection establishment	4.3.0	4.4.0
	RP-15	RP-020073	1358		Modification of GPS timing representation to avoid large integers	4.3.0	4.4.0
	RP-15	RP-020074	1360		Additional TFCS selection guidelines	4.3.0	4.4.0
	RP-15	RP-020074	1362		Clarification of layer 3 filtering of measurements in the UE	4.3.0	4.4.0
	RP-15	RP-020210			Improved readability of procedural text	4.3.0	4.4.0
	RP-15	RP-020228	1366		Clarification on ICS version within UE radio access capabilities	4.3.0	4.4.0
	RP-15	RP-020233			Clarification of Maximum number of TFC in the TFCS	4.3.0	4.4.0
	RP-15	RP-020238			Support of UP measurement reporting in CELL_PCH/URA_PCH	4.3.0	4.4.0
	RP-15	RP-020082		2	Correction to include Cell ID for Cell_DCH state	4.3.0	4.4.0
	RP-15	RP-020082		2	Correction of Transparent mode signalling for UL rate control	4.3.0	4.4.0
	RP-15	RP-020082		2	Introduction of default radio configurations for UMTS_AMR2 with four speech modes		4.4.0
	RP-15	RP-020082	1223	1	Acquisition of PLMN identity of neighbour cells via SIB 18	4.3.0	4.4.0
	RP-15	RP-020082			Various ASN.1 Corrections	4.3.0	4.4.0
	RP-15	RP-020082		-	Handover from UTRAN failure	4.3.0	4.4.0
	RP-15	RP-020082			Corrections to indicate that SIB 14 is not used by 1.28 TDD	4.3.0	4.4.0
	RP-15	RP-020084		2	Support of flexible hard split mode	4.4.0	5.0.0
	RP-15	RP-020090		1	Introduction of the parameters of OTDOA with IPDL for 1.28 Mcps TDD	4.4.0	5.0.0
	RP-15	RP-020085	1291	1	Radio link timing	4.4.0	5.0.0
	RP-15	RP-020094		2	Introduction of HSDPA	4.4.0	5.0.0
06/2002	RP-16	RP-020330			ASN.1 Corrections	5.0.0	5.1.0
00/2002	RP-16	RP-020330			Clarification of unnecessary MP IEs in RADIO BEARER RECONFIGURATION	5.0.0	5.1.0
	RP-16	RP-020330	1379		Correction on SIB type	5.0.0	5.1.0
	RP-16	RP-020330	1382		Clarification to the handling of IE "Cells for measurement" received in SIB 11/12	5.0.0	5.1.0
	RP-16	RP-020330	1385	1	Correction to Cell Update procedure	5.0.0	5.1.0
	RP-16				Correction to handling of FACH measurement occasion info in SIB12	5.0.0	5.1.0
	RP-16	RP-020331			Actions when optional IE "Maximum allowed UL TX power" is missing	5.0.0	5.1.0
	RP-16	RP-020331	1395		Corrections concerning default configurations	5.0.0	5.1.0
	RP-16	RP-020331	1398		Correction concerning when hard handover specific handling	5.0.0	5.1.0
	<u> </u>				applies		

_	I	I		-	Change history		T
Date	TSG #	TSG Doc. RP-020331	CR	Rev	Subject/Comment	Old	New
					Handling of variables CELL_INFO_LIST and MEASUREMENT_IDENTITY	5.0.0	5.1.0
	RP-16	RP-020331			IE "Cell Synchronisation Information"	5.0.0	5.1.0
	RP-16	RP-020331			Corrections to Cell Individual Offset	5.0.0	5.1.0
	RP-16	RP-020332			Clarification to Compressed Mode Status Info	5.0.0	5.1.0
	RP-16	RP-020332			Clarification of OTDOA quality figure	5.0.0	5.1.0
	RP-16	RP-020332			Correction to Cell Access Restriction for SIB4	5.0.0	5.1.0
	RP-16	RP-020332			Corrections concerning spare values and comments	5.0.0	5.1.0
	RP-16	RP-020332	1423		Variable for shared channel configurations	5.0.0	5.1.0
	RP-16	RP-020332	1426	1	Integrity protection on RB0	5.0.0	5.1.0
	RP-16	RP-020333	1429	1	Periodic cell update clarifications	5.0.0	5.1.0
	RP-16	RP-020333	1432		Multiple cells triggering event 1D	5.0.0	5.1.0
	RP-16	RP-020333	1435		Disjoint Active Sets in the Active Set Update procedure	5.0.0	5.1.0
	RP-16	RP-020333	1438		Deletion on compressed mode patterns when moving to CELL_FACH state	5.0.0	5.1.0
	RP-16	RP-020333	1441		TDD C-RNTI in Cell DCH	5.0.0	5.1.0
	RP-16	RP-020333	1444	1	CCTrCH Release in TDD	5.0.0	5.1.0
	RP-16	RP-020334	1447		Layer 3 retransmission of SIGNALLING CONNECTION RELEASE INDICATION	5.0.0	5.1.0
	RP-16	RP-020334			Alignment of tabular and ASN.1 for UTRAN GPS timing of cell frames resolution	5.0.0	5.1.0
	RP-16	RP-020334	1453		Correction to Default Radio Configuration Timers	5.0.0	5.1.0
	RP-16	RP-020334	1456		Clarification to number of L3 filters	5.0.0	5.1.0
	RP-16	RP-020334	1459	1	Correction to 3G to 2G Inter-RAT handover for multi-domain RABs	5.0.0	5.1.0
	RP-16	RP-020334	1462		DCH quality target	5.0.0	5.1.0
	RP-16	RP-020335	1465		Correction to RB Mapping Info	5.0.0	5.1.0
	RP-16	RP-020335	1468	1	Ciphering activation for TM bearers	5.0.0	5.1.0
	RP-16	RP-020335	1471		TFCS selection guideline correction	5.0.0	5.1.0
	RP-16	RP-020382	1480	1	Clarification of Measurement Validity and Valid Measurement Objects	5.0.0	5.1.0
	RP-16	RP-020363	1483		Remaining clarification of Measurement Validity and Valid Measurement Objects	5.0.0	5.1.0
	RP-16	RP-020381	1486	1	Traffic Volume Measurement clarifications	5.0.0	5.1.0
	RP-16	RP-020335	1489		Correction to handling of IE 'Downlink information for each RL'	5.0.0	5.1.0
	RP-16	RP-020336	1492		Corrections to Security procedure on Missing integrity protection reset on relocation and counter check response actions for asymmetric bearer configurations	5.0.0	5.1.0
	RP-16	RP-020336	1495		Corrections to cell update interactions with security and SRNS Relocation	5.0.0	5.1.0
	RP-16	RP-020336	1498		"Out of service" area definition	5.0.0	5.1.0
	RP-16	RP-020339	1473	Ĭ	RRC connection release procedure in CELL_DCH state	5.0.0	5.1.0
	RP-16	RP-020339	1475	Ĭ	Correction to DL TM DCCH TF size for Default Configurations	5.0.0	5.1.0
	RP-16	RP-020339	1477	Ĭ	Corrections in ASN.1 related to SRNS relocation	5.0.0	5.1.0
	RP-16	RP-020341	1499	Ĭ	HS-DSCH related corrections	5.0.0	5.1.0
	RP-16	RP-020341	1500		Removal of BLER threshold from IE "Measurement Feedback info"	5.0.0	5.1.0
	RP-16	RP-020345	1501		RFC 3095 context relocation	5.0.0	5.1.0
09/2002	RP-17	RP-020541	1504	1	UE behaviour when active set cells are not included in CELL_INFO_LIST	5.1.0	5.2.0
	RP-17	RP-020541	1507	1	Corrections to handling of IE "Cells for measurement"	5.1.0	5.2.0
	RP-17	RP-020541	1510		Clarification on the use of UE radio access capability extensions within the INTER RAT HANDOVER INFO message	5.1.0	5.2.0
	RP-17	RP-020541	1513	Ĭ	Correction to RRC connection procedure	5.1.0	5.2.0
	RP-17	RP-020541	1516	Ĭ	Correction to the variable TGPS_IDENTITY	5.1.0	5.2.0
	RP-17	RP-020541	1522	Ī	Missing IEs in RLC info	5.1.0	5.2.0
	RP-17	RP-020542	1528	1	Corrections of UE internal measurement reporting events	5.1.0	5.2.0
	RP-17	RP-020542	1531	2	UE behaviour upon reception of reconfiguration	5.1.0	5.2.0
	RP-17	RP-020542	1534		Application of integrity keys in case of a pending CN domain switch during a SRNS relocation	5.1.0	5.2.0
	RP-17	RP-020542	1537	1	Clarifications on Quality Measurements	5.1.0	5.2.0
	RP-17	RP-020542	1540	Ī	Correction of DPCH constant value in TDD default radio	5.1.0	5.2.0
					configurations		

D-1	ITO 0 "	T00 5	00		Change history	l 0: .	IN.
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
ļ	RP-17 RP-17	RP-020542			Handling of UE internal measurement information in broadcast	5.1.0 5.1.0	5.2.0 5.2.0
		RP-020543			Observed time difference to GSM reporting indicator	-	
	RP-17	RP-020543	1551		Corrections on Security relative to ciphering of TM bearers and to SRNS relocation	5.1.0	5.2.0
	RP-17	RP-020543	1554		Coding of IE NC mode	5.1.0	5.2.0
	RP-17	RP-020543	1557		Clarification to filtered measurement quantities	5.1.0	5.2.0
	RP-17	RP-020543	1560		Inconsistencies in triggering and reporting for events 1a, 1b,1c,	5.1.0	5.2.0
					1e and 1f		
	RP-17	RP-020543		1	Optional and Mandatory fields in Measurement Control	5.1.0	5.2.0
	RP-17	RP-020544			Clarifications to Reporting Cell Status	5.1.0	5.2.0
	RP-17	RP-020544			Clarification to minimum SF	5.1.0	5.2.0
	RP-17	RP-020544			Clarifications to inter-frequency measurements	5.1.0	5.2.0
	RP-17	RP-020544		2	Ciphering when HO to UMTS of signalling only connection	5.1.0	5.2.0
	RP-17	RP-020544			Inter RAT handover from UTRAN	5.1.0	5.2.0
	RP-17	RP-020544			Correction to Cell Update procedure with cause "Radio link failure"	5.1.0	5.2.0
	RP-17	RP-020545			Correction to the handling of IE "UTRAN DRX cycle length coefficient" in CELL/URA UPDATE procedure	5.1.0	5.2.0
	RP-17	RP-020545	1590		Correction to RLC unrecoverable error occurs in CELL_DCH state	5.1.0	5.2.0
	RP-17	RP-020545	1593		Use of scrambling change when activating CM pattern using SF/2 by MEASUREMENT CONTROL	5.1.0	5.2.0
	RP-17	RP-020545	1596		Actions when optional IE "Maximum allowed UL TX power" is missing	5.1.0	5.2.0
	RP-17	RP-020630	1599	1	IP_offset correction	5.1.0	5.2.0
	RP-17	RP-020545	1602		Clarification on the IE "Frequency Info"	5.1.0	5.2.0
	RP-17	RP-020546	1605		Correction of RNTI used in PUSCH capacity request and physical shared channel allocation	5.1.0	5.2.0
	RP-17	RP-020546	1608		Correction to allowed logical channel list choice for RACH transport channels	5.1.0	5.2.0
	RP-17	RP-020654	1611	1	Clarification of SRNS Relocation Info	5.1.0	5.2.0
	RP-17	RP-020546	1614		DCH quality target	5.1.0	5.2.0
	RP-17	RP-020546	1617		Handling of variables CELL_INFO_LIST and MEASUREMENT_IDENTITY(2)	5.1.0	5.2.0
	RP-17	RP-020546	1620	1	Correction of secondary CCPCH selection and PRACH selection	5.1.0	5.2.0
	RP-17	RP-020547	1623		RRC TVM Corrections	5.1.0	5.2.0
	RP-17	RP-020547	1626		Correction of Transmission Gap Distance semantics description	5.1.0	5.2.0
	RP-17	RP-020547	1629		Corrections to Active Set Update and simultaneous reconfiguration	5.1.0	5.2.0
	RP-17	RP-020547	1632		UE behaviour following RLC size change	5.1.0	5.2.0
	RP-17	RP-020547	1635		RRC SN in uplink	5.1.0	5.2.0
	RP-17	RP-020547	1638		Multiplexing of Tr mode RBs of different CN domains on the same transport channel	5.1.0	5.2.0
	RP-17	RP-020548	1641		Security clarifications	5.1.0	5.2.0
	RP-17	RP-020548	1644		Correction to the actions of "out of service area" and "in service area"	5.1.0	5.2.0
	RP-17	RP-020548	1647		TVM: pending time after trigger and initial conditions	5.1.0	5.2.0
	RP-17	RP-020548	1650	1	Handling of Downlink information for each RL in reconfiguration messages	5.1.0	5.2.0
	RP-17	RP-020548	1655		Corrections to Cell Update/URA Update Procedure in case of nested cell updates and simultaneous SRNS relocation	5.1.0	5.2.0
	RP-17	RP-020548	1670		Corrections to security	5.1.0	5.2.0
	RP-17	RP-020631	1673	1	SRNS relocation with integrity	5.1.0	5.2.0
	RP-17	RP-020549	1676		Reception of MEASUREMENT CONTROL in state CELL_FACH	5.1.0	5.2.0
	RP-17	RP-020549	1679		Unsupported configuration	5.1.0	5.2.0
	RP-17	RP-020549	1682		Handover corrections	5.1.0	5.2.0
	RP-17	RP-020558		1	Correction of SFN-SFN Measurement	5.1.0	5.2.0
	RP-17	RP-020559			Corrections to Synchronisation for 1.28 Mcps TDD	5.1.0	5.2.0
	RP-17	RP-020553			Corrections on Power Control for 1.28 Mcps TDD	5.1.0	5.2.0
	RP-17	RP-020553			Correction to RLC entity re-establishment during SRNS relocation	5.1.0	5.2.0
	RP-17	RP-020553	1663		Reintroduction of IE "SRB delay" in Rel-4 ASN.1	5.1.0	5.2.0
		RP-020553	1665	1	Corrections to ASN.1 for SRNC relocation container	5.1.0	5.2.0

					Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-17	RP-020553			Unused elements in ASN.1	5.1.0	5.2.0
	RP-17	RP-020557	_		Correction on Radio link timing	5.1.0	5.2.0
	RP-17	RP-020662		2	Physical layer IEs for HSDPA	5.1.0	5.2.0
	RP-17	RP-020557			Transport channel information elements for HSDPA	5.1.0	5.2.0
	RP-17	RP-020590			TX diversity on radio links in the active set	5.1.0	5.2.0
	RP-17	RP-020557	1684		Mandatory Support of dedicated pilots for channel estimation	5.1.0	5.2.0
12/2002	RP-18	RP-020721	1687		Corrections to IEs "Ellipsoid point with Altitude and uncertainty Ellipsoid" and "Ellipsoid point with uncertainty Ellipse"	5.2.0	5.3.0
	RP-18	RP-020721	1690	1	Handling of Ciphering and integrity protection activation times	5.2.0	5.3.0
	RP-18	RP-020721			9	5.2.0	5.3.0
	RP-18	RP-020721	1696	2	Measurement related corrections	5.2.0	5.3.0
	RP-18	RP-020721	1699		ASN.1 of the SRNS relocation info	5.2.0	5.3.0
	RP-18	RP-020721	1710	1	Corrections to PRACH selection	5.2.0	5.3.0
	RP-18	RP-020722	1713		TDD Downlink Path Loss for interfrequency measurement	5.2.0	5.3.0
	RP-18	RP-020892	1716	1	Correction on coding of GSM Classmark 2 and 3	5.2.0	5.3.0
	RP-18	RP-020722	1719		Correction on Frame Allocation Calculation	5.2.0	5.3.0
	RP-18	RP-020722	1722		Inter-frequency measurements	5.2.0	5.3.0
	RP-18	RP-020722	1725		Maximum Allowed UL TX Power	5.2.0	5.3.0
	RP-18	RP-020722	1728		START values for the initialisation of SRB counters and UTRAN incorrect actions	5.2.0	5.3.0
	RP-18	RP-020723	1731		Correction to the RRC transaction table management	5.2.0	5.3.0
	RP-18	RP-020723	1803		Use of DCH Quality Target with Blind Transport Format Detection	5.2.0	5.3.0
	RP-18	RP-020723	1742		Correction to storing current TFC subset in variable TFC_SUBSET for TDD	5.2.0	5.3.0
	RP-18	RP-020723	1745		Security at inter-RAT handover	5.2.0	5.3.0
	RP-18	RP-020723	1748		Integrity protection activations times	5.2.0	5.3.0
	RP-18	RP-020723	1751		Additional measurements	5.2.0	5.3.0
	RP-18	RP-020724	1754		DPCH compressed mode info in Downlink information common for all RLs	5.2.0	5.3.0
	RP-18	RP-020724	1757	1	Handling of RB mapping	5.2.0	5.3.0
	RP-18	RP-020724	1766		RLC window size in default configurations	5.2.0	5.3.0
	RP-18	RP-020724	1769		Corrections to Activation time	5.2.0	5.3.0
	RP-18	RP-020724	1772			5.2.0	5.3.0
	RP-18	RP-020724	1779	2	Correction on support for compressed mode	5.2.0	5.3.0
	RP-18	RP-020903	1734	3	Introduction of backwards compatible correction mechanism	5.2.0	5.3.0
	RP-18	RP-020727			Signalling of the timing adjustment mode for closed loop Tx diversity	5.2.0	5.3.0
	RP-18	RP-020893	1810		Handling of hyper frame numbers	5.2.0	5.3.0
	RP-18	RP-020726		2	Early UE Specific Behaviour Information in RRC Connection Request / interRAT info	5.2.0	5.3.0
	RP-18	RP-020858	1701		Correction of ASN1 IE "InterFreqCellInfoList-r4"	5.2.0	5.3.0
	RP-18	RP-020858			Correction of Special Burst Scheduling for TDD	5.2.0	5.3.0
	RP-18	RP-020858	1705	l	Correction of measurement reporting event 6f for 1.28 Mcps TDD	5.2.0	5.3.0
	RP-18	RP-020858		l	Ciphering during SRNS relocation without reuse of COUNT-C	5.2.0	5.3.0
	RP-18	RP-020858		t	Correction to IE 'Intra Domain NAS Node Selector'	5.2.0	5.3.0
	RP-18	RP-020858			Correction to PRACH selection	5.2.0	5.3.0
	RP-18	RP-020859		l	Correction to reporting event 6f for FDD	5.2.0	5.3.0
	RP-18	RP-020859		t	ASN.1 corrections	5.2.0	5.3.0
	RP-18	RP-020859		1	Asymmetric ROHC Configuration	5.2.0	5.3.0
	RP-18	RP-020859		1	Reference Cell for GSM OTD Measurement	5.2.0	5.3.0
	RP-18	RP-020736		l	RRC container for RFC3095 context	5.2.0	5.3.0
	RP-18	RP-020736		1	Correction to IE 'Access stratum release indicator'	5.2.0	5.3.0
	RP-18	RP-020736		1	RLC capability for HSDPA	5.2.0	5.3.0
	RP-18	RP-020736		1	Dedicated pilot bits for HS-DSCH	5.2.0	5.3.0
	RP-18	RP-020736		1	Expansion of CPICH RSCP range	5.2.0	5.3.0
	RP-18	RP-020736		1	L3 Retransmission of event 1b	5.2.0	5.3.0
	RP-18	RP-020736		1	DPC mode change in ACTIVE SET UPDATE message	5.2.0	5.3.0
	RP-18	RP-020736		1	Correction to handling of IE 'Downlink information for each RL'	5.2.0	5.3.0
	IZE-10	NF-020130	1130		Correction to nationing of the Downlink information for each RL	J.Z.U	5.5.0

D /	ITOO "	T00 D	lon	I -	Change history	1011	T
Date	TSG #	TSG Doc.	CR	-	Subject/Comment	Old	New
	RP-18	RP-020896		2	HSDPA parameter value ranges	5.2.0	5.3.0
03/2003	RP-19	RP-030103			ASN.1 of the SRNS relocation Info	5.3.0	5.4.0
	RP-19	RP-030103			Correction to procedural text for Physical Shared Channel Allocation (TDD only)	5.3.0	5.4.0
	RP-19	RP-030103	1819	1	CM and state transition related to measurements, additional measurements, virtual active set and periodic measurements	5.3.0	5.4.0
	RP-19	RP-030103	1822		Physical channel failure and radio link re-establishment	5.3.0	5.4.0
	RP-19	RP-030103	1825		Correction concerning bit numbering convention	5.3.0	5.4.0
	RP-19	RP-030104	1831		Additional Measurement reporting list	5.3.0	5.4.0
	RP-19	RP-030104	1834	2	Correction on RRC integrity protection procedure	5.3.0	5.4.0
	RP-19	RP-030104	1837		Reporting Cell Status and Event 2A	5.3.0	5.4.0
	RP-19	RP-030104	1840		Correction to the handling of variable TGPS_IDENTITY and IE 'Triggering condition 1/2'	5.3.0	5.4.0
	RP-19	RP-030104	1843	1	Hard handover with pending ciphering activation times	5.3.0	5.4.0
	RP-19	RP-030105		<u> </u>	Correction of default configurations	5.3.0	5.4.0
	RP-19	RP-030105			Correction to UE behaviour on entering RRC Connected mode	5.3.0	5.4.0
	RP-19	RP-030105			Update of Start values in USIM on inter-RAT transitions and	5.3.0	5.4.0
	RP-19	RP-030082			transitions to idle mode Corrections to Channelisation Code TFCI Mapping for TDD		5.4.0
	RP-19	RP-030082		<u> </u>		5.3.0 5.3.0	5.4.0
					Correction of PNBSCH for 1.28Mcps TDD		
	RP-19	RP-030111			Correction of SFN-SFN observed time difference for 1.28Mcps TDD	5.3.0	5.4.0
	RP-19	RP-030111		3	ASN.1 corrections concerning missing UE capability extensions	5.3.0	5.4.0
	RP-19	RP-030111			Extensions for 1.28 Mcps specific elements in system information		5.4.0
	RP-19	RP-030111	1868		Corrections to power control parameter signalling for 1.28 Mcps TDD	5.3.0	5.4.0
	RP-19	RP-030117	1872		TDD HS-SICH Power Control	5.3.0	5.4.0
	RP-19	RP-030117	1873		Usage of separate scrambling code for HSDPA	5.3.0	5.4.0
	RP-19	RP-030119	1874		TDD HS-DSCH midamble shift and burst type	5.3.0	5.4.0
	RP-19	RP-030117	1875		Corrections to the IE "Added or Reconfigured MAC-d flow" and the associated table in 10.3.10	5.3.0	5.4.0
	RP-19	RP-030117	1877	1	Network Assisted Cell Change from UTRAN to GERAN	5.3.0	5.4.0
	RP-19	RP-030117	1878	1	Defining more than one DSCH / USCH transport channel in PDSCH and PUSCH system information (TDD only)	5.3.0	5.4.0
	RP-19	RP-030117	1879		Introducing the use of pre-defined configurations within UTRA	5.3.0	5.4.0
	RP-19	RP-030120	1880		Group release (without security	5.3.0	5.4.0
	RP-19	RP-030105	1884		Correction to Inter-RAT Measurement Report	5.3.0	5.4.0
	RP-19	RP-030106	1887		Correction of signalling of transport block size for DSCH	5.3.0	5.4.0
	RP-19	RP-030106	1890		PS service continuity when moving between 3G and 2G	5.3.0	5.4.0
	RP-19	RP-030106		1	Multiple activations of the same compressed mode pattern	5.3.0	5.4.0
	RP-19	RP-030106		Ľ	Setting of ciphering activation time for TM bearers	5.3.0	5.4.0
	RP-19	RP-030117			Correction of shadow CR implementation	5.3.0	5.4.0
	RP-19	RP-030111			Removal of MRRU parameter in PDCP info	5.3.0	5.4.0
	RP-19	RP-030111		1	Measurement event for evaluation of best HS-DSCH cel	5.3.0	5.4.0
	RP-19			1			
		RP-030105		<u> </u>	NAS and Integrity procedure interaction	5.3.0	5.4.0
	RP-19	RP-030117		ļ	Correction to USBI	5.3.0	5.4.0
	RP-19	RP-030187		<u> </u>	GPS navigation model update mechanism	5.3.0	5.4.0
	RP-19	RP-030201		<u> </u>	Layer 3 filtering definition	5.3.0	5.4.0
	RP-20	RP-030293			Handling of UP Assistance Data	5.4.0	5.5.0
	RP-20	RP-030293		1	Concerns on Procedures for Cell-ID Positioning Method	5.4.0	5.5.0
	RP-20	RP-030293	1919		Inconsistency between Procedural, ASN.1, and Tabular Aspects of UE Positioning Error	5.4.0	5.5.0
	RP-20	RP-030293	1922		Removal of FFS (For further Study) and references to other working groups	5.4.0	5.5.0
	RP-20	RP-030293	1926		Key handling when entering idle mode and coding of security capabilities	5.4.0	5.5.0
	RP-20	RP-030293	1929		Security actions when SIM is present on RRC Connection Request	5.4.0	5.5.0
	RP-20	RP-030294	1932		Update of interfrequency measurement cell info list, reading of SIB11/12, inclusion of Measured Results on RACH	5.4.0	5.5.0
	RP-20	RP-030294	1937	1	Additional measurements without measurement validity	5.4.0	5.5.0
	RP-20	RP-030294		1	Handover to UTRAN in macrodiversity	5.4.0	5.5.0

	I=0.0 ::	I=0.0 D		_	Change history		
Date	TSG #	TSG Doc.	CR	+	Subject/Comment	Old	New
	RP-20	RP-030294		1	TVM Reporting in CELL_PCH state	5.4.0	5.5.0
	RP-20	RP-030294		1	Initialisation of the Virtual Active Set	5.4.0	5.5.0
	RP-20	RP-030295		ļ	IE 'Tx diversity mode' in ACTIVE SET UPDATE message	5.4.0	5.5.0
	RP-20	RP-030295		1	Correction to transport channel traffic volume measurement events 4a and 4b	5.4.0	5.5.0
	RP-20	RP-030295			Maximum Number of GPS Almanac Messages to be Stored in UE_POSITIONING_GPS_DATA	5.4.0	5.5.0
	RP-20	RP-030374		2	Stopping of RLC entities at relocation	5.4.0	5.5.0
	RP-20	RP-030369		4	Ciphering Mode info IE in 2G-3G Handover	5.4.0	5.5.0
	RP-20	RP-030295			START values on 2G-3G handover	5.4.0	5.5.0
	RP-20	RP-030298			ROHC profile signalling	5.4.0	5.5.0
	RP-20	RP-030298		1	Optimisation of the INTER RAT HANDOVER INFO message	5.4.0	5.5.0
	RP-20	RP-030350	1987	2	Corrections to security procedures in case of pending security configurations at SRNS Relocation	5.4.0	5.5.0
	RP-20	RP-030371	1990		Setting of T317 to infinity and out of service behaviour	5.4.0	5.5.0
	RP-20	RP-030303	1960		Correction to the IE "HS-DSCH capability class"	5.4.0	5.5.0
	RP-20	RP-030303	1961		Correction of 'RB mapping info' in case HS-DSCH + DCH	5.4.0	5.5.0
	RP-20	RP-030303	1963		Explanation of CV-UE for the IE MidambleShift in the tabular	5.4.0	5.5.0
09/2003	RP-21	RP-030484	1993		Handling of key sets at Inter-RAT Handover to UTRAN	5.5.0	5.6.0
	RP-21	RP-030484	1996	1	Correction to UE Positioning privacy procedures	5.5.0	5.6.0
	RP-21	RP-030520	2003	2	START calculation in connected mode	5.5.0	5.6.0
	RP-21	RP-030506	2000	1	Reconfiguration with state transition to an indicated cell on a different frequency	5.5.0	5.6.0
	RP-21	RP-030484	2006		PRACH channelisation code list limitation to align with TS 25.221	5.5.0	5.6.0
	RP-21	RP-030484	2009		Handling of transport channel information at radio bearer release	5.5.0	5.6.0
	RP-21	RP-030485	2015		Corrections for TDD for the IEs 'Downlink DPCH info common for all radio links'	5.5.0	5.6.0
	RP-21	RP-030485	2018		TFCS selection guidelines for TFC Subset	5.5.0	5.6.0
	RP-21	RP-030485	2025		Value range of UE Rx-Tx time difference type 2 measurement	5.5.0	5.6.0
	RP-21	RP-030485	2033		Activation Time for DSCH	5.5.0	5.6.0
	RP-21	RP-030485	2044		Correction of PDCP Configuration for RFC 2507	5.5.0	5.6.0
	RP-21	RP-030486	2048		Corrections to event list handling	5.5.0	5.6.0
	RP-21	RP-030486	2051		Corrections to RACH reporting	5.5.0	5.6.0
	RP-21	RP-030486	2054		Corrections to modification of Additional Measurement lists	5.5.0	5.6.0
	RP-21	RP-030486	2057		UE positioning support in the UE	5.5.0	5.6.0
	RP-21	RP-030478	2064		Elimination of EPC mechanism	5.5.0	5.6.0
	RP-21	RP-030486	2069		UE behaviour in transition from CELL_DCH to CELL_FACH/ CELL_PCH/URA_PCH and Out of Service is detected	5.5.0	5.6.0
	RP-21	RP-030505	2072	1	Radio link failure during reconfiguration procedure	5.5.0	5.6.0
	RP-21	RP-030491	2020		Ciphering of TM SRBs	5.5.0	5.6.0
	RP-21	RP-030491	2022	1	Correction on PDCP Header compression Configuration	5.5.0	5.6.0
	RP-21	RP-030491	2027		Corrections for TDD PUSCH	5.5.0	5.6.0
	RP-21	RP-030495	1997		Correction to UE behaviour on T317 expiry	5.5.0	5.6.0
	RP-21	RP-030495	2029		Correcting value range of MAC-hs buffer ID	5.5.0	5.6.0
	RP-21	RP-030495	2030		Correction of handling of IE "MAC-hs reset indicator" in Added or Reconfigured DL TrCH information	5.5.0	5.6.0
	RP-21	RP-030495	2035	1	UE capability signalling for UMTS1800	5.5.0	5.6.0
	RP-21	RP-030495	2039		Handover between UTRAN and GERAN lu mode	5.5.0	5.6.0
	RP-21	RP-030495	2040		Updated references to the RRC State Indicator IE	5.5.0	5.6.0
	RP-21	RP-030495	2041		Corrections to Event 1D	5.5.0	5.6.0
	RP-21	RP-030449	2028	1	Reconfiguration of MAC-d flow	5.5.0	5.6.0
	RP-21	RP-030462	2061	1	HS-SCCH transmit diversity mode	5.5.0	5.6.0
	RP-21	RP-030503		1	Scrambling code & phase reference combinations for HS-DSCH (solution 2)	5.5.0	5.6.0
12/2003	RP-22	RP-030617	2075		Unsuccessful security mode control procedure and Integrity Protection	5.6.0	5.7.0
	RP-22	RP-030625	2076	1	START value calculation for RLC size change	5.6.0	5.7.0
	RP-22	RP-030617		1	UE Positioning UE based assisted GPS	5.6.0	5.7.0
	RP-22	RP-030617		1	Handling of zero-rate TrCHs in TFCS	5.6.0	5.7.0
	RP-22	RP-030617		3	Measurement control for A-GPS	5.6.0	5.7.0

Dete	TCO #	ITCC Das	lon.	In	Change history		Manu
Date	TSG # RP-22	TSG Doc. RP-030621	CR 2003	Rev	Subject/Comment Corrections to 1.28 Mcps TDD power control: ASN1/Tabular	Old 5.6.0	New 5.7.0
	KF-22	KF-030021	2093		consistency, correction of omissions	5.6.0	5.7.0
	RP-22	RP-030621	2095		UpPCH power control for 1.28Mcps	5.6.0	5.7.0
	RP-22	RP-030617	2102	1	Interaction between compressed mode pattern activation and	5.6.0	5.7.0
	RP-22	RP-030625	2103		message activation time Initialisation of virtual active set	5.6.0	5.7.0
	RP-22	RP-030611		1	Correction to Redirection procedure at RRC Connection Setup	5.6.0	5.7.0
	RP-22	RP-030610		2	SFN associated with GPS timing of cell frame	5.6.0	5.7.0
	RP-22	RP-030618			Correction to Handling SIB1	5.6.0	5.7.0
	RP-22	RP-030618	2118		Measurement Handling In State Transition for UE Positioning	5.6.0	5.7.0
	RP-22	RP-030618	2124		Corrections to UE positioning reporting for UE assisted and UE based methods	5.6.0	5.7.0
	RP-22	RP-030662	2127	1	SIB 7 reading	5.6.0	5.7.0
	RP-22	RP-030662	2130		HFN initialisation in case of pending security configurations	5.6.0	5.7.0
	RP-22	RP-030621	2132	1	General protocol error handling failure for DL CCCH messages due to ASN.1 error	5.6.0	5.7.0
	RP-22	RP-030621	2136		Corrections relating to 1.28 Mcps TDD	5.6.0	5.7.0
	RP-22	RP-030621			Missing CHOICE RLC Info type in the ASN.1 IE "RB-InformationSetup-r4"	5.6.0	5.7.0
	RP-22	RP-030625		1	RRM in PCH/FACH	5.6.0	5.7.0
	RP-22	RP-030625			Correction of operating band reference	5.6.0	5.7.0
	RP-22	RP-030713		1	Re-ordering Queue and HARQ Ids	5.6.0	5.7.0
	RP-22	RP-030625			Correction to the procedural description: Reconfiguration of MAC-d flow	5.6.0	5.7.0
	RP-22	RP-030625		1	Enhancement of RRC transaction identifier for measurement control message	5.6.0	5.7.0
	RP-22	RP-030629			Inclusion of a default configuration identity for AMR-WB	5.6.0	5.7.0
	RP-22	RP-030625			TDD C-RNTI in Cell DCH	5.6.0	5.7.0
	RP-22	RP-030662			Additional Measurements List Modify	5.6.0	5.7.0
	RP-22	RP-030625			IP activation time for RB0	5.6.0	5.7.0
	RP-22	RP-030722		3	Minimum UE capability class	5.6.0	5.7.0
	RP-22 RP-22	RP-030612 RP-030625		4	Measured results on RACH	5.6.0	5.7.0
	KP-22	RP-030625	2159		COUNT-I reverting in case Security Mode Control procedure failure	5.6.0	5.7.0
	RP-21	RP-030548	2034	1	Maintaining the RRC Connection while Emergency camped on a F-PLMN during OOS (note: it was decided that this CR would not be implemented until the Rel-6 would be created)	5.5.0	6.0.0
	RP-22	RP-030630			Introduction of UMTS800	5.7.0	6.0.0
	RP-22	RP-030721		1	AS capability indication	5.7.0	6.0.0
	RP-22	RP-030630	2160		Introduction of new bands	5.7.0	6.0.0
		Editorial			Repair of corrupted figures	6.0.0	6.0.1
03/2004	RP-23	RP-040095		2	Response on SRNS Relocation with Cell Update	6.0.1	6.1.0
	RP-23	RP-040095			TPC Combination Index in SRNC relocation	6.0.1	6.1.0
	RP-23	RP-040107		1	Correction to "Current TGPS Status Flag"	6.0.1	6.1.0
	RP-23	RP-040095		1	Invalidation of START value in USIM/UE.	6.0.1	6.1.0
	RP-23	RP-040095		1	Uplink Integrity protection handling in case of N302 increment	6.0.1	6.1.0
	RP-23 RP-23	RP-040095 RP-040101		1	Amount of reporting for UE-based and UE assisted A-GPS Ensuring decoding possibility related to Introduction of new	6.0.1	6.1.0 6.1.0
	RP-23	PD 040404	2107	2	bands Clarification to multimode indication	601	610
	RP-23	RP-040101 RP-040101		_	Correction for 1.28 Mcps TDD Power Control	6.0.1	6.1.0 6.1.0
	RP-23	RP-040101			Missing "pdcp-SN-info" in ASN.1 IE "RB-InformationReconfig-r4"	6.0.1	6.1.0
	RP-23	RP-040107			Correction to HS-SCCH info	6.0.1	6.1.0
	RP-23	RP-040107			Correction to HS-SCCH info	6.0.1	6.1.0
	RP-23	RP-040107			Correction to activation time for HS-DSCH reconfiguration in TDD		6.1.0
	RP-23	RP-040131		3	Connected mode handling IE 'CN domain system information' in SIB1	6.0.1	6.1.0
	RP-23	RP-040096	2221		Correction to event 6D	6.0.1	6.1.0
	RP-23	RP-040096		1	Correction to UE positioning reporting for GPS standalone operation mode	6.0.1	6.1.0
	RP-23	RP-040092	2229		Frequency band alignment with 25.101	6.0.1	6.1.0
	RP-23	RP-040096	2235		UTRAN setting of the activation time for TM bearers in Ciphering	6.0.1	6.1.0

Data	ITCC #	ITEC Dos	CB	Boy	Change history	OI4	Moss
Date	TSG #	TSG Doc.	CR	ĸev	Subject/Comment Mode info IE	Old	New
	RP-23	RP-040096	2239		Corrections to "Entered parameter"	6.0.1	6.1.0
	RP-23	RP-040097			Corrections to TFC Subset Functionality	6.0.1	6.1.0
	RP-23	RP-040097		1	Waiting for RLC-ACK on UMI	6.0.1	6.1.0
	RP-23	RP-040105		ľ	Invalid Simultaneous Reconfiguration Criteria	6.0.1	6.1.0
	RP-23	RP-040101		1	General correction and alignment of the ASN.1 and tabular	6.0.1	6.1.0
	RP-23	RP-040101		1	Introduction of UMTS1700/2100 (Band IV)	6.0.1	6.1.0
	RP-23	RP-040091		l'	Introduction of UMTS850 (Band V)	6.0.1	6.1.0
	RP-23	RP-040091			Introduction of VLEC in every message branch	6.0.1	6.1.0
	RP-23	RP-040101			Simultaneous Reception of S-CCPCH and HS-DSCH	6.0.1	6.1.0
	RP-23	RP-040107			Cell reselection between UTRAN and GERAN lu mode	6.0.1	6.1.0
	RP-23	RP-040107			HSDPA related corrections on buffer flushing on state transitions,	6.0.1	6.1.0
					RAT transitions, error cases, MAC-hs reconfiguration and readiness to receive HS-PDSCH		
	RP-23	RP-040106	2265	2	Signalling of MAC-hs Reset	6.0.1	6.1.0
	RP-23	RP-040131		2	Modification of Inter-frequency CELL_INFO_LIST	6.0.1	6.1.0
	RP-23	RP-040131		1	[VAS] 1B-1C conflicts when 1A is not configured	6.0.1	6.1.0
	RP-23	RP-040131	2271	1	Handling of wait time in RRC connection reject	6.0.1	6.1.0
	RP-23	RP-040108	2274	Ĭ	Misalignments between R'99 and Rel-5 procedures	6.0.1	6.1.0
	RP-23	RP-040097	2281		Issues related to Inter-RAT and Inter-frequency handovers	6.0.1	6.1.0
	RP-23	RP-040097	2285	1	Corrections to reconfiguration scenarios and ciphering of TM RBs	6.0.1	6.1.0
	RP-23	RP-040110	2286	4	Addition of "cell selection indication" for cell selection at release of RRC connection and RRC connection reject with re-direction	6.0.1	6.1.0
	RP-23	RP-040129	2288		HSDPA capability for multimode FDD-TDD terminals	6.0.1	6.1.0
	RP-23	RP-040095	2168	2	Response on SRNS Relocation with Cell Update	6.0.1	6.1.0
6/2004	RP-24	RP-040203	2292		Empty non-critical extensions	6.1.0	6.2.0
	RP-24	RP-040211	2294	1	Missing 'v3g0' extension in the UE CAPABILITY INFORMATION	6.1.0	6.2.0
	RP-24	RP-040203	2303		Correction on System Information in TDD	6.1.0	6.2.0
	RP-24	RP-040236	2305		Corrections to Cell Change Order from UTRAN procedure	6.1.0	6.2.0
	RP-24	RP-040206	2308		Correction on SFN-SFN time difference misalignment in 1.28 Mcps TDD	6.1.0	6.2.0
	RP-24	RP-040207	2311		ASN.1 correction leftovers	6.1.0	6.2.0
	RP-24	RP-040210	2313		Closing the REL-5 extensions in the ASN.1	6.1.0	6.2.0
	RP-24	RP-040207	2316		Incorrect presence of UE-RadioAccessCapability extension in RRC CONNECTION SETUP COMPLETE	6.1.0	6.2.0
	RP-24	RP-040210	2318		Unnecessary MAC-d flow identity in the IE 'DL-TrCH-Type-r5'	6.1.0	6.2.0
	RP-24	RP-040211	2320	1	UE capability enquiry for GERAN lu mode	6.1.0	6.2.0
	RP-24	RP-040207	2323		Clean up of SRNS Relocation Info REL-4 version	6.1.0	6.2.0
	RP-24	RP-040210	2325		Tabular correction for RADIO BEARER RELEASE message	6.1.0	6.2.0
	RP-24	RP-040210			Misalignments betwen R"99 and Rel-5 procedures	6.1.0	6.2.0
	RP-24	RP-040210			Erroneous setting of Re-establsish Indicator in case of SRNS relocation	6.1.0	6.2.0
	RP-24	RP-040207	2332		Correction to IE 'Cell Info'	6.1.0	6.2.0
	RP-24	RP-040210	2334		Correction Concerning UE Positioning Measurement	6.1.0	6.2.0
	RP-24	RP-040236	2336		Pending compressed mode reconfigurations	6.1.0	6.2.0
		RP-040236			Active compressed mode patterns with same measurement purpose	6.1.0	6.2.0
	RP-24	RP-040211	2340		Correction to Information Elements for UE Rx-Tx time difference	6.1.0	6.2.0
	RP-24	RP-040210			Naming correction in the HS-DSCH IE Measurement Feedback Information	6.1.0	6.2.0
	RP-24	RP-040206	2345		Clarification about open loop power control in 1.28Mcps TDD	6.1.0	6.2.0
	RP-24	RP-040206	2348		Clarification about measurement control system information in TDD mode	6.1.0	6.2.0
	RP-24	RP-040211			Correction to timing-maintained hard handover regarding the UL transmission timing	6.1.0	6.2.0
	RP-24	RP-040236		2	Selection of suitable cell	6.1.0	6.2.0
	RP-24	RP-040236	2356		Check of the PLMN identity in the MIB when selecting a new cell	6.1.0	6.2.0
	RP-24	RP-040211	2358		Compressed INTER RAT HANDOVER INFO message modifications/corrections	6.1.0	6.2.0
	RP-24	RP-040215	2359	Ĭ	The ASN.1 definition of IE 'SysInfoType5bis'	6.1.0	6.2.0

		_			Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-24	RP-040224			RLC size handling and RLC re-establishment	6.1.0	6.2.0
	RP-24	RP-040212			Restrict operation of the virtual active set	6.1.0	6.2.0
	RP-24	RP-040213			Usage of different RB mapping info	6.1.0	6.2.0
	RP-24	RP-040256		1	Clarification on UE procedure in case of HHO failure	6.1.0	6.2.0
09/2004	RP-25	RP-040327	2373		TDD misalignment between tabular and ASN.1 definitions of UL Transport channel information common for all transport channels and special burst scheduling	6.2.0	6.3.0
	RP-25	RP-040327	2377		Definition of parameters for UE-assisted A-GPS	6.2.0	6.3.0
	RP-25	RP-040339	2378	2	Addition of UMTS850 (Band V) in the tabular	6.2.0	6.3.0
	RP-25	RP-040360	2381		Default Configurations for multiple AMR Rate Configurations	6.2.0	6.3.0
	RP-25	RP-040319	2384		Correction on PRACH selection in 1.28Mcps TDD	6.2.0	6.3.0
	RP-25	RP-040334	2386		Inconsistency in UE action for HFN initialisation	6.2.0	6.3.0
	RP-25	RP-040334	2388		Usage of different RB mapping info for TDD	6.2.0	6.3.0
	RP-25	RP-040334	2390		TDD HS-DSCH Corrections	6.2.0	6.3.0
	RP-25	RP-040334	2392		Alignment of Tabular Definition with ASN.1 for HS-SCCH Info	6.2.0	6.3.0
	RP-25	RP-040348	2394	1	Correction to HS-DSCH reception conditions	6.2.0	6.3.0
	RP-25	RP-040334			Correction to RB mapping check	6.2.0	6.3.0
	RP-25	RP-040334			Position Timestamp for A-GPS	6.2.0	6.3.0
	RP-25	RP-040334			Pending compressed mode reconfigurations	6.2.0	6.3.0
	RP-25	RP-040335		-	Predefined configurations for the RRC connection request	6.2.0	6.3.0
	RP-25	RP-040335			Cell update during reconfiguration from CELL_FACH to	6.2.0	6.3.0
	RP-25	RP-040335	2406		CELL_PCH UE actions for Delta_ACK/NACK and repetition factor	6.2.0	6.3.0
	RP-25	RP-040335			Calculation of UL transmit power for HS-SICH (TDD)	6.2.0	6.3.0
	RP-25	RP-040335			Handling of Timer T302 Expiry	6.2.0	6.3.0
	RP-25	RP-040335			Correct naming for HS-DSCH with DCH multiplexing option	6.2.0	6.3.0
	RP-25	RP-040335			Compressed Pre-defined configurations description in new	6.2.0	6.3.0
	RP-25	RP-040335	2416		Annex C Integration between integrity protection and the sending of downlink messages during SRNS relocation	6.2.0	6.3.0
	RP-25	RP-040328	2418		Corrections to restrictions of operation of the virtual active set	6.2.0	6.3.0
	RP-25	RP-040336	2420		UE actions for received new keys	6.2.0	6.3.0
	RP-25	RP-040336	2422	1	Scrambling Code Change	6.2.0	6.3.0
	RP-25	RP-040328			Clarifications to VAS functionality	6.2.0	6.3.0
	RP-25	RP-040336			UE security capability in INTER_RAT handover	6.2.0	6.3.0
	RP-25	RP-040336			Correction to the Radio Link Failure behaviour	6.2.0	6.3.0
12/2004	RP-26	RP-040481			Correction to measured results on RACH	6.3.0	6.4.0
12/2001	RP-26	RP-040481			T305 handling upon a state transition	6.3.0	6.4.0
	RP-26	RP-040481			Handling of pending AM RLC unrecoverable errors signalled by cell update	6.3.0	6.4.0
	RP-26	RP-040476	2442		Correction to maximum length of CTCH period	6.3.0	6.4.0
	RP-26	RP-040481	2444		TPC step size in default configurations	6.3.0	6.4.0
	RP-26	RP-040474	2448		References to ITU-T Recommendations on ASN.1	6.3.0	6.4.0
	RP-26	RP-040477			ASN.1 clarification on Measurement Report for 1.28 Mcps TDD	6.3.0	6.4.0
	RP-26	RP-040481	2453		Correction to HS-DSCH reception conditions	6.3.0	6.4.0
	RP-26	RP-040481		1	MAC-hs Reset procedure	6.3.0	6.4.0
	RP-26	RP-040526		2	Cell selection and reselection parameters	6.3.0	6.4.0
	RP-26	RP-040482		1	Clarification the PDCP capability- Max HC context space	6.3.0	6.4.0
	RP-26	RP-040482			Corrections to IE 'WAIT TIME' = 0	6.3.0	6.4.0
	RP-26	RP-040482		1	RRC transaction identifier in the MEASUREMENT CONTROL	6.3.0	6.4.0
	RP-26	RP-040482	2465		message Correction to intra-frequency measurement handling in SIB11	6.3.0	6.4.0
	RP-26	RP-040477		1	Missing OTDOA TDD related v4b0 extension in	6.3.0	6.4.0
	RP-26	RP-040482	2470	2	MEASUREMENT CONTROL Clarification of Radio Bearer Downlink Ciphering Activation Time Info	6.3.0	6.4.0
	RP-26	RP-040520	2472	2	TFC Subset Variable Usage and Application of Transport Format Combination Subset	6.3.0	6.4.0
	RP-26	RP-040505	2474		Use of preconfiguration in the RADIO BEARER RECONFIGURATION message	6.3.0	6.4.0

					Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-26	RP-040505			UTRAN setting of ciphering activation time for SRB2	6.3.0	6.4.0
	RP-26	RP-040505			Correction to ASN1 IE 'srb-SpecificIntegrityProtInfo'	6.3.0	6.4.0
	RP-26	RP-040522		2	Criteria for initiating cell update on receiving 'Frequency info' IE in CELL UPDATE CONFIRM message		6.4.0
	RP-26	RP-040505			Traffic volume measurements in PCH states	6.3.0	6.4.0
	RP-26	RP-040505			Failure cause indication on Cell Update	6.3.0	6.4.0
	RP-26	RP-040495		1	Network Sharing and multiple PLMN identities	6.3.0	6.4.0
	RP-26	RP-040505	2493		Inter-RAT measurement control information used	6.3.0	6.4.0
	RP-26	RP-040491	2494		ASN.1 update for the introduction of MBMS	6.3.0	6.4.0
	RP-26	RP-040491		1	Introduction of MBMS	6.3.0	6.4.0
	RP-26	RP-040543	2496	2	Preamble and Postamble to reduce HS-DPCCH transmit power	6.3.0	6.4.0
	RP-26	RP-040507	2497		Introduction of E-DCH	6.3.0	6.4.0
03/2005	RP-27	RP-050038	2491	2	Removal of TGPL2	6.4.0	6.5.0
	RP-27	RP-050069	2499		Minor HSDPA related corrections	6.4.0	6.5.0
	RP-27	RP-050169	2501		Integrity protection related information in the SRNS relocation info	6.4.0	6.5.0
	RP-27	RP-050069			Number of timeslots that can be used for HS-PDSCH resource for 3.84 Mcps TDD	6.4.0	6.5.0
	RP-27	RP-050089			HS-DSCH operation without a DL DPCH for 3.84 Mcps TDD	6.4.0	6.5.0
	RP-27	RP-050114			Removal of unnecessary cell updates on receiving 'Frequency info' IE in CELL UPDATE CONFIRM message	6.4.0	6.5.0
	RP-27	RP-050069			ASN.1 clarification on Cell and Channel Identity info for 1.28 Mcps TDD	6.4.0	6.5.0
	RP-27	RP-050070			Handling of TM SRB"s at radio link failure	6.4.0	6.5.0
	RP-27	RP-050070			Removal of the UARFCN uplink (Nu) in the informative Annex A.3	6.4.0	6.5.0
	RP-27	RP-050070		1	Correction on PRACH selection	6.4.0	6.5.0
	RP-27	RP-050067	2517	3	Lossless DL RLC PDU size change	6.4.0	6.5.0
	RP-27	RP-050069	2519		Clarification of GERAN (P)SI message coding in NACC	6.4.0	6.5.0
	RP-27	RP-050070	2521		Unsupported RLC mode reconfigurations	6.4.0	6.5.0
	RP-27	RP-050070	2523		Correction to Inter RAT cell info indication	6.4.0	6.5.0
	RP-27	RP-050086	2524		Correction to network sharing functionality	6.4.0	6.5.0
	RP-27	RP-050086	2525		Network sharing corrections	6.4.0	6.5.0
	RP-27	RP-050110		1	CN domain specific Access Class Barring	6.4.0	6.5.0
	RP-27	RP-050081	2527		Corrections to "selected PLMN" in access stratum	6.4.0	6.5.0
	RP-27	RP-050074			Introduction of F-DPCH	6.4.0	6.5.0
	RP-27	RP-050084	2529		Minor E-DCH related corrections	6.4.0	6.5.0
	RP-27	RP-050079	2530	2	Miscellaneous MBMS corrections	6.4.0	6.5.0
	RP-27	RP-050087	2532		Additional Frequency Bands	6.4.0	6.5.0
	RP-27	RP-050084	2534		Introduction of E-DCH in the ASN.1	6.4.0	6.5.0
	RP-27	RP-050097	2535		Improvements to uplink closed loop power control for 1.28 Mcps TDD	6.4.0	6.5.0
	RP-27	RP-050079	2536	1	MBMS Corrections to 25.331 ASN.1	6.4.0	6.5.0
	RP-27	RP-050128	2538	1	Correction to cell selection and reselection parameters to enable enhanced cell reselection	6.4.0	6.5.0
06/2005	RP-28	RP-050253		3	Faster L1 DCH synchronization	6.5.0	6.6.0
	RP-28	RP-050339		3	Timing maintained hard handover	6.5.0	6.6.0
	RP-28	RP-050320		1	Removal of unnecessary Start values	6.5.0	6.6.0
	RP-28	RP-050329	2542		Merged CR alignement w.r.t. network sharing functionality	6.5.0	6.6.0
	RP-28	RP-050302	2545		Timing Reinitialized Handover & Radio Link Timing Adjustmen	6.5.0	6.6.0
	RP-28	RP-050302			Addition of omitted IE 'report criteria' in MEASUREMENT CONTROL message 'modify' command	6.5.0	6.6.0
	RP-28	RP-050316		2	Miscellaneous MBMS corrections (set II)	6.5.0	6.6.0
	RP-28	RP-050316		1	Correction to MBMS notification procedure	6.5.0	6.6.0
	RP-28	RP-050316		1	FACH Measurement Occasion when UE receives MBMS	6.5.0	6.6.0
	RP-28	RP-050316	2551		Frequency layer dispersion	6.5.0	6.6.0
	RP-28	RP-050303	2553	2	Signalling of target mode for ROHC operation	6.5.0	6.6.0
	RP-28	RP-050320	2554	2	Introduction of inter-frequency RACH measurement reporting	6.5.0	6.6.0
	RP-28	RP-050324	2555		Closed-Loop Power Control Improvements for 1.28 Mcps TDD – ASN1 Corrections	6.5.0	6.6.0

Date	TSG#	TSG Doc.	CR	Rev	Change history Subject/Comment	Old	New
Date	RP-28	RP-050322		Kev	Release 6 HS-DSCH operation without a DL DPCH for 3.84	6.5.0	6.6.0
	111 20	111 000022	2000		Mcps TDD – Setting of Dhs-sync	0.0.0	0.0.0
	RP-28	RP-050320		1	Correction to the Amount of Reporting	6.5.0	6.6.0
	RP-28	RP-050320	2558		Measurement report message definition when Inter-RAT cell info indication is used	6.5.0	6.6.0
	RP-28	RP-050320	2559		Direct transition to DCH	6.5.0	6.6.0
	RP-28	RP-050316	2560	1	Addition of the number of MBMS Neighbour Cell PTM	6.5.0	6.6.0
					Information messages to the MBMS Modified Services Information message		
	RP-28	RP-050316		1	Addition of MBMS counting for UEs in Cell_PCH and Cell_FACH states and addition of UE requested p-t-p bearer establishmen	6.5.0	6.6.0
	RP-28	RP-050320	2562		Introduction of IE 'RB information to reconfigure' in RB SETUP, RB RELEASE messages	6.5.0	6.6.0
	RP-28	RP-050320	2564		Including HS-DSCH serving cell change in ASU	6.5.0	6.6.0
	RP-28	RP-050320	2566	1	Detection of Activation CFN wraparound in the UE during HS- DSCH cell change	6.5.0	6.6.0
	RP-28	RP-050304	2568		Correction to handling of keys at inter-RAT handove	6.5.0	6.6.0
	RP-28	RP-050302	2572		CTFC calculation for DCH	6.5.0	6.6.0
	RP-28	RP-050302	2574		Default RB identity in IE 'Signalling RB information to setup	6.5.0	6.6.0
	RP-28	RP-050302	2576		Default configuration 13	6.5.0	6.6.0
	RP-28	RP-050320	2577		UE L3 requirements for HS-DSCH mobility	6.5.0	6.6.0
	RP-28	RP-050374	2579	3	Support for out-of-sequence PDUs in RLC-UM	6.5.0	6.6.0
	RP-28	RP-050305	2581		Feature Clean Up: Removal of 80 ms TTI for DCH for all other cases but when the UE supports SF512	6.5.0	6.6.0
	RP-28	RP-050306	2583		Feature Clean Up: Removal of observed time difference to GSM cell	6.5.0	6.6.0
	RP-28	RP-050307	2585		Feature Clean Up: Removal of SSDT	6.5.0	6.6.0
	RP-28	RP-050308	2586		Feature Clean-up: Removal of DSCH (FDD)	6.5.0	6.6.0
	RP-28	RP-050309	2589		Feature Clean Up: Removal of CPCH	6.5.0	6.6.0
	RP-28	RP-050310	2591		Feature Clean Up: Removal of dedicated pilot as sole phase reference	6.5.0	6.6.0
	RP-28	RP-050311	2593		Feature Clean Up: Removal of DRAC	6.5.0	6.6.0
	RP-28	RP-050312	2595		Feature Clean Up: Removal of TX diversity closed loop mode 2	6.5.0	6.6.0
	RP-28	RP-050313	2597		Feature Clean Up: Removal of Compressed mode by puncturing	6.5.0	6.6.0
	RP-28	RP-050327	2598	2	Alignment of EUDCH RRC Stage-3 to Stage-2 status, including handling of 2 E-RNTIs	6.5.0	6.6.0
	RP-28	RP-050336			Radio link failure in F-DPCH	6.5.0	6.6.0
	RP-28	RP-050323		1	Setting up F-DPCH and E-DCH in RRC connection setup	6.5.0	6.6.0
	RP-28	RP-050316	2601	1	Validity of PtM configurations	6.5.0	6.6.0
	RP-28	RP-050392	2602	1	CCCH message enhancements	6.5.0	6.6.0
	RP-28	RP-050320	2604		Quality measurement corrections	6.5.0	6.6.0
	RP-28	RP-050328	2605		Clean-up of R6 ASN.1 leftovers	6.5.0	6.6.0
	RP-28	RP-050346	2607	2	UE behaviour for DCH SIR target setting for Downlink power control	6.5.0	6.6.0
	RP-28	RP-050317	2608		RLC LI Optimization for VoiP	6.5.0	6.6.0
	RP-28	RP-050316	2609	2	Introduction of an S-CCPCH power offset difference in order to improve cell selection for soft and selective combining	6.5.0	6.6.0
	RP-28	RP-050320			Erroneous implementation of CR#2501 in RRC specification v6.5.0.	6.5.0	6.6.0
	RP-28	RP-050329			Correction to network sharing	6.5.0	6.6.0
	RP-28	RP-050316			MBMS asn1 issues	6.5.0	6.6.0
	RP-28	RP-050316			SCCPCH timing offset information for FDD MBMS soft combining	6.5.0	6.6.0
	RP-28	RP-050316			MBMS corrections on signalling optimization	6.5.0	6.6.0
9/2005	RP-29	RP-050486			Support of Domain Specific Access control in Rel-5 Ues	6.6.0	6.7.0
	RP-29	RP-050465			ASN1 update for InterRATReportingQuantity	6.6.0	6.7.0
	RP-29	RP-050465	2621	1	IE 'RB information to reconfigure' for RADIO BEARER RECONFIGURATION message	6.6.0	6.7.0
	RP-29	RP-050465	2623		Size of TFC Subset List for Transport Format Combination Control	6.6.0	6.7.0
	RP-29	RP-050465	2626		RB mapping rules	6.6.0	6.7.0
	RP-29	RP-050587	2628	3	Rules for triggering hard handover	6.6.0	6.7.0
	RP-29	RP-050465	2630		RSCP value range extension	6.6.0	6.7.0

	I= 0.0 #	1			Change history		I.
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-29 RP-29	RP-050465			H-RNTI validity	6.6.0	6.7.0
		RP-050482			Removal RLC-SDU alignment capability	6.6.0	6.7.0
	RP-29	RP-050458			Feature Clean Up: Removal of DRAC	6.6.0	6.7.0
	RP-29	RP-050458			DRAC & Dedicated pilots removal leftovers (asn1)	6.6.0	6.7.0
	RP-29	RP-050458			DRAC & CPCH removal leftovers (sib8,9,10)	6.6.0	6.7.0
	RP-29	RP-050458		1	Feature remove (Tabular/asn1 alignment)	6.6.0	6.7.0
	RP-29	RP-050482			Correction to UE L3 requirements for HS-DSCH mobility	6.6.0	6.7.0
	RP-29	RP-050482			Rate Control Correction	6.6.0	6.7.0
	RP-29	RP-050482			Introduction of container to facilitate transparent transfer of UE capabilities	6.6.0	6.7.0
	RP-29	RP-050482	2645		Minor ASN.1 correction for TDD IEs Beacon PL Est and DHS- Sync	6.6.0	6.7.0
	RP-29	RP-050482	2646		Addition of ongoing reconfiguration indicator in cell update	6.6.0	6.7.0
	RP-29	RP-050482	2648		Faster L1 DCH synchronization	6.6.0	6.7.0
	RP-29	RP-050482	2649		Direct transition to DCH	6.6.0	6.7.0
	RP-29	RP-050482	2650		PSI messages in CELL CHANGE ORDER FROM UTRAN	6.6.0	6.7.0
	RP-29	RP-050482	2651		SRNS relocation info	6.6.0	6.7.0
	RP-29	RP-050482	2652		Correction to UE-assisted OTDOA support	6.6.0	6.7.0
	RP-29	RP-050482	2653		Correction to undefined UE behaviour in case of Cell-ID positioning with method type UE-based	6.6.0	6.7.0
	RP-29	RP-050482	2654		Receiving "Frequency info" IE in CELL UPDATE CONFIRM message	6.6.0	6.7.0
	RP-29	RP-050483	2655		Re-entry in service in CELL_PCH before T316 expiry	6.6.0	6.7.0
	RP-29	RP-050483	2656		ASN.1 alignment to Rel-5 of InterRATCellInfoIndication	6.6.0	6.7.0
	RP-29	RP-050483	2657		Addition of Inter-frequency measurements reporting on RACH reporting in the ASN.1 of RRC CONNECTION REQUEST and CELL UPDATE messages	6.6.0	6.7.0
	RP-29	RP-050483	2658		Correction to the Amount of Reporting	6.6.0	6.7.0
	RP-29	RP-050483			Minor correction of HS-DSCH/ E-DCH capability indication	6.6.0	6.7.0
	RP-29	RP-050476	2660		Modification of TPC command error rate granularity and range	6.6.0	6.7.0
	RP-29	RP-050473		1	Introduction of PS handover between UTRAN and GERAN	6.6.0	6.7.0
	RP-29	RP-050483				6.6.0	6.7.0
	RP-29	RP-050468	2663		Minor MBMS corrections (set IV)	6.6.0	6.7.0
	RP-29	RP-050468			Clarification on MBMS modified services information IE	6.6.0	6.7.0
	RP-29	RP-050468			MBMS correction for recounting	6.6.0	6.7.0
	RP-29	RP-050468		1	MBMS asn1 issues	6.6.0	6.7.0
	RP-29	RP-050471			E-DCH corrections and additions	6.6.0	6.7.0
	RP-29	RP-050471			E-DCH corrections	6.6.0	6.7.0
	RP-29	RP-050471		4	E-DCH additions to active set update	6.6.0	6.7.0
					·		
	RP-29 RP-29	RP-050471		1	UE capabilities for E-DCH in 25.331	6.6.0	6.7.0
		RP-050468			Conditional suspension of CELL_FACH measurements to enable reception of MCCH		6.7.0
	RP-29	RP-050468			MBMS message order on MCCH	6.6.0	6.7.0
	RP-29	RP-050468	2673		MSCH configuration information in case of soft combining Timing Offset	6.6.0	6.7.0
	RP-29	RP-050469	2674	1	Removal of fixed position for S-CCPCHs carrying MBMS channels	6.6.0	6.7.0
	RP-29	RP-050467	2675		Introduction of Band VII	6.6.0	6.7.0
	RP-29	RP-050483	2676		Introducing pre- configuration upon radio bearer establishment	6.6.0	6.7.0
	RP-29	RP-050484	2677	1	Introduction of the device type indication in UE capability	6.6.0	6.7.0
	RP-29	RP-050471			E-DCH TTI Reconfiguration	6.6.0	6.7.0
	RP-29	RP-050483			Maximum number of reference ETFCI"s	6.6.0	6.7.0
	RP-29	RP-050561			F-DPCH power control	6.6.0	6.7.0
12/2005	RP-30	RP-050801		2	Introduction of UMTS1700	6.7.0	6.8.0
,_500	RP-30	RP-050787		4	Introduction of the HSDPA and E-DCH Capable Cell Indicator	6.7.0	6.8.0
	RP-30	RP-050787		1	PRACH for CCCH in SIB 6	6.7.0	6.8.0
	RP-30	RP-050785		1	Tx/Rx frequency separation capability (FDD)	6.7.0	6.8.0
	RP-30	RP-050796 RP-050827		1	E-DCH mobility corrections and multi-step handling for E-RGCH	6.7.0	6.8.0
	RP-30			1	, ,		
	KP-30	RP-050797	∠∪00	1	L1 synchronisation at HHO	6.7.0	6.8.0

Date	TSG#	TSG Doc.	CR	Rev	Change history Subject/Comment	Old	New
Jaie	RP-30	RP-050786		IVEA	Correction to UE positioning measurements in	6.7.0	6.8.0
	RP-30	RP-050785	2602		CELL_PCH/URA_PCH state	6.7.0	6.8.0
	RP-30	RP-050785	2692		Clarification of Delta in Inter/Intra-frequency measurement reporting criteria	6.7.0	6.8.0
	RP-30	RP-050785	2694		Clarification of the usage of "Ack-Nack Power Offset" in HSDPA for TDD	6.7.0	6.8.0
	RP-30	RP-050785			Modification of WB-AMR default configuration	6.7.0	6.8.0
	RP-30	RP-050785	2698		Serving E-DCH radio link indication	6.7.0	6.8.0
	RP-30	RP-050800	2699		Introduction of UMTS 900 (Band VIII)	6.7.0	6.8.0
	RP-30	RP-050788			MCCH configuration information	6.7.0	6.8.0
	RP-30	RP-050788			Correction of default TFCS for MBMS	6.7.0	6.8.0
	RP-30	RP-050797			Unidirectional RLC reconfiguration	6.7.0	6.8.0
	RP-30	RP-050793		1	Misalignments for E-DCH	6.7.0	6.8.0
	RP-30	RP-050793	_		Update for E-DCH Serving Grant IE value range	6.7.0	6.8.0
	RP-30	RP-050793			Clarification on MAC-d flow multiplexing list	6.7.0	6.8.0
	RP-30	RP-050793			Addition of E-DCH power offsets to active set update	6.7.0	6.8.0
	RP-30	RP-050793			E-RNTI validity	6.7.0	6.8.0
	RP-30	RP-050793			Clarification of bit strings for EUL	6.7.0	6.8.0
	RP-30	RP-050793		1	Modification of SI periodicity	6.7.0	6.8.0
	RP-30	RP-050793		1	E-DCH PO signalling	6.7.0	6.8.0
	RP-30 RP-30	RP-050793 RP-050788		1	MAC es/e reset indicator MBMS corrections on default TFCS, service identity and PL	6.7.0 6.7.0	6.8.0
	RP-30	RP-050831		1	Service Information Corrections of inconsistencies in Rel-6 RRC messages (ASN.1	6.7.0	6.8.0
03/2006	KF-30	KF-030031	2111		review)	0.7.0	0.0.0
	RP-30	RP-050861	2718	1	Introduction of Support of Handover to GAN	6.7.0	6.8.0
	RP-31	RP-060087	2716	5	E-DCH Measurement Event 1J	6.8.0	6.9.0
	RP-31	RP-060083	2720	-	Default configuration 11 for multirate AMR with SRB5	6.8.0	6.9.0
	RP-31	RP-060081		1	Addition of synchronization parameters in RRC for HS-SICH in 1.28Mcps TDD	6.8.0	6.9.0
	RP-31	RP-060091		-	Integrity Protection check for NAS messages	6.8.0	6.9.0
	RP-31	RP-060087		-	set		6.9.0
	RP-31	RP-060087	2725	-	Addition of SF128 and SF256 in E-DCH maximum channelisation codes	6.8.0	6.9.0
	RP-31	RP-060087	_	2	RRC signaling efficiency changes for E-DCH	6.8.0	6.9.0
	RP-31	RP-060087	2727	-	E-DCH HARQ Info signalling	6.8.0	6.9.0
	RP-31	RP-060087		-	Secondary Scrambling Code in F-DPCH RL information	6.8.0	6.9.0
	RP-31	RP-060087	_	-	Correction to E-DCH IEs	6.8.0	6.9.0
	RP-31	RP-060087		-	Non-scheduled grant	6.8.0	6.9.0
	RP-31	RP-060087		-	IE handling for E-DCH	6.8.0	6.9.0
	RP-31	RP-060087		1-	E-RNTI handling in Active Set Update procedure	6.8.0	6.9.0
	RP-31 RP-31	RP-060087 RP-060120		1	Editorial correction on 'E-DCH information' Corrections of inconsistencies in Rel-6 RRC messages (ASN.1	6.8.0	6.9.0 6.9.0
	RP-31	RP-060091	2735	-	review) Correction to Modifying Integrity Protection Configuration for TM	6.8.0	6.9.0
	RP-31	RP-060091	2736	1_	SRB Correction to Security Mode Control Procedure	6.8.0	6.9.0
	RP-31	RP-060091		1_	Resolving problems from CR implementation	6.8.0	6.9.0
	RP-31	RP-060091		-	Removal of GPRS encryption algorithm info	6.8.0	6.9.0
	RP-31	RP-060092		1	Default configurations for Multi-mode AMR	6.8.0	6.9.0
	RP-31	RP-060091		 -	Periodic URA Update in OOS	6.8.0	6.9.0
	RP-31	RP-060091		1-	Correction in IE UE positioning capability	6.8.0	6.9.0
	RP-31	RP-060091		1-	F-DPCH, HSDPA and E-DCH in HANDOVER TO UTRAN	6.8.0	6.9.0
	RP-31	RP-060091		-	COMMAND (Rel-6 ASN.1 review issue 013) Representation of IE "latestConfiguredCN-Domain" in the r3	6.8.0	6.9.0
					branch of SRNS Relocation Info		
	RP-31	RP-060083		1	7.95kbps NB AMR Default Configuration removal	6.8.0	6.9.0
	RP-31	RP-060091		-	Periodic BMC Schedule Message	6.8.0	6.9.0
	RP-31	RP-060092		1	Introduction of additional Default configuration identities	6.8.0	6.9.0
	RP-31	RP-060095	2749	1	PS default configurations	6.8.0	6.9.0

Change history							
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-31	RP-060091	2751	-	Configuration of DL TFCS as 'Same as UL'	6.8.0	6.9.0
	RP-31	RP-060091	2752	-	NAS synchronization indicator in RB setup	6.8.0	6.9.0
	RP-31	RP-060088	2753	-	General error handling in case of ASN.1 violation and for MBMS channels	6.8.0	6.9.0
	RP-31	RP-060091	2754	-	Clarification of UE action upon receiving the IE RB information to change list	6.8.0	6.9.0
	RP-31	RP-060091	2755	-	Removal of unnecessary checking for HS-DSCH and E-DCH configuration	6.8.0	6.9.0
	RP-31	RP-060091	2756	-	Introduction of WB-AMR default configuration without SRB#5	6.8.0	6.9.0
	RP-31	RP-060091	2757	-	Initial DPCH frame offset for F-DPCH	6.8.0	6.9.0
	RP-31	RP-060086	2760	1	Support for different E-DCH and HS-DSCH serving cells	6.8.0	6.9.0
	RP-31	RP-060088	2761	-	Correction to S-CCPCH power offset for MBMS	6.8.0	6.9.0
	RP-31	RP-060093	2764	-	Inter-RAT PS Handover capability	6.8.0	6.9.0
	RP-31	RP-060095	2765	-	Indication of HSPA capability and conversation call type for CS	6.8.0	6.9.0
	RP-31	RP-060097	2713	3	Enabling the Providing of Velocity	6.9.0	7.0.0
	RP-31	RP-060096	2758		Release 7 HS-DSCH operation without a DL DPCH for 1.28 Mcps TDD – synchronisation and power control of UL DPCH via PLCCH	6.9.0	7.0.0
	RP-31	RP-060098	2759		7.68 Mcps TDD Option (Release 7)	6.9.0	7.0.0
	RP-31	RP-060099	2762		Introduction of REL-7 access stratum release indicator	6.9.0	7.0.0
06/2006	RP-32	RP-060374	2769		RoHC Segmentation, padding and Packet_sizes_allowed parameter removal	7.0.0	7.1.0
	RP-32	RP-060360	2772		Corrections of procedures dealing with 'Serving HS-DSCH radio link indicator' and 'Serving E-DCH radio link indicator'	7.0.0	7.1.0
	RP-32	RP-060361	2774		MAC-HS handling for "return in case of failure"	7.0.0	7.1.0
	RP-32	RP-060383	2776		RB' terminology in security procedures	7.0.0	7.1.0
	RP-32	RP-060368	2778		Clarification on IE 'MBMS re-acquire MCCH'	7.0.0	7.1.0
	RP-32	RP-060368	2780	-	Clarification on MCCH Acquisition Initiation	7.0.0	7.1.0
	RP-32	RP-060368	2782		Clarification of encoding of TB size for FDD common transport channels	7.0.0	7.1.0
	RP-32	RP-060368	2784		HCS parameters for MBMS cell reselection	7.0.0	7.1.0
	RP-32 RP-32	RP-060354 RP-060361	2786 2788		Clarification on MAC-e/es reset Modification to the 'BLER target'configuration method in RRC spec	7.0.0 7.0.0	7.1.0 7.1.0
	RP-32	RP-060361	2790		for 3.84Mcps TDD Add some IEs regarding HS-SICH power control parameter	7.0.0	7.1.0
	101-52	1000301	2130		updating in UPLINK PHYSICAL CHANNEL CONTROL message in 1.28Mcps TDD mode		7.1.0
	RP-32	RP-060364	2792	-	Corrections on Inter-RAT cell info indication	7.0.0	7.1.0
	RP-32	RP-060364	2794		Clarifications regarding virtual active set		7.1.0
	RP-32	RP-060358	2796		PS Handover Capability	7.0.0	7.1.0
	RP-32	RP-060364	2798		Handling of System Information Block type 5bis.	7.0.0	7.1.0
	RP-32	RP-060364	2800		Introducing container for Measurement Report informaton within SRNS relocation	7.0.0	7.1.0
	RP-32	RP-060364	2802		Removal of GSM OTD reference cell	7.0.0	7.1.0
	RP-32	RP-060364	2804		Error handling of 'dummy' IEs introduced in ASN.1 by recent feature removal	7.0.0	7.1.0
	RP-32	RP-060365	2806		START value in Cell Update	7.0.0	7.1.0
	RP-32	RP-060365	2808		Default configurations 10 and 13	7.0.0	7.1.0
	RP-32	RP-060365	2810		Inter-frequency measurement reporting on RACH	7.0.0	7.1.0
	RP-32	RP-060365	2812		Radio bearer mapping for SRBs	7.0.0	7.1.0
	RP-32	RP-060365	2814		Correction to RLC default configuration	7.0.0	7.1.0
	RP-32 RP-32	RP-060366 RP-060366	2816 2818		New standalone SRB default configuration Introduction of default configurations with "flexible TFCS"	7.0.0 7.0.0	7.1.0 7.1.0
	RP-32 RP-32	RP-060366 RP-060366	2818		Introduction of default configurations with "flexible 1FCS" Small IE corrections: "RB information to change list", "Access	7.0.0	7.1.0
	RP-32	RP-060366	2822		Class Barred" Correction to IE Default Configuration Identity	7.0.0	7.1.0
<u> </u>	RP-32 RP-32	RP-060366	2822		Correction to TE Default Configuration Identity Correction to TFC subset for default configurations 11&12	7.0.0	7.1.0
	RP-32	RP-060366	2826	-	HSDPA/E-DCH info in INTER RAT HANDOVER INFO WITH INTER RAT CAPABILITIES	7.0.0	7.1.0
	RP-32	RP-060373	2827		Adding CS Call Type to Cell Update Message	7.0.0	7.1.0
	RP-32	RP-060373	2829		Correct indication of Rel-7 tabular entries	7.0.0	7.1.0
	RP-32	RP-060359	2830		Corrections to REL-7 ASN.1	7.0.0	7.1.0
	RP-32	RP-060362	2831		Measurement control ASN.1 error	7.0.0	7.1.0

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
	RP-32	RP-060368	2833	-	Clarification on MBMS Radio Bearer Release	7.0.0	7.1.0
	RP-32	RP-060354	2835	-	Correction on E-DCH DL Scrambling Code	7.0.0	7.1.0
	RP-32	RP-060366	2837		Reinstatement of missing IE "Periodical reporting information-1b" in ASN.1	7.0.0	7.1.0
	RP-32	RP-060366	2839	-	SRB2 suspension	7.0.0	7.1.0
	RP-32	RP-060369	2842	-	Release 7 Timing Advance (3.84 Mpcs and 7.68 Mcps TDD)	7.0.0	7.1.0
	RP-32	RP-060369	2843	-	Introduction of REL-7 access stratum release indicator	7.0.0	7.1.0
	RP-32	RP-060369	2844	-	Positioning velocity ASN.1	7.0.0	7.1.0
	RP-32	RP-060386	2845	1	Correction of positioning confidence reporting inconsistencies	7.0.0	7.1.0

History

Document history							
V7.0.0	March 2006	Publication					
V7.1.0	June 2006	Publication					