ETSI TS 124 088 V4.0.0 (2001-03)

Technical Specification

Digital cellular telecommunications system (Phase 2+) (GSM); Universal Mobile Telecommunications System (UMTS); Call Barring (CB) Supplementary Service - Stage3 (3GPP TS 24.088 version 4.0.0 Release 4)

GLOBAL SYSTEM FOR MOBILE COMMUNICATIONS

Reference
RTS/TSGN-0424088Uv4

Keywords
GSM, UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00   Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:
http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at http://www.etsi.org/tb/status/

If you find errors in the present document, send your comment to:
editor@etsi.fr

Copyright Notification

ETSI

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/ipr).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key .

Contents

Foreword

This Technical Specification has been produced by the 3GPP.

This TS specifies the procedures used at the radio interface for normal operation, registration, erasure, activation, deactivation, invocation and interrogation of call barring supplementary services within the 3GPP system.

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of this TS, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version 3.y.z

where:

x the first digit:

1 presented to TSG for information;

2 presented to TSG for approval;

3 Indicates TSG approved document under change control.

y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.

z the third digit is incremented when editorial only changes have been incorporated in the specification;

Introduction

The present document includes references to features which are not part of the Phase 2+ Release 96 of the GSM Technical specifications. All subclauses which were changed as a result of these features contain a marker (see table below) relevant to the particular feature. GSM 10.01 defines the correspondence between these features and GSM yearly releases.

The following table lists all features that were introduced after Release 96.

Feature	Designator
CAMEL Phase 2	$(CAMEL2)$

0 Scope

This Technical Specification (TS) specifies the procedures used at the radio interface (reference point Um as defined in GSM 04.02) for normal operation, registration, erasure, activation, deactivation, invocation and interrogation of call barring supplementary services. Provision and withdrawal of supplementary services is an administrative matter between the mobile subscriber and the service provider and cause no signalling on the radio interface.

In GSM 04.10 the general aspects of the specification of supplementary services at the layer 3 radio interface are given.

GSM 04.80 specifies the formats and coding for the supplementary services.

Definitions and descriptions of supplementary services are given in GSM 02.04, GSM 02.8x and GSM 02.9x-series.

Technical realization of supplementary services is described in GSM 03.11, GSM 03.8x and GSM 03.9x-series.

The procedures for Call Control, Mobility Management and Radio Resource management at the layer 3 radio interface are defined in GSM 04.07 and GSM 04.08.

The following supplementary services belong to the call restriction supplementary services and are described in this specification:

- Barring of outgoing calls (clause 1):
    - Barring of all outgoing calls (BAOC) (Barring program 1);
    - Barring of outgoing international calls (BOIC) (Barring program 2);
    - Barring of outgoing international calls EXCEPT those directed to the home PLMN country
      (BOIC-exHC) (Barring program 3).

- Barring of incoming calls (clause 2):
    - Barring of all incoming calls (BAIC) (Barring program 1);
    - Barring of incoming calls when roaming outside the home PLMN country
      (BIC-Roam) (Barring program 2).

0.1 Normative references

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.

- For a specific reference, subsequent revisions do not apply.

- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1] GSM 01.04: "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".

[2] GSM 02.04: "Digital cellular telecommunications system (Phase 2+); General on supplementary services".

[3] GSM 03.11: "Digital cellular telecommunications system (Phase 2+); Technical realization of supplementary services".

[4] GSM 04.02: "Digital cellular telecommunications system (Phase 2+); GSM Public Land Mobile Network (PLMN) access reference configuration".

[5] GSM 04.07: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface signalling layer 3; General aspects".

[6]   GSM 04.08: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 specification".

[7]   GSM 04.10: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3; Supplementary services specification; General aspects".

[8]   GSM 04.80: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 supplementary services specification; Formats and coding".

0.2   Abbreviations

Abbreviations used in this specification are listed in GSM 01.04.

0.3   Cross phase compatibility

For the following supplementary services, a number of changes exist between this specification and the protocol version 1 specification:

- Barring of outgoing calls;

- Barring of incoming calls.

The main body of this specification assumes that all network entities comply with this version of the service. In each case an additional subclauses 1.7 and 2.7 defines the additional requirements for when one or more network entities or the MS complies with the protocol version 1 specifications for the supplementary service procedures.

1   Barring of outgoing calls

1.1   Normal operation

When a barring program relating to outgoing calls is active and operative for a basic service, each call set up related to that basic service and not allowed by the barring program will be refused by the network. In this case a NotifySS operation containing the SS-Status indicating that a barring program relating to outgoing calls is currently active and operative will be sent to the served mobile subscriber in a clearing message (see figure 1.1).

MS   Network
                                                 SETUP
--->

                        DISCONNECT/RELEASE/RELEASE COMPLETE
<--
                        Facility (Invoke = NotifySS (SS-Code, SS-Status))
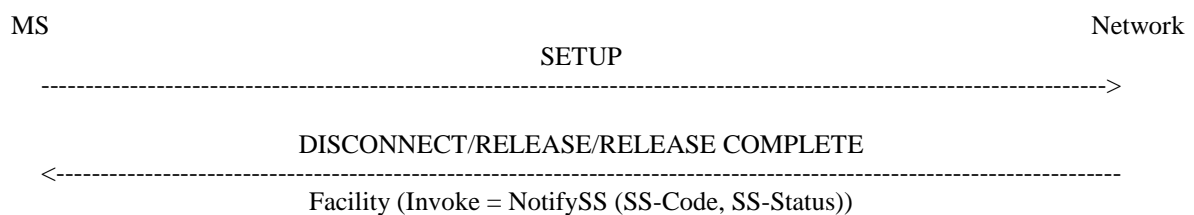
NOTE 1:   The SS-Code will be the common code for outgoing barring services.
NOTE 2: $(CAMEL2)$ The DISCONNECT and RELEASE messages were introduced because of CAMEL Phase 2.

Figure 1.1: Notification to the served mobile subscriber that barring of outgoing calls is active

When a barring program is active (operative or quiescent), the ability of the served mobile subscriber to set up emergency calls is not affected, irrespective of the basic service to which the barring program applies.

When a barring program relating to outgoing calls is active (operative or quiescent), the ability of the served mobile subscriber to receive calls is not affected.

1.2 Registration

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the subscriber has to register a call barring password at provision time. Furthermore the served mobile subscriber can change the call barring password by a registration procedure at any time.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to register a new call barring password will be denied.

The procedure to register a new password is specified in GSM 04.10.

1.3 Activation

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the supplementary service is activated for a basic service if the subscriber has requested so by means of an activation procedure for that basic service. If the subscriber does not indicate a specific basic service, the activation applies to all basic services. The subscriber may use the call barring password at activation (see figure 1.2).

If the activation is successful, the service will be activated. The network will then send a return result indicating acceptance of the request. The result is formatted according to the options shown below:

- The result includes the Basic Service group Code(s) to which the service is activated. The result may also contain an SS-Code and SS-Status parameter. If the MS does not send an SS Version Indicator in the invocation request then these parameters shall be presented in the result. If the MS does send an SS Version Indicator in the invocation request then these parameters are optional in the result. If the SS-Status is included the network shall set it to reflect the state of the service. If the SS-Code is included then it shall contain the SS-Code of the service which has been activated. The MS shall ignore the contents of the SS-Code and SS-Status parameters if they are received.

Note that the use of SS-Code and SS-Status is to provide backwards compatibility with GSM Phase 1.

- If the request did not include a BasicServiceCode, and the activation was successful for all basic services, the network may send an empty return result to the MS. This option applies whether or not an SS Version Indicator is received from the MS.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to activate the service will be denied and the served mobile subscriber receives an error indication (see figure 1.3).

Error values are specified in GSM 04.80.

MS   Network

REGISTER

`-------------------------------------------------------------------------------------------------------->`

Facility (Invoke = ActivateSS (SS-Code, BasicServiceCode))

```
+-----------------------------------------------------------------------------------------+
|                                                                                         |
|                    Password procedure according to GSM 04.10                            |
|                                                                                         |
+-----------------------------------------------------------------------------------------+
```

RELEASE COMPLETE

`<--------------------------------------------------------------------------------------------------`

Facility (Return result = ActivateSS (SS-Code, BasicServiceCode, SS-Status))

RELEASE COMPLETE

`<- - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -`

Facility (Return error (Error))

RELEASE COMPLETE

`<- - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -`

Facility (Reject (Invoke_problem))

NOTE: The SS-Code will be one of the specific outgoing barring codes. If BasicServiceCode is not included it applies to all basic services. The SS-Code and SS-Status may not be included in the result in all cases (see text).

Figure 1.2: Activation of a barring program

1.4   Deactivation

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the supplementary service is deactivated for a basic service if the subscriber has requested deactivation by means of a deactivation procedure for that basic service. The subscriber may use the call barring password at deactivation (see figure 1.3).

The deactivation request of a barring program may specify the basic service. If the subscriber does not indicate a specific basic service, the deactivation applies to all basic services (see figure 1.3).

If the deactivation is successful, the service will be deactivated. The network will then send a return result indicating acceptance of the request. The result is formatted according to the options shown below:
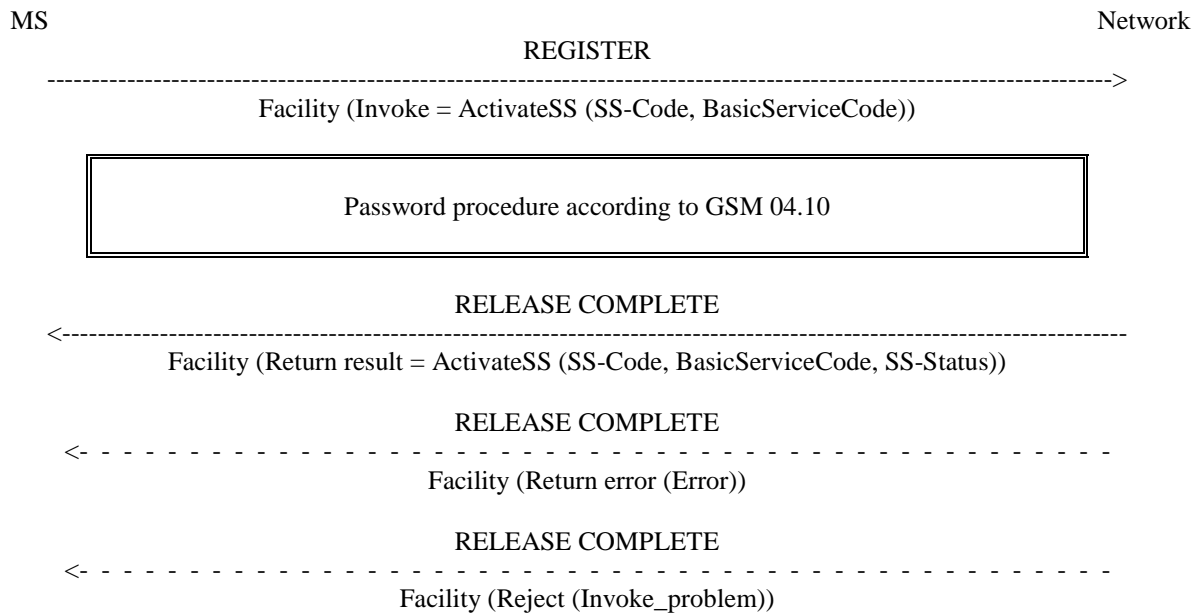
- The result includes the Basic Service group Code(s) to which the service is deactivated. The result may also contain an SS-Code and SS-Status parameter. If the MS does not send an SS Version Indicator in the invocation request then these parameters shall be presented in the result. If the MS does send an SS Version Indicator in the invocation request then these parameters are optional in the result. If the SS-Status is included the network shall set it to reflect the state of the service. If the SS-Code is included then it shall contain the SS-Code of the service which has been deactivated. The MS shall ignore the contents of the SS-Code and SS-Status parameters if they are received.

Note that the use of SS-Code and SS-Status is to provide backwards compatibility with GSM Phase 1.

- If the request did not include a BasicServiceCode, and the deactivation was successful for all basic services, the network may send an empty return result to the MS. This option applies whether or not an SS Version Indicator is received from the MS.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to deactivate the supplementary service will be denied and the served mobile subscriber receives an error indication (see figure 1.3). Error values are specified in GSM 04.80.

MS   Network
<div align="center">REGISTER</div>

-->
<div align="center">Facility (Invoke = DeactivateSS (SS-Code, BasicServiceCode))</div>

```
┌─────────────────────────────────────────────────────────────────────────────────┐
│                                                                                   │
│                   Password procedure according to GSM 04.10                       │
│                                                                                   │
└─────────────────────────────────────────────────────────────────────────────────┘
```

<div align="center">RELEASE COMPLETE</div>
<--
<div align="center">Facility (Return result = DeactivateSS (SS-Code, BasicServiceCode, SS-Status))</div>

<div align="center">RELEASE COMPLETE</div>
<- -
<div align="center">Facility (Return error (Error))</div>

<div align="center">RELEASE COMPLETE</div>
<- -
<div align="center">Facility (Reject (Invoke_problem))</div>

NOTE: The SS-Code may be one of the specific outgoing barring codes, the common code for the outgoing barring services, or the SS-Code for all call barring services. If BasicServiceCode is not included it applies to all basic services. The SS-Code and SS-Status may not be included in the result in all cases (see text).

<div align="center">**Figure 1.3: Deactivation of barring of outgoing calls**</div>

1.5 Interrogation

The interrogation procedure enables the mobile subscriber to obtain information about data stored in the PLMN. After having requested this procedure the network shall return a list of all basic service groups for which the service is active (see figure 1.4).

If there is no basic service group for which the service is active, an SS-Status will be returned indicating that the service is "deactivated".

MS   Network
<div align="center">REGISTER</div>

-->
<div align="center">Facility (Invoke = InterrogateSS (SS-Code))</div>

<div align="center">RELEASE COMPLETE</div>
<--
<div align="center">Facility (Return result = InterrogateSS (BasicServiceCode))</div>

<div align="center">or</div>

<div align="center">RELEASE COMPLETE</div>
<--
<div align="center">Facility (Return result = InterrogateSS (SS-Status))</div>

<div align="center">RELEASE COMPLETE</div>
<- -
<div align="center">Facility (Return error (Error))</div>

<div align="center">RELEASE COMPLETE</div>
<- -
<div align="center">Facility (Reject (Invoke_problem))</div>
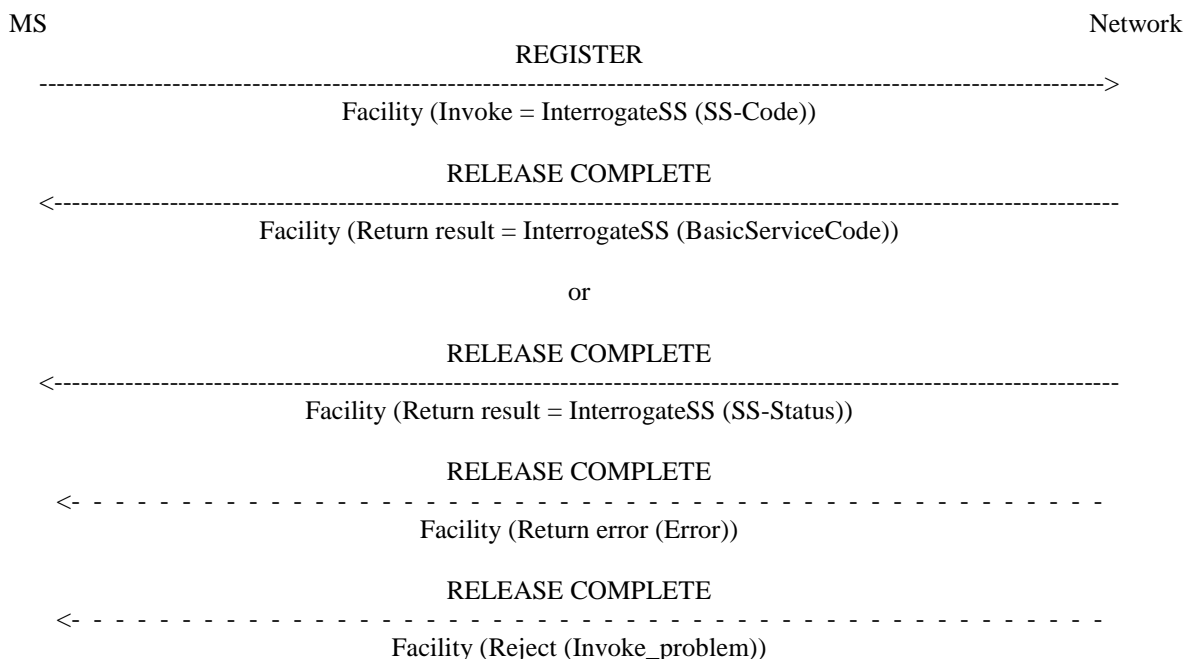
NOTE: The SS-Code may be one of the specific outgoing barring codes.

<div align="center">**Figure 1.4: Interrogation of a barring program**</div>

1.6 Invocation and erasure

Invocation and erasure are not applicable to barring programs.

1.7 Cross phase compatibility

1.7.1 Network only supports GSM Phase 1 control of SS by the subscriber

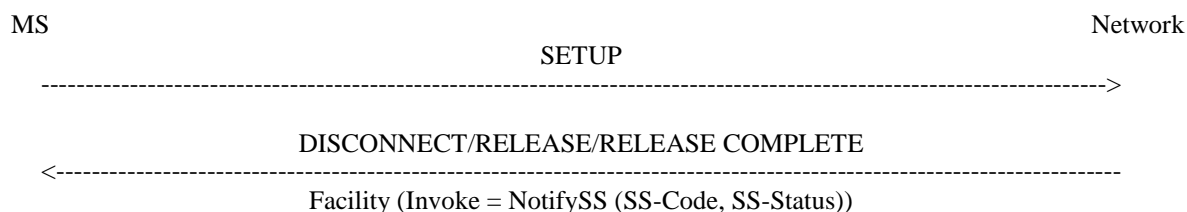In this case there is no relevant cross phase compatibility problem.

1.7.2 MS only supports protocol version 1 control of SS by the subscriber

In this case there is no relevant cross phase compatibility problem.

2 Barring of incoming calls

2.1 Normal operation

When a barring program relating to incoming calls is active and operative for a basic service, each incoming call set-up related to that basic service and not allowed by the barring program will be refused by the network. In this case a NotifySS operation containing the SS-Status indicating that a barring program relating to incoming calls is currently active and operative will be sent to the calling mobile subscriber in a clearing message (see figure 2.1).

```
MS                                                                              Network
                                    SETUP
    ---------------------------------------------------------------------------------------------->

                    DISCONNECT/RELEASE/RELEASE COMPLETE
    <--------------------------------------------------------------------------------------------
                    Facility (Invoke = NotifySS (SS-Code, SS-Status))
```

NOTE: The SS-Code will be the common code for incoming barring services.

**Figure 2.1: Notification to the calling mobile subscriber that at the called
subscriber side barring is active**

When barring of incoming calls is active (operative or quiescent), the ability of the served mobile subscriber to originate calls is not affected.

2.2 Registration

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the subscriber has to register a call barring password at provision time. Furthermore the served mobile subscriber can change the call barring password by a registration procedure at any time.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to register a new call barring password will be denied.

The procedure to register a new password is specified in GSM 04.10.

2.3 Activation

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the supplementary service is activated for a basic service if the subscriber has requested so by means of an activation procedure for that basic service. If the subscriber does not indicate a specific basic service,

the activation applies to all basic services. The subscriber may use the call barring password at activation (see figure 2.2).

If the activation is successful, the service will be activated. The network will then send a return result indicating acceptance of the request. The result is formatted according to the options shown below:

- The result includes the Basic Service group Code(s) to which the service is activated. The result may also contain an SS-Code and SS-Status parameter. If the MS does not send an SS Version Indicator in the invocation request then these parameters shall be presented in the result. If the MS does send an SS Version Indicator in the invocation request then these parameters are optional in the result. If the SS-Status is included the network shall set it to reflect the state of the service. If the SS-Code is included then it shall contain the SS-Code of the service which has been activated. The MS shall ignore the contents of the SS-Code and SS-Status parameters if they are received.

Note that the use of SS-Code and SS-Status is to provide backwards compatibility with GSM Phase 1.

- If the request did not include a BasicServiceCode, and the activation was successful for all basic services, the network may send an empty return result to the MS. This option applies whether or not an SS Version Indicator is received from the MS.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to activate the service will be denied and the served mobile subscriber receives an error indication (see figure 2.2).

Error values are specified in GSM 04.80.

```
MS                                                                                    Network
                                    REGISTER
 -------------------------------------------------------------------------------------------->
                    Facility (Invoke = ActivateSS (SS-Code, BasicServiceCode))

        ┌─────────────────────────────────────────────────────────────────────┐
        │                                                                       │
        │               Password procedure according to GSM 04.10               │
        │                                                                       │
        └─────────────────────────────────────────────────────────────────────┘

                                RELEASE COMPLETE
 <-------------------------------------------------------------------------------------------
            Facility (Return result = ActivateSS (SS-Code, BasicServiceCode, SS-Status))

                                RELEASE COMPLETE
   <- - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
                            Facility (Return error (Error))

                                RELEASE COMPLETE
   <- - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
                            Facility (Reject (Invoke_problem))
```

NOTE: The SS-Code will be one of the specific incoming barring codes. If BasicServiceCode is not included it applies to all basic services. The SS-Code and SS-Status may not be included in the result in all cases (see text).

Figure 2.2: Activation of a barring program

2.4 Deactivation

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by subscriber using password", the supplementary service is deactivated for a basic service if the subscriber has requested deactivation by means of a deactivation procedure for that basic service. The subscriber may use the call barring password at deactivation (see figure 2.3).

If the deactivation is successful, the service will be deactivated. The network will then send a return result indicating acceptance of the request. The result is formatted according to the options shown below:
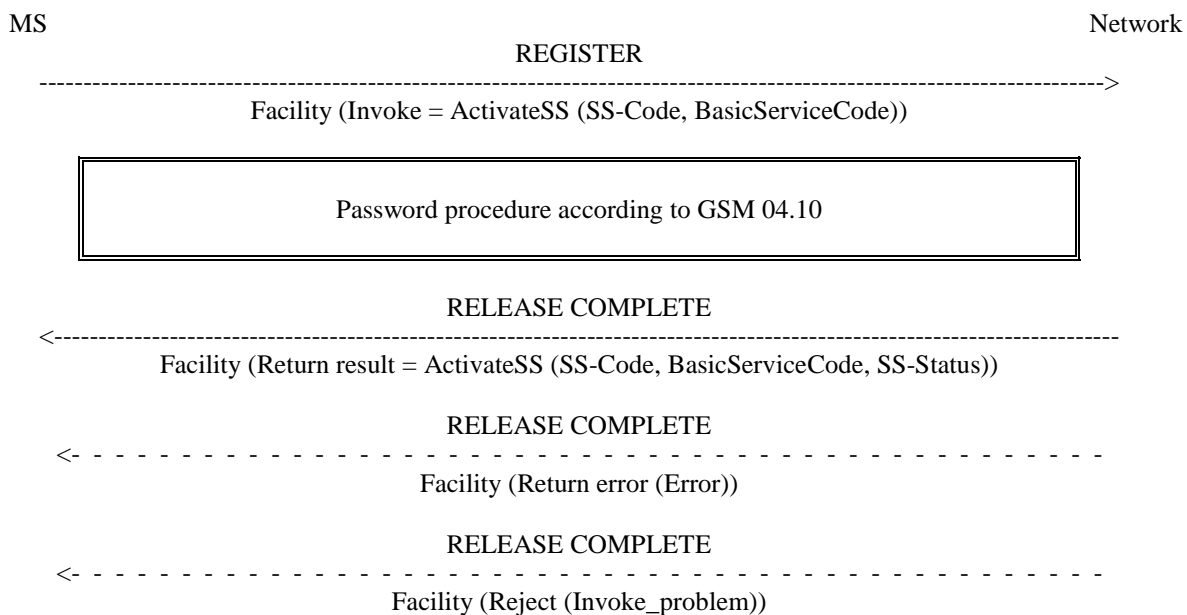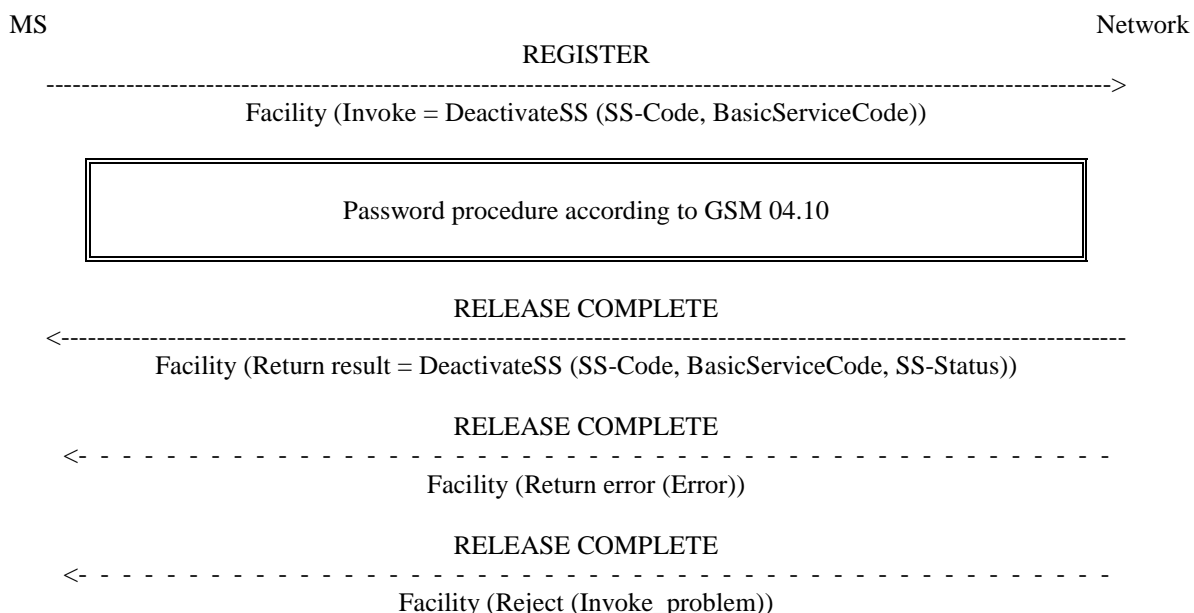
- The result includes the Basic Service group Code(s) to which the service is deactivated. The result may also contain an SS-Code and SS-Status parameter. If the MS does not send an SS Version Indicator in the invocation request then these parameters shall be presented in the result. If the MS does send an SS Version Indicator in the invocation request then these parameters are optional in the result. If the SS-Status is included the network shall set it to reflect the state of the service. If the SS-Code is included then it shall contain the SS-Code of the service which has been deactivated. The MS shall ignore the contents of the SS-Code and SS-Status parameters if they are received.

Note that the use of SS-Code and SS-Status is to provide backwards compatibility with GSM Phase 1.

- If the request did not include a BasicServiceCode, and the deactivation was successful for all basic services, the network may send an empty return result to the MS. This option applies whether or not an SS Version Indicator is received from the MS.

If the served mobile subscriber at provision time has selected the subscription option "control of barring service: by service provider", an attempt to deactivate the supplementary service will be denied and the served mobile subscriber receives an error indication (see figure 2.3).

Error values are specified in GSM 04.80.

MS   Network
                                        REGISTER
--->
                    Facility (Invoke = DeactivateSS (SS-Code, BasicServiceCode))

```
┌─────────────────────────────────────────────────────────────────────────┐
│                                                                           │
│                  Password procedure according to GSM 04.10                │
│                                                                           │
└─────────────────────────────────────────────────────────────────────────┘
```

                                   RELEASE COMPLETE
<--
               Facility (Return result = DeactivateSS (SS-Code, BasicServiceCode, SS-Status))

                                   RELEASE COMPLETE
<- -
                             Facility (Return error (Error))

                                   RELEASE COMPLETE
<- -
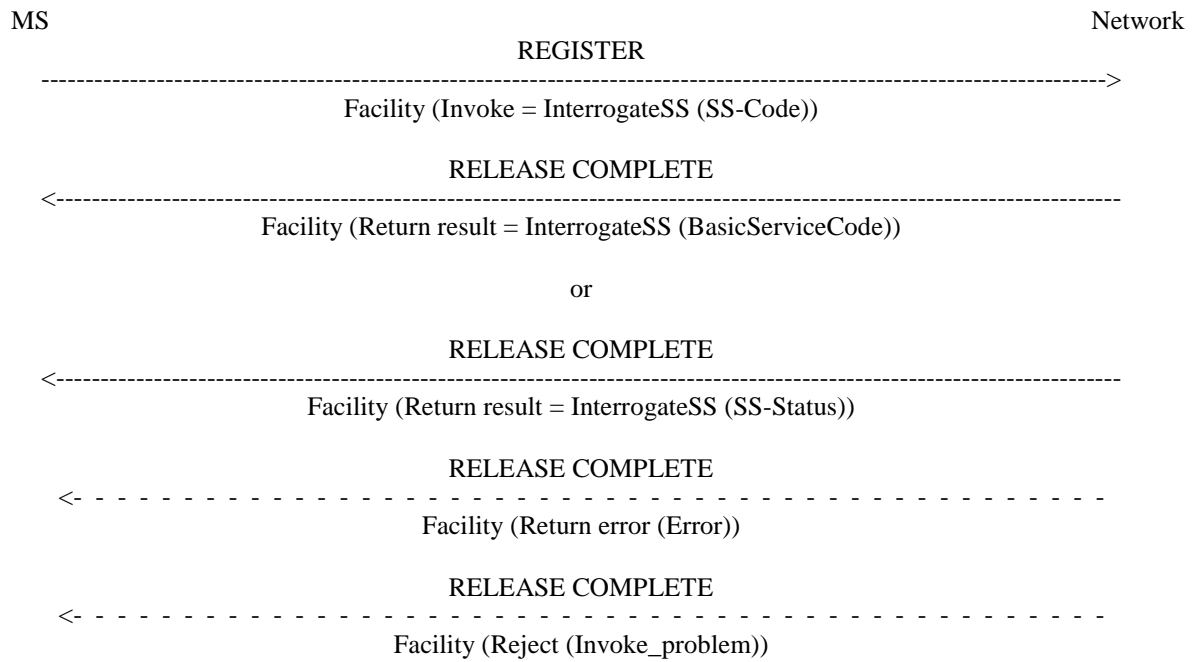   Facility (Reject (Invoke_problem))

NOTE: The SS-Code may be one of the specific incoming barring codes, the common code for the incoming
         barring services, or the SS-Code for all call barring services. If BasicServiceCode is not included it applies
         to all basic services. The SS-Code and SS-Status may not be included in the result in all cases (see text).

Figure 2.3: Deactivation of barring of incoming calls

2.5   Interrogation

The interrogation procedure enables the mobile subscriber to obtain information about the data stored in the PLMN. After having requested this procedure the network shall return a list of all basic service groups for which the service is active (see figure 2.4).

If there is no basic service group for which the service is active, an SS-Status will be returned indicating that the service is "deactivated".

MS   Network

REGISTER

--->

Facility (Invoke = InterrogateSS (SS-Code))

RELEASE COMPLETE

<--

Facility (Return result = InterrogateSS (BasicServiceCode))

or

RELEASE COMPLETE

<--

Facility (Return result = InterrogateSS (SS-Status))

RELEASE COMPLETE

<- -

Facility (Return error (Error))

RELEASE COMPLETE

<- -

Facility (Reject (Invoke_problem))

NOTE: The SS-Code may be one of the specific incoming barring codes.

Figure 2.4: Interrogation of a barring program

2.6   Invocation and erasure

Invocation and erasure are not applicable to barring programs.

2.7   Cross phase compatibility

2.7.1   Network only supports GSM Phase 1 control of SS by the subscriber

In this case there is no relevant cross phase compatibility problem.

2.7.2   MS only supports protocol version 1 control of SS by the subscriber

The NotifySS operation containing the SS-Status indicating that a barring program relating to incoming calls is currently active and operative shall be sent to the calling subscriber only in the RELEASE COMPLETE message, if the MS only supports GSM Phase 1.

Annex A (informative): Change history

Change history						
TSG CN#	**Spec**	**Version**	**CR**	**<Phase>**	**New Version**	**Subject/Comment**
Apr 1999	GSM 04.88	6.0.1				Transferred to 3GPP CN1
CN#03	24.088			R99	3.0.0	Approved at CN#03
CN#11	24.088	3.0.0		Rel-4	4.0.0	Approved at CN#11

History

Document history		
V4.0.0	March 2001	Publication