

# EUROPEAN TELECOMMUNICATION STANDARD

**DRAFT** pr **ETS 300 971** 

December 1996

Source: ETSI TC-SMG Reference: DE/SMG-110622Q

ICS: 33.020

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



Digital cellular telecommunications system;

Half rate speech;

Comfort noise aspects for the half rate

speech traffic channels

(GSM 06.22 version 5.0.0)

## **ETSI**

European Telecommunications Standards Institute

## **ETSI Secretariat**


Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

**X.400:** c=fr, a=atlas, p=etsi, s=secretariat - Internet: secretariat@etsi.fr

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

**Copyright Notification:** No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

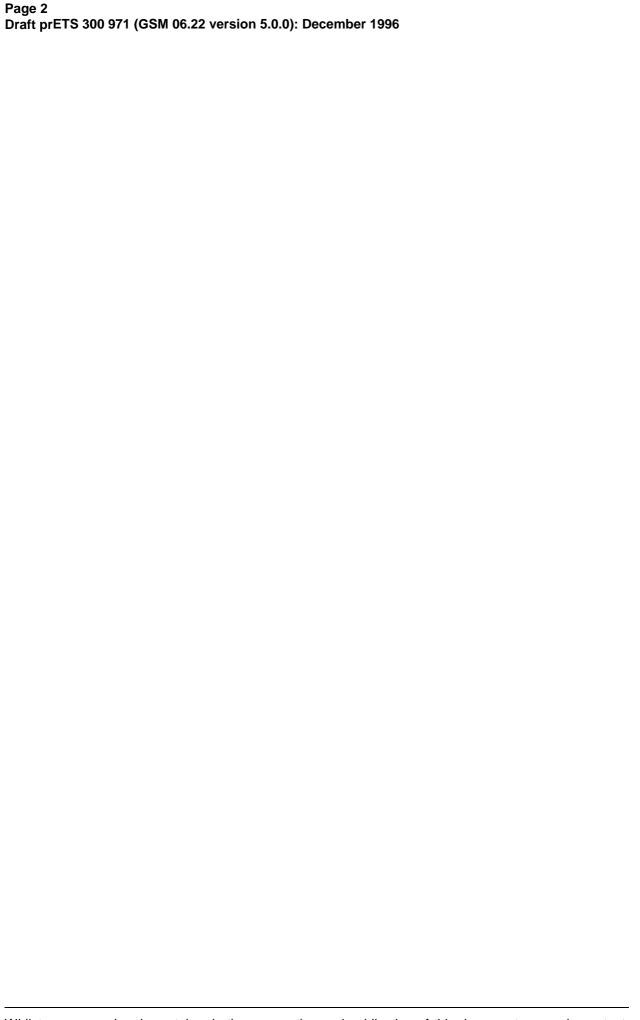

Whilst every care has been taken in the preparation and publication of this document, errors in content, typographical or otherwise, may occur. If you have comments concerning its accuracy, please write to "ETSI Editing and Committee Support Dept." at the address shown on the title page.

## Contents

Fore	eword	
1	Scope	7
2	Normative references	7
3	Definitions, symbols and abbraviations	-
3	Definitions, symbols and abbreviations	
	3.2 Symbols	
	3.3 ADDIEVIALIOTIS	
4	General	8
5	Functions on the transmit (TX) side	
	5.1 Background acoustic noise evaluation	9
	5.2 Modification of the speech encoding algorithm during SID frame generation	10
	5.3 SID-frame encoding	11
6	Functions on the receive (RX) side	15
	6.1 Averaging of the GS parameters	12
	6.2 Comfort noise generation and updating	
	0.2 Comor noise generation and updating	
7	Computational details	13
Histo	tory	14

Page 4 Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

Blank page

## **Foreword**

This draft European Telecommunication Standard (ETS) has been produced by the Special Mobile Group (SMG) Technical Committee of the European Telecommunications Standards Institute (ETSI) and is now submitted for the Unified Approval Procedure of the ETSI standards approval procedure.

This ETS gives the detailed requirements for the correct operation of the background acoustic noise evaluation, noise parameter encoding/decoding and comfort noise generation within the digital cellular telecommunications system. This ETS is a GSM technical specification version 5 and is part of the 1996 release of the GSM Technical Specifications. This draft ETS is part of ETSs series covering the half rate speech traffic channels as described below:

GSM 06.02	ETS 300 966: "Digital cellular telecommunications system; Half rate speech; Half rate speech processing functions".
GSM 06.06	ETS 300 967: "Digital cellular telecommunications system; Half rate speech; ANSI-C code for the GSM half rate speech codec".
GSM 06.07	ETS 300 968: "Digital cellular telecommunications system; Half rate speech; Test sequences for the GSM half rate speech codec".
GSM 06.20	ETS 300 969: "Digital cellular telecommunications system; Half rate speech; Half rate speech transcoding".
GSM 06.21	ETS 300 970: "Digital cellular telecommunications system; Half rate speech; Substitution and muting of lost frames for half rate speech traffic channels".
GSM 06.22	ETS 300 971: "Digital cellular telecommunications system; Half rate speech; Comfort noise aspects for half rate speech traffic channels".
GSM 06.41	ETS 300 972: "Digital cellular telecommunications system; Half rate speech; Discontinuous Transmission (DTX) for half rate speech traffic channels".
GSM 06.42	ETS 300 973: "Digital cellular telecommunications system; Half rate speech; Voice Activity Detector (VAD) for half rate speech traffic channels".

Proposed transposition dates				
Date of latest announcement of this ETS (doa):	3 months after ETSI publication			
Date of latest publication of new National Standard or endorsement of this ETS (dop/e):	6 months after doa			
Date of withdrawal of any conflicting National Standard (dow):	6 months after doa			

Page 6 Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

Blank page

## 1 Scope

This European Telecommunication Standard (ETS) gives the detailed requirements for the correct operation of the background acoustic noise evaluation, noise parameter encoding/decoding and comfort noise generation in GSM Mobile Stations (MS)s and Base Station Systems (BSS)s during Discontinuous Transmission (DTX) on half rate speech traffic channels.

The requirements described in this ETS are mandatory for implementation in all GSM MSs capable of supporting the half rate speech traffic channel.

The receiver requirements are mandatory for implementation in all GSM BSSs capable of supporting the half rate speech traffic channel, the transmitter requirements are only for those where downlink DTX will be used.

## 2 Normative references

This ETS incorporates by dated and undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this ETS only when incorporated in it by amendment or revision. For undated references, the latest edition of the publication referred to applies.

[1]	GSM 01.04 (ETR 350): "Digital cellular telecommunication system (Phase 2+); Abbreviations and acronyms".
[2]	GSM 06.20 (ETS 300 969): "Digital cellular telecommunications system; Half rate speech transcoding".
[3]	GSM 06.41 (ETS 300 972): "Digital cellular telecommunications system; Half rate speech; Discontinuous Transmission (DTX) for half rate speech traffic channels".
[4]	GSM 06.42 (ETS 300 973): "Digital cellular telecommunications system; "Half rate speech; Voice Activity Detector (VAD) for half rate speech traffic channels".
[5]	GSM 06.06 (ETS 300 967): "Digital cellular telecommunications system; Half rate speech; ANSI-C code for the GSM half rate speech codec".

## 3 Definitions, symbols and abbreviations

## 3.1 Definitions

For the purpose of this ETS, the following definitions apply:

**frame:** Time interval of 20 ms corresponding to the time segmentation of the half rate speech transcoder, also used as a short term for a traffic frame.

H(Z): Combination of the short term (spectral) filter A(z) and the spectral weighting filter W(z).

**SID codeword:** Fixed bit pattern for labelling a traffic frame as a SID frame.

**SID field:** The bit positions of the SID codeword within a SID frame.

**SID frame**: Rame characterized by the SID (Silence Descriptor) codeword. It conveys information on the acoustic background noise.

**SP flag:** SPeech flag.

**speech frame:** Traffic frame that cannot be classified as a SID frame.

VAD flag: Voice Activity Detector flag.

### Page 8

## Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

W(Z): Spectral weighting filter of the GSM half rate speech codec.

Other definitions of terms used in this ETS can be found in GSM 06.20 (ETS 300 969) [2] and GSM 06.41 (ETS 300 972) [3]. The overall operation of DTX is described in GSM 06.41 (ETS 300 972) [3].

#### 3.2 **Symbols**

For the purpose of this ETS, the following symbols apply:

GS Energy tweak parameter. Frame energy value. R0

R(i) Unquantised (normalized) autocorrelation sequence.

Optimal reflection coefficient.

SUM(x(n))= x(a) + x(a+1) + .... + x(b-1) + x(b); (Accumulation).

n=a

GSP0 codeword Vector quantization index, joint vector quantization of the parameters GS and

PΩ

PΩ Power contribution of the first excitation vector as a fraction of the total

excitation power at a subframe.

#### 3.3 **Abbreviations**

For the purpose of this ETS, the following abbreviations apply:

**AFLAT** Autocorrelation Fixed Point LAttice Technique (used in the GSM half rate

speech codec for the vector quantization of the LPC coefficients)

**BSS** Base Station System

DTX Discontinuous Transmission

**ETS** European Telecommunication Standard Global System for Mobile communications **GSM** 

MS Mobile Station SID Sllence Descriptor

RXReceive Transmit TX

VAD Voice Activity Detector VQ **Vector Quantization** 

For abbreviations not given in this subclause, see GSM 01.04 (ETR 350) [1].

#### 4 General

A problem when using DTX is that the background acoustic noise, which is transmitted together with the speech, would disappear when the radio transmission is switched off, resulting in a modulation of the background noise. Since the DTX switching can take place rapidly, it has been found that this effect may be annoying for the listener, especially in a car environment with high background noise levels. In bad cases, the speech may be hardly intelligible.

This ETS specifies a solution to overcome this problem by generating synthetic noise similar to the transmit (TX) side background noise on the receive (RX) side. The comfort noise parameters are estimated on the TX side and transmitted to the RX side before the radio transmission is switched off and at a regular low rate afterwards. This allows the comfort noise to adapt to the changes of the noise on the TX side.

## 5 Functions on the transmit (TX) side

The comfort noise evaluation algorithm uses the following parameters of the GSM half rate speech encoder, defined in GSM 06.20 (ETS 300 969) [2]:

- the unquantized frame energy value R0;
- the unquantized (normalized) autocorrelation sequence R(i) derived from the optimal reflection coefficients r<sub>i</sub>;
- the quantized energy tweak parameter GS.

These parameters give information on the level (R0 and GS) and the spectrum (R(i)) of the background noise.

Two of the evaluated comfort noise parameters (R0 and R(i)) are encoded into a special frame, called a Sllence Descriptor (SID) frame, for transmission to the RX side. While the energy tweak parameter GS can be evaluated in the encoder and decoder in the same way as given in subclause 5.1, therefore no transmission of GS is necessary.

The SID frame also serves to initiate the comfort noise generation on the RX side, as a SID frame is always sent at the end of a speech burst, i.e. before the radio transmission is terminated.

The scheduling of SID or speech frames on the radio path is described in GSM 06.41 (ETS 300 972) [3].

## 5.1 Background acoustic noise evaluation

The comfort noise parameters to be encoded into a SID frame are calculated over 8 consecutive frames marked with Voice Activated Detector (VAD) flag = "0", as follows:

The frame energy values shall be averaged according to the equation:

```
 \begin{array}{c} 7 \\ \text{mean (R0[j])} = 1/8 \text{ SUM R0[j-n];} \\ \text{n=0} \\ \\ \text{where:} \\ \\ \text{R0[j]} \qquad \text{is the frame energy value of the current frame j (n=0);} \\ \text{R0[j-n]} \qquad \text{is the frame energy of the previous frames (n=1,...,7);} \\ \text{n} \qquad \text{is the averaging period index n=0,1,...,7;} \\ \text{j} \qquad \text{is the frame index.} \\ \end{array}
```

is the frame index.

The averaged value mean(R0[j]) is encoded using the same encoding table that is also used by the GSM half rate speech codec for the encoding of the non-averaged R0 values in ordinary speech encoding mode.

The (normalized) autocorrelation sequence R(i) shall be averaged according to the equation:

```
\label{eq:mean} \begin{tabular}{ll} mean $(R[j](i)) = 1/8$ SUM $R[j-n](i)$ & $i = 0,1,2...,10$; \\ & n=0 \end{tabular} where: \begin{tabular}{ll} R[j](i) & is the i'th autocorrelation value of the current frame $j$ (n=0); \\ R[j-n](i) & is the i'th autocorrelation value of one of the previous frames (n=1,...,7); \\ n & is the averaging period index $n=0,1...,7$; \end{tabular}
```

The averaged values mean(R[j](i)) are used as input parameters of the Autocorrelation Fixed Point LAttice Technique (AFLAT) recursion algorithm which calculates the Vector Quantization (VQ) indices of the reflection coefficients, see GSM 06.20 (ETS 300 969) [2].

## Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

The SID frame containing the quantization index of mean(R0[j]), the VQ indices of mean(R[j](i)) and the SID codeword is passed to the radio subsystem instead of frame number j (see subclause 5.3, SID-frame encoding).

The averaging of the energy tweak parameters GS is made on the basis of the quantized GS parameters. The quantized GS parameters can be derived from the GSP0 indices. These indices are used as pointers to the GSP0 vector quantization codebook. The GS components of the selected GSP0 vectors are the quantized GS values which will be averaged.

The quantized energy tweak parameters GS shall be averaged according to the equation:

where:

```
 \begin{aligned} &GS[j](i) & \text{is the quantized energy tweak parameter in subframe i of the current frame j} \\ & (n=0); \\ &GS[j-n](i) & \text{is the quantized energy tweak parameter in subframe i of one of the last frames} \\ & (n=1,...7); \\ &n & \text{is the averaging period index n=1,2,...,7;} \\ &i & \text{is the subframe index i=1,2,3,4;} \\ &j & \text{is the frame index.} \end{aligned}
```

NOTE: The averaging of GS is made over 7 frames only.

For each comfort noise insertion period, the averaging of the GS parameters is done only once before sending the first SID frame to the decoder and for the rest of the comfort noise insertion period, the averaged value mean(GS[j]) will be frozen.

Under normal conditions, the averaging of the GS parameters is done during the hangover period, but in case of short speech bursts handling, the hangover period can be skipped under certain conditions, see GSM 06.41 (ETS 300 972) [3]. In such cases, the GS parameters of the last seven speech frames marked with SP flag="1" are averaged.

The hangover period is defined in GSM 06.41 (ETS 300 972) [3]. It is a period added at the end of a speech burst in which no voice activity is detected (VAD flag="0"), but the speech encoder stays for the processing of 7 speech frames in speech encoding mode (SP flag= "1"). This hangover period and the first SID frame are used for averaging the comfort noise parameters contained in the first SID frame.

mean(GS[j]) can be evaluated at the decoder in the same way as in the encoder, because in both the encoder and decoder, the GSP0 indexes of the last 7 speech frames shall be kept in memory. In case of an error free transmission, the GSP0 indexes are identical at the encoder and decoder.

## 5.2 Modification of the speech encoding algorithm during SID frame generation

When the SP flag is equal to "0", the speech encoding algorithm is modified in the following way:

- the non-averaged reflection coefficients which are used to derive the filter coefficients of the filters H(z) and W(z) of the speech encoder are not quantized;
- the unvoiced speech encoding mode is forced. This simplifies the open loop long term prediction processing: only the integer lags have to be calculated, no determination of fractional lags is necessary and the frame lag trajectory derivation can be avoided;
- no fixed codebook search is made. In each subframe, the indices of both fixed codebooks (CODE1\_1, ...,CODE1\_4 and CODE2\_1, ...,CODE2\_4) are replaced by pseudo random numbers uniformly distributed in [0,127] (7 bit random numbers);

- no GSP0 determination is made. The GSP0 codeword is selected as follows:
  - at the beginning of a comfort noise insertion period, mean(GS[j]) is calculated as defined in subclause 5.1. Then mean(GS[j]) is quantized, using only the GS component of the GSP0 vector quantization codebook of the unvoiced speech encoding mode as quantization table. The P0 parameter is not averaged. For this parameter, the value is used which is associated with the quantized mean(GS[j]) value in the GSP0 codebook of the unvoiced speech encoding mode. For the rest of the comfort noise insertion period, the GSP0 indices are frozen.

A simplified block diagram of the GSM half rate speech encoder in comfort noise insertion mode is shown in figure 1.

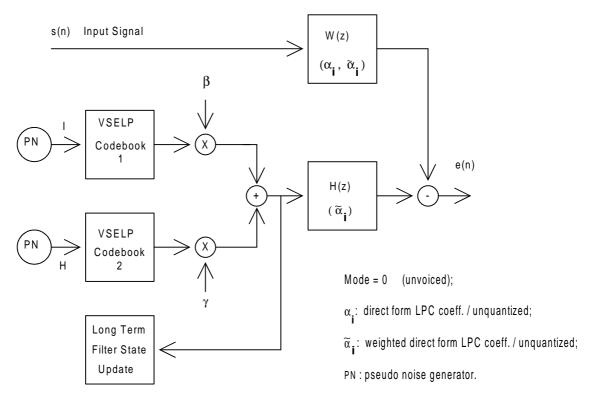


Figure 1: GSM half rate speech encoder in comfort noise insertion mode

## 5.3 SID-frame encoding

The SID frame encoding algorithm exploits the fact that only some of the 112 bits in a frame are needed to code the comfort noise parameters. The other bits can then be used to mark the SID frame by means of a fixed bit pattern, called the SID codeword.

SID frames are encoded in the encoder output format for voiced frames (MODE = 3), because the two voicing mode bits are part of the SID codeword.

The index of the frame energy value R0 is replaced by the quantization index derived from mean(R0[j]). mean(R0[j]) is defined in subclause 5.1 and is encoded as described in GSM 06.20 (ETS 300 969) [2].

The VQ indices of the reflection coefficients are replaced by VQ indices derived from mean(R[j](i)). mean(R[j](i)) is defined in subclause 5.1 and the VQ of the reflection coefficients is described in GSM 06.20 (ETS 300 969) [2].

## Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

The SID codeword consists of 79 bits which are all "1". To mark a frame as a SID frame, the parameters in table 1 have to be set as shown.

**Parameter Number of bits** Value (Hex) MODE 0x0003 2 INT\_LPC 1 0x0001 8 0x00ff LAG\_1 LAG 2 4 0x000f LAG 3 4 0x000f LAG 4 4 0x000f CODE 1 9 0x01ff CODE\_2 9 0x01ff CODE\_3 9 0x01ff CODE\_4 9 0x01ff GSP0 1 5 0x001f GSP0\_2 5 0x001f GSP0 3 0x001f 5 GSP0 4 5 0x001f

Table 1: SID codeword

The parameters in table 1 are defined in GSM 06.20 (ETS 300 969) [2].

## 6 Functions on the receive (RX) side

The situations in which comfort noise shall be generated on the RX side are defined in GSM 06.41 (ETS 300 972) [3] and may be started or updated whenever a valid SID frame is received.

## 6.1 Averaging of the GS parameters

When speech frames are received by the decoder, the GS parameters of the last seven speech frames shall be kept in memory. As soon as a SID frame is received, these stored GS parameters shall be averaged. The averaged GS value will be frozen and used for the actual comfort noise insertion period.

The averaging procedure works as follows:

- when a speech frame is received, the GSP0 indices are decoded and the decoded GS parts of these parameters are stored in memory;
- when the first SID frame is received, the stored GS values are averaged in the same way as in the speech encoder as follows (see also subclause 5.1):

where:

```
GS[j](i) is the quantized energy tweak parameter in subframe i of the current frame j;
GS[j-n](i) is the quantized energy tweak parameter in subframe i of one of the last frames;
is the averaging period index n=1,2,...,7;
is the subframe index i=1,2,3,4;
is the frame index;
```

then mean(GS[j]) is quantized, using the GS component of the GSP0 vector quantization codebook for the unvoiced speech encoding mode as quantization table. The resulting index of this quantization is used for one complete comfort noise insertion period as GSP0 codeword. The P0 parameter is not averaged. For this parameter, the value is used which is associated with the quantized mean(GS[j]) value in the GSP0 codebook of the unvoiced speech encoding mode.

## 6.2 Comfort noise generation and updating

The comfort noise generation procedure uses the GSM half rate speech decoder algorithm defined in GSM 06.20 (ETS 300 969) [2].

When comfort noise is to be generated, then the various encoded parameters are set as in table 2.

Table 2: Comfort noise encoded parameters

Parameter	r Value	
MODE	0	
R0	interpolation of the values received in the last two valid SID frames	
LPC1	interpolation of the values received in the	
LPC2	last two valid SID frames	
LPC3		
INT_LPC	1	
CODE1_1	pseudo random numbers uniformly	
CODE1_2	distributed in [0,127] (7 bit numbers)	
CODE1_3		
CODE1_4		
CODE2_1		
CODE2_2		
CODE2_3		
CODE2_4		
GSP0_1	index of the averaged GS parameter	
GSP0_2	(calculated at the beginning of each	
GSP0_3	comfort noise insertion period and frozen	
GSP0_4	for the rest of the period)	

With these parameters, the speech decoder now performs the standard operations described in GSM 06.20 (ETS 300 969) [2] and thereby synthesizes comfort noise.

Updating of the comfort noise parameters (frame energy and LPC coefficients) occurs each time a valid SID frame is received, as described in GSM 06.41 (ETS 300 972) [3].

NOTE: The GSP0 codewords are not updated, they are frozen during each comfort noise insertion period.

When updating the comfort noise parameters (frame energy and LPC coefficients), these parameters shall be interpolated over the SID update period to obtain smooth transitions.

## 7 Computational details

A low level description has been prepared in form of an ANSI C source code which is part of GSM 06.06 (ETS 300 967) [5].

Page 14 Draft prETS 300 971 (GSM 06.22 version 5.0.0): December 1996

# History

Document history						
December 1996	Unified Approval Procedure	UAP 60:	1996-12-02 to 1997-03-28			