
ETSI TS 101 086 V8.0.0 (2002-12)

Technical Specification

Digital cellular telecommunications system (Phase 2+); SIM test specification (3GPP TS 11.17 version 8.0.0 Release 1999)

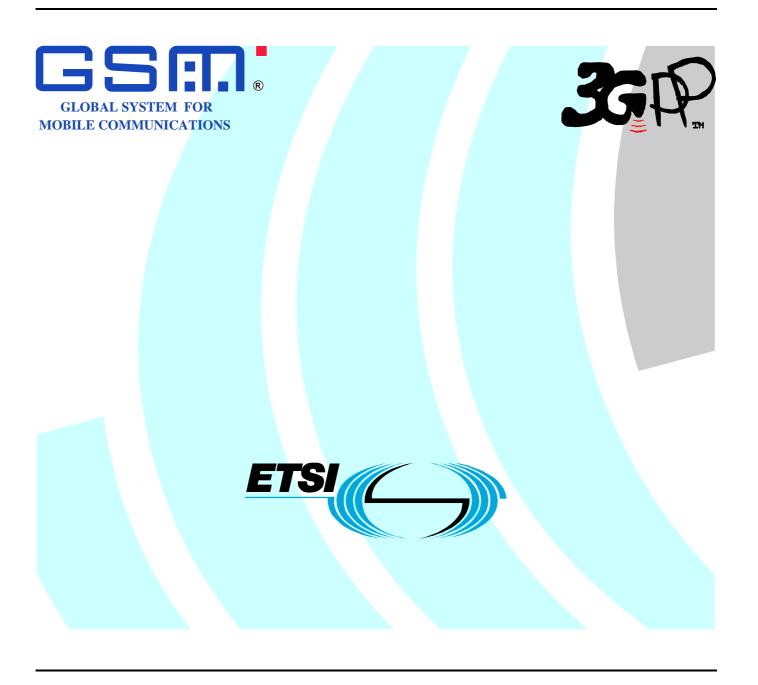

Reference
RTS/TSGT-031117v800

Keywords
GSM

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, send your comment to: editor@etsi.org

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2002. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

All published ETSI deliverables shall include information which directs the reader to the above source of information.

Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Contents

Intelle	ectual Property Rights	2
Forew	ord	2
Forew	ord	9
1	Scope	10
2	References	10
2.1	Normative references	10
2.2	Informative references	10
3	Definitions and abbreviations	11
3.1	Definitions	
3.2	Abbreviations	
4	Test environment	12
4.1	Test equipment	12
4.1.1	ME simulator	12
4.1.2	Signal generation device	12
4.1.2.1		
4.1.2.2	RST	12
4.1.2.3	CLK	12
4.1.2.4		
4.1.3	Precision force-inducing contacting device	
4.1.4	Temperature controllable environment	
4.1.5	Temperature measuring device	
4.1.6	Voltage measuring device	
4.1.7	Precision measuring device	
4.1.8	Current measuring device	
4.1.9	Timing Measurements on contact IO	
4.2	IUT default conditions	
4.3	Default data formatting	
4.4	Test definition and applicability	
4.5	Test procedure	
4.6	Test requirement	
5	Test Group Hierarchy	15
5.1	Test groups under SIM	15
5.2	Test groups under PHY	16
5.3	Test groups under ELEC	16
5.4	Test groups under LOG	17
5.5	Test groups under SEC	17
5.6	Test groups under FN	18
5.7	Test groups under CMD	18
5.8	Test groups under CEF	18
5.9	Test groups under APP	19
	Test Procedure	
6.1	Physical characteristics	
6.1.1	Format and layout	
6.1.1.1		
6.1.1.1		
6.1.1.1	1	19
6.1.1.1	1 1	20
6.1.1.1	.4 Method of test	20
6.1.1.2	· · · · · · · · · · · · · · · · · · ·	
6.1.1.2		
6.1.1.2	1	
6.1.1.2	Test purpose	21

6.1.1.2.4	Method of test	
6.1.2	Temperature range for card operation	
6.1.2.1	Definition and applicability	21
6.1.2.2	Conformance requirement	21
6.1.2.3	Test purpose	22
6.1.2.4	Method of test	22
6.1.3	Contacts	22
6.1.3.1	Definition and applicability	22
6.1.3.2	Conformance requirement	
6.1.3.3	Test purpose	
6.1.3.4	Method of test	
6.2	Electronic signals and transmission protocols	
6.2.1	Supply voltage Vcc (contact C1)	
6.2.1.1	Voltage limits	
6.2.1.1.1	Definition and applicability	
6.2.1.1.2	Conformance requirement	
6.2.1.1.3	Test purpose	
6.2.1.1.4	Method of test	
6.2.1.1.4	Current limits	
6.2.1.2.1	Definition and applicability	
6.2.1.2.2	Conformance requirement	
6.2.1.2.3	Test purpose	
6.2.1.2.4	Method of test	
6.2.1.3	Idle current limits	
6.2.1.3.1	Definition and applicability	
6.2.1.3.2	Conformance requirement	
6.2.1.3.3	Test purpose	
6.2.1.3.4	Method of test	
6.2.1.3.5	Test requirement	
6.2.1.4	Current limits at all frequencies	27
6.2.1.4.1	Definition and applicability	27
6.2.1.4.2	Conformance requirement	27
6.2.1.4.3	Test purpose	27
6.2.1.4.4	Method of test	27
6.2.1.5	Current limits in clk-stop-mode	28
6.2.1.5.1	Definition and applicability	
6.2.1.5.2	Conformance requirement	
6.2.1.5.3	Test purpose	
6.2.1.5.4	Method of test	
6.2.2	Reset RST (contact C2)	
6.2.2.1	Static operation	
6.2.2.1.1	Definition and applicability	
6.2.2.1.2	Conformance requirement	
6.2.2.1.3	Test purpose	
6.2.2.1.4	Method of test	
6.2.3		
	Clock CLK (contact C3)	
6.2.3.1	Frequency and duty cycle	
6.2.3.1.1	Definition and applicability	
6.2.3.1.2	Conformance requirement	
6.2.3.1.3	Test purpose	
6.2.3.1.4	Method of test	
6.2.3.2	Voltage and current	
6.2.3.2.1	Definition and applicability	
6.2.3.2.2	Conformance requirement	
6.2.3.2.3	Test purpose	
6.2.3.2.4	Method of test	
6.2.4	I/O (contact C7)	
6.2.4.1	Voltage and current	33
6.2.4.1.1	Definition and applicability	33
6.2.4.1.2	Conformance requirement	33
6.2.4.1.3	Test purpose	33
6.2.4.1.4	Method of test	

6.2.5	States	34
6.2.5.1	Definition and applicability	34
6.2.5.2	Conformance requirement	34
6.2.5.3	Test purpose	35
6.2.5.4	Method of test	35
6.2.6	Answer To Reset (ATR)	35
6.2.6.1	ATR content	35
6.2.6.1.1	Definition and applicability	35
6.2.6.1.2	Conformance requirement	
6.2.6.1.3	Test purpose	
6.2.6.1.4	Method of test	
6.2.6.2	PTS procedure	
6.2.6.2.1	Definition and applicability	
6.2.6.2.2	Conformance requirement	37
6.2.6.2.3	Test purpose	
6.2.6.2.4	Method of test	
6.2.7	Major Capabilities	
6.2.7.1	Definition and applicability	
6.2.7.2	Conformance requirement	
6.2.7.3	Test purpose	
6.2.7.4	Method of test	
6.2.7.5	Test requirement	
6.3	Logical Model	
6.3.1	File identifier	
6.3.1.1	File-type identification	38
6.3.1.1.1	Definition and applicability	
6.3.1.1.2	Conformance requirement	
6.3.1.1.3	Test purpose	
6.3.1.1.4	Method of test	
6.3.1.2	File ID assignments	
6.3.1.2.1	Definition and applicability	
6.3.1.2.2	Conformance requirement	
6.3.1.2.3	Test purpose	
6.3.1.2.4	Method of test	
6.3.1.2.5	Test requirement	
6.3.2	Dedicated files	
6.3.2.1	Definition and applicability	40
6.3.2.2	Conformance requirement	
6.3.2.3	Test purpose	
6.3.2.4	Method of test	
6.3.3	Elementary files	40
6.3.3.1	Definition and applicability	
6.3.3.2	Conformance requirement	
6.3.3.3	Test purpose	
6.3.3.4	Method of test	
6.3.4	Methods for selecting a file	
6.3.4.1	Definition and applicability	
6.3.4.2	Conformance requirement	
6.3.4.3	Test purpose	
6.3.4.4	Method of test	
6.3.5	Reservation of file IDs	
6.3.5.1	Definition and applicability	
6.3.5.2	Conformance requirement	
6.3.5.3	Test purpose	
6.3.5.4	Method of test	
6.4	Security features	44
6.4.1	Authentication and cipher key generation procedure	
6.4.2	File access conditions	
6.4.2.1	Definition and applicability	
6.4.2.2	Conformance requirement	
6.4.2.3	Test purpose	
6424	Method of test	15

6.5	Description of the functions	46
6.5.1	SELECT function	46
6.5.1.1	Definition and applicability	46
6.5.1.2	Conformance requirement	
6.5.1.3	Test purpose	
6.5.1.4	Method of test	
6.5.2	STATUS function	
6.5.2.1	Definition and applicability	
6.5.2.2	Conformance requirement	
6.5.2.3	Test purpose	
6.5.2.4	Method of test	
6.5.3	READ BINARY function	
6.5.3.1	Definition and applicability	
6.5.3.2	Conformance requirement	
6.5.3.3	Test purpose	
6.5.3.4	Method of test	
6.5.4	UPDATE BINARY function	
6.5.4.1	Definition and applicability	
6.5.4.2	Conformance requirement	
6.5.4.3	Test purpose	
6.5.4.4	Method of test	
6.5.5	READ RECORD function	
6.5.5.1	Definition and applicability	
6.5.5.2	Conformance requirement	
6.5.5.3	Test purpose	
6.5.5.4	Method of test	
6.5.6	UPDATE RECORD function	
6.5.6.1	Definition and applicability	
6.5.6.2	Conformance requirement	
6.5.6.3	Test purpose	
6.5.6.4	Method of test	
6.5.7	SEEK function	
6.5.7.1	Definition and applicability	
6.5.7.2	Conformance requirement	
6.5.7.3	Test purpose	
6.5.7.4	Method of test	
6.5.8	INCREASE function	
6.5.8.1	Definition and applicability	
6.5.8.2	Conformance requirement	62
6.5.8.3	Test purpose	
6.5.8.4	Method of test	63
6.5.9	VERIFY CHV function	63
6.5.9.1	Definition and applicability	63
6.5.9.2	Conformance requirement	
6.5.9.3	Test purpose	
6.5.10	CHANGE CHV function	
6.5.10.1	Definition and applicability	65
6.5.10.2	Conformance requirement	65
6.5.10.3	Test purpose	66
6.5.10.4	Method of test	66
6.5.11	DISABLE CHV function	67
6.5.11.1	Definition and applicability	
6.5.11.2	Conformance requirement	
6.5.11.3	Test purpose	
6.5.11.4	Method of test	
6.5.12	ENABLE CHV function	
6.5.12.1	Definition and applicability	
6.5.12.2		
6.5.12.3	Test purpose	
6.5.12.4	Method of test	
6.5.13	UNBLOCK CHV function	71
65131	Definition and applicability	71

6.5.13.2	Conformance requirement	
6.5.13.3	Test purpose	
6.5.13.4	Method of test	
6.5.14	INVALIDATE function	
6.5.14.1	Definition and applicability	
6.5.14.2	Conformance requirement	
6.5.14.3	Test purpose	74
6.5.14.4	Method of test	
6.5.15	REHABILITATE function	
6.5.15.1	Definition and applicability	
6.5.15.2	Conformance requirement	
6.5.15.3	Test purpose	
6.5.15.4	Method of test	
6.5.16	RUN GSM ALGORITHM function	
6.5.16.1	Definition and applicability	
6.5.16.2	Conformance requirement	
6.5.16.3	Test purpose	
6.5.16.4	Method of test	
6.5.17	SLEEP function	
6.5.17.1	Definition and applicability	
6.5.17.2	Conformance requirement	
6.5.17.3	Test purpose	
6.5.17.4	Method of test	
	Description of the commands	
6.6.1	Mapping principles	
6.6.1.1	Definition and applicability	
6.6.1.2	Conformance requirement	
6.6.1.3	Test purpose	
6.6.1.4	Method of test	
6.6.2	Coding of the commands	
6.6.2.1	SELECT command	
6.6.2.2	STATUS command	
6.6.2.3	READ BINARY command	
6.6.2.4	UPDATE BINARY command	
6.6.2.5	READ RECORD command	
6.6.2.6	UPDATE RECORD command	
6.6.2.7	SEEK command	
6.6.2.8	INCREASE command	
6.6.2.9	VERIFY CHV command	
6.6.2.10	CHANGE CHV command	
6.6.2.11	DISABLE CHV command	
6.6.2.12 6.6.2.13	ENABLE CHV commandUNBLOCK CHV command	
6.6.2.14		
6.6.2.14	INVALIDATE commandREHABILITATE command	
6.6.2.16	RUN GSM ALGORITHM command	
6.6.2.17	SLEEP command	
6.6.2.18	GET RESPONSE command	
6.6.2.18.1		
6.6.2.18.2		
6.6.2.18.3	•	
6.6.2.18.4	1 1	
6.6.3	Definitions and coding	
6.6.3.1	Definition and applicability	
6.6.3.2	Conformance requirement	
6.6.3.3	Test purpose	
6.6.3.4	Method of test	
6.6.4	Status conditions returned by the SIM	
6.6.4.1	Coding of the status words	
6.6.4.1.1		
6.6.4.1.2	**	
6.6.4.1.3		

6.6.4.1.4	Method of test	83		
6.6.4.2	Commands versus possible status responses			
6.6.4.2.1	Definition and applicability			
6.6.4.2.2	Conformance requirement			
6.6.4.2.3	Test purpose			
6.6.4.2.4	Method of test			
6.6.4.2.5	Test requirement	84		
6.7	Contents of the elementary files	84		
6.7.1	Definition and applicability			
6.7.2	Conformance requirement			
6.7.3	Test purpose			
6.7.4	Method of test			
6.8	Application Protocol	86		
6.8.1	FDN Procedure			
6.8.1.1	Definition and applicability			
6.8.1.2	Conformance requirement			
6.8.1.3	Test purpose			
6.8.1.4	Method of test			
Annex A	(informative): Change history	89		
History		90		

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document provides the Conformance Test Specification for the Subscriber Identity Module defined in GSM 11.11 [1], GSM 11.12 [9] and GSM 11.18 [10].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.
- For this Release 1998 document, references to GSM documents are for Release 1998 versions (version 7.x.y).

2.1 Normative references

- [1] GSM 11.11: "Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface". [2] not used ISO/IEC 7816-1 (1987): "Identification cards - Integrated circuit(s) cards with contacts, Part 1: [3] Physical characteristics". [5] ISO/IEC 7816-2 (1988): "Identification cards - Integrated circuit(s) cards with contacts, Part 1: Dimensions and locations of the contacts". ISO/IEC 7816-3 (1989): "Identification cards - Integrated circuit(s) cards with contacts, Part 1: [6] Electronic signals and transmission protocols." [7] ISO/IEC 7811-1 (1995): "Identification cards - Recording technique - Part 1: Embossing" ISO/IEC 7811-3 (1995): "Identification cards - Recording technique - Part 3: Location of [8] embossed characters on ID-1 cards"
- [9] GSM 11.12: "Digital cellular telecommunications system (Phase 2); Specification of the 3 Volt Subscriber Identity Module Mobile Equipment (SIM ME) interface".
- [10] GSM 11.18: "Digital cellular telecommunications system (Phase 2+); Specification of the 1.8 Volt Subscriber Identity Module Mobile Equipment (SIM ME) interface".

2.2 Informative references

All test cases included in GSM 11.17 are based on phase 2, except 1.8V electrical tests which are a phase 2+ feature. Enhancements will be done time by time.

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the following terms and definitions apply in addition to the terms defined in GSM 11.11 [1];

Implementation Conformance Statement (ICS): A statement made by the supplier of an implementation or system claimed to conform to a given specification, stating which capabilities have been implemented. The ICS can take several forms: protocol ICS, profile ICS, profile specific ICS, information object ICS, etc.

ICS proforma: A document, in the form of a questionnaire, which when completed for an implementation or system becomes an ICS.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

CRn	Conformance Requirement 'n'
SIM	Subscriber Identity Module
ETS	European Telecommunication Standard
ICS	Implementation Conformance Statement
HTT	Implementation Under Test

IUT Implementation Under Test
FT Fixed Termination

ME Mobile Equipment
MS Mobile Station
TS Test Specification

4 Test environment

This clause specifies several requirements which shall be met, and a number of rules which shall be adhered to before testing can proceed.

4.1 Test equipment

This subclause recommends a minimum specification for each of the items of test equipment referenced in the tests.

4.1.1 ME simulator

This item of equipment shall allow T=0 protocol communications to take place on both ID-1 and plug-in SIM cards. It shall be able to generate and send any command APDU and receive any of the possible responses. These commands may be generated manually, one at a time, or automatically from a predefined batch procedure containing one or more commands.

The ME simulator shall be able to support clock stop modes.

The ME simulator shall be able to accept an external clock signal to drive CLK (contact C3) of the SIM.

It shall be possible to access all the SIM contacts either directly or through test points.

4.1.2 Signal generation device

4.1.2.1 VCC

The voltage level for VCC (contact C1) of the SIM shall be adjustable between -0,5V and 6.0V to an accuracy of 1% of the nominal VCC voltage (e.g. 50mV for a 5V card).

The ME simulator shall be able to source current on the VCC contact in the range -2mA to 12mA statically and to deliver charges of > 400nAs without lowering the VCC-voltage for more than 10% of VCC nom.

4.1.2.2 RST

The generated voltage level for RST (contact C2) of the SIM shall be adjustable between -0,5V and 6.0V to an accuracy of 50mV.

The rise and fall times shall be adjustable from 0 to 500 us with an accuracy of 5us. (to check if the SIM works with the defined rise and fall times.)

The beginning of the rising edge is programmable from 1 clk-cycle to 50000 clk-cycles after enabling the clk-line.

4.1.2.3 CLK

This item of equipment shall be able to generate square wave signals for the clock on the SIM, any of which can be a single-shot or continuous signal, in the range 1MHz to 5MHz. The voltage levels for both high and low states shall be adjustable between -0,5V and 6,0V to an accuracy of 0,1V. The duty cycle of the clock signal shall be adjustable between 40% and 60% to an accuracy of 1%. It shall also provide control over the following parameters:

The voltage levels for both high and low states shall be adjustable between 0V and 6V to an accuracy of 1% of the nominal VCC voltage. The duty cycle of the clock signal shall be adjustable between 40% and 60% to an accuracy of 1% or 5ns whichever is the worst .

It shall also provide control over the following parameters:

- rise and fall time to an accuracy of 1% or 5ns whichever is the worst. (5ns = 2.5% accuracy for $f_{max} = 5Mhz$).

4.1.2.4 IO

The equipment shall be able to generate IO-Signals according to 11.11

The voltage levels for high and low states shall be adjustable between -0,5V and 6V to an accuracy of 1% of the nominal VCC voltage. The IO line in transmission mode (high bit) shall be programmable between state A (active driven output) and state Z (IO-voltage-driver inactive, current source I-IO-high active).

It shall also provide control over the rise and fall time of 100ns to 1000ns with an accuracy of 50ns.

The ME simulator shall be able to source and sink currents on the IO contact in the range -20 to +20uA in state high and 0 - -1mA in state low (receiving mode) and shall be able to switch in transmission mode (outputting a high Bit) between voltage and current driving mode.

The timing of the bitstream (jitter, guardtime, etu-value, etc.) on the IO-Line shall be programmable with an accuracy of <=0,01etu or 2clk-cycles whichever is the worst.

4.1.3 Precision force-inducing contacting device

This item of equipment shall be able to apply a prescribed and maintained level of force onto one or more contacts of a SIM. The range shall be between 0 and 0,5N and accurate to 0,01N.

4.1.4 Temperature controllable environment

This item of equipment shall be able to control the temperature of a chamber large enough to enclose a SIM and card reader. The range of temperature control shall be between -25°C and +85°C to an accuracy of 0,5°C.

4.1.5 Temperature measuring device

This item of equipment shall be able to measure the temperature of the SIM to within 0.5° C. The range of this device shall allow measurement of temperatures between -25°C and +85°C.

4.1.6 Voltage measuring device

This item of equipment shall be able to measure static and transient voltages on any one of the contacts of the SIM. The measurable voltage range shall be between -2 and +7V to an accuracy of 1% of the nom. VCC voltage (e.g. 30mV for 3V cards) with a timebase accuracy of 25ns.

4.1.7 Precision measuring device

This item of equipment shall be able to measure both linear and radius of curvature dimensions to an accuracy of 0.01mm.

4.1.8 Current measuring device

This item of equipment shall be able to supervise the current levels for any one of the contacts of the SIM.

The Simulator shall be able to detect an over- or underload with a time resolution of ≤ 100 ns.

Channel	Minimum	Maximum	Resolution
VCC high	-2mA	+12,5mA	125uA
VCC high	-2mA	+12,5mA	125uA
VCC Burst	12mA	+250mA	2,5mA
RST/CLK	-50uA	+50 uA	1uA
high state			
RST/CLK	-250 uA	+250 uA	2,5uA
low state			
IO high	-50 uA	+50 uA	1uA
state			
IO low state	-1500	+1500 uA	15uA

4.1.9 Timing Measurements on contact IO

To verify the timing of the IO transmission from the SIM the ME Simulator shall be able to measure the IO-Bit-Timing in CLK-Cycles with an accuracy of <=0,01etu or 2clk-cycles whichever is the worst.

4.2 IUT default conditions

Unless otherwise stated, the following is default:

- The voltage level for VCC (contact C1) is set to 5,0V.
- The voltage levels for CLK (contact C3) are set to 0V and 5,0V for low and high respectively.
- The clock frequency CLK (contact C3) is set to 5MHz with duty cycle 50%.
- The ME simulator generated low transmission voltage level for I/O (contact C7) is set to 0V and the current sources for high transmission and reception are set to +-20uA respectively
- CHV1 on the SIM is enabled and three VERIFY CHV1 attempts and ten UNBLOCK CHV1 attempts remain.
- Three VERIFY CHV2 attempts and ten UNBLOCK CHV2 attempts remain for CHV2.

4.3 Default data formatting

All numeric data enclosed in single quotes (' ') in the present document are hexadecimal data.

Where 'X' is used in place of a hexadecimal digit, X ranges from '0' to 'F'. For example, the data '6X' ranges from '60' to '6F' inclusive.

Where data is expressed as a group of bytes, it shall be in the following format: 'XX XX XX... XX', indicating first byte, second byte, third byte etc. in that order.

4.4 Test definition and applicability

The following statements are applicable to the Test definition and applicability clause for all test purposes contained within the present document:

- Unless otherwise stated, tests apply to both plug-in and ID-1 SIM cards.

4.5 Test procedure

The following statements are applicable to the Test Procedure clause for all test purposes contained within the present document:

- Unless otherwise stated, all steps with the test procedure are to be carried out in order.

- Where steps indicate that an ME simulator shall select a particular DF or EF using an unspecified number of SELECT commands, the ME simulator is to send the correct sequence of SELECT commands in order to select the required file ID from the current file ID (this may be achieved most easily by selecting from the MF down each time).
- Unless otherwise stated, the length (P3) for all READ RECORD and UPDATE RECORD commands sent by the ME simulator is to be that of the record length of the EF currently selected. In the case where an EF is not currently selected, the length sent is to be 1 unless otherwise stated.
- Unless otherwise stated, the offset for all READ BINARY and UPDATE BINARY commands sent by the ME simulator is to be '00 00'.
- Unless otherwise stated, the length (P3) for all STATUS and GET RESPONSE commands sent by the ME simulator is to be such that all available data is read.
- Unless otherwise stated, the CHV and UNBLOCK CHV presented for VERIFY CHV, CHANGE CHV, DISABLE CHV, ENABLE CHV and UNBLOCK CHV commands sent by the ME simulator is to be correct.
- Unless otherwise stated, the "CHV No." (P2) for VERIFY CHV, CHANGE CHV, DISABLE CHV, ENABLE CHV and UNBLOCK CHV commands sent by the ME simulator is to be 1.

4.6 Test requirement

Where steps within a test procedure involve an ME simulator sending one or more commands to the SIM, these commands are required to be correctly executed, with the SIM responding with status conditions of '90 00' or '9F XX', unless otherwise stated in the Test Requirements subclause for the test.

5 Test Group Hierarchy

This clause contains the Test Group Hierarchy diagrams which provide a structure for the test purposes and also a correlation between the base specification, ICS and this Test Specification.

The information contained in each node for each of the diagrams is as follows:

mnemonic for test group reference to clause in TS

As the Test Group Hierarchy for the SIM is large, it has been broken into sections to aid presentation.

5.1 Test groups under SIM

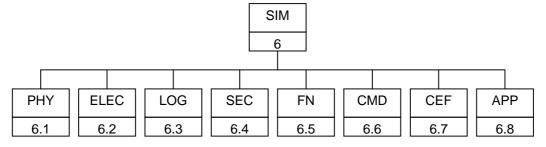


Figure 1: Top Level Test Group Hierarchy

The mnemonics chosen for this test group are as follows:

- PHY: Physical characteristics GSM 11.11 [1], clause 4
- ELEC: Electronic signals and transmission protocols GSM 11.11 [1], clause 5

- LOG: Logical Model GSM 11.11 [1], clause 6
- SEC: Security features GSM 11.11 [1], clause 7
- FN: Description of the functions GSM 11.11 [1], clause 8
- CMD: Description of the commands GSM 11.11 [1], clause 9
- CEF: Contents of the elementary files GSM 11.11 [1], clause 10
- APP: Application Protocol GSM 11.11 [1], clause 11

The Test Groups "PHY", "ELEC", "LOG", "SEC", "CMD", "CEF" and "APP", shown in figure 1, are broken down further, as shown in the following diagrams.

5.2 Test groups under PHY

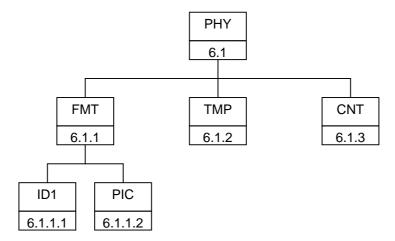


Figure 2: Breakdown of "PHY" Test Group

The mnemonics chosen for this test group are as follows:

- FMT: Format and layout GSM 11.11 [1], subclause 4.1
- ID1: ID-1 card GSM 11.11 [1], subclause 4.1.1
- PIC: Plug-in card GSM 11.11 [1], subclause 4.1.2
- TMP: Temperature range for card operation GSM 11.11 [1], subclause 4.2
- CNT: Contacts GSM 11.11 [1], subclause 4.3

5.3 Test groups under ELEC

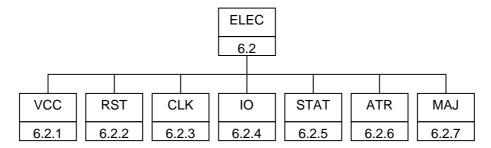


Figure 3: Breakdown of "ELEC" Test Group

The mnemonics chosen for this test group are as follows:

- VCC: Supply voltage Vcc (contact C1) GSM 11.11 [1], subclause 5.1
- RST: Reset RST (contact C2) GSM 11.11 [1], subclause 5.2
- CLK: Clock CLK (contact C3) GSM 11.11 [1], subclause 5.4
- IO: I/O (contact C7) GSM 11.11 [1], subclause 5.5
- STAT: States GSM 11.11 [1], subclause 5.6
- ATR: Answer To Reset (ATR) GSM 11.11 [1], subclause 5.8
- MAJ: Major Capabilities GSM 11.11 [1], subclause 5, 5.7, 5.9, 5.10

5.4 Test groups under LOG

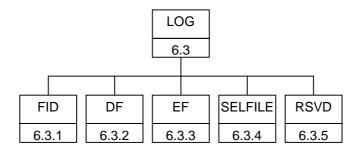


Figure 4: Breakdown of "LOG" Test Group

The mnemonics chosen for this test group are as follows:

- FID: File identifier GSM 11.11 [1], subclause 6.2
- DF: Dedicated Files GSM 11.11 [1], subclause 6.3
- EF: Elementary Files GSM 11.11 [1], subclause 6.4
- SELFILE: Methods for selecting a file GSM 11.11 [1], subclause 6.5
- RSVD: Reservation of file IDs GSM 11.11 [1], subclause 6.6

5.5 Test groups under SEC

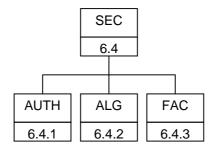


Figure 5: Breakdown of "SEC" Test Group

The mnemonics chosen for this test group are as follows:

- AUTH: Authentication and cipher key generation procedures GSM 11.11 [1], subclause 7.1
- ALG: Algorithms and processes GSM 11.11 [1], subclause 7.2
- FAC: File access conditions GSM 11.11 [1], subclause 7.3

5.6 Test groups under FN



Figure 6: Breakdown of "FN" Test Group

All of the tests in the "FN" test group relate to GSM 11.11 [1], clause 8.

5.7 Test groups under CMD

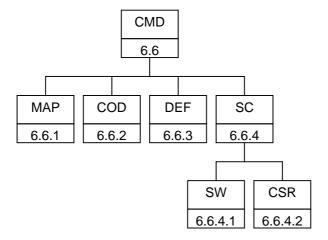


Figure 7: Breakdown of "CMD" Test Group

The mnemonics chosen for this test group are as follows:

- MAP: Mapping principles GSM 11.11 [1], subclause 9.1
- COD: Coding of the commands GSM 11.11 [1], subclause 9.2
- DEF: Definitions and coding GSM 11.11 [1], subclause 9.3
- SC: Status conditions returned by the SIM GSM 11.11 [1], subclause 9.4
- SW: Coding of the status words- GSM 11.11 [1], subclause 9.4.1-5
- CSR: Commands versus possible status responses GSM 11.11 [1], subclause 9.4.6

5.8 Test groups under CEF

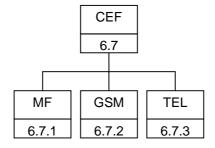


Figure 8: Breakdown of "CEF" Test Group

The mnemonics chosen for this test group are as follows:

- MF: Contents of the EFs at the MF level - GSM 11.11 [1], subclause 10.1

- GSM: Contents of EFs at the GSM application level GSM 11.11 [1], subclause 10.2
- TEL: Contents of the EFs at the Telecom level GSM 11.11 [1], subclause 10.3

5.9 Test groups under APP

[TBD]

Figure 9: Breakdown of "APP" Test Group

All of the tests in the "APP" test group relate to GSM 11.11 [1], clause 11.

6 Test Procedure

This clause details each of the tests in each of the test groups within the Test Group Hierarchy. This test suite allows testing of the IUT against the base specification with respect to:

- Physical characteristics
- Electronic signals and transmission protocols
- Logical model
- Security services and facilities
- Functions
- Commands
- Contents of the elementary files

The numbering of this clause correlates with the numbering of the accompanying ICS to allow for referencing between the documents.

6.1 Physical characteristics

The tests in this subclause ensure that the IUT conforms to the specification for both format and layout and contacts.

6.1.1 Format and layout

6.1.1.1 ID-1 SIM

6.1.1.1.1 Definition and applicability

The format and layout characteristics shall be adhered to, in order to ensure proper operation in the GSM environment.

This test applies to ID-1 SIM cards.

Currents defined as positive are flowing into the SIM

Voltages declared as V_0 are delivered by the ME (ME Simulator) V_1 is generated by the SIM

6.1.1.1.2 Conformance requirement

- CR1 Format and layout of the ID-1 card shall be in accordance with ISO 7816-1,2, unless otherwise specified.
- CR2 The information on the exterior of the ID-1 SIM card shall include at least the individual account identifier and the check digit.

- CR3 The card may have a polarisation mark which indicates how the user should insert the card into the ME.
- CR4 Any embossing on the card shall be in accordance with ISO 7811-1,3 (conditional).
- CR5 The contacts shall be located on the front (embossed face) of the card.

Reference: GSM 11.11 [1], clause 4, and subclauses 4.1, 4.1.1.

Test Group Reference (TGR): TGR_SIM_PHY_FMT_ID1

Test Procedure Reference (TPR): TPR_SIM_PHY_FMT_ID1

6.1.1.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE 1: The testing of CR1 is outside the scope of the present document. Please refer to the TS for ISO/IEC 7816-1.2.

NOTE 2: The testing of CR4 is outside the scope of the present document. Please refer to the TS for ISO 7811-1,3.

6.1.1.1.4 Method of test

Initial conditions

None.

Test procedure

- a) The card is examined for the following:
- identification number,
- polarisation mark,
- contact location.

The card shall have been observed to exhibit the following [CR2,3]:

- identification number located on the exterior of the card,
- polarisation mark indicating how the user should insert the card into the ME,
- contact location on the front or the back of the card.
- b) The SIM is connected to an ME simulator.
- c) The ME simulator resets the SIM.
- d) The ME simulator sends a SELECT command to the SIM to select EF_{ICCID}.
- e) The ME simulator sends a READ BINARY command to the SIM to read the identification number.

The individual account identifier read from the SIM shall be identical with that on the exterior of the card [CR2].

6.1.1.2 Plug-in SIM

6.1.1.2.1 Definition and applicability

The format and layout characteristics shall be adhered to, in order to ensure proper operation in the GSM environment.

This test applies to plug-in SIM cards.

6.1.1.2.2 Conformance requirement

CR1 Format and layout of the plug-in card shall be in accordance with ISO 7816-1,2, unless otherwise specified. CR2 The information on the exterior of the plug-in card shall include at least the individual account identifier and the check digit.

CR3 The dimensions of the plug-in SIM shall be in accordance with Annex A of GSM 11.11 [1].

Reference: GSM 11.11 [1], clause 4, and subclauses 4.1, 4.1.2.

Test Group Reference (TGR): TGR_SIM_PHY_FMT_PIC

Test Procedure Reference (TPR): TPR_SIM_PHY_FMT_PIC

6.1.1.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE 1: The testing of CR1 is outside the scope of the present document. Please refer to the TS for ISO/IEC 7816-1.2.

6.1.1.2.4 Method of test

Initial conditions

None.

Test procedure

- a) The card is examined for the following:
- individual account identifier and check digit,
- width,
- height,
- thickness,
- feature for orientation.

The card shall have been observed to exhibit the following [CR2]:

- at least the individual account identifier and check digit located on the exterior of the card,
- correct width, height and thickness,
- feature for orientation.
- b) The SIM is connected to an ME simulator.
- c) The ME simulator resets the SIM.
- d) The ME simulator sends a SELECT command to the SIM to select EF_{ICCID}.
- e) The ME simulator sends a READ BINARY command to the SIM to read the identification number.

The account identifier and check digit read from the SIM shall be present and identical with that on the exterior of the card [CR2]

6.1.2 Temperature range for card operation

6.1.2.1 Definition and applicability

The temperature range for full operational use shall be adhered to, in order to ensure proper operation in the GSM environment.

6.1.2.2 Conformance requirement

CR1 The temperature range for full operational use shall be between -25° C and $+70^{\circ}$ C with occasional peaks of up to $+85^{\circ}$ C, where "occasional" means not more than 4 hours each time and not over 100 times during the life time of the card.

Reference: GSM 11.11 [1], subclause 4.2.

Test Group Reference (TGR): TGR_SIM_PHY_TMP

Test Procedure Reference (TPR): TPR_SIM_PHY_TMP

6.1.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.1.2.4 Method of test

Initial conditions

- 1) The SIM is placed in a temperature-controllable environment and connected to an ME simulator.
- 2) A temperature measuring device is connected to the surface of the SIM.
- 3) The SIM shall have passed the Format and Layout tests in subclause 6.1.1.

Test procedure

- a) The temperature of the SIM is set to +25 °C.
- b) The ME simulator resets the SIM.
- c) The ME simulator performs the SIM initialisation procedure, as defined in GSM 11.11 [1], subclause 11.2.1.

The SIM shall operate successfully [CR1].

- d) The temperature of the SIM is reduced to -25°C.
- e) Steps b) and c) are repeated.

The SIM shall operate successfully [CR1].

- f) The temperature of the SIM is increased to $+70^{\circ}$ C.
- g) Steps b) and c) are repeated.

The SIM shall operate successfully [CR1].

- h) The temperature of the SIM is increased to +85°C.
- i) Steps b) and c) are repeated continually for a period of 4 hours.

The SIM shall operate successfully [CR1].

The SIM shall have satisfied the test requirements of subclause 6.1.1.

- j) The temperature of the SIM is reduced to +25 °C.
- k) Steps h), i) and j) are repeated a further 99 times.

The SIM shall operate successfully [CR1].

1) Carry out the tests in subclause 6.1.1 again.

6.1.3 Contacts

6.1.3.1 Definition and applicability

The shape, robustness and provision of contacts shall be adhered to, in order to maintain good electrical contact with the ME, ensuring proper operation in the GSM environment.

6.1.3.2 Conformance requirement

CR2 Contact C6 shall not be bonded in the SIM for any function other than supplying Vpp.

Reference: GSM 11.11 [1], subclause 4.3.1., 4.3.,4

Test Group Reference (TGR): TGR_SIM_PHY_CNT

Test Procedure Reference (TPR): TPR_SIM_PHY_CNT

6.1.3.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE: As the contacts specified in CR1 and CR3 are optional, the tests specified here shall only be performed on those contacts when the contacts are present.

6.1.3.4 Method of test

Initial conditions

1) The SIM shall have passed the Format and Layout tests in subclause 6.1.1.

Test procedure

- a) Contact C6 is connected to ground by the ME simulator
- b) VCC is applied to contact C1
- c) Contact C2 (RST) is kept at low level, ground
- d) A valid clock signal is applied to Contact C3

The dc power consumption on Contact C1 shall not exceed 10 mA under any condition [CR2].

NOTE: This test ensures that VPP and VCC are not bonded together in the SIM, if this would be the case VPP would also supply the SIM with current for its operation.

- e) The SIM is connected to an ME simulator.
- f) The ME simulator resets the SIM.

The SIM shall have been reset successfully [CR4].

6.2 Electronic signals and transmission protocols

The tests in this subclause ensure that the IUT conforms to the electrical specification for each of the contacts and also the protocol.

6.2.1 Supply voltage Vcc (contact C1)

6.2.1.1 Voltage limits

6.2.1.1.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the SIM shall operate within the following supply voltage conditions to ensure proper operation in the GSM environment.

This test applies to all SIM implementations with 1.8V, 3V and 5V interfaces

6.2.1.1.2 Conformance requirement

CR1 The SIM shall operate when the supply voltage on contact C1 (Vcc) is in the following ranges:

Card Type	Vmin /V	Vmax /V
5V type	4,5	5,5
3V type	2,7	3,3
1,8V type *	1,62	1,98

^{*} Draft EN 301 116 V0.2.0

Reference: GSM 11.11 [1], subclause 5.1.

Test Group Reference (TGR): TGR SIM ELEC VCC

Test Procedure Reference (TPR): TPR_SIM_ELEC_VCC_V

6.2.1.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.1.1.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) The CHV1 value is 4 zeros.

Test procedure

(the voltage Vcc min/max depends on the voltage class the SIM provides),

- a) The voltage source for contact C1 (Vcc) is set to Vcc min, and the SIM interface signals are powered from a Vcc min, source.
- b) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence [CR1].

- c) The ME simulator sends an CHANGE CHV command to the SIM with new CHV1 value 8 zeros.
- d) The ME simulator sends an CHANGE CHV command to the SIM to return the CHV1 to its original value.
- e) The voltage source for contact C1 (Vcc) is set to Vcc max,.
- f) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence [CR1].

- g) The ME simulator sends an CHANGE CHV command to the SIM with new CHV1 value 8 zeros.
- h) The ME simulator sends an CHANGE CHV command to the SIM to return the CHV1 to its original value.
- i) Repeat the test for every voltage class the SIM provides

6.2.1.2 Current limits

6.2.1.2.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the current consumption shall not exceed the specified limit under normal operating conditions to ensure proper operation in the GSM environment.

Table 1: Current consumption on VCC

Card Type	Imax /mA under normal conditions (average value *1)	f _{max} /Mhz (max CLK-frequency under normal conditions)	Vcc _{max} voltage on VCC during testing
5V type	10	5	5,5V
3V type	6	4	3,3V
1,8V type *	4	4	1,98V

Table 2: Current spikes on VCC

Card Type	I _{max} /mA	max charge /nAs	max duration /ns
5V type	200	40	400
3V type	60	12	400
1,8V type *	60	12	400

^{*} Draft EN 301 116 V0.2.0

6.2.1.2.2 Conformance requirement

CR1 The current consumption of the SIM shall not exceed the max currents values (I_{max}) as defined in table 1 and 2 at the max. frequency (f_{max} .) and the max. allowed voltage level V_{max} .

Reference: GSM 11.11 [1], subclause 5.1.

Test Group Reference (TGR): TGR_SIM_ELEC_VCC

Test Procedure Reference (TPR): TPR_SIM_ELEC_VCC_I

6.2.1.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.1.2.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) A current measuring device is connected to the SIM.
- 3) The CHV1 value is 4 zeros.

Test procedure

- a) The frequency of the clock source is set to 1MHz.
- b) The ME simulator resets the SIM.
- c) The ME simulator performs the SIM initialisation procedure during which time the current consumption is measured.
- d) The ME simulator sends an CHANGE CHV command to the SIM with new CHV1 value 8 zeros.
- e) The ME simulator sends an CHANGE CHV command to the SIM to return the CHV1 to its original value.
- f) The frequency of the clock source is set to 3.25MHz.
- g) The ME simulator resets the SIM.

^{*1} Imax is the average value of the Vcc Current including the current spikes!

- h) The ME simulator performs the SIM initialisation procedure during which time the current consumption is measured.
- i) The ME simulator sends an CHANGE CHV command to the SIM with new CHV1 value 8 zeros.
- j) The ME simulator sends an CHANGE CHV command to the SIM to return the CHV1 to its original value.
- k) The frequency of the clock source is set to f_{max}
- 1) The ME simulator resets the SIM.
- m) The ME simulator performs the SIM initialisation procedure during which time the current consumption is measured.
- n) The ME simulator sends an CHANGE CHV command to the SIM with new CHV1 value 8 zeros.
- o) The ME simulator sends an CHANGE CHV command to the SIM to return the CHV1 to its original value.
- p) repeat tests a) to o) for all voltage classes the SIM delivers.

The current consumption of the SIM shall not exceed the max.current values given in table 1 and 2 according to the SIM class excluding spikes up to the defined maximum charges, durations and amplitudes during the whole test.

6.2.1.3 Idle current limits

6.2.1.3.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the current consumption shall not exceed the specified limit under idle conditions to ensure proper operation in the GSM environment.

Table 3: Current consumption in idle mode

Card Type	Imax /uA in idle state clk frequency 1 Mhz	Vcc _{max} /V max. voltage on VCC during testing
5V type	200	5,5
3V type	200	3,3
1,8V type *	200	1,98

^{*} Draft EN 301 116 V0.2.0

6.2.1.3.2 Conformance requirement

CR1 The idle current consumption of the SIM shall not exceed I_{max} at 1MHz, +25°C and V_{max} .

Reference: GSM 11.11 [1], subclause 5.1.

Reference: GSM 11.11 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_VCC

Test Procedure Reference (TPR): TPR_SIM_ELEC_VCC_IDLE

6.2.1.3.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.1.3.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) The frequency of the clock source is set to 1MHz.
- 3) The temperature of the SIM is +25°C.
- 4) The voltage on VCC is set to VCC_{max} .

Test procedure

- a) The ME simulator resets the SIM.
- b) The idle current consumption is measured after receiving the ATR over a period of ten seconds.
- c) repeat test for all voltage classes the SIM supports.

6.2.1.3.5 Test requirement

1) During step b), the current consumption of the SIM shall not exceed $\boldsymbol{I}_{\text{max}}$

6.2.1.4 Current limits at all frequencies

6.2.1.4.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the current consumption shall not exceed the specified limit under idle conditions to ensure proper operation in the GSM environment.

Table 4: Current consumption in idle mode at max frequency

Card Type	Imax /uA in idle state (average value)	Vcc _{max} /V max. voltage on VCC during testing	f _{max} /Mhz max CLK frequency in idle mode
5V type	1000	5,5	5
3V type	1000	3,3	4
1,8V type *	1000	1,98	4

^{*} Draft EN 301 116 V0.2.0

6.2.1.4.2 Conformance requirement

1) The idle current consumption of the SIM shall not exceed Imax at any frequency fmax

Reference: GSM 11.11 [1], subclause 5.1.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_VCC

Test Procedure Reference (TPR): TPR_SIM_ELEC_VCC_IF

6.2.1.4.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.1.4.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The frequency of the clock source is set to 1MHz.
- b) The ME simulator resets the SIM.
- c) The current consumption is measured after receiving the ATR over a period of ten seconds.
- d) The frequency of the clock source is set to 3.25MHz.
- e) The ME simulator resets the SIM.
- f) The current consumption is measured after receiving the ATR over a period of ten seconds.
- g) The frequency of the clock source is set to f_{max} .
- h) The ME simulator resets the SIM..
- i) The current consumption is measured after receiving the ATR over a period of ten seconds.

The current consumption of the SIM shall not exceed 1mA [CR1in average over the whole test

6.2.1.5 Current limits in clk-stop-mode

6.2.1.5.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the current consumption shall not exceed the specified limit under clk-stop conditions to ensure proper operation in the GSM environment.

Table 1: Current consumption in clk stop mode

Card Type	Imax /uA in clk-stop mode (average value)	Vcc _{max} /V max. voltage on VCC during testing
5V type	200	5,5
3V type	100	3,3
1,8V type *	100	1,98

^{*} Draft EN 301 116 V0.2.0

6.2.1.5.2 Conformance requirement

1) The clk stop mode current consumption of the SIM shall not exceed I_{max} if clk stop mode is delivered by the SIM.

Reference: GSM 11.11 [1], subclause 5.1.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_VCC

Test Procedure Reference (TPR): TPR_SIM_ELEC_VCC_CLKSTOP

6.2.1.5.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.1.5.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to the SIM to select the MF.
- c) The ME simulator sends a GET RESPONSE command to the SIM using the SW2 returned by the SIM following step b).
- d) The ME simulator stops the clock at least 744 clk according to the clock stop mode read in step c).
- f) The current consumption is measured during clk stop for min. 10s.

The current consumption of the SIM shall not exceed I_{max} in average during clk stop.

6.2.2 Reset RST (contact C2)

6.2.2.1 Static operation

6.2.2.1.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the SIM shall operate within the following limits regarding the reset RST signal to ensure proper operation in the GSM environment.

6.2.2.1.2 Conformance requirement

CR1 The SIM shall operate within the following limits for RST:

Card Type	V _{OL} min/V	V _{OL} max/V	I _{OL} max/uA	V _{OH} min/V	V _{OH} max/V	I _{OH} max/uA
5V type	-0,3	0,6	-200	0,7 * Vcc	Vcc +0,3V	+20
3V type	-0,3	0,2 * VCC	-200	0,8*VCC	Vcc +0,3V	+20
1,8V type *	-0,3	0,2 * VCC	-200	0,8*VCC	Vcc +0,3V	+200

⁻ t_R and t_F shall not exceeding 400µs, with C_{out} and C_{in} equal to 30pF.

Reference: GSM 11.11 [1], subclause 5.2.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_RST

Test Procedure Reference (TPR): TPR_SIM_ELEC_RST_ST

6.2.2.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.2.1.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) A current measuring device is connected to RST (contact C2) of the SIM.
- 3) The capacitance, C_{in} , of RST (contact C2) is measured to be 30pF.

Test procedure

- a) The following parameters are set for RST:
- V_{OH} of the RST signal is set to V_{OH} min.
- V_{OL} of the RST signal is set to V_{OL} min .
- t_R and t_F are set to 400 μ S.
- b) The ME simulator resets the SIM.
- c) The following parameters are set for RST:
- V_{OH} of the RST signal is set to V_{OH} max .
- V_{OL} of the RST signal is set to V_{OL} max .
- t_R and t_F are set to 400 μ S.
- d) The ME simulator resets the SIM.
- e) Repeat the test for all voltage classes the card supports

The following shall be true for all tests:

- I_{OLmax} is measured to be less than or equal to I_{OL} max [CR1b,c].
- I_{OHmax} is measured to be less than or equal to I_{OH} max [CR1a,c].

6.2.3 Clock CLK (contact C3)

6.2.3.1 Frequency and duty cycle

6.2.3.1.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the SIM shall operate within the following limits regarding the reset RST signal to ensure proper operation in the GSM environment.

This test applies to all SIM implementations with 5V interface.

6.2.3.1.2 Conformance requirement

- CR1 The SIM shall **not** support an internal clock.
- CR2 The SIM shall support a duty cycle between 40% and 60% of the period during stable operation.
- CR3 The SIM shall operate within the following limits for CLK:

Card Type	V _{OL} min/V	V _{OL} max/V	V _{OH} min/V	V _{OH} max/V	T _R & T _F max	fmax /MHz
5V type	-0,3	0,5	0,7 * Vcc	Vcc +0,3V	9% with a	5
					max. of 0,5us	
3V type	-0,3	0,2 * VCC	0,8*VCC	Vcc +0,3V	50ns	4
1,8V type *	-0,3	0,2 * VCC	0,8*VCC	Vcc +0,3V	50ns	4

Note: T_R and T_F has to be measured between 10% and 90% of V_{OL} and V_{OH} ; C_{in} is equal to 30pF.

Reference: GSM 11.11 [1], subclause 5.4.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_CLK

Test Procedure Reference (TPR): TPR_SIM_ELEC_CLK_FREQ

6.2.3.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.3.1.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The frequency of the clock source is set to 1MHz.
- b) The duty cycle of the clock source is set to 40% high.

V_{OH} is set to V_{OH}max,; V_{OL} is set to V_{OL}min

- c) The ME simulator resets the SIM.
- d) The duty cycle of the clock source is set to 60% high.
- e) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence [CR1,3].

- f) The frequency of the clock source is set to f_{max} .
- g) The duty cycle of the clock source is set to 40% high.
- h) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence [CR1,3].

- i) The duty cycle of the clock source is set to 60% high.
- j) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence [CR1,3]

- .k) Repeat a) to i) with V_{OH} set to V_{OHmin},; V_{OL} set to V_{OL}max
- 1) Repeat a) to j) for all voltage classes supported by the SIM

6.2.3.2 Voltage and current

6.2.3.2.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the SIM shall operate within the following limits regarding the CLK signal to ensure proper operation in the GSM environment.

6.2.3.2.2 Conformance requirement

CR1 The SIM shall operate within the following limits for CLK:

Card Type	V _{OL} min/V	V _{OL} max/V	I _{OL} max/uA	V _{OH} min/V	V _{OH} max/V	I _{OH} max/uA	T _R & T _F max	fmax /MHz
5V type	-0,3	0,5	-200	0,7 * Vcc	Vcc +0,3V	+20	9% with a	5
							max. of 0,5us	
3V type	-0,3	0,2 * VCC	-20	0,7*VCC	Vcc +0,3V	+20	50ns	4
1,8V type *	-0,3	0,2 * VCC	-20	0,8*VCC	Vcc +0,3V	+20	50ns	4

Reference: GSM 11.11 [1], subclause 5.4.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_CLK

Test Procedure Reference (TPR): TPR_SIM_ELEC_CLK_VI

6.2.3.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.3.2.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) A current measuring device is connected to CLK (contact C3) of the SIM.
- 3) The capacitance of CLK (contact C3) is measured to be \leq 30pF.

Test procedure

- a) The clock signal is set to 1MHz.
- b) The following parameters are set for CLK:
- V_{OH} at V_{OH}max.
- V_{OL} at V_{OL}min.
- t_R and t_F is set to t_R max and t_F max
- c) The ME simulator resets the SIM.

The following shall be true:

The SIM shall provide an ATR

- d) The following parameters are set for CLK:
- V_{OH} at $V_{OH}min$
- Vol at Volmax
- e) The ME simulator resets the SIM.

The following shall be true:

- The SIM shall provide an ATR
- f) Repeat test a) to e) with $f_{\text{clk}} = f_{\text{max}}$, $T_{R} = T_{R} max$ and $T_{F} = T_{f} max$.
- f) Repeat test a) to f) for all voltage classes delivered by the SIM

The following shall be true for all tests:

- I_{OHmax} is measured to be less than or equal to $+20\mu A$ [CR1a].
- I_{OLmax} is measured to be less than or equal to -200 μ A [CR1b].
- The SIM shall provide an ATR after a reset

6.2.4 I/O (contact C7)

6.2.4.1 Voltage and current

6.2.4.1.1 Definition and applicability

In addition to the electronic signals and transmission protocols defined in ISO/IEC 7816-3, the SIM shall operate within the following limits regarding the I/O signal to ensure proper operation in the GSM environment.

6.2.4.1.2 Conformance requirement

CR1 The SIM shall operate within the following limits for I/O:

Card Type	V _{OL} min/V	V _{OL} max/V	I _{OL} max/uA	V _{OH} min/V	V _{OH} max/V	I _{OH} max/uA	T _R & T _F max	fmax /MHz
5V type	-0,3	0,5	-1000	3,8	Vcc +0,3V	+20	1us	5
3V type	-0,3	0,4	-1000	0,7*VCC	Vcc +0,3V	+20	1us	4
1,8V type *	-0,3	0,3	-1000	0,7*VCC	Vcc +0,3V	+20	1us	4

Card Type	V _{IL} min/V	V _{IL} max/V	I _{IL} max/uA	V _{IH} min/V	V _{IH} max/V	I _⊪ min/max /uA	T _R & T _F max	fmax /MHz
5V type	-0,3	0,8	+1000	0,7 * VCC	Vcc +0,3V	±20	1us	5
3V type	-0,3	0,2 * VCC	+1000	0,7*VCC	Vcc +0,3V	±20	1us	4
1,8V type *	-0,3	0,2 * VCC	+1000	0,7*VCC	Vcc +0,3V	±20	1us	4

Reference: GSM 11.11 [1], subclause 5.5.

Reference: ETS 300 641 [1], subclause 5.

*Reference: Draft EN 3011126 V0.2.0 (1998-01) subclause 5.

Test Group Reference (TGR): TGR_SIM_ELEC_IO

Test Procedure Reference (TPR): TPR_SIM_ELEC_IO_VI

6.2.4.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.4.1.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) A current measuring device is connected to I/O (contact C7) of the SIM.
- 3) The capacitance, C_{out} and C_{in} , of I/O (contact C7) is measured to be 30pF.

Test procedure

a) The ME simulator are set to the following max. ranges allowed by the SIM:

Vcc to Vcc max

V_{OL} to V_{OL} min, V_{OH} to V_{OH} max,

 I_{IL} to I_{IL} max, I_{IH} to I_{IH} max.

 T_R to T_R max and T_F to T_F maxb) The ME simulator resets the SIM.

- c) The ME simulator sends a STATUS command to the SIM.
- d) The ME simulator are set to the minimum ranges allowed by the SIM with V_{OH} inaktiv:

Vcc to Vcc min

 V_{OL} to V_{OL} max, V_{OH} to V_{OH} min,

 I_{IL} to I_{IL} max, I_{IH} to I_{IH} min.

 T_R to T_R max and T_F to T_F max

- e) The ME simulator resets the SIM.
- f) The ME simulator sends a STATUS command to the SIM.

m) repeat test a) to l) for all voltage classes

Acceptance criterium for all tests:

 I_{OL} has to be between 0mA and I_{OL} max.

 I_{OH} has to be $\leq I_{OH}$ max..

 V_{IL} has to be between V_{IL} min and V_{IL} max.

 V_{IH} has to be between V_{IH} min and V_{IH} max

 T_R and T_R generated by the SIM have to be $\leq T_R$ and T_F max

6.2.5 States

6.2.5.1 Definition and applicability

There are two states for the while the power supply is on, operating state when the SIM is executing a command, and idle state at any other time.

6.2.5.2 Conformance requirement

CR1 The SIM shall support exactly one of these items:

- Clock stop allowed, no preferred level
- Clock stop allowed, high level preferred
- Clock stop allowed, low level preferred
- Clock stop not allowed
- Clock stop not allowed, unless at high level
- Clock stop not allowed, unless at low level
- CR2 When the SIM is in idle state, all pertinent data shall be retained.

CR3 A SIM of Phase 2 or later shall always send the status information "normal ending of the command" after the successful interpretation of the command SLEEP received from a Phase 1 ME.

Reference: GSM 11.11 [1], subclauses 5.6 and 9.2.1.

Test Group Reference (TGR): TGR_SIM_ELEC_STAT

Test Procedure Reference (TPR): TPR_SIM_ELEC_STAT

6.2.5.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.5.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to the SIM to select the MF.
- c) The ME simulator sends a GET RESPONSE command to the SIM using the SW2 returned by the SIM following step b).

The coding of bits 1, 3 and 4 of byte 14 in the response data shall be one in the table below only [CR1].

- d) The ME simulator stops the clock according to the clock stop mode read in step c).
- e) The ME simulator pauses for 10 seconds, then starts the clock.
- f) The ME simulator sends a GET RESPONSE command to the SIM using the SW2 returned by the SIM following step b).

The response data read shall be that indicating EF_{ICCID} .

Table 1: (Title?)

Bit 1	Bit 3	Bit 4	Clock stop mode
1	0	0	Clock stop allowed, no preferred level
1	1	0	Clock stop allowed, high level preferred
1	0	1	Clock stop allowed, low level preferred
0	0	0	Clock stop not allowed
0	1	0	Clock stop only allowed on high level
0	0	1	Clock stop only allowed on low level

6.2.6 Answer To Reset (ATR)

6.2.6.1 ATR content

6.2.6.1.1 Definition and applicability

The ATR is information presented by the SIM to the ME at the beginning of the card session and gives operational requirements.

6.2.6.1.2 Conformance requirement

CR1 The ATR consists of at the most 33 characters.

CR2 Initial character TS is sent by the SIM.

CR3 Format character T0 is sent by the SIM.

- CR4 Interface character (global) TA1 is sent by the SIM (optional).
- CR5 Interface character (global) TB1 is sent by the SIM (optional).
- CR6 Interface character (global) TC1 is sent by the SIM (optional).
- CR7 Interface character TD1 is sent by the SIM (optional).
- CR8 Interface character (specific) TA2 is sent by the SIM (optional).
- CR9 Interface character (global) TB2 is **never** sent by the SIM.
- CR10 Interface character (specific) TC2 is sent by the SIM (optional).
- CR11 Interface character TDi is sent by the SIM (optional).
- CR12 Interface characters TAi, TBi, TCi (i>2) are sent by the SIM (optional).
- CR13 Historical characters T1,...,TK are sent by the SIM (optional).
- CR14 Check character TCK is sent by the SIM (conditional).

Reference: GSM 11.11 [1], subclause 5.8.1

Test Group Reference (TGR): TGR_SIM_ELEC_ATR

Test Procedure Reference (TPR): TPR_SIM_ELEC_ATR_CON

6.2.6.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.6.1.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

a) The ME simulator resets the SIM.

The SIM shall send the ATR sequence [CR1].

The total length of the ATR sequence shall not be more than 33 characters [CR1].

The following characters shall be present and in the following order:

Initial character TS {CR2].

Format character T0 [CR3].

Interface character (global) TA1, if its presence is indicated by T0 [CR4].

Interface character (global) TB1, if its presence is indicated by T0 [CR5].

Interface character (global) TC1, if its presence is indicated by T0 [CR6].

Interface character TD1, if its presence is indicated by T0 [CR7].

Interface character (specific) TA2, if its presence is indicated by TD1 [CR8].

Interface character (specific) TC2, if its presence is indicated by TD1 [CR10].

Interface character TDi, if its presence is indicated by TD(i-1, i>1) [CR11].

Interface characters TAi, TBi, TCi if their presence is indicated by TD(i-1, i>2) [CR12].

Historical characters T1,...,TK, if their presence is indicated by T0 [CR13].

Check character TCK, if an additional protocol type to T=0 is indicated by TD1 [CR14].

PI1 shall be equal to 0 if TB1 is sent [CR5].

TC1 shall be either 0 or 255, if sent [CR6].

The SIM shall never send Interface character (global) TB2 [CR9].

6.2.6.2 PTS procedure

6.2.6.2.1 Definition and applicability

The ATR indicates which protocols are available for use during a session. The PTS procedure allows one of the available protocol types to be selected.

6.2.6.2.2 Conformance requirement

CR1 The SIM shall respond to a PTS-Request from the ME with a PTS-Response (optional).

Reference: GSM 11.11 [1], subclause 5.8.2.

Test Group Reference (TGR): TGR SIM ELEC ATR

Test Procedure Reference (TPR): TPR_SIM_ELEC_ATR_PTS

6.2.6.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.2.6.2.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test Procedure

a) The ME simulator resets the SIM.

The SIM shall send the correct ATR sequence.

b) The ME simulator sends a PTS-Request to the SIM, selecting T=0 protocol.

If the SIM supports PTS procedure it shall send a valid PTS-Response [CR1].

6.2.7 Major Capabilities

6.2.7.1 Definition and applicability

The SIM shall adhere to the electronic signals and transmission protocols defined in GSM 11.11 [1] and ISO/IEC 7816-3 to ensure proper operation in the GSM environment.

6.2.7.2 Conformance requirement

CR1 Electronic signals and transmission protocols shall be in accordance with ISO/IEC 7816-3 unless otherwise specified.

CR2 The choice of the transmission protocol(s), to be used to communicate between the ME and the SIM, shall at least include that specified and denoted by T=0 in ISO/IEC 7816-3.

- CR3 The baudrate for all communications shall be: (clock frequency)/372.
- CR4 The bit/character duration and sampling time specified in ISO/IEC 7816-3, subclauses 6.1.1 and 6.1.2, are valid for all communications.
- CR5 Error detection and character repetition is mandatory for the SIM for all communications.

Reference: GSM 11.11 [1], clauses 5, and subclauses 5.7, 5.9 and 5.10.

Test Group Reference (TGR): TGR_SIM_ELEC_MAJOR

Test Procedure Reference (TPR): TPR_SIM_ELEC_MAJOR

6.2.7.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE: The testing of CR1, CR2, CR3, CR4 and CR5 is outside the scope of the present document.

6.2.7.4 Method of test

Initial conditions

N/A

Test procedure

N/A

6.2.7.5 Test requirement

N/A

6.3 Logical Model

The tests in this subclause ensure that the IUT is tested against the specification of the logical structure, for a SIM, the code associated with it, and the structure of the files used.

6.3.1 File identifier

6.3.1.1 File-type identification

6.3.1.1.1 Definition and applicability

A file identifier is used to address or identify each specific file.

6.3.1.1.2 Conformance requirement

- CR1 For GSM, the Master File shall be coded as '3F 00'.
- CR2 For GSM, file type '7F' shall be used to identify Dedicated Files.
- CR3 For GSM, file type '2F' shall be used to identify Elementary Files under the Master File.
- CR4 For GSM, file type '6F' shall be used to identify Elementary Files under a Dedicated File.

Reference: GSM 11.11 [1], subclause 6.2.

Test Group Reference (TGR): TGR_SIM_LOG_FID

Test Procedure Reference (TPR): TPR_SIM_LOG_FID_FTI

6.3.1.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.3.1.1.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) For each file in figure 7 of GSM 11.11 [1], subclause 10.4, the ME simulator sends SELECT commands to the SIM to select the file ID and, if selected successfully, the ME simulator sends a GET RESPONSE command to the SIM.

After each successful SELECT and GET RESPONSE, byte 7 of the response data shall conform to the following table:

File ID Type of File '3F 00''01' '7F XX' '02' '2F XX' '04' '6F XX' '04'

6.3.1.2 File ID assignments

6.3.1.2.1 Definition and applicability

A file identifier is used to address or identify each specific file. There are a number of rules regarding file ID assignment.

6.3.1.2.2 Conformance requirement

- CR1 A file ID is assigned at the time of creation of the file concerned.
- CR2 Two files under the same parent shall never have the same ID.
- CR3 A child and any parent, either immediate or remote, in the hierarchy shall never have the same ID.

Reference: GSM 11.11 [1], subclause 6.2.

Test Group Reference (TGR): TGR_SIM_LOG_FID

Test Procedure Reference (TPR): TPR_SIM_LOG_FID_FIA

6.3.1.2.3 Test purpose

To verify that all files within the SIM structure conform to the above requirements.

NOTE 1: CR1 cannot be tested as the SELECT function requires the file ID in order to select files.

NOTE 2: CR2 and CR3 cannot be tested due to the operation of the SELECT function which should only ever select a single file for a given file ID.

6.3.1.2.4 Method of test

Initial conditions

N/A

Test procedure

N/A

6.3.1.2.5 Test requirement

N/A

6.3.2 Dedicated files

6.3.2.1 Definition and applicability

Dedicated Files provide a functional grouping of Elementary Files. In this way a structured hierarchy of files can be established on the SIM.

6.3.2.2 Conformance requirement

CR1 The SIM shall contain DF_{GSM}.

CR2 The SIM shall contain DF_{TELECOM} (optional).

Reference: GSM 11.11 [1], subclause 6.3., subclause 10.2, subclause 10.3

Test Group Reference (TGR): TGR_SIM_LOG_DF

Test Procedure Reference (TPR): TPR_SIM_LOG_DF

6.3.2.3 Test purpose

To verify that the Dedicated Files within the SIM file structure conform to the above requirements.

6.3.2.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to the SIM to select DF_{GSM}.

The status condition returned by the SIM shall be SW1='9F', SW2='XX' - length 'XX' of the response data [CR1].

- c) The ME simulator resets the SIM.
- d) The ME simulator sends a SELECT command to the SIM to select $DF_{TELECOM}$.

The status condition returned by the SIM shall be SW1='9F', SW2='XX' - length 'XX' of the response data, if the SIM supports $DF_{TELECOM}$, otherwise the status condition returned by the SIM shall be SW1='94', SW2='04' - file ID not found [CR2].

6.3.3 Elementary files

6.3.3.1 Definition and applicability

Elementary Files structure the way in which information is held on the SIM and provide security on how this information is accessed.

6.3.3.2 Conformance requirement

- CR1 The total data length of the body of an EF with transparent structure shall be indicated in the header of the EF.
- CR2 The record length of an EF with linear fixed structure shall be indicated in the header of the EF.
- CR3 The record length multiplied by the number of records of an EF with linear fixed structure shall be indicated in the header of the EF.
- CR4 The SIM shall be able to access records within a linear fixed EF using all of the methods given in subclause 6.4.2.
- CR5 For an EF with cyclic structure, when all the records have been used for storage, then the next storage of data shall overwrite the oldest information.
- CR6 The SIM shall be able to access records within a cyclic EF using all of the methods given in subclause 6.4.3.

Reference: GSM 11.11 [1], clause 6.4.1, 6.4.2 and 6.4.3.

Test Group Reference (TGR): TGR_SIM_LOG_EF

Test Procedure Reference (TPR): TPR_SIM_LOG_EF

6.3.3.3 Test purpose

To verify that the EFs within the SIM file structure conform to the above requirements.

NOTE: CR4, CR5 and CR6 are tested in subclauses 6.5.5 and 6.5.6.

6.3.3.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator, and the ME simulator has reset the SIM.

Test procedure

The following steps are performed for all EFs in figure 7 of GSM 11.11 [1], subclause 10.4.

- a) The ME simulator sends a SELECT command to select the required EF in the SIM.
- b) If the EF is successfully selected, the ME simulator sends a GET RESPONSE command to the SIM.
- c) The ME simulator fulfils the READ access condition of the EF.
- d) If the EF is transparent, the ME simulator sends a READ BINARY command to the SIM. The length used shall be that of bytes 3 and 4 of the response data in step b).

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1].

e) If the EF is transparent, the ME simulator sends a READ BINARY command with offset '00 01' to the SIM. The length used shall be that of bytes 3 and 4 of the response data in step b).

The status condition returned by the SIM shall indicate an error [CR1].

f) If the EF is linear fixed or cyclic, the ME simulator sends a READ RECORD using ABSOLUTE mode with record 1 to the SIM. The length used shall be that of byte 15 of the response data in step b).

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR2].

g) If the EF is linear fixed or cyclic, the ME simulator sends a READ RECORD using ABSOLUTE mode to the SIM. The record length used shall be that of byte 15 of the response data in step b) and the record number shall be that of bytes 3 and 4 of the response data in step b) divided by the record length.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR3].

h) If the EF is linear fixed or cyclic, the ME simulator sends a READ RECORD using ABSOLUTE mode to the SIM. The record length used shall be that of byte 15 of the response data in step b) and the record number shall be that of bytes 3 and 4 of the response data in step b) divided by the record length, plus 1.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range (invalid address) [CR3].

6.3.4 Methods for selecting a file

6.3.4.1 Definition and applicability

The ME accesses information on the SIM navigating around the file structure by selecting DFs and EFs as required. There are a number of rules regarding which file elements may be selected from a given DF or EF.

6.3.4.2 Conformance requirement

- CR1 Selection of a DF or MF shall set the current Directory on the SIM.
- CR2 After a selection of a DF or MF there shall be no current EF.
- CR3 After a selection of an EF, the current EF shall be set to this EF and the current Directory shall remain the DF or MF which is the parent of this EF.
- CR4 Any application specific command shall only be operable if it is specific to the current Directory.
- CR5 It shall be possible to select the following from the last selected file:
- a) any file which is an immediate child of the current Directory
- b) any DF which is an immediate child of the parent of the current DF
- c) the parent of the current Directory
- d) the current DF
- e) the MF

NOTE: Reselection of the last selected file is allowed.

CR6 It shall be possible to select any of the 'valid selections' in Table 6, subclause 6.5 of GSM 11.11 [1] for each of the 'last selected file' entries.

Reference: GSM 11.11 [1], subclause 6.5.

Test Group Reference (TGR): TGR_SIM_LOG_SELFILE

Test Procedure Reference (TPR): TPR_SIM_LOG_SELFILE

6.3.4.3 Test purpose

To verify that the SIM conforms to the above requirements with regard to file selection.

NOTE 2: CR5 is tested for function RUN GSM ALGORITHM in subclause 6.5.16.

6.3.4.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select DF_{GSM}.

- c) The ME simulator sends a STATUS command to the SIM.

 Bytes 5 and 6 of the response data shall indicate that DF_{GSM} is the currently selected directory [CR1].
- d) The ME simulator sends a READ BINARY command using a length of 1 byte to the SIM.

 The status condition returned by the SIM shall be SW1='94', SW2='00' no EF selected [CR2].
- e) The ME simulator sends a SELECT command to the SIM to select EF_{LP} .
- f) The ME simulator sends a GET RESPONSE command to the SIM.

 Bytes 5 and 6 of the response data shall indicate that EF_{LP} is the currently selected EF [CR3].
- g) The ME simulator sends a STATUS command to the SIM.

 Bytes 5 and 6 of the response data shall indicate that DF_{GSM} is the currently selected directory [CR3].
- h) Step i) is carried out for each line in Table 6, subclause 6.5 of GSM 11.11 [1].
- i) Step j) is carried out for each one of the 'valid selections' in that line of the table.
- j) Steps k) then l) are carried out in turn.
- k) The ME simulator sends SELECT commands to the SIM to select the 'last selected file'.
- 1) The ME simulator sends a SELECT command to the SIM to select the 'valid selection'.

The status condition returned by the SIM shall be SW1='9F', SW2='XX' [CR5,6].

The following file IDs are used to represent the IDs in the table:

Table 2: IDs

Table	Actual
MF	MF
DF1	DF _{TELECOM}
DF2	DF_GSM
EF1	EF _{ICCID}
EF2	EF _{ADN}
EF3	EF_LP
EF4	EF _{IMSI}

NOTE: When EF_{ADN} is not supported by the SIM, any supported EF in DF_{TELECOM} may be chosen.

6.3.5 Reservation of file IDs

6.3.5.1 Definition and applicability

In order to accommodate planned and possible future requirements, certain file IDs are considered reserved, and may not be used in the SIM file structure.

6.3.5.2 Conformance requirement

CR1 The following Dedicated File IDs are reserved for operational use by GSM:

'7F 10'

'7F 2X'

CR2 The following Elementary File IDs are reserved for operational use by GSM:

'2F 1X' under MF

'6F 2X', '6F 3X' and '6F 4X' under '7F 10' and '7F 2X'

CR3 The following Dedicated File IDs are reserved for administrative use by GSM:

'7F 4X'

CR4 The following Elementary File IDs are reserved for administrative use by GSM:

'2F 01', '2F EX' under MF

'6F XX' under DFs '7F 4X'

'6F 1X' under '7F 10', '7F 20' and '7F 21'

Reference: GSM 11.11 [1], subclause 6.6.

Test Group Reference (TGR): TGR_SIM_LOG_RSVD

Test Procedure Reference (TPR): TPR_SIM_LOG_RSVD

6.3.5.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE: CR3 and CR4 cannot be tested as the administrative functionality is outside the scope of GSM 11.11 [1].

6.3.5.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) For all possible EFs on the SIM, the ME simulator sends SELECT commands to the SIM to select each EF in sequence.

For all successful selections, the ID of the selected file shall be one of those in Figure 7, clause 10 of GSM 11.11 [1] or shall not be one of those listed as reserved for operational use. [CR1,2]

6.4 Security features

The tests in this subclause ensure that the IUT conforms with the security aspects which are related to the SIM.

6.4.1 Authentication and cipher key generation procedure

The authentication mechanism employed in the GSM system between the network and SIM to authenticate a SIM, results in a finite interaction with the SIM, through the use of the function RUN GSM ALGORITHM. In order to test the behaviour of the SIM during this authentication mechanism, it is sufficient to test the function which operates on the SIM during the authentication mechanism. The test procedure for the function itself shall be executed, as defined in subclause 6.5.16 ("RUN GSM ALGORITHM" function.

6.4.2 File access conditions

6.4.2.1 Definition and applicability

Every file has its own specific access condition for each command which shall be fulfilled before the command can take place.

6.4.2.2 Conformance requirement

- CR1 For access condition ALWAYS, the command can be performed without any restriction.
- CR2 For access condition CHV1, the command shall only be possible if one of the following three conditions is fulfilled:
- a) a correct CHV1 value has already been presented to the SIM during the current session
- b) the CHV1 enabled/disabled indicator is set to "disabled"
- c) UNBLOCK CHV1 has been successfully performed during the current session
- CR3 For access condition CHV2, the command shall only be possible if one of the following two conditions is fulfilled:
- a) a correct CHV2 value has already been presented to the SIM during the current session
- b) UNBLOCK CHV2 has been successfully performed during the current session
- CR4 For access condition NEVER, the command shall not be possible over the SIM/ME interface.

Reference: GSM 11.11 [1], subclause 7.6.

Test Group Reference (TGR): TGR_SIM_SEC_FAC

Test Procedure Reference (TPR): TPR_SIM_SEC_FAC

6.4.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

- NOTE 1: Allocation of ADM levels and the respective requirements for their fulfilment are the responsibility of the appropriate administrative authority.
- NOTE 2: CR2b and CR2c are tested in subclauses 6.5.11, 6.5.12 and 6.5.13.
- NOTE 3: CR3b is not tested here although the UNBLOCK CHV function in subclause 6.5.13 intrinsically tests for CHV2.

6.4.2.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{ADN} is present and not invalidated.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to the SIM to select EF_{ICCID}.
- c) The ME simulator sends a READ BINARY command to the SIM to read the first 1 byte in EF_{ICCID}.

 The status condition returned by the SIM shall be SW1='90', SW2='00' normal ending of command [CR1].
- d) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- e) The ME simulator sends a READ RECORD command to the SIM to read the first record in EF_{ADN}.

 The status condition returned by the SIM shall be SW1='98', SW2='04' access condition not fulfilled [CR2a].
- f) The ME simulator gains CHV1 security access.
- g) The ME simulator sends a READ RECORD command to the SIM to read the first record in EF_{ADN}.

The status condition returned by the SIM shall be SWI='90', SW2='00' - normal ending of command [CR2a].

- h) The ME simulator sends an INVALIDATE command to the SIM to invalidate EF_{ADN}.
 - The status condition returned by the SIM shall be SW1='98', SW2='04' access condition not fulfilled [CR3a].
- i) The ME simulator gains CHV2 security access.
- j) The ME simulator sends an INVALIDATE command to the SIM to invalidate EF_{ADN}.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR3a].

- k) The ME simulator sends SELECT commands to the SIM to select EF_{ICCID} under MF.
- l) The ME simulator sends an UPDATE BINARY command to the SIM to update the byte in EF_{ICCID} with the byte read in step c).

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled [CR4].

6.5 Description of the functions

The tests in this subclause ensure that the IUT conforms to the functional specification for all the commands and their respective responses.

6.5.1 SELECT function

6.5.1.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.1.2 Conformance requirement

- CR1 The SELECT function shall select a file according to the methods described in clause 6 of GSM 11.11 [1].
- CR2 The function shall accept as an input, a file ID.
- CR3 If the selected file is the MF or a DF, then the function shall output the file ID, total memory space available, CHV enabled/disabled indicator and CHV status.
- CR4 If the selected file is an EF, then the function shall output the file ID, access conditions, invalidation indicator, structure of EF and the length of the records in the case of linear fixed or cyclic structure.
- CR5 The record pointer in a cyclic file shall address the last record which has been updated or increased.

Reference: GSM 11.11 [1], subclause 8.1.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_SEL

6.5.1.3 Test purpose

To verify that the SELECT function conforms to the above requirements for the different file types available.

NOTE: CR1 is tested in subclause 6.3.5.

6.5.1.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) The records in EF_{ACM} contain the following data:

Record 1: '11 11 11' (last updated record)

Record 2: '22 22 22'

Record 3: '33 33 33'

4) The record length of EF_{ADN} is known.

Test procedure and Requirements

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to select DF_{GSM} .

 The status returned by the SIM shall be SWI='9F', SW2='XX' length 'XX' of the response data [CR2].
- c) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR3]:

- Bytes 5 and 6 shall indicate that DF_{GSM} is the currently selected file
- Byte 7 shall be '02' indicating a DF
- Byte 13 shall be less than or equal to SW2 from step b) minus 13
- Bit 8 of byte 14 shall be 0 indicating that CHV1 is enabled
- Byte 15 shall indicate the correct number of DFs which are a direct child of DF_{GSM}
- Byte 16 shall indicate the correct number of EFs which are a direct child of DF_{GSM}
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining
- Bits 1 through 4 of byte 21 shall indicate three VERIFY CHV2 attempts remaining.
- Bits 1 through 4 of byte 20 shall indicate ten UNBLOCK CHV1 attempts remaining
- Bits 1 through 4 of byte 22 shall indicate ten UNBLOCK CHV2 attempts remaining
- d) The ME simulator sends a SELECT command to the SIM to select the MF.
- e) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR3]:

- Byte 7 shall be '01' indicating MF
- Byte 15 shall indicate the correct number of DFs which are a direct child of MF
- Byte 16 shall indicate the correct number of EFs which are a direct child of MF
- f) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.
- g) The ME simulator send a SELECT command to the SIM to select DF_{GSM} .
- h) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR3]:

- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining
- i) The ME simulator sends a DISABLE CHV command to the SIM.
- j) The ME simulator send a SELECT command to the SIM to select DF_{GSM}.
- k) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR3]:

- Bit 8 of byte 14 shall be 1 indicating that CHV1 is disabled
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- 1) The ME simulator sends a SELECT command to the SIM to select the MF.
- m) The ME simulator sends a SELECT command to the SIM to select DF_{TELECOM}.
- n) The ME simulator sends a ENABLE CHV command to the SIM.
- o) The ME simulator sends a SELECT command to the SIM to select EF_{ADN}.
- p) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR4]:

- Bytes 5 and 6 shall indicate that EF_{ADN} is the currently selected file.
- Bytes 9 through 11 shall state the access conditions in subclause 10.3.1 of GSM 11.11 [1].
- Bit 1 of byte 12 shall be 1 indicating that the file is not invalidated.
- Byte 14 shall be '01' indicating linear fixed structure.
- Byte 15 shall indicate the length of the records.
- q) The ME simulator sends a VERIFY CHV command to the SIM with correct CHV2.
- r) The ME simulator sends an INVALIDATE command to the SIM.
- s) The ME simulator sends a SELECT command to the SIM to re-select EF_{ADN}.
- t) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall indicate the following [CR4]:

- Bit 1 of byte 12 shall be 0 indicating that the file is invalidated.
- u) The ME simulator sends a REHABILITATE command to the SIM.
- v) The ME simulator sends a SELECT command to the SIM to select DF_{GSM} .
- w) The ME simulator sends a SELECT command to the SIM to select EF_{ACM}.
- x) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR4]:

- Byte 14 shall be '03' indicating cyclic structure.
- y) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The response data shall be '11 11 11' [CR5].

6.5.2 STATUS function

6.5.2.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.2.2 Conformance requirement

CR1 The STATUS function shall output the file ID, total memory space available, CHV enabled/disabled indicator and CHV status of the currently selected MF or DF.

Reference: GSM 11.11 [1], subclause 8.2.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_STATUS

6.5.2.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.5.2.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure and Requirements

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to select DF_{GSM}.
- c) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR1]:

- Bytes 5 and 6 shall indicate that DF_{GSM} is the currently selected file
- Byte 7 shall be '02' indicating a DF
- Byte 13 shall be less than or equal to SW2 from step b) minus 13
- Bit 8 of byte 14 shall be 0 indicating that CHV1 is enabled
- Byte 15 shall indicate the correct number of DFs which are a direct child of DF_{GSM}
- Byte 16 shall indicate the correct number of EFs which are a direct child of DF_{GSM}
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining if CHV1 is initialised
- Bits 1 through 4 of byte 21 shall indicate three VERIFY CHV2 attempts remaining if CHV2 is initialised
- Bits 1 through 4 of byte 20 shall indicate ten UNBLOCK CHV1 attempts remaining if CHV1 is initialised
- Bits 1 through 4 of byte 22 shall indicate ten UNBLOCK CHV2 attempts remaining if CHV2 is initialised
- d) The ME simulator sends a SELECT command to the SIM to select the MF.
- e) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR1]:

- Byte 7 shall be '01' indicating MF
- Byte 15 shall indicate the correct number of DFs which are a direct child of MF
- Byte 16 shall indicate the correct number of EFs which are a direct child of MF
- f) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.
- g) The ME simulator send a SELECT command to the SIM to select DF_{GSM}.
- h) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR1]:

- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining
- i) The ME simulator sends a DISABLE CHV command to the SIM.

- j) The ME simulator send a SELECT command to the SIM to select DF_{GSM}.
- k) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR1]:

- Bit 8 of byte 14 shall be 1 indicating that CHV1 is disabled
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.

6.5.3 READ BINARY function

6.5.3.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.3.2 Conformance requirement

- CR1 The READ BINARY function shall read a string of bytes from the current transparent EF.
- CR2 The function shall accept as an input, the relative address (offset) and the length (in bytes) of the string.
- CR3 The function shall output the string of bytes.
- CR4 The function shall only be performed if the READ access condition for the current EF is satisfied.

Reference: GSM 11.11 [1], subclause 8.3.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_RDBIN

6.5.3.3 Test purpose

To verify that the READ BINARY function conforms to the above requirements.

6.5.3.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{Kc} contains the data string: 'A1 A2 A3 A4 A5 A6 A7 A8 A9'.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- c) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled [CR4].

- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1-4].

The data string returned shall be 'A1 A2 A3 A4 A5 A6 A7 A8 A9' [CR1-4].

f) The ME simulator sends a READ BINARY command using a length of 1 byte to the SIM.

The data string returned shall be 'A1'.

- g) The ME simulator sends a READ BINARY command using an offset of '00 01' and length 8 byte to the SIM. *The data string returned shall be 'A2 A3 A4 A5 A6 A7 A8 A9' [CR1-4].*
- h) The ME simulator sends a READ BINARY command using a length of 10 bytes to the SIM.

 The status condition returned by the SIM shall be SW1='67', SW2='09' or '00' incorrect parameter P3.
- i) The ME simulator sends a READ BINARY command using an offset of '00 0A' and length 1 byte to the SIM. The status condition returned by the SIM shall be SW1='6B', SW2='XX' incorrect parameter P1 or P2.
- j) The ME simulator sends a READ BINARY command using an offset of '00 05' and length 5 bytes to the SIM. *An error status condition shall be returned by the SIM.*

6.5.4 UPDATE BINARY function

6.5.4.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.4.2 Conformance requirement

- 1) The UPDATE BINARY function shall update the current transparent EF with a string of bytes.
- 2) The function shall accept as an input, the relative address (offset), the length (in bytes) of the string, and the string of bytes.
- 3) The function shall only be performed if the UPDATE access condition for the current EF is satisfied.

Reference: GSM 11.11 [1], subclause 8.4.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_UPBIN

6.5.4.3 Test purpose

To verify that the UPDATE BINARY function conforms to the above requirements.

6.5.4.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{Kc} contains the data string: 'FF FF FF FF FF FF FF FF FF.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM}.
- c) The ME simulator sends an UPDATE BINARY command using a length of 9 bytes, and data string 'A1 A2 A3 A4 A5 A6 A7 A8 A9' to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR3].

- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.

The data string returned shall be 'FF FF FF FF FF FF FF FF.'.

f) The ME simulator sends an UPDATE BINARY command using a length of 9 bytes, and data string 'A1 A2 A3 A4 A5 A6 A7 A8 A9' to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' [CR3].

- g) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.
 - The data string returned shall be 'A1 A2 A3 A4 A5 A6 A7 A8 A9' [CR1].
- h) The ME simulator sends an UPDATE BINARY command using a length of 1 byte, and data string 'E4' to the SIM.
- i) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.
 - The data string returned shall be 'E4 A2 A3 A3 A4 A5 A6 A7 A8 A9' [CR1].
- j) The ME simulator sends an UPDATE BINARY command using an offset of '00 01', a length 1 byte, and data string 'E5' to the SIM.
- k) The ME simulator sends a READ BINARY command using a length of 9 bytes to the SIM.

The data string returned shall be 'E4 E5 A3 A3 A4 A5 A6 A7 A8 A9' [CR1].

6.5.5 READ RECORD function

6.5.5.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.5.2 Conformance requirement

- CR1 The READ RECORD function shall read one complete record in the current linear fixed or cyclic EF.
- CR2 The function shall accept as an input, the mode, record number if absolute mode, and the length of the record.
- CR3 The function shall output the record specified by the mode.
- CR4 The function shall only be performed if the READ access condition for the current EF is satisfied.
- CR5 If the mode is CURRENT, the current record is read.
- CR6 If the mode is CURRENT, the record pointer is not affected.
- CR7 If the mode is ABSOLUTE, the record given by the record number is read.
- CR8 If the mode is ABSOLUTE, the record pointer is not affected.
- CR9 If the mode is NEXT, the record pointer is incremented before the function is performed and the pointed record is read.
- CR10 If the mode is NEXT, and the record pointer has not been previously been set within the selected EF, the **first** record shall be read and the record pointer set to this record.
- CR11 If the mode is NEXT, and the record pointer addresses the last record in a linear fixed EF, the record pointer shall not change and no data shall be read.
- CR12 If the mode is NEXT, and the record pointer addresses the last record in a cyclic EF, the **first** record shall be read and the record pointer set to this record.
- CR13 If the mode is PREVIOUS, the record pointer is decremented before the function is performed and the pointed record is read.
- CR14 If the mode is PREVIOUS, and the record pointer has not been previously been set within the selected EF, the **last** record shall be read and the record pointer set to this record.

CR15 If the mode is PREVIOUS, and the record pointer addresses the first record in a linear fixed EF, the record pointer shall not change and no data shall be read.

CR16 If the mode is PREVIOUS, and the record pointer addresses the first record in a cyclic EF, the **last** record shall be read and the record pointer set to this record.

CR17 The record pointer shall not be changed if the function is unsuccessful.

CR18 For modes NEXT and PREVIOUS, P1 has no significance and shall not be interpreted by the SIM.

Reference: GSM 11.11 [1], subclause 8.5.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_RDREC

6.5.5.3 Test purpose

To verify that the READ RECORD function conforms to the above requirements using two test procedures.

NOTE: CR12 and CR16 can only be tested if EF_{ACM} is present.

6.5.5.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

2) The records in EF_{ADN} contain the following data for the first 16 bytes:

First record: '10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F'

Second record: '20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F'

Second last record: 'E0 E1 E2 E3 E4 E5 E6 E7 E8 E9 EA EB EC ED EE EF'

Last record: 'F0 F1 F2 F3 F4 F5 F6 F7 F8 F9 FA FB FC FD FE FF'

The data for the remainder of these two records and for all other records (if any) is 'FF'.

3) The records in EF_{ACM} contain the following data:

Record 1: '01 01 01' (last updated record)

Record 2: '02 02 02'

Record 3: '03 03 03'

...and so on for all records...

Record X: '0X 0X 0X' (first updated record)

Test procedure 1 and Requirements

a) The ME simulator resets the SIM.

b) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.

c) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR4].

d) The ME simulator sends a VERIFY CHV command to the SIM.

e) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR4].

The record data returned shall be that of the first record in EF_{ADN} [CR1-4,7].

- f) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- g) The ME simulator sends a READ RECORD command using NEXT mode to the SIM.
- h) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM.

The record data returned shall be that of the second record in EF_{ADN} [CR7].

i) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the first record in EF_{ADN} [CR5,8].

j) The ME simulator sends a READ RECORD command using NEXT mode to the SIM.

The record data returned shall be that of the second record in EF_{ADN} [CR6].

- k) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record to the SIM. The record data returned shall be that of the last record in EF_{ADN} [CR7].
- l) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record $+\ 1$ to the SIM.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range.

m) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the second record in EF_{ADN} [CR17].

- n) The ME simulator sends SELECT commands to the SIM to select EF_{ACM} under DF_{GSM}.
- o) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the first record in EF_{ACM} [CR1,5].

p) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 3 to the SIM.

The record data returned shall be that of the record 3 in EF_{ACM} [CR1,7].

q) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record + 1 to the SIM.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range.

r) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the first record in EF_{ACM} [CR17].

Test procedure 2 and Requirements

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a VERIFY CHV command to the SIM.
- c) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- d) The ME simulator sends a READ RECORD command using NEXT mode to the SIM.

The record data returned shall be that of the first record in EF_{ADN} [CR10].

e) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the first record in EF_{ADN} [CR10].

f) The ME simulator sends a READ RECORD command using NEXT mode to the SIM with P1 = 'FF'.

The status condition returned by the SIM shall be SWI='90', SW2='00' - normal ending of command [CR18].

The record data returned shall be that of the second record in EF_{ADN} [CR9].

- g) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

 The record data returned shall be that of the second record in EF_{ADN} [CR9].
- h) The ME simulator sends a SELECT command to the SIM to select EF_{ADN}.
- i) The ME simulator sends a READ RECORD command using PREVIOUS mode to the SIM. The record data returned shall be that of the last record in EF_{ADN} [CR14].
- j) The ME simulator sends a READ RECORD command using NEXT mode to the SIM.

 The status condition returned by the SIM shall be SW1='94', SW2='02' out of range [CR11].
- k) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM. The record data returned shall be that of the last record in EF_{ADN} [CR11].
- 1) The ME simulator sends a READ RECORD command using PREVIOUS mode with P1 = 'FF' to the SIM. The status condition returned by the SIM shall be SW1='90', SW2='00' normal ending of command [CR18]. The record data returned shall be that of the second last record in EF_{ADN} [CR13].
- m) The ME simulator sends a SELECT command to the SIM to select EF_{ADN}.
- n) The ME simulator sends a READ RECORD command using NEXT mode to the SIM.
- o) The ME simulator sends a READ RECORD command using PREVIOUS mode to the SIM.

 The status condition returned by the SIM shall be SW1='94', SW2='02' out of range [CR15].
- p) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM. The record data returned shall be that of the first record in EF_{ADN} [CR15].
- q) The ME simulator sends SELECT commands to the SIM to select EF_{ACM}.
- r) The ME simulator sends a READ RECORD command using PREVIOUS mode to the SIM. The record data returned shall be that of the last record (record X) in EF_{ACM} [CR16].
- s) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM. The record data returned shall be that of the last record (record X) in EF_{ACM} [CR16].
- t) The ME simulator sends a READ RECORD command using NEXT mode to the SIM. The record data returned shall be that of the first record (record 1) in EF_{ACM} [CR12].
- u) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM. The record data returned shall be that of the first record (record 1) in EF_{ACM} [CR12].

6.5.6 UPDATE RECORD function

6.5.6.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.6.2 Conformance requirement

CR1 The UPDATE RECORD function shall update one complete record in the current linear fixed or cyclic EF.

- CR2 The function shall accept as an input, the mode, record number if absolute mode, the length of the record, and the data used for updating the record.
- CR3 The function shall only be performed if the UPDATE access condition for the current EF is satisfied.
- CR4 For cyclic files, only PREVIOUS mode is allowed.
- CR5 If the mode is CURRENT, the current record is updated
- CR6 If the mode is CURRENT, the record pointer is not affected.
- CR7 If the mode is ABSOLUTE, the record given by the record number is updated.
- CR8 If the mode is ABSOLUTE, the record pointer is not affected.
- CR9 If the mode is NEXT, the record pointer is incremented before the function is performed and the pointed record is updated.
- CR10 If the mode is NEXT, and the record pointer has not previously been set within the selected EF, the **first** record shall be updated and the record pointer set to this record.
- CR11 If the mode is NEXT, and the record pointer addresses the last record, the record pointer shall not change and no record shall be updated.
- CR12 If the mode is PREVIOUS, the record pointer is decremented before the function is performed and the pointed record is updated.
- CR13 If the mode is PREVIOUS, and the record pointer has not previously been set within the selected EF, the **last** record shall be updated and the record pointer set to this record.
- CR14 If the mode is PREVIOUS, and the record pointer addresses the first record, the record pointer shall not change and no record shall be updated.
- CR15 If the mode is PREVIOUS and the EF is a cyclic file, the oldest record is updated, the record pointer set to this record, and this record shall become the first record.
- CR16 The record pointer shall not be changed if the function is unsuccessful.
- CR17 For modes NEXT and PREVIOUS, P1 has no significance and shall not be interpreted by the SIM.

Reference: GSM 11.11 [1], subclause 8.6.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_UPREC

6.5.6.3 Test purpose

To verify that the UPDATE RECORD function conforms to the above requirements for the different modes available.

NOTE: CR4 and CR13 can only be tested if EF_{ACM} is present.

6.5.6.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) The records in EF_{ADN} contain the following data for the first 16 bytes:

First record: '10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F'

Second record: '20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F'

Second last record: 'E0 E1 E2 E3 E4 E5 E6 E7 E8 E9 EA EB EC ED EE EF'

Last record: 'F0 F1 F2 F3 F4 F5 F6 F7 F8 F9 FA FB FC FD FE FF'

The data for the remainder of these two records and for all other records (if any) is 'FF'.

3) The records in EF_{ACM} contain the following data:

Record 1: '01 01 01' (last updated record)

Record 2: '02 02 02'

Record 3: '03 03 03'

...and so on for all records...

Record X: '0X 0X 0X' (first updated record)

Test procedure 1 and Requirements

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- c) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with record 1 to the SIM. The data used is 'C1' for all bytes.

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled [CR3].

- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with record 1 to the SIM. The data used is 'C2' for all bytes.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR3].

- f) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM. *The record data returned shall be 'C2' for all bytes [CR1-3,7]*.
- g) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under $DF_{TELECOM}$.
- h) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'D0' for all bytes.
- i) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with record 2 to the SIM. The data used is 'C3' for all bytes.
- j) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM. The record data returned shall be 'C3' for all bytes[CR7].
- k) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'C4' for all bytes.
- 1) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM.

 The record data returned shall be 'C4' for all bytes [CR5,8].
- m) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'C5' for all bytes.
- n) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM.

 The record data returned shall be 'C5' for all bytes [CR8].
- o) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with the last record to the SIM. The data used is 'C7' for all bytes.
- p) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record to the SIM.

The record data returned shall be 'C7' for all bytes [CR7].

q) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with the last record $+\ 1$ to the SIM. The data used is 'C8' for all bytes.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range.

- r) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'C9' for all bytes.
- s) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM.

 The record data returned shall be 'C9' for all bytes [CR16].
- t) The ME simulator sends SELECT commands to the SIM to select EF_{ACM} under DF_{GSM}.
- u) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'CA' for all bytes.

The status condition returned by the SIM shall be SW1='6B', SW2='XX' - file is inconsistent with the command [CR4].

v) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with record 3 to the SIM. The data used is 'CB' for all bytes.

The status condition returned by the SIM shall be SW1='6B', SW2='XX' - file is inconsistent with the command [CR4].

Test procedure 2 and Requirements

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a VERIFY CHV command to the SIM.
- c) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- d) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'C2' for all bytes.
- e) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM. The record data returned shall be 'C2' for all bytes [CR10].
- f) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'C3' for all bytes.
- g) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM. The record data returned shall be 'C3' for all bytes [CR10].
- h) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM with P1 = FF'. The data used is 'C4' for all bytes.

The status condition returned by the SIM shall be SWI='90', SW2='00' - normal ending of command [CR17].

- i) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM. The record data returned shall be 'C4' for all bytes [CR9,17].
- j) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'C5' for all bytes.
- k) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 2 to the SIM. The record data returned shall be 'C5' for all bytes [CR9].
- 1) The ME simulator sends a SELECT command to the SIM to select EF_{ADN}.

- m) The ME simulator sends an UPDATE RECORD command using PREVIOUS mode to the SIM. The data used is 'C6' for all bytes.
- n) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record to the SIM. The record data returned shall be 'C6' for all bytes [CR13].
- o) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'C7' for all bytes.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range [CR11].

- p) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'C8' for all bytes.
- q) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the last record to the SIM. The record data returned shall be 'C8' for all bytes [CR16].
- r) The ME simulator sends an UPDATE RECORD command using PREVIOUS mode with P1 = FF to the SIM. The data used is 'C9' for all bytes.

The status condition returned by the SIM shall be SWI='90', SW2='00' - normal ending of command [CR17].

s) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the second last record to the SIM.

The record data returned shall be 'C9' for all bytes [CR12,17].

- t) The ME simulator sends a SELECT command to the SIM to select EF_{ADN}.
- u) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'CA' for all bytes.
- v) The ME simulator sends an UPDATE RECORD command using PREVIOUS mode to the SIM. The data used is 'CB' for all bytes.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range [CR13].

- w) The ME simulator sends an UPDATE RECORD command using CURRENT mode to the SIM. The data used is 'CC' for all bytes.
- x) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM. The record data returned shall be 'CC' for all bytes [CR16].
- y) The ME simulator sends SELECT commands to the SIM to select EF_{ACM} under DF_{GSM}.
- z) The ME simulator sends an UPDATE RECORD command using PREVIOUS mode to the SIM. The data used is 'CD' for all bytes.
- aa) The ME simulator sends a READ RECORD command using ABSOLUTE mode with the first record (record 1) to the SIM.

The record data returned shall be 'CD' for all bytes [CR15].

ab) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'C2' for all bytes.

The status condition returned by the SIM shall be SW1='6B', SW2='XX' - file is inconsistent with the command [CR4].

6.5.7 SEEK function

6.5.7.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.7.2 Conformance requirement

- CR1 The SEEK function shall search through the current linear fixed EF to find a record starting with the given pattern.
- CR2 The function shall accept as an input, the type and mode, pattern and length of pattern.
- CR3 The SEEK function shall support both type 1 and type 2.
- CR4 For a type 2 SEEK, the function shall output the record number.
- CR5 The SEEK function shall support the following modes:
- a) from the beginning forwards
- b) from the end backwards
- c) from the next location forwards
- d) from the previous location backwards
- CR6 The function shall only be performed if the READ access condition for the current EF is satisfied.
- CR7 If the parameter P3 indicates a pattern-length greater than the record length, the SIM shall send the status information 'incorrect parameter P3'.
- CR8 The SIM shall be able to accept any pattern length from 1 to 16 bytes inclusive.
- CR9 For a SEEK function of next location forwards, if the record pointer has not been previously set within the selected linear fixed EF, the search begins with the **first** record.
- CR10 For a SEEK function of previous location backwards, if the record pointer has not been previously set within the selected linear fixed EF, the search begins with the **last** record.
- CR11 After a successful SEEK function, the record pointer shall be set to the record in which the pattern was found.
- CR12 The record pointer shall not be changed by an unsuccessful SEEK function.

Reference: GSM 11.11 [1], subclause 8.7.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_SEEK

6.5.7.3 Test purpose

To verify that the SEEK function conforms to the above requirements for the different modes available.

6.5.7.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) The records in EF_{ADN} contain the following data for the first 16 bytes:

record 1: 'A0 A1 A2 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D'

record 2: 'A0 A1 A2 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D'

The data for the remainder of these two records and for all other records is 'FF'.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- c) The ME simulator sends a type 1 SEEK command using the 'from the beginning forwards' mode, a pattern-length of 1, and pattern 'A0' to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR6].

- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends a type 1 SEEK command using the 'from the beginning forwards' mode, a pattern-length of 1, and pattern 'A0' to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1-3,6].

- f) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under $DF_{TELECOM}$.
- g) The ME simulator sends a type 2 SEEK command using the 'from the beginning forwards' mode, a pattern-length of 1, and pattern 'A0' to the SIM.

The status condition returned by the SIM shall be SW1='9F', SW2='01' [CR1-3,8].

h) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '01' indicating that the first record has been found [CR4].

- i) The ME simulator sends a type 2 SEEK command using the 'from the beginning forwards' mode, a pattern-length of 3, and pattern 'A0 A1 A2' to the SIM.
- j) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '01' indicating that the first record has been found [CR5a].

- k) The ME simulator sends a type 2 SEEK command using the 'from the end backwards' mode, a pattern-length of 3, and pattern 'A0 A1 A2' to the SIM.
- 1) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '02' indicating that the second record has been found [CR5b].

m) The ME simulator sends a type 2 SEEK command using the 'from the previous location backwards' mode, a pattern-length of 16, and the following pattern to the SIM:

'A0 A1 A2 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D'

The status condition returned by the SIM shall be SW1='9F', SW2='01' [CR8].

n) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '01' indicating that the first record has been found [CR5d].

- o) The ME simulator sends a type 2 SEEK command using the 'from the next location forwards' mode, a pattern-length of 3, and pattern 'A0 A1 A2' to the SIM.
- p) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '02' indicating that the second record has been found [CR5c].

q) The ME simulator sends a SELECT command to the SIM to select EF_{ADN} again.

- r) The ME simulator sends a type 2 SEEK command using the 'from the next location forwards' mode, a pattern-length of 3, and pattern 'A0 A1 A2' to the SIM.
- s) The ME simulator sends a GET RESPONSE command to the SIM to retrieve the single byte of response data.

 The response data shall be '01' indicating that the first record has been found [CR9].
- t) The ME simulator sends a SELECT command to the SIM to select EF_{ADN} again.
- u) The ME simulator sends a type 2 SEEK command using the 'from the previous location backwards' mode, a pattern-length of 3, and pattern 'A0 A1 A2' to the SIM.
- v) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '02' indicating that the second record has been found [CR10].

w) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the second record in EF_{ADN} [CR11].

x) The ME simulator sends a type 2 SEEK command using the 'from the beginning forwards' mode, a pattern-length of 5, and pattern 'A1 A2 11 12 13' to the SIM.

The status condition returned by the SIM shall be SW1='94', SW2='04' - pattern not found [CR1].

y) The ME simulator sends a READ RECORD command using CURRENT mode to the SIM.

The record data returned shall be that of the second record in EF_{ADN} [CR12].

- z) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- aa) The ME simulator sends a type 2 SEEK command using the 'from the beginning forwards' mode, a pattern-length of one more than the record size of EF_{ADN} , and 'FF' for all pattern bytes to the SIM.

The status condition returned by the SIM shall be SW1='67', SW2='XX' - incorrect parameter P3 [CR7].

6.5.8 INCREASE function

6.5.8.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] and containing EF_{ACM} and EF_{ACMMAX} to support all functions described therein.

6.5.8.2 Conformance requirement

- CR1 This function shall add the value given to the value of the last increased/updated record of the current cyclic EF and store the result into the oldest record.
- CR2 The record pointer shall be set to this record and this record becomes the first record.
- CR3 The function shall only be used if the INCREASE access condition is fulfilled.
- CR4 The function shall accept as an input, the value to be added.
- CR5 The function shall output the value of the increased record and the value which has been added.
- CR6 The SIM shall not perform the INCREASE if the result would exceed the maximum value of the record (represented by all bytes set to 'FF).

Reference: GSM 11.11 [1], subclause 8.8.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_INC

6.5.8.3 Test purpose

To verify that the INCREASE function conforms to the above requirements.

6.5.8.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) Each record in EF_{ACM} contains the data '00 00 01'.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{ACM} under DF_{GSM}.
- c) The ME simulator sends an INCREASE command with value '00 00 02' to the SIM.

 The status condition returned by the SIM shall be SW1='98', SW2='04' access condition not fulfilled [CR3].
- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends an INCREASE command with value '00 00 03' to the SIM. The status condition returned by the SIM shall be SWI='9F', SW2='06' [CR4].
- f) The ME simulator sends a GET RESPONSE command to the SIM. The response data shall be '00 00 04 00 00 03' [CR1,5].
- g) The ME simulator sends an INCREASE command with value '01 02 00' to the SIM.
- h) The ME simulator sends a GET RESPONSE command to the SIM.

 The response data shall be '01 02 04 01 02 00' [CR1].
- i) The ME simulator sends a READ RECORD command using ABSOLUTE mode with record 1 to the SIM. The data read shall be '01 02 04' [CR2].
- j) The ME simulator sends an INCREASE command with value 'FF 00 00' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='50' - increase cannot be performed - Max value reached [CR6].

- k) The ME simulator sends an INCREASE command with value '00 FF FD' to the SIM.
- l) The ME simulator sends a GET RESPONSE command to the SIM.

The response data shall be '02 02 01 00 FF FD' [CR5].

6.5.9 VERIFY CHV function

6.5.9.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.9.2 Conformance requirement

- CR1 This function shall verify the CHV presented by comparing it with the one stored in the SIM.
- CR2 The function shall accept as input, an indication of CHV1/CHV2 and the CHV.

CR3 The verification process shall be subject to the following conditions being fulfilled:

- a) CHV is not disabled
- b) CHV is not blocked

CR4 If the access condition for a function to be performed on a file is CHV1 or CHV2, then a successful verification of the relevant CHV shall be required prior to the use of the function on this file unless the CHV is disabled.

CR5 If the CHV presented is correct, the number of remaining CHV attempts for that CHV shall be reset to its initial value 3.

CR6 If the CHV presented is false, the number of remaining CHV attempts for that CHV shall be decremented.

CR7 After 3 consecutive false CHV attempts, not necessarily in the same card session, the respective CHV shall be blocked and the access condition never fulfilled until the UNBLOCK CHV function has been successfully performed on the respective CHV.

Reference: GSM 11.11 [1], subclause 8.9.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_VERCHV

6.5.9.3 Test purpose

To verify that the VERIFY CHV function conforms to the above requirements.

NOTE: This function is only tested for CHV1. It is assumed that if the function operates correctly for CHV1, it will also operate correctly for CHV2 or other CHV.6.5.9.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) CHV1 on the SIM is set to '000000000'.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- c) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR4].

d) The ME simulator sends a VERIFY CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1,2].

e) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR4].

f) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' -unsuccessful CHV verification, at least one attempt left.

g) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR6]:

- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining.

- h) The ME simulator sends a VERIFY CHV command to the SIM.
- i) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR5]:

- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- j) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' -unsuccessful CHV verification, at least one attempt left.

k) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' -unsuccessful CHV verification, at least one attempt left.

- 1) The ME simulator resets the SIM.
- m) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful CHV verification, no attempt left[CR7].

- n) The ME simulator resets the SIM.
- o) The ME simulator sends a VERIFY CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - CHV blocked [CR3b,7].

- p) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- q) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - CHV blocked [CR7].

r) The ME simulator sends an UNBLOCK CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR7].

- s) The ME simulator sends a DISABLE CHV command to the SIM.
- t) The ME simulator resets the SIM.
- u) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- v) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR4].

w) The ME simulator sends a VERIFY CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='08' - in contradiction with CHV status [CR3].

6.5.10 CHANGE CHV function

6.5.10.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.10.2 Conformance requirement

CR1 This function shall assign a new value to the relevant CHV, subject to the following conditions being fulfilled:

- a) CHV is not disabled
- b) CHV is not blocked
- CR2 The function shall accept as input, an indication of CHV1/CHV2 and the old and new CHV.
- CR3 If the old CHV presented is correct, the number of remaining CHV attempts for that CHV shall be reset to its initial value 3 and the new value for the CHV shall become valid.
- CR4 If the old CHV presented is false, the number of remaining CHV attempts for that CHV shall be decremented and the value of the CHV shall remain unchanged.
- CR5 After 3 consecutive false CHV presentations, not necessarily in the same card session, the respective CHV shall be blocked and the access condition never fulfilled until the UNBLOCK CHV function has been successfully performed on the respective CHV.

Reference: GSM 11.11 [1], subclause 8.10.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_CHCHV

6.5.10.3 Test purpose

To verify that the CHANGE CHV function conforms to the above requirements.

NOTE: This function is only tested for CHV1. It is assumed that if the function operates correctly for CHV1, it will also operate correctly for CHV2 or other CHV.

6.5.10.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) CHV1 on the SIM is set to '000000000'.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a CHANGE CHV command with an **incorrect** old CHV1 of '111111111' and new CHV1 of '33333333' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

c) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR4]:

- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining.
- d) The ME simulator sends a CHANGE CHV command with an old CHV1 of '00000000' and new CHV1 of '33333333' to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR2].

e) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR3]:

- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- f) The ME simulator sends a CHANGE CHV command with an **incorrect** old CHV1 of '00000000' and new CHV1 of '55555555' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

g) The ME simulator sends a CHANGE CHV command with an **incorrect** old CHV1 of '55555555' and new CHV1 of '33333333' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

- h) The ME simulator resets the SIM.
- i) The ME simulator sends a CHANGE CHV command with an **incorrect** old CHV1 of '00000000' and new CHV1 of '55555555' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful CHV verification, no attempt left [CR5].

- j) The ME simulator resets the SIM.
- k) The ME simulator sends a CHANGE CHV command with an old CHV1 of '33333333' and new CHV1 of '55555555' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - CHV blocked [CR1b,5].

- 1) The ME simulator sends an UNBLOCK CHV command with new CHV1 of '55555555' to the SIM.

 The status condition returned by the SIM shall be SW1='90', SW2='00' normal ending of command [CR5].
- m) The ME simulator sends a DISABLE CHV command to the SIM.
- n) The ME simulator resets the SIM.
- o) The ME simulator sends a CHANGE CHV command with an old CHV1 '55555555' and new CHV1 of '77777777' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='08' - in contradiction with CHV status [CR1a].

p) The ME simulator sends an ENABLE CHV command to the SIM with CHV1 '55555555'.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1a].

6.5.11 DISABLE CHV function

6.5.11.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.11.2 Conformance requirement

- CR1 The successful execution of this function shall have the effect that files protected by CHV1 are now accessible as if they were marked 'ALWAYS'.
- CR2 The function shall accept as input, CHV1.
- CR3 This function shall not be executed by the SIM when CHV1 is already disabled or blocked.
- CR4 If the CHV1 presented is correct, the number of remaining CHV1 attempts shall be reset to its initial value 3 and CHV1 shall be disabled.
- CR5 If the CHV1 presented is false, the number of remaining CHV1 attempts shall be decremented and CHV1 shall remain enabled.

CR6 After 3 consecutive false CHV1 presentations, not necessarily in the same card session, CHV1 shall be blocked and the access condition never fulfilled until the UNBLOCK CHV function has been successfully performed on CHV1.

Reference: GSM 11.11 [1], subclause 8.11.

Test Group Reference (TGR): TGR SIM FN

Test Procedure Reference (TPR): TPR_SIM_FN_DISCHV

6.5.11.3 Test purpose

To verify that the DISABLE CHV function conforms to the above requirements.

6.5.11.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM} .
- c) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled.

d) The ME simulator sends a DISABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left [CR5].

e) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR5].

f) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR5]:

- Bit 8 of byte 14 shall be 0 indicating that CHV1 is still enabled.
- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining.
- g) The ME simulator sends a DISABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR2].

h) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR4]:

- Bit 8 of byte 14 shall be 1 indicating that CHV1 is now disabled.
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- i) The ME simulator sends an ENABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command.

j) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1].

k) The ME simulator sends a DISABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

1) The ME simulator sends a DISABLE CHV command with **incorrect** CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

- m) The ME simulator resets the SIM.
- n) The ME simulator sends a DISABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful CHV verification, no attempt left [CR6].

- o) The ME simulator resets the SIM.
- p) The ME simulator sends a DISABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - CHV blocked [CR3,6].

q) The ME simulator sends an UNBLOCK CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR6].

- r) The ME simulator sends a DISABLE CHV command to the SIM.
- s) The ME simulator sends a DISABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='08' - in contradiction with CHV status [CR3].

6.5.12 ENABLE CHV function

6.5.12.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.12.2 Conformance requirement

- CR1 The successful execution of this function shall have the effect that files accessible as if they were marked 'ALWAYS' due to CHV1 being disabled are now protected by CHV1.
- CR2 The function shall accept as input, CHV1.
- CR3 This function shall not be executed by the SIM when CHV1 is already enabled or blocked.
- CR4 If the CHV1 presented is correct, the number of remaining CHV1 attempts shall be reset to its initial value 3 and CHV1 shall be enabled.
- CR5 If the CHV1 presented is false, the number of remaining CHV1 attempts shall be decremented and CHV1 shall remain disabled.
- CR6 After 3 consecutive false CHV1 presentations, not necessarily in the same card session, CHV1 shall be blocked and the access condition never fulfilled until the UNBLOCK CHV function has been successfully performed on CHV1.

Reference: GSM 11.11 [1], subclause 8.12.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR SIM FN ENCHV

6.5.12.3 Test purpose

To verify that the ENABLE CHV function conforms to the above requirements.

6.5.12.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) CHV1 on the SIM is disabled.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM}.
- c) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

 The status condition returned by the SIM shall be SW1='90', SW2='00' normal ending of command.
- d) The ME simulator sends an ENABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

e) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SWI='90', SW2='00' - access condition not fulfilled [CR1].

f) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR5]:

- Bit 8 of byte 14 shall be 1 indicating that CHV1 is still disabled.
- Bits 1 through 4 of byte 19 shall indicate two VERIFY CHV1 attempts remaining.
- g) The ME simulator sends an ENABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR2].

h) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR4]:

- Bit 8 of byte 14 shall be 0 indicating that CHV1 is now enabled.
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- i) The ME simulator resets the SIM.
- j) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM} .
- k) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled [CR1].

- 1) The ME simulator sends a DISABLE CHV command to the SIM.
- m) The ME simulator sends an ENABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

n) The ME simulator sends an ENABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

- o) The ME simulator resets the SIM.
- p) The ME simulator sends an ENABLE CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful CHV verification, no attempt left [CR6].

- q) The ME simulator resets the SIM.
- r) The ME simulator sends an ENABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' orSW1='98', SW2='08' -CHV blocked [CR3,6].

s) The ME simulator sends an UNBLOCK CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR6].

t) The ME simulator sends ENABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='08' - in contradiction with CHV status [CR3].

6.5.13 UNBLOCK CHV function

6.5.13.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.13.2 Conformance requirement

- CR1 This function shall unblock a CHV which has been blocked by 3 consecutive wrong CHV presentations.
- CR2 The function shall accept as input, an indication of CHV1/CHV2, the UNBLOCK CHV and the new CHV.
- CR3 This function shall be performed regardless of whether or not the relevant CHV is blocked.
- CR4 If the UNBLOCK CHV presented is correct, the new CHV value, presented together with the UNBLOCK CHV is stored in the relevant EFCHV, the number of remaining UNBLOCK CHV attempts for that UNBLOCK CHV is reset to its initial value 10 and the number of remaining CHV attempts for that CHV is reset to its initial value 3.
- CR5 After a successful unblocking attempt, the CHV shall be enabled, and the relevant access condition level satisfied.
- CR6 If the presented UNBLOCK CHV is false, the number of remaining UNBLOCK CHV attempts for that UNBLOCK CHV shall be decremented.
- CR7 After 10 consecutive false UNBLOCK CHV presentations, not necessarily in the same card session, the respective UNBLOCK CHV shall be blocked.
- CR8 A false UNBLOCK CHV shall have no effect on the status of the respective CHV itself.

Reference: GSM 11.11 [1], subclause 8.13.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_UNCHV

6.5.13.3 Test purpose

To verify that the UNBLOCK CHV function conforms to the above requirements.

NOTE 1: CR1 is tested in subclauses 6.5.9, 6.5.10, 6.5.11 and 6.5.12...

NOTE 2: This function is only tested for CHV1. It is assumed that if the function operates correctly for CHV1, it will also operate correctly for CHV2 or other CHV.

6.5.13.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure 1

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- c) The ME simulator sends a VERIFY CHV command to the SIM.
- d) The ME simulator sends an UNBLOCK CHV command with incorrect UNBLOCK CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful UNBLOCK CHV verification, at least one attempt left.

e) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR6,8]:

- Bit 8 of byte 14 shall be 0 indicating that CHV1 is enabled.
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- Bits 1 through 4 of byte 20 shall indicate nine UNBLOCK CHV1 attempts remaining.
- f) The ME simulator sends a DISABLE CHV command to the SIM.
- g) The ME simulator sends an UNBLOCK CHV command with incorrect UNBLOCK CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful UNBLOCK CHV verification, at least one attempt left.

h) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR6,8]:

- Bit 8 of byte 14 shall be 1 indicating that CHV1 is still disabled.
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- Bits 1 through 4 of byte 20 shall indicate eight UNBLOCK CHV1 attempts remaining.
- i) The ME simulator sends an UNBLOCK CHV command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR2].

i) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR4,5]:

- Bit 8 of byte 14 shall be 0 indicating that CHV1 is enabled
- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- Bits 1 through 4 of byte 20 shall indicate ten UNBLOCK CHV1 attempts remaining.

k) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

- 1) The ME simulator resets the SIM.
- m) The ME simulator sends an UNBLOCK CHV command to the SIM.
- n) The ME simulator sends a STATUS command to the SIM.

The following shall be true of the response data [CR4]:

- Bits 1 through 4 of byte 19 shall indicate three VERIFY CHV1 attempts remaining.
- o) The ME simulator sends SELECT commands to the SIM to select EF_{Kc} under DF_{GSM} .
- p) The ME simulator sends a READ BINARY command using a length of 2 bytes to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR5].

Test procedure 2 - *** Destructive test ***

- a) The ME simulator resets the SIM.
- b) The ME simulator sends nine UNBLOCK CHV command with incorrect UNBLOCK CHV1 to the SIM.

The status condition returned by the SIM each time shall be SW1='98', SW2='04' - unsuccessful UNBLOCK CHV verification, at least one attempt left.

- c) The ME simulator resets the SIM.
- d) The ME simulator sends an UNBLOCK CHV command with incorrect UNBLOCK CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful UNBLOCK CHV verification, no attempt left.

e) The ME simulator sends an UNBLOCK CHV command to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='40' - UNBLOCK CHV blocked.

6.5.14 INVALIDATE function

6.5.14.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.14.2 Conformance requirement

- CR1 This function shall invalidate the current EF.
- CR2 After an INVALIDATE function the respective flag in the file status shall be changed accordingly.
- CR3 The function shall only be performed if the INVALIDATE access condition for the current EF is satisfied.
- CR4 An invalidated file shall no longer be available within the application for any function except for the SELECT and REHABILITATE functions.

Reference: GSM 11.11 [1], subclause 8.14.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_INVAL

6.5.14.3 Test purpose

To verify that the INVALIDATE function conforms to the above requirements.

6.5.14.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{LOCI} on the SIM is not invalidated.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM}.
- c) The ME simulator sends an INVALIDATE command to the SIM.

 The status condition returned by the SIM shall be SW1='98', SW2='04' access condition not fulfilled [CR3].
- d) The ME simulator gains the security access condition(s) specified for both INVALIDATE and REHABILITATE on $EF_{LOCI.}$
- e) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI} once more.
- f) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data:

- Bit 1 of byte 12 shall be 1 indicating that the file is **not** invalidated.
- g) The ME simulator sends an INVALIDATE command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR3].

h) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI} again.

The status condition returned by the SIM shall be SW1='9F', SW2='XX' - length 'XX' of the response data [CR4].

i) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR1,2]:

- Bit 1 of byte 12 shall be 0 indicating that the file is invalidated.
- j) The ME simulator sends a VERIFY CHV command to the SIM.
- k) The ME simulator sends a UPDATE BINARY command using a length of 1 byte and data 'C1' to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='10' - in contradiction with invalidation status [CR4].

1) The ME simulator sends a READ BINARY command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='10' - in contradiction with invalidation status [CR4].

m) The ME simulator sends a REHABILITATE command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR4].

REHABILITATE function 6.5.15

6.5.15.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.15.2 Conformance requirement

- This function shall rehabilitate an invalidated current EF.
- CR2 After a REHABILITATE function the respective flag in the file status byte shall be changed accordingly.
- The function shall only be performed if the REHABILITATE access condition for the current EF is satisfied.

Reference: GSM 11.11 [1], subclause 8.15.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_REHAB

6.5.15.3 Test purpose

To verify that the REHABILITATE function conforms to the above requirements.

6.5.15.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{LOCI} on the SIM is invalidated.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM}.
- c) The ME simulator sends a REHABILITATE command to the SIM.

The status condition returned by the SIM shall be SWI='98', SW2='04' - access condition not fulfilled [CR3].

- d) The ME simulator gains the security access condition(s) specified for both INVALIDATE and REHABILITATE on EF_{LOCI}.
- e) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI} once more.
- f) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data:

- Bit 1 of byte 12 shall be 0 indicating that the file is invalidated.
- g) The ME simulator sends a REHABILITATE command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1,3].

- h) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI} again.
- i) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data [CR1,2]:

- Bit 1 of byte 12 shall be 1 indicating that the file is **no longer** invalidated.

- j) The ME simulator sends a VERIFY CHV command to the SIM.
- k) The ME simulator sends a UPDATE BINARY command using a length of 1 byte and data 'D1' to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1].

6.5.16 RUN GSM ALGORITHM function

6.5.16.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.5.16.2 Conformance requirement

- CR1 This function shall cause the SIM to run the A3 and A8 algorithms using a 16 byte random number and the subscriber authentication key Ki stored in the SIM.
- CR2 The function shall return the signed response SRES and cipher key Kc.
- CR3 The function shall not be executable unless DF_{GSM} has been selected as the current directory.
- CR4 The function shall not be executable unless a successful CHV1 verification procedure has been performed.

Reference: GSM 11.11 [1], subclause 8.16.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_RUNGSM

6.5.16.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.5.16.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SELECT command to the SIM to select DF_{GSM}.
- c) The ME simulator sends a RUN GSM ALGORITHM command to the SIM with random number:

'00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F'

The status condition returned by the SIM shall be SW1='98', SW2='04' - access condition not fulfilled [CR4].

- d) The ME simulator resets the SIM.
- e) The ME simulator sends a VERIFY CHV command to the SIM.
- f) The ME simulator sends a RUN GSM ALGORITHM command to the SIM with random number:

'00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F'

The status condition returned by the SIM shall be SW1='94, SW2='08' - file inconsistent with command [CR3].

- g) The ME simulator sends a SELECT command to the SIM to select DF_{GSM} .
- h) The ME simulator sends a RUN GSM ALGORITHM command to the SIM with random number:

'00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F'

The status condition returned by the SIM shall be SW1='9F', SW2='0C' - length 'XX' of the response data [CR3,4].

i) The ME simulator sends a GET RESPONSE command to the SIM.

The data returned shall be correct for the given A3 and A8 algorithms and Ki stored in the SIM [CR1,2].

6.5.17 SLEEP function

6.5.17.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

This function is an obsolete GSM function which was issued by Phase 1 MEs.

6.5.17.2 Conformance requirement

CR1 The function shall always return a good status.

Reference: GSM 11.11 [1], subclause 8.17.

Test Group Reference (TGR): TGR_SIM_FN

Test Procedure Reference (TPR): TPR_SIM_FN_SLEEP

6.5.17.3 Test purpose

To verify that the SLEEP function conforms to the above requirement.

6.5.17.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a SLEEP command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1].

6.6 Description of the commands

The tests in this subclause ensure that the IUT conforms to the specification for the mapping of functions onto Application Protocol Data Units (APDUs) which are used by the transmission protocol.

6.6.1 Mapping principles

6.6.1.1 Definition and applicability

The transmission protocol requires that the command and response Application Protocol Data Units (APDUs) are mapped using certain principles, in order to ensure correct operation in the GSM environment.

6.6.1.2 Conformance requirement

CR1 The command APDU shall have format (CLA, INS, P1, P2, P3 {, data}).

- CR2 The response APDU shall have format ({data,} SW1, SW2).
- CR3 The class 'A0' shall be accepted by the SIM.

Reference: GSM 11.11 [1], subclause 9.1.

Test Group Reference (TGR): TGR_SIM_CMD_MAP

Test Procedure Reference (TPR): TPR_SIM_CMD_MAP

6.6.1.3 Test purpose

To verify that the SIM conforms to the above requirements.

6.6.1.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator gains the security access condition(s) specified by the administrative authority for both INVALIDATE and REHABILITATE on EF_{LOCL}
- c) The ME simulator sends SELECT commands to the SIM to select DF_{GSM}.
- d) The ME simulator sends a VERIFY CHV command to the SIM.
- e) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI}.

[Bytes sent: CLA='A0', INS='A4', P1='00', P2='00', P3='02', data='6F 7E']

[Bytes received: SW1, SW2₁]

The SIM shall have sent SW1='9F' and SW2='lgth' [CR1].

f) The ME simulator sends a GET RESPONSE command to the SIM, requesting all of the available response data, as indicated by SW2₁.

[Bytes sent: CLA='A0', INS='C0', P1='00', P2='00', P3=SW2₁]

[Bytes received: data, SW1, SW2]

The SIM shall have sent 'lgth' bytes followed by SW1='90' and SW2='00' [CR2].

g) The ME simulator sends a READ BINARY command to the SIM to read both bytes.

[Bytes sent: CLA='A0', INS='B0', P1='00', P2='00', P3='02']

[Bytes received: data, SW1, SW2]

The SIM shall have sent 2 bytes followed by SW1='90' and SW2='00'.

h) The ME simulator sends an INVALIDATE command to the SIM.

[Bytes sent: CLA='A0', INS='04', P1='00', P2='00', P3='00']

[Bytes received: SW1, SW2]

The SIM shall have sent SW1='90' and SW2='00'.

i) The ME simulator sends a REHABILITATE command to the SIM.

6.6.2 Coding of the commands

The test procedures defined in subclause 6.5 of the present document, "Descriptions of the functions", intrinsically test most the coding of the associated commands. Therefore, test purposes exist in this subclause only to cover areas of testing not already covered by subclause 6.5.

6.6.2.1 SELECT command

The test procedure defined in subclause 6.5.1 of the present document, "SELECT function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.2 STATUS command

The test procedure defined in subclause 6.5.2 of the present document, "STATUS function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.3 READ BINARY command

The test procedure defined in subclause 6.5.3 of the present document, "READ BINARY function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.4 UPDATE BINARY command

The test procedure defined in subclause 6.5.4 of the present document, "UPDATE BINARY function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.5 READ RECORD command

The test procedure defined in subclause 6.5.5 of the present document, "READ RECORD function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.6 UPDATE RECORD command

The test procedure defined in subclause 6.5.6 of the present document, "UPDATE RECORD function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.7 SEEK command

The test procedure defined in subclause 6.5.7 of the present document, "SEEK function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.8 INCREASE command

The test procedure defined in subclause 6.5.8 of the present document, "VERIFY CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.9 VERIFY CHV command

The test procedure defined in subclause 6.5.9 of the present document, "VERIFY CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.10 CHANGE CHV command

The test procedure defined in subclause 6.5.10 of the present document, "CHANGE CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.11 DISABLE CHV command

The test procedure defined in subclause 6.5.11 of the present document, "DISABLE CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.12 ENABLE CHV command

The test procedure defined in subclause 6.5.12 of the present document, "ENABLE CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.13 UNBLOCK CHV command

The test procedure defined in subclause 6.5.13 of the present document, "UNBLOCK CHV function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.14 INVALIDATE command

The test procedure defined in subclause 6.5.14 of the present document, "INVALIDATE function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.15 REHABILITATE command

The test procedure defined in subclause 6.5.15 of the present document, "REHABILITATE function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.16 RUN GSM ALGORITHM command

The test procedure defined in subclause 6.5.16 of the present document, "RUN GSM ALGORITHM function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.17 SLEEP command

The test procedure defined in subclause 6.5.17 of the present document, "SLEEP function" intrinsically tests the coding of this command and so is not replicated here.

6.6.2.18 GET RESPONSE command

6.6.2.18.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all functions described therein.

6.6.2.18.2 Conformance requirement

CR1 The GET RESPONSE command shall provide response data after the execution of commands RUN GSM ALGORITHM, SEEK (type 2), SELECT, and INCREASE.

CR2 It is required that the GET RESPONSE command is executed immediately after the command it is related to (no other command shall come between the command/response pair and the command GET RESPONSE). If this sequence is not respected, the SIM shall send the Status Information "technical problem with no diagnostic given" as a reaction to the GET RESPONSE.

CR3 Since the MF is implicitly selected after the activation of the SIM, GET RESPONSE shall be allowed as the first command after activation.

Reference: GSM 11.11 [1], subclause 9.2.18.

Test Group Reference (TGR): TGR_SIM_CMD

Test Procedure Reference (TPR): TPR SIM CMD GET

6.6.2.18.3 Test purpose

To verify that the coding of the GET RESPONSE command conforms to the above requirements.

NOTE: CR1 is tested in subclauses 6.5.1, 6.5.7, 6.5.8, 6.5.16 and 6.5.17.

6.6.2.18.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a GET RESPONSE command to the SIM.

[Bytes sent: CLA='A0', INS='C0', P1='00', P2='00', P3='08']

[Bytes received: P3 bytes of data, SW1, SW2]

Bytes 5 and 6 of the response data shall indicate that MF is the currently selected file [CR3].

- c) The ME simulator sends a STATUS command to the SIM with correct P3.
- d) The ME simulator sends a GET RESPONSE command to the SIM.

[Bytes sent: CLA='A0', INS='C0', P1='00', P2='00', P3='05']

[Bytes received: SW1, SW2]

The status condition returned by the SIM shall be SW1='6F', SW2='XX' - technical problem with no diagnostic given [CR2].

6.6.3 Definitions and coding

6.6.3.1 Definition and applicability

Certain definitions and coding are used in the response parameters/data of the commands.

6.6.3.2 Conformance requirement

CR1 The file structure indicator byte shall be one of the following values within the specified range: '00', '01' or '03'.

CR2 The file type indicator byte shall be one of the following values within the specified range: '00', '01', '02' or '04'.

Reference: GSM 11.11 [1], subclause 9.3.

Test Group Reference (TGR): TGR_SIM_CMD_DEF

Test Procedure Reference (TPR): TPR_SIM_CMD_DEF

6.6.3.3 Test purpose

To verify that the response parameters/data conform to the above requirements for all file IDs on the SIM.

NOTE: CR2 is covered in subclause 6.3.1.1, "File-type identification".

6.6.3.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) For every possible selectable file ID in the file structure, the ME simulator sends SELECT commands to select the file ID. When a file is selected successfully, the ME simulator sends a GET RESPONSE command to the SIM.

For all EFs found, the following shall be true of the response data:

- Byte 15 shall be '00' if the EF is Transparent.

The file structure indicator byte shall be coded as follows, according to the specification in clause 10 of GSM 11.11 [1] [CR1]:

- '00' = Transparent
- '01' = Linear Fixed
- '03' = Cyclic

6.6.4 Status conditions returned by the SIM

6.6.4.1 Coding of the status words

6.6.4.1.1 Definition and applicability

The status words SW1 and SW2 provide the method with which the SIM can respond to the ME after executing a command.

6.6.4.1.2 Conformance requirement

- CR1 The SIM shall respond with the correct SW1 and SW2 status words for commands which are correctly executed.
- CR2 The SIM shall respond with the correct SW1 and SW2 status words for commands which produce memory management errors.
- CR3 The SIM shall respond with the correct SW1 and SW2 status words for commands which produce referencing management errors.
- CR4 The SIM shall respond with the correct SW1 and SW2 status words for commands which produce security management errors.
- CR5 The SIM shall respond with the correct SW1 and SW2 status words for commands which produce application independent errors.

Reference: GSM 11.11 [1], subclause 9.4.

Test Group Reference (TGR): TGR_SIM_CMD_SC_SW

Test Procedure Reference (TPR): TPR_SIM_CMD_SC_SW

6.6.4.1.3 Test purpose

To verify that the SIM conforms to the above requirements when issuing SW1 and SW2 status words.

NOTE 1: CR2 cannot be tested as there is no mechanism to force the SIM to produce memory errors.

NOTE 2: CR4 is already tested in subclause 6.5.8.

6.6.4.1.4 Method of test

Initial conditions

- 1) The SIM is connected to an ME simulator.
- 2) EF_{ADN} on the SIM is not invalidated.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a VERIFY CHV command to the SIM.
- c) The ME simulator sends SELECT commands to the SIM to select DF_{GSM}.

 The status condition returned by the SIM shall be SW1='9F', SW2='XX' length 'XX' of the response data [CR1].
- d) The ME simulator sends a GET RESPONSE command to the SIM.

The status condition returned by the SIM shall be SW1='90', SW2='00' - normal ending of command [CR1].

e) The ME simulator sends a READ BINARY command using a length of 1 byte to the SIM.

The status condition returned by the SIM shall be SW1='94', SW2='00' - no EF selected [CR3].

- f) The ME simulator sends SELECT commands to the SIM to select EF_{ADN}.
- g) The ME simulator sends an UPDATE RECORD command using PREVIOUS mode to the SIM. The data used is 'E1' for all bytes.
- h) The ME simulator sends an UPDATE RECORD command using NEXT mode to the SIM. The data used is 'E2' for all bytes.

The status condition returned by the SIM shall be SW1='94', SW2='02' - out of range (invalid address) [CR3].

i) The ME simulator sends a READ BINARY command using a length of 1 byte to the SIM.

The status condition returned by the SIM shall be SW1='94', SW2='08' - file type inconsistent with the command [CR3].

j) The ME simulator sends a VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='04' - unsuccessful CHV verification, at least one attempt left.

k) The ME simulator sends an ENABLE CHV command to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='08' - in contradiction with CHV status [CR3].

- 1) The ME simulator sends VERIFY CHV command with **incorrect** CHV1 to the SIM.
- m) The ME simulator sends VERIFY CHV command with incorrect CHV1 to the SIM.

The status condition returned by the SIM shall be SW1='98', SW2='40' - unsuccessful CHV verification, no attempt left.

n) The ME simulator sends an UPDATE RECORD command using ABSOLUTE mode with record 1 to the SIM. Parameter P3 is set to 1 and the data used is 'E3'.

The status condition returned by the SIM shall be SW1='67', SW2='XX' or SW1='98', SW2='04' - incorrect parameter P3 [CR3].

o) The ME simulator sends an UPDATE RECORD command using mode '44' to the SIM. The data used is 'E4' for all bytes.

The status condition returned by the SIM shall be SW1='6B', SW2='00' or SW1='98', SW2='04' - incorrect parameter P1 or P2 [CR3].

p) The ME simulator sends the following APDU to the SIM.

[Bytes sent: CLA='A0', INS='1E', P1='00', P2='00', P3='00']

The status condition returned by the SIM shall be SW1='6D', SW2='00' - unknown instruction code given in the command [CR5].

s) The ME simulator sends a GET RESPONSE command to the SIM.

The status condition returned by the SIM shall be SW1='6F', SW2='XX' - technical problem with no diagnostic given [CR5].

6.6.4.2 Commands versus possible status responses

6.6.4.2.1 Definition and applicability

Limiting the status conditions for each command to a defined set allows the ME to efficiently manage the handling of the status condition.

6.6.4.2.2 Conformance requirement

CR1 Table 10 in GSM 11.11 [1], subclause 9.4.6 shows for each command the possible status conditions returned (marked by an asterisk *). The SIM shall not generate status conditions other than those allowed for each command.

Reference: GSM 11.11 [1], subclause 9.4.6.

Test Group Reference (TGR): TGR_SIM_CMD_SC_CSR

Test Procedure Reference (TPR): TPR_SIM_CMD_SC_CSR

6.6.4.2.3 Test purpose

To verify for each command that the SIM will only generate the allowed status conditions.

NOTE: CR1 cannot be tested as it is not possible to force the SIM to generate all of the allowed status conditions for each command and there is no way of forcing the SIM to generate disallowed status conditions for each command.

6.6.4.2.4 Method of test

Initial conditions

N/A

Test procedure

N/A

6.6.4.2.5 Test requirement

N/A

6.7 Contents of the elementary files

The subclause provides tests to ensure that the IUT contains all of the EFs need for a GSM session.

6.7.1 Definition and applicability

The Elementary Files described in clause 10 of GSM 11.11 [1] are required on the SIM card in order for a GSM session to be carried out.

The contents of these files are not tested as they are card/personalisation specific.

6.7.2 Conformance requirement

The following conformance requirements refer to the tables for each EF in clause 10 of GSM 11.11 [1].

- CR1 Each existing EF shall be selectable under the respective DF using the identifier given in the table for that EF.
- CR2 All mandatory EFs shall exist on the SIM card.
- CR3 The identifier of the EF shall be that given in the table for that EF.CR4The type and structure of the EF shall be that given in the table for that EF.
- CR5 The file size shall be at least that given in the table for that EF.
- CR6 The access conditions shall be those given in the table for that EF.

Reference: GSM 11.11 [1], clause 10.

Test Group Reference (TGR): TGR_SIM_CEF

Test Procedure Reference (TPR): TPR_SIM_CEF

6.7.3 Test purpose

To verify that the SIM conforms to the above requirements.

NOTE: The contents and coding of the data within the files are not tested, but shall conform to the respective contents and coding of the data given for each file in clause 10 of GSM 11.11 [1].

6.7.4 Method of test

Initial conditions

1) The SIM is connected to an ME simulator.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends SELECT commands to the SIM to select the respective DF for the first EF in clause 10 of GSM 11.11 [1].

The status condition returned by the SIM shall be SW1='9F', SW2='XX' - length 'XX' of the response data [CR1].

c) The ME simulator sends a SELECT command to the SIM to select the first EF in clause 10 of GSM 11.11 [1].

The status condition returned by the SIM shall be SW1='9F', SW2='XX' - length 'XX' of the response data [CR1,2].

d) The ME simulator sends a GET RESPONSE command to the SIM.

The following shall be true of the response data:

- Bytes 5 and 6 shall indicate the identifier of the file selected. [CR3].
- Byte 7 shall be '04' indicating EF [CR4].
- Byte 14 shall indicate the structure given in the table for the file in clause 10 of GSM 11.11 [1] [CR4].

- Bytes 3 and 4 shall be at least the minimum file size given in the table for the file in clause 10 of GSM 11.11 [1] if the EF is transparent [CR5].
- Byte 15 shall be in accordance with the record length given in the table for the file in clause 10 of GSM 11.11 [1] if the EF is linear fixed or cyclic [CR5].
 - Bytes 3 and 4 shall be an integer multiple of the record length if the EF is linear fixed or cyclic [CR5].
- Bytes 9, 10 and 11 shall indicate the access conditions given in the table for the file in clause 10 of GSM 11.11 [1] [CR6].
- e) Steps a) to d) are repeated for the remaining mandatory EFs in clause 10 of GSM 11.11 [1].
- f) Steps a) to d) are repeated for the existing optional EFs in clause 10 of GSM 11.11 [1].

6.8 Application Protocol

The tests in this subclause ensure that the IUT conforms to the functional specification for application protocol - in particular the internal management of AND/FDN switching in the SIM.

6.8.1 FDN Procedure

6.8.1.1 Definition and applicability

It shall be mandatory for all cards complying with GSM 11.11 [1] to support all internal management processing required for the GSM application.

6.8.1.2 Conformance requirement

CR1 If FDN is enabled, the SIM shall invalidate both EF_{IMSI} and EF_{LOCI} once during each GSM session at least before the next command following selection of either EF.

Reference: GSM 11.11 [1], subclause 10.2.7, 11.2.1.

Test Group Reference (TGR): TGR_SIM_APP

Test Procedure Reference (TPR): TPR_SIM_APP_FDN

6.8.1.3 Test purpose

To verify that the FDN feature conforms to the above requirements.

6.8.1.4 Method of test

Initial conditions

- 1) FDN feature is allocated and activated.
- 2) ADN feature is allocated and activated.
- 3) EF_{ADN} is invalidated.

Test procedure

- a) The ME simulator resets the SIM.
- b) The ME simulator sends a VERIFY CHV1 to the SIM.
- c) The ME simulator sends SELECT commands to the SIM to select EF_{IMSI} under DF_{GSM} .
- d) The ME simulator sends a GET RESPONSE command to the SIM.

Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{IMSI} is invalidated [CR1].

- e) The ME simulator sends a REHABILITATE command to the SIM.
- f) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI}.
- g) The ME simulator sends a GET RESPONSE command to the SIM.
 Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{LOCI} is invalidated [CR1].
- h) The ME simulator sends a REHABILITATE command to the SIM.
- i) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- j) The ME simulator sends a VERIFY CHV2 to the SIM.
- k) The ME simulator sends a REHABILITATE command to the SIM.
- 1) The ME simulator sends a SELECT command to the SIM to select EF_{SST}.
- m) The ME simulator gains the access condition for UPDATE policy.
- n) The ME simulator sends an UPDATE BINARY command to the SIM to deactivate the ADN service.
- o) The ME simulator resets the SIM.
- p) The ME simulator sends a VERIFY CHV1 to the SIM.
- q) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM} .
- r) The ME simulator sends a GET RESPONSE command to the SIM.
 Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{LOCI} is invalidated [CR1].
- s) The ME simulator sends a REHABILITATE command to the SIM.
- t) The ME simulator sends a SELECT command to the SIM to select EF_{IMSI} .
- u) The ME simulator sends a GET RESPONSE command to the SIM.
 Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{IMSI} is invalidated [CR1].
- v) The ME simulator sends a REHABILITATE command to the SIM.
- w) The ME simulator sends a SELECT command to the SIM to select EF_{SST} .
- x) The ME simulator gains the access condition for UPDATE policy.
- y) The ME simulator sends an UPDATE BINARY command to the SIM to deallocate the ADN service.
- z) The ME simulator resets the SIM.
- aa) The ME simulator sends a VERIFY CHV1 to the SIM.
- ab) The ME simulator sends SELECT commands to the SIM to select EF_{LOCI} under DF_{GSM}.
- ac) The ME simulator sends a GET RESPONSE command to the SIM.

 Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{LOCI} is invalidated [CR1].
- ad) The ME simulator sends a REHABILITATE command to the SIM.
- ae) The ME simulator sends a SELECT command to the SIM to select EF_{IMSI}.
- af) The ME simulator sends a GET RESPONSE command to the SIM.

 Bit 1 of byte 12 of the data returned shall be 0 indicating that EF_{IMSI} is invalidated [CR1].
- ag) The ME simulator sends a REHABILITATE command to the SIM.
- ah) The ME simulator sends a SELECT command to the SIM to select EF_{SST}.

- ai) The ME simulator sends an UPDATE BINARY command to the SIM to allocate and activate the ADN service.
- aj) The ME simulator resets the SIM.
- ak) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI}.
- al) The ME simulator sends a GET RESPONSE command to the SIM.

Bit 1 of byte 12 of the data returned shall be 1 indicating that EF_{LOCI} is not invalidated [CR1].

- am) The ME simulator sends a SELECT command to the SIM to select EF_{IMSI}.
- an) The ME simulator sends a GET RESPONSE command to the SIM.

Bit 1 of byte 12 of the data returned shall be 1 indicating that EF_{IMSI} is not invalidated [CR1].

- ao) The ME simulator sends a SELECT command to the SIM to select EF_{SST}.
- ap) The ME simulator gains the access condition for UPDATE policy.
- aq) The ME simulator sends an UPDATE BINARY command to the SIM to deactivate the FDN service.
- ar) The ME simulator sends SELECT commands to the SIM to select EF_{ADN} under DF_{TELECOM}.
- as) The ME simulator sends a VERIFY CHV2 to the SIM.
- at) The ME simulator sends a INVALIDATE command to the SIM.
- au) The ME simulator resets the SIM.
- av) The ME simulator sends a SELECT command to the SIM to select EF_{LOCI}.
- aw) The ME simulator sends a GET RESPONSE command to the SIM.

Bit 1 of byte 12 of the data returned shall be 1 indicating that EF_{LOCI} is not invalidated [CR1].

- ax) The ME simulator sends a SELECT command to the SIM to select EF_{IMSI} .
- ay) The ME simulator sends a GET RESPONSE command to the SIM.

Bit 1 of byte 12 of the data returned shall be 1 indicating that EF_{IMSI} is not invalidated [CR1].

Annex A (informative): Change history

This annex lists all change requests approved for the present document since the the present document was approved by ETSI SMG and 3GPP.

S28 P-99-179 98p440 2.0.0 R98 Approval of final draft by SMG 7.0.0	SMG#	SMG tdoc	SMG9 tdoc	VERS	CR	RV	PH	CAT	SUBJECT	Resulting Version
Following the closure of ETSI SMG and the agreement of the 3GPP in July 2000 to undertake responsibility for remaining GSM specifications, the change requests listed below were approved by 3GPP TSG-T. This change in responsibility also changed the specification number from "GSM 11.17" and "ETSI EN 301 086" to "3GPP TS 11.17". T#18 T3#25 decided to upgrade the present specification TS 11.17 to Release 99 without any change request in order to be able to update the document to Rel-4. This was approved at T#18. See T3 report to T in document TP-020277. The necessary editorial changes to generate the R99 version of the specification were carried out as follows: Transposition of cover page with a 3GPP cover page Deletion of IPR section	s28	P-99-179	98p440	2.0.0			R98		Approval of final draft by SMG	7.0.0
specifications, the change requests listed below were approved by 3GPP TSG-T. This change in responsibility also changed the specification number from "GSM 11.17" and "ETSI EN 301 086" to "3GPP TS 11.17". T#18 T				7.0.1					Update to Version 7.0.2 for Publication	7.0.2
Release 99 without any change request in order to be able to update the document to Rel-4. This was approved at T#18. See T3 report to T in document TP-020277. The necessary editorial changes to generate the R99 version of the specification were carried out as follows: - Transposition of cover page with a 3GPP cover page - Deletion of IPR section	sį		s, the char	nge requ pecificat	ests list	ed b	elow v from "	vere a	approved by 3GPP TSG-T. This change in responsibility also chang 11.17" and "ETSI EN 301 086" to "3GPP TS 11.17".	ged the
Foreword	T#18			7.0.2			R99		Release 99 without any change request in order to be able to update the document to Rel-4. This was approved at T#18. See T3 report to T in document TP-020277. The necessary editorial changes to generate the R99 version of the specification were carried out as follows: - Transposition of cover page with a 3GPP cover page - Deletion of IPR section - Replacement of	8.0.0

History

Document history										
V8.0.0 December 2002		Publication								