

# ETSI TS 125 304 V4.0.0 (2001-03)

---

*Technical Specification*

## **Universal Mobile Telecommunications System (UMTS); UE Procedures in Idle Mode and Procedures for Cell Reselection in Connected Mode (3GPP TS 25.304 version 4.0.0 Release 4)**



---

**Reference**

RTS/TSGR-0225304Uv4

---

**Keywords**

UMTS

**ETSI**

---

650 Route des Lucioles  
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C  
Association à but non lucratif enregistrée à la  
Sous-Préfecture de Grasse (06) N° 7803/88

---

**Important notice**

Individual copies of the present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <http://www.etsi.org/tb/status/>

If you find errors in the present document, send your comment to:  
editor@etsi.fr

---

**Copyright Notification**

No part may be reproduced except as authorized by written permission.  
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2001.

All rights reserved.

---

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

---

## Foreword

This Technical Specification (TS) has been produced by the ETSI 3<sup>rd</sup> Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under [www.etsi.org/key](http://www.etsi.org/key).

# Contents

Foreword .....	5
1 Scope.....	6
2 References.....	6
3 Definitions and abbreviations .....	7
3.1 Definitions.....	7
3.2 Abbreviations .....	8
4 General description of Idle mode.....	9
4.1 Overview .....	9
4.2 Functional division between AS and NAS in Idle mode .....	10
4.3 Service type in Idle mode.....	12
5 Process and procedure descriptions .....	12
5.1 PLMN selection and reselection.....	12
5.1.1 General.....	12
5.1.2 Support for Network Selection .....	13
5.1.2.1 General.....	13
5.1.2.2 UTRA case.....	13
5.1.2.3 GSM case.....	13
5.2 Cell selection and reselection in idle mode .....	13
5.2.1 Introduction.....	13
5.2.2 States and state transitions in Idle Mode.....	15
5.2.3 Cell Selection Process.....	16
5.2.3.1 UTRA case.....	16
5.2.3.1.1 Description .....	16
5.2.3.1.2 Criteria .....	17
5.2.3.2 GSM case.....	17
5.2.4 Void .....	17
5.2.5 Camped Normally State.....	18
5.2.5.1 UTRA case.....	18
5.2.5.2 GSM case.....	18
5.2.6 Cell Reselection Evaluation Process.....	18
5.2.6.1 UTRA case.....	18
5.2.6.1.1 Measurement rules for cell re-selection when HCS is not used .....	18
5.2.6.1.2 Measurement rules for cell re-selection when HCS is used .....	18
5.2.6.1.3 Non-suitable cells ( $Squal > 0$ or $Srxlev > 0$ ).....	20
5.2.6.1.4 Cell Reselection Criteria .....	20
5.2.6.1.5 Cell reselection parameters in system information broadcasts.....	22
5.2.6.2 GSM case.....	23
5.2.7 Cell Selection when leaving connected mode.....	24
5.2.7.1 UTRA case.....	24
5.2.7.2 GSM case.....	24
5.2.8 Any Cell Selection state.....	24
5.2.9 Camped on Any Cell State.....	24
5.2.9.1 UTRA case.....	24
5.2.9.2 GSM case.....	24
5.3 Cell Access Restrictions .....	24
5.3.1 UTRA cells .....	24
5.3.1.1 Cell status and cell reservations.....	25
5.3.1.2 Access Control.....	25
5.3.1.3 Emergency Call .....	26
5.3.2 GSM cells .....	26
5.4 Cell Reselection Processes in RRC Connected Mode.....	26
5.4.1 Initial Cell Reselection Process .....	26
5.4.1.1 Criteria.....	26
5.4.2 Void .....	26

5.4.3	Cell Reselection Process .....	26
5.5	Location Registration .....	26
6	Broadcast information receiving.....	27
6.1	Reception of System Information.....	27
6.2	Cell Broadcast in Idle Mode.....	27
7	Measurements for cell selection / reselection .....	27
7.1	Use of Mapping Functions .....	27
8	Paging and SCCPCH selection in Idle mode .....	28
8.1	Paging Channel selection .....	28
8.2	SCCPCH selection when entering Connected mode .....	28
8.3	Discontinuous Reception.....	29
9	Multicast services .....	30
9.1	State diagram between the multicast service and DSCH.....	30
9.1.1	MT_Null State .....	31
9.1.2	MT_Monitor State .....	31
9.1.3	MT_Saving State .....	31
9.1.4	MT_Active State.....	32
10	Examples of Procedures.....	32
10.1	NAS initiated change of system information.....	32
10.2	System Information Update to NAS .....	33
10.3	CN originated paging in idle mode.....	34
10.4	PLMN Selection, automatic mode, normal case.....	35
10.5	PLMN Reselection, automatic mode .....	36
10.6	PLMN Reselection, manual mode .....	37
10.7	PLMN Selection, automatic mode, selected PLMN not found.....	38
10.8	NAS Controlled Cell Selection.....	39
10.8.1	Execution in Access Stratum .....	39
10.8.2	Execution in Non-Access Stratum .....	40
<b>Annex A (informative): Change history.....</b>		<b>41</b>

---

# Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

---

# 1 Scope

The present document specifies the Access Stratum part of the Idle Mode procedures applicable to a UE. The non-access stratum part of Idle mode procedures and processes is specified in [5].

The present document also specifies cell reselection processes applicable to UEs in connected mode. Invocation of these processes is described in [4].

The present document specifies the model for the functional division between the non-access stratum and access stratum in a UE.

The present document applies to all UEs that support at least UTRA, including multi-RAT UEs as described in 3GPP specifications, in the following cases:

- When the UE is camped on a UTRA cell;
- When the UE is searching for a cell to camp on;
- When the UE is camped on another RAT than UTRA.

NOTE: The details for those cases are described in the specifications of the other RAT.

The present document presents also examples of inter-layer procedures related to the idle mode processes and describes idle mode functionality of a dual RAT UTRA/GSM UE.

Following items are considered for future releases:

- 1) State diagram between the multicast service and DSCH (subclause 9.1).

---

# 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TS 03.22: "Functions related to Mobile Station in idle mode and group receive mode".
- [2] 3GPP TS 25.301: "Radio Interface Protocol Architecture".
- [3] 3GPP TS 25.303: "Interlayer Procedures in Connected Mode".
- [4] 3GPP TS 25.331: "RRC Protocol Specification".
- [5] 3GPP TS 23.122: "NAS functions related to Mobile Station (MS) in idle mode".
- [6] 3GPP TR 25.922: "Radio Resource Management Strategies".
- [7] 3GPP TS 25.211: "Physical channels and mapping of transport channels onto physical channels (FDD)".
- [8] 3GPP TS 25.221: "Physical channels and mapping of transport channels onto physical channels (TDD)".
- [9] 3GPP TS 22.011: "Service accessibility".

- [10] 3GPP TS 25.133: "Requirements for Support of Radio Resource Management (FDD)".
- [11] 3GPP TS 25.123: "Requirements for Support of Radio Resource Management (TDD)".
- [12] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [13] 3GPP TS 05.08: "Radio subsystem link control".
- [14] 3GPP TS 25.214: "Physical layer procedures (FDD)".
- [15] 3GPP TS 25.224: "Physical Layer Procedures (TDD)".

---

## 3 Definitions and abbreviations

### 3.1 Definitions

For the purposes of the present document, the following definitions and the definitions in [12] apply.

**Acceptable Cell:** a cell that satisfies certain conditions as specified in 4.3. A UE can always attempt emergency calls on an acceptable cell.

**Allowable PLMN:** a PLMN, which is not in the list of forbidden PLMNs in the UE.

**Available PLMN:** a PLMN for which the UE has found at least one acceptable cell.

**Barred Cell:** A cell is barred if it is so indicated in the system information.

**Camped on a cell:** UE is in idle mode and has completed the cell selection/reselection process and has chosen a cell. The UE monitors system information and (in most cases) paging information.

**Camped on any cell:** UE is in idle mode and has completed the cell selection/reselection process and has chosen a cell irrespective of PLMN identity.

**DRX cycle:** individual time interval between monitoring Paging Occasion for a specific UE.

**Home PLMN:** a PLMN where the Mobile Country Code (MCC) and Mobile Network Code (MNC) of the PLMN identity are the same as the MCC and MNC of the IMSI.

**Location Registration (LR):** UE registers its presence in a registration area, for instance regularly or when entering a new registration area.

**LSA:** Localised Service Area. A LSA is an operator-defined group of cells for which specific access conditions applies. This may correspond to an area in which the Core Network offers specific services. A LSA may be defined within a PLMN or globally. Therefore, a LSA may offer non-contiguous radio coverage.

**LSA exclusive access cell:** UE may only camp on this cell if the cell belongs to the LSAs to which the user has subscribed. Nevertheless, if no other cells are available, the UE of non-LSA users may originate emergency calls from this cell.

**LSA ID:** Localised Service Area Identity.

**LSA only access:** when LSA only access applies to the user, the UE can only access cells that belong to the LSAs to which the user has subscribed. Outside the coverage area of the subscribed LSAs, the UE may camp on other cells and limited services apply.

**LSA preferential access cell:** LSA preferential access cell is a cell, which is part of the LSA. UEs of users that have subscribed to a LSA of an LSA-preferential-access cell have higher priority to resources than non-LSA users in the same cell. The availability of LSA preferential access cells impacts the radio resource allocation (controlled by UTRAN-Access Stratum). This function is out of the scope of the standards.

**Maximum DRX cycle:** time interval for the longest possible DRX cycle in a cell.

**Paging Block Periodicity (PBP):** period of the occurrence of Paging Blocks. (For FDD, PBP = 1).

**Paging Message Receiving Occasion** (TDD only): the frame where the UE receives actual paging message.

**Paging occasion:**

(FDD) The SFN of the PICH frame where the UE monitors its paging indicator (i.e. the SFN of the PCCPCH frame in which the PICH frame begins).

(TDD) The paging block, which consists of several frames. The value of Paging Occasion is equal to the first frame of the Paging Block.

**Process:** a local action in the UE invoked by a RRC procedure or an Idle Mode procedure.

**Radio Access Mode:** radio access mode of the cell, FDD or TDD.

**Radio Access Technology:** type of technology used for radio access, for instance UTRA or GSM.

**Registered PLMN (RPLMN):** this is the PLMN on which the UE has performed a location registration successfully.

**Registration Area:** (NAS) registration area is an area in which the UE may roam without a need to perform location registration, which is a NAS procedure.

**Selected PLMN:** this is the PLMN that has been selected by the non-access stratum, either manually or automatically.

**Suitable Cell:** a cell on which an UE may camp. It shall satisfy certain conditions, see subclause 4.3.

**Visited PLMN of home country:** a PLMN, different from the home PLMN, where the MCC part of the PLMN identity is the same as the MCC of the IMSI.

## 3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

AS	Access Stratum
BCCH	Broadcast Control Channel
CN	Core Network
DRX	Discontinuous Reception
DSCH	Downlink Shared Channel
FDD	Frequency Division Duplex
GC	General Control (SAP)
GPRS	General Packet Radio System
GSM	Global System for Mobile
IMSI	International Mobile Subscriber Identity
MCC	Mobile Country Code
MM	Mobility Management
MNC	Mobile Network Code
NAS	Non-Access Stratum
PCH	Paging Channel
PI	Page Indicator
PICH	Page Indication Channel
PLMN	Public Land Mobile Network
RAT	Radio Access Technology
RRC	Radio Resource Control
SAP	Service Access Point
TDD	Time Division Duplex
UE	User Equipment
UMTS	Universal Mobile Telecommunications System
UTRA	UMTS Terrestrial Radio Access
UTRAN	UMTS Terrestrial Radio Access Network

---

## 4 General description of Idle mode

### 4.1 Overview

When a UE is switched on, a public land mobile network (PLMN) is selected and the UE searches for a suitable cell of this PLMN to camp on. Criteria for cell selection and cell re-selection between radio access technologies (RATs) described in this document only consider radio criteria. In addition to radio access technology, the PLMN type may differ as well. In this specification, the term PLMN is used as a generic term covering both GSM MAP and ANSI-41 type of PLMNs. According to the type of PLMN, the way to identify it can be different. If the PLMN type is GSM, the PLMN is identified by 'PLMN identity' and if the PLMN type is ANSI-41, the PLMN is identified by 'SID'

The UE searches for a suitable cell of the chosen PLMN and chooses that cell to provide available services, and tunes to its control channel. This choosing is known as "camping on the cell". The UE will then register its presence, by means of a NAS registration procedure, in the registration area of the chosen cell, if necessary.

If the UE finds a more suitable cell, it reselects onto that cell and camps on it. If the new cell is in a different registration area, location registration is performed.

If necessary, the UE will look for more suitable cells on other PLMNs at regular time intervals, which is referred to as PLMN-reselection. This is described in [9].

If the UE loses coverage of the registered PLMN, either a new PLMN is selected automatically (automatic mode), or an indication of which PLMNs are available is given to the user, so that a manual selection can be made (manual mode).

Registration is not performed by UEs only capable of services that need no registration.

The purpose of camping on a cell in idle mode is fourfold:


- a) It enables the UE to receive system information from the PLMN.
- b) When registered and if the UE wishes to establish an RRC connection, it can do this by initially accessing the network on the control channel of the cell on which it is camped.
- c) If the PLMN receives a call for the registered UE, it knows (in most cases) the registration area of the cell in which the UE is camped. It can then send a "paging" message for the UE on control channels of all the cells in the registration area. The UE will then receive the paging message because it is tuned to the control channel of a cell in that registration area and the UE can respond on that control channel.
- d) It enables the UE to receive cell broadcast services.

If the UE is unable to find a suitable cell to camp on, or the USIM is not inserted, or if the location registration failed, it attempts to camp on a cell irrespective of the PLMN identity, and enters a "limited service" state in which it can only attempt to make emergency calls.

The idle mode tasks can be subdivided into three processes:

- PLMN selection and reselection;
- Cell selection and reselection;
- Location registration.

The relationship between these processes is illustrated in Figure 1.

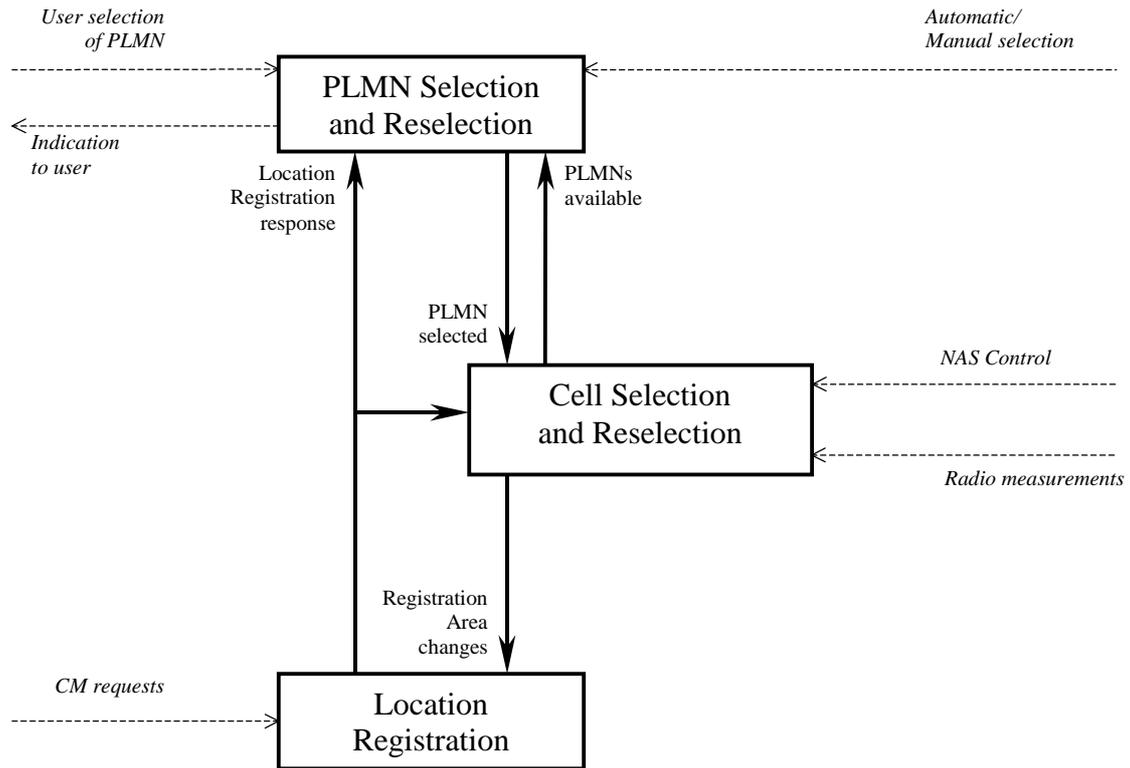

**Figure 1: Overall Idle Mode process**

NOTE: The impact of NAS defined service areas is FFS.

## 4.2 Functional division between AS and NAS in Idle mode

Table 1 presents the functional division between UE non-access stratum (NAS) and UE access stratum (AS) in idle mode. The non-access stratum part is specified in [5] and the access stratum part in the present document. Examples of different idle mode procedures are presented in Clause 10.

Table 1: Functional division between AS and NAS in idle mode

Idle Mode Process	UE Non-Access Stratum	UE Access Stratum
PLMN Selection and Reselection	<p>Maintain the list of allowed PLMN types. It can be GSM-MAP only, ANSI-41 only or both.</p> <p>Maintain a list of PLMNs in priority order according to [5]. Select a PLMN using automatic or manual mode as specified in [5] and request AS to select a cell belonging to this PLMN. For each PLMN, associated radio access technology(ies) may be set.</p> <p>Evaluate reports of available PLMNs from AS for PLMN selection.</p> <p>Maintain a list of equivalent PLMN codes.</p>	<p>Search for a suitable cell belonging to the PLMN requested by NAS. Perform cell selection process as described below.</p> <p>If associated radio access technology(ies) is (are) set for the PLMN, search in this (these) radio access technology(ies) and other radio access technologies for that PLMN as specified in [5].</p> <p>Report available PLMNs with associated PLMN type and radio access technology to NAS on request from NAS or autonomously.</p> <p>It must respect allowed PLMN types indications from NAS.</p>
Cell Selection	<p>Control cell selection for example by indicating radio access technology(ies) associated with the selected PLMN to be used initially in the search of a cell in the cell selection. NAS is also maintaining lists of forbidden registration areas and a list of NAS defined service areas in priority order.</p>	<p>Perform measurements needed to support cell selection.</p> <p>Detect and synchronise to a broadcast channel. Receive and handle broadcast information. Forward NAS system information to NAS.</p> <p>Search for a suitable cell belonging to the PLMN requested by NAS. The cells broadcast their 'PLMN identity' (GSM-MAP) or 'SID' in the system information. Respond to NAS whether such cell is found or not.</p> <p>If associated radio access technology(ies) is (are) set for the PLMN, perform the search in this (these) radio access technology(ies) and other radio access technologies for that PLMN as specified in [5].</p> <p>If such a cell is found, the cell is selected to camp on.</p>
Cell Reselection	<p>Control cell reselection by for example, maintaining lists of forbidden registration areas and a list of NAS defined service areas in priority order.</p> <p>Maintain a list of equivalent PLMN codes and provide the list to AS.</p>	<p>Perform measurements needed to support cell reselection.</p> <p>Detect and synchronise to a broadcast channel. Receive and handle broadcast information. Forward NAS system information to NAS.</p> <p>Change cell if a more suitable cell is found.</p>
Location registration	<p>Register the UE as active after power on.</p> <p>Register the UE's presence in a registration area, for instance regularly or when entering a new registration area.</p> <p>Deregister UE when shutting down.</p>	<p>Report registration area information to NAS.</p>

## 4.3 Service type in Idle mode

This clause defines the level of service that may be provided by the network to a UE in Idle mode.

The action of camping on a cell is necessary to get access to some services. Three levels of services are defined for UE in idle mode:

- Limited service (emergency calls on an acceptable cell)
- Normal service (for public use on a suitable cell)
- Operator service (for operators only on a reserved cell)

Furthermore, the cells are categorised according to which services they offer:

### acceptable cell:

An "acceptable cell" is a cell on which the UE may camp to obtain limited service (originate emergency calls). Such a cell shall fulfil the following requirements, which is the minimum set of requirements to initiate an emergency call in a UTRAN network:

- The cell is not barred, see subclause 5.3.4.1
- The cell selection criteria are fulfilled, see subclause 5.2.3.1.2;

### suitable cell:

A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

- The cell is part of the selected PLMN or, for cell reselection only, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.
- The cell is not barred, see subclause 5.3.4.1.
- The cell is not part of the list of "forbidden LAs for regional provision of service" [9].
- The cell selection criteria are fulfilled, see subclause 5.2.3.1.2.
- The SoLSA criteria are fulfilled [SoLSA support is not in the current release].

### barred cell:

A cell is barred if it is so indicated in the system information [4].

---

# 5 Process and procedure descriptions

## 5.1 PLMN selection and reselection

### 5.1.1 General

In the UE, the access stratum shall report available PLMNs to the non-access stratum on request from the non-access stratum or autonomously.

UE shall maintain a list of allowed PLMN types. The allowed PLMN type can be GSM-MAP only, ANSI-41 only or both. During PLMN selection and reselection, based on the list of allowed PLMN types and a list of PLMN identities in priority order, the particular PLMN may be selected either automatically or manually. Each PLMN in the list of PLMN identities can be identified by either 'PLMN identity' (GSM-MAP) or 'SID'. In the system information on the broadcast channel, the UE can receive identities of multiple PLMNs of either or both types, i.e. a 'PLMN identity' (GSM-MAP) or a 'SID' or a 'PLMN identity' (GSM-MAP) and a 'SID', in a given cell. The result of the PLMN selection is an identifier of the chosen PLMN, the choice being based on the allowed PLMN types, UE capability or other factors. This identifier is one of either 'PLMN identity' for GSM-MAP type of PLMNs or 'SID' for ANSI-41 type of PLMNs.

In case that the list of allowed PLMN types includes GSM-MAP, the non-access part of the PLMN selection and reselection process is specified in [5]. In the case that list of allowed PLMN types includes ANSI-41, the non-access stratum part of the PLMN selection and reselection is specified in TIA/EIA/IS-2000.5 and TIA/EIA/IS-707.

## 5.1.2 Support for Network Selection

### 5.1.2.1 General

PLMN selection for GSM-MAP is described in [5].

PLMN Selection for ANSI-41 is described in TIA/EIA/IS-2000.5 and TIA/EIA/IS-707.

On request of the non-access stratum the access stratum should perform a search for available PLMNs and report them to the non-access stratum.

### 5.1.2.2 UTRA case

The UE shall scan all RF channels in the UTRA band according to its capabilities to find available PLMNs. On each carrier, the UE shall search for the "strongest" cell (according to the cell search procedures for FDD, see [14], and TDD, see [15]) and read its system information, in order to find out which PLMN the cell belongs to. If UE can read the PLMN identity, the found PLMN is reported to the non-access stratum as a high quality PLMN, provided that the following high quality criterion is fulfilled:

1. For an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm.
2. For a TDD cell, the measured P-CCPCH RSCP shall be greater than or equal to -84 dBm.

The found PLMNs, which do not fulfil the high quality criterion but the UE has been able to read their PLMN identities, are reported to the non-access stratum as other PLMNs in decreasing CPICH RSCP order for UTRA FDD cells and in decreasing P-CCPCH RSCP order for UTRA TDD cell.

The search for PLMNs on the rest of the carriers may be stopped on request of the non-access stratum. UE may optimise this search by using stored information of carrier frequencies and optionally also information on cell parameters, e.g. scrambling codes, from previously received measurement control information elements.

Once the UE has selected a PLMN, the cell selection procedure is performed in order to select a suitable cell of that PLMN to camp on.

### 5.1.2.3 GSM case

Support for network selection in GSM is described in [1].

## 5.2 Cell selection and reselection in idle mode

### 5.2.1 Introduction

As stated in clause 1, the present document applies to UEs that support at least UTRA.

Different types of measurements are used in different radio access technologies and modes for the cell selection and reselection. Whenever a direct comparison of these measurements is required, mapping functions will be applied that are defined in [4]. The use of the mapping functions is defined in subclause 7.1. Measured values are marked with the index 'meas', whereas the index 'map' is used whenever mapping functions have been applied onto a measured value. The performance requirements for the measurements are specified in [10][11].

The non-access stratum can control the radio access technology(ies) in which the cell selection should be performed, for instance by indicating radio access technology(ies) associated with the selected PLMN, and by maintaining a list of forbidden registration area(s) and a list of NAS defined service area(s) in priority order. The UE shall select a suitable cell and the radio access mode based on idle mode measurements and cell selection criteria.

When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected.


The non-access stratum is informed if the cell selection and reselection results in changes in the received system information.

For normal service, the UE has to camp on a suitable cell, tune to that cell's control channel(s) so that the UE can:

- Receive system information from the PLMN;
- Receive registration area information from the PLMN, e.g., location area and routing area; and
- Identify the NAS defined service area(s) to which the serving cell belongs;
- Receive other AS and NAS Information;
- If registered:
  - receive paging and notification messages from the PLMN; and
  - initiate call setup for outgoing calls or other actions from the UE.

### 5.2.2 States and state transitions in Idle Mode

Figure 2 shows the states and procedures in Idle Mode.

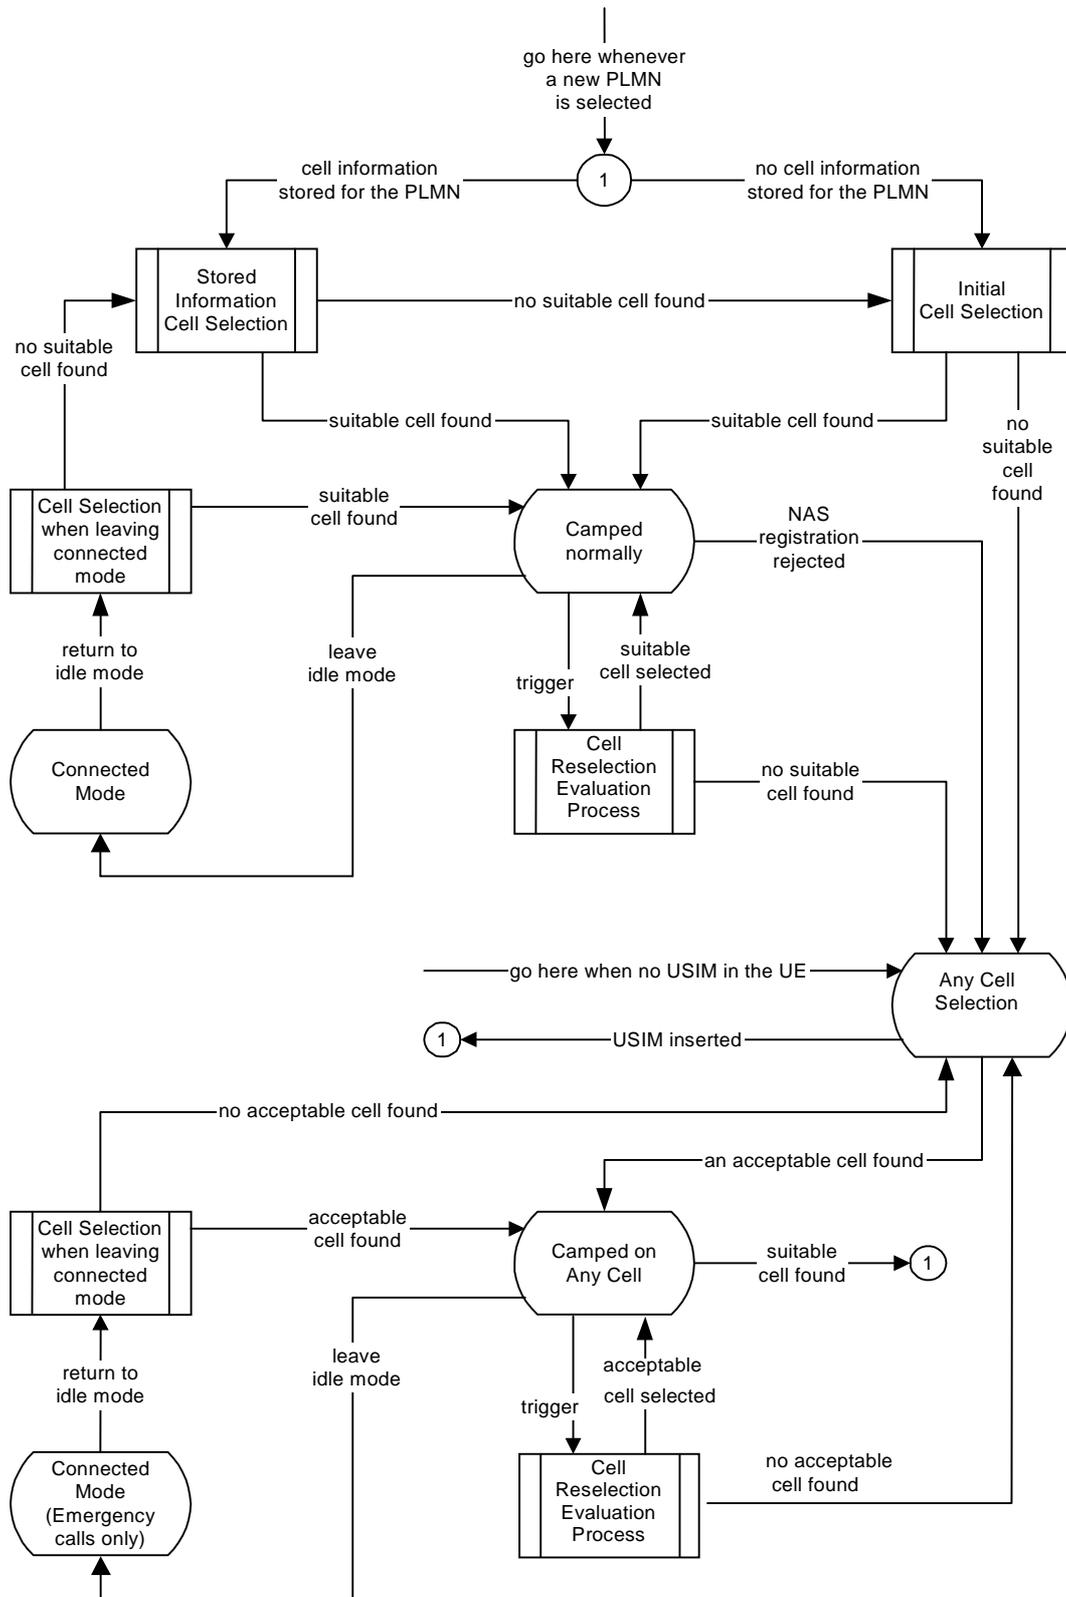

**Figure 2: Idle Mode Cell Selection and Reselection**  
 In any state, a new PLMN selection causes an exit to number 1

Whenever a PLMN has been selected, the UE shall attempt to find a suitable cell to camp on using one of the two procedures, *Initial cell selection* or *Stored information cell selection*. The *Initial cell selection* procedure requires no knowledge about the selected PLMN, but the *Stored information cell selection* procedure requires information to have been stored about the selected PLMN during a previous selection of that PLMN. This stored information makes the search for a suitable cell faster. The information may contain information about several radio access technologies. The non-access stratum may control the cell selection by:

- providing information on radio access technology(ies) associated with the selected PLMN;
- maintaining lists of forbidden registration areas;
- a list of NAS defined service areas in priority order.

One or several radio access technologies may be associated with the selected PLMN. In [5], it is specified which radio access technology a UE shall select to search for a suitable cell of the selected PLMN.

When a suitable cell has been found, the UE shall perform necessary NAS registration procedures. When the UE has registered successfully, the UE shall camp on the cell, state *Camped normally*. In this state, the UE shall monitor paging information, monitor system information and perform radio measurements. The measurements shall be used in evaluation of the and cell reselection criteria. The network controls what the UE shall measure by sending measurement control information in the system information. The measurement control information may contain intra-frequency, inter-frequency and inter-radio-access- technology measurements.

The UE shall evaluate the cell reselection criteria based on radio measurements, and if a better cell is found that cell is selected, procedure *Cell reselection*. The change of cell may imply a change of radio access technology.

When UE leaves idle mode, state *Camped normally*, in order to enter connected mode, state *Connected mode*, the UE shall attempt to access the current serving cell. If the access attempt to the serving cell fails, the UE shall use the *Cell reselection* procedure. When returning to idle mode, the UE shall use the procedure *Cell selection when leaving connected mode* in order to find a suitable cell to camp on, state *Camped normally*. If no suitable cell is found, the *Stored information cell selection* procedure shall be used.

If no suitable cell is found, the UE shall attempt to find an acceptable cell of any PLMN, state *Any cellselection*. This state is also entered if a non-access stratum registration procedure is rejected, see [5], or if there is no USIM in the UE. If an acceptable cell is found, the UE shall camp on this cell and obtain limited service, state *Camped on any cell*. In this state, the UE shall behave as specified for state *Camped normally*, but typically with a different PLMN. Additionally, the UE shall regularly attempt to find a suitable cell using stored information, trying all radio access technologies that are supported by the UE. If a suitable cell is found, the PLMN is reselected which causes an exit to number 1.

When a cell reselection is triggered, the UE shall evaluate the cell reselection criteria based on radio measurements, and if a better cell is found that cell is selected. The change of cell may imply a change of radio access technology.

If no acceptable cell is found, the UE shall continue to search for an acceptable cell of any PLMN in state *Any cell selection* trying all radio access technologies that are supported by the UE.

NOTE: The 'PLMN selection and reselection' process may select a new PLMN at any time in idle mode, which in Figure 2 causes an exit to number 1.

## 5.2.3 Cell Selection Process

### 5.2.3.1 UTRA case

#### 5.2.3.1.1 Description

Whenever a PLMN is selected [5], the UE shall attempt to find a suitable cell of that PLMN to camp on according to the following steps.

- 1) The UE shall use one of the following two search procedures:
  - a) Initial Cell Selection

This procedure requires no prior knowledge of which RF channels are UTRA carriers. The UE shall scan all RF channels in the UTRA band to find a suitable cell. On each carrier, the UE searches first for the strongest cell and reads its system information, in order to find out which PLMN the cell belongs to. If the selected PLMN is found, the search of the rest of carriers may be stopped. Once the UE has found a suitable cell for the selected PLMN, the UE shall select it.

#### b) Stored Information Cell Selection

This procedure requires stored information of carrier frequencies and optionally also information on cell parameters, e.g. scrambling codes, from previously received measurement control information elements. Once the UE has found a suitable cell for the selected PLMN the UE shall select it.

#### 2) Move to state *camped normally*

If no suitable cell of selected PLMN is found and the stored information cell selection procedure was used in step 1, the Initial cell selection procedure shall be started. If the UE is unable to find any suitable cell of selected PLMN using the Initial cell selection procedure, it shall attempt to camp on the strongest acceptable cell and enter the Camped on any cell state, where it can only obtain limited service. In PLMN selection, automatic mode, this would normally result in a new PLMN selection [5].

### 5.2.3.1.2 Criteria

The cell selection criteria  $S$  are defined as follows.

$$S_{qual} = Q_{qualmeas} - Q_{qualmin}$$

$$S_{rxlev} = Q_{rxlevmeas} - Q_{rxlevmin} - P_{compensation}$$

The cell selection criterion  $S$  is fulfilled when:

$$S_{qual} > 0$$

$$S_{rxlev} > 0$$

$S_{qual}$  has to be evaluated for FDD cells only.

$S_{qual}$	Cell Selection quality value, (dB) Not applicable for TDD cells or GSM cells.
$S_{rxlev}$	Cell Selection RX level value (dB)
$Q_{qualmeas}$	Measured cell quality value. The quality of the received signal expressed in CPICH $E_c/N_0$ (dB) for FDD cells. Not applicable for TDD cells or GSM cells.
$Q_{rxlevmeas}$	Measured cell RX level value. This is received signal, CPICH RSCP for FDD cells (dBm), P-CCPCH RSCP for TDD cells (dBm) and RXLEV for GSM cells (dBm).
$Q_{qualmin}$	Minimum required quality level in the cell (dB). Not applicable for TDD cells or GSM cells.
$Q_{rxlevmin}$	Minimum required RX level in the cell. (dBm)
$P_{compensation}$	$\max(UE\_TXPWR\_MAX\_RACH - P\_MAX, 0)$ (dB)
$UE\_TXPWR\_MAX\_RACH$	Maximum TX power level an UE may use when accessing the cell on RACH (read in system information), (dBm)
$P\_MAX$	Maximum RF output power of the UE, (dBm)

### 5.2.3.2 GSM case

The cell selection procedures in GSM are specified in [1].

### 5.2.4 Void

## 5.2.5 Camped Normally State

### 5.2.5.1 UTRA case

When camped normally, the UE shall perform the following tasks:

- select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;
- monitor relevant System Information. This is specified in [4];
- perform necessary measurements for the cell reselection evaluation procedure;
- execute the cell reselection evaluation process on the following occasions/triggers:
  - 1) UE internal triggers, so as to meet performance as specified in [10] and [11];
  - 2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

### 5.2.5.2 GSM case

The Camped Normally State is specified in [1].

## 5.2.6 Cell Reselection Evaluation Process

### 5.2.6.1 UTRA case

The cell reselection process is specified in the following sub-clauses:

#### 5.2.6.1.1 Measurement rules for cell re-selection when HCS is not used

If the system information broadcast in the serving cell indicates that HCS is not used, then for intra-frequency and inter-frequency measurements and inter-RAT measurements, the UE shall:

- use Squal for FDD cells and Srxlev for TDD for  $S_x$  and apply the following rules.
  1. If  $S_x > S_{\text{intrasearch}}$ , UE need not perform intra-frequency measurements.  
If  $S_x \leq S_{\text{intrasearch}}$ , perform intra-frequency measurements.  
If  $S_{\text{intrasearch}}$  is not sent for serving cell, perform intra-frequency measurements.
  2. If  $S_x > S_{\text{intersearch}}$ , UE need not perform inter-frequency measurements  
If  $S_x \leq S_{\text{intersearch}}$ , perform inter-frequency measurements.  
If  $S_{\text{intersearch}}$  is not sent for serving cell, perform inter-frequency measurements.
  3. If  $S_x > S_{\text{search}_{\text{RAT } m}}$ , UE need not perform measurements on cells of RAT "m".  
If  $S_x \leq S_{\text{search}_{\text{RAT } m}}$ , perform measurements on cells of RAT "m".  
If  $S_{\text{search}_{\text{RAT } m}}$  is not sent for serving cell, perform measurements on cells of RAT "m".

#### 5.2.6.1.2 Measurement rules for cell re-selection when HCS is used

If the system information broadcast in the serving cell indicates that HCS is used, then for intra-frequency and inter-frequency measurements, the UE shall:

1. For intra-frequency and inter-frequency threshold-based measurement rules
  - use Squal for FDD cells and Srxlev for TDD cells for  $S_x$  and apply the following rules.
  - IF ( $S_{\text{rxlev}_s} \leq S_{\text{search}_{\text{HCS}}}$ ) or (if FDD and  $S_x \leq S_{\text{intersearch}}$ ) THEN
    - measure on all intra-frequency and inter-frequency cells
  - ELSE

IF ( $S_x > S_{\text{intra search}}$ ) THEN

measure on all intra-frequency and inter-frequency cells, which have higher HCS priority level than the serving cell unless measurement rules for fast-moving UEs are triggered

ELSE

measure on all intra-frequency and inter-frequency cells, which have equal or higher HCS priority level than the serving cell unless measurement rules for fast-moving UEs are triggered

ENDIF

ENDIF

2. For intra-frequency and inter-frequency measurement rules for fast-moving UEs:

If the number of cell reselections during time period  $T_{\text{CRmax}}$  exceeds  $N_{\text{CR}}$ , high-mobility has been detected. In this high-mobility state, UE shall

- measure intra-frequency and inter-frequency neighbouring cells, which have equal or lower HCS priority than serving cell.
- prioritise re-selection of intra-frequency and inter-frequency neighbouring cells on lower HCS priority level before neighbouring cells on same HCS priority level.

When the number of cell reselections during time period  $T_{\text{CRmax}}$  no longer exceeds  $N_{\text{CR}}$ , UE shall

- continue these measurements during time period  $T_{\text{CRmaxHyst}}$  and
- revert to measurements according to the threshold based measurement rules.

When serving cell belongs to a hierarchical cell structure, the UE shall follow these rules for Inter-RAT measurements:

1. Inter-RAT threshold-based measurement rules

use  $S_{\text{qual}}$  for FDD cells and  $S_{\text{rxlev}}$  for TDD cells for  $S_x$  and apply the following rules.

IF ( $S_{\text{rxlev}_s} \leq S_{\text{HCS,RATm}}$ ) or (if FDD and  $S_{\text{qual}} \leq S_{\text{SearchRATm}}$ ) THEN

UE shall measure on all inter-RATm cells

ELSE

IF ( $S_x > S_{\text{limit,SearchRATm}}$ ) THEN

UE need not measure neighbouring cells in RAT "m"

ELSE

UE shall measure on all neighbouring cells in RAT "m", which have equal or higher HCS priority level than the serving cell unless measurement rules for fast-moving UEs are triggered

ENDIF

ENDIF

2. Inter-RAT measurement rules for fast-moving UEs

- If the number of cell reselections during time period  $T_{\text{CRmax}}$  exceeds  $N_{\text{CR}}$ , high-mobility has been detected. In this high-mobility state, UE shall
  - measure the neighbouring cells in RAT "m", which have an equal or lower HCS priority than the serving cell
  - prioritise re-selection of neighbouring cells in RAT "m" on lower HCS priority level before neighbouring cells in RAT "m" on same HCS priority level.

When the number of cell reselections during time interval  $T_{\text{CRmax}}$  no longer exceeds  $N_{\text{CR}}$ , UE shall

- continue these measurements during time period  $T_{C_{\max}Hyst}$ , and
- revert to measure according to the threshold-based measurement rules.

#### 5.2.6.1.3 Non-suitable cells ( $Squal > 0$ or $Srxlev > 0$ )

If the best cell according to cell reselection criteria specified in subclause 5.2.6.1.4, does not fulfil all requirements for a suitable cell, that cell, together with all cells on that frequency shall be removed as candidate for cell re-selection (see also subclause 5.3).

#### 5.2.6.1.4 Cell Reselection Criteria

The following cell re-selection criteria are used for intra-frequency cells, inter-frequency cells and inter-RAT cells:

The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is defined by:

$$H_s = Q_{\text{meas\_LEV},s} - Q_{\text{hcs}_s}$$

$$H_n = Q_{\text{meas\_LEV},n} - Q_{\text{hcs}_n} - TO_n * L_n$$

If it is indicated in system information that HCS is not used, the quality level threshold criterion H is not applied.

The cell-ranking criterion R is defined by:

$$R_s = Q_{\text{map},s} + Q_{\text{hyst}_s}$$

$$R_n = Q_{\text{map},n} - Q_{\text{offset},s,n} - TO_n * (1 - L_n)$$

where:

$$TO_n = \text{TEMP\_OFFSET}_n * W(\text{PENALTY\_TIME}_n - T_n)$$

$$L_n = 0 \quad \text{if } \text{HCS\_PRIO}_n = \text{HCS\_PRIO}_s$$

$$L_n = 1 \quad \text{if } \text{HCS\_PRIO}_n <> \text{HCS\_PRIO}_s$$

$$W(x) = 0 \quad \text{for } x < 0$$

$$W(x) = 1 \quad \text{for } x \geq 0$$

$\text{TEMP\_OFFSET}_n$  applies an offset to the H and R criteria for the duration of  $\text{PENALTY\_TIME}_n$  after a timer  $T_n$  has started for that neighbouring cell.

$\text{TEMP\_OFFSET}_n$  and  $\text{PENALTY\_TIME}_n$  are only applicable if the usage of HCS is indicated in system information.

The timer  $T_n$  is implemented for each neighbouring cell.  $T_n$  shall be started from zero when one of the following conditions becomes true:

- if  $\text{HCS\_PRIO}_n <> \text{HCS\_PRIO}_s$  and

$$Q_{\text{meas\_LEV},n} > Q_{\text{hcs}_n}$$

Or

- if  $HCS\_PRIO_n = HCS\_PRIO_s$  and
  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH RSCP in the serving cell, and:

$$Q_{map,n} > Q_{map,s} + Q_{offset1,s,n}$$

- for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH Ec/No in the serving cell, and:

$$Q_{meas\_LEV,n} > Q_{meas\_LEV,s} + Q_{offset2,s,n}$$

- for all other serving and neighbour cells:

$$Q_{map,n} > Q_{map,s} + Q_{offset1,s,n}$$

$T_n$  for the associated neighbour cell shall be stopped as soon as any of the above conditions are no longer fulfilled. Any value calculated for  $TO_n$  is valid only if the associated timer  $T_n$  is still running else  $TO_n$  shall be set to zero.

At cell-reselection, a timer  $T_n$  is stopped only if the corresponding cell is not a neighbour cell of the new serving cell, or if the criteria given above for starting timer  $T_n$  for the corresponding cell is no longer fulfilled with the parameters of the new serving cell. On cell re-selection, timer  $T_n$  shall be continued to be run for the corresponding cells but the criteria given above shall be evaluated with parameters broadcast in the new serving cell if the corresponding cells are neighbours of the new serving cell.

$S_n$	Cell Selection value of the neighbouring cell, (dB)
$Q_{map,n}$	Quality of the neighbouring cell, after mapping function is applied, derived from CPICH $E_c/N_0$ or CPICH RSCP for FDD cells, from P-CCPCH RSCP for TDD cells and from RXLEV for GSM cells. For FDD cells, the measurement that is used to derive the quality value is set by the <u>Cell_selection_and_reselection_quality_measure</u> information element.
$Q_{map,s}$	Quality of the serving cell, after mapping function is applied, derived from CPICH $E_c/N_0$ or CPICH RSCP for FDD cells and from P-CCPCH RSCP for TDD cells. For FDD cells, the measurement that is used to derive the quality value is set by the <u>Cell_selection_and_reselection_quality_measure</u> information element.
$Q_{meas\_LEV}$	Quality value. The quality value of the received signal expressed in CPICH_Ec/No or CPICH_RSCP_LEV for FDD cells as set by the <u>Cell_selection_and_reselection_quality_measure</u> information element, P-CCPCH_RSCP_LEV for TDD cells and RXLEV for GSM cells.

Cell reselection parameters broadcast in system information are listed in subclause 5.2.6.1.5.

The quality values  $Q_{map,n}$  and  $Q_{map,s}$  are determined by mapping functions. The parameters for these mapping functions are broadcast in system information. The mapping function maps a certain range of measurement values to a representing quality value.  $Q_{map,n}$  and  $Q_{map,s}$  can have values between 0 and 99 (step size 1).

The UE shall perform ranking of all cells that fulfil the S criterion (see subclause 5.2.3.1.2) among

- all cells that have the highest HCS\_PRIO among those cells that fulfil the criterion  $H \geq 0$ . Note that this rule is not valid when UE high-mobility is detected (see subclause 5.2.6.1.2).
- all cells, not considering HCS priority levels, if no cell fulfil the criterion  $H \geq 0$ . This case is also valid when it is indicated in system information that HCS is not used, that is when serving cell does not belong to a hierarchical cell structure.

The cells shall be ranked according to the R criteria specified above, deriving  $Q_{map,n}$  and  $Q_{map,s}$  and calculating the R values using CPICH RSCP, P-CCPCH RSCP and RXLEV for FDD, TDD and GSM cells, respectively.

The offset  $Q_{offset1,s,n}$  is used for  $Q_{offset,s,n}$  to calculate  $R_n$ , the hysteresis  $Q_{hyst1,s}$  is used for  $Q_{hyst,s}$  to calculate  $R_s$ .

If the usage of HCS is indicated in system information,  $TEMP\_OFFSET1_n$  is used for  $TEMP\_OFFSET_n$  to calculate  $TO_n$ . If it is indicated in system information that HCS is not used,  $TEMP\_OFFSET_n$  is not applied when calculating  $R_n$ . The best ranked cell is the cell with the highest R value.

If a TDD or GSM cell is ranked as the best cell, then the UE shall perform cell re-selection to that TDD or GSM cell.

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH Ec/No, the UE shall perform a second ranking of the FDD cells according to the R criteria specified above, but using the measurement quantity CPICH Ec/No for deriving the  $Q_{\text{map},n}$  and  $Q_{\text{map},s}$  and calculating the R values of the FDD cells. In this case, the mapping function  $Q_{\text{map}} = Q_{\text{meas\_LEV}}$  is used and the offset  $Q_{\text{offset}2_{s,n}}$  is used for  $Q_{\text{offset}_{s,n}}$  to calculate  $R_n$ , the hysteresis  $Q_{\text{hyst}2_s}$  is used for  $Q_{\text{hyst}_s}$  to calculate  $R_s$ . If the usage of HCS is indicated in system information,  $\text{TEMP\_OFFSET}2_n$  is used to calculate  $\text{TO}_n$ . If it is indicated in system information that HCS is not used,  $\text{TEMP\_OFFSET}_n$  is not applied when calculating  $R_n$ . Following this second ranking, the UE shall perform cell re-selection to the best ranked FDD cell.

In all cases, the UE shall reselect the new cell, only if the cell reselection criteria are fulfilled during a time interval  $T_{\text{reselection}}$ .

#### 5.2.6.1.5 Cell reselection parameters in system information broadcasts

The selection of values for network controlled parameters can be optimised by means of different methods. Examples of methods are described in [6]. Cell reselection parameters are broadcast in system information and are read in the serving cell as follows:

##### **Qoffset1<sub>s,n</sub>**

This specifies the offset between the two cells. It is used for TDD and GSM cells and for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH RSCP.

##### **Qoffset2<sub>s,n</sub>**

This specifies the offset between the two cells. It is used for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH Ec/No.

##### **Qhyst1<sub>s</sub>**

This specifies the hysteresis value ( $Q_{\text{hyst}}$ ). It is used for TDD and GSM cells and for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH RSCP.

##### **Qhyst2<sub>s</sub>**

This specifies the hysteresis value ( $Q_{\text{hyst}}$ ). It is used for FDD cells if the quality measure for cell selection and re-selection is set to CPICH Ec/No.

##### **HCS\_PRIO<sub>s</sub>, HCS\_PRIO<sub>n</sub>**

This specifies the HCS priority level (0-7) for serving cell and neighbouring cells.

##### **Qhcs<sub>s</sub>, Qhcs<sub>n</sub>**

This specifies the quality threshold levels for applying prioritised hierarchical cell re-selection.

##### **Qqualmin**

This specifies the minimum required quality level in the cell in dB. It is not applicable for TDD cells or GSM cells.

##### **Qrxlevmin**

This specifies the minimum required RX level in the cell in dBm.

##### **PENALTY\_TIME<sub>n</sub>**

This specifies the time duration for which the  $\text{TEMPORARY\_OFFSET}_n$  is applied for a neighbouring cell.

##### **TEMPORARY\_OFFSET1<sub>n</sub>**

This specifies the offset applied to the H and R criteria for a neighbouring cell for the duration of  $PENALTY\_TIME_n$ . It is used for TDD and GSM cells and for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH RSCP.

#### **TEMPORARY\_OFFSET2<sub>n</sub>**

This specifies the offset applied to the H and R criteria for a neighbouring cell for the duration of  $PENALTY\_TIME_n$ . It is used for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH Ec/No.

#### **T<sub>CRmax</sub>**

This specifies the duration for evaluating allowed amount of cell reselection(s).

#### **N<sub>CR</sub>**

This specifies the maximum number of cell reselections.

#### **T<sub>CRmaxHyst</sub>**

This specifies the additional time period before the UE can revert to low-mobility measurements.

#### **T<sub>reselection<sub>s</sub></sub>**

This specifies the cell reselection timer value.

#### **S<sub>searchHCS</sub>**

This threshold is used in the measurement rules for cell re-selection when HCS is used. It specifies the limit for  $S_{rxlev}$  in the serving cell below which the UE shall initiate measurements of all neighbouring cells of the serving cell.

#### **S<sub>searchRAT1</sub> - S<sub>searchRATk</sub>**

This specifies the RAT specific threshold in the serving cell used in the inter-RAT measurement rules.

#### **S<sub>HCS,RATm</sub>**

This threshold is used in the measurement rules for cell re-selection when HCS is used. It specifies the RAT specific threshold in the serving cell used in the inter-RAT measurement rules.

#### **S<sub>intrasearch</sub>**

This specifies the threshold (in dB) for intra frequency measurements and for the HCS measurement rules.

#### **S<sub>intersearch</sub>**

This specifies the threshold (in dB) for intra frequency measurements and for the HCS measurement rules.

#### **S<sub>limit,SearchRATm</sub>**

This threshold is used in the measurement rules for cell re-selection when HCS is used. It specifies the RAT specific threshold (in dB) in the serving UTRA cell above which the UE need not perform any inter-RAT measurements in RAT "m".

#### **Mapping Info**

This specifies the information necessary to define the mapping function used for mapping a certain range of measurement values to a representing quality value (0..99, step size 1).

### **5.2.6.2 GSM case**

The cell reselection procedure in GSM, including reselection from GSM to UTRA, is specified in [1].

## 5.2.7 Cell Selection when leaving connected mode

### 5.2.7.1 UTRA case

When returning to idle mode from connected mode, the UE shall select a suitable cell to camp on. Candidate cells for this selection are the cell(s) used immediately before leaving connected mode. If no suitable cell is found, the UE shall use the Stored information cell selection procedure in order to find a suitable cell to camp on.

When returning to idle mode after an emergency call on any PLMN, the UE shall select an acceptable cell to camp on. Candidate cells for this selection are the cell(s) used immediately before leaving connected mode. If no acceptable cell is found, the UE shall continue to search for an acceptable cell of any PLMN in state Any cell selection.

### 5.2.7.2 GSM case

Cell selection when leaving connected mode in GSM is specified in [1].

## 5.2.8 Any Cell Selection state

In this state, the UE shall attempt to find an acceptable cell to camp on, trying all radio access technologies that are supported by the UE.

The UE shall stay in this state until an acceptable cell is found.

## 5.2.9 Camped on Any Cell State

### 5.2.9.1 UTRA case

If an acceptable cell is found, the UE shall camp on this cell and obtain limited service, state Camped on any cell.

In this state, the UE shall perform the following tasks:

- monitor relevant System Information; This is specified in [4];
- perform necessary measurements for the cell reselection evaluation procedure;
- Execute the cell reselection evaluation process on the following occasions/triggers:
  - 1) UE internal triggers, so as to meet performance as specified in [10] and [11];
  - 2) When information on the BCCH used for the cell reselection evaluation procedure has been modified;
- regularly attempt to find a suitable cell trying all radio access technologies that are supported by the UE. If a suitable cell is found, this causes an exit to number 1 in Figure 2.

### 5.2.9.2 GSM case

The camped on any cell state in GSM is specified in [1].

## 5.3 Cell Access Restrictions

### 5.3.1 UTRA cells

There are two mechanisms which allow an operator to impose cell access restrictions. The first mechanism uses indication of cell status and special reservations for control of cell selection and re-selection procedures. The second mechanism, referred to as Access Control, shall allow to prevent selected classes of users from sending initial access messages for load control reasons. At subscription, one or more Access Classes are allocated to the subscriber and stored in the USIM [9], which are employed for this purpose.

### 5.3.1.1 Cell status and cell reservations

Cell status and cell reservations are indicated with the *Cell Access Restriction* Information Element in the System Information Message [4] by means of three Information Elements:

- Cell barred (IE type: "barred" or "not barred"),
- Cell Reserved for operator use (IE type: "reserved" or "not reserved"),
- Cell Reserved for SoLSA exclusive use (IE type: "reserved" or "not reserved").

When cell status is indicated as "not barred", "not reserved" for operator use, and "not reserved" for SoLSA,

- the UE may select/re-select this cell during the cell selection and cell re-selection procedures in Idle mode and in Connected mode.

When cell status is indicated as "not barred", "not reserved" for operator use, and "reserved" for SoLSA,

- UEs not supporting SoLSA shall behave as if cell status "barred" is indicated (see below).

When cell status is indicated as "not barred", "reserved" for operator use,

- UEs assigned to an Access Class in the range 11 to 15 may select/re-select this cell if in the home PLMN.
- UEs assigned to an Access Class in the range 0 to 9 shall behave as if cell status "barred" is indicated (see below).

When cell status "barred" is indicated,

- the UE is not permitted to select/re-select this cell, except for emergency call, when no other acceptable cell can be found, and the cell is not barred for emergency call by means of the "Access Class 10 bit", see clause 5.3.1.3.
- The UE shall ignore the "Cell Reserved for SoLSA exclusive use" IE.
- The UE shall select another cell according to the following rule:
  - If the "Intra-frequency cell re-selection indicator" IE in Cell Access Restriction IE is set to value "allowed", the UE may select another cell on the same frequency if selection/re-selection criteria are fulfilled.
  - If the UE is camping on another cell, the UE shall exclude the barred cell from the neighbouring cell list until the expiry of a time interval  $T_{\text{barred}}$ . The time interval  $T_{\text{barred}}$  is sent via system information in a barred cell together with Cell status information in the Cell Access Restriction IE.
  - If the UE does not select another cell, and the barred cell remains to be the "best" one, the UE shall after expiry of the time interval  $T_{\text{barred}}$  again check whether the status of the barred cell has changed.
  - If the "Intra-frequency cell re-selection indicator" IE is set to "not allowed" the UE shall not re-select a cell on the same frequency as the barred cell. For emergency call, the Intra-frequency cell re-selection indicator IE shall be ignored, i.e. even if it is set to "not allowed" the UE may select another intra-frequency cell.
  - If the barred cell remains to be the "best" one, the UE shall after expiry of the time interval  $T_{\text{barred}}$  again check whether the status of the barred cell has changed.

### 5.3.1.2 Access Control

Information on cell access restrictions associated with the Access Classes is broadcast as system information, [4].

The UE shall ignore Access Class related cell access restrictions when selecting a cell to camp on, i.e. it shall not reject a cell for camping on because access on that cell is not allowed for any of the Access Classes of the UE. A change of the indicated access restriction shall not trigger cell re-selection by the UE.

Access Class related cell access restrictions shall be checked by the UE before sending an RRC CONNECTION REQUEST message when entering Connected Mode from UTRAN Idle mode. Cell access restrictions associated with the Access Classes shall not apply when the initial access for entering Connected Mode is triggered by an Inter-RAT cell re-selection to UTRAN, and for a UE which already is in Connected Mode.

### 5.3.1.3 Emergency Call

Generally, emergency calls shall be allowed in all cells whose barred status is not barred, independent of restrictions due to cell reservations.

A restriction on emergency calls, if needed, shall be indicated in the "Access class barred list" IE [4]. Full details of operation under "Access class barred list" are described in [9].

### 5.3.2 GSM cells

The cell access restrictions applicable to GSM are specified in [1].

## 5.4 Cell Reselection Processes in RRC Connected Mode

### 5.4.1 Initial Cell Reselection Process

Triggers for the Initial cell re-selection process are specified in [4].

The UE shall attempt to find a suitable cell belonging to the selected PLMN according to the following steps:

- 1) The UE shall scan all RF channels of the UTRA band to find a suitable cell. The UE may optimise this search by using stored information of carrier frequencies and optionally also information on cell parameters, e.g. scrambling codes, from previously received measurement control information elements.
- 2) After the UE has found one suitable cell for the selected PLMN, the UE shall create a candidate list consisting of this cell and its neighbouring UTRA cells, as received in measurement control information via the selected cell.
- 3) Rank the cells according to the cell reselection criteria (see 5.2.6.1.4), without considering the parameters  $Q_{hyst}$  and  $T_{resel}$ .
- 4) Check if the highest ranked cell fulfils all requirements for a suitable cell. If so, select this cell. If this cell does not fulfil all requirements for a suitable cell, this cell and all cells on the same frequency shall be removed as candidates for cell selection (see also 5.3.1), and step 3 shall be repeated for the remaining cells.

The use of mapping functions is indicated in system information. For each radio access mode and radio access technology, such a mapping function is defined and its parameters are broadcast in system information. The mapping function maps a certain range of measurement values to a representing quality value  $Q_{map}$  that can have values between 0 and 99 (step size 1). These quality values  $Q_{map}$  are then used to evaluate the cell reselection criteria in subclause 5.2.6.1.4.

If the UE is unable to find any suitable cell, the UE shall release the RRC connection and enter idle mode.

#### 5.4.1.1 Criteria

The criteria for initial cell reselection are specified in subclause 5.2.2.1.2.

#### 5.4.2 Void

### 5.4.3 Cell Reselection Process

The cell reselection process in Connected Mode is the same as used for idle mode, described in subclause 5.2.6.

## 5.5 Location Registration

In the UE, the access stratum shall report registration area information to the non-access stratum.

The non-access part of the location registration process is specified in [5].

---

## 6 Broadcast information receiving

### 6.1 Reception of System Information

Requirements are specified in [4].

### 6.2 Cell Broadcast in Idle Mode

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages in the Idle mode. When several PCHs exist in the cell, the FACH which carries the CTCH may be mapped to a different SCCPCH than the PCH selected by the UE for paging in Idle mode (as specified in Sec. 8.1). In this case, UEs with basic service capabilities shall be capable to change from the SCCPCH that carries the PCH selected for paging to another SCCPCH which carries Cell Broadcast messages (i.e. the CTCH mapped to an FACH) and receive BMC messages during time intervals which do not conflict with the UE specific paging occasions.

---

## 7 Measurements for cell selection / reselection

### 7.1 Use of Mapping Functions

Different types of measurements are used in different radio access technologies and modes for the cell selection and reselection (CPICH Ec/N0 or CPICH RSCP in UTRA FDD, P-CCPCH RSCP in UTRA TDD, RXLEV in GSM). The use of mapping functions is indicated in system information.

Mapping functions are used for mapping a certain range of measurement values  $Q_{\text{meas\_LEV}}$  (CPICH\_EC/N0, CPICH\_RSCP\_LEV, P-CCPCH\_RSCP\_LEV, RXLEV) to a representing quality value  $Q_{\text{map}}$  (0..99, step size 1).

For each radio access technology and mode, one mapping function is defined. It may be defined over one or several consecutive intervals of the measurement values  $Q_{\text{meas\_LEV}}$ .

The size of the consecutive intervals is sufficiently defined by their upper limit (given by parameter *Upper\_limit*). In case of only one interval specified, the parameter *Upper\_limit* is not needed and the interval is equivalent to the measurement range defined for that radio access technology. In case of more than one interval specified, the upper limit of the last interval defined is equivalent to the upper limit of the defined measurement range. The lower limit of an interval is equivalent to the upper limit of the interval before that interval. For the first interval, the lower limit is equivalent to the lower limit of the defined measurement range.

Within each interval, one function type (given by parameter *Function\_type*) is defined by two parameters *Map\_parameter\_1* and *Map\_parameter\_2*. The function type "linear" is specified:  $Q_{\text{map}} = a * Q_{\text{meas\_LEV}} + b$ , if  $Q_{\text{meas\_LEV}}$  is the measured value and  $Q_{\text{map}}$  is the representing quality value.

*Map\_parameter\_1* and *Map\_parameter\_2* for an interval define the  $Q_{\text{map}}$  values that the  $Q_{\text{meas\_LEV}}$  values at the upper and the lower limit of this interval are mapped to, respectively. In other words, the linear function within one interval is defined by two tuples ( $Q_{\text{meas\_LEV}}$ ,  $Q_{\text{map}}$ ) at the interval limits, so that the parameters *a* and *b* can be derived from this.

Accordingly, if the mapping function is steady between two consecutive intervals, *Map\_parameter\_2* for the first interval has the same value as *Map\_parameter\_1* for the following interval. This is illustrated in the following Figure 3:

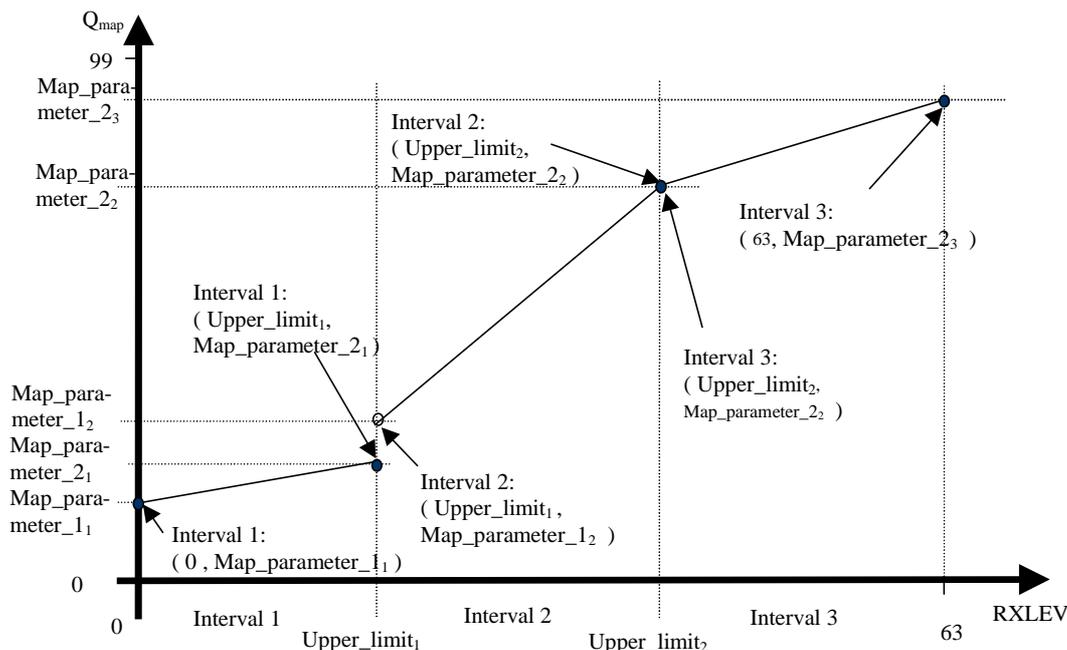


Figure 3: Illustration of mapping of RXLEV using multiple linear models

If no mapping functionality is needed (e.g. in FDD- or TDD-only networks), an implicit mapping is used:  $Q_{map} = Q_{meas\_LEV}$ . This is specified as default case.

The parameters defined for each interval (Function\_type, Map\_parameter\_1, Map\_parameter\_2 and Upper\_limit) are broadcast in system information.

## 8 Paging and SCCPCH selection in Idle mode

### 8.1 Paging Channel selection

System information block type 5 (SIB 5) defines common channels to be employed in Idle mode [4]. In a cell, a single or several PCHs may be established. Each Secondary Common Control Physical Channel (SCCPCH) indicated to the UE in system information may carry up to one PCH. Thus, for each defined PCH there is one uniquely associated PICH also indicated.

In case that more than a single PCH and associated PICH are defined in SIB 5, the UE shall perform a selection according to the following rule:

- The UE shall select a SCCPCH from the ones listed in SIB 5 based on IMSI as follows:

$$\text{"Index of selected SCCPCH"} = \text{IMSI mod } K,$$

where K is equal to the number of listed SCCPCHs which carry a PCH (i.e. SCCPCHs carrying FACH only shall not be counted). These SCCPCHs shall be indexed in the order of their occurrence in SIB 5 from 0 to K-1.

"Index of selected SCCPCH" identifies the selected SCCPCH with the PCH and the uniquely associated PICH to be used by the UE.

### 8.2 SCCPCH selection when entering Connected mode

When entering Connected mode from Idle mode by sending an RRC CONNECTION REQUEST message, the UE shall select the S-CCPCH which carries an FACH to be used for reception of the RRC CONNECTION SETUP message according to the following rule:

- the UE shall select an SCCPCH from the SCCPCHs listed in System Information Block type 5 (SIB 5) based on "Initial UE Identity" as follows:

$$\text{"Index of selected SCCPCH"} = \text{"Initial UE Identity"} \bmod K,$$

where K is equal to the number of listed SCCPCHs which carry a FACH (i.e. SCCPCHs carrying PCH only shall not be counted). These SCCPCHs shall be indexed from 0 to K-1 in the order of their occurrence in SIB 5, and "Index of selected SCCPCH" identifies the selected SCCPCH. "Initial UE Identity" refers to the Information Element included by the UE into the RRC CONNECTION REQUEST message. In the above formula, the parameter "Initial UE Identity" shall be interpreted as follows, depending on the choice of UE-Id type of the respective IE:

For UE-Id type "IMSI (GSM-MAP)", i.e. the IE is given as sequence of digits of type Integer(0..9), "Initial UE Identity" shall be interpreted as an integer number, where the first digit given in the sequence represents the highest order digit.

For UE-Id types "TMSI and LAI (GSM-MAP)" or "P-TMSI and RAI (GSM-MAP)", only the TMSI or P-TMSI parts given as Bitstring(32) shall be used, and "Initial UE Identity" shall be interpreted as a binary representation of an integer number, where the first bit in the Bitstring represents the highest order bit.

For UE-Id type "IMEI", i.e. the IE is given as sequence of hexadecimal digits of type Integer(0..15), "Initial UE Identity" shall be interpreted as a hexadecimal representation of an integer number, where the first digit given in the sequence represents the highest order digit.

For UE-Id type "IMSI (DS-41)", i.e. the IE is given as octet string, "Initial UE Identity" shall correspond to the decoded decimal representation of the IMSI-S part included in the octet string (see TIA/EIA/IS-2000-5).

For UE-Id types "ESN (DS-41)" or "TMSI (DS-41)", i.e. the IE is given as Bitstring(32), "Initial UE Identity" shall be interpreted as a binary representation of an integer number, where the first bit in the Bitstring represents the highest order bit.

For UE-Id type "IMSI and ESN (DS-41)" only the ESN part shall be used as "Initial UE Identity", as defined above.

## 8.3 Discontinuous Reception

The UE may use Discontinuous Reception (DRX) in idle mode in order to reduce power consumption. When DRX is used the UE needs only to monitor one Page Indicator, PI, (see definition in [7] and [8]) in one Paging Occasion per DRX cycle.

The DRX cycle length shall be  $\text{MAX}(2^k, \text{PBP})$  frames, where k is an integer and PBP is the Paging Block Periodicity. PBP is only applicable for TDD and is equal to the PICH repetition period that is broadcast in system information. For FDD, PBP=1.

The UE may be attached to different CN domains with different CN domain specific DRX cycle lengths. The UE shall store each CN domain specific DRX cycle length for each CN domain the UE is attached to and use the shortest of those DRX cycle lengths. The CS CN specific DRX cycle length coefficient shall be updated locally in the UE using information given in system information. On the other hand, the PS CN specific DRX cycle length coefficient shall be updated after the negotiation between the UE and PS CN by NAS procedure. If no specific value "k" is negotiated in NAS procedure, the UE and PS CN shall use the DRX cycle length given for PS CN domain in system information.

The DRX cycle lengths to use for UTRAN connected mode is the shortest of the following:

- UTRAN DRX cycle length;
- any of the stored CN domain specific DRX cycle length for the CN domains the UE is only attached to with no signalling connection established.

The UE shall use the IMSI, the number of available SCCPCH which carry a PCH (K) as derived according to subclause 8.1, the Cell System Frame Number (SFN), Np (for FDD, Np is the number of page indicators within a frame; for TDD, Np is the number of page indicators within a paging block), Frame offset (For FDD, Frame offset = 0; for TDD, PICH frame offset values are given in system information), PBP and the DRX cycle length to determine the Paging Occasions.

In FDD the UE shall monitor its paging indicator in the PICH frame with SFN given by the Paging Occasion

In TDD the UE shall monitor its paging indicator in the paging block given by the Paging Occasion. The Paging Occasion gives the SFN of the first frame of the paging block.

The value of the Paging Occasion is determined as follows:

$$\text{Paging Occasion} = \{(\text{IMSI div } K) \bmod (\text{DRX cycle length div PBP})\} * \text{PBP} + n * \text{DRX cycle length} + \text{Frame Offset}$$

Where  $n = 0, 1, 2, \dots$  as long as SFN is below its maximum value.

The actual Page Indicator within a Paging Occasion that the UE shall read is similarly determined based on IMSI.

The Page Indicator to use is calculated by using the following formula:

$$\text{PI} = \text{DRX Index mod } N_p$$

where  $\text{DRX Index} = \text{IMSI div } 8192$

In FDD mode,  $N_p = (18,36,72,144)$  is the number of Page Indicators per frame, and is given in IE "Number of PI per frame", part of system information in FDD mode. In TDD mode,  $N_p$  is the number of Page Indicators per paging block and is calculated by the Paging Indicator Length  $L_{PI}$ , the Burst Type (long or short midamble for 3.84 Mpcs TDD) and the PICH repetition length, which are given in system information.

If the UE has no IMSI, for instance when making an emergency call without USIM, the UE shall use a default number,  $\text{IMSI} = 0$ , in the formulas above.

For FDD, see [7] for details about the timing between a PICH frame and when the paging message is transmitted on the PCH in the associated S-CCPCH frame.

In TDD mode, the Paging Message Receiving Occasion is calculated using the following formula:

$$\text{Paging Message Receiving Occasion} = \text{Paging Occasion} + N_{\text{PICH}} + N_{\text{GAP}} + \{(\text{DRX Index div } N_p) \bmod N_{\text{PCH}}\} * 2$$

The value  $N_{\text{PICH}}$  is the number of frames for PICH transmission and is equal to the PICH repetition length given in system information. The value  $N_{\text{GAP}}$  is the number of frames between the last frame carrying PICH for this Paging Occasion and the first frame carrying paging messages for this Paging Occasion. The value  $N_{\text{PCH}}$  is the number of Paging Groups.  $N_{\text{PCH}}$  and  $N_{\text{GAP}}$  are given in system information.

## 9 Multicast services


### 9.1 State diagram between the multicast service and DSCH

NOTE: DSCH for multicast services is not supported in the current release.

The multicast service relative to the DSCH consists of the following states:

- MT\_Null State;
- MT\_Monitor State;
- MT\_Saving State;
- MT\_Active State.

Figure 4 shows the multicast state diagram relative to the DSCH. The MT\_Monitor State is a state for decoding the DSCH in order to monitor its multicast control data and the MT\_Saving State is a state in which the UE savings for the supporting power saving feature.

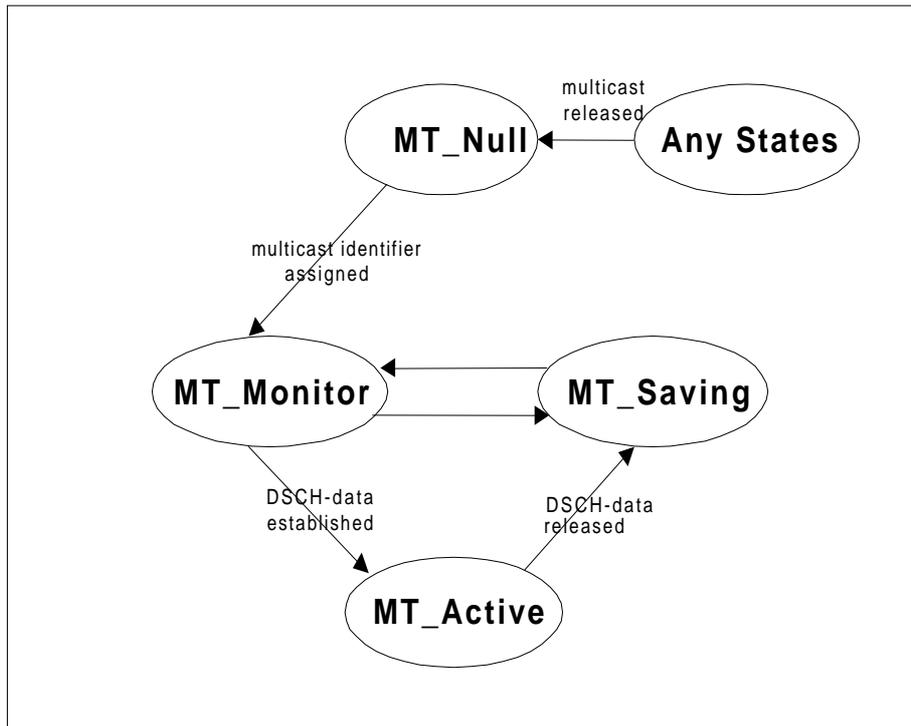

**Figure 4: Multicast State Diagram relative to the DSCH, MT=Multicast service**

### 9.1.1 MT\_Null State

a) Attributes

- Multicast service has not been activated.
- DSCH is not established.

b) Behaviour

- Waits for activation of multicast service.

### 9.1.2 MT\_Monitor State

a) Attributes

- DSCH is monitored in order to decode the multicast control data that contains the assigned multicast identifier.

b) Behaviour

- Receives the DSCH control data on DSCH and confirms the assigned multicast identifier.

### 9.1.3 MT\_Saving State

a) Attributes

- DSCH is not monitored for the control or the user data.

b) Behaviour

- FFS

### 9.1.4 MT\_Active State

- a) Attributes
  - DSCH is not monitored for the control data.
  - DSCH is monitored for the user data.
- b) Behaviour
  - Receives the multicast user data on the established DSCH.

## 10 Examples of Procedures

### 10.1 NAS initiated change of system information

The sequence in Figure 5 shows the change of broadcast system information initiated from the non-access stratum (NAS).

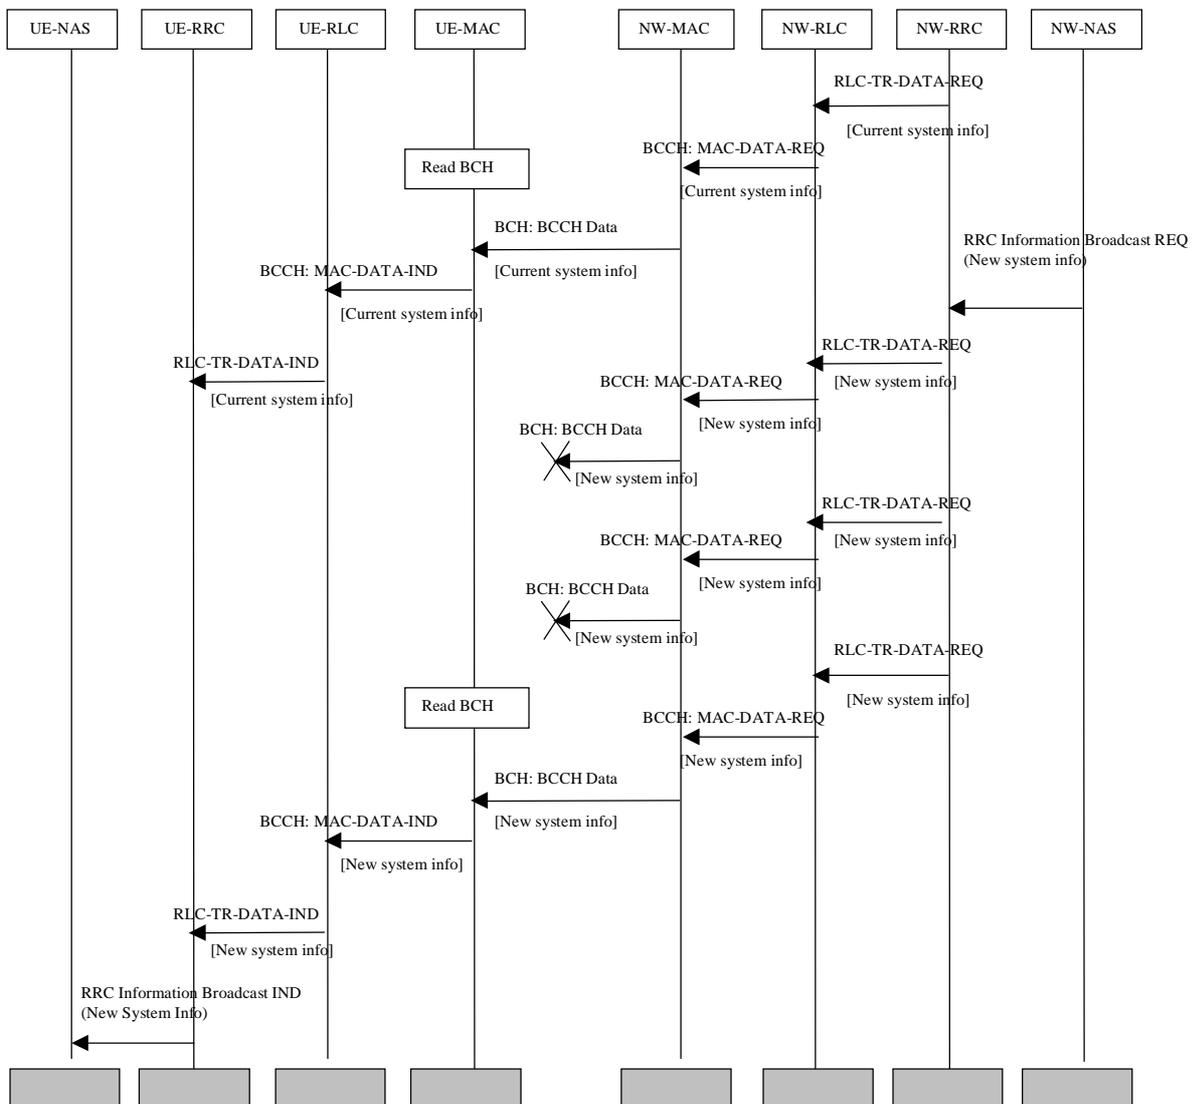


Figure 5: Example sequence, non-access stratum initiated change of broadcast system info


A non-access stratum entity in the network issues a request for change of the broadcast system information, by issuing a RRC Information Broadcast REQ primitive over the General Control (GC) SAP.

The change in system information in this example is such that it is not necessary for the UEs to be forced to receive BCCH immediately after the change. All UEs will eventually read the new system information either at e.g. cell reselection or at UE state change.

When the UE reads system information on BCCH and the RRC layer finds out that the non-access part of the information has been changed, an RRC Information Broadcast IND primitive is issued to the non-access stratum entity in the UE over the General Control (GC) SAP.

**NOTE:** The network may force the UEs in a paging group to read system information by sending a page request message, but this is not shown in the example above.


## 10.2 System Information Update to NAS

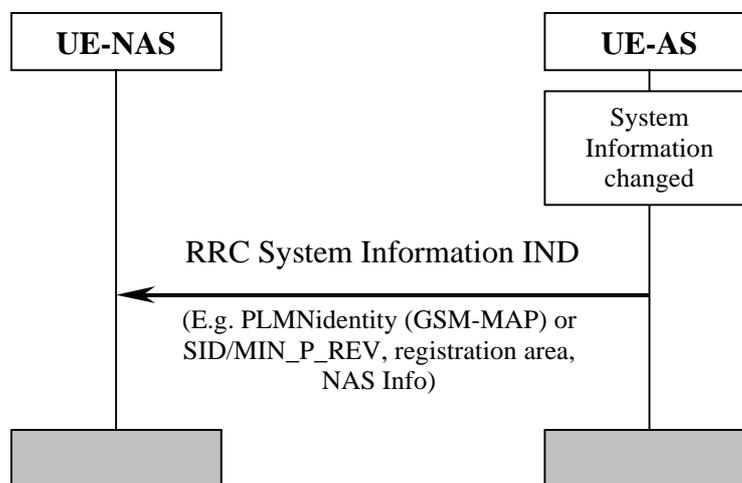

**Figure 6: System Information Update to NAS**

AS sends system information to NAS when a change of system information is detected in the cell currently camped on. This happens for instance when a new cell is selected due to cell reselection. The information sent can include PLMN identity (GSM-MAP or SID, registration area and NAS information. The NAS information includes the identity of the NAS defined service area.

### 10.3 CN originated paging in idle mode

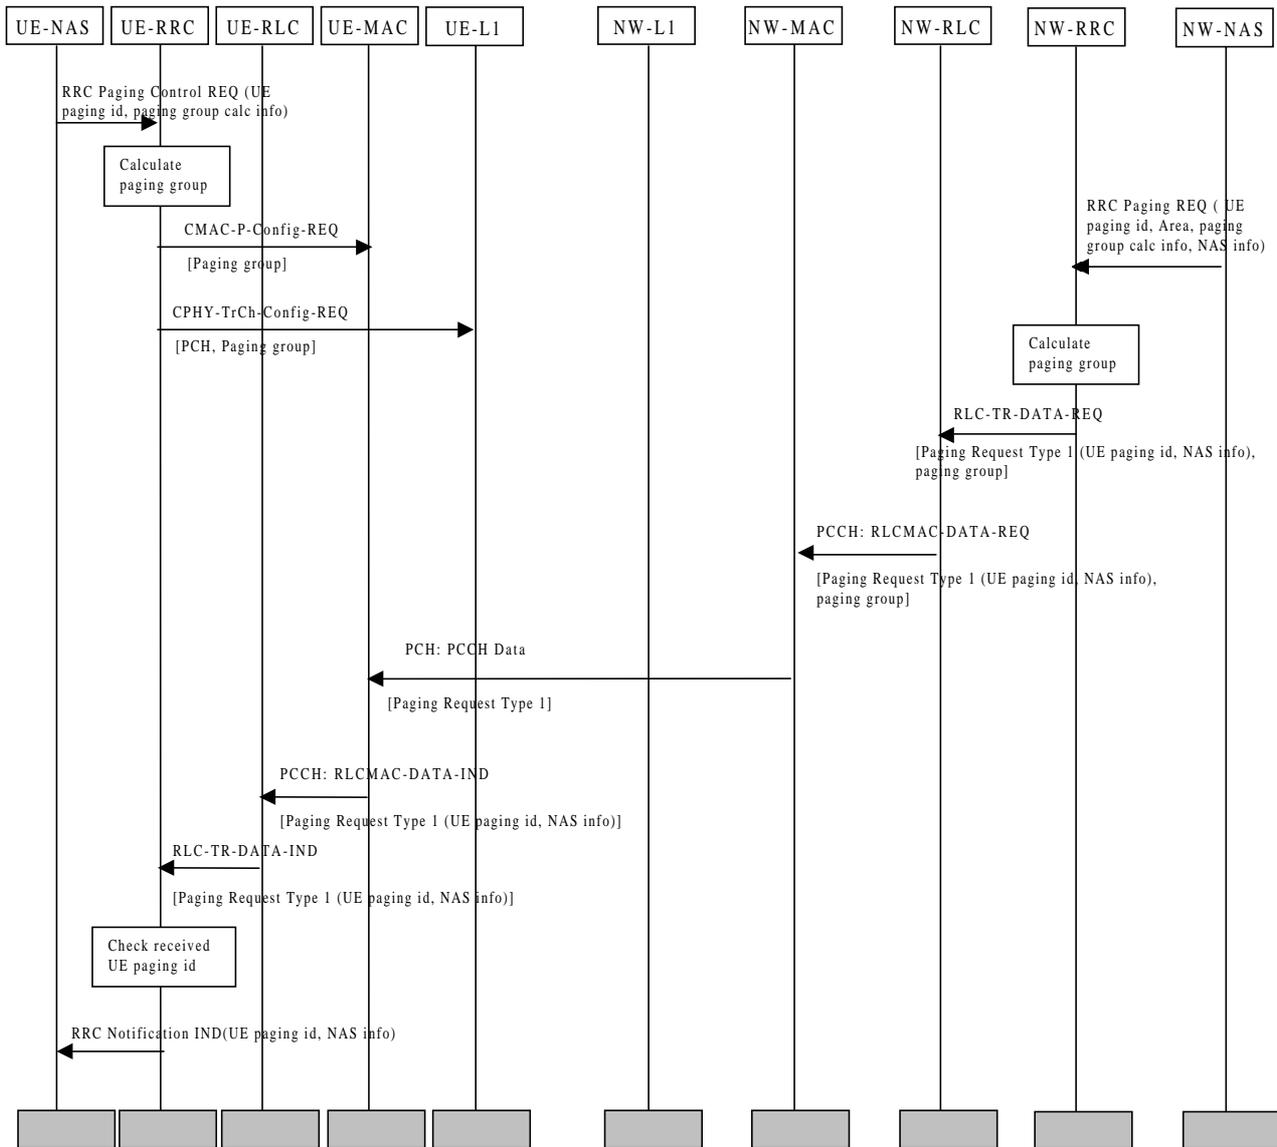

**Figure 7: Example sequence of CN initiated paging request in idle mode**

Figure 7 illustrates a CN originated paging request when the UE is in idle mode.

In the UE, a NAS entity issues the primitive RRC Paging Control REQ, which tells RRC to listen to paging and notifications addressed to a given UE paging identity and on a paging group which can be calculated using information given from NAS.


**NOTE:** The paging group calculation info can e.g. be the IMSI of the UE.

A NAS entity on the network side requests paging of an UE using the RRC Paging REQ primitive over the Nt-SAP. The primitive contains a UE paging identity, an area where the page request is to be broadcast, information for calculation of the paging group and NAS information to be transparently transmitted to the UE by the paging request.

The RRC layer calculates the paging group, and formats a Paging Request Type 1 message containing the UE paging identity and the NAS information. The RRC layer then requests MAC to transmit the message on a specific PCH on the selected paging group. The PCH to be used for transmission of the paging message is selected based on the IMSI of the UE.

In the UE, the RRC layer continuously monitors the paging group compares the UE paging identities in received paging request messages with its own identities. A match occurs, and in this case the UE paging identity and the NAS information is forwarded to the NAS entity of the UE.


## 10.4 PLMN Selection, automatic mode, normal case

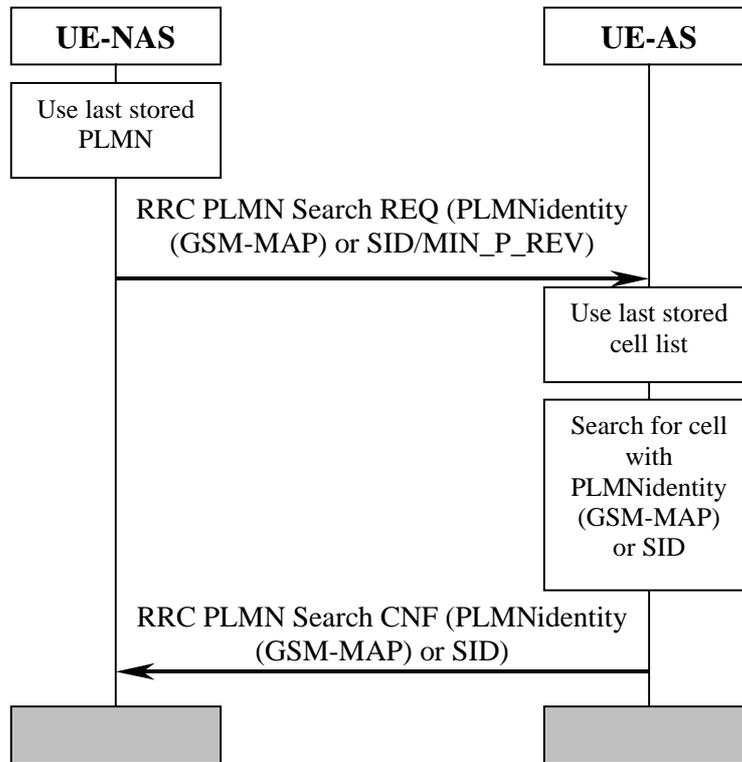

**Figure 8: PLMN Selection, automatic mode, normal case**

At power-on, the non-access stratum (NAS) selects the PLMN with highest priority, possibly the last PLMN stored prior to previous power off. The access stratum (AS) is requested to find a cell belonging to that PLMN. When searching for the requested PLMN and in order to speed up the search, AS may use a list of cell information stored prior to previous power-off. When a cell belonging to the requested PLMN is found, that cell is selected and NAS is notified that the PLMN was found.


## 10.5 PLMN Reselection, automatic mode

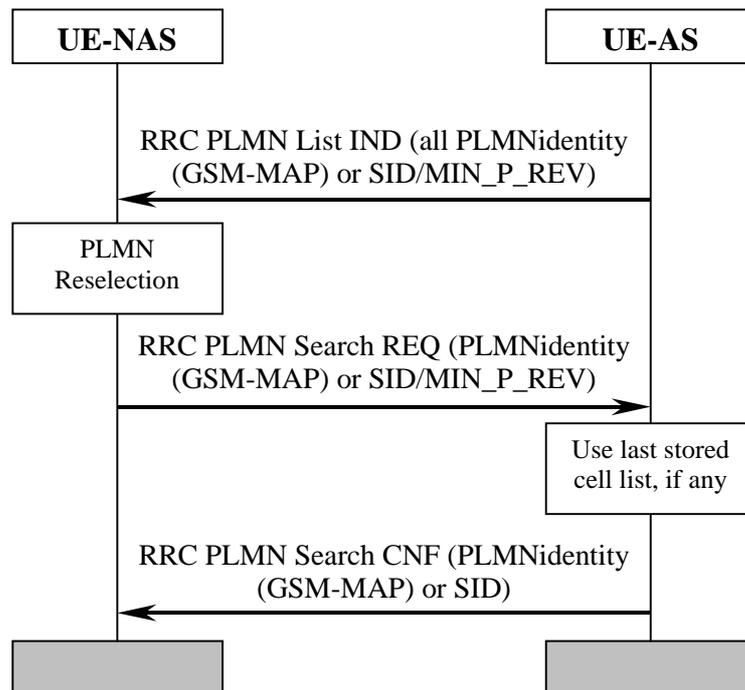

**Figure 9: PLMN Reselection, automatic mode**

Triggered by, for instance, a timer, AS sends a list to NAS with all PLMNs currently available. The list includes the identities of available PLMNs and possibly information about their NAS defined service area(s). Assuming that a PLMN with higher priority is found, NAS requests AS to select a cell belonging to the PLMN with highest priority. When searching for the requested PLMN and in order to speed up the search, AS may use a list of cell information previously stored, if any. When a cell belonging to the requested PLMN is found, that cell is selected and NAS is notified that the PLMN was found.


## 10.6 PLMN Reselection, manual mode

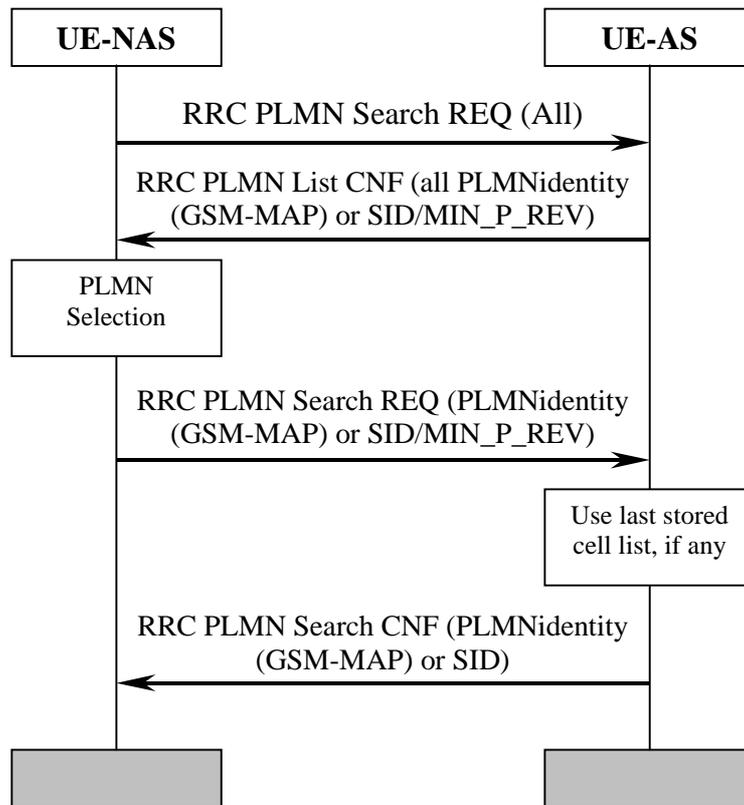

**Figure 10: PLMN Reselection, manual mode**

NAS requests AS to report all PLMNs currently available, for instance as a response to a user request. AS sends a list to NAS with all PLMNs currently available. The list includes the identities of available PLMNs and possibly information about their NAS defined service area(s). Assuming that a PLMN with higher priority is selected by for instance the user, NAS requests AS to select a cell belonging to the PLMN with highest priority. When searching for the requested PLMN and in order to speed up the search, AS may use a list of cell information previously stored, if any. When a cell belonging to the requested PLMN is found, that cell is selected and NAS is notified that the PLMN was found.

## 10.7 PLMN Selection, automatic mode, selected PLMN not found

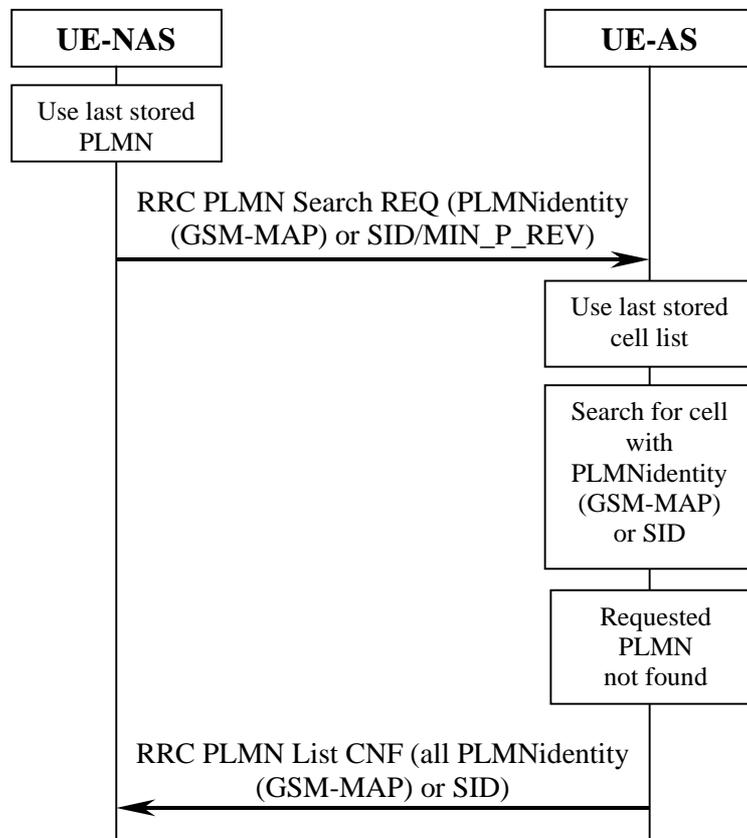


**Figure 11: PLMN Selection, automatic mode, selected PLMN not found**

At power-on, the non-access stratum selects the PLMN with highest priority, possibly from the list of PLMNs stored prior to previous power off. The access stratum is requested to find a cell belonging to that PLMN. When searching for the requested PLMN and in order to speed up the search, AS may use a list of cell information stored prior to previous power-off. If no cell is found belonging to the requested PLMN, a list of available PLMNs is sent to NAS, indicating which PLMN has been temporarily chosen by AS.

## 10.8 NAS Controlled Cell Selection

### 10.8.1 Execution in Access Stratum

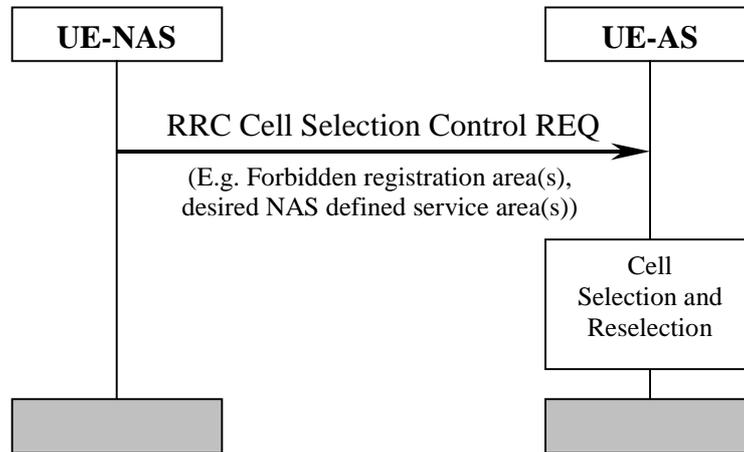


**Figure 12: NAS Controlled Cell Selection, execution in AS**

NAS may influence the cell selection and reselection by sending control information to AS. This information can include, for example, lists of forbidden registration areas and a list of NAS defined service areas in priority order. The control information is used by AS in cell selection and reselection:

- Cells belonging to a forbidden registration area will only be selected if no better cell is found. At this point, the services provided the UE might be limited.
- Cells belonging to a NAS defined service area with higher priority than current service area will be considered better than the cell currently camped on. Depending on radio access mode, the most suitable cell in idle mode may not be the most suitable cell in connected mode.

## 10.8.2 Execution in Non-Access Stratum

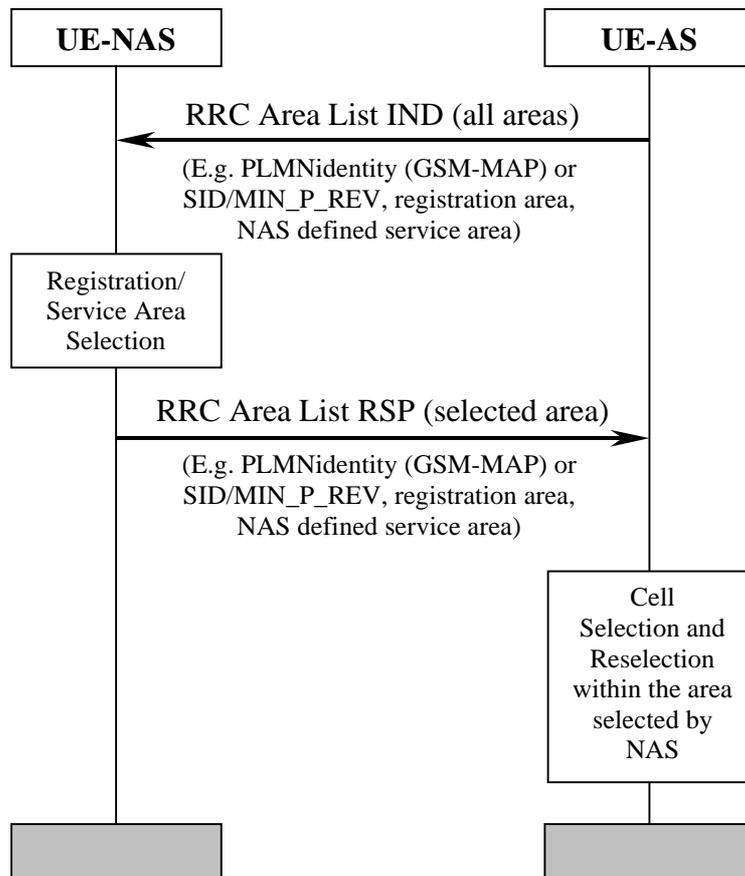

**Figure 13: NAS Controlled Cell Selection, execution in NAS**

As an alternative to the example in subclause 11.8.1, AS sends cell selection information to NAS. This information can include PLMN identity (GSM-MAP) or SID, registration area and NAS defined service area. The information contains the full set of available registration areas and NAS defined service areas. The information is typically sent when there is a change of available areas, for instance when a neighbour cell belonging to a new registration area/NAS defined service area is found. Correspondingly, a new list of available areas is sent from AS to NAS when for instance coverage is lost from the cell currently camped on and that is the only cell belonging to the current NAS defined service area.

AS performs cell selection and reselection for the selected registration area/NAS defined service area without interaction with NAS. However, before reselecting a cell in another registration area/NAS defined service area, AS must check with NAS.

## Annex A (informative): Change history

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
10/1999	RP-05	RP-99464	-	-	Approved at TSG-RAN #5 and placed under Change Control	-	3.0.0
12/1999	RP-06	RP-99632	001	2	Modification and editorial changes	3.0.0	3.1.0
	RP-06	RP-99633	002	3	Specification of Cell reselection procedures in	3.0.0	3.1.0
	RP-06	RP-99633	003	2	Integration of Cell Broadcast Service (CBS)	3.0.0	3.1.0
	RP-06	RP-99633	004	2	Measurement used as a quality estimate for cell	3.0.0	3.1.0
	RP-06	RP-99632	006		Discontinuous reception	3.0.0	3.1.0
	RP-06	RP-99633	008	3	Barred Cells and Access Control	3.0.0	3.1.0
	RP-06	RP-99633	009		Introduction of network control of UE measurement	3.0.0	3.1.0
	RP-06	RP-99631	011		Editorial issues	3.0.0	3.1.0
	03/2000	RP-07	RP-000037	007	2	Cell Selection for DS-41 mode	3.1.0
RP-07		RP-000037	014		Modified description of cell search procedure	3.1.0	3.2.0
RP-07		RP-000037	018	1	UE individual DRX cycles in CELL_PCH and URA_PCH states	3.1.0	3.2.0
RP-07		RP-000037	019	1	Cell re-selection criteria including HCS	3.1.0	3.2.0
RP-07		RP-000037	021		Modified description of DRX	3.1.0	3.2.0
06/2000	RP-08	RP-000217	025		Triggering of inter-system measurements for cell re-selection when HCS is used	3.2.0	3.3.0
	RP-08	RP-000217	026	5	Cell re-selection	3.2.0	3.3.0
	RP-08	RP-000217	027	4	Access Control	3.2.0	3.3.0
	RP-08	RP-000217	028		Downlink signalling failure	3.2.0	3.3.0
	RP-08	RP-000217	029		Cell-reselection parameter signalling	3.2.0	3.3.0
	RP-08	RP-000217	030		Cell Selection and Reselection	3.2.0	3.3.0
	RP-08	RP-000217	031	1	CN DRX cycle coefficient	3.2.0	3.3.0
	RP-08	RP-000217	031	1	CN DRX cycle coefficient	3.2.0	3.3.0
09/2000	RP-09	RP-000355	035	2	Paging channel selection	3.3.0	3.4.0
	RP-09	RP-000355	037	1	Editorial corrections	3.3.0	3.4.0
	RP-09	RP-000355	039		HCS measurement rules	3.3.0	3.4.0
	RP-09	RP-000355	042	2	Usage of Ec/N0 measurement quantity for cell ranking	3.3.0	3.4.0
	RP-09	RP-000355	044		Correction and restructuring	3.3.0	3.4.0
12/2000	RP-10	RP-000565	046	1	Support for PLMN selection	3.4.0	3.5.0
	RP-10	RP-000565	049	1	Correction of algorithm for paging channel selection	3.4.0	3.5.0
	RP-10	RP-000565	050		Alignment of use of TEMP_OFFSET parameters with TS 25.331	3.4.0	3.5.0
	RP-10	RP-000565	051	2	Clarifications and Editorial Corrections	3.4.0	3.5.0
	RP-10	RP-000565	052	1	Clarifications to cell selection and reselection procedures	3.4.0	3.5.0
	RP-10	RP-000565	053		Removal of immediate cell evaluation	3.4.0	3.5.0
	RP-10	RP-000565	054		One step cell selection	3.4.0	3.5.0
	RP-10	RP-000565	054		One step cell selection	3.4.0	3.5.0
03/2001	RP-11	RP-010022	055	1	Usage of HCS Parameters in Cell Reselection	3.5.0	3.6.0
	RP-11	RP-010022	056		Clarification of usage of "Initial UE-Id" for SCCPCH selection	3.5.0	3.6.0
	RP-11	RP-010022	058		Clarification of paging occasion	3.5.0	3.6.0
	RP-11	RP-010022	059	1	Correction in Any Cell Selection State	3.5.0	3.6.0
	RP-11	RP-010022	061		Correction to the definition of a suitable cell	3.5.0	3.6.0
	RP-11	RP-010022	062		Correction to discontinuous reception in TDD	3.5.0	3.6.0
	RP-11	RP-010022	063	1	Correction of PI calculation for Paging DRX	3.5.0	3.6.0
	RP-11	RP-010200	064	3	Equivalent PLMN codes	3.5.0	3.6.0
	RP-11	RP-010022	065		High quality cell in PLMN selection	3.5.0	3.6.0
	RP-11	RP-010022	066		Clean-up	3.5.0	3.6.0
	RP-11	RP-010037	057	1	Support of 1.28Mcps TDD	3.6.0	4.0.0

---

## History

<b>Document history</b>		
V4.0.0	March 2001	Publication