

ETSI TS 133 320 V17.0.0 (2022-04)



**Universal Mobile Telecommunications System (UMTS);
LTE;
Security of Home Node B (HNB)
/ Home evolved Node B (HeNB)
(3GPP TS 33.320 version 17.0.0 Release 17)**



Reference

RTS/TSGS-0333320vh00

Keywords

LTE,SECURITY,UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° w061004871

Important notice

The present document can be downloaded from:
<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at
<https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx>

If you find errors in the present document, please send your comment to one of the following services:
<https://portal.etsi.org/People/CommitteeSupportStaff.aspx>

If you find a security vulnerability in the present document, please report it through our
Coordinated Vulnerability Disclosure Program:
<https://www.etsi.org/standards/coordinated-vulnerability-disclosure>

Notice of disclaimer & limitation of liability

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.

No recommendation as to products and services or vendors is made or should be implied.

No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.

In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use or inability to use the software.

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

DECT™, PLUGTESTS™, UMTS™ and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM®** and the GSM logo are trademarks registered and owned by the GSM Association.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Legal Notice	2
Modal verbs terminology.....	2
Foreword.....	6
1 Scope	7
2 References	7
3 Definitions and abbreviations.....	8
3.1 Definitions	8
3.2 Abbreviations	8
4 Overview of Security Architecture and Requirements.....	9
4.1 System architecture of H(e)NB	9
4.2 Network Elements	10
4.2.1 H(e)NB	10
4.2.2 Security Gateway (SeGW).....	10
4.2.3 H(e)NB Management System (H(e)MS)	11
4.2.4 UE.....	11
4.2.5 H(e)NB Gateway (H(e)NB-GW) and MME.....	11
4.2.6 AAA Server and HSS	11
4.2.7 Void	11
4.2.8 Local Gateway (L-GW)	11
4.3 Interfaces (Reference Points)	11
4.3.1 Backhaul Link.....	11
4.3.2 H(e)MS Interface	11
4.3.3 Interface between SeGW and AAA Server, AAA Server and HSS.....	11
4.3.4 Interface between H(e)NBs.....	12
4.4 Security Requirements and Principles.....	12
4.4.1 Operation	12
4.4.2 Requirements on H(e)NB	12
4.4.3 Requirements on SeGW	13
4.4.4 Requirements on H(e)MS	13
4.4.5 Requirements on Backhaul Link.....	14
4.4.6 Requirements on H(e)MS Link.....	14
4.4.7 Requirements on Local Gateway (L-GW)	15
4.4.8 Requirements on the Direct Link between H(e)NBs	15
4.4.9 Requirements on Verification of H(e)NB Identity and Operating Access Mode.....	15
5 Security Features	16
5.1 Secure Storage and Execution	16
5.1.1 Hosting Party Module	16
5.1.2 Trusted Environment (TrE).....	16
5.1.2.1 General	16
5.2 Device Mutual Authentication	17
5.3 Hosting Party Mutual Authentication.....	17
5.4 Other security features.....	18
6 Security Procedures in H(e)NB	19
6.1 Device Integrity Check.....	19
6.1.1 Device Integrity Check Procedure	19
6.1.2 Protection of Trusted Reference Value(s).....	19
6.2 Void.....	19
6.3 Measures for Clock Protection	19
6.3.1 Clock Synchronization Security Mechanisms for H(e)NB	19
7 Security Procedures between H(e)NB and SeGW	20
7.1 Device Validation.....	20

7.2	Device Authentication	20
7.2.1	General.....	20
7.2.2	SeGW and Device Mutual Authentication Procedure.....	21
7.2.3	H(e)NB/IKEv2 Processing Requirements for SeGW Certificates	22
7.2.4	SeGW/IKEv2 Processing Requirements for H(e)NB Certificates	22
7.2.5	Security Profiles.....	22
7.2.5.1	Profile for IKEv2	22
7.2.5.2	IKEv2 Certificate Profile	23
7.2.5.2.1	IKEv2 Entity Certificates	23
7.2.5.2.2	IKEv2 CA Certificates	23
7.3	Hosting Party Authentication	23
7.4	IPsec Tunnel Establishment	24
7.5	Device Authorization	24
8	Security Aspects of H(e)NB Management	25
8.1	Location Verification	25
8.1.1	General.....	25
8.1.2	IP Address provided by H(e)NB	25
8.1.3	IP Address and/or access line location identifier provided by broadband access provider	25
8.1.4	Surrounding macro-cell information provided by H(e)NB	25
8.1.5	GNSS information provided by H(e)NB	25
8.1.6	Requirements	26
8.2	Access Control Mechanisms for H(e)NB	26
8.2.1	Non-CSG Method	26
8.2.2	CSG Method	26
8.3	Protection of H(e)MS traffic between H(e)MS and H(e)NB	26
8.3.1	Connection to H(e)MS accessible on MNO Intranet	26
8.3.2	Connection to H(e)MS accessible on public Internet	27
8.3.2.1	General	27
8.3.2.2	Device Validation	27
8.3.3	TLS certificate profile	28
8.3.3.1	TLS entity certificates	28
8.3.3.2	TLS CA certificates	28
8.3.4	TR-069 protocol profile	29
8.4	Protection of SW Download	29
8.5	Enrolment of H(e)NB to an Operator PKI	30
8.5.1	General.....	30
8.5.2	Enrolment Procedure	30
8.5.3	Certificate Validation.....	30
9	Security Aspects of Emergency Call Handling	31
10	Security Aspects for Mobility	32
10.1	Inbound mobility	32
10.2	Outbound mobility	32
11	Security Procedures for Direct Interfaces between Base Stations.....	33
11.1	General	33
11.2	Direct Link between two H(e)NBs.....	33
Annex A (informative):	 Authentication Call-flows.....	34
A.1	Device Authentication Call-flow Example	34
A.2	Combined Device and HP Authentication Call-flow Example	35
Annex B (informative):	 Location Verification Examples	38
B.1	Example of Location verification based on IP address and line identifier in NASS.....	38
B.2	Example process of location verification when the verifying node receive different types of location information	38
Annex C:	 Change history	40

History	42
---------------	----

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the security architecture for the H(e)NB subsystem. This includes security requirements on Home Node Bs, Home eNode Bs, and other H(e)NB-associated network nodes (e.g. SeGW and H(e)MS), as well as the procedures and features which are provided to meet those requirements.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.

For a specific reference, subsequent revisions do not apply.

For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 32.583: "Telecommunications management; Home Node B (HNB) Operations, Administration, Maintenance and Provisioning (OAM&P); Procedure flows for Type 1 interface HNB to HNB Management System (HMS)".
- [3] IETF RFC 4187: "Extensible Authentication Protocol Method for 3rd Generation Authentication and Key Agreement (EAP-AKA)".
- [4] - [5] Void.
- [6] IETF RFC 4739: "Multiple Authentication Exchanges in the Internet Key Exchange (IKEv2 Protocol", Nov 2006".
- [7] 3GPP TS 33.310: "Network Domain Security (NDS); Authentication Framework (AF)".
- [8] 3GPP TS 23.003: "Numbering, addressing and identification".
- [9] 3GPP TS 33.210: "3G security; Network Domain Security (NDS); IP network layer security".
- [10] 3GPP TS 33.234: "3G security; Wireless Local Area Network (WLAN) interworking security".
- [11] 3GPP TS 32.593: "Telecommunication management; Procedure flows for Type 1 interface H(e)NB to H(e)NB Management System (H(e)MS)".
- [12] 3GPP TS 25.467: "UTRAN architecture for 3G Home Node B (HNB); Stage 2".
- [13] - [14] Void.
- [15] The Broadband Forum TR-069: "CPE WAN Management Protocol v1.1", Issue 1 Amendment 2, December 2007.
- [16] - [17] Void.
- [18] ETSI ES 282 004 (V1.1.1): "Telecommunications and Internet Converged Services and Protocols for Advanced Networking (TISPAN); NGN functional architecture; Network Attachment Sub-System (NASS)", 2006.
- [19] ETSI ES 283 035 (V1.1.1): "Telecommunications and Internet Converged Services and Protocols for Advanced Networking (TISPAN); Network Attachment Sub-System (NASS); e2 interface based on the DIAMETER protocol", 2006.
- [20] 3GPP TS 33.102: "3G security; Security architecture".

- [21] 3GPP TS 33.401: "3GPP System Architecture Evolution (SAE): Security architecture".
- [22] IETF RFC 2560: "X.509 Internet Public Key Infrastructure Online Certificate Status Protocol – OCSP"
- [23] Open Mobile Alliance OMA-WAP-OCSP V1.0: "Online Certificate Status Protocol Mobile Profile". URL: <http://www.openmobilealliance.org/>
- [24] IETF RFC 4806: "Online Certificate Status Protocol (OCSP) Extensions to IKEv2".
- [25] Void.
- [26] IETF RFC 5280: "Internet X.509 Public Key Infrastructure Certificate and Certificate Revocation List (CRL) Profile".
- [27] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
- [28] 3GPP TS 25.367: "Mobility procedures for Home Node B (HNB); Overall description; Stage 2".
- [29] 3GPP TS 23.060: "General Packet Radio Service (GPRS); Service description; Stage 2".
- [30] 3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access".
- [31] 3GPP TS 22.220: "Technical Specification Group Services and System Aspects; Service requirements for Home Node B (HNB) and Home eNode B (HeNB)".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

CSG: A closed subscriber group identifies subscribers of an operator who are permitted to access one or more cells of the PLMN of but having restricted access ("CSG cells")

Hosting party: The party hosting the H(e)NB and having a contract with the PLMN operator.

Security Gateway: Element at the edge of an operator's security domain terminating security association(s) for the backhaul link between H(e)NB and network.

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

AAA	Authentication, Authorization, and Accounting
ACL	Access Control List
ACS	Auto-Configuration Server
AKA	Authentication and Key Agreement
CA	Certification Authority
CPE	Customer Premises Equipment
CRL	Certificate Revocation List
CSG	Closed Subscriber Group
DNS	Domain Name System
DPD	Dead Peer Detection
eNB	Evolved Node-B
EAP	Extensible Authentication Protocol

ESP	Encapsulating Security Payload
E-UTRAN	Evolved UTRAN
FQDN	Fully Qualified Domain Name
GNSS	Global Navigation Satellite System
H(e)NB	Home NodeB or Home eNodeB
H(e)NB-GW	Home (e)NodeB Gateway
H(e)MS	Home NodeB Management or Home eNodeB Management System
HeMS	Home eNodeB Management System
HeNB	Home eNodeB
HMS	Home NodeB Management System
HNB	Home NodeB
HP	Hosting Party
HPM	HP Module
HW	Hardware
IKE	Internet Key Exchange
IMSI	International Mobile Subscriber Identity
L-GW	Local Gateway
LIPA	Local IP Access
LTE	Long Term Evolution
MME	Mobility Management Entity
MSK	Master Session Key
NAPT	Network Address Port Translation
NAT	Network Address Translation
NAT-T	NAT-Traversal
OCSP	Online Certificate Status Protocol
PKI	Public Key Infrastructure
SA	Security Association
SeGW	Security Gateway
SGSN	Serving GPRS Support Node
S-GW	Serving Gateway
TLS	Transport Layer Security
TrE	Trusted Environment
UDP	User Datagram Protocol
UICC	Universal Integrated Circuit Card
URI	Uniform Resource Identifier
URL	Uniform Resource Locator
USIM	Universal Subscriber Identity Module
UMTS	Universal Mobile Telecommunications System
UTRAN	Universal Terrestrial Radio Access Network
WAP	Wireless Application Protocol

4 Overview of Security Architecture and Requirements

4.1 System architecture of H(e)NB

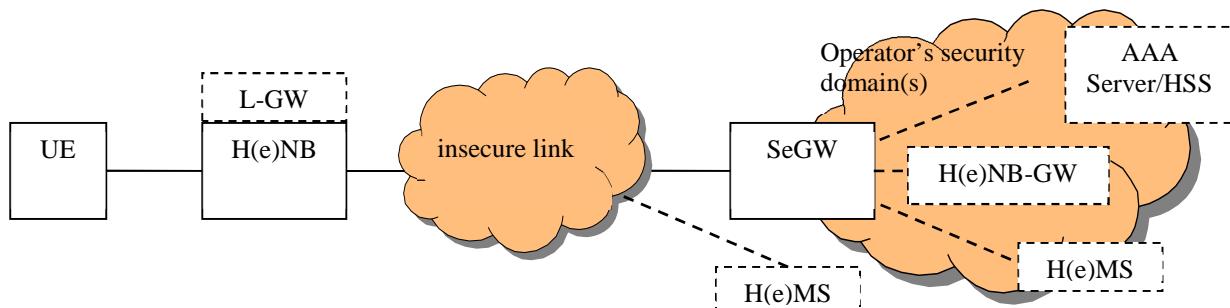


Figure 4.1.1: System Architecture of H(e)NB

Description of the system architecture:

- Air interface between UE and H(e)NB should be backwards compatible to the air interface in UTRAN or E-UTRAN.
- H(e)NB accesses the operator's security domain via a Security Gateway (SeGW). The backhaul between H(e)NB and SeGW may be insecure.
- Security Gateway represents the operator's core network with respect to performing mutual authentication with the H(e)NB.
- AAA server authenticates the hosting party based on the authentication information retrieved from HSS when hosting party authentication is performed.
- Security tunnel is established between H(e)NB and Security Gateway to protect information transmitted in backhaul link.
- HNB-GW performs mandatory UE access control and HNB performs optional UE access control in the case of non-CSG capable UEs or non-CSG capable HNBs. SeGW and HNB-GW are logically separate entities within operator's network, with the SeGW located in front of the HNB-GW. The SeGW may be integrated into the HNB-GW. If the SeGW and the HNB-GW are not integrated, then the interface between the HNB-GW and the SeGW may be protected using NDS/IP as specified in TS 33.210 [9]. The interface between HNB-GW and MSC/SGSN may be protected using NDS/IP.
- HeNB-GW is optional to deploy. When HeNB-GW is not deployed, the SeGW is located at the edge of the core network and the interface between SeGW and MME/S-GW may be protected using NDS/IP as specified in TS 33.210 [9]. When HeNB-GW is deployed, then SeGW and HeNB-GW are logically separate entities, with the SeGW located in front of the HeNB-GW. The SeGW may be integrated into HeNB-GW. If the SeGW and the HeNB-GW are not integrated, then the interface between the HeNB-GW and the SeGW may be protected using NDS/IP, the interface between HeNB-GW and MME/S-GW may be protected using NDS/IP.
- HMS as specified in TS 32.583 [2] and/or HNB-GW as specified in TS 25.467 [12] performs location verification of HNB.
- HeMS as specified in TS 32.593 [11] performs location verification of HeNB.
- Secure communication is required to H(e)NB Management System (H(e)MS).
- L-GW is optional to deploy. If L-GW is deployed, then the secured interface between H(e)NB and Security Gateway is used by the L-GW to communicate with the core network.

4.2 Network Elements

4.2.1 H(e)NB

The H(e)NB is a network element that connects User Equipment via its radio interface to the operator's core network. The backhaul link to the operator's network is a broadband connection. A H(e)NB is typically deployed in customers' premises.

NOTE: The term H(e)NB refers to both Home NodeB (HNB) and Home eNodeB (HeNB), when both are meant without distinction.

4.2.2 Security Gateway (SeGW)

The SeGW is a network element at the border of a security domain of the operator. If a H(e)NB-GW is deployed the SeGW is located in front of the H(e)NB-GW, else it is located at the edge of the core network. After successful mutual authentication between the H(e)NB and the SeGW, the SeGW connects the H(e)NB to the operator's security domain. Any connection between the H(e)NB and the H(e)NB-GW or core network is tunneled through the SeGW.

4.2.3 H(e)NB Management System (H(e)MS)

The H(e)MS is a management server that configures the H(e)NB according to the operator's policy. H(e)MS is also capable of installing software updates on the H(e)NB. The H(e)MS server may be located inside the operator's access or core network (accessible on the MNO Intranet) or outside of it (accessible on the public Internet).

The HMS is specified in TS 32.583 [2].

The HeMS is specified in TS 32.593 [11].

4.2.4 UE

UE is a standard user equipment for UMTS (for HNB) or LTE (for HeNB).

4.2.5 H(e)NB Gateway (H(e)NB-GW) and MME

HNB-GW is specified in TS 25.467 [12] and HeNB-GW is specified in TS 36.300 [27].

4.2.6 AAA Server and HSS

HSS stores the subscription data and authentication information of the H(e)NBs. When hosting party authentication is required, AAA server authenticates the hosting party based on the authentication information retrieved from HSS.

4.2.7 Void

4.2.8 Local Gateway (L-GW)

L-GW is specified in TS 23.060 [29] and in TS 23.401 [30]. The Local IP Access (LIPA) is achieved using a L-GW colocated with the H(e)NB. The L-GW is connected to the Serving Gateway (S-GW) or to the SGSN via the SeGW.

4.3 Interfaces (Reference Points)

4.3.1 Backhaul Link

The backhaul link used between H(e)NB and SeGW provides a secure tunnel carrying both the user plane data and the control plane data that are transmitted between the H(e)NB and the H(e)NB-GW or network elements in the core network.

NOTE: If LIPA is activated, the secured backhaul link between the H(e)NB and SeGW is used by the L-GW to communicate with the core network.

H(e)MS traffic is also tunneled through this secure backhaul link, if the H(e)MS is accessible on the MNO Intranet.

The backhaul link may also carry other data between H(e)NB and operator's radio access or core network, e.g. time protocol traffic.

4.3.2 H(e)MS Interface

The H(e)MS Interface between the H(e)NB and the H(e)MS server shall provide a secure connection carrying configuration data., SW updates and additional data, e.g. location information.

4.3.3 Interface between SeGW and AAA Server, AAA Server and HSS

The interface between the SeGW and AAA Server provides a secure connection carrying authentication, authorization, and related information.

The interface between AAA Server and HSS provides a secure connection for the retrieval of authentication vectors (e.g. for hosting party authentication) and retrieval of H(e)NB access-related information for HPM.

4.3.4 Interface between H(e)NBs

The interface used between two HNBs or between two HeNBs provides a direct link carrying both the user plane data and the control plane data. The interface is specified as Iurh interface between two HNBs (cf. TS 25.467 [12]) and as X2 interface between two HeNBs (cf. TS 36.300 [27]). It is used during handover between the two base stations connected by this link.

NOTE: This clause handles the direct connection between two network elements. If the messages between two network elements are routed via the core network using the existing backhaul links to the SeGW(s), then a direct link in the sense of this clause is not necessary.

4.4 Security Requirements and Principles

4.4.1 Operation

The requirements on operation are:

- Only algorithms of adequate cryptographic strength shall be used for authentication and protection of confidentiality and integrity.
- Modifications of Hosting Party controlled information by the operator shall only be allowed with the permission of the Hosting Party.
- The extent of Hosting Party controllable information shall be controlled by the operator.
- IMSIs of UEs connected to H(e)NB shall not be revealed to the Hosting Party of the H(e)NB.

4.4.2 Requirements on H(e)NB

The requirements on the H(e)NB are:

- The integrity of the H(e)NB shall be validated before any connection to the H(e)NB-GW or into the core network is established.
- The H(e)NB shall be authenticated by the SeGW based on a globally unique and permanent H(e)NB identity. If the H(e)NB was enrolled to an operator PKI according to clause 8.5 of the present document, then the H(e)NB may alternatively be authenticated by the SeGW based on the identity provided by the operator.
- The H(e)NB shall authenticate the SeGW based on SeGW certificate.
- Optionally the hosting party of the H(e)NB may be authenticated by the SeGW in cooperation with the AAA server using EAP-AKA as specified in RFC 4187 [3].
- If hosting party authentication is used, the H(e)NB shall shut down its air interface and disconnect from the operator's core network on removal of the HPM which was used for authentication towards the MNO.
- The H(e)NB may support the establishment of direct links to other base stations (i.e. HNB to HNB and HeNB to HeNB) as specified in clause 4.3.4. If establishment of direct links is supported the H(e)NB shall support enrolment to the operator PKI as specified in clause 8.5. Once the H(e)NB is enrolled to the operator PKI, it shall use the operator device certificate. The usage of operator PKI enrolment shall be securely configurable. If the default configuration is set in the factory it shall be set to no usage of operator PKI enrolment.

NOTE: Setting the default configuration to no usage of PKI enrolment allows for H(e)NBs to be deployed in networks containing H(e)NBs with or without support of PKI enrolment.. On the other hand this requires e.g. a connection to initial H(e)MS based on authentication using the vendor certificate to securely switch the H(e)NB to enroll to the operator PKI, and to provide the operator root certificate as specified in clause 8.5.2.

- If a direct link to another base station secured by security procedures as specified in clause 4.4.8 is established, the H(e)NB shall authenticate the other base station based on the identity provided by the operator to the other base station.
- If a direct link to another base station secured by security procedures as specified in clause 4.4.8 is established, the H(e)NB shall be authenticated by the other base station based on the identity provided by the operator to the H(e)NB.
- The H(e)NB shall establish direct links with other base stations only after establishment of the backhaul link. If the backhaul link is terminated, then also all direct links to other base stations shall be terminated.
- The H(e)NB shall authenticate the H(e)MS, if the H(e)MS is accessed on the public Internet.
- The H(e)NB shall be authenticated by the H(e)MS using the same identity as for authentication to the SeGW, if the H(e)MS is accessed on the public Internet.
- The configuration and the software of the H(e)NB shall only be updated in a secure way, i.e. the integrity of the configuration data including the licensed radio parameters and the integrity of the software updates must be verified.
- Sensitive data including cryptographic keys, authentication credentials, user information, user plane data and control plane data shall not be accessible at the H(e)NB in plaintext to unauthorized access.
- The time base of the H(e)NB shall be synchronized to the core network.
- The location of the H(e)NB shall be reliably transferred to the network.
- The H(e)NB shall be capable of filtering unauthenticated traffic received from the access network. Operator policy shall control which types of unauthenticated traffic are filtered.
- The H(e)NB shall implement a mechanism to shut down the air interface within a certain time period after the connection between H(e)NB and the rest of the operator network went out of service. This time period and the usage of the mechanism shall be configurable by the operator.
- The H(e)NB shall only activate its air interface after successful establishment of the backhaul link (cf. sub-clause 4.4.5 of the present document). The establishment of the backhaul link happens as a result of successful integrity validation, device mutual authentication between H(e)NB and SeGW, and optional hosting party authentication
- All security requirements of the eNB secure environment of TS 33.401 [21] clause 5.3 shall apply to the HeNB. Security measures to establish this secure environment shall be assured by the TrE (subclause 5.1.2) where they fall under the capability of the TrE.

4.4.3 Requirements on SeGW

The requirements on the SeGW are:

- The SeGW shall be authenticated by the H(e)NB using a SeGW certificate. The SeGW certificate shall be signed by a CA trusted by the operator.
- The SeGW shall authenticate the H(e)NB based on H(e)NB certificate.
- The SeGW may authenticate the hosting party of the H(e)NB in cooperation with the AAA server using EAP-AKA as specified in RFC 4187 [3].
- The SeGW shall allow the H(e)NB access to the H(e)NB-GW or core network only after successful completion of all required authentications.
- Any unauthenticated traffic from the H(e)NB shall be filtered out at the SeGW.

4.4.4 Requirements on H(e)MS

The requirements on the H(e)MS are:

- The H(e)MS shall be authenticated by the H(e)NB if the H(e)MS is accessible on the public Internet and may be authenticated by H(e)NB if the H(e)MS is accessible on the MNO Intranet using a H(e)MS certificate. The H(e)MS certificate shall be provided by a MNO trusted CA.
- The H(e)MS shall authenticate the identity of the H(e)NB if the H(e)MS is accessible on the public Internet and may authenticate the identity of the H(e)NB if the H(e)MS is accessible on the MNO Intranet, using a H(e)NB certificate. This identity shall be the same as used during backhaul link establishment (cf. sub-clause 4.4.5 of the present document).
- The H(e)MS may securely configure the H(e)NB according to the operator's policy, whether or not to use IPsec for subsequent connections (cf. clause 4.4.5 of the present document).
- If the H(e)MS is accessible on the MNO Intranet and the mutual authentication between H(e)MS and H(e)NB is not performed the identity of H(e)NB has to be transferred over the H(e)MS link.

NOTE 1: In case of H(e)MS accessible on the MNO intranet there may be an additional secure end-to-end tunnel between H(e)NB and H(e)MS carried inside the secure backhaul link.

NOTE 2: Mutual authentication between H(e)MS and H(e)NB may not be necessary if the H(e)NB is connected to the H(e)MS through the SeGW and mutual authentication between H(e)NB and SeGW has taken place.

4.4.5 Requirements on Backhaul Link

The requirements on the backhaul link are:

- The establishment of the secure backhaul link shall be based on IKEv2 as specified in TS 33.310 [7] comprising the required authentications as given in subclauses 4.4.2 and 4.4.3 of the present document.
- The backhaul link shall provide integrity, confidentiality and replay protection of the transmitted data.
- IPsec use for the backhaul link is mandatory to implement but optional to use based on an operator policy. To allow for such operator policy, the H(e)NB may be configurable to IPsec or non-IPsec usage option. If this configuration is supported, the default configuration set in the factory shall be the usage of IPsec. Based on operator policy, the H(e)MS may securely configure the H(e)NB, whether or not to use IPsec for subsequent connections. If the operator chooses not to use IPsec, mutual authentication between the H(e)NB device and the SeGW shall be performed and the interface between the H(e)NB and SeGW shall be secured with a mechanism that provides layer 2 security for confidentiality and integrity protection of communications. This mechanism then shall also bind this secure communications to device authentication between H(e)NB and SeGW and optional HPM authentication.
- The security solution for the backhaul link shall be based on IPsec ESP tunnel mode as specified in TS 33.210 [9]. If the H(e)NB is configurable not to use IPsec, in addition a suitable layer 2 protection mechanism shall be mandatory to support. If the H(e)NB is configured not to use IPsec, this layer 2 mechanism shall be used for the backhaul link protection.

NOTE: For the non-IPsec usage option the details of the authentication mechanism, the layer 2 security mechanism and the binding are out of scope of the present document.

- Any connection between the H(e)NB/L-GW and the H(e)NB-GW or core network shall be tunneled through the Backhaul Link.
- The security solution for the backhaul link shall be compatible with common network address and port translation variations and support firewall traversal.

4.4.6 Requirements on H(e)MS Link

The requirements on the H(e)MS link are:

- The establishment of the secure H(e)MS link shall be based on the authentication principles as given in subclauses 4.4.2 and 4.4.4 of the present document.
- The H(e)MS link shall provide integrity, confidentiality and replay protection of the transmitted data between H(e)MS and H(e)NB.

4.4.7 Requirements on Local Gateway (L-GW)

From security point of view, the Local Gateway (L-GW) shall be an optional element. The L-GW shall be tightly integrated with the H(e)NB, and share the same security requirements with the H(e)NB.

The requirements on the L-GW are:

- The L-GW shall use the same secure backhaul link established by the H(e)NB as specified in subclause 4.4.5 of the present document.
- The L-GW shall use the same secure H(e)MS link established by the H(e)NB as specified in subclause 4.4.6 of the present document.
- If the network allocated different IP addresses (remote, i.e. inner) to the L-GW and H(e)NB, then the secure backhaul link established by the H(e)NB shall carry traffic to and from both these addresses.
- The L-GW shall be integrated into the security architecture of the H(e)NB, in particular:
 - the L-GW shall be included in the device integrity check according to clause 6.1 of the present document;
 - the L-GW shall be included in the device validation according to clauses 7.1 and 8.3.2.2 of the present document.

4.4.8 Requirements on the Direct Link between H(e)NBs

The support of direct links between two H(e)NBs as specified in clause 4.3.4 is optional.

The requirements on this direct link between base stations shall follow the requirements for the backhaul link as given in clause 4.4.5 with the following additions:

- The provisions for the non-IPsec usage option given in clause 4.4.5 shall not apply.
- Usage of the security procedures with IKEv2/IPsec on the direct links is optional and shall be securely configurable by the operator.

NOTE 1: The above requirement implies that the actual enrolment to the operator PKI is not necessary if the security procedures with IKEv2 and IPsec are not used.

- If the security procedures with IKEv2/IPsec are used, the H(e)NBs shall be enrolled to the operator PKI.
- Both H(e)NBs shall authorize the establishment of a direct link. If security procedures with IKEv2/IPsec are used, this authorization is accomplished by the validation of the operator-provided device certificates against the operator root certificate. If security procedures with IKEv2/IPsec are not used, the mechanism for this authorization is out of scope of the present document.

NOTE 2: If security procedures with IKEv2/IPsec are not used, the authorization can be achieved e.g. by administrative measures like using Virtual LAN configurations.

NOTE 3: If security procedures with IKEv2/IPsec are used, H(e)NBs can perform authorization step in addition to certificate validation, e.g., authorization based on white/black list configured in H(e)NBs. The authorization mechanism is out of the scope of the present document.

4.4.9 Requirements on Verification of H(e)NB Identity and Operating Access Mode

The requirements on the H(e)NB identity and operating access mode verification in the network are:

- The network shall implement a verification that the identity used by the H(e)NB for communicating with the network is either the same identity that is used for authenticating to the SeGW or an identity related to this authenticated identity. In case the H(e)NB uses a related identity to communicate with the network, that related H(e)NB identity shall have a secure mapping to the identity that is used for authenticating to the SeGW. The above verification shall be implemented in the H(e)NB-GW. If a HeNB-GW is not deployed, an MME implementing the above verification shall be deployed.

NOTE0: The above requirement implies that the network has to ensure that all communication of H(e)NBs is subject to the above verification, even if a (rogue) message from a compromised H(e)NB would not indicate to originate from a H(e)NB. This could e.g. be the case if a compromised HeNB pretends to be an eNB in some messages.

- The network shall determine in which access mode the H(e)NB is expected to work, as follows. The operator knows, from its configuration procedure, the expected access mode of the H(e)NB. Based on this knowledge and on the identity sent by the H(e)NB (cf. First bullet of the present clause), the network shall determine the expected access mode of the H(e)NB during HNB Registration or S1 set-up for HeNB. This determination shall be implemented in the H(e)NB-GW. If a HeNB-GW is not deployed, this determination the above verification shall be implemented in the MME.
- If the H(e)NB is determined by the network to operate in closed access mode, the network shall verify that all data about access mode contained in messages from the H(e)NB are consistent with the determined access mode. This verification shall be implemented in the H(e)NB-GW. If a HeNB-GW is not deployed, this verification shall be implemented in the MME.

NOTE1: (void)

NOTE2: If the H(e)NB has been compromised and the above verifications are not performed, the UE access control functions in clause 5.4 are assumed to be unreliable. If the above verifications are performed, the UE access control functions in clause 5.4 are assumed to be reliable even in the presence of a compromised H(e)NB.

5 Security Features

5.1 Secure Storage and Execution

5.1.1 Hosting Party Module

The Hosting Party authentication shall be based on a Hosting Party Module. The Hosting Party Module (HPM) is a physical entity distinct from the H(e)NB physical equipment, dedicated to the identification and authentication of the Hosting Party towards the MNO. The HPM shall have the following features:

- The HPM shall be a tamper resistant environment and shall contain the credentials used to authenticate the Hosting Party.
- The HPM shall be bound to the Hosting Party (e.g. by contractual agreement between Hosting Party and MNO) and supplied by the MNO to the Hosting Party.
- The HPM shall be removable from the H(e)NB and it shall be possible for a Hosting Party to change the H(e)NB device by inserting the HPM in the new H(e)NB.

The HPM is provided by means of a UICC.

5.1.2 Trusted Environment (TrE)

5.1.2.1 General

The Trusted Environment (TrE) shall be a logical entity which provides a trustworthy environment for the execution of sensitive functions and the storage of sensitive data.

All data produced through execution of functions within the TrE shall be unknowable to unauthorized external entities.

The TrE shall be built from an irremovable, HW-based root of trust by way of a secure boot process, which shall occur whenever a H(e)NB is turned on or goes through a hard reset. The root of trust shall be physically bound to the H(e)NB. The secure boot process shall include checks of the integrity of the TrE performed by the root of trust. Only successfully verified components shall be loaded or started. The TrE , after having been successfully started, shall

proceed to verify other components of the H(e)NB (e.g. operating system and further programs) that are necessary for trusted operation of the H(e)NB.

The TrE shall perform sensitive functions (such as storing private keys and providing cryptographic calculations using those private keys) needed to perform H(e)NB device integrity check (cf. clause 6.1) and device validation as specifically described in clauses 7.1 and 8.3.2.2.

The TrE shall perform sensitive functions (such as storing private keys and providing cryptographic calculations using those private keys) needed for H(e)NB device authentication with the operator network, as specifically described in clauses 7.2 and 8.3.

5.2 Device Mutual Authentication

This clause specifies the device mutual authentication between H(e)NB and SeGW.

The device mutual authentication is mandatory for H(e)NB.

Device mutual authentication shall be performed using certificates. The H(e)NB's credentials and critical security functions for device authentication shall be protected inside a TrE.

The device mutual authentication shall be securely bound to device integrity validation. This procedure, when successful, leads to mutual authentication between the H(e)NB and the SeGW.

The certificate-based device authentication shall have the following parts:

- The H(e)NB shall be provisioned with a device certificate. This device certificate allows the authentication of the H(e)NB by the SeGW (and thus the operator network). The device certificate shall be provided by a CA trusted by the operator, e.g. the CA of the operator, the manufacturer or the vendor of the H(e)NB, or by another party trusted by the operator.
- The SeGW shall be configured with a certificate. This certificate allows the authentication of the SeGW by H(e)NB. The certificate shall be provided by an operator trusted CA.
- A Fully Qualified Domain Name (FQDN) formatted identifier shall be used for certificate based authentication of the H(e)NB and of the SeGW. For the H(e)NB this FQDN shall be globally unique for device certificates provided by the vendor. If no DNS is available for resolution of the FQDN of the SeGW, then the IP address of SeGW shall be used as identifier.
- The H(e)NB may check the revocation status of certificates using OCSP.
- The SeGW may check the revocation status of certificates using CRLs or OCSP.

5.3 Hosting Party Mutual Authentication

The hosting party mutual authentication is optionally performed by the operator's network following successful device mutual authentication between H(e)NB and SeGW.

An EAP-AKA based method [3] shall be used for hosting party authentication. When Hosting Party Authentication is used, both device and hosting party authentication must be completed successfully before a secure tunnel to the operator network can be established.

The authentication of the hosting party is based on credentials contained in a separate Hosting Party Module (HPM) in H(e)NB, and in the MNO HLR/HSS.

The EAP-AKA based hosting party authentication shall have the following parts:

- An AKA credential shall be stored in HPM enabling to use EAP-AKA. The SeGW is acting as EAP authenticator and forwards the EAP protocol messages to the AAA server to retrieve an authentication vector from AuC via HSS/HLR.
- A globally unique identifier in the format of an IMSI shall be used for EAP-AKA based authentication. These IMSIs shall be marked in HLR/HSS as used for H(e)NBs, e.g. by allocating dedicated ranges or by adding specific attributes to avoid misuse of these IMSIs for ordinary UEs.

NOTE: The implementation of the related HLR/HSS entry is out of scope of the present document.

5.4 Other security features

The communication between time server and H(e)NB shall be provided with adequate protection.

In case of non-CSG-capable UEs or non-CSG-capable HNBs, UE access control shall be performed in the HNB-GW and optionally in HNB. UE access control per HNB operating in closed access mode, as specified in TS 22.220 [31], shall be applied in the HNB-GW to all UE associated messages (e.g. RANAP).

In case of CSG capable UEs and CSG capable HNBs, UE access control shall be performed in the SGSN/MSC as specified in TS 25.467 [12]. UE access control per HNB operating in closed access mode shall be applied in the SGSN/MSC to all UE associated messages (e.g. RANAP).

In the case of HeNBs, UE access control shall be performed in the MME as specified in TS 36.300 [27]. UE access control per HeNB operating in closed access mode shall be applied in the MME to all UE associated messages (e.g. S1AP).

The H(e)NB-GW shall verify that all UE associated messages from H(e)NBs operating in closed access mode, as specified in TS 22.220 [31], can be mapped to a specific CSG id and that this CSG id is allowed for the identity of the originating H(e)NB (cf. clause 4.4.9). In the absence of a HeNB-GW, the MME shall perform this CSG id verification.

NOTE 1: The CSG id being verified may be explicitly present in the message as an information element or may be mapped by other means.

NOTE1a: The above requirement implies that the network has to ensure that all UE-associated messages from H(e)NBs operating in closed access mode are subject to the above verification, even if a (rogue) message from a compromised H(e)NB would not indicate to originate from a H(e)NB.

The HMS and/or HNB-GW shall perform HNB location verification. The HeMS shall perform HeNB location verification.

NOTE 2: Location verification is needed to satisfy various security, regulatory and operational requirements of operators.

6 Security Procedures in H(e)NB

6.1 Device Integrity Check

6.1.1 Device Integrity Check Procedure

The H(e)NB and TrE shall perform a device integrity check upon booting and before connecting to the H(e)NB-GW, core network and/or to the H(e)MS. The device integrity check shall be based on one or more trusted reference value(s) and the TrE. The following requirements shall apply:

- The TrE shall boot securely according to clause 5.1.2.1.
- The integrity of a component is verified by comparing the result of a measurement (typically a cryptographic hash) of the component to the trusted reference value. If these values agree, the component is successfully verified and can be started.
- For each of the component integrity checks, the TrE shall retrieve the corresponding trusted reference value from secure memory.
- The TrE shall check the integrity of all components necessary for trusted operation of the device. Any individual component shall be started only if its integrity check is successful.
- The integrity of the device is verified if all components necessary for trusted operation of the device are verified.

6.1.2 Protection of Trusted Reference Value(s)

The TrE shall securely store all trusted reference values at all times.

The TrE shall detect un-authorized modifications of the trusted reference values necessary for trusted operation of the device.

6.2 Void

6.3 Measures for Clock Protection

6.3.1 Clock Synchronization Security Mechanisms for H(e)NB

The H(e)NB requires time synchronization with a time server. The H(e)NB shall support receiving time synchronisation messages over the secure backhaul link between H(e)NB and the SeGW.

Optionally other secure clock servers may be used, which do not use the secure backhaul link. In this case the communication between these clock server(s) and H(e)NB shall be secured.

NOTE 1: How to secure communication between clock servers and H(e)NB outside the secure backhaul link is out of scope of the present document.

The availability of the correct current time is important for certificate validation and thus for the establishment of secure links (IKEv2 and/or TLS). This results in the following requirements:

- The H(e)NB shall be equipped with a clock.
- Upon the H(e)NB connecting to the CN, the clock shall be synchronized with the secured time server.
- During normal operation of the H(e)NB, the clock shall be re-synchronized with the secured time signal from the network at least every 48 hours.

The following requirements on local time arise from certificate handling, applying to operation of the H(e)NB before the secure backhaul link or the secure H(e)MS connection is established and thus before secured clock information is available from the clock server:

- The last time at which the H(e)NB was active before the current power-up shall be recorded and saved in the TrE.
- Upon restoration of power of the H(e)NB, the clock shall resume counting from the last saved time. If a continuously running clock exists, the clock may resume counting from the later of the current time of the clock and the last saved time

NOTE 2: Usage of the current time of the clock upon restoration of power of the H(e)NB assumes that the clock starts at its own power-up at some point in time which does not lie in the future. The start time could be at a fixed date, e.g. the epoch 1970-01-01. Otherwise the H(e)NB may falsely interpret a certificate as expired, if the start time of the clock lies after expiry time of the certificates.

NOTE 3: If a HeNB clock erroneously received a time lying sufficiently far in the future, the validation of the SeGW's or the H(e)MS's certificate will fail and the H(e)NB will be unable to connect to the operator's network. No specific solution to this scenario is given; a common solution for problems with the H(e)NB authentication might be considered in the future.

7 Security Procedures between H(e)NB and SeGW

7.1 Device Validation

The H(e)NB shall support a device validation method where the device implicitly indicates its validity to the SeGW or H(e)MS by successful execution of device authentication. To achieve this, the following requirement applies:

- If the device integrity check according to clause 6.1 failed, the TrE shall not give access to the sensitive functions using the private key needed for H(e)NB device authentication with the SeGW.
- The CA issuing the H(e)NB device certificate need to be trusted by the manufacturer or vendor of the H(e)NB, whoever of both is responsible for the device integrity of the H(e)NB.

NOTE 1: This trust in the CA issuing the device certificate is in addition to the requirements given in clause 5.2.

NOTE 2: If the H(e)NB is enrolled to an operator PKI, and the operator device certificate is used during authentication, then also such successful authentication towards SeGW or other network elements includes the indication of successful device validation. This transitive trust is possible, as the enrolment takes place based on the vendor device certificate. This transition of trust must be considered by the operator.

7.2 Device Authentication

7.2.1 General

Device authentication of the H(e)NB shall be securely bound by the TrE to the device validation of the H(e)NB platform.

Device authentication of H(e)NB shall be based on device certificate for H(e)NB and network certificate for the core.

IKEv2 with certificates used for authentication shall be run between H(e)NB and SeGW to mutually authenticate the H(e)NB and the SeGW. If the H(e)NB is configurable not to use IPsec, then an appropriate authentication mechanism for mutual authentication of H(e)NB and SeGW shall be mandatory to support. If the H(e)NB is configured not to use IPsec, then this authentication mechanism shall be used between H(e)NB and SeGW to mutually authenticate the H(e)NB and the SeGW. The detailed authentication procedure is out of scope of the present document.

7.2.2 SeGW and Device Mutual Authentication Procedure

Device authentication shall be performed using IKEv2 with public key signature based authentication with certificates, as specified in TS 33.310 [7]. The H(e)NB device shall authenticate itself to the SeGW with a certificate based on the globally unique and permanent H(e)NB identity, signed by an operator authorized entity, or alternatively based on the operator-provided device identity in case the H(e)NB is enrolled to the operator PKI. The SeGW shall authenticate itself to the H(e)NB using a certificate signed by an operator trusted CA. The H(e)NB shall verify the SeGW identity by checking the subjectAltName field of the SeGW certificate against the name of the SeGW used by the H(e)NB to connect to the SeGW.

NOTE 1: If DNS is available, the SeGW's name is the FQDN used to resolve its IP address; otherwise it is the IP address of the SeGW.

The H(e)NB may check the revocation status of the SeGW certificate using OCSP as specified in RFC 2560 [22] and OMA-WAP-OCSP [23] with the exception that the requirements on certificates, hash functions, public keys, and signature algorithms in clause 6.1 of TS 33.310 [7] shall be followed.

NOTE 1a: Void.

Support for OCSP is optional for the operator network. The H(e)NB should support OCSP.

NOTE 2: It is strongly recommended to support OCSP in the H(e)NB, as this feature may become mandatory for H(e)NB in future releases.

The OCSP communication between H(e)NB and OCSP server may use the in-band signaling of certificate revocation status in IKEv2 according to RFC 4806 [24], through which the SeGW can include an OCSP response within IKEv2. Support for this extension to IKEv2 in H(e)NB and SeGW is optional.

The SeGW may check the revocation status of the H(e)NB certificate using CRLs according to TS 33.310 [7] or OCSP as specified in RFC 2560 [22] and OMA-WAP-OCSP [23] with the exception that the requirements on certificates, hash functions, public keys, and signature algorithms in clause 6.1 of TS 33.310 [7] shall be followed.

NOTE 2a: Void.

NOTE 2b: Methods for securely updating the device certificate remotely are handled in the present document only for the case when enrolment to an operator PKI is supported and used. If it is not possible to update the device certificate, the certificate lifetime needs to exceed the expected lifetime of the H(e)NB.

The SeGW shall implement support for either CRL checking or OCSP or both. The locations of the CRL Server and OCSP Responder may be in the operator's network or provided by the manufacturer/vendor. Neither the operator nor the manufacturer is required to provide a CRL Server or an OCSP Responder. For the case when the operator provides a CRL Server or OCSP Responder, the manufacturer shall forward revocation data to the operator. The interface to forward revocation data is out of scope of the present document.

If the H(e)NB certificate contains CRL or OCSP server information (cf. sub-clause 7.2.5.2), then the SeGW may contact this server for revocation information.

NOTE 3: A CRL or OCSP server located at manufacturer of H(e)NB allows distribution of revocation information by the manufacturer directly. To use such revocation information, normally the SeGW needs a CRL or OCSP client capable to reach the public Internet to contact these servers.

Validity check of H(e)NB certificates in SeGW shall be configurable by the operator, i.e. whether to use CRLs, OCSP or both and whether to use operator CRL or OCSP server, manufacturer CRL or OCSP server, or more than one of them.

The H(e)NB's TrE shall be used to provide the following critical security functions supporting the IKEv2 and certificate processes:

- The H(e)NB's identity shall be stored in the TrE and shall not be modifiable.
- The H(e)NB's private key shall be stored in the TrE and shall not be exposed outside of the TrE.
- The root certificate used to verify the signatures on the SeGW certificate shall be stored in the H(e)NB's TrE and shall be writable by authorized access only. The verification process for signatures shall be performed by the H(e)NB's TrE.

- The H(e)NB's TrE shall be used to compute the AUTH payload used during the IKE_AUTH request message exchanges.

NOTE 4: Autonomous validation is performed during secure start-up and performs validation of the H(e)NB. As IKEv2 allows the inclusion of information data into Notify Payload, information regarding the trustworthy state of the H(e)NB may be carried in the Notify Payload (see Annex A.1) during IKEv2 procedures from the H(e)NB to the SeGW. Notify Payload within IKEv2's IKE_AUTH message is protected by IKEv2 SK and AUTH. In addition, the Notify Payload, as constructed by the TrE, should include a nonce and should be cryptographically signed by the TrE.

7.2.3 H(e)NB/IKEv2 Processing Requirements for SeGW Certificates

The H(e)NB/IKEv2 processing requirements for SeGW certificates shall be as follows:

1. The SeGW shall not send certificate paths containing more than four certificates.
2. The H(e)NB shall be able to process SeGW certificate paths containing up to four certificates. The SeGW certificate and the intermediate CA certificates for the SeGW shall be obtained from the IKEv2 CERT payload. The certificates of the trusted root CA shall be obtained from the TrE of the H(e)NB.
3. The H(e)NB shall check the validity time of the SeGW certificates, and reject certificates that are either not yet valid or that are expired.
4. In case the H(e)NB is configured to check the certificate revocation status of the SeGW certificate, and it receives no valid OCSP response, the H(e)NB shall abort the IKEv2 protocol.

NOTE 1: The execution of this check does not depend on the existence of an OCSP server information in the SeGW certificate, if OCSP extension according to RFC 4806 [24] is used.

NOTE 2: A H(e)NB may want to check the revocation status of the SeGW certificate, but it may not have access to the OCSP server until the IPsec tunnel is established. In this case, after the tunnel is established and before user data is transmitted in the tunnel, the H(e)NB sends an OCSP request message to the OCSP responder. When the H(e)NB receives the OCSP response, it checks the certificate status. If the certificate of SeGW is valid, the H(e)NB will allow user data to be transmitted to the SeGW in the tunnel. If the certificate is not valid, the H(e)NB may terminate the tunnel that just was established.

7.2.4 SeGW/IKEv2 Processing Requirements for H(e)NB Certificates

The SeGW/IKEv2 processing requirements for H(e)NB certificates shall be as follows:

1. The H(e)NB shall not send certificate paths containing more than four certificates.
2. The SeGW shall be able to process H(e)NB certificate paths containing up to four certificates. The H(e)NB certificate and the intermediate CA certificates for the H(e)NB shall be obtained from the IKEv2 CERT payload. The trusted root CA shall be obtained from a SeGW local store of trusted CA certificates.
3. The SeGW shall check the validity time of the H(e)NB certificates, and reject certificates that are either not yet valid or that are expired.
4. The SeGW shall check the certificate revocation status if configured by local policy.

NOTE: The mere existence of a CRL or OCSP server information in the H(e)NB certificate does not mandate the SeGW to perform certificate status checking.

7.2.5 Security Profiles

7.2.5.1 Profile for IKEv2

The H(e)NB and the SeGW shall conform to the profile of IKEv2 as specified in clause 5.4.2 of TS 33.210 [9] with the exception that the use of pre-shared secrets for authentication is not supported.

The following additional requirements on certificate based IKEv2 authentication for the IKE_INIT_SA and IKE_AUTH exchanges shall be applied:

- The use of RSA signatures for authentication shall be supported.
- The H(e)NB shall include its identity in the IDi payload of the first IKE_AUTH request.
- The H(e)NB identity in the IDi payload may be used for policy checks.
- Initiating/responding end entities are required to send certificate requests in the IKE_INIT_SA exchange for the responder and in the IKE_AUTH exchange for the initiator.
- The messages for the IKE_AUTH exchanges shall include a certificate or certificate chain providing evidence that the key used to compute a digital signature belongs to the identity in the ID payload.
- The certificates in the certificate payload shall be encoded as type 4 (X.509 Certificate – Signature).

7.2.5.2 IKEv2 Certificate Profile

7.2.5.2.1 IKEv2 Entity Certificates

The H(e)NB and SeGW certificates shall both conform to the requirements set out in clauses 6.1.1 and 6.1.3 of TS 33.310 [7] with the following additions and exceptions:

- The H(e)NB certificate shall be signed by an entity that is authorized by the operator, e.g. the manufacturer or the vendor. In addition, the entity signing the H(e)NB certificate shall be authorized by the manufacturer or vendor.
- The H(e)NB certificate shall carry the HNB unique identity in FQDN format, as specified in TS 23.003 [8], in the subjectAltName. This identity shall be the same as the identity in the IDi payload of the first IKE_AUTH request.
- If the manufacturer or vendor provides a CRL or OCSP server, the H(e)NB certificate shall carry the CRL distribution point as specified in TS 33.310 [7] or the OCSP server information (AIA extension) as specified in RFC5280 [26] and RFC 2560 [22].

NOTE: Server information for CRL and/or OCSP servers deployed in operator network may be configured in SeGW.

- If the operator provides an OCSP server, the SeGW certificate shall carry the OCSP server information as specified in RFC 2560 [22]. This OCSP server information is not mandatory, if OCSP extension according to RFC 4806 [24] is used.
- If the H(e)NB is enrolled to an operator PKI, the H(e)NB certificate issued by the operator CA and the H(e)NB device identity assigned by the operator may follow clause 6.1.3b of TS 33.310 [7] without additions and exceptions.

7.2.5.2.2 IKEv2 CA Certificates

IKEv2 CA certificates shall conform to the requirements set out for NE CA certificates in clauses 6.1.1, and 6.1.4b of TS 33.310 [7].

NOTE: This requirement implies that there is no restriction in the issuer name for both H(e)NB CA certificates and SeGW CA certificates.

7.3 Hosting Party Authentication

Device Authentication of the H(e)NB by the SeGW may optionally be followed with an EAP-AKA-based hosting party authentication exchange. The IKEv2 certificate-based mutual authentication is executed according to clause 7.2 of the present document, extended by IKEv2's multiple authentication procedure defined in IETF RFC 4739 [6].

The IKEv2 EAP-AKA authentication shall follow the TS 33.234 [10] specification.

The H(e)NB's HPM shall be used to provide critical security functions supporting the EAP-AKA authentication processes.

- The secret key (K) used for HP authentication shall be stored in the HPM.
- The HPM is responsible for computing the RES and AUTN parameters for the EAP-AKA based hosting party authentication.

7.4 IPsec Tunnel Establishment

If the H(e)NB only supports usage of IPsec, or if it is configured to use IPsec tunnel between the H(e)NB and the SeGW, the following procedure shall be performed.

The H(e)NB shall use IKEv2 protocol to set up at least one IPsec tunnel to protect the traffic with SeGW, i.e. a pair of unidirectional SAs between H(e)NB and SeGW. All signalling, user, and management plane traffic over the interface between H(e)NB and SeGW shall be sent through an IPsec ESP tunnel (with NAT-T UDP encapsulation as necessary) that is established as a result of the authentication procedure.

The H(e)NB shall initiate the creation of the SA i.e. it shall act as initiator in the Traffic Selector negotiation. Upon H(e)NB's request, the SeGW should allocate IP address (remote, i.e. inner) to the H(e)NB after successful authentication. If LIPA is activated, SeGW may allocate a different remote (i.e. inner) IP address to the L-GW than the remote (i.e. inner) IP address allocated to the H(e)NB.

NOTE: If the SeGW allocates different remote IP addresses to the H(e)NB and the L-GW, then the H(e)NB can retrieve both IP addresses (remote, i.e. inner) via the IKEv2 CFG payload, the H(e)NB can retrieve its own IP address (remote, i.e. inner) via the IKEv2 CFG payload and the L-GW IP address directly via the IPsec tunnel (e.g. using DHCP or OAM), or the H(e)NB can retrieve only the L-GW IP address via the IKEv2 CFG payload and the H(e)NB address directly via the IPsec tunnel (e.g. using DHCP or OAM). In order to avoid any IP address misconfiguration between the entities within the H(e)NB, the IP address allocating entity can provide information about the IP address allocation and the H(e)NB implementation can use the information to differentiate the IP addresses assigned and then configure the H(e)NB and L-GW addresses appropriately.

The H(e)NB and SeGW shall use the IKEv2 mechanisms for detection of NAT, UDP encapsulation for NAT Traversal, H(e)NB initiated NAT keep-alive, IKEv2 SA and IPsec SA rekeying, and Dead Peer Detection (DPD).

During setup of the tunnel, the H(e)NB shall include a list of supported ESP authentication transforms and ESP encryption transforms as part of the IKEv2 signalling. The SeGW shall select an ESP authentication transform and an ESP encryption transform conforming to clause 5.3 of TS 33.210 [9], and shall signal this to the H(e)NB.

If the H(e)NB is configured not to use IPsec, an appropriate layer 2 protection mechanism that satisfies the requirements as described in clause 4.4.5 shall be used.

7.5 Device Authorization

Optionally an AAA server may be used to verify the authorization of the H(e)NB to connect to the operator's network based on the authenticated device identity extracted from the H(e)NB certificate. This authorization check is separate from and in addition to the revocation status check via OCSP or CRL.

NOTE: If OCSP is used, the result of the authorization check may be included in the certificate revocation check described in section 7.2.2 by having the OCSP responder provide a certificate status of "good" as in RFC 2560 [22] only when the certificate has not been revoked and the device is authorized to connect to the operator's network. If either of these conditions is false, the OCSP responder should provide a certificate status of "revoked".

8 Security Aspects of H(e)NB Management

8.1 Location Verification

8.1.1 General

Operators require assurance of the H(e)NB location to satisfy various security, regulatory and operational requirements. The H(e)MS and/or HNB-GW (referred to in this section as the “verifying node”) shall perform location verification. One or more types of location information of H(e)NB may be optionally stored in the verifying node by operators for location verification. It shall be possible for the verifying node to obtain one or more of the following information which may be used to perform location verification:

- the public IP address of the broadband access device provided by the H(e)NB
- the IP address and/or access line location identifier provided by broadband access provider
- information of macro-cells surrounding the H(e)NB provided by the H(e)NB
- geo-coordinates provided by a GNSS receiver embedded into the H(e)NB

Different deployment scenarios and H(e)NB configurations will influence the availability, accuracy and reliability of these types of location information.

8.1.2 IP Address provided by H(e)NB

A H(e)NB is normally connected to the IP network via some access device (e.g. DSL modem, cable modem, home router, etc.). If the H(e)NB is capable of acquiring the public IP address of the access device, it shall be able to provide this IP address to the verifying node.

8.1.3 IP Address and/or access line location identifier provided by broadband access provider

A H(e)NB is normally connected to the IP network via some access device (e.g. DSL modem, cable modem, home router, etc.) This device will have an IP address and/or access line location assigned by the broadband access provider. The broadband access provider may, subject to regulatory approval, be able to provide the verifying node with this information based on the solution in [18] and [19]. An example information flow of location verification based on access line identifier is provided in Annex B.

NOTE: The verifying node must receive the IP address as used in the NASS. This may require either that the verifying node be located directly at the edge of the NASS, or that the NASS uses public IP addresses without NAT or NAPT to Internet.

8.1.4 Surrounding macro-cell information provided by H(e)NB

If the H(e)NB has the capability to receive transmissions from surrounding macro-cells, it shall be capable of providing information on the identity of any such macro-cells to the verifying node.

NOTE: A report that no macro-cells can be detected may be of use in determining that the H(e)NB has been moved to an unauthorized location.

8.1.5 GNSS information provided by H(e)NB

If the H(e)NB has the capability to receive GNSS transmissions, it shall be capable of sending GNSS determined location information to the verifying node. To be able to determine H(e)NB location based on an internal GNSS, a H(e)NB must be equipped with a GNSS receiver and be installed in a location where GNSS satellites can be acquired.

8.1.6 Requirements

The verifying node shall be capable of requesting one or more of the types of location information listed in section 8.1.1.

It shall be possible to configure how often the verifying node requests location information, and what information types are requested.

It shall be possible to configure policies to control how the verifying node evaluates the received location information in order to perform location verification.

NOTE: The details of these policies are out of scope of this specification.

The verifying node may perform location verification using information provided by the H(e)NB. This information may be provided automatically and/or upon request.

It shall be possible for the verifying node to use and optionally store ancillary information to perform location verification such as geo-coordinates of surrounding macrocells, postal address of H(e)NB as claimed by H(e)NB hosting party, IP address location information, etc.

It shall be possible for the verifying node to perform location verification both before and after switching on the H(e)NB radio.

Depending on the result of location verification, the verifying node shall take one or more of the following actions: raise an alarm, permit the H(e)NB to radiate or prevent the H(e)NB from radiating.

According to operator policy, an operating H(e)NB which is ordered to cease radiating may do so immediately, or it may wait until any calls in progress have been completed before it complies with the order and ceases radiating. It shall not allow new calls to be established during this waiting period.

8.2 Access Control Mechanisms for H(e)NB

8.2.1 Non-CSG Method

The ACL (Access Control List) based access control mechanism for a non CSG capable UE accessing the HNB or a UE accessing a non CSG capable HNB is handled in [12]. The ACL shall be securely stored in and integrity protected in the HNB if the HNB performs access control.

8.2.2 CSG Method

The CSG based access control mechanism for a CSG capable UE accessing the CSG capable H(e)NB is handled in [12].

HSS shall push the latest subscriber's CSG membership list, relevant for the currently used network, to the MME/SGSN/VLR. MME/SGSN/VLR shall update the CSG lists on receiving the updated list from the HSS.

NOTE: In the HSS there is no differentiation required between entries in the Allowed and Operator CSG List, as this is relevant for the UE only.

8.3 Protection of H(e)MS traffic between H(e)MS and H(e)NB

8.3.1 Connection to H(e)MS accessible on MNO Intranet

In case that the H(e)MS is accessible on MNO Intranet, H(e)MS traffic shall be protected through the support of one of the two security mechanisms determined by the Network Operator's Security Policies:

- H(e)MS traffic is protected in hop-by-hop way. H(e)MS traffic is protected by the backhaul link between H(e)NB and SeGW established according to clause 7.4. Network security mechanisms (cf. TS33.210 NDS/IP [9]) shall be used to protect H(e)MS traffic between SeGW and H(e)MS when the path from SeGW to H(e)MS is considered as insecure.

- H(e)MS traffic is protected end-to-end between the H(e)NB and the H(e)MS by utilizing TLS tunnel through the backhaul link established according to clause 7.4 for additional end-to-end security.

When TLS is performed between H(e)NB and H(e)MS, mutual authentication between H(e)NB and H(e)MS shall be based on device certificate for the H(e)NB and network certificate for the H(e)MS. H(e)NB and H(e)MS may check the validity of the certificates as given in sub-clause 8.3.2.1 .

8.3.2 Connection to H(e)MS accessible on public Internet

8.3.2.1 General

In case that the H(e)MS is accessible on the public Internet, the H(e)MS is exposed to attackers located in insecure network. H(e)MS traffic shall be protected by TLS tunnel established between H(e)NB and H(e)MS. In this case, mutual authentication between H(e)NB and H(e)MS shall be based on device certificate for the H(e)NB and network certificate for the H(e)MS. The H(e)NB shall verify the H(e)MS identity by checking the subjectAltName field of the H(e)MS certificate against the name of the H(e)MS.

NOTE 1: If DNS is available, the H(e)MS's name is the FQDN used to resolve its IP address; otherwise it is the IP address of the H(e)MS.

The H(e)NB may check the revocation status of the H(e)MS certificate using OCSP as specified in [22] and [23] with the exception that the requirements on certificates, hash functions, public keys, and signature algorithms in clause 6.1 of TS 33.310 [7] shall be followed.

NOTE 1a: Void.

Support for OCSP is optional for the operator network. The H(e)NB should support OCSP.

NOTE 2: It is strongly recommended to support OCSP in the H(e)NB, as this feature may become mandatory for H(e)NB in future releases.

The OCSP communication between H(e)NB and OCSP server may use the in-band signaling of certificate revocation status in TLS according to TLS Extensions as specified in Annex E of TS 33.310 [7]. Support for this extension to TLS in H(e)NB and H(e)MS is optional.

The H(e)MS may check the revocation status of the H(e)NB certificate using CRLs according to TS 33.310 [7] or OCSP as specified in [22] and [23] with the exception that the requirements on certificates, hash functions, public keys, and signature algorithms in clause 6.1 of TS 33.310 [7] shall be followed.

NOTE 2a: Void.

The H(e)MS shall implement support for either CRL checking or OCSP or both. The locations of the CRL Server and OCSP Responder may be in the operator's network or provided by the manufacturer/vendor. Neither the operator nor the manufacturer is required to provide a CRL Server or an OCSP Responder. For the case when the operator provides a CRL Server or OCSP Responder, the manufacturer shall forward revocation data to the operator. The interface to forward revocation data is out of scope of the present document.

If the H(e)NB certificate contains CRL or OCSP server information (cf. sub-clause 8.3.3.1), then the H(e)MS may contact this server for revocation information.

NOTE 3: A CRL or OCSP server located at manufacturer of H(e)NB allows distribution of revocation information by the manufacturer directly. To use such revocation information, normally the H(e)MS needs a CRL or OCSP client capable to reach the public Internet to contact these servers.

Validity check of H(e)NB certificates in H(e)MS shall be configurable by the operator, i.e. whether to use CRLs, OCSP or both and whether to use operator CRL or OCSP server, manufacturer CRL or OCSP server, or more than one of them.

8.3.2.2 Device Validation

The H(e)NB shall support a device validation method whereby the device implicitly indicates its validity to the H(e)MS by successful execution of device authentication. To achieve this, the following requirement applies:

- If the device integrity check according to clause 6.1 failed, the TrE shall not give access to the sensitive functions using the private key needed for H(e)NB device authentication with the H(e)MS.
- The CA issuing the H(e)NB device certificate need to be trusted by the manufacturer or vendor of the H(e)NB, whoever of both is responsible for the device integrity of the H(e)NB.

NOTE 1: This trust in the CA issuing the device certificate is in addition to the requirements given in clause 5.2.

NOTE 2: If the H(e)NB is enrolled to an operator PKI, and thus the operator device certificate is used during authentication, then also such successful authentication towards SeGW or other network elements includes the indication of successful device validation. This transitive trust is possible, as the enrolment takes place based on the vendor device certificate. This transition of trust must be considered by the operator.

8.3.3 TLS certificate profile

8.3.3.1 TLS entity certificates

The H(e)NB and H(e)MS certificates for use with TLS shall both conform to the requirements set out in clauses 6.1.1 and 6.1.3a of TS 33.310 [7] with the following additions and exceptions:

- The H(e)NB certificate shall be signed by an entity that is authorized by the operator, e.g. the manufacturer or the vendor. In addition, the entity signing the H(e)NB certificate shall be authorized by the manufacturer or vendor.
- The H(e)NB certificate shall carry the HNB unique identity in FQDN format, as specified in TS 23.003 [8], in both the subjectAltName extension of type dNSName and in the common name field.
- If the manufacturer or vendor provides a CRL or OCSP server, the H(e)NB certificate shall carry the CRL distribution point as specified in TS 33.310 [7] or the OCSP server information (AIA extension) as specified in RFC 5280 [26] and RFC 2560 [22].

NOTE 1: Server information for CRL and/or OCSP servers deployed in operator network may be configured in H(e)MS.

- The H(e)MS certificate shall carry the identity of the H(e)MS in FQDN format in both the subjectAltName extension of type dNSName and in the common name field.

NOTE 2: The reason for carrying the identities in the common name field is compatibility.

- If an OCSP server is provided for the H(e)MS certificates, the H(e)MS certificate shall carry the OCSP server information as specified in RFC 2560 [22]. This OCSP server information is not mandatory, if OCSP extension to TLS according to TLS Extensions as specified in Annex E of TS 33.310 [7] is used.

NOTE 3: In general, it is possible to use a TLS client certificate in accordance with this specification also for IKEv2, if key exchange algorithm and used key length for both TLS and IKEv2 are chosen identically.

NOTE 4: Methods for securely updating the TLS client certificate remotely are handled in the present document only for the case when enrolment to an operator PKI is supported and used. If it is not possible to update the TLS client certificate, the certificate lifetime needs to exceed the expected lifetime of the H(e)NB.

- If the H(e)NB is enrolled to an operator PKI, the H(e)NB certificate issued by the operator CA and the H(e)NB device identity assigned by the operator may follow clause 6.1.3a of TS 33.310 [7] without additions and exceptions.

8.3.3.2 TLS CA certificates

TLS CA certificates shall conform to the requirements set out in clauses 6.1.1 and 6.1.4a of TS 33.310 [7] with the exception that there is no restriction in the issuer name.

8.3.4 TR-069 protocol profile

For the management of the H(e)NB by the H(e)MS, the CPE WAN Management Protocol TR-069 [15] shall be used with the following restrictions and extensions:

- The TLS profile specified in TS 33.310 [7], Annex E, shall apply.
- Shared-secret-based authentication between H(e)NB acting as CPE and H(e)MS acting as ACS shall not be allowed. Only certificate-based authentication shall be allowed.
- The use of TLS to transport the CPE WAN Management Protocol shall be mandatory in case that the H(e)MS is accessible on public internet or when TLS is used within the IPsec tunnel.
- The H(e)MS URI shall be specified as an HTTPS URL in case that the H(e)MS is accessible on public internet or when TLS is used within the IPsec tunnel.
- The H(e)NB acting as CPE shall not be obliged to wait until it has accurate absolute time before it contacts the H(e)MS acting as ACS.

NOTE 1: The term "absolute time" refers to UTC and its use is consistent with its definition and use in the sections on "Use of SSL/TLS and TCP and on Data Types" in TR-069 [15].

- If the H(e)NB contacts the H(e)MS without having the accurate absolute time, it shall not ignore components of the H(e)MS certificate related to absolute time, e.g. not-valid-before and not-valid-after certificate restrictions, but use the local clock set according to the procedure on restoration of power specified in clause 6.3.1 of the present document.
- The support for H(e)NB authentication using client-side (CPE side) certificates shall be mandatory.
- The H(e)NB acting as CPE shall be authenticated to the H(e)MS by the H(e)NB identity contained in the H(e)NB certificate in case that mutual authentication between H(e)NB and H(e)MS is performed. The exact format of the TLS client certificate is specified in clause 8.3.3.1.

8.4 Protection of SW Download

The H(e)NB shall utilize the established TR-069 method to download software from the H(e)MS or a server directed to by the H(e)MS according to TR-069 Version 1 Amendment 2 [15]. The following requirements are added for security:

- The file shall use the signed package format according to TR-069 [15].

NOTE 1: Depending on the link to H(e)MS, transport security is provided by the secure link according to clauses 4.3.1 (when H(e)MS is in operator network) or 4.3.2 (when H(e)MS is in public Internet).

- The SignedData object in the signed package shall contain at least one signature provided by a software signing entity, with certificate issued by an operator trusted CA.
- The TrE shall use a public key issued by an operator trusted CA to verify the software signing entity certificate and the signature(s) in the SignedData object. If the verification fails, the H(e)NB shall delete and not install the software that failed the verification. All root certificates used for this purpose shall be stored in the TrE.

NOTE 2: Notification of this failure is according to procedures in TR-069 [15].

- The signed package shall also contain the trusted reference values needed for the software integrity checks performed during secure boot..

NOTE 3: TR-069 [15] supports multiple signatures which can be used for the purpose of supporting different hash algorithms.

8.5 Enrolment of H(e)NB to an Operator PKI

8.5.1 General

For certain use cases it is advantageous to authenticate the H(e)NB with a device identity and a device certificate issued by the operator. For such cases an automatic enrolment of H(e)NBs to an operator PKI is specified based on device authentication using a vendor device certificate.

Support and usage of enrolment of a H(e)NB to an operator PKI is optional.

If the establishment of direct links between H(e)NBs according to clause 4.3.4 is supported, then support of enrolment according to the clause 8.5 is mandatory.

8.5.2 Enrolment Procedure

The enrolment procedure to an operator PKI shall follow clause 9 of TS 33.310 [7] with the following additions and exceptions:

- The H(e)NB shall be pre-provisioned with the operator root CA certificate before the start of the procedure specified in clause 9 of TS 33.310 [7].

NOTE 0: The operator root CA certificate which is used to authenticate the SeGW can be different to the one which is used to authenticate the H(e)NB.

NOTE 1: The operator root CA certificate may be provisioned e.g. by pre-provisioning by the manufacturer/vendor or by a management procedure from an initial H(e)MS accessed using a vendor device certificate for authentication.

- The vendor device certificate used for enrolment (and the certificate chain up to the root certificate of the vendor certificate) shall either follow the rules given in clause 9.4 of TS 33.310 [7] or the rules given in clause 7.2.5.2 of the present document.

NOTE 2: The enrolment procedure may take place with a RA/CA accessible on the public Internet or via a SeGW with a RA/CA accessible on the MNO Intranet. In the latter case the SeGW has to accept a vendor device certificate for enrolment connection, even though the operator device certificate is used later by the SeGW on establishment of the operational backhaul link.

8.5.3 Certificate Validation

If enrolment to an operator PKI is supported, the H(e)NB may check the revocation status of certificates using CRLs according to TS 33.310 [7].

NOTE: Certificate validation using CRLs is the normal method specified in TS 33.310 [7] in conjunction with operator-provided certificates. Thus all H(e)NBs supporting operator PKI enrolment should also support CRLs.

9 Security Aspects of Emergency Call Handling

The H(e)NB and/or the H(e)NB-GW shall support security handling of Emergency call as specified in TS 25.467[12], TS 33.102 [20] and TS 33.401 [21].

Emergency call shall be allowed by the H(e)NB and/or operator's radio access or core network entities (e.g. H(e)NB-GW) regardless of whether UE can pass access control as specified in clauses 5.4 and 8.2.

In case of non CSG UEs or non CSG HNBs, after Emergency call is finished, the context (as described in TS 25.467 [12]) established between the HNB and operator's access or core network entities for UEs who can not get access over the HNB shall be released to prevent the UE from accessing non-emergency services.

NOTE: In case of non CSG UEs or non CSG HNBs, a UE could establish a RRC connection for an emergency call in order to skip the mandatory access control and could then try to make an unauthorized normal call afterwards. In order to alleviate that security risk the HNB-GW may check locally the consistency of all messages related to the registration for and establishment of an emergency call.

10 Security Aspects for Mobility

10.1 Inbound mobility

In mobility from macro NB or HNB towards HNB CSG/hybrid, access control or membership verification for CSG capable UE and non CSG capable UE shall be performed as described in [12].

Key management is done in core network as described in [20].

Access control or membership verification for UE in mobility from macro eNB or HeNB towards HeNB CSG/hybrid is handled in mobility scenario in [27].

Key handling shall follow that in [21].

10.2 Outbound mobility

For mobility from HNB, the normal procedure can be applied as stated in [28]. Key handling shall follow the macro mobility procedure.

For mobility from HeNB, the normal procedure can be applied as stated in [27]. Key handling shall follow the macro mobility procedure.

11 Security Procedures for Direct Interfaces between Base Stations

11.1 General

For all security features specified in clause 11 the usage of operator certificates is required. Thus in the context of clause 11 the support of enrolment according to clause 8.5 of the present document is mandatory.

11.2 Direct Link between two H(e)NBs

The security procedures specified in the present subclause apply to the Iurh interface between two HNBs as specified in TS 25.467 [12] and the X2 interface between two HeNBs as specified in TS 36.300 [27].

The security procedures specified in the present subclause are mandatory to support if direct links for Iurh or X2 interfaces as specified in clause 4.3.4 of the present document are supported. The usage of the security procedures shall depend on operator policy.

NOTE 1: In particular in enterprise deployment case, the operator may consider the enterprise IP infrastructure as trustworthy, and may waive the usage the security procedures.

The security procedures on the direct link between two H(e)NBs shall follow the procedure given in clauses 7.2 and 7.4 of the present document. The H(e)NB both as IKEv2 initiator and responder shall perform the handling of the certificate of the other party in the same way as the handling of the SeGW certificate given in clause 7.2.2.

NOTE 2: The usage of OCSP in-band signaling of certificate revocation status in IKEv2 according to RFC 4806 [24] (cf. clause 7.2.2) may not be applicable, as in this case the responding H(e)NB would have to contact the OCSP server,

NOTE 3: CRL or OCSP messages may be carried within the backhaul link between H(e)NB and SeGW.

NOTE 4: Allocation of remote (i.e. inner) IP addresses (cf. clause 7.4) during IKEv2 is not relevant for the establishment of the direct link.

Annex A (informative): Authentication Call-flows

A.1 Device Authentication Call-flow Example

Certificate based mutual authentication between the H(e)NB and the core network is specified in clause 7.2. As example the call flow between the H(e)NB and the SeGW is shown in Figure A.1. This example illustrates an autonomous device integrity check followed by initiation of device authentication between H(e)NB and SeGW. Also this example illustrates H(e)NB and L-GW IP address assignments via the IKEv2 CFG payload.

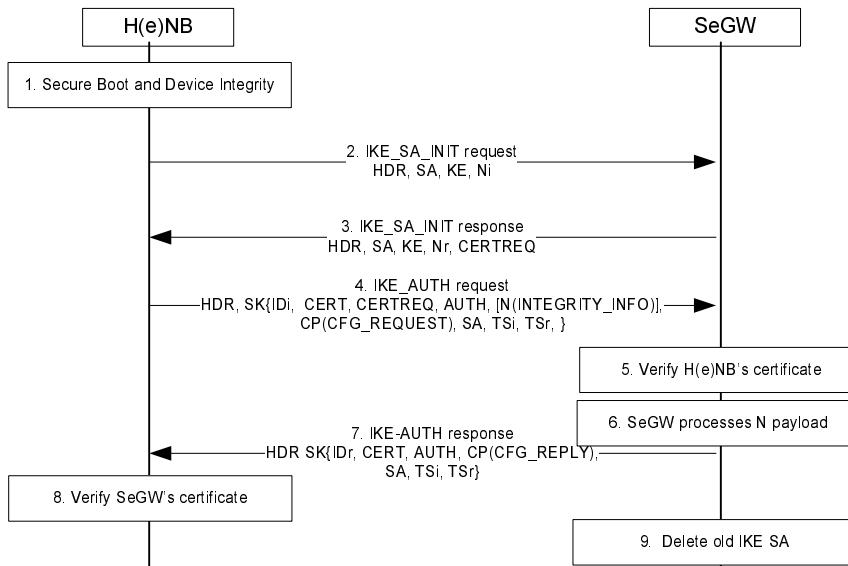


Figure A.1: Certificate-based authentication with device integrity

- TrE brings H(e)NB to secure boot and performs device integrity check of H(e)NB.

NOTE 1: If the device integrity check fails the following procedure is not executed.

- Following successful device integrity check, the H(e)NB sends an IKE_SA_INIT request to the SeGW.
- The SeGW sends IKE_SA_INIT response, requesting a certificate from the H(e)NB.
- The H(e)NB sends its identity in the IDi payload in this first message of the IKE_AUTH phase, and begins negotiation of child security associations. Optionally a user profile may be selected based on the H(e)NB's identity presented in the IDi payload and the authentication type indication in the user profile may be used to enforce the choice of authentication (device only or combined device and HP). The H(e)NB sends the AUTH payload and its own certificate, and also requests a certificate from the SeGW. Configuration payload is carried in this message if the H(e)NB's and/or L-GW's remote IP address(es) should be configured dynamically. H(e)NB optionally includes a Notify Payload containing integrity information of H(e)NB with a Notification Type of INTEGRITY_INFO in the IKE_AUTH request. Computation of the AUTH parameter is performed within the H(e)NB's TrE. If configured to check the validity of the SeGW certificate the H(e)NB retrieves SeGW certificate status information from the OCSP responder. Alternatively the H(e)NB may add an OCSP request to the IKE message.

NOTE 2: Inclusion of the Notify Payload and further usage of data transferred in this payload is not part of autonomous validation.

- The SeGW checks the correctness of the AUTH received from the H(e)NB and calculates the AUTH parameter which authenticates the second IKE_SA_INIT message. The SeGW verifies the certificate received from the H(e)NB. The SeGW may check the validity of the certificates using CRL or OCSP. If the H(e)NB request contained an OCSP request, or if the SeGW is configured to provide its certification revocation status to the

H(e)NB, the SeGW retrieves SeGW certificate status information from the OCSP server, or uses a valid cached response if one is available

6. The SeGW processes the N payload of the IKE_AUTH request based on local policy of the operator.

NOTE 3: SeGW may choose to retain the information carried in the N payload for statistical analysis, send the information to a FIGS (Fraud Information Gathering System) for fraud detection, or send the information to a validation entity for validation.

7. The SeGW sends its identity in the IDr payload, the AUTH parameter and its certificate to the H(e)NB together with the configuration payload, security associations, and the rest of the IKEv2 parameters and the IKEv2 negotiation terminates. The Remote IP address(es) is (are) assigned in the configuration payload (CFG_REPLY), if the H(e)NB requested for H(e)NB's and/or L-GW's Remote IP address(es) through the CFG_REQUEST. If the SeGW allocates different remote IP addresses to the H(e)NB and the L-GW, then the SeGW can include information to differentiate the IP address assigned to the H(e)NB and the L-GW, in order to avoid any misconfiguration. A possible mechanism to inform which IP address is to be used for H(e)NB or L-GW is implementation specific and out of scope of the present document. If the SeGW has SeGW certificate status information available, this information is added to the IKE response to H(e)NB.
8. The H(e)NB verifies the SeGW certificate with its stored root certificate. The root certificate for the SeGW certificate shall be stored in the TrE. The H(e)NB checks that the SeGW identity as contained in the SeGW certificate equals the SeGW identity as provided to H(e)NB by initial configuration or by H(e)MS. The H(e)NB checks the validity of the SeGW certificates using the OCSP response if configured to do so.
9. If the SeGW detects that an old IKE SA for that H(e)NB already exists, it will delete the IKE SA and send the H(e)NB an INFORMATIONAL exchange with a Delete payload in order to delete the old IKE SA in H(e)NB.

NOTE 4: If the Notify Payload is used to convey integrity information, then an available values in the Private Use Status Types range of Notification Type values in IKEv2 may be used. In case the integrity information payload carries security information, security mechanisms have to be used. The detailed security mechanisms are out of scope of present document.

A.2 Combined Device and HP Authentication Call-flow Example

The certificate based mutual authentication between the H(e)NB and the core network, followed by an EAP-AKA-based HP authentication exchange between the H(e)NB/HPM and the AAA server, is specified in clause 7.2. As example the call flow between the H(e)NB, SeGW and AAA server is shown in Figure A.2. This example illustrates an autonomous device integrity check followed by initiation of combined device and HP authentication. Also this example illustrates H(e)NB and L-GW IP address assignments via IKEv2 CFG payload

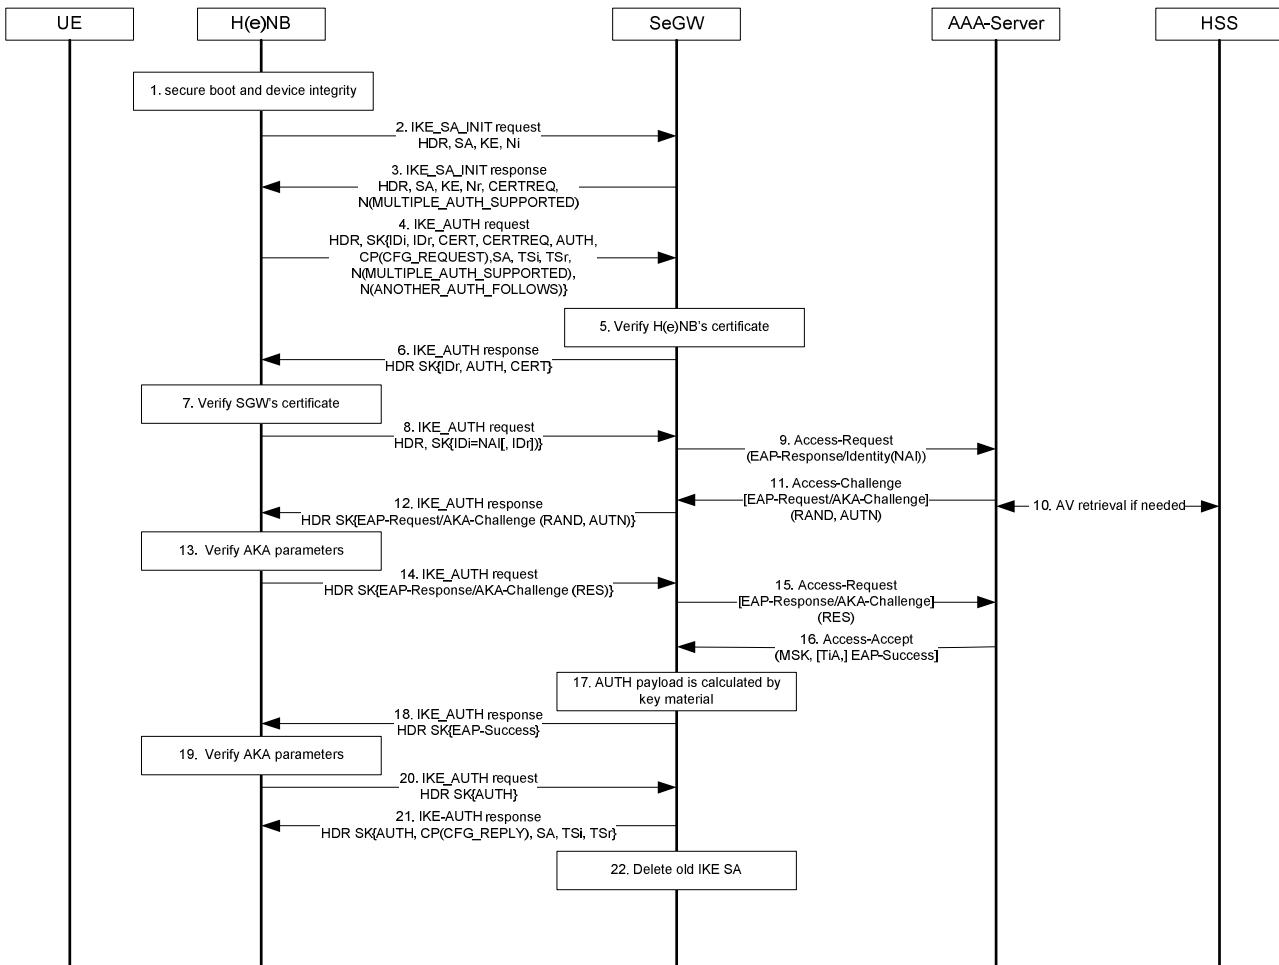


Figure A.2: Combined certificate and EAP-AKA-based authentication

1. TrE brings H(e)NB to secure boot and performs device integrity check of H(e)NB.

NOTE: If the device integrity check fails the following procedure is not executed.

2. Following successful device integrity check, the H(e)NB sends an IKE_SA_INIT request to the SeGW.
3. The SeGW sends IKE_SA_INIT response, requesting a certificate from the H(e)NB. The SeGW indicates that it support Multiple Authentication by including the MULTIPLE_AUTH_SUPPORTED payload.
4. The H(e)NB inserts its identity in the IDi payload in this first message of the IKE_AUTH phase, computes the AUTH parameter within its TrE, and begins negotiation of child security associations. The authentication type indication in user profile which is selected selected by H(e)NB's identity presented in the IDi payload may be used and enforce the choice of authentication (device only or combined device and HP). The H(e)NB then sends IKE_AUTH request with the AUTH payload, its own certificate, and also requests a certificate from the SeGW. Configuration payload is carried in this message if the H(e)NB's and/or L-GW's remote IP address(es) should be configured dynamically. The H(e)NB indicates that it support Multiple Authentication and that it wants to do a second authentication by including the MULTIPLE_AUTH_SUPPORTED and ANOTHER_AUTH_FOLLOWS attributes. If configured to check the validity of the SeGW certificate the H(e)NB retrieves SeGW certificate status information from the OCSP responder. Alternatively the H(e)NB may add an OCSP request to the IKE message.
5. The SeGW checks the correctness of the AUTH received from the H(e)NB and calculates the AUTH parameter which authenticates the second IKE_SA_INIT message. The SeGW verifies the certificate received from the H(e)NB. The SeGW may check the validity of the certificates using CRL or OCSP. If the H(e)NB request contained an OCSP request, or if the SeGW is configured to provide its certification revocation status to the H(e)NB, the SeGW retrieves SeGW certificate status information from the OCSP server, or uses a valid cached response if one is available.

6. The SeGW sends IKE_AUTH response with its identity in the IDr payload, the AUTH parameter and its certificate to the H(e)NB. If the SeGW has SeGW certificate status information available, this information is added to the IKE response to H(e)NB.
7. The H(e)NB verifies the SeGW certificate with its stored root certificate. The root certificate for the SeGW certificate shall be stored in the TrE. The H(e)NB checks that the SeGW identity as contained in the SeGW certificate equals the SeGW identity as provided to H(e)NB by initial configuration or by H(e)MS. The H(e)NB checks the validity of the SeGW certificates using the OCSP response if configured to do so.
8. The H(e)NB sends another IKE_AUTH request message with the HP's identity in the IDi payload and the AUTH payload omitted to inform the SeGW that the H(e)NB want to perform EAP authentication.
9. The SeGW sends the Authentication Request message with an empty EAP AVP to the 3GPP AAA Server, containing the identity received in IKE_AUTH request message received in step 8.
10. The AAA Server shall fetch the subscription data and authentication vectors from HSS/HLR.
11. The AAA Server initiates the authentication challenge.
12. The SeGW sends IKE_AUTH response to H(e)NB. The EAP message received from the AAA Server (EAP-Request/AKA-Challenge) is included in order to start the EAP procedure over IKEv2.
13. The H(e)NB processes the EAP challenge message and uses the HPM for verification of the AUTN and generating the RES parameters. Optionally, processing of the whole EAP challenge message, including verification of the received MAC with the newly derived keying material may be performed within the H(e)NB's HPM.
14. The H(e)NB sends the IKE_AUTH request with the EAP-Response/AKA-Challenge to the SeGW.
15. The SeGW forwards the EAP-Response/AKA-Challenge message to the AAA Server.
16. When all checks are successful, the AAA Server sends the Authentication Answer including an EAP success and the key material to the SeGW. This key material should consist of the MSK generated during the authentication process.
17. The EAP Success message is forwarded to the H(e)NB over IKEv2 in IKE_AUTH response.
18. The H(e)NB takes its own copy of the MSK as input to generate the AUTH parameter to authenticate the first IKE_SA_INIT message. Optionally the computation of the AUTH parameter is performed within the H(e)NB's HPM.
19. IKE_AUTH request with the AUTH parameter is sent to the SeGW.
20. The MSK received in step 16 is used by the SeGW to generate the AUTH parameters in order to authenticate the IKE_SA_INIT phase messages.
21. The SeGW checks the correctness of the AUTH received from the H(e)NB. The SeGW should send the assigned Remote IP address in the configuration payload (CFG_REPLY), if the H(e)NB requested for H(e)NB's and/or L-GW's Remote IP address through the CFG_REQUEST. If the SeGW allocates different remote IP addresses to the L-GW and to the H(e)NB, then the SeGW can include information to differentiate the IP address assigned to the H(e)NB and the L-GW, in order to avoid any misconfiguration. A possible mechanism to inform which IP address is to be used for H(e)NB or L-GW is implementation specific and out of scope of the present document. Then the IKE_AUTH response with AUTH parameter is sent to the H(e)NB together with the configuration payload, security associations and the rest of the IKEv2 parameters and the IKEv2 negotiation terminates.
22. If the SeGW detects that an old IKE SA for that H(e)NB already exists, it will delete the IKE SA and send the H(e)NB an INFORMATIONAL exchange with a Delete payload in order to delete the old IKE SA in H(e)NB.

Annex B (informative): Location Verification Examples

B.1 Example of Location verification based on IP address and line identifier in NASS

The NASS (Network Attachment Subsystem) standard in TISPAN [18] has defined the interface through which the mobile core network is able to query the geographic location information based on the IP address. The network-based database can be the CLF (connectivity Session Location and Repository Function) element . The CLF registers the following information provided by the NACF (network access configuration function), and make them relevant: the IP address located to the fixed access point, the network location information, and geography location information. The CLF provides e2 interface for service layer entity. The reference document [19] specifies e2 interface based on Diameter protocol.

NOTE 1: The verifying node must receive the IP address as used in the NASS. This may require either that the verifying node be located directly at the edge of the NASS, or that the NASS uses public IP addresses without NAT or NAPT to Internet.

The entity used to query CLF is located in the verifying node.

The contract location exists in the verifying node already before the location verification process can be performed. The contract location can be defined by the operator when H(e)NB service is subscribed to the network.

The location authentication procedure consists of the following steps:

- a) H(e)NB sends request message to the verifying node, carrying its IP address in this message.
- b) According to the IP address, the verifying node queries the CLF to obtain the access line location identifier.
- c) Verifying node authenticates whether the access line location identifier stored in the verifying node (i.e. the legal contract location) corresponds to the location identifier it retrieves from the CLF based on IP address obtained from the H(e)NB. If it is the same, this means that the H(e)NB location has not been changed.
- d) Other procedures, e.g. provisioning of configuration parameters from the verifying node to the H(e)NB, can be performed only after successful location verification of the H(e)NB by the verifying node.

NOTE 2: Storage of the location information in the verifying node as a subscription profile is preferable.

NOTE 3 : The above procedure provides an effective method to query the CLF according the H(e)NB's IP address. If the CLF is not available to the mobile operator, similar methods using the broadband connection information can be implemented.

B.2 Example process of location verification when the verifying node receive different types of location information

1. Different types of H(e)NB location identifiers corresponding to the location of H(e)NB are stored in verifying node or CLF.
2. Upon obtaining new location information from H(e)NB, verifying node should verify the new location information by the stored different types of location identifiers or query the CLF for the corresponding location identifiers . If all of the new location information is verified successfully, it means the location of H(e)NB is not changed. Or else, verifying node or the CLF should re-register the new location identifiers corresponding to the new location information of the H(e)NB on condition that the availability of the new location information is verified by the operators.

3. Other procedures, e.g. provisioning of configuration parameters from the verifying node to the H(e)NB, can be performed only after successful location verification of the H(e)NB by the verifying node.

NOTE: This example assumes that a TISPAN NASS may be deployed using the CLF as a location information storage node as described in [18].

Annex C:

Change history

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2009-09	SA#45	SP-090527	--	--	Presentation to SA for information	--	1.0.0
2009-12	SA#46	SP-090825	--	--	Presentation to SA for approval	1.0.0	2.0.0
2009-12	SA#46	--	--	--	Publication of SA approved version	2.0.0	9.0.0
2010-03	SA#47	SP-100093	012	1	Fixing incorrect wording in section 8.3.1.	9.0.0	9.1.0
2010-03	SA#47	SP-100093	011	1	Fixing call-flow parameters in Annex A.2	9.0.0	9.1.0
2010-03	SA#47	SP-100093	018	-	Removing Editor's Note in section 8.4	9.0.0	9.1.0
2010-03	SA#47	SP-100093	001	-	Addition security features to device mutual authentication in 5.2	9.0.0	9.1.0
2010-03	SA#47	SP-100093	017	-	Correction on components involving absolute time in TR-069 profiling	9.0.0	9.1.0
2010-03	SA#47	SP-100093	008	1	Editorial changes to section 4.4.4	9.0.0	9.1.0
2010-03	SA#47	SP-100093	007	1	Correction of ambiguity in 8.4, Protection of SW Download	9.0.0	9.1.0
2010-03	SA#47	SP-100093	003	-	A complement to location verification for different types of location information	9.0.0	9.1.0
2010-03	SA#47	SP-100093	006	-	The necessary complement to verifying node for location verification	9.0.0	9.1.0
2010-03	SA#47	SP-100093	014	1	Editor's Notes resolution and correction clarifications	9.0.0	9.1.0
2010-03	SA#47	SP-100093	015	1	Correction of potential security risks relating to non CSG UE registration	9.0.0	9.1.0
2010-03	SA#47	SP-100093	016	2	Correction on mandatory confidentiality on backhaul link	9.0.0	9.1.0
2010-03	SA#47	SP-100093	010	2	Clarification of OCSP procedures for section 7.2	9.0.0	9.1.0
2010-06	SA#48	SP-100245	019	1	CR 33.320: Removal of location verification from MME/HeNB GW	9.1.0	9.2.0
2010-06	SA#48	SP-100245	020	1	Addition of missing shut-down requirement on loss of backhaul connection	9.1.0	9.2.0
2010-06	SA#48	SP-100245	021	-	Cleanup of unused references and abbreviations	9.1.0	9.2.0
2010-06	SA#48	SP-100245	022	-	Correction to description of H(e)NB-GW	9.1.0	9.2.0
2010-06	SA#48	SP-100245	024	-	Correction to access control mechanism for H(e)NB	9.1.0	9.2.0
2010-06	SA#48	SP-100245	025	2	Sections 7.5.2.1 and 8.3.3.1 Editor's Note Resolution	9.1.0	9.2.0
2010-06	SA#48	SP-100245	026	1	Section 8.2.2 Editor's Note Resolution	9.1.0	9.2.0
2010-06	SA#48	SP-100245	027	2	Section 4.1 Editor's Note Resolution	9.1.0	9.2.0
2010-06	SA#48	SP-100361	028	1	Deprecation of SHA-1 and other changes to CRL and OCSP profiles	9.1.0	9.2.0
2010-06	SA#48				Addition of missing trust relation requirement for CA issuing H(e)NB device certificate NOTE: SP-100427 erroneously indicates CR0028R2 on the cover sheet.	9.1.0	9.2.0
2010-06	--	SP-100427	040	2	Addition of Note in of CR history table to address wrong CR number in SP-100427	9.2.0	9.2.1
2010-10	SA#49	SP-100472	031	1	Certificate Renewal Clarification	9.2.1	9.3.0
2010-10	SA#49	SP-100472	032	-	Correction of Authentication Call-flows in Annex A	9.2.1	9.3.0
2010-10	SA#49	SP-100472	035	-	Adding missed abbreviation into TS33.320 and correction of heading of chapter 8.3	9.2.1	9.3.0
2010-10	SA#49	SP-100472	037	-	Corrections to the reference to OMA WAP OCSP profile	9.2.1	9.3.0
2010-10	SA#49	SP-100472	041	-	Security aspects in H(e)NB mobility	9.2.1	9.3.0
2010-10	SA#49	SP-100472	042	-	Certificate Renewal Clarification	9.2.1	9.3.0
2010-10	SA#49	SP-100482	038	-	Clarifying the access control for non-CSG case in HeNB	9.3.0	10.0.0
2010-10	SA#50	SP-100719	049	-	Certificate Renewal Clarification	10.0.0	10.1.0
2010-10	SA#50	SP-100854	047	3	H(e)NB CSG list management	10.0.0	10.1.0
2010-10	SA#50	SP-100719	046	-	Correction of Figure A.2	10.0.0	10.1.0
2010-10	SA#50	SP-100719	052	-	H(e)NB correction (rel-10)	10.0.0	10.1.0
2010-10	SA#50	SP-100718	044	1	CR 33.320 Fixing the Clause 4.2.5.	10.0.0	10.1.0
2010-10	SA#50	SP-100716	053	3	LIPA Security	10.0.0	10.1.0
2010-10	SA#50	SP-100717	050	-	Correction of IKEv2 reference to point to TS 33.210	10.1.0	11.0.0
2011-03	SA#51	SP-110018	056	-	Correction of implementation error of S3-100612	11.0.0	11.1.0
2011-03	SA#51	SP-110017	057	1	Supplemented description of the secure connection between HeNB and MME/S-GW	11.0.0	11.1.0

2011-06	SA#52	SP-110258	069	1	Security mechanism for H(e)NB no-IPsec usage option	11.1.0	11.2.0
2011-09	SA#53	SP-110563	071	-	IKEv2 profiling shall point to TS 33.310	11.2.0	11.3.0
2011-12	SA#54	SP-110691	080	1	H(e)NB-LGW IP Address Assignment	11.3.0	11.4.0
2011-12	SA#54	SP-110690	058	4	Security for direct interfaces between H(e)NBs	11.3.0	11.4.0
2011-12	SA#54	SP-110848	072	3	H(e)NB identity verification requirements for UE access control enforcement	11.3.0	11.4.0
2011-12	SA#54	SP-110848	078	1	Correction of the architecture description of the H(e)NB system	11.3.0	11.4.0
2012-03	SA#55	SP-120039	081	1	Clarifying Management Traffic	11.4.0	11.5.0
			082	1	CSG ID mapping		
			086	1	Clause 4.4.9 modifications to align HeNB verification requirements with RAN3 architecture.		
		SP-120036	083	1	H(e)NB authorization in direct interface		
			085	1	Clarification of the device authentication in 33.320		
2012-06	SA#56	SP-120341	087	-	Clarification of HeNB identity verification	11.5.0	11.6.0
2012-06	SA#56	SP-120341	088	-	Correction of TLS Extensions References to point to TS 33.310	11.5.0	11.6.0
2012-06	SA#56	SP-120339	091	-	H(e)NB Air Interface Activation Requirement	11.5.0	11.6.0
2013-09	SA#61	SP-130407	094	3	Access mode verification for H(e)NBs	11.6.0	12.0.0
2014-09	SA#65	SP-140593	095	1	Separate root CA certificates for H(e)NB and SeGW	12.0.0	12.1.0
2016-01	SA#70				Upgrade to Rel-13 (MCC)	12.1.0	13.0.0

Change history							
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New version
2016-12	SA#74	SP-160788	0096	1	C	3GPP security profile update – 33.320	14.0.0
2018-06	-	-	-	-	-	Update to Rel-15 version (MCC)	15.0.0
2020-07	-	-	-	-	-	Update to Rel-16 version (MCC)	16.0.0
2022-03	-	-	-	-	-	Update to Rel-17 version (MCC)	17.0.0

History

Document history		
V17.0.0	April 2022	Publication