
EN 300 725 V6.0.1 (1999-09)

European Standard (Telecommunications series)

Digital cellular telecommunications system (Phase 2+); Test sequences for the GSM Enhanced Full Rate (EFR) speech codec (GSM 06.54 version 6.0.1 Release 1997)

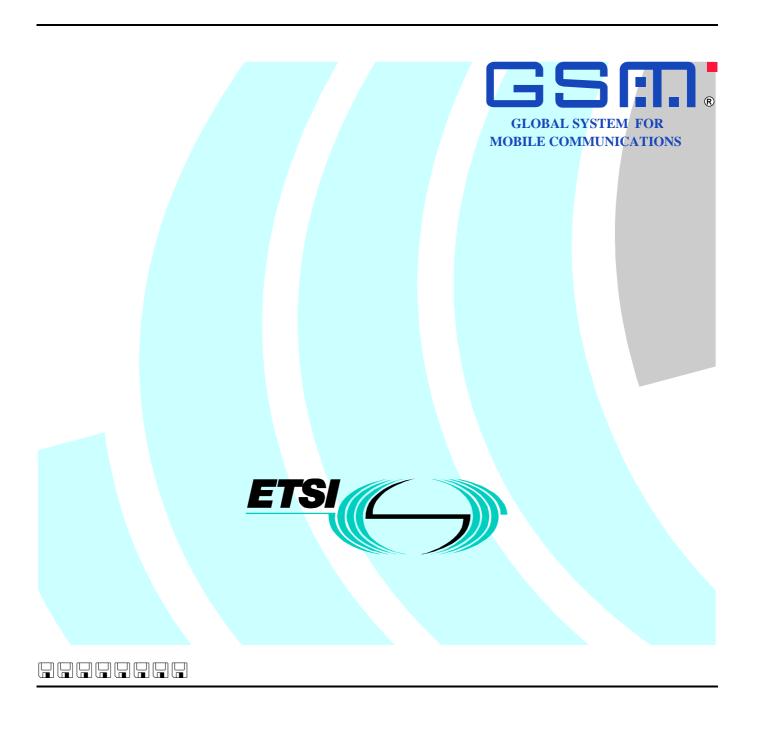

Reference

DEN/SMG-110654Q6 (6po0300o.PDF)

Keywords

Digital cellular telecommunications system, Global System for Mobile communications (GSM)

ETSI

Postal address

F-06921 Sophia Antipolis Cedex - FRANCE

Office address

650 Route des Lucioles - Sophia Antipolis Valbonne - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16 Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Internet

secretariat@etsi.fr
Individual copies of this ETSI deliverable
can be downloaded from
http://www.etsi.org
If you find errors in the present document, send your
comment to: editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1999. All rights reserved.

Contents

Intell	ectual Property Rights	4
Forev	word	4
1	Scope	6
2	References	6
3	Definitions and abbreviations	
3.1 3.2	Definitions	
4	General	7
5	Test sequence format	
5.1 5.2	File format	
6	Speech codec test sequences	
6.1	Codec configuration	
6.2 6.2.1	Speech codec test sequences	
6.2.2 6.2.3	Speech decoder test sequences	10
7	DTX test sequences	
7.1	Codec configuration	
7.2	DTX test sequences	
7.2.1	Predictor values computation	
7.2.2	Spectral comparison	
7.2.3 7.2.4	Threshold adaptation	
7.2.5	Tone detection	
7.2.6	Safety and initialisation	
7.2.7	Comfort noise test sequence	13
7.2.8	Real speech and tones	13
8	Sequences for finding the 20 ms framing of the GSM enhanced full rate speech encoder	
8.1	Bit synchronisation	
8.2	Frame synchronisation	
8.3	Formats and sizes of the synchronisation sequences	
9	Trau Testing with 8 Bit A- and μ-law PCM Test Sequences	16
Anne	ex A (informative): Change Request History	19
Histo	ry	20

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available **free of charge** from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/ipr).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This European Standard (Telecommunications series) has been produced by the Special Mobile Group (SMG).

Test sequences for a bit exact implementation of the Enhanced Full Rate (EFR) speech transcoder are contained in the archive 6po0300o.ZIP which accompanies the present document.

The archive contains ZIP compressed files, as follows:

Disk1_8	Clause 10: Test sequences for the GSM Enhanced Full Rate (EFR) speech codec; Speech test sequences TEST0.xxx to TEST8.xxx.
Disk2_8	Clause 10: Test sequences for the GSM Enhanced Full Rate (EFR) speech codec; Speech test sequences TEST09.xxx to TEST16.xxx.
Disk3_8	Clause 10: Test sequences for the GSM Enhanced Full Rate (EFR) speech codec; Speech test sequences TEST17.xxx to TEST20.xxx, Codec homing and synchronisation sequences.
Disk4_8	Clause 10: Test sequences for the GSM Enhanced Full Rate (EFR) speech codec; DTX test sequences.
Disk5_8 to Disk8_8	Clause 10: Test sequences for the GSM Enhance Full Rate (EFR) speech codec; 8 bit A- and μ -law compressed test sequences for alternative TRAU testing.

The present document specifies the digital test sequences for the GSM enhanced full rate speech codect for the digital cellular telecommunications system.

The contents of the present document is subject to continuing work within SMG and may change following formal SMG approval. Should SMG modify the contents of the present document it will be re-released with an identifying change of release date and an increase in version number as follows:

Version 6.x.y

where:

- 6 indicates Release 1997 of GSM Phase 2+
- x the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- y the third digit is incremented when editorial only changes have been incorporated in the specification.

Proposed national transposition dates				
Date of adoption of this EN:	3 September 1999			
Date of latest announcement of this EN (doa):	31 December 1999			
Date of latest publication of new National Standard or endorsement of this EN (dop/e):	30 June 2000			
Date of withdrawal of any conflicting National Standard (dow):	30 June 2000			

1 Scope

The present document specifies the digital test sequences for the GSM enhanced full rate speech codec. These sequences test for a bit exact implementation of the enhanced full rate speech transcoder (GSM 06.60 [2]), Voice Activity Detection (GSM 06.82 [6]), comfort noise (GSM 06.62 [4]) and the discontinuous transmission (GSM 06.81 [5]).

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.
- For this Release 1997 document, references to GSM documents are for Release 1997 versions (version 6.x.y).
- [1] GSM 01.04: "Digital cellular telecommunication system (Phase 2+); Abbreviations and acronyms".
- [2] GSM 06.60: "Digital cellular telecommunications system (Phase 2+); Enhanced Full Rate (EFR) speech transcoding".
- [3] GSM 06.61: "Digital cellular telecommunications system (Phase 2+); Substitution and muting of lost frames for Enhanced Full Rate (EFR) speech traffic channels".
- [4] GSM 06.62: "Digital cellular telecommunications system (Phase 2+); Comfort noise aspects for Enhanced Full Rate (EFR) speech traffic channels".
- [5] GSM 06.81: "Digital cellular telecommunications system (Phase 2+); Discontinuous Transmission (DTX) for Enhanced Full Rate (EFR) speech traffic channels".
- [6] GSM 06.82: "Digital cellular telecommunications system (Phase 2+); Voice Activity Detection (VAD) for Enhanced Full Rate (EFR) speech traffic channels".
- [7] GSM 06.53: "Digital cellular telecommunications system (Phase 2+); ANSI-C code for the GSM Enhanced Full Rate (EFR) speech codec".
- [8] GSM 06.51: "Digital cellular telecommunications system (Phase 2+); Enhanced Full Rate (EFR) speech coding functions; General description".

3 Definitions and abbreviations

3.1 Definitions

Definition of terms used in the present document can be found in GSM 06.60 [2], GSM 06.61 [3], GSM 06.62 [4], GSM 06.81 [5] and GSM 06.82 [6].

3.2 Abbreviations

For the purpose of the present document the following abbreviations apply.

ETS European Telecommunication Standard
GSM Global System for Mobile communications

For abbreviations not given in this subclause see GSM 01.04 [1].

4 General

Digital test sequences are necessary to test for a bit exact implementation of the enhanced full rate speech transcoder (GSM 06.60 [2]), Digital test Voice Activity Detection (GSM 06.82 [6]), comfort noise (GSM 06.62 [4]) and the discontinuous transmission (GSM 06.81 [5]).

The test sequences may also be used to verify installations of the ANSI C code in GSM 06.53 [7].

Clause 5 describes the format of the files which contain the digital test sequences. Clause 6 describes the test sequences for the speech transcoder. Clause 7 describes the test sequences for the VAD, comfort noise and discontinuous transmission.

Clause 8 describes the method by which synchronisation is obtained between the test sequences and the speech codec under test.

Clause 9 describes the alternative acceptance testing of the speech encoder and decoder in the TRAU by means of 8 bit A- or μ -law compressed test sequences on the A-Interface.

Electronic copies of the digital test sequences are provided as clause 10, these digital test sequences are contained in the archive 6po0300o.ZIP which accompanies the present document.

5 Test sequence format

This clause provides information on the format of the digital test sequences for the GSM enhanced full rate speech transcoder (GSM 06.60 [2]), Voice Activity Detection (GSM 06.82 [6]), comfort noise (GSM 06.62 [4]) and the discontinuous transmission (GSM 06.81 [5]).

5.1 File format

The test sequence files are provided in archive 6po0300o.ZIP which accompanies the present document.

Following decompression, four types of file are provided:

Files for input to the GSM enhanced full rate speech encoder: *.INP

- Files for comparison with the encoder output: *.COD

- Files for input to the GSM enhanced full rate speech decoder: *.DEC

- Files for comparison with the decoder output: *.OUT

The *.DEC files are generated from the corresponding *.COD files.

Tables 1, 2, 3 and 4 define the formats of the four types of file.

Each speech parameter within the speech frame of 244 bits/20 ms is contained in a serial string of 16 bit words, where each word contains the value of one bit of the parameter. In each string of n 16 bit words containing the n bits of a parameter, the most significant bit of the parameter is written first, and the least significant bit is written last. The bit value contained in a single 16 bit word is either 0x0000 or 0x0001 (right justified) for the binary values of "0" and "1", respectively. See table 6 of GSM 06.60 [2] for the order of occurrence and bit allocation of speech parameters within the speech frame of 244 bits/20 ms.

The samples in the encoder input signal and in the decoder output signal are left justified.

5.2 Codec homing

Each *.INP file includes two homing frames at the start of the test sequence. The function of these frames is to reset the speech encoder state variables to their initial value. In the case of a correct installation of the ANSI-C simulation (GSM 06.53 [7]), all speech encoder output frames shall be identical to the corresponding frame in the *.COD file. In the case of a correct hardware implementation undergoing testing, the first speech encoder output frame is undefined and need not be identical to the first frame in the *.COD file, but all remaining speech encoder output frames shall be identical to the corresponding frames in the *.COD file.

Each *.DEC file includes two homing frames at the start of the test sequence. The function of these frames is to reset the speech decoder state variables to their initial value. In the case of a correct installation of the ANSI-C simulation (GSM 06.53 [7]), all speech decoder output frames shall be identical to the corresponding frame in the *.OUT file. In the case of a correct hardware implementation undergoing testing, the first speech decoder output frame is undefined and need not be identical to first frame in the *.OUT file, but all remaining speech decoder output frames shall be identical to the corresponding frames in the *.OUT file.

Table 1: Encoder input sequence (*.INP) format

Name	Description	No. of bits	Justification
s(n)	Encoder input signal	13	Left

Table 2: Encoder output sequence (*.COD) format

Name	Description	No. of bits	Justification			
Speech parameters						
	Serial stream of speech parameter bits					
SPEECH	to the channel encoder	244	Right			
Additional information						
VAD	Voice activity detection flag	1	Right			
SP	SP flag	1	Right			

Table 3: Decoder input sequence (*.DEC) format

Name	Description	No. of bits	Justification				
Additional information							
BFI	Bad Frame Indicator flag	1	Right				
Speech parameters	Speech parameters						
	Serial stream of speech parameter bits						
SPEECH	to the channel encoder	244	Right				
Additional information	Additional information						
SID	Silence Descriptor flag	1	Right				
TAF	Time Alignment Flag	1	Right				

Table 4: Decoder output sequence (*.OUT) format

Name	Description	No. of bits	Justification
s'(n)	Decoder output signal	13	Left

6 Speech codec test sequences

This clause describes the test sequences designed to exercise the GSM enhanced full rate speech transcoder (GSM 06.60 [2]).

6.1 Codec configuration

The speech encoder shall be configured to operate in the non-DTX mode. The VAD and SP flags shall be set to 1 at the speech encoder output.

6.2 Speech codec test sequences

Table 5 lists the location and size of the speech codec test sequences.

6.2.1 Speech encoder test sequences

Twenty-one encoder input sequences are provided. Note that for the input sequences TEST0.INP to TEST3.INP, the amplitude figures are given in 13-bit precision. The active speech levels are given in dBov.

- TEST0.INP Synthetic harmonic signal. The pitch delay varies slowly from 18 to 143.5 samples. The minimum and maximum amplitudes are -997 and +971.
- TEST1.INP Synthetic harmonic signal. The pitch delay varies slowly from 144 down to 18.5 samples. Amplitudes at saturation point -4096 and +4095.
- TEST2.INP Sinusoidal sweep varying from 150 Hz to 3400 Hz. Amplitudes \pm 1250.
- TEST3.INP Sinusoidal sweep varying from 150 Hz to 3400 Hz. Amplitudes ± 4000.
- TEST4.INP Female speech, active speech level: -19.4 dBov, flat frequency response.
- TEST5.INP Male speech, active speech level: -18.7 dBov, flat frequency response.
- TEST6.INP Female speech, ambient noise, active speech level: -35.0 dBov, flat frequency response.
- TEST7.INP Female speech, ambient noise, active speech level: -25.0 dBov, flat frequency response.
- TEST8.INP Female speech, ambient noise, active speech level: -15.6 dBov, flat frequency response.
- TEST9.INP Female speech, car noise, active speech level: -35.5 dBov, flat frequency response.
- TEST10.INP Female speech, car noise, active speech level: -26.1 dBov, flat frequency response.
- TEST11.INP Female speech, car noise, active speech level: -15.8 dBov, flat frequency response.
- TEST12.INP Male speech, ambient noise, active speech level: -34.9 dBov, flat frequency response.
- TEST13.INP Male speech, ambient noise, active speech level: -24.8 dBov, flat frequency response.
- TEST14.INP Male speech, ambient noise, active speech level: -15.0 dBov, flat frequency response.
- TEST15.INP Male speech, babble noise, active speech level: -34.1 dBov, flat frequency response.
- TEST16.INP Male speech, babble noise, active speech level: -24.3 dBov, flat frequency response.
- TEST17.INP Male speech, babble noise, active speech level: -14.4 dBov, flat frequency response.
- TEST18.INP Female speech, ambient noise, active speech level: -26.0 dBov, modified IRS frequency response, with many zero frames.
- TEST19.INP Male speech, ambient noise, active speech level: -36.0 dBov, modified IRS frequency response, with many zero frames.
- TEST20.INP Sequence for exercising the LPC vector quantisation codebooks and ROM tables of the codec.

The TEST0.INP and TEST1.INP sequences were designed to test the pitch lag of the GSM enhanced full rate speech encoder. In a correct implementation, the resulting speech encoder output parameters shall be identical to those specified in the TEST0.COD and TEST1.COD sequences, respectively.

The TEST2.INP and TEST3.INP sequences are particularly suited for testing the LPC analysis, as well as for finding saturation problems. In a correct implementation, the resulting speech encoder output parameters shall be identical to those specified in the TEST2.COD and TEST3.COD sequences, respectively.

The TEST4.INP and TEST5.INP sequences contain a lot of low-frequency components. In a correct implementation, the resulting speech encoder output parameters shall be identical to those specified in the TEST4.COD and TEST5.COD sequences, respectively.

The TEST18.INP and TEST19.INP sequences contain some "all zeros" frames (silence) in between segments of speech. In a correct implementation, the resulting speech encoder output parameters shall be identical to those specified in the TEST18.COD and TEST19.COD sequences, respectively.

The TEST20.INP sequence was designed to force the encoder to select each of the LPC code indices and each but one of the the ROM table indices of the codec.

The remaining sequences (TEST6.INP to TEST17.INP) were selected on the basis of bringing various input characteristics (background noise) and levels to the test sequence set. In a correct implementation, the resulting speech encoder output parameters shall be identical to those specified in the TEST6.COD to TEST17.COD sequences, respectively.

6.2.2 Speech decoder test sequences

Twenty-one speech decoder input sequences TESTXX.DEC (XX = 0..20) are provided. These are derived from the corresponding TESTXX.INP sequences. In a correct implementation, the resulting speech decoder output shall be identical to the corresponding TESTXX.OUT sequences.

6.2.3 Codec homing sequence

In addition to the test sequences described above, two homing sequences are provided to assist in codec testing. TEST21.INP contains one encoder-homing-frame. TEST21.DEC contains one decoder-homing-frame. The use of these sequences is described in GSM 06.51 [8].

Table 5: Location and size of speech codec test sequences

Disk No.	File Name	No. of frames	Size (bytes)		
1/8	TEST0.INP		91 200		
1/8	TEST0.COD	285	140 220		
1/8	TEST0.DEC		140 790		
1/8	TEST0.OUT		91 200		
1/8	TEST1.INP		91 200		
1/8	TEST1.COD	285	140 220		
1/8	TEST1.DEC		140 790		
1/8	TEST1.OUT		91 200		
1/8	TEST2.INP		128 640		
1/8	TEST2.COD	402	197 784		
1/8	TEST2.DEC		198 588		
1/8	TEST2.OUT		128 640		
1/8	TEST3.INP		128 640		
1/8	TEST3.COD	402	197 784		
1/8	TEST3.DEC		198 588		
1/8	TEST3.OUT		128 640		
1/8	TEST4.INP		96 320		
1/8	TEST4.COD	301	148 092		
1/8	TEST4.DEC		148 694		
1/8	TEST4.OUT		96 320		
1/8	TEST5.INP		71 680		
1/8	TEST5.COD	224	110 208		
1/8	TEST5.DEC		110 656		
1/8	TEST5.OUT		71 680		
1/8	TEST6.INP		107 200		
1/8	TEST6.COD	335	164 820		
1/8	TEST6.DEC		165 490		
1/8	TEST6.OUT		107 200		
1/8	TEST7.INP		116 160		
1/8	TEST7.COD	363	178 596		
1/8	TEST7.DEC		179 322		
1/8	TEST7.OUT		116 160		
1/8	TEST8.INP		108 800		
1/8	TEST8.COD	340	167 280		
1/8	TEST8.DEC		167 960		
1/8	TEST8.OUT		108 800		
2/8	TEST9.INP	407	130 240		
2/8	TEST9.COD	407	200 244		
2/8	TEST9.DEC		201 058		
2/8	TEST9.OUT		130 240		
2/8	TEST10.INP	200	122 560		
2/8	TEST10.COD	383	188 436		
2/8	TEST10.DEC		189 202		
2/8	TEST10.OUT		122 560		
2/8	TEST11.INP	267	117 440		
2/8	TEST11.COD	367	180 564 181 298		
2/8	TEST11.DEC				
2/8	TEST11.OUT		117 440		
2/8	TEST12.INP	200	95 360 146 616		
2/8 2/8	TEST12.COD TEST12.DEC	298	146 616		
2/8	TEST12.DEC		147 212 95 360		
	TEST12.001		108 160		
2/8		220	166 296		
2/8 2/8	TEST13.COD	338			
2/8	TEST13.DEC		166 972		
	TEST13.OUT TEST14.INP		108 160		
2/8 2/8	TEST14.INP	318	101 760 156 456		
2/8	TEST14.COD	316	156 456 157 092		
2/8	TEST14.DEC		101 760		
2/0	163114.001		101 / 00		
(continued)					

Table 5 (concluded): Location and size of speech codec test sequences

Disk No.	File Name	No. of frames	Size (bytes)
2/8	TEST15.INP		104 960
2/8	TEST15.COD	328	161 376
2/8	TEST15.DEC		162 032
2/8	TEST15.OUT		104 960
2/8	TEST16.INP		113 280
2/8	TEST16.COD	354	174 168
2/8	TEST16.DEC		174 876
2/8	TEST16.OUT		113 280
3/8	TEST17.INP		101 120
3/8	TEST17.COD	316	155 472
3/8	TEST17.DEC		156 104
3/8	TEST17.OUT		101 120
3/8	TEST18.INP		128 640
3/8	TEST18.COD	402	197 784
3/8	TEST18.DEC		198 588
3/8	TEST18.OUT		128 640
3/8	TEST19.INP		128 640
3/8	TEST19.COD	402	197 784
3/8	TEST19.DEC		198 588
3/8	TEST19.OUT		128 640
3/8	TEST20.INP		201 920
3/8	TEST20.COD	631	310 452
3/8	TEST20.DEC		311 714
3/8	TEST20.OUT		201 920
3/8	TEST21.INP	1	320
3/8	TEST21.DEC		494

7 DTX test sequences

This subclause describes the test sequences designed to exercise the VAD algorithm (GSM 06.82 [6]), comfort noise (GSM 06.62 [4]) and discontinuous transmission (GSM 06.81 [5]).

7.1 Codec configuration

The VAD, comfort noise and discontinuous transmission shall be tested in conjunction with the speech encoder (GSM 06.60 [2]). The speech encoder shall be configured to operate in the DTX mode defined in GSM 06.62 [4].

7.2 DTX test sequences

Each DTX test sequence consists of four files:

- Files for input to the GSM enhanced full rate speech encoder: *.INP

- Files for comparison with the encoder output: *.COD

- Files for input to the GSM enhanced full rate speech decoder: *.DEC

- Files for comparison with the decoder output: *.OUT

The *.DEC files are generated from the corresponding *.COD files.

In a correct implementation, the speech encoder parameters generated by the *.INP file shall be identical to those specified in the *.COD file; and the speech decoder output generated by the *.DEC file shall be identical to that specified in the *.OUT file.

Table 6 lists the DTX test sequences and their size in frames.

7.2.1 Predictor values computation

The computation of the predictor values described in GSM 06.82 [6] is not tested explicitly, since the results from the computation are tested many times via the spectral comparison and threshold adaptation tests.

7.2.2 Spectral comparison

The spectral comparison algorithm described in GSM 06.82 [6] is tested by the following test sequence:

- DTX01.*

7.2.3 Threshold adaptation

The threshold adaptation algorithm described in GSM 06.82 [6] is tested by the following test sequence:

- DTX02. *

7.2.4 Periodicity detection

The periodicity detection algorithm described in GSM 06.82 [6] is tested by the following test sequence:

- DTX03. *

7.2.5 Tone detection

The tone detection algorithm described in GSM 06.82 [6] is tested by the following test sequence:

- DTX04. *

7.2.6 Safety and initialisation

This sequence checks the safety paths used to prevent zero values being passed to the norm function. It checks the functions described in the adaptive filtering and energy computation, and the prediction values computation given in GSM 06.82 [6]. This sequence also checks the initialisation of thvad and the rvad array:

- DTX05. *

7.2.7 Comfort noise test sequence

The test sequences described in sub-subclauses 7.2.2 to 7.2.6 are designed to exercise the VAD described in GSM 06.82 [6] and the discontinuous transmission described in GSM 06.81 [5]. The following test sequence is defined to exercise the comfort noise algorithm described in GSM 06.62 [4]:

- DTX06.*

7.2.8 Real speech and tones

The test sequences cannot be guaranteed to find every possible error. There is therefore a small possibility that an incorrect implementation produces the correct output for the test sequences, but fails with real signals. Consequently, an extra sequence is included, which consists of very clean speech, barely detectable speech and a swept frequency tone:

- DTX07. *

NOTE: Some of the DTX test sequences contain homing frames. The DTX test sequences are therefore only suitable for testing a single transcoding.

Table 6: Location and size of DTX test sequences

				size	(bytes)	
Disk No.	File Name	No. of	*.INP	*.COD	*.DEC	*.OUT
		Frames				
4/8	DTX01	710	227 200	349 320	350 740	227 200
4/8	DTX02	933	298 560	459 036	460 902	298 560
4/8	DTX03	156	49 920	76 752	77 064	49 920
4/8	DTX04	245	78 400	120 540	121 030	78 400
4/8	DTX05	56	17 920	27 552	27 664	17 920
4/8	DTX06	771	246 720	379 332	380 874	246 720
4/8	DTX07	1188	380 160	584 496	586 872	380 160

8 Sequences for finding the 20 ms framing of the GSM enhanced full rate speech encoder

When testing the decoder, alignment of the test sequences used to the decoder framing is achieved by the air interface (testing of MS) or can be reached easily on the A_{bis} -interface (testing on network side).

When testing the encoder, usually there is no information available about where the encoder starts its 20 ms segments of speech input to the encoder.

In the following, a procedure is described to find the 20 ms framing of the encoder using special synchronisation sequences. This procedure can be used for MS as well as for network side.

Synchronisation can be achieved in two steps. First, bit synchronisation has to be found. In a second step, frame synchronisation can be determined. This procedure takes advantage of the codec homing feature of the enhanced full rate codec, which puts the codec in a defined home state after the reception of the first homing frame. On the reception of further homing frames, the output of the codec is predefined and can be triggered to.

8.1 Bit synchronisation

The input to the speech encoder is a series of 13 bit long words (104 kbits/s, 13 bit linear PCM). When starting to test the speech encoder, no knowledge is available on bit synchronisation, i.e., where the encoder expects its least significant bits, and where it expects the most significant bits.

The encoder homing frame consists of 160 samples, all set to zero with the exception of the least significant bit, which is set to one (0 0000 0000 0001 binary, or 0x0008 hex if written into 16 bit words left justified). If two such encoder homing frames are input to the encoder consecutively, the decoder homing frame is expected at the output as a reaction of the second encoder homing frame.

Since there are only 13 possibilities for bit synchronisation, after a maximum of 13 trials bit synchronisation can be reached. In each trial three consecutive encoder homing frames are input to the encoder. If the decoder homing frame is not detected at the output, the relative bit position of the three input frames is shifted by one and another trial is performed. As soon as the decoder homing frame is detected at the output, bit synchronisation is found, and the first step can be terminated.

The reason why three consecutive encoder homing frames are needed is that frame synchronisation is not known at this stage. To be sure that the encoder reads two complete homing frames, three frames have to be input. Wherever the encoder has its 20 ms segmentation, it will always read at least two complete encoder homing frames.

An example of the 13 different frame triplets is given in sequence BITSYNC.INP (see table 7).

8.2 Frame synchronisation

Once bit synchronisation is found, frame synchronisation can be found by inputting one special frame that delivers 160 different output frames, depending on the 160 different positions that this frame can possibly have with respect to the encoder framing.

This special synchronisation frame was found by taking one input frame and shifting it through the positions 0 to 159. The corresponding 160 encoded speech frames were calculated and it was verified that all 160 output frames were different. When shifting the input synchronisation frame, the samples at the beginning were set to 0x0008 hex, which corresponds to the samples of the encoder homing frame.

Before inputting this special synchronisation frame to the encoder, again the encoder has to be reset by one encoder homing frame. A second encoder homing frame is needed to provoke a decoder homing frame at the output that can be triggered to. And since the framing of the encoder is not known at that stage, three encoder homing frames have to precede the special synchronisation frame to ensure that the encoder reads at least two homing frames, and at least one decoder homing frame is produced at the output, serving as a trigger for recording.

The special synchronisation frame preceded by the three encoder homing frames are given in SEQSYNC.INP. The corresponding 160 different output frames are given in SYNC000.COD through SYNC159.COD. The three digit number in the filename indicates the number of samples by which the input was retarded with respect to the encoder framing. By a corresponding shift in the opposite direction, alignment with the encoder framing can be reached.

8.3 Formats and sizes of the synchronisation sequences

BIT SYNC.INP:

This sequence consists of 13 frame triplets. It has the format of the speech encoder input test sequences (13 bit left justified with the three least significant bits set to zero).

The size of it is therefore:

SEQSYNC.INP:

This sequence consist of 3 encoder reset frames and the special synchronisation frame. It has the format of the speech encoder input test sequences (13 bit left justified with the three least significant bits set to zero).

The size of it is therefore:

```
SIZE (SEQSYNC.INP) = 4 * 160 * 2 bytes = 1280 bytes
```

SYNCXXX.COD:

These sequences consists of 1 encoder output frame each. They have the format of the speech encoder output test sequences (16 bit words right justified). The values of the VAD and SP flags are set to one in these files.

The size of them is therefore:

```
SIZE (SYNCXXX.COD) = (244 + 2) * 2 bytes = 492 bytes
```

Table 7 summarises this information.

Table 7: Location, size and justification of synchronisation sequences

Disk	Purpose of Sequence	Name of Sequence	No. of Frames	Size in	Justification
No.				Bytes	
3/8	Bit Synchronisation	BITSYNC.INP	39	1 2480	Left
3/8	Frame Synchronisation (input)	SEQSYNC.INP	4	1 280	Left
3/8	Frame Synchronisation (output)	SYNC000.COD	1	492	Right
3/8		SYNC001.COD	1	492	Right
3/8		SYNC002.COD	1	492	Right
"		"	"	"	"
"		"	"	"	"
"		"	"	"	"
3/8		SYNC159.COD	1	492	Right

9 Trau Testing with 8 Bit A- and μ-law PCM Test Sequences

In the previous clauses, tests for the transcoder in the TRAU are described, using 13 bit linear test sequences. However, these 13 bit test sequences require a special interface in the TRAU and do not allow testing in the field. In most cases the TRAU has to be set in special mode before testing.

As an alternative, the speech codec tests in the TRAU can be performed using A- or μ -law compressed 8 bit PCM test sequences on the A interface. For this purpose modified input test sequences (*-X.INP) are generated from the original sequences by A or μ law compression. As an input to the encoder they result in modified encoder output sequences (*-X.COD). The same *.dec decoder input sequences as in subclause 6.2.2. are then used to produce the output sequences *-X.OUT, which are A- or μ compressed.

The A- and μ -law compression and decompression does not change the homing frames at the encoder input. The format of all A- and μ -law PCM files *-X.INP and *-X.OUT is one sample (8 bit) per byte. The format of all other files is as described in clause 5.

All files are contained in archive 6po0300o.ZIP which accompanies the present document. The 'X' in the tables below with the filenames stands for A (A-law) and U (μ -law), respectively. The decoder input files *.dec are the same as in table 5 and are not described in this clause.

Table 8: Location and size of compressed 8 bit PCM speech codec test sequences

5-8/8 TESTO-X.INP	Disk No.	File Name	No. of frames	Size (bytes)
5-8/8 TEST1-X.INP 5-8/8 TEST1-X.INP 5-8/8 TEST1-X.COD 5-8/8 TEST1-X.COD 5-8/8 TEST1-X.COD 5-8/8 TEST2-X.INP 5-8/8 TEST2-X.INP 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST4-X.COD 5-8/8 TEST4-X.COD 5-8/8 TEST5-X.INP 5-8/8 TEST5-X.INP 5-8/8 TEST5-X.COD 5-8/8 TEST5-	5-8/8	TEST0-X.INP		45 600
5-8/8 TEST1-X.INP 5-8/8 TEST1-X.COD 5-8/8 TEST1-X.COD 5-8/8 TEST1-X.COD 5-8/8 TEST2-X.INP 5-8/8 TEST2-X.INP 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST2-X.COD 5-8/8 TEST3-X.INP 5-8/8 TEST3-X.INP 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST4-X.INP 5-8/8 TEST4-X.COD 5-8/8 TEST4-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST1-X.COD 5-8/8 TEST1-	5-8/8	TEST0-X.COD	285	140 220
5-8/8 TEST1-X.COD 285 140 220 45 600 5-8/8 TEST2-X.INP 64 320 197 784 5-8/8 TEST2-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.INP 64 320 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST4-X.INP 48 160 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 335 164 820 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.COD 361 180 564 5-8/8 TEST9-X.COD 363 184 346 5-8/8 TEST9-X.COD 363 184 346 5-8/8 TEST9-X.COD 363 184 346 5-8/8 TEST9-X.COD 367 180 564 5-8/8 TEST1-X.COD 368 166 296 5-8/8 TEST1-X.COD 367 180 564 5-8/8 TEST1-X.COD 368 055 60 560 5-8/8 TEST1-X.COD 364 320 5-8/8 TEST1-X.COD 364 320 5-8/8 TEST1-X.COD 364 320 5-8/8 TEST1-	5-8/8	TEST0-X.OUT		45 600
5-8/8 TEST1-X.OUT	5-8/8	TEST1-X.INP		45 600
5-8/8 TEST2-X.OD 402 197 784 5-8/8 TEST2-X.COD 402 197 784 5-8/8 TEST3-X.OD 402 197 784 5-8/8 TEST3-X.OD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.OD 402 197 784 5-8/8 TEST3-X.OD 402 197 784 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST4-X.OD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.OD 335 164 820 5-8/8 TEST6-X.OD 335 164 820 5-8/8 TEST6-X.OD 335 164 820 5-8/8 TEST5-X.OD 363 178 596 5-8/8 TEST7-X.OD 363 178 596 5-8/8 TEST7-X.OD 363 178 596 5-8/8 TEST8-X.OD 340 167 280 5-8/8 TEST8-X.OD 340 167 280 5-8/8 TEST9-X.INP 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OD 340 167 280 5-8/8 TEST9-X.OD 340 167 280 5-8/8 TEST9-X.OD 383 188 436 5-8/8 TEST9-X.OD 383 188 436 5-8/8 TEST9-X.OD 383 188 436 5-8/8 TEST1-X.OD 367 180 564 5-8/8 TEST1-X.OD 368 166 296 5-8/8 TEST1-X.OD 378 166 320 5-8/8 TEST1-X.OD 378 166 320 5-	5-8/8	TEST1-X.COD	285	140 220
5-8/8 TEST2-X.COD 402 197 784 5-8/8 TEST3-X.INP 64 320 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.OUT 64 320 5-8/8 TEST4-X.INP 48 160 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST4-X.OUT 48 160 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 335 164 820 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.COD 361 120 5-8/8 TEST9-X.COD 361 120 5-8/8 TEST9-X.COD 361 120 5-8/8 TEST9-X.COD 361 167 280 5-8/8 TEST9-X.COD 361 180 564 5-8/8 TEST10-X.COD 363 188 436 5-8/8 TEST10-X.COD 367 180 564 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.INP 59 880 5-8/8 TEST11-X.INP 50 664 5-8/8 TEST15-X.INP 50	5-8/8	TEST1-X.OUT		45 600
5-8/8 TEST3-X.OUT 64 320 5-8/8 TEST3-X.INP 64 320 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST4-X.INP 48 160 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 335 164 820 5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 55 80 80 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.OUT 56 120 5-8/8 TEST9-X.OUT 57 80 80 80 5-8/8 TEST9-X.OUT 57 80 80 80 5-8/8 TEST9-X.OUT 57 80 80 80 5-8/8 TEST9-X.OUT 55 80 80 5-8/8 TEST1-X.OUT 58 80 80 5-8/8 TEST1-X.OUT 58 80 80 5-8/8 TEST1-X.OUT 58 720 5-8/8 TEST1-X.OUT 59 80 80 5-8/8 TEST1-X.OUT 50 80	5-8/8	TEST2-X.INP		64 320
5-8/8 TEST3-X.OUT 5-8/8 TEST3-X.INP 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.COD 5-8/8 TEST3-X.OUT 5-8/8 TEST3-X.OUT 5-8/8 TEST3-X.OUT 5-8/8 TEST4-X.INP 5-8/8 TEST4-X.COD 5-8/8 TEST4-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST6-X.INP 5-8/8 TEST6-X.INP 5-8/8 TEST6-X.OUT 5-8/8 TEST6-X.OUT 5-8/8 TEST6-X.OUT 5-8/8 TEST6-X.OUT 5-8/8 TEST6-X.OUT 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST8-X.OUT 5-8/8 TEST9-X.OUT 5-8/8 TEST9-X.OUT 5-8/8 TEST9-X.OUT 5-8/8 TEST1-X.OUT 5-8/8 TEST1-	5-8/8	TEST2-X.COD	402	197 784
5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.OUT 64 320 5-8/8 TEST4-X.INP 48 160 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 335 164 820 5-8/8 TEST6-X.COD 363 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.COD 365 120 5-8/8 TEST9-X.COD 367 200 244 5-8/8 TEST9-X.COD 367 200 244 5-8/8 TEST9-X.COD 367 200 244 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.COD 368 166 296 5-8/8 TEST11-X.COD 378 166 1280 5-8/8 TEST11-X.COD 378 166 166 366 5-8/8 TEST11-X.COD 378 166 166 376 5-8/8 TEST11-X.COD 378 166 166 376 5-8/8 TEST11-X.COD 378 166 166 376 5-8/8 TEST11-X.COD 378 166 167 378 166 376 5-8/8 TEST11-X.COD 378 166 167 376 5-8/8 TEST11-X.COD 378 166 167 376 5-8/8 TEST11-X.COD 378 166 167 376 5-8/8 TEST11-X.COD 378 166 177 468 5-8/8 TEST11-X.COD 378 166 370 378 166 370 378 166 370 378 166 370 378 166 370 378 166 370 378 166 370 378 166 370 378 178 178 178 178 178 178 178 178 178 1	5-8/8	TEST2-X.OUT		
5-8/8 TEST3-X.COD 402 197 784 5-8/8 TEST3-X.OUT 64 320 5-8/8 TEST4-X.INP 48 160 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST5-X.COD 335 840 5-8/8 TEST5-X.COD 335 164 820 5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.COD 335 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 55 80 80 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.COD 340 167 280 5-8/8 TEST9-X.COD 365 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST11-X.COD 383 188 436 5-8/8 TEST11-X.COD 361 280 180 564 5-8/8 TEST11-X.COD 361 280 180 564 5-8/8 TEST11-X.COD 361 280 146 616 5-8/8 TEST11-X.COD 361 361 366 466 5-8/8 TEST11-X.COD 368 166 296 5-8/8 TEST11-X.COD 368 166 296 5-8/8 TEST11-X.COD 378 166 1280 5-8/8 TEST11-X.COD 378 166 1280 5-8/8 TEST11-X.COD 378 166 166 564 568 168 168 168 168 168 168 168 168 168 1	5-8/8			64 320
5-8/8 TEST4-X.INP 5-8/8 TEST4-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST6-X.INP 5-8/8 TEST6-X.INP 5-8/8 TEST6-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST8-X.INP 5-8/8 TEST8-X.COD 5-8/8 TEST8-X.COD 5-8/8 TEST8-X.COD 5-8/8 TEST8-X.COD 5-8/8 TEST9-X.INP 5-8/8 TEST9-X.COD 5-8/8 TEST9-X.COD 5-8/8 TEST9-X.COD 5-8/8 TEST10-X.COD 5-8/8 TEST10-X.COD 5-8/8 TEST11-X.COD 5-8/8 TEST15-X.COD 5-8/8	5-8/8	TEST3-X.COD	402	
5-8/8 TEST4-X.INP 301 148 092 5-8/8 TEST4-X.COD 301 148 092 5-8/8 TEST5-X.INP 35 840 5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.COD 363 178 596 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.NP 54 400 5-8/8 TEST8-X.OUT 65 120 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST10-X.INP 65 120 5-8/8 TEST10-X.INP 65 120 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367	5-8/8	TEST3-X.OUT		64 320
5-8/8 TEST5-X.INP 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST6-X.COD 5-8/8 TEST7-X.INP 5-8/8 TEST7-X.INP 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST8-X.COD 5-8/8 TEST9-X.INP 5-8/8 TEST9-X.INP 5-8/8 TEST9-X.COD 5-8/8 TEST10-X.INP 5-8/8 TEST10-X.OUT 5-8/8 TEST10-X.OUT 5-8/8 TEST11-X.COD 5-8/8 TEST11-X.OUT 5-8/8 TEST11-X.COD 5-8/8 TEST15-X.COD 5-	5-8/8	TEST4-X.INP		
5-8/8 TEST5-X.INP 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST5-X.COD 5-8/8 TEST6-X.COD 5-8/8 TEST7-X.INP 5-8/8 TEST7-X.INP 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST7-X.COD 5-8/8 TEST8-X.COD 5-8/8 TEST9-X.INP 5-8/8 TEST9-X.INP 5-8/8 TEST9-X.COD 5-8/8 TEST10-X.INP 5-8/8 TEST10-X.OUT 5-8/8 TEST10-X.OUT 5-8/8 TEST11-X.COD 5-8/8 TEST11-X.OUT 5-8/8 TEST11-X.COD 5-8/8 TEST15-X.COD 5-	5-8/8	TEST4-X.COD	301	148 092
5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 54 400 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 61 280 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST13-X.OUT 47 680 5-8/8 TEST13-X.OUT <	5-8/8	TEST4-X.OUT		
5-8/8 TEST5-X.COD 224 110 208 5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 54 400 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 61 280 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST13-X.OUT 47 680 5-8/8 TEST13-X.OUT <	5-8/8	TEST5-X.INP		35 840
5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.COD 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 58 080 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST10-X.OUT 58 720 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 50 880 </td <td></td> <td></td> <td>224</td> <td></td>			224	
5-8/8 TEST6-X.INP 53 600 5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 61 280 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 47 680 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.OUT				
5-8/8 TEST6-X.COD 335 164 820 5-8/8 TEST7-X.INP 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 65 120 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 58 720 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST14-X.COD 338 166 296 5-8/8 TES				
5-8/8 TEST6-X.OUT 53 600 5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST13-X.INP 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8			335	
5-8/8 TEST7-X.INP 58 080 5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST15-X.COD 318			000	
5-8/8 TEST7-X.COD 363 178 596 5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OD 298 146 616 5-8/8 TEST13-X.OD 298 146 616 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST14-X.OD 338 166 296 5-8/8 TEST14-X.INP 50 880				
5-8/8 TEST7-X.OUT 58 080 5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.OUD 298 146 616 5-8/8 TEST13-X.OUT 47 680 5-8/8 TEST13-X.OD 338 166 296 5-8/8 TEST13-X.OD 338 166 296 5-8/8 TEST13-X.OD 338 166 296 5-8/8 TEST13-X.OD 318 156 456 5-8/8 TEST14-X.INP 50			363	
5-8/8 TEST8-X.INP 54 400 5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST8-X.INP 54 400 54 400 5-8/8 TEST9-X.INP 65 120 200 244 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.COD 298 146 616 5-8/8 TEST13-X.OUT 47 680 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.OD 338 166 296 5-8/8 TEST14-X.OD 318 156 456 5-8/8 TEST14-X.OD 318 156 456 5-8/8 TEST15-X.OD 328<			000	
5-8/8 TEST8-X.COD 340 167 280 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.OUT 47 680 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.OD 328 161 376 5-8/8 TEST16-X.OD 354				
5-8/8 TEST8-X.OUT 54 400 5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST19-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.COD 298 146 616 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.OD 318 156 296 5-8/8 TEST14-X.OD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.OUT 50 880 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT			3/10	
5-8/8 TEST9-X.INP 65 120 5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.UNP 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.OD 318 156 456 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.UNP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8			3-10	
5-8/8 TEST9-X.COD 407 200 244 5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.OUT <td></td> <td></td> <td></td> <td></td>				
5-8/8 TEST9-X.OUT 65 120 5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.OUT 52 480 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST18-X.OUT 50 560<			407	
5-8/8 TEST10-X.INP 61 280 5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.OUT 50 880 5-8/8 TEST16-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST19-X.INP 50 560 5-8/8 TEST18-X.OUT 50 560			407	
5-8/8 TEST10-X.COD 383 188 436 5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 50 880 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST18-X.OUT 64 320 <t< td=""><td></td><td></td><td></td><td></td></t<>				
5-8/8 TEST10-X.OUT 61 280 5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320			202	
5-8/8 TEST11-X.INP 58 720 5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 50 880 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.INP </td <td></td> <td></td> <td>303</td> <td></td>			303	
5-8/8 TEST11-X.COD 367 180 564 5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 50 560 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8				
5-8/8 TEST11-X.OUT 58 720 5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST13-X.INP 47 680 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT </td <td></td> <td></td> <td>267</td> <td></td>			267	
5-8/8 TEST12-X.INP 47 680 5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 52 480 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT </td <td></td> <td></td> <td>307</td> <td></td>			307	
5-8/8 TEST12-X.COD 298 146 616 5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 <				
5-8/8 TEST12-X.OUT 47 680 5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.OUT<			200	
5-8/8 TEST13-X.INP 54 080 5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960	, -		290	
5-8/8 TEST13-X.COD 338 166 296 5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST13-X.OUT 54 080 5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST15-X.INP 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960			220	
5-8/8 TEST14-X.INP 50 880 5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960			338	
5-8/8 TEST14-X.COD 318 156 456 5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST14-X.OUT 50 880 5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 50 560 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960		_	240	
5-8/8 TEST15-X.INP 52 480 5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960			318	
5-8/8 TEST15-X.COD 328 161 376 5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.OUT 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST15-X.OUT 52 480 5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			200	
5-8/8 TEST16-X.INP 56 640 5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST18-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			328	
5-8/8 TEST16-X.COD 354 174 168 5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST16-X.OUT 56 640 5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			054	
5-8/8 TEST17-X.INP 50 560 5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			35 4	
5-8/8 TEST17-X.COD 316 155 472 5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST17-X.OUT 50 560 5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			240	
5-8/8 TEST18-X.INP 64 320 5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			316	
5-8/8 TEST18-X.COD 402 197 784 5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST18-X.OUT 64 320 5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			400	
5-8/8 TEST19-X.INP 64 320 5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			402	
5-8/8 TEST19-X.COD 402 197 784 5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST19-X.OUT 64 320 5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST20-X.INP 100 960 5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960			402	
5-8/8 TEST20-X.COD 631 310 452 5-8/8 TEST20-X.OUT 100 960				
5-8/8 TEST20-X.OUT 100 960				
			631	
I 5-8/8 TEST21-X.INP 1 160				
1 100	5-8/8	TEST21-X.INP	1	160

Table 9: Location and size of compressed 8 bit PCM DTX test sequences

				size	bytes
Disk No.	File Name	No. of Frames	*.INP	*.COD	*.OUT
5-8/8	DTX01-X	710	113 600	349 320	113 600
5-8/8	DTX02-X	933	149 280	459 036	149 280
5-8/8	DTX03-X	156	24 960	76 752	24 960
5-8/8	DTX04-X	245	39 200	120 540	39 200
5-8/8	DTX05-X	56	8 960	27 552	8 960
5-8/8	DTX06-X	771	123 360	379 332	123 360
5-8/8	DTX07-X	1188	190 080	584 496	190 080

In addition to the test sequences above, special input (seqsyncX.inp) and output (syncxxxX.cod) sequences for frame synchronization are provided. The X again stands for A and μ law compressed PCM. The synchronization procedure is described in clause 8.

Table 10: Location, size and justification of compressed 8 bit PCM test sequences

Disk	Purpose of Sequence	Name of Sequence	No. of Frames	Size in	Justification
No.				Bytes	
5-8/8	Frame Synchronisation (input)	SEQSYNCX.INP	4	640	-
5-8/8	Frame Synchronisation (output)	SYNC000X.COD	1	492	Right
5-8/8		SYNC001X.COD	1	492	Right
5-8/8		SYNC002X.COD	1	492	Right
"		"	"	"	ıı ı
"		"	"	"	"
"		п	II .	"	II .
5-8/8		SYNC159X.COD	1	492	Right

Annex A (informative): Change Request History

Change history					
SMG No.	TDoc. No.	CR. No.	Section affected	New version	Subject/Comments
SMG#23				4.0.1	ETSI Publication
SMG#23				5.1.0	Release 1996 version
SMG#27				6.0.0	Release 1997 version

History

Document history						
Edition 1	November 1996	Public Enquiry	PE 118:	1996-11-18 to 1997-03-14		
Edition 1	December 1997	Vote	V 9805:	1997-12-02 to 1998-01-30		
Edition 1	February 1998	Publication as ETS 300 725				
V6.0.0	April 1999	One-step Approval Procedure	OAP 9935:	1999-04-30 to 1999-08-27		
V6.0.1	September 1999	Publication				

ISBN 2-7437-3397-7

Dépôt légal : Septembre 1999