
ETSITS 125 433 V5.1.0 (2002-06)

Technical Specification

Universal Mobile Telecommunications System (UMTS); UTRAN lub interface NBAP signalling (3GPP TS 25.433 version 5.1.0 Release 5)

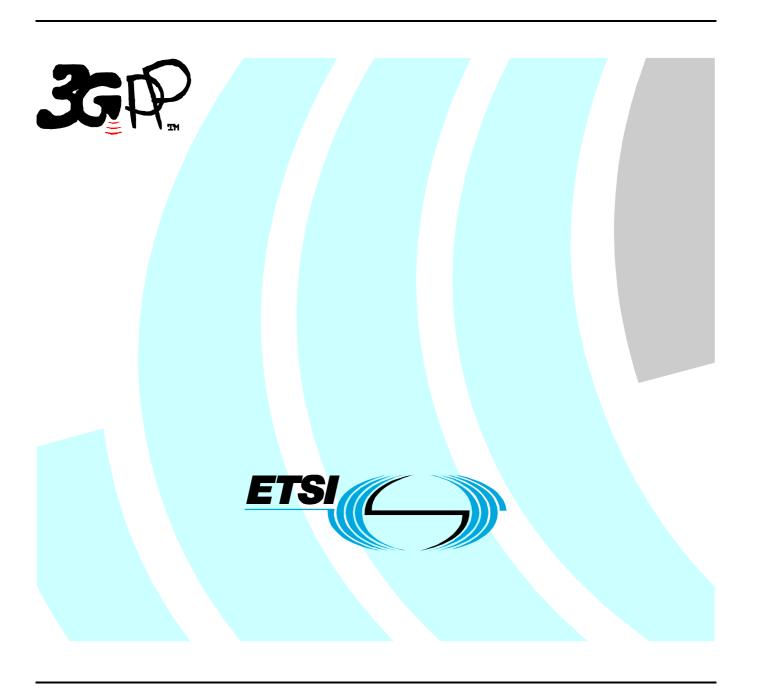

Reference
RTS/TSGR-0325433v510

Keywords
UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, send your comment to: editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2002. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key.

Contents

Intellectual Property Rights		2
Forev	word	2
Forev	word	16
1	Scope	17
2	References	17
3	Definitions, Symbols and Abbreviations	18
3.1	Definitions	
3.2	Symbols	
3.3	Abbreviations	19
4	General	20
4.1	Procedure Specification Principles	20
4.2	Forwards and Backwards Compatibility	21
4.3	Specification Notations	21
5	NBAP Services	22
5.1	Parallel Transactions	
6	Services Expected from Signalling Transport	22
7	Functions of NBAP	
8 8.1	NBAP Procedures	
8.2	Elementary Procedures	
8.2.1	Common Transport Channel Setup	
8.2.1.		
8.2.1.2		
8.2.1.3	•	
8.2.1.4		
8.2.2	Common Transport Channel Reconfiguration	
8.2.2.		
8.2.2.2		
8.2.2.3	1	
8.2.2.4 8.2.3	4 Abnormal Conditions	
8.2.3.	<u>*</u>	
8.2.3.2		
8.2.3.3	•	
8.2.3.4		
8.2.4	Block Resource	35
8.2.4.		
8.2.4.2	1	
8.2.4.3		
8.2.4.4 8.2.5	4 Abnormal Conditions	
8.2.5.		
8.2.5.		
8.2.5.3	1	
8.2.6		
8.2.6.	•	
8.2.6.2	1	
8.2.6.3		
8.2.7	Audit	
8.2.7.2 8.2.7.2		
0.4.7.	2 Successful Operation	

8.2.7.3	Unsuccessful Operation	
8.2.7.4	Abnormal Conditions	
8.2.8	Common Measurement Initiation	39
8.2.8.1	General	39
8.2.8.2	Successful Operation	39
8.2.8.3	Unsuccessful Operation	44
8.2.8.4	Abnormal Conditions	44
8.2.9	Common Measurement Reporting	45
8.2.9.1	General	
8.2.9.2	Successful Operation	45
8.2.9.3	Abnormal Conditions	
8.2.10	Common Measurement Termination	
8.2.10.1	General	46
8.2.10.2	Successful Operation	46
8.2.10.3	Abnormal Conditions	
8.2.11	Common Measurement Failure	46
8.2.11.1	General	46
8.2.11.2	Successful Operation	
8.2.11.3	Abnormal Conditions	46
8.2.12	Cell Setup	
8.2.12.1	General	
8.2.12.2	Successful Operation	
8.2.12.3	Unsuccessful Operation	
8.2.12.4	Abnormal Conditions	
8.2.13	Cell Reconfiguration	
8.2.13.1	General	
8.2.13.2	Successful Operation	
8.2.13.3	Unsuccessful Operation	
8.2.13.4	Abnormal Conditions	
8.2.14	Cell Deletion	
8.2.14.1	General	
8.2.14.2	Successful Operation	
8.2.14.3	Unsuccessful Operation	
8.2.14.4	Abnormal Conditions	
8.2.15	Resource Status Indication	
8.2.15.1	General	
8.2.15.2	Successful Operation	
8.2.15.3	Abnormal Conditions	
8.2.16	System Information Update	
8.2.16.1	General	
8.2.16.2	Successful Operation	
8.2.16.3	Unsuccessful Operation	
8.2.16.4	Abnormal Conditions	
8.2.17	Radio Link Setup	
8.2.17.1	General	
8.2.17.2	Successful Operation.	
8.2.17.3 8.2.17.4	Unsuccessful Operation	
8.2.17.4	Abnormal Conditions	
8.2.18.1	General	
8.2.18.2		
	Successful Operation	
8.2.18.3 8.2.18.4	Unsuccessful Operation	
8.2.18.4 8.2.19	Reset	
8.2.19 8.2.19.1	General	
8.2.19.1	Successful Operation.	
8.2.19.2 8.2.19.2.1	Reset Initiated by the CRNC	
8.2.19.2.1	Reset Initiated by the CRNC Reset Initiated by the Node B	
8.2.19.2.2	Unsuccessful Operation	
8.2.19.4	Abnormal Conditions	
8.2.20	Cell Synchronisation Initiation [TDD]	
8.2.20 8.2.20 1	General	68

0 2 20 2		-0
8.2.20.2	Successful Operation	
8.2.20.3	Unsuccessful Operation	
8.2.20.4	Abnormal Conditions	
8.2.21	Cell Synchronisation Reconfiguration [TDD]	
8.2.21.1	General	70
8.2.21.2	Successful Operation	70
8.2.21.2.1	General	70
8.2.21.2.2	Cell Sync Burst Schedule	71
8.2.21.2.3	·	
8.2.21.2.4		,
0.2.21.2.	SYNC_DL Code Transmission Reconfiguration]	72
8 2 21 2 5	[3.84Mcps TDD - Cell Sync Burst Measurement Reconfiguration] [1.28Mcps TDD – SYNC_DL Code	/ 2
0.2.21.2.3	Measurement Reconfiguration]	72
0 2 21 2	Unsuccessful Operation	
8.2.21.3	•	
8.2.21.4	Abnormal Conditions	
8.2.22	Cell Synchronisation Reporting [TDD]	
8.2.22.1	General	
8.2.22.2	Successful Operation	
8.2.22.3	Abnormal Conditions	
8.2.23	Cell Synchronisation Termination [TDD]	
8.2.23.1	General	74
8.2.23.2	Successful Operation	75
8.2.23.3	Abnormal Conditions	75
8.2.24	Cell Synchronisation Failure [TDD]	75
8.2.24.1	General	
8.2.24.2	Successful Operation	
8.2.24.3	Abnormal Conditions	
8.2.25	Cell Synchronisation Adjustment [TDD]	
8.2.25.1	General	
8.2.25.1		
	Successful Operation	
8.2.25.3	Unsuccessful Operation	
8.2.25.4	Abnormal Conditions	
8.2.26	Information Exchange Initiation	
8.2.26.1	General	
8.2.26.2	Successful Operation	
8.2.26.3	Unsuccessful Operation	
8.2.26.4	Abnormal Conditions	78
8.2.27	Information Reporting	79
8.2.27.1	General	79
8.2.27.2	Successful Operation	79
8.2.27.3	Abnormal Conditions	79
8.2.28	Information Exchange Termination	
8.2.28.1	General	
8.2.28.2	Successful Operation	
8.2.28.3	Abnormal Conditions	
8.2.29	Information Exchange Failure	
8.2.29.1	General	
8.2.29.1	Successful Operation	
	•	
8.3	NBAP Dedicated Procedures	
8.3.1	Radio Link Addition	
8.3.1.1	General	
8.3.1.2	Successful Operation	
8.3.1.3	Unsuccessful Operation	
8.3.1.4	Abnormal conditions	
8.3.2	Synchronised Radio Link Reconfiguration Preparation.	
8.3.2.1	General	
8.3.2.2	Successful Operation	85
8.3.2.3	Unsuccessful Operation	92
8.3.2.4	Abnormal Conditions	
8.3.3	Synchronised Radio Link Reconfiguration Commit	
8.3.3.1	General	
8332	Successful Operation	93

8.3.3.3	Abnormal Conditions	
8.3.4	Synchronised Radio Link Reconfiguration Cancellation	
8.3.4.1	General	
8.3.4.2	Successful Operation	
8.3.4.3	Abnormal Conditions	
8.3.5	Unsynchronised Radio Link Reconfiguration	
8.3.5.1	General	
8.3.5.2	Successful Operation	
8.3.5.3	Unsuccessful Operation	
8.3.5.4	Abnormal Conditions	
8.3.6	Radio Link Deletion	
8.3.6.1	General	
8.3.6.2	Successful Operation	
8.3.6.3	Unsuccessful Operation	
8.3.6.4	Abnormal Conditions	
8.3.7	Downlink Power Control [FDD]	
8.3.7.1 8.3.7.2	General	
8.3.7.3	Abnormal Conditions	
8.3.8	Dedicated Measurement Initiation	
8.3.8.1	General	
8.3.8.2	Successful Operation	
8.3.8.3	Unsuccessful Operation	
8.3.8.4	Abnormal Conditions	
8.3.9	Dedicated Measurement Reporting	
8.3.9.1	General	
8.3.9.2	Successful Operation	
8.3.9.3	Abnormal Conditions	
8.3.10	Dedicated Measurement Termination	106
8.3.10.1	General	106
8.3.10.2	Successful Operation	
8.3.10.3	Abnormal Conditions	
8.3.11	Dedicated Measurement Failure	
8.3.11.1	General	
8.3.11.2	Successful Operation	
8.3.11.3	Abnormal Conditions	
8.3.12 8.3.12.1	Radio Link Failure	
8.3.12.1	General	
8.3.12.2	Abnormal Conditions	
8.3.13	Radio Link Restoration	
8.3.13.1	General	
8.3.13.2	Successful Operation	
8.3.13.3	Abnormal Condition.	
8.3.14	Compressed Mode Command [FDD]	
8.3.14.1	General	
8.3.14.2	Successful Operation	
8.3.14.3	Abnormal Conditions	
8.3.15	Downlink Power Timeslot Control [TDD]	110
8.3.15.1	General	110
8.3.15.2	Successful Operation	110
8.3.15.3	Abnormal Conditions	
8.3.16	Radio Link Pre-emption	
8.3.16.1	General	
8.3.16.2	Successful Operation	
8.3.16.3	Abnormal Conditions	
8.3.17	Bearer Re-arrangement	
8.3.17.1	General Suggestful Operation	
8.3.17.2 8.3.17.3	Successful Operation	
8.3.18	Radio Link Activation	
8.3.18.1	General	

8.3.18.2	~ · · · · · · · · · · · · · · · · · · ·	112
8.3.18.3	Abnormal Conditions	113
8.4	Error Handling Procedures	113
8.4.1	Error Indication	
8.4.1.1	General	
8.4.1.2	Successful Operation	
8.4.1.3	Abnormal Conditions	114
9 E	Elements for NBAP communication	115
9.1	Message Functional Definition and Contents.	
9.1.1	General	
9.1.2	Message Contents	
9.1.2.1	Presence	
9.1.2.2	Criticality	
9.1.2.3	Range	
9.1.2.4	Assigned Criticality	
9.1.3	COMMON TRANSPORT CHANNEL SETUP REQUEST	116
9.1.3.1	FDD Message	
9.1.3.2	TDD Message	
9.1.4	COMMON TRANSPORT CHANNEL SETUP RESPONSE	125
9.1.5	COMMON TRANSPORT CHANNEL SETUP FAILURE	125
9.1.6	COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST	126
9.1.6.1	FDD Message	126
9.1.6.2	TDD Message	
9.1.7	COMMON TRANSPORT CHANNEL RECONFIGURATION RESPONSE	
9.1.8	COMMON TRANSPORT CHANNEL RECONFIGURATION FAILURE	
9.1.9	COMMON TRANSPORT CHANNEL DELETION REQUEST	
9.1.10	COMMON TRANSPORT CHANNEL DELETION RESPONSE	
9.1.11	BLOCK RESOURCE REQUEST	
9.1.12	BLOCK RESOURCE RESPONSE	
9.1.13	BLOCK RESOURCE FAILURE	
9.1.14	UNBLOCK RESOURCE INDICATION	
9.1.15	AUDIT REQUIRED INDICATION	
9.1.16	AUDIT REQUEST	
9.1.17	AUDIT RESPONSE	
9.1.17A		
9.1.18	COMMON MEASUREMENT INITIATION REQUEST	
9.1.19	COMMON MEASUREMENT INITIATION RESPONSE	
9.1.20	COMMON MEASUREMENT INITIATION FAILURE	
9.1.21	COMMON MEASUREMENT REPORT	
9.1.22	COMMON MEASUREMENT TERMINATION REQUEST	
9.1.23	COMMON MEASUREMENT FAILURE INDICATION	
9.1.24	CELL SETUP REQUEST	
9.1.24.1 9.1.24.2	\mathcal{E}	
9.1.24.2 9.1.25	TDD Message CELL SETUP RESPONSE	
9.1.25	CELL SETUP FAILURE	
9.1.20	CELL RECONFIGURATION REQUEST	
9.1.27		
9.1.27.1	\mathcal{C}	
9.1.27.2	CELL RECONFIGURATION RESPONSE	
9.1.29	CELL RECONFIGURATION RESIGNSE	
9.1.29	CELL DELETION REQUEST	
9.1.31	CELL DELETION RESPONSE	
9.1.32	RESOURCE STATUS INDICATION	
9.1.32	SYSTEM INFORMATION UPDATE REQUEST	
9.1.34	SYSTEM INFORMATION OF DATE RESPONSE	
9.1.35	SYSTEM INFORMATION UPDATE FAILURE	
9.1.36	RADIO LINK SETUP REQUEST	
9.1.36.1		
9.1.36.2		
9.1.37	RADIO LINK SETUP RESPONSE	

9.1.37.1	FDD message	
9.1.37.2	TDD Message	
9.1.38	RADIO LINK SETUP FAILURE	
9.1.38.1	FDD Message	
9.1.38.2	TDD Message	
9.1.39	RADIO LINK ADDITION REQUEST	
9.1.39.1	FDD Message	
9.1.39.2	TDD Message	
9.1.40 9.1.40.1	RADIO LINK ADDITION RESPONSE	
9.1.40.1	TDD Message	
9.1.40.2	RADIO LINK ADDITION FAILURE	
9.1.41.1	FDD Message	
9.1.41.2	TDD Message	
9.1.42	RADIO LINK RECONFIGURATION PREPARE	
9.1.42.1	FDD Message	
9.1.42.2	TDD Message	
9.1.43	RADIO LINK RECONFIGURATION READY	
9.1.44	RADIO LINK RECONFIGURATION FAILURE	179
9.1.45	RADIO LINK RECONFIGURATION COMMIT	179
9.1.46	RADIO LINK RECONFIGURATION CANCEL	179
9.1.47	RADIO LINK RECONFIGURATION REQUEST	
9.1.47.1	FDD Message	
9.1.47.2	TDD Message	
9.1.48	RADIO LINK RECONFIGURATION RESPONSE	
9.1.49	RADIO LINK DELETION REQUEST	
9.1.50	RADIO LINK DELETION RESPONSE	
9.1.51	DL POWER CONTROL REQUEST [FDD]	
9.1.52	DEDICATED MEASUREMENT INITIATION REQUEST	
9.1.53	DEDICATED MEASUREMENT INITIATION RESPONSE DEDICATED MEASUREMENT INITIATION FAILURE	
9.1.54 9.1.55	DEDICATED MEASUREMENT INITIATION FAILURE DEDICATED MEASUREMENT REPORT	
9.1.55 9.1.56	DEDICATED MEASUREMENT REPORT DEDICATED MEASUREMENT TERMINATION REQUEST	
9.1.57	DEDICATED MEASUREMENT FAILURE INDICATION	
9.1.58	RADIO LINK FAILURE INDICATION	
9.1.59	RADIO LINK RESTORE INDICATION	
9.1.60	COMPRESSED MODE COMMAND [FDD]	
9.1.61	ERROR INDICATION.	
9.1.62	PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST	
9.1.63	PHYSICAL SHARED CHANNEL RECONFIGURATION RESPONSE	
9.1.64	PHYSICAL SHARED CHANNEL RECONFIGURATION FAILURE	196
9.1.65	RESET REQUEST	
9.1.66	RESET RESPONSE	197
9.1.67	DL POWER TIMESLOT CONTROL REQUEST [TDD]	
9.1.68	RADIO LINK PREEMPTION REQUIRED INDICATION	
9.1.69	INFORMATION EXCHANGE INITIATION REQUEST	198
9.1.70	INFORMATION EXCHANGE INITIATION RESPONSE	
9.1.71	INFORMATION EXCHANGE INITIATION FAILURE	
9.1.72	INFORMATION REPORT	199
9.1.73	INFORMATION EXCHANGE FAMILIES INFORMATION	
9.1.74 9.1.75	INFORMATION EXCHANGE FAILURE INDICATIONCELL SYNCHRONISATION INITIATION REQUEST [TDD]	
9.1.73 9.1.76	CELL SYNCHRONISATION INITIATION RESPONSE [TDD]	
9.1.70 9.1.77	CELL SYNCHRONISATION INITIATION RESPONSE [1DD]	
9.1.77	CELL SYNCHRONISATION INITIATION FAILURE [TDD]	
9.1.79	CELL SYNCHRONISATION RECONFIGURATION RESPONSE [TDD]	
9.1.80	CELL SYNCHRONISATION RECONFIGURATION FAILURE [TDD]	
9.1.81	CELL SYNCHRONISATION REPORT [TDD]	
9.1.82	CELL SYNCHRONISATION TERMINATION REQUEST [TDD]	
9.1.83	CELL SYNCHRONISATION FAILURE INDICATION [TDD]	
9.1.84	CELL SYNCHRONISATION ADJUSTMENT REQUEST [TDD]	205
9.1.85	CELL SYNCHRONISATION ADJUSTMENT RESPONSE [TDD]	

9.1.86	CELL SYNCHRONISATION ADJUSTMENT FAILURE [TDD]	206
9.1.87	BEARER REARRANGEMENT INDICATION	207
9.1.88	RADIO LINK ACTIVATION COMMAND	207
9.1.88.1	FDD Message	207
9.1.88.2	TDD Message	208
9.2	Information Element Functional Definition and Contents	208
9.2.0	General	208
9.2.1	Common parameters	208
9.2.1.1	Add/Delete Indicator	208
9.2.1.1A	Allocation/Retention Priority	208
9.2.1.2	Availability Status	
9.2.1.3	BCCH Modification Time	
9.2.1.4	Binding ID	
9.2.1.4A	BLER	
9.2.1.5	Blocking Priority Indicator	
9.2.1.5A	Burst Mode Parameters	
9.2.1.6	Cause	
9.2.1.7	CFN	
9.2.1.8	CFN Offset	
9.2.1.9	C-ID	
9.2.1.9A	Common Channels Capacity Consumption Law	
9.2.1.9B	Common Measurement Accuracy	
9.2.1.10	Common Measurement Object Type	
9.2.1.11	Common Measurement Type	
9.2.1.12	Common Measurement Value	
9.2.1.12A		
9.2.1.13 9.2.1.13A	Common Physical Channel ID Common Physical Channel Status Information	
9.2.1.13A 9.2.1.14	Common Transport Channel ID	
9.2.1.14 9.2.1.14A		
9.2.1.14B	•	
9.2.1.15	Communication Control Port ID.	
9.2.1.16	Configuration Generation ID	
9.2.1.17	Criticality Diagnostics	
9.2.1.18	CRNC Communication Context ID	
9.2.1.18A	CTFC	221
9.2.1.19	DCH Combination Indicator	
9.2.1.20	DCH ID	
9.2.1.20A	Dedicated Channels Capacity Consumption Law	
9.2.1.20B	DL or Global Capacity Credit	
9.2.1.20C	1	
9.2.1.21	DL Power	
9.2.1.22	Dedicated Measurement Object Type	
9.2.1.23	Dedicated Measurement Type	
9.2.1.24	Dedicated Measurement Value	
9.2.1.24A		
9.2.1.24B	DGPS Corrections	
9.2.1.24C	Delayed Activation.	
9.2.1.24D	7	
9.2.1.25 9.2.1.26	Diversity Indication	
9.2.1.26 9.2.1.26A	Diversity Indication DL DPCH Timing Adjustment	
9.2.1.20A 9.2.1.27	DSCH ID	
9.2.1.27 9.2.1.27A		
9.2.1.27	DSCH Transport Format Set	
9.2.1.29	DSCH Transport Format Combination Set	
9.2.1.29A	<u>*</u>	
9.2.1.29B	FN Reporting Indicator	
9.2.1.30	Frame Handling Priority	
9.2.1.31	Frame Offset	
9.2.1.31A	IB_OC_ID	229
9 2 1 31R	GPS Navigation Model & Time Recovery	220

9.2.1.31C	GPS Ionospheric Model	
9.2.1.31D	GPS UTC Model	
9.2.1.31E	GPS Real-Time Integrity	
9.2.1.31F	GPS Almanac	
9.2.1.31G	GPS Receiver Geographical Position (GPS RX Pos)	232
9.2.1.31H	HS-DSCH To Modify	
9.2.1.31Ha	HS-DSCH Initial Capacity Allocation	
9.2.1.31Hb	HS-DSCH Initial Window Size	
9.2.1.31I	HS-DSCH MAC-d Flow ID	234
9.2.1.31J	HS-DSCH RNTI	
9.2.1.32	IB_SG_DATA	
9.2.1.33	IB_SG_POS	
9.2.1.34	IB_SG_REP	
9.2.1.35	IB Type	
9.2.1.36	Indication Type	
9.2.1.36A	Information Exchange Object Type	
9.2.1.36B	Information Report Characteristics	
9.2.1.36C	Information Exchange ID	
9.2.1.36D	Information Type	
9.2.1.36E	Information Threshold	
9.2.1.36F	IPDL Indicator	
9.2.1.37	Limited Power Increase	
9.2.1.37A	Local Cell Group ID	
9.2.1.38	Local Cell ID	
9.2.1.38A	MAC-d PDU Size	
9.2.1.39	Maximum DL Power Capability	
9.2.1.40	Maximum Transmission Power	
9.2.1.40A	Measurement Availability Indicator	238
9.2.1.40B	Measurement Change Time	238
9.2.1.41	Measurement Filter Coefficient	
9.2.1.41A	Measurement Hysteresis Time	
9.2.1.42	Measurement ID	
9.2.1.43	Measurement Increase/Decrease Threshold	239
9.2.1.44	Measurement Threshold	
9.2.1.45	Message Discriminator	
9.2.1.45A	Message Structure	
9.2.1.46	Message Type	
9.2.1.46A	Minimum DL Power Capability	
9.2.1.47	Minimum Spreading Factor	
9.2.1.47A	N_INSYNC_IND	244
9.2.1.47B	N_OUTSYNC_IND	
9.2.1.47C	Neighbouring FDD Cell Measurement Information	
9.2.1.47D	Neighbouring TDD Cell Measurement Information	
9.2.1.47E	Neighbouring TDD Cell Measurement Information LCR	
9.2.1.48	Node B Communication Context ID	
9.2.1.49	Payload CRC Presence Indicator	
9.2.1.49A	PICH Power	
9.2.1.49B	Power Local Cell Group ID	
9.2.1.49C	Priority Queue ID	
9.2.1.50	Puncture Limit	
9.2.1.50A	QE-Selector	
9.2.1.51	Report Characteristics	
9.2.1.51a	Report Periodicity	
9.2.1.51A	Requested Data Value	
9.2.1.51B	Requested Data Value Information	
9.2.1.52	Resource Operational State	
9.2.1.52A	Retention Priority	
9.2.1.53	RL ID	
9.2.1.53a	RNC-Id	
9.2.1.53A	SFN	
9.2.1.53B	Segment Type	
9.2.1.53C	SFN-SFN Measurement Threshold Information	250

9.2.1.53D	SFN-SFN Measurement Time Stamp	250
9.2.1.53E	SFN-SFN Measurement Value Information	250
9.2.1.53F	SFN-SFN Value	251
9.2.1.53G	RL Specific DCH Information	252
9.2.1.53H	Scheduling Priority Indicator	252
9.2.1.53I	SID	252
9.2.1.54	SIB Deletion Indicator	
9.2.1.55	SIB Originator	
9.2.1.55A	Signalling Bearer Request Indicator	253
9.2.1.56	Shutdown Timer	253
9.2.1.56A	T_RLFAILURE	
9.2.1.56B	Start Of Audit Sequence Indicator	
9.2.1.56C	TFCI2 Bearer Request Indicator	
9.2.1.57	TFCI Presence	
9.2.1.58	TFCS (Transport Format Combination Set)	
9.2.1.59	Transport Format Set	
9.2.1.60	ToAWE	
9.2.1.61	ToAWS	
9.2.1.62	Transaction ID	
9.2.1.62A	Transport Bearer Request Indicator	
9.2.1.63	Transport Layer Address	
9.2.1.64	TSTD Indicator	
9.2.1.64A	T _{UTRAN-GPS} Measurement Value Information	
9.2.1.64B	T _{UTRAN-GPS} Measurement Threshold Information	
9.2.1.64C	T _{UTRAN-GPS} Accuracy Class	
9.2.1.65	UARFCN	
9.2.1.65A 9.2.1.65B	UL Capacity Credit	
9.2.1.65B 9.2.1.66	UL FP Mode	
9.2.1.67	UL interference level	
9.2.1.67A	UL SIR	
9.2.2	FDD specific parameters	
9.2.2.A	Active Pattern Sequence Information	
9.2.2.B	Adjustment Period	
9.2.2.C	Adjustment Ratio	
9.2.2.D	AICH Power	262
9.2.2.1	AICH Transmission Timing	262
9.2.2.1A	AP Preamble Signature	262
9.2.2.1B	AP Sub Channel Number	262
9.2.2.1C	CD Sub Channel Numbers	263
9.2.2.1D	Channel Assignment Indication	263
9.2.2.2	Chip Offset	
9.2.2.2A	Closed Loop Timing Adjustment Mode	
9.2.2.3	Common Channels Capacity Consumption Law	
9.2.2.3A	Compressed Mode Deactivation Flag	
9.2.2.4	Compressed Mode Method	
9.2.2.4A	CPCH Allowed Total Rate	
9.2.2.4B	CPCH Scrambling Code Number	
9.2.2.4C	CPCH UL DPCCH Slot Format	
9.2.2.4D	DCH FDD Information	
9.2.2.4E	DCHs FDD To Modify	
9.2.2.5	D-Field Length	
9.2.2.6	Dedicated Channels Capacity Consumption Law	
9.2.2.7	Diversity Indication	
9.2.2.8	Diversity Indication	
9.2.2.9	Diversity mode	
9.2.2.10	DL DPCH Timing Adjustment	
9.2.2.10A	DL DPCH Timing Adjustment	
9.2.2.11 9.2.2.12	DL frame type DL or Global Capacity Credit	
9.2.2.12 9.2.2.12A	DL_power_averaging_window_size	
9.2.2.12A 9.2.2.12B	DL_power_averaging_willow_size DL_power_Ralancing_Information	207 267

9.2.2.12C	DL Power Balancing Activation Indicator	267
9.2.2.12D	DL Power Balancing Updated Indicator	
9.2.2.13	DL Scrambling Code	268
9.2.2.13A	DL TPC Pattern 01 Count	268
9.2.2.13B	DSCH FDD Information	268
9.2.2.13C	DPC Mode	
9.2.2.13D	DSCH FDD Common Information	269
9.2.2.13E	Enhanced DSCH PC	269
9.2.2.13F	Enhanced DSCH PC Counter	269
9.2.2.13G	Enhanced DSCH PC Indicator	269
9.2.2.13H	Enhanced DSCH PC Wnd	
9.2.2.13I	Enhanced DSCH Power Offset	
9.2.2.14	FDD DL Channelisation Code Number	270
9.2.2.14A	FDD DL Code Information	270
9.2.2.15	FDD SCCPCH Offset	271
9.2.2.16	FDD TPC DL Step Size	271
9.2.2.16A	First RLS Indicator	271
9.2.2.17	Gap Period	271
9.2.2.18	Gap Position Mode	271
9.2.2.18A	Limited Power Increase	271
9.2.2.18B	Inner Loop DL PC Status	272
9.2.2.18C	IPDL FDD Parameters	272
9.2.2.18D	HS-DSCH FDD Information	272
9.2.2.18E	HS-DSCH FDD Information Response	273
9.2.2.18F	HS-PDSCH FDD Code Information	274
9.2.2.18G	HS-SCCH FDD Code Information	274
9.2.2.18H	HS-SCCH ID	275
9.2.2.19	Max Adjustment Period	275
9.2.2.20	Max Adjustment Step	275
9.2.2.20A	Max Number Of PCPCHs	275
9.2.2.21	Maximum Number Of UL DPDCHs	275
9.2.2.21A	Maximum PDSCH Power	275
9.2.2.21B	Measurement Feedback Reporting Cycle	
9.2.2.22	Minimum UL Channelisation Code Length	
9.2.2.23	Multiplexing Position	276
9.2.2.23A	N_EOT	276
9.2.2.23B	NF_max	
9.2.2.23C	N_Start_Message	
9.2.2.24	Pattern Duration (PD)	277
9.2.2.24A	PCP Length	
9.2.2.25	PDSCH Code Mapping	277
9.2.2.26	PICH Mode	
9.2.2.27	Power Adjustment Type	
9.2.2.28	Power Control Mode	280
9.2.2.29	Power Offset	280
9.2.2.29A	Power_Raise_Limit	280
9.2.2.30	Power Resume Mode	
9.2.2.31	Preamble Signature	281
9.2.2.32	Preamble Threshold	
9.2.2.33	Primary CPICH Power	281
9.2.2.34	Primary Scrambling Code	281
9.2.2.35	Propagation Delay	
9.2.2.36	QE-Selector	282
9.2.2.36A	Qth Parameter	
9.2.2.37	RACH Slot Format	
9.2.2.38	RACH Sub Channel Numbers	
9.2.2.39	RL Set ID	
9.2.2.39A	Received Total Wide Band Power	
9.2.2.40	S-Field Length	
9.2.2.41	Scrambling Code Change	
9.2.2.42	Scrambling Code Number	
9.2.2.43	Secondary CCPCH Slot Format	283

9.2.2.44	SSDT Cell Identity	
9.2.2.44A	SSDT Cell Identity For EDSCHPC	
9.2.2.45	SSDT Cell ID Length	283
9.2.2.46	SSDT Support Indicator	284
9.2.2.47	SSDT Indication	284
9.2.2.48	STTD Indicator	284
9.2.2.49	T Cell	284
9.2.2.49A	TFCI2 Bearer Information Response	284
9.2.2.50	TFCI Signalling Mode	285
9.2.2.51	TGD	285
9.2.2.52	TGL	285
9.2.2.53	Transmit Diversity Indicator	
9.2.2.53A	Transmission Gap Pattern Sequence Information	286
9.2.2.53B	Transmission Gap Pattern Sequence Code Information	288
9.2.2.54	UL/DL compressed mode selection	288
9.2.2.55	UL delta SIR	289
9.2.2.56	UL delta SIR after	289
9.2.2.57	UL DPCCH Slot Format	289
9.2.2.58	UL SIR	289
9.2.2.59	UL Scrambling Code	289
9.2.2.60	UL Capacity Credit	289
9.2.3	TDD specific Parameters	289
9.2.3.1	Block STTD Indicator	289
9.2.3.2	Burst Type	289
9.2.3.3	CCTrCH ID	290
9.2.3.4	Cell Parameter ID	290
9.2.3.4A	Constant Value	290
9.2.3.4B	DL Timeslot ISCP	290
9.2.3.4C	DCH TDD Information	290
9.2.3.4D	DCHs TDD To Modify	291
9.2.3.4E	DL Timeslot Information	292
9.2.3.4F	DL Time Slot ISCP Info	292
9.2.3.4G	Cell Sync Burst Code	292
9.2.3.4H	Cell Sync Burst Code Shift	
9.2.3.4I	CSB Measurement ID	293
9.2.3.4J	Cell Sync Burst Repetition Period	
9.2.3.4K	Cell Sync Burst SIR	293
9.2.3.4L	Cell Sync Burst Timing	293
9.2.3.4M	Cell Sync Burst Timing Threshold	
9.2.3.4N	CSB Transmission ID	294
9.2.3.40	DL Timeslot Information LCR	
9.2.3.4P	DL Time Slot ISCP Info LCR	294
9.2.3.5	DPCH ID	
9.2.3.5A	DSCH TDD Information	295
9.2.3.5B	DwPCH Power	
9.2.3.5C	Frame Adjustment Value	
9.2.3.5D	IPDL TDD Parameter	295
9.2.3.5E	Max FPACH Power	
9.2.3.5F	HS-DSCH TDD Information	
9.2.3.5G	HS-DSCH TDD Information Response	297
9.2.3.5Ga	HS-SCCH ID	
9.2.3.5H	IPDL TDD Parameters LCR	
9.2.3.6	Max PRACH Midamble Shift	
9.2.3.7	Midamble Shift And Burst Type	
9.2.3.7A	Midamble Shift LCR	
9.2.3.7B	Number Of Cycles Per SFN Period	
9.2.3.7C	Number Of Repetitions Per Cycle Period	
9.2.3.7D	Number Of Subcycles Per Cycle Period	
9.2.3.8	Paging Indicator Length	
9.2.3.9	PCCPCH Power	
9.2.3.10	PDSCH ID	
9.2.3.11	PDSCH Set ID	301

9.2.3.11A	Primary CCPCH RSCP	302
9.2.3.12	PUSCH ID	
9.2.3.13	PUSCH Set ID	
9.2.3.14	PRACH Midamble	302
9.2.3.14A	Reference Clock Availability	
9.2.3.14B	Reference SFN Offset	
9.2.3.15	Repetition Length	
9.2.3.16	Repetition Period	
9.2.3.17	SCH Time Slot	
9.2.3.18	Sync Case	
9.2.3.18A	Special Burst Scheduling	
9.2.3.18B	SYNC_DL Code ID	
9.2.3.18C	Sync Frame Number	
9.2.3.18D	Synchronisation Report Characteristics	
9.2.3.18E	Synchronisation Report Type	
9.2.3.19	TDD Channelisation Code	
9.2.3.19a	TDD Channelisation Code LCR	
9.2.3.19a 9.2.3.19A	TDD Chainlensation Code ECK TDD DPCH Offset	
9.2.3.19B	TDD DL Code Information	
9.2.3.19B 9.2.3.19C	TDD DL Code Information LCR	
9.2.3.20	TDD Physical Channel Offset	
9.2.3.21	TDD TPC DL Step Size	
9.2.3.21A		
9.2.3.21B	TDD UL Code Information LCR	
9.2.3.22	TFCI Coding	
9.2.3.22a	Timing Adjustment Value	
9.2.3.22A	Timing Advance Applied	
9.2.3.23	Time Slot	
9.2.3.24	Time Slot Direction	
9.2.3.24A	Time Slot LCR	
9.2.3.25	Time Slot Status	
9.2.3.26	Transmission Diversity Applied	
9.2.3.26A	UL Timeslot ISCP	
9.2.3.26B	UL PhysCH SF Variation	
9.2.3.26C	UL Timeslot Information	310
9.2.3.26D	UL Time Slot ISCP Info	
9.2.3.26E	UL Timeslot Information LCR	
9.2.3.26F	UL Time Slot ISCP Info LCR	311
9.2.3.27	USCH ID	311
9.2.3.28	USCH Information	311
9.2.3.29	USCH Information Response	312
9.2.3.30	SCTD Indicator	
9.3	Message and Information Element Abstract Syntax (with ASN.1)	313
9.3.0	General	313
9.3.1	Usage of Private Message mechanism for non-standard use	313
9.3.2	Elementary Procedure Definitions	
9.3.3	PDU Definitions	
9.3.4	Information Elements Definitions.	
9.3.5	Common Definitions.	
9.3.6	Constant Definitions	
9.3.7	Container Definitions	
9.4	Message Transfer Syntax	
9.5	Timers	
	ndling of Unknown, Unforeseen and Erroneous Protocol Data	591
10.1	General	591
10.2	Transfer Syntax Error	592
10.3	Abstract Syntax Error	592
10.3.1	General	592
10.3.2	Criticality Information	
10.3.3	Presence Information	
10.3.4	Not comprehended IE/IE group	593

10.3.4	1 Procedure ID	593
10.3.4	-1A Type of Message	594
10.3.4	IEs Other Than the Procedure ID and Type of Message	594
10.3.5		
10.3.6	IEs or IE Groups Received in Wrong Order or With Too Many Occurrences or Erroneously Present	596
10.4	Logical Error	596
10.5	Exceptions	597
Anne	ex A (normative): Allocation and Pre-emption of Radio Links in the Node B	598
A.1	Deriving Allocation Information for a Radio Link	
A.1.1	Establishment of a New Radio Link	
A.1.2	Modification of an Existing Radio Link	598
A.2	Deriving Retention Information for a Radio Link	599
A.3	The Allocation/Retention Process	600
A.4	The Pre-emption Process	600
Anne	ex B (informative): Measurement Reporting	601
Anne	ex C (informative): Guidelines for Usage of the Criticality Diagnostics IE	605
C.1	EXAMPLE MESSAGE Layout	
C.2	Example on a Received EXAMPLE MESSAGE	606
C.3	Content of Criticality Diagnostics	607
C.3.1	Example 1	
C.3.2	Example 2	608
C.3.3	Example 3	609
C.3.4	Example 4	610
C.3.5	Example 5	611
C.4	ASN.1 of EXAMPLE MESSAGE	612
Anne	ex D (informative): Change history	614
Histor	ry	618

Foreword

This Technical Specification has been produced by the 3GPP.

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of this TS, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 Indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the radio network layer signalling protocol called Node B Application Part (NBAP) specification to be used for Control Plane over Iub Interface.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 25.401: "UTRAN Overall Description". [2] 3GPP TS 25.426: "UTRAN Iur and Iub Interface Data Transport & Transport Signalling for DCH Data Streams". CCITT Recommendation X.731 (01/92): "Information Technology – Open Systems [3] Interconnection – Systems Management: State Management function". 3GPP TS 25.215: "Physical layer - Measurements (FDD)". [4] 3GPP TS 25.225: "Physical layer – Measurements (TDD)". [5] [6] 3GPP TS 25.430: "UTRAN Iub General Aspect and Principle". 3GPP TS 25.211: "Physical channels and mapping of transport channels onto physical channels [7] (FDD)". 3GPP TS 25.212: "Multiplexing and channel coding (FDD)". [8] 3GPP TS 25.213: "Spreading and modulation (FDD)". [9] [10] 3GPP TS 25.214: "Physical layer procedures (FDD)". ITU-T Recommendation X.691, (12/97) "Information technology - ASN.1 encoding rules -[11] Specification of Packed Encoding Rules (PER)". [12] ITU-T Recommendation X.680, (12/97) "Information Technology - Abstract Syntax Notation One (ASN.1):Specification of basic notation". ITU-T Recommendation X.681, (12/97) "Information Technology - Abstract Syntax Notation One [13] (ASN.1): Information object specification". [14] 3GPP TS 25.104: "UTRA (BS) FDD; Radio Transmission and Reception". 3GPP TS 25.105: "UTRA (BS) TDD; Radio Transmission and Reception". [15] 3GPP TS 25.427: "UTRAN Iur/Iub Interface User Plane Protocol for DCH Data Stream". [16] 3GPP TS 25.402: "Synchronisation in UTRAN Stage2". [17]

3GPP TS 25.331: "RRC Protocol Specification".

[18]

[19]	3GPP TS25.221: "Physical channels and mapping of transport channels onto physical channels[TDD]".
[20]	3GPP TS 25.223: "Spreading and modulation (TDD)".
[21]	3GPP TS 25.224: "Physical Layer Procedures (TDD)".
[22]	3GPP TS 25.133 (V3.3): "Requirements for support of Radio Resource management (FDD)".
[23]	3GPP TS 25.123 (V4.0): "Requirements for support of Radio Resource management (TDD)".
[24]	3GPP TS 25.435: "UTRAN Iub Interface: User Plane Protocols for Common Transport Channel Data Streams".
[25]	3GPP TS 25.302: "Services Provided by the Physical Layer".
[26]	3GPP TR 25.921: "Guidelines and Principles for Protocol Description and Error Handling".
[27	ICD-GPS-200: "Navstar GPS Space Segment/Navigation User Interface".
[28]	RTCM-SC104: "RTCM Recommended Standards for Differential GNSS Service (v.2.2)".
[29]	IETF RFC 2460 "Internet Protocol, Version 6 (IPv6) Specification".
[30]	IETF RFC 768 "User Datagram Protocol", (8/1980)
[31]	3GPP TS 25.434: "UTRAN Iub Interface Data Transport & Transport Signalling for Common Transport Channel Data Streams ".

3 Definitions, Symbols and Abbreviations

3.1 Definitions

For the purposes of the present document, the following terms and definitions apply.

CRNC Communication Context: The CRNC Communication Context contains the necessary information for the CRNC for communication with a specific UE. The CRNC Communication Context is identified by the CRNC Communication Context ID.

Elementary Procedure: The NBAP protocol consists of Elementary Procedures (EPs). An Elementary Procedure is a unit of interaction between the CRNC and the Node B.

An EP consists of an initiating message and possibly a response message.

Two kinds of EPs are used:

- **Class 1**: Elementary Procedures with response (success or failure).
- Class 2: Elementary Procedures without response.

For **Class 1** EPs, the types of responses can be as follows:

Successful

- A signalling message explicitly indicates that the elementary procedure has been successfully completed with the receipt of the response.

Unsuccessful

- A signalling message explicitly indicates that the EP failed.

Class 2 EPs are considered always successful.

Node B Communication Context: The Node B Communication Context contains the necessary information for the Node B for communication with a specific UE. The Node B Communication Context is created by the Radio Link Setup procedure and deleted by the Radio Link Deletion procedure when deleting the last Radio Link within the Node B Communication Context. The Node B Communication Context is identified by the Node B Communication Context ID.

Prepared Reconfiguration: A Prepared Reconfiguration exists when the Synchronised Radio Link Reconfiguration Preparation procedure has been completed successfully. The Prepared Reconfiguration does not exist any more after either of the procedures Synchronised Radio Link Reconfiguration Commit or Synchronised Radio Link Reconfiguration Cancellation has been completed.

3.2 Symbols

Void.

3.3 Abbreviations

For the purposes of the present document, the following abbreviations apply:

A-GPS Assisted GPS

AICH Acquisition Indicator Channel
ALCAP Access Link Control Application Part

AP-AICH Access Preamble Acquisition Indicator Channel

ASN.1 Abstract Syntax Notation One BCCH Broadcast Control Channel

CCPCH Common Control Physical Channel

CFN Connection Frame Number

CM Compressed Mode
CPCH Common Packet Channel
CPICH Common Pilot Channel

CRNC Controlling Radio Network Controller
CSICH CPCH Status Indicator Channel

DCH Dedicated Channel DGPS Differential GPS

DL Downlink

DPCCH Dedicated Physical Control Channel

DPCH Dedicated Physical Channel
DPDCH Dedicated Physical Data Channel
DSCH Downlink Shared Channel
FACH Forward Access Channel
FDD Frequency Division Duplex

FP Frame Protocol

GPS Global Positioning System

HS-DSCH High Speed Downlink Shared Channel

HS-PDSCH High Speed Physical Downlink Shared Channel

HS-SCCH High Speed Shared Control Channel
HS-SICH High Speed Shared Information Channel

IP Internet Protocol

IPDL Idle Periods in the DownLink
ISCP Interference Signal Code Power

L1 Layer 1 L2 Layer 2

MIB Master Information Block
NBAP Node B Application Part
O&M Operation and Maintenance

PCCPCH Primary Common Control Physical Channel

PCH Paging Channel

PCPCH Physical Common Packet Channel PDSCH Physical Downlink Shared Channel PICH Paging Indication Channel
PUSCH Physical Uplink Shared Channel
RACH Random Access Channel

RL Radio Link RLS Radio Link Set

RNC Radio Network Controller RRC Radio Resource Control SB Scheduling Block

SCCPCH Secondary Common Control Physical Channel

SCH Synchronisation Channel
SCTD Space Code Transmit Diversity
SIB System Information Block
SRNC Serving Radio Network Controller
SSDT Site Selection Diversity Transmission
STTD Space Time Transmit Diversity

TDD Time Division Duplex

TFC Transport Format Combination

TFCI Transport Format Combination Indicator
TFCS Transport Format Combination Set

TFS Transport Format Set
TPC Transmit Power Control

TSTD Time Switched Transmit Diversity

UARFCN UTRA Absolute Radio Frequency Channel Number

UDP User Datagram Protocol

UE User Equipment

UL Uplink

UMTS Universal Mobile Telecommunications System

USCH Uplink Shared Channel

UTRA Universal Terrestrial Radio Access

UTRAN Universal Terrestrial Radio Access Network

4 General

4.1 Procedure Specification Principles

The principle for specifying the procedure logic is to specify the functional behaviour of the Node B exactly and completely. The CRNC functional behaviour is left unspecified. The Reset procedure is an exception from this principle.

The following specification principles have been applied for the procedure text in subclause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the
procedure text does not explicitly indicate that an optional IE shall be included in a response message, the
optional IE shall not be included.

4.2 Forwards and Backwards Compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include Id and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification Notations

For the purposes of the present document, the following notations apply:

- [FDD] This tagging of a word indicates that the word preceding the tag "[FDD]" applies only to FDD. This tagging of a heading indicates that the heading preceding the tag "[FDD]" and the section following the heading applies only to FDD.
- [TDD] This tagging of a word indicates that the word preceding the tag "[TDD]" applies only to TDD, including 3.84Mcps TDD and 1.28Mcps TDD. This tagging of a heading indicates that the heading preceding the tag "[TDD]" and the section following the heading applies only to TDD, including 3.84Mcps TDD and 1.28Mcps TDD.
- [3.84Mcps TDD] This tagging of a word indicates that the word preceding the tag "[3.84Mcps TDD]" applies only to 3.84Mcps TDD. This tagging of a heading indicates that the heading preceding the tag "[3.84Mcps TDD]" and the section following the heading applies only to 3.84Mcps TDD.
- [1.28Mcps TDD] This tagging of a word indicates that the word preceding the tag "[1.28Mcps TDD]" applies only to 1.28Mcps TDD. This tagging of a heading indicates that the heading preceding the tag "[1.28Mcps TDD]" and the section following the heading applies only to 1.28Mcps TDD.
- [FDD ...] This tagging indicates that the enclosed text following the "[FDD " applies only to FDD.

 Multiple sequential paragraphs applying only to FDD are enclosed separately to enable insertion of TDD specific (or common) paragraphs between the FDD specific paragraphs.
- [TDD ...] This tagging indicates that the enclosed text following the "[TDD " applies only to TDD, including 3.84Mcps TDD and 1.28Mcps TDD. Multiple sequential paragraphs applying only to TDD are enclosed separately to enable insertion of FDD specific (or common) paragraphs between the TDD specific paragraphs.
- [3.84Mcps TDD ...] This tagging indicates that the enclosed text following the "[3.84Mcps TDD " applies only to 3.84Mcps TDD. Multiple sequential paragraphs applying only to 1.28Mcps TDD are enclosed separately to enable insertion of FDD and TDD specific (or common) paragraphs between the 3.84Mcps TDD specific paragraphs.
- [1.28Mcps TDD ...] This tagging indicates that the enclosed text following the "[1.28Mcps TDD " applies only to 1.28Mcps TDD. Multiple sequential paragraphs applying only to 1.28Mcps TDD are enclosed separately to enable insertion of FDD and TDD specific (or common) paragraphs between the 1.28Mcps TDD specific paragraphs.
- Procedure When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Radio Link Setup procedure.
- Message When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. RADIO LINK SETUP REQUEST message.
- When referring to an information element (IE) in the specification the *Information Element Name* is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. *Transport Format Set* IE.
- Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in subclause 9.2 enclosed by quotation marks, e.g. "Abstract Syntax Error (Reject)" or "SSDT Active in the UE".

5 NBAP Services

5.1 Parallel Transactions

Unless explicitly indicated in the procedure description, at any instance in time one protocol peer shall have a maximum of one ongoing dedicated NBAP procedure related to a certain Node B Communication Context.

6 Services Expected from Signalling Transport

NBAP requires an assured in-sequence delivery service from the signalling bearer, and notification if the assured in-sequence delivery service is no longer available.

7 Functions of NBAP

The NBAP protocol provides the following functions:

- Cell Configuration Management. This function gives the CRNC the possibility to manage the cell configuration information in a Node B.
- Common Transport Channel Management. This function gives the CRNC the possibility to manage the configuration of Common Transport Channels in a Node B.
- System Information Management. This function gives the CRNC the ability to manage the scheduling of System Information to be broadcast in a cell.
- Resource Event Management. This function gives the Node B the ability to inform the CRNC about the status of Node B resources.
- Configuration Alignment. This function gives the CRNC and the Node B the possibility to verify and enforce that both nodes have the same information on the configuration of the radio resources.
- Measurements on Common Resources. This function allows the CRNC to initiate measurements on common resources in the Node B. The function also allows the Node B to report the result of the measurements.
- Radio Link Management. This function allows the CRNC to manage radio links using dedicated resources in a Node B
- Radio Link Supervision. This function allows the CRNC to report failures and restorations of a Radio Link.
- Compressed Mode Control [FDD]. This function allows the CRNC to control the usage of compressed mode in a Node B.
- Measurements on Dedicated Resources. This function allows the CRNC to initiate measurements on dedicated resources in the Node B. The function also allows the Node B to report the result of the measurements.
- DL Power Drifting Correction [FDD]. This function allows the CRNC to adjust the DL power level of one or more Radio Links in order to avoid DL power drifting between the Radio Links.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Physical Shared Channel Management. This function allows the CRNC to manage physical resources in the Node B belonging to High Speed Downlink Shared Channels and High Speed Shared Control Channels [TDD and High Speed Shared Indication Channels and Shared Channels (USCH/DSCH)].
- DL Power Timeslot Correction [TDD]. This function enables the Node B to apply an individual offset to the transmission power in each timeslot according to the downlink interference level at the UE.
- Cell Synchronisation [TDD]. This function allows the synchronisation of cells or Node Bs via the air interface.

- Information Exchange. This function allows the CRNC to initiate information provision from the Node B. The function also allows the Node B to report the requested information.
- Bearer Rearrangement. This function allows the Node B to indicate the need for bearer re-arrangement for a Node B Communication Context. The function also allows the CRNC to re-arrange bearers for a Node B Communication Context.

The mapping between the above functions and NBAP elementary procedures is shown in the table below.

Table 1: Mapping between functions and NBAP elementary procedures

Function	Elementary Procedure(s)
Cell Configuration Management	a) Cell Setup
	b) Cell Reconfiguration
Common Transport Channel Management	c) Cell Deletion
Common Transport Channel Management	a) Common Transport Channel Setup b) Common Transport Channel
	Reconfiguration
	c) Common Transport Channel Deletion
System Information Management	System Information Update
Resource Event Management	a) Block Resource
	b) Unblock Resource
	c) Resource Status Indication
Configuration Alignment	a) Audit Required
	b) Audit c) Reset
Measurements on Common Resources	a) Common Measurement Initiation
Wiedsdreffields of Common Resources	b) Common Measurement Reporting
	c) Common Measurement Termination
	d) Common Measurement Failure
Radio Link Management.	a) Radio Link Setup
	b) Radio Link Addition
	c) Radio Link Deletion
	d) Unsynchronised Radio Link Reconfiguration e) Synchronised Radio Link Reconfiguration
	Preparation
	f) Synchronised Radio Link Reconfiguration
	Commit
	g) Synchronised Radio Link Reconfiguration
	Cancellation
D. II. I i i i i	h) Radio Link Pre-emption
Radio Link Supervision.	a) Radio Link Failure b) Radio Link Restoration
Compressed Mode Control [FDD]	a) Radio Link Restoration
Compressed wede Control [1 22]	b) Radio Link Addition
	c) Compressed Mode Command
	d) Unsynchronised Radio Link Reconfiguration
	e) Synchronised Radio Link Reconfiguration
	Preparation
	f) Synchronised Radio Link Reconfiguration Commit
	g) Synchronised Radio Link Reconfiguration
	Cancellation
Measurements on Dedicated Resources	a) Dedicated Measurement Initiation
	b) Dedicated Measurement Reporting
	c) Dedicated Measurement Termination
DI Davis Drifting Compating (EDD)	d) Dedicated Measurement Failure
DL Power Drifting Correction [FDD] Reporting of General Error Situations	Downlink Power Control Error Indication
Physical Shared Channel Management	Physical Shared Channel Reconfiguration
DL Power Timeslot Correction [TDD]	Downlink Power Timeslot Control
Cell Synchronisation [TDD]	a) Cell Synchronisation Initiation
	b) Cell Synchronisation Reconfiguration
	c) Cell Synchronisation Reporting
	d) Cell Synchronisation Termination
	e) Cell Synchronisation Failure
Information Exchange	f) Cell Synchronisation Adjustment a) Information Exchange Initiation
Information Exonallys	b) Information Reporting
	c) Information Exchange Termination
	d) Information Exchange Failure

Function	Elementary Procedure(s)
Bearer Re-arrangement	a) Bearer Re-arrangement Indication
	b) Unsynchronised Radio Link Reconfiguration
	c) Synchronised Radio Link Reconfiguration
	Preparation
	d) Synchronised Radio Link Reconfiguration
	Commit
	e) Synchronised Radio Link Reconfiguration
	Cancellation

8 NBAP Procedures

8.1 Elementary Procedures

NBAP procedures are divided into common procedures and dedicated procedures.

- NBAP common procedures are procedures that request initiation of a Node B Communication Context for a specific UE in Node B or are not related to a specific UE. NBAP common procedures also incorporate logical O&M [1] procedures.
- NBAP dedicated procedures are procedures that are related to a specific Node B Communication Context in Node B. This Node B Communication Context is identified by a Node B Communication Context identity.

The two types of procedures may be carried on separate signalling links.

In the following tables, all EPs are divided into Class 1 and Class 2 EPs:

Table 2: Class 1

Elementary	Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
Cell Setup	CELL SETUP REQUEST	CELL SETUP RESPONSE	CELL SETUP FAILURE
Cell Reconfiguration	CELL RECONFIGURATION REQUEST	CELL RECONFIGURATION RESPONSE	CELL RECONFIGURATION FAILURE
Cell Deletion	CELL DELETION REQUEST	CELL DELETION RESPONSE	
Common	COMMON TRANSPORT	COMMON TRANSPORT	COMMON TRANSPORT
Transport	CHANNEL SETUP	CHANNEL SETUP	CHANNEL SETUP
Channel Setup	REQUEST	RESPONSE	FAILURE
Common	COMMON TRANSPORT	COMMON TRANSPORT	COMMON TRANSPORT
Transport Channel	CHANNEL RECONFIGURATION	CHANNEL	CHANNEL RECONFIGURATION
Reconfiguration	REQUEST	RECONFIGURATION RESPONSE	FAILURE
Common	COMMON TRANSPORT	COMMON TRANSPORT	TAILOILE
Transport	CHANNEL DELETION	CHANNEL DELETION	
Channel Deletion	REQUEST	RESPONSE	
Physical Shared	PHYSICAL SHARED	PHYSICAL SHARED	PHYSICAL SHARED
Channel	CHANNEL	CHANNEL	CHANNEL
Reconfigure	RECONFIGURATION	RECONFIGURATION	RECONFIGURATION
Audit	REQUEST AUDIT REQUEST	RESPONSE AUDIT RESPONSE	FAILURE AUDIT FAILURE
Block Resource	BLOCK RESOURCE	BLOCK RESOURCE	BLOCK RESOURCE
Blook Roodardo	REQUEST	RESPONSE	FAILURE
Radio Link Setup	RADIO LINK SETUP	RADIO LINK SETUP	RADIO LINK SETUP
	REQUEST	RESPONSE	FAILURE
System Information Update	SYSTEM INFORMATION UPDATE REQUEST	SYSTEM INFORMATION UPDATE RESPONSE	SYSTEM INFORMATION UPDATE FAILURE
Common	COMMON MEASUREMENT	COMMON	COMMON
Measurement Initiation	INITIATION REQUEST	MEASUREMENT INITIATION RESPONSE	MEASUREMENT INITIATION FAILURE
Radio Link	RADIO LINK ADDITION	RADIO LINK ADDITION	RADIO LINK ADDITION
Addition	REQUEST PARION	RESPONSE	FAILURE
Radio Link Deletion	RADIO LINK DELETION REQUEST	RADIO LINK DELETION RESPONSE	
Synchronised	RADIO LINK	RADIO LINK	RADIO LINK
Radio Link Reconfiguration Preparation	RECONFIGURATION PREPARE	RECONFIGURATION READY	RECONFIGURATION FAILURE
Unsynchronised	RADIO LINK	RADIO LINK	RADIO LINK
Radio Link	RECONFIGURATION	RECONFIGURATION	RECONFIGURATION
Reconfiguration Dedicated	REQUEST DEDICATED	RESPONSE DEDICATED	FAILURE DEDICATED
Measurement	MEASUREMENT	MEASUREMENT	MEASUREMENT
Initiation	INITIATION REQUEST	INITIATION RESPONSE	INITIATION FAILURE
Reset	RESET REQUEST	RESET RESPONSE	
Cell	CELL SYNCHRONISATION	CELL	CELL
Synchronisation Initiation [TDD]	INITIATION REQUEST	SYNCHRONISATION INITIATION RESPONSE	SYNCHRONISATION INITIATION FAILURE
Cell Synchronisation	CELL SYNCHRONISATION RECONFIGURATION	CELL SYNCHRONISATION	CELL SYNCHRONISATION
Reconfiguration [TDD]	REQUEST	RECONFIGURATION RESPONSE	RECONFIGURATION FAILURE
Cell	CELL SYNCHRONISATION	CELL	CELL
Synchronisation Adjustment [TDD]	ADJUSTMENT REQUEST	SYNCHRONISATION ADJUSTMENT RESPONSE	SYNCHRONISATION ADJUSTMENT FAILURE
Information Exchange Initiation	INFORMATION EXCHANGE INITIATION REQUEST	INFORMATION EXCHANGE INITIATION RESPONSE	INFORMATION EXCHANGE INITIATION FAILURE

Table 3: Class 2

Elementary Procedure	Message
Resource Status Indication	RESOURCE STATUS INDICATION
	AUDIT REQUIRED INDICATION
Audit Required	COMMON MEASUREMENT
Common Measurement Reporting	REPORT
Common Measurement	COMMON MEASUREMENT
Termination	TERMINATION REQUEST
Common Measurement Failure	COMMON MEASUREMENT
	FAILURE INDICATION
Synchronised Radio Link	RADIO LINK RECONFIGURATION
Reconfiguration Commit	COMMIT
Synchronised Radio Link	RADIO LINK RECONFIGURATION
Reconfiguration Cancellation	CANCEL
Radio Link Failure	RADIO LINK FAILURE INDICATION
Radio Link Restoration	RADIO LINK RESTORE INDICATION
Dedicated Measurement Reporting	DEDICATED MEASUREMENT
	REPORT
Dedicated Measurement	DEDICATED MEASUREMENT
Termination	TERMINATION REQUEST
Dedicated Measurement Failure	DEDICATED MEASUREMENT
	FAILURE INDICATION
Downlink Power Control [FDD]	DL POWER CONTROL REQUEST
Compressed Mode Command	COMPRESSED MODE COMMAND
[FDD]	
Unblock Resource	UNBLOCK RESOURCE INDICATION
Error Indication	ERROR INDICATION
Downlink Power Timeslot Control	DL POWER TIMESLOT CONTROL
[TDD]	REQUEST
Radio Link Pre-emption	RADIO LINK PREEMPTION
	REQUIRED INDICATION
Cell Synchronisation Reporting	CELL SYNCHRONISATION
[TDD]	REPORT
Cell Synchronisation Termination	CELL SYNCHRONISATION
[TDD]	TERMINATION REQUEST
Cell Synchronisation Failure [TDD]	CELL SYNCHRONISATION
	FAILURE INDICATION
Information Reporting	INFORMATION REPORT
Information Exchange Termination	INFORMATION EXCHANGE
	TERMINATION REQUEST
Information Exchange Failure	INFORMATION EXCHANGE
	FAILURE INDICATION
Bearer Re-arrangement	BEARER REARRANGEMENT
	INDICATION

8.2 NBAP Common Procedures

8.2.1 Common Transport Channel Setup

8.2.1.1 General

This procedure is used for establishing the necessary resources in Node B, regarding Secondary CCPCH, PICH, PRACH, PCPCH [FDD], AICH [FDD], AP_AICH [FDD], CD/CA-ICH [FDD], FACH, PCH, RACH, FPACH[1.28Mcps TDD] and CPCH [FDD].

8.2.1.2 Successful Operation

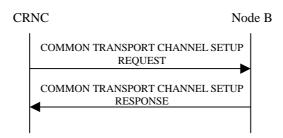


Figure 1: Common Transport Channel Setup procedure, Successful Operation

The procedure is initiated with a COMMON TRANSPORT CHANNEL SETUP REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

One message can configure only one of the following combinations:

- [FDD one Secondary CCPCH, and FACHs, PCH and PICH related to that Secondary CCPCH], or
- [TDD one CCTrCH consisting of Secondary CCPCHs and FACHs, PCH with the corresponding PICH related to that group of Secondary CCPCHs], or
- one [1.28Mcps TDD or more] PRACH, one RACH and one AICH [FDD] and one FPACH[1.28Mcps TDD] related to that PRACH.
- [FDD-PCPCHs, one CPCH, one AP_AICH and one CD/CA-ICH related to that group of PCPCHs.]

Secondary CCPCH:

[FDD - When the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *Secondary CCPCH* IE, the Node B shall configure and activate the indicated Secondary CCPCH according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.]

[TDD - When the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *Secondary CCPCH* IE, the Node B shall configure and activate the indicated Secondary CCPCH(s) according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.]

[TDD - FACHs and PCH may be mapped onto a CCTrCH which may consist of several Secondary CCPCHs]

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *FACH Parameters* IE, the Node B shall configure and activate the indicated FACH(s) according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *PCH Parameters* IE, the Node B shall configure and activate the concerned PCH and the associated PICH according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.

PRACH:

When the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *PRACH* IE, the Node B shall configure and activate the indicated PRACH and the associated RACH [FDD – and the associated AICH] according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.

[1.28Mcps TDD – FPACH]:

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *FPACH* IE, the Node B shall configure and activate the indicated FPACH according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.

[FDD-PCPCHs]:

When the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *CPCH Parameters* IE, the Node B shall configure and activate the indicated CPCH and the associated PCPCH(s), AP-AICH and CD/CA-ICH according to the COMMON TRANSPORT CHANNEL SETUP REQUEST message.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message includes *CD Signatures* IE, the Node B may use only the given CD signatures on CD/CA-ICH.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message includes *Channel Request Parameters* IE, the Node B shall use the parameters to distinguish the PCPCHs.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message includes *AP Sub Channel Number* IE in *Channel Request Parameters* IE, the Node B shall use AP sub channel number to distinguish the PCPCHs.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message includes *AP Sub Channel Number* IE in *SF Request Parameters* IE, the Node B shall use AP sub channel number to distinguish the requested Spreading Factors.

General:

After successfully configuring the requested common transport channels and the common physical channels, the Node B shall store the value of *Configuration Generation ID* IE and it shall respond with the COMMON TRANSPORT CHANNEL SETUP RESPONSE message with the *Common Transport Channel ID* IE, the *Binding ID* IE and the *Transport Layer Address* IE for the configured common transport channels.

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message includes the *Transport Layer Address* and *Binding ID* IEs, the Node B may use the transport layer adress and the binding identifier received from the CRNC when establishing a transport bearer for the indicated common transport channels.

After a successful procedure and once the transport bearers are established, the configured common transport channels and the common physical channels shall adopt the state Enabled [6] in the Node B and the common physical channels exist on the Uu interface.

8.2.1.3 Unsuccessful Operation

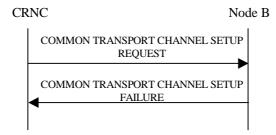


Figure 2: Common Transport Channel Setup procedure, Unsuccessful Operation

If the Node B is not able to support all or part of the configuration, it shall reject the configuration of all the channels in the COMMON TRANSPORT CHANNEL SETUP REQUEST message. The channels in the COMMON TRANSPORT CHANNEL SETUP REQUEST message shall remain in the same state as prior to the procedure. The *Cause* IE shall be set to an appropriate value. The value of *Configuration Generation ID* IE from the COMMON TRANSPORT CHANNEL SETUP REQUEST message shall not be stored.

If the configuration was unsuccessful, the Node B shall respond with a COMMON TRANSPORT CHANNEL SETUP FAILURE message.

Typical cause values are as follows:

Radio Network Layer Cause

- Cell not available
- Power level not supported
- Node B Resources unavailable
- Requested Tx Diversity Mode not supported
- UL SF not supported
- DL SF not supported

- Common Transport Channel Type not supported

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.1.4 Abnormal Conditions

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *Secondary CCPCH* IE, and that IE contains [FDD – neither the *FACH Parameters* IE nor the *PCH Parameters* IE] [TDD – neither the *FACH* IE nor the *PCH* IE], the Node B shall reject the procedure using the COMMON TRANSPORT CHANNEL SETUP FAILURE message.

[FDD – If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *CD Sub Channel Numbers* IE, but the *CD Signatures* IE is not present, then the Node B shall reject the procedure using the COMMON TRANSPORT CHANNEL SETUP FAILURE message.]

[TDD – If the FACH CCTrCH Id IE or the PCH CCTrCH Id IE does not equal the SCCPCH CCTrCH Id IE, the Node B shall regard the Common Transport Channel Setup procedure as having failed and the Node B shall send the COMMON TRANSPORT CHANNEL SETUP FAILURE message to the CRNC.]

[TDD – If the *TDD Physical Channel Offset* IE, the *Repetition Period* IE, and the *Repetition Length* IE are not equal for each SCCPCH configured within the CCTrCH, the Node B shall regard the Common Transport Channel Setup procedure as having failed and the Node B shall send the COMMON TRANSPORT CHANNEL SETUP FAILURE message to the CRNC.]

If the state is already Enabled or Disabled [6] for at least one channel in the COMMON TRANSPORT CHANNEL SETUP REQUEST message which is received, the Node B shall reject the configuration of all channels with the *Cause* IE set to "Message not compatible with receiver state".

If the COMMON TRANSPORT CHANNEL SETUP REQUEST message contains the *Transport Layer Address* IE or the *Binding ID* IE, and not both are present for a transport channel intended to be established, the Node B shall reject the procedure using the COMMON TRANSPORT CHANNEL SETUP FAILURE message.

8.2.2 Common Transport Channel Reconfiguration

8.2.2.1 General

This procedure is used for reconfiguring common transport channels and/or common physical channels, while they still might be in operation.

8.2.2.2 Successful Operation

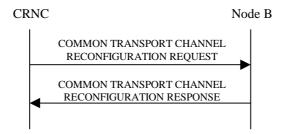


Figure 3: Common Transport Channel Reconfiguration, Successful Operation

The procedure is initiated with a COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

One message can configure only one of the following combinations:

- [FDD FACHs, one PCH and/or one PICH related to one Secondary CCPCH], or
- [TDD one CCTrCH consisting of Secondary CCPCHs and FACHs, PCH with the corresponding PICH related to that group of Secondary CCPCHs], or
- one RACH and/or one AICH[FDD])] and/or one FPACH[1.28Mcps TDD] related to one PRACH, or
- [FDD one CPCH and/or one AP-AICH and/or one CD/CA-ICH related to one CPCH].

SCCPCH:

[TDD - If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *SCCPCH Power* IE, the Node B shall reconfigure the power that the indicated S-CCPCH shall use.]

FACH:

If the FACH Parameters IE is present, the Node B shall reconfigure the indicated FACH(s).

[FDD - If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Max FACH Power* IE, the Node B shall reconfigure the maximum power that the indicated FACH may use.]

[1.28Mcps TDD - If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Max FACH Power* IE, the Node B shall reconfigure the maximum power that the indicated FACH may use.]

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *ToAWS* IE, the Node B shall reconfigure the time of arrival window startpoint that the indicated FACH shall use.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *ToAWE* IE, the Node B shall reconfigure the time of arrival window endpoint that the indicated FACH shall use.

PCH:

If the PCH Parameters IE is present, the Node B shall reconfigure the indicated PCH.

[FDD - If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *PCH Power* IE, the Node B shall reconfigure the power that the PCH shall use.]

[1.28Mcps TDD - If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *PCH Power* IE, the Node B shall reconfigure the power that the PCH shall use.]

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *ToAWS* IE, the Node B shall reconfigure the time of arrival window startpoint that the PCH shall use.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *ToAWE* IE, the Node B shall reconfigure the time of arrival window endpoint that the PCH shall use.

PICH:

If the PICH Parameters IE is present, the Node B shall reconfigure the indicated PICH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *PICH Power* IE, the Node B shall reconfigure the power that the PICH shall use.

[FDD - PRACH]:

If the PRACH Parameters IE is present, the Node B shall reconfigure the indicated PRACH(s).

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Preamble Signatures* IE, the Node B shall reconfigure the preamble signatures that the indicated PRACH shall use.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Allowed Slot Format Information* IE, the Node B shall reconfigure the slot formats that the indicated PRACH shall use.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *RACH Sub Channel Numbers* IE, the Node B shall reconfigure the sub channel numbers that the indicated PRACH shall use.

[FDD - AICH]:

If the AICH Parameters IE is present, the Node B shall reconfigure the indicated AICH(s).

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *AICH Power* IE, the Node B shall reconfigure the power that the indicated AICH shall use.

[FDD - CPCH]:

If the CPCH Parameters IE is present, the Node B shall reconfigure the indicated CPCH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *UL SIR* IE, the Node B shall reconfigure the UL SIR for the UL power control for the indicated CPCH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Initial DL Transmission Power* IE, the Node B shall reconfigure the Initial DL Transmission Power for the indicated CPCH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Maximum DL Power* IE, the Node B shall apply this value to the new configuration of the indicated CPCH and never transmit with a higher power on any DL PCPCHs once the new configuration is being used.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Minimum DL Power* IE, the Node B shall apply this value to the new configuration of the indicated CPCH and never transmit with a lower power on any DL PCPCHs once the new configuration is being used.

[FDD – AP-AICH]:

If the AP-AICH Parameters IE is present, the Node B shall reconfigure the indicated AP-AICH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *AP-AICH Power* IE, the Node B shall reconfigure the power that the AP-AICH shall use.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *CSICH Power* IE, the Node B shall reconfigure the power that the CSICH shall use.

[FDD-CD/CA-ICH]:

If the CD/CA-ICH Parameters IE is present, the Node B shall reconfigure the indicated CD/CA-ICH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *CD/CA-AICH Power* IE, the Node B shall reconfigure the power that the CD/CA-AICH shall use.

[1.28Mcps TDD - FPACH]:

If the FPACH is included, the Node B shall reconfigure the indicated FPACH.

If the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message includes the *Max FPACH Power* IE, the Node B shall reconfigure the power that the FPACH shall use.

General:

After a successful procedure, the channels will have adopted the new configuration in the Node B. The channels in the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message shall remain in the same state as prior to the procedure. The Node B shall store the value of *Configuration Generation ID* IE and the Node B shall respond with the COMMON TRANSPORT CHANNEL RECONFIGURATION RESPONSE message.

8.2.2.3 Unsuccessful Operation

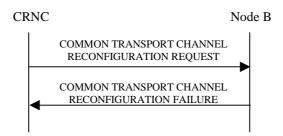


Figure 4: Common Transport Channel Reconfiguration procedure, Unsuccessful Operation

If the Node B is not able to support all or part of the configuration, it shall reject the configuration of all the channels in the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message. The channels in the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message shall remain in the same state as prior to the procedure. The *Cause* IE shall be set to an appropriate value. The value of *Configuration Generation ID* IE from the COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST message shall not be stored.

If the configuration was unsuccessful, the Node B shall respond with the COMMON TRANSPORT CHANNEL RECONFIGURATION FAILURE message.

Typical cause values are as follows:

Radio Network Layer Cause

- Cell not available
- Power level not supported
- Node B Resources unavailable

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.2.4 Abnormal Conditions

-

8.2.3 Common Transport Channel Deletion

8.2.3.1 General

This procedure is used for deleting common physical channels and common transport channels.

8.2.3.2 Successful Operation

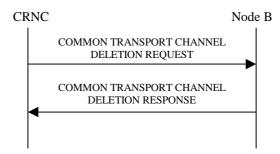


Figure 5: Common Transport Channel Deletion procedure, Successful Operation

The procedure is initiated with a COMMON TRANSPORT CHANNEL DELETION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Secondary CCPCH:

If the *Common Physical Channel ID* IE contained in the COMMON TRANSPORT CHANNEL DELETION REQUEST message indicates a Secondary CCPCH, the Node B shall delete the indicated channel and the FACHs and PCH supported by that Secondary CCPCH. If there is a PCH that is deleted, the PICH associated with that PCH shall also be deleted.

PRACH:

If the *Common Physical Channel ID* IE contained in the COMMON TRANSPORT CHANNEL DELETION REQUEST message indicates a PRACH, the Node B shall delete the indicated channel and the RACH supported by the PRACH. [FDD - The AICH associated with the RACH shall also be deleted.]

[FDD – PCPCHs]:

If the *Common Physical Channel ID* IE contained in the COMMON TRANSPORT CHANNEL DELETION REQUEST message indicates one of the PCPCHs for a CPCH, the Node B shall delete all PCPCHs associated with the indicated channel and the CPCH supported by these PCPCHs. The AP-AICH and CD/CA-ICH associated with the CPCH shall also be deleted.

General:

[TDD – If the requested common physical channel is a part of a CCTrCH, all common transport channels and all common physical channels associated with this CCTrCH shall be deleted.]

After a successful procedure, the channels are deleted in the Node B. The channels in the COMMON TRANSPORT CHANNEL DELETION REQUEST message shall be set to state Not Existing ref. [6]. The Node B shall store the received value of the *Configuration Generation ID* IE and respond with the COMMON TRANSPORT CHANNEL DELETION RESPONSE message.

8.2.3.3 Unsuccessful Operation

-

8.2.3.4 Abnormal Conditions

If the C-ID in the COMMON TRANSPORT CHANNEL DELETION REQUEST message is not existing in the Node B or the Common Physical Channel ID does not exist in the Cell, the Node B shall respond with the COMMON TRANSPORT CHANNEL DELETION RESPONSE message.

8.2.4 Block Resource

8.2.4.1 General

The Node B initiates this procedure to request the CRNC to prohibit the usage of the specified logical resources.

The logical resource that can be blocked is a cell.

8.2.4.2 Successful Operation

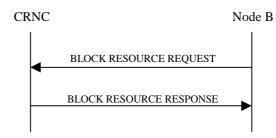


Figure 6: Block Resource procedure, Successful Operation

The procedure is initiated with a BLOCK RESOURCE REQUEST message sent from the Node B to the CRNC using the Node B Control Port.

Upon reception of the BLOCK RESOURCE REQUEST message, the CRNC shall prohibit the use of the indicated logical resources according to the *Blocking Priority Indicator* IE.

If the *Blocking Priority Indicator* IE in the BLOCK RESOURCE REQUEST message indicates "High Priority", the CRNC shall prohibit the use of the logical resources immediately.

If the *Blocking Priority Indicator* IE in the BLOCK RESOURCE REQUEST message indicates "Normal Priority", the CRNC shall prohibit the use of the logical resources if the resources are idle or immediately upon expiry of the shutdown timer specified by the *Shutdown Timer* IE in the BLOCK RESOURCE REQUEST message. New traffic shall not be allowed to use the logical resources while the CRNC waits for the resources to become idle and once the resources are blocked.

If the *Blocking Priority Indicator* IE in the BLOCK RESOURCE REQUEST message indicates "Low Priority", the CRNC shall prohibit the use of the logical resources when the resources become idle. New traffic shall not be allowed to use the logical resources while the CRNC waits for the resources to become idle and once the resources are blocked.

If the resources are successfully blocked, the CRNC shall respond with a BLOCK RESOURCE RESPONSE message. Upon reception of the BLOCK RESOURCE RESPONSE message, the Node B may disable [3.84Mcps TDD - SCH], [FDD - the Primary SCH, the Secondary SCH, the Primary CPICH, if present the Secondary CPICH(s)], [1.28Mcps TDD – DwPCH] and the Primary CCPCH. The other logical resources in the cell shall be considered as blocked.

Reconfiguration of logical resources and change of System Information can be done, even when the logical resources are blocked.

Interactions with the Unblock Resource procedure:

If the UNBLOCK RESOURCE INDICATION message is received by the CRNC while a Block Resource procedure on the same logical resources is in progress, the CRNC shall cancel the Block Resource procedure and proceed with the Unblock Resource procedure.

If the BLOCK RESOURCE RESPONSE message or the BLOCK RESOURCE FAILURE message is received by the Node B after the Node B has initiated an Unblock Resource procedure on the same logical resources as the ongoing Block Resource procedure, the Node B shall ignore the response to the Block Resource procedure.

8.2.4.3 Unsuccessful Operation

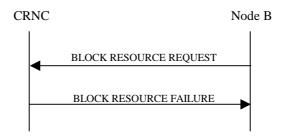


Figure 7: Block Resource procedure, Unsuccessful Operation

The CRNC may reject the request to block the logical resources, in which case the logical resources will remain unaffected and the CRNC shall respond to the Node B with the BLOCK RESOURCE FAILURE message. Upon reception of the BLOCK RESOURCE FAILURE message, the Node B shall leave the logical resources in the state that they were in prior to the start of the Block Resource procedure.

Typical cause values are as follows:

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

Radio Network Layer Cause

- Priority transport channel established

8.2.4.4 Abnormal Conditions

_

8.2.5 Unblock Resource

8.2.5.1 General

The Node B initiates this procedure to indicate to the CRNC that logical resources are now unblocked.

The logical resource that can be unblocked is a cell.

8.2.5.2 Successful Operation



Figure 8: Unblock Resource procedure, Successful Operation

The procedure is initiated with an UNBLOCK RESOURCE INDICATION message sent from the Node B to the CRNC using the Node B Control Port. The Node B shall enable [TDD - SCH], [FDD - the Primary SCH, the Secondary SCH, the Primary CPICH, the Secondary CPICH(s) (if present)], [1.28Mcps TDD – DwPCH] and the Primary CCPCH that had been disabled due to the preceding Block Resource procedure before sending the UNBLOCK RESOURCE

INDICATION message. Upon reception of the UNBLOCK RESOURCE INDICATION message, the CRNC may permit the use of the logical resources.

All physical channels and transport channels associated to the cell that is unblocked are also unblocked.

8.2.5.3 Abnormal Conditions

-

8.2.6 Audit Required

8.2.6.1 General

The Node B initiates this procedure to request the CRNC to perform an audit of the logical resources at the Node B. This procedure is used to indicate a possible misalignment of state or configuration information.

8.2.6.2 Successful Operation



Figure 9: Audit Required procedure, Successful Operation

The procedure is initiated with an AUDIT REQUIRED INDICATION message sent from the Node B to the CRNC using the Node B Control Port.

If the Node B cannot ensure alignment of the state or configuration information, it should initiate the Audit Required procedure.

Upon receipt of the AUDIT REQUIRED INDICATION message, the CRNC should initiate the Audit procedure.

8.2.6.3 Abnormal Conditions

_

8.2.7 Audit

8.2.7.1 General

This procedure is executed by the CRNC to perform an audit of the configuration and status of the logical resources in the Node B. A complete audit of a Node B is performed by one or more Audit procedures, together performing an audit sequence. The audit may cause the CRNC to re-synchronise the Node B to the status of logical resources known by the CRNC, that the Node B can support.

8.2.7.2 Successful Operation

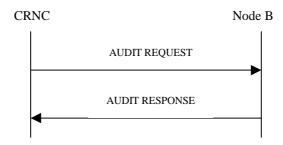


Figure 10: Audit procedure, Successful Operation

The procedure is initiated with an AUDIT REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

If the *Start of Audit Sequence* IE in the AUDIT REQUEST message is set to "start of audit sequence" a new audit sequence is started, any ongoing audit sequence shall be aborted and the Node B shall provide (part of the) audit information. If the *Start of Audit Sequence* IE is set to "not start of audit sequence", the Node B shall provide (part of) the remaining audit information not already provided during this audit sequence.

If the information provided in the AUDIT RESPONSE message completes the audit sequence, the Node B shall set the *End Of AuditSequence Indicator* IE in the AUDIT RESPONSE message to "End of Audit Sequence". If not all audit information has been provided yet as part of the ongoing audit sequence, the Node B shall set the *End Of AuditSequence Indicator* IE in the AUDIT RESPONSE message to "Not End of Audit Sequence".

Information Provided In One Audit Sequence.

The Node B shall include one *Local Cell Information* IE for each local cell present in the Node B. The Node B shall include the *Maximum DL Power Capability* IE and the *Minimum DL Power Capability* IE when any of those values are known by the Node B.

[TDD - The Node B shall include the *Reference Clock availability* IE to indicate the availability of a Reference clock connected to the Local Cell.]

If the Node B internal resources are pooled for a group of cells, the Node B shall include one *Local Cell Group Information* IE containing the Node B internal resource capacity and the consumption laws per group of cells. If the *UL Capacity Credit* IE is not present, then the internal resource capabilities of the Node B are modelled as shared resources between Uplink and Downlink.

If the Node B internal power resources are pooled for a group of Local Cells, the Node B shall include one *Power Local Cell Group Information* IE containing the Maximum DL Power Capability for each Power Local Cell Group for which this value is known by the Node B. In this case, the Node B shall also include the *Maximum DL Power Capability* IE in the *Local Cell Information* IE for all the Local Cells belonging to a Power Local Cell Group reported in the *Power Local Cell Group Information* IE. Furthermore, the sum of the Maximum DL Power Capability of all the Local Cells belonging to the same Power Local Cell Group shall not exceed the Maximum DL Power Capability of the concerned Power Local Cell Group.

The Node B shall include, for each local cell present in the Node B, the Node B internal resource capability and consumption laws within the *Local Cell Information* IE. If the *UL Capacity Credit* IE is not present, then the internal resource capabilities of the local cell are modelled as shared resources between Uplink and Downlink. If the Local Cell utilises Node B internal resource capabilities that are pooled for several Local Cell(s), the *Local Cell Group ID* IE shall contain the identity of the used Local Cell Group. If the Local Cell utilises Node B internal power resources that are pooled for several Local Cells, the *Power Local Cell Group ID* IE shall contain the identity of the concerned Power Local Cell Group.

The Node B shall include one *Cell Information* IE for each cell in the Node B and information about all common transport channels and all common physical channels for each cell. If a *Configuration Generation ID* IE for a cell can not be trusted, the Node B shall set this *Configuration Generation ID* IE = "0".

The Node B shall also include one *Communication Control Port Information* IE for each Communication Control Port in the Node B.

8.2.7.3 Unsuccessful Operation



Figure 10A: Audit procedure, Unsuccessful Operation

If the Node B cannot perform an audit of the configuration and status of the logical resources, it shall send a AUDIT FAILURE message with the *Cause* IE set to an appropriate value.

8.2.7.4 Abnormal Conditions

If the Node B receives the AUDIT REQUEST message with the *Start of Audit Sequence* IE set to "not start of audit sequence" and there is no ongoing audit sequence, the Node B shall send the AUDIT FAILURE message with the appropriate cause value.

8.2.8 Common Measurement Initiation

8.2.8.1 General

This procedure is used by a CRNC to request the initiation of measurements on common resources in a Node B.

8.2.8.2 Successful Operation

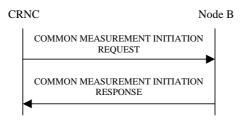


Figure 11: Common Measurement Initiation procedure, Successful Operation

The procedure is initiated with a COMMON MEASUREMENT INITIATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall initiate the requested measurement according to the parameters given in the request. Unless specified below, the meaning of the parameters are given in other specifications.

[TDD - If the [3.84Mcps TDD – *Time Slot* IE] [1.28Mcps TDD – *Time Slot LCR* IE] is present in the COMMON MEASUREMENT INITIATION REQUEST message, the measurement request shall apply to the requested time slot individually.]

[FDD - If the *Spreading Factor* IE is present in the COMMON MEASUREMENT INITIATION REQUEST message, the measurement request shall apply to the PCPCHs whose minimum allowed spreading factor (Min UL Channelisation Code Length) is equal to the value of the *Spreading Factor* IE.

If the *Common Measurement Type* IE is not set to "SFN-SFN Observed Time Difference" and the *SFN Reporting Indicator* IE is set to "FN Reporting Required", the *SFN* IE shall be included in the COMMON MEASUREMENT REPORT message or in the COMMON MEASUREMENT RESPONSE message, the latter only in the case the *Report Characteristics* IE is set to "On Demand". The reported SFN shall be the SFN at the time when the measurement value was reported by the layer 3 filter, referred to as point C in the measurement model [25]. If the *Common Measurement Type* IE is set to "SFN-SFN Observed Time Difference" and the *SFN Reporting Indicator* IE is ignored.

Common measurement type

If the *Common Measurement Type* IE is set to "SFN-SFN Observed Time Difference", then the Node B shall initiate the SFN-SFN Observed Time Difference measurements between the reference cell identified by *C-ID* IE and the neighbouring cells identified by the *UTRAN Cell Identifier(UC-Id)* IE.

Report characteristics

The Report Characteristics IE indicates how the reporting of the measurement shall be performed. See also Annex B.

If the *Report Characteristics* IE is set to "On Demand" and if the *SFN* IE is not provided, the Node B shall return the result of the requested measurement immediately. If the *SFN* IE is provided, it indicates the frame for which the measurement value shall be provided. The provided measurement value shall be the one reported by the layer 3 filter, referred to as point C in the measurement model [25].

If the *Report Characteristics* IE is set to "Periodic", the Node B shall periodically initiate a Common Measurement Reporting procedure for this measurement, with the requested report frequency. If the *Common Measurement Type* IE is set to "SFN-SFN Observed Time Difference", all the available measurement results shall be reported in the *Successful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information* IE in the *SFN-SFN Measurement Value Information* IE and the Node B shall indicate in the *Unsuccessful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information* IE all the remaining neighbouring cells with no measurement result available in the Common Measurement Reporting procedure. If the *SFN* IE is provided, it indicates the frame for which the first measurement value of a periodic reporting shall be provided. The provided measurement value shall be the one reported by the layer 3 filter, referred to as point C in the measurement model [25].

If the *Report Characteristics* IE is set to "Event A", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity rises above the requested threshold and stays there for the requested hysteresis time. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero for the hysteresis time.

If the *Report Characteristics* IE is set to "Event B", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity falls below the requested threshold and stays there for the requested hysteresis time. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero for the hysteresis time.

If the *Report Characteristics* IE is set to "Event C", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity rises by an amount greater than the requested threshold within the requested time. After having reported this type of event, the next C event reporting for the same measurement cannot be initiated before the rising time specified by the *Measurement Change Time* IE has elapsed since the previous event reporting.

If the *Report Characteristics* IE is set to "Event D", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity falls by an amount greater than the requested threshold within the requested time. After having reported this type of event, the next D event reporting for the same measurement cannot be initiated before the falling time specified by the *Measurement Change Time* IE has elapsed since the previous event reporting.

If the *Report Characteristics* IE is set to "Event E", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity rises above the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (Report A). When the conditions for Report A are met and the *Report Periodicity* IE is provided, the Node B shall initiate the Common Measurement Reporting procedure periodically. If the conditions for Report A have been met and the measured entity falls below the 'Measurement Threshold 2' and stays there for the 'Measurement Hysteresis Time', the Node B shall initiate the Common Measurement Reporting procedure (Report B) as well as terminating any corresponding periodic reporting. If the *Measurement Threshold 2* IE is not present, the Node B shall use the value of the *Measurement Threshold 1* IE instead. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero as hysteresis times for both Report A and Report B.

If the *Report Characteristics* IE is set to "Event F", the Node B shall initiate the Common Measurement Reporting procedure when the measured entity falls below the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (Report A). When the conditions for Report A are met and the *Report Periodicity* IE is provided the Node B shall also initiate the Common Measurement Reporting procedure periodically. If the conditions for Report A have been met and the measured entity rises above the 'Measurement Threshold 2' and stays there for the 'Measurement

Hysteresis Time', the Node B shall initiate the Common Measurement Reporting procedure (Report B) as well as terminating any corresponding periodic reporting. If the *Measurement Threshold 2* IE is not present, the Node B shall use the value of the *Measurement Threshold 1* IE instead. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero as hysteresis times for both Report A and Report B.

If the *Report Characteristics* IE is set to "On Modification" and if the *SFN* IE is not provided, the Node B shall report the result of the requested measurement immediately. If the *SFN* IE is provided, it indicates the frame for which the measurement value shall be provided. The provided measurement value shall be the one reported by the layer 3 filter, referred to as point C in the measurement model [25]. Then, the Node B shall initiate the Common Measurement Reporting procedure in accordance to the following conditions:

- 1. If the Common Measurement Type IE is set to "UTRAN GPS Timing of Cell Frames for UE Positioning":
 - If the $T_{UTRAN-GPS}$ Change Limit IE is included in the $T_{UTRAN-GPS}$ Measurement Threshold Information IE, the Node B shall each time a new measurement result is received after point C in the measurement model [25], calculate the change of $T_{UTRAN-GPS}$ value (F_n). The Node B shall initiate the Common Measurement Reporting procedure and set n equal to zero when the absolute value of F_n rises above the threshold indicated by the $T_{UTRAN-GPS}$ Change Limit IE. The change of $T_{UTRAN-GPS}$ value (F_n) is calculated according to the following:

```
F_n = 0 \text{ for } n = 0 F_n = (M_n - M_{n-1}) \text{ mod } 37152912000000 - ((SFN_n - SFN_{n-1}) \text{ mod } 4096) *10*3.84*10^3*16 + F_{n-1} \text{ for } n > 0
```

 F_n is the change of the $T_{UTRAN-GPS}$ value expressed in unit [1/16 chip] when n measurement results have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

 M_n is the latest measurement result received after point C in the measurement model [25], measured at SFN_n.

 M_{n-1} is the previous measurement result received after point C in the measurement model [25], measured at SFN_{n-1}.

 M_1 is the first measurement result received after point C in the measurement model [25], after the first Common Measurement Reporting at initiation or after the last event was triggered.

 M_0 is equal to the value reported in the first Common Measurement Reporting at initiation or in the Common Measurement Reporting when the event was triggered.

If the Predicted $T_{UTRAN-GPS}$ Deviation Limit IE is included in the $T_{UTRAN-GPS}$ Measurement Threshold Information IE, the Node B shall each time a new measurement result is received after point C in the measurement model [25], update the P_n and P_n The Node B shall initiate the Common Measurement Reporting procedure and set n equal to zero when P_n rises above the threshold indicated by the Predicted $T_{UTRAN-GPS}$ Deviation Limit IE. The P_n and P_n are calculated according to the following:

```
\begin{split} P_n &= b \ for \ n = 0 \\ P_n &= ((a/16) * ((SFN_n - SFN_{n-1}) \ mod \ 4096)/100 + ((SFN_n - SFN_{n-1}) \ mod \ 4096) * 10*3.84*10^3*16 + P_{n-1}) \\ mod \ 37158912000000 \qquad for \ n > 0 \\ F_n &= min((M_n - P_n) \ mod \ 37158912000000) \qquad for \ n > 0 \end{split}
```

 P_n is the predicted $T_{UTRAN-GPS}$ value when n measurement results have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

a is the last reported T_{UTRAN-GPS} Drift Rate value.

b is the last reported $T_{UTRAN-GPS}$ value.

 F_n is the deviation of the last measurement result from the predicted $T_{\rm UTRAN\text{-}GPS}$ value (P_n) when n measurements have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

 M_n is the latest measurement result received after point C in the measurement model [25], measured at SFN_n.

 M_I is the first measurement result received after point C in the measurement model [25], after the first Common Measurement Reporting at initiation or after the last event was triggered.

The T_{UTRAN-GPS} Drift Rate is determined by the Node B in an implementation-dependent way after point B in the measurement model [26].

- 2. If the Common Measurement Type IE is set to "SFN-SFN Observed Time Difference":
 - If the *SFN-SFN Change Limit* IE is included in the *SFN-SFN Measurement Threshold Information* IE, the Node B shall each time a new measurement result is received after point C in the measurement model [25], calculate the change of SFN-SFN value (F_n). The Node B shall initiate the Common Measurement Reporting procedure in order to report the particular SFN-SFN measurement which has triggered the event and set n equal to zero when F_n rises above the threshold indicated by the *SFN-SFN Change Limit* IE. The change of the SFN-SFN value is calculated according to the following:

$$F_n=0$$
 for $n=0$
[FDD - $F_n = (M_n-a) \mod 614400$ for $n>0$]
[TDD - $F_n = (M_n-a) \mod 40960$ for $n>0$]

 F_n is the change of the SFN-SFN value expressed in unit [1/16 chip] when n measurement results have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

a is the last reported SFN-SFN.

 M_n is the latest measurement result received after point C in the measurement model [25], measured at SFN_n.

 M_I is the first measurement result received after point C in the measurement model [25] after the first Common Measurement Reporting at initiation or after the last event was triggered.

- If the Predicted SFN-SFN Deviation Limit IE is included in the SFN-SFN Measurement Threshold Information IE, the Node B shall each time a new measurement result is received after point C in the measurement model [25], update the P_n and F_n. The Node B shall initiate the Common Measurement Reporting procedure in order to report the particular SFN-SFN measurement which has triggered the event and set n equal to zero when the F_n rises above the threshold indicated by the Predicted SFN-SFN Deviation Limit IE. The P_n and F_n are calculated according to the following:

```
\begin{split} P_n &= b \ for \ n = 0 \\ [\text{FDD -} P_n &= ((a/16) * ((SFN_n - SFN_{n-1}) \ mod \ 4096)/100 + P_{n-1}) \ mod \ 614400 \quad for \ n > 0] \\ [\text{FDD -} F_n &= \min((M_n - P_n) \ mod \ 614400, \ (P_n - M_n) \ mod \ 614400) \qquad for \ n > 0] \\ [\text{TDD -} P_n &= ((a/16) * (15*(SFN_n - SFN_{n-1}) mod \ 4096 + (TS_n - TS_{n-1}))/1500 + P_{n-1}) \ mod \ 40960 \qquad for \ n > 0] \\ [\text{TDD -} F_n &= \min((M_n - P_n) \ mod \ 40960, \ (P_n - M_n) \ mod \ 40960) \qquad for \ n > 0] \end{split}
```

 P_n is the predicted SFN-SFN value when n measurement results have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

a is the last reported SFN-SFN Drift Rate value.

b is the last reported SFN-SFN value.

abs denotes the absolute value.

 F_n is the deviation of the last measurement result from the predicted SFN-SFN value (P_n) when n measurements have been received after the first Common Measurement Reporting at initiation or after the last event was triggered.

 M_n is the latest measurement result received after point C in the measurement model [25], measured at [TDD - the Time Slot TS_n of] the Frame SFN_n.

 M_1 is the first measurement result received after point C in the measurement model [25] after the first Common Measurement Reporting at initiation or after the last event was triggered.

The SFN-SFN Drift Rate is determined by the Node B in an implementation-dependent way after point B in the measurement model [26].

If the *Report Characteristics* IE is not set to "On Demand", the Node B is required to perform reporting for a common measurement object, in accordance with the conditions provided in the COMMON MEASUREMENT INITIATION REQUEST message, as long as the object exists. If no common measurement object(s) for which a measurement is defined exists anymore, the Node B shall terminate the measurement locally, i.e. without reporting this to the CRNC.

If at the start of the measurement, the reporting criteria are fulfilled for any of Event A, Event B, Event E or Event F, the Node B shall initiate the Common Measurement Reporting procedure immediately, and then continue with the measurements as specified in the COMMON MEASUREMENT INITIATION REQUEST message.

Higher layer filtering

The *Measurement Filter Coefficient* IE indicates how filtering of the measurement values shall be performed before measurement event evaluation and reporting.

The averaging shall be performed according to the following formula.

$$F_n = (1-a) \cdot F_{n-1} + a \cdot M_n$$

The variables in the formula are defined as follows:

 F_n is the updated filtered measurement result

 F_{n-1} is the old filtered measurement result

 M_n is the latest received measurement result from physical layer measurements, the unit used for M_n is the same unit as the reported unit in the COMMON MEASUREMENT INITIATION RESPONSE, COMMON MEASUREMENT REPORT messages or the unit used in the event evaluation (i.e. same unit as for Fn)

 $a = 1/2^{(k/2)}$, where k is the parameter received in the *Measurement Filter Coefficient IE*. If the *Measurement Filter Coefficient IE* is not present, a shall be set to 1 (no filtering)

In order to initialise the averaging filter, F_0 is set to M_I when the first measurement result from the physical layer measurement is received.

Common measurement accuracy

If the *Common Measurement Type* IE is set to "UTRAN GPS Timing of Cell Frames for UE Positioning", then the Node B shall use the *UTRAN GPS Timing Measurement Accuracy Class* IE included in the *Common Measurement Accuracy* IE according to the following:

- If the *UTRAN GPS Timing Measurement Accuracy Class* IE indicates "Class A", then the Node B shall perform the measurement with highest supported accuracy within the accuracy classes A, B and C.
- If the *UTRAN GPS Timing Measurement Accuracy Class* IE indicates "Class B", then the Node B shall perform the measurement with highest supported accuracy within the accuracy classes B and C.
- If the *UTRAN GPS Timing Measurement Accuracy Class* IE indicates "Class C", then the Node B shall perform the measurements with the accuracy according to class C.

Response message

If the Node B was able to initiate the measurement requested by the CRNC, it shall respond with the COMMON MEASUREMENT INITIATION RESPONSE message sent over the Node B Control Port. The message shall include the same Measurement ID that was used in the measurement request. Only in the case where the *Report Characteristics* IE is set to "On Demand" or "On Modification", the COMMON MEASUREMENT INITIATION RESPONSE message shall contain the measurement result and also the *Common Measurement Achieved Accuracy* IE if the *Common Measurement Type* IE is set to "UTRAN GPS Timing of Cell Frames for UE Positioning".

If the *Common Measurement Type* IE is set to "SFN-SFN Observed Time Difference" and the *Report Characteristics* IE is set to "On Demand" or "On Modification", all the available measurement results shall be reported in the *Successful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information* IE in the *SFN-SFN Measurement Value Information* IE and the Node B shall indicate in the *Unsuccessful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information* IE all the remaining neighbouring cells with no measurement result available in the COMMON MEASUREMENT INITIATION RESPONSE message.

8.2.8.3 Unsuccessful Operation

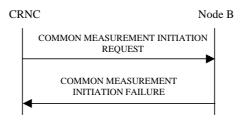


Figure 12: Common Measurement Initiation procedure, Unsuccessful Operation

If the requested measurement cannot be initiated, the Node B shall send a COMMON MEASUREMENT INITIATION FAILURE message over the Node B Control Port. The message shall include the same Measurement ID that was used in the COMMON MEASUREMENT INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- Measurement not supported for the object.
- Measurement Temporarily not Available

8.2.8.4 Abnormal Conditions

If the Common Measurement Type received in the *Common Measurement Type* IE is not defined in ref. [4] or [5] to be measured on the Common Measurement Object Type received in the COMMON MEASUREMENT INITIATION REQUEST message, the Node B shall regard the Common Measurement Initiation procedure as failed.

[TDD - If the Common Measurement Type requires the Time Slot Information but the [3.84Mcps TDD - *Time Slot* IE] [1.28Mcps TDD - *Time Slot LCR* IE] is not present in the COMMON MEASUREMENT INITIATION REQUEST message, the Node B shall regard the Common Measurement Initiation procedure as failed.]

If the COMMON MEASUREMENT INITIATION REQUEST message contains the *SFN-SFN Measurement Threshold Information* IE (in the *Measurement Threshold* IE contained in the *Report Characteristics* IE) and it does not contain at least one IE, the Node B shall reject the procedure using the COMMON MEASUREMENT INITIATION FAILURE message.

If the COMMON MEASUREMENT INITIATION REQUEST message contains the $T_{UTRAN-GPS}$ Measurement Threshold Information IE (in the Measurement Threshold IE contained in the Report Characteristics IE) and it does not contain at least one IE, the Node B shall reject the procedure using the COMMON MEASUREMENT INITIATION FAILURE message.

If the *Common Measurement Type* IE is set to "SFN-SFN Observed Time Difference", but the *Neighbouring Cell Measurement Information* IE is not received in the COMMON MEASUREMENT INITIATION REQUEST message, the Node B shall regard the Common Measurement Initiation procedure as failed.

If the *Common Measurement Type* IE is set to "UTRAN GPS Timing of Cell Frames for UE Positioning", but the $T_{UTRAN-GPS}$ Measurement Accuracy Class IE in the Common Measurement Accuracy IE is not received in the COMMON MEASUREMENT INITIATION REQUEST message, the Node B shall regard the Common Measurement Initiation procedure as failed.

The allowed combinations of the Common Measurement Type and Report Characteristics Type are shown in the table below marked with "X". For not allowed combinations, the Node B shall regard the Common Measurement Initiation procedure as failed.

Report Characteristics Type Common On Periodic On Measurement **Event Event Event Event Event Event Demand** Modification Type Ε Received Total Χ Χ Χ Х Χ Χ Χ Χ Wide Band Ppower Transmitted Carrier Х Χ Χ Χ Χ Χ Χ Χ Power Acknowledged Х Χ Χ Χ Χ Χ Χ Χ **PRACH Preambles UL Timeslot ISCP** Χ Χ X Χ Χ Χ Χ Acknowledged Χ Χ X Х Χ Х Χ **PCPCH Access** Preambles Detected PCPCH Х Χ Χ Χ Χ Χ Χ Χ Access Preambles **UTRAN GPS** Χ Х Χ Timing of Cell Frames for UE Positioning SFN-SFN Χ Χ Χ **Observed Time**

Table 4: Allowed Common Measurement Type and Report Characteristics Type combinations

If the *SFN* IE is included in the COMMON MEASUREMENT INITIATION REQUEST message and the *Report Characteristics* IE is other than "Periodic", "On Demand" or "On Modification", the Node B shall regard the Common Measurement Initiation procedure as failed.

8.2.9 Common Measurement Reporting

8.2.9.1 General

Difference

This procedure is used by the Node B to report the result of measurements requested by the CRNC with the Common Measurement Initiation procedure.

8.2.9.2 Successful Operation



Figure 13: Common Measurement Reporting procedure, Successful Operation

If the requested measurement reporting criteria are met, the Node B shall initiate the Common Measurement Reporting procedure. The COMMON MEASUREMENT REPORT message shall use the Node B Control Port.

The *Measurement ID* IE shall be set to the Measurement ID provided by the CRNC when initiating the measurement with the Common Measurement Initiation procedure.

If the achieved measurement accuracy does not fulfil the given accuracy requirement (see ref.[22] and [23]), the Measurement not available shall be reported.

8.2.9.3 Abnormal Conditions

_

8.2.10 Common Measurement Termination

8.2.10.1 General

This procedure is used by the CRNC to terminate a measurement previously requested by the Common Measurement Initiation procedure.

8.2.10.2 Successful Operation



Figure 14: Common Measurement Termination procedure, Successful Operation

This procedure is initiated with a COMMON MEASUREMENT TERMINATION REQUEST message, sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall terminate reporting of common measurements corresponding to the received *Measurement ID* IE.

8.2.10.3 Abnormal Conditions

-

8.2.11 Common Measurement Failure

8.2.11.1 General

This procedure is used by the Node B to notify the CRNC that a measurement previously requested by the Common Measurement Initiation procedure can no longer be reported.

8.2.11.2 Successful Operation



Figure 15: Common Measurement Failure procedure, Successful Operation

This procedure is initiated with a COMMON MEASUREMENT FAILURE INDICATION message, sent from the Node B to the CRNC using the Node B Control Port, to inform the CRNC that a previously requested measurement can no longer be reported. The Node B has locally terminated the indicated measurement.

8.2.11.3 Abnormal Conditions

_

8.2.12 Cell Setup

8.2.12.1 General

This procedure is used to set up a cell in the Node B. The CRNC takes the cell, identified via the *C-ID* IE, into service and uses the resources in the Node B identified via the *Local Cell ID* IE.

8.2.12.2 Successful Operation

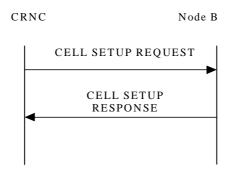


Figure 16: Cell Setup procedure, Successful Operation

The procedure is initiated with a CELL SETUP REQUEST message sent from the CRNC to the Node B using the Node B Control Port. Upon Reception, the Node B shall reserve the necessary resources and configure the new cell according to the parameters given in the message.

[FDD - If the CELL SETUP REQUEST message includes one or more *Secondary CPICH Information* IE, the Node B shall configure and activate the Secondary CPICH(s) in the cell according to received configuration data.]

The *Maximum Transmission Power* IE value shall be stored in the Node B and, at any instance of time, the total maximum output power in the cell shall not be above this value.

[FDD - If the *Closed Loop Timing Adjustment Mode* IE is included in the CELL SETUP REQUEST message, the value shall be stored in the Node B and applied when closed loop Feed-Back mode diversity is used on DPCH.]

[TDD - If the *Reference SFN Offset* IE is included in the CELL SETUP REQUEST message, the Node B where a reference clock is connected shall consider the SFN derived from the synchronisation port and the reference offset for reference time setting. All other Node Bs shall ignore the *Reference SFN Offset* IE if included.]

[FDD - If the *IPDL Parameter Information* IE is included in the CELL SETUP REQUEST message, the parameters defining IPDL shall be stored in the Node B and applied according to the *IPDL Indicator* IE value.]

[3.84Mcps TDD - If the *IPDL Parameter Information* IE containing *IPDL TDD parameters* IE is included in the CELL SETUP REQUEST message, the parameters defining IPDL in 3.84Mcps TDD mode shall be stored in the Node B and applied according to the *IPDL Indicator* IE value.]

[1.28Mcps TDD - If the *IPDL Parameter Information LCR* IE containing *IPDL TDD parameters LCR* IE is included in the CELL SETUP REQUEST message, the parameters defining IPDL in 1.28Mcps TDD mode shall be stored in the Node B and applied according to the *IPDL Indicator* IE value.]

When the cell is successfully configured, the Node B shall store the *Configuration Generation ID* IE value and send a CELL SETUP RESPONSE message as a response.

[FDD - When the cell is successfully configured the CPICH(s), Primary SCH, Secondary SCH, Primary CCPCH and BCH exist.][3.84Mcps TDD - When the cell is successfully configured the SCH, Primary CCPCH and BCH exist and the switching-points for the 3.84Mcps TDD frame structure are defined.] [1.28Mcps TDD - When the cell is successfully configured, the DwPCH, Primary CCPCH and BCH exist and the switching-points for the 1.28Mcps TDD frame structure are defined.] The cell and the channels shall be set to the state Enabled [6].

[FDD – If the CELL SETUP REQUEST message includes the *Maximum PDSCH Power* IE, the Node B shall, if supported, store the values in the Node B and apply the indicated maximum power levels to the PDSCH.]

8.2.12.3 Unsuccessful Operation

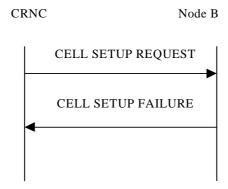


Figure 17: Cell Setup procedure: Unsuccessful Operation

If the Node B cannot set up the cell according to the information given in CELL SETUP REQUEST message the CELL SETUP FAILURE message shall be sent to the CRNC.

In this case, the cell is Not Existing in the Node B. The Configuration Generation ID shall not be changed in the Node B

The Cause IE shall be set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- S-CPICH not supported
- Requested Tx Diversity Mode not supported
- Power level not supported
- Node B Resources unavailable
- IPDL not supported

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.12.4 Abnormal Conditions

If the state of the cell already is Enabled or Disabled [6] when the CELL SETUP REQUEST message is received in the Node B, it shall reject the configuration of the cell and all channels in the CELL SETUP REQUEST message by sending a CELL SETUP FAILURE message with the *Cause* IE set to "Message not compatible with receiver state".

If the Local Cell on which the cell is mapped does not belong to a Power Local Cell Group and the requested maximum transmission power indicated by the *Maximum Transmission Power* IE exceeds the Maximum DL Power Capability of the Local Cell, the Node B shall consider the procedure as having failed and send a CELL SETUP FAILURE message to the CRNC.

If the Local Cell on which the cell is mapped belongs to a Power Local Cell Group and the requested maximum transmission power indicated by *Maximum Transmission Power* IE exceeds the Maximum DL Power Capability of the Power Local Cell Group, the Node B shall consider the procedure as having failed and send a CELL SETUP FAILURE message to the CRNC.

8.2.13 Cell Reconfiguration

8.2.13.1 General

This procedure is used to reconfigure a cell in the Node B.

8.2.13.2 Successful Operation

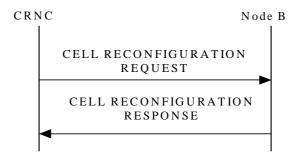


Figure 18: Cell Reconfiguration procedure, Successful Operation

The procedure is initiated with a CELL RECONFIGURATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port. Upon Reception, the Node B shall reconfigure the cell according to the parameters given in the message.

[FDD - If the CELL RECONFIGURATION REQUEST message includes the *Primary SCH Information* IE, the Node B shall reconfigure the Primary SCH power in the cell according to *Primary SCH Power* IE value.]

[FDD - If the CELL RECONFIGURATION REQUEST message includes the *Secondary SCH Information* IE, the Node B shall reconfigure the Secondary SCH power in the cell according to the *Secondary SCH Power* IE value.]

[FDD - If the CELL RECONFIGURATION REQUEST message includes the *Primary CPICH Information* IE, the Node B shall reconfigure the Primary CPICH power in the cell according to the *Primary CPICH Power* IE value. The Node B shall adjust all the transmitted power levels relative to the Primary CPICH power according to the new value.]

[FDD - If the CELL RECONFIGURATION REQUEST message includes one or more *Secondary CPICH Information* IE, the Node B shall reconfigure the power for each Secondary CPICH in the cell according to their *Secondary CPICH Power* IE value.]

[3.84Mcps TDD - If the CELL RECONFIGURATION REQUEST message includes the *SCH Information* IE, the Node B shall reconfigure the SCH power in the cell according to the *SCH Power* IE value.]

[3.84Mcps TDD - If the CELL RECONFIGURATION REQUEST message includes the *Timing Advance Applied* IE, the Node B shall apply the necessary functions for Timing Advance in that cell including reporting of the Rx Timing Deviation measurement, according to the *Timing Advance Applied* IE value.]

[FDD - If the CELL RECONFIGURATION REQUEST message includes the *Primary CCPCH Information* IE, the Node B shall reconfigure the BCH power in the cell according to the *BCH Power* IE value.]

[TDD - If the CELL RECONFIGURATION REQUEST message includes the *Primary CCPCH Information* IE, the Node B shall reconfigure the P-CCPCH power in the cell according to the *P-CCPCH Power* IE value. The Node B shall adjust all the transmitted power levels relative to the Primary CPPCH power according to the new value.]

If the CELL RECONFIGURATION REQUEST message includes the *Maximum Transmission Power* IE, the value shall be stored in the Node B and at any instance of time the total maximum output power in the cell shall not be above this value.

[TDD - If the CELL RECONFIGURATION REQUEST message includes the *Timeslot Information* IE, the Node B shall reconfigure switching-point structure in the cell according to the *Timeslot* IE value.]

[TDD - If the CELL RECONFIGURATION REQUEST message includes any of the *Constant Value* IEs, the Node B shall use these values when generating the appropriate SIB.]

[FDD -If the CELL RECONFIGURATION REQUEST message includes the *IPDL Parameter Information* IE with the *IPDL Indicator* IE set to the value "Active" the Node B shall apply the IPDL in that cell according to the latest downloaded parameters defined by the *IPDL FDD Parameters* IE]

[3.84Mcps TDD - If the CELL RECONFIGURATION REQUEST message includes the *IPDL Parameter Information* IE with the *IPDL Indicator* IE set to the value "Active", the Node B shall apply the IPDL in that cell according to the latest downloaded parameters defined by the *IPDL TDD Parameters* IE.]

[1.28Mcps TDD - If the CELL RECONFIGURATION REQUEST message includes the *IPDL Parameter Information LCR* IE with the *IPDL Indicator* IE set to the value "Active", the Node B shall apply the IPDL in that cell according to the latest downloaded parameters defined by the *IPDL TDD Parameters LCR* IE.]

If the CELL RECONFIGURATION REQUEST message includes the *IPDL Parameter Information* IE with *the IPDL Indicator* IE set to the value "Inactive", the Node B shall deactivate the ongoing IPDL.

When the cell is successfully reconfigured, the Node B shall store the new *Configuration Generation ID* IE value and send a CELL RECONFIGURATION RESPONSE message as a response.

If the CELL RECONFIGURATION REQUEST message includes the *Synchronisation Configuration* IE, the Node B shall reconfigure the indicated parameters in the cell according to the value of the *N_INSYNC_IND*, *N_OUTSYNC_IND* and *T_RLFAILURE* IEs. When the parameters in the *Synchronisation Configuration* IE affect the thresholds applied to a RL set, the Node B shall immediately apply the new thresholds. When applying the new thresholds, the Node B shall not change the state or value of any of the timers and counters for which the new thresholds apply.

[FDD – If the CELL RECONFIGURATION REQUEST message includes the *Maximum PDSCH Power* IE, the Node B shall, if supported, store the values in the Node B and apply the indicated maximum power levels to the PDSCH. For spreading factors for which a maximum PDSCH power level was already configured and the CELL RECONFIGURATION REQUEST does not provide a new value for the concerning spreading factor, the Node B shall continue to use the existing value.]

8.2.13.3 Unsuccessful Operation

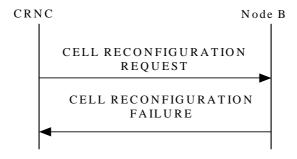


Figure 19: Cell Reconfiguration procedure: Unsuccessful Operation

If the Node B cannot reconfigure the cell according to the information given in CELL RECONFIGURATION REQUEST message, the CELL RECONFIGURATION FAILURE message shall be sent to the CRNC.

In this case, the Node B shall keep the old configuration of the cell and the Configuration Generation ID shall not be changed in the Node B.

The Cause IE shall be set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- Power level not supported
- Node B Resources unavailable
- IPDL not supported

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.13.4 Abnormal Conditions

If the *IPDL Indicator* IE set to the value "Active" is included in the CELL RECONFIGURATION REQUEST message and there is active IPDL ongoing in the Node B, the Node B shall respond with the CELL RECONFIGURATION FAILURE message with the cause value "IPDL already activated".]

If the *IPDL Indicator* IE set to the value "Active" is included in the CELL RECONFIGURATION REQUEST message and there is no IPDL stored in the Node B defining the IPDL, the Node B shall respond with the CELL RECONFIGURATION FAILURE message with the cause value "IPDL parameters not available".]

If the Local Cell on which the cell is mapped does not belong to of a Power Local Cell Group and the requested maximum transmission power indicated by the *Maximum Transmission Power* IE exceeds the Maximum DL Power Capability of the Local Cell, the Node B shall consider the procedure as having failed and send a CELL RECONFIGURATION FAILURE message to the CRNC.

If the Local Cell on which the cell is mapped belongs to a Power Local Cell Group and the requested maximum transmission power indicated by *Maximum Transmission Power* IE exceeds the Maximum DL Power Capability of the Power Local Cell Group, the Node B shall consider the procedure as having failed and send a CELL RECONFIGURATION FAILURE message to the CRNC.

8.2.14 Cell Deletion

8.2.14.1 General

This procedure is used to delete a cell in the Node B.

8.2.14.2 Successful Operation

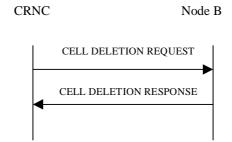


Figure 20: Cell Deletion procedure, Successful Operation

The procedure is initiated with a CELL DELETION REQUEST message sent from the CRNC to the Node B using the Node B Control Port. Upon reception, the Node B shall remove the cell and any remaining common and dedicated channels within the cell. The states for the cell and the deleted common channels shall be set to Not Existing [6]. The Node B shall remove all Radio Links from the Cell and all Node B Communication Contexts that as a result do not have

a Radio Link. The Node B shall also initiate release of the user plane transport bearers for the removed common and dedicated channels.

When the cell is deleted, the Node B shall send a CELL DELETION RESPONSE message as a response.

8.2.14.3 Unsuccessful Operation

-

8.2.14.4 Abnormal Conditions

If the CELL DELETION REQUEST message includes a *C-ID* IE value that is not existing in the Node B, the Node B shall respond with the CELL DELETION RESPONSE message.

8.2.15 Resource Status Indication

8.2.15.1 General

This procedure is used in the following cases:

- 1. When a Local Cell becomes Existing at the Node B.
- 2. When a Local Cell is to be deleted in Node B, i.e. becomes Not Existing.
- 3. When the capabilities of the Local Cell change at the Node B.
- 4. When a cell has changed its capability and/or its resource operational state at the Node B.
- 5. When common physical channels and/or common transport channels have changed their capabilities at the Node B
- 6. When a Communication Control Port has changed its resource operational state at the Node B.
- 7. When a Local Cell Group has changed its resource capability at the Node B.

Each of the above cases shall trigger a Resource Status Indication procedure and the RESOURCE STATUS INDICATION message shall contain the logical resources affected for that case and the cause value when applicable.

8.2.15.2 Successful Operation



Figure 21: Resource Status Indication procedure, Successful Operation

The procedure is initiated with a RESOURCE STATUS INDICATION message sent from the Node B to the CRNC using the Node B Control Port.

Local Cell Becomes Existing:

When a Local Cell becomes Existing at the Node B, the Node B shall make it available to the CRNC by sending a RESOURCE STATUS INDICATION message containing a "No Failure" Indication, the *Local Cell ID* IE and the *Add/Delete Indicator* IE set equal to "Add".

When the capacity credits and consumption laws are shared between several Local Cells, the Node B includes the *Local Cell Group ID* IE for the Local Cell. If the *Local Cell Group Information* IE has not already been reported in a previous RESOURCE STATUS INDICATION message, the Node B shall include the capacity credits and the consumption laws in the *Local Cell Group Information* IE.

If the Local Cell IE contains both the DL or Global Capacity Credit IE and the UL Capacity Credit IE, then the internal resource capabilities of the Local Cell are modelled independently in the Uplink and Downlink direction. If the UL Capacity Credit IE is not present, then the internal resource capabilities of the Local Cell are modelled as shared resources between Uplink and Downlink. If the Local Cell Group Information IE contains both the DL or Global Capacity Credit IE and the UL Capacity Credit IE, then the internal resource capabilities of the Local Cell Group are modelled independently in the Uplink and Downlink direction. If the UL Capacity Credit IE is not present, then the internal resource capabilities of the Local Cell Group are modelled as shared resources between Uplink and Downlink.

[TDD - The Node B shall include the *Reference Clock Availability* IE within the *Local Cell* IE to indicate the availability of a Reference clock connected to the Local Cell, when a Local Cell is made available to the CRNC.]

If the Node B internal power resources are pooled for a group of Local Cells, the Node B shall include the *Power Local Cell Group ID* IE for the Local Cell. If the *Power Local Cell Group Information* IE has not already been reported in a previous RESOURCE STATUS INDICATION message, the Node B shall include this IE for the concerned Power Local Cell Group in this message. Furthermore, the sum of the Maximum DL Power Capability of all the Local Cells belonging to the same Power Local Cell Group shall not exceed the Maximum DL Power Capability of the concerned Power Local Cell Group.

Local Cell Deletion:

When a Local Cell is to be deleted in the Node B, i.e. becomes Not Existing, the Node B shall withdraw the Local Cell from the CRNC by sending a RESOURCE STATUS INDICATION message containing a "No Failure" Indication, the *Local Cell ID* IE and the *Add/Delete Indicator* IE set to "Delete". The Node B shall not withdraw a previously configured cell at the Node B that the CRNC had configured using the Cell Setup procedure, until the CRNC has deleted that cell at the Node B using the Cell Delete procedure.

Capability Change of a Local Cell:

When the capabilities of a Local Cell change at the Node B, the Node B shall report the new capability by sending a RESOURCE STATUS INDICATION message containing a "Service Impacting" Indication and the *Local Cell ID* IE.

The Node B shall include the Minimum DL Power Capability IE when it is known by the Node B.

If the maximum DL power capability of the Local Cell has changed, the new capability shall be indicated in the *Maximum DL Power Capability* IE.

If the DL capability for supporting the minimum spreading factor has changed, the new capability shall be indicated in the *Minimum Spreading Factor* IE.

[TDD - If the availability of the Reference clock connected to a Local Cell has changed, the new availability condition shall be indicated in the *Reference Clock Availability* IE.]

The Cause IE in the RESOURCE STATUS INDICATION message shall be set to the appropriate value.

If the internal resource capabilities of the Local Cell are affected, it shall be reported in the following way:

- If the internal resource capabilities of the Local Cell are modelled as shared resources between Uplink and Downlink, the new capacity shall be reported in the *DL or Global Capacity Credit* IE.
- If the internal resource capabilities of the Local Cell are modelled independently in the Uplink and Downlink direction, then the *DL or Global Capacity Credit* IE and the *UL Capacity Credit* IE shall be present in the RESOURCE STATUS INDICATION.

Capability Change of a Cell:

When the capabilities and/or resource operational state of a cell changes at the Node B, the Node B shall report the new capability and/or resource operational state by sending a RESOURCE STATUS INDICATION message containing a "Service Impacting" Indication, the *C-ID* IE, the *Resource Operational State* IE and the *Availability Status* IE. The *Cause* IE in the RESOURCE STATUS INDICATION message shall be set to the appropriate value.

Capability Change of a Common Physical Channel and/or Common Transport Channel:

The Node B shall not delete any common or dedicated channels due to the cell being "Disabled". For all affected common and dedicated channels, the Node B shall report the impact to the CRNC with the relevant procedures.

When the capabilities and/or resource operational state of common physical channels and/or common transport channels have changed, the Node B shall report the new capability and/or resource operational state by sending a RESOURCE STATUS INDICATION message containing a "Service Impacting" Indication, the *Resource Operational State* IE and the *Availability Status* IE set to appropriate values for the affected channel(s). The *Cause* IE in the RESOURCE STATUS INDICATION message shall be set to the appropriate value.

When a power value for a common physical channel and/or a common transport channel becomes beyond the supported power value range due to a change in capability in the Node B, it shall be reported to the CRNC in the RESOURCE STATUS INDICATION message, with the *Resource Operational State* IE set to "Enabled", the *Availability Status* IE set to "Degraded" and the *Cause* IE set to "Power level not supported". Affected channels shall use the nearest power value that is supported.

Capability Change of a Communication Control Port:

When the resource operational state of a Communication Control Port has changed, the Node B shall report the new resource operational state by sending a RESOURCE STATUS INDICATION message containing a "Service Impacting" Indication and the *Communication Control Port ID* IE. The *Cause* IE in the RESOURCE STATUS INDICATION message shall be set to the appropriate value.

Capability Change of a Local Cell Group:

When the resource capabilities of a Local Cell Group change at the Node B, the Node B shall report the new capability by sending a RESOURCE STATUS INDICATION message containing a "Service Impacting" Indication and the *Local Cell Group Information* IE reporting the change. The *Cause* IE in the RESOURCE STATUS INDICATION message shall be set to an appropriate value. If the RESOURCE STATUS INDICATION message contains both the *DL or Global Capacity Credit* IE and the *UL Capacity Credit* IE, then the internal resource capabilities of the Node B are modelled independently in the Uplink and Downlink direction. If the *UL Capacity Credit* IE is not present, then the internal resource capabilities of the Node B are modelled as shared resources between Uplink and Downlink.

Capability Change of a Power Local Cell Group:

When the power capability of a Power Local Cell Group changes at the Node B, the Node B shall report the new capability by sending a RESOURCE STATUS INDICATION message with the *Indication Type* IE set equal to "Service Impacting" and the *Power Local Cell Group Information* IE reporting the change. The *Cause* IE in the RESOURCE STATUS INDICATION message shall be set to an appropriate value. In this case, the Node B shall also include the *Maximum DL Power Capability* IE in the *Local Cell Information* IE for all the Local Cells belonging to the concerned Power Local Cell Group. Furthermore, the sum of the Maximum DL Power Capability of all the Local Cells belonging to the same Power Local Cell Group shall not exceed the Maximum DL Power Capability of the concerned Power Local Cell Group.

General:

When the RESOURCE STATUS INDICATION message is used to report an error, only one cause value for all reported objects can be sent in one message. When the RESOURCE STATUS INDICATION message is used to clear errors, only all errors for one object can be cleared per message. It is not possible to clear one out of several errors for one object.

8.2.15.3 Abnormal Conditions

_

8.2.16 System Information Update

8.2.16.1 General

The System Information Update procedure performs the necessary operations in order for the Node B to apply the correct scheduling of and/or to include the appropriate contents to the system information segments broadcast on the BCCH.

8.2.16.2 Successful Operation




Figure 22: System Information Update procedure, Successful Operation

The procedure is initiated with a SYSTEM INFORMATION UPDATE REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

The Node B shall consider the requested updates to the BCCH schedule in the same order as the MIB/SB/SIB information is included in the SYSTEM INFORMATION UPDATE REQUEST message.

If the SYSTEM INFORMATION UPDATE REQUEST message includes the *BCCH Modification Time* IE, the updates to the BCCH schedule (possibly consisting of IB occurrence additions, IB occurrence deletions and IB occurrence contents updates) indicated in the SYSTEM INFORMATION UPDATE REQUEST message shall be applied by the Node B at the first time instance starting from the SFN value set by the *BCCH Modification Time* IE. If no *BCCH Modification Time* IE is included, the updates to the BCCH schedule shall be applied as soon as possible.

Information Block addition

If the SYSTEM INFORMATION UPDATE REQUEST message includes segments of a certain MIB/SB/SIB, the Node B shall assume that all segments for that Information Block are included in the message and ordered with increasing Segment Index (starting from 0). For each included segment, segment type information and *IB SG POS* IE are also given in the SYSTEM INFORMATION UPDATE REQUEST message.

The Node B shall determine the correct cell system frame number(s) (SFN) for transmission of the segments of system information, from the scheduling parameters provided in the SYSTEM INFORMATION UPDATE REQUEST message. The SFN for transmitting the segments shall be determined by the *IB SG REP* IE and *IB SG POS* IE such that:

- SFN mod IB_SG_REP = IB_SG_POS

If the SYSTEM INFORMATION UPDATE REQUEST message contains Master Information Block (MIB) segments in addition to SIB or SB segments, the MIB segments shall first be sent in the physical channel by the Node B. Once these MIB segments have been sent in the physical channel, the updated SB/SIB segments shall then be sent in the physical channel.

Only if the inclusion of each new IB segment in the BCCH schedule leads to a valid segment combination according to [18], the Node B shall accept the system information update.

If the *SIB Originator* IE value is set to "Node B", the Node B shall create the SIB segment of the SIB type given by the *IB Type* IE and autonomously update the SIB segment and apply the scheduling and repetition as given by the *IB SG REP* IE and *IB SG POS* IE.

SIBs originating from the Node B can only be SIBs containing information that the Node B can obtain on its own.

Information Block deletion

If an IB Deletion is indicated in an instance of *MIB/SB/SIB information* IE in the SYSTEM INFORMATION UPDATE REQUEST message, the Node B shall delete the IB indicated by the *IB Type* IE and *IB OC ID* IE from the transmission schedule on BCCH.

Information Block update

If the SYSTEM INFORMATION UPDATE REQUEST message contains segments for an IB without *IB SG REP* IE and *IB SG POS* IE and there is already an IB in the BCCH schedule with the same IB Type and IB OC ID which is not requested to be deleted from the BCCH schedule by an IB deletion indicated in a *MIB/SB/SIB information* IE repetition present in the SYSTEM INFORMATION UPDATE REQUEST message before the IB segments are included, then the Node B shall only update the contents of the IB segments without any modification in segment scheduling.

If the Node B successfully completes the updating of the physical channel scheduling cycle according to the parameters given in the SYSTEM INFORMATION UPDATE REQUEST message, it shall respond to the CRNC with a SYSTEM INFORMATION UPDATE RESPONSE message.

8.2.16.3 Unsuccessful Operation




Figure 23: System Information Update procedure: Unsuccessful Operation

If the Node B is unable to update the physical channel scheduling cycle according to all the parameters given in the SYSTEM INFORMATION UPDATE REQUEST message, it shall respond with a SYSTEM INFORMATION UPDATE FAILURE message with an appropriate cause value.

The Node B shall not incorporate any of the requested changes into the physical channel scheduling cycle, and the previous system information configuration shall remain intact.

Typical cause values are:

Radio Network Layer Cause

- SIB Origination in Node B not Supported

Miscellaneous Cause

- Hardware failure
- Control Processing overload
- O&M Intervention

8.2.16.4 Abnormal Conditions

The Node B shall reject, with the cause value "SIB origination in Node B not supported", requests for Node B originated system information blocks that make use of a value tag.

The Node B shall reject the requested update with cause value "BCCH scheduling error" if:

- After having handled a certain MIB/SB/SIB information IE repetition, an illegal BCCH schedule results;
- If a MIB/SB/SIB Information IE repetition includes an IB SG REP IE or an IB SG POS IE and there is already an IB in the BCCH schedule with the same IB Type and IB OC ID which is not requested to be deleted from the BCCH schedule by an IB deletion indicated in a MIB/SB/SIB information IE repetition present in the SYSTEM INFORMATION UPDATE REQUEST message before the IB addition is indicated. This rule shall apply even if the scheduling instructions in IB SG REP IE and IB SG POS IE were the same as the current scheduling instructions for the concerned IB;
- If a *MIB/SB/SIB Information* IE repetition includes no *IB SG REP* IE and *IB SG POS* IE and there is no IB in the BCCH schedule with the same IB Type and IB OC ID;
- If a *MIB/SB/SIB Information* IE repetition includes no *IB SG REP* IE and *IB SG POS* IE and there is already an IB in the BCCH schedule with the same IB Type and IB OC ID but it is requested to be deleted from the BCCH schedule by an IB deletion indicated in a *MIB/SB/SIB information* IE repetition present in the SYSTEM INFORMATION UPDATE REQUEST message before the IB addition is indicated.

8.2.17 Radio Link Setup

8.2.17.1 General

This procedure is used for establishing the necessary resources for a new Node B Communication Context in the Node B.

[FDD – The Radio Link Setup procedure is used to establish one or more radio links. The procedure establishes one or more DCHs on all radio links, and in addition, it can include the establishment of one or more DSCHs or an HS-DSCH on one radio link.]

[TDD – The Radio Link Setup procedure is used to establish one radio link including one or more transport channels. The transport channels can be a mix of DCHs, DSCHs, and USCHs, or DCHs and an HS-DSCH, including also combinations where one or more transport channel types are not present.]

8.2.17.2 Successful Operation

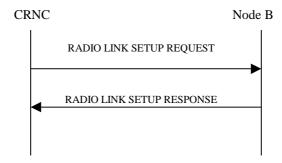


Figure 24: Radio Link Setup procedure, Successful Operation

The procedure is initiated with a RADIO LINK SETUP REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception of the RADIO LINK SETUP REQUEST message, the Node B shall reserve necessary resources and configure the new Radio Link(s) according to the parameters given in the message.

The Node B shall prioritise resource allocation for the RL(s) to be established according to Annex A.

Transport Channels Handling:

DCH(s):

[TDD – If the *DCH Information* IE is present, the Node B shall configure the new DCH(s) according to the parameters given in the message.]

If the RADIO LINK SETUP REQUEST message includes a *DCH Information* IE with multiple *DCH Specific Info* IEs, then the Node B shall treat the DCHs in the *DCH Information* IE as a set of co-ordinated DCHs. The Node B shall include these DCHs in the new configuration only if it can include all of them in the new configuration.

[FDD – For DCHs which do not belong to a set of co-ordinated DCHs with the *QE-Selector* IE set to "selected", the Transport channel BER from that DCH shall be the base for the QE in the UL data frames. If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE, ref. [16]. If the *QE-Selector* IE is set to "non-selected", the Physical channel BER shall be used for the QE in the UL data frames, ref. [16].]

For a set of co-ordinated DCHs, the Transport channel BER from the DCH with the *QE-Selector* IE set to "selected" shall be used for the QE in the UL data frames, ref. [16]. [FDD - If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE, ref. [16]. If all DCHs have *QE-Selector* IE set to "non-selected", the Physical channel BER shall be used for the QE, ref. [16]].

The Node B shall use the included *UL FP Mode* IE for a DCH or a set of co-ordinated DCHs as the FP Mode in the Uplink of the user plane for the DCH or the set of co-ordinated DCHs in the configuration.

The Node B shall use the included *ToAWS* IE for a DCH or a set of co-ordinated DCHs as the Time of Arrival Window Start Point in the user plane for the DCH or the set of co-ordinated DCHs in the configuration.

The Node B shall use the included *ToAWE* IE for a DCH or a set of co-ordinated DCHs as the Time of Arrival Window End Point in the user plane for the DCH or the set of co-ordinated DCHs in the configuration.

The received *Frame Handling Priority* IE specified for each Transport Channel should be used when prioritising between different frames in the downlink on the radio interface in congestion situations within the Node B once the new RL(s) has been activated.

[FDD – The *Diversity Control Field* IE indicates for each RL (except the first RL in the message) whether the Node B shall combine the concerned RL or not.

- If the Diversity Control Field IE is set to "May", the Node B shall decide for either of the alternatives.
- If the *Diversity Control Field* IE is set to "Must", the Node B shall combine the RL with one of the other RL.
- If the *Diversity Control Field* IE is set to "Must not", the Node B shall not combine the RL with any other existing RL.

Diversity combining is applied to Dedicated Transport Channels (DCH), i.e. it is not applied to the DSCHs. When a new RL is to be combined, the Node B shall choose which RL(s) to combine it with.]

[FDD – In the RADIO LINK SETUP RESPONSE message, the Node B shall indicate for each RL with the Diversity Indication in the *RL Information Response* IE whether the RL is combined or not.

- In case of combining, the *RL ID* IE indicates one of the existing RLs that the concerned RL is combined with.
- In case of not combining, the Node B shall include in the *DCH Information Response* IE in the RADIO LINK SETUP RESPONSE message the *Binding ID* IE and *Transport Layer Address* IE for the transport bearer to be established for each DCH of this RL.]

[TDD – The Node B shall include in the RADIO LINK SETUP RESPONSE message the *Binding ID* IE and *Transport Layer Address* IE for the transport bearer to be established for each DCH of this RL.]

In the case of a set of co-ordinated DCHs, the *Binding ID* IE and the *Transport Layer Address* IE shall be specified for only one of the DCHs in the set of co-ordinated DCHs.

DSCH(s):

If the *DSCH Information* IE is present, the Node B shall configure the new DSCH(s) according to the parameters given in the message.

[FDD – If the RADIO LINK SETUP REQUEST message includes the *TFC12 Bearer Information* IE then the Node B shall support the establishment of a transport bearer on which the DSCH TFCI Signaling control frames shall be received. The Node B shall manage the time of arrival of these frames according to the values of ToAWS and ToAWE specified in the IEs. The *Binding ID* IE and the *Transport Layer Address* IE for the new bearer to be set up for this purpose shall be returned in the RADIO LINK SETUP RESPONSE message.]

If the RADIO LINK SETUP REQUEST message includes the *Transport Layer Address* IE and *Binding ID* IE in the *DSCH Information* IE, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for the DSCH.

The Node B shall include in the RADIO LINK SETUP RESPONSE the *Binding ID* IE and the *Transport Layer Address* IE for the transport bearer to be established for each DSCH of this RL.

[TDD - USCH(s)]:

[TDD – If the *USCH Information* IE is present, the Node B shall configure the new USCH(s) according to the parameters given in the message.]

[TDD - If the RADIO LINK SETUP REQUEST message includes the *Transport Layer Address* IE and *Binding ID* IE in the *USCH Information* IE, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for the USCH.]

[TDD –If the *USCH Information* IE is present, the Node B shall include in the RADIO LINK SETUP RESPONSE message the *Binding ID* IE and the *Transport Layer Address* IE for the transport bearer to be established for each USCH of this RL.]

HS-DSCH(s):

If the *HS-DSCH Information* IE is present, the Node B shall configure the new HS-DSCH resources according to the parameters given in the message.

[FDD – If the *HS-DSCH Information* IE and the *HS-PDSCH RL ID* IE are present, the Node B shall configure the new HS-DSCH resources in the radio link specified by the HS-PDSCH RL ID.]

In addition, the Node B shall include in the RADIO LINK SETUP RESPONSE message the *Binding ID* IE and *Transport Layer Address* IE for the transport bearers to be established for the HS-DSCH MAC-d flows of this RL.

If the RADIO LINK SETUP REQUEST message includes the *Transport Layer Address* IE and *Binding ID* IE in the *HS-DSCH Information* IE for an HS-DSCH MAC-d flow, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for the concerned HS-DSCH MAC-d flow.

If the *HS-DSCH-RNTI* IE is present, the Node B shall use the HS-DSCH RNTI value for HS-DSCH processing for the respective Node B Communication Context.

The Node B shall include the *HS-DSCH Initial Capacity Allocation* IE in the RADIO LINK SETUP RESPONSE message for each MAC-d flow, if the Node B allows the CRNC to start transmission of the MAC-d PDUs before the Node B has allocated capacity on user plane as described in [24].

Physical Channels Handling:

[FDD – Compressed Mode]:

[FDD – If the RADIO LINK SETUP REQUEST message includes the *Transmission Gap Pattern Sequence Information* IE, the Node B shall store the information about the Transmission Gap Pattern Sequences to be used in the Compressed Mode Configuration. This Compressed Mode Configuration shall be valid in the Node B until the next Compressed Mode Configuration is configured in the Node B or the Node B Communication Context is deleted.]

[FDD – If the *Downlink compressed mode method* IE in one or more Transmission Gap Pattern Sequence is set to "SF/2" in the RADIO LINK SETUP REQUEST message, the Node B shall use or not the alternate scrambling code as indicated for each DL Channelisation Code in the *Transmission Gap Pattern Sequence Code Information* IE.]

[FDD – If the RADIO LINK SETUP REQUEST message includes the *Transmission Gap Pattern Sequence Information* IE and the *Active Pattern Sequence Information* IE, the Node B shall use the information to activate the indicated Transmission Gap Pattern Sequence(s) in the new RL. The received *CM Configuration Change CFN* refers to the latest passed CFN with that value The Node B shall treat the received *TGCFN* IEs as follows:]

- [FDD If any received *TGCFN* IE has the same value as the received *CM Configuration Change CFN* IE, the Node B shall consider the concerned Transmission Gap Pattern Sequence as activated at that CFN.]
- [FDD If any received *TGCFN* IE does not have the same value as the received *CM Configuration Change CFN* IE but the first CFN after the CM Configuration Change CFN with a value equal to the *TGCFN* IE has already passed, the Node B shall consider the concerned Transmission Gap Pattern Sequence as activated at that CFN.]
- [FDD For all other Transmission Gap Pattern Sequences included in the *Active Pattern Sequence Information* IE, the Node B shall activate each Transmission Gap Pattern Sequence at the first CFN after the CM Configuration Change CFN with a value equal to the *TGCFN* IE for the Transmission Gap Pattern Sequence.]

[FDD – DL Code Information]:

[FDD – When more than one DL DPDCH is assigned per RL, the segmented physical channel shall be mapped on to DL DPDCHs according to [8]. When *p* number of DL DPDCHs are assigned to each RL, the first pair of DL Scrambling Code and FDD DL Channelisation Code Number corresponds to "*PhCH number I*", the second to "*PhCH number 2*", and so on until the *pth* to "*PhCH number p*".]

[TDD – PDSCH RL ID]:

[TDD – If the *PDSCH RL ID* IE is included in RADIO LINK SETUP REQUEST message, the Node B shall use the PDSCH RL ID as an identifier for the PDSCH and/or PUSCH in this radio link.]

General:

[FDD – If the *Propagation Delay* IE is included, the Node B may use this information to speed up the detection of L1 synchronisation.]

[FDD – The *UL SIR Target* IE included in the message shall be used by the Node B as initial UL SIR target for the UL inner loop power control.]

[1.28Mcps TDD – The *UL SIR Target* IE included in the message shall be used by the Node B as initial UL SIR target for the UL inner loop power control according [19] and [21].]

[FDD – If the received *Limited Power Increase* IE is set to "Used", the Node B shall, if supported, use Limited Power Increase according to ref. [10] subclause 5.2.1 for the inner loop DL power control.]

[FDD – If the *TFCI Signalling Mode* IE within the RADIO LINK SETUP REQUEST message indicates that there shall be a hard split on the TFCI field but the *TFCI2 Bearer Information* IE is not included in the message, then the Node B shall transmit the TFCI2 field with zero power.]

[FDD - If the *TFCI Signalling Mode* IE within the RADIO LINK SETUP REQUEST message indicates that there shall be a hard split on the TFCI and the *TFCI2 Bearer Information* IE is included in the message, then the Node B shall transmit the TFCI2 field with zero power until Synchronization is achieved on the TFCI2 transport bearer and the first valid DSCH TFCI Signalling control frame is received on this bearer (see ref. [24]).]

[FDD – If the RADIO LINK SETUP REQUEST message includes the *Length Of TFC12* IE, then the Node B shall apply the length of TFCI (field 2) indicated in the message.]

[FDD – If the RADIO LINK SETUP REQUEST message does not include the *Length Of TFCI2* IE and the *Split Type* IE is present with the value "Hard", then the Node B shall assume the length of the TFCI (field 2) is 5 bits.]

Radio Link Handling:

[FDD – Transmit Diversity]:

[FDD – When the *Diversity Mode* IE is set to "STTD", "Closedloop mode1" or "Closedloop mode2", the Node B shall activate/deactivate the Transmit Diversity for each Radio Link in accordance with the Transmit Diversity Indication IE]

DL Power Control:

[FDD – The Node B shall start any DL transmission using the initial DL power specified in the message on each DL DPCH of the RL until either UL synchronisation on the Uu interface is achieved for the RLS or Power Balancing is activated. No inner loop power control or balancing shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[10], subclause 5.2.1.2) and the power control procedure (see subclause 8.3.7), but shall always be kept within the maximum and minimum limit specified in the RADIO LINK SETUP REQUEST message. During compressed mode, the $P_{SIR}(k)$, as described in ref.[10] subclause 5.2.1.3, shall be added to the maximum DL power in slot k.]

[FDD - If the *DPC Mode* IE is present in the RADIO LINK SETUP REQUEST message, the Node B shall apply the DPC mode indicated in the message and be prepared that the DPC mode may be changed during the life time of the RL. If the *DPC Mode* IE is not present in the RADIO LINK SETUP REQUEST message, DPC mode 0 shall be applied (see ref. [10]).]

[TDD – The Node B shall determine the initial CCTrCH DL power for each CCTrCH by the following rule: If the *CCTrCH Initial DL Transmission Power* IE is included for that CCTrCH, then the Node B shall use that power for the initial CCTrCH DL power, otherwise the initial CCTrCH DL power is the *Initial DL Transmission Power* IE included in the *RL Information* IE. The Node B shall start any DL transmission on each CCTrCH using the initial CCTrCH DL power, as determined above, on each DL DPCH and on each Time Slot of the CCTrCH until the UL synchronisation on the Uu interface is achieved for the CCTrCH. No inner loop power control shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[22], subclause 4.2.3.3), but shall always be kept within the maximum and minimum limit specified in the RADIO LINK SETUP REQUEST message.]

[TDD – If the [3.84Mcps TDD – *DL Time Slot ISCP Info* IE] or [1.28Mcps TDD – *DL Timeslot ISCP LCR* IE] is present, the Node B shall use the indicated value when deciding the initial DL TX Power for each timeslot as specified in [21], i.e. it shall reduce the DL TX power in those downlink timeslots of the radio link where the interference is low, and increase the DL TX power in those timeslots where the interference is high, while keeping the total downlink power in the radio link unchanged].

[FDD – If the received *Inner Loop DL PC Status* IE is set to "Active", the Node B shall activate the inner loop DL power control for all RLs. If *Inner Loop DL PC Status* IE is set to "Inactive", the Node B shall deactivate the inner loop DL power control for all RLs according to ref. [10].]

[FDD – If the RADIO LINK SETUP REQUEST message includes the *DL Power Balancing Information* IE and the *Power Adjustment Type* IE is set to "Common" or "Individual", the Node B shall activate the power balancing, if activation of power balancing by the RADIO LINK SETUP REQUEST message is supported, according to subclause 8.3.7, using the *DL Power Balancing Information* IE. If the Node B starts the DL transmission and the activation of the power balancing at the same CFN, the initial power of the power balancing shall be set to the indicated DL TX power level (if received) or the decided DL TX power level on each DL channelisation code of a RL.]

[FDD – If activation of power balancing by the RADIO LINK SETUP REQUEST message is supported by the Node B, the Node B shall include the *DL Power Balancing Activation Indicator* IE in the *RL Information Response* IE in the RADIO LINK SETUP RESPONSE message.]

General:

If the RADIO LINK SETUP REQUEST message includes the *RL Specific DCH Information* IE, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for the DCH or the set of co-ordinated DCHs.

[FDD – If the RADIO LINK SETUP REQUEST message includes the SSDT Cell Identity IE and the S-Field Length IE, the Node B shall activate SSDT, if supported, using the SSDT Cell Identity IE and SSDT Cell Identity Length IE.]

[FDD – If the RADIO LINK SETUP REQUEST message includes the *Qth Parameter* IE in addition to the *SSDT Cell Identity* IE, the Node B shall use the *Qth Parameter* IE, if Qth signalling is supported, when SSDT is activated.]

[FDD – Irrespective of SSDT activation, the Node B shall include in the RADIO LINK SETUP RESPONSE message an indication concerning the capability to support SSDT on this RL. Only if the RADIO LINK SETUP REQUEST message requested SSDT activation and the RADIO LINK SETUP RESPONSE message indicates that the SSDT capability is supported for this RL, SSDT is activated in the Node B.]

[FDD - If the RADIO LINK SETUP REQUEST message includes the *SSDT Cell Identity for EDSCHPC* IE, the Node B shall activate enhanced DSCH power control, if supported, using the *SSDT Cell Identity For EDSCHPC* IE and *SSDT Cell Identity Length* IE as well as *Enhanced DSCH PC* IE in accordance with ref. [10] subclause 5.2.2. If the RADIO LINK SETUP REQUEST message includes both *SSDT Cell Identity* IE and *SSDT Cell Identity For EDSCHPC* IE, then the Node B shall ignore the value in *SSDT Cell Identity For EDSCHPC* IE. If the enhanced DSCH power control is activated and the TFCI power control in DSCH hard split mode is supported, the primary/secondary status determination in the enhanced DSCH power control is also applied to the TFCI power control in DSCH hard split mode.]

The Node B shall start reception on the new RL(s) after the RLs are successfully established.

[FDD – Radio Link Set Handling]:

[FDD – The *First RLS Indicator* IE indicates if the concerned RL shall be considered part of the first RLS established towards this UE. The *First RLS Indicator* IE shall be used by the Node B together with the value of the *DL TPC Pattern 01 Count* IE which the Node B has received in the Cell Setup procedure, to determine the initial TPC pattern in the DL of the concerned RL and all RLs which are part of the same RLS, as described in [10], section 5.1.2.2.1.2.]

[FDD – For each RL not having a common generation of the TPC commands in the DL with another RL, the Node B shall assign the *RL Set ID* IE included in the RADIO LINK SETUP RESPONSE message a value that uniquely identifies the RL Set within the Node B Communication Context.]

[FDD – For all RLs having a common generation of the TPC commands in the DL with another RL, the Node B shall assign the *RL Set ID* IE included in the RADIO LINK SETUP RESPONSE message the same value. This value shall uniquely identify the RL Set within the Node B Communication Context.]

[FDD – The UL out-of-sync algorithm defined in [10] shall, for each of the established RL Set(s), use the maximum value of the parameters N_OUTSYNC_IND and T_RLFAILURE that are configured in the cells supporting the radio links of the RL Set. The UL in-sync algorithm defined in [10] shall, for each of the established RL Set(s), use the minimum value of the parameters N_INSYNC_IND, that are configured in the cells supporting the radio links of the RL Set.]

Response Message:

If the RLs are successfully established, the Node B shall and respond with a RADIO LINK SETUP RESPONSE message.

After sending the RADIO LINK SETUP RESPONSE message the Node B shall continuously attempt to obtain UL synchronisation on the Uu interface.

For each RL for which the *Delayed Activation* IE is not included in the RADIO LINK SETUP REQUEST message, the Node B shall:

- [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16].]
- [TDD start transmission on the new RL immediately as specified in [16].]

For each RL for which the *Delayed Activation* IE is included in the RADIO LINK SETUP REQUEST message, the Node B shall:

- if the *Delayed Activation* IE indicates "Separate Indication":
 - not start any DL transmission for the concerned RL on the Uu interface;
- if the Delayed Activation IE indicates "CFN":
 - [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16], however never before the CFN indicated in the *Activation CFN* IE.]
 - [TDD start transmission on the new RL at the CFN indicated in the Activation CFN IE as specified in [16].]

8.2.17.3 Unsuccessful Operation



Figure 25: Radio Link Setup procedure: Unsuccessful Operation

If the establishment of at least one radio link is unsuccessful, the Node B shall respond with a RADIO LINK SETUP FAILURE message. The message contains the failure cause in the *Cause* IE.

[FDD – If some radio links were established successfully, the Node B shall indicate this in the RADIO LINK SETUP FAILURE message in the same way as in the RADIO LINK SETUP RESPONSE message. In this case, the Node B shall include the *Communication Control Port Id* IE in the RADIO LINK SETUP FAILURE message.]

Typical cause values are as follows:

Radio Network Layer Cause

- Combining not supported
- Combining Resources not available
- Requested Tx Diversity Mode not supported
- Number of DL codes not supported
- Number of UL codes not supported
- UL SF not supported
- DL SF not supported
- Dedicated Transport Channel Type not supported
- Downlink Shared Channel Type not supported
- Uplink Shared Channel Type not supported
- CM not supported
- DPC mode change not supported
- Delayed Activation not supported

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.17.4 Abnormal Conditions

[FDD – If the RADIO LINK SETUP REQUEST message contains the *Active Pattern Sequence Information* IE, but the *Transmission Gap Pattern Sequence Information* IE is not present, then the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.]

If more than one DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected" [TDD – or no DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected"], the Node B shall regard the Radio Link Setup procedure as failed and shall respond with a RADIO LINK SETUP FAILURE message.

If the RADIO LINK SETUP REQUEST message includes a *DCH Information* IE with multiple *DCH Specific Info* IEs, and if the DCHs in the *DCH Information* IE do not have the same *Transmission Time Interval* IE in the *Semi-static Transport Format Information* IE, then the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.

If the RADIO LINK SETUP REQUEST message includes the *Transport Layer Address* IE and the *Binding ID* IE in the *RL Specific DCH Information* IE included in the *RL Information* IE for a specific RL and the *Diversity Control Field* IE

is set to "Must", the Node B shall regard the Radio Link Setup procedure as failed and respond with the RADIO LINK SETUP FAILURE message.

If the RADIO LINK SETUP REQUEST message contains the *Transport Layer Address* IE or the *Binding ID* IE, and not both are present for a transport bearer intended to be established, the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.

[FDD – If the RADIO LINK SETUP REQUEST message includes the *Length Of TFC12* IE but the *TFC1 Signalling Option* IE is set to "Normal", then the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.]

[FDD – If the RADIO LINK SETUP REQUEST message does not include the *Length Of TFC12* IE but the *Split Type* IE is set to "Logical", then the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.]

[FDD - If the RADIO LINK SETUP REQUEST message includes the *Split Type* IE set to the value "Hard" and the *Length Of TFC12* IE set to the value "5", then the Node B shall reject the procedure using the RADIO LINK SETUP FAILURE message.]

8.2.18 Physical Shared Channel Reconfiguration

8.2.18.1 General

This procedure is used to assign HS-DSCH related resources to the Node B.

[TDD - This procedure is also used for handling PDSCH Sets and PUSCH Sets in the Node B, i.e.

- Adding new PDSCH Sets and/or PUSCH Sets,
- Modifying these, and
- Deleting them.]

8.2.18.2 Successful Operation

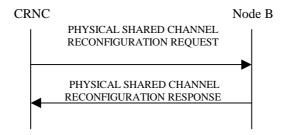


Figure 26: Physical Shared Channel Reconfiguration: Successful Operation

The procedure is initiated with a PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes an *SFN* IE, the Node B shall activate the new configuration on that specified SFN.

HS-DSCH Resources

[FDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-PDSCH* and *HS-SCCH Total Power* IE, the Node B shall not exceed this maximum transmission power on all HS-PDSCH and HS-SCCH codes in the cell. If a value has never been set or if the value of the *HS-PDSCH Total Power* IE is equal to or greater than the maximum transmission power of the cell the Node B may use all unused power for HS-PDSCH and HS-SCCH codes.]

[FDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-PDSCH* and *HS-SCCH Scrambling Code* IE, the Node B shall use this as the scrambling code for all HS-PDSCHs and HS-

SCCHs. If a value has never been set, the Node B shall use the primary scrambling code for all HS-PDSCH and HS-SCCH codes.]

[FDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-PDSCH FDD Code Information* IE, the Node B shall:

- If the *HS-PDSCH FDD Code Information* IE contains no code, delete any existing HS-PDSCH resources from the cell.
- If the *HS-PDSCH FDD Code Information* IE contains one or more codes and HS-PDSCH resources are not currently configured in the cell, use this list as the range of codes for HS-PDSCH channels.
- If the *HS-PDSCH FDD Code Information* IE contains one or more codes and HS-PDSCH resources are currently configured in the cell, replace the current range of codes with this new range of codes for HS-PDSCH channels.]

[FDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-SCCH FDD Code Information* IE, the Node B shall:

- If the *HS-SCCH FDD Code Information* IE contains no code, delete any existing HS-SCCH resources from the cell.
- If the *HS-SCCH FDD Code Information* IE contains one or more codes and HS-SCCH resources are not currently configured in the cell, use this list of codes as the list of codes for HS-SCCH channels.
- If the *HS-SCCH FDD Code Information* IE contains one or more codes and HS-SCCH resources are currently configured in the cell, replace the current list of codes with this new list of codes for HS-SCCH channels.]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-SCCH Maximum Power* IE, the Node B shall not exceed this power for each HS-SCCH code.]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *HS-PDSCH TDD Information* IE, the Node B shall:

- If the *HS-PDSCH TDD Code Information* IE contains no code, delete any existing HS-PDSCH resources from the cell.
- If the *HS-PDSCH TDD Code Information* IE contains one or more codes and HS-PDSCH resources are not currently configured in the cell, use this list as the list of codes for HS-PDSCH channels.
- If the *HS-PDSCH TDD Code Information* IE contains one or more codes and HS-PDSCH resources are currently configured in the cell, replace the current list of codes with this new list of codes for HS-PDSCH channels.]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes *Add to HS-SCCH Resource Pool* IE, the Node B shall add this resource to the HS-SCCH resource pool to be used to assign HS-SCCH sets.]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes any *Modify HS-SCCH Resource Pool* IEs and includes any of [3.84Mcps TDD - *TDD Channelisation Code* IE, *Midamble shift and burst type* IE, *Time Slot* IE], [1.28Mcps TDD - *TDD Channelisation Code LCR* IE, *Midamble shift LCR* IE, *Time Slot LCR* IE], for either HS-SCCH or HS-SICH channels, the Node B shall apply these as the new values, otherwise the old values specified for this set are still applicable.]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes any *Delete from HS-SCCH Resource Pool* IEs, the Node B shall delete these resources from the HS-SCCH resource pool.]

[TDD - PDSCH/PUSCH Addition]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes any PDSCH sets or PUSCH sets to be added, the Node B shall add these new sets to its PDSCH/PUSCH configuration.]

[TDD - PDSCH/PUSCH Modification]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes any PDSCH sets or PUSCH sets to be modified, and includes any of [3.84Mcps TDD - TDD Channelisation Code IE, Midamble Shift And Burst Type IE, Time Slot IE], [1.28Mcps TDD - TDD Channelisation Code LCR IE, Midamble Shift LCR IE,

Time Slot LCR IE], TDD Physical Channel Offset IE, Repetition Period IE, Repetition Length IE, or TFCI Presence IE, the Node B shall apply these as the new values, otherwise the old values specified for this set are still applicable.]

[TDD - PDSCH/PUSCH Deletion]

[TDD - If the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message includes any PDSCH sets or PUSCH sets to be deleted the Node B shall delete these sets from its PDSCH/PUSCH configuration.]

Response Message

HS-DSCH/HS-SCCH Resources

In the successful case involving HS-PDSCH or HS-SCCH resources, the Node B shall make these resources available to all the current and future HS-DSCH transport channels; and shall respond with PHYSICAL SHARED CHANNEL RECONFIGURATION RESPONSE:

[TDD - PDSCH/PUSCH Addition/Modification/Deletion]

[TDD - In the successful case involving PDSCH/PUSCH addition, modification or deletion, the Node B shall add, modify and delete the PDSCH Sets and PUSCH Sets in the Common Transport Channel data base, as requested in the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message, and shall make these available to all the current and future DSCH and USCH transport channels. The Node B shall respond with the PHYSICAL SHARED CHANNEL RECONFIGURATION RESPONSE message.]

8.2.18.3 Unsuccessful Operation

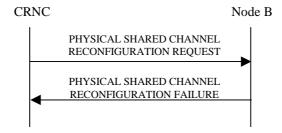


Figure 27: Physical Shared Channel Reconfiguration procedure: Unsuccessful Opreration

If the Node B is not able to support all parts of the configuration, it shall reject the configuration of all the channels in the PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST message. The *Cause* IE shall be set to an appropriate value.

If the configuration was unsuccessful, the Node B shall respond with the PHYSICAL SHARED CHANNEL RECONFIGURATION FAILURE message:

Typical cause values are as follows:

Radio Network Layer Cause

- Cell not available
- Node B Resources unavailable

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.2.18.4 Abnormal Conditions

-

8.2.19 Reset

8.2.19.1 General

The purpose of the Reset procedure is to align the resources in the CRNC and the Node B in the event of an abnormal failure. The CRNC or the Node B may initiate the procedure.

8.2.19.2 Successful Operation

8.2.19.2.1 Reset Initiated by the CRNC




Figure 27A Reset procedure (CRNC to Node B), Successful Operation

The procedure is initiated with a RESET REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

If the *Reset Indicator* IE is set to "Communication Context", the Node B shall remove all the indicated Node B Communication Contexts (typically identified by a *Node B Communication Context ID* IE) and all the radio resources allocated for these Node B Communication Contexts. The Node B shall also initiate release of the user plane transport bearers that were involved in these Contexts. After clearing all related resources, the Node B shall return the RESET RESPONSE message to the CRNC.

If the *Reset Indicator* IE is set to "Communication Control Port", the Node B shall remove all the Node B Communication Contexts controlled via the indicated Communication Control Port(s) and all the radio resources allocated for these Node B Communication Contexts. The Node B shall also initiate release of the user plane transport bearers that were involved in these Contexts. After clearing all related resources, the Node B shall return the RESET RESPONSE message to the CRNC.

If the *Reset Indicator* IE is set to "Node B", the Node B shall remove all the Node B Communication Contexts within the Node B and all the radio resources allocated for these Node B Communication Contexts. The Node B shall also initiate release of the user plane transport bearers that were involved in these Contexts. After clearing all related resources, the Node B shall return the RESET RESPONSE message to the CRNC.

8.2.19.2.2 Reset Initiated by the Node B




Figure 27B Reset procedure (Node B to CRNC), Successful Operation

The procedure is initiated with a RESET REQUEST message sent from the Node B to the CRNC using the Node B Control Port.

If the *Reset Indicator* IE is set to "Communication Context", for all indicated CRNC Communication Contexts (indicated by a *CRNC Communication Context ID* IE), the CRNC shall remove the information related to this Node B and all the radio resources allocated in the CRNC. The CRNC shall also initiate release of the user plane transport

bearers towards the Node B involved in the indicated CRNC Communication Contexts. After clearing all related resources, the CRNC shall return the RESET RESPONSE message to the Node B.

If the *Reset Indicator* IE is set to "Communication Control Port", for all the CRNC Communication Contexts controlled via the indicated Communication Control Port(s), the CRNC shall remove the information related to this Node B and all the radio resources allocated in the CRNC. The CRNC shall also initiate release of the user plane transport bearers towards the Node B involved in the CRNC Communication Contexts controlled via the indicated Communication Control Port(s). After clearing all related resources, the CRNC shall return the RESET RESPONSE message to Node B.

If the *Reset Indicator* IE is set to the "Node B", for all the CRNC Communication Contexts related to this Node B, the CRNC shall remove the information related to this Node B and all the radio resources allocated in the CRNC. The CRNC shall also initiate release of the user plane transport bearers towards the Node B involved in the CRNC Communication Contexts related to this Node B. After clearing all related resources, the CRNC shall return the RESET RESPONSE message to Node B.

8.2.19.3 Unsuccessful Operation

-

8.2.19.4 Abnormal Conditions

If the RESET REQUEST message is received any ongoing procedure related to a CRNC Communication Context in the CRNC or Node B Communication Context in the Node B indicated (explicitly or implicitly) in the message shall be aborted.

8.2.20 Cell Synchronisation Initiation [TDD]

8.2.20.1 General

This procedure is used by a CRNC to request the transmission of cell synchronisation bursts and/or to start measurements on cell synchronisation bursts in a Node B. Note: The term "cell synchronisation burst" is used as a generic term which refers to the synchronisation bursts used in the two TDD chip rate options. A "cell synchronisation burst" is a [3.84Mcps TDD – cell synchronisation burst sent in the PRACH time slots] or a [1.28Mcps TDD - SYNC_DL code sent in the DwPTS], respectively.

8.2.20.2 Successful Operation

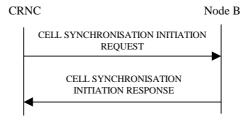


Figure 27C Cell Synchronisation Initiation procedure, Successful Operation

The procedure is initiated with a CELL SYNCHRONISATION INITIATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall initiate the requested transmission according to the parameters given in the request and start the measurement on cell synchronisation bursts if requested.

Cell Sync Burst Transmission Initiation

When the Cell Sync Burst Transmission Initiation Information is present, the Node B shall configure the transmission of the cell synchronisation burst according to the parameters given in the CELL SYNCHRONISATION INITIATION REQUEST message. The *SFN* IE indicates the frame number when the cell shall start transmitting cell synchronisation bursts.

[3.84Mcps TDD - When the Cell Sync Burst Transmission Initiation Information is present and the "Frequency Acquisition" is indicated within the *Synchronisation Report Type* IE, the Node B shall first perform only frequency locking on received cell synchronisation bursts. Transmission of the indicated cell synchronisation bursts shall be started only if the frequency locking is performed successfully and "Frequency Acquisition completed" is reported to the RNC.]

[3.84Mcps TDD - Cell Sync Burst Measurement characteristics] [1.28Mcps TDD – SYNC_DL Code Measurement characteristics LCR]

When the [3.84Mcps TDD - Cell Sync Burst Measurement Initiation Information][1.28Mcps TDD – SYNC_DL Code Measurement Initiation Information LCR] is present, the Node B shall initiate measurements on the indicated cell synchronisation burst.

If the *SFN* IE is present, the Node B shall after measurement of the indicated cell synchronisation burst adjust the frame number of the indicated cell according to the SFN of the CELL SYNCHRONISATION INITIATION REQUEST message. This adjustment shall only apply to the late entrant cell at the late entrant phase.

Synchronisation Report characteristics

The *Synchronisation Report Characteristics* IE indicates how the reporting of the cell synchronisation burst measurement shall be performed. Whenever the Cell Synchronisation Initiation procedure is initiated, only the "Frequency Acquisition completed" or "Frame related" report characteristics type shall apply.

[3.84Mcps TDD - If the *Synchronisation Report characteristics type* IE is set to "Frequency Acquisition completed", the Node B shall signal completion of frequency acquisition to the RNC when locking is completed.]

If the *Synchronisation Report characteristics type* IE is set to "Frame related", the Node B shall report the result of the cell synchronisation burst measurement after every measured frame.

Response message

If the Node B was able to initiate the cell synchronisation burst transmission and/or measurement requested by the CRNC it shall respond with the CELL SYNCHRONISATION INITIATION RESPONSE message sent over the Node B Control Port.

8.2.20.3 Unsuccessful Operation

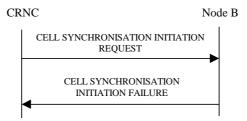


Figure 27D Cell Synchronisation Initiation procedure, Unsuccessful Operation

If the requested transmission or measurement on cell synchronisation bursts cannot be initiated, the Node B shall send a CELL SYNCHRONISATION INITIATION FAILURE message over the Node B control port. The message shall include the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- Cell Synchronisation not supported
- Power level not supported

- Measurement Temporarily not Available
- Frequency Acquisition not supported

Miscellaneous Cause

- O&M Intervention
- HW failure

8.2.20.4 Abnormal Conditions

_

8.2.21 Cell Synchronisation Reconfiguration [TDD]

8.2.21.1 General

This procedure is used by a CRNC to reconfigure the transmission of cell synchronisation bursts and/or to reconfigure measurements on cell synchronisation bursts in a Node B.

8.2.21.2 Successful Operation

8.2.21.2.1 General




Figure 27E Cell Synchronisation Reconfiguration procedure, Successful Operation

The procedure is initiated with a CELL SYNCHRONISATION RECONFIGURATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall reconfigure the cell synchronisation burst transmission and/or measurements according to the parameters given in the request.

8.2.21.2.2 Cell Sync Burst Schedule

Within the CELL SYNCHRONISATION RECONFIGURATION REQUEST message first the schedule for the steady state phase is fixed. I.e. the number of cycles per SFN period is defined with the same schedule. For each cycle, the number of repetitions is defined according to following equations:

Cycle length: 4096 / value of Number Of Cycles Per SFN Period IE

Repetition period: Cycle length / value of Number Of Repetitions Per Cycle Period IE

Cell Sync Frame number is calculated by:

SFN = floor((k-1) * Cycle length + (i-1)* Repetition period)

 $k = \{1, 2, 3, ... \text{ Number of cycle per SFN period}\}$

 $i = \{1, 2, 3, ... \text{ Cell Sync Frame number within cycle period}\}$

8.2.21.2.3 [1.28Mcps TDD – SYNC_DL Code Schedule]

Within the CELL SYNCHRONISATION RECONFIGURATION REQUEST message first the schedule for the steady state phase is fixed. The "schedule" includes

- the list of frame numbers SFN within the SFN period where synchronisation burst transmission or reception takes place, i.e. the "synchronisation frames", and
- the associated actions (burst transmission, reception, averaging, reporting etc) to be performed for synchronisation purpose by the Node B at each of these SFNs.

Within the synchronisation frames, only the first subframe shall be used for sending or receiving a synchronisation burst in the DwPTS while in the second subframe, normal operation continues.

In case of 1.28Mcps TDD, the synchronisation schedule includes the option of averaging of measured correlation results within the Node B over a sequence of measurements, for increasing the reliability of the Time of Arrival measurement obtained from the correlation results. For this purpose, the concept of "subcycles" has been introduced: Each Synchronisation Cycle is devided into "subcycles" where in each subcycle, the same set of SYNC_DL transmissions and receptions is performed, and averaging takes place over all the subcycles within a Synchronisation Cycle. Since the list of actions (transmission, measurements etc) is the same in each subcycle, and the subcycles are repeated to make up a cycle, and the cycles make up an SFN period, the full list of actions is derived by the actions specified for a subcycle.

The full list of SFNs which make up the synchronisation schedule within the SFN period are calculated in Node B and RNC autonomously based on the following parameters included in the CELL SYNCHRONISATION RECONFIGURATION REQUEST message: "Number of cycles per SFN period", "Number of sybcycles per cycle period", and "Number of repetitions per cycles period", along the following equations:

Cycle length: 4096 / value of Number Of Cycles Per SFN Period IE

Subcycle length: Cycle length / value of Number Of Subcycles Per Cycle Period IE

Repetition period: Subcycle length / value of Number Of Repetitions Per Cycle Period IE

SFN = floor((k-1) * Cycle length + (j-1)*Subcycle length + (i-1)* Repetition period)

 $k = \{1, 2, 3, ... \text{ Number of cycle per SFN period}\}$

 $j = \{1, 2, 3, ... \text{ Number of subcycles per cycle}\}$

 $i = \{1, 2, 3, ... \text{ Number of repetitions per cycle period}\}$

Note that if the *Number Of Subcycles Per Cycle* IE is equal to 1, then the subcycles are identical to the "Synchronisation Cycles".

If the *Number Of Subcycles Per Cycle* IE is included in the CELL SYNCHRONISATION RECONFIGURATION REQUEST [TDD] message, then the Node B shall apply this number for dividing the Synchronisation Cycles in Subcycles. If the IE is not present, then the Node B shall assume that there is one subcycle per synchronisation cycle only, which is identical to the synchronisation cycle.

Averaging is performed as follows:

- From each SYNC_DL code being received according to the schedule, the Node B shall calculate a "correlation function" by matching the received data with the respective expected code.
- Therefore the set of measurements within one sybcycle provides a set of "correlation functions".
- The set of correlation functions of the first subcycle within a synchronisation cycle is stored in an averaging memory.
- The sets of correlation functions of the subsequent subcycles within a synchronisation cycle are combined with the available contents of the "averaging memory", to produce an average over all the sets of correlation functions within a synchronisation cycle.
- At the end of a synchronisation cycle, the Time-of-Arrival measurements for that synchronisation cycle are obtained by evaluating the final set of correlation functions.

These Time-of-Arrival measurements, together with associated SIR values obtained from the averaged correlation functions, are included in a Measurement Report to the RNC, according to a measurement reporting plan.

In addition, the Time-of-Arrival measurements may optionally be used for autonomous self-adjustment of the timing of the respective cell.

8.2.21.2.4 [3.84Mcps TDD - Cell Sync Burst Transmission Reconfiguration] [1.28Mcps TDD - SYNC_DL Code Transmission Reconfiguration]

When the [3.84Mcps TDD - Cell Sync Burst Transmission Reconfiguration Information] [1.28Mcps TDD - SYNC_DL Code Transmission Reconfiguration Information LCR] is present, the Node B shall reconfigure the transmission of the [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD - SYNC_DL Code] according to the parameters given in the CELL SYNCHRONISATION RECONFIGURATION REQUEST message.

[3.84Mcps TDD - If the CELL SYNCHRONISATION RECONFIGURATION REQUEST message includes the *Cell Sync Burst Code* IE, the Node B shall reconfigure the synchronisation code in the cell according to the *Cell Sync Burst Code* IE value.]

[3.84Mcps TDD - If the CELL SYNCHRONISATION RECONFIGURATION REQUEST message includes the *Cell Sync Burst Code Shift* IE, the Node B shall reconfigure the synchronisation code shift in the cell according to the *Cell Sync Burst Code Shift* IE value.]

[3.84Mcps TDD - If the CELL SYNCHRONISATION RECONFIGURATION REQUEST message includes the *DL Transmission Power* IE, the Node B shall reconfigure the DL transmission power of the cell synchronisation burst in the cell according to the *DL Transmission Power* IE value.]

[1.28Mcps TDD - If the CELL SYNCHRONISATION RECONFIGURATION REQUEST message includes the *DwPCH Power* IE, the Node B shall store the DwPCH power according to the *DwPCH Power* IE value. For the duration of those subsequent transmissions of the DwPCH which are specifically for the purpose of Node B synchronisation the power of the DwPCH shall be set to the stored power. During subsequent transmissions of the DwPCH which are for normal operation the power of the DwPCH shall assume its normal level.]

8.2.21.2.5 [3.84Mcps TDD - Cell Sync Burst Measurement Reconfiguration] [1.28Mcps TDD – SYNC_DL Code Measurement Reconfiguration]

When the [3.84Mcps TDD - Cell Sync Burst Measurement Reconfiguration Information] [1.28Mcps TDD - Cell SYNC_DL Code Measurement Reconfiguration Information LCR] is present, the Node B shall reconfigure the [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD - SYNC_DL Code] measurements according the parameters given in the message.

If the CELL SYNCHRONISATION RECONFIGURATION REQUEST message includes the [3.84Mcps TDD -Cell Sync Burst Measurement Information] [1.28Mcps TDD – SYNC_DL Code Measurement Information LCR], the measurements shall apply on the individual [3.84Mcps TDD - cell synchronisation bursts] [1.28Mcps TDD - SYNC_DL Codes] on the requested Sync Frame number.

[1.28Mcps TDD - When the *Propagation Delay Compensation* IE is present in the Cell Sync Burst Measurement Information, the Node B shall, if supported, perform the following functions: (1) use the respective SYNC_DL measurement (after potential averaging) to perform the self-adjustment of the respective cell's timing at the end of a Synchronisation Cycle; (2) include the *Accumulated Clock Update* IE in the CELL SYNCHRONISATION REPORT

message, to report the total accumulated amount of timing adjustments since the last report to the RNC. This Accumulated Clock Update value shall also include the adjustments which may have been performed by explicit order from the RNC in the CELL SYNCHRONISATION ADJUSTMENT REQUEST message. The times for self-adjustment at the end of a synchronisation cycle shall be independent from the measurement reporting characteristics; the Accumulated Adjustment values shall be included in the CELL SYNCHRONISATION REPORT messages without influencing the frequency of measurement reporting.]

If the *Synchronisation Report Type* IE is provided, the measurement reporting shall apply according the parameter given in the message.

Synchronisation Report characteristics

The *Synchronisation Report Characteristics* IE indicates how the reporting of the cell synchronisation burst measurement shall be performed.

If the *Synchronisation Report Characteristics Type* IE is set to "Frame related", the Node B shall report the result of the cell synchronisation burst measurement after every measured frame.

If the *Synchronisation Report Characteristics Type* IE is set to "SFN period related", the Node B shall report the result of the cell synchronisation burst measurements after every SFN period.

If the *Synchronisation Report Characteristics Type* IE is set to "Cycle length related", the Node B shall report the result of the cell synchronisation burst measurements after every cycle length within the SFN period.

If the *Synchronisation Report Characteristics Type* IE is set to "Threshold exceeding", the Node B shall report the result of the [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD - SYNC_DL Code] measurement when the [3.84Mcps TDD - cell synchronisation burst timing] [1.28Mcps TDD – SYNC_DL Code timing] rises or falls more than the requested threshold value compared to the arrival time in synchronised state which is represented by the [3.84Mcps TDD - *Cell Sync Burst Arrival Time* IE] [1.28Mcps TDD – *SYNC_DL Code ID Arrival Time* IE].

Response message

If the Node B was able to reconfigure the cell synchronisation burst transmission and/or measurement requested by the CRNC, it shall respond with the CELL SYNCHRONISATION RECONFIGURATION RESPONSE message sent over the Node B Control Port.

8.2.21.3 Unsuccessful Operation

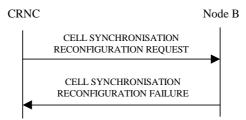


Figure 27F Cell Synchronisation Reconfiguration procedure, Unsuccessful Operation

If the Node B cannot reconfigure the requested transmission or measurement on [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD – SYNC_DL Code], the CELL SYNCHRONISATION RECONFIGURATION FAILURE message shall be sent to the CRNC. The message shall include the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- Cell Synchronisation not supported
- Power level not supported
- Measurement Temporarily not Available

Miscellaneous Cause

- O&M Intervention

HW failure

8.2.21.4 Abnormal Conditions

-

8.2.22 Cell Synchronisation Reporting [TDD]

8.2.22.1 General

This procedure is used by a Node B to report the result of [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD - SYNC_DL Code] measurements requested by the CRNC with the Cell Synchronisation Initiation or Cell Synchronisation Reconfiguration procedure.

8.2.22.2 Successful Operation



Figure 27G Cell Synchronisation Reporting procedure, Successful Operation

If the requested synchronisation measurement reporting criteria are met, the Node B shall initiate a Cell Synchronisation Reporting procedure. The CELL SYNCHRONISATION REPORT message shall use the Node B Control Port.

In the steady state phase when several [3.84Mcps TDD - cell synchronisation bursts] [1.28Mcps TDD - SYNC_DL Codes] shall be measured per Sync Frame number, the sequence of the reported measured values shall be the same as defined in the Cell Synchronisation Reconfiguration procedure.

[1.28Mcps TDD - The Node B shall, if supported, include the *Accumulated Clock Update* IE in the CELL SYNCHRONISATION REPORT message whenever the RNC has included at least one instance of the *Propagation Delay Compensation* IE in the CELL SYNCHRONISATION RECONFIGURATION REQUEST message. The *Accumulated Clock Update* IE shall include the accumulated timing adjustment which has been done as commanded by the RNC, as well as by self-adjustment, since the last *Accumulated Clock Update* IE report.]

If the achieved measurement accuracy does not fulfil the given accuracy requirement defined in [23], the Cell Sync Burst not available shall be reported.

8.2.22.3 Abnormal Conditions

_

8.2.23 Cell Synchronisation Termination [TDD]

8.2.23.1 General

This procedure is used by the CRNC to terminate a [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD - SYNC_DL Code] transmission or measurement previously requested by the Cell Synchronisation Initiation procedure or Cell Synchronisation Reconfiguration procedure.

8.2.23.2 Successful Operation



Figure 27H Cell Synchronisation Termination procedure, Successful Operation

This procedure is initiated with a CELL SYNCHRONISATION TERMINATION REQUEST message, sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall terminate transmission of [3.84Mcps TDD - cell synchronisation bursts or reporting of cell synchronisation burst measurements] [1.28Mcps TDD - SYNC_DL Codes or reporting of SYNC_DL Code measurements] corresponding to the CSB Transmission Id or CSB Measurement Id.

8.2.23.3 Abnormal Conditions

_

8.2.24 Cell Synchronisation Failure [TDD]

8.2.24.1 General

This procedure is used by the Node B to notify the CRNC that a synchronisation burst transmission or synchronisation measurement procedure can no longer be supported.

8.2.24.2 Successful Operation



Figure 27I Cell Synchronisation Failure procedure, Successful Operation

This procedure is initiated with a CELL SYNCHRONISATION FAILURE INDICATION message, sent from the Node B to the CRNC using the Node B Control Port, to inform the CRNC that a previously requested transmission or measurement on [3.84Mcps TDD - cell synchronisation bursts] [1.28Mcps TDD – SYNC_DL Codes] can no longer be supported.

8.2.24.3 Abnormal Conditions

-

8.2.25 Cell Synchronisation Adjustment [TDD]

8.2.25.1 General

The purpose of Cell Synchronisation Adjustment procedure is to allow the CRNC to adjust the timing of the radio transmission of a cell within a Node B for time alignment.

8.2.25.2 Successful Operation

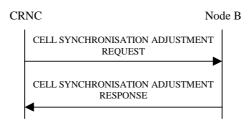


Figure 27J Cell Synchronisation Adjustment, Successful Operation

This procedure is initiated with a CELL SYNCHRONISATION ADJUSTMENT REQUEST message sent by the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B adjusts its timing according to the parameters given in the message.

If the CELL SYNCHRONISATION ADJUSTMENT REQUEST message includes the *Frame Adjustment Value* IE the Node B shall apply the frame adjustment in the cell according to the *Frame Adjustment Value* IE value.

If the CELL SYNCHRONISATION ADJUSTMENT REQUEST message includes the *Timing Adjustment Value* IE the Node B shall apply the timing adjustment in the cell according to the *Timing Adjustment Value* IE value.

[3.84Mcps TDD - If the CELL SYNCHRONISATION ADJUSTMENT REQUEST message includes the *DL Transmission Power* IE, the Node B shall apply the transmission power of the cell synchronisation burst according to the *DL Transmission Power* IE value.]

[1.28Mcps TDD - If the CELL SYNCHRONISATION ADJUSTMENT REQUEST message includes the *DwPCH Power* IE, the Node B shall store the DwPCH power according to the *DwPCH Power* IE value. For the duration of those subsequent transmissions of the DwPCH which are specifically for the purpose of Node B synchronisation the power of the DwPCH shall be set to the stored power. During subsequent transmissions of the DwPCH which are for normal operation the power of the DwPCH shall assume its normal level.]

If the CELL SYNCHRONISATION ADJUSTMENT REQUEST message includes the *SFN* IE, the Node B shall apply the synchronisation adjustment starting with the SFN number indicated in the message.

When the cell synchronisation adjustment is successfully done by the Node B, the Node B shall respond with a CELL SYNCHRONISATION ADJUSTMENT RESPONSE message.

8.2.25.3 Unsuccessful Operation

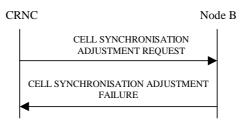


Figure 27K Cell Synchronisation Adjustment, Unsuccessful Operation

If the Node B cannot perform the indicated cell synchronisation adjustment due to hardware failure or other problem it shall send the CELL SYNCHRONISATION ADJUSTMENT FAILURE as a response.

Typical cause values are as follows:

Radio Network Layer Cause

- Cell Synchronisation Adjustment not supported

- Power level not supported

Miscellaneous Cause

- O&M Intervention
- HW failure

8.2.25.4 Abnormal Conditions

-

8.2.26 Information Exchange Initiation

8.2.26.1 General

This procedure is used by a CRNC to request the initiation of information provisioning from a Node B.

8.2.26.2 Successful Operation

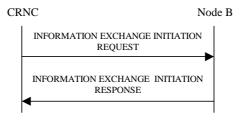


Figure 27L: Information Exchange Initiation procedure, Successful Operation

The procedure is initiated with the INFORMATION EXCHANGE INITIATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall provide the requested information according to the *Information Type Item* IE. Unless specified below, the meaning of the parameters are given in other specifications.

Information Report Characteristics

The Information Report Characteristics IE indicates how the reporting of the information shall be performed.

If the *Information Report Characteristics* IE is set to "On Demand", the Node B shall report the requested information immediately.

If the *Information Report Characteristics* IE is set to "Periodic", the Node B shall periodically initiate the Information Reporting procedure for all the requested information, with the requested reporting frequency.

If the *Information Report Characteristics* IE is set to "On Modification", the Node B shall immediately report the requested information and then shall initiate the Information Reporting procedure in accordance to the following conditions related to the *Information Type* IE:

- 1) If the *Information Type Item* IE is set to "DGPS Corrections", the Node B shall initiate the Information Reporting procedure when either the PRC has drifted from the previously reported value more than the threshold indicated in the *PRC Deviation* IE or a change has occurred in the IODE.
- 2) If the *Information Type Item* IE is set to "GPS Information" and the *GPS Information Item* IE includes "GPS Navigation Model & Time Recovery", the Node B shall initiate the Information Reporting procedure for this specific GPS Information Item when a change has occurred regarding either the IODC or the list of visible satellites, identified by the *SatID* IEs.

- 3) If the *Information Type Item* IE is set to "GPS Information" and the *GPS Information Item* IE includes "GPS Ionospheric Model", the Node B shall initiate the Information Reporting procedure for this specific GPS Information Item when any change has occurred.
- 4) If the *Information Type Item* IE is set to "GPS Information" and the *GPS Information Item* IE includes "GPS UTC Model", the Node B shall initiate the Information Reporting procedure for this specific GPS Information Item when a change has occurred in the t ot parameter.
- 5) If the *Information Type Item* IE is set to "GPS Information" and the *GPS Information Item* IE includes "GPS Almanac", the Node B shall initiate the Information Reporting procedure for this specific GPS Information Item when any change has occurred.
- 6) If the *Information Type Item* IE is set to "GPS Information" and the *GPS Information Item* IE includes "GPS Real-Time Integrity", the Node B shall initiate the Information Reporting procedure for this specific GPS Information Item when any change has occurred.

Response message

If the Node B was able to initiate the information provision requested by the CRNC, it shall respond with the INFORMATION EXCHANGE INITIATION RESPONSE message sent over the Node B Control Port. The message shall include the same Information Exchange ID that was included in the INFORMATION EXCHANGE REQUEST message. When the *Report Characteristics* IE is set to "On Demand" or "On Modification" or "Periodic", the INFORMATION EXCHANGE INITIATION RESPONSE message shall contain the requested data.

8.2.26.3 Unsuccessful Operation



Figure 27M: Information Exchange Initiation procedure, Unsuccessful Operation

If the Information Type Item received in the *Information Type Item* IE indicates a type of information that cannot be provided, the Node B shall regard the Information Exchange Initiation procedure as failed.

If the requested information provision cannot be initiated, the Node B shall send the INFORMATION EXCHANGE INITIATION FAILURE message over the Node B control port. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

- Information temporarily not available.
- Information Provision not supported for the object.

8.2.26.4 Abnormal Conditions

If the *Information Report Characteristics* IE is set to "On Modification", and the *Information Type Item* IE is set to "DGPS Corrections", but the *Information Threshold* IE is not received in the INFORMATION EXCHANGE INITIATION REQUEST message, the Node B shall regard the Information Exchange Initiation procedure as failed.

8.2.27 Information Reporting

8.2.27.1 General

This procedure is used by a Node B to report the information requested by the CRNC with the Information Exchange Initiation procedure.

8.2.27.2 Successful Operation



Figure 27N: Information Reporting procedure, Successful Operation

If the requested information reporting criteria are met, the Node B shall initiate the Information Reporting procedure. The INFORMATION REPORT message shall use the Node B Control Port. Unless specified below, the meaning of the parameters are given in other specifications.

The *Information Exchange ID* IE shall be set to the Information Exchange ID provided by the CRNC when initiating the Information Exchange with the Information Exchange Initiation procedure.

The Requested Data Value IE shall include at least one IE containing the data to be reported.

8.2.27.3 Abnormal Conditions

_

8.2.28 Information Exchange Termination

8.2.28.1 General

This procedure is used by the CRNC to terminate the provision of information previously requested by the Information Exchange Initiation procedure.

8.2.28.2 Successful Operation



Figure 270: Information Exchange Termination procedure, Successful Operation

This procedure is initiated with an INFORMATION EXCHANGE TERMINATION REQUEST message sent from the CRNC to the Node B using the Node B Control Port.

Upon reception, the Node B shall terminate the provision of information corresponding to the Information Exchange ID.

8.2.28.3 Abnormal Conditions

_

8.2.29 Information Exchange Failure

8.2.29.1 General

This procedure is used by the Node B to notify the CRNC that information previously requested by the Information Exchange Initiation procedure can no longer be reported.

8.2.29.2 Successful Operation



Figure 27P: Information Exchange Failure procedure, Successful Operation

This procedure is initiated with the INFORMATION EXCHANGE FAILURE INDICATION message sent from the Node B to the CRNC using the Node B Control Port to inform the CRNC that information previously requested by the Information Exchange Initiation procedure can no longer be reported. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

8.3 NBAP Dedicated Procedures

8.3.1 Radio Link Addition

8.3.1.1 General

This procedure is used for establishing the necessary resources in the Node B for one or more additional RLs towards a UE when there is already a Node B Communication Context for this UE in the Node B.

The Radio Link Addition procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.1.2 Successful Operation

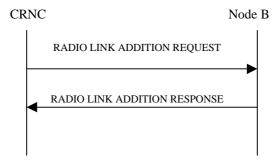


Figure: 28 Radio Link Addition procedure, Successful Operation

The procedure is initiated with a RADIO LINK ADDITION REQUEST message sent from the CRNC to the Node B using the Communication Control Port assigned to the concerned Node B Communication Context.

Upon reception, the Node B shall reserve the necessary resources and configure the new RL(s) according to the parameters given in the message. Unless specified below, the meaning of parameters is specified in other specifications.

The Node B shall prioritise resource allocation for the RL(s) to be established according to Annex A.

Physical Channels Handling:

[TDD – If the *UL DPCH Information* IE is present, the Node B shall configure the new UL DPCH(s) according to the parameters given in the message.]

[TDD – If the *DL DPCH Information* IE is present, the Node B shall configure the new DL DPCH(s) according to the parameters given in the message.]

[FDD - Compressed Mode]:

[FDD – If the RADIO LINK ADDITION REQUEST message includes the *Compressed Mode Deactivation Flag* IE with value "Deactivate", the Node B shall not activate any compressed mode pattern in the new RLs. In all the other cases (Flag set to "Maintain Active" or not present), the ongoing compressed mode (if existing) shall be applied also to the added RLs.]

[FDD- If the RADIO LINK ADDITION REQUEST message contains the *Transmission Gap Pattern Sequence Code Information* IE for any of the allocated DL Channelisation Codes, the Node B shall apply the alternate scrambling code as indicated for each DL Channelisation Code for which the *Transmission Gap Pattern Sequence Code Information* IE is set to "Code Change".]

[FDD – DL Code Information]:

[FDD – When more than one DL DPDCH are assigned per RL, the segmented physical channel shall be mapped on to DL DPDCHs according to ref. [8]. When *p* number of DL DPDCHs are assigned to each RL, the first pair of DL Scrambling Code and FDD DL Channelisation Code Number corresponds to "*PhCH number 1*", the second to "*PhCH number 2*", and so on until the *p*th to "*PhCH number p*".]

[TDD – CCTrCH Handling]:

[TDD – If the *UL CCTrCH Information* IE is present, the Node B shall configure the new UL CCTrCH(s) according to the parameters given in the message.]

[TDD – If the *DL CCTrCH Information* IE is present, the Node B shall configure the new DL CCTrCH(s) according to the parameters given in the message.]

Radio Link Handling:

Diversity Combination Control:

The *Diversity Control Field* IE indicates for each RL whether the Node B shall combine the new RL with existing RL(s) or not.

- If the Diversity Control Field IE is set to "May", the Node B shall decide for any of the alternatives.
- If the *Diversity Control Field* IE is set to "Must", the Node B shall combine the RL with one of the other RL.
- If the *Diversity Control Field* IE is set to "Must not", the Node B shall not combine the RL with any other existing RL.

When a new RL is to be combined, the Node B shall choose which RL(s) to combine it with.

In the case of combining an RL with existing RL(s), the Node B shall indicate with the Diversity Indication in the *RL Information Response* IE in the RADIO LINK ADDITION RESPONSE message that the RL is combined. In this case, the *RL ID* IE indicates one of the existing RLs that the new RL is combined with.

In the case of not combining an RL with existing RL(s), the Node B shall indicate with the Diversity Indication in the *RL Information Response* IE in the RADIO LINK ADDITION RESPONSE message that no combining is done. In this case, the Node B shall include in the *DCH Information Response* IE both the *Transport Layer Address* IE and the *Binding ID* IE for the transport bearer to be established for each DCH, [TDD – DSCH, USCH] of the RL in the RADIO LINK ADDITION RESPONSE message.

In the case of a set of co-ordinated DCHs, the *Binding ID* IE and the *Transport Layer Address* IE shall be included for only one of the DCHs in a set of coordinated DCHs.

[TDD – The Node B shall include in the RADIO LINK ADDITION RESPONSE message both the *Transport Layer Address* IE and the *Binding ID* IE for the transport bearer to be established for each DSCH and USCH.]

[FDD – Transmit Diversity]:

[FDD – When the *Diversity Mode* IE is set to "STTD", "Closedloop mode1" or "Closedloop mode2", the Node B shall activate/deactivate the Transmit Diversity for each Radio Link in accordance with the Transmit Diversity Indication IE.]

[FDD – When the *Transmit Diversity Indicator* IE is present, the Node B shall activate/deactivate the Transmit Diversity for each new Radio Link in accordance with the *Transmit Diversity Indicator* IE and the already known diversity mode.]

DL Power Control:

[FDD – If the RADIO LINK ADDITION REQUEST message includes the *Initial DL Transmission Power* IE, the Node B shall apply the given power to the transmission on each DL DPCH of the RL when starting transmission until either UL synchronisation on the Uu interface is achieved for the RLS or Power Balancing is activated. If no *Initial DL Transmission Power* IE is included, the Node B shall use any transmission power level currently used on already existing RLs for this Node B Communication Context. No inner loop power control or balancing shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[10], subclause 5.2.1.2) with DPC MODE currently configured for the relevant Node B Communication Context and the downlink power control procedure (see subclause 8.3.7).]

[TDD – If the RADIO LINK ADDITION REQUEST message includes the [3.84Mcps TDD – *Initial DL Transmission Power* IE] [1.28Mcps TDD – *DL Time Slot ISCP Info LCR* IE], the Node B shall determine the initial CCTrCH DL power for each CCTrCH by the following rule: If the *CCTrCH Initial DL Transmission Power* IE is included for that CCTrCH, then the Node B shall use that power for the initial CCTrCH DL power, otherwise the initial CCTrCH DL power is the *Initial DL Transmission Power* IE included in the *RL Information* IE. The Node B shall apply the given power to the transmission on each DL DPCH and on each Time Slot of the CCTrCH when starting transmission until the UL synchronisation on the Uu interface is achieved for the CCTrCH. If no *Initial DL Transmission Power* IE is included (even if *CCTrCH Initial DL Transmission Power* IEs are included), the Node B shall use any transmission power level currently used on already existing CCTrCHs for this Node B Communication Context. No inner loop power control shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[22], subclause 4.2.3.3).]

If the RADIO LINK ADDITION REQUEST message includes the *Maximum DL Power* IE, the Node B shall store this value and not transmit with a higher power on any DL DPCH of the RL. If no *Maximum DL Power* IE is included, any Maximum DL power stored for already existing RLs for this Node B Communication Contextshall be applied. [FDD - During compressed mode, the $P_{SIR}(k)$, as described in ref.[10] subclause 5.2.1.3, shall be added to the maximum DL power in slot k.]

If the RADIO LINK ADDITION REQUEST message includes the *Minimum DL Power* IE, the Node B shall store this value and never transmit with a lower power on any DL DPCH of the RL. If no *Minimum DL Power* IE is included, any Minimum DL power stored for already existing RLs for this Node B Communication Contextshall be applied.

[TDD – If the RADIO LINK ADDITION REQUEST message includes the *DL Time Slot ISCP Info* IE, the Node B shall use the indicated value when deciding the DL TX Power for each timeslot as specified in ref. [21], i.e. it shall reduce the DL TX power in those downlink timeslots of the radio link where the interference is low, and increase the DL TX power in those timeslots where the interference is high, while keeping the total downlink power in the radio link unchanged].

[FDD – If the power balancing is active with the Power Balancing Adjustment Type of the Node B Communication Context set to "Individual" in the existing RL(s) and the RADIO LINK ADDITION REQUEST message includes the *DL Reference Power* IE, the Node B shall activate the power balancing and use the *DL Reference Power* IE for the power balancing procedure in the new RL(s), if activation of power balancing by the RADIO LINK ADDITION REQUEST message is supported, according to subclause 8.3.7.]

[FDD – If activation of power balancing by the RADIO LINK ADDITION REQUEST message is supported by the Node B, the Node B shall include the *DL Power Balancing Activation Indicator* IE in the *RL Information Response* IE in the RADIO LINK ADDITION RESPONSE message.]

General:

If the RADIO LINK ADDITION REQUEST message includes the *RL Specific DCH Information* IE, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for the DCH or the set of co-ordinated DCHs.

[FDD – If the RADIO LINK ADDITION REQUEST message contains an *SSDT Cell Identity* IE, the Node B shall activate SSDT, if supported, for the concerned new RL, with the indicated SSDT cell identity used for that RL.]

[FDD – If the RADIO LINK ADDITION REQUEST message includes the *Qth Parameter* IE in addition to the *SSDT Cell Identity* IE, the Node B shall use the *Qth Parameter* IE, if Qth signalling is supported, when SSDT is activated in the concerned new RL.]

The Node B shall start reception on the new RL(s) after the RLs are successfully established.

[FDD - Radio Link Set Handling]:

[FDD – For each RL not having a common generation of the TPC commands in the DL with another RL, the Node B shall assign the *RL Set ID* IE included in the RADIO LINK ADDITION RESPONSE message a value that uniquely identifies the RL Set within the Node B Communication Context.]

[FDD – For all RLs having a common generation of the TPC commands in the DL with another new or existing RL, the Node B shall assign the *RL Set ID* IE included in the RADIO LINK ADDITION RESPONSE message the same value. This value shall uniquely identify the RL Set within the Node B Communication Context.]

[FDD – After addition of the new RL(s), the UL out-of-sync algorithm defined in [10] shall, for each of the previously existing and newly established RL Set(s), use the maximum value of the parameters N_OUTSYNC_IND and T_RLFAILURE that are configured in the cells supporting the radio links of the RL Set. The UL in-sync algorithm defined in [10] shall, for each of the established RL Set(s), use the minimum value of the parameters N_INSYNC_IND, that are configured in the cells supporting the radio links of the RL Set.]

Response Message:

If all requested RLs are successfully added, the Node B shall respond with a RADIO LINK ADDITION RESPONSE message.

After sending the RADIO LINK ADDITION RESPONSE message, the Node B shall continuously attempt to obtain UL synchronisation on the Uu interface.

For each RL for which the *Delayed Activation* IE is not included in the RADIO LINK ADDITION REQUEST message, the Node B shall:

- [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16].]
- [TDD start transmission on the new RL immediately as specified in [16].]

For each RL for which the *Delayed Activation* IE is included in the RADIO LINK ADDITION REQUEST message, the Node B shall:

- if the *Delayed Activation* IE indicates "Separate Indication":
 - not start any DL transmission for the concerned RL on the Uu interface;
- if the *Delayed Activation* IE indicates "CFN":
 - [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16], however never before the CFN indicated in the *Activation CFN* IE.]
 - [TDD start transmission on the new RL at the CFN indicated in the Activation CFN IE as specified in [16].]

8.3.1.3 Unsuccessful Operation



Figure 29: Radio Link Addition procedure: Unsuccessful Operation

If the establishment of at least one radio link is unsuccessful, the Node B shall respond with a RADIO LINK ADDITION FAILURE message. The message contains the failure cause in the *Cause* IE.

[FDD - If some RL(s) were established successfully, the Node B shall indicate this in the RADIO LINK ADDITION FAILURE message in the same way as in the RADIO LINK ADDITION RESPONSE message.]

[FDD – If the RADIO LINK ADDITION REQUEST contains a *C-ID* IE indicating that a Radio Link must be established on a Cell where DPC Mode change is not supported and DPC Mode can be changed for the relevant Node B Communication Context, the Node B shall consider the procedure as failed for the concerned Radio Link and shall respond with a RADIO LINK ADDITION FAILURE with the appropriate cause value ("DPC Mode change not supported").]

Typical cause values are as follows:

Radio Network Layer Cause

- Combining not supported
- Combining Resources not available
- Requested Tx Diversity Mode not supported
- UL SF not supported
- DL SF not supported
- Reconfiguration CFN not elapsed
- CM not supported
- [FDD DPC Mode change not supported]
- Delayed Activation not supported

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.3.1.4 Abnormal conditions

[FDD – If the RADIO LINK ADDITION REQUEST message contains the *Compressed Mode Deactivation Flag* IE with the value "Deactivate" when compressed mode is active for the existing RL(s), and at least one of the new RL is added in a cell that has the same UARFCN (both UL and DL) of at least one cell with an already existing RL, the Node

B shall regard the Radio Link Addition procedure as failed and shall respond with a RADIO LINK ADDITION FAILURE message with the cause value "Invalid CM settings".]

[FDD – If the power balancing is active with the Power Balancing Adjustment Type of the Node B Communication Context set to "Individual" in the existing RL(s) and if the *DL Reference Power* IEs are included in the *RL Information* IE but the *DL Reference Power* IE is not present for each RL in the *RL Information* IE, the Node B shall regard the Radio Link Addition procedure as failed and shall respond with a RADIO LINK ADDITION FAILURE message.]

[FDD – If the RADIO LINK ADDITION REQUEST message includes the *DL Reference Power* IEs in the *RL Information* IE but the power balancing is not active in the existing RL(s) or the power balancing is active with the Power Balancing Adjustment Type of the Node B Communication Context set to "Common" in the existing RL(s), the Node B shall regard the Radio Link Addition procedure as failed and shall respond with a RADIO LINK ADDITION FAILURE message with the cause value "Power Balancing status not compatible".]

If the RADIO LINK ADDITION REQUEST message includes the *Transport Layer Address* IE and the *Binding ID* IE in the *RL Specific DCH Information* IE included in the *RL Information* IE for a specific RL and the *Diversity Control Field* IE is set to "Must", the Node B shall regard the Radio Link Addition procedure as failed and respond with the RADIO LINK ADDITION FAILURE message.

If the RADIO LINK ADDITION REQUEST message contains the *Transport Layer Address* IE or the *Binding ID* IE, and not both are present for a transport bearer intended to be established, the Node B shall reject the procedure using the RADIO LINK ADDITION FAILURE message.

8.3.2 Synchronised Radio Link Reconfiguration Preparation

8.3.2.1 General

The Synchronised Radio Link Reconfiguration Preparation procedure is used to prepare a new configuration of Radio Link(s) related to one Node B Communication Context.

The Synchronised Radio Link Reconfiguration Preparation procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.2.2 Successful Operation

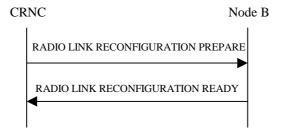


Figure 30: Synchronised Radio Link Reconfiguration Preparation procedure, Successful Operation

The Synchronised Radio Link Reconfiguration Preparation procedure is initiated by the CRNC by sending the RADIO LINK RECONFIGURATION PREPARE message to the Node B. The message shall use the Communication Control Port assigned for this Node B Communication Context.

Upon reception, the Node B shall reserve necessary resources for the new configuration of the Radio Link(s) according to the parameters given in the message. Unless specified below, the meaning of parameters is specified in other specifications.

The Node B shall prioritise resource allocation for the RL(s) to be modified according to Annex A.

DCH Modification:

If the RADIO LINK RECONFIGURATION PREPARE message includes any *DCHs to Modify* IE then the Node B shall treat them each as follows:

- If the *DCHs to Modify* IE includes the *Frame Handling Priority* IE, the Node B should store this information for this DCH in the new configuration. The received Frame Handling Priority should be used when prioritising between different frames in the downlink on the radio interface in congestion situations within the Node B once the new configuration has been activated.
- If the *DCHs to Modify* IE includes the *Transport Format Set* IE for the UL of a DCH, the Node B shall apply the new Transport Format Set in the Uplink of this DCH in the new configuration.
- If the *DCHs to Modify* IE includes the *Transport Format Set* IE for the DL of a DCH, the Node B shall apply the new Transport Format Set in the Downlink of this DCH in the new configuration.
- If the *DCHs to Modify* IE includes multiple *DCH Specific Info* IEs, the Node B shall treat the DCHs in the *DCHs to Modify* IE as a set of co-ordinated DCHs. The Node B shall include these DCHs in the new configuration only if it can include all of them in the new configuration.
- If the *DCHs to Modify* IE includes the *UL FP Mode* IE for a DCH or a DCH which belongs to a set of coordinated DCHs, the Node B shall apply the new FP Mode in the Uplink of the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- If the *DCHs to Modify* IE includes the *ToAWS* IE for a DCH or a DCH which belongs to a set of co-ordinated DCHs, the Node B shall apply the new ToAWS in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- If the *DCHs to Modify* IE includes the *ToAWE* IE for a DCH or a DCH which belongs to a set of co-ordinated DCHs, the Node B shall apply the new ToAWE in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- [TDD If the *DCHs to Modify* IE includes the *CCTrCH ID* IE for the DL of a DCH to be modified, the Node B shall apply the new CCTrCH ID in the Downlink of this DCH in the new configuration.]
- [TDD If the *DCHs to Modify* IE includes the *CCTrCH ID* IE for the UL of a DCH to be modified, the Node B shall apply the new CCTrCH ID in the Uplink of this DCH in the new configuration.]

DCH Addition:

If the RADIO LINK RECONFIGURATION PREPARE message includes any *DCHs to Add* IEs then the Node B shall treat them each as follows:

- If the *DCHs to Add* IE includes multiple *DCH Specific Info* IEs, the Node B shall treat the DCHs in the *DCHs to Add* IE as a set of co-ordinated DCHs. The Node B shall include these DCHs in the new configuration only if it can include all of them in the new configuration.
- [FDD For DCHs which do not belong to a set of co-ordinated DCHs with the *QE-Selector* IE set to "selected", the Transport channel BER from that DCH shall be the base for the QE in the UL data frames. If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE, ref. [16]. If the *QE-Selector* IE is set to "non-selected", the Physical channel BER shall be used for the QE in the UL data frames, ref. [16].]
- For a set of co-ordinated DCHs, the Transport channel BER from the DCH with the *QE-Selector* IE set to "selected" shall be used for the QE in the UL data frames, ref. [16]. [FDD If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE, ref. [16]. If all DCHs have the *QE-Selector* IE set to "non-selected", the Physical channel BER shall be used for the QE, ref. [16].]
- The Node B should store the *Frame Handling Priority* IE received for a DCH to be added in the new configuration. The received Frame Handling Priority should be used when prioritising between different frames in the downlink on the Uu interface in congestion situations within the Node B once the new configuration has been activated.
- The Node B shall use the included *UL FP Mode* IE for a DCH or a set of co-ordinated DCHs to be added as the new FP Mode in the Uplink of the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- The Node B shall use the included *ToAWS* IE for a DCH or a set of co-ordinated DCHs to be added as the new Time of Arrival Window Start Point in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.

- The Node B shall use the included *ToAWE* IE for a DCH or a set of co-ordinated DCHs to be added as the new Time of Arrival Window End Point in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- [TDD The Node B shall apply the *CCTrCH ID* IE (for the DL) in the Downlink of this DCH in the new configuration.]
- [TDD The Node B shall apply the *CCTrCH ID* IE (for the UL) in the Uplink of this DCH in the new configuration.]

DCH Deletion:

If the RADIO LINK RECONFIGURATION PREPARE message includes any *DCHs to Delete* IE, the Node B shall not include the referenced DCHs in the new configuration.

If all of the DCHs belonging to a set of co-ordinated DCHs are requested to be deleted, the Node B shall not include this set of co-ordinated DCHs in the new configuration.

Physical Channel Modification:

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes an *UL DPCH Information* IE, then the Node B shall apply the parameters to the new configuration as follows:]

- [FDD If the *UL DPCH Information* IE includes the *Uplink Scrambling Code* IE, the Node B shall apply this Uplink Scrambling Code to the new configuration.]
- [FDD If the *UL DPCH Information* IE includes the *Min UL Channelisation Code Length* IE, the Node B shall apply the value in the new configuration. The Node B shall apply the contents of the *Max Number of UL DPDCHs* IE (if it is included) in the new configuration.]
- [FDD If the *UL DPCH Information* IE includes the *UL SIR Target* IE, the Node B shall use the value for the UL inner loop power control when the new configuration is being used.]
- [FDD If the *UL DPCH Information* IE includes the *Puncture Limit* IE, the Node B shall apply the value in the uplink of the new configuration.]
- [FDD The Node B shall use the *TFCS* IE for the UL (if present) when reserving resources for the uplink of the new configuration. The Node B shall apply the new TFCS in the Uplink of the new configuration.]
- [FDD If the *UL DPCH Information* IE includes the *UL DPCCH Slot Format* IE, the Node B shall set the new Uplink DPCCH Structure to the new configuration.]
- [FDD If the *UL DPCH Information* IE includes the *Diversity Mode* IE, the Node B shall apply diversity according to the given value.]
- [FDD If the *UL DPCH Information* IE includes an *SSDT Cell Identity Length* IE and/or an *S-Field Length* IE, the Node B shall apply the values in the new configuration.]

[FDD - If the RADIO LINK RECONFIGURATION PREPARE message includes a *DL DPCH Information* IE, the Node B shall apply the parameters to the new configuration as follows:]

- [FDD The Node B shall use the *TFCS* IE for the DL (if it is present) when reserving resources for the downlink of the new configuration. The Node B shall apply the new TFCS in the Downlink of the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *TFCI Signalling Mode* IE or the *TFCI Presence* IE, the Node B shall use the information when building TFCIs in the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *DL DPCCH Slot Format* IE, the Node B shall set the new Downlink DPCCH Structure to the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *Multiplexing Position* IE, the Node B shall apply the indicated multiplexing type in the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *Limited Power Increase* IE set to "Used", the Node B shall, if supported, use Limited Power Increase according to ref. [10] subclause 5.2.1 for the inner loop DL power control in the new configuration.]

- [FDD If the *DL DPCH Information* IE includes the *Limited Power Increase* IE set to "Not Used", the Node B shall not use Limited Power Increase for the inner loop DL power control in the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *PDSCH Code Mapping* IE, then the Node B shall apply the defined mapping between TFCI values and PDSCH channelisation codes.]
- [FDD If the *DL DPCH Information* IE includes the *PDSCH RL ID* IE, then the Node B shall infer that the PDSCH for the specified user will be transmitted on the defined radio link.]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *Transmission Gap Pattern Sequence Information* IE, the Node B shall store the new information about the Transmission Gap Pattern Sequences to be used in the new Compressed Mode Configuration. This new Compressed Mode Configuration shall be valid in the Node B until the next Compressed Mode Configuration is configured in the Node B or Node B Communication Context is deleted.]

[TDD – UL/DL CCTrCH Modification]

[TDD – If the RADIO LINK RECONFIGURATION PREPARE message includes any *UL CCTrCH to Modify* or *DL CCTrCH to Modify* IE, then the Node B shall treat them each as follows:]

- [TDD If the IE includes any of the *TFCS* IE, *TFCI coding* IE or *Puncture Limit* IE, the Node B shall apply these as the new values, otherwise the old values specified for this CCTrCH are still applicable.]
- [TDD If the IE includes any *UL DPCH To Add* IE or *DL DPCH To Add* IE, the Node B shall include this DPCH in the new configuration.]
- [TDD If the IE includes any *UL DPCH To Delete* IE or *DL DPCH To Delete* IE, the Node B shall remove this DPCH in the new configuration.]
- [TDD If the IE includes any *UL DPCH To Modify* IE or *DL DPCH To Modify* IE and includes any of the *Repetition Period* IE, *Repetition Length* IE or *TDD DPCH Offset* IE, or the message includes UL/DL Timeslot Information and includes any of the [3.84Mcps TDD *Midamble Shift And Burst Type* IE, *Time Slot* IE], [1.28Mcps TDD *Midamble Shift LCR* IE, *Time Slot LCR* IE], or *TFCI Presence* IE or the message includes UL/DL Code information and includes [3.84Mcps TDD *TDD Channelisation Code* IE], [1.28Mcps TDD *TDD Channelisation Code LCR* IE], the Node B shall apply these specified information elements as the new values, otherwise the old values specified for this DPCH configuration are still applicable.]
- [1.28Mcps TDD If the *UL CCTrCH To Modify* IE includes the *UL SIR Target* IE, the Node B shall use the value for the UL inner loop power control according [19] and [21] when the new configuration is being used.]

[TDD - UL/DL CCTrCH Addition]

[TDD – If the RADIO LINK RECONFIGURATION PREPARE message includes any *UL CCTrCH To Add* IE or *DL CCTrCH To Add* IE, the Node B shall include this CCTrCH in the new configuration.]

[TDD – If the *UL/DL CCTrCH To Add* IE includes any *UL/DL DPCH Information* IE, the Node B shall reserve necessary resources for the new configuration of the UL/DL DPCH(s) according to the parameters given in the message.]

[TDD – If the RADIO LINK RECONFIGURATION PREPARE message includes a *DL CCTrCH To Add* IE, the Node B shall set the TPC step size of that CCTrCH to the same value as the lowest numbered DL CCTrCH in the current configuration.]

[1.28Mcps TDD – The Node B shall use the *UL SIR Target* IE in the *UL CCTrCH To Add* IE as the UL SIR value for the inner loop power control for this CCTrCH according [19] and [21] in the new configuration.]

[TDD – UL/DL CCTrCH Deletion]

[TDD – If the RADIO LINK RECONFIGURATION PREPARE message includes any UL or DL CCTrCH to be deleted , the Node B shall remove this CCTrCH in the new configuration.]

DL Power Control:

- [FDD - If the *RL Information* IE includes the *DL Reference Power* IEs and the power balancing is active, the Node B shall update the reference power of the power balancing in the indicated RL(s), if updating of power balancing parameters by the RADIO LINK RECONFIGURATION PREPARE message is supported, at the CFN

in the RADIO LINK RECONFIGURATION COMMIT message, according to subclause 8.3.7, using the *DL Reference Power* IE. If the CFN modulo the value of the *Adjustment Period* IE is not equal to 0, the power balancing continues with the old reference power until the end of the current adjustment period, and the updated reference power shall be used from the next adjustment period.

[FDD - If updating of power balancing parameters by the RADIO LINK RECONFIGURATION PREPARE message is supported by the Node B, the Node B shall include the *DL Power Balancing Updated Indicator* IE in the *RL Information Response* IE in the RADIO LINK RECONFIGURATION READY message.]

DSCH Addition/Modification/Deletion:

If the RADIO LINK RECONFIGURATION PREPARE message includes any *DSCH To Add*, *DSCH To Modify* or *DSCH To Delete* IE, then the Node B shall use this information to add/modify/delete the indicated DSCH channels to/from the radio link, in the same way as the DCH info is used to add/modify/release DCHs.

The Node B shall include in the RADIO LINK RECONFIGURATION READY message both the *Transport Layer Address* IE and the *Binding ID* IE for the transport bearer to be established for each DSCH.

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *TFC12 Bearer Information* IE, then the Node B shall support the establishment of a transport bearer on which the DSCH TFCI Signaling control frames shall be received if one does not already exist or shall apply the new values if such a bearer does already exist for this Node B Communication Context. The *Binding ID* IE and *Transport Layer Address* IE of any new bearer to be set up for this purpose shall be returned in the RADIO LINK RECONFIGURATION READY message. If the RADIO LINK RECONFIGURATION PREPARE message specifies that the TFC12 transport bearer is to be deleted, then the Node B shall release the resources associated with that bearer in the new configuration.]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *TFCI2 Bearer Request Indicator* IE in the *TFCI2 Bearer Information* IE with the value "New Bearer Requested", the Node B shall, if supported, establish a new transport bearer replacing the existing transport bearer on which the DSCH TFCI Signaling control frames shall be received. The *Binding ID* IE and *Transport Layer Address* IE of a new bearer to be set up for this purpose shall be returned in the RADIO LINK RECONFIGURATION READY message.]

[FDD – If the *TFCI Signalling Mode* IE within the RADIO LINK RECONFIGURATION PREPARE message indicates that there shall be a hard split on the TFCI field but a TFCI2 transport bearer has not already been set up and *TFCI2 Bearer Information* IE is not included in the message, then the Node B shall transmit the TFCI2 field with zero power in the new configuration.]

[FDD – If the *TFCI Signalling Mode* IE within the RADIO LINK RECONFIGURATION PREPARE message indicates that there shall be a hard split on the TFCI and the *TFCI2 Bearer Information* IE is included in the message, then the Node B shall transmit the TFCI2 field with zero power until Synchronisation is achieved on the TFCI2 transport bearer and the first valid DSCH TFCI Signalling control frame is received on this bearer in the new configuration (see ref. [24]).]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *Length Of TFCI2* IE, then the Node B shall apply the length of TFCI (field 2) indicated in the message in the new configuration.]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message does not include the *Length Of TFCI2* IE and the *Split Type* IE is present with the value "Hard", then the Node B shall assume the length of the TFCI (field 2) is 5 bits in the new configuration.]

[FDD - If the RADIO LINK RECONFIGURATION PREPARE message includes the *DSCH Common Information* IE, the Node B shall treat it as follows:]

- [FDD If the *Enhanced DSCH PC Indicator* IE is included and set to "Enhanced DSCH PC Active in the UE", the Node B shall activate enhanced DSCH power control in accordance with ref. [10] subclause 5.2.2, if supported, using either:]
 - [FDD the *SSDT Cell Identity for EDSCHPC* IE in the *RL Information* IE, if the *SSDT Cell Identity* IE is not included in the *RL Information* IE or]
 - [FDD the SSDT Cell Identity IE in the RL Information IE, if both the SSDT Cell Identity IE and the SSDT Cell Identity for EDSCHPC IE are included in the RL Information IE.]

[FDD - together with the SSDT Cell Identity Length IE in UL DPCH Information IE, and Enhanced DSCH PC IE, in the new configuration.]

[FDD - If the enhanced DSCH power control is activated and the TFCI power control in DSCH hard split mode is supported, the primary/secondary status determination in the enhanced DSCH power control is also applied to the TFCI power control in DSCH hard split mode.]

[FDD - If the RADIO LINK RECONFIGURATION PREPARE message includes the *Enhanced DSCH PC Indicator* IE set to "Enhanced DSCH PC not Active in the UE", the Node B shall deactivate enhanced DSCH power control in the new configuration.]

[TDD – USCH Addition/Modification/Deletion:]

- [TDD If the RADIO LINK RECONFIGURATION PREPARE message includes USCH information for the USCHs to be added/modified/deleted then the Node B shall use this information to add/modify/delete the indicated USCH channels to/from the radio link, in the same way as the DCH info is used to add/modify/release DCHs.]
- [TDD The Node B shall include in the RADIO LINK RECONFIGURATION READY message both the *Transport Layer Address* IE and the *Binding ID* IE for the transport bearer to be established for each USCH.]

RL Information:

If the RADIO LINK RECONFIGURATION PREPARE message includes the *RL Information* IE, the Node B shall treat it as follows:

- [FDD When more than one DL DPDCH are assigned per RL, the segmented physical channel shall be mapped on to DL DPDCHs according to [8]. When *p* number of DL DPDCHs are assigned to each RL, the first pair of DL Scrambling Code and FDD DL Channelisation Code Number corresponds to "*PhCH number 1*", the second to "*PhCH number 2*", and so on until the *pth* to "*PhCH number p*".]
- [FDD If the *RL Information* IE includes the *SSDT Indication* IE set to "SSDT Active in the UE", the Node B may activate SSDT using the *SSDT Cell Identity* IE in the new configuration.]
- [FDD If the *RL Information* IE includes the *Qth Parameter* IE and the *SSDT Indication* IE set to "SSDT Active in the UE", the Node B shall use the *Qth Parameter* IE, if Qth signalling is supported, when SSDT is activated in the new configuration.]
- [FDD If the *RL Information* IE includes the *SSDT Indication* IE set to "SSDT not Active in the UE", the Node B shall deactivate SSDT in the new configuration.]
- [FDD If the *RL Information* IE includes a *DL Code Information* IE, the Node B shall apply the values in the new configuration.]
- [FDD If the *RL Information* IE contains the *Transmission Gap Pattern Sequence Code Information* IE in the *DL Code Information* IE for any of the allocated DL Channelisation Codes, the Node B shall apply the alternate scrambling code as indicated whenever the downlink compressed mode method SF/2 is active in the new configuration.]
- If the *RL Information* IE includes the *Maximum DL Power* and/or the *Minimum DL Power* IEs, the Node B shall apply the values in the new configuration. [FDD During compressed mode, the $P_{SIR}(k)$, as described in ref.[10] subclause 5.2.1.3, shall be added to the maximum DL power in slot k.]
- [TDD If the *RL Information* IE includes the *Initial DL Transmission Power* IE, the Node B shall determine the initial CCTrCH DL power for each CCTrCH by the following rule: If the *CCTrCH Initial DL Transmission Power* IE is included for that CCTrCH, then the Node B shall use that power for the initial CCTrCH DL power, otherwise the initial CCTrCH DL power is the *Initial DL Transmission Power* IE included in the *RL Information* IE. The Node B shall apply the determined initial CCTrCH DL power to the transmission on each DPCH of the CCTrCH when starting transmission on a new CCTrCH until the UL synchronisation on the Uu interface is achieved for the CCTrCH. If no *Initial DL Transmission Power* IE is included with a new CCTrCH (even if *CCTrCH Initial DL Transmission Power* IEs are included), the Node B shall use any transmission power level currently used on already existing CCTrCHs when starting transmission for a new CCTrCH. No inner loop power control shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[22], subclause 4.2.3.3).]
- [FDD- If the *RL Information* IE includes the *DL DPCH Timing Adjustment* IE, the Node B shall adjust the timing of the radio link accordingly in the new configuration.]

[TDD - PDSCH RL ID]

- [TDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *PDSCH RL ID* IE then in the new configuration the Node B shall use the PDSCH and/or PUSCH in this radio link.]

Signalling bearer rearrangement:

If the RADIO LINK RECONFIGURATION PREPARE message includes the *Signalling Bearer Request Indicator* IE the Node B shall, if supported, allocate a new Communication Control Port for the control of the Node B Communication Context and include the *Target Communication Control Port ID* IE in the RADIO LINK RECONFIGURATION READY message.

HS-DSCH Addition/Modification/Deletion:

If the RADIO LINK RECONFIGURATION PREPARE message includes any *HS-DSCH To Add* IE or *HS-DSCH To Modify* IE or *HS-DSCH To Delete* IE, then the Node B shall use this information to add/modify/delete the indicated HS-DSCH channel to/from the radio link.

If the RADIO LINK RECONFIGURATION PREPARE message includes an *HS-PDSCH RL ID* IE, then the Node B shall configure the HS-PDSCH in the radio link indicated by this IE, while removing any existing HS-PDSCH resources from other radio links associated with the Node B Communication Context.

If the RADIO LINK RECONFIGURATION PREPARE message includes an *HS-DSCH-RNTI* IE, then the Node B shall use the HS-DSCH-RNTI for the Node B Communication Context.

If the RADIO LINK CONFIGURATION PREPARE message includes an *HS-DSCH To Delete* IE requesting the deletion of certain HS-DSCH resources for the Node B Communication Context, the Node B shall remove the indicated HS-DSCH in the new configuration.

The Node B shall include the *HS-DSCH Initial Capacity Allocation* IE in the RADIO LINK RECONFIGURATION READY message for each MAC-d flow, if the Node B allows the CRNC to start transmission of MAC-d PDUs before the Node B has allocated capacity on user plane as described in [24].

General

If the RADIO LINK RECONFIGURATION PREPARE message includes the *Transport Layer Address* IE and *Binding ID* IEs in the *DSCHs To Modify*, *DSCHs To Add*, [TDD - *USCHs To Modify*, *USCHs To Add*], *HS-DSCH To Modify*, *HS-DSCH To Add* or in the *RL Specific DCH Information* IEs, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for any Transport Channel or HS-DSCH MAC-d flow being added, or any Transport Channel or HS-DSCH MAC-d flow being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE.

If the requested modifications are allowed by the Node B and the Node B has successfully reserved the required resources for the new configuration of the Radio Link(s), it shall respond to the CRNC with the RADIO LINK RECONFIGURATION READY message. When this procedure has been completed successfully there exists a Prepared Reconfiguration, as defined in subclause 3.1.

In the RADIO LINK RECONFIGURATION READY message, the Node B shall include the *RL Information Response* IE for each affected Radio Link.

The Node B shall include in the RADIO LINK RECONFIGURATION READY message the *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE for any Transport Channel or HS-DSCH MAC-d flow being added or any Transport Channel or HS-DSCH MAC-d flow being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE.

In case of a DCH requiring a new transport bearer on Iub, the *Transport Layer Address* IE and the *Binding ID* IE shall be included in the IE *DCH Information Response* IE.

In the case of a set of co-ordinated DCHs requiring a new transport bearer on the Iub interface, the *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE shall be included only for one of the DCH in the set of co-ordinated DCHs.

In the case of a Radio Link being combined with another Radio Link within the Node B, the *RL Information Response* IE shall be included only for one of the combined RLs. The *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE shall be included only for one of the combined Radio Links.

8.3.2.3 Unsuccessful Operation

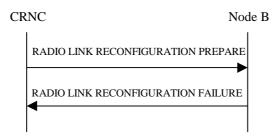


Figure 31: Synchronised Radio Link Reconfiguration Preparation procedure, Unsuccessful Operation

If the Node B cannot reserve the necessary resources for all the new DCHs of one set of co-ordinated DCHs requested to be added, it shall regard the Synchronised Radio Link Reconfiguration Preparation procedure as having failed.

If the requested Synchronised Radio Link Reconfiguration Preparation procedure fails for one or more RLs, the Node B shall send the RADIO LINK RECONFIGURATION FAILURE message to the CRNC, indicating the reason for failure.

Typical cause values are as follows:

Radio Network Layer Cause

- UL SF not supported
- DL SF not supported
- Downlink Shared Channel Type not supported
- Uplink Shared Channel Type not supported
- CM not supported
- Number of DL codes not supported
- Number of UL codes not supported
- RL Timing Adjustment not supported

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.3.2.4 Abnormal Conditions

If only a subset of all the DCHs belonging to a set of co-ordinated DCHs is requested to be deleted, the Node B shall regard the Synchronised Radio Link Reconfiguration Preparation procedure as having failed and shall send the RADIO LINK RECONFIGURATION FAILURE message to the CRNC.

If more than one DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected" [TDD – or no DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected"], the Node B shall regard the Synchronised Radio Link Reconfiguration Preparation procedure as failed and shall respond with a RADIO LINK RECONFIGURATION FAILURE message.

[FDD - If the *RL Information* IE includes the *SSDT Indication* IE set to "SSDT Active in the UE" and SSDT is not active in the current configuration, the Node B shall regard the Synchronised Radio Link Reconfiguration Preparation

procedure as failed if the *UL DPCH Information* IE does not include the *SSDT Cell Identity Length* IE. In this case, it shall respond with a RADIO LINK RECONFIGURATION FAILURE message.]

If the RADIO LINK RECONFIGURATION PREPARE message includes a *DCHs To Modify* IE or *DCHs To Add* IE with multiple *DCH Specific Info* IEs, and if the DCHs in the *DCHs To Modify* IE or *DCHs To Add* IE do not have the same *Transmission Time Interval* IE in the *Semi-Static Transport Format Information* IE, then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.

[FDD - If the *RL Information* IE includes the *DL Reference Power* IEs, but the power balancing is not active in the indicated RL(s), the Node B shall regard the Synchronised Radio Link Reconfiguration Preparation procedure as having failed and the Node B shall respond with the RADIO LINK RECONFIGURATION FAILURE message with the cause value "Power Balancing status not compatible".]

[FDD - If the power balancing is active with the Power Balancing Adjustment Type of the Node B Communication Context set to "Common" in the existing RL(s) but the *RL Information* IE includes more than one *DL Reference Power* IEs, the Node B shall regard the Synchronised Radio Link Reconfiguration Preparation procedure as having failed and the Node B shall respond with the RADIO LINK RECONFIGURATION FAILURE message with the cause value "Power Balancing status not compatible".]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *Length Of TFCI2* IE but the *TFCI Signalling Option* IE is set to "Normal", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message does not include the *Length Of TFC12* IE but the *Split Type* IE is set to "Logical", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

[FDD – If the RADIO LINK RECONFIGURATION PREPARE message includes the *Split Type* IE set to the value "Hard" and the *Length Of TFC12* IE set to the value "5", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

If the RADIO LINK RECONFIGURATION PREPARE message contains the *Transport Layer Address* IE or the *Binding ID* IE when establishing a transport bearer for any Transport Channel or HS-DSCH MAC-d flow being added, or any Transport Channel or HS-DSCH MAC-d flow being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE, and not both are present for a transport bearer intended to be established, the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.

8.3.3 Synchronised Radio Link Reconfiguration Commit

8.3.3.1 General

This procedure is used to order the Node B to switch to the new configuration for the Radio Link(s) within the Node B, previously prepared by the Synchronised Radio Link Reconfiguration Preparation procedure.

The message shall use the Communication Control Port assigned for this Node B Communication Context.

8.3.3.2 Successful Operation



Figure 32:Synchronised Radio Link Reconfiguration Commit procedure, Successful Operation

The Node B shall switch to the new configuration previously prepared by the Synchronised Radio Link Reconfiguration Preparation procedure at the next coming CFN with a value equal to the value requested by the CRNC in the *CFN* IE when receiving the RADIO LINK RECONFIGURATION COMMIT message from the CRNC.

[FDD – If the *Active Pattern Sequence Information* IE is included in the RADIO LINK RECONFIGURATION COMMIT message, the *CM Configuration Change CFN* IE in the *Active Pattern Sequence Information* IE shall be ignored by the Node B.]

When this procedure has been completed the Prepared Reconfiguration does not exist any more, see subclause 3.1.

In the case of a transport channel modification for which a new transport bearer was requested and established, the switch to the new transport bearer shall also take place at the indicated CFN. The detailed frame protocol handling during transport bearer replacement is described in [16], subclause 5.10.1 and in [24], subclause 5.8.2.

In the case of a signalling bearer re-arrangement, the new Communication Control Port shall be used once the Node B has received the RADIO LINK RECONFIGURATION COMMIT message via the old Communication Control Port.

[FDD – If the RADIO LINK RECONFIGURATION COMMIT includes the *Active Pattern Sequence Information* IE, the Node B shall deactivate all the ongoing Transmission Gap Pattern Sequences at the *CFN* IE. From that moment on, all Transmission Gap Pattern Sequences included in *Transmission Gap Pattern Sequence Status* IE repetitions shall be started when the indicated *TGCFN* IE elapses. The *CFN* IE and *TGCFN* IE for each sequence refer to the next coming CFN with that value. If the values of the *CFN* IE and the *TGCFN* IE are equal, the concerned Transmission Gap Pattern Sequence shall be started immediately at the CFN with a value equal to the value received in the *CFN* IE.]

8.3.3.3 Abnormal Conditions

If a new transport bearer is required for the new reconfiguration and it is not available at the requested CFN, the Node B shall initiate the Radio Link Failure procedure.

8.3.4 Synchronised Radio Link Reconfiguration Cancellation

8.3.4.1 General

This procedure is used to order the Node B to release the new configuration for the Radio Link(s) within the Node B, previously prepared by the Synchronised Radio Link Preparation Reconfiguration procedure.

The message shall use the Communication Control Port assigned for this Node B Communication Context.

8.3.4.2 Successful Operation



Figure 33:Synchronised Radio Link Reconfiguration Cancellation procedure, Successful Operation

When receiving the RADIO LINK RECONFIGURATION CANCEL message from the CRNC, the Node B shall release the new configuration ([FDD - including the new Transmission Gap Pattern Sequence parameters (if existing)]) previously prepared by the Synchronised Radio Link Reconfiguration Preparation procedure and continue using the old configuration. When this procedure has been completed the Prepared Reconfiguration does not exist any more, see subclause 3.1.

8.3.4.3 Abnormal Conditions

_

8.3.5 Unsynchronised Radio Link Reconfiguration

8.3.5.1 General

The Unsynchronised Radio Link Reconfiguration procedure is used to reconfigure Radio Link(s) related to one UE-UTRAN connection within a Node B.

The Unsynchronised Radio Link Reconfiguration procedure is used when there is no need to synchronise the time of the switching from the old to the new configuration in one Node B used for a UE-UTRAN connection with any other Node B also used for the UE-UTRAN connection.

The Unsynchronised Radio Link Reconfiguration procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.5.2 Successful Operation

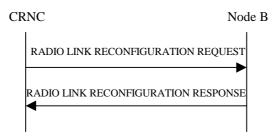


Figure 34: Unsynchronised Radio Link Reconfiguration Procedure, Successful Operation

The Unsynchronised Radio Link Reconfiguration procedure is initiated by the CRNC by sending the RADIO LINK RECONFIGURATION REQUEST message to the Node B. The message shall use the Communication Control Port assigned for this Node B Communication Context.

Upon reception, the Node B shall modify the configuration of the Radio Link(s) according to the parameters given in the message. Unless specified below, the meaning of parameters is specified in other specifications.

The Node B shall prioritise resource allocation for the RL(s) to be modified according to Annex A.

DCH Modification:

If the RADIO LINK RECONFIGURATION REQUEST message includes any *DCHs To Modify* IE then the Node B shall treat them each as follows:

- If the *DCHs To Modify* IE includes the *Frame Handling Priority* IE, the Node B should store this information for this DCH in the new configuration. The received Frame Handling Priority should be used when prioritising between different frames in the downlink on the Uu interface in congestion situations within the Node B once the new configuration has been activated.
- If the *DCHs To Modify* IE includes the *Transport Format Set* IE for the UL, the Node B shall apply the new Transport Format Set in the Uplink of this DCH in the new configuration.
- If the *DCHs To Modify* IE includes the *Transport Format Set* IE for the DL, the Node B shall apply the new Transport Format Set in the Downlink of this DCH in the new configuration.
- If the *DCHs To Modify* IE includes multiple *DCH Specific Info* IEs, then the Node B shall treat the DCHs in the *DCHs To Modify* IE as a set of co-ordinated DCHs. The Node B shall include these DCHs in the new configuration only if it can include all of them in the new configuration.
- If the *DCHs To Modify* IE includes the *UL FP Mode* IE for a DCH or a set of co-ordinated DCHs, the Node B shall apply the new FP Mode in the Uplink of the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- If the *DCHs To Modify* IE includes the *ToAWS* IE for a DCH or a set of co-ordinated DCHs, the Node B shall apply the new ToAWS in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- If the *DCHs To Modify* IE includes the *ToAWE* IE for a DCH or a set of co-ordinated DCHs, the Node B shall apply the new ToAWE in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- [TDD If the RADIO LINK RECONFIGURATION REQUEST message includes the *CCTrCH ID* IE for the DL of a DCH to be modified, the Node B shall apply the new CCTrCH ID in the Downlink of this DCH in the new configuration.]

- [TDD – If the RADIO LINK RECONFIGURATION REQUEST message includes the *CCTrCH ID* IE for the UL of a DCH to be modified, the Node B shall apply the new CCTrCH ID in the Uplink of this DCH in the new configuration.]

DCH Addition:

If the RADIO LINK RECONFIGURATION REQUEST message includes any *DCH To Add* IE, the Node B shall reserve necessary resources for the new configuration of the Radio Link(s) according to the parameters given in the message and include these DCHs in the new configuration. In particular:

- If a *DCHs To Add* IE includes multiple *DCH Specific Info* IEs for a DCH to be added, the Node B shall treat the DCHs in the *DCHs To Add* IE as a set of co-ordinated DCHs. The Node B shall include these DCHs in the new configuration only if it can include all of them in the new configuration.
- [FDD For DCHs which do not belong to a set of co-ordinated DCHs with the *QE-Selector* IE set to "selected", the Node B shall use the Transport channel BER from that DCHas the base for the QE in the UL data frames. If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE [16]. If the *QE-Selector* IE is set to "non-selected", the Physical channel BER shall be used for the QE in the UL data frames, ref. [16].]
- For a set of co-ordinated DCHs, the Node B shall use the Transport channel BER from the DCH with the *QE-Selector* IE set to "selected" as the QE in the UL data frames [16]. [FDD If no Transport channel BER is available for the selected DCH, the Physical channel BER shall be used for the QE [16]. If all DCHs have the *QE-Selector* IE set to "non-selected", the Physical channel BER shall be used for the QE [16].]
- The Node B should store the *Frame Handling Priority* IE received for a DCH to be added in the new configuration. The received Frame Handling Priority should be used when prioritising between different frames in the downlink on the Uu interface in congestion situations within the Node B once the new configuration has been activated.
- The Node B shall use the included *UL FP Mode* IE for a DCH or a set of co-ordinated DCHs to be added as the new FP Mode in the Uplink of the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- The Node B shall use the included *ToAWS* IE for a DCH or a set of co-ordinated DCHs to be added as the new Time of Arrival Window Start Point in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- The Node B shall use the included *ToAWE* IE for a DCH or a set of co-ordinated DCHs to be added as the new Time of Arrival Window End Point in the user plane for the DCH or the set of co-ordinated DCHs in the new configuration.
- [TDD If the RADIO LINK RECONFIGURATION REQUEST message includes the *CCTrCH ID* IE for the DL of a DCH to be added, the Node B shall apply the new CCTrCH ID in the downlink of this DCH in the new configuration.]
- [TDD If the RADIO LINK RECONFIGURATION REQUEST message includes the *CCTrCH ID* IE for the UL of a DCH to be added, the Node B shall apply the new CCTrCH ID in the Uplink of this DCH in the new configuration.]

DCH Deletion:

If the RADIO LINK RECONFIGURATION REQUEST message includes any DCH to be deleted from the Radio Link(s), the Node B shall not include this DCH in the new configuration.

If all of the DCHs belonging to a set of co-ordinated DCHs are requested to be deleted, the Node B shall not include this set of co-ordinated DCHs in the new configuration.

[FDD - Physical Channel Modification:]

[FDD - If the RADIO LINK RECONFIGURATION REQUEST message includes an *UL DPCH Information* IE, then the Node B shall apply the parameters to the new configuration as follows:]

- [FDD – If the *UL DPCH Information* IE includes the *TFCS* IE for the UL, the Node B shall apply the new TFCS in the Uplink of the new configuration.]

[FDD – If the RADIO LINK RECONFIGURATION REQUEST message includes a *DL DPCH Information* IE, then the Node B shall apply the parameters to the new configuration as follows:]

- [FDD If the *DL DPCH Information* IE includes on the *TFCS* IE for the DL, the Node B shall apply the new TFCS in the Downlink of the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *TFCI Signalling Mode* IE, the Node B shall use the information when building TFCIs in the new configuration.
 - [FDD If the *Length Of TFCI2* IE is included, then the Node B shall apply the length of TFCI (field 2) indicated in the message in the new configuration.]
 - [FDD If the *Length Of TFCI2* IE is not included and the *Split Type* IE is present with the value "Hard", then the Node B shall assume the value of the TFCI (field 2) is 5 bits in the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *Limited Power Increase* IE set to "Used", the Node B shall, if supported, use Limited Power Increase according to ref. [10] subclause 5.2.1 for the inner loop DL power control in the new configuration.]
- [FDD If the *DL DPCH Information* IE includes the *Limited Power Increase* IE set to "Not Used", the Node B shall not use Limited Power Increase for the inner loop DL power control in the new configuration.]

[FDD – If the RADIO LINK RECONFIGURATION REQUEST message includes the *Transmission Gap Pattern Sequence Information* IE, the Node B shall store the new information about the Transmission Gap Pattern Sequences to be used in the new Compressed Mode Configuration. This new Compressed Mode Configuration shall be valid in the Node B until the next Compressed Mode Configuration is configured in the Node B or Node B Communication Context is deleted.]

[TDD – UL/DL CCTrCH Modification]

[TDD – If the RADIO LINK RECONFIGURATION REQUEST message includes any *UL CCTrCH To Modify* IE or *DL CCTrCH To Modify* IE in the Radio Link(s), the Node B shall reserve necessary resources for the new configuration of the Radio Link(s) according to the parameters given in the message.]

[TDD – If the *UL/DL CCTrCH To Modify* IE includes *TFCS* IE and/or *Puncture Limit* IE, the Node B shall apply these as the new values, otherwise the old values specified for this CCTrCH are still applicable.]

[TDD - UL/DL CCTrCH Deletion]

[TDD – If the RADIO LINK RECONFIGURATION REQUEST message includes any *UL CCTrCH To Delete* IE or *DL CCTrCH To Delete* IE, the Node B shall not include this CCTrCH in the new configuration.]

DL Power Control:

- [FDD – If the *Radio Link Information* IE includes the *DL Reference Power* IE and the power balancing is active, the Node B shall update the reference power of the power balancing in the indicated RL(s), if updating of power balancing parameters by the RADIO LINK RECONFIGURATION REQUEST message is supported, using the *DL Reference Power* IE in the RADIO LINK RECONFIGURATION REQUEST message. The updated reference power shall be used from the next adjustment period.]

[FDD – If updating of power balancing parameters by the RADIO LINK RECONFIGURATION REQUEST message is supported by the Node B, the Node B shall include the *DL Power Balancing Updated Indicator* IE in the *RL Information Response* IE in the RADIO LINK RECONFIGURATION RESPONSE message.]

RL Information:

If the RADIO LINK RECONFIGURATION REQUEST message includes the *RL Information* IE, the Node B shall treat it as follows:

- If the *RL Information* IE includes the *Maximum DL Power* IE, the Node B shall apply this value to the new configuration and not transmit with a higher power on any Downlink DPCH of the Radio Link once the new configuration is being used. [FDD - During compressed mode, the $P_{SIR}(k)$, as described in ref.[10] subclause 5.2.1.3, shall be added to the maximum DL power in slot k.]

- If the *RL Information* IE includes the *Minimum DL Power* IE, the Node B shall apply this value to the new configuration and never transmit with a lower power on any Downlink Channelisation Code of the Radio Link once the new configuration is being used.
- [FDD If the *RL Information* IE contains the *Transmission Gap Pattern Sequence Code Information* IE in the *DL Code Information* IE for any of the allocated DL Channelisation Codes, the Node B shall apply the alternate scrambling code as indicated whenever the downlink compressed mode method SF/2 is active in the new configuration.]

Signalling Bearer Re-arrangement:

If the RADIO LINK RECONFIGURATION REQUEST message includes the *Signalling Bearer Request Indicator* IE, the Node B shall, if supported, allocate a new Communication Control Port for the control of the Node B Communication Context and include the *Target Communication Control Port ID* IE in the RADIO LINK RECONFIGURATION RESPONSE message.

General

If the RADIO LINK RECONFIGURATION REQUEST message includes the *RL Specific DCH Information* IE, the Node B may use the transport layer address and the binding identifier received from the CRNC when establishing a transport bearer for any Transport Channel being added or any Transport Channel being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE.

If the requested modifications are allowed by the Node B, the Node B has successfully allocated the required resources, and changed to the new configuration, it shall respond to the CRNC with the RADIO LINK RECONFIGURATION RESPONSE message.

In the RADIO LINK RECONFIGURATION RESPONSE message, the Node B shall include the *RL Information Response* IE for each affected Radio Link.

The Node B shall include in the RADIO LINK RECONFIGURATION RESPONSE message the *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE for any Transport Channel being added or any Transport Channel being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE. The detailed frame protocol handling during transport bearer replacement is described in [16], subclause 5.10.1.

In the case of a set of co-ordinated DCHs requiring a new transport bearer on the Iub interface, the *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE shall be included only for one of the DCH in the set of coordinated DCHs.

In the case of a Radio Link being combined with another Radio Link within the Node B, the *RL Information Response* IE shall be included only for one of the combined Radio Links. The *Transport Layer Address* IE and the *Binding ID* IE in the *DCH Information Response* IE shall be included only for one of the combined Radio Links.

In the case of a signalling bearer re-arrangement, the new Communication Control Port shall be used once the Node B has sent the RADIO LINK RECONFIGURATION RESPONSE message via the old Communication Control Port.

8.3.5.3 Unsuccessful Operation

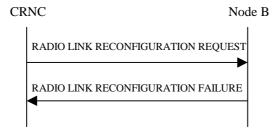


Figure 35: Unsynchronised Radio Link Reconfiguration procedure, Unsuccessful Operation

If the Node B cannot allocate the necessary resources for all the new DCHs of one set of co-ordinated DCHs requested to be set-up, it shall regard the Unsynchronised Radio Link Reconfiguration procedure as having failed.

If the requested Unsynchronised Radio Link Reconfiguration procedure fails for one or more Radio Link(s), the Node B shall send the RADIO LINK RECONFIGURATION FAILURE message to the CRNC, indicating the reason for failure.

Typical cause values are as follows:

Radio Network Layer Cause

- CM not supported

Transport Layer Cause

- Transport Resources Unavailable

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.3.5.4 Abnormal Conditions

If only a subset of all the DCHs belonging to a set of co-ordinated DCHs is requested to be deleted, the Node B shall regard the Unsynchronised Radio Link Reconfiguration procedure as having failed and shall send the RADIO LINK RECONFIGURATION FAILURE message to the CRNC.

[FDD – If the *RL Information* IE contains the *DL Code Information* IE and this IE includes *DL Scrambling Code* and *FDD DL Channelisation Code Number* IEs not matching the DL Channelisation code(s) already allocated to the Radio Link identified by *RL ID* IE, then the Node B shall consider the Unsynchronised Radio Link Reconfiguration procedure as having failed and it shall send the RADIO LINK RECONFIGURATION FAILURE message to the CRNC.

If more than one DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected" [TDD – or no DCH of a set of co-ordinated DCHs has the *QE-Selector* IE set to "selected"], the Node B shall regard the Unsynchronised Radio Link Reconfiguration Preparation procedure as failed and shall respond with a RADIO LINK RECONFIGURATION FAILURE message.

If the RADIO LINK RECONFIGURATION REQUEST message includes a *DCHs To Modify* IE or *DCHs To Add* IE with multiple *DCH Specific Info* IEs, and if the DCHs in the *DCHs To Modify* IE or *DCHs To Add* IE do not have the same *Transmission Time Interval* IE in the *Semi-Static Transport Format Information* IE, then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.

[FDD - If the *RL Information* IE includes the *DL Reference Power* IEs, but the power balancing is not active in the indicated RL(s), the Node B shall regard the Unsynchronised Radio Link Reconfiguration procedure as having failed and the Node B shall respond the RADIO LINK RECONFIGURATION FAILURE message with the cause value "Power Balancing status not compatible".]

[FDD - If the power balancing is active with the Power Balancing Adjustment Type of the Node B Communication Context set to "Common" in the existing RL(s) but the *RL Information* IE includes more than one *DL Reference Power* IEs, the Node B shall regard the Unsynchronised Radio Link Reconfiguration procedure as having failed and the Node B shall respond the RADIO LINK RECONFIGURATION FAILURE message with the cause value "Power Balancing status not compatible".]

[FDD – If the RADIO LINK RECONFIGURATION REQUEST message includes the *Length Of TFC12* IE but the *TFCI Signalling Option* IE is set to "Normal", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

[FDD – If the RADIO LINK RECONFIGURATION REQUEST message does not include the *Length Of TFC12* IE but the *Split Type* IE is set to "Logical", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

[FDD – If the RADIO LINK RECONFIGURATION REQUEST message includes the *Split Type* IE set to the value "Hard" and the *Length Of TFC12* IE set to the value "5", then the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.]

If the RADIO LINK RECONFIGURATION REQUEST message contains the *Transport Layer Address* IE or the *Binding ID* IE when establishing a transport bearer for any Transport Channel being added or any Transport Channel being modified for which a new transport bearer was requested with the *Transport Bearer Request Indicator* IE, and not both are present for a transport bearer intended to be established, the Node B shall reject the procedure using the RADIO LINK RECONFIGURATION FAILURE message.

8.3.6 Radio Link Deletion

8.3.6.1 General

The Radio Link Deletion procedure is used to release the resources in a Node B for one or more established radio links towards a UE.

The Radio Link Deletion procedure may be initiated by the CRNC at any time when the Node B Communication Context exists.

8.3.6.2 Successful Operation

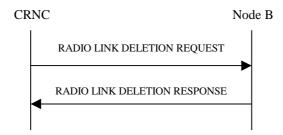


Figure 36: Radio Link Deletion procedure, Successful Operation

The procedure is initiated with a RADIO LINK DELETION REQUEST message sent from the CRNC to the Node B using the Communication Control Port assigned to the concerned Node B Communication Context.

Upon receipt of this message, the Node B shall delete the radio link(s) identified by the *RL ID* IE, *Node B Communication ID* IE and *CRNC Communication ID* IE and release all associated resources and respond to the CRNC with a RADIO LINK DELETION RESPONSE message. [FDD – Resources associated with the TFCI2 bearer shall be released only if all the RLs in the Node B Communication Context are deleted].

[FDD – After deletion of the RL(s), the UL out-of-sync algorithm defined in ref. [10] shall for each of the remaining RL Set(s) use the maximum value of the parameters N_OUTSYNC_IND and T_RLFAILURE that are configured in the cells supporting the radio links of the RL Set and the UL in-sync algorithm defined in ref. [10] shall for each of the remaining RL Set(s) use the minimum value of the parameters N_INSYNC_IND that are configured in the cells supporting the radio links of the RL Set].

8.3.6.3 Unsuccessful Operation

-

8.3.6.4 Abnormal Conditions

If the RL indicated by the *RL ID* IE, *Node B Communication ID* IE and *CRNC Communication ID* IE does not exist, the Node B shall respond with the RADIO LINK DELETION RESPONSE message and use the *CRNC Communication Context ID* IE received in the RADIO LINK DELETION REQUEST message.

8.3.7 Downlink Power Control [FDD]

8.3.7.1 General

The purpose of this procedure is to balance the DL transmission powers of one or more Radio Links used for the related UE-UTRAN connection within the Node B. The Downlink Power Control procedure may be initiated by the CRNC at

any time when the Node B Communication Context exists, irrespective of other ongoing CRNC initiated dedicated NBAP procedures towards this Node B Communication Context. The only exception occurs when the CRNC has requested the deletion of the last RL via this Node B, in which case the Downlink Power Control procedure shall no longer be initiated.

8.3.7.2 Successful Operation



Figure 37: Downlink Power Control procedure, Successful Operation

The procedure is initiated by the CRNC sending a DL POWER CONTROL REQUEST message to the Node B using the Communication Control Port assigned to the concerned Node B Communication Context.

The Power Adjustment Type IE defines the characteristic of the power adjustment.

If the value of the *Power Adjustment Type* IE is "Common", the Power Balancing Adjustment Type of the Node B Communication Context shall be set to "Common". As long as the Power Balancing Adjustment Type of the Node B Communication Context is set to "Common", the Node B shall perform the power adjustment (see below) for all existing and future radio links associated with the context identified by the *Node B Communication Context ID* IE and use a common DL reference power level.

If the value of the *Power Adjustment Type* IE is "Individual", the Power Balancing Adjustment Type of the Node B Communication Context shall be set to "Individual". The Node B shall perform the power adjustment (see below) for all radio links addressed in the message using the given DL Reference Powers per RL. If the Power Balancing Adjustment Type of the Node B Communication Context was set to "Common" before this message was received, power balancing on all radio links not addressed by the DL POWER CONTROL REQUEST message shall remain to be executed in accordance with the existing power balancing parameters which are now considered RL individual parameters. Power balancing will not be started on future radio links without a specific request.

If the value of the *Power Adjustment Type* IE is "None", the Power Balancing Adjustment Type of the Node B Communication Context shall be set to "None" and the Node B shall suspend on going power adjustments for all radio links for the Node B Communication Context.

If the *Inner Loop DL PC Status* IE is present and set to "Active", the Node B shall activate inner loop DL power control for all radio links for the Node B Communication Context. If the *Inner Loop DL PC Status* IE is present and set to "Inactive", the Node B shall deactivate inner loop DL power control for all radio links for the Node B Communication Context according to ref. [10].

Power Adjustment

The power balancing adjustment shall be superimposed on the inner loop power control adjustment (see ref. [10]) if activated. The power balancing adjustment shall be such that:

$$\sum P_{bal} = (1 - r)(P_{ref} + P_{P-CPICH} - P_{init})$$
 with an accuracy of ±0.5 dB

where the sum is performed over an adjustment period corresponding to a number of frames equal to the value of the *Adjustment Period* IE, Pref is the value of the DL Reference Power IE, $P_{P-CPICH}$ is the power used on the primary CPICH, P_{init} is the code power of the last slot of the previous adjustment period and r is given by the Adjustment Ratio IE. If the last slot of the previous adjustment period is within a transmission gap due to compressed mode, P_{init} shall be set to the same value as the code power of the slot just before the transmission gap.

The adjustment within one adjustment period shall in any case be performed with the constraints given by the *Max Adjustment Step* IE and the DL TX power range set by the CRNC.

The power adjustments shall be started at the first slot of a frame with CFN modulo the value of *Adjustment Period* IE equal to 0 and shall be repeated for every adjustment period and shall be restarted at the first slot of a frame with CFN=0, until a new DL POWER CONTROL REQUEST message is received or the RL is deleted.

8.3.7.3 Abnormal Conditions

_

8.3.8 Dedicated Measurement Initiation

8.3.8.1 General

This procedure is used by a CRNC to request the initiation of measurements on dedicated resources in a Node B.

The Dedicated Measurement Initiation procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.8.2 Successful Operation

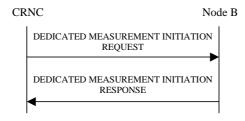


Figure 38: Dedicated Measurement Initiation procedure, Successful Operation

The procedure is initiated with a DEDICATED MEASUREMENT INITIATION REQUEST message sent from the CRNC to the Node B using the Communication Control Port assigned to the Node B Communication Context.

Upon reception, the Node B shall initiate the requested measurement according to the parameters given in the request. Unless specified below the meaning of the parameters are given in other specifications.

If the *Node B Communication Context ID* IE equals the reserved value "All NBCC", this measurement request shall apply for all current and future Node B Communication Contexts controlled via the Communication Control Port on which the DEDICATED MEASUREMENT INITIATION REQUEST message was received. Otherwise, this measurement request shall apply for the requested Node B Communication Context ID only.

If the *Node B Communication Context ID* IE equals the reserved value "All NBCC", the measurement request shall be treated as a single measurement, despite applying to multiple contexts. This means that it may only be terminated or failed on "All NBCC".

If the *Node B Communication Context ID* IE equals the reserved value "All NBCC", the measurement shall be initiated only for those Node B Communication Contexts handling a mode (FDD, 3.84Mcps TDD or 1.28Mcps TDD) for which the concerned measurement is specified in [4] and [5].

If the Dedicated Measurement Object Type is indicated as being "RL" in the DEDICATED MEASUREMENT INITIATION REQUEST message, measurement results shall be reported for all indicated Radio Links.

[FDD – If the Dedicated Measurement Object Type is indicated as being "RLS" in the DEDICATED MEASUREMENT INITIATION REQUEST message, measurement results shall be reported for all indicated Radio Link Sets.]

[FDD - If the Dedicated Measurement Object Type is indicated as being "ALL RL" in the DEDICATED MEASUREMENT INITIATION REQUEST message, measurement results shall be reported for all current and future Radio Links within the Node B Communication Context.]

[TDD - If the Dedicated Measurement Object Type is indicated as being "ALL RL" in the DEDICATED MEASUREMENT INITIATION REQUEST message, measurement results shall be reported for one existing DPCH per CCTrCH in each used time slot of current and future Radio Links within the Node B Communication Context, provided the measurement type is applicable to the respective DPCH.]

[FDD – If the Dedicated Measurement Object Type is indicated as being "ALL RLS" in the DEDICATED MEASUREMENT INITIATION REQUEST message, measurement results shall be reported for all existing and future Radio Link Sets within the Node B Communication Context.]

[TDD – If the *DPCH ID* IE is provided within the RL Information, the measurement request shall apply for the requested physical channel individually. If no *DPCH ID* IE and no *PUSCH Information* IE is provided within the RL Information, the measurement request shall apply for one existing physical channel per CCTrCH in each used time slot of the Radio Link, provided the measurement type is applicable to this physical channel.]

[TDD – If the *PUSCH Information* IE is provided within the RL Information, the measurement request shall apply for the requested physical channel individually.]

If the *CFN Reporting Indicator* IE is set to "FN Reporting Required", the *CFN* IE shall be included in the DEDICATED MEASUREMENT REPORT message or in the DEDICATED MEASUREMENT RESPONSE message, the latter only in the case the *Report Characteristics* IE is set to "On Demand". The reported CFN shall be the CFN at the time when the measurement value was reported by the layer 3 filter, referred to as point C in the measurement model [25].

Report characteristics

The Report Characteristics IE indicates how the reporting of the measurement shall be performed. See also Annex B.

If the *Report Characteristics* IE is set to "On Demand" and if the *CFN* IE is not provided, the Node B shall return the result of the measurement immediately. If the *CFN* IE is provided, it indicates the frame for which the measurement value shall be provided. The provided measurement value shall be the one reported by the layer 3 filter, referred to as point C in the measurement model [25].

If the *Report Characteristics* IE is set to "Periodic", the Node B shall periodically initiate the Dedicated Measurement Report procedure for this measurement, with the requested report frequency. If the *CFN* IE is provided, it indicates the frame for which the first measurement value of a periodic reporting shall be provided. The provided measurement value shall be the one reported by the layer 3 filter, referred to as point C in the measurement model [25].

If the *Report Characteristics* IE is set to "Event A", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity rises above the requested threshold and stays there for the requested hysteresis time. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero for the hysteresis time.

If the *Report Characteristics* IE is set to "Event B", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity falls below the requested threshold and stays there for the requested hysteresis time. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero for the hysteresis time.

If the *Report Characteristics* IE is set to "Event C", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity rises by an amount greater than the requested threshold within the requested time. After having reported this type of event, the next C event reporting for the same measurement cannot be initiated before the rising time specified by the *Measurement Change Time* IE has elapsed since the previous event reporting.

If the *Report Characteristics* IE is set to "Event D", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity falls by an amount greater than the requested threshold within the requested time. After having reported this type of event, the next D event reporting for the same measurement cannot be initiated before the falling time specified by the *Measurement Change Time* IE has elapsed since the previous event reporting.

If the *Report Characteristics* IE is set to "Event E", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity rises above the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (Report A). When the conditions for Report A are met and the *Report Periodicity* IE is provided, the Node B shall also initiate the Dedicated Measurement Reporting procedure periodically. If the conditions for Report A have been met and the measured entity falls below the 'Measurement Threshold 2' and stays there for the 'Measurement Hysteresis Time', the Node B shall initiate the Dedicated Measurement Reporting procedure (Report B) as well as terminating any corresponding periodic reporting. If the *Measurement Threshold 2* IE is not present, the Node B shall use the value of the *Measurement Threshold 1* IE instead. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero as hysteresis times for both Report A and Report B.

If the *Report Characteristics* IE is set to "Event F", the Node B shall initiate the Dedicated Measurement Reporting procedure when the measured entity falls below the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (Report A). When the conditions for Report A are met and the *Report Periodicity* IE is provided, the Node B shall also initiate the Dedicated Measurement Reporting procedure periodically. If the conditions for Report A have been met and the measured entity rises above the 'Measurement Threshold 2' and stays there for the 'Measurement Hysteresis Time', the Node B shall initiate the Dedicated Measurement Reporting procedure (Report B) as well as

terminating any corresponding periodic reporting. If the *Measurement Threshold 2* IE is not present, the Node B shall use the value of the *Measurement Threshold 1* IE instead. If the *Measurement Hysteresis Time* IE is not included, the Node B shall use the value zero as hysteresis times for both Report A and Report B.

If the *Report Characteristics* IE is not set to "On Demand", the Node B is required to perform reporting for a dedicated measurement object, in accordance with the conditions provided in the DEDICATED MEASUREMENT INITIATION REQUEST message, as long as the object exists. If no dedicated measurement object for which a measurement is defined exists anymore, the Node B shall terminate the measurement locally, i.e. without reporting this to the CRNC.

If at the start of the measurement, the reporting criteria are fulfilled for any of Event A, Event B, Event E or Event F, the Node B shall initiate the Dedicated Measurement Reporting procedure immediately, and then continue with the measurements as specified in the DEDICATED MEASUREMENT INITIATION REQUEST message.

Higher layer filtering

The *Measurement Filter Coefficient* IE indicates how filtering of the measurement values shall be performed before measurement event evaluation and reporting.

The averaging shall be performed according to the following formula.

$$F_n = (1-a) \cdot F_{n-1} + a \cdot M_n$$

The variables in the formula are defined as follows

 F_n is the updated filtered measurement result

 F_{n-1} is the old filtered measurement result

 M_n is the latest received measurement result from physical layer measurements, the unit used for M_n is the same unit as the reported unit in the DEDICATED MEASUREMENT INITIATION RESPONSE, DEDICATED MEASUREMENT REPORT messages or the unit used in the event evaluation (i.e. same unit as for Fn)

 $a = 1/2^{(k/2)}$, where k is the parameter received in the *Measurement Filter Coefficient IE*. If the *Measurement Filter Coefficient IE* is not present, a shall be set to 1 (no filtering)

In order to initialise the averaging filter, F_0 is set to M_1 when the first measurement result from the physical layer measurement is received.

Response message

If the Node B was able to initiate the measurement requested by the CRNC, it shall respond with the DEDICATED MEASUREMENT INITIATION RESPONSE message using the Communication Control Port assigned to the Node B Communication Context. The message shall include the same Measurement ID that was used in the measurement request.

Only in the case where the *Report Characteristics* IE is set to "On Demand", the DEDICATED MEASUREMENT INITIATION RESPONSE message shall contain the measurement result. In this case, also the *Dedicated Measurement Object* IE shall be included if it was included in the request message.

In the case where the *Node B Communication Context ID* IE is set to "All NBCC", the *CRNC Communication Context ID* IE in the DEDICATED MEASUREMENT INITIATION RESPONSE shall be set to the value "All CRNCCC", which is reserved for this purpose.

Interaction with Reset Procedure

If a measurement has been requested with the *Node B Communication Context ID* IE set to "All NBCC", the Node B shall terminate the measurement locally if either the CRNC or the Node B initiates the Reset procedure for the relevant Communication Control Port or the entire Node B.

8.3.8.3 Unsuccessful Operation

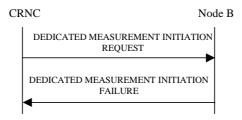


Figure 39: Dedicated Measurement Initiation procedure: Unsuccessful Operation

If the requested measurement cannot be initiated, the Node B shall send a DEDICATED MEASUREMENT INITIATION FAILURE message using the Communication Control Port assigned to the Node B Communication Context. The message shall include the same Measurement ID that was used in the DEDICATED MEASUREMENT INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

In the case where the *Node B Communication Context ID* IE is set to "All NBCC" the *CRNC Communication Context ID* IE in the DEDICATED MEASUREMENT INITIATION FAILURE shall be set to the value "All CRNCCC", which is reserved for this purpose.

Typical cause values are as follows:

Radio Network Layer cause

- Measurement not supported for the object
- Measurement Temporarily not Available

Miscellaneous Cause

- O&M Intervention
- Control processing overload
- HW failure

8.3.8.4 Abnormal Conditions

The allowed combinations of the Dedicated Measurement Type and Report Characteristics Type are shown in the table below marked with "X". For not allowed combinations, the Node B shall regard the Dedicated Measurement Initiation procedure as failed.

Table 4: Allowed Dedicated Measurement Type and Report Characteristics Type combinations

Dedicated Measurement Type	Report Characteristics Type								
	On Demand	Periodic	Event A	Event B	Event C	Event D	Event E	Event F	On Modification
SIR	X	X	Х	Х	Х	Х	Х	Х	
SIR Error	Х	Х	Х	Х	Х	Х	Х	Х	
Transmitted Code Power	Х	Х	Х	Х	Х	Х	Х	Х	
RSCP	Х	Х	Х	Х	Х	Х	Х	Х	
Rx Timing Deviation	Х	Х	Х	Х	Х	Х	Х	Х	
Round Trip Time	Х	Х	Х	Х	Х	Х	Х	Х	

If the Dedicated Measurement Type received in the *Dedicated Measurement Type* IE is not defined in ref. [4] or [5] to be measured on the Dedicated Measurement Object Type received in the DEDICATED MEASUREMENT INITIATION REQUEST message, the Node B shall regard the Dedicated Measurement Initiation procedure as failed.

If the *CFN* IE is included in the DEDICATED MEASUREMENT INITIATION REQUEST message and the *Report Characteristics* IE is other than "Periodic" or "On Demand", the Node B shall regard the Dedicated Measurement Initiation procedure as failed.

8.3.9 Dedicated Measurement Reporting

8.3.9.1 General

This procedure is used by the Node B to report the result of measurements requested by the CRNC with the Dedicated Measurement Initiation procedure. The Node B may initiate the Dedicated Measurement Reporting procedure at any time after establishing a Radio Link, as long as the Node B Communication Context exists.

8.3.9.2 Successful Operation



Figure 40: Dedicated Measurement Reporting procedure, Successful Operation

If the requested measurement reporting criteria are met, the Node B shall initiate the Dedicated Measurement Reporting procedure. The DEDICATED MEASUREMENT REPORT message shall use the Communication Control Port assigned to the Node B Communication Context. If the measurement was initiated (by the Dedicated Measurement Initiation procedure) for multiple dedicated measurement objects, the Node B may include measurement values for multiple objects in the DEDICATED MEASUREMENT REPORT message. Unless specified below, the meaning of the parameters are given in other specifications.

The *Measurement ID* IE shall be set to the Measurement ID provided by the CRNC when initiating the measurement with the Dedicated Measurement Initiation procedure.

If the achieved measurement accuracy does not fulfil the given accuracy requirement (see ref.[22] and [23]), the Measurement not available shall be reported.

8.3.9.3 Abnormal Conditions

8.3.10 Dedicated Measurement Termination

8.3.10.1 General

This procedure is used by the CRNC to terminate a measurement previously requested by the Dedicated Measurement Initiation procedure.

The Dedicated Measurement Termination procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.10.2 Successful Operation



Figure 41: Dedicated Measurement Termination procedure, Successful Operation

This procedure is initiated with a DEDICATED MEASUREMENT TERMINATION REQUEST message, sent from the CRNC to the Node B using the Communication Control Port assigned to the Node B Communication Context.

Upon reception, the Node B shall terminate reporting of dedicated measurements corresponding to the received *Measurement ID* IE.

8.3.10.3 Abnormal Conditions

-

8.3.11 Dedicated Measurement Failure

8.3.11.1 General

This procedure is used by the Node B to notify the CRNC that a measurement previously requested by the Dedicated Measurement Initiation procedure can no longer be reported. The Node B is allowed to initiate the DEDICATED MEASUREMENT FAILURE INDICATION message at any time after having sent the RADIO LINK SETUP RESPONSE message, as long as the Node B Communication Context exists.

8.3.11.2 Successful Operation



Figure 42: Dedicated Measurement Failure procedure, Successful Operation

This procedure is initiated with a DEDICATED MEASUREMENT FAILURE INDICATION message, sent from the Node B to the CRNC using the Communication Control Port assigned to the Node B Communication Context, to inform the CRNC that a previously requested measurement can no longer be reported. The Node B has locally terminated the indicated measurement.

If the failed measurement was initiated with the *Node B Communication Context ID* IE set to the reserved value "All NBCC" and the Node B has terminated the measurement reporting of the measurement corresponding to the Measurement ID indicated in the DEDICATED MEASUREMENT FAILURE INDICATION message, the *CRNC Communication Context ID* IE shall be set to the value "All CRNCCC".

8.3.11.3 Abnormal Conditions

-

8.3.12 Radio Link Failure

8.3.12.1 General

This procedure is used by the Node B to indicate a failure in one or more Radio Links [FDD - or Radio Link Sets][TDD or CCTrCHs within a Radio Link].

The Node B may initiate the Radio Link Failure procedure at any time after establishing a Radio Link.

8.3.12.2 Successful Operation

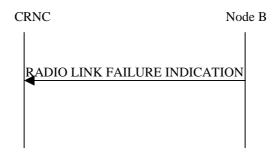


Figure 43: Radio Link Failure procedure, Successful Operation

When the Node B detects that one or more Radio Link [FDD - or Radio Link Sets] [TDD – or CCTrCHs within a Radio Link] are no longer available, it sends the RADIO LINK FAILURE INDICATION message to the CRNC indicating the failed Radio Links or Radio Link Sets or CCTrCHs with the most appropriate cause values in the *Cause* IE. The message shall use the Communication Control Port assigned to the concerned Node B Communication Context.

If the failure concerns one or more individual Radio Links, the Node B shall indicate the affected Radio Link(s) using the *RL Information* IE. [FDD - The Node B shall indicate the affected Radio Link Set(s) using the *RL Set Information* IE.] [TDD – If the failure concerns only the failure of one or more CCTrCHs within a radio link, the Node B shall indicate the affected CCTrCHs using the *CCTrCH ID* IE.]

When the Radio Link Failure procedure is used to notify the loss of UL synchronisation of a [FDD – Radio Link Set] [TDD – Radio Link or CCTrCHs within a Radio Link] on the Uu interface, the RADIO LINK FAILURE INDICATION message shall be sent, with the *Cause* IE set to "Synchronisation Failure", when indicated by the UL out-of-sync algorithm defined in [10] and [21]. [FDD – The algorithms in [10] shall use the maximum value of the parameters N_OUTSYNC_IND and T_RLFAILURE, and the minimum value of the parameters N_INSYNC_IND, that are configured in the cells supporting the radio links of the RL Set.]

[FDD – When the Radio Link Failure procedure is used to indicate permanent failure in one or more Radio Links/Radio Link Sets due to the occurrence of an UL or DL frame with more than one transmission gap caused by one or more compressed mode pattern sequences, the DL transmission shall be stopped and the RADIO LINK FAILURE INDICATION message shall be sent with the cause value "Invalid CM Settings". After sending the RADIO LINK FAILURE INDICATION message to notify the permanent failure, the Node B shall not remove the Radio Link(s)/Radio Link Set(s) from the Node B Communication Context or the Node B Communication Context itself.]

In the other cases, the Radio Link Failure procedure is used to indicate that one or more Radio Links/Radio Link Sets are permanently unavailable and cannot be restored. After sending the RADIO LINK FAILURE INDICATION message to notify the permanent failure, the Node B shall not remove the Radio Link/Radio Link Set from the Node B Communication Context or the Node B Communication Context itself. When applicable, the retention priorities associated with the transport channels shall be used by the Node B to prioritise which Radio Links/Radio Link Sets to indicate as unavailable to the CRNC.

Typical cause values are:

Radio Network Layer Causes:

- Synchronisation Failure
- Invalid CM settings

Transport Layer Causes:

- Transport Resources Unavailable

Miscellaneous Causes:

- Control Processing Overload
- HW Failure
- O&M Intervention

8.3.12.3 Abnormal Conditions

-

8.3.13 Radio Link Restoration

8.3.13.1 General

This procedure is used by the Node B to notify the achievement and re-achievement of uplink synchronisation of one or more [FDD - Radio Link Sets][TDD - Radio Links or CCTrCHs within a Radio Link] on the Uu interface.

The Node B may initiate the Radio Link Restoration procedure at any time after establishing a Radio Link.

8.3.13.2 Successful Operation

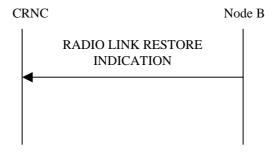


Figure 44: Radio Link Restoration procedure, Successful Operation

The Node B shall send the RADIO LINK RESTORE INDICATION message to the CRNC when indicated by the UL synchronisation detection algorithm defined in ref. [10] and [21]. [FDD – The algorithm in ref. [10] shall use the minimum value of the parameters N_INSYNC_IND that are configured in the cells supporting the radio links of the RL Set.] The message shall use the Communication Control Port assigned to the concerned Node B Communication Context.

[TDD – If the re-established Uu synchronisation concerns one or more individual Radio Links, the Node B shall indicate the affected Radio Link(s) using the *RL Information* IE.] [TDD – If the re-established Uu synchronisation concerns one or more individual CCTrCHs within a radio link, the Node B shall indicate the affected CCTrCHs using the *CCTrCH ID* IE.] [FDD – If the re-established Uu synchronisation concerns one or more Radio Link Sets, the Node B shall indicate the affected Radio Link Set(s) using the *RL Set Information* IE.]

8.3.13.3 Abnormal Condition

_

8.3.14 Compressed Mode Command [FDD]

8.3.14.1 General

The Compressed Mode Command procedure is used to activate or deactivate the compressed mode in the Node B for one Node B Communication Context.

The Compressed Mode Command procedure shall not be initiated if a Prepared Reconfiguration exists, as defined in subclause 3.1.

8.3.14.2 Successful Operation



Figure 47: Compressed Mode Command procedure, Successful Operation

The procedure is initiated by the CRNC sending a COMPRESSED MODE COMMAND message to the Node B using the Communication Control Port assigned to the concerned Node B Communication Context.

The Node B shall deactivate all the ongoing Transmission Gap Pattern Sequences at the *CM Configuration Change CFN* IE requested by the CRNC when receiving the COMPRESSED MODE COMMAND message from the CRNC. From that moment on, all Transmission Gap Pattern Sequences included in *Transmission Gap Pattern Sequence Status* IE repetitions (if present) shall be started when the indicated *TGCFN* IE elapses. The *CM Configuration Change CFN* IE in the *Active Pattern Sequence Information* IE and *TGCFN* IE for each sequence refer to the next coming CFN with that value.

If the values of the *CM Configuration Change CFN* IE and the *TGCFN* IE are equal, the concerned Transmission Gap Pattern Sequence shall be started immediately at the CFN with a value equal to the value received in the *CM Configuration Change CFN* IE.

8.3.14.3 Abnormal Conditions

_

8.3.15 Downlink Power Timeslot Control [TDD]

8.3.15.1 General

The purpose of this procedure is to enable the Node B to use the indicated DL Timeslot ISCP values when deciding the DL TX Power for each timeslot.

The Downlink Power Timeslot Control procedure can be initiated by the CRNC at any time when the Node B Communication Context exists, irrespective of other ongoing CRNC initiated dedicated NBAP procedures towards this Node B Communication Context. The only exception occurs when the CRNC has requested the deletion of the last RL via this Node B, in which case the Downlink Power Timeslot Control procedure shall no longer be initiated.

8.3.15.2 Successful Operation



Figure 47A: Downlink Power Timeslot Control procedure, Successful Operation

The procedure is initiated by the CRNC sending a DL POWER TIMESLOT CONTROL REQUEST message to the Node B using the Communication Control Port assigned to the concerned Node B Communication Context.

Upon reception, the Node B shall use the indicated DL Timeslot ISCP value when deciding the DL TX Power for each timeslot as specified in ref. [21], i.e. it shall reduce the DL TX power in those downlink timeslots of the radio link where the interference is low, and increase the DL TX power in those timeslots where the interference is high, while keeping the total downlink power in the radio link unchanged.

If the *Primary CCPCH RSCP* IE is present, the Node B should use the indicated value for HS-DSCH scheduling and transmit power adjustment.

8.3.15.3 Abnormal Conditions

_

8.3.16 Radio Link Pre-emption

8.3.16.1 General

This procedure is started by the Node B when resources need to be freed.

The Node B may initiate the Radio Link Pre-emption procedure at any time after establishing a Radio Link.

8.3.16.2 Successful Operation

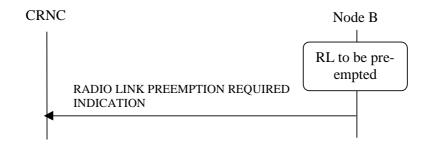


Figure 47B: Radio Link Pre-emption procedure, Successful Operation

When the Node B detects that a one or more Radio Links should be pre-empted (see Annex A), it shall send the RADIO LINK PREEMPTION REQUIRED INDICATION message to the CRNC using the Communication Control Port assigned to the concerned Node B Communication Context.

If all Radio Links for a CRNC Communication Context ID should be pre-empted, the *RL Information* IE shall be omitted. If one or several but not all Radio Links should be pre-empted for a CRNC Communication Context, the Radio Links that should be pre-empted shall be indicated in the *RL Information* IE. The Radio Link(s) that should be pre-empted should be deleted by the CRNC.

8.3.16.3 Abnormal Conditions

_

8.3.17 Bearer Re-arrangement

8.3.17.1 General

This procedure is started by the Node B when Bearers for the Node B Communication Context need to be rearranged.

The Node B may initiate the Bearer Rearrangement procedure at any time after establishing a Radio Link.

8.3.17.2 Successful Operation

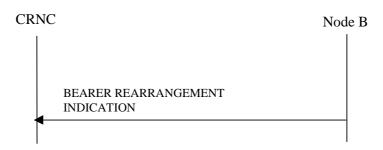


Figure 47C: Bearer Re-arrangement Indication, Successful Operation

When the Node B detects that a signaling bearer or a transport bearer or both need to be re-arranged for the Node B Communication Context, it shall send the BEARER REARRANGEMENT INDICATION message to the CRNC. The message shall use the Communication Control Port assigned for this Node B Communication Context.

If the signaling bearer for the control of the Node B Communication Context needs to be rearranged, the *Signalling Bearer Requested Indicator* IE shall be included in the BEARER REARRANGEMENT INDICATION message.

If the transport bearer for a transport channel needs to be rearranged, the ID of the transport channel for which a new transport bearer is required, shall be included in the BEARER REARRANGEMENT INDICATION message.

[FDD - If the TFCI2 bearer on which the DSCH TFCI Signaling control frames shall be received is required to be rearranged, the *TFCI2 Bearer Request Indicator* IE shall be included in the BEARER REARRANGEMENT INDICATION message.]

8.3.17.3 Abnormal Conditions

-

8.3.18 Radio Link Activation

8.3.18.1 General

This procedure is used to activate or de-activate the DL transmission on the Uu interface regarding selected RLs.

8.3.18.2 Successful Operation



Figure 47D: Radio Link Activation procedure

This procedure is initiated by sending the RADIO LINK ACTIVATION COMMAND message from the CRNC to the Node B. The message shall use the Communication Control Port assigned for this Node B Communication Context. Upon reception, the Node B shall for each concerned RL:

- if the *Delayed Activation Update* IE indicates "Activate":
 - if the *Activation Type* IE equals "Unsynchronised":

- [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16].]
- [TDD start transmission on the new RL immediately as specified in [16].]
- if the Activation Type IE equals "Synchronised":
 - [FDD start transmission on the new RL after synchronisation is achieved in the DL user plane as specified in [16], however never before the CFN indicated in the *Activation CFN* IE.]
 - [TDD start transmission on the new RL at the CFN indicated in the *Activation CFN* IE as specified in [16].]
 - [FDD the Node B shall apply the power level indicated in the *Initial DL Tx Power* IE to the transmission on each DL DPCH of the RL when starting transmission until either UL synchronisation on the Uu interface is achieved for the RLS or power balancing is activated. During this period no inner loop power control shall be performed and, unless activated by the DL POWER CONTROL REQUEST message, no power balancing shall be performed. The DL power shall then vary according to the inner loop power control (see ref.[10], subclause 5.2.1.2) and downlink power balancing adjustments (see subclause 8.3.7).]
 - [TDD the Node B shall apply the power level indicated in the *Initial DL Tx Power* IE to the transmission on each DL DPCH and on each Time Slot of the RL when starting transmission until the UL synchronisation on the Uu interface is achieved for the RL. No inner loop power control shall be performed during this period. The DL power shall then vary according to the inner loop power control (see ref.[22], subclause 4.2.3.3).]
 - [FDD if the *Propagation Delay* IE is included, the Node B may use this information to speed up the detection of UL synchronisation on the Uu interface.]
 - [FDD if the *First RLS Indicator* IE is included, it indicates if the concerned RL shall be considered part of the first RLS established towards this UE. The *First RLS Indicator* IE shall be used by the Node B together with the value of the *DL TPC Pattern 01 Count* IE which the Node B has received in the Cell Setup procedure, to determine the initial TPC pattern in the DL of the concerned RL and all RLs which are part of the same RLS, as described in [10], section 5.1.2.2.1.2.]
- if the Delayed Activation Update IE indicates "Deactivate":
 - stop DL transmission immediately, if the *Deactivation Type* IE equals "Unsynchronised", or at the CFN indicated by the *Deactivation CFN* IE, if the *Deactivation Type* IE equals "Synchronised".

8.3.18.3 Abnormal Conditions

[FDD- If the *Delayed Activation Update* IE is included in the RADIO LINK ACTIVATION COMMAND message, it indicates "Activate" and the *First RLS Indicator* IE is not included, the Node B shall initiate the ERROR INDICATION procedure.]

8.4 Error Handling Procedures

8.4.1 Error Indication

8.4.1.1 General

The Error Indication procedure is initiated by a node in order to report detected errors in one incoming message, provided they cannot be reported by an appropriate response message.

8.4.1.2 Successful Operation

When the conditions defined in subclause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

When the ERROR INDICATION message is sent from a Node B to its CRNC, the *CRNC Communication Context ID* IE shall be included in the message if available. When the ERROR INDICATION message is sent from a CRNC to a Node B, the *Node B Communication Context ID* IE shall be included in the message if available.

When a message for a dedicated procedure is received in the Node B with an invalid *Node B Communication Context ID* IE, the Node B shall include the unknown *Node B Communication Context ID* IE from the received message in the ERROR INDICATION message, unless another handling is specified in the procedure text for the affected procedure.

When a message for a dedicated procedure is received in the CRNC with an invalid *CRNC Communication Context ID* IE, the CRNC shall include the unknown *CRNC Communication Context ID* IE from the received message in the ERROR INDICATION message, unless another handling is specified in the procedure text for the affected procedure.

The ERROR INDICATION message shall include either the *Cause* IE, or the *Criticality Diagnostics* IE or both the *Cause* IE and the *Criticality Diagnostics* IE.

Typical cause values for the ERROR INDICATION message are:

Protocol Causes:

- Transfer Syntax Error
- Abstract Syntax Error (Reject)
- Abstract Syntax Error (Ignore and Notify)
- Message not Compatible with Receiver State
- Unspecified

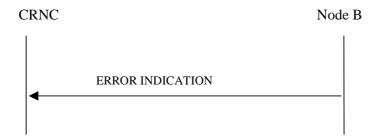


Figure 49: Error Indication procedure (Node B to CRNC): Successful Operation



Figure 50: Error Indication procedure (CRNC to Node B), Successful Operation

8.4.1.3 Abnormal Conditions

-

9 Elements for NBAP communication

9.1 Message Functional Definition and Contents

9.1.1 General

Subclause 9.1 presents the contents of NBAP messages in tabular format. The corresponding ASN.1 definition is presented in subclause 9.3. In case there is contradiction between the tabular format in subclause 9.1 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

NOTE: The messages have been defined in accordance to the guidelines specified in ref. [26].

9.1.2 Message Contents

9.1.2.1 Presence

An information element can be of the following types:

M	IEs marked as Mandatory (M) shall always be included in the message.
0	IEs marked as Optional (O) may or may not be included in the message.
С	IEs marked as Conditional (C) shall be included in a message only if the condition is satisfied.
	Otherwise the IE shall not be included.

In case of an Information Element group, the group is preceded by a name for the info group (in bold). It is also indicated how many times a group may be repeated in the message and whether the group is conditional. The presence field of the Information Elements inside one group defines if the Information Element is mandatory, optional or conditional if the group is present.

9.1.2.2 Criticality

Each Information Element or Group of Information Elements may have a criticality information applied to it. Following cases are possible:

_	No criticality information is applied explicitly.
YES	Criticality information is applied. 'YES' is usable only for non-repeatable information elements.
GLOBAL	The information element and all its repetitions together have one common criticality information.
	'GLOBAL' is usable only for repeatable information elements.
EACH	Each repetition of the information element has its own criticality information. It is not allowed to assign
	different criticality values to the repetitions. 'EACH' is usable only for repeatable information elements.

9.1.2.3 Range

The Range column indicates the allowed number of copies of repetitive IEs.

9.1.2.4 Assigned Criticality

This column provides the actual criticality information as defined in subclause 10.3.2, if applicable.

9.1.3 COMMON TRANSPORT CHANNEL SETUP REQUEST

9.1.3.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	-,,-,-
C-ID	М		9.2.1.9		YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject
CHOICE Common Physical	М				YES	ignore
Channel To Be Configured						-
>Secondary CCPCH					_	
>>Secondary CCPCH		1			_	
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>FDD SCCPCH Offset	М		9.2.2.15	Corresponds to [7]: _{S-CCPCH,k}	_	
>>>DL Scrambling Code	C-PCH		9.2.2.13		_	
>>>FDD DL Channelisation Code Number	М		9.2.2.14		_	
>>>TFCS	М		9.2.1.58	For the DL.	_	
>>>Secondary CCPCH Slot Format	М		9.2.2.43		_	
>>>TFCI Presence	C- SlotFormat		9.2.1.57	Refer to TS [7]	_	
>>>Multiplexing Position	М		9.2.2.23		_	
>>>Power Offset		1			_	
Information						
>>>PO1	М		Power Offset 9.2.2.29	Power offset for the TFCI bits	_	
>>>>PO3	М		Power Offset 9.2.2.29	Power offset for the pilot bits	-	
>>>STTD Indicator	М		9.2.2.48		_	
>>>FACH Parameters		0 <maxno ofFACHs></maxno 			GLOBAL	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>>Transport Format Set	М		9.2.1.59	For the DL.	-	
>>>>ToAWS	М		9.2.1.61		_	
>>>>ToAWE	M		9.2.1.60		_	
>>>Max FACH	M		DL Power	Maximum	_	
Power			9.2.1.21	allowed power on the FACH.		
>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>>Transport Layer Address	0		9.2.1.63	Shall be ignored if	YES	ignore

				bearer establishment with ALCAP.		
>>>PCH Parameters		01			YES	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>Transport Format Set	М		9.2.1.59	For the DL.	_	
>>>ToAWS	М		9.2.1.61			
>>>ToAWE	М		9.2.1.60		_	
>>>PCH Power	М		DL Power 9.2.1.21		_	
>>>PICH		1			_	
Parameters						
>>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>>FDD DL Channelisation Code Number	М		9.2.2.14		-	
>>>>PICH Power	М		9.2.1.49A		_	
>>>>PICH Mode	M		9.2.2.26	Number of PI per frame	_	
>>>>STTD Indicator	М		9.2.2.48		-	
>>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>PRACH					_	
>>PRACH		1			_	
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>Scrambling Code Number	М		9.2.2.42		_	
>>>TFCS	М		9.2.1.58	For the UL.	ı	
>>>Preamble Signatures	M		9.2.2.31		1	
>>>Allowed Slot Format Information		1 <maxno ofSlotForm atsPRACH ></maxno 			-	
>>>RACH Slot Format	М		9.2.2.37		_	
>>>RACH Sub Channel Numbers	М		9.2.2.38		_	
>>>Puncture Limit	М		9.2.1.50	For the UL		
>>>Preamble Threshold	М		9.2.2.32			
>>>RACH Parameters		1			YES	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>>Transport Format Set	М		9.2.1.59	For the UL.	_	

ETSI TS 125 433 V5.1.0 (2002-06)

>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>AICH Parameters		1			_	
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>>AICH Transmission Timing	М		9.2.2.1		_	
>>>>FDD DL Channelisation Code Number	M		9.2.2.14		-	
>>>AICH Power	M		9.2.2.D		-	
>>>STTD Indicator	М		9.2.2.48		_	
>PCPCHs						
>>CPCH Parameters		1			_	
>>>Common Transport Channel ID	М		9.2.1.14		-	
>>>Transport Format Set	М		9.2.1.59	For the UL.	-	
>>>AP Preamble Scrambling Code	M		CPCH Scrambling Code Number 9.2.2.4B		-	
>>>CD Preamble Scrambling Code	M		CPCH Scrambling Code Number 9.2.2.4B		-	
>>>TFCS	М		9.2.1.58	For the UL	_	
>>>CD Signatures	0		Preamble Signatures 9.2.2.31	Note: When not present, all CD signatures are to be used.	-	
>>>CD Sub Channel Numbers			9.2.2.1C		-	
>>>Puncture Limit	М		9.2.1.50	For the UL	_	
>>>CPCH UL DPCCH Slot Format	М		9.2.2.4C	For UL CPCH message control part	-	
>>>UL SIR	М		9.2.1.67A		_	
>>>Initial DL	М		DL Power		_	
Transmission Power			9.2.1.21			
>>>Maximum DL Power	М		DL Power 9.2.1.21			
>>>Minimum DL Power	М		DL Power 9.2.1.21		_	
>>>PO2	M		Power Offset 9.2.2.29	Power offset for the TPC bits relative to the pilot bits.	-	

>>>FDD TPC DL Step	М		9.2.2.16		_	
Size						
>>>N_Start_Message	М		9.2.2.23C			
>>>N_EOT	М		9.2.2.23A		_	
>>>Channel	М		9.2.2.1D		_	
Assignment Indication						
>>>CPCH Allowed Total	М		9.2.2.4A		_	
Rate						
>>>PCPCH Channel		1 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information		ofPCPCHs				
		>				
>>>Common	М		9.2.1.13		_	
Physical Channel ID						
>>>CPCH	М		9.2.2.4B	For UL PCPCH	_	
Scrambling Code			0.2.2.			
Number						
>>>>DL Scrambling	М		9.2.2.13	For DL CPCH		
Code	IVI		9.2.2.13		_	
			00011	message part		
>>>>FDD DL	М		9.2.2.14	For DL CPCH	_	
Channelisation Code				message part		
Number						
>>>>PCP Length	M		9.2.2.24A		_	
>>>UCSM	C-NCA	1			_	
Information						
>>>>Min UL	М		9.2.2.22		_	
Channelisation Code						
Length						
>>>>NF_max	М		9.2.2.23B		_	
>>>>Channel	101	0 <maxa< td=""><td>0.2.2.208</td><td></td><td></td><td></td></maxa<>	0.2.2.208			
Request		PSigNum>				
Request Parameters			0.0044			
Request Parameters >>>>>AP	M		9.2.2.1A		_	
Request Parameters >>>>>AP Preamble	M		9.2.2.1A		_	
Request Parameters >>>>>AP Preamble Signature					-	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub	M		9.2.2.1A 9.2.2.1B		-	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number	0				-	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub		PSigNum> 1 <maxno< td=""><td></td><td>Refer to TS [18]</td><td>-</td><td></td></maxno<>		Refer to TS [18]	-	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number	0	PSigNum>		Refer to TS [18]	- - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping	0	PSigNum> 1 <maxno< td=""><td></td><td>Refer to TS [18]</td><td>- - -</td><td></td></maxno<>		Refer to TS [18]	- - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information	O C-CA	PSigNum> 1 <maxno< td=""><td>9.2.2.1B</td><td>Refer to TS [18]</td><td>- - -</td><td></td></maxno<>	9.2.2.1B	Refer to TS [18]	- - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code	O C-CA	PSigNum> 1 <maxno< td=""><td>9.2.2.1B</td><td>Refer to TS [18]</td><td>- - -</td><td></td></maxno<>	9.2.2.1B	Refer to TS [18]	- - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length	O C-CA M	PSigNum> 1 <maxno< td=""><td>9.2.2.1B 9.2.2.22</td><td>Refer to TS [18]</td><td>- - - -</td><td></td></maxno<>	9.2.2.1B 9.2.2.22	Refer to TS [18]	- - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>NF_max	O C-CA M	PSigNum> 1 <maxno< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B</td><td>Refer to TS [18]</td><td>- - - -</td><td></td></maxno<>	9.2.2.1B 9.2.2.22 9.2.2.23B	Refer to TS [18]	- - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>Max Number of	O C-CA M	PSigNum> 1 <maxno< td=""><td>9.2.2.1B 9.2.2.22</td><td>Refer to TS [18]</td><td>- - - -</td><td></td></maxno<>	9.2.2.1B 9.2.2.22	Refer to TS [18]	- - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs	O C-CA M	PSigNum> 1 <maxno oflen=""></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B	Refer to TS [18]	- - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>Max Number of PCPCHs >>>>SF Request	O C-CA M	PSigNum> 1 <maxno oflen=""> 1<maxa< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B</td><td>Refer to TS [18]</td><td>- - - - -</td><td></td></maxa<></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B	Refer to TS [18]	- - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>SF Request Parameters	O C-CA M M M M	PSigNum> 1 <maxno oflen=""></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>SF Request Parameters >>>>AP Preamble	O C-CA M	PSigNum> 1 <maxno oflen=""> 1<maxa< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B</td><td>Refer to TS [18]</td><td>- - - - -</td><td></td></maxa<></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B	Refer to TS [18]	- - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>SF Request Parameters >>>>AP Preamble Signature	O C-CA M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A</td><td>Refer to TS [18]</td><td>- - - - -</td><td></td></maxa<></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub	O C-CA M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A</td><td>Refer to TS [18]</td><td>- - - - - -</td><td></td></maxa<></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>Max Number of PCPCHs >>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number	O C-CA M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number	O C-CA M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa< td=""><td>9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A</td><td>Refer to TS [18]</td><td>- - - - - - -</td><td></td></maxa<></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>NF_max >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number	O C-CA M M M M O	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number	O C-CA M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A	Refer to TS [18]	- - - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>NF_max >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number	O C-CA M M M M O	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>Nin UL Channelisation Code Length >>>>NF_max >>>>NF_max >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP-AICH Parameters >>>>Common	O C-CA M M M M O	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP-AICH Parameters >>>>Common Physical Channel ID >>>>FDD DL	O C-CA M M M M M M M M M M M M M M M M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>>VCAM Mapping Information >>>NIn UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Preamble Signature >>>>AP Sub Channel Number >>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>Common Physical Channel ID >>>>FDD DL Channelisation Code	O C-CA M M M M M M M M M M M M M M M M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - - -	
Request Parameters >>>>>AP Preamble Signature >>>>AP Sub Channel Number >>VCAM Mapping Information >>>Min UL Channelisation Code Length >>>>NF_max >>>>Max Number of PCPCHs >>>>SF Request Parameters >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP Sub Channel Number >>>>AP-AICH Parameters >>>>Common Physical Channel ID >>>>FDD DL	O C-CA M M M M M M M M M M M M M M M M M M M	PSigNum> 1 <maxno oflen=""> 1<maxa psignum=""></maxa></maxno>	9.2.2.1B 9.2.2.22 9.2.2.23B 9.2.2.20A 9.2.2.1A 9.2.2.1B	Refer to TS [18]	- - - - - - - -	

	1	ı		_	ı	ı
			Power			
			9.2.2.D			
>>>CSICH Power	М		AICH	For CSICH bits	_	
			Power	at end of AP-		
			9.2.2.D	AICH slot		
>>>STTD Indicator	М		9.2.2.48		_	
>>>CD/CA-ICH		1			_	
Parameters						
>>>Common	M		9.2.1.13		_	
Physical Channel ID						
>>>FDD DL	M		9.2.2.14		_	
Channelisation Code						
Number						
>>>CD/CA-ICH	M		AICH		_	
Power			Power			
			9.2.2.D			
>>>STTD Indicator	M		9.2.2.48		_	
>>>Binding ID	0		9.2.1.4	Shall be	YES	ignore
				ignored if		
				bearer		
				establishment		
				with ALCAP.		
>>>Transport Layer	0		9.2.1.63	Shall be	YES	ignore
Address				ignored if		
				bearer		
				establishment		
				with ALCAP.		

Condition	Explanation
SlotFormat	The IE shall be present if the Secondary CCPCH Slot Format IE is set to any of the values from 8 to 17.
CA	The IE shall be present if the <i>Channel Assignment Indication</i> IE is set to "CA Active".
NCA	The IE shall be present if the <i>Channel Assignment Indication</i> IE is set to "CA Inactive".
PCH	The IE shall be present if the PCH Parameters IE is not present.

Range Bound	Explanation
maxnoofFACHs	Maximum number of FACHs that can be defined on a Secondary
	CCPCH
maxnoofPCPCHs	Maximum number of PCPCHs for a CPCH
maxnoofLen	Maximum number of Min UL Channelisation Code Length
maxnoofSlotFormatsPRACH	Maximum number of SF for a PRACH
maxAPSigNum	Maximum number of AP Signatures

9.1.3.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	M		9.2.1.9		YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject
CHOICE Common Physical	M				YES	ignore
Channel To Be Configured						
>Secondary CCPCHs					_	
>>SCCPCH CCTrCH ID	М		9.2.3.3	For DL CCTrCH supporting one or several Secondary CCPCHs	_	
>>TFCS	M		9.2.1.58	For DL CCTrCH supporting one or several Secondary CCPCHs	-	
>>TFCI Coding	М		9.2.3.22		_	
>>Puncture Limit	М		9.2.1.50		_	
>>Secondary CCPCH		0 <maxno ofSCCPC Hs></maxno 		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>TDD Channelisation Code	М		9.2.3.19		_	
>>>Time Slot	М		9.2.3.23		_	
>>>Midamble Shift And Burst Type	М		9.2.3.7		-	
>>>TDD Physical Channel Offset	М		9.2.3.20		_	
>>>Repetition Period	M		9.2.3.16		-	
>>>Repetition Length	М		9.2.3.15		_	
>>>SCCPCH Power	М		DL Power 9.2.1.21		-	
>>FACH		0 <maxno ofFACHs></maxno 			GLOBAL	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>FACH CCTrCH ID	М		CCTrCH ID 9.2.3.3		_	
>>>Transport Format Set	М		9.2.1.59	For the DL.	_	
>>>ToAWS	M		9.2.1.61		_	
>>>ToAWE	M		9.2.1.60		_	
>>>Max FACH Power	0		DL Power 9.2.1.21	Applicable to 1.28Mcps TDD only	YES	reject

>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>PCH		01			YES	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>PCH CCTrCH ID	М		9.2.3.3		_	
>>>Transport Format Set	М		9.2.1.59	For the DL.	_	
>>>ToAWS	M		9.2.1.61		_	
>>>ToAWE	M		9.2.1.60		_	
>>>PICH Parameters		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject
>>>Common Physical Channel ID	М		9.2.1.13		-	
>>>TDD Channelisation Code	М		9.2.3.19		_	
>>>>Time Slot	M		9.2.3.23		_	
>>>Midamble Shift And Burst Type	М		9.2.3.7		_	
>>>TDD Physical Channel Offset	М		9.2.3.20		_	
>>>Repetition Period	M		9.2.3.16		_	
>>>Repetition Length	М		9.2.3.15		-	
>>>>Paging Indicator Length	М		9.2.3.8		_	
>>>PICH Power	M		9.2.1.49A			
>>>PCH Power	0		DL Power 9.2.1.21	Applicable to 1.28Mcps TDD only	YES	reject
>>>PICH Parameters LCR		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	reject
>>>Common Physical Channel ID	М		9.2.1.13			
>>>>TDD Channelisation Code LCR	М		9.2.3.19a			
>>>>Time Slot LCR	M		9.2.3.24A		_	
>>>Midamble Shift LCR	М		9.2.3.7A		_	
>>>TDD Physical Channel Offset	М		9.2.3.20		_	
>>>Repetition Period	M		9.2.3.16		-	

>>>Repetition Length	М		9.2.3.15		_	
>>>Paging Indicator Length	М		9.2.3.8		_	
>>>PICH Power	М		9.2.1.49A		_	
>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>Secondary CCPCH LCR		0 <maxno ofSCCPC HsLCR></maxno 		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>TDD Channelisation Code LCR	M		9.2.3.19a		_	
>>>Time Slot LCR	М		9.2.3.24A		_	
>>>Midamble Shift LCR	M		9.2.3.7A		_	
>>>TDD Physical Channel Offset	М		9.2.3.20		-	
>>>Repetition Period	M		9.2.3.16		_	
>>>Repetition Length	M		9.2.3.15		_	
>>>SCCPCH Power	М		DL Power 9.2.1.21		_	
>PRACH					_	
>>PRACH	M	01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>TFCS	М		9.2.1.58		_	
>>>Time Slot	М		9.2.3.23		_	
>>>TDD Channelisation Code	М		9.2.3.19		_	
>>>Max PRACH Midamble Shifts	М		9.2.3.6		_	
>>>PRACH Midamble	М		9.2.3.14		_	
>>>RACH		1			YES	reject
>>>>Common Transport Channel ID	М		9.2.1.14		-	
>>>>Transport Format Set	М		9.2.1.59	For the UL	_	
>>>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>>>>Transport Layer	0		9.2.1.63	Shall be	YES	ignore

_OBAL reject
-
-
_
_
_
_
YES reject
TES TEJECT
_
-
YES ignore
YES ignore
YES reject
_
_
_
- -

Range Bound	Explanation
maxnoofSCCPCHs	Maximum number of Secondary CCPCHs per CCTrCH for 3.84Mcps
	TDD
maxnoofSCCPCHsLCR	Maximum number of Secondary CCPCHs per CCTrCH for 1.28Mcps
	TDD
maxnoofCCTrCHs	Maximum number of CCTrCHs that can be defined in a cell
maxnoofFACHs	Maximum number of FACHs that can be defined on a Secondary
	CCPCH
maxnoofPRACHLCRs	Maximum number of PRACHs LCR that can be defined on a RACH for
	1.28Mcps TDD

9.1.4 COMMON TRANSPORT CHANNEL SETUP RESPONSE

Range Bound	Explanation
maxnoofFACHs	Maximum number of FACHs that can be defined on a Secondary
	CCPCH[FDD] / a group of Secondary CCPCHs [TDD]

9.1.5 COMMON TRANSPORT CHANNEL SETUP FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	_
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	_
Cause	М		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

COMMON TRANSPORT CHANNEL RECONFIGURATION 9.1.6 **REQUEST**

FDD Message 9.1.6.1

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject
CHOICE Common Physical	М				YES	reject
Channel To Be Configured						
>Secondary CCPCH					_	
>>FACH Parameters		0 <maxfa CHCell></maxfa 			GLOBAL	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>Max FACH Power	0		DL Power 9.2.1.21	Maximum allowed power on the FACH.	_	
>>>ToAWS	0		9.2.1.61			
>>>ToAWE	0		9.2.1.60		_	
>>PCH Parameters		01			YES	reject
>>>Common Transport Channel ID	М		9.2.1.14		_	
>>>PCH Power	0		DL Power 9.2.1.21	Power to be used on the PCH.	_	
>>>ToAWS	0		9.2.1.61		_	
>>>ToAWE	0		9.2.1.60		_	
>>PICH Parameters		01			YES	reject
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>PICH Power	0		9.2.1.49A		_	
>PRACH					_	
>>PRACH Parameters		0 <maxp RACHCell ></maxp 			GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		_	
>>>Preamble Signatures	0		9.2.2.31		_	
>>>Allowed Slot Format Information		0 <maxno ofSlotForm atsPRACH ></maxno 			_	
>>>>RACH Slot Format	М		9.2.2.37		-	
>>>RACH Sub Channel Numbers	0		9.2.2.38		-	
>>AICH Parameters		0 <maxp RACHCell</maxp 			GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		-	

>>>AICH Power	0		9.2.2.D		_	
>CPCH					_	
>>CPCH Parameters		0 <maxno ofCPCHs></maxno 			GLOBAL	reject
>>>Common Transport Channel ID	М		9.2.1.14		-	
>>>UL SIR	0		9.2.1.67A		_	
>>>Initial DL Transmission Power	0		DL Power 9.2.1.21		_	
>>>Maximum DL Power	0		DL Power 9.2.1.21		-	
>>>Minimum DL Power	0		DL Power 9.2.1.21		_	
>>AP-AICH Parameters		0 <maxno ofCPCHs></maxno 			GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		-	
>>>AP-AICH Power	0		AICH Power 9.2.2.D		-	
>>>CSICH Power	0		AICH Power 9.2.2.D	For CSICH bits at end of AP- AICH slot	-	
>>CD/CA-ICH Parameters		0 <maxno ofCPCHs></maxno 			GLOBAL	reject
>>>Common Physical Channel ID	М		9.2.1.13		-	
>>>CD/CA-ICH Power	0		AICH Power 9.2.2.D		-	

Range Bound Explanation				
maxFACHCell	Maximum number of FACHs that can be defined in a Cell			
maxnoofCPCHs	Maximum number of CPCHs that can be defined in a Cell			
maxPRACHCell	Maximum number of PRACHs and AICHs that can be defined in a Cell			
maxnoofSlotFormatsPRACH	Maximum number of SF for a PRACH			

9.1.6.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject
Secondary CCPCH Parameters		01			YES	reject

0.07.011.15		1		1	T	
>CCTrCH ID	M		9.2.3.3	For DL CCTrCH	_	
				supporting one		
				or several		
				Secondary		
				CCPCHs		
>Secondary CCPCHs To		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
Be Configured		ofSCCPC				
		Hs>				
>>Common Physical Channel ID	M		9.2.1.13		_	
>>SCCPCH Power	0		DL power		_	
			9.2.1.21			
PICH Parameters		01			YES	reject
>Common Physical Channel ID	М		9.2.1.13		_	-
>PICH Power	0		9.2.1.49A		_	
FACH Parameters		0 <maxno ofFACHs></maxno 			GLOBAL	reject
>Common Transport	М	UIFACI IS>	9.2.1.14			
Channel ID	IVI		9.2.1.14		_	
>ToAWS	0		9.2.1.61		_	
>ToAWE	0		9.2.1.60			
>Max FACH Power	0		DL Power	Applicable to	YES	reject
			9.2.1.21	1.28Mcps TDD	5	. 0,001
			0.22	only		
PCH Parameters		01			YES	reject
>Common Transport Channel ID	М		9.2.1.14		_	
>ToAWS	0		9.2.1.61		_	
>ToAWE	0		9.2.1.60		_	
>PCH Power	0		DL Power	Applicable to	YES	reject
			9.2.1.21	1.28Mcps TDD only		,
FPACH Parameters		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	reject
>Common Physical Channel ID	M		9.2.1.13		-	
>Max FPACH Power	0		9.2.3.5E		_	

Range Bound	Explanation
maxnoofSCCPCHs	Maximum number of SCCPCHs that can be repeated in a Cell
maxnoofFACHs	Maximum number of FACHs that can be repeated in a Cell

9.1.7 COMMON TRANSPORT CHANNEL RECONFIGURATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.8 COMMON TRANSPORT CHANNEL RECONFIGURATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Cause	М		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.9 COMMON TRANSPORT CHANNEL DELETION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
Common Physical Channel ID	M		9.2.1.13	Indicates the Common Physical Channel for which the Common Transport Channels (together with the Common Physical Channel) shall be deleted.	YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject

9.1.10 COMMON TRANSPORT CHANNEL DELETION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.11 BLOCK RESOURCE REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
C-ID	M		9.2.1.9		YES	reject
Blocking Priority Indicator	M		9.2.1.5		YES	reject
Shutdown Timer	C- BlockNorm al		9.2.1.56		YES	reject

Condition	Explanation
BlockNormal	The IE shall be present if the Blocking Priority Indicator IE indicates
	"Normal Priority".

9.1.12 BLOCK RESOURCE RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.13 BLOCK RESOURCE FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Cause	М		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.14 UNBLOCK RESOURCE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	ignore

9.1.15 AUDIT REQUIRED INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	

9.1.16 AUDIT REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Start Of Audit Sequence Indicator	М		9.2.1.56B		YES	reject

9.1.17 AUDIT RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
End Of Audit Sequence Indicator	М		9.2.1.29A		YES	ignore
Cell Information		0 <maxce IlinNodeB></maxce 			EACH	ignore
>C-ID	M		9.2.1.9		_	
>Configuration Generation ID	М		9.2.1.16		-	
>Resource Operational State	М		9.2.1.52		-	
>Availability Status	M		9.2.1.2		_	
>Local Cell ID	М		9.2.1.38	The local cell that the cell is configured on	_	
>Primary SCH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>Secondary SCH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>Primary CPICH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>Secondary CPICH Information		0 <maxs CPICHCell</maxs 			EACH	ignore
>>Secondary CPICH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		_	
>Primary CCPCH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>BCH Information	0		Common Transport Channel Status Information 9.2.1.14B		YES	ignore
>Secondary CCPCH	1	0 <maxs< td=""><td>3.2.1.170</td><td>1</td><td>EACH</td><td>ignore</td></maxs<>	3.2.1.170	1	EACH	ignore
	1	J. AMANO	t	1		9010

Information		CCPCHCe		=	
		ll>			
>>Secondary CCPCH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A	_	
>PCH Information	0		Common Transport Channel Status Information 9.2.1.14B	YES	ignore
>PICH Information	0		Common Physical Channel Status Information 9.2.1.13A	YES	ignore
>FACH Information		0 <maxfa CHCell></maxfa 		EACH	ignore
>>FACH Individual Information	M		Common Transport Channel Status Information 9.2.1.14B	-	
>PRACH Information		0 <maxp RACHCell ></maxp 		EACH	ignore
>>PRACH Individual Information	М		Common Physical Channel Status Information 9.2.1.13A	-	
>RACH Information		0 <maxr ACHCell></maxr 	9.2.1.13A	EACH	ignore
>>RACH Individual Information	М		Common Transport Channel Status Information 9.2.1.14B	-	
>AICH Information		0 <maxp RACHCell ></maxp 		EACH	ignore
>>AICH Individual Information	М		Common Physical Channel Status Information 9.2.1.13A	-	
>PCPCH Information		0 <maxp CPCHCell</maxp 	0.2.1.10A	EACH	ignore
>>PCPCH Individual Information	М		Common Physical Channel	-	

	1	1	I a	-		
			Status			
			Information			
>CPCH Information		0 0	9.2.1.13A		E4011	
		0 <maxc PCHCell></maxc 			EACH	ignore
>>CPCH Individual	М		Common		_	
Information			Transport			
			Channel			
			Status			
			Information			
>AP-AICH Information			9.2.1.14B			
>AP-AICH INIORMATION		0 <maxc PCHCell></maxc 			EACH	ignore
>>AP-AICH Individual	М		Common		_	
Information			Physical			
			Channel			
			Status			
			Information			
>CD/CA-ICH Information			9.2.1.13A		E	
		0 <maxc PCHCell></maxc 			EACH	ignore
>>CD/CA-ICH Individual	М		Common		_	
Information			Physical			
			Channel			
			Status			
			Information			
20111 (_		9.2.1.13A			
>SCH Information	0		Common	TDD Sync	YES	ignore
			Physical	Channel		
			Channel Status			
			Information			
			9.2.1.13A			
>FPACH Information		0 <maxfp< td=""><td>0.2.1110/1</td><td>Applicable to</td><td>EACH</td><td>ignore</td></maxfp<>	0.2.1110/1	Applicable to	EACH	ignore
		ACHCell>		1.28Mcps TDD		garara
				only		
>>FPACH Individual	М		Common		-	
Information			Physical			
			Channel			
			Status			
			Information			
D. DOLLL (1	9.2.1.13A			
>DwPCH Information	0		Common	Applicable to	YES	ignore
			Physical	1.28Mcps TDD		
			Channel	only		
			Status			
			Information 9.2.1.13A			
Communication Control		0 <maxc< td=""><td>3.2.1.13A</td><td></td><td>EACH</td><td>ignore</td></maxc<>	3.2.1.13A		EACH	ignore
Port Information		CPinNode			LACH	ignore
		B>				
>Communication Control Port ID	М		9.2.1.15		_	
>Resource Operational State	М		9.2.1.52		_	
>Availability Status	М		9.2.1.2		_	
Local Cell Information		0 <maxlo< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxlo<>			EACH	ignore
		calCellinN				•
		odeB>				
	1	1	·	1		

>Local Cell ID	М		9.2.1.38		_	
>DL or Global Capacity	М		9.2.1.20B		_	
Credit						
>UL Capacity Credit	0		9.2.1.65A		_	
>Common Channels Capacity Consumption Law	M		9.2.1.9A		_	
>Dedicated Channels Capacity Consumption Law	М		9.2.1.20A		_	
>Maximum DL Power Capability	0		9.2.1.39		_	
>Minimum Spreading Factor	0		9.2.1.47		_	
>Minimum DL Power Capability	0		9.2.1.46A		_	
>Local Cell Group ID	0		9.2.1.37A		_	
>Reference Clock Availability	0		9.2.3.14A	TDD only	YES	ignore
>Power Local Cell Group ID	0		9.2.1.49B		YES	ignore
Local Cell Group Information		0 <maxlo calCellinN odeB></maxlo 			EACH	ignore
>Local Cell Group ID	М		9.2.1.37A		_	
>DL or Global Capacity Credit	М		9.2.1.20B		-	
>UL Capacity Credit	0		9.2.1.65A		_	
>Common Channels Capacity Consumption Law	М		9.2.1.9A		_	
>Dedicated Channels Capacity Consumption Law	М		9.2.1.20A		_	
Power Local Cell Group Information		0 <maxlo calCellinN odeB></maxlo 			EACH	ignore
>Power Local Cell Group ID	М		9.2.1.49B		_	
>Maximum DL Power Capability	М		9.2.1.39		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation
maxCellinNodeB	Maximum number of Cells that can be configured in Node B
maxCCPinNodeB	Maximum number of Communication Control Ports that can exist in the
	Node B
maxCPCHCell	Maximum number of CPCHs that can be defined in a Cell
maxLocalCellinNodeB	Maximum number of Local Cells that can exist in the Node B
maxPCPCHCell	Maximum number of PCPCHs that can be defined in a Cell
maxSCPICHCell	Maximum number of Secondary CPICHs that can be defined in a Cell.
maxSCCPCHCell	Maximum number of Secondary CCPCHs that can be defined in a Cell.
maxFACHCell	Maximum number of FACHs that can be defined in a Cell
maxPRACHCell	Maximum number of PRACHs that can be defined in a Cell
maxRACHCell	Maximum number of RACHs that can be defined in a Cell
maxFPACHCell	Maximum number of FPACHs that can be defined in a Cell

9.1.17A AUDIT FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Cause	M		9.2.1.6		YES	ignore
Criticality diagnostics	0		9.2.1.17		YES	ignore

9.1.18 COMMON MEASUREMENT INITIATION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		1	
Measurement ID	M		9.2.1.42		YES	reject
CHOICE Common Measurement Object Type >Cell	М				YES _	reject
>>C-ID	M		9.2.1.9			
>>Time Slot	O		9.2.1.9	Applicable to 3.84Mcps TDD only		
>>Time Slot LCR	0		9.2.3.24A	Applicable to 1.28Mcps TDD only	YES	reject
>>Neighbouring Cell Measurement Information		0 <maxno MeasNCell s></maxno 			GLOBAL	ignore
>>>CHOICE Neighbouring Cell Measurement Information					_	_
>>>>Neighbouring FDD Cell Measurement Information				FDD only	_	_
>>>> Neighbouring FDD Cell Measurement Information	M		9.2.1.47C		_	_
>>>Neighbouring TDD Cell Measurement Information				Applicable to 3.84Mcps TDD only	_	_
>>>> Neighbouring TDD Cell Measurement Information	M		9.2.1.47D		_	_
>>>Neighbouring TDD Cell Measurement Information LCR				Applicable to 1.28Mcps TDD only	-	_
>>>> Neighbouring TDD Cell Measurement Information LCR	M		9.2.1.47E	500	-	-
>RACH	N 4	-	0.0.1.0	FDD only	_	
>>C-ID >>Common Transport	M		9.2.1.9 9.2.1.14		_	
Channel ID						
>CPCH	.			FDD only	_	
>>C-ID >>Common Transport	M M		9.2.1.9 9.2.1.14		_	
Channel ID	IVI		J.Z.1.14		_	
>>Spreading Factor	0		Minimum UL Channelisat ion Code Length 9.2.2.22		-	
Common Measurement Type	M		9.2.1.11		YES	reject
Measurement Filter	0		9.2.1.41		YES	reject

Coefficient				
Report Characteristics	M	9.2.1.51	YES	reject
SFN Reporting Indicator	M	FN Reporting Indicator 9.2.1.29B	YES	reject
SFN	0	9.2.1.53A	YES	reject
Common Measurement Accuracy	0	9.2.1.9B	YES	reject

Range Bound	Explanation
maxnoMeasNCells	Maximum number of neighbouring cells that can be measured on.

9.1.19 COMMON MEASUREMENT INITIATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		1	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Measurement ID	M		9.2.1.42		YES	ignore
CHOICE Common Measurement Object Type	0			Common Measurement Object Type that the measurement was initiated with.	YES	ignore
>Cell					_	
>>Common Measurement Value	М		9.2.1.12		_	
>RACH				FDD only	1	
>>Common Measurement Value	M		9.2.1.12		-	
>CPCH				FDD only	_	
>>Common Measurement Value	М		9.2.1.12		I	
SFN	0		9.2.1.53A	Common Measurement Time Reference	YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore
Common Measurement Achieved Accuracy	0		Common Measureme nt Accuracy 9.2.1.9B		YES	ignore

9.1.20 COMMON MEASUREMENT INITIATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Measurement ID	M		9.2.1.42		YES	ignore
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.21 COMMON MEASUREMENT REPORT

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Measurement ID	M		9.2.1.42		YES	ignore
CHOICE Common Measurement Object Type	М			Common Measurement Object Type that the measurement was initiated with.	YES	ignore
>Cell					_	
>>Common Measurement Value Information	М		9.2.1.12A		_	
>RACH				FDD only	_	
>>Common Measurement Value Information	M		9.2.1.12A		_	
>CPCH				FDD only	_	
>>Common Measurement Value Information	М		9.2.1.12A		_	
SFN	0		9.2.1.53A	Common Measurement Time Reference	YES	ignore

9.1.22 COMMON MEASUREMENT TERMINATION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Measurement ID	M		9.2.1.42		YES	ignore

9.1.23 COMMON MEASUREMENT FAILURE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Measurement ID	M		9.2.1.42		YES	ignore
Cause	M		9.2.1.6		YES	ignore

9.1.24 CELL SETUP REQUEST

9.1.24.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Local Cell ID	M		9.2.1.38		YES	reject
C-ID	M		9.2.1.9		YES	reject
Configuration Generation ID	M		9.2.1.16		YES	reject
T Cell	M		9.2.2.49		YES	reject
UARFCN	M		9.2.1.65	Corresponds to Nu [14]	YES	reject
UARFCN	M		9.2.1.65	Corresponds to Nd [14]	YES	reject

	1	1			
Maximum Transmission Power	M		9.2.1.40	YES	reject
Closed Loop Timing	0		9.2.2.2A	YES	reject
	0		9.2.2.2A	TES	reject
Adjustment Mode			0.0004	\((-1)^21)^21	
Primary Scrambling Code	M		9.2.2.34	YES	reject
Synchronisation		1		YES	reject
Configuration					
>N_INSYNC_IND	M		9.2.1.47A	_	
>N_OUTSYNC_IND	M		9.2.1.47B	_	
>T_RLFAILURE	M		9.2.1.56A	_	
DL TPC Pattern 01 Count	M		9.2.2.13A	YES	reject
Primary SCH Information		1		YES	reject
>Common Physical	М		9.2.1.13	_	,
Channel ID					
>Primary SCH Power	М		DL Power	_	
7 · · · · · · · · · · · · · · · · · · ·			9.2.1.21		
>TSTD Indicator	М		9.2.1.64	_	
Secondary SCH Information	IVI	1	J.Z.1.04	YES	reject
>Common Physical	M	1	9.2.1.13	123	Тејеск
Channel ID	IVI		9.2.1.13	_	
	M	+	DI Dower		
>Secondary SCH Power	IVI		DL Power	_	
TOTO I II			9.2.1.21		
>TSTD Indicator	M		9.2.1.64		
Primary CPICH Information		1		YES	reject
>Common Physical	M		9.2.1.13	_	
Channel ID					
>Primary CPICH power	M		9.2.2.33	_	
>Transmit Diversity	M		9.2.2.53	_	
Indicator					
Secondary CPICH		0 <maxs< td=""><td></td><td>EACH</td><td>reject</td></maxs<>		EACH	reject
Information		CPICHCell			,
		>			
>Common Physical	М		9.2.1.13	_	
Channel ID					
>DL Scrambling Code	М		9.2.2.13	_	
>FDD DL Channelisation	M		9.2.2.14	_	
Code Number	IVI		3.2.2.14	_	
>Secondary CPICH Power	M		DL Power		
>Secondary CFICH Fower	IVI		9.2.1.21	_	
Towns with Discounts	N 4				
>Transmit Diversity	M		9.2.2.53	_	
Indicator				\((-1)^21)^21	
Primary CCPCH		1		YES	reject
Information					
>Common Physical	M		9.2.1.13	_	
Channel ID					
>BCH Information		1		_	
>>Common Transport	M		9.2.1.14		
Channel ID					
>>BCH Power	М		DL Power	_	
			9.2.1.21		
>STTD Indicator	М		9.2.2.48	_	
Limited Power Increase		1		YES	reject
Information		1			. 5,000
>Power_Raise_Limit	M	1	9.2.2.29A	_	
>DL_power_averaging_win	M	+	9.2.2.12A		
dow_size	IVI		3.2.2.12A	-	
IPDL Parameter Information		0.1		YES	roinet
	N/	01	0.2.2.400	150	reject
>IPDL FDD Parameters	M	1	9.2.2.18C		
>IPDL Indicator	M	1	9.2.1.36F	-	
PDSCH information		01		YES	reject
>Maximum PDSCH Power	0	1	9.2.2.21A	-	

Range Bound		Explanation				
	maxSCPICHCell	Maximum number of Secondary CPICHs that can be defined in a Cell.				

9.1.24.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	,
Local Cell ID	M		9.2.1.38		YES	reject
C-ID	M		9.2.1.9		YES	reject
Configuration Generation Id	M		9.2.1.16		YES	reject
UARFCN	М		9.2.1.65	Corresponds to Nt [15]	YES	reject
Cell Parameter ID	M		9.2.3.4		YES	reject
Maximum Transmission Power	М		9.2.1.40		YES	reject
Transmission Diversity Applied	М		9.2.3.26	On DCHs	YES	reject
Sync Case	M		9.2.3.18		YES	reject
Synchronisation Configuration		1			YES	reject
>N_INSYNC_IND	M		9.2.1.47A		_	
>N_OUTSYNC_IND	М		9.2.1.47B		_	
>T_RLFAILURE	M		9.2.1.56A		_	
DPCH Constant Value	M		Constant Value		YES	reject
PUSCH Constant Value	M		Constant Value		YES	reject
PRACH Constant Value	М		Constant Value		YES	reject
Timing Advance Applied	M		9.2.3.22A		YES	reject
SCH Information		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject
>Common Physical Channel ID	М		9.2.1.13		_	
>CHOICE Sync Case	M				YES	reject
>>Case 1					_	
>>>Time Slot	M		9.2.3.23		_	
>>Case 2					_	
>>>SCH Time Slot	M		9.2.3.17		_	
>SCH Power	M		DL Power 9.2.1.21		_	
>TSTD Indicator	M		9.2.1.64		_	
PCCPCH Information		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject
>Common Physical Channel ID	М		9.2.1.13		_	
>TDD Physical Channel Offset	M		9.2.3.20		_	
>Repetition Period	М		9.2.3.16		_	
>Repetition Length	M		9.2.3.15		_	
>PCCPCH Power	M		9.2.3.9		_	
>SCTD Indicator	M		9.2.3.30		_	
Time Slot Configuration		015		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	GLOBAL	reject
>Time Slot	M		9.2.3.23		_	
>Time Slot Status	M		9.2.3.25		_	

>Time Slot Direction	М		9.2.3.24		_	
Time Slot Configuration		07	0.2.0.2	Mandatory for	GLOBAL	reject
LCR				1.28Mcps TDD.	0202/12	. 0,000
				Not Applicable		
				to 3.84Mcps		
				TDD.		
>Time Slot LCR	М		9.2.3.24A		_	
>Time Slot Status	М		9.2.3.25		_	
>Time Slot Direction	М		9.2.3.24		_	
PCCPCH Information LCR		01		Mandatory for	YES	reject
				1.28Mcps TDD.		•
				Not Applicable		
				to 3.84Mcps		
				TDD.		
>Common Physical	М		9.2.1.13		_	
Channel ID						
>TDD Physical Channel	М		9.2.3.20		_	
Offset						
>Repetition Period	М		9.2.3.16		_	
>Repetition Length	М		9.2.3.15		_	
>PCCPCH Power	М		9.2.3.9		_	
>SCTD Indicator	М		9.2.3.30		_	
>TSTD Indicator	М		9.2.1.64		_	
DwPCH Information		01		Mandatory for	YES	reject
				1.28Mcps TDD.		,
				Not Applicable		
				to 3.84Mcps		
				TDD.		
>Common Physical	М		9.2.1.13		_	
Channel ID						
>TSTD Indicator	М		9.2.1.64		_	
>SYNC_DL Code ID	М		9.2.3.18B		_	
>DwPCH Power	М		9.2.3.5B		_	
Reference SFN Offset	0		9.2.3.14B		YES	ignore
IPDL Parameter Information		01		Applicable to	YES	reject
				3.84 Mcps TDD		-
				only		
>IPDL TDD Parameters	М		9.2.3.5D		_	
>IPDL Indicator	М		9.2.1.36F		_	
IPDL Parameter Information		01		Applicable to	YES	reject
LCR				1.28Mcps TDD		- -
				only		
>IPDL TDD Parameters	М		9.2.3.5H		_	
LCR						
>IPDL Indicator	М		9.2.1.36F		_	

9.1.25 CELL SETUP RESPONSE

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference	Decomplien		Ormounty
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.26 CELL SETUP FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.27 CELL RECONFIGURATION REQUEST

9.1.27.1 FDD Message

IE/Group Name	Presence	Range	IE Type	Semantics	Criticality	Assigned
			and Reference	Description		Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	-
C-ID	М		9.2.1.9		YES	reject
Configuration Generation ID	М		9.2.1.16		YES	reject
Maximum Transmission Power	0		9.2.1.40		YES	reject
Synchronisation		01			YES	reject
Configuration						_
>N_INSYNC_IND	M		9.2.1.47A		_	
>N_OUTSYNC_IND	М		9.2.1.47B		_	
>T_RLFAILURE	M		9.2.1.56A		_	
Primary SCH Information		01			YES	reject
>Common Physical Channel ID	М		9.2.1.13		_	
>Primary SCH Power	M		DL Power		_	
			9.2.1.21			
Secondary SCH Information		01			YES	reject
>Common Physical Channel ID	М		9.2.1.13		_	
>Secondary SCH Power	М		DL Power 9.2.1.21		_	
Primary CPICH Information		01			YES	reject
>Common Physical Channel ID	M		9.2.1.13		_	
>Primary CPICH Power	M		9.2.2.33		_	
Secondary CPICH Information		0 <maxs CPICHCell ></maxs 			EACH	reject
>Common Physical Channel ID	М		9.2.1.13		_	
>Secondary CPICH Power	М		DL Power 9.2.1.21		-	
Primary CCPCH Information		01			YES	reject
>BCH Information		1			_	
>>Common Transport Channel ID	М		9.2.1.14		-	
>>BCH Power	М		DL Power 9.2.1.21		_	
IPDL Parameter Information		01			YES	reject
>IPDL FDD Parameters	0		9.2.2.18C		_	-
>IPDL Indicator	М		9.2.1.36F		_	
PDSCH information		01			YES	reject
>Maximum PDSCH Power	0		9.2.2.21A		_	

Range Bound	Explanation
maxSCPICHCell	Maximum number of Secondary CPICH that can be defined in a Cell.

9.1.27.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	-
C-ID	M		9.2.1.9		YES	reject
Configuration Generation ID	M		9.2.1.16		YES	reject
Synchronisation Configuration		01			YES	reject
>N_INSYNC_IND	M		9.2.1.47A		_	
>N_OUTSYNC_IND	M		9.2.1.47B		_	
>T_RLFAILURE	M		9.2.1.56A		_	
Timing Advance Applied	0		9.2.3.22A	Applicable to 3.84Mcps TDD only	YES	reject
SCH Information		01		Applicable to 3.84Mcps TDD only	YES	reject
>Common Physical Channel ID	M		9.2.1.13		_	
>SCH Power	M		DL Power 9.2.1.21		_	
PCCPCH Information		01			YES	reject
>Common Physical Channel ID	M		9.2.1.13		_	
>PCCPCH Power	M		9.2.3.9		_	
Maximum Transmission Power	0		9.2.1.40		YES	reject
DPCH Constant Value	0		Constant Value		YES	reject
PUSCH Constant Value	0		Constant Value		YES	reject
PRACH Constant Value	0		Constant Value		YES	reject
Time Slot Configuration		015		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	GLOBAL	reject
>Time Slot	M		9.2.3.23		_	
>Time Slot Status	M		9.2.3.25		_	
>Time Slot Direction	M		9.2.3.24		_	
Time Slot Configuration LCR		07		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	GLOBAL	reject
>Time Slot LCR	M		9.2.3.24A			
>Time Slot Status	M		9.2.3.25		_	
>Time Slot Direction	М	ļ	9.2.3.24			
DwPCH Information		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	reject
>Common Physical Channel ID	M		9.2.1.13		_	
>DwPCH Power	М		9.2.3.5B		_	
IPDL Parameter Information		01		Applicable to 3.84Mcps TDD only	YES	reject
>IPDL TDD Parameters	0		9.2.3.5D	Jiny	_	
>IPDL Indicator	M		9.2.1.36F		_	

IPDL Parameter Information LCR		01		Applicable to 1.28Mcps TDD only	YES	reject
>IPDL TDD Parameters LCR	0		9.2.3.5H		_	
>IPDL Indicator	М		9.2.1.36F		_	

9.1.28 CELL RECONFIGURATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.29 CELL RECONFIGURATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.30 CELL DELETION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		-	
C-ID	M		9.2.1.9		YES	reject

9.1.31 CELL DELETION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		-	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.32 RESOURCE STATUS INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	
CHOICE Indication Type	М				YES	ignore
>No Failure					_	
>>Local Cell Information		1 <max LocalCellin NodeB></max 			EACH	ignore
>>>Local Cell ID	М		9.2.1.38		_	
>>>Add/Delete Indicator	М		9.2.1.1		_	
>>>DL or Global	C-add		9.2.1.20B		_	
Capacity Credit						
>>>UL Capacity Credit	0		9.2.1.65A		_	
>>>Common Channels Capacity Consumption Law	C-add		9.2.1.9A		-	
>>>Dedicated Channels Capacity Consumption Law	C-add		9.2.1.20A		_	
>>>Maximum DL Power Capability	C-add		9.2.1.39		-	
>>>Minimum Spreading Factor	C-add		9.2.1.47		_	
>>>Minimum DL Power Capability	C-add		9.2.1.46A		_	
>>>Local Cell Group ID	0		9.2.1.37A		_	
>>>Reference Clock Availability	C-add		9.2.3.14A	TDD only	YES	ignore
>>>Power Local Cell Group ID	0		9.2.1.49B		YES	ignore
>>Local Cell Group Information		0 <maxlo calCellinN odeB></maxlo 			EACH	ignore
>>>Local Cell Group ID	М		9.2.1.37A		_	
>>>DL or Global Capacity Credit	M		9.2.1.20B		_	
>>>UL Capacity Credit	0		9.2.1.65A		_	
>>>Common Channels Capacity Consumption Law	M		9.2.1.9A		_	
>>>Dedicated Channels Capacity Consumption Law	М		9.2.1.20A		-	
>>Power Local Cell Group Information		0 <maxlo calCellinN odeB></maxlo 			EACH	ignore
>>>Power Local Cell Group ID	М		9.2.1.49B		_	
>>>Maximum DL Power Capability	М		9.2.1.39		_	
>Service Impacting					_	
>>Local Cell Information		0 <maxlo calCellinN odeB></maxlo 			EACH	ignore
>>>Local Cell ID	М		9.2.1.38		_	
		•	è	ê .	•	•

				Г	1	
>>>DL or Global	0		9.2.1.20B		_	
Capacity Credit						
>>>UL Capacity Credit	0		9.2.1.65A		_	
>>>Common Channels	0		9.2.1.9A		_	
Capacity Consumption						
Law						
>>>Dedicated Channels	0		9.2.1.20A		_	
			J.Z. 1.20/1			
Capacity Consumption						
Law			0.04.00			
>>>Maximum DL Power	0		9.2.1.39		_	
Capability						
>>>Minimum Spreading	0		9.2.1.47		_	
Factor						
>>>Minimum DL Power	0		9.2.1.46A		_	
Capability						
>>>Reference Clock	0		9.2.3.14A	TDD only	YES	ignore
Availability						J
>>Local Cell Group		0 <maxlo< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxlo<>			EACH	ignore
Information		calCellinN			2,1011	ignoro
information		odeB>				
>>>Local Cell Group ID	М		9.2.1.37A		_	
>>>DL or Global	0		9.2.1.20B		_	
Capacity Credit			0.2202			
	0		9.2.1.65A		_	
>>>UL Capacity Credit					_	
>>>Common Channels	0		9.2.1.9A		_	
Capacity Consumption						
Law						
>>>Dedicated Channels	0		9.2.1.20A		_	
Capacity Consumption						
Law						
>>Power Local Cell		0 <maxlo< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxlo<>			EACH	ignore
Group Information		calCellinN				· ·
Group information		odeB>				
>>>Power Local Cell	M		9.2.1.49B		_	
Group ID						
>>>Maximum DL Power	М		9.2.1.39		_	
Capability						
>>Communication		0 <maxc< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxc<>			EACH	ignore
		CPinNode			LAOIT	ignore
Control Port Information		B>				
>>>Communication	М		9.2.1.15		_	
Control Port ID						
>>>Resource	M		9.2.1.52		_	
	'*'		J.E. 1.02			
Operational State	L	1	0.2.4.2			
>>>Availability Status	M		9.2.1.2		-	
>>Cell Information		0 <maxce< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxce<>			EACH	ignore
	L N 4	llinNodeB>	0.04.0			
>>>C-ID	M		9.2.1.9		_	
>>>Resource	0		9.2.1.52		_	
Operational State						
>>>Availability Status	0	<u> </u>	9.2.1.2	<u> </u>		
>>>Primary SCH	0		Common	FDD only	YES	ignore
Information			Physical			-
			Channel			
			Status			
			Information			
			9.2.1.13A			
>>>Secondary SCH	0		9.2.1.13A Common	FDD only	YES	ignore
>>>Secondary SCH Information	0		9.2.1.13A	FDD only	YES	ignore

			Status Information 9.2.1.13A			
>>>Primary CPICH Information	0		Common Physical Channel Status Information 9.2.1.13A	FDD only	YES	ignore
>>>Secondary CPICH Information		0 <maxs CPICHCell ></maxs 		FDD only	EACH	ignore
>>>Secondary CPICH Individual Information	М		Common Physical Channel Status Information 9.2.1.13A		-	
>>>Primary CCPCH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>>>BCH Information	0		Common Transport Channel Status Information 9.2.1.14B		YES	ignore
>>>Secondary CCPCH Information		0 <maxs CCPCHCe II></maxs 			EACH	ignore
>>>Secondary CCPCH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		_	
>>>PCH Information	0		Common Transport Channel Status Information 9.2.1.14B		YES	ignore
>>>PICH Information	0		Common Physical Channel Status Information 9.2.1.13A		YES	ignore
>>>FACH Information		0 <maxfa CHCell></maxfa 	0.2.1.1071		EACH	ignore
>>>>FACH Individual Information	М		Common Transport Channel Status Information 9.2.1.14B		-	
>>>PRACH Information		0 <maxp RACHCell ></maxp 			EACH	ignore
>>>PRACH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		-	

>>>RACH Information		0 <maxp< th=""><th></th><th></th><th>EACH</th><th>ignore</th></maxp<>			EACH	ignore
		RACHCell >				
>>>>RACH Individual Information	M		Common Transport Channel Status Information 9.2.1.14B		-	
>>>AICH Information		0 <maxp RACHCell ></maxp 		FDD only	EACH	ignore
>>>>AICH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		-	
>>>PCPCH Information		0 <maxp CPCHCell ></maxp 		FDD only	EACH	ignore
>>>>PCPCH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		-	
>>>CPCH Information		0 <maxc PCHCell></maxc 		FDD only	EACH	ignore
>>>>CPCH Individual Information	M		Common Transport Channel Status Information 9.2.1.14B		-	
>>>AP-AICH Information		0 <maxc PCHCell></maxc 		FDD only	EACH	ignore
>>>>AP-AICH Individual Information	М		Common Physical Channel Status Information 9.2.1.13A		-	
>>>CD/CA-ICH Information		0 <maxc PCHCell></maxc 		FDD only	EACH	ignore
>>>>CD/CA-ICH Individual Information	М		Common Physical Channel Status Information 9.2.1.13A		-	
>>>SCH Information	0		Common Physical Channel Status Information 9.2.1.13A	Applicable to 3.84Mcps TDD only	YES	ignore
>>>FPACH Information		0 <maxfp ACHCell></maxfp 		Applicable to 1.28Mcps TDD only	EACH	ignore
>>>>FPACH Individual Information	M		Common Physical Channel Status Information 9.2.1.13A		-	
>>>DwPCH Information	0		Common	Applicable to	YES	ignore

		Physical Channel Status Information 9.2.1.13A	1.28Mcps TDD only		
Cause	0	9.2.1.6		YES	ignore

Condition	Explanation
add	The IE shall be present if the Add/Delete Indicator IE is set to "Add".

Range Bound	Explanation
maxLocalCellinNodeB	Maximum number of Local Cells that can exist in the Node B
maxCellinNodeB	Maximum number of C-IDs that can be configured in the Node B
maxCPCHCell	Maximum number of CPCHs that can be defined in a Cell
maxSCPICHCell	Maximum number of Secondary CPICHs that can be defined in a Cell.
maxSCCPCHCell	Maximum number of Secondary CCPCHs that can be defined in a Cell.
maxFACHCell	Maximum number of FACHs that can be defined in a Cell
maxPCPCHCell	Maximum number of PCPCHs that can be defined in a Cell
maxPRACHCell	Maximum number of PRACHs and AICHs that can be defined in a Cell
maxCCPinNodeB	Maximum number of Communication Control Ports that can exist in the
	Node B
maxFPACHCell	Maximum number of FPACHs that can be defined in a Cell

9.1.33 SYSTEM INFORMATION UPDATE REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	

C-ID	М		9.2.1.9		YES	reject
BCCH Modification Time	0		9.2.1.3		YES	reject
MIB/SB/SIBInformation		1 <maxib ></maxib 			GLOBAL	reject
>IB Type	M		9.2.1.35		_	
>IB OC ID	М		9.2.1.31A	In one message, every occurrence of IB Type can only be deleted once and/or added once.		
>CHOICE IB Deletion Indicator	М				_	
>>No Deletion					_	
>>>SIB Originator	C-SIB		9.2.1.55		_	
>>>IB SG REP	0		9.2.1.34		_	
>>>Segment Information		1 <maxib SEG></maxib 			GLOBAL	reject
>>>>IB SG POS	0		9.2.1.33		_	
>>>Segment Type	C- CRNCOrig ination		9.2.1.53B		-	
>>>>IB SG DATA	C- CRNCOrig ination		9.2.1.32		_	
>>Deletion			NULL		_	

Range bound	Explanation
maxIB	Maximum number of information Blocks supported in one message
maxIBSEG	Maximum number of segments for one Information Block

Condition	Explanation
CRNCOrigination	The IE shall be present if the SIB Originator IE is set to "CRNC" or if the
	IB Type IE is set to "MIB", "SB1" or "SB2".
SIB	The IE shall be present if the IB Type IE is set to "SIB".

9.1.34 SYSTEM INFORMATION UPDATE RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.35 SYSTEM INFORMATION UPDATE FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Cause	М		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.36 RADIO LINK SETUP REQUEST

9.1.36.1 FDD message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
CRNC Communication Context ID	М		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	reject
UL DPCH Information		1			YES	reject
>UL Scrambling Code	М		9.2.2.59		_	
>Min UL Channelisation Code Length	M		9.2.2.22		_	
>Max Number of UL DPDCHs	C- CodeLen		9.2.2.21		-	
>Puncture Limit	М		9.2.1.50	For UL	_	
>TFCS	М		9.2.1.58	For UL	_	
>UL DPCCH Slot Format	М		9.2.2.57		-	
> UL SIR Target	M		UL SIR 9.2.1.67A		_	
>Diversity Mode	M		9.2.2.9		_	
>SSDT Cell ID Length	0		9.2.2.45		_	
>S Field Length	0		9.2.2.40		_	
>DPC Mode	0		9.2.2.13C		YES	reject
DL DPCH Information		1			YES	reject
>TFCS	М		9.2.1.58	For DL	_	
>DL DPCH Slot Format	M		9.2.2.10		_	
>TFCI Signalling Mode	M		9.2.2.50		_	
>TFCI Presence	C- SlotFormat		9.2.1.57		_	
>Multiplexing Position	М		9.2.2.23		_	
>PDSCH RL ID	C-DSCH		RL ID 9.2.1.53		_	
>PDSCH Code Mapping	C-DSCH		9.2.2.25		_	
>Power Offset Information		1			_	
>>PO1	M		Power Offset 9.2.2.29	Power offset for the TFCI bits	-	
>>PO2	М		Power Offset 9.2.2.29	Power offset for the TPC bits	-	
>>PO3	М		Power Offset 9.2.2.29	Power offset for the pilot bits	_	
>FDD TPC DL Step Size	М		9.2.2.16		_	
>Limited Power Increase	M		9.2.2.18A		_	
>Inner Loop DL PC Status DCH Information	M		9.2.2.18B DCH FDD Information 9.2.2.4D		YES	reject
DSCH Information	0		DSCH FDD Information 9.2.2.13B		YES	reject
TFCI2 bearer information		01			YES	ignore
>ToAWS	М		9.2.1.61		_	

>ToAWE	M		9.2.1.60		_	
RL Information		1 <maxno ofRLs></maxno 			EACH	notify
>RL ID	M		9.2.1.53		_	
>C-ID	М		9.2.1.9		_	
>First RLS Indicator	M		9.2.2.16A		_	
>Frame Offset	M		9.2.1.31		_	
>Chip Offset	M		9.2.2.2		ı	
>Propagation Delay	0		9.2.2.35		_	
>Diversity Control Field	C- NotFirstRL		9.2.1.25		-	
>DL Code Information	M		FDD DL Code Information 9.2.2.14A		I	
>Initial DL Transmission Power	M		DL Power 9.2.1.21	Initial power on DPCH	_	
>Maximum DL Power	М		DL Power 9.2.1.21	Maximum allowed power on DPCH	1	
>Minimum DL Power	М		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>SSDT Cell Identity	0		9.2.2.44		_	
>Transmit Diversity Indicator	C-Diversity mode		9.2.2.53		-	
>SSDT Cell Identity For EDSCHPC	C- EDSCHPC		9.2.2.44A		YES	ignore
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
>Delayed Activation	0		9.2.1.24C		YES	reject
>Qth Parameter	0		9.2.2.36A		YES	ignore
Transmission Gap Pattern Sequence Information	0		9.2.2.53A		YES	reject
Active Pattern Sequence Information	0		9.2.2.A		YES	reject
DSCH Common Information	0		DSCH FDD Common Information 9.2.2.13D		YES	ignore
DL Power Balancing Information	0		9.2.2.12B		YES	ignore
HS-DSCH Information	0		HS-DSCH FDD Information 9.2.2.18D		YES	reject
HS-DSCH-RNTI	0		9.2.1.31J		YES	reject
HS-PDSCH RL ID	C- InfoHSDS CH		RL ID 9.2.1.53		YES	reject

Condition	Explanation
CodeLen	The IE shall be present if Min UL Channelisation Code Length IE equals
	to 4.
NotFirstRL	The IE shall be present if the RL is not the first one in the RL Information
	IE.
DSCH	The IE shall be present if the DSCH Information IE is present.
SlotFormat	The IE shall be present if the DL DPCH Slot Format IE is equal to any of
	the values from 12 to 16.
Diversity mode	The IE shall be present if Diversity Mode IE in UL DPCH Information IE
	is not set to "none".
EDSCHPC	The IE shall be present if Enhanced DSCH PC IE is present in the
	DSCH Common Information IE.
InfoHSDSCH	The IE shall be present if HS-DSCH FDD Information IE is present as
	well.

Range Bound	Explanation
maxnoofRLs	Maximum number of RLs for one UE

9.1.36.2 TDD message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		-	
CRNC Communication Context ID	М		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	reject
UL CCTrCH Information		0 <maxno CCTrCH></maxno 			EACH	notify
>CCTrCH ID	М		9.2.3.3		-	
>TFCS	M		9.2.1.58		-	
>TFCI Coding	М		9.2.3.22		-	
>Puncture Limit	М		9.2.1.50		_	
>UL DPCH Information		01		Applicable to 3.84Mcps TDD only	YES	notify
>>Repetition Period	М		9.2.3.16		-	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A			
>>UL Timeslot Information	М		9.2.3.26C		_	
>UL DPCH Information LCR		01		Applicable to 1.28Mcps TDD only	YES	notify
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>UL Timeslot Information LCR	M		9.2.3.26E		_	
>UL SIR Target	0		UL SIR 9.2.1.67A	Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	reject
DL CCTrCH Information		0 <maxno CCTrCH></maxno 			EACH	notify
>CCTrCH ID	M		9.2.3.3		_	
>TFCS	M		9.2.1.58		_	
>TFCI Coding	M		9.2.3.22		_	
>Puncture Limit	M		9.2.1.50		-	
>TDD TPC DL Step Size	M		9.2.3.21		_	
>TPC CCTrCH List		0 <maxno CCTrCH></maxno 		List of uplink CCTrCH which provide TPC	_	
>>TPC CCTrCH ID	М		CCTrCH ID 9.2.3.3		_	
>DL DPCH information		01		Applicable to 3.84Mcps TDD only	YES	notify
>>Repetition Period	M		9.2.3.16		-	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A			
>>DL Timeslot Information	М		9.2.3.4E		_	
>DL DPCH information LCR		01		Applicable to 1.28Mcps TDD only	YES	notify

>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A		_	
>>DL Timeslot	М		9.2.3.40		_	
Information LCR						
>>TSTD Indicator	М		9.2.1.64		_	
>CCTrCH Initial DL	0		DL Power	Initial power on	YES	ignore
Transmission Power			9.2.1.21	DPCH		J
DCH Information	0		DCH TDD Information 9.2.3.4C		YES	reject
DSCH Information	0		DSCH TDD Information 9.2.3.5A		YES	reject
USCH Information	0		9.2.3.28		YES	reject
RL Information		1			YES	reject
>RL ID	М		9.2.1.53		_	
>C-ID	M		9.2.1.9		-	
>Frame Offset	M		9.2.1.31		-	
>Special Burst Scheduling	M		9.2.3.18A		-	
>Initial DL Transmission Power	М		DL Power 9.2.1.21	Initial power on DPCH	_	
>Maximum DL Power	М		DL Power 9.2.1.21	Maximum allowed power on DPCH	_	
>Minimum DL Power	М		DL Power 9.2.1.21	Minimum allowed power on DPCH	-	
>DL Time Slot ISCP Info	0		9.2.3.4F	Applicable to 3.84Mcps TDD only	-	
>DL Time Slot ISCP Info LCR	0		9.2.3.40A	Applicable to 1.28Mcps TDD only	YES	reject
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
>Delayed Activation	0		9.2.1.24C		YES	reject
HS-DSCH Information	0		HS-DSCH TDD Information 9.2.3.5F		YES	reject
HS-DSCH-RNTI	0		9.2.1.31J		YES	reject
HS-PDSCH RL ID	C- InfoHSDS CH		RL ID 9.2.1.53		YES	reject
PDSCH-RL-ID	0		RL ID 9.2.1.53		YES	ignore

Range Bound	Explanation			
maxnoCCTrCH	Number of CCTrCHs for one UE			

9.1.37 RADIO LINK SETUP RESPONSE

9.1.37.1 FDD message

IE/Group Name	Presence	Presence Range	IE Type	Semantics	Criticality	Assigned
			and Reference	Description		Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
Communication Control Port ID	М		9.2.1.15		YES	ignore
RL Information Response		1 <maxno ofRLs></maxno 			EACH	ignore
>RL ID	M		9.2.1.53		_	
>RL Set ID	M		9.2.2.39		_	
>Received Total Wide Band Power	М		9.2.2.39A		_	
>CHOICE Diversity Indication	М				_	
>>Combining					_	
>>>RL ID	M		9.2.1.53	Reference RL ID for the combining	_	
>>Non Combining or First RL					_	
>>>DCH Information Response	М		9.2.1.20C		_	
>DSCH Information Response	0		9.2.1.27A		YES	ignore
>SSDT Support Indicator	M		9.2.2.46		_	
>DL Power Balancing Activation Indicator	0		9.2.2.12C		YES	ignore
>HS-DSCH Information Response	0		HS-DSCH FDD Information Response 9.2.2.18E		YES	ignore
TFCI2 Bearer Information Response	0		9.2.2.49A		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation		
maxnoofRLs	Maximum number of RLs for one UE		

9.1.37.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	М		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
Communication Control Port ID	M		9.2.1.15		YES	ignore
RL Information Response		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	ignore
>RL ID	M		9.2.1.53		_	
>UL Time Slot ISCP Info	М		9.2.3.26D		_	
>UL PhysCH SF Variation	М		9.2.3.26B		_	
>DCH Information Response	0		9.2.1.20C		YES	ignore
>DSCH Information Response	0		9.2.1.27A		YES	ignore
>USCH Information Response	0		9.2.3.28		YES	ignore
>HS-DSCH Information Response	0		HS-DSCH TDD Information Response 9.2.3.5G		YES	ignore
RL Information Response LCR		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	ignore
>RL ID	M		9.2.1.53		_	
>UL Time Slot ISCP Info LCR	М		9.2.3.26F		_	
>UL PhysCH SF Variation	M		9.2.3.26B		_	
>DCH Information Response	0		9.2.1.20C		YES	ignore
>DSCH Information Response	0		9.2.1.27A		YES	ignore
>USCH Information Response	0		9.2.3.28		YES	ignore
>HS-DSCH Information Response	0		HS-DSCH TDD Information Response 9.2.3.5G		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore
Criticality Diagnostics		1	₹.∠. 1.17		IES	Ignore

9.1.38 RADIO LINK SETUP FAILURE

9.1.38.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Node B Communication Context ID	C-Success		9.2.1.48	The reserved value "All NBCC" shall not be used	YES	ignore
Communication Control Port ID	0		9.2.1.15		YES	ignore
CHOICE Cause Level	M				YES	ignore
>General					_	
>>Cause	М		9.2.1.6		_	
>RL Specific					_	
>>Unsuccessful RL Information Response		1 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	M		9.2.1.53		_	
>>>Cause	M		9.2.1.6		_	
>>Successful RL Information Response		0 <maxno ofRLs></maxno 	2.2.4.50	Note: There will never be maxnoofRLs repetitions of this sequence.	EACH	ignore
>>>RL ID	M		9.2.1.53		_	
>>>RL Set ID	M		9.2.2.39		_	
>>>Received Total	M		9.2.2.39A		_	
Wide Band Power	M				_	
>>>CHOICE Diversity Indication	IVI					
>>>Combining			0.04.50	D (D)	_	
>>>>RL ID	М		9.2.1.53	Reference RL ID for the combining	_	
>>>Non Combining or First RL					_	
>>>>DCH Information Response	M		9.2.1.20C		_	
>>>DSCH Information Response	0		9.2.1.27A		YES	ignore
>>>TFCI2 Bearer Information Response	0		9.2.2.49A	There shall be only one TFCI2 bearer per Node B Communication Context.	-	
>>>SSDT Support Indicator	М		9.2.2.46		_	
>>>DL Power Balancing Activation Indicator	0		9.2.2.12C		YES	ignore
>>>HS-DSCH Information Response	0		HS-DSCH FDD		YES	ignore

		Information		
		Response		
		9.2.2.18E		
Criticality Diagnostics	0	9.2.1.17	YES	ignore

Condition Explanation	
Success	The IE shall be present if at least one of the radio links has been
	successfully set up.

Range Bound	Explanation
maxnoofRLs	Maximum number of RLs for one UE

9.1.38.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		-	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Cause Level	M				YES	ignore
>General					-	
>>Cause	M		9.2.1.6		-	
>RL Specific					_	
>>Unsuccessful RL Information Response		1			YES	ignore
>>>RL ID	М		9.2.1.53		_	
>>>Cause	М		9.2.1.6		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.39 RADIO LINK ADDITION REQUEST

9.1.39.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
Compressed Mode Deactivation Flag	0		9.2.2.3A		YES	reject
RL Information		1 <maxno ofRLs-1></maxno 			EACH	notify
>RL ID	М		9.2.1.53		_	
>C-ID	M		9.2.1.9		_	
>Frame Offset	М		9.2.1.31		_	
>Chip Offset	М		9.2.2.2		_	
>Diversity Control Field	M		9.2.1.25		_	
>DL Code Information	M		FDD DL Code Information 9.2.2.14A		_	
>Initial DL Transmission Power	0		DL Power 9.2.1.21	Initial power on DPCH	_	
>Maximum DL Power	0		DL Power 9.2.1.21	Maximum allowed power on DPCH	_	
>Minimum DL Power	0		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>SSDT Cell Identity	0		9.2.2.44		_	
>Transmit Diversity Indicator	0		9.2.2.53		_	
>DL Reference Power	0		DL power 9.2.1.21	Power on DPCH	YES	ignore
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
>Delayed Activation	0		9.2.1.24C		YES	reject
>Qth Parameter	0		9.2.2.36A		YES	ignore

Range Bound	Explanation		
maxnoofRLs	Maximum number of RLs for one UE		

9.1.39.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
UL CCTrCH Information		0 <maxno CCTrCH></maxno 			GLOBAL	reject
>CCTrCH ID	M		9.2.3.3		_	
>UL DPCH Information		01		Applicable to 3.84Mcps TDD only	YES	notify
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>UL Timeslot	M		9.2.3.26C			
Information						
>UL DPCH Information LCR		01		Applicable to 1.28Mcps TDD only	YES	notify
>>Repetition Period	М		9.2.3.16	•	_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A		_	
>>UL Timeslot Information LCR	М		9.2.3.26E		_	
DL CCTrCH Information		0 <maxno CCTrCH></maxno 			GLOBAL	reject
>CCTrCH ID	M		9.2.3.3		_	
>DL DPCH information		01		Applicable to 3.84Mcps TDD only	YES	notify
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>DL Timeslot Information	M		9.2.3.4E		_	
>DL DPCH information LCR		01		Applicable to 1.28Mcps TDD only	YES	notify
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>DL Timeslot	M		9.2.3.40			
Information LCR						
>CCTrCH Initial DL	0		DL Power	Initial power on	YES	ignore
Transmission Power			9.2.1.21	DPCH		
RL Information		1			YES	reject
>RL ID	M		9.2.1.53		_	
>C-ID	M		9.2.1.9		_	
>Frame Offset	M		9.2.1.31		_	
>Diversity Control Field	M		9.2.1.25		_	
>Initial DL Transmission Power	0		DL Power 9.2.1.21	Initial power on DPCH	-	
>Maximum DL Power	0		DL Power 9.2.1.21	Maximum allowed power	_	

			on DPCH		
>Minimum DL Power	0	DL Power 9.2.1.21	Minimum allowed power on DPCH	1	
>DL Time Slot ISCP Info	0	9.2.3.4F	Applicable to 3.84Mcps TDD only	-	
>DL Time Slot ISCP Info LCR	0	9.2.3.40A	Applicable to 1.28Mcps TDD only	YES	reject
>RL Specific DCH Information	0	9.2.1.53G		YES	ignore
>Delayed Activation	0	9.2.1.24C		YES	reject

Range Bound	Explanation			
maxnoCCTrCH	Number of CCTrCH for one UE			

9.1.40 RADIO LINK ADDITION RESPONSE

9.1.40.1 FDD message

IE/Group Name	Presence	Range	IE Type and	Semantics	Criticality	Assigned Criticality
			Reference	Description		Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
CRNC Communication	М		9.2.1.18	The reserved value "All	YES	ignore
Context ID				CRNCCC" shall not be used.		
RL Information Response		1 <maxno ofRLs-1></maxno 			EACH	ignore
>RL ID	М		9.2.1.53		_	
>RL Set ID	М		9.2.2.39		_	
>Received Total Wide Band Power	M		9.2.2.39A		_	
>CHOICE Diversity Indication	M				_	
>>Combining					_	
>>>RL ID	М		9.2.1.53	Reference RL	_	
>>Non Combining					_	
>>>DCH Information	М		9.2.1.20C		_	
Response						
>SSDT Support Indicator	М		9.2.2.46		-	
>DL Power Balancing Activation Indicator	0		9.2.2.12C		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation		
maxnoofRLs	Maximum number of RLs for one UE		

9.1.40.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
RL Information Response		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	ignore
>RL ID	М		9.2.1.53		_	
>UL Time Slot ISCP Info	М		9.2.3.26D		_	
>UL PhysCH SF Variation	М		9.2.3.26B		_	
>DCH Information		01			_	
>>CHOICE Diversity	М				_	
Indication						
>>>Combining				In TDD it indicates whether the old Transport Bearer shall be reused or not	-	
>>>>RL ID	М		9.2.1.53	Reference RL	_	
>>>Non Combining					_	
>>>>DCH Information Response	М		9.2.1.20C		_	
>DSCH Information Response	0		9.2.1.27A		YES	ignore
>USCH Information Response	0		9.2.3.29		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore
RL Information Response LCR		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	ignore
>RL ID	M		9.2.1.53		_	
>UL Time Slot ISCP Info LCR	М		9.2.3.26F		_	
>UL PhysCH SF Variation	M		9.2.3.26B		_	
>DCH Information		01			_	
>>CHOICE Diversity indication	М				_	
>>>Combining				In TDD it indicates whether the old Transport Bearer shall be reused or not	-	
>>>>RL ID	M		9.2.1.53	Reference RL		
>>>Non Combining					_	
>>>>DCH Information Response	М		9.2.1.20C		_	
>DSCH Information Response	0		9.2.1.27A		YES	ignore

>USCH Information	0	9.2.3.29	YES	ignore
Response				

9.1.41 RADIO LINK ADDITION FAILURE

9.1.41.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Cause Level	М				YES	ignore
>General					-	
>>Cause	М		9.2.1.6		-	
>RL Specific					-	
>>Unsuccessful RL Information Response		1 <maxno ofRLs-1></maxno 			EACH	ignore
>>>RL ID	М		9.2.1.53		_	
>>>Cause	М		9.2.1.6		_	
>>Successful RL		0 <maxno< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxno<>			EACH	ignore
Information Response		ofRLs-2>				
>>>RL ID	М		9.2.1.53		-	
>>>RL Set ID	М		9.2.2.39		-	
>>> Received Total Wide Band Power	М		9.2.2.39A		_	
>>>CHOICE Diversity Indication	М				_	
>>>Combining					_	
>>>>RL ID	М		9.2.1.53	Reference RL	_	
>>>Non Combining					_	
>>>>DCH Information Response	M		9.2.1.20C		-	
>>>SSDT Support Indicator	М		9.2.2.46		_	
>>>DL Power Balancing Activation Indicator	0		9.2.2.12C		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation		
maxnoofRLs	Maximum number of RLs for one UE		

9.1.41.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Cause Level	М				YES	ignore
>General					_	
>>Cause	М		9.2.1.6		_	
>RL Specific					_	
>>Unsuccessful RL Information Response		1			YES	ignore
>>>RL ID	M		9.2.1.53		_	
>>>Cause	М		9.2.1.6		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.42 RADIO LINK RECONFIGURATION PREPARE

9.1.42.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
UL DPCH Information		01			YES	reject
>UL Scrambling Code	0		9.2.2.59		_	
>UL SIR Target	0		UL SIR 9.2.1.67A		_	
>Min UL Channelistion Code Length	0		9.2.2.22		_	
>Max Number of UL DPDCHs	C- CodeLen		9.2.2.21		_	
>Puncture Limit	0		9.2.1.50	For UL	_	
>TFCS	0		9.2.1.58		_	
>UL DPCCH Slot Format	0		9.2.2.57		_	
>Diversity Mode	0		9.2.2.9		_	
>SSDT Cell Identity Length	0		9.2.2.45		_	
>S-Field Length	0		9.2.2.40		_	
DL DPCH Information		01			YES	reject
>TFCS	0		9.2.1.58		_	
>DL DPCH Slot Format	0		9.2.2.10		_	
>TFCI Signalling Mode	0		9.2.2.50		_	
>TFCI Presence	C- SlotFormat		9.2.1.57		_	
>Multiplexing Position	0		9.2.2.23		_	
>PDSCH Code Mapping	0		9.2.2.25		_	
>PDSCH RL ID	0		RL ID 9.2.1.53		_	
>Limited Power Increase	0		9.2.2.18A		_	
DCHs To Modify	0		DCHs FDD To Modify 9.2.2.4E		YES	reject
DCHs To Add	0		DCH FDD Information 9.2.2.4D		YES	reject
DCHs To Delete		0 <maxno ofDCHs></maxno 			GLOBAL	reject
>DCH ID	M		9.2.1.20		_	
DSCH To Modify		0 <maxno ofDSCHs></maxno 			EACH	reject
>DSCH ID	M		9.2.1.27		_	
>Transport Format Set	0		9.2.1.59	For the DL.	_	
>Allocation/Retention Priority	0		9.2.1.1A		_	
>Frame Handling Priority	0		9.2.1.30		_	
>ToAWS	0		9.2.1.61		_	
>ToAWE	0		9.2.1.60		_	
>Transport Bearer Request Indicator	М		9.2.1.62A			

>Binding ID	0		9.2.1.4	Shall be ignored if	YES	ignore
				bearer establishment with ALCAP.		
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
DSCH To Add	0		DSCH FDD Information 9.2.2.13B		YES	reject
DSCH To Delete		0 <maxno ofDSCHs></maxno 			EACH	reject
>DSCH ID	M		9.2.1.27		_	
TFCI2 Bearer Information		01			YES	reject
>CHOICE TFCI2 Bearer Action	М				_	
>>Add or modify					_	
>>>ToAWS	М		9.2.1.61		-	
>>>ToAWE	М		9.2.1.60		_	
>>> TFCI2 Bearer Request Indicator	0		9.2.1.56C		YES	reject
>>Delete			NULL		_	
RL Information		0 <maxno ofRLs></maxno 			EACH	reject
>RL ID	М		9.2.1.53		_	
>DL Code Information	0		FDD DL		-	
			Code Information 9.2.2.14A			
>Maximum DL Power	0		DL Power 9.2.1.21	Maximum allowed power on DPCH	-	
>Minimum DL Power	0		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>SSDT Indication	0		9.2.2.47		_	
>SSDT Cell Identity	C- SSDTIndO N		9.2.2.44		_	
>Transmit Diversity Indicator	CDiversity mode		9.2.2.53		-	
>SSDT Cell Identity For EDSCHPC	C- EDSCHPC		9.2.2.44A		YES	ignore
>DL Reference Power	0		DL Power 9.2.1.21	Power on DPCH	YES	ignore
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
>DL DPCH Timing Adjustment	0		9.2.2.10A	Required RL Timing Adjustment	YES	reject
>Qth Parameter	0		9.2.2.36A		YES	ignore
Transmission Gap Pattern Sequence Information	0		9.2.2.53A		YES	reject
DSCH Common Information	0		DSCH FDD Common Information 9.2.2.13D		YES	ignore
Signalling Bearer Request Indicator	0		9.2.1.55A		YES	reject

110 DOOLLT 14 17	0		9.2.1.31H	YES	roject
HS-DSCH To Modify	U		9.2.1.311	IES	reject
HS-DSCH To Add	0		HS-DSCH	YES	reject
110 20011 10 7100			FDD		,
			Information		
			9.2.2.18D		
HS-DSCH To Delete		0 <maxno< td=""><td></td><td>GLOBAL</td><td>reject</td></maxno<>		GLOBAL	reject
110 20011 10 201010		ofMACdFl			,
		OWS>			
>HS-DSCH MAC-D Flow ID	M		9.2.1.311	_	
HS-DSCH-RNTI	0		9.2.1.31J	YES	reject
HS-PDSCH RL ID	0		RL ID	YES	reject
1101200111212			9.2.1.53		,

Condition	Explanation
SSDTIndON	The IE shall be present if the SSDT Indication IE is set to "SSDT Active
	in the UE".
CodeLen	The IE shall be present if the Min UL Channelisation Code Length IE is
	equals to 4.
SlotFormat	The IE shall be present if the DL DPCH Slot Format IE is equal to any of
	the values from 12 to 16.
Diversity mode	The IE shall be present if the Diversity Mode IE is present in the UL
	DPCH Information IEand is not set to "none".
EDSCHPC	The IE shall be present if the Enhanced DSCH PC IE is present in the
	DSCH Common Information IE.

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for a UE
maxnoofDSCHs	Maximum number of DSCHs for a UE
maxnoofRLs	Maximum number of RLs for a UE
maxnoofMACdFlows	Maximum number of MAC-d Flows

9.1.42.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
UL CCTrCH To Add		0 <maxno ofCCTrCH s></maxno 			GLOBAL	reject
>CCTrCH ID	M		9.2.3.3		_	
>TFCS	M		9.2.1.58		_	
>TFCI Coding	М		9.2.3.22		_	
>Puncture Limit	M		9.2.1.50		_	
>UL DPCH Information		01		Applicable to 3.84Mcps TDD only	YES	reject
>>Repetition Period	М		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>UL Timeslot Information	M		9.2.3.26C		_	
>UL DPCH Information LCR		01		Applicable to 1.28Mcps TDD only	YES	reject
>>Repetition Period	М		9.2.3.16	0,	_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A		_	
>>UL Timeslot Information LCR	М		9.2.3.26E		_	
>UL SIR Target	0		UL SIR 9.2.1.67A	Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD	YES	reject
UL CCTrCH To Modify		0 <maxno ofCCTrCH s></maxno 			GLOBAL	reject
>CCTrCH ID	М		9.2.3.3		_	
>TFCS	0		9.2.1.58		_	
>TFCI Coding	0		9.2.3.22		_	
>Puncture Limit	0		9.2.1.50		_	
>UL SIR Target	0		UL SIR 9.2.1.67A	Applicable to 1.28Mcps TDD only	YES	reject
>UL DPCH To Add		01		Applicable to 3.84Mcps TDD only	YES	reject
>>Repetition Period	М		9.2.3.16		_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A			
>>UL Timeslot	M		9.2.3.26C		_	
Information						
>UL DPCH To Modify		01			YES	reject
>>Repetition Period	0		9.2.3.16		_	
>>Repetition Length	0		9.2.3.15		_	
>>TDD DPCH Offset	0		9.2.3.19A		_	

111 = 111		0 4 2 2 2 2 2 2	1	Applicable to	<u> </u>	
>>UL Timeslot		0 <maxno ofULts></maxno 		Applicable to 3.84Mcps TDD	_	
Information		OIOLIS>		only		
>>>Time Slot	М		9.2.3.23	Offig	_	
>>>Midamble Shift And	0		9.2.3.7		_	
	O		9.2.5.7		_	
Burst Type	0		9.2.1.57			
>>>TFCI Presence	U		9.2.1.57		_	
>>>UL Code		0 <maxno ofDPCHs></maxno 			_	
Information		OIDPCHS>				
>>>DPCH ID	М		9.2.3.5		_	
>>>TDD	0		9.2.3.19		_	
Channelisation Code						
>>UL Timeslot		0 <maxno< td=""><td></td><td>Applicable to</td><td>GLOBAL</td><td>reject</td></maxno<>		Applicable to	GLOBAL	reject
Information LCR		ofULtsLCR		1.28Mcps TDD		
		>	0.00044	only		
>>>Time Slot LCR	M		9.2.3.24A		_	
>>>Midamble Shift LCR	0		9.2.3.7A			
>>>TFCI Presence	0		9.2.1.57		_	
>>>UL Code		0 <maxno< td=""><td></td><td></td><td>_ </td><td></td></maxno<>			_	
Information LCR		OfDPCHL				
	1	CR>	0005	1		
>>>DPCH ID	M	1	9.2.3.5		_	
>>>TDD	0		9.2.3.19a		_	
Channelisation Code						
LCR						
>UL DPCH To Delete		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
		ofDPCHs>				
>>DPCH ID	M		9.2.3.5		_	
>UL DPCH To Add LCR		01		Applicable to	YES	reject
				1.28Mcps TDD only		
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
>>UL Timeslot	M		9.2.3.26E		_	
Information LCR						
UL CCTrCH To Delete		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
		ofCCTrCH				•
		S>				
>CCTrCH ID	M		9.2.3.3		_	
DL CCTrCH To Add		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
		ofCCTrCH				
	 	S>	0.0.0.0			
>CCTrCH ID	M	1	9.2.3.3		_	
>TFCS	M		9.2.1.58		_	
>TFCI Coding	М		9.2.3.22			
>Puncture Limit	М		9.2.1.50		_	
>TPC CCTrCH List		0 <maxno< td=""><td></td><td>List of uplink</td><td>_</td><td></td></maxno<>		List of uplink	_	
		ofCCTrCH		CCTrCH which		
TD0 007 0:::-	N4	S>	COT-OLUD	provide TPC		
>>TPC CCTrCH ID	M		CCTrCH ID 9.2.3.3		_	
DI DDCH Information		01	3.2.3.3	Applicable to	YES	reject
>DL DPCH Information		0 1		3.84Mcps TDD only	123	reject
>>Repetition Period	М		9.2.3.16	<u> </u>	_	
>>Repetition Length	M	1	9.2.3.15	1	_	
>>TDD DPCH Offset	M		9.2.3.19A		_	
	M	1	9.2.3.4E	1	_	
>>DL Timeslot	IVI		3.2.3.4E		-	
Information	1	0.1		Applicable to	VEC	malast.
>DL DPCH Information		01		Applicable to 1.28Mcps TDD	YES	reject

LCR			only		
>>Repetition Period	M	9.2.3.16		_	
>>Repetition Length	M	9.2.3.15		_	
>>TDD DPCH Offset	M	9.2.3.19A		_	
>>DL Timeslot	M	9.2.3.40		_	
Information LCR					
>CCTrCH Initial DL	0	DL Power	Initial power on	YES	ignore
Transmission Power		9.2.1.21	DPCH		

>CCTrCH ID >TFCS >TFCI Coding >Puncture Limit >TPC CCTrCH List	M O O		9.2.3.3.		i i	
>TFCS >TFCI Coding >Puncture Limit					_	
>TFCI Coding >Puncture Limit	0	ı	9.2.1.58		_	
>Puncture Limit			9.2.3.22		_	
	0		9.2.1.50		_	
		0 <maxno ofCCTrCH s></maxno 		List of uplink CCTrCH which provide TPC	-	
>>TPC CCTrCH ID	М		CCTrCH ID 9.2.3.3		_	
>DL DPCH To Add		01		Applicable to 3.84Mcps TDD only	YES	reject
>>Repetition Period	M		9.2.3.16		_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A		_	
>>DL Timeslot	М		9.2.3.4E		_	
Information		0.4			VEC	unin at
>DL DPCH To Modify		01	0.0.0.40		YES	reject
>>Repetition Period	0		9.2.3.16		_	
>>Repetition Length	0		9.2.3.15		_	
>>TDD DPCH Offset	0		9.2.3.19A		-	
>>DL Timeslot Information		0 <maxno ofDLts></maxno 		Applicable to 3.84Mcps TDD only	_	
>>>Time Slot	M		9.2.3.23		_	
>>>Midamble Shift And Burst Type	0		9.2.3.7		-	
>>>TFCI Presence	0		9.2.1.57		_	
>>>DL Code		0 <maxno ofDPCHs></maxno 			_	
Information	N/	0121 01102	9.2.3.5			
>>>>DPCH ID	M				_	
>>>>TDD	0		9.2.3.19		_	
Channelisation Code				A 11 1	01.0541	
>>DL Timeslot Information LCR		0 <maxno ofDLtsLCR ></maxno 		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>>>Time Slot LCR	М		9.2.3.24A		_	
>>>Midamble Shift LCR	0		9.2.3.7A			
>>>TFCI Presence	0		9.2.1.57		_	
>>>DL Code Information LCR		0 <maxno ofDPCHsL CR></maxno 			-	
>>>>DPCH ID	М		9.2.3.5		_	
>>>>TDD Channelisation Code LCR	0		9.2.3.19a		-	
>DL DPCH To Delete		0 <maxno ofDPCHs></maxno 			GLOBAL	reject
>>DPCH ID	М		9.2.3.5		_	
>DL DPCH To Add LCR		01		Applicable to 1.28Mcps TDD only	YES	reject
>>Repetition Period	М		9.2.3.16		_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD DPCH Offset	М		9.2.3.19A		_	
>>DL Timeslot	М		9.2.3.40		-	

DL CCTrCH To Delete		0 <maxno ofCCTrCH</maxno 			GLOBAL	reject
		s>				
>CCTrCH ID	М		9.2.3.3		_	
DCHs To Modify	0		DCHs TDD To Modify 9.2.3.4D		YES	reject
DCHs To Add	0		DCH TDD Information 9.2.3.4C		YES	reject
DCHs To Delete		0 <maxno ofDCHs></maxno 			GLOBAL	reject
>DCH ID	M		9.2.1.20		_	
DSCH To Modify		0 <maxno ofDSCHs></maxno 			GLOBAL	reject
>DSCH ID	M		9.2.1.27		_	
>CCTrCH ID	0		9.2.3.3	DL CCTrCH in which the DSCH is mapped	-	
>Transport Format Set	0		9.2.1.59		_	
>Allocation/Retention Priority	0		9.2.1.1A		_	
>Frame Handling Priority	0		9.2.1.30		_	
>ToAWS	0		9.2.1.61		_	
>ToAWE	0		9.2.1.60		_	
>Transport Bearer Request Indicator	М		9.2.1.62A		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
DSCH To Add	0		DSCH TDD Information 9.2.3.5A		YES	reject
DSCH To Delete		0 <maxno ofDSCHs></maxno 			GLOBAL	reject
>DSCH ID	М		9.2.1.27		_	
USCH To Modify		0 <maxno ofUSCHs></maxno 			GLOBAL	reject
>USCH ID	M		9.2.3.27		_	
>Transport Format Set	0		9.2.1.59		_	
>Allocation/Retention Priority	0		9.2.1.1A		_	
>CCTrCH ID	0		9.2.3.2	UL CCTrCH in which the USCH is mapped	-	
>Transport Bearer Request Indicator	M		9.2.1.62A		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore

>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
USCH To Add	0		USCH Information 9.2.3.28		YES	reject
USCH To Delete		0 <maxno ofUSCHs></maxno 			GLOBAL	reject
>USCH ID	М		9.2.3.27		_	
RL Information		01			YES	reject
>RL ID	М		9.2.1.53		_	
>Maximum Downlink Power	0		DL Power 9.2.1.21	Maximum allowed power on DPCH	-	
>Minimum Downlink Power	0		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>Initial DL Transmission Power	0		DL Power 9.2.1.21	Initial power on DPCH	YES	ignore
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
Signalling Bearer Request Indicator	0		9.2.1.55A		YES	reject
HS-DSCH To Modify	0		9.2.1.31H		YES	reject
HS-DSCH To Add	0		HS-DSCH TDD Information 9.2.3.5F		YES	reject
HS-DSCH To Delete		0 <maxno ofMACdFl ows></maxno 			GLOBAL	reject
>HS-DSCH MAC-D flow ID	М		9.2.1.311		_	
HS-DSCH-RNTI	0		9.2.1.31J		YES	reject
HS-PDSCH RL ID	0		RL ID 9.2.1.53		YES	reject
PDSCH-RL-ID	0		RL ID 9.2.1.53		YES	ignore

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for a UE
maxnoofCCTrCHs	Maximum number of CCTrCHs for a UE
maxnoofDPCHs	Maximum number of DPCHs in one CCTrCH for 3.84Mcps TDD
maxnoofDPCHsLCR	Maximum number of DPCHs in one CCTrCH for 1.28Mcps TDD
maxnoofDSCHs	Maximum number of DSCHs for one UE
maxnoofUSCHs	Maximum number of USCHs for one UE
maxnoofDLts	Maximum number of Downlink time slots per Radio Link for 3.84Mcps TDD
maxnoofDLtsLCR	Maximum number of Downlink time slots per Radio Link for 1.28Mcps TDD
maxnoofULts	Maximum number of Uplink time slots per Radio Link for 3.84Mcps TDD
maxnoofULtsLCR	Maximum number of Uplink time slots per Radio Link for 1.28Mcps TDD
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows

9.1.43 RADIO LINK RECONFIGURATION READY

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
RL Information Response		0 <maxno ofRLs></maxno 		Only one RL information response group for one group of combined RLs shall be present	EACH	ignore
>RL ID	M		9.2.1.53		_	
>DCH Information Response	0		9.2.1.20C		YES	ignore
>DSCH Information Response	0		9.2.1.27A		YES	ignore
>USCH Information Response	0		9.2.3.29	TDD only	YES	ignore
>TFCI2 Bearer Information Response	0		9.2.2.49A	FDD only. There shall be only one TFCI2 bearer per Node B Communication Context.	-	
>DL Power Balancing Updated Indicator	0		9.2.2.12D		YES	ignore
>HS-DSCH FDD Information Response	0		9.2.2.18E		YES	ignore
>HS-DSCH TDD Information Response	0		9.2.3.5G		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore
Target Communication Control Port ID	0		9.2.1.15		YES	ignore

Range Bound	Explanation			
maxnoofRLs	Maximum number of RLs for a UE			

9.1.44 RADIO LINK RECONFIGURATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Cause Level	M				YES	ignore
>General					_	
>>Cause	M		9.2.1.6		YES	ignore
>RL Specific					_	
>>RLs Causing Reconfiguration Failure		0 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	M		9.2.1.53		_	
>>>Cause	M		9.2.1.6		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation			
maxnoofRLs	Maximum number of RLs for a UE			

9.1.45 RADIO LINK RECONFIGURATION COMMIT

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message type	M		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
CFN	M		9.2.1.7		YES	ignore
Active Pattern Sequence Information	0		9.2.2.A		YES	ignore

9.1.46 RADIO LINK RECONFIGURATION CANCEL

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message type	M		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore

9.1.47 RADIO LINK RECONFIGURATION REQUEST

9.1.47.1 FDD Message

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference	•		
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
UL DPCH Information		01			YES	reject
>TFCS	0		9.2.1.58	For the UL.	_	
DL DPCH Information		01			YES	reject
>TFCS	0		9.2.1.58	For the DL.	_	
>TFCI Signalling Mode	0		9.2.2.50		_	
>Limited Power Increase	0		9.2.2.18A		_	
DCHs To Modify	0		DCHs FDD To Modify 9.2.2.4E		YES	reject
DCHs To Add	0		DCH FDD Information 9.2.2.4D		YES	reject
DCHs To Delete		0 <maxno ofDCHs></maxno 			GLOBAL	reject
>DCH ID	M		9.2.1.20		_	
Radio Link Information		0 <maxno ofRLs></maxno 			EACH	reject
>RL ID	M		9.2.1.53		_	
>Maximum DL Power	0		DL Power 9.2.1.21	Maximum allowed power on DPCH	_	
>Minimum DL Power	0		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>DL Code Information	C-SF/2		FDD DL Code Information 9.2.2.14A		-	
>DL Reference Power	0		DL Power 9.2.1.21	Power on DPCH	YES	ignore
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
Transmission Gap Pattern Sequence Information	0		9.2.2.53A		YES	reject
Signalling Bearer Request Indicator	0		9.2.1.55A		YES	reject

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for a UE
maxnoofRLs	Maximum number of RLs for a UE

Condition	Explanation
SF/2	The IE shall be present if the Transmission Gap Pattern Sequence
	Information IE is included and the indicated Downlink Compressed
	Mode method for at least one of the included Transmission Gap Pattern
	Sequence is set to "SF/2".

9.1.47.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	·ojeet
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
UL CCTrCH To Modify		0 <maxno ofCCTrCH s></maxno 			EACH	notify
>CCTrCH ID	М		9.2.3.3		_	
>TFCS	0		9.2.1.58		_	
>Puncture Limit	0		9.2.1.50		_	
UL CCTrCH To Delete		0 <maxno ofCCTrCH s></maxno 			EACH	notify
>CCTrCH ID	M		9.2.3.3		_	
DL CCTrCH To Modify		0 <maxno ofCCTrCH s></maxno 			EACH	notify
>CCTrCH ID	M		9.2.3.3		_	
>TFCS	0		9.2.1.58		_	
>Puncture Limit	0		9.2.1.50		_	
DL CCTrCH To Delete		0 <maxno ofCCTrCH s></maxno 			EACH	notify
>CCTrCH ID	М		9.2.3.3		_	
DCHs To Modify	0		DCHs TDD To Modify 9.2.3.4D		YES	reject
DCHs To Add	0		DCH TDD Information 9.2.3.4C		YES	reject
DCHs To Delete		0 <maxno ofDSCHs></maxno 			GLOBAL	reject
>DCH ID	М		9.2.1.20		_	
RL Information		01			YES	reject
>RL ID	М		9.2.1.53		_	
>Maximum Downlink Power	0		DL Power 9.2.1.21	Maximum allowed power on DPCH	_	
>Minimum Downlink Power	0		DL Power 9.2.1.21	Minimum allowed power on DPCH	_	
>RL Specific DCH Information	0		9.2.1.53G		YES	ignore
Signalling Bearer Request Indicator	0		9.2.1.55A		YES	reject

Range Bound	Explanation
maxnoofCCTrCHs	Maximum number of CCTrCHs for a UE

9.1.48 RADIO LINK RECONFIGURATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
RL Information Response		0 <maxno ofRLs></maxno 		Only one RL information response group for one group of combined RLs shall be present	EACH	ignore
>RL ID	M		9.2.1.53		_	
>DCH Information Response	0		9.2.1.20C		YES	ignore
>DL Power Balancing Updated Indicator	0		9.2.2.12D		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore
Target Communication Control Port ID	0		9.2.1.15		YES	ignore

Range Bound	Explanation
maxnoofRLs	Maximum number of RLs for a UE

9.1.49 RADIO LINK DELETION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		-	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		-	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	reject
CRNC Communication Context ID	М		9.2.1.18		YES	reject
RL Information		1 <maxno ofRLs></maxno 			EACH	notify
>RL ID	M		9.2.1.53		_	

Range Bound	Explanation
maxnoofRLs	Maximum number of radio links for one UE

9.1.50 RADIO LINK DELETION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	М		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.51 DL POWER CONTROL REQUEST [FDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		-	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		-	
Node B Communication Context ID	М		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
Power Adjustment Type	М		9.2.2.27		YES	ignore
DL Reference Power	C- Common		DL power 9.2.1.21	Power on DPCH	YES	ignore
Inner Loop DL PC Status	0		9.2.2.18B		YES	ignore
DL Reference Power Information	C- Individual	1 <maxno ofRLs></maxno 			EACH	ignore
>RL ID	М		9.2.1.53		-	
>DL Reference Power	M		DL power 9.2.1.21	Power on DPCH	-	
Max Adjustment Step	C- CommonO rIndividual		9.2.2.20		YES	ignore
Adjustment Period	C- CommonO rIndividual		9.2.2.B		YES	ignore
Adjustment Ratio	C- CommonO rIndividual		9.2.2.C		YES	ignore

Condition	Explanation
Common	The IE shall be present if the Adjustment Type IE is equal to "Common".
Individual	The IE shall be present if the <i>Adjustment Type</i> IE is equal to "Individual".
CommonOrIndividual	The IE shall be present if the Adjustment Type IE is equal to "Common"
	or "Individual".

Range Bound	Explanation
maxnoofRLs	Maximum number of Radio Links for a UE

9.1.52 DEDICATED MEASUREMENT INITIATION REQUEST

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference	•		
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used when the Report characteristics type is set to "On Demand".	YES	reject
Measurement ID	М		9.2.1.42		YES	reject
CHOICE Dedicated Measurement Object Type	М				YES	reject
>RL					_	
>>RL Information		1 <maxno ofRLs></maxno 			EACH	reject
>>>RL ID	M		9.2.1.53		_	
>>>DPCH ID	0		9.2.3.5	TDD only	_	
>>>PUSCH Information		0 <maxno ofPUSCHs</maxno 		TDD only	GLOBAL	reject
>>>>PUSCH ID	М		9.2.3.12		_	
>RLS				FDD only	_	
>>RL Set Information		1 <maxno ofrlsets=""></maxno>			_	
>>>RL Set ID	М		9.2.2.39		_	
>ALL RL			NULL		_	
>ALL RLS			NULL	FDD only	_	
Dedicated Measurement Type	M		9.2.1.23		YES	reject
Measurement Filter Coefficient	0		9.2.1.41		YES	reject
Report Characteristics	M		9.2.1.51		YES	reject
CFN Reporting Indicator	M		FN Reporting Indicator 9.2.1.29B		YES	reject
CFN	0		9.2.1.7		YES	reject

Range Bound	Explanation
maxnoofRLs	Maximum number of individual RLs a measurement can be started on
maxnoofPUSCHs	Maximum number of PUSCHs per RL a measurement can be started on
maxnoofRLSets	Maximum number of individual RL Sets a measurement can be started
	on

9.1.53 DEDICATED MEASUREMENT INITIATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		-	
CRNC Communication Context ID	M		9.2.1.18		YES	ignore
Measurement ID	М		9.2.1.42		YES	ignore
CHOICE Dedicated Measurement Object Type	0			Dedicated Measurement Object Type the measurement was initiated with	YES	ignore
>RL or ALL RL					ı	
>>RL Information		1 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	М		9.2.1.53		_	
>>>DPCH ID	0		9.2.3.5	TDD only	ı	
>>>Dedicated Measurement Value	М		9.2.1.24		-	
>>>CFN	0		9.2.1.7	Dedicated Measurement Time Reference	-	
>>>PUSCH Information		0 <maxno ofPUSCHs ></maxno 		TDD only	GLOBAL	reject
>>>PUSCH ID	М		9.2.3.12		_	
>RLS or ALL RLS				FDD only	_	
>>RL Set Information		1 <maxno ofrlsets=""></maxno>			EACH	ignore
>>>RL Set ID	М		9.2.2.39		_	
>>>Dedicated Measurement Value	М		9.2.1.24		-	
>>>CFN	0		9.2.1.7	Dedicated Measurement Time Reference	-	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation
maxnoofRLs	Maximum number of individual RLs the measurement can be started on
maxnoofPUSCHs	Maximum number of PUSCHs per RL a measurement can be started on
maxnoofRLSets	Maximum number of individual RL Sets a measurement can be started
	on

9.1.54 DEDICATED MEASUREMENT INITIATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	М		9.2.1.18		YES	ignore
Measurement ID	M		9.2.1.42		YES	ignore
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.55 DEDICATED MEASUREMENT REPORT

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Measurement ID	M		9.2.1.42		YES	ignore
CHOICE Dedicated Measurement Object Type	М			Dedicated Measurement Object Type the measurement was initiated with	YES	ignore
>RL or ALL RL					_	
>>RL Information		1 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	М		9.2.1.53		_	
>>>DPCH ID	0		9.2.3.5	TDD only	_	
>>>Dedicated Measurement Value Information	М		9.2.1.24A		_	
>>>PUSCH Information		0 <maxno ofPUSCHs ></maxno 		TDD only	GLOBAL	reject
>>>>PUSCH ID	М		9.2.3.12		_	
>RLS or ALL RLS				FDD only	_	
>>RL Set Information		1 <maxno ofRLSets></maxno 			EACH	ignore
>>>RL Set ID	М		9.2.1.39		_	
>>>Dedicated Measurement Value Information	М		9.2.1.24A		_	

Range Bound	Explanation
maxnoofRLs	Maximum number of individual RLs the measurement can be started on
maxnoofPUSCHs	Maximum number of PUSCHs per RL a measurement can be started on
maxnoofRLSets	Maximum number of individual RL Sets a measurement can be started
	on

9.1.56 DEDICATED MEASUREMENT TERMINATION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall be used if this value was used when initiating the measurement. Otherwise, the reserved value "All NBCC" shall not be used.	YES	ignore
Measurement ID	М		9.2.1.42		YES	ignore

9.1.57 DEDICATED MEASUREMENT FAILURE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall be used if the Node B Communication Context ID was set to "All NBCC" when initiating the measurement. Otherwise, the reserved value "All CRNCCC" shall not be used.	YES	ignore
Measurement ID	М		9.2.1.42		YES	ignore
Cause	М		9.2.1.6		YES	ignore

9.1.58 RADIO LINK FAILURE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Reporting Object	M			Object for which the Failure shall be reported.	YES	ignore
>RL					_	
>>RL Information		1 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	М		9.2.1.53		_	
>>>Cause	М		9.2.1.6		_	
>RL Set				FDD only	_	
>>RL Set Information		1 <maxno ofRLSets></maxno 			EACH	ignore
>>>RL Set ID	М		9.2.2.39		_	
>>>Cause	М		9.2.1.6		_	
>CCTrCH				TDD only	_	
>>RL ID	М		9.2.1.53	_	_	
>>CCTrCH List		1 <maxno ofCCTrCH s></maxno 			EACH	ignore
>>>CCTrCH ID	М		9.2.3.3		_	
>>>Cause	М		9.2.1.6		_	

Range Bound	Explanation
maxnoofRLs	Maximum number of RLs for one UE
maxnoofRLSets	Maximum number of RL Sets for one UE
maxnoofCCTrCHs	Maximum number of CCTrCHs for a UE

9.1.59 RADIO LINK RESTORE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
CHOICE Reporting Object	М			Object for which the Restoration shall be reported.	YES	ignore
>RL				TDD only	_	
>>Radio Link Information		1 <maxno ofRLs></maxno 			EACH	ignore
>>>RL ID	М		9.2.1.53		_	
>RL Set				FDD only	_	
>>RL Set Information		1 <maxno ofRLSets></maxno 			EACH	ignore
>>>RL Set ID	М		9.2.2.39		_	
>CCTrCH				TDD only	_	
>>RL ID	M		9.2.1.53		_	
>>CCTrCH List		1 <maxno ofCCTrCH s></maxno 			EACH	ignore
>>>CCTrCH ID	М		CCTrCH ID 9.2.3.3		_	

Range Bound	Explanation
maxnoofRLs	Maximum number of RLs for one UE
maxnoofRLSets	Maximum number of RL Sets for one UE
maxnoofCCTrCHs	Maximum number of CCTrCHs for a UE

9.1.60 COMPRESSED MODE COMMAND [FDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
Active Pattern Sequence Information	M		9.2.2.A		YES	ignore

9.1.61 ERROR INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	0		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Node B Communication Context ID	0		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
Cause	0		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.62 PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST

9.1.62.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
SFN	0		9.2.1.53A		YES	reject
HS-PDSCH and HS-SCCH Total Power	0		Maximum Transmissio n Power 9.2.1.40	Maximum transmission power to be allowed for HS- PDSCH and HS-SCCH codes	YES	reject
HS-PDSCH and HS-SCCH Scrambling Code	0		DL Scrambling Code 9.2.2.13	Scrambling code on which HS-PDSCH and HS-SCCH is transmitted. 0= Primary scrambling code of the cell 115 = Secondary scrambling code	YES	reject
HS-PDSCH FDD Code Information		01	9.2.2.18F		YES	reject
HS-SCCH FDD Code Information		01	9.2.2.18G		YES	reject

9.1.62.2 TDD Message

IE/Group Name	Presence	Range	IE Type	Semantics	Criticality	Assigned
			and	Description		Criticality
			Reference			

Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
SFN	0		9.2.1.53A		YES	reject
PDSCH Sets To Add		0 <maxno ofPDSCH Sets></maxno 			GLOBAL	reject
>PDSCH Set ID	М		9.2.3.11		_	
>PDSCH To Add Information		01		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject
>>Repetition Period	М		9.2.3.16		_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD Physical Channel Offset	М		9.2.3.20		_	
>>DL Timeslot		1 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information		ofDLts>				
>>>Time Slot	М		9.2.3.23		_	
>>>Midamble Shift And Burst Type	М		9.2.3.7		_	
>>>TFCI Presence	М		9.2.1.57		_	
>>>DL Code Information		1 <maxno ofPDSCHs</maxno 			_	
>>>>PDSCH ID	М	>	9.2.3.10		_	
>>>TDD Channelisation Code	М		9.2.3.19		_	
>PDSCH To Add Information LCR		01		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	reject
>>Repetition Period	М		9.2.3.16	100.	_	
>>Repetition Length	М		9.2.3.15		_	
>>TDD Physical Channel Offset	М		9.2.3.20		_	
>>DL Timeslot		1 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information LCR		ofDLtsLCR >				
>>>Time Slot LCR	М		9.2.3.24A		_	
>>>Midamble Shift LCR	M		9.2.3.7A		_	
>>>TFCI Presence	M		9.2.1.57		_	
>>>DL Code Information LCR		1 <maxno ofPDSCHs ></maxno 			_	
>>>>PDSCH ID	М		9.2.3.10		_	
>>>>TDD Channelisation Code LCR	М		9.2.3.19a		-	
PDSCH Sets To Modify		0 <maxno of PDSCHSe</maxno 			GLOBAL	reject
>PDSCH Set ID	M	ts>	9.2.3.11		_	
>PDSCH Set ID >PDSCH To Modify Information	IVI	01	0.2.0.11	Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	reject

>>Repetition Period	0		9.2.3.16			
>>Repetition Length	0		9.2.3.15		_	
>>TDD Physical Channel	0		9.2.3.20		_	
Offset			0.2.0.20			
>>DL Timeslot Information		0 <maxno ofDLts></maxno 			_	
>>>Time Slot	M		9.2.3.23		_	
>>>Midamble Shift And	0		9.2.3.7		_	
Burst Type						
>>>TFCI Presence	0		9.2.1.57		_	
>>>DL Code		0 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information		ofPDSCHs >				
>>>PDSCH ID	M		9.2.3.10		_	
>>>TDD	M		9.2.3.19		_	
Channelisation Code						
>PDSCH To Modify		01		Mandatory for	YES	reject
Information LCR				1.28 Mcps TDD. Not Applicable to 3.84Mcps TDD.		
>>Repetition Period	0		9.2.3.16		_	
>>Repetition Length	0		9.2.3.15		_	
>>TDD Physical Channel Offset	0		9.2.3.20		_	
>>DL Timeslot Information LCR		0 <maxno ofDLtsLCR</maxno 			-	
information LCR		>				
>>>Time Slot LCR	М		9.2.3.24A		_	
>>>Midamble Shift LCR	0		9.2.3.7A		_	
>>>TFCI Presence	0		9.2.1.57		_	
>>>DL Code Information LCR		0 <maxno ofPDSCHs ></maxno 			-	
>>>>PDSCH ID	M		9.2.3.10	1	_	
>>>>TDD Channelisation Code LCR	М		9.2.3.19a		-	
PDSCH Sets To Delete		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
		of PDSCHSe ts>				
>PDSCH Set ID	M	107	9.2.3.11		_	
PUSCH Sets To Add		0 <maxno of PUSCHSe ts></maxno 			GLOBAL	reject
>PUSCH Set ID	M		9.2.3.13		_	
>PUSCH To Add		01		Mandatory for	YES	reject
Information				3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.		-
>>Repetition Period	М		9.2.3.16			
>>Repetition Length	М		9.2.3.15		_	
>>TDD Physical Channel	М		9.2.3.20		_	
Offset						
>>UL Timeslot		1 <maxno< td=""><td></td><td></td><td></td><td></td></maxno<>				
Information	1	ofULts>	0.0.0.0			
>>>Time Slot	M		9.2.3.23		_	

_	T		I = = -			
>>>Midamble Shift And	M		9.2.3.7		_	
Burst Type	M		9.2.1.57			
>>>TFCI Presence	IVI	1 <maxno< td=""><td>9.2.1.57</td><td></td><td>_</td><td></td></maxno<>	9.2.1.57		_	
>>>UL Code Information		ofPUSCHs			_	
information		>				
>>>PUSCH ID	M		9.2.3.12		_	
>>>TDD	M		9.2.3.19		_	
Channelisation Code						
>PUSCH To Add		01		Applicable to	YES	reject
Information LCR				1.28Mcps TDD only		
>>Repetition Period	M		9.2.3.16	Offig	_	
>>Repetition Length	M		9.2.3.15		_	
>>TDD Physical Channel	M		9.2.3.20		_	
Offset			0.2.0.20			
>>UL Timeslot		1 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information LCR		ofULtsLCR				
	 	>	0.0.5.11			
>>>Time Slot LCR	M		9.2.3.24A	ļ	_	
>>>Midamble Shift LCR	M		9.2.3.7A		-	
>>>TFCI Presence	M	4	9.2.1.57		_	
>>>UL Code		1 <maxno ofpuschs<="" td=""><td></td><td></td><td>_</td><td></td></maxno>			_	
Information LCR		LCR>				
>>>PUSCH ID	М		9.2.3.12		_	
>>>TDD	M		9.2.3.19a		-	
Channelisation Code						
LCR		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
PUSCH Sets To Modify		of			GLOBAL	reject
		PUSCHSe				
		ts>				
>PUSCH Set ID	M		9.2.3.13		_	
>PUSCH To Modify		01		Applicable to	YES	reject
Information				3.84Mcps TDD only		
>>Repetition Period	0		9.2.3.16	i only	_	
>>Repetition Length	0		9.2.3.15		_	
>>TDD Physical Channel	0		9.2.3.20		_	
Offset						
>>UL Timeslot		0 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information		ofULts>				
>>>Time Slot	М		9.2.3.23		_	
>>>Midamble Shift And	0		9.2.3.7		-	
Burst Type						
>>>TFCI Presence	0		9.2.1.57		_	·
>>>UL Code		0 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information		ofPUSCHs				
>>>>PUSCH ID	M	>	9.2.3.12		_	
>>>>TDD	M		9.2.3.19		_	
Channelisation Code			5.2.5.15			
>PUSCH To Modify		01		Applicable to	YES	reject
Information LCR				1.28Mcps TDD	. = 2	-,
				only		
>>Repetition Period	0		9.2.3.16		_	
>>Repetition Length	0		9.2.3.15		_	
>>TDD Physical Channel	0		9.2.3.20		_	
Offset		ĺ	1			

			ı	T & 11 11 1	1	
>>UL Timeslot Information LCR		0 <maxno ofultslcr<="" td=""><td></td><td>Applicable to 1.28Mcps TDD</td><td>-</td><td></td></maxno>		Applicable to 1.28Mcps TDD	-	
imormation LCR		>		only		
>>>Time Slot LCR	М		9.2.3.24A		_	
>>>Midamble Shift LCR	0		9.2.3.7A			
>>>TFCI Presence	0		9.2.1.57		-	
>>>UL Code		0 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Information LCR		ofPUSCHs LCR>				
>>>>PUSCH ID	М		9.2.3.12		_	
>>>>TDD	M		9.2.3.19a		_	
Channelisation Code LCR						
PUSCH Sets To Delete		0 <maxno ofPUSCH Sets></maxno 			GLOBAL	reject
>PUSCH Set ID	M		9.2.3.13		-	
HS-PDSCH TDD		01			GLOBAL	reject
Information						
>DL Timeslot Information		0 <maxno ofDLts></maxno 		Applicable to 3.84Mcps TDD only	_	
>>Time Slot	М		9.2.3.23		_	
>>Midamble Shift And Burst Type	М		9.2.3.7		_	
>DL Timeslot Information		0 <maxno< td=""><td></td><td>Applicable to</td><td>GLOBAL</td><td>reject</td></maxno<>		Applicable to	GLOBAL	reject
LCR		ofDLtsLCR >		1.28Mcps TDD only		•
>>Time Slot LCR	M		9.2.3.24a		_	
>>Midamble Shift LCR	М		9.2.3.7A		-	
Add to HS-SCCH Resource Pool		01			GLOBAL	reject
>HS-SCCH Information		0 <maxno ofHSSCC Hs></maxno 		Applicable to 3.84Mcps TDD only	-	
>>HS-SCCH ID	М		9.2.3.5Ga		_	
>>Time Slot	M		9.2.3.23		ı	
>>Midamble Shift And Burst Type	М		9.2.3.7		_	
>>TDD Channelisation Code	М		9.2.3.19		-	
>>Maximum HS-SCCH Power	М		DL Power 9.2.1.21		_	
>>HS-SICH Information		1			_	
>>>Time Slot	M		9.2.3.23		_	
>>>Midamble Shift And	М		9.2.3.7		-	
Burst Type >>>TDD Channelisation Code	M		9.2.3.19		_	
>HS-SCCH Information LCR		0 <maxno ofHSSCC Hs></maxno 		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>>HS-SCCH ID	М		9.2.3.5Ga	-	-	
>>Time Slot LCR	M		9.2.3.24a		_	
>>Midamble Shift LCR	М		9.2.3.7A		_	
>>TDD Channelisation	М		9.2.3.19a		-	
Code LCR						

>>HS-SICH Information LCR		1			_	
>>>Time Slot LCR	М		9.2.3.24a		_	
>>>Midamble Shift LCR	М		9.2.3.7A		_	
>>>TDD Channelisation	М		9.2.3.19a		_	
Code LCR						
Modify HS-SCCH Resource		01			GLOBAL	reject
Pool						•
>HS-SCCH Information		0 <maxno ofHSSCC Hs></maxno 		Applicable to 3.84Mcps TDD only	-	
>>HS-SCCH ID	M		9.2.3.5Ga		_	
>>Time Slot	0		9.2.3.23		_	
>>Midamble Shift And	0		9.2.3.7		-	
Burst Type	0		9.2.3.19			
>>TDD Channelisation Code					_	
>>Maximum HS-SCCH Power	0		DL Power 9.2.1.21		_	
>>HS-SICH Information		01			_	
>>>Time Slot	0		9.2.3.23		_	
>>>Midamble Shift And	0		9.2.3.7		_	
Burst Type			0.2.0			
>>>TDD Channelisation Code	0		9.2.3.19		_	
>HS-SCCH Information LCR		0 <maxno ofHSSCC Hs></maxno 		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>>HS-SCCH ID	M		9.2.3.5Ga		_	
>>Time Slot LCR	0		9.2.3.24a		_	
>>Midamble Shift LCR	0		9.2.3.7A		_	
>>TDD Channelisation Code LCR	0		9.2.3.19a		_	
>>Maximum HS-SCCH Power	0		DL Power 9.2.1.21		-	
>>HS-SICH Information		01			_	
LCR						
>>>Time Slot LCR	0		9.2.3.24a		_	
>>Midamble Shift LCR	0		9.2.3.7A		_	
>>>TDD Channelisation	0		9.2.3.19a		_	
Code LCR						
Delete from HS-SCCH		0 <maxno< td=""><td></td><td></td><td>GLOBAL</td><td>reject</td></maxno<>			GLOBAL	reject
Resource Pool		of HSSCCHs >				
>HS-SCCH ID	M		9.2.3.5Ga		_	
7110 000111D	1		_ ========	1		

Range Bound	Explanation
maxnoofPDSCHSets	Maximum number of PDSCH Sets in a cell.
maxnoofPDSCHs	Maximum number of PDSCH in a cell.
maxnoofPUSCHSets	Maximum number of PUSCH Sets in a cell.
maxnoofPUSCHs	Maximum number of PUSCH in a cell.
maxnoofDLts	Maximum number of Downlink time slots in a cell for 3.84Mcps TDD.
maxnoofULts	Maximum number of Uplink time slots in a cell for 3.84Mcps TDD.
maxnoofULtsLCR	Maximum number of Uplink time slots in a cell for 1.28Mcps TDD
maxnoofHSSCCHs	Maximum number of HS-SCCHs in a Cell

9.1.63 PHYSICAL SHARED CHANNEL RECONFIGURATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.64 PHYSICAL SHARED CHANNEL RECONFIGURATION FAILURE

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference			
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CHOICE Cause Level	М				YES	ignore
>General					_	
>>Cause	M		9.2.1.6		_	
>Set Specific				TDD Only	_	
>>Unsuccessful DL Shared Channel Set		0 <maxno ofPDSCH Sets></maxno 			EACH	ignore
>>>PDSCH Set ID	M		9.2.3.13		_	
>>>Cause	M		9.2.1.6		_	
>>Unsuccessful UL Shared Channel Set		0 <maxno ofPUSCH Sets></maxno 			EACH	ignore
>>>PUSCH Set ID	М		9.2.3.13		_	
>>>Cause	М		9.2.1.6		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation
maxnoofPDSCHSets	Maximum number of PDSCH Sets in a cell
maxnoofPUSCHSets	Maximum number of PUSCH Sets in a cell

9.1.65 RESET REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	

CHOICE Reset Indicator	М			YES	ignore
>Communication Context					
>>Communication Context Information		1 <maxco mmunicati onContext ></maxco 		EACH	reject
>>>CHOICE Communication Context Type	M			_	
>>>CRNC Communication Context				_	
>>>>CRNC Communication Context ID	M		9.2.1.18	_	
>>>Node B Communication Context				_	
>>>>Node B Communication Context ID	M		9.2.1.48	_	
>Communication Control Port				_	
>>Communication Control Port Information		1 <maxc CPinNode B></maxc 		EACH	reject
>>>Communication Control Port ID	М		9.2.1.15	_	
>Node B			NULL	 _	

Range Bound	Explanation
maxCommunicationContext	Maximum number of Communication Contexts that can exist in the Node B
maxCCPinNodeB	Maximum number of Communication Control Ports that can exist in the Node B

9.1.66 RESET RESPONSE

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference	•		
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.67 DL POWER TIMESLOT CONTROL REQUEST [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		-	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Node B Communication Context ID	M		9.2.1.48	The reserved value "All NBCC" shall not be used.	YES	ignore
DL Time Slot ISCP Info	0		9.2.3.4F	Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	YES	ignore
DL Time Slot ISCP Info LCR	0		9.2.3.40A	Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	ignore
Primary CCPCH RSCP	0		9.2.3.11A		YES	ignore

9.1.68 RADIO LINK PREEMPTION REQUIRED INDICATION

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
			Reference			
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication	M		9.2.1.18		YES	ignore
Context ID						
RL Information		0 <maxno< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxno<>			EACH	ignore
		ofRLs>				
>RL ID	M		9.2.1.53		_	

Range Bound	Explanation
maxnoofRLs	Maximum number of radio links for one UE

9.1.69 INFORMATION EXCHANGE INITIATION REQUEST

IE/Group Name	Presence	Range	IE Type	Semantics	Criticality	Assigned
			and Reference	Description		Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Information Exchange ID	M		9.2.1.36C		YES	reject
CHOICE Information Exchange Object Type	М				YES	reject
>Cell					_	
>>C-ID	M		9.2.1.9		_	
Information Type	M		9.2.1.36D		YES	reject
Information Report Characteristics	М		9.2.1.36B		YES	reject

9.1.70 INFORMATION EXCHANGE INITIATION RESPONSE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Information Exchange ID	M		9.2.1.36C		YES	ignore
CHOICE Information Exchange Object Type	0				YES	ignore
>Cell					_	
>>Requested Data Value	M		9.2.1.51A		_	
Criticality Diagnostics	0	•	9.2.1.17		YES	ignore

9.1.71 INFORMATION EXCHANGE INITIATION FAILURE

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Information Exchange ID	M		9.2.1.36C		YES	ignore
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.72 INFORMATION REPORT

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Information Exchange ID	M		9.2.1.36C		YES	ignore
CHOICE Information Exchange Object Type	М				YES	ignore
>Cell					_	
>>Requested Data Value Information	М		9.2.1.51B		_	

9.1.73 INFORMATION EXCHANGE TERMINATION REQUEST

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		-	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		-	
Information Exchange ID	M		9.2.1.36C		YES	ignore

9.1.74 INFORMATION EXCHANGE FAILURE INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
Information Exchange ID	M		9.2.1.36C		YES	ignore
Cause	М		9.2.1.6		YES	ignore

9.1.75 CELL SYNCHRONISATION INITIATION REQUEST [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
C-ID	М		9.2.1.9		YES	reject
Cell Sync Burst Repetition Period	M		9.2.3.4J		YES	reject
Time Slot Information		015		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	GLOBAL	reject
>Time Slot	M		9.2.3.23		_	
Cell Sync Burst Transmission Initiation Information		01		Applicable to 3.84Mcps TDD only	GLOBAL	reject
>CSB Transmission ID	М		9.2.3.4N		_	
>SFN	М		9.2.1.53A		_	
>Cell Sync Burst Code	М		9.2.3.4G		_	
>Cell Sync Burst Code Shift	М		9.2.3.4H		_	
>Initial DL Transmission Power	М		DL Power 9.2.1.21		_	
Cell Sync Burst Measurement Initiation Information		01		Applicable to 3.84Mcps TDD only	GLOBAL	reject
>CSB Measurement ID	M		9.2.3.41		_	
>Cell Sync Burst Code	M		9.2.3.4G		_	
>Cell Sync Burst Code Shift	М		9.2.3.4H		_	
>Synchronisation Report Type	M		9.2.3.18 ^E		_	
>SFN	0		9.2.1.53A		_	
>Synchronisation Report Characteristics	М		9.2.3.18D		-	
SYNC_DL Code Transmission Initiation Information LCR		01		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>CSB Transmission ID	М		9.2.3.4N		_	
>SFN	М		9.2.1.53A		_	
>UARFCN	М		9.2.1.65		_	
>SYNC_DL Code ID	М		9.2.3.18B		_	
>DwPCH Power	М		9.2.3.5B		_	
SYNC_DL Code Measurement Initiation Information LCR		01		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>CSB Measurement ID	M		9.2.3.41	Office	_	

>SFN	0	9.2.1.53A	_	
>UARFCN	M	9.2.1.65	_	
>SYNC_DL Code ID	М	9.2.3.18B	_	
>Synchronisation Report Type	M	9.2.3.18E	_	
>Synchronisation Report Characteristics	M	9.2.3.18D	_	

9.1.76 CELL SYNCHRONISATION INITIATION RESPONSE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.77 CELL SYNCHRONISATION INITIATION FAILURE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.78 CELL SYNCHRONISATION RECONFIGURATION REQUEST [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
C-ID	M		9.2.1.9		YES	reject
Time Slot	M		9.2.3.23	Applicable to 3.84Mcps TDD only. For 1.28Mcps TDD, the CRNC should set this to 0 and the Node B shall ignore it	YES	reject
Number Of Cycles Per SFN Period	M		9.2.3.7B		YES	reject
Number Of Repetitions Per Cycle Period	M		9.2.3.7C		YES	reject
Cell Sync Burst Transmission Reconfiguration Information		0 <maxno ofCellSync Bursts></maxno 		Applicable to 3.84Mcps TDD only	GLOBAL	reject
>CSB Transmission ID	М		9.2.3.4N		_	
>Sync Frame Number To Transmit	М		Sync Frame Number 9.2.3.18C		_	
>Cell Sync Burst Code	0		9.2.3.4G		_	
>Cell Sync Burst Code Shift	0		9.2.3.4H		_	
>DL Transmission Power	0		DL Power 9.2.1.21		_	
Cell Sync Burst Measurement Reconfiguration Information		01	0.22	Applicable to 3.84Mcps TDD only	YES	reject
>Cell Sync Burst Measurement Information		1 <maxno ofCellSync Bursts></maxno 			GLOBAL	reject
>>Sync Frame Number To Receive	M		Sync Frame Number 9.2.3.18C		-	
>>Cell Sync Burst Information		1 <maxno ofreceptio nsperSync Frame></maxno 			_	
>>>CSB Measurement ID	М		9.2.3.41		_	
>>>Cell Sync Burst Code	М		9.2.3.4G		_	
>>>Cell Sync Burst Code Shift	М		9.2.3.4H		_	
>Synchronisation Report Type	0		9.2.3.18E		YES	reject
>Synchronisation Report Characteristics	0		9.2.3.18D		YES	reject
Number Of Subcycles Per Cycle Period	0		9.2.3.7D	Applicable to 1.28Mcps TDD only	YES	reject

SYNC_DL Code Transmission Reconfiguration Information LCR		0 <maxno ofSyncFra mesLCR></maxno 		Applicable to 1.28Mcps TDD only	GLOBAL	reject
>CSB Transmission ID	M		9.2.3.4N		_	
>Sync Frame Number For Transmission	М		Sync Frame Number 9.2.3.18C		_	
>UARFCN	M		9.2.1.65		_	
>SYNC_DL Code ID	0		9.2.3.18B		_	
>DwPCH Power	0		9.2.3.5B		-	
SYNC_DL Code Measurement Reconfiguration Information LCR		01		Applicable to 1.28Mcps TDD only	YES	reject
>SYNC_DL Code Measurement Information LCR		1 <maxno ofSyncDL CodesLCR ></maxno 			GLOBAL	reject
>>Sync Frame Number To Receive	M		Sync Frame Number 9.2.3.18C		_	
>>Sync_DLCode Information LCR		1 <maxno ofreceptio nsperSync FrameLCR</maxno 			-	
>>>CSB Measurement	М		9.2.3.41		-	
>>>SYNC_DL Code ID	M		9.2.3.18B		_	
>>>UARFCN	М		9.2.1.65		_	
>>>Propagation Delay Compensation	0		Timing Adjustment Value 9.2.3.22a		_	
>Synchronisation Report Type	0		9.2.3.18E		YES	reject
>Synchronisation Report Characteristics	0		9.2.3.18D		YES	reject

Range Bound	Explanation
maxnoofCellSyncBursts	Maximum number of cell synchronisation bursts per cycle for 3.84Mcps
	TDD
maxnoofreceptionsperSyncFrame	Maximum number of cell synchronisation burst receptions per Sync
	Frame for 3.84Mcps TDD
maxnoofSyncFramesLCR	Maximum number of Sync Frames per subcycle for 1.28Mcps TDD
maxnoofreceptionsperSyncFrameLCR	Maximum number of SYNC_DL Code ID receptions per Sync Frame for
	1.28Mcps TDD

9.1.79 CELL SYNCHRONISATION RECONFIGURATION RESPONSE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.80 CELL SYNCHRONISATION RECONFIGURATION FAILURE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	-
Cause	M		9.2.1.6		YES	ignore
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.81 CELL SYNCHRONISATION REPORT [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	ignore
Transaction ID	М		9.2.1.62		_	
Cell Synchronisation Information		0 <maxce IlinNodeB></maxce 		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.	EACH	ignore
>C-ID	М		9.2.1.9		YES	ignore
>CHOICE Synchronisation Report Type					YES	ignore
>>Initial Phase or Steady- State Phase					_	
>>>Cell Sync Burst Measured Information		1 <maxno ofCellSync Bursts></maxno 			_	
>>>SFN	М		9.2.1.53A		_	
>>>>Cell Sync Burst Information		1 <maxno ofreceptio nsperSync Frame></maxno 			_	
>>>>CHOICE Cell Sync Burst Availability Indicator	M				_	
>>>>Cell Sync Burst Available					_	
>>>>>Cell Sync Burst Timing	M		9.2.3.4L		_	
>>>>>Cell Sync Burst SIR	М		9.2.3.4K		_	
>>>>Cell Sync Burst Not Available			NULL		_	
>>>Accumulated Clock Update	0		Timing Adjustment Value 9.2.3.22a		_	
>>>SYNC_DL Codes Measured Information		0 <maxno ofSyncFra mesLCR></maxno 		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.	YES	ignore
>>>SFN	М		9.2.1.53A		_	
>>>>SYNC_DL Code Information		1 <maxno ofreceptio nsperSync</maxno 			_	

		FrameLCR			
		>			
>>>>CHOICE SYNC_DL Code Availability Indicator	M			_	
>>>>SYNC_DL Code Available				_	
>>>>SYNC_ DL Code ID Timing	M		Cell Sync Burst Timing 9.2.3.4L	_	
>>>>SYNC_ DL Code ID SIR	М		Cell Sync Burst SIR 9.2.3.4K	_	
>>>>SYNC_DL Code Not Available			NULL	_	
>>Late-Entrant Cell			NULL	_	
>>Frequency Acquisition			NULL	_	

Range Bound	Explanation
maxCellinNodeB	Maximum number of Cells in a Node B
maxnoofCellSyncBursts	Maximum number of cell synchronisation bursts per cycle for 3.84Mcps TDD
maxnoofreceptionsperSyncFrame	Maximum number of cell synchronisation burst receptions per Sync Frame for 3.84Mcps TDD
maxnoofSyncFramesLCR	Maximum number of SYNC Frames per measurement reporting period for 1.28Mcps TDD
maxnoofreceptionsperSyncFrameLCR	Maximum number of SYNC_DL Code ID receptions per Sync Frame for 1.28Mcps TDD

9.1.82 CELL SYNCHRONISATION TERMINATION REQUEST [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
C-ID	M		9.2.1.9		YES	ignore
CSB Transmission ID	0		9.2.3.4N		YES	ignore
CSB Measurement ID	0	•	9.2.3.41		YES	ignore

9.1.83 CELL SYNCHRONISATION FAILURE INDICATION [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
C-ID	M		9.2.1.9		YES	ignore
CSB Transmission ID	0		9.2.3.4N		YES	ignore
CSB Measurement ID	0		9.2.3.41		YES	ignore
Cause	M		9.2.1.6		YES	ignore

9.1.84 CELL SYNCHRONISATION ADJUSTMENT REQUEST [TDD]

IE/Group Name Presence	Range	IE Type	Semantics	Criticality	Assigned
------------------------	-------	---------	-----------	-------------	----------

			and	Description		Criticality
			Reference			
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Cell Adjustment Information		1 <maxce IlinNodeB></maxce 			EACH	ignore
>C-ID	М		9.2.1.9		_	
>Frame Adjustment Value	0		9.2.3.5C		-	
>Timing Adjustment Value	0		9.2.3.22a		-	
>DL Transmission Power	0		9.2.1.21	3.84Mcps TDD only	-	
>SFN	0		9.2.1.53A		-	
>DwPCH Power	0		9.2.3.5B	Applicable to 1.28Mcps TDD only	YES	ignore

Range Bound	Explanation
maxCellinNodeB	Maximum number of Cells in a Node B

9.1.85 CELL SYNCHRONISATION ADJUSTMENT RESPONSE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

9.1.86 CELL SYNCHRONISATION ADJUSTMENT FAILURE [TDD]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	M		9.2.1.62		_	
CHOICE Cause Level	M				YES	ignore
>General					_	
>>Cause	M		9.2.1.6		_	
>Cell Specific					_	
>>Unsuccessful Cell Information Response		1 <maxce IlinNodeB></maxce 			EACH	ignore
>>>C-ID	M		9.2.1.9		_	
>>>Cause	M		9.2.1.6		_	
Criticality Diagnostics	0		9.2.1.17		YES	ignore

Range Bound	Explanation
maxCellinNodeB	Maximum number of Cells in a Node B

9.1.87 BEARER REARRANGEMENT INDICATION

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	ignore
Transaction ID	M		9.2.1.62		_	
CRNC Communication Context ID	M		9.2.1.18	The reserved value "All CRNCCC" shall not be used.	YES	ignore
Signalling Bearer Request	0		9.2.1.55A		YES	ignore
Indicator						
DCHs To Re-arrange		0 <maxno ofDCHs></maxno 			GLOBAL	ignore
>DCH ID	M		9.2.1.20		_	
DSCHs To Re-arrange		0 <maxno ofDSCHs></maxno 			GLOBAL	ignore
>DSCH ID	M		9.2.1.27		_	
USCHs to Re-arrange		0 <maxno ofUSCHs></maxno 		TDD only	GLOBAL	ignore
>USCH ID	M		9.2.3.27		_	
HS-DSCHs MAC-d Flow To Re-arrange		0 <maxno ofMACdFl ows></maxno 			GLOBAL	ignore
>HS-DSCH MAC-d Flow ID	M		9.2.1.311		_	
TFCI2 Bearer Request Indicator	0		9.2.1.56C	FDD only	YES	ignore

Range bound	Explanation
maxnoofDCHs	Maximum number of DCHs for a UE
maxnoofDSCHs	Maximum number of DSCHs for a UE
maxnoofUSCHs	Maximum number of USCHs for a UE
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows

9.1.88 RADIO LINK ACTIVATION COMMAND

9.1.88.1 FDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	M		9.2.1.45		_	
Message Type	M		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		-	
Node B Communication Context ID	М		9.2.1.48		YES	reject
Delayed Activation Information		1 <maxno ofRLs></maxno 			EACH	reject
>RL ID	М		9.2.1.53		_	
>Delayed Activation Update	М		9.2.1.24D		_	

9.1.88.2 TDD Message

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Discriminator	М		9.2.1.45		_	
Message Type	М		9.2.1.46		YES	reject
Transaction ID	М		9.2.1.62		_	
Node B Communication Context ID	М		9.2.1.48		YES	reject
Delayed Activation Information		1 <maxno ofRLs></maxno 			EACH	reject
>RL ID	М		9.2.1.53		_	
>Delayed Activation Update	М		9.2.1.24D		_	

9.2 Information Element Functional Definition and Contents

9.2.0 General

Subclause 9.2 presents the NBAP IE definitions in tabular format. The corresponding ASN.1 definition is presented in Subclause 9.3. In case there is a contradiction between the tabular format in Subclause 9.2 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

When specifying information elements which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information;

9.2.1 Common parameters

9.2.1.1 Add/Delete Indicator

The add/delete indicator shall notify the CRNC whether the associated resource has been added to or removed from the Node B.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Add/Delete Indicator			ENUMERATED (
			Add,	
			Delete)	

9.2.1.1A Allocation/Retention Priority

This parameter indicates the priority level in the allocation and retention of Node B internal resources. See Annex A.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Priority Level	М		INTEGER (015)	This IE indicates the priority of the request. Usage: Value "0" means "Spare"; It shall be treated as a logical error if received. Values between "1" and "14" are ordered in decreasing order of priority, "1" being the highest and "14" the lowest. Value "15" means "No Priority".
Pre-emption Capability	M		ENUMERATED (shall not trigger pre- emption, may trigger pre- emption)	
Pre-emption Vulnerability	M		ENUMERATED (not pre-emtable, pre-emtable)	

9.2.1.2 Availability Status

The availability status is used to indicate more detailed information of the availability of the resource. In accordance with ref. [6], following values are defined. If the value of this attribute is an empty set, this implies that none of the status conditions described in ref. [6] are present.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
Availability Status			Reference ENUMERATED (empty, in test, failed, power off, off line, off duty, dependency, degraded, not installed, log full,)	

9.2.1.3 BCCH Modification Time

Indicates the time after which the new system information shall be applied on BCCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
BCCH Modification Time			INTEGER (0511)	All SFN values in which MIB may be mapped are allowed. The tabular description is presented in [18].

9.2.1.4 Binding ID

The Binding ID is the identifier of a user data stream.

In case of transport bearer establishment with ALCAP [2][31], this IE contains the identifier that is allocated at the Node B and that is unique for each transport bearer under establishment to/from the Node B.

If the Transport Layer Address contains an IP address [29], this IE contains the UDP port [30] intended to be used for the user plane transport.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Binding ID			OCTET STRING	If the Binding ID includes an
			(14,)	UDP port, the UDP port is
				included in octets 1 and 2. The
				first octet of the UDP port field
				shall be included in the first
				octet of the Binding ID.

9.2.1.4A BLER

This Block Error Rate defines the target radio interface Transport Block Error Rate of the transport channel. BLER is used by the Node B to determine the needed SIR targets, for admission control and power management reasons.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
BLER			INTEGER (-630)	Range: -6.3 0 Step: 0.1 It is the Log10 of the BLER

9.2.1.5 Blocking Priority Indicator

The Blocking priority indicator shall indicate the immediacy with which a resource should be blocked from use. The following priority classes shall be supported in the Blocking priority indicator.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Blocking Priority Indicator			ENUMERATED ("High" priority: Block resource
			High,	immediately.
			Normal,	"Normal" priority: Block
			Low,	resource when idle or upon
)	timer expiry.
				"Low" priority: Block resource
				when idle.

9.2.1.5A Burst Mode Parameters

The Burst Mode Parameters IE provides information to be applied for IPDL burst mode.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Burst Start	М		INTEGER (015)	See [10] and [21]
Burst Length	М		INTEGER (1025)	See [10] and [21]
Burst Freq	М		INTEGER (116)	See [10] and [21]

9.2.1.6 Cause

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group				
>Radio Network Layer				
>>Radio Network Layer	M		ENUMERATED (
Cause			unknown C-ID,	
			Cell not available,	
			Power level not supported,	
			DL radio resources not	
			available,	
			UL radio resources not	
			available,	
			RL Already	
			Activated/allocated,	
			Node B Resources	
			Unavailable,	
			Measurement not supported	
			for the object,	
			Combining Resources not	
			available,	
			Requested configuration not	
			supported,	
			Synchronization failure,	
			Priority transport channel established,	
			SIB Origination in Node B not	
			Supported, Requested Tx Diversity Mode	
			not supported,	
			Unspecified,	
			BCCH scheduling error,	
			Measurement Temporarily not	
			Available,	
			Invalid CM Setting,	
			Reconfiguration CFN not	
			elapsed,	
			Number of DL codes not	
			supported,	
			S-CPICH not supported,	
			Combining not supported,	
			UL SF not supported,	
			DL SF not supported,	
			Common Transport Channel	
			Type not supported,	
			Dedicated Transport Channel	
			Type not supported,	
			Downlink Shared Channel	
			Type not supported,	
			Uplink Shared Channel Type	
			not supported,	
			CM not supported,	
			Tx diversity no longer	
			supported,	
			Unknown Local Cell ID,	
			Newska a at III	
			Number of UL codes not	
			supported,	
			Information temporarily not	
			available,	
			Information Provision not	
			supported for the object,	
			Cell Synchronisation not	
			supported,	
			Cell Synchronisation Adjustment not supported,	
			DPC Mode Change not	
			Supported,	

		T	
		IPDL already activated, IPDL not supported, IPDL parameters not available, Frequency Acquisition not supported, Power Balancing status not compatible, Requested type of Bearer Re- arrangement not supported, Signalling Bearer Re- arrangement not supported, Bearer Re-arrangement needed, Delayed Activation not Supported, RL Timing Adjustment not supported)	
>Transport Layer			
>>Transport Layer Cause	М	ENUMERATED (Transport resource unavailable, Unspecified,)	
>Protocol			
>>Protocol Cause		ENUMERATED (Transfer syntax error, Abstract syntax error (reject), Abstract syntax error (ignore and notify), Message not compatible with receiver state, Semantic error, Unspecified, Abstract syntax error (falsely constructed message),)	
>Misc			
>>Miscellaneous Cause	М	ENUMERATED (Control processing overload Hardware failure, O&M intervention, Not enough user plane processing resources, Unspecified,)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
BCCH scheduling error	The Node B has detected an illegal BCCH schedule update (see
	subclause 8.2.16.3).
Bearer Re-arrangement needed	The Node B cannot perform the requested Radio Link Reconfiguration
	without bearer re-arrangement.

Cell not Available	The concerned cell or local cell is not available.
Cell Synchronisation not supported	The concerned cell of focus cell is not a valuable. The concerned cell(s) do not support Cell Synchronisation.
Combining not supported	The Node B does not support RL combining for the concernedcells.
Combining Resources Not Available	The value of the received <i>Diversity Control Field</i> IE was set to "Must",
	but the Node B cannot perform the requested combining.
CM not supported	The concerned cell(s) do not support Compressed Mode.
Common Transport Channel Type not	The concerned cell(s) do not support the RACH and/or FACH and/or
supported	CPCH Common Transport Channel Type.
Dedicated Transport Channel Type not	The concerned cell(s) do not support the Dedicated Transport Channel
supported	Type.
Delayed Activation not Supported	The concerned cell(s) do not support delayed activation of RLs.
DL Radio Resources not Available	The Node B does not have sufficient DL radio resources available.
DL SF not supported DL Shared Channel Type not	The concerned cell(s) do not support the requested DL SF. The concerned cell(s) do not support the Downlink Shared Channel
supported	Type.
DPC Mode Change not Supported	The concerned cells do not support DPC mode changes.
Frequency Acquisition not supported	The concerned cell(s) do not support Frequency Acquisition.
Information Provision not supported	The requested information provision is not supported for the concerned
for the object	object types.
Information temporarily not available	The requested information can temporarily not be provided.
Invalid CM Settings	The concerned cell(s) consider the requested Compressed Mode settings
	invalid.
IPDL already activated	The concerned cell(s) have already active IPDL ongoing.
IPDL not supported	The concerned cell(s) do not support the IPDL.
IPDL parameters not available	The concerned cell(s) do not have IPDL parameters defining IPDL to be
	applied.
Measurement not Supported For The	At least one of the concerned cell(s) does not support the requested
Object	measurement on the concerned object type.
Measurement Temporarily not	The Node B can temporarily not provide the requested measurement
Available Node B resources unavailable	value. The Node B does not have sufficient resources available.
Number of DL codes not supported	The concerned cell(s) do not support the requested number of DL codes.
Number of UL codes not supported	The concerned cell(s) do not support the requested number of UL codes.
Power Level not Supported	A DL power level was requested which the concerned cell(s) do not
Tower Bever not supported	support.
Power Balancing status not compatible	The power balancing status in the SRNC is not compatible with that of the Node B.
Priority transport channel established	The CRNC cannot perform the requested blocking since a transport channel with a high priority is present.
RL Timing Adjustment not Supported	The concerned cell(s) do not support adjustments of the RL timing.
Reconfiguration CFN not elapsed	The requested action cannot be performed due to that a RADIO LINK
	RECONFIGURATION COMMIT message was received previously,
	but the concerned CFN has not yet elapsed.
Requested Configuration not	The concerned cell(s) do not support the requested configuration i.e.
Supported	power levels, Transport Formats, physical channel parameters.
Requested Type of Bearer Re-	The Node B does not support the requested type of bearer re-
arrangement not supported Paguested Tv Diversity mode not	The concerned call(c) do not support the requested transmit diversity
Requested Tx Diversity mode not supported	The concerned cell(s) do not support the requested transmit diversity mode.
RL already Activated/ allocated	The Node B has already allocated an RL with the requested RL-id for
anoual retracta anotated	this UE context.
S-CPICH not supported	The concerned cell(s) do not support S-CPICH.
SIB Orgination in Node B not	The Node B does not support the origination of the requested SIB for
Supported Supported	the concerned cell.
Signalling Bearer Re-arrangement not	The Node B does not support the Signalling bearer re-arrangement.
supported	
Synchronisation Failure	Loss of UL Uu synchronisation.
Cell Synchronisation Adjustment not	The concerned cell(s) do not support Cell Synchronisation Adjustment.
supported	

Tx diversity no longer supported	Tx diversity can no longer be supported in the concerned cell.
UL Radio Resources not Available	The Node B does not have sufficient UL radio resources available.
UL SF not supported	The concerned cell(s) do not support the requested minimum UL SF.
UL Shared Channel Type not	The concerned cell(s) do not support the Uplink Shared Channel Type.
supported	
Unknown C-ID	The Node B is not aware of a cell with the provided C-ID.
Unknown Local Cell ID	The Node B is not aware of a local cell with the provided Local Cell ID
Unspecified	Sent when none of the above cause values applies but still the cause is
	Radio Network layer related.

Transport Network Layer cause	Meaning		
Transport resource unavailable	The required transport resources are not available.		
Unspecified	Sent when none of the above cause values applies but still the cause is		
	Transport Network layer related.		

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the
	concerned criticality indicated "reject" (see subclause 10.3).
Abstract Syntax Error (Ignore and	The received message included an abstract syntax error and the
Notify)	concerned criticality indicated "ignore and notify" (see subclause 10.3).
Abstract syntax error (falsely	The received message contained IEs in wrong order or with too many
constructed message)	occurrences (see subclause 10.3).
Message not Compatible with	The received message was not compatible with the receiver state (see
Receiver State	subclause 10.4).
Semantic Error	The received message included a semantic error (see subclause 10.4).
Transfer Syntax Error	The received message included a transfer syntax error (see subclause
	10.2).
Unspecified	Sent when none of the above cause values applies but still the cause is
	protocol related.

Miscellaneous cause	Meaning
Control Processing Overload	Node B control processing overload.
Hardware Failure	Node B hardware failure.
Not enough User Plane Processing	Node B has insufficient user plane processing resources available.
Resources	
O&M Intervention	Operation and Maintenance intervention related to Node B equipment.
Unspecified	Sent when none of the above cause values applies and the cause is not
	related to any of the categories Radio Network Layer, Transport
	Network Layer or Protocol.

9.2.1.7 CFN

Connection Frame Number for the radio connection, see ref. [17].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CFN			INTEGER (0255)	

9.2.1.8 CFN Offset

Void.

9.2.1.9 C-ID

The C-ID (Cell identifier) is the identifier of a cell in one RNC.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
C-ID			INTEGER (065535)	

9.2.1.9A Common Channels Capacity Consumption Law

The capacity consumption law indicates to the CRNC how the Capacity Credit is consumed by NBAP set of procedures, depending on the allocated Spreading Factor. [FDD - For the PRACH, the reference spreading factor shall be the minimum possible spreading factor amongst the ones defined by the *RACH Slot Format* IE(s) in the Common Transport Channel Setup or Reconfiguration procedures. For the PCPCH, the reference spreading factor shall be the minimum spreading factor computed from the TFCS as described in [8].]

This capacity consumption law indicates the consumption law to be used with the following procedures:

- Common Transport Channel Setup
- Common Transport Channel Deletion
- [FDD Common Transport Channel Reconfiguration]

For the Common Transport Channel Setup procedure, the cost given in the consumption law shall be debited from the Capacity Credit, whereas it shall be credited to the Capacity Credit for the Common Transport Channel Deletion one.

[FDD - For the Common Transport Channel Reconfiguration procedure, the difference of the consumption cost for the new spreading factor and the consumption cost for the old spreading factor shall be debited from the Capacity Credit (or credited if this difference is negative).]

If the modelling of the internal resource capability of the Node B is modelled independently for the Uplink and Downlink, the "DL cost" shall be applied to the "DL or Global Capacity Credit" and the "UL Cost" shall be applied to the "UL Capacity Credit". If it is modelled as shared resources, both the "DL cost" and the "UL cost" shall be applied to the "DL or Global Capacity Credit".

[FDD - When the Common Transport Channel Setup, Deletion or Reconfiguration procedures are used, the Capacity Credit shall be updated considering all physical channels related in these procedures (S-CCPCH, PICH, PRACH, AICH, PCPCH, CD/CA-ICH and AP-AICH), i.e. one cost shall be credited to or debited from the Capacity Credit per physical channel.]

[FDD - The costs given in the consumption law are the costs per channelization code. When multiple channelization codes are used by a physical channel, the cost credited to or debited from the Capacity Credit for this physical channel shall be taken as N times the cost given in the consumption law, where N is the number of channelization codes.]

[TDD - When the Common Transport Channel Setup or Deletion procedures are used, the Capacity Credit shall be updated considering all physical channels related in these procedures (S-CCPCH, PICH, PRACH), i.e. one cost shall be credited to or debited from the Capacity Credit per physical channel.]

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
SF Allocation Law		1 <maxno ofSFs></maxno 		[FDD - For each SF, cost of its allocation: the first instance corresponds to SF = 4, the second to SF = 8, the third to SF = 16 and so on.] [TDD - For each SF, cost of its allocation: the first instance corresponds to SF = 1, the second to SF = 2, the third to SF = 4 and so on.]
>DL cost	M		INTEGER (065535)	-
>UL cost	M		INTEGER (065535)	

Range Bound	Explanation			
maxnoofSFs	Maximum number of Spreading Factors			

9.2.1.9B Common Measurement Accuracy

The Common Measurement Accuracy IE indicates the accuracy of the common measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Common				
Measurement Accuracy				
>T _{UTRAN-GPS} Measurement Accuracy Class				
>>Turran-gps Measurement Accuracy Class	М		T _{UTRAN-GPS} Accuracy Class 9.2.1.64C	

9.2.1.10 Common Measurement Object Type

Void.

9.2.1.11 Common Measurement Type

The Common Measurement Type identifies which measurement that shall be performed.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Common Measurement Type			ENUMERATED (Received Total Wide Band Power, Transmitted Carrier Power, Acknowledged PRACH Preambles, UL Timeslot ISCP, Acknowledged PCPCH Access Preambles, Detected PCPCH Access Preambles,, UTRAN GPS Timing of Cell Frames for UE Positioning, SFN-SFN Observed Time Difference)	"UL Timeslot ISCP" is used by TDD only, "Acknowledged PRACH Preambles", 'Acknowledged PCPCH Access Preambles', 'Detected PCPCH Access Preambles' are used by FDD only

9.2.1.12 Common Measurement Value

The Common Measurement Value shall be the most recent value for this measurement, for which the reporting criteria were met.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Common				•	_	
Measurement Value						
>Transmitted Carrier					_	
Power						
>>Transmitted	M		INTEGER	According to mapping	_	
Carrier Power			(0100)	in [22] and [23]		
Value						
>Received Total					_	
Wide Band Power						
>>Received Total	M		INTEGER	According to mapping	_	
Wide Band Power			(0621)	in [22] and [23]		
Value						
>Acknowledged				FDD Only	_	
PRACH Preambles						
>>Acknowledged	M		INTEGER	According to mapping	_	
PRACH Preamble			(0240,)	in [22]		
Value						
>UL Timeslot ISCP				TDD Only	_	
>>UL Timeslot	M		INTEGER	According to mapping	_	
ISCP			(0127)	in [23]		
>Acknowledged				FDD Only	_	
PCPCH Access				-		
Preambles						
>>Acknowledged	M		INTEGER	According to mapping	_	
PCPCH Access			(015,)	in [22]		
Preambles						
>Detected PCPCH				FDD Only	_	
Access Preambles						
>>Detected	M		INTEGER	According to mapping	_	
PCPCH Access			(0240,)	in [22]		
Preambles						
>Additional Common					_	
Measurement Values						
>>UTRAN GPS					_	
Timing of Cell]				
Frames for UE]				
Positioning						
>>>Tutran-gps	М		9.2.1.64A		YES	ignore
Measurement]				
Value Information]				
>>SFN-SFN					_	
Observed Time]				
Difference]				
>>>SFN-SFN	М		9.2.1.53E		YES	ignore
Measurement						
Value Information]				

9.2.1.12A Common Measurement Value Information

The *Common Measurement Value Information* IE provides information both on whether or not the Common Measurement Value is provided in the message or not and if provided also the Common Measurement Value itself.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Measurement Availability Indicator	M			
>Measurement Available				
>>Common Measurement Value	M		9.2.1.12	
>Measurement Not Available			NULL	

9.2.1.13 Common Physical Channel ID

Common Physical Channel ID is the unique identifier for one common physical channel within a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Common Physical Channel ID			INTEGER (0255)	

9.2.1.13A Common Physical Channel Status Information

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Common Physical Channel ID	М		9.2.1.13		_	
Resource Operational State	М		9.2.1.52		_	
Availability Status	M		9.2.1.2		_	

9.2.1.14 Common Transport Channel ID

Common Transport Channel ID is the unique identifier for one common transport channel within a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Common Transport Channel ID			INTEGER (0255)	

9.2.1.14A Common Transport Channel Information Response

The *Common Transport Channel Information Response* IE provides information for Common Transport Channels that have been established or modified.

IE/Group Name	Presence	Range	IE Type and	Semantics Description	Criticality	Assigned Criticality
Common Transport Channel	N/A		Reference			
Common Transport Channel ID	М		9.2.1.14		_	
Binding ID	0		9.2.1.4		_	
Transport Layer Address	0		9.2.1.63		_	

9.2.1.14B Common Transport Channel Status Information

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Common Transport Channel ID	М		9.2.1.14		_	
Resource Operational State	М		9.2.1.52		_	
Availability Status	М		9.2.1.2		_	

9.2.1.15 Communication Control Port ID

A Communication Control Port corresponds to one signalling bearer between the CRNC and the Node B for the control of Node B Communication Contexts. The Node B may have multiple Communication Control Ports (one per Traffic

Termination Point). The Communication Control Port is selected at creation of the Node B Communication Context. The Communication Control Port ID is the identifier of the Communication Control Port.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Communication Control Port ID			INTEGER (065535)	

9.2.1.16 Configuration Generation ID

The Configuration Generation ID describes the generation of the configuration of logical resources in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Configuration Generation ID			INTEGER (0255)	Value "0" means "No configuration". At possible wraparound of the ID counter in CRNC the value "0" shall not be used.

9.2.1.17 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by a Node B or the CRNC when parts of a received message have not been comprehended or are missing, or if the message contained logical errors. When applicable, it contains information about which IEs that were not comprehended or were missing.

For further details on how to use the *Criticality Diagnostics* IE, see Annex C.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Procedure ID		01		Procedure ID is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error	-	•
>Procedure Code	М		INTEGER (0255)	caused the entit	_	
>Ddmode	M		ENUMERATED ("Common" = common to FDD and TDD. FDD, Common,		-	
Triggering Message	0		message, successful outcome, unsuccessful outcome, outcome, outcome, outcome, outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication.	-	
Procedure Criticality	0		ENUMERATED (reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).	-	
Transaction ID	0		9.2.1.62		_	
Information Element Criticality Diagnostics		0 <max nooferro rs></max 			-	
>IE Criticality	M		ENUMERATED (reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall never be used.	-	
>IE ID	М		INTEGER (065535)	The IE ID of the not understood or missing IE	-	
>Repetition Number	0		INTEGER (0255)	The Repetition Number IE gives: • for a not understood IE: The number of occurrences of the reported IE up to and including the not understood occurrence • for a missing IE: The number of occurrences up to but not including the missing occurrence. Note: All the counted occurrences of the reported IE must have the same topdown hierachical message structure of IEs with assigned criticality above them.		

>Message Structure	0	9.2.1.45A	The Message Structure IE describes the structure where the not understood or missing IE was detected. This IE is included if the not understood IE is not the top level of the message.	YES	ignore
>Type Of Error	M	ENUMERATED (not understood, missing,)		YES	ignore

Range Bound Explanation	
maxnooferrors	Maximum number of IE errors allowed to be reported with a single
	message.

9.2.1.18 CRNC Communication Context ID

The CRNC Communication Context ID is the identifier of the Communication Context in the CRNC.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
CRNC Communication Context			INTEGER (02^20 -	"2^20-1" is a reserved value
ID			1)	indicating all the CRNC
				Communication Contexts that
				can be reached by the
				Communication Control Port
				(All CRNCCC).

9.2.1.18A CTFC

The CTFC is an integer number calculated in accordance with [18], subclause 14.10. Regarding the channel ordering, for all transport channels, 'TrCH1' corresponds to the transport channel having the lowest transport channel identity among all configured transport channels on this CCTrCH. 'TrCH2' corresponds to the transport channel having the next lowest transport channel identity, and so on.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE CTFC Format				
>2 bits long				
>>CTFC value	M		INTEGER (03)	
>4 bits long				
>>CTFC value	M		INTEGER (015)	
>6 bits long				
>>CTFC value	M		INTEGER (063)	
>8 bits long				
>>CTFC value	M		INTEGER (0255)	
>12 bits long				
>>CTFC value	M		INTEGER (04095)	
>16 bits long				
>>CTFC value	M		INTEGER (065535)	
>max nb bits long				
>>CTFC value	М		INTEGER (0maxCTFC)	

Range Bound	Explanation
MaxCTFC	Maximum number of the CTFC value is calculated according to the following:
	$\sum_{i=1}^{I} (L_i - 1) P_i$
	with the notation according to ref. [18]

9.2.1.19 DCH Combination Indicator

Void.

9.2.1.20 DCH ID

The DCH ID is the identifier of an active dedicated transport channel. It is unique for each active DCH among the active DCHs simultaneously allocated for the same UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCH ID			INTEGER (0255)	

9.2.1.20A Dedicated Channels Capacity Consumption Law

The capacity consumption law indicates to the CRNC how the Capacity Credit is consumed by NBAP set of procedures, depending on the [FDD - allocated Spreading Factor and the RL/RLS situation] [TDD – allocated Spreading Factor on each DPCH and the assigned timeslot]. [FDD - In Uplink, the reference spreading factor shall be the minimum spreading factor signalled in the Radio Link Setup Request message (*Min UL Channelisation Code Length* IE).]

This capacity consumption law indicates the consumption law to be used with the following procedures:

- Radio Link Setup
- Radio Link Addition
- Radio Link Reconfiguration
- Radio Link Deletion
- [TDD Physical Shared Channel Reconfiguration]

For the Radio Link Setup and Radio Link Addition procedures, the cost given in the consumption law shall be debited from the Capacity Credit, whereas it shall credited to the Capacity Credit for the Radio Link Deletion procedure. For the Radio Link Reconfiguration procedure, the difference of the consumption cost for the new spreading factor and the consumption cost for the old spreading factor shall be debited from the Capacity Credit (or credited when this difference is negative).

If the modelling of the internal resource capability of the Node B is modelled independently for the Uplink and Downlink, the DL cost shall be applied to the DL or Global Capacity Credit and the UL Cost shall be applied to the UL Capacity Credit. If it is modelled as shared resources, both the DL costs" and the UL costs shall be applied to the DL or Global Capacity Credit.

[FDD - For a Radio Link creating a Radio Link Set (first RL of a RLS), the cost for the RL (cost 2) and RLS (cost 1) shall be taken into account. When adding a Radio Link to a Radio Link Set, only the RL cost (cost 2) shall be taken into account.

In the case where multiple Radio Links are established in one procedure, for every created Radio Link Set, the first Radio Link is always the Radio Link with the lowest repetition number.]

[FDD- When a PDSCH is allocated in the Radio Link Setup procedure, the processing cost associated to this PDSCH, equal to the DL cost RL, shall be debited from the Capacity Credit, in addition to the processing cost of the radio links.

In a similar way, this cost shall be credited to the Capacity Credit, when a PDSCH is deleted and the difference between the new cost and the old cost shall be debited from the Capacity Credit (or credited if this difference is negative) when a PDSCH is reconfigured.]

[FDD- The costs given in the consumption law are the costs per channelization code. When multiple channelization codes are used by either the radio links or the PDSCH, the cost credited to or debited from the Capacity Credit shall be taken as N times the cost for one code, where N is the number of channelization codes.]

[TDD –The cost for a radio link is a sum of the costs for each DPCH. For the first DPCH assigned to any user in a cell within a timeslot, the initial cost for a DPCH in a timeslot (cost 1) and the cost for a DPCH (cost 2) shall be taken into account. For any DPCH that is not the first DPCH assigned for any user in a cell within a timeslot, only the cost for a DPCH (cost 2) shall be taken into account.]

[TDD – The cost for shared channels is the sum of the costs for each PDSCH and PUSCH assigned to a PUSCH or PDSCH set. For the first PDSCH or PUSCH assigned to any user in a cell within a timeslot, the initial cost for a PDSCH/PUSCH in a timeslot (cost 1) and the cost for a PDSCH/PUSCH (cost 2) shall be taken into account. For any PDSCH/PUSCH that is not the first PDSCH/PUSCH assigned to any user in a cell within a timeslot, only the cost for a PDSCH/PUSCH (cost 2) shall be taken into account.]

[TDD - In the case of Physical Shared Channel Reconfiguration, the sum of the consumption cost of the each PDSCH/PUSCH of the previous configuration shall be credited to the capacity credit, and the sum of the consumption cost of each PDSCH/PUSCH of the new configuration shall be subtracted from the capacity credit.]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SF Allocation Law		1 <maxno ofSFs></maxno 	Kererence	[FDD - For each SF, cost of its allocation: the first instance corresponds to SF = 4, the second to SF = 8, the third to SF = 16 and so on.] [TDD - For each SF, cost of its allocation: the first instance corresponds to SF = 1, the second to SF = 2, the third to SF = 4 and so on.]
>DL Cost 1	M		INTEGER (065535)	[FDD – This is the cost of a RLS.] [TDD – This is the additional cost of the first DPCH/PDSCH/PUSCH assigned to any user in a cell within a timeslot.]
>DL Cost 2	M		INTEGER (065535)	[FDD – This is the cost of a RL.] [TDD – This is the cost of a DPCH/PDSCH/PUSCH]
>UL Cost 1	M		INTEGER (065535)	FDD – This is the cost of a RLS.] [TDD – This is the additional cost of the first DPCH/PDSCH/PUSCH assigned to any user in a cell within a timeslot.]
>UL Cost 2	M		INTEGER (065535)	[FDD – This is the cost of a RL.] [TDD – This is the cost of a DPCH/PDSCH/PUSCH.]

Range Bound	Explanation
maxnoofSFs	Maximum number of Spreading Factors

9.2.1.20B DL or Global Capacity Credit

The capacity credit indicates to the CRNC the Downlink or global capacity of a Local Cell or a Local Cell Group.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL or Global Capacity Credit			INTEGER (065535)	

9.2.1.20C DCH Information Response

The DCH Information Response IE provides information for DCHs that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCH Information Response		1 <maxno ofDCHs></maxno 		Only one DCH per set of coordinated DCHs shall be included
>DCH ID	М		9.2.1.20	
>Binding ID	0		9.2.1.4	
>Transport Layer Address	0		9.2.1.63	

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCH per UE

9.2.1.21 DL Power

The *DL Power* IE indicates a power level relative to the [FDD - primary CPICH power] [TDD - primary CCPCH power] configured in a cell. [FDD - If referred to a DPCH, it indicates the power of the transmitted DPDCH symbols]. [FDD - If referred to a DL-DPCCH for CPCH, it indicates the power of the transmitted pilot symbols].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Power			INTEGER (-350150)	Value = DL Power /10 Unit: dB
				Range: -35.0 +15.0 dB Step: 0.1dB

9.2.1.22 Dedicated Measurement Object Type

Void.

9.2.1.23 Dedicated Measurement Type

The Dedicated Measurement Type identifies the type of measurement that shall be performed.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Dedicated Measurement Type			ENUMERATED (SIR, SIR Error, Transmitted Code Power, RSCP, Rx Timing Deviation, Round Trip Time,, Rx Timing Deviation LCR, Angle Of Arrival LCR)	"RSCP" is used by TDD only. "Rx Timing Deviation" is used by 3.84Mcps TDD only. "Rx Timing Deviation LCR", "Angle Of Arrival LCR" are used by 1.28Mcps TDD only. "Round Trip Time", "SIR Error" are used by FDD only.

Note: For definitions of the measurement types refer to [4] and [5].

9.2.1.24 Dedicated Measurement Value

The Dedicated Measurement Value shall be the most recent value for this measurement, for which the reporting criteria were met.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Dedicated					_	
Measurement Value						
>SIR Value					_	
>>SIR Value	M		INTEGER (063)	According to mapping in [22] and [23]	1	
>SIR Error Value				FDD only	_	
>>SIR Error Value	M		INTEGER (0125)	According to mapping in [22]	_	
>Transmitted Code Power Value					_	
>>Transmitted Code Power Value	М		INTEGER (0127)	According to mapping in [22] and [23]. Values 0 to 9 and 123 to 127 shall not be used.	-	
>RSCP				TDD only	_	
>>RSCP	M		INTEGER (0127)	According to mapping in [23]	_	
>Rx Timing Deviation Value				Applicable to 3.84Mcps TDD only	_	
>>Rx Timing Deviation	M		INTEGER (08191)	According to mapping in [23]	_	
>Round Trip Time				FDD only	-	
>>Round Trip Time	М		INTEGER (032767)	According to mapping in [22]	_	
>Additional Dedicated Measurement Values					_	
>>Rx Timing Deviation Value LCR				Applicable to 1.28Mcps TDD only	_	
>>>Rx Timing Deviation LCR	M		INTEGER (0255)	According to mapping in [23]	YES	reject
>>Angle Of Arrival Value LCR				Applicable to 1.28Mcps TDD only	_	
>>>AOA Value LCR		1			YES	reject
>>>AOA LCR	М		INTEGER (0719)	According to mapping in [23]	_	
>>>AOA LCR Accuracy Class	M		ENUMÉRATE D (A, B, C, D, E, F, G, H,)	According to mapping in [23]	-	

9.2.1.24A Dedicated Measurement Value Information

The *Dedicated Measurement Value Information* IE provides information both on whether or not the Dedicated Measurement Value is provided in the message or not and if provided also the Dedicated Measurement Value itself.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Measurement	М			
Availability Indicator				
>Measurement Available				
>>Dedicated Measurement	М		9.2.1.24	
Value				
>>CFN	0		9.2.1.7	Dedicated Measurement Time
				Reference
>Measurement Not Available			NULL	

9.2.1.24B DGPS Corrections

The DGPS Corrections IE contains DGPS information used by the UE Positioning A-GPS method. For further details on the meaning of parameters, see [28].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS TOW	М		INTEGER (0604799)	Time in seconds. This field indicates the baseline time for which the corrections are valid
Status/Health	М		ENUMERATED (UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.1, no data, invalid data)	This field indicates the status of the differential corrections
Satellite Information		1 <maxno Sat></maxno 		
>SatID	М		INTEGER (063)	Satellite ID
>IODE	M		BIT STRING (8)	This IE is the sequence number for the ephemeris for the particular satellite. It can be used to determine if new ephemeris is used for calculating the corrections that are provided. This eight-bit IE is incremented for each new set of ephemeris for the satellite and may occupy the numerical range of [0, 239] during normal operations.
>UDRE	М		ENUMERATED (UDRE ≤1.0m, 1.0m < UDRE ≤ 4.0m, 4.0m < UDRE ≤ 8.0m, 8.0m < UDRE)	User Differential Range Error. This field provides an estimate of the uncertainty (1-σ) in the corrections for the particular satellite. The value in this field shall be multiplied by the UDRE Scale Factor in the common Corrections Status/Health field to determine the final UDRE estimate for the particular satellite
>PRC	M		INTEGER (-20472047)	Pseudo Range Correction Unit: m (meters) Step: 0.32 meters
>Range Correction Rate	М		INTEGER (-127127)	Unit: m/s Step: 0.032 m/s

Range Bound	Explanation
maxNoSat	Maximum number of satellites for which information can be provided

9.2.1.24C Delayed Activation

The *Delayed Activation* IE indicates that the activation of the DL power shall be delayed until an indicated CFN or until a separate activation indication is received.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Delayed Activation	M			
>CFN				
>> Activation CFN	M		CFN 9.2.1.7	
>Separate Indication			NULL	

9.2.1.24D Delayed Activation Update

The Delayed Activation Update IE indicates a change of the activation of the DL power for a specific RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Delayed Activation	M			
Update				
>Activate				
>>CHOICE Activation Type				
>>>Synchronised				
>>>Activation CFN	M		CFN 9.2.1.7	
>>>Unsynchronised			NULL	
>>Initial DL TX Power	M		DL Power	
			9.2.1.21	
>>First RLS Indicator	0		9.2.2.16A	FDD Only
>>Propagation Delay	0		9.2.2.35	FDD Only
>Deactivate				
>>CHOICE Deactivation				
Туре				
>>>Synchronised		<u> </u>		
>>>>Deactivation CFN	M	•	CFN 9.2.1.7	
>>>Unsynchronised		•	NULL	

9.2.1.25 Diversity Control Field

The Diversity Control Field indicates if the current RL may, must or must not be combined with the already existing RLs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Diversity Control Field			ENUMERATED (May, Must, Must Not)	

9.2.1.26 Diversity Indication

Void.

9.2.1.26A DL DPCH Timing Adjustment

Void.

9.2.1.27 DSCH ID

The DSCH ID uniquely identifies a DSCH within a Node B Communication Context.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DSCH ID			INTEGER (0255)	

9.2.1.27A DSCH Information Response

The DSCH Information Response IE provides information for DSCHs that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DSCH Information Response		1 <maxno ofDSCHs></maxno 		
>DSCH ID	М		9.2.1.27	
>Binding ID	0		9.2.1.4	
>Transport Layer Address	0		9.2.1.63	

Range Bound	Explanation
maxnoofDSCHs	Maximum number of DSCHs for one UE

9.2.1.28 DSCH Transport Format Set

Void.

9.2.1.29 DSCH Transport Format Combination Set

Void.

9.2.1.29A End Of Audit Sequence Indicator

Indicates if the AUDIT RESPONSE message ends an audit sequence or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
End Of Audit Sequence			ENUMERATED ("End of audit sequence" = all
Indicator			End of audit sequence, Not end of audit sequence)	audit information has been provided by the Node B. "Not end of audit sequence" = more audit information is available.

9.2.1.29B FN Reporting Indicator

The Frame Number Reporting Indicator indicates if the SFN or CFN shall be included together with the reported measurement value.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
FN Reporting Indicator			ENUMERATED (
			FN Reporting	
			Required,	
			FN Reporting Not	
			Required)	

9.2.1.30 Frame Handling Priority

This parameter indicates the priority level to be used during the lifetime of the DCH/DSCH for temporary restriction of the allocated resources due overload reason.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Frame Handling Priority			INTEGER (015)	"0" = lowest priority,
				 "15" = highest priority

9.2.1.31 Frame Offset

The Frame Offset is the required offset between the dedicated channel downlink transmission frames (CFN, Connection Frame Number) and the broadcast channel frame offset (Cell Frame Number). The Frame_offset is used in the translation between Connection Frame Number (CFN) on Iub/Iur and the least significant 8 bits of SFN (System Frame Number) on Uu. The Frame Offset is UE and cell specific.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Frame Offset			INTEGER (0255)	Frames

9.2.1.31A IB_OC_ID

The IB OC ID identifies the occurrence of a specific Information Block.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IB OC ID			INTEGER (116)	

9.2.1.31B GPS Navigation Model & Time Recovery

This IE contains subframes 1 to 3 of the GPS navigation message. For further details on the meaning of parameters, see [27].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Navigation Message 1to3		1 <maxno Sat></maxno 		
>Transmission TOW	М		INTEGER (01048575)	Time of the Week when the message is broadcast.
>SatID	M		INTEGER (063)	Satellite ID of the satellite from which the information is obtained
>TLM Message	M		BIT STRING (14)	
>TIm Revd (C)	M		BIT STRING (2)	
>HO-Word	M		BIT STRING (22)	
>WN	M		BIT STRING (10)	
>C/A or P on L2	M		BIT STRING (2)	
>User Range Accuracy Index	M		BIT STRING (4)	
>SV Health	M		BIT STRING (6)	
>IODC	M		BIT STRING (10)	
>L2 P Data Flag	M		BIT STRING (1)	
>SF 1 Reserved	M		BIT STRING (87)	
>T _{GD}	M		BIT STRING (8)	
>t _{oc}	M		BIT STRING (16)	
>af ₂	M		BIT STRING (8)	
>af ₁	M		BIT STRING (16)	
>af ₀	M		BIT STRING (22)	
>C _{rs}	M		BIT STRING (16)	
>∆n	M		BIT STRING (16)	
>M ₀	M		BIT STRING (32)	
>C _{uc}	M		BIT STRING (16)	
>e	M		BIT STRING (32)	
>C _{us}	M		BIT STRING (16)	
>(A) ^{1/2}	M		BIT STRING (32)	
>t _{oe}	M		BIT STRING (16)	
>Fit Interval Flag	M		BIT STRING (1)	
>AODO	M		BIT STRING (5)	
>C _{ic}	M		BIT STRING (16)	
>OMEGA ₀	M		BIT STRING (32)	
>C _{is}	M		BIT STRING (16)	
>i ₀	M		BIT STRING (32)	
>C _{rc}	M		BIT STRING (16)	
>0	M		BIT STRING (32)	
>OMEGAdot	M		BIT STRING (24)	
>ldot	M		BIT STRING (14)	
>Spare/zero fill	M		BIT STRING (20)	

Range Bound	Explanation		
maxNoSat	Maximum number of satellites for which information can be provided		

9.2.1.31C GPS Ionospheric Model

This IE provides the information regarding the GPS Ionospheric Model. For further details on the meaning of parameters, see [27].

IE/Group Name	Presence	Range	IE Type and	Semantics Description
_		_	Reference	-
α_0	M		BIT STRING (8)	
α_1	M		BIT STRING (8)	
α_2	M		BIT STRING (8)	
α ₃	M		BIT STRING (8)	
βο	M		BIT STRING (8)	
β ₁	M		BIT STRING (8)	
β_2	M		BIT STRING (8)	
β ₃	M		BIT STRING (8)	

9.2.1.31D GPS UTC Model

This IE provides the information regarding the GPS UTC Model. For further details on the meaning of parameters, see [27].

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
A ₁	M		BIT STRING (24)	
A ₀	M		BIT STRING (32)	
t _{ot}	M		BIT STRING (8)	
Δt_{LS}	M		BIT STRING (8)	
WN _t	M		BIT STRING (8)	
WN _{LSF}	M		BIT STRING (8)	
DN	M		BIT STRING (8)	
Δt_{LSF}	M		BIT STRING (8)	

9.2.1.31E GPS Real-Time Integrity

This IE provides the information regarding the status of the GPS constellation. For further details on the meaning of parameters, see [27].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Bad Satellites	M			
Presence				
>Bad Satellites				
>>Satellite information		1 <maxno< td=""><td></td><td></td></maxno<>		
		Sat>		
>>>BadSatID	M		INTEGER (063)	Satellite ID
>No Bad Satellites			NULL	

Range Bound	Explanation		
maxNoSat	Maximum number of satellites for which information can be provided		

9.2.1.31F GPS Almanac

This IE provides the information regarding the GPS Almanac. For further details on the meaning of parameters, see [27].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
WN _a	M		BIT STRING (8)	
Satellite information	M	1 <maxno< td=""><td></td><td></td></maxno<>		
		Sat>		
>DataID	M		INTEGER (03)	
>SatID	M		INTEGER (063)	Satellite ID
>e	M		BIT STRING (16)	
>t _{oa}	M		BIT STRING (8)	
>δi	M		BIT STRING (16)	
>OMEGADOT	M		BIT STRING (16)	
>SV Health	M		BIT STRING (8)	
>A ^{1/2}	M		BIT STRING (24)	
>OMEGA ₀	M		BIT STRING (24)	
>M ₀	M		BIT STRING (24)	
>ω	M		BIT STRING (24)	
>af ₀	M		BIT STRING (11)	
>af₁	M		BIT STRING (11)	
SV Global Health	0		BIT STRING (364)	

Range Bound	Explanation			
maxNoSat	Maximum number of satellites for which information can be provided			

9.2.1.31G GPS Receiver Geographical Position (GPS RX Pos)

The GPS Receiver Geographical Position is used to identify the geographical coordinates of a GPS receiver relevant for a certain Information Exchange Object.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Latitude Sign	М		ENUMERATED (North, South)	
Degrees of Latitude	М		INTEGER (02 ²³ -1)	The IE value (N) is derived by this formula: $N \le 2^{23} \text{ X } / 90 < \text{N+1}$ X being the latitude in degree (0° 90°)
Degrees of Longitude	М		INTEGER (-2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²⁴ X /360 < N+1 X being the longitude in degree (-180°+180°)
Direction of Altitude	М		ENUMERATED (Height, Depth)	
Altitude	M		INTEGER (02 ¹⁵ -1)	The relation between the value (N) and the altitude (a) in meters it describes is N≤ a <n+1, except="" for="" n="2<sup">15-1 for which the range is extended to include all greater values of (a).</n+1,>

9.2.1.31H HS-DSCH To Modify

The HS-DSCH to modify provides information for HS-DSCH to be modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
HS-DSCH MAC-d Flow Specific Information		0 <maxn oofMACd Flows></maxn 			-	
>HS-DSCH MAC-d Flow ID	M		9.2.1311		_	
>BLER	0		9.2.1.4A		_	
>Allocation/Retention Priority	0		9.2.1.1A		_	
>Transport Bearer Request Indicator	M		9.2.1.62A		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	_	
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	_	
>Priority Queue Information		0 <maxn oofPrioQ ueues></maxn 			_	
>>Priority Queue ID	M		9.2.1.49C		_	
>>Scheduling Priority Indicator	0		9.2.1.53H		_	
>>MAC-d PDU Size Index		0 <maxn oofMACd PDUinde xes></maxn 			_	
>>>SID	M		9.2.1.531		_	
>>>MAC-d PDU Size	0		9.2.1.38A		_	
Measurement Reporting Cycle	0		ENUMERAT ED (k1, k2)	For FDD only	_	

9.2.1.31Ha HS-DSCH Initial Capacity Allocation

The *HS-DSCH Initial Capacity Allocation* IE provides flow control information for each scheduling priority class for the HS-DSCH FP over Iub.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
HS-DSCH Initial Capacity Allocation		116			ı	
>Scheduling Priority Indicator	М		9.2.1.51A		-	
>Maximum MAC-d PDU Size	M		MAC-d PDU Size 9.2.1.38A		I	
>HS-DSCH Initial Window Size	М		9.2.1.31Hb		-	

9.2.1.31Hb HS-DSCH Initial Window Size

Indicates the initial number of MAC-d PDUs that may be transmitted before new credits are received from the Node B.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HS-DSCH Initial Window			INTEGER	Number of MAC-d PDUs:
Size			(12047)	2047 = Unlimited number of
				MAC-d PDUs.

9.2.1.31I HS-DSCH MAC-d Flow ID

HS-DSCH MAC-d Flow ID is the unique identifier for one MAC-d flow.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS-DSCH MAC-d Flow ID			INTEGER (07)	

9.2.1.31J HS-DSCH RNTI

The HS-DSCH RNTI is used for the UE-specific CRC in HS-SCCH and HS-DSCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS-DSCH RNTI			INTEGER (065535)	

9.2.1.32 IB_SG_DATA

Segment as defined in ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IB_SG_DATA			BIT STRING	Contains "SIB data fixed" or "SIB data variable" in segment
				as encoded in ref. [18].

9.2.1.33 IB_SG_POS

The lowest position of a specific Information Block segment in the SFN cycle (IB_SG_POS < IB_SG_REP).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IB_SG_POS			INTEGER (04094)	Only even positions are allowed.
				See ref. [18]

9.2.1.34 IB_SG_REP

Repetition distance for an Information Block segment. The segment shall be transmitted when SFN mod IB_SG_REP = IB_SG_POS.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
IB_SG_REP			ENUMERATED	Repetition period for the IB
			(4, 8, 16, 32, 64,	segment in frames
			128, 256, 512, 1024,	
			2048, 4096)	

9.2.1.35 IB Type

The IB Type identifies a specific system information block.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
З Туре			ENUMERATED (
			MIB,	
			SB1,	
			SB2,	
			SIB1,	
			SIB2,	
			SIB3,	
			SIB4,	
			SIB5,	
			SIB6,	
			SIB7,	
			SIB8,	
			SIB9,	
			SIB10,	
			SIB11,	
			SIB12,	
			SIB13,	
			SIB13.1,	
			SIB13.2,	
			SIB13.3,	
			SIB13.4,	
			SIB14,	
			SIB15,	
			SIB15.1,	
			SIB15.2,	
			SIB15.3,	
			SIB16,	
			, SIB17,	
			SIB15.4,	
			SIB18,	
			SIB15.5)	

9.2.1.36 Indication Type

Void.

9.2.1.36A Information Exchange Object Type

Void.

9.2.1.36B Information Report Characteristics

The information report characteristics defines how the reporting shall be performed.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Information Report				
Characteristics Type				
>On Demand			NULL	
>Periodic				
>>CHOICE Information Report Periodicity Scale	М			The frequency with which the Node B shall send information reports.
>>>minute				
>>>Report Periodicity Value	М		INTEGER (160,)	Unit: min
>>>hour				
>>>Report Periodicity Value	М		INTEGER (124,)	Unit: h
>On Modification				
>>Information Threshold	0		9.2.1.36E	

9.2.1.36C Information Exchange ID

The Information Exchange ID uniquely identifies any requested information per Node B.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Information Exchange ID	М		INTEGER (02^20-1)	

9.2.1.36D Information Type

The Information Type indicates which kind of information the Node B shall provide.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Information Type Item	M		ENUMERATED (GPS Information, DGPS Corrections, GPS RX Pos,)	
GPS Information	C-GPS	0 <maxno GPSItems ></maxno 		
>GPS Information Item			ENUMERATED (GPS Navigation Model & Time Recovery, GPS Ionospheric Model, GPS UTC Model, GPS Almanac, GPS Real-Time Integrity,)	

Condition	Explanation
GPS	The IE shall be present if the <i>Information Type Item</i> IE indicates "GPS
	Information".

Range Bound	Explanation
maxNoGPSItems	Maximum number of GPS Information Items supported in one
	Information Exchange

9.2.1.36E Information Threshold

The Information Threshold indicates which kind of information shall trigger the Information Reporting procedure.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Information Type Item	М			
>DGPS				
>>PRC Deviation	M		ENUMERATED (1, 2, 5, 10,)	PRC deviation in meters from the previously reported value, which shall trigger a report

9.2.1.36F IPDL Indicator

Indicates if IPDL periods shall be active or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IPDL Indicator			ENUMERATED (
			active,	
			inactive)	

9.2.1.37 Limited Power Increase

Void.

9.2.1.37A Local Cell Group ID

The Local Cell Group ID represents resources in the Node B, which have been pooled from a capacity point of view.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Local Cell Group ID			Local Cell ID 9.2.1.38	

9.2.1.38 Local Cell ID

The local cell ID represents resources in the Node B that can be used for the configuration of a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Local Cell ID			INTEGER (0268435455)	

9.2.1.38A MAC-d PDU Size

The MAC-d PDU Size provides the size in bits of the MAC-d PDU.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
MAC-d PDU Size			INTEGER	
			(15000,)	

9.2.1.39 Maximum DL Power Capability

This parameter indicates the maximum DL power capability for a local cell or a Power Local Cell Group within the Node B. The reference point is the antenna connector.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum DL Power Capability			INTEGER (0500)	Unit: dBm
-				Range: 050 dBm
				Step: 0.1 dB

9.2.1.40 Maximum Transmission Power

The Maximum Transmission Power is the maximum power for all downlink channels added together, that is allowed to be used simultaneously in a cell. The reference point is the antenna connector.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Transmission Power			INTEGER (0500)	Unit: dBm
				Range: 050
				Step: 0.1 dB

9.2.1.40A Measurement Availability Indicator

Void.

9.2.1.40B Measurement Change Time

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Time Scale				
>millisecond				
>>Measurement Change Time Value	М		INTEGER (16000,)	Unit: ms Range: 1060000 ms Step: 10 ms

9.2.1.41 Measurement Filter Coefficient

The Measurement Filter Coefficient determines the amount of filtering to be applied for measurements.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Measurement Filter Coefficient			ENUMERATED (0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 13, 15, 17,	
			19,)	

9.2.1.41A Measurement Hysteresis Time

The Measurement Hysteresis Time provides the duration during which a reporting criterion has to be fulfilled for the Measurement Reporting procedure to be triggered.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Time Scale				
>millisecond				
>>Measurement Hysteresis	M		INTEGER	Unit: ms
Time Value			(16000,)	Range: 1060000 ms Step: 10 ms

9.2.1.42 Measurement ID

The Measurement ID uniquely identifies any measurement per (Node B or Communication) Control Port.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Measurement ID			INTEGER	
			(02^20-1)	

9.2.1.43 Measurement Increase/Decrease Threshold

The Measurement Increase/Decrease Threshold defines the threshold that shall trigger Event C or D.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Measurement				
Increase/Decrease Threshold				
>Received Total Wide Band				
Power				
>>Received Total Wide	М		INTEGER (0620)	Unit: dB
Band Power			,	Range: 062 dB
				Step: 0.1 dB
>Transmitted Carrier Power				
>>Transmitted Carrier	М		INTEGER (0100)	According to mapping in [22]
Power	141		1111EGER (0100)	and [23]
>Acknowledged PRACH				FDD only
Preambles				1 DD Offig
>>Acknowledged PRACH	М		INTEGER	According to manning in [22]
	IVI			According to mapping in [22]
Preambles			(0240,)	TDD
>UL Timeslot ISCP	1		INITEGED (0. 100)	TDD only
>>UL Timeslot ISCP	M		INTEGER (0126)	Unit: dB
				Range: 063 dB
				Step: 0.5 dB
>SIR				
>>SIR	M		INTEGER (062)	Unit: dB
				Range: 031 dB
				Step: 0.5 dB
>SIR Error				FDD only
>>SIR Error	M		INTEGER (0124)	Unit: dB
			, ,	Range: 062 dB
				Step: 0.5 dB
>Transmitted Code Power				·
>>Transmitted Code	М		INTEGER	Unit: dB
Power			(0112,)	Range: 056 dB
			(0,2,)	Step: 0.5 dB
				Ctop. 0.0 u.b
>RSCP				TDD only
>>RSCP	М		INTEGER (0126)	Unit: dB
	101		1141LOLIX (0120)	Range: 063 dB
				Step: 0.5 dB
>Round Trip Time	+			FDD only
	М		INTECED (0. 20700)	
>>Round Trip Time	IVI		INTEGER (032766)	Unit: chips
				Range: 0 2047.875 chips
A also and a destal DODOL!				Step: 0.625 chips
>Acknowledged PCPCH				FDD only
Access Preambles			10,000	
>>Acknowledged PCPCH	M		INTEGER (015,)	According to mapping in [22]
Access Preambles				
>Detected PCPCH Access				FDD only
Preambles				
>>Detected PCPCH	M		INTEGER	According to mapping in [22]
Access Preambles			(0240,)	

9.2.1.44 Measurement Threshold

The Measurement Threshold defines which threshold that shall trigger Event A, B, E, F or On Modification.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Measurement Threshold					_	
>Received Total					_	
Wide Band Power						
>>Received Total	M		INTEGER	According to mapping	_	
Wide Band Power			(0621)	in [22] and [23]		
>Transmitted Carrier Power					_	
>>Transmitted Carrier Power	М		INTEGER (0100)	According to mapping in [22] and [23]	_	
>Acknowledged PRACH Preambles				FDD only	_	
>>Acknowledged	M		INTEGER	According to mapping	_	
PRACH Preambles	***		(0240,)	in [22]		
>UL Timeslot ISCP				TDD only	_	
>>UL Timeslot	M		INTEGER	According to mapping	_	
ISCP			(0127)	in [23]		
>SIR					_	
>>SIR	M		INTEGER (063)	According to mapping in [22] and [23]	_	
>SIR Error				FDD only	_	
>>SIR Error	М		INTEGER (0125)	According to mapping in [22]	_	
>Transmitted Code Power					_	
>>Transmitted	М		INTEGER	According to mapping	_	
Code Power			(0127)	in [22] and [23]		
>RSCP				TDD only	_	
>>RSCP	М		INTEGER (0127)	According to mapping in [23]	_	
>Rx Timing Deviation			(02.)	Applicable to 3.84Mcps TDD only	_	
>>Rx Timing	М		INTEGER	According to mapping	_	
Deviation	141		(08191)	in [23]		
>Round Trip Time				FDD only	_	
>>Round Trip Time	М		INTEGER (032767)	According to mapping in [22]	_	
>Acknowledged PCPCH Access				FDD only	-	
Preambles >>Acknowledged	M		INTEGER	According to mapping		
PCPCH Access	IVI		(015,)	in [22]	_	
Preambles >Detected PCPCH		1		FDD only	 _	
Access Preambles				•		
>>Detected	M		INTEGER	According to mapping		
PCPCH Access			(0240,)	in [22]		
Preambles						
>Additional					-	
Measurement Thresholds					1	
>>UTRAN GPS		<u> </u>			_	
Timing of Cell					1	
Frames for UE					1	
Positioning					<u> </u>	
>>>Tutran-gps	M		9.2.1.64B		YES	reject
Measurement					1	
Threshold					1	
Information						
>>SFN-SFN					-	
Observed Time Difference					1	
>>>SFN-SFN	M		9.2.1.53C		YES	reject
>>>Sriv-Sriv Measurement	IVI		3.2.1.000		153	reject
Threshold						

Information			

9.2.1.45 Message Discriminator

This field is used to discriminate between Dedicated NBAP and Common NBAP messages.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Message Discriminator			ENUMERATED (
			Common,	
			Dedicated)	

9.2.1.45A Message Structure

The *Message Structure* IE gives information for each level with assigned criticality in an hierarchical message structure from top level down to the lowest level above the reported level for the occured error (reported in the *Information Element Criticality Diagnostics* IE).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Message Structure		1 <maxno oflevels></maxno 		The first repetition of the Message Structure IE corresponds to the top level of the message. The last repetition of the Message Structure IE corresponds to the level above the reported level for the occurred error of the message.
>IE ID	М		INTEGER (065535)	The IE ID of this level's IE containing the not understood or missing IE.
>Repetition Number	O		INTEGER (1256)	The Repetition Number IE gives, if applicable, the number of occurrences of this level's reported IE up to and including the occurrence containing the not understood or missing IE. Note: All the counted occurrences of the reported IE must have the same topdown hierachical message structure of IEs with assigned criticality above them.

Range Bound		Explanation
	maxnooflevels	Maximum number of message levels to report. The value for
		maxnooflevels is 256.

9.2.1.46 Message Type

The Message Type uniquely identifies the message being sent.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Procedure ID	М	1	11010101100	
Procedure ID >Procedure Code >Doda	M	Range	Reference INTEGER (0255)	"0" = Audit "1" = Audit Required "2" = Block Resource "3" = Cell Beletion "4" = Cell Reconfiguration "5" = Cell Setup "6" = Common Measurement Initiation "8" = Common Measurement Report "9" = Common Measurement Termination "10" = Common Measurement Termination "10" = Common Transport Channel Delete "11" = Common Transport Channel Setup "13" = Reset "14" = Compressed Mode Command "16" = Dedicated Measurement Failure "17" = Dedicated Measurement Initiation "18" = Dedicated Measurement Termination "19" = Dedicated Measurement Termination "20" = Downlink Power Control "21" = Error Indication (For Dedicated Procedures) "23" = Radio Link Addition "24" = Radio Link Restoration "27" = Synchronised Radio Link Reconfiguration Cancellation "30" = Synchronised Radio Link Reconfiguration Cancellation "30" = Synchronised Radio Link Reconfiguration Preparation "32" = System Information Update "33" = Unblock Resource "34" = Unsynchronised Radio Link Reconfiguration Preparation "35" = Error Indication (For Common Procedures) "37" = Physical Shared Channel Reconfiguration "38" = Downlink Power Timeslot Control "39" = Radio Link Preemption "40" = Information Exchange Failure "41" = Information Exchange Failure "41" = Information Exchange Termination "42" = Information Exchange Termination "43" = Information Exchange Termination "43" = Cell Synchronisation Adjustment "45" = Cell Synchronisation Adjustment "45" = Cell Synchronisation Reconfiguration "47" = Cell Synchronisation Reconfiguration "47" = Cell Synchronisation Failure "47" = Cell Synchronisation Failure "47" = Cell Synchronisation Failure "48" = Cell Synchronisation Termination "49" = Cell Synchronisation Failure "50" = Bearer Rearrangement "50" = Bearer Rearrangement "51" = Radio Link Activation Common = common to FDD and TDD.
>Darnoae	IVI		ENUMERATED (TDD, FDD, Common,	Common to FDD and IDD.
Type of Message	M		ENUMERATED (Initiating Message,	

Successf Outcome	9,
Unsucces	essful
Outcome	9,
Outcome	e)

9.2.1.46A Minimum DL Power Capability

This parameter indicates the minimum DL power capability for a local cell within the Node B. The reference point is the antenna connector.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Minimum DL Power Capability			INTEGER (0800)	Unit: dBm Range: -30 +50 dBm
				Step: 0.1 dB

9.2.1.47 Minimum Spreading Factor

This parameter indicates the minimum spreading factor supported at a cell within the Node B.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Minimum Spreading Factor			ENUMERATED	
			(4, 8, 16, 32, 64,	
			128, 256, 512)	

9.2.1.47A N_INSYNC_IND

This parameter is used by the Node B for achievement/re-achievement of UL synchronisation on the Uu interface as defined in ref. [10] and [21].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
N_INSYNC_IND			INTEGER (1256)	

9.2.1.47B N_OUTSYNC_IND

This parameter defines the number of consecutive out-of-sync indications after which the timer T_RLFAILURE shall be started (see also ref. [10] and [21]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
N_OUTSYNC_IND			INTEGER (1256)	

9.2.1.47C Neighbouring FDD Cell Measurement Information

This IE provides information on the FDD neighbouring cells used for the purpose of measurements.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ld	M		9.2.1.65B	
UARFCN	M		9.2.1.65	Corresponds to Nd [14]
Primary Scrambling Code	М		9.2.2.34	

9.2.1.47D Neighbouring TDD Cell Measurement Information

This IE provides information on the 3.84Mcps TDD neighbouring cells used for the purpose of measurements. Since the measurement can be performed on every time slot and midamble shift, the *Time Slot* IE and *Midamble Shift And Burst Type* IE shall be included if available.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ld	M		9.2.1.65B	
UARFCN	M		9.2.1.65	Corresponds to Nt [15]
Cell Parameter ID	M		9.2.3.4	
Time Slot	0		9.2.3.23	
Midamble Shift And Burst Type	0		9.2.3.7	

9.2.1.47E Neighbouring TDD Cell Measurement Information LCR

This IE provides information on the neighbouring 1.28Mcps TDD cells used for the purpose of measurements. Since the measurement can be performed on every time slot and midamble shift, the *Time Slot LCR* IE and *Midamble Shift LCR* IE shall be included if available.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
UC-ld	M		9.2.1.65B	
UARFCN	M		9.2.1.65	Corresponds to Nt [15]
Cell Parameter ID	M		9.2.3.4	
Time Slot LCR	0		9.2.3.24A	
Midamble Shift LCR	0		9.2.3.7A	

9.2.1.48 Node B Communication Context ID

The Node B Communication Context ID is the identifier of the Communication Context in the Node B, it corresponds to the dedicated resources which are necessary for an UE using one or more dedicated channels in a given Node B.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Node B Communication Context ID			INTEGER (02^20-1)	"2^20-1" is a reserved value indicating all the existing and future Node B Communication Contexts that can be reached by the Communication Control Port (All NBCC).

9.2.1.49 Payload CRC Presence Indicator

This parameter indicates whether FP payload 16 bit CRC is used or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Payload CRC Presence Indicator			ENUMERATED (CRC Included, CRC Not Included,)	

9.2.1.49A PICH Power

The *PICH Power* IE indicates a power level relative to the [FDD - Primary CPICH power] [TDD - Primary CCPCH power] configured in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PICH Power			INTEGER (-10+5)	Unit: dB
				Range: -10 +5 dB
				Step: 1dB

9.2.1.49B Power Local Cell Group ID

The Power Local Cell Group ID represents resources in the Node B which have been pooled from a DL power capability point of view.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Power Local Cell Group ID			Local Cell ID 9.2.1.38	

9.2.1.49C Priority Queue ID

The Priority Queue ID provides the identity of the Priority Queue.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Priority Queue ID			INTEGER (07)	

9.2.1.50 Puncture Limit

The Puncture Limit limits the amount of puncturing that can be applied in order to minimise the number of dedicated physical channels.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Puncture Limit			INTEGER (015)	Unit: % Range: 40100 % Step: 4 % 100% means no puncturing

9.2.1.50A QE-Selector

The QE-Selector indicates from which source the value for the quality estimate (QE) shall be taken.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
QE-Selector			ENUMERATED (
			Selected,	
			Non-Selected)	

9.2.1.51 Report Characteristics

The report characteristics define how the reporting shall be performed.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Report				•	_	
Characteristics >On Demand			NULL		_	
>Periodic			NOLL		_	
>>Report Periodicity	M		9.2.1.51a	The frequency with which the Node B shall send measurement reports.	_	
>Event A					_	
>>Measurement Threshold	M		9.2.1.44	The threshold for which the Node B shall trigger a measurement report.	-	
>>Measurement Hysteresis Time	0		9.2.1.41A		_	
>Event B					_	
>>Measurement Threshold	М		9.2.1.44	The threshold for which the Node B shall trigger a measurement report.	-	
>>Measurement Hysteresis Time	0		9.2.1.41A		-	
>Event C	 		100415		_	
>>Measurement Increase/Decrease Threshold	M		9.2.1.43		_	
>>Measurement Change Time	M		9.2.1.40B	The time the measurement entity shall rise on (in ms), in order to trigger a measurement report.	_	
>Event D				•	_	
>>Measurement Increase/Decrease Threshold	M		9.2.1.43		-	
>>Measurement Change Time >Event E	M		9.2.1.40B	The time the measurement entity shall fall (in ms), in order to trigger a measurement report.	-	
>Event E >>Measurement	M		Measurement		_	
Threshold 1	IVI		Threshold 9.2.1.44		_	
>>Measurement Threshold 2	0		Measurement Threshold 9.2.1.44		_	
>>Measurement Hysteresis Time	0		9.2.1.41A		_	
>>Report Periodicity	0		9.2.1.51a	The frequency with which the Node B shall send measurement reports.	_	
>Event F					_	
>>Measurement Threshold 1	М		Measurement Threshold 9.2.1.44		_	
>>Measurement Threshold 2	0		Measurement Threshold 9.2.1.44		_	
>>Measurement Hysteresis Time	0		9.2.1.41A		_	
>>Report Periodicity	0		9.2.1.51a	The frequency with which the Node B shall send	_	

				measurement reports.		
>Additional Report					_	
Characteristics						
>>On Modification					_	
>>>On		1			YES	reject
Modification						-
>>>Measurem	M		9.2.1.44		_	
ent Threshold						

9.2.1.51a Report Periodicity

The Report Periodicity defines the frequency at which the Node B shall send measurement reports.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Report Periodicity Scale				
>millisecond				
>>Report Periodicity Value	М		INTEGER (16000,)	Unit: ms Range: 1060000 ms Step: 10 ms
>minute				
>>Report Periodicity Value	М		INTEGER (160,)	Unit: min Range: 160 min Step: 1 min

9.2.1.51A Requested Data Value

The *Requested Data Value* IE contains the relevant data concerning the ongoing information exchange. The *Requested Data Value* IE shall include at least one of the following IE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DGPS Corrections	0		9.2.1.24B	
GPS Navigation Model & Time Recovery	0		9.2.1.31B	
GPS Ionospheric Model	0		9.2.1.31C	
GPS UTC Model	0		9.2.1.31D	
GPS Almanac	0		9.2.1.31F	
GPS Real-Time Integrity	0		9.2.1.31E	
GPS RX Pos	0		9.2.1.31G	

9.2.1.51B Requested Data Value Information

The *Requested Data Value Information* IE provides information both on whether or not the Requested Data Value is provided in the message or not and if provided also the Requested Data Value itself. In case of periodic reporting, "Information Not Available" shall be used when at least one part of the requested information was not available at the moment of initiating the Information Reporting procedure.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Information Availability Indicator	M			
>Information Available				
>>Requested Data Value	M		9.2.1.51A	
>Information Not Available			NULL	

9.2.1.52 Resource Operational State

The Resource Operational State is used to indicate the current operational state of the associated resource following a Node B failure.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Resource Operational State			ENUMERATED (Enabled, Disabled)	When a resource is marked as disabled, then its child resources are implicitly disabled. Cell Resource hierarchy can be referred to [6].

9.2.1.52A Retention Priority

Void.

9.2.1.53 RL ID

The RL ID is the unique identifier for one RL associated with a UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RL ID			INTEGER (031)	

9.2.1.53a RNC-ld

This is the identifier of one RNC in UTRAN.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RNC-Id			INTEGER (04095)	

9.2.1.53A SFN

System Frame Number of the cell, see ref. [17].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SFN			INTEGER (04095)	

9.2.1.53B Segment Type

Segment type as defined in [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Segment Type			ENUMERATED (First segment, First segment short, Subsequent segment, Last segment, Last segment short, Complete SIB, Complete SIB short,)	

9.2.1.53C SFN-SFN Measurement Threshold Information

The SFN-SFN Measurement Threshold Information defines the related thresholds SFN-SFN Observed Time Difference measurements which shall trigger the Event On Modification.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SFN-SFN Change Limit	0		INTEGER(1256)	Change of SFN-SFN value compared to previously reported value, which shall trigger a new report. Unit: chip Step: 1/16 chip
Predicted SFN-SFN Deviation Limit	0		INTEGER(1256)	Deviation of the predicated SFN-SFN from the latest measurement result, which shall trigger a new report. Unit: chip Step: 1/16 chip

9.2.1.53D SFN-SFN Measurement Time Stamp

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Mode				
>FDD				
>>SFN	М		9.2.1.53A	Indicates the SFN of the reference cell at which the measurement has been performed.
>TDD				
>>SFN	М		9.2.1.53A	Indicates the SFN of the reference cell at which the measurement has been performed.
>>Time Slot	М		9.2.3.23	Indicates the Time Slot of the reference cell at which this measurement has been performed.

9.2.1.53E SFN-SFN Measurement Value Information

The *SFN-SFN Measurement Value Information* IE indicates the measurement result related to SFN-SFN Observed Time Difference measurements.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Successful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information		1 <maxno MeasNCell ></maxno 		
>UC-ld	М		9.2.1.65B	
>SFN-SFN Value	М		9.2.1.53F	
>SFN-SFN Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the SFN-SFN Observed Time Difference measurements in 1/16 chip. SFN-SFN Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Value, where x is the reported SFN-SFN Value and $\mu = E[x]$ is the expectation value of x.
>SFN-SFN Drift Rate	М		INTEGER (-100+100)	Indicates the SFN-SFN drift rate in 1/256 chip per second. A positive value indicates that the Reference cell clock is running at a greater frequency than the measured neighbouring cell.
>SFN-SFN Drift Rate Quality	M		INTEGER (0100)	Indicates the standard deviation (std) of the SFN-SFN drift rate measurements in 1/256 chip per second. SFN-SFN Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Drift Rate, where x is the reported SFN-SFN Drift Rate and $\mu = E[x]$ is the expectation value of x.
>SFN-SFN Measurement Time Stamp	М		9.2.1.53D	
Unsuccessful Neighbouring Cell SFN-SFN Observed Time Difference Measurement Information		0 <maxno MeasNCell -1></maxno 		
>UC-ld	М		9.2.1.65B	

Range Bound	Explanation		
maxnoMeasNCell	Maximum number of neighbouring cells that can be measured on		

9.2.1.53F SFN-SFN Value

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Mode				
>FDD				
>>SFN-SFN	M		INTEGER	According to mapping in [22].
			(0614399)	
>TDD				
>>SFN-SFN	M		INTEGER (040961)	According to mapping in [23].

9.2.1.53G RL Specific DCH Information

The *RL Specific DCH Information* IE provides RL specific DCH Information for DCHs. In the case of a set of coordinated DCHs requiring a new transport bearer on Iub, the *Transport Layer Address* IE and the *Binding ID* IE in the *RL Specific DCH Information* IE shall be included only for one of the DCHs in the set of co-ordinated DCHs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RL Specific DCH Information		1 <maxno ofDCHs></maxno 		
>DCH ID	M		9.2.1.20	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for one UE

9.2.1.53H Scheduling Priority Indicator

Indicates the relative priority of the HS-DSCH data frame. Used by the Node B when scheduling HS-DSCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Scheduling Priority Indicator			INTEGER (015)	Relative priority of the HS- DSCH data frame: "0" =Lowest Priority "15" =Highest Priority

9.2.1.53I SID

The SID IE provides the identity of the Size Index.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SID			INTEGER (07)	

9.2.1.54 SIB Deletion Indicator

Void.

9.2.1.55 SIB Originator

Indicates if the Node B shall fill in the SIB information or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SIB Originator			ENUMERATED (Node B, CRNC,)	

9.2.1.55A Signalling Bearer Request Indicator

The Signalling Bearer Request Indicator IE indicates if a new signalling bearer needs to be established for the control of Node B Communication Context.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Signalling Bearer Request Indicator			ENUMERATED (Bearer Requested)	

9.2.1.56 Shutdown Timer

The shutdown timer shall indicate the length of time available to the CRNC to perform the block of a resource when a Normal priority block is requested.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Shutdown Timer			INTEGER (13600)	Unit: second

9.2.1.56A T_RLFAILURE

The Radio Link Failure procedure shall be triggered after a period of time T_RLFAILURE has elapsed with a persisting out-of-sync indication (see also ref. [10] and [21]).

Information Element/Group Name	Presence	Range	IE Type and Reference	Semantics Description
T_RLFAILURE			INTEGER (0255)	Unit: second
				Range: 0 25.5 s
				Step: 0.1 s

9.2.1.56B Start Of Audit Sequence Indicator

Indicates if the AUDIT REQUEST message initiates a new audit sequence or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Start Of Audit Sequence Indicator			ENUMERATED (Start Of Audit Sequence, Not Start Of Audit Sequence)	

9.2.1.56C TFCI2 Bearer Request Indicator

TFC12 Bearer Request Indicator IE indicates if a new transport bearer on which the DSCH TFCI Signaling control frames shall be received is required.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI2 Bearer Request			ENUMERATED	
Indicator			(New Bearer	
			Requested)	

9.2.1.57 TFCI Presence

The TFCI Presence parameter indicates whether the TFCI shall be included. In TDD, if it is present in the timeslot, it will be included within the first Channelization code listed.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI presence			ENUMERATED (
			Present,	
			Not Present)	

9.2.1.58 TFCS (Transport Format Combination Set)

The Transport Format Combination Set is defined as a set of Transport Format Combinations on a Coded Composite Transport Channel. It is the allowed Transport Format Combinations of the corresponding Transport Channels. The DL Transport Format Combination Set is applicable for DL Transport Channels.

[FDD - Where the UE is assigned access to one or more DSCH transport channels then the UTRAN has the choice of two methods for signalling the mapping between TFCI(field 2) values and the corresponding TFC:

Method #1 - TFCI range

The mapping is described in terms of a number of groups, each group corresponding to a given transport format combination (value of CTFC(field2)). The CTFC(field2) value specified in the first group applies for all values of TFCI(field 2) between 0 and the specified 'Max TFCI(field2) value'. The CTFC(field2) value specified in the second group applies for all values of TFCI(field 2) between the 'Max TFCI(field2) value' specified in the last group plus one and the specified 'Max TFCI(field 2) value' in the second group. The process continues in the same way for the following groups with the TFCI(field 2) value used by the UE in constructing its mapping table starting at the largest value reached in the previous group plus one.

Method #2 - Explicit

The mapping between TFCI(field 2) value and CTFC(field2) is spelt out explicitly for each value of TFCI (field2)]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE DSCH				
>No split in TFCI				This choice is made if: a) The TFCS refers to the Uplink. OR b) The mode is FDD and none of the Radio Links of the concerned UE are assigned any DSCH transport channels. OR c) The mode is TDD.
>>TFCS		1 <maxno ofTFCs></maxno 		The first instance of the parameter corresponds to TFCI zero, the second to 1 and so on. [TDD - The first entry (for TFCI 0) should be ignored by the receiver.]
>>>CTFC	M		9.2.1.18A	
>>>CHOICE Gain Factors	C- PhysChan			
>>>Signalled Gain Factors				
>>>>CHOICE Mode	M			
>>>>FDD				
>>>>>Gain Factor β _C	M		INTEGER (015)	For UL DPCCH or control part of PRACH or control part of PCPCH in FDD; mapping in accordance to [9]
>>>>>Gain Factor β _D	M		INTEGER (015)	For UL DPDCH or data part of PRACH or data part of PCPCH in FDD: mapping in accordance to [9]
>>>>TDD				
>>>>Gain Factor β	М		iNTEGER (015)	For UL DPCH in TDD; mapping in accordance to [20].
>>>>Reference TFC	0		INTEGER (03)	If this TFC is a reference TFC, this IE indicates the reference number.
>>>Computed Gain Factors				
>>>>Reference TFC nr	M		INTEGER (03)	Indicates the reference TFC to be used to calculate the gain factors for this TFC.
>There is a split in the TFCI				This choice is made if: a) The TFCS refers to the Downlink. AND b) The mode is FDD and one of the Radio Links of the concerned UE is assigned one or more DSCH transport channels.
>>Transport Format Combination DCH		1 <maxtf CI_1_Com bs></maxtf 		The first instance of the parameter <i>Transport Format Combination DCH</i> corresponds to TFCI (field 1) = 0, the second to TFCI (field 1) = 1 and so on.
>>>CTFC(field1)	М		9.2.1.18A	-
>>CHOICE Signalling Method				
>>>TFCI Range				
>>>>TFC Mapping On DSCH		1 <maxno TFCIGrou</maxno 		

		ps>		
>>>>Max TFCI(field2) Value	M		INTEGER (11023)	This is the Maximum value in the range of TFCI(field2) values for which the specified CTFC(field2) applies
>>>>CTFC(field2)	M		9.2.1.18A	
>>>Explicit				
>>>>Transport Format Combination DSCH		1 <maxtf CI_2_Com bs></maxtf 		The first instance of the parameter <i>Transport Format Combination DSCH</i> corresponds to TFCI (field2) = 0, the second to TFCI (field 2) = 1 and so on.
>>>>CTFC(field2)	M		9.2.1.18A	

Condition	Explanation
PhysChan	The IE shall be present if the TFCS concerns a UL DPCH or PRACH
	channel [FDD – or PCPCH channel].

Range Bound	Explanation
maxnoofTFCs	The maximum number of Transport Format Combinations
maxTFCI_1_Combs	Maximum number of TFCI (field 1) combinations (given by 2 raised to
	the power of the length of the TFCI (field 1))
maxTFCI_2_Combs	Maximum number of TFCI (field 2) combinations (given by 2 raised to
	the power of the length of the TFCI (field 2))
maxNoTFCIGroups	Maximum number of groups, each group described in terms of a
	range of TFCI(field 2) values for which a single value of CTFC(field2)
	applies

9.2.1.59 Transport Format Set

The Transport Format Set is defined as the set of Transport Formats associated to a Transport Channel, e.g. DCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Dynamic Transport Format Information		1 <maxtf count></maxtf 		The first instance of the parameter corresponds to TFI zero, the second to 1 and so on.
>Number of Transport Blocks	М		INTEGER (0512)	· · · ·
>Transport Block Size	C-Blocks		INTEGER (05000)	Unit: Bits
>CHOICE Mode	M		111120211 (00000)	OTHER DIEG
>>TDD				
>>>Transmission Time Interval Information	C- TTIdynami c	1 <maxtt lcount></maxtt 		
>>>Transmission Time Interval	М		ENUMERATED (10, 20, 40, 80,)	Unit: ms
Semi-Static Transport Format Information		1		
>Transmission Time Interval	M		ENUMERATED (10, 20, 40, 80, dynamic,,5)	Unit: ms; Value "dynamic" for TDD only; Value "5" for LCR TDD only
>Type Of Channel Coding	M		ENUMERATED (No codingTDD, Convolutional, Turbo,)	[FDD - The value "No codingTDD" shall be treated as logical error if received]
>Coding Rate	C-Coding		ENUMERATED (1/2, 1/3,)	
>Rate Matching Attribute	М		INTEGER (1maxRM)	
>CRC Size	М		ENUMERATED (0, 8, 12, 16, 24,)	
>CHOICE Mode	M			
>>TDD				
>>>2 nd Interleaving Mode	M		ENUMERATED (Frame related, Timeslot related,)	

Condition	Explanation
Blocks	The IE shall be present if the <i>Number Of Transport Blocks</i> IE is set to a value greater than 0.
Coding	The IE shall be present if the <i>Type Of Channel Coding</i> IE is set to "Convolutional" or "Turbo".
TTldynamic	The IE shall be present if the <i>Transmission Time Interval</i> IE in the Semi-Static Transport Format Information IE is set to "dynamic".

Range Bound	Explanation					
maxTFcount	Maximum number of different Transport Formats that can be included					
	in the Transport Format Set for one transport channel					
maxRM	Maximum number that could be set as rate matching attribute for a					
	transport channel					
maxTTlcount	The amount of different TTIs that are possible for that Transport					
	Format					

9.2.1.60 ToAWE

TOAWE is the window endpoint. DL data frames are expected to be received before this window endpoint. TOAWE is defined with a positive value relative Latest Time of Arrival (LTOA). A data frame arriving after TOAWE gives a Timing Adjustment Control frame response.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
ToAWE			INTEGER (02559)	Unit: ms

9.2.1.61 ToAWS

TOAWS is the window startpoint. DL data frames are expected to be received after this window startpoint. TOAWS is defined with a positive value relative Time of Arrival Window Endpoint (TOAWE). A data frame arriving before TOAWS gives a Timing Adjustment Control frame response.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
ToAWS			INTEGER (01279)	Unit: ms

9.2.1.62 Transaction ID

The transaction ID is used to associate all the messages belonging to the same procedure. Messages belonging to the same procedure shall use the same transaction ID.

The transaction ID is determined by the initiating peer of a procedure. For common procedures the transaction ID shall uniquely identify a procedure within all ongoing parallel procedures initiated by one protocol peer, using the same procedure code and signalled over the same Node B Control Port. For dedicated procedures the transaction ID shall uniquely identify a procedure within all ongoing parallel procedures initiated by one protocol peer, using the same procedure code and initiated towards the same Node B/CRNC context.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Transaction ID Length				The Transaction ID shall be interpreted for its integer value, not for the type of encoding ("short" or "long").
>Short				
>>Transaction ID Value	M		INTEGER (0127)	
>Long				
>>Transaction ID Value	M		INTEGER (032767)	

9.2.1.62A Transport Bearer Request Indicator

Indicates whether a new transport bearer needs to be established for carrying the concerned transport channel.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transport Bearer Request Indicator			ENUMERATED (Bearer Requested, Bearer Not Requested,)	

9.2.1.63 Transport Layer Address

In case of transport bearer establishment with ALCAP [2][31], this IE contains the address to be used for Transport Network Control Plane signalling to establish the transport bearer according to [2][31].

In order to allow transport bearer establishment without ALCAP, this IE contains the address of the transport bearer to be used for the user plane transport.

For details on the Transport Address used see ref. [2][31].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transport Layer Address			BIT STRING (1160,	
			l)	

9.2.1.64 TSTD Indicator

Indicates if TSTD shall be active or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TSTD Indicator			ENUMERATED (
			active,	
			inactive)	

9.2.1.64A T_{UTRAN-GPS} Measurement Value Information

The T_{UTRAN-GPS} *Measurement Value Information* IE indicates the measurement results related to the UTRAN GPS Timing of Cell Frames for UE Positioning measurements.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
T _{UTRAN-GPS}		1		Indicates the UTRAN GPS Timing of Cell Frames forUE Positioning. According to mapping in [22]. Significant values range from 0 to 37158911999999.
>MS	M		INTEGER (016383)	Most Significant Part
>LS	M		INTEGER (04294967295)	Least Significant Part
Tutran-gps Quality	M		INTEGER (0255)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ measurements in 1/16 chip. $T_{UTRAN-GPS}$ Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Value, where x is the reported $T_{UTRAN-GPS}$ Value and $\mu = E[x]$ is the expectation value of x.
T _{UTRAN-GPS} Drift Rate	М		INTEGER (-50+50)	Indicates the T _{UTRAN-GPS} drift rate in 1/256 chip per second. A positive value indicates that the UTRAN clock is running at a lower frequency than GPS clock.
T _{UTRAN-GPS} Drift Rate Quality	M		INTEGER (050)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ drift rate measurements in 1/256 chip per second. $T_{UTRAN-GPS}$ Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Drift Rate, where x is the reported $T_{UTRAN-GPS}$ Drift Rate and μ = $E[x]$ is the expectation value of x.

9.2.1.64B T_{UTRAN-GPS} Measurement Threshold Information

The $T_{UTRAN-GPS}$ Measurement Threshold Information defines the related thresholds for UTRAN GPS Timing of Cell Frames for UE Positioning measurements shall trigger the event On Modification.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
T _{UTRAN-GPS} Change Limit	0		INTEGER (1256)	Change of T _{UTRAN-GPS} value compared to previously reported value, which shall trigger a new report. Unit in 1/16 chip.
Predicted T _{UTRAN-GPS} Deviation Limit	0		INTEGER (1256)	Deviation of the predicated T _{UTRAN-GPS} from the latest measurement result, which shall trigger a new report. Unit in 1/16 chip.

9.2.1.64C T_{UTRAN-GPS} Accuracy Class

The $T_{UTRAN-GPS}$ Accuracy Class IE indicates the accuracy class of the UTRAN GPS Timing of Cell Frames for UE Positioning measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
T _{UTRAN-GPS} Accuracy Class			ENUMERATED (Accuracy Class A, Accuracy Class B, Accuracy Class C,)	More information about T _{UTRAN-GPS} Measurement Accuracy Class is included in [22].

9.2.1.65 UARFCN

Designates the central frequency of the channel number.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UARFCN			INTEGER (016383,)	Unit: MHz Range: 0 3276.6 MHz Step: 0.2 MHz (subclause 5.4.3 in [14] and [15])

9.2.1.65A UL Capacity Credit

The capacity credit indicates to the CRNC the Uplink capacity of a Local Cell or a Local Cell Group.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Capacity Credit			INTEGER (065535)	

9.2.1.65B UTRAN Cell Identifier (UC-Id)

The UC-Id (UTRAN Cell identifier) is the identifier of a cell in one UTRAN.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RNC-ld	М		9.2.1.53a	
C-Id	М		9.2.1.9	

9.2.1.66 UL FP Mode

This parameter defines if normal or silent mode of the Frame Protocol shall be used for the UL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL FP Mode			ENUMERATED (
			Normal,	
			Silent,	
)	

9.2.1.67 UL interference level

Void.

9.2.1.67A UL SIR

The UL SIR indicates a received UL SIR.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL SIR			INTEGER (-82173)	Value = UL SIR/10 Unit: dB Range: -8.2 +17.3 dB Step: 0.1 dB

9.2.2 FDD specific parameters

9.2.2.A Active Pattern Sequence Information

Defines the parameters for the compressed mode gap pattern sequence activation. For details see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CM Configuration Change	М		CFN	
CFN			9.2.1.7	
Transmission Gap Pattern		0 <maxt< td=""><td></td><td></td></maxt<>		
Sequence Status		GPS>		
>TGPS Identifier	M		INTEGER	If the group is not present,
			(1maxTGPS)	none of the pattern sequences
			,	are activated. References an
				already defined sequence.
>TGPRC	М		INTEGER (0511)	The number of transmission
				gap patterns within the
				Transmission Gap Pattern
				Sequence.
				"0"=Infinity
>TGCFN	М		CFN	Connection Frame Number of
			9.2.1.7	the first frame of the first
				pattern 1 within the
				Transmission Gap Pattern
				Sequence.

Range Bound	Explanation
maxTGPS	Maximum number of active pattern sequences. Value 6.

9.2.2.B Adjustment Period

The Adjustment Period IE defines the period to be used for power balancing.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Adjustment Period			INTEGER (1256)	Unit: Frames

9.2.2.C Adjustment Ratio

The Adjustment Ratio IE (Radj) defines the convergence rate used for the associated Adjustment Period.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Adjustment Ratio			INTEGER (0100)	Unit: None
				Range: 01
				Step: 0.01

9.2.2.D AICH Power

The *AICH Power* IE indicates a power level (measured as the power per transmitted acquisition indicator when several AIs are transmitted in parallel) relative to the primary CPICH power configured in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
AICH Power			INTEGER (-22+5)	Unit: dB
				Range: -22 +5 dB
				Step: 1 dB

9.2.2.1 AICH Transmission Timing

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
AICH Transmission Timing			ENUMERATED (0, 1)	See parameter AICH_Transmission_Timing in ref. [7].

9.2.2.1A AP Preamble Signature

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
AP Preamble Signature			INTEGER (015)	Described in ref. [9]

9.2.2.1B AP Sub Channel Number

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
AP Sub Channel Number			INTEGER (011)	Described in ref. [10]

9.2.2.1C CD Sub Channel Numbers

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CD Sub Channel Numbers			BIT STRING (12)	Each bit indicates availability for a subchannel, where the subchannels are numbered "subchannel 0" to "subchannel 11". The value 1 of a bit indicates that the corresponding subchannel is available and the value 0 indicates that it is not available. The order of bits is to be interpreted according to subclause 9.3.4. See also [10].

9.2.2.1D Channel Assignment Indication

The Channel Assingment Indication indicates whether CA is active or inactive. When CA is active, CPCH is in Versatile Channel Assingment Method (VCAM) mode and when CA is inactive, CPCH is in UE Channel Selection Method (UCSM) mode. In VCAM mode (CA active), CA message in CD/CA-ICH shall be sent.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Channel Assignment Indication			ENUMERATED (
			CA Active,	
			CA Inactive)	

9.2.2.2 Chip Offset

The Chip Offset is defined as the radio timing offset inside a radio frame. The Chip offset is used as offset for the DL DPCH relative to the Primary CPICH timing.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Chip Offset			INTEGER (038399)	Unit: chips

9.2.2.2A Closed Loop Timing Adjustment Mode

Indicates when the phase/amplitude adjustment is performed in the DL in relation to the receipt of the UL feedback command in case of closed loop mode transmit diversity on DPCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Closed Loop Timing			ENUMERATED (According to ref. [10]
Adjustment Mode			Offset1,	subclause 7.1:
			Offset2,	"Offset1" = slot(j+1)mod15
)	"Offset2" = slot(j+2)mod15

9.2.2.3 Common Channels Capacity Consumption Law

Void.

9.2.2.3A Compressed Mode Deactivation Flag

The Compressed Mode Deactivation Flag indicates whether Compressed Mode shall be deactivated or not in the new RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Compressed Mode			ENUMERATED (
Deactivation Flag			Deactivate,	
			Maintain Active)	

9.2.2.4 Compressed Mode Method

Void.

9.2.2.4A CPCH Allowed Total Rate

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CPCH Allowed Total Rate			ENUMERATED (15, 30, 60, 120, 240, 480, 960, 1920, 2880, 3840, 4800, 5760,)	Channel Symbol Rate Unit: ksps

9.2.2.4B CPCH Scrambling Code Number

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CPCH Scrambling Code			INTEGER (079)	Described in ref. [9]
Number				

9.2.2.4C CPCH UL DPCCH Slot Format

Indicates the slot format used in UL CPCH message control part, accordingly to ref. [7]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CPCH UL DPCCH Slot Format			INTEGER (02,)	

9.2.2.4D DCH FDD Information

The DCH FDD Information IE provides information for DCHs to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCH FDD Information		1 <maxno ofDCHs></maxno 		
>Payload CRC Presence Indicator	M		9.2.1.49	
>UL FP Mode	M		9.2.1.66	
>ToAWS	M		9.2.1.61	
>ToAWE	M		9.2.1.60	
>DCH Specific Info		1 <maxno ofDCHs></maxno 		
>>DCH ID	M		9.2.1.20	
>>Transport Format Set	M		9.2.1.59	For UL
>>Transport Format Set	M		9.2.1.59	For DL
>>Allocation/Retention Priority	М		9.2.1.1A	
>>Frame Handling Priority	M		9.2.1.30	
>>QE-Selector	M		9.2.1.50A	

Range Bound	Explanation	
maxnoofDCHs	Maximum number of DCHs for one UE	

9.2.2.4E DCHs FDD To Modify

The DCHs FDD To Modify IE provides information for DCHs to be modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCHs FDD To Modify		1 <maxno ofDCHs></maxno 		
>UL FP Mode	0		9.2.1.66	
>ToAWS	0		9.2.1.61	
>ToAWE	0		9.2.1.60	
>Transport Bearer Request Indicator	М		9.2.1.62A	
>DCH Specific Info		1 <maxno ofDCHs></maxno 		
>>DCH ID	M		9.2.1.20	
>>Transport Format Set	0		9.2.1.59	For the UL.
>>Transport Format Set	0		9.2.1.59	For the DL.
>>Allocation/Retention Priority	0		9.2.1.1A	
>>Frame Handling Priority	0		9.2.1.20	

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for one UE

9.2.2.5 D-Field Length

Void.

9.2.2.6 Dedicated Channels Capacity Consumption Law

Void.

9.2.2.7 Diversity Control Field

Void.

9.2.2.8 Diversity Indication

Void.

9.2.2.9 Diversity mode

Define the diversity mode to be applied.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Diversity Mode			ENUMERATED (None, STTD, Closed loop mode 1, Closed loop mode 2,)	

9.2.2.10 DL DPCH Slot Format

Indicates the slot format used in DPCH in DL, accordingly to ref. [7].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL DPCH Slot Format			INTEGER (016,)	

9.2.2.10A DL DPCH Timing Adjustment

The DL DPCH Timing Adjustment indicates that a timing adjustment of the related radio link is required. It also indicates whether the timing adjustment shall consist of a timing advance or a timing delay with respect to the SFN timing. The adjustment always consists of 256 chips.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL DPCH Timing Adjustment			ENUMERATED (The size of the timing
			timing advance,	adjustment is 256 chips.
			timing delay)	

9.2.2.11 DL frame type

Void.

9.2.2.12 DL or Global Capacity Credit

Void.

9.2.2.12A DL_power_averaging_window_size

The *DL_power_averaging_window_size* IE defines the window size when Limited Power Increase is used [10].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL_power_averaging_window _size			INTEGER (160)	Unit: inner loop power adjustments
				Range: 160 Step: 1 adjustment

9.2.2.12B DL Power Balancing Information

The *DL Power Balancing Information* IE provides information for power balancing to be activated in the relevant RL(s).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Power Adjustment Type	М		9.2.2.27	
DL Reference Power	C-		DL Power	Power on DPCH
	Common		9.2.1.21	
DL Reference Power	C-	1 <maxno< td=""><td></td><td></td></maxno<>		
Information	Individual	ofRLs>		
>RL ID	М		9.2.1.53	
>DL Reference Power	М		DL Power	Power on DPCH
			9.2.1.21	
Max Adjustment Step	C-		9.2.2.20	
	CommonO			
	rIndividual			
Adjustment Period	C-		9.2.2.A	
	CommonO			
	rIndividual			
Adjustment Ratio	C-		9.2.2.B	
	CommonO			
	rIndividual			

Condition	Explanation
Common	The IE shall be present if the Power Adjustment Type IE is set to
	"Common".
Individual	The IE shall be present if the Power Adjustment Type IE is set to
	"Individual".
CommonOrIndividual	The IE shall be present if the Power Adjustment Type IE is set to
	"Common" or 'Individual".

Range Bound	Explanation
maxnoofRLs	Maximum number of Radio Links for a UE

9.2.2.12C DL Power Balancing Activation Indicator

The DL Power Balancing Activation Indicator IE indicates that the power balancing is activated in the RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Power Balancing Activation			ENUMERATED	
Indicator			(DL Power	
			Balancing Activated)	

9.2.2.12D DL Power Balancing Updated Indicator

The *DL Power Balancing Updated Indicator* IE indicates that the power balancing related parameters is updated in the RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Power Balancing Updated			ENUMERATED (DL	
Indicator			Power Balancing	
			Activated)	

9.2.2.13 DL Scrambling Code

DL scrambling code to be used by the RL. One cell may have multiple DL scrambling codes available.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Scrambling Code			INTEGER (015)	"0" = Primary scrambling code of the cell "1""15" = Secondary scrambling code

9.2.2.13A DL TPC Pattern 01 Count

The *DL TPC Pattern 01 Count* IE contains the value of the parameter n, which is used for determining the DL TPC pattern on Radio Links marked with "first RLS" by the *First RLS indicator* IE before UL synchronisation is achieved.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL TPC Pattern 01 Count			INTEGER(030,)	

9.2.2.13B DSCH FDD Information

The DSCH FDD Information IE provides information for DSCHs to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
DSCH FDD Information		1 <max noofDS CHs></max 			_	
>DSCH ID	M		9.2.1.27		_	
>Transport Format Set	М		9.2.1.59	For DSCH	_	
>Allocation/Retention Priority	M		9.2.1.1A		_	
>Frame Handling Priority	M		9.2.1.30		_	
>ToAWS	M		9.2.1.61		_	
>ToAWE	M		9.2.1.60		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore

Range Bound	Explanation
maxnoofDSCHs	Maximum number of DSCHs for one UE

9.2.2.13C DPC Mode

The DPC Mode IE indicates the DPC mode to be applied [10].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DPC Mode			ENUMERATED (Mode0, Mode1,)	"Mode0": The Node B shall estimate the UE transmitted TPC command and update the DL power in every slot "Mode1": The Node B shall estimate the UE transmitted TPC command over three slots and shall update the DL power in every three slots

9.2.2.13D DSCH FDD Common Information

The DSCH Common Information includes common information for all DSCHs for one UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Enhanced DSCH PC Indicator	0		9.2.2.13G	
Enhanced DSCH PC	C- EDSCHPC On		9.2.2.13E	

Condition Explanation	
EDSCHPCOn	The IE shall be present if the Enhanced DSCH PC Indicator IE is set
	to "Enhanced DSCH PC Active in the UE".

9.2.2.13E Enhanced DSCH PC

The Enhanced DSCH PC includes all the parameters which are needed for DSCH power control improvement during soft handover.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Enhanced DSCH PC Wnd	M		9.2.2.13H	
Enhanced DSCH PC Counter	M		9.2.2.13F	
Enhanced DSCH Power Offset	M		9.2.2.131	

9.2.2.13F Enhanced DSCH PC Counter

The Enhanced DSCH PC Counter parameter gives the number of correct cell ID command to receive in the averaging window, *Enhanced DSCH PC Wnd* IE, see ref. [10] subclause 5.2.2.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Enhanced DSCH PC Counter			INTEGER(150)	

9.2.2.13G Enhanced DSCH PC Indicator

The Enhanced DSCH PC Indicator indicates whether Enhanced DSCH PC is in use by the UE or not.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Enhanced DSCH PC Indicator			ENUMERATED (
			Enhanced DSCH PC	
			Active in the UE,	
			Enhanced DSCH PC	
			not Active in the UE)	

9.2.2.13H Enhanced DSCH PC Wnd

The Enhanced DSCH PC Wnd parameter shows the window size to decide primary or non-primary cell, see ref. [10] subclause 5.2.2.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Enhanced DSCH PC Wnd			INTEGER (110)	

9.2.2.13I Enhanced DSCH Power Offset

The Enhanced DSCH Power Offset parameter gives the power offset to be added on DSCH when cell is decided to be primary.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Enhanced DSCH Power Offset			INTEGER (-150)	Unit: dB
				Range: -15 0 dB
				Step: 1 dB

9.2.2.14 FDD DL Channelisation Code Number

The DL Channelisation Code Number indicates the DL Channelisation Code number for a specific DL physical channel.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
FDD DL ChannelisationCode Number			INTEGER (0511)	According to the mapping in [9]. The maximum value is equal to the DL spreading factor –1.

9.2.2.14A FDD DL Code Information

The FDD DL Code Information IE provides DL Code information for the RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
FDD DL Code Information		1 <maxno ofcodes=""></maxno>		
>DL Scrambling Code	М		9.2.2.13	
>FDD DL Channelisation Code Number	М		9.2.2.14	
>Transmission Gap Pattern Sequence Code Information	0		9.2.2.53B	

Range Bound	Explanation
maxnoofCodes	Maximum number of DL code information

9.2.2.15 FDD SCCPCH Offset

The Secondary CCPCH offset is defined as the time offset towards the Primary CCPCH in the cell. The offset is a multiple of 256 chips.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
FDD SCCPCH Offset			INTEGER (0149)	Unit: chip Range: 038144 chips Step: 256 chips See ref. [7]

9.2.2.16 FDD TPC DL Step Size

This parameter indicates step size for the DL power adjustment.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
FDD TPC Downlink Step Size			ENUMERATED (0.5, 1, 1.5, 2,)	Unit: dB

9.2.2.16A First RLS Indicator

The *First RLS Indicator* IE indicates if a specific Radio Link and all Radio Links which are part of the same Radio Link Set, shall be considered as the first radio links established towards the UE or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
First RLS Indicator			ENUMERATED (First RLS, Not First RLS,	
			l)	

9.2.2.17 Gap Period

Void.

9.2.2.18 Gap Position Mode

Void.

9.2.2.18A Limited Power Increase

The parameter is used for a more efficient use of the inner loop DL power control for non real time data.

If the limited power increase is used, the Node B shall use the limited power increase algorithm as specified in [10], subclause 5.2.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Limited Power Increase			ENUMERATED (
			Used,	
			Not Used)	

9.2.2.18B Inner Loop DL PC Status

The *Inner Loop DL PC Status* IE indicates whether inner loop DL control shall be active or inactive for all radio links associated with the context identified by the *Node B Communication Context Id* IE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Inner Loop DL PC Status			ENUMERATED (
			Active,	
			Inactive)	

9.2.2.18C IPDL FDD Parameters

The IPDL FDD Parameters IE provides information about IPDL to be applied for FDD when activated.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IP SpacingFDD	M		ENUMERATED (5, 7, 10, 15, 20, 30, 40, 50,)	See [10]
IP Length	M		ENUMERATED (5, 10)	See [10]
Seed	M		INTEGER (063)	See [10]
Burst Mode Parameters	0		9.2.1.5A	

9.2.2.18D HS-DSCH FDD Information

The HS-DSCH Information provides information for HS-DSCH MAC-d flows to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS-DSCH MAC-d Flow Specific Information		1 <maxno ofMACdFl ows></maxno 		
>HS-DSCH MAC-d Flow ID	M		9.2.1.311	
>BLER	M		9.2.1.4A	
>Allocation/Retention Priority	М		9.2.1.1A	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.
>Priority Queue Information	M	1 <maxno ofPrioQue ues></maxno 		
>>Priority Queue ID	M		9.2.1.49C	
>>Scheduling Priority Indicator	М		9.2.1.53H	
>>MAC-d PDU Size Index		1 <maxno ofMACdP DUindexes</maxno 		
>>>SID	M		9.2.1.531	
>>>MAC-d PDU Size	M		9.2.1.38A	
UE Capabilities Information		1		
>Max TrCH Bits Per HS- DSCH TTI	M		ENUMERATED (7300, 14600, 20456, 28800,)	
>HS-DSCH Multi-Code Capability	М		ENUMERATED (5, 10, 15,)	
>Min Inter-TTI Interval	M		INTEGER (13,)	
>MAC-hs Reordering Buffer Size	M		INTEGER (1300,)	Total combined receiving buffer capability in RLC and MAC-hs in kBytes
HARQ Memory Partitioning		1 <maxno ofHARQpr ocesses></maxno 		
>Process Memory Size	М		INTEGER (1172800,)	
Measurement Feedback Offset	М		INTEGER (079,)	

Range Bound	Explanation
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows
maxnoofPrioQueues	Maximum number of Priority Queues
maxnoofHARQprocesses	Maximum number of HARQ processes for one UE
maxnoofMACdPDUindexes	Maximum number of different MAC-d PDU SIDs
maxAllowedinterTTI	Maximum Inter-TTI Interval that should be supported by any UE
maxRecordBuffSize	Maximum MAC-hs re-ordering buffer size
maxProcessMemSize	Maximum HARQ process memory size

9.2.2.18E HS-DSCH FDD Information Response

The HS-DSCH Information Response provides information for HS-DSCH that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS-DSCH MAC-d Flow Specific Information Response		1 <maxno ofMACdFl ows></maxno 		
>HS-DSCH MAC-d Flow ID	M	01107	9.2.1.311	
>Binding ID	0		9.2.1.4	
>Transport Layer Address	0		9.2.1.63	
>HS-DSCH Initial Capacity Allocation	0		9.2.1.31Ha	
HS-SCCH Code		1 <maxno ofHSSCC Hcodes></maxno 		
>Code Number	M		INTEGER (0127)	
Measurement Feedback Reporting Cycle k1	M		Measurement Feedback Reporting Cycle 9.2.2.21B	employed by the UE when not in soft handover
Measurement Feedback Reporting Cycle k2	M		Measurement Feedback Reporting Cycle 9.2.2.21B	employed by the UE when in soft handover

Range Bound	Explanation
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows
maxnoofPrioQueues	Maximum number of Priority Queues
maxnoofMACdPDUindexes	Maximum number of MAC-d PDU Size Indexes
maxnoofHSSCCHcodes	Maximum number of HS-SCCH codes
maxCodeNumComp	Maximum number of codes at the defined spreading factor, within the complete code tree

9.2.2.18F HS-PDSCH FDD Code Information

This parameter defines the codes which will be assigned for HS-PDSCHs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number Of HS-PDSCH Codes	M		INTEGER (0maxCodeNumCo mp-1)	
Start Code Number	C- NumCode s		INTEGER (0maxCodeNumCo mp-1)	

Condition	Explanation
NumCodes	The IE shall be present if the Number of HS-PDSCH Codes IE is set
	to a value greater than 0.

Range Bound	Explanation
MaxCodeNumComp	Maximum number of codes at the defined spreading factor, within the
	complete code tree

9.2.2.18G HS-SCCH FDD Code Information

This parameter defines the codes which will be assigned for HS-SCCH. The Node B will assign codes for HS-SCCHs among these codes when it sets up a HS-DSCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS-SCCH Code		0 <maxno ofHSSCC Hs></maxno 		
>Code Number	M		INTEGER (0maxCodeNumCo mp-1)	

Range Bound	Explanation
MaxnoofHSSCCHs	Maximum number of HS-SCCHs for one cell.
MaxCodeNumComp	Maximum number of codes at the defined spreading factor, within the complete code tree

9.2.2.18H HS-SCCH ID

Void.

9.2.2.19 Max Adjustment Period

Void.

9.2.2.20 Max Adjustment Step

Defines the maximum allowed value for the change of DL power level during a certain number of slots that can be utilised by the downlink power balancing algorithm. *Max Adjustment Step* IE defines a time period, in terms of number of slots, in which the accumulated power adjustment shall be maximum 1dB. This value does not include the DL inner loop PC adjustment.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Max Adjustment Step			INTEGER (110)	Unit: Slots

9.2.2.20A Max Number Of PCPCHs

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Max Number Of PCPCHs			INTEGER (164)	

9.2.2.21 Maximum Number Of UL DPDCHs

Maximum number of uplink DPDCHs to be used during the connection. Needed by the rate matching algorithm.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Max Number Of UL DPDCHs			INTEGER (16)	

9.2.2.21A Maximum PDSCH Power

The *Maximum PDSCH Power* IE can contain for each a PDSCH SF a maximum PDSCH power. The maximum PDSCH power shall be applied for each individual channelisation code at the concerning SF when used for a PDSCH.

Reference		IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
-----------	--	---------------	----------	-------	--------------------------	-----------------------

Maximum PDSCH Power SF4	0	DL Power 9.2.1.21
Maximum PDSCH Power SF8	0	DL Power 9.2.1.21
Maximum PDSCH Power SF16	0	DL Power 9.2.1.21
Maximum PDSCH Power SF32	0	DL Power 9.2.1.21
Maximum PDSCH Power SF64	0	DL Power 9.2.1.21
Maximum PDSCH Power SF128	0	DL Power 9.2.1.21
Maximum PDSCH Power SF256	0	DL Power 9.2.1.21

9.2.2.21B Measurement Feedback Reporting Cycle

The Measurement Feedback Reporting Cycle IE provides the duration of the measurement feedback reporting cycle.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Measurement Feedback Reporting Cycle			ENUMERATED (0, 1, 5, 10, 20, 40,	Multiples of 2 ms intervals
			80,)	

9.2.2.22 Minimum UL Channelisation Code Length

Minimum UL channelisation code length (spreading factor) of a DPDCH which is used during the connection. Needed by rate matching algorithm.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Min UL Channelisation Code Length			ENUMERATED (4, 8, 16, 32, 64, 128, 256,)	

9.2.2.23 Multiplexing Position

Multiplexing Position specifies whether fixed or flexible positions of transport channels shall be used in the physical channel.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Multiplexing Position			ENUMERATED (
			Fixed,	
			Flexible)	

9.2.2.23A N EOT

The N_EOT is defined as number of End of Transmission for release of PCPCH transmission.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
N_EOT			INTEGER (08)	Unit: TTI Value "8" is never used in this
				release.

9.2.2.23B NF max

The NF_max is defined as maximum number of Frame in a PCPCH message data part.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NF_max			INTEGER (164,)	

9.2.2.23C N_Start_Message

The N_Start_Message is defined as number of Frames for start message of DL DPDCHs for a CPCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
N_Start_Message			INTEGER (18)	

9.2.2.24 Pattern Duration (PD)

Void.

9.2.2.24A PCP Length

Indicates CPCH power control preamble length.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PCP Length			ENUMERATED (0, 8)	

9.2.2.25 PDSCH Code Mapping

This IE indicates the association between each possible value of TFCI(field 2) and the corresponding PDSCH channelisation code(s). There are three fundamentally different ways that the UTRAN must choose between in order to signal the mapping information, these are described below. The signalling capacity consumed by the different methods will vary depending on the way in which the UTRAN configures usage of the DSCH. A fourth option is also provided which allows the UTRAN to replace individual entries in the TFCI(field 2) to PDSCH code mapping table with new PDSCH code values.

Method #1 - Using code range

The mapping is described in terms of a number of groups, each group associated with a given spreading factor. Each TFCI(field2) value corresponds to a given PDSCH channelisation code or set of PDSCH codes for multi-code. The Node B maps TFCI(field2) values to PDSCH codes in the following way:

- The PDSCH codes used for TFCI(field 2) = 0 are given by the SF of the Code Group 1 (i.e. first instance in *PDSCH Code Mapping*) and the code numbers between CodeNumber₀ (where CodeNumber₀ = "Start Code Number" of Code Group 1) and CodeNumber₀ + "Multi-Code Info" 1.
- This continues with unit increments in the value of TFCI (Field2) mapped to either unit increments in code numbers or groups of contiguous code numbers in case of multi-code, this until "Stop Code Number" is reached: So the PDSCH codes used for TFCI(field 2) = k (for k > 0 and k < ("Stop Code Number" "Start Code Number" + 1) DIV k) are given by the SF of the Code Group 1 and the code numbers between CodeNumber_k = CodeNumber_{k-1} + "Multi-Code Info" and CodeNumber_k + "Multi-Code Info" 1.
 If "Stop Code Number" = "Start Code Number" + "Multi-Code Info" 1 then this is to be interpreted as defining the mapping between the channelisation code(s) and a single TFCI.

- The Node B constructs its mapping table by repeating this process for all the Code Groups in the order they are instantiated in *PDSCH Code Mapping*. The first TFCI(field 2) value used in each group is the largest TFCI(field 2) value reached in the previous group incremented by one.

Note: This imposes that "Stop Code Number" – "Start Code Number" + 1 is a multiple of the value "Multi-Code Info" for each instance of *PDSCH Code Mapping*. Furthermore, in the case where multi-code is not used, then "Multi-Code Info" = 1 and the process above also applies.

Method #2 - Using TFCI range

The mapping is described in terms of a number of groups, each group corresponding to a given PDSCH channelisation code or codes for multicode.

- The set of PDSCH codes specified in the first instance applies for all values of TFCI(field 2) between 0 and the specified "Max TFCI(field2)".
- The process continues in the same way for the following groups with the TFCI(field 2) value starting at the largest value reached in the previous instance incremented by one.

 So the set of PDSCH codes specified in a given instance apply for all the values of TFCI(field 2) between the "Max TFCI(field2) value" specified in the previous instance incremented by one and the specified "Max TFCI(field2)" of the considered instance.

A set of PDSCH codes is composed of all the codes between "Code Number" and "Code Number" + "Multi-Code Info" – 1. So if multi-code is not used, the set of PDSCH codes is reduced to one element indicated by the *Code Number* IE.

Method #3 - Explicit

The mapping between TFCI(field 2) value and PDSCH channelisation code (or a set of PDSCH codes for multicode) is spelt out explicitly for each value of TFCI (field2).

A set of PDSCH codes is composed of all the codes between "Code Number" and "Code Number" + "Multi-Code Info" – 1. So if multi-code is not used, the set of PDSCH codes is reduced to one element indicated by the *Code Number* IE.

Method #4 - Replace

The "TFCI (field2)" value(s) for which the mapping to PDSCH channelisation code (or a set of PDSCH codes for multicode) is changed are explicitly signalled. Furthermore, the new mapping between TFCI(field 2) value and PDSCH channelisation code(s) is spelt out explicitly for each value of TFCI (field2).

A set of PDSCH codes is composed of all the codes between "Code Number" and "Code Number" + "Multi-Code Info" – 1. So if multi-code is not used, the set of PDSCH codes is reduced to one element indicated by the *Code Number* IE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Scrambling Code	М		9.2.2.13	Scrambling code on which PDSCH is transmitted.
CHOICE Signalling Method				
>Code Range >>PDSCH Code Mapping		1 <maxno CodeGrou ps></maxno 		
>>>Spreading Factor	M		ENUMERATED (4, 8, 16, 32, 64, 128, 256,)	
>>>Multi-Code Info	M		INTEGER (116)	
>>>Start Code Number	M		INTEGER (0maxCodeNumCo mp-1)	PDSCH code start, Numbering as described in [18]. The maximum value is equal to the Spreading Factor - 1.
>>>Stop Code Number	M		INTEGER (0maxCodeNumCo mp-1)	PDSCH code stop, Numbering as described in [18]. The maximum value is equal to the Spreading Factor - 1.
>TFCI Range				
>>DSCH Mapping		1 <maxno TFCIGrou ps></maxno 		
>>>Max TFCI(field2) Value	M		INTEGER (11023)	This is the maximum value in the range of TFCI(field 2) values for which the specified PDSCH code applies
>>>Spreading Factor	M		ENUMERATED (4, 8, 16, 32, 64, 128, 256,)	SF of PDSCH code
>>>Multi-Code Info	M		INTEGER (116)	
>>>Code Number	M		INTEGER (0maxCodeNumCo mp-1)	Code number of PDSCH code. Numbering as described in [18]. The maximum value is equal to the Spreading Factor - 1.
>Explicit				, , , , , , , , , , , , , , , , , , ,
>>PDSCH Code		1 <maxtf Cl_2_Com bs></maxtf 		The first instance of the parameter PDSCH code corresponds to TFCI (field2) = 0, the second to TFCI(field 2) = 1 and so on.
>>>Spreading Factor	М		ENUMERATED (4, 8, 16, 32, 64, 128, 256,)	SF of PDSCH code
>>>Multi-Code Info	М		INTEGER (116)	
>>>Code Number	М		INTEGER (0maxCodeNumCo mp-1)	Code number of PDSCH code. Numbering as described in [18]. The maximum value is equal to the Spreading Factor - 1.
>Replace		4 TE		
>>Replaced PDSCH Code		1 <maxtf CI_2_Com bs></maxtf 		
>>>TFCI (field2)	М		INTEGER (01023)	Value of TFCI(field 2) for which PDSCH code mapping will be changed
>>>Spreading Factor	М		ENUMERATED (4, 8, 16, 32, 64, 128, 256,)	SF of PDSCH code
>>>Multi-Code Info	M		INTEGER (116)	(5555)
>>>Code Number	M		INTEGER (0maxCodeNumCo mp-1)	Code number of PDSCH code. Numbering as described in [18].

		The maximum value is equal
		to the Spreading Factor - 1.

Range Bound	Explanation
maxCodeNumComp	Maximum number of codes at the defined spreading factor, within the
	complete code tree.
maxTFCI_2_Combs	Maximum number of TFCI (field 2) combinations (given by 2 raised to
	the power of the length of the TFCI field 2)
maxNoTFCIGroups	Maximum number of groups, each group described in terms of a
	range of TFCI(field 2) values for which a single PDSCH code applies.
maxNoCodeGroups	Maximum number of groups, each group described in terms of a
	range of PDSCH channelisation code values for which a single
	spreading factor applies.

9.2.2.26 PICH Mode

The number of paging indicators (PIs) in a PICH frame.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PICH Mode			ENUMERATED	Number of PIs per frame
			(18, 36, 72, 144,)	

9.2.2.27 Power Adjustment Type

Defines the characteristic of the power adjustment.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Power Adjustment Type			ENUMERATED (
			None,	
			Common,	
			Individual)	

9.2.2.28 Power Control Mode

Void.

9.2.2.29 Power Offset

This IE defines a power offset relative to the Downlink transmission power of a DPDCH or a Secondary CCPCH data field or a DL-DPCCH for CPCH pilot field..

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Power Offset			INTEGER (024)	Unit: dB
				Range: 06 dB
				Step: 0.25 dB

9.2.2.29A Power_Raise_Limit

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Power_Raise_Limit			INTEGER (010)	Unit: dB Range: 010 dB Step: 1 dB

9.2.2.30 Power Resume Mode

Void.

9.2.2.31 Preamble Signature

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Preamble Signatures			BIT STRING (16)	Each bit indicates availability for a signature, where the signatures are numbered "signature 0" up to "signature 15". The value 1 of a bit indicates that the corresponding signature is available and the value 0 that it is not available. The order of bits is to be interpreted according to subclause 9.3.4. See also [9].

9.2.2.32 Preamble Threshold

The IE sets the threshold for preamble detection. The ratio between received preamble power during the preamble period and interference level shall be above this threshold in order to be acknowledged.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Preamble Threshold			INTEGER (072)	Unit: dB Range: -36 0 dB Step: 0.5 dB

9.2.2.33 Primary CPICH Power

The Primary CPICH power is the power that shall be used for transmitting the P-CPICH in a cell. The reference point is the antenna connector.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Primary CPICH Power			INTEGER (-100500)	Value = Primary CPICH Power/10 Unit: dBm Range: -10.0+50.0 dBm Step: 0.1 dB

9.2.2.34 Primary Scrambling Code

The Primary scrambling code to be used in the cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Primary Scrambling Code			INTEGER (0511)	

9.2.2.35 Propagation Delay

The Propagation delay is the one-way propagation delay of the radio signal from the MS to the Node B.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Propagation Delay			INTEGER (0255)	Unit: chip
				Range: 0765 chips
				Step: 3 chips

9.2.2.36 QE-Selector

Void.

9.2.2.36A Qth Parameter

This parameter indicates the Quality threshold for reliable detection of Primary Cell ID in SSDT [10].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Qth Parameter			INTEGER (- 200)	Unit dB Step 1 dB

9.2.2.37 RACH Slot Format

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RACH Slot Format			ENUMERATED (03)	See ref. [7].

9.2.2.38 RACH Sub Channel Numbers

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RACH Sub Channel Numbers			BIT STRING (12)	Each bit indicates availability for a subchannel, where the subchannels are numbered "subchannel 0" to "subchannel 11". The value 1 of a bit indicates that the corresponding subchannel is available and the value 0 indicates that it is not available. The order of bits is to be interpreted according to subclause 9.3.4.

9.2.2.39 RL Set ID

The RL Set ID uniquely identifies one RL Set within a Node B Communication Context.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RL Set ID			INTEGER (031)	

9.2.2.39A Received Total Wide Band Power

The Received total wide band power indicates the UL interference at a certain cell under CRNC, see ref. [4].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Received Total Wide Band			INTEGER (0621)	According to mapping in [22].
Power				

9.2.2.40 S-Field Length

The UE uses the S Field of the UL DPCCH slot to send the SSDT Cell ID to the network.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
S Field Length			ENUMERATED	
-			(1, 2,)	

9.2.2.41 Scrambling Code Change

Void.

9.2.2.42 Scrambling Code Number

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Scrambling Code Number			INTEGER (015)	Identification of scrambling code see ref. [9].

9.2.2.43 Secondary CCPCH Slot Format

IE/Grou	ıp Name	Presence	Range	IE Type and Reference	Semantics Description
Secondary CC	PCH Slot			INTEGER (017,)	
Format					

9.2.2.44 SSDT Cell Identity

The SSDT Cell ID is a temporary ID for SSDT assigned to a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSDT Cell Identity			ENUMERATED	
			l (a. b h)	

9.2.2.44A SSDT Cell Identity For EDSCHPC

The SSDT Cell Identity for EDSCHPC is a temporary ID for enhanced DSCH power control assigned to a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSDT Cell Identity For EDSCHPC			SSDT Cell Identity 9.2.2.44	

9.2.2.45 SSDT Cell ID Length

The SSDT Cell ID Length parameter shows the length of the SSDT Cell ID.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell ID Length			ENUMERATED (
			Short,	
			Medium,	
			Long)	

9.2.2.46 SSDT Support Indicator

The SSDT Support Indicator indicates whether a RL supports SSDT or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSDT Support Indicator			ENUMERATED (SSDT Supported, SSDT Not Supported)	

9.2.2.47 SSDT Indication

The SSDT Indication indicates whether SSDT is in use by the UE or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSDT Indication			ENUMERATED (SSDT Active in the UE, SSDT Not Active in the UE)	

9.2.2.48 STTD Indicator

Indicates if STTD shall be active or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
STTD Indicator			ENUMERATED (active, inactive,)	

9.2.2.49 T Cell

Timing delay used for defining start of SCH, CPICH and the DL scrambling code(s) in a cell relative BFN. Resolution 256 chips.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
T Cell			ENUMERATED (0, 1,,9)	Unit: chip Range: 02304 chips Step: 256 chips See ref. [17]

9.2.2.49A TFCI2 Bearer Information Response

The *TFCI2 Bearer Information Response* IE provides information for TFCI2 bearer that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Binding ID	M		9.2.1.4	
Transport Laver Address	M		9.2.1.63	

9.2.2.50 TFCI Signalling Mode

This parameter indicates if the normal or split mode is used for the TFCI. In the event that the split mode is to be used then the IE indicates whether the split is "Hard" or "Logical", and in the event that the split is "Logical" the IE indicates the number of bits in TFCI (field 2).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI Signalling Option	М		ENUMERATED (Normal, Split)	"Normal" : meaning no split in the TFCI field (either "Logical" or "Hard") "Split" : meaning there is a split in the TFCI field (either "Logical" or "Hard")
Split type	C-lfSplit		ENUMERATED (Hard, Logical)	"Hard": meaning that TFCI (field 1) and TFCI (field 2) are block coded separately. "Logical": meaning that on the physical layer TFCI (field 1) and TFCI (field 2) are concatenated, field 1 taking the most significant bits and field 2 taking the least significant bits). The whole is then encoded with a single block code.
Length Of TFCI2	0		INTEGER (110)	This IE indicates the length measured in number of bits of TFCI (field2).

Condition	Explanation		
IfSplit	The IE shall be present if the TFCI Signalling Option IE is set to		
	"Split".		

9.2.2.51 TGD

Void.

9.2.2.52 TGL

Void.

9.2.2.53 Transmit Diversity Indicator

The Transmit Diversity Indicator indicates whether transmit diversity shall be active or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmit Diversity Indicator			ENUMERATED (
			active,	
			inactive)	

9.2.2.53A Transmission Gap Pattern Sequence Information

Defines the parameters for the compressed mode gap pattern sequence. For details see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission Gap Pattern Sequence Information		1 <maxt GPS></maxt 		
>TGPS Identifier	M		INTEGER (1maxTGPS)	Transmission Gap Pattern Sequence Identifier: Establish a reference to the compressed mode pattern sequence. Up to <maxtgps> simultaneous compressed mode pattern sequences can be used.</maxtgps>
>TGSN	М		INTEGER (014)	Transmission Gap Starting Slot Number: The slot number of the first transmission gap slot within the TGCFN.
>TGL1	M		INTEGER (114)	The length of the first Transmission Gap within the transmission gap pattern expressed in number of slots.
>TGL2	0		INTEGER (114)	The length of the second Transmission Gap within the transmission gap pattern. If omitted, then TGL2=TGL1.
>TGD	M		INTEGER (0, 15 269)	Transmission Gap Distance: indicates the number of slots between the starting slots of two consecutive transmission gaps within a transmission gap pattern. If there is only one transmission gap in the transmission gap pattern, this parameter shall be set to "0" ("0" =undefined).
>TGPL1	М		INTEGER (1144,)	The duration of transmission gap pattern 1 in frames.
>TGPL2	0		INTEGER (1144,)	The duration of transmission gap pattern 2 in frames. If omitted, then TGPL2=TGPL1.
>UL/DL Mode	М		ENUMERATED (UL only, DL only, UL/DL)	Defines whether only DL, only UL or combined UL/DL compressed mode is used.
>Downlink Compressed Mode Method	C-DL		ENUMERATED (Puncturing, SF/2, Higher Layer Scheduling,)	Method for generating downlink compressed mode gap None means that compressed mode pattern is stopped.
>Uplink Compressed Mode Method	C-UL		ENUMERATED (SF/2, Higher Layer Scheduling,)	Method for generating uplink compressed mode gap.
>Downlink Frame Type	М		ENUMERATED (A, B,)	Defines if frame structure type "A" or "B" shall be used in downlink compressed mode.
>DeltaSIR1	M		INTEGER (030)	Delta in SIR target value to be set in the Node B during the frame containing the start of the first transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase). Unit: dB Range: 03 dB Step: 0.1 dB

>DeltaSIRafter1	M	INTEGER (030)	Delta in SIR target value to be set in the Node B one frame after the frame containing the start of the first transmission gap in the transmission gap pattern. Unit: dB Range: 03 dB Step: 0.1 dB
>DeltaSIR2	0	INTEGER (030)	Delta in SIR target value to be set in the Node B during the frame containing the start of the second transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase). When omitted, DeltaSIR2 = DeltaSIR1. Unit: dB Range: 03 dB Step: 0.1 dB
>DeltaSIRafter2	0	INTEGER (030)	Delta in SIR target value to be set in the Node B one frame after the frame containing the start of the second transmission gap in the transmission gap pattern. When omitted, DeltaSIRafter2 = DeltaSIRafter1. Unit: dB Range: 03 dB Step: 0.1 dB

Condition	Explanation
UL	The IE shall be present if the UL/DL mode IE is set to "UL only" or
	"UL/DL".
DL	The IE shall be present if the <i>UL/DL mode</i> IE is set to "DL only" or
	"UL/DL".

Range Bound	Explanation
maxTGPS	Maximum number of transmission gap pattern sequences

9.2.2.53B Transmission Gap Pattern Sequence Code Information

This IE indicates whether the alternative scrambling code shall used for the Downlink compressed mode method or not in the Transmission Gap Pattern Sequence. For details see [9].

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Transmission Gap Pattern Sequence Code Information			ENUMERATED (Code Change, No Code Change)	Indicates whether the alternative scrambling code is used for compressed mode method "SF/2".

9.2.2.54 UL/DL compressed mode selection

Void.

9.2.2.55 UL delta SIR

Void.

9.2.2.56 UL delta SIR after

Void.

9.2.2.57 UL DPCCH Slot Format

Indicates the slot format used in DPCCH in UL, according to ref. [7].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL DPCCH Slot Format			INTEGER (05,)	

9.2.2.58 UL SIR

Void.

9.2.2.59 UL Scrambling Code

The UL Scrambling Code is the scrambling code used by UE. Every UE has its specific UL Scrambling Code.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
UL Scrambling Code Number	M		INTEGER (02 ²⁴ -1)	
UL Scrambling Code Length	M		ENUMERATED (
			Short,	
			Long)	

9.2.2.60 UL Capacity Credit

Void.

9.2.3 TDD specific Parameters

9.2.3.1 Block STTD Indicator

Void.

9.2.3.2 Burst Type

Void.

9.2.3.3 CCTrCH ID

The CCTrCH ID for dedicated and shared channels identifies unambiguously an uplink or downlink CCTrCH inside a Radio Link. For S-CCPCH, it identifies unambiguously a downlink CCTrCH within a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CCTrCH ID			INTEGER (015)	

9.2.3.4 Cell Parameter ID

The Cell Parameter ID identifies unambiguously the [3.84 Mcps TDD - Code Groups, Scrambling Codes, Midambles and Toffset] [1.28 Mcps TDD - SYNC-DL and SYNC-UL sequences, the scrambling codes and the midamble codes] (see ref. [20]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Parameter ID			INTEGER (0127,)	

9.2.3.4A Constant Value

The Constant Value is the power margin used by a UE to set the proper uplink power for a DCH, USCH, or a RACH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Constant Value			INTEGER	Unit: dB
			(-1010,)	Range: -10 +10 dB
				Step: 1 dB.

9.2.3.4B DL Timeslot ISCP

The DL Timeslot ISCP is the measured interference in a downlink timeslot at the UE, see ref. [5].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Timeslot ISCP			INTEGER (091)	According to mapping in ref. [5].

9.2.3.4C DCH TDD Information

The DCH TDD Information IE provides information for DCHs to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCH TDD Information		1 <maxno ofDCHs></maxno 	Reference	
>Payload CRC Presence	M		9.2.1.49	
Indicator				
>UL FP Mode	M		9.2.1.66	
>ToAWS	M		9.2.1.61	
>ToAWE	M		9.2.1.60	
>DCH Specific Info		1 <maxno ofDCHs></maxno 		
>>DCH ID	M		9.2.1.20	
>>CCTrCH ID	M		9.2.3.3	UL CCTrCH in which the DCH is mapped
>>CCTrCH ID	М		9.2.3.3	DL CCTrCH in which the DCH is mapped
>>Transport Format Set	M		9.2.1.59	For UL
>>Transport Format Set	М		9.2.1.59	For DL
>>Allocation/Retention	М		9.2.1.1A	
Priority	M		9.2.1.30	
>>Frame Handling Priority	C-		9.2.1.50A	
>>QE-Selector	CoorDCH		3.2.1.50A	

Condition	Explanation
CoorDCH	The IE shall be present if this DCH is part of a set of coordinated DCHs (number of instances of the <i>DCH Specific Info</i> IE is greater
	than 1).

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for one UE

9.2.3.4D DCHs TDD To Modify

The $DCHs\ TDD\ To\ Modify\ IE$ provides information for DCHs to be modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DCHs TDD To Modify		1 <maxno ofDCHs></maxno 		
>UL FP Mode	0		9.2.1.66	
>ToAWS	0		9.2.1.61	
>ToAWE	0		9.2.1.60	
>Transport Bearer Request Indicator	M		9.2.1.62A	
>DCH Specific Info		1 <maxno ofDCHs></maxno 		
>>DCH ID	M		9.2.1.20	
>>CCTrCH ID	0		9.2.3.3	UL CCTrCH in which the DCH is mapped.
>>CCTrCH ID	0		9.2.3.3	DL CCTrCH in which the DCH is mapped
>>Transport Format Set	0		9.2.1.59	For the UL.
>>Transport Format Set	0		9.2.1.59	For the DL.
>>Allocation/Retention Priority	0		9.2.1.1A	
>>Frame Handling Priority	0		9.2.1.30	

Range Bound	Explanation
maxnoofDCHs	Maximum number of DCHs for one UE

9.2.3.4E DL Timeslot Information

The *DL Timeslot Information* IE provides information for DL Time slot to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Timeslot Information		1 <maxno ofDLts></maxno 		
>Time Slot	М		9.2.3.23	
>Midamble Shift And Burst Type	М		9.2.3.7	
>TFCI Presence	М		9.2.1.57	
>DL Code Information	М		TDD DL Code Information 9.2.3.19B	

Range Bound	Explanation		
maxnoofDLts	Maximum number of Downlink time slots per Radio Link		

9.2.3.4F DL Time Slot ISCP Info

The DL Time Slot ISCP Info IE provides information for DL Interference level for each time slot within the Radio Link.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Time Slot ISCP Info		1 <maxno ofDLts></maxno 		
>Time Slot	M		9.2.3.23	
>DL Timeslot ISCP	M		9.2.3.4B	

Range Bound	Explanation
maxnoofDLts	Maximum number of Downlink time slots per Radio Link for 3.84Mcps
	TDD.

9.2.3.4G Cell Sync Burst Code

The Cell Sync Burst Code IE indicates which Code is used for a given Cell Sync Burst.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Sync Burst Code			INTEGER (07,)	

9.2.3.4H Cell Sync Burst Code Shift

The Cell Sync Burst Code Shift IE indicates the number of code shifts used for a given Cell Sync Burst.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Sync Burst Code Shift			INTEGER (07)	

9.2.3.4I CSB Measurement ID

The *Cell Sync Burst Measurement ID* IE uniquely identifies any cell synchronisation burst measurement per Node B Control Port.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CSB Measurement ID			INTEGER (065535)	

9.2.3.4J Cell Sync Burst Repetition Period

The *Cell Sync Burst Repetition Period* IE represents the number of consecutive Radio Frames after which the cell synchronisation burst transmission/measurement is repeated. This means that if the Time Slot K is assigned to the cell synchronisation burst transmission/measurements in the Radio Frame J, the cell synchronisation burst transmission/measurement is also in all the Radio Frames J+n*Repetition Period.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Sync Burst Repetition Period			INTEGER (04095)	

9.2.3.4K Cell Sync Burst SIR

Indicates the Signal to Interference Ratio of the cell synchronisation burst measurement according definition in [5].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Sync Burst SIR			INTEGER (031)	According to mapping in [23]

9.2.3.4L Cell Sync Burst Timing

The *Cell Sync Burst Timing* IE defines the time of start (defined by the first detected path in time) of the cell synchronisation burst of a neighbouring cell see [5].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Phase				According to mapping in [23]
>Initial Phase				
>>Cell Synch Burst Timing Value	M		INTEGER (0255)	
>Steady State Phase				
>>Cell Synch Burst Timing Value	M		INTEGER (01048575)	

9.2.3.4M Cell Sync Burst Timing Threshold

The *Cell Sync Burst Timing Threshold* IE defines the threshold that shall trigger a CELL SYNCHRONISATION REPORT message.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Sync Burst Timing Threshold			INTEGER (0254)	Unit: chip Range: 0 31.75 chips Step: 0.125 chip

9.2.3.4N CSB Transmission ID

The *Cell Sync Burst Transmisson ID* IE uniquely identifies any cell synchronisation burst transmission per Node B Control Port.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CSB Transmission ID			INTEGER (065535)	

9.2.3.40 DL Timeslot Information LCR

The *DL Timeslot Information LCR* IE provides information for DL Time slot to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Descriptions
DL Timeslot Information LCR		1 <maxno ofDLtsLCR ></maxno 		
>Time Slot LCR	М		9.2.3.24A	
>Midamble Shift LCR	М		9.2.3.7A	
>TFCI Presence	M		9.2.1.57	
>DL Code Information	M		TDD DL Code Information LCR 9.2.3.19C	

Range Bound	Explanation
maxnoofDLtsLCR	Maximum number of Downlink time slots per Radio Link for 1.28Mcps
	TDD.

9.2.3.4P DL Time Slot ISCP Info LCR

The *DL Time Slot ISCP Info LCR* IE provides information for DL Interference level for each time slot within the Radio Link.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL Time Slot ISCP Info LCR		1 <maxno ofDLtsLCR ></maxno 		
>Time Slot LCR	М		9.2.3.24A	
>DL Timeslot ISCP	М		9.2.3.4B	

Range Bound	Explanation
maxnoofDLtsLCR	Maximum number of Downlink time slots per Radio Link for 1.28Mcps
	TDD.

9.2.3.5 DPCH ID

The DPCH ID identifies unambiguously a DPCH inside a Radio Link.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DPCH ID			INTEGER (0239)	

9.2.3.5A DSCH TDD Information

The DSCH TDD Information IE provides information for DSCHs to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
DSCH TDD Information		1 <max noofDS CHs></max 			_	
>DSCH ID	M		9.2.1.27		_	
>CCTrCH ID	М		9.2.3.2	DL CCTrCH in which the DSCH is mapped	_	
>Transport Format Set	M		9.2.1.59	For DSCH	_	
>Allocation/Retention Priority	M		9.2.1.1A		_	
>Frame Handling Priority	М		9.2.1.30		_	
>ToAWS	М		9.2.1.61		_	
>ToAWE	М		9.2.1.60		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore

Range Bound	Explanation
MaxnoofDSCHs	Maximum number of DSCH for one UE

9.2.3.5B DwPCH Power

DwPCH Power is the power that shall be used for transmitting the DwPCH in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DwPCH Power			INTEGER (-150+400,)	Unit: dBm Range: -15+40 dBm Step: 0.1 dB

9.2.3.5C Frame Adjustment Value

The Frame Adjustment Value IE represents the frame number correction within the initial synchronisation phase.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Frame Adjustment Value			INTEGER (04095)	SFN _{new} =(SFN _{old} +Frame Adjustment Value) mod 4096

9.2.3.5D IPDL TDD Parameter

The IPDL TDD Parameter IE provides information about IPDL to be applied for 3.84Mcps TDD when activated.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IP SpacingTDD	M		ENUMERATED (30, 40, 50, 70, 100,)	See [21]
IP Start	M		INTEGER (04095)	See [21]

IP Slot	M	INTEGER (014) See [21]
IP PCCPCH	M	ENUMERATED (See [21]
		Switch off 1 frame,
		Switch off 2 frames)
Burst Mode parameters	0	9.2.1.5A

9.2.3.5E Max FPACH Power

Max FPACH Power is the maximum power that shall be used for transmitting the FPACH in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
FPACH Power			INTEGER	Unit: dBm
			(-150+400,)	Range: -15+40 dBm
				Step: 0.1 dB

9.2.3.5F HS-DSCH TDD Information

The HS-DSCH TDD Information provides information for HS-DSCH MAC-d flows to be established.

IE/Group Name	Presence	Range	IE Type	Semantics	Criticality	Assigned
			and Reference	Description		Criticality
HS-DSCH MAC-d Flow Specific Information		1 <maxno ofMACdFl ows></maxno 			_	
>HS-DSCH MAC-d Flow ID	М		9.2.1.311		_	
>BLER	М		9.2.1.4A		_	
>Allocation/Retention Priority	М		9.2.1.1A		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	_	
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	_	
>Priority Queue Information	М	1 <maxno ofPrioQue ues></maxno 			_	
>>Priority Queue ID	М		9.2.1.49C		_	
>>Scheduling Priority	М		9.2.1.53H		_	
Indicator						
>>MAC-d PDU Size Index		1 <maxno ofMACdP DUindexes</maxno 			_	
>>>SID	М		9.2.1.531		_	
>>>MAC-d PDU Size	M		9.2.1.38A		_	
UE Capabilities Information		1	0.2.1.0071		_	_
>HS-DSCH TrCh Bits Per TTI	М	,	ENUMERA TED (7040, 10228, 14080,)		-	
>HS-DSCH Multi-Code Capability	M		ENUMERA TED (8, 12, 16,)		-	
>MAC-hs Reordering Buffer Size	M		INTEGER (1300,)	Total combined receiving buffer capability in RLC and MAChs in kBytes	_	
HARQ Memory Partitioning		1 <maxno ofHARQpr ocesses></maxno 			_	
>Process Memory Size	М		INTEGER (1168960,)		-	

Range Bound	Explanation
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows
maxnoofPrioQueues	Maximum number of Priority Queues
maxnoofHARQprocesses	Maximum number of HARQ processes for one UE
maxnoofMACdPDUindexes	Maximum number of different MAC-d PDU SIDs
maxNoOfHSDSCHTrChBitsPerTTI	Maximum Number of HS-DSCH Transport Channel Bits per TTI

9.2.3.5G HS-DSCH TDD Information Response

The HS-DSCH TDD Information Response provides information for HS-DSCH MAC-d flows that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
HS-DSCH MAC-d Flow Specific Information		1 <max noofMA CdFlow</max 			-	
Response		S>	22121			
>HS-DSCH MAC-d Flow ID	M		9.2.1.311		_	
>Binding ID	0		9.2.1.4		_	
>Transport Layer Address	0		9.2.1.63		_	
> HS-DSCH Initial Capacity Allocation	0		9.2.1.31Ha		_	
HS-SCCH Specific Information Response		0 <max NoOfHS SCCHc odes></max 			GLOBAL	reject
>Time Slot	М	00002	9.2.3.23		_	
>Midamble Shift And Burst Type	M		9.2.3.7		_	
>TDD Channelisation Code	М		9.2.3.19		_	
>HS-SICH Information		1			_	
>>Time Slot	M		9.2.3.23		_	
>>Midamble Shift And Burst Type	M		9.2.3.7		_	
>>TDD Channelisation Code	M		9.2.3.19		_	
HS-SCCH Specific Information Response LCR		0 <max NoOfHS SCCHc odes></max 			GLOBAL	reject
>Time Slot LCR	M		9.2.3.24A		_	
>Midamble Shift LCR	М		9.2.3.7a		_	
>TDD Channelisation Code LCR	М		9.2.3.19a		-	
>HS-SICH Information LCR		1			_	
>>Time Slot LCR	M		9.2.3.24A			
>>Midamble Shift LCR	M		9.2.3.7a		_	
>>TDD Channelisation Code LCR	M		9.2.3.19a		_	

Range Bound	Explanation
maxnoofMACdFlows	Maximum number of HS-DSCH MAC-d flows.
maxnoofPrioQueues	Maximum number of Priority Queues
maxnoofMACdPDUindexes	Maximum number of different MAC-d Size Indexes (SIDs)
maxnoofHSSCCHcodes	Maximum number of HS-SCCH codes

9.2.3.5Ga HS-SCCH ID

The HS-SCCH ID identifies unambiguously a HS-SCCH and its paired HS-SICH within the set of HS-SCCHs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
HS SCCH ID			INTEGER (031)	

9.2.3.5H IPDL TDD Parameters LCR

The IPDL TDD Parameters LCR IE provides information about IPDL to be applied for 1.28Mcps TDD when activated.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
IP SpacingTDD	M		ENUMERATED (30, 40, 50, 70, 100,)	See [21]
IP Start	M		INTEGER (04095)	See [21]
IP_Sub	M		ENUMERATED (First, Second, Both)	See [21]
Burst Mode Parameters	0		9.2.1.5A	

9.2.3.6 Max PRACH Midamble Shift

Indicates the maximum number of Midamble shifts to be used in a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Max PRACH Midamble Shift			ENUMERATED (4, 8,)	

9.2.3.7 Midamble Shift And Burst Type

This information element indicates burst type and midamble allocation.

The 256 chip midamble supports 3 different time shifts, the 512 chips midamble may support 8 or even 16 time shifts.

Three different midamble allocation schemes exist:

Default midamble: the midamble shift is selected by layer 1 depending on the associated channelisation code (DL and UL)

Common midamble: the midamble shift is chosen by layer 1 depending on the number of channelisation codes (possible in DL only)

UE specific midamble: a UE specific midamble is explicitly assigned (DL and UL)

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Burst Type				
>Type1				
>>Midamble Configuration	М		INTEGER (4, 8, 16)	As defined in [19]
Burst Type 1 And 3	1.4			
>>CHOICE Midamble Allocation Mode	М			
>>>Default Midamble			NULL	
>>>Common Midamble			NULL	
>>>UE Specific Midamble				
>>Midamble Shift Long	М		INTEGER (015)	
>Type2				
>>Midamble Configuration	М		INTEGER (3,6)	As defined in [19]
Burst Type 2	1.4			
>>CHOICE Midamble Allocation Mode	М			
>>>Default Midamble			NULL	
>>>Common Midamble			NULL	
>>>UE Specific				
Midamble .				
>>Midamble Shift Short	M		INTEGER (05)	
>Type3				UL only
>>Midamble Configuration	М		INTEGER (4, 8, 16)	As defined in [19]
Burst Type 1 And 3				
>>CHOICE Midamble	М			
Allocation Mode			NII II I	
>>>Default Midamble			NULL	
>>>UE Specific Midamble				
>>Midamble Shift Long	М		INTEGER (015)	

9.2.3.7A Midamble Shift LCR

This information element indicates midamble allocation in 1.28Mcps TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Midamble Allocation Mode	М		ENUMERATED (Default midamble, Common midamble, UE specific midamble,)	
Midamble Shift LCR	C-UE		INTEGER (015)	

Condition	Explanation
UE	The IE shall be present if the Midamble Allocation Mode IE is set to
	"UE-specific midamble".

9.2.3.7B Number Of Cycles Per SFN Period

The *Number Of Cycles Per SFN Period* IE indicates the number of repetitions per SFN period where the same schedule shall apply.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number Of Cycles Per SFN Period			ENUMERATED (1, 2, 4, 8,, 16, 32, 64)	

9.2.3.7C Number Of Repetitions Per Cycle Period

The *Number Of Repetitions Per Cycle Period* IE indicates the number of Sync frames per Cycle Length where the [3.84Mcps TDD - cell synchronisation bursts] [1.28Mcps TDD – Sync_DL Codes] shall be transmitted or the cell synchronisation bursts from the neighbouring cells shall be measured.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number Of Repetitions Per Cycle Period			INTEGER (210)	

9.2.3.7D Number Of Subcycles Per Cycle Period

The *Number Of Subcycles Per Cycle Period* IE indicates the number of subcycles within a Synchronisation Cycle. Within each subcycle, the same sequence of SYNC_DL Code transmissions and receptions is performed.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number Of Subcycles Per			INTEGER (116,)	
Cycle Period				

9.2.3.8 Paging Indicator Length

The Paging Indicator Length indicates the number of symbols for Page Indication transmitted in one timeslot (see ref [19]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Paging Indicator Length			ENUMERATED (2, 4, 8,)	

9.2.3.9 PCCPCH Power

The Primary CCPCH power is the power that shall be used for transmitting the P CCPCH in a cell. The P CCPCH power is the reference power in a TDD-cell. The reference point is the antenna connector.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PCCPCH Power			INTEGER (-15+40,)	Unit: dBm Range: -15+40 dBm Step: 0.1 dB

9.2.3.10 PDSCH ID

The PDSCH ID identifies unambiguously a PDSCH inside a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDSCH ID			INTEGER (0255)	

9.2.3.11 PDSCH Set ID

The PDSCH Set Id identifies unambiguously a PDSCH Set inside a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDSCH Set ID			INTEGER (0255)	See ref. [6]

9.2.3.11A Primary CCPCH RSCP

Received Signal Code Power is the received power on PCCPCH of the target cell after despreading. The reference point for the RSCP is the antenna connector at the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Primary CCPCH RSCP			INTEGER (091)	

9.2.3.12 PUSCH ID

The PUSCH ID identifies unambiguously a PUSCH inside a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PUSCH ID			INTEGER (0255)	

9.2.3.13 PUSCH Set ID

The PUSCH Set ID identifies unambiguously a PUSCH Set inside a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PUSCH Set ID			INTEGER (0255)	See ref. [6]

9.2.3.14 PRACH Midamble

The PRACH Midamble indicates if only the Basic Midamble Sequence or also the time-inverted Midamble Sequence is used.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PRACH Midamble			ENUMERATED (Inverted, Direct,	
)	

9.2.3.14A Reference Clock Availability

The *Reference Clock Availability* IE is used to indicate the presence and operating of a Reference Clock connected to a TDD cell for cell synchronisation purpose.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Reference Clock Availability			ENUMERATED (Available,	
			Not Available)	

9.2.3.14B Reference SFN Offset

The *Reference SFN Offset* IE indicates the number of frames the reference SFN shall be shifted compared to the SFN derived from the synchronisation port.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Reference SFN Offset			INTEGER (0255)	

9.2.3.15 Repetition Length

The Repetition Length represents the number of consecutive Radio Frames inside a Repetition Period in which the same Time Slot is assigned to the same Physical Channel see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Repetition Length			INTEGER (163)	

9.2.3.16 Repetition Period

The Repetition Period represents the number of consecutive Radio Frames after which the same assignment scheme of Time Slots to a Physical Channel is repeated. This means that if the Time Slot K is assigned to a physical channel in the Radio Frame J, it is assigned to the same physical channel also in all the Radio Frames J+n*Repetition Period (where n is an integer) see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Repetition Period			ENUMERATED	
-			(1, 2, 4, 8, 16, 32,	
			64,)	

9.2.3.17 SCH Time Slot

The *SCH Time Slot* IE represents the first time slot (k) of a pair of time slots inside a Radio Frame that shall be assigned to the Physical Channel SCH. The *SCH Time Slot* IE is only applicable if the value of *Sync Case* IE is Case 2 since in this case the SCH is allocated in TS#k and TS#k+8.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCH Time Slot			INTEGER (06)	

9.2.3.18 Sync Case

The SCH and PCCPCH are mapped on one or two downlink slots per frame. There are two cases of SCH and PCCPCH allocation as follows:

Case 1) SCH and PCCPCH allocated in a single TS#k

Case 2) SCH allocated in two TS: TS#k and TS#k+8 PCCPCH allocated in TS#k

[1.28Mcps TDD - There is no Sync Case indication needed for 1.28Mcps TDD. If the *Sync Case* IE must be included in a message from CRNC to Node B used for 1.28Mcps TDD, the CRNC should indicate Sync Case 1 and the Node B shall ignore it.]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Sync Case			INTEGER (12,)	

9.2.3.18A Special Burst Scheduling

The number of frames between special burst transmissions during DTX.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Special Burst Scheduling			INTEGER (1256)	Number of frames between special burst transmission
				during DTX

9.2.3.18B SYNC_DL Code ID

The SYNC_DL Code ID identifies the SYNC_DL Code which used by DwPCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SYNC_DL Code ID			INTEGER (132,)	

9.2.3.18C Sync Frame Number

The *Sync Frame Number* IE indicates the number of the Sync frame within a Synchronisation Cycle or Subcycle, respectively, where the cell synchronisation bursts shall be transmitted or the cell synchronisation bursts from the neighbouring cells shall be measured.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Sync Frame Number			INTEGER (110)	

9.2.3.18D Synchronisation Report Characteristics

The *Synchronisation Report Characteristics* IE defines how the reporting on measured [3.84Mcps TDD - cell synchronisation bursts] [1.28Mcps TDD – Sync_DL Codes] shall be performed

Different methods shall apply for the measured [3.84Mcps TDD - cell synchronisation burst] [1.28Mcps TDD – Sync_DL Codes] reports. [3.84Mcps TDD - In the frequency acquisition phase the measurement report shall be sent when the frequency locking is completed.] In the initial phase and for the measurement on late-entrant cells an immediate report after the measured frame is expected.

In the steady-state phase measurement reports may be given after every measured frame, after every SFN period, after every cycle length or only when the requested threshold is exceeded.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Synchronisation Report Characteristics Type	M		ENUMERATED (Frame related, SFN period related, Cycle length related, Threshold exceeding, Frequency Acquisition completed,)	
Threshold Exceeding	C- Threshold Exceeding		,	Applies only to the Steady State Phase
>Cell Sync Burst Threshold Information		0 <maxno ofCellSync Bursts></maxno 		Mandatory for 3.84Mcps TDD. Not Applicable to 1.28Mcps TDD.
>>Sync Frame Number To Receive	M		Sync Frame Number 9.2.3.18C	
>>Cell Sync Burst Information		1 <maxno ofreceptio nsperSync Frame></maxno 		
>>>Cell Sync Burst Code	М		9.2.3.4G	

>>>Cell Sync Burst Code Shift	M		9.2.3.4H	
>>>Cell Sync Burst Arrival Time	0		Cell Sync Burst Timing 9.2.3.4L	
>>>Cell Sync Burst Timing Threshold	0		9.2.3.4M	
>SYNC_DL Code Threshold Information LCR		0 <maxno ofSyncFra mesLCR></maxno 		Mandatory for 1.28Mcps TDD. Not Applicable to 3.84Mcps TDD.
>>Sync Frame Number To Receive	М		Sync Frame Number 9.2.3.18C	
>>SYNC_DL Code Information LCR		1 <maxno ofreceptio nsperSync FrameLCR ></maxno 		
>>>SYNC_DL Code ID	М		9.2.3.18B	
>>>SYNC_DL Code ID Arrival Time	0		Cell Sync Burst Timing 9.2.3.4L	
>>>SYNC_DL Code ID Timing Threshold	0		Cell Sync Burst Timing Threshold 9.2.3.4M	

Range Bound	Explanation
maxnoofCellSyncBursts	Maximum number of cell synchronisation burst per cycle for 3.84Mcps TDD
maxnoofreceptionsperSyncFrame	Maximum number of cell synchronisation burst receptions per Sync Frame for 3.84Mcps TDD
maxnoofSyncFramesLCR	Maximum number of SYNC Frames per repetition period for 1.28Mcps TDD
maxnoofreceptionsperSyncFrameLCR	Maximum number of SYNC_DL Code ID receptions per Sync Frame for 1.28Mcps TDD

9.2.3.18E Synchronisation Report Type

The *Synchronisationt Report Type* IE represents the individual types of synchronisation reports that shall apply within the individual synchronisation phases. (see [17]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Synchronisation Report Type			ENUMERATED (Initial Phase, Steady-State Phase, Late-Entrant Cell, Frequency Acquisition,)	

9.2.3.19 TDD Channelisation Code

The Channelisation Code Number indicates which Channelisation Code is used for a given Physical Channel. In TDD the Channelisation Code is an Orthogonal Variable Spreading Factor code, that can have a spreading factor of 1, 2, 4, 8 or 16.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD Channelisation Code			ENUMERATED ((1/1), (2/1), (2/2), (4/1), (4/4), (8/1), (8/8), (16/1), (16/16),)	

9.2.3.19a TDD Channelisation Code LCR

The Channelisation Code Number indicates which Channelisation Code is used for a given Physical Channel. In 1.28Mcps TDD the Channelisation Code is an Orthogonal Variable Spreading Factor code, that can have a spreading factor of 1, 2, 4, 8 or 16 and there is a choice between QPSK and 8PSK modulation.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD Channelisation Code			9.2.3.19	
Modulation			ENUMERATED (QPSK, 8PSK,)	Modulation options for 1.28Mcps TDD in contrast to 3.84Mcps TDD

9.2.3.19A TDD DPCH Offset

The Offset represents the phase information for the allocation of a group of dedicated physical channels. The first range is used when a starting offset is not required and the TDD Physical channel offset for each DPCH in the CCTrCH shall be directly determined from the TDD DPCH Offset. The second range is used when a starting offset is required. The TDD DPCH Offset shall map to the CFN and the TDD Physical Channel Offet for each DPCH in this CCTrCH shall calculated by TDD DPCH Offset *mod* Repetition period, see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Offset Type				
>Initial Offset				
>>TDD DPCH Offset Value	M		INTEGER (0255)	
>No Initial Offset				
>>TDD DPCH Offset Value	M		INTEGER (063)	

9.2.3.19B TDD DL Code Information

The TDD DL Code Information IE provides DL Code information for the RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD DL Code Information		1 <maxno ofDPCHs></maxno 		
>DPCH ID	M		9.2.3.5	
>TDD Channelisation Code	M		9.2.3.19	

Range Bound	Explanation
maxnoofDPCHs	Maximum number of DPCHs in one CCTrCH

9.2.3.19C TDD DL Code Information LCR

The TDD DL Code Information LCR IE provides DL Code information for the RL.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD DL Code Information LCR		1 <maxno ofDPCHsL CR></maxno 		
>DPCH ID	М		9.2.3.5	
>TDD Channelisation Code LCR	М		9.2.3.19a	

Range Bound	Explanation
maxnoofDPCHsLCR	Maximum number of DPCH in one CCTrCH for 1.28Mcps TDD

9.2.3.20 TDD Physical Channel Offset

The Offset represents the phase information for the allocation of a physical channel. (SFN mod Repetition Period = Offset) see ref. [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD Physical Channel Offset			INTEGER (063)	

9.2.3.21 TDD TPC DL Step Size

This parameter indicates step size for the DL power adjustment.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD TPC Downlink Step Size			ENUMERATED (1, 2, 3,)	

9.2.3.21A TDD UL Code Information

The TDD UL Code Information IE provides information for UL Code to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD UL Code Information		1 <maxno ofDPCHs></maxno 		
>DPCH ID	М		9.2.3.5	
>TDD Channelisation Code	M		9.2.3.19	

Range Bound	Explanation
maxnoofDPCHs	Maximum number of DPCHs in one CCTrCH

9.2.3.21B TDD UL Code Information LCR

The TDD UL Code Information LCR IE provides information for UL Code to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD UL Code Information LCR		1 <maxno ofDPCHsL CR></maxno 		
>DPCH ID	М		9.2.3.5	
>TDD Channelisation Code LCR	М		9.2.3.19a	

Range Bound	Explanation
maxnoofDPCHsLCR	Maximum number of DPCHs in one CCTrCH for 1.28Mcps TDD

9.2.3.22 TFCI Coding

The TFCI Coding describes the way how the TFCI bits are coded. By default 1 TFCI bit is coded with 4 bits, 2 TFCI bits are coded with 8 bits, 3-5 TFCI bits are coded with 16 bits and 6-10 TFCI bits are coded with 32 bits.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI Coding			ENUMERATED	
			(4, 8, 16, 32,)	

9.2.3.22a Timing Adjustment Value

The *Timing Adjustment Value* IE indicates the timing correction within a Frame. Type 1 is used for the initial phase of Node B synchronisation. Type 2 is used for the steady-state phase of Node B synchronisation.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Phase				According to mapping in [23]
>Initial Phase				
>>Timing Adjustment Value	M		INTEGER (0255)	
>Steady State Phase				
>>Timing Adjustment Value	M		INTEGER (01048575)	

9.2.3.22A Timing Advance Applied

Defines the need for Rx Timing Deviation measurement results to be reported in a particular cell.

[1.28Mcps TDD -, this IE shall be set to "No".]

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Timing Advance Applied			ENUMERATED (
			Yes,	
			No)	

9.2.3.23 Time Slot

The Time Slot represents the minimum time interval inside a Radio Frame that can be assigned to a Physical Channel.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Time Slot			INTEGER (014)	

9.2.3.24 Time Slot Direction

This parameter indicates whether the TS in the cell is used in Uplink or Downlink direction.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Time Slot Direction			ENUMERATED (UL, DL,)	

9.2.3.24A Time Slot LCR

The Time Slot LCR is the number of the traffic time slot within a 5 ms subframe of LCR TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Time Slot LCR			INTEGER (06)	

9.2.3.25 Time Slot Status

This parameter indicates whether the TS in the cell is active or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Time Slot Status			ENUMERATED (
			Active,	
			Not Active,	
)	

9.2.3.26 Transmission Diversity Applied

Defines if Transmission Diversity on DCHs is to be applied in a cell (see ref. [19]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission Diversity Applied			BOOLEAN	True: Transmission Diversity shall be applied in this Cell. False: Transmission Diversity shall not be applied in this Cell.

9.2.3.26A UL Timeslot ISCP

UL Timeslot ISCP is the measured interference in a uplink timeslot at the Node B, see ref. [5].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Timeslot ISCP			INTEGER (0127)	According to mapping in [23].

9.2.3.26B UL PhysCH SF Variation

Indicates whether variation of SF in UL is supported by Radio Link or not.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
UL PhysCH SF Variation			ENUMERATED (
			SF_Variation_suppo	
			rted,	
			SF_Variation_NOT_	
			supported)	

9.2.3.26C UL Timeslot Information

The UL Timeslot Information IE provides information on the time slot allocation for an UL DPCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Timeslot Information		1 <maxno ofULts></maxno 		
>Time Slot	M		9.2.3.23	
>Midamble Shift And Burst Type	М		9.2.3.7	
>TFCI Presence	M		9.2.1.57	
>UL Code Information	M		TDD UL Code Information 9.2.3.21A	

Range Bound	Explanation
maxnoofULts	Maximum number of Uplink time slots per Radio Link

9.2.3.26D UL Time Slot ISCP Info

The UL Time Slot ISCP Info IE provides information for UL Interfernce level for each time slot within the Radio Link.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Time Slot ISCP Info		1 <maxno ofULts></maxno 		
>Time Slot	М		9.2.3.23	
>UL Timeslot ISCP	M		9.2.3.26A	

Range Bound	Explanation
maxnoofULts	Maximum number of Uplink time slots per Radio Link

9.2.3.26E UL Timeslot Information LCR

The UL Timeslot Information IE provides information on the time slot allocation for an UL DPCH.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Timeslot Information LCR		1 <maxno ofULtsLCR ></maxno 		
>Time Slot LCR	М		9.2.3.24A	
>Midamble Shift LCR	М		9.2.3.7A	
>TFCI Presence	М		9.2.1.57	
>UL Code Information	M		TDD UL Code Information LCR 9.2.3.21B	

Range Bound	Explanation
maxnoofULtsLCR	Maximum number of Uplink time slots per Radio Link for 1.28Mcps
	TDD.

9.2.3.26F UL Time Slot ISCP Info LCR

The *UL Time Slot ISCP Info LCR* IE provides information for UL Interfernce level for each time slot within the Radio Link.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Time Slot ISCP Info LCR		1 <maxno ofULtsLCR ></maxno 		
>Time Slot LCR	M		9.2.3.24A	
>UL Timeslot ISCP	M		9.2.3.26A	

Range Bound	Explanation
maxnoofULtsLCR	Maximum number of Uplink time slots per Radio Link for 1.28Mcps
	TDD

9.2.3.27 USCH ID

The USCH ID uniquely identifies a USCH within a Node B Communication Context.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
USCH ID			INTEGER (0255)	

9.2.3.28 USCH Information

The USCH Information IE provides information for USCHs to be established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
USCH Information		1 <max noofUS CHs></max 			_	
>USCH ID	M		9.2.3.27		_	
>CCTrCH ID	M		9.2.3.3	UL CCTrCH in which the USCH is mapped	_	
>Transport Format Set	M		9.2.1.59	For USCH	_	
>Allocation/Retention Priority	M		9.2.1.1A		_	
>Binding ID	0		9.2.1.4	Shall be ignored if bearer establishment with ALCAP.	YES	ignore
>Transport Layer Address	0		9.2.1.63	Shall be ignored if bearer establishment with ALCAP.	YES	ignore

Range Bound	Explanation
maxnoofUSCHs	Maximum number of USCHs for one UE

9.2.3.29 USCH Information Response

The USCH Information Response IE provides information for USCHs that have been established or modified.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
USCH Information Response		1 <maxno ofUSCHs></maxno 		
>USCH ID	M		9.2.3.27	
>Binding ID	0		9.2.1.4	
>Transport Layer Address	0		9.2.1.63	

Range Bound	Explanation	
maxnoofUSCHs	Maximum number of USCHs for one UE	

9.2.3.30 SCTD Indicator

Indicates if SCTD antenna diversity is applied or not to the PCCPCH and PICH [3.84Mcps TDD].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCTD Indicator			ENUMERATED (
			active,	
			inactive)	

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.0 General

Subclause 9.3 presents the Abstract Syntax of NBAP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this subclause and the tabular format in subclauses 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of NBAP messages. NBAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct a NBAP message according to the PDU definitions module and with the following additional rules (Note that in the following IE means an IE in the object set with an explicit id. If one IE needed to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If a NBAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in subclause 10.3.6.

9.3.1 Usage of Private Message mechanism for non-standard use

The private message mechanism for non-standard use may be used

- For special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multi-vendor inter-operability.
- By vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.2 Elementary Procedure Definitions

CellDeletionResponse,

```
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) nbap (2) version1 (1) nbap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *******************
-- IE parameter types from other modules.
__ ********************
IMPORTS
    Criticality,
    ProcedureID,
   MessageDiscriminator,
    TransactionID
FROM NBAP-CommonDataTypes
    CommonTransportChannelSetupRequestFDD,
    CommonTransportChannelSetupRequestTDD,
    CommonTransportChannelSetupResponse,
    CommonTransportChannelSetupFailure,
    CommonTransportChannelReconfigurationRequestFDD,
    CommonTransportChannelReconfigurationRequestTDD,
    CommonTransportChannelReconfigurationResponse,
    CommonTransportChannelReconfigurationFailure,
    CommonTransportChannelDeletionRequest,
    CommonTransportChannelDeletionResponse,
    BlockResourceRequest,
    BlockResourceResponse,
    BlockResourceFailure,
    UnblockResourceIndication,
    AuditFailure,
    AuditRequiredIndication,
    AuditRequest,
    AuditResponse,
    CommonMeasurementInitiationRequest,
    CommonMeasurementInitiationResponse,
    CommonMeasurementInitiationFailure,
    CommonMeasurementReport,
    CommonMeasurementTerminationRequest,
    CommonMeasurementFailureIndication,
    CellSetupRequestFDD,
    CellSetupRequestTDD,
    CellSetupResponse,
    CellSetupFailure,
    CellReconfigurationRequestFDD,
    CellReconfigurationRequestTDD,
    CellReconfigurationResponse,
    CellReconfigurationFailure,
    CellDeletionRequest,
```

```
InformationExchangeInitiationRequest,
InformationExchangeInitiationResponse,
InformationExchangeInitiationFailure,
InformationReport,
InformationExchangeTerminationRequest,
InformationExchangeFailureIndication,
BearerRearrangementIndication,
ResourceStatusIndication,
SystemInformationUpdateRequest,
SystemInformationUpdateResponse,
SystemInformationUpdateFailure,
ResetRequest,
ResetResponse,
RadioLinkActivationCommandFDD.
RadioLinkActivationCommandTDD,
RadioLinkPreemptionRequiredIndication,
RadioLinkSetupRequestFDD,
RadioLinkSetupRequestTDD,
RadioLinkSetupResponseFDD,
RadioLinkSetupResponseTDD,
RadioLinkSetupFailureFDD,
RadioLinkSetupFailureTDD,
RadioLinkAdditionRequestFDD,
RadioLinkAdditionRequestTDD,
RadioLinkAdditionResponseFDD,
RadioLinkAdditionResponseTDD,
RadioLinkAdditionFailureFDD,
RadioLinkAdditionFailureTDD,
RadioLinkReconfigurationPrepareFDD,
RadioLinkReconfigurationPrepareTDD,
RadioLinkReconfigurationReady,
RadioLinkReconfigurationFailure,
RadioLinkReconfigurationCommit,
RadioLinkReconfigurationCancel,
RadioLinkReconfigurationRequestFDD,
RadioLinkReconfigurationRequestTDD,
RadioLinkReconfigurationResponse,
RadioLinkDeletionRequest,
RadioLinkDeletionResponse,
DL-PowerControlRequest,
DL-PowerTimeslotControlRequest,
DedicatedMeasurementInitiationRequest,
DedicatedMeasurementInitiationResponse,
DedicatedMeasurementInitiationFailure,
DedicatedMeasurementReport,
DedicatedMeasurementTerminationRequest,
DedicatedMeasurementFailureIndication.
RadioLinkFailureIndication,
RadioLinkRestoreIndication,
CompressedModeCommand,
ErrorIndication,
PrivateMessage,
PhysicalSharedChannelReconfigurationRequestTDD,
PhysicalSharedChannelReconfigurationRequestFDD,
```

```
PhysicalSharedChannelReconfigurationResponse,
    PhysicalSharedChannelReconfigurationFailure,
    CellSynchronisationInitiationRequestTDD,
    CellSynchronisationInitiationResponseTDD,
    CellSynchronisationInitiationFailureTDD,
    CellSynchronisationReconfigurationRequestTDD,
    CellSynchronisationReconfigurationResponseTDD,
    CellSynchronisationReconfigurationFailureTDD.
    CellSynchronisationAdjustmentRequestTDD,
    CellSynchronisationAdjustmentResponseTDD,
    CellSynchronisationAdjustmentFailureTDD,
    CellSynchronisationReportTDD,
    CellSynchronisationTerminationRequestTDD,
    CellSynchronisationFailureIndicationTDD
FROM NBAP-PDU-Contents
    id-audit,
    id-auditRequired,
    id-blockResource,
    id-cellDeletion,
    id-cellReconfiguration,
    id-cellSetup,
    id-cellSynchronisationInitiation,
    id-cellSynchronisationReconfiguration.
    id-cellSynchronisationReporting,
    id-cellSynchronisationTermination,
    id-cellSynchronisationFailure,
    id-commonMeasurementFailure,
    id-commonMeasurementInitiation,
    id-commonMeasurementReport,
    id-commonMeasurementTermination,
    id-commonTransportChannelDelete,
    id-commonTransportChannelReconfigure,
    id-commonTransportChannelSetup,
    id-compressedModeCommand,
    id-dedicatedMeasurementFailure,
    id-dedicatedMeasurementInitiation,
    id-dedicatedMeasurementReport,
    id-dedicatedMeasurementTermination,
    id-downlinkPowerControl,
    id-downlinkPowerTimeslotControl,
    id-errorIndicationForDedicated,
    id-errorIndicationForCommon,
    id-informationExchangeFailure,
    id-informationExchangeInitiation,
    id-informationReporting,
    id-informationExchangeTermination,
    id-BearerRearrangement,
    id-physicalSharedChannelReconfiguration,
    id-privateMessageForDedicated,
    id-privateMessageForCommon,
    id-radioLinkActivation,
    id-radioLinkAddition,
    id-radioLinkDeletion,
```

```
id-radioLinkFailure,
   id-radioLinkPreemption.
   id-radioLinkRestoration.
   id-radioLinkSetup,
   id-reset.
   id-resourceStatusIndication,
   id-cellSynchronisationAdjustment,
   id-synchronisedRadioLinkReconfigurationCancellation,
   id-synchronisedRadioLinkReconfigurationCommit,
   id-synchronisedRadioLinkReconfigurationPreparation,
   id-systemInformationUpdate,
   id-unblockResource,
   id-unSynchronisedRadioLinkReconfiguration
FROM NBAP-Constants;
      -- Interface Elementary Procedure Class
__ *********************
NBAP-ELEMENTARY-PROCEDURE ::= CLASS {
   &InitiatingMessage
   &SuccessfulOutcome
                                    OPTIONAL,
   &UnsuccessfulOutcome
                                    OPTIONAL,
   &Out.come
                                    OPTIONAL,
   &messageDiscriminator
                                    MessageDiscriminator,
   &procedureID
                                    ProcedureID
                                                   UNIQUE,
   &criticality
                                    Criticality
                                                   DEFAULT ignore
WITH SYNTAX {
   INITIATING MESSAGE
                                    &InitiatingMessage
   [SUCCESSFUL OUTCOME
                                    &SuccessfulOutcome]
                                    &UnsuccessfulOutcomel
   [UNSUCCESSFUL OUTCOME
                                    &Outcomel
   [ OUTCOME
   MESSAGE DISCRIMINATOR
                                    &messageDiscriminator
   PROCEDURE ID
                                    &procedureID
   [CRITICALITY
                                    &criticality]
-- Interface PDU Definition
__ ********************
NBAP-PDU ::= CHOICE {
   initiatingMessage
                         InitiatingMessage,
   succesfulOutcome
                         SuccessfulOutcome,
   unsuccesfulOutcome
                         UnsuccessfulOutcome,
   outcome
                         Outcome,
```

```
InitiatingMessage ::= SEQUENCE
    procedureID
                            NBAP-ELEMENTARY-PROCEDURE.&procedureID
                                                                   ({NBAP-ELEMENTARY-PROCEDURES}).
    criticality
                            NBAP-ELEMENTARY-PROCEDURE.&criticality ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    messageDiscriminator
                           NBAP-ELEMENTARY-PROCEDURE. & messageDiscriminator({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    transactionID
                           TransactionID,
                            NBAP-ELEMENTARY-PROCEDURE.&InitiatingMessage({NBAP-ELEMENTARY-PROCEDURES}{@procedureID})
    value
SuccessfulOutcome ::= SEOUENCE
    procedureID
                            NBAP-ELEMENTARY-PROCEDURE. & procedureID ({NBAP-ELEMENTARY-PROCEDURES}),
                            NBAP-ELEMENTARY-PROCEDURE.&criticality ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    criticality
                           NBAP-ELEMENTARY-PROCEDURE. &messageDiscriminator({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    messageDiscriminator
    transactionID
                           TransactionID.
    value
                           NBAP-ELEMENTARY-PROCEDURE. & Successful Outcome ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID})
UnsuccessfulOutcome ::= SEOUENCE
    procedureID
                            NBAP-ELEMENTARY-PROCEDURE.&procedureID
                                                                   ({NBAP-ELEMENTARY-PROCEDURES}),
                            NBAP-ELEMENTARY-PROCEDURE.&criticality ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    criticality
    messageDiscriminator NBAP-ELEMENTARY-PROCEDURE.&messageDiscriminator({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    transactionID
                           TransactionID,
                            NBAP-ELEMENTARY-PROCEDURE: &UnsuccessfulOutcome({NBAP-ELEMENTARY-PROCEDURES}{@procedureID})
    value
Outcome ::= SEOUENCE {
                            NBAP-ELEMENTARY-PROCEDURE.&procedureID ({NBAP-ELEMENTARY-PROCEDURES}),
    procedureID
    criticality
                            NBAP-ELEMENTARY-PROCEDURE.&criticality ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
                            NBAP-ELEMENTARY-PROCEDURE.&messageDiscriminator({NBAP-ELEMENTARY-PROCEDURES}{@procedureID}),
    messageDiscriminator
    transactionID
                            TransactionID,
                            NBAP-ELEMENTARY-PROCEDURE.&Outcome ({NBAP-ELEMENTARY-PROCEDURES}{@procedureID})
    value
  Interface Elementary Procedure List
NBAP-ELEMENTARY-PROCEDURES NBAP-ELEMENTARY-PROCEDURE ::= {
    NBAP-ELEMENTARY-PROCEDURES-CLASS-1
   NBAP-ELEMENTARY-PROCEDURES-CLASS-2
    . . .
NBAP-ELEMENTARY-PROCEDURES-CLASS-1 NBAP-ELEMENTARY-PROCEDURE ::=
    cellSetupFDD
    cellSetupTDD
    cellReconfigurationFDD
    cellReconfigurationTDD
    cellDeletion
    commonTransportChannelSetupFDD
    commonTransportChannelSetupTDD
    commonTransportChannelReconfigureFDD
```

```
commonTransportChannelReconfigureTDD
    commonTransportChannelDelete
    audit.
    blockResource
    radioLinkSetupFDD
    radioLinkSetupTDD
    systemInformationUpdate
    commonMeasurementInitiation
    radioLinkAdditionFDD
    radioLinkAdditionTDD
    radioLinkDeletion
    reset
    synchronisedRadioLinkReconfigurationPreparationFDD
    synchronisedRadioLinkReconfigurationPreparationTDD
    unSynchronisedRadioLinkReconfigurationFDD
    unSynchronisedRadioLinkReconfigurationTDD
    dedicatedMeasurementInitiation
    physicalSharedChannelReconfigurationTDD
    information Exchange Initiation
    cellSynchronisationInitiationTDD
    cellSynchronisationReconfigurationTDD
    cellSynchronisationAdjustmentTDD
    physicalSharedChannelReconfigurationFDD
NBAP-ELEMENTARY-PROCEDURES-CLASS-2 NBAP-ELEMENTARY-PROCEDURE ::= {
    resourceStatusIndication
    auditRequired
    commonMeasurementReport
    commonMeasurementTermination
    commonMeasurementFailure
    synchronisedRadioLinkReconfigurationCommit
    synchronisedRadioLinkReconfigurationCancellation
    radioLinkFailure
    radioLinkPreemption
    radioLinkRestoration
    dedicatedMeasurementReport
    dedicatedMeasurementTermination
    dedicatedMeasurementFailure
    downlinkPowerControlFDD
    downlinkPowerTimeslotControl
    compressedModeCommand
    unblockResource
    errorIndicationForDedicated
    errorIndicationForCommon
    privateMessageForDedicated
    privateMessageForCommon
    . . . ,
    informationReporting
    informationExchangeTermination
    informationExchangeFailure
    cellSynchronisationReportingTDD
    cellSynchronisationTerminationTDD
```

```
cellSynchronisationFailureTDD
    bearerRearrangement
    radioLinkActivationFDD
    radioLinkActivationTDD
  Interface Elementary Procedures
      *****************
-- Class 1
-- *** CellSetup (FDD) ***
cellSetupFDD NBAP-ELEMENTARY-PROCEDURE ::= {
                           CellSetupRequestFDD
    INITIATING MESSAGE
                           CellSetupResponse
    SUCCESSFUL OUTCOME
                           CellSetupFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                           common
    PROCEDURE ID
                           { procedureCode id-cellSetup, ddMode fdd }
    CRITICALITY
                           reject
-- *** CellSetup (TDD) ***
cellSetupTDD NBAP-ELEMENTARY-PROCEDURE ::= {
                           CellSetupRequestTDD
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                           CellSetupResponse
                           CellSetupFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                           common
    PROCEDURE ID
                           { procedureCode id-cellSetup, ddMode tdd }
    CRITICALITY
                           reject
-- *** CellReconfiguration(FDD) ***
cellReconfigurationFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           CellReconfigurationRequestFDD
                           CellReconfigurationResponse
    SUCCESSFUL OUTCOME
                           CellReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                           { procedureCode id-cellReconfiguration, ddMode fdd }
    PROCEDURE ID
    CRITICALITY
                           reject
-- *** CellReconfiguration(TDD) ***
cellReconfigurationTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           CellReconfigurationRequestTDD
    SUCCESSFUL OUTCOME
                           CellReconfigurationResponse
    UNSUCCESSFUL OUTCOME
                           CellReconfigurationFailure
    MESSAGE DISCRIMINATOR
                           { procedureCode id-cellReconfiguration, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                           reject
```

```
-- *** CellDeletion ***
cellDeletion NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellDeletionRequest
    SUCCESSFUL OUTCOME
                            CellDeletionResponse
    MESSAGE DISCRIMINATOR
                            { procedureCode id-cellDeletion, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** CommonTransportChannelSetup (FDD) ***
commonTransportChannelSetupFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonTransportChannelSetupRequestFDD
    SUCCESSFUL OUTCOME
                            CommonTransportChannelSetupResponse
                            CommonTransportChannelSetupFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-commonTransportChannelSetup, ddMode fdd }
    CRITICALITY
                            reject
-- *** CommonTransportChannelSetup (TDD) ***
commonTransportChannelSetupTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonTransportChannelSetupRequestTDD
                            CommonTransportChannelSetupResponse
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            CommonTransportChannelSetupFailure
    MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-commonTransportChannelSetup, ddMode tdd }
    CRITICALITY
                            reject
-- *** CommonTransportChannelReconfigure (FDD) ***
commonTransportChannelReconfigureFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonTransportChannelReconfigurationRequestFDD
    SUCCESSFUL OUTCOME
                            CommonTransportChannelReconfigurationResponse
                            CommonTransportChannelReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-commonTransportChannelReconfigure, ddMode fdd }
    CRITICALITY
                            reject
-- *** CommonTransportChannelReconfigure (TDD) ***
commonTransportChannelReconfigureTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            {\tt CommonTransportChannelReconfigurationRequestTDD}
                            {\tt CommonTransportChannelReconfigurationResponse}
    SUCCESSFUL OUTCOME
                            CommonTransportChannelReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-commonTransportChannelReconfigure, ddMode tdd }
    CRITICALITY
                            reject
-- *** CommonTransportChannelDelete ***
commonTransportChannelDelete NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            {\tt CommonTransportChannelDeletionRequest}
                            CommonTransportChannelDeletionResponse
    SUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
```

```
{ procedureCode id-commonTransportChannelDelete, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** Audit ***
audit NBAP-ELEMENTARY-PROCEDURE ::= {
                            AuditRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            AuditResponse
    UNSUCCESSFUL OUTCOME
                            AuditFailure
    MESSAGE DISCRIMINATOR
                            { procedureCode id-audit, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** BlockResourceRequest ***
blockResource NBAP-ELEMENTARY-PROCEDURE ::= {
                            BlockResourceRequest
    INITIATING MESSAGE
                            BlockResourceResponse
    SUCCESSFUL OUTCOME
                            BlockResourceFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-blockResource, ddMode common }
    CRITICALITY
                            reject
-- *** RadioLinkSetup (FDD) ***
radioLinkSetupFDD NBAP-ELEMENTARY-PROCEDURE ::= {
                            RadioLinkSetupRequestFDD
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RadioLinkSetupResponseFDD
                            RadioLinkSetupFailureFDD
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-radioLinkSetup, ddMode fdd }
    CRITICALITY
                            reject
-- *** RadioLinkSetup (TDD) ***
radioLinkSetupTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkSetupRequestTDD
                            RadioLinkSetupResponseTDD
    SUCCESSFUL OUTCOME
                            RadioLinkSetupFailureTDD
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            { procedureCode id-radioLinkSetup, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** SystemInformationUpdate ***
systemInformationUpdate NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SystemInformationUpdateRequest
    SUCCESSFUL OUTCOME
                            SystemInformationUpdateResponse
    UNSUCCESSFUL OUTCOME
                            SystemInformationUpdateFailure
    MESSAGE DISCRIMINATOR
                            { procedureCode id-systemInformationUpdate, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
```

```
-- *** Reset ***
reset NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ResetRequest
    SUCCESSFUL OUTCOME
                            ResetResponse
    MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-reset, ddMode common }
    CRITICALITY
                            reject
-- *** CommonMeasurementInitiation ***
commonMeasurementInitiation NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonMeasurementInitiationRequest
    SUCCESSFUL OUTCOME
                            CommonMeasurementInitiationResponse
    UNSUCCESSFUL OUTCOME
                            CommonMeasurementInitiationFailure
    MESSAGE DISCRIMINATOR
                            { procedureCode id-commonMeasurementInitiation, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** RadioLinkAddition (FDD) ***
radioLinkAdditionFDD NBAP-ELEMENTARY-PROCEDURE ::= {
                            RadioLinkAdditionRequestFDD
    INITIATING MESSAGE
                            RadioLinkAdditionResponseFDD
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            RadioLinkAdditionFailureFDD
    MESSAGE DISCRIMINATOR
                            dedicated
                            { procedureCode id-radioLinkAddition, ddMode fdd }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** RadioLinkAddition (TDD) ***
radioLinkAdditionTDD NBAP-ELEMENTARY-PROCEDURE ::=
                            RadioLinkAdditionRequestTDD
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RadioLinkAdditionResponseTDD
                            RadioLinkAdditionFailureTDD
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            dedicated
    PROCEDURE ID
                            { procedureCode id-radioLinkAddition, ddMode tdd }
    CRITICALITY
                            reject
-- *** RadioLinkDeletion
radioLinkDeletion NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkDeletionRequest
    SUCCESSFUL OUTCOME
                            RadioLinkDeletionResponse
                            dedicated
   MESSAGE DISCRIMINATOR
                            { procedureCode id-radioLinkDeletion, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** SynchronisedRadioLinkReconfigurationPreparation (FDD) ***
synchronisedRadioLinkReconfigurationPreparationFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkReconfigurationPrepareFDD
                            RadioLinkReconfigurationReady
    SUCCESSFUL OUTCOME
```

```
RadioLinkReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            dedicated
    PROCEDURE ID
                            { procedureCode id-synchronisedRadioLinkReconfigurationPreparation, ddMode fdd }
    CRITICALITY
-- *** SynchronisedRadioLinkReconfigurationPreparation (TDD) ***
synchronisedRadioLinkReconfigurationPreparationTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkReconfigurationPrepareTDD
                            RadioLinkReconfigurationReady
    SUCCESSFUL OUTCOME
                            RadioLinkReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            dedicated
                            { procedureCode id-synchronisedRadioLinkReconfigurationPreparation, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                            reject.
-- *** UnSynchronisedRadioLinkReconfiguration (FDD) ***
unSynchronisedRadioLinkReconfigurationFDD NBAP-ELEMENTARY-PROCEDURE ::=
                            RadioLinkReconfigurationRequestFDD
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RadioLinkReconfigurationResponse
    UNSUCCESSFUL OUTCOME
                            RadioLinkReconfigurationFailure
                            dedicated
   MESSAGE DISCRIMINATOR
                            { procedureCode id-unSynchronisedRadioLinkReconfiguration, ddMode fdd }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** UnSynchronisedRadioLinkReconfiguration (TDD) ***
unSynchronisedRadioLinkReconfigurationTDD NBAP-ELEMENTARY-PROCEDURE ::=
                            RadioLinkReconfigurationRequestTDD
    INITIATING MESSAGE
                            RadioLinkReconfigurationResponse
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            RadioLinkReconfigurationFailure
                            dedicated
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-unSynchronisedRadioLinkReconfiguration, ddMode tdd }
    CRITICALITY
                            reject
-- *** DedicatedMeasurementInitiation ***
dedicatedMeasurementInitiation NBAP-ELEMENTARY-PROCEDURE ::= {
                            DedicatedMeasurementInitiationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            DedicatedMeasurementInitiationResponse
                            DedicatedMeasurementInitiationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                           dedicated
                            { procedureCode id-dedicatedMeasurementInitiation, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** PhysicalSharedChannelReconfiguration (FDD) ***
physicalSharedChannelReconfigurationFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE PhysicalSharedChannelReconfigurationRequestFDD
    SUCCESSFUL OUTCOME PhysicalSharedChannelReconfigurationResponse
                            PhysicalSharedChannelReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                        { procedureCode id-physicalSharedChannelReconfiguration, ddMode fdd }
    CRITICALITY
                        reject
```

```
-- *** PhysicalSharedChannelReconfiguration (TDD) ***
physicalSharedChannelReconfigurationTDD NBAP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE PhysicalSharedChannelReconfigurationRequestTDD
    SUCCESSFUL OUTCOME PhysicalSharedChannelReconfigurationResponse
                            PhysicalSharedChannelReconfigurationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                        { procedureCode id-physicalSharedChannelReconfiguration, ddMode tdd }
    CRITICALITY
                        reject
--*** InformationExchangeInitiation ***
informationExchangeInitiation NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            InformationExchangeInitiationRequest
    SUCCESSFUL OUTCOME
                            InformationExchangeInitiationResponse
                            InformationExchangeInitiationFailure
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            { procedureCode id-informationExchangeInitiation, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            reject
-- *** CellSynchronisationInitiation (TDD only) ***
cellSynchronisationInitiationTDD NBAP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE CellSynchronisationInitiationRequestTDD
    SUCCESSFUL OUTCOME CellSynchronisationInitiationResponseTDD
                            CellSynchronisationInitiationFailureTDD
    UNSUCCESSFUL OUTCOME
    MESSAGE DISCRIMINATOR
                            common
                        { procedureCode id-cellSynchronisationInitiation, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                        reject
-- *** CellSynchronisationReconfiguration (TDD only) ***
cellSynchronisationReconfigurationTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE CellSynchronisationReconfigurationRequestTDD
    SUCCESSFUL OUTCOME CellSynchronisationReconfigurationResponseTDD
    UNSUCCESSFUL OUTCOME
                            CellSynchronisationReconfigurationFailureTDD
    MESSAGE DISCRIMINATOR
                        { procedureCode id-cellSynchronisationReconfiguration, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                        reject
-- *** CellSynchronisationAdjustment (TDD only) ***
cellSynchronisationAdjustmentTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE CellSynchronisationAdjustmentRequestTDD
    SUCCESSFUL OUTCOME CellSynchronisationAdjustmentResponseTDD
    UNSUCCESSFUL OUTCOME
                            CellSynchronisationAdjustmentFailureTDD
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                        { procedureCode id-cellSynchronisationAdjustment, ddMode tdd }
    CRITICALITY
                        reject
-- Class 2
```

```
-- *** ResourceStatusIndication ***
resourceStatusIndication NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ResourceStatusIndication
   MESSAGE DISCRIMINATOR common
    PROCEDURE ID
                            { procedureCode id-resourceStatusIndication, ddMode common }
    CRITICALITY
                            ignore
-- *** AuditRequired ***
auditRequired NBAP-ELEMENTARY-PROCEDURE ::= {
                            AuditRequiredIndication
    INITIATING MESSAGE
    MESSAGE DISCRIMINATOR
                            { procedureCode id-auditRequired, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** CommonMeasurementReport ***
commonMeasurementReport NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonMeasurementReport
    MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-commonMeasurementReport, ddMode common }
    CRITICALITY
                            ignore
-- *** CommonMeasurementTermination ***
commonMeasurementTermination NBAP-ELEMENTARY-PROCEDURE ::= {
                            CommonMeasurementTerminationRequest
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR
                           common
    PROCEDURE ID
                            { procedureCode id-commonMeasurementTermination, ddMode common }
    CRITICALITY
-- *** CommonMeasurementFailure ***
commonMeasurementFailure NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CommonMeasurementFailureIndication
   MESSAGE DISCRIMINATOR common
    PROCEDURE ID
                            { procedureCode id-commonMeasurementFailure, ddMode common }
    CRITICALITY
                            ignore
-- *** SynchronisedRadioLinkReconfirurationCommit ***
synchronisedRadioLinkReconfigurationCommit NBAP-ELEMENTARY-PROCEDURE ::= {
                            RadioLinkReconfigurationCommit
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR
                            dedicated
                            { procedureCode id-synchronisedRadioLinkReconfigurationCommit, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** SynchronisedRadioReconfigurationCancellation ***
synchronisedRadioLinkReconfigurationCancellation NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkReconfigurationCancel
    MESSAGE DISCRIMINATOR
                            dedicated
    PROCEDURE ID
                            { procedureCode id-synchronisedRadioLinkReconfigurationCancellation, ddMode common }
    CRITICALITY
                            ignore
```

```
-- *** RadioLinkFailure ***
radioLinkFailure NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RadioLinkFailureIndication
                           dedicated
   MESSAGE DISCRIMINATOR
   PROCEDURE ID
                            { procedureCode id-radioLinkFailure, ddMode common }
    CRITICALITY
                            ignore
-- *** RadioLinkPreemption ***
radioLinkPreemption NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RadioLinkPreemptionRequiredIndication
   MESSAGE DISCRIMINATOR dedicated
                        { procedureCode id-radioLinkPreemption, ddMode common }
    PROCEDURE ID
    CRITICALITY
                    ignore
-- *** RadioLinkRestoration ***
radioLinkRestoration NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           RadioLinkRestoreIndication
   MESSAGE DISCRIMINATOR
                           dedicated
                            { procedureCode id-radioLinkRestoration, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** DedicatedMeasurementReport ***
dedicatedMeasurementReport NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DedicatedMeasurementReport
   MESSAGE DISCRIMINATOR
                           dedicated
                            { procedureCode id-dedicatedMeasurementReport, ddMode common }
    PROCEDURE ID
    CRITICALITY
-- *** DedicatedMeasurementTermination ***
dedicatedMeasurementTermination NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           DedicatedMeasurementTerminationRequest
   MESSAGE DISCRIMINATOR
                           dedicated
                            { procedureCode id-dedicatedMeasurementTermination, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** DedicatedMeasurementFailure ***
dedicatedMeasurementFailure NBAP-ELEMENTARY-PROCEDURE ::= {
                           DedicatedMeasurementFailureIndication
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR dedicated
    PROCEDURE ID
                            { procedureCode id-dedicatedMeasurementFailure, ddMode common }
    CRITICALITY
                            ignore
-- *** DLPowerControl (FDD only) ***
downlinkPowerControlFDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           DL-PowerControlRequest
    MESSAGE DISCRIMINATOR dedicated
```

```
{ procedureCode id-downlinkPowerControl, ddMode fdd }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** DLPowerTimeslotControl (TDD only) ***
downlinkPowerTimeslotControl NBAP-ELEMENTARY-PROCEDURE ::= {
                            DL-PowerTimeslotControlRequest
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR
                           dedicated
    PROCEDURE ID
                            { procedureCode id-downlinkPowerTimeslotControl, ddMode tdd }
    CRITICALITY
                            ignore
-- *** CompressedModeCommand (FDD only) ***
compressedModeCommand NBAP-ELEMENTARY-PROCEDURE ::= {
                            CompressedModeCommand
    INITIATING MESSAGE
    MESSAGE DISCRIMINATOR
                           dedicated
                            { procedureCode id-compressedModeCommand, ddMode fdd }
    PROCEDURE ID
    CRITICALITY
-- *** UnblockResourceIndication ***
unblockResource NBAP-ELEMENTARY-PROCEDURE ::= {
                            UnblockResourceIndication
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-unblockResource, ddMode common }
    CRITICALITY
                            ignore
-- *** ErrorIndication for Dedicated procedures ***
errorIndicationForDedicated NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
                           dedicated
   MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-errorIndicationForDedicated, ddMode common }
    CRITICALITY
                            ignore
-- *** ErrorIndication for Common procedures ***
errorIndicationForCommon NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
    MESSAGE DISCRIMINATOR
                            { procedureCode id-errorIndicationForCommon, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** CellSynchronisationReporting (TDD only) ***
cellSynchronisationReportingTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellSynchronisationReportTDD
   MESSAGE DISCRIMINATOR
    PROCEDURE ID
                            { procedureCode id-cellSynchronisationReporting, ddMode tdd }
    CRITICALITY
                            ignore
-- *** CellSynchronisationTermination (TDD only) ***
cellSynchronisationTerminationTDD NBAP-ELEMENTARY-PROCEDURE ::= {
```

329

```
CellSynchronisationTerminationRequestTDD
    INITIATING MESSAGE
    MESSAGE DISCRIMINATOR
    PROCEDURE ID
                              procedureCode id-cellSynchronisationTermination, ddMode tdd }
    CRITICALITY
                            ignore
-- *** CellSynchronisationFailure (TDD only) ***
cellSynchronisationFailureTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellSynchronisationFailureIndicationTDD
    MESSAGE DISCRIMINATOR
                            { procedureCode id-cellSynchronisationFailure, ddMode tdd }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** PrivateMessage for Dedicated procedures ***
privateMessageForDedicated NBAP-ELEMENTARY-PROCEDURE ::= {
                            PrivateMessage
    INITIATING MESSAGE
                            dedicated
   MESSAGE DISCRIMINATOR
                            { procedureCode id-privateMessageForDedicated, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** PrivateMessage for Common procedures ***
privateMessageForCommon NBAP-ELEMENTARY-PROCEDURE ::= {
                            PrivateMessage
    INITIATING MESSAGE
    MESSAGE DISCRIMINATOR
                              procedureCode id-privateMessageForCommon, ddMode common
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** InformationReporting ***
informationReporting NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            InformationReport
   MESSAGE DISCRIMINATOR
                            common
    PROCEDURE ID
                            { procedureCode id-informationReporting, ddMode common }
    CRITICALITY
                            ignore
-- *** InformationExchangeTermination ***
informationExchangeTermination NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            InformationExchangeTerminationRequest
    MESSAGE DISCRIMINATOR
                            common
                            { procedureCode id-informationExchangeTermination, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
-- *** InformationExchangeFailure ***
informationExchangeFailure NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            InformationExchangeFailureIndication
   MESSAGE DISCRIMINATOR
                            { procedureCode id-informationExchangeFailure, ddMode common }
    PROCEDURE ID
    CRITICALITY
                            ignore
```

```
-- *** BearerRearrangement ***
bearerRearrangement NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           BearerRearrangementIndication
   MESSAGE DISCRIMINATOR dedicated
    PROCEDURE ID
                           { procedureCode id-BearerRearrangement, ddMode common }
                           ignore
    CRITICALITY
-- *** RadioLinkActivation (FDD) ***
radioLinkActivationFDD NBAP-ELEMENTARY-PROCEDURE ::= {
                           RadioLinkActivationCommandFDD
    INITIATING MESSAGE
   MESSAGE DISCRIMINATOR dedicated
    PROCEDURE ID
                           { procedureCode id-radioLinkActivation, ddMode fdd }
    CRITICALITY
                           ignore
-- *** RadioLinkActivation (TDD) ***
radioLinkActivationTDD NBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           RadioLinkActivationCommandTDD
   MESSAGE DISCRIMINATOR dedicated
   PROCEDURE ID
                           { procedureCode id-radioLinkActivation, ddMode tdd }
                           ignore
   CRITICALITY
END
```

9.3.3 PDU Definitions

```
AICH-TransmissionTiming,
AllocationRetentionPriority,
APPreambleSignature,
APSubChannelNumber,
AvailabilityStatus,
BCCH-ModificationTime,
BindingID,
BlockingPriorityIndicator,
SCTD-Indicator,
Cause,
CCTrCH-ID,
CDSubChannelNumbers,
CellParameterID,
CellSyncBurstCode,
CellSyncBurstCodeShift,
CellSyncBurstRepetitionPeriod,
CellSyncBurstSIR,
CellSyncBurstTiming,
CellSyncBurstTimingThreshold,
Channel-Assignment-Indication,
ChipOffset,
C-ID,
Closedlooptimingadjustmentmode,
CommonChannelsCapacityConsumptionLaw,
Compressed-Mode-Deactivation-Flag,
CommonMeasurementAccuracy,
CommonMeasurementType,
CommonMeasurementValue,
CommonMeasurementValueInformation,
CommonPhysicalChannelID,
Common-PhysicalChannel-Status-Information,
Common-TransportChannel-Status-Information,
CommonTransportChannelID,
CommonTransportChannel-InformationResponse,
CommunicationControlPortID,
ConfigurationGenerationID,
ConstantValue,
CriticalityDiagnostics,
CPCH-Allowed-Total-Rate,
CPCHScramblingCodeNumber,
CPCH-UL-DPCCH-SlotFormat,
CRNC-CommunicationContextID,
CSBMeasurementID,
CSBTransmissionID,
DCH-FDD-Information,
DCH-InformationResponse,
DCH-ID,
FDD-DCHs-to-Modify,
TDD-DCHs-to-Modify,
DCH-TDD-Information,
DedicatedChannelsCapacityConsumptionLaw,
DedicatedMeasurementType,
DedicatedMeasurementValue,
```

```
DedicatedMeasurementValueInformation,
DelayedActivation,
DelayedActivationUpdate,
DiversityControlField,
DiversityMode,
DL-DPCH-SlotFormat,
DL-DPCH-TimingAdjustment,
DL-or-Global-CapacityCredit,
DL-Power,
DL-PowerBalancing-Information,
DL-PowerBalancing-ActivationIndicator,
DLPowerAveragingWindowSize,
DL-PowerBalancing-UpdatedIndicator,
DL-ScramblingCode,
DL-TimeslotISCP,
DL-Timeslot-Information,
DL-TimeslotLCR-Information,
DL-TimeslotISCPInfo,
DL-TimeslotISCPInfoLCR,
DL-TPC-Pattern01Count,
DPC-Mode,
DPCH-ID,
DSCH-ID,
DSCH-FDD-Common-Information,
DSCH-FDD-Information,
DSCH-InformationResponse,
DSCH-TDD-Information,
DwPCH-Power,
End-Of-Audit-Sequence-Indicator,
EnhancedDSCHPC,
EnhancedDSCHPCCounter,
EnhancedDSCHPCIndicator,
EnhancedDSCHPCWnd,
EnhancedDSCHPowerOffset,
FDD-DL-ChannelisationCodeNumber.
FDD-DL-CodeInformation,
FDD-S-CCPCH-Offset,
FDD-TPC-DownlinkStepSize,
FirstRLS-Indicator,
FNReportingIndicator,
FPACH-Power,
FrameAdjustmentValue,
FrameHandlingPriority,
FrameOffset,
HS-PDSCH-FDD-Code-Information,
HS-SCCH-ID,
HS-SCCH-FDD-Code-Information,
IB-OC-ID,
IB-SG-DATA,
IB-SG-POS,
IB-SG-REP,
IB-Type,
InformationExchangeID,
InformationReportCharacteristics,
```

```
InformationType,
InnerLoopDLPCStatus,
IPDL-FDD-Parameters.
IPDL-TDD-Parameters,
IPDL-Indicator.
IPDL-TDD-Parameters-LCR,
LimitedPowerIncrease,
Local-Cell-ID,
MaximumDL-PowerCapability,
Maximum-PDSCH-Power,
MaximumTransmissionPower,
Max-Number-of-PCPCHes,
MaxNrOfUL-DPDCHs,
MaxPRACH-MidambleShifts,
MeasurementFilterCoefficient,
MeasurementID.
MidambleAllocationMode,
MidambleShiftAndBurstType,
MidambleShiftLCR,
MinimumDL-PowerCapability,
MinSpreadingFactor,
MinUL-ChannelisationCodeLength,
MultiplexingPosition,
NEOT,
NCyclesPerSFNperiod,
NRepetitionsPerCyclePeriod,
N-INSYNC-IND,
N-OUTSYNC-IND,
NeighbouringCellMeasurementInformation,
NeighbouringFDDCellMeasurementInformation,
NeighbouringTDDCellMeasurementInformation,
NodeB-CommunicationContextID,
NStartMessage,
NSubCyclesPerCyclePeriod,
PagingIndicatorLength,
PayloadCRC-PresenceIndicator,
PCCPCH-Power,
PCP-Length,
PDSCH-CodeMapping,
PDSCHSet-ID,
PDSCH-ID,
PICH-Mode,
PICH-Power,
PowerAdjustmentType,
PowerOffset,
PowerRaiseLimit,
PRACH-Midamble,
PreambleSignatures,
PreambleThreshold,
PredictedSFNSFNDeviationLimit,
PredictedTUTRANGPSDeviationLimit,
PrimaryCPICH-Power,
PrimaryScramblingCode,
```

```
PropagationDelay,
SCH-TimeSlot,
PunctureLimit.
PUSCHSet-ID,
PUSCH-ID,
OE-Selector,
Qth-Parameter,
RACH-SlotFormat,
RACH-SubChannelNumbers,
ReferenceClockAvailability,
ReferenceSFNoffset,
RepetitionLength,
RepetitionPeriod,
ReportCharacteristics,
RequestedDataValue,
RequestedDataValueInformation,
ResourceOperationalState,
RL-Set-ID,
RL-ID,
RL-Specific-DCH-Info,
Received-total-wide-band-power-Value,
AdjustmentPeriod,
ScaledAdjustmentRatio,
MaxAdjustmentStep,
RNC-ID,
ScramblingCodeNumber,
SecondaryCCPCH-SlotFormat,
Segment-Type,
S-FieldLength,
SFN,
SFNSFNChangeLimit,
SFNSFNDriftRate,
SFNSFNDriftRateQuality,
SFNSFNQuality,
ShutdownTimer,
SIB-Originator,
SpecialBurstScheduling,
SignallingBearerRequestIndicator,
SSDT-Cell-Identity,
SSDT-CellID-Length,
SSDT-Indication,
Start-Of-Audit-Sequence-Indicator,
STTD-Indicator,
SSDT-SupportIndicator,
SyncCase,
SYNCDlCodeId,
SyncFrameNumber,
SynchronisationReportCharacteristics,
SynchronisationReportType,
T-Cell,
T-RLFAILURE,
TDD-ChannelisationCode,
TDD-ChannelisationCodeLCR,
TDD-DL-Code-LCR-Information,
```

```
TDD-DPCHOffset,
TDD-TPC-DownlinkStepSize,
TDD-PhysicalChannelOffset,
TDD-UL-Code-LCR-Information,
TFCI2-BearerInformationResponse,
TFCI2BearerRequestIndicator,
TFCI-Coding,
TFCI-Presence,
TFCI-SignallingMode,
TFCS,
TimeSlot,
TimeSlotLCR,
TimeSlotDirection,
TimeSlotStatus.
TimingAdjustmentValue,
TimingAdvanceApplied,
TOAWE,
ToAWS,
TransmissionDiversityApplied,
TransmitDiversityIndicator,
TransmissionGapPatternSequenceCodeInformation,
Transmission-Gap-Pattern-Sequence-Information,
TransportBearerRequestIndicator,
TransportFormatSet,
TransportLayerAddress,
TSTD-Indicator,
TUTRANGPS,
TUTRANGPSChangeLimit,
TUTRANGPSDriftRate,
TUTRANGPSDriftRateOuality,
TUTRANGPSQuality,
UARFCN,
UC-Id,
USCH-Information,
USCH-InformationResponse,
UL-CapacityCredit,
UL-DPCCH-SlotFormat,
UL-SIR,
UL-FP-Mode,
UL-PhysCH-SF-Variation,
UL-ScramblingCode,
UL-Timeslot-Information,
UL-TimeslotLCR-Information,
UL-TimeSlot-ISCP-Info,
UL-TimeSlot-ISCP-LCR-Info,
UL-TimeslotISCP-Value,
UL-TimeslotISCP-Value-IncrDecrThres.
USCH-ID,
HSDSCH-FDD-Information,
HSDSCH-FDD-Information-Response,
HSDSCH-Information-to-Modify,
HSDSCH-MACdFlow-ID,
HSDSCH-RNTI,
HSDSCH-TDD-Information,
```

```
HSDSCH-TDD-Information-Response,
    PrimaryCCPCH-RSCP
FROM NBAP-IES
    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-Single-Container(),
    ProtocolIE-ContainerList{},
    NBAP-PRIVATE-IES,
   NBAP-PROTOCOL-IES,
   NBAP-PROTOCOL-EXTENSION
FROM NBAP-Containers
    id-Active-Pattern-Sequence-Information,
    id-AdjustmentRatio,
    id-AICH-Information,
    id-AICH-ParametersListIE-CTCH-ReconfRqstFDD,
    id-AP-AICH-Information,
    id-AP-AICH-ParametersListIE-CTCH-ReconfRqstFDD,
    id-BCH-Information,
    id-BCCH-ModificationTime,
    id-bindingID,
    id-BlockingPriorityIndicator,
    id-Cause,
    id-CauseLevel-PSCH-ReconfFailure.
    id-CauseLevel-RL-AdditionFailureFDD,
    id-CauseLevel-RL-AdditionFailureTDD,
    id-CauseLevel-RL-ReconfFailure,
    id-CauseLevel-RL-SetupFailureFDD,
    id-CauseLevel-RL-SetupFailureTDD,
    id-CauseLevel-SyncAdjustmntFailureTDD,
    id-CCP-InformationItem-AuditRsp,
    id-CCP-InformationList-AuditRsp,
    id-CCP-InformationItem-ResourceStatusInd,
    id-CCTrCH-InformationItem-RL-FailureInd,
    id-CCTrCH-InformationItem-RL-RestoreInd,
    id-CCTrCH-Initial-DL-Power-RL-AdditionRgstTDD,
    id-CCTrCH-Initial-DL-Power-RL-ReconfPrepTDD,
    id-CCTrCH-Initial-DL-Power-RL-SetupRqstTDD,
    id-CDCA-ICH-Information,
    id-CDCA-ICH-ParametersListIE-CTCH-ReconfRqstFDD,
    id-CellAdjustmentInfo-SyncAdjustmntRqstTDD,
    id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD,
    id-Cell-InformationItem-AuditRsp.
    id-Cell-InformationItem-ResourceStatusInd,
    id-Cell-InformationList-AuditRsp.
    id-CellParameterID,
    id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD,
    id-CellSyncBurstMeasureInit-CellSyncInitiationRgstTDD,
    id-cellSyncBurstRepetitionPeriod,
    id-CellSyncBurstTransReconfiguration-CellSyncReconfRgstTDD,
    id-CellSyncBurstTransReconfInfo-CellSyncReconfRqstTDD,
    id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD,
```

```
id-CellSyncBurstMeasInfoList-CellSyncReconfRqstTDD,
id-CellSyncBurstInfoList-CellSyncReconfRqstTDD,
id-CellSyncInfo-CellSyncReprtTDD.
id-CFN.
id-CFNReportingIndicator,
id-C-ID,
id-Closed-Loop-Timing-Adjustment-Mode,
id-CommonMeasurementAccuracy,
id-CommonMeasurementObjectType-CM-Rprt,
id-CommonMeasurementObjectType-CM-Rgst,
id-CommonMeasurementObjectType-CM-Rsp,
id-CommonMeasurementType,
id-CommonPhysicalChannelID,
id-CommonPhysicalChannelType-CTCH-ReconfRqstFDD,
id-CommonPhysicalChannelType-CTCH-SetupRgstFDD,
id-CommonPhysicalChannelType-CTCH-SetupRgstTDD,
id-CommunicationContextInfoItem-Reset,
id-CommunicationControlPortID,
id-CommunicationControlPortInfoItem-Reset,
id-Compressed-Mode-Deactivation-Flag,
id-ConfigurationGenerationID,
id-CPCH-Information,
id-CPCH-Parameters-CTCH-SetupRsp,
id-CPCH-ParametersListIE-CTCH-ReconfRgstFDD,
id-CRNC-CommunicationContextID,
id-CriticalityDiagnostics,
id-CSBTransmissionID,
id-CSBMeasurementID,
id-DCHs-to-Add-FDD,
id-DCHs-to-Add-TDD,
id-DCH-AddList-RL-ReconfPrepTDD,
id-DCH-DeleteList-RL-ReconfPrepFDD,
id-DCH-DeleteList-RL-ReconfPrepTDD.
id-DCH-DeleteList-RL-ReconfRqstFDD,
id-DCH-DeleteList-RL-ReconfRgstTDD,
id-DCH-FDD-Information,
id-DCH-TDD-Information,
id-DCH-InformationResponse,
id-DCH-RearrangeList-Bearer-RearrangeInd,
id-DSCH-RearrangeList-Bearer-RearrangeInd,
id-FDD-DCHs-to-Modify,
id-TDD-DCHs-to-Modify,
id-DedicatedMeasurementObjectType-DM-Rprt,
id-DedicatedMeasurementObjectType-DM-Rqst,
id-DedicatedMeasurementObjectType-DM-Rsp.
id-DedicatedMeasurementType,
id-DelayedActivation,
id-DelayedActivationList-RL-ActivationCmdFDD,
id-DelayedActivationList-RL-ActivationCmdTDD,
id-DelayedActivationInformation-RL-ActivationCmdFDD,
id-DelayedActivationInformation-RL-ActivationCmdTDD,
id-DL-CCTrCH-InformationAddList-RL-ReconfPrepTDD,
id-DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD,
id-DL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD,
```

```
id-DL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD,
id-DL-CCTrCH-InformationItem-RL-SetupRgstTDD.
id-DL-CCTrCH-InformationList-RL-AdditionRgstTDD.
id-DL-CCTrCH-InformationList-RL-SetupRgstTDD,
id-DL-CCTrCH-InformationModifyItem-RL-ReconfRastTDD.
id-DL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD,
id-DL-CCTrCH-InformationModifyList-RL-ReconfRgstTDD,
id-DL-DPCH-InformationAddListIE-RL-ReconfPrepTDD,
id-DL-DPCH-InformationItem-RL-AdditionRqstTDD,
id-DL-DPCH-InformationList-RL-SetupRgstTDD,
id-DL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD,
id-DL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD,
id-DL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD,
id-DL-DPCH-Information-RL-ReconfPrepFDD.
id-DL-DPCH-Information-RL-ReconfRgstFDD,
id-DL-DPCH-Information-RL-SetupRgstFDD,
id-DL-DPCH-TimingAdjustment,
id-DL-PowerBalancing-Information,
id-DL-PowerBalancing-ActivationIndicator,
id-DL-ReferencePowerInformationItem-DL-PC-Rgst,
id-DL-PowerBalancing-UpdatedIndicator,
id-DLReferencePower,
id-DLReferencePowerList-DL-PC-Rqst,
id-DL-TPC-Pattern01Count,
id-DPC-Mode,
id-DPCHConstant.
id-DSCH-AddItem-RL-ReconfPrepFDD,
id-DSCHs-to-Add-FDD,
id-DSCH-DeleteItem-RL-ReconfPrepFDD,
id-DSCH-DeleteList-RL-ReconfPrepFDD,
id-DSCHs-to-Add-TDD.
id-DSCH-Information-DeleteList-RL-ReconfPrepTDD,
id-DSCH-Information-ModifyList-RL-ReconfPrepTDD,
id-DSCH-InformationResponse,
id-DSCH-FDD-Information,
id-DSCH-FDD-Common-Information,
id-DSCH-TDD-Information,
id-DSCH-ModifyItem-RL-ReconfPrepFDD,
id-DSCH-ModifyList-RL-ReconfPrepFDD,
id-End-Of-Audit-Sequence-Indicator,
id-EnhancedDSCHPC,
id-EnhancedDSCHPCIndicator.
id-FACH-Information,
id-FACH-ParametersList-CTCH-ReconfRgstTDD,
id-FACH-ParametersList-CTCH-SetupRsp,
id-FACH-ParametersListIE-CTCH-ReconfRgstFDD.
id-FACH-ParametersListIE-CTCH-SetupRgstFDD,
id-FACH-ParametersListIE-CTCH-SetupRqstTDD,
id-IndicationType-ResourceStatusInd,
id-InformationExchangeID,
id-InformationExchangeObjectType-InfEx-Rqst,
id-InformationExchangeObjectType-InfEx-Rsp,
id-InformationExchangeObjectType-InfEx-Rprt,
id-InformationReportCharacteristics,
```

```
id-InformationType,
id-InitDL-Power.
id-InnerLoopDLPCStatus.
id-IntStdPhCellSyncInfoItem-CellSyncReprtTDD,
id-IPDLParameter-Information-Cell-ReconfRqstFDD,
id-IPDLParameter-Information-Cell-SetupRqstFDD,
id-IPDLParameter-Information-Cell-ReconfRgstTDD,
id-IPDLParameter-Information-Cell-SetupRgstTDD,
id-LateEntranceCellSyncInfoItem-CellSyncReprtTDD,
id-Limited-power-increase-information-Cell-SetupRgstFDD.
id-Local-Cell-ID,
id-Local-Cell-Group-InformationItem-AuditRsp,
id-Local-Cell-Group-InformationItem-ResourceStatusInd,
id-Local-Cell-Group-InformationItem2-ResourceStatusInd,
id-Local-Cell-Group-InformationList-AuditRsp,
id-Local-Cell-InformationItem-AuditRsp,
id-Local-Cell-InformationItem-ResourceStatusInd,
id-Local-Cell-InformationItem2-ResourceStatusInd,
id-Local-Cell-InformationList-AuditRsp,
id-AdjustmentPeriod,
id-MaxAdiustmentStep.
id-MaximumTransmissionPower,
id-MeasurementFilterCoefficient,
id-MeasurementID,
id-MIB-SB-SIB-InformationList-SystemInfoUpdateRgst,
id-NCyclesPerSFNperiod,
id-NeighbouringCellMeasurementInformation,
id-NodeB-CommunicationContextID,
id-NRepetitionsPerCyclePeriod,
id-P-CCPCH-Information,
id-P-CPICH-Information,
id-P-SCH-Information,
id-PCCPCH-Information-Cell-ReconfRqstTDD,
id-PCCPCH-Information-Cell-SetupRqstTDD,
id-PCH-Parameters-CTCH-ReconfRgstTDD,
id-PCH-Parameters-CTCH-SetupRsp,
id-PCH-ParametersItem-CTCH-ReconfRqstFDD,
id-PCH-ParametersItem-CTCH-SetupRqstFDD,
id-PCH-ParametersItem-CTCH-SetupRqstTDD,
id-PCH-Information,
id-PCPCH-Information,
id-PICH-ParametersItem-CTCH-ReconfRqstFDD,
id-PDSCH-Information-AddListIE-PSCH-ReconfRqst,
id-PDSCH-Information-Cell-SetupRgstFDD,
id-PDSCH-Information-Cell-ReconfRgstFDD.
id-PDSCH-Information-ModifyListIE-PSCH-ReconfRgst,
id-PDSCH-RL-ID,
id-PDSCHSets-AddList-PSCH-ReconfRqst,
id-PDSCHSets-DeleteList-PSCH-ReconfRast,
id-PDSCHSets-ModifyList-PSCH-ReconfRqst,
id-PICH-Information,
id-PICH-Parameters-CTCH-ReconfRgstTDD,
id-PICH-ParametersItem-CTCH-SetupRgstTDD,
id-PowerAdjustmentType,
```

```
id-Power-Local-Cell-Group-InformationItem-AuditRsp,
id-Power-Local-Cell-Group-InformationItem-ResourceStatusInd.
id-Power-Local-Cell-Group-InformationItem2-ResourceStatusInd.
id-Power-Local-Cell-Group-InformationList-AuditRsp,
id-Power-Local-Cell-Group-InformationList-ResourceStatusInd,
id-Power-Local-Cell-Group-InformationList2-ResourceStatusInd,
id-Power-Local-Cell-Group-ID,
id-PRACH-Information,
id-PRACHConstant.
id-PRACH-ParametersItem-CTCH-SetupRgstTDD,
id-PRACH-ParametersListIE-CTCH-ReconfRqstFDD,
id-PrimaryCCPCH-Information-Cell-ReconfRqstFDD,
id-PrimaryCCPCH-Information-Cell-SetupRgstFDD,
id-PrimaryCPICH-Information-Cell-ReconfRqstFDD.
id-PrimaryCPICH-Information-Cell-SetupRgstFDD,
id-PrimarySCH-Information-Cell-ReconfRqstFDD,
id-PrimarySCH-Information-Cell-SetupRgstFDD,
id-PrimaryScramblingCode,
id-SCH-Information-Cell-ReconfRqstTDD,
id-SCH-Information-Cell-SetupRgstTDD,
id-PUSCH-Information-AddListIE-PSCH-ReconfRgst,
id-PUSCH-Information-ModifyListIE-PSCH-ReconfRqst,
id-PUSCHConstant,
id-PUSCHSets-AddList-PSCH-ReconfRgst,
id-PUSCHSets-DeleteList-PSCH-ReconfRast,
id-PUSCHSets-ModifyList-PSCH-ReconfRqst,
id-Oth-Parameter,
id-RACH-Information,
id-RACH-Parameters-CTCH-SetupRsp,
id-RACH-ParametersItem-CTCH-SetupRgstFDD,
id-RACH-ParameterItem-CTCH-SetupRgstTDD,
id-ReferenceClockAvailability,
id-ReferenceSFNoffset,
id-ReportCharacteristics,
id-Reporting-Object-RL-FailureInd,
id-Reporting-Object-RL-RestoreInd,
id-ResetIndicator,
id-RL-InformationItem-DM-Rprt,
id-RL-InformationItem-DM-Rgst,
id-RL-InformationItem-DM-Rsp,
id-RL-InformationItem-RL-AdditionRgstFDD,
id-RL-informationItem-RL-DeletionRgst,
id-RL-InformationItem-RL-FailureInd,
id-RL-InformationItem-RL-PreemptRequiredInd,
id-RL-InformationItem-RL-ReconfPrepFDD,
id-RL-InformationItem-RL-ReconfRgstFDD,
id-RL-InformationItem-RL-RestoreInd,
id-RL-InformationItem-RL-SetupRqstFDD,
id-RL-InformationList-RL-AdditionRqstFDD,
id-RL-informationList-RL-DeletionRgst,
id-RL-InformationList-RL-PreemptRequiredInd,
id-RL-InformationList-RL-ReconfPrepFDD,
id-RL-InformationList-RL-ReconfRgstFDD,
id-RL-InformationList-RL-SetupRgstFDD,
```

```
id-RL-InformationResponseItem-RL-AdditionRspFDD,
id-RL-InformationResponseItem-RL-ReconfReady.
id-RL-InformationResponseItem-RL-ReconfRsp.
id-RL-InformationResponseItem-RL-SetupRspFDD,
id-RL-InformationResponseList-RL-AdditionRspFDD,
id-RL-InformationResponseList-RL-ReconfReady,
id-RL-InformationResponseList-RL-ReconfRsp.
id-RL-InformationResponseList-RL-SetupRspFDD,
id-RL-InformationResponse-RL-AdditionRspTDD,
id-RL-InformationResponse-RL-SetupRspTDD,
id-RL-Information-RL-AdditionRqstTDD,
id-RL-Information-RL-ReconfRqstTDD,
id-RL-Information-RL-ReconfPrepTDD,
id-RL-Information-RL-SetupRgstTDD,
id-RL-ReconfigurationFailureItem-RL-ReconfFailure,
id-RL-Set-InformationItem-DM-Rprt,
id-RL-Set-InformationItem-DM-Rsp,
id-RL-Set-InformationItem-RL-FailureInd,
id-RL-Set-InformationItem-RL-RestoreInd,
id-RL-Specific-DCH-Info,
id-S-CCPCH-Information,
id-S-CPICH-Information,
id-SCH-Information,
id-S-SCH-Information,
id-Secondary-CCPCHListIE-CTCH-ReconfRqstTDD,
id-Secondary-CCPCH-parameterListIE-CTCH-SetupRqstTDD,
id-Secondary-CCPCH-Parameters-CTCH-ReconfRgstTDD,
id-SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD,
id-SecondaryCPICH-InformationItem-Cell-SetupRgstFDD,
id-SecondaryCPICH-InformationList-Cell-ReconfRqstFDD,
id-SecondaryCPICH-InformationList-Cell-SetupRgstFDD,
id-SecondarySCH-Information-Cell-ReconfRqstFDD,
id-SecondarySCH-Information-Cell-SetupRgstFDD,
id-SegmentInformationListIE-SystemInfoUpdate,
id-SFN,
id-SFNReportingIndicator,
id-ShutdownTimer,
id-SignallingBearerRequestIndicator,
id-SSDT-CellIDforEDSCHPC,
id-Start-Of-Audit-Sequence-Indicator,
id-Successful-RL-InformationRespItem-RL-AdditionFailureFDD,
id-Successful-RL-InformationRespItem-RL-SetupFailureFDD,
id-Synchronisation-Configuration-Cell-ReconfRqst,
id-Synchronisation-Configuration-Cell-SetupRqst,
id-SyncCase,
id-SyncCaseIndicatorItem-Cell-SetupRqstTDD-PSCH,
id-SyncFrameNumber,
id-SynchronisationReportType,
id-SynchronisationReportCharacteristics,
id-SyncReportType-CellSyncReprtTDD,
id-T-Cell,
id-TargetCommunicationControlPortID,
id-TFCI2-Bearer-Information-RL-SetupRqstFDD,
id-TFCI2-BearerInformationResponse,
```

```
id-TFCI2BearerRequestIndicator,
id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD.
id-Transmission-Gap-Pattern-Sequence-Information.
id-TimeSlotConfigurationList-Cell-ReconfRgstTDD,
id-TimeSlotConfigurationList-Cell-SetupRgstTDD.
id-timeslotInfo-CellSyncInitiationRgstTDD,
id-TimeslotISCPInfo,
id-TimingAdvanceApplied.
id-TransmissionDiversityApplied,
id-transportlaveraddress,
id-UARFCNforNt,
id-UARFCNforNd,
id-UARFCNforNu.
id-UL-CCTrCH-InformationAddList-RL-ReconfPrepTDD,
id-UL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD,
id-UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD,
id-UL-CCTrCH-InformationDeleteList-RL-ReconfRgstTDD,
id-UL-CCTrCH-InformationItem-RL-SetupRgstTDD,
id-UL-CCTrCH-InformationList-RL-AdditionRgstTDD,
id-UL-CCTrCH-InformationList-RL-SetupRgstTDD,
id-UL-CCTrCH-InformationModifyItem-RL-ReconfRgstTDD,
id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD,
id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD,
id-UL-DPCH-InformationAddListIE-RL-ReconfPrepTDD.
id-UL-DPCH-InformationItem-RL-AdditionRgstTDD,
id-UL-DPCH-InformationList-RL-SetupRqstTDD,
id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD,
id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD,
id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD,
id-UL-DPCH-Information-RL-ReconfPrepFDD,
id-UL-DPCH-Information-RL-ReconfRqstFDD,
id-UL-DPCH-Information-RL-SetupRgstFDD,
id-Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD.
id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD.
id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD.
id-Unsuccessful-RL-InformationRespItem-RL-AdditionFailureFDD,
id-Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD,
id-Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD,
id-Unsuccessful-RL-InformationResp-RL-SetupFailureTDD,
id-USCH-Information-Add,
id-USCH-Information-DeleteList-RL-ReconfPrepTDD,
id-USCH-Information-ModifyList-RL-ReconfPrepTDD,
id-USCH-InformationResponse,
id-USCH-Information,
id-USCH-RearrangeList-Bearer-RearrangeInd,
id-DL-DPCH-LCR-Information-RL-SetupRgstTDD,
id-DwPCH-LCR-Information,
id-DwPCH-LCR-InformationList-AuditRsp,
id-DwPCH-LCR-Information-Cell-SetupRqstTDD,
id-DwPCH-LCR-Information-Cell-ReconfRgstTDD,
id-DwPCH-LCR-Information-ResourceStatusInd,
id-maxFACH-Power-LCR-CTCH-SetupRgstTDD,
id-maxFACH-Power-LCR-CTCH-ReconfRgstTDD,
id-FPACH-LCR-Information,
```

```
id-FPACH-LCR-Information-AuditRsp,
   id-FPACH-LCR-InformationList-AuditRsp.
   id-FPACH-LCR-InformationList-ResourceStatusInd.
   id-FPACH-LCR-Parameters-CTCH-SetupRgstTDD,
   id-FPACH-LCR-Parameters-CTCH-ReconfRqstTDD,
   id-PCCPCH-LCR-Information-Cell-SetupRgstTDD,
  id-PCH-Power-LCR-CTCH-SetupRastTDD,
  id-PCH-Power-LCR-CTCH-ReconfRastTDD,
   id-PICH-LCR-Parameters-CTCH-SetupRgstTDD,
      id-PRACH-LCR-ParametersList-CTCH-SetupRgstTDD,
   id-RL-InformationResponse-LCR-RL-SetupRspTDD,
   id-Secondary-CCPCH-LCR-parameterList-CTCH-SetupRqstTDD,
  id-TimeSlot.
   id-TimeSlotConfigurationList-LCR-Cell-ReconfRgstTDD.
  id-TimeSlotConfigurationList-LCR-Cell-SetupRgstTDD,
   id-TimeslotISCP-LCR-InfoList-RL-SetupRgstTDD,
   id-TimeSlotLCR-CM-Rgst,
id-UL-DPCH-LCR-Information-RL-SetupRqstTDD,
  id-DL-DPCH-InformationItem-LCR-RL-AdditionRgstTDD,
  id-UL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD,
  id-TimeslotISCP-InformationList-LCR-RL-AdditionRqstTDD,
  id-DL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD,
   id-DL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD,
  id-DL-Timeslot-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD.
   id-TimeslotISCPInfoList-LCR-DL-PC-RgstTDD.
   id-UL-DPCH-LCR-InformationAddListIE-RL-ReconfPrepTDD.
  id-UL-DPCH-LCR-InformationModify-AddList,
  id-UL-TimeslotLCR-Information-RL-ReconfPrepTDD,
   id-UL-SIRTarget,
   id-PDSCH-AddInformation-LCR-PSCH-ReconfRqst,
  id-PDSCH-AddInformation-LCR-AddListIE-PSCH-ReconfRqst,
  id-PDSCH-ModifyInformation-LCR-PSCH-ReconfRqst,
  id-PDSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRqst,
  id-PUSCH-AddInformation-LCR-PSCH-ReconfRqst,
  id-PUSCH-AddInformation-LCR-AddListIE-PSCH-ReconfRqst,
  id-PUSCH-ModifyInformation-LCR-PSCH-ReconfRqst,
  id-PUSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRgst,
   id-PUSCH-Info-DM-Rgst,
   id-PUSCH-Info-DM-Rsp,
  id-PUSCH-Info-DM-Rprt,
   id-RL-InformationResponse-LCR-RL-AdditionRspTDD,
  id-IPDLParameter-Information-LCR-Cell-SetupRgstTDD,
   id-IPDLParameter-Information-LCR-Cell-ReconfRqstTDD,
  id-HS-PDSCH-HS-SCCH-MaxPower-PSCH-ReconfRgst,
  id-HS-PDSCH-HS-SCCH-ScramblingCode-PSCH-ReconfRgst,
   id-HS-PDSCH-FDD-Code-Information-PSCH-ReconfRgst.
  id-HS-SCCH-FDD-Code-Information-PSCH-ReconfRgst,
  id-HS-PDSCH-TDD-Information-PSCH-ReconfRqst,
  id-Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRast,
   id-Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRgst,
   id-Delete-From-HS-SCCH-Resource-Pool-PSCH-ReconfRqst,
   id-SYNCDlCodeId-TransInitLCR-CellSyncInitiationRgstTDD,
   id-SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRqstTDD,
  id-SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRqstTDD,
```

```
id-SYNCDlCodeIdMeasReconfigurationLCR-CellSyncReconfRqstTDD,
id-SYNCDlCodeIdMeasInfoList-CellSyncReconfRgstTDD,
id-SyncDLCodeIdsMeasInfoList-CellSyncReprtTDD,
id-NSubCyclesPerCyclePeriod-CellSyncReconfRgstTDD,
id-DwPCH-Power.
id-AccumulatedClockupdate-CellSyncReprtTDD,
id-HSDSCH-FDD-Information,
id-HSDSCH-FDD-Information-Response,
id-HSDSCH-FDD-Information-to-Add,
id-HSDSCH-FDD-Information-to-Delete,
id-HSDSCH-Information-to-Modify,
id-HSDSCH-RearrangeList-Bearer-RearrangeInd,
id-HSDSCH-RNTI,
id-HSDSCH-TDD-Information.
id-HSDSCH-TDD-Information-Response,
id-HSDSCH-TDD-Information-Response-LCR,
id-HSDSCH-TDD-Information-to-Add,
id-HSDSCH-TDD-Information-to-Delete,
id-HSPDSCH-RL-ID,
id-PrimCCPCH-RSCP-DL-PC-RgstTDD,
maxNrOfCCTrCHs,
maxNrOfCellSyncBursts,
maxNrOfCodes,
maxNrOfCPCHs.
maxNrOfDCHs.
maxNrOfDLTSs,
maxNrOfDLTSLCRs,
maxNrOfDPCHs,
maxNrOfDSCHs,
maxNrOfFACHs,
maxNrOfRLs,
maxNrOfRLs-1,
maxNrOfRLs-2,
maxNrOfRLSets,
maxNrOfPCPCHs,
maxNrOfPDSCHs,
maxNrOfPUSCHs,
maxNrOfPRACHLCRs,
maxNrOfPDSCHSets,
maxNrOfPUSCHSets,
maxNrOfReceptsPerSyncFrame,
maxNrOfSCCPCHs,
maxNrOfSCCPCHLCRs,
maxNrOfULTSs,
maxNrOfULTSLCRs,
maxNrOfUSCHs,
maxAPSigNum,
maxCPCHCell,
maxFACHCell,
maxFPACHCell,
maxNoofLen,
maxRACHCell,
maxPCPCHCell,
```

```
maxPRACHCell,
   maxSCCPCHCell,
   maxSCPICHCell.
   maxCellinNodeB,
   maxCCPinNodeB.
   maxCommunicationContext,
   maxLocalCellinNodeB,
   maxNrOfSlotFormatsPRACH,
   maxIB,
   maxIBSEG,
   maxNrOfHSSCCHs,
   maxNrOfSyncFramesLCR,
   maxNrOfReceptionsperSyncFrameLCR,
   maxNrOfSyncDLCodesLCR,
   maxNrOfMACdFlows
FROM NBAP-Constants;
  COMMON TRANSPORT CHANNEL SETUP REQUEST FDD
__ *********************
CommonTransportChannelSetupRequestFDD ::= SEQUENCE
   protocolIEs
                          ProtocolIE-Container
                                                  {{CommonTransportChannelSetupRequestFDD-IEs}},
                           ProtocolExtensionContainer {{CommonTransportChannelSetupRequestFDD-Extensions}}
   protocolExtensions
                                                                                                              OPTIONAL,
CommonTransportChannelSetupRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CommonTransportChannelSetupRequestFDD-IEs NBAP-PROTOCOL-IES ::=
    { ID
          id-C-ID
                                                              CRITICALITY
                                                                              reject
                                                                                         TYPE
                                                                                                                 C-ID
       PRESENCE mandatory } |
           id-ConfigurationGenerationID
                                                                                                                 ConfigurationGenerationID
                                                              CRITICALITY
                                                                              reject
                                                                                         TYPE
               PRESENCE
                         mandatory }|
    { ID
           id-CommonPhysicalChannelType-CTCH-SetupRqstFDD
                                                              CRITICALITY
                                                                              ignore
                                                                                         TYPE
                                                                                                                 CommonPhysicalChannelType-CTCH-
                   PRESENCE mandatory },
SetupRqstFDD
CommonPhysicalChannelType-CTCH-SetupRqstFDD ::= CHOICE {
   secondary-CCPCH-parameters
                                  Secondary-CCPCH-CTCH-SetupRqstFDD,
   pRACH-parameters
                                  PRACH-CTCH-SetupRqstFDD,
   pCPCHes-parameters
                                  PCPCH-CTCH-SetupRqstFDD,
Secondary-CCPCH-CTCH-SetupRqstFDD ::= SEQUENCE {
                                          CommonPhysicalChannelID,
   commonPhysicalChannelID
    fdd-S-CCPCH-Offset
                                          FDD-S-CCPCH-Offset,
   dl-ScramblingCode
                                          DL-ScramblingCode OPTIONAL,
```

```
-- This IE shall be present if the PCH Parameters IE is not present
   fdd-DL-ChannelisationCodeNumber
                                         FDD-DL-ChannelisationCodeNumber.
                  TFCS.
   secondary-CCPCH-SlotFormat
                                         SecondaryCCPCH-SlotFormat,
   t.FCI-Presence
                                         TFCI-Presence OPTIONAL.
   -- This IE shall be present if the Secondary CCPCH Slot Format is set to any of the values from 8 to 17
   multiplexingPosition
                                         MultiplexingPosition,
   powerOffsetInformation
                                         PowerOffsetInformation-CTCH-SetupRgstFDD,
   sTTD-Indicator
                                         STTD-Indicator,
                                         FACH-ParametersList-CTCH-SetupRqstFDD
   fACH-Parameters
                                                                                   OPTIONAL,
                                         PCH-Parameters-CTCH-SetupRqstFDD
                                                                                   OPTIONAL,
   pCH-Parameters
   iE-Extensions
                                         ProtocolExtensionContainer { { Secondary-CCPCHItem-CTCH-SetupRqstFDD-ExtIEs} }
                                                                                                                        OPTIONAL,
   . . .
Secondary-CCPCHItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PowerOffsetInformation-CTCH-SetupRqstFDD ::= SEQUENCE {
   pO1-ForTFCI-Bits
                                         PowerOffset,
   pO3-ForPilotBits
                                         PowerOffset,
                                         ProtocolExtensionContainer { { PowerOffsetInformation-CTCH-SetupRqstFDD-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
PowerOffsetInformation-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
FACH-ParametersList-CTCH-SetupRqstFDD ::= ProtocolIE-Single-Container {{ FACH-ParametersListIEs-CTCH-SetupRqstFDD }}
FACH-ParametersListIEs-CTCH-SetupRqstFDD NBAP-PROTOCOL-IES ::= {
    FACH-ParametersListIE-CTCH-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfFACHs)) OF FACH-ParametersItem-CTCH-SetupRqstFDD
FACH-ParametersItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   commonTransportChannelID
                                     CommonTransportChannelID,
   transportFormatSet
                                     TransportFormatSet,
   t.oAWS
                                     ToAWS,
   toAWE
                                     ToAWE,
   maxFACH-Power
                                     DL-Power,
                                     ProtocolExtensionContainer { FACH-ParametersItem-CTCH-SetupRgstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                     OPTIONAL,
FACH-ParametersItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
       id-bindingID
                                         CRITICALITY ignore
                                                                EXTENSION
                                                                           BindingID
                                                                                          PRESENCE
                                                                                                             optional }|
{ ID
       id-transportlayeraddress
                                         CRITICALITY ignore
                                                                EXTENSION
                                                                           TransportLayerAddress
                                                                                                                PRESENCE
                                                                                                                           optional },
   . . .
```

```
PCH-Parameters-CTCH-SetupRqstFDD ::= ProtocolIE-Single-Container {{ PCH-ParametersIE-CTCH-SetupRqstFDD }}
PCH-ParametersIE-CTCH-SetupRqstFDD NBAP-PROTOCOL-IES ::= {
    PCH-ParametersItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   commonTransportChannelID
                                    CommonTransportChannelID,
   transportFormatSet
                                    TransportFormatSet,
   toAWS
                                    ToAWS,
   toAWE
                                    TOAWE,
   pCH-Power
                                    DL-Power,
   pICH-Parameters
                                        PICH-Parameters-CTCH-SetupRqstFDD,
   iE-Extensions
                                    ProtocolExtensionContainer { { PCH-ParametersItem-CTCH-SetupRgstFDD-ExtIEs} }
                                                                                                               OPTIONAL.
PCH-ParametersItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
          id-bindingID
                                            CRITICALITY ignore
                                                                  EXTENSION
                                                                             BindingID
                                                                                                          PRESENCE
                                                                                                                    optional }
    ID
          id-transportlayeraddress
                                            CRITICALITY ignore
                                                                                                                       optional },
                                                                  EXTENSION
                                                                            TransportLayerAddress
                                                                                                            PRESENCE
PICH-Parameters-CTCH-SetupRgstFDD ::= SEOUENCE {
   commonPhysicalChannelID
                                            CommonPhysicalChannelID,
   fdd-dl-ChannelisationCodeNumber
                                            FDD-DL-ChannelisationCodeNumber,
   pICH-Power
                                            PICH-Power,
   pICH-Mode
                                            PICH-Mode,
   sTTD-Indicator
                                            STTD-Indicator,
                                            ProtocolExtensionContainer { { PICH-Parameters-CTCH-SetupRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                    OPTIONAL,
   . . .
PICH-Parameters-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PRACH-CTCH-SetupRgstFDD ::= SEQUENCE
   commonPhysicalChannelID
                                            CommonPhysicalChannelID,
   scramblingCodeNumber
                                        ScramblingCodeNumber,
   tFCS
                                            TFCS,
   preambleSignatures
                                            PreambleSignatures,
   allowedSlotFormatInformation
                                            AllowedSlotFormatInformationList-CTCH-SetupRqstFDD,
   rACH-SubChannelNumbers
                                            RACH-SubChannelNumbers,
   ul-punctureLimit
                                            PunctureLimit,
   preambleThreshold
                                            PreambleThreshold,
   rACH-Parameters
                                            RACH-Parameters-CTCH-SetupRqstFDD,
   aICH-Parameters
                                            AICH-Parameters-CTCH-SetupRqstFDD,
   iE-Extensions
                                            OPTIONAL.
   . . .
PRACHItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
```

347

```
AllowedSlotFormatInformationList-CTCH-SetupRqstFDD ::= SEOUENCE (SIZE (1.. maxNrOfSlotFormatsPRACH)) OF AllowedSlotFormatInformationItem-CTCH-
SetupRastFDD
AllowedSlotFormatInformationItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   rACHSlotFormat
                                         RACH-SlotFormat,
   iE-Extensions
                                         OPTIONAL,
   . . .
AllowedSlotFormatInformationItem-CTCH-SetupRgstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RACH-Parameters-CTCH-SetupRqstFDD ::= ProtocolIE-Single-Container {{ RACH-ParametersIE-CTCH-SetupRqstFDD }}
RACH-ParametersIE-CTCH-SetupRgstFDD NBAP-PROTOCOL-IES ::= {
   RACH-ParametersItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   commonTransportChannelID
                                         CommonTransportChannelID,
   transportFormatSet
                                         TransportFormatSet,
   iE-Extensions
                                         ProtocolExtensionContainer { RACH-ParametersItem-CTCH-SetupRqstFDD-ExtIEs} }
RACH-ParametersItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ID
          id-bindingID
                                         CRITICALITY ignore
                                                             EXTENSION
                                                                       BindingID
                                                                                                   PRESENCE
                                                                                                             optional }
    ID
          id-transportlayeraddress
                                         CRITICALITY ignore
                                                                                                               optional },
                                                             EXTENSION
                                                                       TransportLayerAddress
                                                                                                     PRESENCE
   . . .
AICH-Parameters-CTCH-SetupRqstFDD ::= SEQUENCE {
   commonPhysicalChannelID
                                         CommonPhysicalChannelID,
   aICH-TransmissionTiming
                                         AICH-TransmissionTiming,
   fdd-dl-ChannelisationCodeNumber
                                         FDD-DL-ChannelisationCodeNumber,
   aICH-Power
                                         AICH-Power,
   sTTD-Indicator
                                         STTD-Indicator,
                                         ProtocolExtensionContainer { { AICH-Parameters-CTCH-SetupRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                            OPTIONAL,
AICH-Parameters-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PCPCH-CTCH-SetupRqstFDD ::= SEOUENCE {
   cPCH-Parameters
                              CPCH-Parameters-CTCH-SetupRqstFDD,
   iE-Extensions
                              OPTIONAL,
```

```
PCPCHItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CPCH-Parameters-CTCH-SetupRqstFDD ::= SEQUENCE {
    commonTransportChannelID
                                     CommonTransportChannelID,
    transportFormatSet
                                    TransportFormatSet,
    aPPreambleScramblingCode
                                    CPCHScramblingCodeNumber,
    cDPreambleScramblingCode
                                    CPCHScramblingCodeNumber,
    tFCS
                                    TFCS,
    cDSignatures
                                     PreambleSignatures
                                                                 OPTIONAL,
    cDSubChannelNumbers
                                    CDSubChannelNumbers
                                                                 OPTIONAL,
    punctureLimit.
                                     PunctureLimit.
    cPCH-UL-DPCCH-SlotFormat
                                    CPCH-UL-DPCCH-SlotFormat,
    uL-SIR
                                    UL-SIR,
    initialDL-transmissionPower
                                    DL-Power,
    maximumDLPower
                                    DL-Power,
    minimumDLPower
                                    DL-Power,
    pO2-ForTPC-Bits
                                     PowerOffset,
    fDD-TPC-DownlinkStepSize
                                     FDD-TPC-DownlinkStepSize,
                                    NStartMessage,
    nStartMessage
    nEOT
                                    NEOT,
    channel-Assignment-Indication
                                    Channel-Assignment-Indication,
    cPCH-Allowed-Total-Rate
                                    CPCH-Allowed-Total-Rate,
    pCPCHChannelInfomation
                                     PCPCHChannelInformationList-CTCH-SetupRqstFDD,
                                    VCAMMapping-InformationList-CTCH-SetupRgstFDD
    vCAMMapping-Information
                                                                                          OPTIONAL,
    -- this IE shall be present if the Channel Assignment Indication is set to "CA Active" --
                                    AP-AICH-Parameters-CTCH-SetupRgstFDD,
    aP-AICH-Parameters
    cDCA-ICH-Parameters
                                    CDCA-ICH-Parameters-CTCH-SetupRqstFDD,
                                    ProtocolExtensionContainer { { CPCH-Parameters-CTCH-SetupRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                         OPTIONAL,
CPCH-Parameters-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
            id-bindingID
                                                CRITICALITY ignore
                                                                         EXTENSION
                                                                                     BindingID
                                                                                                                      PRESENCE
                                                                                                                                  optional }|
                                                                                     TransportLayerAddress
     ID
            id-transportlayeraddress
                                                 CRITICALITY ignore
                                                                         EXTENSION
                                                                                                                         PRESENCE
                                                                                                                                     optional },
    . . .
PCPCHChannelInformationList-CTCH-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfPCPCHs)) OF PCPCHChannelInformationItem-CTCH-SetupRqstFDD
PCPCHChannelInformationItem-CTCH-SetupRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                        CommonPhysicalChannelID,
    cPCHScramblingCodeNumber
                                        CPCHScramblingCodeNumber,
    dL-ScramblingCode
                                        DL-ScramblingCode,
    fdd-dl-ChannelisationCodeNumber
                                        FDD-DL-ChannelisationCodeNumber,
    pCP-Length
                                        PCP-Length,
    uCSM-Information
                                        UCSM-Information-CTCH-SetupRqstFDD
                                                                                 OPTIONAL,
    -- this IE shall be present if the Channel Assignment Indication is equal to "CA Inactive" --
                                        ProtocolExtensionContainer { { PCPCHChannelInformationItem-CTCH-SetupRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                                     OPTIONAL,
    . . .
```

```
PCPCHChannelInformationItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UCSM-Information-CTCH-SetupRgstFDD ::= SEQUENCE {
                                      MinUL-ChannelisationCodeLength,
   minUL-ChannelisationCodeLength
   nFmax
                                      NFmax,
    channelRequestParameters
                                      ChannelRequestParametersList-CTCH-SetupRqstFDD
   iE-Extensions
                                      ProtocolExtensionContainer { { UCSM-InformationItem-CTCH-SetupRqstFDD-ExtIEs} }
                                                                                                                       OPTIONAL,
UCSM-InformationItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ChannelRequestParametersList-CTCH-SetupRqstFDD ::= SEOUENCE (SIZE (1..maxAPSiqNum)) OF ChannelRequestParametersItem-CTCH-SetupRqstFDD
ChannelRequestParametersItem-CTCH-SetupRgstFDD ::= SEQUENCE {
    aPPreambleSignature
                              APPreambleSignature,
    aPSubChannelNumber
                              APSubChannelNumber
                                                      OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { { ChannelRequestParametersItem-CTCH-SetupRqstFDD-ExtIEs} }
                                                                                                                       OPTIONAL,
ChannelRequestParametersItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
VCAMMapping-InformationList-CTCH-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxNoofLen)) OF VCAMMapping-InformationItem-CTCH-SetupRqstFDD
VCAMMapping-InformationItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   minUL-ChannelisationCodeLength
                                      MinUL-ChannelisationCodeLength,
   nFmax
                                      NFmax,
   max-Number-of-PCPCHes
                                      Max-Number-of-PCPCHes,
   sFRequestParameters
                                      SFRequestParametersList-CTCH-SetupRqstFDD,
   iE-Extensions
                                      ProtocolExtensionContainer { { VCAMMapping-InformationItem-CTCH-SetupRqstFDD-ExtIEs} }
                                                                                                                             OPTIONAL,
VCAMMapping-InformationItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SFRequestParametersList-CTCH-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxAPSigNum)) OF SFRequestParametersItem-CTCH-SetupRqstFDD
SFRequestParametersItem-CTCH-SetupRqstFDD ::= SEQUENCE {
   aPPreambleSignature
                              APPreambleSignature,
    aPSubChannelNumber
                              APSubChannelNumber
                                                      OPTIONAL,
   iE-Extensions
                              SFRequestParametersItem-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION::= {
```

```
AP-AICH-Parameters-CTCH-SetupRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                              CommonPhysicalChannelID,
    fdd-dl-ChannelisationCodeNumber
                                              FDD-DL-ChannelisationCodeNumber,
   aP-AICH-Power
                                              AICH-Power,
   cSICH-Power
                                              AICH-Power,
   sTTD-Indicator
                                              STTD-Indicator,
                                              ProtocolExtensionContainer { { AP-AICH-Parameters-CTCH-SetupRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
AP-AICH-Parameters-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CDCA-ICH-Parameters-CTCH-SetupRqstFDD ::= SEQUENCE
    commonPhysicalChannelID
                                              CommonPhysicalChannelID,
    fdd-dl-ChannelisationCodeNumber
                                              FDD-DL-ChannelisationCodeNumber,
   cDCA-ICH-Power
                                              AICH-Power,
   sTTD-Indicator
                                              STTD-Indicator,
                                              ProtocolExtensionContainer { { CDCA-ICH-Parameters-CTCH-SetupRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
    . . .
CDCA-ICH-Parameters-CTCH-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- COMMON TRANSPORT CHANNEL SETUP REQUEST TDD
  CommonTransportChannelSetupRequestTDD ::= SEQUENCE {
                                                  {{CommonTransportChannelSetupRequestTDD-IEs}},
   protocolIEs
                          ProtocolIE-Container
                          ProtocolExtensionContainer {{CommonTransportChannelSetupRequestTDD-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
    . . .
CommonTransportChannelSetupRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
    { ID
          id-C-ID
                                                                                                                C-ID
                                                                 CRITICALITY reject
                                                                                        TYPE
       PRESENCE mandatory } |
           id-ConfigurationGenerationID
                                                                 CRITICALITY reject
                                                                                        TYPE
                                                                                                                ConfigurationGenerationID
               PRESENCE mandatory } |
           id-CommonPhysicalChannelType-CTCH-SetupRqstTDD
                                                                 CRITICALITY ignore
                                                                                        TYPE
                                                                                                                CommonPhysicalChannelType-CTCH-
    { ID
                   PRESENCE mandatory },
SetupRqstTDD
    . . .
CommonTransportChannelSetupRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
CommonPhysicalChannelType-CTCH-SetupRqstTDD ::= CHOICE {
   secondary-CCPCH-parameters
                                             Secondary-CCPCH-CTCH-SetupRqstTDD,
   pRACH-parameters
                                             PRACH-CTCH-SetupRqstTDD,
Secondary-CCPCH-CTCH-SetupRgstTDD ::= SEQUENCE {
   sCCPCH-CCTrCH-ID
                                             CCTrCH-ID,
   tFCS
                                             TFCS,
   tFCI-Coding
                                             TFCI-Coding
                                             PunctureLimit.
   punctureLimit
   secondaryCCPCH-parameterList
                                             Secondary-CCPCH-parameterList-CTCH-SetupRqstTDD,
   fACH-ParametersList
                                             FACH-ParametersList-CTCH-SetupRqstTDD
                                                                                      OPTIONAL,
   pCH-Parameters
                                             PCH-Parameters-CTCH-SetupRqstTDD
                                                                                      OPTIONAL,
                                             ProtocolExtensionContainer {{Secondary-CCPCHItem-CTCH-SetupRqstTDD-ExtIEs}}
   iE-Extensions
Secondary-CCPCHItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
         id-Secondary-CCPCH-LCR-parameterList-CTCH-SetupRqstTDD
                                                                       CRITICALITY reject
                                                                                                                       Secondary-CCPCH-LCR-
parameterList-CTCH-SetupRqstTDD
                                 PRESENCE
                                          optional }, -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
   . . .
Secondary-CCPCH-parameterList-CTCH-SetupRqstTDD ::= ProtocolIE-Single-Container {{ Secondary-CCPCH-parameterListIEs-CTCH-SetupRqstTDD }}
Secondary-CCPCH-parameterListIEs-CTCH-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
    mandatory } -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
Secondary-CCPCH-parameterListIE-CTCH-SetupRgstTDD ::= SEQUENCE (SIZE (1..maxNrOfSCCPCHs)) OF Secondary-CCPCH-parameterItem-CTCH-SetupRgstTDD
Secondary-CCPCH-parameterItem-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                             CommonPhysicalChannelID,
   tdd-ChannelisationCode
                                             TDD-ChannelisationCode,
   timeslot
                                             TimeSlot,
   midambleShiftandBurstType
                                             MidambleShiftAndBurstType,
   tdd-PhysicalChannelOffset
                                             TDD-PhysicalChannelOffset,
   repetitionPeriod
                                             RepetitionPeriod,
   repetitionLength
                                             RepetitionLength,
   s-CCPCH-Power
                                             DL-Power,
                                             ProtocolExtensionContainer { { Secondary-CCPCH-parameterItem-CTCH-SetupRqstTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
Secondary-CCPCH-parameterItem-CTCH-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
FACH-ParametersList-CTCH-SetupRqstTDD ::= ProtocolIE-Single-Container {{ FACH-ParametersListIEs-CTCH-SetupRqstTDD }}
```

```
FACH-ParametersListIEs-CTCH-SetupRgstTDD NBAP-PROTOCOL-IES ::= {
   FACH-ParametersListIE-CTCH-SetupRqstTDD ::= SEOUENCE (SIZE (1..maxNrOfFACHs)) OF FACH-ParametersItem-CTCH-SetupRqstTDD
FACH-ParametersItem-CTCH-SetupRgstTDD ::= SEOUENCE {
   commonTransportChannelID
                                   CommonTransportChannelID,
   fACH-CCTrCH-ID
                                   CCTrCH-ID,
   dl-TransportFormatSet
                                   TransportFormatSet,
   toAWS
                                   ToAWS.
                                   TOAWE.
   t.oAWE
   iE-Extensions
                                   OPTIONAL.
FACH-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
         id-maxFACH-Power-LCR-CTCH-SetupRgstTDD
                                                CRITICALITY reject
                                                                     EXTENSION DL-Power
                                                                                                          optional }
   -- Applicable to 1.28Mcps TDD only
    TD
         id-bindingID
                                       CRITICALITY ignore
                                                           EXTENSION
                                                                    BindingID
                                                                                              PRESENCE
                                                                                                        optional }|
   { ID
         id-transportlayeraddress
                                       CRITICALITY ignore
                                                           EXTENSION
                                                                    TransportLayerAddress
                                                                                                 PRESENCE
                                                                                                          optional },
   . . .
PCH-Parameters-CTCH-SetupRqstTDD ::= ProtocolIE-Single-Container {{ PCH-ParametersIE-CTCH-SetupRqstTDD }}
PCH-ParametersIE-CTCH-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
   PCH-ParametersItem-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonTransportChannelID
                                   CommonTransportChannelID,
                                   CCTrCH-ID,
   pCH-CCTrCH-ID
   dl-TransportFormatSet
                                   TransportFormatSet,
   toAWS
                                   ToAWS,
   toAWE
                                   TOAWE,
                                   PICH-Parameters-CTCH-SetupRqstTDD,
   pICH-Parameters
                                   iE-Extensions
                                                                                                        OPTIONAL,
   . . .
PCH-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
        id-PCH-Power-LCR-CTCH-SetupRqstTDD
                                             CRITICALITY reject
                                                                                                 PRESENCE
                                                                                                          optional }
                                                                 EXTENSION DL-Power
   -- Applicable to 1.28Mcps TDD only
   { ID
        id-PICH-LCR-Parameters-CTCH-SetupRqstTDD
                                                    CRITICALITY reject
                                                                        EXTENSION
                                                                                              PICH-LCR-Parameters-CTCH-
SetupRastTDD
                PRESENCE optional
                                   } -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
                                                          EXTENSION BindingID
   ID
         id-bindingID
                                       CRITICALITY ignore
                                                                                              PRESENCE
                                                                                                        optional }
    ID
         id-transportlayeraddress
                                       CRITICALITY ignore
                                                          EXTENSION
                                                                    TransportLayerAddress
                                                                                                 PRESENCE
                                                                                                          optional },
   . . .
PICH-Parameters-CTCH-SetupRqstTDD ::= ProtocolIE-Single-Container {{ PICH-ParametersIE-CTCH-SetupRqstTDD }}
```

OPTIONAL,

```
PICH-ParametersIE-CTCH-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
    -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
PICH-ParametersItem-CTCH-SetupRqstTDD ::= SEQUENCE {
                                         CommonPhysicalChannelID,
    commonPhysicalChannelID
   tdd-ChannelisationCode
                                         TDD-ChannelisationCode,
    timeSlot
                                         TimeSlot,
   midambleshiftAndBurstType
                                         MidambleShiftAndBurstType,
                                         TDD-PhysicalChannelOffset,
    tdd-PhysicalChannelOffset
   repetitionPeriod
                                         RepetitionPeriod,
    repetitionLength
                                         RepetitionLength,
   pagingIndicatorLength
                                         PagingIndicatorLength,
   pICH-Power
                                         PICH-Power.
   iE-Extensions
                                         ProtocolExtensionContainer { { PICH-ParametersItem-CTCH-SetupRgstTDD-ExtIEs} }
                                                                                                                         OPTIONAL,
PICH-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PICH-LCR-Parameters-CTCH-SetupRqstTDD ::= SEQUENCE {
    commonPhysicalChannelID
                                         CommonPhysicalChannelID,
    tdd-ChannelisationCodeLCR
                                         TDD-ChannelisationCodeLCR,
    timeSlotLCR
                                         TimeSlotLCR.
   midambleShiftLCR
                                         MidambleShiftLCR,
    tdd-PhysicalChannelOffset
                                         TDD-PhysicalChannelOffset,
    repetitionPeriod
                                         RepetitionPeriod,
    repetitionLength
                                         RepetitionLength,
    pagingIndicatorLength
                                         PagingIndicatorLength,
   pICH-Power
                                         PICH-Power,
   iE-Extensions
                                         ProtocolExtensionContainer { { PICH-LCR-ParametersItem-CTCH-SetupRqstTDD-ExtIEs} }
PICH-LCR-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Secondary-CCPCH-LCR-parameterList-CTCH-SetupRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfSCCPCHLCRs)) OF Secondary-CCPCH-LCR-parameterItem-CTCH-
SetupRastTDD
Secondary-CCPCH-LCR-parameterItem-CTCH-SetupRqstTDD ::= SEQUENCE {
    commonPhysicalChannelID
                                             CommonPhysicalChannelID,
    tdd-ChannelisationCodeLCR
                                             TDD-ChannelisationCodeLCR,
   timeslotLCR
                                             TimeSlotLCR,
   midambleShiftLCR
                                             MidambleShiftLCR,
    tdd-PhysicalChannelOffset
                                             TDD-PhysicalChannelOffset,
    repetitionPeriod
                                             RepetitionPeriod,
    repetitionLength
                                             RepetitionLength,
    s-CCPCH-Power
                                             DL-Power,
    iE-Extensions
                                             ProtocolExtensionContainer { { Secondary-CCPCH-LCR-parameterItem-CTCH-SetupRqstTDD-ExtIEs} }
```

```
Secondary-CCPCH-LCR-parameterItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PRACH-CTCH-SetupRqstTDD ::= SEQUENCE {
   pRACH-Parameters-CTCH-SetupRqstTDD
                                       PRACH-Parameters-CTCH-SetupRqstTDD,
                                       ProtocolExtensionContainer { { PRACH-CTCH-SetupRqstTDD-ExtIEs } }
   iE-Extensions
                                                                                                 OPTIONAL,
PRACH-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-PRACH-LCR-ParametersList-CTCH-SetupRqstTDD
                                                        CRITICALITY reject
                                                                                                PRACH-LCR-ParametersList-CTCH-
SetupRgstTDD PRESENCE
                          optional } -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
   { ID id-FPACH-LCR-Parameters-CTCH-SetupRgstTDD
                                              CRITICALITY reject
                                                                                                FPACH-LCR-Parameters-CTCH-
                          optional }, -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
SetupRastTDD
              PRESENCE
PRACH-Parameters-CTCH-SetupRqstTDD ::= ProtocolIE-Single-Container {{ PRACH-ParametersIE-CTCH-SetupRqstTDD }}
PRACH-ParametersIE-CTCH-SetupRgstTDD NBAP-PROTOCOL-IES ::= {
   } -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
PRACH-ParametersItem-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                       CommonPhysicalChannelID,
   t.FCS
                                       TFCS,
   timeslot
                                       TimeSlot,
   tdd-ChannelisationCode
                                       TDD-ChannelisationCode,
   maxPRACH-MidambleShifts
                                       MaxPRACH-MidambleShifts,
   pRACH-Midamble
                                       PRACH-Midamble,
   rACH
                                       RACH-Parameter-CTCH-SetupRqstTDD,
   iE-Extensions
                                       OPTIONAL,
PRACH-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RACH-Parameter-CTCH-SetupRgstTDD ::= ProtocolIE-Single-Container {{ RACH-ParameterIE-CTCH-SetupRgstTDD }}
RACH-ParameterIE-CTCH-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
   RACH-ParameterItem-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonTransportChannelID
                                       CommonTransportChannelID,
   uL-TransportFormatSet
                                       TransportFormatSet,
   iE-Extensions
                                       ProtocolExtensionContainer { { RACH-ParameterItem-CTCH-SetupRqstTDD-ExtIEs} }
                                                                                                           OPTIONAL,
```

```
RACH-ParameterItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
          id-bindingID
                                           CRITICALITY ignore
                                                                           BindingID
                                                                                                                   optional }|
                                                                 EXTENSION
                                                                                                        PRESENCE
          id-transportlayeraddress
                                           CRITICALITY ignore
    { ID
                                                                           TransportLayerAddress
                                                                                                           PRESENCE
                                                                                                                     optional },
                                                                 EXTENSION
PRACH-LCR-ParametersList-CTCH-SetupRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfPRACHLCRs)) OF PRACH-LCR-ParametersItem-CTCH-SetupRqstTDD
PRACH-LCR-ParametersItem-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                           CommonPhysicalChannelID,
   t.FCS
                                           TFCS,
   timeslotLCR
                                           TimeSlotLCR,
   tdd-ChannelisationCodeLCR
                                           TDD-ChannelisationCodeLCR,
   maxPRACH-MidambleShifts
                                           MaxPRACH-MidambleShifts,
   pRACH-Midamble
                                           PRACH-Midamble,
   rACH
                                           RACH-Parameter-CTCH-SetupRgstTDD,
                                           iE-Extensions
                                                                                                                           OPTIONAL,
PRACH-LCR-ParametersItem-CTCH-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
FPACH-LCR-Parameters-CTCH-SetupRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                           CommonPhysicalChannelID,
   tdd-ChannelisationCodeLCR
                                           TDD-ChannelisationCodeLCR,
   timeslotLCR
                                           TimeSlotLCR,
   midambleShiftLCR
                                           MidambleShiftLCR,
   fPACH-Power
                                       FPACH-Power,
                                           ProtocolExtensionContainer { { FPACH-LCR-ParametersItem-CTCH-SetupRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                           OPTIONAL,
   . . .
FPACH-LCR-ParametersItem-CTCH-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  -- COMMON TRANSPORT CHANNEL SETUP RESPONSE
__ ********************
CommonTransportChannelSetupResponse ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                               {{CommonTransportChannelSetupResponse-IEs}},
                         ProtocolExtensionContainer {{CommonTransportChannelSetupResponse-Extensions}}
   protocolExtensions
                                                                                                   OPTIONAL,
CommonTransportChannelSetupResponse-IEs NBAP-PROTOCOL-IES ::= {
```

```
id-FACH-ParametersList-CTCH-SetupRsp
                                              CRITICALITY ignore
                                                                          FACH-CommonTransportChannel-InformationResponse
                                                                   TYPE
                                                                                                                         PRESENCE
   optional
   { ID
         id-PCH-Parameters-CTCH-SetupRsp
                                              CRITICALITY ignore
                                                                   TYPE
                                                                          CommonTransportChannel-InformationResponse
                                                                                                                         PRESENCE
   optional
   { ID
          id-RACH-Parameters-CTCH-SetupRsp
                                              CRITICALITY ignore
                                                                          CommonTransportChannel-InformationResponse
                                                                                                                      PRESENCE
                                                                   TYPE
   optional }|
   { ID
          id-CPCH-Parameters-CTCH-SetupRsp
                                              CRITICALITY ignore
                                                                          TYPE
                                                                                 CommonTransportChannel-InformationResponse
   PRESENCE
              optional
         id-CriticalityDiagnostics
                                                     CRITICALITY
                                                                   ignore
                                                                             TYPE
                                                                                     CriticalityDiagnostics
                                                                                                                         PRESENCE
   optional
CommonTransportChannelSetupResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
FACH-CommonTransportChannel-InformationResponse ::= SEQUENCE (SIZE (1..maxNrOfFACHs)) OF CommonTransportChannel-InformationResponse
__ **********************
  COMMON TRANSPORT CHANNEL SETUP FAILURE
  *****************
CommonTransportChannelSetupFailure ::= SEOUENCE {
                                              {{CommonTransportChannelSetupFailure-IEs}},
   protocolIEs
                        ProtocolIE-Container
   protocolExtensions
                        ProtocolExtensionContainer {{CommonTransportChannelSetupFailure-Extensions}}
                                                                                                 OPTIONAL,
CommonTransportChannelSetupFailure-IEs NBAP-PROTOCOL-IES ::= {
                                   CRITICALITY ignore
                                                                                                      PRESENCE mandatory
                                                        TYPE
                                                               Cause
          { ID
                                                        TYPE
                                                               CriticalityDiagnostics
                                                                                                      PRESENCE optional
CommonTransportChannelSetupFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   -- COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST FDD
  ******************
CommonTransportChannelReconfigurationRequestFDD ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                             {{CommonTransportChannelReconfigurationRequestFDD-IEs}},
                        ProtocolExtensionContainer {{CommonTransportChannelReconfigurationRequestFDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
CommonTransportChannelReconfigurationRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
```

```
id-C-ID
    { ID
                                                      CRITICALITY reject
                                                                                      C-ID
                                                                              TYPE
    PRESENCE mandatory } |
           id-ConfigurationGenerationID
                                                      CRITICALITY reject
                                                                                      ConfigurationGenerationID
                                                                                                                         PRESENCE mandatory
           id-CommonPhysicalChannelType-CTCH-ReconfRgstFDD CRITICALITY reject TYPE
                                                                                      CommonPhysicalChannelType-CTCH-ReconfRgstFDD PRESENCE
   mandatory },
CommonTransportChannelReconfigurationRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CommonPhysicalChannelType-CTCH-ReconfRgstFDD ::= CHOICE {
    secondary-CCPCH-parameters
                                   Secondary-CCPCHList-CTCH-ReconfRqstFDD,
   pRACH-parameters
                                   PRACHList-CTCH-ReconfRqstFDD,
   cPCH-parameters
                                   CPCHList-CTCH-ReconfRqstFDD,
    . . .
Secondary-CCPCHList-CTCH-ReconfRqstFDD ::= SEQUENCE {
    fACH-ParametersList-CTCH-ReconfRqstFDD
                                               FACH-ParametersList-CTCH-ReconfRqstFDD OPTIONAL,
   pCH-Parameters-CTCH-ReconfRqstFDD
                                               PCH-Parameters-CTCH-ReconfRqstFDD
                                                                                      OPTIONAL,
   pICH-Parameters-CTCH-ReconfRqstFDD
                                              PICH-Parameters-CTCH-ReconfRqstFDD
                                                                                      OPTIONAL,
   iE-Extensions
                                               ProtocolExtensionContainer { { Secondary-CCPCH-CTCH-ReconfRqstFDD-ExtIEs} } OPTIONAL,
Secondary-CCPCH-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
FACH-ParametersList-CTCH-ReconfRqstFDD ::= ProtocolIE-Single-Container {{ FACH-ParametersListIEs-CTCH-ReconfRqstFDD }}
FACH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
    { ID id-FACH-ParametersListIE-CTCH-ReconfRqstFDD
                                                     CRITICALITY reject TYPE FACH-ParametersListIE-CTCH-ReconfRastFDD
                                                                                                                         PRESENCE mandatory }
FACH-ParametersListIE-CTCH-ReconfRgstFDD ::= SEOUENCE (SIZE (1..maxFACHCell)) OF FACH-ParametersItem-CTCH-ReconfRgstFDD
FACH-ParametersItem-CTCH-ReconfRqstFDD ::= SEQUENCE {
    commonTransportChannelID
                                           CommonTransportChannelID,
   maxFACH-Power
                                           DL-Power
                                                          OPTIONAL,
   toAWS
                                           ToAWS
                                                          OPTIONAL,
                                           ToAWE
                                                          OPTIONAL,
    TOAWE
                                                                      iE-Extensions
                                           ProtocolExtensionContainer
FACH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PCH-Parameters-CTCH-ReconfRqstFDD ::= ProtocolIE-Single-Container {{ PCH-ParametersIE-CTCH-ReconfRqstFDD }}
```

```
PCH-ParametersIE-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   PCH-ParametersItem-CTCH-ReconfRgstFDD ::= SEQUENCE {
   commonTransportChannelID
                                   CommonTransportChannelID,
   pCH-Power
                                   DL-Power
                                                OPTIONAL,
   toAWS
                                   ToAWS
                                                OPTIONAL,
   toawe.
                                   ToAWE
                                                OPTIONAL,
                                   ProtocolExtensionContainer { { PCH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                          OPTIONAL,
PCH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PICH-Parameters-CTCH-ReconfRgstFDD ::= ProtocolIE-Single-Container {{ PICH-ParametersIE-CTCH-ReconfRgstFDD }}
PICH-ParametersIE-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
PICH-ParametersItem-CTCH-ReconfRgstFDD ::= SEOUENCE {
   commonPhysicalChannelID
                                CommonPhysicalChannelID,
   pICH-Power
                                   PICH-Power
                                                 OPTIONAL,
                                   ProtocolExtensionContainer { { PICH-ParametersItem-CTCH-ReconfRgstFDD-ExtIEs} }
   iE-Extensions
PICH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PRACHList-CTCH-ReconfRqstFDD ::= SEQUENCE {
   pRACH-ParametersList-CTCH-ReconfRqstFDD
                                       PRACH-ParametersList-CTCH-ReconfRqstFDD OPTIONAL,
   aICH-ParametersList-CTCH-ReconfRqstFDD
                                       AICH-ParametersList-CTCH-ReconfRqstFDD OPTIONAL,
                                       ProtocolExtensionContainer { { PRACH-CTCH-ReconfRqstFDD-ExtIEs} } OPTIONAL,
   iE-Extensions
PRACH-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PRACH-ParametersList-CTCH-ReconfRqstFDD ::= ProtocolIE-Single-Container {{ PRACH-ParametersListIEs-CTCH-ReconfRqstFDD }}
PRACH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   PRACH-ParametersListIE-CTCH-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxPRACHCell)) OF PRACH-ParametersItem-CTCH-ReconfRqstFDD
PRACH-ParametersItem-CTCH-ReconfRqstFDD ::= SEQUENCE {
```

```
commonPhysicalChannelID
                                   CommonPhysicalChannelID,
   preambleSignatures
                                       PreambleSignatures
                                                            OPTIONAL.
   allowedSlotFormatInformation
                                       AllowedSlotFormatInformationList-CTCH-ReconfRgstFDD
                                                                                                       OPTIONAL.
   rACH-SubChannelNumbers
                                       RACH-SubChannelNumbers
                                                                OPTIONAL,
   iE-Extensions
                                       OPTIONAL.
PRACH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
AllowedSlotFormatInformationList-CTCH-ReconfRgstFDD ::= SEQUENCE (SIZE (1.. maxNrOfSlotFormatsPRACH)) OF AllowedSlotFormatInformationItem-CTCH-
ReconfRastFDD
AllowedSlotFormatInformationItem-CTCH-ReconfRqstFDD ::= SEQUENCE
   rACH-SlotFormat
                                       RACH-SlotFormat,
                                       iE-Extensions
   OPTIONAL,
   . . .
AllowedSlotFormatInformationItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
AICH-ParametersList-CTCH-ReconfRgstFDD ::= ProtocolIE-Single-Container {{ AICH-ParametersListIEs-CTCH-ReconfRgstFDD }}
AICH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
    { ID id-AICH-ParametersListIE-CTCH-ReconfRqstFDD
                                                 CRITICALITY reject TYPE AICH-ParametersListIE-CTCH-ReconfRqstFDD
                                                                                                               PRESENCE mandatory }
AICH-ParametersListIE-CTCH-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxPRACHCell)) OF AICH-ParametersItem-CTCH-ReconfRqstFDD
AICH-ParametersItem-CTCH-ReconfRostFDD ::= SEOUENCE {
                                   CommonPhysicalChannelID,
   commonPhysicalChannelID
   aICH-Power
                                       AICH-Power
                                                     OPTIONAL,
                                       ProtocolExtensionContainer { { AICH-ParametersItemIE-CTCH-ReconfRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                    OPTIONAL,
AICH-ParametersItemIE-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CPCHList-CTCH-ReconfRqstFDD ::= SEQUENCE {
   cPCH-ParametersList-CTCH-ReconfRgstFDD
                                              CPCH-ParametersList-CTCH-ReconfRqstFDD
                                                                                                            OPTIONAL.
   aP-AICH-ParametersList-CTCH-ReconfRqstFDD
                                              AP-AICH-ParametersList-CTCH-ReconfRqstFDD
                                                                                                       OPTIONAL,
   cDCA-ICH-ParametersList-CTCH-ReconfRqstFDD
                                              CDCA-ICH-ParametersList-CTCH-ReconfRqstFDD
                                                                                                       OPTIONAL,
                                              iE-Extensions
                                                                                                                    OPTIONAL,
CPCHListItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
CPCH-ParametersList-CTCH-ReconfRgstFDD ::= ProtocolIE-Single-Container {{ CPCH-ParametersListIEs-CTCH-ReconfRgstFDD }}
CPCH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   { ID id-CPCH-ParametersListIE-CTCH-ReconfRqstFDD
                                                 CRITICALITY reject TYPE CPCH-ParametersListIE-CTCH-ReconfRqstFDD
                                                                                                                PRESENCE mandatory }
CPCH-ParametersListIE-CTCH-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfCPCHs)) OF CPCH-ParametersItem-CTCH-ReconfRqstFDD
CPCH-ParametersItem-CTCH-ReconfRqstFDD ::= SEQUENCE {
   commonTransportChannelID
                                CommonTransportChannelID,
   uL-SIR
                                UL-SIR
                                               OPTIONAL.
   initialDL-transmissionPower
                                DL-Power
                                               OPTIONAL,
  maximumDLPower
                                DL-Power
                                               OPTIONAL,
   minimumDLPower
                                DL-Power
                                               OPTIONAL,
                                ProtocolExtensionContainer { { CPCH-ParametersItem-CTCH-ReconfRgstFDD-ExtIEs} }
   iE-Extensions
                                                                                                             OPTIONAL,
   . . .
CPCH-ParametersItem-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
AP-AICH-ParametersList-CTCH-ReconfRgstFDD ::= ProtocolIE-Single-Container {{ AP-AICH-ParametersListIEs-CTCH-ReconfRgstFDD }}
AP-AICH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   { ID id-AP-AICH-ParametersListIE-CTCH-ReconfRgstFDD CRITICALITY reject TYPE AP-AICH-ParametersListIE-CTCH-ReconfRgstFDD
                                                                                                                  PRESENCE mandatory }
AP-AICH-ParametersListIE-CTCH-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfCPCHs)) OF AP-AICH-ParametersItem-CTCH-ReconfRqstFDD
AP-AICH-ParametersItem-CTCH-ReconfRqstFDD ::= SEQUENCE {
   commonPhysicalChannelID
                                   CommonPhysicalChannelID,
   aP-AICH-Power
                                       AICH-Power
                                                     OPTIONAL,
   cSICH-Power
                                       AICH-Power
                                                      OPTIONAL,
                                       iE-Extensions
                                                                                                                        OPTIONAL,
AP-AICH-ParametersItemIE-CTCH-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CDCA-ICH-ParametersList-CTCH-ReconfRqstFDD ::= ProtocolIE-Single-Container {{ CDCA-ICH-ParametersListIEs-CTCH-ReconfRqstFDD }}
CDCA-ICH-ParametersListIEs-CTCH-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
   mandatory }
CDCA-ICH-ParametersListIE-CTCH-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfCPCHs)) OF CDCA-ICH-ParametersItem-CTCH-ReconfRqstFDD
```

```
CDCA-ICH-ParametersItem-CTCH-ReconfRqstFDD ::= SEQUENCE {
   commonPhysicalChannelID
                                    CommonPhysicalChannelID,
   cDCA-ICH-Power
                                        AICH-Power
                                                       OPTIONAL.
   iE-Extensions
                                        ProtocolExtensionContainer { { CDCA-ICH-ParametersItemIE-CTCH-ReconfRqstFDD-ExtIEs} }
                                                                                                                           OPTIONAL.
CDCA-ICH-ParametersItemIE-CTCH-ReconfRgstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- COMMON TRANSPORT CHANNEL RECONFIGURATION REQUEST TDD
     **********************
CommonTransportChannelReconfigurationRequestTDD ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{CommonTransportChannelReconfigurationRequestTDD-IEs}},
                         ProtocolExtensionContainer {{CommonTransportChannelReconfigurationRequestTDD-Extensions}}
   protocolExtensions
                                                                                                                OPTIONAL.
CommonTransportChannelReconfigurationRequestTDD-IES NBAP-PROTOCOL-IES ::= {
   { ID
          id-C-ID
                                                           CRITICALITY reject
                                                                                 TYPE
                                                                                        C-ID
   PRESENCE
              mandatory }
         id-ConfigurationGenerationID
   { ID
                                                           CRITICALITY reject
                                                                                 TYPE
                                                                                         ConfigurationGenerationID
                                                                                                                              PRESENCE
   mandatory } |
   { ID id-Secondary-CCPCH-Parameters-CTCH-ReconfRqstTDD
                                                               CRITICALITY reject TYPE
                                                                                          Secondary-CCPCH-Parameters-CTCH-ReconfRgstTDD
       PRESENCE optional }|
     ID id-PICH-Parameters-CTCH-ReconfRqstTDD
                                                CRITICALITY reject TYPE PICH-Parameters-CTCH-ReconfRqstTDD
                                                                                                                PRESENCE optional }
     ID id-FACH-ParametersList-CTCH-ReconfRqstTDD CRITICALITY reject TYPE FACH-ParametersList-CTCH-ReconfRqstTDD PRESENCE optional }
   { ID id-PCH-Parameters-CTCH-ReconfRqstTDD
                                                CRITICALITY reject TYPE
                                                                         PCH-Parameters-CTCH-ReconfRqstTDD
                                                                                                                PRESENCE optional },
   . . .
CommonTransportChannelReconfigurationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-FPACH-LCR-Parameters-CTCH-ReconfRqstTDD
                                                   CRITICALITY reject EXTENSION FPACH-LCR-Parameters-CTCH-ReconfRqstTDD
                                                                                                                           PRESENCE
         }, -- Mandatory For 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
optional
   . . .
Secondary-CCPCH-Parameters-CTCH-ReconfRqstTDD::= SEQUENCE {
   cCTrCH-ID
                                 CCTrCH-ID,
                                 Secondary-CCPCHList-CTCH-ReconfRgstTDD
   secondaryCCPCHList
   iE-Extensions
                                 OPTIONAL,
Secondary-CCPCH-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Secondary-CCPCHList-CTCH-ReconfRqstTDD ::= ProtocolIE-Single-Container {{ Secondary-CCPCHListIEs-CTCH-ReconfRqstTDD }}
```

```
Secondary-CCPCHListIEs-CTCH-ReconfRqstTDD NBAP-PROTOCOL-IES ::= {
    { ID id-Secondary-CCPCHListIE-CTCH-ReconfRgstTDD
                                                     CRITICALITY reject TYPE Secondary-CCPCHListIE-CTCH-ReconfRqstTDD
                                                                                                                             PRESENCE mandatory }
Secondary-CCPCHListIE-CTCH-ReconfRgstTDD ::= SEQUENCE (SIZE (1..maxNrOfSCCPCHs)) OF Secondary-CCPCHItem-CTCH-ReconfRgstTDD
Secondary-CCPCHItem-CTCH-ReconfRqstTDD ::= SEQUENCE {
    commonPhysicalChannelID
                                        CommonPhysicalChannelID,
    sCCPCH-Power
                                        DL-Power
                                                        OPTIONAL,
                                        ProtocolExtensionContainer { { Secondary-CCPCHItem-CTCH-ReconfRqstTDD-ExtIEs} }
    iE-Extensions
                                                                                                                             OPTIONAL,
    . . .
Secondary-CCPCHItem-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PICH-Parameters-CTCH-ReconfRgstTDD
                                   ::= SEOUENCE
                                        CommonPhysicalChannelID,
    commonPhysicalChannelID
   pICH-Power
                                        PICH-Power
                                                        OPTIONAL,
                                        ProtocolExtensionContainer { { PICH-Parameters-CTCH-ReconfRqstTDD-ExtIEs} }
    iE-Extensions
                                                                                                                          OPTIONAL,
PICH-Parameters-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
FACH-ParametersList-CTCH-ReconfRqstTDD ::= SEQUENCE (SIZE (0..maxNrOfFACHs)) OF FACH-ParametersItem-CTCH-ReconfRqstTDD
FACH-ParametersItem-CTCH-ReconfRgstTDD ::= SEQUENCE {
    commonTransportChannelID
                                    CommonTransportChannelID,
    toAWS
                                    ToAWS
                                                    OPTIONAL,
    toAWE
                                    ToAWE
                                                    OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { FACH-ParametersItem-CTCH-ReconfRqstTDD-ExtIEs} }
                                                                                                                          OPTIONAL.
FACH-ParametersItem-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
           id-maxFACH-Power-LCR-CTCH-ReconfRqstTDD
                                                            CRITICALITY reject
                                                                                    EXTENSION DL-Power
                                                                                                                       PRESENCE
                                                                                                                                   optional },
    -- Applicable to 1.28Mcps TDD only
    . . .
PCH-Parameters-CTCH-ReconfRqstTDD ::= SEQUENCE {
    commonTransportChannelID
                                    CommonTransportChannelID,
                                    ToAWS
                                                    OPTIONAL,
    toAWS
    toAWE
                                    ToAWE
                                                    OPTIONAL,
                                    ProtocolExtensionContainer { { PCH-Parameters-CTCH-ReconfRgstTDD-ExtIEs} } }
                                                                                                                       OPTIONAL,
    iE-Extensions
PCH-Parameters-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
id-PCH-Power-LCR-CTCH-ReconfRqstTDD
                                                   CRITICALITY reject
                                                                                                            PRESENCE
                                                                                                                      optional },
                                                                         EXTENSION DL-Power
   ... -- Applicable to 1.28Mcps TDD only
FPACH-LCR-Parameters-CTCH-ReconfRgstTDD ::= SEQUENCE {
   commonPhysicalChannelId
                                CommonPhysicalChannelID,
   fPACHPower
                             FPACH-Power
                                           OPTIONAL,
   iE-Extensions
                                 ProtocolExtensionContainer { { FPACH-LCR-Parameters-CTCH-ReconfRqstTDD-ExtIEs} }
                                                                                                              OPTIONAL.
FPACH-LCR-Parameters-CTCH-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
      ******************
  COMMON TRANSPORT CHANNEL RECONFIGURATION RESPONSE
  *****************
CommonTransportChannelReconfigurationResponse ::= SEQUENCE {
                                              {{CommonTransportChannelReconfigurationResponse-IEs}},
   protocolIEs
                         ProtocolIE-Container
   protocolExtensions
                         ProtocolExtensionContainer {{CommonTransportChannelReconfigurationResponse-Extensions}}
                                                                                                              OPTIONAL,
CommonTransportChannelReconfigurationResponse-IEs NBAP-PROTOCOL-IES ::= {
          id-CriticalityDiagnostics
                                                                            CriticalityDiagnostics
   { ID
                                        CRITICALITY
                                                       ignore
                                                                     TYPE
                                                                                                            PRESENCE optional },
   . . .
CommonTransportChannelReconfigurationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    ****************
  COMMON TRANSPORT CHANNEL RECONFIGURATION FAILURE
__ ********************
CommonTransportChannelReconfigurationFailure ::= SEQUENCE {
                                              {{CommonTransportChannelReconfigurationFailure-IEs}},
   protocolIEs
                         ProtocolIE-Container
                         ProtocolExtensionContainer {{CommonTransportChannelReconfigurationFailure-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
CommonTransportChannelReconfigurationFailure-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-Cause
                                        CRITICALITY ignore
                                                                 TYPE
                                                                                                               PRESENCE mandatory
          id-CriticalityDiagnostics
     ID
                                        CRITICALITY ignore
                                                                 TYPE
                                                                         CriticalityDiagnostics
                                                                                                            PRESENCE optional },
    . . .
```

```
CommonTransportChannelReconfigurationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  ****************
-- COMMON TRANSPORT CHANNEL DELETION REQUEST
       ************
CommonTransportChannelDeletionRequest ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                              {{CommonTransportChannelDeletionRequest-IEs}},
                          ProtocolExtensionContainer {{CommonTransportChannelDeletionRequest-Extensions}}
   protocolExtensions
                                                                                                   OPTIONAL,
CommonTransportChannelDeletionRequest-IEs NBAP-PROTOCOL-IES ::= {
    ID
         id-C-ID
                                                                                                   PRESENCE
                                                                                                             mandatory} |
                                       CRITICALITY reject
                                                           TYPE
                                                                 C-ID
         id-CommonPhysicalChannelID
                                       CRITICALITY reject
                                                           TYPE
                                                                 CommonPhysicalChannelID
                                                                                                 PRESENCE mandatory |
         id-ConfigurationGenerationID
                                                                 ConfigurationGenerationID
                                                                                               PRESENCE mandatory },
    ID
                                       CRITICALITY reject
                                                           TYPE
CommonTransportChannelDeletionRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   COMMON TRANSPORT CHANNEL DELETION RESPONSE
  *****************
CommonTransportChannelDeletionResponse ::= SEQUENCE
   protocolIEs
                      ProtocolIE-Container
                                          {{CommonTransportChannelDeletionResponse-IEs}},
   protocolExtensions
                      ProtocolExtensionContainer {{CommonTransportChannelDeletionResponse-Extensions}}
                                                                                                 OPTIONAL.
CommonTransportChannelDeletionResponse-IEs NBAP-PROTOCOL-IES ::= {
         id-CriticalityDiagnostics
   { ID
                                   CRITICALITY
                                                 ignore
                                                           TYPE
                                                                 CriticalityDiagnostics
                                                                                                 PRESENCE optional },
   . . .
CommonTransportChannelDeletionResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- BLOCK RESOURCE REQUEST
```

```
BlockResourceRequest ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                                 {{BlockResourceRequest-IEs}},
   protocolExtensions
                        ProtocolExtensionContainer {{BlockResourceRequest-Extensions}}
                                                                                                   OPTIONAL.
BlockResourceRequest-IEs NBAP-PROTOCOL-IES ::= {
                                                                                                                PRESENCE mandatory } |
          id-C-ID
                                           CRITICALITY reject
     TD
        id-BlockingPriorityIndicator
                                           CRITICALITY reject
                                                                TYPE
                                                                       BlockingPriorityIndicator
                                                                                                          PRESENCE mandatory
                                                                TYPE
                                                                                                                PRESENCE conditional },
     ID id-ShutdownTimer
                                           CRITICALITY reject
                                                                        ShutdownTimer
   -- The IE shall be present if the Blocking Priority Indicator IE indicates "Normal Priority"--
BlockResourceRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
-- BLOCK RESOURCE RESPONSE
  BlockResourceResponse ::= SEQUENCE {
   protocolIEs
                            ProtocolIE-Container
                                                     {{BlockResourceResponse-IEs}},
                            ProtocolExtensionContainer {{BlockResourceResponse-Extensions}}
   protocolExtensions
                                                                                                          OPTIONAL,
BlockResourceResponse-IEs NBAP-PROTOCOL-IES ::= {
   { ID
          id-CriticalityDiagnostics
                                                                        CriticalityDiagnostics
                                       CRITICALITY
                                                                TYPE
                                                                                                          PRESENCE optional },
                                                      ignore
   . . .
BlockResourceResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    -- BLOCK RESOURCE FAILURE
  *****************
BlockResourceFailure ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                 {{BlockResourceFailure-IEs}},
   protocolExtensions
                        ProtocolExtensionContainer {{BlockResourceFailure-Extensions}}
                                                                                      OPTIONAL,
BlockResourceFailure-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-Cause
                                       CRITICALITY
                                                                                                             PRESENCE mandatory } |
                                                      ignore
                                                                TYPE
                                                                        Cause
   { ID
          id-CriticalityDiagnostics
                                                                        CriticalityDiagnostics
                                                                                                          PRESENCE optional },
                                       CRITICALITY
                                                      ignore
```

```
BlockResourceFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
__ ********************
-- UNBLOCK RESOURCE INDICATION
__ *******************
UnblockResourceIndication ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                        {{UnblockResourceIndication-IEs}},
   protocolExtensions
                     ProtocolExtensionContainer {{UnblockResourceIndication-Extensions}}
                                                                             OPTIONAL,
UnblockResourceIndication-IES NBAP-PROTOCOL-IES ::= {
   { ID
        id-C-ID
                     CRITICALITY
                                 ignore
                                           TYPE C-ID
                                                          PRESENCE
                                                                   mandatory},
   . . .
UnblockResourceIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- AUDIT REQUIRED INDICATION
AuditRequiredIndication ::= SEQUENCE {
   protocolIEs
             ProtocolIE-Container
                                       {{AuditRequiredIndication-IEs}},
   protocolExtensions
                     ProtocolExtensionContainer {{AuditRequiredIndication-Extensions}}
                                                                                         OPTIONAL,
AuditRequiredIndication-IEs NBAP-PROTOCOL-IES ::= {
AuditRequiredIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- AUDIT REQUEST
```

```
AuditRequest ::= SEQUENCE {
   protocolIEs
                              ProtocolIE-Container
                                                     {{AuditRequest-IEs}},
   protocolExtensions
                              ProtocolExtensionContainer {{AuditRequest-Extensions}}
                                                                                       OPTIONAL.
AuditRequest-IEs NBAP-PROTOCOL-IES ::= {
          id-Start-Of-Audit-Sequence-Indicator
                                                     CRITICALITY
                                                                    reject TYPE Start-Of-Audit-Sequence-Indicator PRESENCE mandatory },
AuditRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
     -- AUDIT RESPONSE
__ **********************
AuditResponse ::= SEQUENCE {
   protocolIEs
                              ProtocolIE-Container
                                                     {{AuditResponse-IEs}},
   protocolExtensions
                              ProtocolExtensionContainer {{AuditResponse-Extensions}}
                                                                                           OPTIONAL,
AuditResponse-IEs NBAP-PROTOCOL-IES ::= {
           id-End-Of-Audit-Sequence-Indicator
                                                     CRITICALITY
                                                                     ignore TYPE
                                                                                    End-Of-Audit-Sequence-Indicator
                                                                                                                       PRESENCE mandatory } |
           id-Cell-InformationList-AuditRsp
                                                                                           Cell-InformationList-AuditRsp
     ID
                                                     CRITICALITY
                                                                    ignore
                                                                                    TYPE
                                                                                                                               PRESENCE
    optional
           id-CCP-InformationList-AuditRsp
     ID
                                                     CRITICALITY
                                                                                    TYPE
                                                                                           CCP-InformationList-AuditRsp
                                                                                                                            PRESENCE optional
                                                                    ignore
    } |
    -- CCP (Communication Control Port) --
   { ID
           id-Local-Cell-InformationList-AuditRsp
                                                     CRITICALITY
                                                                    ignore
                                                                                    TYPE
                                                                                           Local-Cell-InformationList-AuditRsp
                                                                                                                                  PRESENCE
    optional
           id-Local-Cell-Group-InformationList-AuditRsp
    { ID
                                                         CRITICALITY
                                                                        ignore
                                                                                    TYPE
                                                                                           Local-Cell-Group-InformationList-AuditRsp PRESENCE
    optional
           id-CriticalityDiagnostics
    ID
                                                     CRITICALITY
                                                                    ignore
                                                                                    TYPE
                                                                                           CriticalityDiagnostics
                                                                                                                            PRESENCE optional
    },
    . . .
AuditResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
          id-Power-Local-Cell-Group-InformationList-AuditRsp CRITICALITY
                                                                            ignore
                                                                                        EXTENSION
                                                                                                              Power-Local-Cell-Group-
InformationList-AuditRsp
                              PRESENCE
                                         optional
Cell-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxCellinNodeB)) OF ProtocolIE-Single-Container {{ Cell-InformationItemIE-AuditRsp}}
Cell-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
    { ID
          id-Cell-InformationItem-AuditRsp
                                                                            TYPE
                                                                                   Cell-InformationItem-AuditRsp
                                                                                                                                  optional }
                                                 CRITICALITY
                                                                                                                      PRESENCE
                                                                 ignore
```

```
Cell-InformationItem-AuditRsp ::= SEQUENCE {
   configurationGenerationID
                                         ConfigurationGenerationID,
   resourceOperationalState
                                         ResourceOperationalState,
   availabilityStatus
                                         AvailabilityStatus,
   local-Cell-ID
                                         Local-Cell-ID,
   primary-SCH-Information
                                         P-SCH-Information-AuditRsp
                                                                                   OPTIONAL,
   secondary-SCH-Information
                                         S-SCH-Information-AuditRsp
                                                                                   OPTIONAL,
   primary-CPICH-Information
                                         P-CPICH-Information-AuditRsp
                                                                                   OPTIONAL,
   secondary-CPICH-InformationList
                                         S-CPICH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   primary-CCPCH-Information
                                         P-CCPCH-Information-AuditRsp
                                                                                   OPTIONAL,
                                         BCH-Information-AuditRsp
   bCH-Information
                                                                                   OPTIONAL,
   secondary-CCPCH-InformationList
                                         S-CCPCH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   pCH-Information
                                         PCH-Information-AuditRsp
                                                                                   OPTIONAL,
   pICH-Information
                                         PICH-Information-AuditRsp
                                                                                   OPTIONAL,
   fACH-InformationList
                                         FACH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   pRACH-InformationList
                                         PRACH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   rACH-InformationList
                                         RACH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   aICH-InformationList
                                         AICH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   pCPCH-InformationList
                                         PCPCH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   cPCH-InformationList
                                         CPCH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   aP-AICH-InformationList
                                         AP-AICH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   cDCA-ICH-InformationList
                                         CDCA-ICH-InformationList-AuditRsp
                                                                                   OPTIONAL,
   sCH-Information
                                         SCH-Information-AuditRsp
                                                                                   OPTIONAL,
                                         ProtocolExtensionContainer { { Cell-InformationItem-AuditRsp-ExtIEs} }
   iE-Extensions
                                                                                                               OPTIONAL,
   . . .
Cell-InformationItem-AuditRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-FPACH-LCR-InformationList-AuditRsp
                                                 CRITICALITY ignore EXTENSION
                                                                               FPACH-LCR-InformationList-AuditRsp
                                                                                                                     PRESENCE optional } |
   -- Applicable to 1.28Mcps TDD only
   { ID id-DwPCH-LCR-InformationList-AuditRsp
                                                 CRITICALITY ignore EXTENSION
                                                                               Common-PhysicalChannel-Status-Information
                                                                                                                                PRESENCE
optional },
   -- Applicable to 1.28Mcps TDD only
   . . .
P-SCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ P-SCH-InformationIE-AuditRsp }}
P-SCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
S-SCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ S-SCH-InformationIE-AuditRsp }}
S-SCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
P-CPICH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ P-CPICH-InformationIE-AuditRsp }}
P-CPICH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
    { ID id-P-CPICH-Information CRITICALITY ignore TYPE Common-PhysicalChannel-Status-Information
                                                                                                             PRESENCE mandatory
```

```
S-CPICH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxSCPICHCell)) OF ProtocolIE-Single-Container {{ S-CPICH-InformationItemIE-AuditRsp }}
S-CPICH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-S-CPICH-Information CRITICALITY ignore
                                               TYPE Common-PhysicalChannel-Status-Information
                                                                                                     PRESENCE mandatory }
P-CCPCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ P-CCPCH-InformationIE-AuditRsp }}
P-CCPCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-P-CCPCH-Information CRITICALITY ignore
                                               TYPE Common-PhysicalChannel-Status-Information
                                                                                                     PRESENCE mandatory }
BCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ BCH-InformationIE-AuditRsp }}
BCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-BCH-Information CRITICALITY ignore
                                           TYPE Common-TransportChannel-Status-Information
                                                                                                     PRESENCE mandatory }
S-CCPCH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxSCCPCHCell)) OF ProtocolIE-Single-Container {{ S-CCPCH-InformationItemIE-AuditRsp }}
S-CCPCH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-S-CCPCH-Information CRITICALITY ignore TYPE Common-PhysicalChannel-Status-Information
                                                                                                     PRESENCE mandatory }
PCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ PCH-InformationIE-AuditRsp }}
PCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
PICH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ PICH-InformationIE-AuditRsp }}
PICH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
FACH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxFACHCell)) OF ProtocolIE-Single-Container {{ FACH-InformationItemIE-AuditRsp }}
FACH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-FACH-Information CRITICALITY ignore TYPE Common-TransportChannel-Status-Information
                                                                                                     PRESENCE mandatory }
PRACH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxPRACHCell)) OF ProtocolIE-Single-Container {{ PRACH-InformationItemIE-AuditRsp }}
PRACH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RACH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxRACHCell)) OF ProtocolIE-Single-Container {{ RACH-InformationItemIE-AuditRsp }}
RACH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
```

```
AICH-InformationList-AuditRsp ::= SEOUENCE (SIZE (1..maxPRACHCell)) OF ProtocolIE-Single-Container {{ AICH-InformationItemIE-AuditRsp }}
AICH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
PCPCH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxPCPCHCell)) OF ProtocolIE-Single-Container {{ PCPCH-InformationItemIE-AuditRsp }}
PCPCH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
CPCH-InformationList-AuditRsp ::= SEOUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ CPCH-InformationItemIE-AuditRsp }}
CPCH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
AP-AICH-InformationList-AuditRsp ::= SEOUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ AP-AICH-InformationItemIE-AuditRsp }}
AP-AICH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-AP-AICH-Information CRITICALITY ignore
                                               TYPE Common-PhysicalChannel-Status-Information
                                                                                                    PRESENCE mandatory }
CDCA-ICH-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ CDCA-ICH-InformationItemIE-AuditRsp }}
CDCA-ICH-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
SCH-Information-AuditRsp ::= ProtocolIE-Single-Container {{ SCH-InformationIE-AuditRsp }}
SCH-InformationIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   { ID id-SCH-Information CRITICALITY ignore
                                          TYPE Common-PhysicalChannel-Status-Information
                                                                                                    PRESENCE mandatory }
CCP-InformationList-AuditRsp ::=SEQUENCE (SIZE (1..maxCCPinNodeB)) OF ProtocolIE-Single-Container {{ CCP-InformationItemIE-AuditRsp }}
CCP-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
   {ID id-CCP-InformationItem-AuditRsp
                                        CRITICALITY
                                                      ignore
                                                                          CCP-InformationItem-AuditRsp
                                                                                                         PRESENCE mandatory }
CCP-InformationItem-AuditRsp ::= SEQUENCE {
   communicationControlPortID
                                 CommunicationControlPortID,
   resourceOperationalState
                                 ResourceOperationalState,
   availabilityStatus
                                 AvailabilityStatus,
   iE-Extensions
                                 ProtocolExtensionContainer {{ CCP-InformationItem-AuditRsp-ExtIEs }}
                                                                                                    OPTIONAL,
CCP-InformationItem-AuditRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
FPACH-LCR-InformationList-AuditRsp ::= SEOUENCE (SIZE (1..maxFPACHCell)) OF ProtocolIE-Single-Container {{ FPACH-LCR-InformationItemIE-AuditRsp }}
FPACH-LCR-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
     PRESENCE mandatory }
Local-Cell-InformationList-AuditRsp ::=SEQUENCE (SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-InformationItemIE-
AuditRsp }}
Local-Cell-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::=
           id-Local-Cell-InformationItem-AuditRsp
                                                          CRITICALITY
                                                                          ignore
                                                                                         TYPE
                                                                                                                Local-Cell-InformationItem-
AuditRsp
               PRESENCE
                           mandatory}
Local-Cell-InformationItem-AuditRsp ::= SEQUENCE
   local-Cell-ID
                                              Local-Cell-ID,
   dl-or-global-capacityCredit
                                              DL-or-Global-CapacityCredit,
    ul-capacityCredit
                                              UL-CapacityCredit
                                                                      OPTIONAL,
    commonChannelsCapacityConsumptionLaw
                                              CommonChannelsCapacityConsumptionLaw,
    dedicatedChannelsCapacityConsumptionLaw
                                              DedicatedChannelsCapacityConsumptionLaw,
    maximumDL-PowerCapability
                                              MaximumDL-PowerCapability
                                                                             OPTIONAL,
   minSpreadingFactor
                                              MinSpreadingFactor
                                                                             OPTIONAL,
    minimumDL-PowerCapability
                                              MinimumDL-PowerCapability
                                                                             OPTIONAL,
    local-Cell-Group-ID
                                              Local-Cell-ID
                                                                             OPTIONAL,
    iE-Extensions
                                              ProtocolExtensionContainer {{ Local-Cell-InformationItem-AuditRsp-ExtIEs}}
                                                                                                                           OPTIONAL,
    . . .
Local-Cell-InformationItem-AuditRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ID
           id-ReferenceClockAvailability
                                              CRITICALITY
                                                              ignore
                                                                              EXTENSION ReferenceClockAvailability
                                                                                                                         PRESENCE optional } |
     ID
                                                                              EXTENSION Local-Cell-ID
                                                                                                                         PRESENCE optional },
           id-Power-Local-Cell-Group-ID
                                              CRITICALITY
                                                              ignore
    . . .
Local-Cell-Group-InformationList-AuditRsp
                                           ::= SEQUENCE (SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-Group-
InformationItemIE-AuditRsp }}
Local-Cell-Group-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
           id-Local-Cell-Group-InformationItem-AuditRsp
                                                                  CRITICALITY
                                                                                 ignore
                                                                                                                TYPE Local-Cell-Group-
InformationItem-AuditRsp
                               PRESENCE
                                          mandatory}
Local-Cell-Group-InformationItem-AuditRsp ::= SEQUENCE {
   local-Cell-Group-ID
                                              Local-Cell-ID,
   dl-or-global-capacityCredit
                                              DL-or-Global-CapacityCredit,
    ul-capacityCredit
                                              UL-CapacityCredit
                                                                                     OPTIONAL,
    commonChannelsCapacityConsumptionLaw
                                              CommonChannelsCapacityConsumptionLaw,
    dedicatedChannelsCapacityConsumptionLaw
                                              DedicatedChannelsCapacityConsumptionLaw,
    iE-Extensions
                                              ProtocolExtensionContainer {{ Local-Cell-Group-InformationItem-AuditRsp-ExtIEs}}
                                                                                                                                 OPTIONAL,
Local-Cell-Group-InformationItem-AuditRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
```

```
Power-Local-Cell-Group-InformationList-AuditRsp ::= SEQUENCE (SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Power-Local-Cell-
Group-InformationItemIE-AuditRsp }}
Power-Local-Cell-Group-InformationItemIE-AuditRsp NBAP-PROTOCOL-IES ::= {
          id-Power-Local-Cell-Group-InformationItem-AuditRsp
                                                                  CRITICALITY
                                                                                 ignore
                                                                                             TYPE Power-Local-Cell-Group-InformationItem-
AuditRsp
              PRESENCE
                        mandatory}
Power-Local-Cell-Group-InformationItem-AuditRsp ::= SEQUENCE {
   power-Local-Cell-Group-ID
                                            Local-Cell-ID,
   maximumDL-PowerCapability
                                            MaximumDL-PowerCapability,
                                            ProtocolExtensionContainer {{ Power-Local-Cell-Group-InformationItem-AuditRsp-ExtIEs}}
   iE-Extensions
   OPTIONAL,
    . . .
Power-Local-Cell-Group-InformationItem-AuditRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- AUDIT FAILURE
   AuditFailure ::= SEQUENCE {
                                                {{AuditFailure-IEs}},
   protocolIEs
                         ProtocolIE-Container
                         ProtocolExtensionContainer {{AuditFailure-Extensions}}
   protocolExtensions
                                                                                     OPTIONAL,
   . . .
AuditFailure-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-Cause
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                 Cause
                                                                                                                      PRESENCE mandatory
                                                                                 CriticalityDiagnostics
          id-CriticalityDiagnostics
    { ID
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                                             PRESENCE optional },
    . . .
AuditFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    -- COMMON MEASUREMENT INITIATION REQUEST
CommonMeasurementInitiationRequest ::= SEQUENCE {
                                                {{CommonMeasurementInitiationRequest-IEs}},
   protocolIEs
                         ProtocolIE-Container
```

```
ProtocolExtensionContainer {{CommonMeasurementInitiationRequest-Extensions}}
    protocolExtensions
                                                                                                                        OPTIONAL,
CommonMeasurementInitiationRequest-IEs NBAP-PROTOCOL-IES ::=
           id-MeasurementID
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                                                       PRESENCE
                                                                                                 MeasurementID
    mandatory } |
            id-CommonMeasurementObjectType-CM-Rqst
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                 CommonMeasurementObjectType-CM-Rqst
                                                                                                                                          PRESENCE
    mandatory } |
    { ID
           id-CommonMeasurementType
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                 CommonMeasurementType
                                                                                                                                    PRESENCE
    mandatory }
            id-MeasurementFilterCoefficient
    { ID
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                 MeasurementFilterCoefficient
                                                                                                                                       PRESENCE
    optional
    { ID
           id-ReportCharacteristics
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                 ReportCharacteristics
                                                                                                                                    PRESENCE
    mandatory } |
           id-SFNReportingIndicator
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                 FNReportingIndicator
                                                                                                                                    PRESENCE
    mandatory
     ID
            id-SFN
                                                             CRITICALITY reject
                                                                                         TYPE
                                                                                                                                    PRESENCE optional
CommonMeasurementInitiationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    {ID id-CommonMeasurementAccuracy
                                                            CRITICALITY reject
                                                                                         EXTENSION CommonMeasurementAccuracy
                                                                                                                                    PRESENCE
optional},
    . . .
CommonMeasurementObjectType-CM-Rqst ::= CHOICE {
    cell
                                    Cell-CM-Rast,
    rACH
                                    RACH-CM-Rqst,
    CPCH
                                    CPCH-CM-Rqst,
    . . .
Cell-CM-Rqst ::= SEQUENCE {
    c-ID
                                    C-ID,
    timeSlot
                                    TimeSlot
                                                           -- Applicable to 3.84Mcps TDD only
                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { CellItem-CM-Rqst-ExtIEs} }
                                                                                                                     OPTIONAL,
    . . .
CellItem-CM-Rqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-TimeSlotLCR-CM-Rqst
                                    CRITICALITY reject
                                                             EXTENSION
                                                                       TimeSlotLCR
                                                                                             PRESENCE optional
    -- Applicable to 1.28Mcps TDD only
    {ID id-NeighbouringCellMeasurementInformation
                                                         CRITICALITY ignore
                                                                                     EXTENSION NeighbouringCellMeasurementInformation
                                                                                                                                             PRESENCE
optional},
RACH-CM-Rqst ::= SEQUENCE {
    c-ID
                                    C-ID,
    commonTransportChannelID
                                    CommonTransportChannelID,
```

```
ProtocolExtensionContainer { { RACHItem-CM-Rqst-ExtIEs} }
   iE-Extensions
                                                                                                          OPTIONAL,
RACHItem-CM-Rgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CPCH-CM-Rqst ::= SEQUENCE {
                                C-ID,
                                CommonTransportChannelID,
   commonTransportChannelID
   spreadingfactor
                                MinUL-ChannelisationCodeLength
                                                                 OPTIONAL,
   iE-Extensions
                                OPTIONAL,
CPCHItem-CM-Rgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   ******************
  COMMON MEASUREMENT INITIATION RESPONSE
  ******************
CommonMeasurementInitiationResponse ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                               {{CommonMeasurementInitiationResponse-IEs}},
                         ProtocolExtensionContainer {{CommonMeasurementInitiationResponse-Extensions}}
   protocolExtensions
                                                                                                            OPTIONAL,
CommonMeasurementInitiationResponse-IEs NBAP-PROTOCOL-IES ::= {
          id-MeasurementID
                                                                                                                          PRESENCE
   { ID
                                                   CRITICALITY ignore
                                                                             TYPE
                                                                                    MeasurementID
   mandatory } |
     ID
          id-CommonMeasurementObjectType-CM-Rsp
                                                   CRITICALITY ignore
                                                                             TYPE
                                                                                    CommonMeasurementObjectType-CM-Rsp
                                                                                                                       PRESENCE optional
    } |
    { ID
          id-SFN
                                                   CRITICALITY ignore
                                                                             TYPE
                                                                                                                               PRESENCE
   optional
   { ID
          id-CriticalityDiagnostics
                                                   CRITICALITY ignore
                                                                             TYPE
                                                                                    CriticalityDiagnostics
                                                                                                                    PRESENCE optional },
   . . .
CommonMeasurementInitiationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   {ID id-CommonMeasurementAccuracy
                                        CRITICALITY ignore
                                                                                                          PRESENCE optional },
                                                              EXTENSION CommonMeasurementAccuracy
CommonMeasurementObjectType-CM-Rsp ::= CHOICE {
   cell
                             Cell-CM-Rsp,
   rACH
                             RACH-CM-Rsp,
   cPCH
                             CPCH-CM-Rsp,
```

```
Cell-CM-Rsp ::= SEQUENCE {
   commonMeasurement.Value
                                 CommonMeasurementValue.
   iE-Extensions
                                 ProtocolExtensionContainer { { CellItem-CM-Rsp-ExtIEs} }
                                                                                                             OPTIONAL,
Cellitem-CM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RACH-CM-Rsp ::= SEQUENCE {
   commonMeasurementValue
                                 CommonMeasurementValue,
   iE-Extensions
                                 ProtocolExtensionContainer { { RACHItem-CM-Rsp-ExtIEs} }
                                                                                                             OPTIONAL,
RACHItem-CM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CPCH-CM-Rsp ::= SEQUENCE {
                                 CommonMeasurementValue,
   commonMeasurementValue
                                 ProtocolExtensionContainer { { CPCHItem-CM-Rsp-ExtIEs} }
   iE-Extensions
                                                                                                             OPTIONAL,
CPCHItem-CM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- COMMON MEASUREMENT INITIATION FAILURE
  *****************
CommonMeasurementInitiationFailure ::= SEOUENCE {
                         ProtocolIE-Container
                                                {{CommonMeasurementInitiationFailure-IEs}},
   protocolIEs
   protocolExtensions
                          ProtocolExtensionContainer {{CommonMeasurementInitiationFailure-Extensions}}
                                                                                                               OPTIONAL,
CommonMeasurementInitiationFailure-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-MeasurementID
                                                                                                                     PRESENCE mandatory
                                         CRITICALITY
                                                        ignore
                                                                              MeasurementID
     TD
          id-Cause
                                         CRITICALITY
                                                        ignore
                                                                       TYPE
                                                                              Cause
                                                                                                                    PRESENCE mandatory
    { ID
          id-CriticalityDiagnostics
                                         CRITICALITY
                                                        ignore
                                                                       TYPE
                                                                               CriticalityDiagnostics
                                                                                                               PRESENCE optional },
CommonMeasurementInitiationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
__ ********************
-- COMMON MEASUREMENT REPORT
  *****************
CommonMeasurementReport ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                               {{CommonMeasurementReport-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer {{CommonMeasurementReport-Extensions}}
                                                                                                            OPTIONAL,
CommonMeasurementReport-IEs NBAP-PROTOCOL-IES ::= {
   { ID
         id-MeasurementID
                                                    CRITICALITY ignore
                                                                              TYPE
                                                                                      Measurement.ID
                                                                                                                            PRESENCE
   mandatory } |
   { ID id-CommonMeasurementObjectType-CM-Rprt
                                                    CRITICALITY ignore
                                                                              TYPE
                                                                                      CommonMeasurementObjectType-CM-Rprt PRESENCE
   mandatory } |
   { ID id-SFN
                                                    CRITICALITY ignore
                                                                              TYPE
                                                                                      SFN
                                                                                                                                  PRESENCE
   optional },
CommonMeasurementReport-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   . . .
CommonMeasurementObjectType-CM-Rprt ::= CHOICE {
   cell
                                 Cell-CM-Rprt,
   rACH
                                 RACH-CM-Rprt,
   cPCH
                                 CPCH-CM-Rprt,
    . . .
Cell-CM-Rprt ::= SEQUENCE {
   commonMeasurementValueInformation CommonMeasurementValueInformation.
                                 ProtocolExtensionContainer {{ CellItem-CM-Rprt-ExtIEs }}
   iE-Extensions
                                                                                                            OPTIONAL,
CellItem-CM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RACH-CM-Rprt ::= SEQUENCE {
   commonMeasurementValueInformation CommonMeasurementValueInformation.
   iE-Extensions
                                 ProtocolExtensionContainer {{    RACHItem-CM-Rprt-ExtIEs }}
                                                                                                              OPTIONAL,
RACHItem-CM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
CPCH-CM-Rprt ::= SEQUENCE {
   commonMeasurementValueInformation CommonMeasurementValueInformation,
                               ProtocolExtensionContainer {{    CPCHItem-CM-Rprt-ExtIEs }}
                                                                                                         OPTIONAL,
CPCHItem-CM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
__ *********************
-- COMMON MEASUREMENT TERMINATION REQUEST
     ****************
CommonMeasurementTerminationRequest ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{CommonMeasurementTerminationRequest-IEs}},
                        ProtocolExtensionContainer {{CommonMeasurementTerminationRequest-Extensions}}
   protocolExtensions
                                                                                                         OPTIONAL,
CommonMeasurementTerminationRequest-IEs NBAP-PROTOCOL-IES ::= {
   { ID
          id-MeasurementID
                                   CRITICALITY
                                                 ignore
                                                                   TYPE
                                                                          MeasurementID
                                                                                                           PRESENCE mandatory },
   . . .
CommonMeasurementTerminationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- COMMON MEASUREMENT FAILURE INDICATION
  *****************
CommonMeasurementFailureIndication ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{CommonMeasurementFailureIndication-IEs}},
                            ProtocolExtensionContainer {{CommonMeasurementFailureIndication-Extensions}}
   protocolExtensions
                                                                                                              OPTIONAL,
CommonMeasurementFailureIndication-IES NBAP-PROTOCOL-IES ::= {
     ID
         id-MeasurementID
                                  CRITICALITY ignore
                                                            TYPE MeasurementID
                                                                                                       PRESENCE mandatory
   { ID
          id-Cause
                                   CRITICALITY ignore
                                                            TYPE
                                                                   Cause
                                                                                                      PRESENCE mandatory
CommonMeasurementFailureIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
****************
-- CELL SETUP REQUEST FDD
  CellSetupRequestFDD ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                {{CellSetupRequestFDD-IEs}},
   protocolExtensions
                          ProtocolExtensionContainer {{CellSetupRequestFDD-Extensions}}
                                                                                           OPTIONAL,
CellSetupRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
           id-Local-Cell-ID
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE Local-Cell-ID
                  PRESENCE
                              mandatory } |
    { ID
           id-C-ID
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE C-ID
               PRESENCE
                         mandatory }|
           id-ConfigurationGenerationID
                                                                               reject
                                                                                                             TYPE ConfigurationGenerationID
    { ID
                                                                CRITICALITY
                      PRESENCE
                                 mandatory
           id-T-Cell
                                                                               reject
                                                                                                             TYPE T-Cell
    { ID
                                                                CRITICALITY
                  PRESENCE
                              mandatory } |
    { ID
           id-UARFCNforNu
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE UARFCN
                  PRESENCE
                              mandatory
    { ID
           id-UARFCNforNd
                                                                CRITICALITY
                                                                               reiect
                                                                                                             TYPE UARFCN
                  PRESENCE
                              mandatory
    { ID
           id-MaximumTransmissionPower
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE MaximumTransmissionPower
                      PRESENCE
                                 mandatory } |
    { ID
           id-Closed-Loop-Timing-Adjustment-Mode
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE
    Closedlooptimingadjustmentmode
                                                 PRESENCE
                                                            optional }
          id-PrimaryScramblingCode
                                                                CRITICALITY
                                                                                                             TYPE PrimaryScramblingCode
                                                                               reject
                      PRESENCE mandatory } |
           id-Synchronisation-Configuration-Cell-SetupRqst
                                                                CRITICALITY
                                                                                                             TYPE Synchronisation-
    { ID
                                                                               reject
Configuration-Cell-SetupRqst
                                     PRESENCE
                                                 mandatory } |
           id-DL-TPC-Pattern01Count
                                                                                                                TYPE DL-TPC-Pattern01Count
    { ID
                                                                CRITICALITY
                                                                               reject
                          PRESENCE
                                     mandatory
           id-PrimarySCH-Information-Cell-SetupRqstFDD
    { ID
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE PrimarySCH-Information-
Cell-SetupRqstFDD
                         PRESENCE
                                     mandatory }
    { ID
          id-SecondarySCH-Information-Cell-SetupRqstFDD
                                                                                                             TYPE SecondarySCH-Information-
                                                                CRITICALITY
                                                                               reject
Cell-SetupRqstFDD
                      PRESENCE
                                 mandatory } |
           id-PrimaryCPICH-Information-Cell-SetupRgstFDD
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE PrimaryCPICH-Information-
                      PRESENCE
Cell-SetupRqstFDD
                                  mandatory }
           id-SecondaryCPICH-InformationList-Cell-SetupRqstFDD
                                                                CRITICALITY
                                                                               reject
                                                                                                             TYPE SecondaryCPICH-
InformationList-Cell-SetupRqstFDD
                                     PRESENCE
                                                 optional
                                                          } |
          id-PrimaryCCPCH-Information-Cell-SetupRqstFDD
                                                                                                             TYPE PrimaryCCPCH-Information-
                                                                CRITICALITY
                                                                               reject
Cell-SetupRastFDD
                      PRESENCE
                                 mandatory } |
          id-Limited-power-increase-information-Cell-SetupRqstFDD CRITICALITY
                                                                               reject
                                                                                                             TYPE Limited-power-increase-
information-Cell-SetupRgstFDD
                                  PRESENCE
                                            mandatory },
CellSetupRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    {ID id-IPDLParameter-Information-Cell-SetupRqstFDD
                                                                CRITICALITY
                                                                               reject
                                                                                           EXTENSION
                                                                                                                IPDLParameter-Information-
Cell-SetupRqstFDD
                      PRESENCE
                                 optional
```

```
{ID id-PDSCH-Information-Cell-SetupRqstFDD
                                                             CRITICALITY
                                                                             reject
                                                                                         EXTENSION
                                                                                                                        PDSCH-Information-Cell-
SetupRastFDD
                    PRESENCE
                                optional
    . . .
Synchronisation-Configuration-Cell-SetupRgst ::= SEOUENCE {
   n-INSYNC-IND
                            N-INSYNC-IND,
   n-OUTSYNC-IND
                            N-OUTSYNC-IND,
    t-RLFAILURE
                            T-RLFAILURE,
                            ProtocolExtensionContainer { { Synchronisation-Configuration-Cell-SetupRqst-ExtIEs} }
   iE-Extensions
                                                                                                                        OPTIONAL,
Synchronisation-Configuration-Cell-SetupRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PrimarySCH-Information-Cell-SetupRgstFDD ::= SEQUENCE
                                            CommonPhysicalChannelID,
    commonPhysicalChannelID
    primarySCH-Power
                                            DL-Power,
    tSTD-Indicator
                                            TSTD-Indicator,
                                            ProtocolExtensionContainer { { PrimarySCH-Information-Cell-SetupRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                                    OPTIONAL,
PrimarySCH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SecondarySCH-Information-Cell-SetupRqstFDD ::= SEQUENCE {
                                            CommonPhysicalChannelID,
    commonPhysicalChannelID
    secondarySCH-Power
                                            DL-Power,
    tSTD-Indicator
                                            TSTD-Indicator,
                                            ProtocolExtensionContainer { { SecondarySCH-Information-Cell-SetupRqstFDD-ExtIEs} }
    iE-Extensions
    . . .
SecondarySCH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PrimaryCPICH-Information-Cell-SetupRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                            CommonPhysicalChannelID,
   primaryCPICH-Power
                                            PrimaryCPICH-Power,
    transmitDiversityIndicator
                                            TransmitDiversityIndicator,
                                            ProtocolExtensionContainer { { PrimaryCPICH-Information-Cell-SetupRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                                    OPTIONAL,
    . . .
PrimaryCPICH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
SecondaryCPICH-InformationList-Cell-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxSCPICHCell)) OF ProtocolIE-Single-Container {{ SecondaryCPICH-
InformationItemIE-Cell-SetupRgstFDD }}
SecondaryCPICH-InformationItemIE-Cell-SetupRqstFDD NBAP-PROTOCOL-IES ::= {
          id-SecondaryCPICH-InformationItem-Cell-SetupRgstFDD
                                                                                 reject
                                                                                                                TYPE SecondaryCPICH-
                                                                  CRITICALITY
InformationItem-Cell-SetupRqstFDD
                                      PRESENCE
                                                  mandatory}
SecondaryCPICH-InformationItem-Cell-SetupRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                          CommonPhysicalChannelID,
   dl-ScramblingCode
                                          DL-ScramblingCode,
    fDD-DL-ChannelisationCodeNumber
                                          FDD-DL-ChannelisationCodeNumber,
    secondaryCPICH-Power
                                          DL-Power.
    transmitDiversityIndicator
                                          TransmitDiversityIndicator,
   iE-Extensions
                                          ProtocolExtensionContainer { { SecondaryCPICH-InformationItem-Cell-SetupRgstFDD-ExtIEs} }
SecondaryCPICH-InformationItem-Cell-SetupRgstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PrimaryCCPCH-Information-Cell-SetupRqstFDD ::= SEQUENCE {
   commonPhysicalChannelID
                                          CommonPhysicalChannelID,
   bCH-information
                                          BCH-Information-Cell-SetupRqstFDD,
    sTTD-Indicator
                                          STTD-Indicator,
                                          ProtocolExtensionContainer { { PrimaryCCPCH-Information-Cell-SetupRqstFDD-ExtIEs} }
   iE-Extensions
PrimaryCCPCH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
BCH-Information-Cell-SetupRqstFDD ::= SEQUENCE {
   commonTransportChannelID
                                          CommonTransportChannelID,
   bCH-Power
                                          DL-Power,
                                          iE-Extensions
                                                                                                                     OPTIONAL,
BCH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Limited-power-increase-information-Cell-SetupRqstFDD ::= SEQUENCE {
   powerRaiseLimit
                                          PowerRaiseLimit,
   dLPowerAveragingWindowSize
                                          DLPowerAveragingWindowSize,
   iE-Extensions
                                          ProtocolExtensionContainer { { Limited-power-increase-information-Cell-SetupRqstFDD-ExtIEs} }
   OPTIONAL,
Limited-power-increase-information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
IPDLParameter-Information-Cell-SetupRgstFDD::= SEQUENCE {
   iPDL-FDD-Parameters
                                            IPDL-FDD-Parameters.
   iPDL-Indicator
                                            IPDL-Indicator,
                                        ProtocolExtensionContainer { { IPDLParameter-Information-Cell-SetupRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                           OPTIONAL,
IPDLParameter-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-Information-Cell-SetupRgstFDD ::= SEOUENCE {
   maximum-PDSCH-Power
                       Maximum-PDSCH-Power,
                         ProtocolExtensionContainer { { PDSCH-Information-Cell-SetupRgstFDD-ExtIEs} }
   iE-Extensions
                                                                                                     OPTIONAL,
PDSCH-Information-Cell-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  -- CELL SETUP REQUEST TDD
__ ********************************
CellSetupRequestTDD ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container {{CellSetupRequestTDD-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer {{CellSetupRequestTDD-Extensions}}
                                                                                         OPTIONAL,
CellSetupRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
   { ID id-Local-Cell-ID
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
                                                                                                           Local-Cell-ID
          PRESENCE
                     mandatory }
       { ID
             id-C-ID
                                                               CRITICALITY
                                                                              reject
                                                                                         TYPE
                                                                                                           C-ID
       PRESENCE
                  mandatory }
          id-ConfigurationGenerationID
                                                                                                           ConfigurationGenerationID
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
              PRESENCE
                         mandatory }|
          id-UARFCNforNt
   { ID
                                                               CRITICALITY
                                                                             reject
                                                                                         TYPE
                                                                                                           HARFON
           PRESENCE mandatory }
   { ID
          id-CellParameterID
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
                                                                                                           CellParameterID
              PRESENCE
                         mandatory }
    { ID
          id-MaximumTransmissionPower
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
                                                                                                           MaximumTransmissionPower
              PRESENCE
                         mandatory }|
           id-TransmissionDiversityApplied
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
                                                                                                           TransmissionDiversityApplied
                         mandatory }|
              PRESENCE
          id-SyncCase
                                                           CRITICALITY
                                                                          reject
                                                                                     TYPE
                                                                                                           SyncCase
       PRESENCE mandatory } |
```

```
id-Synchronisation-Configuration-Cell-SetupRqst
                                                             CRITICALITY
                                                                            reject
                                                                                                              Synchronisation-Configuration-
                                                                                       TYPE
Cell-SetupRqst
                  PRESENCE
                              mandatory }|
    { ID
           id-DPCHConstant
                                                             CRITICALITY
                                                                            reject.
                                                                                       TYPE
                                                                                                              Constant Value
               PRESENCE
                          mandatory
           id-PUSCHConstant
                                                                            reject
                                                                                       TYPE
                                                                                                              Constant Value
    { ID
                                                             CRITICALITY
               PRESENCE
                          mandatory
    { ID
           id-PRACHConstant
                                                             CRITICALITY
                                                                            reject
                                                                                       TYPE
                                                                                                              ConstantValue
               PRESENCE
                          mandatory
    { ID
           id-TimingAdvanceApplied
                                                             CRITICALITY
                                                                            reject
                                                                                       TYPE
                                                                                                              TimingAdvanceApplied
               PRESENCE
                          mandatory
    { ID
                                                                                                              SCH-Information-Cell-
           id-SCH-Information-Cell-SetupRqstTDD
                                                             CRITICALITY
                                                                            reject
                                                                                       TYPE
                          PRESENCE
                                                 } -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
SetupRqstTDD
                                      optional
           id-PCCPCH-Information-Cell-SetupRqstTDD
                                                             CRITICALITY
                                                                            reject
                                                                                       TYPE
                                                                                                              PCCPCH-Information-Cell-
    { ID
SetupRqstTDD
                          PRESENCE
                                      optional
                                                 } -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
           id-TimeSlotConfigurationList-Cell-SetupRqstTDD
                                                            CRITICALITY
                                                                                       TYPE
                                                                                                              TimeSlotConfigurationList-Cell-
                                                                            reject
                   PRESENCE
                              optional
                                        }, -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
SetupRastTDD
    . . .
CellSetupRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
           id-TimeSlotConfigurationList-LCR-Cell-SetupRqstTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                           EXTENSION
                                                                                                              TimeSlotConfigurationList-LCR-
                                optional } -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
Cell-SetupRqstTDD
                      PRESENCE
    { ID id-PCCPCH-LCR-Information-Cell-SetupRqstTDD
                                                                CRITICALITY
                                                                                reject
                                                                                           EXTENSION
                                                                                                              PCCPCH-LCR-Information-Cell-
                                                | -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
SetupRastTDD
                          PRESENCE
                                      optional
                                                                                                              DwPCH-LCR-Information-Cell-
    { ID
           id-DwPCH-LCR-Information-Cell-SetupRgstTDD
                                                                CRITICALITY
                                                                                reject
                                                                                           EXTENSION
                          PRESENCE
                                      optional
                                                 } -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
SetupRastTDD
                                      CRITICALITY
                                                                    EXTENSION ReferenceSFNoffset
                                                                                                                    PRESENCE optional }
    ID
          id-ReferenceSFNoffset
                                                     ignore
           id-IPDLParameter-Information-Cell-SetupRqstTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                           EXTENSION
                                                                                                                 IPDLParameter-Information-
                             optional } | -- Applicable to 3.84Mcps TDD only
Cell-SetupRgstTDD PRESENCE
    { ID id-IPDLParameter-Information-LCR-Cell-SetupRgstTDD
                                                                    CRITICALITY
                                                                                    reject
                                                                                                              EXTENSION
                                                                                                                            IPDLParameter-
Information-LCR-Cell-SetupRqstTDD PRESENCE optional }, -- Applicable to 1.28Mcps TDD only
SCH-Information-Cell-SetupRqstTDD ::= SEQUENCE {
                                         CommonPhysicalChannelID,
    commonPhysicalChannelID
    syncCaseIndicator
                                         SyncCaseIndicator-Cell-SetupRqstTDD-PSCH,
    sCH-Power
                                         DL-Power,
    tSTD-Indicator
                                         TSTD-Indicator,
                                         ProtocolExtensionContainer { { SCH-Information-Cell-SetupRgstTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
SCH-Information-Cell-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SyncCaseIndicator-Cell-SetupRqstTDD-PSCH ::= ProtocolIE-Single-Container {{ SyncCaseIndicatorIE-Cell-SetupRqstTDD-PSCH }}
SyncCaseIndicatorIE-Cell-SetupRgstTDD-PSCH NBAP-PROTOCOL-IES ::= {
    PRESENCE
mandatory }
```

```
SyncCaseIndicatorItem-Cell-SetupRqstTDD-PSCH ::= CHOICE {
    case1
                                      Case1-Cell-SetupRgstTDD,
   case2
                                      Case2-Cell-SetupRgstTDD,
    . . .
Case1-Cell-SetupRqstTDD ::= SEQUENCE {
   timeSlot
                                      TimeSlot,
   iE-Extensions
                                      ProtocolExtensionContainer { { CaselItem-Cell-SetupRqstTDD-ExtIEs} }
                                                                                                                  OPTIONAL,
CaselItem-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
Case2-Cell-SetupRgstTDD ::= SEQUENCE {
   sCH-TimeSlot
                                      SCH-TimeSlot,
   iE-Extensions
                                      OPTIONAL,
Case2Item-Cell-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PCCPCH-Information-Cell-SetupRgstTDD ::= SEQUENCE {
    commonPhysicalChannelID
                                          CommonPhysicalChannelID,
    tdd-PhysicalChannelOffset
                                          TDD-PhysicalChannelOffset,
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
                                          PCCPCH-Power,
   pCCPCH-Power
   sCTD-Indicator
                                      SCTD-Indicator,
                                          ProtocolExtensionContainer { { PCCPCH-Information-Cell-SetupRqstTDD-ExtIEs} }
   iE-Extensions
PCCPCH-Information-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
TimeSlotConfigurationList-Cell-SetupRqstTDD ::= SEQUENCE (SIZE (1..15)) OF TimeSlotConfigurationItem-Cell-SetupRqstTDD
TimeSlotConfigurationItem-Cell-SetupRqstTDD ::= SEQUENCE {
   timeSlot
                                          TimeSlot,
   timeSlotStatus
                                          TimeSlotStatus,
   timeSlotDirection
                                          TimeSlotDirection,
                                          ProtocolExtensionContainer { { TimeSlotConfigurationItem-Cell-SetupRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                OPTIONAL,
TimeSlotConfigurationItem-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
TimeSlotConfigurationList-LCR-Cell-SetupRgstTDD ::= SEQUENCE (SIZE (1..7)) OF TimeSlotConfigurationItem-LCR-Cell-SetupRgstTDD
TimeSlotConfigurationItem-LCR-Cell-SetupRqstTDD ::= SEQUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
    timeSlotStatus
                                            TimeSlotStatus,
    timeSlotDirection
                                            TimeSlotDirection,
                                            ProtocolExtensionContainer { { TimeSlotConfigurationItem-LCR-Cell-SetupRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                          OPTIONAL,
TimeSlotConfigurationItem-LCR-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PCCPCH-LCR-Information-Cell-SetupRgstTDD ::= SEQUENCE
                                            CommonPhysicalChannelID,
    commonPhysicalChannelID
    tdd-PhysicalChannelOffset
                                            TDD-PhysicalChannelOffset,
    repetitionPeriod
                                            RepetitionPeriod,
    repetitionLength
                                            RepetitionLength,
                                            PCCPCH-Power,
    pCCPCH-Power
    sCTD-Indicator
                                        SCTD-Indicator,
    tSTD-Indicator
                                            TSTD-Indicator,
    iE-Extensions
                                            ProtocolExtensionContainer { { PCCPCH-LCR-Information-Cell-SetupRqstTDD-ExtIEs} }
                                                                                                                                    OPTIONAL.
PCCPCH-LCR-Information-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
DwPCH-LCR-Information-Cell-SetupRqstTDD ::= SEQUENCE {
    commonPhysicalChannelId
                                    CommonPhysicalChannelID,
    tSTD-Indicator
                                    TSTD-Indicator,
    sYNCDlCodeId
                                    SYNCDlCodeId,
    dwPCH-Power
                                    DwPCH-Power,
                                    ProtocolExtensionContainer { { DwPCH-LCR-Information-Cell-SetupRqstTDD-ExtIEs} }
    iE-Extensions
                                                                                                                           OPTIONAL,
    . . .
DwPCH-LCR-Information-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
IPDLParameter-Information-Cell-SetupRqstTDD ::= SEQUENCE {
    iPDL-TDD-Parameters
                                                IPDL-TDD-Parameters,
    iPDL-Indicator
                                                IPDL-Indicator,
                                            ProtocolExtensionContainer { { IPDLParameter-Information-Cell-SetupRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                       OPTIONAL,
IPDLParameter-Information-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
IPDLParameter-Information-LCR-Cell-SetupRqstTDD ::= SEQUENCE {
   iPDL-TDD-Parameters-LCR
                                       IPDL-TDD-Parameters-LCR,
   iPDL-Indicator
                                       IPDL-Indicator,
                                       ProtocolExtensionContainer { { IPDLParameter-Information-LCR-Cell-SetupRgstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                          OPTIONAL,
IPDLParameter-Information-LCR-Cell-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- CELL SETUP RESPONSE
__ *********************
CellSetupResponse ::= SEQUENCE {
   protocolIEs
                            ProtocolIE-Container
                                                  {{CellSetupResponse-IEs}},
                            ProtocolExtensionContainer {{CellSetupResponse-Extensions}}
   protocolExtensions
                                                                                                        OPTIONAL,
CellSetupResponse-IEs NBAP-PROTOCOL-IES ::= {
   { ID
          id-CriticalityDiagnostics
                                       CRITICALITY
                                                                    TYPE
                                                                           CriticalityDiagnostics
                                                                                                          PRESENCE optional },
                                                      ignore
   . . .
CellSetupResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- CELL SETUP FAILURE
__ ********************
CellSetupFailure ::= SEQUENCE {
                                             {{CellSetupFailure-IEs}},
   protocolIEs
                        ProtocolIE-Container
                        ProtocolExtensionContainer {{CellSetupFailure-Extensions}}
   protocolExtensions
                                                                                      OPTIONAL,
CellSetupFailure-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-Cause
                                           CRITICALITY
                                                         ignore
                                                                        TYPE
                                                                                                                   PRESENCE mandatory
                                                                               Cause
          id-CriticalityDiagnostics
   { ID
                                           CRITICALITY
                                                         ignore
                                                                        TYPE
                                                                               CriticalityDiagnostics
                                                                                                          PRESENCE optional },
CellSetupFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
CELL RECONFIGURATION REQUEST FDD
  *****************
CellReconfigurationRequestFDD ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                  {{CellReconfigurationRequestFDD-IEs}},
                          ProtocolExtensionContainer {{CellReconfigurationRequestFDD-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
CellReconfigurationRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
    { ID
           id-C-ID
                                                                  CRITICALITY reject
                                                                                             TYPE
                                                                                                                C-ID
           PRESENCE
                       mandatory }|
           id-ConfigurationGenerationID
                                                                  CRITICALITY reject
                                                                                             TYPE
                                                                                                                ConfigurationGenerationID
                   PRESENCE
                              mandatory
    { ID
           id-MaximumTransmissionPower
                                                                 CRITICALITY reject
                                                                                             TYPE
                                                                                                                MaximumTransmissionPower
                   PRESENCE
                              optional
    { ID
           id-Synchronisation-Configuration-Cell-ReconfRqst
                                                                  CRITICALITY
                                                                                 reject
                                                                                             TYPE
                                                                                                                Synchronisation-Configuration-
Cell-ReconfRast
                   PRESENCE
                              optional
    { ID
           id-PrimarySCH-Information-Cell-ReconfRqstFDD
                                                                 CRITICALITY reject
                                                                                             TYPE
                                                                                                                PrimarySCH-Information-Cell-
                       PRESENCE
                                  optional
ReconfRastFDD
    { ID
           id-SecondarySCH-Information-Cell-ReconfRqstFDD
                                                                 CRITICALITY reject
                                                                                             TYPE
                                                                                                                SecondarySCH-Information-Cell-
ReconfRastFDD
                       PRESENCE
                                   optional
    { ID
           id-PrimaryCPICH-Information-Cell-ReconfRqstFDD
                                                                  CRITICALITY reject
                                                                                             TYPE
                                                                                                                PrimaryCPICH-Information-Cell-
ReconfRastFDD
                       PRESENCE
                                  optional
    { ID
          id-SecondaryCPICH-InformationList-Cell-ReconfRqstFDD
                                                                 CRITICALITY reject
                                                                                             TYPE
                                                                                                                SecondaryCPICH-InformationList-
                       PRESENCE
Cell-ReconfRqstFDD
                                   optional
           id-PrimaryCCPCH-Information-Cell-ReconfRqstFDD
                                                                  CRITICALITY reject
                                                                                                                PrimaryCCPCH-Information-Cell-
                                                                                             TYPE
                       PRESENCE
                                   optional
ReconfRqstFDD
CellReconfigurationRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::=
    {ID id-IPDLParameter-Information-Cell-ReconfRqstFDD
                                                                  CRITICALITY
                                                                                 reject
                                                                                             EXTENSION
                                                                                                                  IPDLParameter-Information-
Cell-ReconfRqstFDD
                       PRESENCE
                                   optional
                                                                                                                  PDSCH-Information-Cell-
    {ID id-PDSCH-Information-Cell-ReconfRqstFDD
                                                          CRITICALITY
                                                                         reject
                                                                                     EXTENSION
ReconfRastFDD
                   PRESENCE
                              optional
    . . .
Synchronisation-Configuration-Cell-ReconfRqst ::= SEQUENCE {
   n-INSYNC-IND
                          N-INSYNC-IND,
   n-OUTSYNC-IND
                          N-OUTSYNC-IND,
                          T-RLFAILURE,
   t-RLFAILURE
                           ProtocolExtensionContainer { { Synchronisation-Configuration-Cell-ReconfRqst-ExtIEs} }
   iE-Extensions
                                                                                                                  OPTIONAL,
Synchronisation-Configuration-Cell-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
PrimarySCH-Information-Cell-ReconfRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                            CommonPhysicalChannelID,
    primarySCH-Power
                                            DL-Power,
                                            ProtocolExtensionContainer { { PrimarySCH-Information-Cell-ReconfRqstFDD-ExtIEs} }
   iE-Extensions
                                                                                                                                   OPTIONAL,
PrimarySCH-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SecondarySCH-Information-Cell-ReconfRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                            CommonPhysicalChannelID,
    secondarySCH-Power
                                            DL-Power,
                                            ProtocolExtensionContainer { { SecondarySCH-Information-Cell-ReconfRgstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                                       OPTIONAL,
    . . .
SecondarySCH-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PrimaryCPICH-Information-Cell-ReconfRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                            CommonPhysicalChannelID,
    primaryCPICH-Power
                                            PrimaryCPICH-Power,
                                            ProtocolExtensionContainer { { PrimaryCPICH-Information-Cell-ReconfRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                                       OPTIONAL,
PrimaryCPICH-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SecondaryCPICH-InformationList-Cell-ReconfRgstFDD ::= SEQUENCE (SIZE (1..maxSCPICHCell)) OF ProtocolIE-Single-Container {{ SecondaryCPICH-
InformationItemIE-Cell-ReconfRqstFDD }}
SecondaryCPICH-InformationItemIE-Cell-ReconfRqstFDD NBAP-PROTOCOL-IES ::= {
         id-SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD
                                                                        CRITICALITY
                                                                                         reject
                                                                                                                        TYPE SecondaryCPICH-
InformationItem-Cell-ReconfRqstFDD
                                        PRESENCE
                                                    mandatory}
SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD ::= SEQUENCE {
    commonPhysicalChannelID
                                                CommonPhysicalChannelID,
    secondaryCPICH-Power
                                                DL-Power,
   iE-Extensions
                                                ProtocolExtensionContainer { { SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD-ExtIEs} }
   OPTIONAL,
    . . .
SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
PrimaryCCPCH-Information-Cell-ReconfRqstFDD ::= SEQUENCE {
   bCH-information
                                      BCH-information-Cell-ReconfRgstFDD,
   iE-Extensions
                                      ProtocolExtensionContainer { { PrimaryCCPCH-Information-Cell-ReconfRqstFDD-ExtIEs} }
                                                                                                                    OPTIONAL.
PrimaryCCPCH-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
BCH-information-Cell-ReconfRgstFDD ::= SEQUENCE {
   commonTransportChannelID
                                      CommonTransportChannelID,
   bCH-Power
   iE-Extensions
                                      OPTIONAL,
BCH-information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
IPDLParameter-Information-Cell-ReconfRgstFDD::= SEOUENCE {
   iPDL-FDD-Parameters
                                         IPDL-FDD-Parameters
                                                               OPTIONAL,
   iPDL-Indicator
                                         IPDL-Indicator,
   iE-Extensions
                                      ProtocolExtensionContainer { { IPDLParameter-Information-Cell-ReconfRqstFDD-ExtIEs} }
                                                                                                                    OPTIONAL,
IPDLParameter-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-Information-Cell-ReconfRgstFDD
                                 ::= SEOUENCE {
   maximumPDSCH-Power
                           Maximum-PDSCH-Power,
   iE-Extensions
                           OPTIONAL,
PDSCH-Information-Cell-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- CELL RECONFIGURATION REQUEST TDD
  *****************
CellReconfigurationRequestTDD ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                             {{CellReconfigurationRequestTDD-IEs}},
   protocolExtensions
                        ProtocolExtensionContainer {{CellReconfigurationRequestTDD-Extensions}}
                                                                                                       OPTIONAL,
   . . .
```

```
CellReconfigurationRequestTDD-IES NBAP-PROTOCOL-IES ::= {
    { ID
          id-C-ID
                                                           CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          C-ID
       PRESENCE mandatory }
   { ID
          id-ConfigurationGenerationID
                                                                         reject
                                                                                                          ConfigurationGenerationID
                                                          CRITICALITY
                                                                                    TYPE
              PRESENCE mandatory }
          id-Synchronisation-Configuration-Cell-ReconfRqst
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          Synchronisation-Configuration-
Cell-ReconfRqst PRESENCE optional
   { ID id-TimingAdvanceApplied
                                                                                                          TimingAdvanceApplied
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
          PRESENCE optional } | -- Applicable to 3.84Mcps TDD only
   { ID id-SCH-Information-Cell-ReconfRqstTDD
                                                                                                          SCH-Information-Cell-
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
ReconfRastTDD
                         PRESENCE
                                    optional } | -- Applicable to 3.84Mcps TDD only
   { ID id-PCCPCH-Information-Cell-ReconfRqstTDD
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          PCCPCH-Information-Cell-
ReconfRqstTDD
                     PRESENCE optional
    { ID
          id-MaximumTransmissionPower
                                                           CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          MaximumTransmissionPower
                         optional
              PRESENCE
          id-DPCHConstant
                                                                                    TYPE
                                                                                                          Constant Value
    { ID
                                                          CRITICALITY
                                                                         reject
              PRESENCE
                         optional
   { ID
          id-PUSCHConstant
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          ConstantValue
              PRESENCE
                             optional
   { ID
          id-PRACHConstant
                                                                                                          ConstantValue
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
              PRESENCE
                        optional }|
          id-TimeSlotConfigurationList-Cell-ReconfRgstTDD
   { ID
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                          TimeSlotConfigurationList-Cell-
                  PRESENCE optional }, -- Applicable to 3.84Mcps TDD only
ReconfRastTDD
CellReconfigurationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-TimeSlotConfigurationList-LCR-Cell-ReconfRqstTDD
                                                                                                          TimeSlotConfigurationList-LCR-
                                                              CRITICALITY
                                                                             reject
                                                                                        EXTENSION
Cell-ReconfRqstTDD PRESENCE optional} | -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
   reject
                                                                                                          DwPCH-LCR-Information-Cell-
ReconfRastTDD
                  PRESENCE optional} | -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
   { ID id-IPDLParameter-Information-Cell-ReconfRqstTDD
                                                              CRITICALITY
                                                                                                             IPDLParameter-Information-
                                                                             reject
                                                                                        EXTENSION
Cell-ReconfRqstTDD PRESENCE optional } | -- Applicable to 3.84Mcps TDD only
    { ID id-IPDLParameter-Information-LCR-Cell-ReconfRqstTDD
                                                                  CRITICALITY
                                                                                                          EXTENSION
                                                                                                                        IPDLParameter-
Information-LCR-Cell-ReconfRqstTDD PRESENCE optional }, -- Applicable to 1.28Mcps TDD only
SCH-Information-Cell-ReconfRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                        CommonPhysicalChannelID,
   sCH-Power
                                        DL-Power,
                                        iE-Extensions
                                                                                                                  OPTIONAL,
   . . .
PSCH-Information-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PCCPCH-Information-Cell-ReconfRqstTDD ::= SEQUENCE {
   commonPhysicalChannelID
                                        CommonPhysicalChannelID,
   pCCPCH-Power
                                        PCCPCH-Power,
```

```
iE-Extensions
                                                                                                                          OPTIONAL,
PCCPCH-Information-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TimeSlotConfigurationList-Cell-ReconfRqstTDD ::= SEQUENCE (SIZE (1..15)) OF TimeSlotConfigurationItem-Cell-ReconfRqstTDD
TimeSlotConfigurationItem-Cell-ReconfRgstTDD ::= SEQUENCE {
   timeSlot
                                          TimeSlot,
   timeSlotStatus
                                          TimeSlotStatus,
    timeSlotDirection
                                          TimeSlotDirection.
                                          ProtocolExtensionContainer { { TimeSlotConfigurationItem-Cell-ReconfRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                OPTIONAL,
TimeSlotConfigurationItem-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TimeSlotConfigurationList-LCR-Cell-ReconfRqstTDD ::= SEQUENCE (SIZE (1..7)) OF TimeSlotConfigurationItem-LCR-Cell-ReconfRqstTDD
TimeSlotConfigurationItem-LCR-Cell-ReconfRqstTDD ::= SEQUENCE {
   timeSlotLCR
                                          TimeSlotLCR,
   timeSlotStatus
                                          TimeSlotStatus,
    timeSlotDirection
                                          TimeSlotDirection,
                                          ProtocolExtensionContainer { { TimeSlotConfigurationItem-LCR-Cell-ReconfRqstTDD-ExtIEs} }
   iE-Extensions
TimeSlotConfigurationItem-LCR-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DwPCH-LCR-Information-Cell-ReconfRqstTDD ::= SEQUENCE {
    commonPhysicalChannelId
                                          CommonPhysicalChannelID,
   dwPCH-Power
                                          DwPCH-Power,
   iE-Extensions
                                          ProtocolExtensionContainer { { DwPCH-LCR-Information-Cell-ReconfRqstTDD-ExtIEs} }
                                                                                                                             OPTIONAL,
DwPCH-LCR-Information-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
IPDLParameter-Information-Cell-ReconfRqstTDD ::= SEQUENCE {
   iPDL-TDD-Parameters
                                              IPDL-TDD-Parameters
                                                                     OPTIONAL,
   iPDL-Indicator
                                              IPDL-Indicator,
                                          ProtocolExtensionContainer { { IPDLParameter-Information-Cell-ReconfRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                OPTIONAL,
    . . .
```

```
IPDLParameter-Information-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
IPDLParameter-Information-LCR-Cell-ReconfRqstTDD ::= SEQUENCE {
   iPDL-TDD-Parameters-LCR
                                       IPDL-TDD-Parameters-LCR
                                                                OPTIONAL,
   iPDL-Indicator
                                       IPDL-Indicator,
   iE-Extensions
                                       ProtocolExtensionContainer { { IPDLParameter-Information-LCR-Cell-ReconfRqstTDD-ExtIEs} }
IPDLParameter-Information-LCR-Cell-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ******************
-- CELL RECONFIGURATION RESPONSE
  ******************
CellReconfigurationResponse ::= SEQUENCE {
                                                {{CellReconfigurationResponse-IEs}},
   protocolIEs
                            ProtocolIE-Container
                            ProtocolExtensionContainer {{CellReconfigurationResponse-Extensions}}
   protocolExtensions
                                                                                                         OPTIONAL,
CellReconfigurationResponse-IEs NBAP-PROTOCOL-IES ::= {
          id-CriticalityDiagnostics
                                                                           CriticalityDiagnostics
   { ID
                                       CRITICALITY
                                                     ignore
                                                                   TYPE
                                                                                                         PRESENCE optional },
   . . .
CellReconfigurationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- CELL RECONFIGURATION FAILURE
__ *******************************
CellReconfigurationFailure ::= SEQUENCE {
                                            {{CellReconfigurationFailure-IEs}},
   protocolIEs
                        ProtocolIE-Container
                        ProtocolExtensionContainer {{CellReconfigurationFailure-Extensions}}
   protocolExtensions
                                                                                                         OPTIONAL,
CellReconfigurationFailure-IEs NBAP-PROTOCOL-IES ::= {
   { ID
         id-Cause
                                       CRITICALITY
                                                     ignore
                                                                   TYPE
                                                                           Cause
                                                                                                                 PRESENCE
   mandatory } |
   { ID
         id-CriticalityDiagnostics
                                       CRITICALITY
                                                     ignore
                                                                   TYPE
                                                                           CriticalityDiagnostics
                                                                                                            PRESENCE optional },
```

```
CellReconfigurationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- CELL DELETION REQUEST
__ **********************
CellDeletionRequest ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                        {{CellDeletionRequest-IEs}},
   protocolExtensions
                   ProtocolExtensionContainer {{CellDeletionRequest-Extensions}}
                                                                            OPTIONAL,
CellDeletionRequest-IEs NBAP-PROTOCOL-IES ::= {
         id-C-ID
   { ID
                      CRITICALITY
                                  reject
                                                      C-ID
                                                                PRESENCE
                                                                         mandatory },
   . . .
CellDeletionRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  ****************
-- CELL DELETION RESPONSE
__ **********************
CellDeletionResponse ::= SEQUENCE {
                                        {{CellDeletionResponse-IEs}},
                     ProtocolIE-Container
   protocolIEs
                   ProtocolExtensionContainer {{CellDeletionResponse-Extensions}}
   protocolExtensions
                                                                            OPTIONAL.
CellDeletionResponse-IEs NBAP-PROTOCOL-IES ::= {
         id-CriticalityDiagnostics
                                  CRITICALITY
                                                ignore
                                                                   CriticalityDiagnostics
                                                                                              PRESENCE optional },
   . . .
CellDeletionResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  ******************
-- RESOURCE STATUS INDICATION
__ *******************************
ResourceStatusIndication ::= SEQUENCE {
```

```
{{ResourceStatusIndication-IEs}},
                          ProtocolIE-Container
   protocolIEs
   protocolExtensions
                          ProtocolExtensionContainer {{ResourceStatusIndication-Extensions}}
                                                                                                              OPTIONAL.
ResourceStatusIndication-IEs NBAP-PROTOCOL-IES ::= {
          id-IndicationType-ResourceStatusInd
                                                     CRITICALITY
                                                                    ignore
                                                                                   TYPE
                                                                                           IndicationType-ResourceStatusInd
                                                                                                                              PRESENCE
   mandatory } |
   { ID id-Cause
                                                     CRITTCALITTY
                                                                    ignore
                                                                                   TYPE
                                                                                           Cause
                                                                                                                                    PRESENCE
   optional },
ResourceStatusIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
IndicationType-ResourceStatusInd ::= CHOICE
   no-Failure
                                         No-Failure-ResourceStatusInd,
   serviceImpacting
                                         ServiceImpacting-ResourceStatusInd,
No-Failure-ResourceStatusInd ::= SEOUENCE {
   local-Cell-InformationList
                                         Local-Cell-InformationList-ResourceStatusInd,
   local-Cell-Group-InformationList
                                         Local-Cell-Group-InformationList-ResourceStatusInd OPTIONAL,
                                         ProtocolExtensionContainer { { No-FailureItem-ResourceStatusInd-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
No-FailureItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
          id-Power-Local-Cell-Group-InformationList-ResourceStatusInd
                                                                        CRITICALITY
                                                                                       ignore
                                                                                                                   EXTENSION Power-Local-
Cell-Group-InformationList-ResourceStatusInd
                                                 PRESENCE
    . . .
Local-Cell-InformationList-ResourceStatusInd ::= SEQUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-
InformationItemIE-ResourceStatusInd }}
Local-Cell-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    PRESENCE
mandatory }
Local-Cell-InformationItem-ResourceStatusInd ::= SEOUENCE {
   local-CellID
                                             Local-Cell-ID,
   addorDeleteIndicator
                                             AddorDeleteIndicator,
   dl-or-global-capacityCredit
                                             DL-or-Global-CapacityCredit
                                                                            OPTIONAL,
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
    ul-capacityCredit
                                             UL-CapacityCredit
    commonChannelsCapacityConsumptionLaw
                                             CommonChannelsCapacityConsumptionLaw
                                                                                   OPTIONAL,
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
   dedicatedChannelsCapacityConsumptionLaw
                                             DedicatedChannelsCapacityConsumptionLaw
                                                                                       OPTIONAL,
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
```

```
OPTIONAL,
   maximumDL-PowerCapability
                                              MaximumDL-PowerCapability
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
   minSpreadingFactor
                                              MinSpreadingFactor
                                                                                OPTIONAL.
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
   minimumDL-PowerCapability
                                              MinimumDL-PowerCapability
                                                                            OPTIONAL,
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add"
    local-Cell-Group-ID
                                              Local-Cell-ID
                                                                            OPTIONAL,
    iE-Extensions
                                              ProtocolExtensionContainer { { Local-Cell-InformationItem-ResourceStatusInd-ExtIEs} } OPTIONAL,
Local-Cell-InformationItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
           id-ReferenceClockAvailability
                                              CRITICALITY
                                                                             EXTENSION ReferenceClockAvailability
                                                                                                                       PRESENCE optional } |
                                                             ignore
    -- This IE shall be present if AddorDeleteIndicator IE is set to "add" and the Local Cell is related to a TDD cell
          id-Power-Local-Cell-Group-ID
                                                                            EXTENSION Local-Cell-ID
                                                                                                                       PRESENCE optional },
                                             CRITICALITY
                                                             ignore
Local-Cell-Group-InformationList-ResourceStatusInd ::= SEOUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-Group-
InformationItemIE-ResourceStatusInd }}
Local-Cell-Group-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
Local-Cell-Group-InformationItem-ResourceStatusInd::= SEOUENCE {
    local-Cell-Group-ID
                                              Local-Cell-ID,
    dl-or-global-capacityCredit
                                              DL-or-Global-CapacityCredit,
    ul-capacityCredit
                                              UL-CapacityCredit
                                                                     OPTIONAL,
    commonChannelsCapacityConsumptionLaw
                                              CommonChannelsCapacityConsumptionLaw,
    dedicatedChannelsCapacityConsumptionLaw
                                              DedicatedChannelsCapacityConsumptionLaw,
    iE-Extensions
                                              ProtocolExtensionContainer { { Local-Cell-Group-InformationItem-ResourceStatusInd-ExtIEs} }
   OPTIONAL,
    . . .
Local-Cell-Group-InformationItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Power-Local-Cell-Group-InformationList-ResourceStatusInd ::= SEQUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Power-Local-
Cell-Group-InformationItemIE-ResourceStatusInd }}
Power-Local-Cell-Group-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    { ID id-Power-Local-Cell-Group-InformationItem-ResourceStatusInd CRITICALITY ignore TYPE Power-Local-Cell-Group-InformationItem-
ResourceStatusInd
                       PRESENCE
                                  mandatory
Power-Local-Cell-Group-InformationItem-ResourceStatusInd::= SEQUENCE {
   power-Local-Cell-Group-ID
                                             Local-Cell-ID,
   maximumDL-PowerCapability
                                              MaximumDL-PowerCapability,
                                              ProtocolExtensionContainer { { Power-Local-Cell-Group-InformationItem-ResourceStatusInd-ExtIEs} }
    iE-Extensions
   OPTIONAL,
```

```
Power-Local-Cell-Group-InformationItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ServiceImpacting-ResourceStatusInd ::= SEQUENCE {
   local-Cell-InformationList
                                          Local-Cell-InformationList2-ResourceStatusInd OPTIONAL,
   local-Cell-Group-InformationList
                                          Local-Cell-Group-InformationList2-ResourceStatusInd OPTIONAL,
   cCP-InformationList
                                          CCP-InformationList-ResourceStatusInd
                                                                                        OPTIONAL,
    cell-InformationList
                                          Cell-InformationList-ResourceStatusInd
                                                                                        OPTIONAL,
   iE-Extensions
                                          ProtocolExtensionContainer { { ServiceImpactingItem-ResourceStatusInd-ExtIEs} }
                                                                                                                         OPTIONAL.
ServiceImpactingItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
          id-Power-Local-Cell-Group-InformationList2-ResourceStatusInd
                                                                                                                    EXTENSION Power-Local-
                                                                            CRITICALITY
                                                                                           ignore
Cell-Group-InformationList2-ResourceStatusInd
Local-Cell-InformationList2-ResourceStatusInd ::= SEQUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-
InformationItemIE2-ResourceStatusInd }}
Local-Cell-InformationItemIE2-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    mandatory }
Local-Cell-InformationItem2-ResourceStatusInd ::= SEQUENCE {
   local-Cell-ID
                                          Local-Cell-ID,
    dl-or-global-capacityCredit
                                          DL-or-Global-CapacityCredit
                                                                        OPTIONAL,
   ul-capacityCredit
                                          UL-CapacityCredit
                                                                        OPTIONAL,
    commonChannelsCapacityConsumptionLaw
                                             CommonChannelsCapacityConsumptionLaw
                                                                                    OPTIONAL,
    dedicatedChannelsCapacityConsumptionLaw
                                             DedicatedChannelsCapacityConsumptionLaw OPTIONAL,
   maximum-DL-PowerCapability
                                          MaximumDL-PowerCapability
                                                                        OPTIONAL,
                                          MinSpreadingFactor
    minSpreadingFactor
                                                                        OPTIONAL,
   minimumDL-PowerCapability
                                          MinimumDL-PowerCapability
                                                                        OPTIONAL,
   iE-Extensions
                                          ProtocolExtensionContainer { { Local-Cell-InformationItem2-ResourceStatusInd-ExtIEs} }
Local-Cell-InformationItem2-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
           id-ReferenceClockAvailability
                                                                                                                       PRESENCE optional } |
     ID
                                             CRITICALITY
                                                             ignore
                                                                            EXTENSION ReferenceClockAvailability
                                                                                                                       PRESENCE optional },
     ID
           id-Power-Local-Cell-Group-ID
                                             CRITICALITY
                                                             ignore
                                                                            EXTENSION Local-Cell-ID
    . . .
Local-Cell-Group-InformationList2-ResourceStatusInd ::= SEOUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Local-Cell-Group-
InformationItemIE2-ResourceStatusInd }}
Local-Cell-Group-InformationItemIE2-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
```

```
{ ID id-Local-Cell-Group-InformationItem2-ResourceStatusInd CRITICALITY ignore
                                                                                 TYPE Local-Cell-Group-InformationItem2-ResourceStatusInd
   PRESENCE mandatory }
Local-Cell-Group-InformationItem2-ResourceStatusInd ::= SEOUENCE
   local-Cell-Group-ID
                                        Local-Cell-ID,
   dl-or-global-capacityCredit
                                        DL-or-Global-CapacityCredit
                                                                      OPTIONAL,
   ul-capacityCredit
                                        UL-CapacityCredit
                                                                      OPTIONAL,
   commonChannelsCapacityConsumptionLaw
                                            CommonChannelsCapacityConsumptionLaw
                                                                                 OPTIONAL,
   dedicatedChannelsCapacityConsumptionLaw
                                            DedicatedChannelsCapacityConsumptionLaw OPTIONAL,
                                        ProtocolExtensionContainer { { Local-Cell-Group-InformationItem2-ResourceStatusInd-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
Local-Cell-Group-InformationItem2-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Power-Local-Cell-Group-InformationList2-ResourceStatusInd := SEQUENCE(SIZE (1..maxLocalCellinNodeB)) OF ProtocolIE-Single-Container {{ Power-
Local-Cell-Group-InformationItemIE2-ResourceStatusInd }}
Power-Local-Cell-Group-InformationItemIE2-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
         id-Power-Local-Cell-Group-InformationItem2-ResourceStatusInd CRITICALITY ignore TYPE Power-Local-Cell-Group-InformationItem2-
ResourceStatusInd
                      PRESENCE
                                mandatory
Power-Local-Cell-Group-InformationItem2-ResourceStatusInd::= SEOUENCE {
   power-Local-Cell-Group-ID
                                            Local-Cell-ID,
   maximumDL-PowerCapability
                                            MaximumDL-PowerCapability,
   iE-Extensions
                                            ProtocolExtensionContainer { { Power-Local-Cell-Group-InformationItem2-ResourceStatusInd-ExtIEs} }
   OPTIONAL,
   . . .
Power-Local-Cell-Group-InformationItem2-ResourceStatusInd-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
CCP-InformationList-ResourceStatusInd ::= SEOUENCE (SIZE (1..maxCCPinNodeB)) OF ProtocolIE-Single-Container {{ CCP-InformationItemIE-
ResourceStatusInd }}
CCP-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
CCP-InformationItem-ResourceStatusInd ::= SEOUENCE {
   communicationControlPortID
                                        CommunicationControlPortID,
   resourceOperationalState
                                        ResourceOperationalState,
   availabilityStatus
                                        AvailabilityStatus,
                                        iE-Extensions
                                                                                                                     OPTIONAL,
   . . .
```

```
CCP-InformationItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Cell-InformationList-ResourceStatusInd ::= SEOUENCE (SIZE (1..maxCellinNodeB)) OF ProtocolIE-Single-Container {{ Cell-InformationItemIE-
ResourceStatusInd }}
Cell-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
Cell-InformationItem-ResourceStatusInd ::= SEOUENCE {
   resourceOperationalState
                                         ResourceOperationalState
                                                                                      OPTIONAL.
   availabilityStatus
                                         AvailabilityStatus
                                                                                      OPTIONAL,
   primary-SCH-Information
                                         P-SCH-Information-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
                                                                                      OPTIONAL, -- FDD only
   secondary-SCH-Information
                                         S-SCH-Information-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
   primary-CPICH-Information
                                         P-CPICH-Information-ResourceStatusInd
   secondary-CPICH-Information
                                         S-CPICH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
   primary-CCPCH-Information
                                         P-CCPCH-Information-ResourceStatusInd
                                                                                      OPTIONAL,
   bCH-Information
                                         BCH-Information-ResourceStatusInd
                                                                                      OPTIONAL,
   secondary-CCPCH-InformationList
                                         S-CCPCH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL,
   pCH-Information
                                         PCH-Information-ResourceStatusInd
                                                                                      OPTIONAL,
   pICH-Information
                                         PICH-Information-ResourceStatusInd
                                                                                      OPTIONAL,
   fACH-InformationList
                                         FACH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL,
   pRACH-InformationList
                                         PRACH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL,
   rACH-InformationList
                                         RACH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL,
   aICH-InformationList
                                         AICH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
   pCPCH-InformationList
                                         PCPCH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
                                                                                      OPTIONAL, -- FDD only
   cPCH-InformationList
                                         CPCH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
   aP-AICH-InformationList
                                         AP-AICH-InformationList-ResourceStatusInd
                                                                                      OPTIONAL, -- FDD only
   cDCA-ICH-InformationList
                                         CDCA-ICH-InformationList-ResourceStatusInd
   sCH-Information
                                         SCH-Information-ResourceStatusInd
                                                                                      OPTIONAL, -- Applicable to 3.84Mcps TDD only
                                         ProtocolExtensionContainer { { Cell-InformationItem-ResourceStatusInd-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
Cell-InformationItem-ResourceStatusInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-FPACH-LCR-InformationList-ResourceStatusInd
                                                        CRITICALITY ignore
                                                                               EXTENSION
                                                                                          FPACH-LCR-InformationList-ResourceStatusInd
   PRESENCE optional } -- Applicable to 1.28Mcps TDD only
   { ID id-DwPCH-LCR-Information-ResourceStatusInd
                                                        CRITICALITY ignore
                                                                               EXTENSION
                                                                                          DwPCH-LCR-Information-ResourceStatusInd
   PRESENCE optional }, -- Applicable to 1.28Mcps TDD only
   . . .
P-SCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ P-SCH-InformationIE-ResourceStatusInd }}
P-SCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
S-SCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ S-SCH-InformationIE-ResourceStatusInd }}
S-SCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
```

399

```
PRESENCE mandatory }
P-CPICH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ P-CPICH-InformationIE-ResourceStatusInd }}
P-CPICH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
  { ID id-P-CPICH-Information CRITICALITY ignore
                                      TYPE Common-PhysicalChannel-Status-Information
                                                                                   PRESENCE mandatory }
S-CPICH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxSCPICHCell)) OF ProtocolIE-Single-Container {{ S-CPICH-InformationItemIE-
ResourceStatusInd }}
S-CPICH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
P-CCPCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ P-CCPCH-InformationIE-ResourceStatusInd }}
P-CCPCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
BCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ BCH-InformationIE-ResourceStatusInd }}
BCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
S-CCPCH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxSCCPCHCell)) OF ProtocolIE-Single-Container {{ S-CCPCH-InformationItemIE-
ResourceStatusInd }}
S-CCPCH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
PCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ PCH-InformationIE-ResourceStatusInd }}
PCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
  PRESENCE mandatory }
PICH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ PICH-InformationIE-ResourceStatusInd }}
PICH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
  PRESENCE mandatory }
FACH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxFACHCell)) OF ProtocolIE-Single-Container {{ FACH-InformationItemIE-
ResourceStatusInd }}
FACH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
  PRESENCE mandatory }
```

400

```
PRACH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxPRACHCell)) OF ProtocolIE-Single-Container {{ PRACH-InformationItemIE-
ResourceStatusInd }}
PRACH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RACH-InformationList-ResourceStatusInd ::= SEOUENCE (SIZE (1..maxPRACHCell)) OF ProtocolIE-Single-Container {{ RACH-InformationItemIE-
ResourceStatusInd }}
RACH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
AICH-InformationList-ResourceStatusInd ::= SEOUENCE (SIZE (1..maxPRACHCell)) OF ProtocolIE-Single-Container {{ AICH-InformationItemIE-
ResourceStatusInd }}
AICH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory
PCPCH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxPCPCHCell)) OF ProtocolIE-Single-Container {{ PCPCH-InformationItemIE-
ResourceStatusInd }}
PCPCH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
CPCH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ CPCH-InformationItemIE-
ResourceStatusInd }}
CPCH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
AP-AICH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ AP-AICH-InformationItemIE-
ResourceStatusInd }}
AP-AICH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
CDCA-ICH-InformationList-ResourceStatusInd ::= SEQUENCE (SIZE (1..maxCPCHCell)) OF ProtocolIE-Single-Container {{ CDCA-ICH-InformationItemIE-
ResourceStatusInd }}
CDCA-ICH-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE optional }
SCH-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ SCH-InformationIE-ResourceStatusInd }}
SCH-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   { ID id-SCH-Information CRITICALITY ignore TYPE Common-PhysicalChannel-Status-Information
                                                                                        PRESENCE mandatory }
```

```
FPACH-LCR-InformationList-ResourceStatusInd ::= SEOUENCE (SIZE (1..maxFPACHCell)) OF ProtocolIE-Single-Container {{ FPACH-LCR-InformationItemIE-
ResourceStatusInd }}
FPACH-LCR-InformationItemIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   { ID id-FPACH-LCR-Information CRITICALITY ignore TYPE Common-PhysicalChannel-Status-Information
                                                                                                    PRESENCE mandatory }
DwPCH-LCR-Information-ResourceStatusInd ::= ProtocolIE-Single-Container {{ DwPCH-LCR-InformationIE-ResourceStatusInd }}
DwPCH-LCR-InformationIE-ResourceStatusInd NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
  ****************
-- SYSTEM INFORMATION UPDATE REQUEST
  SystemInformationUpdateRequest ::= SEQUENCE {
                       ProtocolIE-Container
                                           {{SystemInformationUpdateRequest-IEs}},
   protocolIEs
                       ProtocolExtensionContainer {{SystemInformationUpdateRequest-Extensions}}
   protocolExtensions
                                                                                                    OPTIONAL,
SystemInformationUpdateRequest-IEs NBAP-PROTOCOL-IES ::= {
   { ID
         id-C-ID
                                                      CRITICALITY reject
                                                                          TYPE
                                                                                 C-ID
   PRESENCE mandatory }
         id-BCCH-ModificationTime
                                                      CRITICALITY reject
                                                                          TYPE
                                                                                 BCCH-ModificationTime
                                                                                                              PRESENCE optional
   { ID
         id-MIB-SB-SIB-InformationList-SystemInfoUpdateRqst
                                                         CRITICALITY reject
                                                                             TYPE
                                                                                                  MIB-SB-SIB-InformationList-
SystemInfoUpdateRqst
                       PRESENCE
                                 mandatory },
SystemInformationUpdateRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
MIB-SB-SIB-InformationList-SystemInfoUpdateRqst ::= SEQUENCE (SIZE (1..maxIB)) OF MIB-SB-SIB-InformationItem-SystemInfoUpdateRqst
MIB-SB-SIB-InformationItem-SystemInfoUpdateRqst ::= SEQUENCE {
   iB-Type
                                 IB-Type,
   iB-OC-ID
                                 IB-OC-ID,
   deletionIndicator
                                 DeletionIndicator-SystemInfoUpdate,
   iE-Extensions
                                 OPTIONAL,
MIB-SB-SIB-InformationItem-SystemInfoUpdateRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
DeletionIndicator-SystemInfoUpdate ::= CHOICE {
   no-Deletion
                                     No-Deletion-SystemInfoUpdate,
   ves-Deletion
No-Deletion-SystemInfoUpdate ::= SEQUENCE {
    sIB-Originator
                                        SIB-Originator
                                                                   OPTIONAL,
    -- This IE shall be present if the IB-Type IE is set to "SIB"
   iB-SG-REP
                                        IB-SG-REP
                                                                   OPTIONAL,
   segmentInformationList
                                        SegmentInformationList-SystemInfoUpdate,
   iE-Extensions
                                        ProtocolExtensionContainer { { No-DeletionItem-SystemInfoUpdate-ExtIEs} } 
                                                                                                                OPTIONAL,
No-DeletionItem-SystemInfoUpdate-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SegmentInformationList-SystemInfoUpdate ::= ProtocolIE-Single-Container {{ SegmentInformationListIEs-SystemInfoUpdate }}
SegmentInformationListIEs-SystemInfoUpdate NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
SegmentInformationListIE-SystemInfoUpdate ::= SEQUENCE (SIZE (1..maxIBSEG)) OF SegmentInformationItem-SystemInfoUpdate
SegmentInformationItem-SystemInfoUpdate ::= SEQUENCE {
   iB-SG-POS
                                        IB-SG-POS
                                                           OPTIONAL,
   segment-Type
                                        Segment-Type
                                                           OPTIONAL,
   -- This IE shall be present if the SIB Originator IE is set to "CRNC" or the IB-Type IE is set to "MIB", "SB1" or "SB2"
                                        IB-SG-DATA
                                                           OPTIONAL,
    -- This IE shall be present if the SIB Originator IE is set to "CRNC" or the IB-Type IE is set to "MIB", "SB1" or "SB2"
                                        ProtocolExtensionContainer { { SegmentInformationItem-SystemInfoUpdate-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
SegmentInformationItem-SystemInfoUpdate-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- SYSTEM INFORMATION UPDATE RESPONSE
__ *********************
SystemInformationUpdateResponse ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{SystemInformationUpdateResponse-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer {{SystemInformationUpdateResponse-Extensions}}
                                                                                                              OPTIONAL,
SystemInformationUpdateResponse-IEs NBAP-PROTOCOL-IES ::=
```

```
id-CriticalityDiagnostics
                                                                                                          PRESENCE optional },
                                       CRITICALITY
                                                                    TYPE
                                                                           CriticalityDiagnostics
   { ID
                                                      ignore
SystemInformationUpdateResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
        -- SYSTEM INFORMATION UPDATE FAILURE
__ *********************
SystemInformationUpdateFailure ::= SEQUENCE
   protocolIEs
                        ProtocolIE-Container
                                              {{SystemInformationUpdateFailure-IEs}},
                        ProtocolExtensionContainer {{SystemInformationUpdateFailure-Extensions}}
   protocolExtensions
                                                                                                          OPTIONAL,
SystemInformationUpdateFailure-IES NBAP-PROTOCOL-IES ::= {
          id-Cause
                                                                                                                  PRESENCE mandatory
                                           CRITICALITY
                                                         ignore
                                                                        TYPE
                                                                               Cause
    { ID
          id-CriticalityDiagnostics
                                           CRITICALITY
                                                         ignore
                                                                        TYPE
                                                                               CriticalityDiagnostics
                                                                                                          PRESENCE optional },
SystemInformationUpdateFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    ****************
-- RADIO LINK SETUP REQUEST FDD
  *****************
RadioLinkSetupRequestFDD ::= SEQUENCE {
                        ProtocolIE-Container
                                              {{RadioLinkSetupRequestFDD-IEs}},
   protocolIEs
   protocolExtensions
                        ProtocolExtensionContainer {{RadioLinkSetupRequestFDD-Extensions}}
                                                                                                          OPTIONAL,
RadioLinkSetupRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
   { ID id-CRNC-CommunicationContextID
                                                      CRITICALITY reject
                                                                                  TYPE
                                                                                                        CRNC-CommunicationContextID
              PRESENCE
                        mandatory }
          id-UL-DPCH-Information-RL-SetupRqstFDD
                                                      CRITICALITY reject
                                                                                  TYPE
                                                                                                        UL-DPCH-Information-RL-
                     PRESENCE
                                mandatory } |
SetupRqstFDD
   { ID id-DL-DPCH-Information-RL-SetupRqstFDD
                                                      CRITICALITY reject
                                                                                  TYPE
                                                                                                        DL-DPCH-Information-RL-
SetupRastFDD
                     PRESENCE
                                mandatory }|
                                                                           DCH-FDD-Information
     ID
         id-DCH-FDD-Information
                                       CRITICALITY reject
                                                                    TYPE
                                                                                                             PRESENCE mandatory
     ID
          id-DSCH-FDD-Information
                                       CRITICALITY reject
                                                                    TYPE
                                                                           DSCH-FDD-Information
                                                                                                          PRESENCE optional }
          id-TFCI2-Bearer-Information-RL-SetupRqstFDD
                                                     CRITICALITY ignore
                                                                                  TYPE
                                                                                                        TFCI2-Bearer-Information-RL-
     ID
SetupRqstFDD
              PRESENCE
                       optional
                                  } |
```

```
RL-InformationList-RL-
           id-RL-InformationList-RL-SetupRqstFDD
                                                            CRITICALITY notify
                                                                                             TYPE
SetupRast.FDD
                       PRESENCE mandatory } |
   { ID id-Transmission-Gap-Pattern-Sequence-Information
                                                            CRITICALITY reject.
                                                                                             TYPE Transmission-Gap-Pattern-Sequence-Information
   PRESENCE optional } |
{ ID id-Active-Pattern-Sequence-Information
                                                        CRITICALITY reject.
                                                                                         TYPE Active-Pattern-Sequence-Information PRESENCE
   optional },
    . . .
RadioLinkSetupRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
      ID id-DSCH-FDD-Common-Information
                                                        CRITICALITY ignore EXTENSION DSCH-FDD-Common-Information
                                                                                                                                   PRESENCE optional
      ID id-DL-PowerBalancing-Information
                                                CRITICALITY ignore
                                                                        EXTENSION DL-PowerBalancing-Information
                                                                                                                       PRESENCE optional } |
      ID id-HSDSCH-FDD-Information
                                                    CRITICALITY reject EXTENSION HSDSCH-FDD-Information
                                                                                                                             PRESENCE optional } |
      ID id-HSDSCH-RNTI
                                                    CRITICALITY reject EXTENSION HSDSCH-RNTI
                                                                                                                             PRESENCE optional }
    { ID id-HSPDSCH-RL-ID
                                                    CRITICALITY reject EXTENSION RL-ID
                                                                                                                             PRESENCE conditional },
UL-DPCH-Information-RL-SetupRgstFDD ::= SEOUENCE {
    ul-ScramblingCode
                                            UL-ScramblingCode,
    minUL-ChannelisationCodeLength
                                            MinUL-ChannelisationCodeLength,
    maxNrOfUL-DPDCHs
                                            MaxNrOfUL-DPDCHs
                                                                    OPTIONAL,
    -- This IE shall be present if Min UL Channelisation Code length IE is set to 4 --
    ul-PunctureLimit
                                            PunctureLimit,
    t.FCS
                                            TFCS.
    ul-DPCCH-SlotFormat
                                            UL-DPCCH-SlotFormat,
    ul-SIR-Target
                                            UL-SIR,
    diversityMode
                                            DiversityMode,
    sSDT-CellID-Length
                                            SSDT-CellID-Length
                                                                    OPTIONAL,
    s-FieldLength
                                            S-FieldLength
                                                                    OPTIONAL.
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-DPCH-Information-RL-SetupRqstFDD-ExtIEs} } OPTIONAL,
    . . .
UL-DPCH-Information-RL-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    {ID id-DPC-Mode
                            CRITICALITY reject EXTENSION DPC-Mode
                                                                        PRESENCE optional },
    . . .
DL-DPCH-Information-RL-SetupRqstFDD ::= SEQUENCE {
    t.FCS
    dl-DPCH-SlotFormat
                                            DL-DPCH-SlotFormat,
    tFCI-SignallingMode
                                            TFCI-SignallingMode,
    tFCI-Presence
                                            TFCI-Presence OPTIONAL,
    -- this IE shall be present if the DL DPCH slot format IE is set to any of the values from 12 to 16 --
    multiplexingPosition
                                            MultiplexingPosition,
    pDSCH-RL-ID
                                            RL-ID
                                                            OPTIONAL,
    -- This IE shall be present if the DSCH Information IE is present --
                                            PDSCH-CodeMapping
    pDSCH-CodeMapping
                                                                    OPTIONAL,
    -- This IE shall be present if the DSCH Information IE is present --
    powerOffsetInformation
                                            PowerOffsetInformation-RL-SetupRqstFDD,
    fdd-TPC-DownlinkStepSize
                                            FDD-TPC-DownlinkStepSize,
    limitedPowerIncrease
                                            LimitedPowerIncrease,
```

```
innerLoopDLPCStatus
                                            InnerLoopDLPCStatus,
    iE-Extensions
                                            ProtocolExtensionContainer { { DL-DPCH-Information-RL-SetupRgstFDD-ExtIEs} } OPTIONAL,
DL-DPCH-Information-RL-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PowerOffsetInformation-RL-SetupRqstFDD ::= SEOUENCE {
    pO1-ForTFCI-Bits
                                            PowerOffset,
   pO2-ForTPC-Bits
                                            PowerOffset,
   pO3-ForPilotBits
                                            PowerOffset.
   iE-Extensions
                                            ProtocolExtensionContainer { { PowerOffsetInformation-RL-SetupRgstFDD-ExtIEs} } OPTIONAL,
PowerOffsetInformation-RL-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCI2-Bearer-Information-RL-SetupRqstFDD ::= SEQUENCE {
    toAWS
                                        ToAWS,
    toAWE
                                        ProtocolExtensionContainer { { TFCI2-Bearer-Information-RL-SetupRqstFDD-ExtIEs} }
    iE-Extensions
                                                                                                                             OPTIONAL,
TFCI2-Bearer-Information-RL-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-SetupRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF
    ProtocolIE-Single-Container{{ RL-InformationItemIE-RL-SetupRqstFDD }}
RL-InformationItemIE-RL-SetupRqstFDD NBAP-PROTOCOL-IES ::= {
          id-RL-InformationItem-RL-SetupRqstFDD
                                                            CRITICALITY
                                                                            notify
                                                                                             TYPE
                                                                                                                     RL-InformationItem-RL-
                    PRESENCE
SetupRqstFDD
                                mandatory}
RL-InformationItem-RL-SetupRqstFDD ::= SEQUENCE {
    rL-ID
                                        RL-ID,
    c-ID
                                        C-ID,
    firstRLS-indicator
                                        FirstRLS-Indicator,
    frameOffset
                                        FrameOffset,
    chipOffset
                                        ChipOffset,
    propagationDelay
                                        PropagationDelay
                                                                    OPTIONAL,
    diversityControlField
                                        DiversityControlField
                                                                    OPTIONAL,
    -- This IE shall be present if the RL is not the first one in the RL Information IE
                                        FDD-DL-CodeInformation,
    dl-CodeInformation
    initialDL-transmissionPower
                                        DL-Power,
    maximumDL-power
                                        DL-Power,
    minimumDL-power
                                        DL-Power,
    sSDT-Cell-Identity
                                        SSDT-Cell-Identity
                                                                    OPTIONAL,
```

```
transmitDiversityIndicator
                                    TransmitDiversityIndicator
                                                                  OPTIONAL,
   -- This IE shall be present if Diversity Mode IE in UL DPCH Information group is not set to "none"
   iE-Extensions
                                    RL-InformationItem-RL-SetupRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-SSDT-CellIDforEDSCHPC CRITICALITY ignore EXTENSION SSDT-Cell-Identity
                                                                                 PRESENCE conditional } |
   -- This IE shall be present if Enhanced DSCH PC IE is present in the DSCH Common Information IE.
     ID id-RL-Specific-DCH-Info CRITICALITY ignore
                                                    EXTENSION RL-Specific-DCH-Info
                                                                                                           optional }|
     ID id-DelayedActivation CRITICALITY reject EXTENSION DelayedActivation PRESENCE optional }
    ID id-Qth-Parameter CRITICALITY ignore
                                               EXTENSION Oth-Parameter
                                                                             PRESENCE optional },
      *******************
-- RADIO LINK SETUP REQUEST TDD
__ **********************
RadioLinkSetupRequestTDD ::= SEQUENCE {
                                             {{RadioLinkSetupRequestTDD-IEs}},
                         ProtocolIE-Container
   protocolIEs
                         ProtocolExtensionContainer {{RadioLinkSetupRequestTDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
RadioLinkSetupRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                           CRITICALITY reject
                                                                                     TYPE
                                                                                                           CRNC-CommunicationContextID
                  PRESENCE
                             mandatory }|
   { ID
          id-UL-CCTrCH-InformationList-RL-SetupRgstTDD
                                                           CRITICALITY notify
                                                                                     TYPE
                                                                                                          UL-CCTrCH-InformationList-RL-
                  PRESENCE
                             optional
SetupRqstTDD
                                      } |
   { ID id-DL-CCTrCH-InformationList-RL-SetupRqstTDD
                                                           CRITICALITY notify
                                                                                                           DL-CCTrCH-InformationList-RL-
SetupRqstTDD
                  PRESENCE optional
                                        } |
     ID id-DCH-TDD-Information
                                            CRITICALITY reject
                                                                      TYPE
                                                                             DCH-TDD-Information
                                                                                                                   PRESENCE optional } |
                                                                             DSCH-TDD-Information
                                                                                                                PRESENCE optional }
     ID id-DSCH-TDD-Information
                                            CRITICALITY reject
                                                                      TYPE
     ID id-USCH-Information
                                        CRITICALITY reject
                                                                  TYPE USCH-Information
                                                                                                                PRESENCE optional } |
                                                                                                          RL-Information-RL-SetupRgstTDD
     ID
          id-RL-Information-RL-SetupRqstTDD
                                                           CRITICALITY reject
                  PRESENCE mandatory },
    . . .
RadioLinkSetupRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
     ID id-HSDSCH-TDD-Information
                                        CRITICALITY reject
                                                              EXTENSION HSDSCH-TDD-Information
                                                                                                           PRESENCE optional }
     ID id-HSDSCH-RNTI
                                        CRITICALITY reject
                                                                                                           PRESENCE optional }
                                                              EXTENSION HSDSCH-RNTI
                                                                                                           PRESENCE conditional } |
     ID id-HSPDSCH-RL-ID
                                        CRITICALITY reject
                                                              EXTENSION RL-ID
    { ID id-PDSCH-RL-ID
                                        CRITICALITY ignore
                                                              EXTENSION RL-ID
                                                                                                          PRESENCE optional }.
UL-CCTrCH-InformationList-RL-SetupRqstTDD ::= SEQUENCE (SIZE(1..maxNrOfCCTrCHs)) OF
   ProtocolIE-Single-Container{{     UL-CCTrCH-InformationItemIE-RL-SetupRqstTDD     }}
UL-CCTrCH-InformationItemIE-RL-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
```

```
id-UL-CCTrCH-InformationItem-RL-SetupRqstTDD
                                                             CRITICALITY
                                                                             notify
                                                                                            TYPE
                                                                                                               UL-CCTrCH-InformationItem-RL-
SetupRastTDD
                   PRESENCE
                              mandatory}
UL-CCTrCH-InformationItem-RL-SetupRgstTDD ::= SEQUENCE {
    cCTrCH-ID
                                          CCTrCH-ID,
   t FCS
                                          TFCS,
   tFCI-Coding
                                          TFCI-Coding,
   punctureLimit
                                          PunctureLimit,
                                          UL-DPCH-Information-RL-SetupRgstTDD
                                                                                 OPTIONAL, -- Applicable to 3.84Mcps TDD only
   uL-DPCH-Information
   iE-Extensions
                                          ProtocolExtensionContainer { { UL-CCTrCH-InformationItem-RL-SetupRqstTDD-ExtIEs} }
                                                                                                                             OPTIONAL,
    . . .
UL-CCTrCH-InformationItem-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
     ID id-UL-DPCH-LCR-Information-RL-SetupRqstTDD CRITICALITY notify
                                                                         EXTENSION UL-DPCH-LCR-Information-RL-SetupRgstTDD PRESENCE optional
    -- Applicable to 1.28Mcps TDD only
    { ID id-UL-SIRTarget
                              CRITICALITY reject
                                                                     UL-SIR
                                                                                 PRESENCE optional
                                                      EXTENSION
    -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD.
UL-DPCH-Information-RL-SetupRqstTDD ::= ProtocolIE-Single-Container{{ UL-DPCH-InformationIE-RL-SetupRqstTDD }}
UL-DPCH-InformationIE-RL-SetupRgstTDD NBAP-PROTOCOL-IES ::= {
    { ID id-UL-DPCH-InformationList-RL-SetupRgstTDD
                                                     CRITICALITY notify TYPE UL-DPCH-InformationItem-RL-SetupRqstTDD
                                                                                                                        PRESENCE mandatory
UL-DPCH-InformationItem-RL-SetupRqstTDD ::= SEQUENCE {
                                          RepetitionPeriod,
   repetitionPeriod
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-Timeslot-Information
                                          UL-Timeslot-Information,
                                          iE-Extensions
    . . .
UL-DPCH-InformationItem-RL-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCH-LCR-Information-RL-SetupRqstTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-TimeslotLCR-Information
                                          UL-TimeslotLCR-Information,
   iE-Extensions
                                          ProtocolExtensionContainer { { UL-DPCH-LCR-InformationItem-RL-SetupRgstTDD-ExtIEs} }
                                                                                                                                OPTIONAL,
UL-DPCH-LCR-InformationItem-RL-SetupRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
DL-CCTrCH-InformationList-RL-SetupRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ DL-CCTrCH-InformationItemIE-RL-
SetupRqstTDD }}
DL-CCTrCH-InformationItemIE-RL-SetupRgstTDD NBAP-PROTOCOL-IES ::= {
           id-DL-CCTrCH-InformationItem-RL-SetupRgstTDD
                                                                 CRITICALITY
                                                                                 notify
                                                                                                               TYPE DL-CCTrCH-InformationItem-
RL-SetupRqstTDD
                   PRESENCE
                              mandatory}
DL-CCTrCH-InformationItem-RL-SetupRqstTDD ::= SEQUENCE {
    cCTrCH-ID
                                          CCTrCH-ID,
   tFCS
                                          TFCS,
    tFCI-Coding
                                          TFCI-Coding
   punctureLimit
                                          PunctureLimit.
    tdd-TPC-DownlinkStepSize
                                          TDD-TPC-DownlinkStepSize,
    cCTrCH-TPCList
                                          CCTrCH-TPCList-RL-SetupRgstTDD
                                                                                 OPTIONAL.
   dL-DPCH-Information
                                          DL-DPCH-Information-RL-SetupRgstTDD
                                                                                 OPTIONAL,
                                                                                            -- Applicable to 3.84Mcps TDD only
                                          ProtocolExtensionContainer { { DL-CCTrCH-InformationItem-RL-SetupRqstTDD-ExtIEs} }
   iE-Extensions
DL-CCTrCH-InformationItem-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ID id-DL-DPCH-LCR-Information-RL-SetupRqstTDD CRITICALITY notify
                                                                         EXTENSION DL-DPCH-LCR-Information-RL-SetupRqstTDD PRESENCE optional
    } -- Applicable to 1.28Mcps TDD only
    { ID id-CCTrCH-Initial-DL-Power-RL-SetupRgstTDD
                                                     CRITICALITY ignore
                                                                             EXTENSION DL-Power
                                                                                                                  PRESENCE optional },
CCTrCH-TPCList-RL-SetupRqstTDD ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF CCTrCH-TPCItem-RL-SetupRqstTDD
CCTrCH-TPCItem-RL-SetupRqstTDD
                              ::= SEOUENCE {
   cCTrCH-ID
                                          CCTrCH-ID.
   iE-Extensions
                                          ProtocolExtensionContainer { { CCTrCH-TPCItem-RL-SetupRqstTDD-ExtIEs} }
    . . .
CCTrCH-TPCItem-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-Information-RL-SetupRqstTDD ::= ProtocolIE-Single-Container{{ DL-DPCH-InformationIE-RL-SetupRqstTDD }}
DL-DPCH-InformationIE-RL-SetupRqstTDD NBAP-PROTOCOL-IES ::= {
    { ID id-DL-DPCH-InformationList-RL-SetupRqstTDD
                                                    CRITICALITY notify TYPE DL-DPCH-InformationItem-RL-SetupRqstTDD
                                                                                                                        PRESENCE mandatory
DL-DPCH-InformationItem-RL-SetupRgstTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   dL-Timeslot-Information
                                      DL-Timeslot-Information,
                                          iE-Extensions
                                                                                                                          OPTIONAL,
    . . .
```

```
DL-DPCH-InformationItem-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-LCR-Information-RL-SetupRgstTDD ::= SEQUENCE {
   repetitionPeriod
                                        RepetitionPeriod,
   repetitionLength
                                        RepetitionLength,
   tdd-DPCHOffset
                                        TDD-DPCHOffset,
   dL-TimeslotLCR-Information
                                        DL-TimeslotLCR-Information,
                                        TSTD-Indicator,
   tstdIndicator
   iE-Extensions
                                        ProtocolExtensionContainer { { DL-DPCH-LCR-InformationItem-RL-SetupRqstTDD-ExtIEs} }
                                                                                                                           OPTIONAL,
   . . .
DL-DPCH-LCR-InformationItem-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Information-RL-SetupRgstTDD ::= SEQUENCE
   rL-ID
                                        RL-ID,
   c-TD
                                        C-ID,
   frameOffset
                                        FrameOffset,
                                        SpecialBurstScheduling,
   specialBurstScheduling
   initialDL-transmissionPower
                                        DL-Power,
   maximumDL-power
                                        DL-Power,
   minimumDL-power
                                        DL-Power,
   dL-TimeSlotISCPInfo
                                        DL-TimeslotISCPInfo OPTIONAL, -- Applicable to 3.84Mcps TDD only
   iE-Extensions
                                        ProtocolExtensionContainer { { RL-Information-RL-SetupRgstTDD-ExtIEs} }
                                                                                                             OPTIONAL,
RL-Information-RL-SetupRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   DL-TimeslotISCPInfoLCR
                                                                                                             PRESENCE optional } |
                                                                          EXTENSION
   -- Applicable to 1.28Mcps TDD only
                                 CRITICALITY ignore
     ID id-RL-Specific-DCH-Info
                                                       EXTENSION RL-Specific-DCH-Info
                                                                                         PRESENCE
                                                                                                           optional }|
    { ID id-DelayedActivation CRITICALITY reject EXTENSION DelayedActivation PRESENCE optional },
    *****************
-- RADIO LINK SETUP RESPONSE FDD
  *****************
RadioLinkSetupResponseFDD ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{RadioLinkSetupResponseFDD-IEs}},
                         ProtocolExtensionContainer {{RadioLinkSetupResponseFDD-Extensions}}
   protocolExtensions
                                                                                                             OPTIONAL,
RadioLinkSetupResponseFDD-IEs NBAP-PROTOCOL-IES ::= {
    { ID
          id-CRNC-CommunicationContextID
                                                           CRITICALITY ignore
                                                                                     TYPE
                                                                                                           CRNC-CommunicationContextID
                  PRESENCE
                             mandatory } |
```

```
id-NodeB-CommunicationContextID
                                                                CRITICALITY ignore
                                                                                             TYPE
                                                                                                                     NodeB-CommunicationContextID
                PRESENCE
                            mandatory }|
     ID
            id-CommunicationControlPortID
                                                                CRITICALITY ignore
                                                                                             TYPE
                                                                                                                     CommunicationControlPortID
                            mandatory }|
                PRESENCE
            id-RL-InformationResponseList-RL-SetupRspFDD
                                                                CRITICALITY ignore
                                                                                             TYPE
                                                                                                                     RL-InformationResponseList-RL-
    { ID
SetupRspFDD
                PRESENCE
                            mandatory }
           id-TFCI2-BearerInformationResponse CRITICALITY ignore
                                                                                     TFCI2-BearerInformationResponse PRESENCE optional }
      TD
                                                                            TYPE
     ID
           id-CriticalityDiagnostics
                                                                CRITICALITY ignore
                                                                                             TYPE
                                                                                                                     CriticalityDiagnostics
                PRESENCE
                            optional
RadioLinkSetupResponseFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationResponseList-RL-SetupRspFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container { RL-InformationResponseItemIE-RL-
SetupRspFDD }}
RL-InformationResponseItemIE-RL-SetupRspFDD NBAP-PROTOCOL-IES ::= {
            id-RL-InformationResponseItem-RL-SetupRspFDD
                                                                     CRITICALITY
                                                                                     ignore
                                                                                                 TYPE
                                                                                                                     RL-InformationResponseItem-RL-
SetupRspFDD
                PRESENCE
                           mandatory}
RL-InformationResponseItem-RL-SetupRspFDD ::= SEQUENCE {
    rL-ID
                                                    RL-ID.
    rL-Set-ID
                                                    RL-Set-ID,
    received-total-wide-band-power
                                                                            Received-total-wide-band-power-Value,
                                    DiversityIndication-RL-SetupRspFDD,
    diversityIndication
    dSCH-InformationResponseList
                                                    DSCH-InformationResponseList-RL-SetupRspFDD
                                                                                                                     OPTIONAL,
    sSDT-SupportIndicator
                                                    SSDT-SupportIndicator,
    iE-Extensions
                                                    ProtocolExtensionContainer { { RL-InformationResponseItem-RL-SetupRspFDD-ExtIEs} }
    OPTIONAL,
    . . .
RL-InformationResponseItem-RL-SetupRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-DL-PowerBalancing-ActivationIndicator CRITICALITY ignore
                                                                             EXTENSION
                                                                                             DL-PowerBalancing-ActivationIndicator
                                                                                                                                      PRESENCE
optional}
    { ID id-HSDSCH-FDD-Information-Response
                                                CRITICALITY ignore
                                                                        EXTENSION HSDSCH-FDD-Information-Response
                                                                                                                       PRESENCE optional },
DiversityIndication-RL-SetupRspFDD ::= CHOICE {
    combining
                                                Combining-RL-SetupRspFDD,
    nonCombiningOrFirstRL
                                                NonCombiningOrFirstRL-RL-SetupRspFDD
Combining-RL-SetupRspFDD ::= SEQUENCE {
    rL-ID
    iE-Extensions
                                                ProtocolExtensionContainer { { Combining-RL-SetupRspFDD-ExtIEs} } 
                                                                                                                       OPTIONAL,
    . . .
```

```
Combining-RL-SetupRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
NonCombiningOrFirstRL-RL-SetupRspFDD ::= SEOUENCE
   dCH-InformationResponse
                                             DCH-InformationResponse,
                                                 ProtocolExtensionContainer { { NonCombiningOrFirstRLItem-RL-SetupRspFDD-ExtIEs} }
   iE-Extensions
                                                                                                                                OPTIONAL,
   . . .
NonCombiningOrFirstRLItem-RL-SetupRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DSCH-InformationResponseList-RL-SetupRspFDD ::= ProtocolIE-Single-Container {{ DSCH-InformationResponseListIEs-RL-SetupRspFDD }}
DSCH-InformationResponseListIEs-RL-SetupRspFDD NBAP-PROTOCOL-IES ::= {
    ID id-DSCH-InformationResponse CRITICALITY ignore TYPE DSCH-InformationResponse
                                                                                          PRESENCE mandatory }
   -- RADIO LINK SETUP RESPONSE TDD
  *****************
RadioLinkSetupResponseTDD ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                 {{RadioLinkSetupResponseTDD-IEs}},
   protocolExtensions
                          ProtocolExtensionContainer {{RadioLinkSetupResponseTDD-Extensions}}
                                                                                                               OPTIONAL,
RadioLinkSetupResponseTDD-IEs NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                            CRITICALITY
                                                                                          TYPE
                                                                                                             CRNC-CommunicationContextID
    { ID
                                                                           ignore
                  PRESENCE mandatory } |
   { ID
           id-NodeB-CommunicationContextID
                                                            CRITICALITY
                                                                           ignore
                                                                                          TYPE
                                                                                                             NodeB-CommunicationContextID
               PRESENCE
                         mandatory }
    { ID
           id-CommunicationControlPortID
                                                            CRITICALITY
                                                                           ignore
                                                                                          TYPE
                                                                                                             CommunicationControlPortID
               PRESENCE
                          mandatory } |
    { ID
           id-RL-InformationResponse-RL-SetupRspTDD
                                                            CRITICALITY
                                                                           ignore
                                                                                          TYPE
                                                                                                             RL-InformationResponse-RL-
                                         } -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
SetupRspTDD
                  PRESENCE
                              optional
    { ID
          id-CriticalityDiagnostics
                                                            CRITICALITY
                                                                           ignore
                                                                                                             CriticalityDiagnostics
               PRESENCE optional
RadioLinkSetupResponseTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
          id-RL-InformationResponse-LCR-RL-SetupRspTDD
                                                                CRITICALITY
                                                                               ignore
InformationResponse-LCR-RL-SetupRspTDD
                                             PRESENCE
                                                        optional
                                                                  }, -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
RL-InformationResponse-RL-SetupRspTDD ::= SEQUENCE
   rL-ID
                                                 RL-ID,
```

```
uL-TimeSlot-ISCP-Info
                                 UL-TimeSlot-ISCP-Info,
   ul-PhysCH-SF-Variation
                                            UL-PhysCH-SF-Variation,
   dCH-InformationResponseList
                                            DCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL.
   dSCH-InformationResponseList
                                            DSCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL,
   uSCH-InformationResponseList
                                            USCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL.
                                            ProtocolExtensionContainer { { RL-InformationResponseList-RL-SetupRspTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
RL-InformationResponseList-RL-SetupRspTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
   { ID id-HSDSCH-TDD-Information-Response
                                            CRITICALITY ignore
                                                                EXTENSION HSDSCH-TDD-Information-Response
                                                                                                       PRESENCE optional },
   . . .
DCH-InformationResponseListIEs-RL-SetupRspTDD NBAP-PROTOCOL-IES ::= {
    ID id-DCH-InformationResponse CRITICALITY
                                            ignore
                                                             DCH-InformationResponse PRESENCE
                                                                                                  mandatory }
DSCH-InformationResponseList-RL-SetupRspTDD ::= ProtocolIE-Single-Container {{ DSCH-InformationResponseListIEs-RL-SetupRspTDD }}
DSCH-InformationResponseListIEs-RL-SetupRspTDD NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
USCH-InformationResponseList-RL-SetupRspTDD ::= ProtocolIE-Single-Container {{ USCH-InformationResponseListIEs-RL-SetupRspTDD }}
USCH-InformationResponseListIEs-RL-SetupRspTDD NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RL-InformationResponse-LCR-RL-SetupRspTDD ::= SEQUENCE {
   rL-ID
                                            RL-ID,
   uL-TimeSlot-ISCP-LCR-Info
                                            UL-TimeSlot-ISCP-LCR-Info,
   ul-PhysCH-SF-Variation
                                            UL-PhysCH-SF-Variation,
   dCH-InformationResponseList
                                            DCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL,
   dSCH-InformationResponseList
                                            DSCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL,
   uSCH-InformationResponseList
                                            USCH-InformationResponseList-RL-SetupRspTDD
                                                                                                    OPTIONAL,
                                            iE-Extensions
   OPTIONAL,
   . . .
RL-InformationResponseList-LCR-RL-SetupRspTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-HSDSCH-TDD-Information-Response-LCR
                                               CRITICALITY ignore
                                                                    EXTENSION HSDSCH-TDD-Information-Response
                                                                                                         PRESENCE optional },
-- RADIO LINK SETUP FAILURE FDD
```

```
__ ********************
RadioLinkSetupFailureFDD ::= SEOUENCE {
   protocolIEs
                           ProtocolIE-Container
                                                  {{RadioLinkSetupFailureFDD-IEs}},
   protocolExtensions
                           ProtocolExtensionContainer {{RadioLinkSetupFailureFDD-Extensions}}
                                                                                                                 OPTIONAL.
RadioLinkSetupFailureFDD-IEs NBAP-PROTOCOL-IES ::= {
    { ID
          id-CRNC-CommunicationContextID
                                                                          CRITICALITY
                                                                                          ignore
                                                                                                                      TYPE CRNC-
CommunicationContextID
                                                      PRESENCE
                                                                  mandatory }|
          id-NodeB-CommunicationContextID
   { ID
                                                                          CRITICALITY
                                                                                          ignore
                                                                                                                      TYPE NodeB-
CommunicationContextID
                                                  PRESENCE
                                                              conditional }
    -- This IE shall be present if at least one of the radio links has been successfully set up
           id-CommunicationControlPortID
                                                                          CRITICALITY
                                                                                                                      TYPE
   CommunicationControlPortID
                                                              PRESENCE
                                                                          optional
    { ID id-CauseLevel-RL-SetupFailureFDD
                                                                          CRITICALITY
                                                                                          ignore
                                                                                                                      TYPE CauseLevel-RL-
                 PRESENCE mandatory
SetupFailureFDD
           id-CriticalityDiagnostics
                                                                          CRITICALITY
                                                                                          ignore
                                                                                                                      TYPE
   CriticalityDiagnostics
                                                                          optional },
                                                              PRESENCE
    . . .
RadioLinkSetupFailureFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-RL-SetupFailureFDD ::= CHOICE {
   generalCause
                       GeneralCauseList-RL-SetupFailureFDD,
                       RLSpecificCauseList-RL-SetupFailureFDD,
   rLSpecificCause
GeneralCauseList-RL-SetupFailureFDD ::= SEQUENCE
   cause
                                               Cause,
   iE-Extensions
                                               ProtocolExtensionContainer { GeneralCauseItem-RL-SetupFailureFDD-ExtIEs} }
GeneralCauseItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RLSpecificCauseList-RL-SetupFailureFDD ::= SEQUENCE {
   unsuccessful-RL-InformationRespList-RL-SetupFailureFDD
                                                              Unsuccessful-RL-InformationRespList-RL-SetupFailureFDD,
    successful-RL-InformationRespList-RL-SetupFailureFDD
                                                              Successful-RL-InformationRespList-RL-SetupFailureFDD OPTIONAL,
   iE-Extensions
                                              ProtocolExtensionContainer { { RLSpecificCauseItem-RL-SetupFailureFDD-ExtIEs} }
                                                                                                                               OPTIONAL,
RLSpecificCauseItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
Unsuccessful-RL-InformationRespList-RL-SetupFailureFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ Unsuccessful-RL-
InformationRespItemIE-RL-SetupFailureFDD }}
Unsuccessful-RL-InformationRespItemIE-RL-SetupFailureFDD NBAP-PROTOCOL-IES ::= {
           id-Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD
                                                                                          ignore
                                                                                                                    TYPE Unsuccessful-RL-
InformationRespItem-RL-SetupFailureFDD
                                          PRESENCE
                                                      mandatory}
Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD ::= SEQUENCE {
   rL-ID
                                               RL-ID,
   cause
                                               Cause,
                                               ProtocolExtensionContainer { { Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Successful-RL-InformationRespList-RL-SetupFailureFDD ::= SEQUENCE (SIZE (1.. maxNrOfRLs)) OF ProtocolIE-Single-Container {{ Successful-RL-
InformationRespItemIE-RL-SetupFailureFDD }}
Successful-RL-InformationRespItemIE-RL-SetupFailureFDD NBAP-PROTOCOL-IES ::= {
          id-Successful-RL-InformationRespItem-RL-SetupFailureFDD
                                                                          CRITICALITY
                                                                                          ignore
                                                                                                                    TYPE Successful-RL-
InformationRespItem-RL-SetupFailureFDD
                                           PRESENCE
                                                      mandat.orv}
Successful-RL-InformationRespItem-RL-SetupFailureFDD ::= SEQUENCE {
   rL-ID
                                               RL-ID,
   rL-Set-ID
                                               RL-Set-ID,
   received-total-wide-band-power
                                                                      Received-total-wide-band-power-Value,
   diversityIndication
                                               DiversityIndication-RL-SetupFailureFDD,
   dSCH-InformationResponseList
                                               DSCH-InformationRespList-RL-SetupFailureFDD
                                                                                              OPTIONAL,
    tFCI2-BearerInformationResponse
                                               TFCI2-BearerInformationResponse
                                                                                  OPTIONAL,
    -- There shall be only one TFCI2 bearer per Node B Communication Context.
    sSDT-SupportIndicator
                                              SSDT-SupportIndicator,
                                               ProtocolExtensionContainer { { Successful-RL-InformationRespItem-RL-SetupFailureFDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
Successful-RL-InformationRespItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    DL-PowerBalancing-ActivationIndicator
                                                                                                                                  PRESENCE
                                                                          EXTENSION
optional}
    { ID id-HSDSCH-FDD-Information-Response
                                                   CRITICALITY ignore
                                                                          EXTENSION HSDSCH-FDD-Information-Response
                                                                                                                      PRESENCE optional },
DiversityIndication-RL-SetupFailureFDD ::= CHOICE {
    combining
                                               Combining-RL-SetupFailureFDD,
    nonCombiningOrFirstRL
                                           NonCombiningOrFirstRL-RL-SetupFailureFDD
```

```
Combining-RL-SetupFailureFDD ::= SEQUENCE {
   rL-ID
                                           RL-ID.
   iE-Extensions
                                           ProtocolExtensionContainer { { CombiningItem-RL-SetupFailureFDD-ExtIEs} } }
CombiningItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
NonCombiningOrFirstRL-RL-SetupFailureFDD ::= SEQUENCE {
   dCH-InformationResponse
                                           DCH-InformationResponse,
   iE-Extensions
                                               ProtocolExtensionContainer { { NonCombiningOrFirstRLItem-RL-SetupFailureFDD-ExtIEs} }
   OPTIONAL.
   . . .
NonCombiningOrFirstRLItem-RL-SetupFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DSCH-InformationRespList-RL-SetupFailureFDD ::= ProtocolIE-Single-Container {{ DSCH-InformationRespListIEs-RL-SetupFailureFDD }}
DSCH-InformationRespListIEs-RL-SetupFailureFDD NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
  *********************
-- RADIO LINK SETUP FAILURE TDD
__ *********************
RadioLinkSetupFailureTDD ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                               {{RadioLinkSetupFailureTDD-IEs}},
                        ProtocolExtensionContainer {{RadioLinkSetupFailureTDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
RadioLinkSetupFailureTDD-IEs NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
   { ID
                                                                 CRITICALITY ignore
                                                                                      TYPE
                                                                                                        CRNC-CommunicationContextID
                                   mandatory } |
                         PRESENCE
          id-CauseLevel-RL-SetupFailureTDD
   { ID
                                                                    CRITICALITY
                                                                                   ignore
                                                                                                             TYPE CauseLevel-RL-
SetupFailureTDD
                 PRESENCE mandatory
   { ID id-CriticalityDiagnostics
                                                                 CRITICALITY ignore
                                                                                                        CriticalityDiagnostics
                     PRESENCE
                                optional
RadioLinkSetupFailureTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-RL-SetupFailureTDD ::= CHOICE {
```

```
generalCause
                     GeneralCauseList-RL-SetupFailureTDD,
   rLSpecificCause
                     RLSpecificCauseList-RL-SetupFailureTDD,
GeneralCauseList-RL-SetupFailureTDD ::= SEQUENCE {
   cause
   iE-Extensions
                             OPTIONAL,
GeneralCauseItem-RL-SetupFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RLSpecificCauseList-RL-SetupFailureTDD ::= SEQUENCE {
   unsuccessful-RL-InformationRespItem-RL-SetupFailureTDD Unsuccessful-RL-InformationRespItem-RL-SetupFailureTDD,
                                                      ProtocolExtensionContainer { { RLSpecificCauseItem-RL-SetupFailureTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
RLSpecificCauseItem-RL-SetupFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
Unsuccessful-RL-InformationRespItem-RL-SetupFailureTDD ::= ProtocolIE-Single-Container { {Unsuccessful-RL-InformationRespItemIE-RL-SetupFailureTDD}
Unsuccessful-RL-InformationRespItemIE-RL-SetupFailureTDD NBAP-PROTOCOL-IES ::= {
         id-Unsuccessful-RL-InformationResp-RL-SetupFailureTDD
                                                                 CRITICALITY ignore
                                                                                       TYPE
                                                                                                         Unsuccessful-RL-InformationResp-
RL-SetupFailureTDD
                     PRESENCE
                                mandatory
Unsuccessful-RL-InformationResp-RL-SetupFailureTDD ::= SEQUENCE {
   rL-ID
                                           RL-ID,
   cause
                                           Cause,
                                           ProtocolExtensionContainer { { Unsuccessful-RL-InformationResp-RL-SetupFailureTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
Unsuccessful-RL-InformationResp-RL-SetupFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    *****************
-- RADIO LINK ADDITION REQUEST FDD
  ************************
RadioLinkAdditionRequestFDD ::= SEQUENCE {
                                               {{RadioLinkAdditionRequestFDD-IEs}},
   protocolIEs
                         ProtocolIE-Container
```

```
ProtocolExtensionContainer {{RadioLinkAdditionRequestFDD-Extensions}}
   protocolExtensions
                                                                                                              OPTIONAL,
RadioLinkAdditionRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
   { ID id-NodeB-CommunicationContextID
                                                      CRITICALITY reject
                                                                                       NodeB-CommunicationContextID
                                                                                                                            PRESENCE
   mandatory } |
     ID id-Compressed-Mode-Deactivation-Flag
                                               CRITICALITY reject
                                                                            TYPE Compressed-Mode-Deactivation-Flag PRESENCE optional }
    { ID id-RL-InformationList-RL-AdditionRqstFDD
                                                          CRITICALITY notify
                                                                                                         RI-InformationList-RI-
                     PRESENCE mandatory },
AdditionRgstFDD
RadioLinkAdditionRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-AdditionRgstFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs-1)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-RL-
AdditionRgstFDD}}
RL-InformationItemIE-RL-AdditionRqstFDD NBAP-PROTOCOL-IES ::= {
         id-RL-InformationItem-RL-AdditionRqstFDD
                                                          CRITICALITY
                                                                                       TYPE
                                                                                                         RL-InformationItem-RL-
                                                                         notify
AdditionRqstFDD
                     PRESENCE
                                mandatory }
RL-InformationItem-RL-AdditionRgstFDD ::= SEQUENCE
   rL-ID
                                           RL-ID,
   c-ID
                                           C-ID,
   frameOffset
                                           FrameOffset,
   chipOffset
                                           ChipOffset,
   diversityControlField
                                           DiversityControlField,
   dl-CodeInformation
                                        FDD-DL-CodeInformation,
   initialDL-TransmissionPower
                                           DL-Power
                                                                         OPTIONAL,
   maximumDL-Power
                                           DL-Power
                                                                         OPTIONAL,
   minimumDL-Power
                                           DL-Power
                                                                         OPTIONAL,
                                           SSDT-Cell-Identity
   sSDT-CellIdentity
                                                                         OPTIONAL,
   transmitDiversityIndicator
                                           TransmitDiversityIndicator
                                                                         OPTIONAL,
                                           iE-Extensions
                                                                                                                       OPTIONAL,
RL-InformationItem-RL-AdditionRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ID id-DLReferencePower CRITICALITY ignore
                                                   EXTENSION DL-Power
                                                                             PRESENCE optional |
     ID id-RL-Specific-DCH-Info
                                    CRITICALITY ignore
                                                          EXTENSION RL-Specific-DCH-Info
                                                                                                          PRESENCE
                                                                                                                    optional }
     ID id-DelayedActivation CRITICALITY reject EXTENSION DelayedActivation PRESENCE optional }
     ID id-Qth-Parameter CRITICALITY ignore
                                               EXTENSION Oth-Parameter
                                                                             PRESENCE optional },
  *****************
-- RADIO LINK ADDITION REQUEST TDD
__ **********************
```

```
RadioLinkAdditionRequestTDD ::= SEQUENCE {
    protocolIEs
                           ProtocolIE-Container
                                                   {{RadioLinkAdditionRequestTDD-IEs}},
    protocolExtensions
                           ProtocolExtensionContainer {{RadioLinkAdditionRequestTDD-Extensions}}
                                                                                                                     OPTIONAL.
RadioLinkAdditionRequestTDD-IES NBAP-PROTOCOL-IES ::= {
    { ID id-NodeB-CommunicationContextID
                                                                   CRITICALITY
                                                                                   reject
                                                                                                                   TYPE NodeB-
CommunicationContextID
                                           PRESENCE
                                                       mandatory
          id-UL-CCTrCH-InformationList-RL-AdditionRgstTDD
                                                                   CRITICALITY
                                                                                                                   TYPE UL-CCTrCH-InformationList-
    { ID
                                                                                   reject
RL-AdditionRqstTDD
                           PRESENCE
                                       optional
   { ID
           id-DL-CCTrCH-InformationList-RL-AdditionRqstTDD
                                                                   CRITICALITY
                                                                                   reject
                                                                                                                   TYPE DL-CCTrCH-InformationList-
RL-AdditionRastTDD
                           PRESENCE
                                       optional
          id-RL-Information-RL-AdditionRqstTDD
                                                                                   reject
                                                                                                                  TYPE RL-Information-RL-
                                                                   CRITICALITY
AdditionRgstTDD
                               PRESENCE
                                           mandatory },
    . . .
RadioLinkAdditionRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
UL-CCTrCH-InformationList-RL-AdditionRgstTDD ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF UL-CCTrCH-InformationItem-RL-AdditionRgstTDD
UL-CCTrCH-InformationItem-RL-AdditionRqstTDD ::= SEQUENCE {
    cCTrCH-ID
    uL-DPCH-Information
                                               UL-DPCH-InformationList-RL-AdditionRgstTDD
                                                                                               OPTIONAL, -- Applicable to 3.84cps TDD only
                                               ProtocolExtensionContainer { { UL-CCTrCH-InformationItem-RL-AdditionRqstTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
UL-CCTrCH-InformationItem-RL-AdditionRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
          id-UL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD
                                                                                                                     EXTENSION UL-DPCH-
                                               PRESENCE optional \}, -- Applicable to 1.28cps TDD only
InformationItem-LCR-RL-AdditionRgstTDD
UL-DPCH-InformationList-RL-AdditionRgstTDD ::= ProtocolIE-Single-Container {{ UL-DPCH-InformationItemIE-RL-AdditionRgstTDD }}
UL-DPCH-InformationItemIE-RL-AdditionRgstTDD NBAP-PROTOCOL-IES ::= {
          id-UL-DPCH-InformationItem-RL-AdditionRgstTDD
                                                                   CRITICALITY
                                                                                   notify
                                                                                                                  TYPE UL-DPCH-InformationItem-
RL-AdditionRqstTDD
                           PRESENCE optional -- For 3.84Mcps TDD only
UL-DPCH-InformationItem-RL-AdditionRgstTDD ::= SEQUENCE {
    repetitionPeriod
                                           RepetitionPeriod,
    repetitionLength
                                           RepetitionLength,
    tdd-DPCHOffset
                                           TDD-DPCHOffset,
    uL-Timeslot-Information
                                       UL-Timeslot-Information,
                                               ProtocolExtensionContainer { { UL-DPCH-InformationItem-RL-AdditionRqstTDD-ExtIEs} }
    iE-Extensions
                                                                                                                                       OPTIONAL,
    . . .
```

```
UL-DPCH-InformationItem-RL-AdditionRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationList-RL-AdditionRgstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF DL-CCTrCH-InformationItem-RL-AdditionRgstTDD
DL-CCTrCH-InformationItem-RL-AdditionRqstTDD ::= SEQUENCE {
   cCTrCH-ID
   dL-DPCH-Information
                                              DL-DPCH-InformationList-RL-AdditionRqstTDD
                                                                                            OPTIONAL.
                                              ProtocolExtensionContainer { { DL-CCTrCH-InformationItem-RL-AdditionRqstTDD-ExtIEs} } OPTIONAL,
   iE-Extensions
DL-CCTrCH-InformationItem-RL-AdditionRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
          id-DL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD
                                                                                                                  EXTENSION DL-DPCH-
InformationItem-LCR-RL-AdditionRgstTDD
                                              PRESENCE
                                                         optional } | -- Applicable to 1.28Mcps TDD only
   { ID id-CCTrCH-Initial-DL-Power-RL-AdditionRgstTDD
                                                         CRITICALITY ignore
                                                                                 EXTENSION DL-Power
                                                                                                                  PRESENCE optional },
DL-DPCH-InformationList-RL-AdditionRqstTDD ::= ProtocolIE-Single-Container {{ DL-DPCH-InformationItemIE-RL-AdditionRqstTDD }}
DL-DPCH-InformationItemIE-RL-AdditionRqstTDD NBAP-PROTOCOL-IES ::= {
         id-DL-DPCH-InformationItem-RL-AdditionRgstTDD
                                                                 CRITICALITY
                                                                                 notify
                                                                                                               TYPE DL-DPCH-InformationItem-
RL-AdditionRgstTDD
                          PRESENCE
                                     mandatory } -- Applicable to 3.84Mcps TDD only
DL-DPCH-InformationItem-RL-AdditionRgstTDD ::= SEQUENCE
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
    tdd-DPCHOffset
                                          TDD-DPCHOffset,
   dL-Timeslot-Information
                                      DL-Timeslot-Information,
   iE-Extensions
                                              OPTIONAL,
    . . .
DL-DPCH-InformationItem-RL-AdditionRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Information-RL-AdditionRgstTDD ::= SEQUENCE {
   rL-ID
                                              RL-ID,
   C-TD
                                              C-ID,
   frameOffset
                                              FrameOffset,
   diversityControlField
                                              DiversityControlField,
   initial-DL-Transmission-Power
                                              DL-Power
                                                                 OPTIONAL,
   maximumDL-Power
                                              DL-Power
                                                                 OPTIONAL,
   minimumDL-Power
                                              DL-Power
                                                                 OPTIONAL,
   dL-TimeSlotISCPInfo
                                              DL-TimeslotISCPInfo OPTIONAL,
                                                                             -- Applicable to 3.84Mcps TDD only
                                              ProtocolExtensionContainer { { RL-information-RL-AdditionRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
    . . .
```

. . .

```
RL-information-RL-AdditionRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
          id-TimeslotISCP-InformationList-LCR-RL-AdditionRqstTDD
                                                                        CRITICALITY
                                                                                        reject
                                                                                                                    EXTENSION
                                                                                                                              DL-
TimeslotISCPInfoLCR
                          PRESENCE
                                     optional } | -- Applicable to 1.28Mcps TDD only
     ID id-RL-Specific-DCH-Info
                                      CRITICALITY ignore
                                                             EXTENSION RL-Specific-DCH-Info
                                                                                                              PRESENCE
                                                                                                                          optional }|
    { ID id-DelayedActivation CRITICALITY reject EXTENSION DelayedActivation PRESENCE optional },
UL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-TimeslotLCR-Information
                                          UL-TimeslotLCR-Information,
   iE-Extensions
                                          ProtocolExtensionContainer { { UL-DPCH-InformationItem-LCR-RL-AdditionRgstTDD-ExtIEs} }
                                                                                                                                  OPTIONAL.
UL-DPCH-InformationItem-LCR-RL-AdditionRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
    dL-TimeslotLCR-Information
                                          DL-TimeslotLCR-Information,
                                          ProtocolExtensionContainer { { DL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                  OPTIONAL,
    . . .
DL-DPCH-InformationItem-LCR-RL-AdditionRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   -- RADIO LINK ADDITION RESPONSE FDD
__ ********************************
RadioLinkAdditionResponseFDD ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                  {{RadioLinkAdditionResponseFDD-IEs}},
                          ProtocolExtensionContainer {{RadioLinkAdditionResponseFDD-Extensions}}
   protocolExtensions
                                                                                                                    OPTIONAL,
RadioLinkAdditionResponseFDD-IEs NBAP-PROTOCOL-IES ::= {
    { ID
          id-CRNC-CommunicationContextID
                                                                 CRITICALITY
                                                                                ignore
                                                                                                                 TYPE CRNC-
CommunicationContextID
                                          PRESENCE
                                                     mandatory
    { ID
           id-RL-InformationResponseList-RL-AdditionRspFDD
                                                                 CRITICALITY
                                                                                ignore
                                                                                                                 TYPE RL-
InformationResponseList-RL-AdditionRspFDD
                                          PRESENCE
                                                     mandatory
    { ID id-CriticalityDiagnostics
                                                                 CRITICALITY
                                                                                ignore
                                                                                                                 TYPE CriticalityDiagnostics
                          PRESENCE
                                      optional
```

```
RadioLinkAdditionResponseFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationResponseList-RL-AdditionRspFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs-1)) OF ProtocolIE-Single-Container {{ RL-InformationResponseItemIE-
RL-AdditionRspFDD }}
RL-InformationResponseItemIE-RL-AdditionRspFDD NBAP-PROTOCOL-IES ::= {
           id-RL-InformationResponseItem-RL-AdditionRspFDD
                                                                  CRITICALITY
                                                                                                                 TYPE RL-
                                                                                  ignore
InformationResponseItem-RL-AdditionRspFDD
                                              PRESENCE
                                                          mandatory}
RL-InformationResponseItem-RL-AdditionRspFDD ::= SEQUENCE {
   rL-ID
                                                  RL-ID,
   rL-Set-ID
                                                   RL-Set-ID,
   received-total-wide-band-power
                                                                          Received-total-wide-band-power-Value,
                                                   DiversityIndication-RL-AdditionRspFDD,
   diversityIndication
    sSDT-SupportIndicator
                                                   SSDT-SupportIndicator,
   iE-Extensions
                                                   ProtocolExtensionContainer { { RL-InformationResponseItem-RL-AdditionRspFDD-ExtIEs} }
   OPTIONAL,
RL-InformationResponseItem-RL-AdditionRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    EXTENSION
                                                                                          DL-PowerBalancing-ActivationIndicator
                                                                                                                                  PRESENCE
optional},
    . . .
DiversityIndication-RL-AdditionRspFDD ::= CHOICE {
    combining
                                                   Combining-RL-AdditionRspFDD,
   non-combining
                                                  Non-Combining-RL-AdditionRspFDD
Combining-RL-AdditionRspFDD ::= SEQUENCE {
    rL-ID
                                                   RL-ID,
   iE-Extensions
                                                  ProtocolExtensionContainer { { CombiningItem-RL-AdditionRspFDD-ExtIEs} } }
                                                                                                                            OPTIONAL,
    . . .
CombiningItem-RL-AdditionRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Non-Combining-RL-AdditionRspFDD ::= SEQUENCE {
   dCH-InformationResponse
                                               DCH-InformationResponse,
   iE-Extensions
                                                   ProtocolExtensionContainer { { Non-CombiningItem-RL-AdditionRspFDD-ExtIEs} }
                                                                                                                                  OPTIONAL,
    . . .
Non-CombiningItem-RL-AdditionRspFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
******************
-- RADIO LINK ADDITION RESPONSE TOD
  RadioLinkAdditionResponseTDD ::= SEQUENCE {
                                                {{RadioLinkAdditionResponseTDD-IEs}},
   protocolIEs
                ProtocolIE-Container
   protocolExtensions
                         ProtocolExtensionContainer {{RadioLinkAdditionResponseTDD-Extensions}}
                                                                                                              OPTIONAL,
   . . .
RadioLinkAdditionResponseTDD-IES NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                           CRITICALITY ignore
                                                                                     TYPE
                                                                                                            CRNC-CommunicationContextID
                  PRESENCE mandatory } |
   { ID
          id-RL-InformationResponse-RL-AdditionRspTDD
                                                           CRITICALITY ignore
                                                                                                            RL-InformationResponse-RL-
                                                                                     TYPE
                             optional }|
AdditionRspTDD
                  PRESENCE
                                            -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
                                                           CRITICALITY ignore
                                                                                     TYPE
                                                                                                            CriticalityDiagnostics
   { ID
         id-CriticalityDiagnostics
              PRESENCE optional
RadioLinkAdditionResponseTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-RL-InformationResponse-LCR-RL-AdditionRspTDD
                                                           CRITICALITY ignore
                                                                                                            RL-InformationResponse-LCR-RL-
                                                                                     EXTENSION
AdditionRspTDD PRESENCE optional }, -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
RL-InformationResponse-RL-AdditionRspTDD ::= SEQUENCE {
                                            RL-ID,
   uL-TimeSlot-ISCP-Info
                                            UL-TimeSlot-ISCP-Info,
   ul-PhysCH-SF-Variation
                                            UL-PhysCH-SF-Variation,
   dCH-Information
                                            DCH-Information-RL-AdditionRspTDD
                                                                                         OPTIONAL,
   dSCH-InformationResponseList
                                            DSCH-InformationResponseList-RL-AdditionRspTDD
                                                                                                            OPTIONAL,
   uSCH-InformationResponseList
                                            USCH-InformationResponseList-RL-AdditionRspTDD
                                                                                                            OPTIONAL,
                                            ProtocolExtensionContainer { { RL-InformationResponse-RL-AdditionRspTDD-ExtIEs} }
   iE-Extensions
                                                                                                                            OPTIONAL,
RL-InformationResponse-RL-AdditionRspTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
DCH-Information-RL-AdditionRspTDD ::= SEQUENCE {
   diversityIndication
                                     DiversityIndication-RL-AdditionRspTDD,
                                 ProtocolExtensionContainer { | DCH-Information-RL-AdditionRspTDD-ExtIEs} } OPTIONAL,
   iE-Extensions
DCH-Information-RL-AdditionRspTDD-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
DiversityIndication-RL-AdditionRspTDD ::= CHOICE
   combining
                                        Combining-RL-AdditionRspTDD,
   non-Combining
                                        Non-Combining-RL-AdditionRspTDD
Combining-RL-AdditionRspTDD ::= SEQUENCE {
   rL-ID
                                        RL-ID,
   iE-Extensions
                                        ProtocolExtensionContainer { { CombiningItem-RL-AdditionRspTDD-ExtIEs} } }
                                                                                                          OPTIONAL,
CombiningItem-RL-AdditionRspTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Non-Combining-RL-AdditionRspTDD ::= SEQUENCE
   dCH-InformationResponse
                                     DCH-InformationResponse,
                                        ProtocolExtensionContainer { { Non-CombiningItem-RL-AdditionRspTDD-ExtIEs} } }
   iE-Extensions
                                                                                                               OPTIONAL.
Non-CombiningItem-RL-AdditionRspTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
DSCH-InformationResponseList-RL-AdditionRspTDD ::= ProtocolIE-Single-Container {{ DSCH-InformationResponseListIEs-RL-AdditionRspTDD }}
DSCH-InformationResponseListIEs-RL-AdditionRspTDD NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
USCH-InformationResponseList-RL-AdditionRspTDD ::= ProtocolIE-Single-Container {{ USCH-InformationResponseListIEs-RL-AdditionRspTDD }}
USCH-InformationResponseListIEs-RL-AdditionRspTDD NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RL-InformationResponse-LCR-RL-AdditionRspTDD ::= SEQUENCE
                                        RL-ID,
   uL-TimeSlot-ISCP-InfoLCR
                                        UL-TimeSlot-ISCP-LCR-Info,
   ul-PhysCH-SF-Variation
                                        UL-PhysCH-SF-Variation,
   dCH-Information
                                        DCH-Information-RL-AdditionRspTDD
                                                                                 OPTIONAL,
   dSCH-InformationResponseList
                                        DSCH-InformationResponseList-RL-AdditionRspTDD
                                                                                                  OPTIONAL,
                                        USCH-InformationResponseList-RL-AdditionRspTDD
   uSCH-InformationResponseList
                                                                                                  OPTIONAL,
   iE-Extensions
                                        OPTIONAL,
RL-InformationResponse-LCR-RL-AdditionRspTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  ******************
```

```
-- RADIO LINK ADDITION FAILURE FDD
  *******************
RadioLinkAdditionFailureFDD ::= SEQUENCE {
                                                   {{RadioLinkAdditionFailureFDD-IEs}},
    protocolIEs
                           ProtocolIE-Container
   protocolExtensions
                           ProtocolExtensionContainer {{RadioLinkAdditionFailureFDD-Extensions}}
                                                                                                                    OPTIONAL,
RadioLinkAdditionFailureFDD-IES NBAP-PROTOCOL-IES ::= {
           id-CRNC-CommunicationContextID
                                                                               TYPE
                                                                                      CRNC-CommunicationContextID
                                                                                                                           PRESENCE mandatory
                                                   CRITICALITY
                                                                   ignore
     ID
           id-CauseLevel-RL-AdditionFailureFDD
                                                   CRITICALITY
                                                                   ignore
                                                                               TYPE
                                                                                      CauseLevel-RL-AdditionFailureFDD
                                                                                                                          PRESENCE mandatory
     ID
           id-CriticalityDiagnostics
                                                                                      CriticalityDiagnostics
                                                                                                                             PRESENCE optional
                                                   CRITICALITY
                                                                   ignore
                                                                              TYPE
RadioLinkAdditionFailureFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-RL-AdditionFailureFDD ::= CHOICE {
    generalCause
                       GeneralCauseList-RL-AdditionFailureFDD,
    rLSpecificCause
                       RLSpecificCauseList-RL-AdditionFailureFDD,
    . . .
GeneralCauseList-RL-AdditionFailureFDD ::= SEQUENCE {
    cause
    iE-Extensions
                                               ProtocolExtensionContainer { GeneralCauseItem-RL-AdditionFailureFDD-ExtIEs} }
                                                                                                                                   OPTIONAL,
    . . .
GeneralCauseItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RLSpecificCauseList-RL-AdditionFailureFDD ::= SEOUENCE {
    unsuccessful-RL-InformationRespList-RL-AdditionFailureFDD
                                                                   Unsuccessful-RL-InformationRespList-RL-AdditionFailureFDD,
    successful-RL-InformationRespList-RL-AdditionFailureFDD
                                                                   Successful-RL-InformationRespList-RL-AdditionFailureFDD OPTIONAL,
    iE-Extensions
                                               ProtocolExtensionContainer { { RLSpecificCauseItem-RL-AdditionFailureFDD-ExtIEs} }
                                                                                                                                      OPTIONAL,
RLSpecificCauseItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Unsuccessful-RL-InformationRespList-RL-AdditionFailureFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs-1)) OF ProtocolIE-Single-Container {{ Unsuccessful-RL-
InformationRespItemIE-RL-AdditionFailureFDD }}
Unsuccessful-RL-InformationRespItemIE-RL-AdditionFailureFDD NBAP-PROTOCOL-IES ::= {
```

425

```
id-Unsuccessful-RL-InformationRespItem-RL-AdditionFailureFDD
                                                                      CRITICALITY
                                                                                                        TYPE Unsuccessful-RL-
                                                                                     ignore
InformationRespItem-RL-AdditionFailureFDD PRESENCE
Unsuccessful-RL-InformationRespItem-RL-AdditionFailureFDD ::= SEQUENCE {
                                          RL-ID,
   cause
                                          Cause,
   iE-Extensions
                                          OPTIONAL,
   . . .
Unsuccessful-RL-InformationRespItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Successful-RL-InformationRespList-RL-AdditionFailureFDD ::= SEOUENCE (SIZE (1..maxNrOfRLs-2)) OF ProtocolIE-Single-Container {{ Successful-RL-
InformationRespItemIE-RL-AdditionFailureFDD }}
Successful-RL-InformationRespItemIE-RL-AdditionFailureFDD NBAP-PROTOCOL-IES ::= {
          id-Successful-RL-InformationRespItem-RL-AdditionFailureFDD
                                                                   CRITICALITY
                                                                                 ignore
                                                                                                        TYPE Successful-RL-
InformationRespItem-RL-AdditionFailureFDD
                                          PRESENCE
                                                     mandatory}
Successful-RL-InformationRespItem-RL-AdditionFailureFDD ::= SEQUENCE {
   rL-ID
                                          RL-ID,
   rL-Set-ID
                                          RL-Set-ID,
   received-total-wide-band-power
                                          Received-total-wide-band-power-Value,
   diversityIndication
                                          DiversityIndication-RL-AdditionFailureFDD,
   sSDT-SupportIndicator
                                          SSDT-SupportIndicator,
   iE-Extensions
                                          ProtocolExtensionContainer { { Successful-RL-InformationRespItem-RL-AdditionFailureFDD-ExtIEs} }
   OPTIONAL,
   . . .
Successful-RL-InformationRespItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
   EXTENSION
                                                                                 DL-PowerBalancing-ActivationIndicator
                                                                                                                     PRESENCE
optional},
DiversityIndication-RL-AdditionFailureFDD ::= CHOICE {
   combining
                               Combining-RL-AdditionFailureFDD,
   non-Combining
                               Non-Combining-RL-AdditionFailureFDD
Combining-RL-AdditionFailureFDD ::= SEQUENCE {
   rI.-ID
   iE-Extensions
                                          OPTIONAL
   . . .
CombiningItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
Non-Combining-RL-AdditionFailureFDD ::= SEQUENCE
   dCH-InformationResponse
                                             DCH-InformationResponse,
   iE-Extensions
                                                 ProtocolExtensionContainer { { Non-CombiningItem-RL-AdditionFailureFDD-ExtIEs} }
   OPTIONAL,
Non-CombiningItem-RL-AdditionFailureFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   ****************
-- RADIO LINK ADDITION FAILURE TDD
__ *********************
RadioLinkAdditionFailureTDD ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                                {{RadioLinkAdditionFailureTDD-IEs}},
                         ProtocolExtensionContainer {{RadioLinkAdditionFailureTDD-Extensions}}
   protocolExtensions
                                                                                                               OPTIONAL,
RadioLinkAdditionFailureTDD-IEs NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                    CRITICALITY
                                                                   ignore
                                                                               TYPE
                                                                                      CRNC-CommunicationContextID
   PRESENCE mandatory } |
          id-CauseLevel-RL-AdditionFailureTDD
    { ID
                                                    CRITICALITY
                                                                   ignore
                                                                               TYPE
                                                                                      CauseLevel-RL-AdditionFailureTDD
              mandatory }
    PRESENCE
    { ID
         id-CriticalityDiagnostics
                                                    CRITICALITY
                                                                   ignore
                                                                               TYPE
                                                                                      CriticalityDiagnostics
   PRESENCE optional },
    . . .
RadioLinkAdditionFailureTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-RL-AdditionFailureTDD ::= CHOICE {
                      GeneralCauseList-RL-AdditionFailureTDD,
   generalCause
                      RLSpecificCauseList-RL-AdditionFailureTDD,
   rLSpecificCause
GeneralCauseList-RL-AdditionFailureTDD ::= SEQUENCE {
   iE-Extensions
                              ProtocolExtensionContainer { { GeneralCauseItem-RL-AdditionFailureTDD-ExtIEs} }
                                                                                                               OPTIONAL,
GeneralCauseItem-RL-AdditionFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
RLSpecificCauseList-RL-AdditionFailureTDD ::= SEQUENCE {
    unsuccessful-RL-InformationRespItem-RL-AdditionFailureTDD
                                                             Unsuccessful-RL-InformationRespItem-RL-AdditionFailureTDD,
   iE-Extensions
                                                             ProtocolExtensionContainer { { RLSpecificCauseItem-RL-AdditionFailureTDD-ExtIEs} }
       OPTIONAL.
    . . .
RLSpecificCauseItem-RL-AdditionFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Unsuccessful-RL-InformationRespItem-RL-AdditionFailureTDD ::= ProtocolIE-Single-Container { {Unsuccessful-RL-InformationRespItemIE-RL-
AdditionFailureTDD} }
Unsuccessful-RL-InformationRespItemIE-RL-AdditionFailureTDD NBAP-PROTOCOL-IES ::= {
    { ID id-Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD CRITICALITY ignore TYPE Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD
    PRESENCE mandatory }
Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD ::= SEQUENCE {
   rL-ID
                                         RL-ID,
   cause
                                          Cause,
   iE-Extensions
                                          ProtocolExtensionContainer { { Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD-ExtIEs} }
   OPTIONAL,
Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- RADIO LINK RECONFIGURATION PREPARE FDD
  ····
RadioLinkReconfigurationPrepareFDD ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                  {{RadioLinkReconfigurationPrepareFDD-IEs}},
                          ProtocolExtensionContainer {{RadioLinkReconfigurationPrepareFDD-Extensions}}
   protocolExtensions
                                                                                                                 OPTIONAL,
RadioLinkReconfigurationPrepareFDD-IES NBAP-PROTOCOL-IES ::= {
           id-NodeB-CommunicationContextID
                                                         CRITICALITY
                                                                        reject
                                                                                        TYPE
                                                                                                              NodeB-CommunicationContextID
           PRESENCE
                      mandatory
           id-UL-DPCH-Information-RL-ReconfPrepFDD
                                                         CRITICALITY
                                                                        reject
                                                                                        TYPE
                                                                                                              UL-DPCH-Information-RL-
    { ID
ReconfPrepFDD
                   PRESENCE
                              optional
    { ID
           id-DL-DPCH-Information-RL-ReconfPrepFDD
                                                         CRITICALITY
                                                                        reject
                                                                                        TYPE
                                                                                                              DL-DPCH-Information-RL-
ReconfPrepFDD
                   PRESENCE
                              optional
     ID
           id-FDD-DCHs-to-Modify
                                              CRITICALITY
                                                             reject
                                                                            TYPE
                                                                                    FDD-DCHs-to-Modify
                                                                                                                       PRESENCE optional
     ID
           id-DCHs-to-Add-FDD
                                                                            TYPE
                                                                                    DCH-FDD-Information
                                                                                                                       PRESENCE optional }
                                              CRITICALITY
                                                             reject
```

```
{ ID
            id-DCH-DeleteList-RL-ReconfPrepFDD
                                                             CRITICALITY
                                                                             reject
                                                                                             TYPE
                                                                                                                      DCH-DeleteList-RL-ReconfPrepFDD
                PRESENCE
                            optional
    { ID
            id-DSCH-ModifyList-RL-ReconfPrepFDD
                                                             CRITICALITY
                                                                             reject.
                                                                                             TYPE
                                                                                                                      DSCH-ModifyList-RL-ReconfPrepFDD
                PRESENCE
                            optional
     ID
            id-DSCHs-to-Add-FDD
                                            CRITICALITY
                                                             reject.
                                                                             TYPE
                                                                                     DSCH-FDD-Information
                                                                                                                                 PRESENCE optional }
            id-DSCH-DeleteList-RL-ReconfPrepFDD
    { ID
                                                             CRITTCALITY
                                                                             reject
                                                                                             TYPE
                                                                                                                      DSCH-DeleteList-RL-ReconfPrepFDD
                PRESENCE
                           optional
    { ID
           id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD
                                                                     CRITICALITY
                                                                                     reject
                                                                                                 TYPE
                                                                                                                      TFCI2-BearerSpecificInformation-
RL-ReconfPrepFDD
    PRESENCE optional }
           id-RL-InformationList-RL-ReconfPrepFDD
                                                                                                                     RL-InformationList-RL-
                                                             CRITICALITY
                                                                             reject
                                                                                             TYPE
ReconfPrepFDD
                        PRESENCE
                                    optional
    { ID id-Transmission-Gap-Pattern-Sequence-Information
                                                            CRITICALITY
                                                                             reject
                                                                                             TYPE Transmission-Gap-Pattern-Sequence-Information
PRESENCE optional },
RadioLinkReconfigurationPrepareFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
      ID id-DSCH-FDD-Common-Information
                                                                                                                                    PRESENCE optional
                                                         CRITICALITY ignore EXTENSION DSCH-FDD-Common-Information
      ID id-SignallingBearerRequestIndicator
                                                CRITICALITY reject EXTENSION
                                                                                 SignallingBearerRequestIndicator
                                                                                                                                  PRESENCE optional } |
           id-HSDSCH-Information-to-Modify
                                                     CRITICALITY reject
                                                                             EXTENSION HSDSCH-Information-to-Modify
                                                                                                                              PRESENCE optional
           id-HSDSCH-FDD-Information-to-Add
                                                                                                                              PRESENCE optional
      ID
                                                     CRITICALITY reject
                                                                             EXTENSION HSDSCH-FDD-Information
                                                                                                                              PRESENCE optional
      TD
           id-HSDSCH-FDD-Information-to-Delete
                                                     CRITICALITY reject
                                                                             EXTENSION HSDSCH-DeleteList-RL-ReconfPrepFDD
            id-HSDSCH-RNTI
                                                     CRITICALITY reject
                                                                             EXTENSION HSDSCH-RNTI
                                                                                                                               PRESENCE optional } |
     ID
           id-HSPDSCH-RL-ID
                                                                             EXTENSION RL-ID
                                                                                                                              PRESENCE optional },
                                                     CRITICALITY reject
UL-DPCH-Information-RL-ReconfPrepFDD ::= SEQUENCE
    ul-ScramblingCode
                                                                                         OPTIONAL,
                                                     UL-ScramblingCode
    ul-SIR-Target
                                                     UL-SIR
                                                                                         OPTIONAL,
    minUL-ChannelisationCodeLength
                                                     MinUL-ChannelisationCodeLength
                                                                                         OPTIONAL,
    maxNrOfUL-DPDCHs
                                                     MaxNrOfUL-DPDCHs
                                                                                         OPTIONAL,
    -- This IE shall be present if minUL-ChannelisationCodeLength Ie is set to 4
    ul-PunctureLimit
                                                     PunctureLimit
                                                                                         OPTIONAL,
    t.FCS
                                                     TFCS
                                                                 OPTIONAL,
    ul-DPCCH-SlotFormat
                                                     UL-DPCCH-SlotFormat
                                                                                         OPTIONAL,
    diversityMode
                                                     DiversityMode
                                                                                         OPTIONAL,
    sSDT-CellIDLength
                                                     SSDT-CellID-Length
                                                                                         OPTIONAL,
    s-FieldLength
                                                     S-FieldLength
                                                                                         OPTIONAL,
    iE-Extensions
                                                     ProtocolExtensionContainer { { UL-DPCH-Information-RL-ReconfPrepFDD-ExtIEs} }
                                                                                                                                       OPTIONAL,
UL-DPCH-Information-RL-ReconfPrepFDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-Information-RL-ReconfPrepFDD ::= SEQUENCE {
    tFCS
                                                                                         OPTIONAL,
    dl-DPCH-SlotFormat
                                                     DL-DPCH-SlotFormat
                                                                                         OPTIONAL,
    tFCI-SignallingMode
                                                     TFCI-SignallingMode
                                                                                         OPTIONAL,
```

```
tFCI-Presence
                                                 TFCI-Presence
                                                                                  OPTIONAL,
   -- This IE shall be present if the DL DPCH Slot Format IE is set to any of the values from 12 to 16
   multiplexingPosition
                                                 MultiplexingPosition
                                                                                  OPTIONAL.
   pDSCH-CodeMapping
                                                 PDSCH-CodeMapping
                                                                                  OPTIONAL.
   pDSCH-RL-ID
                                                 RL-ID
                                                                                  OPTIONAL.
   limitedPowerIncrease
                                                LimitedPowerIncrease
                                                                                  OPTIONAL,
   iE-Extensions
                                                 OPTIONAL,
DL-DPCH-Information-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-DeleteList-RL-ReconfPrepFDD ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-DeleteItem-RL-ReconfPrepFDD
DCH-DeleteItem-RL-ReconfPrepFDD ::= SEQUENCE {
   dCH-ID
                                                 DCH-ID,
   iE-Extensions
                                                 DCH-DeleteItem-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
DSCH-ModifyList-RL-ReconfPrepFDD ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF ProtocolIE-Single-Container {{DSCH-ModifyItemIE-RL-ReconfPrepFDD }}
DSCH-ModifyItemIE-RL-ReconfPrepFDD NBAP-PROTOCOL-IES ::= {
         id-DSCH-ModifyItem-RL-ReconfPrepFDD
                                                 CRITICALITY reject
                                                                       TYPE
                                                                               DSCH-ModifyItem-RL-ReconfPrepFDD PRESENCE mandatory}
DSCH-ModifyItem-RL-ReconfPrepFDD ::= SEQUENCE {
   dscH-TD
                                                 DSCH-ID,
   dl-TransportFormatSet
                                                 TransportFormatSet
                                                                           OPTIONAL,
   allocationRetentionPriority
                                                 AllocationRetentionPriority OPTIONAL,
   frameHandlingPriority
                                                 FrameHandlingPriority
                                                                           OPTIONAL,
   toAWS
                                                 ToAWS
                                                                           OPTIONAL,
                                                 ToAWE
   toAWE
                                                                           OPTIONAL,
   transportBearerRequestIndicator
                                                 TransportBearerRequestIndicator,
                                                 ProtocolExtensionContainer { { DSCH-ModifyItem-RL-ReconfPrepFDD-ExtIEs} } 
   iE-Extensions
                                                                                                                          OPTIONAL,
   . . .
DSCH-ModifyItem-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
                                             CRITICALITY ignore
     ID
          id-bindingID
                                                                   EXTENSION
                                                                              BindingID
                                                                                                            PRESENCE
                                                                                                                       optional }|
    { ID
          id-transportlayeraddress
                                             CRITICALITY ignore
                                                                   EXTENSION
                                                                              TransportLayerAddress
                                                                                                                          optional },
DSCH-DeleteList-RL-ReconfPrepFDD ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF ProtocolIE-Single-Container {{DSCH-DeleteItemIE-RL-ReconfPrepFDD }}
DSCH-DeleteItemIE-RL-ReconfPrepFDD NBAP-PROTOCOL-IES ::= {
          id-DSCH-DeleteItem-RL-ReconfPrepFDD
                                                 CRITICALITY reject
                                                                       TYPE
                                                                               DSCH-DeleteItem-RL-ReconfPrepFDD PRESENCE mandatory}
```

```
DSCH-DeleteItem-RL-ReconfPrepFDD ::= SEQUENCE {
   dscH-ID
                                                  DSCH-ID.
   iE-Extensions
                                                  ProtocolExtensionContainer { { DSCH-DeleteItem-RL-ReconfPrepFDD-ExtIEs} } 
                                                                                                                              OPTIONAL.
DSCH-DeleteItem-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ::= CHOICE {
   addOrModify
                          AddOrModify-TFCI2-RL-ReconfPrepFDD,
   delete
                          NULL
AddOrModify-TFCI2-RL-ReconfPrepFDD ::= SEQUENCE {
    toAWS
                                      ToAWS,
   t.oAWE
                                      ToAWE,
   iE-Extensions
                                      ProtocolExtensionContainer { { AddOrModify-TFCI2-RL-ReconfPrepFDD-ExtIEs} }
    . . .
AddOrModify-TFCI2-RL-ReconfPrepFDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
           id-TFCI2BearerRequestIndicator
                                              CRITICALITY
                                                              reject
                                                                              EXTENSION TFCI2BearerRequestIndicator
                                                                                                                            PRESENCE optional },
    . . .
RL-InformationList-RL-ReconfPrepFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-RL-ReconfPrepFDD }}
RL-InformationItemIE-RL-ReconfPrepFDD NBAP-PROTOCOL-IES ::= {
           id-RL-InformationItem-RL-ReconfPrepFDD
                                                          CRITICALITY
                                                                          reject
                                                                                         TYPE
                                                                                                                RL-InformationItem-RL-
ReconfPrepFDD
                   PRESENCE
                              mandatory}
RL-InformationItem-RL-ReconfPrepFDD ::= SEQUENCE {
   rL-ID
                                                  RL-ID,
   dl-CodeInformation
                                              FDD-DL-CodeInformation
                                                                          OPTIONAL,
   maxDL-Power
                                                  DL-Power
                                                                                             OPTIONAL,
   minDL-Power
                                                  DL-Power
                                                                                             OPTIONAL,
   sSDT-Indication
                                                  SSDT-Indication
                                                                                             OPTIONAL,
                                                  SSDT-Cell-Identity
    sSDT-Cell-Identity
                                                                                             OPTIONAL,
    -- The IE shall be present if the SSDT Indication IE is set to "SSDT Active in the UE"
                                                  TransmitDiversitvIndicator
    transmitDiversitvIndicator
    -- This IE shall be present if Diversity Mode IE is present in UL DPCH Information IE and it is not set to "none"
   iE-Extensions
                                                  OPTIONAL,
RL-InformationItem-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-SSDT-CellIDforEDSCHPC CRITICALITY ignore EXTENSION SSDT-Cell-Identity
                                                                                     PRESENCE conditional }
    -- This IE shall be present if Enhanced DSCH PC IE is present in the DSCH Common Information IE.
   { ID id-DLReferencePower
                                                                                                                 } |
                                  CRITICALITY ignore EXTENSION DL-Power
                                                                                         PRESENCE optional
```

```
EXTENSION RL-Specific-DCH-Info
                                                                                                          PRESENCE optional }
     ID id-RL-Specific-DCH-Info
                                    CRITICALITY ignore
     ID id-DL-DPCH-TimingAdjustment CRITICALITY reject EXTENSION DL-DPCH-TimingAdjustment PRESENCE optional }
     ID id-Oth-Parameter CRITICALITY ignore EXTENSION Qth-Parameter
                                                                            PRESENCE optional }.
HSDSCH-DeleteList-RL-ReconfPrepFDD ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-DeleteItem-RL-ReconfPrepFDD
HSDSCH-DeleteItem-RL-ReconfPrepFDD ::= SEQUENCE {
                                               HSDSCH-MACdFlow-ID,
   hsDSCH-MACdFlow-ID
   iE-Extensions
                                               OPTIONAL,
   . . .
HSDSCH-DeleteItem-RL-ReconfPrepFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    -- RADIO LINK RECONFIGURATION PREPARE TDD
  *****************
RadioLinkReconfigurationPrepareTDD ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                               {{RadioLinkReconfigurationPrepareTDD-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer {{RadioLinkReconfigurationPrepareTDD-Extensions}}
                                                                                                            OPTIONAL,
RadioLinkReconfigurationPrepareTDD-IES NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
                                                              CRITICALITY
                                                                                                         NodeB-CommunicationContextID
                                                                            reject
                                                                                       TYPE
                  PRESENCE mandatory } |
          id-UL-CCTrCH-InformationAddList-RL-ReconfPrepTDD
                                                                                                          TYPE UL-CCTrCH-
                                                                 CRITICALITY
    { ID
                                                                                reject
InformationAddList-RL-ReconfPrepTDD
                                        PRESENCE
   { ID id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                         TYPE UL-CCTrCH-
InformationModifyList-RL-ReconfPrepTDD
                                           PRESENCE
                                                                    } |
    { ID id-UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                         TYPE UL-CCTrCH-
InformationDeleteList-RL-ReconfPrepTDD
                                           PRESENCE
                                                      optional
                                                                    } |
         id-DL-CCTrCH-InformationAddList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                         TYPE DL-CCTrCH-
InformationAddList-RL-ReconfPrepTDD
                                        PRESENCE
                                                  optional
          id-DL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                         TYPE DL-CCTrCH-
InformationModifyList-RL-ReconfPrepTDD
                                           PRESENCE
                                                                   } |
          id-DL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                         TYPE DL-CCTrCH-
InformationDeleteList-RL-ReconfPrepTDD
                                           PRESENCE
                                                      optional
   { ID
          id-TDD-DCHs-to-Modify
                                                   CRITICALITY
                                                                 reject
                                                                            TYPE
                                                                                    TDD-DCHs-to-Modify
                                                                                                                       PRESENCE optional
       } |
   { ID
          id-DCHs-to-Add-TDD
                                                   CRITICALITY
                                                                 reject
                                                                            TYPE
                                                                                    DCH-TDD-Information
                                                                                                                       PRESENCE optional
      }
          id-DCH-DeleteList-RL-ReconfPrepTDD
                                                              CRITICALITY
                                                                            reject
                                                                                       TYPE
                                                                                                         DCH-DeleteList-RL-ReconfPrepTDD
                               optional
                     PRESENCE
   { ID
          id-DSCH-Information-ModifyList-RL-ReconfPrepTDD
                                                              CRITICALITY
                                                                            reject
                                                                                       TYPE
                                                                                                         DSCH-Information-ModifyList-RL-
ReconfPrepTDD
                  PRESENCE
                            optional
```

```
id-DSCHs-to-Add-TDD
                                                                        DSCH-TDD-Information
    { ID
                                      CRITICALITY
                                                     reject
                                                                                                                    PRESENCE
                                                                                                                               optional
     ID
           id-DSCH-Information-DeleteList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject.
                                                                                            TYPE
                                                                                                               DSCH-Information-DeleteList-RL-
ReconfPrepTDD
                   PRESENCE
                              optional
    { ID
           id-USCH-Information-ModifyList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject.
                                                                                            TYPE
                                                                                                               USCH-Information-ModifyList-RL-
                              optional
ReconfPrepTDD
                   PRESENCE
                                                                            USCH-Information
    { ID
           id-USCH-Information-Add
                                          CRITICALITY
                                                         reject
                                                                     TYPE
                                                                                                                    PRESENCE
                                                                                                                               optional
     ID
           id-USCH-Information-DeleteList-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                            TYPE
                                                                                                              USCH-Information-DeleteList-RL-
                              optional
ReconfPrepTDD
                   PRESENCE
    { ID
           id-RL-Information-RL-ReconfPrepTDD
                                                                 CRITICALITY
                                                                                            TYPE
                                                                                                              RL-Information-RL-ReconfPrepTDD
                                                                                reject
                       PRESENCE
                                  optional
                                                 },
    . . .
RadioLinkReconfigurationPrepareTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
     ID id-SignallingBearerRequestIndicator
                                             CRITICALITY reject EXTENSION
                                                                            SignallingBearerRequestIndicator
                                                                                                                          PRESENCE optional } |
           id-HSDSCH-Information-to-Modify
                                                  CRITICALITY reject
                                                                         EXTENSION HSDSCH-Information-to-Modify
                                                                                                                       PRESENCE optional
           id-HSDSCH-TDD-Information-to-Add
                                                                         EXTENSION HSDSCH-TDD-Information
                                                                                                                       PRESENCE optional
                                                  CRITICALITY reject
                                                                                                                       PRESENCE optional
     TD
           id-HSDSCH-TDD-Information-to-Delete
                                                 CRITICALITY reject
                                                                         EXTENSION HSDSCH-DeleteList-RL-ReconfPrepTDD
     TD
           id-HSDSCH-RNTI
                                                 CRITICALITY reject
                                                                        EXTENSION HSDSCH-RNTI
                                                                                                                       PRESENCE optional
                                                                                                                       PRESENCE optional
     ID
           id-HSPDSCH-RL-ID
                                                 CRITICALITY reject
                                                                        EXTENSION RL-ID
                                                  CRITICALITY ignore
                                                                                                                       PRESENCE optional },
     ID
           id-PDSCH-RL-ID
                                                                        EXTENSION RL-ID
    . . .
UL-CCTrCH-InformationAddList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF UL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD
UL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD ::= SEQUENCE {
                                              CCTrCH-ID,
    cCTrCH-ID
    t.FCS
                                              TFCS,
    tFCI-Coding
                                              TFCI-Coding,
   punctureLimit
                                              PunctureLimit,
   ul-DPCH-InformationList
                                              UL-DPCH-InformationAddList-RL-ReconfPrepTDD OPTIONAL,
                                              ProtocolExtensionContainer { { UL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
UL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
    EXTENSION UL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD
       PRESENCE optional }
                              -- Applicable to 1.28Mcps TDD only
    { ID id-UL-SIRTarget
                              CRITICALITY reject
                                                                    UL-SIR
                                                                                PRESENCE optional
                                                     EXTENSION
    -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD.
    . . .
UL-DPCH-InformationAddList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ UL-DPCH-InformationAddListIEs-RL-ReconfPrepTDD }}
UL-DPCH-InformationAddListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    TYPE UL-DPCH-InformationAddItem-RL-ReconfPrepTDD
                                                                                                                                  PRESENCE
mandatory }
```

```
UL-DPCH-InformationAddItem-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength.
   tdd-DPCHOffset
                                          TDD-DPCHOffset.
   uL-Timeslot-Information
                                          UL-Timeslot-Information.
                                          ProtocolExtensionContainer { { UL-DPCH-InformationAddItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                  OPTIONAL,
UL-DPCH-InformationAddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-Timeslot-InformationLCR
                                          UL-TimeslotLCR-Information,
   iE-Extensions
                                          ProtocolExtensionContainer { { UL-DPCH-LCR-InformationAddItem-RL-ReconfPrepTDD-ExtIEs} }
                                                                                                                                     OPTIONAL,
UL-DPCH-LCR-InformationAddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF UL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD
UL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
   cCTrCH-ID
                                              CCTrCH-ID,
    t.FCS
                                              TFCS
                                                                                                                      OPTIONAL,
   tFCI-Coding
                                              TFCI-Coding
                                                                                                                      OPTIONAL,
   punctureLimit
                                              PunctureLimit
                                                                                                                      OPTIONAL,
   ul-DPCH-InformationAddList
                                              UL-DPCH-InformationModify-AddList-RL-ReconfPrepTDD
                                                                                                                   OPTIONAL,
   ul-DPCH-InformationModifyList
                                              UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                                                                 OPTIONAL,
   ul-DPCH-InformationDeleteList
                                              UL-DPCH-InformationModify-DeleteList-RL-ReconfPrepTDD
                                                                                                                 OPTIONAL,
   iE-Extensions
                                              ProtocolExtensionContainer { { UL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
UL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-UL-DPCH-LCR-InformationModify-AddList
                                                                                      UL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD
                                                   CRITICALITY reject
                                                                          EXTENSION
                          -- Applicable to 1.28Mcps TDD only
    PRESENCE optional } |
    { ID id-UL-SIRTarget
                               CRITICALITY reject
                                                      EXTENSION
                                                                      UL-SIR
                                                                                  PRESENCE optional
    -- Applicable to 1.28Mcps TDD only.
    . . .
UL-DPCH-InformationModify-AddList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ UL-DPCH-InformationModify-AddListIEs-RL-ReconfPrepTDD }}
UL-DPCH-InformationModify-AddListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    TYPE UL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD
       PRESENCE mandatory }
```

```
UL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
   tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-Timeslot-Information
                                      UL-Timeslot-Information,
   iE-Extensions
                                              ProtocolExtensionContainer { { UL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
    . . .
UL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
    tdd-DPCHOffset
                                          TDD-DPCHOffset,
   uL-Timeslot-InformationLCR
                                          UL-TimeslotLCR-Information,
   iE-Extensions
                                              ProtocolExtensionContainer { { UL-DPCH-LCR-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
    . . .
UL-DPCH-LCR-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ UL-DPCH-InformationModifyListIEs-RL-ReconfPrepTDD
UL-DPCH-InformationModify-ModifyListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    TYPE UL-DPCH-InformationModify-ModifyItem-RL-
ReconfPrepTDD
                   PRESENCE mandatory }
UL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod
                                                             OPTIONAL,
                                          RepetitionLength
   repetitionLength
                                                             OPTIONAL,
    tdd-DPCHOffset
                                          TDD-DPCHOffset
                                                             OPTIONAL.
   uL-Timeslot-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                         UL-Timeslot-InformationModify-ModifyList-RL-ReconfPrepTDD
   OPTIONAL,
                                              ProtocolExtensionContainer { { UL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
UL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-UL-TimeslotLCR-Information-RL-ReconfPrepTDD
                                                         CRITICALITY reject
                                                                                EXTENSION
                                                                                           UL-TimeslotLCR-InformationModify-ModifyList-RL-
ReconfPrepTDD
                   PRESENCE optional }, -- Applicable to 1.28Mcps TDD only
```

```
UL-Timeslot-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfULTSs)) OF UL-Timeslot-InformationModify-ModifyItem-RL-
ReconfPrepTDD -- Applicable to 3.84Mcps TDD only
UL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
    timeSlot
                                            TimeSlot,
    midambleShiftAndBurstTvpe
                                            MidambleShiftAndBurstType
                                                                            OPTIONAL.
    tFCI-Presence
                                            TFCI-Presence
                                                                OPTIONAL,
    uL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                        UL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                                                                                   OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
    . . .
UL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
UL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF UL-Code-InformationModify-ModifyItem-RL-
ReconfPrepTDD
UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
                                            DPCH-ID,
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
    OPTIONAL,
    . . .
UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
UL-TimeslotLCR-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfULTSLCRs)) OF UL-Timeslot-LCR-InformationModify-
ModifyItem-RL-ReconfPrepTDD -- Applicable to 1.28Mcps TDD only
UL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
    midambleShiftLCR
                                MidambleShiftLCR
                                                        OPTIONAL,
    tFCI-Presence
                                            TFCI-Presence
                                                                OPTIONAL,
    uL-Code-InformationModify-ModifyList-RL-ReconfPrepTDDLCR
                                                                            UL-Code-InformationModify-ModifyList-RL-ReconfPrepTDDLCR
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
        OPTIONAL,
UL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Code-InformationModify-ModifyList-RL-ReconfPrepTDDLCR ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF UL-Code-InformationModify-ModifyItem-RL-
ReconfPrepTDD
UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDDLCR ::= SEQUENCE
```

```
dPCH-ID
                                            DPCH-ID,
    tdd-ChannelisationCodeLCR
                                            TDD-ChannelisationCodeLCR
                                                                             OPTIONAL.
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDDLCR-ExtIEs} }
   OPTIONAL,
UL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDDLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCH-InformationModify-DeleteList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ UL-DPCH-InformationModify-DeleteListIEs-RL-ReconfPrepTDD
UL-DPCH-InformationModify-DeleteListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    { ID id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD CRITICALITY reject
                                                                                                TYPE UL-DPCH-InformationModify-DeleteListIE-RL-
                   PRESENCE mandatory }
ReconfPrepTDD
UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfDPCHs)) OF UL-DPCH-InformationModify-DeleteItem-RL-
ReconfPrepTDD
UL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
    dPCH-ID
                                                DPCH-ID.
                                                ProtocolExtensionContainer { { UL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
    OPTIONAL,
    . . .
UL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF UL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD
UL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
    cCTrCH-ID
                                                ProtocolExtensionContainer { { UL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD-ExtIEs} }
    iE-Extensions
   OPTIONAL,
    . . .
UL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationAddList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF DL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD
DL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD ::= SEQUENCE {
    cCTrCH-ID
                                                    CCTrCH-ID,
    t.FCS
                                                    TFCS,
    tFCI-Coding
                                                    TFCI-Coding
    punctureLimit
                                                    PunctureLimit,
    cCTrCH-TPCList
                                                    CCTrCH-TPCAddList-RL-ReconfPrepTDD
                                                                                                                     OPTIONAL,
```

```
dl-DPCH-InformationList
                                              DL-DPCH-InformationAddList-RL-ReconfPrepTDD
                                                                                                      OPTIONAL,
   iE-Extensions
                                              ProtocolExtensionContainer { { DL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL.
DL-CCTrCH-InformationAddItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-DL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD CRITICALITY reject
                                                                                                          DL-DPCH-LCR-
InformationAddList-RL-ReconfPrepTDD
                                   PRESENCE optional } -- Applicable to 1.28Mcps TDD only
   { ID id-CCTrCH-Initial-DL-Power-RL-ReconfPrepTDD
                                                     CRITICALITY ignore
                                                                          EXTENSION DL-Power
                                                                                                         PRESENCE optional },
CCTrCH-TPCAddList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF CCTrCH-TPCAddItem-RL-ReconfPrepTDD
                                                                                                         -- Applicable to 3.84Mcps TDD
                                ::= SEOUENCE {
CCTrCH-TPCAddItem-RL-ReconfPrepTDD
   cCTrCH-ID
                                       CCTrCH-ID,
   iE-Extensions
                                       OPTIONAL,
CCTrCH-TPCAddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
DL-DPCH-InformationAddList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ DL-DPCH-InformationAddListIEs-RL-ReconfPrepTDD }}
DL-DPCH-InformationAddListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
   TYPE DL-DPCH-InformationAddItem-RL-ReconfPrepTDD
                                                                                                                         PRESENCE
mandatory }
DL-DPCH-InformationAddItem-RL-ReconfPrepTDD ::= SEQUENCE
   repetitionPeriod
                                       RepetitionPeriod,
   repetitionLength
                                       RepetitionLength,
   tdd-DPCHOffset
                                       TDD-DPCHOffset,
   dL-Timeslot-Information
                                       DL-Timeslot-Information,
   iE-Extensions
                                       ProtocolExtensionContainer { { DL-DPCH-InformationAddItem-RL-ReconfPrepTDD-ExtIEs} }
                                                                                                                      OPTIONAL,
   . . .
DL-DPCH-InformationAddItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD ::= SEQUENCE
   repetitionPeriod
                                       RepetitionPeriod,
   repetitionLength
                                       RepetitionLength,
   tdd-DPCHOffset
                                       TDD-DPCHOffset,
   dL-Timeslot-InformationLCR
                                       DL-TimeslotLCR-Information,
   iE-Extensions
                                       OPTIONAL,
```

```
DL-DPCH-LCR-InformationAddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF DL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD
DL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
   cCTrCH-ID
                                                 CCTrCH-ID,
   tFCS
                                                 TFCS
                                                                                                                     OPTIONAL,
   tFCI-Coding
                                                 TFCI-Coding
                                                                                                                    OPTIONAL,
   punctureLimit
                                                 PunctureLimit
                                                                                                                    OPTIONAL,
   cCTrCH-TPCList
                                                 CCTrCH-TPCModifyList-RL-ReconfPrepTDD
                                                                                                                    OPTIONAL.
   dl-DPCH-InformationAddList
                                                 DL-DPCH-InformationModify-AddList-RL-ReconfPrepTDD
                                                                                                               OPTIONAL,
   dl-DPCH-InformationModifyList
                                                 DL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                                                             OPTIONAL,
   dl-DPCH-InformationDeleteList
                                                 DL-DPCH-InformationModify-DeleteList-RL-ReconfPrepTDD
                                                                                                            OPTIONAL,
                                                 ProtocolExtensionContainer { { DL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
DL-CCTrCH-InformationModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-DL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD CRITICALITY reject
                                                                                      EXTENSION
                                                                                                            DL-DPCH-LCR-InformationModify-
AddList-RL-ReconfPrepTDD
                             PRESENCE optional },
CCTrCH-TPCModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF CCTrCH-TPCModifyItem-RL-ReconfPrepTDD
CCTrCH-TPCModifyItem-RL-ReconfPrepTDD
                                      ::= SEOUENCE {
   cCTrCH-ID
                                         CCTrCH-ID,
                                         iE-Extensions
                                                                                                                       OPTIONAL,
   . . .
CCTrCH-TPCModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-InformationModify-AddList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ DL-DPCH-InformationModify-AddListIEs-RL-ReconfPrepTDD }}
-- Applicable to 3.84Mcps TDD only
DL-DPCH-InformationModify-AddListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    TYPE DL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD
       PRESENCE mandatory }
DL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD ::= SEQUENCE {
   repetitionPeriod
                                         RepetitionPeriod,
   repetitionLength
                                         RepetitionLength,
   tdd-DPCHOffset
                                         TDD-DPCHOffset,
   dL-Timeslot-Information
                                         DL-Timeslot-Information,
   iE-Extensions
                                         ProtocolExtensionContainer { { DL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
```

```
DL-DPCH-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD ::= SEQUENCE {
    repetitionPeriod
                                            RepetitionPeriod,
                                            RepetitionLength,
    repetitionLength
    tdd-DPCHOffset
                                            TDD-DPCHOffset,
    dL-Timeslot-InformationLCR
                                            DL-TimeslotLCR-Information,
    iE-Extensions
                                            ProtocolExtensionContainer { { DL-DPCH-LCR-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL.
    . . .
DL-DPCH-LCR-InformationModify-AddItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-InformationModifyList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ DL-DPCH-InformationModifyListIEs-RL-ReconfPrepTDD
DL-DPCH-InformationModify-ModifyListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
    { ID id-DL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD CRITICALITY reject
                                                                                                TYPE DL-DPCH-InformationModify-ModifyItem-RL-
ReconfPrepTDD
                    PRESENCE mandatory }
DL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
    repetitionPeriod
                                            RepetitionPeriod
                                                                        OPTIONAL,
    repetitionLength
                                            RepetitionLength
                                                                        OPTIONAL,
    tdd-DPCHOffset
                                            TDD-DPCHOffset
                                                                        OPTIONAL,
    dL-Timeslot-InformationAddModify-ModifyList-RL-ReconfPrepTDD
                                                                        DL-Timeslot-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                                                                                         OPTIONAL,
    iE-Extensions
                                                ProtocolExtensionContainer { { DL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
    OPTIONAL,
    . . .
DL-DPCH-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-DL-Timeslot-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD CRITICALITY reject
                                                                                                                       EXTENSION
                                                                                                                                       DL-Timeslot-
LCR-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                        PRESENCE optional },
    . . .
DL-Timeslot-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDLTSs)) OF DL-Timeslot-InformationModify-ModifyItem-RL-
ReconfPrepTDD
DL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD
                                                             ::= SEOUENCE {
                                            TimeSlot,
    timeSlot
    midambleShiftAndBurstType
                                            MidambleShiftAndBurstType
                                                                                OPTIONAL,
    tFCI-Presence
                                            TFCI-Presence
                                                                    OPTIONAL,
    {\tt dL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD}
                                                                        DL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD
                                                                                                                                      OPTIONAL,
```

```
ProtocolExtensionContainer { { DL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
    iE-Extensions
    OPTIONAL.
    . . .
DL-Timeslot-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (0..maxNrOfDPCHs)) OF DL-Code-InformationModify-ModifyItem-RL-
ReconfPrepTDD
DL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD
                                                          ::= SEOUENCE {
    dPCH-ID
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode
                                                                         OPTIONAL.
    iE-Extensions
                                            ProtocolExtensionContainer { { DL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
    OPTIONAL,
    . . .
DL-Code-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Timeslot-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfDLTSLCRs)) OF DL-Timeslot-InformationModify-ModifyLtem-
RL-ReconfPrepTDD
DL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD
                                                                  ::= SEOUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
    midambleShiftLCR
                                MidambleShiftLCR
                                                             OPTIONAL,
                                            TFCI-Presence
    tFCI-Presence
                                                                     OPTIONAL,
    {\tt dL-Code-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD}
                                                                             DL-Code-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD
    OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { DL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
        OPTIONAL,
DL-Timeslot-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF DL-Code-InformationModify-ModifyItem-RL-
ReconfPrepTDD
DL-Code-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD
                                                              ::= SEQUENCE {
    dPCH-ID
                                            DPCH-ID,
                                                                             OPTIONAL,
    tdd-ChannelisationCodeLCR
                                            TDD-ChannelisationCodeLCR
    iE-Extensions
                                            ProtocolExtensionContainer { | DL-Code-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   OPTIONAL,
    . . .
DL-Code-LCR-InformationModify-ModifyItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
```

```
DL-DPCH-InformationModify-DeleteList-RL-ReconfPrepTDD ::= ProtocolIE-Single-Container {{ DL-DPCH-InformationModify-DeleteListIEs-RL-ReconfPrepTDD
}}
DL-DPCH-InformationModify-DeleteListIEs-RL-ReconfPrepTDD NBAP-PROTOCOL-IES ::= {
   { ID id-DL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD CRITICALITY reject
                                                                                        TYPE DL-DPCH-InformationModify-DeleteListIE-RL-
ReconfPrepTDD
                  PRESENCE mandatory }
DL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF DL-DPCH-InformationModify-DeleteItem-RL-
ReconfPrepTDD
DL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
   dPCH-ID
                                            DPCH-ID,
                                            ProtocolExtensionContainer { { DL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
DL-DPCH-InformationModify-DeleteItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF DL-CCTrCH-InformationDeleteLitem-RL-ReconfPrepTDD
DL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
   cCTrCH-ID
   iE-Extensions
                                                OPTIONAL,
DL-CCTrCH-InformationDeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-DeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-DeleteItem-RL-ReconfPrepTDD
DCH-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
   dCH-ID
                                            DCH-ID,
                                            iE-Extensions
                                                                                                                  OPTIONAL,
DCH-DeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DSCH-Information-ModifyList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-Information-ModifyItem-RL-ReconfPrepTDD
DSCH-Information-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
   dSCH-ID
                                            DSCH-ID,
   cCTrCH-ID
                                            CCTrCH-ID
                                                                  OPTIONAL,
   transportFormatSet
                                            TransportFormatSet
                                                                  OPTIONAL,
```

```
allocationRetentionPriority
                                              AllocationRetentionPriority OPTIONAL,
    frameHandlingPriority
                                              FrameHandlingPriority
                                                                     OPTIONAL,
    toAWS
                                              TOAWS
                                                                      OPTIONAL.
    t.oAWE
                                              TOAWE
                                                                      OPTIONAL.
    transportBearerRequestIndicator
                                              TransportBearerRequestIndicator,
   iE-Extensions
                                              ProtocolExtensionContainer { { DSCH-Information-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
DSCH-Information-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
     ID id-bindingID
                                                                                             PRESENCE
                                          CRITICALITY ignore
                                                                  EXTENSION
                                                                             BindingID
                                                                                                                optional }
    ID id-transportlayeraddress
                                          CRITICALITY ignore
                                                                  EXTENSION
                                                                             TransportLayerAddress
                                                                                                                   PRESENCE
                                                                                                                              optional },
    . . .
DSCH-Information-DeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-Information-DeleteItem-RL-ReconfPrepTDD
DSCH-Information-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE
   dSCH-ID
                                              DSCH-ID,
   iE-Extensions
                                              OPTIONAL.
    . . .
DSCH-Information-DeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
USCH-Information-ModifyList-RL-ReconfPrepTDD ::= SEOUENCE (SIZE (1..maxNrOfUSCHs)) OF USCH-Information-ModifyItem-RL-ReconfPrepTDD
USCH-Information-ModifyItem-RL-ReconfPrepTDD ::= SEQUENCE {
   uSCH-ID
                                              USCH-ID,
    transportFormatSet
                                              TransportFormatSet
                                                                      OPTIONAL,
   allocationRetentionPriority
                                              AllocationRetentionPriority OPTIONAL,
                                              CCTrCH-ID
                                                                      OPTIONAL,
    cCTrCH-ID
    transportBearerRequestIndicator
                                              TransportBearerRequestIndicator,
                                              ProtocolExtensionContainer { { USCH-Information-ModifyItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                    OPTIONAL,
USCH-Information-ModifyItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
     ID id-bindingID
                                          CRITICALITY ignore
                                                                  EXTENSION
                                                                             BindingID
                                                                                             PRESENCE
                                                                                                                optional }
    { ID id-transportlayeraddress
                                          CRITICALITY ignore
                                                                  EXTENSION
                                                                             TransportLayerAddress
                                                                                                                   PRESENCE
                                                                                                                              optional },
    . . .
USCH-Information-DeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfUSCHs)) OF USCH-Information-DeleteItem-RL-ReconfPrepTDD
USCH-Information-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
   11SCH-TD
                                              USCH-ID,
                                              ProtocolExtensionContainer { { USCH-Information-DeleteItem-RL-ReconfPrepTDD-ExtIEs} }
   iE-Extensions
                                                                                                                                    OPTIONAL,
```

```
USCH-Information-DeleteItem-RL-ReconfPrepTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
RL-Information-RL-ReconfPrepTDD ::= SEQUENCE {
                                       RL-ID,
   maxDL-Power
                                       DL-Power
                                                       OPTIONAL,
   minDL-Power
                                       DL-Power
                                                       OPTIONAL,
   iE-Extensions
                                       OPTIONAL,
RL-Information-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    ID id-InitDL-Power
                         CRITICALITY ignore
                                             EXTENSION DL-Power
                                                                 PRESENCE optional
   { ID id-RL-Specific-DCH-Info
                                CRITICALITY ignore
                                                    EXTENSION RL-Specific-DCH-Info
                                                                                               PRESENCE
                                                                                                        optional },
HSDSCH-DeleteList-RL-ReconfPrepTDD ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-DeleteItem-RL-ReconfPrepTDD
HSDSCH-DeleteItem-RL-ReconfPrepTDD ::= SEQUENCE {
   hsDSCH-MACdFlow-ID
                                          HSDSCH-MACdFlow-ID,
                                          iE-Extensions
                                                                                                          OPTIONAL,
   . . .
HSDSCH-DeleteItem-RL-ReconfPrepTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- RADIO LINK RECONFIGURATION READY
  RadioLinkReconfigurationReady ::= SEQUENCE {
                                          {{RadioLinkReconfigurationReady-IEs}},
   protocolIEs
                      ProtocolIE-Container
                      ProtocolExtensionContainer {{RadioLinkReconfigurationReady-Extensions}}
   protocolExtensions
                                                                                                 OPTIONAL,
   . . .
RadioLinkReconfigurationReady-IEs NBAP-PROTOCOL-IES ::= {
   { ID id-CRNC-CommunicationContextID
                                                    CRITICALITY
                                                                                               CRNC-CommunicationContextID
                                                                 ignore
                                                                           TYPE
                PRESENCE mandatory }
   { ID
         id-RL-InformationResponseList-RL-ReconfReady
                                                    CRITICALITY
                                                                 ignore
                                                                           TYPE
                                                                                               RL-InformationResponseList-RL-
ReconfReady
            PRESENCE
                     optional
   { ID
       id-CriticalityDiagnostics
                                                    CRITICALITY
                                                                 ignore
                                                                           TYPE
                                                                                               CriticalityDiagnostics
             PRESENCE optional
RadioLinkReconfigurationReady-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
```

```
RL-InformationResponseList-RL-ReconfReady
                                        ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationResponseItemIE-RL-
ReconfReady } }
RL-InformationResponseItemIE-RL-ReconfReady NBAP-PROTOCOL-IES ::= {
         id-RL-InformationResponseItem-RL-ReconfReady
                                                            CRITICALITY
                                                                          ignore
                                                                                                      TYPE RL-
InformationResponseItem-RL-ReconfReady
                                       PRESENCE
                                                 mandatory }
RL-InformationResponseItem-RL-ReconfReady ::= SEQUENCE {
   dCH-InformationResponseList-RL-ReconfReady
                                              DCH-InformationResponseList-RL-ReconfReady OPTIONAL,
   dSCH-InformationResponseList-RL-ReconfReady
                                              DSCH-InformationResponseList-RL-ReconfReady OPTIONAL,
   uSCH-InformationResponseList-RL-ReconfReady
                                              USCH-InformationResponseList-RL-ReconfReady OPTIONAL, -- TDD only
   tFCI2-BearerInformationResponse
                                              TFCI2-BearerInformationResponse
                                                                              OPTIONAL,
   -- FDD only. There shall be only one TFCI2 bearer per Node B Communication Context.
   iE-Extensions
                                              OPTIONAL,
RL-InformationResponseItem-RL-ReconfReady-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
                                                                EXTENSION
     ID id-DL-PowerBalancing-UpdatedIndicator CRITICALITY ignore
                                                                              DL-PowerBalancing-UpdatedIndicator
                                                                                                                 PRESENCE optional |
     ID id-HSDSCH-FDD-Information-Response
                                              CRITICALITY ignore
                                                                   EXTENSION HSDSCH-FDD-Information-Response
                                                                                                           PRESENCE optional } |
     ID id-HSDSCH-TDD-Information-Response
                                              CRITICALITY ignore
                                                                   EXTENSION HSDSCH-TDD-Information-Response
                                                                                                           PRESENCE optional },
DCH-InformationResponseList-RL-ReconfReady: = ProtocolIE-Single-Container {{ DCH-InformationResponseListIEs-RL-ReconfReady }}
DCH-InformationResponseListIEs-RL-ReconfReady NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
DSCH-InformationResponseList-RL-ReconfReady::= ProtocolIE-Single-Container {{ DSCH-InformationResponseListIEs-RL-ReconfReady }}
DSCH-InformationResponseListIEs-RL-ReconfReady NBAP-PROTOCOL-IES ::= {
    ID id-DSCH-InformationResponse CRITICALITY ignore TYPE DSCH-InformationResponse
                                                                                PRESENCE mandatory }
USCH-InformationResponseList-RL-ReconfReady: = ProtocolIE-Single-Container {{ USCH-InformationResponseListIEs-RL-ReconfReady }}
USCH-InformationResponseListIEs-RL-ReconfReady NBAP-PROTOCOL-IES ::= {
     ID id-USCH-InformationResponse CRITICALITY ignore TYPE USCH-InformationResponse
                                                                                     PRESENCE mandatory }
     -- RADIO LINK RECONFIGURATION FAILURE
```

```
RadioLinkReconfigurationFailure ::= SEQUENCE {
    protocolIEs
                           ProtocolIE-Container
                                                    {{RadioLinkReconfigurationFailure-IEs}},
   protocolExtensions
                            ProtocolExtensionContainer {{RadioLinkReconfigurationFailure-Extensions}}
                                                                                                                       OPTIONAL.
RadioLinkReconfigurationFailure-IEs NBAP-PROTOCOL-IES ::= {
           id-CRNC-CommunicationContextID
                                                                CRITICALITY
                                                                                ignore
                                                                                            TYPE
                                                                                                                    CRNC-CommunicationContextID
                       PRESENCE
                                   mandatory
           id-CauseLevel-RL-ReconfFailure CRITICALITY
                                                                                                                       PRESENCE mandatory
     ID
                                                                        TYPE
                                                                                CauseLevel-RL-ReconfFailure
                                                            ignore
     ID
           id-CriticalityDiagnostics
                                                                                                                    CriticalityDiagnostics
                                                                CRITICALITY
                                                                                ignore
                                                                                            TYPE
                    PRESENCE
                               optional
    . . .
RadioLinkReconfigurationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-RL-ReconfFailure ::= CHOICE {
    generalCause
                        GeneralCauseList-RL-ReconfFailure,
    rLSpecificCause
                        RLSpecificCauseList-RL-ReconfFailure,
GeneralCauseList-RL-ReconfFailure ::= SEQUENCE
    iE-Extensions
                                                ProtocolExtensionContainer { { GeneralCauseItem-RL-ReconfFailure-ExtIEs} }
                                                                                                                                   OPTIONAL,
GeneralCauseItem-RL-ReconfFailure-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RLSpecificCauseList-RL-ReconfFailure ::= SEQUENCE {
    rL-ReconfigurationFailureList-RL-ReconfFailure
                                                        RL-ReconfigurationFailureList-RL-ReconfFailure
                                                                                                                       OPTIONAL,
    iE-Extensions
                                                        ProtocolExtensionContainer { { RLSpecificCauseItem-RL-ReconfFailure-ExtIEs} }
    OPTIONAL,
    . . .
RLSpecificCauseItem-RL-ReconfFailure-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-ReconfigurationFailureList-RL-ReconfFailure ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-
ReconfigurationFailureItemIE-RL-ReconfFailure}}
RL-ReconfigurationFailureItemIE-RL-ReconfFailure NBAP-PROTOCOL-IES ::= {
          id-RL-ReconfigurationFailureItem-RL-ReconfFailure
                                                                        CRITICALITY
                                                                                        ignore
                                                                                                                    TYPE RL-
ReconfigurationFailureItem-RL-ReconfFailure
                                                    PRESENCE
                                                                mandatory}
```

```
RL-ReconfigurationFailureItem-RL-ReconfFailure ::= SEQUENCE {
   rL-ID
   cause
                                         Cause.
   iE-Extensions
                                         OPTIONAL,
RL-ReconfigurationFailureItem-RL-ReconfFailure-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  ****************
-- RADIO LINK RECONFIGURATION COMMIT
RadioLinkReconfigurationCommit ::= SEQUENCE
                                             {{RadioLinkReconfigurationCommit-IEs}},
   protocolIEs
                       ProtocolIE-Container
   protocolExtensions
                       ProtocolExtensionContainer {{RadioLinkReconfigurationCommit-Extensions}}
                                                                                                      OPTIONAL,
RadioLinkReconfigurationCommit-IEs NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
                                                                            NodeB-CommunicationContextID
                                                                                                         PRESENCE mandatory
                                             CRITICALITY
                                                           ignore
                                                                     TYPE
   { ID
          id-CFN
                                             CRITICALITY
                                                           ignore
                                                                     TYPE
                                                                            CFN
                                                                                                                   PRESENCE
   mandatory } |
   { ID
          id-Active-Pattern-Sequence-Information CRITICALITY
                                                           ignore
                                                                     TYPE
                                                                            Active-Pattern-Sequence-Information PRESENCE optional },
RadioLinkReconfigurationCommit-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    -- RADIO LINK RECONFIGURATION CANCEL
__ *******************************
RadioLinkReconfigurationCancel ::= SEQUENCE
   protocolIEs
                      ProtocolIE-Container
                                            {{RadioLinkReconfigurationCancel-IEs}},
                       ProtocolExtensionContainer {{RadioLinkReconfigurationCancel-Extensions}}
   protocolExtensions
                                                                                                      OPTIONAL,
RadioLinkReconfigurationCancel-IEs NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
   { ID
                                             CRITICALITY
                                                           ignore
                                                                     TYPE
                                                                            NodeB-CommunicationContextID
                                                                                                           PRESENCE mandatory
RadioLinkReconfigurationCancel-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
-- RADIO LINK RECONFIGURATION REQUEST FDD
__ **********************
RadioLinkReconfigurationRequestFDD ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{RadioLinkReconfigurationRequestFDD-IEs}},
                         ProtocolExtensionContainer {{RadioLinkReconfigurationRequestFDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
RadioLinkReconfigurationRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
   { ID
                                                      CRITICALITY
                                                                    reject
                                                                                      NodeB-CommunicationContextID
                                                                                                                        PRESENCE
   mandatory }
          id-UL-DPCH-Information-RL-ReconfRqstFDD
                                                      CRITICALITY
                                                                    reject
                                                                               TYPE
                                                                                      UL-DPCH-Information-RL-ReconfRqstFDD
                                                                                                                             PRESENCE
   optional } |
   { ID
          id-DL-DPCH-Information-RL-ReconfRqstFDD
                                                      CRITICALITY
                                                                    reject
                                                                               TYPE
                                                                                      DL-DPCH-Information-RL-ReconfRqstFDD
                                                                                                                             PRESENCE
   optional } |
                                                                                                                PRESENCE optional } |
    ID
          id-FDD-DCHs-to-Modify
                                           CRITICALITY
                                                         reject
                                                                    TYPE
                                                                            FDD-DCHs-to-Modify
                                                                                                                   PRESENCE optional }
     ID
          id-DCHs-to-Add-FDD
                                           CRITICALITY
                                                         reject
                                                                    TYPE
                                                                            DCH-FDD-Information
          id-DCH-DeleteList-RL-ReconfRqstFDD
                                                                                      DCH-DeleteList-RL-ReconfRqstFDD
   { ID
                                                      CRITICALITY
                                                                    reject
                                                                               TYPE
                                                                                                                           PRESENCE
   optional } |
   { ID
          id-RL-InformationList-RL-ReconfRqstFDD
                                                      CRITICALITY
                                                                    reject
                                                                               TYPE
                                                                                      RL-InformationList-RL-ReconfRqstFDD
                                                                                                                             PRESENCE
   { ID id-Transmission-Gap-Pattern-Sequence-Information
                                                      CRITICALITY
                                                                    reject
                                                                               TYPE
                                                                                      Transmission-Gap-Pattern-Sequence-Information
PRESENCE optional },
RadioLinkReconfigurationRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
UL-DPCH-Information-RL-ReconfRqstFDD ::= SEQUENCE {
   ul-TFCS
                                               TFCS
                                                             OPTIONAL,
   iE-Extensions
                                               ProtocolExtensionContainer { { UL-DPCH-Information-RL-ReconfRqstFDD-ExtIEs} } 
                                                                                                                        OPTIONAL,
UL-DPCH-Information-RL-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-DPCH-Information-RL-ReconfRqstFDD ::= SEQUENCE {
   dl-TFCS
                                                             OPTIONAL,
   tFCI-SignallingMode
                                               TFCI-SignallingMode
                                                                                   OPTIONAL,
   limitedPowerIncrease
                                              LimitedPowerIncrease
                                                                                   OPTIONAL,
```

```
iE-Extensions
DL-DPCH-Information-RL-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-DeleteList-RL-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-DeleteItem-RL-ReconfRqstFDD
DCH-DeleteItem-RL-ReconfRqstFDD ::= SEQUENCE {
   dCH-ID
                                             DCH-ID.
   iE-Extensions
                                             ProtocolExtensionContainer { { DCH-DeleteItem-RL-ReconfRgstFDD-ExtIEs} } }
                                                                                                                OPTIONAL
   . . .
DCH-DeleteItem-RL-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-ReconfRqstFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-RL-ReconfRqstFDD}}
RL-InformationItemIE-RL-ReconfRgstFDD NBAP-PROTOCOL-IES ::= {
                                                                                                    RL-InformationItem-RL-
         id-RL-InformationItem-RL-ReconfRqstFDD
                                                       CRITICALITY
                                                                     reject
                                                                                  TYPE
ReconfRastFDD
                    PRESENCE
                               mandatory }
RL-InformationItem-RL-ReconfRgstFDD ::= SEOUENCE {
   rL-ID
   maxDL-Power
                                         DL-Power
                                                       OPTIONAL,
   minDL-Power
                                                       OPTIONAL.
                                         DL-Power
   dl-CodeInformation
                                      FDD-DL-CodeInformation
                                                              OPTIONAL,
-- The IE shall be present if the Transmission Gap Pattern Sequence Information IE is included and the indicated Downlink Compressed Mode method
for at least one of the included Transmission Gap Pattern Sequence is set to "SF/2".
   iE-Extensions
                                         OPTIONAL,
RL-InformationItem-RL-ReconfRqstFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
     ID id-DLReferencePower
                                  CRITICALITY ignore EXTENSION DL-Power
                                                                                   PRESENCE optional
   { ID id-RL-Specific-DCH-Info
                                  CRITICALITY ignore
                                                       EXTENSION RL-Specific-DCH-Info
                                                                                                    PRESENCE
                                                                                                              optional },
  -- RADIO LINK RECONFIGURATION REQUEST TDD
  RadioLinkReconfigurationRequestTDD ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                            {{RadioLinkReconfigurationRequestTDD-IEs}},
                        ProtocolExtensionContainer {{RadioLinkReconfigurationRequestTDD-Extensions}}
   protocolExtensions
                                                                                                      OPTIONAL,
```

```
RadioLinkReconfigurationRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
           id-NodeB-CommunicationContextID
                                                                 CRITICALITY
                                                                                reject
                                                                                                              TYPE NodeB-
CommunicationContextID
                                      PRESENCE
                                                 mandatory
          id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD
                                                                    CRITICALITY
                                                                                    notify
                                                                                                                 TYPE UL-CCTrCH-
InformationModifyList-RL-ReconfRqstTDD
                                         PRESENCE
                                                     optional
    { ID id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD
                                                                    CRITICALITY
                                                                                   notify
                                                                                                                 TYPE UL-CCTrCH-
InformationDeleteList-RL-ReconfRqstTDD
                                         PRESENCE
                                                     optional
          id-DL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD
                                                                    CRITICALITY
                                                                                   notify
                                                                                                                 TYPE DL-CCTrCH-
InformationModifyList-RL-ReconfRqstTDD
                                         PRESENCE
                                                     optional
          id-DL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD
                                                                    CRITICALITY
                                                                                                                 TYPE DL-CCTrCH-
                                                                                    notify
InformationDeleteList-RL-ReconfRqstTDD
                                         PRESENCE
                                                     optional
         id-TDD-DCHs-to-Modify
                                                     CRITICALITY
                                                                                                                         PRESENCE optional }
                                                                    reject
                                                                                    TYPE
                                                                                           TDD-DCHs-to-Modify
               id-DCHs-to-Add-TDD
                                                                                                              DCH-TDD-Information
       { ID
                                                         CRITICALITY
                                                                        reject
                                                                                       TYPE
               optional } |
   PRESENCE
    { ID
           id-DCH-DeleteList-RL-ReconfRqstTDD
                                                                 CRITICALITY
                                                                                reject
                                                                                                              TYPE DCH-DeleteList-RL-
                              PRESENCE
ReconfRqstTDD
                                         optional
    { ID
           id-RL-Information-RL-ReconfRqstTDD
                                                             CRITICALITY
                                                                            reject
                                                                                           TYPE
                                                                                                              RL-Information-RL-ReconfRqstTDD
               PRESENCE optional
RadioLinkReconfigurationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    PRESENCE optional },
    . . .
UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ UL-CCTrCH-
InformationModifyItemIE-RL-ReconfRqstTDD}}
UL-CCTrCH-InformationModifyItemIE-RL-ReconfRqstTDD NBAP-PROTOCOL-IES ::= {
         id-UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD
                                                                    CRITICALITY
                                                                                    notify
                                                                                                                 TYPE UL-CCTrCH-
InformationModifyItem-RL-ReconfRqstTDD
                                         PRESENCE
                                                     mandatory}
UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD ::= SEQUENCE {
   cCTrCH-ID
                                                 CCTrCH-ID,
    t.FCS
                                                 TFCS
                                                                OPTIONAL,
    punctureLimit
                                                 PunctureLimit
                                                                OPTIONAL,
   iE-Extensions
                                                 ProtocolExtensionContainer { { UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD-ExtIEs} }
   OPTIONAL,
    . . .
UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ UL-CCTrCH-
InformationDeleteItemIE-RL-ReconfRqstTDD}}
```

```
UL-CCTrCH-InformationDeleteItemIE-RL-ReconfRqstTDD NBAP-PROTOCOL-IES ::= {
          id-UL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD
                                                                         CRITICALITY
                                                                                         notify
                                                                                                                       TYPE UL-CCTrCH-
InformationDeleteItem-RL-ReconfRqstTDD
                                            PRESENCE
                                                        mandat.orv}
UL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD ::= SEQUENCE {
    cCTrCH-ID
                                                    CCTrCH-ID,
                                                    ProtocolExtensionContainer { { UL-CCTrCH-InformationDeleteItem-RL-ReconfRgstTDD-ExtIEs} }
    iE-Extensions
   OPTIONAL,
    . . .
UL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ DL-CCTrCH-
InformationModifyItemIE-RL-ReconfRqstTDD}}
DL-CCTrCH-InformationModifyItemIE-RL-ReconfRgstTDD NBAP-PROTOCOL-IES ::= {
          id-DL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD
                                                                         CRITICALITY
                                                                                         notify
                                                                                                                       TYPE DL-CCTrCH-
InformationModifyItem-RL-ReconfRqstTDD
                                            PRESENCE
                                                        mandatory }
DL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD ::= SEQUENCE {
    cCTrCH-ID
                                                    CCTrCH-ID,
    tFCS
                                                    TFCS
                                                                    OPTIONAL,
    punctureLimit
                                                    PunctureLimit
                                                                    OPTIONAL,
    iE-Extensions
                                                    ProtocolExtensionContainer { { DL-CCTrCH-InformationModifyItem-RL-ReconfRgstTDD-ExtIEs} }
    OPTIONAL,
    . . .
DL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ DL-CCTrCH-
InformationDeleteItemIE-RL-ReconfRgstTDD}}
DL-CCTrCH-InformationDeleteItemIE-RL-ReconfRqstTDD NBAP-PROTOCOL-IES ::= {
           id-DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD
                                                                         CRITICALITY
                                                                                         notify
                                                                                                                       TYPE DL-CCTrCH-
InformationDeleteItem-RL-ReconfRqstTDD
                                            PRESENCE
                                                        mandatory }
DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD ::= SEQUENCE {
    cCTrCH-ID
                                                    CCTrCH-ID,
   iE-Extensions
                                                    ProtocolExtensionContainer { { DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD-ExtIEs} }
   OPTIONAL,
    . . .
DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
DCH-DeleteList-RL-ReconfRgstTDD ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-DeleteItem-RL-ReconfRgstTDD
DCH-DeleteItem-RL-ReconfRqstTDD ::= SEQUENCE {
   dCH-ID
                                            DCH-ID,
                                            ProtocolExtensionContainer { { DCH-DeleteItem-RL-ReconfRqstTDD-ExtIEs} } 
   iE-Extensions
                                                                                                               OPTIONAL
RL-Information-RL-ReconfRqstTDD ::= SEQUENCE {
                                         RL-ID,
   maxDL-Power
                                         DL-Power
                                                      OPTIONAL,
   minDL-Power
                                                      OPTIONAL,
                                         DL-Power
   iE-Extensions
                                         OPTIONAL,
RL-InformationItem-RL-ReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-RL-Specific-DCH-Info
                                  CRITICALITY ignore
                                                      EXTENSION
                                                                RL-Specific-DCH-Info
                                                                                                   PRESENCE
                                                                                                             optional }.
  -- RADIO LINK RECONFIGURATION RESPONSE
__ *********************
RadioLinkReconfigurationResponse ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                            {{RadioLinkReconfigurationResponse-IEs}},
                       ProtocolExtensionContainer {{RadioLinkReconfigurationResponse-Extensions}}
   protocolExtensions
                                                                                                     OPTIONAL.
RadioLinkReconfigurationResponse-IEs NBAP-PROTOCOL-IES ::= {
         id-CRNC-CommunicationContextID
   { ID
                                                   CRITICALITY ignore
                                                                        TYPE
                                                                              CRNC-CommunicationContextID
                                                                                                                     PRESENCE
   mandatory }
   { ID
         id-RL-InformationResponseList-RL-ReconfRsp
                                                                              RL-InformationResponseList-RL-ReconfRsp
                                                   CRITICALITY ignore
                                                                        TYPE
                                                                                                                       PRESENCE
   optional
   { ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore
                                                                              CriticalityDiagnostics
                                                                        TYPE
                                                                                                                  PRESENCE
   optional },
   . . .
RadioLinkReconfigurationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::=
   { ID id-TargetCommunicationControlPortID
                                        CRITICALITY ignore EXTENSION CommunicationControlPortID
                                                                                                          PRESENCE optional },
   . . .
```

```
RL-InformationResponseList-RL-ReconfRsp ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{RL-InformationResponseItemIE-RL-
ReconfRsp } }
RL-InformationResponseItemIE-RL-ReconfRsp NBAP-PROTOCOL-IES ::= {
          id-RL-InformationResponseItem-RL-ReconfRsp
                                                                       ignore
                                                                                     TYPE
                                                                                                      RL-InformationResponseItem-RL-
                                                        CRITICALITY
ReconfRsp
                 PRESENCE
                            mandatory}
RL-InformationResponseItem-RL-ReconfRsp ::= SEQUENCE {
   dCH-InformationResponseList-RL-ReconfRsp
                                              DCH-InformationResponseList-RL-ReconfRsp
   iE-Extensions
                                          OPTIONAL,
RL-InformationResponseItem-RL-ReconfRsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-DL-PowerBalancing-UpdatedIndicator CRITICALITY ignore
                                                                              DL-PowerBalancing-UpdatedIndicator
                                                                                                                 PRESENCE optional },
                                                               EXTENSION
   . . .
DCH-InformationResponseList-RL-ReconfRsp::= ProtocolIE-Single-Container {{ DCH-InformationResponseListIEs-RL-ReconfRsp }}
DCH-InformationResponseListIEs-RL-ReconfRsp NBAP-PROTOCOL-IES ::= {
    TYPE DCH-InformationResponse
                                                                                 PRESENCE mandatory }
    *****************
-- RADIO LINK DELETION REQUEST
  ····
RadioLinkDeletionRequest ::= SEOUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{RadioLinkDeletionRequest-IEs}},
                        ProtocolExtensionContainer {{RadioLinkDeletionRequest-Extensions}}
   protocolExtensions
                                                                                                      OPTIONAL,
   . . .
RadioLinkDeletionRequest-IEs NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
                                                     CRITICALITY
                                                                                 TYPE
                                                                                                      NodeB-CommunicationContextID
                                                                   reject
          PRESENCE
                    mandatory
    ID
          id-CRNC-CommunicationContextID
                                                     CRITICALITY
                                                                   reject
                                                                                     TYPE
                                                                                                      CRNC-CommunicationContextID
          PRESENCE
                     mandatory }
   { ID
          id-RL-informationList-RL-DeletionRgst
                                                     CRITICALITY
                                                                   notify
                                                                                 TYPE
                                                                                                      RL-informationList-RL-
DeletionRqst
                     PRESENCE
                               mandatory
   . . .
RadioLinkDeletionRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
RL-informationList-RL-DeletionRqst ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{RL-informationItemIE-RL-DeletionRqst}}
RL-informationItemIE-RL-DeletionRqst NBAP-PROTOCOL-IES ::= {
        id-RL-informationItem-RL-DeletionRgst
                                                   CRITICALITY
                                                                 notify
                                                                               TYPE
                                                                                                   RL-informationItem-RL-
DeletionRast
                       PRESENCE
                                  mandatory}
RL-informationItem-RL-DeletionRqst ::= SEQUENCE {
   rI.-ID
                                         RL-ID,
                                         iE-Extensions
                                                                                                             OPTIONAL,
RL-informationItem-RL-DeletionRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    *****************
-- RADIO LINK DELETION RESPONSE
__ *********************
RadioLinkDeletionResponse ::= SEOUENCE {
   protocolIEs
                       ProtocolIE-Container
                                            {{RadioLinkDeletionResponse-IEs}},
                       ProtocolExtensionContainer {{RadioLinkDeletionResponse-Extensions}}
                                                                                                     OPTIONAL,
   protocolExtensions
RadioLinkDeletionResponse-IES NBAP-PROTOCOL-IES ::= {
   { ID
         id-CRNC-CommunicationContextID
                                            CRITICALITY
                                                          ignore
                                                                        TYPE
                                                                               CRNC-CommunicationContextID
                                                                                                                PRESENCE
   mandatory }
   { ID
         id-CriticalityDiagnostics
                                            CRITICALITY
                                                          ignore
                                                                        TYPE
                                                                               CriticalityDiagnostics
                                                                                                             PRESENCE optional },
   . . .
RadioLinkDeletionResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    **********************
-- DL POWER CONTROL REQUEST FDD
__ ********************
DL-PowerControlRequest ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                            {{DL-PowerControlRequest-IEs}},
                       ProtocolExtensionContainer {{DL-PowerControlRequest-Extensions}}
   protocolExtensions
                                                                                                   OPTIONAL,
DL-PowerControlRequest-IEs NBAP-PROTOCOL-IES ::= {
```

453

```
{ ID id-NodeB-CommunicationContextID
                                              CRITICALITY ignore
                                                                                 NodeB-CommunicationContextID
                                                                                                                        PRESENCE mandatory
                                                                         TYPE
     ID id-PowerAdjustmentType
                                              CRITICALITY ignore TYPE PowerAdjustmentType
                                                                                                                     PRESENCE mandatory}
    { ID id-DLReferencePower
                                              CRITICALITY ignore TYPE DL-Power
                                                                                                                     PRESENCE conditional
    -- This IE shall be present if the Adjustment Type IE is set to 'Common'
    { ID id-InnerLoopDLPCStatus
                                                                                                                     PRESENCE optional }
                                              CRITICALITY ignore TYPE InnerLoopDLPCStatus
                                              CRITICALITY ignore TYPE DL-ReferencePowerInformationList-DL-PC-Rqst PRESENCE conditional }
    { ID id-DLReferencePowerList-DL-PC-Rqst
    -- This IE shall be present if the Adjustment Type IE is set to 'Individual'
   { ID id-MaxAdjustmentStep
                                              CRITICALITY ignore TYPE MaxAdjustmentStep
                                                                                                                PRESENCE conditional }
   -- This IE shall be present if the Adjustment Type IE is set to 'Common' or 'Individual'
                                                                                                                PRESENCE conditional } |
   { ID id-AdjustmentPeriod
                                              CRITICALITY ignore TYPE AdjustmentPeriod
   -- This IE shall be present if the Adjustment Type IE is set to 'Common' or 'Individual'
    { ID id-AdjustmentRatio
                                  CRITICALITY ignore TYPE ScaledAdjustmentRatio
                                                                                         PRESENCE conditional
    -- This IE shall be present if the Adjustment Type IE is set to 'Common' or 'Individual'
DL-PowerControlRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DL-ReferencePowerInformationList-DL-PC-Rqst ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{DL-
ReferencePowerInformationItemIE-DL-PC-Rqst }}
DL-ReferencePowerInformationItemIE-DL-PC-Rqst NBAP-PROTOCOL-IES ::= {
    { ID id-DL-ReferencePowerInformationItem-DL-PC-Rgst
                                                                                             DL-ReferencePowerInformationItem-DL-PC-Rgst
                                                          CRITICALITY
                                                                           ignore
                                                                                     TYPE
    PRESENCE
               mandatory
DL-ReferencePowerInformationItem-DL-PC-Rgst ::= SEOUENCE {
   rI.-ID
                                          RL-ID,
    dl-ReferencePower
                                          DL-Power,
                                          ProtocolExtensionContainer { { DL-ReferencePowerInformationItem-DL-PC-Rqst-ExtIEs } }
   iE-Extensions
                                                                                                                                 OPTIONAL,
DL-ReferencePowerInformationItem-DL-PC-Rgst-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
     **********************
-- DL POWER TIMESLOT CONTROL REQUEST TDD
__ **********************
DL-PowerTimeslotControlRequest ::= SEQUENCE
                                                  {{DL-PowerTimeslotControlRequest-IEs}},
   protocolIEs
                          ProtocolIE-Container
   protocolExtensions
                           ProtocolExtensionContainer {{DL-PowerTimeslotControlRequest-Extensions}}
                                                                                                                   OPTIONAL,
DL-PowerTimeslotControlRequest-IEs NBAP-PROTOCOL-IES ::= {
```

```
ID id-NodeB-CommunicationContextID
                                                  CRITICALITY ignore
                                                                                    NodeB-CommunicationContextID
                                                                                                                           PRESENCE mandatory
                                                                             TYPE
     ID id-TimeslotISCPInfo
                                  CRITICALITY ignore
                                                             TYPE
                                                                     DL-TimeslotISCPInfo
                                                                                            PRESENCE optional },
    -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
DL-PowerTimeslotControlRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    { ID id-TimeslotISCPInfoList-LCR-DL-PC-RqstTDD
                                                                                                                    PRESENCE optional } |
                                                     CRITICALITY ignore
                                                                                 EXTENSION DL-TimeslotISCPInfoLCR
    -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
   { ID id-PrimCCPCH-RSCP-DL-PC-RqstTDD
                                                                                                                  PRESENCE optional },
                                                     CRITICALITY ignore
                                                                                 EXTENSION PrimaryCCPCH-RSCP
      *****************
-- DEDICATED MEASUREMENT INITIATION REQUEST
__ **********************
DedicatedMeasurementInitiationRequest ::= SEQUENCE {
                                                  {{DedicatedMeasurementInitiationRequest-IEs}},
   protocolIEs
                          ProtocolIE-Container
                          ProtocolExtensionContainer {{DedicatedMeasurementInitiationRequest-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
DedicatedMeasurementInitiationRequest-IEs NBAP-PROTOCOL-IES ::= {
           id-NodeB-CommunicationContextID
                                                         CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                            NodeB-CommunicationContextID
                                                                                                                                PRESENCE
   mandatory } |
    { ID
           id-MeasurementID
                                                         CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                            MeasurementID
                                                                                                                                   PRESENCE
   mandatory }
           id-DedicatedMeasurementObjectType-DM-Rqst
                                                          CRITICALITY
                                                                         reject
                                                                                            DedicatedMeasurementObjectType-DM-Rqst
                                                                                                                                      PRESENCE
                                                                                    TYPE
   mandatory } |
    { ID
           id-DedicatedMeasurementType
                                                          CRITICALITY
                                                                         reject
                                                                                     TYPE
                                                                                            DedicatedMeasurementType
                                                                                                                                PRESENCE
   mandatory }
           id-MeasurementFilterCoefficient
    { ID
                                                          CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                            MeasurementFilterCoefficient
                                                                                                                                   PRESENCE
    optional
           id-ReportCharacteristics
                                                                                            ReportCharacteristics
    { ID
                                                         CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                                                                PRESENCE
   mandatory }
           id-CFNReportingIndicator
    { ID
                                                         CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                            FNReportingIndicator
                                                                                                                                PRESENCE
   mandatory }
           id-CFN
    { ID
                                                         CRITICALITY
                                                                         reject
                                                                                    TYPE
                                                                                            CFN
                                                                                                                                PRESENCE
           } ,
optional
    . . .
DedicatedMeasurementInitiationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DedicatedMeasurementObjectType-DM-Rqst ::= CHOICE {
                              RL-DM-Rqst,
   rL
   rLS
                              RL-Set-DM-Rast,
                                                     -- for FDD only
```

```
all-RL
                              AllRL-DM-Rgst,
   all-RLS
                              AllRL-Set-DM-Rgst,
                                                   -- for FDD only
RL-DM-Rgst ::= SEQUENCE {
   rL-InformationList
                                     RL-InformationList-DM-Rqst,
                                     ProtocolExtensionContainer { {    RLItem-DM-Rqst-ExtIEs } }
   iE-Extensions
                                                                                                                OPTIONAL,
RLItem-DM-Rqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-DM-Rgst ::= SEOUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-DM-Rgst }}
RL-InformationItemIE-DM-Rgst NBAP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
RL-InformationItem-DM-Rqst ::= SEQUENCE {
       rL-ID
                                     RL-ID,
       dPCH-ID
                                                        OPTIONAL, -- for TDD only
                                     ProtocolExtensionContainer { { RL-InformationItem-DM-Rqst-ExtIEs } }
       iE-Extensions
                                                                                                               OPTIONAL,
       . . .
RL-InformationItem-DM-Rgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-PUSCH-Info-DM-Rgst
                                                                                                                PRESENCE optional },
                                 CRITICALITY reject
                                                                EXTENSION PUSCH-Info-DM-Rgst
   -- TDD only
PUSCH-Info-DM-Rqst ::= SEQUENCE (SIZE (1..maxNrOfPUSCHs)) OF PUSCH-ID
RL-Set-DM-Rqst ::= SEQUENCE {
                                         RL-Set-InformationList-DM-Rgst,
   rL-Set-InformationList-DM-Rgst
                                         ProtocolExtensionContainer { { RL-SetItem-DM-Rqst-ExtIEs } }
   iE-Extensions
                                                                                                               OPTIONAL,
    . . .
RL-SetItem-DM-Rqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-InformationList-DM-Rqst
                                      ::= SEQUENCE (SIZE(1..maxNrOfRLSets)) OF RL-Set-InformationItem-DM-Rqst
RL-Set-InformationItem-DM-Rqst ::= SEQUENCE {
   rL-Set-ID
                                  ProtocolExtensionContainer { { RL-Set-InformationItem-DM-Rqst-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
```

```
RL-Set-InformationItem-DM-Rqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
AllRL-DM-Rgst ::= NULL
AllRL-Set-DM-Rgst ::= NULL
__ *******************
-- DEDICATED MEASUREMENT INITIATION RESPONSE
  *****************
DedicatedMeasurementInitiationResponse ::= SEQUENCE {
                                                 {{DedicatedMeasurementInitiationResponse-IEs}},
                         ProtocolIE-Container
   protocolIEs
                          ProtocolExtensionContainer {{DedicatedMeasurementInitiationResponse-Extensions}}
   protocolExtensions
                                                                                                               OPTIONAL,
   . . .
DedicatedMeasurementInitiationResponse-IES NBAP-PROTOCOL-IES ::= {
    { ID id-CRNC-CommunicationContextID
                                                                                          CRNC-CommunicationContextID
                                                        CRITICALITY
                                                                       ignore
                                                                                  TYPE
                                                                                                                                PRESENCE
   mandatory } |
   { ID id-MeasurementID
                                                        CRITICALITY
                                                                       ignore
                                                                                  TYPE
                                                                                          MeasurementID
                                                                                                                                PRESENCE
   mandatory } |
          id-DedicatedMeasurementObjectType-DM-Rsp
                                                                       ignore
                                                                                  TYPE
                                                                                          DedicatedMeasurementObjectType-DM-Rsp
    { ID
                                                        CRITICALITY
                                                                                                                               PRESENCE
   optional } |
          id-CriticalityDiagnostics
                                                                                          CriticalityDiagnostics
   { ID
                                                        CRITICALITY
                                                                       ignore
                                                                                  TYPE
                                                                                                                             PRESENCE
   optional },
   . . .
DedicatedMeasurementInitiationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DedicatedMeasurementObjectType-DM-Rsp ::= CHOICE {
   rL
                             RL-DM-Rsp,
   rLS
                              RL-Set-DM-Rsp, -- for FDD only
   all-RL
                              RL-DM-Rsp,
   all-RLS
                              RL-Set-DM-Rsp, -- for FDD only
   . . .
RL-DM-Rsp ::= SEQUENCE {
   rL-InformationList-DM-Rsp
                                     RL-InformationList-DM-Rsp.
                                     ProtocolExtensionContainer { { RLItem-DM-Rsp-ExtIEs } }
   iE-Extensions
                                                                                                            OPTIONAL,
RLItem-DM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

458

```
RL-InformationList-DM-Rsp ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-DM-Rsp }}
RL-InformationItemIE-DM-Rsp NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RL-InformationItem-DM-Rsp ::= SEQUENCE {
   rI.-ID
                                   RL-ID,
   dPCH-TD
                                   DPCH-ID
                                                 OPTIONAL,
                                                           -- for TDD only
   dedicatedMeasurementValue
                                   DedicatedMeasurementValue,
                                                 OPTIONAL,
                                   iE-Extensions
                                                                                                       OPTIONAL,
RL-InformationItem-DM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   {ID id-PUSCH-Info-DM-Rsp
                               CRITICALITY reject
                                                                                                       PRESENCE optional },
                                                           EXTENSION
                                                                    PUSCH-Info-DM-Rsp
   -- TDD only
   . . .
PUSCH-Info-DM-Rsp ::= SEQUENCE (SIZE (1..maxNrOfPUSCHs)) OF PUSCH-ID
RL-Set-DM-Rsp ::= SEQUENCE {
   rL-Set-InformationList-DM-Rsp
                                   RL-Set-InformationList-DM-Rsp,
                                   ProtocolExtensionContainer { { RL-SetItem-DM-Rsp-ExtIEs } }
   iE-Extensions
                                                                                                       OPTIONAL,
RL-SetItem-DM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-InformationList-DM-Rsp ::= SEQUENCE (SIZE (1..maxNrOfRLSets)) OF ProtocolIE-Single-Container {{ RL-Set-InformationItemIE-DM-Rsp }}
RL-Set-InformationItemIE-DM-Rsp NBAP-PROTOCOL-IES ::= {
   { ID id-RL-Set-InformationItem-DM-Rsp
                                         CRITICALITY ignore
                                                               TYPE RL-Set-InformationItem-DM-Rsp
                                                                                                     PRESENCE mandatory }
RL-Set-InformationItem-DM-Rsp ::= SEQUENCE {
                               RL-Set-ID.
   dedicatedMeasurementValue
                               DedicatedMeasurementValue,
                                             OPTIONAL,
                               ProtocolExtensionContainer { { RL-Set-InformationItem-DM-Rsp-ExtIEs} } OPTIONAL.
   iE-Extensions
RL-Set-InformationItem-DM-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
-- DEDICATED MEASUREMENT INITIATION FAILURE
  *****************
DedicatedMeasurementInitiationFailure ::= SEQUENCE {
                                                {{DedicatedMeasurementInitiationFailure-IEs}},
   protocolIEs
                         ProtocolIE-Container
                         ProtocolExtensionContainer {{DedicatedMeasurementInitiationFailure-Extensions}}
   protocolExtensions
                                                                                                             OPTIONAL,
DedicatedMeasurementInitiationFailure-IES NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                CRITICALITY
                                                                              TYPE
                                                                                     CRNC-CommunicationContextID
                                                                                                                   PRESENCE mandatory
                                                               ignore
     ID
          id-Measurement.ID
                                                CRITICALITY
                                                               ignore
                                                                             TYPE
                                                                                     Measurement.ID
                                                                                                                      PRESENCE mandatory
    ID
          id-Cause
                                                CRITICALITY
                                                               ignore
                                                                             TYPE
                                                                                     Cause
                                                                                                                           PRESENCE
   mandatory } |
   { ID
          id-CriticalityDiagnostics
                                                                             TYPE
                                                                                     CriticalityDiagnostics
                                                                                                                PRESENCE optional },
                                                CRITICALITY
                                                               ignore
   . . .
DedicatedMeasurementInitiationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- DEDICATED MEASUREMENT REPORT
        *****************
DedicatedMeasurementReport ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{DedicatedMeasurementReport-IEs}},
                         ProtocolExtensionContainer {{DedicatedMeasurementReport-Extensions}}
                                                                                                             OPTIONAL,
   protocolExtensions
DedicatedMeasurementReport-IES NBAP-PROTOCOL-IES ::= {
          id-CRNC-CommunicationContextID
                                                           CRITICALITY
                                                                          ignore
                                                                                     TYPE
                                                                                                           CRNC-CommunicationContextID
              PRESENCE
                         mandatory } |
   { ID
          id-MeasurementID
                                                           CRITICALITY
                                                                          ignore
                                                                                     TYPE
                                                                                                           MeasurementID
      PRESENCE mandatory } |
          id-DedicatedMeasurementObjectType-DM-Rprt
                                                                                                           DedicatedMeasurementObjectType-
   { ID
                                                           CRITICALITY
                                                                          ignore
                                                                                     TYPE
                     mandatory },
DM-Rprt
          PRESENCE
   . . .
DedicatedMeasurementReport-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DedicatedMeasurementObjectType-DM-Rprt ::= CHOICE {
   rL
                                    RL-DM-Rprt,
   rLS
                                     RL-Set-DM-Rprt,
                                                           -- for FDD only
```

```
all-RL
                                RL-DM-Rprt,
   all-RLS
                                RL-Set-DM-Rprt,
                                                    -- for FDD only
RL-DM-Rprt ::= SEQUENCE {
   rL-InformationList-DM-Rprt
                                RL-InformationList-DM-Rprt,
   iE-Extensions
                                OPTIONAL,
RLItem-DM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-DM-Rprt ::= SEOUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-DM-Rprt }}
RL-InformationItemIE-DM-Rprt NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RL-InformationItem-DM-Rprt ::= SEQUENCE {
   dPCH-ID
                             DPCH-ID
                                       OPTIONAL,
                                                    -- for TDD only
   dedicatedMeasurementValueInformation DedicatedMeasurementValueInformation,
   iE-Extensions
                             ProtocolExtensionContainer { { RL-InformationItem-DM-Rprt-ExtIEs } }
                                                                                                 OPTIONAL,
RL-InformationItem-DM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   {ID id-PUSCH-Info-DM-Rprt
                            CRITICALITY reject
                                                        EXTENSION PUSCH-Info-DM-Rprt
                                                                                                 PRESENCE optional },
   -- TDD only
   . . .
PUSCH-Info-DM-Rprt ::= SEQUENCE (SIZE (0..maxNrOfPUSCHs)) OF PUSCH-ID
RL-Set-DM-Rprt ::= SEOUENCE {
                                RL-Set-InformationList-DM-Rprt,
   rL-Set-InformationList-DM-Rprt
   iE-Extensions
                                OPTIONAL,
RL-SetItem-DM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
RL-Set-InformationList-DM-Rprt ::= SEQUENCE (SIZE (1..maxNrOfRLSets)) OF ProtocolIE-Single-Container {{ RL-Set-InformationItemIE-DM-Rprt }}
RL-Set-InformationItemIE-DM-Rprt NBAP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
RL-Set-InformationItem-DM-Rprt ::= SEQUENCE {
```

```
rL-Set-ID
                                RL-Set-ID,
   dedicatedMeasurementValueInformation
                                      DedicatedMeasurementValueInformation,
   iE-Extensions
                                ProtocolExtensionContainer { { RL-Set-InformationItem-DM-Rprt-ExtIEs} } OPTIONAL,
RL-Set-InformationItem-DM-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
        -- DEDICATED MEASUREMENT TERMINATION REQUEST
  *****************
DedicatedMeasurementTerminationRequest ::= SEOUENCE
   protocolIEs
                        ProtocolIE-Container
                                              {{DedicatedMeasurementTerminationRequest-IEs}},
                        ProtocolExtensionContainer {{DedicatedMeasurementTerminationRequest-Extensions}}
   protocolExtensions
                                                                                                         OPTIONAL,
DedicatedMeasurementTerminationRequest-IEs NBAP-PROTOCOL-IES ::= {
    { ID
          id-NodeB-CommunicationContextID
                                              CRITICALITY
                                                            ignore
                                                                          TYPE
                                                                                 NodeB-CommunicationContextID
                                                                                                              PRESENCE mandatory
          id-Measurement.ID
                                                                                                                    PRESENCE
   { ID
                                              CRITICALITY
                                                            ignore
                                                                          TYPE
                                                                                 Measurement.ID
   mandatory },
   . . .
DedicatedMeasurementTerminationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
   *****************
-- DEDICATED MEASUREMENT FAILURE INDICATION
  DedicatedMeasurementFailureIndication ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{DedicatedMeasurementFailureIndication-IEs}},
                        ProtocolExtensionContainer {{DedicatedMeasurementFailureIndication-Extensions}}
   protocolExtensions
                                                                                                         OPTIONAL,
DedicatedMeasurementFailureIndication-IES NBAP-PROTOCOL-IES ::=
          id-CRNC-CommunicationContextID
                                                                   TYPE
                                                                          CRNC-CommunicationContextID
                                                                                                         PRESENCE mandatory }
                                          CRITICALITY
                                                        ignore
     ID
          id-MeasurementID
                                          CRITICALITY
                                                         ignore
                                                                   TYPE
                                                                          MeasurementID
                                                                                                                 PRESENCE mandatory
     ID
          id-Cause
                                          CRITICALITY
                                                        ignore
                                                                   TYPE
                                                                          Cause
                                                                                                                 PRESENCE mandatory
```

```
DedicatedMeasurementFailureIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- RADIO LINK FAILURE INDICATION
__ **********************
RadioLinkFailureIndication ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{RadioLinkFailureIndication-IEs}},
   protocolExtensions
                      ProtocolExtensionContainer {{RadioLinkFailureIndication-Extensions}}
                                                                                                         OPTIONAL.
RadioLinkFailureIndication-IEs NBAP-PROTOCOL-IES ::= {
         id-CRNC-CommunicationContextID
                                                  CRITICALITY
                                                                ignore
                                                                                     CRNC-CommunicationContextID
                                                                                                                       PRESENCE
   mandatory } |
   { ID id-Reporting-Object-RL-FailureInd
                                                 CRITICALITY
                                                                ignore
                                                                              TYPE
                                                                                     Reporting-Object-RL-FailureInd
                                                                                                                    PRESENCE
   mandatory },
RadioLinkFailureIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
Reporting-Object-RL-FailureInd ::= CHOICE {
                        RL-RL-FailureInd,
                        RL-Set-RL-FailureInd, --FDD only
   rL-Set
   . . . ,
   cCTrCH
                        CCTrCH-RL-FailureInd --TDD only
RL-RL-FailureInd ::= SEQUENCE {
   rL-InformationList-RL-FailureInd
                                       RL-InformationList-RL-FailureInd,
   iE-Extensions
                                       OPTIONAL,
   . . .
RLItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-FailureInd ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{ RL-InformationItemIE-RL-FailureInd}}
RL-InformationItemIE-RL-FailureInd NBAP-PROTOCOL-IES ::= {
   { ID
                                                                                     RL-InformationItem-RL-FailureInd
         id-RL-InformationItem-RL-FailureInd
                                                 CRITICALITY
                                                                ignore
                                                                              TYPE
                                                                                                                         PRESENCE
   mandatory}
RL-InformationItem-RL-FailureInd ::= SEQUENCE {
```

```
rL-ID
                                         RL-ID,
   cause
                                         Cause.
   iE-Extensions
                                         OPTIONAL.
RL-InformationItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-RL-FailureInd ::= SEQUENCE {
   rL-Set-InformationList-RL-FailureInd
                                         RL-Set-InformationList-RL-FailureInd,
                                     ProtocolExtensionContainer { { RL-SetItem-RL-FailureInd-ExtIEs } }
   iE-Extensions
                                                                                                     OPTIONAL,
RL-SetItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-InformationList-RL-FailureInd ::= SEQUENCE (SIZE (1..maxNrOfRLSets)) OF ProtocolIE-Single-Container {{ RL-Set-InformationItemIE-RL-
FailureInd }}
RL-Set-InformationItemIE-RL-FailureInd NBAP-PROTOCOL-IES ::= {
   TYPE RL-Set-InformationItem-RL-FailureInd
                                                                                                        PRESENCE mandatory }
RL-Set-InformationItem-RL-FailureInd ::= SEQUENCE {
   rL-Set-ID
                       RL-Set-ID,
   cause
                        Cause,
                        iE-Extensions
RL-Set-InformationItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CCTrCH-RL-FailureInd ::= SEQUENCE {
                                         RL-ID,
   cCTrCH-InformationList-RL-FailureInd
                                         CCTrCH-InformationList-RL-FailureInd,
                                     ProtocolExtensionContainer { { CCTrCHItem-RL-FailureInd-ExtIEs } }
   iE-Extensions
                                                                                                     OPTIONAL,
CCTrCHItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CCTrCH-InformationList-RL-FailureInd ::= SEOUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ CCTrCH-InformationItemIE-RL-
FailureInd}}
CCTrCH-InformationItemIE-RL-FailureInd NBAP-PROTOCOL-IES ::= {
```

```
id-CCTrCH-InformationItem-RL-FailureInd
                                                          CRITICALITY
                                                                                          TYPE
                                                                                                                 CCTrCH-InformationItem-RL-
                                                                          ignore
FailureInd
                   PRESENCE
                               mandatory}
CCTrCH-InformationItem-RL-FailureInd ::= SEQUENCE {
    cCTrCH-ID
                                               CCTrCH-ID,
    cause
                                               Cause,
    iE-Extensions
                                               ProtocolExtensionContainer { { CCTrCH-InformationItem-RL-FailureInd-ExtIEs } }
CCTrCH-InformationItem-RL-FailureInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- RADIO LINK PREEMPTION REQUIRED INDICATION
  ******************
RadioLinkPreemptionRequiredIndication ::= SEQUENCE {
                                                              {{RadioLinkPreemptionRequiredIndication-IEs}},
    protocolIEs
                                   ProtocolIE-Container
                                   ProtocolExtensionContainer {{RadioLinkPreemptionRequiredIndication-Extensions}}
   protocolExtensions
                                                                                                                                   OPTIONAL,
RadioLinkPreemptionRequiredIndication-IEs NBAP-PROTOCOL-IES ::= {
           id-CRNC-CommunicationContextID
                                                          CRITICALITY
                                                                          ignore
                                                                                          TYPE
                                                                                                                 CRNC-CommunicationContextID
           PRESENCE
                      mandatory
    { ID id-RL-InformationList-RL-PreemptRequiredInd CRITICALITY ignore TYPE RL-InformationList-RL-PreemptRequiredInd PRESENCE optional },
RadioLinkPreemptionRequiredIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-PreemptRequiredInd
                                                  ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container { {RL-InformationItemIE-RL-
PreemptRequiredInd}}
RL-InformationItemIE-RL-PreemptRequiredInd NBAP-PROTOCOL-IES ::= {
    { ID id-RL-InformationItem-RL-PreemptRequiredInd
                                                          CRITICALITY ignore TYPE RL-InformationItem-RL-PreemptRequiredInd
                                                                                                                               PRESENCE
mandatory },
    . . .
RL-InformationItem-RL-PreemptRequiredInd::= SEQUENCE {
   rL-ID
    iE-Extensions
                               ProtocolExtensionContainer { {RL-InformationItem-RL-PreemptRequiredInd-ExtIEs} } OPTIONAL,
RL-InformationItem-RL-PreemptRequiredInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
-- RADIO LINK RESTORE INDICATION
__ *********************
RadioLinkRestoreIndication ::= SEOUENCE {
               ProtocolIE-Container
   protocolIEs
                                          {{RadioLinkRestoreIndication-IEs}},
   protocolExtensions ProtocolExtensionContainer {{RadioLinkRestoreIndication-Extensions}}
                                                                                                  OPTIONAL,
RadioLinkRestoreIndication-IEs NBAP-PROTOCOL-IES ::= {
         id-CRNC-CommunicationContextID
   { ID
                                              CRITICALITY
                                                            ignore
                                                                                CRNC-CommunicationContextID
                                                                                                               PRESENCE
   mandatory }
        id-Reporting-Object-RL-RestoreInd
                                              CRITICALITY
                                                            ignore
                                                                         TYPE
                                                                                Reporting-Object-RL-RestoreInd
                                                                                                             PRESENCE
   mandatory },
   . . .
RadioLinkRestoreIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
Reporting-Object-RL-RestoreInd ::= CHOICE {
                       RL-RL-RestoreInd, --TDD only
   rL-Set
                       RL-Set-RL-RestoreInd, --FDD only
   . . . ,
   cCTrCH
                       CCTrCH-RL-RestoreInd --TDD only
RL-RL-RestoreInd ::= SEOUENCE {
   rL-InformationList-RL-RestoreInd
                                    RL-InformationList-RL-RestoreInd,
   iE-Extensions
                                    OPTIONAL,
RLItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-InformationList-RL-RestoreInd ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {{RL-InformationItemIE-RL-RestoreInd}}
RL-InformationItemIE-RL-RestoreInd NBAP-PROTOCOL-IES ::= {
   { ID id-RL-InformationItem-RL-RestoreInd
                                              CRITICALITY
                                                            ignore
                                                                         TYPE
                                                                               RL-InformationItem-RL-RestoreInd
                                                                                                                 PRESENCE
   mandatory}
RL-InformationItem-RL-RestoreInd ::= SEQUENCE {
   rL-ID
   iE-Extensions
```

```
RL-InformationItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-RL-RestoreInd ::= SEOUENCE {
   rL-Set-InformationList-RL-RestoreInd RL-Set-InformationList-RL-RestoreInd,
                                         ProtocolExtensionContainer { { RL-SetItem-RL-RestoreInd-ExtIEs } }
   iE-Extensions
                                                                                                               OPTIONAL,
RL-SetItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
RL-Set-InformationList-RL-RestoreInd ::= SEQUENCE (SIZE (1..maxNrOfRLSets)) OF ProtocolIE-Single-Container {{ RL-Set-InformationItemIE-RL-
RestoreInd }}
RL-Set-InformationItemIE-RL-RestoreInd NBAP-PROTOCOL-IES ::= {
   TYPE RL-Set-InformationItem-RL-RestoreInd PRESENCE mandatory }
RL-Set-InformationItem-RL-RestoreInd ::= SEQUENCE {
   rL-Set-ID
                         RL-Set-ID,
                         ProtocolExtensionContainer { RL-Set-InformationItem-RL-RestoreInd-ExtIEs} } OPTIONAL,
   iE-Extensions
RL-Set-InformationItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CCTrCH-RL-RestoreInd ::= SEOUENCE {
                                             RL-ID,
   cCTrCH-InformationList-RL-RestoreInd
                                             CCTrCH-InformationList-RL-RestoreInd,
                                         ProtocolExtensionContainer { { CCTrCHItem-RL-RestoreInd-ExtIEs } }
   iE-Extensions
                                                                                                               OPTIONAL,
CCTrCHItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CCTrCH-InformationList-RL-RestoreInd ::= SEQUENCE (SIZE (1..maxNrOfCCTrCHs)) OF ProtocolIE-Single-Container {{ CCTrCH-InformationItemIE-RL-
RestoreInd}}
CCTrCH-InformationItemIE-RL-RestoreInd NBAP-PROTOCOL-IES ::= {
   { ID id-CCTrCH-InformationItem-RL-RestoreInd
                                                  CRITICALITY
                                                                       ignore
                                                                                      TYPE
                                                                                                             CCTrCH-InformationItem-RL-
RestoreInd
                  PRESENCE mandatory
CCTrCH-InformationItem-RL-RestoreInd ::= SEQUENCE {
```

```
cCTrCH-ID
                                            CCTrCH-ID,
   iE-Extensions
                                         ProtocolExtensionContainer { { CCTrCH-InformationItem-RL-RestoreInd-ExtIEs } }
                                                                                                              OPTIONAL,
CCTrCH-InformationItem-RL-RestoreInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    -- COMPRESSED MODE COMMAND FDD
  CompressedModeCommand ::= SEQUENCE {
                                            {{CompressedModeCommand-IEs}},
   protocolIEs
                       ProtocolIE-Container
                       ProtocolExtensionContainer {{CompressedModeCommand-Extensions}}
   protocolExtensions
                                                                                              OPTIONAL,
CompressedModeCommand-IEs NBAP-PROTOCOL-IES ::= {
         id-NodeB-CommunicationContextID
                                                                              NodeB-CommunicationContextID
   { ID
                                            CRITICALITY
                                                             ignore
                                                                       TYPE
                                                                                                               PRESENCE
   mandatory } |
   { ID
         id-Active-Pattern-Sequence-Information CRITICALITY
                                                             ignore
                                                                       TYPE
                                                                              Active-Pattern-Sequence-Information
                                                                                                              PRESENCE
   mandatory },
   . . .
CompressedModeCommand-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- ERROR INDICATION
__ ********************************
ErrorIndication ::= SEQUENCE {
                       ProtocolIE-Container
                                           {{ErrorIndication-IEs}},
   protocolIEs
                       ProtocolExtensionContainer {{ErrorIndication-Extensions}}
   protocolExtensions
                                                                              OPTIONAL,
ErrorIndication-IEs NBAP-PROTOCOL-IES ::= {
```

```
ID
           id-CRNC-CommunicationContextID
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                  CRNC-CommunicationContextID
                                                                                                                 PRESENCE optional }
     ID
          id-NodeB-CommunicationContextID
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                  NodeB-CommunicationContextID
                                                                                                                 PRESENCE optional }
     ID
          id-Cause
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                                                            PRESENCE
   optional
   { ID
          id-CriticalityDiagnostics
                                            CRITICALITY
                                                           ignore
                                                                          TYPE
                                                                                  CriticalityDiagnostics
                                                                                                                    PRESENCE optional },
   . . .
ErrorIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  *****************
-- PRIVATE MESSAGE
__ *********************
PrivateMessage ::= SEQUENCE {
                  PrivateIE-Container {{PrivateMessage-IEs}},
   privateIEs
PrivateMessage-IEs NBAP-PRIVATE-IES ::= {
-- PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST FDD
__ ******************
PhysicalSharedChannelReconfigurationRequestFDD ::= SEQUENCE {
                      ProtocolIE-Container {{PhysicalSharedChannelReconfigurationRequestFDD-IEs}},
   protocolExtensions ProtocolExtensionContainer {{PhysicalSharedChannelReconfigurationRequestFDD-Extensions}}
                                                                                                              OPTIONAL,
PhysicalSharedChannelReconfigurationRequestFDD-IEs NBAP-PROTOCOL-IES ::= {
          id-C-ID
   { ID
                                                    CRITICALITY
                                                                   reject
                                                                                  TYPE
                                                                                         C-ID
                                                                                                                               PRESENCE
   mandatory } |
   { ID
          id-SFN
                                                    CRITICALITY
                                                                   reject
                                                                                  TYPE
                                                                                         SFN
                                                                                                                               PRESENCE
   optional} |
   { ID
                                                                                         MaximumTransmissionPower
          id-HS-PDSCH-HS-SCCH-MaxPower-PSCH-ReconfRgst
                                                       CRITICALITY
                                                                      reject
                                                                                  TYPE
                                                                                                                               PRESENCE
   optional
   { ID
          id-HS-PDSCH-HS-SCCH-ScramblingCode-PSCH-ReconfRqst CRITICALITY
                                                                          reiect
                                                                                 TYPE
                                                                                         DL-ScramblingCode
                                                                                                                               PRESENCE
   optional
   { ID
          id-HS-PDSCH-FDD-Code-Information-PSCH-ReconfRqst
                                                           CRITICALITY
                                                                          reject TYPE
                                                                                         HS-PDSCH-FDD-Code-Information
                                                                                                                               PRESENCE
   { ID
          id-HS-SCCH-FDD-Code-Information-PSCH-ReconfRqst
                                                           CRITICALITY
                                                                          reject TYPE
                                                                                         HS-SCCH-FDD-Code-Information
                                                                                                                               PRESENCE
   optional
```

```
PhysicalSharedChannelReconfigurationRequestFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
-- PHYSICAL SHARED CHANNEL RECONFIGURATION REQUEST TDD
__ *********************
PhysicalSharedChannelReconfigurationRequestTDD ::= SEQUENCE {
                       ProtocolIE-Container {{PhysicalSharedChannelReconfigurationRequestTDD-IEs}},
   protocolExtensions ProtocolExtensionContainer {{PhysicalSharedChannelReconfigurationRequestTDD-Extensions}}
                                                                                                                   OPTIONAL.
PhysicalSharedChannelReconfigurationRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
           id-C-ID
                                                      CRITICALITY
                                                                      reject
                                                                                      TYPE
                                                                                             C-ID
    PRESENCE
               mandatory } |
    ( TD
          id-SFN
                                                      CRITICALITY
                                                                      reject
                                                                                      TYPE
                                                                                             SFN
       PRESENCE
                   optional}
          id-PDSCHSets-AddList-PSCH-ReconfRqst
                                                      CRITICALITY
                                                                      reject
                                                                                      TYPE
                                                                                             PDSCHSets-AddList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
    optional
   { ID
                                                      CRITICALITY
          id-PDSCHSets-ModifyList-PSCH-ReconfRqst
                                                                      reject
                                                                                      TYPE
                                                                                             PDSCHSets-ModifyList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
    optional
    { ID
           id-PDSCHSets-DeleteList-PSCH-ReconfRqst
                                                                      reject
                                                                                      TYPE
                                                                                             PDSCHSets-DeleteList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
                                                      CRITICALITY
    optional } |
    { ID
           id-PUSCHSets-AddList-PSCH-ReconfRgst
                                                       CRITICALITY
                                                                      reject
                                                                                      TYPE
                                                                                             PUSCHSets-AddList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
    optional
    { ID
          id-PUSCHSets-ModifyList-PSCH-ReconfRgst
                                                      CRITICALITY
                                                                      reject
                                                                                      TYPE
                                                                                             PUSCHSets-ModifyList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
    optional
           id-PUSCHSets-DeleteList-PSCH-ReconfRqst
                                                                      reject
                                                                                      TYPE
                                                                                             PUSCHSets-DeleteList-PSCH-ReconfRqst
                                                                                                                                     PRESENCE
                                                      CRITICALITY
    optional },
    . . .
PhysicalSharedChannelReconfigurationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
           id-HS-PDSCH-TDD-Information-PSCH-ReconfRqst
                                                              CRITICALITY
                                                                              reject
                                                                                         EXTENSION HS-PDSCH-TDD-Information-PSCH-ReconfRqst
    PRESENCE
               optional
    { ID
           id-Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
                                                              CRITICALITY
                                                                              reject
                                                                                         EXTENSION Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
           PRESENCE optional
           id-Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
                                                                                         EXTENSION Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
                                                              CRITICALITY
                                                                              reject
           PRESENCE optional
    { ID
           id-Delete-From-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
                                                                  CRITICALITY
                                                                                  reject
                                                                                             EXTENSION Delete-From-HS-SCCH-Resource-Pool-PSCH-
               PRESENCE optional },
ReconfRqst
PDSCHSets-AddList-PSCH-ReconfRqst ::= SEOUENCE (SIZE (1..maxNrOfPDSCHSets)) OF PDSCHSets-AddItem-PSCH-ReconfRqst
PDSCHSets-AddItem-PSCH-ReconfRqst
                                   ::= SEOUENCE {
   pDSCHSet-ID
                                              PDSCHSet-ID,
   pDSCH-InformationList
                                              PDSCH-Information-AddList-PSCH-ReconfRqst
```

```
ProtocolExtensionContainer { {PDSCHSets-AddItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
                                                                                                                        OPTIONAL,
PDSCHSets-AddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
    {ID id-PDSCH-AddInformation-LCR-PSCH-ReconfRgst
                                                      CRITICALITY reject
                                                                             EXTENSION PDSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst
               optional}, -- Mandatory for 1.28Mcps TDD
   PRESENCE
PDSCH-Information-AddList-PSCH-ReconfRqst ::= ProtocolIE-Single-Container {{ PDSCH-Information-AddListIEs-PSCH-ReconfRqst }}
-- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
PDSCH-Information-AddListIEs-PSCH-ReconfRqst
                                             NBAP-PROTOCOL-IES ::= {
    {ID id-PDSCH-Information-AddListIE-PSCH-ReconfRqst CRITICALITY reject
                                                                             TYPE
                                                                                     PDSCH-Information-AddItem-PSCH-ReconfRqst
                                                                                                                                    PRESENCE
   mandatory}
PDSCH-Information-AddItem-PSCH-ReconfRgst ::= SEQUENCE {
    repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
    tdd-PhysicalChannelOffset
                                              TDD-PhysicalChannelOffset,
    dL-Timeslot-InformationAddList-PSCH-ReconfRqst
                                                             DL-Timeslot-InformationAddList-PSCH-ReconfRqst,
   iE-Extensions
                                              ProtocolExtensionContainer { { PDSCH-Information-AddItem-PSCH-ReconfRgst-ExtIEs} }
                                                                                                                                 OPTIONAL,
PDSCH-Information-AddItem-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Timeslot-InformationAddList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1.. maxNrOfDLTSs)) OF DL-Timeslot-InformationAddItem-PSCH-ReconfRqst
DL-Timeslot-InformationAddItem-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlot
                                          TimeSlot,
                                          MidambleShiftAndBurstType,
   midambleShiftAndBurstType
   tFCI-Presence
                                          TFCI-Presence,
                                                          DL-Code-InformationAddList-PSCH-ReconfRqst,
    dL-Code-InformationAddList-PSCH-ReconfRqst
   iE-Extensions
                                          ProtocolExtensionContainer { { DL-Timeslot-InformationAddItem-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                   OPTIONAL,
    . . .
DL-Timeslot-InformationAddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-InformationAddList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHs)) OF DL-Code-InformationAddItem-PSCH-ReconfRqst
DL-Code-InformationAddItem-PSCH-ReconfRqst ::= SEQUENCE {
   pDSCH-ID
                                          PDSCH-ID,
    tdd-ChannelisationCode
                                          TDD-ChannelisationCode,
   iE-Extensions
```

```
DL-Code-InformationAddItem-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod,
   repetitionLength
                                          RepetitionLength,
    tdd-PhysicalChannelOffset
                                          TDD-PhysicalChannelOffset,
   dL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst
                                                                  DL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst,
                                              ProtocolExtensionContainer { {PDSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
PDSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1.. maxNrOfDLTSLCRs)) OF DL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst
DL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
   timeSlotLCR
                                          TimeSlotLCR,
   midambleShiftLCR
                                          MidambleShiftLCR,
   tFCI-Presence
                                          TFCI-Presence,
   dL-Code-InformationAddList-LCR-PSCH-ReconfRqst
                                                             DL-Code-InformationAddList-LCR-PSCH-ReconfRqst,
                                          ProtocolExtensionContainer { { DL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
DL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-InformationAddList-LCR-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHs)) OF DL-Code-InformationAddItem-LCR-PSCH-ReconfRqst
DL-Code-InformationAddItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
   pDSCH-ID
                                          PDSCH-ID,
    tdd-ChannelisationCodeLCR
                                          TDD-ChannelisationCodeLCR,
                                          ProtocolExtensionContainer { { DL-Code-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
                                                                                                                                    OPTIONAL,
DL-Code-InformationAddItem-LCR-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCHSets-ModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHSets)) OF PDSCHSets-ModifyItem-PSCH-ReconfRqst
PDSCHSets-ModifyItem-PSCH-ReconfRqst
                                       ::= SEOUENCE {
   pDSCHSet-ID
                                              PDSCHSet-ID,
   pDSCH-InformationList
                                              PDSCH-Information-ModifyList-PSCH-ReconfRqst,
   iE-Extensions
```

```
PDSCHSets-ModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    {ID id-PDSCH-ModifyInformation-LCR-PSCH-ReconfRqst CRITICALITY reject
                                                                             EXTENSION PDSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst
                       optional}, -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
PDSCH-Information-ModifyList-PSCH-ReconfRqst ::= ProtocolIE-Single-Container {{ PDSCH-Information-ModifyListIEs-PSCH-ReconfRqst }}
PDSCH-Information-ModifyListIEs-PSCH-ReconfRqst NBAP-PROTOCOL-IES ::= {
    PDSCH-Information-ModifyItem-PSCH-ReconfRqst
   PRESENCE
               optional -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
PDSCH-Information-ModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod
                                                                             OPTIONAL,
   repetitionLength
                                          RepetitionLength
                                                                             OPTIONAL,
    tdd-PhysicalChannelOffset
                                              TDD-PhysicalChannelOffset
                                                                             OPTIONAL,
   dL-Timeslot-InformationModifyList-PSCH-ReconfRqst
                                                                 DL-Timeslot-InformationModifyList-PSCH-ReconfRqst
                                                                                                                     OPTIONAL,
   iE-Extensions
                                              ProtocolExtensionContainer { {PDSCH-Information-ModifyItem-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                   OPTIONAL,
PDSCH-Information-ModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Timeslot-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1.. maxNrOfDLTSs)) OF DL-Timeslot-InformationModifyItem-PSCH-ReconfRqst
DL-Timeslot-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   timeSlot
                                          TimeSlot,
   midambleShiftAndBurstType
                                          MidambleShiftAndBurstType
                                                                   OPTIONAL,
    tFCI-Presence
                                          TFCI-Presence OPTIONAL,
   dL-Code-InformationModifyList-PSCH-ReconfRqst
                                                             DL-Code-InformationModifyList-PSCH-ReconfRqst
   iE-Extensions
                                          ProtocolExtensionContainer { { DL-Timeslot-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   OPTIONAL,
DL-Timeslot-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHs)) OF DL-Code-InformationModifyItem-PSCH-ReconfRqst
DL-Code-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   pDSCH-ID
                                          PDSCH-ID.
    tdd-ChannelisationCode
                                          TDD-ChannelisationCode,
                                          ProtocolExtensionContainer { { DL-Code-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
                                                                                                                                OPTIONAL,
    . . .
```

```
DL-Code-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
    repetitionPeriod
                                          RepetitionPeriod
                                                                              OPTIONAL,
   repetitionLength
                                          RepetitionLength
                                                                              OPTIONAL,
                                              TDD-PhysicalChannelOffset
    tdd-PhysicalChannelOffset
                                                                              OPTIONAL,
   dL-Timeslot-LCR-InformationModifyList-PSCH-ReconfRqst
                                                                      DL-Timeslot-LCR-InformationModifyList-PSCH-ReconfRqst
                                                                                                                               OPTIONAL,
                                              ProtocolExtensionContainer { {PDSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
PDSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Timeslot-LCR-InformationModifyList-PSCH-ReconfRqst ::= SEOUENCE (SIZE (1.. maxNrOfDLTSLCRs)) OF DL-Timeslot-InformationModifyItem-PSCH-
ReconfRast
DL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlotLCR
                                          TimeSlotLCR,
   midambleShiftLCR
                                          MidambleShiftLCR
                                                              OPTIONAL
   tFCI-Presence
                                          TFCI-Presence OPTIONAL,
   {\tt dL-Code-LCR-InformationModifyList-PSCH-ReconfRqst}
                                                                  DL-Code-LCR-InformationModifyList-PSCH-ReconfRqst
                                          ProtocolExtensionContainer { { DL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
DL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-Code-LCR-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHs)) OF DL-Code-InformationModifyItem-PSCH-ReconfRqst
DL-Code-LCR-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   pDSCH-ID
                                          PDSCH-ID,
    tdd-ChannelisationCodeLCR
                                              TDD-ChannelisationCodeLCR,
                                          ProtocolExtensionContainer { | DL-Code-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
DL-Code-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCHSets-DeleteList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPDSCHSets)) OF PDSCHSets-DeleteItem-PSCH-ReconfRqst
PDSCHSets-DeleteItem-PSCH-ReconfRqst
                                        ::= SEOUENCE {
   pDSCHSet-ID
                                              PDSCHSet-ID,
   iE-Extensions
```

```
PDSCHSets-DeleteItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PUSCHSets-AddList-PSCH-ReconfRgst ::= SEOUENCE (SIZE (1..maxNrOfPUSCHSets)) OF PUSCHSets-AddItem-PSCH-ReconfRgst
PUSCHSets-AddItem-PSCH-ReconfRgst
                                     ::= SEOUENCE {
    pUSCHSet-ID
                                                PUSCHSet-ID,
   pUSCH-InformationList
                                                PUSCH-Information-AddList-PSCH-ReconfRqst
    -- Mandatory for 3.84Mcps TDD, Not Applicable to 1.28Mcps TDD
   iE-Extensions
                                                ProtocolExtensionContainer { {PUSCHSets-AddItem-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                             OPTIONAL.
PUSCHSets-AddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
    {ID id-PUSCH-AddInformation-LCR-PSCH-ReconfRqst
                                                        CRITICALITY reject
                                                                                EXTENSION
                                                                                            PUSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst
               optional \ , -- Mandatory for 1.28Mcps TDD, Not Applicable to 3.84Mcps TDD
    PRESENCE
    . . .
PUSCH-Information-AddList-PSCH-ReconfRast ::= ProtocolIE-Single-Container {{ PUSCH-Information-AddListIEs-PSCH-ReconfRast }}
PUSCH-Information-AddListIEs-PSCH-ReconfRqst NBAP-PROTOCOL-IES ::= {
    {ID id-PUSCH-Information-AddListIE-PSCH-ReconfRqst CRITICALITY reject
                                                                                TYPE
                                                                                        PUSCH-Information-AddItem-PSCH-ReconfRqst
                                                                                                                                         PRESENCE
    mandatory}
PUSCH-Information-AddItem-PSCH-ReconfRqst ::= SEQUENCE {
    repetitionPeriod
                                            RepetitionPeriod,
    repetitionLength
                                            RepetitionLength,
    tdd-PhysicalChannelOffset
                                            TDD-PhysicalChannelOffset,
    uL-Timeslot-InformationAddList-PSCH-ReconfRgst
                                                                UL-Timeslot-InformationAddList-PSCH-ReconfRgst,
    iE-Extensions
                                                ProtocolExtensionContainer { {PUSCH-Information-AddItem-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                      OPTIONAL,
PUSCH-Information-AddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Timeslot-InformationAddList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfULTSs)) OF UL-Timeslot-InformationAddItem-PSCH-ReconfRqst
UL-Timeslot-InformationAddItem-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlot
                                            TimeSlot,
   midambleShiftAndBurstType
                                            MidambleShiftAndBurstType,
    tFCI-Presence
                                            TFCI-Presence,
    uL-Code-InformationAddList-PSCH-ReconfRqst
                                                            UL-Code-InformationAddList-PSCH-ReconfRgst,
                                            ProtocolExtensionContainer { { UL-Timeslot-InformationAddItem-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
                                                                                                                                         OPTIONAL,
    . . .
```

```
UL-Timeslot-InformationAddItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Code-InformationAddList-PSCH-ReconfRqst ::= SEOUENCE (SIZE (1..maxNrOfPUSCHs)) OF UL-Code-InformationAddItem-PSCH-ReconfRqst
UL-Code-InformationAddItem-PSCH-ReconfRqst ::= SEQUENCE {
    pUSCH-ID
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode,
                                            ProtocolExtensionContainer { { UL-Code-InformationAddItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
                                                                                                                                   OPTIONAL,
UL-Code-InformationAddItem-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PUSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst ::= SEQUENCE {
    repetitionPeriod
                                            RepetitionPeriod,
    repetitionLength
                                            RepetitionLength,
    tdd-PhysicalChannelOffset
                                            TDD-PhysicalChannelOffset,
    uL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst
                                                                    UL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst,
                                                ProtocolExtensionContainer { {PUSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
   OPTIONAL,
PUSCH-AddInformation-LCR-AddItem-PSCH-ReconfRqst-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
UL-Timeslot-InformationAddList-LCR-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1.. maxNrOfULTSLCRs)) OF UL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst
UL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
    midambleShiftLCR
                                            MidambleShiftLCR,
    tFCI-Presence
                                            TFCI-Presence,
                                                                UL-Code-InformationAddList-LCR-PSCH-ReconfRqst,
    uL-Code-InformationAddList-LCR-PSCH-ReconfRgst
                                            ProtocolExtensionContainer { { UL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
    OPTIONAL,
UL-Timeslot-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
UL-Code-InformationAddList-LCR-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPUSCHs)) OF UL-Code-InformationAddItem-LCR-PSCH-ReconfRqst
UL-Code-InformationAddItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
    pUSCH-ID
                                            PUSCH-ID,
    tdd-ChannelisationCodeLCR
                                            TDD-ChannelisationCodeLCR,
    iE-Extensions
                                            ProtocolExtensionContainer { { UL-Code-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                         OPTIONAL,
    . . .
```

```
UL-Code-InformationAddItem-LCR-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PUSCHSets-ModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPUSCHSets)) OF PUSCHSets-ModifyItem-PSCH-ReconfRqst
PUSCHSets-ModifyItem-PSCH-ReconfRqst
                                       ::= SEOUENCE {
   pUSCHSet-ID
                                              PUSCHSet-ID,
                                              PUSCH-Information-ModifyList-PSCH-ReconfRqst
   pUSCH-InformationList
                                                                                             OPTIONAL,
    -- Applicable to 3.84Mcps TDD only
   iE-Extensions
                                              ProtocolExtensionContainer { {PUSCHSets-ModifyItem-PSCH-ReconfRqst-ExtIEs} }
    . . .
PUSCHSets-ModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    {ID id-PUSCH-ModifyInformation-LCR-PSCH-ReconfRqst CRITICALITY reject
                                                                             EXTENSION PUSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst
                      optional}, -- Applicable to 1.28Mcps TDD only
    . . .
PUSCH-Information-ModifyList-PSCH-ReconfRqst ::= ProtocolIE-Single-Container {{ PUSCH-Information-ModifyListIEs-PSCH-ReconfRqst }}
PUSCH-Information-ModifyListIEs-PSCH-ReconfRqst NBAP-PROTOCOL-IES ::= {
    TYPE
                                                                                         PUSCH-Information-ModifyItem-PSCH-ReconfRqst
    PRESENCE
               mandatory}
PUSCH-Information-ModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   repetitionPeriod
                                          RepetitionPeriod
                                                                             OPTIONAL,
   repetitionLength
                                          RepetitionLength
                                                                             OPTIONAL,
    tdd-PhysicalChannelOffset
                                          TDD-PhysicalChannelOffset
                                                                             OPTIONAL,
   uL-Timeslot-InformationModifyList-PSCH-ReconfRqst
                                                                  UL-Timeslot-InformationModifyList-PSCH-ReconfRqst
                                              ProtocolExtensionContainer { {PUSCH-Information-ModifyItem-PSCH-ReconfRgst-ExtIEs} }
   iE-Extensions
                                                                                                                                    OPTIONAL,
       . . .
PUSCH-Information-ModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Timeslot-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfULTSs)) OF UL-Timeslot-InformationModifyItem-PSCH-ReconfRqst
UL-Timeslot-InformationModifyItem-PSCH-ReconfRgst ::= SEOUENCE {
   timeSlot
                                          TimeSlot,
   midambleShiftAndBurstTvpe
                                          MidambleShiftAndBurstType
   tFCI-Presence
                                          TFCI-Presence OPTIONAL,
    uL-Code-InformationModifyList-PSCH-ReconfRqst
                                                              UL-Code-InformationModifyList-PSCH-ReconfRqst
                                          ProtocolExtensionContainer { { UL-Timeslot-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
```

```
UL-Timeslot-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Code-InformationModifyList-PSCH-ReconfRqst ::= SEOUENCE (SIZE (1..maxNrOfPUSCHs)) OF UL-Code-InformationModifyItem-PSCH-ReconfRqst
UL-Code-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
   pUSCH-ID
    tdd-ChannelisationCode
                                          TDD-ChannelisationCode,
                                          ProtocolExtensionContainer { { UL-Code-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
UL-Code-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PUSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst ::= SEQUENCE
   repetitionPeriod
                                          RepetitionPeriod
                                                                 OPTIONAL,
   repetitionLength
                                          RepetitionLength
                                                                 OPTIONAL,
    tdd-PhysicalChannelOffset
                                          TDD-PhysicalChannelOffset OPTIONAL,
   uL-Timeslot-InformationModifyList-LCR-PSCH-ReconfRqst
                                                                     UL-Timeslot-LCR-InformationModifyList-PSCH-ReconfRqst
                                              ProtocolExtensionContainer { {PUSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
PUSCH-ModifyInformation-LCR-ModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-Timeslot-LCR-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfULTSLCRs)) OF UL-Timeslot-InformationModifyList-PSCH-ReconfRqst
UL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlotLCR
                                          TimeSlotLCR,
   midambleShiftLCR
                                          MidambleShiftLCR
                                                             OPTIONAL
    tFCI-Presence
                                          TFCI-Presence
                                                             OPTIONAL,
    uL-Code-InformationModifyList-PSCH-ReconfRqst
                                                             UL-Code-InformationModifyList-PSCH-ReconfRqst
                                          ProtocolExtensionContainer { { UL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
UL-Timeslot-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
UL-Code-LCR-InformationModifyList-PSCH-ReconfRqst ::= SEQUENCE (SIZE (1..maxNrOfPUSCHs)) OF UL-Code-InformationModifyItem-PSCH-ReconfRqst
UL-Code-LCR-InformationModifyItem-PSCH-ReconfRqst ::= SEOUENCE {
   pUSCH-ID
                                          PUSCH-ID,
    tdd-ChannelisationCodeLCR
                                              TDD-ChannelisationCodeLCR,
   iE-Extensions
                                          OPTIONAL,
```

```
UL-Code-LCR-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PUSCHSets-DeleteList-PSCH-ReconfRgst ::= SEOUENCE (SIZE (1..maxNrOfPUSCHSets)) OF PUSCHSets-DeleteItem-PSCH-ReconfRgst
PUSCHSets-DeleteItem-PSCH-ReconfRqst
                                         ::= SEOUENCE {
    pUSCHSet-ID
                                                PUSCHSet-ID,
                                                ProtocolExtensionContainer { {PUSCHSets-DeleteItem-PSCH-ReconfRqst-ExtIEs} } OPTIONAL,
    iE-Extensions
PUSCHSets-DeleteItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-PDSCH-TDD-Information-PSCH-ReconfRqst ::= SEQUENCE {
    dL-HS-PDSCH-Timeslot-Information-PSCH-ReconfRqst
                                                                        DL-HS-PDSCH-Timeslot-Information-PSCH-ReconfRqst
                                                                                                                            OPTIONAL,
    dL-HS-PDSCH-Timeslot-Information-LCR-PSCH-ReconfRqst
                                                                        DL-HS-PDSCH-Timeslot-Information-LCR-PSCH-ReconfRqst OPTIONAL,
   iE-Extensions
                                                ProtocolExtensionContainer { { HS-PDSCH-TDD-Information-PSCH-ReconfRqst-ExtIEs} }
        . . .
HS-PDSCH-TDD-Information-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-HS-PDSCH-Timeslot-Information-PSCH-ReconfRgst ::= SEQUENCE (SIZE (1..maxNrOfDLTSs)) OF DL-HS-PDSCH-Timeslot-InformationItem-PSCH-ReconfRgst
DL-HS-PDSCH-Timeslot-InformationItem-PSCH-ReconfRqst::= SEQUENCE {
    timeSlot
                                            TimeSlot,
   midambleShiftAndBurstTvpe
                                            MidambleShiftAndBurstType,
   iE-Extensions
                                            ProtocolExtensionContainer { { DL-HS-PDSCH-Timeslot-InformationItem-PSCH-ReconfRqst-ExtIEs} }
   OPTIONAL,
DL-HS-PDSCH-Timeslot-InformationItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-HS-PDSCH-Timeslot-Information-LCR-PSCH-ReconfRgst ::= SEOUENCE (SIZE (1..maxNrOfDLTSLCRs)) OF DL-HS-PDSCH-Timeslot-InformationItem-LCR-PSCH-
ReconfRast
DL-HS-PDSCH-Timeslot-InformationItem-LCR-PSCH-ReconfRqst::= SEQUENCE {
    timeSlot
                                            TimeSlotLCR,
    midambleShiftAndBurstType
                                            MidambleShiftLCR,
                                            ProtocolExtensionContainer { { DL-HS-PDSCH-Timeslot-InformationItem-LCR-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
   OPTIONAL,
```

```
DL-HS-PDSCH-Timeslot-InformationItem-LCR-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRqst::= SEQUENCE {
   hS-SCCH-Information-PSCH-ReconfRqst
                                          HS-SCCH-Information-PSCH-ReconfRqst
                                                                                 OPTIONAL,
   hs-scch-Information-LCR-Psch-Reconfrast Hs-scch-Information-Psch-Reconfrast
                                                                                OPTIONAL,
   iE-Extensions
                                          ProtocolExtensionContainer { Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                OPTIONAL,
Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-SCCH-Information-PSCH-ReconfRqst::= SEQUENCE (SIZE (1..maxNrOfHSSCCHs)) OF HS-SCCH-InformationItem-PSCH-ReconfRqst
HS-SCCH-InformationItem-PSCH-ReconfRqst ::= SEQUENCE {
   hs-sccH-ID
                                          HS-SCCH-ID,
   timeSlot
                                          TimeSlot,
   midambleShiftAndBurstType
                                          MidambleShiftAndBurstType,
                                          TDD-ChannelisationCode,
    tdd-ChannelisationCode
   hS-SCCH-MaxPower
                                          DL-Power,
   hS-SICH-Information
                                          HS-SICH-Information-PSCH-ReconfRqst,
                                          ProtocolExtensionContainer { { HS-SCCH-InformationItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
HS-SCCH-InformationItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-SICH-Information-PSCH-ReconfRqst ::= SEQUENCE {
   timeSlot
                                          TimeSlot,
   midambleShiftAndBurstType
                                          MidambleShiftAndBurstType,
   tdd-ChannelisationCode
                                          TDD-ChannelisationCode,
                                          iE-Extensions
                                                                                                                       OPTIONAL,
HS-SICH-Information-PSCH-ReconfRqst-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
HS-SCCH-Information-LCR-PSCH-ReconfRqst::= SEQUENCE (SIZE (1..maxNrOfHSSCCHs)) OF HS-SCCH-InformationItem-LCR-PSCH-ReconfRqst
HS-SCCH-InformationItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
   hs-sccH-ID
                                          HS-SCCH-ID.
   timeSlotLCR
                                          TimeSlotLCR,
   midambleShiftLCR
                                          MidambleShiftLCR,
   tdd-ChannelisationCode
                                          TDD-ChannelisationCodeLCR,
   hS-SCCH-MaxPower
                                          DL-Power,
   hS-SICH-Information-LCR
                                          HS-SICH-Information-LCR-PSCH-ReconfRqst,
```

```
ProtocolExtensionContainer { { HS-SCCH-InformationItem-LCR-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
                                                                                                                                     OPTIONAL,
HS-SCCH-InformationItem-LCR-PSCH-ReconfRgst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-SICH-Information-LCR-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
   midambleShiftLCR
                                           MidambleShiftLCR,
    tdd-ChannelisationCodeLCR
                                           TDD-ChannelisationCodeLCR,
    iE-Extensions
                                            ProtocolExtensionContainer { { HS-SICH-Information-LCR-PSCH-ReconfRqst-ExtIEs} }
HS-SICH-Information-LCR-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRqst::= SEQUENCE {
    hS-SCCH-InformationModify-PSCH-ReconfRqst
                                                    HS-SCCH-InformationModify-PSCH-ReconfRqst
   hS-SCCH-InformationModify-LCR-PSCH-ReconfRqst HS-SCCH-InformationModify-PSCH-ReconfRqst OPTIONAL,
                                                    ProtocolExtensionContainer { { Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRgst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRgst-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
HS-SCCH-InformationModify-PSCH-ReconfRqst::= SEQUENCE (SIZE (1..maxNrOfHSSCCHs)) OF HS-SCCH-InformationModifyItem-PSCH-ReconfRqst
HS-SCCH-InformationModifyItem-PSCH-ReconfRgst
                                               ::= SEOUENCE {
   hs-sccH-ID
                                           HS-SCCH-ID,
    timeSlot
                                            TimeSlot
                                                       OPTIONAL,
    midambleShiftAndBurstType
                                            MidambleShiftAndBurstType OPTIONAL,
                                            TDD-ChannelisationCode OPTIONAL,
    tdd-ChannelisationCode
   hS-SCCH-MaxPower
                                            DL-Power
                                                       OPTIONAL,
   hS-SICH-Information
                                            HS-SICH-Information-PSCH-ReconfRqst
                                                                                    OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { HS-SCCH-InformationModifyItem-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                     OPTIONAL,
HS-SCCH-InformationModifyItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-SICH-InformationModify-PSCH-ReconfRgst
                                            ::= SEOUENCE
    timeSlot
                                            TimeSlot
                                                       OPTIONAL,
    midambleShiftAndBurstType
                                            MidambleShiftAndBurstType OPTIONAL,
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { HS-SICH-InformationModify-PSCH-ReconfRqst-ExtIEs} }
                                                                                                                                  OPTIONAL,
```

```
HS-SICH-InformationModify-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HS-SCCH-InformationModify-LCR-PSCH-ReconfRqst::= SEQUENCE (SIZE (1..maxNrOfHSSCCHs)) OF HS-SCCH-InformationModifyItem-LCR-PSCH-ReconfRqst
HS-SCCH-InformationModifyItem-LCR-PSCH-ReconfRqst ::= SEQUENCE {
   hs-sccH-ID
                                           HS-SCCH-ID,
    timeSlotLCR
                                           TimeSlotLCR
                                                           OPTIONAL,
                                           MidambleShiftLCR
   midambleShiftLCR
                                                               OPTIONAL,
    tdd-ChannelisationCode
                                           TDD-ChannelisationCodeLCR OPTIONAL,
   hS-SCCH-MaxPower
                                           DL-Power
                                                      OPTIONAL,
   hS-SICH-Information-LCR
                                           HS-SICH-Information-LCR-PSCH-ReconfRqst
                                                                                       OPTIONAL.
                                           ProtocolExtensionContainer { { HS-SCCH-InformationModifyItem-LCR-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
HS-SCCH-InformationModifyItem-LCR-PSCH-ReconfRqst-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
HS-SICH-InformationModify-LCR-PSCH-ReconfRqst ::= SEQUENCE {
    timeSlotLCR
                                           TimeSlotLCR
                                                           OPTIONAL,
   midambleShiftLCR
                                           MidambleShiftLCR
                                                               OPTIONAL,
    tdd-ChannelisationCodeLCR
                                           TDD-ChannelisationCodeLCR OPTIONAL,
                                           ProtocolExtensionContainer { { HS-SICH-InformationModify-LCR-PSCH-ReconfRqst-ExtIEs} }
    iE-Extensions
    . . .
HS-SICH-InformationModify-LCR-PSCH-ReconfRqst-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
Delete-From-HS-SCCH-Resource-Pool-PSCH-ReconfRqst ::= SEOUENCE (SIZE (1..maxNrOfHSSCCHs)) OF Delete-From-HS-SCCH-Resource-PoolItem-PSCH-ReconfRqst
Delete-From-HS-SCCH-Resource-PoolItem-PSCH-ReconfRqst
                                                        ::= SEOUENCE {
   hs-sccH-ID
                                               ProtocolExtensionContainer { { Delete-From-HS-SCCH-Resource-PoolItem-PSCH-ReconfRqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
Delete-From-HS-SCCH-Resource-PoolItem-PSCH-ReconfRqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- PHYSICAL SHARED CHANNEL RECONFIGURATION RESPONSE
```

```
__ *******************
PhysicalSharedChannelReconfigurationResponse ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container {{PhysicalSharedChannelReconfigurationResponse-IEs}},
   protocolExtensions ProtocolExtensionContainer {{PhysicalSharedChannelReconfigurationResponse-Extensions}}
                                                                                                                      OPTIONAL,
PhysicalSharedChannelReconfigurationResponse-IEs NBAP-PROTOCOL-IES ::= {
          id-CriticalityDiagnostics
                                                                            CriticalityDiagnostics
   { ID
                                       CRITICALITY
                                                                 TYPE
                                                                                                            PRESENCE optional },
   . . .
PhysicalSharedChannelReconfigurationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    -- PHYSICAL SHARED CHANNEL RECONFIGURATION FAILURE
  PhysicalSharedChannelReconfigurationFailure ::= SEQUENCE {
                     ProtocolIE-Container {{PhysicalSharedChannelReconfigurationFailure-IEs}},
   protocolExtensions ProtocolExtensionContainer {{PhysicalSharedChannelReconfigurationFailure-Extensions}}
                                                                                                                     OPTIONAL,
PhysicalSharedChannelReconfigurationFailure-IES NBAP-PROTOCOL-IES ::= {
          id-CauseLevel-PSCH-ReconfFailure
                                               CRITICALITY ignore TYPE CauseLevel-PSCH-ReconfFailure
                                                                                                          PRESENCE mandatory } |
   { ID
          id-CriticalityDiagnostics
                                       CRITICALITY ignore
                                                                     CriticalityDiagnostics
                                                                                                          PRESENCE optional },
   . . .
PhysicalSharedChannelReconfigurationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CauseLevel-PSCH-ReconfFailure ::= CHOICE {
   generalCause
                         GeneralCauseList-PSCH-ReconfFailure,
   setSpecificCause
                         SetSpecificCauseList-PSCH-ReconfFailureTDD,
GeneralCauseList-PSCH-ReconfFailure ::= SEOUENCE {
   iE-Extensions
                             ProtocolExtensionContainer { GeneralCauseItem-PSCH-ReconfFailure-ExtIEs} }
                                                                                                            OPTIONAL,
   . . .
GeneralCauseItem-PSCH-ReconfFailure-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
SetSpecificCauseList-PSCH-ReconfFailureTDD ::= SEQUENCE {
    unsuccessful-PDSCHSetList-PSCH-ReconfFailureTDD Unsuccessful-PDSCHSetList-PSCH-ReconfFailureTDD
                                                                                                                     OPTIONAL.
    unsuccessful-PUSCHSetList-PSCH-ReconfFailureTDD Unsuccessful-PUSCHSetList-PSCH-ReconfFailureTDD
                                                                                                                     OPTIONAL.
                                                   ProtocolExtensionContainer { { SetSpecificCauseItem-PSCH-ReconfFailureTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
SetSpecificCauseItem-PSCH-ReconfFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Unsuccessful-PDSCHSetList-PSCH-ReconfFailureTDD ::= SEQUENCE (SIZE (0.. maxNrOfPDSCHSets)) OF ProtocolIE-Single-Container {{ Unsuccessful-
PDSCHSetItemIE-PSCH-ReconfFailureTDD }}
Unsuccessful-PDSCHSetItemIE-PSCH-ReconfFailureTDD NBAP-PROTOCOL-IES ::= {
           id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD CRITICALITY ignore TYPE Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDDPRESENCE
mandatory}
Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ::= SEQUENCE {
   pDSCHSet-ID
                           PDSCHSet-ID,
    cause
                           Cause,
                           ProtocolExtensionContainer { {Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
Unsuccessful-PUSCHSetList-PSCH-ReconfFailureTDD ::= SEQUENCE (SIZE (0.. maxNrOfPUSCHSets)) OF ProtocolIE-Single-Container {{ Unsuccessful-
PUSCHSetItemIE-PSCH-ReconfFailureTDD }}
Unsuccessful-PUSCHSetItemIE-PSCH-ReconfFailureTDD NBAP-PROTOCOL-IES ::= {
           id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD CRITICALITY ignore TYPE Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDDPRESENCE
mandatory}
Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD ::= SEQUENCE {
                           PUSCHSet-ID,
   pUSCHSet-ID
    cause
                           Cause,
                           ProtocolExtensionContainer { {Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD-ExtIEs} } OPTIONAL.
    iE-Extensions
Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
__ ********************************
```

```
-- RESET REOUEST
ResetRequest ::= SEQUENCE {
                            ProtocolIE-Container
                                                     {{ResetRequest-IEs}},
    protocolIEs
                            ProtocolExtensionContainer {{ResetRequest-Extensions}}
    protocolExtensions
                                                                                         OPTIONAL,
ResetRequest-IEs NBAP-PROTOCOL-IES ::= {
    {ID id-ResetIndicator
                                CRITICALITY ignore
                                                         TYPE
                                                                 ResetIndicator
                                                                                                 mandatory },
                                                                                     PRESENCE
    . . .
ResetRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    . . .
ResetIndicator ::= CHOICE {
    communicationContext
                                    CommunicationContextList-Reset,
    communicationControlPort
                                    CommunicationControlPortList-Reset,
    nodeB
                                    NULL,
CommunicationContextList-Reset ::= SEQUENCE
    communicationContextInfoList-Reset
                                            CommunicationContextInfoList-Reset,
    iE-Extensions
                                            ProtocolExtensionContainer { {CommunicationContextItem-Reset-ExtIEs} }
CommunicationContextItem-Reset-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
CommunicationContextInfoList-Reset ::= SEQUENCE (SIZE (1.. maxCommunicationContext))
                                                                                       OF ProtocolIE-Single-Container {{
CommunicationContextInfoItemIE-Reset }}
CommunicationContextInfoItemIE-Reset NBAP-PROTOCOL-IES ::= {
    {ID id-CommunicationContextInfoItem-Reset
                                                     CRITICALITY reject
                                                                            TYPE CommunicationContextInfoItem-Reset
                                                                                                                        PRESENCE mandatory }
```

```
CommunicationContextInfoItem-Reset ::= SEQUENCE {
   communicationContextType-Reset
                                         CommunicationContextType-Reset,
   iE-Extensions
                                         ProtocolExtensionContainer { { CommunicationContextInfoItem-Reset-ExtIEs} }
                                                                                                                      OPTIONAL,
CommunicationContextInfoItem-Reset-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommunicationContextType-Reset ::= CHOICE {
    cRNC-CommunicationContextID
                                         CRNC-CommunicationContextID,
    nodeB-CommunicationContextID
                                         NodeB-CommunicationContextID,
CommunicationControlPortList-Reset ::= SEOUENCE {
    communicationControlPortInfoList-Reset
                                             CommunicationControlPortInfoList-Reset,
   iE-Extensions
                                             OPTIONAL,
CommunicationControlPortItem-Reset-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommunicationControlPortInfoList-Reset ::= SEQUENCE (SIZE (1.. maxCCPinNodeB)) OF ProtocolIE-Single-Container
{{CommunicationControlPortInfoItemIE-Reset }}
CommunicationControlPortInfoItemIE-Reset NBAP-PROTOCOL-IES ::= {
    {ID id-CommunicationControlPortInfoItem-Reset
                                                     CRITICALITY reject
                                                                           TYPE CommunicationControlPortInfoItem-Reset
                                                                                                                         PRESENCE mandatory }
CommunicationControlPortInfoItem-Reset ::= SEQUENCE {
                                     CommunicationControlPortID,
    communicationControlPortID
   iE-Extensions
                                     ProtocolExtensionContainer { {CommunicationControlPortInfoItem-Reset-ExtIEs} } OPTIONAL,
```

```
CommunicationControlPortInfoItem-Reset-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    ****************
-- RESET RESPONSE
  *****************
ResetResponse ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                               {{ResetResponse-IEs}},
                        ProtocolExtensionContainer {{ResetResponse-Extensions}}
   protocolExtensions
                                                                                      OPTIONAL,
ResetResponse-IEs NBAP-PROTOCOL-IES ::= {
   {ID id-CriticalityDiagnostics
                                   CRITICALITY
                                                  ignore
                                                             TYPE
                                                                    CriticalityDiagnostics
                                                                                                           PRESENCE optional },
   . . .
ResetResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
-- INFORMATION EXCHANGE INITIATION REQUEST
  ····
InformationExchangeInitiationRequest ::= SEQUENCE {
                                               {{InformationExchangeInitiationRequest-IEs}},
   protocolIEs
                        ProtocolIE-Container
                        ProtocolExtensionContainer {{InformationExchangeInitiationRequest-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
   . . .
InformationExchangeInitiationRequest-IES NBAP-PROTOCOL-IES ::= {
          id-InformationExchangeID
                                                                                                        InformationExchangeID
   { ID
                                                             CRITICALITY reject
                                                                                      TYPE
                        mandatory }|
              PRESENCE
   { ID
          id-InformationExchangeObjectType-InfEx-Rqst
                                                         CRITICALITY reject
                                                                                   TYPE
                                                                                                        InformationExchangeObjectType-
InfEx-Rqst
              PRESENCE
                        mandatory }|
    { ID
          id-InformationType
                                              CRITICALITY reject
                                                                               TYPE
                                                                                      InformationType
                                                                                                                   PRESENCE mandatory
          id-InformationReportCharacteristics
    ID
                                                             CRITICALITY reject
                                                                                      TYPE
                                                                                                        InformationReportCharacteristics
                 PRESENCE
                            mandatory},
   . . .
InformationExchangeInitiationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
InformationExchangeObjectType-InfEx-Rgst ::= CHOICE {
                                 Cell-InfEx-Rgst,
   . . .
Cell-InfEx-Rqst ::= SEQUENCE {
   C-TD
                                 C-ID,
   iE-Extensions
                                 ProtocolExtensionContainer { { CellItem-InfEx-Rqst-ExtIEs} }
                                                                                                               OPTIONAL,
Cellitem-InfEx-Rqst-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ***************
-- INFORMATION EXCHANGE INITIATION RESPONSE
__ *********************
InformationExchangeInitiationResponse ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{InformationExchangeInitiationResponse-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer {{InformationExchangeInitiationResponse-Extensions}}
                                                                                                               OPTIONAL,
InformationExchangeInitiationResponse-IES NBAP-PROTOCOL-IES ::= {
   { ID id-InformationExchangeID
                                                            CRITICALITY ignore
                                                                                      TYPE
                                                                                                             InformationExchangeID
               PRESENCE
                        mandatory }|
   { ID
          id-InformationExchangeObjectType-InfEx-Rsp
                                                        CRITICALITY ignore
                                                                                          InformationExchangeObjectType-InfEx-Rsp
                                                                                                                                   PRESENCE
   optional }
   { ID
          id-CriticalityDiagnostics
                                                    CRITICALITY ignore
                                                                               TYPE
                                                                                      CriticalityDiagnostics
                                                                                                                        PRESENCE optional },
   . . .
InformationExchangeInitiationResponse-Extensions NBAP-PROTOCOL-EXTENSION ::= {
InformationExchangeObjectType-InfEx-Rsp ::= CHOICE {
   cell
                             Cell-InfEx-Rsp,
   . . .
Cell-InfEx-Rsp ::= SEQUENCE {
   requestedDataValue
                                 RequestedDataValue,
                                 ProtocolExtensionContainer { { CellItem-InfEx-Rsp-ExtIEs} }
   iE-Extensions
                                                                                                               OPTIONAL,
Cellitem-InfEx-Rsp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
****************
-- INFORMATION EXCHANGE INITIATION FAILURE
  InformationExchangeInitiationFailure ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                {{InformationExchangeInitiationFailure-IEs}},
                         ProtocolExtensionContainer {{InformationExchangeInitiationFailure-Extensions}}
   protocolExtensions
                                                                                                             OPTIONAL,
InformationExchangeInitiationFailure-IEs NBAP-PROTOCOL-IES ::= {
          id-InformationExchangeID
                                                                                                                   PRESENCE mandatory
                                                CRITICALITY
                                                                              TYPE
                                                                                     InformationExchangeID
     ID
          id-Cause
                                                                                                                   PRESENCE mandatory
                                        CRITICALITY
                                                       ignore
                                                                      TYPE
                                                                              Cause
          id-CriticalityDiagnostics
                                                                              CriticalityDiagnostics
                                                                                                              PRESENCE optional },
    { ID
                                        CRITICALITY
                                                       ignore
                                                                      TYPE
InformationExchangeInitiationFailure-Extensions NBAP-PROTOCOL-EXTENSION ::= {
-- INFORMATION REPORT
InformationReport ::= SEQUENCE
   protocolIEs
                         ProtocolIE-Container
                                                {{InformationReport-IEs}},
                         ProtocolExtensionContainer {{InformationReport-Extensions}}
   protocolExtensions
                                                                                         OPTIONAL.
InformationReport-IES NBAP-PROTOCOL-IES ::= {
          id-InformationExchangeID
                                                           CRITICALITY ignore
                                                                                     TYPE
                                                                                                           InformationExchangeID
              PRESENCE
                         mandatory }|
          id-InformationExchangeObjectType-InfEx-Rprt
                                                       CRITICALITY ignore
                                                                                 TYPE
                                                                                         InformationExchangeObjectType-InfEx-Rprt
                                                                                                                                 PRESENCE
   mandatory },
InformationReport-Extensions NBAP-PROTOCOL-EXTENSION ::= {
InformationExchangeObjectType-InfEx-Rprt ::= CHOICE {
   cell
                                 Cell-Inf-Rprt,
```

```
Cell-Inf-Rprt ::= SEQUENCE {
   requestedDataValueInformation RequestedDataValueInformation,
   iE-Extensions
                                ProtocolExtensionContainer {{ CellItem-Inf-Rprt-ExtIEs }}
                                                                                                         OPTIONAL,
   . . .
CellItem-Inf-Rprt-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  ****************
-- INFORMATION EXCHANGE TERMINATION REQUEST
InformationExchangeTerminationRequest ::= SEQUENCE
                                               {{InformationExchangeTerminationRequest-IEs}},
   protocolIEs
                         ProtocolIE-Container
   protocolExtensions
                         ProtocolExtensionContainer {{InformationExchangeTerminationRequest-Extensions}}
                                                                                                            OPTIONAL.
   . . .
InformationExchangeTerminationRequest-IEs NBAP-PROTOCOL-IES ::= {
   { ID
          id-InformationExchangeID
                                                                            TYPE
                                                                                    InformationExchangeID
                                                                                                               PRESENCE mandatory },
                                           CRITICALITY
                                                          ignore
   . . .
InformationExchangeTerminationRequest-Extensions NBAP-PROTOCOL-EXTENSION ::= {
  -- INFORMATION EXCHANGE FAILURE INDICATION
  ************************
InformationExchangeFailureIndication ::= SEQUENCE {
                                               {{InformationExchangeFailureIndication-IEs}},
   protocolIEs
                         ProtocolIE-Container
                             ProtocolExtensionContainer {{InformationExchangeFailureIndication-Extensions}}
   protocolExtensions
                                                                                                                 OPTIONAL,
InformationExchangeFailureIndication-IES NBAP-PROTOCOL-IES ::= {
          id-InformationExchangeID
                                           CRITICALITY ignore
                                                                     TYPE
                                                                             InformationExchangeID
                                                                                                               PRESENCE mandatory
    { ID
          id-Cause
                                    CRITICALITY ignore
                                                              TYPE
                                                                                                          PRESENCE mandatory },
                                                                     Cause
   . . .
InformationExchangeFailureIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

```
****************
  CELL SYNCHRONISATION INITIATION REQUEST TDD
  ******************
CellSynchronisationInitiationRequestTDD ::= SEOUENCE {
   protocolIEs
                          ProtocolIE-Container
                                                 {{CellSynchronisationInitiationRequestTDD-IEs}},
                          ProtocolExtensionContainer {{CellSynchronisationInitiationRequestTDD-Extensions}}
   protocolExtensions
                                                                                                               OPTIONAL,
CellSynchronisationInitiationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
          id-SYNCDlCodeId-TransInitLCR-CellSyncInitiationRgstTDD
                                                                     CRITICALITY
                                                                                                               EXTENSION SYNCDlCodeId-
TransInitLCR-CellSyncInitiationRqstTDD
                                          PRESENCE
                                                     optional
                                                                     -- 1.28Mcps TDD only
    { ID id-SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRqstTDD
                                                                         CRITICALITY
                                                                                                                  EXTENSION
                                                                                                                             SYNCDlCodeId-
MeasureInitLCR-CellSyncInitiationRgstTDD
                                              PRESENCE
                                                         optional
                                                                     }, -- 1.28Mcps TDD only
CellSynchronisationInitiationRequestTDD-IES NBAP-PROTOCOL-IES ::= {
     ID
           id-C-ID
                                          CRITICALITY
                                                         reject
                                                                     TYPE
                                                                            C-TD
                                                                                                                        PRESENCE mandatory
                                                                                        CellSyncBurstRepetitionPeriod PRESENCE mandatory
     ID
           id-cellSyncBurstRepetitionPeriod
                                                      CRITICALITY
                                                                     reiect
     ID
         id-timeslotInfo-CellSyncInitiationRqstTDD
                                                     CRITICALITY
                                                                     reject
                                                                                 TYPE
                                                                                        TimeslotInfo-CellSyncInitiationRqstTDD
    optional } | -- Mandatory for 3.84Mcps TDD only
           id-CellSyncBurstTransInit-CellSyncInitiationRgstTDD
    { ID
                                                                                 reject
                                                                                            TYPE
                                                                                                               CellSyncBurstTransInit-
                                                                 CRITICALITY
CellSyncInitiationRqstTDD
                              PRESENCE
                                          optional
                                                     } -- 3.84Mcps TDD only
          id-CellSyncBurstMeasureInit-CellSyncInitiationRgstTDD
                                                                     CRITICALITY
                                                                                    reject
                                                                                                               TYPE CellSyncBurstMeasureInit-
CellSyncInitiationRqstTDD
                              PRESENCE
                                          optional
                                                    }, -- 3.84Mcps TDD only
    . . .
CellSyncBurstTransInit-CellSyncInitiationRqstTDD::= SEQUENCE {
    cSBTransmissionID
                                          CSBTransmissionID,
    sfn
                                          SFN,
    cellSyncBurstCode
                                          CellSyncBurstCode,
                                          CellSyncBurstCodeShift,
    cellSyncBurstCodeShift
    initialDLTransPower
                                          DL-Power,
   iE-Extensions
                                          ProtocolExtensionContainer { { CellSyncBurstTransInit-CellSyncInitiationRqstTDD-ExtIEs} }
CellSyncBurstTransInit-CellSyncInitiationRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
TimeslotInfo-CellSyncInitiationRqstTDD::= SEQUENCE (SIZE (1..15)) OF TimeSlot
CellSyncBurstMeasureInit-CellSyncInitiationRgstTDD::= SEQUENCE {
    cSBMeasurementID
                                          CSBMeasurementID,
    cellSyncBurstCode
                                          CellSyncBurstCode,
    cellSyncBurstCodeShift
                                          CellSyncBurstCodeShift,
                                          SynchronisationReportType,
    synchronisationReportType
```

```
OPTIONAL,
    sfn
    synchronisationReportCharacteristics
                                          SynchronisationReportCharacteristics,
   iE-Extensions
                                          ProtocolExtensionContainer { { CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD-ExtIEs} }
   OPTIONAL,
CellSyncBurstMeasureInit-CellSyncInitiationRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SYNCDlCodeId-TransInitLCR-CellSyncInitiationRqstTDD::= SEQUENCE {
    cSBTransmissionID
                                          CSBTransmissionID,
   sfn
                                          SFN.
   uARFCN
                                          UARFCN,
   sYNCDlCodeId
                                          SYNCDlCodeId,
   dwPCH-Power
                                          DwPCH-Power,
                                          ProtocolExtensionContainer { { SYNCDlCodeId-TransInitLCR-CellSyncInitiationRqstTDD-ExtIEs } }
   iE-Extensions
   OPTIONAL,
    . . .
SYNCDlCodeId-TransInitLCR-CellSyncInitiationRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRqstTDD::= SEQUENCE {
    cSBMeasurementID
                                          CSBMeasurementID,
   sfn
                                          SFN
                                                          OPTIONAL,
   uARFCN
                                          UARFCN,
    sYNCDlCodeId
                                          SYNCDlCodeId,
                                          SynchronisationReportType,
    synchronisationReportType
    synchronisationReportCharacteristics
                                          SynchronisationReportCharacteristics,
                                          ProtocolExtensionContainer { { SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRqstTDD-ExtIEs } }
   iE-Extensions
   OPTIONAL,
    . . .
SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
  CELL SYNCHRONISATION INITIATION RESPONSE TDD
  CellSynchronisationInitiationResponseTDD ::= SEQUENCE
                                                  {{CellSynchronisationInitiationResponseTDD-IEs}},
   protocolIEs
                           ProtocolIE-Container
                           ProtocolExtensionContainer {{CellSynchronisationInitiationResponseTDD-Extensions}}
   protocolExtensions
                                                                                                                 OPTIONAL,
```

```
CellSynchronisationInitiationResponseTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationInitiationResponseTDD-IES NBAP-PROTOCOL-IES ::= {
          id-CriticalityDiagnostics
                                                                                       CriticalityDiagnostics
                                                     CRITICALITY
                                                                    ignore
                                                                                TYPE
                                                                                                                                 PRESENCE
   optional },
    . . .
       ***************
  CELL SYNCHRONISATION INITIATION FAILURE TDD
  CellSynchronisationInitiationFailureTDD ::= SEQUENCE
                          ProtocolIE-Container
                                                 {{CellSynchronisationInitiationFailureTDD-IEs}},
   protocolIEs
                          ProtocolExtensionContainer {{CellSynchronisationInitiationFailureTDD-Extensions}}
   protocolExtensions
                                                                                                             OPTIONAL,
CellSynchronisationInitiationFailureTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    . . .
CellSynchronisationInitiationFailureTDD-IES NBAP-PROTOCOL-IES ::= {
     ID
           id-Cause
                                             CRITICALITY
                                                             ignore
                                                                        TYPE
                                                                                Cause
                                                                                                                         PRESENCE mandatory
           id-CriticalityDiagnostics
                                                                               CriticalityDiagnostics
     ID
                                             CRITICALITY
                                                            ignore
                                                                        TYPE
                                                                                                                PRESENCE optional },
  CELL SYNCHRONISATION RECONFIGURATION REQUEST TDD
CellSynchronisationReconfigurationRequestTDD ::= SEQUENCE
                          ProtocolIE-Container
   protocolIEs
                                                 {{CellSynchronisationReconfigurationRequestTDD-IEs}},
                          ProtocolExtensionContainer {{CellSynchronisationReconfigurationRequestTDD-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
CellSynchronisationReconfigurationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
          id-NSubCyclesPerCyclePeriod-CellSyncReconfRqstTDD
                                                                CRITICALITY
                                                                               reject
                                                                                           EXTENSION
                                                                                                              NSubCyclesPerCyclePeriod
    PRESENCE
              optional
                        } | -- 1.28Mcps TDD only
          id-SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRqstTDD
                                                                    CRITICALITY
                                                                                                              EXTENSION
    { ID
                                                                                   reject
    SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRqstTDD
                                                            PRESENCE
                                                                        optional
                                                                                   } -- 1.28Mcps TDD only
          id-SYNCDlCodeIdMeasReconfigurationLCR-CellSyncReconfRqstTDD
                                                                        CRITICALITY
                                                                                       reject
                                                                                                                EXTENSION
    SYNCDlCodeIdMeasReconfigurationLCR-CellSyncReconfRqstTDD
                                                                PRESENCE
                                                                            optional
                                                                                       }, -- 1.28Mcps TDD only
```

```
CellSynchronisationReconfigurationRequestTDD-IEs NBAP-PROTOCOL-IES ::=
      ID
           id-C-ID
                                            CRITICALITY
                                                            reject.
                                                                                 C-ID
                                                                                                                              PRESENCE
                                                                                                                                          mandatory
                                                                         TYPE
            id-TimeSlot
                                            CRITICALITY
                                                             reject.
                                                                         TYPE
                                                                                 TimeSlot.
                                                                                                                                       mandatory
     ID
    -- 1.28Mcps TDD - There is no Time Slot indication needed, the CRNC should indicate Time Slot 0 and the Node B shall ignore it
      TD
           id-NCyclesPerSFNperiod
                                            CRITICALITY
                                                             reject
                                                                         TYPE
                                                                                 NCyclesPerSFNperiod
                                                                                                                           PRESENCE
                                                                                                                                       mandatory
                                                                                 NRepetitionsPerCyclePeriod PRESENCE
           id-NRepetitionsPerCyclePeriod CRITICALITY
                                                            reject
                                                                         TYPE
                                                                                                                       mandatory
     TD
           id-CellSyncBurstTransReconfInfo-CellSyncReconfRqstTDD
                                                                         CRITICALITY
                                                                                         reject
                                                                                                                     TYPE
    CellSyncBurstTransReconfInfo-CellSyncReconfRqstTDD
                                                             PRESENCE
                                                                         optional
                                                                                        -- 3.84Mcps TDD only
           id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD
                                                                                                                        TYPE
                                                                             CRITICALITY
                                                                                             reject
    CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD
                                                                 PRESENCE
                                                                             optional
                                                                                         }, -- 3.84Mcps TDD only
    . . .
CellSyncBurstTransReconfInfo-CellSyncReconfRgstTDD ::= SEOUENCE (SIZE (1.. maxNrOfCellSyncBursts)) OF CellSyncBurstTransInfoItem-
CellSyncReconfRqstTDD
CellSyncBurstTransInfoItem-CellSyncReconfRqstTDD ::= SEQUENCE {
    cSBTransmissionID
                                                CSBTransmissionID,
    syncFrameNumberToTransmit
                                                SyncFrameNumber,
    cellSyncBurstCode
                                                CellSyncBurstCode
                                                                             OPTIONAL,
    cellSyncBurstCodeShift
                                                CellSyncBurstCodeShift
                                                                             OPTIONAL,
                                                                             OPTIONAL,
    dlTransPower
                                                DL-Power
    iE-Extensions
                                                ProtocolExtensionContainer { CellSyncBurstTransInfoItem-CellSyncReconfRqstTDD-ExtIEs} }
    OPTIONAL,
    . . .
CellSyncBurstTransInfoItem-CellSyncReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ::= ProtocolIE-Single-Container {{ CellSyncBurstMeasInfo-CellSyncReconfRqstTDD }}
CellSyncBurstMeasInfo-CellSyncReconfRqstTDD NBAP-PROTOCOL-IES ::= {
    { ID id-CellSyncBurstMeasInfoList-CellSyncReconfRqstTDD CRITICALITY reject TYPE CellSyncBurstMeasInfoList-CellSyncReconfRqstTDD PRESENCE
    mandatory } |
    { ID id-SynchronisationReportType
                                                                                                                                       PRESENCE
                                                        CRITICALITY reject TYPE SynchronisationReportType
    optional }|
    { ID id-SynchronisationReportCharacteristics
                                                                                                                              PRESENCE optional },
                                                        CRITICALITY reject TYPE SynchronisationReportCharacteristics
    . . .
CellSyncBurstMeasInfoList-CellSyncReconfRgstTDD ::= SEOUENCE (SIZE (1.. maxNrOfCellSyncBursts)) OF CellSyncBurstMeasInfoItem-CellSyncReconfRgstTDD
CellSyncBurstMeasInfoItem-CellSyncReconfRgstTDD ::= SEOUENCE {
    syncFrameNrToReceive
                                            SyncFrameNumber,
    svncBurstInfo
                                            CellSyncBurstInfoList-CellSyncReconfRqstTDD,
    . . .
CellSyncBurstInfoList-CellSyncReconfRqstTDD ::= SEQUENCE (SIZE (1..maxNrOfReceptsPerSyncFrame)) OF CellSyncBurstInfoItem-CellSyncReconfRqstTDD
```

```
CellSyncBurstInfoItem-CellSyncReconfRqstTDD ::= SEQUENCE {
   cSBMeasurement.ID
                                             CSBMeasurementID,
   cellSyncBurstCode
                                             CellSyncBurstCode.
   cellSyncBurstCodeShift
                                             CellSyncBurstCodeShift,
   iE-Extensions
                                             ProtocolExtensionContainer { { CellSyncBurstMeasInfo-CellSyncReconfRqstTDD-ExtIEs} }
                                                                                                                                 OPTIONAL.
CellSyncBurstMeasInfo-CellSyncReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRgstTDD ::= SEOUENCE (SIZE (1..maxNrOfSyncFramesLCR)) OF SYNCDlCodeIdTransReconfItemLCR-
CellSyncReconfRqstTDD
SYNCDlCodeIdTransReconfItemLCR-CellSyncReconfRqstTDD ::= SEQUENCE {
   cSBTransmissionID
                                             CSBTransmissionID,
   syncFrameNumberforTransmit
                                             SyncFrameNumber,
   uARFCN
                                             UARFCN,
   sYNCDlCodeId
                                             SYNCDlCodeId
                                                            OPTIONAL,
   dwPCH-Power
                                             DwPCH-Power
                                                            OPTIONAL.
                                             ProtocolExtensionContainer { { SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRgstTDD-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRgstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SYNCDlCodeIdMeasReconfigurationLCR-CellSyncReconfRqstTDD ::= ProtocolIE-Single-Container {{ SYNCDlCodeIdMeasInfoLCR-CellSyncReconfRqstTDD }}
SYNCDlCodeIdMeasInfoLCR-CellSyncReconfRqstTDD NBAP-PROTOCOL-IES ::= {
   mandatory } |
   { ID id-SynchronisationReportType
                                                     CRITICALITY reject TYPE SynchronisationReportType
                                                                                                                              PRESENCE
   optional }
   { ID id-SynchronisationReportCharacteristics
                                                    CRITICALITY reject TYPE SynchronisationReportCharacteristics
                                                                                                                     PRESENCE optional },
SYNCDlCodeIdMeasInfoList-CellSyncReconfRqstTDD::= SEQUENCE (SIZE (1.. maxNrOfSyncDLCodesLCR)) OF SYNCDlCodeIdMeasInfoItem-CellSyncReconfRqstTDD
SYNCDlCodeIdMeasInfoItem-CellSyncReconfRqstTDD ::= SEQUENCE {
   syncFrameNrToReceive
                                         SyncFrameNumber,
   sYNCDlCodeIdInfoLCR
                                         SYNCDlCodeIdInfoListLCR-CellSyncReconfRqstTDD,
   iE-Extensions
                                         ProtocolExtensionContainer { { SYNCDlCodeIdMeasInfoItem-CellSyncReconfRqstTDD-ExtIEs} }
                                                                                                                                 OPTIONAL,
   . . .
SYNCDlCodeIdMeasInfoItem-CellSyncReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
SYNCDlCodeIdInfoListLCR-CellSyncReconfRqstTDD ::= SEQUENCE (SIZE (1.. maxNrOfReceptionsperSyncFrameLCR)) OF SYNCDlCodeIdInfoItemLCR-
CellSyncReconfRqstTDD
SYNCDlCodeIdInfoItemLCR-CellSyncReconfRqstTDD ::= SEQUENCE {
   cSBMeasurement.ID
                                          CSBMeasurementID,
   sYNCDlCodeId
                                          SYNCDlCodeId,
   uARFCN
                                          UARFCN,
   propagationDelayCompensation
                                          TimingAdjustmentValue
                                                                   OPTIONAL,
   iE-Extensions
                                          ProtocolExtensionContainer { { SYNCDlCodeIdInfoLCR-CellSyncReconfRqstTDD-ExtIEs} }
                                                                                                                      OPTIONAL,
SYNCDlCodeIdInfoLCR-CellSyncReconfRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     CELL SYNCHRONISATION RECONFIGURATION RESPONSE TDD
  CellSynchronisationReconfigurationResponseTDD ::= SEQUENCE {
                                              {{CellSynchronisationReconfigurationResponseTDD-IEs}},
   protocolIEs
                        ProtocolIE-Container
                        ProtocolExtensionContainer {{CellSynchronisationReconfigurationResponseTDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL.
   . . .
CellSynchronisationReconfigurationResponseTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationReconfigurationResponseTDD-IES NBAP-PROTOCOL-IES ::=
          id-CriticalityDiagnostics
   { ID
                                                                                 CriticalityDiagnostics
                                                                                                            PRESENCE optional },
                                                 CRITICALITY
                                                                ignore
                                                                          TYPE
   . . .
    CELL SYNCHRONISATION RECONFIGURATION FAILURE TDD
  ************************
CellSynchronisationReconfigurationFailureTDD ::= SEQUENCE
                                                  {{CellSynchronisationReconfigurationFailureTDD-IEs}},
   protocolIEs
                        ProtocolIE-Container
                        ProtocolExtensionContainer {{CellSynchronisationReconfigurationFailureTDD-Extensions}}
   protocolExtensions
                                                                                                           OPTIONAL,
   . . .
CellSynchronisationReconfigurationFailureTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationReconfigurationFailureTDD-IES NBAP-PROTOCOL-IES ::= {
```

```
id-Cause
     ID
                                           CRITICALITY
                                                                    TYPE
                                                                                                                  PRESENCE mandatory
                                                         ignore
                                                                           Cause
    ID
          id-CriticalityDiagnostics
                                           CRITICALITY
                                                         ignore
                                                                    TYPE
                                                                           CriticalityDiagnostics
                                                                                                          PRESENCE optional },
  CELL SYNCHRONISATION ADJUSTMENT REQUEST TDD
  CellSynchronisationAdjustmentRequestTDD ::= SEOUENCE {
   protocolIEs
                         ProtocolIE-Container
                                                  {{CellSynchronisationAdjustmentRequestTDD-IEs}},
   protocolExtensions
                         ProtocolExtensionContainer
                                                  {{CellSynchronisationAdjustmentRequestTDD-Extensions}}
                                                                                                       OPTIONAL,
CellSynchronisationAdjustmentRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationAdjustmentRequestTDD-IES NBAP-PROTOCOL-IES ::= {
   { ID
          CellAdjustmentInfo-SyncAdjustmentRgstTDD::= SEOUENCE (SIZE (1..maxCellinNodeB)) OF ProtocolIE-Single-Container {{ CellAdjustmentInfoItemIE-
SyncAdjustmntRgstTDD }}
CellAdjustmentInfoItemIE-SyncAdjustmntRgstTDD NBAP-PROTOCOL-IES ::= {
   { ID id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD
                                                         CRITICALITY
                                                                                      TYPE
                                                                                                          CellAdjustmentInfoItem-
                                                                        ignore
SyncAdjustmentRqstTDD
                         PRESENCE
                                   mandatory }
CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ::= SEQUENCE {
   frameAdjustmentValue
                                       FrameAdjustmentValue
                                                                OPTIONAL,
   timingAdjustmentValue
                                       TimingAdjustmentValue
                                                                OPTIONAL,
   dLTransPower
                                       DL-Power
                                                                OPTIONAL, -- 3.84Mcps TDD only
   sfn
                                                                OPTIONAL,
   iE-Extensions
                                       ProtocolExtensionContainer { { CellAdjustmentInfoItem-SyncAdjustmntRqstTDD-ExtIEs} }
                                                                                                                        OPTIONAL,
CellAdjustmentInfoItem-SyncAdjustmntRqstTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   { ID id-DwPCH-Power
                        CRITICALITY ignore EXTENSION
                                                     DwPCH-Power
                                                                    PRESENCE optional \ , -- 1.28Mcps TDD only
-- CELL SYNCHRONISATION ADJUSTMENT RESPONSE TDD
```

```
__ *********************
CellSynchronisationAdjustmentResponseTDD ::= SEQUENCE
   protocolIEs
                          ProtocolIE-Container
                                                 {{CellSynchronisationAdjustmentResponseTDD-IEs}},
   protocolExtensions
                          ProtocolExtensionContainer {{CellSynchronisationAdjustmentResponseTDD-Extensions}}
                                                                                                               OPTIONAL.
CellSynchronisationAdjustmentResponseTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationAdjustmentResponseTDD-IES NBAP-PROTOCOL-IES ::= {
           id-CriticalityDiagnostics
                                             CRITICALITY
                                                                        TYPE
                                                                                CriticalityDiagnostics
                                                                                                                         PRESENCE optional },
                                                             ignore
  CELL SYNCHRONISATION ADJUSTMENT FAILURE TDD
  *****************
CellSynchronisationAdjustmentFailureTDD ::= SEOUENCE
   protocolIEs
                          ProtocolIE-Container
                                                 {{CellSynchronisationAdjustmentFailureTDD-IEs}},
   protocolExtensions
                          ProtocolExtensionContainer {{CellSynchronisationAdjustmentFailureTDD-Extensions}}
                                                                                                              OPTIONAL,
CellSynchronisationAdjustmentFailureTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
    . . .
CellSynchronisationAdjustmentFailureTDD-IEs NBAP-PROTOCOL-IES ::= {
                                                                                                                   PRESENCE mandatory }
           id-CauseLevel-SyncAdjustmntFailureTDD CRITICALITY ignore
                                                                        TYPE
                                                                                CauseLevel-SyncAdjustmntFailureTDD
     ID
           id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE
                                                                                CriticalityDiagnostics
                                                                                                                            PRESENCE optional
    },
CauseLevel-SyncAdjustmntFailureTDD ::= CHOICE {
   generalCause
                          GeneralCauseList-SyncAdjustmntFailureTDD,
   cellSpecificCause
                          CellSpecificCauseList-SyncAdjustmntFailureTDD,
GeneralCauseList-SyncAdjustmntFailureTDD::= SEQUENCE {
   iE-Extensions
                                             ProtocolExtensionContainer { { GeneralCauseList-SyncAdjustmntFailureTDD-ExtIEs} }
                                                                                                                               OPTIONAL,
    . . .
GeneralCauseList-SyncAdjustmntFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
CellSpecificCauseList-SyncAdjustmntFailureTDD ::= SEQUENCE {
    unsuccessful-cell-InformationRespList-SyncAdjustmntFailureTDD
                                                                    Unsuccessful-cell-InformationRespList-SyncAdjustmntFailureTDD,
   iE-Extensions
                                             ProtocolExtensionContainer { { CellSpecificCauseList-SyncAdjustmntFailureTDD-ExtIEs} }
   OPTIONAL,
CellSpecificCauseList-SyncAdjustmntFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Unsuccessful-cell-InformationRespList-SyncAdjustmntFailureTDD ::= SEQUENCE (SIZE (1..maxNrOfRLs))
                                                                                                              OF ProtocolIE-Single-Container
{{ Unsuccessful-cell-InformationRespItemIE-SyncAdjustmntFailureTDD }}
Unsuccessful-cell-InformationRespItemIE-SyncAdjustmntFailureTDD NBAP-PROTOCOL-IES ::= {
          id-Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD
                                                                                CRITICALITY
                                                                                                              ignore
                                                                                                                         TYPE Unsuccessful-
cell-InformationRespItem-SyncAdjustmntFailureTDD
                                                                mandatory },
Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD::= SEQUENCE {
   c-ID
                                             C-ID,
   cause
                                             Cause,
                                             ProtocolExtensionContainer { { Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD-
   iE-Extensions
ExtIEs } }
               OPTIONAL,
Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   -- CELL SYNCHRONISATION TERMINATION REQUEST TDD
  ****************
CellSynchronisationTerminationRequestTDD ::= SEQUENCE
   protocolIEs
                          ProtocolIE-Container
                                                 {{CellSynchronisationTerminationRequestTDD-IEs}},
                          ProtocolExtensionContainer {{CellSynchronisationTerminationRequestTDD-Extensions}}
   protocolExtensions
                                                                                                              OPTIONAL,
CellSynchronisationTerminationRequestTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationTerminationRequestTDD-IEs NBAP-PROTOCOL-IES ::= {
     ID
          id-C-ID
                                         CRITICALITY
                                                         ignore
                                                                    TYPE
                                                                            C-ID
                                                                                                                      PRESENCE mandatory
     ID
           id-CSBTransmissionID
                                                                            CSBTransmissionID
                                                                                                                      PRESENCE optional
                                         CRITICALITY
                                                         ignore
                                                                    TYPE
     ID
           id-CSBMeasurementID
                                         CRITICALITY
                                                         ignore
                                                                    TYPE
                                                                            CSBMeasurementID
                                                                                                                      PRESENCE optional
```

```
*****************
  CELL SYNCHRONISATION FAILURE INDICATION TDD
__ *********************
CellSynchronisationFailureIndicationTDD ::= SEQUENCE
                        ProtocolIE-Container
                                              {{CellSynchronisationFailureIndicationTDD-IEs}},
   protocolIEs
                        ProtocolExtensionContainer {{CellSynchronisationFailureIndicationTDD-Extensions}}
   protocolExtensions
                                                                                                      OPTIONAL,
CellSynchronisationFailureIndicationTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationFailureIndicationTDD-IEs NBAP-PROTOCOL-IES ::= {
     TD
          id-C-TD
                                       CRITICALITY
                                                     ignore
                                                                TYPE
                                                                       C-TD
                                                                                                               PRESENCE mandatory
          id-CSBTransmissionID
     ID
                                                                TYPE
                                                                       CSBTransmissionID
                                                                                                               PRESENCE optional
                                       CRITICALITY
                                                     ignore
          id-CSBMeasurementID
     TD
                                       CRITICALITY
                                                     ignore
                                                                TYPE
                                                                       CSBMeasurementID
                                                                                                              PRESENCE optional
     ID
          id-Cause
                                       CRITICALITY
                                                     ignore
                                                                TYPE
                                                                       Cause
                                                                                                               PRESENCE mandatory
   -- CELL SYNCHRONISATION REPORT TDD
  *****************
CellSynchronisationReportTDD ::= SEQUENCE {
   protocolIEs
                        ProtocolIE-Container
                                              {{CellSynchronisationReportTDD-IEs}},
                        ProtocolExtensionContainer {{CellSynchronisationReportTDD-Extensions}}
   protocolExtensions
                                                                                            OPTIONAL,
CellSynchronisationReportTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
CellSynchronisationReportTDD-IES NBAP-PROTOCOL-IES ::= {
   { ID
          id-CellSyncInfo-CellSyncReprtTDD
                                              CRITICALITY ignore
                                                                          CellSyncInfo-CellSyncReprtTDD
                                                                   TYPE
                                                                                                            PRESENCE mandatory \ \ \,
CellSyncInfo-CellSyncReprtTDD ::= SEQUENCE (SIZE (1..maxCellinNodeB)) OF ProtocolIE-Single-Container {{ CellSyncInfoItemIE-CellSyncReprtTDD }}
CellSyncInfoItemIE-CellSyncReprtTDD NBAP-PROTOCOL-IES ::= {
   { ID id-C-ID
                                                     CRITICALITY ignore TYPE C-ID
   PRESENCE
              mandatory}
```

```
{ ID
            id-SyncReportType-CellSyncReprtTDD
                                                    CRITICALITY ignore
                                                                            TYPE SyncReportType-CellSyncReprtTDD
                                                                                                                       PRESENCE optional },
SyncReportType-CellSyncReprtTDD ::= CHOICE {
    intStdPhSyncInfo-CellSyncReprtTDD
                                            IntStdPhCellSyncInfo-CellSyncReprtTDD,
    lateEntrantCell
                                NULL,
    frequencyAcquisition
                                NULL,
IntStdPhCellSyncInfo-CellSyncReprtTDD ::= SEQUENCE
    cellSvncBurstMeasuredInfo
                                                CellSyncBurstMeasInfoList-CellSyncReprtTDD,
    iE-Extensions
                                                ProtocolExtensionContainer { { IntStdPhCellSyncInfoList-CellSyncReprtTDD-ExtIEs} }
                                                                                                                                      OPTIONAL.
IntStdPhCellSyncInfoList-CellSyncReprtTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
      ID id-AccumulatedClockupdate-CellSyncReprtTDD
                                                        CRITICALITY ignore EXTENSION
                                                                                        TimingAdjustmentValue
                                                                                                                     PRESENCE optional }
     ID id-SyncDLCodeIdsMeasInfoList-CellSyncReprtTDD CRITICALITY ignore EXTENSION
                                                                                         SyncDLCodeIdsMeasInfoList-CellSyncReprtTDD PRESENCE
optional }, -- Mandatory for 1.28Mcps TDD only
    . . .
CellSyncBurstMeasInfoList-CellSyncReprtTDD ::= SEQUENCE (SIZE (0.. maxNrOfCellSyncBursts)) OF CellSyncBurstMeasInfoItem-CellSyncReprtTDD --
Mandatory for 3.84Mcps TDD only
CellSyncBurstMeasInfoItem-CellSyncReprtTDD ::= SEQUENCE {
                                            SEQUENCE (SIZE (1..maxNrOfReceptsPerSyncFrame)) OF CellSyncBurstInfo-CellSyncReprtTDD,
    cellSyncBurstInfo-CellSyncReprtTDD
    . . .
CellSyncBurstInfo-CellSyncReprtTDD ::= CHOICE {
    cellSvncBurstAvailable
                                CellSyncBurstAvailable-CellSyncReprtTDD,
    cellSyncBurstNotAvailable
CellSyncBurstAvailable-CellSyncReprtTDD ::= SEQUENCE {
    cellSyncBurstTiming
                                CellSyncBurstTiming,
    cellSyncBurstSIR
                                CellSyncBurstSIR,
    . . .
SyncDLCodeIdsMeasInfoList-CellSyncReprtTDD ::= SEQUENCE (SIZE (0..maxNrOfSyncFramesLCR)) OF SyncDLCodeIdsMeasInfoItem-CellSyncReprtTDD
-- Mandatory for 1.28Mcps TDD only
SyncDLCodeIdsMeasInfoItem-CellSyncReprtTDD ::= SEQUENCE {
    syncDLCodeIdInfo-CellSyncReprtTDD
                                            SyncDLCodeIdInfo-CellSyncReprtTDD,
                                            ProtocolExtensionContainer { { SyncDLCodeIdsMeasInfoItem-CellSyncReprtTDD-ExtIEs } }
    iE-Extensions
                                                                                                                                       OPTIONAL,
```

```
SyncDLCodeIdsMeasInfoItem-CellSyncReprtTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SyncDLCodeIdInfo-CellSyncReprtTDD ::= SEOUENCE (SIZE (1..maxNrOfReceptionsperSyncFrameLCR)) OF SyncDLCodeIdItem-CellSyncReprtTDD
SyncDLCodeIdItem-CellSyncReprtTDD ::= CHOICE {
    syncDLCodeIdAvailable
                                      SyncDLCodeIdAvailable-CellSyncReprtTDD,
   syncDLCodeIDNotAvailable
                                      NULL,
SyncDLCodeIdAvailable-CellSyncReprtTDD ::= SEQUENCE {
                              CellSyncBurstTiming,
    syncDLCodeIdTiming
    syncDLCodeIdSIR
                              CellSyncBurstSIR,
                              ProtocolExtensionContainer { { SyncDLCodeIdAvailable-CellSyncReprtTDD-ExtIEs } }
   iE-Extensions
                                                                                                                 OPTIONAL,
SyncDLCodeIdAvailable-CellSyncReprtTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
      ****************
  BEARER REARRANGEMENT INDICATION
  BearerRearrangementIndication ::= SEQUENCE {
                                                            {{BearerRearrangementIndication-IEs}},
   protocolIEs
                                  ProtocolIE-Container
   protocolExtensions
                                  ProtocolExtensionContainer {{BearerRearrangementIndication-Extensions}}
                                                                                                                        OPTIONAL,
BearerRearrangementIndication-IEs NBAP-PROTOCOL-IES ::= {
           id-CRNC-CommunicationContextID
    { ID
                                                         CRITICALITY
                                                                        ignore
                                                                                        TYPE
                                                                                                               CRNC-CommunicationContextID
           PRESENCE
                      mandatory
           id-SignallingBearerRequestIndicator
                                                             CRITICALITY
                                                                            ignore
                                                                                           TYPE
                                                                                                               SignallingBearerRequestIndicator
       PRESENCE
                   optional
    { ID
           id-DCH-RearrangeList-Bearer-RearrangeInd
                                                                 CRITICALITY
                                                                                ignore
                                                                                           TYPE
                                                                                                              DCH-RearrangeList-Bearer-
                              PRESENCE
                                         optional
           id-DSCH-RearrangeList-Bearer-RearrangeInd
                                                                 CRITICALITY
                                                                                ignore
                                                                                           TYPE
                                                                                                              DSCH-RearrangeList-Bearer-
    RearrangeInd
                              PRESENCE
                                          optional
    { ID
           id-USCH-RearrangeList-Bearer-RearrangeInd
                                                                 CRITICALITY
                                                                                ignore
                                                                                           TYPE
                                                                                                              USCH-RearrangeList-Bearer-
    RearrangeInd
                              PRESENCE
                                          optional
    { ID
           id-TFCI2BearerRequestIndicator
                                                         CRITICALITY
                                                                        ignore
                                                                                        TYPE
                                                                                                               TFCI2BearerRequestIndicator
   PRESENCE
               optional
           id-HSDSCH-RearrangeList-Bearer-RearrangeInd
                                                                 CRITICALITY
                                                                                ignore
                                                                                           TYPE
                                                                                                              HSDSCH-RearrangeList-Bearer-
RearrangeInd
                          PRESENCE
                                     optional
    . . .
```

```
BearerRearrangementIndication-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DCH-RearrangeList-Bearer-RearrangeInd ::= SEOUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-RearrangeItem-Bearer-RearrangeInd
DCH-RearrangeItem-Bearer-RearrangeInd ::= SEQUENCE {
   dCH-ID
   iE-Extensions
                                               ProtocolExtensionContainer { { DCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs} }
                                                                                                                         OPTIONAL,
DCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DSCH-RearrangeList-Bearer-RearrangeInd ::= SEOUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-RearrangeItem-Bearer-RearrangeInd
DSCH-RearrangeItem-Bearer-RearrangeInd ::= SEQUENCE
   dSCH-ID
   iE-Extensions
                                               OPTIONAL,
   . . .
DSCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
USCH-RearrangeList-Bearer-RearrangeInd ::= SEQUENCE (SIZE (1..maxNrOfUSCHs)) OF USCH-RearrangeItem-Bearer-RearrangeInd
USCH-RearrangeItem-Bearer-RearrangeInd ::= SEQUENCE
   uSCH-ID
                                               USCH-ID,
   iE-Extensions
                                               ProtocolExtensionContainer { { USCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs} }
                                                                                                                            OPTIONAL,
USCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-RearrangeList-Bearer-RearrangeInd ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-RearrangeItem-Bearer-RearrangeInd
HSDSCH-RearrangeItem-Bearer-RearrangeInd ::= SEQUENCE {
   hsDSCH-MACdFlow-ID
                                               HSDSCH-MACdFlow-ID,
                                               ProtocolExtensionContainer { { HSDSCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs} } OPTIONAL,
   iE-Extensions
HSDSCH-RearrangeItem-Bearer-RearrangeInd-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
-- RADIO LINK ACTIVATION COMMAND FDD
  *****************
RadioLinkActivationCommandFDD ::= SEQUENCE {
                                                 {{RadioLinkActivationCommandFDD-IEs}},
   protocolIEs
                         ProtocolIE-Container
                         ProtocolExtensionContainer {{RadioLinkActivationCommandFDD-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL.
RadioLinkActivationCommandFDD-IEs NBAP-PROTOCOL-IES ::= {
          id-NodeB-CommunicationContextID
                                                            CRITICALITY reject TYPE
                                                                                      NodeB-CommunicationContextID
   PRESENCE mandatory } |
   { ID id-DelayedActivationList-RL-ActivationCmdFDD
                                                            CRITICALITY reject TYPE
                                                                                      DelayedActivationInformationList-RL-ActivationCmdFDD
       PRESENCE mandatory },
RadioLinkActivationCommandFDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DelayedActivationInformationList-RL-ActivationCmdFDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {
    { DelayedActivationInformation-RL-ActivationCmdFDD-IEs} }
DelayedActivationInformation-RL-ActivationCmdFDD-IES NBAP-PROTOCOL-IES ::= {
    { ID id-DelayedActivationInformation-RL-ActivationCmdFDD
                                                           CRITICALITY reject TYPE DelayedActivationInformation-RL-ActivationCmdFDD PRESENCE
optional }
DelayedActivationInformation-RL-ActivationCmdFDD ::= SEQUENCE {
   delayed-activation-update DelayedActivationUpdate,
                              ProtocolExtensionContainer { { DelayedActivationInformation-RL-ActivationCmdFDD-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
DelayedActivationInformation-RL-ActivationCmdFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- RADIO LINK ACTIVATION COMMAND TDD
  ************************
RadioLinkActivationCommandTDD ::= SEQUENCE {
                                                 {{RadioLinkActivationCommandTDD-IEs}},
   protocolIEs
                         ProtocolIE-Container
                         ProtocolExtensionContainer {{RadioLinkActivationCommandTDD-Extensions}}
   protocolExtensions
                                                                                                                  OPTIONAL,
```

```
RadioLinkActivationCommandTDD-IES NBAP-PROTOCOL-IES ::= {
   { ID
         id-NodeB-CommunicationContextID
                                                       CRITICALITY reject TYPE
                                                                               NodeB-CommunicationContextID
   PRESENCE
             mandatory }
        id-DelayedActivationList-RL-ActivationCmdTDD
                                                       CRITICALITY reject TYPE
                                                                               DelayedActivationInformationList-RL-ActivationCmdTDD
      PRESENCE
               mandatory },
RadioLinkActivationCommandTDD-Extensions NBAP-PROTOCOL-EXTENSION ::= {
DelayedActivationInformationList-RL-ActivationCmdTDD ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF ProtocolIE-Single-Container {
   { DelayedActivationInformation-RL-ActivationCmdTDD-IEs} }
DelayedActivationInformation-RL-ActivationCmdTDD-IEs NBAP-PROTOCOL-IES ::= {
   optional }
DelayedActivationInformation-RL-ActivationCmdTDD ::= SEQUENCE {
                           RL-ID,
   delayed-activation-update DelayedActivationUpdate,
                           ProtocolExtensionContainer { { DelayedActivationInformation-RL-ActivationCmdTDD-ExtIEs} } OPTIONAL,
   iE-Extensions
DelayedActivationInformation-RL-ActivationCmdTDD-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
```

9.3.4 Information Elements Definitions

END

```
maxCTFC,
maxNrOfTFs.
maxTTI-count.
maxRateMatching,
maxCodeNrComp-1,
maxNrOfCellSyncBursts,
maxNrOfCodeGroups,
maxNrOfMeasNCell,
maxNrOfMeasNCell-1,
maxNrOfReceptsPerSyncFrame,
maxNrOfTFCIGroups,
maxNrOfTFCI1Combs.
maxNrOfTFCI2Combs,
maxNrOfTFCI2Combs-1.
maxNrOfSF,
maxTGPS,
maxNrOfUSCHs,
maxNrOfULTSs,
maxNrOfULTSLCRs,
maxNrOfDPCHs,
maxNrOfDPCHLCRs,
maxNrOfCodes,
maxNrOfDSCHs.
maxNrOfDLTSs.
maxNrOfDLTSLCRs,
maxNrOfDCHs.
maxNrOfLevels,
maxNoGPSItems,
maxNoSat,
maxNrOfHSSCCHs,
maxNrOfHSSCCHCodes,
maxNrOfMACdFlows,
maxNrOfMACdFlows-1,
maxNrOfMACdPDUIndexes,
maxNrOfMACdPDUIndexes-1,
maxNrOfPriorityQueues,
maxNrOfPriorityQueues-1,
maxNrOfHAROProcesses,
maxNrOfSyncDLCodesLCR,
maxNrOfSyncFramesLCR,
id-MessageStructure,
id-ReportCharacteristicsType-OnModification,
id-Rx-Timing-Deviation-Value-LCR,
id-SFNSFNMeasurementValueInformation,
id-SFNSFNMeasurementThresholdInformation,
id-TUTRANGPSMeasurementValueInformation,
id-TUTRANGPSMeasurementThresholdInformation,
id-TypeOfError,
id-transportlayeraddress,
id-bindingID,
id-Angle-Of-Arrival-Value-LCR,
id-SyncDLCodeIdThreInfoLCR,
id-neighbouring {\tt TDDCellMeasurementInformationLCR}
```

```
FROM NBAP-Constants
    Criticality,
    ProcedureID,
    ProtocolIE-ID,
   TransactionID,
    TriggeringMessage
FROM NBAP-CommonDataTypes
    NBAP-PROTOCOL-IES,
    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    NBAP-PROTOCOL-EXTENSION
FROM NBAP-Containers;
-- ------
-- ------
Acknowledged-PCPCH-access-preambles ::= INTEGER (0..15,...)
-- According to mapping in [22].
Acknowledged-PRACH-preambles-Value ::= INTEGER(0..240,...)
-- According to mapping in [22].
AddorDeleteIndicator ::= ENUMERATED {
    add,
    delete
Active-Pattern-Sequence-Information ::= SEQUENCE {
    {\tt cMConfigurationChangeCFN}
                                                         CFN,
    transmission-Gap-Pattern-Sequence-Status
                                             Transmission-Gap-Pattern-Sequence-Status-List OPTIONAL,
                                              ProtocolExtensionContainer { {Active-Pattern-Sequence-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
Active-Pattern-Sequence-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Transmission-Gap-Pattern-Sequence-Status-List ::= SEQUENCE (SIZE (0..maxTGPS)) OF
    SEQUENCE {
       tGPSID
                       TGPSID,
       tGPRC
                       TGPRC,
       tGCFN
       iE-Extensions
                          ProtocolExtensionContainer { { Transmission-Gap-Pattern-Sequence-Status-List-ExtIEs } } OPTIONAL,
```

```
Transmission-Gap-Pattern-Sequence-Status-List-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
AICH-Power ::= INTEGER (-22..5)
-- Offset in dB.
AICH-TransmissionTiming ::= ENUMERATED {
    ν0,
    v1
AllocationRetentionPriority ::= SEQUENCE {
    priorityLevel
                                PriorityLevel,
    pre-emptionCapability
                                Pre-emptionCapability,
    pre-emptionVulnerability Pre-emptionVulnerability,
                                ProtocolExtensionContainer { {AllocationRetentionPriority-ExtIEs} } OPTIONAL,
    iE-Extensions
AllocationRetentionPriority-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
Angle-Of-Arrival-Value-LCR ::= SEQUENCE {
    aOA-LCR
                                AOA-LCR,
                                AOA-LCR-Accuracy-Class,
    aOA-LCR-Accuracy-Class
                                ProtocolExtensionContainer { {Angle-Of-Arrival-Value-LCR-ExtIEs} } OPTIONAL,
    iE-Extensions
Angle-Of-Arrival-Value-LCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
AOA-LCR ::= INTEGER (0..719)
-- Angle Of Arrival for 1.28Mcps TDD
AOA-LCR-Accuracy-Class ::= ENUMERATED {a,b,c,d,e,f,g,h,...}
APPreambleSignature ::= INTEGER (0..15)
APSubChannelNumber ::= INTEGER (0..11)
AvailabilityStatus ::= ENUMERATED {
    empty,
    in-test,
    failed,
    power-off,
    off-line,
    off-duty,
    dependency,
```

```
degraded,
   not-installed,
   log-full,
  _____
-- -----
BCCH-ModificationTime ::= INTEGER (0..511)
-- Time = BCCH-ModificationTime * 8
-- Range 0 to 4088, step 8
-- All SFN values in which MIB may be mapped are allowed
BindingID ::= OCTET STRING (SIZE (1..4, ...))
-- If the Binding ID includes a UDP port, the UDP port is included in octet 1 and 2. The first octet of
-- the UDP port field is included in the first octet of the Binding ID.
BetaCD ::= INTEGER (0..15)
BLER
                     ::= INTEGER (-63..0)
-- Step 0.1 (Range -6.3..0). It is the Log10 of the BLER
BlockingPriorityIndicator ::= ENUMERATED {
   high,
   normal,
   low,
-- High priority: Block resource immediately.
-- Normal priority: Block resource when idle or upon timer expiry.
-- Low priority: Block resource when idle.
SCTD-Indicator ::= ENUMERATED {
   active,
   inactive
-- -----
-- -----
Cause ::= CHOICE {
   radioNetwork
                        CauseRadioNetwork,
   transport
                     CauseTransport,
   protocol
                        CauseProtocol,
   misc
                        CauseMisc,
   . . .
CauseMisc ::= ENUMERATED {
   control-processing-overload,
   hardware-failure,
```

```
oam-intervention,
    not-enough-user-plane-processing-resources,
    unspecified,
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified.
    abstract-syntax-error-falsely-constructed-message,
CauseRadioNetwork ::= ENUMERATED {
    unknown-C-ID,
    cell-not-available,
    power-level-not-supported,
    dl-radio-resources-not-available,
    ul-radio-resources-not-available,
    rl-already-ActivatedOrAllocated,
    nodeB-Resources-unavailable,
    measurement-not-supported-for-the-object,
    combining-resources-not-available,
    requested-configuration-not-supported,
    synchronisation-failure,
    priority-transport-channel-established,
    sIB-Origination-in-Node-B-not-Supported,
    requested-tx-diversity-mode-not-supported,
    unspecified,
    bCCH-scheduling-error,
    measurement-temporarily-not-available,
    invalid-CM-settings,
    reconfiguration-CFN-not-elapsed,
    number-of-DL-codes-not-supported,
    s-cipch-not-supported,
    combining-not-supported,
    ul-sf-not-supported,
    dl-SF-not-supported,
    common-transport-channel-type-not-supported,
    dedicated-transport-channel-type-not-supported,
    downlink-shared-channel-type-not-supported,
    uplink-shared-channel-type-not-supported,
    cm-not-supported,
    tx-diversity-no-longer-supported,
    unknown-Local-Cell-ID,
    number-of-UL-codes-not-supported,
    information-temporarily-not-available,
    information-provision-not-supported-for-the-object,
    cell-synchronisation-not-supported,
```

```
cell-synchronisation-adjustment-not-supported,
    dpc-mode-change-not-supported,
    iPDL-already-activated,
    iPDL-not-supported,
    iPDL-parameters-not-available,
    frequency-acquisition-not-supported,
    power-balancing-status-not-compatible,
    requested-typeofbearer-re-arrangement-not-supported,
    signalling-Bearer-Re-arrangement-not-supported,
    bearer-Re-arrangement-needed,
    delayed-activation-not-supported,
    rl-timing-adjustment-not-supported
CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
CCTrCH-ID ::= INTEGER (0..15)
CDSubChannelNumbers ::= BIT STRING {
                                        subCh11(0),
                                        subCh10(1),
                                        subCh9(2),
                                        subCh8(3),
                                        subCh7(4),
                                        subCh6(5),
                                        subCh5(6),
                                        subCh4(7),
                                        subCh3(8),
                                        subCh2(9),
                                        subCh1(10),
                                        subCh0(11)
                                        } (SIZE (12))
CellParameterID ::= INTEGER (0..127,...)
CellSyncBurstCode ::= INTEGER(0..7, ...)
CellSyncBurstCodeShift ::= INTEGER(0..7)
CellSyncBurstRepetitionPeriod ::= INTEGER (0..4095)
CellSyncBurstSIR ::= INTEGER (0..31)
CellSyncBurstTiming ::= CHOICE {
                        INTEGER (0..1048575),
    initialPhase
    steadyStatePhase
                            INTEGER (0..255)
CellSyncBurstTimingThreshold ::= INTEGER(0..254)
```

OPTIONAL,

```
CFN ::= INTEGER (0..255)
Channel-Assignment-Indication ::= ENUMERATED {
    cA-Active,
    cA-Inactive
ChipOffset ::= INTEGER (0..38399)
-- Unit Chip
C-ID ::= INTEGER (0..65535)
Closedlooptimingadjustmentmode ::= ENUMERATED {
    adj-1-slot,
    adj-2-slot,
CommonChannelsCapacityConsumptionLaw ::= SEOUENCE (SIZE(1..maxNrOfSF)) OF
    SEQUENCE {
       dl-Cost
                    INTEGER (0..65535),
       ul-Cost
                    INTEGER (0..65535),
                            ProtocolExtensionContainer { { CommonChannelsCapacityConsumptionLaw-ExtIEs } }
       iE-Extensions
        . . .
CommonChannelsCapacityConsumptionLaw-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommonMeasurementAccuracy ::= CHOICE -
    tUTRANGPSMeasurementAccuracyClass
                                            TUTRANGPSAccuracyClass,
    . . .
CommonMeasurementType ::= ENUMERATED
    received-total-wide-band-power,
    transmitted-carrier-power,
    acknowledged-prach-preambles,
    ul-timeslot-iscp,
    acknowledged-PCPCH-access-preambles,
    detected-PCPCH-access-preambles,
    uTRAN-GPS-Timing-of-Cell-Frames-for-UE-Positioning,
    sFN-SFN-Observed-Time-Difference
CommonMeasurementValue ::= CHOICE {
    transmitted-carrier-power
                                            Transmitted-Carrier-Power-Value,
                                            Received-total-wide-band-power-Value,
    received-total-wide-band-power
    acknowledged-prach-preambles
                                            Acknowledged-PRACH-preambles-Value,
    uL-TimeslotISCP
                                            UL-TimeslotISCP-Value,
    acknowledged-PCPCH-access-preambles
                                            Acknowledged-PCPCH-access-preambles,
    detected-PCPCH-access-preambles
                                            Detected-PCPCH-access-preambles,
```

```
extension-CommonMeasurementValue
                                         Extension-CommonMeasurementValue
Extension-CommonMeasurementValue
                                  ::= ProtocolIE-Single-Container {{ Extension-CommonMeasurementValueIE }}
Extension-CommonMeasurementValueIE NBAP-PROTOCOL-IES ::= {
     ID id-TUTRANGPSMeasurementValueInformation
                                                CRITICALITY ignore TYPE TUTRANGPSMeasurementValueInformation PRESENCE mandatory }
     PRESENCE mandatory }
CommonMeasurementValueInformation ::= CHOICE {
   measurementAvailable
                              CommonMeasurementAvailable,
   measurementnotAvailable
                              CommonMeasurementnotAvailable
CommonMeasurementAvailable::= SEQUENCE {
   commonmeasurementValue
                              CommonMeasurementValue,
   ie-Extensions
                                  ProtocolExtensionContainer { { CommonMeasurementAvailableItem-ExtIEs} }
                                                                                                                OPTIONAL,
CommonMeasurementAvailableItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommonMeasurementnotAvailable ::= NULL
CommonPhysicalChannelID ::= INTEGER (0..255)
Common-PhysicalChannel-Status-Information ::= SEQUENCE {
   commonPhysicalChannelID
                                 CommonPhysicalChannelID,
   resourceOperationalState
                                     ResourceOperationalState,
   availabilityStatus
                                     AvailabilityStatus,
                                     ProtocolExtensionContainer { { Common-PhysicalChannel-Status-Information-ExtIEs} }
   iE-Extensions
                                                                                                                        OPTIONAL,
Common-PhysicalChannel-Status-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommonTransportChannelID ::= INTEGER (0..255)
CommonTransportChannel-InformationResponse ::= SEQUENCE
   commonTransportChannelID
                                     CommonTransportChannelID,
   bindingID
                                     BindingID
                                                            OPTIONAL.
   transportLayerAddress
                                     TransportLayerAddress OPTIONAL,
   iE-Extensions
                                     ProtocolExtensionContainer { { CommonTransportChannel-InformationResponse-ExtIEs} }
```

```
CommonTransportChannel-InformationResponse-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Common-TransportChannel-Status-Information ::= SEQUENCE {
    commonTransportChannelID
                                        CommonTransportChannelID,
    resourceOperationalState
                                        ResourceOperationalState,
    availabilityStatus
                                        AvailabilityStatus,
                                        ProtocolExtensionContainer { { Common-TransportChannel-Status-Information-ExtIEs} }
    iE-Extensions
Common-TransportChannel-Status-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CommunicationControlPortID ::= INTEGER (0..65535)
Compressed-Mode-Deactivation-Flag::= ENUMERATED {
    deactivate,
    maintain-Active
ConfigurationGenerationID ::= INTEGER (0..255)
-- Value '0' means "No configuration"
ConstantValue ::= INTEGER (-10..10,...)
-- -10 dB - +10 dB
-- unit dB
-- step 1 dB
CPCH-Allowed-Total-Rate ::= ENUMERATED {
    v15,
    v30,
    v60,
    v120,
    v240,
    v480,
    v960,
    v1920,
    v2880,
    v3840,
    v4800,
    v5760,
CPCHScramblingCodeNumber ::= INTEGER (0..79)
CPCH-UL-DPCCH-SlotFormat ::= INTEGER (0..2,...)
CriticalityDiagnostics ::= SEQUENCE {
```

```
procedureID
                              ProcedureID
                                                      OPTIONAL,
   triggeringMessage
                              TriggeringMessage
                                                         OPTIONAL,
   procedureCriticality
                              Criticality
                                                      OPTIONAL.
    transactionID
                              TransactionID
                                                         OPTIONAL,
   iEsCriticalityDiagnostics
                              CriticalityDiagnostics-IE-List OPTIONAL,
                              ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} }
   iE-Extensions
                                                                                                               OPTIONAL,
CriticalityDiagnostics-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
   SEQUENCE {
       iECriticality
                          Criticality,
       iE-ID
                          ProtocolIE-ID,
       repetitionNumber
                          RepetitionNumber0
                                                  OPTIONAL,
                          ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} }
       iE-Extensions
                                                                                                                  OPTIONAL,
CriticalityDiagnostics-IE-List-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
       ID id-MessageStructure
                                  CRITICALITY ignore
                                                         EXTENSION MessageStructure
                                                                                        PRESENCE optional
       ID id-TypeOfError
                                  CRITICALITY ignore
                                                         EXTENSION TypeOfError
                                                                                        PRESENCE mandatory
    . . .
CRNC-CommunicationContextID ::= INTEGER (0..1048575)
CSBMeasurementID ::= INTEGER (0..65535)
CSBTransmissionID ::= INTEGER (0..65535)
  _____
-- ------
DATA-ID ::= INTEGER (0..3)
DCH-ID ::= INTEGER (0..255)
DCH-FDD-Information ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-FDD-InformationItem
DCH-FDD-InformationItem ::= SEOUENCE {
   payloadCRC-PresenceIndicator
                                      PayloadCRC-PresenceIndicator,
   ul-FP-Mode
                                      UL-FP-Mode,
   toAWS
                                      ToAWS,
    toAWE
                                      TOAWE,
   dCH-SpecificInformationList
                                      DCH-Specific-FDD-InformationList,
                                      ProtocolExtensionContainer { { DCH-FDD-InformationItem-ExtIEs} }
   iE-Extensions
                                                                                                               OPTIONAL,
    . . .
```

```
DCH-FDD-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-Specific-FDD-InformationList ::= SEOUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-Specific-FDD-Item
DCH-Specific-FDD-Item ::= SEQUENCE {
   dCH-ID
                                    DCH-ID,
   ul-TransportFormatSet
                                    TransportFormatSet,
   dl-TransportFormatSet
                                    TransportFormatSet,
   allocationRetentionPriority
                                    AllocationRetentionPriority,
   frameHandlingPriority
                                    FrameHandlingPriority,
   qE-Selector
                                    OE-Selector,
   iE-Extensions
                                    OPTIONAL,
DCH-Specific-FDD-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-InformationResponse ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-InformationResponseItem
DCH-InformationResponseItem ::= SEOUENCE {
   dCH-ID
                                                DCH-ID.
   bindingID
                                                BindingID
                                                                      OPTIONAL,
   transportLayerAddress
                                                TransportLayerAddress OPTIONAL,
                                                iE-Extensions
                                                                                                                   OPTIONAL,
DCH-InformationResponseItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-TDD-Information ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-TDD-InformationItem
DCH-TDD-InformationItem ::= SEQUENCE {
   payloadCRC-PresenceIndicator
                                    PayloadCRC-PresenceIndicator,
   ul-FP-Mode
                                    UL-FP-Mode,
   toAWS
                                    ToAWS,
   t.oAWE
                                    TOAWE,
   dCH-SpecificInformationList
                                    DCH-Specific-TDD-InformationList,
                                        ProtocolExtensionContainer { { DCH-TDD-InformationItem-ExtIEs} }
   iE-Extensions
                                                                                                             OPTIONAL,
   . . .
DCH-TDD-InformationItem-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
DCH-Specific-TDD-InformationList ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-Specific-TDD-Item
DCH-Specific-TDD-Item ::= SEQUENCE {
```

```
dCH-ID
                                         DCH-ID,
   ul-CCTrCH-ID
                                         CCTrCH-ID,
   dl-CCTrCH-ID
                                         CCTrCH-ID.
   ul-TransportFormatSet
                                         TransportFormatSet,
   dl-TransportFormatSet
                                         TransportFormatSet,
   allocationRetentionPriority
                                         AllocationRetentionPriority,
   frameHandlingPriority
                                         FrameHandlingPriority,
   gE-Selector
                                         OE-Selector
                                                                       OPTIONAL,
   -- This IE shall be present if DCH is part of set of Coordinated DCHs
                                         iE-Extensions
                                                                                                               OPTIONAL,
DCH-Specific-TDD-Item-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
FDD-DCHs-to-Modify ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF FDD-DCHs-to-ModifyItem
FDD-DCHs-to-ModifyItem ::= SEOUENCE {
   ul-FP-Mode
                                     UL-FP-Mode
                                                    OPTIONAL,
   toAWS
                                     ToAWS
                                                    OPTIONAL,
                                                    OPTIONAL,
   toAWE
                                     TOAWE
   transportBearerRequestIndicator
                                     TransportBearerRequestIndicator,
   dCH-SpecificInformationList
                                     DCH-ModifySpecificInformation-FDD,
   iE-Extensions
                                     ProtocolExtensionContainer { { FDD-DCHs-to-ModifyItem-ExtIEs} }
                                                                                                               OPTIONAL,
   . . .
FDD-DCHs-to-ModifyItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
DCH-ModifySpecificInformation-FDD::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-ModifySpecificItem-FDD
DCH-ModifySpecificItem-FDD::= SEQUENCE {
   dCH-ID
                                                 DCH-ID,
   ul-TransportFormatSet
                                                TransportFormatSet
                                                                           OPTIONAL,
   dl-TransportFormatSet
                                                TransportFormatSet
                                                                           OPTIONAL,
   allocationRetentionPriority
                                                AllocationRetentionPriority OPTIONAL,
   frameHandlingPriority
                                                FrameHandlingPriority
                                                                           OPTIONAL,
   iE-Extensions
                                                OPTIONAL,
   . . .
DCH-ModifySpecificItem-FDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-DCHs-to-Modify ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-ModifyItem-TDD
DCH-ModifyItem-TDD ::= SEQUENCE {
   ul-FP-Mode
                                     UL-FP-Mode
                                                    OPTIONAL,
```

```
toAWS
                                      ToAWS
                                                      OPTIONAL,
    t.oAWE
                                      TOAWE
                                                      OPTIONAL.
    transportBearerRequestIndicator
                                      TransportBearerRequestIndicator,
   dCH-SpecificInformationList
                                      DCH-ModifySpecificInformation-TDD,
   iE-Extensions
                                       ProtocolExtensionContainer { { TDD-DCHs-to-ModifyItem-ExtIEs} } 
                                                                                                                      OPTIONAL.
TDD-DCHs-to-ModifyItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
DCH-ModifySpecificInformation-TDD ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF DCH-ModifySpecificItem-TDD
DCH-ModifySpecificItem-TDD ::= SEQUENCE {
   dCH-ID
                                                   DCH-ID,
   ul-CCTrCH-ID
                                                   CCTrCH-ID
                                                                              OPTIONAL,
   dl-CCTrCH-ID
                                                  CCTrCH-ID
                                                                              OPTIONAL,
    ul-TransportFormatSet
                                                  TransportFormatSet
                                                                              OPTIONAL,
   dl-TransportFormatSet
                                                  TransportFormatSet
                                                                              OPTIONAL,
   allocationRetentionPriority
                                                  AllocationRetentionPriority OPTIONAL,
   frameHandlingPriority
                                                                              OPTIONAL,
                                                  FrameHandlingPriority
                                                  iE-Extensions
                                                                                                                            OPTIONAL,
    . . .
DCH-ModifySpecificItem-TDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DedicatedChannelsCapacityConsumptionLaw ::= SEQUENCE ( SIZE(1..maxNrOfSF) ) OF
   SEQUENCE {
       dl-Cost-1
                       INTEGER (0..65535),
       dl-Cost-2
                       INTEGER (0..65535),
       ul-Cost-1
                       INTEGER (0..65535),
       ul-Cost-2
                       INTEGER (0..65535),
       iE-Extensions
                           ProtocolExtensionContainer { { DedicatedChannelsCapacityConsumptionLaw-ExtIEs } }
                                                                                                                   OPTIONAL,
    . . .
DedicatedChannelsCapacityConsumptionLaw-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DedicatedMeasurementType ::= ENUMERATED {
   sir,
   sir-error.
   transmitted-code-power,
   rscp,
   rx-timing-deviation,
   round-trip-time,
   rx-timing-deviation-LCR,
    angle-Of-Arrival-LCR
```

```
DedicatedMeasurementValue ::= CHOICE ·
   sIR-Value
                                 SIR-Value,
   sIR-ErrorValue
                                 SIR-Error-Value,
   transmittedCodePowerValue
                                    Transmitted-Code-Power-Value,
                                    RSCP-Value,
   rxTimingDeviationValue
                                    Rx-Timing-Deviation-Value,
   roundTripTime
                                    Round-Trip-Time-Value,
   extension-DedicatedMeasurementValue
                                        Extension-DedicatedMeasurementValue
Extension-DedicatedMeasurementValue ::= ProtocolIE-Single-Container {{ Extension-DedicatedMeasurementValueIE }}
Extension-DedicatedMeasurementValueIE NBAP-PROTOCOL-IES ::= {
    { ID id-Angle-Of-Arrival-Value-LCR CRITICALITY reject TYPE Angle-Of-Arrival-Value-LCR PRESENCE mandatory },
DedicatedMeasurementValueInformation ::= CHOICE {
   measurementAvailable
                             DedicatedMeasurementAvailable,
   measurementnotAvailable
                             DedicatedMeasurementnotAvailable
DedicatedMeasurementAvailable::= SEQUENCE {
   dedicatedmeasurementValue
                                 DedicatedMeasurementValue,
   cFN
                                 CFN
                                                          OPTIONAL,
   ie-Extensions
                                 ProtocolExtensionContainer { { DedicatedMeasurementAvailableItem-ExtIEs} }
                                                                                                             OPTIONAL,
DedicatedMeasurementAvailableItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DedicatedMeasurementnotAvailable ::= NULL
DelayedActivation ::= CHOICE {
   separate-indication
                         NULL
DelayedActivationUpdate ::= CHOICE {
   activate
                  Activate-Info,
   deactivate
                  Deactivate-Info
```

```
Activate-Info ::= SEQUENCE {
   activation-type
                         Execution-Type,
   initial-dl-tx-power
                         DL-Power,
   firstRLS-Indicator
                         FirstRLS-Indicator
                                                                                 OPTIONAL, --FDD Only
                                                                                 OPTIONAL, --FDD Only
   propagation-delay
                         PropagationDelay
                         ProtocolExtensionContainer { { Activate-Info-ExtIEs} }
   iE-Extensions
                                                                                 OPTIONAL,
Activate-Info-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
Deactivate-Info ::= SEQUENCE {
   deactivation-type
                         Execution-Type,
                         ProtocolExtensionContainer { { Deactivate-Info-ExtIEs} }
   iE-Extensions
                                                                                    OPTIONAL,
Deactivate-Info-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
Execution-Type ::= CHOICE {
   synchronised
                  CFN,
    unsynchronised NULL
Detected-PCPCH-access-preambles ::= INTEGER (0..240,...)
-- According to mapping in [22].
                      ::= INTEGER (0..30)
-- Unit dB, Step 0.1 dB, Range 0..3 dB.
DGPSCorrections ::= SEQUENCE {
  gpstow
                       GPSTOW,
  status-health
                       GPS-Status-Health,
  satelliteinfo
                       SAT-Info-DGPSCorrections,
  ie-Extensions
                       OPTIONAL.
DGPSCorrections-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DGPSThresholds ::= SEQUENCE {
  prcdeviation
                      PRCDeviation,
                      ie-Extensions
                                                                             OPTIONAL,
```

```
DGPSThresholds-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DiversityControlField ::= ENUMERATED {
    may,
   must,
   must-not,
DiversityMode ::= ENUMERATED {
    none,
    sTTD,
    closed-loop-model,
    closed-loop-mode2,
DL-DPCH-SlotFormat ::= INTEGER (0..16,...)
DL-DPCH-TimingAdjustment ::= ENUMERATED {
    timing-advance,
    timing-delay
DL-Timeslot-Information ::= SEQUENCE (SIZE (1.. maxNrOfDLTSs)) OF DL-Timeslot-InformationItem
DL-Timeslot-InformationItem ::= SEQUENCE {
    timeSlot
                                            TimeSlot,
    midambleShiftAndBurstType
                                            MidambleShiftAndBurstType,
    tFCI-Presence
                                            TFCI-Presence,
    dL-Code-Information
                                            TDD-DL-Code-Information,
    iE-Extensions
                                            ProtocolExtensionContainer { { DL-Timeslot-InformationItem-ExtIEs} }
                                                                                                                       OPTIONAL,
DL-Timeslot-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-TimeslotLCR-Information ::= SEQUENCE (SIZE (1.. maxNrOfDLTSLCRs)) OF DL-TimeslotLCR-InformationItem
DL-TimeslotLCR-InformationItem ::= SEQUENCE {
    timeSlotLCR
                                            TimeSlotLCR,
    midambleShiftLCR
                                            MidambleShiftLCR,
    tFCI-Presence
                                            TFCI-Presence,
    dL-Code-LCR-Information
                                            TDD-DL-Code-LCR-Information,
                                            ProtocolExtensionContainer { { DL-TimeslotLCR-InformationItem-ExtIEs} }
    iE-Extensions
```

```
DL-TimeslotLCR-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-FrameType ::= ENUMERATED {
    typeA,
    typeB,
DL-or-Global-CapacityCredit ::= INTEGER (0..65535)
DL-Power ::= INTEGER (-350..150)
-- Value = DL-Power/10
-- Unit dB, Range -35dB .. +15dB, Step +0.1dB
DLPowerAveragingWindowSize ::= INTEGER (1..60)
DL-PowerBalancing-Information ::= SEQUENCE {
    powerAdjustmentType
                                        PowerAdjustmentType,
    dLReferencePower
                                        DL-Power
                                                       OPTIONAL,
    -- This IE shall be present if Power Adjustment Type IE equals to 'Common'
    dLReferencePowerList-DL-PC-Rqst
                                       DL-ReferencePowerInformationList
    -- This IE shall be present if Power Adjustment Type IE equals to 'Individual'
    maxAdjustmentStep
                                        MaxAdjustmentStep
                                                                OPTIONAL,
    -- This IE shall be present if Power Adjustment Type IE equals to 'Common' or 'Individual'
    adjustmentPeriod
                                        AdjustmentPeriod
                                                                OPTIONAL,
    -- This IE shall be present if Power Adjustment Type IE equals to 'Common' or 'Individual'
                                        ScaledAdjustmentRatio OPTIONAL,
    adjustmentRatio
    -- This IE shall be present if Power Adjustment Type IE equals to 'Common' or 'Individual'
                                        ProtocolExtensionContainer { { DL-PowerBalancing-Information-ExtIEs } } OPTIONAL,
    iE-Extensions
    . . .
DL-PowerBalancing-Information-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
DL-ReferencePowerInformationList
                                       ::= SEQUENCE (SIZE (1..maxNrOfRLs)) OF DL-ReferencePowerInformationItem
DL-ReferencePowerInformationItem ::= SEOUENCE {
    rL-ID
                                RL-ID,
    dl-Reference-Power
                                DL-Power,
                                ProtocolExtensionContainer { {DL-ReferencePowerInformationItem-ExtIEs} } OPTIONAL.
    iE-Extensions
DL-ReferencePowerInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-PowerBalancing-ActivationIndicator ::= ENUMERATED {
    dL-PowerBalancing-Activated
```

OPTIONAL,

OPTIONAL,

```
DL-PowerBalancing-UpdatedIndicator ::= ENUMERATED {
    dL-PowerBalancing-Updated
DL-ScramblingCode ::= INTEGER (0..15)
-- 0= Primary scrambling code of the cell, 1..15= Secondary scrambling code --
DL-TimeslotISCP ::= INTEGER (0..91)
DL-TimeslotISCPInfo ::= SEQUENCE (SIZE (1..maxNrOfDLTSs)) OF DL-TimeslotISCPInfoItem
DL-TimeslotISCPInfoItem ::= SEQUENCE {
    timeSlot
    dL-TimeslotISCP
                               DL-TimeslotISCP,
                               ProtocolExtensionContainer { {DL-TimeslotISCPInfoItem-ExtIEs} }
   iE-Extensions
DL-TimeslotISCPInfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-TimeslotISCPInfoLCR ::= SEQUENCE (SIZE (1..maxNrOfDLTSLCRs)) OF DL-TimeslotISCPInfoItemLCR
DL-TimeslotISCPInfoItemLCR ::= SEQUENCE {
    timeSlotLCR
                               TimeSlotLCR,
    dL-TimeslotISCP
                             DL-TimeslotISCP,
    iE-Extensions
                               ProtocolExtensionContainer { {DL-TimeslotISCPInfoItemLCR-ExtIEs} }
    . . .
DL-TimeslotISCPInfoItemLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DL-TPC-Pattern01Count ::= INTEGER (0..30,...)
Downlink-Compressed-Mode-Method
                                  ::= ENUMERATED
    puncturing,
    sFdiv2,
    higher-layer-scheduling,
DPC-Mode ::= ENUMERATED {
    mode0,
   mode1,
DPCH-ID ::= INTEGER (0..239)
```

```
DSCH-ID ::= INTEGER (0..255)
DSCH-InformationResponse ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-InformationResponseItem
DSCH-InformationResponseItem ::= SEQUENCE {
   dSCH-ID
                                                DSCH-ID,
   bindingID
                                                BindingID
                                                                          OPTIONAL,
   transportLayerAddress
                                                TransportLayerAddress
                                                                          OPTIONAL,
                                                iE-Extensions
                                                                                                                      OPTIONAL,
DSCH-InformationResponseItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
DSCH-FDD-Common-Information ::= SEQUENCE {
                                 EnhancedDSCHPCIndicator
   enhancedDSCHPCIndicator
                                                           OPTIONAL,
                                 EnhancedDSCHPC
   enhancedDSCHPC
                                                           OPTIONAL,
   -- The IE shall be present if the Enhanced DSCH PC Indicator IE is set to "Enhanced DSCH PC Active in the UE".
                                     ProtocolExtensionContainer { { DSCH-FDD-Common-Information-ExtIEs} }
   iE-Extensions
                                                                                                              OPTIONAL,
DSCH-FDD-Common-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
DSCH-FDD-Information ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-FDD-InformationItem
DSCH-FDD-InformationItem ::= SEQUENCE {
   dsch-ID
                                     DSCH-ID,
   transportFormatSet
                                     TransportFormatSet,
   allocationRetentionPriority
                                     AllocationRetentionPriority,
   frameHandlingPriority
                                     FrameHandlingPriority,
   toAWS
                                     ToAWS,
   toAWE
                                     ToAWE,
                                     iE-Extensions
                                                                                                              OPTIONAL,
   . . .
DSCH-FDD-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
     ID id-bindingID
                                        CRITICALITY ignore
                                                                          BindingID
                                                                                         PRESENCE
                                                                                                            optional }
                                                               EXTENSION
     ID id-transportlayeraddress
                                        CRITICALITY ignore
                                                                                                              PRESENCE
                                                               EXTENSION
                                                                          TransportLayerAddress
                                                                                                                         optional },
DSCH-TDD-Information ::= SEQUENCE (SIZE (1..maxNrOfDSCHs)) OF DSCH-TDD-InformationItem
DSCH-TDD-InformationItem ::= SEQUENCE {
   dsch-id
                                        DSCH-ID,
   cCTrCH-ID
                                        CCTrCH-ID,
   transportFormatSet
                                        TransportFormatSet,
```

```
allocationRetentionPriority
                                      AllocationRetentionPriority,
   frameHandlingPriority
                                      FrameHandlingPriority,
   toAWS
                                      TOAWS.
   toAWE
                                      TOAWE,
   iE-Extensions
                                      OPTIONAL,
DSCH-TDD-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    ID id-bindingID
                                      CRITICALITY ignore
                                                           EXTENSION
                                                                      BindingID
                                                                                    PRESENCE
                                                                                                     optional }|
   { ID id-transportlayeraddress
                                      CRITICALITY ignore
                                                                                                        PRESENCE
                                                           EXTENSION
                                                                      TransportLayerAddress
                                                                                                                  optional },
   . . .
DwPCH-Power ::= ENUMERATED {minus1, minus9, minus8, minus7, minus6, minus4, minus3, minus2, minus1, zero, plus1, plus2, plus3, plus4,
plus5, ...}
-- ------
__ ______
End-Of-Audit-Sequence-Indicator ::= INTEGER (-150..400,...)
-- DwPCH-power = power * 10
-- If power <= -15 DwPCH shall be set to -150
-- If power >= 40 DwPCH shall be set to 400
-- Unit dBm, Range -15dBm .. +40 dBm, Step +0.1dB
EnhancedDSCHPC ::= SEQUENCE {
   enhancedDSCHPCWnd EnhancedDSCHPCWnd,
   enhancedDSCHPCCounter EnhancedDSCHPCCounter,
   enhancedDSCHPowerOffset EnhancedDSCHPowerOffset,
EnhancedDSCHPCCounter ::= INTEGER (1..50)
EnhancedDSCHPCIndicator ::= ENUMERATED {
   enhancedDSCHPCActiveInTheUE,
   enhancedDSCHPCNotActiveInTheUE
EnhancedDSCHPCWnd ::= INTEGER (1..10)
EnhancedDSCHPowerOffset ::= INTEGER (-15..0)
__ ______
__ ______
FDD-DL-ChannelisationCodeNumber ::= INTEGER(0.. 511)
-- According to the mapping in [9]. The maximum value is equal to the DL spreading factor -1--
FDD-DL-CodeInformation ::= SEQUENCE (SIZE (1..maxNrOfCodes)) OF FDD-DL-CodeInformationItem
```

```
FDD-DL-CodeInformationItem ::= SEQUENCE {
    dl-ScramblingCode
                                          DL-ScramblingCode,
    fdd-DL-ChannelisationCodeNumber
                                          FDD-DL-ChannelisationCodeNumber,
    transmissionGapPatternSequenceCodeInformation
                                                     TransmissionGapPatternSequenceCodeInformation
                                                                                                                 OPTIONAL.
    iE-Extensions
                                          ProtocolExtensionContainer { { FDD-DL-CodeInformationItem-ExtIEs} }
                                                                                                              OPTIONAL,
FDD-DL-CodeInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
FDD-S-CCPCH-Offset ::= INTEGER (0..149)
-- 0: 0 chip, 1: 256 chip, 2: 512 chip, .. ,149: 38144 chip [7] --
FDD-TPC-DownlinkStepSize ::= ENUMERATED {
    step-size0-5,
    step-sizel,
    step-size1-5,
    step-size2,
FirstRLS-Indicator ::= ENUMERATED {
    first-RLS.
    not-first-RLS.
FNReportingIndicator ::= ENUMERATED {
fN-reporting-required,
 fN-reporting-not-required
FrameHandlingPriority ::= INTEGER (0..15)
-- 0=lower priority, 15=higher priority --
FrameAdjustmentValue ::= INTEGER(0..4095)
FrameOffset ::= INTEGER (0..255)
FPACH-Power ::= INTEGER (-150..400,...) -- FPACH-power = power * 10
-- If power <= -15 FPACH shall be set to -150
-- If power >= 40 FPACH shall be set to 400
-- Unit dBm, Range -15dBm .. +40 dBm, Step +0.1dB
-- ------
-- -----
GapLength
                      ::= INTEGER (1..14)
-- Unit slot
```

```
GapDuration
                        ::= INTEGER (1..144,...)
-- Unit frame
GPS-Almanac ::= SEOUENCE {
                         BIT STRING (SIZE (8)),
    wn<sub>a</sub>-alm
   sat-info-almanac
                         SAT-Info-Almanac,
    sVGlobalHealth-alm BIT STRING (SIZE (364)) OPTIONAL,
    ie-Extensions
                         ProtocolExtensionContainer { GPS-Almanac-ExtIEs} }
                                                                                      OPTIONAL,
GPS-Almanac-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
GPS-Ionospheric-Model ::= SEQUENCE {
   alpha-zero-ionos
                         BIT STRING (SIZE (8)),
   alpha-one-ionos
                         BIT STRING (SIZE (8)),
   alpha-two-ionos
                         BIT STRING (SIZE (8)),
   alpha-three-ionos
                         BIT STRING (SIZE (8)),
   beta-zero-ionos
                         BIT STRING (SIZE (8)),
   beta-one-ionos
                         BIT STRING (SIZE (8)),
   beta-two-ionos
                         BIT STRING (SIZE (8)),
   beta-three-ionos
                         BIT STRING (SIZE (8)),
   ie-Extensions
                         ProtocolExtensionContainer { GPS-Ionospheric-Model-ExtIEs} }
                                                                                              OPTIONAL,
   . . .
GPS-Ionospheric-Model-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
GPS-Information ::= SEQUENCE (SIZE (0..maxNoGPSItems)) OF GPS-Information-Item
-- This IE shall be present if the Information Type Item IE indicates 'GPS Information'
GPS-Information-Item ::= ENUMERATED {
   gps-navigation-model-and-time-recovery,
   gps-ionospheric-model,
   gps-utc-model,
   gps-almanac,
   gps-rt-integrity,
GPS-RealTime-Integrity ::= CHOICE {
    bad-satellites
                                GPSBadSat-Info-RealTime-Integrity,
    no-bad-satellites
                                NULT.
```

```
GPSBadSat-Info-RealTime-Integrity ::= SEQUENCE {
    sat-info
                                    SATInfo-RealTime-Integrity,
    ie-Extensions
                                    ProtocolExtensionContainer { GPSBadSat-Info-RealTime-Integrity-ExtIEs} }
                                                                                                                        OPTIONAL,
GPSBadSat-Info-RealTime-Integrity-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
GPS-NavigationModel-and-TimeRecovery ::= SEOUENCE (SIZE (1..maxNoSat)) OF GPS-NavandRecovery-Item
GPS-NavandRecovery-Item ::= SEQUENCE
  tx-tow-nav
                                   INTEGER (0..1048575),
  sat-id-nav
                                   SAT-ID,
  tlm-message-nav
                                   BIT STRING (SIZE (14)),
  tlm-revd-c-nav
                                   BIT STRING (SIZE (2)),
 ho-word-nav
                                   BIT STRING (SIZE (22)),
 w-n-nav
                                   BIT STRING (SIZE (10)),
  ca-or-p-on-12-nav
                                   BIT STRING (SIZE (2)),
 user-range-accuracy-index-nav
                                   BIT STRING (SIZE (4)),
  sv-health-nav
                                   BIT STRING (SIZE (6)),
 iodc-nav
                                   BIT STRING (SIZE (10)),
 12-p-dataflag-nav
                                   BIT STRING (SIZE (1)),
  sfl-reserved-nav
                                   BIT STRING (SIZE (87)),
  t-qd-nav
                                   BIT STRING (SIZE (8)),
  t-oc-nav
                                   BIT STRING (SIZE (16)),
 a-f-2-nav
                                   BIT STRING (SIZE (8)),
 a-f-1-nav
                                   BIT STRING (SIZE (16)),
 a-f-zero-nav
                                   BIT STRING (SIZE (22)),
 c-rs-nav
                                   BIT STRING (SIZE (16)),
 delta-n-nav
                                   BIT STRING (SIZE (16)),
 m-zero-nav
                                   BIT STRING (SIZE (32)),
 c-uc-nav
                                   BIT STRING (SIZE (16)),
                                   BIT STRING (SIZE (32)),
  gps-e-nav
  c-us-nav
                                   BIT STRING (SIZE (16)),
  a-sqrt-nav
                                   BIT STRING (SIZE (32)),
  t-oe-nav
                                   BIT STRING (SIZE (16)),
  fit-interval-flag-nav
                                   BIT STRING (SIZE (1)),
  aodo-nav
                                   BIT STRING (SIZE (5)),
  c-ic-nav
                                   BIT STRING (SIZE (16)),
  omega-zero-nav
                                   BIT STRING (SIZE (32)),
  c-is-nav
                                   BIT STRING (SIZE (16)),
 i-zero-nav
                                   BIT STRING (SIZE (32)),
  c-rc-nav
                                   BIT STRING (SIZE (16)),
  gps-omega-nav
                                   BIT STRING (SIZE (32)),
  omegadot-nav
                                   BIT STRING (SIZE (24)),
  idot-nav
                                   BIT STRING (SIZE (14)),
  spare-zero-fill
                                   BIT STRING (SIZE (20)),
  ie-Extensions
                                   ProtocolExtensionContainer { { GPS-NavandRecovery-Item-ExtIEs} }
                                                                                                                        OPTIONAL,
```

```
GPS-NavandRecovery-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
GPS-RX-POS ::= SEQUENCE {
    latitudeSign
                               ENUMERATED {north, south},
    latitude
                               INTEGER (0..8388607),
    longitude
                               INTEGER (-8388608..8388607),
    directionOfAltitude
                               ENUMERATED {height, depth},
    altitude
                               INTEGER (0..32767),
                               ProtocolExtensionContainer { { GPS-RX-POS-ExtIEs} } OPTIONAL,
    iE-Extensions
GPS-RX-POS-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
GPS-Status-Health ::= ENUMERATED {
   udre-scale-1dot0,
   udre-scale-0dot75,
   udre-scale-0dot5,
   udre-scale-0dot3,
   udre-scale-0dot1,
   no-data,
   invalid-data
GPSTOW ::= INTEGER (0..604799)
GPS-UTC-Model ::= SEQUENCE {
   a-one-utc
               BIT STRING (SIZE (24)),
   a-zero-utc BIT STRING (SIZE (32)),
t-ot-utc BIT STRING (SIZE (8)),
  t-ot-utc BIT STRING (SIZE (8)), delta-t-ls-utc BIT STRING (SIZE (8)), w-n-t-utc BIT STRING (SIZE (8)), w-n-lsf-utc BIT STRING (SIZE (8)), dn-utc BIT STRING (SIZE (8)), delta-t-lsf-utc BIT STRING (SIZE (8)),
   ie-Extensions
                            OPTIONAL,
   . . .
GPS-UTC-Model-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
__ ------
HAROMemoryPartitioningFDD ::= SEOUENCE (SIZE (1..maxNrOfHAROProcesses)) OF HAROMemoryPartitioning-ItemFDD
HARQMemoryPartitioning-ItemFDD ::= SEQUENCE {
   process-Memory-Size
                                      INTEGER (0..172800,...),
                                      ProtocolExtensionContainer { { HARQMemoryPartitioning-ItemFDD-ExtIEs} }
   iE-Extensions
                                                                                                                 OPTIONAL,
HARQMemoryPartitioning-ItemFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HAROMemoryPartitioningTDD ::= SEOUENCE (SIZE (1..maxNrOfHAROProcesses)) OF HAROMemoryPartitioning-ItemTDD
HARQMemoryPartitioning-ItemTDD ::= SEQUENCE {
   process-Memory-Size
                                      INTEGER (0..168960,...),
                                      ProtocolExtensionContainer { { HARQMemoryPartitioning-ItemTDD-ExtIEs} }
   iE-Extensions
                                                                                                                 OPTIONAL,
HARQMemoryPartitioning-ItemTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-FDD-Information ::= SEQUENCE {
   hsDSCH-MACdFlow-Specific-Info
                                      HSDSCH-MACdFlow-Specific-InfoList,
   ueCapability-Info
                                      UE-Capability-InformationFDD,
   hargMemoryPartitioningFDD
                                      HARQMemoryPartitioningFDD,
   measFeedbackOffset
                                      INTEGER (0..79,...),
   iE-Extensions
                                      ProtocolExtensionContainer { { HSDSCH-FDD-Information-ExtIEs} } 
                                                                                                                 OPTIONAL.
HSDSCH-FDD-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
HSDSCH-TDD-Information ::= SEQUENCE {
   hsDSCH-MACdFlow-Specific-Info
                                      HSDSCH-MACdFlow-Specific-InfoList,
                                      UE-Capability-InformationTDD,
   ueCapability-Info
   harqMemoryPartitioningTDD
                                      HARQMemoryPartitioningTDD,
   iE-Extensions
                                      ProtocolExtensionContainer { { HSDSCH-TDD-Information-ExtIEs} }
                                                                                                                 OPTIONAL,
HSDSCH-TDD-Information-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
HSDSCH-MACdFlow-Specific-InfoList ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-MACdFlow-Specific-InfoItem
HSDSCH-MACdFlow-Specific-InfoItem ::= SEQUENCE {
    hsDSCH-MACdFlow-ID
                                        HSDSCH-MACdFlow-ID.
   hler
                                        BLER.
    allocationRetentionPriority
                                        AllocationRetentionPriority,
    bindingID
                                        BindingID
                                                                     OPTIONAL,
    transportLayerAddress
                                        TransportLayerAddress
                                                                     OPTIONAL,
    priorityQueueInfo
                                        PriorityQueue-InfoList,
                                        ProtocolExtensionContainer { { HSDSCH-MACdFlow-Specific-InfoItem-ExtIEs} }
    iE-Extensions
                                                                                                                        OPTIONAL,
HSDSCH-MACdFlow-Specific-InfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-Information-to-Modify ::= SEQUENCE {
    hsDSCH-MACdFlow-Specific-Info-to-Modify
                                                     HSDSCH-MACdFlow-Specific-InfoList-to-Modify
    measFeedbackRepCycleK
                                                     ENUMERATED { measurement-Feedback-Reporting-Cycle-K1, measurement-Feedback-Reporting-Cycle-K2 }
            OPTIONAL,
    -- only for FDD
                                        ProtocolExtensionContainer { { HSDSCH-Information-to-Modify-ExtIEs} }
    iE-Extensions
                                                                                                                        OPTIONAL,
    . . .
HSDSCH-Information-to-Modify-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-MACdFlow-Specific-InfoList-to-Modify ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-MACdFlow-Specific-InfoItem-to-Modify
HSDSCH-MACdFlow-Specific-InfoItem-to-Modify ::= SEQUENCE {
    hsDSCH-MACdFlow-ID
                                        HSDSCH-MACdFlow-ID,
   bler
                                        BLER
                                                                                     OPTIONAL,
    allocationRetentionPriority
                                        AllocationRetentionPriority
                                                                                     OPTIONAL,
    transportBearerRequestIndicator
                                        TransportBearerRequestIndicator,
    bindingID
                                        BindingID
                                                                                     OPTIONAL,
                                        TransportLayerAddress
    transportLayerAddress
                                                                                     OPTIONAL,
    priorityOueueInfotoModify
                                        PriorityOueue-InfoList-to-Modify
                                                                                     OPTIONAL,
                                        ProtocolExtensionContainer { { HSDSCH-MACdFlow-Specific-InfoItem-to-Modify-ExtIEs} }
    iE-Extensions
                                                                                                                                 OPTIONAL,
    . . .
HSDSCH-MACdFlow-Specific-InfoItem-to-Modify-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-FDD-Information-Response ::= SEQUENCE {
    hsDSCH-MACdFlow-Specific-InformationResp
                                                     HSDSCH-MACdFlow-Specific-InformationResp,
    hsSCCH-Specific-Information-ResponseFDD
                                                     HSSCCH-Specific-InformationRespListFDD,
    measFeedback-CycleK1
                                                     Measurement-Feedback-Reporting-Cycle,
    measFeedback-CycleK2
                                                     Measurement-Feedback-Reporting-Cycle,
```

```
ProtocolExtensionContainer { { HSDSCH-FDD-Information-Response-ExtIEs } }
    iE-Extensions
                                                                                                                                    OPTIONAL,
HSDSCH-FDD-Information-Response-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-TDD-Information-Response ::= SEQUENCE {
    hsDSCH-MACdFlow-Specific-InformationResp
                                                     HSDSCH-MACdFlow-Specific-InformationResp,
   hsSCCH-Specific-Information-ResponseTDD
                                                     HSSCCH-Specific-InformationRespListTDD
                                                                                                                     OPTIONAL,
   hsSCCH-Specific-Information-ResponseTDDLCR
                                                     HSSCCH-Specific-InformationRespListTDDLCR
                                                                                                                     OPTIONAL,
                                                     ProtocolExtensionContainer { { HSDSCH-TDD-Information-Response-ExtIEs } }
    iE-Extensions
                                                                                                                                    OPTIONAL,
    . . .
HSDSCH-TDD-Information-Response-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-MACdFlow-Specific-InformationResp ::= SEQUENCE (SIZE (1..maxNrOfMACdFlows)) OF HSDSCH-MACdFlow-Specific-InformationResp-Item
HSDSCH-MACdFlow-Specific-InformationResp-Item ::= SEQUENCE {
    hsDSCHMacdFlow-Id
                                                     HSDSCH-MACdFlow-ID,
   bindingID
                                                     BindingID
                                                                                 OPTIONAL,
    transportLayerAddress
                                                    TransportLayerAddress
                                                                                 OPTIONAL,
    hSDSCH-Initial-Capacity-Allocation
                                                    HSDSCH-Initial-Capacity-Allocation OPTIONAL,
    iE-Extensions
                                                     ProtocolExtensionContainer { { HSDSCH-MACdFlow-Specific-InformationRespItem-ExtIEs } }
    OPTIONAL,
HSDSCH-MACdFlow-Specific-InformationRespItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-Initial-Capacity-Allocation::= SEQUENCE (SIZE (1..16)) OF HSDSCH-Initial-Capacity-AllocationItem
HSDSCH-Initial-Capacity-AllocationItem ::= SEQUENCE {
    schedulingPriorityIndicator
                                    SchedulingPriorityIndicator,
    maximum-MACdPDU-Size
                                    MACdPDU-Size,
    hSDSCH-InitialWindowSize
                                    HSDSCH-InitialWindowSize,
    iE-Extensions
                                    ProtocolExtensionContainer { { HSDSCH-Initial-Capacity-AllocationItem-ExtIEs } } OPTIONAL,
HSDSCH-Initial-Capacity-AllocationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-InitialWindowSize
                                    ::= INTEGER (1..2047)
-- Number of MAC-d PDUs.
-- 2047 = Unlimited number of MAC-d PDUs
```

```
HSSCCH-Specific-InformationRespListFDD ::= SEQUENCE (SIZE (1..maxNrOfHSSCCHCodes)) OF HSSCCH-Codes
HSSCCH-Codes ::= SEQUENCE {
    codeNumber
                                                     INTEGER (1..127),
    iE-Extensions
                                                     ProtocolExtensionContainer { { HSSCCH-Specific-InformationRespItemFDD-ExtIEs } }
HSSCCH-Specific-InformationRespItemFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSSCCH-Specific-InformationRespListTDD ::= SEQUENCE (SIZE (1..maxNrOfHSSCCHCodes)) OF HSSCCH-Specific-InformationRespItemTDD
HSSCCH-Specific-InformationRespItemTDD ::= SEQUENCE {
    timeslot
                                                     TimeSlot,
                                                     MidambleShiftAndBurstType,
    midambleShiftAndBurstType
    tDD-ChannelisationCode
                                                     TDD-ChannelisationCode,
   hSSICH-Info
                                                     HSSICH-Info,
                                                     ProtocolExtensionContainer { { HSSCCH-Specific-InformationRespItemTDD-ExtIEs } }
    iE-Extensions
   OPTIONAL,
    . . .
HSSCCH-Specific-InformationRespItemTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSSCCH-Specific-InformationRespListTDDLCR ::= SEQUENCE (SIZE (1..maxNrOfHSSCCHCodes)) OF HSSCCH-Specific-InformationRespItemTDDLCR
HSSCCH-Specific-InformationRespItemTDDLCR ::= SEQUENCE {
    timeslotLCR
                                                TimeSlotLCR,
    midambleShiftLCR
                                                MidambleShiftLCR,
    tDD-ChannelisationCodeLCR
                                                TDD-ChannelisationCodeLCR,
   hSSICH-InfoLCR
                                                HSSICH-InfoLCR,
   iE-Extensions
                                                ProtocolExtensionContainer { { HSSCCH-Specific-InformationRespItemTDDLCR-ExtIEs } }
    OPTIONAL,
    . . .
HSSCCH-Specific-InformationRespItemTDDLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSSICH-Info ::= SEOUENCE {
    timeslot
                                                     TimeSlot,
    midambleShiftAndBurstType
                                                     MidambleShiftAndBurstType,
    tDD-ChannelisationCode
                                                    TDD-ChannelisationCode,
    iE-Extensions
                                                     ProtocolExtensionContainer { { HSSICH-Info-ExtIEs } }
                                                                                                                  OPTIONAL.
    . . .
HSSICH-Info-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
HSSICH-InfoLCR ::= SEQUENCE {
    timeslotLCR
                                                 TimeSlotLCR,
   midambleShiftLCR
                                                 MidambleShiftLCR.
    tDD-ChannelisationCodeLCR
                                                 TDD-ChannelisationCodeLCR,
                                                 ProtocolExtensionContainer { { HSSICH-Info-LCR-ExtIEs } }
   iE-Extensions
                                                                                                              OPTIONAL,
HSSICH-Info-LCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
HSDSCH-MACdFlow-ID ::= INTEGER (0..maxNrOfMACdFlows-1)
HSDSCH-RNTI ::= INTEGER (0..65535)
HS-PDSCH-FDD-Code-Information ::= SEQUENCE {
  number-of-HS-PDSCH-codes
                                             INTEGER (0..maxCodeNrComp-1),
  hS-PDSCH-Start-code-number
                                             HS-PDSCH-Start-code-number
                                                                            OPTIONAL,
-- Only included when number of HS-DSCH codes > 0
HS-PDSCH-Start-code-number ::= INTEGER (0..maxCodeNrComp-1)
HS-SCCH-ID ::= INTEGER (0..31)
HS-SCCH-FDD-Code-Information ::= SEQUENCE {
   hS-SCCH-FDD-Code-List
                                             HS-SCCH-FDD-Code-List
                                                                            OPTIONAL,
HS-SCCH-FDD-Code-List ::= SEOUENCE (SIZE (1..maxNrOfHSSCCHs)) OF HS-SCCH-FDD-Code-Information-Item
HS-SCCH-FDD-Code-Information-Item ::= INTEGER (0..maxCodeNrComp-1)
-- ------
-- ------
IB-OC-ID ::= INTEGER (1..16)
IB-SG-DATA ::= BIT STRING
-- Contains SIB data fixed or "SIB data variable" in segment as encoded in ref.[18].
IB-SG-POS ::= INTEGER (0..4094)
-- Only even positions allowed
IB-SG-REP ::= ENUMERATED {rep4, rep8, rep16, rep32, rep64, rep128, rep256, rep512, rep1024, rep2048, rep4096}
IB-Type ::= ENUMERATED {
   mIB,
```

```
sB1,
    sB2.
    sIB1.
    sIB2,
    sIB3,
    sIB4,
    sIB5,
    sIB6,
    sIB7,
    sIB8.
    sIB9,
    sIB10,
    sIB11,
    sIB12,
    sIB13,
    sIB13dot1,
    sIB13dot2,
    sIB13dot3,
    sIB13dot4,
    sIB14,
    sIB15,
    sIB15dot1,
    sIB15dot2,
    sIB15dot3,
    sIB16,
    . . . ,
    sIB17,
    sIB15dot4,
    sIB18,
    sIB15dot5
InformationReportCharacteristics ::= CHOICE {
    onDemand
    periodic
                             InformationReportCharacteristicsType-ReportPeriodicity,
    onModification
                             InformationReportCharacteristicsType-OnModification,
InformationReportCharacteristicsType-ReportPeriodicity ::= CHOICE {
    min
                        ReportPeriodicity-Scaledmin,
                        ReportPeriodicity-Scaledhour,
    hours
InformationReportCharacteristicsType-OnModification ::= SEQUENCE
    information-thresholds
                                   InformationThresholds
                                                              OPTIONAL,
    ie-Extensions
                                   ProtocolExtensionContainer { { InformationReportCharacteristicsType-OnModification-ExtIEs} } OPTIONAL,
   . . .
InformationReportCharacteristicsType-OnModification-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
InformationThresholds ::= CHOICE {
    dgps
                        DGPSThresholds,
    . . .
InformationExchangeID ::= INTEGER (0..1048575)
InformationType ::= SEQUENCE {
    information-Type-Item
                                Information-Type-Item,
    gPSInformation
                                GPS-Information OPTIONAL,
    -- The IE shall be present if the Information Type Item IE indicates "GPS Information".
    iE-Extensions
                                 ProtocolExtensionContainer { { Information-Type-ExtIEs} } 
                                                                                                  OPTIONAL,
Information-Type-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Information-Type-Item ::= ENUMERATED {
    gpsinformation,
    dgpscorrections,
    gpsrxpos,
    . . .
InnerLoopDLPCStatus ::= ENUMERATED {
    active,
    inactive
IPDL-Indicator ::= ENUMERATED {
    active,
    inactive
IPDL-FDD-Parameters ::= SEQUENCE {
                                     ENUMERATED{sp5,sp7,sp10,sp15,sp20,sp30,sp40,sp50,...},
    iP-SpacingFDD
    iP-Length
                                     ENUMERATED{len5, len10},
    seed
                                     INTEGER(0..63),
    burstModeParams
                                     BurstModeParams
                                                         OPTIONAL,
                            ProtocolExtensionContainer { { IPDLFDDParameter-ExtIEs} }
    iE-Extensions
                                                                                          OPTIONAL,
IPDLFDDParameter-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
IPDL-TDD-Parameters ::= SEQUENCE {
   iP-SpacingTDD
                             ENUMERATED{sp30,sp40,sp50,sp70,sp100,...},
   iP-Start
                             INTEGER(0..4095),
   iP-Slot
                             INTEGER(0..14),
                             ENUMERATED{switchOff-1-Frame,switchOff-2-Frames},
   iP-PCCPCH
   burstModeParams
                             BurstModeParams
                                            OPTIONAL,
                      ProtocolExtensionContainer { { IPDLTDDParameter-ExtIEs} }
   iE-Extensions
IPDL-TDD-Parameters-LCR ::= SEQUENCE {
   iP-SpacingTDD
                             ENUMERATED{sp30,sp40,sp50,sp70,sp100,...},
   iP-Start
                             INTEGER(0..4095),
                             ENUMERATED{first, second, both},
   iP-Sub
                             BurstModeParams
   burstModeParams
                                             OPTIONAL,
                      ProtocolExtensionContainer { { IPDLTDDParameterLCR-ExtIEs} }
   iE-Extensions
                                                                          OPTIONAL,
BurstModeParams ::= SEQUENCE {
   burstStart
                                INTEGER(0..15),
   burstLenth
                                INTEGER(10..25),
   burstFreq
                                INTEGER(1..16),
   . . .
IPDLTDDParameter-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
IPDLTDDParameterLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
-- -----
-- -----
-- -----
__ ______
-- ------
LimitedPowerIncrease ::= ENUMERATED {
   used,
   not-used
```

```
Local-Cell-ID ::= INTEGER (0..268435455)
-- -----
MACdPDU-Size ::= INTEGER (1..5000,...)
MACdPDU-Size-Indexlist ::= SEQUENCE (SIZE (1..maxNrOfMACdPDUIndexes)) OF MACdPDU-Size-IndexItem
MACdPDU-Size-IndexItem ::= SEQUENCE {
                                      INTEGER (0..7),
   macdPDU-Size
                                      MACdPDU-Size,
   iE-Extensions
                                      ProtocolExtensionContainer { { MACdPDU-Size-IndexItem-ExtIEs} }
                                                                                                                 OPTIONAL,
MACdPDU-Size-IndexItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
MACdPDU-Size-Indexlist-to-Modify ::= SEQUENCE (SIZE (1..maxNrOfMACdPDUIndexes)) OF MACdPDU-Size-IndexItem-to-Modify
MACdPDU-Size-IndexItem-to-Modify ::= SEQUENCE {
   sID
                                      INTEGER (0..7),
    macdPDU-Size
                                      MACdPDU-Size
                                                                                                              OPTIONAL,
                                      ProtocolExtensionContainer { { MACdPDU-Size-IndexItem-to-Modify-ExtIEs} }
    iE-Extensions
                                                                                                                 OPTIONAL,
MACdPDU-Size-IndexItem-to-Modify-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Measurement-Feedback-Reporting-Cycle ::= ENUMERATED {
   v0,
   v1,
    ν5,
    v10,
    v20,
    v40,
   v80,
    . . .
MaximumDL-PowerCapability ::= INTEGER(0..500)
-- Unit dBm, Range OdBm .. 50dBm, Step +0.1dB
Maximum-PDSCH-Power ::= SEQUENCE {
    maximum-PDSCH-Power-SF4
                              DL-Power
                                             OPTIONAL,
   maximum-PDSCH-Power-SF8
                              DL-Power
                                             OPTIONAL,
    maximum-PDSCH-Power-SF16
                              DL-Power
                                             OPTIONAL,
    maximum-PDSCH-Power-SF32
                                             OPTIONAL,
                              DL-Power
    maximum-PDSCH-Power-SF64
                              DL-Power
                                             OPTIONAL,
```

```
maximum-PDSCH-Power-SF128
                                DL-Power
                                                OPTIONAL,
    maximum-PDSCH-Power-SF256 DL-Power
                                                OPTIONAL,
    iE-Extensions
                            ProtocolExtensionContainer { { Maximum-PDSCH-Power-ExtIEs} } }
                                                                                                 OPTIONAL.
Maximum-PDSCH-Power-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
MaximumTransmissionPower ::= INTEGER(0..500)
-- Unit dBm, Range OdBm .. 50dBm, Step +0.1dB
MaxNrOfUL-DPDCHs ::= INTEGER (1..6)
Max-Number-of-PCPCHes ::= INTEGER (1..64,...)
MaxPRACH-MidambleShifts ::= ENUMERATED {
    shift4,
    shift8,
    . . .
MeasurementFilterCoefficient ::= ENUMERATED {k0, k1, k2, k3, k4, k5, k6, k7, k8, k9, k11, k13, k15, k17, k19,...}
-- Measurement Filter Coefficient to be used for measurement
MeasurementID ::= INTEGER (0..1048575)
MessageStructure ::= SEQUENCE (SIZE (1..maxNrOfLevels)) OF
    SEOUENCE {
        iE-ID
                                ProtocolIE-ID,
        repetitionNumber
                                RepetitionNumber1
                                                         OPTIONAL,
        iE-Extensions
                                ProtocolExtensionContainer { {MessageStructure-ExtIEs} } OPTIONAL,
MessageStructure-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
MidambleConfigurationBurstType1And3 ::=
                                            ENUMERATED {v4, v8, v16}
MidambleConfigurationBurstType2 ::=
                                        ENUMERATED {v3, v6}
MidambleShiftAndBurstType ::=
                                    CHOICE {
    type1
                                        SEQUENCE ·
        midambleConfigurationBurstType1And3 MidambleConfigurationBurstType1And3,
        midambleAllocationMode
                                            CHOICE {
            defaultMidamble
                                                NULL,
            commonMidamble
                                                NULL,
            ueSpecificMidamble
                                                MidambleShiftLong,
            . . .
        },
```

```
},
    type2
                                         SEQUENCE {
                                            MidambleConfigurationBurstType2,
        midambleConfigurationBurstType2
        midambleAllocationMode
                                             CHOICE {
            defaultMidamble
                                                 NULL,
            commonMidamble
                                                 NULL,
            ueSpecificMidamble
                                                 MidambleShiftShort,
        . . .
                                        SEQUENCE
    type3
        midambleConfigurationBurstType1And3 MidambleConfigurationBurstType1And3,
        midambleAllocationMode
                                            CHOICE {
            defaultMidamble
            ueSpecificMidamble
                                                 MidambleShiftLong,
        . . .
MidambleShiftLong ::=
                                    INTEGER (0..15)
MidambleShiftShort ::=
                                     INTEGER (0..5)
MidambleShiftLCR ::= SEQUENCE {
    midambleAllocationMode
                                MidambleAllocationMode,
    midambleShift
                                MidambleShiftLong
                                                         OPTIONAL,
    -- The IE shall be present if the Midamble Allocation Mode IE is set to "UE specific midamble".
    iE-Extensions
                                ProtocolExtensionContainer { {MidambleShiftLCR-ExtIEs} }
                                                                                                  OPTIONAL,
    . . .
MidambleAllocationMode ::= ENUMERATED {
    defaultMidamble,
    commonMidamble,
    uESpecificMidamble,
MidambleShiftLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
MinimumDL-PowerCapability ::= INTEGER(0..800)
-- Unit dBm, Range -30dBm .. 50dBm, Step +0.1dB
MinSpreadingFactor ::= ENUMERATED {
        v4,
        v8,
        v16,
        v32,
```

```
v64,
                                     v128,
                                     v256,
                                     v512
Modulation ::= ENUMERATED {
                   eightPSK,
                    . . .
MinUL-ChannelisationCodeLength ::= ENUMERATED {
                   v4,
                   v8,
                   v16,
                    v32,
                    v64,
                   v128,
                    v256,
MultiplexingPosition ::= ENUMERATED {
                    fixed,
                    flexible
-- -----
-- -----
NCyclesPerSFNperiod ::= ENUMERATED {
                   v1,
                   v2.
                   v4,
                    v8,
                    . . . ,
                   v16,
                   v32,
                    v64
NEOT ::= INTEGER (0..8)
NFmax ::= INTEGER (1..64,...)
NRepetitionsPerCyclePeriod ::= INTEGER (2..10)
N-INSYNC-IND ::= INTEGER (1..256)
N-OUTSYNC-IND ::= INTEGER (1..256)
{\tt NeighbouringCellMeasurementInformation} \ ::= \ {\tt SEQUENCE} \ ({\tt SIZE} \ ({\tt 1..maxNrOfMeasNCell})) \ {\tt OF} \ {\tt
```

```
CHOICE {
                neighbouringFDDCellMeasurementInformation
                                                                NeighbouringFDDCellMeasurementInformation, -- FDD only
                neighbouringTDDCellMeasurementInformation
                                                                NeighbouringTDDCellMeasurementInformation,
                -- Applicable to 3.84Mcps TDD only
                extension-neighbouringCellMeasurementInformation
                                                                    Extension-neighbouringCellMeasurementInformation
Extension-neighbouringCellMeasurementInformation
                                                   ::= ProtocolIE-Single-Container {{ Extension-neighbouringCellMeasurementInformationIE }}
Extension-neighbouringCellMeasurementInformationIE NBAP-PROTOCOL-IES ::= {
    { ID id-neighbouringTDDCellMeasurementInformationLCR
                                                           CRITICALITY reject TYPE NeighbouringTDDCellMeasurementInformationLCR PRESENCE
mandatory },
              -- Applicable to 1.28Mcps TDD only
NeighbouringFDDCellMeasurementInformation ::= SEQUENCE {
    uC-Id
                                        UC-Id,
    uARFCN
                                        UARFCN,
                                        PrimaryScramblingCode,
    primaryScramblingCode
    iE-Extensions
                                        ProtocolExtensionContainer { { NeighbouringFDDCellMeasurementInformationItem-ExtIEs} } OPTIONAL,
NeighbouringFDDCellMeasurementInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
NeighbouringTDDCellMeasurementInformation ::= SEQUENCE {
   uC-Id
                                        UC-Id,
    uARFCN
                                        UARFCN,
    cellParameterID
                                        CellParameterID,
    timeSlot
                                        TimeSlot
                                                                        OPTIONAL,
                                        MidambleShiftAndBurstType
    midambleShiftAndBurstType
                                                                        OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { { NeighbouringTDDCellMeasurementInformationItem-ExtIEs} } OPTIONAL,
NeighbouringTDDCellMeasurementInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
NeighbouringTDDCellMeasurementInformationLCR ::= SEQUENCE
    uC-Id
                                        UC-Id,
    uARFCN
                                        UARFCN,
    cellParameterID
                                        CellParameterID,
    timeSlotLCR
                                        TimeSlotLCR
                                                                OPTIONAL,
    midambleShiftLCR
                                        MidambleShiftLCR
                                                                OPTIONAL,
                                        ProtocolExtensionContainer { { NeighbouringTDDCellMeasurementInformationLCRItem-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
NeighbouringTDDCellMeasurementInformationLCRItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
NodeB-CommunicationContextID ::= INTEGER (0..1048575)
NStartMessage ::= INTEGER (1..8)
NSubCyclesPerCyclePeriod ::= INTEGER (1..16,...)
-- ------
__ ______
-- -----
-- -----
PagingIndicatorLength ::= ENUMERATED {
   v2,
   v4,
   v8,
PayloadCRC-PresenceIndicator ::= ENUMERATED {
   cRC-Included,
   cRC-NotIncluded,
   . . .
PCCPCH-Power ::= INTEGER (-150..400,...)
-- PCCPCH-power = power * 10
-- If power <= -15 PCCPCH shall be set to -150
-- If power >= 40 PCCPCH shall be set to 400
-- Unit dBm, Range -15dBm .. +40 dBm, Step +0.1dB
PCP-Length ::= ENUMERATED{
   ν0,
   v8
PDSCH-CodeMapping ::= SEQUENCE {
   dl-ScramblingCode
                                DL-ScramblingCode,
   signallingMethod
                                   CHOICE {
       code-Range
                                   PDSCH-CodeMapping-PDSCH-CodeMappingInformationList,
       tFCI-Range
                                   PDSCH-CodeMapping-DSCH-MappingInformationList,
      explicit
                                       PDSCH-CodeMapping-PDSCH-CodeInformationList,
       . . . ,
                                   PDSCH-CodeMapping-ReplacedPDSCH-CodeInformationList
       replace
                                       ProtocolExtensionContainer { { PDSCH-CodeMapping-ExtIEs} }
   iE-Extensions
                                                                                                         OPTIONAL,
```

```
PDSCH-CodeMapping-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-CodeMapping-CodeNumberComp ::= INTEGER (0..maxCodeNrComp-1)
PDSCH-CodeMapping-SpreadingFactor ::= ENUMERATED {
   v4,
   v8,
   v16,
   v32,
   v64.
   v128.
   v256,
PDSCH-CodeMapping-PDSCH-CodeMappingInformationList ::= SEOUENCE (SIZE (1..maxNrOfCodeGroups)) OF
   SEQUENCE ·
       spreadingFactor
                                  PDSCH-CodeMapping-SpreadingFactor,
       multi-CodeInfo
                                  PDSCH-Multi-CodeInfo,
       start-CodeNumber
                                     PDSCH-CodeMapping-CodeNumberComp,
       stop-CodeNumber
                                  PDSCH-CodeMapping-CodeNumberComp,
       iE-Extensions
                                      OPTIONAL,
       . . .
PDSCH-CodeMapping-PDSCH-CodeMappingInformationList-Extles NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-CodeMapping-DSCH-MappingInformationList ::= SEQUENCE (SIZE (1..maxNrOfTFCIGroups)) OF
   SEQUENCE {
       maxTFCI-field2-Value
                                      PDSCH-CodeMapping-MaxTFCI-Field2-Value,
       spreadingFactor
                                  PDSCH-CodeMapping-SpreadingFactor,
       multi-CodeInfo
                                  PDSCH-Multi-CodeInfo,
       codeNumber
                                  PDSCH-CodeMapping-CodeNumberComp
                                      ProtocolExtensionContainer { { PDSCH-CodeMapping-DSCH-MappingInformationList-ExtIEs} }
       iE-Extensions
                                                                                                                            OPTIONAL,
       . . .
PDSCH-CodeMapping-DSCH-MappingInformationList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-CodeMapping-MaxTFCI-Field2-Value ::= INTEGER (1..1023)
PDSCH-CodeMapping-PDSCH-CodeInformationList ::= SEQUENCE (SIZE (1..maxNrOfTFCI2Combs)) OF
   SEQUENCE ·
       spreadingFactor
                                  PDSCH-CodeMapping-SpreadingFactor,
       multi-CodeInfo
                                  PDSCH-Multi-CodeInfo,
       codeNumber
                                  PDSCH-CodeMapping-CodeNumberComp
                                      ProtocolExtensionContainer { { PDSCH-CodeMapping-PDSCH-CodeInformationList-ExtIEs} }
       iE-Extensions
                                                                                                                            OPTIONAL,
```

OPTIONAL,

```
PDSCH-CodeMapping-PDSCH-CodeInformationList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-CodeMapping-ReplacedPDSCH-CodeInformationList ::= SEQUENCE (SIZE (1..maxNrOfTFCI2Combs)) OF
   SEQUENCE {
                                 TFCS-MaxTFCI-field2-Value,
       tfci-Field2
       spreadingFactor
                                 PDSCH-CodeMapping-SpreadingFactor,
       multi-CodeInfo
                                 PDSCH-Multi-CodeInfo,
       codeNumber
                                 PDSCH-CodeMapping-CodeNumberComp,
       iE-Extensions
                                 PDSCH-CodeMapping-ReplacedPDSCH-CodeInformationList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PDSCH-Multi-CodeInfo ::= INTEGER (1..16)
PDSCH-ID ::= INTEGER (0..255)
PDSCHSet-ID ::= INTEGER (0..255)
PICH-Mode ::= ENUMERATED {
   v18,
   v36,
   v72,
   v144,
    . . .
PICH-Power ::= INTEGER (-10..5)
-- Unit dB, Range -10dB .. +5dB, Step +1dB
PowerAdjustmentType ::= ENUMERATED {
   none,
   common,
   individual
PowerOffset ::= INTEGER (0..24)
-- PowerOffset = offset * 0.25
-- Unit dB, Range OdB .. +6dB, Step +0.25dB
PowerRaiseLimit ::= INTEGER (0..10)
PRACH-Midamble ::= ENUMERATED {
   inverted,
   direct,
    . . .
```

```
PRC ::= INTEGER (-2047..2047)
--pseudo range correction; scaling factor 0.32 meters
PRCDeviation ::= ENUMERATED {
   one,
   two,
   five,
   ten,
PreambleSignatures ::= BIT STRING {
                                     signature15(0),
                                    signature14(1),
                                    signature13(2),
                                     signature12(3),
                                     signature11(4),
                                     signature10(5),
                                    signature9(6),
                                    signature8(7),
                                    signature7(8),
                                     signature6(9),
                                     signature5(10),
                                     signature4(11),
                                     signature3(12),
                                    signature2(13),
                                    signature1(14),
                                     signature0(15)
                                     } (SIZE (16))
PreambleThreshold ::= INTEGER (0..72)
-- 0= -36.0dB, 1= -35.5dB, ..., 72= 0.0dB
PredictedSFNSFNDeviationLimit ::=INTEGER (1..256)
-- Unit chip, Step 1/16 chip, Range 1/16..16 chip
PredictedTUTRANGPSDeviationLimit ::= INTEGER (1..256)
-- Unit chip, Step 1/16 chip, Range 1/16..16 chip
Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption
Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable
PrimaryCPICH-Power ::= INTEGER(-100..500)
-- step 0.1 (Range -10.0..50.0) Unit is dBm
```

```
PrimaryScramblingCode ::= INTEGER (0..511)
Priorit.vLevel
                          ::= INTEGER (0..15)
-- 0 = spare, 1 = highest priority, ...14 = lowest priority and 15 = no priority
PriorityOueue-Id ::= INTEGER (0..maxNrOfPriorityOueues-1)
PriorityQueue-InfoList ::= SEQUENCE (SIZE (1..maxNrOfPriorityQueues)) OF PriorityQueue-InfoItem
PriorityQueue-InfoItem ::= SEQUENCE {
   priorityQueueId
                                      PriorityQueue-Id,
   schedulingPriorityIndicator
                                      SchedulingPriorityIndicator,
   macdPDU-Size-Index
                                      MACdPDU-Size-Indexlist,
   iE-Extensions
                                      ProtocolExtensionContainer { { PriorityOueue-InfoItem-ExtIEs} }
                                                                                                                OPTIONAL,
PriorityOueue-InfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PriorityQueue-InfoList-to-Modify ::= SEQUENCE (SIZE (1..maxNrOfPriorityQueues)) OF PriorityQueue-InfoItem-to-Modify
PriorityQueue-InfoItem-to-Modify ::= SEQUENCE {
   priorityQueueId
                                      PriorityQueue-Id,
   schedulingPriorityIndicator
                                      SchedulingPriorityIndicator
                                                                                                              OPTIONAL,
   macdPDU-Size-Index-to-Modify
                                      MACdPDU-Size-Indexlist-to-Modify
                                                                                                              OPTIONAL,
                                      ProtocolExtensionContainer { { PriorityOueue-InfoItem-to-Modify-ExtIEs} }
   iE-Extensions
                                                                                                                OPTIONAL,
PriorityQueue-InfoItem-to-Modify-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
PrimaryCCPCH-RSCP ::= INTEGER (0..91)
PropagationDelay ::= INTEGER (0..255)
-- Unit: chips, step size 3 chips
-- example: 0 = 0chip, 1 = 3chips
SCH-TimeSlot ::= INTEGER (0..6)
PunctureLimit ::= INTEGER (0..15)
-- 0: 40%; 1: 44%; ... 14: 96%; 15: 100%
PUSCH-ID ::= INTEGER (0..255)
PUSCHSet-ID ::= INTEGER (0..255)
-- -----
```

```
QE-Selector ::= ENUMERATED {
   selected.
   non-selected
Oth-Parameter ::= INTEGER (-20..0)
-- Unit dB, Step 1dB
-- -----
-- ------
RACH-SlotFormat ::= ENUMERATED {
   ν0,
   v1,
   v2.
   v3,
RACH-SubChannelNumbers ::= BIT STRING {
                                     subCh11(0),
                                     subCh10(1),
                                     subCh9(2),
                                     subCh8(3),
                                     subCh7(4),
                                     subCh6(5),
                                     subCh5(6),
                                     subCh4(7),
                                     subCh3(8),
                                     subCh2(9),
                                     subCh1(10),
                                     subCh0(11)
                                     } (SIZE (12))
RL-Specific-DCH-Info ::= SEQUENCE (SIZE (1..maxNrOfDCHs)) OF RL-Specific-DCH-Info-Item
RL-Specific-DCH-Info-Item ::= SEQUENCE {
   dCH-id
                          DCH-ID,
   bindingID
                          BindingID
                                                                                         OPTIONAL,
   transportlayeraddress TransportLayerAddress
                                                                                         OPTIONAL,
                          ProtocolExtensionContainer { { RL-Specific-DCH-Info-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
RL-Specific-DCH-Info-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
Range-Correction-Rate ::= INTEGER (-127..127)
-- scaling factor 0.032 m/s
ReferenceClockAvailability ::= ENUMERATED {
   available,
```

```
notAvailable
ReferenceSFNoffset ::= INTEGER (0..255)
RepetitionLength ::= INTEGER (1..63)
RepetitionPeriod ::= ENUMERATED {
   v1,
   v2,
   v4,
   v8,
   v16.
   v32.
   v64,
RepetitionNumber0 ::= INTEGER (0..255)
RepetitionNumber1 ::= INTEGER (1..256)
RefTFCNumber ::= INTEGER (0..3)
ReportCharacteristics ::= CHOICE {
   onDemand
   periodic
                         ReportCharacteristicsType-ReportPeriodicity,
   event-a
                     ReportCharacteristicsType-EventA,
   event-b
                     ReportCharacteristicsType-EventB,
                     ReportCharacteristicsType-EventC,
   event-c
   event-d
                     ReportCharacteristicsType-EventD,
                     ReportCharacteristicsType-EventE,
   event-e
   event-f
                     ReportCharacteristicsType-EventF,
   extension-ReportCharacteristics
                                    Extension-ReportCharacteristics
Extension-ReportCharacteristics ::= ProtocolIE-Single-Container {{ Extension-ReportCharacteristicsIE }}
Extension-ReportCharacteristicsIE NBAP-PROTOCOL-IES ::= {
   ReportCharacteristicsType-EventA ::= SEQUENCE {
   measurementThreshold
                                ReportCharacteristicsType-MeasurementThreshold,
                                ReportCharacteristicsType-ScaledMeasurementHysteresisTime
   measurementHysteresisTime
                                                                                                            OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { { ReportCharacteristicsType-EventA-ExtIEs} }
                                                                                                            OPTIONAL,
ReportCharacteristicsType-EventA-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
ReportCharacteristicsType-EventB ::= SEQUENCE {
    measurement.Threshold
                                    ReportCharacteristicsType-MeasurementThreshold,
    measurementHvsteresisTime
                                    ReportCharacteristicsType-ScaledMeasurementHysteresisTime
                                                                                                                         OPTIONAL.
    iE-Extensions
                                    ProtocolExtensionContainer { { ReportCharacteristicsType-EventB-ExtIEs} }
                                                                                                                        OPTIONAL,
ReportCharacteristicsType-EventB-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ReportCharacteristicsType-EventC ::= SEQUENCE {
    measurementIncreaseThreshold
                                    ReportCharacteristicsType-MeasurementIncreaseDecreaseThreshold,
    measurementChangeTime
                                    ReportCharacteristicsType-ScaledMeasurementChangeTime,
                                     ProtocolExtensionContainer { { ReportCharacteristicsType-EventC-ExtIEs} }
    iE-Extensions
                                                                                                                         OPTIONAL,
ReportCharacteristicsType-EventC-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ReportCharacteristicsType-EventD ::= SEQUENCE {
    measurementDecreaseThreshold
                                    ReportCharacteristicsType-MeasurementIncreaseDecreaseThreshold,
    measurementChangeTime
                                    ReportCharacteristicsType-ScaledMeasurementChangeTime,
    iE-Extensions
                                     ProtocolExtensionContainer { { ReportCharacteristicsType-EventD-ExtIEs} }
                                                                                                                         OPTIONAL,
    . . .
ReportCharacteristicsType-EventD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
ReportCharacteristicsType-EventE ::= SEQUENCE {
    measurementThreshold1
                                     ReportCharacteristicsType-MeasurementThreshold,
    measurementThreshold2
                                    ReportCharacteristicsType-MeasurementThreshold
                                                                                                  OPTIONAL.
    measurementHysteresisTime
                                     ReportCharacteristicsType-ScaledMeasurementHysteresisTime
                                                                                                 OPTIONAL,
                                     ReportCharacteristicsType-ReportPeriodicity
    reportPeriodicity
                                                                                                  OPTIONAL,
    iE-Extensions
                                     ProtocolExtensionContainer { { ReportCharacteristicsType-EventE-ExtIEs} }
                                                                                                                        OPTIONAL,
    . . .
ReportCharacteristicsType-EventE-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ReportCharacteristicsType-EventF ::= SEOUENCE {
    measurementThreshold1
                                     ReportCharacteristicsType-MeasurementThreshold,
    measurementThreshold2
                                     ReportCharacteristicsType-MeasurementThreshold
                                                                                                  OPTIONAL.
    measurementHysteresisTime
                                     ReportCharacteristicsType-ScaledMeasurementHysteresisTime
                                                                                                 OPTIONAL,
    reportPeriodicity
                                     ReportCharacteristicsType-ReportPeriodicity
                                                                                                  OPTIONAL,
    iE-Extensions
                                     ProtocolExtensionContainer { { ReportCharacteristicsType-EventF-ExtIEs}
                                                                                                                         OPTIONAL,
```

```
ReportCharacteristicsType-EventF-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ReportCharacteristicsType-OnModification ::= SEQUENCE {
   measurementThreshold
                                ReportCharacteristicsType-MeasurementThreshold,
   iE-Extensions
                                 ProtocolExtensionContainer { { ReportCharacteristicsType-OnModification-ExtIEs} }
                                                                                                               OPTIONAL.
       . . .
ReportCharacteristicsType-OnModification-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ReportCharacteristicsType-MeasurementIncreaseDecreaseThreshold ::= CHOICE {
   received-total-wide-band-power
                                                      Received-total-wide-band-power-Value-IncrDecrThres,
   transmitted-carrier-power
                                Transmitted-Carrier-Power-Value,
   acknowledged-prach-preambles
                                        Acknowledged-PRACH-preambles-Value,
   uL-TimeslotISCP
                                UL-TimeslotISCP-Value-IncrDecrThres,
   sir
                             SIR-Value-IncrDecrThres.
                             SIR-Error-Value-IncrDecrThres,
   sir-error
   transmitted-code-power
                                 Transmitted-Code-Power-Value-IncrDecrThres,
                                 RSCP-Value-IncrDecrThres,
   rscp
   round-trip-time
                                Round-Trip-Time-IncrDecrThres,
   acknowledged-PCPCH-access-preambles
                                        Acknowledged-PCPCH-access-preambles,
   detected-PCPCH-access-preambles
                                        Detected-PCPCH-access-preambles,
ReportCharacteristicsType-MeasurementThreshold ::= CHOICE
   received-total-wide-band-power
                                                      Received-total-wide-band-power-Value,
   transmitted-carrier-power
                                 Transmitted-Carrier-Power-Value,
                                        Acknowledged-PRACH-preambles-Value,
   acknowledged-prach-preambles
   uL-TimeslotISCP
                                 UL-TimeslotISCP-Value,
   sir
                             SIR-Value,
   sir-error
                             SIR-Error-Value,
   transmitted-code-power
                                Transmitted-Code-Power-Value,
                                 RSCP-Value,
   rx-timing-deviation
                                 Rx-Timing-Deviation-Value,
                                 Round-Trip-Time-Value,
   round-trip-time
   acknowledged-PCPCH-access-preambles
                                        Acknowledged-PCPCH-access-preambles,
   detected-PCPCH-access-preambles
                                        Detected-PCPCH-access-preambles,
   extension-ReportCharacteristicsType-MeasurementThreshold
                                                              Extension-ReportCharacteristicsType-MeasurementThreshold
Extension-ReportCharacteristicsType-MeasurementThreshold
                                                       ::= ProtocolIE-Single-Container {{ Extension-ReportCharacteristicsType-
MeasurementThresholdIE }}
Extension-ReportCharacteristicsType-MeasurementThresholdIE NBAP-PROTOCOL-IES ::= {
     PRESENCE mandatory } |
     PRESENCE mandatory }
```

```
ReportCharacteristicsType-ScaledMeasurementChangeTime ::= CHOICE {
    msec
                        MeasurementChangeTime-Scaledmsec,
    . . .
MeasurementChangeTime-Scaledmsec ::= INTEGER (1..6000,...)
-- MeasurementChangeTime-Scaledmsec = Time * 10
-- Unit ms, Range 10ms .. 60000ms(1min), Step 10ms
ReportCharacteristicsType-ScaledMeasurementHysteresisTime ::= CHOICE {
                        MeasurementHysteresisTime-Scaledmsec,
    msec
    . . .
MeasurementHysteresisTime-Scaledmsec ::= INTEGER (1..6000,...)
-- MeasurementHysteresisTime-Scaledmsec = Time * 10
-- Unit ms, Range 10ms .. 60000ms(1min), Step 10ms
ReportCharacteristicsType-ReportPeriodicity ::= CHOICE {
    msec
                        ReportPeriodicity-Scaledmsec,
    min
                        ReportPeriodicity-Scaledmin,
    . . .
ReportPeriodicity-Scaledmsec ::= INTEGER (1..6000,...)
-- ReportPeriodicity-msec = ReportPeriodicity * 10
-- Unit ms, Range 10ms .. 60000ms(1min), Step 10ms
ReportPeriodicity-Scaledmin ::= INTEGER (1..60,...)
-- Unit min, Range 1min .. 60min(hour), Step 1min
ReportPeriodicity-Scaledhour ::= INTEGER (1..24,...)
-- Unit hour, Range 1hour .. 24hours(day), Step 1hour
ResourceOperationalState ::= ENUMERATED {
    enabled,
    disabled
RL-ID ::= INTEGER (0..31)
RL-Set-ID
                        ::= INTEGER (0..31)
Round-Trip-Time-IncrDecrThres ::= INTEGER(0..32766)
RNC-ID
                        ::= INTEGER (0..4095)
Round-Trip-Time-Value ::= INTEGER(0..32767)
-- According to mapping in [22]
RSCP-Value ::= INTEGER (0..127)
-- According to mapping in [23]
```

OPTIONAL,

```
RSCP-Value-IncrDecrThres ::= INTEGER (0..126)
Received-total-wide-band-power-Value ::= INTEGER(0..621)
-- According to mapping in [22]/[23]
Received-total-wide-band-power-Value-IncrDecrThres ::= INTEGER (0..620)
RequestedDataValueInformation ::= CHOICE {
   informationAvailable
                              InformationAvailable,
   informationnotAvailable
                              InformationnotAvailable
InformationAvailable::= SEQUENCE {
   requesteddataValue
                          RequestedDataValue,
   ie-Extensions
                          ProtocolExtensionContainer { { InformationAvailableItem-ExtIEs} }
   . . .
InformationAvailableItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
InformationnotAvailable ::= NULL
RequestedDataValue ::= SEQUENCE {
   dgps-corrections
                       DGPSCorrections OPTIONAL,
   qps-navandrecovery
                       GPS-NavigationModel-and-TimeRecovery
   gps-ionos-model
                       GPS-Ionospheric-Model OPTIONAL,
                       GPS-UTC-Model
   qps-utc-model
                                             OPTIONAL,
   gps-almanac
                       GPS-Almanac
                                             OPTIONAL,
   gps-rt-integrity
                       GPS-RealTime-Integrity OPTIONAL,
   gpsrxpos
                       GPS-RX-POS
                                              OPTIONAL,
Rx-Timing-Deviation-Value ::= INTEGER (0..8191)
-- According to mapping in [23]
Rx-Timing-Deviation-Value-LCR ::= INTEGER (0..255)
-- According to mapping in [23]
-- -----
AdjustmentPeriod
                         ::= INTEGER(1..256)
-- Unit Frame
SAT-ID ::= INTEGER (0..63)
```

```
SAT-Info-Almanac ::= SEQUENCE (SIZE (1..maxNoSat)) OF SAT-Info-Almanac-Item
SAT-Info-Almanac-Item ::= SEQUENCE {
   data-id
                    DATA-ID,
   sat-id
                    SAT-ID,
   qps-e-alm
                    BIT STRING (SIZE (16)),
   gps-toa-alm
                    BIT STRING (SIZE (8)),
   gps-delta-I-alm
                    BIT STRING (SIZE (16)),
   omegadot-alm
                    BIT STRING (SIZE (16)),
   svhealth-alm
                    BIT STRING (SIZE (8)),
   gps-a-sgrt-alm
                    BIT STRING (SIZE (24)),
   omegazero-alm
                    BIT STRING (SIZE (24)),
   m-zero-alm
                    BIT STRING (SIZE (24)),
   qps-omega-alm
                    BIT STRING (SIZE (24)),
   gps-af-zero-alm BIT STRING (SIZE (11)),
   qps-af-one-alm
                    BIT STRING (SIZE (11)),
                    ie-Extensions
                                                                                   OPTIONAL,
SAT-Info-Almanac-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
   . . .
SAT-Info-DGPSCorrections ::= SEOUENCE (SIZE (1..maxNoSat)) OF SAT-Info-DGPSCorrections-Item
SAT-Info-DGPSCorrections-Item ::= SEQUENCE {
   sat-id
                                       SAT-ID,
                                       BIT STRING (SIZE (8)),
   iode-dgps
   udre
                                       UDRE,
                                       PRC,
   prc
   range-correction-rate
                                       Range-Correction-Rate,
   ie-Extensions
                                       . . .
SAT-Info-DGPSCorrections-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SATInfo-RealTime-Integrity ::= SEQUENCE (SIZE (1..maxNoSat)) OF SAT-Info-RealTime-Integrity-Item
SAT-Info-RealTime-Integrity-Item ::= SEQUENCE {
 bad-sat-id
                SAT-ID,
                ProtocolExtensionContainer { { SAT-Info-RealTime-Integrity-Item-ExtIEs} }
 ie-Extensions
                                                                                                        OPTIONAL,
SAT-Info-RealTime-Integrity-Item-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
ScaledAdjustmentRatio
                              ::= INTEGER(0..100)
-- AdjustmentRatio = ScaledAdjustmentRatio / 100
MaxAdjustmentStep
                          ::= INTEGER(1..10)
-- Unit Slot
SchedulingPriorityIndicator
                                     ::= INTEGER (0..15)
                                                             -- lowest (0), highest (15)
SID ::= INTEGER (0..maxNrOfMACdPDUIndexes-1)
ScramblingCodeNumber ::= INTEGER (0..15)
SecondaryCCPCH-SlotFormat ::= INTEGER(0..17,...)
Segment-Type ::= ENUMERATED {
       first-segment,
       first-segment-short,
       subsequent-segment,
       last-segment,
       last-segment-short,
       complete-SIB,
       complete-SIB-short,
S-FieldLength ::= ENUMERATED {
       v1,
       v2,
       . . .
SFN ::= INTEGER (0..4095)
SFNSFN-FDD ::= INTEGER (0..614399)
SFNSFN-TDD ::= INTEGER (0..40961)
SFNSFNChangeLimit ::= INTEGER (1..256)
-- Unit chip, Step 1/16 chip, Range 1/16..16 chip
SFNSFNDriftRate ::= INTEGER (-100..100)
-- Unit chip/s, Step 1/256 chip/s, Range -100/256..+100/256 chip/s
SFNSFNDriftRateQuality ::= INTEGER (0..100)
-- Unit chip/s, Step 1/256 chip/s, Range 0..100/256 chip/s
SFNSFNMeasurementThresholdInformation::= SEQUENCE {
   sFNSFNChangeLimit
                                     SFNSFNChangeLimit
                                                                        OPTIONAL,
   predictedSFNSFNDeviationLimit
                                     PredictedSFNSFNDeviationLimit
                                                                        OPTIONAL,
                                  iE-Extensions
                                                                                                                OPTIONAL,
SFNSFNMeasurementThresholdInformation-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
SFNSFNMeasurementValueInformation ::= SEQUENCE {
               \verb|successful| 1 Neighbouring Cells FNSFNObserved Time Difference Measurement Information | States of the content of the cont
                                                                                                                                                                                                                                                                                                                                           SEQUENCE (SIZE(1..maxNrOfMeasNCell)) OF
                              SEQUENCE {
                                            uC-Id
                                                                                                                                                      UC-Id,
                                             sFNSFNValue
                                                                                                        SFNSFNValue.
                                            sFNSFNOuality
                                                                                                                        SFNSFNOuality
                                                                                                                                                                                                                                                 OPTIONAL,
                                            sFNSFNDriftRate
                                                                                                                        SFNSFNDriftRate,
                                                                                                                                                      SFNSFNDriftRateQuality,
                                            sFNSFNDriftRateQuality
                                                                                                                                                                                                    SFNSFNTimeStampInformation.
                                            sFNSFNTimeStampInformation
                                             iE-Extensions
                                                                                                                        ProtocolExtensionContainer { { SuccessfullNeighbouringCellSFNSFNObservedTimeDifferenceMeasurementInformationItem-
ExtIEs} }
                                                            OPTIONAL,
                                             . . .
               unsuccessfull Neighbouring Cell SFNSFNObserved Time Difference Measurement Information and the property of t
                                                                                                                                                                                                                                                                                                                                           SEQUENCE (SIZE(0..maxNrOfMeasNCell-1)) OF
                              SEOUENCE {
                                            uC-Id
                                                                                                                        ProtocolExtensionContainer { { UnsuccessfullNeighbouringCellSFNSFNObservedTimeDifferenceMeasurementInformationItem-
                                             iE-Extensions
ExtIEs } }
                                                            OPTIONAL,
                                                                                        ProtocolExtensionContainer { { SFNSFNMeasurementValueInformationItem-ExtIEs} }
               iE-Extensions
                                                                                                                                                                                                                                                                                                                                                                                                                                                               OPTIONAL,
SFNSFNMeasurementValueInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SuccessfullNeighbouringCellSFNSFNObservedTimeDifferenceMeasurementInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
}
UnsuccessfullNeighbouringCellSFNSFNObservedTimeDifferenceMeasurementInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SFNSFNOuality ::= INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
ShutdownTimer ::= INTEGER (1..3600)
-- Unit sec
SIB-Originator ::= ENUMERATED {
               nodeB,
               cRNC,
```

OPTIONAL,

```
SIR-Error-Value ::= INTEGER (0..125)
-- According to mapping in [22]
SFNSFNTimeStampInformation ::= CHOICE {
    sFNSFNTimeStamp-FDD
    sFNSFNTimeStamp-TDD
                            SFNSFNTimeStamp-TDD,
SFNSFNTimeStamp-TDD::= SEQUENCE {
    sFN
                        SFN,
    timeSlot
                        TimeSlot,
                                    ProtocolExtensionContainer { { SFNSFNTimeStamp-ExtIEs} }
    iE-Extensions
SFNSFNTimeStamp-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SFNSFNValue ::= CHOICE {
    sFNSFN-FDD
                    SFNSFN-FDD,
    sFNSFN-TDD
                    SFNSFN-TDD,
SIR-Error-Value-IncrDecrThres ::= INTEGER (0..124)
SIR-Value ::= INTEGER (0..63)
-- According to mapping in [22]/[23]
SIR-Value-IncrDecrThres ::= INTEGER (0..62)
SignallingBearerRequestIndicator::= ENUMERATED {bearerRequested}
SpecialBurstScheduling ::= INTEGER (1..256)
SSDT-Cell-Identity ::= ENUMERATED {a, b, c, d, e, f, g, h}
SSDT-CellID-Length ::= ENUMERATED {
    short,
    medium,
    long
SSDT-Indication ::= ENUMERATED {
    ssdt-active-in-the-UE,
    ssdt-not-active-in-the-UE
Start-Of-Audit-Sequence-Indicator ::= ENUMERATED {
```

```
start-of-audit-sequence,
   not-start-of-audit-sequence
STTD-Indicator ::= ENUMERATED {
   active,
   inactive,
SSDT-SupportIndicator ::= ENUMERATED {
   sSDT-Supported,
    sSDT-not-supported
SyncCase ::= INTEGER (1..2,...)
SYNCDlCodeId ::= INTEGER (1..32,...)
SyncFrameNumber ::= INTEGER (1..10)
SynchronisationReportCharacteristics ::= SEQUENCE {
    synchronisationReportCharacteristicsType
                                              SynchronisationReportCharacteristicsType,
    synchronisationReportCharactThreExc
                                              SynchronisationReportCharactThreExc
                                                                                     OPTIONAL,
        -- Thie IE shall be included if the synchronisationReportCharacteristicsType IE is set to "thresholdExceeding".
   iE-Extensions
                                              ProtocolExtensionContainer { { SynchronisationReportCharacteristics-ExtIEs } } OPTIONAL,
SynchronisationReportCharacteristics-ExtIEs NBAP-PROTOCOL-EXTENSION ::=
    { ID id-SyncDLCodeIdThreInfoLCR CRITICALITY ignore EXTENSION
                                                                 SyncDLCodeIdThreInfoLCR
                                                                                            PRESENCE optional },
    . . .
SynchronisationReportCharactThreExc ::=
                                          SEQUENCE (SIZE (1..maxNrOfCellSyncBursts)) OF SynchronisationReportCharactThreInfoItem -- Mandatory
for 3.84Mcps TDD only
SynchronisationReportCharactThreInfoItem ::= SEQUENCE {
    syncFrameNumber
                               SyncFrameNumber,
                              SEQUENCE (SIZE (1.. maxNrOfReceptsPerSyncFrame)) OF SynchronisationReportCharactCellSyncBurstInfoItem,
    cellSyncBurstInformation
   iE-Extensions
                               SynchronisationReportCharactThreInfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SynchronisationReportCharactCellSyncBurstInfoItem ::= SEQUENCE {
    cellSyncBurstCode
                                  CellSyncBurstCode,
    cellSyncBurstCodeShift
                                  CellSyncBurstCodeShift,
    cellSyncBurstTiming
                                  CellSyncBurstTiming
                                                                 OPTIONAL,
    cellSyncBurstTimingThreshold
                                  CellSyncBurstTimingThreshold
                                                                 OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { { SynchronisationReportCharactCellSyncBurstInfoItem-ExtIEs } }
                                                                                                                             OPTIONAL,
```

```
SynchronisationReportCharactCellSyncBurstInfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SyncDLCodeIdThreInfoLCR ::= SEQUENCE (SIZE (0..maxNrOfSyncFramesLCR)) OF SyncDLCodeIdThreInfoList --Mandatory for 1.28Mcps TDD only
SyncDLCodeIdThreInfoList ::= SEQUENCE {
                                  SyncFrameNumber,
   syncFrameNoToReceive
   syncDLCodeIdInfoLCR
                                  SyncDLCodeInfoListLCR,
                                  ProtocolExtensionContainer { { SyncDLCodeIdThreInfoList-ExtIEs } }
   iE-Extensions
                                                                                                      OPTIONAL,
SyncDLCodeIdThreInfoList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SyncDLCodeInfoListLCR ::= SEQUENCE (SIZE (1..maxNrOfSyncDLCodesLCR)) OF SyncDLCodeInfoItemLCR
SyncDLCodeInfoItemLCR ::= SEQUENCE {
   svncDLCodeId
                                  SYNCDlCodeId,
                                  CellSyncBurstTiming
   syncDLCodeIdArrivTime
                                                                 OPTIONAL,
    syncDLCodeIdTimingThre
                                  CellSyncBurstTimingThreshold
                                                                 OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { { SyncDLCodeInfoItem-LCR-ExtIEs } }
                                                                                                   OPTIONAL,
SyncDLCodeInfoItem-LCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SynchronisationReportCharacteristicsType ::= ENUMERATED {
   frameRelated,
   sFNperiodRelated,
    cycleLengthRelated,
    thresholdExceeding,
    frequencyAcquisitionCompleted,
    . . .
SynchronisationReportType ::= ENUMERATED {
   initialPhase,
   steadyStatePhase,
   lateEntrantCell,
   frequencyAcquisition,
-- -----
-- -----
```

```
T-Cell ::= ENUMERATED {
    ν0,
    v1,
    v2,
    v3,
    v4,
    v5,
    v6,
    v7,
    v8,
    v9
T-RLFAILURE ::= INTEGER (0..255)
-- Unit seconds, Range Os .. 25.5s, Step 0.1s
TDD-ChannelisationCode ::= ENUMERATED {
    chCodeldiv1,
    chCode2div1,
    chCode2div2,
    chCode4div1,
    chCode4div2,
    chCode4div3,
    chCode4div4,
    chCode8div1,
    chCode8div2,
    chCode8div3,
    chCode8div4,
    chCode8div5,
    chCode8div6,
    chCode8div7,
    chCode8div8,
    chCode16div1,
    chCode16div2.
    chCode16div3,
    chCode16div4,
    chCode16div5,
    chCodel6div6,
    chCode16div7,
    chCode16div8,
    chCode16div9,
    chCode16div10,
    chCode16div11,
    chCode16div12,
    chCode16div13,
    chCode16div14,
    chCode16div15,
    chCode16div16,
TDD-ChannelisationCodeLCR ::= SEQUENCE {
    tDD-ChannelisationCode
                                     TDD-ChannelisationCode,
```

```
modulation
                                    Modulation, -- Modulation options for 1.28Mcps TDD in contrast to 3.84Mcps TDD
    iE-Extensions
                                            ProtocolExtensionContainer { { TDD-ChannelisationCodeLCR-ExtIEs} }
                                                                                                                        OPTIONAL,
TDD-ChannelisationCodeLCR-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-DL-Code-Information ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF TDD-DL-Code-InformationItem
TDD-DL-Code-InformationItem ::= SEQUENCE {
    dPCH-ID
                                            DPCH-ID,
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode,
    iE-Extensions
                                            ProtocolExtensionContainer { { TDD-DL-Code-InformationItem-ExtIEs} }
                                                                                                                        OPTIONAL,
TDD-DL-Code-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-DL-Code-LCR-Information ::= SEQUENCE (SIZE (1..maxNrOfDPCHLCRs)) OF TDD-DL-Code-LCR-InformationItem
TDD-DL-Code-LCR-InformationItem ::= SEQUENCE {
    dPCH-ID
                                            DPCH-ID,
    tdd-ChannelisationCodeLCR
                                            TDD-ChannelisationCodeLCR,
    iE-Extensions
                                            ProtocolExtensionContainer { { TDD-DL-Code-LCR-InformationItem-ExtIEs} }
                                                                                                                           OPTIONAL,
TDD-DL-Code-LCR-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-DPCHOffset ::= CHOICE {
    initialOffset
                        INTEGER (0..255),
    noinitialOffset
                        INTEGER (0..63)
TDD-PhysicalChannelOffset ::= INTEGER (0..63)
TDD-TPC-DownlinkStepSize ::= ENUMERATED {
    step-sizel,
    step-size2,
    step-size3,
TransportFormatCombination-Beta ::= CHOICE {
    signalledGainFactors
                                SEQUENCE {
       gainFactor
                                    CHOICE {
           fdd
                                        SEQUENCE
                betaC
                                            BetaCD,
```

```
betaD
                                            BetaCD,
                iE-Extensions
                                    ProtocolExtensionContainer { { GainFactorFDD-ExtIEs } }
                                                                                                 OPTIONAL,
            t.dd
                                        BetaCD,
       refTFCNumber
                                    RefTFCNumber
                                                    OPTIONAL,
        iE-Extensions
                                ProtocolExtensionContainer { { SignalledGainFactors-ExtIEs } }
                                                                                                                     OPTIONAL,
    computedGainFactors
                                    RefTFCNumber,
GainFactorFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
SignalledGainFactors-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-UL-Code-Information ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF TDD-UL-Code-InformationItem
TDD-UL-Code-InformationItem ::= SEQUENCE {
    dPCH-ID
                                            DPCH-ID,
    tdd-ChannelisationCode
                                            TDD-ChannelisationCode,
                                            ProtocolExtensionContainer { { TDD-UL-Code-InformationItem-ExtIEs} }
    iE-Extensions
                                                                                                                        OPTIONAL,
TDD-UL-Code-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-UL-Code-LCR-Information ::= SEQUENCE (SIZE (1..maxNrOfDPCHLCRs)) OF TDD-UL-Code-LCR-InformationItem
TDD-UL-Code-LCR-InformationItem ::= SEQUENCE {
                                            DPCH-ID,
    tdd-ChannelisationCodeLCR
                                            TDD-ChannelisationCodeLCR,
                                            ProtocolExtensionContainer { { TDD-UL-Code-LCR-InformationItem-ExtIEs} }
    iE-Extensions
                                                                                                                           OPTIONAL,
TDD-UL-Code-LCR-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCI-Coding ::= ENUMERATED {
    v4,
    v8,
    v16,
    v32,
```

```
TFCI-Presence ::= ENUMERATED {
    present,
    not-present
TFCI-SignallingMode ::= SEQUENCE {
    tFCI-SignallingOption
                                TFCI-SignallingMode-TFCI-SignallingOption,
                           TFCI-SignallingMode-SplitType
    splitType
                                                                        OPTIONAL,
    -- This IE shall be present if the TFCI signalling option is split --
                                TFCI-SignallingMode-LengthOfTFCI2
    lengthOfTFCI2
    iE-Extensions
                                ProtocolExtensionContainer { { TFCI-SignallingMode-ExtIEs} }
                                                                                                                     OPTIONAL,
TFCI-SignallingMode-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCI-SignallingMode-LengthOfTFCI2 ::= INTEGER (1..10)
TFCI-SignallingMode-SplitType ::= ENUMERATED {
    hard,
    logical
TFCI-SignallingMode-TFCI-SignallingOption ::= ENUMERATED {
    normal,
    split
TFCI2-BearerInformationResponse ::= SEQUENCE {
    bindingID
                                                    BindingID,
    transportLayerAddress
                                                    TransportLayerAddress,
    iE-Extensions
                                                    ProtocolExtensionContainer {    TFCI2-BearerInformationResponse-ExtIEs} }
TFCI2-BearerInformationResponse-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCI2BearerRequestIndicator ::= ENUMERATED {newBearerRequested}
                    ::= INTEGER (0|15..269)
TGD
-- 0 = Undefined, only one transmission gap in the transmission gap pattern sequence
TGPRC
                    ::= INTEGER (0..511)
-- 0 = infinity
```

```
TGPSID
                    ::= INTEGER (1.. maxTGPS)
TGSN
                    ::= INTEGER (0..14)
TimeSlot ::= INTEGER (0..14)
TimeSlotDirection ::= ENUMERATED {
    ul,
    dl,
    . . .
TimeSlotLCR ::= INTEGER (0..6)
TimeSlotStatus ::= ENUMERATED {
    active,
    not-active,
TimingAdjustmentValue ::= CHOICE {
                       INTEGER (0..255),
    initialPhase
    steadyStatePhase
                      INTEGER (0..1048575)
TimingAdvanceApplied ::= ENUMERATED {
    yes,
    no
-- For 1.28Mcps TDD TimingAdvanceApplied = No
ToAWE ::= INTEGER (0..2559)
-- Unit ms
ToAWS ::= INTEGER (0..1279)
-- Unit ms
Transmission-Gap-Pattern-Sequence-Information ::= SEQUENCE (SIZE (1..maxTGPS)) OF
    SEQUENCE {
        tGPSID
                        TGPSID,
        tGSN
                        TGSN,
        tGL1
                        GapLength,
        tGL2
                        GapLength OPTIONAL,
        tGD
                        TGD,
        tGPL1
                        GapDuration,
        tGPL2
                        GapDuration OPTIONAL,
        uL-DL-mode
                        UL-DL-mode,
        downlink-Compressed-Mode-Method
                                            Downlink-Compressed-Mode-Method
                                                                                 OPTIONAL,
```

```
-- This IE shall be present if the UL/DL mode IE is set to "DL only" or "UL/DL"
                                            Uplink-Compressed-Mode-Method
        uplink-Compressed-Mode-Method
            -- This IE shall be present if the UL/DL mode IE is set to "UL only" or "UL/DL"
        dL-FrameType
                            DL-FrameType,
        delta-SIR1
                            DeltaSIR,
        delta-SIR-after1
                           DeltaSIR,
        delta-SIR2
                            DeltaSIR
                                        OPTIONAL,
        delta-SIR-after2
                           DeltaSIR
                                        OPTIONAL,
        iE-Extensions
                                ProtocolExtensionContainer { {Transmission-Gap-Pattern-Sequence-Information-ExtIEs} } OPTIONAL,
Transmission-Gap-Pattern-Sequence-Information-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransmissionGapPatternSequenceCodeInformation ::= ENUMERATED{
   code-change,
   nocode-change
Transmitted-Carrier-Power-Value ::= INTEGER(0..100)
-- According to mapping in [22]/[23]
Transmitted-Code-Power-Value ::= INTEGER (0..127)
-- According to mapping in [22]/[23]
Transmitted-Code-Power-Value-IncrDecrThres ::= INTEGER (0..112,...)
TransmissionDiversityApplied ::= BOOLEAN
-- true: applied, false: not applied
TransmitDiversityIndicator ::= ENUMERATED {
    active,
    inactive
TFCS ::= SEQUENCE {
    tFCSvalues
                                CHOICE {
       no-Split-in-TFCI
                                    TFCS-TFCSList,
        split-in-TFCI
                                    SEQUENCE {
            transportFormatCombination-DCH
                                                TFCS-DCHList,
            signallingMethod
                                                CHOICE {
                tFCI-Range
                                                TFCS-MapingOnDSCHList,
                explicit
                                                    TFCS-DSCHList,
            iE-Extensions
                                                ProtocolExtensionContainer { { Split-in-TFCI-ExtIEs } }
                                                                                                                       OPTIONAL,
```

```
iE-Extensions
                      ProtocolExtensionContainer { { TFCS-ExtIEs} }
                                                                          OPTIONAL,
Split-in-TFCI-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCS-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCS-TFCSList ::= SEQUENCE (SIZE (1..maxNrOfTFCs)) OF
    SEQUENCE {
       cTFC
                           TFCS-CTFC,
       tFC-Beta
                    TransportFormatCombination-Beta
                                                          OPTIONAL,
       -- The IE shall be present if the TFCS concerns a UL DPCH or PRACH channel [FDD - or PCPCH channel].
       iE-Extensions ProtocolExtensionContainer { { TFCS-TFCSList-ExtIEs} } OPTIONAL,
TFCS-TFCSList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCS-CTFC ::= CHOICE {
   ctfc2bit
                                       INTEGER (0..3),
    ctfc4bit
                                       INTEGER (0..15),
    ctfc6bit
                                       INTEGER (0..63),
    ctfc8bit
                                       INTEGER (0..255),
    ctfc12bit
                                       INTEGER (0..4095),
    ctfc16bit
                                       INTEGER (0..65535),
    ctfcmaxbit
                                       INTEGER (0..maxCTFC)
TFCS-DCHList ::= SEQUENCE (SIZE (1..maxNrOfTFCI1Combs)) OF
    SEQUENCE {
       CTFC
                           TFCS-CTFC,
       iE-Extensions
                           ProtocolExtensionContainer { { TFCS-DCHList-ExtIEs} }
                                                                                      OPTIONAL,
TFCS-DCHList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCS-MapingOnDSCHList ::= SEQUENCE (SIZE (1..maxNrOfTFCIGroups)) OF
    SEQUENCE {
       maxTFCI-field2-Value
                                 TFCS-MaxTFCI-field2-Value,
                               TFCS-CTFC,
       cTFC-DSCH
```

```
ProtocolExtensionContainer { { TFCS-MapingOnDSCHList-ExtIEs} }
       iE-Extensions
                                                                                                                  OPTIONAL,
TFCS-MapingOnDSCHList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TFCS-MaxTFCI-field2-Value ::= INTEGER (1..maxNrOfTFCI2Combs-1)
TFCS-DSCHList ::= SEQUENCE (SIZE (1..maxNrOfTFCI2Combs)) OF
   SEQUENCE {
       cTFC-DSCH
                              TFCS-CTFC,
       iE-Extensions
                                  OPTIONAL,
TFCS-DSCHList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransportBearerRequestIndicator ::= ENUMERATED {
   bearerRequested,
   bearerNotRequested,
TransportFormatSet ::= SEQUENCE {
   dynamicParts
                          TransportFormatSet-DynamicPartList,
   semi-staticPart
                           TransportFormatSet-Semi-staticPart,
                           ProtocolExtensionContainer { { TransportFormatSet-ExtIEs} }
   iE-Extensions
                                                                                             OPTIONAL,
TransportFormatSet-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransportFormatSet-DynamicPartList ::= SEQUENCE (SIZE (1..maxNrOfTFs)) OF
   SEQUENCE {
       nrOfTransportBlocks
                                  TransportFormatSet-NrOfTransportBlocks,
       transportBlockSize
                                  TransportFormatSet-TransportBlockSize
                                                                             OPTIONAL,
       -- This IE shall be present if the Number of Transport Blocks IE is set to a value greater than 0
                                  TransportFormatSet-ModeDP,
       mode
                                  ProtocolExtensionContainer { { TransportFormatSet-DynamicPartList-ExtIEs} }
       iE-Extensions
                                                                                                                  OPTIONAL,
TransportFormatSet-DynamicPartList-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TDD-TransportFormatSet-ModeDP ::= SEQUENCE {
    transmissionTimeIntervalInformation
                                          TransmissionTimeIntervalInformation
                                                                                 OPTIONAL,
```

```
-- This IE shall be present if the Transmission Time Interval IE in the Semi-static Transport Format Information IE is set to "dynamic"
   iE-Extensions
                                            ProtocolExtensionContainer { {TDD-TransportFormatSet-ModeDP-ExtIEs} } OPTIONAL,
TDD-TransportFormatSet-ModeDP-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransmissionTimeIntervalInformation ::= SEQUENCE (SIZE (1..maxTTI-count)) OF
    SEOUENCE {
       transmissionTimeInterval
                                        TransportFormatSet-TransmissionTimeIntervalDynamic,
                                        ProtocolExtensionContainer { { TransmissionTimeIntervalInformation-ExtIEs} }
    iE-Extensions
                                                                                                                           OPTIONAL,
TransmissionTimeIntervalInformation-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransportFormatSet-Semi-staticPart ::= SEQUENCE {
    transmissionTimeInterval
                                        TransportFormatSet-TransmissionTimeIntervalSemiStatic,
    channelCoding
                                    TransportFormatSet-ChannelCodingType,
    codingRate
                                    TransportFormatSet-CodingRate
    -- This IE shall be present if the Type of channel coding IE is set to 'convolutional' or 'turbo'
    rateMatchingAttribute
                                    TransportFormatSet-RateMatchingAttribute,
    cRC-Size
                                    TransportFormatSet-CRC-Size,
    mode
                                    TransportFormatSet-ModeSSP
                                    ProtocolExtensionContainer { { TransportFormatSet-Semi-staticPart-ExtIEs} }
    iE-Extensions
                                                                                                                        OPTIONAL,
TransportFormatSet-Semi-staticPart-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TransportFormatSet-ChannelCodingType ::= ENUMERATED {
    no-codingTDD,
    convolutional-coding,
    turbo-coding,
    . . .
TransportFormatSet-CodingRate ::= ENUMERATED {
    half,
    third.
    . . .
TransportFormatSet-CRC-Size ::= ENUMERATED {
    ν0,
    v8,
    v12,
    v16,
```

```
v24,
TransportFormatSet-ModeDP ::= CHOICE {
                        TDD-TransportFormatSet-ModeDP,
    notApplicable
                                NULL,
TransportFormatSet-ModeSSP ::= CHOICE {
                    TransportFormatSet-SecondInterleavingMode,
    notApplicable
                                NULL,
TransportFormatSet-NrOfTransportBlocks ::= INTEGER (0..512)
TransportFormatSet-RateMatchingAttribute ::= INTEGER (1..maxRateMatching)
TransportFormatSet-SecondInterleavingMode ::= ENUMERATED {
    frame-rlated,
    timeSlot-related,
    . . .
TransportFormatSet-TransmissionTimeIntervalDynamic ::= ENUMERATED {
   msec-10,
   msec-20,
    msec-40,
    msec-80,
TransportFormatSet-TransmissionTimeIntervalSemiStatic ::= ENUMERATED {
   msec-10,
   msec-20,
   msec-40,
    msec-80,
    dynamic,
    . . . ,
    msec-5
TransportFormatSet-TransportBlockSize ::= INTEGER (0..5000)
TransportLayerAddress ::= BIT STRING (SIZE (1..160, ...))
TSTD-Indicator ::= ENUMERATED {
    active,
    inactive
TUTRANGPS ::= SEQUENCE
```

```
INTEGER (0..16383),
    ms-part
    ls-part
                INTEGER (0..4294967295)
TUTRANGPSChangeLimit ::= INTEGER (1..256)
-- Unit chip, Step 1/16 chip, Range 1/16..16 chip
TUTRANGPSDriftRate ::= INTEGER (-50..50)
-- Unit chip/s, Step 1/256 chip/s, Range -50/256..+50/256 chip/s
TUTRANGPSDriftRateQuality ::= INTEGER (0..50)
-- Unit chip/s, Step 1/256 chip/s, Range 0..50/256 chip/s
TUTRANGPSAccuracyClass ::= ENUMERATED {
    accuracy-class-A,
    accuracy-class-B,
    accuracy-class-C,
TUTRANGPSMeasurementThresholdInformation ::= SEQUENCE
    tUTRANGPSChangeLimit
                                            TUTRANGPSChangeLimit
                                                                                     OPTIONAL,
    predictedTUTRANGPSDeviationLimit
                                            PredictedTUTRANGPSDeviationLimit
                                                                                     OPTIONAL,
                                    ProtocolExtensionContainer { { TUTRANGPSMeasurementThresholdInformation-ExtIEs} }
   iE-Extensions
                                                                                                                           OPTIONAL,
TUTRANGPSMeasurementThresholdInformation-ExtlEs NBAP-PROTOCOL-EXTENSION ::= {
    . . .
TUTRANGPSMeasurementValueInformation ::= SEQUENCE {
        tUTRANGPS
                                        TUTRANGPS,
        tUTRANGPSOuality
                                        TUTRANGPSOuality,
        tUTRANGPSDriftRate
                                        TUTRANGPSDriftRate,
        tUTRANGPSDriftRateQuality
                                        TUTRANGPSDriftRateQuality,
        iE-Extensions
                                        ProtocolExtensionContainer { {TUTRANGPSMeasurementValueInformationItem-ExtIEs} }
                                                                                                                              OPTIONAL,
        . . .
TUTRANGPSMeasurementValueInformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
TUTRANGPSOuality ::= INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    . . .
```

```
UARFCN ::= INTEGER (0..16383, ...)
-- corresponds to 1885.2MHz .. 2024.8MHz
UC-Id ::= SEQUENCE {
   rNC-ID
                       RNC-ID,
                       C-ID,
    c-ID
                           ProtocolExtensionContainer { {UC-Id-ExtIEs} } OPTIONAL,
    iE-Extensions
UC-Id-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UDRE ::= ENUMERATED {
    udre-minusequal-one-m,
    udre-betweenoneandfour-m,
    udre-betweenfourandeight-m,
    udre-greaterequaleight-m
UE-Capability-InformationFDD ::= SEQUENCE {
                                           ENUMERATED {v7300, v14600, v20456, v28800,...},
    hSDSCH-TrCH-Bits-Per-HSDSCH-TTI
   hSDSCH-Multi-Code-Capability
                                           ENUMERATED {v5, v10, v15,...},
   min-Inter-TTI-Interval
                                           INTEGER (1..3,...),
   mAChs-Reordering-Buffer-Size
                                           INTEGER (1..300,...),
                                       ProtocolExtensionContainer { { UE-Capability-InformationFDD-ExtIEs } }
   iE-Extensions
                                                                                                                   OPTIONAL,
UE-Capability-InformationFDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UE-Capability-InformationTDD ::= SEQUENCE {
    hsDSCHTrCHBitsPerTTI
                                           ENUMERATED { v7040, v10228, v14080, ... },
                                           ENUMERATED {v8, v12, v16,...},
   hSDSCH-Multi-Code-Capability
                                           INTEGER (1..300,...),
   mAChs-Reordering-Buffer-Size
                                       ProtocolExtensionContainer { { UE-Capability-InformationTDD-ExtIEs } }
   iE-Extensions
                                                                                                                   OPTIONAL,
UE-Capability-InformationTDD-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-CapacityCredit ::= INTEGER (0..65535)
UL-DL-mode ::= ENUMERATED {
    ul-only,
```

```
dl-only,
    both-ul-and-dl
Uplink-Compressed-Mode-Method ::= ENUMERATED {
    sFdiv2,
   higher-layer-scheduling,
UL-Timeslot-Information ::= SEQUENCE (SIZE (1..maxNrOfULTSs)) OF UL-Timeslot-InformationItem
UL-Timeslot-InformationItem ::= SEQUENCE {
    timeSlot
                                         TimeSlot,
   midambleShiftAndBurstType
                                         MidambleShiftAndBurstType,
    tFCI-Presence
                                         TFCI-Presence,
    uL-Code-InformationList
                                         TDD-UL-Code-Information,
   iE-Extensions
                                         ProtocolExtensionContainer { { UL-Timeslot-InformationItem-ExtIEs} }
                                                                                                                OPTIONAL,
UL-Timeslot-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-TimeslotLCR-Information ::= SEQUENCE (SIZE (1..maxNrOfULTSLCRs)) OF UL-TimeslotLCR-InformationItem
UL-TimeslotLCR-InformationItem ::= SEQUENCE {
    timeSlotLCR
                                         TimeSlotLCR,
   midambleShiftLCR
                                         MidambleShiftLCR,
    tFCI-Presence
                                         TFCI-Presence,
    uL-Code-InformationList
                                         TDD-UL-Code-LCR-Information,
    iE-Extensions
                                         OPTIONAL,
UL-TimeslotLCR-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-DPCCH-SlotFormat ::= INTEGER (0..5,...)
UL-SIR ::= INTEGER (-82..173)
-- According to mapping in [16]
UL-FP-Mode ::= ENUMERATED {
   normal,
    silent,
UL-PhysCH-SF-Variation ::= ENUMERATED
```

```
sf-variation-supported,
    sf-variation-not-supported
UL-ScramblingCode ::= SEOUENCE {
    uL-ScramblingCodeNumber
                                    UL-ScramblingCodeNumber,
    uL-ScramblingCodeLength
                                    UL-ScramblingCodeLength,
    iE-Extensions
                                    ProtocolExtensionContainer { { UL-ScramblingCode-ExtIEs } }
                                                                                                                     OPTIONAL,
UL-ScramblingCode-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-ScramblingCodeNumber ::= INTEGER (0..16777215)
UL-ScramblingCodeLength ::= ENUMERATED {
    short,
    long
UL-TimeSlot-ISCP-Info ::= SEQUENCE (SIZE (1..maxNrOfULTSs)) OF UL-TimeSlot-ISCP-InfoItem
UL-TimeSlot-ISCP-InfoItem ::= SEQUENCE {
    timeSlot
                                    TimeSlot,
    iSCP
                                    UL-TimeslotISCP-Value,
    iE-Extensions
                                    ProtocolExtensionContainer { { UL-TimeSlot-ISCP-InfoItem-ExtIEs} }
                                                                                                                       OPTIONAL,
UL-TimeSlot-ISCP-InfoItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-TimeSlot-ISCP-LCR-Info ::= SEQUENCE (SIZE (1..maxNrOfULTSLCRs)) OF UL-TimeSlot-ISCP-LCR-InfoItem
UL-TimeSlot-ISCP-LCR-InfoItem ::= SEOUENCE {
    timeSlotLCR
                                    TimeSlotLCR,
    iSCP
                                    UL-TimeslotISCP-Value,
                                    ProtocolExtensionContainer { { UL-TimeSlot-ISCP-LCR-InfoItem-ExtIEs} }
    iE-Extensions
                                                                                                                       OPTIONAL,
UL-TimeSlot-ISCP-LCR-InfoItem-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
USCH-Information ::= SEQUENCE (SIZE (1..maxNrOfUSCHs)) OF USCH-InformationItem
USCH-InformationItem ::= SEQUENCE {
    uSCH-ID
                                            USCH-ID,
    cCTrCH-ID
                                            CCTrCH-ID,
    transportFormatSet
                                            TransportFormatSet,
```

END

optional }|

optional },

```
allocationRetentionPriority
                                AllocationRetentionPriority,
   iE-Extensions
                                ProtocolExtensionContainer { { USCH-InformationItem-ExtIEs} }
                                                                                        OPTIONAL,
USCH-InformationItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
    ID id-bindingID
                                CRITICALITY ignore
                                                           BindingID
                                                  EXTENSION
                                                                                        PRESENCE
   { ID id-transportlayeraddress
                                CRITICALITY ignore
                                                  EXTENSION
                                                           TransportLayerAddress
                                                                                        PRESENCE
USCH-InformationResponse ::= SEQUENCE (SIZE (1..maxNrOfUSCHs)) OF USCH-InformationResponseItem
USCH-InformationResponseItem ::= SEQUENCE {
   uSCH-ID
                                   USCH-ID,
   bindingID
                                   BindingID
                                                     OPTIONAL,
   transportLayerAddress
                                   TransportLayerAddress
                                                     OPTIONAL,
                                   ProtocolExtensionContainer { { USCH-InformationResponseItem-ExtIEs} }
   iE-Extensions
                                                                                          OPTIONAL,
   . . .
USCH-InformationResponseItem-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
UL-TimeslotISCP-Value ::= INTEGER (0..127)
-- According to mapping in [23]
UL-TimeslotISCP-Value-IncrDecrThres ::= INTEGER (0..126)
USCH-ID ::= INTEGER (0..255)
-- -----
-- ------
-- ------
-- ------
-- ------
__ ______
  _____
-- ------
-- ------
-- -----
```

9.3.5 Common Definitions

```
********************
-- Common definitions
__ *********************
NBAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) nbap (2) version1 (1) nbap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
        ****************
-- Extension constants
__ *********************
                        INTEGER ::= 65535
maxPrivateIEs
maxProtocolExtensions
                      INTEGER ::= 65535
                        INTEGER ::= 65535
maxProtocolIEs
__ *********************
-- Common Data Types
__ ********************
            ::= ENUMERATED { reject, ignore, notify }
Criticality
MessageDiscriminator ::= ENUMERATED { common, dedicated }
            ::= ENUMERATED { optional, conditional, mandatory }
Presence
PrivateIE-ID ::= CHOICE {
   local
                 INTEGER (0..maxPrivateIEs),
   global
                  OBJECT IDENTIFIER
ProcedureCode ::= INTEGER (0..255)
ProcedureID
            ::= SEQUENCE {
   procedureCode
                     ProcedureCode,
   ddMode
                      ENUMERATED { tdd, fdd, common, ... }
            ::= INTEGER (0..maxProtocolIEs)
ProtocolIE-ID
TransactionID
            ::= CHOICE {
```

```
shortTransActionId longTransActionId longTr
```

9.3.6 Constant Definitions

```
-- Constant definitions
__ *********************
NBAP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) nbap (2) version1 (1) nbap-Constants (4)}
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM NBAP-CommonDataTypes;
    *****************
-- Elementary Procedures
  *******************
id-audit
                                                   ProcedureCode ::= 0
id-auditRequired
                                                   ProcedureCode ::= 1
id-blockResource
                                                   ProcedureCode ::= 2
id-cellDeletion
                                                   ProcedureCode ::= 3
id-cellReconfiguration
                                                   ProcedureCode ::= 4
id-cellSetup
                                                   ProcedureCode ::= 5
id-cellSynchronisationInitiation
                                                   ProcedureCode ::= 45
id-cellSynchronisationReconfiguration
                                                   ProcedureCode ::= 46
id-cellSynchronisationReporting
                                                   ProcedureCode ::= 47
id-cellSynchronisationTermination
                                                   ProcedureCode ::= 48
id-cellSynchronisationFailure
                                                   ProcedureCode ::= 49
id-commonMeasurementFailure
                                                   ProcedureCode ::= 6
id-commonMeasurementInitiation
                                                   ProcedureCode ::= 7
id-commonMeasurementReport
                                                   ProcedureCode ::= 8
id-commonMeasurementTermination
                                                   ProcedureCode ::= 9
id-commonTransportChannelDelete
                                                   ProcedureCode ::= 10
                                                   ProcedureCode ::= 11
id-commonTransportChannelReconfigure
id-commonTransportChannelSetup
                                                   ProcedureCode ::= 12
```

```
ProcedureCode ::= 14
id-compressedModeCommand
id-dedicatedMeasurementFailure
                                                      ProcedureCode ::= 16
                                                      ProcedureCode ::= 17
id-dedicatedMeasurementInitiation
id-dedicatedMeasurementReport
                                                      ProcedureCode ::= 18
id-dedicatedMeasurementTermination
                                                      ProcedureCode ::= 19
id-downlinkPowerControl
                                                      ProcedureCode ::= 20
id-downlinkPowerTimeslotControl
                                                      ProcedureCode ::= 38
                                                      ProcedureCode ::= 35
id-errorIndicationForCommon
id-errorIndicationForDedicated
                                                      ProcedureCode ::= 21
id-informationExchangeFailure
                                                      ProcedureCode ::= 40
id-informationExchangeInitiation
                                                      ProcedureCode ::= 41
                                                      ProcedureCode ::= 42
id-informationExchangeTermination
id-informationReporting
                                                      ProcedureCode ::= 43
id-BearerRearrangement
                                                      ProcedureCode ::= 50
id-physicalSharedChannelReconfiguration
                                                      ProcedureCode ::= 37
id-privateMessageForCommon
                                                      ProcedureCode ::= 36
                                                      ProcedureCode ::= 22
id-privateMessageForDedicated
id-radioLinkAddition
                                                      ProcedureCode ::= 23
id-radioLinkDeletion
                                                      ProcedureCode ::= 24
id-radioLinkFailure
                                                      ProcedureCode ::= 25
id-radioLinkPreemption
                                                      ProcedureCode ::= 39
id-radioLinkRestoration
                                                      ProcedureCode ::= 26
id-radioLinkSetup
                                                      ProcedureCode ::= 27
                                                      ProcedureCode ::= 13
id-reset
id-resourceStatusIndication
                                                      ProcedureCode ::= 28
id-cellSynchronisationAdjustment
                                                      ProcedureCode ::= 44
id-synchronisedRadioLinkReconfigurationCancellation
                                                      ProcedureCode ::= 29
id-synchronisedRadioLinkReconfigurationCommit
                                                      ProcedureCode ::= 30
id-synchronisedRadioLinkReconfigurationPreparation
                                                      ProcedureCode ::= 31
id-systemInformationUpdate
                                                      ProcedureCode ::= 32
                                                      ProcedureCode ::= 33
id-unblockResource
id-unSynchronisedRadioLinkReconfiguration
                                                      ProcedureCode ::= 34
id-radioLinkActivation
                                                      ProcedureCode ::= 51
  *****************
-- Lists
__ *********************
maxNrOfCodes
                           INTEGER ::= 10
maxNrOfDLTSs
                           INTEGER ::= 15
maxNrOfDLTSLCRs
                           INTEGER ::= 6
maxNrOfErrors
                           INTEGER ::= 256
maxNrOfTFs
                           INTEGER ::= 32
maxNrOfTFCs
                           INTEGER ::= 1024
maxNrOfRLs
                           INTEGER ::= 16
maxNrOfRLs-1
                           INTEGER ::= 15 -- maxNrOfRLs - 1
                           INTEGER ::= 14 -- maxNrOfRLs - 2
maxNrOfRLs-2
maxNrOfRLSets
                           INTEGER ::= maxNrOfRLs
                           INTEGER ::= 240
maxNrOfDPCHs
maxNrOfDPCHLCRs
                           INTEGER ::= 240
maxNrOfSCCPCHs
                           INTEGER ::= 8
maxNrOfCPCHs
                           INTEGER ::= 16
```

```
maxNrOfPCPCHs
                            INTEGER ::= 64
maxNrOfDCHs
                            INTEGER ::= 128
maxNrOfDSCHs
                            INTEGER ::= 32
maxNrOfFACHs
                            INTEGER ::= 8
maxNrOfCCTrCHs
                            INTEGER ::= 16
maxNrOfPDSCHs
                            INTEGER ::= 256
                            INTEGER ::= 256
maxNrOfPUSCHs
maxNrOfPDSCHSets
                            INTEGER ::= 256
maxNrOfPRACHLCRs
                            INTEGER ::= 8
                            INTEGER ::= 256
maxNrOfPUSCHSets
maxNrOfSCCPCHLCRs
                            INTEGER ::= 8
maxNrOfULTSs
                            INTEGER ::= 15
maxNrOfULTSLCRs
                            INTEGER ::= 6
maxNrOfUSCHs
                            INTEGER ::= 32
maxAPSiqNum
                            INTEGER ::= 16
maxNrOfSlotFormatsPRACH
                            INTEGER ::= 8
maxCellinNodeB
                            INTEGER ::= 256
maxCCPinNodeB
                            INTEGER ::= 256
maxCPCHCell
                            INTEGER ::= maxNrOfCPCHs
maxCTFC
                            INTEGER ::= 16777215
maxLocalCellinNodeB
                            INTEGER ::= maxCellinNodeB
                            INTEGER ::= 7
maxNoofLen
maxFPACHCell
                            INTEGER ::= 8
maxRACHCell
                            INTEGER ::= maxPRACHCell
maxPRACHCell
                            INTEGER ::= 16
maxPCPCHCell
                            INTEGER ::= 64
                            INTEGER ::= 32
maxSCCPCHCell
maxSCPICHCell
                            INTEGER ::= 32
maxTTI-count
                            INTEGER ::= 4
maxIBSEG
                            INTEGER ::= 16
maxIB
                            INTEGER ::= 64
maxFACHCell
                            INTEGER ::= 256
                                            -- maxNrOfFACHs * maxSCCPCHCell
maxRateMatching
                            INTEGER ::= 256
maxCodeNrComp-1
                            INTEGER ::= 256
maxNrOfCellSvncBursts
                            INTEGER ::= 10
maxNrOfCodeGroups
                            INTEGER ::= 256
maxNrOfReceptsPerSyncFrame
                            INTEGER ::= 16
                            INTEGER ::= 96
maxNrOfMeasNCell
maxNrOfMeasNCell-1
                            INTEGER ::= 95 -- maxNrOfMeasNCell - 1
maxNrOfTFCIGroups
                            INTEGER ::= 256
maxNrOfTFCI1Combs
                            INTEGER ::= 512
maxNrOfTFCI2Combs
                            INTEGER ::= 1024
maxNrOfTFCI2Combs-1
                            INTEGER ::= 1023
maxNrOfSF
                            INTEGER ::= 8
maxTGPS
                            INTEGER ::= 6
maxCommunicationContext
                            INTEGER ::= 1048575
maxNrOfLevels
                            INTEGER ::= 256
maxNoSat
                            INTEGER ::= 16
maxNoGPSItems
                            INTEGER ::= 8
maxNrOfHSSCCHs
                            INTEGER ::= 32
maxNrOfSyncFramesLCR
                            INTEGER ::= 512
maxNrOfReceptionsperSyncFrameLCR
                                    INTEGER ::= 8
                            INTEGER ::= 32
maxNrOfSyncDLCodesLCR
maxNrOfHSSCCHCodes
                            INTEGER ::= 128
```

```
maxNrOfMACdFlows
                           INTEGER ::= 8
maxNrOfMACdFlows-1
                           INTEGER ::= 7
                                           -- maxNrOfMACdFlows - 1
maxNrOfMACdPDUIndexes
                           INTEGER ::= 8
maxNrOfMACdPDUIndexes-1
                           INTEGER ::= 7
                                           -- maxNoOfMACdPDUIndexes - 1
maxNrOfPriorityOueues
                           INTEGER ::= 8
maxNrOfPriorityOueues-1
                                           -- maxNoOfPriorityOueues - 1
                           INTEGER ::= 7
maxNrOfHAROProcesses
                           INTEGER ::= 8
      -- TES
id-AICH-Information
                                                                   ProtocolIE-ID ::= 0
id-AICH-InformationItem-ResourceStatusInd
                                                                   ProtocolTE-TD ::= 1
id-BCH-Information
                                                                   ProtocolIE-ID ::= 7
id-BCH-InformationItem-ResourceStatusInd
                                                                   ProtocolIE-ID ::= 8
id-BCCH-ModificationTime
                                                                   ProtocolIE-ID ::= 9
id-BlockingPriorityIndicator
                                                                   ProtocolIE-ID ::= 10
id-Cause
                                                                   ProtocolTE-TD ::= 13
id-CCP-InformationItem-AuditRsp
                                                                   ProtocolIE-ID ::= 14
id-CCP-InformationList-AuditRsp
                                                                   ProtocolIE-ID ::= 15
id-CCP-InformationItem-ResourceStatusInd
                                                                   ProtocolIE-ID ::= 16
id-Cell-InformationItem-AuditRsp
                                                                   ProtocolIE-ID ::= 17
id-Cell-InformationItem-ResourceStatusInd
                                                                   ProtocolIE-ID ::= 18
id-Cell-InformationList-AuditRsp
                                                                   ProtocolIE-ID ::= 19
id-CellParameterID
                                                                   ProtocolIE-ID ::= 23
id-CFN
                                                                   ProtocolIE-ID ::= 24
id-C-ID
                                                                   ProtocolIE-ID ::= 25
id-CommonMeasurementAccuracy
                                                                   ProtocolIE-ID ::= 39
id-CommonMeasurementObjectType-CM-Rprt
                                                                   ProtocolIE-ID ::= 31
id-CommonMeasurementObjectType-CM-Rqst
                                                                   ProtocolIE-ID ::= 32
id-CommonMeasurementObjectType-CM-Rsp
                                                                   ProtocolIE-ID ::= 33
id-CommonMeasurementType
                                                                   ProtocolIE-ID ::= 34
id-CommonPhysicalChannelID
                                                                   ProtocolIE-ID ::= 35
id-CommonPhysicalChannelType-CTCH-SetupRqstFDD
                                                                   ProtocolIE-ID ::= 36
id-CommonPhysicalChannelType-CTCH-SetupRqstTDD
                                                                   ProtocolIE-ID ::= 37
id-CommunicationControlPortID
                                                                   ProtocolIE-ID ::= 40
id-ConfigurationGenerationID
                                                                   ProtocolIE-ID ::= 43
id-CRNC-CommunicationContextID
                                                                   ProtocolIE-ID ::= 44
id-CriticalityDiagnostics
                                                                   ProtocolIE-ID ::= 45
id-DCHs-to-Add-FDD
                                                                   ProtocolIE-ID ::= 48
id-DCH-AddList-RL-ReconfPrepTDD
                                                                   ProtocolTE-TD ::= 49
id-DCHs-to-Add-TDD
                                                                   ProtocolIE-ID ::= 50
id-DCH-DeleteList-RL-ReconfPrepFDD
                                                                   ProtocolIE-ID ::= 52
id-DCH-DeleteList-RL-ReconfPrepTDD
                                                                   ProtocolIE-ID ::= 53
id-DCH-DeleteList-RL-ReconfRqstFDD
                                                                   ProtocolIE-ID ::= 54
id-DCH-DeleteList-RL-ReconfRastTDD
                                                                   ProtocolIE-ID ::= 55
id-DCH-FDD-Information
                                                                   ProtocolIE-ID ::= 56
id-DCH-TDD-Information
                                                                   ProtocolIE-ID ::= 57
id-DCH-InformationResponse
                                                                   ProtocolIE-ID ::= 59
id-FDD-DCHs-to-Modify
                                                                   ProtocolIE-ID ::= 62
id-TDD-DCHs-to-Modify
                                                                   ProtocolIE-ID ::= 63
```

id-DCH-ModifyList-RL-ReconfRqstTDD	ProtocolIE-ID ::= 65
id-DCH-RearrangeList-Bearer-RearrangeInd	ProtocolIE-ID ::= 135
id-DedicatedMeasurementObjectType-DM-Rprt	ProtocolIE-ID ::= 67
id-DedicatedMeasurementObjectType-DM-Rqst	ProtocolIE-ID ::= 68
id-DedicatedMeasurementObjectType-DM-Rsp	ProtocolIE-ID ::= 69
id-DedicatedMeasurementType	ProtocolIE-ID ::= 70
id-DL-CCTrCH-InformationItem-RL-SetupRqstTDD	ProtocolIE-ID ::= 72
id-DL-CCTrCH-InformationList-RL-AdditionRqstTDD	ProtocolIE-ID ::= 73
id-DL-CCTrCH-InformationList-RL-SetupRqstTDD	ProtocolIE-ID ::= 76
id-DL-DPCH-InformationItem-RL-AdditionRqstTDD	ProtocolIE-ID ::= 77
id-DL-DPCH-InformationList-RL-SetupRqstTDD	ProtocolIE-ID ::= 79
id-DL-DPCH-Information-RL-ReconfPrepFDD	ProtocolIE-ID ::= 81
id-DL-DPCH-Information-RL-ReconfRqstFDD	ProtocolIE-ID ::= 82
id-DL-DPCH-Information-RL-SetupRqstFDD	ProtocolIE-ID ::= 83
id-DL-DPCH-TimingAdjustment	ProtocolIE-ID ::= 21
id-DL-ReferencePowerInformationItem-DL-PC-Rqst	ProtocolIE-ID ::= 84
id-DLReferencePower	ProtocolIE-ID ::= 85
id-DLReferencePowerList-DL-PC-Rqst	ProtocolIE-ID ::= 86
id-DSCH-AddItem-RL-ReconfPrepFDD	ProtocolIE-ID ::= 87
id-DSCHs-to-Add-FDD	ProtocolIE-ID ::= 89
id-DSCH-DeleteItem-RL-ReconfPrepFDD	ProtocolIE-ID ::= 91
id-DSCH-DeleteList-RL-ReconfPrepFDD	ProtocolIE-ID ::= 93
id-DSCHs-to-Add-TDD	ProtocolIE-ID ::= 96
id-DSCH-Information-DeleteList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 98
id-DSCH-Information-ModifyList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 100
id-DSCH-InformationResponse	ProtocolIE-ID ::= 105
id-DSCH-FDD-Information	ProtocolIE-ID ::= 106
id-DSCH-TDD-Information	ProtocolIE-ID ::= 107
id-DSCH-ModifyItem-RL-ReconfPrepFDD	ProtocolIE-ID ::= 108
id-DSCH-ModifyList-RL-ReconfPrepFDD	ProtocolIE-ID ::= 112
id-DSCH-RearrangeList-Bearer-RearrangeInd	ProtocolIE-ID ::= 136
id-End-Of-Audit-Sequence-Indicator	ProtocolIE-ID ::= 113
id-FACH-Information	ProtocolIE-ID ::= 116
id-FACH-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 117
id-FACH-ParametersList-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 120
id-FACH-ParametersListIE-CTCH-SetupRqstFDD	ProtocolIE-ID ::= 121
id-FACH-ParametersListIE-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 122
id-IndicationType-ResourceStatusInd	ProtocolIE-ID ::= 123
id-Local-Cell-ID	ProtocolIE-ID ::= 124
id-Local-Cell-Group-InformationItem-AuditRsp	ProtocolIE-ID ::= 2
id-Local-Cell-Group-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 3
id-Local-Cell-Group-InformationItem2-ResourceStatusInd	ProtocolIE-ID ::= 4
id-Local-Cell-Group-InformationList-AuditRsp	ProtocolIE-ID ::= 5
id-Local-Cell-InformationItem-AuditRsp	ProtocolIE-ID ::= 125
id-Local-Cell-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 126
id-Local-Cell-InformationItem2-ResourceStatusInd	ProtocolIE-ID ::= 127
id-Local-Cell-InformationList-AuditRsp	ProtocolIE-ID ::= 128
id-AdjustmentPeriod	ProtocolIE-ID ::= 129
id-MaxAdjustmentStep	ProtocolIE-ID ::= 130
id-MaximumTransmissionPower	ProtocolIE-ID ::= 131
id-MeasurementFilterCoefficient	ProtocolIE-ID ::= 132
id-MeasurementID	ProtocolIE-ID ::= 133
id-MessageStructure	ProtocolIE-ID ::= 115
id-MIB-SB-SIB-InformationList-SystemInfoUpdateRqst	ProtocolIE-ID ::= 134

id-NodeB-CommunicationContextID	ProtocolIE-ID ::= 143
id-NeighbouringCellMeasurementInformation	ProtocolIE-ID ::= 455
id-P-CCPCH-Information	ProtocolIE-ID ::= 144
id-P-CCPCH-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 145
id-P-CPICH-Information	ProtocolIE-ID ::= 146
id-P-CPICH-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 147
id-P-SCH-Information	ProtocolIE-ID ::= 148
id-PCCPCH-Information-Cell-ReconfRqstTDD	ProtocolIE-ID ::= 150
id-PCCPCH-Information-Cell-SetupRqstTDD	ProtocolIE-ID ::= 151
id-PCH-Parameters-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 155
id-PCH-ParametersItem-CTCH-SetupRqstFDD	ProtocolIE-ID ::= 156
id-PCH-ParametersItem-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 157
id-PCH-Information	ProtocolIE-ID ::= 158
id-PDSCH-Information-AddListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 161
id-PDSCH-Information-ModifyListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 162
id-PDSCHSets-AddList-PSCH-ReconfRqst	ProtocolIE-ID ::= 163
id-PDSCHSets-DeleteList-PSCH-ReconfRqst	ProtocolIE-ID ::= 164
id-PDSCHSets-ModifyList-PSCH-ReconfRqst	ProtocolIE-ID ::= 165
id-PICH-Information	ProtocolIE-ID ::= 166
id-PICH-Parameters-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 168
id-PowerAdjustmentType	ProtocolIE-ID ::= 169
id-PRACH-Information	ProtocolIE-ID ::= 170
id-PrimaryCCPCH-Information-Cell-ReconfRgstFDD	ProtocolIE-ID ::= 175
id-PrimaryCCPCH-Information-Cell-SetupRqstFDD	ProtocolIE-ID ::= 176
id-PrimaryCPICH-Information-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 177
id-PrimaryCPICH-Information-Cell-SetupRgstFDD	ProtocolIE-ID ::= 178
id-PrimarySCH-Information-Cell-ReconfRgstFDD	ProtocolIE-ID ::= 179
id-PrimarySCH-Information-Cell-SetupRgstFDD	ProtocolIE-ID ::= 180
id-PrimaryScramblingCode	ProtocolIE-ID ::= 181
id-SCH-Information-Cell-ReconfRqstTDD	ProtocolIE-ID ::= 183
id-SCH-Information-Cell-SetupRgstTDD	ProtocolIE-ID ::= 184
id-PUSCH-Information-AddListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 185
id-PUSCH-Information-ModifyListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 186
id-PUSCHSets-AddList-PSCH-ReconfRqst	ProtocolIE-ID ::= 187
id-PUSCHSets-DeleteList-PSCH-ReconfRqst	ProtocolIE-ID ::= 188
id-PUSCHSets-ModifyList-PSCH-ReconfRqst	ProtocolIE-ID ::= 189
id-RACH-Information	ProtocolIE-ID ::= 190
id-RACH-ParametersItem-CTCH-SetupRqstFDD	ProtocolIE-ID ::= 196
id-RACH-ParameterItem-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 197
id-ReportCharacteristics	ProtocolIE-ID ::= 198
id-Reporting-Object-RL-FailureInd	ProtocolIE-ID ::= 199
id-Reporting-Object-RL-RestoreInd	ProtocolIE-ID ::= 200
id-RL-InformationItem-DM-Rprt	ProtocolIE-ID ::= 202
id-RL-InformationItem-DM-Rqst	ProtocolIE-ID ::= 203
id-RL-InformationItem-DM-Rsp	ProtocoliE-ID ::= 203
id-RL-InformationItem-RL-AdditionRgstFDD	ProtocoliE-ID ::= 204 ProtocoliE-ID ::= 205
id-RL-informationItem-RL-DeletionRqst	ProtocoliE-ID ::= 205
id-RL-InformationItem-RL-DefetionRqst id-RL-InformationItem-RL-FailureInd	ProtocoliE-ID ::= 206 ProtocolIE-ID ::= 207
id-RL-InformationItem-RL-PreemptRequiredInd	ProtocolIE-ID ::= 286
id-RL-InformationItem-RL-ReconfPrepFDD	ProtocolIE-ID ::= 208
id-RL-InformationItem-RL-ReconfRqstFDD	ProtocolIE-ID ::= 209
id-RL-InformationItem-RL-RestoreInd	ProtocolIE-ID ::= 210
id-RL-InformationItem-RL-SetupRqstFDD	ProtocolIE-ID ::= 211
id-RL-InformationList-RL-AdditionRqstFDD	ProtocolIE-ID ::= 212

id-RL-informationList-RL-DeletionRqst	ProtocolIE-ID ::= 213
id-RL-InformationList-RL-PreemptRequiredInd	ProtocolIE-ID ::= 237
id-RL-InformationList-RL-ReconfPrepFDD	ProtocolIE-ID ::= 214
id-RL-InformationList-RL-ReconfRqstFDD	ProtocolIE-ID ::= 215
id-RL-InformationList-RL-SetupRqstFDD	ProtocolIE-ID ::= 216
id-RL-InformationResponseItem-RL-AdditionRspFDD	ProtocolIE-ID ::= 217
id-RL-InformationResponseItem-RL-ReconfReady	ProtocolIE-ID ::= 218
id-RL-InformationResponseItem-RL-ReconfRsp	ProtocolIE-ID ::= 219
id-RL-InformationResponseItem-RL-SetupRspFDD	ProtocolIE-ID ::= 220
id-RL-InformationResponseList-RL-AdditionRspFDD	ProtocolIE-ID ::= 221
id-RL-InformationResponseList-RL-ReconfReady	ProtocolIE-ID ::= 222
id-RL-InformationResponseList-RL-ReconfRsp	ProtocolIE-ID ::= 223
id-RL-InformationResponseList-RL-SetupRspFDD	ProtocolIE-ID ::= 224
id-RL-InformationResponse-RL-AdditionRspTDD	ProtocolIE-ID ::= 225
id-RL-InformationResponse-RL-SetupRspTDD	ProtocolIE-ID ::= 226
id-RL-Information-RL-AdditionRqstTDD	ProtocolIE-ID ::= 227
id-RL-Information-RL-ReconfRqstTDD	ProtocolIE-ID ::= 228
id-RL-Information-RL-ReconfPrepTDD	ProtocolIE-ID ::= 229
id-RL-Information-RL-SetupRqstTDD	ProtocolIE-ID ::= 230
id-RL-ReconfigurationFailureItem-RL-ReconfFailure	ProtocolIE-ID ::= 236
id-RL-Set-InformationItem-DM-Rprt	ProtocolIE-ID ::= 238
id-RL-Set-InformationItem-DM-Rsp	ProtocolIE-ID ::= 240
id-RL-Set-InformationItem-RL-FailureInd	ProtocolIE-ID ::= 241
id-RL-Set-InformationItem-RL-RestoreInd	ProtocolIE-ID ::= 242
id-S-CCPCH-Information	ProtocolIE-ID ::= 247
id-S-CPICH-Information	ProtocolIE-ID ::= 249
id-SCH-Information	ProtocolIE-ID ::= 251
id-S-SCH-Information	ProtocolIE-ID ::= 253
id-Secondary-CCPCHListIE-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 257
id-Secondary-CCPCH-parameterListIE-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 258
id-Secondary-CCPCH-Parameters-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 259
id-SecondaryCPICH-InformationItem-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 260
id-SecondaryCPICH-InformationItem-Cell-SetupRqstFDD	ProtocolIE-ID ::= 261
id-SecondaryCPICH-InformationList-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 262
id-SecondaryCPICH-InformationList-Cell-SetupRqstFDD	ProtocolIE-ID ::= 263
id-SecondarySCH-Information-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 264
id-SecondarySCH-Information-Cell-SetupRqstFDD	ProtocolIE-ID ::= 265
id-SegmentInformationListIE-SystemInfoUpdate	ProtocolIE-ID ::= 266
id-SFN	ProtocolIE-ID ::= 268
id-SignallingBearerRequestIndicator	ProtocolIE-ID ::= 138
id-ShutdownTimer	ProtocolIE-ID ::= 269
id-Start-Of-Audit-Sequence-Indicator	ProtocolIE-ID ::= 114
id-Successful-RL-InformationRespItem-RL-AdditionFailureFDD	ProtocolIE-ID ::= 270
id-Successful-RL-InformationRespItem-RL-SetupFailureFDD	ProtocolIE-ID ::= 271
id-SyncCase	ProtocolIE-ID ::= 274
id-SyncCaseIndicatorItem-Cell-SetupRgstTDD-PSCH	ProtocolIE-ID ::= 275
id-T-Cell	ProtocolIE-ID ::= 276
id-TargetCommunicationControlPortID	ProtocolIE-ID ::= 139
id-TimeSlotConfigurationList-Cell-ReconfRgstTDD	ProtocolIE-ID ::= 277
id-TimeSlotConfigurationList-Cell-SetupRqstTDD	ProtocolIE-ID ::= 278
id-TransmissionDiversityApplied	ProtocolIE-ID ::= 279
id-TypeOfError	ProtocolIE-ID ::= 508
id-UARFCNforNt	ProtocolIE-ID ::= 280
id-UARFCNforNd	ProtocolIE-ID ::= 281

id-UARFCNforNu	ProtocolIE-ID ::= 282
id-UL-CCTrCH-InformationItem-RL-SetupRqstTDD	ProtocolIE-ID ::= 284
id-UL-CCTrCH-InformationList-RL-AdditionRqstTDD	ProtocolIE-ID ::= 285
id-UL-CCTrCH-InformationList-RL-SetupRqstTDD	ProtocolIE-ID ::= 288
id-UL-DPCH-InformationItem-RL-AdditionRqstTDD	ProtocolIE-ID ::= 289
id-UL-DPCH-InformationList-RL-SetupRqstTDD	ProtocolIE-ID ::= 291
id-UL-DPCH-Information-RL-ReconfPrepFDD	ProtocolIE-ID ::= 293
id-UL-DPCH-Information-RL-ReconfRqstFDD	ProtocolIE-ID ::= 294
id-UL-DPCH-Information-RL-SetupRqstFDD	ProtocolIE-ID ::= 295
id-Unsuccessful-RL-InformationRespItem-RL-AdditionFailureFDD	ProtocolIE-ID ::= 296
id-Unsuccessful-RL-InformationRespItem-RL-SetupFailureFDD	ProtocolIE-ID ::= 297
id-Unsuccessful-RL-InformationResp-RL-AdditionFailureTDD	ProtocolIE-ID ::= 300
id-Unsuccessful-RL-InformationResp-RL-SetupFailureTDD	ProtocolIE-ID ::= 301
id-USCH-Information-Add	ProtocolIE-ID ::= 302
id-USCH-Information-DeleteList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 304
id-USCH-Information-ModifyList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 306
id-USCH-InformationResponse	ProtocolIE-ID ::= 309
id-USCH-Information	ProtocolIE-ID ::= 310
id-USCH-RearrangeList-Bearer-RearrangeInd	ProtocolIE-ID ::= 141
id-Active-Pattern-Sequence-Information	ProtocolIE-ID ::= 315
id-AICH-ParametersListIE-CTCH-ReconfRqstFDD	ProtocolIE-ID ::= 316
id-AdjustmentRatio	ProtocolIE-ID ::= 317
id-AP-AICH-Information	ProtocolIE-ID ::= 320
id-AP-AICH-ParametersListIE-CTCH-ReconfRqstFDD	ProtocolIE-ID ::= 322
id-FACH-ParametersListIE-CTCH-ReconfRqstFDD	ProtocolIE-ID ::= 323
id-CauseLevel-PSCH-ReconfFailure	ProtocolIE-ID ::= 324
id-CauseLevel-RL-AdditionFailureFDD	ProtocolIE-ID ::= 325
id-CauseLevel-RL-AdditionFailureTDD	ProtocolIE-ID ::= 326
id-CauseLevel-RL-ReconfFailure	ProtocolIE-ID ::= 327
id-CauseLevel-RL-SetupFailureFDD	ProtocolIE-ID ::= 328
id-CauseLevel-RL-SetupFailureTDD	ProtocolIE-ID ::= 329
id-CDCA-ICH-Information	ProtocolIE-ID ::= 330
id-CDCA-ICH-ParametersListIE-CTCH-ReconfRgstFDD	ProtocolIE-ID ::= 332
id-Closed-Loop-Timing-Adjustment-Mode	ProtocoliE-ID ::= 333
id-CommonPhysicalChannelType-CTCH-ReconfRqstFDD	ProtocoliE-ID ::= 334
id-Compressed-Mode-Deactivation-Flag	ProtocoliE-ID ::= 334 ProtocoliE-ID ::= 335
id-CPCH-Information	ProtocoliE-ID ::= 336
id-CPCH-Parameters-CTCH-SetupRsp	ProtocolIE-ID ::= 342
id-CPCH-ParametersListIE-CTCH-ReconfRqstFDD	ProtocolIE-ID ::= 343
id-DL-CCTrCH-InformationAddList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 346
id-DL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD	ProtocolIE-ID ::= 347
id-DL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 348
id-DL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD	ProtocolIE-ID ::= 349
id-DL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD	ProtocolIE-ID ::= 350
id-DL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 351
id-DL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD	ProtocolIE-ID ::= 352
id-DL-DPCH-InformationAddListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 353
id-DL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 355
id-DL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 356
id-DL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 357
id-DL-TPC-Pattern01Count	ProtocolIE-ID ::= 358
id-DPC-Mode	ProtocolIE-ID ::= 450
id-DPCHConstant	ProtocolIE-ID ::= 359
id-DSCH-FDD-Common-Information	ProtocolIE-ID ::= 94

id-EnhancedDSCHPC ProtocolIF-ID :: 110 id-EnhancedDSCHPCIndicator		
id-PACH-ParametersList-CTCH-SetupRsp		
id-Limited-power-increase-information-Cell-SetupRgstFDD		
id-PCH-Parameters-CTCH-SetupRsp		
id-PCCH-ParametersItem-CTCH-ReconfRgstFDD		
id-PCR-ParametersItem-CTCH-ReconfRqstFDD		
id-PRACHONSTANT		
id-PRACH-ParametersListIE-CTCH-ReconfRqstFDD		
id-PRACH-ParametersListIE-GTCH-ReconfRqstFDD		
id-PRCHCONSTANT		
id-RACH-Parameters-CTCH-SetupRsp ProtocolIE-ID ::= 385 id-Synchronisation-Configuration-Cell-ReconfRqst ProtocolIE-ID ::= 393 id-Synchronisation-Configuration-Cell-SetupRqst ProtocolIE-ID ::= 394 id-Tynansision-Gap-Pattern-Sequence-Information ProtocolIE-ID ::= 395 id-UL-CCTCCH-InformationAddList-RL-ReconfPrepTDD ProtocolIE-ID ::= 396 id-UL-CCTCCH-InformationDeleteList-RL-ReconfPrepTDD ProtocolIE-ID ::= 398 id-UL-CCTCCH-InformationDeleteList-RL-ReconfRqstTDD ProtocolIE-ID ::= 398 id-UL-CCTCCH-InformationModifyLten-RL-ReconfRqstTDD ProtocolIE-ID ::= 398 id-UL-CCTCCH-InformationModifyLten-RL-ReconfRqstTDD ProtocolIE-ID ::= 398 id-UL-CTCCH-InformationModifyLten-RL-ReconfPrepTDD ProtocolIE-ID ::= 401 id-UL-CTCCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 401 id-UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 403 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-UL-DP		
id-Synchronisation-Configuration-Cell-ReconfRqst ProtocollE-ID ::= 493 id-Synchronisation-Configuration-Cell-SetupRqst ProtocollE-ID ::= 394 id-Synchronisation-Configuration-Cell-SetupRqst ProtocollE-ID ::= 395 id-Transmission-Gap-Pattern-Sequence-Information ProtocollE-ID ::= 395 id-UL-CCTCCH-InformationDeleteItem-RL-ReconfPrepTDD ProtocollE-ID ::= 395 id-UL-CCTCCH-InformationDeleteList-RL-ReconfRqstTDD ProtocollE-ID ::= 397 id-UL-CCTCCH-InformationDeleteList-RL-ReconfRqstTDD ProtocollE-ID ::= 400 id-UL-CCTCCH-InformationModifyIten-RL-ReconfRqstTDD ProtocollE-ID ::= 400 id-UL-CCTCCH-InformationModifyList-RL-ReconfRqstTDD ProtocollE-ID ::= 401 id-UL-PCH-InformationModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 402 id-UL-PCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 403 id-UL-PCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocollE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyL		
id-Synchronisation-Configuration-Cell-ReconfRqst ProtocolIE-ID ::= 393 id-Synchronisation-Configuration-Cell-SetupRqst ProtocolIE-ID ::= 395 id-UL-CCTTCH-InformationAddList-RL-ReconfPrepTDD ProtocolIE-ID ::= 395 id-UL-CCTCCH-InformationDeleteList-RL-ReconfPrepTDD ProtocolIE-ID ::= 397 id-UL-CCTTCH-InformationDeleteList-RL-ReconfPrepTDD ProtocolIE-ID ::= 397 id-UL-CCTCH-InformationDeleteList-RL-ReconfRqstTDD ProtocolIE-ID ::= 399 id-UL-CCTCH-InformationModifyList-RL-ReconfRqstTDD ProtocolIE-ID ::= 400 id-UL-CCTCCH-InformationModifyList-RL-ReconfRqstTDD ProtocolIE-ID ::= 400 id-UL-DCTCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationM		
id-Synchronisation-Configuration-Cell-SetupRqst	id-SSDT-CellIDforEDSCHPC	
id-Transmission-Gap-Pattern-Sequence-InformationProtocolIE-ID ::= 395id-UL-CCTrCH-InformationAddList-RL-ReconfPrepTDDProtocolIE-ID ::= 396id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID ::= 397id-UL-CCTCCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID ::= 399id-UL-CCTCCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID ::= 399id-UL-CCTCCH-InformationModifyList-RL-ReconfRqstTDDProtocolIE-ID ::= 400id-UL-CCTCCH-InformationModifyList-RL-ReconfPrepTDDProtocolIE-ID ::= 401id-UL-DCTCH-InformationModifyList-RL-ReconfRqstTDDProtocolIE-ID ::= 402id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDDProtocolIE-ID ::= 402id-UL-DPCH-InformationModify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-Modify-	•	
id-UL-CCTrCH-InformationAddList-RL-ReconfPrepTDDProtocolIE-ID::= 397id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID::= 397id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID::= 398id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDDProtocolIE-ID::= 398id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDDProtocolIE-ID::= 400id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDDProtocolIE-ID::= 401id-UL-DCHC-InformationModifyList-RL-ReconfPrepTDDProtocolIE-ID::= 402id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDDProtocolIE-ID::= 403id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDDProtocolIE-ID::= 406id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDDProtocolIE-ID::= 406id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDDProtocolIE-ID::= 407id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDDProtocolIE-ID::= 407id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDDProtocolIE-ID::= 409id-CommunicationContextInfoItem-ResetProtocolIE-ID::= 418id-CommunicationContextInfoItem-ResetProtocolIE-ID::= 416id-TFCI2-BearerSpecificInformation-RL-SetupRgstFDDProtocolIE-ID::= 416id-TFCI2-BearerSpecificInformation-RL-SetupRgstTDDProtocolIE-ID::= 418id-TFCI2-BearerSpecificInformation-RL-SetupRgstTDDProtocolIE-ID::= 419id-TimingAdvanceAppliedProtocolIE-ID::= 416id-TimingAdvanceAppliedProtocolIE	id-Synchronisation-Configuration-Cell-SetupRqst	
id-UL-CCTrCH-InformationDeleteList-RL-ReconfFqstTDD ProtocolIE-ID ::= 398 id-UL-CCTrCH-InformationDeleteList-RL-ReconfFqstTDD ProtocolIE-ID ::= 398 id-UL-CCTrCH-InformationDeleteList-RL-ReconfFqstTDD ProtocolIE-ID ::= 399 id-UL-CCTrCH-InformationModifyList-RL-ReconfFqstTDD ProtocolIE-ID ::= 401 id-UL-CCTrCH-InformationModifyList-RL-ReconfFqstTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModify-ModistIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-Information-ResolIte-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-UL-DPCH-Information-ResolIte-ReconfPrepTDD ProtocolIE-ID ::= 408 id-CommunicationControlPortInfoItem-Reset ProtocolIE-ID ::= 409 id-CommunicationControlPortInfoItem-Reset ProtocolIE-ID ::= 412 id-TFCI2-BearerspecificInformation-RL-SetupRgstFDD ProtocolIE-ID ::= 412	id-Transmission-Gap-Pattern-Sequence-Information	ProtocolIE-ID ::= 395
id-UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD ProtocolIE-ID ::= 398 id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD ProtocolIE-ID ::= 399 id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD ProtocolIE-ID ::= 401 id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 401 id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 403 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 412 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 414 id-TFCI2-Bearer-Information-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 418 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 418 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 410 id-TimingAdvanceApplied ProtocolIE-ID ::= 410 id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-TimingAdvanceApplied ProtocolIE-ID ::= 410 id-TimingAdvanceApplied ProtocolIE-ID ::= 420 id-TimingAdvanceApplied ProtocolIE-ID ::= 420 id-TimingAdvanceApplied ProtocolIE-ID ::= 420 id-TimingAdvanceApplied	id-UL-CCTrCH-InformationAddList-RL-ReconfPrepTDD	
id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD ProtocolIE-ID ::= 399 id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD ProtocolIE-ID ::= 400 id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 401 id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD ProtocolIE-ID ::= 402 id-UL-DPCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID ::= 403 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoltem-Reset ProtocolIE-ID ::= 412 id-CommunicationControlPortInfoltem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 416 id-TFCI2-Bearer-Information-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-Bearer-Information-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-Bearer-Information-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TFCI2-Bearer-Information-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TFCI2-Bearer-Information-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TimingAdvanceApplied ProtocolIE-ID ::= 419 id-TimingAdvanceApplied ProtocolIE-ID ::= 419 id-TimingAdvanceApplied ProtocolIE-ID ::= 419 id-SPNReportingIndicator ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 447 id-CauseLevel-SyncAdjustmntRgstTDD ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntRgstTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncRuconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-Cell	id-UL-CCTrCH-InformationDeleteItem-RL-ReconfRqstTDD	ProtocolIE-ID ::= 397
id-UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD ProtocolIE-ID := 400 id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID := 402 id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID := 402 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID := 403 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID := 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 409 id-UL-DPCH-InformationContextInfortem-RL-Reset ProtocolIE-ID := 412 id-CommunicationContextInfortem-RL-SetupRqstTDD ProtocolIE-ID := 412 id-TFC12-Bearer-InformationTem-RL-SetupRqstTDD ProtocolIE-ID := 417 <t< td=""><td>id-UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD</td><td>ProtocolIE-ID ::= 398</td></t<>	id-UL-CCTrCH-InformationDeleteList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 398
id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD ProtocolIE-ID := 401 id-UL-CCTrCH-InformationModifyList-RL-ReconfRgstTDD ProtocolIE-ID := 403 id-UL-DPCH-InformationModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 403 id-UL-DPCH-InformationModify-PaddListIE-RL-ReconfPrepTDD ProtocolIE-ID := 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 405 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 407 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID := 408 id-UL-DPCH-InformationContextInforLem-Reset ProtocolIE-ID := 408 id-CommunicationContextInforLem-Reset ProtocolIE-ID := 412 id-CommunicationControlPortInforLem-Reset ProtocolIE-ID := 412 id-CommunicationControlPortInforLem-Reset ProtocolIE-ID := 416 id-TFCI2-BearerInformationResponse ProtocolIE-ID := 418 id-TFCI2-BearerSpecificInformationRespon	id-UL-CCTrCH-InformationDeleteList-RL-ReconfRqstTDD	ProtocolIE-ID ::= 399
id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDDProtocollE-ID::=402id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDDProtocollE-ID::=403id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDDProtocollE-ID::=405id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDDProtocollE-ID::=406id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDDProtocollE-ID::=406id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDDProtocollE-ID::=408id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDDProtocollE-ID::=409id-CommunicationControlPortInfoItem-ResetProtocollE-ID::=409id-CommunicationControlPortInfoItem-ResetProtocollE-ID::=410id-CommunicationControlPortInfoItem-ResetProtocollE-ID::=416id-TFC12-Bearer-Information-RL-SetupRqstFDDProtocollE-ID::=416id-TFC12-Bearer-SpecificInformation-RL-ReconfPrepFDDProtocollE-ID::=418id-TFC12-BearerSpecificInformation-RL-ReconfPrepFDDProtocollE-ID::=419id-TFC12-BearerRequestIndicatorProtocollE-ID::=419id-TFC12-BearerSpecificInformationTem-RL-ReconfPrepFDDProtocollE-ID::=419id-TFC12-BearerSpecificInformationProtocollE-ID::=420id-CFNReportingIndicatorProtocollE-ID::=420id-TimingAdvanceAppliedProtocollE-ID::=421id-TimeslotISCPInfoProtocollE-ID::=2	id-UL-CCTrCH-InformationModifyItem-RL-ReconfRqstTDD	ProtocolIE-ID ::= 400
id-UL-DPCH-InformationAddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 403 id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-DeteListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 412 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 416 id-TFCI2-Bearer-Information-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-Bearer-Information-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerInformationResponse ProtocolIE-ID ::= 418 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TfCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TimingAdvanceApplied ProtocolIE-ID ::= 419 id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-SPNReportingIndicator ProtocolIE-ID ::= 287 id-SPNReportingIndicator ProtocolIE-ID ::= 110 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 40 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 40 id-CCATCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 42 id-CellAdjustmentInfoItem-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstMeasureInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstMeasureInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 42 id-CellSyncBurstMeasureInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 42 id-CellS	id-UL-CCTrCH-InformationModifyList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 401
id-UL-DPCH-InformationModify-AddListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 405 id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 406 id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 419 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 416 id-TFCI2-Bearer-Information-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 420 id-SFNReportingIndicator ProtocolIE-ID ::= 287 id-SFNReportingIndicator ProtocolIE-ID ::= 110 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 110 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 470 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 421 id-CellSyncBurstTransInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 426 id-Cel	id-UL-CCTrCH-InformationModifyList-RL-ReconfRqstTDD	ProtocolIE-ID ::= 402
id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD	id-UL-DPCH-InformationAddListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 403
id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 412 id-CommunicationControlPortInfoItem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 416 id-TFCI2-BearerInformation-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 429 id-CFNReportingIndicator ProtocolIE-ID ::= 287 id-CFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 11 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 47 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 421 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstMeasReconfig		ProtocolIE-ID ::= 405
id-UL-DPCH-InformationModify-ModifyListIE-RL-ReconfPrepTDD ProtocolIE-ID ::= 407 id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 408 id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD ProtocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset ProtocolIE-ID ::= 412 id-CommunicationControlPortInfoItem-Reset ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 414 id-ResetIndicator ProtocolIE-ID ::= 416 id-TFCI2-BearerInformation-RL-SetupRqstFDD ProtocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 429 id-CFNReportingIndicator ProtocolIE-ID ::= 287 id-CFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 11 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 47 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 421 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstMeasReconfig	id-UL-DPCH-InformationModify-DeleteListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 406
id-Unsuccessful-PDSCHSetItem-PSCH-ReconfFailureTDD id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD id-CommunicationContextInfoItem-Reset protocolIE-ID ::= 409 id-CommunicationContextInfoItem-Reset protocolIE-ID ::= 412 id-CommunicationControlPortInfoItem-Reset protocolIE-ID ::= 414 id-ResetIndicator protocolIE-ID ::= 416 id-TFCI2-Bearer-Information-RL-SetupRqstFDD protocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD protocolIE-ID ::= 418 id-TFCI2-BearerInformationResponse protocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator protocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator protocolIE-ID ::= 427 id-CFNReportingIndicator protocolIE-ID ::= 6 id-SFNReportingIndicator protocolIE-ID ::= 6 id-SFNReportingIndicator protocolIE-ID ::= 11 id-InnerLoopDLPCStatus protocolIE-ID ::= 12 id-TimeslotISCPInfo protocolIE-ID ::= 12 id-PRACH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-FailureInd protocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd protocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD protocolIE-ID ::= 47 id-CallAdjustmentInfo-SyncAdjustmntRqstTDD protocolIE-ID ::= 420 id-CellAdjustmentInfoItem-SyncAdjustmntRqstTDD protocolIE-ID ::= 420 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 425		ProtocolIE-ID ::= 407
id-CommunicationContextInfoItem-Reset id-CommunicationControlPortInfoItem-Reset protocolIE-ID ::= 412 id-ResetIndicator protocolIE-ID ::= 416 id-TFCI2-Bearer-Information-RL-SetupRqstFDD protocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD protocolIE-ID ::= 418 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD protocolIE-ID ::= 418 id-TFCI2-BearerInformationResponse protocolIE-ID ::= 419 id-TFCI2-BearerRequestIndicator protocolIE-ID ::= 419 id-TimingAdvanceApplied protocolIE-ID ::= 287 id-GFNReportingIndicator protocolIE-ID ::= 287 id-GFNReportingIndicator protocolIE-ID ::= 6 id-SFNReportingIndicator protocolIE-ID ::= 11 id-InnerLoopDLPCStatus protocolIE-ID ::= 12 id-TimeslotISCPInfo protocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-FailureInd protocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd protocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD protocolIE-ID ::= 47 id-CellAdjustmentInfoItem-SyncAdjustmntRqstTDD protocolIE-ID ::= 420 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD protocolIE-ID ::= 420 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 425		ProtocolIE-ID ::= 408
id-CommunicationControlPortInfoItem-ResetProtocolIE-ID::=414id-ResetIndicatorProtocolIE-ID::=416id-TFCI2-Bearer-Information-RL-SetupRqstFDDProtocolIE-ID::=417id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDDProtocolIE-ID::=418id-TFCI2-BearerInformationResponseProtocolIE-ID::=419id-TFCI2BearerRequestIndicatorProtocolIE-ID::=142id-TimingAdvanceAppliedProtocolIE-ID::=287id-CFNReportingIndicatorProtocolIE-ID::=287id-SFNReportingIndicatorProtocolIE-ID::=11id-InnerLoopDLPCStatusProtocolIE-ID::=12id-TimeslotISCPInfoProtocolIE-ID::=12id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=283id-PICH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=20id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::=47id-CauseLevel-SyncAdjustmntRqstTDDProtocolIE-ID::=42id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDDProtocolIE-ID::=421id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::=482id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDDProtocolIE-ID::=422id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=423id-CellSyncBurstMeasReconfigurat	id-Unsuccessful-PUSCHSetItem-PSCH-ReconfFailureTDD	ProtocolIE-ID ::= 409
id-ResetIndicator id-TFCI2-Bearer-Information-RL-SetupRqstFDD id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 417 id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerInformationResponse id-TFCI2-BearerRequestIndicator ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 142 id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-CFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 11 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 12 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 20 id-PRACH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 421 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 494 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425	id-CommunicationContextInfoItem-Reset	ProtocolIE-ID ::= 412
id-TFCI2-Bearer-Information-RL-SetupRqstFDDProtocolIE-ID::=417id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDDProtocolIE-ID::=418id-TFCI2-BearerInformationResponseProtocolIE-ID::=419id-TFCI2BearerRequestIndicatorProtocolIE-ID::=419id-TimingAdvanceAppliedProtocolIE-ID::=1287id-GFNReportingIndicatorProtocolIE-ID::=6id-SFNReportingIndicatorProtocolIE-ID::=11id-InnerLoopDLPCStatusProtocolIE-ID::=12id-TimeslotISCPInfoProtocolIE-ID::=12id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=167id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::=47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::=47id-CellAdjustmentInfo-SyncAdjustmntRqstTDDProtocolIE-ID::=421id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::=482id-CellSyncBurstTransInit-CellSyncInitiationRqstTDDProtocolIE-ID::=423id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=423id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=424	id-CommunicationControlPortInfoItem-Reset	ProtocolIE-ID ::= 414
id-TFCI2-Bearer-Information-RL-SetupRqstFDDProtocolIE-ID::=417id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDDProtocolIE-ID::=418id-TFCI2-BearerInformationResponseProtocolIE-ID::=419id-TFCI2BearerRequestIndicatorProtocolIE-ID::=419id-TimingAdvanceAppliedProtocolIE-ID::=1287id-GFNReportingIndicatorProtocolIE-ID::=6id-SFNReportingIndicatorProtocolIE-ID::=11id-InnerLoopDLPCStatusProtocolIE-ID::=12id-TimeslotISCPInfoProtocolIE-ID::=12id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=167id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::=47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::=47id-CellAdjustmentInfo-SyncAdjustmntRqstTDDProtocolIE-ID::=421id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::=482id-CellSyncBurstTransInit-CellSyncInitiationRqstTDDProtocolIE-ID::=423id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=423id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=424	id-ResetIndicator	ProtocolIE-ID ::= 416
id-TFCI2-BearerSpecificInformation-RL-ReconfPrepFDD ProtocolIE-ID ::= 418 id-TFCI2-BearerInformationResponse ProtocolIE-ID ::= 419 id-TFCI2BearerRequestIndicator ProtocolIE-ID ::= 142 id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-CFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 11 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 20 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 46 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 421 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 494 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 426 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 426 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 427 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 428 id-CellSyncBurstTra		
id-TFCI2-BearerInformationResponse id-TFCI2BearerRequestIndicator id-TFCI2BearerRequestIndicator id-TimingAdvanceApplied id-CFNReportingIndicator id-SFNReportingIndicator id-SFNReportingIndicator id-SFNReportingIndicator id-SFNReportingIndicator id-InnerLoopDLPCStatus id-TimeslotISCPInfo id-PRACH-ParametersItem-CTCH-SetupRqstTDD id-PRACH-ParametersItem-CTCH-SetupRqstTDD id-CCTrCH-InformationItem-RL-FailureInd id-CCTrCH-InformationItem-RL-RestoreInd id-CCTrCH-InformationItem-RL-RestoreInd id-CauseLevel-SyncAdjustmntFailureTDD id-CellAdjustmentInfoItem-SyncAdjustmntRqstTDD id-CellAdjustmentInfoItem-SyncAdjustmntRqstTDD id-CellSyncBurstInfoList-CellSyncReconfRqstTDD id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasureInit-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425		ProtocolIE-ID ::= 418
id-TFCI2BearerRequestIndicator id-TimingAdvanceApplied protocolIE-ID ::= 287 id-CFNReportingIndicator protocolIE-ID ::= 6 id-SFNReportingIndicator protocolIE-ID ::= 6 id-SFNReportingIndicator protocolIE-ID ::= 11 id-InnerLoopDLPCStatus protocolIE-ID ::= 12 id-TimeslotISCPInfo id-PICH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 167 id-PRACH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 167 id-PRACH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-FailureInd protocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd protocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD protocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD protocolIE-ID ::= 421 id-CellAdjustmentInfoList-CellSyncReconfRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasureInit-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 425	-	
id-TimingAdvanceApplied ProtocolIE-ID ::= 287 id-CFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 6 id-SFNReportingIndicator ProtocolIE-ID ::= 11 id-InnerLoopDLPCStatus ProtocolIE-ID ::= 12 id-TimeslotISCPInfo ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 283 id-PICH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 167 id-PRACH-ParametersItem-CTCH-SetupRqstTDD ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 421 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 494 id-CellSyncBurstInfoList-CellSyncRconfRqstTDD ProtocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424	-	
id-CFNReportingIndicator id-SFNReportingIndicator id-InnerLoopDLPCStatus id-InnerLoopDLPCStatus id-TimeslotISCPInfo id-PICH-ParametersItem-CTCH-SetupRqstTDD id-PRACH-ParametersItem-CTCH-SetupRqstTDD id-CCTrCH-InformationItem-RL-FailureInd id-CCTrCH-InformationItem-RL-RestoreInd id-CauseLevel-SyncAdjustmntFailureTDD id-CellAdjustmentInfo-SyncAdjustmntRqstTDD id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD id-CellSyncBurstInfoList-CellSyncReconfRqstTDD protocolIE-ID := 494 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD protocolIE-ID := 482 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424		
id-SFNReportingIndicatorProtocolIE-ID::=11id-InnerLoopDLPCStatusProtocolIE-ID::=12id-TimeslotISCPInfoProtocolIE-ID::=283id-PICH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=167id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=20id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::=47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::=420id-CellAdjustmentInfo-SyncAdjustmentRqstTDDProtocolIE-ID::=421id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDDProtocolIE-ID::=494id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::=482id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDDProtocolIE-ID::=422id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=423id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=424id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=424		
id-InnerLoopDLPCStatusProtocolIE-ID::= 12id-TimeslotISCPInfoProtocolIE-ID::= 283id-PICH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::= 167id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::= 20id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::= 46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::= 47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::= 420id-CellAdjustmentInfo-SyncAdjustmntRqstTDDProtocolIE-ID::= 421id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDDProtocolIE-ID::= 494id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::= 482id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDDProtocolIE-ID::= 422id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::= 423id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::= 424id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::= 424		
id-TimeslotISCPInfo id-PICH-ParametersItem-CTCH-SetupRqstTDD id-PRACH-ParametersItem-CTCH-SetupRqstTDD protocolIE-ID ::= 167 id-PRACH-ParametersItem-CTCH-SetupRqstTDD id-CCTrCH-InformationItem-RL-FailureInd protocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd protocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD protocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmentRqstTDD protocolIE-ID ::= 421 id-CellAdjustmentInfoLiem-SyncAdjustmentRqstTDD protocolIE-ID ::= 494 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424		
id-PICH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::= 167id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::= 20id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::= 46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::= 47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::= 420id-CellAdjustmentInfo-SyncAdjustmntRqstTDDProtocolIE-ID::= 421id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDDProtocolIE-ID::= 494id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::= 482id-CellSyncBurstTransInit-CellSyncInitiationRqstTDDProtocolIE-ID::= 422id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDDProtocolIE-ID::= 423id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::= 424id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::= 424	-	
id-PRACH-ParametersItem-CTCH-SetupRqstTDDProtocolIE-ID::=20id-CCTrCH-InformationItem-RL-FailureIndProtocolIE-ID::=46id-CCTrCH-InformationItem-RL-RestoreIndProtocolIE-ID::=47id-CauseLevel-SyncAdjustmntFailureTDDProtocolIE-ID::=420id-CellAdjustmentInfo-SyncAdjustmntRqstTDDProtocolIE-ID::=421id-CellAdjustmentInfoLitem-SyncAdjustmentRqstTDDProtocolIE-ID::=494id-CellSyncBurstInfoList-CellSyncReconfRqstTDDProtocolIE-ID::=482id-CellSyncBurstTransInit-CellSyncInitiationRqstTDDProtocolIE-ID::=422id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDDProtocolIE-ID::=423id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=424id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDDProtocolIE-ID::=425		
id-CCTrCH-InformationItem-RL-FailureInd ProtocolIE-ID ::= 46 id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 421 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 494 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 482 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424		
id-CCTrCH-InformationItem-RL-RestoreInd ProtocolIE-ID ::= 47 id-CauseLevel-SyncAdjustmntFailureTDD ProtocolIE-ID ::= 420 id-CellAdjustmentInfo-SyncAdjustmntRqstTDD ProtocolIE-ID ::= 421 id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD ProtocolIE-ID ::= 494 id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425		
id-CauseLevel-SyncAdjustmntFailureTDD id-CellAdjustmentInfo-SyncAdjustmntRqstTDD id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD id-CellSyncBurstInfoList-CellSyncReconfRqstTDD id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 482 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD protocolIE-ID ::= 422 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 423 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD protocolIE-ID ::= 425		
<pre>id-CellAdjustmentInfo-SyncAdjustmntRqstTDD</pre>		
<pre>id-CellAdjustmentInfoItem-SyncAdjustmentRqstTDD</pre>		
id-CellSyncBurstInfoList-CellSyncReconfRqstTDD ProtocolIE-ID ::= 482 id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425		
id-CellSyncBurstTransInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 422 id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425		
id-CellSyncBurstMeasureInit-CellSyncInitiationRqstTDD ProtocolIE-ID ::= 423 id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425		
id-CellSyncBurstTransReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 424 id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425	· · · · · · · · · · · · · · · · · · ·	
id-CellSyncBurstMeasReconfiguration-CellSyncReconfRqstTDD ProtocolIE-ID ::= 425	· · · · · · · · · · · · · · · · · · ·	
	· · · · · · · · · · · · · · · · · · ·	
id-cellsyncburstTransInfoList-cellSynckeconikqstTDD ProtocollE-ID ::= 426	· · · · · · · · · · · · · · · · · · ·	
	iα-cerisynchurstTransinioList-cerisynckeconikqstTDD	Protocolle-ID ::= 426

584

id-CellSyncBurstMeasInfoList-CellSyncReconfRqstTDD	ProtocolIE-ID ::= 427
id-CellSyncBurstTransReconfInfo-CellSyncReconfRqstTDD	ProtocolIE-ID ::= 428
id-CellSyncInfo-CellSyncReprtTDD	ProtocolIE-ID ::= 429
id-CSBTransmissionID	ProtocolIE-ID ::= 430
id-CSBMeasurementID	ProtocolIE-ID ::= 431
id-IntStdPhCellSyncInfoItem-CellSyncReprtTDD	ProtocolIE-ID ::= 432
id-NCyclesPerSFNperiod	ProtocolIE-ID ::= 433
id-NRepetitionsPerCyclePeriod	ProtocolIE-ID ::= 434
id-SyncFrameNumber	ProtocolIE-ID ::= 437
id-SynchronisationReportType	ProtocolIE-ID ::= 438
id-SynchronisationReportCharacteristics	ProtocolIE-ID ::= 439
id-Unsuccessful-cell-InformationRespItem-SyncAdjustmntFailureTDD	ProtocolIE-ID ::= 440
id-LateEntranceCellSyncInfoItem-CellSyncReprtTDD	ProtocolIE-ID ::= 119
id-ReferenceClockAvailability	ProtocolIE-ID ::= 435
id-ReferenceSFNoffset	ProtocolIE-ID ::= 436
id-InformationExchangeID	ProtocolIE-ID ::= 444
id-InformationExchangeObjectType-InfEx-Rqst	ProtocolIE-ID ::= 445
id-InformationType	ProtocolIE-ID ::= 446
id-InformationReportCharacteristics	ProtocolIE-ID ::= 447
id-InformationExchangeObjectType-InfEx-Rsp	ProtocolIE-ID ::= 448
id-InformationExchangeObjectType-InfEx-Rprt	ProtocolIE-ID ::= 449
id-IPDLParameter-Information-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 451
id-IPDLParameter-Information-Cell-SetupRqstFDD	ProtocolIE-ID ::= 452
id-IPDLParameter-Information-Cell-ReconfRqstTDD	ProtocolIE-ID ::= 453
id-IPDLParameter-Information-Cell-SetupRqstTDD	ProtocolIE-ID ::= 454
id-DL-DPCH-LCR-Information-RL-SetupRqstTDD	ProtocolIE-ID ::= 74
id-DwPCH-LCR-Information	ProtocolIE-ID ::= 78
id-DwPCH-LCR-InformationList-AuditRsp	ProtocolIE-ID ::= 90
id-DwPCH-LCR-Information-Cell-SetupRqstTDD	ProtocolIE-ID ::= 97
id-DwPCH-LCR-Information-Cell-ReconfRqstTDD	ProtocolIE-ID ::= 99
id-DwPCH-LCR-Information-ResourceStatusInd	ProtocolIE-ID ::= 101
id-maxFACH-Power-LCR-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 154
id-maxFACH-Power-LCR-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 174
id-FPACH-LCR-Information	ProtocolIE-ID ::= 290
id-FPACH-LCR-Information-AuditRsp	ProtocolIE-ID ::= 292
id-FPACH-LCR-InformationList-AuditRsp	ProtocolIE-ID ::= 22
id-FPACH-LCR-InformationList-ResourceStatusInd	ProtocolIE-ID ::= 311
id-FPACH-LCR-Parameters-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 312
id-FPACH-LCR-Parameters-CTCH-ReconfRgstTDD	ProtocolIE-ID ::= 314
id-PCCPCH-LCR-Information-Cell-SetupRqstTDD	ProtocolIE-ID ::= 456
id-PCH-Power-LCR-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 457
id-PCH-Power-LCR-CTCH-ReconfRqstTDD	ProtocolIE-ID ::= 458
id-PICH-LCR-Parameters-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 459
id-PRACH-LCR-ParametersList-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 461
id-RL-InformationResponse-LCR-RL-SetupRspTDD	ProtocolIE-ID ::= 463
id-Secondary-CCPCH-LCR-parameterList-CTCH-SetupRqstTDD	ProtocolIE-ID ::= 465
id-TimeSlot	ProtocolIE-ID ::= 495
id-TimeSlotConfigurationList-LCR-Cell-ReconfRqstTDD	ProtocolIE-ID ::= 466
id-TimeSlotConfigurationList-LCR-Cell-SetupRqstTDD	ProtocolIE-ID ::= 467
id-TimeslotISCP-LCR-InfoList-RL-SetupRqstTDD	ProtocolIE-ID ::= 468
id-TimeSlotLCR-CM-Rqst	ProtocolIE-ID ::= 469
id-UL-DPCH-LCR-Information-RL-SetupRqstTDD	ProtocolIE-ID ::= 470
id-DL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD	ProtocolIE-ID ::= 472
id-UL-DPCH-InformationItem-LCR-RL-AdditionRqstTDD	ProtocolIE-ID ::= 473

$\verb id-TimeslotISCP-InformationList-LCR-RL-AdditionRqstTDD \\$	ProtocolIE-ID ::= 474
id-DL-DPCH-LCR-InformationAddList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 475
id-DL-DPCH-LCR-InformationModify-AddList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 477
id-DL-Timeslot-LCR-InformationModify-ModifyList-RL-ReconfPrepTDD	ProtocolIE-ID ::= 479
id-TimeslotISCPInfoList-LCR-DL-PC-RqstTDD	ProtocolIE-ID ::= 480
id-UL-DPCH-LCR-InformationAddListIE-RL-ReconfPrepTDD	ProtocolIE-ID ::= 481
id-UL-DPCH-LCR-InformationModify-AddList	ProtocolIE-ID ::= 483
id-UL-TimeslotLCR-Information-RL-ReconfPrepTDD	ProtocolIE-ID ::= 485
id-UL-SIRTarget	ProtocolIE-ID ::= 510
id-PDSCH-AddInformation-LCR-PSCH-ReconfRqst	ProtocolIE-ID ::= 486
id-PDSCH-AddInformation-LCR-AddListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 487
id-PDSCH-Information-Cell-SetupRqstFDD	ProtocolIE-ID ::= 26
id-PDSCH-Information-Cell-ReconfRqstFDD	ProtocolIE-ID ::= 27
id-PDSCH-ModifyInformation-LCR-PSCH-ReconfRqst	ProtocolIE-ID ::= 488
id-PDSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 489
id-PUSCH-AddInformation-LCR-PSCH-ReconfRqst	ProtocolIE-ID ::= 490
id-PUSCH-AddInformation-LCR-AddListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 491
id-PUSCH-ModifyInformation-LCR-PSCH-ReconfRqst	ProtocolIE-ID ::= 492
id-PUSCH-ModifyInformation-LCR-ModifyListIE-PSCH-ReconfRqst	ProtocolIE-ID ::= 493
id-timeslotInfo-CellSyncInitiationRqstTDD	ProtocolIE-ID ::= 496
id-SyncReportType-CellSyncReprtTDD	ProtocolIE-ID ::= 497
id-Power-Local-Cell-Group-InformationItem-AuditRsp	ProtocolIE-ID ::= 498
id-Power-Local-Cell-Group-InformationItem-ResourceStatusInd	ProtocolIE-ID ::= 499
id-Power-Local-Cell-Group-InformationItem2-ResourceStatusInd	ProtocolIE-ID ::= 500
id-Power-Local-Cell-Group-InformationList-AuditRsp	ProtocolIE-ID ::= 501
id-Power-Local-Cell-Group-InformationList-ResourceStatusInd	ProtocolIE-ID ::= 502
id-Power-Local-Cell-Group-InformationList2-ResourceStatusInd	ProtocolIE-ID ::= 503
id-Power-Local-Cell-Group-ID	ProtocolIE-ID ::= 504
id-PUSCH-Info-DM-Rqst	ProtocolIE-ID ::= 505
id-PUSCH-Info-DM-Rsp	ProtocolIE-ID ::= 506
id-PUSCH-Info-DM-Rprt	ProtocolIE-ID ::= 507
id-InitDL-Power	ProtocolIE-ID ::= 509
id-cellSyncBurstRepetitionPeriod	ProtocolIE-ID ::= 511
id-ReportCharacteristicsType-OnModification	ProtocolIE-ID ::= 512
id-SFNSFNMeasurementValueInformation	ProtocolIE-ID ::= 513
${\tt id} extsf{-SFNSFNMeasurementThresholdInformation}$	ProtocolIE-ID ::= 514
${\tt id-TUTRANGPSMeasurementValueInformation}$	ProtocolIE-ID ::= 515
${\tt id-TUTRANGPSMeasurementThresholdInformation}$	ProtocolIE-ID ::= 516
id-Rx-Timing-Deviation-Value-LCR	ProtocolIE-ID ::= 520
id-RL-InformationResponse-LCR-RL-AdditionRspTDD	ProtocolIE-ID ::= 51
id-DL-PowerBalancing-Information	ProtocolIE-ID ::= 28
id-DL-PowerBalancing-ActivationIndicator	ProtocolIE-ID ::= 29
id-DL-PowerBalancing-UpdatedIndicator	ProtocolIE-ID ::= 30
id-CCTrCH-Initial-DL-Power-RL-SetupRqstTDD	ProtocolIE-ID ::= 517
id-CCTrCH-Initial-DL-Power-RL-AdditionRqstTDD	ProtocolIE-ID ::= 518
id-CCTrCH-Initial-DL-Power-RL-ReconfPrepTDD	ProtocolIE-ID ::= 519
id-IPDLParameter-Information-LCR-Cell-SetupRqstTDD	ProtocolIE-ID ::= 41
id-IPDLParameter-Information-LCR-Cell-ReconfRgstTDD	ProtocolIE-ID ::= 42
id-HS-PDSCH-HS-SCCH-MaxPower-PSCH-Reconfrqst	ProtocolIE-ID ::= 522
id-HS-PDSCH-HS-SCCH-ScramblingCode-PSCH-ReconfRqst	ProtocolIE-ID ::= 523
id-HS-PDSCH-FDD-Code-Information-PSCH-Reconfrast	ProtocolIE-ID ::= 524
id-HS-SCCH-FDD-Code-Information-PSCH-Reconfragst	ProtocoliE-ID ::= 524
id-HS-PDSCH-TDD-Information-PSCH-Reconfrqst	ProtocoliE-ID ::= 526
id-Add-To-HS-SCCH-Resource-Pool-PSCH-ReconfRqst	ProtocoliE-ID ::= 527

586

```
id-Modify-HS-SCCH-Resource-Pool-PSCH-ReconfRqst
                                                                     ProtocolIE-ID ::= 528
id-Delete-From-HS-SCCH-Resource-Pool-PSCH-ReconfRast
                                                                     ProtocolIE-ID ::= 529
id-bindingID
                                                                     ProtocolIE-ID ::= 102
id-RL-Specific-DCH-Info
                                                                     ProtocolIE-ID ::= 103
id-transportlayeraddress
                                                                     ProtocolIE-ID ::= 104
id-DelayedActivation
                                                                     ProtocolIE-ID ::= 231
\verb|id-DelayedActivationList-RL-ActivationCmdFDD|\\
                                                                     ProtocolIE-ID ::= 232
id-DelayedActivationInformation-RL-ActivationCmdFDD
                                                                     ProtocolIE-ID ::= 233
id-DelayedActivationList-RL-ActivationCmdTDD
                                                                     ProtocolIE-ID ::= 234
id-DelayedActivationInformation-RL-ActivationCmdTDD
                                                                     ProtocolIE-ID ::= 235
id-neighbouringTDDCellMeasurementInformationLCR
                                                                     ProtocolIE-ID ::= 58
id-SYNCDlCodeId-TransInitLCR-CellSyncInitiationRqstTDD
                                                                     ProtocolIE-ID ::= 543
id-SYNCDlCodeId-MeasureInitLCR-CellSyncInitiationRgstTDD
                                                                     ProtocolIE-ID ::= 544
id-SYNCDlCodeIdTransReconfInfoLCR-CellSyncReconfRgstTDD
                                                                     ProtocolIE-ID ::= 545
id-SYNCDlCodeIdMeasReconfigurationLCR-CellSyncReconfRqstTDD
                                                                     ProtocolIE-ID ::= 546
id-SYNCDlCodeIdMeasInfoList-CellSyncReconfRqstTDD
                                                                     ProtocolIE-ID ::= 547
id-SyncDLCodeIdsMeasInfoList-CellSyncReprtTDD
                                                                     ProtocolIE-ID ::= 548
id-SyncDLCodeIdThreInfoLCR
                                                                     ProtocolIE-ID ::= 549
id-NSubCyclesPerCyclePeriod-CellSyncReconfRgstTDD
                                                                     ProtocolIE-ID ::= 550
id-DwPCH-Power
                                                                     ProtocolIE-ID ::= 551
id-AccumulatedClockupdate-CellSyncReprtTDD
                                                                     ProtocolIE-ID ::= 552
id-Angle-Of-Arrival-Value-LCR
                                                                     ProtocolIE-ID ::= 521
id-HSDSCH-FDD-Information
                                                                     ProtocolIE-ID ::= 530
id-HSDSCH-FDD-Information-Response
                                                                     ProtocolIE-ID ::= 531
id-HSDSCH-FDD-Information-to-Add
                                                                     ProtocolIE-ID ::= 532
id-HSDSCH-FDD-Information-to-Delete
                                                                     ProtocolIE-ID ::= 533
id-HSDSCH-Information-to-Modify
                                                                     ProtocolIE-ID ::= 534
id-HSDSCH-RNTI
                                                                     ProtocolIE-ID ::= 535
id-HSDSCH-TDD-Information
                                                                     ProtocolIE-ID ::= 536
id-HSDSCH-TDD-Information-Response
                                                                     ProtocolIE-ID ::= 537
id-HSDSCH-TDD-Information-Response-LCR
                                                                     ProtocolIE-ID ::= 538
id-HSDSCH-TDD-Information-to-Add
                                                                     ProtocolIE-ID ::= 539
id-HSDSCH-TDD-Information-to-Delete
                                                                     ProtocolIE-ID ::= 540
id-HSPDSCH-RL-ID
                                                                     ProtocolIE-ID ::= 541
id-PrimCCPCH-RSCP-DL-PC-RgstTDD
                                                                     ProtocolIE-ID ::= 542
id-Oth-Parameter
                                                                     ProtocolIE-ID ::= 64
id-PDSCH-RL-ID
                                                                     ProtocolIE-ID ::= 66
id-HSDSCH-RearrangeList-Bearer-RearrangeInd
                                                                     ProtocolIE-ID ::= 553
```

END

9.3.7 Container Definitions

```
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
-- IE parameter types from other modules.
IMPORTS
   maxProtocolExtensions,
   maxPrivateIEs,
   maxProtocolIEs,
   Criticality,
   Presence,
   PrivateIE-ID,
   ProtocolIE-ID
FROM NBAP-CommonDataTypes;
  *****************
-- Class Definition for Protocol IEs
__ ********************
NBAP-PROTOCOL-IES ::= CLASS {
   &id ProtocolIE-ID
                           UNIQUE,
   &criticality Criticality,
   &Value,
   &presence Presence
WITH SYNTAX {
   ID &id
   CRITICALITY &criticality
   TYPE
            &Value
   PRESENCE
            &presence
__ **********************
-- Class Definition for Protocol IEs
__ ***********************************
NBAP-PROTOCOL-IES-PAIR ::= CLASS {
          ProtocolIE-ID
                              UNIQUE,
   &firstCriticality Criticality,
   &FirstValue,
   &secondCriticality Criticality,
   &SecondValue,
   &presence
               Presence
WITH SYNTAX {
```

```
&id
  ID
  FIRST CRITICALITY &firstCriticality
  FIRST TYPE
              &FirstValue
   SECOND CRITICALITY &secondCriticality
   SECOND TYPE &SecondValue
   PRESENCE
              &presence
     -- Class Definition for Protocol Extensions
__ **********************
NBAP-PROTOCOL-EXTENSION ::= CLASS {
  &id ProtocolIE-ID
   &criticality Criticality,
   &Extension,
   &presence
              Presence
WITH SYNTAX {
  ID &id
   CRITICALITY & criticality
   EXTENSION &Extension
   PRESENCE
           &presence
  *******************
-- Class Definition for Private IEs
__ ********************
NBAP-PRIVATE-IES ::= CLASS {
  &id PrivateIE-ID,
  &criticality Criticality,
  &Value,
  &presence
              Presence
WITH SYNTAX {
  ID &id
  CRITICALITY &criticality
  TYPE &Value
   PRESENCE &presence
  ******************
-- Container for Protocol IEs
__ ********************
ProtocolIE-Container {NBAP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
```

```
ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {NBAP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {NBAP-PROTOCOL-IES : IESSetParam} ::= SEQUENCE {
         NBAP-PROTOCOL-IES.&id
                                 ({IEsSetParam}),
   criticality NBAP-PROTOCOL-IES.&criticality ({IEsSetParam}{@id}),
         NBAP-PROTOCOL-IES.&Value ({IEsSetParam}{@id})
  *****************
-- Container for Protocol IE Pairs
ProtocolIE-ContainerPair {NBAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {NBAP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE {
      NBAP-PROTOCOL-IES-PAIR.&id
                                              ({IEsSetParam}),
                      NBAP-PROTOCOL-IES-PAIR.&firstCriticality
   firstCriticality
                                                           ({IEsSetParam}{@id}),
   firstValue NBAP-PROTOCOL-IES-PAIR.&FirstValue ({IEsSetParam}{@id}),
   secondCriticality NBAP-PROTOCOL-IES-PAIR.&secondCriticality ({IEsSetParam}{@id}),
   secondValue NBAP-PROTOCOL-IES-PAIR.&SecondValue ({IEsSetParam}{@id})
        -- Container Lists for Protocol IE Containers
    ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, NBAP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-Container {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, NBAP-PROTOCOL-IES-PAIR : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
    -- Container for Protocol Extensions
  ····
ProtocolExtensionContainer {NBAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {NBAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
```

590

```
NBAP-PROTOCOL-EXTENSION.&id ({ExtensionSetParam}),
   criticality NBAP-PROTOCOL-EXTENSION.&criticality ({ExtensionSetParam}{@id}),
   extensionValue NBAP-PROTOCOL-EXTENSION.&Extension ({ExtensionSetParam}{@id})
    *************
-- Container for Private IEs
__ *******************
PrivateIE-Container {NBAP-PRIVATE-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (1..maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {NBAP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
             NBAP-PRIVATE-IES.&id
   ({IEsSetParam}),
   criticality
                    NBAP-PRIVATE-IES.&criticality
   ({IEsSetParam}{@id}),
   value
             NBAP-PRIVATE-IES.&Value
   ({IEsSetParam}{@id})
END
```

9.4 Message Transfer Syntax

NBAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax as specified in ref. [11].

The following encoding rules apply in addition to what has been specified in X.691 [11]:

When a bitstring value is placed in a bit-field as specified in 15.6 to 15.11 in [11], the leading bit of the bitstring value shall be placed in the leading bit of the bit-field, and the trailing bit of the bitstring value shall be placed in the trailing bit of the bit-field.

NOTE - When using the "bstring" notation, the leading bit of the bitstring value is on the left, and the trailing bit of the bitstring value is on the right. The term 'leading bit' is to be interpreted as equal to the term 'first bit' defined in [12].

9.5 Timers

 T_{Preempt}

- Specifies the maximum time that a Node B may wait for pre-emption of resources for establishment or reconfiguration of Radio Links.

Handling of Unknown, Unforeseen and Erroneous Protocol Data

10.1 General

Protocol Error cases can be divided into three classes:

- Transfer Syntax Error
- Abstract Syntax Error
- Logical Error

Protocol errors can occur in the following functions within a receiving node:

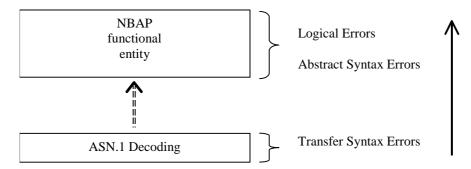


Figure 38: Protocol Errors in NBAP.

The information stated in subclauses 10.2, 10.3 and 10.4, to be included in the message used when reporting an error, is what at minimum shall be included. Other optional information elements within the message may also be included, if available. This is also valid for the case when the reporting is done with a response message. The latter is an exception to what is stated in subclause 4.1.

10.2 Transfer Syntax Error

A Transfer Syntax Error occurs when the receiver is not able to decode the received physical message. Transfer syntax errors are always detected in the process of ASN.1 decoding. If a Transfer Syntax Error occurs, the receiver should initiate Error Indication procedure with appropriate cause value for the Transfer Syntax protocol error.

Examples for Transfer Syntax Errors are:

- Violation of value ranges in ASN.1 definition of messages. e.g.: If an IE has a defined value range of 0 to 10 (ASN.1: INTEGER (0..10)), and 12 will be received, then this will be treated as a transfer syntax error.
- Violation in list element constraints. e.g.: If a list is defined as containing 1 to 10 elements, and 12 elements will be received, than this case will be handled as a transfer syntax error.
- Missing mandatory elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).
- Wrong order of elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).

10.3 Abstract Syntax Error

10.3.1 General

An Abstract Syntax Error occurs when the receiving functional NBAP entity:

- 1. receives IEs or IE groups that cannot be understood (unknown id);
- 2. receives IEs for which the logical range is violated (e.g.: ASN.1 definition: 0 to 15, the logical range is 0 to 10 (values 11 to 15 are undefined), and 12 will be received; this case will be handled as an abstract syntax error using criticality information sent by the originator of the message);
- 3. does not receive IEs or IE groups but according to the specified presence of the concerned object, the IEs or IE groups should have been present in the received message;
- 4. receives IEs or IE groups that are defined to be part of that message in wrong order or with too many occurrences of the same IE or IE group;
- 5. receives IEs or IE groups but according to the conditional presence of the concerned object and the specified condition, the IEs or IE groups should not have been present in the received message.

Cases 1 and 2 (not comprehended IE/IE group) are handled based on received Criticality information. Case 3 (missing IE/IE group) is handled based on Criticality information and Presence information for the missing IE/IE group specified in the version of the specification used by the receiver. Case 4 (IEs or IE groups in wrong order or with too many occurrences) and Case 5 (erroneously present conditional IEs or IE groups) result in rejecting the procedure.

If an Abstract Syntax Error occurs, the receiver shall read the remaining message and shall then for each detected Abstract Syntax Error that belong to cases 1-3 act according to the Criticality Information and Presence Information for the IE/IE group due to which Abstract Syntax Error occurred in accordance with subclauses 10.3.4 and 10.3.5. The handling of cases 4 and 5 is specified in subclause 10.3.6.

10.3.2 Criticality Information

In the NBAP messages there is criticality information set for individual IEs and/or IE groups. This criticality information instructs the receiver how to act when receiving an IE or an IE group that is not comprehended, i.e. the entire item (IE or IE group) which is not (fully or partially) comprehended shall be treated in accordance with its own criticality information as specified in subclause 10.3.4.

In addition, the criticality information is used in case of the missing IE/IE group abstract syntax error (see subclause 10.3.5).

The receiving node shall take different actions depending on the value of the Criticality Information. The three possible values of the Criticality Information for an IE/IE group are:

- Reject IE
- Ignore IE and Notify Sender
- Ignore IE

The following rules restrict when a receiving entity may consider an IE, an IE group or an EP not comprehended (not implemented), and when action based on criticality information is applicable:

1. IE or IE group: When one new or modified IE or IE group is implemented for one EP from a standard version, then other new or modified IEs or IE groups specified for that EP in that standard version shall be considered comprehended by the receiving entity (some may still remain unsupported).

Note that this restriction is applicable to a sending entity for constructing messages.

2. EP: The comprehension of different EPs within a standard version or between different standard versions is not mandated. Any EP that is not supported may be considered not comprehended, even if another EP from that standard version is comprehended, and action based on criticality shall be applied.

10.3.3 Presence Information

For many IEs/IE groups which are optional according to the ASN.1 transfer syntax, NBAP specifies separately if the presence of these IEs/IE groups is optional or mandatory with respect to RNS application by means of the presence field of the concerned object of class NBAP-PROTOCOL-IES, NBAP-PROTOCOL-IES-PAIR, NBAP-PROTOCOL-EXTENSION or NBAP-PRIVATE-IES.

The presence field of the indicated classes supports three values:

- 1. Optional;
- 2. Conditional:
- 3. Mandatory.

If an IE/IE group is not included in a received message and the presence of the IE/IE group is mandatory or the presence is conditional and the condition is true according to the version of the specification used by the receiver, an abstract syntax error occurs due to a missing IE/IE group.

If an IE/IE group is included in a received message and the presence of the IE/IE group is conditional and the condition is false according to the version of the specification used by the receiver, an abstract syntax error occurs due to this erroneously present conditional IE/IE group.

10.3.4 Not comprehended IE/IE group

10.3.4.1 Procedure ID

The receiving node shall treat the different types of received criticality information of the *Procedure ID* according to the following:

Reject IE:

- If a message is received with a *Procedure ID* marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall reject the procedure using the Error Indication procedure.

Ignore IE and Notify Sender:

- If a message is received with a *Procedure ID* marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the procedure and initiate the Error Indication procedure.

Ignore IE:

- If a message is received with a *Procedure ID* marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the procedure.

When using the Error Indication procedure to reject a procedure or to report an ignored procedure it shall include the *Procedure ID* IE, the *Triggering Message* IE, and the *Procedure Criticality* IE in the *Criticality Diagnostics* IE.

10.3.4.1A Type of Message

When the receiving node cannot decode the *Type of Message* IE, the Error Indication procedure shall be initiated with an appropriate cause value.

10.3.4.2 IEs Other Than the Procedure ID and Type of Message

The receiving node shall treat the different types of received criticality information of an IE/IE group other than the *Procedure ID* according to the following:

Reject IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the rejection of one or more IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall terminate the procedure and initiate the Error Indication procedure.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Reject IE*" that the receiving node does not comprehend, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and report in the response message of the procedure that one or more IEs/IE groups have been ignored. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report the outcome of the procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and initiate the Error Indication procedure to report that one or more IEs/IE groups have been ignored.
- If a response message is received containing one or more IEs/IE groups marked with "Ignore IE and Notify Sender" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and initiate the Error Indication procedure.

Ignore IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended

IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. In the Information Element Criticality Diagnostics IE the Repetition Number IE shall be included and in addition, if the not comprehended IE/IE group is not at message hierarchy level 1 (top level; see annex C) also the Message Structure IE shall be included.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure ID IE, the Triggering Message IE, Procedure Criticality IE, the Transaction ID IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. In the Information Element Criticality Diagnostics IE the Repetition Number IE shall be included and in addition, if the not comprehended IE/IE group is not at message hierarchy level 1 (top level; see annex C) also the Message Structure IE shall be included.

10.3.5 Missing IE or IE Group

The receiving node shall treat the missing IE/IE group according to the criticality information for the missing IE/IE group in the received message specified in the version of this specification used by the receiver:

Reject IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Reject IE*"; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the missing IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a received message *initiating* a procedure that does not have a message to report unsuccessful outcome is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall terminate the procedure and initiate the Error Indication procedure.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and report in the response message of the procedure that one or more IEs/IE groups were missing. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a received message *initiating* a procedure that does not have a message to report the outcome of the procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

Ignore IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message.

- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs/IE groups are missing and continue with the procedure based on the other IEs/IE groups present in the message.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. In the Information Element Criticality Diagnostics IE the Repetition Number IE shall be included and in addition, if the missing IE/IE group is not at message hierarchy level 1 (top level; see annex C) also the Message Structure IE shall be included.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure ID IE, the Triggering Message IE, Procedure Criticality IE, the Transaction ID IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. In the Information Element Criticality Diagnostics IE the Repetition Number IE shall be included and in addition, if the missing IE/IE group is not at message hierarchy level 1 (top level; see annex C) also the Message Structure IE shall be included.

10.3.6 IEs or IE Groups Received in Wrong Order or With Too Many Occurrences or Erroneously Present

If a message with IEs or IE groups in wrong order or with too many occurrences is received or if IEs or IE groups with a conditional presence are present when the condition is not met (i.e. erroneously present), the receiving node shall behave according to the following:

- If a message *initiating* a procedure is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the cause value "Abstract Syntax Error (Falsely Constructed Message)" using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall terminate the procedure and initiate the Error Indication procedure, and use cause value "Abstract Syntax Error (Falsely Constructed Message)".
- If a *response* message is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

When determining the correct order only the IEs specified in the specification version used by the receiver shall be considered.

10.4 Logical Error

Logical error situations occur when a message is comprehended correctly, but the information contained within the message is not valid (i.e. semantic error), or describes a procedure which is not compatible with the state of the receiver. In these conditions, the following behaviour shall be performed (unless otherwise specified) as defined by the class of the elementary procedure, irrespective of the criticality of the IEs/IE groups containing the erroneous values.

Class 1:

Where the logical error occurs in a request message of a class 1 procedure, and the procedure has a failure message, the failure message shall be sent with an appropriate cause value.

Typical cause values are:

- Protocol Causes:
 - 1. Semantic Error

2. Message not compatible with receiver state

Where the logical error is contained in a request message of a class 1 procedure, and the procedure does not have a failure message, the procedure shall be terminated and the ERROR INDICATION procedure shall be initiated with an appropriate cause value. The *Procedure ID* IE, the *Triggering Message* IE and the *Transaction ID* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

Where the logical error exists in a response message of a class 1 procedure, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.

Class 2:

Where the logical error occurs in a message of a class 2 procedure, the procedure shall be terminated and the ERROR INDICATION procedure shall be initiated with an appropriate cause value. The *Procedure ID* IE, the *Triggering Message* IE and the *Transaction ID* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

10.5 Exceptions

The error handling for all the cases described hereafter shall take precedence over any other error handling described in the other subclause of clause 10.

- If any type of error (Transfer Syntax Error, Abstract Syntax Error or Logical Error) is detected in the ERROR INDICATION message, it shall not trigger the Error Indication procedure in the receiving Node but local error handling.
- In case a response message, failure message or ERROR INDICATION message needs to be returned, but the information necessary to determine the receiver of that message is missing, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.
- If an error that terminates a procedure occurs, the returned cause value shall reflect the error that caused the termination of the procedure even if one or more abstract syntax errors with criticality "ignore and notify" have earlier occurred within the same procedure.

Annex A (normative):

B or

Allocation and Pre-emption of Radio Links in the Node B

A.1 Deriving Allocation Information for a Radio Link

A.1.1 Establishment of a New Radio Link

The Allocation Information for a Radio Link in the case of establishment of a new Radio Link shall be derived as follows:

- The latest received Allocation/Retention Priority IE for each transport channel shall be used.

Note: The *Allocation/Retention Priority* IE for a transport channel may have been received in a) the procedure that establishes the first Radio Link for the Node B Communication Context in the Node

b) a procedure adding or modifying the transport channel.

- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for all transport channels that are intended to use the Radio Link is set to "no priority", the pre-emption capability of the Radio Link shall be set to "shall not trigger pre-emption".
- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for one or more of the transport channels that are intended to use the Radio Link is not set to "no priority", the allocation priority and the pre-emption capability of the Radio Link shall be set according to the following:
 - The transport channels that have the *Priority Level* IE in the *Allocation/Retention Priority* IE set to "no priority" shall be excluded when setting the allocation priority and pre-emption capability of a Radio Link.
 - The allocation priority for a Radio Link shall be set to highest priority level, given by the *Priority Level* IE in the *Allocation/Retention Priority* IE, for all non excluded transport channels that are intended to use the Radio Link.
 - If all non-excluded transport channels that are intended to use a Radio Link to be established have the pre-emption capability, given by the *Pre-emption Capability* IE in the *Allocation/Retention Priority* IE, set to "shall not trigger pre-emption", the pre-emption capability of the Radio Link shall be set to "shall not trigger pre-emption".

If one or more non-excluded transport channels that are intended to use the Radio Link to be established have the value of the *Pre-emption Capability* IE in the *Allocation/Retention Priority* IE set to "may trigger pre-emption", the pre-emption capability of the Radio Link shall be set to "may trigger pre-emption".

The derived allocation priority and pre-emption capability are only valid during this allocation/retention process.

A.1.2 Modification of an Existing Radio Link

The Allocation Information for a Radio Link in the case of modification of a Radio Link (addition or modification of transport channels using the Radio Link) shall be derived as follows:

- The latest received Allocation/Retention Priority IE for each transport channel shall be used.

Note: The *Allocation/Retention Priority* IE for a transport channel may have been received in a) the procedure that establishes the first Radio Link for the Node B Communication Context in the Node

b) a previous procedure adding or modifying the transport channel, or

c) the current procedure adding or modifying the transport channel.

- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for all transport channels to be added or modified in the Radio Link is set to "no priority", the pre-emption capability of the Radio Link to be modified shall be set to "shall not trigger pre-emption".
- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for one or more of the transport channels to be added or modified in the Radio Link is not set to "no priority", the allocation priority of and the pre-emption capability of the Radio Link to be modified shall be set according to the following:
 - The transport channels to be added or modified that have the *Priority Level* IE in the *Allocation/Retention Priority* IE set to "no priority" shall be excluded when setting the allocation priority and pre-emption capability of a Radio Link to be modified.
 - The allocation priority for a Radio Link to be modified shall be set to highest priority level, given by the *Priority Level* IE in the *Allocation/Retention Priority* IE, for all the non-excluded transport channels that are to be added or modified.
 - If all non-excluded transport channels that are to be added or modified in the Radio Link have the preemption capability, given by the *Pre-emption Capability* IE in the *Allocation/Retention Priority* IE, set to "shall not trigger pre-emption", the pre-emption capability of the Radio Link to be modified shall be set to "shall not trigger pre-emption".
 - If one or more of the non-excluded transport channels to be added or modified in the Radio Link have the value of the *Pre-emption Capability* IE in the *Allocation/Retention Priority* IE set to "may trigger pre-emption", the pre-emption capability of the Radio Link to be modified shall be set to "may trigger pre-emption".

The derived allocation priority and pre-emption capability are only valid during this allocation/retention process.

A.2 Deriving Retention Information for a Radio Link

The Retention Information for an existing Radio Link shall be derived as follows:

- The latest received Allocation/Retention Priority IE for each transport channel shall be used.

Note: The *Allocation/Retention Priority* IE for a transport channel may have been received in a) the procedure that establishes the first Radio Link for the Node B Communication Context in the Node

Bor

- b) a procedure adding or modifying the transport channel.
- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for one or more transport channels using the Radio Link is set to "no priority", the pre-emption vulnerability of the Radio Link shall be set to "not pre-emptable".
- If the *Priority Level* IE in the *Allocation/Retention Priority* IE for all the transport channels using the Radio Link is not set to "no priority", the retention priority of the Radio Link and the pre-emption vulnerability of the Radio Link shall be set according to the following:
 - The retention priority for a Radio Link shall be set to highest priority level, given by the *Priority Level* IE in the *Allocation/Retention Priority* IE, for all transport channels that uses the Radio Link.
 - If all transport channels that uses the Radio Link have the pre-emption vulnerability, given by the *Pre-emption Vulnerability* IE in the *Allocation/Retention Priority* IE, set to "pre-emptable", the pre-emption vulnerability of the Radio Link shall be set to "pre-emptable".

 If one or more transport channels that uses the Radio Link have the value of the *Pre-emption Vulnerability* IE in the *Allocation/Retention Priority* IE set to "not pre-emptable", the pre-emption vulnerability of the Radio Link shall be set to "not pre-emptable".

The derived retention priority and pre-emption vulnerability are valid until they are changed, or until the Radio Link is deleted. When new transport channels are added to or deleted from the Radio Link or when existing transport channels are modified with regards to the *Allocation/Retention Priority* IE, the retention information shall be derived again according to above.

A.3 The Allocation/Retention Process

The Node B shall establish or modify the resources for a Radio Link according to:

- The value of the Allocation Information (allocation priority and pre-emption capability) of the Radio Link to be established or modified. The Allocation Information is derived according to clause A.1.
- The value of the Retention Information (retention priority and pre-emption vulnerability) of existing Radio Links. The Retention Information derived according to clause A.2.
- The resource situation in the cell.

Whilst the process and the extent of the pre-emption functionality is operator dependent, the pre-emption indicators (pre-emption capability and pre-emption vulnerability) shall be treated as follows:

- -. If the pre-emption capability for a Radio Link to be established or modified is set to "may trigger preemption" and the resource situation so requires, the Node B may trigger the pre-emption process in clause A.4 to free resources for this allocation request.
- -. If the pre-emption capability for a Radio Link to be established or modified is set to "shall not trigger pre-emption", then this allocation request shall not trigger the pre-emption process in clause A.4.
- -. If the pre-emption vulnerability for an existing Radio Link is set to "pre-emptable", then this Radio Link shall be included in the pre-emption process in clause A.4.
- -. If the pre-emption vulnerability for an existing Radio Link is set to "not pre-emptable", then this Radio Link shall not be included in the pre-emption process in clause A.4.

A.4 The Pre-emption Process

The pre-emption process shall only pre-empt Radio Links with lower retention priority than the allocation priority of the Radio Link to be established or modified. The Radio Links to be pre-empted shall be selected in ascending order of the retention priority.

When the pre-emption process detects that one or more Radio Links have to be pre-empted to free resources for a Radio Link(s) to be established or modified, the Node B shall initiate the Radio Link Pre-emption procedure for all the Node B Communication Contexts having Radio Links selected for pre-emption and start the $T_{Preempt}$ timer.

When enough resources are freed to establish or modify the Radio Link(s) according to the request, the Node B shall stop the $T_{Preempt}$ timer and complete the procedure that triggered the pre-emption process in accordance with the "Successful Operation" subclause of the procedure.

If the T_{Preempt} timer expires, the Node B shall regard the procedure that triggered the pre-emption process as failed and complete the procedure in accordance with the "Unsuccessful Operation" subclause of the procedure.

Annex B (informative): Measurement Reporting

When the *Report Characteristics* IE is set to "Event A" (figure B.1), the Measurement Reporting procedure is initiated when the measured entity rises above the requested threshold and stays there for the requested hysteresis time. If no hysteresis time is given, the value zero shall be used for the hysteresis time.

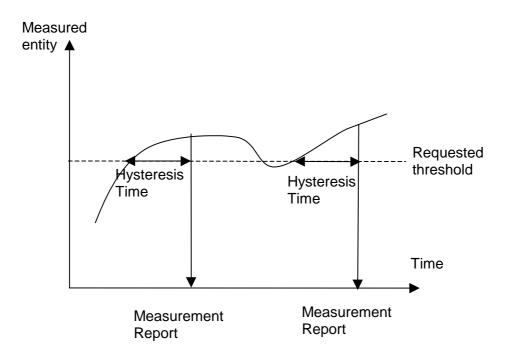


Figure B.1: Event A reporting with Hysteresis Time specified

When the *Report Characteristics* IE is set to "Event B" (figure B.2), the Measurement Reporting procedure is initiated when the measured entity falls below the requested threshold and stays there for the requested hysteresis time. If no hysteresis time is given, the value zero shall be used for the hysteresis time.

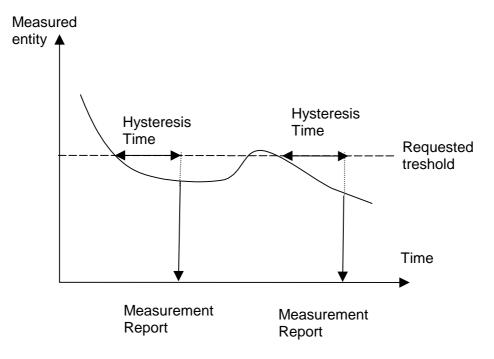


Figure B.2: Event B reporting with Hysteresis Time specified

When the *Report Characteristics* IE is set to "Event C" (figure B.3), the Measurement Reporting procedure is initiated always when the measured entity rises by an amount greater than the requested threshold within the requested time. The reporting in figure B.3 is initiated if the Rising Time T1 is less than the requested time.

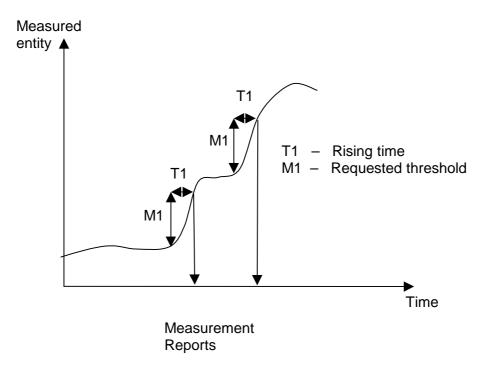


Figure B.3: Event C reporting

When the *Report Characteristics* IE is set to "Event D" (figure B.4), the Measurement Reporting procedure is initiated always when the measured entity falls by an amount greater than the requested threshold within the requested time. The reporting in figure B.4 is initiated if the Falling Time T1 is less than the requested time.

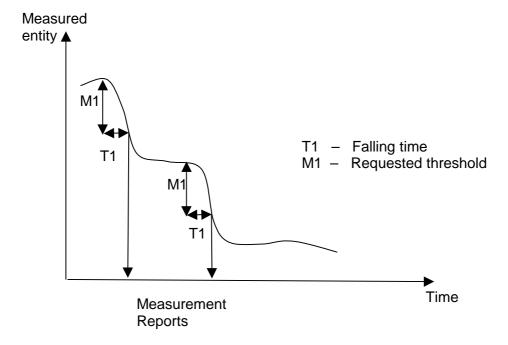


Figure B.4: Event D reporting

When the *Report Characteristics* IE is set to "Event E" (figure B.5), the Measurement Reporting procedure (Report A) is initiated always when the measured entity rises above the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (T1 in figure B.5). If *Report Periodicity* IE is provided Node B shall also initiate Measurement Reporting procedure periodically. The periodic reporting continues although the measured entity falls below the 'Measurement Threshold 1' and is terminated by the Report B.

When the Report A conditions have been met and the measured entity falls below the 'Measurement Threshold 2' and stays there for the 'Measurement Hysteresis Time' (T1) Measurement Reporting procedure (Report B) is initiated and the periodic reporting is terminated.


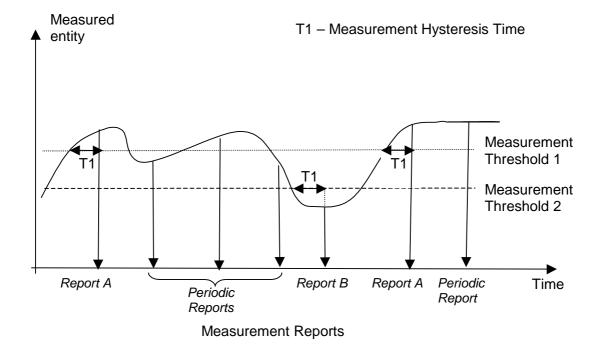


Figure B.5: Event E reporting with Hysteresis Time specified and Periodic Reporting requested

When the *Report Characteristics* IE is set to "Event F" (figure B.6), the Measurement Reporting procedure (Report A) is initiated always when the measured entity falls below the 'Measurement Threshold 1' and stays there for the 'Measurement Hysteresis Time' (T1 in figure B.6). If *Report Periodicity* IE is provided Node B shall also initiate Measurement Reporting procedure periodically. The periodic reporting continues although the measured entity rises above the 'Measurement Threshold 1' and is terminated by the Report B.

When the Report A conditions have been met and the measured entity rises above the 'Measurement Threshold 2' and stays there for the 'Measurement Hysteresis Time' (T1) Measurement Reporting procedure (Report B) is initiated and the periodic reporting is terminated.

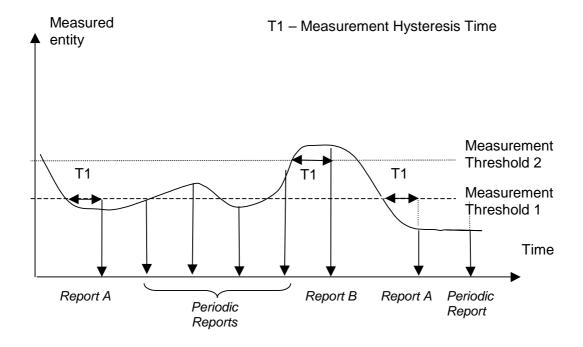

Measurement Reports

Figure B.6: Event F reporting with Hysteresis Time specified and Periodic Reporting requested

Annex C (informative): Guidelines for Usage of the Criticality Diagnostics IE

C.1 EXAMPLE MESSAGE Layout

Assume the following message format:

IE/Group Name	Presence	Range	IE Type and Referenc e	Semantics Description	Criticality	Assigned Criticality
Message Type	М		_		YES	reject
Transaction ID	М				_	
A	M				YES	reject
В	М				YES	reject
>E		1 <maxe></maxe>			EACH	ignore
>>F		1 <maxf></maxf>			_	
>>>G		03,			EACH	ignore
>>H		1 <maxh></maxh>			EACH	ignore
>>>G		03,			EACH	ignore and notify
>>G	M				YES	reject
>>J		1 <maxj></maxj>			_	
>>>G		03,			EACH	reject
С	M				YES	reject
>K		1 <maxk></maxk>			EACH	ignore and notify
>>L		1 <maxl></maxl>			_	
>>>M	0				_	
D	М				YES	reject

Note 1. The IEs F, J, and L do not have assigned criticality. The IEs F, J, and L are consequently realised as the ASN.1 type SEQUENCE OF of "ordinary" ASN.1 type, e.g. INTEGER. On the other hand, the repeatable IEs with assigned criticality are realised as the ASN.1 type SEQUENCE OF of an IE object, e.g. ProtocolIE-Single-Container.

For the corresponding ASN.1 layout, see subclause C.4.

C.2 Example on a Received EXAMPLE MESSAGE

Assume further more that a received message based on the above tabular format is according to the figure below.


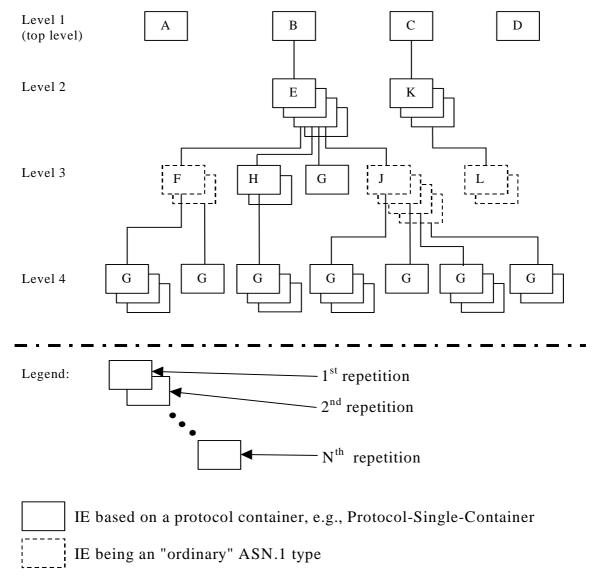


Figure C.1: Example of content of a received NBAP message based on the EXAMPLE MESSAGE

C.3 Content of Criticality Diagnostics

C.3.1 Example 1

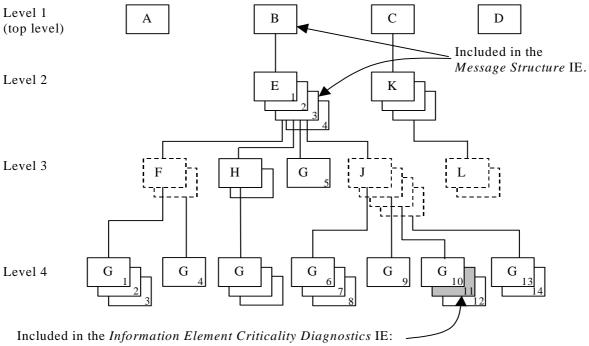

- a) IE ID IE
- b) Repetition Number IE


Figure C.2: Example of a received NBAP message containing a not comprehended IE

If there is an error within the instance marked as grey in the IE G in the IE J shown in the figure C.2 above, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE as follows:

IE name	Value	Comment
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 4.
IE ID	id-G	IE ID from the reported level, i.e. level 4.
Repetition	11	Repetition number on the reported level, i.e. level 4.
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure IE this is
		the eleventh occurrence of IE G within the IE E (level 2).
Type of Error	not	
	underst	
	ood	
Message Structur	e, first repe	etition
>IE ID	id-B	IE ID from level 1.
Message Structur	e, second	repetition
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.
Number		

- Note 2. The IE J on level 3 cannot be included in the *Message Structure* IE since they have no criticality of their own.
- Note 3. The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

C.3.2 Example 2

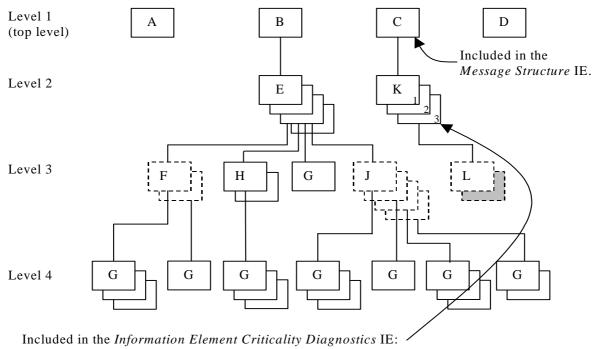

- a) IE ID IE
- b) Repetition Number IE


Figure C.3: Example of a received NBAP message containing a not comprehended IE

If there is an error within the second instance (marked as grey) in the sequence (IE L in the tabular format) on level 3 below IE K in the structure shown in the figure C.3 above, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE as follows:

IE name	Value	Comment	
IE Criticality	ignore and notify	Criticality for IE on the reported level, i.e. level 2.	
IE ID	id-K	IE ID from the reported level, i.e. level 2.	
Repetition Number	3	Repetition number on the reported level, i.e. level 2.	
Type of Error	not underst ood		
Message Structu	ıre, first rep	etition	
>IE ID	id-C	IE ID from the lowest level above the reported level, i.e. level 1.	

Note 4. The IE L on level 3 cannot be reported individually included in the *Message Structure* IE since it has no criticality of its own.

C.3.3 Example 3

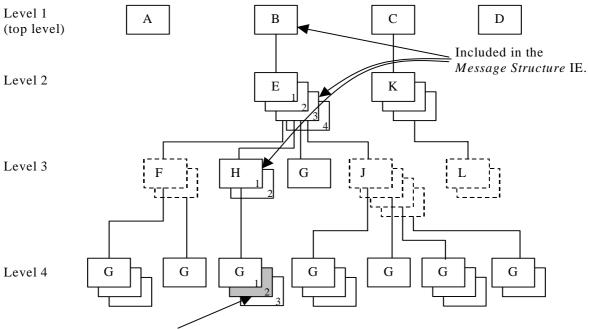

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE


Figure C.4: Example of a received NBAP message containing a not comprehended IE

If there is an error within the instance marked as grey in the IE G in the IE H shown in the figure C.4 above, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE as follows:

IE name	Value	Comment
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 4.
IE ID	id-G	IE ID from the reported level, i.e. level 4.
Repetition	2	Repetition number on the reported level, i.e. level 4.
Number		
Type of Error	not	
	underst	
	ood	
Message Structur	e, first repe	etition
>IE ID	id-B	IE ID from level 1.
Message Structur	e, second	repetition
>IE ID	id-E	IE ID from level 2.
>Repetition	3	Repetition number from level 2.
Number		
Message Structur	e, third rep	petition
>IE ID	id-H	IE ID from the lowest level above the reported level, i.e. level 3.
>Repetition	1	Repetition number from the lowest level above the reported level, i.e. level 3.
Number		

Note 5. The repetition number of level 4 indicates the number of repetitions of IE G received up to the detected erroneous repetition, counted below the same instance of the previous level with assigned criticality (instance 1 of IE H on level 3).

C.3.4 Example 4

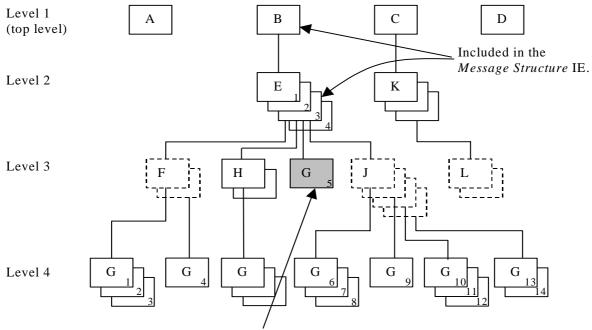

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE


Figure C.5: Example of a received NBAP message containing a not comprehended IE

If there is an error within the instance marked as grey in the IE G in the IE E shown in the figure C.5 above, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE as follows:

IE name	Value	Comment
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 3.
IE ID	id-G	IE ID from the reported level, i.e. level 3.
Repetition	5	Repetition number on the reported level, i.e. level 3.
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure IE this is
		the fifth occurrence of IE G within the IE E (level 2).
Type of Error	not	
	underst	
	ood	
Message Structur	e, first rep	etition
>IE ID	id-B	IE ID from level 1.
Message Structur	e, second	repetition
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.
Number		

Note 6. The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

C.3.5 Example 5

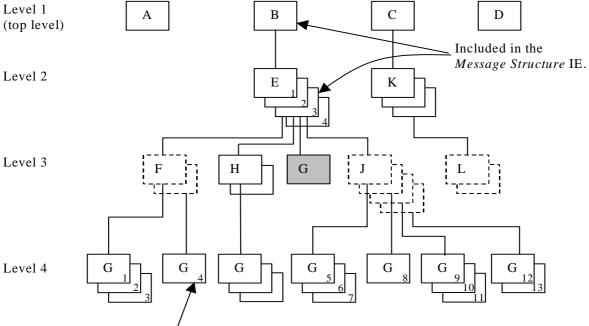

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure C.6: Example of a received NBAP message with a missing IE

If the instance marked as grey in the IE G in the IE E shown in the figure C.6 above, is missing this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE as follows:

IE name	Value	Comment				
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 3.				
IE ID	id-G	IE ID from the reported level, i.e. level 3.				
Repetition Number	4	Repetition number up to the missing IE on the reported level, i.e. level 3. (Since the IE E (level 2) is the lowest level included in the <i>Message Structure</i> IE there have been four occurrences of IE G within the IE E (level 2) up to the missing occurrence.				
Type of Error Message Structur	Type of Error missing Message Structure, first repetition					
>IE ID	id-B	IE ID from level 1.				
Message Structure, second repetition						
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.				
>Repetition Number	3	Repetition number from the lowest level above the reported level, i.e. level 2.				

Note 7. The repetition number of the reported IE indicates the number of repetitions of IE G received up to but not including the missing occurrence, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

C.4 ASN.1 of EXAMPLE MESSAGE

```
ExampleMessage ::= SEQUENCE {
    ProtocolIEs
                       ProtocolIE-Container
                                                       {{ExampleMessage-IEs}},
    ProtocolExtensions ProtocolExtensionContainer {{ExampleMessage-Extensions}}
                                                                                        OPTIONAL.
}
ExampleMessage-IEs NBAP-PROTOCOL-IES ::= {
    { ID id-A CRITICALITY reject TYPE A PRESENCE mandatory} | { ID id-B CRITICALITY reject TYPE B PRESENCE mandatory} | { ID id-C CRITICALITY reject TYPE C PRESENCE mandatory} | { ID id-D CRITICALITY reject TYPE D PRESENCE mandatory} ,
}
B ::= SEQUENCE {
                     E-List,
    iE-Extensions ProtocolExtensionContainer { {B-ExtIEs} } OPTIONAL,
B-ExtIES NBAP-PROTOCOL-EXTENSION ::= {
E-List ::= SEQUENCE (SIZE (1..maxE)) OF ProtocolIE-Single-Container { {E-IEs} }
E-IES NBAP-PROTOCOL-IES ::= {
   { ID id-E CRITICALITY ignore TYPE E PRESENCE mandatory }
E ::= SEQUENCE {
                     F-List,
    h
                    H-List,
    g
                    G-List1,
                    J-List,
    iE-Extensions ProtocolExtensionContainer { {E-ExtIEs} } OPTIONAL,
}
E-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
}
F-List ::= SEQUENCE (SIZE (1..maxF)) OF F
F ::= SEQUENCE {
                     G-List2 OPTIONAL.
    iE-Extensions ProtocolExtensionContainer { {F-ExtIEs} } OPTIONAL,
F-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
G-List2 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { G2-IEs} }
G2-IES NBAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY ignore TYPE G PRESENCE mandatory }
H-List ::= SEQUENCE (SIZE (1..maxH)) OF ProtocolIE-Single-Container { {H-IEs} }
H-IES NBAP-PROTOCOL-IES ::= {
    H ::= SEQUENCE {
                     G-List3 OPTIONAL,
                                      ProtocolExtensionContainer { {H-ExtIEs} } OPTIONAL,
    iE\text{-}Extensions
H-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
```

```
G-List3 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container \{ \{G3\text{-}IEs\} \}
G3-IES NBAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY notify TYPE G PRESENCE mandatory }
G-List1 ::= ProtocolIE-Single-Container { G1-IEs} }
G1-IEs NBAP-PROTOCOL-IES ::= {
    J-List ::= SEQUENCE (SIZE (1..maxJ)) OF J
J ::= SEQUENCE {
                   G-List4 OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {J-ExtIEs} } OPTIONAL,
J-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
G-List4 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { G4-IEs} }
G4-IES NBAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY reject TYPE G PRESENCE mandatory }
C ::= SEQUENCE {
   k
                   K-List,
    iE-Extensions ProtocolExtensionContainer { {C-ExtIEs} } OPTIONAL,
C-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
K-List ::= SEQUENCE (SIZE (1..maxK)) OF ProtocolIE-Single-Container { {K-IEs} }
K-IES NBAP-PROTOCOL-IES ::= {
   { ID id-K CRITICALITY notify TYPE K PRESENCE mandatory }
K ::= SEQUENCE {
                   L-List,
    \begin{tabular}{ll} \hline iE-ExtensionS & ProtocolExtensionContainer $\{ \ \{K-ExtIEs\} \ \}$ & OPTIONAL, \\ \hline \end{tabular}
K-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
L-List ::= SEQUENCE (SIZE (1..maxL)) OF L
L ::= SEQUENCE {
                   M OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {L-ExtIEs} } OPTIONAL,
L-ExtIEs NBAP-PROTOCOL-EXTENSION ::= {
ExampleMessage-Extensions NBAP-PROTOCOL-EXTENSION ::= {
```

Annex D (informative): Change history

	1				ge history
TSG RAN#	Version	CR	Tdoc RAN	New Version	Subject/Comment
RAN_06	-	-	RP-99764	3.0.0	Approved at TSG RAN #6 and placed under Change Control
RAN_07	3.0.0	-	-	3.1.0	Approved at TSG RAN #7
RAN_08	3.1.0	-	RP-000250	3.2.0	Approved at TSG RAN #8
RAN_08	3.1.0	-	RP-000251	3.2.0	Approved at TSG RAN #8
RAN_08	3.1.0	-	RP-000252	3.2.0	Approved at TSG RAN #8
RAN_08	3.1.0	-	RP-000253	3.2.0	Approved at TSG RAN #8
RAN_09	3.2.0	165 168- 170, 173- 178, 180- 189	RP-000386	3.3.0	Approved at TSG RAN #9
RAN_09	3.2.0	190- 200, 203 205 207 208 211 214 218- 219	RP-000387	3.3.0	Approved at TSG RAN #9
RAN_09	3.2.0	221 222 224- 228 233 244, 246	RP-000388	3.3.0	Approved at TSG RAN #9
RAN_09	3.2.0	247- 248	RP-000389	3.3.0	Approved at TSG RAN #9
RAN_10	3.3.0	250- 324	RP-000627 RP-000628 RP-000630 RP-000697	3.4.0	Approved at TSG RAN #10
RAN_10	3.4.0			3.4.1	Correct of headers
RAN_11	3.4.1	325- 330, 333- 336, 339- 342, 344, 346- 348, 350- 356, 365, 367- 371, 377- 379, 383, 385- 386, 386, 388	RP-010125 RP-010126	3.5.0	Approved at TSG RAN #11

RP-010160 RP-010166 RP-010169 RP-010167 RP-010383 RP-010384 RP-010385	387 361 372, 374, 381 358, 359 362 390, 392, 394, 406, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0 4.0.0	4.0.0 4.0.0 4.0.0 4.0.0 4.0.0 4.1.0 4.1.0
RP-010166 RP-010159 RP-010164 RP-010167 RP-010383 RP-010384	387 361 372, 374, 381 358, 359 362 390, 392, 394, 406, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.0.0 4.0.0 4.0.0 4.1.0 4.1.0
RP-010159 RP-010164 RP-010167 RP-010383 RP-010384	361 372, 374, 381 358, 359 362 390, 392, 394, 396, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467, 413, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.0.0 4.0.0 4.1.0 4.1.0
RP-010159 RP-010164 RP-010167 RP-010383 RP-010384	372, 374, 381 358, 359 362 390, 392, 394, 396, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 464, 467, 467, 468, 469, 469, 469, 469, 469, 469, 469, 469		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.0.0 4.0.0 4.1.0 4.1.0
RP-010164 RP-010167 RP-010383 RP-010384	374, 381 358, 359 362 390, 392, 394, 396, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.1.0 4.1.0 4.1.0
RP-010167 RP-010383 RP-010384	358, 359 362 390, 392, 394, 396, 398, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.0.0 4.1.0 4.1.0
RP-010167 RP-010383 RP-010384	359 362 390, 392, 394, 396, 398, 400, 402, 404, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #11 and placed under Change Control Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.0.0 4.1.0 4.1.0
RP-010383	362 390, 392, 394, 396, 398, 400, 402, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.1.0
RP-010383	390, 392, 394, 396, 398, 400, 402, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12 Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.1.0
RP-010384	392, 394, 396, 398, 400, 402, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416,		Approved at TSG RAN #12 Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	394, 396, 398, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	396, 398, 400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	400, 402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467, 413, 414, 415, 416,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	402, 404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	404, 406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	406 412, 416, 421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010385	412, 416, 421, 423, 427, 431, 433, 437, 449, 456, 462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
	421, 423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	423, 427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	427, 431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	431, 433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	433, 437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	437, 439, 441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	441 449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	449, 456, 462, 464, 467 413, 414, 415, 416, 417,				
	456, 462, 464, 467 413, 414, 415, 416, 417,				
RP-010396	462, 464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010396	464, 467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010396	467 413, 414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
RP-010396	414, 415, 416, 417,		Approved at TSG RAN #12	4.0.0	4.1.0
	415, 416, 417,				
	416, 417,				
	417,				
					1
	418,				
1	419,				
	450,				
	451,				
	452, 453,				
	454,				
	465				
RP-010587		2	Ambiguity in CM handling	4.1.0	4.2.0
RP-010587			Correction to Information Block Deletion	4.1.0	4.2.0
RP-010587		4	Clarification of the AICH power	4.1.0	4.2.0
		1			4.2.0
KP-010587	481	1			4.2.0 4.2.0
RP-010587	484	1		7.1.0	7.2.0
1 510001	1	1	Correction to the Error handling of the ERROR INDICATION	4.1.0	4.2.0
		1	message		
			Correct max Codes discrepancy between tabular and ASN.1	4.1.0	4.2.0
		1		4.1.0	4.2.0
		1			4.2.0
		1			4.2.0
		1			4.2.0 4.2.0
		1			4.2.0
		<u> </u>			4.2.0
		1		4.1.0	4.2.0
			Correction of implementation of RAN#12 CRs	4.1.0	4.2.0
RP-010588	521		TDD Channelisation code range definition	4.1.0	4.2.0
	524	1	Clarification of chapter 10	4.1.0	4.2.0
			Clarification of use of Diversity Control Indicator	4.1.0	4.2.0
RP-010588	1 =	3		4.1.0	4.2.0
RP-010588	528			4.1.0	4.2.0
RP-010588 RP-010588		2	Allowed Combinations of Dedicated Measurement Type and the Reporting Characteristics Type	1	
	RP-010587 RP-010587 RP-010587 RP-010587 RP-010587 RP-010587 RP-010588	RP-010587 479 RP-010587 481 RP-010587 484 RP-010587 485 RP-010587 486 RP-010587 486 RP-010587 491 RP-010588 500 RP-010588 507 RP-010588 507 RP-010588 513 RP-010588 513 RP-010588 517 RP-010588 519 RP-010588 521 RP-010588 524 RP-010588 526 RP-010588 528	RP-010587 479 1 RP-010587 481 1 RP-010587 484 1 RP-010587 485 1 RP-010587 486 RP-010587 488 RP-010587 491 1 RP-010588 500 1 RP-010588 504 RP-010588 507 1 RP-010588 513 RP-010588 517 RP-010588 519 RP-010588 521 RP-010588 521 RP-010588 524 1 RP-010588 526	RP-010587 479 1 Transport bearer replacement clarification RP-010587 481 1 Corrections to the PDSCH Code Mapping IE Correction to the handling of DL Code Information in RL RP-010587 484 1 Reconfiguration procedures Correction to the Error handling of the ERROR INDICATION message RP-010587 485 1 message RP-010587 486 Correct max Codes discrepancy between tabular and ASN.1 RP-010587 488 S-CCPCH Corrections for TDD RP-010587 491 1 Nbap criticality RP-010588 500 1 Clarification of Abnormal Conditions/Unsuccessful Operation RP-010588 504 Error handling of erroneously present conditional IEs RP-010588 507 1 Correction for maxNrOfCPCHs RP-010588 509 1 Correction for N_EOT RP-010588 513 Bitstrings ordering RP-010588 517 Mapping of TFCS to TFCI RP-010588 521 TDD Channelisation code range definition RP-010588 524 1 Clarification of use of Diversity Control Indicator RP-010588 528 3 Clarification of Coordinated DCHs Allowed Combinations of Dedicated Measurement Type and the	RP-010587 479 1 Transport bearer replacement clarification 4.1.0 RP-010587 481 1 Corrections to the PDSCH Code Mapping IE 4.1.0 RP-010587 484 1 Reconfiguration procedures 4.1.0 RP-010587 485 1 Reconfiguration procedures 4.1.0 RP-010587 486 Correction to the Error handling of the ERROR INDICATION message 4.1.0 RP-010587 488 S-CCPCH Corrections for TDD 4.1.0 RP-010587 491 1 Nbap criticality 4.1.0 RP-010588 500 1 Clarification of Abnormal Conditions/Unsuccessful Operation 4.1.0 RP-010588 507 1 Correction for maxNrOfCPCHs 4.1.0 RP-010588 509 1 Correction for maxNrOfCPCHs 4.1.0 RP-010588 513 Bitstrings ordering 4.1.0 RP-010588 517 Mapping of TFCS to TFCI 4.1.0 RP-010588 521 TDD Channelisation code range definition 4.1.0 RP-010588 524 1 Clarification of code range definition 4.1.0 RP-010588 528 3 Clarification of coordinated DCHs 4.1

192001 13 RP-010599 475 Correction on IRAP function 4.1.0 4.2.0	00/2004	12	DD 040500	472	I	DDC Made in Radio Link Addition precedure	110	120
192001 13 RP-010599 498 1 Astina protocol container in CHOICE type IE	09/2001	13				DPC Mode in Radio Link Addition procedure	4.1.0	4.2.0
1982001 13 RP-010599 501 1 Clarification of Abnormal Conditions/University (1) 42.0					1			
1982001 33 RP-010599 515 1 Corrections to position reporting 4.1.0 4.2.0								
RP-010599 518 2 RP-010599 522 1 Clarification on the Time Stot LCR					-			
RP-010699 518 2 measurement for 1 28Mcps TDD			141 010000	0.0				
1992001 13 RP-010599 522 Clarification on the Time Slot LCR	00/2001		RP-010599	518	2			
12/2001 14 RP-010897 530 2 CR on Priority range 4.2.1 4.3.0	09/2001	13					4.1.0	4.2.0
12/2001 14 RP-010897 530 2 CR on Priority range 4.2.1 4.3.0	10/2001	-	-	-	-	Editorial correction to correct the header	4.2.0	4.2.1
12/2001 14 RP-010862 536 Semantics Description in IEs in IRBA messages 4.2.1 4.3.0	12/2001	14	RP-010897	530	2		4.2.1	4.3.0
RP-010862 536 Semantics Description in Its in NBAP messages RP-010862 538 Alignment to RANA spec for Transmitted Code Power 4.2.1 4.3.0	12/2001	14	RP-010862	534		Bitstrings ordering	4.2.1	4.3.0
12/2001 14 RP-010862 538 Alignment to RANAI spec for Transmitted Code Power 4.2.1 4.3.0 12/2001 14 RP-010862 549 Correction the Clause 10 Error Handling 4.2.1 4.3.0 12/2001 14 RP-010862 542 Calification of Trich Ordering in TFCS 4.2.1 4.3.0 12/2001 14 RP-010862 544 Addition of ISIB15.4 and SIB18 to labular 4.2.1 4.3.0 12/2001 14 RP-010862 559 Transmit Diversity for TDD 4.2.1 4.3.0 12/2001 14 RP-010862 559 Transmit Diversity for TDD 4.2.1 4.3.0 12/2001 14 RP-010863 565 Re-01083 566 Re-01083 567 Re-010863 56	12/2001	14				Added UTRAN modes in the IE Type and Reference and	4.2.1	4.3.0
RP-010862 538 Measurement			RP-010862	536				
12/2001 14 RP-010862 540 Correction the Clause 10 Error Handling 4.2.1 4.3.0 12/2001 14 RP-010862 542 Calification of Trich Ordering in TFCS 4.2.1 4.3.0 12/2001 14 RP-010862 544 Addition of SIB15.4 and SIB18 to tabular 4.2.1 4.3.0 12/2001 14 RP-010862 552 Calification of the definition of the ASN.1 constants 4.2.1 4.3.0 12/2001 14 RP-010862 552 Calification for the definition of the ASN.1 constants 4.2.1 4.3.0 12/2001 14 RP-010863 560 I Rel-4 specific terminology corrections 4.2.1 4.3.0 12/2001 14 RP-010863 560 I Rel-4 specific terminology corrections 4.2.1 4.3.0 12/2001 14 RP-010863 565 Contract Code Chiticality in Error Indication 4.2.1 4.3.0 12/2001 14 RP-010863 567 Foreward Compatibility for DI- Power Adjustment Type IE in the DI- POWER 4.2.1 4.3.0 12/2001 14 RP-010863 567 Foreward Compatibility for DI- Power Balancing 4.2.1 4.3.0 12/2001 14 RP-010863 567 Reconfiguration clarification 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Power Adjustment Type IE in the DI- POWER 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010863 577 Calification of the Transaction 4.2.1 4.3.0 12/2001 14 RP-010864 580	12/2001	14					4.2.1	4.3.0
12/2001 14								
12/2001 14								
12/2001 14								
12/2001 14								
12/2001 14								
12/2001 14 RP-010863 560 Rel-4 specific terminology corrections								
12/2001 14 RP-010863 562 Procedure Code Criticality in Error Indication 4.2.1 4.3.0					-			
12/2001 14 RP-010863 565 Contribution for the Power Adjustment Type IE in the DL POWER 4.2.1 4.3.0					1			
RP-010863 565 CONTROL REQUEST message			KP-010863	562				
12/2001 14	12/2001	14	DD 040063	EGE		CONTROL REQUEST massage	4.2.1	4.3.0
12/2001 14	12/2001	14			1		121	120
12/2001 14					ı			
12/2001 14 RP-010863 575 2 Transport Bearer replacement clarification for the DSCH case 4.2.1 4.3.0 12/2001 14 RP-010863 579 1 CPCH-related corrections 4.2.1 4.3.0 12/2001 14 RP-010863 579 1 CPCH-related corrections 4.2.1 4.3.0 12/2001 14 RP-010863 582 Correction of Sfield length 4.2.1 4.3.0 12/2001 14 RP-010874 546 1 Correction of drift rate resolution 4.2.1 4.3.0 12/2001 14 RP-010874 546 1 Correction of drift rate resolution 4.2.1 4.3.0 12/2001 14 RP-010874 547 Cell Parameter ID IE definition for 1.28Mcps TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 message for LCR TDD 4.2.1 4.3.0 12/2001 14 RP-010874 580 2 SFN-SFN Quality indication 4.2.1 4.3.0 12/2001 15 RP-020174 580 Correction to SFN-SFN Observed Time Difference Measurement 4.2.1 4.3.0 12/2002 15 RP-020174 591 ASNL SML SML					2	Addition of amandment to clarify the DED anading of hitetrings		
12/2001 14 RP-010863 577 Clarification of the Transaction ID 4.2.1 4.3.0						Transport Poorer replacement elerification for the DSCH ages		
12/2001 14 RP-010863 579 1 CPCH-related corrections 4.2.1 4.3.0 12/2001 14 RP-010874 582 Correction of Sield length 4.2.1 4.3.0 12/2001 14 RP-010874 546 1 Correction of Sield length 4.2.1 4.3.0 12/2001 14 RP-010874 546 1 Correction of Sield length 4.2.1 4.3.0 12/2001 14 RP-010874 548 Cell Parameter ID IE definition for 1.28Mcps TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 message for LCR TDD 4.2.1 4.3.0 12/2001 14 RP-010912 545 n Amendment of the RADIO LINK ADDITION RESPONSE TDD 4.2.1 4.3.0 12/2001 14 RP-010912 545 n Correction to SFN-SFN Observed Time Difference Measurement 4.2.1 4.3.0 03/2002 15 RP-020174 591 1 ASN.1 ASN.1 Associal Shared Channel TDD Procedure definition in 4.2.1								
12/2001 14 RP-010863 582 Correction of S field length 4.2.1 4.3.0 12/2001 14 RP-010874 546 1 Correction of drift rate resolution 4.2.1 4.3.0 12/2001 14 RP-010874 547 Cell Parameter ID IE definition for 1.28Mcps TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 RP-010874 548 Amendment of the RADIO LINK ADDITION RESPONSE TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 Amendment of the RADIO LINK ADDITION RESPONSE TDD 4.2.1 4.3.0 12/2001 14 RP-010874 580 2 SFN-SFN quality indication 4.2.1 4.3.0 12/2001 14 RP-010874 548 Correction to SFN-SFN Observed Time Difference Measurement 4.2.1 4.3.0 12/2001 15 RP-020174 591 1 ASN.1 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 15 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 16 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 16 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 17 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 18 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 19 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 10 RP-020174 593 Incorrect Physical Shared Channel TDD Proc					1			
12/2001 14 RP-010874 546 1 Correction of drift rate resolution 4.2.1 4.3.0 12/2001 14 RP-010874 547 Cell Parameter ID IE definition for 1.28Mcps TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 RP-010874 548 RP-010874 548 RP-010874 548 RP-010874 549 Amendment of the RADIO LINK ADDITION RESPONSE TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 RP-010874 548 RP-010874 549 Correction to SFN-SFN Quality indication 4.2.1 4.3.0 12/2001 14 RP-010912 545 RP-020174 591 ASN.1 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 03/2002 15 RP-020174 593 Incorrect Physical Shared Channel TDD Procedure definition in 4.3.0 4.4.0 03/2002 15 RP-020174 600 Clarification to measurement unit at Higher Layer Filtering 4.3.0 4.4.0 03/2002 15 RP-020174 605 Correction to Physical channels which SCTD can be applied (lub) 4.3.0 4.4.0 03/2002 15 RP-020182 585 Correction to UE position measurements quality and threshold information 03/2002 15 RP-020182 586 Correction to UE position measurements quality and threshold information 03/2002 15 RP-020182 587 Correction to UE position measurements change and deviation limit 4.3.0 4.4.0 03/2002 15 RP-020182 601 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 609 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 601 Modification REQUEST message RP-020182 601 RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 601 RP-020183 602 RP-020183 603					<u>'</u>			
12/2001 14 RP-010874 547 Cell Parameter ID IE definition for 1.28Mcps TDD 4.2.1 4.3.0 12/2001 14 RP-010874 548 Amendment of the RADIO LINK ADDITION RESPONSE TDD 4.2.1 4.3.0 12/2001 14 RP-010874 580 2 SFN-SFN quality indication 4.2.1 4.3.0 12/2001 14 RP-010912 545 1 Correction to SFN-SFN Observed Time Difference Measurement report mapping 4.2.1 4.3.0 03/2002 15 RP-020174 591 1 ASN.1 1 ASN.1 4.2.1 4.3.0 4.4.0 03/2002 15 RP-020174 593 Removal of criticality information for Transaction ID in the ERROR INDICATION message 4.3.0 4.4.0 03/2002 15 RP-020174 605 Removal of criticality information for Transaction ID in the ERROR INDICATION message 4.3.0 4.4.0 03/2002 15 RP-020174 605 Correction to the Limited Power Increase in Synchronised Radio Indication From the Recompliance in Synchronised Radio Indication Propagation Propagation Propagation Propagation Propagation Propagation Prop					1			
12/2001 14					'			
RP-010874 548 message for LCR TDD			141 010074	0-17				
12/2001 14 RP-010874 580 2 SFN-SFN quality indication 4.2.1 4.3.0 12/2001 14 RP-010912 545 1 Correction to SFN-SFN Observed Time Difference Measurement report mapping 4.2.1 4.3.0 03/2002 15 RP-020174 591 1 ASN.1 03/2002 15 RP-020174 591 1 ASN.1 03/2002 15 RP-020174 591 1 ASN.1 03/2002 15 RP-020174 600 Clarification to measurement unit at Higher Layer Filtering. 4.3.0 4.4.0 03/2002 15 RP-020174 603 Correction to measurement unit at Higher Layer Filtering. 4.3.0 4.4.0 03/2002 15 RP-020174 663 1 Correction to the Limited Power Increase in Synchronised Radio Link Reconfiguration Preparation 4.3.0 4.4.0 03/2002 15 RP-020182 586 1 Correction to UE position weasurements which SCTD can be applied (lub) 4.3.0 4.4.0 03/2002 15 RP-	12/2001		RP-010874	548			7.2.1	4.0.0
12/2001 14	12/2001	14			2		4.2.1	4.3.0
15	12/2001	14					4.2.1	
RP-020174 591 1 ASN.1 RP-020174 593 RP-020174 593 RP-020174 593 RP-020174 593 RP-020174 593 RP-020174 593 INDICATION message (A.3.0 4.4.0 30/2002 15 RP-020174 605 Correction of the Limited Power Increase in Synchronised Radio RP-020174 605 Link Reconfiguration Preparation (A.3.0 4.4.0 4.4.0 (A.3.0 4.4.0			RP-010912	545	1	report mapping		
15	03/2002	15					4.3.0	4.4.0
RP-020174 593 INDICATION message			RP-020174	591	1			
03/2002 15 RP-020174 600 Clarification to measurement unit at Higher Layer Filtering. 4.3.0 4.4.0 03/2002 15 RP-020174 605 Correction of the Limited Power Increase in Synchronised Radio Link Reconfiguration Preparation 4.3.0 4.4.0 03/2002 15 RP-020174 623 1 Correction to physical channels which SCTD can be applied (lub) 4.3.0 4.4.0 03/2002 15 RP-020182 585 1 Corrections to the Information Exchange Initiation procedure 4.3.0 4.4.0 03/2002 15 RP-020182 586 1 Correction to UE position measurements quality and threshold information 4.3.0 4.4.0 03/2002 15 RP-020182 587 1 Correction to UE position measurements change and deviation limit formulas 4.3.0 4.4.0 03/2002 15 RP-020182 601 1 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 <td< td=""><td>03/2002</td><td>15</td><td></td><td></td><td></td><td></td><td>4.3.0</td><td>4.4.0</td></td<>	03/2002	15					4.3.0	4.4.0
15						U U		
RP-020174 605 Link Reconfiguration Preparation 303/2002 15 RP-020174 623 1 Correction to physical channels which SCTD can be applied (lub) 4.3.0 4.4.0 3.0 3.0 3.2002 15 RP-020182 585 1 Corrections to the Information Exchange Initiation procedure 4.3.0 4.4.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0 3.0			RP-020174	600				
03/2002 15 RP-020174 623 1 Correction to physical channels which SCTD can be applied (lub) 4.3.0 4.4.0 03/2002 15 RP-020182 585 1 Corrections to the Information Exchange Initiation procedure 4.3.0 4.4.0 03/2002 15 RP-020182 586 1 Correction to UE position measurements quality and threshold information 4.3.0 4.4.0 03/2002 15 RP-020182 587 1 Correction to UE position measurements change and deviation limit formulas 4.3.0 4.4.0 03/2002 15 RP-020182 601 1 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2	03/2002	15	DD 000474	005			4.3.0	4.4.0
03/2002 15 RP-020182 585 1 Corrections to the Information Exchange Initiation procedure 4.3.0 4.4.0 03/2002 15 RP-020182 586 1 Correction to UE position measurements quality and threshold information 4.3.0 4.4.0 03/2002 15 RP-020182 587 1 Correction to UE position measurements change and deviation limit formulas 4.3.0 4.4.0 03/2002 15 RP-020182 601 1 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020188	00/0000	4.5			_		400	1.1.0
15					1			
Information	03/2002	15	RP-020182	585	1	Corrections to the Information Exchange Initiation procedure	4.3.0	4.4.0
Information	02/2002	15	DD 020492	EOC	4	Correction to LIC position managements quality and threshold	420	4.4.0
03/2002 15 RP-020182 587 1 Correction to UE position measurements change and deviation limit formulas 4.3.0 4.4.0 03/2002 15 RP-020182 601 1 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496	03/2002	15	RP-020162	200			4.3.0	4.4.0
						Illioination		
	03/2002	15	RP-020182	587	1	Correction to UE position measurements change and deviation limit	4.3.0	4.4.0
03/2002 15 RP-020182 601 1 Modification of the T_utran-gps length 4.3.0 4.4.0 03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	00/2002		020.02					
03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0								
03/2002 15 RP-020182 606 Amendment of the COMMON MEASUREMENT INITIATION REQUEST message 4.3.0 4.4.0 03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	15	RP-020182	601	1	Modification of the T_utran-gps length	4.3.0	4.4.0
REQUEST message						_ 31 3		
03/2002 15 RP-020182 609 1 ASN.1 and tabular amendments for LCR TDD 4.3.0 4.4.0 03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP Addition procedures in NBAP Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	15	RP-020182	606			4.3.0	4.4.0
03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0						REQUEST message		
03/2002 15 RP-020182 610 Midamble shift LCR in the PHYSICAL SAHRED SCHANNEL RECONFIGURATION REQUEST [TDD] message 4.3.0 4.4.0 03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 RP-020188 496 4 Addition procedures in NBAP 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0								
RECONFIGURATION REQUEST [TDD] message	03/2002	15	RP-020182	609	1	ASN.1 and tabular amendments for LCR TDD	4.3.0	4.4.0
RECONFIGURATION REQUEST [TDD] message	00/0000	4.5	DD 000400	040		ACT TO THE PROPERTY OF THE PRO	400	4.4.0
03/2002 15 RP-020182 617 NBAP Rapporteur corrections 4.3.0 4.4.0 03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 Power Balancing Activation with Radio Link Setup and Radio Link 4.4.0 5.0.0 RP-020188 496 4 Addition procedures in NBAP 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	15	RP-020182	610			4.3.0	4.4.0
03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 Power Balancing Activation with Radio Link Setup and Radio Link 4.4.0 5.0.0 RP-020188 496 4 Addition procedures in NBAP 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0						NECONFIGURATION REQUEST [TDD] Illessage		
03/2002 15 RP-020231 628 2 Removing of channel coding option "no coding" for FDD 4.3.0 4.4.0 03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 Power Balancing Activation with Radio Link Setup and Radio Link 4.4.0 5.0.0 RP-020188 496 4 Addition procedures in NBAP 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	15	DD 020192	617		NRAD Pappartour corrections	430	440
03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 Power Balancing Activation with Radio Link Setup and Radio Link 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	13	131 -020 102	017		TADAL Napporteur corrections	7.5.0	4.4.0
03/2002 15 RP-020188 425 4 DL Power Capability as a shared resource between Cells 4.4.0 5.0.0 03/2002 15 Power Balancing Activation with Radio Link Setup and Radio Link 4.4.0 5.0.0 03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	03/2002	15	RP-020231	628	2	Removing of channel coding option "no coding" for FDD	4.3.0	4.4.0
03/200215Power Balancing Activation with Radio Link Setup and Radio Link4.4.05.0.003/200215Power Balancing Activation with Radio Link Setup and Radio Link4.4.05.0.0Power Balancing Restart with Radio Link Reconfiguration4.4.05.0.0								
RP-020188 496 4 Addition procedures in NBAP			020100					
03/2002 15 Power Balancing Restart with Radio Link Reconfiguration 4.4.0 5.0.0	, , , _ , ,		RP-020188	496	4			
	03/2002	15				Power Balancing Restart with Radio Link Reconfiguration	4.4.0	5.0.0
			RP-020188	497	3			

03/2002	15				Initial DL Power After addition of CCTrCH in Synchronized	4.4.0	5.0.0
		RP-020188	502	2	Reconfiguration		
03/2002	15	RP-020194	583		NBAP Signalling support for flexible hard split	4.4.0	5.0.0
03/2002	15				Add IPDL parameters for LCR TDD in CELL SETUP REQUEST	4.4.0	5.0.0
		RP-020193	584	3	and CELL RECONFIGURATION REQUEST in NBAP message.		
03/2002	15	RP-020198	588	1	Re-arrangement of lub Transport Bearers	4.4.0	5.0.0
03/2002	15	RP-020190	589	2	HSDPA NBAP Common Procedure Modifications	4.4.0	5.0.0
03/2002	15	RP-020189	597	2	Introduction of IP Transport option in UTRAN	4.4.0	5.0.0
03/2002	15	RP-020188	598		Introduction separate max PDSCH power limitation	4.4.0	5.0.0
03/2002	15	RP-020199		2	Separation of Resource Reservation and Radio Link Activation	4.4.0	5.0.0
03/2002	15	RP-020196	603		Introduction of RL Timing Adjustment support	4.4.0	5.0.0
03/2002	15				Introduction of the Neighbouring TDD Cell Measurement	4.4.0	5.0.0
		RP-020193		1	Information LCR		
03/2002	15	RP-020191		2	Node B synchronisation for 1.28Mcps TDD	4.4.0	5.0.0
03/2002	15	RP-020190	612	3	HSDPA RL-Level Signalling for TDD & FDD	4.4.0	5.0.0
03/2002	15				Introduction of Angle of Arrival enhanced UE positioning for	4.4.0	5.0.0
		RP-020193		1	1.28Mcps TDD in NBAP		
03/2002	15	RP-020194			NBAP changes for TFCI power control in DSCH hard split mode	4.4.0	5.0.0
06/2002	16	RP-020412		3	Introduction of Qth signalling in UTRAN	5.0.0	5.1.0
06/2002	16	RP-020412			Criticality Information Decoding Failure Handling	5.0.0	5.1.0
06/2002	16	RP-020412		1	Alignment of tabular and ASN.1 coding for DL power	5.0.0	5.1.0
06/2002	16	RP-020412		1	Correction to RL Restore Indication	5.0.0	5.1.0
06/2002	16	RP-020412			Use of PDSCH RL ID for TDD DSCH/USCH	5.0.0	5.1.0
06/2002	16	RP-020412			Clarification on the Neighboring TDD Cell Measurement information	5.0.0	5.1.0
06/2002	16	RP-020412			Introduction of SIB	5.0.0	5.1.0
06/2002	16	RP-020412			Removal of syntax errors from ASN.1	5.0.0	5.1.0
06/2002	16	RP-020412			Interaction between HSDPA and IP transport in UTRAN	5.0.0	5.1.0
06/2002	16	RP-020412		1	Interaction between HSDPA and Bearer Re-arrangement	5.0.0	5.1.0
06/2002	16	RP-020412	659		Correction to Implementation of Rel-5	5.0.0	5.1.0
06/2002	16				Correction to the use of the CFN IE / SFN IE in the Measurement	5.0.0	5.1.0
		RP-020412			Initiation procedures		
06/2002	16	RP-020412			TFCI 0 definition for TDD	5.0.0	5.1.0
06/2002	16	RP-020412		1	NBAP Review – Alignment on the ASN.1	5.0.0	5.1.0
06/2002	16	RP-020412	672	1	NBAP Review Alignment of the ASN.1	5.0.0	5.1.0
06/2002	16	[Definition of quality figures for SFN-SFN and Tutran-gps	5.0.0	5.1.0
		RP-020412			measurement value information		
06/2002	16	RP-020412		1	Clarification for the usage of the cause value	5.0.0	5.1.0
06/2002	16	RP-020412		2	HS-DSCH Initial credits F	5.0.0	5.1.0
06/2002	16	RP-020412	698	1	TFCI2 bearer clarification	5.0.0	5.1.0

History

Document history					
V5.0.0	March 2002	Publication			
V5.1.0	June 2002	Publication			