

**Terrestrial Trunked Radio (TETRA);
Conformance testing specification;
Part 4: Protocol testing specification for
Direct Mode Operation (DMO);
Sub-part 11: Test Suite Structure and
Test Purposes (TSS&TP) for
Mobile Station Repeater type 2**



Reference

DEN/TETRA-02009-4-11

Keywords

DMO, protocol, radio, testing, TETRA, TSS&TP,
TTCN

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:
<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <http://www.etsi.org/tb/status/>

If you find errors in the present document, send your comment to:
editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2000.
All rights reserved.

Contents

Intellectual Property Rights	5
Foreword.....	5
1 Scope	6
2 References	6
3 Definitions and abbreviations.....	7
3.1 TETRA definitions	7
3.2 ISO/IEC 9646 abbreviations.....	7
3.3 TETRA abbreviations.....	7
4 Test Suite Structure (TSS).....	8
4.1 DMCC layer test groups.....	8
4.2 MAC layer test groups	9
4.3 Test group description	9
5 Introduction to Test Purposes (TPs).....	10
5.1 Test purpose definition conventions.....	10
5.1.1 TPs descriptions.....	10
5.1.2 Preamble descriptions	10
5.1.2.1 Preamble idle_to_TX_occupation: From Idle state to Call Active TX Occupation	11
5.1.2.2 Preamble idle_to_TX_reservation: From Idle state to Call Active TX Reservation	13
5.1.2.3 Preamble idle_to_RX_occupation: From Idle state to Call Active RX Occupation	15
5.1.2.4 Preamble idle_to_RX_reservation	16
5.1.2.5 Preamble idle_channel_occupation.....	17
5.1.3 Postamble descriptions	18
5.1.3.1 Postamble TX_occupation_to_idle: From Call Active TX Occupation state to Idle	18
5.1.3.2 Postamble TX_reservation_to_idle: From Call Active TX Reserved state to Idle.....	18
5.1.3.3 Postamble RX_occupation_to_idle: From Call Active RX Occupation state to Idle	19
5.1.3.4 Postamble RX_reservation_to_idle: From Call Active RX Reserved state to Idle	19
5.2 Test purpose naming conventions	20
5.3 Selection expressions	20
6 DMO MS-REP2 test purposes	22
6.1 DMCC Circuit Mode (CM) tests.....	22
6.1.1 MS-REP2 CM capability tests.....	22
6.1.2 MS-REP2 CM valid behaviour tests.....	23
6.1.2.1 The IUT is in idle state, DMO channel is free	23
6.1.2.2 IUT is in idle state, DMO channel is busy	25
6.1.2.3 IUT is in TX occupation state	25
6.1.2.4 IUT is in RX occupation state.....	26
6.1.2.5 IUT is in TX reservation state.....	27
6.1.2.6 IUT is in RX reservation state.....	29
6.1.3 MS-REP2 CM timer tests	30
6.1.3.1 DT303 Response to DM-SETUP PRES timer	30
6.1.3.2 DT311 Call transaction timer.....	30
6.2 DMCC Short data service (SDS).....	31
6.2.1 MS-REP2 SDS Capability tests.....	31
6.2.2 MS-REP2 SDS Valid behaviour tests.....	31
6.2.2.1 IUT is in idle state, channel is free.....	31
6.2.2.2 IUT is in idle state, channel is busy.....	33
6.2.2.3 IUT is in state TX occupation	33
6.2.2.4 IUT is in RX occupation state.....	34
6.2.2.5 IUT is in TX reservation state.....	36
6.2.2.6 IUT is in RX reservation state.....	36
6.2.3 MS-REP2 SDS Timer tests.....	37
6.2.3.1 DT316 Response to DM-SDS DATA timer.....	37
6.3 DMO MS-REP2 layer 2: MAC layer	38

6.3.1	MS-REP2 MAC capability tests	38
6.3.2	MS-REP2 MAC valid behaviour tests	38
6.3.2.1	DM channel usage procedures	38
6.3.2.2	Signalling messages procedures	40
6.3.3	MS-REP2 MAC timer tests	44
Annex A (informative): Bibliography.....		45
History		46

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This European Standard (Telecommunications series) has been produced by ETSI Project Terrestrial Trunked Radio (TETRA), and is now submitted for the Vote phase of the ETSI standards Two-step Approval Procedure.

The present document had been submitted to Public Enquiry as ETS 300 394-4-11. During the processing for Vote it was converted into an EN.

The present document is part 4 of a multi-part deliverable covering Terrestrial Trunked Radio (TETRA); Conformance testing specification, as identified below:

- Part 1: "Radio";
- Part 2: "Protocol testing specification for Voice plus Data (V+D)";
- Part 3: "Protocol testing specification for Packet Data Optimized (PDO)";
- Part 4: "Protocol testing specification for Direct Mode Operation (DMO)";**
- Part 5: "Security".

Proposed national transposition dates	
Date of latest announcement of this EN (doa):	3 months after ETSI publication
Date of latest publication of new National Standard or endorsement of this EN (dop/e):	6 months after doa
Date of withdrawal of any conflicting National Standard (dow):	6 months after doa

1 Scope

The present document contains the Test Suite Structure (TSS) and Test Purposes (TPs) to test the TETRA Direct Mode Operation (DMO) protocols. The present document is divided into several parts, each one dealing with a stack of protocols which includes layer 3 and layer 2 protocols. This present part 4, sub-part 11 deals with TSS&TP for a Direct Mode MS operating with a type 2 Repeater (MS-REP2) Air Interface protocol, while part 4, sub-part 1 deals with TSS&TP for DM MS to MS protocol and part 4, sub-part 12 deals with type 2 Repeater (DM-REP2) Air Interface protocol.

Testing of security features is outside the scope of the present document.

The objective of this test specification is to provide a basis for approval tests for TETRA equipment giving a high probability of air interface inter-operability between different manufacturer's TETRA equipment.

The ISO/IEC standard for the methodology of conformance testing, ISO/IEC 9646-1 [2] and ISO/IEC 9646-2 [3], as well as the ETSI methodology for conformance testing, ETS 300 406 [4], are used as the basis for the test methodology.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.

- [1] ETSI EN 300 396-4: "Terrestrial Trunked Radio (TETRA); Technical requirements for Direct Mode Operation (DMO); Part 4: Type 1 repeater air interface".
- [2] ISO/IEC 9646-1: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 1: General concepts".
- [3] ISO/IEC 9646-2: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 2: Abstract test suite specification".
- [4] ETSI ETS 300 406: "Methods for Testing and Specification (MTS); Protocol and profile conformance testing specifications; Standardization methodology".
- [5] ETSI EN 300 396-7: "Terrestrial Trunked Radio (TETRA); Technical requirements for Direct Mode Operation (DMO); Part 7: Type 2 repeater air interface".
- [6] ETSI EN 300 396-8-4: "Terrestrial Trunked Radio (TETRA); Technical requirements for Direct Mode Operation (DMO); Part 8: Protocol Implementation Conformance Statement (PICS) proforma specification; Sub-part 4: Type 2 repeater Air Interface (AI)".

3 Definitions and abbreviations

3.1 TETRA definitions

For the purposes of the present document, the terms and definitions given in EN 300 396-7 [5] apply.

3.2 ISO/IEC 9646 abbreviations

For the purposes of the present document, the following ISO/IEC 9646-1 [2] abbreviations apply:

ICS	Implementation Conformance Statement
IUT	Implementation Under Test
IXIT	Implementation eXtra Information for Testing
PDU	Protocol Data Unit
PICS	Protocol Implementation Conformance Statement
PIXIT	Protocol Implementation eXtra Information for Testing
TP	Test Purpose
TSS	Test Suite Structure

3.3 TETRA abbreviations

For the purposes of the present document, the following TETRA abbreviations apply:

CM	Circuit Mode
DMCC	Direct Mode Call Control
DMO	Direct Mode of Operation
FCS	Frame Check Sequence
MAC	Medium Access Control
MNI	Mobile Network Identity
MS	Mobile Station
RX	Receiver
SDS	Short Data Services
SDU	Service Data Unit
TX	Transmitter

4 Test Suite Structure (TSS)

4.1 DMCC layer test groups

The first level separates the DMCC layer (or layer 3) in different protocols (Circuit mode, Short Data Service). Next level splits protocol testing into functional test groups according to the type of testing: Capability test (CA), Valid Behaviour (BV) and Timer tests (TI). Further level classifies the possible operations in each protocol condition or state.

The following list defines the DMCC layer test group names and identifiers used for those:

- MS-REP2 Direct Mode Call Control (DMO_MSREP2_DMCC)
 - Circuit mode (CM)
 - Capability tests (CA)
 - Valid Behaviour tests (BV)
 - from Idle state(ID)
 - from Idle state, channel busy (IB)
 - from TX occupation State (TXO)
 - from RX occupation State (RO)
 - from TX Reservation (TR)
 - from RX Reservation State (RR)
 - Timer Tests (TI)
 - Short Data Service (SDS)
 - Capability tests (CA)
 - Valid Behaviour tests (BV)
 - from Idle state(ID)
 - from Idle state, channel busy (IB)
 - from RX occupation State (RO)
 - from TX Reservation (TR)
 - from RX Reservation State (RR)
 - Timer Tests (TI)

4.2 MAC layer test groups

The first level of the MAC test groups separates the MAC test suite in functional test groups: CA, BV and TI. The second level of the test subgroups is a division of protocol requirements into functional entities.

The following list defines the MAC layer test group names and identifiers:

- MS-REP2 MAC layer (DMO_MSREP2_MAC)
 - Capability tests (CA)
 - Valid behaviour tests (BV)
 - Channel usage (CU)
 - Signalling messages (SM)
 - Traffic mode (TM)
 - Timer tests (TI)

4.3 Test group description

Capability (CA) tests provide limited testing that the observable capabilities of the IUT are in accordance with the conformance requirements and the additional capabilities claimed in the PICS/PIXIT.

The Valid Behaviour (BV) group tests an IUT in response to valid behaviour of the test system. "Valid" means that a test event is syntactically and contextually correct. All test cases in the valid behaviour group are intended to verify as thoroughly as possible the various functions of the protocol.

Different timers are defined to supervise the various state transitions. The Timer (TI) test group is intended to verify that the IUT is reacting properly to an expiry of one of the timers or to a counter mismatch.

5 Introduction to Test Purposes (TPs)

The test purposes for DMCC layer and MAC layer are defined in clause 6 of the present document. Each layer leads to a different test suite.

5.1 Test purpose definition conventions

5.1.1 TPs descriptions

Each TP is described using text presented in a table.

The table contains the following information:

Table 1

TP-Name The TP name is a unique identifier, specified according to the TP naming conventions defined in the clause below. (it is also the name of the corresponding test case)		Reference: reference to the clause number of specification EN 300 396-7 [5] stating this conformance requirement. For example: EN 300 396-7 [5], 6.2.5.1
Purpose	purpose of the test itself, indicating for example the test performed against a requirement of the protocol, described by this test purpose. Example: test of changeover initiated from RX reservation state	
Test description	body of the test	
Pass criteria	visible action to be observed at PCO to declare that the IUT passes the test and conforms to the specifications	
Selection	expression based on EN 300 396-8-4 [6] PICS statements, used to select or deselect the corresponding test case according to the options of the implementation	
Preamble	"None" or name of the preamble procedure bringing the IUT from idle state to the state required to run the test. For example: idle_to_RX_reservation	
Postamble	"None" or name of the postamble to bring the IUT back to idle state, for example: RX_occupation_to_idle	

The preambles and postambles are described using MSCs and are shown in the following clauses.

5.1.2 Preamble descriptions

Preambles are used to bring the IUT from the idle state to the state where the test takes place. As the protocol has different options, as for instance the use of presence check or the absence of presence check, there are several ways to reach a given state. The preamble has to be chosen according to the IUT capabilities and the implemented options.

5.1.2.1 Preamble idle_to_TX_occupation: From Idle state to Call Active TX Occupation

With presence check.

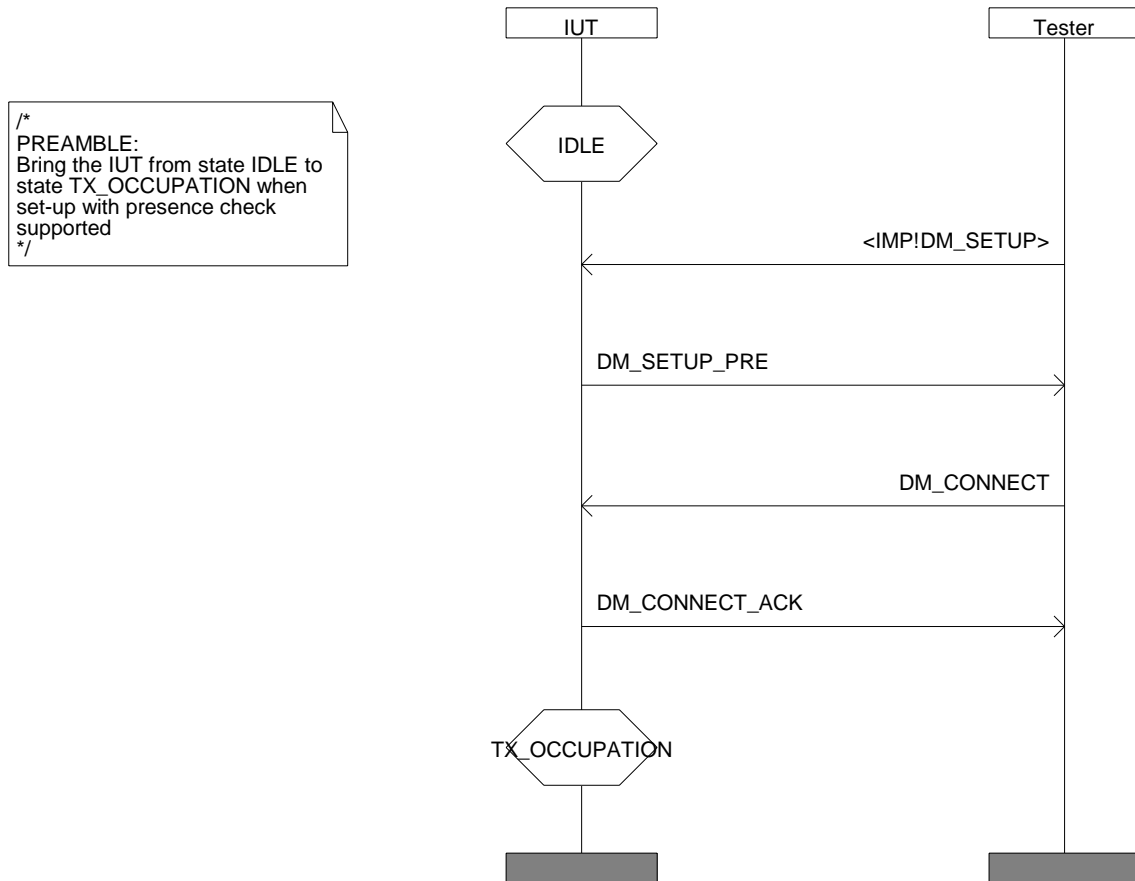


Figure 1

Without presence check.

```
/*  
PREAMBLE:  
Bring the IUT from state IDLE to  
state TX_OCCUPATION when  
set-up without presence check  
supported  
*/
```

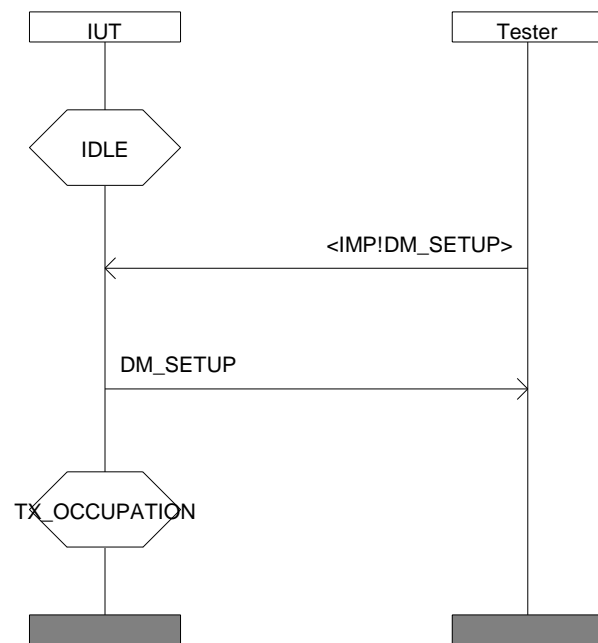


Figure 2

5.1.2.2 Preamble idle_to_TX_reservation: From Idle state to Call Active TX Reservation

With presence check.

/*
PREAMBLE:
Bring the IUT from state IDLE to
state TX_RESERVATION when
set-up with presence check is
supported
*/

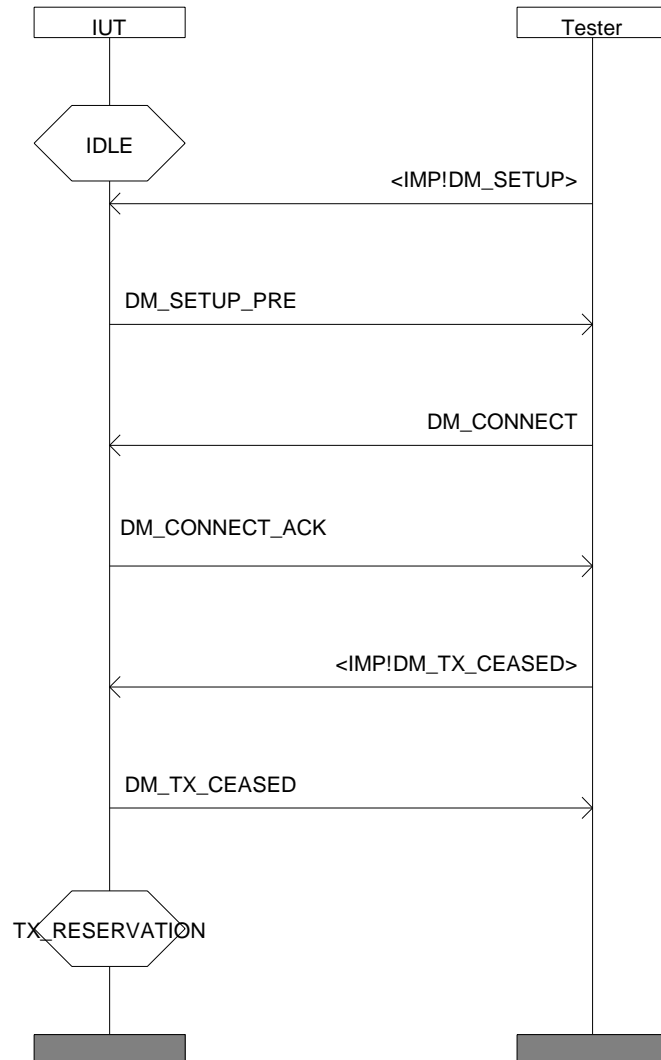


Figure 3

Without presence check.

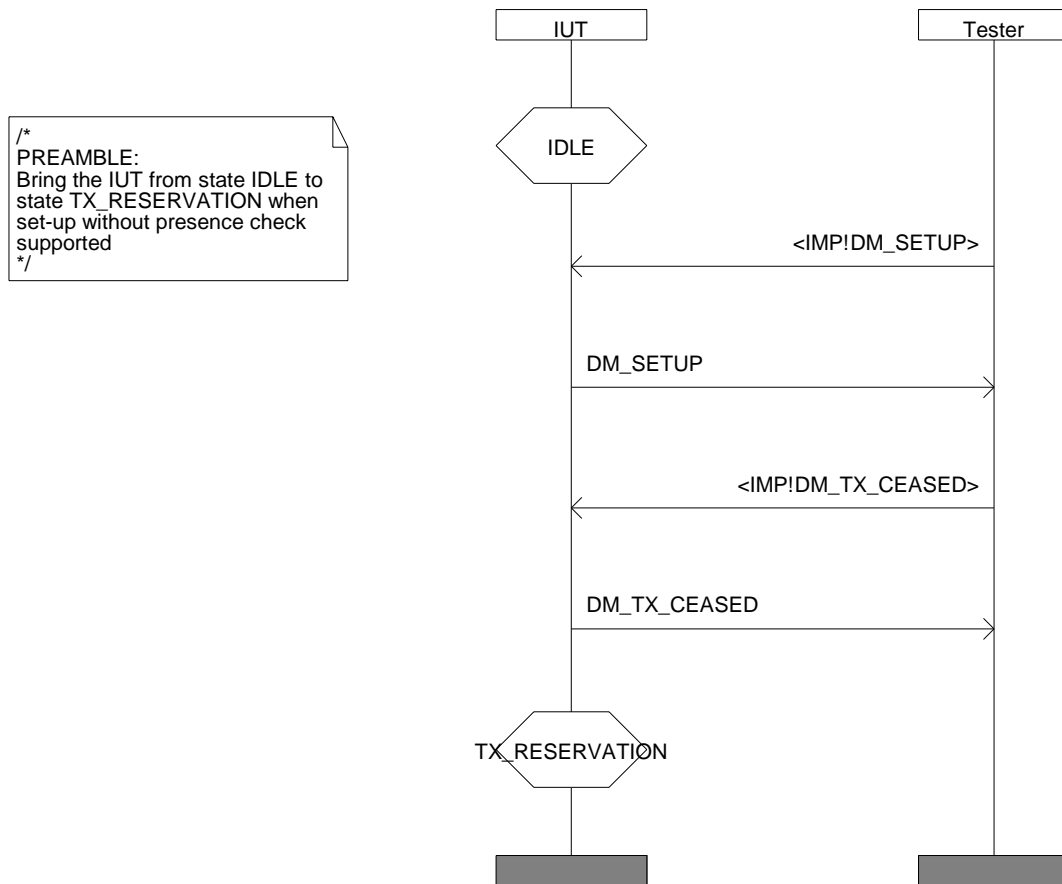


Figure 4

5.1.2.3 Preamble idle_to_RX_occupation: From Idle state to Call Active RX Occupation

With presence check.

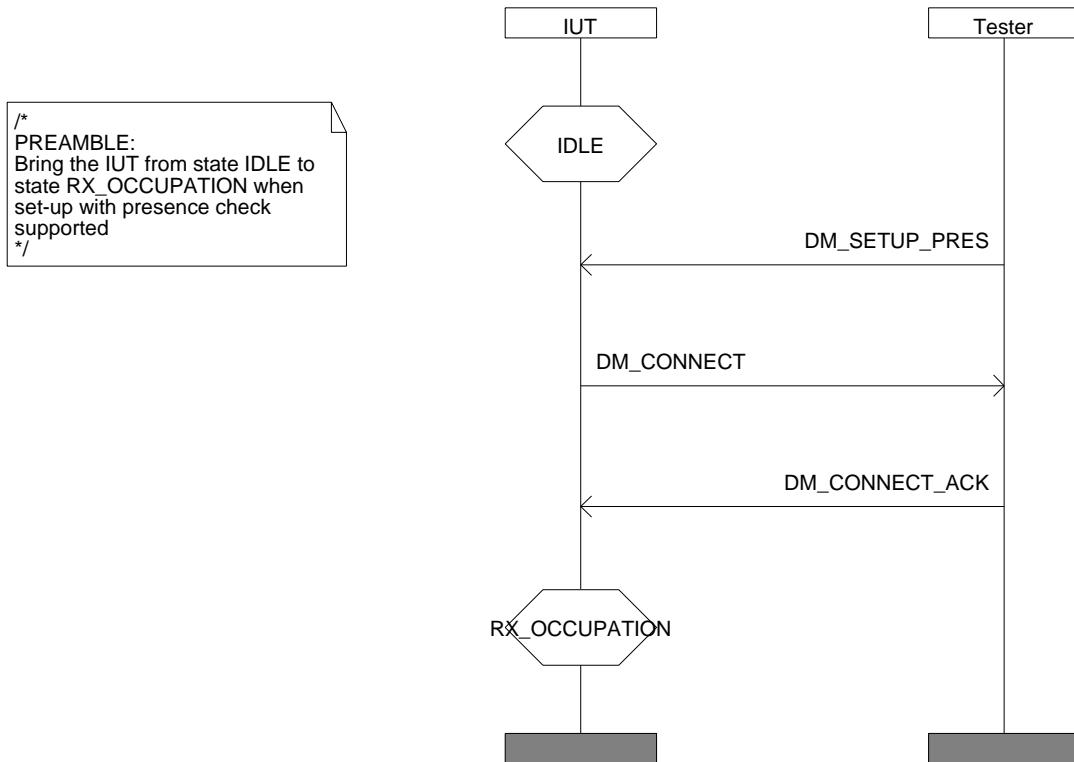


Figure 5

Without presence check.

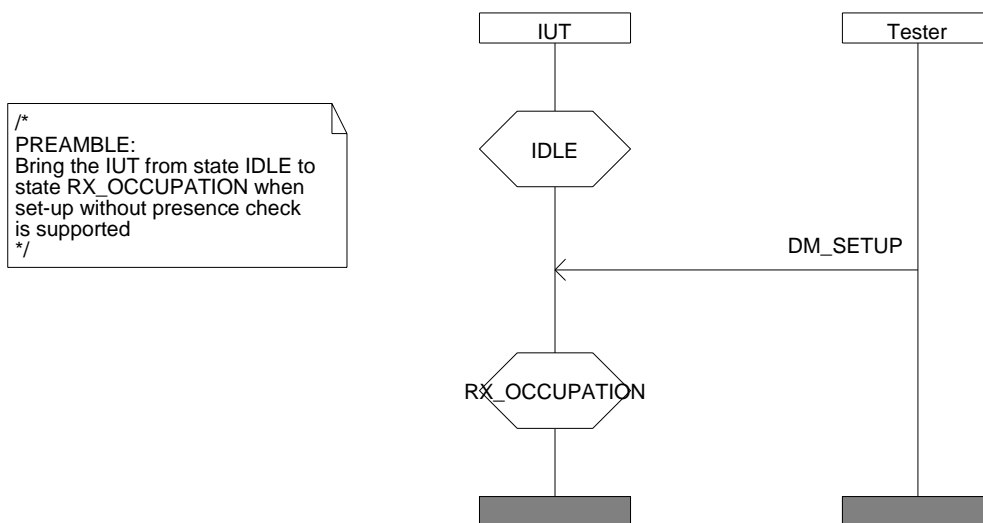


Figure 6

5.1.2.4 Preamble idle_to_RX_reservation

With presence check.

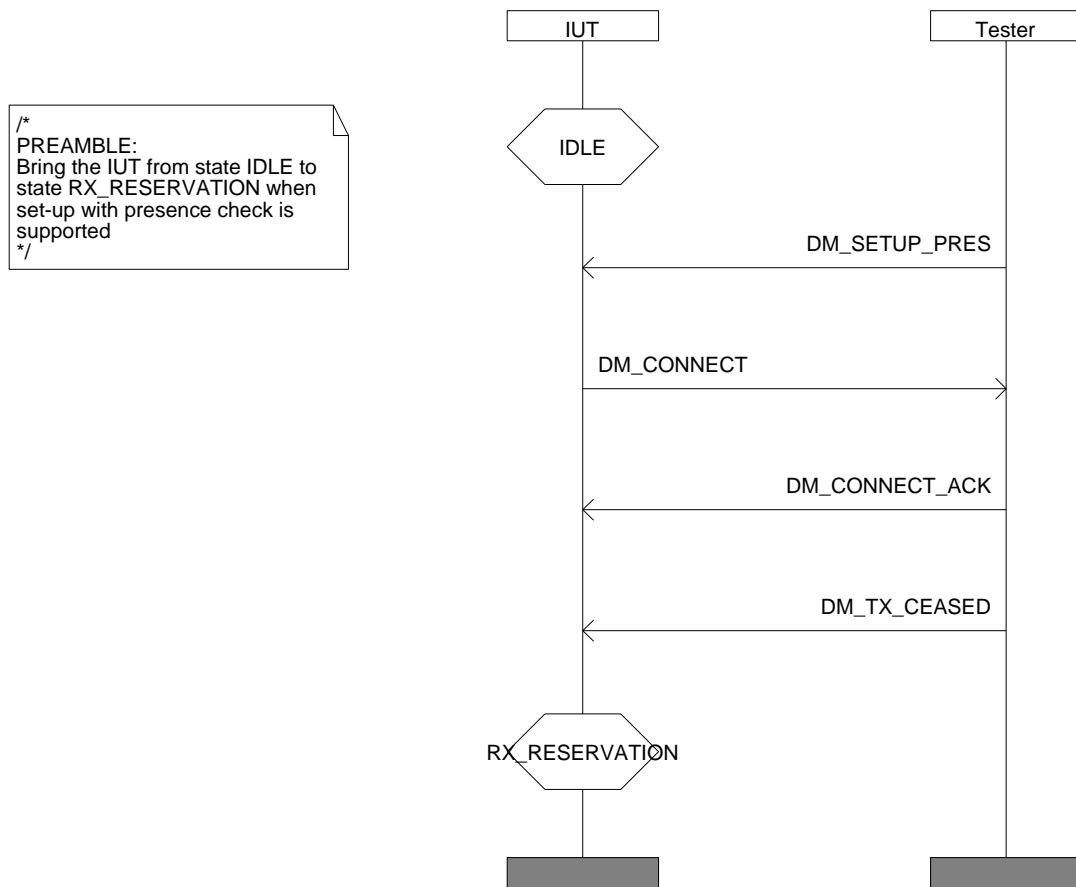


Figure 7

Without presence check.

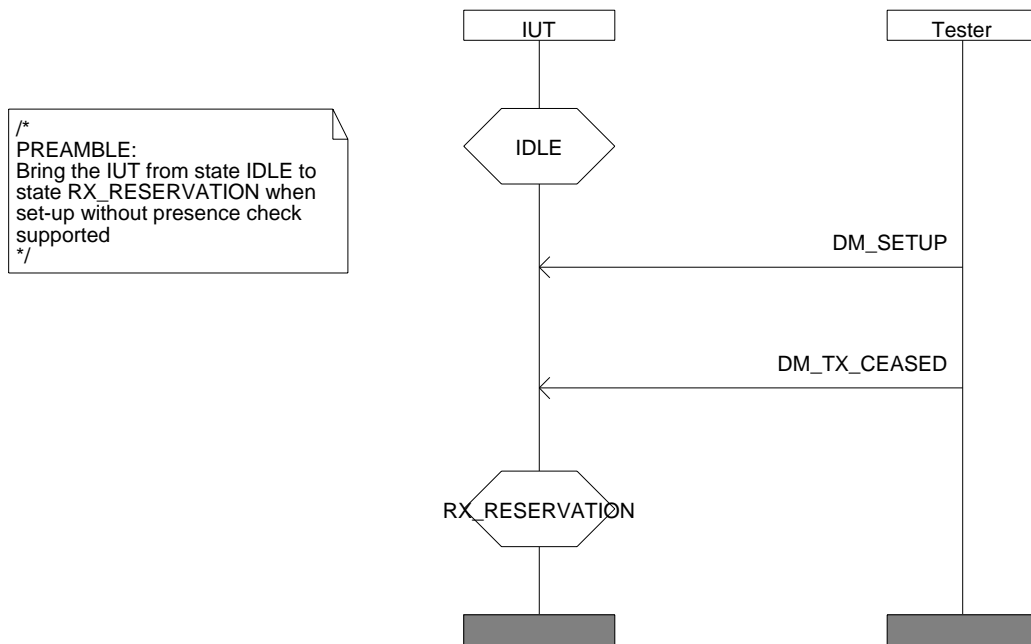


Figure 8

5.1.2.5 Preamble idle_channel_occupation

Without presence check.

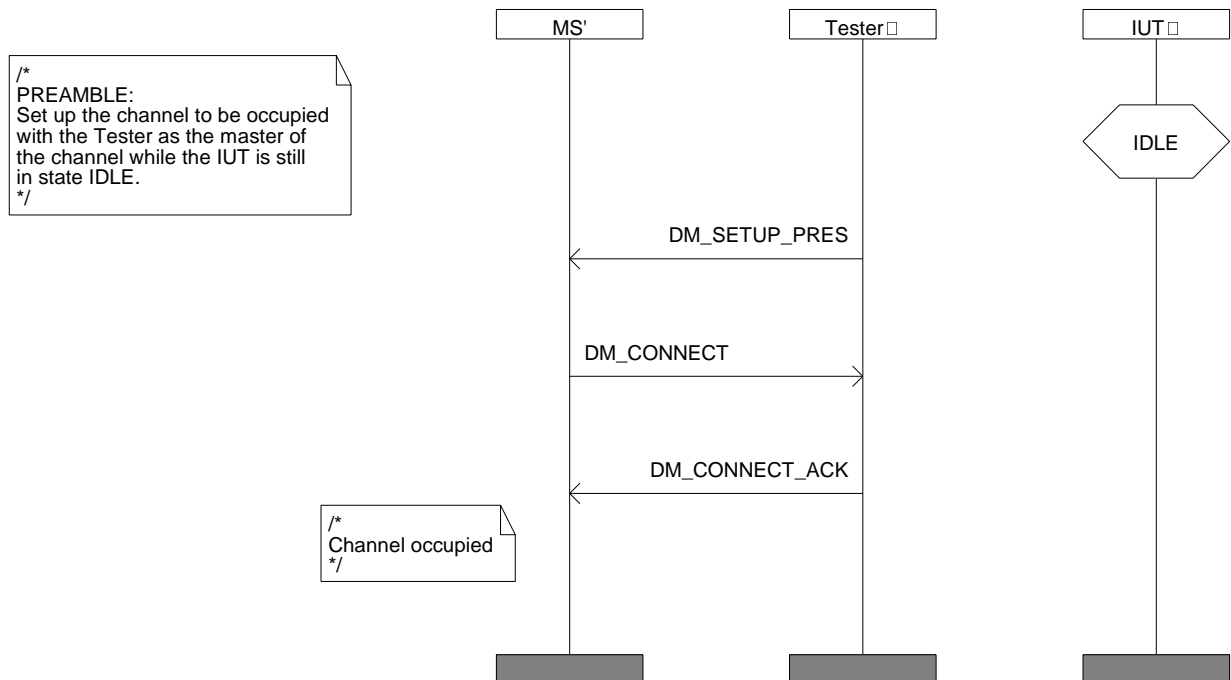


Figure 9

5.1.3 Postamble descriptions

Postambles are used to bring the IUT from the state ending the test, to the idle state.

5.1.3.1 Postamble TX_occupation_to_idle: From Call Active TX Occupation state to Idle

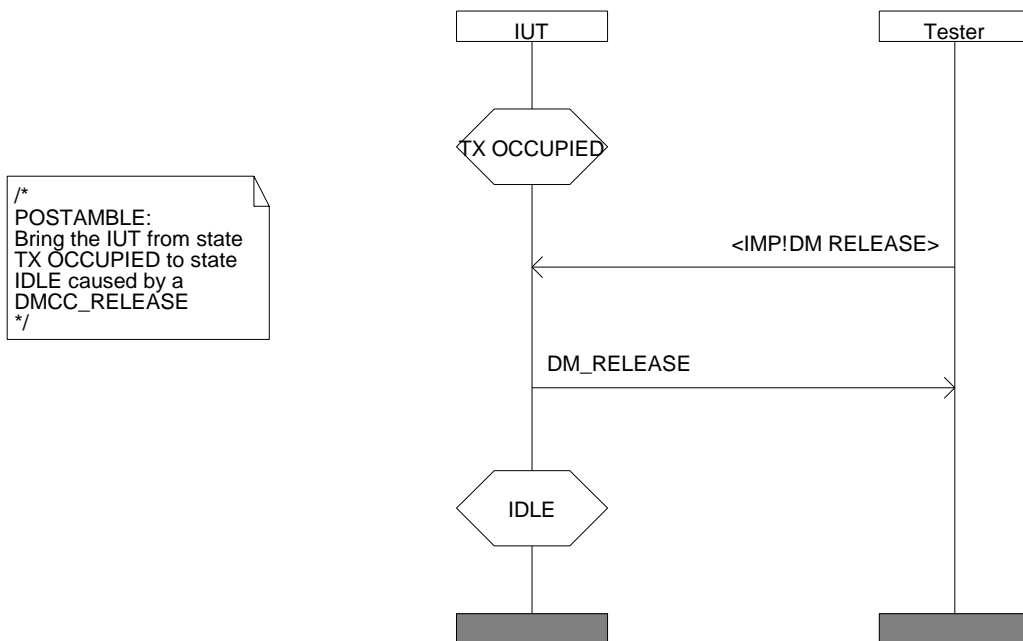


Figure 10

5.1.3.2 Postamble TX_reservation_to_idle: From Call Active TX Reserved state to Idle

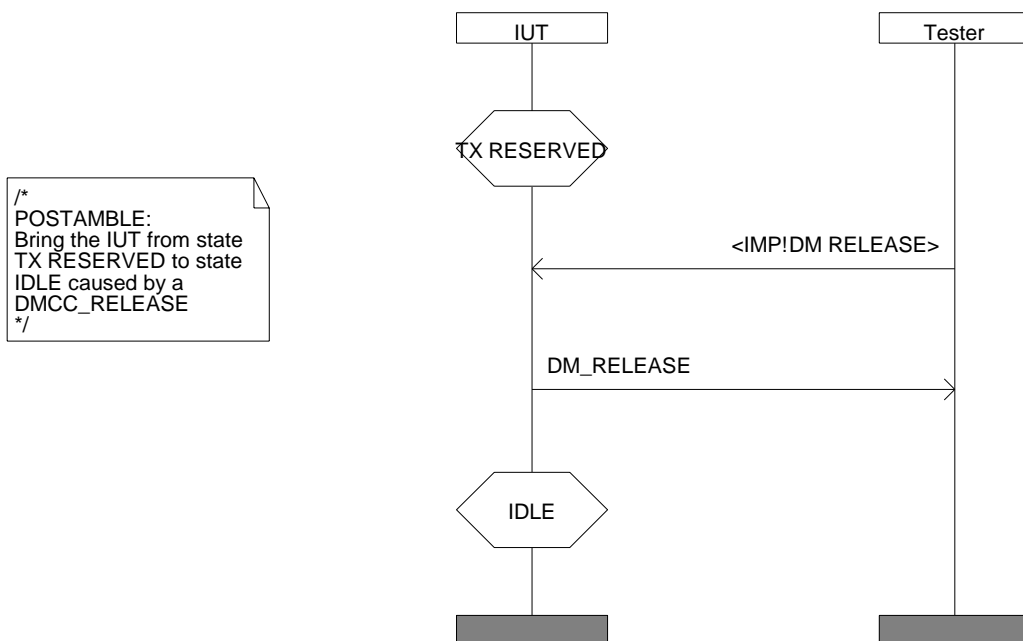


Figure 11

5.1.3.3 Postamble RX_occupation_to_idle: From Call Active RX Occupation state to Idle

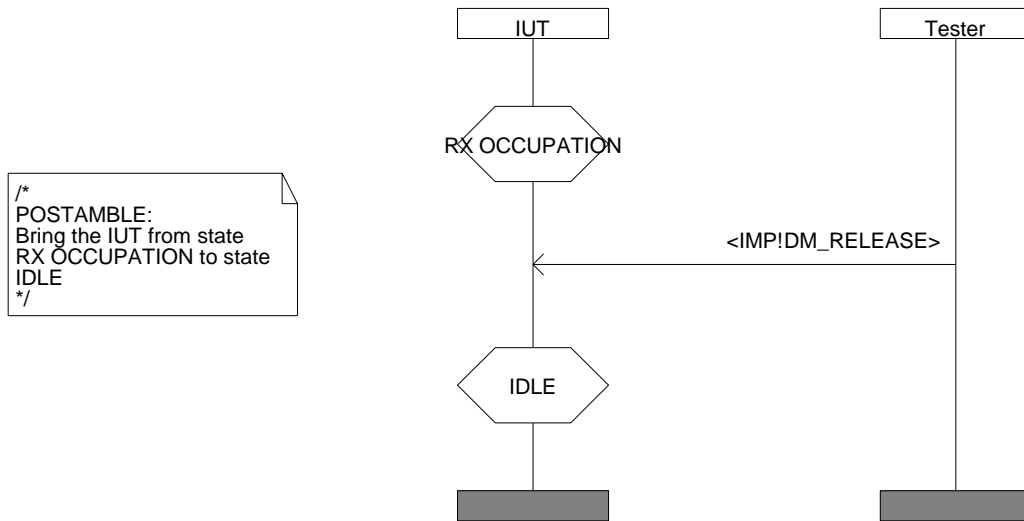


Figure 12

5.1.3.4 Postamble RX_reservation_to_idle: From Call Active RX Reserved state to Idle

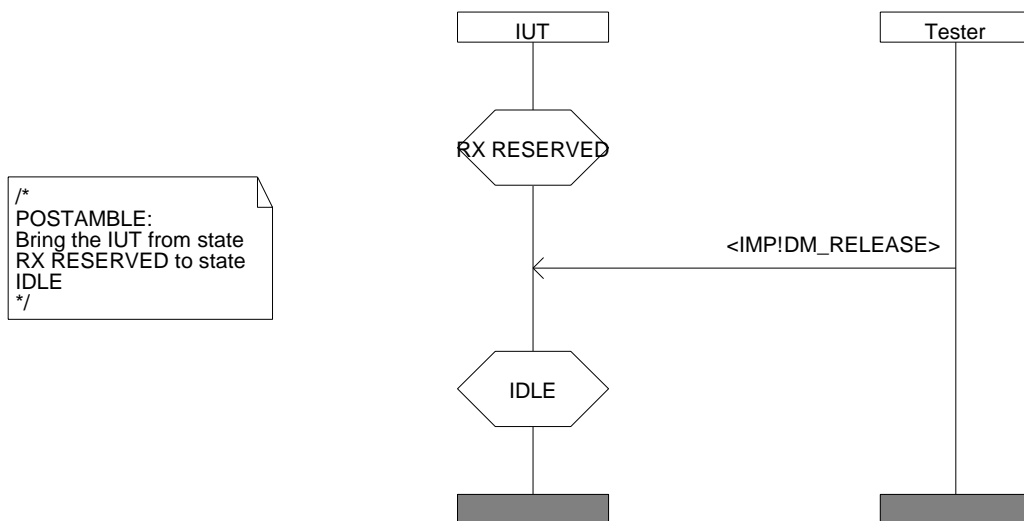


Figure 13

5.2 Test purpose naming conventions

The identifier of the test purpose is built according to table 2.

Table 2: Test purpose naming convention

DMO/<ts>/<fm>/<ss>/<tt>/<tsg>/<nn>		
<ts> = test suite type	MSREP2	MS-Repeater type 2
<fm> = functional module or subentity (layer 3 only)	DMCC MAC	Direct Mode Call Control (layer 3) Upper MAC (layer 2)
<ss> = test group	letters such as: CM SDS	abbreviation of the group name (optional) Circuit Mode (layer 3) Short Data Service (layer 3)
tt = Type of testing	CA BV BI TI	Capability Tests Valid Behaviour Tests Invalid Behaviour Tests Timer expiry and counter mismatch tests
<tsg> = test subgroup	two letters	subgroup name (optional)
<nn> = sequential number	01-99	Test Purpose Number

5.3 Selection expressions

A test case, based on a test purpose described here, can be selected or deselected from the test suite, according to the evaluation of selection expressions which reflect the capabilities supported or not by the implementation under test.

It appears that some selection expressions are quite complex, mainly the ones used for the MAC layer test suite, as they are based on a rather long combination of PICS statements.

To ease the readability of the test purposes, these complex selection expressions are replaced by generic names which are defined here, and which represent by definition the selection expression themselves.

Table 3 defines the generic names together with the conditions associated with each one.

Table 3

Selection expression identifier	Selection expression using references to (EN 300 396-8-4 [6])	Static capabilities associated with this selection
Initiate_CM_call	A.4/1 OR A.5/1 OR A.5/2	Initiate group CM call or Initiate individual CM call without presence check or Initiate individual CM call with presence check
Initiate_SDS_call	A.9/1 OR A.10/1 OR A.10/2 OR A.10/3	Send group unacknowledged SDS or Send individual unacknowledged SDS or Send acknowledged SDS or Sending acknowledged SDS with data in ACK
Initiate_CM_or_SDS_call	A.4/1 OR A.5/1 OR A.5/2 OR A.9/1 OR A.10/1 OR A.10/2 OR A.10/3	Initiate group CM call or Initiate individual CM call without presence check or Initiate individual CM call with presence check or Send group unacknowledged SDS or Send individual unacknowledged SDS or Send acknowledged SDS or Send acknowledged SDS with data in ACK
Receive_Ackd_CM_or_SDS_call	A.3/6 OR A.12/2 OR A.12/3	Accept CM call setup with presence check, Receive acknowledged SDS, Receive acknowledged SDS with data in ACK

6 DMO MS-REP2 test purposes

6.1 DMCC Circuit Mode (CM) tests

Test group objective: To test the behaviour of the DMCC CM entity of the IUT.

Condition: IUT implements the CM.

6.1.1 MS-REP2 CM capability tests

To test the basic capabilities of the CM module of the IUT, when operating in group address mode (without presence check) or in individual address mode (with or without presence check).

Handling of a single call.

DMO_MSREP2_DMCC_CM_CA_01		Reference: EN 300 396-4 [1], 6.2.1.1, 6.2.4.1
Purpose	Setup and terminate a group call without presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup	
Pass criteria 1	The IUT sends DM-SETUP to the tester	
Test description	The tester sends an implicit send to the IUT to terminate the call	
Pass criteria 2	The IUT sends DM-TX CEASED to the tester	
Selection EN 300 396-8-4 [6]	A.4/1 Setup procedure, group call address	
Preamble	None	
Postamble	TX_reservation_to_idle	

MSC035

DMO_MSREP2_DMCC_CM_CA_02		Reference: EN 300 396-4 [1], 6.2.2.1, 6.2.4.1
Purpose	Setup and terminate an individual call with presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup. The IUT sends DM-SETUP PRES to the tester. The tester sends DM-CONNECT to the IUT	
Pass criteria 1	The IUT sends DM-CONNECT ACK to the tester	
Test description	The tester sends an implicit send to the IUT to terminate the call	
Pass criteria 2	The IUT sends DM-TX CEASED to the tester	
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check	
Preamble	None	
Postamble	TX_reservation_to_idle	

MSC037

DMO_MSREP2_DMCC_CM_CA_03		Reference: EN 300 396-4 [1], 6.2.1.1, 6.2.4.1
Purpose	Establish and terminate an individual call, when operating without presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup	
Pass criteria 1	The IUT sends DM-SETUP to the tester	
Test description	The tester sends an implicit send to the IUT to terminate the call	
Pass criteria 2	The IUT sends DM-TX CEASED to the tester	
Selection EN 300 396-8-4 [6]	A.5/1 Setup individual call without presence check	
Preamble	None	
Postamble	TX_reservation_to_idle	

MSC036

Handling of a second simultaneous call.

DMO_MSREP2_DMCC_CM_CA_04		Reference: EN 300 396-7 [5], 6
Purpose	Setup a second group call without presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup. The IUT sends DM-SETUP to the tester. The tester sends a second implicit send to the IUT to cause a second call setup	
Pass criteria	Check that the IUT sends a second DM-SETUP to the tester	
Selection EN 300 396-8-4 [6]	A.4/1 Setup procedure, group call address	
Preamble	None	
Postamble	TX_reservation_to_idle on each call	

DMO_MSREP2_DMCC_CM_CA_05		Reference: EN 300 396-7 [5], 6
Purpose	Setup a second individual call with presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup. The IUT sends DM-SETUP PRES to the tester. The tester sends a second implicit send to the IUT to cause a second call setup	
Pass criteria	Check that the IUT sends a second DM-SETUP PRES to the tester	
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check	
Preamble	None	
Postamble	TX_reservation_to_idle on each call	

DMO_MSREP2_DMCC_CM_CA_06		Reference: EN 300 396-7 [5], 6
Purpose	Establish a second individual call, when operating without presence check	
Test description	The tester sends an implicit send to the IUT to cause a call setup. The IUT sends DM-SETUP to the tester. The tester sends a second implicit send to the IUT to cause a second call setup	
Pass criteria	Check that the IUT sends a second DM-SETUP to the tester	
Selection EN 300 396-8-4 [6]	A.5/1 Setup individual call without presence check	
Preamble	None	
Postamble	TX_reservation_to_idle on each call	

6.1.2 MS-REP2 CM valid behaviour tests

6.1.2.1 The IUT is in idle state, DMO channel is free

DMO_MSREP2_DMCC_CM_BV_ID_01		Reference: EN 300 396-4 [1], 6.2.2.1
Purpose	Establish an outgoing call with presence check initiated from idle state and DMO channel free	
Test description	The tester sends an implicit send to the IUT to cause a call setup. Then the IUT sends DM-SETUP PRES received by the tester, which sends back DM-CONNECT	
Pass criteria	The IUT sends DM-CONNECT ACK PDU to the tester	
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check	
Preamble	None	
Postamble	TX_occupation_to_idle	

MSC037

DMO_MSREP2_DMCC_CM_BV_ID_02	Reference: EN 300 396-4 [1], 6.2.1.2
Purpose	Receive an incoming call without presence check
Test description	The tester sends DM-SETUP PDU to the IUT
Pass criteria	To check that IUT reaches "call_active_RX_occupation" state, the tester sends DM-TX CEASED which brings the IUT to "call_active_RX_reservation". During the reservation period, when the IUT attempts a call setup, it shall issue a DM-TX REQUEST to initiate a changeover, and this is the pass criteria NOTE: This call setup is controlled by the tester using an implicit send containing a "DMCC_SETUP_request".
Selection EN 300 396-8-4 [6]	A.2/1 Circuit mode call
Preamble	None
Postamble	Tester issues a DM-REJECT followed by RX_Reservation_to_idle

MSC010

DMO_MSREP2_DMCC_CM_BV_ID_03	Reference: EN 300 396-4 [1], 6.2.2.2
Purpose	Receive an incoming call with presence check
Test description	The tester sends DM-SETUP PRES to the IUT which sends back DM-CONNECT. The tester responds with DM-CONNECT ACK
Pass criteria	To check that IUT reaches state "call_active_RX_occupation" when receiving DM-CONNECT ACK, the tester sends DM-TX CEASED which brings the IUT to "call_active_RX_reservation". During the reservation period, when the IUT attempts a call setup, it shall issue a DM-TX REQUEST to initiate a changeover, and this is the pass criteria NOTE: This call setup is controlled by the tester using an implicit send containing a "DMCC_SETUP_request".
Selection EN 300 396-8-4 [6]	A.3/6 Accept call setup with presence check
Preamble	None
Postamble	Tester issues a DM-REJECT followed by RX_Reservation_to_idle

MSC009

DMO_MSREP2_DMCC_CM_BV_ID_04	Reference: EN 300 396-4 [1], 6.2.2.1
Purpose	Release a call setup attempt when receiving a disconnect
Test description	The tester sends an implicit send to the IUT to cause a call setup. Then the IUT sends DM-SETUP PRES to the tester. The tester sends DM-DISCONNECT to the IUT to reject the call
Pass criteria	The IUT sends DM-RELEASE to the tester and returns to idle
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check
Preamble	None
Postamble	None

MSC003

DMO_MSREP2_DMCC_CM_BV_ID_05	Reference: EN 300 396-4 [1], 6.2.2.1
Purpose	Release a call setup attempt when the offered Quality of Service is not acceptable to the DMCC
Test description	The tester sends an implicit send to the IUT to cause a call setup. Then the IUT sends DM-SETUP PRES to the tester. The tester sends DM-CONNECT to the IUT with an unacceptable QOS
Pass criteria	The QOS being not acceptable, the IUT sends DM-RELEASE to the tester and returns to idle
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check
Preamble	None
Postamble	None

MSC002

DMO_MSREP2_DMCC_CM_BV_ID_06		Reference: EN 300 396-4 [1], 6.2.1.1, 6.2.4.1, 8.5.7.2.1
Purpose	Pre-emption flags in DM-SETUP and DM-TX-CEASED PDU	
Test description	The tester sends an implicit send to cause a call setup	
Pass criteria 1	Verify that IUT sends the DM-SETUP PDU with the pre-emption flag set to 1	
Test description	The tester sends an implicit send to cause the IUT to terminate the call	
Pass criteria 2	Verify that the IUT sends the DM-TX CEASED PDU with the request and changeover flags set to 1	
Selection EN 300 396-8-4 [6]	A.5/2 Setup individual call with presence check or OR A.5/1 Setup individual call without presence check	
Preamble	None	
Postamble	None	

6.1.2.2 IUT is in idle state, DMO channel is busy

DMO_MSREP2_DMCC_CM_BV_IB_01		Reference: EN 300 396-4 [1], 6.2.6
Purpose	Initiate call pre-emption, to establish a new CM call, from an MS not involved in the current call	
Test description	The tester sends an implicit send to the IUT to cause a call setup. As the channel is busy, the IUT initially sends a DM-PREEMPT to the tester, which responds by sending a DM-PREEMPT_ACCEPT	
Pass criteria	The IUT sends DM-SETUP or DM-SETUP PRES to the tester according to the IUT capability	
Selection EN 300 396-8-4 [6]	A3/13 Initiating a new call by pre-emption	
Preamble	idle_channel_occupation	
Postamble	None (after waiting time over T303 and N303 times)	

6.1.2.3 IUT is in TX occupation state

DMO_MSREP2_DMCC_CM_BV_TXO_01		Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Initiate the release of a call	
Test description	The tester issues an implicit send containing a "DMCC_RELEASE_request" to the IUT	
Pass criteria	The IUT sends DM-RELEASE to the tester and returns to idle, state observable by the channel being free	
Selection EN 300 396-8-4 [6]	Initiate_CM_call	
Preamble	Idle_to_TX_occupation	
Postamble	None	

DMO_MSREP2_DMCC_CM_BV_TXO_02		Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Initiate end of transmission (TX-ceased)	
Test description	The tester issues an implicit send containing a "DMCC_TX_CEASED_request" to the IUT	
Pass criteria	The IUT sends TX CEASED to the tester and moves to state TX reservation	
Selection EN 300 396-8-4 [6]	Initiate_CM_Call	
Preamble	Idle_to_TX_occupation	
Postamble	TX_reservation_to_idle	

MSC011

DMO_MSREP2_DMCC_CM_BV_TXO_03	Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Receive pre-emption for an ongoing individual call
Test description	The tester sends a DM-PREEMPT to the IUT, containing the address of master
Pass criteria	The IUT sends back DM-PRE_ACCEPT and moves to "call_active_RX_reservation". During the reservation period, when the IUT attempts a call setup, it shall issue a DM-TX REQUEST to initiate a changeover, and this is the pass criteria NOTE: This call setup is controlled by the tester using an implicit send containing a "DMCC_SETUP_request".
Selection EN 300 396-8-4 [6]	Initiate_CM_Call
Preamble	Idle_to_TX_occupation
Postamble	RX_Reservation_to_idle

MSC034

DMO_MSREP2_DMCC_CM_BV_TXO_04	Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Receive pre-emption for a new individual call
Test description	The tester sends a DM-PREEMPT to the IUT, containing the address of a new pre-empter
Pass criteria	The IUT sends back DM-PRE_ACCEPT to the pre-empter, followed by a DM-RELEASE to the slave and moves to idle (observable by the channel being free)
Selection EN 300 396-8-4 [6]	Initiate_CM_Call
Preamble	Idle_to_TX_occupation
Postamble	None

MSC038

DMO_MSREP2_DMCC_CM_BV_TXO_05	Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Receive and reject pre-emption for a new individual call
Test description	The tester sends a DM-PREEMPT to the IUT, containing an unacceptable priority
Pass criteria	The IUT sends back DM-REJECT to the pre-empter
Selection EN 300 396-8-4 [6]	Initiate_CM_Call
Preamble	Idle_to_TX_occupation
Postamble	TX_occupation_to_idle

6.1.2.4 IUT is in RX occupation state

Test the capability to initiate release of a call MSC028: not observable, dropped.

Test the capability to receive release of a call MSC03: not observable, dropped.

DMO_MSREP2_DMCC_CM_BV_RO_01	Reference: EN 300 396-4 [1], 6.2.4.2
Purpose	Receive normal end of transmission (TX Cease)
Test description	The tester sends DM-TX CEASED to the IUT
Pass criteria	The IUT moves to state "call active RX Reservation". During the reservation period, when the IUT attempts a call setup, it shall issue a DM-TX REQUEST to initiate a changeover, and this is the pass criteria
Selection EN 300 396-8-4 [6]	A.2/1 Circuit mode call
Preamble	Idle_to_RX_occupation
Postamble	RX_Reservation_to_idle

MSC030

DMO_MSREP2_DMCC_CM_BV_RO_02		Reference: EN 300 396-4 [1], 6.2.4.2
Purpose	Initiate pre-emption to establish a call (either ongoing or new call)	
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT. The IUT sends DM-PREEMPT (address = master) to the tester, which accepts it by answering DM-PRE_ACCEPT	
Pass criteria	The IUT sends DM-SETUP or DM-SETUP PRES to the tester according to the IUT capability	
Selection EN 300 396-8-4 [6]	A.3/12 Initiate pre-emption in ongoing call	
Preamble	Idle_to_RX_occupation	
Postamble	In order to clear the call with presence check, the tester sends a DM-DISCONNECT PDU and waits for the DM-RELEASE PDU. In order to clear the call without presence check, the postamble TX_occupation_to_idle is used	

MSC029 MSC026

DMO_MSREP2_DMCC_CM_BV_RO_03		Reference: EN 300 396-4 [1], 6.2.4.2
Purpose	Handle the reject of a pre-emption	
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT. The IUT sends DM-PREEMPT (address = master) to the tester, which does not accept it and answers DM-REJECT	
Pass criteria	The IUT stays in state "call_active_RX_occupation" when receiving DM-REJECT. To check it, the tester sends DM-TX CEASED which brings the IUT to "call_active_RX_reservation". During the reservation period, when the IUT attempts a call setup, it shall issue a DM-TX REQUEST to initiate a changeover, and this is the pass criteria NOTE: This call setup is controlled by the tester using an implicit send containing a "DMCC_SETUP_request".	
Selection EN 300 396-8-4 [6]	A.3/12 Initiate pre-emption in ongoing call	
Preamble	Idle_to_RX_occupation	
Postamble	Tester issues a DM-REJECT followed by RX_Occupation_to_idle	

MSC027

DMO_MSREP2_DMCC_CM_BV_RO_04		Reference: EN 300 396-4 [1], 6.2.4.2
Purpose	Reception of the ongoing call setup	
Test description	The tester sends a DM-SETUP PRES PDU related to the ongoing call	
Pass criteria	Verify that the IUT sends the DM-CONNECT PDU	
Selection EN 300 396-8-4 [6]	A.3/6 Accept call set-up with presence check	
Preamble	Idle_to_RX_occupation	
Postamble	Tester sends the DM-CONNECT ACK PDU and then the postamble TX_occupation_to_idle is used to clear the call	

6.1.2.5 IUT is in TX reservation state

DMO_MSREP2_DMCC_CM_BV_TR_01		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Initiate release of a call	
Test description	The tester issues an implicit send containing a "DMCC_RELEASE_request" to the IUT	
Pass criteria	The IUT sends DM-RELEASE to the tester	
Selection EN 300 396-8-4 [6]	Initiate_CM_Call	
Preamble	Idle_to_TX_reservation	
Postamble	None	

MSC017

DMO_MSREP2_DMCC_CM_BV_TR_02		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive and accept pre-emption for a new call	
Test description	The tester sends DM-PREEMPT to the IUT for a new call	
Pass criteria	The IUT sends DM-PRE_ACCEPT to the tester	
Selection EN 300 396-8-4 [6]	Initiate_CM_Call	
Preamble	Idle_to_TX_reservation	
Postamble	None	

MSC015

DMO_MSREP2_DMCC_CM_BV_TR_03		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive and accept pre-emption for continuation of ongoing call	
Test description	The tester sends DM-PREEMPT to the IUT for a call continuation	
Pass criteria	The IUT sends DM-PRE_ACCEPT to the tester	
Selection EN 300 396-8-4 [6]	Initiate_CM_Call	
Preamble	Idle_to_TX_reservation	
Postamble	RX_reservation_to_idle	

MSC016

DMO_MSREP2_DMCC_CM_BV_TR_04		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive and accept changeover	
Test description	The tester sends DM-TX REQUEST to the IUT indicating call continuation	
Pass criteria	The IUT sends DM-TX ACCEPT to the tester	
Selection EN 300 396-8-4 [6]	A.3/14 Call changeover	
Preamble	Idle_to_TX_reservation	
Postamble	RX_Reservation_to_idle	

MSC012

DMO_MSREP2_DMCC_CM_BV_TR_05		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Establish CM call	
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT	
Pass criteria	The IUT sends DM-SETUP or DM-SETUP PRES to the tester according to the IUT capability	
Selection EN 300 396-8-4 [6]	A.3/3 Initiate call setup with or without presence check OR A.3/4	
Preamble	Idle_to_TX_reservation	
Postamble	In order to clear the call with presence check, the tester sends a DM-DISCONNECT PDU and waits for the DM-RELEASE PDU. In order to clear the call without presence check, the postamble TX_occupation_to_idle is used	

MSC013

DMO_MSREP2_DMCC_CM_BV_TR_06		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive incoming CM call	
Test description	The tester sends DM-SETUP PRES to the IUT	
Pass criteria	The IUT sends DM-CONNECT PDU to the tester, as the setup request was accepted by the IUT	
Selection EN 300 396-8-4 [6]	A.3/6 Accept call setup with presence check	
Preamble	Idle_to_TX_reservation	
Postamble	The tester sends the DM-CONNECT ACK PDU and the call is cleared using the postamble RX_occupation_To_Idle	

MSC014

DMO_MSREP2_DMCC_CM_BV_TR_07	Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive and reject pre-emption for a new call
Test description	The tester sends DM-PREEMPT containing an unacceptable priority level to the IUT indicating new call
Pass criteria	The IUT sends DM-REJECT PDU to the tester and remains in the same state
Selection EN 300 396-8-4 [6]	Initiate_CM_Call
Preamble	Idle_to_TX_reservation
Postamble	TX_reservation_to_idle

DMO_MSREP2_DMCC_CM_BV_TR_08	Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive and reject changeover
Test description	The tester sends DM-TX REQUEST including an unacceptable priority level to the IUT indicating call continuation
Pass criteria	The IUT sends DM-REJECT PDU to the tester
Selection EN 300 396-8-4 [6]	A.3/15 Accept call Changeover
Preamble	Idle_to_TX_reservation
Postamble	TX_Reservation_to_idle

6.1.2.6 IUT is in RX reservation state

Test the capability to initiate release of a group call MSCA05: not visible.

Test the capability to receive release, MSC046, not visible.

DMO_MSREP2_DMCC_CM_BV_RR_01	Reference: EN 300 396-4 [1], 6.2.5.2
Purpose	Receive incoming CM call
Test description	The tester sends DM-SETUP PRES to the IUT
Pass criteria	The IUT sends DM-CONNECT to the tester, as the setup request was accepted by the IUT
Selection EN 300 396-8-4 [6]	A.3/6 Accept call setup with presence check
Preamble	Idle_to_RX_reservation
Postamble	RX_occupation_to_idle

MSC045

DMO_MSREP2_DMCC_CM_BV_RR_02	Reference: EN 300 396-4 [1], 6.2.6
Purpose	Initiate pre-emption to establish new CM call
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT
Pass criteria	The IUT sends DM-PREEMPT to the tester, which is accepted by the tester (DM-PRE ACCEPT sent back by the tester). Then the IUT sends DM-SETUP or DM-SETUP PRES to the tester according to the IUT capability
Selection EN 300 396-8-4 [6]	A.3/13 Initiate a new call by pre-emption
Preamble	Idle_to_RX_reservation
Postamble	In order to clear the call with presence check, the tester sends a DM-DISCONNECT PDU and waits for the DM-RELEASE PDU. In order to clear the call without presence check, the postamble TX_occupation_to_idle is used

MSCAx5

DMO_MSREP2_DMCC_CM_BV_RR_03		Reference: EN 300 396-4 [1], 6.2.5.2
Purpose	Initiate changeover to establish ongoing CM call	
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT	
Pass criteria	The IUT sends DM-TX REQUEST to the tester, which is accepted by the tester (DM-TX ACCEPT sent back by the tester). Then the IUT sends back DM-SETUP or DM-SETUP PRES to the tester according to the IUT capability	
Selection EN 300 396-8-4 [6]	A.3/14 Initiate Call changeover	
Preamble	Idle_to_RX_reservation	
Postamble	In order to clear the call with presence check, the tester sends a DM-DISCONNECT PDU and waits for the DM-RELEASE PDU. In order to clear the call without presence check, the postamble TX_occupation_to_idle is used	

MSC043 or MSCAx4

DMO_MSREP2_DMCC_CM_BV_RR_04		Reference: EN 300 396-4 [1], 6.2.5.2
Purpose	Handle the reject of a changeover request	
Test description	The tester issues an implicit send containing a "DMCC_SETUP_request" to the IUT. The IUT sends DM-TX REQUEST to the tester, which is rejected by the tester (DM-REJECT sent back by the tester)	
Pass criteria	The IUT remains in the same state "call active RX reservation". To test it, the tester issues again an implicit send containing a "DMCC_SETUP_request" to the IUT. The IUT sends DM-TX REQUEST to the tester	
Selection EN 300 396-8-4 [6]	A.3/14 Initiate Call changeover	
Preamble	Idle_to_RX_reservation	
Postamble	The tester sends DM-DISCONNECT to return the IUT to idle	

MSC047

6.1.3 MS-REP2 CM timer tests

6.1.3.1 DT303 Response to DM-SETUP PRES timer

DMO_MSREP2_DMCC_CM_TI_01		Reference: EN 300 396-4 [1], 6.2.2.1
Purpose	Time out DT303 for response to DM SET UP PRES	
Test description	The tester sends an implicit send (DMCC_SETUP_request) to the IUT to cause a call setup. Then the IUT sends DM-SETUP PRES to the tester, The tester does not answer within DT303 time	
Pass criteria (M)	After DT303 time out, the IUT sends the DM-RELEASE PDU or the DM-SETUP PRES PDU again to the tester until DN303 or DN304 attempts are made	
Selection EN 300 396-8-4 [6]	A.3/4 Initiate call setup with presence check	
Preamble	None	
Postamble	The tester sends back DM-DISCONNECT to reject the call	

6.1.3.2 DT311 Call transaction timer

DMO_MSREP2_DMCC_CM_TI_02		Reference: EN 300 396-4 [1], 6.2.4.1
Purpose	Initiate end of transmission after time out of DT311 call transaction timer	
Test description	After time out on DT311, the IUT sends DM-TX CEASED PDU and enters state Call Active TX Reservation	
Pass criteria	The DM-TX CEASED PDU is received by the tester	
Selection EN 300 396-8-4 [6]	Initiate_CM_call	
Preamble	Idle_to_TX_occupation	
Postamble	TX_reservation_to_idle	

6.2 DMCC Short data service (SDS)

Test group objective: To test the behaviour of the DMCC SDS entity of the IUT.

Condition: IUT implements Short Data Service and for some TPs, together with CM calls.

6.2.1 MS-REP2 SDS Capability tests

To test the basic capabilities of the SDS module of the IUT, when operating in unacknowledged service.

DMO_MSREP2_DMCC_SDS_CA_01	Reference: EN 300 396-4 [1], 6.3.1.1.1
Purpose	Establish a SDS with unacknowledged service
Test description	The tester issues an implicit send containing a "DMCC_SDS_UNITDATA request" to the IUT which selects the appropriate data types according to the IUT capabilities
Pass criteria (M)	The IUT sends DM-SDS_UDATA to the tester, up to DN314 or DN317 times
Selection EN 300 396-8-4 [6]	A.9/1 Send unacknowledged SDS, group or individual address OR A.10/1
Preamble	None
Postamble	None

MSC079

Handling of a second simultaneous call

DMO_MSREP2_DMCC_SDS_CA_02	Reference: EN 300 396-4 [1], 6.3.1.1.1
Purpose	Establish a SDS call, while a first call is established
Test description	The tester sends an implicit send to the IUT to cause a call setup. The IUT sends DM-SETUP to the tester, meaning the call is established in one channel. Then the tester issues an implicit send containing a "DMCC_SDS_UNITDATA request" or a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities
Pass criteria (M)	The IUT sends DM-SDS_UDATA or DM-SDS_DATA to the tester, up to DN314 or DN317 times, meaning a SDS call is established on second channel
Selection EN 300 396-8-4 [6]	Initiate CM_call AND Initiate-SDS-Call
Preamble	None
Postamble	None

6.2.2 MS-REP2 SDS Valid behaviour tests

6.2.2.1 IUT is in idle state, channel is free

DMO_MSREP2_DMCC_SDS_BV_ID_01	Reference: EN 300 396-4 [1], 6.3.1.1.2
Purpose	Establish an SDS with acknowledged service
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. When the tester receives DM-SDS DATA, it sends back DM-SDS ACK to the IUT
Pass criteria	The IUT comes back to idle, and no new DM-SDS DATA is sent by the IUT within a given time (greater than DT316) meaning the SDS call was successful
Selection EN 300 396-8-4 [6]	A.10/2 Send acknowledged SDS with or without data in ACK OR A.10/3
Preamble	None
Postamble	None

MSC078

DMO_MSREP2_DMCC_SDS_BV_ID_02		Reference: EN 300 396-4 [1], 6.3.1.1.2
Purpose	Handle the reject of an SDS with acknowledged service	
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. When the tester receives DM-SDS DATA, it sends back DM-REJECT to the IUT	
Pass criteria	The IUT comes back to idle, and no new DM-SDS DATA is sent by the IUT within a given time (greater than DT316) meaning the SDS call was properly aborted	
Selection EN 300 396-8-4 [6]	A.10/2 Send acknowledged SDS without or with data in ACK OR A.10/3	
Preamble	None	
Postamble	None	

DMO_MSREP2_DMCC_SDS_BV_ID_03		Reference: EN 300 396-4 [1], 6.3.2.2
Purpose	Receive an incoming SDS with acknowledged service	
Test description	The tester sends DM-SDS DATA containing the appropriate data for the IUT capabilities, to the IUT	
Pass criteria	The IUT sends back to the tester DM-SDS ACK containing data or not, according to the IUT capabilities	
Selection EN 300 396-8-4 [6]	A.12/2 Receive acknowledged SDS without or with data in ACK OR A.12/3	
Preamble	None	
Postamble	None	

MSC072

DMO_MSREP2_DMCC_SDS_BV_ID_04		Reference: EN 300 396-4 [1], 6.3.2.2
Purpose	Receive an incoming SDS with acknowledged service and with FCS	
Test description	The tester sends the DM-SDS DATA PDU containing the appropriate data depending on the IUT capabilities and including FCS	
Pass criteria	Verify that the IUT sends the DM-SDS ACK PDU containing or not data	
Selection EN 300 396-8-4 [6]	A.12/2 Receive acknowledged SDS without or with data in ACK OR A.12/3	
Preamble	None	
Postamble	None	

DMO_MSREP2_DMCC_SDS_BV_ID_05		Reference: EN 300 396-4 [1], 6.3.1.1.2
Purpose	Establish an SDS with acknowledged service using the FCS	
Test description	The tester issues an implicit send to cause the IUT to initiate a SDS. When the tester receives the DM-SDS DATA PDU with FCS, it sends back the DM-SDS ACK PDU	
Pass criteria	Verify that the SDS call was successful, i.e. the IUT does not send any DM-SDS DATA PDU again	
Selection EN 300 396-8-4 [6]	A.10/2 Send acknowledged SDS without or with data in ACK OR A.10/3	
Preamble	None	
Postamble	None	

6.2.2.2 IUT is in idle state, channel is busy

DMO_MSREP2_DMCC_SDS_BV_IB_01	Reference: EN 300 396-4 [1], 6.3.1.2
Purpose	Initiate pre-emption then establish a new SDS with acknowledged service
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-PREEMPT to the tester which accepts it by answering DM-PRE_ACCEPT
Pass criteria	The IUT sends DM-SDS DATA to the tester when Pre-emption is accepted.
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends acknowledged SDS (A.10/2 OR A.10/3)
Preamble	Idle_channel_occupation
Postamble	None

MSC076

DMO_MSREP2_DMCC_SDS_BV_IB_02	Reference: EN 300 396-4 [1], 6.3.1.2
Purpose	Initiate pre-emption then establish a new SDS with unacknowledged service
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which accepts it by answering the DM-PRE_ACCEPT PDU
Pass criteria	Verify that the IUT sends the DM-SDS UDATA PDU
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends unacknowledged SDS (A.9/1 OR A.10/1)
Preamble	Idle_channel_occupation
Postamble	None

DMO_MSREP2_DMCC_SDS_BV_IB_03	Reference: EN 300 396-4 [1], 6.3.1.2
Purpose	Handle the reject of pre-emption for acknowledged SDS
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-PREEMPT to the tester which does not accept it and answers DM-REJECT
Pass criteria	The IUT comes back to idle, and no new DM-SDS DATA is sent by the IUT within a given time (greater than DT316) meaning the SDS call was properly aborted
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends acknowledged SDS (A.10/2 OR A.10/3)
Preamble	Idle_channel_occupation
Postamble	None

MSC075

DMO_MSREP2_DMCC_SDS_BV_IB_04	Reference: EN 300 396-4 [1], 6.3.1.2
Purpose	Handle the rejection of pre-emption for SDS with unacknowledged service
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which rejects by answering the DM-REJECT PDU
Pass criteria	Verify that the IUT does not send the DM-SDS UDATA PDU within a time greater than DT316, meaning that the SDS call was properly aborted
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends unacknowledged SDS (A.9/1 OR A.10/1)
Preamble	Idle_channel_occupation
Postamble	None

6.2.2.3 IUT is in state TX occupation

No TP are possible from this state because though it is an optional feature, the wording of the specifications, using many times the word "may" does not oblige all implementations to behave as described here.

6.2.2.4 IUT is in RX occupation state

DMO_MSREP2_DMCC_SDS_BV_RO_01	Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate pre-empt then establish ongoing SDS
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-PREEMPT to the tester which accepts it by answering DM-PRE_ACCEPT
Pass criteria	The IUT sends DM-SDS DATA to the tester when Pre-emption is accepted
Selection EN 300 396-8-4 [6]	A.13/4 Send short data after pre-emption of a CM call (ongoing AND call) and sends acknowledged SDS (A.10/2 OR A.10/3)
Preamble	Idle_to_RX_occupation
Postamble	None

MSCAx1

DMO_MSREP2_DMCC_SDS_BV_RO_02	Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate pre-emption to establish ongoing unacknowledged SDS
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which accepts it by answering the DM-PRE ACCEPT PDU
Pass criteria	Verify that the IUT sends the DM-SDS UDATA PDU
Selection EN 300 396-8-4 [6]	A.13/4 Send short data after pre-emption of a CM call (ongoing AND call) and sends unacknowledged SDS (A.9/1 OR A.10/1)
Preamble	Idle_to_RX_occupation
Postamble	None

DMO_MSREP2_DMCC_SDS_BV_RO_03	Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate pre-empt then establish new SDS
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-PREEMPT to the tester which accepts it by answering DM-PRE_ACCEPT
Pass criteria	The IUT sends DM-SDS DATA to the tester when Pre-emption is accepted
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends acknowledged SDS (A.10/2 OR A.10/3)
Preamble	Idle_to_RX_occupation
Postamble	None

DMO_MSREP2_DMCC_SDS_BV_RO_04	Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate pre-emption to establish new unacknowledged SDS
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which accepts it by answering the DM-PRE ACCEPT PDU
Pass criteria	Verify that the IUT sends the DM-SDS UDATA PDU
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new call) AND and sends unacknowledged SDS (A.10/1 OR A.9/1)
Preamble	Idle_to_RX_occupation
Postamble	None

DMO_MSREP2_DMCC_SDS_BV_RO_05		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Handle the rejection of pre-emption to establish ongoing acknowledged SDS	
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which rejects it by answering the DM-PRE REJECT PDU	
Pass criteria	Verify that the IUT does not send the DM-SDS DATA PDU	
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (ongoing AND call) and sends acknowledged SDS (A.10/2 OR A.10/3)	
Preamble	Idle_to_RX_occupation	
Postamble	RX_occupation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_RO_06		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Handle the rejection of pre-emption to establish ongoing unacknowledged SDS	
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which rejects it by answering the DM-PRE REJECT PDU	
Pass criteria	Verify that the IUT does not send the DM-SDS UDATA PDU	
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (ongoing call) AND and sends unacknowledged SDS (A.9/1 OR A.10/1)	
Preamble	Idle_to_RX_occupation	
Postamble	RX_occupation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_RO_08		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Handle the rejection of pre-emption to establish new acknowledged SDS	
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which rejects it by answering the DM-PRE REJECT PDU	
Pass criteria	Verify that the IUT does not send the DM-SDS DATA PDU	
Selection EN 300 396-8-4 [6]	A.13/4 Send short data after pre-emption of a CM call (new call) AND and sends acknowledged SDS (A.10/2 OR A.10/3)	
Preamble	Idle_to_RX_occupation	
Postamble	RX_occupation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_RO_09		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Handle the rejection of pre-emption to establish new unacknowledged SDS	
Test description	The tester in the CALL ACTIVE TX OCCUPATION state with an other MS. The tester issues an implicit send to cause the IUT to initiate a SDS transfer. As the channel is busy, the IUT sends the DM-PREEMPT PDU to the tester which rejects it by answering the DM-PRE REJECT PDU	
Pass criteria	Verify that the IUT does not send the DM-SDS UDATA PDU	
Selection EN 300 396-8-4 [6]	A.13/2 Send short data after pre-emption of a CM call (new AND call) and sends unacknowledged SDS (A.9/1 OR A.10/1)	
Preamble	Idle_to_RX_occupation	
Postamble	RX_occupation_to_idle	

6.2.2.5 IUT is in TX reservation state

DMO_MSREP2_DMCC_SDS_BV_TR_01		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate SDS from TX_reservation state	
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. DM-SDS DATA PDU tells it is a transaction within a circuit mode call	
Pass criteria	The IUT sends DM-SDS DATA to the tester	
Selection EN 300 396-8-4 [6]	A.13/6 Send SDS as master of a CM call and IUT supports AND acknowledged SDS (A.10/2 OR A.10/3)	
Preamble	Idle_to_TX_reservation	
Postamble	The tester issues a DM-REJECT, followed by TX_Reservation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_TR_02		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate unacknowledged SDS from TX reservation state	
Test description	The tester issues an implicit send to cause the IUT to transfer unacknowledged short data	
Pass criteria	Verify that the IUT sends the DM-SDS UDATA PDU	
Selection EN 300 396-8-4 [6]	A.13/6 Send SDS as master of a CM call and IUT supports AND unacknowledge SDS (A.9/1 OR A.10/1)	
Preamble	Idle_to_TX_reservation	
Postamble	The tester issues a DM-REJECT, followed by TX_Reservation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_TR_03		Reference: EN 300 396-4 [1], 6.2.5.1
Purpose	Receive incoming acknowledged SDS	
Test description	The tester sends DM-SDS DATA to the IUT	
Pass criteria	The IUT sends DM-SDS ACK to the tester, meaning the request was accepted by the IUT	
Selection EN 300 396-8-4 [6]	A.12/2 Receive acknowledged SDS without or with data in ACK OR A.12/3	
Preamble	Idle_to_TX_reservation	
Postamble	None	

6.2.2.6 IUT is in RX reservation state

DMO_MSREP2_DMCC_SDS_BV_RR_01		Reference: EN 300 396-4 [1], 6.2.5.2
Purpose	Receive incoming acknowledged SDS	
Test description	The tester sends DM-SDS DATA to the IUT	
Pass criteria	The IUT sends DM-SDS ACK to the tester, meaning the request was accepted by the IUT	
Selection EN 300 396-8-4 [6]	A.12/2 Receive acknowledged SDS without or with data in ACK OR A.12/3	
Preamble	Idle_to_RX_reservation	
Postamble	None	

MSCAx3

DMO_MSREP2_DMCC_SDS_BV_RR_02		Reference: EN 300 396-4 [1], 6.2.5.2
Purpose	Receive incoming acknowledged SDS within the CM call	
Test description	The tester sends the DM-SDS DATA PDU to the IUT. The SDS are sent as a transaction within the CM call	
Pass criteria	Verify that the IUT sends back the DM-SDS ACK PDU. Verify that the IUT stay in the RX reservation state	
Selection EN 300 396-8-4 [6]	A.12/2 Receive acknowledged SDS without or with data in ACK OR A.12/3	
Preamble	Idle_to_RX_reservation	
Postamble	RX_Reservation_to_idle	

DMO_MSREP2_DMCC_SDS_BV_RR_03		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate changeover then establish ongoing SDS	
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-TX REQUEST to the tester which accepts it by answering DM-TX ACCEPT	
Pass criteria	The IUT sends DM-SDS DATA to the tester when changeover is accepted	
Selection EN 300 396-8-4 [6]	A.13/5 Send acknowledged SDS after changeover AND (A.10/2 OR A.10/3)	
Preamble	Idle_to_RX_reservation	
Postamble	Tester sends the DM-SDS ACK PDU and TX_Reservation_to_idle	
DMO_MSREP2_DMCC_SDS_BV_RR_04		Reference: EN 300 396-4 [1], 6.3.1.4
Purpose	Initiate changeover then establish ongoing unacknowledged SDS	
Test description	The tester issues an implicit send containing a "DMCC_SDS_UDATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. As the channel is busy, the IUT sends a DM-TX REQUEST to the tester which accepts it by answering DM-TX ACCEPT	
Pass criteria	The IUT sends DM-SDS UDATA to the tester when changeover is accepted	
Selection EN 300 396-8-4 [6]	A.13/5 Send unacknowledged SDS after changeover AND (A.9/1 OR A.10/1)	
Preamble	Idle_to_RX_reservation	
Postamble	Tester sends the DM-SDS ACK PDU and TX_Reservation_to_idle	

6.2.3 MS-REP2 SDS Timer tests

6.2.3.1 DT316 Response to DM-SDS DATA timer

DMO_MSREP2_DMCC_SDS_TI_01		Reference: EN 300 396-4 [1], 6.3.1.1.2
Purpose	Time out on DT316 timer and retry an SDS DATA with acknowledged service	
Test description	The tester issues an implicit send containing a "DMCC_SDS_DATA request" to the IUT which selects the appropriate data types according to the IUT capabilities. When the tester receives DM-SDS DATA, it waits and DOES NOT send back DM-SDS ACK to the IUT within DT316	
Pass criteria (M)	The IUT sends a new DM-SDS DATA within a given time (greater than DT316) and for a number of times less than DN316 or DN317 attempt number, meaning the time out for SDS response was successful When DN316 or DN317 expires, the IUT sends a DMCC-SDS-REPORT	
Selection EN 300 396-8-4 [6]	A.10/2 Send acknowledged SDS without or with data in ACK OR A.10/3	
Preamble	None	
Postamble	The tester sends back DM-SDS ACK to the IUT	

6.3 DMO MS-REP2 layer 2: MAC layer

6.3.1 MS-REP2 MAC capability tests

Test group objective: To test DM-MAC basic capability: fill bit mechanism.

DMO_MSREP2_MAC_CA_01		Reference: EN 300 396-4 [1], 8.5.5
Purpose	Fill bit addition mechanism in sending mode	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call. The IUT sends a DMAC-SYNC containing DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU	
Pass criteria	Check that DMAC-SYNC PDU sent by the IUT is correct, meaning that the IUT fill bit addition mechanism works properly	
Selection EN 300 396-8-4 [6]	Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	In the case of CM call: 1) terminate to establish the call if CM call with presence check 2) then TX_occupation_to_idle	

DMO_MSREP2_MAC_CA_02		Reference: EN 300 396-4 [1], 8.5.5
Purpose	Fill bit deletion mechanism in sending mode	
Test description	The tester initiates a CM call by transmitting to the IUT a DMAC-SYNC PDU containing DM-SETUP PRES SDU	
Pass criteria	Check that the IUT sends back the DMAC-SYNC PDU containing the DM-CONNECT SDU, meaning that the IUT fill bit deletion mechanism works properly	
Selection EN 300 396-8-4 [6]	A.2/6 IUT supports the receipt of call setup with presence check	
Preamble	None	
Postamble	RX_occupation_to_idle	

6.3.2 MS-REP2 MAC valid behaviour tests

6.3.2.1 DM channel usage procedures

Test group objective: To test DM channel usage procedures of the DM-MAC entity.

DMO_MSREP2_MAC_BV_CU_01		Reference: EN 300 396-4 [1], 8.4.5.1
Purpose	Initiation of CM or SDS call in DSB	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call, according to IUT capabilities	
Pass criteria (M)	Verify that the IUT sends the DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU in all four timeslots in each signalling frame, except in the timeslot 4 of the final signalling frame	
Selection EN 300 396-8-4 [6]	Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	In the case of CM call: 1) terminate to establish the call if CM call with presence check 2) then TX_occupation_to_idle	

DMO_MSREP2_MAC_BV_CU_02		Reference: EN 300 396-4 [1], 8.5.1, 8.4.5.1.7
Purpose	Transmission of the DM-OCCUPIED SDU when the channel is busy	
Test description	The tester sends an implicit send to cause the IUT to initiate a CM call with or without presence check	
Pass criteria	Verify that once the channel is occupied, the IUT generates the DM-OCCUPIED SDU in time slot 3 of frames 6, 12 and 18	
Selection EN 300 396-8-4 [6]	Initiate_CM_call	
Preamble	Idle_to_TX_occupation	
Postamble	TX_occupation_to_idle	

DMO_MSREP2_MAC_BV_CU_03		Reference: EN 300 396-4 [1], 8.4.6.1
Purpose	Generation and transmission of layer 2 DM-RESERVED SDU	
Test description	The IUT MAC starts transmitting the DM-RESERVED SDUs	
Pass criteria	Check that DMAC-SYNC containing DM-RESERVED SDUs are sent in timeslots 1 and 3 of frames 6, 12, and 18 using the same priority level as for the DM-TX CEASED SDUs	
Selection EN 300 396-8-4 [6]	Initiate_CM_call	
Preamble	Idle_to_TX_occupation	
Postamble	TX occupation to idle	

DMO_MSREP2_MAC_BV_CU_04		Reference: EN 300 396-4 [1], 8.4.6.1
Purpose	The sending of the DM-RESERVED SDU stopped when the reservation period expired	
Test description	The tester issues an implicit send to cause the IUT to send the DM-TX CEASED SDU	
Pass criteria	Verify that in CALL ACTIVE TX RESERVATION STATE, the IUT sends the DMAC-SYNC PDU containing the DM-RESERVED until the "reservation time remaining" equals 0	
Selection EN 300 396-8-4 [6]	Initiate_CM_call	
Preamble	Idle_to_TX_occupation	
Postamble	None	

DMO_MSREP2_MAC_BV_CU_05		Reference: EN 300 396-4 [1], 8.4.6.2
Purpose	Transmission of DM-SDS OCCUPIED SDU when transmitting SDS data	
Test description	The tester issues an implicit to cause the IUT to initiate a SDS call. Then the IUT sends the DMAC-SYNC PDU containing the DM-SDS DATA or DM-SDS UDATA SDU	
Pass criteria	During the transmission of the SDS data, the IUT issues DMAC-SYNC containing DM-SDS OCCUPIED SDU. It is transmitted in DSB in time slot 3 of frames 6 and 12 and in time slots 1 and 3 of frame 18	
Selection EN 300 396-8-4 [6]	A.6/1 Short Data Service send data	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_CU_06		Reference: EN 300 396-4 [1], 8.4.7.1, 8.4.7.2, 8.5.6.1
Purpose	Specified number of re-transmission is fulfilled with respect to the frame count down element	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call. The IUT is transmitting a DMAC-SYNC PDU containing DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU, repeated in the number of frames indicated by the frame count down element	
Pass criteria	The number of repeated transmissions in consecutive frames corresponds to the value provided in the frame count down element, and the PDU is not repeated after the one with frame count down element value 0 (absence observed during a period of time)	
Selection EN 300 396-8-4 [6]	Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_CU_07		Reference: EN 300 396-4 [1], 8.4.7.5, 8.5.4
Purpose	Fragmentation	
Test description	The tester issues an implicit send such that the IUT initiates a SDS by transmitting DM-SDS DATA or DM-SDS UDATA PDU with data type 2, 3 or 4 in order to receive a fragmented message	
Pass criteria	DMAC-SYNC with Fragmentation flag set to value 1, followed by n times DMAC-FRAG then ending with DMAC-END	
Selection EN 300 396-8-4 [6]	A.22/5 Fragmentation and user defined data 2, 3 or 4 and one AND of the conditions expressed in: Initiate_SDS_call (A.14/4 OR A.14/3 OR A.14/2) AND Initiate_SDS_call	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_CU_08 (M)		Reference: EN 300 396-4 [1], 8.4.7.12
Purpose	Channel A usage, normal mode	
Test description	The tester issues an implicit send such that the IUT initiates a CM or SDS call. The IUT sends a DMAC-SYNC containing a DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA PDU according to the IUT capabilities	
Pass criteria	The A/B channel usage in DMAC-SYNC is set to value 00, meaning A channel usage, normal mode	
Selection EN 300 396-8-4 [6]	Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	None	

6.3.2.2 Signalling messages procedures

Test group objective: To test the signalling procedures of the DM-MAC entity.

DMO_MSREP2_MAC_BV_SM_01		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Addressing in synchronization burst for initiation of a group addressed call	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call. The IUT sends a DMAC-SYNC PDU containing a DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU	
Pass criteria	Verify the SSI and MNI destination elements in the DMAC-SYNC header and verify that the destination address type is set to 0	
Selection EN 300 396-8-4 [6]	A.38/1 Addressing in synchronization burst and AND one of the conditions expressed in Initiate_CM_or_SDS_call Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_01b (M)		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Addressing in synchronization burst. Repeater address	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call. The IUT sends a DMAC-SYNC PDU containing a DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU	
Pass criteria	Verify that, in the DMAC-SYNC PDU, the communication type element is set to 01, and that the 10 bit repeater address is in SCH/H	
Selection EN 300 396-8-4 [6]	A.38/1 Addressing in synchronization burst and AND one of the conditions expressed in Initiate_CM_or_SDS_call Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_01C (M)		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Addressing in synchronization burst. Master/slave link flag	
Test description	The tester issues an implicit send to cause the IUT to initiate a CM or SDS call. The IUT sends a DMAC-SYNC PDU containing a DM-SETUP or DM-SETUP PRES or DM-SDS DATA or DM-SDS UDATA SDU	
Pass criteria	Verify that, in the DMAC-SYNC PDU, the master/slave link flag is set to 1, as the master is transmitting	
Selection EN 300 396-8-4 [6]	A.38/1 Addressing in synchronization burst and AND one of the conditions expressed in Initiate_CM_or_SDS_call Initiate_CM_or_SDS_call	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_02		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Synchronization burst for a random access message	
Test description	The tester issues an implicit send to cause the IUT to initiate pre-emption. As the channel is busy, the IUT sends a DM-PREEMPT request (address = master) to the tester	
Pass criteria	Check that the DM-PREEMPT request is sent using DMAC-SYNC PDU	
Selection EN 300 396-8-4 [6]	A.2/10 Initiate pre-emption in ongoing call	
Preamble	Idle_to_RX_occupation	
Postamble	Tester issues a DM-REJECT followed by RX_occupation_to_idle	

DMO_MSREP2_MAC_BV_SM_03		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Addressing in synchronization burst for a random access message	
Test description	The tester issues an implicit to cause the IUT to initiate a CM call. The IUT sends DM-PREEMPT (address = master) to the tester	
Pass criteria	The destination address of the DMAC-SYNC containing DM-PREEMPT sent by the IUT is the current master DM-MS layer 2 address	
Selection EN 300 396-8-4 [6]	A.38/1 Addressing in synchronization burst and Initiate pre-emption in ongoing call AND and one of the conditions expressed in: A.2/12 Initiate_CM_call AND Initiate_CM_call	
Preamble	Idle_to_RX_occupation	
Postamble	Tester issues a DM-REJECT followed by RX_occupation_to_idle	

DMO_MSREP2_MAC_BV_SM_04		Reference: EN 300 396-4 [1], 8.5.2.1.1
Purpose	Addressing in synchronization burst in the DM-OCCUPIED PDU	
Test description	The tester sends an implicit send to cause the IUT to initiate a CM call. The IUT sends the DMAC-SYNC PDU containing the DM-SETUP or DM-SETUP PRES SDU. Once the call is established (the channel is busy), the IUT sends the DMAC-SYNC PDU containing the DM-OCCUPIED SDU	
Pass criteria	The MNI and source address elements in a DMAC-SYNC containing DM-OCCUPIED SDU are the same as the ones used in the DM-SETUP	
Selection EN 300 396-8-4 [6]	A.38/1 Addressing in synchronization burst AND and one of the conditions expressed in: Initiate_CM_call Initiate_CM_call	
Preamble	None	
Postamble	TX_occupation_to_idle	

DMO_MSREP2_MAC_BV_SM_05 (M)		Reference: EN 300 396-4 [1], 8.4.7.5, 8.5.4.1
Purpose	Fragmentation PDUs are sent in consecutive frames	
Test description	The tester issues an implicit send to cause the IUT to initiate a SDS call with fragmentation	
Pass criteria	Verify that the DMAC-FRAG PDUs and DMAC-END PDU are sent in consecutive slot 1 of frames 1 to 17	
Selection EN 300 396-8-4 [6]	A.38/5 AND Fragmentation and (A.13/2 OR User defined data 4 or 2 or 3 and A.13/3 OR A.13/4) AND (A.9/2 OR A.9/3) Send acknowledged SDS with or without data in ACK	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_06		Reference: EN 300 396-4 [1], 8.4.7.5, 8.5.4.1
Purpose	For acknowledged data message sent using fragmentation, if the acknowledge is sent to the IUT then no re-transmission takes place	
Test description	The tester issues an implicit send to cause the IUT to initiate a SDS call with fragmentation. The IUT sends the DMAC-SYNC, DMAC FRAG and DMAC END PDUs	
Pass criteria	Verify that after receipt of the acknowledge SDU, the IUT does not re-transmit the SDS data	
Selection EN 300 396-8-4 [6]	A.38/5 AND Fragmentation and (A.13/2 OR User defined data 4 or 2 or 3 and A.13/3 OR A.13/4) AND (A.9/2 OR A.9/3) Send acknowledged SDS with or without data in ACK	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_07		Reference: EN 300 396-4 [1], 8.5.4.2
Purpose	Reconstruction procedure for acknowledged SDS data messages	
Test description	The tester sends a fragmented SDS data type 2 3 or 4 message	
Pass criteria	Check that the IUT sends back a DMAC-SYNC containing SDS-DATA ACK, indicating that the message was received without error	
Selection EN 300 396-8-4 [6]	A.38/6 AND Reconstruction and A.13/2 AND User defined data 2 and A.13/3 AND User defined data 3 and A.13/4 AND User defined data 4 and (A.11/2 OR Receive acknowledged SDS with or A.11/3) without data in ACK	
Preamble	None	
Postamble	None	

DMO_MSREP2_MAC_BV_SM_08	Reference: EN 300 396-4 [1], 8.5.7.3.6
Purpose	Abandoning random access attempt. (DN213)
Test description	The tester issues an implicit send to cause the IUT to initiate pre-emption. The IUT sends DM-PREEMPT request (address = master) to the tester. The tester does not answer the request by DM-PRE ACCEPT
Pass criteria	The IUT stops sending DMAC-SYNC containing DM-PREEMPT after DN213 times for a non emergency message and 2*DN213 for an emergency message
Selection EN 300 396-8-4 [6]	A.2/12 Initiate pre-emption in ongoing call
Preamble	Idle_to_RX_occupation
Postamble	None

DMO_MSREP2_MAC_BV_SM_09	Reference: EN 300 396-4 [1], 8.5.7.2.1
Purpose	Pre-emption flag in the DM-OCCUPIED SDU
Test description	In TX occupation state, the IUT generates and sends the DMAC-SYNC PDU containing the DM-OCCUPIED SDU
Pass criteria	Verify that when generating the DM-OCCUPIED SDU, the IUT set the pre-emption request flag to 1
Selection EN 300 396-8-4 [6]	Initiate_CM_call
Preamble	Idle_to_TX_occupation
Postamble	TX_occupation_to_idle

DMO_MSREP2_MAC_BV_SM_10	Reference: EN 300 396-4 [1], 8.5.7.2.1
Purpose	Request and change over flags in the DM-RESERVED SDU
Test description	In TX reservation state, the IUT generates and sends the DMAC-SYNC PDU containing the DM-RESERVED SDU
Pass criteria	Verify that when generating the DM-RESERVED SDU, the IUT set the requests flag and the changeover flag to 1
Selection EN 300 396-8-4 [6]	Initiate_CM_call
Preamble	Idle_to_TX_Reservation
Postamble	TX_Reservation_to_idle

DMO_MSREP2_MAC_BV_SM_11	Reference: EN 300 396-4 [1], clause 8.5.7.3.6
Purpose	Cease random access attempt for timing request after receipt of a rejection
Test description	The tester issues an implicit send to cause the IUT to initiate a timing change request. The IUT sends the DMAC-SYNC PDU containing the DM-TIMING REQUEST SDU, to the tester that answers the DMAC-SYNC PDU containing the DM-TIMING ACK SDU with a reject
Pass criteria	Verify that the IUT accept this rejection and does not send the timing change request any more
Selection EN 300 396-8-4 [6]	IUT accepts CM call
Preamble	Idle_to_RX_Occupation
Postamble	RX_Occupation_to_idle

6.3.3 MS-REP2 MAC timer tests

DMO_MSREP2_MAC_TI_01 (M)		Reference: EN 300 396-4 [1], 8.5.7.2.3
Purpose	Response to a pre-emption request within time DT211	
Test description	The tester sends a DM-PREEMPT to the IUT, containing the address of the master. The IUT sends back DM-PRE ACCEPT	
Pass criteria	Check that the IUT MAC sends back DMAC-SYNC containing DM-PRE ACCEPT within time DT211minus 3 frames, and that it repeats the same DM-PRE ACCEPT SDU the number of frames specified	
Selection EN 300 396-8-4 [6]	A.2/11 Accept call pre-emption	
Preamble	Idle_to_TX_occupation	
Postamble	RX_Reservation_to_idle	

Annex A (informative): Bibliography

ETSI ETS 300 396-1: "Terrestrial Trunked Radio (TETRA); Technical requirements for Direct Mode Operation (DMO); Part 1: General network design".

History

Document history		
Edition 1	October 1999	Public Enquiry PE 200007: 1999-10-20 to 2000-02-18
	October 2000	Converted to an EN between Public Enquiry and Vote
V1.1.1	October 2000	Vote V 20001222: 2000-10-23 to 2000-12-22