

ETSI TS 125 331 V3.5.0 (2000-12)

Technical Specification

Universal Mobile Telecommunications System (UMTS); RRC Protocol Specification (3GPP TS 25.331 version 3.5.0 Release 1999)



Reference

RTS/TSGR-0225331UR4

Keywords

UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <http://www.etsi.org/tb/status/>

If you find errors in the present document, send your comment to:
editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2000.

All rights reserved.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key .

Contents

Foreword.....	21
1 Scope.....	22
2 References.....	22
3 Definitions and abbreviations.....	23
3.1 Definitions.....	23
3.2 Abbreviations.....	23
4 General.....	25
4.1 Overview of the specification.....	25
4.2 RRC Layer Model.....	26
5 RRC Functions and Services provided to upper layers.....	29
5.1 RRC Functions.....	29
5.2 RRC Services provided to upper layers.....	29
5.3 Primitives between RRC and upper layers.....	29
6 Services expected from lower layers.....	30
6.1 Services expected from Layer 2.....	30
6.2 Services expected from Layer 1.....	30
6.3 Signalling Radio Bearers.....	30
7 Protocol states.....	30
7.1 Overview of RRC States and State Transitions including GSM.....	30
7.2 Processes in UE modes/states.....	31
7.2.1 UE Idle mode.....	31
7.2.2 UTRA RRC Connected mode.....	31
7.2.2.1 URA_PCH or CELL_PCH state.....	31
7.2.2.2 CELL_FACH state.....	32
7.2.2.3 CELL_DCH state.....	32
8 RRC procedures.....	32
8.1 RRC Connection Management Procedures.....	33
8.1.1 Broadcast of system information.....	33
8.1.1.1 General.....	33
8.1.1.1.1 System information structure.....	33
8.1.1.1.2 System information blocks.....	33
8.1.1.1.3 Segmentation and concatenation of system information blocks.....	37
8.1.1.1.4 Re-assembly of segments.....	38
8.1.1.1.5 Scheduling of system information.....	38
8.1.1.2 Initiation.....	39
8.1.1.3 Reception of SYSTEM INFORMATION messages by the UE.....	39
8.1.1.4 Reception of SYSTEM INFORMATION messages broadcast on a FACH transport channel.....	39
8.1.1.5 Actions upon reception of the Master Information Block and Scheduling Block(s).....	40
8.1.1.6 Actions upon reception of system information blocks.....	41
8.1.1.6.1 System Information Block type 1.....	42
8.1.1.6.2 System Information Block type 2.....	43
8.1.1.6.3 System Information Block type 3.....	43
8.1.1.6.4 System Information Block type 4.....	43
8.1.1.6.5 System Information Block type 5.....	43
8.1.1.6.6 System Information Block type 6.....	44
8.1.1.6.7 System Information Block type 7.....	45
8.1.1.6.8 System Information Block type 8.....	45
8.1.1.6.9 System Information Block type 9.....	45
8.1.1.6.10 System Information Block type 10.....	45
8.1.1.6.11 System Information Block type 11.....	45
8.1.1.6.12 System Information Block type 12.....	46
8.1.1.6.13 System Information Block type 13.....	47

8.1.1.6.14	System Information Block type 14	47
8.1.1.6.15	System Information Block type 15	47
8.1.1.6.16	System Information Block type 16	49
8.1.1.6.17	System Information Block type 17	49
8.1.1.7	Modification of system information	49
8.1.1.7.1	Modification of system information blocks using a value tag	50
8.1.1.7.2	Synchronised modification of system information blocks	50
8.1.1.7.3	Actions upon system information change	50
8.1.1.7.4	Actions upon expiry of a system information expiry timer	51
8.1.2	Paging	51
8.1.2.1	General	51
8.1.2.2	Initiation	51
8.1.2.3	Reception of a PAGING TYPE 1 message by the UE	52
8.1.3	RRC connection establishment	52
8.1.3.1	General	53
8.1.3.2	Initiation	53
8.1.3.3	RRC CONNECTION REQUEST message contents to set	53
8.1.3.4	Reception of an RRC CONNECTION REQUEST message by the UTRAN	53
8.1.3.5	Cell re-selection or T300 timeout	54
8.1.3.6	Reception of an RRC CONNECTION SETUP message by the UE	54
8.1.3.7	Physical channel failure or cell re-selection	55
8.1.3.8	Invalid RRC CONNECTION SETUP message	56
8.1.3.9	Reception of an RRC CONNECTION REJECT message by the UE	56
8.1.3.10	Invalid RRC CONNECTION REJECT message	58
8.1.4	RRC connection release	59
8.1.4.1	General	60
8.1.4.2	Initiation	60
8.1.4.3	Reception of an RRC CONNECTION RELEASE message by the UE	60
8.1.4.4	Invalid RRC CONNECTION RELEASE message	61
8.1.4.5	Cell re-selection or radio link failure	62
8.1.4.6	Expiry of timer T308, unacknowledged mode transmission	62
8.1.4.7	Successful transmission of the RRC CONNECTION RELEASE COMPLETE message, acknowledged mode transmission	62
8.1.4.8	Reception of an RRC CONNECTION RELEASE COMPLETE message by UTRAN	62
8.1.4.9	Unsuccessful transmission of the RRC CONNECTION RELEASE COMPLETE message, acknowledged mode transmission	62
8.1.4.10	Detection of loss of dedicated physical channel by UTRAN in CELL_DCH state	63
8.1.4.11	Failure to receive RRC CONNECTION RELEASE COMPLETE message by UTRAN	63
8.1.5	Void	63
8.1.6	Transmission of UE capability information	63
8.1.6.1	General	63
8.1.6.2	Initiation	63
8.1.6.3	Reception of an UE CAPABILITY INFORMATION message by the UTRAN	64
8.1.6.4	Reception of the UE CAPABILITY INFORMATION CONFIRM message by the UE	64
8.1.6.5	Invalid UE CAPABILITY INFORMATION CONFIRM message	64
8.1.6.6	T304 timeout	64
8.1.7	UE capability enquiry	65
8.1.7.1	General	65
8.1.7.2	Initiation	65
8.1.7.3	Reception of an UE CAPABILITY ENQUIRY message by the UE	65
8.1.7.4	Invalid UE CAPABILITY ENQUIRY message	65
8.1.8	Initial Direct transfer	66
8.1.8.1	General	66
8.1.8.2	Initiation of Initial direct transfer procedure in the UE	66
8.1.8.3	Reception of INITIAL DIRECT TRANSFER message by the UTRAN	67
8.1.9	Downlink Direct transfer	67
8.1.9.1	General	67
8.1.9.2	Initiation of downlink direct transfer procedure in the UTRAN	67
8.1.9.3	Reception of a DOWNLINK DIRECT TRANSFER message by the UE	68
8.1.9.4	Invalid DOWNLINK DIRECT TRANSFER message	68
8.1.10	Uplink Direct transfer	68
8.1.10.1	General	68

8.1.10.2	Initiation of uplink direct transfer procedure in the UE.....	68
8.1.10.3	Reception of UPLINK DIRECT TRANSFER message by the UTRAN.....	69
8.1.11	UE dedicated paging	69
8.1.11.1	General.....	69
8.1.11.2	Initiation.....	69
8.1.11.3	Reception of a PAGING TYPE 2 message by the UE.....	70
8.1.11.4	Invalid PAGING TYPE 2 message.....	70
8.1.12	Security mode control	70
8.1.12.1	General.....	70
8.1.12.2	Initiation.....	71
8.1.12.2.1	Ciphering configuration change.....	71
8.1.12.2.2	Integrity protection configuration change.....	71
8.1.12.3	Reception of SECURITY MODE COMMAND message by the UE.....	71
8.1.12.4	Cipher activation time too short.....	72
8.1.12.5	Reception of SECURITY MODE COMPLETE message by the UTRAN.....	73
8.1.12.6	Invalid SECURITY MODE COMMAND message	73
8.1.13	Signalling connection release procedure	74
8.1.13.1	General.....	74
8.1.13.2	Initiation of SIGNALLING CONNECTION RELEASE by the UTRAN.....	74
8.1.13.3	Reception of SIGNALLING CONNECTION RELEASE by the UE	74
8.1.13.4	Invalid SIGNALLING CONNECTION RELEASE message	74
8.1.14	Signalling connection release request procedure.....	75
8.1.14.1	General.....	75
8.1.14.2	Initiation.....	75
8.1.14.3	Reception of SIGNALLING CONNECTION RELEASE REQUEST by the UTRAN	75
8.1.15	Counter check.....	76
8.1.15.1	General.....	76
8.1.15.2	Initiation.....	76
8.1.15.3	Reception of a COUNTER CHECK message by the UE	76
8.1.15.4	Reception of the COUNTER CHECK RESPONSE message by UTRAN.....	77
8.1.15.5	Cell re-selection	77
8.1.15.6	Invalid COUNTER CHECK message	77
8.2	Radio Bearer control procedures.....	77
8.2.1	Radio bearer establishment.....	77
8.2.2	Reconfiguration procedures	78
8.2.2.1	General	80
8.2.2.2	Initiation	80
8.2.2.3	Reception of RADIO BEARER SETUP or RADIO BEARER RECONFIGURATION or RADIO BEARER RELEASE or TRANSPORT CHANNEL RECONFIGURATION or PHYSICAL CHANNEL RECONFIGURATION message by the UE	81
8.2.2.4	Transmission of a response message by the UE, normal case.....	83
8.2.2.5	Reception of a response message by the UTRAN, normal case.....	84
8.2.2.6	Unsupported configuration in the UE.....	85
8.2.2.7	Physical channel failure.....	85
8.2.2.8	Cell re-selection.....	86
8.2.2.9	Transmission of a response message by the UE, failure case.....	87
8.2.2.10	Reception of a response message by the UTRAN, failure case	87
8.2.2.11	Invalid configuration.....	88
8.2.2.12	Incompatible simultaneous reconfiguration.....	88
8.2.2.13	Invalid received message	88
8.2.3	Radio bearer release	89
8.2.4	Transport channel reconfiguration	89
8.2.5	Transport format combination control.....	89
8.2.5.1	General	89
8.2.5.2	Initiation	89
8.2.5.3	Reception of a TRANSPORT FORMAT COMBINATION CONTROL message by the UE	90
8.2.5.4	Invalid configuration	90
8.2.5.5	Invalid TRANSPORT FORMAT COMBINATION CONTROL message	91
8.2.6	Physical channel reconfiguration	91
8.2.7	Physical Shared Channel Allocation [TDD only]	91
8.2.7.1	General	91
8.2.7.2	Initiation	91

8.2.7.3	Reception of a PHYSICAL SHARED CHANNEL ALLOCATION message by the UE	92
8.2.7.4	Invalid PHYSICAL SHARED CHANNEL ALLOCATION message	93
8.2.8	PUSCH capacity request [TDD only]	94
8.2.8.1	General	94
8.2.8.2	Initiation	94
8.2.8.3	PUSCH CAPACITY REQUEST message contents to set	94
8.2.8.4	Reception of a PUSCH CAPACITY REQUEST message by the UTRAN	95
8.2.8.5	T310 expiry	95
8.2.9	Void	96
8.2.10	Uplink Physical Channel Control [TDD only]	96
8.2.10.1	General	96
8.2.10.2	Initiation	96
8.2.10.3	Reception of UPLINK PHYSICAL CHANNEL CONTROL message by the UE	96
8.2.10.4	Invalid UPLINK PHYSICAL CHANNEL CONTROL message	96
8.2.11	Physical channel reconfiguration failure	97
8.2.11.1	General	97
8.2.11.2	Runtime error due to overlapping compressed mode configuration	97
8.3	RRC connection mobility procedures	98
8.3.1	Cell update	98
8.3.1.1	General	100
8.3.1.2	Initiation	101
8.3.1.3	CELL UPDATE / URA UPDATE message contents to set	103
8.3.1.4	T305 expiry and the UE detects "out of service area"	104
8.3.1.4.1	Re-entering "in service area"	105
8.3.1.4.2	Expiry of timer T307	105
8.3.1.5	Reception of an CELL UPDATE/URA UPDATE message by the UTRAN	105
8.3.1.6	Reception of the CELL UPDATE CONFIRM/URA UPDATE CONFIRM message by the UE	106
8.3.1.7	Transmission of a response message to UTRAN	108
8.3.1.8	Unsupported configuration by the UE	110
8.3.1.9	Invalid configuration	110
8.3.1.10	Confirmation error of URA ID list	111
8.3.1.11	Invalid CELL UPDATE CONFIRM/URA UPDATE CONFIRM message	111
8.3.1.12	T302 expiry, URA reselection, cell reselection or DPCH failure	112
8.3.1.13	T314 expiry	112
8.3.1.14	T315 expiry	113
8.3.1.15	Reception of the UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN	114
8.3.2	URA update	114
8.3.3	UTRAN mobility information	114
8.3.3.1	General	114
8.3.3.2	Initiation	114
8.3.3.3	Reception of UTRAN MOBILITY INFORMATION message by the UE	114
8.3.3.4	Reception of an UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN	115
8.3.3.5	Cell re-selection	115
8.3.3.6	Invalid UTRAN MOBILITY INFORMATION message	116
8.3.4	Active set update	116
8.3.4.1	General	117
8.3.4.2	Initiation	117
8.3.4.3	Reception of an ACTIVE SET UPDATE message by the UE	117
8.3.4.4	Unsupported configuration in the UE	118
8.3.4.5	Invalid configuration	118
8.3.4.6	Reception of the ACTIVE SET UPDATE COMPLETE message by the UTRAN	119
8.3.4.7	Reception of the ACTIVE SET UPDATE FAILURE message by the UTRAN	119
8.3.4.8	Invalid ACTIVE SET UPDATE message	119
8.3.5	Hard handover	119
8.3.5.1	Timing re-initialised hard handover	119
8.3.5.1.1	General	119
8.3.5.1.2	Initiation	119
8.3.5.2	Timing-maintained hard handover	120
8.3.5.2.1	General	120
8.3.5.2.2	Initiation	120
8.3.6	Inter-RAT handover to UTRAN	120
8.3.6.1	General	120

8.3.6.2	Initiation	121
8.3.6.3	Reception of HANDOVER TO UTRAN COMMAND message by the UE	121
8.3.6.4	Invalid Handover to UTRAN command message	122
8.3.6.5	UE fails to perform handover	122
8.3.6.6	Reception of message HANDOVER TO UTRAN COMPLETE by the UTRAN	122
8.3.7	Inter-RAT handover from UTRAN	122
8.3.7.1	General	123
8.3.7.2	Initiation	123
8.3.7.3	Reception of a HANDOVER FROM UTRAN COMMAND message by the UE	123
8.3.7.4	Successful completion of the inter-RAT handover	123
8.3.7.5	UE fails to complete requested handover	124
8.3.7.6	Invalid HANDOVER FROM UTRAN COMMAND message	124
8.3.7.7	Reception of a HANDOVER FROM UTRAN FAILURE message by UTRAN	125
8.3.8	Inter-RAT cell reselection to UTRAN	125
8.3.8.1	General	125
8.3.8.2	Initiation	125
8.3.8.3	UE fails to complete an inter-RAT cell reselection	125
8.3.9	Inter-RAT cell reselection from UTRAN	125
8.3.9.1	General	125
8.3.9.2	Initiation	125
8.3.9.3	Successful cell reselection	125
8.3.9.4	Expiry of timer T309	126
8.3.10	Inter-RAT cell change order to UTRAN	126
8.3.10.1	General	126
8.3.10.2	Initiation	126
8.3.10.3	UE fails to complete an inter-RAT cell change order	126
8.3.11	Inter-RAT cell change order from UTRAN	126
8.3.11.1	General	127
8.3.11.2	Initiation	127
8.3.11.3	Reception of an CELL CHANGE ORDER FROM UTRAN message by the UE	127
8.3.11.4	Successful completion of the cell change order	127
8.3.11.5	UE fails to complete requested cell change order	127
8.4	Measurement procedures	128
8.4.1	Measurement control	129
8.4.1.1	General	130
8.4.1.2	Initiation	130
8.4.1.3	Reception of MEASUREMENT CONTROL by the UE	130
8.4.1.4	Unsupported measurement in the UE	131
8.4.1.5	Invalid MEASUREMENT CONTROL message	132
8.4.1.6	Measurements after transition from CELL_DCH to CELL_FACH state	132
8.4.1.6.1	Intra-frequency measurement	132
8.4.1.6.2	Inter-frequency measurement	132
8.4.1.6.3	Inter-RAT measurement	132
8.4.1.6.4	Quality measurement	133
8.4.1.6.5	UE internal measurement	133
8.4.1.6.6	Traffic volume measurement	133
8.4.1.7	Measurements after transition from CELL_FACH to CELL_DCH state	134
8.4.1.7.1	Intra-frequency measurement	134
8.4.1.7.2	Inter-frequency measurement	134
8.4.1.7.3	Inter-RAT measurement	134
8.4.1.7.4	Traffic volume measurement	134
8.4.1.8	Measurements after transition from idle mode to CELL_DCH state	135
8.4.1.8.1	Intra-frequency measurement	135
8.4.1.8.2	Inter-frequency measurement	135
8.4.1.8.3	Inter-RAT measurement	135
8.4.1.8.4	Traffic volume measurement	135
8.4.1.9	Measurements after transition from idle mode to CELL_FACH state	136
8.4.1.9.1	Intra-frequency measurement	136
8.4.1.9.2	Inter-frequency measurement	136
8.4.1.9.3	Inter-RAT measurement	136
8.4.1.9.4	Traffic volume measurement	136
8.4.1.10	Measurements when measurement object is no longer valid	137

8.4.1.10.1	Traffic volume measurement	137
8.4.2	Measurement report.....	137
8.4.2.1	General	137
8.4.2.2	Initiation.....	137
8.4.3	Assistance Data Delivery	138
8.4.3.1	General	138
8.4.3.2	Initiation	138
8.4.3.3	Reception of ASSISTANCE DATA DELIVERY message by the UE	138
8.4.3.4	Invalid ASSISTANCE DATA DELIVERY message	138
8.5	General procedures	139
8.5.1	Selection of initial UE identity	139
8.5.2	Actions when entering idle mode from connected mode	139
8.5.3	Open loop power control upon establishment of DPCCH.....	139
8.5.4	Physical channel establishment criteria.....	140
8.5.5	Actions in "out of service area" and "in service area"	140
8.5.5.1	Detection of "out of service" area	140
8.5.5.1.1	Actions following detection of "out of service" area in URA_PCH or CELL_PCH state.....	140
8.5.5.1.2	Actions following detection of "out of service" area in CELL_FACH state	140
8.5.5.2	Detection of "in service" area.....	140
8.5.5.2.1	Actions following Re-entry into "in service area" in URA_PCH or CELL_PCH state.....	140
8.5.5.2.2	Actions following re-entry into "in service area" in CELL_FACH state.....	140
8.5.5.3	T316 expiry	141
8.5.5.4	T317 expiry	141
8.5.6	Radio link failure criteria	141
8.5.7	Open loop power control.....	141
8.5.8	Hyper Frame Numbers	142
8.5.9	START	143
8.5.10	Integrity protection.....	143
8.5.10.1	Integrity protection in downlink	144
8.5.10.2	Integrity protection in uplink	144
8.5.10.3	Calculation of message authentication code	145
8.5.11	FACH measurement occasion calculation.....	145
8.5.12	Establishment of Access Service Classes	145
8.5.13	Mapping of Access Classes to Access Service Classes.....	146
8.5.14	PLMN Type Selection.....	146
8.5.15	CFN calculation.....	146
8.5.15.1	Initialisation in CELL_DCH state on transiting from CELL_FACH state	146
8.5.15.2	Initialisation in CELL_DCH state at hard handover.....	146
8.5.15.3	Initialisation for CELL_FACH.....	147
8.5.15.4	Initialisation after intersystem handover to UTRAN.....	147
8.6	Generic actions on receipt and absence of an information element	148
8.6.1	CN information elements	148
8.6.1.1	CN domain specific DRX cycle length coefficient	148
8.6.1.2	CN information info	148
8.6.1.3	Signalling connection release indication	148
8.6.2	UTRAN mobility information elements.....	148
8.6.2.1	URA identity	148
8.6.3	UE information elements.....	149
8.6.3.1	Activation time	149
8.6.3.2	UTRAN DRX Cycle length coefficient.....	149
8.6.3.3	Generic state transition rules depending on received information elements.....	149
8.6.3.4	Ciphering mode info.....	150
8.6.3.5	Integrity protection mode info.....	151
8.6.3.6	Configuration of CTCH occasions	152
8.6.3.7	UL Timing Advance.....	152
8.6.3.8	Integrity check info	152
8.6.3.9	New C-RNTI.....	152
8.6.3.10	New U-RNTI	153
8.6.3.11	RRC transaction identifier	153
8.6.4	Radio bearer information elements.....	153
8.6.4.1	Signalling RB information to setup list	153
8.6.4.2	RAB information for setup.....	154

8.6.4.3	RB information to setup	154
8.6.4.4	RB information to be affected	154
8.6.4.5	RB information to reconfigure	155
8.6.4.6	RB information to release.....	155
8.6.4.7	RB with PDCP information.....	155
8.6.4.8	RB mapping info	155
8.6.4.9	RLC Info	156
8.6.4.10	PDCP Info.....	156
8.6.4.11	PDCP SN Info.....	156
8.6.4.12	NAS Synchronisation Indicator	157
8.6.5	Transport channel information elements	157
8.6.5.1	Transport Format Set.....	157
8.6.5.2	Transport format combination set	157
8.6.5.3	Transport format combination subset.....	158
8.6.5.4	DCH quality target	159
8.6.6	Physical channel information elements	159
8.6.6.1	Frequency info.....	159
8.6.6.2	PRACH info and PRACH selection	159
8.6.6.3	Selection of RACH TTI	160
8.6.6.4	Downlink information for each radio link.....	161
8.6.6.5	Secondary CCPCH info.....	161
8.6.6.6	Uplink DPCH info.....	161
8.6.6.7	Downlink DPCH info.....	162
8.6.6.8	Maximum allowed UL TX power	162
8.6.6.9	PDSCH with SHO DCH Info (FDD only)	162
8.6.6.10	PDSCH code mapping (FDD only)	162
8.6.6.11	Uplink DPCH power control info.....	162
8.6.6.12	Secondary CPICH info	163
8.6.6.13	Primary CPICH usage for channel estimation	163
8.6.6.14	DPCH frame offset	163
8.6.6.15	DPCH Compressed mode info.....	163
8.6.6.16	Repetition period, Repetition length, Offset	164
8.6.6.17	Primary CCPCH info	164
8.6.6.18	Primary CPICH info	165
8.6.6.19	CPCH SET Info (FDD only).....	165
8.6.6.20	CPCH set ID (FDD only).....	165
8.6.6.21	Default DPCH Offset Value	165
8.6.6.22	Secondary Scrambling Code, Code Number	166
8.6.6.23	PDSCH Power Control info.....	166
8.6.7	Measurement information elements	166
8.6.7.1	Measurement validity	166
8.6.7.2	Filter coefficient	166
8.6.7.3	Intra-frequency/Inter-frequency/Inter-RAT cell info list	167
8.6.7.4	Intra-frequency measurement quantity	168
8.6.7.5	Inter-RAT measurement quantity.....	168
8.6.7.6	Inter-RAT reporting quantity	169
8.6.7.7	Cell Reporting Quantities	169
8.6.7.8	Periodical Reporting Criteria.....	170
8.6.7.9	Reporting Cell Status.....	170
8.6.7.10	Traffic Volume Measurement.....	171
8.6.7.11	Traffic Volume Reporting Criteria	171
8.6.7.12	FACH measurement occasion info	171
9	Handling of unknown, unforeseen and erroneous protocol data	172
9.1	General	172
9.2	ASN.1 violation or encoding error.....	172
9.3	Unknown or unforeseen message type.....	172
9.4	Unknown or unforeseen information element value, mandatory information element	173
9.5	Conditional information element error.....	173
9.6	Unknown or unforeseen information element value, conditional information element	173
9.7	Unknown or unforeseen information element value, optional information element	174

9.8	Unexpected message extension.....	174
10	Message and information element functional definition and content	176
10.1	General	176
10.1.1	Protocol extensions.....	177
10.1.1.1	Extension of an information element with additional values or choices.....	177
10.1.1.2	Extension of a message with additional information elements	177
10.2	Radio Resource Control messages	179
10.2.1	ACTIVE SET UPDATE	179
10.2.2	ACTIVE SET UPDATE COMPLETE	181
10.2.3	ACTIVE SET UPDATE FAILURE.....	181
10.2.4	ASSISTANCE DATA DELIVERY	182
10.2.5	CELL CHANGE ORDER FROM UTRAN.....	182
10.2.6	CELL CHANGE FAILURE FROM UTRAN.....	183
10.2.7	CELL UPDATE	183
10.2.8	CELL UPDATE CONFIRM	185
10.2.9	COUNTER CHECK.....	188
10.2.10	COUNTER CHECK RESPONSE.....	188
10.2.11	DOWNLINK DIRECT TRANSFER	189
10.2.12	HANDOVER TO UTRAN COMMAND	189
10.2.13	HANDOVER TO UTRAN COMPLETE.....	192
10.2.14	INITIAL DIRECT TRANSFER.....	192
10.2.15	HANDOVER FROM UTRAN COMMAND	193
10.2.16	HANDOVER FROM UTRAN FAILURE.....	194
10.2.17	MEASUREMENT CONTROL.....	194
10.2.18	MEASUREMENT CONTROL FAILURE.....	196
10.2.19	MEASUREMENT REPORT	196
10.2.20	PAGING TYPE 1.....	197
10.2.21	PAGING TYPE 2.....	198
10.2.22	PHYSICAL CHANNEL RECONFIGURATION.....	199
10.2.23	PHYSICAL CHANNEL RECONFIGURATION COMPLETE.....	200
10.2.24	PHYSICAL CHANNEL RECONFIGURATION FAILURE.....	201
10.2.25	PHYSICAL SHARED CHANNEL ALLOCATION.....	202
10.2.26	PUSCH CAPACITY REQUEST	204
10.2.27	RADIO BEARER RECONFIGURATION.....	205
10.2.28	RADIO BEARER RECONFIGURATION COMPLETE.....	208
10.2.29	RADIO BEARER RECONFIGURATION FAILURE.....	208
10.2.30	RADIO BEARER RELEASE	209
10.2.31	RADIO BEARER RELEASE COMPLETE	212
10.2.32	RADIO BEARER RELEASE FAILURE	213
10.2.33	RADIO BEARER SETUP	214
10.2.34	RADIO BEARER SETUP COMPLETE	217
10.2.35	RADIO BEARER SETUP FAILURE.....	218
10.2.36	RRC CONNECTION REJECT.....	219
10.2.37	RRC CONNECTION RELEASE.....	219
10.2.38	RRC CONNECTION RELEASE COMPLETE.....	220
10.2.39	RRC CONNECTION REQUEST	221
10.2.40	RRC CONNECTION SETUP.....	222
10.2.41	RRC CONNECTION SETUP COMPLETE.....	223
10.2.42	RRC STATUS.....	224
10.2.43	SECURITY MODE COMMAND	225
10.2.44	SECURITY MODE COMPLETE.....	225
10.2.45	SECURITY MODE FAILURE.....	226
10.2.46	SIGNALLING CONNECTION RELEASE	226
10.2.47	SIGNALLING CONNECTION RELEASE REQUEST.....	227
10.2.48	SYSTEM INFORMATION	228
10.2.48.1	First Segment.....	229
10.2.48.2	First Segment (short)	229
10.2.48.3	Subsequent Segment.....	230
10.2.48.4	Last Segment	230
10.2.48.5	Last Segment (short).....	230
10.2.48.6	Complete SIB.....	230

10.2.48.7	Complete SIB (short)	231
10.2.48.8	System Information Blocks	231
10.2.48.8.1	Master Information Block	231
10.2.48.8.2	Scheduling Block 1	232
10.2.48.8.3	Scheduling Block 2	232
10.2.48.8.4	System Information Block type 1	233
10.2.48.8.5	System Information Block type 2	233
10.2.48.8.6	System Information Block type 3	233
10.2.48.8.7	System Information Block type 4	234
10.2.48.8.8	System Information Block type 5	235
10.2.48.8.9	System Information Block type 6	236
10.2.48.8.10	System Information Block type 7	236
10.2.48.8.11	System Information Block type 8	237
10.2.48.8.12	System Information Block type 9	237
10.2.48.8.13	System Information Block type 10	238
10.2.48.8.14	System Information Block type 11	238
10.2.48.8.15	System Information Block type 12	238
10.2.48.8.16	System Information Block type 13	238
10.2.48.8.16.1	System Information Block type 13.1	239
10.2.48.8.16.2	System Information Block type 13.2	239
10.2.48.8.16.3	System Information Block type 13.3	239
10.2.48.8.16.4	System Information Block type 13.4	240
10.2.48.8.17	System Information Block type 14	240
10.2.48.8.18	System Information Block type 15	240
10.2.48.8.18.1	System Information Block type 15.1	241
10.2.48.8.18.2	System Information Block type 15.2	242
10.2.48.8.18.3	System Information Block type 15.3	243
10.2.48.8.19	System Information Block type 16	244
10.2.48.8.20	System Information Block type 17	245
10.2.49	SYSTEM INFORMATION CHANGE INDICATION	245
10.2.50	TRANSPORT CHANNEL RECONFIGURATION	246
10.2.51	TRANSPORT CHANNEL RECONFIGURATION COMPLETE	248
10.2.52	TRANSPORT CHANNEL RECONFIGURATION FAILURE	249
10.2.53	TRANSPORT FORMAT COMBINATION CONTROL	250
10.2.54	TRANSPORT FORMAT COMBINATION CONTROL FAILURE	251
10.2.55	UE CAPABILITY ENQUIRY	252
10.2.56	UE CAPABILITY INFORMATION	252
10.2.57	UE CAPABILITY INFORMATION CONFIRM	253
10.2.58	UPLINK DIRECT TRANSFER	253
10.2.59	UPLINK PHYSICAL CHANNEL CONTROL	253
10.2.60	URA UPDATE	254
10.2.61	URA UPDATE CONFIRM	256
10.2.62	UTRAN MOBILITY INFORMATION	257
10.2.63	UTRAN MOBILITY INFORMATION CONFIRM	257
10.2.64	UTRAN MOBILITY INFORMATION FAILURE	259
10.3	Information element functional definitions	259
10.3.1	CN Information elements	259
10.3.1.1	CN domain identity	259
10.3.1.2	CN Domain System Information	260
10.3.1.3	CN Information info	260
10.3.1.4	IMEI	260
10.3.1.5	IMSI (GSM-MAP)	261
10.3.1.6	Intra Domain NAS Node Selector	261
10.3.1.7	Location Area Identification	261
10.3.1.8	NAS message	261
10.3.1.9	NAS system information (GSM-MAP)	261
10.3.1.10	Paging record type identifier	262
10.3.1.11	PLMN identity	262
10.3.1.12	PLMN Type	262
10.3.1.13	P-TMSI (GSM-MAP)	262
10.3.1.14	RAB identity	262
10.3.1.15	Routing Area Code	263

10.3.1.16	Routing Area Identification	263
10.3.1.17	TMSI (GSM-MAP)	263
10.3.2	UTRAN mobility Information elements.....	263
10.3.2.1	Cell Access Restriction.....	263
10.3.2.2	Cell identity	264
10.3.2.3	Cell selection and re-selection info for SIB3/4.....	264
10.3.2.4	Cell selection and re-selection info for SIB11/12.....	267
10.3.2.5	Mapping Info	268
10.3.2.6	URA identity.....	268
10.3.3	UE Information elements	269
10.3.3.1	Activation time	269
10.3.3.2	Capability Update Requirement.....	269
10.3.3.3	Cell update cause	269
10.3.3.4	Ciphering Algorithm.....	270
10.3.3.5	Ciphering mode info	270
10.3.3.6	CN domain specific DRX cycle length coefficient.....	270
10.3.3.7	CPCH Parameters	270
10.3.3.8	C-RNTI.....	272
10.3.3.9	DRAC system information	272
10.3.3.10	RRC State Indicator	272
10.3.3.11	Establishment cause.....	272
10.3.3.12	Expiration Time Factor.....	273
10.3.3.13	Failure cause	273
10.3.3.14	Failure cause and error information.....	274
10.3.3.15	Initial UE identity	274
10.3.3.16	Integrity check info.....	275
10.3.3.17	Integrity protection activation info	275
10.3.3.18	Integrity protection Algorithm.....	275
10.3.3.19	Integrity protection mode info	276
10.3.3.20	Maximum bit rate	276
10.3.3.21	Measurement capability.....	277
10.3.3.22	Paging cause	278
10.3.3.23	Paging record.....	279
10.3.3.24	PDCP capability.....	279
10.3.3.25	Physical channel capability.....	281
10.3.3.26	Protocol error cause	282
10.3.3.27	Protocol error indicator.....	282
10.3.3.28	RB timer indicator	283
10.3.3.29	Redirection info	283
10.3.3.30	Re-establishment timer	283
10.3.3.31	Rejection cause	283
10.3.3.32	Release cause.....	283
10.3.3.33	RF capability.....	284
10.3.3.34	RLC capability.....	285
10.3.3.35	RLC reset indicator.....	285
10.3.3.36	RRC transaction identifier	285
10.3.3.37	Security capability	285
10.3.3.38	START.....	285
10.3.3.39	Transmission probability	286
10.3.3.40	Transport channel capability.....	287
10.3.3.41	UE multi-mode/multi-RAT capability.....	288
10.3.3.42	UE radio access capability.....	289
10.3.3.43	UE Timers and Constants in connected mode	289
10.3.3.44	UE Timers and Constants in idle mode	292
10.3.3.45	UP capability	292
10.3.3.46	URA update cause	292
10.3.3.47	U-RNTI.....	293
10.3.3.48	U-RNTI Short.....	293
10.3.3.49	UTRAN DRX cycle length coefficient.....	293
10.3.3.50	Wait time	293
10.3.4	Radio Bearer Information elements.....	294
10.3.4.1	Downlink RLC STATUS info	294

10.3.4.2	PDCP info	295
10.3.4.3	PDCP SN info	296
10.3.4.4	Polling info	296
10.3.4.5	Predefined configuration identity	296
10.3.4.6	Predefined configuration value tag	296
10.3.4.7	Predefined RB configuration	297
10.3.4.8	RAB info.....	297
10.3.4.9	RAB info Post.....	297
10.3.4.10	RAB information for setup	298
10.3.4.11	RAB information to reconfigure	298
10.3.4.12	NAS Synchronization indicator	298
10.3.4.13	RB activation time info.....	298
10.3.4.14	RB COUNT-C MSB information	298
10.3.4.15	RB COUNT-C information	299
10.3.4.16	RB identity.....	299
10.3.4.17	RB information to be affected.....	299
10.3.4.18	RB information to reconfigure.....	300
10.3.4.19	RB information to release.....	300
10.3.4.20	RB information to setup.....	300
10.3.4.21	RB mapping info.....	301
10.3.4.22	RB with PDCP information	302
10.3.4.23	RLC info	303
10.3.4.24	Signalling RB information to setup	304
10.3.4.25	Transmission RLC Discard.....	305
10.3.5	Transport CH Information elements.....	306
10.3.5.1	Added or Reconfigured DL TrCH information	306
10.3.5.2	Added or Reconfigured UL TrCH information	307
10.3.5.3	CPCH set ID	307
10.3.5.4	Deleted DL TrCH information.....	307
10.3.5.5	Deleted UL TrCH information.....	307
10.3.5.6	DL Transport channel information common for all transport channels.....	308
10.3.5.7	DRAC Static Information	308
10.3.5.8	Power Offset Information	309
10.3.5.9	Predefined TrCH configuration	309
10.3.5.10	Quality Target.....	310
10.3.5.11	Semi-static Transport Format Information	310
10.3.5.12	TFCI Field 2 Information	311
10.3.5.13	TFCS Explicit Configuration.....	312
10.3.5.14	TFCS Information for DSCH (TFCI range method).....	313
10.3.5.15	TFCS Reconfiguration/Addition Information.....	313
10.3.5.16	TFCS Removal Information	314
10.3.5.17	Transparent mode signalling info	315
10.3.5.18	Transport channel identity	315
10.3.5.19	Transport Format Combination (TFC).....	315
10.3.5.20	Transport Format Combination Set	316
10.3.5.21	Transport Format Combination Set Identity	317
10.3.5.22	Transport Format Combination Subset.....	317
10.3.5.23	Transport Format Set	318
10.3.5.24	UL Transport channel information common for all transport channels.....	320
10.3.6	Physical CH Information elements.....	320
10.3.6.1	AC-to-ASC mapping	320
10.3.6.2	AICH Info.....	320
10.3.6.3	AICH Power offset	321
10.3.6.4	Allocation period info.....	321
10.3.6.5	Alpha	321
10.3.6.6	ASC setting.....	321
10.3.6.7	Block STTD indicator.....	322
10.3.6.8	CCTrCH power control info	322
10.3.6.9	Cell parameters Id.....	322
10.3.6.10	Common timeslot info	323
10.3.6.11	Constant value	323
10.3.6.12	CPCH persistence levels.....	323

10.3.6.13	CPCH set info	324
10.3.6.14	CPCH Status Indication mode	326
10.3.6.15	CSICH Power offset	326
10.3.6.16	Default DPCH Offset Value	326
10.3.6.17	Downlink channelisation codes	327
10.3.6.18	Downlink DPCH info common for all RL	328
10.3.6.19	Downlink DPCH info common for all RL Post	328
10.3.6.20	Downlink DPCH info common for all RL Pre	329
10.3.6.21	Downlink DPCH info for each RL	330
10.3.6.22	Downlink DPCH info for each RL Post	331
10.3.6.23	Downlink DPCH power control information	331
10.3.6.24	Downlink information common for all radio links	332
10.3.6.25	Downlink information common for all radio links Post	332
10.3.6.26	Downlink information common for all radio links Pre	332
10.3.6.27	Downlink information for each radio link	333
10.3.6.28	Downlink information for each radio link Post	333
10.3.6.29	Downlink Outer Loop Control	333
10.3.6.30	Downlink PDSCH information	334
10.3.6.31	Downlink rate matching restriction information	334
10.3.6.32	Downlink Timeslots and Codes	334
10.3.6.33	DPCH compressed mode info	335
10.3.6.34	DPCH Compressed Mode Status Info	338
10.3.6.35	Dynamic persistence level	338
10.3.6.36	Frequency info	339
10.3.6.37	Individual timeslot info	339
10.3.6.38	Individual Timeslot interference	339
10.3.6.39	Maximum allowed UL TX power	339
10.3.6.40	Midamble configuration	339
10.3.6.41	Midamble shift and burst type	340
10.3.6.42	PDSCH Capacity Allocation info	341
10.3.6.43	PDSCH code mapping	342
10.3.6.44	PDSCH info	344
10.3.6.45	PDSCH Power Control info	344
10.3.6.46	PDSCH system information	344
10.3.6.47	PDSCH with SHO DCH Info	345
10.3.6.48	Persistence scaling factors	345
10.3.6.49	PICH Info	346
10.3.6.50	PICH Power offset	346
10.3.6.51	PRACH Channelisation Code	347
10.3.6.52	PRACH info (for RACH)	348
10.3.6.53	PRACH partitioning	349
10.3.6.54	PRACH power offset	350
10.3.6.55	PRACH system information list	351
10.3.6.56	Predefined PhyCH configuration	352
10.3.6.57	Primary CCPCH info	352
10.3.6.58	Primary CCPCH info post	352
10.3.6.59	Primary CCPCH TX Power	353
10.3.6.60	Primary CPICH info	353
10.3.6.61	Primary CPICH Tx power	353
10.3.6.62	Primary CPICH usage for channel estimation	353
10.3.6.63	PUSCH info	353
10.3.6.64	PUSCH Capacity Allocation info	354
10.3.6.65	PUSCH power control info	354
10.3.6.66	PUSCH system information	354
10.3.6.67	RACH transmission parameters	355
10.3.6.68	Radio link addition information	355
10.3.6.69	Radio link removal information	356
10.3.6.70	SCCPCH Information for FACH	356
10.3.6.71	Secondary CCPCH info	357
10.3.6.72	Secondary CCPCH system information	358
10.3.6.73	Secondary CPICH info	358
10.3.6.74	Secondary scrambling code	358

10.3.6.75	SFN Time info	359
10.3.6.76	SSDT cell identity.....	359
10.3.6.77	SSDT information.....	359
10.3.6.78	STTD indicator	359
10.3.6.79	TDD open loop power control	360
10.3.6.80	TFC Control duration.....	360
10.3.6.81	TFCI Combining Indicator	360
10.3.6.82	TGPSI	360
10.3.6.83	Time info	361
10.3.6.84	Timeslot number.....	361
10.3.6.85	TPC combination index	361
10.3.6.86	TX Diversity Mode.....	361
10.3.6.87	UL interference	361
10.3.6.88	Uplink DPCH info	362
10.3.6.89	Uplink DPCH info Post	363
10.3.6.90	Uplink DPCH info Pre.....	363
10.3.6.91	Uplink DPCH power control info	363
10.3.6.92	Uplink DPCH power control info Post	364
10.3.6.93	Uplink DPCH power control info Pre.....	365
10.3.6.94	Uplink Timeslots and Codes.....	365
10.3.6.95	Uplink Timing Advance	366
10.3.6.96	Uplink Timing Advance Control	367
10.3.7	Measurement Information elements	367
10.3.7.1	Additional measurements list.....	367
10.3.7.2	Cell info	367
10.3.7.3	Cell measured results.....	368
10.3.7.4	Cell measurement event results	369
10.3.7.5	Cell reporting quantities.....	369
10.3.7.6	Cell synchronisation information.....	370
10.3.7.7	Event results.....	371
10.3.7.8	FACH measurement occasion info	371
10.3.7.9	Filter coefficient.....	372
10.3.7.10	HCS Cell re-selection information.....	372
10.3.7.11	HCS neighbouring cell information.....	372
10.3.7.12	HCS Serving cell information.....	373
10.3.7.13	Inter-frequency cell info list.....	373
10.3.7.14	Inter-frequency event identity.....	373
10.3.7.15	Inter-frequency measured results list	374
10.3.7.16	Inter-frequency measurement	375
10.3.7.17	Inter-frequency measurement event results	375
10.3.7.18	Inter-frequency measurement quantity	376
10.3.7.19	Inter-frequency measurement reporting criteria.....	377
10.3.7.20	Inter-frequency measurement system information.....	378
10.3.7.21	Inter-frequency reporting quantity	378
10.3.7.22	Inter-frequency SET UPDATE.....	378
10.3.7.23	Inter-RAT cell info list	379
10.3.7.24	Inter-RAT event identity.....	379
10.3.7.25	Inter-RAT info	379
10.3.7.26	Inter-RAT measured results list	380
10.3.7.27	Inter-RAT measurement	380
10.3.7.28	Inter-RAT measurement event results	381
10.3.7.29	Inter-RAT measurement quantity	382
10.3.7.30	Inter-RAT measurement reporting criteria	383
10.3.7.31	Inter-RAT measurement system information	383
10.3.7.32	Inter-RAT reporting quantity	383
10.3.7.33	Intra-frequency cell info list.....	384
10.3.7.34	Intra-frequency event identity.....	384
10.3.7.35	Intra-frequency measured results list	385
10.3.7.36	Intra-frequency measurement	385
10.3.7.37	Intra-frequency measurement event results	385
10.3.7.38	Intra-frequency measurement quantity	386
10.3.7.39	Intra-frequency measurement reporting criteria.....	387

10.3.7.40	Intra-frequency measurement system information.....	389
10.3.7.41	Intra-frequency reporting quantity	390
10.3.7.42	Intra-frequency reporting quantity for RACH reporting	390
10.3.7.43	Maximum number of reported cells on RACH.....	391
10.3.7.44	Measured results	391
10.3.7.45	Measured results on RACH	392
10.3.7.46	Measurement Command	393
10.3.7.47	Measurement control system information.....	393
10.3.7.48	Measurement Identity	393
10.3.7.49	Measurement reporting mode	394
10.3.7.50	Measurement Type	394
10.3.7.51	Measurement validity	394
10.3.7.52	Observed time difference to GSM cell	394
10.3.7.53	Periodical reporting criteria	394
10.3.7.54	Primary CCPCH RSCP info	395
10.3.7.55	Quality measured results list.....	395
10.3.7.56	Quality measurement	396
10.3.7.57	Quality measurement event results	396
10.3.7.58	Quality measurement reporting criteria	396
10.3.7.59	Quality reporting quantity.....	397
10.3.7.60	Reference time difference to cell	397
10.3.7.61	Reporting Cell Status	397
10.3.7.62	Reporting information for state CELL_DCH	399
10.3.7.63	SFN-SFN observed time difference.....	399
10.3.7.64	Time to trigger	400
10.3.7.65	Timeslot ISCP info	400
10.3.7.66	Traffic volume event identity.....	400
10.3.7.67	Traffic volume measured results list.....	401
10.3.7.68	Traffic volume measurement	402
10.3.7.69	Traffic volume measurement event results	402
10.3.7.70	Traffic volume measurement object	403
10.3.7.71	Traffic volume measurement quantity	403
10.3.7.72	Traffic volume measurement reporting criteria	404
10.3.7.73	Traffic volume measurement system information	404
10.3.7.74	Traffic volume reporting quantity.....	405
10.3.7.75	UE internal event identity	405
10.3.7.76	UE internal measured results	406
10.3.7.77	UE internal measurement.....	406
10.3.7.78	UE internal measurement event results.....	407
10.3.7.79	UE internal measurement quantity.....	407
10.3.7.80	UE internal measurement reporting criteria.....	408
10.3.7.81	UE internal measurement system information.....	408
10.3.7.82	UE Internal reporting quantity	408
10.3.7.83	UE Rx-Tx time difference type 1.....	409
10.3.7.84	UE Rx-Tx time difference type 2.....	409
10.3.7.85	UE Transmitted Power info	409
10.3.7.86	UP Cipher GPS Data Indicator	409
10.3.7.87	UP Error.....	410
10.3.7.88	UP GPS acquisition assistance.....	410
10.3.7.89	UP GPS almanac.....	411
10.3.7.90	UP GPS assistance data	412
10.3.7.91	UP GPS DGPS corrections	413
10.3.7.92	UP GPS ionospheric model	414
10.3.7.93	UP GPS measurement.....	414
10.3.7.94	UP GPS navigation model	416
10.3.7.95	UP GPS real-time integrity	418
10.3.7.96	UP GPS reference time	418
10.3.7.97	UP GPS UTC model.....	418
10.3.7.98	UP IPDL parameters	419
10.3.7.99	UP measured results.....	420
10.3.7.100	UP measurement.....	420
10.3.7.101	UP measurement event results.....	420

10.3.7.102	UP multiple sets	421
10.3.7.103	UP OTDOA assistance data	423
10.3.7.104	UP OTDOA assistance for SIB	424
10.3.7.105	UP OTDOA measurement	425
10.3.7.106	UP OTDOA measurement assistance data	425
10.3.7.107	UP OTDOA quality type	427
10.3.7.108	UP OTDOA reference cell for assistance data	427
10.3.7.109	UP position	428
10.3.7.110	UP reporting criteria	429
10.3.7.111	UP reporting quantity	429
10.3.8	Other Information elements	430
10.3.8.1	BCCH modification info	430
10.3.8.2	BSIC	431
10.3.8.3	CBS DRX Level 1 information	431
10.3.8.4	Cell Value tag	431
10.3.8.5	Inter-RAT change failure	431
10.3.8.6	Inter-RAT handover failure	432
10.3.8.7	Inter-RAT UE radio access capability	432
10.3.8.8	Inter-RAT message	432
10.3.8.9	MIB Value tag	433
10.3.8.10	PLMN Value tag	433
10.3.8.11	Predefined configuration identity and value tag	433
10.3.8.12	Protocol error information	433
10.3.8.13	References to other system information blocks	434
10.3.8.14	References to other system information blocks and scheduling blocks	434
10.3.8.15	Rplmn information	434
10.3.8.16	Scheduling information	436
10.3.8.17	SEG COUNT	436
10.3.8.18	Segment index	437
10.3.8.19	SIB data fixed	437
10.3.8.20	SIB data variable	437
10.3.8.21	SIB type	437
10.3.8.22	SIB type SIBs only	438
10.3.9	ANSI-41 Information elements	439
10.3.9.1	ANSI 41 Core Network Information	439
10.3.9.2	ANSI-41 Global Service Redirection information	439
10.3.9.3	ANSI-41 NAS parameter	439
10.3.9.4	ANSI-41 NAS system information	440
10.3.9.5	ANSI-41 Private Neighbour List information	440
10.3.9.6	ANSI-41 RAND information	440
10.3.9.7	ANSI-41 User Zone Identification information	440
10.3.9.8	MIN_P_REV	440
10.3.9.9	NID	441
10.3.9.10	P_REV	441
10.3.9.11	SID	441
10.3.10	Multiplicity values and type constraint values	441
11	Message and Information element abstract syntax (with ASN.1)	444
11.1	General message structure	444
11.2	PDU definitions	447
11.3	Information element definitions	472
11.4	Constant definitions	555
11.5	RRC information between network nodes	556
12	Message transfer syntax	559
12.1	Structure of encoded RRC messages	559
12.1.1	Basic production	559
12.1.2	Extension	559
12.1.3	Padding	560
12.2	ECN link module for RRC	561
12.3	ECN modules for RRC	562

13	Protocol timers, counters and other parameters	562
13.1	Timers for UE.....	563
13.2	Counters for UE	564
13.3	UE constants and parameters.....	564
13.4	UE variables	564
13.4.1	CIPHERING_STATUS.....	564
13.4.2	COMPRESSED_MODE_ERROR.....	565
13.4.3	C_RNTI.....	565
13.4.4	DOFF.....	565
13.4.5	ESTABLISHED_RABS.....	565
13.4.6	ESTABLISHMENT_CAUSE.....	566
13.4.7	FAILURE_CAUSE.....	566
13.4.8	FAILURE_INDICATOR.....	566
13.4.9	INITIAL_UE_IDENTITY	566
13.4.10	INTEGRITY_PROTECTION_INFO.....	567
13.4.11	INVALID_CONFIGURATION.....	567
13.4.12	MEASUREMENT_IDENTITY	567
13.4.13	ORDERED_ASU	568
13.4.14	ORDERED_CONFIG	568
13.4.15	PDCP_SN_INFO	569
13.4.16	PROTOCOL_ERROR_INDICATOR.....	569
13.4.17	PROTOCOL_ERROR_INFORMATION.....	569
13.4.18	PROTOCOL_ERROR_REJECT	569
13.4.19	RB_TIMER_INDICATOR	569
13.4.20	RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO	570
13.4.21	SELECTED_PLMN.....	570
13.4.22	START_THRESHOLD.....	570
13.4.23	START_VALUE_TO_TRANSMIT	570
13.4.24	TFC_SUBSET.....	570
13.4.25	TGPS_IDENTITY	571
13.4.26	TGSN_REPORTED.....	571
13.4.27	TRANSACTIONS	571
13.4.28	UE_CAPABILITY_TRANSFERRED.....	572
13.4.29	UNSUPPORTED_CONFIGURATION.....	572
13.4.30	URA_IDENTITY.....	572
13.4.31	U_RNTI.....	573
13.4.32	VALUE_TAG	573
13.5	UE RRC Procedure Performance	574
13.5.1	Definitions.....	574
13.5.2	RRC procedure performance values.....	574
14	Specific functions.....	578
14.1	Intra-frequency measurements	578
14.1.1	Intra-frequency measurement quantities	578
14.1.2	Intra-frequency reporting events for FDD.....	578
14.1.2.1	Reporting event 1A: A Primary CPICH enters the reporting range.....	579
14.1.2.2	Reporting event 1B: A primary CPICH leaves the reporting range.....	579
14.1.2.3	Reporting event 1C: A non-active primary CPICH becomes better than an active primary CPICH.....	580
14.1.2.4	Reporting event 1D: Change of best cell	581
14.1.2.5	Reporting event 1E: A Primary CPICH becomes better than an absolute threshold	581
14.1.2.6	Reporting event 1F: A Primary CPICH becomes worse than an absolute threshold	582
14.1.3	Intra-frequency reporting events for TDD.....	582
14.1.3.1	Reporting event 1G: Change of best cell (TDD)	582
14.1.3.2	Reporting event 1H: Timeslot ISCP below a certain threshold (TDD)	583
14.1.3.3	Reporting event 1I: Timeslot ISCP above a certain threshold (TDD)	583
14.1.4	Event-triggered periodic intra-frequency measurement reports	584
14.1.4.1	Cell addition failure (FDD only).....	584
14.1.4.2	Cell replacement failure (FDD only).....	585
14.1.5	Mechanisms available for modifying intra-frequency measurement reporting behaviour	585
14.1.5.1	Hysteresis.....	585
14.1.5.2	Time-to-trigger	586
14.1.5.3	Cell individual offsets.....	587

14.1.5.4	Forbid a Primary CPICH to affect the reporting range (FDD only)	588
14.1.6	Report quantities	589
14.2	Inter-frequency measurements	589
14.2.1	Inter-frequency reporting events	590
14.2.1.1	Event 2a: Change of best frequency.	590
14.2.1.2	Event 2b: The estimated quality of the currently used frequency is below a certain threshold and the estimated quality of a non-used frequency is above a certain threshold.	590
14.2.1.3	Event 2c: The estimated quality of a non-used frequency is above a certain threshold.....	590
14.2.1.4	Event 2d: The estimated quality of the currently used frequency is below a certain threshold	590
14.2.1.5	Event 2e: The estimated quality of a non-used frequency is below a certain threshold.....	591
14.2.1.6	Event 2 f: The estimated quality of the currently used frequency is above a certain threshold	591
14.3	Inter-RAT measurements	591
14.3.1	Inter-RAT reporting events	591
14.3.1.1	Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain threshold and the estimated quality of the other system is above a certain threshold.	591
14.3.1.2	Event 3b: The estimated quality of other system is below a certain threshold	592
14.3.1.3	Event 3c: The estimated quality of other system is above a certain threshold.....	592
14.3.1.4	Event 3d: Change of best cell in other system	592
14.3.2	GSM measurements in compressed mode.....	592
14.3.2.1	GSM RSSI measurements	592
14.3.2.2	Initial BSIC identification.....	592
14.3.2.3	BSIC re-confirmation	592
14.4	Traffic Volume Measurements.....	592
14.4.1	Traffic Volume Measurement Quantity	592
14.4.2	Traffic Volume reporting events	593
14.4.2.1	Reporting event 4 A: RLC buffer payload exceeds an absolute threshold.....	593
14.4.2.2	Reporting event 4 B: RLC buffer payload becomes smaller than an absolute threshold	593
14.4.3	Traffic volume reporting mechanisms.....	594
14.4.3.1	Pending time after trigger	594
14.4.4	Interruption of user data transmission	594
14.5	Quality Measurements.....	594
14.5.1	Quality reporting measurement quantities.....	594
14.5.2	Quality reporting events	595
14.5.2.1	Reporting event 5A: A predefined number of bad CRCs is exceeded	595
14.6	UE internal measurements.....	595
14.6.1	UE internal measurement quantities.....	595
14.6.2	UE internal measurement reporting events	596
14.6.2.1	Reporting event 6A: The UE Tx power becomes larger than an absolute threshold	596
14.6.2.2	Reporting event 6B: The UE Tx power becomes less than an absolute threshold.....	596
14.6.2.3	Reporting event 6C: The UE Tx power reaches its minimum value.....	596
14.6.2.4	Reporting event 6D: The UE Tx power reaches its maximum value.....	597
14.6.2.5	Reporting event 6E: The UE RSSI reaches the UE's dynamic receiver range.....	597
14.6.2.6	Reporting event 6F: The UE Rx-Tx time difference for a RL included in the active set becomes larger than an absolute threshold.....	597
14.6.2.7	Reporting event 6G: The UE Rx-Tx time difference for a RL included in the active set becomes less than an absolute threshold	597
14.7	UP measurements	598
14.7.1	UP measurement quantity.....	598
14.7.2	UP reporting quantity	598
14.7.3	UP reporting events	598
14.7.3.1	Reporting Event 7a: The UE position changes more than an absolute threshold	598
14.7.3.2	Reporting Event 7b: SFN-SFN measurement changes more than an absolute threshold	598
14.7.3.3	Reporting Event 7c: GPS time and SFN time have drifted apart more than an absolute threshold	598
14.8	Dynamic Resource Allocation Control of Uplink DCH (FDD only)	599
14.9	Downlink power control.....	599
14.9.1	Generalities.....	599
14.9.2	Downlink power control in compressed mode	600
14.10	Calculated Transport Format Combination	600
14.11	UE autonomous update of active set on non-used frequency (FDD only)	601
14.12	Provision and reception of RRC information between network nodes.....	601
14.12.1	RRC Information to target RNC.....	601
14.12.2	RRC information, target RNC to source RNC	608

14.12.3	RRC information, target RNC to source system	609
14.13	RRC information transferred between UE and other systems	609
14.13.1	RRC information, another RAT to UE	609
14.13.1.1	Pre-defined configuration information	609
14.13.2	RRC information, UE to another RAT	610
14.13.2.1	UE capability information	610
14.13.2.2	UE security information	610
14.13.2.3	Pre-defined configuration status information	611
14.13.2.4	UE system specific capability	611
14.14	Versatile Channel Assignment Mode (VCAM) mapping rule (FDD only)	611

Annex A (informative): USIM parameters613

A.1	Introduction	613
A.2	Ciphering information	613
A.3	Frequency information	613
A.4	Multiplicity values and type constraint values	614

Annex B (informative): Description of RRC state transitions.....615

B.1	RRC states and state transitions including GSM	615
B.2	Transition from Idle Mode to UTRA RRC Connected Mode	615
B.2.1	Transitions for Emergency Calls	615
B.3	UTRA RRC Connected Mode States and Transitions	615
B.3.1	CELL_DCH state	615
B.3.1.1	Transition from CELL_DCH to Idle Mode	616
B.3.1.2	Transition from CELL_DCH to CELL_FACH state	616
B.3.1.3	Transition from CELL_DCH to CELL_PCH state	616
B.3.1.4	Transition from CELL_DCH to URA_PCH state	616
B.3.1.5	Radio Resource Allocation tasks (CELL_DCH)	616
B.3.1.6	RRC Connection mobility tasks (CELL_DCH)	616
B.3.1.7	UE Measurements (CELL_DCH)	617
B.3.1.8	Acquisition of system information (CELL_DCH)	617
B.3.2	CELL_FACH state	617
B.3.2.1	Transition from CELL_FACH to CELL_DCH state	617
B.3.2.2	Transition from CELL_FACH to CELL_PCH state	617
B.3.2.3	Transition from CELL_FACH to Idle Mode	617
B.3.2.4	Transition from CELL_FACH to URA_PCH State	617
B.3.2.5	Radio Resource Allocation Tasks (CELL_FACH)	617
B.3.2.6	RRC Connection mobility tasks (CELL_FACH)	618
B.3.2.7	UE Measurements (CELL_FACH)	618
B.3.2.8	Transfer and update of system information (CELL_FACH)	618
B.3.3	CELL_PCH state	619
B.3.3.1	Transition from CELL_PCH to CELL_FACH state	619
B.3.3.2	Radio Resource Allocation Tasks (CELL_PCH)	619
B.3.3.3	RRC Connection mobility tasks (CELL_PCH)	619
B.3.3.4	UE Measurements (CELL_PCH)	619
B.3.3.5	Transfer and update of system information (CELL_PCH)	619
B.3.4	URA_PCH State	620
B.3.4.1	Transition from URA_PCH State to CELL_FACH State (URA_PCH)	620
B.3.4.2	Radio Resource Allocation Tasks (URA_PCH)	620
B.3.4.3	RRC Connection mobility tasks (URA_PCH)	620
B.3.4.4	UE Measurements (URA_PCH)	620
B.3.4.5	Transfer and update of system information (URA_PCH)	621
B.3.5	States and Transitions for Cell Reselection in URA_PCH, CELL_PCH, and CELL_FACH	621
B.4	Inter-RAT handover with PSTN/ISDN domain services	621
B.5	Inter-RAT handover with IP domain services	622
B.6	Inter-RAT handover with simultaneous IP and PSTN/ISDN domain services	622
B.6.1	Inter-RAT handover UTRAN to GSM / BSS	622
B.6.2	Inter-RAT handover GSM / BSS to UTRAN	622

Annex C (informative): Change history623

Foreword

This Technical Specification (TS) has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the Radio Resource Control protocol for the UE-UTRAN radio interface.

The scope of this specification also includes:

- the information to be transported in a transparent container between source RNC and target RNC in connection with SRNC relocation;
- the information to be transported in a transparent container between a target RNC and another system.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 25.301: "Radio Interface Protocol Architecture".
- [3] 3GPP TS 25.303: "Interlayer Procedures in Connected Mode".
- [4] 3GPP TS 25.304: "UE Procedures in Idle Mode and Procedures for Cell Reselection in Connected Mode".
- [5] 3GPP TS 24.008: "Mobile radio interface layer 3 specification, Core Network Protocols - Stage 3".
- [6] 3GPP TS 25.103: "RF Parameters in Support of RRM".
- [7] 3GPP TS 25.215: "Physical layer – Measurements (FDD)".
- [8] 3GPP TS 25.225: "Physical layer – Measurements (TDD)".
- [9] 3GPP TS 25.401: "UTRAN overall description".
- [10] 3GPP TS 25.402: "Synchronization in UTRAN, stage 2".
- [11] 3GPP TS 23.003: "Numbering, addressing and identification".
- [12] ICD-GPS-200: "Navstar GPS Space Segment/Navigation User Interface".
- [13] RTCM-SC104: "RTCM Recommended Standards for Differential GNSS Service (v.2.2)".
- [14] 3GPP TR 25.921: "Guidelines and Principles for protocol description and error handling".
- [15] 3GPP TS 25.321: "MAC protocol specification".
- [16] 3GPP TS 25.322: "RLC Protocol Specification".
- [17] 3GPP TS 24.007: "Mobile radio interface signalling layer 3" General Aspects.
- [18] 3GPP TS 25.305: "Stage 2 Functional Specification of Location Services in UTRAN".
- [19] 3GPP TS 25.133: "Requirements for Support of Radio Resource Management (FDD)".
- [20] 3GPP TS 25.123: "Requirements for Support of Radio Resource Management (TDD)".

- [21] 3GPP TS 25.101: "UE Radio Transmission and Reception (FDD)".
- [22] 3GPP TS 25.102: "UE Radio Transmission and Reception (TDD)".
- [23] 3GPP TS 23.060: "General Packet Radio Service (GPRS), Service description, Stage 2".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in [1] apply.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

ACK	Acknowledgement
AICH	Acquisition Indicator CHannel
AM	Acknowledged Mode
AS	Access Stratum
ASC	Access Service Class
ASN.1	Abstract Syntax Notation.1
BCCH	Broadcast Control Channel
BCFE	Broadcast Control Functional Entity
BER	Bit Error Rate
BLER	BLock Error Rate
BSS	Base Station Sub-system
CH	Conditional on history
CV	Conditional on value
CCPCH	Common Control Physical CHannel
CCCH	Common Control Channel
CN	Core Network
CM	Connection Management
CPCH	Common Packet CHannel
C-RNTI	Cell RNTI
CTCH	Common Traffic CHannel
CTFC	Calculated Transport Format Combination
DCA	Dynamic Channel Allocation
DCCH	Dedicated Control Channel
DCFE	Dedicated Control Functional Entity
DCH	Dedicated Channel
DC-SAP	Dedicated Control SAP
DGPS	Differential Global Positioning System
DL	Downlink
DRAC	Dynamic Resource Allocation Control
DSCH	Downlink Shared Channel
DTCH	Dedicated Traffic Channel
FACH	Forward Access Channel
FDD	Frequency Division Duplex
FFS	For Further Study
GC-SAP	General Control SAP
HCS	Hierarchical Cell Structure
HFN	Hyper Frame Number
ID	Identifier
IETF	Internet Engineering Task Force
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Subscriber Identity
IE	Information element

IP	Internet Protocol
ISCP	Interference on Signal Code Power
LAI	Location Area Identity
L1	Layer 1
L2	Layer 2
L3	Layer 3
MD	Mandatory default
MP	Mandatory present
MAC	Media Access Control
MCC	Mobile Country Code
MM	Mobility Management
MNC	Mobile Network Code
NAS	Non Access Stratum
Nt-SAP	Notification SAP
NW	Network
OP	Optional
PCCH	Paging Control Channel
PCH	Paging Channel
PDCP	Packet Data Convergence Protocol
PDSCH	Physical Downlink Shared Channel
PDU	Protocol Data Unit
PLMN	Public Land Mobile Network
PNFE	Paging and Notification Control Functional Entity
PRACH	Physical Random Access Channel
P-TMSI	Packet Temporary Mobile Subscriber Identity
PUSCH	Physical Uplink Shared Channel
QoS	Quality of Service
RAB	Radio access bearer
RAT	Radio Access Technology
RB	Radio Bearer
RAI	Routing Area Identity
RACH	Random Access Channel
RB	Radio Bearer
RFE	Routing Functional Entity
RL	Radio Link
RLC	Radio Link Control
RNTI	Radio Network Temporary Identifier
RNC	Radio Network Controller
RRC	Radio Resource Control
RSCP	Received Signal Code Power
RSSI	Received Signal Strength Indicator
SAP	Service Access Point
SCFE	Shared Control Function Entity
SF	Spreading Factor
SHCCH	Shared Control Channel
SIR	Signal to Interference Ratio
SSDT	Site Selection Diversity Transmission
S-RNTI	SRNC - RNTI
TDD	Time Division Duplex
TF	Transport Format
TFCS	Transport Format Combination Set
TFS	Transport Format Set
TM	Transparent Mode
TME	Transfer Mode Entity
TMSI	Temporary Mobile Subscriber Identity
Tr	Transparent
Tx	Transmission
UE	User Equipment
UL	Uplink
UM	Unacknowledged Mode
UP	UE Positioning
URA	UTRAN Registration Area

U-RNTI	UTRAN-RNTI
USCH	Uplink Shared Channel
UTRAN	Universal Terrestrial Radio Access Network

4 General

4.1 Overview of the specification

This specification is organised as follows:

- Sub-clause 4.2 contains the description of the model of the RRC protocol layer;
- Clause 5 lists the RRC functions and the services provided to upper layers;
- Clause 6 lists the services expected from the lower layers and specifies the radio bearers available for usage by the RRC messages;
- Clause 7 specifies the UE states for the Access Stratum, and also specifies the processes running in the UE in the respective states;
- Clause 8 specifies RRC procedures, including UE state transitions;
- Clause 9 specifies the procedures for the handling of unknown, unforeseen, and erroneous protocol data by the receiving entity;
- Clause 10 describes the message in a Tabular format; these messages descriptions are referenced in clause 8;
- Clause 11 specifies the encoding of the messages of the RRC protocol. This is based on the Tabular description in clause 10.
- Clause 12 specifies the transfer syntax for RRC PDUs derived from the encoding definition;
- Clause 13 lists the protocol timers, counters, constants and variables to be used by the UE;
- Clause 14 specifies some of the processes applicable in UTRA RRC connected mode e.g. measurement processes, and also the RRC information to be transferred between network nodes. Note that not all the processes applicable in UTRA RRC connected mode are specified here i.e. some UTRA RRC connected mode processes are described in TS 25.304 e.g. cell re-selection; Annex A contains recommendations about the network parameters to be stored on the USIM;

Annex B contains informative Stage 2 description of the RRC protocol states and state transitions.

The following figure summarises the mapping of UE states, including states in GSM, to the appropriate UTRA and GSM specifications which specify the UE behaviour.

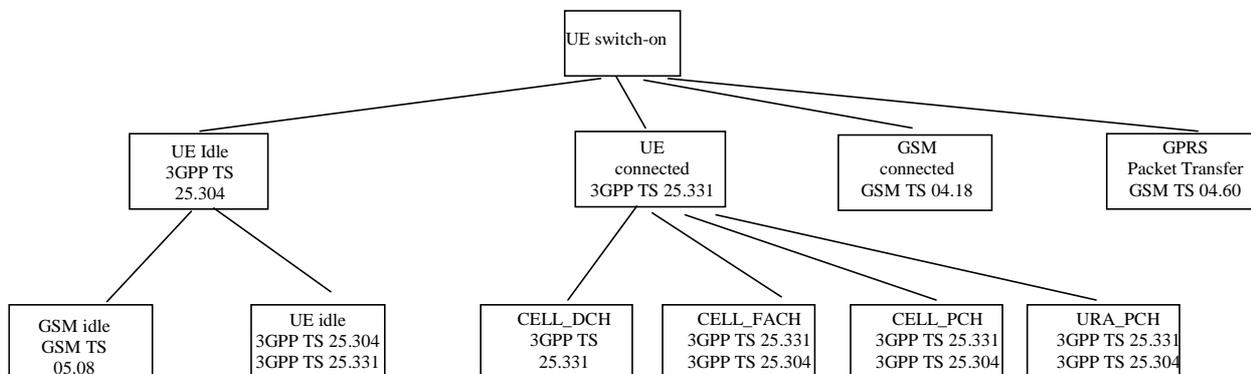


Figure 1: Mapping of UE state to 3GPP Specifications

4.2 RRC Layer Model

The functional entities of the RRC layer are described below:

- Routing of higher layer messages to different MM/CM entities (UE side) or different core network domains (UTRAN side) is handled by the Routing Function Entity (**RFE**)
- Broadcast functions are handled in the broadcast control function entity (**BCFE**). The BCFE is used to deliver the RRC services, which are required at the GC-SAP. The BCFE can use the lower layer services provided by the Tr-SAP and UM-SAP.
- Paging of UEs that do not have an RRC connection is controlled by the paging and notification control function entity (**PNFE**). The PNFE is used to deliver the RRC services that are required at the Nt-SAP. The PNFE can use the lower layer services provided by the Tr-SAP and UM-SAP.
- The Dedicated Control Function Entity (**DCFE**) handles all functions specific to one UE. The DCFE is used to deliver the RRC services which are required at the DC-SAP and can use lower layer services of UM/AM-SAP and Tr-SAP depending on the message to be sent and on the current UE service state.
- In TDD mode, the DCFE is assisted by the Shared Control Function Entity (SCFE) location in the C-RNC, which controls the allocation of the PDSCH and PUSCH using lower layers services of UM-SAP and Tr-SAP.
- The Transfer Mode Entity (TME) handles the mapping between the different entities inside the RRC layer and the SAPs provided by RLC.

NOTE: Logical information exchange is necessary also between the RRC sublayer functional entities. Most of that is implementation dependent and not necessary to present in detail in a specification.

Figure 2 shows the RRC model for the UE and Figure 3 and Figure 4 show the RRC model for the UTRAN.

NOTE: The figure shows only the types of SAPs that are used. Multiple instances of Tr-SAP, UM-SAP and AM-SAP are possible. Especially, different functional entities usually use different instances of SAP types.

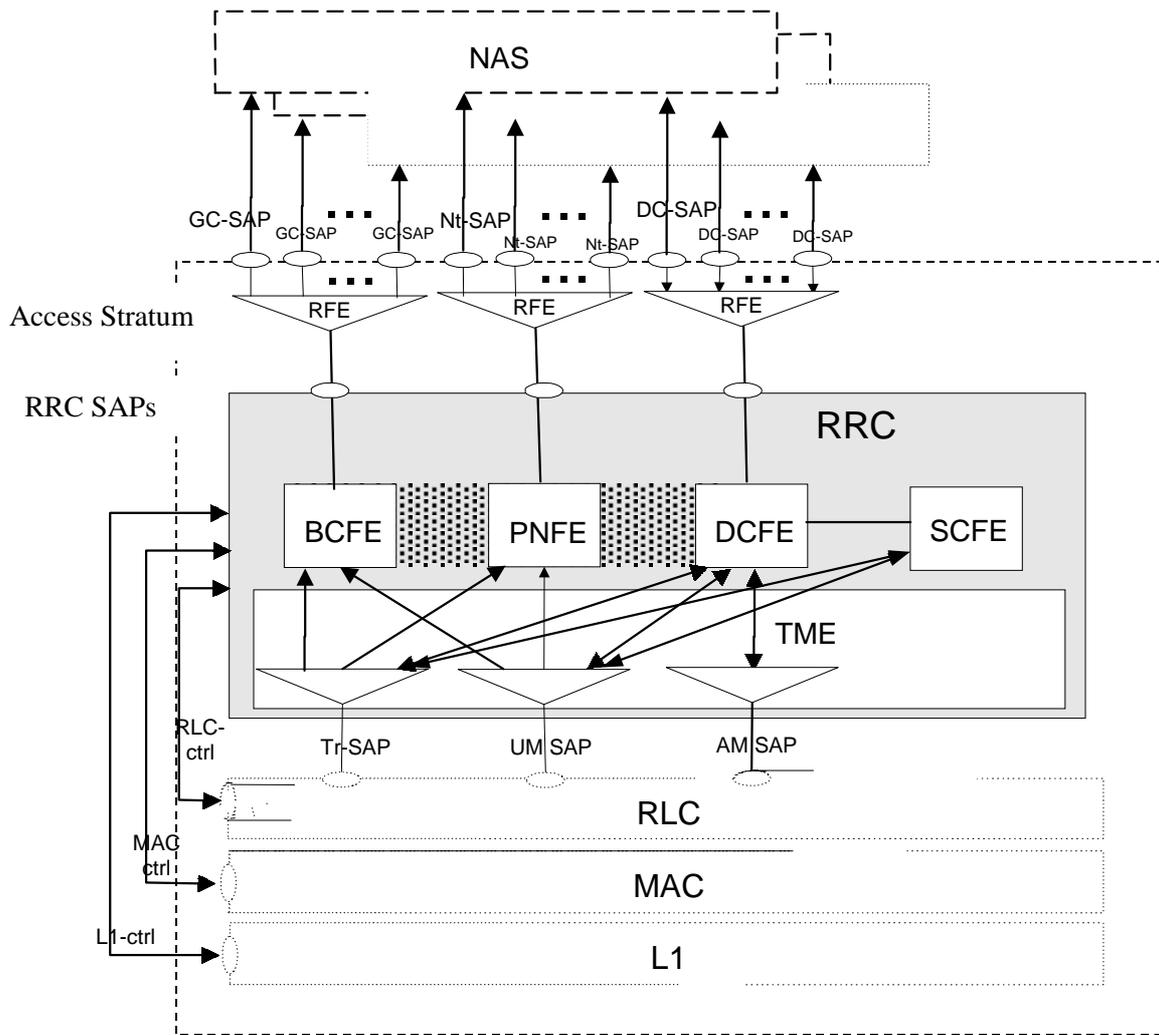


Figure 2: UE side model of RRC

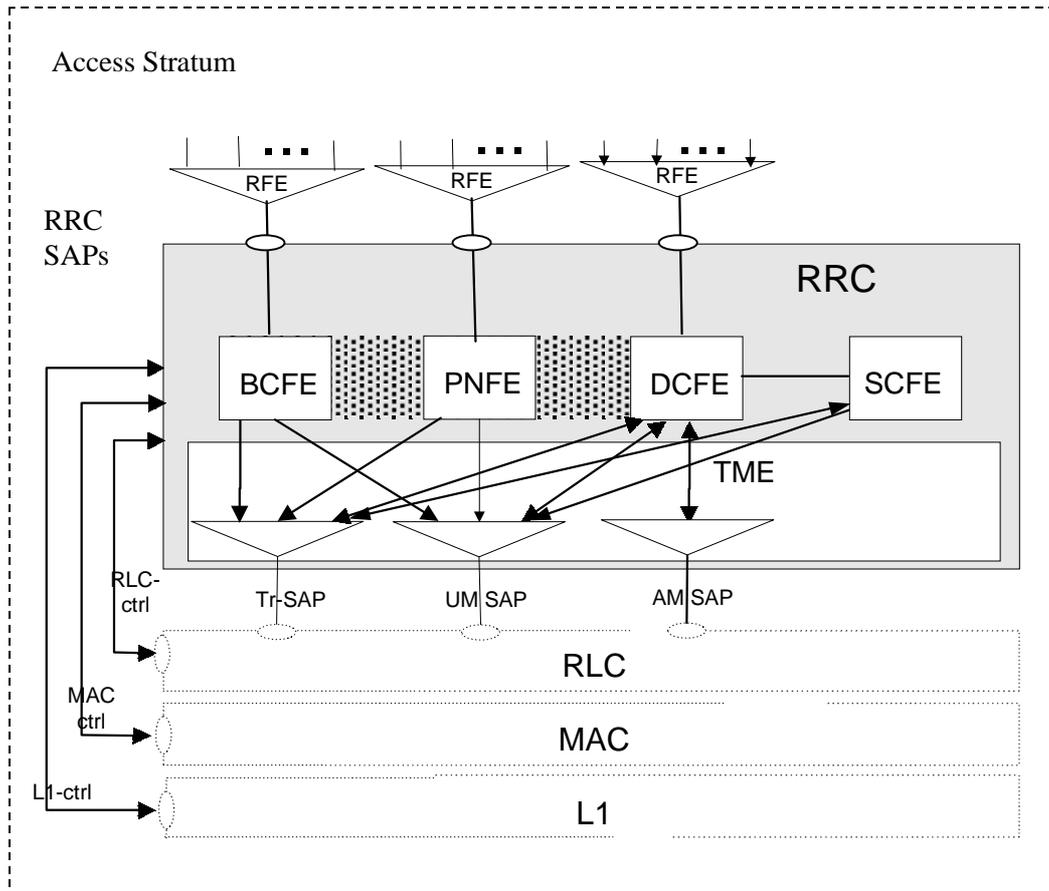


Figure 3: UTRAN side RRC model (DS-MAP system)

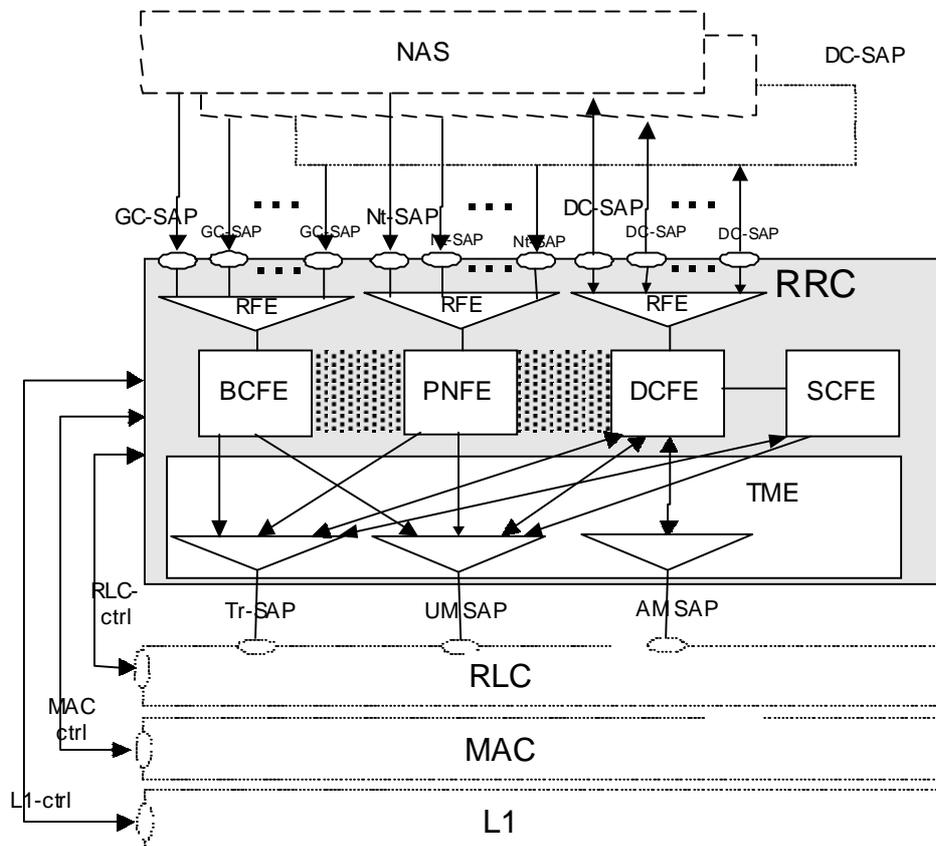


Figure 4: UTRAN side RRC model (DS-41 System)

5 RRC Functions and Services provided to upper layers

5.1 RRC Functions

The RRC performs the functions listed below. A more detailed description of these functions is provided in 3GPP TS 25.301:

- Broadcast of information related to the non-access stratum (Core Network);
- Broadcast of information related to the access stratum;
- Establishment, maintenance and release of an RRC connection between the UE and UTRAN;
- Establishment, reconfiguration and release of Radio Bearers;
- Assignment, reconfiguration and release of radio resources for the RRC connection;
- RRC connection mobility functions;
- Control of requested QoS;
- UE measurement reporting and control of the reporting;
- Outer loop power control;
- Control of ciphering;
- Slow DCA (TDD mode);
- Paging;
- Initial cell selection and cell re-selection;
- Arbitration of radio resources on uplink DCH;
- RRC message integrity protection;
- Timing advance (TDD mode);
- CBS control.

5.2 RRC Services provided to upper layers

The RRC offers the following services to upper layers, a description and primitives of these services are provided in [2], [17].

- General Control;
- Notification;
- Dedicated control.

5.3 Primitives between RRC and upper layers

The primitives between RRC and the upper layers are described in 3GPP TS 24.007.

6 Services expected from lower layers

6.1 Services expected from Layer 2

The services provided by layer 2 are described in [2], [15] and [16].

6.2 Services expected from Layer 1

The services provided by layer 1 are described in [2].

6.3 Signalling Radio Bearers

The Radio Bearers available for usage by RRC messages using RLC-TM, RLC-UM and RLC-AM on the DCCH and CCCH are specified in the following. The UE and UTRAN shall select the radio bearers for RRC messages using RLC-TM, RLC-UM or RLC-AM on the DCCH and CCCH, according to the following:

- RB 0 shall be used for all messages sent on the CCCH (UL: RLC-TM, DL: RLC-UM).
- RB 1 shall be used for all messages sent on the DCCH, when using RLC unacknowledged mode (RLC-UM).
- RB 2 shall be used for all messages sent on the DCCH, when using RLC acknowledged mode (RLC-AM), except for except for the RRC messages carrying higher layer (NAS) signalling.
- RB 3 and optionally RB 4 shall be used by the RRC messages carrying higher layer (NAS) signalling and sent on the DCCH in RLC acknowledged mode (RLC-AM), as specified in subclause 8.1.8., 8.1.9 and 8.1.10.
- For RRC messages on the DCCH using RLC transparent mode (RLC-TM), the transparent signalling DCCH shall be used.
- RRC messages on the SHCCH are mapped either on RACH or on the USCH with the lowest assigned Transport Channel Id in the uplink and either on FACH or on the DSCH with the lowest assigned Transport Channel Id using RLC-TM.
These messages are only specified for TDD mode.

When an RRC message is transmitted in DL on CCCH or SHCCH using RLC UM, RRC should indicate to RLC that a special RLC length indicator should be used [16]. The UE shall assume that this indication has been given. The special length indicator indicates that an RLC SDU begins in the beginning of an RLC PDU.

7 Protocol states

7.1 Overview of RRC States and State Transitions including GSM

Figure 5 shows the RRC states in UTRA Connected Mode, including transitions between UTRA connected mode and GSM connected mode for PSTN/ISDN domain services, and between UTRA connected mode and GSM/GPRS packet modes for IP domain services. It also shows the transitions between Idle Mode and UTRA Connected Mode and further the transitions within UTRA connected Mode.

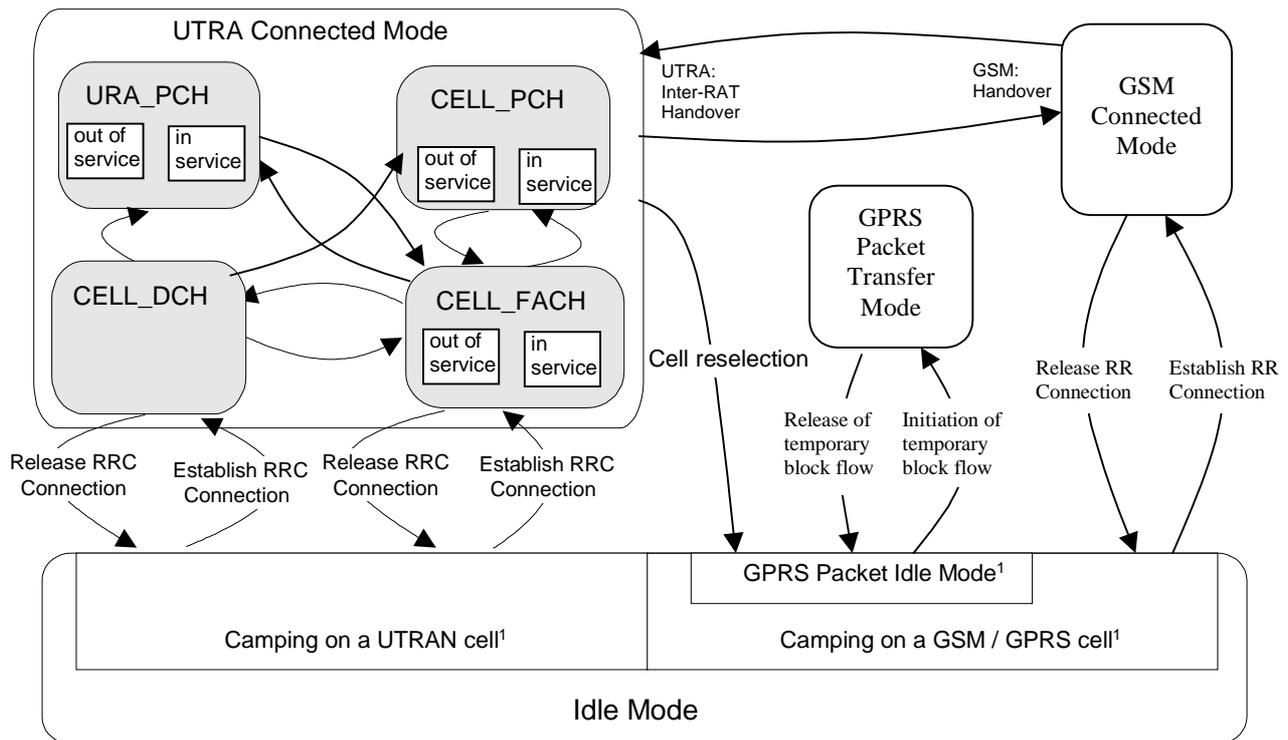


Figure 5: RRC States and State Transitions including GSM

[¹: The indicated division within Idle Mode is only included for clarification and shall not be interpreted as states.]

The RRC connection is defined as a point-to-point bi-directional connection between RRC peer entities in the UE and the UTRAN characterised by the allocation of a U-RNTI. A UE has either zero or one RRC connection.

NOTE: The state transitions are specified in subclause 8.

7.2 Processes in UE modes/states

NOTE: This subclause specifies what processes shall be active in the UE in the different RRC modes/states. The related procedures and the conditions on which they are triggered are specified either in section 8 or elsewhere in the relevant process definition.

7.2.1 UE Idle mode

UE processes that are active in UE Idle mode are specified in 3GPP TS 25.304.

7.2.2 UTRA RRC Connected mode

In this specification unless otherwise mentioned "connected mode" shall refer to "UTRA RRC connected mode".

7.2.2.1 URA_PCH or CELL_PCH state

In the URA_PCH or CELL_PCH state the UE shall perform the following actions:

- if the UE is "in service area":
 - maintain up-to-date system information as broadcast by the serving cell as specified in the sub-clause 8.1.1;
 - perform cell reselection process as specified in 3GPP TS 25.304;
 - monitor the paging occasions according to the DRX cycle and receive paging information on the PCH;

- perform measurements process according to measurement control information as specified in subclause 8.4 and in subclause 14.4;
- maintain up-to-date BMC data if it supports Cell Broadcast Service (CBS) as specified in 3GPP TS 25.324;
- run timer T305 for periodical URA update if the UE is in URA_PCH or for periodical cell update if the UE is in CELL_PCH;
- if the UE is "out of service area":
 - perform cell reselection process as specified in 3GPP TS 25.304;
 - run timer T316;
 - run timer T305

7.2.2.2 CELL_FACH state

In the CELL_FACH state the UE shall perform the following actions:

- if the UE is "in service area":
 - DCCH and DTCH are available;
 - perform cell reselection process as specified in 3GPP TS 25.304;
 - perform measurements process according to measurement control information as specified in subclause 8.4 and in subclause 14.4;
 - run timer T305 (periodical cell update);
 - listen to all FACH transport channels mapped on S-CCPCH assigned to this UE;
- if the UE is "out of service area":
 - perform cell reselection process as specified in 3GPP TS 25.304;
 - run timers T305 (periodical cell update), and T317 (cell update when re-entering "in service") or T307 (transition to Idle mode)

7.2.2.3 CELL_DCH state

In the CELL_DCH state the UE shall perform the following actions:

- if DCCH and DTCH are available:
 - read system information broadcast on FACH as specified in subclause 8.1.1.3 (applicable only to UEs with certain capabilities and camping on FDD cells);
 - read the system information as specified in subclause 8.1.1 (for UEs camping on TDD cells);
 - perform measurements process according to measurement control information as specified in subclause 8.4 and in clause 14;

8 RRC procedures

On receiving a message the UE shall first apply integrity check as appropriate and then proceed with error handling as specified in clause 9 before continuing on with the procedure as specified in the relevant subclause. The RRC entity in the UE shall consider PDUs to have been transmitted when they are submitted to the lower layers. In the UE, timers are started when the PDUs are sent on the radio interface in the case of the transmission using the CCCH.

8.1 RRC Connection Management Procedures

8.1.1 Broadcast of system information

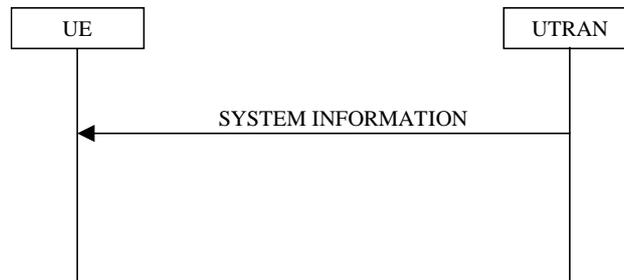


Figure 6: Broadcast of system information

8.1.1.1 General

The purpose of this procedure is to broadcast system information from the UTRAN to UEs in a cell.

8.1.1.1.1 System information structure

The system information elements are broadcast in *system information blocks*. A system information block groups together system information elements of the same nature. Different system information blocks may have different characteristics, e.g. regarding their repetition rate and the requirements on UEs to re-read the system information blocks.

The system information is organised as a tree. A *master information block* gives references and scheduling information to a number of system information blocks in a cell. The system information blocks contain the actual system information. The master information block may optionally also contain reference and scheduling information to one or two *scheduling blocks*, which give references and scheduling information for additional system information blocks. Scheduling information for a system information block may only be included in either the master information block or one of the scheduling blocks.

For all system information blocks except System Information Block type 16, the content is the same in each occurrence for system information blocks using value tag. System Information Block type 16 may occur more than once with different content. In this case scheduling information is provided for each such occurrence of the system information block. System information blocks that do not use value tag may have different content for each occurrence.

8.1.1.1.2 System information blocks

Table 8.1.1 specifies all system information blocks and their characteristics.

The *area scope column* in table 8.1.1 specifies the area where a system information block's value tag is valid. If the area scope is *cell*, the UE shall consider the system information block to be valid only in the cell in which it was read. If system information blocks have been previously stored for this cell, the UE shall check whether the value tag for the system information block in the entered cell is different compared to the stored value tag. If the area scope is *PLMN*, the UE shall check the value tag for the system information block when a new cell is selected. If the value tag for the system information block in the new cell is different compared to the value tag for the system information block stored in the UE, the UE shall re-read the system information block.

For System information block type 16, which may have multiple occurrences, each occurrence has its own independent value tag. The UE shall re-read a particular occurrence if the value tag of this occurrence has changed compared to that stored in the UE.

The *UE mode/state column when block is valid* in Table 8.1.1 specifies in which UE mode or UE state the IEs in a system information block shall be regarded as valid by the UE. In other words, the indicated system information block becomes invalid upon change to a mode/state that is not included in this column.

The *UE mode/state column when block is read* in Table 8.1.1 specifies in which UE mode or UE state the IEs in a system information block shall be read by the UE.

NOTE 1 There are a number of system information blocks that include the same IEs while the UE mode/state in which the information is valid differs. This approach is intended to allow the use of different IE values in different UE mode/states.

NOTE 2 The requirements concerning when a UE shall read system information blocks are specified indirectly; these requirements may be derived from the procedure specifications that specify which IEs are required in the different UE modes/states in conjunction with the different performance requirements that are specified.

The *Scheduling information* column in Table 8.1.1 specifies the position and repetition period for the SIB.

The *modification of system information* column in Table 8.1.1 specifies the update mechanisms applicable for a certain system information block. For system information blocks with a value tag, the UE shall update the information according to subclause 8.1.1.7.1 or 8.1.1.7.2. For system information blocks with an expiration timer, the UE shall, when the timer expires, perform an update of the information according to subclause 8.1.1.7.4.

Table 8.1.1: Specification of system information block characteristics

System information block	Area scope	UE mode/state when block is valid	UE mode/state when block is read	Scheduling information	Modification of system information	Additional comment
Master information block	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	SIB_POS = 0 SIB_REP = 8 (FDD) SIB_REP = 8, 16, 32 (TDD) SIB_OFF=2	Value tag	
Scheduling block 1	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information" in MIB	Value tag	
Scheduling block 2	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information" in MIB	Value tag	
System information block type 1	PLMN	Idle mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle	Specified by the IE "Scheduling information"	Value tag	
System information block type 2	Cell	URA_PCH	URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 3	Cell	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Specified by the IE "Scheduling information"	Value tag	
System information block type 4	Cell	CELL_FACH, CELL_PCH, URA_PCH	CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	If System information block type 4 is not broadcast in a cell, the connected mode UE shall read System information block type 3
System information block type 5	Cell	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Idle mode, (CELL_FACH, CELL_PCH, URA_PCH)	Specified by the IE "Scheduling information"	Value tag	
System information block type 6	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH (TDD only)	Specified by the IE "Scheduling information"	Value tag	If system information block type 6 is not broadcast in a cell, the connected mode UE shall read System information block type 5. If some of the optional IEs are not included in System information block type 6, the UE shall read the corresponding IEs in System information block type 5
System information block type 7	Cell	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Idle mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Expiration timer = MIN([320 ms], SIB_REP * ExpirationTimeFactor)	
System information block type 8	Cell	CELL_FACH, CELL_PCH, URA_PCH	CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	

System information block type 9	Cell	CELL_FACH, CELL_PCH, URA_PCH	CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Expiration timer = SIB_REP	
System information block type 10	Cell	CELL_DCH	CELL_DCH	Specified by the IE "Scheduling information"	Expiration timer = SIB_REP	
System information block type 11	Cell	Idle mode (CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH)	Idle mode (CELL_FACH, CELL_PCH, URA_PCH)	Specified by the IE "Scheduling information"	Value tag	
System information block type 12	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	If some of the optional IEs are not included in System information block type 12, the UE shall read the corresponding IEs in System information block type 11.
System information block type 13	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.1	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.2	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.3	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 13.4	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 14	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Specified by the IE "Scheduling information"	Expiration timer = MIN([320 ms], SIB_REP * ExpirationTimeFactor)	This system information block is used in TDD mode only.
System information block type 15	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.1	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.2	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 15.3	Cell	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	
System information block type 16	PLMN	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Idle Mode, CELL_FACH, CELL_PCH, URA_PCH	Specified by the IE "Scheduling information"	Value tag	For this system information block there may be multiple occurrences

System information block type 17	Cell	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	CELL_FACH, CELL_PCH, URA_PCH, CELL_DCH	Specified by the IE "Scheduling information"	Expiration timer = SIB_REP	This system information block is used in TDD mode only.
----------------------------------	------	--	--	--	----------------------------	---

The UE shall acquire all system information blocks except system information block type 10 on BCH. System Information Block type 10 shall be acquired on the FACH and only by UEs with support for simultaneous reception of one SCCPCH and one DPCH. If System Information Block type 10 is not broadcast in a cell, the DRAC procedures do not apply in this cell. System Information Block type 10 is used in FDD mode only.

8.1.1.1.3 Segmentation and concatenation of system information blocks

A generic SYSTEM INFORMATION message is used to convey the system information blocks on the BCCH. A given BCCH may be mapped onto either a BCH- or a FACH transport channel according to subclause 8.1.1.1.2. The size of the SYSTEM INFORMATION message shall fit the size of a BCH- or a FACH transport block.

The RRC layer in UTRAN performs segmentation and concatenation of encoded system information blocks. If the encoded system information block is larger than the size of a SYSTEM INFORMATION message, it will be segmented and transmitted in several messages. If the encoded system information block is smaller than a SYSTEM INFORMATION message, UTRAN may concatenate (parts of) several system information blocks, or the first segment or the last segment into the same message as specified in the remainder of this clause.

Four different segment types are defined:

- First segment;
- Subsequent segment;
- Last segment;
- Complete.

Each of the types - *First*, *Subsequent* and *Last segment* - are used to transfer segments of a master information block, scheduling block or a system information block. The segment type, *Complete*, is used to transfer a complete master information block, complete scheduling block or a complete system information block.

Each segment consists of a header and a data field. The data field carries the encoded system information elements. The header contains the following parameters:

- The number of segments in the system information block (SEG_COUNT). This parameter is only included in the header if the segment type is "First segment".
- SIB type. The SIB type uniquely identifies the master information block, scheduling block or a system information block.
- Segment index. This parameter is only included in the header if the segment type is "Subsequent segment" or "Last segment".

UTRAN may combine one or several segments of variable length in the same SYSTEM INFORMATION message. The following combinations are allowed:

1. No segment;
2. First segment;
3. Subsequent segment;
4. Last segment;
5. Last segment + First segment;
6. Last segment + one or several Complete;
7. Last segment + one or several Complete + First segment;

8. One or several Complete;
9. One or several Complete + First segment.

The "No segment" combination is used when there is no master information block, scheduling block or system information block scheduled for a specific BCH transport block.

UEs are not required to support the reception of multiple occurrences of a system information block type within one SYSTEM INFORMATION message.

NOTE: Since the SIB type is the same for each occurrence of the system information block, the UE does not know the order in which the occurrences, scheduled for this SYSTEM INFORMATION message, appear. Therefore, the UE is unable to determine which scheduling information, e.g., value tag relates to which occurrence of the system information block.

8.1.1.1.4 Re-assembly of segments

The RRC layer in the UE shall perform re-assembly of segments. All segments belonging to the same master information block, scheduling block or system information block shall be assembled in ascending order with respect to the segment index. When all segments of the master information block, scheduling block or a system information block have been received, the UE shall perform decoding of the complete master information block, scheduling block or system information block. For System Information Block type 16 which may have multiple occurrences, each occurrence shall be re-assembled independently.

The UE shall discard system information blocks of which segments were missing, of which segments were received out of sequence and/or for which duplicate segments were received.

If the UE receives a Subsequent segment or Last segment where the index in IE "Segment index" is larger than the number of segments stated in IE "SEG_COUNT" in the scheduling information for that scheduling block or system information block,

- the UE may
 - read all the segments to create a system information block;
 - store the content of the system information block with a value tag set to the value NULL; and
 - consider the content of the scheduling block or system information block as valid,
 - until it receives the same type of scheduling block or system information block in a position according to its scheduling information or
 - at most for 6 hours after reception.
- and the UE shall:
 - read scheduling information for that scheduling block or system information block.

If the UE receives a Subsequent segment or Last segment where the index in IE "Segment index" is larger than the number of segments stated in IE "SEG_COUNT" in the First segment, the UE shall

- discard all segments for that master information block, scheduling block or system information block and
- re-read the scheduling information for that system information block.
- then re-read all segments for that system information block.

8.1.1.1.5 Scheduling of system information

Scheduling of system information blocks is performed by the RRC layer in UTRAN. If segmentation is used, it should be possible to schedule each segment separately.

To allow the mixing of system information blocks with short repetition period and system information blocks with segmentation over many frames, UTRAN may multiplex segments from different system information blocks. Multiplexing and de-multiplexing is performed by the RRC layer.

The scheduling of each system information block broadcast on a BCH transport channel is defined by the following parameters:

- the number of segments (SEG_COUNT);
- the repetition period (SIB_REP). The same value applies to all segments;
- the position (phase) of the first segment within one cycle of the Cell System Frame Number (SIB_POS(0)). Since system information blocks are repeated with period SIB_REP, the value of SIB_POS(i), $i = 0, 1, 2, \dots, \text{SEG_COUNT}-1$ must be less than SIB_REP for all segments;
- the offset of the subsequent segments in ascending index order (SIB_OFF(i), $i = 1, 2, \dots, \text{SEG_COUNT}-1$). The position of the subsequent segments is calculated using the following: $\text{SIB_POS}(i) = \text{SIB_POS}(i-1) + \text{SIB_OFF}(i)$.

The scheduling is based on the Cell System Frame Number (SFN). The SFN of a frame at which a particular segment, i , with $i = 0, 1, 2, \dots, \text{SEG_COUNT}-1$ of a system information block occurs, fulfils the following relation:

$$\text{SFN mod SIB_REP} = \text{SIB_POS}(i)$$

In FDD and TDD the scheduling of the master information block is fixed as defined in Table 8.1.1. For TDD, UTRAN may apply one of the values allowed for the master information block's repetition period. The value that UTRAN is using in TDD is not signalled; UEs have to determine it by trial and error.

8.1.1.2 Initiation

The system information is continuously broadcast on a regular basis in accordance with the scheduling defined for each system information block.

8.1.1.3 Reception of SYSTEM INFORMATION messages by the UE

The UE shall read SYSTEM INFORMATION messages broadcast on a BCH transport channel in idle mode and in the connected mode in states CELL_FACH, CELL_PCH, URA_PCH and CELL_DCH (TDD only). In addition, UEs which support simultaneous reception of one SCCPCH and one DPCH shall read system information on a FACH transport channel when in CELL_DCH state.

In idle mode and connected mode different combinations of system information blocks are valid. The UE shall acquire the system information blocks that are needed according to Table 8.1.1.

The UE may store system information blocks with cell or PLMN area scope (including their value tag) for different cells and different PLMNs, to be used if the UE returns to these cells.

The UE shall consider all stored system information blocks as invalid after it has been switched off.

When selecting a new cell within the currently used PLMN, the UE shall consider all current system information blocks with area scope cell to be invalid. If the UE has stored valid system information blocks for the newly selected cell, the UE may set those as current system information blocks.

After selecting a new PLMN, the UE shall consider all current system information blocks to be invalid. If the UE has previously stored valid system information blocks for the selected cell of the new PLMN, the UE may set those as current system information blocks. Upon selection of a new PLMN the UE shall store all information elements specified within variable SELECTED_PLMN for the new PLMN within this variable.

8.1.1.4 Reception of SYSTEM INFORMATION messages broadcast on a FACH transport channel

System information block type 10 may be broadcast on FACH, as specified in 8.1.1.1.2.

When reading system information blocks on FACH, the UE shall perform the actions as defined in subclause 8.1.1.6.

8.1.1.5 Actions upon reception of the Master Information Block and Scheduling Block(s)

When selecting a new cell, the UE shall read the master information block. The UE may use the pre-defined scheduling information to locate the master information block in the cell.

Upon reception of the master information block, the UE shall:

- if the "PLMN type" in the variable SELECTED_PLMN has the value "GSM-MAP" and the IE "PLMN Type" has the value "GSM-MAP" or "GSM-MAP and ANSI-41",:
 - check the IE "PLMN identity" in the master information block and verify that it is the selected PLMN, stored as "PLMN identity" in the variable SELECTED_PLMN.
- if the "PLMN type" in the variable SELECTED_PLMN has the value "ANSI-41" and the IE "PLMN Type" has the value "ANSI-41" or "GSM-MAP and ANSI-41",:
 - store the ANSI-41 Information elements contained in the master information block and perform initial process for ANSI-41.
- compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG.
- if the value tags differ, or if no IEs for the master information block are stored:
 - store the value tag into the variable VALUE_TAG for the master information block;
 - read and store scheduling information included in the master information block;
- if the value tags are the same the UE may use stored system information blocks and scheduling blocks using value tag that were stored in this cell and this PLMN as valid system information.

For all system information blocks or scheduling blocks, that are supported by the UE, referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

- for all system information blocks with area scope PLMN that use value tags:
 - compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;
 - if the value tags differ, or if no IEs for the corresponding system information block are stored,:
 - store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;
 - read and store the IEs of that system information block.
 - if the value tags are the same the UE may use stored system information blocks using value tag that were stored in this PLMN as valid system information.
- for all system information blocks or scheduling blocks with area scope cell that use value tags:
 - compare the value tag read in scheduling information for that system information block or scheduling block with the value stored within the variable VALUE_TAG for that system information block or scheduling block;
 - if the value tags differ, or if no IEs for the corresponding system information block or scheduling block are stored,
 - store the value tag read in scheduling information for that system information block or scheduling block into the variable VALUE_TAG;
 - read and store the IEs of that system information block or scheduling block;
 - if the value tags are the same the UE may use stored system information blocks using value tags that were stored in this cell and this PLMN as valid system information.

- for system information blocks of type 16, which may have multiple occurrences:
 - compare the value tag and the configuration identity for the occurrence of the system information blocks read in scheduling information with the value tag and configuration identity stored within the variable VALUE_TAG;
 - if the value tags differ, or if no IEs from the occurrence with that configuration identity of the system information block are stored,
 - store the value tag read in scheduling information for that system information block and the occurrence with that configuration identity into the variable VALUE_TAG;
 - read and store the IEs of that system information block.
 - if the value tags and the configuration identity are the same the UE may use stored occurrences of system information blocks using value tag and configuration identity that were stored in this cell and this PLMN as valid system information.

For system information blocks, not supported by the UE, but referenced either in the master information block or in the scheduling blocks, the UE may

- skip reading this system information block;
- skip monitoring changes to this system information block

If the UE:

- receives a scheduling block at a position different from its position according to the scheduling information for the scheduling block; or
- receives a scheduling block for which scheduling information has not been received

the UE may:

- store the content of the scheduling block with a value tag set to the value NULL; and
- consider the content of the scheduling block as valid until it receives the same type of scheduling block in a position according to its scheduling information or at most for 6 hours after reception.

If the UE does not find a scheduling block in a position where it should be according to its scheduling information, but a transport block with correct CRC was found at that position, the UE shall read the scheduling information for this scheduling block.

If the UE does not find the master information block in a position fulfilling $(SFN \bmod (MIB_REP*4) = 0)$, (but a transport block with correct CRC was found at that position), the UE shall,

- consider the master information block as not found.
- consider the cell to be barred according to [4] and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

8.1.1.6 Actions upon reception of system information blocks

The UE may use the scheduling information included within the master information block and the scheduling blocks to locate each system information block to be acquired.

The UE should only expect one occurrence of the scheduling information for a system information block in the master information block and any of the scheduling blocks. However, to enable future introduction of new system information blocks, the UE shall also be able to receive system information blocks other than the ones indicated within the scheduling information. The UE may ignore contents of such system information block.

If the UE

- receives a system information block in a position according to the scheduling information for the system information block; and
- this system information block uses a value tag according to the system information block type

the UE shall:

- store the content of the system information block together with the value of its value tag in the scheduling information for the system information block; and
- consider the content of the system information block valid until, if used, the value tag in the scheduling information for the system information block is changed or at most for 6 hours after reception.

If the UE

- receives a system information block in a position according to the scheduling information for the system information block; and
- this system information block does not use a value tag according to the system information block type

the UE shall:

- store the content of the system information block; and
- start an expiration timer using a value as defined in Table 8.1.1 for that system information block type; and
- consider the content of the system information block valid until, the expiration timer expires.

If the UE

- receives a system information block at a position different from its position according to the scheduling information for the system information block; or
- receives a system information block for which scheduling information has not been received; and
- this system information block uses a value tag according to the system information block type

the UE may:

- store the content of the system information block with a value tag set to the value NULL; and
- consider the content of the system information block as valid until it receives the same type of system information block in a position according to its scheduling information or at most for 6 hours after reception.

If the UE does not find a system information block in a position where it should be according to its scheduling information, but a transport block with correct CRC was found at that position, the UE shall read the scheduling information for this system information block.

The UE shall act upon all received information elements as specified in subclause 8.6 unless specified otherwise in the following sections.

8.1.1.6.1 System Information Block type 1

If in idle mode, the UE should store all relevant IEs included in this system information block if the "PLMN Type" in the variable SELECTED_PLMN has the value "GSM-MAP" and the IE "PLMN type" in the Master Information Block has the value "GSM-MAP" or "GSM-MAP and ANSI-41". The UE shall also:

- forward the content of the IE "CN domain specific NAS system information" to the non-access stratum entity indicated by the IE "CN domain identity";
- use the IE "CN domain specific DRX cycle length coefficient" to calculate frame number for the Paging Occasions and Page indicator as specified in 3GPP TS 25.304;
- use the values in the IE "UE Timers and constants in idle mode" for the relevant timers and counters.

If in connected mode the UE shall not use the values of the IEs in this system information block except for the timers and constant values given by the IE "UE timers and constants in connected mode".

If in idle mode and system information block type 1 is not scheduled on BCH, and system information block type 13 is not scheduled on BCH the UE shall:

- consider the cell to be barred according to [4]. The UE shall consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

8.1.1.6.2 System Information Block type 2

If in connected mode the UE should store all relevant IEs included in this system information block. The UE shall:

- if in state URA_PCH, start to perform URA updates using the information in the IE "URA identity".

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.3 System Information Block type 3

The UE should store all relevant IEs included in this system information block. The UE shall:

- if in connected mode, and System Information Block 4 is indicated as used in the cell:
 - read and act on information sent in that block.

If in idle mode and System Information Block type 3 is not scheduled on BCH the UE shall:

- consider the cell to be barred according to [4]; and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

If in connected mode and System Information Block type 3 is not scheduled on BCH, and System Information Block type 4 is not scheduled on BCH the UE shall:

- consider the cell to be barred according to [4]; and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "T_{barred}".

8.1.1.6.4 System Information Block type 4

If in connected mode, the UE should store all relevant IEs included in this system information block.

If in idle mode, the UE shall not use the values of the IEs included in this system information block.

8.1.1.6.5 System Information Block type 5

The UE should store all relevant IEs included in this system information block. The UE shall:

- if in connected mode, and System Information Block type 6 is indicated as used in the cell:
 - read and act on information sent in System Information Block type 6.
- replace the TFS of the transport channel with the identical transport channel identity with the one stored in the UE if any;
- let the physical channel(s) of type PRACH given by the IE(s) "PRACH info" be the default in uplink for the PRACH if UE is in CELL_FACH state;
- start to receive the physical channel of type AICH using the parameters given by the IE "AICH info" (FDD only) when given allocated PRACH is used;
- select a Secondary CCPCH as specified in subclause 8.6, and start to receive the physical channel of type PICH associated with the PCH carried by the selected Secondary CCPCH using the parameters given by the IE "PICH info" if UE is in Idle mode or in CELL_PCH or URA_PCH state;

- start to monitor its paging occasions on the selected PICH if UE is in Idle mode or in CELL_PCH or URA_PCH state;
- start to receive the selected physical channel of type Secondary CCPCH using the parameters given by the IE(s) "Secondary CCPCH info" if UE is in CELL_FACH state;
- in TDD: use the IE "Midamble configuration" for receiver configuration;
- in TDD: use the IE "TDD open loop power control" as defined in subclause 8.5.7;
- in TDD: if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included, store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. For every configuration, for which the IE "SFN Time info" is included, the information shall be stored for the duration given there.

If in idle mode and System Information Block type 5 is not scheduled on BCH or System Information Block type 5 is scheduled but AICH info or PICH info is not present, the UE shall:

- consider the cell to be barred according to [4]; and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

If in connected mode and System Information Block type 5 is not scheduled on BCH, and System Information Block type 6 is not scheduled on BCH, or any of System Information Block type 5 or type 6 is scheduled but IE "AICH info" or IE "PICH info" is not present, the UE shall:

- consider the cell to be barred according to [4]; and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

8.1.1.6.6 System Information Block type 6

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- replace the TFS of the transport channel with the identical transport channel identity with the one stored in the UE if any;
- let the physical channel(s) of type PRACH given by the IE(s) "PRACH info" be the default in uplink if UE is in CELL_FACH state. If the IE "PRACH info" is not included, the UE shall read the corresponding IE(s) in System Information Block type 5 and use that information to configure the PRACH;
- start to receive the physical channel of type AICH using the parameters given by the IE "AICH info" when associated PRACH is used. If the IE "AICH info" is not included, the UE shall read the corresponding IE in System Information Block type 5 and use that information (FDD only);
- select a Secondary CCPCH as specified in subclause 8.6, and start to receive the physical channel of type PICH associated with the PCH carried by the selected Secondary CCPCH using the parameters given by the IE "PICH info" if the UE is in CELL_PCH or URA_PCH state. If the IE "PICH info" is not included, the UE shall read the corresponding IE in System Information Block type 5 and use that information;
- start to monitor its paging occasions on the selected PICH if the UE is in CELL_PCH or URA_PCH state;
- start to receive the selected physical channel of type Secondary CCPCH using the parameters given by the IE(s) "Secondary CCPCH info" if the UE is in CELL_FACH state. If the IE "Secondary CCPCH info" is not included, the UE shall read the corresponding IE(s) in System Information Block type 5 and use that information;
- in TDD: use the IE "TDD open loop power control" as defined in subclause 8.5.7;
- in TDD: if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included, store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. For every configuration, for which the IE "SFN Time info" is included, the information shall be stored for the duration given there.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.7 System Information Block type 7

The UE should store all relevant IEs included in this system information block.

If System Information Block type 7 is not scheduled on BCH the UE shall:

- consider the cell to be barred according to [4]; and
- consider the barred cell as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE " T_{barred} ".

8.1.1.6.8 System Information Block type 8

This system information block type is used only in FDD.

If in connected mode, the UE should store all relevant IEs included in this system information block.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.9 System Information Block type 9

This system information block type is used only in FDD.

If in connected mode, the UE should store all relevant IEs included in the system information block. The UE shall:

- start a timer set to the value given by the repetition period (SIB_REP) for that system information block

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.10 System Information Block type 10

This system information block type is used only in FDD.

If in state CELL_DCH, the UE should store all relevant IEs included in this system information block. The UE shall:

- start a timer set to the value given by the repetition period (SIB_REP) for that system information block;
- perform actions defined in subclause 14.8.

If in idle mode, state CELL_FACH, state CELL_PCH or state URA_PCH, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.11 System Information Block type 11

The UE should store all relevant IEs included in this system information block. The UE shall:

- if in connected mode, and System Information Block type 12 is indicated as used in the cell:
 - read and act on information sent in System Information Block type 12;
- for each measurement type start a measurement using the set of IEs specified for that measurement type;
- associate each measurement with the identity number given by the IE "Measurement identity";
- if included, store the IE "Intra-frequency reporting quantity" and the IE "Intra-frequency measurement reporting criteria" or "Periodical reporting criteria" in order to activate reporting when state CELL_DCH is entered;
- If IE "Use of HCS" is set to "used", indicating that HCS is used, do the following:
 - If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Intra-frequency cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;
 - If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Intra-frequency cell info list", for that cell use the same parameter values as used for the preceding IE "Intra-frequency cell info list";

- If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Inter-frequency cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;
- If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Inter-frequency cell info list", for that cell use the same parameter values as used for the preceding IE "Inter-frequency cell info list";
- If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Inter-RAT Cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;
- If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Inter-RAT cell info list", for that cell use the same parameter values as used for the preceding IE "Inter-RAT cell info list";
- If IE "FACH measurement occasion info" is included:
 - act as specified in subclause 8.6.7
- else:
 - neither perform inter-frequency/inter-RAT measurements nor inter-frequency/inter-RAT cell re-selection evaluation, independent of UE measurement capabilities.

8.1.1.6.12 System Information Block type 12

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- for each measurement type start (or continue) a measurement using the set of IEs specified for that measurement type;
- remove the intra-frequency cells given by the IE "Removed intra-frequency cells" from the list of intra-frequency cells specified in system information block type 11 and add the intra-frequency cells given by the IE "New intra-frequency cells" to the list of intra-frequency cells specified in system information block type 11;
- if any of the IEs "Intra-frequency measurement quantity", "Intra-frequency reporting quantity for RACH reporting", "Maximum number of reported cells on RACH" or "Reporting information for state CELL_DCH" are not included in the system information block, read the corresponding IE(s) in system information block type 11 and use that information for the intra-frequency measurement;
- if included in this system information block or in System Information Block type 11, store the IE "Intra-frequency reporting quantity" and the IE "Intra-frequency measurement reporting criteria" or "Periodical reporting criteria" in order to activate reporting when state CELL_DCH is entered;
- remove the inter-frequency cells given by the IE "Removed inter-frequency cells" from the list of inter-frequency cells specified in System Information Block type 11 and add the inter-frequency cells given by the IE "New inter-frequency cells" to the list of inter-frequency cells specified in System Information Block type 11;
- if the IE "Inter-frequency measurement quantity" is not included in the system information block, read the corresponding IE in System Information Block type 11 and use that information for the inter-frequency measurement;
- remove the inter-RAT cells given by the IE "Removed inter-RAT cells" from the list of inter-RAT cells specified in System Information Block type 11 and add the inter-RAT cells given by the IE "New inter-RAT cells" to the list of inter-RAT cells specified in System Information Block type 11;
- if the IE "Inter-RAT measurement quantity" is not included in the system information block, read the corresponding IE in System Information Block type 11 and use that information for the inter-RAT measurement;
- if in state CELL_FACH, start traffic volume measurement reporting as specified in the IE "Traffic volume reporting quantity";
- associate each measurement with the identity number given by the IE "Measurement identity";
- If IE "Use of HCS" is set to "used", indicating that HCS is used, do the following:
 - If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Intra-frequency cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;

- If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Intra-frequency cell info list", for that cell use the same parameter values as used for the preceding IE "Intra-frequency cell info list";
- If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Inter-frequency cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;
- If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Inter-frequency cell info list", for that cell use the same parameter values as used for the preceding IE "Inter-frequency cell info list";
- If IE "HCS neighbouring cell information" is not included in the first occurrence of IE "Inter-RAT cell info list", use the default values specified for the IE "HCS neighbouring cell information" for that cell;
- If IE "HCS neighbouring cell information" is not included in other occurrence of IE "Inter-RAT cell info list", for that cell use the same parameter values as used for the preceding IE "Inter-RAT cell info list".
- If IE "FACH measurement occasion info" is included:
 - act as specified in subclause 8.6.7
- else:
 - perform neither inter-frequency/inter-RAT measurements nor inter-frequency/inter-RAT cell re-selection evaluation, independent of UE measurement capabilities.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.6.13 System Information Block type 13

If in idle or connected mode, the UE should store all relevant IEs included in this system information block except for the IEs "CN domain specific DRX cycle length coefficient", "UE timers and constants in idle mode" and "Capability update requirement" which shall be stored only in the idle mode case. The UE shall read System Information Block type 13 and the associated System Information Block types 13.1, 13.2, 13.3 and 13.4 only when the "PLMN Type" in the variable SELECTED_PLMN has the value "ANSI-41" and the IE "PLMN type" in the Master Information Block has the value "ANSI-41" or "GSM-MAP and ANSI-41". The UE shall also:

- forward the content of the IE "CN domain specific NAS system information" to the non-access stratum entity indicated by the IE "CN domain identity";
- use the IE "CN domain specific DRX cycle length coefficient" to calculate frame number for the Paging Occasions and Page indicator as specified in 3GPP TS 25.304.

8.1.1.6.14 System Information Block type 14

This system information block type is used only in TDD.

The UE should store all relevant IEs included in this system information block. The UE shall:

- use the IE "UL Timeslot Interference" to calculate PRACH, DPCH and PUSCH transmit power for TDD uplink open loop power control as defined in subclause 8.5.7.

8.1.1.6.15 System Information Block type 15

If the UE is in idle or connected mode, and supports GPS location services and/or OTDOA location services it should store all relevant IEs included in this system information block. The UE shall:

- if the IE "UP Cipher GPS Data Indicator" is included, and the UE has a full or reduced complexity GPS receiver functionality (the UE will know that the broadcast GPS data is ciphered in accordance with the Data Assistance Ciphering Algorithm detailed in [18]):
 - store the parameters contained within this IE (see 10.3.7.86 for details), and use them to decipher the broadcast UP GPS information contained within the System Information Block types 15.1, 15.2 and 15.3;
- if the IE "UP OTDOA assistance for SIB" is included:
 - store the relevant information (refer to 10.3.7.104 for details).

8.1.1.6.15.1 System Information Block type 15.1

The UE should store all the relevant IEs included in this system information block . The UE shall:

- interpret a value of "1" of "UTRAN Time Flag" to mean that UTRAN timing information value (SFN) is present, and "0" to mean that only the Reference GPS TOW field value is provided;
- interpret a value of "1" of "NODE B Clock Drift Flag" to mean that NODE B Clock Drift information value is present, and "0" to mean that this IE value is not provided;
- if the IE "NODE B Clock Drift" is included:
 - use it as an estimate of the drift rate of the NODE B clock relative to GPS time;
- if the IE "NODE B Clock Drift" is not included:
 - assume the value 0;
- use IE "Reference Location" as a priori knowledge of the approximate location of the UE;
- if SFN is included:
 - use it as the relationship between GPS time and air-interface timing of the NODE B transmission in the serving cell;
- use "Reference GPS TOW" as GPS Time of Week which is the start of the frame with SFN=0;
- use "Status/Health" to indicate the status of the differential corrections;
- act on IE group "DGPS information" in a similar manner as specified in [13] except that the scale factors for PRC and RRC are different. In addition, the IE group DGPS information also include Delta PRC2 and Delta RRC2. Delta PRC2 is the difference in the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris two issues ago IODE-2. Delta RRC2 is the difference in the pseudorange rate-of-change correction between the satellite's ephemeris identified by IODE and IODE-2. These two additional IEs can extend the life of the raw ephemeris data up to 6 hours.

8.1.1.6.15.2 System Information Block type 15.2

The UE should store all the relevant IEs included in this system information block . The UE shall:

- interpret IE "Transmission TOW" as a very coarse estimate of the current time, i.e., the approximate GPS time-of-week when the message is broadcast;
- interpret IE "SatID" as the satellite ID of the data from which this message was obtained;
- act on the rest of the IEs in a similar manner as specified in [12]. In addition, the UE can utilise these IEs for GPS time dissemination and sensitivity improvement.

8.1.1.6.15.3 System Information Block type 15.3

The UE should store all the relevant IEs included in this system information block . The UE shall:

- interpret IE "Transmission TOW" as a very coarse estimate of the current time, i.e., the approximate GPS time-of-week when the message is broadcast;
- interpret IE "SatMask" as the satellites that contain the pages being broadcast in this message;
- interpret IE "LSB TOW" as the least significant 8 bits of the TOW ([12]);
- interpret IE "SFIO" as the least significant bit of the SubFrame (SF) ID for which the following word 3 through word 10 data applies. Zero indicates subframe ID = 4, and One indicates Subframe ID = 5;
- interpret IE "Data ID" as the Data ID field contained in the indicated subframe, word 3, most significant 2 bits, as defined by [12];

- interpret IE "Page No" as the Page ID of the indicated subframe for which the following Word 3 through Word 10 data applies;
- act on the rest of the IEs (Word 3 to Word 10) in a similar manner as specified in [12], excluding non-information bits, "Data ID" and "SV ID" from Word 3 (16 bits left), 2 bit "t" from Word 10 (22 bits left). Word 4 through Word 9 have 24 bits left. In addition, the UE can utilise these IEs including non-information bits for GPS time dissemination and sensitivity improvement.

8.1.1.6.16 System Information Block type 16

For System Information Block type 16 multiple occurrences may be used; one occurrence for each predefined configuration. To identify the different predefined configurations, the scheduling information for System Information Block type 16 includes IE "Predefined configuration identity and value tag" instead of the commonly used IE "PLMN Value tag".

The UE should store all relevant IEs included in this system information block. The UE shall:

- compare for each predefined configuration the value tag of the stored predefined configuration, if any, with the preconfiguration value tag included in the IE "Predefined configuration identity and value tag" for the occurrence of the SIB with the same predefined configuration identity;
- in case the UE has no predefined configuration stored with the same identity or in case the predefined configuration value tag is different:
 - store the predefined configuration information together with its identity and value tag for later use e.g. during handover to UTRAN;
 - in case a predefined configuration with the same identity was stored:
 - overwrite this one with the new configuration read via system information for later use e.g. during handover to UTRAN.

The above handling applies regardless of whether the stored predefined configuration information has been obtained via UTRA or via another RAT.

The UE is not required to complete reading of all occurrences of System Information Block type 16 before initiating RRC connection establishment.

8.1.1.6.17 System Information Block type 17

This system information block type is used only for TDD.

If in connected mode, the UE should store all relevant IEs included in this system information block. The UE shall:

- if the IE "PDSCH system information" and/or the IE "PUSCH system information" is included, store each of the configurations given there with the associated identity given in the IE "PDSCH Identity" and/or "PUSCH Identity" respectively. This information shall become invalid after the time specified by the repetition period (SIB_REP) for this system information block.

If in idle mode, the UE shall not use the values of the IEs in this system information block.

8.1.1.7 Modification of system information

The UE shall consider all stored system information blocks as invalid after it has been switched off. For System Information Block type 16 that may have multiple occurrences, the UE shall handle each occurrence independently as specified in the previous; that is each occurrence is handled as a separate system information block.

NOTE: It should be noted that for the proper operation of the BCCH Modification Information sent on a PCH, the System Information should not be changed more frequently than can be accommodated by mobile stations operating at the maximum DRX cycle length supported by the UTRAN.

8.1.1.7.1 Modification of system information blocks using a value tag

Upon modifications of system information blocks using value tags, UTRAN should notify the new value tag for the master information block in the IE "BCCH modification info", transmitted in the following way:

- To reach UEs in idle mode, CELL_PCH state and URA_PCH state, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;
- To reach UEs in CELL_FACH state, the IE "BCCH modification info" is contained in a SYSTEM INFORMATION CHANGE INDICATION message transmitted on the BCCH mapped on at least one FACH on every Secondary CCPCH in the cell.

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message the containing the IE "BCCH modification info" containing the IE "MIB value tag" but not containing the IE "BCCH modification time", the UE shall perform actions as specified in subclause 8.1.1.7.3.

If the IE "BCCH modification time" is included the UE shall perform actions as specified in subclause 8.1.1.7.2.

8.1.1.7.2 Synchronised modification of system information blocks

For modification of some system information elements, e.g. reconfiguration of the channels, it is important for the UE to know exactly when a change occurs. In such cases, the UTRAN should notify the SFN when the change will occur as well as the new value tag for the master information block in the IE "BCCH modification info" transmitted in the following way:

- To reach UEs in idle mode, CELL_PCH state and URA_PCH state, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;
- To reach UEs in CELL_FACH state, the IE "BCCH modification info" is contained in a SYSTEM INFORMATION CHANGE INDICATION message transmitted on the BCCH mapped on at least one FACH on every Secondary CCPCH in the cell.

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message containing the IE "BCCH modification info" containing the IE "MIB value tag" and containing the "IE BCCH modification time", the UE shall:

- perform the actions as specified in subclause 8.1.1.7.3 at the time, indicated in the IE "BCCH Modification Information".

8.1.1.7.3 Actions upon system information change

The UE shall:

- compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.
- if the value tags differ:
 - read the master information block on BCH;
 - if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info":
 - perform actions as specified in subclause 8.1.1.5;
 - if the value tag of the master information block in the system information is the same as the value tag stored in the variable VALUE_TAG:
 - for the next occurrence of the master information block:
 - perform actions as specified in subclause 8.1.1.7.3 again;
 - if the value tag of the master information block in the system information is different from the value tag stored in the variable VALUE_TAG, and is different from the value in IE "MIB value tag" in "BCCH modification info":

- perform actions as specified in subclause 8.1.1.5;
- if $(VTCI - VTMIB) \bmod 8 < 4$, where VTCI is the value tag in the IE "MIB value tag" in "BCCH modification info" and VTMIB is the value tag of the master information block in the system information:
 - for the next occurrence of the master information block:
 - perform actions as specified in subclause 8.1.1.7.3 again.

8.1.1.7.4 Actions upon expiry of a system information expiry timer

When the expiry timer of a system information block not using a value tag expires

the UE shall:

consider the content of the system information block invalid;

- re-acquire the system information block again before the content can be used;

the UE may:

- postpone reading the system information block until the content is needed.

8.1.2 Paging

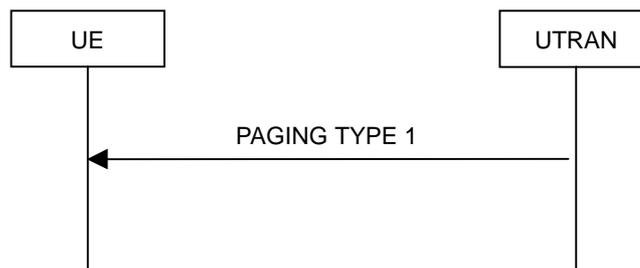


Figure 7: Paging

8.1.2.1 General

This procedure is used to transmit paging information to selected UEs in idle mode, CELL_PCH or URA_PCH state using the paging control channel (PCCH). Upper layers in the network may request paging, to e.g. establish a signalling connection. UTRAN may initiate paging for UEs in CELL_PCH or URA_PCH state to trigger a cell update procedure. In addition, UTRAN may initiate paging for UEs in idle mode, CELL_PCH and URA_PCH state to trigger reading of updated system information.

8.1.2.2 Initiation

UTRAN initiates the paging procedure by transmitting a PAGING TYPE 1 message on an appropriate paging occasion on the PCCH.

UTRAN may repeat transmission of a PAGING TYPE 1 message to a UE in several paging occasions to increase the probability of proper reception of a page.

UTRAN may page several UEs in the same paging occasion by including one IE "Paging record" for each UE in the PAGING TYPE 1 message.

UTRAN may also indicate that system information has been updated, by including the value tag of the master information block in the IE "BCCH modification information" in the PAGING TYPE 1 message. In this case, UTRAN may omit the IEs "Paging record".

8.1.2.3 Reception of a PAGING TYPE 1 message by the UE

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in 3GPP TS 25.304 and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.1.1. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

- if the IE "Used paging identity" is a CN identity:
 - compare the included UE identity with all of its allocated CN UE identities:
 - if one match is found:
 - forward the received UE identity and paging cause to the upper layer entity indicated by the IE "CN domain identity";
- otherwise:
 - ignore that paging record.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

- if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:
 - if the optional IE "CN originated page to connected mode UE" is included:
 - forward the corresponding paging cause and paging record type identifier to the upper layer entity indicated by the IE "CN domain identity";
 - perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2;
 - ignore any other remaining IE "Paging record" that may be present in the message;
- otherwise:
 - ignore that paging record.

If the IE "BCCH modification info" is included, any UE in idle mode, CELL_PCH or URA_PCH state shall perform the actions as specified in subclause 8.1.1 irrespective of IE "Paging record" occurrences in the message.

8.1.3 RRC connection establishment

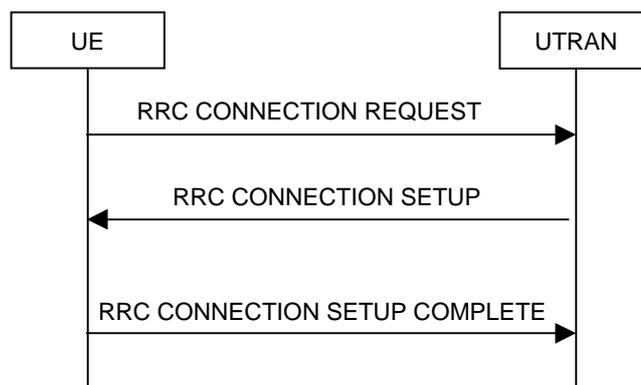


Figure 8: RRC Connection Establishment, network accepts RRC connection

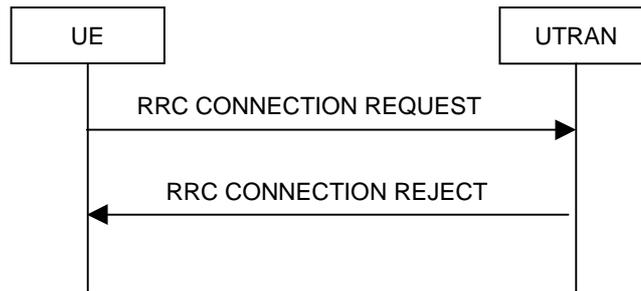


Figure 9: RRC Connection Establishment, network rejects RRC connection

8.1.3.1 General

The purpose of this procedure is to establish an RRC connection.

8.1.3.2 Initiation

The UE shall initiate the procedure when the non-access stratum in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists), as specified in subclause 8.1.8.

Upon initiation of the procedure, the UE shall:

- set the variable `PROTOCOL_ERROR_INDICATOR` to `FALSE`;
- set the IE "Initial UE identity" in the variable `INITIAL_UE_IDENTITY` according to subclause 8.5.1;
- set the contents of the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
- set CFN in relation to SFN of current cell according to subclause 8.5.15;
- delete the ciphering and integrity protection key in the USIM if the `START` for any CN domain is greater than the value "THRESHOLD" of the variable `START_THRESHOLD`. The deletion of the keys shall be informed to upper layers.
- perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
- submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;
- reset counter `V300`; and
- start timer `T300` when the MAC layer indicates success or failure to transmit the message;

8.1.3.3 RRC CONNECTION REQUEST message contents to set

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

- set the IE "Establishment cause" to the value of the variable `ESTABLISHMENT_CAUSE`;
- set the IE "Initial UE identity" to the value of the variable `INITIAL_UE_IDENTITY`;
- set the IE "Protocol error indicator" to the value of the variable `PROTOCOL_ERROR_INDICATOR`;
- include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 11.

8.1.3.4 Reception of an RRC CONNECTION REQUEST message by the UTRAN

Upon receiving an RRC CONNECTION REQUEST message, UTRAN should either:

- submit an RRC CONNECTION SETUP message to the lower layers for transmission on the downlink CCCH; or

- submit an RRC CONNECTION REJECT message on the downlink CCCH. In the RRC CONNECTION REJECT message, the UTRAN may direct the UE to another UTRA carrier or to another system. After the RRC CONNECTION REJECT message has been sent, all context information for the UE may be deleted in UTRAN.

8.1.3.5 Cell re-selection or T300 timeout

- if the UE has not yet received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and
- if cell re-selection or expiry of timer T300 occurs;

the UE shall:

- check the value of V300; and
 - if V300 is equal to or smaller than N300:
 - if cell re-selection occurred:
 - set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13; and
 - apply the given Access Service Class when accessing the RACH;
 - submit a new RRC CONNECTION REQUEST message to lower layers for transmission on the uplink CCCH;
 - increment counter V300;
 - restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - if V300 is greater than N300:
 - enter idle mode.
 - A connection failure may be indicated to the non-access stratum;
 - Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - The procedure ends.

8.1.3.6 Reception of an RRC CONNECTION SETUP message by the UE

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

- ignore the rest of the message;

If the values are identical, the UE shall:

- stop timer T300, and act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;
- if the UE will be in the CELL_FACH state at the conclusion of this procedure:
 - select PRACH according to subclause 8.6.6.2;
 - select Secondary CCPCH according to subclause 8.6.6.5;
 - if the contents of the variable C_RNTI is empty:

- perform a cell update procedure according to subclause 8.3.1 and then continue with the procedure as indicated in the following;
- enter a state according to subclause 8.6.3.3;
- submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per subclause 8.6.3.3, with the contents set as specified below:
 - set the IE "RRC transaction identifier" to
 - the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry.
 - calculate START values for each CN domain according to subclause 8.5.9 and include the result in the IE "START list";
 - if the IE "UE radio access FDD capability update requirement" included in the RRC CONNECTION SETUP message has the value TRUE:
 - include its UTRAN-specific FDD capabilities and its UTRAN –specific capabilities common to FDD and TDD in the IE "UE radio access capability";
 - if the IE "UE radio access TDD capability update requirement" included in the RRC CONNECTION SETUP message has the value TRUE:
 - include its UTRAN-specific TDD capabilities and its UTRAN –specific capabilities common to FDD and TDD in the IE "UE radio access capability";
 - if the IE "System specific capability update requirement list" is present in the RRC CONNECTION SETUP message:
 - include its inter-RAT capabilities for the requested systems in the IE "UE system specific capability".

When of the RRC CONNECTION SETUP COMPLETE message has been submitted to lower layers for transmission the UE shall:

- if the UE has entered CELL_FACH state:
 - start timer T305 if periodical cell update has been requested in system information block type 1;
- update its variable UE_CAPABILITY_TRANSFERRED which UE capabilities it has transmitted to the UTRAN;
- set the "Status" in the variable INTEGRITY_PROTECTION_INFO to "Not started";
- set the "Historical status" in the variable INTEGRITY_PROTECTION_INFO to "Never been active";

and the procedure ends.

8.1.3.7 Physical channel failure or cell re-selection

- If the UE failed to establish, per subclause 8.5.4, the physical channel(s) indicated in the RRC CONNECTION SETUP message; or
- If the UE performs cell re-selection:
 - after having received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and
 - before the RRC CONNECTION SETUP COMPLETE message is delivered to lower layers for transmission;

the UE shall:

- check the value of V300, and:

- if V300 is equal to or smaller than N300:
 - set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - increment counter V300; and
 - restart timer T300 when the MAC layer indicates success or failure in transmitting the message;
- if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.

8.1.3.8 Invalid RRC CONNECTION SETUP message

If the UE receives an RRC CONNECTION SETUP message which contains an IE "Initial UE identity" with a value which is identical to the value of the variable INITIAL_UE_IDENTITY, but the RRC CONNECTION SETUP message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

The UE shall check the value of V300, and

- if V300 is equal to or smaller than N300:
 - set the variable PROTOCOL_ERROR_INDICATOR to TRUE;
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - increment counter V300; and
 - restart timer T300 when the MAC layer indicates success or failure in transmitting the message;
- if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.

8.1.3.9 Reception of an RRC CONNECTION REJECT message by the UE

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall stop timer T300 and:

- if the IE "wait time" \neq '0', and
 - if the IE "frequency info" is present and:
 - if V300 is equal to or smaller than N300:
 - initiate cell selection on the designated UTRA carrier;
 - after having selected and camped on a cell:
 - set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - set the contents of the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - transmit an RRC CONNECTION REQUEST message on the uplink CCCH;
 - reset counter V300;
 - start timer T300 when the MAC layer indicates success or failure in transmitting the message;
 - disable cell reselection to original carrier until the time stated in the IE "wait time" has elapsed;
 - if a cell selection on the designated carrier fails:
 - wait for the time stated in the IE "wait time";
 - set CFN in relation to SFN of current cell according to subclause 8.5.15;
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH of the original serving cell;
 - increment counter V300;
 - restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.
 - if the IE "inter-RAT info" is present and:
 - if V300 is equal to or smaller than N300:
 - perform cell selection in the designated system;
 - delay cell reselection to the original system until the time stated in the IE "wait time" has elapsed.
 - if cell selection in the designated system fails:
 - wait at least the time stated in the IE "wait time";

- set CFN in relation to SFN of current cell according to subclause 8.5.15;
- set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.2.
- perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
- then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
- increment counter V300;
- restart timer T300 when the MAC layer indicates success or failure to transmit the message;
- if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.
- If neither the IEs "frequency info" nor "inter-RAT info" are present and:
 - if V300 is equal to or smaller than N300:
 - wait at least the time stated in the IE "wait time";
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.2;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - increment counter V300;
 - restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.
- if the IE "wait time" = '0':
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.

8.1.3.10 Invalid RRC CONNECTION REJECT message

If the UE receives an RRC CONNECTION REJECT message which contains an IE "Initial UE identity" with a value which is identical to the value of the IE "Initial UE identity" in the most recent RRC CONNECTION REQUEST message sent by the UE; but the RRC CONNECTION REJECT message contains a protocol error causing the variable

PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

The UE shall:

- if the IE "wait time" is < 0 , and:
 - if V300 is equal to or smaller than N300:
 - wait for the time stated in the IE "wait time";
 - set the variable PROTOCOL_ERROR_INDICATOR to TRUE;
 - set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.3;
 - perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;
 - submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;
 - increment counter V300;
 - restart timer T300 when the MAC layer indicates success or failure to transmit the message;
 - if V300 is greater than N300:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.
- if the IE "wait time" is = 0:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.

8.1.4 RRC connection release

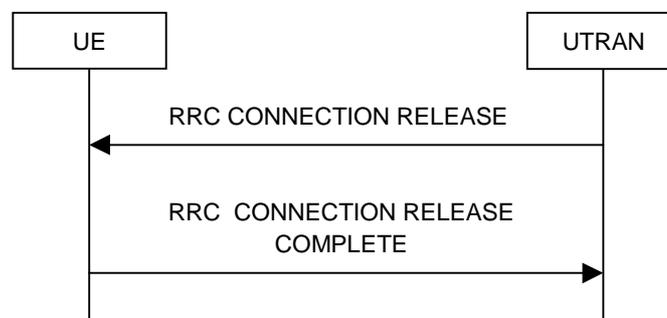


Figure 10: RRC Connection Release procedure on the DCCH



Figure 11: RRC Connection Release procedure on the CCCH

8.1.4.1 General

The purpose of this procedure is to release the RRC connection including the signalling link and all radio bearers between the UE and the UTRAN. By doing so, all established signalling connections will be released.

8.1.4.2 Initiation

When the UE is in state CELL_DCH or CELL_FACH, the UTRAN may at anytime initiate an RRC connection release by transmitting an RRC CONNECTION RELEASE message using UM RLC.

When UTRAN transmits an RRC CONNECTION RELEASE message in response to a RRC CONNECTION RE-ESTABLISHMENT REQUEST (subclause 8.1.5), CELL UPDATE (subclause 8.3.1) or URA UPDATE (subclause 8.3.2) message from the UE, UTRAN should use the downlink CCCH to transmit the message. In all other cases the downlink DCCH should be used.

UTRAN may transmit several RRC CONNECTION RELEASE messages to increase the probability of proper reception of the message by the UE. The number of repeated messages and the interval between the messages is a network option.

8.1.4.3 Reception of an RRC CONNECTION RELEASE message by the UE

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message, it shall:

- in state CELL_DCH:
 - initialise the counter V308 to zero;
 - set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry.
 - submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using UM RLC on the DCCH to the UTRAN;
 - if the IE "Rplmn information" is present:
 - the UE can:
 - store the IE on the ME together with the PLMN id for which it applies;
 - the UE may then:
 - utilise this information, typically indicating where a number of BCCH frequency ranges of a RAT may be expected to be found, during subsequent Rplmn selections of the indicated PLMN;
 - start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.
- in state CELL_FACH:

- if the RRC CONNECTION RELEASE message was received on the DCCH:
 - set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using AM RLC on the DCCH to the UTRAN.
 - when the successful transmission of the RRC CONNECTION RELEASE message has been confirmed by the lower layers:
 - release all its radio resources; and
 - indicate the release of all signalling connections and established radio access bearers in the variable ESTABLISHED_RABS to the non-access stratum; and
 - pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to the non-access stratum;
 - And the procedure ends.
- if the RRC CONNECTION RELEASE message was received on the CCCH:
 - release all its radio resources;
 - indicate the release of all signalling connections and established radio access bearers in the variable ESTABLISHED_RABS to the non-access stratum;
 - pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to the non-access stratum;
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode;
 - And the procedure ends.

8.1.4.4 Invalid RRC CONNECTION RELEASE message

If the RRC CONNECTION RELEASE message contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, and if the "protocol error cause" in `PROTOCOL_ERROR_INFORMATION` is set to any cause value except "ASN.1 violation or encoding error", the UE shall perform procedure specific error handling as follows:

The UE shall:

- ignore any IE(s) causing the error but treat the rest of the RRC CONNECTION RELEASE message as normal according to subclause 8.1.4.3, with an addition of the following actions;
- if the RRC CONNECTION RELEASE message was received on the DCCH:
 - set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - clear that entry.
 - include the IE "Error indication" in the RRC CONNECTION RELEASE COMPLETE message with:
 - the IE "Failure cause" set to the cause value "Protocol error" and
 - the IE "Protocol error information" set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;

8.1.4.5 Cell re-selection or radio link failure

If the UE performs cell re-selection or the radio link failure criteria in subclause 8.5.6 is met at any time during the RRC connection release procedure and the UE has not yet entered idle mode, the UE shall perform a cell update procedure according to subclause 8.3.1.

8.1.4.6 Expiry of timer T308, unacknowledged mode transmission

When in state CELL_DCH and the timer T308 expires, the UE shall:

- increment V308 by one;
- if V308 is equal to or smaller than N308:
 - retransmit the RRC CONNECTION RELEASE COMPLETE message;
- if V308 is greater than N308:
 - release all its radio resources;
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode;
- And the procedure ends.

8.1.4.7 Successful transmission of the RRC CONNECTION RELEASE COMPLETE message, acknowledged mode transmission

When acknowledged mode was used and RLC has confirmed the transmission of the RRC CONNECTION RELEASE COMPLETE message the UE shall:

- release all its radio resources;
- enter idle mode;
- perform the actions specified in subclause 8.5.2 when entering idle mode;
- And the procedure ends.

8.1.4.8 Reception of an RRC CONNECTION RELEASE COMPLETE message by UTRAN

When UTRAN receives an RRC CONNECTION RELEASE COMPLETE message from the UE, it should:

- release all UE dedicated resources and the procedure ends on the UTRAN side.

8.1.4.9 Unsuccessful transmission of the RRC CONNECTION RELEASE COMPLETE message, acknowledged mode transmission

When acknowledged mode was used and RLC does not succeed in transmitting the RRC CONNECTION RELEASE COMPLETE message, the UE shall:

- release all its radio resources;
- enter idle mode;
- perform the actions specified in subclause 8.5.2 when entering idle mode;
- And the procedure ends.

8.1.4.10 Detection of loss of dedicated physical channel by UTRAN in CELL_DCH state

If the release is performed from the state CELL_DCH, and UTRAN detects loss of the dedicated physical channel according to subclause 8.5.6, UTRAN may release all UE dedicated resources, even if no RRC CONNECTION RELEASE COMPLETE message has been received.

8.1.4.11 Failure to receive RRC CONNECTION RELEASE COMPLETE message by UTRAN

If UTRAN does not receive any RRC CONNECTION RELEASE COMPLETE message, it should release all UE dedicated resources.

8.1.5 Void

8.1.6 Transmission of UE capability information

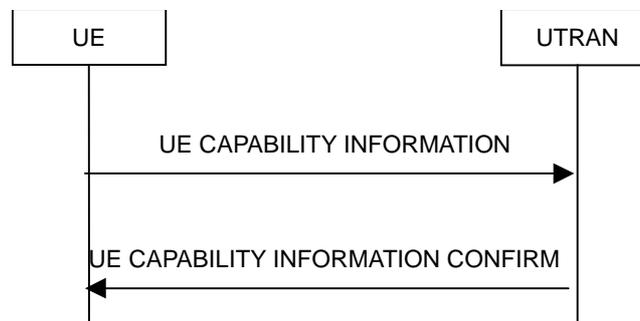


Figure 12: Transmission of UE capability information, normal flow

8.1.6.1 General

The UE capability update procedure is used by the UE to convey UE specific capability information to the UTRAN.

8.1.6.2 Initiation

The UE shall initiate the UE capability update procedure in the following situations:

- the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN;
- while in connected mode the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

- include the IE "RRC transaction identifier"; and
- set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry;
- include the UTRAN-specific UE capability information elements into the IE "UE radio capability", according to the requirement given in the IE "Capability update requirement" in the UE CAPABILITY ENQUIRY message;
- include one or more inter-RAT classmarks into the IE "UE system specific capability", according to the requirement given in the IE "Capability update requirement" in the UE CAPABILITY ENQUIRY message.

If the UE CAPABILITY INFORMATION message is sent because one or more of the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED while in connected state, the UE shall

include the information elements associated with the capabilities that have changed in the UE CAPABILITY INFORMATION message.

If the UE is in CELL_PCH or URA_PCH state, it shall first perform a cell update procedure using the cause "uplink data transmission", see subclause 8.3.1.

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been sent on the radio interface the UE RRC shall start timer T304 and reset counter V304.

8.1.6.3 Reception of an UE CAPABILITY INFORMATION message by the UTRAN

Upon reception of a UE CAPABILITY INFORMATION message, the UTRAN should transmit a UE CAPABILITY INFORMATION CONFIRM message on the downlink DCCH using UM or AM RLC. After the UE CAPABILITY INFORMATION CONFIRM message has been submitted to the lower layers for transmission, the procedure is complete.

8.1.6.4 Reception of the UE CAPABILITY INFORMATION CONFIRM message by the UE

Upon reception of a UE CAPABILITY INFORMATION CONFIRM message, the UE shall:

- stop timer T304;
- update its variable UE_CAPABILITY_TRANSFERRED with the UE capabilities it has last transmitted to the UTRAN during the current RRC connection.

8.1.6.5 Invalid UE CAPABILITY INFORMATION CONFIRM message

If the UE receives a UE CAPABILITY INFORMATION CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- stop timer T304;
- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Identification of received message"; and
- set the IE "Received message type" to UE CAPABILITY INFORMATION CONFIRM; and
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY INFORMATION CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- when the RRC STATUS message has been submitted to lower layers for transmission:
 - restart timer T304 and resume normal operation as if the invalid UE CAPABILITY INFORMATION CONFIRM message has not been received.

8.1.6.6 T304 timeout

Upon expiry of timer T304, the UE shall check the value of V304 and:

- if V304 is smaller than or equal to N304:
 - retransmit a UE CAPABILITY INFORMATION message with the IEs as set in the last unsuccessful attempt;

- restart timer T304;
- increment counter V304;
- if V304 is greater than N304:
 - assume that radio link failure has occurred;
 - initiate the RRC connection re-establishment procedure.

8.1.7 UE capability enquiry

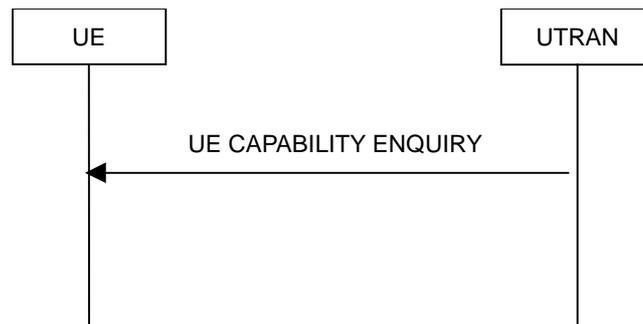


Figure 13: UE capability enquiry procedure, normal flow

8.1.7.1 General

The UE capability enquiry can be used to request the UE to transmit its capability information related to any radio access network that is supported by the UE.

8.1.7.2 Initiation

The UE capability enquiry procedure is initiated by the UTRAN by transmitting a UE CAPABILITY ENQUIRY message on the DCCH using UM or AM RLC.

8.1.7.3 Reception of an UE CAPABILITY ENQUIRY message by the UE

Upon reception of an UE CAPABILITY ENQUIRY message, the UE shall initiate the transmission of UE capability information procedure, which is specified in subclause 8.1.6.

8.1.7.4 Invalid UE CAPABILITY ENQUIRY message

If the UE receives a UE CAPABILITY ENQUIRY message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Identification of received message"; and
- set the IE "Received message type" to UE CAPABILITY ENQUIRY; and
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Rejected transactions" in the variable `TRANSACTIONS`; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- when the RRC STATUS message has been submitted to lower layers for transmission:

- resume normal operation as if the invalid UE CAPABILITY ENQUIRY message has not been received.

8.1.8 Initial Direct transfer

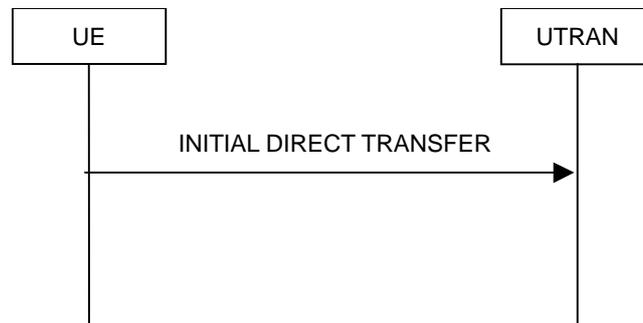


Figure 14: Initial Direct transfer in the uplink, normal flow

8.1.8.1 General

The initial direct transfer procedure is used in the uplink to establish a signalling connection. It is also used to carry the initial higher layer (NAS) messages over the radio interface.

8.1.8.2 Initiation of Initial direct transfer procedure in the UE

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall

- set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers;
- perform an RRC connection establishment procedure, according to subclause 8.1.3;
- if the RRC connection establishment procedure was not successful:
 - indicate failure to establish the signalling connection to upper layers and end the procedure;
- when the RRC connection establishment procedure is completed successfully:
 - continue with the initial direct transfer procedure as below;

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

- perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- when the cell update procedure completed successfully:
 - continue with the initial direct transfer procedure as below.

The UE shall set the IE "CN domain identity" as indicated by the upper layers. The UE shall set the IE "Intra Domain NAS Node Selector" as indicated by the upper layers.

In CELL_FACH state, the UE shall include IE "Measured results on RACH" into the INITIAL DIRECT TRANSFER message if RACH measurement reporting has been requested in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in "System Information Block type 12" (or "System Information Block type 11" if "System Information Block type 12" is not being broadcast).

The UE shall transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on RB

3. When the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

- the UE shall confirm the establishment of a signalling connection to the upper layer entity for the particular CN domain; and

- the procedure ends.

When not stated otherwise elsewhere, the UE may also initiate the initial direct transfer procedure when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

A new signalling connection request may be received from the non-access stratum subsequent to the indication of the release of a previously established signalling connection to the non-access stratum. From the time of the indication of release to the non-access stratum until the UE has entered idle mode, any such non-access stratum request to establish a new signalling connection shall be queued. This request shall be processed after the UE has entered idle mode.

8.1.8.3 Reception of INITIAL DIRECT TRANSFER message by the UTRAN

On reception of the INITIAL DIRECT TRANSFER message the NAS message should be routed using the IE "CN Domain Identity". A UTRAN complying with this version of the protocol should ignore the IE "Intra Domain NAS Node Selector".

If no signalling connection exists towards the chosen node, then a signalling connection is established.

If the IE "Measured results on RACH" is present in the message, the UTRAN should extract the contents to be used for radio resource control.

When the UTRAN receives an INITIAL DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

8.1.9 Downlink Direct transfer



Figure 15: Downlink Direct transfer, normal flow

8.1.9.1 General

The downlink direct transfer procedure is used in the downlink direction to carry higher layer (NAS) messages over the radio interface.

8.1.9.2 Initiation of downlink direct transfer procedure in the UTRAN

In the UTRAN, the direct transfer procedure is initiated when the upper layers request the transfer of a NAS message after the initial signalling connection is established. The UTRAN may also initiate the downlink direct transfer procedure when another RRC procedure is ongoing, and in that case the state of the latter procedure shall not be affected. The UTRAN shall transmit the DOWNLINK DIRECT TRANSFER message on the downlink DCCH using AM RLC on RB 3 or RB 4. The UTRAN should select the RB according to the following:

- If the non-access stratum indicates "low priority" for this message, RB 4 should be selected, if available. Specifically, for a GSM-MAP based CN, RB 4 should, if available, be selected when "SAPI 3" is requested. RB 3 should be selected when RB 4 is not available.
- If the non-access stratum indicates "high priority" for this message, RB 3 should be selected. Specifically, for a GSM-MAP based CN, RB 3 should be selected when "SAPI 0" is requested.

The UTRAN sets the IE "CN Domain Identity" to indicate, which CN domain the NAS message is originated from.

8.1.9.3 Reception of a DOWNLINK DIRECT TRANSFER message by the UE

Upon reception of the DOWNLINK DIRECT TRANSFER message, the UE RRC shall, using the IE "CN Domain Identity", route the contents of the higher layer PDU and the value of the IE "CN Domain Identity" to the correct higher layer entity.

The UE shall clear the entry for the DOWNLINK DIRECT TRANSFER message in the table "Accepted transactions" in the variable TRANSACTIONS.

When the UE receives a DOWNLINK DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures when not stated otherwise elsewhere.

8.1.9.4 Invalid DOWNLINK DIRECT TRANSFER message

If the UE receives a DOWNLINK DIRECT TRANSFER message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Identification of received message"; and
- set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`.

When the RRC STATUS message has been submitted to lower layers for transmission, the UE shall resume normal operation as if the invalid DOWNLINK DIRECT TRANSFER message has not been received.

8.1.10 Uplink Direct transfer

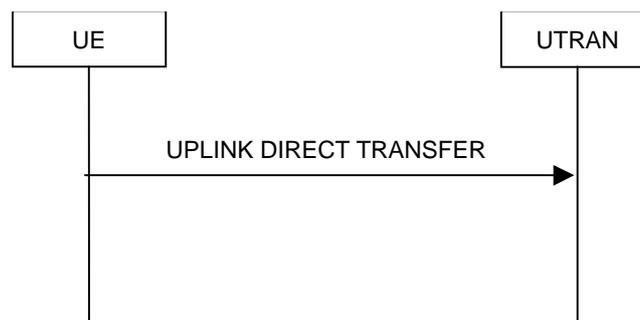


Figure 16: Uplink Direct transfer, normal flow

8.1.10.1 General

The uplink direct transfer procedure is used in the uplink direction to carry all subsequent higher layer (NAS) messages over the radio interface belonging to a signalling connection.

8.1.10.2 Initiation of uplink direct transfer procedure in the UE

In the UE, the uplink direct transfer procedure shall be initiated when the upper layers request a transfer of a NAS message on an existing signalling connection. When not stated otherwise elsewhere, the UE may initiate the uplink direct transfer procedure when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

Upon initiation of the uplink direct transfer procedure in CELL_PCH or URA_PCH state, the UE shall:

- perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- when the cell update procedure has been completed successfully:
 - continue with the uplink direct transfer procedure as below.

The UE shall transmit the UPLINK DIRECT TRANSFER message on the uplink DCCH using AM RLC on RB 3 or RB 4. The UE shall select the RB according to the following:

- if the non-access stratum indicates "low priority" for this message, RB 4 shall be selected, if available. Specifically, for a GSM-MAP based CN, RB 4 shall, if available, be selected when "SAPI 3" is requested. RB 3 shall be selected when RB 4 is not available.
- if the non-access stratum indicates "high priority" for this message, RB 3 shall be selected. Specifically, for a GSM-MAP based CN, RB 3 shall be selected when "SAPI 0" is requested.

The UE shall set the IE "CN domain identity" as indicated by the upper layers.

When the UPLINK DIRECT TRANSFER message has been submitted to lower layers for transmission the procedure ends.

8.1.10.3 Reception of UPLINK DIRECT TRANSFER message by the UTRAN

On reception of the UPLINK DIRECT TRANSFER message the NAS message should be routed using the value indicated in the IE "CN domain identity".

If the IE "Measured results on RACH" is present in the message, the UTRAN should extract the contents to be used for radio resource control.

When the UTRAN receives an UPLINK DIRECT TRANSFER message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

8.1.11 UE dedicated paging

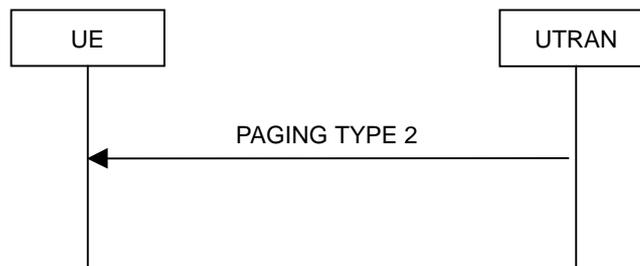


Figure 17: UE dedicated paging

8.1.11.1 General

This procedure is used to transmit dedicated paging information to one UE in connected mode in CELL_DCH or CELL_FACH state. Upper layers in the network may request initiation of paging.

8.1.11.2 Initiation

For a UE in CELL_DCH or CELL_FACH state, UTRAN initiates the procedure by transmitting a PAGING TYPE 2 message on the DCCH using AM RLC. When not stated otherwise elsewhere, the UTRAN may initiate the UE dedicated paging procedure also when another RRC procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

8.1.11.3 Reception of a PAGING TYPE 2 message by the UE

When the UE receives a PAGING TYPE 2 message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

The UE shall indicate that a PAGING TYPE 2 message has been received and forward the corresponding paging cause and paging record type identifier to the upper layer entity indicated by the IE "CN domain identity".

The UE shall clear the entry for the PAGING TYPE 2 message in the table "Accepted transactions" in the variable TRANSACTIONS.

8.1.11.4 Invalid PAGING TYPE 2 message

If the UE receives a PAGING TYPE 2 message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Identification of received message"; and
- set the IE "Received message type" to PAGING TYPE 2; and
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the PAGING TYPE 2 message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`.
- when the RRC STATUS message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid PAGING TYPE 2 message has not been received.

8.1.12 Security mode control

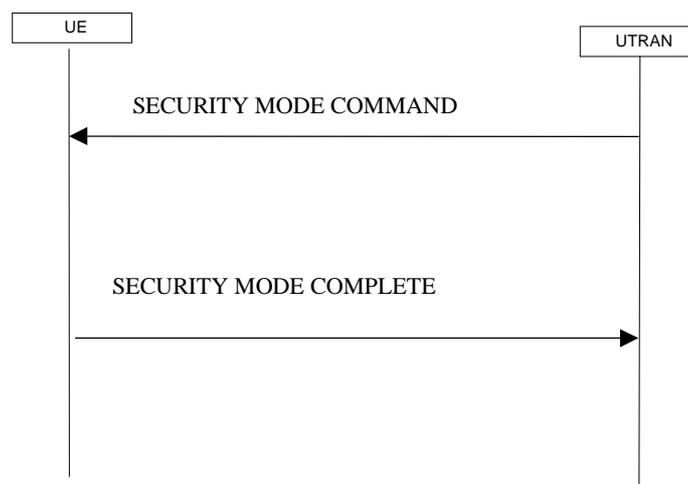


Figure 18: Security mode control procedure

8.1.12.1 General

The purpose of this procedure is to trigger the stop or start of ciphering or to command the restart of the ciphering with a new ciphering configuration, both for the signalling link and for any of the radio bearers.

It is also used to start integrity protection or to modify the integrity protection configuration for uplink and downlink signalling.

8.1.12.2 Initiation

8.1.12.2.1 Ciphering configuration change

To stop or start/restart ciphering, UTRAN sends a SECURITY MODE COMMAND message on the downlink DCCH in AM RLC using the old ciphering configuration. If no old ciphering configuration exists then the SECURITY MODE COMMAND is not ciphered.

Prior to sending the SECURITY MODE COMMAND, for the CN domain indicated in the IE "CN domain identity" in the SECURITY MODE COMMAND, UTRAN should:

- suspend all radio bearers using RLC-AM and RLC-UM;
- suspend all signalling radio bearers using RLC-AM and RLC-UM, except the signalling radio bearer used to send the SECURITY MODE COMMAND message on the downlink DCCH in RLC-AM;
- set, for the signalling radio bearer used to send the SECURITY MODE COMMAND, the "RLC send sequence number" in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info", at which time the new ciphering configuration shall be applied;
- include "Ciphering activation time for DPCH" in IE "Ciphering mode info" when a DPCH exists for radio bearers using transparent mode RLC;
- set, for each suspended radio bearer and signalling radio bearer, the "RLC send sequence number" in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info", at which time the new ciphering configuration shall be applied.

While suspended, radio bearers and signalling radio bearers shall not deliver RLC PDUs with sequence number greater than or equal to the number in IE "Radio bearer downlink ciphering activation time info".

When the successful delivery of the SECURITY MODE COMMAND has been confirmed by RLC, UTRAN shall:

- resume all the suspended radio bearers and signalling radio bearers. The old ciphering configuration shall be applied for the transmission of RLC PDUs with RLC sequence number less than the number indicated in the IE "Radio bearer downlink ciphering activation time info", as sent to the UE. The new ciphering configuration shall be applied for the transmission of RLC PDUs with RLC sequence number greater than or equal to the number indicated in IE "Radio bearer downlink ciphering activation time info", sent to the UE.

8.1.12.2.2 Integrity protection configuration change

To start or modify integrity protection, UTRAN sends a SECURITY MODE COMMAND message on the downlink DCCH in AM RLC using the new integrity protection configuration.

8.1.12.3 Reception of SECURITY MODE COMMAND message by the UE

Upon reception of the SECURITY MODE COMMAND message, the UE shall perform the actions for the received information elements according to 8.6.

If the IE "Security capability" is the same as indicated by variable UE_CAPABILITY_TRANSFERRED, the UE shall:

- suspend all radio bearers and signalling radio bearers (except the signalling radio bearer used to receive the SECURITY MODE COMMAND message on the downlink DCCH in RLC-AM) using RLC-AM or RLC-UM that belong to the CN domain indicated in the IE "CN domain identity", with RLC sequence number greater than or equal to the number in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info";
- set the IE "RRC transaction identifier" in the SECURITY MODE COMPLETE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;
- if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - include and set the IE "Radio bearer uplink ciphering activation time info" to the value of that variable, for the respective radio bearer and signalling radio bearer;
- when the radio bearers and signalling radio bearers have been suspended:
 - send a SECURITY MODE COMPLETE message on the uplink DCCH in AM RLC, using the old ciphering and the new integrity protection configurations;
- when the successful delivery of the SECURITY MODE COMPLETE message has been confirmed by RLC:
 - resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO and the procedure ends. If a RLC reset or re-establishment occurs after the SECURITY MODE COMPLETE message has been confirmed by RLC, but before the activation time for the new ciphering configuration has been reached, then the activation time shall be ignored and the new ciphering configuration shall be applied immediately after the RLC reset or RLC re-establishment.

For radio bearers and signalling radio bearers used by the CN indicated in the IE "CN domain identity", the UE shall:

- if a new integrity protection key has been received:
 - in the downlink:
 - use the new key;
 - set the HFN component of the downlink COUNT-I to zero at the RRC sequence number indicated in IE "Downlink integrity protection activation info" included in the IE "Integrity protection mode info";
 - in the uplink:
 - use the new key;
 - set the HFN component of the uplink COUNT-I to zero at the RRC sequence number indicated in IE "Uplink integrity protection activation info" included in the IE "Integrity protection mode info";
- if a new ciphering key is available:
 - in the downlink:
 - use the new key;
 - set the HFN component of the downlink COUNT-C to zero at the RLC sequence number indicated in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info";
 - in the uplink:
 - use the new key;
 - set the HFN component of the uplink COUNT-C to zero at the RLC sequence number indicated in IE "Radio bearer uplink ciphering activation time info".

If the IE "Security capability" is not the same as indicated by the variable UE_CAPABILITY_TRANSFERRED, the UE shall release all its radio resources, enter idle mode and the procedure ends on the UE side. Actions the UE shall perform when entering idle mode are given in subclause 8.5.2.

8.1.12.4 Cipher activation time too short

If the time specified by the IE "Ciphering activation time for DPCH" or the IE "Radio bearer downlink ciphering activation time info" contained in the IE "Ciphering mode info" has elapsed, the UE shall switch immediately to the new ciphering configuration.

8.1.12.5 Reception of SECURITY MODE COMPLETE message by the UTRAN

UTRAN should apply integrity protection on the received SECURITY MODE COMPLETE message and all subsequent messages with the new integrity protection configuration, if changed. When UTRAN has received a SECURITY MODE COMPLETE message and the integrity protection has successfully been applied, UTRAN shall:

- for radio bearers using RLC-AM or RLC-UM:
 - use the old ciphering configuration for received RLC PDUs with RLC sequence number less than the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent by the UE;
 - use the new ciphering configuration for received RLC PDUs with RLC sequence number greater than or equal to the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent by the UE;
 - if an RLC reset or re-establishment occurs after the SECURITY MODE COMPLETE message has been received by UTRAN before the activation time for the new ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration immediately after the RLC reset or RLC re-establishment;
- for radio bearers using RLC-TM:
 - use the new ciphering configuration for the received RLC PDUs at the CFN as indicated in the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info";
- and the procedure ends.

8.1.12.6 Invalid SECURITY MODE COMMAND message

If the SECURITY MODE COMMAND message contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a SECURITY MODE FAILURE message on the uplink DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the SECURITY MODE FAILURE message to the value of "RRC transaction identifier" in the entry for the SECURITY MODE CONTROL message in the table "Rejected transactions" in the variable `TRANSACTIONS`; and
- clear that entry;
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`.
- when the successful delivery of the SECURITY MODE FAILURE message has been confirmed by RLC:
 - resume normal operation as if the invalid SECURITY MODE COMMAND message has not been received and the procedure ends.

8.1.13 Signalling connection release procedure

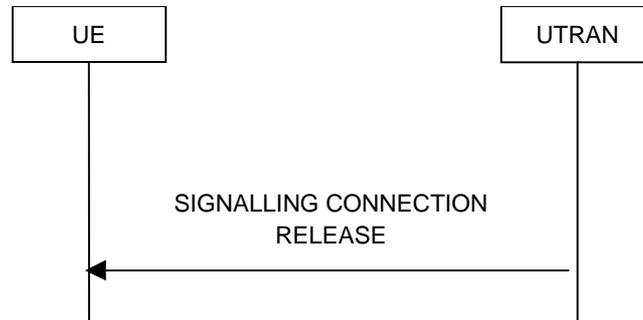


Figure 19: Signalling connection release procedure, normal case

8.1.13.1 General

The signalling connection release procedure is used to notify to the UE that one of its ongoing signalling connections has been released. The procedure does not initiate the release of the RRC connection.

8.1.13.2 Initiation of SIGNALLING CONNECTION RELEASE by the UTRAN

To initiate the procedure, the UTRAN transmits a SIGNALLING CONNECTION RELEASE message on DCCH using AM RLC.

8.1.13.3 Reception of SIGNALLING CONNECTION RELEASE by the UE

Upon reception of a SIGNALLING CONNECTION RELEASE message, the UE shall indicate the release of the signalling connection associated with the CN domain identified by the value of the IE "CN domain identity" to the corresponding higher layer entities.

The UE shall clear the entry for the SIGNALLING CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS.

8.1.13.4 Invalid SIGNALLING CONNECTION RELEASE message

If the UE receives a SIGNALLING CONNECTION RELEASE message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- include the IE "Identification of received message"; and
- set the IE "Received message type" to SIGNALLING CONNECTION RELEASE;
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the SIGNALLING CONNECTION RELEASE message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- transmit an RRC STATUS message on the uplink DCCH using AM RLC
- when the RRC STATUS message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid SIGNALLING CONNECTION RELEASE message has not been received.

8.1.14 Signalling connection release request procedure



Figure 20: Signalling connection release request procedure, normal case

8.1.14.1 General

The signalling connection release request procedure is used by the UE to request the UTRAN that one of its signalling connections should be released. The procedure may in turn initiate the signalling connection release or RRC connection release procedure.

8.1.14.2 Initiation

The UE shall initiate the signalling connection release request procedure on receiving a request to release the signalling connection from higher layers.

Upon initiation of the signalling connection release request procedure in CELL_PCH or URA_PCH state, the UE shall:

- perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";
- when the cell update procedure completed successfully:
 - continue with the signalling connection release request procedure as below;

The UE shall set the IE "CN Domain Identity" to the value indicated by the upper layers. The value of the IE indicates the CN domain whose associated signalling connection the upper layers are requesting to be released.

The UE shall transmit a SIGNALLING CONNECTION RELEASE REQUEST message on DCCH using AM RLC.

When the SIGNALLING CONNECTION RELEASE REQUEST message has been submitted to lower layers for transmission the procedure ends.

8.1.14.3 Reception of SIGNALLING CONNECTION RELEASE REQUEST by the UTRAN

Upon reception of a SIGNALLING CONNECTION RELEASE REQUEST message, the UTRAN requests the release of the signalling connection from the non-access stratum. The non-access stratum may then initiate the release of the signalling connection.

8.1.15 Counter check

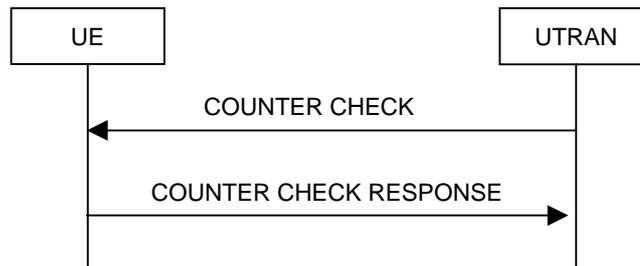


Figure 21: Counter check procedure

8.1.15.1 General

The counter check procedure is used by the UTRAN to perform a local authentication. The purpose of the procedure is to check that the amount of data sent in both directions (uplink and downlink) during the RRC connection is identical at the UTRAN and at the UE (to prevent a possible intruder – a 'man-in-the-middle' – from operating). It should be noted that this requires that the COUNT-C values for each radio bearer are maintained even if ciphering is not used. This procedure is only applicable to radio bearers using UM or AM mode of RLC. In Release 99, this procedure is not applied for radio bearers using transparent mode RLC.

8.1.15.2 Initiation

The UTRAN monitors the COUNT-C value associated with each radio bearer using UM or AM RLC. The procedure is triggered whenever any of these values reaches a critical checking value. The granularity of these checking values and the values themselves are defined to the UTRAN by the visited network. The UTRAN initiates the procedure by sending a COUNTER CHECK message on the downlink DCCH.

8.1.15.3 Reception of a COUNTER CHECK message by the UE

When the UE receives a COUNTER CHECK message it shall compare the COUNT-C MSB values received in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message to the COUNT-C MSB values of the corresponding radio bearers.

The UE shall

- set the IE "RRC transaction identifier" in the COUNTER CHECK RESPONSE message to the value of "RRC transaction identifier" in the entry for the COUNTER CHECK message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry.

If

- the number of radio bearers using UM or AM RLC mode stored in the variable ESTABLISHED_RABS are different from the number of radio bearers in the IE "RB COUNT-C MSB information"; or
- any of the COUNT-C MSB values are different from the mismatched COUNT-C values

the UE shall:

- include these radio bearers in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message;

The UE shall submit a COUNTER CHECK RESPONSE message to lower layers for transmission on the uplink DCCH using AM RLC. When the COUNTER CHECK RESPONSE message has been submitted to lower layers for transmission the procedure ends.

8.1.15.4 Reception of the COUNTER CHECK RESPONSE message by UTRAN

If the UTRAN receives a COUNTER CHECK RESPONSE message that does not contain any COUNT-C values, the procedure ends.

If the UTRAN receives a COUNTER CHECK RESPONSE message that contains one or several COUNT-C values, it should compare the COUNT-C values in the message to the COUNT-C values which were used in forming the COUNTER CHECK message.

If there is no difference or if the difference is acceptable, the procedure ends. The limits for an acceptable difference are defined to the UTRAN by the visited network.

If there is a difference that is not acceptable, UTRAN should initiate the release of the RRC connection.

8.1.15.5 Cell re-selection

If the UE performs cell re-selection anytime during this procedure it shall, without interrupting the procedure, initiate the cell update procedure according to subclause 8.3.1.

8.1.15.6 Invalid COUNTER CHECK message

If the UE receives a COUNTER CHECK message which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Identification of received message"; and
- set the IE "Received message type" to COUNTER CHECK; and
- set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE COUNTER CHECK message in the table "Rejected transactions" in the variable `TRANSACTIONS`; and
- clear that entry;
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- when the RRC STATUS message has been submitted to lower layers for transmission, the UE shall resume normal operation as if the invalid COUNTER CHECK message has not been received.

8.2 Radio Bearer control procedures

8.2.1 Radio bearer establishment

See subclause 8.2.2 Reconfiguration procedures.

8.2.2 Reconfiguration procedures

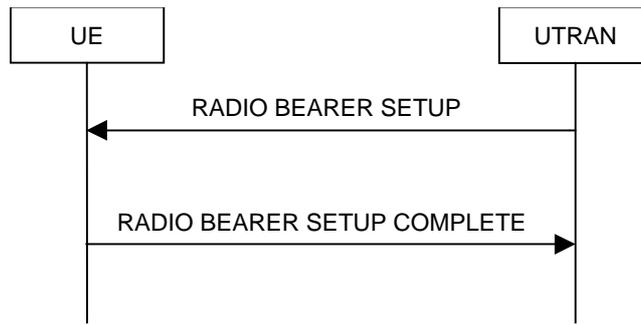


Figure 22: Radio Bearer Establishment, normal case

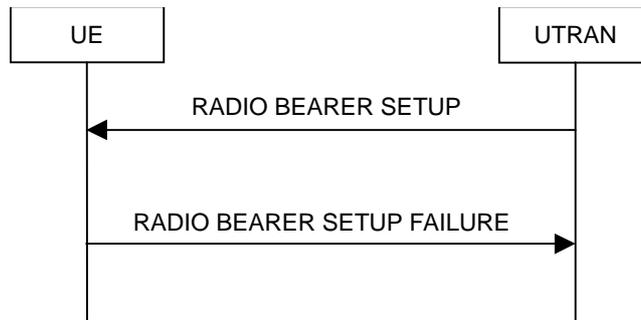


Figure 23: Radio Bearer Establishment, failure case

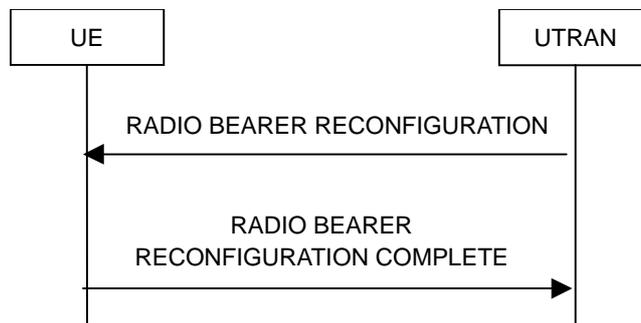


Figure 24: Radio bearer reconfiguration, normal flow

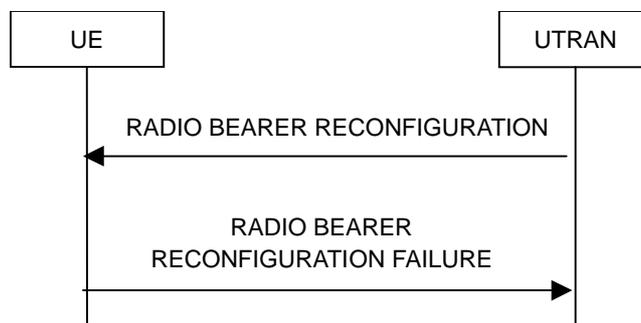


Figure 25: Radio bearer reconfiguration, failure case

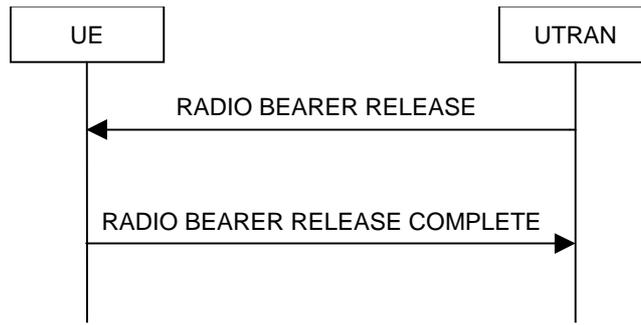


Figure 26: Radio Bearer Release, normal case

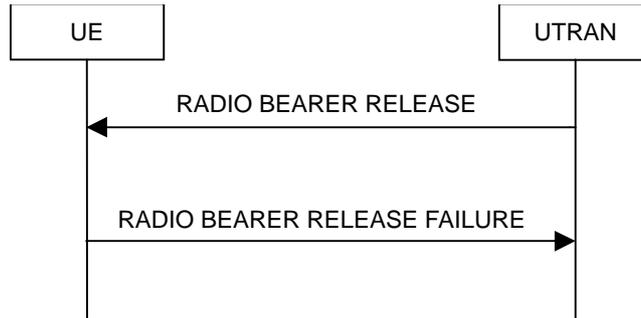


Figure 27: Radio Bearer Release, failure case

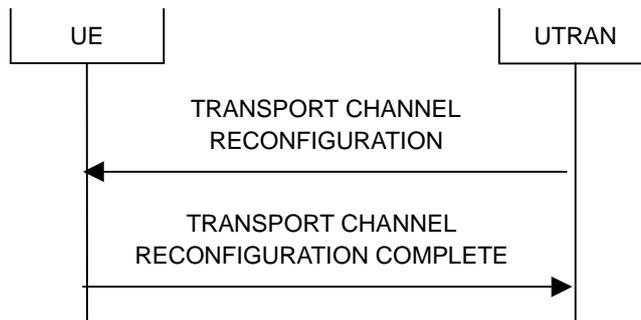


Figure 28: Transport channel reconfiguration, normal flow

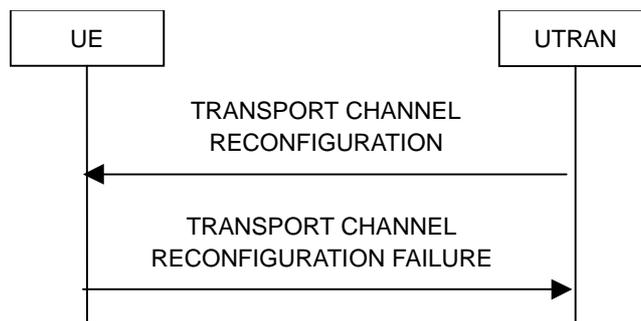


Figure 29: Transport channel reconfiguration, failure case

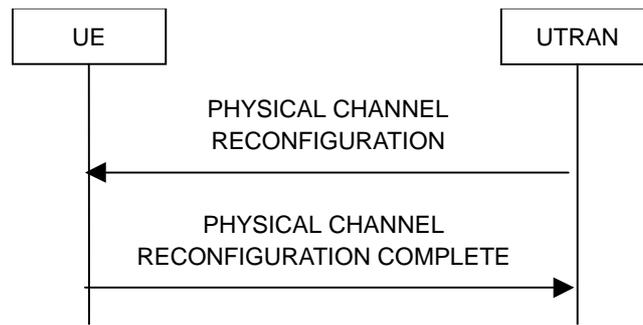


Figure 30: Physical channel reconfiguration, normal flow

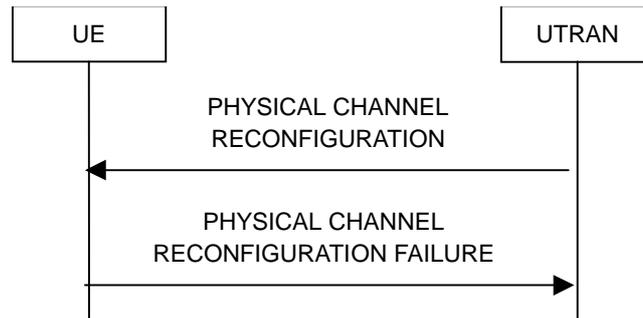


Figure 31: Physical channel reconfiguration, failure case

8.2.2.1 General

Reconfiguration procedures include the following procedures:

- the radio bearer establishment procedure;
- radio bearer reconfiguration procedure;
- the radio bearer release procedure;
- the transport channel reconfiguration procedure; and
- the physical channel reconfiguration procedure.

The radio bearer establishment procedure is used to establish new radio bearer(s).

The radio bearer reconfiguration procedure is used to reconfigure parameters for a radio bearer.

The radio bearer release procedure is used to release radio bearer(s).

The transport channel reconfiguration procedure is used to reconfigure transport channel parameters.

The physical channel reconfiguration procedure is used to establish, reconfigure and release physical channels.

While performing any of the above procedures, these procedures may perform a hard handover - see subclause 8.3.5.

8.2.2.2 Initiation

To initiate any one of the reconfiguration procedures, UTRAN should:

- configure new radio links in any new physical channel configuration;
- start transmission and reception on the new radio links;
- for a radio bearer establishment procedure:
 - transmit a RADIO BEARER SETUP message on the downlink DCCH using AM or UM RLC;

- for a radio bearer reconfiguration procedure:
 - transmit a RADIO BEARER RECONFIGURATION message on the downlink DCCH using AM or UM RLC;
- for a radio bearer release procedure:
 - transmit a RADIO BEARER RELEASE message on the downlink DCCH using AM or UM RLC;
- for a transport channel reconfiguration procedure:
 - transmit a TRANSPORT CHANNEL RECONFIGURATION message on the downlink DCCH using AM or UM RLC;
- for a physical channel reconfiguration procedure:
 - transmit a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH using AM or UM RLC;
- if the reconfiguration procedure is simultaneous with SRNS relocation procedure, and ciphering and/or integrity protection are activated:
 - transmit new ciphering and/or integrity protection information to be used after reconfiguration.
- if transport channels are added, reconfigured or deleted in uplink and/or downlink, the UTRAN should:
 - set TFCS according to the new transport channel(s).
- if transport channels are added or deleted in uplink and/or downlink, the UTRAN should:
 - send the RB Mapping Info for the new configuration

In the Radio Bearer Reconfiguration procedure UTRAN may indicate that uplink transmission shall be stopped or continued on certain radio bearers. Uplink transmission on a signalling radio bearer used by the RRC signalling (RB1 or RB2) should not be stopped.

If the IE "Activation Time" is included, UTRAN should set it to a value taking the UE performance requirements into account.

UTRAN should take the UE capabilities into account when setting the new configuration.

If the message is used to initiate a transition from CELL_DCH to CELL_FACH state, the UTRAN may assign a common channel configuration of a given cell and C-RNTI to be used in that cell to the UE.

8.2.2.3 Reception of RADIO BEARER SETUP or RADIO BEARER RECONFIGURATION or RADIO BEARER RELEASE or TRANSPORT CHANNEL RECONFIGURATION or PHYSICAL CHANNEL RECONFIGURATION message by the UE

If the UE receives:

- a RADIO BEARER SETUP message; or
- a RADIO BEARER RECONFIGURATION message; or
- a RADIO BEARER RELEASE message; or
- a TRANSPORT CHANNEL RECONFIGURATION message; or
- a PHYSICAL CHANNEL RECONFIGURATION message

it shall perform actions specified below:

- store the received message in the variable ORDERED_CONFIG;
- may first release the current physical channel configuration and

- then establish a new physical channel configuration and act upon all received information elements as specified in subclause 8.6, unless specified in the following:
 - In FDD, if the IE "PDSCH code mapping" is included but the IE "PDSCH with SHO DCH Info" is not included and if the DCH has only one link in its active set then the UE shall act upon the 'PDSCH code mapping' IE as specified in subclause 8.6 and:
 - infer that the PDSCH will be transmitted from the cell from which the downlink DPCH is transmitted.
 - The UE shall enter a state according to subclause 8.6.3.3.

If the UE remains in CELL_DCH state after state transition, the UE shall:

- if the IE "UL DPCH Info" is absent, not change its current UL Physical channel configuration;
- if the IE "DL DPCH Info for each RL" is absent, not change its current DL Physical channel configuration.

If after state transition the UE enters CELL_FACH state, the UE shall

- start timer T305 if timer T305 is not running;
- select PRACH according to subclause 8.6.6.2;
- select Secondary CCPCH according to subclause 8.6.6.5.
- use the transport format set given in system information;
- if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - ignore that IE and stop using DRX.
- if the contents of the variable C_RNTI is empty:
 - perform a cell update procedure according to subclause 8.3.1 and then proceed as below.
- transmit a response message as specified in subclause 8.2.2.4a, setting the information elements as specified below:
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set, the UE shall:
 - include and set the IE "Radio bearer uplink ciphering activation time info" to the value of that variable.
 - if the variable START_VALUE_TO_TRANSMIT is set, the UE shall:
 - include and set the IE "START" to the value of that variable.
 - set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS, and;
 - clear that entry.
 - if the variable PDCP_SN_INFO is not empty:
 - include the IE "RB with PDCP information list" in any response message transmitted below and set it to the value of the variable PDCP_SN_INFO;
 - in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):
 - set the IE "Uplink Timing Advance" to the calculated value.

If after state transition the UE enters CELL_PCH or URA_PCH state, the UE shall:

- remove any C-RNTI from MAC;
- clear the variable C_RNTI;
- start timer T305 if timer T305 is not running;

- select Secondary CCPCH according to subclause 8.6.6.5.
- if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.

The procedure ends.

8.2.2.4 Transmission of a response message by the UE, normal case

In case the procedure was triggered by reception of a RADIO BEARER SETUP message stored in the variable ORDERED_CONFIG, the UE shall:

- If the UE is not in CELL_DCH prior to this procedure and will be in CELL_DCH state at the conclusion of this procedure,
 - include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;
- transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message stored in the variable ORDERED_CONFIG, the UE shall:

- If the UE will be in CELL_DCH state at the conclusion of this procedure,
 - include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;
- transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message stored in the variable ORDERED_CONFIG, the UE shall:

- If the UE will be in CELL_DCH state at the conclusion of this procedure,
 - include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;
- transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC;

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message stored in the variable ORDERED_CONFIG, the UE shall:

- If the UE will be in CELL_DCH state at the conclusion of this procedure,
 - include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;
- transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message stored in the variable ORDERED_CONFIG, the UE shall:

- If the UE will be in CELL_DCH state at the conclusion of this procedure,
 - include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;
- transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC;

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

- if the variable PDCP_SN_INFO is empty:
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - when RLC has confirmed the successful transmission of the response message:
 - perform the actions below.
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is not set:
 - when RLC has been requested to transmit the response message:
 - perform the actions below.
- if the variable PDCP_SN_INFO is non-empty:
 - when RLC has confirmed the successful transmission of the response message:
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to "continue";
 - perform the actions below.

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition and the UE shall:

- when RLC has confirmed the successful transmission of the response message:
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to "continue";
 - enter the new state (CELL_PCH or URA_PCH, respectively);
 - perform the actions below.

The UE shall:

- clear the variable ORDERED_CONFIG;
- clear the variable PDCP_SN_INFO;
- clear the variable START_VALUE_TO_TRANSMIT;
- clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.

8.2.2.5 Reception of a response message by the UTRAN, normal case

When UTRAN has received

- the RADIO BEARER SETUP COMPLETE message; or
- the RADIO BEARER RECONFIGURATION COMPLETE message; or
- the RADIO BEARER RELEASE COMPLETE message; or
- the TRANSPORT CHANNEL RECONFIGURATION COMPLETE message; or
- the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message;

UTRAN may delete the old configuration.

UTRAN may delete the C-RNTI of the UE if the procedure caused the UE to leave the CELL_FACH state.

If the IE "UL Timing Advance" is included, UTRAN shall evaluate the timing advance value that the UE has to use in the new cell after handover.

If the IE "COUNT-C activation time" is included, UTRAN should only begin incrementing the COUNT-C for radio bearers that are mapped on TM-RLC at the CFN indicated in this IE.

The procedure ends on the UTRAN side.

8.2.2.6 Unsupported configuration in the UE

If the UTRAN instructs the UE to use a configuration, which it does not support or if the variable UNSUPPORTED_CONFIGURATION is set to TRUE, the UE shall:

- transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the IE "failure cause" to "configuration unsupported";
- clear the variable ORDERED_CONFIG;
- clear the variable PDCP_SN_INFO;
- clear the variable INVALID_CONFIGURATION;
- clear the variable UNSUPPORTED_CONFIGURATION;
- clear the variable START_VALUE_TO_TRANSMIT;
- clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

The procedure ends.

8.2.2.7 Physical channel failure

A physical channel failure occurs in case the criteria defined in subclause 8.5.4 are not fulfilled.

If the UE failed to establish the physical channel(s) indicated in the received message stored in the variable ORDERED_CONFIG the UE shall:

- revert to the configuration prior to the reception of the message (old configuration);
- if the UE is unable to revert to the old configuration or if used, the activation time has expired:
 - initiate cell update procedure according to subclause 8.3.1, using the cause "radio link failure";
 - after the cell update procedure has completed successfully:
 - proceed as below;
- transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;
- set the IE "failure cause" to "physical channel failure";
- clear the variable ORDERED_CONFIG;
- clear the variable PDCP_SN_INFO;
- clear the variable START_VALUE_TO_TRANSMIT;
- clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

The procedure ends.

8.2.2.8 Cell re-selection

If the UE performs cell re-selection, the UE shall:

- initiate a cell update procedure, as specified in subclause 8.3.1;
- after the cell update procedure has completed successfully:
 - proceed as below;
 - if the cell re-selection occurred before the response message was submitted to lower layers for transmission; and the state after the state transition is CELL_FACH; and
 - if the IE "New C-RNTI" or the IE "DL information for each radio link" is included in the variable ORDERED_CONFIG:
 - transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the value of the IE "failure cause" to "cell reselection";
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to continue;
 - clear the variable ORDERED_CONFIG;
 - clear the variable PDCP_SN_INFO;
 - clear the variable INVALID_CONFIGURATION;
 - clear the variable UNSUPPORTED_CONFIGURATION;
 - clear the variable START_VALUE_TO_TRANSMIT;
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - the procedure ends.
 - else if the variable ORDERED_CONFIG contains neither the IE "New C-RNTI" nor the IE "DL information for each radio link":
 - continue with the reconfiguration procedure normally.

8.2.2.9 Transmission of a response message by the UE, failure case

The UE shall:

- in case of reception of a RADIO BEARER SETUP message stored in the variable ORDERED_CONFIG:
 - if the radio bearer establishment procedure affects several radio bearers:
 - (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER SETUP FAILURE message;
 - transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC;
 - in case of reception of a RADIO BEARER RECONFIGURATION message stored in the variable ORDERED_CONFIG:
 - if the radio bearer reconfiguration procedure affects several radio bearers:
 - (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER RECONFIGURATION FAILURE message;
 - transmit a RADIO BEARER RECONFIGURATION FAILURE as response message on the DCCH using AM RLC;
 - in case of reception of a RADIO BEARER RELEASE message stored in the variable ORDERED_CONFIG:
 - if the radio bearer release procedure affects several radio bearers:
 - (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER RELEASE FAILURE message;
 - transmit a RADIO BEARER RELEASE FAILURE as response message on the DCCH using AM RLC;
- in case of reception of a TRANSPORT CHANNEL RECONFIGURATION message stored in the variable ORDERED_CONFIG:
- transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC;
- in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message stored in the variable ORDERED_CONFIG:
- transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC;
- when the response message has been submitted to lower layers for transmission:
 - resume normal operation as if no reconfiguration attempt had occurred.

8.2.2.10 Reception of a response message by the UTRAN, failure case

When the UTRAN has received

- the RADIO BEARER SETUP FAILURE message; or
- the RADIO BEARER RECONFIGURATION FAILURE message; or
- the RADIO BEARER RELEASE FAILURE message; or
- the TRANSPORT CHANNEL RECONFIGURATION FAILURE message; or
- the PHYSICAL CHANNEL RECONFIGURATION FAILURE message;

the UTRAN may restore the old and delete the new configuration. Upper layers should be notified of the failure.

The procedure ends on the UTRAN side.

8.2.2.11 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

- keep the configuration existing before the reception of the message;
- transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the IE "failure cause" to "invalid configuration";
- clear the variable ORDERED_CONFIG;
- clear the variable PDCP_SN_INFO;
- clear the variable INVALID_CONFIGURATION;
- clear the variable UNSUPPORTED_CONFIGURATION;
- clear the variable START_VALUE_TO_TRANSMIT;
- clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

The procedure ends.

8.2.2.12 Incompatible simultaneous reconfiguration

If the table "Rejected transactions" in the variable TRANSACTIONS becomes set of the received message, the UE shall:

- not apply the configuration contained in the received reconfiguration message;
- transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the IE "failure cause" to "incompatible simultaneous reconfiguration".

The procedure ends.

8.2.2.13 Invalid received message

If the variable ORDERED_CONFIG is not set and the received reconfiguration message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

- clear that entry;
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

The procedure ends.

8.2.3 Radio bearer release

See subclause 8.2.2 (Reconfiguration procedures).

8.2.4 Transport channel reconfiguration

See subclause 8.2.2 (Reconfiguration procedures).

8.2.5 Transport format combination control

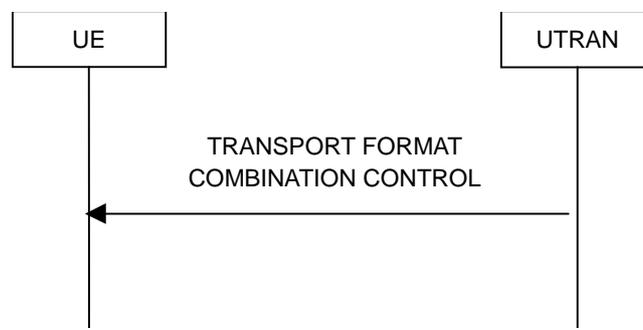


Figure 32: Transport format combination control, normal flow

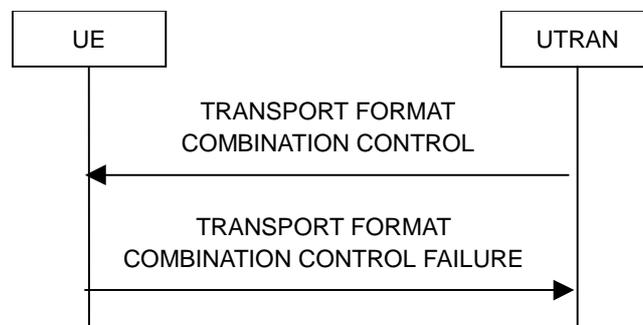


Figure 33: Transport format combination control, failure case

8.2.5.1 General

The transport format combination control procedure is used to control the allowed uplink transport format combinations within the transport format combination set.

8.2.5.2 Initiation

To initiate the transport format combination control procedure, the UTRAN transmits the TRANSPORT FORMAT COMBINATION CONTROL message on the downlink DCCH using AM, UM or TM RLC. When not stated otherwise elsewhere, the UE may initiate the transport format combination control procedure also when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

To change the sub-set of allowed transport format combinations, the UTRAN shall:

- set the allowed TFCs in the IE "TFC subset". The network can optionally specify the duration for which a new TFC sub-set applies by using the IE "TFC Control duration".

To remove completely the previous restrictions of allowed transport format combinations, the UTRAN shall:

- set the "full transport format combination" in the IE "TFC subset".

8.2.5.3 Reception of a TRANSPORT FORMAT COMBINATION CONTROL message by the UE

Upon reception of the TRANSPORT FORMAT COMBINATION CONTROL message the UE shall:

- act upon all received information elements as specified in 8.6, unless specified otherwise in the following;
- perform the actions for the transport format combination subset specified in the IE "DPCH/PUSCH TFCS in uplink" according to subclause 8.6.5.3;
- if the variable INVALID_CONFIGURATION is set to FALSE:
 - if the IE "TFC Control duration" is included in the message:
 - store the value of the IE "TFC Control duration" in the IE "Duration" in the variable TFC_SUBSET
 - apply the transport format combination subset in the IE "Current TFC subset" stored in the variable TFC_SUBSET for the number of (10 ms) frames specified in the IE "TFC Control duration";
 - at the end of the time period defined by the IE "TFC control duration":
 - if the IE "Duration" in the variable TFC_SUBSET is set:
 - go back to any previous restriction of the transport format combination set defined by the content of the IE "Default TFC subset" in the variable TFC_SUBSET;
 - set the value of the IE "Current TFC subset" in the variable TFC_SUBSET to the value of the IE "Default TFC subset" in the variable TFC_SUBSET;
 - clear the IE "Duration" in the variable TFC_SUBSET;

The UE shall clear the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS and the procedure ends.

8.2.5.4 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

- if the TRANSPORT FORMAT COMBINATION CONTROL message was received on AM RLC:
 - keep the TFC subset existing before the TRANSPORT FORMAT COMBINATION CONTROL message was received;
 - transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC;
 - set the IE "RRC transaction identifier" in the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the IE "failure cause" to "invalid configuration";
 - when the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message has been submitted to lower layers for transmission the procedure ends.
- if the TRANSPORT FORMAT COMBINATION CONTROL message was received on UM RLC:

- ignore the TRANSPORT FORMAT COMBINATION CONTROL message.

8.2.5.5 Invalid TRANSPORT FORMAT COMBINATION CONTROL message

If the TRANSPORT FORMAT COMBINATION CONTROL message contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the uplink DCCH using AM RLC setting the information elements as specified below;
 - set the IE "RRC transaction identifier" in the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - clear that entry;
 - set the IE "failure cause" to the cause value "protocol error";
 - include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- when the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message has been submitted to lower layers for transmission:
 - resume data transmission on RB 3 and upwards if RLC-AM or RLC-UM is used on those radio bearers;
 - resume normal operation as if the invalid TRANSPORT FORMAT COMBINATION CONTROL message has not been received and the procedure ends.

8.2.6 Physical channel reconfiguration

See subclause 8.2.2 Reconfiguration procedures.

8.2.7 Physical Shared Channel Allocation [TDD only]



Figure 34: Physical Shared Channel Allocation

8.2.7.1 General

The purpose of this procedure is to allocate radio resources to USCH and/or DSCH transport channels in TDD mode, for usage by a UE. This procedure can also be used to indicate to the UE, that a PUSCH allocation is pending, in order to prevent further capacity requests from the UE.

8.2.7.2 Initiation

To initiate the Physical Shared Channel Allocation procedure, the UTRAN sends the "PHYSICAL SHARED CHANNEL ALLOCATION" message on the downlink SHCCH or on the downlink DCCH using UM RLC. The C-RNTI shall be included for UE identification, if the message is sent on the SHCCH.

8.2.7.3 Reception of a PHYSICAL SHARED CHANNEL ALLOCATION message by the UE

Upon reception of a "PHYSICAL SHARED CHANNEL ALLOCATION" message, if the message is received on the downlink SHCCH the UE shall:

- check the C-RNTI to see if the UE is addressed by the message. If the UE is addressed by the message, or if the message is received on the downlink DCCH, the UE shall perform the following actions, otherwise the UE shall ignore the message:
- act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:
- if the IE "ISCP Timeslot list" is included:
 - store the timeslot numbers given there for future Timeslot ISCP measurements and reports;
- if the IE "PDSCH capacity allocation info" is included:
 - configure the physical resources used for the downlink CCTrCH given by the IE "TFCS ID" according to the following:
 - if the CHOICE "Configuration" has the value "Old configuration":
 - if the UE has stored a PDSCH configuration with the identity given by the IE "PDSCH Identity":
 - configure the physical resources according to that configuration;
 - otherwise:
 - ignore the IE "PDSCH capacity allocation info";
 - if the CHOICE "Configuration" has the value "New configuration":
 - configure the physical resources according to the information given in IE "PDSCH Info". If IE "Common timeslot info" or IE "PDSCH timeslots and codes" IE are not present in IE "PDSCH Info":
 - reuse the configuration specified in the previous "PHYSICAL SHARED CHANNEL ALLOCATION" message for this CCTrCH;
 - if the IE "PDSCH Identity" is included:
 - store the new configuration using that identity;
 - start using the new configuration at the CFN specified by the IE "Allocation activation time", and use that for the duration given by the IE "Allocation duration";
 - if the IE "Confirm request" has the value "Confirm PDSCH" and IE "PDSCH Identity" is included in IE "PDSCH capacity allocation info":
 - initiate the PUSCH CAPACITY REQUEST procedure as described in subclause 8.2.8.
 - if the IE "PUSCH capacity allocation info" is included:
 - stop the timer T310, if running;
 - if the CHOICE "PUSCH allocation" has the value "PUSCH allocation pending":
 - start the timer T311;
 - if the CHOICE "PUSCH allocation" has the value "PUSCH allocation assignment":
 - stop the timer T311, if running;
 - configure the physical resources used for the uplink CCTrCH given by the IE "TFCS ID" according to the following:

- if the CHOICE "Configuration" has the value "Old configuration":
 - if the UE has stored a PUSCH configuration with the identity given by the IE "PUSCH Identity":
 - configure the physical resources according to that configuration;
 - otherwise:
 - ignore the IE "PUSCH capacity allocation info" ;
- if the CHOICE "Configuration" has the value "New configuration", the UE shall:
 - configure the physical resources according to the information given in IE "PUSCH Info". If IE "Common timeslot info" or IE "PUSCH timeslots and codes" is not present in IE "PUSCH Info":
 - reuse the configuration specified in the previous "PHYSICAL SHARED CHANNEL ALLOCATION" message for this CCTrCH.
 - if the IE "PUSCH Identity" is included:
 - store the new configuration using that identity;
 - start using the new configuration at the CFN specified by the IE "Allocation activation time", and use that for the duration given by the IE "Allocation duration";
 - if the IE "Confirm request" has the value "Confirm PUSCH" and IE "PUSCH Identity" is included in IE "PUSCH capacity allocation info":
 - initiate the PUSCH CAPACITY REQUEST procedure as described in subclause 8.2.8.
- determine the TFCS subset and hence the TFCI values which are possible given the PUSCH allocation for that CCTrCH;
- configure the MAC-c/sh in the UE with this TFCS restriction if necessary;
- transmit USCH Transport Block Sets as required, within the TFCS limits given by the PUSCH allocation.

NOTE: If the UE has just entered a new cell and System Information Block Type 6 has not yet been scheduled, PUSCH/PDSCH information should be specified in the allocation message.

The UE shall clear the entry for the PHYSICAL SHARED CHANNEL ALLOCATION message in the table "Accepted transactions" in the variable TRANSACTIONS and the procedure ends.

8.2.7.4 Invalid PHYSICAL SHARED CHANNEL ALLOCATION message

If the UE receives a PHYSICAL SHARED CHANNEL ALLOCATION message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- ignore the invalid PHYSICAL SHARED CHANNEL ALLOCATION message;
- submit the PUSCH CAPACITY REQUEST message for transmission on the uplink SHCCH, setting the information elements in the message as specified in subclause 8.2.8.2a;
- reset counter `V310i`;
- start timer `T310i`;
- proceed as described in subclause 8.2.8.

8.2.8 PUSCH capacity request [TDD only]

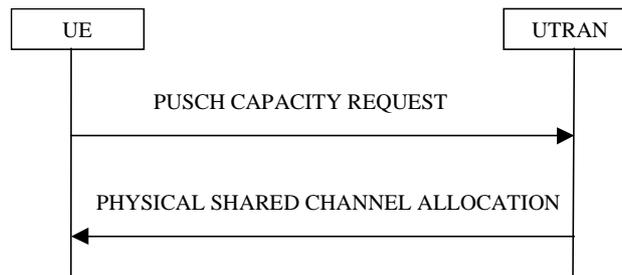


Figure 35: PUSCH Capacity request procedure

8.2.8.1 General

With this procedure, the UE transmits its request for PUSCH resources to the UTRAN. In the normal case, the UTRAN responds with a PHYSICAL SHARED CHANNEL ALLOCATION message, which either allocates the requested PUSCH resources, and/or allocates a PDSCH resource, or may just serve as an acknowledgement, indicating that PUSCH allocation is pending.

This procedure can also be used to acknowledge the reception of a PHYSICAL SHARED CHANNEL ALLOCATION message, or to indicate a protocol error in that message.

With the PUSCH CAPACITY REQUEST message, the UE can request capacity for one or more USCH.

8.2.8.2 Initiation

This procedure is initiated

- in the CELL_FACH or CELL_DCH state,
- and when at least one RB using USCH has been established,
- and when the UE sees the requirement to request physical resources (PUSCH) for an USCH channel or there is the need to reply to a PHYSICAL SHARED CHANNEL ALLOCATION message as described in clause 8.2.7 (i.e. to confirm the reception of a message, if requested to do so, or to indicate a protocol error).

The procedure can be initiated if:- Timer T311 is not running.

- The timer T310 (capacity request repetition timer) is not running.

The UE shall:

- set the IEs in the PUSCH CAPACITY REQUEST message according to subclause 8.2.8.3;
- submit the PUSCH CAPACITY REQUEST message for transmission on the uplink SHCCH;
- reset counter V310;
- start timer T310.

8.2.8.3 PUSCH CAPACITY REQUEST message contents to set

With one PUSCH CAPACITY REQUEST message, capacity for one or more USCH can be requested. It shall include these information elements:

- C-RNTI to be used as UE identity if the message is sent on RACH;
- Traffic volume measured results for each radio bearer satisfying the reporting criteria as specified in the MEASUREMENT CONTROL procedure (if no radio bearer satisfies the reporting criteria, traffic volume measured results shall not be included). These results shall include:
 - Radio Bearer ID of the Radio Bearer being reported;

- RLC buffer payload for these radio bearers, as specified by the MEASUREMENT CONTROL procedure;
- If the initiation of the procedure is triggered by the IE "Confirm request" set to "Confirm PDSCH" in a previously received PHYSICAL SHARED CHANNEL ALLOCATION message, the UE shall:
 - set the CHOICE "Allocation confirmation" to "PDSCH Confirmation" with the value given in the IE "PDSCH Identity" in the received message.
- If the initiation of the procedure is triggered by the IE "Confirm request" set to "Confirm PUSCH" in a previously received PHYSICAL SHARED CHANNEL ALLOCATION message, the UE shall:
 - set the CHOICE "Allocation confirmation" to "PUSCH Confirmation" with the value given in the IE "PUSCH Identity" in the received message.
- If the variable PROTOCOL_ERROR_REJECT is set to TRUE, the UE shall:
 - include the IE "RRC transaction identifier" in the response message transmitted below; and
 - set it to the value of "RRC transaction identifier" in the entry for the PHYSICAL SHARED CHANNEL ALLOCATION message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - clear that entry.
 - set the IE "protocol error indicator" to TRUE;
 - include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- if the value of the variable PROTOCOL_ERROR_REJECT is FALSE;
 - set the IE "Protocol error indicator" to FALSE;

As an option, the message may include IE "Timeslot ISCP" and IE "Primary CCPCH RSCP".

The timeslots for which "Timeslot ISCP" may be reported shall have been configured with a previous PHYSICAL SHARED CHANNEL ALLOCATION message.

8.2.8.4 Reception of a PUSCH CAPACITY REQUEST message by the UTRAN

Upon receiving a PUSCH CAPACITY REQUEST message with traffic volume measurement included for at least one radio bearer, the UTRAN should initiate the PHYSICAL SHARED CHANNEL ALLOCATION procedure, either for allocating PUSCH or PDSCH resources as required, or just as an acknowledgement, indicating a pending PUSCH allocation, as described in subclause 8.2.7.

8.2.8.5 T310 expiry

Upon expiry of timer T310, the UE shall

- if V310 is smaller than N310:
 - transmit a new PUSCH CAPACITY REQUEST message on the Uplink SHCCH;
 - restart timer T310;
 - increment counter V310;
 - set the IEs in the PUSCH CAPACITY REQUEST message as specified in subclause 8.2.8.3;
- if V310 is greater than or equal to N310:
 - the procedure ends.

8.2.9 Void

8.2.10 Uplink Physical Channel Control [TDD only]

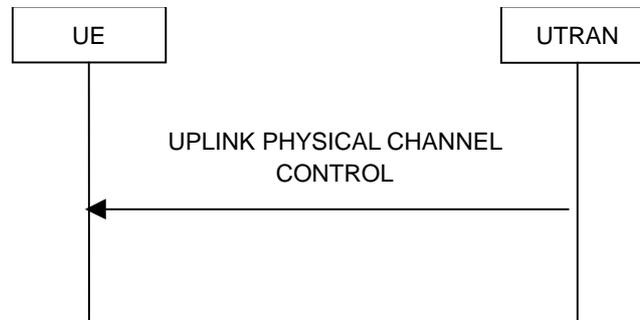


Figure 36: Uplink Physical Channel Control

8.2.10.1 General

The uplink physical channel control procedure is used in TDD to control the uplink outer loop power control and timing advance running in the UE.

8.2.10.2 Initiation

The UTRAN initiates the procedure by transmitting the UPLINK PHYSICAL CHANNEL CONTROL message on the downlink DCCH using AM or UM RLC in order to update parameters for uplink open loop power control in the UE for one CCTrCH or to inform the UE about a new timing advance value to be applied. Especially, uplink interference information measured by the UTRAN can be included for the uplink timeslots used for the CCTrCH.

8.2.10.3 Reception of UPLINK PHYSICAL CHANNEL CONTROL message by the UE

Upon reception of the UPLINK PHYSICAL CHANNEL CONTROL message, the UE shall act upon all received information elements as specified in subclause 8.6.

If the IEs "Uplink DPCH Power Control Info", "Constant Value", "Alpha" or IE group "list of UL Timeslot Interference" are transmitted, this information shall be taken into account by the UE for uplink open loop power control as specified in subclause 8.5.7.

The UE shall clear the entry for the UPLINK PHYSICAL CHANNEL CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS and the procedure ends.

8.2.10.4 Invalid UPLINK PHYSICAL CHANNEL CONTROL message

If the UE receives a UPLINK PHYSICAL CHANNEL CONTROL message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC, setting the information elements as specified below:
 - include the IE "Identification of received message"; and
 - set the IE "Received message type" to UPLINK PHYSICAL CHANNEL CONTROL; and
 - set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UPLINK PHYSICAL CHANNEL CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
 - clear that entry;

- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- when the RRC STATUS message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid UPLINK PHYSICAL CHANNEL CONTROL message has not been received.

8.2.11 Physical channel reconfiguration failure

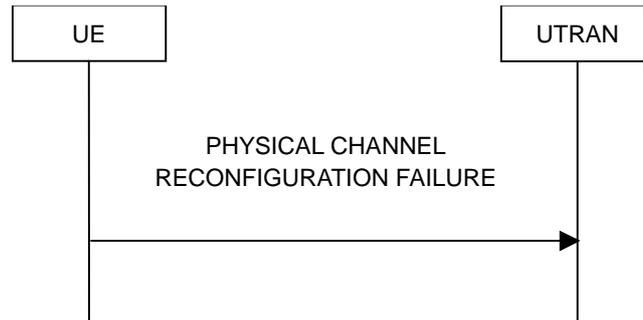


Figure 37: Physical channel reconfiguration failure in case of runtime configuration error

8.2.11.1 General

The physical channel reconfiguration failure procedure is used to indicate to the network a runtime configuration error in the UE.

8.2.11.2 Runtime error due to overlapping compressed mode configuration

When the UE has received from the UTRAN the configurations of several compressed mode transmission gap pattern sequences, and if several of these patterns are to be simultaneously active, the UE shall check to see if these simultaneously active transmission gap pattern sequences create transmission gaps in the same frame. The UE shall:

- if the parallel transmission gap pattern sequences create no illegal overlap:
 - set the variable `COMPRESSED_MODE_ERROR` to `FALSE`;
- otherwise:
 - set the variable `COMPRESSED_MODE_ERROR` to `TRUE`;
 - delete the overlapping transmission gap pattern sequence configuration stored in the variable `TGPS_IDENTITY`, which is associated with the highest value of IE "TGPSI";
 - transmit a `PHYSICAL CHANNEL RECONFIGURATION FAILURE` message on the DCCH using AM RLC, setting the information elements as specified below:
 - not include the IE "RRC transaction identifier";
 - set the cause value in IE "failure cause" to value "compressed mode runtime error";
 - terminate the inter-frequency and/or inter-RAT measurements corresponding to the deleted transmission gap pattern sequence;
 - when the `PHYSICAL CHANNEL RECONFIGURATION FAILURE` message has been submitted to lower layers for transmission the procedure ends.

8.3 RRC connection mobility procedures

8.3.1 Cell update

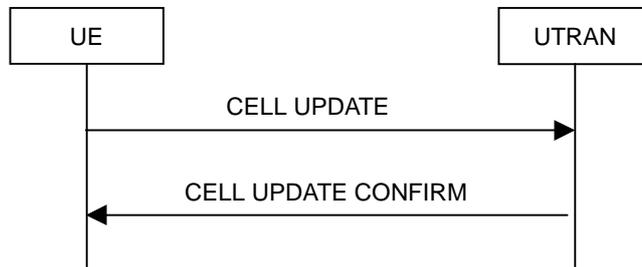


Figure 38: Cell update procedure, basic flow

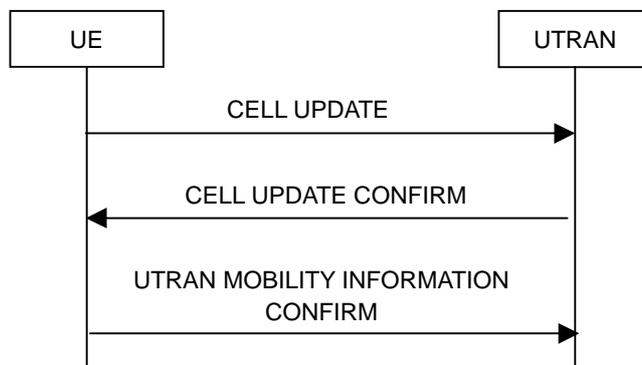


Figure 39: Cell update procedure with update of UTRAN mobility information

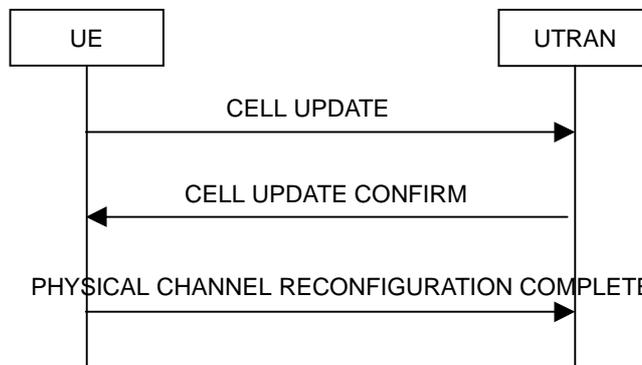


Figure 40: Cell update procedure with physical channel reconfiguration

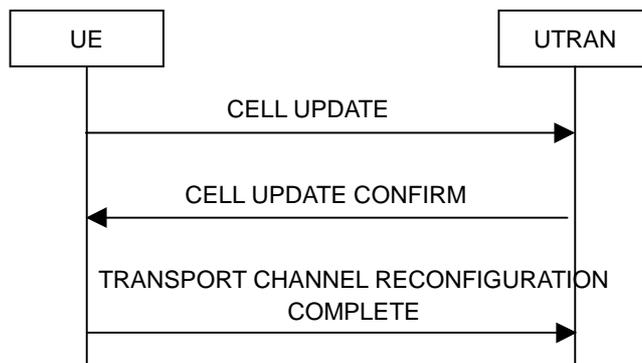


Figure 41: Cell update procedure with transport channel reconfiguration

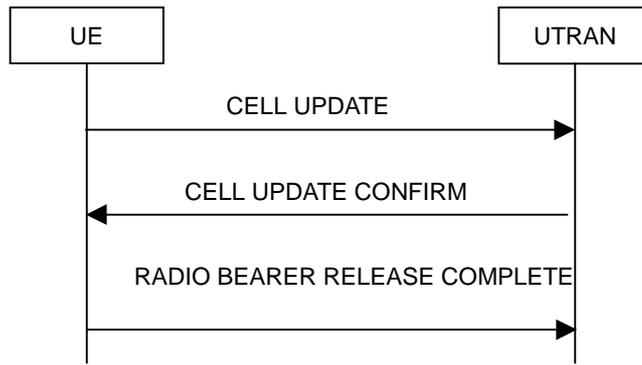


Figure 42: Cell update procedure with radio bearer release

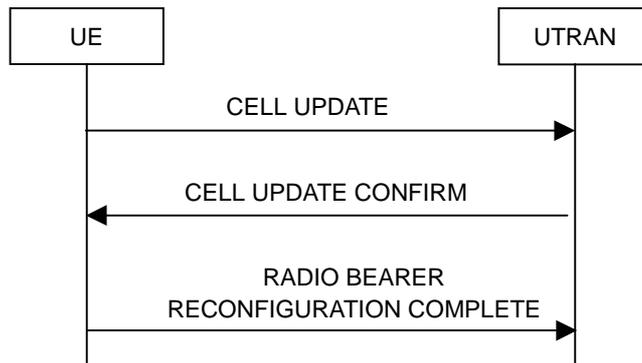


Figure 43: Cell update procedure with radio bearer reconfiguration

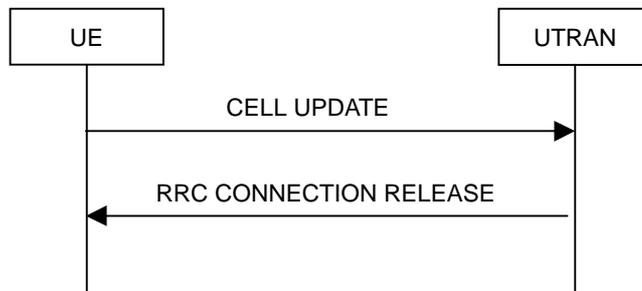


Figure 44: Cell update procedure, failure case

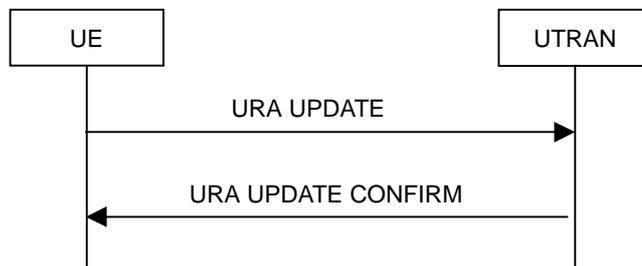


Figure 45: URA update procedure, basic flow

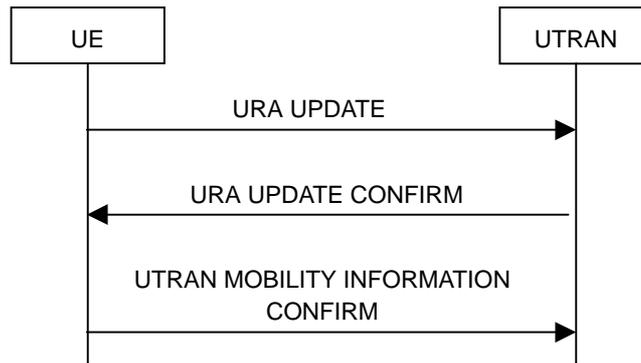


Figure 46: URA update procedure with update of UTRAN mobility information

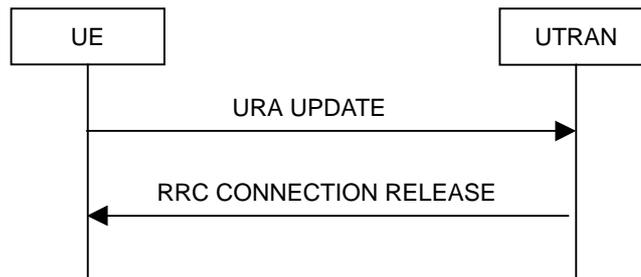


Figure 47: URA update procedure, failure case

8.3.1.1 General

The URA update and cell update procedures serve several main purposes:

- to notify UTRAN after re-entering service area in the URA_PCH or CELL_PCH state;
- to notify UTRAN of an RLC unrecoverable error on an AM RLC entity;
- to be used as a supervision mechanism in the CELL_FACH or CELL_PCH state by means of periodical cell update;

In addition, the URA update procedure also serves the following purpose:

- to retrieve a new URA identity after cell re-selection to a cell not belonging to the current URA assigned to the UE in URA_PCH state;

In addition, the cell update procedure also serves the following purposes:

- to update UTRAN with the current cell the UE is camping on after cell reselection;
- to act on a radio link failure in the CELL_DCH state;
- when triggered in the URA_PCH or CELL_PCH state, to notify UTRAN of a transition to the CELL_FACH state due to the reception of UTRAN originated paging or due to a request to transmit uplink data.

The URA update and cell update procedures may:

- include an update of mobility related information in the UE;
- cause a state transition from the CELL_FACH state to the CELL_DCH, CELL_PCH or URA_PCH states or idle mode.

The cell update procedure may also include:

- a reset of AM RLC entities;

- a radio bearer release, radio bearer reconfiguration, transport channel reconfiguration or physical channel reconfiguration;

8.3.1.2 Initiation

A UE shall initiate the cell update procedure in the following cases:

- Uplink data transmission:
 - if the UE is in URA_PCH or CELL_PCH state; and
 - if the UE has uplink data or a signalling message on RB 1 or upwards to transmit:
 - perform cell update using the cause "uplink data transmission".
- Paging response:
 - if the criteria for performing cell update with the cause specified above in the current subclause is not met; and
 - if the UE in URA_PCH or CELL_PCH state, receives a PAGING TYPE 1 message fulfilling the conditions for initiating a cell update procedure specified in subclause 8.1.2.3:
 - perform cell update using the cause "paging response".
- Re-entering service area:
 - if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
 - if the UE is in CELL_FACH or CELL_PCH state; and
 - if the UE has been out of service area and re-enters service area before T307 or T317 expires:
 - perform cell update using the cause "re-entering service area".
- Radio link failure:
 - if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
 - if the UE is in CELL_DCH state; and
 - if the criteria for radio link failure is met as specified in subclause 8.5.6:
 - perform cell update using the cause "radio link failure".
- RLC unrecoverable error:
 - if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
 - if the UE detects RLC unrecoverable error in an AM RLC entity:
 - perform cell update using the cause "RLC unrecoverable error".
- Cell reselection:
 - if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
 - if the UE is in CELL_FACH or CELL_PCH state; and
 - if the UE performs cell re-selection:
 - perform cell update using the cause "cell reselection".

- Periodical cell update:
 - if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and
 - if the UE is in CELL_FACH or CELL_PCH state; and
 - if the timer T305 expires; and
 - if the criteria for "in service area" as specified in subclause 8.5.5.2 is fulfilled; and
 - if periodic cell updating has been requested in system information block type 1:
 - perform cell update using the cause "periodical cell update".

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

- URA reselection:
 - if the criteria for performing URA update with the cause as specified above is not met; and
 - if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2:
 - perform URA update using the cause "URA reselection".
- Periodic URA update:
 - if none of the criteria for performing cell update with the causes as specified above is met; and
 - if the timer T305 expires while the UE is in the service area; and
 - periodic URA updating has been requested in system information block type 1:
 - perform URA update using the cause "periodic URA update".

When initiating the URA update or cell update procedure, the UE shall:

- stop timer T305;
- if the UE is in CELL_DCH state:
 - in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;
 - if the stored values of the timer T314 and timer T315 are both equal to zero:
 - release all its radio resources;
 - enter idle mode;
 - indicate to the non-access stratum local end release of the signalling connections and all established radio access bearers in the variable ESTABLISHED_RABS;
 - perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
 - And the procedure ends.
- if the stored value of the timer T314 is equal to zero:
 - release all radio bearers, associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";
 - in the variable RB_TIMER_INDICATOR set the IE "T314 expired" to TRUE;
- if the stored value of the timer T315 is equal to zero:
 - release all radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315";

- in the variable RB_TIMER_INDICATOR set the IE "T315 expired" to TRUE;
- if the stored value of the timer T314 is greater than zero:
 - re-start timer T314;
- if the stored value of the timer T315 is greater than zero:
 - re-start timer T315;
- for the released radio bearer(s):
 - delete the information about the radio bearer from the variable ESTABLISHED_RABS;
 - when all radio bearers belonging to the same radio access bearer have been released:
 - indicate local end release of the radio access bearer to the upper layer entity using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;
 - delete all information about the radio access bearer from the variable ESTABLISHED_RABS;
- set the variables PROTOCOL_ERROR_INDICATOR, FAILURE_INDICATOR, UNSUPPORTED_CONFIGURATION and INVALID_CONFIGURATION to FALSE;
- move to CELL_FACH state, if not already in that state;
- if the UE performs cell re-selection:
 - clear the variable C_RNTI; and
 - stop using that C_RNTI just cleared from the variable C_RNTI in MAC;
- set CFN in relation to SFN of current cell according to subclause 8.5.15;
- set the contents of the CELL UPDATE / URA UPDATE message according to subclause 8.3.1.3;
- submit the CELL UPDATE / URA UPDATE message for transmission on the uplink CCCH;
- reset counter V302;
- start timer T302 when the MAC layer indicates success or failure in transmitting the message.

8.3.1.3 CELL UPDATE / URA UPDATE message contents to set

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

In case of URA update procedure the UE shall transmit a URA UPDATE message.

The UE shall set the IEs in the CELL UPDATE as follows:

- set the IE "Cell update cause" corresponding to the cause specified in subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, different causes may be used in different individually transmitted CELL UPDATE messages by the UE.

- set the IE "U-RNTI" to the value of the variable U_RNTI;
- if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
- include and set the IE "failure cause" to the cause value "protocol error";

- set the IE "Protocol error information" set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- if the value of the variable FAILURE_INDICATOR is TRUE:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS;
 - include and set the IE "failure cause" to the value of the variable FAILURE_CAUSE;
- include the START values for each CN domain, calculated according to subclause 8.5.9;
- if an unrecoverable error in any of the AM RLC entities for the RB 2 or 3 is detected:
 - set the IE "AM_RLC error indication (for c-plane)" to TRUE;
- otherwise:
 - set the IE "AM_RLC error indication (for c-plane)" to FALSE;
- if an unrecoverable error in any of the AM RLC entities for the RB 5 or upwards is detected:
 - set the IE "AM_RLC error indication (for u-plane)" to TRUE;
- otherwise:
 - set the IE "AM_RLC error indication (for u-plane)" to FALSE;
- set the IE "RB Timer indicator" to the value of the variable RB_TIMER_INDICATOR;
- include an intra-frequency measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in system information block type 12 (or System Information Block type 11, if System Information Block type 12 is not being broadcast).

The UE shall set the IEs in the URA UPDATE message as follows:

- set the IE "U-RNTI" to the value of the variable U_RNTI;
- set the IE "URA update cause" corresponding to which cause as specified in subclause 8.3.1.2 that is valid when the URA UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a URA update procedure is initiated by the UE until when the procedure ends, different causes may be used in different individually transmitted URA UPDATE messages by the UE, depending on which causes are valid for the respective URA UPDATE message.

- if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:
 - include the IE "RRC transaction identifier"; and
 - set it to the value of "RRC transaction identifier" in the entry for the URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - set the IE "Protocol error indicator" to TRUE;
 - include the IE "Protocol error information" set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- if the value of the variable PROTOCOL_ERROR_INDICATOR is FALSE:
 - set the IE "Protocol error indicator" to FALSE.

8.3.1.4 T305 expiry and the UE detects "out of service area"

When the T305 expires and the UE detects that it is "out of service area" as specified in subclause 8.5.5.1, the UE shall

- start timer T307;
- re-select to a new cell, as described in [4].

8.3.1.4.1 Re-entering "in service area"

If the UE detects "in service area" according to subclause 8.5.5.2 and timer T307 or T317 is running, the UE shall:

- check the value of V302; and
- if V302 is equal to or smaller than N302:
 - set the contents of the CELL UPDATE / URA UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE / URA UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message.
- if V302 is greater than N302:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the entry for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode;
 - a connection failure may be indicated to the non-access stratum;
 - perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;
 - and the procedure ends.

8.3.1.4.2 Expiry of timer T307

When the T307 expires, the UE shall:

- move to idle mode;
- release all dedicated resources;
- indicate an RRC connection failure to the non-access stratum.
- perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2.
- and the procedure ends.

8.3.1.5 Reception of an CELL UPDATE/URA UPDATE message by the UTRAN

When the UTRAN receives a CELL UPDATE/URA UPDATE message, it may either:

- in case the procedure was triggered by reception of a CELL UPDATE, transmit a CELL UPDATE CONFIRM message on the downlink DCCH or optionally on the CCCH but only if ciphering is not required; or
- in case the procedure was triggered by reception of a URA UPDATE, transmit a URA UPDATE CONFIRM message to the lower layers for transmission on the downlink CCCH or DCCH in which case the UTRAN should include the IE "URA identity" in the URA UPDATE CONFIRM message in a cell where multiple URA identifiers are broadcast; or
- initiate an RRC connection release procedure (see subclause 8.1.4) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH.

8.3.1.6 Reception of the CELL UPDATE CONFIRM/URA UPDATE CONFIRM message by the UE

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI, or;
- if the message is received on DCCH;

the UE shall:

- stop timer T302;
- act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:
 - use the transport channel(s) applicable for the physical channel types that is used; and
 - if the IE "TFS" is neither included nor previously stored in the UE for that transport channel(s):
 - use the TFS given in system information.
 - if none of the TFS stored is compatible with the physical channel:
 - delete the stored TFS;
 - use the TFS given in system information.
 - if the CELL UPDATE CONFIRM message includes the IE "RLC reset indicator (for C-plane)":
 - reset the RLC entities for RB 2, RB 3 and, if present, RB 4.
 - if the CELL UPDATE CONFIRM message includes the IE "RLC reset indicator (for U-plane)":
 - reset the AM RLC entities for RB 5 and upwards.
- enter a state according to subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

If the UE after state transition remains CELL_FACH state, it shall

- start the timer T305 if timer T305 is not running and periodical cell update has been requested in system information block type 1;
- select PRACH according to subclause 8.6.6.2;
- select Secondary CCPCH according to subclause 8.6.6.5.
- if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - ignore that IE and stop using DRX;

If the UE after state transition enters URA_PCH or CELL_PCH state, it shall

- clear the variable C_RNTI;
- stop using that C_RNTI just cleared from the variable C_RNTI in MAC;
- start the timer T305 if timer T305 is not running and periodical URA update or cell update has been requested in system information block type 1;
- select Secondary CCPCH according to subclause 8.6.6.5.
- if the IE "UTRAN DRX cycle length coefficient" is included in the same message:
 - use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging Occasion and PICH Monitoring Occasion as specified in 8.6.3.2 in CELL_PCH state.

If the UE after the state transition remains in CELL_FACH state and;

- the contents of the variable C_RNTI are empty;

it shall check the value of V302 and

- If V302 is equal to or smaller than N302:
 - set the content of the CELL UPDATE / URA UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE / URA UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
- If V302 is greater than N302:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the entry for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode;
 - a connection failure may be indicated to the non-access stratum;
 - other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - the procedure ends.

If the UE after the state transition remains in CELL_FACH state and

- a C-RNTI is stored in the variable C_RNTI;

or

the UE after the state transition moves to another state than the CELL_FACH state;

the UE shall:

- if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - include and set the IE "Radio bearer uplink ciphering activation time info" in any response message transmitted below to the value of that variable;
 - set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry.
- if the variable PDCP_SN_INFO is non-empty:
 - include the IE "RB with PDCP information list" in any response message transmitted below and set it to the value of the variable PDCP_SN_INFO;
- transmit a response message as specified in subclause 8.3.1.7;
- clear the variable PDCP_SN_INFO;
- clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
- clear the entry for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.

The procedure ends.

8.3.1.7 Transmission of a response message to UTRAN

If the CELL UPDATE CONFIRM message

- includes the IE "RB information to release list";

the UE shall:

- transmit a RADIO BEARER RELEASE COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message

- does not include the IE "RB information to release list"; and
- includes the IE "RB information to reconfigure list "; or
- includes the IE "RB information to be affected list ";

the UE shall:

- transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- includes "Transport channel information elements";

the UE shall:

- transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements";

the UE shall:

- transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI";

the UE shall:

- transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message

- does not include "RB information elements"; and

- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI";

the UE shall:

- transmit no response message.

If the URA UPDATE CONFIRM message:

- includes any one or both of the IEs "New C-RNTI" and "New U-RNTI";

the UE shall:

- transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

- if the variable PDCP_SN_INFO is empty:
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - when RLC has confirmed the successful transmission of the response message:
 - continue with the remainder of the procedure.
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is not set:
 - when RLC has been requested to transmit the response message,
 - continue with the remainder of the procedure.
- if the variable PDCP_SN_INFO non-empty:
 - when RLC has confirmed the successful transmission of the response message:
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to "continue";
 - continue with the remainder of the procedure.

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted in CELL_FACH state, and the UE shall:

- when RLC has confirmed the successful transmission of the response message:
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to "continue";
 - enter the new state (CELL_PCH or URA_PCH, respectively);
 - continue with the remainder of the procedure.

8.3.1.8 Unsupported configuration by the UE

If the UE does not support the configuration in the CELL UPDATE CONFIRM message and/or the variable UNSUPPORTED_CONFIGURATION is set to TRUE, the UE shall:

- if V302 is equal to or smaller than N302, the UE shall:
 - set the variable FAILURE_INDICATOR to TRUE;
 - set the variable FAILURE_CAUSE to "Unsupported configuration";
 - set the content of the CELL UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
- if V302 is greater than N302, the UE shall:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the variable PDCP_SN_INFO;
 - clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode.
 - a connection failure may be indicated to the non-access stratum;
 - Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - And the procedure ends.

8.3.1.9 Invalid configuration

If the variable INVALID_CONFIGURATION is set to TRUE, the UE shall:

- if V302 is equal to or smaller than N302, the UE shall:
 - set the variable FAILURE_INDICATOR to TRUE;
 - set the variable FAILURE_CAUSE to "Invalid configuration";
 - set the content of the CELL UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
- if V302 is greater than N302, the UE shall:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the variable PDCP_SN_INFO;
 - clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;

- enter idle mode;
- a connection failure may be indicated to the non-access stratum;
- Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
- The procedure ends.

8.3.1.10 Confirmation error of URA ID list

If the URA UPDATE CONFIRM message causes a confirmation error of URA identity list as specified in subclause 8.6.2.1 the UE shall:

- check the value of V302, and:
 - if V302 is smaller or equal than N302;
 - set the IEs in the URA UPDATE message according to subclause 8.3.1.3;
 - submit the URA UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
 - if V302 is greater than N302:
 - enter idle mode;
 - perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;
 - A connection failure may be indicated to the non-access stratum;
 - The procedure ends.

8.3.1.11 Invalid CELL UPDATE CONFIRM/URA UPDATE CONFIRM message

If the UE receives an CELL UPDATE CONFIRM/URA UPDATE CONFIRM message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- If V302 is equal to or smaller than N302, the UE shall:
 - set the variable `PROTOCOL_ERROR_INDICATOR` to TRUE,;
 - set the content of the CELL UPDATE / URA UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
- if V302 is greater than N302, the UE shall:
 - clear the variable `RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO`;
 - clear the entry for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable `TRANSACTIONS`;
 - release all its radio resources;
 - enter idle mode;
 - A connection failure may be indicated to the non-access stratum;

- Other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
- The procedure ends.

8.3.1.12 T302 expiry, URA reselection, cell reselection or DPCH failure

If any or several of the following conditions are true:

- expiry of timer T302;
- reselection to another UTRA cell (including the previously serving cell) when waiting for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message;
- the UE failed to establish the dedicated channel according to the CELL UPDATE CONFIRM message:

the UE shall:

- check whether it is still in "in service area" (see subclause 8.5.5.2).

If the UE detects "in service area", and:

- if V302 is equal to or smaller than N302, the UE shall
 - if the UE performed cell re-selection:
 - delete its C-RNTI;
 - set the contents of the CELL UPDATE / URA UPDATE message according to subclause 8.3.1.3;
 - submit the CELL UPDATE / URA UPDATE message for transmission on the uplink CCCH;
 - increment counter V302;
 - restart timer T302 when the MAC layer indicates success or failure to transmit the message;
- if V302 is greater than N302, the UE shall:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the variable PDCP_SN_INFO;
 - clear the entry for the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode;
 - a connection failure may be indicated to the non-access stratum;
 - other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - and the procedure ends.

If the UE does not detect "in service area", it shall:

- continue searching for "in service area".

8.3.1.13 T314 expiry

Upon expiry of timer T314 the UE shall:

- if timer T302 is running:
 - continue awaiting response message from UTRAN;

- if timer T302 is not running and timer T315 is running:
 - set IE "T314 expired" in variable RB_TIMER_INDICATOR to TRUE;
 - release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314". A local release indication shall be given to the non-access stratum.
- if timers T302 and T315 are not running:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the variable PDCP_SN_INFO;
 - clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode;
 - a connection failure may be indicated to the non-access stratum;
 - other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - and the procedure ends.

8.3.1.14 T315 expiry

Upon expiry of timer T315 the UE shall:

- if timer T302 is running:
 - continue awaiting response message from UTRAN;
- if timer T302 is not running and timer T314 is running:
 - set IE "T315 expired" in variable RB_TIMER_INDICATOR to TRUE;
 - release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314". A local release indication shall be given to the non-access stratum.
- if timers T302 and T314 are not running:
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;
 - clear the variable PDCP_SN_INFO;
 - clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;
 - release all its radio resources;
 - enter idle mode;
 - a connection failure may be indicated to the non-access stratum;
 - other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;
 - and the procedure ends.

8.3.1.15 Reception of the UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN

See subclause 8.3.3.4.

8.3.2 URA update

See subclause 8.3.1.

8.3.3 UTRAN mobility information

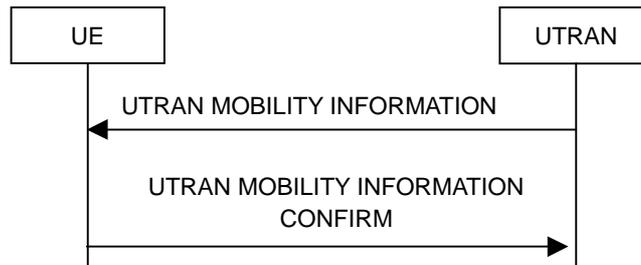


Figure 48: UTRAN mobility information procedure, normal flow

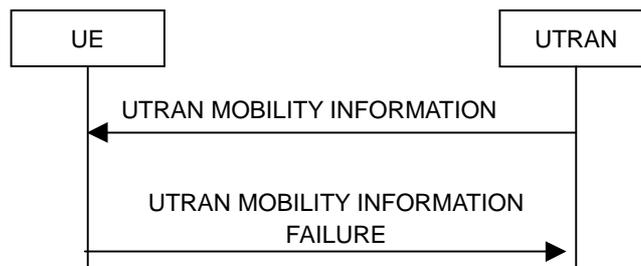


Figure 49: UTRAN mobility information procedure, failure case

8.3.3.1 General

The purpose of this procedure is to allocate any one or a combination of the following to a UE in connected mode:

- a new C-RNTI;
- a new U-RNTI;
- other mobility related information.

8.3.3.2 Initiation

To initiate the procedure UTRAN transmits a UTRAN MOBILITY INFORMATION message to the UE on the downlink DCCH.

8.3.3.3 Reception of UTRAN MOBILITY INFORMATION message by the UE

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

- act on received information elements as specified in subclause 8.6;
- set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry;

- if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - include and set the IE "Radio bearer uplink ciphering activation time info" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of that variable;
- if the variable PDCP_SN_INFO is non-empty:
 - include the IE "RB with PDCP information list" in the UTRAN MOBILITY INFORMATION CONFIRM message and set it to the value of the variable PDCP_SN_INFO;
- transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;
- if the variable PDCP_SN_INFO is empty; and
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - when RLC has confirmed the successful transmission of the UTRAN MOBILITY INFORMATION CONFIRM message, perform the actions below.
 - if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is not set:
 - when RLC has been requested to transmit the UTRAN MOBILITY INFORMATION CONFIRM message, perform the actions below.
 - if the variable PDCP_SN_INFO is non-empty:
 - when RLC has confirmed the successful transmission of the UTRAN MOBILITY INFORMATION CONFIRM message:
 - for each radio bearer in the variable PDCP_SN_INFO:
 - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":
 - configure the RLC entity for that radio bearer to "continue";

The procedure ends when of the UTRAN MOBILITY INFORMATION CONFIRM message has been submitted to lower layers for transmission.

8.3.3.4 Reception of an UTRAN MOBILITY INFORMATION CONFIRM message by the UTRAN

When the network receives UTRAN MOBILITY INFORMATION CONFIRM message, UTRAN may delete any old U-RNTI. The procedure ends.

8.3.3.5 Cell re-selection

If the UE performs cell re-selection, the UE shall:

- initiate a cell update procedure according to subclause 8.3.1;
- if the UTRAN MOBILITY INFORMATION message contains the IE "New C-RNTI"; and
- if the UE has not yet submitted the UTRAN MOBILITY INFORMATION CONFIRM message to lower layers for transmission;
 - transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;
 - set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and
 - clear that entry.
 - set the IE "failure cause" to the cause value "cell reselection";

- when the UTRAN MOBILITY INFORMATION FAILURE message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid UTRAN MOBILITY INFORMATION message has not been received and the procedure ends.
- otherwise;
 - continue the procedure normally.

8.3.3.6 Invalid UTRAN MOBILITY INFORMATION message

If the UTRAN MOBILITY INFORMATION message contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Rejected transactions" in the variable `TRANSACTIONS`, and;
- clear that entry.
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- when the UTRAN MOBILITY INFORMATION FAILURE message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid UTRAN MOBILITY INFORMATION message has not been received and the procedure ends.

8.3.4 Active set update

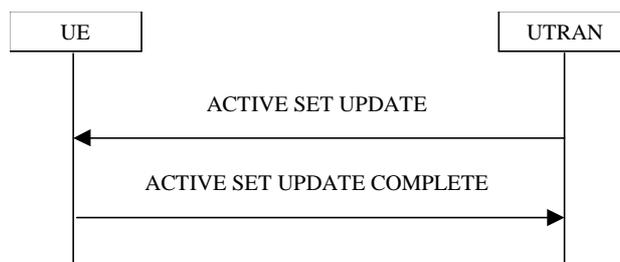


Figure 50: Active Set Update procedure, successful case

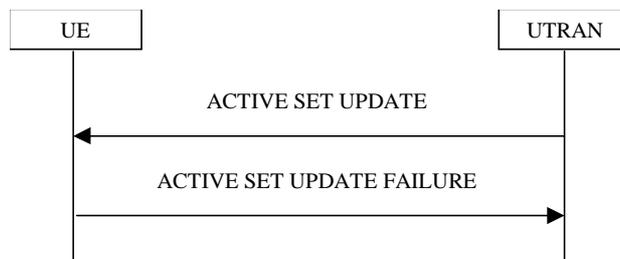


Figure 51: Active Set Update procedure, failure case

8.3.4.1 General

The purpose of the active set update procedure is to update the active set of the connection between the UE and UTRAN. This procedure shall be used in CELL_DCH state. The UE should keep on using the old RLs while configuring the new RLs. Also the UE should keep the transmitter turned on during the procedure. This procedure is only used in FDD mode.

8.3.4.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH state, to make the following modifications of the active set of the connection:

- a) Radio link addition;
- b) Radio link removal;
- c) Combined radio link addition and removal.

In case a) and c), UTRAN should:

- prepare new additional radio link(s) in the UTRAN prior to the command to the UE.

In all cases, UTRAN should:

- send an ACTIVE SET UPDATE message on downlink DCCH using AM or UM RLC.

UTRAN should include the following information:

- IE "Radio Link Addition Information": Downlink DPCH information and other optional parameters relevant for the radio links to be added along with the IE "Primary CPICH info" used for the reference ID to indicate which radio link to add. This IE is needed in cases a) and c) listed above;
- IE "Radio Link Removal Information": IE "Primary CPICH info" used for the reference ID to indicate which radio link to remove. This IE is needed in cases b) and c) listed above.

If SRNS relocation is performed simultaneously during active set update procedure when all radio links are replaced simultaneously, the UTRAN shall include the IE "U-RNTI" and IE "CN domain identity" and IE "NAS system information" in the ACTIVE SET UPDATE messages.

8.3.4.3 Reception of an ACTIVE SET UPDATE message by the UE

- Upon reception of an ACTIVE SET UPDATE message the UE shall store the received IE "Radio Link Addition Information" and the IE "Radio Link Removal Information" to the variable ORDERED_ASU.

The UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following. The UE shall:

- first add the RLs indicated in the IE "Radio Link Addition Information";
- remove the RLs indicated in the IE "Radio Link Removal Information". If the UE active set is full or becomes full, an RL, which is included in the IE "Radio Link Removal Information" for removal, shall be removed before adding RL, which is included in the IE "Radio Link Addition Information" for addition;
- if the ACTIVE SET UPDATE message includes the IE "U-RNTI":
 - update its identity;
- if the ACTIVE SET UPDATE message includes the IE "CN domain identity" and the IE "NAS system information":
 - forward the content of the IE to the non-access stratum entity of the UE indicated by the IE "CN domain identity";
- if the ACTIVE SET UPDATE message includes the IE 'TFCI combining indicator' associated with a radio link to be added:

- configure Layer 1 to soft combine TFCI (field 2) of this new link with those links already in the TFCI (field 2) combining set;
- transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the Physical Layer synchronization;
- set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry;
- if the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO is set:
 - include and set the IE "Radio bearer uplink ciphering activation time info" to the value of that variable;
- when the ACTIVE SET UPDATE COMPLETE message has been submitted to lower layers for transmission:
 - clear the contents of the variable ORDERED_ASU;
 - clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO and the procedure ends on the UE side.

8.3.4.4 Unsupported configuration in the UE

If UTRAN instructs the UE to use a configuration that it does not support, the UE shall:

- keep the active set and the contents of the variable ORDERED_ASU, as it was before the ACTIVE SET UPDATE message was received;
- transmit an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry;
- set the IE "failure cause" to "configuration unacceptable";
- when the ACTIVE SET UPDATE FAILURE message has been submitted to lower layers for transmission the procedure ends on the UE side.

8.3.4.5 Invalid configuration

If any of the following conditions are valid:

- a radio link indicated by the IE "Downlink DPCH info for each RL" in the IE "Radio link addition information" has a different spreading factor than the spreading factor for the radio links at the time indicated by the IE "Activation time"; and/or
- a radio link in the IE "Radio Link Removal Information" in the ACTIVE SET UPDATE message is not part of the active set at the time indicated by the IE "Activation time"; and/or
- the variable INVALID_CONFIGURATION is set to TRUE;

the UE shall:

- keep the active set and the contents of the variable ORDERED_ASU, as it was before the ACTIVE SET UPDATE message was received;
- transmit an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;
- set the IE "failure cause" to "Invalid configuration";
- When the ACTIVE SET UPDATE FAILURE message has been submitted to lower layers for transmission the procedure ends on the UE side.

8.3.4.6 Reception of the ACTIVE SET UPDATE COMPLETE message by the UTRAN

When the UTRAN has received the ACTIVE SET UPDATE COMPLETE message,

- the UTRAN may remove radio link(s) that are indicated to remove to the UE in case b) and c); and
- the procedure ends on the UTRAN side.

8.3.4.7 Reception of the ACTIVE SET UPDATE FAILURE message by the UTRAN

When the UTRAN has received the ACTIVE SET UPDATE FAILURE message, the UTRAN may delete radio links that were included in the IE "Radio Link Addition Information" for addition. The procedure ends on the UTRAN side.

8.3.4.8 Invalid ACTIVE SET UPDATE message

If none of the variables ORDERED_CONFIG or ORDERED_ASU are set and the ACTIVE SET UPDATE message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:
 - resume normal operation as if the invalid ACTIVE SET UPDATE message has not been received and the procedure ends.

8.3.5 Hard handover

8.3.5.1 Timing re-initialised hard handover

8.3.5.1.1 General

The purpose of the timing re-initialised hard handover procedure is to remove all the RL(s) in the active set and establish new RL(s) along with a change in the UL transmission timing and the CFN in the UE according to the SFN of the target cell.(see subclause 8.5.15).

This procedure is initiated when UTRAN does not know the target SFN timing before hard handover.

8.3.5.1.2 Initiation

Timing re-initialised hard handover initiated by the UTRAN is normally performed by using the procedure "Physical channel reconfiguration" (subclause 8.2.6), but may also be performed by using either one of the following procedures:

- "radio bearer establishment" (subclause 8.2.1);
- "Radio bearer reconfiguration" (subclause 8.2.2);
- "Radio bearer release" (subclause 8.2.3); or
- "Transport channel reconfiguration" (subclause 8.2.4).

If IE "Timing indication" has the value "initialise", UE shall execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

8.3.5.2 Timing-maintained hard handover

8.3.5.2.1 General

The purpose of the Timing-maintained hard handover procedure is to remove all the RL(s) in the active set and establish new RL(s) while maintaining the UL transmission timing and the CFN in the UE.

This procedure can be initiated only if UTRAN knows the target SFN timing before hard handover. The target SFN timing can be known by UTRAN in the following 2 cases:

- UE reads SFN when measuring "Cell synchronisation information" and sends it to the UTRAN in MEASUREMENT REPORT message.
- UTRAN internally knows the time difference between the cells.

8.3.5.2.2 Initiation

Timing-maintained hard handover initiated by the network is normally performed by using the procedure "Physical channel reconfiguration" (subclause 8.2.6), but may also be performed by using either one of the following procedures:

- "radio bearer establishment" (subclause 8.2.1);
- "Radio bearer reconfiguration" (subclause 8.2.2);
- "Radio bearer release" (subclause 8.2.3); or
- "Transport channel reconfiguration" (subclause 8.2.4).

If IE "Timing indication" has the value "maintain", UE shall initiate the Timing-maintained hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

8.3.6 Inter-RAT handover to UTRAN

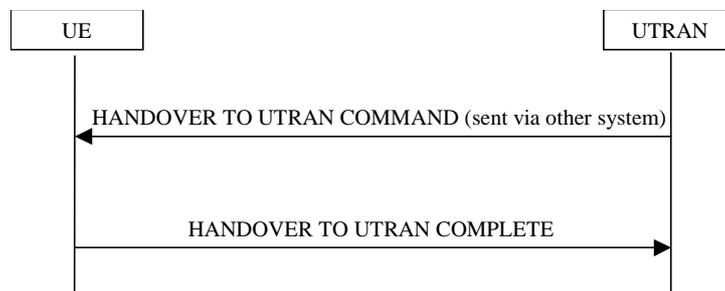


Figure 52: Inter-RAT handover to UTRAN, successful case

8.3.6.1 General

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and another radio access technology (e.g. GSM) to UTRAN.

8.3.6.2 Initiation

The procedure is initiated when a radio access technology other than UTRAN, e.g. GSM, using system specific procedures, orders the UE to make a handover to UTRAN.

A HANOVER TO UTRAN COMMAND message is sent to the UE via the radio access technology from which inter-system handover is performed.

In case UTRAN decides to use a predefined radio configuration that is stored in the UE, it should include the following information in the HANOVER TO UTRAN COMMAND message.

- the IE "U-RNTI" to be assigned;
- the IE "Predefined radio configuration identity", to indicate which pre-defined configuration of RB, traffic channel and physical channel parameters shall be used;
- PhyCH information elements.

NOTE: When using a predefined configuration during handover to UTRAN, UTRAN can only assign values of IEs "U-RNTI" and "scrambling code" that are within the special subranges defined exclusively for this procedure. UTRAN may re-assign other values after completion of the handover procedure.

In case UTRAN does not use a predefined radio configuration that is stored in the UE, it should include the following information in the HANOVER TO UTRAN COMMAND message.

- the IE "U-RNTI" to be assigned;
- the complete set of RB, TrCH and PhyCH information elements to be used.

8.3.6.3 Reception of HANOVER TO UTRAN COMMAND message by the UE

The UE shall be able to receive a HANOVER TO UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target UTRAN cell and/or frequency.

The UE shall act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following. The UE shall:

- store a U-RNTI value (32 bits), which is derived by the IEs "SRNC identity" (12 bits) and "S-RNTI 2" (10 bits) included in IE "U-RNTI-short". In order to produce a full size U-RNTI value, a full size "S-RNTI" (20 bits) shall be derived by padding the IE "S-RNTI 2" with 10 zero bits in the most significant positions; and
- if IE "Specification mode" is set to "Preconfiguration":
 - initiate the signalling link, the RB(s) and traffic channel(s) in accordance with the predefined parameters identified by the IE "Predefined radio configuration identity";
 - initiate the physical channels in accordance with the predefined parameters identified by the IE "Predefined radio configuration identity" and the received physical channel information elements;
- if IE "Specification mode" is set to "Complete specification":
 - initiate the RB(s) and traffic channels in accordance with the received radio bearer, transport channel and physical channel information elements;
- perform an open loop estimation to determine the UL transmission power, taking into account the received IE "Maximum allowed UL TX power" and move to CELL_DCH state;
- apply the same ciphering (ciphered/unciphered, algorithm) as prior to inter-RAT handover, unless a change of algorithm is requested by means of the "Ciphering algorithm".

If the UE succeeds in establishing the connection to UTRAN, it shall:

- transmit a HANOVER TO UTRAN COMPLETE message on the uplink DCCH;
- when the HANOVER TO UTRAN COMPLETE message has been submitted to lower layers for transmission, the procedure ends.

8.3.6.4 Invalid Handover to UTRAN command message

If the UE receives a HANOVER TO UTRAN COMMAND message, which contains a protocol error causing the variable `PROTOCOL_ERROR_REJECT` to be set to `TRUE` according to clause 9, the UE shall perform procedure specific error handling as follows:

- Resume the connection with the source radio access technology used before the handover ;
- Indicate a failure to the source radio access technology, using "protocol error" as cause for the failure;
- If allowed by the source RAT, transmit an RRC STATUS message to the source radio access technology, and include the IE "Protocol error information" with contents set to the value of the variable `PROTOCOL_ERROR_INFORMATION`;
- Other details may be provided in the specifications related to the source radio access technology.

8.3.6.5 UE fails to perform handover

If the UE does not succeed in establishing the connection to UTRAN, it shall terminate the procedure including release of the associated resources, resume the connection used before the handover and indicate the failure to the other radio access technology.

Upon receiving an indication about the failure from the other radio access technology, UTRAN should release the associated resources and the context information concerning this UE.

8.3.6.6 Reception of message HANOVER TO UTRAN COMPLETE by the UTRAN

Upon receiving a HANOVER TO UTRAN COMPLETE message, UTRAN should consider the inter-RAT handover procedure as having been completed successfully and indicate this to the Core Network.

8.3.7 Inter-RAT handover from UTRAN

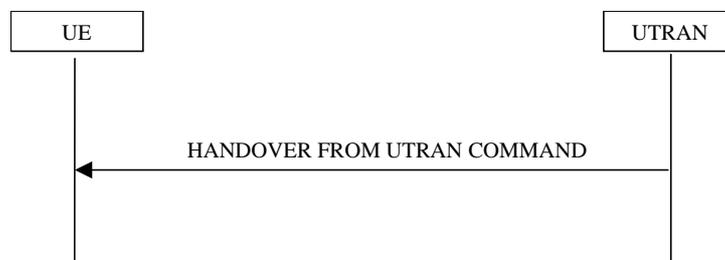


Figure 53: Inter-RAT handover from UTRAN, successful case

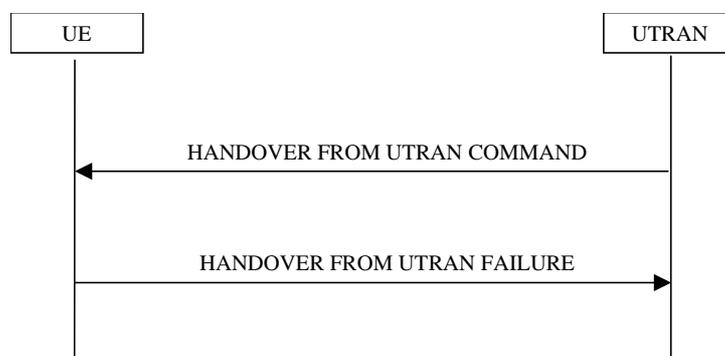


Figure 54: Inter-RAT handover from UTRAN, failure case

8.3.7.1 General

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH states.

NOTE: This procedure applies when the UE has (at least one) RAB in use for a CS domain service (speech, Unrestricted Digital Information).

The UE does not need to support handovers involving more than one RAB in the CS domain. Furthermore, the UE need not support simultaneous handover of PS domain RABs in addition to the RAB used for CS domain services. Nevertheless, the procedure specification provided in the following covers these cases. In case a UE receives a request for a handover case not supported, it shall apply the procedure in subclause 8.3.7.5.

8.3.7.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a handover to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a HANDOVER FROM UTRAN COMMAND message.

8.3.7.3 Reception of a HANDOVER FROM UTRAN COMMAND message by the UE

The UE shall take the following actions:

- establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is the following:

Value of the IE "System type"	Standard to apply	Inter RAT Message
GSM except PCS band	GSM TS 04.18, version 8.5.0 or later, as if the message was sent on any frequency except in the 1900 band	HANDOVER COMMAND
PCS band	GSM TS 04.18, version 8.5.0 or later, as if the message was sent was in the 1900 band	HANDOVER COMMAND
cdma2000	TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later	

- In case IE "RAB info" is not included in the HANDOVER FROM UTRAN COMMAND message, initiate handover for all RABs used by the UE.
- In case one or more IEs "RAB info" is included in the HANDOVER FROM UTRAN COMMAND message, the initiate handover for the RABs specified within this IE(s). Other RABs used by the UE, if any, shall not be affected.
- switch the current connection to the target radio access technology.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

8.3.7.4 Successful completion of the inter-RAT handover

Upon successfully completing the handover, UTRAN should release the radio connection and remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

8.3.7.5 UE fails to complete requested handover

If the UE does not support the requested handover scenario or does not succeed in establishing the connection to the target radio access technology, it shall

- resume the connection to UTRAN using the resources used before receiving the HANDOVER FROM UTRAN COMMAND message; and
- set the IE "RRC transaction identifier" in the HANDOVER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry;
- set the cause value in IE "failure cause" to "Configuration unacceptable" in case the UE does not support the requested configuration. This case includes the case in which the UE does not support the requested handover scenario e.g. handover including multiple CS domain RABs.
- set the cause value in IE "failure cause" to "Physical channel failure" in case the UE did not succeed in establishing the radio connection to the target RAT.
- transmit the HANDOVER FROM UTRAN FAILURE message on uplink DCCH using AM RLC. When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission, the procedure ends;

8.3.7.6 Invalid HANDOVER FROM UTRAN COMMAND message

If the IE "Inter-RAT message" received within the HANDOVER FROM UTRAN COMMAND message does not include a valid inter RAT handover message in accordance with the protocol specifications for the target RAT, the UE shall perform procedure specific error handling as follows:

- set the IE "failure cause" to the cause value "Inter-RAT protocol error";
- include the IE "Inter-RAT message" in case the target RAT provides further details about the inter RAT protocol error;
- transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC
- When the transmission of the HANDOVER FROM UTRAN FAILURE message has been confirmed by RLC, the UE shall resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received and the procedure ends.

If the HANDOVER FROM UTRAN COMMAND message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- set the IE "RRC transaction identifier" in the HANDOVER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry;
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;
- when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

- resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received
- and the procedure ends.

8.3.7.7 Reception of an HANDOVER FROM UTRAN FAILURE message by UTRAN

Upon receiving an HANDOVER FROM UTRAN FAILURE message, UTRAN may initiate the release the resources in the target radio access technology.

8.3.8 Inter-RAT cell reselection to UTRAN

8.3.8.1 General

The purpose of the inter-RAT cell reselection procedure to UTRAN is to transfer, under the control of the UE and to some extent the source radio access technology, a connection between the UE and another radio access technology (e.g. GSM/GPRS, but not UTRAN) to UTRAN.

8.3.8.2 Initiation

When the UE makes an inter-RAT cell reselection to UTRAN according to the criteria specified in 3GPP TS 25.304, it shall initiate this procedure. The inter-RAT cell reselection made by the UE may use system information broadcast from the source radio access technology or UE dedicated information.

The UE shall initiate an RRC connection establishment procedure as specified in subclause 8.1.3 except that the IE "establishment cause" in the RRC CONNECTION REQUEST message shall be set to "Inter-RAT cell reselection". After initiating an RRC connection establishment, the UE shall release all resources specific to the other radio access technology.

8.3.8.3 UE fails to complete an inter-RAT cell reselection

If the inter-RAT cell reselection fails before the UE has initiated the RRC connection establishment the UE may return back to the other radio access technology.

If the RRC connection establishment fails the UE shall enter idle mode.

8.3.9 Inter-RAT cell reselection from UTRAN

8.3.9.1 General

The purpose of the inter-RAT cell reselection procedure from UTRAN is to transfer, under the control of the UE and to some extent the UTRAN, a connection between the UE and UTRAN to another radio access technology (e.g. GSM/GPRS).

8.3.9.2 Initiation

This procedure is applicable in states CELL_FACH, CELL_PCH or URA_PCH.

When the UE based on received system information makes a cell reselection to a radio access technology other than UTRAN, e.g. GSM/GPRS, according to the criteria specified in 3GPP TS 25.304, the UE shall.

- start timer T309;
- initiate the establishment of a connection to the target radio access technology according to its specifications.

8.3.9.3 Successful cell reselection

When the UE has succeeded in reselecting a cell in the target radio access technology and has initiated the establishment of a connection, it shall stop timer T309 and release all UTRAN specific resources.

UTRAN should release all UE dedicated resources upon indication that the UE has completed a connection establishment to the other radio access technology.

8.3.9.4 Expiry of timer T309

If the timer T309 expires before the UE succeeds in initiating the establishment of a connection to the other radio access technology, the UE shall resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

8.3.10 Inter-RAT cell change order to UTRAN

8.3.10.1 General

The purpose of the inter-RAT cell change order to UTRAN procedure is to transfer, under the control of the source radio access technology, a connection between the UE and another radio access technology (e.g. GSM/GPRS) to UTRAN.

8.3.10.2 Initiation

The procedure is initiated when a radio access technology other than UTRAN, e.g. GSM/GPRS, using procedures specific for that RAT, orders the UE to change to a UTRAN cell.

NOTE 1: Within the message used to order the UE to change to a UTRAN cell, the source RAT should specify the identity of the target UTRAN cell as specified in the specifications for that RAT.

The UE shall initiate an RRC connection establishment procedure as specified in subclause 8.1.3 except that the IE "establishment cause" in the RRC CONNECTION REQUEST message shall be set to "Inter-RAT cell change order". Furthermore, the UE shall indicate which cell selection mode it starts with in the new cell by means of IE "Cell selection mode".

NOTE 2: UTRAN may use the establishment cause for admission control, e.g. to prioritise existing connections above new requests and/ or to prevent the UE from returning to the source RAT due to general radio link conditions e.g. for service based handovers.

8.3.10.3 UE fails to complete an inter-RAT cell change order

If the inter-RAT cell reselection fails the UE shall return to the other radio access technology and proceed as specified in the appropriate specifications for that RAT.

NOTE 3: The cell change was network ordered. Therefore, failure to change to the target cell should not cause the UE to move to UE- controlled cell selection.

8.3.11 Inter-RAT cell change order from UTRAN

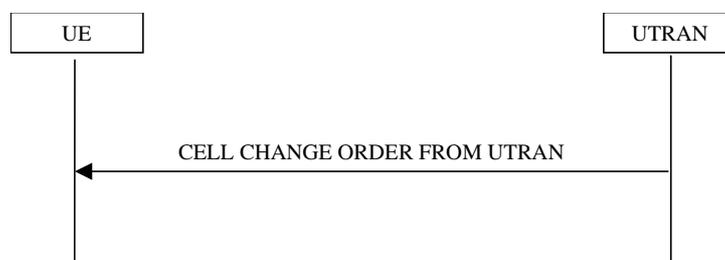


Figure 55: Inter-RAT cell change order from UTRAN

8.3.11.1 General

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state.

NOTE 1: This procedure applies when the UE has at least one RAB in use in the PS domain.

The UE does not need to support a cell change order concerning a subset of the RAB in use. Furthermore, the UE need not support a cell change order received while it has one or more CS domain RABs in use. Nevertheless, the procedure specification provided in the following covers these cases. In case a UE receives a request for a cell change order case not supported, it shall apply the procedure "UE fails to complete the requested cell change order".

8.3.11.2 Initiation

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

8.3.11.3 Reception of an CELL CHANGE ORDER FROM UTRAN message by the UE

The UE shall take the following actions:

- establish the connection to the other radio access technology, as specified within IE "Target cell info". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell info" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and
- if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:
 - retrieve it from the target cell as specified in 3GPP TS 04.18;
 - act upon IE "NC mode" as specified in 3GPP TS 04.18.
- if IE "RAB info" is not included in the CELL CHANGE ORDER FROM UTRAN message:
 - initiate cell change for all RABs used by the UE.
- if one or more IEs "RAB info" are included in the CELL CHANGE ORDER FROM UTRAN message:
 - initiate handover for the RABs specified within this IE(s). Other RABs used by the UE, if any, shall not be affected.
- switch the current connection to the other radio access technology.

NOTE 2: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

8.3.11.4 Successful completion of the cell change order

Upon successfully completing the cell change order, UTRAN should release the radio connection and remove all context information for the concerned UE.

NOTE 3: The release of the UMTS radio resources is initiated from another RAT.

8.3.11.5 UE fails to complete requested cell change order

If the UE does not succeed in establishing the connection to the target RAT, it shall

- resume the connection to UTRAN using the resources used before receiving the CELL CHANGE ORDER FROM UTRAN message

- transmit the CELL CHANGE FAILURE FROM UTRAN message on uplink DCCH using AM RLC. When the CELL CHANGE FAILURE FROM UTRAN message has been submitted to lower layers for transmission, the procedure ends;
- set the cause value as specified within IE "failure cause" as follows:
 - to "Configuration unacceptable" in case the UE does not support the requested configuration;
 - to "Physical channel failure" in case the UE did not succeed to establish the radio connection.

NOTE 4: The cell change was network ordered. Therefore, failure to change to the target cell should not cause the UE to move to UE- controlled cell selection.

8.4 Measurement procedures

The UE measurements are grouped into 6 different categories, according to what the UE should measure.

The different types of measurements are:

- **Intra-frequency measurements:** measurements on downlink physical channels at the same frequency as the active set. Detailed description is found in subclause 14.1.
- **Inter-frequency measurements:** measurements on downlink physical channels at frequencies that differ from the frequency of the active set. Detailed description is found in subclause 14.2.
- **Inter-RAT measurements:** measurements on downlink physical channels belonging to another radio access technology than UTRAN, e.g. PDC or GSM. Detailed description is found in subclause 14.3.
- **Traffic volume measurements:** measurements on uplink traffic volume. Detailed description is found in subclause 14.4.
- **Quality measurements:** Measurements of quality parameters, e.g. downlink transport block error rate. Detailed description is found in subclause 14.5
- **Internal measurements:** Measurements of UE transmission power and UE received signal level. Detailed description is found in subclause 14.6.
- **UE positioning measurements:** Measurements of UE position. Detailed description is found in subclause 14.7.

The UE shall support a number of measurements running in parallel. The UE shall also support that each measurement is controlled and reported independently of every other measurement.

Cells that the UE is monitoring (e.g. for handover measurements) are grouped in the UE into three different categories:

1. Cells, which belong to the **active set**. User information is sent from all these cells and they are simultaneously demodulated and coherently combined. In FDD, these cells are involved in soft handover. In TDD the active set always comprises of one cell only.
2. Cells, which are not included in the active set, but are monitored according to a neighbour list assigned by the UTRAN belong to the **monitored set**.
3. Cells, which are neither included in the active set nor in the monitored set, and are detected by the UE without receiving a neighbour list from the UTRAN belong to the **detected set**. Intra-frequency measurements of the unlisted set is required only of UEs in CELL_DCH state.

UTRAN may control a measurement in the UE either by broadcast system information and/or by transmitting a MEASUREMENT CONTROL message. The latter message includes the following measurement control information:

1. **Measurement type:** One of the types listed above describing what the UE shall measure.
2. **Measurement identity:** A reference number that should be used by the UTRAN when modifying or releasing the measurement and by the UE in the measurement report.
3. **Measurement command:** One out of three different measurement commands.

- Setup: Setup a new measurement.
 - Modify: Modify a previously defined measurement, e.g. to change the reporting criteria.
 - Release: Stop a measurement and clear all information in the UE that are related to that measurement.
4. **Measurement objects:** The objects the UE shall measure, and corresponding object information (for example a neighbour cell list).
 5. **Measurement quantity:** The quantity the UE shall measure. This also includes the filtering of the measurements. (for example CPICH E_c/N_0)
 6. **Reporting quantities:** The quantities the UE shall include in the report in addition to the quantities that are mandatory to report for the specific event.
 7. **Measurement reporting criteria:** The triggering of the measurement report, e.g. periodical or event-triggered reporting.
 8. **Reporting mode:** This specifies whether the UE shall transmit the measurement report using AM or UM RLC.

All these measurement parameters depend on the measurement type and are described in more detail in clause 14.

When the reporting criteria are fulfilled, i.e. a specified event occurred or the time since last report indicated for periodical reporting has elapsed, the UE shall send a MEASUREMENT REPORT message to UTRAN.

In CELL_FACH, CELL_PCH or URA_PCH state, the UE shall perform measurements according to the measurement control information included in System Information Block Type 12, which is transmitted on the BCCH. If System Information Block Type 12 is not transmitted in the cell, it shall perform measurements according to the measurement control information included in System Information Block Type 11, transmitted on the BCCH.

In CELL_DCH state, the UE may be requested by UTRAN to report intra-frequency, inter-frequency and inter-RAT measurements to the UTRAN with a MEASUREMENT REPORT message. The UE may also be requested by the UTRAN to report unlisted cells, which it has detected. The triggering event for the UE to send a MEASUREMENT REPORT message for a detected set is defined in measurement events 1A and 1E in clause 14.

In order to receive information for the immediate establishment of macrodiversity (FDD) or to support the DCA algorithm (TDD), the UTRAN may also indicate to the UE in System Information Block Type 11 or System Information Block Type 12, to append radio link related measurement reports to the following messages when they are sent on common transport channels (e.g., RACH, CPCH):

- RRC CONNECTION REQUEST message sent to establish an RRC connection;
- INITIAL DIRECT TRANSFER message sent uplink to establish a signalling connection;
- CELL UPDATE message sent to respond to a UTRAN originated page;
- MEASUREMENT REPORT message sent to report uplink traffic volume;
- CAPACITY REQUEST message sent to request PUSCH capacity (TDD only).

8.4.1 Measurement control



Figure 56: Measurement Control, normal case

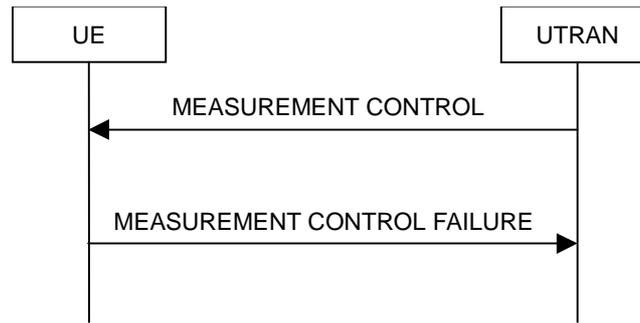


Figure 57: Measurement Control, UE reverts to old measurements

8.4.1.1 General

The purpose of the measurement control procedure is to Setup, modify or release a measurement in the UE.

8.4.1.2 Initiation

The UTRAN may request a measurement by the UE to be setup, modified or released with a MEASUREMENT CONTROL message, which is transmitted on the downlink DCCH using AM RLC.

The UTRAN should take the UE capabilities into account when a measurement is assigned to the UE.

When a new measurement is initiated, UTRAN should set the IE "Measurement identity" to a value, which is not used for other measurements. UTRAN may use several "Measurement identity" for the same "Measurement type". In case of setting several "Measurement identity" within a same "Measurement type", "Measurement object" can be set differently for each measurement with different "Measurement identity". If no "Measurement object" is indicated for additional measurement within a same "Measurement type" in case of "Measurement type" = "Intra-frequency", it implies that only active set cells are the "Measurement objects".

When a current measurement is modified or released, UTRAN should set the IE "Measurement identity" to a value, which is used for the measurement being modified or released. In case of modifying IEs within a "Measurement identity", it is not needed for UTRAN to indicate the IEs other than modifying IEs, and the UE continues to use the current values of the IEs which are not modified.

8.4.1.3 Reception of MEASUREMENT CONTROL by the UE

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 unless otherwise specified below.

The UE shall:

- read the IE "Measurement command";
- if the IE "measurement command" has the value "setup":
 - store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity";
 - store into the variable MEASUREMENT_IDENTITY the control information defined by IE "Measurement object", the IE "Measurement quantity", the IE "Reporting quantity", the IE "Measurement reporting criteria", the IE "Measurement validity", the IE "Reporting mode" and if present all IEs "Additional measurement identity", which are valid for this measurement type; and
 - for measurement types "inter-RAT measurement" or "inter-frequency measurement":
 - begin measurements according to the stored control information for this measurement identity optionally with the use of compressed mode if at least one compressed mode pattern sequence is simultaneously activated with inclusion of the IE "DPCH compressed mode status info"; or
- for any other measurement type:

- begin measurements according to the stored control information for this measurement identity.
- if the IE "Measurement command" has the value "modify":
 - retrieve the stored measurement information in variable MEASUREMENT_IDENTITY associated with the identity indicated by the IE "measurement identity";
 - if any of IE "measurement quantity", IE "reporting quantity", IE "measurement reporting criteria", IE "measurement validity", IE "reporting mode" or IE "Additional measurement identity" are present in the MEASUREMENT CONTROL message, the control information defined by these IEs shall replace the corresponding stored information in variable MEASUREMENT_IDENTITY;
 - store the new set of IEs and associate them with the measurement identity;
 - resume the measurements according to the new stored measurement control information.
- if the IE "measurement command" has the value "release":
 - terminate the measurement associated with the identity given in the IE "measurement identity";
 - clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.
- if the IE "DPCH Compressed Mode Status Info" is present, the UE shall:
 - activate the pattern sequence stored in the variable TGPS_IDENTITY corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" and begin the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
 - deactivate the pattern sequence stored in variable TGPS_IDENTITY corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "deactivate" and terminate the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each deactivated pattern sequence;
 - clear the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS.
- and the procedure ends.

8.4.1.4 Unsupported measurement in the UE

If UTRAN instructs the UE to perform a measurement that is not supported by the UE, the UE shall:

- retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received;
- transmit a MEASUREMENT CONTROL FAILURE message on the DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and
- clear that entry.
- set the cause value in IE "failure cause" to "unsupported measurement";
- when the MEASUREMENT CONTROL FAILURE message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid MEASUREMENT CONTROL message has not been received
- and the procedure ends.

8.4.1.5 Invalid MEASUREMENT CONTROL message

If the MEASUREMENT CONTROL message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit a MEASUREMENT CONTROL FAILURE message on the uplink DCCH using AM RLC;
- set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and
- clear that entry.
- set the IE "failure cause" to the cause value "protocol error";
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;
- when the MEASUREMENT CONTROL FAILURE message has been submitted to lower layers for transmission:
 - resume normal operation as if the invalid MEASUREMENT CONTROL message has not been received and the procedure ends.

8.4.1.6 Measurements after transition from CELL_DCH to CELL_FACH state

The UE shall obey the follow rules for different measurement types after transiting from CELL_DCH to CELL_FACH state:

8.4.1.6.1 Intra-frequency measurement

The UE shall stop intra-frequency type measurement reporting assigned in a MEASUREMENT CONTROL message.

After transition to CELL_FACH state, the UE shall begin monitoring neighbouring cells listed in the "intra-frequency cell info" received in "System Information Block type 12" (or "System Information Block type 11").

If the UE has no previously assigned, valid intra-frequency measurement for CELL_DCH state, the UE shall store "intra-frequency measurement reporting criteria", from "System Information Block type 12" (or "System Information Block type 11"), for use after a subsequent transition to CELL_DCH state.

If the UE receives the "Intra-frequency reporting quantity for RACH Reporting" and "Maximum number of Reported cells on RACH" IEs from "System Information Block type 12" (or "System Information Block type 11"), the UE use this information for reporting measured results in RACH messages.

8.4.1.6.2 Inter-frequency measurement

The UE shall stop the inter-frequency type measurement reporting assigned in a MEASUREMENT CONTROL message.

After transition to CELL_FACH state, the UE shall begin monitoring neighbouring cells listed in the "inter-frequency cell info" received in "System Information Block type 12" (or "System Information Block type 11").

The UE shall not measure on other frequencies except at the measurement occasions given in subclause 8.5.11.

8.4.1.6.3 Inter-RAT measurement

The UE shall stop the inter-RAT type measurement reporting assigned in a MEASUREMENT CONTROL message.

After transition to CELL_FACH state, the UE shall begin monitoring neighbouring cells listed in the "inter-RAT" cell info" received in "System Information Block type 12" (or "System Information Block type 11").

The UE shall not measure on other systems except at the measurement occasions given in subclause 8.5.11.

8.4.1.6.4 Quality measurement

Upon transition from CELL_DCH to CELL_FACH state, the UE shall:

- stop quality type measurement reporting;
- retrieve each set of measurement control information of measurement type "quality" stored in the variable MEASUREMENT_IDENTITY and delete all control information associated to the measurement identity.

8.4.1.6.5 UE internal measurement

Upon transition from CELL_DCH to CELL_FACH state, the UE shall:

- stop UE internal measurement type measurement reporting;
- retrieve each set of measurement control information of measurement type "UE internal" stored in the variable MEASUREMENT_IDENTITY and delete all control information associated to the measurement identity.

8.4.1.6.6 Traffic volume measurement

Upon transition from CELL_DCH to CELL_FACH state, the UE shall take the following actions:

- retrieve each set of measurement control information of measurement type "traffic volume" stored in the variable MEASUREMENT_IDENTITY; and
 - if the optional IE "measurement validity" for this measurement has not been included:
 - delete the measurement associated with the variable MEASUREMENT_IDENTITY.
 - if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "CELL_DCH":
 - stop measurement reporting;
 - save the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_DCH state.
 - if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":
 - continue measurement reporting.
 - if the UE has previously stored a measurement, for which the IE "measurement validity" has been included and for which the IE "UE state" has been assigned to value "all states except CELL_DCH":
 - resume this measurement and associated reporting.
- If no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message when transiting to CELL_FACH state:
 - monitor the BCH in order to receive "System Information Block type 11". Upon reception of "System Information Block Type 11":
 - read the IE "Traffic volume measurement system information" and store the measurement control information in variable MEASUREMENT_IDENTITY;
 - begin traffic volume measurement reporting according to the assigned information.
 - if the "System Information Block type 12" is transmitted in the cell, monitor the BCH in order to receive "System Information Block type 12". Upon reception of "System Information Block type 12":
 - read the IE "Traffic volume measurement system information", and update the measurement control information in variable MEASUREMENT_IDENTITY;
 - begin traffic volume measurement reporting according to the assigned information.

- if the UE in CELL_FACH state receives a MEASUREMENT CONTROL message, which indicates the same measurement identity as that stored in variable MEASUREMENT_IDENTITY:
 - update the stored information with the traffic volume measurement control information in variable MEASUREMENT_IDENTITY; and
 - refrain from updating the traffic volume measurement control information associated with this measurement identity from the BCH until the UTRAN explicitly releases this measurement with another MEASUREMENT CONTROL message.

NOTE: The UE may receive " System Information Block type 12" before " System Information Block type 11" and can store received information before receiving " System Information Block type 11". However, the UE shall not apply any information received System Information Block type 12 before having received information from " System Information Block type 11".

8.4.1.7 Measurements after transition from CELL_FACH to CELL_DCH state

The UE shall obey the follow rules for different measurement types after transiting from CELL_FACH to CELL_DCH state:

8.4.1.7.1 Intra-frequency measurement

If the UE has previously in CELL_DCH state stored an intra-frequency measurement, for which the IE "measurement validity" has been assigned the value "resume" and for which the IE "UE state for reporting" has been assigned the value "CELL_DCH", the UE shall resume this measurement and associated reporting. If the UE has performed cell reselection whilst out of CELL_DCH state, the UE shall not resume the measurement.

If the UE has no previously assigned measurement, it shall continue monitoring the list of neighbouring cells assigned in the "intra-frequency cell info" IE in "System Information Block type 12" (or "System Information Block type 11"). If the "intra-frequency measurement reporting criteria" IE was included in "System Information Block type 12" (or "System Information Block type 11"), the UE shall send the MEASUREMENT REPORT message when reporting criteria are fulfilled. When the UE receives a MEASUREMENT CONTROL message including an intra-frequency measurement type assignment, the UE shall stop monitoring and measurement reporting for the list of neighbouring cells assigned in the "intra-frequency cell info" IE in "System Information Block type 12" (or "System Information Block type 11"). If the reporting criteria is included in the MEASUREMENT CONTROL message, the UE shall replace the measurement reporting criteria received in "System Information Block type 12" (or "System Information Block type 11") with the new information received in the MEASUREMENT CONTROL message.

8.4.1.7.2 Inter-frequency measurement

The UE shall stop monitoring the list of neighbouring cells assigned in the "inter-frequency cell info" IE in "System Information Block type 12" (or "System Information Block type 11"). If the UE has previously stored an inter-frequency measurement, for which the IE "measurement validity" has been assigned the value "resume" and for which the IE "UE state for reporting" has been assigned the value "CELL_DCH", the UE shall resume this measurement and associated reporting.

8.4.1.7.3 Inter-RAT measurement

The UE shall stop monitoring the list of neighbouring cells assigned in the "inter-frequency system info" IE in "System Information Block type 12" (or "System Information Block type 11"). If the UE has previously stored an inter-RAT measurement, for which the IE "measurement validity" has been assigned the value "resume" and for which the IE "UE state for reporting" has been assigned the value "CELL_DCH", the UE shall resume this measurement and associated reporting.

8.4.1.7.4 Traffic volume measurement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

- retrieve each set of measurement control information of measurement type "traffic volume" stored in the variable MEASUREMENT_IDENTITY;
- if the optional IE "measurement validity" for this measurement has not been included:

- delete the measurement associated with the variable MEASUREMENT_IDENTITY.
- if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "CELL_FACH":
 - stop measurement reporting and save the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_FACH state.
- if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":
 - continue measurement reporting.
- if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "CELL_DCH":
 - resume this measurement and associated reporting.
- if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message when transiting to CELL_DCH state:
 - continue an ongoing traffic volume type measurement, assigned in " System Information Block type 11" (or " System Information Block type 12 if transmitted in the cell);
- If the UE in CELL_DCH state receives a MEASUREMENT CONTROL message, which indicates the same measurement identity as that stored in variable MEASUREMENT_IDENTITY:
 - update the stored information with the traffic volume measurement control information in variable MEASUREMENT_IDENTITY.

8.4.1.8 Measurements after transition from idle mode to CELL_DCH state

The UE shall obey the follow rules for different measurement types after transiting from idle mode to CELL_DCH state:

8.4.1.8.1 Intra-frequency measurement

The UE shall continue monitoring the list of neighbouring cells assigned in the "intra-frequency cell info" IE in " System Information Block type 12" (or " System Information Block type 11"). If the "intra-frequency measurement reporting criteria" IE was included in " System Information Block type 12" (or " System Information Block type 11"), the UE shall send the MEASUREMENT REPORT message when reporting criteria are fulfilled.

When the UE receives a MEASUREMENT CONTROL message including an intra-frequency measurement type assignment, the UE shall stop monitoring and measurement reporting for the list of neighbouring cells assigned in the "intra-frequency cell info" IE in " System Information Block type 12" (or " System Information Block type 11"). If the reporting criteria is included in the MEASUREMENT CONTROL message, the UE shall replace the measurement reporting criteria received in " System Information Block type 12" (or " System Information Block type 11") with the new information received in the MEASUREMENT CONTROL message.

8.4.1.8.2 Inter-frequency measurement

The UE shall stop monitoring the list of neighbouring cells assigned in the "inter-frequency cell info" IE in " System Information Block type 12" (or "System Information Block type 11").

8.4.1.8.3 Inter-RAT measurement

The UE shall stop monitoring the list of neighbouring cells assigned in the "inter-frequency system info" IE in "System Information Block type 12" (or "System Information Block type 11").

8.4.1.8.4 Traffic volume measurement

Upon transition from idle mode to CELL_DCH state, the UE shall:

- begin a traffic volume type measurement, assigned in "System Information Block type 11" (or "System Information Block type 12" if transmitted in the cell).

8.4.1.9 Measurements after transition from idle mode to CELL_FACH state

The UE shall obey the follow rules for different measurement types after transiting from idle mode to CELL_FACH state:

8.4.1.9.1 Intra-frequency measurement

The UE shall begin monitoring neighbouring cells listed in the "intra-frequency cell info" received in "System Information Block type 12" (or "System Information Block type 11").

If the UE receives "intra-frequency measurement reporting criteria", from "System Information Block type 12" (or "System Information Block type 11"), the UE shall store this information to use after a subsequent transition to CELL_DCH state.

If the UE receives the IEs "Intra-frequency reporting quantity for RACH Reporting" and "Maximum number of Reported cells on RACH" from "System Information Block type 12" (or "System Information Block type 11"), the UE shall use this information for reporting measured results in RACH messages.

8.4.1.9.2 Inter-frequency measurement

The UE shall begin monitoring neighbouring cells listed in the "inter-frequency cell info" received in "System Information Block type 12" (or "System Information Block type 11").

The UE shall not measure on other frequencies except at the measurement occasions given in subclause 8.5.11.

8.4.1.9.3 Inter-RAT measurement

The UE shall begin monitoring neighbouring cells listed in the "inter-RAT" cell info" received in "System Information Block type 12" (or "System Information Block type 11").

The UE shall not measure on other systems except at the measurement occasions given in subclause 8.5.11.

8.4.1.9.4 Traffic volume measurement

Upon transition from idle mode to CELL_FACH state, the UE shall:

- monitor the BCH in order to receive "System Information Block type 11". Upon reception of " System Information Block type 11":
 - read the IE "Traffic volume measurement system information" and store the measurement control information in variable MEASUREMENT_IDENTITY;
 - begin traffic volume measurement reporting according to the assigned information.
- if the "System Information Block type 12" is transmitted in the cell:
 - monitor the BCH in order to receive "System Information Block type 12". Upon reception of " System Information Block type 12":
 - read the IE "Traffic volume measurement system information", and update the measurement control information in variable MEASUREMENT_IDENTITY;
 - continue traffic volume measurement reporting according to the updated information.

8.4.1.10 Measurements when measurement object is no longer valid

8.4.1.10.1 Traffic volume measurement

If UE is no longer using the transport channel that is specified in "traffic volume measurement object", UE shall ignore any measurements that are assigned to that transport channel. If none of the transport channels that are specified in "traffic volume measurement object" is being used, UE shall release that particular measurement and its measurement ID.

8.4.2 Measurement report



Figure 58: Measurement report, normal case

8.4.2.1 General

The purpose of the measurement reporting procedure is to transfer measurement results from the UE to UTRAN.

8.4.2.2 Initiation

In CELL_DCH state, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing measurements that are being performed in the UE.

In CELL_FACH state, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for an ongoing traffic volume measurement which is being performed in the UE.

If the Radio Bearer associated with the MEASUREMENT_IDENTITY fulfilling the reporting criteria for an ongoing traffic volume measurement is mapped on transport channel of type USCH, the UE shall initiate the "PUSCH CAPACITY REQUEST" procedure instead of transmitting a MEASUREMENT REPORT (TDD Only).

In CELL_PCH or URA_PCH state, the UE shall first perform the cell update procedure according to subclause 8.3.1, using the cause "uplink data transmission", in order to transit to CELL_FACH state and then transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are fulfilled for an ongoing traffic volume measurement which is being performed in the UE.

The reporting criteria are fulfilled if either:

- the time indicated in the stored IE "Periodical reporting" has elapsed for a given measurement that was either initiated or since the last measurement report related to this measurement was transmitted; or
- an event in stored IE "Measurement reporting criteria" was triggered. Events and triggering of reports for different measurement types are described in detail in clause 14.

The UE shall transmit the MEASUREMENT REPORT message using either AM or UM RLC according to the stored IE "measurement reporting mode" associated with the measurement identity that triggered the report.

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

- Set the IE "measurement identity" to the measurement identity which is associated with that measurement in variable MEASUREMENT_IDENTITY.

- Set the IE "measured results" to include measurements according to the IE "reporting quantity" of that measurement stored in variable MEASUREMENT_IDENTITY.
- Set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the IE "additional measurements" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report. If several additional measured results are to be included, the UE shall sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.

If the MEASUREMENT REPORT message was triggered by an event (i.e. not a periodical report), the UE shall:

- Set the measurement event results according to the event that triggered the report.

8.4.3 Assistance Data Delivery

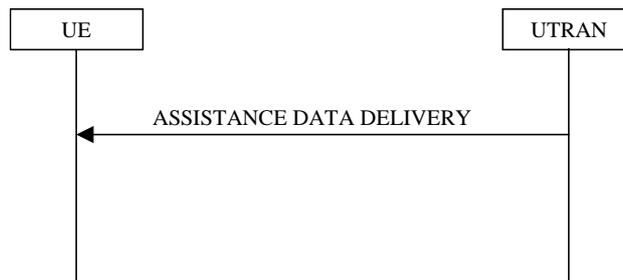


Figure 59 Assistance Data Delivery

8.4.3.1 General

The purpose of the assistance data delivery procedure is to transfer UE positioning related assistance data from the UTRAN to the UE.

8.4.3.2 Initiation

The UTRAN may deliver UP related assistance data with a ASSISTANCE DATA DELIVERY message, which is transmitted on the downlink DCCH using AM RLC if RNC is requested to do so by the CN.

8.4.3.3 Reception of ASSISTANCE DATA DELIVERY message by the UE

Upon reception of a ASSISTANCE DATA DELIVERY message the UE shall:

- if IE "UP OTDOA assistance data" is included:
 - store the OTDOA assistance data
- if IE "UP GPS assistance data" is included:
 - store the GPS assistance data

8.4.3.4 Invalid ASSISTANCE DATA DELIVERY message

If the UE receives a ASSISTANCE DATA DELIVERY message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows:

- transmit an RRC STATUS message on the uplink DCCH using AM RLC;
- include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.
- when the RRC STATUS message has been submitted to lower layers for transmission:

- resume normal operation as if the invalid ASSISTANCE DATA DELIVERY message has not been received.

8.5 General procedures

8.5.1 Selection of initial UE identity

The purpose of the IE "Initial UE identity" is to provide a unique UE identification at the establishment of an RRC connection. The type of identity shall be selected by the UE according to the following.

Upper layers shall set the variable `SELECTED_PLMN`. If the variable `SELECTED_PLMN` in the UE indicates "GSM-MAP", the UE shall choose "UE id type" in the IE "Initial UE identity" with the following priority:

1. TMSI (GSM-MAP): The TMSI (GSM-MAP) shall be chosen if available. The IE "LAI" in the IE "Initial UE identity" shall also be present when TMSI (GSM-MAP) is used, for making it unique.
2. P-TMSI (GSM-MAP): The P-TMSI (GSM-MAP) shall be chosen if available and no TMSI (GSM-MAP) is available. The IE "RAI" in the IE "Initial UE identity" shall in this case also be present when P-TMSI (GSM-MAP) is used, for making it unique.
3. IMSI (GSM-MAP): The IMSI (GSM-MAP) shall be chosen if available and no TMSI (GSM-MAP) or P-TMSI is available.
4. IMEI: The IMEI shall be chosen when none of the above three conditions are fulfilled.

When being used, the IEs "TMSI (GSM-MAP)", "P-TMSI (GSM-MAP)", "IMSI (GSM-MAP)", "LAI" and "RAI" shall be set equal to the values of the corresponding identities stored in the USIM or SIM.

If the variable `SELECTED_PLMN` in the UE indicates "ANSI-41", the UE shall choose "UE id type" in the IE "Initial UE identity" according to the procedure specified in the 3GPP2 document "3GPP2 C.P0004-A".

8.5.2 Actions when entering idle mode from connected mode

When entering idle mode from connected mode, the UE shall attempt to select a suitable cell to camp on. The UE shall perform cell selection when leaving connected mode according to 3GPP TS 25.304.

While camping on a cell, the UE shall acquire system information according to the system information procedure in subclause 8.1, perform measurements according to the measurement control procedure specified in subclause 8.4 and, if registered, be prepared to receive paging messages according to the paging procedure in subclause 8.2.

If IE "PLMN identity" within variable `SELECTED_PLMN` has the value "GSM-MAP", the UE shall delete any NAS system information received in connected mode, acquire the NAS system information in system information block type 1, and proceed according to subclause 8.6.1.2.

When entering idle mode the current `START` value for every CN domain is stored in the USIM.

8.5.3 Open loop power control upon establishment of DPCCH

This procedure is used in FDD mode only.

When establishing the first DPCCH the UE shall start the UL inner loop power control at a power level according to:

- $DPCCH_Initial_power = DPCCH_Power_offset - CPICH_RSCP$

Where

`DPCCH_Power_offset` shall have the value of IE "DPCCH Power offset" in IE "Uplink DPCH power control info"

The value for the `CPICH_RSCP` shall be measured by the UE.

8.5.4 Physical channel establishment criteria

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 successive "in sync" indications. On receiving N312 successive "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

8.5.5 Actions in "out of service area" and "in service area"

This subclause specifies the general actions the UE shall perform when it detects "out of service" or "in service" area. The specific UE behaviour when it detects "out of service" or "in service area" and periodical cell update or periodical URA update has been configured is specified in subclause 8.3.1.

8.5.5.1 Detection of "out of service" area

When a suitable cell is not found based on the description in subclause 5.2.2.1 of 3GPP TS 25.304, the UE considers it as having detected "out of service area".

8.5.5.1.1 Actions following detection of "out of service" area in URA_PCH or CELL_PCH state

If the UE detects the "out of service area" and the UE is in URA_PCH or CELL_PCH state it shall perform the following actions:

- start timer T316;
- perform processes described in subclause 7.2.2.

8.5.5.1.2 Actions following detection of "out of service" area in CELL_FACH state

If the UE detects the "out of service area" and the UE is in CELL_FACH state it shall perform the following actions:

- start timer T317 if not already running;
- perform processes described in subclause 7.2.2.

8.5.5.2 Detection of "in service" area

When a suitable cell is found based on the description in 3GPP TS 25.304, the UE considers it as having detected "in service area".

8.5.5.2.1 Actions following Re-entry into "in service area" in URA_PCH or CELL_PCH state

If the UE re-enters "in service area" before T316 expiry the UE shall perform the following actions:

- stop T316;
- perform processes described in subclause 7.2.2.

8.5.5.2.2 Actions following re-entry into "in service area" in CELL_FACH state

If the UE detects "in service area" before T317 expiry the UE shall perform the following actions:

- stop T317;
- initiate the cell update procedure using as cause "Re-entering service area" as specified in subclause 8.3.1.;
- perform processes described in subclause 7.2.2.

8.5.5.3 T316 expiry

On T316 expiry the UE shall perform the following actions:

- start timer T317;

initiate the cell update procedure using as cause "Re-entering service area" as specified in subclause 8.3.1.

8.5.5.4 T317 expiry

When the T317 expires, the UE shall:

- move to idle mode;
- release all dedicated resources;
- indicate an RRC connection failure to the non-access stratum,
- perform actions specified in subclause 8.5.2 when entering idle mode from connected mode.

8.5.6 Radio link failure criteria

In CELL_DCH State the UE shall start timer T313 after receiving N313 consecutive "out of sync" indications for the established DPCH physical channel from layer 1. The UE shall stop and reset timer T313 upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state. If T313 expires, the UE shall consider it as a "Radio link failure".

8.5.7 Open loop power control

For FDD and prior to PRACH or PCPCH transmission the UE shall:

- read the IEs "Primary CPICH DL TX power", "UL interference" and "Constant value" in System Information Block type 6 (or System Information Block type 5, if system information block type 6 is not being broadcast) and System Information Block type 7.
- measure the value for the CPICH_RSCP
- calculate the power for the first preamble as:

$$\text{Preamble_Initial_Power} = \text{Primary CPICH DL TX power} - \text{CPICH_RSCP} + \text{UL interference} + \text{Constant Value}$$

Where,

Primary CPICH DL TX power shall have the value of IE "Primary CPICH DL TX power",

UL interference shall have the value of IE "UL interference"; and

Constant Value shall have the value of IE "Constant Value".

- as long as the physical layer is configured for PRACH or PCPCH transmission, continuously recalculate the Preamble_Initial_Power when any of the broadcast parameters used in the above formula changes and resubmit to the physical layer the new calculated Preamble_Initial_Power.

For TDD the UE shall:

- if in the IE "Uplink DPCH Power Control" the "CHOICE UL OL PC info" has the value "Broadcast UL OL PC info":
 - acquire Reference Power, Constant Values from System Information Block type 5 and System Information Block type 6, and I_{BTS} for all active UL timeslots from System Information Block type 14 on the BCH;
- otherwise:

- acquire Reference Power, Constant Values and I_{BTS} for all active UL timeslots from the IE "Uplink DPCH Power Control".
- for PUSCH and PRACH power control acquire Reference Power, Constant Values and I_{BTS} for all active UL timeslots from System Information Block type 5, System Information Block type 6 and System Information Block type 14 on the BCH,

calculate the UL transmit power according to the following formula for the PRACH continuously while the physical channel is active:

- $P_{PRACH} = L_{PCCPCH} + I_{BTS} + RACH \text{ Constant value}$,
- 3dB shall be added to RACH Constant Value in the above equation for the case where RACH Spreading Factor = 8
- calculate the UL transmit power according to the following formula for the DPCH continuously while the physical channel is active:

$$P_{DPCH} = \alpha L_{PCCPCH} + (1-\alpha)L_0 + I_{BTS} + SIR_{TARGET} + DPCH \text{ Constant value}$$

- calculate the UL transmit power according to the following formula for the PUSCH continuously while the physical channel is active:

$$P_{USCH} = \alpha L_{PCCPCH} + (1-\alpha)L_0 + I_{BTS} + SIR_{TARGET} + USCH \text{ Constant value}$$

Where, for all the above equations for TDD the following apply:

- P_{PRACH} , P_{DPCH} , & P_{USCH} : Transmitter power level in dBm,
- L_{PCCPCH} : Measurement representing path loss in dB (reference transmit power "Primary CCPCH Tx Power" is broadcast on BCH in System Information Block type 5 and System Information Block type 6, or individually signalled to each UE in the IE "Uplink DPCH Power Control").
- L_0 : Long term average of path loss in dB
- I_{BTS} : Interference signal power level at cell's receiver in dBm ("UL Interference" is broadcast on BCH in System Information Block type 14 or individually signalled to each UE in the IE "Uplink DPCH Power Control" for each active uplink timeslot).
- α : α is a weighting parameter, which represents the quality of path loss measurements. α may be a function of the time delay between the uplink time slot and the most recent down link PCCPCH time slot. α is calculated at the UE.
- SIR_{TARGET} : Target SNR in dB. This value is individually signalled to UEs in IEs "UL DPCH Power Control Info" and "PUSCH Power Control Info".
- RACH Constant value: This value is broadcast on BCH and shall be read on System Information Block type 5 and System Information Block type 6.
- DPCH Constant value: This value is broadcast on BCH and shall be read on System Information Block type 5 and System Information Block type 6, or individually signalled to each UE in the IE "Uplink DPCH Power Control".
- USCH Constant Value: This value is broadcast on BCH and shall be read on System Information Block type 5 and System Information Block type 6.

8.5.8 Hyper Frame Numbers

The hyper frame numbers (HFN) are used as MSBs of both the ciphering sequence number (COUNT-C) and the integrity sequence number (COUNT-I) for the ciphering and integrity protection algorithms, respectively. For non-transparent mode radio bearers there is an uplink and downlink COUNT-C per radio bearer and an uplink and downlink COUNT-I per signalling radio bearer. For all transparent mode radio bearers there is an uplink and a downlink COUNT-C and an uplink and a downlink COUNT-I. COUNT-C and COUNT-I are defined in 3GPP TS 33.102.

The following hyper frame numbers are defined:

MAC-d HFN	24 bits	MSB of COUNT-C for data sent over RLC TM
RLC UM HFN	25 bits	MSB of COUNT-C for data sent over RLC UM
RLC AM HFN	20 bits	MSB of COUNT-C for data sent over RLC AM
RRC HFN	28 bits	MSB of COUNT-I

The START value is used to initialise the 20 most significant bits of all the hyper frame numbers and the remaining bits of the hyper frame numbers are set equal to zero.

8.5.9 START

In connected mode, the START value for CN domain 'X' is calculated as

$$\text{START}_X = \text{MSB}_{20} (\text{MAX} \{ \text{COUNT-C}, \text{COUNT-I} \mid \text{all logical channels protected with CK}_X \text{ and IK}_X \}) + 1.$$

The START_X value is used to initialise the 20 most significant bits of all hyper frame numbers in CN domain 'X'.

When entering idle mode the current START value for every CN domain is stored in the USIM.

8.5.10 Integrity protection

Integrity protection shall be performed on all RRC messages, with the following exceptions:

HANDOVER TO UTRAN COMPLETE
 PAGING TYPE 1
 PUSCH CAPACITY REQUEST
 PHYSICAL SHARED CHANNEL ALLOCATION
 RRC CONNECTION REQUEST
 RRC CONNECTION SETUP
 RRC CONNECTION SETUP COMPLETE
 RRC CONNECTION REJECT
 RRC CONNECTION RELEASE (CCCH only)
 SYSTEM INFORMATION
 SYSTEM INFORMATION CHANGE INDICATION
 TRANSPORT FORMAT COMBINATION CONTROL

NOTE: MEASUREMENT REPORT needs to be studied when used on UM as in some cases there could be synchronization problems with the RRC SN.

For each signalling radio bearer, the UE shall use two RRC hyper frame numbers,

- "Uplink RRC HFN";
- "Downlink RRC HFN".

and two message sequence numbers,

- "Uplink RRC Message sequence number";
- "Downlink RRC Message sequence number".

The above information is stored in the variable INTEGRITY_PROTECTION_INFO per signalling radio bearer (RB 0-4).

Upon the first activation of integrity protection for an RRC connection, UE and UTRAN initialise the "Uplink RRC Message sequence number" and "Downlink RRC Message sequence number" for all signalling radio bearers to zero. The UE and UTRAN apply the sequence numbers for the RRC message activating integrity protection thereafter for all subsequent messages when integrity protection is activated. The RRC message sequence number (RRC SN) is incremented for every integrity protected RRC message. If the same RRC message is sent repeatedly (e.g. RRC CONNECTION RELEASE, RRC CONNECTION RELEASE COMPLETE) the corresponding RRC SN is not incremented.

8.5.10.1 Integrity protection in downlink

If the UE receives an RRC message on signalling radio bearer with RB identity n, the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is present the UE shall:

- check the value of the IE "RRC message sequence number" included in the IE "Integrity check info". If the RRC message sequence number is lower than the "Downlink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO, the UE shall increment "Downlink RRC HFN" for RB#n in the variable INTEGRITY_PROTECTION_INFO with one. If the RRC message sequence number is equal to the "Downlink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO, the message shall be discarded.
- calculate an expected message authentication code in accordance with subclause 8.5.10.3.
- compare the expected message authentication code with the value of the received IE "message authentication code" contained in the IE 'Integrity check info'.
 - If the expected message authentication code and the received message authentication code are the same, the integrity check is successful.
 - If the calculated expected message authentication code and the received message authentication code differ:
 - if the IE "RRC message sequence number" included in the IE "Integrity check info" is lower than the "Downlink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO (in this case the "Downlink RRC HFN" for RB#n in the variable INTEGRITY_PROTECTION_INFO was incremented by one, as stated above):
 - decrement "Downlink RRC HFN" for RB#n in the variable INTEGRITY_PROTECTION_INFO by one.
 - discard the message.

If the UE receives an RRC message on signalling radio bearer with identity n, the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is not present the UE shall discard the message.

8.5.10.2 Integrity protection in uplink

Upon transmitting an RRC message using the signalling radio bearer with radio bearer identity n, and the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" the UE shall:

- increment "Uplink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO with 1. When "Uplink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO becomes 0, the UE shall increment "Uplink RRC HFN" for RB#n in the variable INTEGRITY_PROTECTION_INFO with 1
- calculate the message authentication code in accordance with subclause 8.5.11.3
- replace the "Message authentication code" in the IE "Integrity check info" in the message with the calculated message authentication code.
- replace the "RRC Message sequence number" in the IE "Integrity check info" in the message with contents set to the new value of the "Uplink RRC Message sequence number" for RB#n in the variable INTEGRITY_PROTECTION_INFO

8.5.10.3 Calculation of message authentication code

The UE shall calculate the message authentication code in accordance with 3GPP TS 33.102. The input parameter MESSAGE (3GPP TS 33.102) for the integrity algorithm shall be constructed by:

- setting the "Message authentication code" in the IE "Integrity check info" in the message to the signalling radio bearer identity
- setting the "RRC Message sequence number" in the IE "Integrity check info" in the message to zero
- encoding the message
- appending RRC padding (if any) as a bitstring to the encoded bitstring as the least significant bits

8.5.11 FACH measurement occasion calculation

When in CELL_FACH state the UE shall perform inter-frequency and inter system measurements during the frame(s) with the SFN value fulfilling the following equation:

$$\text{SFN div } N = \text{C_RNTI mod } M_REP + n * M_REP$$

where

- N is the TTI (in number of 10ms frames) of the FACH having the largest TTI on the SCCPCH monitored by UE
- C_RNTI is the C-RNTI value of the UE
- M_REP is the Measurement Occasion cycle length. According to the equation above, a FACH Measurement Occasion of N frames will be repeated every $N * M_REP$ frame, and $M_REP = 2^k$.

where,

- k is the FACH Measurement occasion cycle length coefficient.
The value of the FACH Measurement occasion cycle length coefficient is read in system information in "System Information Block type 11" or "System Information Block type 12" in the IE "FACH measurement occasion info".
- $n = 0, 1, 2, \dots$ as long as SFN is below its maximum value

The UE is allowed to measure on other occasions in case the UE moves "out of service" area or in case it can simultaneously perform the ordered measurements.

8.5.12 Establishment of Access Service Classes

The PRACH resources (i.e. access slots and preamble signatures for FDD), timeslot (with specific frame allocation and channelisation code for TDD) may be divided between different Access Service Classes in order to provide different priorities of RACH usage. It is possible for more than one ASC or for all ASCs to be assigned to the same access slot/signature space in FDD or frame allocation in TDD.

Access Service Classes shall be numbered in the range $0 \leq i \leq \text{NumASC} \leq 7$ (i.e. the maximum number of ASCs is "NumASC+1" = 8). An ASC is defined by an identifier, i , that defines a certain partition of the PRACH resources and an associated persistence value P_i . A set of ASC parameters consists of "NumASC+1" such parameters (i, P_i), $i = 0, \dots, \text{NumASC}$.

PRACH partitions shall be established using the information element "PRACH partition". The persistence values P_i to be associated with each ASC shall be derived from the dynamic persistence level $N = 1, \dots, 8$ which is broadcast in SIB 7, and the persistence scaling factors s_i , broadcast in System Information Block Type 5 and possibly also in System Information Block Type 6, as follows:

$$P(N) = 2^{-(N-1)}$$

ASC # i	0	1	2	3	4	5	6	7
P_i	1	$P(N)$	$s_2 P(N)$	$s_3 P(N)$	$s_4 P(N)$	$s_5 P(N)$	$s_6 P(N)$	$s_7 P(N)$

Scaling factors s_i are provided optionally for $i = 2, \dots, \text{NumASC}$, where $\text{NumASC}+1$ is the number of ASCs as defined by PRACH partitioning. If no scaling factors are broadcast, default value 1 shall be used if $\text{NumASC} \geq 2$.

If $k \geq 1$ scaling factors are broadcast and $\text{NumASC} \geq k+2$ then the last scaling factor s_{k+1} shall be used as default for the ASCs where $i > k+1$.

The set of ASC parameters is provided to MAC with the CMAC-Config-REQ primitive (see TS 25.321), the PRACH partitioning is provided to PHY using the CPHY-TrCH-Config-REQ primitive (see TS 25.302).

The ASC enumeration shall be such that it corresponds to the order of priority (ASC 0 = highest priority, ASC 7 = lowest priority). ASC 0 shall be used in case of Emergency Call or for reasons with equivalent priority.

At radio bearer setup/reconfiguration each involved logical channel is assigned a MAC Logical channel Priority (MLP) in the range 1, ..., 8. When the MAC sublayer is configured for RACH transmission in the UE, these MLP levels shall be employed for ASC selection on MAC.

8.5.13 Mapping of Access Classes to Access Service Classes

Access Classes shall only be applied at initial access, i.e. when sending an RRC CONNECTION REQUEST message. A mapping between Access Class (AC) and Access Service Class (ASC) shall be indicated by the information element "AC-to-ASC mapping" in System Information Block type 5. The correspondence between AC and ASC shall be indicated as follows.

AC	0 - 9	10	11	12	13	14	15
ASC	1 st IE	2 nd IE	3 rd IE	4 th IE	5 th IE	6 th IE	7 th IE

In the table, "nth IE" designates an ASC number i in the range 0 - 7 to AC.

For the random access, the parameters implied by the respective ASC shall be employed. In case the UE is member of several ACs it shall select the ASC for the highest AC number. In connected mode, AC shall not be applied.

8.5.14 PLMN Type Selection

The UE shall perform PLMN selection and reselection as stated in 3GPP TS 25.304 and store the identifier of the chosen PLMN in the variable SELECTED_PLMN as follows:

- If a GSM-MAP type of PLMN is selected, the UE shall set the "PLMN Type" in the variable SELECTED_PLMN to "GSM-MAP" and store the PLMN identity of that PLMN.
- If an ANSI-41 type of PLMN is selected, the UE shall set the "PLMN Type" in the variable SELECTED_PLMN to "ANSI-41" and store the System identification (SID) of that PLMN.

8.5.15 CFN calculation

8.5.15.1 Initialisation in CELL_DCH state on transiting from CELL_FACH state

When the UE changes from CELL_FACH state to CELL_DCH state CFN shall be calculated according to the following formula:

- for FDD:

$$\text{CFN} = ((\text{SFN} * 38400 - \text{DOFF} * 512) \text{ div } 38400) \text{ mod } 256$$

- for TDD:

$$\text{CFN} = (\text{SFN} - \text{DOFF}) \text{ mod } 256$$

8.5.15.2 Initialisation in CELL_DCH state at hard handover

When the UE is in CELL_DCH state and receives any of the messages causing the UE to perform a hard handover, the UE shall check the IE "Timing indication" in that message and:

- if IE "Timing indication" has the value "initialise" (i.e. timing re-initialised hard handover):
 - if IE "CFN-targetSFN frame offset is not included:
 - read SFN on target cell and the CFN shall be calculated according to the following formula:
 - for FDD:
 - $CFN = ((SFN * 38400 - DOFF * 512) \text{ div } 38400) \text{ mod } 256;$
 - for TDD:
 - $CFN = (SFN - DOFF) \text{ mod } 256;$
 - if IE "CFN-targetSFN frame offset" is included in the message causing the UE to perform a timing re-initialised hard handover, CFN shall be calculated according to the following formula:
 - for FDD:
 - $CFN_{new} = (CFN_{old} * 38400 + COFF * 38400 - DOFF * 512) \text{ div } 38400) \text{ mod } 256$
 - for TDD:
 - $CFN_{new} = (CFN_{old} + COFF - DOFF) \text{ mod } 256$
 - where COFF is the value of "CFN-targetSFN frame offset".

NOTE: $CFN\text{-targetSFN frame offset} = (TargetSFN - CFN) \text{ mod } 256$

- if IE "Timing indication" has the value "maintain" (i.e. timing-maintained hard handover), the UE shall keep CFN with no change due to the hard handover, and only increase CFN (mod 256) by 1 every frame.

8.5.15.3 Initialisation for CELL_FACH

When the UE performs cell selection, re-selection or changes to CELL_FACH state the UE shall set CFN for all common or shared channels according to:

- $CFN = SFN \text{ mod } 256$

After the initialisation, the CFN in the UE is increased (mod 256) by 1 every frame.

8.5.15.4 Initialisation after intersystem handover to UTRAN

Initialisation for CELL_DCH state after intersystem handover:

- read SFN on target cell and the CFN shall be calculated according to the following formula:
 - for FDD:
 - $CFN = ((SFN * 38400 - DOFF * 512) \text{ div } 38400) \text{ mod } 256$
 - for TDD:
 - $CFN = (SFN - DOFF) \text{ mod } 256$

8.6 Generic actions on receipt and absence of an information element

8.6.1 CN information elements

8.6.1.1 CN domain specific DRX cycle length coefficient

The UE updates CN domain specific DRX cycle length coefficient as specified in [4]. The UE shall use it to calculate the CN domain specific DRX cycle length, according to the following:

- set k to the value of the IE "CN domain specific DRX cycle length coefficient".
- store the result of $2^k * \text{PBP}$, where PBP is the Paging Block Periodicity, as the CN domain specific DRX cycle length for the CN domain indicated by the IE "CN domain identity". For FDD PBP=1.

The UE shall determine its idle mode paging occasions and PICH monitoring occasions for that CN domain, according to 3GPP TS 25.304, based on the stored CN domain specific DRX cycle length, when using DRX in idle mode.

8.6.1.2 CN information info

If the IE "CN information info" is present in a message, the UE shall:

- if present, forward the content of the IE "PLMN identity" to upper layer entities of all CN domains;
- if present, forward the content of the IE "CN common GSM-MAP NAS system information" to upper layer entities of all CN domains;
- if the IE "CN domain related information" is present, forward the content of the IE "CN domain specific GSM-MAP NAS system info" to the non-access stratum entity of the UE indicated by the IE "CN domain identity".

8.6.1.3 Signalling connection release indication

If the IE "Signalling Connection release indication" is present in a message, the UE shall release all the radio bearers belonging to the indicated domain, and simultaneously, indicate release of the signalling connection to the upper layer entity of the indicated domain.

8.6.2 UTRAN mobility information elements

8.6.2.1 URA identity

The UE shall:

- if the IE "URA identity" is included in a received message:
 - if the IE "RRC State Indicator" is included and set to "URA_PCH":
 - store this URA identity in the variable URA_IDENTITY;
 - after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read system information block type 2 in the selected cell;
 - if the stored URA identity in the variable URA_IDENTITY is not included in the list of URA identities in System Information Block type 2 in the selected cell, a confirmation error of URA identity list has occurred:
 - if no URA update procedure is ongoing:
 - initiate a URA update procedure after entering URA_PCH state; see subclause 8.3.1.2.
 - if a URA update procedure is ongoing:

- take actions as specified in subclause 8.3.1.10.
- if the IE "URA identity" is not included in a received message:
 - the IE "RRC State Indicator" is included and set to "URA_PCH":
 - after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read System Information Block type 2 in the selected cell;
 - if System Information Block type 2 in the selected cell contains a single URA identity:
 - store this URA identity in the variable URA_IDENTITY;
 - if System Information Block type 2 of the selected cell contains more than one URA identity, a confirmation error of URA identity list has occurred:
 - if no URA update procedure is ongoing:
 - initiate a URA update procedure after entering URA_PCH state, see subclause 8.3.1.2.
 - if a URA update procedure is ongoing:
 - take actions as specified in subclause 8.3.1.10.

8.6.3 UE information elements

8.6.3.1 Activation time

If the IE "Activation time" is present, the UE shall:

- start using the new configuration present in the same message as this IE at the indicated time;
- if the activation time is not at the TTI boundary of one or more of the affected transport formats:
 - start using the new configuration at the next TTI boundary common to all the affected transport formats.

NOTE: The new configuration is typically a dedicated physical channel present in the same message as the IE "Activation time". The Activation time corresponds to a CFN related to the old configuration.

8.6.3.2 UTRAN DRX Cycle length coefficient

If the IE "UTRAN DRX cycle length coefficient" is present, the UE shall use it to calculate the UTRAN DRX cycle length, according to the following:

- set k to the value of the IE "UTRAN DRX cycle length coefficient";
- store the result of $2^k * \text{PBP}$, where PBP is the Paging Block Periodicity, as the DRX cycle length.

The UE shall determine its connected mode paging occasions and PICH monitoring occasions in the same way as for idle mode, according to 3GPP TS 25.304.

The DRX cycle length to use in connected mode is the shorter of the following two parameters:

- UTRAN DRX cycle length;
- CN domain specific DRX cycle length stored for any CN domain, when using Discontinuous Reception (DRX) in CELL_PCH and URA_PCH state.

The CN domain specific DRX cycle length stored for any CN domain is only used in Cell_PCH state and URA_PCH state if the UE is registered to that CN domain and no signalling connection exists to that CN domain.

8.6.3.3 Generic state transition rules depending on received information elements

The IE "RRC State Indicator" indicates the state the UE shall enter. The UE shall, if the IE "RRC State Indicator" in the received message has the value:

- "CELL_FACH":
 - enter CELL_FACH state as dictated by the procedure governing the message received.
- "CELL_DCH":
 - if neither DPCH is assigned in the message nor is the UE in CELL_DCH
 - set the variable INVALID_CONFIGURATION to TRUE;
 - else
 - enter CELL_DCH state as dictated by the procedure governing the message received.
- "CELL_PCH":
 - if the received message is RRC CONNECTION SETUP and IE "RRC State Indicator" is set to CELL_PCH
 - transmit a new RRC CONNECTION SETUP REQUEST message as per subclause 8.1.3.8.
 - else
 - enter CELL_PCH state as dictated by the procedure governing the message received.
- "URA_PCH":
 - if the received message is RRC CONNECTION SETUP and IE "RRC State Indicator" is set to URA_PCH
 - transmit a new RRC CONNECTION SETUP REQUEST message as per subclause 8.1.3.8.
 - else
 - enter URA_PCH state as dictated by the procedure governing the message received.

8.6.3.4 Ciphering mode info

The IE "Ciphering mode info" defines the new ciphering configuration. If the IE "Ciphering mode info" is present, the UE shall check the IE "Ciphering mode command" as part of the IE "Ciphering mode info", and perform the following:

- if IE "Ciphering mode command" has the value "start/restart", the UE shall:
 - start or restart ciphering, using the ciphering algorithm (UEA [3GPP TS 33.102]) indicated by the IE "Ciphering algorithm" as part of the new ciphering configuration. The new ciphering configuration shall be applied as specified below.
 - set the variable CIPHERING_STATUS to "Started".
- if the IE "Ciphering mode command" has the value "stop", the UE shall
 - stop ciphering. The new ciphering configuration shall be applied as specified below
 - set the variable CIPHERING_STATUS to "Not started".
- in case the IE "Ciphering mode command" has the value "start/restart" or "stop", the new ciphering configuration shall be applied as follows:
 - if the IE "Ciphering activation time for DPCH" is present in the IE "Ciphering mode info", the UE shall apply the new configuration at that time for radio bearers using RLC-TM. If the IE "Ciphering mode info" is present in a message reconfiguring RB, transport channel or physical channel, the indicated time in IE "Activation time for DPCH" corresponds to a CFN after that reconfiguration.
 - if the IE "Radio bearer downlink ciphering activation time info" is present in the IE "Ciphering mode info", the UE shall apply the following procedure for each radio bearer using RLC-AM and RLC-UM indicated by the IE "RB identity":
 - suspend data transmission on the radio bearer

- store the "RLC send sequence number" for that radio bearer in the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO, at which time the new ciphering configuration shall be applied.
- when the data transmission of that radio bearer is resumed, the UE shall switch to the new ciphering configuration according to the following:
 - use the old ciphering configuration for the transmitted and received RLC PDUs with RLC sequence number smaller than the corresponding RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN respectively in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN.
 - use the new ciphering configuration for the transmitted and received RLC PDUs with RLC sequence number greater than or equal to the corresponding RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN respectively in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN
 - for a radio bearer using RLC-AM, when the RLC sequence number indicated in the IE "Radio bearer downlink ciphering activation time info" is not included in the RLC transmission window, the UE may release the old ciphering configuration for that radio bearer.
 - if an RLC reset or re-establishment occurs before the activation time for the new ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration immediately after the RLC reset or RLC re-establishment.

If the IE "Ciphering mode info" is not present, the UE shall not change the ciphering configuration.

8.6.3.5 Integrity protection mode info

The IE "Integrity protection mode info" defines the new integrity protection configuration. If the IE "Integrity protection mode info" is present, the UE shall check the IE "Integrity protection mode command" as part of the IE "Integrity protection mode info", and perform the following:

- if IE "Integrity protection mode command" has the value "start" and the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Not started", the UE shall:
 - if the "Historical status" in the variable INTEGRITY_PROTECTION_INFO has the value "Never been active":
 - initialise the "Uplink RRC Message sequence number" and "Downlink RRC Message sequence number" for all signalling radio bearers to zero;
 - set the "Historical status" in the variable INTEGRITY_PROTECTION_INFO to the value "Has been active";
 - set the "Status" in the variable INTEGRITY_PROTECTION_INFO to the value "Started";
 - perform integrity protection on the received message as described in subclause 8.5.10.1;
 - use the algorithm (UIA [3GPP TS 33.102]) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";
 - use the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH [3GPP TS 33.102].
- if IE "Integrity protection mode command" has the value "modified" and the "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started", the UE shall:
 - use the new integrity protection configuration in the downlink at the RRC sequence number indicated by the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info";
 - perform integrity protection on the received message as described in subclause 8.5.10.1;
 - if present, use the algorithm indicated by the IE "Integrity protection algorithm" (UIA [TS 33.102]);

- set the values of the IE "Uplink integrity protection activation info";

If the IE "Integrity protection mode info" is not present, the UE shall not change the integrity protection configuration.

8.6.3.6 Configuration of CTCH occasions

The CTCH, carrying CBS data is mapped onto only one S-CCPCH. If more than one CTCH is defined, the first CTCH that is configured in the list of S-CCPCHs is the one that is used for CBS data.

The CTCH occasions are identified by the first radio frame of the TTI which can contain CTCH data. The CTCH occasions are fixed on the system frame number cycle 0 .. 4095 (i.e. no modulo calculation) and thus repeated cyclically.

The CTCH occasions are determined by a set of parameters.

M_{TTI} : number of radio frames within the TTI of the FACH used for CTCH

N: period of CTCH allocation on S-CCPCH, integer number of radio frames,
 $M_{TTI} \leq N \leq \text{MaxSFN} - K$, where N is a multiple of M_{TTI} (see 3GPP TS 25.212 and 3GPP TS 25.222).

MaxSFN: maximum system frame number = 4095 (see 3GPP TS 25.402).

K: CBS frame offset, integer number of radio frames $0 \leq K \leq N-1$ where K is a multiple of M_{TTI} .

The CTCH occasions are calculated as follows:

$\text{SFN} = (K + mN)$, $m = 0, 1, \dots, M$, with M chosen that $K + MN \leq \text{MaxSFN}$.

The parameters N and K are broadcast as system information.

8.6.3.7 UL Timing Advance

If the IE "UL Timing Advance Control" is present, the UE shall:

- if IE "Uplink Timing Advance Control" has the value "disabled":
 - reset timing advance to 0;
 - disable calculated timing advance following handover;
 - in case of handover start uplink transmissions in the target cell without applying timing advance;
- if IE "Uplink Timing Advance Control" has the value "enabled":
 - evaluate and apply the timing advance value for uplink transmission as indicated in IE "Uplink Timing Advance" at the CFN indicated in the IE "Activation Time";
 - enable UE autonomous timing advance calculation for handover;
 - update uplink timing advance as indicated in IE "Uplink Timing Advance" in advance of the UE autonomous timing advance calculation

8.6.3.8 Integrity check info

If the IE "Integrity check info" is present the UE shall act as described in subclause 8.5.10.1.

8.6.3.9 New C-RNTI

If the IE "New C-RNTI" is included, the UE shall:

- store the value in the variable C_RNTI, replacing any old stored value;
- use that C-RNTI when using common transport channels of type RACH, FACH and CPCH in the current cell.

8.6.3.10 New U-RNTI

If the IE "New U-RNTI" is included in a received message, the UE shall:

- store the value in the variable U_RNTI, replacing any old stored value.

8.6.3.11 RRC transaction identifier

If the IE "RRC transaction identifier" is included in a received message, the UE shall:

- if the IE "Message Type" of the received message is not present in the table "Accepted transactions" in the variable TRANSACTIONS; and
- if the received message does not contain a protocol error according to clause 9 and the variable PROTOCOL_ERROR_REJECT is set to FALSE:
 - accept the transaction; and
 - store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Accepted transactions" in the variable TRANSACTIONS;
- else
 - if the IE "Message Type" of the received message is present in the table "Accepted transactions" in the variable TRANSACTIONS; or
 - if the received message contains a protocol error according to clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:
 - if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - ignore the transaction; and
 - resume normal operation as the message was not received and end the procedure;
 - else:
 - if the IE "RRC transaction identifier" of the received message is different from the "RRC transaction identifier" stored for the "Message Type" in the table "Accepted transactions" in the variable TRANSACTIONS:
 - reject the transaction; and
 - if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:
 - store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

8.6.4 Radio bearer information elements

8.6.4.1 Signalling RB information to setup list

If the IE "Signalling RB information to setup list" is included the UE shall:

- for each occurrence of the IE "Signalling RB information to setup":
 - use the value of the IE "RB identity" as the identity of the signalling radio bearer to setup;
 - perform the actions for the IE "RLC info" as specified in subclause 8.6.4.9, applied for that signalling radio bearer;

- perform the actions for the IE "RB mapping info" as specified in subclause 8.6.4.8, applied for that signalling radio bearer.
- apply a default value of the IE "RB identity" equal to 1 for the first IE "Signalling RB information to setup"; and
- increase the default value by 1 for each occurrence.

8.6.4.2 RAB information for setup

If the IE "RAB information for setup" is included, the procedure is used to establish radio bearers belonging to a radio access bearer, and the UE shall:

- if the radio access bearer identified with the IE "RAB info" does not exist in the variable ESTABLISHED_RABS:
 - create a new entry for the radio access bearer in the variable ESTABLISHED_RABS;
 - store the content of the IE "RAB info" in the entry for the radio access bearer in the variable ESTABLISHED_RABS;
 - indicate the establishment of the radio access bearer to the upper layer entity using the IE "CN domain identity", forwarding the content of the IE "RAB identity";
- for each radio bearer in the IE "RB information to setup":
 - perform the actions specified in subclause 8.6.4.3;
 - create a new RAB subflow for the radio access bearer;
 - number the RAB subflow in ascending order, assigning the smallest number to the RAB subflow corresponding to the first radio bearer in the list;
 - store information about the new radio bearer in the entry for the radio access bearer identified by "RAB info" in the variable ESTABLISHED_RABS;

8.6.4.3 RB information to setup

If the IE "RB information to setup" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity":

- perform the actions for the IE "PDCP info", if present, according to subclause 8.6.4.10, applied for the radio bearer;
- perform the actions for the IE "RLC info", according to subclause 8.6.4.9, applied for the radio bearer;
- perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer;
- if the variable CIPHERING_STATUS is set to "Started"; and
 - if the IE "Uplink RLC mode" or the IE "Downlink RLC mode" in the IE "RLC info" is set to "AM RLC" or "UM RLC":
 - calculate the START value according to subclause 8.5.9;
 - store the calculated START value in the variable START_VALUE_TO_TRANSMIT;
 - initialise ciphering on the radio bearer using the calculated START value.

8.6.4.4 RB information to be affected

If the IE "RB information to be affected" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity":

- perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer.

8.6.4.5 RB information to reconfigure

If the IE "RB information to reconfigure" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity":

- perform the actions for the IE "PDCP info", if present, according to subclause 8.6.4.10, applied for the radio bearer;
- perform the actions for the IE "RLC info", according to subclause 8.6.4.9, applied for the radio bearer;
- perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer;
- if the IE "PDCP SN info" is included:
 - perform the actions as specified in 8.6.4.11 applied for the radio bearer;
- if the IE "RB stop/continue" is included; and
 - if the "RB identity" has a value greater than 2; and
 - if the value of the IE "RB stop/continue" is "stop":
 - configure the RLC entity for the radio bearer to stop;
 - set the IE "RB started" in the variable ESTABLISHED_RABS to "stopped" for that radio bearer;
 - if the value of the IE "RB stop/continue" is "continue":
 - configure the RLC entity for the radio bearer to continue;
 - set the IE "RB started" in the variable ESTABLISHED_RABS to "started" for that radio bearer;
- if the IE "RB identity" is set to a value less than 2:
 - set the variable INVALID_CONFIGURATION to TRUE.

8.6.4.6 RB information to release

If the IE "RB information to release" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity":

- release the entities in lower layers dedicated for that radio bearer;
- if the information about the radio bearer is stored in the variable ESTABLISHED_RABS:
 - delete the information about the radio bearer from the variable ESTABLISHED_RABS;
- when all radio bearers belonging to the same radio access bearer have been released:
 - indicate release of the radio access bearer to the upper layer entity using the "CN domain identity" together with the "RAB identity" stored in the variable ESTABLISHED_RABS;
 - delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

8.6.4.7 RB with PDCP information

If the IE "RB with PDCP information" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity":

- for the IE "PDCP SN info" perform the actions as specified in subclause 8.6.4.11.

8.6.4.8 RB mapping info

If the IE "RB mapping info" is included, the UE shall, for each transport channel in each multiplexing option of that RB:

- if a "Transport format set" for that transport channel is included in the same message, and the value (index) of any IE "RLC size index" in the IE "RLC size index list" does not correspond to an "RLC size" in the IE transport format set of that transport channel given in the message; or
- if a "Transport format set" for that transport channel is not included in the same message, and the value (index) of any IE "RLC size index" in the IE "RLC size index list" does not correspond to an "RLC size" in the stored transport format set of that transport channel:
 - keep the previously stored multiplexing options for that RB;
 - set the variable INVALID_CONFIGURATION to TRUE;
- else:
 - delete all previously stored multiplexing options for that radio bearer;
 - store each new multiplexing option for that radio bearer;
 - use the multiplexing options applicable for the transport channels to be used;
 - configure MAC multiplexing if that is needed in order to use those transport channels;
 - use "MAC logical channel priority" when selecting TFC in MAC.

In case IE "RB mapping info" includes IE "Downlink RLC logical channel info" but IE "Number of downlink RLC logical channels" is absent, the parameter values are exactly the same as for the corresponding UL logical channels. In case two multiplexing options are specified for the UL, the first options shall be used as default for the DL. As regards the IE "Channel type", the following rule should be applied to derive the DL channel type from the UL channel included in the IE:

Channel used in UL	DL channel type implied by "same as"
DCH	DCH
RACH	FACH
CPCH	DSCH
USCH	DSCH

8.6.4.9 RLC Info

If the IE "RLC Info" is included, the UE shall:

- Configure the transmitting and receiving RLC entities in the UE for that radio bearer accordingly.

8.6.4.10 PDCP Info

If IE "PDCP info" is included, the UE shall:

- Configure the PDCP entity for that radio bearer accordingly.

8.6.4.11 PDCP SN Info

If the IE "PDCP SN Info" is included, the UE shall:

- transfer the sequence number to the PDCP entity for the radio bearer;
- configure the RLC entity for the radio bearer to stop;
- include the current PDCP receive sequence number and the radio bearer identity for the radio bearer in the variable PDCP_SN_INFO.

8.6.4.12 NAS Synchronisation Indicator

If the IE "NAS Synchronisation Indicator" is present in a message, the UE shall forward the content to the non-access stratum entity for the associated RAB at the CFN indicated in the IE "Activation time" in order to synchronise actions in NAS and AS.

8.6.5 Transport channel information elements

8.6.5.1 Transport Format Set

If the IE "transport channel identity" and the IE "Transport format set" is included, the UE shall, for the indicated transport channel:

- if the value (index) of any IE "RB identity" (and "Logical Channel" for RBs using two UL logical channels) in the IE "Logical channel list" does not correspond to a logical channel indicated to be mapped onto this transport channel in any RB multiplexing option (either included in the same message or previously stored and not changed by this message):
 - keep the transport format set for that that transport channel;
 - set the variable INVALID_CONFIGURATION to TRUE;
- else:
 - store the transport format set for that transport channel.
 - if the IE "Transport format Set" has the choice "Transport channel type" set to "Dedicated transport channel":
 - calculate the transport block size for all transport formats in the TFS using the following

$$\text{TB size} = \text{RLC PDU size} + \text{MAC header size},$$

where:

- MAC header size is calculated according to 3GPP TS 25.321 if MAC multiplexing is used. Otherwise it is 0 bits.

If neither the IE "transport channel identity" nor the IE "Transport format set" is included, the UE shall:

- consider the stored transport format set as valid information.

The UTRAN should not assign transport formats with different "RLC Size" to any logical channel transferring data using AM RLC. If an AM RLC entity is mapped to two logical channels, UTRAN may configure more than one "RLC Size" for the logical channel transferring control PDUs only.

8.6.5.2 Transport format combination set

If the IE "Transport format combination set" is included, the UE shall for that direction (uplink or downlink):

- remove a previously stored transport format combination set if this exists;
- clear the IE "Duration" in the variable TFC_SUBSET;
- clear the IE "Default TFC subset" in the variable TFC_SUBSET;
- set the IE "Current TFC subset" in the variable TFC_SUBSET to the value indicating "full transport format combination set";
- remove any previous restriction of the transport format combination set;
- store the new transport format combination set present in the IE "Transport format combination set";
- start to respect those transport format combinations.

If the IE "Transport format combination set" is not included and if there is no addition/removal/replacement of transport channels, the UE shall for that direction (uplink or downlink):

- consider a previously stored transport format combination set if this exists as valid information.

For downlink CCTrCHs if no TFCS is stored in the UE the UE shall consider all possible transport format combinations and calculate the possible TFCI values according to the IE transport format combination set.

For downlink CCTrCHs if a TFCS is stored in the UE and

- if the IE "Transport format combination set" is not included and transport channels are deleted in the message, the UE shall:
 - remove the affected transport format combinations from the transport format combination set, recalculate the TFCI values and start to respect those transport format combinations
- if the IE "Transport format combination set" is not included and transport channels are added in the message, the UE shall:
 - consider all possible new combinations to be valid and recalculate the TFCI values and start to respect those transport format combinations. In TDD the new transport format combinations are considered to belong to the TFCS with the ID 1 of DCH type.
- if the IE "Transport format combination set" is not included and transport channels are replaced the UE shall:
 - consider all possible transport format combinations to be valid and calculate the TFCI values accordingly.

If the IE "Transport format combination set" is not included, the TFCI ordering shall correspond to the CTFC ordering.

8.6.5.3 Transport format combination subset

If the IE "Transport format combination subset" ("TFC subset") is included, the UE shall:

- if the IE "Minimum allowed Transport format combination index" is included; and
 - if the value of the IE "Minimum allowed Transport format combination index" is outside the range of transport format combinations in the current transport format combination set:
 - consider the TFC subset to be incompatible with the current transport format combination set;
- if the IE "Allowed transport format combination list" is included; and
 - if the value of any of the IEs "Allowed transport format combination" included in the IE "Allowed transport format combination list" is outside the range of transport format combinations in the current transport format combination set:
 - consider the TFC subset to be incompatible with the current transport format combination set;

if the IE "Non-allowed transport format combination list" is included; and

- if the value of any of the IEs "Non-allowed transport format combination" included in the IE "Non-allowed transport format combination list" is outside the range of transport format combinations in the current transport format combination set:
 - consider the TFC subset to be incompatible with the current transport format combination set;
- if the IE "Restricted TrCH information" is included:
 - if the value of any of the IEs "Restricted UL TrCH identity" included in the IE "Restricted TrCH information" does not correspond to any of the transport channels for which the current transport format combination set is valid:
 - consider the TFC subset to be incompatible with the current transport format combination set;
- if the IE "Allowed TFIs" is included; and

- if the value of any of the IEs "Allowed TFI" included in the IE "Allowed TFIs" does not correspond to a transport format for that transport channel within the current transport format combination set:
 - consider the TFC subset to be incompatible with the current transport format combination set;
- if the UE considers the TFC subset to be incompatible with the current Transport format combination set according to the above:
 - keep any previous restriction of the transport format combination set;
 - set the variable INVALID_CONFIGURATION to TRUE;
- if the UE does not consider the TFC subset to be incompatible with the current Transport format combination set according to the above:
 - restrict the transport format combination set in the uplink to the value of the IE "Transport format combination subset" (in case of TDD for the uplink CCTrCH specified by the IE "TFCS Id");
 - set the value of the IE "Default TFC subset" (in case of TDD for the uplink CCTrCH specified by the IE "TFCS Id") in the variable TFC_SUBSET to the value of the IE "Current TFC subset" in the variable TFC_SUBSET;
 - set the IE "Current TFC subset" (in case of TDD for the uplink CCTrCH specified by the IE "TFCS Id") in the variable TFC_SUBSET to the value of the IE "Transport format combination subset";
 - clear the IE "Duration" in the variable TFC_SUBSET;
 - if the transport format combination subset indicates the "full transport format combination set":
 - any restriction on transport format combination set is released and the UE may use the full transport format combination set.

8.6.5.4 DCH quality target

At physical channel establishment, the UE sets an initial downlink target SIR value based on the received IEs "DCH quality target". The IE "DCH quality target" for a given DCH shall be used by the UE to set the target SIR for the downlink power control in case BLER measurement is possible for this DCH, i.e. CRC exists in all transport formats in downlink TFS.

8.6.6 Physical channel information elements

8.6.6.1 Frequency info

If the IE "Frequency info" is included the UE shall:

- Store that frequency as the active frequency; and
- Tune to that frequency.

If the IE "Frequency info" is not included and the UE has a stored active frequency, the UE shall

- Continue to use the stored active frequency.

8.6.6.2 PRACH info and PRACH selection

The UE shall select a PRACH according to the following rule. The UE shall:

- select a default PRACH from the ones indicated in the IE "PRACH info" in System Information Block type 5 (applicable in Idle Mode and Connected Mode) and System Information Block type 6 (applicable in Connected Mode only), as follows:
 - if both RACH with 10 ms and 20 ms TTI are indicated in System Information Block type 5 and System Information Block type 6:

- select the appropriate TTI based on power requirements, as specified in subclause 8.6.6.3;
- select a RACH randomly from the ones listed in System Information Block type 5 and System Information Block type 6 as follows:

"Index of selected PRACH" = floor (rand * K)

where K is equal to the number of listed PRACHs which carry an RACH with the above selected TTI, "rand" is a random number uniformly distributed in the range 0,...,1, and "floor" refers to rounding down to nearest integer. RACHs with 10 and 20 ms TTI shall be counted separately. These RACHs shall be indexed from 0 to K-1 in the order of their occurrence in SIB 5 and SIB 6, where RACHs listed in SIB 5 shall be counted first. The random number generator is left to implementation. The scheme shall be implemented such that one of the available RACHs is randomly selected with uniform probability. At startup of the random number generator in the UE the seed shall be dependent on the IMSI of the UE or time, thereby avoiding that all UEs select the same RACH;

- reselect the default PRACH when a new cell is selected. RACH reselection may also be performed after each transmission of a Transport Block Set on RACH;
- for emergency call, the UE is allowed to select any of the available RACHs.

8.6.6.3 Selection of RACH TTI

In FDD mode, a RACH may employ either 10 or 20 ms TTI. The supported TTI is indicated as a semi-static parameter of the RACH Transport Format in system information. If in one cell RACHs for both 10 and 20 ms TTI are supported, the UE shall select an appropriate RACH according to the following rule:

The UE shall first check whether a RACH Transport Format is available which is suitable for the transmission of the current transport Block Set for both 10 and 20 ms TTI. The UE shall:

- if the required transport format is available only for one particular TTI:
 - select this TTI;
 - identify the corresponding RACHs;
 - proceed with RACH selection as specified in subclause 8.6.6.2.
- if the required transport format is available on both types of RACH, 10 and 20 ms TTI:
 - perform TTI selection as follows:
 - when the UE calculates the initial preamble transmit power ("Preamble_Initial_Power") as specified in subclause 8.5.7:
 - calculate a transmit power margin,

$$\text{Margin} = \{ \min(\text{Maximum allowed UL tx power, } P_{\text{MAX}}) - \max(\text{Preamble_Initial_Power, Preamble_Initial_Power} + \Delta P_{p-m} + 10 * \log_{10}(1 + (\beta_d / \beta_c)^2)) \}$$

where "Maximum allowed UL tx power" is the maximum allowed uplink transmit power indicated in system information (in dBm), and P_{MAX} is the maximum RF output power of the UE (dBm). The margin shall be calculated for 10 ms TTI RACH message gain factors β_d and β_c .

NOTE: the expression $\text{Preamble_Initial_Power} + \Delta P_{p-m} + 10 * \log_{10}(1 + (\beta_d / \beta_c)^2)$ represents the total RACH message power if the message would be sent after the initial preamble.

- if the value of "Margin" calculated for RACH with 10 ms TTI is less than 6 dB:
 - select RACH with 20 ms TTI, and proceed as specified in subclause 8.6.6.2.
- perform reselection of the RACH TTI only after successful transmission of one Transport Block Set. However in case L1 message transmission on PRACH has failed at least once while using 10 ms TTI, the UE may use the 20 ms TTI RACH for the retransmission. Handling of RACH Message transmission failure is part of general error handling procedure.

8.6.6.4 Downlink information for each radio link

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

- if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:
 - if the IE "Secondary CCPCH info" is included; and
 - if the UE is not capable of simultaneous reception of DPCH and Secondary CCPCH:
 - set the variable UNSUPPORTED_CONFIGURATION to TRUE;
 - else:
 - if the UE is capable of simultaneous reception of DPCH and SCCPCH:
 - start to receive the indicated Secondary CCPCH;
 - act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6.
- if the UE would enter either the CELL_FACH, CELL_PCH or URA_PCH state according to subclause 8.6.3.3 applied on the received message:
 - set the variable INVALID_CONFIGURATION to TRUE.

8.6.6.5 Secondary CCPCH info

In UTRAN Connected mode, the UE shall select the Secondary CCPCH according to the following rules:

- in Cell_DCH state:
 - select Secondary CCPCH according to subclause 8.6.6.4;
- in Cell_FACH state:
 - select an SCCPCH from the SCCPCHs listed in System Information Block types 5 and 6 (SIB 5 and SIB 6) based on U-RNTI as follows:

"Index of selected SCCPCH" = U-RNTI mod K,

where K is equal to the number of listed SCCPCHs which carry a FACH (i.e., SCCPCHs carrying PCH only shall not be counted). These SCCPCHs shall be indexed from 0 to K-1 in the order of their occurrence in SIB 5 and SIB 6, and "Index of selected SCCPCH" identifies the selected SCCPCH. SCCPCHs included in SIB 5 shall be indexed first.

in Cell_PCH and URA_PCH states:

- select an SCCPCH from the SCCPCHs listed in SIB 5 and SIB 6 based on U-RNTI as follows:

"Index of selected SCCPCH" = U-RNTI mod K,

where K is equal to the number of listed SCCPCHs which carry a PCH (i.e., SCCPCHs carrying FACH only shall not be counted). These SCCPCHs shall be indexed in the order of their occurrence in system information from 0 to K-1, and "Index of selected SCCPCH" identifies the selected SCCPCH.

UE shall set CFN in relation to SFN of current cell according to subclause 8.5.15.

8.6.6.6 Uplink DPCH info

If the IE "Uplink DPCH info" is included, the UE shall:

- release any active uplink physical channels and activate the given physical channels.

8.6.6.7 Downlink DPCH info

If the IE "Downlink DPCH info" is included, the UE shall:

- activate the dedicated physical channels indicated by that IE.

If the IE "Downlink DPCH info" is included in a message used to establish the first RL(s) for a UE or perform a Timing re-initialised hard handover, the UE shall, after having activated the dedicated physical channels indicated by that IE:

- set CFN in relation to SFN of the first RL (cell) listed in that message, according to subclause 8.5.15;

If the IE "Downlink DPCH info" is included in a message used to perform a Timing re-initialised hard handover, and ciphering is active for any radio bearer using RLC-TM, the UE shall, after having activated the dedicated physical channels indicated by that IE:

- increment HFN for RLC-TM by '1';

If the IE "Downlink DPCH info" is included in a message used to perform a Timing-maintained hard handover, UE shall, after having activated the dedicated physical channels indicated by that IE:

- increase CFN (mod 256) by 1 every frame and maintain UL transmission timing.

8.6.6.8 Maximum allowed UL TX power

If the IE "Maximum allowed UL TX power" is included, the UE shall:

- keep the UE uplink transmit power below the indicated power value. If the current UE uplink transmit power is above the indicated power value, the UE shall decrease the power to a level below the power value.

The maximum UE transmitter power is defined as the lower of the maximum output power of the UE power class and the maximum allowed UL TX power indicated in this IE. The maximum UE transmitter power shall not be exceeded.

8.6.6.9 PDSCH with SHO DCH Info (FDD only)

If the IE "PDSCH with SHO DCH Info" is included, the UE shall:

- configure itself such that when an allocation on the DSCH is made it will receive the PDSCH from the specified BS within the active set;

and in cases where the TFCI for the user in question has a 'hard' split (meaning that TFCI(field 1) and TFCI (field 2) have their own individual block coding):

- configure the Layer 1 to only soft combine the DPCCCH TFCI(field 2) of the radio links within the associated DCH active set which are specified;
- infer that the set of radio links for which TFCI (field 2) should be soft combined will include all radio links within the active set if the IE "TFCI combining set" is not included and the sending of the message in which the IE "PDSCH with SHO DCH Info" is being used will result in a transport channel switch from a state in which the DSCH transport channel was not available to a state in which it is available.

8.6.6.10 PDSCH code mapping (FDD only)

If the IE "PDSCH code mapping" is included, the UE shall:

- Configure Layer 1 to support the mapping of TFCI(field 2) values to PDSCH channelisation codes as specified in the IE.

8.6.6.11 Uplink DPCH power control info

The UE shall:

- in FDD:
 - if the IE "Uplink DPCH power control info" is included:

- calculate and set an initial uplink transmission power;
- start inner loop power control as specified in subclause 8.5.3;
- for the UL inner loop power control:
 - use the parameters specified in the IE.
- in TDD:
 - if the IE "Uplink DPCH power control info" is included:
 - use the parameters specified in the IE for open loop power control as defined in subclause 8.5.7.
- both in FDD and TDD;
 - if the IE "Uplink DPCH power control info" is not included:
 - use the current uplink transmission power.

8.6.6.12 Secondary CPICH info

If the IE Secondary CPICH info is included, the UE:

- May use the channelisation code according to IE "channelisation code", with scrambling code according to IE "DL scrambling code" in the IE "Secondary CPICH info", for channel estimation of that radio link;
- May use the pilot bits on DPCCH for channel estimation.

8.6.6.13 Primary CPICH usage for channel estimation

If the IE "Primary CPICH usage for channel estimation" is included and has the value "Primary CPICH may be used" the UE:

- may use the Primary CPICH for channel estimation;
- may use the pilot bits on DPCCH for channel estimation.

If the IE "Primary CPICH usage for channel estimation" is included and has the value "Primary CPICH shall not be used" the UE:

- shall not use the Primary CPICH for channel estimation;
- may use the Secondary CPICH for channel estimation
- may use the pilot bits on DPCCH for channel estimation.

8.6.6.14 DPCH frame offset

If the IE "DPCH frame offset" is included the UE shall:

- use its value to determine the beginning of the DPCH frame

8.6.6.15 DPCH Compressed mode info

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" are included, the UE shall:

- update each pattern sequence to the variable TGPS_IDENTITY according to the IE "TGPSI";
- update into the variable TGPS_IDENTITY the configuration information defined by IE group "transmission gap pattern sequence configuration parameters";

- activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" at the time indicated by IE "TGCFN" and begin the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
- monitor if the parallel transmission gap pattern sequences create an illegal overlap, and in case of overlap, take actions as specified in subclause 8.2.11.2;

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is not included, the UE shall:

- activate, at the time indicated by IE "TGCFN", the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" and begin the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each activated pattern sequence;
- deactivate, at the time indicated by IE "TGCFN", the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "deactivate" and terminate the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each deactivated pattern sequence;

8.6.6.16 Repetition period, Repetition length, Offset

The following description applies to TDD only.

The frame allocation can be derived by following rules:

If no IE "Offset" is explicitly given, the parameter "Offset" to be used is calculated by the following equation:

$$\text{Activation time mod Repetition period} = \text{Offset.}$$

Frames from CFN CFN_{off} to $CFN_{\text{off}} + \text{Repetition length}$ belong to the allocation with CFN_{off} fulfilling the following equation:

$$CFN_{\text{off}} \text{ mod Repetition period} = \text{Offset.}$$

Repetition length is always a multiple of the largest TTI within the CCTrCH fulfilling the following equation:

$$(\text{largest TTI within CCTrCH}) * X = \text{Repetition Length}$$

Example of usage:

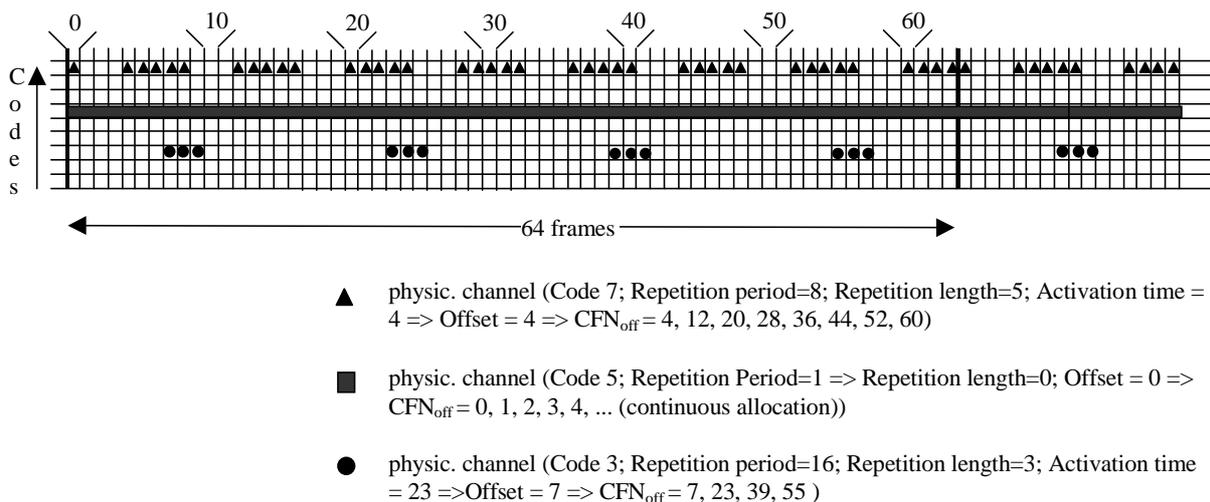


Figure 60: Examples for frame allocations in TDD

8.6.6.17 Primary CCPCH info

If the IE "Primary CCPCH info" in TDD and the IE "New C-RNTI" are included and the message including these IEs is used to initiate a state transition to CELL_FACH, the UE shall:

- select the cell indicated by the IE "Primary CCPCH info";
- use the given C-RNTI when using common transport channels of type RACH, FACH and CPCH in that given cell after having completed the transition to that cell.

8.6.6.18 Primary CPICH info

If the IE "Primary CPICH info" in FDD and the IE "New C-RNTI" are included and the message including these IEs is used to initiate a state transition to CELL_FACH, the UE shall:

- select the cell indicated by the IE "Primary CPICH info";
- use the given C-RNTI when using common transport channels of type RACH, FACH and CPCH in that given cell after having completed the transition to that cell.

8.6.6.19 CPCH SET Info (FDD only)

If the UE has the capability to use CPCH, the UE shall use the following general procedures:

- if an IE "CPCH SET Info" is included in a dedicated message:
 - read the "CPCH set ID" included in the IE;
 - store the IE using the "CPCH set ID" as an address tag;
 - release any active dedicated physical channels in the uplink;
 - let the PCPCHs listed in the CPCH set be the default in the uplink for CPCH;
- if an IE "CPCH SET Info" is included in a System Information message:
 - read the "CPCH set ID" included in the IE;
 - store the IE using the "CPCH set ID" as an address tag.

8.6.6.20 CPCH set ID (FDD only)

If the UE has the capability to use CPCH, the UE shall use the following general procedures:

- If an IE "CPCH set ID" is included in a dedicated message and not as part of IE "CPCH SET Info":
 - use the IE as an address tag to retrieve the corresponding stored "CPCH SET Info";
 - release any active dedicated physical channels in the uplink;
 - let the PCPCHs listed in the CPCH set be the default in the uplink for CPCH.
- if an IE "CPCH set ID" is included in a dedicated message and not as part of IE "CPCH SET Info", and if there is no corresponding stored "CPCH SET Info":
 - release any active dedicated physical channels in the uplink;
 - let the last assigned PRACH be the default in the uplink for RACH;
 - obtain current System Information on SCCPCH to obtain and store the "CPCH SET info" IE(s);
 - upon receipt of a "CPCH SET Info" which corresponds to the "CPCH set ID" IE:
 - let the PCPCHs listed in that CPCH set be the default in the uplink for CPCH.

8.6.6.21 Default DPCH Offset Value

The UE shall:

- if the IE "Default DPCH Offset Value" is included:

- use its value to determine Frame Offset and Chip Offset from the SFN timing in a cell;
- if the IE "Default DPCH Offset Value" is not included:
 - use the previously received value stored in variable DOFF. If there is no previously received value stored in DOFF, the UE should use the value 0.

After transition from CELL_DCH state to other states, the UE shall erase the value stored in variable DOFF.

8.6.6.22 Secondary Scrambling Code, Code Number

The following description applies to FDD.

Code Number can be assigned by following rules:

- When more than one DL DPDCH is assigned per RL, the segmented physical channel shall be mapped on to DL DPDCHs according to 3GPP TS 25.212. When p number of DL DPDCHs are assigned to each RL, the first pair of Secondary Scrambling Code and Code Number corresponds to "*PhCH number 1*", the second to "*PhCH number 2*", and so on until the p th to "*PhCH number p*".

8.6.6.23 PDSCH Power Control info

If the IE "PDSCH Power Control info" is included the UE shall:

- configure PDSCH power control with the received values.

If the IE "PDSCH Power Control info" is not included the UE shall:

- continue to use the stored values.

8.6.7 Measurement information elements

8.6.7.1 Measurement validity

If the optional IE "measurement validity" for a given measurement has not been included in measurement control information, the UE shall delete the measurement associated with the variable MEASUREMENT IDENTITY after the UE makes a transition to a new state.

If the IE "measurement validity" for this measurement has been included in measurement control information, the UE shall save the measurement associated with the variable MEASUREMENT IDENTITY. The IE "UE state" defines the scope of resuming the measurement.

If the "UE state" is defined as "all states", the UE shall continue the measurement after making a transition to a new state. This scope is assigned only for traffic volume type measurements and can only be applied by the UE if the IE "measurement object" has not been included in measurement control information. If the IE "measurement object" has been included in measurement control information, the UE shall not save the measurement control information in variable MEASUREMENT IDENTITY, but shall send a MEASUREMENT CONTROL FAILURE message to the UTRAN with failure cause "incomplete configuration".

If the "UE state" is defined as "all states except CELL_DCH", the UE shall store the measurement to be resumed after a subsequent transition from CELL_DCH state to any of the other states in connected mode. This scope is assigned only for traffic volume type measurements.

If the "UE state" is defined as "CELL_DCH", the UE shall store the measurement to be resumed after a subsequent transition to CELL_DCH state. After cell re-selection, the UE shall delete any ongoing intra-frequency or inter-frequency and inter-RAT type measurement associated with the variable MEASUREMENT IDENTITY. Other measurement types shall, however, be continued regardless of cell reselection.

8.6.7.2 Filter coefficient

If the IE "Filter coefficient" is received the UE shall apply filtering of the measurements for that measurement quantity according to the formula below. This filtering shall be performed by the UE before UE event evaluation. The UE shall

also filter the measurements reported in the IE "Measured results" or the IE "Measurement results on RACH". The filtering shall not be performed for cell-reselection in connected or idle mode.

The filtering shall be performed according to the following formula.

$$F_n = (1 - a) \cdot F_{n-1} + a \cdot M_n$$

The variables in the formula are defined as follows:

F_n is the updated filtered measurement result

F_{n-1} is the old filtered measurement result

M_n is the latest received measurement result from physical layer measurements, the unit used for M_n is the same unit as the reported unit in the MEASUREMENT REPORT message or the unit used in the event evaluation.

$a = 1/2^{(k/2)}$, where k is the parameter received in the IE "Filter coefficient".

NOTE: if a is set to 1 that will mean no layer 3 filtering.

In order to initialise the averaging filter, F_0 is set to M_1 when the first measurement result from the physical layer measurement is received.

The physical layer measurement results are sampled once every measurement period. The measurement period and the accuracy for a certain measurement is defined in 3GPP TS 25.133.

8.6.7.3 Intra-frequency/Inter-frequency/Inter-RAT cell info list

If

- IE "Intra-frequency cell info list" is received and,
 - "Removed intra-frequency cells" or/and,
 - "New intra-frequency cells" is present in the received IE,

Or,

- IE "Inter-frequency cell info list" is received and,
 - "Removed inter-frequency cells" or/and,
 - "New inter-frequency cells" is present in the received IE,

Or,

- IE "Inter-RAT cell info list" is received and,
 - "Removed inter-RAT cells" or/and,
 - "New inter-RAT cells" is present in the received IE

the UE shall update measurement objects for that measurement accordingly.

If:

- IE "Intra-frequency cell info list" is included, but
 - neither "Removed intra-frequency cells" nor "New intra-frequency cells" is included,

Or,

- If IE "Inter-frequency cell info list" is included, but
 - neither "Removed inter-frequency cells" nor "New inter-frequency cells" is included,

Or,

- If IE "Inter-RAT cell info list" is included, but
 - neither "Removed inter-RAT cells" nor "New inter-RAT cells" is included,

the UE shall not change the information on that measurement object. (This case is applied only when Measurement Command is set to "Modify".)

If one of these IEs is not received, UE shall re-order the same measurement type using the measurement ID in ascending order, and use the preceding measurement ID's measurement object information. (For example, suppose UE is assigned 3 measurement IDs (suppose they were ID10, 11, and 15) for intra-frequency measurement, and UE did not receive "Intra-frequency cell info" for Measurement ID 15. When performing the measurement assigned with 15, UE shall use the measurement object information associated with Measurement ID 11).

8.6.7.4 Intra-frequency measurement quantity

If the IE "Intra-frequency measurement quantity" is received, the UE shall:

- check the parameter "Measurement quantity"; and
- if the measurement quantity is set to "pathloss":
 - check whether the parameter "Primary CPICH Tx power" has been included for every intra-frequency cell in the IE "cell info" stored in variable MEASUREMENT_IDENTITY; and
 - if the parameter "Primary CPICH Tx power" is missing from any cell in the intra-frequency cell info list:
 - send to the UTRAN a MEASUREMENT CONTROL FAILURE message with the "Failure cause" parameter set to "Configuration incomplete".

8.6.7.5 Inter-RAT measurement quantity

If the IE "Inter-RAT measurement quantity" is received and CHOICE system is GSM, the UE shall:

- check the IE "BSIC verification required".
- if IE "BSIC verification required" is set to "required", for cells that match any of the BCCH ARFCN and BSIC combinations in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list", and that has a "verified" BSIC:
 - report measurement quantities according to IE "inter-RAT reporting quantity";;
 - trigger inter-RAT events according to IE "inter-RAT measurement reporting criteria".
- if IE "BSIC verification required" is set to "not required", for cells that match any of the BCCH ARFCN in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list", regardless if the BSIC is "verified" or "non-verified":
 - report measurement quantities according to IE "inter-RAT reporting quantity".
 - trigger inter-RAT events according to IE "inter-RAT measurement reporting criteria".

NOTE: The requirements for a cell to be considered "verified" or "non-verified" can be found in [19].

- check the parameter "Measurement quantity":
- if the measurement quantity is set to "pathloss":
 - check whether the parameter "Output power" has been included for every inter-RAT cell in the IE "inter-RAT cell info list" stored in variable MEASUREMENT_IDENTITY;
 - if the parameter "output power" is missing from any cell in the inter-RAT cell info list:
 - send to the UTRAN a MEASUREMENT CONTROL FAILURE message with the "Failure cause" parameter set to "Configuration incomplete".

8.6.7.6 Inter-RAT reporting quantity

If the IE "Inter-RAT reporting quantity" is received by the UE, the UE shall

- store the content of the IE to the variable MEASUREMENT_IDENTITY.
- If the IE "Inter-RAT measurement quantity" is received and CHOICE system is GSM, the UE shall check each quantity in the GSM choice. The UE shall include measured results in MEASUREMENT REPORT as specified in the IE "Inter-RAT reporting quantity" with the following restrictions:
 - if the UE has not confirmed the BSIC of the measured cell, then:
 - if no compressed mode pattern sequence specified with measurement purpose "Initial BSIC identification" is active, the UE is not required to include the "BSIC" nor "Observed time difference to GSM cell" in the IE "Measured results", when a MEASUREMENT REPORT is triggered.
 - if the UE has confirmed the BSIC of the measured cell, then:
 - if no compressed mode pattern sequence specified with measurement purpose "Initial BSIC identification" nor "BSIC re-confirmation" is active, the UE is not required to include the "BSIC" nor "Observed time difference to GSM cell" in the IE "Measured results", when a MEASUREMENT REPORT is triggered.
- If IE "Pathloss" is set to "TRUE",
 - include optional IE "Pathloss" with a value set to the measured pathloss to that GSM cell in IE "Inter-RAT measured results list"
- If IE "Observed time difference to GSM cell" is set to "TRUE",
 - include optional IE "Observed time difference to GSM cell" with the value set to the time difference to that GSM cell for the GSM cells that have a BSIC that is "verified", and that match any of the BCCH ARFCN and BSIC combinations in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list". Observed time difference to GSM cells with "non-verified" BSIC shall not be included.
- If IE "GSM Carrier RSSI" is set to "TRUE",
 - include optional IE "GSM Carrier RSSI" with a value set to the measured RXLEV to that GSM cell in IE "Inter-RAT measured results list"
- If the BSIC of reported GSM cell is "verified"
 - set the CHOICE BSIC to "Verified BSIC" and IE "inter-RAT cell id" to the value that GSM cell had in the IE "Inter-RAT cell info list".
- If the BSIC of reported GSM cell is "non-verified"
 - set the CHOICE BSIC to "Non verified BSIC" and the IE "BCCH ARFCN" to the value of that GSM cells ARFCN.

The requirements for a cell to be considered "verified" or "non-verified" can be found in [19].

8.6.7.7 Cell Reporting Quantities

If the IE "Cell Reporting Quantities" is received by the UE, the UE shall store the content of the IE "Cell Reporting Quantities" to the variable MEASUREMENT_IDENTITY.

The UE shall include measured results in MEASUREMENT REPORT as specified in the IE "Cell Reporting Quantities", except for the following cases:

If the IE "Cell Identity" is set to TRUE, the UE shall:

- in CELL_FACH state:
 - report the IE "Cell Identity" that is given in System Information Block type 4 (or System Information Block type 3, if System Information Block type 4 is not being broadcast).

- in CELL_DCH state:
 - treat the IE as if the IE "Cell Identity" is set to FALSE.

If the IE "Cell synchronisation information reporting indicator" is set to TRUE, the UE shall:

- include the IE "Cell synchronisation information" in MEASUREMENT REPORT as specified in the IE "Cell Reporting Quantities":
 - if the measurement is performed on another frequency:
 - a UE may omit the information group "COUNT-C-SFN frame difference" in the IE "Cell synchronisation information".
 - if the measurement is performed on the same frequency and no RLC Transparent Mode COUNT-C exists in the UE:
 - set the IE "COUNT-C-SFN high" to 0.
 - otherwise:
 - include the information group "COUNT-C-SFN frame difference".

If the IE "Proposed TGSN Reporting required" is set to TRUE, the UE shall:

- if compressed mode was used to monitor a TDD cell and the variable TGSN_REPORTED is set to FALSE:
 - report the IE "Proposed TGSN" indicating the TGSN that suits best to the measured cell;
 - set the variable TGSN_REPORTED to TRUE.
- otherwise
 - omit the IE "Proposed TGSN".

8.6.7.8 Periodical Reporting Criteria

If the IE "Periodical Reporting Criteria" is received by the UE, the UE shall store the contents of the IE "Amount of Reporting" and IE "Reporting interval" in the variable MEASUREMENT_IDENTITY.

The UE shall send the first MEASUREMENT REPORT message as soon as the first measurement has been completed according to the requirements set in 3GPP TS 25.133. After this, the UE shall send the next MEASUREMENT REPORT messages with intervals specified by the IE "Reporting interval".

After the UE has sent a total number of MEASUREMENT REPORT messages, which equal the value indicated in the IE "Amount of reporting", the UE shall terminate measurement reporting and delete all measurement information linked with the "Measurement identity" of the ongoing measurement from the variable MEASUREMENT_IDENTITY.

8.6.7.9 Reporting Cell Status

If the IE "Reporting Cell Status" is received, the UE shall set the IE "Measured Results" in MEASUREMENT REPORT as follows:

- for intra-frequency measurement and inter-frequency measurement:
 - include the IE "Cell Measured Results" for cells that satisfy the condition (such as "Report cells within active set") specified in "Reporting Cell Status", in descending order by the measurement quantity.
 - the maximum number of the IE "Cell Measured Results" to be included in the IE "Measured Results" is the number specified in "Reporting Cell Status".

If the IE "Reporting Cell Status" is not received for intra-frequency or inter-frequency measurement, the UE shall:

- exclude the IE "cell measured results" for any cell in MEASUREMENT REPORT.

8.6.7.10 Traffic Volume Measurement

If the IE "Traffic Volume Measurement" is received by the UE, the UE shall store the content of the IE to the variable MEASUREMENT_IDENTITY.

If the IE "Traffic volume measurement Object" is not included, the UE shall apply the measurement reporting criteria to all uplink transport channels.

8.6.7.11 Traffic Volume Reporting Criteria

If the IE "Traffic Volume Reporting Criteria" is received by the UE, the UE shall store the content of the IE "Traffic Volume Reporting Criteria" to the variable MEASUREMENT_IDENTITY.

If the IE "UL transport channel id" is not included, the UE shall apply the measurement reporting criteria to all uplink transport channels indicated in the "Traffic volume measurement Object". If the UTRAN has not specified a traffic volume measurement object for a given measurement identity, the UE shall apply the measurement reporting criteria to all uplink transport channels, which it is using.

8.6.7.12 FACH measurement occasion info

IE "FACH measurement occasion info" is used to control UE measurement activities in inter-frequency and inter-RAT cells in CELL_FACH state.

If IE "FACH measurement occasion info" is received, UE shall, when in CELL_FACH state:

- if IE "FACH Measurement occasion length coefficient" is included; and
 - if, according to its measurement capabilities, UE is not able to perform some of the indicated measurements in this IE simultaneously as receiving the SCCPCH of serving cell:
 - perform those measurements during FACH measurement occasions, see subclause 8.5.12.
 - if, according to its measurement capabilities, UE is able to perform some of the indicated measurements in this IE simultaneously as receiving the SCCPCH of serving cell:
 - UE may perform measurements also on other occasions.
 - if, according to its measurement capabilities, UE is able to perform the measurements supported by UE and indicated in this IE simultaneously as receiving the SCCPCH of serving cell:
 - perform the measurements simultaneously as receiving the SCCPCH of serving cell.
- if IE "FACH Measurement occasion length coefficient" is not included:
 - perform those indicated measurements indicated in this IE that UE, according to its measurement capabilities, is able to perform simultaneously as receiving the SCCPCH of serving cell.
- if IE "Inter-frequency FDD measurement indicator" is set to TRUE:
 - perform measurements and evaluate cell re-selection criteria according to 3GPP TS 25.304 on inter-frequency FDD cells listed in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".
- if IE "Inter-frequency FDD measurement indicator" is set to FALSE:
 - neither perform measurements nor evaluate cell re-selection criteria on inter-frequency FDD cells.
- if IE "Inter-frequency TDD measurement indicator" is set to TRUE:
 - perform measurements and evaluate cell re-selection criteria according to 3GPP TS 25.304 on inter-frequency TDD cells listed in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".
- if IE "Inter-frequency TDD measurement indicator" is set to FALSE:

- neither perform measurements nor evaluate cell re-selection criteria on inter-frequency TDD cells.
- if IE "Inter-RAT measurement indicators" is included:
 - perform measurements and evaluate cell re-selection criteria according to 3GPP TS 25.304 on those cells of listed Inter-RAT types that are present in IE "Measurement control system information" in "System Information Block type 11" or "System Information Block type 12".

9 Handling of unknown, unforeseen and erroneous protocol data

9.1 General

This subclause specifies procedures for the handling of unknown, unforeseen, and erroneous protocol data by the receiving entity. These procedures are called "error handling procedures", but in addition to provide recovery mechanisms for error situations they define a compatibility mechanism for future extensions of the protocol.

The error handling procedures specified in this subclause shall apply to all RRC messages. When there is a specific handling for messages received on different logical channels this is specified.

When the UE receives an RRC message, it shall set the variable `PROTOCOL_ERROR_REJECT` to FALSE and then perform the checks in the order as defined below.

The procedures specified in clause 8 are applied only for the messages passing the checks as defined below, except when procedure specific handling is used to recover from the error.

9.2 ASN.1 violation or encoding error

If the UE receives a message on the DCCH for which the encoded message does not result in a valid abstract syntax value, it shall perform the following:

- Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
- Transmit an RRC STATUS message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to "ASN.1 violation or encoding error".
- When RRC STATUS message has been submitted to lower layers for transmission, the UE RRC shall continue operation as if the invalid message had not been received.

If the UE receives a message on the BCCH, PCCH, CCCH or SHCCH for which the encoded message does not result in a valid abstract syntax value, it shall ignore the message.

9.3 Unknown or unforeseen message type

If a UE receives an RRC message on the DCCH with a message type reserved for future extension it shall:

- Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
- Transmit an RRC STATUS message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to "Message type non-existent or not implemented".
- When the RRC STATUS message has been submitted to lower layers for transmission, the UE RRC shall continue operation as if the invalid message had not been received.

If the UE receives a message on the BCCH, PCCH, CCCH or SHCCH with a message type reserved for future extension it shall ignore the message.

9.4 Unknown or unforeseen information element value, mandatory information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, with a mandatory IE having a value, including choice, reserved for future extension the UE shall

- If criticality of the IE is defined as "Ignore" and if a default value of the IE is defined, treat the rest of the message using the default value of the IE.
- If criticality of the IE is defined as "Reject" or no default value of the IE is defined:
 - Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
 - Set the IE "Protocol error cause" in the variable `PROTOCOL_ERROR_INFORMATION` to "Information element value not comprehended".
 - Perform procedure specific error handling according to clause 8.

If the UE receives an RRC message on the BCCH or PCCH with a mandatory IE having a value reserved for future extension it shall

- If criticality of the IE is defined as "Ignore" and if a default value of the IE is defined, treat the rest of the message using the default value of the IE.
- If criticality of the IE is defined as "Reject" or no default value of the IE is defined, ignore the message.

9.5 Conditional information element error

If the UE receives an RRC message on the DCCH, BCCH, PCCH, or addressed to the UE on the CCCH, for which the specified conditions for absence of a conditional IE are met and that IE is present, the UE shall:

- Ignore the IE.
- Treat the rest of the message as if the IE was not present.

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, for which the specified conditions for presence of a conditional IE are met and that IE is absent, the UE shall:

- Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
- Set the IE "Protocol error cause" in the variable `PROTOCOL_ERROR_INFORMATION` to "Conditional information element error".
- Perform procedure specific error handling according to clause 8.

If the UE receives an RRC message on the BCCH or PCCH for which the specified conditions for presence of a conditional IE are met and that IE is absent, the UE shall ignore the message.

9.6 Unknown or unforeseen information element value, conditional information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, for which the specified conditions for presence of a conditional IE are met, that IE is present, and that IE has a value, including choice, reserved for future extension, the UE shall

- If criticality of the IE is defined as "Ignore" and if a default value of the IE is defined, treat the rest of the message using the default value of the IE.
- If criticality of the IE is defined as "Reject" or no default value of the IE is defined:
 - Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.

- Set the IE "Protocol error cause" in the variable `PROTOCOL_ERROR_INFORMATION` to "Information element value not comprehended".
- Perform procedure specific error handling according to clause 8.

If the UE receives an RRC message on the BCCH or PCCH for which the specified conditions for presence of a conditional IE are met, that IE is present, and that IE has a value, including choice, reserved for future extension, the UE shall

- If criticality of the IE is defined as "Ignore" and if a default value of the IE is defined, treat the rest of the message using the default value of the IE.
- If criticality of the IE is defined as "Reject" or no default value of the IE is defined, ignore the message.

9.7 Unknown or unforeseen information element value, optional information element

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, with an optional IE having a value, including choice, reserved for future extension and the criticality for that IE is specified as "ignore", it shall:

- Ignore the value of the IE.
- Treat the rest of the message as if the IE was not present.

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, with an optional IE having a value, including choice, reserved for future extension and the criticality for that IE is specified as "reject", it shall:

- Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
- Set the IE "Protocol error cause" in the variable `PROTOCOL_ERROR_INFORMATION` to "Information element value not comprehended".
- Perform procedure specific error handling according to clause 8.

If the UE receives an RRC message on the BCCH or PCCH with an optional IE having a value, including choice, reserved for future extension it shall:

- Ignore the value of the IE.
- Treat the rest of the message as if the IE was not present.

9.8 Unexpected message extension

If the UE receives a message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, containing at least one information element in an extension for which a content is not defined, and therefore not expected, the UE shall check the criticality of that extension, if defined.

- If the criticality for the extension is defined and is set to "Ignore", the UE shall ignore the content of the extension and the message contents after the extension, but treat the parts of the message up to the extension normally.
- If the criticality for the extension is defined and is set to "Reject", or if the criticality is not defined, the UE shall:
 - Set the variable `PROTOCOL_ERROR_REJECT` to TRUE.
 - Set the IE "Protocol error cause" in the variable `PROTOCOL_ERROR_INFORMATION` to "Message extension not comprehended".
 - Perform procedure specific error handling according to clause 8.

If the UE receives a message on the BCCH or PCCH, containing at least one information element in an extension for which a content is not defined, and therefore not expected, the UE shall check the criticality of that extension, if defined.

- If the criticality for the extension is defined and is set to "Ignore", the UE shall ignore the content of the extension and the message contents after the extension, but treat the parts of the message up to the extension normally.
- If the criticality for the extension is defined and is set to "Reject", or if the criticality is not defined, the UE shall ignore the message.

10 Message and information element functional definition and content

10.1 General

The function of each Radio Resource Control message together with message contents in the form of a list of information elements is defined in subclause 10.2.

Functional definitions of the information elements are then described in subclause 10.3.

Information elements are marked as either MP- Mandatory present, MD - Mandatory with default value, OP - Optional, CV - Conditional on value or CH -Conditional on history (see Table 10.1 with information extracted from [14]).

Table 10.1: Meaning of abbreviations used in RRC messages and information elements

Abbreviation	Meaning
MP	Mandatory present A value for that information is always needed, and no information is provided about a particular default value. If ever the transfer syntax allows absence (e.g., due to extension), then absence leads to an error diagnosis.
MD	Mandatory with default value A value for that information is always needed, and a particular default value is mentioned (in the 'Semantical information' column). This opens the possibility for the transfer syntax to use absence or a special pattern to encode the default value.
CV	Conditional on value A value for that information is needed (presence needed) or unacceptable (absence needed) when some conditions are met that can be evaluated on the sole basis of the content of the message. If conditions for presence needed are specified, the transfer syntax must allow for the presence of the information. If the transfer syntax allows absence, absence when the conditions for presence are met leads to an error diagnosis. If conditions for absence needed are specified, the transfer syntax must allow to encode the absence. If the information is present and the conditions for absence are met, an error is diagnosed. When neither conditions for presence or absence are met, the information is treated as optional, as described for 'OP'.
CH	Conditional on history A value for that information is needed (presence needed) or unacceptable (absence needed) when some conditions are met that must be evaluated on the basis of information obtained in the past (e.g., from messages received in the past from the other party). If conditions for presence needed are specified, the transfer syntax must allow for the presence of the information. If the transfer syntax allows absence, absence when the conditions for presence are met leads to an error diagnosis. If conditions for absence needed are specified, the transfer syntax must allow to encode the absence. If the information is present and the conditions for absence are met, an error is diagnosed. When neither conditions for presence or absence are met, the information is treated as optional, as described for 'OP'.
OP	Optional

Abbreviation	Meaning
	The presence or absence is significant and modifies the behaviour of the receiver. However whether the information is present or not does not lead to an error diagnosis.

10.1.1 Protocol extensions

In this specification, two kind of protocol extensions are distinguished:

- extension of an information element with additional values or choices;
- extension of a message with additional information elements.

This standard fully specifies the behaviour of the UE, conforming to this revision of the standard, upon receiving a not comprehended future extension. The details of this error handling behaviour are provided in clause 9.

NOTE: By avoiding the need for partial decoding (skipping uncomprehended IEs to continue decoding the remainder of the message), the RRC protocol extension mechanism also avoids the overhead of length determinants for extensions.

10.1.1.1 Extension of an information element with additional values or choices

In future releases of this protocol, some of the value ranges and choices may be extended. For these value ranges and choices, one or more additional values are reserved. The size of the encoded information element shall not depend on whether or not the values reserved for extension are used. Information elements applicable to choices reserved for future releases of the protocol, shall be added to the end of the message.

For each of the values and choices reserved for future extension, the behaviour of a UE conforming to this revision of the standard is defined within the message and information element specifications provided in subclause 10.1 and 10.2. The UE may either apply a defined value, ignore the information element and/ or reject the request entire message. Which action applies is indicated within the "semantics" column of the tables specifying the messages and information elements as the "criticality" ("default", "ignore" or "reject").

10.1.1.2 Extension of a message with additional information elements

In future releases of this protocol, RRC messages may be extended with new information elements. These additional information elements shall always be included at the end of the message.

UTRAN is able to control the behaviour of a UE receiving a message extended with a not comprehended additional information element by indicating for each extension the "criticality" which may be "ignore" or "reject". Therefore UTRAN indicates the criticality for extensions provided in all messages it sends towards the UE, with the exception of broadcast messages. In the direction from UE to UTRAN, not criticality information is included for protocol extensions added at the end of a message. This is shown in the following table. Furthermore, the table indicates at which level extensions are included for the SYSTEM INFORMATION message.

Type	Message
Extensions and criticality	ACTIVE SET UPDATE 10.2.1 ASSISTANCE DATA DELIVERY 10.2.4 CELL UPDATE CONFIRM 10.2.5 DOWNLINK DIRECT TRANSFER 10.2.11 DOWNLINK OUTER LOOP CONTROL 10.2.9 HANDOVER TO UTRAN COMMAND 10.2.12 HANDOVER FROM UTRAN COMMAND 10.2.15 MEASUREMENT CONTROL 10.2.17 PAGING TYPE 1 10.2.20 PAGING TYPE 2 10.2.21 PHYSICAL CHANNEL RECONFIGURATION 10.2.22 PHYSICAL SHARED CHANNEL ALLOCATION 10.2.25 RADIO BEARER RECONFIGURATION 10.2.27 RADIO BEARER RELEASE 10.2.30 RADIO BEARER SETUP 10.2.33 RRC CONNECTION REJECT 10.2.36 RRC CONNECTION RELEASE 10.2.37 RRC CONNECTION SETUP 10.2.40 SECURITY MODE COMMAND 10.2.43 SIGNALLING CONNECTION RELEASE 10.2.46 SIGNALLING CONNECTION RELEASE REQUEST 10.2.47 TRANSPORT CHANNEL RECONFIGURATION 10.2.50 TRANSPORT FORMAT COMBINATION CONTROL 10.2.53 UE CAPABILITY ENQUIRY 10.2.55 UE CAPABILITY INFORMATION CONFIRM 10.2.57 UPLINK PHYSICAL CHANNEL CONTROL 10.2.59 URA UPDATE CONFIRM 10.2.61 UTRAN MOBILITY INFORMATION 10.2.62
Extensions	ACTIVE SET UPDATE COMPLETE 10.2.2 ACTIVE SET UPDATE FAILURE 10.2.3 CELL UPDATE 10.2.7 COUNTER CHECK RESPONSE 10.2.10 HANDOVER TO UTRAN COMPLETE 10.2.13 INITIAL DIRECT TRANSFER 10.2.14 HANDOVER FROM UTRAN FAILURE 10.2.16 MEASUREMENT CONTROL FAILURE 10.2.18 MEASUREMENT REPORT 10.2.19 PHYSICAL CHANNEL RECONFIGURATION COMPLETE 10.2.23 PHYSICAL CHANNEL RECONFIGURATION FAILURE 10.2.24 PUSCH CAPACITY REQUEST 10.2.26 RADIO BEARER RECONFIGURATION COMPLETE 10.2.28 RADIO BEARER RECONFIGURATION FAILURE 10.2.29 RADIO BEARER RELEASE COMPLETE 10.2.31 RADIO BEARER RELEASE FAILURE 10.2.32 RADIO BEARER SETUP COMPLETE 10.2.34 RADIO BEARER SETUP FAILURE 10.2.35 RRC CONNECTION RELEASE COMPLETE 10.2.38 RRC CONNECTION REQUEST 10.2.39 RRC CONNECTION SETUP COMPLETE 10.2.41 RRC STATUS 10.2.42 SECURITY MODE COMPLETE 10.2.44 SECURITY MODE FAILURE 10.2.45 Master Information Block 10.2.48.8.1 System Information Block type 1 to System Information Block type 17 10.2.48.8.2 to 10.2.48.8.19 SYSTEM INFORMATION CHANGE INDICATION 10.2.49 TRANSPORT CHANNEL RECONFIGURATION COMPLETE 10.2.51 TRANSPORT CHANNEL RECONFIGURATION FAILURE 10.2.52 TRANSPORT FORMAT COMBINATION CONTROL FAILURE 10.2.54 UE CAPABILITY INFORMATION 10.2.56 UPLINK DIRECT TRANSFER 10.2.58 URA UPDATE 10.2.60 UTRAN MOBILITY INFORMATION CONFIRM 10.2.63 UTRAN MOBILITY INFORMATION FAILURE 10.2.64
None	SYSTEM INFORMATION 10.2.48 First Segment 10.2.48.1 Subsequent or last Segment 10.2.48.3

Type	Message
	Complete SIB10.2.48.5 SIB content10.2.48.8.1

NOTE 1: For the SYSTEM INFORMATION message protocol extensions are only possible at the level of system information blocks. If extension is needed at the level of SYSTEM INFORMATION, another message should be defined.

The "Extensions and criticality" may include both critical and non-critical extensions. Within the encoded message, the critical extensions shall always appear before non-critical extensions.

NOTE 2: The above implies that a UE may stop decoding upon the first not comprehended IE it encounters.

The UE shall comprehend all information elements within a message upto the revision of the protocol it supports for the concerned message.

10.2 Radio Resource Control messages

10.2.1 ACTIVE SET UPDATE

NOTE: Only for FDD.

This message is used by UTRAN to add, replace or delete radio links in the active set of the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now".
New U-RNTI	OP		U-RNTI 10.3.3.47	
CN information elements				
CN Information info	OP		CN Information info 10.3.1.3	
RB information elements				
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
Phy CH information elements				
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing "maximum UL TX power."
Downlink radio resources				
Radio link addition information	OP	1 to <maxRL-1>		Radio link addition information required for each RL to add
>Radio link addition information	MP		Radio link addition information 10.3.6.68	
Radio link removal information	OP	1 to <maxRL>		Radio link removal information required for each RL to remove
> Radio link removal information	MP		Radio link removal information 10.3.6.69	
TX Diversity Mode	MD		TX Diversity Mode 10.3.6.86	Default value is the existing TX diversity mode.
SSDT information	OP		SSDT information	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			10.3.6.77	

10.2.2 ACTIVE SET UPDATE COMPLETE

NOTE: For FDD only.

This message is sent by UE when active set update has been completed.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
RB Information elements				
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.3 ACTIVE SET UPDATE FAILURE

NOTE: Only for FDD.

This message is sent by UE if the update of the active set has failed, e.g. because the radio link is not a part of the active set.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.4 ASSISTANCE DATA DELIVERY

This message is sent by UTRAN to convey UP assistance data to the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
Assistance data Information elements				
UP OTDOA assistance data	OP		UP OTDOA assistance data 10.3.7.103	
UP GPS assistance data	OP		UP GPS assistance data 10.3.7.90	

10.2.5 CELL CHANGE ORDER FROM UTRAN

This message is used to order a cell change from UMTS to another system e.g. GSM.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
Integrity check info	CH		Integrity check info 10.3.3.16	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
RAB information list	OP	1 to <maxRABs etup>		For each RAB to be handed over
>RAB info	MP		RAB info 10.3.4.8	
Target cell description	MP			
>CHOICE <i>Radio Access Technology</i>	MP			At least one spare choice, Criticality: Reject, is needed.
>>GSM				
>>> BSIC	MP		BSIC 10.3.8.2	
>>>BCCH ARFCN	MP		Integer (0..1023)	GSM TS 04.18
>>>NC mode	OP		Bitstring(3)	GSM TS 04.18
>>IS-2000				

10.2.6 CELL CHANGE FAILURE FROM UTRAN

This message is sent on the RRC connection used before the Cell change order from UTRAN was executed. The message indicates that the UE has failed to seize the new channel in the other system.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	CH		Integrity check info 10.3.3.16	
Other information elements				
Inter-RAT change failure	MD		Inter-RAT change failure 10.3.8.5	

10.2.7 CELL UPDATE

This message is used by the UE to initiate a cell update procedure.

RLC-SAP: TM

Logical channel: CCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
U-RNTI	MP		U-RNTI 10.3.3.47	
RRC transaction identifier	<i>CV-Failure</i>		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
START list	MP	1 to <maxCNdo mains>		START [TS 33.102] values for all CN domains.
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	START value to be used in this CN domain.
AM_RLC error indication(for c-plane)	MP		Boolean	TRUE indicates AM_RLC unrecoverable error occurred on c-plane in the UE
AM_RLC error indication(for u-plane)	MP		Boolean	TRUE indicates AM_RLC unrecoverable error occurred on u-plane in the UE
Cell update cause	MP		Cell update cause 10.3.3.3	
Failure cause	OP		Failure cause and error information 10.3.3.14	
RB timer indicator	MP		RB timer indicator 10.3.3.28	
Measurement information elements				
Measured results on RACH	OP		Measured results on RACH 10.3.7.45	

Condition	Explanation
<i>Failure</i>	This IE is mandatory if the IE "Failure cause" is present. Otherwise it is absent.

10.2.8 CELL UPDATE CONFIRM

This message confirms the cell update procedure and can be used to reallocate new RNTI information for the UE valid in the new cell.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
U-RNTI	CV-CCCH		U-RNTI 10.3.3.47	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing DRX cycle length coefficient
RLC reset indicator (for C-plane)	MD		RLC reset indicator 10.3.3.35	
RLC reset indicator (for U-plane)	MD		RLC reset indicator 10.3.3.35	
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN Information Elements				
URA identity	OP		URA identity 10.3.2.6	
RB information elements				
RB information to release list	OP	1 to <maxRB>		
>RB information to release	MP		RB information to release 10.3.4.19	
RB information to reconfigure list	OP	1 to <maxRB>		

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>RB information to reconfigure	MP		RB information to reconfigure 10.3.4.18	
RB information to be affected list	OP	1 to <maxRB>		
>RB information to be affected	MP		RB information to be affected 10.3.4.17	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
CHOICE mode				
>FDD				
>>CPCH set ID	OP		CPCH set ID 10.3.5.3	
>>>Added or Reconfigured TrCH information for DRAC list	OP	1 to <maxTrCH >		
>>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>TDD				(no data)
Downlink transport channels				
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Deleted TrCH information list	OP	1 to <maxTrCH >		

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH>		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
<i>CHOICE channel requirement</i>				
>Uplink DPCH info			Uplink DPCH info 10.3.6.88.	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
<i>CHOICE mode</i>				
>FDD				
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>TDD				(no data)
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		Send downlink information for each radio link to be set-up
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

Condition	Explanation
CCCH	This IE is mandatory when CCCH is used and ciphering is not required. Otherwise it is absent.

10.2.9 COUNTER CHECK

This message is used by the UTRAN to indicate the current COUNT-C MSB values associated to each radio bearer utilising UM or AM RLC mode and to request the UE to compare these to its COUNT-C MSB values and to report the comparison results to UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Presence	Multi	IE type and reference	Semantics description
Message Type	MP			
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
RB information elements				
RB COUNT-C MSB information	MP	1 to < maxRBallR ABs >		For each RB (excluding SRBs) using UM or AM RLC.
>RB COUNT-C MSB information	MP		RB COUNT-C MSB information 10.3.4.14	

10.2.10 COUNTER CHECK RESPONSE

This message is used by the UE to respond to a COUNTER CHECK message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Presence	Multi	IE type and reference	Semantics description
Message Type	MP			
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
RB information elements				
RB COUNT-C information	OP	1 to < maxRBallR ABs >		For each RB (excluding SRBs) using UM or AM RLC whose COUNT-C MSB values did not match with the values received from the UTRAN.
>RB COUNT-C information	MP		RB COUNT-C information 10.3.4.15	

10.2.11 DOWNLINK DIRECT TRANSFER

This message is sent by UTRAN to transfer higher layer messages.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN -> UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
CN information elements				
CN Domain Identity	MP		Core Network Domain Identity 10.3.1.1	
NAS message	MP		NAS message 10.3.1.8	

10.2.12 HANDOVER TO UTRAN COMMAND

This message is sent to the UE via other system to make a handover to UTRAN.

RLC-SAP: N/A (Sent through a different RAT)

Logical channel: N/A (Sent through a different RAT)

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
New U-RNTI	MP		U-RNTI Short 10.3.3.48	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
Ciphering algorithm	OP		Ciphering algorithm 10.3.3.4	
CHOICE specification mode	MP			
>Complete specification				
UE information elements				
RB information elements				
>>Signalling RB information to setup list	MP	1 to <maxSRBs etup>		For each signalling radio bearer established
>>>Signalling RB information to setup	MP		Signalling RB information to setup 10.3.4.24	
>>RAB information to setup list	OP	1 to <maxRABs etup>		For each RAB established
>>>RAB information for setup	MP		RAB information for setup 10.3.4.10	
Uplink transport channels				
>>UL Transport channel information common for all transport channels	MP		UL Transport channel information common for all transport channels 10.3.5.24	
>>Added or Reconfigured TrCH information	MP	1 to <maxTrCH >		
>>>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
Downlink transport channels				
>>DL Transport channel information common for all transport channels	MP		DL Transport channel information common for all transport channels 10.3.5.6	
>>Added or Reconfigured TrCH information	MP	1 to <maxTrCH >		
>>>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink radio resources				
>>Uplink DPCH info	MP		Uplink DPCH info 10.3.6.88	
>>>CHOICE <i>mode</i>	MP			
>>>>FDD				
>>>>>CPCH SET Info	OP		CPCH SET Info 10.3.6.13	
Downlink radio resources				
>>>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>>>>TDD				(no data)
>>>>>Downlink information common for all radio links	MP		Downlink information common for all radio links 10.3.6.24	
>>>>>>Downlink information per radio link	MP	1 to <maxRL>		
>>>>>>>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	
>>>>>>>Preconfiguration				
>>>>>>>>Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5	
RAB info	OP		RAB info Post 10.3.4.9	One RAB is established
>>Uplink DPCH info	MP		Uplink DPCH info Post 10.3.6.89	
Downlink radio resources				
>>>>>CHOICE <i>mode</i>				
>>>>>>>FDD				
>>>>>>>>Downlink information common for all radio links			Downlink information common for all radio links Post 10.3.6.25	
>>>>>>>>TDD				(no data)
>>>>>>>>>Downlink information per radio link	MP	1 to <maxRL>		Send downlink information for each radio link to be set-up. In TDD MaxRL is 1.
>>>>>>>>>>Downlink information for each radio link	MP		Downlink information for each radio link Post 10.3.6.28	
Frequency info	MP		Frequency info 10.3.6.36	
Maximum allowed UL TX power	MP		Maximum allowed UL TX power 10.3.6.39	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>Primary CCPCH Tx Power	MP		Primary CCPCH Tx Power 10.3.6.59	

10.2.13 HANDOVER TO UTRAN COMPLETE

This message is sent by the UE when a handover to UTRAN has been completed.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
START list	CH	1 to <maxCNdo mains>		START [3GPP TS 33.102] values for all CN domains. The IE is mandatory if it has not been transferred prior to the handover.
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	

10.2.14 INITIAL DIRECT TRANSFER

This message is used to initiate a signalling connection based on indication from the upper layers, and to transfer a NAS message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE -> UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	CH		Integrity check info 10.3.3.16	
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	
Intra Domain NAS Node Selector	MP		Intra Domain NAS Node Selector 10.3.1.6	Allocated by NAS
NAS message	MP		NAS message 10.3.1.8	
Measurement information elements				
Measured results on RACH	OP		Measured results on RACH 10.3.7.45	

10.2.15 HANDOVER FROM UTRAN COMMAND

This message is used for handover from UMTS to another system e.g. GSM. One or several messages from the other system can be included in the Inter-RAT message information element in this message. These messages are structured and coded according to that systems specification.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
RB information elements				
RAB information list	OP	1 to <maxRABs etup>		For each RAB to be handed over
>RAB info	MP		RAB info 10.3.4.8	
Other information elements				
Inter-RAT message	MP		Inter-RAT message 10.3.8.8	

10.2.16 HANDOVER FROM UTRAN FAILURE

This message is sent on the RRC connection used before the Inter-RAT Handover was executed. The message indicates that the UE has failed to seize the new channel in the other system.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Other information elements				
Inter-RAT handover failure	OP		Inter-RAT handover failure 10.3.8.6	

10.2.17 MEASUREMENT CONTROL

This message is sent by UTRAN to setup, modify or release a measurement in the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Measurement Information elements				
Measurement Identity	MP		Measurement Identity 10.3.7.48	
Measurement Command	MP		Measurement Command 10.3.7.46	
Measurement Reporting Mode	OP		Measurement Reporting Mode 10.3.7.49	
Additional measurements list	OP		Additional measurements list 10.3.7.1	
CHOICE Measurement type	CV <i>command</i>			
>Intra-frequency measurement			Intra-frequency measurement 10.3.7.36	
>Inter-frequency measurement			Inter-frequency measurement 10.3.7.16	
>Inter-RAT measurement			Inter-RAT measurement 10.3.7.27	
>UP measurement			UP measurement 10.3.7.100	
>Traffic Volume measurement			Traffic Volume measurement 10.3.7.68	
>Quality measurement			Quality measurement 10.3.7.56	
>UE internal measurement			UE internal measurement 10.3.7.77	
Physical channel information elements				
DPCH compressed mode status info	OP		DPCH compressed mode status info 10.3.6.34	

Condition	Explanation
<i>Command</i>	The IE is mandatory if the "Measurement command" IE is set to "Setup", optional if the "Measurement command" IE is set to "modify", otherwise the IE is not needed.

10.2.18 MEASUREMENT CONTROL FAILURE

This message is sent by UE, if it can not initiate a measurement as instructed by UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.19 MEASUREMENT REPORT

This message is used by UE to transfer measurement results to the UTRAN.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	CH		Integrity check info 10.3.3.16	
Measurement Information Elements				
Measurement identity	MP		Measurement identity 10.3.7.48	
Measured Results	OP		Measured Results 10.3.7.44	
Measured Results on RACH	OP		Measured Results on RACH 10.3.7.45	
Additional Measured results	OP	1 to <maxAdditionalMeas>		
>Measured Results	MP		Measured Results 10.3.7.44	
Event results	OP		Event results 10.3.7.7	

10.2.20 PAGING TYPE 1

This message is used to send information on the paging channel. One or several UEs, in idle or connected mode, can be paged in one message, which also can contain other information.

RLC-SAP: TM

Logical channel: PCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information elements				
Paging record list	OP	1 to <maxPage 1>		
>Paging record	MP		Paging record 10.3.3.23	
Other information elements				
BCCH modification info	OP		BCCH modification info 10.3.8.1	

If the encoded message does not fill a transport block, the RRC layer shall add padding according to subclause 12.1.

10.2.21 PAGING TYPE 2

This message is used to page an UE in connected mode, when using the DCCH for CN originated paging.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Paging cause	MP		Paging cause 10.3.3.22	
CN Information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	
Paging Record Type Identifier	MP		Paging Record Type Identifier 10.3.1.10	

10.2.22 PHYSICAL CHANNEL RECONFIGURATION

This message is used by UTRAN to assign, replace or release a set of physical channels used by a UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB information elements				
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing value of the maximum allowed UL TX power

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>channel requirement</i>	OP			
>Uplink DPCH info			Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
>CPCH set ID			CPCH set ID 10.3.5.3	
Downlink radio resources				
CHOICE <i>mode</i>	MP			
>FDD				
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
> TDD				(no data)
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		Send downlink information for each radio link
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

10.2.23 PHYSICAL CHANNEL RECONFIGURATION COMPLETE

This message is sent from the UE when a physical channel reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.24 PHYSICAL CHANNEL RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to assign, replace or release a set of physical channel(s).

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message type	MP		Message type	
UE information elements				
RRC transaction identifier	OP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.25 PHYSICAL SHARED CHANNEL ALLOCATION

NOTE: Only for TDD.

This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE.

RLC-SAP: UM on SHCCH, UM on DCCH

Logical channel: SHCCH or DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message type	
C-RNTI	OP		C-RNTI 10.3.3.8	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Uplink timing advance Control	MD		Uplink Timing Advance Control 10.3.6.96	Default value is the existing value for uplink timing advance
PUSCH capacity allocation info	OP		PUSCH Capacity Allocation info 10.3.6.64	
PDSCH capacity allocation info	OP		PDSCH Capacity Allocation info 10.3.6.42	
Confirm request	MD		Enumerated(No Confirm, Confirm PDSCH, Confirm PUSCH)	Default value is No Confirm
ISCP Timeslot list	OP	1 to maxTS		
>Timeslot number	MP		Timeslot number 10.3.6.84	Timeslot numbers, for which the UE shall report the timeslot ISCP in PUSCH CAPACITY REQUEST message.

10.2.26 PUSCH CAPACITY REQUEST

NOTE: Only for TDD.

This message is used by the UE for request of PUSCH resources to the UTRAN.

RLC-SAP: TM

Logical channel: SHCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
C-RNTI	OP		C-RNTI 10.3.3.8	
RRC transaction identifier	CV-ProtErr		RRC transaction identifier 10.3.3.36	
Traffic Volume	OP		Traffic Volume, measured results list 10.3.7.67	
Timeslot list	OP	1 to maxTS		
>Timeslot number	MP		Timeslot number 10.3.6.84	
>Timeslot ISCP	MP		Timeslot ISCP info 10.3.7.65	
Primary CCPCH RSCP	OP		Primary CCPCH RSCP info 10.3.7.54	
CHOICE Allocation confirmation	OP			
>PDSCH Confirmation	MP		Integer(1..Hi PDSCHIdentities)	
>PUSCH Confirmation	MP		Integer(1..Hi PUSCHIdentities)	
Protocol error indicator	MD		Protocol error indicator 10.3.3.27	Default value is FALSE
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	

Condition	Explanation
<i>ProtErr</i>	If the IE "Protocol error indicator" has the value "TRUE"

10.2.27 RADIO BEARER RECONFIGURATION

This message is sent from UTRAN to reconfigure parameters related to a change of QoS. This procedure can also change the multiplexing of MAC, reconfigure transport channels and physical channels.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN information elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB information elements				
RAB information to reconfigure list	OP	1 to <maxRABse tup >		
>RAB information to reconfigure	MP		RAB information to reconfigure 10.3.4.11	
RB information to reconfigure list	OP	1 to <maxRB>		
>RB information to reconfigure	MP		RB information to reconfigure 10.3.4.18	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB information to be affected list	OP	1 to <maxRB>		
>RB information to be affected	MP		RB information to be affected 10.3.4.17	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
Deleted TrCH information list	OP	1 to <maxTrCH >		
> Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
CHOICE <i>mode</i>	OP			
>FDD				
>>CPCH set ID	OP		CPCH set ID 10.3.5.3	
>> Added or Reconfigured TrCH information for DRAC list	OP	1 to <maxTrCH >		
>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>TDD				(no data)
Downlink transport channels				
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
<i>CHOICE channel requirement</i>				
>Uplink DPCH info			Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
<i>CHOICE mode</i>				
>FDD	MP			
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>TDD				(no data)
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

10.2.28 RADIO BEARER RECONFIGURATION COMPLETE

This message is sent from the UE when a RB and signalling link reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.29 RADIO BEARER RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to establish the physical channel(s).

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded List	OP	1.to.<max RB>		
>Radio bearer for which reconfiguration would have succeeded	MP		RB identity, 10.3.4.16	

10.2.30 RADIO BEARER RELEASE

This message is used by UTRAN to release a radio bearer. It can also include modifications to the configurations of transport channels and/or physical channels. It can simultaneously indicate release of a signalling connection when UE is connected to more than one CN domain.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
Signalling Connection release indication	OP		CN domain identity 10.3.1.1	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB Information Elements				
RAB information to reconfigure list	OP	1 to <maxRABse tup >		
>RAB information to reconfigure	MP		RAB information to reconfigure 10.3.4.11	
RB information to release list	MP	1 to <maxRB>		
>RB information to release	MP		RB information to release 10.3.4.19	
RB information to be affected list	OP	1 to <maxRB>		
>RB information to be affected	MP		RB	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			information to be affected 10.3.4.17	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
CHOICE <i>mode</i>	OP			
>FDD				
>>CPCH set ID	OP		CPCH set ID 10.3.5.3	
>> Added or Reconfigured TrCH information for DRAC list	OP	1 to <maxTrCH >		
>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>TDD				(no data)
Downlink transport channels				
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured DL	MP		Added or	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TrCH information			Reconfigured DL TrCH information 10.3.5.1	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
<i>CHOICE channel requirement</i>				
>Uplink DPCH info			Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
<i>CHOICE mode</i>				
>FDD	MP			
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>TDD				(no data)
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		Send downlink information for each radio link to be set-up
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

10.2.31 RADIO BEARER RELEASE COMPLETE

This message is sent from the UE when radio bearer release has been completed.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for the new cell after handover in a synchronous TDD network
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.32 RADIO BEARER RELEASE FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if radio bearer can not be released.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded	OP	1.to.<max RB>		
>Radio bearer for which reconfiguration would have been succeeded	MP		RB identity, 10.3.4.16	

10.2.33 RADIO BEARER SETUP

This message is sent by UTRAN to the UE to establish new radio bearer(s). It can also include modifications to the configurations of transport channels and/or physical channels.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB Information Elements				
Signalling RB information to setup list	OP	1 to <maxSRBs etup>		For each signalling radio bearer established
>Signalling RB information to setup	MP		Signalling RB information to setup 10.3.4.24	
RAB information to setup list	OP	1 to <maxRABs etup>		For each RAB established
>RAB information for setup	MP		RAB information for setup 10.3.4.10	
RB information to be affected list	OP	1 to <maxRB>		
>RB information to be affected	MP		RB information to be	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			affected 10.3.4.17	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted UL TrCH information	MP		Deleted UL TrCH information 10.3.5.5	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
CHOICE <i>mode</i>	OP			
>FDD				
>>CPCH set ID	OP		CPCH set ID 10.3.5.3	
>> Added or Reconfigured TrCH information for DRAC list	OP	1 to <maxTrCH >		
>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>TDD				(no data)
Downlink transport channels				
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Deleted TrCH information list	OP	1 to <maxTrCH >		
>Deleted DL TrCH information	MP		Deleted DL TrCH information 10.3.5.4	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			information 10.3.5.1	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
<i>CHOICE channel requirement</i>	OP			
>Uplink DPCH info			Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
<i>CHOICE mode</i>	MP			
>FDD				
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>TDD				(no data)
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		Send downlink information for each radio link
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

10.2.34 RADIO BEARER SETUP COMPLETE

This message is sent by UE to confirm the establishment of the radio bearer.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
CHOICE mode	OP			
>FDD				(no data)
>TDD				
>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	This information element shall be present in case of handover procedure if timing advance is enabled. Calculated timing advance value for the new cell after handover in a synchronous TDD network
START	OP		START 10.3.3.38	This information element is not needed for transparent mode RBs
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.35 RADIO BEARER SETUP FAILURE

This message is sent by UE, if it does not support the configuration given by UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	
RB information elements				
Radio bearers for which reconfiguration would have succeeded	OP	1.to.<max RB>		
> Radio bearer for which reconfiguration would have succeeded	MP		RB identity, 10.3.4.16	

10.2.36 RRC CONNECTION REJECT

The network transmits this message when the requested RRC connection cannot be accepted.

RLC-SAP: UM

Logical channel: CCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Initial UE identity	MP		Initial UE identity 10.3.3.15	
Rejection cause	MP		Rejection cause 10.3.3.31	
Wait time	MP		Wait time 10.3.3.50	
Redirection info	OP		Redirection info 10.3.3.29	

10.2.37 RRC CONNECTION RELEASE

This message is sent by UTRAN to release the RRC connection. The message also releases the signalling connection and all radio bearers between the UE and UTRAN.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
U-RNTI	CV-CCCH		U-RNTI 10.3.3.47	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CV-DCCH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
N308	CH Cell_DCH		Integer(1..8)	
Release cause	MP		Release cause 10.3.3.32	
Other information elements				
Rplmn information	OP		Rplmn information 10.3.8.15	

Condition	Explanation
<i>CCCH</i>	This IE is only sent when CCCH is used.
<i>DCCH</i>	This IE is only sent when DCCH is used.
<i>Cell_DCH</i>	This IE is present when UE is in CELL_DCH state.

10.2.38 RRC CONNECTION RELEASE COMPLETE

This message is sent by UE to confirm that the RRC connection has been released.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Error indication	OP		Failure cause and error information 10.3.3.14	

10.2.39 RRC CONNECTION REQUEST

RRC Connection Request is the first message transmitted by the UE when setting up an RRC Connection to the network.

RLC-SAP: TM

Logical channel: CCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Initial UE identity	MP		Initial UE identity 10.3.3.15	
Establishment cause	MP		Establishment cause 10.3.3.11	
Protocol error indicator	MD		Protocol error indicator 10.3.3.27	Default value is FALSE
Measurement information elements				
Measured results on RACH	OP		Measured results on RACH 10.3.7.45	

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1.

10.2.40 RRC CONNECTION SETUP

This message is used by the network to accept the establishment of an RRC connection for an UE, including assignment of signalling link information, transport channel information and optionally physical channel information.

RLC-SAP: UM

Logical channel: CCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
Initial UE identity	MP		Initial UE identity 10.3.3.15	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	MP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MP		UTRAN DRX cycle length coefficient 10.3.3.49	
Capability update requirement	MD		Capability update requirement 10.3.3.2	Default value is defined in subclause 10.3.3.2
RB Information Elements				
Signalling RB information to setup list	MP	3 to 4		Information for signalling radio bearers, in the order RB 1 up to 4.
>Signalling RB information to setup	MP		Signalling RB information to setup 10.3.4.24	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
Added or Reconfigured TrCH information list	CV- <i>Cell_FACH</i>	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
Downlink transport channels				

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Added or Reconfigured TrCH information list	CV- <i>Cell_FACH</i>	1 to <maxTrCH >		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
<i>CHOICE channel requirement</i>				
>Uplink DPCH info	OP		Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
Downlink information common for all radio links	OP		Downlink information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <MaxRL>		Send downlink information for each radio link to be set-up
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

Condition	Explanation
<i>Cell_FACH</i>	This IE is optional when UE's final state is CELL_FACH, else it is mandatory

10.2.41 RRC CONNECTION SETUP COMPLETE

This message confirms the establishment of the RRC Connection by the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
START list	MP	1 to <maxCNdo mains>		START [TS 33.102] values for all CN domains.
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	START value to be used in this CN domain.
UE radio access capability	OP		UE radio access capability 10.3.3.42	
Other information elements				
UE system specific capability	OP	1 to <maxSystemCapability>		
>Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability 10.3.8.7	

10.2.42 RRC STATUS

This message is sent to indicate a protocol error.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Identification of received message	CV- <i>Message identified</i>			
> Received message type	MP		Message Type	
> RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Other information elements				
Protocol error information	MP		Protocol error information 10.3.8.12	

Condition	Explanation
<i>Message identified</i>	If the IE "Protocol error cause" in the IE "Protocol error information" has any other value than "ASN.1 violation or encoding error" or "Message type non-existent or not implemented"

10.2.43 SECURITY MODE COMMAND

This message is sent by UTRAN to start or reconfigure ciphering and/or integrity protection parameters.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN to UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
Security capability	MP		Security capability 10.3.3.37	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	Only present if ciphering shall be controlled
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	Only present if integrity protection shall be controlled
CN Information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	Indicates which cipher and integrity protection keys are applicable

10.2.44 SECURITY MODE COMPLETE

This message is sent by UE to confirm the reconfiguration of ciphering and/or integrity protection.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	MP		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
RB Information elements				
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	

10.2.45 SECURITY MODE FAILURE

This message is sent to indicate a failure to act on a received SECURITY MODE CONTROL message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.46 SIGNALLING CONNECTION RELEASE

This message is used to notify the UE that its ongoing signalling connection to a CN domain has been released.

RLC-SAP: AM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	

10.2.47 SIGNALLING CONNECTION RELEASE REQUEST

This message is used by the UE to request for the release of an existing signalling connection.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Message Type	MP		Message type	
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	

10.2.48 SYSTEM INFORMATION

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message type	OP		Message type	The message type is mandatory on the FACH, and absent on the BCH
SFNprime	CV channel		Integer(0..4094 by step of 2)	SFN=SFNprime (for first 10ms frame of 20ms TTI), SFN=SFNprime+1 (for last 10ms frame of 20ms TTI)
CHOICE Segment combination	MP			
>Combination 1				(no data)
>Combination 2				
>>First Segment	MP		First Segment, 10.2.48.1	
>Combination 3				
>>Subsequent Segment	MP		Subsequent Segment, 10.2.48.3	
>Combination 4				
>>Last segment	MP		Last segment (short), 10.2.48.5	
>Combination 5				
>>Last segment	MP		Last Segment (short) 10.2.48.5	
>>First Segment	MP		First Segment (short), 10.2.48.2	
>Combination 6				
>>Last Segment	MP		Last Segment (short), 10.2.48.5	
>>Complete list		1 to maxSIBper Msg		Note 1
>>>Complete			Complete SIB (short), 10.2.48.7	
>Combination 7				
>>Last Segment	MP		Last Segment (short), 10.2.48.5	
>>Complete list	MP	1..16		Note 1
>>>Complete	MP		Complete SIB (short), 10.2.48.7	
>>First Segment	MP		First Segment (short), 10.2.48.2	
>Combination 8				
>>Complete list	MP	1 to maxSIBper Msg		Note 1
>>>Complete	MP		Complete SIB	

			(short), 10.2.48.7	
>Combination 9				
>>Complete list	MP	1..MaxSIB perMsg		Note 1
>>>Complete	MP		Complete SIB (short), 10.2.48.7	
>>First Segment	MP		First Segment (short), 10.2.48.2	
>Combination 10				
>>> Complete SIB of size 215 to 226	MP		Complete SIB, 10.2.48.6	
>Combination 11				
>>Last segment of size 215 to 222	MP		Last segment, 10.2.48.4	

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1. Padding is needed e.g. if the remaining space is insufficient to start a new First Segment (which requires several bits for SIB type, SEG_COUNT and SIB data).

NOTE 1: If Combination 6 - 9 contains a Master information block Master information shall be located as the first IE in the list.

10.2.48.1 First Segment

This segment type is used to transfer the first segment of a segmented system information block. The IE is used when the first segment fills the entire transport block (Combination 1).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SEG_COUNT	MP		SEG COUNT, 10.3.8.17	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	

10.2.48.2 First Segment (short)

This segment type is used to transfer the first segment of a segmented system information block. The IE is used when the first segment is concatenated after other segments in a transport block (Combination 5, 7 and 9).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SEG_COUNT	MP		SEG COUNT, 10.3.8.17	
SIB data variable	MP		SIB data variable, 10.3.8.16	

10.2.48.3 Subsequent Segment

This segment type is used to transfer a subsequent segment of a segmented system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	

10.2.48.4 Last Segment

This segment type is used to transfer the last segment of a segmented system information block. The IE is used when the last segment has a length, excluding length denominator, from 215 through 222 (Combination 11).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data fixed	MP		SIB data fixed, 10.3.8.19	In case the SIB data is less than 222 bits, padding shall be used. The same padding bits shall be used as defined in clause 12.1

10.2.48.5 Last Segment (short)

This segment type is used to transfer the last segment of a segmented system information block. The IE is used when the last segment has a length, excluding length denominator, of upto 214 bits (Combination 4, 5, 6 and 7).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
Segment index	MP		Segment Index, 10.3.8.18	
SIB data variable	MP		SIB data variable, 10.3.8.20	

10.2.48.6 Complete SIB

This segment type is used to transfer a non-segmented system information block. The IE is used when the complete SIB has a length, excluding length denominator, from 215 through 226 (Combination 10).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SIB data fixed	MP		Bit string (226)	In case the SIB data is less than 226 bits, padding shall be used. The same padding bits shall be used as defined in clause 12.1

10.2.48.7 Complete SIB (short)

This segment type is used to transfer a non-segmented system information block. The IE is used when the complete SIB has a length, excluding length denominator, of upto 214 bits (Combination 6, 7, 8, 9 and 10).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
SIB type	MP		SIB Type, 10.3.8.21	
SIB data variable	MP		SIB data variable, 10.3.8.20	

10.2.48.8 System Information Blocks

The IE "SIB data" within the IEs, "First Segment", "Subsequent or last Segment" and "Complete SIB" contains either complete system information block or a segment of a system information block. The actual system information blocks are defined in the following clauses.

10.2.48.8.1 Master Information Block

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
MIB Value tag	MP		MIB Value tag 10.3.8.9	
CN information elements				
Supported PLMN types	MP		PLMN Type 10.3.1.12	
PLMN Identity	CV GSM		PLMN Identity 10.3.1.11	
ANSI-41 information elements				
ANSI-41 Core Network Information	CV ANSI-41		ANSI-41 Core Network Information 10.3.9.1	
References to other system information blocks and scheduling blocks	MP		References to other system information blocks and scheduling blocks 10.3.8.14	

Condition	Explanation
GSM	The IE is mandatory if the IE "Supported PLMN Types" is set to 'GSM-MAP' or 'GSM-MAP AND ANSI-41', and not needed otherwise
ANSI-41	The IE is mandatory if the IE "Supported PLMN Types" is set to 'ANSI-41' or 'GSM-MAP AND ANSI-41', and not needed otherwise

10.2.48.8.2 Scheduling Block 1

Information Element/Group name	Need	Multi	Type and reference	Semantics description
References to other system information blocks	MP		References to other system information blocks 10.3.8.13	

10.2.48.8.3 Scheduling Block 2

Information Element/Group name	Need	Multi	Type and reference	Semantics description
References to other system information blocks	MP		References to other system information blocks 10.3.8.13	

10.2.48.8.4 System Information Block type 1

The system information block type 1 contains NAS system information as well as UE timers and counters to be used in idle mode and in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN information elements				
CN common GSM-MAP NAS system information	MP		NAS system information (GSM-MAP) 10.3.1.9	
CN domain system information list	MP	1 to <maxCNdomains>		Send CN information for each CN domain.
>CN domain system information	MP		CN domain system information 10.3.1.2	
UE information				
UE Timers and constants in idle mode	MD		UE Timers and constants in idle mode 10.3.3.44	Default value means that for all timers and constants - For parameters with need MD, the defaults specified in 10.3.3.44 apply and - For parameters with need OP, the parameters are absent
UE Timers and constants in connected mode	MD		UE Timers and constants in connected mode 10.3.3.43	Default value means that for all timers and constants - For parameters with need MD, the defaults specified in 10.3.3.43 apply and - For parameters with need OP, the parameters are absent

10.2.48.8.5 System Information Block type 2

The system information block type 2 contains the URA identity.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN mobility information elements				
URA identity list	MP	1 ..<maxURA>		
>URA identity	MP		URA identity 10.3.2.6	

10.2.48.8.6 System Information Block type 3

The system information block type 3 contains parameters for cell selection and re-selection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB4 Indicator	MP		Boolean	TRUE indicates that SIB4 is broadcast in the cell.
UTRAN mobility information elements				
Cell identity	MP		Cell identity 10.3.2.2	
Cell selection and re-selection info	MP		Cell selection and re-selection info for SIB3/4 10.3.2.3	
Cell Access Restriction	MP		Cell Access Restriction 10.3.2.1	

10.2.48.8.7 System Information Block type 4

The system information block type 4 contains parameters for cell selection and re-selection to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN mobility information elements				
Cell identity	MP		Cell identity 10.3.2.2	
Cell selection and re-selection info	MP		Cell selection and re-selection info for SIB3/4 10.3.2.3	
Cell Access Restriction	MP		Cell Access Restriction 10.3.2.1	

10.2.48.8.8 System Information Block type 5

The system information block type 5 contains parameters for the configuration of the common physical channels in the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB6 Indicator	MP		Boolean	TRUE indicates that SIB6 is broadcast in the cell.
PhyCH information elements				
PICH Power offset	MP		PICH Power offset 10.3.6.50	
CHOICE <i>mode</i>	MP			
>FDD				
>>AICH Power offset	MP		AICH Power offset 10.3.6.3	
>TDD				
>>PUSCH system information	OP		PUSCH system information 10.3.6.66	
>>PDSCH system information	OP		PDSCH system information 10.3.6.46	
>>Midamble configuration	MD		Midamble configuration 10.3.6.40	Default value is defined in 10.3.6.40
>>TDD open loop power control	MP		TDD open loop power control 10.3.6.79	
Primary CCPCH info	OP		Primary CCPCH info 10.3.6.57	Note 1
PRACH system information list	MP		PRACH system information list 10.3.6.55	
Secondary CCPCH system information	MP		Secondary CCPCH system information 10.3.6.72	
CBS DRX Level 1 information	CV CTCH		CBS DRX Level 1 information 10.3.8.3	

NOTE 1: DL scrambling code of the Primary CCPCH is the same as the one for Primary CPICH (FDD only).

Condition	Explanation
CTCH	The IE is mandatory if the IE "CTCH indicator" is equal to TRUE for at least one FACH, otherwise the IE is not needed in the message

10.2.48.8.9 System Information Block type 6

The system information block type 6 contains parameters for the configuration of the common and shared physical channels to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PhyCH information elements				
PICH Power offset	MP		PICH Power offset 10.3.6.50	
CHOICE mode	MP			
>FDD				
>>AICH Power offset	MP		AICH Power offset 10.3.6.3	
>>CSICH Power offset	OP		CSICH Power offset 10.3.6.15	
>TDD				
>>PUSCH system information	OP		PUSCH system information 10.3.6.66	
>>PDSCH system information	OP		PDSCH system information 10.3.6.46	
>>Midamble configuration	MD		Midamble configuration 10.3.6.40	Default value is defined in 10.3.6.40
>>TDD open loop power control	MP		TDD open loop power control 10.3.6.79	
Primary CCPCH info	OP		Primary CCPCH info 10.3.6.57	Note 1
PRACH system information list	OP		PRACH system information list 10.3.6.55	
Secondary CCPCH system information	OP		Secondary CCPCH system information 10.3.6.72	
CBS DRX Level 1 information	CV CTCH		CBS DRX Level 1 information 10.3.8.3	

NOTE 1: DL scrambling code of the Primary CCPCH is the same as the one for Primary CPICH (FDD only).

Condition	Explanation
CTCH	The IE is mandatory if the IE "CTCH indicator" is equal to TRUE for at least one FACH, otherwise the IE is not needed

10.2.48.8.10 System Information Block type 7

The system information block type 7 contains the fast changing parameters UL interference and Dynamic persistence level

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>UL interference	MP		UL interference 10.3.6.87	
>TDD				(no data)
PhyCH information elements				
PRACHs listed in system information block type 5	MP	1 to <maxPRACH>		The order of the PRACHs is the same as in system information block type 5.
>Dynamic persistence level	MP		Dynamic persistence level 10.3.6.35	
PRACHs listed in system information block type 6	OP	1 to <maxPRA CH>		The order of the PRACHs is the same as in system information block type 6.
>Dynamic persistence level	MP		Dynamic persistence level 10.3.6.35	
Expiration Time Factor	MD		Expiration Time Factor 10.3.3.12	Default is 1.

10.2.48.8.11 System Information Block type 8

NOTE: Only for FDD.

The system information block type 8 contains static CPCH information to be used in the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE information				
CPCH parameters	MP		CPCH parameters 10.3.3.7	
PhyCH information elements				
CPCH set info list	MP	1 to <maxCPC Hsets>		
>CPCH set info	MP		CPCH set info 10.3.6.13	

10.2.48.8.12 System Information Block type 9

NOTE: Only for FDD.

The system information block type 9 contains CPCH information to be used in the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PhyCH information elements				
CPCH set persistence levels list	MP	..1 to <maxCPC Hsets>		
>CPCH set persistence levels	MP		CPCH persistence levels 10.3.6.12	

10.2.48.8.13 System Information Block type 10

NOTE: Only for FDD.

The system information block type 10 contains information to be used by UEs having their DCH controlled by a DRAC procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE information				
DRAC system information	MP		DRAC system information 10.3.3.9	DRAC information is sent for each class of terminal

10.2.48.8.14 System Information Block type 11

The system information block type 11 contains measurement control information to be used in the cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB12 Indicator	MP		Boolean	TRUE indicates that SIB12 is broadcast in the cell.
Measurement information elements				
FACH measurement occasion info	OP		FACH measurement occasion info 10.3.7.8	
Measurement control system information	MP		Measurement control system information 10.3.7.47	

10.2.48.8.15 System Information Block type 12

The system information block type 12 contains measurement control information to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement information elements				
FACH measurement occasion info	OP		FACH measurement occasion info 10.3.7.8	
Measurement control system information	MP		Measurement control system information 10.3.7.47	

10.2.48.8.16 System Information Block type 13

The system information block type 13 contains ANSI-41 system information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Other information elements				
CN Information Elements				
CN Domain system information list	MP	1 to <maxCNdo mains>		Send CN information for each CN domain.
>CN Domain system information	MP		CN Domain system information 10.3.1.2	
UE Information				
UE timers and constants in idle mode	OP		UE timers and constants in idle mode 10.3.3.44	
Capability update requirement	MD		Capability update requirement 10.3.3.2	Default value is defined in subclause 10.3.3.2

10.2.48.8.16.1 System Information Block type 13.1

The system information block type 13.1 contains the ANSI-41 RAND information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 RAND information	MP		ANSI-41 RAND information 10.3.9.6	

10.2.48.8.16.2 System Information Block type 13.2

The system information block type 13.2 contains the ANSI-41 User Zone Identification information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 User Zone Identification information	MP		ANSI-41 User Zone Identification information 10.3.9.7	

10.2.48.8.16.3 System Information Block type 13.3

The system information block type 13.3 contains the ANSI-41 Private Neighbour List information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 Private Neighbour List information	MP		ANSI-41 Private Neighbour List information 10.3.9.5	

10.2.48.8.16.4 System Information Block type 13.4

The system information block type 13.4 contains the ANSI-41 Global Service Redirection information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 information elements				
ANSI-41 Global Service Redirection information	MP		ANSI-41 Global Service Redirection information 10.3.9.2	

10.2.48.8.17 System Information Block type 14

NOTE: Only for TDD.

The system information block type 14 contains parameters for common and dedicated physical channel uplink outer loop power control information to be used in both idle and connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PhyCH information elements				
Individual Timeslot interference list	MP	1 to <maxTS>		
>Individual Timeslot interference	MP		Individual Timeslot interference 10.3.6.38	
Expiration Time Factor	MD		Expiration Time Factor 10.3.3.12	Default is 1.

10.2.48.8.18 System Information Block type 15

The system information block type 15 contains information useful for UP. In particular it allows the UE based method to perform localization without dedicated signalling. For the UE assisted methods the signalling is reduced.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UP Cipher GPS Data Indicator	OP		UP Cipher GPS Data Indicator 10.3.7.86	This is included if the SIB types 15.1, 15.2 & 15.3 are ciphered in accordance with the Data Assistance Ciphering Algorithm specified in [18]
UP OTDOA assistance for SIB	OP		UP OTDOA assistance for SIB 10.3.7.104	

10.2.48.8.18.1 System Information Block type 15.1

The system information block type 15.1 contains information useful for UP DGPS Corrections. The DGPS Corrections message contents are based on a Type-1 message of version 2.2 of the RTCM-SC-104 recommendation for differential service. This format is a standard of the navigation industry and is supported by all DGPS receivers.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UTRAN Time Flag	MP		Bitstring(1)	
Node B Clock Drift Flag	MP		Bitstring(1)	
Node B Clock Drift	OP		Real(-0.1..0.1 by a proper step)	This IE provides an estimate of the drift rate of the Node B clock relative to GPS time. It has units of $\mu\text{sec}/\text{sec}$ (ppm) and a range of ± 0.1 . This IE aids the UE in maintaining the relation between GPS and cell timing over a period of time. A positive value for Node B Clock Drift indicates that the Node B clock is running at a greater frequency than desired.
Reference Location	MP		As defined in TS23.032	Provides a prior knowledge of the approximate location of the UE
SFN	OP		Integer(0..4095)	The SFN that occurs at the Reference GPS TOW time
Reference GPS TOW	MP		Integer(0..6.047*10 ¹¹)	GPS Time of Week with scaling factor of 1 usec. This field time-stamps the start of the frame with SFN=0.
Status/Health	MP		Enumerated(UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.2, UDRE scale 0.1, no data, invalid data)	This field indicates the status of the differential corrections.
DPGS information	CV-Status	1..<maxSat >		The following fields contain the DPGS corrections. If the Cipher information is included these fields are ciphered.
>SatID	MP		Enumerated (0...63)	The satellite ID number.
>IODE	MP		Integer(0..255)	This IE is the sequence number for the ephemeris for the particular satellite. The MS can use this IE to determine if new ephemeris is used for calculating the corrections that are provided in the broadcast message. This eight-bit IE is incremented for each new set of ephemeris for the satellite and may occupy the numerical range of [0, 239] during normal operations.
>UDRE	MP		Enumerated(UDRE \leq 1.0 m, 1.0m <	User Differential Range Error. This field provides an estimate of the uncertainty (1- σ) in the corrections for the particular satellite. The value in this field

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
			UDRE \leq 4.0m, 4.0m < UDRE \leq 8.0m, 8.0m < UDRE)	shall be multiplied by the UDRE Scale Factor in the Status field to determine the final UDRE estimate for the particular satellite.
>PRC	MP		Integer(-2047..2047)	Scaling factor 0.32 meters (different from [13])
>RRC	MP		Integer(-127..127)	Scaling factor 0.032 meters/sec (different from [13])
>Delta PRC2	MP		Integer(-127..127)	The difference in the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris two issues ago IODE -2.
>Delta RRC2	MP		Integer(-7..7)	The difference in the pseudorange rate-of-change correction between the satellite's ephemeris identified by IODE and IODE-2.

Condition	Explanation
<i>Status/Health</i>	This IE is mandatory if "status" is not equal to "no data" or "invalid data", otherwise the IE is not needed

10.2.48.8.18.2 System Information Block type 15.2

The system information block type 15.2 contains information useful for ephemeris and clock corrections of a particular satellite. These IE fields are extracted from the subframes 1 to 3 of the GPS navigation message [12].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Transmission TOW	MP		Enumerated(0..1048575)	The approximate GPS time-of-week when the message is broadcast
SatID	MP		Enumerated(0..63)	Satellite ID
TLM Message	MP		Bit string(14)	
TLM Revd (C)	MP		Bit string(2)	
HOW	MP		Bit string(22)	
WN	MP		Bit string(10)	
C/A or P on L2	MP		Bit string(2)	
URA Index	MP		Bit string(4)	
SV Health	MP		Bit string(6)	
IODC	MP		Bit string(10 ⁽¹⁾)	
L2 P Data Flag	MP		Bit string(1)	
SF 1 Reserved	MP		Bit string(87)	
T _{GD}	MP		Bit string(8)	
t _{oc}	MP		Bit string(16 ⁽¹⁾)	
af ₂	MP		Bit string(8)	
af ₁	MP		Bit string(16)	
af ₀	MP		Bit string(22)	
C _{rs}	MP		Bit string(16)	
Δn	MP		Bit string(16)	
M ₀	MP		Bit string(32)	
C _{uc}	MP		Bit string(16)	
e	MP		Bit string(32 ⁽¹⁾)	
C _{us}	MP		Bit string(16)	
(A) ^{1/2}	MP		Bit string(32 ⁽¹⁾)	
t _{oe}	MP		Bit string(16 ⁽¹⁾)	
Fit Interval Flag	MP		Bit string(1)	
AODO	MP		Bit string(5)	
C _{ic}	MP		Bit string(16)	
OMEGA ₀	MP		Bit string(32)	
C _{is}	MP		Bit string(16)	
i ₀	MP		Bit string(32)	
C _{rc}	MP		Bit string(16)	
ω	MP		Bit string(32)	
OMEGA _{dot}	MP		Bit string(24)	
ldot	MP		Bit string(14)	
Spare/zero fill	MP		Bit string(20)	

10.2.48.8.18.3 System Information Block type 15.3

The system information block type 15.3 contains information useful for ionospheric delay, UTC offset, and Almanac. These IE fields are extracted from the subframes 4 and 5 of the GPS navigation message, excluding the parity bits and other redundant bits [12].

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Transmission TOW	MP		Enumerated(0..1048575)	The approximate GPS time-of-week when the message is broadcast
SatMask	MP		Bitstring(1..32)	indicates the satellites that contain the pages being broadcast in this data set
LSB TOW	MP		Bit string(8)	
GPS Info	MP	1 to <Max_Dat_rep>		
>SFIO 0	MP		Bit string(1)	Each repetition corresponds to a different page no. as described in the table below
>Data ID	MP		Bit string(2)	
>Page No.	MP		Bit string(6)	
>Word 3	MP		Bit string(16)	
>Word 4	MP		Bit string(24)	
>Word 5	MP		Bit string(24)	
>Word 6	MP		Bit string(24)	
>Word 7	MP		Bit string(24)	
>Word 8	MP		Bit string(24)	
>Word 9	MP		Bit string(24)	
>Word 10	MP		Bit string(22)	
Spare/zero fill	MP		Bit string(5)	

Mapping of Almanac, Health, Iono, and UTC Data to Subframe Number and Page Number

Data Type	Subframe	Page(s)
Almanac Data (SV1 – 24)	5	1 - 24
Almanac Data (SV25 – 32)	4	2, 3, 4, 5, 7, 8, 9, 10
SV Health (SV1 – 24)	5	25
SV Health (SV25 – 32)	4	25
Iono/UTC Corrections	4	18

Multi Bound	Explanation
Max_Dat_rep	Maximum number of repeats=3

10.2.48.8.19 System Information Block type 16

The system information block type 16 contains radio bearer, transport channel and physical channel parameters to be stored by UE in idle and connected mode for use during handover to UTRAN.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UE information elements				
Re-establishment timer	MP		Re-establishment timer 10.3.3.30	
RB information elements				
Predefined RB configuration	MP		Predefined RB configuration 10.3.4.7	
TrCH Information Elements				
Predefined TrCH configuration	MP		Predefined TrCH configuration 10.3.5.9	
PhyCH Information Elements				
Predefined PhyCH configuration	MP		Predefined PhyCH configuration 10.3.6.56	

10.2.48.8.20 System Information Block type 17

NOTE: Only for TDD.

The system information block type 17 contains fast changing parameters for the configuration of the shared physical channels to be used in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PhyCH information elements				
PUSCH system information	OP		PUSCH system information 10.3.6.66	
PDSCH system information	OP		PDSCH system information 10.3.6.46	

10.2.49 SYSTEM INFORMATION CHANGE INDICATION

This message is used to send information on FACH to the UEs in state CELL_FACH about coming modification of the system information.

RLC-SAP: TM

Logical channel: BCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
Other information elements				
BCCH modification info	MP		BCCH modification info 10.3.8.1	

If the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1.

10.2.50 TRANSPORT CHANNEL RECONFIGURATION

This message is used by UTRAN to configure the transport channel of a UE. This also includes a possible reconfiguration of physical channels. The message can also be used to assign a TFC subset and reconfigure physical channel.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
Activation time	MD		Activation time 10.3.3.1	Default value is "now"
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB information elements				
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	
TrCH Information Elements				
Uplink transport channels				
UL Transport channel information common for all	OP		UL Transport channel	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
transport channels			information common for all transport channels 10.3.5.24	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
CHOICE <i>mode</i>	OP			
>FDD				
>>CPCH set ID	OP		CPCH set ID 10.3.5.3	
>> Added or Reconfigured TrCH information for DRAC list	OP	1 to <maxTrCH >		
>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>TDD				(no data)
Downlink transport channels				
DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
Added or Reconfigured TrCH information list	OP	1 to <maxTrCH >		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	
PhyCH information elements				
Frequency info	MD		Frequency info 10.3.6.36	Default value is the existing value of frequency information
Uplink radio resources				
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	Default value is the existing maximum UL TX power
CHOICE <i>channel requirement</i>	OP			
>Uplink DPCH info			Uplink DPCH info 10.3.6.88	
>CPCH SET Info			CPCH SET Info 10.3.6.13	
Downlink radio resources				
CHOICE <i>mode</i>				
>FDD				
>>Downlink PDSCH information	OP		Downlink PDSCH information 10.3.6.30	
>TDD				(no data)
Downlink information common	OP		Downlink	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
for all radio links			information common for all radio links 10.3.6.24	
Downlink information per radio link list	OP	1 to <maxRL>		Send downlink information for each radio link
>Downlink information for each radio link	MP		Downlink information for each radio link 10.3.6.27	

10.2.51 TRANSPORT CHANNEL RECONFIGURATION COMPLETE

This message is sent from the UE when a transport channel reconfiguration has been done.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
CHOICE mode	OP			
>FDD				(no data)
>TDD				
>>Uplink Timing Advance	OP		Uplink Timing Advance 10.3.6.95	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.52 TRANSPORT CHANNEL RECONFIGURATION FAILURE

This message is sent by UE if the configuration given by UTRAN is unacceptable or if the UE failed to establish the physical channel(s).

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.53 TRANSPORT FORMAT COMBINATION CONTROL

This message is sent by UTRAN to control the uplink transport format combination within the allowed transport format combination set.

RLC-SAP: TM, AM or UM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	<i>CV-notTM</i>		Message Type	
UE information elements				
RRC transaction identifier	<i>CV-notTM</i>		RRC transaction identifier 10.3.3.36	
Integrity check info	<i>CV-notTM</i>		Integrity check info 10.3.3.16	
TrCH information elements				
CHOICE mode	MP			
>FDD				(no data)
>TDD				
>>TFCS Id	OP		Transport Format Combination Set Identity 10.3.5.21	
DPCH/PUSCH TFCS in uplink	MP		Transport Format Combination subset 10.3.5.22	
TFC Control duration	<i>CV-notTMopt</i>		TFC Control duration 10.3.6.80	

Condition	Explanation
<i>NotTM</i>	The message type is not included when transmitting the message on the transparent mode signalling DCCH
<i>NotTMopt</i>	The information element is not included when transmitting the message on the transparent mode signalling DCCH and is optional otherwise.

If transparent mode signalling is used and the encoded message does not fill a transport block, the RRC layer shall insert padding according to subclause 12.1.

10.2.54 TRANSPORT FORMAT COMBINATION CONTROL FAILURE

This message is sent to indicate that a received TRANSPORT FORMAT COMBINATION CONTROL message could not be handled by the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.2.55 UE CAPABILITY ENQUIRY

The UE CAPABILITY ENQUIRY is used by the UTRAN to enquire inter-RAT classmarks from the UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Capability update requirement	MP		Capability update requirement 10.3.3.2	

10.2.56 UE CAPABILITY INFORMATION

This message is sent by UE to convey UE specific capability information to the UTRAN.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	OP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
UE radio access capability	OP		UE radio access capability 10.3.3.42	
Other information elements				
UE system specific capability	OP	1 to <maxSystemCapability>		
> Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability 10.3.8.7	

10.2.57 UE CAPABILITY INFORMATION CONFIRM

This message is sent by UTRAN to confirm that UE capability information has been received.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN → UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied

10.2.58 UPLINK DIRECT TRANSFER

This message is used to transfer NAS messages for an existing signalling connection.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE → UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
CN information elements				
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS message	MP		NAS message 10.3.1.8	
Measurement information elements				
Measured results on RACH	OP		Measured results on RACH 10.3.7.45	

10.2.59 UPLINK PHYSICAL CHANNEL CONTROL

NOTE: Only for TDD.

This message is used to transfer uplink physical channel parameters to the UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	OP		Integrity check info 10.3.3.16	
PhyCH information elements				
CCTrCH power control info	OP		CCTrCH power control info 10.3.6.8	Power control information for one CCTrCH
Alpha	OP		Alpha 10.3.6.5	
Timing Advance Control	OP		UL Timing Advance Control 10.3.6.96	
PRACH Constant Value	OP		Constant value 10.3.6.11	Operator controlled PRACH Margin
PUSCH Constant Value	OP		Constant value 10.3.6.11	Operator controlled PUSCH Margin

10.2.60 URA UPDATE

This message is used by the UE to initiate a URA update procedure.

RLC-SAP: TM

Logical channel: CCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
U-RNTI	MP		U-RNTI 10.3.3.47	
RRC transaction identifier	CV- <i>ProtErr</i>		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
URA update cause	MP		URA update cause 10.3.3.46	
Protocol error indicator	MD		Protocol error indicator 10.3.3.27	Default value is FALSE
Other information elements				
Protocol error information	CV- <i>ProtErr</i>		Protocol error information 10.3.8.12	

Condition	Explanation
<i>ProtErr</i>	If the IE "Protocol error indicator" has the value "TRUE"

10.2.61 URA UPDATE CONFIRM

This message confirms the URA update procedure and can be used to reallocate new RNTI information for the UE valid after the URA update.

RLC-SAP: UM

Logical channel: CCCH or DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
U-RNTI	CV-CCCH		U-RNTI 10.3.3.47	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	Integrity check info is included if integrity protection is applied
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
RRC State Indicator	MP		RRC State Indicator 10.3.3.10	
UTRAN DRX cycle length coefficient	MD		UTRAN DRX cycle length coefficient 10.3.3.49	Default value is the existing value of UTRAN DRX cycle length coefficient
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN mobility information elements				
URA identity	OP		URA identity 10.3.2.6	
RB information elements				
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

Condition	Explanation
CCCH	This IE is only sent when CCCH is used

10.2.62 UTRAN MOBILITY INFORMATION

This message is used by UTRAN to allocate a new RNTI and to convey other UTRAN mobility related information to a UE.

RLC-SAP: AM or UM

Logical channel: DCCH

Direction: UTRAN→UE

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE Information Elements				
Integrity check info	CH		Integrity check info 10.3.3.16	
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity protection mode info	OP		Integrity protection mode info 10.3.3.19	
Ciphering mode info	OP		Ciphering mode info 10.3.3.5	
New U-RNTI	OP		U-RNTI 10.3.3.47	
New C-RNTI	OP		C-RNTI 10.3.3.8	
UE Timers and constants in connected mode	MD		UE Timers and constants in connected mode 10.3.3.43	Default value means that for all timers and constants - For parameters with need MD, the defaults specified in 10.3.3.43 apply and - For parameters with need OP, the parameters are absent
CN Information Elements				
CN Information info	OP		CN Information info 10.3.1.3	
UTRAN Information Elements				
URA identity	OP		URA identity 10.3.2.6	
RB Information elements				
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.63 UTRAN MOBILITY INFORMATION CONFIRM

This message is used to confirm the new UTRAN mobility information for the UE.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Uplink integrity protection activation info	OP		Integrity protection activation info 10.3.3.17	
RB Information elements				
COUNT-C activation time	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is moving to CELL_DCH state due to this procedure
Radio bearer uplink ciphering activation time info	OP		RB activation time info 10.3.4.13	
RB with PDCP information list	OP	1 to <maxRBall RABs>		This IE is needed for each RB having PDCP in the case of lossless SRNS relocation
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

10.2.64 UTRAN MOBILITY INFORMATION FAILURE

This message is sent to indicate a failure to act on a received UTRAN MOBILITY INFORMATION message.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE→UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message Type	MP		Message Type	
UE information elements				
RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Integrity check info	CH		Integrity check info 10.3.3.16	
Failure cause	MP		Failure cause and error information 10.3.3.14	

10.3 Information element functional definitions

10.3.1 CN Information elements

10.3.1.1 CN domain identity

Identifies the type of core network domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN domain identity	MP		Enumerated (CS domain, PS domain)	

10.3.1.2 CN Domain System Information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN domain identity	MP		CN domain identity 10.3.1.1	
CHOICE CN Type	MP			
>GSM-MAP				
>>CN domain specific NAS system information	MP		NAS system information (GSM-MAP) 10.3.1.9	
>ANSI-41				
>>CN domain specific NAS system information	MP		ANSI-41 NAS system information, 10.3.9.4	
CN domain specific DRX cycle length coefficient	MP		CN domain specific DRX cycle length coefficient, 10.3.3.6	

10.3.1.3 CN Information info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN identity	OP		PLMN identity 10.3.1.11	
CN common GSM-MAP NAS system information	OP		NAS system information (GSM-MAP) 10.3.1.9	
CN domain related information	OP	1 to <maxCNdomains>		
>CN domain identity	MP		CN domain identity 10.3.1.1	
>CN domain specific GSM-MAP NAS system info	MP		NAS system information (GSM-MAP) 10.3.1.9	

NOTE 1: Necessity of PLMN is FFS and for CN domain identity and NAS system information, the confirmation in SA WG2 is needed.

10.3.1.4 IMEI

This IE contains an International Mobile Equipment Identity. Setting specified in 3GPP TS 23.003.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
IMEI	MP	15		
>IMEI digit	MP		INTEGER(0..15)	

10.3.1.5 IMSI (GSM-MAP)

This IE contains an International Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN. Setting specified in 3GPP TS 23.003.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
IMSI	MP	6 to 15		
>IMSI digit	MP		INTEGER(0..9)	

10.3.1.6 Intra Domain NAS Node Selector

This IE is allocated by the NAS.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra Domain NAS Node Selector	MP		Bitstring(16)	

10.3.1.7 Location Area Identification

Identifies uniquely a location area for a GSM-MAP type of PLMN. Setting specified in [TS24.008].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN identity	MP		PLMN identity 10.3.1.11	
LAC	MP		Bit string(16)	

10.3.1.8 NAS message

A non-access stratum message to be transferred transparently through UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NAS message	MP		Octet string (1..4095)	

10.3.1.9 NAS system information (GSM-MAP)

This information element contains system information that belongs to the non-access stratum for a GSM-MAP type of PLMN. This information is transparent to RRC. It may contain either information specific to one CN domain (CS or PS) or information common for both CN domains.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
GSM-MAP NAS system information	MP		Octet string(1..8)	

10.3.1.10 Paging record type identifier

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Paging record type identifier	MP		Enumerated (IMSI (GSM-MAP), TMSI (GSM-MAP)/ P-TMSI, IMSI (DS-41), TMSI (DS-41))	

10.3.1.11 PLMN identity

This information element identifies a Public Land Mobile Network for a GSM-MAP type of PLMN. Setting of digits is defined in [TS 23.003].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MCC	MP	3		
>MCC digit	MP		INTEGER(0..9)	
MNC	MP	2 to 3		
>MNC digit	MP		INTEGER(0..9)	

10.3.1.12 PLMN Type

Identifies the type of Public Land Mobile Network (PLMN). This IE shall be used to control the interpretation of network dependent messages and information elements in the RRC protocol.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN Type	MP		Enumerated (GSM-MAP, ANSI-41, GSM-MAP and ANSI-41)	

10.3.1.13 P-TMSI (GSM-MAP)

This IE contains a Packet Temporary Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
P-TMSI	MP		Bit string (32)	Setting specified in [TS 23.003]

10.3.1.14 RAB identity

This information element uniquely identifies a radio access bearer within a CN domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>RAB identity type</i>	MP			
>RAB identity (GSM-MAP)			Bit string (8)	Formatted according to [TS 24.008].
>RAB identity (ANSI-41)			Bit string (8)	

CHOICE NAS binding info type	Condition under which the given RAB identity type is chosen
RAB identity (GSM-MAP)	PLMN is of type GSM-MAP
RAB identity (ANSI-41)	PLMN is of type ANSI-41

10.3.1.15 Routing Area Code

Identifies a routing area within a location area for a GSM-MAP type of PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Routing Area Code	MP		Bit string(8)	Setting specified in [TS 23.003]

10.3.1.16 Routing Area Identification

Identifies uniquely a routing area for a GSM-MAP type of PLMN. Setting specified in [TS 23.003].

Information Element/Group name	Need	Multi	Type and reference	Semantics description
LAI	MP		Location area identification 10.3.1.7	
RAC	MP		Routing area code 10.3.1.15	

10.3.1.17 TMSI (GSM-MAP)

This IE contains a Temporary Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TMSI (GSM-MAP)	MP		Bit string (32)	Setting specified in [TS 23.003]

10.3.2 UTRAN mobility Information elements

10.3.2.1 Cell Access Restriction

Indicates the restrictions to cell access.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell Barred	MP		Enumerated(not barred, barred)	
Intra-frequency cell re-selection indicator	CV-Barred		Enumerated(not allowed, allowed)	
T_{barred}	CV-Barred		Integer (10,20,40,80,160,320,640,1280)	[4] (TS25.304)
Cell Reserved for operator use	MP		Enumerated(reserved, not reserved)	
Cell Reserved for SoLSA exclusive use	MP		Enumerated(reserved, not reserved)	
Access Class Barred list	MD	maxAC		Default is no access class barred is applied. The first instance of the parameter corresponds to Access Class 0, the second to Access Class 1 and so on up to Access Class 15. UE reads this IE of its access class stored in SIM.
>Access Class Barred	MP		Enumerated(not barred, barred)	

Condition	Explanation
<i>Barred</i>	Presence is mandatory if the IE "Cell Barred" has the value "Barred"; otherwise the element is not needed in the message.

10.3.2.2 Cell identity

This information element identifies a cell unambiguously within a PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell identity	MP		bit string(28)	

10.3.2.3 Cell selection and re-selection info for SIB3/4

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Mapping Info	MD		Mapping info 10.3.2.5	Contains mapping function for quality measurements. Default is an implicit mapping: $Q_{\text{map}} = Q_{\text{meas,LEV}}$, TS 25.304.
Cell_selection_and_reselection_quality_measure	MP		Enumerated (CPICH Ec/N0, CPICH RSCP)	Choice of measurement (CPICH Ec/N0 or CPICH RSCP) to use as quality measure Q for FDD cells.
CHOICE mode	MP			
>FDD				
>> $S_{\text{intrasearch}}$	OP		Integer (-32..20 by step of 2)	TS 25.304 [dB]

>>S _{intersearch}	OP		Integer (-32..20 by step of 2)	TS 25.304 [dB]
>>S _{searchHCS}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>RAT List	OP	1 to <maxOther RAT>		
>>>RAT identifier	MP		Enumerated (GSM, cdma2000)	
>>>S _{search,RAT}	MP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>>S _{HCS,RAT}	OP		Integer (-32..20 by step of 2)	TS 25.304 [dB]
>>S _{limit,SearchRAT}	OP		Integer (-32..20 by step of 2)	TS 25.304 [dB]
>TDD				
>>S _{intrasearch}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]

>>S _{intersearch}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>S _{searchHCS}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>RAT List	OP	1 to <maxOther RAT>		
>>>RAT identifier	MP		Enumerated (GSM, cdma2000)	
>>>S _{search,RAT}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>>S _{HCS,RAT}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
>>>S _{limit,SearchRAT}	OP		Integer (-105..91 by step of 2)	TS 25.304 [dB]
Qhyst1 _s	MP		Integer (0..40 by step of 2)	TS 25.304
Qhyst2 _s	CV-FDD-Quality-Measure		Integer (0..40 by step of 2)	Default value is Qhyst1 _s TS 25.304
Treselection _s	MP		Integer (0..31)	[s]
HCS Serving cell Information	OP		HCS Serving cell information 10.3.7.12	
Maximum allowed UL TX power	MP		Maximum allowed UL TX power 10.3.6.39	[dBm] UE_TXPWR_MAX_RACH in 25.304.
CHOICE <i>mode</i>	MP			
>FDD				
>>Qqualmin	MP		Integer (-20..0)	Ec/N0, [dB]
>>Qrxlevmin	MP		Integer (-115..-25 by step of 2)	RSCP, [dBm]
>TDD				
>>Qrxlevmin	MP		Integer (-115..-25 by step of 2)	RSCP, [dBm]

Condition	Explanation
CV-FDD-Quality-Measure	Presence is not allowed if the IE "Cell_selection_and_reselection_quality_measure" has the value CPICH RSCP, otherwise the IE is mandatory and has a default value.

10.3.2.4 Cell selection and re-selection info for SIB11/12

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Qoffset1 _{s,n}	MD		Real(-50.0..50.0 by step of 1)	Default value is 0.
Qoffset2 _{s,n}	<i>CV-FDD-Quality-Measure</i>		Real(-50.0..50.0 by step of 1)	Default value is 0.
Maximum allowed UL TX power	MD		Maximum allowed UL TX power 10.3.6.39	[dBm] UE_TXPWR_MAX_RACH in 25.304. Default is the Maximum allowed UL TX power for the serving cell
HCS neighbouring cell information	OP		HCS Neighbouring cell information 10.3.7.11	
CHOICE <i>mode</i>	MP			
>FDD				
>>Qqualmin	MD		Integer (-20..0)	Ec/N0, [dB] Default value is Qqualmin for the serving cell
>>Qrxlevmin	MD		Integer (-115..-25 by step of 2)	RSCP, [dBm] Default value is Qrxlevmin for the serving cell
>TDD				
>>Qrxlevmin	MD		Integer (-115..-25 by step of 2)	RSCP, [dBm] Default value is Qrxlevmin for the serving cell
>GSM				
>>Qrxlevmin	MD		Integer (-115..-25 by step of 2)	RSCP, [dBm] Default value is Qrxlevmin for the serving cell

Condition	Explanation
<i>FDD-Quality-Measure</i>	Presence is not allowed if the IE "Cell_selection_and_reselection_quality_measure" has the value CPICH RSCP, otherwise the IE is mandatory and has a default value.

10.3.2.5 Mapping Info

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Mapping List	MP	1 to <MaxRAT>		
>RAT	MP		Enumerated (UTRA FDD, UTRA TDD, GSM, cdma2000)	
>Mapping Function Parameter List	MP	1 to <maxMeas Intervals>		
>> Function type	MP		Enumerated (linear, function type 2, function type 3, function type 4)	Type of the function within the interval.
>>Map_parameter_1	MD		Integer (0..99)	Parameter describing the mapping function between the quality measurement and the representing quality value, see TS 25.304. Default value is zero for the first interval or otherwise the value of Map_parameter_2 of the interval before.
>>Map_parameter_2	MP		Integer (0..99)	Parameter describing the mapping function between the quality measurement and the representing quality value, see TS 25.304.
>>Upper_limit	CV - MaxInt		Integer (1..MaxMeas)	Upper limit of interval for which the Map_parameter_1 and Map_parameter_2 are valid. MaxMeas = 25 if RAT = UTRA FDD / CPICH Ec/N0, MaxMeas = 91 if RAT = UTRA TDD or if RAT = UTRA FDD/ CPICH RSCP, MaxMeas = 63 if RAT = GSM.

Condition	Explanation
<i>MaxInt</i>	This information is only sent if Mapping Function Parameter List has not reached maxMeasIntervals.

10.3.2.6 URA identity

Gives the identity of the UTRAN Registration Area. It can be used to indicate to the UE which URA it shall use in case of overlapping URAs.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA identity	MP		bit string(16)	

10.3.3 UE Information elements

10.3.3.1 Activation time

Activation Time defines the frame number/time at which the operation/changes caused by the related message shall take effect. Values between 0 and 255 indicate the absolute value of CFN (Connection Frame Number) of that frame number/time.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activation time	MP		Integer(0..255, Now)	CFN [TS 25.402]

10.3.3.2 Capability Update Requirement

This IE indicates to the UE which specific capabilities to transfer to the network.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE radio access FDD capability update requirement	MP		Boolean	TRUE indicates update required
UE radio access TDD capability update requirement	MP		Boolean	TRUE indicates update required
System specific capability update requirement list	OP	1 to <maxSystemCapability>		
>System specific capability update requirement	MP		Enumerated (GSM)	

Default value is:

"UE radio capability FDD update requirement" = false

"UE radio capability TDD update requirement" = false

"System specific capability update requirement" not present.

10.3.3.3 Cell update cause

Indicates the cause for cell update.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell update cause	MP		Enumerated (cell reselection, periodical cell update, uplink data transmission, paging response, re-entered service area, radio link failure, RLC unrecoverable error)	At least one spare value needed.

10.3.3.4 Ciphering Algorithm

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ciphering algorithm	MP		Enumerated (UEA0, UEA1)	

10.3.3.5 Ciphering mode info

This information element contains the ciphering specific security mode control information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ciphering mode command	MP		Enumerated (start/restart, stop)	
Ciphering algorithm	CV- <i>notStop</i>		Ciphering algorithm 10.3.3.4	
Ciphering activation time for DPCH	OP		Activation time 10.3.3.1	Used for radio bearers mapped on RLC-TM. Only applicable if the UE is already in CELL_DCH state
Radio bearer downlink ciphering activation time info	OP		RB activation time info, 10.3.4.13	Used for radio bearers mapped on RLC-AM or RLC-UM

Condition	Explanation
<i>notStop</i>	The IE is mandatory if the IE "Ciphering mode command" has the value "start/restart", otherwise the IE is not needed in the message.

10.3.3.6 CN domain specific DRX cycle length coefficient

A coefficient in the formula to count the paging occasions to be used by a specific UE (specified in 25.304) .

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CN domain specific DRX cycle length coefficient	MP		Integer(6...9)	Refers to 'k' in the formula as specified in 25.304, Discontinuous reception

10.3.3.7 CPCH Parameters

NOTE: Only for FDD.

These parameters are used by any UE using any CPCH set allocated to the cell that is broadcasting this system information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Initial Priority Delay	OP	1 to maxASC		Initial delays for ASC priority.
>NS_IP	MP		Integer (0...28)	Number of slots for initial fixed delay for each ASC priority level
Backoff control parameters	MP			
>N_ap_retrans_max	MP		Integer (1...64)	Max number of AP transmissions without AP-AICH response, a PHY parameter.
>N_access_fails	MP		Integer (1...64)	Max number of preamble ramping cycles when NAK response received, a MAC parameter.
>NF_bo_no_aich	MP		Integer (0...31)	Number of frames for UE backoff after N _{ap_retrans_max} unsuccessful AP access attempts, a MAC parameter.
>NS_bo_busy	MP		Integer (0...63)	Number of slots for UE fixed backoff after access attempt to busy CPCH, a MAC parameter.
>NF_bo_all_busy	MP		Integer (0...31)	Max number of frames for UE backoff after access attempt to last busy CPCH, a MAC parameter. UE randomly selects backoff value from range (0..NF_bo_all_busy)
>NF_bo_mismatch	MP		Integer (0...127)	Max number of frames for the UE backoff after received mismatch on CD/CA-ICH, a MAC parameter. UE randomly selects backoff value from range (0..NF_bo_mismatch)
>T_CPCH	MP		Enumerated (0, 1)	CPCH channel timing used to determine Tau, a PHY parameter
Power Control Algorithm	MP		Enumerated (algorithm 1, algorithm 2)	Specifies algorithm to be used by UE to interpret TPC commands
TPC step size	CV algo		Integer (1, 2)	In dB
DL DPCCH BER	MP		Integer (0..63)	The BER quality value shall be set in the range $0 \leq \text{DPCCH BER} \leq 1$ in the unit BER_dB where: BER_dB_0: DPCCH BER = 0 BER_dB_1: $-\infty < \text{Log}_{10}(\text{DPCCH BER}) < -4.03$ BER_dB_2: $-4.03 \leq \text{Log}_{10}(\text{DPCCH BER}) < -3.965$ BER_dB_3: $-3.965 \leq \text{Log}_{10}(\text{DPCCH BER}) < -3.9$... BER_dB_61: $-0.195 \leq \text{Log}_{10}(\text{DPCCH BER}) < -0.13$ BER_dB_62: $-0.13 \leq$

				Log10(DPCCH BER) < -0.065 BER_dB_63: -0.065 ≤ Log10(DPCCH BER) ≤ 0
--	--	--	--	--

Condition	Explanation
<i>algo</i>	The IE is mandatory if "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is not needed

10.3.3.8 C-RNTI

The cell RNTI (C-RNTI) identifies a UE having a RRC connection within a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
C-RNTI	MP		bit string(16)	

10.3.3.9 DRAC system information

Information element	Need	Multi	Type and reference	Semantics description
DRAC system information	MP	1 to <maxDRA Cclasses>		DRAC information is sent for each class of terminal
>Transmission probability	MP		Transmission probability 10.3.3.39	
>Maximum bit rate	MP		Maximum bit rate 10.3.3.20	

10.3.3.10 RRC State Indicator

Indicates to a UE if DRX shall be used with Cell updating or URA updating or if no DRX at all shall be used.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RRC State indicator	MP		Enumerated(CELL_DCH, CELL_FACH, CELL_PCH, URA_PCH)	

10.3.3.11 Establishment cause

Cause for an RRC connection establishment request.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Establishment cause	MP		Enumerated(Originating Conversational Call, Originating Streaming Call, Originating Interactive Call, Originating Background Call, Originating Subscribed traffic Call, Terminating Conversational Call, Terminating Streaming Call, Terminating Interactive Call, Terminating Background Call, Emergency Call, Inter-RAT cell re-selection, Inter-RAT cell change order, Registration,Detach, High Priority Signalling, Low Priority Signalling, Call re-establishment)	At least one spare value needed.

10.3.3.12 Expiration Time Factor

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Expiration Time Factor	MP		Enumerated(2times, 4times, 8times, 16times, 32times, 64times, 128times, 256times)	

10.3.3.13 Failure cause

Cause for failure to perform the requested procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Failure cause	MP		Enumerated (configuration unsupported, physical channel failure, incompatible simultaneous reconfiguration, protocol error, compressed mode runtime error, cell reselection, invalid configuration, configuration incomplete, unsupported measurement)	At least one spare value needed.

10.3.3.14 Failure cause and error information

Cause for failure to perform the requested procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Failure cause	MP		Failure cause 10.3.3.13	
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	
Deleted TGPSI	CV- CompMod eErr		TGPSI 10.3.6.82	

Condition	Explanation
<i>ProtErr</i>	Presence is mandatory if the IE "Failure cause" has the value "Protocol error"; otherwise the element is not needed in the message.
<i>CompModeErr</i>	Presence is mandatory if the IE "Failure cause" has the value "Compressed mode runtime error"; otherwise the element is not needed in the message

10.3.3.15 Initial UE identity

This information element identifies the UE at a request of an RRC connection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE UE id type	MP			
>IMSI (GSM-MAP)			IMSI (GSM- MAP) 10.3.1.5	
>TMSI and LAI (GSM-MAP)				
>>TMSI (GSM-MAP)	MP		TMSI (GSM- MAP) 10.3.1.17	
>>LAI (GSM-MAP)	MP		Location Area Identification 10.3.1.7	
>P-TMSI and RAI (GSM-MAP)				
>>P-TMSI (GSM-MAP)	MP		P-TMSI (GSM-MAP) 10.3.1.13	
>>RAI (GSM-MAP)	MP		Routing Area Identification 10.3.1.16	
>IMEI			IMEI 10.3.1.4	
>ESN (DS-41)			TIA/EIA/IS- 2000-4	
>IMSI (DS-41)			TIA/EIA/IS- 2000-4	
>IMSI and ESN (DS-41)			TIA/EIA/IS- 2000-4	
>TMSI (DS-41)			TIA/EIA/IS- 2000-4	

10.3.3.16 Integrity check info

The Integrity check info contains the RRC message sequence number needed in the calculation of XMAC-I [TS 33.102] and the calculated MAC-I.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Message authentication code	MP		bit string(32)	MAC-I [TS 33.102] The 27 MSB of the IE shall be set to zero and the 5 LSB of the IE shall be set to the used signalling radio bearer identity when the encoded RRC message is used as the MESSAGE parameter in the integrity protection algorithm.
RRC Message sequence number	MP		Integer (0..15)	The local RRC hyper frame number (RRC HFN) is concatenated with the RRC message sequence number to form the input parameter COUNT-I for the integrity protection algorithm. The IE value shall be set to zero when the encoded RRC message is used as the MESSAGE parameter in the integrity protection algorithm.

10.3.3.17 Integrity protection activation info

This IE contains the time, in terms of RRC sequence numbers, when a new integrity protection configuration shall be activated for the signalling radio bearers.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RRC message sequence number list	MP	4 to 5		The RRC sequence number when a new integrity protection configuration shall be applied, for CCCH (=RB0) and signalling radio bearers in the order RB0, RB1, RB2, RB3, RB4.
>RRC message sequence number	MP		Integer (0..15)	

10.3.3.18 Integrity protection Algorithm

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Integrity protection algorithm	MP		Enumerated (UIA1)	

10.3.3.19 Integrity protection mode info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Integrity protection mode command	MP		Enumerated(start, modify)	
Downlink integrity protection activation info	<i>CV-modify</i>		Integrity protection activation info 10.3.3.17	
Integrity protection algorithm	OP		Integrity protection algorithm 10.3.3.18	
Integrity protection initialisation number	<i>CV-start</i>		Bitstring(32)	FRESH [TS 33.102]

Condition	Explanation
<i>Start</i>	The IE is mandatory if the IE "Integrity protection mode command" has the value "start ", otherwise it is not needed in the message.
<i>Modify</i>	The IE is only present if the IE "Integrity protection mode command" has the value "modify"

10.3.3.20 Maximum bit rate

NOTE: Only for FDD.

Indicates the maximum user bit rate allowed on a DCH controlled by DRAC procedure for the transmission period (Transmission time validity).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Maximum bit rate	MP		integer(0..512 by step of 16)	=kbit/s

10.3.3.21 Measurement capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Need for downlink compressed mode				
FDD measurements	MP		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on FDD
TDD measurements	CV <i>tdd_sup</i>		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on TDD
GSM 900	CV <i>Gsm900_s upM</i>		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on GSM 900
DCS 1800	CV <i>Gsm1800_ sup</i>		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on DCS 1800
GSM 1900	CV <i>Gsm1900_ sup</i>		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on GSM 1900
Multi-carrier measurement	CV <i>mc_sup</i>		Boolean	TRUE means that the UE requires DL compressed mode in order to perform measurements on multi-carrier
Need for uplink compressed mode				
FDD measurements	MP		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on FDD
TDD measurements	CV <i>tdd_sup</i>		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on TDD
GSM 900	CV <i>Gsm900_s up</i>		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on GSM 900
DCS 1800	CV <i>Gsm1800_ sup</i>		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on DCS 1800
GSM 1900	CV <i>Gsm1900_ sup</i>		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on GSM 1900
Multi-carrier measurement	CV <i>mc_sup</i>		Boolean	TRUE means that the UE requires UL compressed mode in order to perform measurements on multi-carrier

Condition	Explanation
<i>tdd_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "TDD" or "FDD/TDD". Otherwise this field is not needed in the message.
<i>Gsm900_sup</i>	Presence is mandatory if IE Support of GSM900 has the value TRUE. Otherwise this field is not needed in the message.
<i>Gsm1800_sup</i>	Presence is mandatory if IE Support of GSM1800 has the value TRUE. Otherwise this field is not needed in the message.
<i>Gsm1900_sup</i>	Presence is mandatory if IE Support of GSM1900 has the value TRUE. Otherwise this field is not needed in the message.
<i>mc_sup</i>	Presence is mandatory if IE Support of multi-carrier has the value TRUE. Otherwise this field is not needed in the message.

10.3.3.22 Paging cause

Cause for a CN originated page.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Paging cause	MP		Enumerated(Terminating Conversational Call, Terminating Streaming Call, Terminating Interactive Call, Terminating Background Call, High Priority Signalling, Low Priority Signalling)	

10.3.3.23 Paging record

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Used paging identity	MP			
> CN identity				
>> Paging cause	MP		Paging cause 10.3.3.22	
>>> CN domain identity	MP		CN domain identity 10.3.1.1	
>>>>CHOICE UE Identity	MP			
>>>>IMSI (GSM-MAP)			IMSI (GSM-MAP) 10.3.1.5	
>>>>TMSI (GSM-MAP)			TMSI (GSM-MAP) 10.3.1.17	
>>>>P-TMSI (GSM-MAP)			P-TMSI (GSM-MAP) 10.3.1.13	
>>>>IMSI (DS-41)			TIA/EIA/IS-2000-4	
>>>>TMSI (DS-41)			TIA/EIA/IS-2000-4	
> UTRAN identity				
>>U-RNTI	MP		U-RNTI 10.3.3.47	
>>>CN originated page to connected mode UE	OP			
>>>>Paging cause	MP		Paging cause 10.3.3.22	
>>>>CN domain identity	MP		CN domain identity 10.3.1.1	
>>>>Paging record type identifier	MP		Paging record type identifier 10.3.1.10	

Condition	Explanation
CHOICE Used paging identity	Condition under which the given used paging identity is chosen
CN identity	For CN originating pages (for idle mode UEs)
UTRAN identity	For UTRAN originating pages (for connected mode UEs)

10.3.3.24 PDCP capability

Indicates which algorithms and which value range of their parameters are supported by the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Support for lossless SRNS relocation	MP		Boolean	TRUE means supported
Support for RFC2507	MP		Boolean	TRUE means supported
Max HC context space	<i>CV-hc_sup</i>		Integer(512, 1024, 2048, 4096, 8192)	

Condition	Explanation
<i>hc_sup</i>	Presence is mandatory if IE Support for RFC 2507 = TRUE. Otherwise this field is not needed in the message

10.3.3.25 Physical channel capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Downlink physical channel capability information elements				
FDD downlink physical channel capability	CH- <i>fdd_req_su</i> <i>p</i>			
>Max no DPCH/PDSCH codes	MP		Integer (1..8)	Maximum number of DPCH/PDSCH codes to be simultaneously received
>Max no physical channel bits received	MP		Integer (600, 1200, 2400, 3600, 4800, 7200, 9600, 14400, 19200, 28800, 38400, 48000, 57600, 67200, 76800)	Maximum number of physical channel bits received in any 10 ms interval (DPCH, PDSCH, S-CCPCH)
>Support for SF 512	MP		Boolean	TRUE means supported
>Support of PDSCH	MP		Boolean	TRUE means supported
>Simultaneous reception of SCCPCH and DPCH	MP		Boolean	TRUE means supported
>Simultaneous reception of SCCPCH, DPCH and PDSCH	CV- <i>if_sim_rec</i> <i>_pdsch</i> <i>_sup</i>		Boolean	TRUE means supported
>Max no of S-CCPCH RL	CV- <i>if_sim_rec</i>		Integer(1)	Maximum number of simultaneous S-CCPCH radio links
TDD downlink physical channel capability	CH- <i>tdd_req_su</i> <i>p</i>			
>Maximum number of timeslots per frame	MP		Integer (1..14)	
>Maximum number of physical channels per frame	MP		Integer (1..224)	
>Minimum SF	MP		Integer (1, 16)	
>Support of PDSCH	MP		Boolean	TRUE means supported
>Maximum number of physical channels per timeslot	MP		Integer (1..16)	
Uplink physical channel capability information elements				
>FDD uplink physical channel capability	CH- <i>fdd_req_su</i> <i>p</i>			
>Maximum number of DPDCH bits transmitted per 10 ms	MP		Integer (600, 1200, 2400, 4800, 9600, 19200, 28800, 38400, 48000, 57600)	
>Support of PCPCH	MP		Boolean	TRUE means supported
TDD uplink physical channel capability	CH- <i>tdd_req_su</i> <i>p</i>			
>Maximum Number of timeslots	MP		Integer	

per frame			(1..14)	
>Maximum number of physical channels per timeslot	MP		Integer (1, 2)	
>Minimum SF	MP		Integer (1, 2, 4, 8, 16)	
>Support of PUSCH	MP		Boolean	TRUE means supported

Condition	Explanation
<i>if_sim_rec_pdsch_sup</i>	Presence is mandatory if IE Simultaneous reception of SCCPCH and DPCH = True and IE Support of PDSCH = True. Otherwise this field is not needed in the message.
<i>if_sim_rec</i>	Presence is mandatory if IE capability Simultaneous reception of SCCPCH and DPCH = True. Otherwise this field is not needed in the message.
<i>tdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "TDD" or "FDD/TDD" and a TDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.
<i>fdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "FDD" or "FDD/TDD" and a FDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.

10.3.3.26 Protocol error cause

This IE indicates the cause for a message or information which was not comprehended.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error cause	MP		Enumerated (ASN.1 violation or encoding error, Message type non-existent or not implemented, Message not compatible with receiver state, Information element value not comprehended, Conditional information element error, Message extension not comprehended)	At least one spare value needed.

10.3.3.27 Protocol error indicator

This IE indicates whether a message was transmitted due to a protocol error or not.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Protocol error indicator	MP		Boolean	TRUE means a protocol error occurred. FALSE means a protocol error did not occur.

10.3.3.28 RB timer indicator

This IE is used to indicate to UTRAN if the timers T314 or T315 has expired in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
T314 expired	MP		Boolean	TRUE means that the timer has expired or the stored value is zero. FALSE means that the timer has not expired.
T315 expired	MP		Boolean	TRUE means that the timer has expired or the stored value is zero. FALSE means that the timer has not expired.

10.3.3.29 Redirection info

This IE is used to redirect the UE to another frequency or other system.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Redirection Information	MP			
>Frequency info			Frequency info 10.3.6.36	
>Inter-RAT info			Inter-RAT info 10.3.7.25	

10.3.3.30 Re-establishment timer

This information element indicates which timer to associate with RAB.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Re-establishment timer	MP		Enumerated(useT314, useT315)	

10.3.3.31 Rejection cause

Cause for rejection of RRC connection establishment request.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Rejection cause	MP		Enumerated(congestion, unspecified)	

10.3.3.32 Release cause

Cause for release of RRC connection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Release cause	MP		Enumerated (normal event, unspecified, pre-emptive release, congestion, re-establishment reject, user inactivity), directed signalling connection re-establishment)	

10.3.3.33 RF capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
FDD RF capability	CH- <i>fdd_req_sup</i>			
>UE power class	MP		Enumerated(1..4)	as defined in 3GPP TS 25.101 subclause 6.2.1
>Tx/Rx frequency separation	MP		Enumerated(190, 174.8-205.2, 134.8-245.2)	In MHz as defined in 3GPP TS 25.101 subclause 5.3. NOTE: Not applicable if UE is not operating in frequency band a (as defined in 25.101).
TDD RF capability	CH- <i>tdd_req_sup</i>			
>UE power class	MP		Enumerated (1..4)	as defined in 3GPP TS 25.102 subclause 6.2.1
>Radio frequency bands	MP		Enumerated(a, b, c, a+b, a+c, b+c, a+b+c)	as defined in 3GPP TS 25.102 subclause 5.2
>Chip rate capability	MP		Enumerated(3.84Mcps, 1.28Mcps)	as defined in 3GPP TS 25.102

Condition	Explanation
<i>tdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "TDD" or "FDD/TDD" and a TDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.
<i>fdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "FDD" or "FDD/TDD" and a FDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.

10.3.3.34 RLC capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Total RLC AM buffer size	MP		Integer (2,10,50,100,150,500,1000)	Total receiving and transmitting RLC AM buffer capability in kBytes
Maximum RLC AM Window Size	MP		Integer(2047,4095)	Maximum supported RLC TX and RX window in UE
Maximum number of AM entities	MP		Integer (3,4,5,6,8,16,32)	

10.3.3.35 RLC reset indicator

This IE is used to re-configure AM RLC on c-plane and u-plane.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RLC reset indicator	MP		Boolean	TRUE means reset required FALSE means reset not required

10.3.3.36 RRC transaction identifier

This IE contains an identification of the RRC procedure transaction local for the type of the message this IE was included within.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RRC transaction identifier	MP		Integer (0..3)	

10.3.3.37 Security capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Ciphering algorithm capability	MP		Bit string(16)	"0000000000000001 ₂ ": UEA0, no encryption supported; "000000000000010 ₂ ": UEA1, Kasumi supported
Integrity protection algorithm capability	MP		Bit string(16)	"000000000000010 ₂ ": UIA1, Kasumi supported

NOTE: Each bit is 0 or 1 to indicate support for the corresponding UEAx or UIAx, x=0 to 15. The UE shall support at least one UEAx other than UEA0 and one UIAx. The ciphering algorithm capability bit for UEA0 indicates to UTRAN if the UE accepts unciphered connection(s) after the security mode control procedure.

10.3.3.38 START

There is a START value per CN domain. The START the 20 MSBs of all hyper frame numbers (MAC-d HFN, RLC UM HFN, RLC AM HFN, RRC HFN) for a CN domain.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
START	MP		Bit string (20)	[TS 33.102]

10.3.3.39 Transmission probability

NOTE: Only for FDD.

Indicates the probability for a mobile to be allowed to transmit on a DCH controlled by DRAC procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission probability	MP		Real(0.125.. 1.0 by step of 0.125)	probability

10.3.3.40 Transport channel capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Downlink transport channel capability information elements				
Max no of bits received	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all transport blocks received at an arbitrary time instant
Max convolutionally coded bits received	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all convolutionally coded transport blocks received at an arbitrary time instant
Max turbo coded bits received	CV <i>turbo_dec_sup</i>		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all turbo coded transport blocks received at an arbitrary time instant
Maximum number of simultaneous transport channels	MP		Integer(4, 8, 16, 32)	
Maximum number of simultaneous CCTrCH	MP		Integer (1..8)	
Max no of received transport blocks	MP		Integer(4, 8, 16, 32, 48, 64, 96, 128, 256, 512)	Maximum total number of transport blocks received within TTIs that end at within the same 10ms interval
Maximum number of TFC in the TFCS	MP		Integer(16, 32, 48, 64, 96, 128, 256, 512, 1024)	
Maximum number of TF	MP		Integer(32, 64, 128, 256, 512, 1024)	
Support for turbo decoding	MP		Boolean	TRUE means supported
Uplink transport channel capability information elements				
Max no of bits transmitted	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all transport blocks transmitted at an arbitrary time instant
Max convolutionally coded bits transmitted	MP		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480,	Maximum sum of number of bits of all convolutionally coded transport blocks transmitted at an arbitrary time instant

			40960, 81920, 163840)	
Max turbo coded bits transmitted	CV <i>turbo_enc_sup</i>		Integer(640, 1280, 2560, 3840, 5120, 6400, 7680, 8960, 10240, 20480, 40960, 81920, 163840)	Maximum sum of number of bits of all turbo coded transport blocks transmitted at an arbitrary time instant
Maximum number of simultaneous transport channels	MP		Integer(2, 4, 8, 16, 32)	
Maximum number of simultaneous CCTrCH of DCH type	CH- <i>tdd_req_sup</i>		Integer (1..8)	
Max no of transmitted transport blocks	MP		Integer(2, 4, 8, 16, 32, 48, 64, 96, 128, 256, 512)	Maximum total number of transport blocks transmitted within TTIs that start at the same time
Maximum number of TFC in the TFCS	MP		Integer(4, 8, 16, 32, 48, 64, 96, 128, 256, 512, 1024)	
Maximum number of TF	MP		Integer(32, 64, 128, 256, 512, 1024)	
Support for turbo encoding	MP		Boolean	TRUE means supported

Condition	Explanation
<i>turbo_dec_sup</i>	Presence is mandatory if IE Support of turbo decoding = True. Otherwise this field is not needed in the message.
<i>turbo_enc_sup</i>	Presence is mandatory if IE Support of turbo encoding = True. Otherwise this field is not needed in the message.
<i>tdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "TDD" or "FDD/TDD" and a TDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.

10.3.3.41 UE multi-mode/multi-RAT capability

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Multi-RAT capability				
Support of GSM	MP		Boolean	
Support of multi-carrier	MP		Boolean	
Multi-mode capability	MP		Enumerated (TDD, FDD, FDD/TDD)	

10.3.3.42 UE radio access capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ICS version	MP		Enumerated(R99)	Indicates the release version of TS 34.123-2 (Implementation Conformance Statement (ICS) proforma specification) that is applicable for the UE.
PDCP capability	MP		PDCP capability 10.3.3.24	
RLC capability	MP		RLC capability 10.3.3.34	
Transport channel capability	MP		Transport channel capability 10.3.3.40	
RF capability	MP		RF capability 10.3.3.33	
Physical channel capability	MP		Physical channel capability 10.3.3.25	
UE multi-mode/multi-RAT capability	MP		UE multi-mode/multi-RAT capability 10.3.3.41	
Security capability	MP		Security capability 10.3.3.37	
UP capability	MP		UP capability 10.3.3.45	
Measurement capability	CH- <i>fdd_req_sup</i>		Measurement capability 10.3.3.21	

Condition	Explanation
<i>fdd_req_sup</i>	Presence is mandatory if IE Multi-mode capability has the value "FDD" or "FDD/TDD" and a FDD capability update has been requested in a previous message. Otherwise this field is not needed in the message.

10.3.3.43 UE Timers and Constants in connected mode

This information element specifies timer- and constants values used by the UE in connected mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
T301	MD		Integer(100, 200 .. 2000 by step of 200, 3000, 4000, 6000, 8000)	Value in milliseconds. Default value is 2000.
N301	MD		Integer(0..7)	Default value is 2.
T302	MD		Integer(100, 200... 2000 by step of 200, 3000, 4000, 6000, 8000)	Value in milliseconds. Default value is 4000.
N302	MD		Integer(0..7)	Default value is 3.
T304	MD		Integer(100, 200, 400, 1000, 2000)	Value in milliseconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
N304	MD		Integer(0..7)	Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T305	MD		Integer(5, 10, 30, 60, 120, 360, 720, infinity)	Value in minutes. Default value is 30. Infinity means no update
T307	MD		Integer(5, 10, 15, 20, 30, 40, 50)	Value in seconds. Default value is 30.
T308	MD		Integer(40, 80, 160, 320)	Value in milliseconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T309	MD		Integer(1...8)	Value in seconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T310	MD		Integer(40 .. 320 by step of 40)	Value in milliseconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
N310	MD		Integer(0 .. 7)	Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T311	MD		Integer(250 .. 2000 by step of 250)	Value in milliseconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in

				CELL_DCH" received within SIB1. Note 1.
T312	MD		Integer (0..15)	Value in seconds. Default value is 1.
N312	MD		Integer (1, 50, 100, 200, 400, 600, 800, 1000)	Default value is 1.
T313	MD		Integer (0..15)	Value in seconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
N313	MD		Integer (1, 2, 4, 10, 20, 50, 100, 200)	Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T314	MD		Integer(0, 2, 4, 6, 8, 12, 16, 20)	Value in seconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T315	MD		Integer (0,10, 30, 60, 180, 600, 1200, 1800)	Value in seconds. Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
N315	MD		Integer (1, 50, 100, 200, 400, 600, 800, 1000)	Default value is the actual value of the equivalent parameter in IE "UE timers and Constants in CELL_DCH" received within SIB1. Note 1.
T316	MD		Integer(0, 10, 20, 30, 40, 50, infinity)	Value in seconds. Default value is XX.
T317	MD		Integer (0,10, 30, 60, 180, 600, 1200, 1800)	Value in seconds Default value is XX

NOTE 1: If the value of SIB1 changes, the UE shall re-read SIB1 and use the new value of the parameter, if modified.

10.3.3.44 UE Timers and Constants in idle mode

This information element specifies timer- and constant values used by the UE in idle mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
T300	MP		Integer(100, 200... 2000 by step of 200, 3000, 4000, 6000, 8000)	Value in milliseconds
N300	MP		Integer(0..7)	
T312	MP		Integer(0 .. 15)	Value in seconds
N312	MP		Integer (1, 50, 100, 200, 400, 600, 800, 1000)	

10.3.3.45 UP capability

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Standalone location method(s) supported	MP		Boolean	Defines if a UE can measure its location by some means unrelated to UTRAN TRUE means supported
UE based OTDOA supported	MP		Boolean	TRUE means supported
Network Assisted GPS support	MP		Enumerated ('Network based', 'UE based', 'Both', 'None')	Defines if the UE supports network based or UE based GPS methods.
GPS reference time capable	MP		Boolean	Defines if a UE has the capability to measure GPS reference time as defined in 25.215. TRUE means capable
Support for IPDL	MP		Boolean	Defines if a UE has the capability to use IPDL to enhance its 'SFN-SFN observed time difference –type 2' measurement. TRUE means supported

10.3.3.46 URA update cause

Indicates the cause for s URA update.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA update cause	MP		Enumerated(change of URA, periodic URA update, re-entered service area)	At least one spare value needed.

10.3.3.47 U-RNTI

The U-RNTI (UTRAN Radio Network Temporary Identity) is allocated to an UE having a RRC connection and identifies the UE within UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SRNC identity	MP		bit string(12)	
S-RNTI	MP		bit string(20)	

10.3.3.48 U-RNTI Short

The U-RNTI (UTRAN Radio Network Temporary Identity) is allocated to an UE having a RRC connection and identifies the UE within UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SRNC identity	MP		bit string(12)	
S-RNTI 2	MP		bit string(10)	

10.3.3.49 UTRAN DRX cycle length coefficient

A coefficient in the formula to count the paging occasions to be used by a specific UE (specified in 25.304).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DRX cycle length coefficient	MP		Integer(3..9)	Refers to 'k' in the formula as specified in 25.304, Discontinuous reception

10.3.3.50 Wait time

Wait time defines the time period the UE has to wait before repeating the rejected procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Wait time	MP		Integer(0..15)	Wait time in seconds The value 0 indicates that repetition is not allowed.

10.3.4 Radio Bearer Information elements

10.3.4.1 Downlink RLC STATUS info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timer_Status_Prohibit	OP		Integer(10..50 by step of 10)	Minimum time in ms between STATUS reports
Timer_EPC	OP		Integer(50, 60, 70, 80, 90, 100, 120, 140, 160, 180, 200, 300, 400, 500, 700, 900)	Time in ms
Missing PU Indicator	MP		Boolean	Value true indicates that UE should send a STATUS report for each missing PU that is detected
Timer_STATUS_periodic	OP		Integer(100, 200, 300, 400, 500, 750, 1000, 2000)	Time in milliseconds

10.3.4.2 PDCP info

The purpose of the PDCP info IE is to indicate which algorithms shall be established and to configure the parameters of each of the algorithms.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Support for lossless SRNS relocation	CV- <i>LosslessCriteria</i>		Boolean	TRUE means support
Max PDCP SN window size	CV <i>Lossless</i>		Integer (255, 65535)	Maximum PDCP sequence number window size. The handling of sequence number when the Max PDCP SN window size is 255 is specified in [23]. Default value is 65535.
PDCP PDU header	MD		Enumerated (present, absent)	Whether a PDCP PDU header is existent or not. Default value is "present"
Header compression information	OP	1 to <maxPDCPAlgoType >		
>CHOICE <i>algorithm type</i> >>RFC2507	MP			Header compression according to IETF standard RFC2507
>>>F_MAX_PERIOD	MD		Integer (1..65535)	Largest number of compressed non-TCP headers that may be sent without sending a full header. Default value is 256.
>>>F_MAX_TIME	MD		Integer (1..255)	Compressed headers may not be sent more than F_MAX_TIME seconds after sending last full header. Default value is 5.
>>>MAX_HEADER	MD		Integer (60..65535)	The largest header size in octets that may be compressed. Default value is 168.
>>>TCP_SPACE	MD		Integer (3..255)	Maximum CID value for TCP connections. Default value is 15.
>>>NON_TCP_SPACE	MD		Integer (3..65535)	Maximum CID value for non-TCP connections. Default value is 15.
>>>EXPECT_REORDERING	MD		Enumerated (reordering not expected, reordering expected)	Whether the algorithm shall reorder PDCP SDUs or not. Default value is "reordering not expected".

Condition	Explanation
<i>LosslessCriteria</i>	This IE is present only if the IE "RLC mode" is "Acknowledged" and the IE "In-sequence delivery " is "True".
<i>Lossless</i>	This IE shall be present if the IE "Support for lossless SRNS relocation" is TRUE, otherwise it shall be absent.

10.3.4.3 PDCP SN info

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Receive PDCP sequence number	MP		Integer(0..65535)	The PDCP sequence number which the sender of the message is expecting next to be received.

10.3.4.4 Polling info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timer_poll_prohibit	OP		Integer(10..550 by step of 10, 600..1000 by step of 50)	Minimum time between polls in ms
Timer_poll	OP		Integer(10..550 by step of 10, 600..1000 by step of 50)	Time in ms.
Poll_PU	OP		Integer(1,2,4,8,16,32,64,128)	Number of PUs, interval between pollings
Poll_SDU	OP		Integer(1,4,16,64)	Number of SDUs, interval between pollings
Last transmission PU poll	MP		Boolean	TRUE indicates that poll is made at last PU in transmission buffer
Last retransmission PU poll	MP		Boolean	TRUE indicates that poll is made at last PU in retransmission buffer
Poll_Window	OP		Integer(50,60,70,80,85,90,95,99)	Percentage of transmission window, threshold for polling
Timer_poll_periodic	OP		Integer(100, 200, 300, 400, 500, 750, 1000, 2000)	Time in milliseconds Timer for periodic polling.

10.3.4.5 Predefined configuration identity

This information element identifies a pre- defined radio parameter configuration.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Predefined radio configuration identity	MP		Integer (0..15)	

10.3.4.6 Predefined configuration value tag

This information element is used to identify different versions of a radio bearer configuration as may be used within one PLMN e.g. to support different UTRAN implementations.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Predefined configuration value tag	MP		Integer(0..15)	

10.3.4.7 Predefined RB configuration

This information element concerns a pre- defined configuration of radio bearer parameters

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Signalling radio bearer information				
Signalling RB information to setup List	MP	1 to <maxSRBs etup>		For each signalling radio bearer
>Signalling RB information to setup	MP		Signalling RB information to setup 10.3.4.24	
RB information				Only one RAB supported
RB information to setup list	MP	1 to <maxRBcount>		
>RB information to setup	MP		RB information to setup 10.3.4.20	

10.3.4.8 RAB info

This IE contains information used to uniquely identify a radio access bearer.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB identity	MP		RAB identity 10.3.1.14	
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS Synchronization Indicator	OP		NAS Synchronization indicator 10.3.4.12	
Re-establishment timer	MP		Re-establishment timer 10.3.3.30	

10.3.4.9 RAB info Post

This IE contains information used to uniquely identify a radio access bearer.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB identity	MP		RAB identity 10.3.1.14	
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS Synchronization Indicator	OP		NAS Synchronization indicator 10.3.4.12	

10.3.4.10 RAB information for setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB info	MP		RAB info 10.3.4.8	
RB information to setup list	MP	1 to <maxRBpe rRAB>		
>RB information to setup	MP		RB information to setup 10.3.4.20	

10.3.4.11 RAB information to reconfigure

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB identity	MP		RAB Identity 10.3.1.14	
CN domain identity	MP		CN domain identity 10.3.1.1	
NAS synchronization indicator	MP		NAS Synchronizat ion info 10.3.4.12	

10.3.4.12 NAS Synchronization indicator

A container for non-access stratum information to be transferred transparently through UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NAS Synchronization indicator	MP		Bitstring(4)	

10.3.4.13 RB activation time info

This IE contains the time, in terms of RLC sequence numbers, when a certain configuration shall be activated, for a number of radio bearers.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Radio bearer activation time	OP	1 to <maxRB>		
>RB identity	MP		RB identity 10.3.4.16	
>RLC sequence number	MP		Integer (0.. 4095)	RLC SN [TS 25.322] . Used for radio bearers mapped on RLC AM and UM

10.3.4.14 RB COUNT-C MSB information

The MSB of the COUNT-C values of the radio bearer.

Information Element/Group name	Needed	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
COUNT-C-MSB-uplink	MP		Integer (0.. $2^{25}-1$)	25 MSBs from COUNT-C associated to this RB
COUNT-C-MSB-downlink	MP		Integer (0.. $2^{25}-1$)	25 MSBs from COUNT-C associated to this RB

10.3.4.15 RB COUNT-C information

The COUNT-C values of the radio bearer.

Information Element/Group name	Needed	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
COUNT-C-uplink	MP		Integer (0.. $2^{32}-1$)	
COUNT-C-downlink	MP		Integer (0.. $2^{32}-1$)	

10.3.4.16 RB identity

An identification number for the radio bearer affected by a certain message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		Integer(1..32)	Values 0-4 shall only be used for signalling radio bearers

10.3.4.17 RB information to be affected

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
RB mapping info	MP		RB mapping info 10.3.4.21	

10.3.4.18 RB information to reconfigure

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
PDCP info	OP		PDCP info 10.3.4.2	
PDCP SN info	C PDCP		PDCP SN info 10.3.4.3	PDCP sequence number info from the network. Present only in case of lossless SRNS relocation.
CHOICE <i>RLC info type</i>	OP			
>RLC info			RLC info 10.3.4.23	
>Same as RB			RB identity 10.3.4.16	Identity of RB with exactly the same values for IE "RLC info"
RB mapping info	OP		RB mapping info 10.3.4.21	
RB stop/continue	OP		Enumerated(stop, continue)	

Condition	Explanation
<i>PDCP</i>	This IE is optional only if "PDCP info" is present. Otherwise it is absent.

10.3.4.19 RB information to release

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	

10.3.4.20 RB information to setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
PDCP info	OP		PDCP info 10.3.4.2	
CHOICE <i>RLC info type</i>	MP			
>RLC info			RLC info 10.3.4.23	
>Same as RB			RB identity 10.3.4.16	Identity of RB with exactly the same RLC info IE values
RB mapping info	MP		RB mapping info 10.3.4.21	

Multi Bound	Explanation
MaxSetupRBcount	The maximum number of RBs to setup.

NOTE This information element is included within IE "Predefined RB configuration"

10.3.4.21 RB mapping info

A multiplexing option for each possible transport channel this RB can be multiplexed on.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Information for each multiplexing option	MP	1 to <maxRBmuxOptions>		Note1
>RLC logical channel mapping indicator	CV-UL-RLCLogicalChannels		Boolean	TRUE indicates that the first logical channel shall be used for data PDUs and the second logical channel shall be used for control PDUs. FALSE indicates that control and data PDUs can be sent on either of the two logical channels.
>Number of uplink RLC logical channels	CV-UL-RLC info	1 to MaxLoCHperRLC		1 or 2 logical channels per RLC entity or radio bearer RLC [TS 25.322]
>>Uplink transport channel type	MP		Enumerated(DCH,RACH,CPCH,USCH)	CPCH is FDD only USCH is TDD only
>>ULTransport channel identity	CV-UL-DCH/USCH		Transport channel identity 10.3.5.18	This is the ID of a DCH or USCH (TDD only) that this RB could be mapped onto.
>>Logical channel identity	OP		Integer(1..15)	This parameter is used to distinguish logical channels multiplexed by MAC on a transport channel.
>>CHOICE RLC size list	MP			The RLC sizes that are allowed for this logical channel
>>>All			Null	All RLC sizes listed in the <i>Transport Format Set</i> . 10.3.5.23
>>>Configured			Null	The RLC sizes configured for this logical channel in the <i>Transport Format Set</i> . 10.3.5.23 if present in this message or in the previously stored configuration otherwise
>>>Explicit List		1 to <maxTF>		Lists the RLC sizes that are valid for the logical channel.
>>>>RLC size index	MP		Integer(1..maxTF)	The integer number is a reference to the <i>RLC size</i> which arrived at that position in the <i>Transport Format Set</i> 10.3.5.23
>>MAC logical channel priority	MP		Integer(1..8)	This is priority between a user's different RBs (or logical channels). [25.321]
>Downlink RLC logical channel info	CV-DL-RLC info			
>>Number of downlink RLC logical channels	MD	1 to MaxLoCHperRLC		1 or 2 logical channels per RLC entity or radio bearer RLC [TS 25.322] Default value is that parameter values for DL are exactly the same as for corresponding UL logical channel. In case two multiplexing options are specified for the UL, the first options shall be used as default for the DL. As regards to the IE "Channel type", rule

>>>Downlink transport channel type	MP		Enumerated(DCH,FACH, DSCH)	is specified in 8.6.4.8.
>>>DL Transport channel identity	CV-DL-DCH/DSC H		Transport channel identity 10.3.5.18	
>>>Logical channel identity	OP		Integer(1..15)	16 is reserved

Condition	Explanation
<i>UL-RLC info</i>	If "CHOICE Uplink RLC mode" in IE "RLC info" is present this IE is MP. Otherwise the IE is not needed.
<i>DL-RLC info</i>	If "CHOICE Downlink RLC mode" in IE "RLC info" is present this IE is MP. Otherwise the IE is not needed.
<i>UL-RLCLogicalChannels</i>	If "Number of uplink RLC logical channels" in IE "RB mapping info" is 2, then this is present. Otherwise this IE is not needed.
<i>UL-DCH/USCH</i>	If IE "Uplink transport channel type" is equal to "DCH" or "USCH" (TDD only) this IE is MP. Otherwise the IE is not needed.
<i>DL-DCH/DSCH</i>	If IE "Downlink transport channel type" is equal to "DCH" or "DSCH" this IE is MP. Otherwise the IE is not needed.

NOTE 1: In DCH state a logical channel may be mapped onto DCH and DSCH simultaneously, therefore maximum 4 different multiplexing options are possible in that case. In all other states maximum one RB multiplexing option is possible.

10.3.4.22 RB with PDCP information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MP		RB identity 10.3.4.16	
PDCP SN info	MP		PDCP SN info 10.3.4.3	PDCP sequence number info from the sender of the message for lossless SRNS relocation.

10.3.4.23 RLC info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>Uplink RLC mode</i>	OP			Indicates if Acknowledged, Unacknowledged or Transparent mode RLC shall be used.
>AM RLC				
>>Transmission RLC discard	MP		Transmission RLC discard 10.3.4.25	
>>Transmission window size	MP		Integer(1,8,16,32,64,128,256,512,768,1024,1536,2047,2560,3072,3584,4095)	Maximum number of RLC PUs sent without getting them acknowledged. This parameter is needed if acknowledged mode is used. UE shall also assume that the UTRAN receiver window is equal to this value.
>>Timer_RST	MP		Integer(50, 100, 150, 200, 250, 300, 350, 400, 450, 500, 550, 600, 700, 800, 900, 1000)	It is used to detect the loss of RESET ACK PDU
>>Max_RST	MP		Integer(1, 4, 6, 8, 12, 16, 24, 32)	The maximum number of retransmission of RESET PDU
>> Polling info	OP		Polling info 10.3.4.4	
>UM RLC				
>> Transmission RLC discard	OP		Transmission RLC discard 10.3.4.25	
>TM RLC				
>>Transmission RLC discard	OP		Transmission RLC discard 10.3.4.25	
>>Segmentation indication	MP		Boolean	TRUE indicates that segmentation is performed.
CHOICE <i>Downlink RLC mode</i>	OP			Indicates if Acknowledged, Unacknowledged or Transparent mode RLC shall be used
>AM RLC				
>>In-sequence delivery	MP		Boolean	TRUE indicates that RLC shall preserve the order of higher layer PDUs when these are delivered. FALSE indicates that receiving RLC entity could allow SDUs to be delivered to the higher layer in different order than submitted to RLC sublayer at the transmitting side.
>>Receiving window size	MP		Integer(1,8,16,32,64,128,256,512,768,1024,1536,2047,2560,3072,3584,4095)	Maximum number of RLC PUs allowed to be received. This parameter is needed if acknowledged mode is used. UE shall also assume that the UTRAN transmitter window is equal to this value
>>Downlink RLC status Info	MP		Downlink RLC status info 10.3.4.1	
>UM RLC				(No data)
>TM RLC				

>>Segmentation indication	MP		Boolean	TRUE indicates that segmentation is performed.
---------------------------	----	--	---------	--

NOTE This information element is included within IE "Predefined RB configuration"

10.3.4.24 Signalling RB information to setup

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB identity	MD		RB identity 10.3.4.16	Default value is specified in subclause 8.6.4.4
RLC info	OP		RLC info 10.3.4.23	
Same as RB			RB identity 10.3.4.16	Identity of RB with exactly the same RLC info IE values
RB mapping info	MP		RB mapping info 10.3.4.21	

NOTE This information element is included within IE "Predefined RB configuration"

10.3.4.25 Transmission RLC Discard

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE SDU Discard Mode	MP			Different modes for discharge the RLC buffer on the transmitter side; "Timer based with explicit signalling", "Timer based without explicit signalling", "Discard after Max_DAT retransmissions" or "No_discard". For unacknowledged mode and transparent mode, only Timer based without explicit signalling is applicable. If "No_discard" is used, reset procedure shall be done after Max_DAT retransmissions
>Timer based explicit				
>>Timer_MRW	MP		Integer(50,60, 70, 80, 90, 100, 120, 140, 160, 180, 200, 300, 400, 500, 700, 900)	It is used to trigger the retransmission of a STATUS PDU containing an MRW SUFI field
>>Timer_discard	MP		Integer(100, 250, 500, 750, 1000, 1250, 1500, 1750, 2000, 2500, 3000, 3500, 4000, 4500, 5000, 7500)	Elapsed time in milliseconds before a SDU is discarded.
>>MaxMRW	MP		Integer(1, 4, 6, 8, 12, 16, 24, 32)	It is the maximum value for the number of retransmissions of a MRW command
>Timer based no explicit				
>>Timer_discard	MP		Integer(10,20,30,40,50,60,70,80,90,100)	Elapsed time in milliseconds before a SDU is discarded.
>Max DAT retransmissions				
>> Max_DAT	MP		Integer(1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 35, 40)	Number of retransmissions of a PU before a SDU is discarded.
>>Timer_MRW	MP		Integer(50, 60, 70, 80, 90, 100, 120, 140, 160, 180, 200, 300, 400, 500, 700, 900)	It is used to trigger the retransmission of a STATUS PDU containing an MRW SUFI field
>>MaxMRW	MP		Integer(1, 4, 6, 8, 12, 16, 24, 32)	It is the maximum value for the number of retransmissions of a MRW command
>No discard				
>> Max_DAT	MP		Integer(1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30,	Number of retransmissions of a PU before the RLC entity is reset.

			35, 40)	
--	--	--	---------	--

CHOICE SDU Discard Mode	Condition under which the given SDU Discard Mode is chosen
Timer based explicit	If the modes for discharge of the RLC buffer on the transmitter side is "Timer based with explicit signalling"
Timer based no explicit	If the modes for discharge of the RLC buffer on the transmitter side is "Timer based without explicit signalling" For unacknowledged mode, only Timer based without explicit signalling is applicable.
Max DAT retransmissions	If the modes for discharge of the RLC buffer on the transmitter side is "Discard after Max_DAT retransmissions"
No discard	If the modes for discharge the of RLC buffer on the transmitter side is "Reset procedure shall be done after Max_DAT retransmissions"

10.3.5 Transport CH Information elements

10.3.5.1 Added or Reconfigured DL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Transport channel identity	MP		Transport channel identity 10.3.5.18	
CHOICE DL parameters				
>Independent				
>>TFS	MP		Transport Format Set 10.3.5.23	
>SameAsUL				
>>UL TrCH identity	MP		Transport channel identity 10.3.5.18	Same TFS applies as specified for indicated UL TrCH
DCH quality target	OP		Quality target 10.3.5.10	
Transparent mode signalling info	CV-MessageType		Transparent mode signalling info 10.3.5.17	This IE is not used in RB RELEASE message nor RB RECONFIGURATION message

Condition	Explanation
<i>MessageType</i>	This IE is absent in Radio Bearer Release message and Radio Bearer Reconfiguration message. Otherwise it is OPTIONAL.

10.3.5.2 Added or Reconfigured UL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL Transport channel identity	MP		Transport channel identity 10.3.5.18	
TFS	MP		Transport Format Set 10.3.5.23	

NOTE This information element is included within IE "Predefined RB configuration"

10.3.5.3 CPCH set ID

NOTE: Only for FDD.

This information element indicates that this transport channel may use any of the Physical CPCH channels defined in the CPCH set info which contains the same CPCH set ID. The CPCH set ID associates the transport channel with a set of PCPCH channels defined in a CPCH set info IE and a set of CPCH persistency values. The CPCH set info IE(s) and the CPCH persistency values IE(s) each include the CPCH set ID and are part of the SYSTEM INFORMATION message

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CPCH set ID	MP		Integer(1...maxCPCHsets)	Identifier for CPCH set info and CPCH persistency value messages

10.3.5.4 Deleted DL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Transport channel identity	MP		Transport channel identity 10.3.5.18	

10.3.5.5 Deleted UL TrCH information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL Transport channel identity	MP		Transport channel identity 10.3.5.18	

10.3.5.6 DL Transport channel information common for all transport channels

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SCCPCH TFCS	OP		Transport Format Combination Set 10.3.5.20	This IE should be absent within IE "Predefined RB configuration"
CHOICE <i>mode</i>	OP			
>FDD				
>>CHOICE DL parameters	MP			
>>>Independent				
>>>>DL DCH TFCS	OP		Transport Format Combination Set 10.3.5.20	
>>>SameAsUL				(no data)
>TDD				
>>Individual DL CCTrCH information	OP	1 to >maxCCTrCH>		
>>>DL TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Identifies a special CCTrCH for shared or dedicated channels.
>>>CHOICE DL parameters	MP			
>>>>Independent				
>>>>>DL TFCS	MP		Transport format combination set 10.3.5.20	
>>>>SameAsUL				
>>>>>UL DCH TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Same TFCS applies as specified for the indicated UL DCH TFCS identity except for information applicable for UL only

NOTE This information element is included within IE "Predefined TrCh configuration"

10.3.5.7 DRAC Static Information

NOTE: Only for FDD.

Contains static parameters used by the DRAC procedure. Meaning and use is described in subclause 14.8.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission Time Validity	MP		Integer(1..256)	number of frames
Time duration before retry	MP		Integer(1..256)	number of frames
DRAC Class Identity	MP		Integer(1..8)	Indicates the class of DRAC parameters to use in SIB10 message

10.3.5.8 Power Offset Information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>Gain Factors</i>	MP			
>Signalled Gain Factors				
>>CHOICE mode				
>>>FDD				
>>>>Gain Factor β_c	MP		Integer (0.. 15)	For UL DPCCH or control part of PRACH or PCPCH
>>>TDD				(no data)
>>Gain Factor β_d	MP		Integer (0..15)	For UL DPDCH or data part of PRACH or PCPCH in FDD and all uplink channels in TDD
>>Reference TFC ID	OP		Integer (0..3)	If this TFC is a reference TFC, indicates the reference ID.
>Computed Gain Factors				
>>Reference TFC ID	MP		Integer (0.. 3)	Indicates the reference TFC Id of the TFC to be used to calculate the gain factors for this TFC. In case of using computed gain factors, at least one signalled gain factor is necessary for reference.
CHOICE mode				
>FDD				
>>Power offset P _{p-m}	OP		Integer(-5..10)	In dB. Power offset between the last transmitted preamble and the control part of the message (added to the preamble power to receive the power of the message control part) Needed only for PRACH
>TDD				(no data)

CHOICE <i>Gain Factors</i>	Condition under which the way to signal the <i>Gain Factors</i> is chosen
<i>Signalled Gain Factors</i>	The values for gain factors β_c (only in FDD mode) and β_d are signalled directly for a TFC.
<i>Computed Gain Factors</i>	The gain factors β_c (only in FDD mode) and β_d are computed for a TFC, based on the signalled settings for the associated reference TFC.

10.3.5.9 Predefined TrCH configuration

This information element concerns a pre- defined configuration of transport channel parameters.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UL Transport channel information common for all transport channels	MP		UL Transport channel information common for all transport channels 10.3.5.24	
Added or Reconfigured TrCH information				
Added or Reconfigured UL TrCH information	MP	1 to <maxTrCH preconf>		
>Added or Reconfigured UL TrCH information	MP		Added or Reconfigured UL TrCH information 10.3.5.2	
DL Transport channel information common for all transport channels	MP		DL Transport channel information common for all transport channels 10.3.5.6	
Downlink transport channels				
Added or Reconfigured DL TrCH information	MP	1 to <maxTrCH preconf>		
>Added or Reconfigured DL TrCH information	MP		Added or Reconfigured DL TrCH information 10.3.5.1	

10.3.5.10 Quality Target

Information Element/Group name	Need	Multi	Type and reference	Semantics description
BLER Quality value	MP		Real(-6.3 ..0 by step of 0.1)	Signalled value is Log10(Transport channel BLER quality target)

10.3.5.11 Semi-static Transport Format Information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission time interval	MP		Integer(10, 20, 40, 80, dynamic)	In ms. The value dynamic is only used in TDD mode
Type of channel coding	MP		Enumerated(No coding, Convolutional, Turbo)	
Coding Rate	CV-Coding		Enumerated(1/2, 1/3)	
Rate matching attribute	MP		Integer(1..hi RM)	
CRC size	MP		Integer(0, 8, 12, 16, 24)	in bits

Condition	Explanation
<i>Coding</i>	This IE is only present if IE "Type of channel coding" is "Convolutional"

10.3.5.12 TFCI Field 2 Information

UTRAN has the choice of two methods for signalling the mapping between TFCI (field 2) values and the corresponding TFC:

Method #1 - TFCI range

The mapping is described in terms of a number of groups, each group corresponding to a given transport format combination (value of CTFC(field2)). The CTFC(field2) value specified in the first group applies for all values of TFCI(field 2) between 0 and the specified 'Max TFCI(field2) value'. The CTFC(field2) value specified in the second group applies for all values of TFCI(field 2) between the 'Max TFCI(field2) value' specified in the last group plus one and the specified 'Max TFCI(field2) value' in the second group. The process continues in the same way for the following groups with the TFCI(field 2) value used by the UE in constructing its mapping table starting at the largest value reached in the previous group plus one. A range of TFCI values on the transport channel level can be configured to correspond to a range of codes in PDSCH mapping table.

Method #2 - Explicit

The mapping between TFCI(field 2) value and CTFC(field2) is spelt out explicitly for each value of TFCI (field2).

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE <i>Signalling method</i>	MP			
> TFCI range				
>> TFCI(field 2) range	MP	1 to <maxPDSCH-TFCIgroups>		
>>>Max TFCI(field2) value	MP		Integer(1..1023)	This is the Maximum value in the range of TFCI(field2) values for which the specified CTFC(field2) applies
>>>TFCS Information for DSCH (TFCI range method)	MP		TFCS Information for DSCH (TFCI range method) 10.3.5.14	
> Explicit				
>>TFCS explicit configuration	MP		TFCS explicit configuration 10.3.5.13	

CHOICE <i>Signalling method</i>	Condition under which <i>Split type</i> is chosen
TFCI range	
Explicit	

10.3.5.13 TFCS Explicit Configuration

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE TFCS representation	MP			
>Complete reconfiguration				
>>TFCS complete reconfiguration information	MP		TFCS Reconfiguration/Addition information 10.3.5.15	
>Addition				
>> TFCS addition information	MP		TFCS Reconfiguration/Addition information 10.3.5.15	
>Removal				
>> TFCS removal information	MP		TFCS Removal	

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
			Information 10.3.5.16	
>Replace				
>> TFCS removal information	MP		TFCS Removal Information 10.3.5.16	
>> TFCS addition information	MP		TFCS Reconfiguration/Addition information 10.3.5.15	

10.3.5.14 TFCS Information for DSCH (TFCI range method)

The CTFC size should be chosen based on the maximum CTFC size for the UE. Integer number calculated according to clause 14. The calculation of CTFC ignores any DCH transport channels which may be assigned.

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE CTFC Size	MP			
>2 bit CTFC				
>>2bit CTFC	MP		Integer(0..3)	
>4 bit CTFC				
>>4bit CTFC	MP		Integer(0..15)	
>6 bit CTFC				
>>6 bit CTFC	MP		Integer(0..63)	
>8 bit CTFC				
>>8 bit CTFC	MP		Integer(0..255)	
>12 bit CTFC				
>>12 bit CTFC	MP		Integer(0..4095)	
>16 bit CTFC				
>>16 bit CTFC	MP		Integer(0..65535)	
>24 bit CTFC				
>>24 bit CTFC	MP		Integer(0..16777215)	

10.3.5.15 TFCS Reconfiguration/Addition Information

When it is used in TFCI field 1, the calculation of CTFC ignores any DSCH transport channels which may be assigned. When it is used in TFCI field 2, the calculation of CTFC ignores any DCH transport channels.

The CTFC size should be chosen based on the maximum CTFC size for the UE. The first instance of the parameter "CTFC information" corresponds to Transport format combination 0, the second to transport format combination 1 and so on when it is used besides the case of TFCS *Addition*. Integer number of CTFC calculated according to clause 14.

In case of TFCS *Addition*, the integer number(s) is the CTFC that is added. The new additional TFC(s) is inserted into the first available position(s) in the TFCI. CTFC size should be same as the size used in *Complete reconfiguration*.

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE CTFC Size	MP			
>2 bit CTFC				
>>CTFC information	MP	1 to <maxTFC>		
>>>2bit CTFC	MP		Integer(0..3)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>4 bit CTFC				
>>CTFC information	MP	1 to <maxTFC>		
>>>4bit CTFC	MP		Integer(0..15)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>6 bit CTFC				
>>CTFC information	MP	1 to <maxTFC>		
>>>6 bit CTFC	MP		Integer(0..63)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>8 bit CTFC				
>>CTFC information	MP	1 to <MaxTFC>		
>>>8 bit CTFC	MP		Integer(0..255)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>12 bit CTFC				
>>CTFC information	MP	1 to <maxTFC>		
>>>12 bit CTFC	MP		Integer(0..4095)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>16 bit CTFC				
>>CTFC information	MP	1 to <maxTFC>		
>>>16 bit CTFC	MP		Integer(0..65535)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.
>24 bit CTFC				
>>CTFC information	MP	1 to <MaxTFC>		
>>>24 bit CTFC	MP		Integer(0..16777215)	
>>>Power offset Information	OP		Power Offset Information 10.3.5.8	Needed only for uplink physical channels.

10.3.5.16 TFCS Removal Information

The integer number(s) is a reference to the transport format combinations to be removed.

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Removal TFCI information	MP	1 to <maxTFC>		
>TFCI	MP		Integer(0..1023)	

Range Bound	Explanation
<i>MaxDelTFCcount</i>	Maximum number of Transport Format Combinations to be removed.

10.3.5.17 Transparent mode signalling info

This information element points out a transport channel that is used for transparent mode signalling, and which type of message that is sent on the DCCH mapped on that channel.

There are two modes of this transparent mode signalling. Mode 1 controls all transport channels for one UE. Mode 2 only control a subset of the transport channels for one UE.

Information Element	Need	Multi	Type and reference	Semantics description
Type of message	MP		Enumerated (TRANSPORT FORMAT COMBINATION CONTROL)	Indicates which type of message sent on the transparent mode signalling DCCH
CHOICE <i>Transparent signalling mode</i>	MP			
>Mode 1				(no data)
>Mode 2				
>>Controlled transport channels list	MP	1 to <maxTrCH>		The transport channels that are effected by the rate control commands sent on this transparent mode DCCH
>>>UL Controlled transport channels	MP		Transport channel identity, 10.3.5.18	

10.3.5.18 Transport channel identity

This information element is used to distinguish transport channels. Transport channels of different type (RACH, CPCH, USCH, FACH/PCH, DSCH or DCH) have separate series of identities. This also holds for uplink and downlink transport channel identities (i.e. for DCH). Depending on in which context a transport channel identity *n* that is sent, it will have different meaning

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport channel identity	MP		Integer(1..32)	

10.3.5.19 Transport Format Combination (TFC)

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport format combination	MP		Integer (0..1023)	

10.3.5.20 Transport Format Combination Set

Indicates the allowed combinations of already defined Transport formats and the mapping between these allowed TFCs and the corresponding TFCI values.

For TDD, different coded composite transport channels have independent transport format combination sets and thus independent TFCI values.

For FDD, Where the UE is assigned access to one or more DSCH transport channels, a TFCI(field2) is used to signal the transport format combination for the DSCH. The following two cases exist:

- Case 1:
Using one TFCI-word on the physical layer. A logical split determines the available number of transport format combinations for DCH and DSCH.
- Case 2:
Using split TFCI on the physical layer. Two TFCI-words, each having a static length of five bits, are used.

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
CHOICE <i>TFCI signalling</i>	MP			'Normal' : meaning no split in the TFCI field (either 'Logical' or 'Hard') 'Split' : meaning there is a split in the TFCI field (either 'Logical' or 'Hard'). This value is only valid for FDD downlink when using DSCH.
> Normal				
>> TFCI Field 1 Information	MP		TFCS explicit Configuration 10.3.5.13	
> Split				
>> Split type	OP		Enumerated ('Hard', 'Logical')	'Hard' : meaning that TFCI (field 1) and TFCI (field 2) are each 5 bits long and each field is block coded separately. 'Logical' : meaning that on the physical layer TFCI (field 1) and TFCI (field 2) are concatenated, field 1 taking the most significant bits and field 2 taking the least significant bits). The whole is then encoded with a single block code.
>> Length of TFCI(field2)	OP		Integer (1..10)	This IE indicates the length measured in number of bits of TFCI(field2)
>> TFCI Field 1 Information	OP		TFCS explicit Configuration 10.3.5.13	
>> TFCI Field 2 Information	OP		TFCI field 2 information 10.3.5.12	

CHOICE <i>TFCI signalling</i>	Condition under which <i>TFCI signalling type</i> is chosen
Normal	It is chosen when no split in the TFCI field.
Split	It is chosen when split in the TFCI field. This value is only valid for FDD downlink when using DSCH.

10.3.5.21 Transport Format Combination Set Identity

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCS ID	MD		Integer (1..8)	Indicates the identity of every TFCS within a UE. Default value is 1.
Shared Channel Indicator	MP		Boolean	TRUE indicates the use of shared channels. Default is false.

10.3.5.22 Transport Format Combination Subset

Indicates which Transport format combinations in the already defined Transport format combination set are allowed.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Subset representation	MP			
>Minimum allowed Transport format combination index			Transport format combination 10.3.5.19	The integer number is a reference to the <i>Transport format combination</i> , which arrived at that position in the <i>Transport Format Combination Set</i> .
>Allowed transport format combination list		1 to <maxTFC>		
>>Allowed transport format combination	MP		Transport format combination 10.3.5.19	The integer number is a reference to the <i>Transport format combination</i> , which arrived at that position in the <i>Transport Format Combination Set</i> .
>Non-allowed transport format combination list		1 to <maxTFC>		
>>Non-allowed transport format combination	MP		Transport format combination 10.3.5.19	The integer number is a reference to the <i>Transport format combination</i> , which arrived at that position in the <i>Transport Format Combination Set</i> .
>Restricted TrCH information		1 to <maxTrCH >		
>>Restricted UL TrCH identity	MP		Transport channel identity 10.3.5.18	The integer number(s) is a reference to the transport channel that is restricted.
>>>Allowed TFIs	OP	1 to <maxTF>		
>>>>Allowed TFI	MP		Integer(0..31)	The integer number is a reference to the transport format that is allowed. If no elements are given, all transport formats or the TrCH with non-zero rate are restricted.
>Full transport format combination set				(No data)

10.3.5.23 Transport Format Set

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>Transport channel type</i> >Dedicated transport channels	MP			The transport channel that is configured with this TFS is of type DCH
>>Dynamic Transport Format Information	MP	1 to <maxTF>		Note 1
>>>RLC Size	MP		Integer(0..4992)	Unit is bits Note 2
>>>>Number of TBs and TTI List	MP	1 to <maxTF>		Present for every valid number of TB's (and TTI) for this RLC Size.
>>>>>Transmission Time Interval	CV-dynamicTTI		Integer(10,20,40,80)	Unit is ms.
>>>>>Number of Transport blocks	MP		Integer(0..512)	Note 3
>>>>CHOICE <i>Logical Channel List</i>	MP			The logical channels that are allowed to use this RLC Size
>>>>>ALL			Null	All logical channels mapped to this transport channel.
>>>>>Configured			Null	The logical channels configured to use this RLC size in the <i>RB mapping info</i> . 10.3.4.21 if present in this message or in the previously stored configuration otherwise
>>>>>Explicit List		1 to 15		Lists the logical channels that are allowed to use this RLC size.
>>>>>>RB Identity	MP		RB identity 10.3.4.16	
>>>>>>>LogicalChannel	CH-UL-RLCLogicalChannels		Integer(0..1)	Indicates the relevant UL logical channel for this RB. "0" corresponds to the first, "1" corresponds to the second UL logical channel configured for this RB in the IE "RB mapping info".
>>Semi-static Transport Format Information	MP		Semi-static Transport Format Information 10.3.5.11	
>Common transport channels				The transport channel that is configured with this TFS is of a type not equal to DCH
>>Dynamic Transport Format Information	MP	1 to <maxTF>		Note
>>>RLC Size	MP		Integer(0..4992)	Unit is bits Note 2
>>>>Number of TBs and TTI List	MP	1 to <maxTF>		Present for every valid number of TB's (and TTI) for this RLC Size.
>>>>>Number of Transport blocks	MP		Integer(0..512)	Note 3
>>>>>CHOICE mode	MP			
>>>>>>FDD				(no data)
>>>>>>TDD				
>>>>>>> Transmission Time Interval	CV-dynamicTTI		Integer(10,20,40,80)	Unit is ms.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>>CHOICE <i>Logical Channel List</i>	MP			The logical channels that are allowed to use this RLC Size
>>>>ALL			Null	All logical channels mapped to this transport channel.
>>>>Configured			Null	The logical channels configured to use this RLC size in the <i>RB mapping info</i> . 10.3.4.21 if present in this message or in the previously stored configuration otherwise
>>>>Explicit List		1 to 15		Lists the logical channels that are allowed to use this RLC size.
>>>>>RB Identity	MP		RB identity 10.3.4.16	
>>>>>LogicalChannel	CV-UL-RLCLogicalChannels		Integer(0..1)	Indicates the relevant UL logical channel for this RB. "0" corresponds to the first, "1" corresponds to the second UL logical channel configured for this RB in the IE "RB mapping info".
>>Semi-static Transport Format Information	MP		Semi-static Transport Format Information 10.3.5.11	

Condition	Explanation
<i>dynamicTTI</i>	This IE is included if dynamic TTI usage is indicated in IE Transmission Time Interval in Semi-static Transport Format Information. Otherwise it is not needed.
<i>UL-RLCLogicalChannels</i>	If "Number of uplink RLC logical channels" in IE "RB mapping info" in this message is 2 or the IE "RB mapping info" is not present in this message and 2 UL logical channels are configured for this RB, then this IE is present. Otherwise this IE is not needed.

NOTE 1: The first instance of the parameter *Number of TBs and TTI List* within the *Dynamic transport format information* correspond to transport format 0 for this transport channel, the second to transport format 1 and so on. The total number of configured transport formats for each transport channel does not exceed <maxTF>.

NOTE: The parameter "rate matching attribute" is in line with the RAN WG1 specifications. However, it is not currently in line with the description in 25.302.

NOTE 2: For dedicated channels, 'RLC size' reflects RLC PDU size. In FDD for common channels 'RLC size' reflects actual TB size. In TDD for common channels since MAC headers are not octet aligned, to calculate TB size the MAC header bit offset is added to the specified size (similar to the dedicated case). Therefore for TDD DCH TrCHs the 4 bit C/T is added if MAC multiplexing is applied, for FACH the 3 bit TCTF offset is added and for RACH the 2 bit TCTF offset is added.

NOTE 3: If the number of transport blocks $\langle 0$, and Optional IE "CHOICE RLC mode" or "CHOICE Transport block size is absent, it implies that no RLC PDU data exists but only parity bits exist. If the number of transport blocks = 0, it implies that neither RLC PDU data nor parity bits exist. In order to ensure the possibility of CRC based Blind Transport Format Detection, UTRAN should configure a transport format with number of transport block $\langle 0$, with a zero-size transport block.

10.3.5.24 UL Transport channel information common for all transport channels

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFC subset	MD		Transport Format Combination Subset 10.3.5.22	Default value is the complete existing set of transport format combinations
PRACH TFCS	OP		Transport format combination set 10.3.5.20	This IE should be absent within IE "Predefined RB configuration"
CHOICE <i>mode</i>	OP			
>FDD				
>>UL DCH TFCS	MP		Transport formation combination set 10.3.5.20	
>TDD				
>>Individual UL CCTrCH information	OP	1 to <maxCCTrCH>		
>>>UL TFCS Identity	MP		Transport format combination set identity 10.3.5.21	Identifies a special CCTrCH for shared or dedicated channels.
>>>UL TFCS	MP		Transport format combination set 10.3.5.20	

NOTE This information element is included within IE "Predefined TrCh configuration"

10.3.6 Physical CH Information elements

10.3.6.1 AC-to-ASC mapping

Information Element/Group name	Need	Multi	Type and reference	Semantics description
AC-to-ASC mapping table	MP	maxASCmap		
> AC-to-ASC mapping	MP		Integer(0..7)	Mapping of Access Classes to Access Service Classes (see subclause 8.5.13.)

10.3.6.2 AICH Info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Channelisation code	MP		Integer(0..255)	SF is fixed and equal to 256
STTD indicator	MP		STTD Indicator 10.3.6.78	
AICH transmission timing	MP		Enumerated (0, 1)	See parameter AICH_Transmission_Timing in 3GPP TS 25.211

10.3.6.3 AICH Power offset

NOTE: Only for FDD.

This is the power per transmitted Acquisition Indicator minus power of the Primary CPICH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
AICH Power offset	MP		Integer(-22..+5)	Offset in dB

10.3.6.4 Allocation period info

NOTE: Only for TDD.

Parameters used by UE to determine period of shared channel allocation.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Allocation Activation Time	MP		Integer (1..256)	Frame number start of the allocation period.
Allocation Duration	MP		Integer (1..256)	Total number of frames for the allocation period.

10.3.6.5 Alpha

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Alpha Value	MP		Enumerated(0, 1/8, 2/8, 3/8, 4/8, 5/8, 6/8, 7/8, 1)	

10.3.6.6 ASC setting

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Available signature Start Index	MP		Integer(0..15)	
Available signature End Index	MP		Integer(0..15)	
Assigned Sub-Channel Number	MP		Bitstring(4)	See Note below.

NOTE: The usage of this IE is conditional upon setting of IE "AICH transmission timing". In case that "AICH transmission timing" = 0, the leftmost bit shall be ignored. The 3 rightmost (least significant bits) shall be repeated 4 times to form a bitstring of length 12 bits. In case that "AICH transmission timing" = 1, the bitstring shall be repeated 3 times to form a bitstring of length 12 bits.

In both cases, for the resulting bitstring (that includes the repetitions) bit-wise logical AND operation with the IE "Available Sub Channel number" included in IE "PRACH info (for RACH)" shall be performed.

The resulting bitstring, after logical AND operation, indicates the sub-channels assigned to the respective ASC. This bitstring shall be interpreted by the UE in the same way as specified for the IE "Available Sub-Channel Number", see subclause 10.3.6.61 (i.e. each bit set to 1 or 0 indicates availability or non-availability, respectively, of sub-channel number $_x$, $x = 0$ to 11, for the respective ASC).

10.3.6.7 Block STTD indicator

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Block STTD indicator	MP		Boolean	TRUE indicates that block STTD is used

10.3.6.8 CCTrCH power control info

Parameters used by UE to set the SIR target value for uplink open loop power control in TDD.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
TFCS Identity	OP		Transport Format Combination Set Identity 10.3.5.21	TFCS Identity of this CCTrCH. Default value is 1.
Uplink DPCH power control info	MP		Uplink DPCH power control info 10.3.6.91	

10.3.6.9 Cell parameters Id

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Cell parameter Id	MP		Integer(0..127)	

10.3.6.10 Common timeslot info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
2 nd interleaving mode	MD		Enumerated(Frame, Timeslot)	Frame timeslot related interleaving. Default value is "Frame"
TFCI coding	MD		Integer(4,8,16,32)	Describes the way the TFCI bits are coded in bits. Defaults is no TFCI bit: 4 means 1 TFCI bit is coded with 4 bits. 8 means 2 TFCI bits are coded with 8 bits. 16 means 3 – 5 TFCI bits are coded with 16 bits. 32 means 6 – 10 TFCI bits coded with 32 bits.
Puncturing limit	MP		Real(0.40..1.0 by step of 0.04)	
Repetition period	MD		Integer(1, 2,4,8,16,32,64)	Default is continuous allocation. Value 1 indicate continuous
Repetition length	MP		Integer(1..Repetition period – 1)	Note that this is empty if repetition period is set to 1

10.3.6.11 Constant value

This constant value is used by the UE to calculate the initial output power on PRACH according to the Open loop power control procedure. In TDD constant values are used for open loop power control of PRACH, USCH and UL DPCH as defined in section 8.5.7.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Constant value	MP		Integer (-35..-10)	

10.3.6.12 CPCH persistence levels

NOTE: Only for FDD.

This IE is dynamic and is used by RNC for load balancing and congestion control. This is broadcast often in the system information message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CPCH set ID	MP		Integer (1 .. <maxCPCHs ets>)	Identifier for CPCH set info.
Dynamic persistence level	MP	1 to <maxTF-CPCH>		
>Dynamic persistence level	MP		Dynamic persistence level 10.3.6.35	Persistence level for transport format.

10.3.6.13 CPCH set info

NOTE: Only for FDD.

This IE may be broadcast in the System Information message or assigned by SRNC. It is pseudo-static in a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CPCH set ID	MP		CPCH set ID 10.3.5.3	Indicates the ID number for a particular CPCH set allocated to a cell.
TFS	MP		Transport Format Set 10.3.5.23	Transport Format Set Information allocated to this CPCH set.
TFCS	MP		Transport Format Combination Set 10.3.5.20	Transport Format Set Information allocated to this CPCH set
AP preamble scrambling code	MP		Integer (0..79)	Preamble scrambling code for AP in UL
AP-AICH channelisation code	MP		Integer(0..255)	Channelisation code for AP-AICH in DL
CD preamble scrambling code	MP		Integer (0..79)	Preamble scrambling code for CD in UL
CD/CA-ICH channelisation code	MP		Integer (0..255)	Channelisation code for CD/CA-ICH in DL
Available CD access slot subchannel	CV-CDSigPresent	1 to <maxPCPCH-CDsubCh>		Lists the set of subchannels to be used for CD access preambles. Note: if not present, all subchannels are to be used without access delays.
>CD access slot subchannel	MP		Integer (0..11)	
Available CD signatures	OP	1 to <maxPCPCH-CDsig>		Signatures for CD preamble in UL. Note: if not present, all signatures are available for use.
>CD signatures	MP		Integer (0..15)	
DeltaPp-m	MP		Integer (-10..10)	In dB. Power offset between the transmitted CD preamble and UL DPCCH of the power control preamble or message part (added to the preamble power to calculate the power of the UL DPCCH)
UL DPCCH Slot Format	MP		Enumerated (0,1,2)	Slot format for UL DPCCH in power control preamble and in message part
N_start_message	MP		Integer (1..8)	Number of Frames for start of message indication
N_EOT	MP		Integer(0..7)	Actual number of appended EOT indicators is $T_EOT = N_TTI * \text{ceil}(N_EOT/N_TTI)$, where N_TTI is the number of frames per TTI and "ceil" refers to rounding up to nearest integer.
Channel Assignment Active	OP		Boolean	When present, indicates that Node B send a CA message and VCAM mapping rule (14.11) shall be used.
CPCH status indication mode	MP		CPCH status indication mode	

			10.3.6.14	
PCPCH Channel Info.	MP	1 to <maxPCP CHs>		
> UL scrambling code	MP		Integer (0..79)	For PCPCH message part
> DL channelisation code	MP		Integer (0...511)	For DL DPCCH for PCPCH message part
> DL scrambling code	MD		Secondary Scrambling Code 10.3.6.74	Default is the same scrambling code as for the primary CPICH.
> PCP length	MP		Enumerated (0, 8)	Indicates length of power control preamble, 0 slots (no preamble used) or 8 slots
> UCSM Info	CV-NCAA			
>> Minimum Spreading Factor	MP		Integer (4,8,16,32,64,128,256)	The UE may use this PCPCH at any Spreading Factor equal to or greater than the indicated minimum Spreading Factor. The Spreading Factor for initial access is the minimum Spreading Factor.
>> NF_max	MP		Integer (1...64)	Maximum number of frames for PCPCH message part
>> Channel request parameters for UCSM	MP	1 to <maxSig>		Required in UE channel selection mode.
>>> Available AP signature	MP	1 to <maxPCP CH-APsig>		AP preamble signature codes for selection of this PCPCH channel.
>>>> AP signature	MP		Integer (0..15)	
>>> Available AP access slot subchannel	OP	1 to <maxPCP CH-APsubCh>		Lists the set of subchannels to be used for AP access preambles in combination with the above AP signature(s). Note: if not present, all subchannels are to be used without access delays.
>>>> AP access slot subchannel	MP		Integer (0..11)	
VCAM info	CV-CAA			
> Available Minimum Spreading Factor	MP	1 to <maxPCP CH-SF>		
>> Minimum Spreading Factor	MP		Enumerated (4,8,16,32,64,128,256)	
>>NF_max	MP		Integer (1..64)	Maximum number of frames for PCPCH message part
>> Maximum available number of PCPCH	MP		Integer (1..64)	Maximum available number of PCPCH for the indicated Spreading Factor.
>> Available AP signatures	MP	1 to <maxPCP CH-APsig>		Signatures for AP preamble in UL.
>>> AP signature			Integer (0..15)	
>> Available AP sub-channel	OP	1 to <maxPCP CH-APsubCh>		AP sub-channels for the given AP signature in UL. Note: if not present, all subchannels are to be used without access delays.
>>> AP sub-channel	MP		Integer (0..11)	

Condition	Explanation
<i>CDSigPresent</i>	This IE may be included if IE "Available CD signatures" is present.
<i>NCAA</i>	This IE is included if IE "Channel Assignment Active" is not present
<i>CAA</i>	This IE is included if IE ""Channel Assignment Active" is present.

10.3.6.14 CPCH Status Indication mode

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CPCH Status Indication mode	MP		Enumerated (PA mode, PAMASF mode)	Defines the status information type broadcast on the CPCH Status Indication Channel (CSICH)

CPCH Status Indication mode defines the structure of the CSICH information which is broadcast by Node B on the CSICH channel. CSICH mode can take 2 values: PCPCH Availability (PA) mode and PCPCH Availability with Minimum Available Spreading Factor (PAMASF) mode. PAMASF mode is used when Channel Assignment is active. PA mode is used when Channel Assignment is not active (UE Channel Selection is active). 3GPP TS25.211 defines the structure of the CSICH information for both CSICH modes.

10.3.6.15 CSICH Power offset

NOTE: Only for FDD.

This is the power per transmitted CSICH Indicator minus power of the Primary CPICH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CSICH Power offset	MP		Integer(-10..+5)	Offset in dB, granularity of 1 dB

10.3.6.16 Default DPCH Offset Value

Indicates the default offset value within interleaving size at a resolution of 512chip (1/5 slot) in FDD and a resolution of one frame in TDD to offset CFN in the UE. This is used to distribute discontinuous transmission periods in time and also to distribute NodeB-RNC transmission traffics in time. Even though the CFN is offset by DOFF, the start timing of the interleaving will be the timing that "CFN mod (interleaving size)"=0 (e.g. interleaving size: 2,4,8) in both UE and SRNC.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode				
>FDD				
>>Default DPCH Offset Value (DOFF)	MP		Integer (0..306688 by step of 512)	Number of chips= 0 to 599 time 512 chips, see TS 25.402.
>TDD				
>>Default DPCH Offset Value (DOFF)	MP		Integer(0..7)	Number of frames; See TS 25.402

10.3.6.17 Downlink channelisation codes

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>codes representation</i>	MP			
>Consecutive codes				
>>First channelisation code	MP		Enumerated ((16/1)...(16/16))	The codes from First channelisation code to Last channelisation code shall be used in that order by the physical layer in this timeslot. If a TFCI exists in this timeslot, it is mapped in the First channelisation code.
>>Last channelisation code	MP		Enumerated ((16/1)...(16/16))	If this is the same as First channelisation code, only one code is used by the physical layer.
>Bitmap				
>>Channelisation codes bitmap	MP		Bitmap(16)	The first bit in this bitmap corresponds to channelisation code (16/1) the second to (16/2) and so on. A 1 in the bitmap means that the code is used in this timeslot, a 0 that the code is not used. The codes shall be used in the order from (16/1) to (16/16) by the physical layer.

10.3.6.18 Downlink DPCH info common for all RL

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timing Indication	MP		Enumerated(Initialise, Maintain)	
CFN-targetSFN frame offset	CV TimInd		Integer(0..255)	In frame
CHOICE <i>mode</i>				
>FDD				
>>Downlink DPCH power control information	OP		Downlink DPCH power control information 10.3.6.23	
>>Downlink rate matching restriction information	OP		Downlink rate matching restriction information 10.3.6.31	If this IE is set to "absent", no Transport CH is restricted in TFI.
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	
>>Fixed or Flexible Position	MP		Enumerated (Fixed, Flexible)	
>>TFCI existence	MP		Boolean	TRUE indicates that TFCI exists
>>CHOICE <i>SF</i>	MP			
>>> <i>SF</i> = 256				
>>>> Number of bits for Pilot bits	MP		Integer (2,4,8)	In bits
>>> <i>SF</i> = 128				
>>>>Number of bits for Pilot bits	MP		Integer(4,8)	In bits
>>> Otherwise				(no data)
>TDD				
>>Common timeslot info	MD		Common Timeslot Info 10.3.6.10	Default is the current Common timeslot info

CHOICE <i>SF</i>	Condition under which the given <i>SF</i> is chosen
SF=128	"Spreading factor" is set to 128
SF=256	"Spreading factor" is set to 256
Otherwise	"Spreading factor" is set to a value distinct from 128 and 256

Condition	Explanation
<i>TimInd</i>	This IE is OPTIONAL if the IE "Timing Indication" is set to "Initialise". Otherwise it is absent.

10.3.6.19 Downlink DPCH info common for all RL Post

NOTE: Only for FDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Downlink DPCH power control information	OP		Downlink DPCH power control information 10.3.6.23	

10.3.6.20 Downlink DPCH info common for all RL Pre

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	Defined in CHOICE SF512-Andpilot with "number of its for pilot bits" in ASN.1
>>Fixed or Flexible Position	MP		Enumerated (Fixed, Flexible)	
>>TFCI existence	MP		Boolean	TRUE indicates that TFCI exists
>>CHOICE <i>SF</i>	MP			
>>> SF = 256				
>>>> Number of bits for Pilot bits	MP		Integer (2,4,8)	In bits
>>> SF = 128				
>>>>Number of bits for Pilot bits	MP		Integer(4,8)	In bits
>>> Otherwise				(no data)
>TDD				
>>Common timeslot info	MP		Common Timeslot Info 10.3.6.10	

CHOICE <i>SF</i>	Condition under which the given <i>SF</i> is chosen
SF=128	"Spreading factor" is set to 128
SF=256	"Spreading factor" is set to 256
Otherwise	"Spreading factor" is set to a value distinct from 128 and 256

10.3.6.21 Downlink DPCH info for each RL

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62	
>>DPCH frame offset	MP		Integer(0..381 44 by step of 256)	Offset (in number of chips) between the beginning of the P-CCPCH frame and the beginning of the DPCH frame This is called $\tau_{DPCH,n}$ in TS 25.211
>>Secondary CPICH info	OP		Secondary CPICH info 10.3.6.73	
>>DL channelisation code	MP	1 to <maxDPC H-DLchan>		SF of the channelisation code of the data part for each DPCH
>>>Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH
>>> CHOICE <i>Spreading factor</i>	MP		Integer(4, 8, 16, 32, 64, 128, 256, 512)	Defined in CHOICE SF512-AndCodenummer with "code number" in ASN.1
>>>Code number	MP		Integer(0..Spreading factor - 1)	
>>> Scrambling code change	CH SF/2		Enumerated (code change, no code change)	Indicates whether the alternative scrambling code is used for compressed mode method 'SF/2'.
>>TPC combination index	MP		TPC combination index 10.3.6.85	
>>SSDT Cell Identity	OP		SSDT Cell Identity 10.3.6.76	
>>Closed loop timing adjustment mode	CH TxDiversity Mode		Integer(1, 2)	It is present if current TX Diversity Mode in UE is "closed loop mode 1" or "closed loop mode 2". Value in slots
>TDD				
>>DL CCTrCh List	MP	1..<maxCC TrCH>		
>>>TFCS ID	MD		Integer(1..8)	Identity of this CCTrCh. Default value is 1
>>>Time info	MP		Time Info 10.3.6.83	
>>>Downlink DPCH timeslots and codes	MD		Downlink Timeslots and Codes 10.3.6.32	Default is to use the old timeslots and codes.
>>>UL CCTrCH TPC List	MD	1..<maxCC TrCH>		UL CCTrCH identities for TPC commands associated with this DL CCTrCH. Default is previous list or all defined UL CCTrCHs
>>>>UL TPC TFCS Identity	MP		Transport Format	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
			Combination Set Identity 10.3.5.21	

Condition	Explanation
<i>SF/2</i>	The information element is mandatory if the UE has an active compressed mode pattern sequence, which is using compressed mode method "SF/2". Otherwise the IE is not needed.
<i>TxDiversity Mode</i>	This IE is present if current TX Diversity Mode in UE is "closed loop mode 1" or "closed loop mode 2". Otherwise the IE is not needed.

10.3.6.22 Downlink DPCH info for each RL Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62	
>>Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH
>>Code number	MP		Integer(0..max CodeNum)	
>>TPC combination index	MP		TPC combination index 10.3.6.85	
>TDD				
>>Downlink DPCH timeslots and codes	MP		Downlink Timeslots and Codes 10.3.6.32	

10.3.6.23 Downlink DPCH power control information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>DPC Mode	MP		Enumerated (Single TPC, TPC triplet in soft)	"Single TPC" is DPC_Mode=0 and "TPC triplet in soft" is DPC_mode=1 in -3GPP TS 25.214.
> TDD				
>>TPC Step Size	OP		Integer (1, 2, 3)	In dB

10.3.6.24 Downlink information common for all radio links

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Downlink DPCH info common for all RL	OP		Downlink DPCH info common for all RL 10.3.6.18	
CHOICE mode				
>FDD				
>>DPCH compressed mode info	MD		DPCH compressed mode info 10.3.6.33	Default value is the existing value of DPCH compressed mode information
>>TX Diversity Mode	MD		TX Diversity Mode 10.3.6.86	Default value is the existing value of TX Diversity mode
>>SSDT information	OP		SSDT information 10.3.6.77	
>TDD				(no data)
Default DPCH Offset Value	OP		Default DPCH Offset Value, 10.3.6.16	

10.3.6.25 Downlink information common for all radio links Post

NOTE: Only for FDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Downlink DPCH info common for all RL	MP		Downlink DPCH info common for all RL Post 10.3.6.19	

10.3.6.26 Downlink information common for all radio links Pre

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Downlink DPCH info common for all RL	MP		Downlink DPCH info common for all RL Pre 10.3.6.20	
Default DPCH Offset Value	OP		Default DPCH Offset Value, 10.3.6.16	

10.3.6.27 Downlink information for each radio link

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Choice mode	MP			
>FDD				
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>>PDSCH with SHO DCH Info	OP		PDSCH with SHO DCH Info 10.3.6.47	
>>PDSCH code mapping	OP		PDSCH code mapping 10.3.6.43	
>TDD				
>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	
Downlink DPCH info for each RL	OP		Downlink DPCH info for each RL 10.3.6.21	
Secondary CCPCH info	OP		Secondary CCPCH info 10.3.6.71	
References to system information blocks	OP	1 to <maxSIB-FACH>		
>Scheduling information	MP		Scheduling information 10.3.8.16	
>SIB type SIBs only	MP		SIB Type SIBs only, 10.3.8.22	

10.3.6.28 Downlink information for each radio link Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Choice mode	MP			
>FDD				
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>TDD				
>>Primary CCPCH info	MP		Primary CCPCH info post 10.3.6.58	
Downlink DPCH info for each RL	MP		Downlink DPCH info for each RL Post 10.3.6.19	

10.3.6.29 Downlink Outer Loop Control

This information element indicates whether the UE is allowed or not to increase its downlink SIR target value above the current value.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Outer loop control	MP		Enumerated(Increase allowed, Increase not allowed)	

10.3.6.30 Downlink PDSCH information

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>PDSCH with SHO DCH Info	OP		PDSCH with SHO DCH Info 10.3.6.47	
>>PDSCH code mapping	OP		PDSCH code mapping 10.3.6.43	

10.3.6.31 Downlink rate matching restriction information

This IE indicates which TrCH is restricted in TFI. DL rate matching should be done based on the TFCS which is the subset of the "DL TFCS with no restricted Transport channel".

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Restricted TrCH information	OP	1 to <maxTrCH >		
>Restricted DL TrCH identity	MP		Transport channel identity 10.3.5.18	
>Allowed TFIs	MP	1 to <maxTF>		
>>Allowed TFI	MP		Integer(0..31)	

10.3.6.32 Downlink Timeslots and Codes

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
First Individual timeslot info	MP		Individual timeslot info 10.3.6.37	Individual timeslot info for the first timeslot used by the physical layer.
First timeslot channelisation codes	MP		Downlink channelisation codes 10.3.6.17	These codes shall be used by the physical layer in the timeslot given in First Individual timeslot info.
CHOICE <i>more timeslots</i>	MP			
>No more timeslots				(no data)
>Consecutive timeslots				
>>Number of additional timeslots	MP		Integer(1..maxTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS ... (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.
>Timeslot list				
>>Additional timeslot list	MP	1 to <maxTS-1>		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.
>>>CHOICE <i>parameters</i>	MP			
>>>>Same as last				
>>>>>Timeslot number	MP		Timeslot Number 10.3.6.84	The physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.
>>>>New parameters				
>>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>>>>Channelisation codes	MP		Downlink channelisation codes 10.3.6.17	

10.3.6.33 DPCH compressed mode info

NOTE: Only for FDD.

This information element indicates the parameters of the downlink compressed mode to be used by the UE in order to perform inter-frequency measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission gap pattern sequence		1 to <maxTGP S>		
>TGPSI	MP		TGPSI	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>TGPS Status Flag	MP		10.3.6.82 Enumerated(active, inactive)	This flag indicates the current status of the Transmission Gap Pattern Sequence, whether it shall be activated or deactivated.
>TGCFN	MP		Integer (0..255)	Connection Frame Number of the first frame of the first pattern within the Transmission Gap Pattern Sequence.
>Transmission gap pattern sequence configuration parameters	OP			
>>TGMP	MP		Enumerated(TDD measurement, FDD measurement, GSM carrier RSSI measurement, GSM Initial BSIC identification, GSM BSIC re-confirmation)	Transmission Gap pattern sequence Measurement Purpose.
>>TGPRC	MP		Integer (1..63, Infinity)	The number of transmission gap patterns within the Transmission Gap Pattern Sequence.
>> TGSN	MP		Integer (0..14)	Transmission Gap Starting Slot Number The slot number of the first transmission gap slot within the TGCFN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>TGL1	MP		Integer(1..14)	The length of the first Transmission Gap within the transmission gap pattern expressed in number of slots
>> TGL2	MD		Integer (1..14)	The length of the second Transmission Gap within the transmission gap pattern. If omitted, then TGL2=TGL1.
>>TGD	MP		Integer(15..269, undefined)	Transmission gap distance indicates the number of slots between starting slots of two consecutive transmission gaps within a transmission gap pattern. If there is only one transmission gap in the transmission gap pattern, this parameter shall be set to zero.
>> TGPL1	MP		Integer (1..144)	The duration of transmission gap pattern 1.
>> TGPL2	MD		Integer (1..144)	The duration of transmission gap pattern 2. If omitted, then TGPL2=TGPL1.
>>RPP	MP		Enumerated (mode 0, mode 1).	Recovery Period Power control mode during the frame after the transmission gap within the compressed frame. Indicates whether normal PC mode or compressed PC mode is applied
>>ITP	MP		Enumerated (mode 0, mode 1).	Initial Transmit Power is the uplink power control method to be used to compute the initial transmit power after the compressed mode gap.
>>UL/DL mode	MP		Enumerated (UL only, DL only, UL/DL)	Defines whether only DL, only UL, or combined UL/DL compressed mode is used.
>> Downlink compressed mode method	CV DL		Enumerated (puncturing, SF/2, higher layer scheduling)	Method for generating downlink compressed mode gap
>> Uplink compressed mode method	CV UL		Enumerated (SF/2, higher layer scheduling)	Method for generating uplink compressed mode gap
>>Downlink frame type	MP		Enumerated (A, B)	
>>DeltaSIR1	MP		Real(0..3 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the first transmission gap in the transmission gap pattern (without including the effect of the bit-rate increase)
>>DeltaSIRafter1	MP		Real(0..3 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the first transmission gap in the transmission gap pattern.
>>DeltaSIR2	OP		Real(0..3 by step of 0.1)	Delta in DL SIR target value to be set in the UE during the frame containing the start of the second transmission gap

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				in the transmission gap pattern (without including the effect of the bit-rate increase) When omitted, DeltaSIR2 = DeltaSIR1.
>>DeltaSIRafter2	OP		Real(0..3 by step of 0.1)	Delta in DL SIR target value to be set in the UE one frame after the frame containing the start of the second transmission gap in the transmission gap pattern. When omitted, DeltaSIRafter2 = DeltaSIRafter1.

Condition	Explanation
<i>UL</i>	This information element is only sent when the value of the "UL/DL mode" IE is "UL only" or "UL/DL".
<i>DL</i>	This information element is only sent when the value of the "UL/DL mode" IE is "DL only" or "UL/DL".

10.3.6.34 DPCH Compressed Mode Status Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transmission gap pattern sequence		1 to <maxTGPS>		
> TGPSI	MP		TGPSI 10.3.6.82	Transmission Gap Pattern Sequence Identifier
> TGPS Status Flag	MP		Enumerated(active, inactive)	This flag indicates the current status of the Transmission Gap Pattern Sequence, whether it shall be active or inactive.
>TGCFN	MP		Integer (0..255)	Connection Frame Number of the first frame of the first pattern within the Transmission Gap Pattern Sequence.

10.3.6.35 Dynamic persistence level

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Dynamic persistence level	MP		Integer(1..8)	Level shall be mapped to a dynamic persistence value in the range 0 .. 1.

10.3.6.36 Frequency info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>UARFCN uplink (Nu)	OP		Integer(0..16383)	[25.101] If IE not present, default duplex distance of 190 MHz shall be used.
>>UARFCN downlink (Nd)	MP		Integer(0 .. 16383)	[25.101]
>TDD				
>>UARFCN (Nt)	MP		Integer(0 .. 16383)	[25.102]

10.3.6.37 Individual timeslot info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timeslot number	MP		Timeslot number 10.3.6.84	Timeslot within a frame
TFCl existence	MP		Boolean	TRUE indicates that the TFCl exists. It shall be coded in the first physical channel of this timeslot.
Midamble Shift and burst type	MP		Midamble shift and burst type 10.3.6.41	

10.3.6.38 Individual Timeslot interference

Parameters used by the UE for uplink open loop power control in TDD.

Information element	Need	Multi	Type and reference	Semantics description
Timeslot number	MP		Timeslot number 10.3.6.84	
UL Timeslot Interference	MP		UL Interference 10.3.6.87	

10.3.6.39 Maximum allowed UL TX power

This information element indicates the maximum allowed uplink transmit power.

Information Element	Need	Multi	Type and reference	Semantics description
Maximum allowed UL TX power	MP		Integer(-50..33)	In dBm

10.3.6.40 Midamble configuration

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Midamble burst type 1	MD		Integer(4, 8,16)	Maximum number of midamble shifts for burst type 1. Default value is 8.
Midamble burst type 2	MD		Integer(3, 6)	Maximum number of midamble shifts for burst type 2. Default value is 3.

Default value is all the subfields set to their default value.

10.3.6.41 Midamble shift and burst type

NOTE: Only for TDD.

This information element indicates burst type and midamble allocation. Three different midamble allocation schemes exist:

- Default midamble: the midamble shift is selected by layer 1 depending on the associated channelisation code (DL and UL)
- Common midamble: the midamble shift is chosen by layer 1 depending on the number of channelisation codes (possible in DL only)
- UE specific midamble: a UE specific midamble is explicitly assigned (DL and UL).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Burst Type	MP			
>Type 1				
>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)	
>>Midamble Shift	CV UE		Integer(0..15)	
>Type 2				
>>Midamble Allocation Mode	MP		Enumerated (Default midamble, Common midamble, UE specific midamble)	
>>Midamble Shift	CV UE		Integer(0..5)	
>Type 3				
>>Midamble Allocation Mode	MP		Enumerated (Default midamble, UE specific midamble)	
>>Midamble Shift	CV UE		Integer (0..15)	NOTE: Burst Type 3 is only used in uplink.

Condition	Explanation
UE	This information element is only sent when the value of the "Midamble Allocation Mode" IE is "UE-specific midamble".

10.3.6.42 PDSCH Capacity Allocation info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PDSCH allocation period info	MP		Allocation Period Info 10.3.6.4	
TFCS ID	MD		Integer(1..8)	Default is 1.
CHOICE <i>Configuration</i>	MP			
>Old configuration				
>>PDSCH Identity	MP		Integer(1..Hi PDSCHIdentities)	
>New configuration				
>>PDSCH Info	MP		PDSCH Info 10.3.6.44	
>>PDSCH Identity	OP		Integer(1..Hi PDSCHIdentities)	
>>PDSCH power control info	OP		PDSCH power control info 10.3.6.45	

10.3.6.43 PDSCH code mapping

NOTE: Only for FDD.

This IE indicates the association between each possible value of TFCI(field 2) and the corresponding PDSCH channelisation code(s). There are three fundamentally different ways that the UTRAN must choose between in order to signal the mapping information, these are described below. The signalling capacity consumed by the different methods will vary depending on the way in which the UTRAN configures usage of the DSCH. A fourth option is also provided which allows the UTRAN to replace individual entries in the TFCI(field 2) to PDSCH code mapping table with new PDSCH code values.

There are four different signalling methods defined. The signalling method shall be selected by the UTRAN.

Method #1 - Using code range

The mapping is described in terms of a number of groups, each group associated with a given spreading factor. The UE maps TFCI(field2) values to PDSCH codes in the following way. The PDSCH code used for TFCI(field 2) = 0, is given by the SF and code number = 'PDSCH code start' of Group = 1. The PDSCH code used for TFCI(field 2) = 1, is given by the SF and code number = 'PDSCH code start' + 1. This continues, with unit increments in the value of TFCI(field 2) mapping to unit increments in code number up until the point that code number = 'PDSCH code stop'. The process continues in the same way for the next group with the TFCI(field 2) value used by the UE when constructing its mapping table starting at the largest value reached in the previous group plus one. In the event that 'PDSCH code start' = 'PDSCH code stop' (as may occur when mapping the PDSCH root code to a TFCI (field 2) value) then this is to be interpreted as defining the mapping between the channelisation code and a single TFCI (i.e., TFCI(field 2) should not be incremented twice).

Note that each value of TFCI (field 2) is associated with a given 'code number' and when the 'multi-code info' parameter is greater than 1, then each value of TFCI (field 2) actually maps to a set of PDSCH codes. In this case contiguous codes are assigned, starting at the channelisation code denoted by the 'code number' parameter and including all codes with code numbers up to and including 'code number' - 1 + the value given in the parameter 'multi-code info'.

Method #2 - Using TFCI range

The mapping is described in terms of a number of groups, each group corresponding to a given PDSCH channelisation code. The PDSCH code specified in the first group applies for all values of TFCI(field 2) between 0 and the specified 'Max TFCI(field2)'. The PDSCH code specified in the second group applies for all values of TFCI(field 2) between the 'Max TFCI(field2) value' specified in the last group plus one and the specified 'Max TFCI(field2)' in the second group. The process continues in the same way for the following groups with the TFCI(field 2) value starting at the largest value reached in the previous group plus one.

Method #3 - Explicit

The mapping between TFCI(field 2) value and PDSCH channelisation code is spelt out explicitly for each value of TFCI (field2)

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Scrambling Code	MD		Secondary scrambling code 10.3.6.74	Scrambling code on which PDSCH is transmitted. Default is the same scrambling code as for the Primary CPICH
Choice signalling method	MP			
>code range				
>>PDSCH code mapping	MP	1 to <maxPDSC H-TFCIgroups >		
>>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)	
>>>multi-code info	MP		Integer(1..16)	This parameter indicates the number of PDSCH transmitted to the UE. The PDSCH codes all have the same SF as

Information Element/Group name	Need	Multi	Type and reference	Semantics description
				denoted by the 'Spreading factor' parameter. Contiguous codes are assigned, starting at the channelisation code denoted by the spreading factor and code number parameter and including all codes, with code numbers up to and including 'code number' - 1 + 'multi-code info'. Note that 'code number' - 1 + 'multi-code info' will not be allowed to exceed 'Spreading factor - 1'
>>Code number (for PDSCH code start)	MP		Integer(0..Spreading factor-1)	
>>Code number (for PDSCH code stop)	MP		Integer(0..Spreading factor-1)	
>TFCI range				
>>DSCH mapping	MP	1 to <maxPDSCHTFCIgroups >		
>>>Max TFCI(field2) value	MP		Integer(1..1023)	This is the maximum value in the range of TFCI(field 2) values for which the specified PDSCH code applies
>>>Spreading factor (for PDSCH code)	MP		Integer(4, 8, 16, 32, 64, 128, 256)	
>>>Code number (for PDSCH code)	MP		Integer(0..Spreading factor-1)	
>>>multi-code info	MP		Integer(1..16)	Semantics as described for this parameter above
>Explicit				
>>PDSCH code info	MP	1 to <maxTFCI-2-Combs >		The first instance of the parameter <i>PDSCH code</i> corresponds to TFCI (field 2) = 0, the second to TFCI(field 2) = 1 and so on.
>>>Spreading factor (for PDSCH code)	MP		Integer(4, 8, 16, 32, 64, 128, 256)	
>>>Code number (for PDSCH code)	MP		Integer(0..Spreading factor-1)	
>>>multi-code info	MP		Integer(1..16)	Semantics as described for this parameter above
>Replace				This choice is made if the PDSCH code(s) associated with a given value of TFCI(field 2) is to be replaced.
>>Replaced PDSCH code	MP	1 to <maxTFCI-2-Combs >		Identity of the PDSCH code(s) to be used for the specified value of TFCI(field 2). These code identity(s) replace any that had been specified before
>>>TFCI (field 2)	MP		Integer (0..1023)	Value of TFCI(field 2) for which PDSCH code mapping will be changed
>>>Spreading factor (for PDSCH code)	MP		Integer(4, 8, 16, 32, 64, 128, 256)	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>>Code number (for PDSCH code)	MP		Integer(0..Sp reading factor-1)	
>>>multi-code info	MP		Integer(1..16)	Semantics as described for this parameter above

10.3.6.44 PDSCH info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCS ID	MD		Integer(1..8)	TFCS to be used. Default value is 1.
Common timeslot info	OP		Common timeslot info 10.3.6.10	
PDSCH timeslots and codes	OP	1 to <maxTS>	Downlink Timeslots and Codes 10.3.6.32	Default is to use the old timeslots and codes.

10.3.6.45 PDSCH Power Control info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TPC Step Size	OP		Integer (1, 2, 3)	In dB
UL CCTrCH TPC List	MP	0..<maxCC TrCH>		UL CCTrCH identities for TPC commands associated with this DL CCTrCH
>UL TPC TFCS Identity	MP		Transport Format Combination Set Identity 10.3.5.21	

10.3.6.46 PDSCH system information

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PDSCH information	MP	1 to <maxPDSCH>		
>PDSCH Identity	MP		Integer(1..Hi PDSCHIdentities)	
>PDSCH info	MP		PDSCH info 10.3.6.44	
>SFN Time Info	CH-Block17		SFN Time Info 10.3.6.75	
>DSCH TFS	OP		Transport format set 10.3.5.23	
>DSCH TFCS	OP		Transport Format Combination Set 10.3.5.20	

Condition	Explanation
Block17	This IE is absent in System Information Block 17. Otherwise it is optional.

10.3.6.47 PDSCH with SHO DCH Info

NOTE: Only for FDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DSCH radio link identifier	MP		Integer(0..511)	This parameter indicates on which radio link the user will be allocated resource on the DSCH. The CPICH scrambling code will be used for this purpose.
TFCl Combining set	OP			This is used to indicate which of the downlink TFCl(field 2) transmissions made on the DPCCHs within the active set should be soft combined on the physical layer. This parameter may only be sent if there is a 'hard' split of the TFCl field and in this case the sending of the parameter is optional.
Radio link identifier	OP	1 to <maxRL>		
>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	The CPICH scrambling code is used for this purpose

10.3.6.48 Persistence scaling factors

This IE defines scaling factors associated with ASC 2 – ASC 7 (multiplicity corresponds to the number of PRACH partitions minus 2) to be applied to the dynamic persistence value. This IE shall not be present in system information if only ASC 0 and ASC 1 are defined. If it is not present for ASC >1, default persistence scaling factor 1 shall be used (see subclause 8.5.12).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Access Service Class		1 to maxASCpersist		
> Persistence scaling factor	MP		Real(0.9..0.2, by step of 0.1)	Scaling factors in the range 0,...,1

10.3.6.49 PICH Info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Channelisation code	MP		Integer(0..255)	SF is fixed and equal to 256
>>Number of PI per frame	MP		Integer (18, 36 72 144)	
>>STTD indicator	MP		STTD Indicator 10.3.6.78	
>TDD				
>>Channelisation code	MD		Enumerated ((16/1)...(16/16))	Default value is the channelisation code used by the SCCPCH carrying the associated PCH.
>>Timeslot number	MD		Timeslot number 10.3.6.84	Default value is the timeslot used by the SCCPCH carrying the associated PCH.
>> CHOICE Burst Type	MP			
>>>Type 1				
>>>>Midamble Shift	MP		Integer(0..15)	
>>>>Type 2				
>>>>Midamble Shift	MP		Integer(0..5)	
>>Repetition period/length	MD		Enumerated((4/2),(8/2), (8/4),(16/2), (16/4), (32/2),(32/4), (64/2),(64/4))	Default value is "(64/2)".
>>Offset	MP		Integer (0...Repetition period -1)	SFN mod Repetitionperiod = Offset.
>>Paging indicator length	MD		Integer (4, 8, 16)	Indicates the length of one paging indicator in Bits. Default value is 4.
>>N _{GAP}	MD		Integer(2, 4, 8)	Number of frames between the last frame carrying PICH for this Paging Occasion and the first frame carrying paging messages for this Paging Occasion. Default value is 4.
>>N _{PCH}	MD		Integer(1 .. 8)	Number of paging groups. Default value is 2.

10.3.6.50 PICH Power offset

This is the power transmitted on the PICH minus power of the Primary CPICH in FDD and Primary CCPCH Tx Power in TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PICH Power offset	MP		Integer(-10 .. +5)	Offset in dB

10.3.6.51 PRACH Channelisation Code

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE SF	MP			
>SF16				
>>Channelisation Code List	MP	1 to 8		
>>>Channelisation code	MP		Enumerated ((16/1)..(16/16))	1:1 mapping between spreading code and midamble shift
>SF8				
>>Channelisation Code List	MP	1 to 8		
>>>Channelisation Code	MP		Enumerated((8/1)..(8/8))	

10.3.6.52 PRACH info (for RACH)

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>> Available Signature	MP		Bitstring(16)	(Note1) 0000000000000001:Signature 0 0000000000000010:Signature 1 0000000000000011:Signature 0&1: 1111111111111111:Signature 0to15
>>Available SF	MP		Integer (32,64,128,256)	In chips per symbol Defines the smallest permitted SF (i.e. the maximum rate)
>>Preamble scrambling code number	MP		Integer (0 .. 15)	Identification of scrambling code see TS 25.213
>>Puncturing Limit	MP		Real(0.40..1.00 by step of 0.04)	
>> Available Sub Channel Number	MP		Bitstring(12)	(Note2) 000000000001:SubChNumber 0 000000000010:SubChNumber 1 000000000011:SubChNumber 0&1: 111111111111:SubChNumber 0to11
>TDD				
>>Timeslot number	MP		Timeslot number 10.3.6.84	
>>PRACH Channelisation Code	MP		PRACH Channelisation Code 10.3.6.51	
>>PRACH Midamble	OP		Enumerated (Direct, Direct/Inverted)	Direct or direct and inverted midamble are used for PRACH

NOTE 1: Each bit is 0 or 1 to indicate available signature_x, x= 0 to 15.

NOTE 2: Each bit is 0 or 1 to indicate available sub channel number _x, x= 0 to 11.

10.3.6.53 PRACH partitioning

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode				
>FDD				
>>Access Service class	MP	1 to maxASC		
>>>ASC Setting	MD		ASC setting 10.3.6.6	The default values are same as the previous ASC. If the "default" is used for the first ASC, the default values are all available signatures and "all available sub-channels".
>>TDD				
>>>Access Service class List	MP	1 to maxASC		List of Access Service classes
>>>>Access service class Index	MP		Integer(1..8)	
>>>>Repetition Period	MD		Integer(1, 2, 4, 8)	Default value is continuous. Value 1 indicates continuous allocation
>>>>Offset	MP		Integer(0..Repetition Period - 1)	Note that this is empty if repetition period is set to 1

The following description applies to FDD only.

The list of available signatures is renumbered from signature index 0 to signature index N-1, where N is the number of available signatures, starting with the lowest available signature number and continuing in sequence, in the order of increasing signature numbers.

- List of available signatures : 16 or less signatures are available.
- Ex : only signatures 0, 5, 10 and 15 are available, then :
- Signature 0 is : available signature index 0
- Signature 5 is : available signature index 1
- Signature 10 is : available signature index 2
- Signature 15 is : available signature index 3

The list of available access-slot sub-channels is renumbered from access-slot sub-channel index 0 to access-slot sub-channel index M-1, where M is the number of available access-slot sub-channels, starting with the lowest available access-slot sub-channel number and continuing in sequence, in the order of increasing access-slot sub-channel numbers.

- List of available Access Slot channels : 12 or less sub-channels are available.
- Ex : only sub-channels 0,1; 4,5; 8,9 are present, then :
- Sub-channel 0 is : available sub-channel index 0
- Sub-channel 1 is : available sub-channel index 1
- Sub-channel 4 is : available sub-channel index 2
- Sub-channel 5 is : available sub-channel index 3
- Sub-channel 8 is : available sub-channel index 4
- Sub-channel 9 is : available sub-channel index 5

One ASC has access to all the access-slot sub-channels between the Available sub-channel Start Index and the Available sub-channel End Index, and to all the signatures between the Available signature Start Index and the Available signature End Index.

NOTE: The above text may eventually be moved to a more appropriate location.

10.3.6.54 PRACH power offset

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Power Ramp Step	MP		Integer (1..8)	Power step when no acquisition indicator is received in dB
Preamble Retrans Max	MP		Integer (1..64)	Maximum number of preambles in one preamble ramping cycle

10.3.6.55 PRACH system information list

Information element	Need	Multi	Type and reference	Semantics description
PRACH system information	MP	1 .. <maxPRA CH>		
>PRACH info	MP		PRACH info (for RACH) 10.3.6.52	
>Transport channel identity	MP		Transport channel identity 10.3.5.18	
>RACH TFS	MD		Transport format set 10.3.5.23	Default value is the value of "RACH TFS" for the previous PRACH in the list (note : the first occurrence is then MP)
>RACH TFCS	MD		Transport Format Combination Set 10.3.5.20	Default value is the value of "RACH TFCS" for the previous PRACH in the list (note : the first occurrence is then MP)
>PRACH partitioning	MD		PRACH partitioning 10.3.6.46	Default value is the value of "PRACH partitioning" for the previous PRACH in the list (note : the first occurrence is then MP)
>Persistence scaling factors	OP		Persistence scaling factors 10.3.6.48	If this IE is absent, value is the value of "Persistence scaling factors" for the previous PRACH in the list if value exists
>AC-to-ASC mapping	OP		AC-to-ASC mapping 10.3.6.1	Only present in SIB 5 If this IE is absent, value is the value of "AC-to-ASC mapping" for the previous PRACH in the list if value exists
>CHOICE <i>mode</i>	MP			
>>FDD				
>>>Primary CPICH TX power	MD		Primary CPICH TX power 10.3.6.61	Default value is the value of "Primary CPICH TX power" for the previous PRACH in the list (note : the first occurrence is then MP)
>>>Constant value	MD		Constant value 10.3.6.11	Default value is the value of "Constant value" for the previous PRACH in the list (note : the first occurrence is then MP)
>>>PRACH power offset	MD		PRACH power offset 10.3.6.54	Default value is the value of "PRACH power offset" for the previous PRACH in the list (note : the first occurrence is then MP)
>>>RACH transmission parameters	MD		RACH transmission parameters 10.3.6.67	Default value is the value of "RACH transmission parameters" for the previous PRACH in the list (note : the first occurrence is then MP)
>>>AICH info	MD		AICH info 10.3.6.2	Default value is the value of "AICH info" for the previous PRACH in the list (note : the first occurrence is then MP)
>>TDD				(no data)

NOTE: If the setting of the PRACH information results in that a combination of a signature, preamble scrambling code and subchannel corresponds to a RACH with different TFS and/or TFCS, then for that combination only the TFS/TFCS of the PRACH listed first is valid, where PRACHs listed in System Information Block type 5 shall be counted first.

10.3.6.56 Predefined PhyCH configuration

This information element concerns a pre- defined configuration of physical channel parameters.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Uplink radio resources				
Uplink DPCH info	MP		Uplink DPCH info Pre 10.3.6.90	
Downlink radio resources				
Downlink information common for all radio links			Downlink information common for all radio links Pre 10.3.6.26	

10.3.6.57 Primary CCPCH info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>TX Diversity indicator	MP		Boolean	
>TDD				
>>CHOICE SyncCase	OP			
>>>Sync Case 1				
>>>>Timeslot	MP		Integer (0..14)	PCCPCH timeslot
>>>Sync Case 2				
>>>>Timeslot	MP		Integer(0..6)	
>>Cell parameters ID	OP		Cell parameters Id 10.3.6.9	The Cell parameters ID is described in 25.223.
>>Block STTD indicator	MP		Block STTD indicator 10.3.6.7	

10.3.6.58 Primary CCPCH info post

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE SyncCase	MP			
>Sync Case 1				
>>Timeslot	MP		Integer (0...14)	PCCPCH timeslot
>Sync Case 2				
>>Timeslot	MP		Integer(0..6)	
Cell parameters ID	MP		Cell parameters Id 10.3.6.9	The Cell parameters ID is described in 25.223.
Block STTD indicator	MP		Block STTD indicator 10.3.6.7	

10.3.6.59 Primary CCPCH TX Power

NOTE: Only for TDD.

Information Element/group name	Need	Multi	Type and reference	Semantics description
Primary CCPCH Tx Power	MP		Integer(6..43)	In dBm

10.3.6.60 Primary CPICH info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary scrambling code	MP		Integer(0..511)	

10.3.6.61 Primary CPICH Tx power

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary CPICH Tx Power	MP		Integer(-10..50)	

10.3.6.62 Primary CPICH usage for channel estimation

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Primary CPICH usage for channel estimation	MP		Enumerated(Primary CPICH may be used, Primary CPICH shall not be used)	

10.3.6.63 PUSCH info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCS ID	MD		Integer(1..8)	Default value is 1
Common timeslot info	OP		Common timeslot info 10.3.6.10	
PUSCH timeslots and codes	OP		Uplink Timeslots and Codes 10.3.6.94	

10.3.6.64 PUSCH Capacity Allocation info

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE PUSCH allocation	MP			
>PUSCH allocation pending				(no data)
>PUSCH allocation assignment				
>>PUSCH allocation period info	MP		Allocation Period Info 10.3.6.4	
>>PUSCH power control info	OP		PUSCH power control info 10.3.6.65	
>>TFCS ID	MD		Integer(1..8)	Default is 1.
>>CHOICE Configuration	MP			
>>>Old configuration				
>>>>PUSCH Identity	MP		Integer(1..Hi PUSCHIdentities)	
>>>>New configuration				
>>>>PUSCH info	MP		PUSCH info 10.3.6.63	
>>>>PUSCH Identity	OP		Integer(1..maxPDSCHIdentity)	

10.3.6.65 PUSCH power control info

NOTE: Only for TDD.

Interference level measured for a frequency at the UTRAN access point used by UE to set PUSCH output power.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL target SIR	MP		Real (-11 .. 20 by step of 0.5)	in dB

10.3.6.66 PUSCH system information

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PUSCH information	MP	1 to <maxPUSCH>		
>PUSCH Identity	MP		Integer(1..Hi PUSCHIdentities)	
>PUSCH info	MP		PUSCH info 10.3.6.63	
>SFN Time Info	CH-Block17		SFN Time Info 10.3.6.75	
>USCH TFS	OP		Transport format set 10.3.5.23	
>USCH TFCS	MP		Transport Format Combination Set 10.3.5.20	

Condition	Explanation
Block17	This IE is absent in System Information Block 17. Otherwise it is optional.

10.3.6.67 RACH transmission parameters

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Mmax	MP		Integer(1..32)	Maximum number of preamble cycles
NB01min	MP		Integer(0..50)	Sets lower bound for random back-off
NB01max	MP		Integer(0..50)	Sets upper bound for random back-off

10.3.6.68 Radio link addition information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
Downlink DPCH info for each RL	MP		Downlink DPCH info for each RL 10.3.6.21	
TFCI combining indicator	OP		TFCI combining indicator 10.3.6.81	
SCCPCH Information for FACH	OP		SCCPCH Information for FACH 10.3.6.70	Note 1

NOTE 1: These IEs are present when the UE needs to listen to system information on FACH in CELL_DCH state.

10.3.6.69 Radio link removal information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary CPICH info	MP		Primary CPICH info 10.3.6.60	

10.3.6.70 SCCPCH Information for FACH

Secondary CCPCH info	MP		Secondary CCPCH info 10.3.6.71	
TFCS	MP		Transport format combination set 10.3.5.20	For FACHs and PCH
FACH/PCH information	MP	1 to <maxFAC HPCH>		
>TFS	MP		Transport format set 10.3.5.23	For each FACHs and PCH
References to system information blocks	MP	1 to <maxSIB-FACH>		
>Scheduling information	MP		Scheduling information 10.3.8.16	
>SIB type SIBs only	MP		SIB Type SIBs only, 10.3.8.22	

10.3.6.71 Secondary CCPCH info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH usage for channel estimation	MP		Primary CPICH usage for channel estimation 10.3.6.62	
>>Secondary CPICH info	OP		Secondary CPICH info 10.3.6.73	May only be sent for SCCPCH channels not carrying the PCH.
>>Secondary scrambling code	OP		Secondary scrambling code 10.3.6.74	May only be sent for SCCPCH channels not carrying the PCH.
>>STTD indicator	MD		STTD Indicator 10.3.6.78	Default value is "TRUE"
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)	
>>Code number	MP		Integer(0..Spreading factor - 1)	
>>Pilot symbol existence	MD		Boolean	TRUE means the existence. Default value is "TRUE"
>>TFCI existence	MD		Boolean	TRUE means the existence. Default value is "TRUE"
>>Fixed or Flexible Position	MD		Enumerated (Fixed, Flexible)	Default value is "Flexible"
>>Timing Offset	MD		Integer(0..38144 by step of 256)	Chip Delay of the Secondary CCPCH relative to the Primary CCPCH. Default value is 0.
>TDD				
>>Offset	MD		Integer (0..Repetition Period - 1)	SFN modulo Repetition period = offset. Repetition period is the one indicated in the accompanying Common timeslot info IE
>>Common timeslot info	MP		Common timeslot info 10.3.6.10	
>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>Code List	MP	1..<maxCode sCount>		
>>>Channelisation Code	MP		Enumerated((16/1)..(16/16))	

10.3.6.72 Secondary CCPCH system information

Information element	Need	Multi	Type and reference	Semantics description
Secondary CCPCH system information	MP	1 to <maxSCC PCH>		
>Secondary CCPCH info	MP		Secondary CCPCH info 10.3.6.71	Note 1
>TFCS	MD		Transport format set 10.3.5.23	For FACHs and PCH Default value is the value of "TFCS" for the previous SCCPCH in the list (note : the first occurrence is then MP)
>FACH/PCH information	MD	1 to <maxFAC HPCH>		Default value is the value of "FACH/PCH" for the previous SCCPCH in the list (note : the first occurrence is then MP)
>>Transport channel identity	MP		Transport channel identity 10.3.5.18	
>>TFS	MP		Transport format set 10.3.5.23	For each FACH and PCH Note 2
>>CTCH indicator	MP		Boolean	The value "TRUE" indicates that a CTCH is mapped on the FACH, and "FALSE" that no CTCH is mapped.
>PICH info	OP		PICH info 10.3.6.49	PICH info is present only when PCH is multiplexed on Secondary CCPCH

NOTE 1: The secondary CCPCHs carrying a PCH shall be listed first.

NOTE 2: TFS for PCH shall be the first "FACH/PCH information" in the list if a PCH exists for the respective secondary CCPCH.

10.3.6.73 Secondary CPICH info

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Secondary scrambling code	MD		Secondary scrambling code 10.3.6.74	Default is the same scrambling code as for the Primary CPICH
Channelisation code	MP		Integer(0..255)	SF=256

10.3.6.74 Secondary scrambling code

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Secondary scrambling code	MP		Integer(1..15)	

10.3.6.75 SFN Time info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activation time SFN	MP		Integer (0..4095)	System frame number start of the physical channel existence.
Duration	MP		Integer(1..4096)	Total number of frames the physical channel will exist.

10.3.6.76 SSdT cell identity

NOTE: Only for FDD.

This IE is used to associate a cell identity with a given radio link.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SSdT cell id	MP		Enumerated (a, b, c, d, e, f, g, h)	

10.3.6.77 SSdT information

NOTE: Only for FDD.

This information element indicates the status (e.g. initiated/terminated) of the Site Selection.

Diversity Transmit power control (SSdT). It is used to change the SSdT status. The parameter 'code word set' indicates how cell identities are coded (using many bits or few, values are long, medium, or short).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
S field	MP		Integer (1, 2)	in bits
Code Word Set	MP		Enumerated (long, medium, short, SSdT off)	

NOTE: These parameters shall be set optionally associated with DL DPCH info but not for each RL.

10.3.6.78 STTD indicator

Indicates whether STTD is used or not.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
STTD Indicator	MP		Boolean	TRUE means that STTD is used

10.3.6.79 TDD open loop power control

This information element contains parameters for open loop power control setting for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Primary CCPCH Tx Power	OP		Primary CCPCH Tx Power 10.3.6.59	For path loss calculation
Alpha	OP		Alpha 10.3.6.5	
PRACH Constant Value	OP		Constant Value 10.3.6.11	Operator controlled PRACH Margin
DPCH Constant Value	OP		Constant Value 10.3.6.11	Operator controlled UL DPCH Margin
PUSCH Constant Value	OP		Constant Value 10.3.6.11	Operator controlled PUSCH Margin

10.3.6.80 TFC Control duration

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFC Control duration	MP		Integer (1, 2, 4, 8, 16, 24, 32, 48, 64, 128, 192, 256, 512)	Defines the period in multiples of 10 ms frames for which the defined TFC sub-set is to be applied.

10.3.6.81 TFCI Combining Indicator

NOTE: Only for FDD.

This IE indicates whether the TFCI (field 2) which will be transmitted on the DPCCCH of a newly added radio link should be soft combined with the others in the TFCI (field 2) combining set. This IE can only be sent when the UE is in CELL_DCH state with a DSCH transport channel assigned and when there is a 'hard' split in the TFCI field (such that TFCI1 and TFCI2 have their own separate block coding).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TFCI combining indicator	MP		Boolean	TRUE means that TFCI is combined

10.3.6.82 TGPSI

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TGPSI	MP		Integer(1..MaxTGPS)	Transmission Gap Pattern Sequence Identifier Establish a reference to the compressed mode pattern sequence. Up to <MaxTGPS> simultaneous compressed mode pattern sequences can be used.

10.3.6.83 Time info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Activation time	MD		Activation time 10.3.3.1	Frame number start of the physical channel existence. Default value is "Now"
Duration	MD		Integer(1..4096, infinite)	Total number of frames the physical channel will exist. Default value is "infinite".

10.3.6.84 Timeslot number

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Timeslot number	MP		Integer(0..14)	Timeslot within a frame

10.3.6.85 TPC combination index

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TPC combination index	MP		Integer(0..5)	Radio links with the same index have TPC bits, which for the UE are known to be the same.

10.3.6.86 TX Diversity Mode

NOTE: Only for FDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Tx diversity Mode	MP		Enumerated (none, STTD, closed loop mode1, closed loop mode2)	

10.3.6.87 UL interference

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL interference	MP		Integer (-110..-70)	In dBm

NOTE: In TDD, this IE is a timeslot specific value.

10.3.6.88 Uplink DPCH info

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink DPCH power control info	OP		Uplink DPCH power control info 10.3.6.91	
<i>CHOICE mode</i>	MP			
>FDD				
>>Scrambling code type	MP		Enumerated(short, long)	
>>Scrambling code number	MP		Integer(0..16 777215)	
>>Number of DPDCH	MD		Integer(2..maxDPDCH)	Default value is 1. Number of DPDCH is 1 in HANDOVER TO UTRAN COMMAND
>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)	SF of the channelisation code for data part
>>TFCI existence	MD		Boolean	TRUE means existence. Default value is "TRUE"
>>Number of FBI bits	CH		Integer (1, 2)	In bits. Number of FBI bits is needed if SSdT or FB Mode Transmit Signalling is supported.
>>Puncturing Limit	MP		Real(0.40 ..1 by step of 0.04)	
>TDD				
>>Uplink Timing Advance Control	OP		Uplink Timing Advance Control 10.3.6.96	
>>UL CCTrCH List	MP	1 to <maxCCTrCH>		
>>>TFCS ID	MD		Integer(1..8)	Default value is 1.
>>>Time info	MP		Time info 10.3.6.83	
>>>Common timeslot info	MD		Common timeslot info 10.3.6.10	Default is the current Common timeslot info
>>>Uplink DPCH timeslots and codes	MD		Uplink Timeslots and Codes 10.3.6.94	Default is to use the old timeslots and codes.

Condition	Explanation
Single	This IE is included if IE "Number of DPDCH" is "1"

10.3.6.89 Uplink DPCH info Post

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink DPCH power control info	MP		Uplink DPCH power control info Post 10.3.6.92	
CHOICE <i>mode</i>	MP			
>FDD				
>>Scrambling code type	MP		Enumerated(short, long)	
>>>Reduced scrambling code number	MP		Integer(0..8191)	Sub-range of values for initial use upon handover to UTRAN.
>>>Spreading factor	MP		Integer(4, 8, 16, 32, 64, 128, 256)	SF of the channelisation code for data part There is only one DPDCH for this case
>TDD				
>>Uplink Timing Advance Control	OP		Uplink Timing Advance Control 10.3.6.96	
>>Uplink DPCH timeslots and codes	MP		Uplink Timeslots and Codes 10.3.6.94	

10.3.6.90 Uplink DPCH info Pre

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Uplink DPCH power control info	OP		Uplink DPCH power control info Pre 10.3.6.93	
CHOICE <i>mode</i>	MP			
>FDD				
>>TFCI existence	MP		Boolean	TRUE means existence. Default value is "TRUE"
>>>Puncturing Limit	MP		Real(0.40 ..1 by step of 0.04)	
>TDD				
>>Common timeslot info	MP		Common Timeslot Info 10.3.6.10	

Condition	Explanation
<i>Single</i>	This IE is included if IE "Number of DPDCH" is "1"

10.3.6.91 Uplink DPCH power control info

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control in FDD and parameters for uplink open loop power control in TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>DPCCH Power offset	MP		Integer(-164,..-6 by step of 2)	In dB
>>PC Preamble	MP		Integer (0, 15)	
>>Power Control Algorithm	MP		Enumerated (algorithm 1, algorithm 2)	Specifies algorithm to be used by UE to interpret TPC commands
>>TPC step size	CV algo		Integer (1, 2)	In dB
>TDD				
>>UL target SIR	MP		Real (-11 .. 20 by step of 0.5dB)	In dB
>>CHOICE UL OL PC info	MP			
>>>Broadcast UL OL PC info			Null	No data
>>>Individually Signalled	OP			
>>>>Individual timeslot interference info	MP	1 to <maxTS>		
>>>>> Individual timeslot interference	MP		Individual timeslot interference 10.3.6.38	
>>>>DPCH Constant Value	OP		Constant Value 10.3.6.11	Quality Margin
>>>>Primary CCPCH Tx Power	OP		Primary CCPCH Tx Power 10.3.6.59	For Pathloss Calculation

Condition	Explanation
<i>algo</i>	The IE is mandatory if "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is not needed

10.3.6.92 Uplink DPCH power control info Post

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Power Control Algorithm	MP		Enumerated (algorithm 1, algorithm 2)	Specifies algorithm to be used by UE to interpret TPC commands
>>TPC step size	CV algo		Integer (1, 2)	In dB
>TDD				
>>UL target SIR	MP		Real (-11 .. 20 by step of 0.5dB)	In dB
>>UL Timeslot Interference	MP		UL Interference 10.3.6.87	

Condition	Explanation
<i>algo</i>	The IE is mandatory if "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is not needed

10.3.6.93 Uplink DPCH power control info Pre

Parameters used by UE to set DPCH initial output power and to use for closed-loop power control in FDD and parameters for uplink open loop power control in TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>DPCCH Power offset	MP		Integer(-164..-6 by step of 2)	In dB
>>PC Preamble	MP		Integer (0, 15)	
>TDD				(No data)
>>DPCH Constant Value	MP		Constant Value 10.3.6.11	Quality Margin

Condition	Explanation
<i>Algo</i>	The IE is mandatory if "Power Control Algorithm" is set to "algorithm 1", otherwise the IE is not needed

10.3.6.94 Uplink Timeslots and Codes

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Dynamic SF usage	MP		Boolean	
First Individual timeslot info	MP		Individual timeslot info 10.3.6.37	Individual timeslot info for the first timeslot used by the physical layer.
First timeslot Code List	MP	1..2		Code list used in the timeslot. given in First individual timeslot info.
>Channelisation Code	MP		Enumerated((1/1),(2/1),(2/2),(4/1)..(4/4),(8/1)..(8/8),(16/1)..(16/16))	
CHOICE <i>more timeslots</i>	MP			
>No more timeslots				(no data)
>Consecutive timeslots				
>>Number of additional timeslots	MP		Integer(1..maxTS-1)	The timeslots used by the physical layer shall be timeslots: N mod maxTS (N+1) mod maxTS ... (N+k) mod maxTS in that order, where N is the timeslot number in the First individual timeslot info and k the Number of additional timeslots. The additional timeslots shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) as the first timeslot.
>Timeslot list				
>>Additional timeslot list	MP	1 to <maxTS-1>		The first instance of this parameter corresponds to the timeslot that shall be used second by the physical layer, the second to the timeslot that shall be used third and so on.
>>>CHOICE <i>parameters</i>	MP			
>>>>Same as last				
>>>>>Timeslot number	MP		Timeslot Number 10.3.6.84	This physical layer shall use the same parameters (e.g. channelisation codes, midamble shifts etc.) for this timeslot as for the last one.
>>>>>New parameters				
>>>>>Individual timeslot info	MP		Individual timeslot info 10.3.6.37	
>>>>>Code List	MP	1..2		
>>>>>>Channelisation Code	MP		Enumerated((1/1),(2/1),(2/2),(4/1)..(4/4),(8/1)..(8/8),(16/1)..(16/16))	

10.3.6.95 Uplink Timing Advance

NOTE: Only for TDD.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL Timing Advance	MP		Integer (0..63)	Absolute timing advance value to be used to avoid large delay spread at the NodeB

10.3.6.96 Uplink Timing Advance Control

NOTE: Only for TDD

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Timing Advance	MP			
>Disabled			Null	Indicates that no timing advance is applied
>Enabled				
>>UL Timing Advance	MD		Uplink Timing Advance 10.3.6.95	Absolute timing advance value to be used to avoid large delay spread at the NodeB. Default value is the existing value for uplink timing advance.
>>Activation Time	OP		Activation Time 10.3.3.1	Frame number timing advance is to be applied. This IE is required when a new UL Timing Advance adjustment is specified and Activation Time is not otherwise specified in the RRC message.

10.3.7 Measurement Information elements

10.3.7.1 Additional measurements list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Additional measurements	MP	1 to <MaxAdditionalMeas>		
>Additional measurement identity	MP		Measurement identity 10.3.7.48	

10.3.7.2 Cell info

Includes non-frequency related cell info used in the IE "inter-frequency cell info list" and "intra frequency cell info list".

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell individual offset	MD		Real(-10..10 by step of 0.5)	In dB Default value is 0 dB Used to offset measured quantity value
Reference time difference to cell	OP		Reference time difference to cell 10.3.7.60	In chips. This IE is absent for serving cell.
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH info	OP		Primary CPICH info 10.3.6.60	This IE is absent only if measuring RSSI only (broadband measurement.)
>>Primary CPICH Tx power	OP		Primary CPICH Tx power 10.3.6.61	Required if calculating pathloss.
>>Read SFN indicator	MP		Boolean	TRUE indicates that read of SFN is requested for the target cell
>>TX Diversity Indicator	MP		Boolean	
>TDD				
>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	
>>Primary CCPCH TX power	OP		Primary CCPCH TX power 10.3.6.59	
>> Timeslot list	OP	1 to <maxTS>		The UE shall report Timeslot ISCP values according the order of the listed Timeslot numbers
>>>Timeslot number	MP		Integer (0...14)	Timeslot numbers, for which the UE shall report Timeslot ISCP
>>>Burst Type	MD		Enumerated (Type1, Type2)	Use for Timeslot ISCP measurements only. Default value is "Type1"
Cell Selection and Re-selection Info	CV-BCHopt		Cell Selection and Re-selection for SIB11/12Info 10.3.2.4	Only when sent in system information. This IE is absent for serving cell. For neighbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are default value, this IE is absent.

10.3.7.3 Cell measured results

Includes non frequency related measured results for a cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell Identity	OP		Cell Identity 10.3.2.2	
SFN-SFN observed time difference	OP		SFN-SFN observed time difference 10.3.7.63	
Cell synchronisation information	OP		Cell synchronisation information 10.3.7.6	
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>>CPICH Ec/N0	OP		Integer(-20..0)	In dB
>>CPICH RSCP	OP		Integer(-115..-40)	In dBm
>>Pathloss	OP		Integer(46..158)	In dB
>TDD				
>>Cell parameters Id	MP		Cell parameters Id 10.3.6.9	
>>Proposed TGSN	OP		Integer (0..14)	Proposal for the next TGSN
>>Primary CCPCH RSCP	OP		Primary CCPCH RSCP info 10.3.7.54	
>>Pathloss	OP		Integer(46..158)	In dB
>> Timeslot list	OP	1 to <maxTS>		
>>>Timeslot ISCP	MP		Timeslot ISCP Info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info

10.3.7.4 Cell measurement event results

Includes non frequency related cell reporting quantities.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>Primary CPICH info	MP	1 to <maxCellMEas>	Primary CPICH info 10.3.6.60	
>TDD				
>>Primary CCPCH info	MP	1 to <maxCellMEas>	Primary CCPCH info 10.3.6.57	

10.3.7.5 Cell reporting quantities

Includes non frequency related cell reporting quantities.

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SFN-SFN observed time difference reporting indicator	MP		Enumerated(No report, type 1, type 2)	
Cell synchronisation information reporting indicator	MP		Boolean	
Cell Identity reporting indicator	MP		Boolean	
CHOICE <i>mode</i>	MP			
>FDD				
>>CPICH Ec/N0 reporting indicator	MP		Boolean	
>>CPICH RSCP reporting indicator	MP		Boolean	
>>Pathloss reporting indicator	MP		Boolean	
>TDD				
>>Timeslot ISCP reporting indicator	MP		Boolean	
>> Proposed TGSN Reporting required	MP		Boolean	
>>Primary CCPCH RSCP reporting indicator	MP		Boolean	
>>Pathloss reporting indicator	MP		Boolean	

10.3.7.6 Cell synchronisation information

The IE "Cell synchronisation information" contains the OFF and Tm as defined in 3GPP TS 25.215 and 3GPP TS 25.225 and the four most significant bits of the difference between the 12 least significant bits of the RLC Transparent Mode COUNT-C in the UE and the SFN of the measured cell. It is notified to SRNC by Measurement Report message or Measurement Information Element in other RRC messages

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>mode</i>	MP			
>FDD				
>>COUNT-C-SFN frame difference	OP			
>>>COUNT-C-SFN high	MP		Integer(0..3840 by step of 256)	in frames
>>>OFF	MP		Integer(0..255)	in frames
>>Tm	MP		Integer(0..38399)	in chips
>TDD				
>>COUNT-C-SFN frame difference	OP			
>>>COUNT-C-SFN high	MP		Integer(0..3840 by step of 256)	in frames
>>>OFF	MP		Integer(0..255)	in frames

NOTE: This measurement is only used in TDD when cells are not SFN synchronised

10.3.7.7 Event results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE event result	MP			
>Intra-frequency measurement event results			Intra-frequency measurement event results 10.3.7.37	
>Inter-frequency measurement event results			Inter-frequency measurement event results 10.3.7.17	
>Inter-RAT measurement event results			Inter-RAT measurement event results 10.3.7.28	For IS-2000 results, include fields of the <i>Pilot Strength Measurement Message</i> from subclause 2.7.2.3.2.5 of TIA/EIA/IS-2000.5
>Traffic volume measurement event results			Traffic volume measurement event results 10.3.7.69	
>Quality measurement event results			Quality measurement event results 10.3.7.57	
>UE internal measurement event results			UE internal measurement event results 10.3.7.78	
>UP measurement event results			UP measurement event results 10.3.7.101	

CHOICE event result	Condition under which the given event result is chosen
Intra-frequency measurement event results	If measurement type = intra-frequency measurement
Inter-frequency measurement event results	If measurement type = inter-frequency measurement
Inter-RAT measurement event results	If measurement type = inter-RAT measurement
Traffic volume measurement event results	If measurement type = traffic volume measurement
Quality measurement event results	If measurement type = Quality measurement
UE internal measurement event results	If measurement type = UE internal measurement
UP measurement event results	If measurement type = UP measurement

10.3.7.8 FACH measurement occasion info

This IE is for FDD only.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
FACH Measurement occasion cycle length coefficient	OP		Integer(1..12)	
Inter-frequency FDD measurement indicator	MP		Boolean	TRUE means that measurements are required
Inter-frequency TDD measurement indicator	MP		Boolean	TRUE means that measurements are required
Inter-RAT measurement indicators	OP	1 to <maxOther RAT>		
>RAT type	MP		Enumerated(GSM, IS2000)	

10.3.7.9 Filter coefficient

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Filter coefficient	MD		Integer(0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 13, 15, 17, 19)	Default value is 0

10.3.7.10 HCS Cell re-selection information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Penalty_time	MD		Integer(0, 10, 20, 30, 40, 50, 60)	Default value is 0 which means = not used In seconds
Temporary_offsets	<i>CV-Penalty used</i>			
>Temporary_offset1			Integer(10, 20, 30, 40, 50, 60, 70, infinity)	In seconds
>Temporary_offset2	<i>CV-FDD-Quality-Measure</i>		Integer(10, 20, 30, 40, 50, 60, 70, infinity)	Default value is Temporary_offset1

Condition	Explanation
<i>Penalty used</i>	Not allowed if IE Penalty time equals 'not used' else MP
<i>FDD-Quality-Measure</i>	Presence is not allowed if the IE "Cell_selection_and_reselection_quality_measure" has the value CPICH RSCP, otherwise the IE is mandatory and has a default value.

10.3.7.11 HCS neighbouring cell information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
HCS_PRIO	MD		Integer (0..7)	Default value = 0
Q _{HCS}	MD		Integer (-0..99)	Default value = 0
HCS Cell Re-selection Information	OP		HCS Cell Re-selection Information 10.3.7.10	

10.3.7.12 HCS Serving cell information

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
HCS_PRIO	MD		Integer (0..7)	Default value = 0
Q _{HCS}	MD		Integer(0..99)	Default value = 0
T _{CRmax}	MD		Integer(0, 30, 60, 120, 180, 240)	[s] Default value is 0 which means = not used
N _{CR}	CV-UE speed detector		Integer(1..16)	Default value = 8
T _{CRmaxHyst}	CV-UE speed detector		Integer(0, 10..70 by step of 10)	[s] Default value is 0 which means = not used

Condition	Explanation
UE Speed detector	Not allowed if T _{CRmax} equals 'not used' else MP

10.3.7.13 Inter-frequency cell info list

Contains the measurement object information for an inter-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Inter-frequency cell removal	MP			
>Remove all inter-frequency cells				No data
>Remove some inter-frequency cells				
>>Removed inter-frequency cells	MP	1 .. <maxCellIM eas>		
>>>Inter-frequency cell id	MP		Integer(0 .. <MaxInterCells>)	
>No inter-frequency cells removed				No data
New inter-frequency cells	OP	1 to <maxCellIM eas>		
>Inter-frequency cell id	MD		Integer(0 .. <MaxInterCells>)	The first inter-frequency cell in the list corresponds to inter-frequency cell id 0, the second corresponds to inter-frequency cell id 1 etc
>Frequency info	MD		Frequency info 10.3.6.36	Default value is the value of the previous "frequency info" in the list (note : the first occurrence is then MP)
>Cell info	MP		Cell info 10.3.7.2	

10.3.7.14 Inter-frequency event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency event identity	MP		Enumerated(2a, 2b, 2c, 2d, 2e, 2f)	

10.3.7.15 Inter-frequency measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency measurement results	OP	1 to <maxFreq>		
>Frequency info	MD		Frequency info 10.3.6.36	Default value is the value of the previous "frequency info" in the list (note : the first occurrence is then MP)
>UTRA carrier RSSI	OP		Integer(-95..-30)	In dBm
>Inter-frequency cell measurement results	OP	1 to <maxCellMeas>		
>>Cell measured results	MP		Cell measured results 10.3.7.3	

10.3.7.16 Inter-frequency measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency cell info list	MP		Inter-frequency cell info list 10.3.7.13	Measurement object
Inter-frequency measurement quantity	OP		Inter-frequency measurement quantity 10.3.7.18	
Inter-frequency reporting quantity	OP		Inter-frequency reporting quantity 10.3.7.21	
Reporting cell status	CV-reporting		Reporting cell status 10.3.7.61	
Measurement validity	OP		Measurement validity 10.3.7.51	
Inter-frequency set update	OP		Inter-frequency set update 10.3.7.22	
CHOICE report criteria	MP			
>Intra-frequency measurement reporting criteria			Intra-frequency measurement reporting criteria 10.3.7.39	
>Inter-frequency measurement reporting criteria			Inter-frequency measurement reporting criteria 10.3.7.19	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

Condition	Explanation
<i>reporting</i>	This IE is optional if the CHOICE "report criteria" is equal to "periodical reporting criteria" or "No reporting", otherwise the IE is not needed

10.3.7.17 Inter-frequency measurement event results

This IE contains the measurement event results that are reported to UTRAN for inter-frequency measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency event identity	MP		Inter-frequency event identity 10.3.7.14	
Inter-frequency cells	OP	1 to <maxFreq>		
>Frequency info	MP		Frequency info 10.3.6.36	
>Non frequency related measurement event results	MP		Cell measurement event results 10.3.7.4	

10.3.7.18 Inter-frequency measurement quantity

The quantity the UE shall measure in case of inter-frequency measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>reporting criteria</i>	MP			
>Intra-frequency reporting criteria				
>>Intra-frequency measurement quantity	MP		Intra-frequency measurement quantity 10.3.7.38	
>Inter-frequency reporting criteria				
>>Filter coefficient	MP		Filter coefficient 10.3.7.9	
>>>CHOICE <i>mode</i>	MP			
>>>>FDD				
>>>>Measurement quantity for frequency quality estimate	MP		Enumerated(CPICH Ec/N0, CPICH RSCP)	
>>>>TDD				
>>>>Measurement quantity for frequency quality estimate	MP		Enumerated(Primary CCPCH RSCP)	

10.3.7.19 Inter-frequency measurement reporting criteria

The triggering of the event-triggered reporting for an inter-frequency measurements. All events concerning inter-frequency measurements are labelled 2x where x is a,b,c..

Event 2a: Change of best frequency.

Event 2b: The estimated quality of the currently used frequency is below a certain threshold **and** the estimated quality of a non-used frequency is above a certain threshold.

Event 2c: The estimated quality of a non-used frequency is above a certain threshold.

Event 2d: The estimated quality of the currently used frequency is below a certain threshold.

Event 2e: The estimated quality of a non-used frequency is below a certain threshold.

Event 2f: The estimated quality of the currently used frequency is above a certain threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters required for each event	OP	1 to <maxMeas Event>		
>Inter-frequency event identity	MP		Inter-frequency event identity 10.3.7.14	
>Threshold used frequency	CV – clause 0		Integer(-115..0)	Ranges used depend on measurement quantity. CPICH Ec/No -24..0dB CPICH/Primary CCPCH RSCP -115..-25dBm
>W used frequency	CV – clause 0		Real(0, 0.1..2.0 by step of 0.1)	
>Hysteresis	MP		Real(0, 0.5..14.5 by step of 0.5)	In event 2a, 2b, 2c, 2d, 2e, 2f
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time between the timing of event detection and the timing of sending Measurement Report. Time in ms.
>Reporting cell status	OP		Reporting cell status 10.3.7.61	
>Parameters required for each non-used frequency	OP	1 to <maxFreq >		
>>Threshold non used frequency	CV – clause 1		Integer(-115..0)	Ranges used depend on measurement quantity. CPICH Ec/No -24..0dB CPICH/Primary CCPCH RSCP -115..-25dBm
>>W non-used frequency	CV-clause 1		Real(0, 0.1..2.0 by step of 0.1)	

Condition	Explanation
Clause 0	2a,2b, 2d, or 2f, otherwise the IE is not needed
Clause 1	The IE is mandatory in if "inter frequency event identity" is set to 2a, 2b, 2c or 2 ^e , otherwise the IE is not needed

10.3.7.20 Inter-frequency measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-frequency cell info list	OP		Inter-frequency cell info list 10.3.7.13	

10.3.7.21 Inter-frequency reporting quantity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRA Carrier RSSI	MP		Boolean	TRUE means report is requested
Frequency quality estimate	MP		Boolean	TRUE means that report is requested
Non frequency related cell reporting quantities	MP		Cell reporting quantities 10.3.7.5	

10.3.7.22 Inter-frequency SET UPDATE

NOTE: Only for FDD.

Contains the changes of the active set associated with a non-used frequency. This information makes it possible to use events defined for Intra-frequency measurement within the same non-used frequency for Inter-frequency measurement reporting criteria. This information also controls if the UE should use autonomous updating of the active set associated with a non-used frequency.

Information Element/group name	Need	Multi	Type and reference	Semantics description
UE autonomous update mode	MP		Enumerated (On, On with no reporting, Off)	
Non autonomous update mode	CV-Update			
>Radio link addition information	OP	1 to <maxRL>		Radio link addition information required for each RL to add
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	Note 1
>Radio link removal information	OP	1 to <MaxRL>		Radio link removal information required for each RL to remove
>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	Note 1

Condition	Explanation
<i>Update</i>	The IE is mandatory if IE"UE autonomous update mode" is set to "Off", otherwise the IE is not needed.

NOTE 1: If it is assumed that CPICH downlink scrambling code is always allocated with sufficient reuse distances, CPICH downlink scrambling code will be enough for designating the different radio links.

10.3.7.23 Inter-RAT cell info list

Contains the measurement object information for an inter-RAT measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Inter-RAT cell removal	MP			
>Remove all inter-RAT cells				No data
>Remove some inter-RAT cells				
>>Removed inter-RAT cells	MP	1 to <maxCellMeas>		
>>>Inter-RAT cell id	MP		Integer(0 .. <maxCellMeas> - 1)	
>Remove no inter-RAT cells				
New inter-RAT cells	OP	1 to <maxCellMeas>		
>Inter-RAT cell id	MD		Integer(0 .. <maxCellMeas> - 1)	The first inter-RAT cell in the list corresponds to inter-RAT cell id 0, the second corresponds to inter-RAT cell id 1 etc.
>CHOICE <i>Radio Access Technology</i>	MP			
>>GSM				
>>>Cell selection and re-selection info	CV-BCHopt		Cell selection and re-selection info for SIB11/12 10.3.2.4	Only when sent in system information. If HCS is not used and all the parameters in cell selection and re-selection info are default values, this IE is absent.
>>>BSIC	MP		BSIC 10.3.8.2	
>>>BCCH ARFCN	MP		Integer (0..1023)	GSM TS 04.18
>>>Output power	OP			
>>IS-2000				
>>>System specific measurement info			enumerated (frequency, timeslot, colour code, output power, PN offset)	For IS-2000, use fields from TIA/EIA/IS-2000.5, Section 3.7.3.3.2.27, <i>Candidate Frequency Neighbour List Message</i>

10.3.7.24 Inter-RAT event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT event identity	MP		Enumerated (3a, 3b, 3c, 3d)	

10.3.7.25 Inter-RAT info

Inter-RAT info defines the target system for redirected cell selection.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT info	MP		Enumerated (GSM)	

10.3.7.26 Inter-RAT measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT measurement results	OP	1 to <maxOther RAT>		
>CHOICE system				At least one spare value needed
>>GSM				
>>>Measured GSM cells	MP	1 to <maxReportedGSMCells>		
>>>>GSM carrier RSSI	OP		bit string(6)	RXLEV, GSM TS 05.08
>>>>Pathloss	OP		Integer(46..158)	In dB
>>>>CHOICE BSIC	MP			
>>>>>Verified BSIC				
>>>>>>inter-RAT cell id			Integer(0..<maxCellMeasures>)	
>>>>>Non verified BSIC				
>>>>>>BCCH ARFCN			Integer (0..1023)	GSM TS 04.18
>>>>Observed time difference to GSM cell	OP		Observed time difference to GSM cell 10.3.7.52	

10.3.7.27 Inter-RAT measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT cell info list	OP		Inter-RAT cell info list 10.3.7.23	Measurement object
Inter-RAT measurement quantity	OP		Inter-RAT measurement quantity 10.3.7.29	
Inter-RAT reporting quantity	OP		Inter-RAT reporting quantity 10.3.7.32	
Reporting cell status	CV-reporting		Reporting cell status 10.3.7.61	
CHOICE report criteria	MP			
>Inter-RAT measurement reporting criteria			Inter-RAT measurement reporting criteria 10.3.7.30	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

Condition	Explanation
<i>reporting</i>	This IE is optional if the CHOICE "report criteria" is equal to "periodical reporting criteria" or "No reporting", otherwise the IE is not needed

10.3.7.28 Inter-RAT measurement event results

This IE contains the measurement event results that are reported to UTRAN for inter-RAT measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT event identity	MP		Inter-RAT event identity 10.3.7.24	
Cells to report	MP	1 to <maxCellMeas>		
>CHOICE BSIC	MP			
>>Verified BSIC				
>>>inter-RAT cell id			Integer(0..<maxCellMeas>)	
>>Non verified BSIC				
>>>BCCH ARFCN			Integer (0..1023)	GSM TS 04.18

10.3.7.29 Inter-RAT measurement quantity

The quantity the UE shall measure in case of inter-RAT measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement quantity for UTRAN quality estimate	OP		Intra-frequency measurement quantity 10.3.7.38	
CHOICE <i>system</i>	MP			
>GSM				
>>Measurement quantity	MP		Enumerated(GSM Carrier RSSI, Pathloss)	
>>Filter coefficient	MP		Filter coefficient 10.3.7.9	
>>BSIC verification required	MP		Enumerated(required, not required)	
>IS2000				
>>TADD E_c/I_0	MP		Integer(0..63)	Admission criteria for neighbours, see subclause 2.6.6.2.6 of TIA/EIA/IS-2000.5
>>TCOMP E_c/I_0	MP		Integer(0..15)	Admission criteria for neighbours, see subclause 2.6.6.2.5.2 of TIA/EIA/IS-2000.5
>>SOFT SLOPE	OP		Integer(0..63)	Admission criteria for neighbours, see subclause 2.6.6.2.3 and 2.6.6.2.5.2 of TIA/EIA/IS-2000.5
>>ADD_INTERCEPT	OP		Integer(0..63)	Admission criteria for neighbours, see subclause 2.6.6.2.5.2 of TIA/EIA/IS-2000.5

Also, this IE must be set to "required" if IE "Observed time difference to GSM cell" in IE "Inter-RAT reporting quantity" is set to "true".

10.3.7.30 Inter-RAT measurement reporting criteria

The triggering of the event-triggered reporting for an inter-RAT measurement. All events concerning inter-RAT measurements are labelled 3x where x is a,b,c..

Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain threshold **and** the estimated quality of the other system is above a certain threshold.

Event 3b: The estimated quality of other system is below a certain threshold.

Event 3c: The estimated quality of other system is above a certain threshold.

Event 3d: Change of best cell in other system.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters required for each event	OP	1 to <maxMeas Event>		
>Inter-RAT event identity	MP		Inter-RAT event identity 10.3.7.24	
>Threshold own system	CV – clause 0			
>W	CV – clause 0			In event 3a
>Threshold other system	CV – clause 1			In event 3a, 3b, 3c
>Hysteresis	MP			
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time between the timing of event detection and the timing of sending Measurement Report.
>Reporting cell status	OP		Reporting cell status 10.3.7.61	

Condition	Explanation
Clause 0	The IE is mandatory if " Inter-RAT event identity" is set to "3a", otherwise the IE is not needed
Clause 1	The IE is mandatory if " Inter-RAT event identity" is set to 3a, 3b or 3c, otherwise the IE is not needed

10.3.7.31 Inter-RAT measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT cell info list	OP		Inter-RAT cell info list 10.3.7.23	

10.3.7.32 Inter-RAT reporting quantity

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UTRAN estimated quality	MP		Boolean	
CHOICE <i>system</i>	MP			
>GSM				
>>Pathloss	MP		Boolean	
>>Observed time difference to GSM cell	MP		Boolean	
>>GSM Carrier RSSI	MP		Boolean	

10.3.7.33 Intra-frequency cell info list

Contains the measurement object information for an intra-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Intra-frequency cell removal	MP			
>Remove all intra-frequency cells				No data
>Remove some intra-frequency cells				
>>Removed intra-frequency cells	MP	1 to <maxCellMeas>		
>>>Intra-frequency cell id	MP		Integer(0 .. <maxCellMeas> - 1)	
>Remove no intra-frequency cells				
New intra-frequency cell	OP	1 to <maxCellMeas>		This information element must be present when "Intra-frequency cell info list" is included in the system information
>Intra-frequency cell id	MD		Integer(0 .. <maxCellMeas> - 1)	The first intra-frequency cell in the list corresponds to intra-frequency cell id 0, the second corresponds to intra-frequency cell id 1 etc.
>Cell info	MP		Cell info 10.3.7.2	

10.3.7.34 Intra-frequency event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency event identity	MP		Enumerated (1a,1b,1c,1d,1e,1f,1g,1h,1i)	

10.3.7.35 Intra-frequency measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency measured results	OP	1 to <maxCellMeas>		
>Cell measured results	MP		Cell measured results 10.3.7.3	

10.3.7.36 Intra-frequency measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency cell info list	OP		Intra-frequency cell info list 10.3.7.33	Measurement object
Intra-frequency measurement quantity	OP		Intra-frequency measurement quantity 10.3.7.38	
Intra-frequency reporting quantity	OP		Intra-frequency reporting quantity 10.3.7.41	
Reporting cell status	CV-reporting		Reporting cell status 10.3.7.61	
Measurement validity	OP		Measurement validity 10.3.7.51	
CHOICE report criteria	OP			
>Intra-frequency measurement reporting criteria			Intra-frequency measurement reporting criteria 10.3.7.39	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

Condition	Explanation
<i>reporting</i>	This IE is optional if the CHOICE "report criteria" is equal to "periodical reporting criteria" or "No reporting", otherwise the IE is not needed

10.3.7.37 Intra-frequency measurement event results

This IE contains the measurement event results that are reported to UTRAN for intra-frequency measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency event identity	MP		Intra-frequency event identity 10.3.7.34	
Cell measured event results	MP		Cell measured event results 10.3.7.4	

10.3.7.38 Intra-frequency measurement quantity

The quantity the UE shall measure in case of intra-frequency measurement. It also includes the filtering of the measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Filter coefficient	MP		Filter coefficient 10.3.7.9	
CHOICE <i>mode</i>	MP			
>FDD				
>>Measurement quantity	MP		Enumerated(C PICH Ec/N0, CPICH RSCP, Pathloss, UTRA Carrier RSSI)	Pathloss=Primary CPICH Tx power-CPICH RSCP If used in Inter system measurement quantity only Ec/N0 an RSCP is allowed. If used in inter-frequency measurement quantity RSSI is not allowed.
>TDD				
>>Measurement quantity list	MP	1 to 4		
>>>Measurement quantity	MP		Enumerated(Primary CCPCH RSCP, Pathloss, Timeslot ISCP, UTRA Carrier RSSI)	Pathloss=Primary CCPCH Tx power-Primary CCPCH RSCP If used in inter-frequency measurement quantity RSSI is not allowed.

10.3.7.39 Intra-frequency measurement reporting criteria

The triggering of the event-triggered reporting for an intra-frequency measurement. All events concerning intra-frequency measurements are labelled 1x where x is a, b, c....

Event 1a: A Primary CPICH enters the Reporting Range (FDD only).

Event 1b: A Primary CPICH leaves the Reporting Range (FDD only).

Event 1c: A Non-active Primary CPICH becomes better than an active Primary CPICH (FDD only).

Event 1d: Change of best cell [Note 1] (FDD only).

Event 1e: A Primary CPICH becomes better than an absolute threshold (FDD only).

Event 1f: A Primary CPICH becomes worse than an absolute threshold (FDD only).

Event 1g: Change of best cell in TDD.

Event 1h: Timeslot ISCP below a certain threshold (TDD only).

Event 1i: Timeslot ISCP above a certain threshold (TDD only).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters required for each event	OP	1 to <maxMeas Event>		
> Intra-frequency event identity	MP		Intra-frequency event identity 10.3.7.34	
>Triggering condition 1	CV – clause 0		Enumerated(Active set cells, Monitored set cells, Active set cells and monitored set cells)	Indicates which cells can trigger the event
>Triggering condition 2	CV – clause 6		Enumerated(Active set cells, Monitored set cells, Active set cells and monitored set cells, Detected set cells, Detected set cells and monitored set cells)	Indicates which cells can trigger the event
>Reporting Range	CV – clause 2		Real(0..14.5 by step of 0.5)	In dB. In event 1a,1b.
>Cells forbidden to affect Reporting range	CV – clause 1	1 to <maxCellMeas>		In event 1a,1b
>>CHOICE mode	MP			
>>>FDD				
>>>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	

Information Element/Group name	Need	Multi	Type and reference	Semantics description
>>>TDD				
>>>>Primary CCPCH info	MP		Primary CCPCH info 10.3.6.57	
>W	CV – clause 2		Real(0.0..2.0 by step of 0.1)	
>Hysteresis	MP		Real(0..7.5 by step of 0.5)	In dB.
> Threshold used frequency	CV-clause 3		Integer (-115..165)	Range used depend on measurement quantity. CPICH RSCP -115 .. -40 dBm CPICH Ec/No -24..0 dB Pathloss 30..165dB ISCP -115..-25 dBm
>Reporting deactivation threshold	CV – clause 4		Integer(0, 1, 2, 3, 4, 5, 6, 7)	In event 1a Indicates the maximum number of cells allowed in the active set in order for event 1a to occur. 0 means not applicable
>Replacement activation threshold	CV - clause 5		Integer(0, 1, 2, 3, 4, 5, 6, 7)	In event 1c Indicates the minimum number of cells allowed in the active set in order for event 1c to occur. 0 means not applicable
>Time to trigger	MP		Time to trigger 10.3.7.64	Indicates the period of time between the timing of event detection and the timing of sending Measurement Report. Time in ms
>Amount of reporting	CV – clause 7		Integer(1, 2, 4, 8, 16, 32, 64, Infinity)	
>Reporting interval	CV – clause 7		Integer(0, 250, 500, 1000, 2000, 4000, 8000, 16000)	Indicates the interval of periodical reporting when such reporting is triggered by an event. Interval in milliseconds. 0 means no periodical reporting
>Reporting cell status	OP		Reporting cell status 10.3.7.61	

Condition	Explanation
Clause 0	The IE is mandatory if "Intra-frequency event identity" is set to "1b" or "1f", otherwise the IE is not needed
Clause 1	The IE is optional if "Intra-frequency event identity" is set to "1a" or "1b", otherwise the IE is not needed
Clause 2	The IE is mandatory if "Intra-frequency event identity" is set to "1a" or "1b", otherwise the IE is not needed
Clause 3	The IE is mandatory if "Intra-frequency event identity" is set to , "1e", "1f", "1h", "1i" or "1j", otherwise the IE is not needed
Clause 4	The IE is mandatory if "Intra-frequency event identity" is set to "1a", otherwise the IE is not needed
Clause 5	The IE is mandatory if "Intra-frequency event identity" is set to "1c", otherwise the IE is not needed
Clause 6	The IE is mandatory if "Intra-frequency event identity" is set to "1a" or "1e".
Clause 7	The IE is mandatory if "Intra-frequency event identity" is set to "1a" or "1c".

10.3.7.40 Intra-frequency measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency measurement identity	MD		Measurement identity 10.3.7.48	The intra-frequency measurement identity has default value 1.
Intra-frequency cell info list	OP		Intra-frequency cell info list 10.3.7.33	
Intra-frequency measurement quantity	OP		Intra-frequency measurement quantity 10.3.7.38	
Intra-frequency reporting quantity for RACH Reporting	OP		Intra-frequency reporting quantity for RACH Reporting 10.3.7.42	
Maximum number of reported cells on RACH	OP		Maximum number of reported cells on RACH 10.3.7.43	
Reporting information for state CELL_DCH	OP		Reporting information for state CELL_DCH 10.3.7.62	Note 1

NOTE 1: The reporting of intra-frequency measurements is activated when state CELL_DCH is entered.

10.3.7.41 Intra-frequency reporting quantity

Contains the reporting quantity information for an intra-frequency measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Reporting quantities for active set cells	MP		Cell reporting quantities 10.3.7.5	
Reporting quantities for monitored set cells	MP		Cell reporting quantities 10.3.7.5	
Reporting quantities for detected set cells	OP		Cell reporting quantities 10.3.7.5	

10.3.7.42 Intra-frequency reporting quantity for RACH reporting

Contains the reporting quantity information for an intra-frequency measurement report, which is sent on the RACH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SFN-SFN observed time difference	MP		Enumerated(No report, type 1, type 2)	
CHOICE <i>mode</i>	MP			
>FDD				
>>Reporting quantity	MP		Enumerated(CPICH Ec/N0, CPICH RSCP, Pathloss, No report)	
>TDD				
>>Reporting quantity list	MP	1 to 2		
>>>Reporting quantity	MP		Enumerated(Timeslot ISCP, Primary CCPCH RSCP, No report)	

10.3.7.43 Maximum number of reported cells on RACH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Maximum number of reported cells	MP		Enumerated (no report, current cell, current cell + best neighbour, current cell+2 best neighbours, ..., current cell+6 best neighbours)	

10.3.7.44 Measured results

Contains the measured results of the quantity indicated optionally by Reporting Quantity in Measurement Control. "Measured results" can be used for both event trigger mode and periodical reporting mode. The list should be in the order of the value of the measurement quality (the first cell should be the best cell). The "best" FDD cell has the largest value when the measurement quantity is "Ec/No" or "RSCP". On the other hand, the "best" cell has the smallest value when the measurement quantity is "Pathloss". The "best" TDD cell has the largest value when measurement quantity is "Primary CCPCH RSCP".

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Measurement	MP			
>Intra-frequency measured results list			Intra-frequency measured results list 10.3.7.35	
>Inter-frequency measured results list			Inter-frequency measured results list 10.3.7.15	
>Inter-RAT measured results list			Inter-RAT measured results list 10.3.7.26	
>Traffic volume measured results list			Traffic volume measured results list 10.3.7.67	
>Quality measured results list			Quality measured results list 10.3.7.55	
>UE Internal measured results			UE Internal measured results 10.3.7.76	
>UP measured results			UP measured results 10.3.7.99	

10.3.7.45 Measured results on RACH

Contains the measured results on RACH of the quantity indicated optionally by Reporting Quantity in the system information broadcast on BCH. The list should be in the order of the value of the measurement quality (the first cell should be the best cell). The "best" FDD cell has the largest value when the measurement quantity is "Ec/No" or "RSCP". On the other hand, the "best" cell has the smallest value when the measurement quantity is "Pathloss". The "best" TDD cell has the largest value when measurement quantity is "Primary CCPCH RSCP".

Information Element/group name	Need	Multi	Type and reference	Semantics description
Measurement result for current cell				
CHOICE <i>mode</i>	MP			
>FDD				
>>CHOICE measurement quantity	MP			
>>>CPICH Ec/No			Integer(-20..0)	In dB
>>>CPICH RSCP			Integer(-115..-40)	In dBm
>>>Pathloss			Integer(46..158)	In dB
>TDD				
>>Timeslot List	OP	1 to 14		
>>>Timeslot ISCP	MP		Timeslot ISCP info 10.3.7.65	The UE shall report the Timeslot ISCP in the same order as indicated in the cell info
>>Primary CCPCH RSCP	OP		Primary CCPCH RSCP info 10.3.7.54	
Measurement results for monitored cells	OP	1 to 7		
>SFN-SFN observed time difference	OP		SFN-SFN observed time difference 10.3.7.63	It is absent for current cell
>CHOICE <i>mode</i>	MP			
>>FDD				
>>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>>>CHOICE measurement quantity	OP			It is absent for current cell
>>>>CPICH Ec/No			Integer(-20..0)	In dB
>>>>CPICH RSCP			Integer(-115..-40)	In dBm
>>>>Pathloss			Integer(46..158)	In dB
>>TDD				
>>>Cell parameters Id	MP		Cell parameters Id 10.3.6.9	
>>>Primary CCPCH RSCP	MP		Primary CCPCH RSCP info 10.3.7.54	

NOTE 1: Monitored cells consist of current cell and neighbouring cells.

10.3.7.46 Measurement Command

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement command	MP		Enumerated(Setup,Modify,Release)	

10.3.7.47 Measurement control system information

Information element/Group name	Need	Multi	Type and reference	Semantics description
Use of HCS	MP		Enumerated (Not used, used)	Indicates if the serving cell belongs to a HCS structure
Cell_selection_and_reselection_quality_measure	MP		Enumerated (CPICH Ec/N0, CPICH RSCP)	Choice of measurement (CPICH Ec/N0 or CPICH RSCP) to use as quality measure Q.
Intra-frequency measurement system information	OP		Intra-frequency measurement system information 10.3.7.40	
Inter-frequency measurement system information	OP		Inter-frequency measurement system information 10.3.7.20	
Inter-RAT measurement system information	OP		Inter-RAT measurement system information 10.3.7.31	
Traffic volume measurement system information	OP		Traffic volume measurement system information 10.3.7.73	
UE Internal measurement system information	OP		UE Internal measurement system information 10.3.7.81	

NOTE1: The reporting of intra-frequency measurements is activated when state CELL_DCH is entered.

10.3.7.48 Measurement Identity

A reference number that is used by the UTRAN at modification and release of the measurement, and by the UE in the measurement report.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement identity	MP		Integer(1..16)	

10.3.7.49 Measurement reporting mode

Contains the type of Measurement Report transfer mode and the indication of periodical/event trigger.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement Report Transfer Mode	MP		enumerated (Acknowledged mode RLC, Unacknowledged mode RLC)	
Periodical Reporting / Event Trigger Reporting Mode	MP		Enumerated (Periodical reporting, Event trigger)	

10.3.7.50 Measurement Type

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement Type	MP		Enumerated(Intra-frequency, Inter-frequency, Inter-RAT, Traffic volume, Quality, UE internal, UP)	

10.3.7.51 Measurement validity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE state	MP		Enumerated(CELL_DCH, all states except CELL_DCH, all states)	Indicates the states, in which measurement reporting shall be conducted. The values 'all states except CELL_DCH' and 'all states' are used for measurement type 'traffic volume reporting'.

10.3.7.52 Observed time difference to GSM cell

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Observed time difference to GSM cell	OP		Real(0.0..4095*3060/(4096*13) by step of 3060/(4096*13))	In ms

10.3.7.53 Periodical reporting criteria

Contains the periodical reporting criteria information. It is necessary only in the periodical reporting mode.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Amount of reporting	MD		Integer(1, 2, 4, 8, 16, 32, 64, Infinity)	The default value is infinity.
Reporting interval	MP		Integer(250, 500, 1000, 2000, 3000, 4000, 6000, 8000, 12000, 16000, 20000, 24000, 28000, 32000, 64000)	Indicates the interval of periodical report. Interval in milliseconds

10.3.7.54 Primary CCPCH RSCP info

NOTE: Only for TDD

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Primary CCPCH RSCP	MP		Enumerated (-115, -114 ... -25)	Granularity 1dB

10.3.7.55 Quality measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
BLER measurement results	OP	1 to <maxTrCH >		
>DL Transport channel identity	MP		Transport channel identity 10.3.5.18	
>DL Transport Channel BLER	OP		Integer (0..63)	Transport channel BLER according to the mapping of BLER_LOG value in 25.133
CHOICE mode				
>FDD				No data
>TDD				
>>SIR measurement results	OP	1 to <MaxCCTrCH>		SIR measurements for DL CCTrCH
>>>TFCS ID	MP		Enumerated (1...8)	
>>>Timeslot list	MP	1 to <maxTS>		for all timeslot on which the CCTrCH is mapped on
>>>>SIR	MP		Integer(-10...20)	the UE shall report in ascending timeslot order

10.3.7.56 Quality measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Quality reporting quantity	OP		Quality reporting quantity 10.3.7.59	
CHOICE report criteria	MP			
>Quality measurement reporting criteria			Quality measurement reporting criteria 10.3.7.58	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

10.3.7.57 Quality measurement event results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Transport channels causing the event	OP	1 to <maxTrCH >		
>Transport channel identity	MP		Transport channel identity 10.3.5.18	

10.3.7.58 Quality measurement reporting criteria

Event 5a: Number of bad CRCs on a certain transport channel exceeds a threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters sent for each transport channel	OP	1 to <maxTrCH >		
>Transport channel identity	MP		Transport channel identity 10.3.5.18	
>Total CRC	MP		Integer(1..512)	Number of CRCs
>Bad CRC	MP		Integer(1..512)	Number of CRCs
>Pending after trigger	MP		Integer(1..512)	Number of CRCs

10.3.7.59 Quality reporting quantity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
DL Transport Channel BLER	MP		Boolean	TRUE means report requested
Transport channels for BLER reporting	CV BLER reporting	1 to <maxTrCH >		The default, if no transport channel identities are present, is that the BLER is reported for all downlink transport channels
>DL Transport channel identity	MP		Transport channel identity 10.3.5.18	
CHOICE mode				
>FDD				No data
>TDD				
>>SIR measurement list	OP	1 to <maxCCTr CH>		SIR measurements shall be reported for all listed TFCS IDs
>>>TFCS ID	MP		Enumerated (1..8)	

Condition	Explanation
<i>BLER reporting</i>	This information element is absent if 'DL Transport Channel BLER' is 'False' and optional, if 'DL Transport Channel BLER' is 'True'

10.3.7.60 Reference time difference to cell

In the System Information message, the reference time difference to cell indicates the timing difference between the primary CCPCH of the current cell and the primary CCPCH of a neighbouring cell..

In the Measurement Control message, the reference time difference to cell indicates the timing difference between UE uplink transmission timing and the primary CCPCH of a neighbouring cell.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>accuracy</i>	MP			
>40 chips				
>>Reference time difference	MP		Integer(0..38400 by step of 40)	In chips
>256 chips				
>>Reference time difference	MP		Integer(0..38400 by step of 256)	In chips
>2560 chips				
>>Reference time difference	MP		Integer(0..38400 by step of 2560)	In chips

10.3.7.61 Reporting Cell Status

Indicates maximum allowed number of cells to report and whether active set cells and/or virtual active set cells and/or monitored set cells on and/or detected set cells used frequency and/or monitored set cells on non used frequency should/should not be included in the IE "Measured results".

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Choice reported cell	MP			
>Report cells within active set				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report cells within monitored set cells on used frequency				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report cells within active set and/or monitored set cells on used frequency				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report cells within detected set on used frequency				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report cells within monitored set and/or detected set on used frequency				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report all active set cells + cells within monitored set on used frequency				
>> Maximum number of reported cells	MP		Enumerated (virtual/active set cells+1, virtual/active set cells+2, ..., virtual/active set cells+6)	
>Report all active set cells + cells within detected set on used frequency				
>>Maximum number of reported cells	MP		Enumerated (virtual/active set cells+1, virtual/active set cells+2, ..., virtual/active set cells+6)	
>Report all active set cells + cells within monitored set and/or detected set on used frequency				
>>Maximum number of reported cells	MP		Enumerated (virtual/active set cells+1, virtual/active set cells+2, ..., virtual/active set cells+6)	

>Report cells within virtual active set				
>>Maximum number of reported cells	MP		Integer(1..6)	
> Report cells w within monitored set on non-used frequency				
>>Maximum number of reported cells	MP		Integer(1..6)	
>Report cells within monitored and/or active set on non-used frequency				
>> Maximum number of reported cells	MP		Integer(1..6)	
>Report all virtual active set cells + cells within monitored set on non-used frequency				
>> Maximum number of reported cells	MP		Enumerated (virtual/active set cells+1, virtual/active set cells+2, ..., virtual/active set cells+6)	
>Report cells within active set or within virtual active set				
>>Maximum number of reported cells	MP		Integer (1..12)	
>Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency				
>>Maximum number of reported cells	MP		Integer(1..12)	

10.3.7.62 Reporting information for state CELL_DCH

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Intra-frequency reporting quantity	MP		Intra-frequency reporting quantity 10.3.7.41	
Measurement Reporting Mode	MP		Measurement Reporting Mode 10.3.7.49	
CHOICE report criteria	MP			
>Intra-frequency measurement reporting criteria			Intra-frequency measurement reporting criteria 10.3.7.39	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	

10.3.7.63 SFN-SFN observed time difference

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>type</i>	MP			
>Type 1			Integer(0..9830399)	Number of chips
>Type 2			Real(-1280.0..1280.0 by step of 0.0625)	Resolution of 1/16th of a chip

10.3.7.64 Time to trigger

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Time to trigger	MP		Integer(0, 10, 20, 40, 60, 80, 100, 120, 160, 200, 240, 320, 640, 1280, 2560, 5000)	Indicates the period of time between the timing of event detection and the timing of sending Measurement Report. Time in ms

10.3.7.65 Timeslot ISCP info

NOTE: Only for TDD

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
Timeslot ISCP	MP		Integer (-115... -25)	In dBm

10.3.7.66 Traffic volume event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume event identity	MP		Enumerated(4a, 4b)	

10.3.7.67 Traffic volume measured results list

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement results	OP	1 to <maxRB >		
>RB Identity	MP		RB Identity 10.3.4.16	
>RLC buffers payload	OP		Enumerated(0, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2K, 4K, 8K, 16K, 32K, 64K, 128K, 256K, 512K, 1024K)	In bytes And N Kbytes = N*1024 bytes
>Average RLC buffer payload	OP		Enumerated(0, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2K, 4K, 8K, 16K, 32K, 64K, 128K, 256K, 512K, 1024K)	In bytes And N Kbytes = N*1024 bytes
>Variance of RLC buffer payload	OP		Enumerated(0, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2K, 4K, 8K, 16K)	In bytes And N Kbytes = N*1024 bytes

10.3.7.68 Traffic volume measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement Object	OP		Traffic volume measurement Object 10.3.7.70	
Traffic volume measurement quantity	OP		Traffic volume measurement quantity 10.3.7.71	
Traffic volume reporting quantity	OP		Traffic volume reporting quantity 10.3.7.74	
Measurement validity	OP		Measurement validity 10.3.7.51	
CHOICE report criteria	MP			
>Traffic volume measurement reporting criteria			Traffic volume measurement reporting criteria 10.3.7.72	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

10.3.7.69 Traffic volume measurement event results

Contains the event result for a traffic volume measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UL Transport Channel causing the event	MP		Transport channel identity 10.3.5.18	
Traffic volume event identity	MP		Traffic volume event identity 10.3.7.66	

10.3.7.70 Traffic volume measurement object

Contains the measurement object information for a traffic volume measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement objects	MP	1 to <maxTrCH >		
>UL Target Transport Channel ID	MP		Transport channel identity 10.3.5.18	

10.3.7.71 Traffic volume measurement quantity

Contains the measurement quantity information for a traffic volume measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Measurement quantity	MP		Enumerated(RLC buffer payload, Average RLC buffer payload, Variance of RLC buffer payload)	
Time Interval to take an average or a variance	CV-A/V		Integer(20, 40, ..260, by steps of 20)	In ms

Condition	Explanation
A/V	This IE is present when "Average RLC buffer" or "Variance of RLC buffer payload" is chosen.

10.3.7.72 Traffic volume measurement reporting criteria

Contains the measurement reporting criteria information for a traffic volume measurement.

Event 4a: RLC buffer payload exceeds an absolute threshold.

Event 4b: RLC buffer payload becomes smaller than an absolute threshold.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters sent for each transport channel	OP	1 to <maxTrCH >		
>UL Transport Channel ID	OP		Transport channel identity 10.3.5.18	
>Parameters required for each Event	OP	1 to <maxMeas perEvent>		
>>Traffic volume event identity	MP		Traffic volume event identity 10.3.7.66	
>>Reporting Threshold	MP		Enumerated(8,16,32,64,128,256,512,1024,2K,3K,4K,6K,8K,12K,16K,24K,32K,48K,64K,96K,128K,192K,256K,384K,512K,768K)	Threshold in bytes And N Kbytes = N*1024 bytes
>>Time to trigger	OP		Time to trigger 10.3.7.64	Indicates the period of time between the timing of event detection and the timing of sending Measurement Report. Time in ms
>>Pending time after trigger	OP		Integer(250, 500, 1000, 2000, 4000, 8000, 16000)	Time in seconds. Indicates the period of time during which it is forbidden to send any new measurement reports with the same Traffic volume event identity even if the triggering condition is fulfilled again. Time in milliseconds
>>Tx interruption after trigger	OP		Integer (250, 500, 1000, 2000, 4000, 8000, 16000)	Time in milliseconds. Indicates whether or not the UE shall block DTCH transmissions on the RACH after a measurement report is triggered.

10.3.7.73 Traffic volume measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Traffic volume measurement identity	MD		Measurement identity 10.3.7.48	The traffic volume measurement identity has default value 4.
Traffic volume measurement objects	OP		Traffic volume measurement	

			t objects 10.3.7.70	
Traffic volume measurement quantity	OP		Traffic volume measurement quantity 10.3.7.71	
Traffic volume reporting quantity	OP		Traffic volume reporting quantity 10.3.7.74	
Measurement validity	OP		Measurement validity 10.3.7.51	
Measurement Reporting Mode	MP		Measurement Reporting Mode 10.3.7.49	
CHOICE reporting criteria	MP			
>Traffic volume measurement reporting criteria			Traffic volume measurement reporting criteria 10.3.7.72	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	

10.3.7.74 Traffic volume reporting quantity

Contains the reporting quantity information for a traffic volume measurement.

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RLC buffer payload for each RB	MP		Boolean	
Average RLC buffer payload for each RB	MP		Boolean	
Variance of RLC buffer payload for each RB	MP		Boolean	

10.3.7.75 UE internal event identity

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE internal event identity	MP		Enumerated(6a,6b,6c,6d,6e, 6f, 6g)	

10.3.7.76 UE internal measured results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>UE Transmitted Power	OP		UE transmitted power info 10.3.7.85	
>>UE Rx-Tx report entries	OP	1 to <maxRL >		
>>>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	Primary CPICH info for each cell included in the active set
>>>UE Rx-Tx time difference type 1	MP		UE Rx-Tx time difference type 1 10.3.7.83	UE Rx-Tx time difference in chip for each RL included in the active set
>TDD				
>>UE transmitted Power list	OP	1 to <maxTS >		UE transmitted power for each used uplink timeslot in ascending timeslot number order
>>>UE transmitted power	MP		UE transmitted power info 10.3.7.85	
>>Applied TA	OP		Uplink Timing Advance 10.3.6.95	

10.3.7.77 UE internal measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE internal measurement quantity	OP		UE internal measurement quantity 10.3.7.79	
UE internal reporting quantity	OP		UE internal reporting quantity 10.3.7.82	
CHOICE report criteria	MP			
>UE internal measurement reporting criteria			UE internal measurement reporting criteria 10.3.7.80	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement

CHOICE report criteria	Condition under which the given report criteria is chosen
UE internal measurement reporting criteria	Chosen when UE internal measurement event triggering is required
Periodical reporting criteria	Chosen when periodical reporting is required
No reporting	Chosen when this measurement only is used as additional measurement to another measurement

10.3.7.78 UE internal measurement event results

This IE contains the measurement event results that are reported to UTRAN for UE internal measurements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE internal event identity	MP		UE internal event identity 10.3.7.75	
CHOICE mode	MP			
>FDD				
>Primary CPICH info	CV - clause 1		Primary CPICH info 10.3.6.60	
>TDD				(no data)

Condition	Explanation
Clause 1	This IE is mandatory if "UE internal event identity" is set to "6f" or "6g", otherwise the IE is not needed

10.3.7.79 UE internal measurement quantity

The quantity the UE shall measure in case of UE internal measurement.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode	MP			
>FDD				
>>Measurement quantity	MP		Enumerated(UE Transmitted Power, UTRA Carrier RSSI, UE Rx-Tx time difference)	
>TDD				
>>Measurement quantity	MP		Enumerated(UE Transmitted Power, UTRA Carrier RSSI)	
Filter coefficient	MP		Filter coefficient 10.3.7.9	

10.3.7.80 UE internal measurement reporting criteria

The triggering of the event-triggered reporting for a UE internal measurement. All events concerning UE internal measurements are labelled 6x where x is a, b, c.... In TDD, the events 6a - 6d are measured and reported on timeslot basis.

Event 6a: The UE Transmitted Power becomes larger than an absolute threshold

Event 6b: The UE Transmitted Power becomes less than an absolute threshold

Event 6c: The UE Transmitted Power reaches its minimum value

Event 6d: The UE Transmitted Power reaches its maximum value

Event 6e: The UE RSSI reaches the UEs dynamic receiver range

Event 6f: The UE Rx-Tx time difference for a RL included in the active set becomes larger than an absolute threshold

Event 6g: The UE Rx-Tx time difference for a RL included in the active set becomes less than an absolute threshold

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Parameters sent for each UE internal measurement event	OP	1 to <maxMeas Event>		
> UE internal event identity	MP		UE internal event identity 10.3.7.75	
>Time-to-trigger	MP		Integer(0, 10, 20, 40, 60, 80, 100, 120, 160, 200, 240, 320, 640, 1280, 2560, 5000)	Time in ms. Indicates the period of time between the timing of event detection and the timing of sending Measurement Report.
>UE Transmitted power Tx power threshold	CV - clause 1		Integer(-50..33)	Power in dBm. In event 6a, 6b.
>UE Rx-Tx time difference threshold	CV - clause 2		Integer(768..1280)	Time difference in chip. In event 6f, 6g.

Condition	Explanation
Clause 1	The IE is mandatory if "UE internal event identity" is set to "6a" or "6b", otherwise the IE is not needed
Clause 2	The IE is mandatory if "UE internal event identity" is set to "6f" or "6g", otherwise the IE is not needed

10.3.7.81 UE internal measurement system information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE internal measurement identity	MD		Measurement identity 10.3.7.48	The UE internal measurement identity has default value 5.
UE internal measurement quantity	MP		UE internal measurement quantity 10.3.7.79	

10.3.7.82 UE Internal reporting quantity

For all boolean types TRUE means inclusion in the report is requested.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE Transmitted Power	MP		Boolean	
CHOICE mode	MP			
>FDD				
>>UE Rx-Tx time difference	MP		Boolean	
>TDD				
>>Applied TA	MP		Boolean	

10.3.7.83 UE Rx-Tx time difference type 1

The difference in time between the UE uplink DPCCH/DPDCH frame transmission and the first detected path (in time), of the downlink DPCH frame from the measured radio link. This measurement is for FDD only.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE Rx-Tx time difference type 1	MP		Integer(768..1280)	In chips.

10.3.7.84 UE Rx-Tx time difference type 2

The difference in time between the UE uplink DPCCH/DPDCH frame transmission and the first detected path (in time), of the downlink DPCH frame from the measured radio link.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE Rx-Tx time difference type 2	MP		Real(768.0..1279.9375 by step of 0.0625)	Resolution of 1/16 of a chip.

10.3.7.85 UE Transmitted Power info

Information Element/Group name	Need	Multi	IE type and reference	Semantics description
UE Transmitted Power	MP		Integer (-50... 33)	In dBm

10.3.7.86 UP Cipher GPS Data Indicator

The UP Cipher GPS Data Indicator IE contains information for the ciphering of SIB types 15.1, 15.2 and 15.3.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Ciphering parameters	OP			
>Ciphering Key Flag	MP		Bitstring(1)	See note 1
>Ciphering Serial Number	MP		Integer(0..65535)	The serial number used in the DES ciphering algorithm

NOTE 1: The UE always receives two (2) cipher keys during the location update procedure. One of the keys is time-stamped to be current one and the other is time-stamped to be the next one. Thus, the UE always has two cipher keys in memory. The Cipher Key Change Indicator in this broadcast message instructs the UE whether to use current or next cipher key for deciphering the received broadcast message. The UE shall interpret this IE as follows:

- **Ciphering Key Flag**(previous message) = **Ciphering Key Flag**(this message) => Deciphering Key not changed
- **Ciphering Key Flag**(previous message) <> **Ciphering Key Flag**(this message) => Deciphering Key changed

10.3.7.87 UP Error

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Error reason	MP		Enumerated(There were not enough cells to be received when performing mobile based OTDOA-IPDL. There were not enough GPS satellites to be received, when performing UE-based GPS location. Location calculation assistance data missing. Requested method not supported. Undefined error. Location request denied by the user. Location request not processed by the user and timeout.	
Additional Assistance Data	OP		structure and encoding as for the GPS Assistance Data IE in GSM 09.31 excluding the IEI and length octets	This field is optional. Its presence indicates that the target UE will retain assistance data already sent by the SRNC. The SRNC may send further assistance data for any new location attempt but need not resend previous assistance data. The field may contain the following: GPS Assistance Data necessary additional GPS assistance data

10.3.7.88 UP GPS acquisition assistance

The Acquisition Assistance field of the GPS Assistance Data Information Element contains parameters that enable fast acquisition of the GPS signals in network-based GPS positioning. Essentially, these parameters describe the range and derivatives from respective satellites to the Reference Location at the Reference Time.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
CHOICE Reference Time				
>UTRAN reference time				GPS Time of Week counted in microseconds, given as GPS TOW in milliseconds and GPS TOW remainder in microseconds, UTRAN reference time = 1000 * GPS TOW msec + GPS TOW rem usec
>>GPS TOW msec	MP		Integer(0..6.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit)
>>GPS TOW rem usec	MP		Integer(0..999)	GPS Time of Week in microseconds MOD 1000.
>>SFN	MP		Integer(0..4095)	
>GPS reference time only				
>>GPS TOW	MP		Integer(0..6.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).
Satellite information	MP	1 to <maxSat>		
>SatID	MP		Enumerated(0..63)	Identifies the satellites
>Doppler (0 th order term)	MP		Integer(-2048..2047)	Hz, scaling factor 2.5
>Extra Doppler	OP			
>>Doppler (1 st order term)	MP		Integer(-42..21)	Scaling factor 1/42
>>Doppler Uncertainty	MP		Real(12.5,25,50,100,200)	Hz
>Code Phase	MP		Integer(0..1022)	Chips, specifies the centre of the search window
>Integer Code Phase	MP		Integer(0..1023)	1023 chip segments
>GPS Bit number	MP		Integer(0..3)	Specifies GPS bit number (20 1023 chip segments)
>Code Phase Search Window	MP		Integer(1023,1,2,3,4,6,8,12,16,24,32,48,64,96,128,192)	Specifies the width of the search window.
>Azimuth and Elevation	OP			
>>Azimuth	MP		Integer(0..31)	Degrees, scale factor 11.25
>>Elevation	MP		Integer(0..7)	Degrees, scale factor 11.25

CHOICE Reference time	Condition under which the given reference time is chosen
UTRAN reference time	The reference time is relating GPS time to UTRAN time (SFN)
GPS reference time only	The time gives the time for which the location estimate is valid

10.3.7.89 UP GPS almanac

These fields specify the coarse, long-term model of the satellite positions and clocks. With one exception (δ_i), these parameters are a subset of the ephemeris and clock correction parameters in the Navigation Model, although with reduced resolution and accuracy. The almanac model is useful for receiver tasks that require coarse accuracy, such as determining satellite visibility. The model is valid for up to one year, typically. Since it is a long-term model, the field should be provided for all satellites in the GPS constellation.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
WN _a	MP		Bit string(8)	
Satellite information	MP	1 to <maxSat>		
>SatID	MP		Enumerated(0..63)	Satellite ID
>e	MP		Bit string(16)	
>t _{oa}	MP		Bit string(8)	
>δi	MP		Bit string(16)	
>OMEGADOT	MP		Bit string(16)	
>SV Health	MP		Bit string(8)	
>A ¹⁷²	MP		Bit string(24)	
>OMEGA ₀	MP		Bit string(24)	
>M ₀	MP		Bit string(24)	
>ω	MP		Bit string(24)	
>af ₀	MP		Bit string(11)	
>af ₁	MP		Bit string(11)	

10.3.7.90 UP GPS assistance data

The GPS Assistance Data element contains a single GPS assistance message that supports both UE-assisted and UE-based GPS methods.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UP GPS reference time	OP		UP GPS reference time 10.3.7.96	
UP GPS reference location	OP		Ellipsoid point with altitude defined in 23.032	The Reference Location field contains a 3-D location without uncertainty specified as per 23.032. The purpose of this field is to provide the UE with a priori knowledge of its location in order to improve GPS receiver performance.
UP GPS DGPS corrections	OP		UP GPS DGPS corrections 10.3.7.91	
UP GPS navigation model	OP		UP GPS navigation model 10.3.7.94	
UP GPS ionospheric model	OP		UP GPS ionospheric model 10.3.7.92	
UP GPS UTC model	OP		UP GPS UTC model 10.3.7.97	
UP GPS almanac	OP		UP GPS almanac 10.3.7.89	
UP GPS acquisition assistance	OP		UP GPS acquisition assistance 10.3.7.88	
UP GPS real-time integrity	OP		UP GPS real-time integrity 10.3.7.95	

10.3.7.91 UP GPS DGPS corrections

These fields specify the DGPS corrections to be used by the UE.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
GPS TOW	MP		Integer(0..60 4799)	Seconds. This field indicates the baseline time for which the corrections are valid.
Status/Health	MP		Enumerated(UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.2, UDRE scale 0.1, no data, invalid data)	This field indicates the status of the differential corrections
Satellite information	MP	1 to <maxSat>		
>SatID	MP		Enumerated(0..63)	Satellite ID
>IODE	MP		Bit string(8)	This IE is the sequence number for the ephemeris for the particular satellite. The UE can use this IE to determine if new ephemeris is used for calculating the corrections that are provided in the broadcast message. This eight-bit IE is incremented for each new set of ephemeris for the satellite and may occupy the numerical range of [0, 239] during normal operations. See [13] for details
>UDRE	MP		Enumerated(UDRE ≤ 1.0 m, 1.0m < UDRE ≤ 4.0m, 4.0m < UDRE ≤ 8.0m, 8.0m < UDRE)	User Differential Range Error. This field provides an estimate of the uncertainty (1-σ) in the corrections for the particular satellite. The value in this field shall be multiplied by the UDRE Scale Factor in the common Corrections Status/Health field to determine the final UDRE estimate for the particular satellite. See [13] for details
>PRC	MP		Integer(-2047..2047)	Scaling factor 0.32 meters See (different from [13])
>RRC	MP		Integer(-127.. 127)	Scaling factor 0.032 meters/sec (different from [13])
>Delta PRC2	MP		Integer(-127..127)	Meters. The difference in the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris two issues ago IODE -2.
>Delta RRC2	MP		Integer(-7..7)	Scaling factor 0.032 meters/sec. The difference in the rate of the change of the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris two issues ago IODE -2.

>Delta PRC3	MP		Integer(-127..127)	Meters. The difference in the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris three issues ago IODE -3.
>Delta RRC3	MP		Integer(-7..7)	Scaling factor 0.032 meters/sec. The difference in the rate of the change of the pseudorange correction between the satellite's ephemeris identified by IODE and the previous ephemeris three issues ago IODE -3.

10.3.7.92 UP GPS ionospheric model

The Ionospheric Model contains fields needed to model the propagation delays of the GPS signals through the ionosphere. Proper use of these fields allows a single-frequency GPS receiver to remove approximately 50% of the ionospheric delay from the range measurements. The Ionospheric Model is valid for the entire constellation and changes slowly relative to the Navigation Model.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
α_0	MP		Bit string(8)	
α_1	MP		Bit string(8)	
α_2	MP		Bit string(8)	
α_3	MP		Bit string(8)	
β_0	MP		Bit string(8)	
β_1	MP		Bit string(8)	
β_2	MP		Bit string(8)	
β_3	MP		Bit string(8)	

10.3.7.93 UP GPS measurement

The purpose of the GPS Measurement Information element is to provide GPS measurement information from the UE to the SRNC. This information includes the measurements of code phase and Doppler, which enables the network-based GPS method where the position is computed in the SRNC.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Reference SFN	OP		Integer(0..4095)	The SFN for which the location is valid
GPS TOW msec	MP		Integer(0..6.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit). This time is the GPS TOW measured by the UE. If the Reference SFN field is present it is the ms flank closest to the beginning of that frame. GPS Time of Week in microseconds = 1000 * GPS TOW msec + GPS TOW rem usec
GPS TOW rem usec	CV-capability and request		Integer(0..999)	GPS Time of Week in microseconds MOD 1000.
Measurement Parameters	MP	1 to <maxSat>		
>Satellite ID	MP		Enumerated(0..63)	
>C/N ₀	MP		Integer(0..63)	the estimate of the carrier-to-noise ratio of the received signal from the particular satellite used in the measurement. It is given in whole dBs. Typical levels observed by UE-based GPS units will be in the range of 20 – 50 dB.
>Doppler	MP		Integer(-32768..32768)	Hz, scale factor 0.2.
>Whole GPS Chips	MP		Integer(0..1023)	Unit in GPS chips
>Fractional GPS Chips	MP		Integer(0..(2 ¹⁰ -1))	Scale factor 2 ⁻¹⁰
>Multipath Indicator	MP		Enumerated(NM, low, medium, high)	See note 1
>Pseudorange RMS Error	MP		Enumerated(range index 0..range index 63)	See note 2

Condition	Explanation
<i>Capability and request</i>	This field is included only if the UE has this capability <i>and</i> if it was requested in the UP reporting quantity

NOTE 1: The following table gives the mapping of the multipath indicator field.

Value	Multipath Indication
NM	Not measured
Low	MP error < 5m
Medium	5m < MP error < 43m
High	MP error > 43m

NOTE 2: The following table gives the bitmapping of the Pseudorange RMS Error field.

Range Index	Mantissa	Exponent	Floating-Point value, x_i	Pseudorange value, P
0	000	000	0.5	$P < 0.5$
1	001	000	0.5625	$0.5 \leq P < 0.5625$
I	X	Y	$0.5 * (1 + x/8) * 2^Y$	$x_{i-1} \leq P < x_i$
62	110	111	112	$104 \leq P < 112$
63	111	111	--	$112 \leq P$

10.3.7.94 UP GPS navigation model

This IE contain information required to manage the transfer of precise navigation data to the GPS-capable UE. This information includes control bit fields as well as satellite ephemeris and clock corrections.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
N_SAT	MP		Integer(1..16)	The number of satellites included in this IE
Satellite information	MP	1 to <maxSat >		
>SatID	MP		Enumerated(0..63)	Satellite ID
>Satellite Status	MP		Enumerated(NS_NN, ES_SN, ES_NN, REVD)	See note 1
>C/A or P on L2	MP		Bit string(2)	Standard formats as defined in [12]
>URA Index	MP		Bit string(4)	
>SV Health	MP		Bit string(6)	
>IODC	MP		Bit string(10 ⁽¹⁾)	
>L2 P Data Flag	MP		Bit string(1)	
>SF 1 Reserved	MP		Bit string(87)	
>T _{GD}	MP		Bit string(8)	
>t _{oc}	MP		Bit string(16 ⁽¹⁾)	
>af ₂	MP		Bit string(8)	
>af ₁	MP		Bit string(16)	
>af ₀	MP		Bit string(22)	
>C _{rs}	MP		Bit string(16)	
>Δn	MP		Bit string(16)	
>M ₀	MP		Bit string(32)	
>C _{uc}	MP		Bit string(16)	
>e	MP		Bit string(32 ⁽¹⁾)	
>C _{us}	MP		Bit string(16)	
>(A) ^{1/2}	MP		Bit string(32 ⁽¹⁾)	
>t _{oe}	MP		Bit string(16 ⁽¹⁾)	
>Fit Interval Flag	MP		Bit string(1)	
>AODO	MP		Bit string(5)	
>C _{ic}	MP		Bit string(16)	
>OMEGA ₀	MP		Bit string(32)	
>C _{is}	MP		Bit string(16)	
>i ₀	MP		Bit string(32)	
>C _{rc}	MP		Bit string(16)	
>ω	MP		Bit string(32)	
>OMEGA _{dot}	MP		Bit string(24)	
>Idot	MP		Bit string(14)	

NOTE 1: The UE shall interpret enumerated symbols as follows.

Symbol	Interpretation
NS_NN	New satellite, new Navigation Model
ES_SN	Existing satellite, same Navigation Model
ES_NN	Existing satellite, new Navigation Model
REVD	Reserved

Condition	Explanation
<i>status</i>	Group Included unless status is ES_SN

10.3.7.95 UP GPS real-time integrity

Contains parameters that describe the real-time status of the GPS constellation. Primarily intended for non-differential applications, the real-time integrity of the satellite constellation is of importance as there is no differential correction data by which the mobile can determine the soundness of each satellite signal. The Real-Time GPS Satellite Integrity data communicates the health of the constellation to the mobile via a list of bad satellites. The satellites identified in this IE should not be used for position fixes at the moment.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Satellite information	OP	1 to <maxSat >		N_BAD_SAT=the number of bad satellites included in this IE
>BadSatID	MP		Enumerated(0..63)	Satellite ID

10.3.7.96 UP GPS reference time

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
GPS Week	MP		Integer(0..1023)	
GPS TOW msec	MP		Integer(0..6.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit). GPS Time of Week in microseconds = 1000 * GPS TOW msec + GPS TOW rem usec
GPS TOW rem usec	MP		Integer(0..999)	GPS Time of Week in microseconds MOD 1000.
SFN	MP		Integer(0..4095)	The SFN which the GPS TOW time stamps
GPS TOW Assist	OP	1 to <maxSat >		Fields to help the UE with time-recovery (needed to predict satellite signal)
>SatID	MP		Enumerated(0..63)	Identifies the satellite for which the corrections are applicable
>TLM Message	MP		Bit string(14)	A 14-bit value representing the Telemetry Message (TLM) being broadcast by the GPS satellite identified by the particular SatID, with the MSB occurring first in the satellite transmission.
>Anti-Spoof	MP		Boolean	The Anti-Spoof and Alert flags that are being broadcast by the GPS satellite identified by SatID.
>Alert	MP		Boolean	
>TLM Reserved	MP		Bit string(2)	Two reserved bits in the TLM Word being broadcast by the GPS satellite identified by SatID, with the MSB occurring first in the satellite transmission.

10.3.7.97 UP GPS UTC model

The UTC Model field contains a set of parameters needed to relate GPS time to Universal Time Coordinate (UTC).

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
A ₁	MP		Bit string(24)	
A ₀	MP		Bit string(32)	
t _{tot}	MP		Bit string(8)	
Δt _{LS}	MP		Bit string(8)	
WN _t	MP		Bit string(8)	
WN _{LSF}	MP		Bit string(8)	
DN	MP		Bit string(8)	
Δt _{LSF}	MP		Bit string(8)	

10.3.7.98 UP IPDL parameters

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
IP spacing	MP		Integer(5,7,10,15,20,30,40,50)	The IPs are repeated every IP spacing frame.
IP length	MP		Integer(5,10)	The length in symbols of the idle periods
IP offset	MP		Integer(0..9)	Relates the BFN and SFN, should be same as T _{cell} defined in 25.402
Seed	MP		Integer(0..63)	Seed used to start the random number generator
Burst mode parameters	OP			
>Burst Start	MP		Integer(0..15)	The frame number where the 1 st Idle Period Burst occurs within an SFN cycle. Scaling factor 256.
>Burst Length	MP		Integer(10..25)	Number of Idle Periods in a 'burst' of Idle Periods
>Burst freq	MP		Integer(1..16)	Number of 10ms frames between consecutive Idle Period bursts. Scaling factor 256.

The function IP_{position}(x) described below yields the position of the xth Idle Period relative to a) the start of the SFN cycle when continuous mode or b) the start of a burst when in burst mode. The operator "%" denotes the modulo operator. Regardless of mode of operation, the Idle Period pattern is reset at the start of every SFN cycle. Continuous mode can be considered as a specific case of the burst mode with just one burst spanning the whole SFN cycle. Note also that x will be reset to x=1 for the first idle period in a SFN cycle for both continuous and burst modes and will also, in the case of burst mode, be reset for the first Idle Period in every burst.

Max_{dev}=150-IP length

rand(x)=(106.rand(x-1) + 1283)mod6075,

rand(0)=seed

IP_{position}(x) = x*IP_{spacing}*150 + rand(xmod64)modMax_{dev}+IP_{offset}

10.3.7.99 UP measured results

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UP Multiple Sets	OP		UP Multiple Sets 10.3.7.102	
UP reference cell Identity	OP		Primary CPICH Info 10.3.6.60	
UP OTDOA measurement	OP		UP OTDOA measurement 10.3.7.105	
UP Position	OP		UP Position 10.3.7.109	
UP GPS measurement	OP		UP GPS measurement 10.3.7.93	
UP error	OP		UP error 10.3.7.87	Included if UP error occurred

10.3.7.100 UP measurement

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UP reporting quantity	MP		UP reporting quantity 10.3.7.111	
CHOICE reporting criteria	MP			
>UP reporting criteria			UP reporting criteria 10.3.7.110	
>Periodical reporting criteria			Periodical reporting criteria 10.3.7.53	
>No reporting				(no data) Chosen when this measurement only is used as additional measurement to another measurement
UP OTDOA assistance data	OP		UP OTDOA assistance data 10.3.7.103	
UP GPS assistance data	OP		UP GPS assistance data 10.3.7.90	

10.3.7.101 UP measurement event results

This IE contains the measurement event results that are reported to UTRAN for UP measurements.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
CHOICE Event ID	MP			
>7a				
>>UP Position	MP		UP Position 10.3.7.109	
>7b				
>> UP OTDOA measurement	MP		UP OTDOA measureme nt 10.3.7.105	
>7c				
>> UP GPS measurement	MP		UP GPS measureme nt 10.3.7.93	

10.3.7.102 UP multiple sets

This element indicates how many OTDOA Measurement Information sets or GPS Measurement Information sets, and Reference cells are included in this element. This element is optional. If this element is absent, a single measurement set is included.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Number of OTDOA-IPDL/GPS Measurement Information Sets	MP		Integer(2..3)	
Number of Reference Cells	MP		Integer(1..3)	
Reference Cell relation to Measurement Elements	OP		Enumerated(First reference cell is related to first and second OTDOA-IPDL/GPS Measurement Information Sets, and second reference cell is related to third OTDOA-IPDL/GPS Measurement Information Sets. First reference cell is related to first and third OTDOA-IPDL/GPS Measurement Information Sets, and second reference cell is related to second OTDOA-IPDL/GPS Measurement Information Sets. First reference cell is related to first OTDOA-IPDL/GPS Measurement Information Sets, and second reference cell is related to second and third OTDOA/GPS Measurement Information Sets.)	This field indicates how the reference cells listed in this element relate to measurement sets later in this component. This field is conditional and included only if Number of OTDOA-IPDL/GPS Measurement Information Sets is '3' and Number of Reference cells is '2'. If this field is not included, the relation between reference cell and Number of OTDOA-IPDL/GPS Measurement Information Sets is as follows: If there are three sets and three reference cells -> First reference cell relates to first set, second reference cell relates to second set, and third reference cell relates to third set. If there are two sets and two reference cells -> First reference cell relates to first set, and second reference cell relates to second set. If there is only one reference cell and 1-3 sets -> this reference cell relates to all sets.

10.3.7.103 UP OTDOA assistance data

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
UP OTDOA reference cell for assistance data	OP		UP OTDOA reference cell for assistance data 10.3.7.108	
UP OTDOA measurement assistance data	OP	1 to <maxCellMeasurements>	UP OTDOA measurement assistance data 10.3.7.106	
UP IPDL parameters	OP		UP IPDL parameters 10.3.7.98	If this element is not included there are no idle periods present

10.3.7.104 UP OTDOA assistance for SIB

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Ciphering parameters	OP			Determines if DGPS correction fields are ciphered
>Ciphering Key Flag	MP		Bitstring(1)	See note 1
>Ciphering Serial Number	MP		Integer(0..65535)	The serial number used in the DES ciphering algorithm
Search Window Size	MP		Integer(10, 20, 30, 40, 50, 60, 70, infinity)	Specifies the maximum size of the search window in chips. Infinity means more
Reference Cell Position	MP		Ellipsoid point or Ellipsoid point with altitude as defined in 23.032	The position of the antenna which defines the serving cell. Used for the UE based method.
UP IPDL parameters	OP		UP IPDL parameters 10.3.7.98	If this element is not included there are no idle periods present
Cells to measure on	MP	1 to <maxCellMeas>		
>SFN-SFN drift	OP		Real(0,+0.33,+0.66,+1,+1.33,+1.66,+2,+2.5,+3,+4,+5,+7,+9,+11,+13,+15,-0.33,-0.66,-1,-1.33,-1.66,-2,-2.5,-3,-4,-5,-7,-9,-11,-13,-15)	The SFN-SFN drift value indicate the relative time drift in meters per second. Positive and negative values can be indicated as well as no drift value.
>Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
>Frequency info	OP		Frequency info 10.3.6.36	Default the same. Included if different
>SFN-SFN observed time difference	MP		SFN-SFN observed time difference 10.3.7.63	Gives the relative timing compared to the reference cell. UE shall use CHOICE "type 1" in IE "SFN-SFN observed time difference".
>Fine SFN-SFN	MP		Real(0,0.25,0.5,0.75)	Gives finer resolution for UE-Based method In chips
>Cell Position	MD			Default = Same as previous cell
>>Relative North	MP		Integer(-32767..32767)	Seconds, scale factor 0.03. Relative position compared to reference cell.
>>Relative East	MP		Integer(-32767..32767)	Seconds, scale factor 0.03. Relative position compared to ref. cell.
>>Relative Altitude	MP		Integer(-4095..4095)	Relative altitude in meters compared to reference cell.

NOTE 1: The UE always receives two (2) cipher keys during the location update procedure. One of the keys is time-stamped to be current one and the other is time-stamped to be the next one. Thus, the UE always has two cipher keys in memory. The Cipher Key Change Indicator in this broadcast message instructs the UE whether to use current or next cipher key for deciphering the received broadcast message. The UE shall interpret this IE as follows:

- **Ciphering Key Flag**(previous message) = **Ciphering Key Flag**(this message) => Deciphering Key not changed
- **Ciphering Key Flag**(previous message) <> **Ciphering Key Flag**(this message) => Deciphering Key changed

10.3.7.105 UP OTDOA measurement

The purpose of the OTDOA Measurement Information element is to provide OTDOA measurements of signals sent from the reference and neighbour cells.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
SFN	MP		Integer(0..4095)	SFN during which the last measurement was performed
UE Rx-Tx time difference type 2	MP		UE Rx-Tx time difference type 2 10.3.7.84	
UP OTDOA quality type	MP		UP OTDOA quality type 10.3.7.107	
Neighbours	MP	0..maxCell Meas		Number of neighbours included in this IE
>Neighbour Identity	OP		Primary CPICH info 10.3.6.60	If this field is left out it the identity is the same as in the first set of multiple sets.
>UP OTDOA quality type	MP		UP OTDOA quality type 10.3.7.107	Quality of the OTDOA from the neighbour cell.
>SFN-SFN observed time difference	MP		SFN-SFN observed time difference 10.3.7.63	Gives the timing relative to the reference cell. Only type 2 is allowed. Type 2 means that only the slot timing is accounted for

10.3.7.106 UP OTDOA measurement assistance data

This IE gives approximate cell timing in order to decrease the search window.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
Frequency info	OP		Frequency info 10.3.6.36	Default the same. Included if different
SFN-SFN observed time difference	MP		SFN-SFN observed time difference 10.3.7.63	Gives the relative timing compared to the reference cell. UE shall use CHOICE "type 1" in IE "SFN-SFN observed time difference".
Fine SFN-SFN	OP		Real(0,0.25, 0.5,0.75)	Gives finer resolution for UE-Based
Search Window Size	MP		Integer(10, 20, 30, 40, 50, 60,70, infinity)	Specifies the maximum size of the search window in chips. Infinity means more
Relative North	OP		Integer(-20000..20000)	Seconds, scale factor 0.03. Relative position compared to ref. cell.
Relative East	OP		Integer(-20000..20000)	Seconds, scale factor 0.03. Relative position compared to ref. cell.
Relative Altitude	OP		Integer(-4000..4000)	Relative altitude in meters compared to ref. cell.

10.3.7.107 UP OTDOA quality type

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
CHOICE Quality type	MP			
>STD_10				
>>Reference Quality 10	MP		Integer(10..320 by step of 10)	Std of TOA measurements from the cell
>STD_50				
>>Reference Quality 50	MP		Integer(50..1600 by step of 50)	Std of TOA measurements from the cell
>CPICH Ec/N0				
>>CPICH Ec/N0	MP		Enumerated(<-24, -24 dB ≤ CPICH Ec/No < -23 dB,.. -1 dB ≤ CPICH Ec/No < -0 dB, >=0 dB)	CPICH Ec/N0 for the measurement
>DEFAULT_QUALITY				
>>Reference Quality	MP		Enumerated(0-19 meters, 20-39 meters, 40-79 meters, 80-159 meters, 160-319 meters, 320-639 meters, 640-1319 meters over 1320 meters)	Estimated error in meters.

CHOICE Quality type	Condition under which the given quality type is chosen
STD_10	Chosen when the quality type is standard deviation with a step-size of 10 m
STD_50	Chosen when the quality type is standard deviation with a step-size of 50 m
CPICH Ec/N0	Chosen when the quality type is CPICH Ec/N0
Default	Chosen if the quality type field is not included.

10.3.7.108 UP OTDOA reference cell for assistance data

This IE defines the cell used for time references in all OTDOA measurements.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Primary CPICH info	MP		Primary CPICH info 10.3.6.60	
Frequency info	OP		Frequency info 10.3.6.36	Default the same. Included if different
Cell Position	OP		Ellipsoid point or Ellipsoid point with altitude as defined in 23.032	The position of the antenna which defines the cell. Can be used for the UE based method.

10.3.7.109 UP position

The purpose of Location Information element is to provide the location estimate from the UE to the network, if the UE is capable of determining its own position.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Reference SFN	MP		Integer(0..4095)	The SFN for which the location is valid
GPS TOW msec	CV-Capability and request		Integer(0..6.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit). This time-stamps the beginning of the frame defined in Reference SFN GPS Time of Week in microseconds = 1000 * GPS TOW msec + GPS TOW rem usec
GPS TOW rem usec	CV-Capability and request		Integer(0..999)	GPS Time of Week in microseconds MOD 1000.
Position estimate	MP		23.032, allowed types are Ellipsoid Point; Ellipsoid point with uncertainty circle; Ellipsoid point with uncertainty ellipse; Ellipsoid point with altitude; Ellipsoid point with altitude and uncertainty ellipse.	

Condition	Explanation
<i>Capability and request</i>	This field is included only if the UE has this capability <i>and</i> if it was requested in the UP reporting quantity <i>and</i> if the method was UE-based GPS

10.3.7.110 UP reporting criteria

The triggering of the event-triggered reporting for an UP measurement. There are three types of events. The first, 7a, is for UE-based methods and is triggered when the position has changed more than a threshold. The second one, 7b, is primarily for UE assisted methods, but can be used also for UE based. It is triggered when the SFN-SFN measurement has changed more than a certain threshold. The third one, 7c, is triggered when the GPS time and the SFN time has drifted apart more than a certain threshold.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Parameters required for each event	OP	1 to <maxMeas Event>		
>Amount of reporting	MP		Integer(1, 2, 4, 8, 16, 32, 64,infinite)	
>Report first fix	MP		Boolean	If true the UE reports the position once the measurement control is received, and then each time an event is triggered.
>Measurement interval	MP		Integer(5,15, 60,300,900,1 800,3600,72 00)	Indicates how often the UE should make the measurement In seconds
>CHOICE Event ID				
>>7a				
>>>Threshold Position Change	MP		Integer(10,2 0,30,40,50,1 00,200,300,5 00,1000,200 0,5000,1000 0,20000,500 00,100000)	Indicated how much the position should change compared to last reported position fix in order to trigger the event.
>>7b				
>>>Threshold SFN-SFN change	MP		Real(0.25,0. 5,1,2,3,4,5,1 0,20,50,100, 200,500,100 0,2000,5000)	Chips. Indicates how much the SFN-SFN measurement of ANY measured cell is allowed to change before the event is triggered.
>>7c				
>>>Threshold SFN-GPS TOW	MP		Integer(1,2,3 ,5,10,20,50,1 00)	Time in ms. When the GPS TOW and SFN timer has drifted apart more than the specified value the event is triggered)

10.3.7.111 UP reporting quantity

The purpose of the element is to express the allowed/required location method(s), and to provide information required QoS.

Information Element/Group name	Need	Multi	Type and Reference	Semantics description
Method Type	MP		Enumerated(UE assisted, UE based, UE based is preferred but UE assisted is allowed, UE assisted is preferred but UE based is allowed)	
Positioning Methods	MP		Enumerated(OTDOA, GPS OTDOA or GPS)	Indicates which location method or methods should be used. The third option means that both can be reported. OTDOA includes IPDL if idle periods are present.
Response Time	MP		Integer(1,2,4, 8, 16, 32, 64, 128)	Indicates the desired response time in seconds
Accuracy	CV		Bit string(7)	Mandatory in all cases except when Method Type is UE assisted, then it is optional. 23.032
GPS timing of Cell wanted	MP		Boolean	If true the SRNC wants the UE to report the SFN-GPS timing of the reference cell. This is however optional in the UE.
Multiple Sets	MP		Boolean	This field indicates whether UE is requested to send multiple <i>OTDOA/GPS Measurement Information Sets</i> . The maximum number of measurement sets is three. This field is mandatory. UE is expected to include the current measurement set.
Environment Characterization	OP		Enumerated(possibly heavy multipath and NLOS conditions, no or light multipath and usually LOS conditions, not defined or mixed environment)	The first category correspond to e.g. Urban or Bad Urban channels. The second category corresponds to Rural or Suburban channels

10.3.8 Other Information elements

10.3.8.1 BCCH modification info

Indicates modification of the System Information on BCCH.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MIB Value tag	MP		MIB Value tag 10.3.8.9	
BCCH modification time	OP		Integer (0..4088 in step of 8)	All SFN values in which MIB may be mapped are allowed.

10.3.8.2 BSIC

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Base transceiver Station Identity Code (BSIC)	MP			[TS 23.003]
>Network Colour Code (NCC)	MP		bit string(3)	
>Base Station Colour Code (BCC)	MP		bit string(3)	

10.3.8.3 CBS DRX Level 1 information

This information element contains the CBS discontinuous reception information to be broadcast for CBS DRX Level 1 calculations in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Period of CTCH allocation (N)	MP		Integer (1..256)	$M_{TTI} \leq N \leq 4096 - K$, N multiple of M_{TTI}
CBS frame offset (K)	MP		Integer (0..255)	$0 \leq K \leq N-1$, K multiple of M_{TTI}

10.3.8.4 Cell Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cell Value tag	MP		Integer (1..4)	

10.3.8.5 Inter-RAT change failure

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT change failure cause	MD		Enumerated(Configuration unacceptable, physical channel failure, protocol error)	Default value is "unspecified". At least 3 spare values, criticality = default, are required
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	

Condition	Explanation
<i>ProtErr</i>	If the IE "Inter-RAT handover failure cause" has the value "Protocol error"

10.3.8.6 Inter-RAT handover failure

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Inter-RAT handover failure cause	MD		Enumerated (Configuration unacceptable, physical channel failure, protocol error, inter-RAT protocol error, unspecified)	Default value is "unspecified". At least one spare value needed
Protocol error information	CV-ProtErr		Protocol error information 10.3.8.12	
Inter-RAT message	OP		Inter-RAT message 10.3.8.8	

Condition	Explanation
<i>ProtErr</i>	If the IE "Inter-RAT handover failure cause" has the value "Protocol error"

10.3.8.7 Inter-RAT UE radio access capability

This Information Element contains the inter-RAT UE radio access capability which is structured and coded according to the specification used for the corresponding system type.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>system</i>	MP			
>GSM				
>> Mobile Station Classmark 2	MP		Octet string (5)	Defined in [5]
>>> Mobile Station Classmark 3	MP		Octet string	Defined in [5]
>cdma2000				
>>cdma2000Message	MP	1.to.<maxlnterSysMessages>		
>>>MSG_TYPE(s)	MP		Bitstring (8)	Formatted and coded according to cdma2000 specifications
>>>>cdma2000Messagepayload(s)	MP		Bitstring (1..512)	Formatted and coded according to cdma2000 specifications

10.3.8.8 Inter-RAT message

This Information Element contains one or several messages that are structured and coded according to the specification used for the system type indicated by the first parameter.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
System type	MP		Enumerated (GSM except PCS 1900, PCS 1900, cdma2000)	This IE indicates in particular which specification to apply to decode the transported messages
CHOICE <i>system</i>	MP			
>GSM				
>>Message(s)	MP	1.to.<maxlnterSysMessages>	Bitstring (1..512)	Formatted and coded according to GSM specifications
>cdma2000				
>>cdma2000Message	MP	1.to.<maxlnterSysMessages>		
>>>MSG_TYPE(s)	MP		Bitstring (8)	Formatted and coded according to cdma2000 specifications
>>>cdma2000Messagepayload(s)	MP		Bitstring (1..512)	Formatted and coded according to cdma2000 specifications

Condition	Explanation
<i>System</i>	The 'GSM' choice shall be applied when the IE 'System type' is 'GSM except PCS 1900' or 'PCS 1900', and the 'cdma2000' choice shall be applied when the IE 'system type' is 'cdma2000'.

10.3.8.9 MIB Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MIB Value tag	MP		Integer (1..8)	

10.3.8.10 PLMN Value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN Value tag	MP		Integer (1..256)	

10.3.8.11 Predefined configuration identity and value tag

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5	
Predefined configuration value tag	MP		Predefined configuration value tag 10.3.4.6	

10.3.8.12 Protocol error information

This information element contains diagnostics information returned by the receiver of a message that was not completely understood.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE diagnostics type	MP			At least one spare choice is needed.
> Protocol error cause			Protocol error cause 10.3.3.26	

10.3.8.13 References to other system information blocks

Information element/Group name	Need	Multi	Type and reference	Semantics description
References to other system information blocks	MP	1 to <maxSIB>		System information blocks for which multiple occurrences are used, may appear more than once in this list
>Scheduling information	MP		Scheduling information, 10.3.8.16	
>SIB type SIBs only	MP		SIB Type SIBs only, 10.3.8.22	

10.3.8.14 References to other system information blocks and scheduling blocks

Information element/Group name	Need	Multi	Type and reference	Semantics description
References to other system information blocks	MP	1 to <maxSIB>		System information blocks for which multiple occurrences are used, may appear more than once in this list
>Scheduling information	MP		Scheduling information, 10.3.8.16	
>SIB type	MP		SIB Type, 10.3.8.21	

10.3.8.15 Rplmn information

Contains information to provide faster RPLMN selection in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
GSM BA Range	OP	1 to maxNumGSMFreqRanges		GSM BA Range
> GSM Lower Range (UARFCN)	MP		Integer(0..16383)	Lower bound for range of GSM BA freqs
> GSM Upper Range (UARFCN)	MP		Integer(0..16383)	Upper bound for range of GSM BA freqs
FDD UMTS Frequency list	OP	1 to maxNumFDDFreqs		
> UARFCN (Nlow)	MP		Integer(0..16383)	3GPP TS 25.101
> UARFCN (Nupper)	OP		Integer(0..16383)	3GPP TS 25.101 This IE is only needed when the FDD frequency list is specifying a range.
TDD UMTS Frequency list	OP	1 to maxNumTDDFreqs		
> UARFCN	MP		Integer(0..16383)	3GPP TS 25.102
CDMA2000 UMTS Frequency list	OP	1 to maxNumCDMA2000Freqs		
> BAND_CLASS	MP		Bitstring(5 bits)	TIA/EIA/IS-2000
> CDMA_FREQ	MP		Bitstring (11 bits)	TIA/EIA/IS-2000

10.3.8.16 Scheduling information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE Value tag >PLMN Value tag	OP		PLMN Value tag 10.3.8.10	This IE is included if the following conditions are fulfilled: the area scope for the system information block is set to "PLMN" in table 8.1.1. a value tag is used to indicate changes in the system information block. the SIB type does not equal system information block type 16
>Predefined configuration identity and value tag			Predefined configuration identity and value tag 10.3.8.11	This IE is included if the following conditions are fulfilled: the SIB type equals system information block type 16
>Cell Value tag			Cell Value tag 10.3.8.4	This IE is included if the following conditions are fulfilled: the area scope for the system information block is set to "cell" in table 8.1.1. a value tag is used to indicate changes in the system information block.
Scheduling	MP			
>SEG_COUNT	MD		SEG COUNT 10.3.8.17	Default value is 1
>SIB_REP	MP		Integer (4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096)	Repetition period for the SIB in frames
>SIB_POS	MP		Integer (0 ..Rep-2 by step of 2)	Position of the first segment Rep is the value of the SIB_REP IE
>SIB_POS offset info	MD	1..15		see below for default value
>>SIB_OFF	MP		Integer(2..32 by step of 2)	Offset of subsequent segments

Field	Default value
SIB_POS offset info	The default value is that all segments are consecutive, i.e., that the SIB_OFF = 2 for all segments except when MIB segment/complete MIB is scheduled to be transmitted in between segments from same SIB. In that case, SIB_OFF=4 in between segments which are scheduled to be transmitted at SFNprime = 8 *n-2 and 8*n + 2, and SIB_OFF=2 for the rest of the segments.

10.3.8.17 SEG COUNT

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SEG_COUNT	MP		Integer (1..16)	Number of segments in the system information block

10.3.8.18 Segment index

Each system information segment has an individual segment index.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Segment index	MP		Integer (1..14)	Segments of a system information block are numbered starting with 0 for the first segment and 1 for the next segment, which can be the first subsequent segment or a last segment.

10.3.8.19 SIB data fixed

Contains the result of a master information block or a system information block after encoding and segmentation. The IE is used for segments with fixed length (segments filling an entire transport block).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB data fixed	MP		Bit string (222)	

10.3.8.20 SIB data variable

Contains either a complete system information block or a segment of a system information block. Contains the result of a master information block or a system information block after encoding and segmentation. The IE is used for segments with variable length. The system information blocks are defined in clauses 10.2.48.8.1 to 10.2.48.8.18.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB data variable	MP		Bit string (1..214)	

10.3.8.21 SIB type

The SIB type identifies a specific system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB type	MP		Enumerated, see below	

The list of values to encode is:

- Master information block,
- System Information Type 1,
- System Information Type 2,
- System Information Type 3,
- System Information Type 4,
- System Information Type 5,
- System Information Type 6,
- System Information Type 7,

System Information Type 8,
 System Information Type 9,
 System Information Type 10,
 System Information Type 11,
 System Information Type 12,
 System Information Type 13,
 System Information Type 13.1,
 System Information Type 13.2,
 System Information Type 13.3,
 System Information Type 13.4,
 System Information Type 14,
 System Information Type 15,
 System Information Type 15.1,
 System Information Type 15.2,
 System Information Type 15.3,
 System Information Type 16,
 System Information Type 17,
 Scheduling Block 1,
 Scheduling Block 2.

in addition, at least one spare value, criticality: ignore, is needed.

10.3.8.22 SIB type SIBs only

The SIB type identifies a specific system information block.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SIB type SIBs only	MP		Enumerated, see below	

The list of values to encode is:

System Information Type 1,
 System Information Type 2,
 System Information Type 3,
 System Information Type 4,
 System Information Type 5,
 System Information Type 6,
 System Information Type 7,
 System Information Type 8,

System Information Type 9,
 System Information Type 10,
 System Information Type 11,
 System Information Type 12,
 System Information Type 13,
 System Information Type 13.1,
 System Information Type 13.2,
 System Information Type 13.3,
 System Information Type 13.4,
 System Information Type 14,
 System Information Type 15,
 System Information Type 15.1,
 System Information Type 15.2,
 System Information Type 15.3,
 System Information Type 16,
 System Information Type 17.

in addition, at least 8 spare values, criticality: ignore, are needed.

10.3.9 ANSI-41 Information elements

10.3.9.1 ANSI 41 Core Network Information

Information element/Group name	Need	Multi	Type and reference	Semantics description
P_REV	MP		P_REV 10.3.9.10	
MIN_P_REV	MP		MIN_P_REV 10.3.9.8	
SID	MP		SID 10.3.9.11	
NID	MP		NID 10.3.9.9	

10.3.9.2 ANSI-41 Global Service Redirection information

This Information Element contains ANSI-41 Global Service Redirection information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 Global Service Redirection information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.3 ANSI-41 NAS parameter

This Information Element contains ANSI-41 User Zone Identification information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 NAS parameter	MP		Bit string (size (1..2048))	

10.3.9.4 ANSI-41 NAS system information

This Information Element contains ANSI-41 system information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NAS (ANSI-41) system information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.5 ANSI-41 Private Neighbour List information

This Information Element contains ANSI-41 Private Neighbour List information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 Private Neighbour List information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.6 ANSI-41 RAND information

This Information Element contains ANSI-41 RAND information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 RAND information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.7 ANSI-41 User Zone Identification information

This Information Element contains ANSI-41 User Zone Identification information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ANSI-41 User Zone Identification information	MP		ANSI-41 NAS parameter, 10.3.9.3	Formatted and coded according to the 3GPP2 document "G3G CDMA DS on ANSI-41"

10.3.9.8 MIN_P_REV

This Information Element contains minimum protocol revision level.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MIN_P_REV	MP		Bitstring (8)	Minimum protocol revision level

10.3.9.9 NID

This Information Element contains Network identification.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
NID	MP		Bitstring (16)	Network identification

10.3.9.10 P_REV

This Information Element contains protocol revision level.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
P_REV	MP		Bitstring (8)	Protocol revision level

10.3.9.11 SID

This Information Element contains System identification.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
SID	MP		Bitstring (15)	System identification

10.3.10 Multiplicity values and type constraint values

The following table includes constants that are either used as multi bounds (name starting with "max") or as high or low value in a type specification (name starting with "lo" or "hi"). Constants are specified only for values appearing more than once in the RRC specification. In case a constant is related to one or more other constants, an expression is included in the "value" column instead of the actual value.

Constant	Explanation	Value
CN information		
maxCNdomains	Maximum number of CN domains	4
UTRAN mobility information		
maxRAT	Maximum number of Radio Access Technologies	maxOtherRAT + 1
maxOtherRAT	Maximum number of other Radio Access Technologies	15
maxURA	Maximum number of URAs in a cell	8
maxInterSysMessages	Maximum number of Inter System Messages	4
maxRABsetup	Maximum number of RABs to be established	16
UE information		
maxtransactions	Maximum number of parallel RRC transactions in downlink	25
maxPDCPalgoType	Maximum number of PDCP algorithm types	8
maxDRACclasses	Maximum number of UE classes which would require different DRAC parameters	8
maxFrequencybands	Maximum number of frequency bands supported by the UE as defined in 25.102	4
maxPage1	Number of UEs paged in the Paging Type 1 message	8
maxSystemCapability	Maximum number of system specific capabilities that can be requested in one message.	16
RB information		
maxPredefConfig	Maximum number of predefined configurations	16
maxRB	Maximum number of RBs	32
maxSRBsetup	Maximum number of signalling RBs to be established	8
maxRBperRAB	Maximum number of RBs per RAB	8
maxRBallRABs	Maximum number of non signalling RBs	27
maxRBMuxOptions	Maximum number of RB multiplexing options	8
maxLoCHperRLC	Maximum number of logical channels per RLC entity	2
TrCH information		
maxTrCH	Maximum number of transport channels used in one direction (UL or DL)	32
maxTrCHpreconf	Maximum number of preconfigured Transport channels, per direction	16
maxCCTrCH	Maximum number of CCTrCHs	8
maxTF	Maximum number of different transport formats that can be included in the Transport format set for one transport channel	32
maxTF-CPCH	Maximum number of TFs in a CPCH set	16
maxTFC	Maximum number of Transport Format Combinations	1024
maxTFCl-1-Combs	Maximum number of TFCl (field 1) combinations	512
maxTFCl-2-Combs	Maximum number of TFCl (field 2) combinations	512
maxCPCHsets	Maximum number of CPCH sets per cell	16
maxSIBperMsg	Maximum number of complete system information blocks per SYSTEM INFORMATION message	16
maxSIB	Maximum number of references to other system information blocks.	32
maxSIB-FACH	Maximum number of references to system information blocks on the FACH	8
PhyCH information		
maxSubCh	Maximum number of sub-channels on PRACH	12
maxPCPCH-APsubCH	Maximum number of available sub-channels for AP signature on PCPCH	12
maxPCPCH-CDsubCH	Maximum number of available sub-channels for CD signature on PCPCH	12
maxSig	Maximum number of signatures on PRACH	16
maxPCPCH-APsig	Maximum number of available signatures for AP on PCPCH	16
maxPCPCH-CDsig	Maximum number of available signatures for CD on PCPCH	16
maxAC	Maximum number of access classes	16
maxASC	Maximum number of access service classes	8
maxASCmap	Maximum number of access class to access service classes mappings	7
maxASCpersist	Maximum number of access service classes for which persistence scaling factors are specified	6
maxPRACH	Maximum number of PRACHs in a cell	16
maxFACHPCH	Maximum number of FACHs and PCHs mapped onto one	8

	secondary CCPCHs	
maxRL	Maximum number of radio links	8
maxSCCPCH	Maximum number of secondary CCPCHs per cell	16
maxDPDCH-UL	Maximum number of DPDCHs per cell	6
maxDPCH-DLchan	Maximum number of channelisation codes used for DL DPCH	8
maxDPCHcodesPerTS	Maximum number of codes for one timeslots (TDD)	16
maxPUSCH	Maximum number of PUSCHs	(8)
maxPDSCH	Maximum number of PDSCHs	8
maxPDSCHcodes	Maximum number of codes for PDSCH	16
maxPDSCH-TFCIgroups	Maximum number of TFCI groups for PDSCH	256
maxPDSCHcodeGroups	Maximum number of code groups for PDSCH	256
maxPCPCHs	Maximum number of PCPCH channels in a CPCH Set	64
maxPCPCH-SF	Maximum number of available SFs on PCPCH	7
maxTS	Maximum number of timeslots used in one direction (UL or DL)	14
HiPUSCHIdentities	Maximum number of PDSCH Identities	64
HiPDSCHIdentities	Maximum number of PDSCH Identities	64
Measurement information		
maxTGPS	Maximum number of transmission gap pattern sequences	6
maxAdditionalMeas	Maximum number of additional measurements for a given measurement identity	4
maxMeasEvent	Maximum number of events that can be listed in measurement reporting criteria	8
maxMeasParEvent	Maximum number of measurement parameters (e.g. thresholds) per event	2
maxMeasIntervals	Maximum number of intervals that define the mapping function between the measurements for the cell quality Q of a cell and the representing quality value	1
maxCellMeas	Maximum number of cells to measure	32
maxReportedGSMCells	Maximum number of GSM cells to be reported	6
maxFreq	Maximum number of frequencies to measure	8
maxSat	Maximum number of satellites to measure	16
HiRM	Maximum number that could be set as rate matching attribute for a transport channel	256
Frequency information		
maxFDDFreqList	Maximum number of FDD carrier frequencies to be stored in USIM	4
maxTDDFreqList	Maximum number of TDD carrier frequencies to be stored in USIM	4
maxFDDFreqCellList	Maximum number of neighbouring FDD cells to be stored in USIM	32
maxTDDFreqCellList	Maximum number of neighbouring TDD cells to be stored in USIM	32
maxGSMCellList	Maximum number of GSM cells to be stored in USIM	32
Other information		
maxNumGSMFreqRanges	Maximum number of GSM Frequency Ranges to store	32
maxNumFDDFreqs	Maximum number of FDD centre frequencies to store	8
maxNumTDDFreqs	Maximum number of TDD centre frequencies to store	8
maxNumCDMA2000Freqs	Maximum number of CDMA2000 centre frequencies to store	8

11 Message and Information element abstract syntax (with ASN.1)

This clause contains definitions for RRC PDUs and IEs using a subset of ASN.1 as specified in TR 25.921. PDU and IE definitions are grouped into separate ASN.1 modules.

11.1 General message structure

```
Class-definitions DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
IMPORTS
```

```
    ActiveSetUpdate-r3,  
    ActiveSetUpdateComplete,  
    ActiveSetUpdateFailure,  
    AssistanceDataDelivery-r3,  
    CellChangeOrderFromUTRAN-r3,  
    CellChangeFailureFromUTRAN,  
    CellUpdate,  
    CellUpdateConfirm-CCCH-r3,  
    CellUpdateConfirm-r3,  
    CounterCheck-r3,  
    CounterCheckResponse,  
    DownlinkDirectTransfer-r3,  
    HandoverToUTRANComplete,  
    InitialDirectTransfer,  
    HandoverFromUTRANCommand-GSM-r3,  
    HandoverFromUTRANCommand-CDMA2000-r3,  
    HandoverFromUTRANFailure,  
    MeasurementControl-r3,  
    MeasurementControlFailure,  
    MeasurementReport,  
    PagingType1,  
    PagingType2,  
    PhysicalChannelReconfiguration-r3,  
    PhysicalChannelReconfigurationComplete,  
    PhysicalChannelReconfigurationFailure,  
    PhysicalSharedChannelAllocation-r3,  
    PUSCHCapacityRequest,  
    RadioBearerReconfiguration-r3,  
    RadioBearerReconfigurationComplete,  
    RadioBearerReconfigurationFailure,  
    RadioBearerRelease-r3,  
    RadioBearerReleaseComplete,  
    RadioBearerReleaseFailure,  
    RadioBearerSetup-r3,  
    RadioBearerSetupComplete,  
    RadioBearerSetupFailure,  
    RRCConnectionReject-r3,  
    RRCConnectionRelease-r3,  
    RRCConnectionRelease-CCCH-r3,  
    RRCConnectionReleaseComplete,  
    RRCConnectionRequest,  
    RRCConnectionSetup-r3,  
    RRCConnectionSetupComplete,  
    RRCStatus,  
    SecurityModeCommand-r3,  
    SecurityModeComplete,  
    SecurityModeFailure,  
    SignallingConnectionRelease-r3,  
    SignallingConnectionReleaseRequest,  
    SystemInformation-BCH,  
    SystemInformation-FACH,  
    SystemInformationChangeIndication,  
    TransportChannelReconfiguration-r3,  
    TransportChannelReconfigurationComplete,  
    TransportChannelReconfigurationFailure,  
    TransportFormatCombinationControl,  
    TransportFormatCombinationControlFailure,
```

```

UECapabilityEnquiry-r3,
UECapabilityInformation,
UECapabilityInformationConfirm-r3,
UplinkDirectTransfer,
UplinkPhysicalChannelControl-r3,
URAUpdate,
URAUpdateConfirm-r3,
URAUpdateConfirm-CCCH-r3,
UTRANMobilityInformation,
UTRANMobilityInformationConfirm,
UTRANMobilityInformationFailure
FROM PDU-definitions

-- User Equipment IEs :
  IntegrityCheckInfo
FROM InformationElements;

--*****
--
-- Downlink DCCH messages
--
--*****

DL-DCCH-Message ::= SEQUENCE {
  integrityCheckInfo      IntegrityCheckInfo      OPTIONAL,
  message                  DL-DCCH-MessageType
}

DL-DCCH-MessageType ::= CHOICE {
  activeSetUpdate                ActiveSetUpdate-r3,
  assistanceDataDelivery         AssistanceDataDelivery-r3,
  cellChangeOrderFromUTRAN      CellChangeOrderFromUTRAN-r3,
  cellUpdateConfirm              CellUpdateConfirm-r3,
  counterCheck                   CounterCheck-r3,
  downlinkDirectTransfer         DownlinkDirectTransfer-r3,
  handoverFromUTRANCommand-GSM  HandoverFromUTRANCommand-GSM-r3,
  handoverFromUTRANCommand-CDMA2000 HandoverFromUTRANCommand-CDMA2000-r3,
  measurementControl             MeasurementControl-r3,
  pagingType2                    PagingType2,
  physicalChannelReconfiguration PhysicalChannelReconfiguration-r3,
  physicalSharedChannelAllocation PhysicalSharedChannelAllocation-r3,
  radioBearerReconfiguration     RadioBearerReconfiguration-r3,
  radioBearerRelease             RadioBearerRelease-r3,
  radioBearerSetup               RadioBearerSetup-r3,
  rrcConnectionRelease           RRCConnectionRelease-r3,
  securityModeCommand            SecurityModeCommand-r3,
  signallingConnectionRelease    SignallingConnectionRelease-r3,
  transportChannelReconfiguration TransportChannelReconfiguration-r3,
  transportFormatCombinationControl TransportFormatCombinationControl,
  ueCapabilityEnquiry            UECapabilityEnquiry-r3,
  ueCapabilityInformationConfirm UECapabilityInformationConfirm-r3,
  uplinkPhysicalChannelControl   UplinkPhysicalChannelControl-r3,
  uraUpdateConfirm               URAUpdateConfirm-r3,
  utranMobilityInformation       UTRANMobilityInformation,
  extension                       NULL
}

--*****
--
-- Uplink DCCH messages
--
--*****

UL-DCCH-Message ::= SEQUENCE {
  integrityCheckInfo      IntegrityCheckInfo      OPTIONAL,
  message                  UL-DCCH-MessageType
}

UL-DCCH-MessageType ::= CHOICE {
  activeSetUpdateComplete        ActiveSetUpdateComplete,
  activeSetUpdateFailure         ActiveSetUpdateFailure,
  cellChangeFailureFromUTRAN    CellChangeFailureFromUTRAN,
  counterCheckResponse           CounterCheckResponse,
  handoverToUTRANComplete        HandoverToUTRANComplete,
  initialDirectTransfer          InitialDirectTransfer,
  handoverFromUTRANFailure       HandoverFromUTRANFailure,
  measurementControlFailure      MeasurementControlFailure,
  measurementReport              MeasurementReport,
}

```

```

physicalChannelReconfigurationComplete
physicalChannelReconfigurationFailure
radioBearerReconfigurationComplete
radioBearerReconfigurationFailure
radioBearerReleaseComplete
radioBearerReleaseFailure
radioBearerSetupComplete
radioBearerSetupFailure
rrcConnectionReleaseComplete
rrcConnectionSetupComplete
rrcStatus
securityModeComplete
securityModeFailure
signallingConnectionReleaseRequest
transportChannelReconfigurationComplete
transportChannelReconfigurationFailure
transportFormatCombinationControlFailure
ueCapabilityInformation
uplinkDirectTransfer
utranMobilityInformationConfirm
utranMobilityInformationFailure
extension
}

```

```

-----
--
-- Downlink CCCH messages
--
-----

```

```

DL-CCCH-Message ::= SEQUENCE {
    integrityCheckInfo    IntegrityCheckInfo    OPTIONAL,
    message                DL-CCCH-MessageType
}

```

```

DL-CCCH-MessageType ::= CHOICE {
    cellUpdateConfirm      CellUpdateConfirm-CCCH-r3,
    rrcConnectionReject    RRCConnectionReject-r3,
    rrcConnectionRelease    RRCConnectionRelease-CCCH-r3,
    rrcConnectionSetup      RRCConnectionSetup-r3,
    uraUpdateConfirm        URAUpdateConfirm-CCCH-r3,
    extension                NULL
}

```

```

-----
--
-- Uplink CCCH messages
--
-----

```

```

UL-CCCH-Message ::= SEQUENCE {
    integrityCheckInfo    IntegrityCheckInfo    OPTIONAL,
    message                UL-CCCH-MessageType
}

```

```

UL-CCCH-MessageType ::= CHOICE {
    cellUpdate              CellUpdate,
    rrcConnectionRequest    RRCConnectionRequest,
    uraUpdate                URAUpdate,
    extension                NULL
}

```

```

-----
--
-- PCCH messages
--
-----

```

```

PCCH-Message ::= SEQUENCE {
    message                PCCH-MessageType
}

```

```

PCCH-MessageType ::= CHOICE {

```

```

    pagingType1          PagingType1,
    extension             NULL
}

--*****
--
-- Downlink SHCCH messages
--
--*****

DL-SHCCH-Message ::= SEQUENCE {
    message              DL-SHCCH-MessageType
}

DL-SHCCH-MessageType ::= CHOICE {
    physicalSharedChannelAllocation PhysicalSharedChannelAllocation-r3,
    extension             NULL
}

--*****
--
-- Uplink SHCCH messages
--
--*****

UL-SHCCH-Message ::= SEQUENCE {
    message              UL-SHCCH-MessageType
}

UL-SHCCH-MessageType ::= CHOICE {
    puschCapacityRequest PUSCHCapacityRequest,
    extension             NULL
}

--*****
--
-- BCCH messages sent on FACH
--
--*****

BCCH-FACH-Message ::= SEQUENCE {
    message              BCCH-FACH-MessageType
}

BCCH-FACH-MessageType ::= CHOICE {
    systemInformation          SystemInformation-FACH,
    systemInformationChangeIndication SystemInformationChangeIndication,
    extension                 NULL
}

--*****
--
-- BCCH messages sent on BCH
--
--*****

BCCH-BCH-Message ::= SEQUENCE {
    message              SystemInformation-BCH
}

END

```

11.2 PDU definitions

```

--*****
--
-- TABULAR: The message type and integrity check info are not
-- visible in this module as they are defined in the class module.
-- Also, all FDD/TDD specific choices have the FDD option first
-- and TDD second, just for consistency.
--
--*****

PDU-definitions DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

```

```
--*****
--
-- IE parameter types from other modules
--
--*****

IMPORTS

-- Core Network IEs :
  CN-DomainIdentity,
  CN-InformationInfo,
  NAS-Message,
  PagingRecordTypeID,
-- UTRAN Mobility IEs :
  URA-Identity,
-- User Equipment IEs :
  ActivationTime,
  C-RNTI,
  CapabilityUpdateRequirement,
  CellUpdateCause,
  CipheringAlgorithm,
  CipheringModeInfo,
  EstablishmentCause,
  FailureCauseWithProtErr,
  FailureCauseWithProtErrTrId,
  InitialUE-Identity,
  IntegrityProtActivationInfo,
  IntegrityProtectionModeInfo,
  N-308,
  PagingCause,
  PagingRecordList,
  ProtocolErrorIndicator,
  ProtocolErrorIndicatorWithMoreInfo,
  Rb-timer-indicator,
  Re-EstablishmentTimer,
  RedirectionInfo,
  RejectionCause,
  ReleaseCause,
  RRC-StateIndicator,
  RRC-TransactionIdentifier,
  SecurityCapability,
  START-Value,
  STARTList,
  U-RNTI,
  U-RNTI-Short,
  UE-RadioAccessCapability,
  UE-ConnTimersAndConstants,
  URA-UpdateCause,
  UTRAN-DRX-CycleLengthCoefficient,
  WaitTime,
-- Radio Bearer IEs :
  PredefinedConfigIdentity,
  RAB-Info,
  RAB-Info-Post,
  RAB-InformationList,
  RAB-InformationReconfigList,
  RAB-InformationSetupList,
  RB-ActivationTimeInfo,
  RB-ActivationTimeInfoList,
  RB-COUNT-C-InformationList,
  RB-COUNT-C-MSB-InformationList,
  RB-IdentityList,
  RB-InformationAffectedList,
  RB-InformationReconfigList,
  RB-InformationReleaseList,
  RB-InformationSetupList,
  RB-WithPDCP-InfoList,
  SRB-InformationSetupList,
  SRB-InformationSetupList2,
-- Transport Channel IEs:
  CPCH-SetID,
  DL-AddReconfTransChInfo2List,
  DL-AddReconfTransChInfoList,
  DL-CommonTransChInfo,
  DL-DeletedTransChInfoList,
  DRAC-StaticInformationList,
  TFC-Subset,
```

```

    TFCS-Identity,
    UL-AddReconfTransChInfoList,
    UL-CommonTransChInfo,
    UL-DeletedTransChInfoList,
-- Physical Channel IEs :
    AllocationPeriodInfo,
    Alpha,
    CCTrCH-PowerControlInfo,
    ConstantValue,
    CPCH-SetInfo,
    DL-CommonInformation,
    DL-CommonInformationPost,
    DL-InformationPerRL,
    DL-InformationPerRL-List,
    DL-InformationPerRL-ListPostFDD,
    DL-InformationPerRL-PostTDD,
    DL-DPCH-PowerControlInfo,
    DL-PDSCH-Information,
    DPCH-CompressedModeStatusInfo,
    FrequencyInfo,
    FrequencyInfoFDD,
    FrequencyInfoTDD,
    IndividualTS-InterferenceList,
    MaxAllowedUL-TX-Power,
    PDSCH-CapacityAllocationInfo,
    PDSCH-Identity,
    PDSCH-Info,
    PRACH-RACH-Info,
    PrimaryCCPCH-TX-Power,
    PUSCH-CapacityAllocationInfo,
    PUSCH-Identity,
    RL-AdditionInformationList,
    RL-RemovalInformationList,
    SSDT-Information,
    TFC-ControlDuration,
    TimeslotList,
    TX-DiversityMode,
    UL-ChannelRequirement,
    UL-ChannelRequirementWithCPCH-SetID,
    UL-DPCH-Info,
    UL-DPCH-InfoPostFDD,
    UL-DPCH-InfoPostTDD,
    UL-TimingAdvance,
    UL-TimingAdvanceControl,
-- Measurement IEs :
    AdditionalMeasurementID-List,
    EventResults,
    InterRAT-TargetCellDescription,
    MeasuredResults,
    MeasuredResultsList,
    MeasuredResultsOnRACH,
    MeasurementCommand,
    MeasurementIdentity,
    MeasurementReportingMode,
    PrimaryCCPCH-RSCP,
    TimeslotListWithISCP,
    TrafficVolumeMeasuredResultsList,
    UP-GPS-AssistanceData,
    UP-OTDOA-AssistanceData,
-- Other IEs :
    BCCH-ModificationInfo,
    CDMA2000-MessageList,
    GSM-MessageList,
    InterRAT-ChangeFailureCause,
    InterRAT-HO-Failure,
    InterRAT-UE-RadioAccessCapabilityList,
    InterRATMessage,
    IntraDomainNasNodeSelector,
    ProtocolErrorInformation,
    ProtocolErrorMoreInformation,
    Rplmn-Information,
    SegCount,
    SegmentIndex,
    SFN-Prime,
    SIB-Data-fixed,
    SIB-Data-variable,
    SIB-Type
FROM InformationElements

```

```

    maxSIBperMsg,
    maxSystemCapability
FROM Constant-definitions;

-- *****
--
-- ACTIVE SET UPDATE (FDD only)
--
-- *****

ActiveSetUpdate-r3 ::= CHOICE {
    r3                SEQUENCE {
        activeSetUpdate-r3      ActiveSetUpdate-r3-IEs,
        nonCriticalExtensions    SEQUENCE {} OPTIONAL
    },
    criticalExtensions    SEQUENCE {}
}

ActiveSetUpdate-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    integrityProtectionModeInfo  IntegrityProtectionModeInfo    OPTIONAL,
    cipheringModeInfo            CipheringModeInfo                      OPTIONAL,
    activationTime                ActivationTime                        OPTIONAL,
    newU-RNTI                    U-RNTI                                OPTIONAL,
    -- Core network IEs
    cn-InformationInfo           CN-InformationInfo                    OPTIONAL,
    -- Radio bearer IEs
    rb-WithPDCP-InfoList         RB-WithPDCP-InfoList                OPTIONAL,
    -- Physical channel IEs
    maxAllowedUL-TX-Power        MaxAllowedUL-TX-Power                OPTIONAL,
    rl-AdditionInformationList    RL-AdditionInformationList    OPTIONAL,
    rl-RemovalInformationList     RL-RemovalInformationList     OPTIONAL,
    tx-DiversityMode              TX-DiversityMode                    OPTIONAL,
    ssdt-Information              SSDT-Information                    OPTIONAL
}

-- *****
--
-- ACTIVE SET UPDATE COMPLETE (FDD only)
--
-- *****

ActiveSetUpdateComplete ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    ul-IntegProtActivationInfo    IntegrityProtActivationInfo    OPTIONAL,
    -- Radio bearer IEs
    rb-UL-CiphActivationTimeInfo  RB-ActivationTimeInfoList    OPTIONAL,
    rb-WithPDCP-InfoList         RB-WithPDCP-InfoList        OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions        SEQUENCE {} OPTIONAL
}

-- *****
--
-- ACTIVE SET UPDATE FAILURE (FDD only)
--
-- *****

ActiveSetUpdateFailure ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    failureCause                  FailureCauseWithProtErr,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions        SEQUENCE {} OPTIONAL
}

-- *****
--
-- Assistance Data Delivery
--
-- *****

AssistanceDataDelivery-r3 ::= CHOICE {
    r3                SEQUENCE {
        assistanceDataDelivery-r3      AssistanceDataDelivery-r3-IEs,
        nonCriticalExtensions          SEQUENCE {} OPTIONAL
    }
}

```

```

    },
    criticalExtensions          SEQUENCE {}
  }
}

AssistanceDataDelivery-r3-IEs ::= SEQUENCE {
  --Assistance Data Information Elements
  up-GPS-AssistanceData      UP-GPS-AssistanceData      OPTIONAL,
  up-OTDOA-AssistanceData    UP-OTDOA-AssistanceData    OPTIONAL
}

-- *****
--
-- CELL CHANGE ORDER FROM UTRAN
--
-- *****

CellChangeOrderFromUTRAN-r3 ::= CHOICE {
  r3          SEQUENCE {
    cellChangeOrderFromUTRAN-IEs      CellChangeOrderFromUTRAN-r3-IEs,
    nonCriticalExtensions              SEQUENCE {} OPTIONAL
  },
  criticalExtensions          SEQUENCE {}
}

CellChangeOrderFromUTRAN-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  integrityProtectionModeInfo      IntegrityProtectionModeInfo      OPTIONAL,
  activationTime                   ActivationTime                   OPTIONAL,
  rab-InformationList              RAB-InformationList              OPTIONAL,
  interRAT-TargetCellDescription   InterRAT-TargetCellDescription
}

-- *****
--
-- CELL CHANGE FAILURE FROM UTRAN
--
-- *****

CellChangeFailureFromUTRAN ::= CHOICE {
  r3          SEQUENCE {
    r3-IEs          CellChangeFailureFromUTRAN-r3-IEs,
    nonCriticalExtensions      SEQUENCE {} OPTIONAL
  },
  criticalExtensions          SEQUENCE {}
}

CellChangeFailureFromUTRAN-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  integrityProtectionModeInfo      IntegrityProtectionModeInfo      OPTIONAL,
  interRAT-ChangeFailureCause     InterRAT-ChangeFailureCause
}

-- *****
--
-- CELL UPDATE
--
-- *****

CellUpdate ::= SEQUENCE {
  -- User equipment IEs
  u-RNTI          U-RNTI,
  startList      STARTList,
  am-RLC-ErrorIndicationC-plane      BOOLEAN,
  am-RLC-ErrorIndicationU-plane      BOOLEAN,
  cellUpdateCause          CellUpdateCause,
  failureCause             FailureCauseWithProtErrTrId      OPTIONAL,
  -- TABULAR: RRC transaction identifier is nested in FailureCauseWithProtErrTrId
  rb-timer-indicator       Rb-timer-indicator,
  -- Measurement IEs
  measuredResultsOnRACH    MeasuredResultsOnRACH      OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions    SEQUENCE {} OPTIONAL
}

-- *****
--
-- CELL UPDATE CONFIRM
--

```

```

-- *****
CellUpdateConfirm-r3 ::= CHOICE {
  r3          SEQUENCE {
    cellUpdateConfirm-r3      CellUpdateConfirm-r3-IEs,
    nonCriticalExtensions     SEQUENCE {} OPTIONAL
  },
  criticalExtensions          SEQUENCE {}
}

CellUpdateConfirm-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  integrityProtectionModeInfo   IntegrityProtectionModeInfo   OPTIONAL,
  cipheringModeInfo             CipheringModeInfo             OPTIONAL,
  activationTime                 ActivationTime                 OPTIONAL,
  new-U-RNTI                     U-RNTI                       OPTIONAL,
  new-C-RNTI                     C-RNTI                       OPTIONAL,
  rrc-StateIndicator             RRC-StateIndicator,
  utran-DRX-CycleLengthCoeff    UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
  rlc-ResetIndicatorC-Plane      BOOLEAN,
  rlc-ResetIndicatorU-Plane      BOOLEAN,
  -- CN information elements
  cn-InformationInfo             CN-InformationInfo             OPTIONAL,
  -- UTRAN mobility IEs
  ura-Identity                   URA-Identity                   OPTIONAL,
  -- Radio bearer IEs
  rb-InformationReleaseList      RB-InformationReleaseList   OPTIONAL,
  rb-InformationReconfigList     RB-InformationReconfigList  OPTIONAL,
  rb-InformationAffectedList     RB-InformationAffectedList  OPTIONAL,
  rb-WithPDCP-InfoList          RB-WithPDCP-InfoList       OPTIONAL,
  -- Transport channel IEs
  ul-CommonTransChInfo          UL-CommonTransChInfo       OPTIONAL,
  ul-deletedTransChInfoList     UL-DeletedTransChInfoList  OPTIONAL,
  ul-AddReconfTransChInfoList   UL-AddReconfTransChInfoList OPTIONAL,
  modeSpecificTransChInfo       CHOICE {
    fdd          SEQUENCE {
      cpch-SetID      CPCH-SetID      OPTIONAL,
      addReconfTransChDRAC-Info DRAC-StaticInformationList OPTIONAL
    },
    tdd          NULL
  },
  dl-CommonTransChInfo          DL-CommonTransChInfo       OPTIONAL,
  dl-DeletedTransChInfoList     DL-DeletedTransChInfoList  OPTIONAL,
  dl-AddReconfTransChInfoList   DL-AddReconfTransChInfoList OPTIONAL,
  -- Physical channel IEs
  frequencyInfo                 FrequencyInfo                 OPTIONAL,
  maxAllowedUL-TX-Power         MaxAllowedUL-TX-Power     OPTIONAL,
  ul-ChannelRequirement         UL-ChannelRequirement     OPTIONAL,
  modeSpecificPhysChInfo        CHOICE {
    fdd          SEQUENCE {
      dl-PDSCH-Information DL-PDSCH-Information   OPTIONAL
    },
    tdd          NULL
  },
  dl-CommonInformation          DL-CommonInformation     OPTIONAL,
  dl-InformationPerRL-List      DL-InformationPerRL-List  OPTIONAL
}

-- *****
--
-- CELL UPDATE CONFIRM for CCCH
--
-- *****

CellUpdateConfirm-CCCH-r3 ::= CHOICE {
  r3          SEQUENCE {
    -- User equipment IEs
    u-RNTI          U-RNTI,
    -- The rest of the message is identical to the one sent on DCCH.
    cellUpdateConfirm-r3      CellUpdateConfirm-r3-IEs,
    nonCriticalExtensions     SEQUENCE {} OPTIONAL
  },
  criticalExtensions          SEQUENCE {}
}

-- *****

```

```

--
-- COUNTER CHECK
--
-- *****

CounterCheck-r3 ::= CHOICE {
    r3
        counterCheck-r3          SEQUENCE {
            counterCheck-r3      CounterCheck-r3-IEs,
            nonCriticalExtensions SEQUENCE {} OPTIONAL
        },
        criticalExtensions       SEQUENCE {}
    }

CounterCheck-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    -- Radio bearer IEs
    rb-COUNT-C-MSB-InformationList RB-COUNT-C-MSB-InformationList
}

-- *****
--
-- COUNTER CHECK RESPONSE
--
-- *****

CounterCheckResponse ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    -- Radio bearer IEs
    rb-COUNT-C-InformationList   RB-COUNT-C-InformationList          OPTIONAL,
    -- Extension mechanism for non-release99 information
    nonCriticalExtensions        SEQUENCE {} OPTIONAL
}

-- *****
--
-- DOWNLINK DIRECT TRANSFER
--
-- *****

DownlinkDirectTransfer-r3 ::= CHOICE {
    r3
        downlinkDirectTransfer-r3 SEQUENCE {
            downlinkDirectTransfer-r3 DownlinkDirectTransfer-r3-IEs,
            nonCriticalExtensions      SEQUENCE {} OPTIONAL
        },
        criticalExtensions          SEQUENCE {}
    }

DownlinkDirectTransfer-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    -- Core network IEs
    cn-DomainIdentity           CN-DomainIdentity,
    nas-Message                  NAS-Message
}

-- *****
--
-- HANDOVER TO UTRAN COMMAND
--
-- *****

HandoverToUTRANCommand-r3 ::= CHOICE {
    r3
        handoverToUTRANCommand-r3 SEQUENCE {
            handoverToUTRANCommand-r3 HandoverToUTRANCommand-r3-IEs,
            nonCriticalExtensions      SEQUENCE {} OPTIONAL
        },
        criticalExtensions          SEQUENCE {}
    }

HandoverToUTRANCommand-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    new-U-RNTI                   U-RNTI-Short,
    activationTime                ActivationTime          OPTIONAL,
    cipheringAlgorithm            CipheringAlgorithm      OPTIONAL,
    -- Radio bearer IEs
}

```

```

    rab-Info                RAB-Info-Post,
-- Specification mode information
    specificationMode      CHOICE {
        complete           SEQUENCE {
            srb-InformationSetupList    SRB-InformationSetupList,
            rab-InformationSetupList    RAB-InformationSetupList           OPTIONAL,
            ul-CommonTransChInfo        UL-CommonTransChInfo,
            ul-AddReconfTransChInfoList UL-AddReconfTransChInfoList,
            dl-CommonTransChInfo        DL-CommonTransChInfo,
            dl-AddReconfTransChInfoList DL-AddReconfTransChInfoList,
            ul-DPCH-Info                 UL-DPCH-Info,
            modeSpecificInfo            CHOICE {
                fdd                 SEQUENCE {
                    dl-PDSCH-Information    DL-PDSCH-Information OPTIONAL,
                    cpch-SetInfo           CPCH-SetInfo           OPTIONAL
                },
                tdd                 NULL
            },
            dl-CommonInformation        DL-CommonInformation,
            dl-InformationPerRL-List    DL-InformationPerRL-List,
            frequencyInfo               FrequencyInfo
        },
        predefinedConfigIdentity        PredefinedConfigIdentity,
        rab-Info                        RAB-Info-Post           OPTIONAL,
        modeSpecificInfo                CHOICE {
            fdd                 SEQUENCE {
                ul-DPCH-Info        UL-DPCH-InfoPostFDD,
                dl-CommonInformationPost    DL-CommonInformationPost,
                dl-InformationPerRL-List    DL-InformationPerRL-ListPostFDD,
                frequencyInfo          FrequencyInfoFDD
            },
            tdd                 SEQUENCE {
                ul-DPCH-Info        UL-DPCH-InfoPostTDD,
                dl-InformationPerRL    DL-InformationPerRL-PostTDD,
                frequencyInfo        FrequencyInfoTDD,
                primaryCCPCH-TX-Power    PrimaryCCPCH-TX-Power
            }
        }
    },
-- Physical channel IEs
    maxAllowedUL-TX-Power    MaxAllowedUL-TX-Power
}

-- *****
--
-- HANDOVER TO UTRAN COMPLETE
--
-- *****

HandoverToUTRANComplete ::= SEQUENCE {
--TABULAR: Integrity protection shall not be performed on this message.
-- User equipment IEs
-- TABULAR: the IE below is conditional on history.
    startList                STARTList                OPTIONAL,
-- Extension mechanism for non- release99 information
    nonCriticalExtensions     SEQUENCE {}             OPTIONAL
}

-- *****
--
-- INITIAL DIRECT TRANSFER
--
-- *****

InitialDirectTransfer ::= SEQUENCE {
-- Core network IEs
    cn-DomainIdentity        CN-DomainIdentity,
    intraDomainNasNodeSelector    IntraDomainNasNodeSelector,
    nas-Message              NAS-Message,
-- Measurement IEs
    measuredResultsOnRACH     MeasuredResultsOnRACH    OPTIONAL,
-- Extension mechanism for non- release99 information
}

```

```

        nonCriticalExtensions          SEQUENCE {}          OPTIONAL
    }
-- *****
--
-- HANOVER FROM UTRAN COMMAND
--
-- *****

HandoverFromUTRANCommand-GSM-r3 ::= CHOICE {
    r3                               SEQUENCE {
        handoverFromUTRANCommand-GSM-r3
        nonCriticalExtensions        SEQUENCE {} OPTIONAL
    },
    criticalExtensions              SEQUENCE {}
}

HandoverFromUTRANCommand-GSM-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier        RRC-TransactionIdentifier,
    activationTime                   ActivationTime             OPTIONAL,
    -- Radio bearer IEs
    remainingRAB-Info                RAB-Info                  OPTIONAL,
    -- Other IEs
    message-and-extension            CHOICE {
        gsm-Message                  SEQUENCE {},
        -- In this case, what follows the basic production is a variable length bit string
        -- with no length field, containing the GSM message including GSM padding up to end
        -- of container, to be analysed according to GSM specifications
        with-extension                SEQUENCE {
            messages                  GSM-MessageList
        }
    }
}

HandoverFromUTRANCommand-CDMA2000-r3 ::= CHOICE {
    r3                               SEQUENCE {
        handoverFromUTRANCommand-CDMA2000-r3
        nonCriticalExtensions        SEQUENCE {} OPTIONAL
    },
    criticalExtensions              SEQUENCE {}
}

HandoverFromUTRANCommand-CDMA2000-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier        RRC-TransactionIdentifier,
    activationTime                   ActivationTime             OPTIONAL,
    -- Radio bearer IEs
    remainingRAB-Info                RAB-Info                  OPTIONAL,
    -- Other IEs
    cdma2000-MessageList             CDMA2000-MessageList
}

-- *****
--
-- HANOVER FROM UTRAN FAILURE
--
-- *****

HandoverFromUTRANFailure ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier        RRC-TransactionIdentifier,
    -- Other IEs
    interRAT-HO-Failure              InterRAT-HO-Failure     OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions            SEQUENCE {}          OPTIONAL
}

-- *****
--
-- MEASUREMENT CONTROL
--
-- *****

MeasurementControl-r3 ::= CHOICE {
    r3                               SEQUENCE {

```

```

        measurementControl-r3          MeasurementControl-r3-IEs,
        nonCriticalExtensions          SEQUENCE {} OPTIONAL
    },
    criticalExtensions                  SEQUENCE {}
}

MeasurementControl-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier          RRC-TransactionIdentifier,
    -- Measurement IEs
    measurementIdentity               MeasurementIdentity,
    measurementCommand                MeasurementCommand,
    -- TABULAR: The measurement type is included in MeasurementCommand.
    measurementReportingMode          MeasurementReportingMode          OPTIONAL,
    additionalMeasurementList         AdditionalMeasurementID-List     OPTIONAL,
    -- Physical channel IEs
    dpch-CompressedModeStatusInfo     DPCH-CompressedModeStatusInfo  OPTIONAL
}

-- *****
--
-- MEASUREMENT CONTROL FAILURE
--
-- *****

MeasurementControlFailure ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier          RRC-TransactionIdentifier,
    failureCause                      FailureCauseWithProtErr,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}          OPTIONAL
}

-- *****
--
-- MEASUREMENT REPORT
--
-- *****

MeasurementReport ::= SEQUENCE {
    -- Measurement IEs
    measurementIdentity               MeasurementIdentity,
    measuredResults                   MeasuredResults              OPTIONAL,
    measuredResultsOnRACH              MeasuredResultsOnRACH     OPTIONAL,
    additionalMeasuredResults          MeasuredResultsList       OPTIONAL,
    eventResults                      EventResults              OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}          OPTIONAL
}

-- *****
--
-- PAGING TYPE 1
--
-- *****

PagingType1 ::= SEQUENCE {
    -- User equipment IEs
    pagingRecordList                  PagingRecordList           OPTIONAL,
    -- Other IEs
    bcch-ModificationInfo             BCCH-ModificationInfo     OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}          OPTIONAL
}

-- *****
--
-- PAGING TYPE 2
--
-- *****

PagingType2 ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier          RRC-TransactionIdentifier,
    pagingCause                        PagingCause,
    -- Core network IEs
    cn-DomainIdentity                CN-DomainIdentity,
    pagingRecordTypeID                PagingRecordTypeID,

```

```

-- Extension mechanism for non- release99 information
    nonCriticalExtensions          SEQUENCE {}          OPTIONAL
}
-- *****
--
-- PHYSICAL CHANNEL RECONFIGURATION
--
-- *****

PhysicalChannelReconfiguration-r3 ::= CHOICE {
    r3                             SEQUENCE {
        physicalChannelReconfiguration-r3
        PhysicalChannelReconfiguration-r3-IEs,
        nonCriticalExtensions       SEQUENCE {}          OPTIONAL
    },
    criticalExtensions              SEQUENCE {}
}

PhysicalChannelReconfiguration-r3-IEs ::= SEQUENCE {
-- User equipment IEs
    rrc-TransactionIdentifier      RRC-TransactionIdentifier,
    integrityProtectionModeInfo    IntegrityProtectionModeInfo          OPTIONAL,
    cipheringModeInfo              CipheringModeInfo          OPTIONAL,
    activationTime                  ActivationTime          OPTIONAL,
    new-U-RNTI                      U-RNTI          OPTIONAL,
    new-C-RNTI                      C-RNTI          OPTIONAL,
    rrc-StateIndicator              RRC-StateIndicator,
    utran-DRX-CycleLengthCoeff      UTRAN-DRX-CycleLengthCoefficient          OPTIONAL,
-- Core network IEs
    cn-InformationInfo              CN-InformationInfo          OPTIONAL,
-- UTRAN mobility IEs
    ura-Identity                    URA-Identity          OPTIONAL,
-- Radio bearer IEs
    rb-WithPDCP-InfoList            RB-WithPDCP-InfoList          OPTIONAL,
-- Physical channel IEs
    frequencyInfo                   FrequencyInfo          OPTIONAL,
    maxAllowedUL-TX-Power            MaxAllowedUL-TX-Power          OPTIONAL,
    ul-ChannelRequirement            UL-ChannelRequirementWithCPCH-SetID          OPTIONAL,
-- TABULAR: UL-ChannelRequirementWithCPCH-SetID contains the choice
-- between UL DPCH info, CPCH SET info and CPCH set ID.
    modeSpecificInfo                CHOICE {
        fdd                          SEQUENCE {
            dl-PDSCH-Information      DL-PDSCH-Information          OPTIONAL
        },
        tdd                          NULL
    },
    dl-CommonInformation             DL-CommonInformation          OPTIONAL,
    dl-InformationPerRL-List         DL-InformationPerRL-List          OPTIONAL
}
-- *****
--
-- PHYSICAL CHANNEL RECONFIGURATION COMPLETE
--
-- *****

PhysicalChannelReconfigurationComplete ::= SEQUENCE {
-- User equipment IEs
    rrc-TransactionIdentifier        RRC-TransactionIdentifier,
    ul-IntegProtActivationInfo        IntegrityProtActivationInfo          OPTIONAL,
-- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
    ul-TimingAdvance                 UL-TimingAdvance          OPTIONAL,
-- Radio bearer IEs
    count-C-ActivationTime            ActivationTime          OPTIONAL,
    rb-UL-CiphActivationTimeInfo      RB-ActivationTimeInfoList          OPTIONAL,
    rb-WithPDCP-InfoList              RB-WithPDCP-InfoList          OPTIONAL,
-- Extension mechanism for non- release99 information
    nonCriticalExtensions             SEQUENCE {}          OPTIONAL
}
-- *****
--
-- PHYSICAL CHANNEL RECONFIGURATION FAILURE
--
-- *****

PhysicalChannelReconfigurationFailure ::= SEQUENCE {

```

```

-- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier      OPTIONAL,
  failureCause                   FailureCauseWithProtErr,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions          SEQUENCE {}      OPTIONAL
}

-- *****
--
-- PHYSICAL SHARED CHANNEL ALLOCATION (TDD only)
--
-- *****

PhysicalSharedChannelAllocation-r3 ::= CHOICE {
  r3                             SEQUENCE {
    physicalSharedChannelAllocation-r3
                                PhysicalSharedChannelAllocation-r3-IEs,
    nonCriticalExtensions        SEQUENCE {} OPTIONAL
  },
  criticalExtensions            SEQUENCE {}
}

PhysicalSharedChannelAllocation-r3-IEs ::= SEQUENCE {
-- TABULAR: Integrity protection shall not be performed on this message.
-- User equipment IEs
  c-RNTI                         C-RNTI                        OPTIONAL,
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
-- Physical channel IEs
  ul-TimingAdvance              UL-TimingAdvanceControl      OPTIONAL,
  pusch-CapacityAllocationInfo  PUSCH-CapacityAllocationInfo  OPTIONAL,
  pdsch-CapacityAllocationInfo  PDSCH-CapacityAllocationInfo  OPTIONAL,
  confirmRequest                ENUMERATED {
                                confirmPDSCH, confirmPUSCH }  OPTIONAL,
-- TABULAR: If the above value is not present, the default value "No Confirm"
-- shall be used as specified in 10.2.25.
  iscpTimeslotList              TimeslotList                    OPTIONAL
}

-- *****
--
-- PUSCH CAPACITY REQUEST (TDD only)
--
-- *****

PUSCHCapacityRequest ::= SEQUENCE {
-- User equipment IEs
  c-RNTI                         C-RNTI                        OPTIONAL,
-- Measurement IEs
  trafficVolumeMeasuredResultsList
                                TrafficVolumeMeasuredResultsList,
  timeslotListWithISCP          TimeslotListWithISCP          OPTIONAL,
  primaryCCPCH-RSCP             PrimaryCCPCH-RSCP             OPTIONAL,
  allocationConfirmation        CHOICE {
    pdschConfirmation           PDSCH-Identity,
    puschConfirmation           PUSCH-Identity
  }                                OPTIONAL,
  protocolErrorIndicator        ProtocolErrorIndicatorWithMoreInfo,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions          SEQUENCE {} OPTIONAL
}

-- *****
--
-- RADIO BEARER RECONFIGURATION
--
-- *****

RadioBearerReconfiguration-r3 ::= CHOICE {
  r3                             SEQUENCE {
    radioBearerReconfiguration-r3 RadioBearerReconfiguration-r3-IEs,
    nonCriticalExtensions        SEQUENCE {} OPTIONAL
  },
  criticalExtensions            SEQUENCE {}
}

RadioBearerReconfiguration-r3-IEs ::= SEQUENCE {
-- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,

```

```

    integrityProtectionModeInfo      IntegrityProtectionModeInfo      OPTIONAL,
    cipheringModeInfo                CipheringModeInfo                OPTIONAL,
    activationTime                    ActivationTime                    OPTIONAL,
    new-U-RNTI                       U-RNTI                          OPTIONAL,
    new-C-RNTI                       C-RNTI                          OPTIONAL,
    rrc-StateIndicator               RRC-StateIndicator,
    utran-DRX-CycleLengthCoeff       UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
-- Core network IEs
  cn-InformationInfo                CN-InformationInfo                OPTIONAL,
-- UTRAN mobility IEs
  ura-Identity                      URA-Identity                    OPTIONAL,
-- Radio bearer IEs
  rab-InformationReconfigList       RAB-InformationReconfigList      OPTIONAL,
  rb-InformationReconfigList        RB-InformationReconfigList,
  rb-InformationAffectedList        RB-InformationAffectedList       OPTIONAL,
-- Transport channel IEs
  ul-CommonTransChInfo              UL-CommonTransChInfo            OPTIONAL,
  ul-deletedTransChInfoList         UL-DeletedTransChInfoList       OPTIONAL,
  ul-AddReconfTransChInfoList       UL-AddReconfTransChInfoList     OPTIONAL,
  modeSpecificTransChInfo           CHOICE {
    fdd                               SEQUENCE {
      cpch-SetID                     CPCH-SetID                      OPTIONAL,
      addReconfTransChDRAC-Info      DRAC-StaticInformationList      OPTIONAL
    },
    tdd                               NULL
  }
  dl-CommonTransChInfo              DL-CommonTransChInfo            OPTIONAL,
  dl-DeletedTransChInfoList         DL-DeletedTransChInfoList       OPTIONAL,
  dl-AddReconfTransChInfoList       DL-AddReconfTransChInfo2List    OPTIONAL,
-- Physical channel IEs
  frequencyInfo                     FrequencyInfo                    OPTIONAL,
  maxAllowedUL-TX-Power              MaxAllowedUL-TX-Power           OPTIONAL,
  ul-ChannelRequirement              UL-ChannelRequirement           OPTIONAL,
  modeSpecificPhysChInfo             CHOICE {
    fdd                               SEQUENCE {
      dl-PDSCH-Information            DL-PDSCH-Information            OPTIONAL
    },
    tdd                               NULL
  },
  dl-CommonInformation              DL-CommonInformation            OPTIONAL,
  dl-InformationPerRL-List           DL-InformationPerRL-List
}

-- *****
--
-- RADIO BEARER RECONFIGURATION COMPLETE
--
-- *****

RadioBearerReconfigurationComplete ::= SEQUENCE {
-- User equipment IEs
  rrc-TransactionIdentifier          RRC-TransactionIdentifier,
  ul-IntegProtActivationInfo         IntegrityProtActivationInfo      OPTIONAL,
  -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
  ul-TimingAdvance                   UL-TimingAdvance                OPTIONAL,
-- Radio bearer IEs
  rb-UL-CiphActivationTimeInfo       RB-ActivationTimeInfoList       OPTIONAL,
  rb-WithPDCP-InfoList               RB-WithPDCP-InfoList            OPTIONAL,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions              SEQUENCE {} OPTIONAL
}

-- *****
--
-- RADIO BEARER RECONFIGURATION FAILURE
--
-- *****

RadioBearerReconfigurationFailure ::= SEQUENCE {
-- User equipment IEs
  rrc-TransactionIdentifier          RRC-TransactionIdentifier,
  failureCause                       FailureCauseWithProtErr,
-- Radio bearer IEs
  potentiallySuccessfulBearerList    RB-IdentityList                 OPTIONAL,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions              SEQUENCE {} OPTIONAL
}

```

```

-- *****
--
-- RADIO BEARER RELEASE
--
-- *****

RadioBearerRelease-r3 ::= CHOICE {
  r3          SEQUENCE {
    radioBearerRelease-r3      RadioBearerRelease-r3-IEs,
    nonCriticalExtensions      SEQUENCE {} OPTIONAL
  },
  criticalExtensions          SEQUENCE {}
}

RadioBearerRelease-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  integrityProtectionModeInfo   IntegrityProtectionModeInfo   OPTIONAL,
  cipheringModeInfo             CipheringModeInfo             OPTIONAL,
  activationTime                 ActivationTime                 OPTIONAL,
  new-U-RNTI                     U-RNTI                     OPTIONAL,
  new-C-RNTI                     C-RNTI                     OPTIONAL,
  rrc-StateIndicator             RRC-StateIndicator,
  utran-DRX-CycleLengthCoeff    UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
  -- Core network IEs
  cn-InformationInfo            CN-InformationInfo            OPTIONAL,
  signallingConnectionRelIndication CN-DomainIdentity        OPTIONAL,
  -- UTRAN mobility IEs
  ura-Identity                  URA-Identity                  OPTIONAL,
  -- Radio bearer IEs
  rab-InformationReconfigList   RAB-InformationReconfigList   OPTIONAL,
  rb-InformationReleaseList     RB-InformationReleaseList     OPTIONAL,
  rb-InformationAffectedList    RB-InformationAffectedList    OPTIONAL,
  rb-WithPDCP-InfoList         RB-WithPDCP-InfoList         OPTIONAL,
  -- Transport channel IEs
  ul-CommonTransChInfo         UL-CommonTransChInfo         OPTIONAL,
  ul-deletedTransChInfoList     UL-DeletedTransChInfoList     OPTIONAL,
  ul-AddReconfTransChInfoList   UL-AddReconfTransChInfoList   OPTIONAL,
  modeSpecificTransChInfo      CHOICE {
    fdd          SEQUENCE {
      cpch-SetID          CPCH-SetID          OPTIONAL,
      addReconfTransChDRAC-Info DRAC-StaticInformationList OPTIONAL
    },
    tdd          NULL
  } OPTIONAL,
  dl-CommonTransChInfo         DL-CommonTransChInfo         OPTIONAL,
  dl-DeletedTransChInfoList     DL-DeletedTransChInfoList     OPTIONAL,
  dl-AddReconfTransChInfoList   DL-AddReconfTransChInfo2List   OPTIONAL,
  -- Physical channel IEs
  frequencyInfo                FrequencyInfo                OPTIONAL,
  maxAllowedUL-TX-Power         MaxAllowedUL-TX-Power         OPTIONAL,
  ul-ChannelRequirement        UL-ChannelRequirement        OPTIONAL,
  modeSpecificPhysChInfo       CHOICE {
    fdd          SEQUENCE {
      dl-PDSCH-Information DL-PDSCH-Information   OPTIONAL
    },
    tdd          NULL
  },
  dl-CommonInformation         DL-CommonInformation         OPTIONAL,
  dl-InformationPerRL-List     DL-InformationPerRL-List     OPTIONAL
}

-- *****
--
-- RADIO BEARER RELEASE COMPLETE
--
-- *****

RadioBearerReleaseComplete ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  ul-IntegProtActivationInfo     IntegrityProtActivationInfo     OPTIONAL,
  -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
  ul-TimingAdvance              UL-TimingAdvance              OPTIONAL,
  -- Radio bearer IEs
  rb-UL-CiphActivationTimeInfo   RB-ActivationTimeInfoList     OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions          SEQUENCE {} OPTIONAL
}

```

```

}
-- *****
--
-- RADIO BEARER RELEASE FAILURE
--
-- *****

RadioBearerReleaseFailure ::= SEQUENCE {
  -- User equipment IES
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  failureCause                   FailureCauseWithProtErr,
  -- Radio bearer IES
  potentiallySuccessfulBearerList RB-IdentityList                OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions          SEQUENCE {}                    OPTIONAL
}

-- *****
--
-- RADIO BEARER SETUP
--
-- *****

RadioBearerSetup-r3 ::= CHOICE {
  r3                             SEQUENCE {
    radioBearerSetup-r3          RadioBearerSetup-r3-IES,
    nonCriticalExtensions        SEQUENCE {}                    OPTIONAL
  },
  criticalExtensions             SEQUENCE {}
}

RadioBearerSetup-r3-IES ::= SEQUENCE {
  -- User equipment IES
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  integrityProtectionModeInfo    IntegrityProtectionModeInfo    OPTIONAL,
  cipheringModeInfo             CipheringModeInfo                    OPTIONAL,
  activationTime                 ActivationTime                      OPTIONAL,
  new-U-RNTI                     U-RNTI                            OPTIONAL,
  new-C-RNTI                     C-RNTI                            OPTIONAL,
  rrc-StateIndicator             RRC-StateIndicator,
  utran-DRX-CycleLengthCoeff     UTRAN-DRX-CycleLengthCoefficient  OPTIONAL,
  -- UTRAN mobility IES
  ura-Identity                   URA-Identity                        OPTIONAL,
  -- Core network IES
  cn-InformationInfo             CN-InformationInfo                OPTIONAL,
  -- Radio bearer IES
  srb-InformationSetupList       SRB-InformationSetupList          OPTIONAL,
  rab-InformationSetupList       RAB-InformationSetupList          OPTIONAL,
  rb-InformationAffectedList     RB-InformationAffectedList    OPTIONAL,
  -- Transport channel IES
  ul-CommonTransChInfo          UL-CommonTransChInfo            OPTIONAL,
  ul-deletedTransChInfoList      UL-DeletedTransChInfoList        OPTIONAL,
  ul-AddReconfTransChInfoList    UL-AddReconfTransChInfoList      OPTIONAL,
  modeSpecificTransChInfo        CHOICE {
    fdd                           SEQUENCE {
      cpch-SetID                  CPCH-SetID                    OPTIONAL,
      addReconfTransChDRAC-Info    DRAC-StaticInformationList  OPTIONAL
    },
    tdd                           NULL
  }
  dl-CommonTransChInfo          DL-CommonTransChInfo            OPTIONAL,
  dl-DeletedTransChInfoList      DL-DeletedTransChInfoList        OPTIONAL,
  dl-AddReconfTransChInfoList    DL-AddReconfTransChInfoList      OPTIONAL,
  -- Physical channel IES
  frequencyInfo                 FrequencyInfo                    OPTIONAL,
  maxAllowedUL-TX-Power          MaxAllowedUL-TX-Power          OPTIONAL,
  ul-ChannelRequirement          UL-ChannelRequirement          OPTIONAL,
  modeSpecificPhysChInfo        CHOICE {
    fdd                           SEQUENCE {
      dl-PDSCH-Information        DL-PDSCH-Information          OPTIONAL
    },
    tdd                           NULL
  },
  dl-CommonInformation          DL-CommonInformation            OPTIONAL,
  dl-InformationPerRL-List      DL-InformationPerRL-List        OPTIONAL
}

```

```

-- *****
--
-- RADIO BEARER SETUP COMPLETE
--
-- *****

RadioBearerSetupComplete ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  ul-IntegProtActivationInfo     IntegrityProtActivationInfo      OPTIONAL,
  -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
  ul-TimingAdvance              UL-TimingAdvance                OPTIONAL,
  start-Value                   START-Value                    OPTIONAL,
  -- Radio bearer IEs
  count-C-ActivationTime        ActivationTime                OPTIONAL,
  rb-UL-CiphActivationTimeInfo  RB-ActivationTimeInfoList  OPTIONAL,
  rb-WithPDCP-InfoList         RB-WithPDCP-InfoList      OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions         SEQUENCE {}                  OPTIONAL
}

-- *****
--
-- RADIO BEARER SETUP FAILURE
--
-- *****

RadioBearerSetupFailure ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  failureCause                   FailureCauseWithProtErr,
  -- Radio bearer IEs
  potentiallySuccessfulBearerList RB-IdentityList                OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions         SEQUENCE {}                  OPTIONAL
}

-- *****
--
-- RRC CONNECTION REJECT
--
-- *****

RRCConnectionReject-r3 ::= CHOICE {
  r3                             SEQUENCE {
    rrcConnectionReject-r3      RRCConnectionReject-r3-IEs,
    nonCriticalExtensions       SEQUENCE {} OPTIONAL
  },
  criticalExtensions            SEQUENCE {}
}

RRCConnectionReject-r3-IEs ::= SEQUENCE {
  -- TABULAR: Integrity protection shall not be performed on this message.
  -- User equipment IEs
  initialUE-Identity            InitialUE-Identity,
  rrc-TransactionIdentifier     RRC-TransactionIdentifier,
  rejectionCause                RejectionCause,
  waitTime                     WaitTime,
  redirectionInfo               RedirectionInfo                OPTIONAL
}

-- *****
--
-- RRC CONNECTION RELEASE
--
-- *****

RRCConnectionRelease-r3 ::= CHOICE {
  r3                             SEQUENCE {
    rrcConnectionRelease-r3     RRCConnectionRelease-r3-IEs,
    nonCriticalExtensions       SEQUENCE {} OPTIONAL
  },
  criticalExtensions            SEQUENCE {}
}

RRCConnectionRelease-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier     RRC-TransactionIdentifier,

```

```

n-308                                N-308                                OPTIONAL,
-- The IE above is conditional on the UE state.
releaseCause                          ReleaseCause,
rplmn-information                      Rplmn-Information                    OPTIONAL
}

-- *****
--
-- RRC CONNECTION RELEASE for CCCH
--
-- *****

RRCConnectionRelease-CCCH-r3 ::= CHOICE {
  r3                                    SEQUENCE {
    rrcConnectionRelease-CCCH-r3      RRCConnectionRelease-CCCH-r3-IEs,
    nonCriticalExtensions              SEQUENCE {} OPTIONAL
  },
  criticalExtensions                  SEQUENCE {}
}

RRCConnectionRelease-CCCH-r3-IEs ::= SEQUENCE {
  -- User equipment IES
  u-RNTI                              U-RNTI,
  -- The rest of the message is identical to the one sent on DCCH.
  rrcConnectionRelease                RRCConnectionRelease-r3-IEs
}

-- *****
--
-- RRC CONNECTION RELEASE COMPLETE
--
-- *****

RRCConnectionReleaseComplete ::= SEQUENCE {
  -- User equipment IES
  rrc-TransactionIdentifier            RRC-TransactionIdentifier,
  errorIndication                     FailureCauseWithProtErr          OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions                SEQUENCE {}          OPTIONAL
}

-- *****
--
-- RRC CONNECTION REQUEST
--
-- *****

RRCConnectionRequest ::= SEQUENCE {
  -- TABULAR: Integrity protection shall not be performed on this message.
  -- User equipment IES
  initialUE-Identity                  InitialUE-Identity,
  establishmentCause                  EstablishmentCause,
  protocolErrorIndicator               ProtocolErrorIndicator,
  -- The IE above is MD, but for compactness reasons no default value
  -- has been assigned to it.
  -- Measurement IES
  measuredResultsOnRACH                MeasuredResultsOnRACH          OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions                SEQUENCE {}          OPTIONAL
}

-- *****
--
-- RRC CONNECTION SETUP
--
-- *****

RRCConnectionSetup-r3 ::= CHOICE {
  r3                                    SEQUENCE {
    rrcConnectionSetup-r3              RRCConnectionSetup-r3-IEs,
    nonCriticalExtensions                SEQUENCE {} OPTIONAL
  },
  criticalExtensions                  SEQUENCE {}
}

RRCConnectionSetup-r3-IEs ::= SEQUENCE {
  -- TABULAR: Integrity protection shall not be performed on this message.
  -- User equipment IES

```

```

    initialUE-Identity          InitialUE-Identity,
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    activationTime              ActivationTime              OPTIONAL,
    new-U-RNTI                  U-RNTI,
    new-c-RNTI                  C-RNTI                    OPTIONAL,
    rrc-StateIndicator          RRC-StateIndicator,
    utran-DRX-CycleLengthCoeff  UTRAN-DRX-CycleLengthCoefficient,
    capabilityUpdateRequirement CapabilityUpdateRequirement OPTIONAL,
    -- TABULAR: If the IE is not present, the default value defined in 10.3.3.2 shall
    -- be used.
-- Radio bearer IEs
  srb-InformationSetupList      SRB-InformationSetupList2,
-- Transport channel IEs
  ul-CommonTransChInfo         UL-CommonTransChInfo          OPTIONAL,
  ul-AddReconfTransChInfoList  UL-AddReconfTransChInfoList,
  dl-CommonTransChInfo         DL-CommonTransChInfo          OPTIONAL,
  dl-AddReconfTransChInfoList  DL-AddReconfTransChInfoList,
-- Physical channel IEs
  frequencyInfo                FrequencyInfo              OPTIONAL,
  maxAllowedUL-TX-Power        MaxAllowedUL-TX-Power        OPTIONAL,
  ul-ChannelRequirement        UL-ChannelRequirement        OPTIONAL,
  dl-CommonInformation         DL-CommonInformation         OPTIONAL,
  dl-InformationPerRL-List     DL-InformationPerRL-List     OPTIONAL
}

-- *****
--
-- RRC CONNECTION SETUP COMPLETE
--
-- *****

RRCConnectionSetupComplete ::= SEQUENCE {
  -- TABULAR: Integrity protection shall not be performed on this message.
  -- User equipment IEs
  rrc-TransactionIdentifier    RRC-TransactionIdentifier,
  startList                    STARTList,
  ue-RadioAccessCapability     UE-RadioAccessCapability     OPTIONAL,
  -- Other IEs
  ue-RATSpecificCapability     InterRAT-UE-RadioAccessCapabilityList  OPTIONAL,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions        SEQUENCE {}      OPTIONAL
}

-- *****
--
-- RRC STATUS
--
-- *****

RRCStatus ::= SEQUENCE {
  -- Other IEs
  protocolErrorInformation     ProtocolErrorMoreInformation,
  -- TABULAR: Identification of received message is nested in
  -- ProtocolErrorMoreInformation
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions        SEQUENCE {}      OPTIONAL
}

SecurityModeCommand-r3 ::= CHOICE {
  r3                            SEQUENCE {
    securityModeCommand-r3     SecurityModeCommand-r3-IEs,
    nonCriticalExtensions       SEQUENCE {}      OPTIONAL
  },
  criticalExtensions           SEQUENCE {}
}

-- *****
--
-- SECURITY MODE COMMAND
--
-- *****

SecurityModeCommand-r3-IEs ::= SEQUENCE {
  -- TABULAR: Integrity protection shall always be performed on this message.
  -- User equipment IEs
  rrc-TransactionIdentifier    RRC-TransactionIdentifier,
  securityCapability           SecurityCapability,
  cipheringModeInfo           CipheringModeInfo              OPTIONAL,

```

```

        integrityProtectionModeInfo    IntegrityProtectionModeInfo    OPTIONAL,
-- Core network IEs
        cn-DomainIdentity              CN-DomainIdentity
    }
-- *****
--
-- SECURITY MODE COMPLETE
--
-- *****

SecurityModeComplete ::= SEQUENCE {
-- TABULAR: Integrity protection shall always be performed on this message.

    -- User equipment IEs
        rrc-TransactionIdentifier      RRC-TransactionIdentifier,
        ul-IntegProtActivationInfo     IntegrityProtActivationInfo    OPTIONAL,
    -- Radio bearer IEs
        rb-UL-CiphActivationTimeInfo  RB-ActivationTimeInfoList     OPTIONAL,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}    OPTIONAL
    }
-- *****
--
-- SECURITY MODE FAILURE
--
-- *****

SecurityModeFailure ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier      RRC-TransactionIdentifier,
        failureCause                   FailureCauseWithProtErr,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}    OPTIONAL
    }
-- *****
--
-- SIGNALLING CONNECTION RELEASE
--
-- *****

SignallingConnectionRelease-r3 ::= CHOICE {
    r3
        SEQUENCE {
            signallingConnectionRelease-r3 SignallingConnectionRelease-r3-IEs,
            nonCriticalExtensions          SEQUENCE {}    OPTIONAL
        },
        criticalExtensions              SEQUENCE {}
    }
-- *****
--
-- SIGNALLING CONNECTION RELEASE REQUEST
--
-- *****

SignallingConnectionRelease-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
        rrc-TransactionIdentifier      RRC-TransactionIdentifier,
    -- Core network IEs
        cn-DomainIdentity              CN-DomainIdentity
    }
-- *****
--
-- SIGNALLING CONNECTION RELEASE REQUEST
--
-- *****

SignallingConnectionReleaseRequest ::= SEQUENCE {
    -- Core network IEs
        cn-DomainIdentity              CN-DomainIdentity,
    -- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}    OPTIONAL
    }
-- *****
--
-- SYSTEM INFORMATION for BCH
--
-- *****

SystemInformation-BCH ::= SEQUENCE {

```

```

-- Other information elements
sfn-Prime                SFN-Prime,
payload                   CHOICE {
  noSegment                NULL,
  firstSegment             FirstSegment,
  subsequentSegment       SubsequentSegment,
  lastSegmentShort        LastSegmentShort,
  lastAndFirst            SEQUENCE {
    lastSegmentShort      LastSegmentShort,
    firstSegment          FirstSegmentShort
  },
  lastAndComplete         SEQUENCE {
    lastSegmentShort      LastSegmentShort,
    completeSIB-List      CompleteSIB-List
  },
  lastAndCompleteAndFirst SEQUENCE {
    lastSegmentShort      LastSegmentShort,
    completeSIB-List      CompleteSIB-List,
    firstSegment          FirstSegmentShort
  },
  completeSIB-List        CompleteSIB-List,
  completeAndFirst        SEQUENCE {
    completeSIB-List      CompleteSIB-List,
    firstSegment          FirstSegmentShort
  },
  completeSIB              CompleteSIB,
  lastSegment             LastSegment
}

-- *****
--
-- SYSTEM INFORMATION for FACH
--
-- *****

SystemInformation-FACH ::= SEQUENCE {
  -- Other information elements
  payload                   CHOICE {
    noSegment                NULL,
    firstSegment             FirstSegment,
    subsequentSegment       SubsequentSegment,
    lastSegmentShort        LastSegmentShort,
    lastAndFirst            SEQUENCE {
      lastSegmentShort      LastSegmentShort,
      firstSegment          FirstSegmentShort
    },
    lastAndComplete         SEQUENCE {
      lastSegmentShort      LastSegmentShort,
      completeSIB-List      CompleteSIB-List
    },
    lastAndCompleteAndFirst SEQUENCE {
      lastSegmentShort      LastSegmentShort,
      completeSIB-List      CompleteSIB-List,
      firstSegment          FirstSegmentShort
    },
    completeSIB-List        CompleteSIB-List,
    completeAndFirst        SEQUENCE {
      completeSIB-List      CompleteSIB-List,
      firstSegment          FirstSegmentShort
    },
    completeSIB              CompleteSIB,
    lastSegment             LastSegment
  }
}

-- *****
--
-- First segment
--
-- *****

FirstSegment ::= SEQUENCE {
  -- Other information elements
  sib-Type                  SIB-Type,
  seg-Count                 SegCount,
  sib-Data-fixed            SIB-Data-fixed
}

```

```

-- *****
--
-- First segment (short)
--
-- *****

FirstSegmentShort ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        seg-Count         SegCount,
        sib-Data-variable SIB-Data-variable
    }

-- *****
--
-- Subsequent segment
--
-- *****

SubsequentSegment ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        segmentIndex     SegmentIndex,
        sib-Data-fixed    SIB-Data-fixed
    }

-- *****
--
-- Last segment
--
-- *****

LastSegment ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        segmentIndex     SegmentIndex,
        sib-Data-fixed    SIB-Data-fixed
        -- In case the SIB data is less than 222 bits, padding shall be used
        -- The same padding bits shall be used as defined in clause 12.1
    }

LastSegmentShort ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        segmentIndex     SegmentIndex,
        sib-Data-variable SIB-Data-variable
    }

-- *****
--
-- Complete SIB
--
-- *****

CompleteSIB-List ::=
    SEQUENCE (SIZE (1..maxSIBperMsg)) OF
        CompleteSIBshort

CompleteSIB ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        sib-Data-fixed    BIT STRING (SIZE (226))
        -- In case the SIB data is less than 226 bits, padding shall be used
        -- The same padding bits shall be used as defined in clause 12.1
    }

CompleteSIBshort ::=
    SEQUENCE {
        -- Other information elements
        sib-Type          SIB-Type,
        sib-Data-variable SIB-Data-variable
    }

-- *****
--
-- SYSTEM INFORMATION CHANGE INDICATION
--
-- *****

```

```

SystemInformationChangeIndication ::= SEQUENCE {
  -- Other IEs
  bcch-ModificationInfo          BCCH-ModificationInfo,
  -- Extension mechanism for non- release99 information
  nonCriticalExtensions          SEQUENCE {} OPTIONAL
}

-- *****
--
-- TRANSPORT CHANNEL RECONFIGURATION
--
-- *****

TransportChannelReconfiguration-r3 ::= CHOICE {
  r3                             SEQUENCE {
    transportChannelReconfiguration-r3
    TransportChannelReconfiguration-r3-IEs,
    nonCriticalExtensions          SEQUENCE {} OPTIONAL
  },
  criticalExtensions             SEQUENCE {}
}

TransportChannelReconfiguration-r3-IEs ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier       RRC-TransactionIdentifier,
  integrityProtectionModeInfo     IntegrityProtectionModeInfo      OPTIONAL,
  cipheringModeInfo              CipheringModeInfo                OPTIONAL,
  activationTime                  ActivationTime                    OPTIONAL,
  new-U-RNTI                      U-RNTI                          OPTIONAL,
  new-C-RNTI                      C-RNTI                          OPTIONAL,
  rrc-StateIndicator              RRC-StateIndicator,
  utran-DRX-CycleLengthCoeff      UTRAN-DRX-CycleLengthCoefficient  OPTIONAL,
  -- Core network IEs
  cn-InformationInfo              CN-InformationInfo              OPTIONAL,
  -- UTRAN mobility IEs
  ura-Identity                    URA-Identity                    OPTIONAL,
  -- Radio bearer IEs
  rb-WithPDCP-InfoList           RB-WithPDCP-InfoList           OPTIONAL,
  -- Transport channel IEs
  ul-CommonTransChInfo           UL-CommonTransChInfo           OPTIONAL,
  ul-AddReconfTransChInfoList    UL-AddReconfTransChInfoList    OPTIONAL,
  modeSpecificTransChInfo        CHOICE {
    fdd                            SEQUENCE {
      cpch-SetID                   CPCH-SetID                   OPTIONAL,
      addReconfTransChDRAC-Info     DRAC-StaticInformationList  OPTIONAL
    },
    tdd                            NULL
  } OPTIONAL,
  dl-CommonTransChInfo           DL-CommonTransChInfo           OPTIONAL,
  dl-AddReconfTransChInfoList    DL-AddReconfTransChInfoList    OPTIONAL,
  -- Physical channel IEs
  frequencyInfo                  FrequencyInfo                    OPTIONAL,
  maxAllowedUL-TX-Power          MaxAllowedUL-TX-Power          OPTIONAL,
  ul-ChannelRequirement          UL-ChannelRequirement          OPTIONAL,
  modeSpecificPhysChInfo         CHOICE {
    fdd                            SEQUENCE {
      dl-PDSCH-Information          DL-PDSCH-Information          OPTIONAL
    },
    tdd                            NULL
  },
  dl-CommonInformation           DL-CommonInformation           OPTIONAL,
  dl-InformationPerRL-List       DL-InformationPerRL-List       OPTIONAL
}

-- *****
--
-- TRANSPORT CHANNEL RECONFIGURATION COMPLETE
--
-- *****

TransportChannelReconfigurationComplete ::= SEQUENCE {
  -- User equipment IEs
  rrc-TransactionIdentifier       RRC-TransactionIdentifier,
  ul-IntegProtActivationInfo      IntegrityProtActivationInfo      OPTIONAL,
  -- TABULAR: UL-TimingAdvance is applicable for TDD mode only.
  ul-TimingAdvance                UL-TimingAdvance                OPTIONAL,
  -- Radio bearer IEs
  count-C-ActivationTime         ActivationTime                    OPTIONAL,

```

```

        rb-UL-CiphActivationTimeInfo    RB-ActivationTimeInfoList    OPTIONAL,
        rb-WithPDCP-InfoList            RB-WithPDCP-InfoList        OPTIONAL,
-- Extension mechanism for non- release99 information
        nonCriticalExtensions           SEQUENCE {}          OPTIONAL
    }
-- *****
--
-- TRANSPORT CHANNEL RECONFIGURATION FAILURE
--
-- *****

TransportChannelReconfigurationFailure ::= SEQUENCE {
-- User equipment IEs
    rrc-TransactionIdentifier           RRC-TransactionIdentifier,
    failureCause                        FailureCauseWithProtErr,
-- Extension mechanism for non- release99 information
    nonCriticalExtensions               SEQUENCE {}          OPTIONAL
}
-- *****
--
-- TRANSPORT FORMAT COMBINATION CONTROL
--
-- *****

TransportFormatCombinationControl ::= SEQUENCE {
-- TABULAR: Integrity protection shall not be performed on this message when transmitting this
message
-- on the transparent mode signalling DCCH.
    rrc-TransactionIdentifier           RRC-TransactionIdentifier    OPTIONAL,
-- The information element is not included when transmitting the message
-- on the transparent mode signalling DCCH
    modeSpecificInfo                   CHOICE {
        fdd                             NULL,
        tdd                             SEQUENCE {
            tfcs-ID                      TFCS-Identity    OPTIONAL
        }
    },
    dpch-TFCS-InUplink                 TFC-Subset,
    tfc-ControlDuration                 TFC-ControlDuration        OPTIONAL,
-- The information element is not included when transmitting the message
-- on the transparent mode signalling DCCH and is optional otherwise
-- Extension mechanism for non- release99 information
    nonCriticalExtensions               SEQUENCE {}          OPTIONAL
}
-- *****
--
-- TRANSPORT FORMAT COMBINATION CONTROL FAILURE
--
-- *****

TransportFormatCombinationControlFailure ::= SEQUENCE {
-- User equipment IEs
    rrc-TransactionIdentifier           RRC-TransactionIdentifier,
    failureCause                        FailureCauseWithProtErr,
-- Extension mechanism for non- release99 information
    nonCriticalExtensions               SEQUENCE {}          OPTIONAL
}
-- *****
--
-- UE CAPABILITY ENQUIRY
--
-- *****

UECapabilityEnquiry-r3 ::= CHOICE {
    r3                                  SEQUENCE {
        ueCapabilityEnquiry-r3         UECapabilityEnquiry-r3-IEs,
        nonCriticalExtensions          SEQUENCE {}          OPTIONAL
    },
    criticalExtensions                 SEQUENCE {}
}

UECapabilityEnquiry-r3-IEs ::= SEQUENCE {
-- User equipment IEs
    rrc-TransactionIdentifier           RRC-TransactionIdentifier,

```

```

        capabilityUpdateRequirement      CapabilityUpdateRequirement
    }
-- *****
--
-- UE CAPABILITY INFORMATION
--
-- *****

UECapabilityInformation ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier            RRC-TransactionIdentifier            OPTIONAL,
    ue-RadioAccessCapability             UE-RadioAccessCapability             OPTIONAL,
    -- Other IEs
    ue-RATSpecificCapability              InterRAT-UE-RadioAccessCapabilityList
    OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions                 SEQUENCE {}                OPTIONAL
}

-- *****
--
-- UE CAPABILITY INFORMATION CONFIRM
--
-- *****

UECapabilityInformationConfirm-r3 ::= CHOICE {
    r3                                     SEQUENCE {
        ueCapabilityInformationConfirm-r3
        nonCriticalExtensions             SEQUENCE {}                OPTIONAL
    },
    criticalExtensions                   SEQUENCE {}
}

UECapabilityInformationConfirm-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier            RRC-TransactionIdentifier
}

-- *****
--
-- UPLINK DIRECT TRANSFER
--
-- *****

UplinkDirectTransfer ::= SEQUENCE {
    -- Core network IEs
    cn-DomainIdentity                    CN-DomainIdentity,
    nas-Message                           NAS-Message,
    -- Measurement IEs
    measuredResultsOnRACH                 MeasuredResultsOnRACH            OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions                 SEQUENCE {}                OPTIONAL
}

-- *****
--
-- UPLINK PHYSICAL CHANNEL CONTROL
--
-- *****

UplinkPhysicalChannelControl-r3 ::= CHOICE {
    r3                                     SEQUENCE {
        uplinkPhysicalChannelControl-r3 UplinkPhysicalChannelControl-r3-IEs,
        nonCriticalExtensions             SEQUENCE {}                OPTIONAL
    },
    criticalExtensions                   SEQUENCE {}
}

UplinkPhysicalChannelControl-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier            RRC-TransactionIdentifier,
    -- Physical channel IEs
    ccTrCH-PowerControlInfo              CCTrCH-PowerControlInfo          OPTIONAL,
    timingAdvance                         UL-TimingAdvanceControl          OPTIONAL,
    alpha                                  Alpha                             OPTIONAL,
}

```

```

        prach-ConstantValue          ConstantValue          OPTIONAL,
        pusch-ConstantValue          ConstantValue          OPTIONAL
    }
-- *****
--
-- URA UPDATE
--
-- *****

URAUUpdate ::= SEQUENCE {
    -- User equipment IEs
    u-RNTI                U-RNTI,
    ura-UpdateCause       URA-UpdateCause,
    protocolErrorIndicator ProtocolErrorIndicatorWithMoreInfo,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions SEQUENCE {} OPTIONAL
}
-- *****
--
-- URA UPDATE CONFIRM
--
-- *****

URAUUpdateConfirm-r3 ::= CHOICE {
    r3 SEQUENCE {
        uraUpdateConfirm-r3 URAUpdateConfirm-r3-IEs,
        nonCriticalExtensions SEQUENCE {} OPTIONAL
    },
    criticalExtensions SEQUENCE {}
}

URAUUpdateConfirm-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    rrc-TransactionIdentifier RRC-TransactionIdentifier,
    integrityProtectionModeInfo IntegrityProtectionModeInfo OPTIONAL,
    cipheringModeInfo         CipheringModeInfo OPTIONAL,
    new-U-RNTI                 U-RNTI OPTIONAL,
    new-C-RNTI                 C-RNTI OPTIONAL,
    rrc-StateIndicator         RRC-StateIndicator,
    utran-DRX-CycleLengthCoeff UTRAN-DRX-CycleLengthCoefficient OPTIONAL,
    -- CN information elements
    cn-InformationInfo         CN-InformationInfo OPTIONAL,
    -- UTRAN mobility IEs
    ura-Identity               URA-Identity OPTIONAL,
    -- Radio bearer IEs
    rb-WithPDCP-InfoList       RB-WithPDCP-InfoList OPTIONAL
}
-- *****
--
-- URA UPDATE CONFIRM for CCCH
--
-- *****

URAUUpdateConfirm-CCCH-r3 ::= CHOICE {
    r3 SEQUENCE {
        uraUpdateConfirm-CCCH-r3 URAUpdateConfirm-CCCH-r3-IEs,
        nonCriticalExtensions     SEQUENCE {} OPTIONAL
    },
    criticalExtensions SEQUENCE {}
}

URAUUpdateConfirm-CCCH-r3-IEs ::= SEQUENCE {
    -- User equipment IEs
    u-RNTI                U-RNTI,
    -- The rest of the message is identical to the one sent on DCCH.
    uraUpdateConfirm       URAUpdateConfirm-r3-IEs
}
-- *****
--
-- UTRAN MOBILITY INFORMATION
--
-- *****

UTRANMobilityInformation ::= SEQUENCE {

```

```

-- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  integrityProtectionModeInfo   IntegrityProtectionModeInfo   OPTIONAL,
  cipheringModeInfo             CipheringModeInfo                   OPTIONAL,
  new-U-RNTI                    U-RNTI                               OPTIONAL,
  new-C-RNTI                    C-RNTI                               OPTIONAL,
  ue-ConnTimersAndConstants     UE-ConnTimersAndConstants     OPTIONAL,
-- CN information elements
  cn-InformationInfo            CN-InformationInfo                 OPTIONAL,
-- UTRAN mobility IEs
  ura-Identity                  URA-Identity                       OPTIONAL,
-- Radio bearer IEs
  count-C-ActivationTime        ActivationTime                       OPTIONAL,
  rb-WithPDCP-InfoList         RB-WithPDCP-InfoList           OPTIONAL,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions         SEQUENCE {}                   OPTIONAL
}

-- *****
--
-- UTRAN MOBILITY INFORMATION CONFIRM
--
-- *****

UTRANMobilityInformationConfirm ::= SEQUENCE {
-- User equipment IEs
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  ul-IntegProtActivationInfo     IntegrityProtActivationInfo     OPTIONAL,
-- Radio bearer IEs
  rb-UL-CiphActivationTimeInfo  RB-ActivationTimeInfoList     OPTIONAL,
  rb-WithPDCP-InfoList         RB-WithPDCP-InfoList           OPTIONAL,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions         SEQUENCE {}                   OPTIONAL
}

-- *****
--
-- UTRAN MOBILITY INFORMATION FAILURE
--
-- *****

UTRANMobilityInformationFailure ::= SEQUENCE {
-- UE information elements
  rrc-TransactionIdentifier      RRC-TransactionIdentifier,
  failureCause                  FailureCauseWithProtErr,
-- Extension mechanism for non- release99 information
  nonCriticalExtensions         SEQUENCE {}                   OPTIONAL
}

END

```

11.3 Information element definitions

InformationElements DEFINITIONS AUTOMATIC TAGS ::=

```

-- *****
--
-- CORE NETWORK INFORMATION ELEMENTS (10.3.1)
--
-- *****

```

BEGIN

IMPORTS

```

hiPDSCHidentities,
hiPUSCHidentities,
hiRM,
maxAC,
maxAdditionalMeas,
maxASC,
maxASCmap,
maxASCpersist,
maxCCTrCH,
maxCellMeas,
maxCellMeas-1,
maxCNdomains,

```

```

maxCPCHsets,
maxDPCH-DLchan,
maxDPCHcodesPerTS,
maxDPDCH-UL,
maxDRACclasses,
maxFACH,
maxFreq,
maxFrequencybands,
maxInterSysMessages,
maxLoCHperRLC,
maxMeasEvent,
maxMeasIntervals,
maxMeasParEvent,
maxNumCDMA2000Freqs,
maxNumFDDFreqs,
maxNumGSMFreqRanges,
maxNumTDDFreqs,
maxOtherRAT,
maxPagel,
maxPCPCH-APsig,
maxPCPCH-APsubCh,
maxPCPCH-CDSig,
maxPCPCH-CDSUBch,
maxPCPCH-SF,
maxPCPCHs,
maxPDCPAlgoType,
maxPDSCH,
maxPDSCH-TFCIgroups,
maxPRACH,
maxPUSCH,
maxRABsetup,
maxRAT,
maxRB,
maxRBallRABs,
maxRBMuxOptions,
maxRBperRAB,
maxReportedGSMCells,
maxSRBsetup,
maxRL,
maxRL-1,
maxSCCPCH,
maxSat,
maxSIB,
maxSIB-FACH,
maxSig,
maxSubCh,
maxSystemCapability,
maxTF,
maxTF-CPCH,
maxTFC,
maxTFCI-2-Combs,
maxTGPS,
maxTrCH,
maxTS,
maxTS-1,
maxURA
FROM Constant-definitions;

CN-DomainIdentity ::=
    ENUMERATED {
        cs-domain,
        ps-domain }

CN-DomainInformation ::=
    SEQUENCE {
        cn-DomainIdentity
        cn-DomainSpecificNAS-Info
    }

CN-DomainInformationList ::=
    SEQUENCE (SIZE (1..maxCNdomains)) OF
        CN-DomainInformation

CN-DomainSysInfo ::=
    SEQUENCE {
        cn-DomainIdentity
        cn-Type
            gsm-MAP
            ansi-41
        },
        cn-DRX-CycleLengthCoeff
    }
    CN-DRX-CycleLengthCoefficient

```

```

CN-DomainSysInfoList ::= SEQUENCE (SIZE (1..maxCNdomains)) OF
                           CN-DomainSysInfo

CN-InformationInfo ::= SEQUENCE {
  plmn-Identity           PLMN-Identity           OPTIONAL,
  cn-CommonGSM-MAP-NAS-SysInfo NAS-SystemInformationGSM-MAP OPTIONAL,
  cn-DomainInformationList CN-DomainInformationList OPTIONAL
}

Digit ::= INTEGER (0..9)

IMEI ::= SEQUENCE (SIZE (15)) OF
         IMEI-Digit

IMEI-Digit ::= INTEGER (0..15)

IMSI-GSM-MAP ::= SEQUENCE (SIZE (6..15)) OF
                 Digit

IntraDomainNasNodeSelector ::= BIT STRING (SIZE (16))

LAI ::= SEQUENCE {
  plmn-Identity PLMN-Identity,
  lac          BIT STRING (SIZE (16))
}

MCC ::= SEQUENCE (SIZE (3)) OF
        Digit

MNC ::= SEQUENCE (SIZE (2..3)) OF
        Digit

NAS-Message ::= OCTET STRING (SIZE (1..4095))

NAS-Synchronisation-Indicator ::= BIT STRING(SIZE(4))

NAS-SystemInformationGSM-MAP ::= OCTET STRING (SIZE (1..8))

P-TMSI-GSM-MAP ::= BIT STRING (SIZE (32))

PagingRecordTypeID ::= ENUMERATED {
  imsi-GSM-MAP,
  tmsi-GSM-MAP-P-TMSI,
  imsi-DS-41,
  tmsi-DS-41 }

PLMN-Identity ::= SEQUENCE {
  mcc MCC,
  mnc MNC
}

PLMN-Type ::= CHOICE {
  gsm-MAP SEQUENCE {
    plmn-Identity
  },
  ansi-41 SEQUENCE {
    p-REV,
    min-P-REV,
    sid,
    nid
  },
  gsm-MAP-and-ANSI-41 SEQUENCE {
    plmn-Identity,
    p-REV,
    min-P-REV,
    sid,
    nid
  }
}

RAB-Identity ::= CHOICE {
  gsm-MAP-RAB-Identity BIT STRING (SIZE (8)),
  ansi-41-RAB-Identity BIT STRING (SIZE (8))
}

RAI ::= SEQUENCE {
  lai LAI,
  rac RoutingAreaCode
}

```

```

RoutingAreaCode ::=          BIT STRING (SIZE (8))

TMSI-GSM-MAP ::=          BIT STRING (SIZE (32))

-- *****
--
--      UTRAN MOBILITY INFORMATION ELEMENTS (10.3.2)
--
-- *****

AccessClassBarred ::=          ENUMERATED {
                                barred, notBarred }

AccessClassBarredList ::=      SEQUENCE (SIZE (maxAC)) OF
                                AccessClassBarred

AllowedIndicator ::=          ENUMERATED {
                                allowed, notAllowed }

CellAccessRestriction ::=      SEQUENCE {
                                cellBarred                CellBarred,
                                cellReservedForOperatorUse ReservedIndicator,
                                cellReservedForSOLSA       ReservedIndicator,
                                accessClassBarredList      AccessClassBarredList          OPTIONAL
                                }

CellBarred ::=                CHOICE {
                                barred                      SEQUENCE {
                                    intraFreqCellReselectionInd AllowedIndicator,
                                    t-Barred                    T-Barred
                                },
                                notBarred                  NULL
                                }

CellIdentity ::=              BIT STRING (SIZE (28))

CellSelectReselectInfoSIB-3-4 ::= SEQUENCE {
                                mappingInfo                MappingInfo          OPTIONAL,
                                cellSelectQualityMeasure    CHOICE {
                                    cpich-Ec-No             SEQUENCE {
                                        q-HYST-2-S           Q-Hyst-S          OPTIONAL
                                        -- Default value for q-HYST-2-S is q-HYST-1-S
                                    },
                                    cpich-RSCP              NULL
                                },
                                modeSpecificInfo           CHOICE {
                                    fdd                     SEQUENCE {
                                        s-Intrasearch        S-SearchQual    OPTIONAL,
                                        s-Intersearch       S-SearchQual    OPTIONAL,
                                        s-SearchHCS         S-SearchRXLEV   OPTIONAL,
                                        rat-List            RAT-FDD-InfoList OPTIONAL,
                                        q-QualMin           Q-QualMin,
                                        q-RxlevMin          Q-RxlevMin
                                    },
                                    tdd                     SEQUENCE {
                                        s-Intrasearch        S-SearchRXLEV   OPTIONAL,
                                        s-Intersearch       S-SearchRXLEV   OPTIONAL,
                                        s-SearchHCS         S-SearchRXLEV   OPTIONAL,
                                        rat-List            RAT-TDD-InfoList OPTIONAL,
                                        q-RxlevMin          Q-RxlevMin
                                    }
                                },
                                q-Hyst-1-S                Q-Hyst-S,
                                t-Reselection-S           T-Reselection-S,
                                hcs-ServingCellInformation HCS-ServingCellInformation OPTIONAL,
                                maxAllowedUL-TX-Power     MaxAllowedUL-TX-Power
                                }

MapParameter ::=              INTEGER (0..99)

Mapping ::=                    SEQUENCE {
                                rat                        RAT,
                                mappingFunctionParameterList MappingFunctionParameterList
                                }

MappingFunctionParameter ::=    SEQUENCE {
                                functionType              MappingFunctionType,

```

```

    mapParameter1                MapParameter                OPTIONAL,
    mapParameter2                MapParameter,
    upperLimit                    UpperLimit                OPTIONAL
    -- The parameter is conditional on the number of repetition
}

MappingFunctionParameterList ::= SEQUENCE (SIZE (1..maxMeasIntervals)) OF
    MappingFunctionParameter

MappingFunctionType ::= ENUMERATED {
    linear,
    functionType2,
    functionType3,
    functionType4 }

MappingInfo ::= SEQUENCE (SIZE (1..maxRAT)) OF
    Mapping

-- Actual value = IE value * 2
Q-Hyst-S ::= INTEGER (0..20)

RAT ::= ENUMERATED {
    ultra-FDD,
    ultra-TDD,
    gsm,
    cdma2000 }

RAT-FDD-Info ::= SEQUENCE {
    rat-Identifier                RAT-Identifier,
    s-SearchRAT                  S-SearchQual,
    s-HCS-RAT                    S-SearchRXLEV                OPTIONAL,
    s-Limit-SearchRAT            S-SearchQual
}

RAT-FDD-InfoList ::= SEQUENCE (SIZE (1..maxOtherRAT)) OF
    RAT-FDD-Info

RAT-Identifier ::= ENUMERATED {
    gsm, cdma2000 }

RAT-TDD-Info ::= SEQUENCE {
    rat-Identifier                RAT-Identifier,
    s-SearchRAT                  S-SearchRXLEV,
    s-HCS-RAT                    S-SearchRXLEV                OPTIONAL,
    s-Limit-SearchRAT            S-SearchRXLEV
}

RAT-TDD-InfoList ::= SEQUENCE (SIZE (1..maxOtherRAT)) OF
    RAT-TDD-Info

ReservedIndicator ::= ENUMERATED {
    reserved,
    notReserved }

-- Actual value = IE value * 2
S-SearchQual ::= INTEGER (-16..10)

-- Actual value = (IE value * 2) + 1
S-SearchRXLEV ::= INTEGER (-53..45)

T-Barred ::= ENUMERATED {
    s10, s20, s40, s80,
    s160, s320, s640, s1280 }

T-Reselection-S ::= INTEGER (0..31)

-- The used range depends on the RAT used.
UpperLimit ::= INTEGER (1..91)

URA-Identity ::= BIT STRING (SIZE (16))

URA-IdentityList ::= SEQUENCE (SIZE (1..maxURA)) OF
    URA-Identity

-- *****
--
-- USER EQUIPMENT INFORMATION ELEMENTS (10.3.3)
--

```

```

-- *****
ActivationTime ::=                               INTEGER (0..255)
-- TABULAR : value 'now' always appear as default, and is encoded by absence of the field

BackoffControlParams ::=                       SEQUENCE {
    n-AP-RetransMax                             N-AP-RetransMax,
    n-AccessFails                               N-AccessFails,
    nf-BO-NoAICH                                NF-BO-NoAICH,
    ns-BO-Busy                                  NS-BO-Busy,
    nf-BO-AllBusy                               NF-BO-AllBusy,
    nf-BO-Mismatch                              NF-BO-Mismatch,
    t-CPCH                                       T-CPCH
}

C-RNTI ::=                                     BIT STRING (SIZE (16))

CapabilityUpdateRequirement ::=                SEQUENCE {
    ue-RadioCapabilityUpdateRequirement          BOOLEAN,
    systemSpecificCapUpdateReqList              SystemSpecificCapUpdateReqList    OPTIONAL
}

CellUpdateCause ::=                           ENUMERATED {
    cellReselection,
    periodicalCellUpdate,
    uplinkDataTransmission,
    utran-pagingResponse,
    re-enteredServiceArea,
    radiolinkFailure,
    rlc-unrecoverableError,
    spare1 }

ChipRateCapability ::=                        ENUMERATED {
    mcps3-84, mcps1-28 }

CipherringAlgorithm ::=                       ENUMERATED {
    uea0, uea1 }

CipherringModeCommand ::=                    CHOICE {
    startRestart                                CipherringAlgorithm,
    stopCipherring                             NULL
}

CipherringModeInfo ::=                       SEQUENCE {
    cipherringModeCommand                      CipherringModeCommand,
    -- TABULAR: The cipherring algorithm is included in
    -- the CipherringModeCommand.
    activationTimeForDPCH                      ActivationTime                      OPTIONAL,
    rb-DL-CiphActivationTimeInfo              RB-ActivationTimeInfoList         OPTIONAL
}

CN-DRX-CycleLengthCoefficient ::=            INTEGER (6..9)

CN-PagedUE-Identity ::=                     CHOICE {
    imsi-GSM-MAP                               IMSI-GSM-MAP,
    tmsi-GSM-MAP                               TMSI-GSM-MAP,
    p-TMSI-GSM-MAP                             P-TMSI-GSM-MAP,
    imsi-DS-41                                 IMSI-DS-41,
    tmsi-DS-41                                 TMSI-DS-41
}

CompressedModeMeasCapability ::=             SEQUENCE {
    fdd-Measurements                           BOOLEAN,
    -- TABULAR: The IEs below are made optional since they are conditional based
    -- on another information element. Their absence corresponds to the case where
    -- the condition is not true.
    tdd-Measurements                           BOOLEAN                            OPTIONAL,
    gsm-Measurements                           GSM-Measurements                   OPTIONAL,
    multiCarrierMeasurements                   BOOLEAN                            OPTIONAL
}

CPCH-Parameters ::=                         SEQUENCE {
    initialPriorityDelayList                    InitialPriorityDelayList            OPTIONAL,
    backoffControlParams                       BackoffControlParams,
    powerControlAlgorithm                      PowerControlAlgorithm,
    -- TABULAR: TPC step size nested inside PowerControlAlgorithm
    dl-DPCCH-BER                              DL-DPCCH-BER
}

```

```

}

DL-DPCCH-BER ::=                               INTEGER (0..63)

DL-PhysChCapabilityFDD ::=                     SEQUENCE {
  maxNoDPCH-PDSCH-Codes                       INTEGER (1..8),
  maxNoPhysChBitsReceived                     MaxNoPhysChBitsReceived,
  supportForSF-512                            BOOLEAN,
  supportOfPDSCH                              BOOLEAN,
  simultaneousSCCPCH-DPCH-Reception           SimultaneousSCCPCH-DPCH-Reception
}

DL-PhysChCapabilityTDD ::=                     SEQUENCE {
  maxTS-PerFrame                              MaxTS-PerFrame,
  maxPhysChPerFrame                          MaxPhysChPerFrame,
  minimumSF                                   MinimumSF-DL,
  supportOfPDSCH                              BOOLEAN,
  maxPhysChPerTS                             MaxPhysChPerTS
}

DL-TransChCapability ::=                      SEQUENCE {
  maxNoBitsReceived                          MaxNoBits,
  maxConvCodeBitsReceived                   MaxNoBits,
  turboDecodingSupport                      TurboSupport,
  maxSimultaneousTransChs                   MaxSimultaneousTransChsDL,
  maxSimultaneousCCTrCH-Count               MaxSimultaneousCCTrCH-Count,
  maxReceivedTransportBlocks                MaxTransportBlocksDL,
  maxNumberOfTFC-InTFCS                     MaxNumberOfTFC-InTFCS-DL,
  maxNumberOfTF                             MaxNumberOfTF
}

DRAC-SysInfo ::=                             SEQUENCE {
  transmissionProbability                   TransmissionProbability,
  maximumBitRate                           MaximumBitRate
}

DRAC-SysInfoList ::=                         SEQUENCE (SIZE (1..maxDRACclasses)) OF
  DRAC-SysInfo

ESN-DS-41 ::=                                BIT STRING (SIZE (32))

EstablishmentCause ::=                       ENUMERATED {
  originatingConversationalCall,
  originatingStreamingCall,
  originatingInteractiveCall,
  originatingBackgroundCall,
  originatingSubscribedTrafficCall,
  terminatingConversationalCall,
  terminatingStreamingCall,
  terminatingInteractiveCall,
  terminatingBackgroundCall,
  emergencyCall,
  interRAT-CellReselection,
  interRAT-CellChangeOrder,
  registration,
  detach,
  highPrioritySignalling,
  lowPrioritySignalling,
  callRe-establishment,
  spare1 }

FailureCauseWithProtErr ::=                  CHOICE {
  configurationUnsupported                   NULL,
  physicalChannelFailure                    NULL,
  incompatibleSimultaneousReconfiguration    NULL,
  compressedModeRuntimeError                TGPSI,
  protocolError                             ProtocolErrorInformation,
  cellReselection                           NULL,
  invalidConfiguration                       NULL,
  configurationIncomplete                     NULL,
  unsupportedMeasurement                     NULL,
  spare1                                     NULL,
  spare2                                     NULL,
  spare3                                     NULL,
  spare4                                     NULL,
  spare5                                     NULL,
  spare6                                     NULL,
}

```

```

    spare7                                NULL
}

FailureCauseWithProtErrTrId ::=          SEQUENCE {
    rrc-TransactionIdentifier             RRC-TransactionIdentifier,
    failureCause                          FailureCauseWithProtErr
}

GSM-Measurements ::=                     SEQUENCE {
    gsm900                                BOOLEAN,
    dcs1800                               BOOLEAN,
    gsm1900                               BOOLEAN
}

ICS-Version ::=                           ENUMERATED {
    r99 }

IMSI-and-ESN-DS-41 ::=                   SEQUENCE {
    imsi-DS-41                            IMSI-DS-41,
    esn-DS-41                             ESN-DS-41
}

IMSI-DS-41 ::=                           OCTET STRING (SIZE (5..7))

InitialPriorityDelayList ::=              SEQUENCE (SIZE (maxASC)) OF
    NS-IP

InitialUE-Identity ::=                   CHOICE {
    imsi                                    IMSI-GSM-MAP,
    tmsi-and-LAI                          TMSI-and-LAI-GSM-MAP,
    p-TMSI-and-RAI                        P-TMSI-and-RAI-GSM-MAP,
    imei                                    IMEI,
    esn-DS-41                             ESN-DS-41,
    imsi-DS-41                            IMSI-DS-41,
    imsi-and-ESN-DS-41                    IMSI-and-ESN-DS-41,
    tmsi-DS-41                            TMSI-DS-41
}

IntegrityCheckInfo ::=                   SEQUENCE {
    messageAuthenticationCode             MessageAuthenticationCode,
    rrc-MessageSequenceNumber             RRC-MessageSequenceNumber
}

IntegrityProtActivationInfo ::=           SEQUENCE {
    rrc-MessageSequenceNumberList         RRC-MessageSequenceNumberList
}

IntegrityProtectionAlgorithm ::=          ENUMERATED {
    uia1 }

IntegrityProtectionModeCommand ::=        CHOICE {
    startIntegrityProtection              SEQUENCE {
        integrityProtInitNumber           IntegrityProtInitNumber
    },
    modify                                SEQUENCE {
        dl-IntegrityProtActivationInfo     IntegrityProtActivationInfo
    }
}

IntegrityProtectionModeInfo ::=           SEQUENCE {
    integrityProtectionModeCommand         IntegrityProtectionModeCommand,
    -- TABULAR: DL integrity protection activation info and Integrity
    -- protection intialisation number have been nested inside
    -- IntegrityProtectionModeCommand.
    integrityProtectionAlgorithm           IntegrityProtectionAlgorithm           OPTIONAL
}

IntegrityProtInitNumber ::=               BIT STRING (SIZE (32))

MaxHcContextSpace ::=                     ENUMERATED {
    by512, by1024, by2048, by4096,
    by8192 }

MaximumAM-EntityNumberRLC-Cap ::=         ENUMERATED {
    am3, am4, am5, am6,

```

```

        am8, am16, am32 }

-- Actual value = IE value * 16
MaximumBitRate ::= INTEGER (0..32)

MaximumRLC-WindowSize ::= ENUMERATED { mws2047, mws4095 }

MaxNoDPDCH-BitsTransmitted ::= ENUMERATED {
    b600, b1200, b2400, b4800,
    b9600, b19200, b28800, b38400,
    b48000, b57600 }

MaxNoBits ::= ENUMERATED {
    b640, b1280, b2560, b3840, b5120,
    b6400, b7680, b8960, b10240,
    b20480, b40960, b81920, b163840 }

MaxNoPhysChBitsReceived ::= ENUMERATED {
    b600, b1200, b2400, b3600,
    b4800, b7200, b9600, b14400,
    b19200, b28800, b38400, b48000,
    b57600, b67200, b76800 }

MaxNoSCCPCH-RL ::= ENUMERATED {
    r11 }

MaxNumberOfTF ::= ENUMERATED {
    tf32, tf64, tf128, tf256,
    tf512, tf1024 }

MaxNumberOfTFC-InTFCS-DL ::= ENUMERATED {
    tfc16, tfc32, tfc48, tfc64, tfc96,
    tfc128, tfc256, tfc512, tfc1024 }

MaxNumberOfTFC-InTFCS-UL ::= ENUMERATED {
    tfc4, tfc8, tfc16, tfc32, tfc48, tfc64,
    tfc96, tfc128, tfc256, tfc512, tfc1024 }

MaxPhysChPerFrame ::= INTEGER (1..224)

MaxPhysChPerTimeslot ::= ENUMERATED {
    ts1, ts2 }

MaxPhysChPerTS ::= INTEGER (1..16)

MaxSimultaneousCCTrCH-Count ::= INTEGER (1..8)

MaxSimultaneousTransChsDL ::= ENUMERATED {
    e4, e8, e16, e32 }

MaxSimultaneousTransChsUL ::= ENUMERATED {
    e2, e4, e8, e16, e32 }

MaxTransportBlocksDL ::= ENUMERATED {
    tb4, tb8, tb16, tb32, tb48,
    tb64, tb96, tb128, tb256, tb512 }

MaxTransportBlocksUL ::= ENUMERATED {
    tb2, tb4, tb8, tb16, tb32, tb48,
    tb64, tb96, tb128, tb256, tb512 }

MaxTS-PerFrame ::= INTEGER (1..14)

-- TABULAR: This IE contains dependencies to UE-MultiModeRAT-Capability,
-- the conditional fields have been left mandatory for now.
MeasurementCapability ::= SEQUENCE {
    downlinkCompressedMode          CompressedModeMeasCapability,
    uplinkCompressedMode            CompressedModeMeasCapability
}

MessageAuthenticationCode ::= BIT STRING (SIZE (32))

MinimumSF-DL ::= ENUMERATED {
    sf1, sf16 }

MinimumSF-UL ::= ENUMERATED {
    sf1, sf2, sf4, sf8, sf16 }

```

```

MultiModeCapability ::=          ENUMERATED {
                                   tdd, fdd, fdd-tdd }

MultiRAT-Capability ::=         SEQUENCE {
                                   supportOfGSM          BOOLEAN,
                                   supportOfMulticarrier  BOOLEAN
                                }

N-300 ::=                       INTEGER (0..7)
N-301 ::=                       INTEGER (0..7)
N-302 ::=                       INTEGER (0..7)
N-304 ::=                       INTEGER (0..7)
N-308 ::=                       INTEGER (1..8)
N-310 ::=                       INTEGER (0..7)
N-312 ::=                       ENUMERATED {
                                   s1, s50, s100, s200, s400,
                                   s600, s800, s1000 }
N-313 ::=                       ENUMERATED {
                                   s1, s2, s4, s10, s20,
                                   s50, s100, s200 }
N-315 ::=                       ENUMERATED {
                                   s1, s50, s100, s200, s400,
                                   s600, s800, s1000 }

N-AccessFails ::=              INTEGER (1..64)
N-AP-RetransMax ::=            INTEGER (1..64)
NetworkAssistedGPS-Supported ::= ENUMERATED {
                                   networkBased,
                                   ue-Based,
                                   bothNetworkAndUE-Based,
                                   noNetworkAssistedGPS }

NF-BO-AllBusy ::=              INTEGER (0..31)
NF-BO-NoAICH ::=               INTEGER (0..31)
NF-BO-Mismatch ::=             INTEGER (0..127)
NS-BO-Busy ::=                  INTEGER (0..63)
NS-IP ::=                       INTEGER (0..28)

P-TMSI-and-RAI-GSM-MAP ::=     SEQUENCE {
                                   p-TMSI                P-TMSI-GSM-MAP,
                                   rai                    RAI
                                }

PagingCause ::=                ENUMERATED {
                                   terminatingConversationalCall,
                                   terminatingStreamingCall,
                                   terminatingInteractiveCall,
                                   terminatingBackgroundCall,
                                   highPrioritySignalling,
                                   lowPrioritySignalling
                                }

PagingRecord ::=               CHOICE {
                                   cn-Identity             SEQUENCE {
                                                           pagingCause,
                                                           cn-DomainIdentity,
                                                           cn-pagedUE-Identity
                                                         },
                                   utran-Identity          SEQUENCE {
                                                           u-RNTI                U-RNTI,
                                                           cn-OriginatedPage-connectedMode-UE SEQUENCE {
                                                               pagingCause,
                                                               cn-DomainIdentity,
                                                               pagingRecordTypeID
                                                             }
                                                         }
                                }

```

```

    }
  }
}

PagingRecordList ::=
    SEQUENCE (SIZE (1..maxPage1)) OF
        PagingRecord

PDCP-Capability ::=
    SEQUENCE {
        losslessSRNS-RelocationSupport
            supportForRfc2507
                notSupported
                supported
            BOOLEAN,
        CHOICE {
            NULL,
            MaxHcContextSpace
        }
    }

PhysicalChannelCapability ::=
    SEQUENCE {
        fddPhysChCapability
            downlinkPhysChCapability
            uplinkPhysChCapability
        SEQUENCE {
            DL-PhysChCapabilityFDD,
            UL-PhysChCapabilityFDD
        }
        OPTIONAL,
        tddPhysChCapability
            downlinkPhysChCapability
            uplinkPhysChCapability
        SEQUENCE {
            DL-PhysChCapabilityTDD,
            UL-PhysChCapabilityTDD
        }
        OPTIONAL
    }

ProtocolErrorCause ::=
    ENUMERATED {
        asnl-ViolationOrEncodingError,
        messageTypeNonexistent,
        messageNotCompatibleWithReceiverState,
        ie-ValueNotComprehended,
        conditionalInformationElementError,
        messageExtensionNotComprehended,
        spare1, spare2
    }

ProtocolErrorIndicator ::=
    ENUMERATED {
        noError, errorOccurred
    }

ProtocolErrorIndicatorWithMoreInfo ::=
    CHOICE {
        noError
        errorOccurred
            rrc-TransactionIdentifier
            protocolErrorInformation
        SEQUENCE {
            RRC-TransactionIdentifier,
            ProtocolErrorInformation
        }
    }

ProtocolErrorMoreInformation ::=
    SEQUENCE {
        diagnosticsType
            type1
            asnl-ViolationOrEncodingError
            messageTypeNonexistent
            messageNotCompatibleWithReceiverState
            ie-ValueNotComprehended
            conditionalInformationElementError
            messageExtensionNotComprehended
            spare1
            spare2
        CHOICE {
            CHOICE {
                NULL,
                NULL,
                IdentificationOfReceivedMessage,
                IdentificationOfReceivedMessage,
                IdentificationOfReceivedMessage,
                IdentificationOfReceivedMessage,
                NULL,
                NULL
            },
            spare
        }
        NULL
    }

RadioFrequencyBand ::=
    ENUMERATED {
        a, b, c, ab, ac, bc, abc
    }

Rb-timer-indicator ::=
    SEQUENCE {
        t314-expired
        t315-expired
    }
    BOOLEAN,
    BOOLEAN

Re-EstablishmentTimer ::=
    ENUMERATED {
        useT314, useT315
    }

RedirectionInfo ::=
    CHOICE {
        frequencyInfo
        interRATInfo
    }
    FrequencyInfo,
    InterRATInfo

```

```

}

RejectionCause ::=
    ENUMERATED {
        congestion,
        unspecified }

ReleaseCause ::=
    ENUMERATED {
        normalEvent,
        unspecified,
        pre-emptiveRelease,
        congestion,
        re-establishmentReject,
        directedsignallingconnectionre-establishment,
        userInactivity }

RF-Capability ::=
    SEQUENCE {
        fddRF-Capability
            SEQUENCE {
                ue-PowerClass
                txRxFrequencySeparation
            }
        tddRF-Capability
            SEQUENCE {
                ue-PowerClass
                radioFrequencyBandList
                chipRateCapability
            }
    }

RLC-Capability ::=
    SEQUENCE {
        totalRLC-AM-BufferSize
        maximumRLC-WindowSize
        maximumAM-EntityNumber
    }

RRC-MessageSequenceNumber ::=
    INTEGER (0..15)

RRC-MessageSequenceNumberList ::=
    SEQUENCE (SIZE (4..5)) OF
        RRC-MessageSequenceNumber

RRC-StateIndicator ::=
    ENUMERATED {
        cell-DCH, cell-FACH, cell-PCH, ura-PCH }

RRC-TransactionIdentifier ::=
    INTEGER (0..3)

S-RNTI ::=
    BIT STRING (SIZE (20))

S-RNTI-2 ::=
    BIT STRING (SIZE (10))

SecurityCapability ::=
    SEQUENCE {
        cipheringAlgorithmCap
            BIT STRING (SIZE (16)),
        integrityProtectionAlgorithmCap
            BIT STRING (SIZE (16))
    }

SimultaneousSCCPCH-DPCH-Reception ::= CHOICE {
    notSupported
        NULL,
    supported
        SEQUENCE {
            maxNoSCCPCH-RL
                MaxNoSCCPCH-RL,
            simultaneousSCCPCH-DPCH-DPDCH-Reception
                BOOLEAN
            -- The IE above is applicable only if IE Support of PDSCH = TRUE
        }
    }

SRNC-Identity ::=
    BIT STRING (SIZE (12))

START-Value ::=
    BIT STRING (SIZE (20))

STARTList ::=
    SEQUENCE (SIZE (1..maxCNdomains)) OF
        STARTSingle

STARTSingle ::=
    SEQUENCE {
        cn-DomainIdentity
            CN-DomainIdentity,
        start-Value
            START-Value
    }

SystemSpecificCapUpdateReq ::=
    ENUMERATED {

```

```

        gsm }

SystemSpecificCapUpdateReqList ::= SEQUENCE (SIZE (1..maxSystemCapability)) OF
    SystemSpecificCapUpdateReq

T-300 ::=
    ENUMERATED {
        ms100, ms200, ms400, ms600, ms800,
        ms1000, ms1200, ms1400, ms1600,
        ms1800, ms2000, ms3000, ms4000,
        ms6000, ms8000 }

T-301 ::=
    ENUMERATED {
        ms100, ms200, ms400, ms600, ms800,
        ms1000, ms1200, ms1400, ms1600,
        ms1800, ms2000, ms3000, ms4000,
        ms6000, ms8000 }

T-302 ::=
    ENUMERATED {
        ms100, ms200, ms400, ms600, ms800,
        ms1000, ms1200, ms1400, ms1600,
        ms1800, ms2000, ms3000, ms4000,
        ms6000, ms8000 }

T-304 ::=
    ENUMERATED {
        ms100, ms200, ms400,
        ms1000, ms2000 }

T-305 ::=
    ENUMERATED {
        noUpdate, m5, m10, m30,
        m60, m120, m360, m720 }

T-307 ::=
    ENUMERATED {
        s5, s10, s15, s20,
        s30, s40, s50 }

T-308 ::=
    ENUMERATED {
        ms40, ms80, ms160, ms320 }

T-309 ::=
    INTEGER (1..8)

T-310 ::=
    ENUMERATED {
        ms40, ms80, ms120, ms160,
        ms200, ms240, ms280, ms320 }

T-311 ::=
    ENUMERATED {
        ms250, ms500, ms750, ms1000,
        ms1250, ms1500, ms1750, ms2000 }

T-312 ::=
    INTEGER (0..15)

T-313 ::=
    INTEGER (0..15)

T-314 ::=
    ENUMERATED {
        s0, s2, s4, s6, s8,
        s12, s16, s20 }

T-315 ::=
    ENUMERATED {
        s0, s10, s30, s60, s180,
        s600, s1200, s1800 }

T-316 ::=
    ENUMERATED {
        s0, s10, s20, s30, s40,
        s50, s-inf }

T-317 ::=
    ENUMERATED {
        s0, s10, s30, s60, s180,
        s600, s1200, s1800 }

T-CPCH ::=
    ENUMERATED {
        ct0, ct1 }

TMSI-and-LAI-GSM-MAP ::=
    SEQUENCE {
        tmsi      TMSI-GSM-MAP,
        lai       LAI
    }

TMSI-DS-41 ::=
    OCTET STRING (SIZE (2..12))

```

```

TotalRLC-AM-BufferSize ::=          ENUMERATED {
                                        kb2, kb10, kb50, kb100,
                                        kb150, kb500, kb1000 }

-- Actual value = IE value * 0.125
TransmissionProbability ::=         INTEGER (1..8)

TransportChannelCapability ::=       SEQUENCE {
    dl-TransChCapability              DL-TransChCapability,
    ul-TransChCapability              UL-TransChCapability
}

TurboSupport ::=                    CHOICE {
    notSupported                      NULL,
    supported                         MaxNoBits
}

TxRxFrequencySeparation ::=         ENUMERATED {
    mhz190, mhz174-8-205-2,
    mhz134-8-245-2 }

U-RNTI ::=                          SEQUENCE {
    srnc-Identity                    SRNC-Identity,
    s-RNTI                           S-RNTI
}

U-RNTI-Short ::=                   SEQUENCE {
    srnc-Identity                    SRNC-Identity,
    s-RNTI-2                         S-RNTI-2
}

UE-ConnTimersAndConstants ::=       SEQUENCE {
-- Optional is used also for parameters for which the default value is the last one read in SIB1
    t-301                            T-301                      DEFAULT ms2000,
    n-301                            N-301                      DEFAULT 2,
    t-302                            T-302                      DEFAULT ms4000,
    n-302                            N-302                      DEFAULT 3,
    t-304                            T-304                      OPTIONAL,
    n-304                            N-304                      OPTIONAL,
    t-305                            T-305                      DEFAULT m30,
    t-307                            T-307                      DEFAULT s30,
    t-308                            T-308                      OPTIONAL,
    t-309                            T-309                      OPTIONAL,
    t-310                            T-310                      DEFAULT ms160,
    n-310                            N-310                      DEFAULT 4,
    t-311                            T-311                      DEFAULT ms2000,
    t-312                            T-312                      DEFAULT 1,
    n-312                            N-312                      DEFAULT s1,
    t-313                            T-313                      OPTIONAL,
    n-313                            N-313                      OPTIONAL,
    t-314                            T-314                      OPTIONAL,
    t-315                            T-315                      OPTIONAL,
    n-315                            N-315                      OPTIONAL,
    t-316                            T-316                      OPTIONAL,
    t-317                            T-317                      OPTIONAL
}

UE-IdleTimersAndConstants ::=       SEQUENCE {
    t-300                            T-300,
    n-300                            N-300,
    t-312                            T-312,
    n-312                            N-312
}

UE-MultiModeRAT-Capability ::=     SEQUENCE {
    multiRAT-CapabilityList          MultiRAT-Capability,
    multiModeCapability              MultiModeCapability
}

UE-PowerClass ::=                   INTEGER (1..4)

UE-RadioAccessCapability ::=       SEQUENCE {
    ics-Version                      ICS-Version,
    pdcp-Capability                  PDCCP-Capability,
    rlc-Capability                   RLC-Capability,
    transportChannelCapability        TransportChannelCapability,
    rf-Capability                    RF-Capability,

```

```

    physicalChannelCapability          PhysicalChannelCapability,
    ue-MultiModeRAT-Capability        UE-MultiModeRAT-Capability,
    securityCapability                 SecurityCapability,
    up-Capability                      UP-Capability,
    measurementCapability              MeasurementCapability          OPTIONAL
}

UL-PhysChCapabilityFDD ::=           SEQUENCE {
    maxNoDPDCH-BitsTransmitted        MaxNoDPDCH-BitsTransmitted,
    supportOfPCPCH                    BOOLEAN
}

UL-PhysChCapabilityTDD ::=          SEQUENCE {
    maxTS-PerFrame                    MaxTS-PerFrame,
    maxPhysChPerTimeslot              MaxPhysChPerTimeslot,
    minimumSF                          MinimumSF-UL,
    supportOfPUSCH                    BOOLEAN
}

UL-TransChCapability ::=           SEQUENCE {
    maxNoBitsTransmitted              MaxNoBits,
    maxConvCodeBitsTransmitted        MaxNoBits,
    turboDecodingSupport              TurboSupport,
    maxSimultaneousTransChs           MaxSimultaneousTransChsUL,
    modeSpecificInfo                  CHOICE {
        fdd                            NULL,
        tdd                            SEQUENCE {
            maxSimultaneousCCTrCH-Count MaxSimultaneousCCTrCH-Count
        }
    },
    maxTransportedBlocks              MaxTransportBlocksUL,
    maxNumberOfTFC-InTFCs             MaxNumberOfTFC-InTFCs-UL,
    maxNumberOfTF                     MaxNumberOfTF
}

UP-Capability ::=                  SEQUENCE {
    standaloneLocMethodsSupported     BOOLEAN,
    ue-BasedOTDOA-Supported           BOOLEAN,
    networkAssistedGPS-Supported      NetworkAssistedGPS-Supported,
    gps-ReferenceTimeCapable          BOOLEAN,
    supportForIDL                     BOOLEAN
}

URA-UpdateCause ::=              ENUMERATED {
    changeOfURA,
    periodicURAUpdate,
    re-enteredServiceArea,
    spare1
}

UTRAN-DRX-CycleLengthCoefficient ::= INTEGER (3..9)

WaitTime ::=                       INTEGER (0..15)

-- *****
--
--     RADIO BEARER INFORMATION ELEMENTS (10.3.4)
--
-- *****

AlgorithmSpecificInfo ::=          CHOICE {
    rfc2507-Info                      RFC2507-Info
}

-- Upper limit is 2^32 - 1
COUNT-C ::=                       INTEGER (0..4294967295)

-- Upper limit is 2^25 - 1
COUNT-C-MSB ::=                   INTEGER (0..33554431)

DL-AM-RLC-Mode ::=                 SEQUENCE {
    inSequenceDelivery                BOOLEAN,
    receivingWindowSize               ReceivingWindowSize,
    dl-RLC-StatusInfo                 DL-RLC-StatusInfo
}

DL-LogicalChannelMapping ::=        SEQUENCE {
    -- TABULAR: DL-TransportChannelType contains TransportChannelIdentity as well.
    dl-TransportChannelType            DL-TransportChannelType,

```

```

    logicalChannelIdentity          LogicalChannelIdentity          OPTIONAL
  }
DL-LogicalChannelMappingList ::= SEQUENCE (SIZE (1..maxLoCHperRLC)) OF
    DL-LogicalChannelMapping

DL-RLC-Mode ::= CHOICE {
    dl-AM-RLC-Mode          DL-AM-RLC-Mode,
    dl-UM-RLC-Mode          NULL,
    dl-TM-RLC-Mode          DL-TM-RLC-Mode
}

DL-RLC-StatusInfo ::= SEQUENCE {
    timerStatusProhibit      TimerStatusProhibit      OPTIONAL,
    timerEPC                  TimerEPC                  OPTIONAL,
    missingPU-Indicator       BOOLEAN,
    timerStatusPeriodic      TimerStatusPeriodic      OPTIONAL
}

DL-TM-RLC-Mode ::= SEQUENCE {
    segmentationIndication   BOOLEAN
}

DL-TransportChannelType ::= CHOICE {
    dch                      TransportChannelIdentity,
    fach                     NULL,
    dsch                     TransportChannelIdentity
}

ExpectReordering ::= ENUMERATED {
    reorderingNotExpected,
    reorderingExpected }

ExplicitDiscard ::= SEQUENCE {
    timerMRW                 TimerMRW,
    timerDiscard             TimerDiscard,
    maxMRW                   MaxMRW
}

HeaderCompressionInfo ::= SEQUENCE {
    algorithmSpecificInfo    AlgorithmSpecificInfo
}

HeaderCompressionInfoList ::= SEQUENCE (SIZE (1..maxPDCPALgoType)) OF
    HeaderCompressionInfo

LogicalChannelIdentity ::= INTEGER (1..15)

LosslessSRNS-RelocSupport ::= CHOICE {
    supported                 MaxPDCP-SN-WindowSize,
    notSupported              NULL
}

MAC-LogicalChannelPriority ::= INTEGER (1..8)

MaxDAT ::= ENUMERATED {
    dat1, dat2, dat3, dat4, dat5, dat6,
    dat7, dat8, dat9, dat10, dat15, dat20,
    dat25, dat30, dat35, dat40 }

MaxDAT-Retransmissions ::= SEQUENCE {
    maxDAT                   MaxDAT,
    timerMRW                 TimerMRW,
    maxMRW                   MaxMRW
}

MaxMRW ::= ENUMERATED {
    mm1, mm4, mm6, mm8, mm12, mm16,
    mm24, mm32 }

MaxPDCP-SN-WindowSize ::= ENUMERATED {
    sn255, sn65535 }

MaxRST ::= ENUMERATED {
    rst1, rst4, rst6, rst8, rst12,
    rst16, rst24, rst32 }

```

```

NoExplicitDiscard ::=
    ENUMERATED {
        dt10, dt20, dt30, dt40, dt50,
        dt60, dt70, dt80, dt90, dt100 }

PDCP-Info ::=
    SEQUENCE {
        losslessSRNS-RelocSupport    LosslessSRNS-RelocSupport    OPTIONAL,
        pdcp-PDU-Header              PDCP-PDU-Header,
        -- TABULAR: The IE above is MD in the tabular format and it can be encoded
        -- in one bit, so the OPTIONAL is removed for compactness.
        headerCompressionInfoList    HeaderCompressionInfoList    OPTIONAL
    }

PDCP-InfoReconfig ::=
    SEQUENCE {
        pdcp-Info                    PDCP-Info,
        pdcp-SN-Info                 PDCP-SN-Info
    }

PDCP-PDU-Header ::=
    ENUMERATED {
        present, absent }

PDCP-SN-Info ::=
    INTEGER (0..65535)

Poll-PU ::=
    ENUMERATED {
        pu1, pu2, pu4, pu8, pu16,
        pu32, pu64, pu128 }

Poll-SDU ::=
    ENUMERATED {
        sdu1, sdu4, sdu16, sdu64 }

PollingInfo ::=
    SEQUENCE {
        timerPollProhibit            TimerPollProhibit            OPTIONAL,
        timerPoll                    TimerPoll                    OPTIONAL,
        poll-PU                      Poll-PU                      OPTIONAL,
        poll-SDU                    Poll-SDU                    OPTIONAL,
        lastTransmissionPU-Poll      BOOLEAN,
        lastRetransmissionPU-Poll    BOOLEAN,
        pollWindow                   PollWindow                   OPTIONAL,
        timerPollPeriodic            TimerPollPeriodic            OPTIONAL
    }

PollWindow ::=
    ENUMERATED {
        pw50, pw60, pw70, pw80, pw85,
        pw90, pw95, pw99 }

PredefinedConfigIdentity ::=
    INTEGER (0..15)

PredefinedConfigValueTag ::=
    INTEGER (0..15)

PredefinedRB-Configuration ::=
    SEQUENCE {
        srb-InformationList          SRB-InformationSetupList,
        rb-InformationList           RB-InformationSetupList
    }

PreDefRadioConfiguration ::=
    SEQUENCE {
        -- User equipment IEs
        re-EstablishmentTimer       Re-EstablishmentTimer,
        -- Radio bearer IEs
        predefinedRB-Configuration   PredefinedRB-Configuration,
        -- Transport channel IEs
        preDefTransChConfiguration   PreDefTransChConfiguration,
        -- Physical channel IEs
        preDefPhyChConfiguration     PreDefPhyChConfiguration
    }

RAB-Info ::=
    SEQUENCE {
        rab-Identity                 RAB-Identity,
        cn-DomainIdentity            CN-DomainIdentity,
        nas-Synchronisation-Indicator NAS-Synchronisation-Indicator    OPTIONAL,
        re-EstablishmentTimer        Re-EstablishmentTimer
    }

RAB-InformationList ::=
    SEQUENCE (SIZE (1..maxRABsetup)) OF
        RAB-Info

RAB-InformationReconfigList ::=
    SEQUENCE (SIZE (1..maxRABsetup)) OF
        RAB-InformationReconfig

RAB-InformationReconfig ::=
    SEQUENCE {
        rab-Identity
    }

```

```

    cn-DomainIdentity          CN-DomainIdentity,
    nas-Synchronisation-Indicator NAS-Synchronisation-Indicator
}

RAB-Info-Post ::=
    rab-Identity              SEQUENCE {
    cn-DomainIdentity          RAB-Identity,
    nas-Synchronisation-Indicator CN-DomainIdentity,
                                NAS-Synchronisation-Indicator OPTIONAL
}

RAB-InformationSetup ::=
    rab-Info                  SEQUENCE {
    rb-InformationSetupList    RAB-Info,
                                RB-InformationSetupList
}

RAB-InformationSetupList ::= SEQUENCE (SIZE (1..maxRABsetup)) OF
    RAB-InformationSetup

RB-ActivationTimeInfo ::= SEQUENCE {
    rb-Identity                RB-Identity,
    rlc-SequenceNumber         RLC-SequenceNumber
}

RB-ActivationTimeInfoList ::= SEQUENCE (SIZE (1..maxRB)) OF
    RB-ActivationTimeInfo

RB-COUNT-C-Information ::= SEQUENCE {
    rb-Identity                RB-Identity,
    count-C-UL                 COUNT-C,
    count-C-DL                 COUNT-C
}

RB-COUNT-C-InformationList ::= SEQUENCE (SIZE (1..maxRBallRABs)) OF
    RB-COUNT-C-Information

RB-COUNT-C-MSB-Information ::= SEQUENCE {
    rb-Identity                RB-Identity,
    count-C-MSB-UL             COUNT-C-MSB,
    count-C-MSB-DL             COUNT-C-MSB
}

RB-COUNT-C-MSB-InformationList ::= SEQUENCE (SIZE (1..maxRBallRABs)) OF
    RB-COUNT-C-MSB-Information

RB-Identity ::= INTEGER (1..32)

RB-IdentityList ::= SEQUENCE (SIZE (1..maxRB)) OF
    RB-Identity

RB-InformationAffected ::= SEQUENCE {
    rb-Identity                RB-Identity,
    rb-MappingInfo             RB-MappingInfo
}

RB-InformationAffectedList ::= SEQUENCE (SIZE (1..maxRB)) OF
    RB-InformationAffected

RB-InformationReconfig ::= SEQUENCE {
    rb-Identity                RB-Identity,
    pdcp-Info                  PDCP-InfoReconfig OPTIONAL,
    rlc-Info                    RLC-Info OPTIONAL,
    rb-MappingInfo              RB-MappingInfo OPTIONAL,
    rb-StopContinue             RB-StopContinue OPTIONAL
}

RB-InformationReconfigList ::= SEQUENCE (SIZE (1..maxRB)) OF
    RB-InformationReconfig

RB-InformationReleaseList ::= SEQUENCE (SIZE (1..maxRB)) OF
    RB-Identity

RB-InformationSetup ::= SEQUENCE {
    rb-Identity                RB-Identity,
    pdcp-Info                  PDCP-Info OPTIONAL,
    rlc-Info                    RLC-Info,
    rb-MappingInfo              RB-MappingInfo
}

```

```

RB-InformationSetupList ::=          SEQUENCE (SIZE (1..maxRBperRAB)) OF
                                      RB-InformationSetup

RB-MappingInfo ::=                  SEQUENCE (SIZE (1..maxRBMuxOptions)) OF
                                      RB-MappingOption

RB-MappingOption ::=                SEQUENCE {
    ul-LogicalChannelMappings        UL-LogicalChannelMappings        OPTIONAL,
    dl-LogicalChannelMappingList     DL-LogicalChannelMappingList     OPTIONAL
}

RB-StopContinue ::=                 ENUMERATED {
    stopRB, continueRB }

RB-WithPDCP-Info ::=                SEQUENCE {
    rb-Identity                       RB-Identity,
    pdcp-SN-Info                     PDCP-SN-Info
}

RB-WithPDCP-InfoList ::=            SEQUENCE (SIZE (1..maxRBallRABs)) OF
                                      RB-WithPDCP-Info

ReceivingWindowSize ::=             ENUMERATED {
    rw1, rw8, rw16, rw32, rw64, rw128, rw256,
    rw512, rw768, rw1024, rw1536, rw2047,
    rw2560, rw3072, rw3584, rw4095 }

RFC2507-Info ::=                   SEQUENCE {
    f-MAX-PERIOD                      INTEGER (1..65535)                DEFAULT 256,
    f-MAX-TIME                        INTEGER (1..255)                  DEFAULT 5,
    max-HEADER                        INTEGER (60..65535)              DEFAULT 168,
    tcp-SPACE                         INTEGER (3..255)                  DEFAULT 15,
    non-TCP-SPACE                    INTEGER (3..65535)                DEFAULT 15,
    expectReordering                 ExpectReordering
    -- TABULAR: The IE above has only two possible values, so using Optional or Default
    -- would be wasteful
}

RLC-Info ::=                        SEQUENCE {
    ul-RLC-Mode                      UL-RLC-Mode                      OPTIONAL,
    dl-RLC-Mode                      DL-RLC-Mode                      OPTIONAL
}

RLC-SequenceNumber ::=              INTEGER (0..4095)

RLC-SizeInfo ::=                    SEQUENCE {
    rlc-SizeIndex                    INTEGER (1..maxTF)
}

RLC-SizeExplicitList ::=            SEQUENCE (SIZE (1..maxTF)) OF
                                      RLC-SizeInfo

SRB-InformationSetup ::=             SEQUENCE {
    rb-Identity                       RB-Identity                      OPTIONAL,
    -- The default value for the IE above is the smallest value not used yet.
    rlc-Info                         RLC-Info,
    rb-MappingInfo                   RB-MappingInfo
}

SRB-InformationSetupList ::=         SEQUENCE (SIZE (1..maxSRBsetup)) OF
                                      SRB-InformationSetup

SRB-InformationSetupList2 ::=        SEQUENCE (SIZE (3..4)) OF
                                      SRB-InformationSetup

TimerDiscard ::=                    ENUMERATED {
    td0-1, td0-25, td0-5, td0-75,
    td1, td1-25, td1-5, td1-75,
    td2, td2-5, td3, td3-5, td4,
    td4-5, td5, td7-5 }

TimerEPC ::=                        ENUMERATED {
    te50, te60, te70, te80, te90,
    te100, te120, te140, te160, te180,
    te200, te300, te400, te500, te700,
    te900 }

TimerMRW ::=                        ENUMERATED {

```

```

te50, te60, te70, te80, te90, te100,
te120, te140, te160, te180, te200,
te300, te400, te500, te700, te900 }

TimerPoll ::=
ENUMERATED {
    tp10, tp20, tp30, tp40, tp50,
    tp60, tp70, tp80, tp90, tp100,
    tp110, tp120, tp130, tp140, tp150,
    tp160, tp170, tp180, tp190, tp200,
    tp210, tp220, tp230, tp240, tp250,
    tp260, tp270, tp280, tp290, tp300,
    tp310, tp320, tp330, tp340, tp350,
    tp360, tp370, tp380, tp390, tp400,
    tp410, tp420, tp430, tp440, tp450,
    tp460, tp470, tp480, tp490, tp500,
    tp510, tp520, tp530, tp540, tp550,
    tp600, tp650, tp700, tp750, tp800,
    tp850, tp900, tp950, tp1000 }

TimerPollPeriodic ::=
ENUMERATED {
    tper100, tper200, tper300, tper400,
    tper500, tper750, tper1000, tper2000 }

TimerPollProhibit ::=
ENUMERATED {
    tpp10, tpp20, tpp30, tpp40, tpp50,
    tpp60, tpp70, tpp80, tpp90, tpp100,
    tpp110, tpp120, tpp130, tpp140, tpp150,
    tpp160, tpp170, tpp180, tpp190, tpp200,
    tpp210, tpp220, tpp230, tpp240, tpp250,
    tpp260, tpp270, tpp280, tpp290, tpp300,
    tpp310, tpp320, tpp330, tpp340, tpp350,
    tpp360, tpp370, tpp380, tpp390, tpp400,
    tpp410, tpp420, tpp430, tpp440, tpp450,
    tpp460, tpp470, tpp480, tpp490, tpp500,
    tpp510, tpp520, tpp530, tpp540, tpp550,
    tpp600, tpp650, tpp700, tpp750, tpp800,
    tpp850, tpp900, tpp950, tpp1000 }

TimerRST ::=
ENUMERATED {
    tr50, tr100, tr150, tr200, tr250, tr300,
    tr350, tr400, tr450, tr500, tr550,
    tr600, tr700, tr800, tr900, tr1000 }

TimerStatusPeriodic ::=
ENUMERATED {
    tsp100, tsp200, tsp300, tsp400, tsp500,
    tsp750, tsp1000, tsp2000 }

TimerStatusProhibit ::=
ENUMERATED {
    tsp10, tsp20, tsp30, tsp40, tsp50,
    tsp60, tsp70, tsp80, tsp90, tsp100,
    tsp110, tsp120, tsp130, tsp140, tsp150,
    tsp160, tsp170, tsp180, tsp190, tsp200,
    tsp210, tsp220, tsp230, tsp240, tsp250,
    tsp260, tsp270, tsp280, tsp290, tsp300,
    tsp310, tsp320, tsp330, tsp340, tsp350,
    tsp360, tsp370, tsp380, tsp390, tsp400,
    tsp410, tsp420, tsp430, tsp440, tsp450,
    tsp460, tsp470, tsp480, tsp490, tsp500,
    tsp510, tsp520, tsp530, tsp540, tsp550,
    tsp600, tsp650, tsp700, tsp750, tsp800,
    tsp850, tsp900, tsp950, tsp1000 }

TransmissionRLC-Discard ::=
timerBasedExplicit
timerBasedNoExplicit
maxDAT-Retransmissions
noDiscard
}

TransmissionWindowSize ::=
ENUMERATED {
    tw1, tw8, tw16, tw32, tw64, tw128, tw256,
    tw512, tw768, tw1024, tw1536, tw2047,
    tw2560, tw3072, tw3584, tw4095 }

UL-AM-RLC-Mode ::=
transmissionRLC-Discard
transmissionWindowSize
timerRST
SEQUENCE {
    TransmissionRLC-Discard,
    TransmissionWindowSize,
    TimerRST,

```

```

    max-RST                               MaxRST,
    pollingInfo                             PollingInfo
}

UL-LogicalChannelMapping ::=              SEQUENCE {
    -- TABULAR: UL-TransportChannelType contains TransportChannelIdentity as well.
    ul-TransportChannelType                UL-TransportChannelType,
    logicalChannelIdentity                  LogicalChannelIdentity           OPTIONAL,
    rlc-SizeList                            CHOICE {
        allSizes                            NULL,
        configured                          NULL,
        explicitList                        RLC-SizeExplicitList
    },
    mac-LogicalChannelPriority              MAC-LogicalChannelPriority
}

UL-LogicalChannelMappingList ::=          SEQUENCE {
    rlc-LogicalChannelMappingIndicator     BOOLEAN,
    ul-LogicalChannelMapping               SEQUENCE (SIZE (maxLoChperRLC)) OF
                                           UL-LogicalChannelMapping
}

UL-LogicalChannelMappings ::=            CHOICE {
    oneLogicalChannel                      UL-LogicalChannelMapping,
    twoLogicalChannels                     UL-LogicalChannelMappingList
}

UL-RLC-Mode ::=                          CHOICE {
    ul-AM-RLC-Mode                        UL-AM-RLC-Mode,
    ul-UM-RLC-Mode                        UL-UM-RLC-Mode,
    ul-TM-RLC-Mode                        UL-TM-RLC-Mode,
    spare                                  NULL
}

UL-TM-RLC-Mode ::=                      SEQUENCE {
    transmissionRLC-Discard                TransmissionRLC-Discard           OPTIONAL,
    segmentationIndication                BOOLEAN
}

UL-UM-RLC-Mode ::=                      SEQUENCE {
    transmissionRLC-Discard                TransmissionRLC-Discard           OPTIONAL
}

UL-TransportChannelType ::=              CHOICE {
    dch                                    TransportChannelIdentity,
    rach                                   NULL,
    cpch                                   NULL,
    usch                                   NULL
}

-- *****
--
--     TRANSPORT CHANNEL INFORMATION ELEMENTS (10.3.5)
--
-- *****

AllowedTFC-List ::=                     SEQUENCE (SIZE (1..maxTFC)) OF
                                         TFC-Value

AllowedTFI-List ::=                     SEQUENCE (SIZE (1..maxTF)) OF
                                         INTEGER (0..31)

BitModeRLC-SizeInfo ::=                 CHOICE {
    sizeType1                              INTEGER (1..127),
    sizeType2                              SEQUENCE {
        part1                              INTEGER (0..15),
        part2                              INTEGER (1..7)           OPTIONAL
        -- Actual size = (part1 * 8) + 128 + part2
    },
    sizeType3                              SEQUENCE {
        part1                              INTEGER (0..47),
        part2                              INTEGER (1..15)           OPTIONAL
        -- Actual size = (part1 * 16) + 256 + part2
    },
    sizeType4                              SEQUENCE {
        part1                              INTEGER (0..62),
        part2                              INTEGER (1..63)           OPTIONAL
    }
}

```

```

        -- Actual size = (part1 * 64) + 1024 + part2
    }
}
-- Actual value = IE value * 0.1
BLER-QualityValue ::= INTEGER (-63..0)

ChannelCodingType ::= CHOICE {
    noCoding          NULL,
    convolutional     CodingRate,
    turbo             NULL
}

CodingRate ::= ENUMERATED {
    half,
    third }

CommonDynamicTF-Info ::= SEQUENCE {
    rlc-Size          CHOICE {
        fdd           SEQUENCE {
            octetModeRLC-SizeInfoType2  OctetModeRLC-SizeInfoType2
        },
        tdd           SEQUENCE {
            commonTDD-Choice             CHOICE {
                bitModeRLC-SizeInfo      BitModeRLC-SizeInfo,
                octetModeRLC-SizeInfoType1 OctetModeRLC-SizeInfoType1
            }
        }
    },
    numberOfTbSizeList SEQUENCE (SIZE (1..maxTF)) OF
        NumberOfTransportBlocks,
    logicalChannelList LogicalChannelList
}

CommonDynamicTF-Info-DynamicTTI ::= SEQUENCE {
    commonTDD-Choice CHOICE {
        bitModeRLC-SizeInfo      BitModeRLC-SizeInfo,
        octetModeRLC-SizeInfoType1 OctetModeRLC-SizeInfoType1
    },
    numberOfTbSizeAndTTIList      NumberOfTbSizeAndTTIList,
    logicalChannelList            LogicalChannelList
}

CommonDynamicTF-InfoList ::= SEQUENCE (SIZE (1..maxTF)) OF
    CommonDynamicTF-Info

CommonDynamicTF-InfoList-DynamicTTI ::= SEQUENCE (SIZE (1..maxTF)) OF
    CommonDynamicTF-Info-DynamicTTI

CommonTransChTFS ::= SEQUENCE {
    tti CHOICE {
        tti10      CommonDynamicTF-InfoList,
        tti20      CommonDynamicTF-InfoList,
        tti40      CommonDynamicTF-InfoList,
        tti80      CommonDynamicTF-InfoList,
        dynamic    CommonDynamicTF-InfoList-DynamicTTI
    },
    semistaticTF-Information SemistaticTF-Information
}

CPCH-SetID ::= INTEGER (1..maxCPCHsets)

CRC-Size ::= ENUMERATED {
    crc0, crc8, crc12, crc16, crc24 }

DedicatedDynamicTF-Info ::= SEQUENCE {
    rlc-Size          CHOICE {
        bitMode      BitModeRLC-SizeInfo,
        octetModeType1 OctetModeRLC-SizeInfoType1
    },
    numberOfTbSizeList SEQUENCE (SIZE (1..maxTF)) OF
        NumberOfTransportBlocks,
    logicalChannelList LogicalChannelList
}

DedicatedDynamicTF-Info-DynamicTTI ::= SEQUENCE {
    rlc-Size          CHOICE {
        bitMode      BitModeRLC-SizeInfo,
        octetModeType1 OctetModeRLC-SizeInfoType1
    }
}

```

```

    },
    numberOfTbSizeAndTTIList      NumberOfTbSizeAndTTIList,
    logicalChannelList            LogicalChannelList
}

DedicatedDynamicTF-InfoList ::= SEQUENCE (SIZE (1..maxTF)) OF
    DedicatedDynamicTF-Info

DedicatedDynamicTF-InfoList-DynamicTTI ::= SEQUENCE (SIZE (1..maxTF)) OF
    DedicatedDynamicTF-Info-DynamicTTI

DedicatedTransChTFS ::= SEQUENCE {
    tti CHOICE {
        tti10      DedicatedDynamicTF-InfoList,
        tti20      DedicatedDynamicTF-InfoList,
        tti40      DedicatedDynamicTF-InfoList,
        tti80      DedicatedDynamicTF-InfoList,
        dynamic    DedicatedDynamicTF-InfoList-DynamicTTI
    },
    semistaticTF-Information      SemistaticTF-Information
}

DL-AddReconfTransChInfo2List ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    DL-AddReconfTransChInformation2

DL-AddReconfTransChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    DL-AddReconfTransChInformation

-- ASN.1 for IE "Added or Reconfigured DL TrCH information"
-- in case of messages other than: Radio Bearer Release message and
-- Radio Bearer Reconfiguration message
DL-AddReconfTransChInformation ::= SEQUENCE {
    dl-transportChannelIdentity      TransportChannelIdentity,
    tfs-SignallingMode CHOICE {
        explicit      TransportFormatSet,
        sameAsULTrCH TransportChannelIdentity
    },
    dch-QualityTarget      QualityTarget OPTIONAL,
    tm-SignallingInfo      TM-SignallingInfo OPTIONAL
}

-- ASN.1 for IE "Added or Reconfigured DL TrCH information"
-- in case of Radio Bearer Release message and
-- Radio Bearer Reconfiguration message
DL-AddReconfTransChInformation2 ::= SEQUENCE {
    transportChannelIdentity      TransportChannelIdentity,
    tfs-SignallingMode CHOICE {
        explicit      TransportFormatSet,
        sameAsULTrCH TransportChannelIdentity
    },
    qualityTarget      QualityTarget OPTIONAL
}

DL-CommonTransChInfo ::= SEQUENCE {
    sccpch-TFCS      TFCS OPTIONAL,
    modeSpecificInfo CHOICE {
        fdd SEQUENCE {
            tfcs-SignallingMode CHOICE {
                explicit      TFCS,
                sameAsUL      NULL
            } OPTIONAL,
            tdd SEQUENCE {
                individualDL-CCTrCH-InfoList      IndividualDL-CCTrCH-InfoList OPTIONAL
            }
        }
    }
}

DL-DeletedTransChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    TransportChannelIdentity

DRAC-ClassIdentity ::= INTEGER (1..maxDRACclasses)

DRAC-StaticInformation ::= SEQUENCE {
    transmissionTimeValidity      TransmissionTimeValidity,
    timeDurationBeforeRetry      TimeDurationBeforeRetry,
    drac-ClassIdentity            DRAC-ClassIdentity
}

```

```

}

DRAC-StaticInformationList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
                               DRAC-StaticInformation

ExplicitTFCS-Configuration ::= CHOICE {
    complete          TFCS-ReconfAdd,
    addition          TFCS-ReconfAdd,
    removal           TFCS-RemovalList,
    replacement      SEQUENCE {
        tfcsRemoval  TFCS-RemovalList,
        tfcsAdd       TFCS-ReconfAdd
    }
}

GainFactor ::= INTEGER (0..15)

GainFactorInformation ::= CHOICE {
    signalledGainFactors  SignalledGainFactors,
    computedGainFactors   ReferenceTFC-ID
}

IndividualDL-CCTrCH-Info ::= SEQUENCE {
    dl-TFCS-Identity      TFCS-Identity,
    tfcs-SignallingMode   CHOICE {
        explicit          TFCS,
        sameAsUL          TFCS-Identity
    }
}

IndividualDL-CCTrCH-InfoList ::= SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                  IndividualDL-CCTrCH-Info

IndividualUL-CCTrCH-Info ::= SEQUENCE {
    ul-TFCS-Identity      TFCS-Identity,
    ul-TFCS                TFCS
}

IndividualUL-CCTrCH-InfoList ::= SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                  IndividualUL-CCTrCH-Info

LogicalChannelByRB ::= SEQUENCE {
    rb-Identity           RB-Identity,
    logChOfRb             INTEGER (0..1) OPTIONAL
}

LogicalChannelList ::= CHOICE {
    allSizes              NULL,
    configured            NULL,
    explicitList          SEQUENCE (SIZE (1..15)) OF
                          LogicalChannelByRB
}

NumberOfTbSizeAndTTIList ::= SEQUENCE (SIZE (1..maxTF)) OF SEQUENCE {
    numberOfTransportBlocks  NumberOfTransportBlocks,
    transmissionTimeInterval TransmissionTimeInterval
}

MessType ::= ENUMERATED {
    transportFormatCombinationControl }

Non-allowedTFC-List ::= SEQUENCE (SIZE (1..maxTFC)) OF
                          TFC-Value

NumberOfTransportBlocks ::= CHOICE {
    zero          NULL,
    one           NULL,
    small         INTEGER (2..17),
    large        INTEGER (18..512)
}

OctetModeRLC-SizeInfoType1 ::= CHOICE {
    sizeType1      INTEGER (0..31),
    -- Actual size = (8 * sizeType1) + 16
    sizeType2      SEQUENCE {
        part1      INTEGER (0..23),
        part2      INTEGER (1..3) OPTIONAL
    }
    -- Actual size = (32 * part1) + 272 + (part2 * 8)
}

```

```

    },
    sizeType3
        SEQUENCE {
            part1
                INTEGER (0..61),
            part2
                INTEGER (1..7)
            -- Actual size = (64 * part1) + 1040 + (part2 * 8)
        }
    }
}

OctetModeRLC-SizeInfoType2 ::= CHOICE {
    sizeType1
        INTEGER (0..31),
    -- Actual size = (sizeType1 * 8) + 48
    sizeType2
        INTEGER (0..63),
    -- Actual size = (sizeType2 * 16) + 312
    sizeType3
        INTEGER (0..56)
    -- Actual size = (sizeType3 *64) + 1384
}

PowerOffsetInformation ::= SEQUENCE {
    gainFactorInformation
        GainFactorInformation,
    -- PowerOffsetPp-m is always absent in TDD
    powerOffsetPp-m
        PowerOffsetPp-m
}

PowerOffsetPp-m ::= INTEGER (-5..10)

PreDefTransChConfiguration ::= SEQUENCE {
    ul-CommonTransChInfo
        UL-CommonTransChInfo,
    ul-AddReconfTrChInfoList
        UL-AddReconfTransChInfoList,
    dl-CommonTransChInfo
        DL-CommonTransChInfo,
    dl-TrChInfoList
        DL-AddReconfTransChInfoList
}

QualityTarget ::= SEQUENCE {
    bler-QualityValue
        BLER-QualityValue
}

RateMatchingAttribute ::= INTEGER (1..hIRM)

ReferenceTFC-ID ::= INTEGER (0..3)

RestrictedTrChInfo ::= SEQUENCE {
    restrictedTrChIdentity
        TransportChannelIdentity,
    allowedTFI-List
        AllowedTFI-List
}

RestrictedTrChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    RestrictedTrChInfo

SemistaticTF-Information ::= SEQUENCE {
    -- TABULAR: Transmission time interval has been included in the IE CommonTransChTFS.
    channelCodingType
        ChannelCodingType,
    rateMatchingAttribute
        RateMatchingAttribute,
    crc-Size
        CRC-Size
}

SignalledGainFactors ::= SEQUENCE {
    modeSpecificInfo
        CHOICE {
            fdd
                SEQUENCE {
                    gainFactorBetaC
                        GainFactor
                },
            tdd
                NULL
        },
    gainFactorBetaD
        GainFactor,
    referenceTFC-ID
        ReferenceTFC-ID
}

SplitTFI-Signalling ::= SEQUENCE {
    splitType
        SplitType
    tfci-Field2-Length
        INTEGER (1..10)
    tfci-Field1-Information
        ExplicitTFCS-Configuration
    tfci-Field2-Information
        TFCI-Field2-Information
}

SplitType ::= ENUMERATED {
    hardSplit, logicalSplit }

TFC-Subset ::= CHOICE {

```

```

    minimumAllowedTFC-Number      TFC-Value,
    allowedTFC-List                AllowedTFC-List,
    non-allowedTFC-List           Non-allowedTFC-List,
    restrictedTrChInfoList        RestrictedTrChInfoList,
    fullTFCS                      NULL
}

TFC-Value ::=                     INTEGER (0..1023)

TFCI-Field2-Information ::=       CHOICE {
    tfci-Range                    TFCI-RangeList,
    explicit                      ExplicitTFCS-Configuration
}

TFCI-Range ::=                   SEQUENCE {
    maxTFCIField2Value            INTEGER (1..1023),
    tfcs-InfoForDSCH             TFCI-InfoForDSCH
}

TFCI-RangeList ::=              SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
    TFCI-Range

TFCS ::=                         CHOICE {
    normalTFCS-Signalling         ExplicitTFCS-Configuration,
    splitTFCS-Signalling         SplitTFCS-Signalling
}

TFCS-Identity ::=               SEQUENCE {
    tfcs-ID                      INTEGER (1..8)                DEFAULT 1,
    sharedChannelIndicator        BOOLEAN
}

TFCS-IdentityPlain ::=          INTEGER (1..8)

TFCS-InfoForDSCH ::=           CHOICE {
    ctfc2bit                     INTEGER (0..3),
    ctfc4bit                     INTEGER (0..15),
    ctfc6bit                     INTEGER (0..63),
    ctfc8bit                     INTEGER (0..255),
    ctfc12bit                   INTEGER (0..4095),
    ctfc16bit                   INTEGER (0..65535),
    ctfc24bit                   INTEGER (0..1677215)
}

TFCS-ReconfAdd ::=             SEQUENCE{
    ctfcSize                     CHOICE{
        ctfc2Bit                SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc2                INTEGER (0..3),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc4Bit                SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc4                INTEGER (0..15),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc6Bit                SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc6                INTEGER (0..63),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc8Bit                SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc8                INTEGER (0..255),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc12Bit               SEQUENCE (SIZE(1..maxTFC)) OF SEQUENCE {
            ctfc12               INTEGER (0..4095),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc16Bit               SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc16               INTEGER(0..65535),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        },
        ctfc24Bit               SEQUENCE (SIZE (1..maxTFC)) OF SEQUENCE {
            ctfc24               INTEGER(0..1677215),
            gainFactorInformation PowerOffsetInformation        OPTIONAL
        }
    }
}

TFCS-Removal ::=               SEQUENCE {

```

```

    tfci                INTEGER (0..1023)
}

TFCS-RemovalList ::= SEQUENCE (SIZE (1..maxTFC)) OF
    TFCS-Removal

TimeDurationBeforeRetry ::= INTEGER (1..256)

TM-SignallingInfo ::= SEQUENCE {
    messType           MessType,
    tm-SignallingMode CHOICE {
        mode1          NULL,
        mode2          SEQUENCE {
            ul-controlledTrChList    UL-ControlledTrChList
        }
    }
}

TransmissionTimeInterval ::= ENUMERATED {
    tti10, tti20, tti40, tti80 }

TransmissionTimeValidity ::= INTEGER (1..256)

TransportChannelIdentity ::= INTEGER (1..32)

TransportFormatSet ::= CHOICE {
    dedicatedTransChTFS    DedicatedTransChTFS,
    commonTransChTFS      CommonTransChTFS
}

UL-AddReconfTransChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    UL-AddReconfTransChInformation

UL-AddReconfTransChInformation ::= SEQUENCE {
    transportChannelIdentity    TransportChannelIdentity,
    transportFormatSet          TransportFormatSet
}

UL-CommonTransChInfo ::= SEQUENCE {
    tfc-Subset                TFC-Subset                OPTIONAL,
    prach-TFCS                TFCS                    OPTIONAL,
    modeSpecificInfo          CHOICE {
        fdd                    SEQUENCE {
            ul-TFCS            TFCS
        },
        tdd                    SEQUENCE {
            individualUL-CCTrCH-InfoList    IndividualUL-CCTrCH-InfoList    OPTIONAL,
            ul-TFCS                    TFCS
        }
    }
}

UL-ControlledTrChList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    TransportChannelIdentity

UL-DeletedTransChInfoList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    TransportChannelIdentity

-- *****
--
--     PHYSICAL CHANNEL INFORMATION ELEMENTS (10.3.6)
--
-- *****

AC-To-ASC-Mapping ::= INTEGER (0..7)

AC-To-ASC-MappingTable ::= SEQUENCE (SIZE (maxASCmap)) OF
    AC-To-ASC-Mapping

AccessServiceClass ::= SEQUENCE {
    availableSignatureStartIndex    INTEGER (0..15),
    availableSignatureEndIndex      INTEGER (0..15),
    assignedSubChannelNumber        BIT STRING (SIZE(4))
}

```

```

AccessServiceClassIndex ::= INTEGER (1..8)

AICH-Info ::= SEQUENCE {
    channelisationCode256      ChannelisationCode256,
    sttd-Indicator             BOOLEAN,
    aich-TransmissionTiming    AICH-TransmissionTiming
}

AICH-PowerOffset ::= INTEGER (-22..5)

AICH-TransmissionTiming ::= ENUMERATED {
    e0, e1 }

AllocationPeriodInfo ::= SEQUENCE {
    allocationActivationTime    INTEGER (1..256),
    allocationDuration          INTEGER (1..256)
}

Alpha ::= INTEGER (0..8)

AP-AICH-ChannelisationCode ::= INTEGER (0..255)

AP-PreambleScramblingCode ::= INTEGER (0..79)

AP-Signature ::= INTEGER (0..15)

AP-Signature-VCAM ::= SEQUENCE {
    ap-Signature                AP-Signature,
    availableAP-SubchannelList  AvailableAP-SubchannelList OPTIONAL
}

AP-Subchannel ::= INTEGER (0..11)

ASC ::= SEQUENCE {
    accessServiceClass          AccessServiceClassIndex,
    repetitionPeriodAndOffset  ASC-RepetitionPeriodAndOffset OPTIONAL
    -- TABULAR: The offset is nested in the repetition period
}

ASC-RepetitionPeriodAndOffset ::= CHOICE {
    rp1          NULL,
    rp2          INTEGER (0..1),
    rp4          INTEGER (0..3),
    rp8          INTEGER (0..7)
}

ASCSetting ::= SEQUENCE {
    -- TABULAR: This is MD in tabular description
    -- Default value is previous ASC
    -- If this is the first ASC, the default value is all available signature and sub-channels
    accessServiceClass          AccessServiceClass OPTIONAL
}

AvailableAP-Signature-VCAMList ::= SEQUENCE (SIZE (1..maxPCPCH-APsig)) OF
    AP-Signature-VCAM

AvailableAP-SignatureList ::= SEQUENCE (SIZE (1..maxPCPCH-APsig)) OF
    AP-Signature

AvailableAP-SubchannelList ::= SEQUENCE (SIZE (1..maxPCPCH-APsubCh)) OF
    AP-Subchannel

AvailableMinimumSF-ListVCAM ::= SEQUENCE (SIZE (1..maxPCPCH-SF)) OF
    AvailableMinimumSF-VCAM

AvailableMinimumSF-VCAM ::= SEQUENCE {
    minimumSpreadingFactor      MinimumSpreadingFactor,
    nf-Max                      NF-Max,
    maxAvailablePCPCH-Number     MaxAvailablePCPCH-Number,
    availableAP-Signature-VCAMList AvailableAP-Signature-VCAMList
}

AvailableSignatures ::= BIT STRING(SIZE(16))

AvailableSubChannelNumbers ::= BIT STRING(SIZE(12))

BurstType ::= ENUMERATED {
    short1, long2 }

```

```

BurstType1 ::= ENUMERATED { ms4, ms8, ms16 }
BurstType2 ::= ENUMERATED { ms3, ms6 }
CCTrCH-PowerControlInfo ::= SEQUENCE {
    tfcs-Identity          TFCS-Identity          OPTIONAL,
    ul-DPCH-PowerControlInfo  UL-DPCH-PowerControlInfo
}
CD-AccessSlotSubchannel ::= INTEGER (0..11)
CD-AccessSlotSubchannelList ::= SEQUENCE (SIZE (1..maxPCPCH-CDsubCh)) OF
    CD-AccessSlotSubchannel
CD-CA-ICH-ChannelisationCode ::= INTEGER (0..255)
CD-PreambleScramblingCode ::= INTEGER (0..79)
CD-SignatureCode ::= INTEGER (0..15)
CD-SignatureCodeList ::= SEQUENCE (SIZE (1..maxPCPCH-CDsig)) OF
    CD-SignatureCode
CellParametersID ::= INTEGER (0..127)
Cfntargetsfnframeoffset ::= INTEGER(0..255)
ChannelAssignmentActive ::= CHOICE {
    notActive          NULL,
    isActive          AvailableMinimumSF-ListVCAM
}
ChannelisationCode256 ::= INTEGER (0..255)
ChannelReqParamsForUCSM ::= SEQUENCE {
    availableAP-SignatureList  AvailableAP-SignatureList,
    availableAP-SubchannelList AvailableAP-SubchannelList  OPTIONAL
}
ClosedLoopTimingAdjMode ::= ENUMERATED {
    slot1, slot2 }
CodeNumberDSCH ::= INTEGER (0..255)
CodeRange ::= SEQUENCE {
    pdsch-CodeMapList  PDSCH-CodeMapList,
    codeNumberStart    CodeNumberDSCH,
    codeNumberStop     CodeNumberDSCH
}
CodeWordSet ::= ENUMERATED {
    longCWS,
    mediumCWS,
    shortCWS,
    ssdtOff }
CommonTimeslotInfo ::= SEQUENCE {
    -- TABULAR: The IE below is MD, but since it can be encoded in a single
    -- bit it is not defined as OPTIONAL.
    secondInterleavingMode  SecondInterleavingMode,
    tfci-Coding              TFCI-Coding          OPTIONAL,
    puncturingLimit         PuncturingLimit,
    repetitionPeriodAndLength  RepetitionPeriodAndLength  OPTIONAL
}
CommonTimeslotInfoSCCPCH ::= SEQUENCE {
    -- TABULAR: The IE below is MD, but since it can be encoded in a single
    -- bit it is not defined as OPTIONAL.
    secondInterleavingMode  SecondInterleavingMode,
    tfci-Coding              TFCI-Coding          OPTIONAL,
    puncturingLimit         PuncturingLimit,
    repetitionPeriodLengthAndOffset  RepetitionPeriodLengthAndOffset  OPTIONAL
}
ConstantValue ::= INTEGER (-35..10)
CPCH-PersistenceLevels ::= SEQUENCE {
    cpch-SetID              CPCH-SetID,
}

```

```

dynamicPersistenceLevelTF-List      DynamicPersistenceLevelTF-List
}

CPCH-PersistenceLevelsList ::=      SEQUENCE (SIZE (1..maxCPCHsets)) OF
                                      CPCH-PersistenceLevels

CPCH-SetInfo ::=                     SEQUENCE {
  cpch-SetID                          CPCH-SetID,
  transportFormatSet                  TransportFormatSet,
  tfcs                                TFCS,
  ap-PreambleScramblingCode          AP-PreambleScramblingCode,
  ap-AICH-ChannelisationCode         AP-AICH-ChannelisationCode,
  cd-PreambleScramblingCode          CD-PreambleScramblingCode,
  cd-CA-ICH-ChannelisationCode       CD-CA-ICH-ChannelisationCode,
  cd-AccessSlotSubchannelList        CD-AccessSlotSubchannelList      OPTIONAL,
  cd-SignatureCodeList               CD-SignatureCodeList              OPTIONAL,
  deltaPp-m                          DeltaPp-m,
  ul-DPCCH-SlotFormat                UL-DPCCH-SlotFormat,
  n-StartMessage                     N-StartMessage,
  n-EOT                              N-EOT,
  channelAssignmentActive             ChannelAssignmentActive,
  -- TABULAR: VCAM info has been nested inside ChannelAssignmentActive,
  -- which in turn is mandatory since it's only a binary choice.
  cpch-StatusIndicationMode          CPCH-StatusIndicationMode,
  pcpcch-ChannelInfoList             PCPCH-ChannelInfoList
}

CPCH-SetInfoList ::=                SEQUENCE (SIZE (1..maxCPCHsets)) OF
                                      CPCH-SetInfo

CPCH-StatusIndicationMode ::=       ENUMERATED {
  pa-mode,
  pamsf-mode }

CSICH-PowerOffset ::=               INTEGER (-10..5)

-- DefaultDPCH-OffsetValueFDD and DefaultDPCH-OffsetValueTDD corresponds to
-- IE "Default DPCH Offset Value" depending on the mode.
-- Actual value = IE value * 512
DefaultDPCH-OffsetValueFDD ::=      INTEGER (0..599)

DefaultDPCH-OffsetValueTDD ::=      INTEGER (0..7)

DeltaPp-m ::=                       INTEGER (-10..10)

-- Actual value = IE value * 0.1
DeltaSIR ::=                        INTEGER (0..30)

DL-CCTrCh ::=                       SEQUENCE {
  tfcs-Identity                      TFCS-IdentityPlain              OPTIONAL,
  timeInfo                           TimeInfo,
  dl-CCTrCH-TimeslotsCodes           DownlinkTimeslotsCodes          OPTIONAL,
  ul-CCTrChTPCList                  UL-CCTrChTPCList                OPTIONAL,
}

DL-CCTrChList ::=                   SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                      DL-CCTrCh

DL-ChannelisationCode ::=           SEQUENCE {
  secondaryScramblingCode            SecondaryScramblingCode          OPTIONAL,
  sf-AndCodeNumber                  SF512-AndCodeNumber,
  scramblingCodeChange              ScramblingCodeChange            OPTIONAL,
}

DL-ChannelisationCodeList ::=       SEQUENCE (SIZE (1..maxDPCH-DLchan)) OF
                                      DL-ChannelisationCode

DL-CommonInformation ::=            SEQUENCE {
  dl-DPCH-InfoCommon                DL-DPCH-InfoCommon              OPTIONAL,
  modeSpecificInfo                   CHOICE {
    fdd                               SEQUENCE {
      defaultDPCH-OffsetValue        DefaultDPCH-OffsetValueFDD      OPTIONAL,
      dpch-CompressedModeInfo        DPCH-CompressedModeInfo        OPTIONAL,
      tx-DiversityMode               TX-DiversityMode               OPTIONAL,
      ssdt-Information               SSDT-Information               OPTIONAL,
    },
    tdd                               SEQUENCE {
      defaultDPCH-OffsetValue        DefaultDPCH-OffsetValueTDD      OPTIONAL
    }
  }
}

```

```

    }
  }
}

DL-CommonInformationPost ::= SEQUENCE {
  dl-DPCH-InfoCommon          DL-DPCH-InfoCommonPost
}

DL-CommonInformationPredef ::= SEQUENCE {
  dl-DPCH-InfoCommon          DL-DPCH-InfoCommonPredef OPTIONAL,
  modeSpecificInfo            CHOICE {
    fdd                        SEQUENCE {
      defaultDPCH-OffsetValue DefaultDPCH-OffsetValueFDD
    },
    tdd                        SEQUENCE {
      defaultDPCH-OffsetValue DefaultDPCH-OffsetValueTDD
    }
  }
}

DL-CompressedModeMethod ::= ENUMERATED {
  puncturing, sf-2,
  higherLayerScheduling }

DL-DPCH-InfoCommon ::= SEQUENCE {
  cfnHandling                CHOICE {
    maintain                  NULL,
    initialise                 SEQUENCE {
      cfntargetsfnframeoffset Cfntargetsfnframeoffset OPTIONAL
    }
  },
  modeSpecificInfo           CHOICE {
    fdd                       SEQUENCE {
      dl-DPCH-PowerControlInfo DL-DPCH-PowerControlInfo OPTIONAL,
      dl-rate-matching-restriction DL-rate-matching-restriction OPTIONAL,
      spreadingFactorAndPilot     SF512-AndPilot,
      -- TABULAR: The number of pilot bits is nested inside the spreading factor.
      positionFixedOrFlexible     PositionFixedOrFlexible,
      tfci-Existence              BOOLEAN
    },
    tdd                       SEQUENCE {
      commonTimeslotInfo        CommonTimeslotInfo OPTIONAL
    }
  }
}

DL-DPCH-InfoCommonPost ::= SEQUENCE {
  dl-DPCH-PowerControlInfo   DL-DPCH-PowerControlInfo OPTIONAL
}

DL-DPCH-InfoCommonPredef ::= SEQUENCE {
  modeSpecificInfo           CHOICE {
    fdd                       SEQUENCE {
      spreadingFactorAndPilot     SF512-AndPilot,
      -- TABULAR: The number of pilot bits is nested inside the spreading factor.
      positionFixedOrFlexible     PositionFixedOrFlexible,
      tfci-Existence              BOOLEAN
    },
    tdd                       SEQUENCE {
      commonTimeslotInfo        CommonTimeslotInfo
    }
  }
}

DL-DPCH-InfoPerRL ::= CHOICE {
  fdd                        SEQUENCE {
    pCPICH-UsageForChannelEst    PCPICH-UsageForChannelEst,
    dcph-FrameOffset            DPCH-FrameOffset,
    secondaryCPICH-Info          SecondaryCPICH-Info OPTIONAL,
    dl-ChannelisationCodeList    DL-ChannelisationCodeList,
    tpc-CombinationIndex         TPC-CombinationIndex,
    ssdt-CellIdentity            SSDT-CellIdentity OPTIONAL,
    closedLoopTimingAdjMode      ClosedLoopTimingAdjMode OPTIONAL
  },
  tdd                          DL-CCTrChList
}

DL-DPCH-InfoPerRL-PostFDD ::= SEQUENCE {

```

```

        pCPICH-UsageForChannelEst
        dl-ChannelisationCode
        tpc-CombinationIndex
    }

DL-DPCH-InfoPerRL-PostTDD ::=
    dl-CCTrCH-TimeslotsCodes
}

DL-DPCH-PowerControlInfo ::=
    modeSpecificInfo
    fdd
        dpc-Mode
    },
    tdd
        tpc-StepSizeTDD
    }
}

DL-FrameType ::=
    ENUMERATED {
        dl-FrameTypeA, dl-FrameTypeB }

DL-InformationPerRL ::=
    modeSpecificInfo
    fdd
        primaryCPICH-Info
        pdsch-SHO-DCH-Info
        pdsch-CodeMapping
    },
    tdd
        PrimaryCCPCH-Info
    },
    dl-DPCH-InfoPerRL
    secondaryCCPCH-Info
}

DL-InformationPerRL-List ::=
    SEQUENCE (SIZE (1..maxRL)) OF
        DL-InformationPerRL

DL-InformationPerRL-ListPostFDD ::= SEQUENCE (SIZE (1..maxRL)) OF
        DL-InformationPerRL-PostFDD

DL-InformationPerRL-PostFDD ::=
    primaryCPICH-Info
    dl-DPCH-InfoPerRL
}

DL-InformationPerRL-PostTDD ::=
    primaryCCPCH-Info
    dl-DPCH-InfoPerRL
}

DL-PDSCH-Information ::=
    pdsch-SHO-DCH-Info
    pdsch-CodeMapping
}

DL-rate-matching-restriction ::=
    restrictedTrCH-InfoList
}

DL-TS-ChannelisationCode ::=
    ENUMERATED {
        cc16-1, cc16-2, cc16-3, cc16-4,
        cc16-5, cc16-6, cc16-7, cc16-8,
        cc16-9, cc16-10, cc16-11, cc16-12,
        cc16-13, cc16-14, cc16-15, cc16-16 }

DL-TS-ChannelisationCodesShort ::=
    codesRepresentation
    consecutive
        firstChannelisationCode
        lastChannelisationCode
    },
    bitmap
}

DownlinkAdditionalTimeslots ::=
    SEQUENCE {

```

```

parameters
    sameAsLast
        timeslotNumber
    },
    newParameters
        individualTimeslotInfo
        dl-TS-ChannelisationCodesShort
    }
}

DownlinkTimeslotsCodes ::= SEQUENCE {
    firstIndividualTimeslotInfo IndividualTimeslotInfo,
    dl-TS-ChannelisationCodesShort DL-TS-ChannelisationCodesShort,
    moreTimeslots
        noMore
            NULL,
        additionalTimeslots
            consecutive
            timeslotList
            CHOICE {
                INTEGER (1..maxTS-1),
                SEQUENCE (SIZE (1..maxTS-1)) OF
                    DownlinkAdditionalTimeslots
            }
    }
}

DPC-Mode ::= ENUMERATED {
    singleTPC,
    tpcTripletInSoft }

-- The actual value of DPCCH power offset is the value of this IE * 2.
DPCCH-PowerOffset ::= INTEGER (-82..-3)

DPCH-CompressedModeInfo ::= SEQUENCE {
    tgp-SequenceList
        TGP-SequenceList
}

DPCH-CompressedModeStatusInfo ::= SEQUENCE (SIZE (1..maxTGPS)) OF
    TGP-SequenceShort

-- TABULAR: Actual value = IE value * 256
DPCH-FrameOffset ::= INTEGER (0..149)

DSCH-Mapping ::= SEQUENCE {
    maxTFCI-Field2Value
        MaxTFCI-Field2Value,
    spreadingFactor
        SF-PDSCH,
    codeNumber
        CodeNumberDSCH,
    multiCodeInfo
        MultiCodeInfo
}

DSCH-MappingList ::= SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
    DSCH-Mapping

DSCH-RadioLinkIdentifier ::= INTEGER (0..511)

DurationTimeInfo ::= INTEGER (1..4096)

-- TABULAR : value [Duration = infinite] is the value by default,
-- and is encoded by absence of the full sequence. If the sequence is present,
-- thefield is absent, the default is respectivelyinfinite. Presence of the
-- field absent should not be used, but shall be understood as if the
-- sequence was absent.

DynamicPersistenceLevel ::= INTEGER (1..8)

DynamicPersistenceLevelList ::= SEQUENCE (SIZE (1..maxPRACH)) OF
    DynamicPersistenceLevel

DynamicPersistenceLevelTF-List ::= SEQUENCE (SIZE (1..maxTF-CPCH)) OF
    DynamicPersistenceLevel

FACH-PCH-Information ::= SEQUENCE {
    transportFormatSet
        TransportFormatSet,
    transportChannelIdentity
        TransportChannelIdentity,
    ctch-Indicator
        BOOLEAN
}

FACH-PCH-InformationList ::= SEQUENCE (SIZE (1..maxFACH)) OF
    FACH-PCH-Information

```



```

MidambleShiftShort ::=          INTEGER (0..5)

MinimumSpreadingFactor ::=      ENUMERATED {
                                  sf4, sf8, sf16, sf32,
                                  sf64, sf128, sf256 }

MultiCodeInfo ::=              INTEGER (1..16)

N-EOT ::=                      INTEGER (0..7)

N-GAP ::=                      ENUMERATED {
                                  f2, f4, f8 }

N-PCH ::=                      INTEGER (1..8)

N-StartMessage ::=            INTEGER (1..8)

NB01 ::=                      INTEGER (0..50)

NF-Max ::=                    INTEGER (1..64)

NumberOfDPDCH ::=            INTEGER (1..maxDPDCH-UL)

NumberOfFBI-Bits ::=          INTEGER (1..2)

OpenLoopPowerControl-TDD ::=  SEQUENCE {
    primaryCCPCH-TX-Power      PrimaryCCPCH-TX-Power,
    alpha                      Alpha,
    prach-ConstantValue        ConstantValue,
    dpch-ConstantValue         ConstantValue,
    pusch-ConstantValue        ConstantValue
}
                                OPTIONAL,
                                OPTIONAL

PagingIndicatorLength ::=      ENUMERATED {
                                  pi4, pi8, pi16 }

PC-Preamble ::=              ENUMERATED {
                                  pcp0, pcp15 }

PCP-Length ::=              ENUMERATED {
                                  as0, as8 }

PCPCH-ChannelInfo ::=        SEQUENCE {
    pcpch-UL-ScramblingCode    INTEGER (0..79),
    pcpch-DL-ChannelisationCode INTEGER (0..511),
    pcpch-DL-ScramblingCode    SecondaryScramblingCode,
    pcp-Length                 PCP-Length,
    ucsM-Info                  UCSM-Info
}
                                OPTIONAL,
                                OPTIONAL

PCPCH-ChannelInfoList ::=     SEQUENCE (SIZE (1..maxPCPCHs)) OF
                                PCPCH-ChannelInfo

PCPICH-UsageForChannelEst ::= ENUMERATED {
                                  mayBeUsed,
                                  shallNotBeUsed }

PDSCH-CapacityAllocationInfo ::= SEQUENCE {
    pdsch-PowerControlInfo     PDSCH-PowerControlInfo,
    pdsch-AllocationPeriodInfo AllocationPeriodInfo,
    tfcs-Identity              TFCS-IdentityPlain,
    configuration              CHOICE {
        old-Configuration      SEQUENCE {
            pdsch-Identity     PDSCH-Identity
        },
        new-Configuration      SEQUENCE {
            pdsch-Info         PDSCH-Info,
            pdsch-Identity     PDSCH-Identity
        }
    }
}
                                OPTIONAL,
                                OPTIONAL,
                                OPTIONAL

PDSCH-CodeInfo ::=           SEQUENCE {
    spreadingFactor            SF-PDSCH,
    codeNumber                 CodeNumberDSCH,
    multiCodeInfo              MultiCodeInfo
}

```

```

}

PDSCH-CodeInfoList ::=
    SEQUENCE (SIZE (1..maxTFCI-2-Combs)) OF
        PDSCH-CodeInfo

PDSCH-CodeMap ::=
    SEQUENCE {
        spreadingFactor
        multiCodeInfo
    }

PDSCH-CodeMapList ::=
    SEQUENCE (SIZE (1..maxPDSCH-TFCIgroups)) OF
        PDSCH-CodeMap

PDSCH-CodeMapping ::=
    SEQUENCE {
        dl-ScramblingCode
        signallingMethod
        codeRange
        tfci-Range
        explicit
        replace
    }
    CHOICE {
        SecondaryScramblingCode
        CodeRange,
        DSCH-MappingList,
        PDSCH-CodeInfoList,
        ReplacedPDSCH-CodeInfoList
    }
    OPTIONAL,

PDSCH-Identity ::=
    INTEGER (1..hiPDSCHidentities)

PDSCH-Info ::=
    SEQUENCE {
        tfcs-Identity
        commonTimeslotInfo
        pdsch-TimeslotsCodes
    }
    TFCS-IdentityPlain
    CommonTimeslotInfo
    DownlinkTimeslotsCodes
    OPTIONAL,
    OPTIONAL,
    OPTIONAL

PDSCH-PowerControlInfo ::=
    SEQUENCE {
        tpc-StepSizeTDD
        ul-CCTrChTPCList
    }
    TPC-StepSizeTDD
    UL-CCTrChTPCList
    OPTIONAL,
    OPTIONAL

PDSCH-SHO-DCH-Info ::=
    SEQUENCE {
        dsch-RadioLinkIdentifier
        tfci-CombiningSet
        rl-IdentifierList
    }
    DSCH-RadioLinkIdentifier,
    TFCI-CombiningSet
    RL-IdentifierList
    OPTIONAL,
    OPTIONAL

PDSCH-SysInfo ::=
    SEQUENCE {
        pdsch-Identity
        pdsch-Info
        dsch-TFS
        dsch-TFCS
    }
    PDSCH-Identity,
    PDSCH-Info,
    TransportFormatSet
    TFCS
    OPTIONAL,
    OPTIONAL

PDSCH-SysInfoList ::=
    SEQUENCE (SIZE (1..maxPDSCH)) OF
        PDSCH-SysInfo

PDSCH-SysInfoList-SFN ::=
    SEQUENCE (SIZE (1..maxPDSCH)) OF
        SEQUENCE {
            pdsch-SysInfo
            sfn-TimeInfo
        }
        PDSCH-SysInfo,
        SFN-TimeInfo
        OPTIONAL

PersistenceScalingFactor ::=
    ENUMERATED {
        psf0-9, psf0-8, psf0-7, psf0-6,
        psf0-5, psf0-4, psf0-3, psf0-2 }

PersistenceScalingFactorList ::=
    SEQUENCE (SIZE (1..maxASCpersist)) OF
        PersistenceScalingFactor

PI-CountPerFrame ::=
    ENUMERATED {
        e18, e36, e72, e144 }

PICH-Info ::=
    CHOICE {
        fdd
            SEQUENCE {
                channelisationCode256
                pi-CountPerFrame
                sttd-Indicator
            },
        tdd
            SEQUENCE {
                channelisationCode
                timeslot
            }
    }
    ChannelisationCode256,
    PI-CountPerFrame,
    BOOLEAN
    TDD-PICH-CCode
    TimeslotNumber
    OPTIONAL,
    OPTIONAL,

```

```

        burstType
            type-1
            type-2
        }
        repetitionPeriodLengthOffset
        pagingIndicatorLength
        n-GAP
        n-PCH
    }
}

PICH-PowerOffset ::=
    INTEGER (-10..5)

PilotBits128 ::=
    ENUMERATED {
        pb4, pb8
    }

PilotBits256 ::=
    ENUMERATED {
        pb2, pb4, pb8
    }

PositionFixedOrFlexible ::=
    ENUMERATED {
        fixed,
        flexible
    }

PowerControlAlgorithm ::=
    CHOICE {
        algorithm1
        algorithm2
    }

PowerRampStep ::=
    INTEGER (1..8)

PRACH-Midamble ::=
    ENUMERATED {
        direct,
        direct-Inverted
    }

PRACH-Partitioning ::=
    CHOICE {
        fdd
            SEQUENCE (SIZE (1..maxASC)) OF
                ASCSetting,
        tdd
            SEQUENCE (SIZE (1..maxASC)) OF
                ASC
    }

PRACH-PowerOffset ::=
    SEQUENCE {
        powerRampStep
        preambleRetransMax
    }

PRACH-RACH-Info ::=
    SEQUENCE {
        modeSpecificInfo
            CHOICE {
                fdd
                    SEQUENCE {
                        availableSignatures
                        availableSF
                        preambleScramblingCodeWordNumber
                        puncturingLimit
                        availableSubChannelNumbers
                    },
                tdd
                    SEQUENCE {
                        timeslot
                        channelisationCode
                        prach-Midamble
                    }
            }
    }

PRACH-SystemInformation ::=
    SEQUENCE {
        prach-RACH-Info
        transportChannelIdentity
        rach-TransportFormatSet
        rach-TFCS
        prach-Partitioning
        persistenceScalingFactorList
        ac-To-ASC-MappingTable
        modeSpecificInfo
            CHOICE {
                fdd
                    SEQUENCE {
                        primaryCPICH-TX-Power
                        constantValue
                        prach-PowerOffset
                        rach-TransmissionParameters
                        aich-Info
                    }
            }
    }

```

```

    },
    tdd
  }
}

PRACH-SystemInformationList ::= SEQUENCE (SIZE (1..maxPRACH)) OF
                                PRACH-SystemInformation

PreambleRetransMax ::= INTEGER (1..64)

PreambleScramblingCodeWordNumber ::= INTEGER (0..15)

PreDefPhyChConfiguration ::= SEQUENCE {
    ul-DPCH-InfoPredef          UL-DPCH-InfoPredef,
    dl-CommonInformationPredef  DL-CommonInformationPredef OPTIONAL
}

PrimaryCCPCH-Info ::= CHOICE {
    fdd
    tx-DiversityIndicator
  },
  tdd
  syncCase
  syncCase1
  timeslot
  },
  syncCase2
  timeslotSync2
  }
  cellParametersID          CellParametersID          OPTIONAL,
  blockSTTD-Indicator      BOOLEAN                    OPTIONAL,
}

PrimaryCCPCH-InfoPost ::= SEQUENCE {
  syncCase
  syncCase1
  timeslot
  },
  syncCase2
  timeslotSync2
  },
  cellParametersID          CellParametersID,
  blockSTTD-Indicator      BOOLEAN
}

PrimaryCCPCH-TX-Power ::= INTEGER (6..43)

PrimaryCPICH-Info ::= SEQUENCE {
  primaryScramblingCode
}

PrimaryCPICH-TX-Power ::= INTEGER (-10..50)

PrimaryScramblingCode ::= INTEGER (0..511)

PuncturingLimit ::= ENUMERATED {
  p10-40, p10-44, p10-48, p10-52, p10-56,
  p10-60, p10-64, p10-68, p10-72, p10-76,
  p10-80, p10-84, p10-88, p10-92, p10-96, p11 }

PUSCH-CapacityAllocationInfo ::= SEQUENCE {
  pusch-Allocation
  pusch-AllocationPending
  pusch-AllocationAssignment
  pdsch-AllocationPeriodInfo
  pusch-PowerControlInfo
  tfcs-Identity
  configuration
  old-Configuration
  pusch-Identity
  },
  new-Configuration
  pusch-Info
  pusch-Identity
}

```

```

    }
  }
}

PUSCH-Identity ::=                INTEGER (1..hiPUSCHidentities)

PUSCH-Info ::=                    SEQUENCE {
  tfcs-Identity                   TFCS-IdentityPlain           OPTIONAL,
  commonTimeslotInfo              CommonTimeslotInfo           OPTIONAL,
  pusch-TimeslotsCodes            UplinkTimeslotsCodes         OPTIONAL
}

PUSCH-SysInfo ::=                SEQUENCE {
  pusch-Identity                  PUSCH-Identity,
  pusch-Info                      PUSCH-Info,
  usch-TFS                        TransportFormatSet           OPTIONAL,
  usch-TFCS                       TFCS                       OPTIONAL
}

PUSCH-SysInfoList ::=            SEQUENCE (SIZE (1..maxPUSCH)) OF
  PUSCH-SysInfo

PUSCH-SysInfoList-SFN ::=        SEQUENCE (SIZE (1..maxPDSCH)) OF
  SEQUENCE {
    pusch-SysInfo                 PUSCH-SysInfo,
    sfn-TimeInfo                  SFN-TimeInfo                 OPTIONAL
  }

RACH-TransmissionParameters ::=  SEQUENCE {
  mmax                            INTEGER (1..32),
  nb01Min                         NB01,
  nb01Max                         NB01
}

ReducedScramblingCodeNumber ::=  INTEGER (0..8191)

RepetitionPeriodAndLength ::=    CHOICE {
  repetitionPeriod1                NULL,
  repetitionPeriod2                INTEGER (1..1),
  -- repetitionPeriod2 could just as well be NULL also.
  repetitionPeriod4                INTEGER (1..3),
  repetitionPeriod8                INTEGER (1..7),
  repetitionPeriod16               INTEGER (1..15),
  repetitionPeriod32               INTEGER (1..31),
  repetitionPeriod64               INTEGER (1..63)
}

RepetitionPeriodLengthAndOffset ::= CHOICE {
  repetitionPeriod1                NULL,
  repetitionPeriod2                SEQUENCE {
    length                         NULL,
    offset                         INTEGER (0..1)
  },
  repetitionPeriod4                SEQUENCE {
    length                         INTEGER (1..3),
    offset                         INTEGER (0..3)
  },
  repetitionPeriod8                SEQUENCE {
    length                         INTEGER (1..7),
    offset                         INTEGER (0..7)
  },
  repetitionPeriod16               SEQUENCE {
    length                         INTEGER (1..15),
    offset                         INTEGER (0..15)
  },
  repetitionPeriod32               SEQUENCE {
    length                         INTEGER (1..31),
    offset                         INTEGER (0..31)
  },
  repetitionPeriod64               SEQUENCE {
    length                         INTEGER (1..63),
    offset                         INTEGER (0..63)
  }
}

ReplacedPDSCH-CodeInfo ::=       SEQUENCE {
  tfci-Field2                     MaxTFCI-Field2Value,

```

```

    spreadingFactor          SF-PDSCH,
    codeNumber               CodeNumberDSCH,
    multiCodeInfo           MultiCodeInfo
}

ReplacedPDSCH-CodeInfoList ::= SEQUENCE (SIZE (1..maxTFCI-2-Combs)) OF
    ReplacedPDSCH-CodeInfo

RepPerLengthOffset-PICH ::= CHOICE {
    rpp4-2                   INTEGER (0..3),
    rpp8-2                   INTEGER (0..7),
    rpp8-4                   INTEGER (0..7),
    rpp16-2                  INTEGER (0..15),
    rpp16-4                  INTEGER (0..15),
    rpp32-2                  INTEGER (0..31),
    rpp32-4                  INTEGER (0..31),
    rpp64-2                  INTEGER (0..63),
    rpp64-4                  INTEGER (0..63)
}

RestrictedTrCH ::= SEQUENCE {
    restrictedDL-TrCH-Identity
    allowedTFIList
}

RestrictedTrCH-InfoList ::= SEQUENCE (SIZE(1..maxTrCH)) OF
    RestrictedTrCH

RL-AdditionInformation ::= SEQUENCE {
    primaryCPICH-Info       PrimaryCPICH-Info,
    dl-DPCH-InfoPerRL      DL-DPCH-InfoPerRL,
    tfci-CombiningIndicator BOOLEAN,
    sccpch-InfoForFACH      SCCPCH-InfoForFACH
} OPTIONAL

RL-AdditionInformationList ::= SEQUENCE (SIZE (1..maxRL)) OF
    RL-AdditionInformation

RL-IdentifierList ::= SEQUENCE (SIZE (1..maxRL)) OF
    PrimaryCPICH-Info

RL-RemovalInformationList ::= SEQUENCE (SIZE (1..maxRL-1)) OF
    PrimaryCPICH-Info

RPP ::= ENUMERATED {
    mode0, mode1
}

S-Field ::= ENUMERATED {
    e1bit, e2bits
}

SCCPCH-ChannelisationCode ::= ENUMERATED {
    cc16-1, cc16-2, cc16-3, cc16-4,
    cc16-5, cc16-6, cc16-7, cc16-8,
    cc16-9, cc16-10, cc16-11, cc16-12,
    cc16-13, cc16-14, cc16-15, cc16-16
}

SCCPCH-ChannelisationCodeList ::= SEQUENCE (SIZE (1..16)) OF
    SCCPCH-ChannelisationCode

SCCPCH-InfoForFACH ::= SEQUENCE {
    secondaryCCPCH-Info     SecondaryCCPCH-Info,
    tfcs                    TFCS,
    fach-PCH-InformationList
    sib-ReferenceListFACH   SIB-ReferenceListFACH
}

SCCPCH-SystemInformation ::= SEQUENCE {
    secondaryCCPCH-Info     SecondaryCCPCH-Info,
    tfcs                    TFCS
    fach-PCH-InformationList
    pich-Info               PICH-Info
} OPTIONAL,
OPTIONAL,
OPTIONAL

SCCPCH-SystemInformationList ::= SEQUENCE (SIZE (1..maxSCCPCH)) OF
    SCCPCH-SystemInformation

ScramblingCodeChange ::= ENUMERATED {
    codeChange, noCodeChange
}

```

```

ScramblingCodeType ::=
    ENUMERATED {
        shortSC,
        longSC }

SecondaryCCPCH-Info ::=
    modeSpecificInfo
    CHOICE {
        fdd
            SEQUENCE {
                pCPICH-UsageForChannelEst    PCPICH-UsageForChannelEst,
                secondaryCPICH-Info          SecondaryCPICH-Info          OPTIONAL,
                secondaryScramblingCode      SecondaryScramblingCode      OPTIONAL,
                sttd-Indicator                BOOLEAN,
                sf-AndCodeNumber             SF256-AndCodeNumber,
                pilotSymbolExistence         BOOLEAN,
                tfci-Existence                BOOLEAN,
                positionFixedOrFlexible       PositionFixedOrFlexible,
                timingOffset                  TimingOffset                  DEFAULT 0
            },
        tdd
            SEQUENCE {
                -- TABULAR: the offset is included in CommonTimeslotInfoSCCPCH
                commonTimeslotInfo           CommonTimeslotInfoSCCPCH,
                individualTimeslotInfo        IndividualTimeslotInfo,
                channelisationCode            SCCPCH-ChannelisationCodeList
            }
    }

SecondaryCPICH-Info ::=
    SEQUENCE {
        secondaryDL-ScramblingCode          SecondaryScramblingCode          OPTIONAL,
        channelisationCode                   ChannelisationCode256
    }

SecondaryScramblingCode ::=
    INTEGER (1..15)

SecondInterleavingMode ::=
    ENUMERATED {
        frameRelated, timeslotRelated }

-- SF256-AndCodeNumber encodes both "Spreading factor" and "Code Number"
SF256-AndCodeNumber ::=
    CHOICE {
        sf4          INTEGER (0..3),
        sf8          INTEGER (0..7),
        sf16         INTEGER (0..15),
        sf32         INTEGER (0..31),
        sf64         INTEGER (0..63),
        sf128        INTEGER (0..127),
        sf256        INTEGER (0..255)
    }

-- SF512-AndCodeNumber encodes both "Spreading factor" and "Code Number"
SF512-AndCodeNumber ::=
    CHOICE {
        sf4          INTEGER (0..3),
        sf8          INTEGER (0..7),
        sf16         INTEGER (0..15),
        sf32         INTEGER (0..31),
        sf64         INTEGER (0..63),
        sf128        INTEGER (0..127),
        sf256        INTEGER (0..255),
        sf512        INTEGER (0..511)
    }

-- SF512-AndPilot encodes both "Spreading factor" and "Number of bits for Pilot bits"
SF512-AndPilot ::=
    CHOICE {
        sfd4         NULL,
        sfd8         NULL,
        sfd16        NULL,
        sfd32        NULL,
        sfd64        NULL,
        sfd128       PilotBits128,
        sfd256       PilotBits256,
        sfd512       NULL
    }

SF-PDSCH ::=
    ENUMERATED {
        sfp4, sfp8, sfp16, sfp32,
        sfp64, sfp128, sfp256 }

SF-PRACH ::=
    ENUMERATED {
        sfpr32, sfpr64, sfpr128, sfpr256 }

```

```

SFN-TimeInfo ::=
    activationTimeSFN
    physChDuration
}
SEQUENCE {
    INTEGER (0..4095),
    DurationTimeInfo
}

SpreadingFactor ::=
    ENUMERATED {
        sf4, sf8, sf16, sf32,
        sf64, sf128, sf256 }

SSDT-CellIdentity ::=
    ENUMERATED {
        ssdt-id-a, ssdt-id-b, ssdt-id-c,
        ssdt-id-d, ssdt-id-e, ssdt-id-f,
        ssdt-id-g, ssdt-id-h }

SSDT-Information ::=
    s-Field
    codeWordSet
}
SEQUENCE {
    S-Field,
    CodeWordSet
}

TDD-PICH-CCode ::=
    ENUMERATED {
        cc16-1, cc16-2, cc16-3, cc16-4,
        cc16-5, cc16-6, cc16-7, cc16-8,
        cc16-9, cc16-10, cc16-11, cc16-12,
        cc16-13, cc16-14, cc16-15, cc16-16 }

TDD-PRACH-CCode8 ::=
    ENUMERATED {
        cc8-1, cc8-2, cc8-3, cc8-4,
        cc8-5, cc8-6, cc8-7, cc8-8 }

TDD-PRACH-CCode16 ::=
    ENUMERATED {
        cc16-1, cc16-2, cc16-3, cc16-4,
        cc16-5, cc16-6, cc16-7, cc16-8,
        cc16-9, cc16-10, cc16-11, cc16-12,
        cc16-13, cc16-14, cc16-15, cc16-16 }

TDD-PRACH-CCodeList ::=
    sf8
    sf16
}
CHOICE {
    SEQUENCE (SIZE (1..8)) OF
        TDD-PRACH-CCode8,
    SEQUENCE (SIZE (1..8)) OF
        TDD-PRACH-CCode16
}

TFC-ControlDuration ::=
    ENUMERATED {
        tfc-cd1, tfc-cd2, tfc-cd4, tfc-cd8,
        tfc-cd16, tfc-cd24, tfc-cd32,
        tfc-cd48, tfc-cd64, tfc-cd128,
        tfc-cd192, tfc-cd256, tfc-cd512 }

TFCI-Coding ::=
    ENUMERATED {
        tfcI-bits-4, tfcI-bits-8,
        tfcI-bits-16, tfcI-bits-32 }

-- **TODO**, not defined
TFCI-CombiningSet ::=
}
SEQUENCE {

TGCFN ::=
    INTEGER (0..255)

-- The value 270 represents "undefined" in the tabular description.
TGD ::=
    INTEGER (15..270)

TGL ::=
    INTEGER (1..14)

TGMP ::=
    ENUMERATED {
        tdd-Measurement, fdd-Measurement,
        gsm-CarrierRSSIMeasurement,
        gsm-initialBSICIdentification, gsmBSICReconfirmation }

TGP-Sequence ::=
    tgpsi
    tgps-StatusFlag
    tgcfn
    tgps-ConfigurationParams
}
SEQUENCE {
    TGPSI,
    TGPS-StatusFlag,
    TGCFN,
    TGPS-ConfigurationParams
    OPTIONAL

TGP-SequenceList ::=
    SEQUENCE (SIZE (1..maxTGPS)) OF
        TGP-Sequence

```

```

TGP-SequenceShort ::=          SEQUENCE {
    tgpsi                      TGPSI,
    tgps-StatusFlag           TGPS-StatusFlag,
    tgcfn                      TGCFN
}

TGPL ::=                       INTEGER (1..144)

-- TABULAR: The value 0 represents "infinity" in the tabular description.
TGPRC ::=                      INTEGER (0..63)

TGPS-ConfigurationParams ::=  SEQUENCE {
    tgmp                      TGMP,
    tgprc                    TGPRC,
    tgsn                     TGSN,
    tgl1                     TGL,
    tgl2                     TGL                                OPTIONAL,
    tgd                      TGD,
    tgpl1                    TGPL,
    tgpl2                    TGPL                                OPTIONAL,
    rpp                      RPP,
    itp                      ITP,
    ul-DL-Mode              UL-DL-Mode,
    -- TABULAR: Compressed mode method is nested inside UL-DL-Mode
    dl-FrameType            DL-FrameType,
    deltaSIR1               DeltaSIR,
    deltaSIRAfter1          DeltaSIR,
    deltaSIR2               DeltaSIR                                OPTIONAL,
    deltaSIRAfter2          DeltaSIR                                OPTIONAL
}

TGPS-StatusFlag ::=          ENUMERATED {
    tgpsActive, tgpsInactive }

TGPSI ::=                     INTEGER (1..maxTGPS)

TGSN ::=                       INTEGER (0..14)

TimeInfo ::=                  SEQUENCE {
    activationTime           ActivationTime                                OPTIONAL,
    durationTimeInfo        DurationTimeInfo                            OPTIONAL
}

TimeslotList ::=             SEQUENCE (SIZE (1..maxTS)) OF
    TimeslotNumber

TimeslotNumber ::=           INTEGER (0..14)

TimeslotSync2 ::=            INTEGER (0..6)

-- Actual value = IE value * 256
TimingOffset ::=             INTEGER (0..149)

TPC-CombinationIndex ::=     INTEGER (0..5)

TPC-StepSizeFDD ::=          INTEGER (0..1)

TPC-StepSizeTDD ::=          INTEGER (1..3)

TX-DiversityMode ::=         ENUMERATED {
    noDiversity,
    sttd,
    closedLoopModel1,
    closedLoopMode2 }

UARFCN ::=                   INTEGER (0..16383)

UCSM-Info ::=                SEQUENCE {
    minimumSpreadingFactor   MinimumSpreadingFactor,
    nF-Max                   NF-Max,
    channelReqParamsForUCSM  ChannelReqParamsForUCSM
}

UL-CCTrCH ::=                SEQUENCE {
    tfcs-Identity            TFCS-IdentityPlain                                OPTIONAL,
    timeInfo                 TimeInfo,
    commonTimeslotInfo       CommonTimeslotInfo                            OPTIONAL,
    ul-CCTrCH-TimeslotsCodes UplinkTimeslotsCodes                            OPTIONAL
}

```

```

}
UL-CCTrCHList ::= SEQUENCE (SIZE (1..maxCCTrCH)) OF
                  UL-CCTrCH
UL-CCTrChTPCList ::= SEQUENCE (SIZE (0..maxCCTrCH)) OF
                    TFCS-Identity
UL-ChannelRequirement ::= CHOICE {
    ul-DPCH-Info      UL-DPCH-Info,
    cpch-SetInfo      CPCH-SetInfo
}
UL-ChannelRequirementWithCPCH-SetID ::= CHOICE {
    ul-DPCH-Info      UL-DPCH-Info,
    cpch-SetInfo      CPCH-SetInfo,
    cpch-SetID        CPCH-SetID
}
UL-CompressedModeMethod ::= ENUMERATED {
    sf-2,
    higherLayerScheduling }
UL-DL-Mode ::= CHOICE {
    ul      UL-CompressedModeMethod,
    dl      DL-CompressedModeMethod
}
UL-DPCCH-SlotFormat ::= ENUMERATED {
    slf0, slf1, slf2 }
UL-DPCH-Info ::= SEQUENCE {
    ul-DPCH-PowerControlInfo      UL-DPCH-PowerControlInfo      OPTIONAL,
    modeSpecificInfo              CHOICE {
        fdd                      SEQUENCE {
            scramblingCodeType    ScramblingCodeType,
            scramblingCode         UL-ScramblingCode,
            numberOfDPDCH          NumberOfDPDCH              DEFAULT 1,
            spreadingFactor        SpreadingFactor,
            tfci-Existence         BOOLEAN,
            numberOfFBI-Bits       NumberOfFBI-Bits              OPTIONAL,
            -- The IE above is conditional based on history
            puncturingLimit        PuncturingLimit
        },
        tdd                      SEQUENCE {
            ul-TimingAdvance       UL-TimingAdvanceControl      OPTIONAL,
            ul-CCTrCHList          UL-CCTrCHList
        }
    }
}
UL-DPCH-InfoPostFDD ::= SEQUENCE {
    ul-DPCH-PowerControlInfo      UL-DPCH-PowerControlInfoPostFDD,
    scramblingCodeType            ScramblingCodeType,
    reducedScramblingCodeNumber   ReducedScramblingCodeNumber,
    spreadingFactor                SpreadingFactor
}
UL-DPCH-InfoPostTDD ::= SEQUENCE {
    ul-DPCH-PowerControlInfo      UL-DPCH-PowerControlInfoPostTDD,
    ul-TimingAdvance              UL-TimingAdvanceControl      OPTIONAL,
    ul-CCTrCH-TimeslotsCodes      UplinkTimeslotsCodes
}
UL-DPCH-InfoPredef ::= SEQUENCE {
    ul-DPCH-PowerControlInfo      UL-DPCH-PowerControlInfoPredef,
    modeSpecificInfo              CHOICE {
        fdd                      SEQUENCE {
            tfci-Existence        BOOLEAN,
            puncturingLimit       PuncturingLimit
        },
        tdd                      SEQUENCE {
            commonTimeslotInfo     CommonTimeslotInfo
        }
    }
}

```

```

UL-DPCH-PowerControlInfo ::= CHOICE {
  fdd SEQUENCE {
    dpcch-PowerOffset DPCCH-PowerOffset,
    pc-Preamble PC-Preamble,
    powerControlAlgorithm PowerControlAlgorithm
    -- TABULAR: TPC step size nested inside PowerControlAlgorithm
  },
  tdd SEQUENCE {
    ul-TargetSIR UL-TargetSIR,
    ul-OL-PC-Signalling CHOICE {
      broadcast-UL-OL-PC-info NULL,
      handoverGroup SEQUENCE {
        individualTS-InterferenceList IndividualTS-InterferenceList,
        dpch-ConstantValue ConstantValue,
        primaryCCPCH-TX-Power PrimaryCCPCH-TX-Power
      }
    }
  }
}
OPTIONAL

UL-DPCH-PowerControlInfoPostFDD ::= SEQUENCE {
  powerControlAlgorithm PowerControlAlgorithm
  -- TABULAR: TPC step size nested inside PowerControlAlgorithm
}

UL-DPCH-PowerControlInfoPostTDD ::= SEQUENCE {
  ul-TargetSIR UL-TargetSIR,
  ul-TimeslotInterference UL-Interference
}

UL-DPCH-PowerControlInfoPredef ::= CHOICE {
  fdd SEQUENCE {
    dpcch-PowerOffset DPCCH-PowerOffset,
    pc-Preamble PC-Preamble
  },
  tdd SEQUENCE {
    dpch-ConstantValue ConstantValue
  }
}

UL-Interference ::= INTEGER (-110..-70)

UL-ScramblingCode ::= INTEGER (0..16777215)

-- Actual value = (IE value * 0.5) - 11
UL-TargetSIR ::= INTEGER (0..62)

UL-TimingAdvance ::= INTEGER (0..63)

UL-TimingAdvanceControl ::= CHOICE {
  disabled NULL,
  enabled SEQUENCE {
    ul-TimingAdvance UL-TimingAdvance OPTIONAL,
    activationTime ActivationTime OPTIONAL
  }
}

UL-TS-ChannelisationCode ::= ENUMERATED {
  cc1-1, cc2-1, cc2-2,
  cc4-1, cc4-2, cc4-3, cc4-4,
  cc8-1, cc8-2, cc8-3, cc8-4,
  cc8-5, cc8-6, cc8-7, cc8-8,
  cc16-1, cc16-2, cc16-3, cc16-4,
  cc16-5, cc16-6, cc16-7, cc16-8,
  cc16-9, cc16-10, cc16-11, cc16-12,
  cc16-13, cc16-14, cc16-15, cc16-16 }

UL-TS-ChannelisationCodeList ::= SEQUENCE (SIZE (1..2)) OF
  UL-TS-ChannelisationCode

UplinkAdditionalTimeslots ::= SEQUENCE {
  parameters CHOICE {
    sameAsLast SEQUENCE {
      timeslotNumber TimeslotNumber
    },
    newParameters SEQUENCE {
      individualTimeslotInfo IndividualTimeslotInfo,
      ul-TS-ChannelisationCodeList UL-TS-ChannelisationCodeList
    }
  }
}

```

```

    }
  }
}

UplinkTimeslotsCodes ::=
dynamicSFusage          SEQUENCE {
  firstIndividualTimeslotInfo  BOOLEAN,
  ul-TS-ChannelisationCodeList IndividualTimeslotInfo,
  moreTimeslots              CHOICE {
    noMore                   NULL,
    additionalTimeslots      CHOICE {
      consecutive            SEQUENCE {
        numAdditionalTimeslots INTEGER (1..maxTS-1)
      },
      timeslotList           SEQUENCE (SIZE (1..maxTS-1)) OF
        UplinkAdditionalTimeslots
    }
  }
}

-- *****
--
--   MEASUREMENT INFORMATION ELEMENTS (10.3.7)
--
-- *****

AcquisitionSatInfo ::=
satID                   SEQUENCE {
  SatID,
  doppler0thOrder       INTEGER (-2048..2047),
  extraDopplerInfo      ExtraDopplerInfo OPTIONAL,
  codePhase              INTEGER (0..1022),
  integerCodePhase       INTEGER (0..19),
  gps-BitNumber          INTEGER (0..3),
  codePhaseSearchWindow CodePhaseSearchWindow,
  azimuthAndElevation    AzimuthAndElevation OPTIONAL
}

AcquisitionSatInfoList ::= SEQUENCE (SIZE (1..maxSat)) OF
  AcquisitionSatInfo

AdditionalAssistanceData ::= OCTET STRING (SIZE (1..38))

AdditionalMeasurementID-List ::= SEQUENCE (SIZE (1..maxAdditionalMeas)) OF
  MeasurementIdentity

AlmanacSatInfo ::=
satID                   SEQUENCE {
  SatID,
  e                     BIT STRING (SIZE (16)),
  t-oa                  BIT STRING (SIZE (8)),
  deltaI                BIT STRING (SIZE (16)),
  omegaDot              BIT STRING (SIZE (16)),
  satHealth              BIT STRING (SIZE (8)),
  a-Sqrt                BIT STRING (SIZE (24)),
  omega0                BIT STRING (SIZE (24)),
  m0                    BIT STRING (SIZE (24)),
  omega                 BIT STRING (SIZE (24)),
  af0                   BIT STRING (SIZE (11)),
  af1                   BIT STRING (SIZE (11))
}

AlmanacSatInfoList ::= SEQUENCE (SIZE (1..maxSat)) OF
  AlmanacSatInfo

AverageRLC-BufferPayload ::= ENUMERATED {
  pla0, pla4, pla8, pla16, pla32,
  pla64, pla128, pla256, pla512,
  pla1024, pla2k, pla4k, pla8k, pla16k,
  pla32k, pla64k, pla128k, pla256k,
  pla512k, pla1024k }

AzimuthAndElevation ::=
azimuth                SEQUENCE {
  azimuth              INTEGER (0..31),
  elevation             INTEGER (0..7)
}

BadSatList ::= SEQUENCE (SIZE (1..maxSat)) OF
  INTEGER (0..63)

```

```

BCCH-ARFCN ::= INTEGER (0..1023)

BLER-MeasurementResults ::= SEQUENCE {
    transportChannelIdentity TransportChannelIdentity,
    dl-TransportChannelBLER DL-TransportChannelBLER OPTIONAL
}

BLER-MeasurementResultsList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    BLER-MeasurementResults

BLER-TransChIdList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    TransportChannelIdentity

BSIC-VerificationRequired ::= ENUMERATED {
    required, notRequired }

BSICReported ::= CHOICE {
    verifiedBSIC INTEGER (0..maxCellMeas),
    nonVerifiedBSIC BCCH-ARFCN
}

BurstModeParameters ::= SEQUENCE {
    burstStart INTEGER (0..15),
    burstLength INTEGER (10..25),
    burstFreq INTEGER (1..16)
}

CellDCH-ReportCriteria ::= CHOICE {
    intraFreqReportingCriteria IntraFreqReportingCriteria,
    periodicalReportingCriteria PeriodicalReportingCriteria
}

-- Actual value = IE value * 0.5
CellIndividualOffset ::= INTEGER (-20..20)

CellInfo ::= SEQUENCE {
    cellIndividualOffset CellIndividualOffset DEFAULT 0,
    referenceTimeDifferenceToCell ReferenceTimeDifferenceToCell OPTIONAL,
    modeSpecificInfo CHOICE {
        fdd SEQUENCE {
            primaryCPICH-Info PrimaryCPICH-Info OPTIONAL,
            primaryCPICH-TX-Power PrimaryCPICH-TX-Power OPTIONAL,
            readSFN-Indicator BOOLEAN,
            tx-DiversityIndicator BOOLEAN
        },
        tdd SEQUENCE {
            primaryCCPCH-Info PrimaryCCPCH-Info,
            primaryCCPCH-TX-Power PrimaryCCPCH-TX-Power OPTIONAL,
            timeslotInfoList TimeslotInfoList OPTIONAL
        }
    }
}

CellInfoSI-RSCP ::= SEQUENCE {
    cellIndividualOffset CellIndividualOffset DEFAULT 0,
    referenceTimeDifferenceToCell ReferenceTimeDifferenceToCell OPTIONAL,
    modeSpecificInfo CHOICE {
        fdd SEQUENCE {
            primaryCPICH-Info PrimaryCPICH-Info OPTIONAL,
            primaryCPICH-TX-Power PrimaryCPICH-TX-Power OPTIONAL,
            readSFN-Indicator BOOLEAN,
            tx-DiversityIndicator BOOLEAN
        },
        tdd SEQUENCE {
            primaryCCPCH-Info PrimaryCCPCH-Info,
            primaryCCPCH-TX-Power PrimaryCCPCH-TX-Power OPTIONAL,
            timeslotInfoList TimeslotInfoList OPTIONAL
        }
    },
    cellSelectionReselectionInfo CellSelectReselectInfoSIB-11-12-RSCP OPTIONAL
}

CellInfoSI-ECNO ::= SEQUENCE {
    cellIndividualOffset CellIndividualOffset DEFAULT 0,
    referenceTimeDifferenceToCell ReferenceTimeDifferenceToCell OPTIONAL,
    modeSpecificInfo CHOICE {
        fdd SEQUENCE {

```

```

        primaryCPICH-Info          PrimaryCPICH-Info          OPTIONAL,
        primaryCPICH-TX-Power      PrimaryCPICH-TX-Power     OPTIONAL,
        readSFN-Indicator          BOOLEAN,
        tx-DiversityIndicator      BOOLEAN
    },
    tdd
        primaryCCPCH-Info          PrimaryCCPCH-Info,
        primaryCCPCH-TX-Power      PrimaryCCPCH-TX-Power     OPTIONAL,
        timeslotInfoList           TimeslotInfoList         OPTIONAL
    }
},
cellSelectionReselectionInfo      CellSelectReselectInfoSIB-11-12-ECN0  OPTIONAL
}

CellInfoSI-HCS-RSCP ::=
cellIndividualOffset              CellIndividualOffset          DEFAULT 0,
referenceTimeDifferenceToCell     ReferenceTimeDifferenceToCell  OPTIONAL,
modeSpecificInfo                 CHOICE {
    fdd
        primaryCPICH-Info          PrimaryCPICH-Info          OPTIONAL,
        primaryCPICH-TX-Power      PrimaryCPICH-TX-Power     OPTIONAL,
        readSFN-Indicator          BOOLEAN,
        tx-DiversityIndicator      BOOLEAN
    },
    tdd
        primaryCCPCH-Info          PrimaryCCPCH-Info,
        primaryCCPCH-TX-Power      PrimaryCCPCH-TX-Power     OPTIONAL,
        timeslotInfoList           TimeslotInfoList         OPTIONAL
    }
},
cellSelectionReselectionInfo      CellSelectReselectInfoSIB-11-12-HCS-RSCP  OPTIONAL
}

CellInfoSI-HCS-ECN0 ::=
cellIndividualOffset              CellIndividualOffset          DEFAULT 0,
referenceTimeDifferenceToCell     ReferenceTimeDifferenceToCell  OPTIONAL,
modeSpecificInfo                 CHOICE {
    fdd
        primaryCPICH-Info          PrimaryCPICH-Info          OPTIONAL,
        primaryCPICH-TX-Power      PrimaryCPICH-TX-Power     OPTIONAL,
        readSFN-Indicator          BOOLEAN,
        tx-DiversityIndicator      BOOLEAN
    },
    tdd
        primaryCCPCH-Info          PrimaryCCPCH-Info,
        primaryCCPCH-TX-Power      PrimaryCCPCH-TX-Power     OPTIONAL,
        timeslotInfoList           TimeslotInfoList         OPTIONAL
    }
},
cellSelectionReselectionInfo      CellSelectReselectInfoSIB-11-12-HCS-ECN0  OPTIONAL
}

CellMeasuredResults ::=
cellIdentity                      CellIdentity                  OPTIONAL,
sfn-SFN-ObsTimeDifference        SFN-SFN-ObsTimeDifference     OPTIONAL,
cellSynchronisationInfo          CellSynchronisationInfo       OPTIONAL,
modeSpecificInfo                 CHOICE {
    fdd
        primaryCPICH-Info          PrimaryCPICH-Info,
        cpich-Ec-N0                CPICH-Ec-N0                OPTIONAL,
        cpich-RSCP                 CPICH-RSCP                 OPTIONAL,
        pathloss                   Pathloss                   OPTIONAL
    },
    tdd
        cellParametersID           CellParametersID,
        proposedTGSN               TGSN                      OPTIONAL,
        primaryCCPCH-RSCP          PrimaryCCPCH-RSCP          OPTIONAL,
        timeslotISCP-List          TimeslotISCP-List         OPTIONAL
    }
}

CellMeasurementEventResults ::=
fdd
    SEQUENCE (SIZE (1..maxCellMeas)) OF
        PrimaryCPICH-Info,
tdd
    SEQUENCE (SIZE (1..maxCellMeas)) OF
        PrimaryCCPCH-Info
}

```

```

CellPosition ::=
    relativeNorth          INTEGER (-32767..32767),
    relativeEast           INTEGER (-32767..32767),
    relativeAltitude      INTEGER (-4095..4095)
}

CellReportingQuantities ::=
    sfN-SFN-OTD-Type      SFN-SFN-OTD-Type,
    cellIdentity-reportingIndicator    BOOLEAN,
    cellSynchronisationInfoReportingIndicator    BOOLEAN,
    modeSpecificInfo      CHOICE {
        fdd                SEQUENCE {
            cpich-Ec-N0-reportingIndicator    BOOLEAN,
            cpich-RSCP-reportingIndicator      BOOLEAN,
            pathloss-reportingIndicator        BOOLEAN
        },
        tdd                SEQUENCE {
            timeslotISCP-reportingIndicator    BOOLEAN,
            proposedTGSN-ReportingRequired     BOOLEAN,
            primaryCCPCH-RSCP-reportingIndicator    BOOLEAN,
            pathloss-reportingIndicator        BOOLEAN
        }
    }
}

CellSelectReselectInfoSIB-11-12 ::= SEQUENCE {
    q-Offset1S-N          Q-OffsetS-N          DEFAULT 0,
    q-Offset2S-N          Q-OffsetS-N          OPTIONAL,
    maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL,
    hcs-NeighbouringCellInformation-RSCP      HCS-NeighbouringCellInformation-RSCP
    OPTIONAL,
    modeSpecificInfo      CHOICE {
        fdd                SEQUENCE {
            q-QualMin      Q-QualMin          OPTIONAL,
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        tdd                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        gsm                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        }
    }
}

CellSelectReselectInfoSIB-11-12-RSCP ::= SEQUENCE {
    q-OffsetS-N          Q-OffsetS-N          DEFAULT 0,
    maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL,
    modeSpecificInfo      CHOICE {
        fdd                SEQUENCE {
            q-QualMin      Q-QualMin          OPTIONAL,
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        tdd                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        gsm                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        }
    }
}

CellSelectReselectInfoSIB-11-12-ECNO ::= SEQUENCE {
    q-Offset1S-N          Q-OffsetS-N          DEFAULT 0,
    q-Offset2S-N          Q-OffsetS-N          DEFAULT 0,
    maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL,
    modeSpecificInfo      CHOICE {
        fdd                SEQUENCE {
            q-QualMin      Q-QualMin          OPTIONAL,
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        tdd                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        },
        gsm                SEQUENCE {
            q-RxlevMin     Q-RxlevMin         OPTIONAL
        }
    }
}

```

```

    }
}

CellSelectReselectInfoSIB-11-12-HCS-RSCP ::= SEQUENCE {
    q-OffsetS-N          Q-OffsetS-N          DEFAULT 0,
    maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL,
    hcs-NeighbouringCellInformation-RSCP HCS-NeighbouringCellInformation-RSCP
    OPTIONAL,
    modeSpecificInfo    CHOICE {
        fdd              SEQUENCE {
            q-QualMin    Q-QualMin          OPTIONAL,
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        },
        tdd              SEQUENCE {
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        },
        gsm              SEQUENCE {
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        }
    }
}

CellSelectReselectInfoSIB-11-12-HCS-ECNO ::= SEQUENCE {
    q-Offset1S-N        Q-OffsetS-N          DEFAULT 0,
    q-Offset2S-N        Q-OffsetS-N          DEFAULT 0,
    maxAllowedUL-TX-Power MaxAllowedUL-TX-Power OPTIONAL,
    hcs-NeighbouringCellInformation-ECNO HCS-NeighbouringCellInformation-ECNO
    OPTIONAL,
    modeSpecificInfo    CHOICE {
        fdd              SEQUENCE {
            q-QualMin    Q-QualMin          OPTIONAL,
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        },
        tdd              SEQUENCE {
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        },
        gsm              SEQUENCE {
            q-RxlevMin   Q-RxlevMin        OPTIONAL
        }
    }
}

CellSynchronisationInfo ::= SEQUENCE {
    modeSpecificInfo    CHOICE {
        fdd              SEQUENCE {
            countC-SFN-Frame-difference CountC-SFN-Frame-difference OPTIONAL,
            tm            INTEGER(0..38399)
        },
        tdd              SEQUENCE {
            countC-SFN-Frame-difference CountC-SFN-Frame-difference
        }
    }
}

CellToMeasure ::= SEQUENCE {
    sfn-sfn-Drift      INTEGER (0..30)          OPTIONAL,
    primaryCPICH-Info PrimaryCPICH-Info,
    frequencyInfo      FrequencyInfo          OPTIONAL,
    sfn-SFN-ObservedTimeDifference SFN-SFN-ObsTimeDifference1,
    fineSFN-SFN        FineSFN-SFN,
    cellPosition        CellPosition          OPTIONAL
}

CellToMeasureInfoList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    CellToMeasure

CellToReport ::= SEQUENCE {
    bsicReported       BSICReported
}

CellToReportList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    CellToReport

CodePhaseSearchWindow ::= ENUMERATED {
    w1023, w1, w2, w3, w4, w6, w8,
    w12, w16, w24, w32, w48, w64,
    w96, w128, w192 }

```

```

CountC-SFN-Frame-difference ::= SEQUENCE {
    countC-SFN-High      INTEGER(0..15),      -- Actual value = IE value * 256
    off                   INTEGER(0..255)
}

CPICH-Ec-NO ::=                INTEGER (-20..0)

-- IE value 0 = <-24 dB, 1 = between -24 and -23 and so on
CPICH-Ec-NO-OTDOA ::=          INTEGER (0..26)

CPICH-RSCP ::=                 INTEGER (-115..-40)

DeltaPRC ::=                   INTEGER (-127..127)

DeltaRRC ::=                   INTEGER (-7..7)

DGPS-CorrectionSatInfo ::=     SEQUENCE {
    satID                 SatID,
    iode                  BIT STRING (SIZE (8)),
    udre                  UDRE,
    prc                   PRC,
    rrc                   RRC,
    deltaPRC2             DeltaPRC,
    deltaRRC2             DeltaRRC,
    deltaPRC3             DeltaPRC,
    deltaRRC3             DeltaRRC
}

DGPS-CorrectionSatInfoList ::= SEQUENCE (SIZE (1..maxSat)) OF
    DGPS-CorrectionSatInfo

DGPS-Information ::=           SEQUENCE {
    satID                 SatID,
    iode                  IODE,
    udre                  UDRE,
    prc                   PRC,
    rrc                   RRC,
    deltaPRC2             DeltaPRC,
    deltaRRC2             DeltaRRC
}

DGPS-InformationList ::=       SEQUENCE (SIZE (1..maxSat)) OF
    DGPS-Information

DiffCorrectionStatus ::=       ENUMERATED {
    udre-1-0, udre-0-75, udre-0-5, udre-0-3,
    udre-0-2, udre-0-1, noData, invalidData }

-- Actual value = IE value * 0.02
DL-PhysicalChannelBER ::=      INTEGER (0..255)

DL-TransportChannelBLER ::=    INTEGER (0..63)

DopplerUncertainty ::=         ENUMERATED {
    hz12-5, hz25, hz50, hz100, hz200 }

EllipsoidPoint ::=            OCTET STRING (SIZE (7))

EllipsoidPointAltitude ::=     OCTET STRING (SIZE (9))

EllipsoidPointAltitudeEllipse ::= OCTET STRING (SIZE (14))

EllipsoidPointUncertCircle ::= OCTET STRING (SIZE (8))

EllipsoidPointUncertEllipse ::= OCTET STRING (SIZE (11))

EnvironmentCharacterisation ::= ENUMERATED {
    possibleHeavyMultipathNLOS,
    lightMultipathLOS,
    notDefined }

Eventla ::=                   SEQUENCE {
    triggeringCondition     TriggeringCondition2,
    reportingRange         ReportingRange,
    forbiddenAffectCellList ForbiddenAffectCellList      OPTIONAL,
    w                      W,
    reportDeactivationThreshold ReportDeactivationThreshold,

```

```

    reportingAmount          ReportingAmount,
    reportingInterval        ReportingInterval
}

Event1b ::=
    triggeringCondition      TriggeringCondition1,
    reportingRange          ReportingRange,
    forbiddenAffectCellList ForbiddenAffectCellList          OPTIONAL,
    w                        W
}

Event1c ::=
    replacementActivationThreshold ReplacementActivationThreshold,
    reportingAmount          ReportingAmount,
    reportingInterval        ReportingInterval
}

Event1e ::=
    triggeringCondition      TriggeringCondition2,
    thresholdUsedFrequency   ThresholdUsedFrequency
}

Event1f ::=
    triggeringCondition      TriggeringCondition1,
    thresholdUsedFrequency   ThresholdUsedFrequency
}

Event2a ::=
    usedFreqThreshold        Threshold,
    usedFreqW                W,
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL,
    nonUsedFreqParameterList NonUsedFreqParameterList      OPTIONAL
}

Event2b ::=
    usedFreqThreshold        Threshold,
    usedFreqW                W,
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL,
    nonUsedFreqParameterList NonUsedFreqParameterList      OPTIONAL
}

Event2c ::=
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL,
    nonUsedFreqParameterList NonUsedFreqParameterList      OPTIONAL
}

Event2d ::=
    usedFreqThreshold        Threshold,
    usedFreqW                W,
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL
}

Event2e ::=
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL,
    nonUsedFreqParameterList NonUsedFreqParameterList      OPTIONAL
}

Event2f ::=
    usedFreqThreshold        Threshold,
    usedFreqW                W,
    hysteresis               HysteresisInterFreq,
    timeToTrigger            TimeToTrigger,
    reportingCellStatus      ReportingCellStatus          OPTIONAL
}

Event3a ::=
    thresholdOwnSystem       Threshold,
    w                         W,

```



```

        cpich-RSCP }

FreqQualityEstimateQuantity-TDD ::= ENUMERATED {
    primaryCCPCH-RSCP }

GPS-MeasurementParam ::= SEQUENCE {
    satelliteID          INTEGER (0..63),
    c-NO                 INTEGER (0..63),
    doppler              INTEGER (-32768..32768),
    wholeGPS-Chips       INTEGER (0..1023),
    fractionalGPS-Chips  INTEGER (0..1023),
    multipathIndicator    MultipathIndicator,
    pseudorangeRMS-Error INTEGER (0..63)
}

GPS-MeasurementParamList ::= SEQUENCE (SIZE (1..maxSat)) OF
    GPS-MeasurementParam

GSM-CarrierRSSI ::= BIT STRING (SIZE (6))

GSM-MeasuredResults ::= SEQUENCE {
    gsm-CarrierRSSI          GSM-CarrierRSSI          OPTIONAL,
    pathloss                 Pathloss                 OPTIONAL,
    bsicReported             BSICReported,
    observedTimeDifferenceToGSM ObservedTimeDifferenceToGSM OPTIONAL
}

GSM-MeasuredResultsList ::= SEQUENCE (SIZE (1..maxReportedGSMCells)) OF
    GSM-MeasuredResults

-- **TODO**, not defined yet
GSM-OutputPower ::= SEQUENCE {
}

GPS-TOW-1msec ::= INTEGER (0..604799999)

GPS-TOW-1usec ::= SEQUENCE {
    tow-1msec      GPS-TOW-1msec,
    tow-rem-usec   GPS-TOW-rem-usec
}

GPS-TOW-Assist ::= SEQUENCE {
    satID          SatID,
    tlm-Message    BIT STRING (SIZE (14)),
    antiSpoof      BOOLEAN,
    alert          BOOLEAN,
    tlm-Reserved   BIT STRING (SIZE (2))
}

GPS-TOW-AssistList ::= SEQUENCE (SIZE (1..maxSat)) OF
    GPS-TOW-Assist

GPS-TOW-rem-usec ::= INTEGER (0..999)

HCS-CellReselectInformation-RSCP ::= SEQUENCE {
    penaltyTime          PenaltyTime-RSCP
    -- TABULAR: The default value is "notUsed", temporary offset is nested inside PenaltyTime
}

HCS-CellReselectInformation-ECNO ::= SEQUENCE {
    penaltyTime          PenaltyTime-ECNO
    -- TABULAR: The default value is "notUsed", temporary offset is nested inside PenaltyTime
}

HCS-NeighbouringCellInformation-RSCP ::= SEQUENCE {
    hcs-PRIO             HCS-PRIO             DEFAULT 0,
    q-HCS                Q-HCS                DEFAULT 0,
    hcs-CellReselectInformation HCS-CellReselectInformation-RSCP
}

HCS-NeighbouringCellInformation-ECNO ::= SEQUENCE {
    hcs-PRIO             HCS-PRIO             DEFAULT 0,
    q-HCS                Q-HCS                DEFAULT 0,
    hcs-CellReselectInformation HCS-CellReselectInformation-ECNO
}

HCS-PRIO ::= INTEGER (0..7)

```

```

HCS-ServingCellInformation ::= SEQUENCE {
    hcs-PRIO          HCS-PRIO          DEFAULT 0,
    q-HCS            Q-HCS             DEFAULT 0,
    t-CR-Max        T-CRMax           OPTIONAL
}

-- Actual value = IE value * 0.5
Hysteresis ::= INTEGER (0..15)

-- Actual value = IE value * 0.5
HysteresisInterFreq ::= INTEGER (0..29)

InterFreqCell ::= SEQUENCE {
    frequencyInfo    FrequencyInfo,
    nonFreqRelatedEventResults CellMeasurementEventResults
}

InterFreqCellID ::= INTEGER (0..maxCellMeas-1)

InterFreqCellInfoList ::= SEQUENCE {
    removedInterFreqCellList RemovedInterFreqCellList OPTIONAL,
    newInterFreqCellList     NewInterFreqCellList     OPTIONAL
}

InterFreqCellInfoSI-List-RSCP ::= SEQUENCE {
    removedInterFreqCellList RemovedInterFreqCellList OPTIONAL,
    newInterFreqCellList     NewInterFreqCellSI-List-RSCP OPTIONAL
}

InterFreqCellInfoSI-List-ECNO ::= SEQUENCE {
    removedInterFreqCellList RemovedInterFreqCellList OPTIONAL,
    newInterFreqCellList     NewInterFreqCellSI-List-ECNO OPTIONAL
}

InterFreqCellInfoSI-List-HCS-RSCP ::= SEQUENCE {
    removedInterFreqCellList RemovedInterFreqCellList OPTIONAL,
    newInterFreqCellList     NewInterFreqCellSI-List-HCS-RSCP OPTIONAL
}

InterFreqCellInfoSI-List-HCS-ECNO ::= SEQUENCE {
    removedInterFreqCellList RemovedInterFreqCellList OPTIONAL,
    newInterFreqCellList     NewInterFreqCellSI-List-HCS-ECNO OPTIONAL
}

InterFreqCellList ::= SEQUENCE (SIZE (1..maxFreq)) OF
    InterFreqCell

InterFreqCellMeasuredResultsList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    CellMeasuredResults

InterFreqEvent ::= CHOICE {
    event2a    Event2a,
    event2b    Event2b,
    event2c    Event2c,
    event2d    Event2d,
    event2e    Event2e,
    event2f    Event2f
}

InterFreqEventList ::= SEQUENCE (SIZE (1..maxMeasEvent)) OF
    InterFreqEvent

InterFreqEventResults ::= SEQUENCE {
    eventID      EventIDInterFreq,
    interFreqCellList InterFreqCellList OPTIONAL
}

InterFreqMeasQuantity ::= SEQUENCE {
    reportingCriteria CHOICE {
        intraFreqReportingCriteria SEQUENCE {
            intraFreqMeasQuantity
        },
        interFreqReportingCriteria SEQUENCE {
            filterCoefficient      FilterCoefficient      DEFAULT fc0,
            modeSpecificInfo       CHOICE {
                fdd SEQUENCE {

```

```

        freqQualityEstimateQuantity-FDD      FreqQualityEstimateQuantity-FDD
    },
    tdd                                       SEQUENCE {
        freqQualityEstimateQuantity-TDD      FreqQualityEstimateQuantity-TDD
    }
}
}
}
}
}

InterFreqMeasuredResults ::=          SEQUENCE {
    frequencyInfo                      FrequencyInfo                OPTIONAL,
    ultra-CarrierRSSI                  UTRA-CarrierRSSI            OPTIONAL,
    interFreqCellMeasuredResultsList    InterFreqCellMeasuredResultsList OPTIONAL
}

InterFreqMeasuredResultsList ::=      SEQUENCE (SIZE (1..maxFreq)) OF
    InterFreqMeasuredResults

InterFreqMeasurementSysInfo-RSCP ::=  SEQUENCE {
    interFreqCellInfoSI-List           InterFreqCellInfoSI-List-RSCP OPTIONAL
}

InterFreqMeasurementSysInfo-ECNO ::=  SEQUENCE {
    interFreqCellInfoSI-List           InterFreqCellInfoSI-List-ECNO OPTIONAL
}

InterFreqMeasurementSysInfo-HCS-RSCP ::= SEQUENCE {
    interFreqCellInfoSI-List           InterFreqCellInfoSI-List-HCS-RSCP OPTIONAL
}

InterFreqMeasurementSysInfo-HCS-ECNO ::= SEQUENCE {
    interFreqCellInfoSI-List           InterFreqCellInfoSI-List-HCS-ECNO OPTIONAL
}

InterFreqReportCriteria ::=          CHOICE {
    intraFreqReportingCriteria         IntraFreqReportingCriteria,
    interFreqReportingCriteria         InterFreqReportingCriteria,
    periodicalReportingCriteria        PeriodicalWithReportingCellStatus,
    noReporting                        ReportingCellStatusOpt
}

InterFreqReportingCriteria ::=        SEQUENCE {
    interFreqEventList                 InterFreqEventList           OPTIONAL
}

InterFreqReportingQuantity ::=        SEQUENCE {
    ultra-Carrier-RSSI                 BOOLEAN,
    frequencyQualityEstimate           BOOLEAN,
    nonFreqRelatedQuantities           CellReportingQuantities
}

InterFrequencyMeasurement ::=         SEQUENCE {
    interFreqCellInfoList              InterFreqCellInfoList,
    interFreqMeasQuantity              InterFreqMeasQuantity        OPTIONAL,
    interFreqReportingQuantity          InterFreqReportingQuantity   OPTIONAL,
    measurementValidity                MeasurementValidity          OPTIONAL,
    interFreqSetUpDate                 UE-AutonomousUpdateMode     OPTIONAL,
    reportCriteria                     InterFreqReportCriteria
}

InterRAT-TargetCellDescription ::=    SEQUENCE {
    technologySpecificInfo             CHOICE {
        gsm                             SEQUENCE {
            bsic                         BSIC,
            bcch-ARFCN                   BCCH-ARFCN,
            ncMode                         NC-Mode                             OPTIONAL
        },
        is-2000                          NULL,
        spare                             NULL
    }
}

InterRATCellID ::=                   INTEGER (0..maxCellMeas-1)

InterRATCellInfoList ::=              SEQUENCE {
    removedInterRATCellList            RemovedInterRATCellList,
    newInterRATCellList                NewInterRATCellList
}

```

```

}

InterRATCellInfoList-HCS ::=          SEQUENCE {
    removedInterRATCellList          RemovedInterRATCellList,
    newInterRATCellList              NewInterRATCellList-HCS
}

InterRATEvent ::=                     CHOICE {
    event3a                          Event3a,
    event3b                          Event3b,
    event3c                          Event3c,
    event3d                          Event3d
}

InterRATEventList ::=                 SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                      InterRATEvent

InterRATEventResults ::=              SEQUENCE {
    eventID                          EventIDInterRAT,
    cellToReportList                 CellToReportList
}

InterRATInfo ::=                     ENUMERATED {
    gsm
}

InterRATMeasQuantity ::=              SEQUENCE {
    measQuantityUTRAN-QualityEstimate IntraFreqMeasQuantity          OPTIONAL,
    ratSpecificInfo                   CHOICE {
        gsm                           SEQUENCE {
            measurementQuantity        MeasurementQuantityGSM,
            filterCoefficient          FilterCoefficient          DEFAULT fcl,
            bsic-VerificationRequired  BSIC-VerificationRequired
        },
        is-2000                       SEQUENCE {
            tadd-EcIo                 INTEGER (0..63),
            tcomp-EcIo                INTEGER (0..15),
            softSlope                  INTEGER (0..63)          OPTIONAL,
            addIntercept               INTEGER (0..63)          OPTIONAL
        }
    }
}

InterRATMeasuredResults ::=           CHOICE {
    gsm                                GSM-MeasuredResultsList,
    spare                              NULL
}

InterRATMeasuredResultsList ::=       SEQUENCE (SIZE (1..maxOtherRAT)) OF
                                      InterRATMeasuredResults

InterRATMeasurement ::=               SEQUENCE {
    interRATCellInfoList              InterRATCellInfoList          OPTIONAL,
    interRATMeasQuantity               InterRATMeasQuantity          OPTIONAL,
    interRATReportingQuantity          InterRATReportingQuantity     OPTIONAL,
    reportCriteria                     InterRATReportCriteria
}

InterRATMeasurementSysInfo ::=        SEQUENCE {
    interRATCellInfoList              InterRATCellInfoList          OPTIONAL
}

InterRATMeasurementSysInfo-HCS ::=    SEQUENCE {
    interRATCellInfoList              InterRATCellInfoList-HCS      OPTIONAL
}

InterRATReportCriteria ::=             CHOICE {
    interRATReportingCriteria          InterRATReportingCriteria,
    periodicalReportingCriteria        PeriodicalWithReportingCellStatus,
    noReporting                        ReportingCellStatusOpt
}

InterRATReportingCriteria ::=          SEQUENCE {
    interRATEventList                 InterRATEventList          OPTIONAL
}

InterRATReportingQuantity ::=          SEQUENCE {
    utran-EstimatedQuality             BOOLEAN,
    ratSpecificInfo                    CHOICE {

```

```

        gsm
            pathloss
            observedTimeDifferenceGSM
            gsm-Carrier-RSSI
        }
    }
}

IntraFreqCellID ::=
    INTEGER (0..maxCellMeas-1)

IntraFreqCellInfoList ::=
    removedIntraFreqCellList
    newIntraFreqCellList
}

IntraFreqCellInfoSI-List-RSCP ::=
    removedIntraFreqCellList
    newIntraFreqCellList
}

IntraFreqCellInfoSI-List-ECNO ::=
    removedIntraFreqCellList
    newIntraFreqCellList
}

IntraFreqCellInfoSI-List-HCS-RSCP ::=
    removedIntraFreqCellList
    newIntraFreqCellList
}

IntraFreqCellInfoSI-List-HCS-ECNO ::=
    removedIntraFreqCellList
    newIntraFreqCellList
}

IntraFreqEvent ::=
    ela
    elb
    elc
    eld
    ele
    elf
    elg
    elh
    eli
}

IntraFreqEventCriteria ::=
    event
    hysteresis
    timeToTrigger
    reportingCellStatus
}

IntraFreqEventCriteriaList ::=
    SEQUENCE (SIZE (1..maxMeasEvent)) OF
        IntraFreqEventCriteria

IntraFreqEventResults ::=
    eventID
    cellMeasurementEventResults
}

IntraFreqMeasQuantity ::=
    filterCoefficient
    modeSpecificInfo
    fdd
        intraFreqMeasQuantity-FDD
    },
    tdd
        intraFreqMeasQuantity-TDDList
}

IntraFreqMeasQuantity-FDD ::=
    ENUMERATED {
        cpich-Ec-NO,
        cpich-RSCP,
        pathloss,

```

```

        ultra-CarrierRSSI }

IntraFreqMeasQuantity-TDD ::=      ENUMERATED {
        primaryCCPCH-RSCP,
        pathloss,
        timeslotISCP,
        ultra-CarrierRSSI }

IntraFreqMeasQuantity-TDDList ::= SEQUENCE (SIZE (1..4)) OF
        IntraFreqMeasQuantity-TDD

IntraFreqMeasuredResultsList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
        CellMeasuredResults

IntraFreqMeasurementSysInfo-RSCP ::= SEQUENCE {
        intraFreqMeasurementID      MeasurementIdentity          DEFAULT 1,
        intraFreqCellInfoSI-List     IntraFreqCellInfoSI-List-RSCP OPTIONAL,
        intraFreqMeasQuantity         IntraFreqMeasQuantity       OPTIONAL,
        intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH OPTIONAL,
        maxReportedCellsOnRACH        MaxReportedCellsOnRACH      OPTIONAL,
        reportingInfoForCellDCH        ReportingInfoForCellDCH      OPTIONAL
}

IntraFreqMeasurementSysInfo-ECNO ::= SEQUENCE {
        intraFreqMeasurementID      MeasurementIdentity          DEFAULT 1,
        intraFreqCellInfoSI-List     IntraFreqCellInfoSI-List-ECNO OPTIONAL,
        intraFreqMeasQuantity         IntraFreqMeasQuantity       OPTIONAL,
        intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH OPTIONAL,
        maxReportedCellsOnRACH        MaxReportedCellsOnRACH      OPTIONAL,
        reportingInfoForCellDCH        ReportingInfoForCellDCH      OPTIONAL
}

IntraFreqMeasurementSysInfo-HCS-RSCP ::= SEQUENCE {
        intraFreqMeasurementID      MeasurementIdentity          DEFAULT 1,
        intraFreqCellInfoSI-List     IntraFreqCellInfoSI-List-HCS-RSCP OPTIONAL,
        intraFreqMeasQuantity         IntraFreqMeasQuantity       OPTIONAL,
        intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH OPTIONAL,
        maxReportedCellsOnRACH        MaxReportedCellsOnRACH      OPTIONAL,
        reportingInfoForCellDCH        ReportingInfoForCellDCH      OPTIONAL
}

IntraFreqMeasurementSysInfo-HCS-ECNO ::= SEQUENCE {
        intraFreqMeasurementID      MeasurementIdentity          DEFAULT 1,
        intraFreqCellInfoSI-List     IntraFreqCellInfoSI-List-HCS-ECNO OPTIONAL,
        intraFreqMeasQuantity         IntraFreqMeasQuantity       OPTIONAL,
        intraFreqReportingQuantityForRACH IntraFreqReportingQuantityForRACH OPTIONAL,
        maxReportedCellsOnRACH        MaxReportedCellsOnRACH      OPTIONAL,
        reportingInfoForCellDCH        ReportingInfoForCellDCH      OPTIONAL
}

IntraFreqReportCriteria ::= CHOICE {
        intraFreqReportingCriteria   IntraFreqReportingCriteria,
        periodicalReportingCriteria   PeriodicalWithReportingCellStatus,
        noReporting                   ReportingCellStatusOpt
}

IntraFreqReportingCriteria ::= SEQUENCE {
        eventCriteriaList            IntraFreqEventCriteriaList OPTIONAL
}

IntraFreqReportingQuantity ::= SEQUENCE {
        activeSetReportingQuantities CellReportingQuantities,
        monitoredSetReportingQuantities CellReportingQuantities,
        detectedSetReportingQuantities CellReportingQuantities OPTIONAL
}

IntraFreqReportingQuantityForRACH ::= SEQUENCE {
        sfn-SFN-OTD-Type            SFN-SFN-OTD-Type,
        modeSpecificInfo             CHOICE {
                fdd                  SEQUENCE {
                        intraFreqRepQuantityRACH-FDD      IntraFreqRepQuantityRACH-FDD
                },
                tdd                  SEQUENCE {
                        intraFreqRepQuantityRACH-TDDList    IntraFreqRepQuantityRACH-TDDList
                }
        }
}

```

```

IntraFreqRepQuantityRACH-FDD ::= ENUMERATED {
    cpich-EcN0, cpich-RSCP,
    pathloss, noReport }

IntraFreqRepQuantityRACH-TDD ::= ENUMERATED {
    timeslotISCP,
    primaryCCPCH-RSCP,
    noReport }

IntraFreqRepQuantityRACH-TDDList ::= SEQUENCE (SIZE (1..2)) OF
    IntraFreqRepQuantityRACH-TDD

IntraFrequencyMeasurement ::= SEQUENCE {
    intraFreqCellInfoList          IntraFreqCellInfoList          OPTIONAL,
    intraFreqMeasQuantity          IntraFreqMeasQuantity          OPTIONAL,
    intraFreqReportingQuantity     IntraFreqReportingQuantity     OPTIONAL,
    measurementValidity            MeasurementValidity            OPTIONAL,
    reportCriteria                 IntraFreqReportCriteria        OPTIONAL
}

IODE ::= INTEGER (0..255)

IP-Length ::= ENUMERATED {
    ip15, ip110 }

IP-Spacing ::= ENUMERATED {
    e5, e7, e10, e15, e20,
    e30, e40, e50 }

IS-2000SpecificMeasInfo ::= ENUMERATED {
    frequency, timeslot, colourcode,
    outputpower, pn-Offset }

MaxNumberOfReportingCellsType1 ::= ENUMERATED {
    e1, e2, e3, e4, e5, e6}

MaxNumberOfReportingCellsType2 ::= ENUMERATED {
    e1, e2, e3, e4, e5, e6, e7, e8, e9, e10, e11, e12}

MaxNumberOfReportingCellsType3 ::= ENUMERATED {
    viactCellsPlus1,
    viactCellsPlus2,
    viactCellsPlus3,
    viactCellsPlus4,
    viactCellsPlus5,
    viactCellsPlus6 }

MaxReportedCellsOnRACH ::= ENUMERATED {
    noReport,
    currentCell,
    currentAnd-1-BestNeighbour,
    currentAnd-2-BestNeighbour,
    currentAnd-3-BestNeighbour,
    currentAnd-4-BestNeighbour,
    currentAnd-5-BestNeighbour,
    currentAnd-6-BestNeighbour }

MeasuredResults ::= CHOICE {
    intraFreqMeasuredResultsList  IntraFreqMeasuredResultsList,
    interFreqMeasuredResultsList  InterFreqMeasuredResultsList,
    interRATMeasuredResultsList   InterRATMeasuredResultsList,
    trafficVolumeMeasuredResultsList TrafficVolumeMeasuredResultsList,
    qualityMeasuredResults        QualityMeasuredResults,
    ue-InternalMeasuredResults    UE-InternalMeasuredResults,
    up-MeasuredResults            UP-MeasuredResults
}

MeasuredResultsList ::= SEQUENCE (SIZE (1..maxAdditionalMeas)) OF
    MeasuredResults

MeasuredResultsOnRACH ::= SEQUENCE {
    currentCell          SEQUENCE {
        modeSpecificInfo CHOICE {
            fdd          SEQUENCE {
                measurementQuantity CHOICE {
                    cpich-Ec-N0    CPICH-Ec-N0,
                    cpich-RSCP     CPICH-RSCP,
                    pathloss       Pathloss
                }
            }
        }
    }
}

```



```

MeasurementValidity ::=
  ue-State
}

MonitoredCellRACH-List ::=
  SEQUENCE (SIZE (1..7)) OF
    MonitoredCellRACH-Result

MonitoredCellRACH-Result ::=
  sfn-SFN-ObsTimeDifference
  modeSpecificInfo
  fdd
    primaryCPICH-Info
    measurementQuantity
    cpich-Ec-NO
    cpich-RSCP
    pathloss
  },
  tdd
    cellParametersID
    primaryCCPCH-RSCP
}

MultipathIndicator ::=
  ENUMERATED {
    nm,
    low,
    medium,
    high }

N-CR-T-CRMaxHyst ::=
  n-CR
  t-CRMaxHyst
}

NavigationModelSatInfo ::=
  satID
  satelliteStatus
  navModel
}

NavigationModelSatInfoList ::=
  SEQUENCE (SIZE (1..maxSat)) OF
    NavigationModelSatInfo

NavModel ::=
  codeOnL2
  uraIndex
  satHealth
  iodc
  l2Pflag
  sflRevd
  t-GD
  t-oc
  af2
  af1
  af0
  c-rs
  delta-n
  m0
  c-uc
  e
  c-us
  a-Sqrt
  t-oe
  fitInterval
  aodo
  c-ic
  omega0
  c-is
  i0
  c-rc
  omega
  omegaDot
  iDot
}

```

```

NC-Mode ::= BIT STRING (SIZE (3))

Neighbour ::= SEQUENCE {
    neighbourIdentity PrimaryCPICH-Info OPTIONAL,
    neighbourQuantity NeighbourQuantity,
    sfn-SFN-ObsTimeDifference2 SFN-SFN-ObsTimeDifference2
}

NeighbourList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    Neighbour

-- **TODO**, to be defined fully
NeighbourQuantity ::= SEQUENCE {
}

NewInterFreqCell ::= SEQUENCE {
    interFreqCellID InterFreqCellID OPTIONAL,
    frequencyInfo FrequencyInfo OPTIONAL,
    cellInfo CellInfo
}

NewInterFreqCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    NewInterFreqCell

NewInterFreqCellSI-RSCP ::= SEQUENCE {
    interFreqCellID InterFreqCellID OPTIONAL,
    frequencyInfo FrequencyInfo OPTIONAL,
    cellInfo CellInfoSI-RSCP
}

NewInterFreqCellSI-ECN0 ::= SEQUENCE {
    interFreqCellID InterFreqCellID OPTIONAL,
    frequencyInfo FrequencyInfo OPTIONAL,
    cellInfo CellInfoSI-ECN0
}

NewInterFreqCellSI-HCS-RSCP ::= SEQUENCE {
    interFreqCellID InterFreqCellID OPTIONAL,
    frequencyInfo FrequencyInfo OPTIONAL,
    cellInfo CellInfoSI-HCS-RSCP
}

NewInterFreqCellSI-HCS-ECN0 ::= SEQUENCE {
    interFreqCellID InterFreqCellID OPTIONAL,
    frequencyInfo FrequencyInfo OPTIONAL,
    cellInfo CellInfoSI-HCS-ECN0
}

NewInterFreqCellSI-List-ECN0 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    NewInterFreqCellSI-ECN0

NewInterFreqCellSI-List-HCS-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    NewInterFreqCellSI-HCS-RSCP

NewInterFreqCellSI-List-HCS-ECN0 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    NewInterFreqCellSI-HCS-ECN0

NewInterFreqCellSI-List-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
    NewInterFreqCellSI-RSCP

NewInterRATCell ::= SEQUENCE {
    interRATCellID InterRATCellID OPTIONAL,
    technologySpecificInfo CHOICE {
        gsm SEQUENCE {
            cellSelectionReselectionInfo CellSelectReselectInfoSIB-11-12 OPTIONAL,
            bsic BSIC,
            bcch-ARFCN BCCH-ARFCN,
            gsm-OutputPower GSM-OutputPower OPTIONAL
        },
        is-2000 SEQUENCE {
            is-2000SpecificMeasInfo IS-2000SpecificMeasInfo
        },
        spare1 NULL,
        spare2 NULL
    }
}

NewInterRATCell-HCS ::= SEQUENCE {

```

```

interRATCellID          InterRATCellID          OPTIONAL,
technologySpecificInfo CHOICE {
  gsm                   SEQUENCE {
    cellSelectionReselectionInfo CellSelectReselectInfoSIB-11-12 OPTIONAL,
    bsic                  BSIC,
    bcch-ARFCN            BCCH-ARFCN,
    gsm-OutputPower       GSM-OutputPower          OPTIONAL
  },
  is-2000                SEQUENCE {
    is-2000SpecificMeasInfo IS-2000SpecificMeasInfo
  },
  spare1                  NULL,
  spare2                  NULL
}
}

NewInterRATCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                        NewInterRATCell

NewInterRATCellList-HCS ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                            NewInterRATCell-HCS

NewIntraFreqCell ::= SEQUENCE {
  intraFreqCellID      IntraFreqCellID          OPTIONAL,
  cellInfo              CellInfo
}

NewIntraFreqCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                        NewIntraFreqCell

NewIntraFreqCellSI-RSCP ::= SEQUENCE {
  intraFreqCellID      IntraFreqCellID          OPTIONAL,
  cellInfo              CellInfoSI-RSCP
}

NewIntraFreqCellSI-ECN0 ::= SEQUENCE {
  intraFreqCellID      IntraFreqCellID          OPTIONAL,
  cellInfo              CellInfoSI-ECN0
}

NewIntraFreqCellSI-HCS-RSCP ::= SEQUENCE {
  intraFreqCellID      IntraFreqCellID          OPTIONAL,
  cellInfo              CellInfoSI-HCS-RSCP
}

NewIntraFreqCellSI-HCS-ECN0 ::= SEQUENCE {
  intraFreqCellID      IntraFreqCellID          OPTIONAL,
  cellInfo              CellInfoSI-HCS-ECN0
}

NewIntraFreqCellSI-List-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                  NewIntraFreqCellSI-RSCP

NewIntraFreqCellSI-List-ECN0 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                  NewIntraFreqCellSI-ECN0

NewIntraFreqCellSI-List-HCS-RSCP ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                      NewIntraFreqCellSI-HCS-RSCP

NewIntraFreqCellSI-List-HCS-ECN0 ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                       NewIntraFreqCellSI-HCS-ECN0

NodeB-ClockDrift ::= INTEGER (0..15)

NonUsedFreqParameter ::= SEQUENCE {
  nonUsedFreqThreshold Threshold,
  nonUsedFreqW         W
}

NonUsedFreqParameterList ::= SEQUENCE (SIZE (1..maxFreq)) OF
                              NonUsedFreqParameter

ObservedTimeDifferenceToGSM ::= INTEGER (0..4095)

OTDOA-SearchWindowSize ::= ENUMERATED {
  c10, c20, c30, c40, c50,
  c60, c70, moreThan70 }

Pathloss ::= INTEGER (46..158)

```

```

PenaltyTime-RSCP ::=
    notUsed
    pt10
    pt20
    pt30
    pt40
    pt50
    pt60
}

PenaltyTime-ECNO ::=
    notUsed
    pt10
    pt20
    pt30
    pt40
    pt50
    pt60
}

PendingTimeAfterTrigger ::=
    ENUMERATED {
        ptat0-25, ptat0-5, ptat1,
        ptat2, ptat4, ptat8, ptat16 }

PeriodicalOrEventTrigger ::=
    ENUMERATED {
        periodical,
        eventTrigger }

PeriodicalReportingCriteria ::=
    reportingAmount
    reportingInterval
}

PeriodicalWithReportingCellStatus ::= SEQUENCE {
    periodicalReportingCriteria
    reportingCellStatus
}

PositionEstimate ::=
    ellipsoidPoint
    ellipsoidPointUncertCircle
    ellipsoidPointUncertEllipse
    ellipsoidPointAltitude
    ellipsoidPointAltitudeEllipse
}

PositioningMethod ::=
    ENUMERATED {
        otdoa,
        gps,
        otdoaOrGPS }

PRC ::=
    INTEGER (-2047..2047)

PrimaryCCPCH-RSCP ::=
    INTEGER (-115..-25)

Q-HCS ::=
    INTEGER (0..99)

Q-OffsetS-N ::=
    INTEGER (-50..50)

Q-QualMin ::=
    INTEGER (-20..0)

-- Actual value = (IE value * 2) + 1
Q-RxlevMin ::=
    INTEGER (-58..-13)

QualityEventResults ::=
    SEQUENCE (SIZE (1..maxTrCH)) OF
        TransportChannelIdentity

QualityMeasuredResults ::=
    blerMeasurementResultsList
    modeSpecificInfo
        fdd
        tdd
        sir-MeasurementResults
}

}

}

```

```

QualityMeasurement ::=
  qualityReportingQuantity
  reportCriteria
}
SEQUENCE {
  QualityReportingQuantity
  QualityReportCriteria
} OPTIONAL,

QualityReportCriteria ::=
  qualityReportingCriteria
  periodicalReportingCriteria
  noReporting
}
CHOICE {
  QualityReportingCriteria,
  PeriodicalReportingCriteria,
  NULL
}

QualityReportingCriteria ::=
SEQUENCE (SIZE (1..maxTrCH)) OF
  QualityReportingCriteriaSingle

QualityReportingCriteriaSingle ::=
  transportChannelIdentity
  totalCRC
  badCRC
  pendingAfterTrigger
}
SEQUENCE {
  TransportChannelIdentity,
  INTEGER (1..512),
  INTEGER (1..512),
  INTEGER (1..512)
}

QualityReportingQuantity ::=
  dl-TransChBLER
  bler-dl-TransChIdList
  modeSpecificInfo
  fdd
  tdd
  sir-TFCS-List
}
SEQUENCE {
  BOOLEAN,
  BLER-TransChIdList
  CHOICE {
    NULL,
    SEQUENCE {
      SIR-TFCS-List
    }
  }
} OPTIONAL,
OPTIONAL

QualityType ::=
ENUMERATED {
  std-10, std-50, cpich-Ec-N0 }

RAT-Type ::=
ENUMERATED {
  gsm, is2000 }

ReferenceCellPosition ::=
  ellipsoidPoint
  ellipsoidPointWithAltitude
}
CHOICE {
  EllipsoidPoint,
  EllipsoidPointAltitude
}

ReferenceCellRelation ::=
ENUMERATED {
  first-12-second-3,
  first-13-second-2,
  first-1-second-23 }

-- As defined in 23.032 (2D with 24bits for each coordinate)
ReferenceLocationforSIB ::=
  ellipsoidPoint
}
SEQUENCE {
  EllipsoidPoint
}

ReferenceQuality ::=
ENUMERATED {
  m0-19, m20-39, m40-79,
  m80-159, m160-319, m320-639,
  m640-1319, m1320Plus }

-- Actual value = IE value * 10
ReferenceQuality10 ::=
INTEGER (1..32)

-- Actual value = IE value * 50
ReferenceQuality50 ::=
INTEGER (1..32)

ReferenceSFN ::=
INTEGER (0..4095)

-- Actual value = IE value * 512
ReferenceTimeDifferenceToCell ::=
  -- Actual value = IE value * 40
  accuracy40
  -- Actual value = IE value * 256
  accuracy256
  -- Actual value = IE value * 2560
  accuracy2560
}
CHOICE {
  INTEGER (0..960),
  INTEGER (0..150),
  INTEGER (0..15)
}

RemovedInterFreqCellList ::=
CHOICE {

```

```

removeAllInterFreqCells          NULL,
removeSomeInterFreqCells        SEQUENCE (SIZE (1..maxCellMeas)) OF
                                InterFreqCellID,
removeNoInterFreqCells          NULL
}

RemovedInterRATCellList ::= CHOICE {
  removeAllInterRATCells        NULL,
  removeSomeInterRATCells      SEQUENCE (SIZE (1..maxCellMeas)) OF
                                InterRATCellID,
  removeNoInterRATCells        NULL
}

RemovedIntraFreqCellList ::= CHOICE {
  removeAllIntraFreqCells      NULL,
  removeSomeIntraFreqCells    SEQUENCE (SIZE (1..maxCellMeas)) OF
                                IntraFreqCellID,
  removeNoIntraFreqCells      NULL
}

ReplacementActivationThreshold ::= ENUMERATED {
  notApplicable, t1, t2,
  t3, t4, t5, t6, t7 }

ReportDeactivationThreshold ::= ENUMERATED {
  notApplicable, t1, t2,
  t3, t4, t5, t6, t7 }

ReportingAmount ::= ENUMERATED {
  ra1, ra2, ra4, ra8, ra16, ra32,
  ra64, ra-Infinity }

ReportingCellStatus ::= CHOICE{
  withinActiveSet                MaxNumberOfReportingCellsType1,
  withinMonitoredSetUsedFreq     MaxNumberOfReportingCellsType1,
  withinActiveAndOrMonitoredUsedFreq MaxNumberOfReportingCellsType1,
  withinDetectedSetUsedFreq     MaxNumberOfReportingCellsType1,
  withinMonitoredAndOrDetectedUsedFreq
                                MaxNumberOfReportingCellsType1,
  allActiveplusMonitoredSet     MaxNumberOfReportingCellsType3,
  allActivePlusDetectedSet      MaxNumberOfReportingCellsType3,
  allActivePlusMonitoredAndOrDetectedSet
                                MaxNumberOfReportingCellsType3,
  withinVirtualActSet           MaxNumberOfReportingCellsType1,
  withinMonitoredSetNonUsedFreq MaxNumberOfReportingCellsType1,
  withinMonitoredAndOrActiveSetNonUsedFreq
                                MaxNumberOfReportingCellsType1,
  allVirtualActSetplusMonitoredSetNonUsedFreq
                                MaxNumberOfReportingCellsType3,
  withinActSetOrVirtualActSet   MaxNumberOfReportingCellsType2,
  withinActSetAndOrMonitoredUsedFreqOrMonitoredNonUsedFreq
                                MaxNumberOfReportingCellsType2
}

ReportingCellStatusOpt ::= SEQUENCE {
  reportingCellStatus           OPTIONAL
}

ReportingInfoForCellDCH ::= SEQUENCE {
  intraFreqReportingQuantity    IntraFreqReportingQuantity,
  measurementReportingMode      MeasurementReportingMode,
  reportCriteria                CellDCH-ReportCriteria
}

ReportingInterval ::= ENUMERATED {
  noPeriodicalreporting, ri0-25,
  ri0-5, ri1, ri2, ri4, ri8, ri16 }

ReportingIntervalLong ::= ENUMERATED {
  ril0, ril0-25, ril0-5, ril1,
  ril2, ril3, ril4, ril6, ril8,
  ril12, ril16, ril20, ril24,
  ril28, ril32, ril64 }

-- Actual value = IE value * 0.5
ReportingRange ::= INTEGER (0..29)

```

```

RL-AdditionInfoList ::=          SEQUENCE (SIZE (1..maxRL)) OF
                                  PrimaryCPICH-Info

RL-InformationLists ::=          SEQUENCE {
    rl-AdditionInfoList          RL-AdditionInfoList          OPTIONAL,
    rl-RemovalInfoList           RL-RemovalInfoList           OPTIONAL
}

RL-RemovalInfoList ::=          SEQUENCE (SIZE (1..maxRL)) OF
                                  PrimaryCPICH-Info

RLC-BuffersPayload ::=          ENUMERATED {
    p10, p14, p18, p116, p132, p164, p1128,
    p1256, p1512, p11024, p12k, p14k,
    p18k, p116k, p132k, p164k, p1128k,
    p1256k, p1512k, p11024k }

RRC ::=                          INTEGER (-127..127)

SatelliteStatus ::=             ENUMERATED {
    ns-NN-U,
    es-SN,
    es-NN-U,
    es-NN-C }

SatID ::=                        INTEGER (0..63)

SFN-SFN-ObsTimeDifference ::=    CHOICE {
    type1                         SFN-SFN-ObsTimeDifference1,
    -- Actual value for type2 = IE value * 0.0625 - 1280
    type2                         SFN-SFN-ObsTimeDifference2
}

SFN-SFN-ObsTimeDifference1 ::=   INTEGER (0..9830399)

SFN-SFN-ObsTimeDifference2 ::=   INTEGER (0..40961)

SFN-SFN-OTD-Type ::=            ENUMERATED {
    noReport,
    type1,
    type2 }

SIR ::=                          INTEGER (-10..20)

SIR-MeasurementList ::=          SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                  SIR-MeasurementResults

SIR-MeasurementResults ::=        SEQUENCE {
    tfcs-ID                       TFCS-IdentityPlain,
    sir-TimeslotList              SIR-TimeslotList
}

SIR-TFCS ::=                     TFCS-IdentityPlain

SIR-TFCS-List ::=                SEQUENCE (SIZE (1..maxCCTrCH)) OF
                                  SIR-TFCS

SIR-TimeslotList ::=             SEQUENCE (SIZE (1..maxTS)) OF
                                  SIR

-- Reserved bits in subframe 1 of the GPS navigation message
SubFrame1Reserved ::=            SEQUENCE {
    reserved1                     BIT STRING (SIZE (23)),
    reserved2                     BIT STRING (SIZE (24)),
    reserved3                     BIT STRING (SIZE (24)),
    reserved4                     BIT STRING (SIZE (16))
}

T-CRMax ::=                      CHOICE {
    notUsed                       NULL,
    t30                           N-CR-T-CRMaxHyst,
    t60                           N-CR-T-CRMaxHyst,
    t120                          N-CR-T-CRMaxHyst,
    t180                          N-CR-T-CRMaxHyst,
    t240                          N-CR-T-CRMaxHyst
}

```

```

}

T-CRMaxHyst ::=
    ENUMERATED {
        notUsed, t10, t20, t30,
        t40, t50, t60, t70 }

TemporaryOffset ::=
    ENUMERATED {
        to10, to20, to30, to40, to50,
        to60, to70, infinite }

TemporaryOffsetList ::=
    SEQUENCE {
        temporaryOffset1
        temporaryOffset2
    }

Threshold ::=
    INTEGER (-115..0)

ThresholdPositionChange ::=
    ENUMERATED {
        pc10, pc20, pc30, pc40, pc50,
        pc100, pc200, pc300, pc500,
        pc1000, pc2000, pc5000, pc10000,
        pc20000, pc50000, pc100000 }

ThresholdSFN-GPS-TOW ::=
    ENUMERATED {
        ms1, ms2, ms3, ms5, ms10,
        ms20, ms50, ms100 }

ThresholdSFN-SFN-Change ::=
    ENUMERATED {
        c0-25, c0-5, c1, c2, c3, c4, c5,
        c10, c20, c50, c100, c200, c500,
        c1000, c2000, c5000 }

ThresholdUsedFrequency ::=
    INTEGER (-115..165)

-- Actual value = IE value * 20.
TimeInterval ::=
    INTEGER (1..13)

TimeslotInfo ::=
    SEQUENCE {
        timeslotNumber
        burstType
    }

TimeslotInfoList ::=
    SEQUENCE (SIZE (1..maxTS)) OF
        TimeslotInfo

TimeslotISCP ::=
    INTEGER (-115..-25)

TimeslotISCP-List ::=
    SEQUENCE (SIZE (1..maxTS)) OF
        TimeslotISCP

TimeslotListWithISCP ::=
    SEQUENCE (SIZE (1..maxTS)) OF
        TimeslotWithISCP

TimeslotWithISCP ::=
    SEQUENCE {
        timeslot
        timeslotISCP
    }

TimeToTrigger ::=
    ENUMERATED {
        ttt0, ttt10, ttt20, ttt40, ttt60,
        ttt80, ttt100, ttt120, ttt160,
        ttt200, ttt240, ttt320, ttt640,
        ttt1280, ttt2560, ttt5000 }

TrafficVolumeEventParam ::=
    SEQUENCE {
        eventID
        reportingThreshold
        timeToTrigger
        pendingTimeAfterTrigger
        tx-InterruptionAfterTrigger
    }
    OPTIONAL,
    OPTIONAL,
    OPTIONAL

TrafficVolumeEventResults ::=
    SEQUENCE {
        ul-transportChannelCausingEvent
        trafficVolumeEventIdentity
    }

```

```

}

TrafficVolumeEventType ::=          ENUMERATED {
    e4a,
    e4b }

TrafficVolumeMeasQuantity ::=      CHOICE {
    rlc-BufferPayload                NULL,
    averageRLC-BufferPayload         TimeInterval,
    varianceOfRLC-BufferPayload      TimeInterval
}

TrafficVolumeMeasSysInfo ::=       SEQUENCE {
    trafficVolumeMeasurementID       MeasurementIdentity           DEFAULT 4,
    trafficVolumeMeasurementObjectList TrafficVolumeMeasurementObjectList OPTIONAL,
    trafficVolumeMeasQuantity        TrafficVolumeMeasQuantity     OPTIONAL,
    trafficVolumeReportingQuantity    TrafficVolumeReportingQuantity  OPTIONAL,
    trafficVolumeMeasRepCriteria      TrafficVolumeReportingCriteria  OPTIONAL,
    measurementValidity               MeasurementValidity           OPTIONAL,
    measurementReportingMode          MeasurementReportingMode,
    reportCriteriaSysInf              TrafficVolumeReportCriteriaSysInfo
}

TrafficVolumeMeasuredResults ::=    SEQUENCE {
    rb-Identity                       RB-Identity,
    rlc-BuffersPayload                RLC-BuffersPayload           OPTIONAL,
    averageRLC-BufferPayload           AverageRLC-BufferPayload      OPTIONAL,
    varianceOfRLC-BufferPayload        VarianceOfRLC-BufferPayload   OPTIONAL
}

TrafficVolumeMeasuredResultsList ::= SEQUENCE (SIZE (1..maxRB)) OF
    TrafficVolumeMeasuredResults

TrafficVolumeMeasurement ::=        SEQUENCE {
    trafficVolumeMeasurementObjectList TrafficVolumeMeasurementObjectList OPTIONAL,
    trafficVolumeMeasQuantity        TrafficVolumeMeasQuantity     OPTIONAL,
    trafficVolumeReportingQuantity    TrafficVolumeReportingQuantity  OPTIONAL,
    measurementValidity               MeasurementValidity           OPTIONAL,
    reportCriteria                    TrafficVolumeReportCriteria
}

TrafficVolumeMeasurementObjectList ::= SEQUENCE (SIZE (1..maxTrCH)) OF
    TransportChannelIdentity

TrafficVolumeReportCriteria ::=     CHOICE {
    trafficVolumeReportingCriteria    TrafficVolumeReportingCriteria,
    periodicalReportingCriteria       PeriodicalReportingCriteria,
    noReporting                        NULL
}

TrafficVolumeReportCriteriaSysInfo ::= CHOICE {
    trafficVolumeReportingCriteria    TrafficVolumeReportingCriteria,
    periodicalReportingCriteria       PeriodicalReportingCriteria
}

TrafficVolumeReportingCriteria ::=  SEQUENCE {
    transChCriteriaList               TransChCriteriaList           OPTIONAL
}

TrafficVolumeReportingQuantity ::=  SEQUENCE {
    rlc-RB-BufferPayload              BOOLEAN,
    rlc-RB-BufferPayloadAverage       BOOLEAN,
    rlc-RB-BufferPayloadVariance      BOOLEAN
}

TrafficVolumeThreshold ::=          ENUMERATED {
    th8, th16, th32, th64, th128,
    th256, th512, th1024, th2k, th3k,
    th4k, th6k, th8k, th12k, th16k,
    th24k, th32k, th48k, th64k, th96k,
    th128k, th192k, th256k, th384k,
    th512k, th768k }

TransChCriteria ::=                 SEQUENCE {
    ul-transportChannelID             TransportChannelIdentity       OPTIONAL,
    eventSpecificParameters           SEQUENCE (SIZE (1..maxMeasParEvent)) OF
        TrafficVolumeEventParam      OPTIONAL
}

```

```

}

TransChCriteriaList ::=          SEQUENCE (SIZE (1..maxTrCH)) OF
                                TransChCriteria

TransferMode ::=                ENUMERATED {
                                acknowledgedModeRLC,
                                unacknowledgedModeRLC }

TransmittedPowerThreshold ::=   INTEGER (-50..33)

TriggeringCondition1 ::=        ENUMERATED {
                                activeSetCellsOnly,
                                monitoredSetCellsOnly,
                                activeSetAndMonitoredSetCells }

TriggeringCondition2 ::=        ENUMERATED {
                                activeSetCellsOnly,
                                monitoredSetCellsOnly,
                                activeSetAndMonitoredSetCells,
                                detectedSetCellsOnly,
                                detectedSetAndMonitoredSetCells }

TX-InterruptionAfterTrigger ::= ENUMERATED {
                                txiat0-25, txiat0-5, txiat1,
                                txiat2, txiat4, txiat8, txiat16 }

UDRE ::=                        ENUMERATED {
                                lessThan1,
                                between1-and-4,
                                between4-and-8,
                                over8 }

UE-6AB-Event ::=                SEQUENCE {
                                timeToTrigger          TimeToTrigger,
                                transmittedPowerThreshold TransmittedPowerThreshold
}

UE-6FG-Event ::=                SEQUENCE {
                                timeToTrigger          TimeToTrigger,
                                ue-RX-TX-TimeDifferenceThreshold UE-RX-TX-TimeDifferenceThreshold
}

UE-AutonomousUpdateMode ::=     CHOICE {
                                on                      NULL,
                                onWithNoReporting       NULL,
                                off                     RL-InformationLists
}

UE-InternalEventParam ::=        CHOICE {
                                event6a                UE-6AB-Event,
                                event6b                UE-6AB-Event,
                                event6c                TimeToTrigger,
                                event6d                TimeToTrigger,
                                event6e                TimeToTrigger,
                                event6f                UE-6FG-Event,
                                event6g                UE-6FG-Event
}

UE-InternalEventParamList ::=     SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                UE-InternalEventParam

UE-InternalEventResults ::=       CHOICE {
                                event6a                NULL,
                                event6b                NULL,
                                event6c                NULL,
                                event6d                NULL,
                                event6e                NULL,
                                event6f                PrimaryCPICH-Info,
                                event6g                PrimaryCPICH-Info
}

UE-InternalMeasQuantity ::=       SEQUENCE {
                                measurementQuantity     UE-MeasurementQuantity,
                                filterCoefficient       FilterCoefficient
}
                                DEFAULT fc1

UE-InternalMeasuredResults ::=     SEQUENCE {

```

```

modeSpecificInfo CHOICE {
  fdd SEQUENCE {
    ue-TransmittedPowerFDD UE-TransmittedPower OPTIONAL,
    ue-RX-TX-ReportEntryList UE-RX-TX-ReportEntryList OPTIONAL
  },
  tdd SEQUENCE {
    ue-TransmittedPowerTDD-List UE-TransmittedPowerTDD-List OPTIONAL,
    appliedTA UL-TimingAdvance OPTIONAL
  }
}

UE-InternalMeasurement ::= SEQUENCE {
  ue-InternalMeasQuantity UE-InternalMeasQuantity OPTIONAL,
  ue-InternalReportingQuantity UE-InternalReportingQuantity OPTIONAL,
  reportCriteria UE-InternalReportCriteria
}

UE-InternalMeasurementSysInfo ::= SEQUENCE {
  ue-InternalMeasurementID MeasurementIdentity DEFAULT 5,
  ue-InternalMeasQuantity UE-InternalMeasQuantity
}

UE-InternalReportCriteria ::= CHOICE {
  ue-InternalReportingCriteria UE-InternalReportingCriteria,
  periodicalReportingCriteria PeriodicalReportingCriteria,
  noReporting NULL
}

UE-InternalReportingCriteria ::= SEQUENCE {
  ue-InternalEventParamList UE-InternalEventParamList OPTIONAL
}

UE-InternalReportingQuantity ::= SEQUENCE {
  ue-TransmittedPower BOOLEAN,
  modeSpecificInfo CHOICE {
    fdd SEQUENCE {
      ue-RX-TX-TimeDifferece BOOLEAN
    },
    tdd SEQUENCE {
      appliedTA BOOLEAN
    }
  }
}

-- TABULAR: For TDD only the first two values are used.
UE-MeasurementQuantity ::= ENUMERATED {
  ue-TransmittedPower,
  ultra-Carrier-RSSI,
  ue-RX-TX-TimeDifference }

UE-RX-TX-ReportEntry ::= SEQUENCE {
  primaryCPICH-Info PrimaryCPICH-Info,
  ue-RX-TX-TimeDifferenceType1 UE-RX-TX-TimeDifferenceType1
}

UE-RX-TX-ReportEntryList ::= SEQUENCE (SIZE (1..maxRL)) OF
  UE-RX-TX-ReportEntry

UE-RX-TX-TimeDifferenceType1 ::= INTEGER (768..1280)

-- Actual value = IE value * 0.0625 + 768
UE-RX-TX-TimeDifferenceType2 ::= INTEGER (0..8191)

UE-RX-TX-TimeDifferenceThreshold ::= INTEGER (768..1280)

UE-TransmittedPower ::= INTEGER (-50..33)

UE-TransmittedPowerTDD-List ::= SEQUENCE (SIZE (1..maxTS)) OF
  UE-TransmittedPower

UP-Accuracy ::= BIT STRING (SIZE (7))

-- For sfID=0 (sf4), pageNo=18, and sfID=0 & sfID=1 (sf4 & sf5), pageNo=25,
-- the IE files for word3 - word110 are the same as UP-GPS-IonosphericModel
-- and UP-GPS-UTC-Model. For the rest of the pages, they are the same as
-- UP-GPS-Almanac.
UP-Alma-SIB-Data ::= SEQUENCE {

```

```

sfID                INTEGER (0..1),
dataID              INTEGER (0..3),
pageNo              INTEGER (0..63),
word3               BIT STRING (SIZE (16)),
word4               BIT STRING (SIZE (24)),
word5               BIT STRING (SIZE (24)),
word6               BIT STRING (SIZE (24)),
word7               BIT STRING (SIZE (24)),
word8               BIT STRING (SIZE (24)),
word9               BIT STRING (SIZE (24)),
word10              BIT STRING (SIZE (22))
}

UP-Alma-SIB-DataList ::=          SEQUENCE (SIZE (1..3)) OF
                                   UP-Alma-SIB-Data

UP-CipherParameters ::=          SEQUENCE {
  cipheringKeyFlag      BIT STRING (SIZE (1)),
  cipheringSerialNumber INTEGER (0..65535)
}

UP-DGPS-SIB-Data ::=            SEQUENCE {
  nodeBClockDrift      NodeB-ClockDrift                OPTIONAL,
  referenceLocationforSIB ReferenceLocationforSIB,
  referenceSFN          ReferenceSFN                    OPTIONAL,
  referenceGPS-TOW      GPS-TOW-lusec,
  statusHealth         DiffCorrectionStatus,
  dgps-InformationList DGPS-InformationList
}

UP-Ephe-SIB-Data ::=            SEQUENCE {
  transmissionTOW      INTEGER (0..1048575),
  satID                SatID,
  tlmMessage           BIT STRING (SIZE (14)),
  tlmRevD              BIT STRING (SIZE (2)),
  how                  BIT STRING (SIZE (22)),
  wn                   BIT STRING (SIZE (10)),
  navModel             NavModel
}

UP-Error ::=                    SEQUENCE {
  errorReason          UP-ErrorCause,
  additionalAssistanceData AdditionalAssistanceData
}

UP-ErrorCause ::=              ENUMERATED {
  notEnoughOTDOA-Cells,
  notEnoughGPS-Satellites,
  assistanceDataMissing,
  methodNotSupported,
  undefinedError,
  requestDeniedByUser,
  notProcessedAndTimeout }

UP-EventID ::=                  ENUMERATED {
  e7a, e7b, e7c }

UP-EventParam ::=              SEQUENCE {
  reportingAmount      ReportingAmount,
  reportFirstFix       BOOLEAN,
  measurementInterval UP-MeasurementInterval,
  eventSpecificInfo    UP-EventSpecificInfo
}

UP-EventParamList ::=           SEQUENCE (SIZE (1..maxMeasEvent)) OF
                                   UP-EventParam

UP-EventSpecificInfo ::=        CHOICE {
  e7a                  ThresholdPositionChange,
  e7b                  ThresholdSFN-SFN-Change,
  e7c                  ThresholdSFN-GPS-TOW
}

UP-GPS-AcquisitionAssistance ::= SEQUENCE {
  referenceTime        CHOICE {
    utran-ReferenceTime UTRAN-ReferenceTime,
    gps-ReferenceTimeOnly INTEGER (0..604799999)
  },

```

```

    satelliteInformationList      AcquisitionSatInfoList
  }

UP-GPS-Almanac ::=                SEQUENCE {
    wn-a                          BIT STRING (SIZE (8)),
    almanacSatInfoList           AlmanacSatInfoList
}

UP-GPS-AssistanceData ::=        SEQUENCE {
    up-GPS-ReferenceTime         UP-GPS-ReferenceTime           OPTIONAL,
    up-GPS-ReferenceLocation     EllipsoidPointAltitude       OPTIONAL,
    up-GPS-DGPS-Corrections      UP-GPS-DGPS-Corrections       OPTIONAL,
    up-GPS-NavigationModel       UP-GPS-NavigationModel        OPTIONAL,
    up-GPS-IonosphericModel      UP-GPS-IonosphericModel       OPTIONAL,
    up-GPS-UTC-Model             UP-GPS-UTC-Model              OPTIONAL,
    up-GPS-Almanac               UP-GPS-Almanac                OPTIONAL,
    up-GPS-AcquisitionAssistance UP-GPS-AcquisitionAssistance  OPTIONAL,
    up-GPS-Real-timeIntegrity    BadSatList                    OPTIONAL
}

UP-Cipher-GPS-Data-Indicator ::= SEQUENCE {
    up-CipherParameters          UP-CipherParameters          OPTIONAL
}

UP-GPS-DGPS-Corrections ::=      SEQUENCE {
    gps-TOW                      INTEGER (0..604799),
    statusHealth                 DiffCorrectionStatus,
    dgps-CorrectionSatInfoList  DGPS-CorrectionSatInfoList
}

UP-GPS-IonosphericModel ::=      SEQUENCE {
    alfa0                        BIT STRING (SIZE (8)),
    alfa1                        BIT STRING (SIZE (8)),
    alfa2                        BIT STRING (SIZE (8)),
    alfa3                        BIT STRING (SIZE (8)),
    beta0                        BIT STRING (SIZE (8)),
    beta1                        BIT STRING (SIZE (8)),
    beta2                        BIT STRING (SIZE (8)),
    beta3                        BIT STRING (SIZE (8))
}

UP-GPS-Measurement ::=           SEQUENCE {
    referenceSFN                 ReferenceSFN                   OPTIONAL,
    gps-TOW-lmsec               GPS-TOW-lmsec,
    gps-TOW-rem-usec            GPS-TOW-rem-usec             OPTIONAL,
    gps-MeasurementParamList     GPS-MeasurementParamList
}

UP-GPS-NavigationModel ::=       SEQUENCE {
    n-SAT                       INTEGER (1..16),
    navigationModelSatInfoList  NavigationModelSatInfoList
}

UP-GPS-ReferenceTime ::=        SEQUENCE {
    gps-Week                    INTEGER (0..1023),
    gps-TOW                     GPS-TOW-lusec,
    sfn                         INTEGER (0..4095),
    gps-TOW-AssistList          GPS-TOW-AssistList           OPTIONAL
}

UP-GPS-UTC-Model ::=           SEQUENCE {
    a1                          BIT STRING (SIZE (24)),
    a0                          BIT STRING (SIZE (32)),
    t-ot                        BIT STRING (SIZE (8)),
    wn-t                        BIT STRING (SIZE (8)),
    delta-t-LS                  BIT STRING (SIZE (8)),
    wn-lsf                      BIT STRING (SIZE (8)),
    dn                          BIT STRING (SIZE (8)),
    delta-t-LSF                 BIT STRING (SIZE (8))
}

UP-IPDL-Parameters ::=          SEQUENCE {
    ip-Spacing                  IP-Spacing,
    ip-Length                   IP-Length,
    ip-Offset                   INTEGER (0..9),
    seed                        INTEGER (0..63),
    burstModeParameters         BurstModeParameters
}

```

```

UP-MeasuredResults ::=
  up-MultipleSets          SEQUENCE {
    up-MultipleSets          OPTIONAL,
    up-ReferenceCellIdentity PrimaryCPICH-Info          OPTIONAL,
    up-OTDOA-Measurement    UP-OTDOA-Measurement        OPTIONAL,
    up-Position              UP-Position                OPTIONAL,
    up-GPS-Measurement       UP-GPS-Measurement         OPTIONAL,
    up-Error                 UP-Error                   OPTIONAL
  }

UP-Measurement ::=
  up-ReportingQuantity      SEQUENCE {
    up-ReportingQuantity,
    reportCriteria          UP-ReportCriteria,
    up-OTDOA-AssistanceData UP-OTDOA-AssistanceData    OPTIONAL,
    up-GPS-AssistanceData   UP-GPS-AssistanceData    OPTIONAL
  }

UP-MeasurementEventResults ::=
  event7a                   CHOICE {
    UP-Position,
    event7b                  UP-OTDOA-Measurement,
    event7c                  UP-GPS-Measurement
  }

UP-MeasurementInterval ::=
  ENUMERATED {
    e5, e15, e60, e300,
    e900, e1800, e3600, e7200 }

UP-MethodType ::=
  ENUMERATED {
    ue-Assisted,
    ue-Based,
    ue-BasedPreferred,
    ue-AssistedPreferred }

UP-MultipleSets ::=
  numberOfOTDOA-IPDL-GPS-Sets SEQUENCE {
    INTEGER (2..3),
    numberOfReferenceCells     INTEGER (1..3),
    referenceCellRelation      ReferenceCellRelation
  }

UP-OTDOA-AssistanceData ::=
  up-OTDOA-ReferenceCell      SEQUENCE {
    UP-OTDOA-ReferenceCell    OPTIONAL,
    up-OTDOA-MeasurementAssistDataList UP-OTDOA-MeasurementAssistDataList OPTIONAL,
    up-IPDL-Parameters         UP-IPDL-Parameters    OPTIONAL
  }

UP-OTDOA-AssistanceSIB ::=
  up-CipherParameters         SEQUENCE {
    UP-CipherParameters       OPTIONAL,
    searchWindowSize          OTDOA-SearchWindowSize,
    referenceCellPosition     ReferenceCellPosition,
    up-IPDL-Parameters        UP-IPDL-Parameters    OPTIONAL,
    cellToMeasureInfoList     CellToMeasureInfoList
  }

UP-OTDOA-Measurement ::=
  sfn                         SEQUENCE {
    INTEGER (0..4095),
    ue-RX-TX-TimeDifferenceType2 UE-RX-TX-TimeDifferenceType2,
    qualityChoice              CHOICE {
      std-10                   ReferenceQuality10,
      std-50                   ReferenceQuality50,
      cpich-EcN0               CPICH-Ec-N0-OTDOA,
      defaultQuality           ReferenceQuality
    },
    neighbourList              NeighbourList          OPTIONAL
  }

UP-OTDOA-MeasurementAssistData ::= SEQUENCE {
  primaryCPICH-Info          PrimaryCPICH-Info,
  frequencyInfo              FrequencyInfo          OPTIONAL,
  sfn-SFN-ObsTimeDifference  SFN-SFN-ObsTimeDifference1,
  fineSFN-SFN                FineSFN-SFN          OPTIONAL,
  searchWindowSize           OTDOA-SearchWindowSize,
  relativeNorth              INTEGER (-20000..20000)  OPTIONAL,
  relativeEast                INTEGER (-20000..20000)  OPTIONAL,
  relativeAltitude           INTEGER (-4000..4000)    OPTIONAL
}

UP-OTDOA-MeasurementAssistDataList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
  UP-OTDOA-MeasurementAssistData

```

```

UP-OTDOA-ReferenceCell ::=          SEQUENCE {
    primaryCPICH-Info                PrimaryCPICH-Info,
    frequencyInfo                    FrequencyInfo                OPTIONAL,
    cellPosition                     ReferenceCellPosition        OPTIONAL
}

UP-Position ::=                     SEQUENCE {
    referenceSFN                    ReferenceSFN,
    gps-TOW                          GPS-TOW-lusec,
    positionEstimate                 PositionEstimate
}

UP-ReportCriteria ::=              CHOICE {
    up-ReportingCriteria            UP-EventParamList,
    periodicalReportingCriteria    PeriodicalReportingCriteria,
    noReporting                     NULL
}

UP-ReportingQuantity ::=           SEQUENCE {
    methodType                      UP-MethodType,
    positioningMethod               PositioningMethod,
    responseTime                    UP-ResponseTime,
    accuracy                        UP-Accuracy                OPTIONAL,
    gps-TimingOfCellWanted          BOOLEAN,
    multipleSets                   BOOLEAN,
    environmentCharacterisation     EnvironmentCharacterisation  OPTIONAL
}

UP-ResponseTime ::=               ENUMERATED {
    s1, s2, s4, s8, s16,
    s32, s64, s128 }

UTRA-CarrierRSSI ::=              INTEGER (-95..-30)

UTRAN-ReferenceTime ::=           SEQUENCE {
    gps-TOW                          GPS-TOW-lusec,
    sfn                              INTEGER (0..4095)
}

VarianceOfRLC-BufferPayload ::=   ENUMERATED {
    plv0, plv4, plv8, plv16, plv32, plv64,
    plv128, plv256, plv512, plv1024,
    plv2k, plv4k, plv8k, plv16k }

-- Actual value = IE value * 0.1
W ::=                              INTEGER (0..20)

-- *****
--
--   OTHER INFORMATION ELEMENTS (10.3.8)
--
-- *****

BCC ::=                            INTEGER (0..7)

BCCH-ModificationInfo ::=         SEQUENCE {
    mib-ValueTag                    MIB-ValueTag,
    bcch-ModificationTime           BCCH-ModificationTime        OPTIONAL
}

-- Actual value = IE value * 8
BCCH-ModificationTime ::=         INTEGER (0..511)

BSIC ::=                           SEQUENCE {
    ncc                              NCC,
    bcc                              BCC
}

CBS-DRX-Level1Information ::=     SEQUENCE {
    ctch-AllocationPeriod           INTEGER (1..256),
    cbs-FrameOffset                 INTEGER (0..255)
}

CDMA2000-Message ::=             SEQUENCE {
    msg-Type                        BIT STRING (SIZE (8)),
    payload                         BIT STRING (SIZE (1..512))
}

```

```

}
CDMA2000-MessageList ::= SEQUENCE (SIZE (1..maxInterSysMessages)) OF
                          CDMA2000-Message
CDMA2000-UMTS-Frequency-List ::= SEQUENCE (SIZE (1..maxNumCDMA2000Freqs)) OF
                                  FrequencyInfoCDMA2000
CellValueTag ::= INTEGER (1..4)
--Actual value = 2^(IE value)
ExpirationTimerFactor ::= INTEGER (1..8)
FDD-UMTS-Frequency-List ::= SEQUENCE (SIZE (1..maxNumFDDFreqs)) OF
                              FrequencyInfoFDD
FrequencyInfoCDMA2000 ::= SEQUENCE {
                            band-Class      BIT STRING (SIZE (5)),
                            cdma-Freq      BIT STRING (SIZE(11))
                          }
GSM-BA-Range ::= SEQUENCE {
                  gsmLowRangeUARFCN      UARFCN,
                  gsmUpRangeUARFCN      UARFCN
                }
GSM-BA-Range-List ::= SEQUENCE (SIZE (1..maxNumGSMFreqRanges)) OF
                      GSM-BA-Range
GSM-Classmark2 ::= OCTET STRING (SIZE (5))
GSM-Classmark3 ::= OCTET STRING
GSM-MessageList ::= SEQUENCE (SIZE (1..maxInterSysMessages)) OF
                    BIT STRING (SIZE (1..512))
IdentificationOfReveivedMessage ::= SEQUENCE {
                                      rrc-TransactionIdentifier RRC-TransactionIdentifier,
                                      receivedMessageType      ReceivedMessageType
                                    }
InterRAT-ChangeFailureCause ::= CHOICE {
    configurationUnacceptable      NULL,
    physicalChannelFailure        NULL,
    protocolError                  ProtocolErrorInformation,
    unspecified                    NULL,
    spare1                         NULL,
    spare2                         NULL,
    spare3                         NULL
  }
InterRAT-UE-RadioAccessCapability ::= CHOICE {
    gsm SEQUENCE {
        gsm-Classmark2      GSM-Classmark2,
        gsm-Classmark3      GSM-Classmark3
      },
    cdma2000 SEQUENCE {
        cdma2000-MessageList CDMA2000-MessageList
      }
  }
InterRAT-UE-RadioAccessCapabilityList ::= SEQUENCE (SIZE(1..maxInterSysMessages)) OF
                                          InterRAT-UE-RadioAccessCapability
InterRAT-HO-Failure ::= SEQUENCE {
    interRAT-HO-FailureCause InterRAT-HO-FailureCause OPTIONAL,
    interRATMessage          InterRATMessage          OPTIONAL
  }
InterRAT-HO-FailureCause ::= CHOICE {
    configurationUnacceptable      NULL,
    physicalChannelFailure        NULL,
    protocolError                  ProtocolErrorInformation,
    interRAT-ProtocolError        NULL,
    unspecified                    NULL,
    spare1                         NULL,
    spare2                         NULL,
    spare3                         NULL,
  }

```

```

    spare4                                NULL
}

InterRATMessage ::=                       CHOICE {
    gsm                                    SEQUENCE {
        gsm-MessageList                    GSM-MessageList
    },
    cdma2000                               SEQUENCE {
        cdma2000-MessageList                CDMA2000-MessageList
    }
}

InterRATMessageList ::=                   SEQUENCE (SIZE (1..maxSystemCapability)) OF
                                           InterRATMessage

MasterInformationBlock ::=                SEQUENCE {
    mib-ValueTag                            MIB-ValueTag,
    plmn-Type                               PLMN-Type,
    -- TABULAR: The PLMN identity and ANSI-41 core network information
    -- are included in PLMN-Type.
    sibSb-ReferenceList                     SIBSb-ReferenceList,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions                   SEQUENCE {} OPTIONAL
}

MIB-ValueTag ::=                         INTEGER (1..8)

NCC ::=                                   INTEGER (0..7)

PLMN-ValueTag ::=                         INTEGER (1..256)

PredefinedConfigIdentityAndValueTag ::= SEQUENCE {
    predefinedConfigIdentity                 PredefinedConfigIdentity,
    predefinedConfigValueTag                 PredefinedConfigValueTag OPTIONAL
}

ProtocolErrorInformation ::=              SEQUENCE {
    diagnosticsType                         CHOICE {
        type1                               SEQUENCE {
            protocolErrorCause               ProtocolErrorCause
        },
        spare                                NULL
    }
}

ReceivedMessageType ::=                   ENUMERATED {
    activeSetUpdate,
    cellUpdateConfirm,
    counterCheck,
    downlinkDirectTransfer,
    interRATHandoverCommand,
    measurementControl,
    pagingType2,
    physicalChannelReconfiguration,
    physicalSharedChannelAllocation,
    radioBearerReconfiguration,
    radioBearerRelease,
    radioBearerSetup,
    rrcConnectionRelease,
    rrcConnectionReject,
    rrcConnectionSetup,
    securityModeCommand,
    signallingConnectionRelease,
    transportChannelReconfiguration,
    transportFormatCombinationControl,
    ueCapabilityEnquiry,
    ueCapabilityInformationConfirm,
    uplinkPhysicalChannelControl,
    uraUpdateConfirm,
    utranMobilityInformation,
    spare1, spare2, spare3, spare4,
    spare5, spare6, spare7
}

Rplmn-Information ::=                     SEQUENCE {
    gsm-BA-Range-List                       GSM-BA-Range-List OPTIONAL,

```

```

OPTIONAL,
                                fdd-UMTS-Frequency-List FDD-UMTS-Frequency-List
OPTIONAL,
                                tdd-UMTS-Frequency-List FDD-UMTS-Frequency-List
                                cdma2000-UMTS-Frequency-List CDMA2000-UMTS-Frequency-
List OPTIONAL
}

SchedulingInformation ::= SEQUENCE {
    scheduling SEQUENCE {
        segCount SegCount DEFAULT 1,
        sib-Pos CHOICE {
            -- The element name indicates the repetition period and the value
            -- (multiplied by two) indicates the position of the first segment.
            rep4 INTEGER (0..1),
            rep8 INTEGER (0..3),
            rep16 INTEGER (0..7),
            rep32 INTEGER (0..15),
            rep64 INTEGER (0..31),
            rep128 INTEGER (0..63),
            rep256 INTEGER (0..127),
            rep512 INTEGER (0..255),
            rep1024 INTEGER (0..511),
            rep2048 INTEGER (0..1023),
            rep4096 INTEGER (0..2047)
        },
        sib-PosOffsetInfo SibOFF-List OPTIONAL
    }
}

SchedulingInformationSIB ::= SEQUENCE {
    sib-Type SIB-TypeAndTag,
    scheduling SchedulingInformation
}

SchedulingInformationSIBSb ::= SEQUENCE {
    sibSb-Type SIBSb-TypeAndTag,
    scheduling SchedulingInformation
}

SegCount ::= INTEGER (1..16)

SegmentIndex ::= INTEGER (1..15)

-- Actual value = 2 * IE value
SFN-Prime ::= INTEGER (0..2047)

SIB-Data-fixed ::= BIT STRING (SIZE (222))

SIB-Data-variable ::= BIT STRING (SIZE (1..214))

SIB-ReferenceList ::= SEQUENCE (SIZE (1..maxSIB)) OF
    SchedulingInformationSIB

SIBSb-ReferenceList ::= SEQUENCE (SIZE (1..maxSIB)) OF
    SchedulingInformationSIBSb

SIB-ReferenceListFACH ::= SEQUENCE (SIZE (1..maxSIB-FACH)) OF
    SchedulingInformationSIB

SIB-Type ::= ENUMERATED {
    masterInformationBlock,
    systemInformationBlockType1,
    systemInformationBlockType2,
    systemInformationBlockType3,
    systemInformationBlockType4,
    systemInformationBlockType5,
    systemInformationBlockType6,
    systemInformationBlockType7,
    systemInformationBlockType8,
    systemInformationBlockType9,
    systemInformationBlockType10,
    systemInformationBlockType11,
    systemInformationBlockType12,
    systemInformationBlockType13,
    systemInformationBlockType13-1,

```

```

systemInformationBlockType13-2,
systemInformationBlockType13-3,
systemInformationBlockType13-4,
systemInformationBlockType14,
systemInformationBlockType15,
systemInformationBlockType15-1,
systemInformationBlockType15-2,
systemInformationBlockType15-3,
systemInformationBlockType16,
systemInformationBlockType17,
spare1, spare2, spare3, spare4,
spare5, spare6, spare7 }

SIB-TypeAndTag ::=
  sysInfoType1
  sysInfoType2
  sysInfoType3
  sysInfoType4
  sysInfoType5
  sysInfoType6
  sysInfoType7
  sysInfoType8
  sysInfoType9
  sysInfoType10
  sysInfoType11
  sysInfoType12
  sysInfoType13
  sysInfoType13-1
  sysInfoType13-2
  sysInfoType13-3
  sysInfoType13-4
  sysInfoType14
  sysInfoType15
  sysInfoType16
  sysInfoType17
}

CHOICE {
  PLMN-ValueTag,
  PLMN-ValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  NULL,
  CellValueTag,
  NULL,
  NULL,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  PredefinedConfigIdentityAndValueTag,
  NULL
}

SIBSb-TypeAndTag ::=
  sysInfoType1
  sysInfoType2
  sysInfoType3
  sysInfoType4
  sysInfoType5
  sysInfoType6
  sysInfoType7
  sysInfoType8
  sysInfoType9
  sysInfoType10
  sysInfoType11
  sysInfoType12
  sysInfoType13
  sysInfoType13-1
  sysInfoType13-2
  sysInfoType13-3
  sysInfoType13-4
  sysInfoType14
  sysInfoType15
  sysInfoType16
  sysInfoType17
  sysInfoTypeSB1
  sysInfoTypeSB2
}

CHOICE {
  PLMN-ValueTag,
  PLMN-ValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  NULL,
  CellValueTag,
  NULL,
  NULL,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  CellValueTag,
  PredefinedConfigIdentityAndValueTag,
  NULL,
  CellValueTag,
  CellValueTag
}

SibOFF ::=
  ENUMERATED {
    so2, so4, so6, so8, so10,
    so12, so14, so16, so18,
    so20, so22, so24, so26,
    so28, so30, so32 }

SibOFF-List ::=
  SEQUENCE (SIZE (1..15)) OF
  SibOFF

SysInfoType1 ::=
  SEQUENCE {
    -- Core network IEs
    cn-CommonGSM-MAP-NAS-SysInfo  NAS-SystemInformationGSM-MAP,
    cn-DomainSysInfoList           CN-DomainSysInfoList,
    -- User equipment IEs
    ue-ConnTimersAndConstants      UE-ConnTimersAndConstants,

```

```

        ue-IdleTimersAndConstants      UE-IdleTimersAndConstants,
-- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}
}

SysInfoType2 ::=                      SEQUENCE {
-- UTRAN mobility IEs
    ura-IdentityList                  URA-IdentityList,
-- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}
}

SysInfoType3 ::=                      SEQUENCE {
    sib4indicator                      BOOLEAN,
-- UTRAN mobility IEs
    cellIdentity                      CellIdentity,
    cellSelectReselectInfo            CellSelectReselectInfoSIB-3-4,
    cellAccessRestriction             CellAccessRestriction,
-- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}
}

SysInfoType4 ::=                      SEQUENCE {
-- UTRAN mobility IEs
    cellIdentity                      CellIdentity,
    cellSelectReselectInfo            CellSelectReselectInfoSIB-3-4,
    cellAccessRestriction             CellAccessRestriction,
-- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}
}

SysInfoType5 ::=                      SEQUENCE {
    sib6indicator                      BOOLEAN,
-- Physical channel IEs
    pich-PowerOffset                  PICH-PowerOffset,
    modeSpecificInfo                  CHOICE {
        fdd                            SEQUENCE {
            aich-PowerOffset            AICH-PowerOffset
        },
        tdd                            SEQUENCE {
            pusch-SysInfoList-SFN      PUSCH-SysInfoList-SFN      OPTIONAL,
            pdsch-SysInfoList-SFN      PDSCH-SysInfoList-SFN      OPTIONAL,
            midambleConfiguration      MidambleConfiguration      OPTIONAL,
            openLoopPowerControl-TDD    OpenLoopPowerControl-TDD
        }
    },
    primaryCCPCH-Info                  PrimaryCCPCH-Info            OPTIONAL,
    prach-SystemInformationList        PRACH-SystemInformationList,
    sccpch-SystemInformationList        SCCPCH-SystemInformationList,
    cbs-DRX-Level1Information           CBS-DRX-Level1Information      OPTIONAL,
-- Conditional on any of the CTCH indicator IEs in
-- sccpch-SystemInformationList
-- Extension mechanism for non- release99 information
        nonCriticalExtensions          SEQUENCE {}
}

SysInfoType6 ::=                      SEQUENCE {
-- Physical channel IEs
    pich-PowerOffset                  PICH-PowerOffset,
    modeSpecificInfo                  CHOICE {
        fdd                            SEQUENCE {
            aich-PowerOffset            AICH-PowerOffset,
            csich-PowerOffset           CSICH-PowerOffset            OPTIONAL
        },
        tdd                            SEQUENCE {
            pusch-SysInfoList-SFN      PUSCH-SysInfoList-SFN      OPTIONAL,
            pdsch-SysInfoList-SFN      PDSCH-SysInfoList-SFN      OPTIONAL,
            midambleConfiguration      MidambleConfiguration      OPTIONAL,
            openLoopPowerControl-TDD    OpenLoopPowerControl-TDD
        }
    },
    primaryCCPCH-Info                  PrimaryCCPCH-Info            OPTIONAL,
    prach-SystemInformationList        PRACH-SystemInformationList      OPTIONAL,
    sccpch-SystemInformationList        SCCPCH-SystemInformationList      OPTIONAL,
    cbs-DRX-Level1Information           CBS-DRX-Level1Information      OPTIONAL,
-- Conditional on any of the CTCH indicator IEs in
-- sccpch-SystemInformationList
-- Extension mechanism for non- release99 information

```

```

        nonCriticalExtensions          SEQUENCE {}
    }
SysInfoType7 ::=
    -- Physical channel IEs
    modeSpecificInfo                   CHOICE {
        fdd                             SEQUENCE {
            ul-Interference             UL-Interference
        },
        tdd                             NULL
    },
    prach-Information-SIB5-List        DynamicPersistenceLevelList,
    prach-Information-SIB6-List        DynamicPersistenceLevelList        OPTIONAL,
    expirationTimeFactor               ExpirationTimerFactor            OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType8 ::=
    -- User equipment IEs
    cpch-Parameters                    CPCH-Parameters,
    -- Physical channel IEs
    cpch-SetInfoList                  CPCH-SetInfoList,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType9 ::=
    -- Physical channel IEs
    cpch-PersistenceLevelsList        CPCH-PersistenceLevelsList,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType10 ::=
    -- User equipment IEs
    drac-SysInfoList                  DRAC-SysInfoList,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType11 ::=
    sib12indicator                     BOOLEAN,
    -- Measurement IEs
    fach-MeasurementOccasionInfo      FACH-MeasurementOccasionInfo    OPTIONAL,
    measurementControlSysInfo         MeasurementControlSysInfo,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType12 ::=
    -- Measurement IEs
    fach-MeasurementOccasionInfo      FACH-MeasurementOccasionInfo    OPTIONAL,
    measurementControlSysInfo         MeasurementControlSysInfo,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType13 ::=
    -- Core network IEs
    cn-DomainSysInfoList              CN-DomainSysInfoList,
    -- User equipment IEs
    ue-IdleTimersAndConstants          UE-IdleTimersAndConstants        OPTIONAL,
    capabilityUpdateRequirement        CapabilityUpdateRequirement    OPTIONAL,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType13-1 ::=
    -- ANSI-41 IEs
    ansi-41-RAND-Information           ANSI-41-RAND-Information,
    -- Extension mechanism for non- release99 information
    nonCriticalExtensions              SEQUENCE {}
}

SysInfoType13-2 ::=
    -- ANSI-41 IEs
    ansi-41-UserZoneID-Information     ANSI-41-UserZoneID-Information,

```

```

-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType13-3 ::=
-- ANSI-41 IEs
ansi-41-PrivateNeighbourListInfo ANSI-41-PrivateNeighbourListInfo,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType13-4 ::=
-- ANSI-41 IEs
ansi-41-GlobalServiceRedirectInfo
ANSI-41-GlobalServiceRedirectInfo,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType14 ::=
-- Physical channel IEs
individualTS-InterferenceList  IndividualTS-InterferenceList,
expirationTimeFactor           ExpirationTimerFactor           OPTIONAL,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType15 ::=
-- Measurement IEs
up-GPS-Assistance              UP-Cipher-GPS-Data-Indicator      OPTIONAL,
up-OTDOA-Assistance            UP-OTDOA-AssistanceSIB      OPTIONAL,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType15-1 ::=
-- DGPS corrections
up-DGPS-SIB-Data              UP-DGPS-SIB-Data
}

SysInfoType15-2 ::=
-- Ephemeris and clock corrections
up-Ephe-SIB-Data              UP-Ephe-SIB-Data
}

SysInfoType15-3 ::=
-- Almanac and other data
transmissionTOW                INTEGER (0..1048575),
satMask                        BIT STRING (SIZE (1..32)),
lsbTOW                         BIT STRING (SIZE (8)),
up-Alma-SIB-DataList           UP-Alma-SIB-DataList
}

SysInfoType16 ::=
-- Radio bearer IEs
preDefinedRadioConfiguration  PreDefRadioConfiguration,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoType17 ::=
-- Physical channel IEs
pusch-SysInfoList              PUSCH-SysInfoList          OPTIONAL,
pdsch-SysInfoList              PDSCH-SysInfoList          OPTIONAL,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoTypeSB1 ::=
-- Other IEs
sib-ReferenceList              SIB-ReferenceList          OPTIONAL,
-- Extension mechanism for non- release99 information
nonCriticalExtensions          SEQUENCE {}
}

SysInfoTypeSB2 ::=
-- Other IEs
sib-ReferenceList              SIB-ReferenceList          OPTIONAL,

```

```

-- Extension mechanism for non- release99 information
    nonCriticalExtensions          SEQUENCE {}
}
TDD-UMTS-Frequency-List ::=
    SEQUENCE (SIZE (1..maxNumTDDFreqs)) OF
    FrequencyInfoTDD

-- *****
--
-- ANSI-41 INFORMATION ELEMENTS (10.3.9)
--
-- *****

ANSI-41-GlobalServiceRedirectInfo ::= ANSI-41-NAS-Parameter
ANSI-41-PrivateNeighbourListInfo ::= ANSI-41-NAS-Parameter
ANSI-41-RAND-Information ::= ANSI-41-NAS-Parameter
ANSI-41-UserZoneID-Information ::= ANSI-41-NAS-Parameter
ANSI-41-NAS-Parameter ::= BIT STRING (SIZE (1..2048))

Min-P-REV ::= BIT STRING (SIZE (8))

NAS-SystemInformationANSI-41 ::= ANSI-41-NAS-Parameter
NID ::= BIT STRING (SIZE (16))

P-REV ::= BIT STRING (SIZE (8))

SID ::= BIT STRING (SIZE (15))

END

```

11.4 Constant definitions

Constant-definitions DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

```

hipDSCHidentities          INTEGER ::= 64
hipUSCHidentities          INTEGER ::= 64
hiRM                        INTEGER ::= 256
maxAC                       INTEGER ::= 16
maxAdditionalMeas           INTEGER ::= 4
maxASC                      INTEGER ::= 8
maxASCmap                   INTEGER ::= 7
maxASCpersist              INTEGER ::= 6
maxCCTrCH                   INTEGER ::= 8
maxCellMeas                 INTEGER ::= 32
maxCellMeas-1              INTEGER ::= 31
maxCNdomains                INTEGER ::= 4
maxCPCHsets                 INTEGER ::= 16
maxDPCH-DLchan              INTEGER ::= 8
maxDPCHcodesPerTS          INTEGER ::= 16
-- **TODO**
maxDPDCH-UL                 INTEGER ::= 6
maxDRACclasses              INTEGER ::= 8
-- **TODO**
maxFACH                     INTEGER ::= 8
maxFreq                     INTEGER ::= 8
maxFrequencybands           INTEGER ::= 4
maxInterSysMessages         INTEGER ::= 4
maxLoCHperRLC               INTEGER ::= 2
maxMeasEvent                INTEGER ::= 8
maxMeasIntervals            INTEGER ::= 3
maxMeasParEvent             INTEGER ::= 2
maxNumCDMA2000Freqs         INTEGER ::= 8
maxNumGSMFreqRanges         INTEGER ::= 32
maxNumFDDFreqs              INTEGER ::= 8
maxNumTDDFreqs              INTEGER ::= 8
maxNoOfMeas                 INTEGER ::= 16
maxOtherRAT                 INTEGER ::= 15
maxPage1                    INTEGER ::= 8
maxPCPCH-Apsig              INTEGER ::= 16
maxPCPCH-ApSubCh            INTEGER ::= 12
maxPCPCH-CDsig              INTEGER ::= 16
maxPCPCH-CDsubCh            INTEGER ::= 12
maxPCPCH-SF                 INTEGER ::= 7
maxPCPCHs                   INTEGER ::= 64
maxPDCPAlgoType             INTEGER ::= 8
maxPDSCH                    INTEGER ::= 8

```

```

maxPDSCH-TFCIgroups      INTEGER ::= 256
maxPRACH                  INTEGER ::= 16
maxPredefConfig          INTEGER ::= 16
maxPUSCH                  INTEGER ::= 8
maxRABsetup              INTEGER ::= 16
maxRAT                   INTEGER ::= 16
maxRB                     INTEGER ::= 32
maxRBallRABs             INTEGER ::= 27
maxRBMuxOptions          INTEGER ::= 8
maxRBperRAB              INTEGER ::= 8
maxReportedGSMCells      INTEGER ::= 6
maxRL                     INTEGER ::= 8
maxRL-1                   INTEGER ::= 7
maxSat                    INTEGER ::= 16
maxSCCPCH                 INTEGER ::= 16
maxSIB                    INTEGER ::= 32
-- **TODO**
maxSIB-FACH               INTEGER ::= 8
maxSIBperMsg              INTEGER ::= 16
maxSig                     INTEGER ::= 16
maxSRBsetup               INTEGER ::= 8
maxSubCh                  INTEGER ::= 12
maxSystemCapability       INTEGER ::= 16
maxTF                      INTEGER ::= 32
maxTF-CPCH                INTEGER ::= 16
maxTFC                     INTEGER ::= 1024
maxTFCI-2-Combs           INTEGER ::= 512
maxTGPS                   INTEGER ::= 6
maxTrCH                   INTEGER ::= 32
maxTrCHpreconf            INTEGER ::= 16
maxTS                      INTEGER ::= 14
maxTS-1                   INTEGER ::= 13
maxURA                    INTEGER ::= 8

```

END

11.5 RRC information between network nodes

Internode-definitions DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS

```

    HandoverToUTRANCommand-r3,
    MeasurementReport,
    PhysicalChannelReconfiguration-r3,
    RadioBearerReconfiguration-r3,
    RadioBearerRelease-r3,
    RadioBearerSetup-r3,
    TransportChannelReconfiguration-r3,
    UECapabilityInformation

```

FROM PDU-definitions

```

-- Core Network IEs :
    CN-DomainInformationList,
    NAS-SystemInformationGSM-MAP,
-- UTRAN Mobility IEs :
    CellIdentity,
    URA-Identity,
-- User Equipment IEs :
    C-RNTI,
    RRC-MessageSequenceNumber,
    START-Value,
    STARTList,
    U-RNTI,
    UE-RadioAccessCapability,
-- Radio Bearer IEs :
    PDCP-InfoReconfig,
    PredefinedConfigValueTag,
    RAB-InformationSetupList,
    RB-Identity,
    RB-MappingInfo,
    RLC-Info,
    RLC-SequenceNumber,
    SRB-InformationSetupList,
-- Transport Channel IEs :

```

```

    CPCH-SetID,
    DL-CommonTransChInfo,
    DL-AddReconfTransChInfoList,
    DRAC-StaticInformationList,
    UL-CommonTransChInfo,
    UL-AddReconfTransChInfoList,
-- Measurement IEs :
    MeasurementIdentity,
    MeasurementReportingMode,
    MeasurementType,
    AdditionalMeasurementID-List,
-- Other IEs :
    InterRATMessage
FROM InformationElements

    maxNoOfMeas,
    maxPredefConfig,
    maxRABsetup,
    maxRB,
    maxSRBsetup,
    maxTrCH
FROM Constant-definitions;

-- RRC information transferred between network nodes,
-- per group of information transfers having same endpoint
-- Alike class definitions for RRC PDUs

-- *****
--
-- RRC information, to target RNC
--
-- *****

-- *****
--
-- RRC information, target RNC to source RNC
--
-- *****

T-RNC-ToSRNC-Container ::= SEQUENCE {
    message          T-RNC-ToSRNC-ContainerType
}

T-RNC-ToSRNC-ContainerType ::= CHOICE {
    radioBearerSetup          RadioBearerSetup-r3,
    radioBearerReconfiguration RadioBearerReconfiguration-r3,
    radioBearerRelease        RadioBearerRelease-r3,
    transportChannelReconfiguration TransportChannelReconfiguration-r3,
    physicalChannelReconfiguration PhysicalChannelReconfiguration-r3,
    extension                  NULL
}

-- *****
--
-- RRC information, target RNC to source RAT
--
-- *****

-- Container definitions, alike PDU definitions
-- RRC Container definition, to target RNC

-- *****
--
-- SRNC Relocation information
--
-- *****

SRNC-RelocationInfo ::= SEQUENCE {
-- Non-RRC IEs
    stateOfRRC                StateOfRRC,
    stateOfRRC-Procedure       StateOfRRC-Procedure,
    cipheringStatus            CipheringStatus,
    calculationTimeForCiphering CalculationTimeForCiphering OPTIONAL,
    cipheringInfoPerRB-List    CipheringInfoPerRB-List OPTIONAL,
    integrityProtectionStatus  IntegrityProtectionStatus,
    srb-SpecificIntegrityProtInfo SRB-SpecificIntegrityProtInfoList,
    implementationSpecificParams ImplementationSpecificParams OPTIONAL,

```

```

-- User equipment IEs
  u-RNTI          U-RNTI,
  c-RNTI          C-RNTI          OPTIONAL,
  ue-RadioAccessCapability UE-RadioAccessCapability,
-- Other IEs
  interRATMessage InterRATMessage OPTIONAL,
-- UTRAN mobility IEs
  ura-Identity    URA-Identity    OPTIONAL,
-- Core network IEs
  cn-CommonGSM-MAP-NAS-SysInfo NAS-SystemInformationGSM-MAP,
  cn-DomainInformationList      CN-DomainInformationList      OPTIONAL,
-- Measurement IEs
  ongoingMeasRepList OngoingMeasRepList OPTIONAL,
-- Radio bearer IEs
  preConfigStatusInfo PreConfigStatusInfo,
  srb-InformationList  SRB-InformationSetupList,
  rab-InformationList  RAB-InformationSetupList      OPTIONAL,
-- Transport channel IEs
  ul-CommonTransChInfo UL-CommonTransChInfo      OPTIONAL,
  ul-TransChInfoList   UL-AddReconfTransChInfoList  OPTIONAL,
  modeSpecificInfo     CHOICE {
    fdd                 SEQUENCE {
      cpch-SetID       CPCH-SetID          OPTIONAL,
      transChDRAC-Info DRAC-StaticInformationList OPTIONAL
    },
    tdd                 NULL
  },
  dl-CommonTransChInfo DL-CommonTransChInfo      OPTIONAL,
  dl-TransChInfoList   DL-AddReconfTransChInfoList  OPTIONAL,
-- Measurement report
  measurementReport    MeasurementReport      OPTIONAL
}

-- RRC Container definition, target RNC to source RNC
-- Nothing new, only re-using RRC PDUs
--
-- RRC Container definition, target RNC to source system
-- Nothing new, re-using RRC PDUs (HandoverToUTRANCommand)

-- IE definitions
CalculationTimeForCipherng ::= SEQUENCE {
  cell-Id      CellIdentity,
  sfn          INTEGER (0..4095)
}

CipherngInfoPerRB ::= SEQUENCE {
  dl-START     START-Value,
  ul-START     START-Value
}

-- TABULAR: Multiplicity value numberOfRadioBearers has been replaced
-- with maxRB.
CipherngInfoPerRB-List ::= SEQUENCE (SIZE (1..maxRB)) OF
  CipherngInfoPerRB

CipherngStatus ::= ENUMERATED {
  started, notStarted }

ImplementationSpecificParams ::= BIT STRING (SIZE (1..512))

IntegrityProtectionStatus ::= ENUMERATED {
  started, notStarted }

MeasurementCommandWithType ::= CHOICE {
  setup      MeasurementType,
  modify     NULL,
  release    NULL
}

OngoingMeasRep ::= SEQUENCE {
  measurementIdentity      MeasurementIdentity,
  measurementCommandWithType MeasurementCommandWithType,
  -- TABULAR: The CHOICE Measurement in the tabular description is included
  -- in the IE above.
  measurementReportingMode MeasurementReportingMode      OPTIONAL,
  additionalMeasurementID-List AdditionalMeasurementID-List  OPTIONAL
}

```

```

}
OngoingMeasRepList ::= SEQUENCE (SIZE (1..maxNoOfMeas)) OF
                        OngoingMeasRep
PreConfigStatusInfo ::= SEQUENCE (SIZE (1..maxPredefConfig)) OF
                        PredefinedConfigValueTag
SRB-SpecificIntegrityProtInfo ::= SEQUENCE {
    rb-Identity          RB-Identity          OPTIONAL,
    ul-RRC-HFN          BIT STRING (SIZE (28)),
    dl-RRC-HFN          BIT STRING (SIZE (28)),
    ul-RRC-SequenceNumber RRC-MessageSequenceNumber,
    dl-RRC-SequenceNumber RRC-MessageSequenceNumber
}
SRB-SpecificIntegrityProtInfoList ::= SEQUENCE (SIZE (4..maxSRBsetup)) OF
                                        SRB-SpecificIntegrityProtInfo
StateOfRRC ::= ENUMERATED {
    cell-DCH, cell-FACH,
    cell-PCH, ura-PCH }
StateOfRRC-Procedure ::= ENUMERATED {
    awaitNoRRC-Message,
    awaitRRC-ConnectionRe-establishmentComplete,
    awaitRB-SetupComplete,
    awaitRB-ReconfigurationComplete,
    awaitTransportCH-ReconfigurationComplete,
    awaitPhysicalCH-ReconfigurationComplete,
    awaitActiveSetUpdateComplete,
    awaitHandoverComplete,
    sendCellUpdateConfirm,
    sendUraUpdateConfirm,
    sendRrcConnectionReestablishment,
    otherStates }
END

```

12 Message transfer syntax

Transfer syntax for RRC PDUs is derived from their ASN.1 definitions by use of Packed Encoding Rules, unaligned (X.691), and with adapted final padding. If special encoding is used, it is indicated in the ECN module defined for each ASN.1 module. How special encoding is used is defined in TR 25.921.

12.1 Structure of encoded RRC messages

An RRC PDU, which is the bit string that is exchanged between peer entities/ across the radio interface, is the concatenation of a basic production, an extension and padding, in that order.

12.1.1 Basic production

The 'basic production' is obtained by applying UNALIGNED PER to the abstract syntax value (the ASN.1 description) as specified in X.691, except for the 0 to 7 bits added at the end to produce a multiple of 8 bits. The basic production can have any positive number of bits, not necessarily a multiple of 8 bits.

12.1.2 Extension

Emitters compliant with this version of the specification of the protocol shall, unless indicated otherwise on a PDU type basis, set the extension part empty. Emitters compliant with a later version might send non empty extensions.

12.1.3 Padding

Emitters compliant with this version of the specification of the protocol shall, unless indicated otherwise on a PDU type basis, pad the basic production with the smallest number of bits required to meet the size constraints of the lower layers. Padding bits shall be set to 0.

Receivers compliant with this version of the specification have no need to distinguish the extension and padding parts, and shall, unless indicated otherwise on a PDU type basis, accept RRC PDUs with any bit string in the extension and padding parts.

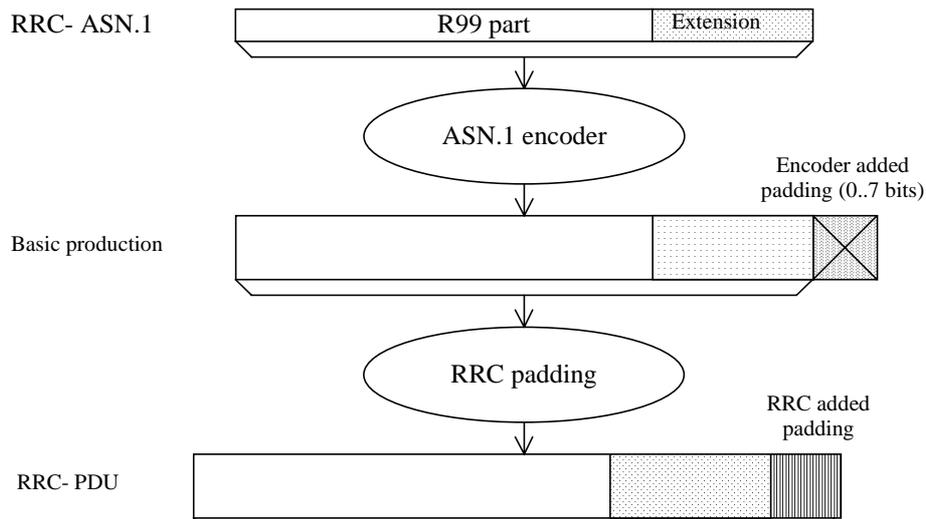


Figure 61: Padding

When using AM or UM mode, RLC requires that the RRC PDU length is a multiple of 8 bits.

When using Tr mode, RLC does neither impose size requirements nor perform padding. This implies that RRC has to take into account the transport format set defined for the transport channel across which the message is to be sent. RRC shall select the smallest transport format that fits the RRC PDU and shall add the lowest number of padding bits required to fit the size specified for the selected transport format.

For system information blocks, building the PDU involves two steps. The first step is the building of the SIBs, in which step padding is not applied (the rules for extension apply). The second step is the building of the RRC PDUs, involving segmentation and concatenation of SIBs, and then padding as described above for Tr mode. The procedure is shown by means of an example as described in Figure 62. The example includes two SIBs, SIBn and SIBn+1, of which only SIBn includes a protocol extension. The two SIBs used in the example don't require segmentation and are concatenated into one SYSTEM INFORMATION message.

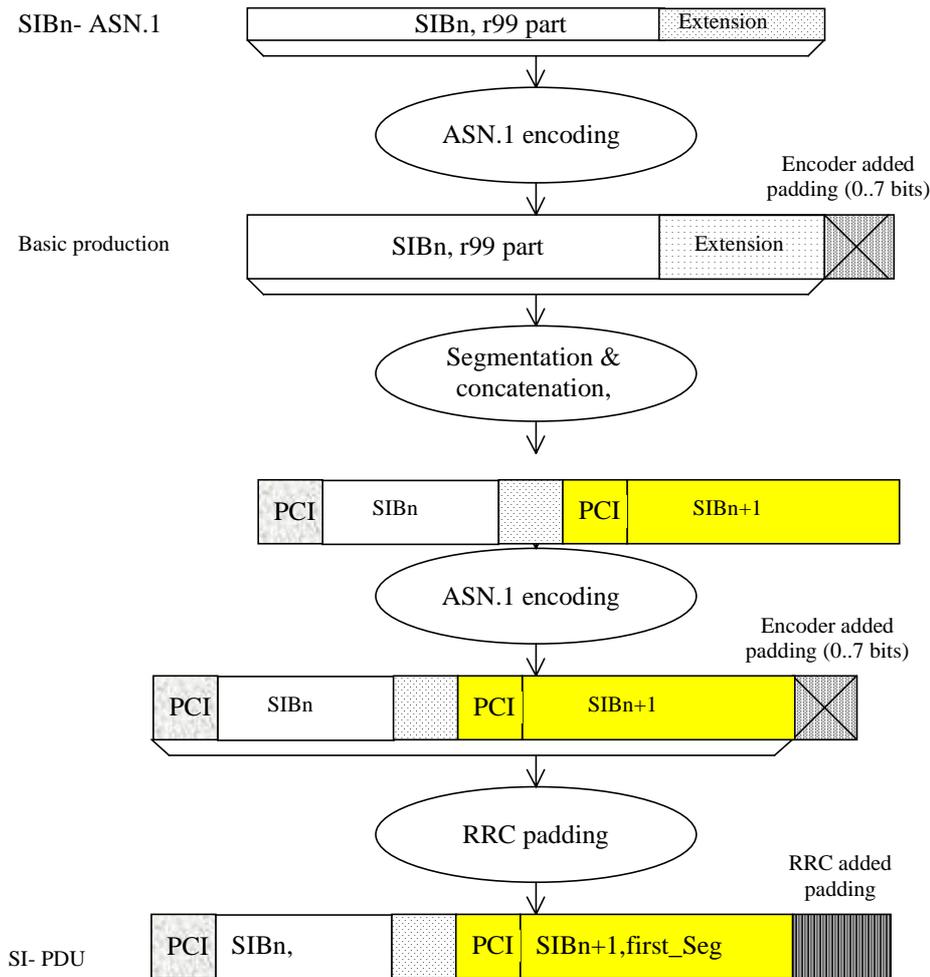


Figure 62: Padding for System Information

PCI: Protocol control information at SYSTEM INFORMATION message level

SI: SYSTEM INFORMATION message

12.2 ECN link module for RRC

```

RRC-ECN-Link-Module LINK-DEFINITIONS ::=
BEGIN
  Class-definitions ENCODED BY perUnaligned WITH Class-definitions-ECN-Module
  PDU-definitions ENCODED BY perUnaligned WITH PDU-definitions-ECN-Module
  CoreNetwork-IEs ENCODED BY perUnaligned WITH CoreNetwork-IEs-ECN-Module
  UTRANMobility-IEs ENCODED BY perUnaligned WITH UTRANMobility-IEs-ECN-Module
  UserEquipment-IEs ENCODED BY perUnaligned WITH UserEquipment-IEs-ECN-Module
  RadioBearer-IEs ENCODED BY perUnaligned WITH RadioBearer-IEs-ECN-Module
  TransportChannel-IEs ENCODED BY perUnaligned WITH TransportChannel-IEs-ECN-Module
  PhysicalChannel-IEs ENCODED BY perUnaligned WITH PhysicalChannel-IEs-ECN-Module
  Measurement-IEs ENCODED BY perUnaligned WITH Measurement-IEs-ECN-Module
  Other-IEs ENCODED BY perUnaligned WITH Other-IEs-ECN-Module
  ANSI-41-IEs ENCODED BY perUnaligned WITH ANSI-41-IEs-ECN-Module
END
    
```

12.3 ECN modules for RRC

```
Class-definitions-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

PDU-definitions-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

Corenetwork-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

UTRANMobility-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

UserEquipment-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

RadioBearer-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

TransportChannel-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

PhysicalChannel-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

Measurement-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

Other-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END

ANSI-41-IEs-ECN-Module ENCODING-DEFINITIONS ::=
BEGIN
END
```

13 Protocol timers, counters and other parameters

The information provided in subclauses 13.1 and 13.2 shall be treated as informative. The normative text is specified in the relevant subclauses in clause 8 and clause 8 shall prevail.

13.1 Timers for UE

Timer	Start	Stop	At expiry
T300	Transmission of RRC CONNECTION REQUEST	Reception of RRC CONNECTION SETUP	Retransmit RRC CONNECTION REQUEST if V300 \leq N300, else go to Idle mode
T302	Transmission of CELL UPDATE/URA UPDATE	Reception of CELL UPDATE CONFIRM/URA UPDATE CONFIRM	Retransmit CELL UPDATE/URA UPDATE if V302 \leq N302, else, go to Idle mode
T304	Transmission of UE CAPABILITY INFORMATION	Reception of UE CAPABILITY INFORMATION CONFIRM	Retransmit UE CAPABILITY INFORMATION if V304 \leq N304, else initiate RRC connection reestablishment
T305	Entering CELL_FACH or URA_PCH or CELL_PCH state. Reception of CELL UPDATE CONFIRM/URA UPDATE CONFIRM.	Entering another state.	Transmit CELL UPDATE if T307 is not activated.
T307	When the timer T305 has expired and the UE detects "out of service area".	When the UE detects "in service area".	Transit to idle mode
T308	Transmission of RRC CONNECTION RELEASE COMPLETE	Not stopped	Transmit RRC CONNECTION RELEASE COMPLETE if V308 \leq N308, else go to idle mode.
T309	Upon reselection of a cell belonging to another radio access system from connected mode	Successful establishment of a connection in the new cell	Resume the connection to UTRAN
T310	Transmission of PUSCH CAPACITY REQUEST	Reception of PHYSICAL SHARED CHANNEL ALLOCATION	Transmit PUSCH CAPACITY REQUEST if V310 \leq N310, else procedure stops.
T311	Reception of PHYSICAL SHARED CHANNEL ALLOCATION message with the CHOICE "PUSCH allocation" set to "PUSCH allocation pending".	Reception of PHYSICAL SHARED CHANNEL ALLOCATION message with CHOICE "PUSCH allocation" set to "PUSCH allocation assignment".	UE may initiate a PUSCH capacity request procedure.
T312	When the UE starts to establish dedicated CH	When the UE detects consecutive N312 "in sync" indication from L1.	The criteria for physical channel establishment failure is fulfilled
T313	When the UE detects consecutive N313 "out of sync" indication from L1.	When the UE detects consecutive N315 "in sync" indication from L1.	The criteria for Radio Link failure is fulfilled
T314	When the criteria for radio link failure are fulfilled. The timer is started only if radio bearer(s) which are associated with T314 exist.	When the Cell Update procedure has been completed.	See subclause 8.3.1.13
T315	When the criteria for radio link failure are fulfilled. The timer is started only if radio bearer(s) which are associated with T315 exist.	When the Cell Update procedure has been completed.	See subclause 8.3.1.14

Timer	Start	Stop	At expiry
T316	When the UE detects "out of service area" in URA_PCH or CELL_PCH state	When the UE detects "in service area".	Initiate cell update procedure
T317	When the T316 expires and the UE detects "out of service area".	When the UE detects "in service area".	Transit to idle mode

13.2 Counters for UE

Counter	Reset	Incremented	When reaching max value
V300	When initiating the procedure RRC connection establishment	Upon expiry of T300.	When V300 > N300, the UE enters idle mode.
V302	When initiating the procedure Cell update or URA update	Upon expiry of T302	When V302 > N302 the UE enters idle mode.
V304	When sending the first UE CAPABILITY INFORMATION message.	Upon expiry of T304	When V304 > N304 the UE initiates the Cell update procedure
V308	When sending the first RRC CONNECTION RELEASE COMPLETE message in a RRC connection release procedure.	Upon expiry of T308	When V308 > N308 the UE stops re-transmitting the RRC CONNECTION RELEASE COMPLETE message.
V310	When sending the first PUSCH CAPACITY REQUEST message in a PUSCH capacity request procedure	Upon expiry of T310	When V310 > N310 the UE stops re-transmitting the PUSCH CAPACITY REQUEST message.

13.3 UE constants and parameters

Constant	Usage
N300	Maximum number of retransmissions of the RRC CONNECTION REQUEST message
N302	Maximum number of retransmissions of the CELL UPDATE message
N304	Maximum number of retransmissions of the UE CAPABILITY INFORMATION message
N308	Maximum number of retransmissions of the RRC CONNECTION RELEASE COMPLETE message
N310	Maximum number of retransmission of the PUSCH CAPACITY REQUEST message
N312	Maximum number of successive "in sync" received from L1.
N313	Maximum number of successive "out of sync" received from L1.
N315	Maximum number of successive "in sync" received from L1 during T313 is activated.

13.4 UE variables

13.4.1 CIPHERING_STATUS

This variable contains information about the current status of ciphering in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Status	MP		Enumerated(Not started, Started)	

13.4.2 COMPRESSED_MODE_ERROR

This variable contains information on whether the received compressed mode configuration from the UTRAN has resulted in an illegal overlap causing a runtime error.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
COMPRESSED_MODE_ERROR	MP		Boolean	

13.4.3 C_RNTI

This variable stores the assigned C-RNTI for this UE when in CELL_FACH state.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
C-RNTI	OP		C-RNTI 10.3.3.8	

13.4.4 DOFF

This variable contains the default offset value in the UE. See TS 25.402 for details.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Default DPCH Offset Value (DOFF)	OP		Default DPCH Offset Value, 10.3.6.16	

13.4.5 ESTABLISHED_RABS

This variable is used to store information about the established radio access bearers and signalling radio bearers in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RAB information	OP	1 to <maxRABset up>		For each RAB established
>RAB info	MP		RAB info 10.3.4.8	
>RB information	MP	1 to <maxRBper RAB>		For each RB belonging to the RAB
>>RB identity	MP		RB identity 10.3.4.16	
>>Subflow	MP		Integer(0..<maxSubflowcount>)	Reference to the RAB subflow implemented by this RB
>>RB started	MD		Enumerated(stopped, started)	Default value is started
Signalling radio bearer information	MP	1 to <maxSRBset up>		In the order of RB 0 and upwards
>RB started	MD		Enumerated(stopped, started)	Default value is started

13.4.6 ESTABLISHMENT_CAUSE

This variable is used to store the cause for establishment of a signalling connection received by upper layers, to be used at RRC connection establishment.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Establishment cause	OP		Establishment cause 10.3.3.11	

13.4.7 FAILURE_CAUSE

This variable contains the cause for failure of a UE initiated procedure, to be reported in a retransmitted message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Failure cause	MP		Failure cause 10.3.3.13	

13.4.8 FAILURE_INDICATOR

This variable indicates whether the procedure has failed for a UE initiated procedure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Failure indicator	MP		Boolean	TRUE: Procedure has failed

13.4.9 INITIAL_UE_IDENTITY

In this variable the identity used by the UE when establishing an RRC connection is stored.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Initial UE identity	OP		Initial UE identity 10.3.3.15	

13.4.10 INTEGRITY_PROTECTION_INFO

This variable contains information about the current status of the integrity protection in the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Historical status	MP		Enumerated(Never been active, Has been active)	
Status	MP		Enumerated(Not started, Started)	
Signalling radio bearer specific integrity protection information	MP	1 to <maxSRBsetup>		Status information for RB#0-4 in that order
> Uplink RRC HFN	MP		Bitstring (28)	
> Downlink RRC HFN	MP		Bitstring (28)	
> Uplink RRC Message sequence number	MP		Integer (0..15)	
> Downlink RRC Message sequence number	MP		Integer (0..15)	

13.4.11 INVALID_CONFIGURATION

This variable indicates whether a received message contained an invalid configuration, by means of invalid values or invalid combinations of information elements.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Invalid configuration	MP		Boolean	TRUE: An invalid configuration has been detected

13.4.12 MEASUREMENT_IDENTITY

This variable stores the measurements configured in the UE. For each configured measurement, the information below shall be stored.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MEASUREMENT CONTROL	MP		MEASUREMENT CONTROL 10.2.17, System Information Block type 1110.2.48.8.12, System Information Block type 1210.2.48.8.13	Information as contained in these messages.

13.4.13 ORDERED_ASU

NOTE: For FDD only.

This variable stores information about an ordered, but not yet executed, update of active set.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
ACTIVE SET UPDATE	MP		ACTIVE SET UPDATE 10.2.1	Information as contained in this message.

13.4.14 ORDERED_CONFIG

This variable stores information about an ordered but not yet executed establishment/release/reconfiguration of radio bearers, and/or transport channels and/or physical channels.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>message</i>	MP			Information as contained in one of the following messages
>RADIO BEARER SETUP			RADIO BEARER SETUP 10.2.33	
>RADIO BEARER RECONFIGURATION			RADIO BEARER RECONFIGURATION 10.2.27	
>RADIO BEARER RELEASE			RADIO BEARER RELEASE 10.2.30	
>TRANSPORT CHANNEL RECONFIGURATION			TRANSPORT CHANNEL RECONFIGURATION 10.2.50	
>PHYSICAL CHANNEL RECONFIGURATION			PHYSICAL CHANNEL RECONFIGURATION 10.2.22	

13.4.15 PDCP_SN_INFO

This variable contains PDCP receive sequence numbers for one or several radio bearers to be included in a response message to UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB with PDCP information list	OP	1 to <maxRBall RABs>		
>RB with PDCP information	MP		RB with PDCP information 10.3.4.22	

13.4.16 PROTOCOL_ERROR_INDICATOR

This variable indicates whether there exist a protocol error that is to be reported to UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error indicator	MP		Protocol error indicator 10.3.3.27	

13.4.17 PROTOCOL_ERROR_INFORMATION

This variable contains diagnostics to be reported to UTRAN for a message that was not completely understood.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error information	MP		Protocol error information 10.3.8.12	

13.4.18 PROTOCOL_ERROR_REJECT

This variable indicates whether there has occurred a severe protocol error causing the ongoing procedure to fail.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Protocol error reject	MP		Boolean	TRUE: a severe protocol error has occurred

13.4.19 RB_TIMER_INDICATOR

This variable contains information to be sent to UTRAN if any of the timers T314 or T315 has expired when the UE sends a cell update with cause RL failure.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB timer indicator	MP		RB timer indicator 10.3.3.28	

13.4.20 RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO

This variable contains information to be sent to UTRAN about when a new ciphering configuration shall be activated in the uplink for radio bearers using RLC-AM or RLC-UM.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB uplink ciphering activation time info	MP		RB activation time info 10.3.4.13	

13.4.21 SELECTED_PLMN

This variable contains the type of and identity of the selected PLMN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
PLMN Type	MP		PLMN Type 10.3.1.12	
CHOICE <i>identity type</i>	MP			
>PLMN identity			PLMN identity 10.3.1.11	
>SID			SID 10.3.9.11	

CHOICE <i>identity type</i>	Condition under which the given <i>identity type</i> is chosen
PLMN identity	PLMN Type is "GSM-MAP"
SID	PLMN Type is "ANSI-41"

13.4.22 START_THRESHOLD

This variable contains information about the maximum allowed value of the START for a CN domain.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
THRESHOLD	MP		Integer (0..1048576)	20 bits

13.4.23 START_VALUE_TO_TRANSMIT

This variable contains the value of START for new radio bearer(s) to be transmitted in a response message.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
START	OP		START 10.3.3.38	

13.4.24 TFC_SUBSET

This variable contains information about the TFC subset currently applied.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE mode				
>FDD				
>>Current TFC subset	MP		Transport Format Combination Subset 10.3.5.22	
>>>Duration	OP		TFC Control duration 10.3.6.80	
>>>>Default TFC subset	OP		Transport Format Combination Subset 10.3.5.22	The TFC subset to go back to when any temporary limitation is released
>TDD				
>>TFCS list		1 to < maxCCTrC H >		
>>>TFCS identity	MP			
>>>>Current TFC subset	MP		Transport Format Combination Subset 10.3.5.22	
>>>>>Duration	OP		TFC Control duration 10.3.6.80	
>>>>>>Default TFC subset	OP		Transport Format Combination Subset 10.3.5.22	The TFC subset to go back to when any temporary limitation is released

13.4.25 TGPS_IDENTITY

This variable contains the configuration parameters of a compressed mode transmission gap pattern sequence

Information Element/Group name	Need	Multi	Type and reference	Semantics description
TGPS_IDENTITY	MP		DPCH compressed mode info 10.3.6.33	Information as contained in the IE group "Transmission gap pattern sequence configuration parameters".

13.4.26 TGSN_REPORTED

This variable specifies whether an IE "Proposed TGSN" was reported to the UTRAN

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Proposed TGSN reported	MP		Boolean	

13.4.27 TRANSACTIONS

This variable stores the identifications of the ongoing RRC procedure transactions.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Accepted transactions	OP	1 to <maxtrans actions>		Maximum one accepted transaction per downlink message type may be stored – each message type may appear only once in the list.
>Message type	MP		Message Type	
>RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	
Rejected transactions	OP	1 to <maxtrans actions>		Maximum one rejected transaction per downlink message type may be stored – each message type may appear only once in the list.
>Message type	MP		Message Type	
>RRC transaction identifier	MP		RRC transaction identifier 10.3.3.36	

13.4.28 UE_CAPABILITY_TRANSFERRED

This variable stores information about which UE capabilities that have been transferred to UTRAN.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE radio access capability	OP		UE radio access capability 10.3.3.42	
UE system specific capability	OP		Inter-RAT message 10.3.8.8	Includes inter-RAT classmark

13.4.29 UNSUPPORTED_CONFIGURATION

This variable indicates whether a received message contained a configuration, that is not supported by the UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Unsupported configuration	MP		Boolean	TRUE: An unsupported configuration has been detected

13.4.30 URA_IDENTITY

This variable stores the assigned URA identity for this UE when in URA_PCH state.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
URA identity	OP		URA identity 10.3.2.6	

13.4.31 U_RNTI

This variable stores the assigned U-RNTI for this UE.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
U-RNTI	MP		U-RNTI 10.3.3.47	

13.4.32 VALUE_TAG

This variable contains information about the value tag for the last received system information block of a given type, for all system information blocks using value tags.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
MIB value tag	MP		MIB value tag 10.3.8.9	Value tag for the master information block
SB 1 value tag	MP		Cell value tag 10.3.8.4	Value tag for the scheduling block type 1
SB 2 value tag	MP		Cell value tag 10.3.8.4	Value tag for the scheduling block type 2
SIB 1 value tag	CV-GSM		PLMN value tag 10.3.8.10	Value tag for the system information block type 1
SIB 2 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 2
SIB 3 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 3
SIB 4 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 4
SIB 5 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 5
SIB 6 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 6
CHOICE mode				
>FDD				
>>SIB 8 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 8
>TDD				(no data)
SIB 11 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 11
SIB 12 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 12
SIB 13 value tag	CV-ANSI		Cell value tag 10.3.8.4	Value tag for the system information block type 13
SIB 13.1 value tag	CV-ANSI		Cell value tag 10.3.8.4	Value tag for the system information block type 13.1
SIB 13.2 value tag	CV-ANSI		Cell value tag 10.3.8.4	Value tag for the system information block type 13.2
SIB 13.3 value tag	CV-ANSI		Cell value tag 10.3.8.4	Value tag for the system information block type 13.3
SIB 13.4 value tag	CV-ANSI		Cell value tag 10.3.8.4	Value tag for the system information block type 13.4
SIB 15 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 15
SIB 15.1 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 15.1
SIB 15.2 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 15.2
SIB 15.3 value tag	MP		Cell value tag 10.3.8.4	Value tag for the system information block type 15.3
SIB 16 value tag	MP		PLMN value tag 10.3.8.10	Value tag for the system information block type 16

Condition	Explanation
<i>GSM</i>	This information is only stored when the PLMN Type in the variable <code>SELECTED_PLMN</code> is "GSM-MAP".
<i>ANSI</i>	This information is only stored when the PLMN Type in the variable <code>SELECTED_PLMN</code> is "ANSI-41".

13.5 UE RRC Procedure Performance

This section defines the performance requirements related to RRC procedures in the UE. Where the total delay is impacted by processing of variable length on the physical layer (e.g. physical layer synchronisation), references to appropriate specifications are given.

13.5.1 Definitions

The following definitions of N1 and N2 are valid only for this UE RRC Procedure Performance specification.

N1 = upper limit on the time required to execute modifications in UE after the reception of a UTRAN -> UE message has been completed. Where applicable (e.g. the physical layer transmission is impacted), the changes shall be adopted in the beginning of the next TTI starting after N1. N1 is specified as a multiple of 10 ms.

N2 = number of 10 ms radio frames from end of reception of UTRAN -> UE message on UE physical layer before the transmission of the UE -> UTRAN response message must be ready to start on a transport channel with no access delay other than the TTI alignment (e.g. DCH, therefore excluding delays caused by RACH procedure etc). The UE response message transmission from the physical layer shall begin at the latest $(N2 \cdot 10) + TTI$ ms after completion of the reception of the last TTI carrying the triggering UTRAN -> UE message.

N1 and N2 are independent (e.g. $N2 - N1$ is not restricted to being less than or equal to 10ms).

13.5.2 RRC procedure performance values

NOTE: Times indicated in the table do not include cell reselection.

Procedure title:	UTRAN -> UE	UE -> UTRAN	N1	N2	Notes
RRC Connection Management Procedures					
Broadcast of system information	SYSTEM INFORMATION				N2 is not applicable for any system information messages, because there is no response message from the UE.
Master Information Block	SYSTEM INFORMATION		5	NA	No system information data shall be lost due to processing of a MIB received with no detectable errors. This means that the UE shall buffer all system information data received after the MIB until the data can be processed according to the information in the MIB, unless the MIB was received erroneously.
System Information Block type 1	SYSTEM INFORMATION		10	NA	
System Information Block type 2	SYSTEM INFORMATION		10	NA	
System Information Block type 3	SYSTEM INFORMATION		10	NA	
System Information Block type 4	SYSTEM INFORMATION		10	NA	
System Information Block type 5	SYSTEM INFORMATION		10	NA	
System Information Block type 6	SYSTEM INFORMATION		10	NA	
System Information Block type 7	SYSTEM INFORMATION		5	NA	
System Information Block type 8	SYSTEM INFORMATION		10	NA	
System Information Block type 9	SYSTEM INFORMATION		5	NA	
System Information Block type 10	SYSTEM INFORMATION		5	NA	
System Information Block type 11	SYSTEM INFORMATION		10	NA	
System Information Block type 12	SYSTEM INFORMATION		10	NA	
System Information Block type 13	SYSTEM INFORMATION		10	NA	
System Information Block type 14	SYSTEM INFORMATION		10	NA	
System Information Block type 15	SYSTEM INFORMATION		10	NA	
System Information Block type 16	SYSTEM INFORMATION		10	NA	
RRC connection establishment <i>Dedicated channel</i>	RRC CONNECTION SETUP	RRC CONNECTION SETUP COMPLETE	10	NA	N1 measures time to the start of tx / rx on DPCH. N2 cannot be specified, because RRC CONNECTION SETUP COMPLETE message is transmitted only after physical layer synchronisation, which also depends on the Node B. The performance of the physical layer synchronisation procedure is specified in [19] and [20]
RRC connection establishment <i>Common channel</i>	RRC CONNECTION SETUP	RRC CONNECTION SETUP COMPLETE	10	11	N1 and N2 applicable as defined (N2 can be tested from the initiation of the power ramp on RACH).

RRC connection release <i>Dedicated channel</i>	RRC CONNECTION RELEASE	RRC CONNECTION RELEASE COMPLETE	5	8	N1 sets the requirement for the time from the completion of the last repetition of the RRC CONNECTION RELEASE COMPLETE message to the release of the physical channel. N2 sets the requirement from the end of successful reception of the RRC CONNECTION RELEASE message to the start of the first transmission of the RRC CONNECTION RELEASE COMPLETE message.
RRC connection release <i>Common channel</i>	RRC CONNECTION RELEASE	RRC CONNECTION RELEASE COMPLETE	NA	11	N1 represents UE internal configuration that cannot be externally observed.
UE capability enquiry	UE CAPABILITY ENQUIRY	UE CAPABILITY ENQUIRY INFORMATION	NA	8	N1 is not applicable because the UE configuration does not change.
Security mode control	SECURITY MODE COMMAND	SECURITY MODE COMPLETE	5	8	
Signalling flow release procedure	SIGNALLING FLOW RELEASE		5	NA	N2 is not applicable because there is no response message.
Counter check	COUNTER CHECK	COUNTER CHECK RESPONSE	NA	8	N1 is not applicable because the UE configuration does not change.
Radio Bearer control procedures					
Radio bearer establishment <i>Dedicated channel</i>	RADIO BEARER SETUP	RADIO BEARER SETUP COMPLETE / FAILURE	10	NA	N2 cannot be specified, because the RADIO BEARER SETUP COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
Radio bearer establishment <i>Common channel</i>	RADIO BEARER SETUP	RADIO BEARER SETUP COMPLETE / FAILURE	10	11	
Radio bearer reconfiguration <i>Dedicated channel</i>	RADIO BEARER RECONFIGURATION	RADIO BEARER RECONFIGURATION COMPLETE / FAILURE	10	NA	N2 cannot be specified, because the RADIO BEARER RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
Radio bearer reconfiguration <i>Common channel</i>	RADIO BEARER RECONFIGURATION	RADIO BEARER RECONFIGURATION COMPLETE / FAILURE	10	11	
Radio bearer release	RADIO BEARER RELEASE	RADIO BEARER RELEASE COMPLETE / FAILURE	10	11	

Transport channel reconfiguration <i>Dedicated channel</i>	TRANSPORT CHANNEL RECONFIGURATION	TRANSPORT CHANNEL RECONFIGURATION COMPLETE / FAILURE	10	NA	N2 cannot be specified, because the TRANSPORT CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
Transport channel reconfiguration <i>Common channel</i>	TRANSPORT CHANNEL RECONFIGURATION	TRANSPORT CHANNEL RECONFIGURATION COMPLETE / FAILURE	10	11	
Transport format combination control <i>AM or UM RLC mode</i>	TRANSPORT FORMAT COMBINATION CONTROL	TRANSPORT FORMAT COMBINATION CONTROL FAILURE	5	8	
Transport format combination control <i>Transparent mode</i>	TRANSPORT FORMAT COMBINATION CONTROL		5	NA	N2 is not applicable because no response message is defined.
Physical channel reconfiguration <i>Dedicated channel</i>	PHYSICAL CHANNEL RECONFIGURATION	PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE	8	NA	N2 cannot be specified, because the PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE message is transmitted only after physical layer synchronisation, which depends also on Node B.
Physical channel reconfiguration <i>Common channel</i>	PHYSICAL CHANNEL RECONFIGURATION	PHYSICAL CHANNEL RECONFIGURATION COMPLETE / FAILURE	8	9	
Physical Shared Channel Allocation [TDD only]	PHYSICAL SHARED CHANNEL ALLOCATION		5	NA	N2 is not applicable because no response message is defined.
Uplink Physical Channel Control [TDD only]	UPLINK PHYSICAL CHANNEL CONTROL		NA	NA	Requirements for outer loop and timing advance adjustments are defined in [22] and [20].
RRC connection mobility procedures					
Cell update	CELL UPDATE CONFIRM		5		
		UTRAN MOBILITY INFORMATION CONFIRM	5	8	
		PHYSICAL CHANNEL RECONFIGURATION COMPLETE	8	9	
		TRANSPORT CHANNEL RECONFIGURATION COMPLETE	10	11	
URA update	URA UPDATE CONFIRM	UTRAN MOBILITY INFORMATION CONFIRM	5	8	

UTRAN mobility information	UTRAN MOBILITY INFORMATION	UTRAN MOBILITY INFORMATION CONFIRM / FAILURE	5	8	
Active set update	ACTIVE SET UPDATE	ACTIVE SET UPDATE COMPLETE / FAILURE	NA	8	The requirements on UE combining and power control performance for both UL and DL are specified by RAN WG4 in [21] and [19]. Also in case of branch addition the COMPLETE / FAILURE message is transmitted without waiting for the new branch to stabilise, therefore N2 is specified.
Inter-RAT handover to UTRAN	HANDOVER TO UTRAN COMMAND (other system)	HANDOVER TO UTRAN COMPLETE	NA	NA	The performance of this procedure is specified in 05.10.
Inter-RAT handover from UTRAN	HANDOVER FROM UTRAN COMMAND	HANDOVER FROM UTRAN FAILURE	NA	NA	The performance of this procedure is specified in [19] and [20].
Measurement procedures					
Measurement control	MEASUREMENT CONTROL	MEASUREMENT CONTROL FAILURE	5	8	Response to measurement inquiry depends on physical layer measurement. Response time is defined in [19] and [20]. N1 and N2 only define the processing of the message.

14 Specific functions

14.1 Intra-frequency measurements

14.1.1 Intra-frequency measurement quantities

- 1 Downlink E_c/I_0 (chip energy per total received channel power density).
- 2 Downlink path loss.
- 3 Downlink received signal code power (RSCP) after despreading.
- 4 ISCP measured on Timeslot basis.

14.1.2 Intra-frequency reporting events for FDD

Within the measurement reporting criteria field in the Measurement Control message the UTRAN notifies the UE which events should trigger a measurement report. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All the illustrated events are measured with respect to any of the measurement quantities given in subclause 14.1.1. The measurement objects are the monitored primary common pilot channels (CPICH). The reporting events are marked with vertical arrows in the figures below.

NOTE: The events below are numbered 1A, 1B, 1C,... since all intra-frequency reporting events would be labelled 1X, inter-frequency reporting events would be labelled 2X, and so on for the other measurement types.

14.1.2.1 Reporting event 1A: A Primary CPICH enters the reporting range

When event 1A is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when a primary CPICH enters the reporting range as defined by the following formula:

For pathloss:

$$10 \cdot \text{Log}M_{New} \leq W \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_A} M_i \right) + (1-W) \cdot 10 \cdot \text{Log}M_{Best} + (R + H_{1a}),$$

For all the other measurement quantities:

$$10 \cdot \text{Log}M_{New} \geq W \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_A} M_i \right) + (1-W) \cdot 10 \cdot \text{Log}M_{Best} - (R + H_{1a}),$$

The variables in the formula are defined as follows:

M_{New} is the measurement result of the cell entering the reporting range.

M_i is a measurement result of a cell in the active set.

N_A is the number of cells in the current active set.

M_{Best} is the measurement result of the strongest cell in the active set.

W is a parameter sent from UTRAN to UE.

R is the reporting range

H_{1a} is the hysteresis parameter for the event 1a.

The addition window of cells in event 1A is configured with the **reporting range** parameter (R) common to many reporting events and an optional **hysteresis** parameter (H_{1a}), which can be used to distinguish the addition window from reporting windows related to other measurement events.

The occurrence of event 1A is conditional on a **report deactivation threshold** parameter. This parameter indicates the maximum number of cells allowed in the active set for measurement reports to be triggered by event 1A to be transmitted.

Event 1A may be enhanced with an addition timer, which is configured with the **time-to-trigger** parameter (see subclause 14.1.5.2). If a time-to-trigger value is used, a cell must continuously stay within the reporting range for the given time period, before the UE shall send a measurement report.

Event 1A may be used for triggering a measurement report, which includes cells, which the UE has detected without having received a neighbour cell list.

If more than one cell triggers event 1A within the UE internal event evaluation period (defined in [25.133]) and fulfils the reporting criteria after the addition timer has elapsed, the UE shall report all of the triggering cells in the event results. The triggering cells shall be sorted in descending order according to the measured quantity.

14.1.2.2 Reporting event 1B: A primary CPICH leaves the reporting range

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when a primary CPICH leaves the reporting range as defined by the following formula:

For pathloss:

$$10 \cdot \text{Log}M_{New} \geq W \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_A} M_i \right) + (1-W) \cdot 10 \cdot \text{Log}M_{Best} + (R + H_{1a}),$$

For all the other measurement quantities:

$$10 \cdot \text{Log} M_{Old} \leq W \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_A} M_i \right) + (1-W) \cdot 10 \cdot \text{Log} M_{Best} - (R + H_{1b}),$$

The variables in the formula are defined as follows:

M_{Old} is the measurement result of the cell leaving the reporting range.

M_i is a measurement result of a cell in the active set.

N_A is the number of cells in the current active set.

M_{Best} is the measurement result of the strongest cell in the active set.

W is a parameter sent from UTRAN to UE.

R is the reporting range

H_{1b} is the hysteresis parameter for the event 1b.

The drop window of cells in event 1B is configured with the **reporting range** parameter (R) common to many reporting events and an optional **hysteresis** parameter (H_{1b}), which can be used to distinguish the drop window from reporting windows related to other measurement events.

Event 1B may be enhanced with a drop timer, which is configured with the **time-to-trigger** parameter. If the timer is used, the weakening cell must continuously stay below the reporting range for the given time period before the UE may send a measurement report.

If more than one cell triggers event 1B within the UE internal event evaluation period (defined in [25.133]) and fulfils the reporting criteria after the drop timer has elapsed, the UE shall report all of the triggering cells in the event results. The triggering cells shall be sorted in descending order according to the measured quantity.

14.1.2.3 Reporting event 1C: A non-active primary CPICH becomes better than an active primary CPICH

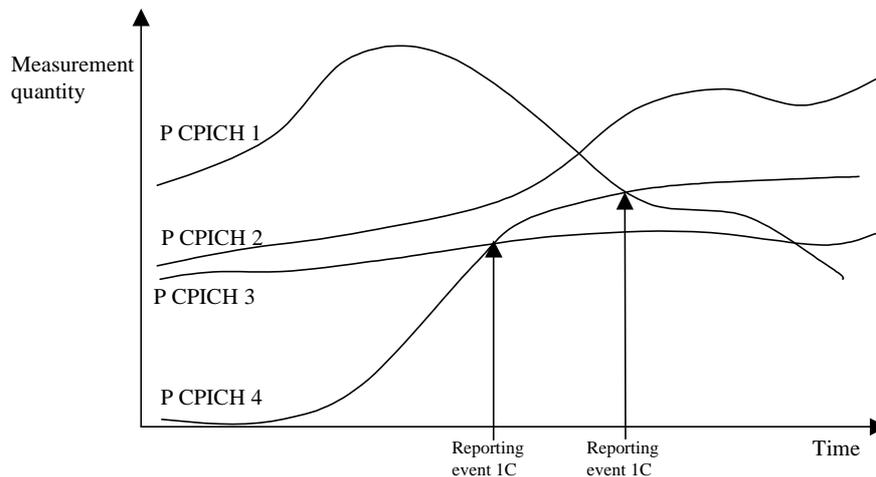


Figure 63: A primary CPICH that is not included in the active set becomes better than a primary CPICH that is in the active set

In this example the cells belonging to primary CPICH 1, 2 and 3 are supposed to be in the active set, but the cell transmitting primary CPICH 4 is not (yet) in the active set.

If a primary CPICH that is not included in the active set becomes better than a primary CPICH that is in the active set, and event 1C has been ordered by UTRAN, this event shall trigger a report to be sent from the UE.

This event may be used for replacing cells in the active set. It is activated if the number of active cells is equal to or greater than a **replacement activation threshold** parameter that UTRAN signals to the UE in the MEASUREMENT

CONTROL message. This parameter indicates the minimum number of cells required in the active set for measurement reports triggered by event 1C to be transmitted.

14.1.2.4 Reporting event 1D: Change of best cell

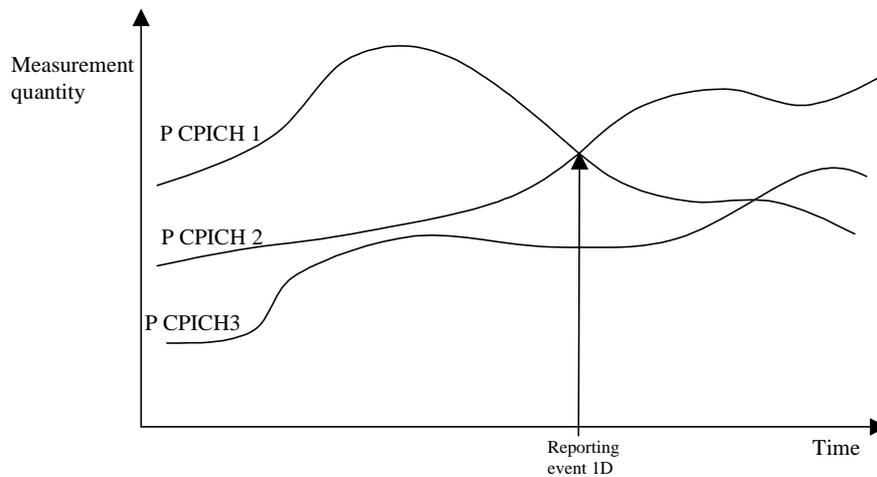


Figure 64: A primary CPICH becomes better than the previously best primary CPICH

If any of the primary CPICHs within the reporting range becomes better than the previously best primary CPICH, and event 1D has been ordered by UTRAN then this event shall trigger a report to be sent from the UE. The corresponding report contains (at least) the new best primary CPICH.

14.1.2.5 Reporting event 1E: A Primary CPICH becomes better than an absolute threshold

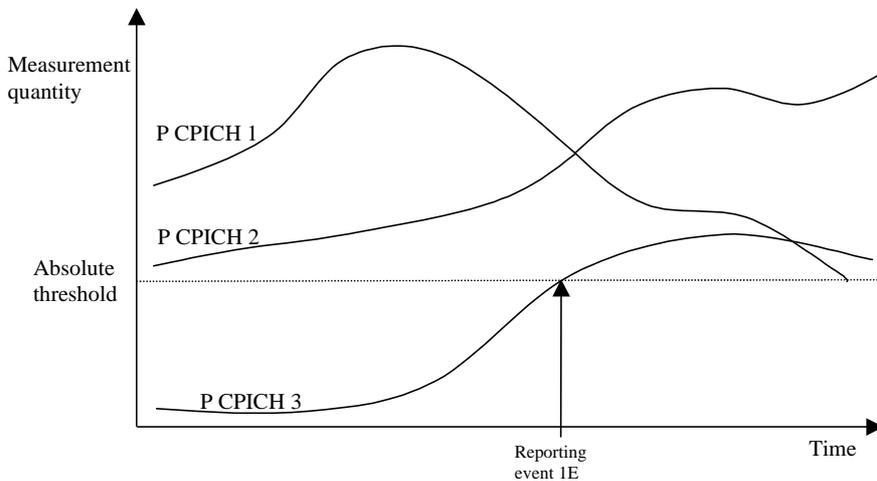


Figure 65: Event-triggered report when a Primary CPICH becomes better than an absolute threshold

When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the Measurement quantity of a Primary CPICH becomes better than an absolute threshold. The corresponding report contains (at least) the involved Primary CPICH.

Event 1E may be used for triggering a measurement report, which includes cells, which the UE has detected without having received a neighbour cell list.

14.1.2.6 Reporting event 1F: A Primary CPICH becomes worse than an absolute threshold

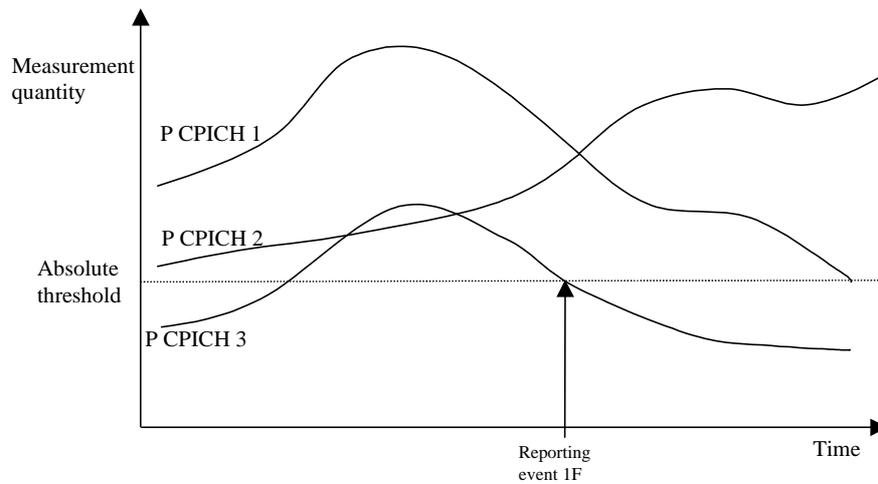


Figure 66: Event-triggered report when a Primary CPICH becomes worse than an absolute threshold

When this event is ordered by the UTRAN in a measurement control message the UE shall send a report when a primary CPICH becomes worse than an absolute threshold. The corresponding report contains (at least) the involved Primary CPICH.

14.1.3 Intra-frequency reporting events for TDD

14.1.3.1 Reporting event 1G: Change of best cell (TDD)

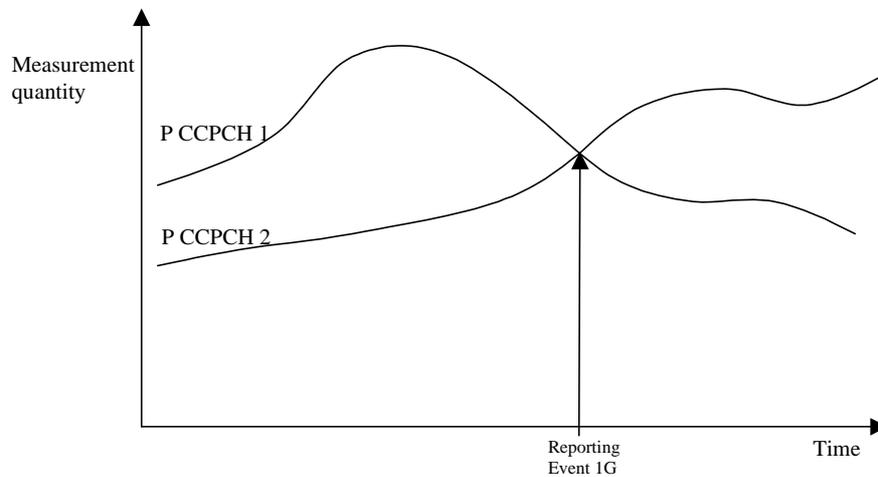


Figure 67: A primary CCPCH becomes better than the previous best primary CCPCH

If any of the primary CCPCHs becomes better than the previously best primary CCPCH, and event 1G has been ordered by UTRAN then this event shall trigger a report to be sent from the UE. The corresponding report contains (at least) the new best primary CCPCH.

14.1.3.2 Reporting event 1H: Timeslot ISCP below a certain threshold (TDD)

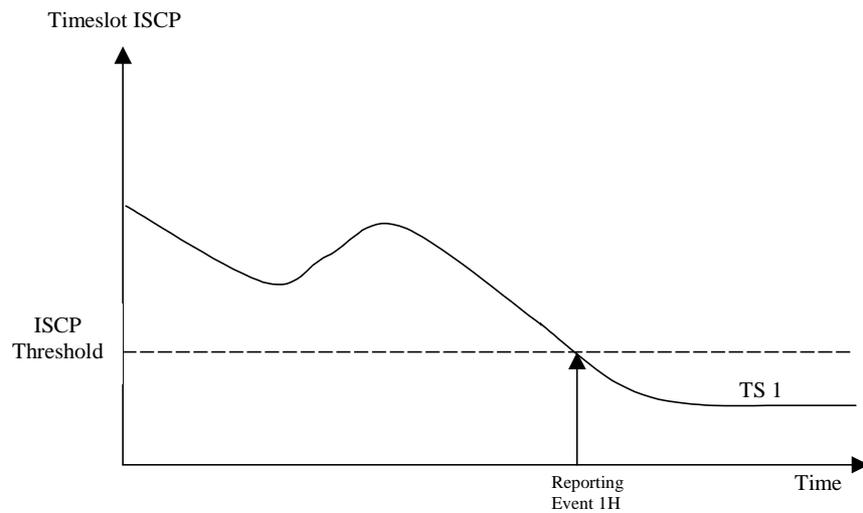


Figure 68: An ISCP value of a timeslot drops below an absolute threshold

When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the Timeslot ISCP drops below an absolute threshold.

14.1.3.3 Reporting event 1I: Timeslot ISCP above a certain threshold (TDD)

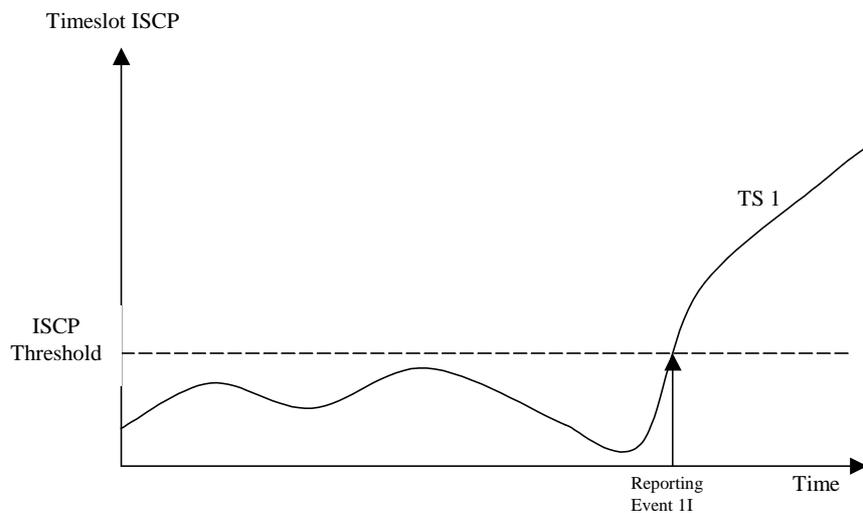


Figure 69: An ISCP value of a timeslot exceeds a certain threshold

When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the Timeslot ISCP exceeds an absolute threshold.

14.1.4 Event-triggered periodic intra-frequency measurement reports

14.1.4.1 Cell addition failure (FDD only)

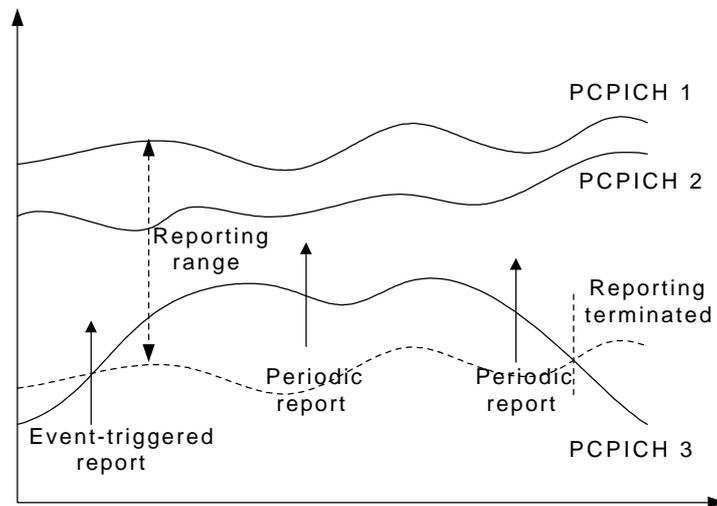


Figure 70: Periodic reporting triggered by event 1A

When a cell enters the reporting range and triggers event 1A, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in an update of the active set. However, in some situations the UTRAN may be unable to add a strong cell to the active set typically due to capacity shortage for example.

The UE shall continue reporting after the initial report by reverting to periodical measurement reporting if the reported cell is not added to the active set. This is illustrated in Figure 70. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals. The reports shall include reporting information of the cells in the current active set and of the monitored cell(s) in the reporting range.

Event-triggered periodic measurement reporting shall be terminated if:

- there are no longer any monitored cell(s) within the reporting range; or
- the UTRAN has added cells to the active set so that it includes the maximum number of cells (defined by the **reporting deactivation threshold** parameter), which are allowed for event 1A to be triggered; or
- the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the **amount of reporting** parameter).

The reporting period is assigned by the UTRAN (with the **Reporting interval** parameter). If the reporting interval is set to zero event-triggered measurement reporting shall not be applied.

14.1.4.2 Cell replacement failure (FDD only)

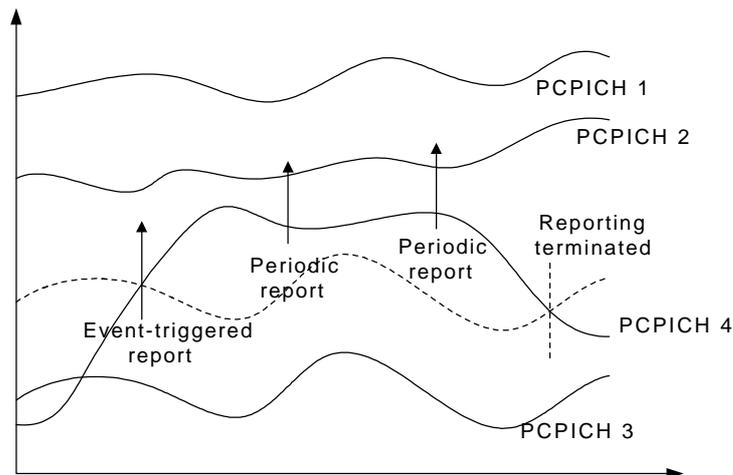


Figure 71: Periodic reporting triggered by event 1C

When a cell enters the replacement range and triggers event 1C, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in the replacement of the weakest active cell. If the UTRAN is unable to replace the cell due to for example capacity shortage, it is beneficial to receive continuous reports in this case as well.

The UE shall revert to periodical measurement reporting if the UTRAN does not update the active set after the transmission of the measurement report. This is illustrated in Figure 71. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals. The reports shall include reporting information of the cells in the current active set and of the monitored cell(s) in the replacement range.

Event-triggered periodic measurement reporting shall be terminated if:

- there are no longer any monitored cell(s) within the replacement range; or
- the UTRAN has removed cells from the active set so that there are no longer the minimum amount of active cells for event 1C to be triggered (as defined by the **replacement activation threshold** parameter); or
- the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the **amount of reporting** parameter).

The reporting period is assigned by the UTRAN (with the **Reporting interval** parameter). If the reporting interval is set to zero, event-triggered measurement reporting shall not be applied.

14.1.5 Mechanisms available for modifying intra-frequency measurement reporting behaviour

14.1.5.1 Hysteresis

To limit the amount of event-triggered reports, a hysteresis parameter may be connected with each reporting event given above. The value of the hysteresis is given to the UE in the Reporting criteria field of the Measurement Control message.

In the example in Figure 72, the hysteresis ensures that the event 1D (FDD) or IG(TDD) (primary CPICH(FDD)/CCPCH(TDD) 2 becomes the best cell) is not reported until the difference is equal to the hysteresis value. The fact that primary CPICH(FDD)/CCPCH(TDD) 1 becomes best afterwards is not reported at all in the example since the primary CPICH(FDD)/CCPCH(TDD) 1 does not become sufficiently better than the primary CPICH(FDD)/CCPCH(TDD) 2.

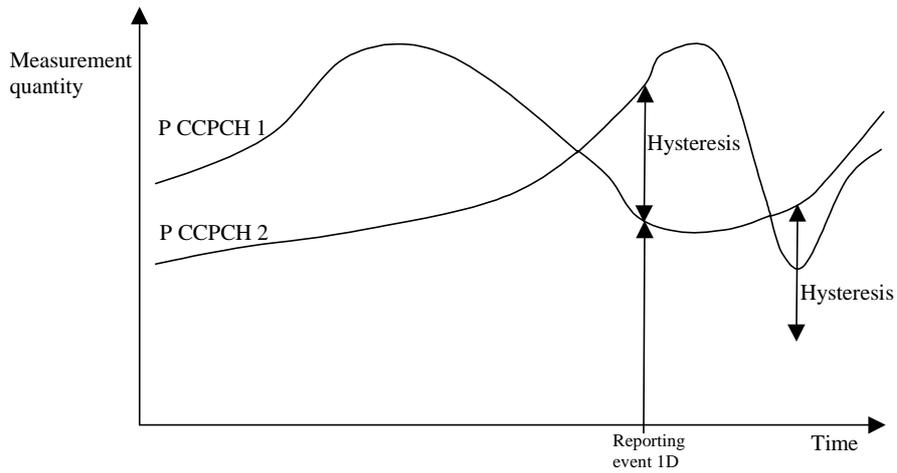


Figure 72: Hysteresis limits the amount of measurement reports

14.1.5.2 Time-to-trigger

To limit the measurement signalling load, a time-to-trigger parameter could be connected with each reporting event given above. The value of the time-to-trigger is given to the UE in the Reporting criteria field of the Measurement Control message.

The effect of the time-to-trigger is that the report is triggered only after the conditions for the event have existed for the specified time-to-trigger. In the following FDD example in Figure 73, the use of time-to-trigger means that the event (primary CPICH 3 enters the reporting range) is not reported until it has been within the range for the time given by the time-to-trigger parameter.

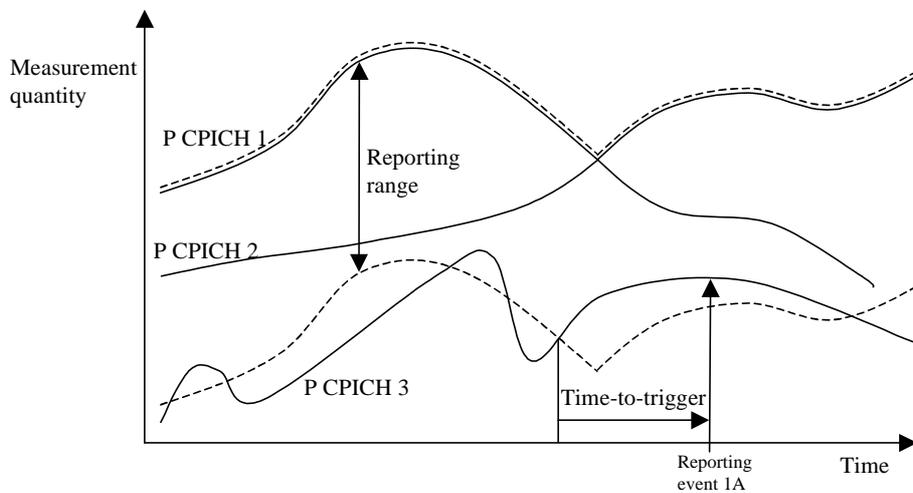


Figure 73: Time-to-trigger limits the amount of measurement reports

In the following TDD example in Figure 74, the use of time-to-trigger means that the event (Timeslot ISCP upon certain threshold) is not reported until it has been upon the threshold for the time given by the time-to trigger parameter.

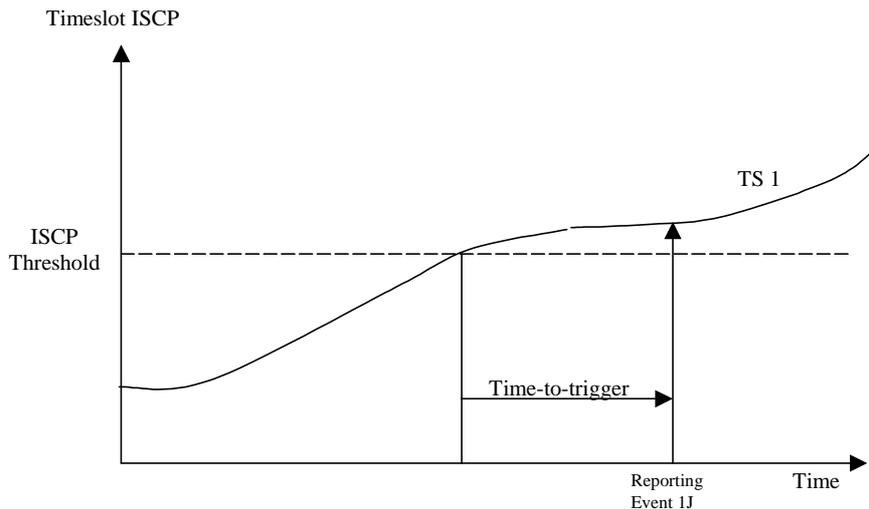


Figure 74: Time-to-trigger limits the amount of measurement reports

NOTE: The time-to-trigger could be combined with hysteresis, i.e. a hysteresis value is added to the measurement quantity before evaluating if the time-to-trigger timer should be started.

14.1.5.3 Cell individual offsets

For each cell that is monitored, an offset can be assigned with inband signalling. The offset can be either positive or negative. The offset is added to the measurement quantity before the UE evaluates if an event has occurred. The UE receives the cell individual offsets for each primary CPICH(FDD)/CCPCH(TDD) in the measurement object field of the MEASUREMENT CONTROL message.

For the FDD example, in Figure 75, since an offset is added to primary CPICH 3, it is the dotted curve that is used to evaluate if an event occurs. Hence, this means that measurement reports from UE to UTRAN are triggered when primary CPICH plus the corresponding offset, i.e. the dotted curve, leaves and enters the reporting range and when it gets better than primary CPICH 1 (if these events have been ordered by UTRAN). This offset mechanism provides the network with an efficient tool to change the reporting of an individual primary CPICH.

By applying a positive offset, as in Figure 75, the UE will send measurement reports as if the primary CPICH is offset x dB better than what it really is. This could be useful if the operator knows that a specific cell is interesting to monitor more carefully, even though it is not so good for the moment. In the example in Figure 75, the operator might know by experience that in this area primary CPICH 3 can become good very quickly (e.g. due to street corners) and therefore that it is worth reporting more intensively. Depending on the implemented handover evaluation algorithm, this may result in the cell with primary CPICH 3 being included in the active set earlier than would have been the case without the positive offset.

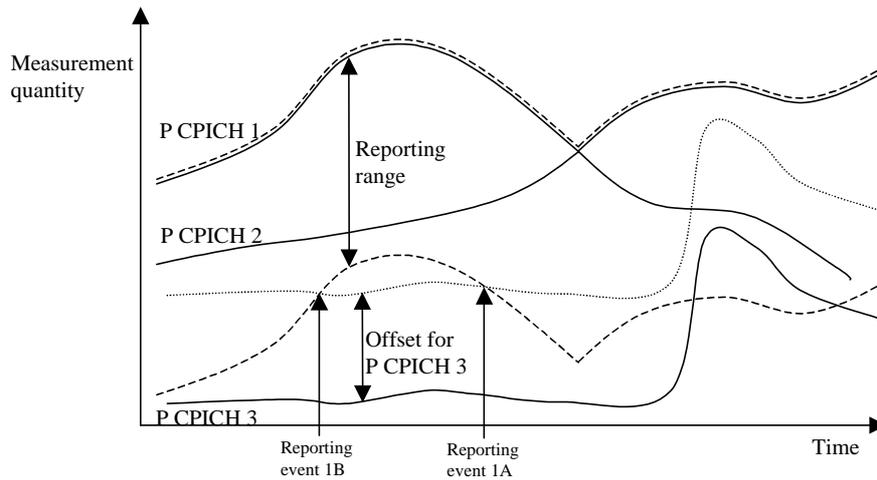


Figure 75: A positive offset is applied to primary CPICH 3 before event evaluation in the UE

For the TDD example, in Figure 76, an offset is added to primary CCPCH2, it is the dotted curve that is used to evaluate if the primary CCPCH2 becomes better than primary CCPCH1 (ordered by the UTRAN).

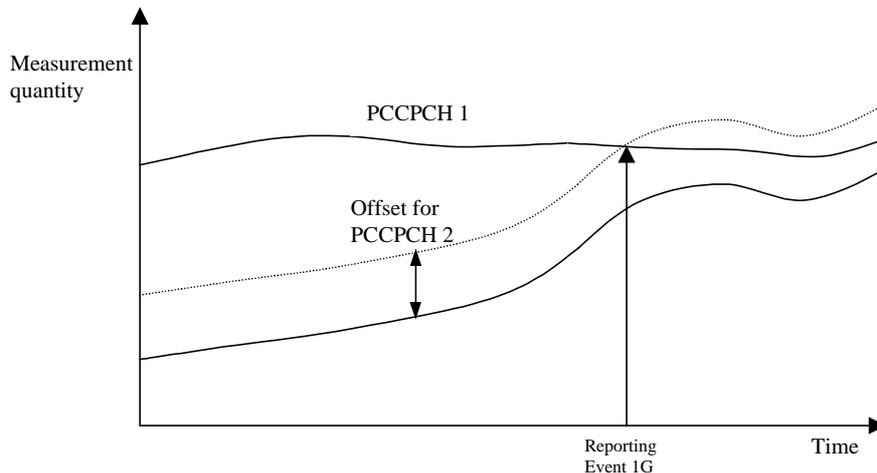


Figure 76: A positive offset is applied to primary CCPCH 2

Correspondingly, the operator can choose to apply a negative offset to a primary CCPCH. Then the reporting on that primary CCPCH is limited and the corresponding cell may be, at least temporarily excluded from the active set or as a target cell for handover.

The cell individual offset can be seen as a tool to move the cell border. It is important to note that the offset is added before triggering events, i.e. the offset is added by the UE before evaluating if a measurement report should be sent as opposed to offsets that are applied in the network and used for the actual handover evaluation.

14.1.5.4 Forbid a Primary CPICH to affect the reporting range (FDD only)

The reporting range affects the reporting events 1A and 1B presented above. The reporting range is defined as a function of all the Primary CPICHs in the active set (see 14.1.2.1 and 14.1.2.2). If the parameter W is set to 0, the reporting range is defined relative to the best Primary CPICH. However, there could be cases where it is good to forbid a specific Primary CPICH to affect the reporting range. For example in Figure 77 the network has requested the UE to not let Primary CPICH 3 affect the reporting range. This mechanism could be effective if the operator knows by experience that the quality of Primary CPICH 3 is very unstable in a specific area and therefore should not affect the reporting of the other Primary CPICHs.

The UE shall ignore that a Primary CPICH is forbidden to affect the reporting range if all of the following conditions are fulfilled:

- the Primary CPICH is included in active set; and
- all cells in active set are defined as Primary CPICHs forbidden to affect the reporting range.

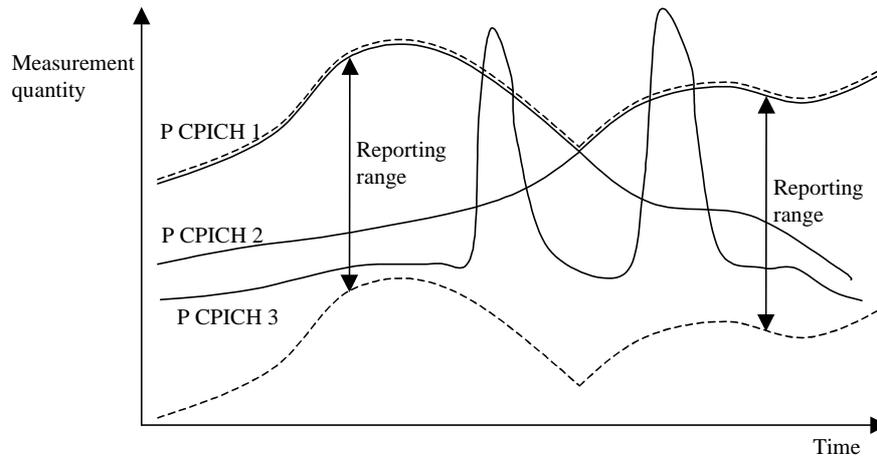


Figure 77: Primary CPICH 3 is forbidden to affect the reporting range

14.1.6 Report quantities

In the event-triggered measurement reports, mandatory information connected to the events is always reported. For instance, at the event "a primary CPICH(FDD)/CCPCH(TDD) enters the reporting range" the corresponding report identifies the primary CPICH(FDD)/CCPCH(TDD) that entered the range.

However, besides this mandatory information, UTRAN should be able to optionally require additional measurement information in the report to support the radio network functions in UTRAN. Furthermore, it will allow the UTRAN to use the UE as a general tool for radio network optimisation if necessary.

Examples of report quantities that may be appended to the measurement reports are:

- Downlink transport channel block error rate.
- Downlink E_c/I_0 on primary CPICH(FDD)/CCPCH(TDD) (e.g. used for initial DL power setting on new radio links).
- Time difference between the received primary CPICH(FDD)/CCPCH(TDD) frame-timing from the target cell and the earliest received existing DPCH path. [Note: This measurement is identified in 25.211 [2] (denoted T_m in clause 7)].
- UE transmit power.
- UE position.

14.2 Inter-frequency measurements

The frequency quality estimate used in events 2a, 2b 2c, 2d and 2e is defined as:

$$Q_{carrier\ j} = 10 \cdot \text{Log}M_{carrier\ j} = W_j \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_{A\ j}} M_{i\ j} \right) + (1 - W_j) \cdot 10 \cdot \text{Log}M_{Best\ j} - H,$$

The variables in the formula are defined as follows:

$Q_{frequency j}$ is the estimated quality of the active set on frequency j

$M_{frequency j}$ is the estimated quality of the active set on frequency j.

M_{ij} is a measurement result of cell i in the active set on frequency j.

N_{Aj} is the number of cells in the active set on frequency j.

$M_{Best j}$ is the measurement result of the strongest cell in the active set on frequency j

W_j is a parameter sent from UTRAN to UE and used for frequency j

H is the hysteresis parameter

14.2.1 Inter-frequency reporting events

Within the measurement reporting criteria field in the MEASUREMENT CONTROL message UTRAN notifies the UE which events should trigger the UE to send a MEASUREMENT REPORT message. Examples of inter-frequency reporting events that would be useful for inter-frequency handover evaluation are given below. Note that normally the UEs do not need to report all these events. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All events are evaluated with respect to one of the measurement quantities given in subclause 14.1.1. The measurement objects are the monitored primary common pilot channels (CPICH) in FDD mode and the monitored primary common control channels (PCCPCH) in TDD mode. A "non-used frequency" is a frequency that the UE have been ordered to measure upon but are not used of the active set. A "used frequency" is a frequency that the UE have been ordered to measure upon and is also currently used for the connection.

14.2.1.1 Event 2a: Change of best frequency.

If any of the non- used frequencies quality estimate becomes better than the currently used frequency quality estimate, and event 2a has been ordered by UTRAN then this event shall trigger a report to be sent from the UE when the hysteresis and time to trigger conditions is fulfilled. The corresponding report contains (at least) the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency that triggered the event.

14.2.1.2 Event 2b: The estimated quality of the currently used frequency is below a certain threshold **and** the estimated quality of a non-used frequency is above a certain threshold.

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of the currently used frequency is below the value of the IE "Threshold used frequency" and the estimated quality of a non-used frequency is above the value of the IE "Threshold non-used frequency" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains at least the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency that triggered the event.

14.2.1.3 Event 2c: The estimated quality of a non-used frequency is above a certain threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of a non-used frequency is above the value of the IE "Threshold non-used frequency" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains at least the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency.

14.2.1.4 Event 2d: The estimated quality of the currently used frequency is below a certain threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of the currently used frequency is below the value of the IE "Threshold used frequency" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains at least the best primary CPICH (FDD) or primary CCPCH (TDD) on the used frequency.

14.2.1.5 Event 2e: The estimated quality of a non-used frequency is below a certain threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of a non-used frequency is below the value of the IE "Threshold non-used frequency" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains at least the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency.

14.2.1.6 Event 2 f: The estimated quality of the currently used frequency is above a certain threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of the currently used frequency is above the value of the IE " Threshold used frequency" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains at least the best primary CPICH (FDD) or primary CCPCH (TDD) on the used frequency.

14.3 Inter-RAT measurements

The estimated quality of the active set in UTRAN in events 3a is defined as:

$$Q_{UTRAN} = 10 \cdot \text{Log} M_{UTRAN} = W \cdot 10 \cdot \text{Log} \left(\sum_{i=1}^{N_A} M_i \right) + (1 - W) \cdot 10 \cdot \text{Log} M_{Best},$$

The variables in the formula are defined as follows:

Q_{UTRAN} is the estimated quality of the active set on the currently used UTRAN frequency

M_{UTRAN} is the estimated quality of the active set on currently used UTRAN frequency expressed in another unit.

M_i is a measurement result of cell i in the active set.

N_A is the number of cells in the active set.

M_{Best} is the measurement result of the strongest cell in the active set.

W is a parameter sent from UTRAN to UE.

14.3.1 Inter-RAT reporting events

Within the measurement reporting criteria field in the MEASUREMENT CONTROL message the UTRAN notifies the UE which events should trigger the UE to send a MEASUREMENT REPORT message. Examples of inter-RAT reporting events that would be useful for inter-RAT handover evaluation are given below. Note that normally the UEs do not need to report all these events. The listed events are the toolbox from which the UTRAN can choose the reporting events that are needed for the implemented handover evaluation function, or other radio network functions.

All events are measured with respect to one of the measurement quantities given in subclause 14.3 The measurement objects are the monitored primary common pilot channels (CPICH) in FDD mode and the monitored primary common control channels (PCCPCH) in TDD mode for UTRAN and objects specific for other systems. A "used UTRAN frequency" is a frequency that the UE have been ordered to measure upon and is also currently used for the connection to UTRAN. "Other system" is e.g. GSM.

14.3.1.1 Event 3a: The estimated quality of the currently used UTRAN frequency is below a certain threshold **and** the estimated quality of the other system is above a certain threshold.

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of the currently used frequency is below the value of the IE " Threshold own system" and the hysteresis and time to trigger conditions are fulfilled and the estimated quality of the other system is above the value of the IE " Threshold other system" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report

contains information specific for the other system and the best primary CPICH (FDD) or primary CCPCH (TDD) on the used frequency.

14.3.1.2 Event 3b: The estimated quality of other system is below a certain threshold

When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the estimated quality of the other system is below the value of the IE "Threshold other system" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains information specific for the other system and the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency.

14.3.1.3 Event 3c: The estimated quality of other system is above a certain threshold

When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the estimated quality of the other system is above the value of the IE "Threshold other system" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains information specific for the other system and the best primary CPICH (FDD) or primary CCPCH (TDD) on the non-used frequency.

14.3.1.4 Event 3d: Change of best cell in other system

If any of the quality estimates for the cells in the other system becomes better than the quality estimate for the currently best cell in the other system, and event 3d has been ordered by UTRAN then this event shall trigger a report to be sent from the UE when the hysteresis and time to trigger conditions is fulfilled. The corresponding report contains (at least) information the best cell in the other system.

14.3.2 GSM measurements in compressed mode

14.3.2.1 GSM RSSI measurements

The UE shall perform GSM RSSI measurements in the gaps of compressed mode pattern sequence specified for GSM RSSI measurement purpose. The UE cannot be required to measure "Observed time difference to GSM" in gaps specified for this purpose.

14.3.2.2 Initial BSIC identification

The UE shall perform Initial BSIC identification in compressed mode pattern sequence specified for Initial BSIC identification measurement purpose.

The UE shall be able to measure the "Observed time difference to GSM cell" during a compressed mode pattern sequence configured for this purpose.

14.3.2.3 BSIC re-confirmation

The UE shall perform BSIC re-confirmation in compressed mode pattern sequence specified for BSIC re-confirmation measurement purpose.

The UE shall be able to measure the "Observed time difference to GSM cell" during a compressed mode pattern sequence configured for this purpose.

14.4 Traffic Volume Measurements

14.4.1 Traffic Volume Measurement Quantity

For traffic volume measurements in the UE only one quantity is measured. This quantity is RLC buffer payload in number of bytes. In order to support a large variation of bit rates and RLC buffer size capabilities, a non-linear scale should be used. Since, the expected traffic includes both new and retransmitted RLC payload units all these should be included in the payload measure. It should also be noted that traffic volume measurements are only applicable for acknowledged and unacknowledged mode.

According to what is stated in the Measurement Control message, the UE should support measuring of buffer payload for a specific RB, RBs multiplexed onto the same Transport channel and the total UE buffer payload (the same as one transport channel for a UE that uses RACH).

14.4.2 Traffic Volume reporting events

Traffic volume can be reported in two different ways, periodical and event triggered. For periodical reporting the UE simply measures the number of bytes for the transport channel (i.e. the RLC buffers of the RBs multiplexed onto that transport channel) stated in the measurement control message and reports the traffic volume at the given time instants. Event triggered reporting is performed when a threshold is exceeded.

The reporting quantities that should be included in the report are stated in the measurement control message. This could for example be which RBs or RLC buffers to include when sending the payload to the network.

14.4.2.1 Reporting event 4 A: RLC buffer payload exceeds an absolute threshold

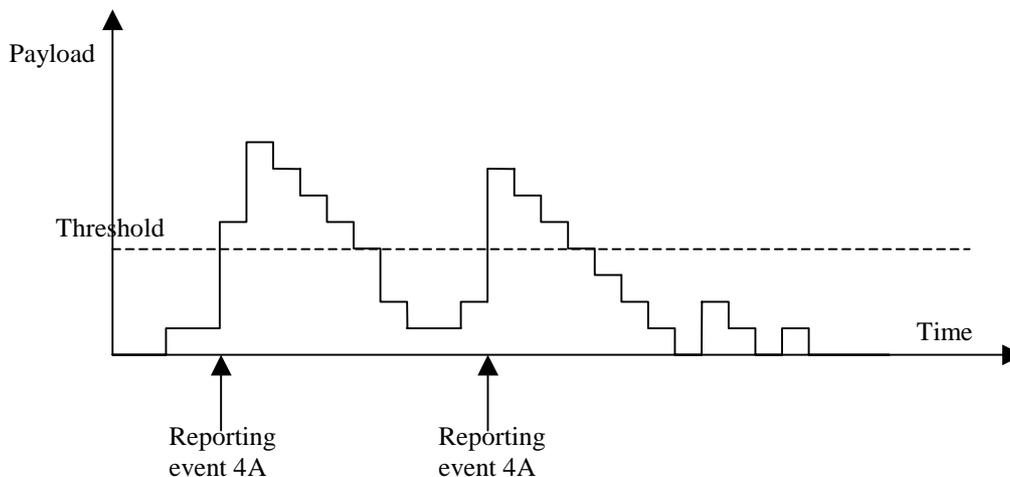


Figure 78: Event triggered report when RLC buffer payload exceeds a certain threshold

If the monitored payload exceeds an absolute threshold, this is an event that could trigger a report. The corresponding report contains at least which transport channel triggered the report.

14.4.2.2 Reporting event 4 B: RLC buffer payload becomes smaller than an absolute threshold

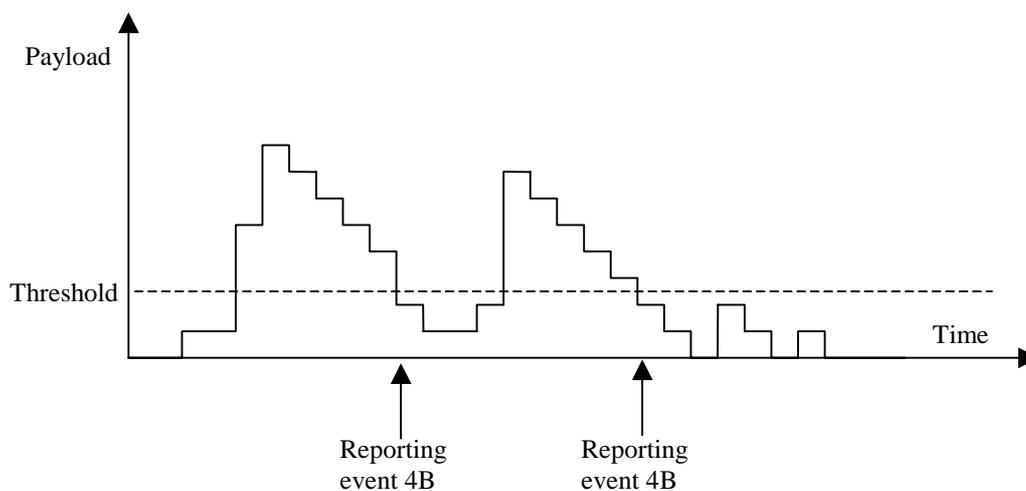


Figure 79: Event triggered report when RLC buffer payload becomes smaller than certain threshold

If the monitored payload becomes smaller than an absolute threshold, this is an event that could trigger a report. The corresponding report contains at least which transport channel triggered the report.

14.4.3 Traffic volume reporting mechanisms

Traffic volume measurement triggering could be associated with both a *time-to-trigger* and a *pending time after trigger*. The time-to-trigger is used to get time domain hysteresis, i.e. the condition must be fulfilled during the time-to-trigger time before a report is sent. Pending time after trigger is used to limit consecutive reports when one traffic volume measurement report already has been sent. This is described in detail below.

14.4.3.1 Pending time after trigger

This timer is started in the UE when a measurement report has been triggered. The UE is then forbidden to send any new measurement reports with the same measurement ID during this time period even when the triggering condition is fulfilled again. Instead the UE waits until the timer has suspended. If the payload is still above the threshold when the timer has expired the UE sends a new measurement report. Otherwise it waits for a new triggering.

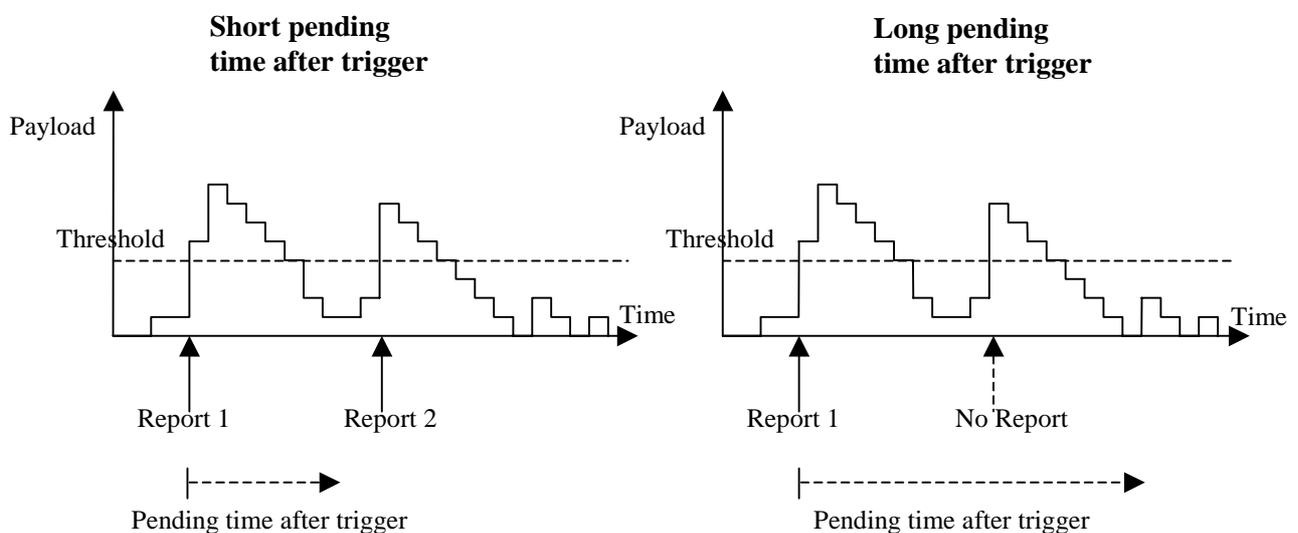


Figure 80: Pending time after trigger limits the amount of consecutive measurement reports

Figure 80 shows that by increasing the pending time after trigger a triggered second event does not result in a measurement report.

14.4.4 Interruption of user data transmission

A UE in CELL_FACH substate may be instructed by the UTRAN to cease transmission of user data on the RACH after a measurement report has been triggered. Before resuming transmission of user data,

- the UE shall receive from the UTRAN either a message allocating a dedicated physical channel, and make a transition to CELL_DCH state; or
- the UE shall receive an individually assigned measurement control message indicating that interruption of user data transmission is not be applied.

The transmission of signalling messages on the signalling bearer shall not be interrupted.

14.5 Quality Measurements

14.5.1 Quality reporting measurement quantities

For quality measurements, the following measurement quantities are used:

1. Downlink transport channel BLER
2. Timeslot SIR (TDD only)

14.5.2 Quality reporting events

14.5.2.1 Reporting event 5A: A predefined number of bad CRCs is exceeded

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the amount of bad CRCs during a predefined sliding window exceeds a predefined number.

The following three parameters are used in the scheme:

- **Total CRC** = the length of the sliding window over which the number of bad CRCs are counted.
- **Bad CRC** = the number of bad CRC that is required within the latest "Total CRC" received CRCs for the event to be triggered.
- **Pending after trigger** = a new event can not be triggered until "Pending after trigger" CRCs have been received,

When a DCH is established, the UE shall begin to count the number of bad CRCs within the last "Total CRC" received CRCs. No event can be triggered until at least "Total CRC" CRCs have been received. For each new received CRC, the UE shall compare the number of bad CRCs within the latest "Total CRC" received CRCs with the parameter "Bad CRC". An event shall be triggered if the number of bad CRCs is equal or larger than "Bad CRC".

At the time when the event is triggered a pending time after trigger timer is started with the length of "Pending after trigger" CRCs. A new event can not be triggered until "Pending after trigger" CRCs have been received. When "Pending after trigger" CRCs have been received the event evaluation start again and a new event can be triggered.

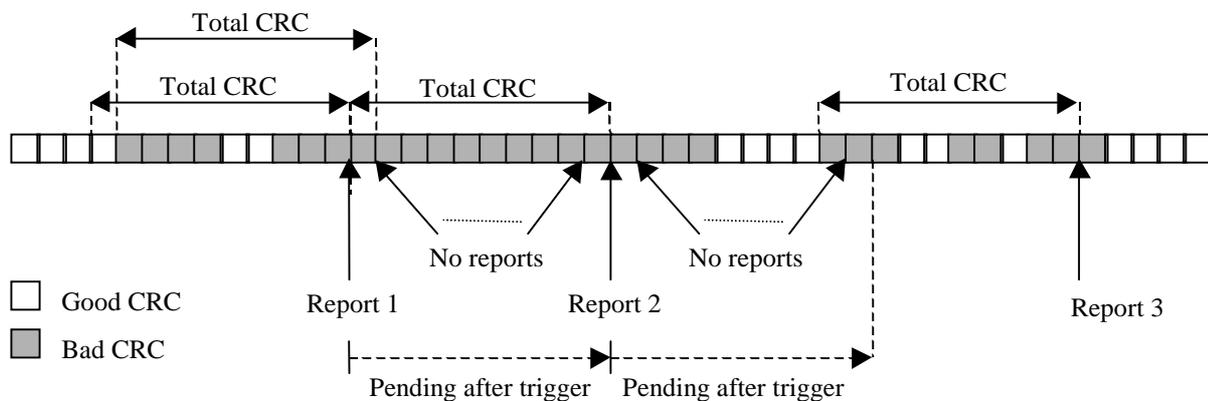


Figure 81: Event triggered CRC error reporting

14.6 UE internal measurements

14.6.1 UE internal measurement quantities

For UE internal measurements the following measurement quantities exist:

1. UE transmission (Tx) power, for TDD measured on a timeslot basis.
2. UE received signal strength power (RSSI).
3. UE Rx-Tx time difference.

14.6.2 UE internal measurement reporting events

In the Measurement reporting criteria field in the Measurement Control messages, the UTRAN notifies the UE of which events should trigger a measurement report. UE internal measurement reporting events that can trigger a report are given below. The reporting events are marked with vertical arrows in the figures below. All events can be combined with time-to-trigger. In that case, the measurement report is only sent if the condition for the event has been fulfilled for the time given by the time-to-trigger parameter.

NOTE: The reporting events are numbered 6A, 6B, 6C,.. where 6 denotes that the event belongs to the type UE internal measurements.

14.6.2.1 Reporting event 6A: The UE Tx power becomes larger than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE transmission power (for TDD within a single TS) becomes larger than a predefined threshold. The corresponding report identifies the threshold that was exceeded.

14.6.2.2 Reporting event 6B: The UE Tx power becomes less than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE transmission power (for TDD within a single TS) becomes less than a predefined threshold. The corresponding report identifies the threshold that the UE Tx power went below.

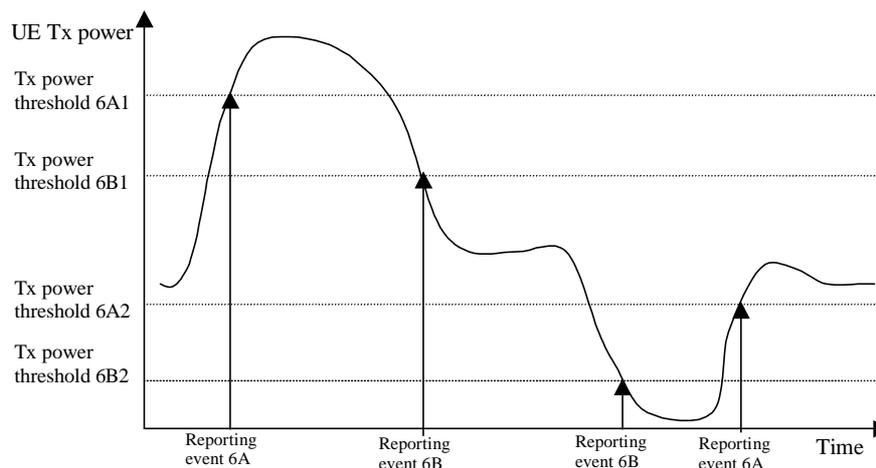


Figure 82: Event-triggered measurement reports when the UE Tx power becomes larger or less than absolute thresholds

14.6.2.3 Reporting event 6C: The UE Tx power reaches its minimum value

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE Tx power reaches its minimum value, for TDD its minimum value on a single timeslot.

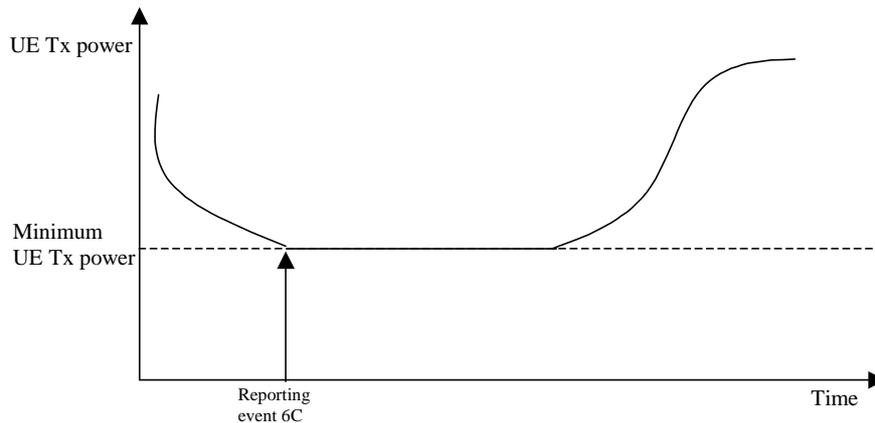


Figure 83: Event-triggered measurement report when the UE Tx power reaches its minimum value

14.6.2.4 Reporting event 6D: The UE Tx power reaches its maximum value

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE Tx power reaches its maximum value, for TDD its maximum value on a single timeslot.

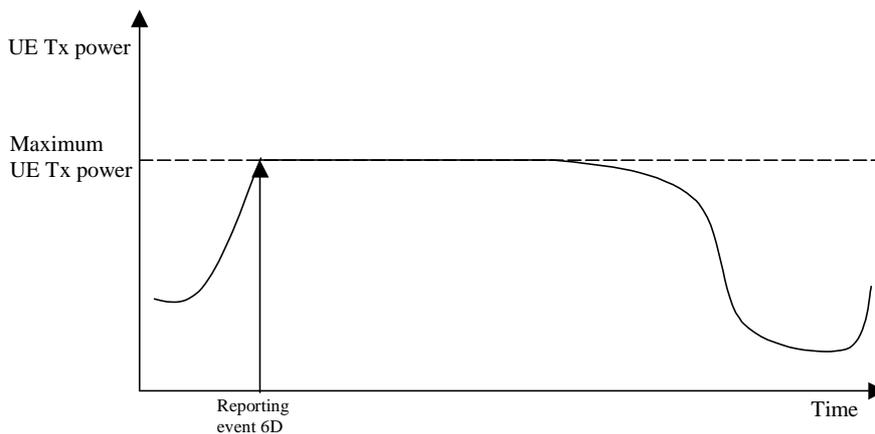


Figure 84: Event-triggered report when the UE Tx power reaches its maximum value

14.6.2.5 Reporting event 6E: The UE RSSI reaches the UE's dynamic receiver range

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE RSSI reaches the UE's dynamic receiver range.

14.6.2.6 Reporting event 6F: The UE Rx-Tx time difference for a RL included in the active set becomes larger than an absolute threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message, the UE shall send a MEASUREMENT REPORT message when the UE Rx-Tx time difference becomes larger than the threshold defined by the IE "UE Rx-Tx time difference threshold".

14.6.2.7 Reporting event 6G: The UE Rx-Tx time difference for a RL included in the active set becomes less than an absolute threshold

When this event is ordered by UTRAN in a MEASUREMENT CONTROL message, the UE shall send a MEASUREMENT REPORT when the UE Rx-Tx time difference becomes less than the threshold defined by the IE "UE Rx-Tx time difference threshold".

14.7 UP measurements

14.7.1 UP measurement quantity

The quantity to measure for UP is dependant on the location method and the method type requested in the IE "UP reporting quantity". In case the OTDOA method is requested, the UE shall measure the following quantities disregarding of the method type used:

- SFN-SFN observed time difference

If the Assisted GPS method is requested, the UE has to request its internal GPS receiver to make measurements. The measurements to be made by the GPS receiver are not within the scope of this section.

If it is indicated in the IE "UP reporting quantity" to report the GPS timing of the cell, the UE shall measure the following quantity:

- UE GPS timing of cell frames for UP

14.7.2 UP reporting quantity

The quantity to report is also dependent on the location method and method type requested in the IE "UP reporting quantity". If the method type is set to "UE based", the IE "UP Position" has to be included in the report.

In case the method type is set to "UE assisted", the following IEs have to be included in the report:

- IE "UP OTDOA measurement" in case the OTDOA location method is requested.
- IE "UP GPS measurement" in case the GPS location method is requested.

14.7.3 UP reporting events

In the UP reporting criteria field in the Measurement Control messages, the UTRAN notifies the UE of which events should trigger a measurement report. UP reporting events that can trigger a report are given below. The content of the measurement report is dependant on the location method and method type requested in the IE "UP reporting quantity" of the Measurement Control message and is described in detail in [18].

14.7.3.1 Reporting Event 7a: The UE position changes more than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE changes its position compared to the last reported position more than a predefined threshold. This event is used for UE-based methods only.

14.7.3.2 Reporting Event 7b: SFN-SFN measurement changes more than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the SFN-SFN time difference measurement of any measured cell changes more than a predefined threshold. This event is primarily used for UE-assisted methods, but can be used also for UE-based methods.

14.7.3.3 Reporting Event 7c: GPS time and SFN time have drifted apart more than an absolute threshold

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the GPS Time Of Week and the SFN timer have drifted apart more than a predefined threshold. This event is primarily used for UE-assisted methods, but can be used also for UE-based methods.

14.8 Dynamic Resource Allocation Control of Uplink DCH (FDD only)

The network uses this procedure to dynamically control the allocation of resources on an uplink DCH.

This procedure shall be activated in the UE when it has been allocated an uplink DCH with DRAC static information elements. Such uplink DCHs can be established through RB establishment procedure, RB reconfiguration procedure, RB release procedure or Transport Channel Reconfiguration procedure by setting the DRAC static information elements to indicate that the DCH is controlled by the DRAC procedure.

The UE shall periodically listen to the SIB 10 of each cell in its Active Set. The scheduling information of SIB10 and the SCCPCH info on which the SIB10 is transmitted are provided to the UE when the DCH is set up and when a cell is added in its active set. In case several SIB10 messages from different cells are scheduled at the same time, the UE shall only listen to the SIB10 broadcast in the cell of its Active Set having the best CPICH measurements.

Upon reception of a SYSTEM INFORMATION message comprising a SIB10, the UE shall:

1. Determine and store the most stringent DRAC parameters from the last received values from each cell of its active set (i.e. select the lowest product $p_{tr} \cdot \text{maximum bit rate}$ corresponding to its DRAC class identity)
2. Determine the allowed subset of TFCS according to the selected maximum bit rate value, and store it for later usage.
The allowed subset of TFCS are the ones of the TFCS for which the sum of bit rates of the DCH controlled by DRAC is lower than Maximum Bit Rate IE, i.e.

$$\sum_{\text{DCH}_i \text{ controlled by DRAC}} TBSsize_i / TTI_i < \text{MaximumBitRate}$$

DCH_i controlled by DRAC

After the first SIB10 has been received, the UE shall start the following process:

1. At the start of the next TTI, the UE shall randomly select $p \in [0,1]$.
2. If $p < p_{tr}$, the UE shall transmit on the DCH controlled by DRAC during T_{validity} frames using the last stored allowed subset of TFCS and comes back to step 1, otherwise the UE shall stop transmission on these DCH during T_{retry} frames and then comes back to step 1.

Transmission time validity (T_{validity}) and Time duration before retry (T_{retry}) are indicated to the UE at the establishment of a DCH controlled by this procedure and may be changed through RB or transport channel reconfiguration. The UE shall always use the latest received DRAC static parameters.

A UE which supports the simultaneous reception of one SCCPCH and one DPCH shall support the DRAC procedure.

14.9 Downlink power control

14.9.1 Generalities

This function is implemented in the UE in order to set the SIR target value on each CCTrCH used for the downlink power control. This SIR value shall be adjusted according to an autonomous function in the UE in order to achieve the same measured quality as the quality target set by UTRAN. The quality target is set as the transport channel BLER value for each transport channel as signalled by UTRAN. For CPCH the quality target is set as the BER of the DL DPCCCH as signalled by UTRAN.

When transport channel BLER is used the UE shall run a quality target control loop such that the quality requirement is met for each transport channel, which has been assigned a BLER target.

When DL DPCCCH BER is used the UE shall run a quality target control loop such that the quality requirement is met for each CPCH transport channel, which has been assigned a DL DPCCCH BER target.

The UE shall set the SIR target when the physical channel has been set up or reconfigured. It shall not increase the SIR target value before the power control has converged on the current value. The UE may estimate whether the power control has converged on the current value, by comparing the averaged measured SIR to the SIR target value.

14.9.2 Downlink power control in compressed mode

In compressed mode, the target SIR needs to be changed in several frames compared to normal mode. For this purpose, four values ΔSIR_1 , $\Delta\text{SIR}_{\text{after1}}$, ΔSIR_2 and $\Delta\text{SIR}_{\text{after2}}$ are signalled by the UTRAN to the UE (see section 10.2.9).

For each frame, the target SIR offset during compressed mode, compared to normal mode is:

$$\Delta\text{SIR} = \max(\Delta\text{SIR}_{1_compression}, \dots, \Delta\text{SIR}_{n_compression}) + \Delta\text{SIR}_{1_coding} + \Delta\text{SIR}_{2_coding}$$

where n is the number of TTI lengths for all TrChs of the CCTrCh, F_i is the length in number of frames of the i -th TTI and where $\Delta\text{SIR}_{coding}$ fulfils:

- $\Delta\text{SIR}_{1_coding} = \Delta\text{SIR}_1$ if the start of the first transmission gap in the transmission gap pattern is within the current frame.
- $\Delta\text{SIR}_{1_coding} = \Delta\text{SIR}_{\text{after1}}$ if the current frame just follows a frame containing the start of the first transmission gap in the transmission gap pattern.
- $\Delta\text{SIR}_{2_coding} = \Delta\text{SIR}_2$ if the start of the second transmission gap in the transmission gap pattern is within the current frame.
- $\Delta\text{SIR}_{2_coding} = \Delta\text{SIR}_{\text{after2}}$ if the current frame just follows a frame containing the start of the second transmission gap in the transmission gap pattern.
- $\Delta\text{SIR}_{1_coding} = 0$ and $\Delta\text{SIR}_{2_coding} = 0$ otherwise.

and $\Delta\text{SIR}_{i_compression}$ is defined by :

- $\Delta\text{SIR}_{i_compression} = 3$ dB for downlink frames compressed by reducing the spreading factor by 2.
- $\Delta\text{SIR}_{i_compression} = 10 \log(15 \cdot F_i / (15 \cdot F_i - \text{TGL}_i))$ if there is a transmission gap created by puncturing method within the current TTI of length F_i frames, where TGL_i is the gap length in number of slots (either from one gap or a sum of gaps) in the current TTI of length F_i frames.
- $\Delta\text{SIR}_{i_compression} = 0$ dB in all other cases.

Several compressed mode patterns applying to the same frames should be avoided as much as possible.

In particular; several simultaneous patterns by puncturing applying to the same frames shall be considered as a protocol error by the UE. The handling of this error is described in the procedure descriptions in clause 8

In case several compressed mode patterns are used simultaneously, a ΔSIR offset is computed for each compressed mode pattern and the sum of all ΔSIR offsets is applied to the frame.

14.10 Calculated Transport Format Combination

The Calculated Transport Format Combination (CTFC) is a tool for efficient signalling of transport format combinations.

Let I be the number of transport channels that are included in the transport format combination. Each transport channel TrCH_i , $i = 1, 2, \dots, I$, has L_i transport formats, i.e. the transport format indicator TFI_i can take L_i values,

$$\text{TFI}_i \in \{0, 1, 2, \dots, L_i - 1\}.$$

$$\text{Define } P_i = \prod_{j=0}^{i-1} L_j, \text{ where } i = 1, 2, \dots, I, \text{ and } L_0 = 1.$$

Let $\text{TFC}(\text{TFI}_1, \text{TFI}_2, \dots, \text{TFI}_I)$ be the transport format combination for which TrCH_1 has transport format TFI_1 , TrCH_2 has transport format TFI_2 , etc. The corresponding $\text{CTFC}(\text{TFI}_1, \text{TFI}_2, \dots, \text{TFI}_I)$ is then computed as:

$$CTFC(TFI_1, TFI_2, \dots, TFI_l) = \sum_{i=1}^l TFI_i \cdot P_i.$$

For downlink common CH, "TrCHi" is numbered with ascending integer numbers starting from 1 in the order listed in a SYSTEM INFORMATION message.

In all other cases, for each separate TFCI field, "TrCHi" is numbered with ascending integer numbers starting from 1 in the ascending order of transport channel identities of the channels mapped to that TFCI field.

14.11 UE autonomous update of active set on non-used frequency (FDD only)

Within the measurement reporting criteria field in the MEASUREMENT CONTROL message the UTRAN notifies the UE which events should trigger a measurement report. For inter frequency measurements it is possible to specify intra-frequency measurements reporting events for support of maintenance of a active set associated with a non-used frequency, a "virtual active set". A "non-used frequency" is a frequency that the UE has been ordered to measure upon but are not used by the active set. A "used frequency" is a frequency that the UE has been ordered to measure upon and is also currently used for the connection.

The autonomous update is controlled by the IE "UE autonomous update mode" that can be set to the following values.

- On: Do the autonomous updates of the "virtual active set" according to the described rules below and also report the events that trigger the update of the "virtual active set".
- On with no reporting: Do the autonomous updates of the "virtual active set" according to the described rules below.
- Off: Only report the events and do no updates of the "virtual active set" unless ordered to do so by the IE " Inter-frequency set update".

If the IE "UE autonomous update mode" is set to "on" or "on with no reporting" the UE shall evaluate the following intra-frequency events and update the "virtual active set" associated with the frequency measured upon, according to the following rules:

- Event 1a shall make the UE add the primary CPICH that enters the reporting range to the "virtual active set".
- Event 1b shall make the UE remove a primary CPICH that leaves the reporting range from the "virtual active set".
- Event 1c shall make the UE replace a active primary CPICH in the "virtual active set" with a non-active primary CPICH that have become better than the active primary CPICH.

14.12 Provision and reception of RRC information between network nodes

In certain cases, e.g., when performing handover to UTRAN or when performing SRNC relocation, RRC information may need to be transferred between other RATs and UTRAN or between UTRAN nodes within UTRAN. In the following, the details of the RRC information to be transferred are specified per direction.

Like for the Uu interface, the transfer syntax for RRC transferred between UTRAN network nodes and/or between UTRAN and other RATs is derived from their ASN.1 definitions by use of Packed Encoding Rules, unaligned (X.691). It should be noted that the encoder adds final padding to achieve octet alignment. However, this final padding shall not be part of the RRC information transferred between the network nodes, which means that the result is a bit string.

14.12.1 RRC Information to target RNC

RRC Information to target RNC may either be sent from source RNC or from another RAT. In case of handover to UTRAN, this information originates from another RAT, while in case of SRNC relocation the RRC information originates from the source RNC. In case of SRNC information, the RRC information transferred specifies the

configuration of RRC and the lower layers it controls, e.g., including the radio bearer and transport channel configuration. It is used by the target RNC to initialise RRC and the lower layer protocols to facilitate SRNC relocation in a manner transparent to the UE.

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
Non RRC IEs				
CHOICE case	MP			
>Handover to UTRAN				
>>UE radio access capability	OP		UE radio access capability 10.3.3.42	
>>UE system specific capability	OP		UE system specific capability 14.13.2.4	
>>UE security information	OP		UE security information 14.13.2.2	
>>Pre-defined configuration status information	OP		Pre-defined configuration status information 14.13.2.3	
>SRNC relocation				
>>State of RRC	MP		Enumerated (CELL_DCH, CELL_FACH, CELL_PCH, URA_PCH)	
>>State of RRC procedure	MP		Enumerated (await no RRC message, Complete, await RB Setup Complete, await RB Reconfiguration Complete, await RB Release Complete, await Transport CH Reconfiguration Complete, await Physical CH Reconfiguration Complete, await Active Set Update Complete, await Handover Complete, send Cell Update Confirm, send URA Update Confirm, , others)	
Ciphering related information				
>>Ciphering status	MP		Enumerated(Not started, Started)	
>>Calculation time for ciphering related information	CV <i>Ciphering</i>			Time when the ciphering information of the message were calculated, relative to a cell of the target RNC
>>>Cell Identity	MP		Cell Identity 10.3.2.2	Identity of one of the cells under the target RNC and included in the active set of the current call
>>>SFN	MP		Integer(0..4095)	
>>Ciphering info per radio bearer	OP	1 to <maxRB >		
>>>RB identity	MP		RB identity 10.3.4.16	
>>>Downlink START	MP		START 10.3.3.38	
>>>Uplink START	MP		START 10.3.3.38	
Integrity protection related information				
>>Integrity protection status	MP		Enumerated(Not	

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
			started, Started)	
>>Signalling radio bearer specific integrity protection information	CV <i>IP</i>	4 to <maxSR Bsetup>		
RB identity	CV <i>SRB5Plus</i>		RB identity 10.3.4.16	For RB#0-4 the RB identity is not required
>>> Uplink RRC HFN	MP		Bitstring (28)	
>>> Downlink RRC HFN	MP		Bitstring (28)	
>>> Uplink RRC Message sequence number	MP		Integer (0..15)	
>>> Downlink RRC Message sequence number	MP		Integer (0..15)	
>>Implementation specific parameters	OP		Bitstring (1..512)	
RRC IEs				
UE Information elements				
>>U-RNTI	MP		U-RNTI 10.3.3.47	
>>C-RNTI	OP		C-RNTI 10.3.3.8	
>>UE radio access Capability	MP		UE radio access capability 10.3.3.42	
Other Information elements				
>>Inter System message (inter system classmark)	OP		Inter-RAT message 10.8.6	
UTRAN Mobility Information elements				
>>URA Identifier	OP		URA identity 10.3.2.6	
CN Information Elements				
>>CN common GSM-MAP NAS system information	MP		NAS system information (GSM-MAP) 10.3.1.9	
>>CN domain related information	OP	1 to <MaxCN domains >		CN related information to be provided for each CN domain
>>>CN domain identity	MP			
>>>CN domain specific GSM-MAP NAS system info	MP		NAS system information (GSM-MAP) 10.3.1.9	
Measurement Related Information elements				
>>For each ongoing measurement reporting	OP	1 to <MaxNo OfMeas>		
>>>Measurement Identity	MP		Measurement identity 10.3.7.48	
>>>Measurement Command	MP		Measurement command 10.3.7.46	
>>>Measurement Type	CV Setup		Measurement type 10.3.7.50	
>>>Measurement Reporting Mode	OP		Measurement reporting mode 10.3.7.49	
>>>Additional Measurements list	OP		Additional measurements list 10.3.7.1	
>>> CHOICE Measurement	OP			
>>>>Intra-frequency				

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
>>>>>Intra-frequency cell info	OP		Intra-frequency cell info list 10.3.7.33	
>>>>>Intra-frequency measurement quantity	OP		Intra-frequency measurement quantity 10.3.7.38	
>>>>>Intra-frequency reporting quantity	OP		Intra-frequency reporting quantity 10.3.7.41	
>>>>>Reporting cell status	OP		Reporting cell status 10.3.7.61	
>>>>>Measurement validity	OP		Measurement validity 10.3.7.51	
>>>>>CHOICE report criteria	OP			
>>>>>>Intra-frequency measurement reporting criteria			Intra-frequency measurement reporting criteria 10.3.7.39	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting			NULL	
>>>>>Inter-frequency				
>>>>>Inter-frequency cell info	OP		Inter-frequency cell info list 10.3.7.13	
>>>>>Inter-frequency measurement quantity	OP		Inter-frequency measurement quantity 10.3.7.18	
>>>>>Inter-frequency reporting quantity	OP		Inter-frequency reporting quantity 10.3.7.21	
>>>>>Reporting cell status	OP		Reporting cell status 10.3.7.61	
>>>>>Measurement validity	OP		Measurement validity 10.3.7.51	
>>>>>CHOICE report criteria	OP			
>>>>>>Inter-frequency measurement reporting criteria			Inter-frequency measurement reporting criteria 10.3.7.19	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting			NULL	
>>>>>Inter-RAT				
>>>>>Inter-RAT cell info	OP		Inter-RAT cell info list 10.3.7.23	
>>>>>Inter-RAT measurement quantity	OP		Inter-RAT measurement quantity 10.3.7.29	
>>>>>Inter-RAT reporting quantity	OP		Inter-RAT reporting quantity 10.3.7.32	
>>>>>Reporting cell status	OP		Reporting cell status 10.3.7.61	
>>>>>Measurement validity	OP		Measurement validity 10.3.7.51	
>>>>>CHOICE report criteria	OP			
>>>>>>Inter-RAT measurement reporting criteria			Inter-RAT measurement reporting criteria 10.3.7.30	
>>>>>>Periodical reporting			Periodical reporting criteria	

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
			10.3.7.53	
>>>>>No reporting			NULL	
>>>>Traffic Volume				
>>>>>Traffic volume measurement Object	OP		Traffic volume measurement object 10.3.7.70	
>>>>>Traffic volume measurement quantity	OP		Traffic volume measurement quantity 10.3.7.71	
>>>>>Traffic volume reporting quantity	OP		Traffic volume reporting quantity 10.3.7.74	
>>>>> CHOICE report criteria	OP			
>>>>>>Traffic volume measurement reporting criteria			Traffic volume measurement reporting criteria 10.3.7.72	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting			NULL	
>>>>Quality				
>>>>>Quality measurement Object	OP		Quality measurement object	
>>>>> CHOICE report criteria	OP			
>>>>>>Quality measurement reporting criteria			Quality measurement reporting criteria 10.3.7.58	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting			NULL	
>>>>UE internal				
>>>>>UE internal measurement quantity	OP		UE internal measurement quantity 10.3.7.79	
>>>>>UE internal reporting quantity	OP		UE internal reporting quantity 10.3.7.82	
>>>>> CHOICE report criteria	OP			
>>>>>>UE internal measurement reporting criteria			UE internal measurement reporting criteria 10.3.7.80	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting			NULL	
>>>>UP				
>>>>>LCS reporting quantity	OP		LCS reporting quantity 10.3.7.111	
>>>>> CHOICE report criteria	OP			
>>>>>>LCS reporting criteria			LCS reporting criteria 10.3.7.110	
>>>>>>Periodical reporting			Periodical reporting criteria 10.3.7.53	
>>>>>>No reporting				
Radio Bearer Information Elements				
>>Pre-defined configuration status information	OP		Pre-defined configuration status information 14.13.2.3	
>>Signalling RB information list	MP	1 to <maxSR Bsetup>		For each signalling radio bearer

Information Element/Group Name	Need	Multi	Type and reference	Semantics description
>>>Signalling RB information	MP		Signalling RB information to setup 10.3.4.24	
>>RAB information list	OP	1 to <maxRA Bsetup>		Information for each RAB
>>>RAB information	MP		RAB information to setup 10.3.4.10	
Transport Channel Information Elements				
Uplink transport channels				
>>UL Transport channel information common for all transport channels	OP		UL Transport channel information common for all transport channels 10.3.5.24	
>>UL transport channel information list	OP	1 to <MaxTrC H>		
>>>UL transport channel information	MP		Added or reconfigured UL TrCH information 10.3.5.2	
>>CHOICE mode	OP			
>>>FDD				
>>>>CPCH set ID	OP		CPCH set ID 10.3.5.5	
>>>>Transport channel information for DRAC list	OP	1 to <MaxTrC H>		
>>>>>DRAC static information	MP		DRAC static information 10.3.5.7	
>>>TDD				(no data)
Downlink transport channels				
>>DL Transport channel information common for all transport channels	OP		DL Transport channel information common for all transport channels 10.3.5.6	
>>DL transport channel information list	OP	1 to <MaxTrC H>		
>>>DL transport channel information	MP		Added or reconfigured DL TrCH information 10.3.5.1	
>>Measurement report	OP		MEASUREMENT REPORT 10.2.17	
>spare				(no data) Criticality: reject

Multi Bound	Explanation
MaxNoOfMeas	Maximum number of active measurements, upper limit 16

Condition	Explanation
<i>Setup</i>	The IE is mandatory when the IE Measurement command has the value "Setup", otherwise the IE is not needed.
<i>Ciphering</i>	The IE is mandatory when the IE Ciphering Status has the value "started" and the ciphering counters need not be reinitialised, otherwise the IE is not needed.
<i>IP</i>	The IE is mandatory when the IE Integrity protection status has the value "started" and the ciphering counters need not be reinitialised, otherwise the IE is not needed.
<i>SRB5Plus</i>	The IE is mandatory when more than 5 signalling radio bearers are included
<i>PDCP</i>	The IE is mandatory when the PDCP Info IE is present, otherwise the IE is not needed.

14.12.2 RRC information, target RNC to source RNC

There are 2 possible cases for RNC relocation:

1. The UE is already under control of target RNC; and
2. The SRNC Relocation with Hard Handover (UE still under control of SRNC), but UE is moving to a location controlled by the target RNC (based on measurement information).

In case 1 the relocation is transparent to the UE and there is no "reverse" direction container. The SRNC just assigns the 'serving' function to the target RNC which then becomes the Serving RNC.

In case 2 the relocation is initiated by SRNC which also provides the RRC Initialisation Information to the target RNC. Base on this information, the target RNC prepares the Hard Handover Message ("Physical channel reconfiguration" (subclause 8.2.6), "radio bearer establishment" (subclause 8.2.1), "Radio bearer reconfiguration" (subclause 8.2.2), "Radio bearer release" (subclause 8.2.3) or "Transport channel reconfiguration" (subclause 8.2.4).

The source RNC then transmits the Handover Message to the UE which then performs the handover.

In the successful case, the UE transmits an XXX COMPLETE message, using the new configuration, to the target RNC.

In case of failure, the UE transmits an XXX FAILURE, using the old configuration, to the source RNC and the RRC context remains unchanged (has to be confirmed and checked with the SRNS relocation procedure).

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE <i>RRC message</i>	MP			
> RADIO BEARER SETUP			RADIO BEARER SETUP 10.2.31	
> RADIO BEARER RECONFIGURATION			RADIO BEARER RECONFIGURATION 10.2.25	
>RADIO BEARER RELEASE			RADIO BEARER RELEASE 10.2.28	
> TRANSPORT CHANNEL RECONFIGURATION			TRANSPORT CHANNEL RECONFIGURATION 10.2.51	
> PHYSICAL CHANNEL RECONFIGURATION			PHYSICAL CHANNEL RECONFIGURATION 10.2.20	

14.12.3 RRC information, target RNC to source system

The RRC information, target RNC to source system is used to transfer information to another RAT, e.g., in case of handover to UTRAN. In this case, the RRC information concerns the "Handover To UTRAN Command" that is compiled by the target RNC but transferred via another RAT towards the UE, as specified in 8.3.6.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CHOICE case	MP			
>handover to UTRAN			HANDOVER TO UTRAN COMMAND 10.2.10	
>spare				(no data) Criticality: reject

14.13 RRC information transferred between UE and other systems

This subclause specifies RRC information that is exchanged between other systems and the UE. This information is transferred via another RAT in accordance with the specifications applicable for those systems. This subclause specifies the UTRAN RRC information applicable for the different information flows.

14.13.1 RRC information, another RAT to UE

14.13.1.1 Pre-defined configuration information

Another system may provide the UE with one or more pre-defined UTRAN configurations, comprising of radio bearer, transport channel and physical channel parameters. The UE shall store the information, and use it upon handover to UTRAN if requested to do so within the HANDOVER TO UTRAN COMMAND message. The pre-defined configuration information includes the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB information elements				
Predefined radio configurations		1 to <maxPredefConfigCount>		
>Predefined configuration identity	MP		Predefined configuration identity 10.3.4.5	
>Predefined configuration value tag	OP		Predefined configuration value tag 10.3.4.6	
UE information elements				
Re-establishment timer	MP		Re-establishment timer 10.3.3.30	
RB information elements				
>Predefined RB configuration	MP		Predefined RB configuration 10.3.4.7	
TrCH Information Elements				
>Predefined TrCH configuration	MP		Predefined TrCH configuration 10.3.5.9	
PhyCH Information Elements				
>Predefined PhCH configuration	MP		Predefined PhyCH configuration 10.3.6.56	

Multi Bound	Explanation
MaxPredefConfigCount	Maximum number of predefined configurations

14.13.2 RRC information, UE to another RAT

14.13.2.1 UE capability information

Upon receiving a UE information request from another system, the UE shall indicate the requested capabilities. The UE capability information includes the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE information elements				
UE radio access capability	OP		UE radio access capability 10.3.3.42	

14.13.2.2 UE security information

Upon receiving a UE information request from another system, the UE shall indicate the requested security information. The UE security information includes the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE information elements				
START list	MP	1 to <MaxCNdo mains>		START [TS 33.102] values for all CN domains
>CN domain identity	MP		CN domain identity 10.3.1.1	
>START	MP		START 10.3.3.38	START values to be used in this CN domain.

14.13.2.3 Pre-defined configuration status information

Another system may provide the UE with one or more pre-defined UTRAN configurations, comprising of radio bearer, transport channel and physical channel parameters. If requested, the UE shall indicate the configurations it has stored. The pre-defined configuration status information should include the following RRC information.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
RB information elements				
Predefined configurations		1 to <maxPred efConfigCount>		The list is in order of preconfiguration identity
>Predefined configuration value tag	OP		Predefined configuration value tag 10.3.4.6	The UE shall include the value tag if it has stored the concerned configuration

Multi Bound	Explanation
MaxPredefConfigCount	Maximum number of predefined configurations

14.13.2.4 UE system specific capability

This Information Element contains capability information concerning other Radio Access Technologies.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
UE system specific capability	OP	1 to <maxSystemCapability>		
>Inter-RAT UE radio access capability	MP		Inter-RAT UE radio access capability 10.3.8.7	

14.14 Versatile Channel Assignment Mode (VCAM) mapping rule (FDD only)

When Versatile Channel Assignment Method (VCAM) is used in the CPCH procedure, the following mapping rules shall be used to specify one PCPCH.

If the number of PCPCHs is less than or equal to 16, there is a one to one mapping between the CA index and the PCPCH index. Thus a suitable AP signature (and/or AP sub-channel) number is transmitted for the required spreading factor based on the broadcast system information, and the assigned PCPCH index (having the requested spreading factor) corresponds to the received CA index.

When the number of PCPCHs is greater than 16, a combination of an AP signature (and/or AP sub-channel) number and a CA signature number specifies one PCPCH as follows:

In VCAM mapping rule, a combination of an AP signature (and/or AP sub-channel) number and a CA signature number specifies one PCPCH. In a CPCH set, there are K available PCPCHs which are numbered $k=0,1,\dots,K-1$, and there are R available Minimum Spreading Factor A_r , $r=0,1,\dots,R-1$, that a UE can request and use. The maximum available number of PCPCHs and the number of available AP signatures (and/or AP sub-channels) for A_r are denoted as P_{0_r} and S_r , respectively, for $r=0,1,\dots,R-1$. Let P_r be equal to 16 if P_{0_r} is less than 16 and to P_{0_r} otherwise. T_r represents the number of CA signatures for A_r which are needed for specifying PCPCH. The default value of T_r is 16.

S_r always satisfies $S_r \geq \min\{s \in N, s \times T_r \geq P_r\}$, where N is the set of positive integers.

The list of available AP signatures (and/or AP sub-channels) for each A_r is renumbered from signature index 0 to signature index $S_r - 1$, starting with the lowest AP signature (and/or AP sub-channel) number, and continuing in sequence, in the order of increasing signature numbers.

Then for given AP signature (and/or AP sub-channel) number and CA signature number, the number k that signifies the assigned PCPCH is obtained as:

$$k = \{[(i + n) \bmod S_r] + j \times S_r\} \bmod P_r,$$

where i ($i=0,1,\dots,S_r-1$) is the AP signature (and/or AP sub-channel) index for A_r , j ($j=0,1,\dots,\min(P_r,T_r)-1$) is the CA signature number for A_r and n is a nonnegative integer which satisfies

$$n \times M_r \times S_r \leq i + j \times S_r < (n + 1) \times M_r \times S_r \text{ where } M_r = \min\{m : m \in N, (m \times S_r) \bmod P_r = 0\}.$$

An example of the above mapping rule is shown in 3GPP TR 25.922.

Annex A (informative): USIM parameters

A.1 Introduction

This annex contains recommendations about the RRC parameters to be stored in the USIM.

A.2 Cipherring information

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Cipher key for each CN domain	MP	<1 to maxCNDomains>		Cipher key is described in 33.102.
>Old CK	MP		Bitstring (128)	
>New CK	MP		Bitstring (128)	
Integrity key for each CN domain	MP	<1 to maxCNDomains>		Integrity key is described in 33.102.
>Old IK	MP		Bitstring (128)	
>New IK	MP		Bitstring (128)	
THRESHOLD	MP		Bitstring (20)	
START value for each CN domain	MP	<1 to maxCNDomains>		START value is described in 33.102.
>Old START	MP		Bitstring (20)	
>New START	MP		Bitstring (20)	
KSI, Key set identifier for each CN domain	MP	<1 to maxCNDomains>		Key set identifier is described in 33.102.
>Old KSI	MP		Bitstring (3)	
>New KSI	MP		Bitstring (3)	

A.3 Frequency information

Neighbour cell list.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
FDD cell list	OP	<1 to maxFDDFreqList>		
>UARFCN uplink (Nu)	OP		Integer(0..16383)	[25.101] If IE not present, default duplex distance of 190 MHz shall be used.
>UARFCN downlink (Nd)	MP		Integer(0 .. 16383)	[25.101]
> Primary scrambling code	OP	<1 to maxFDDFreqCellList>	Primary CPICH info 10.3.6.60	
TDD cell list	OP	<1 to maxTDDFreqList>		
>UARFCN (Nt)	MP		Integer(0 .. 16383)	[25.102]
> Cell parameters ID	OP	<1 to maxTDDFreqCellList>	Integer (0..127)	The Cell parameters ID is described in 25.223.
GSM Neighbour cell list	OP			
>GSM neighbour cell info	MP	<1 to maxGSMCellList>		
>> BSIC	MP			
>> BCCH ARFCN	MP			

A.4 Multiplicity values and type constraint values

Constant	Explanation	Value
Ciphering information		
maxCNDomains	Maximum number of CN domains	4
Frequency information		
maxFDDFreqList	Maximum number of FDD carrier frequencies to be stored in USIM	4
maxTDDFreqList	Maximum number of TDD carrier frequencies to be stored in USIM	4
maxFDDFreqCellList	Maximum number of neighbouring FDD cells on one carrier to be stored in USIM	32
maxTDDFreqCellList	Maximum number of neighbouring TDD cells on one carrier to be stored in USIM	32
maxGSMCellList	Maximum number of GSM cells to be stored in USIM	32

Annex B (informative): Description of RRC state transitions

This annex contains Stage 2 description of RRC states and state transitions.

B.1 RRC states and state transitions including GSM

After power on, the UE stays in Idle Mode until it transmits a request to establish an RRC Connection. In Idle Mode the connection of the UE is closed on all layers of the access stratum. In Idle Mode the UE is identified by non-access stratum identities such as IMSI, TMSI and P-TMSI. In addition, the UTRAN has no own information about the individual Idle Mode UEs, and it can only address e.g. all UEs in a cell or all UEs monitoring a paging occasion. The UE behaviour within this mode is described in [4].

The UTRA RRC Connected Mode is entered when the RRC Connection is established. The UE is assigned a radio network temporary identity (RNTI) to be used as UE identity on common transport channels.

The RRC states within UTRA RRC Connected Mode reflect the level of UE connection and which transport channels that can be used by the UE.

For inactive stationary data users the UE may fall back to PCH on both the Cell and URA levels. That is, upon the need for paging, the UTRAN checks the current level of connection of the given UE, and decides whether the paging message is sent within the URA, or should it be sent via a specific cell.

B.2 Transition from Idle Mode to UTRA RRC Connected Mode

The transition to the UTRA RRC Connected Mode from the Idle Mode can only be initiated by the UE by transmitting a request for an RRC Connection. The event is triggered either by a paging request from the network or by a request from upper layers in the UE.

When the UE receives a message from the network that confirms the RRC connection establishment, the UE enters the CELL_FACH or CELL_DCH state of UTRA RRC Connected Mode.

In the case of a failure to establish the RRC Connection the UE goes back to Idle Mode. Possible causes are radio link failure, a received reject response from the network or lack of response from the network (timeout).

B.2.1 Transitions for Emergency Calls

Editor's note: text in B.2.1 needs to be updated to reflect the deletion of the Immediate Cell evaluation procedure. Refer to 3GPP TS 25.304 for all states and procedures referred to in this subclause. When UE leaves idle mode from state Camped on any cell in order to make an emergency call, moving to state Connected mode (emergency calls only), the UE shall use the Immediate cell evaluation procedure (UTRA only) in order to select the best cell on the current frequency for the access attempt. If no suitable cell is found, the UE shall use the Any cell reselection. When returning to idle mode, the UE shall use the procedure Cell selection when leaving connected mode in order to find a suitable cell to camp on, state Camped on any cell.

B.3 UTRA RRC Connected Mode States and Transitions

B.3.1 CELL_DCH state

The CELL_DCH state is characterised by

- A dedicated physical channel is allocated to the UE in uplink and downlink.
- The UE is known on cell level according to its current active set.
- Dedicated transport channels, downlink and uplink (TDD) shared transport channels, and a combination of these transport channels can be used by the UE.

The CELL_DCH-state is entered from the Idle Mode through the setup of an RRC connection, or by establishing a dedicated physical channel from the CELL_FACH state.

A PDSCH may be assigned to the UE in this state, to be used for a DSCH. In TDD a PUSCH may also be assigned to the UE in this state, to be used for a USCH. If PDSCH or PUSCH are used for TDD, a FACH transport channel may be assigned to the UE for reception of physical shared channel allocation messages.

B.3.1.1 Transition from CELL_DCH to Idle Mode

Transition to Idle Mode is realised through the release of the RRC connection.

B.3.1.2 Transition from CELL_DCH to CELL_FACH state

Transition to CELL_FACH state occurs when all dedicated channels have been released, which may be

- a) via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

at the end of the time period for which the dedicated channel was allocated (TDD)

B.3.1.3 Transition from CELL_DCH to CELL_PCH state

Transition to CELL_PCH state occurs via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.1.4 Transition from CELL_DCH to URA_PCH state

Transition to URA_PCH state occurs via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.1.5 Radio Resource Allocation tasks (CELL_DCH)

For the DCH, several physical channel allocation strategies may be applied. The allocations can be either permanent (needing a DCH release message) or based on time or amount-of-data.

Resource allocation can be done separately for each packet burst with fast signalling on the DCH

For each radio frame the UE and the network indicate the current data rate (in uplink and downlink respectively) using the transport format combination indicator (TFCI). However, in TDD, DCH and DSCH or USCH may be mapped on different CCTrCHs, their TFCI are totally independent. DCH transmission is not modified by the simultaneous existence of DSCH/USCH. If the configured set of combinations (i.e. transport format set for one transport channel) are found to be insufficient to retain the QoS requirements for a transport channel, the network initiates a reconfiguration of the transport format set (TFS) for that transport channel. This reconfiguration can be done during or in between data transmission. Further, the network can reconfigure the physical channel allowing an increase or decrease of the peak data rate.

For the uplink data transmission, the UE reports the observed traffic volume to the network in order for the network to re-evaluate the current allocation of resources. This report contains e.g. the amount of data to be transmitted or the buffer status in the UE.

B.3.1.6 RRC Connection mobility tasks (CELL_DCH)

Depending on the amount and frequency of data macrodiversity (soft handover) may or may not be applied.

The RRC Connection mobility is handled by measurement reporting, soft handover and Timing re-initialised or Timing-maintained hard handover procedures.

B.3.1.7 UE Measurements (CELL_DCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the connected mode measurement control information received in other states until new measurement control information has been assigned to the UE.

B.3.1.8 Acquisition of system information (CELL_DCH)

FDD UEs with certain capabilities reads system information broadcast on FACH.

TDD UEs reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

B.3.2 CELL_FACH state

The CELL_FACH state is characterised by:

- No dedicated physical channel is allocated to the UE.
- The UE continuously monitors a FACH in the downlink.
- The UE is assigned a default common or shared transport channel in the uplink (e.g. RACH) that it can use anytime according to the access procedure for that transport channel.
- The position of the UE is known by UTRAN on cell level according to the cell where the UE last made a cell update.
- In TDD mode, one or several USCH or DSCH transport channels may have been established.

B.3.2.1 Transition from CELL_FACH to CELL_DCH state

A transition occurs, when a dedicated physical channel is established via explicit signalling (e.g. PHYSICAL CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION, RADIO BEARER RELEASE, RADIO BEARER SETUP, RRC CONNECTION REESTABLISHMENT, TRANSPORT CHANNEL RECONFIGURATION, etc.).

B.3.2.2 Transition from CELL_FACH to CELL_PCH state

The transition occurs when UTRAN orders the UE to move to CELL_PCH state, which is done via explicit signalling (CELL UPDATE CONFIRM, RADIO BEARER RECONFIGURATION, etc.).

B.3.2.3 Transition from CELL_FACH to Idle Mode

Upon release of the RRC connection, the UE moves to the idle mode.

B.3.2.4 Transition from CELL_FACH to URA_PCH State

The transition occurs when UTRAN orders the UE to move to URA_PCH state, which is done via explicit signalling (URA UPDATE CONFIRM, RADIO BEARER RECONFIGURATION, etc.).

B.3.2.5 Radio Resource Allocation Tasks (CELL_FACH)

In the CELL_FACH state the UE will monitor an FACH. It is enabled to transmit uplink control signals and it may be able to transmit small data packets on the RACH.

The network can assign the UE transport channel parameters (e.g. transport format sets) in advance, to be used when a DCH is used. Upon assignment of the physical channel for DCH, the UE moves to CELL_DCH state and uses the pre-assigned TFS for the DCH.

If no UE dedicated physical channel or transport channel configuration has been assigned, the UE uses the common physical channel and transport channel configuration according to the system information.

For the uplink data transmission, the UE reports the observed traffic volume to the network in order for the network to re-evaluate the current allocation of resources. This report contains e.g. the amount of data to be transmitted or the buffer status in the UE.

When there is either user or control data to transmit, a selection procedure determines whether the data should be transmitted on a common transport channel, or if a transition to CELL_DCH should be executed. The selection is dynamic and depends on e.g. traffic parameters (amount of data, packet burst frequency).

In FDD mode, the UTRAN can assign CPCH resources to the UE in CELL_FACH state. When CPCH resources are assigned, the UE will continue to monitor FACHs. The UE may use the RACH to transmit uplink control signals and small data packets. The UE also may choose to transmit data packets, larger than those carried on the RACH, on the CPCH channel. The UE selects either the RACH or one of the CPCH channels to make maximum use of the capacity available on that channel.

In FDD mode, the UE provides the UTRAN with CPCH measurement data, which includes data, queue depth (current size of data buffers), average access time for each CPCH channel used, and average traffic volume on each CPCH channel used. With these measures, the UTRAN can reallocate network resources on a periodic basis. The UTRAN allocates CPCH Sets to each cell and assigns UEs to one of the cell's CPCH Sets. The UEs can dynamically access the CPCH resources without further UTRAN control.

In the TDD mode, the UTRAN can assign USCH / DSCH resources to the UE in CELL_FACH state. When USCH / DSCH resources are assigned, the UE will continue to monitor FACHs, depending on the UE capability. The UE may use the USCH / DSCH to transmit signalling messages or user data in the uplink and / or the downlink using USCH and / or DSCH when resources are allocated to cell and UE is assigned use of those USCH / DSCH.

For the uplink data transmission on USCH the UE reports to the network the traffic volume (current size of RLC data buffers), The UTRAN can use these measurement reports to re-evaluate the current allocation of the USCH / DSCH resources.

B.3.2.6 RRC Connection mobility tasks (CELL_FACH)

In this state the location of the UE is known on cell level. A cell update procedure is used to report to the UTRAN, when the UE selects a new cell to observe the common downlink channels of a new cell. Downlink data transmission on the FACH can be started without prior paging.

The UE monitors the broadcast channel and system information on BCCH of its own and neighbour cells and from this the need for the updating of cell location is identified.

The UE performs cell reselection and upon selecting a new UTRA cell, it initiates a cell update procedure. Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and makes an access to that system according to its specifications.

B.3.2.7 UE Measurements (CELL_FACH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

By default, the UE uses the measurement control information broadcast within the system information. However, for measurements for which the network also provides measurement control information within a MEASUREMENT CONTROL message, the latter information takes precedence.

B.3.2.8 Transfer and update of system information (CELL_FACH)

The UE reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

When the system information is modified, the scheduling information is updated to reflect the changes in system information transmitted on BCH. The new scheduling information is broadcast on FACH in order to inform UEs about the changes. If the changes are applicable for the UE, the modified system information is read on BCH.

B.3.3 CELL_PCH state

The CELL_PCH state is characterised by:

- No dedicated physical channel is allocated to the UE.
- The UE selects a PCH with the algorithm specified in subclause 8.6.6.5, and uses DRX for monitoring the selected PCH via an associated PICH.
- No uplink activity is possible.
- The position of the UE is known by UTRAN on cell level according to the cell where the UE last made a cell update in CELL_FACH state.

The DCCH logical channel cannot be used in this state. If the network wants to initiate any activity, it needs to make a paging request on the PCCH logical channel in the known cell to initiate any downlink activity.

B.3.3.1 Transition from CELL_PCH to CELL_FACH state

The UE is transferred to CELL_FACH state:

- a) by paging from UTRAN (PAGING TYPE1 message)
- b) through any uplink access (CELL UPDATE message)

B.3.3.2 Radio Resource Allocation Tasks (CELL_PCH)

In CELL_PCH state no resources have been granted for data transmission. For this purpose, a transition to another state has to be executed.

The UE may use Discontinuous Reception (DRX) in order to reduce power consumption. When DRX is used the UE needs only to receive at one paging occasion per DRX cycle. The UE may be instructed to use a specific DRX cycle length by the network. The UE determines its paging occasions in the same way as for Idle Mode, see [4].

B.3.3.3 RRC Connection mobility tasks (CELL_PCH)

In the CELL_PCH state, the UE mobility is performed through cell reselection procedures, which may differ from the one defined in [4].

The UE performs cell reselection and upon selecting a new UTRA cell, it moves to CELL_FACH state and initiates a cell update procedure in the new cell. After the cell update procedure has been performed, the UE changes its state back to CELL_PCH state if neither the UE nor the network has any more data to transmit.

Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and make an access to that system according to its specifications.

In case of low UE activity, UTRAN may want to reduce the cell-updating overhead by ordering the UE to move to the URA_PCH State. This transition is made via the CELL_FACH state. UTRAN may apply an inactivity timer, and optionally, a counter, which counts the number of cell updates e.g. UTRAN orders the UE to move to URA_PCH when the number of cell updates has exceeded certain limits (network parameter).

B.3.3.4 UE Measurements (CELL_PCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the measurement control information according to the system information when no UE dedicated measurement control information has been assigned.

B.3.3.5 Transfer and update of system information (CELL_PCH)

The UE reads the BCH to acquire valid system information. For each acquisition, the UE may need different combinations of system information broadcast on BCH. The scheduling on the broadcast channel is done in such way that the UE knows when the requested information can be found.

B.3.4 URA_PCH State

The URA_PCH state is characterised by:

- No dedicated channel is allocated to the UE.
- The UE selects a PCH with the algorithm specified in subclause 8.6.6.5, and uses DRX for monitoring the selected PCH via an associated PICH.
- No uplink activity is possible.
- The location of the UE is known on UTRAN Registration area level according to the URA assigned to the UE during the last URA update in CELL_FACH state.

The DCCH logical channel cannot be used in this state. If the network wants to initiate any activity, it needs to make a paging request on the PCCH logical channel within the URA where the location of the UE is known. If the UE needs to transmit anything to the network, it goes to the CELL_FACH state. The transition to URA_PCH State can be controlled with an inactivity timer, and optionally, with a counter which counts the number of cell updates. When the number of cell updates has exceeded certain limits (a network parameter), then the UE changes to the URA_PCH State.

URA updating is initiated by the UE, which, upon the detection of the Registration area, sends the network the Registration area update information on the RACH of the new cell.

B.3.4.1 Transition from URA_PCH State to CELL_FACH State (URA_PCH)

Any activity causes the UE to be transferred to CELL_FACH State.

- a) Uplink access is performed by RACH (CELL UPDATE message).
- b) by paging from UTRAN (PAGING TYPE1 message).

NOTE: The release of an RRC connection is not possible in the URA_PCH State. The UE will first move to CELL_FACH State to perform the release signalling.

B.3.4.2 Radio Resource Allocation Tasks (URA_PCH)

In URA_PCH State no resources have been granted for data transmission. For this purpose, a transition to CELL_FACH State has to be executed.

The UE may use Discontinuous Reception (DRX) in order to reduce power consumption. When DRX is used the UE needs only to receive at one paging occasion per DRX cycle. The UE may be instructed to use a specific DRX cycle length by the network. The UE determines its paging occasions in the same way as for Idle Mode, see [4].

B.3.4.3 RRC Connection mobility tasks (URA_PCH)

In URA_PCH State the location of a UE is known on UTRAN Registration area level.

In this state, the UE mobility is performed through URA reselection procedures, which may differ from the definitions in S2.04. The UE performs cell reselection and upon selecting a new UTRA cell belonging to an URA which does not match the URA used by the UE, the UE moves to CELL_FACH state and initiates a URA update towards the network. After the URA update procedure has been performed, the UE changes its state back to URA_PCH state if neither the UE nor the network has any more data to transmit.

Upon selecting a new cell belonging to another radio access system than UTRA, the UE enters idle mode and makes an access to that system according to its specifications (FFS).

B.3.4.4 UE Measurements (URA_PCH)

The UE performs measurements and transmit measurement reports according to the measurement control information.

The UE uses the measurement control information according to the system information when no UE dedicated measurement control information has been assigned.

B.3.4.5 Transfer and update of system information (URA_PCH)

The same mechanisms to transfer and update system information as for state CELL_PCH are applicable for UEs in URA_PCH state.

B.3.5 States and Transitions for Cell Reselection in URA_PCH, CELL_PCH, and CELL_FACH

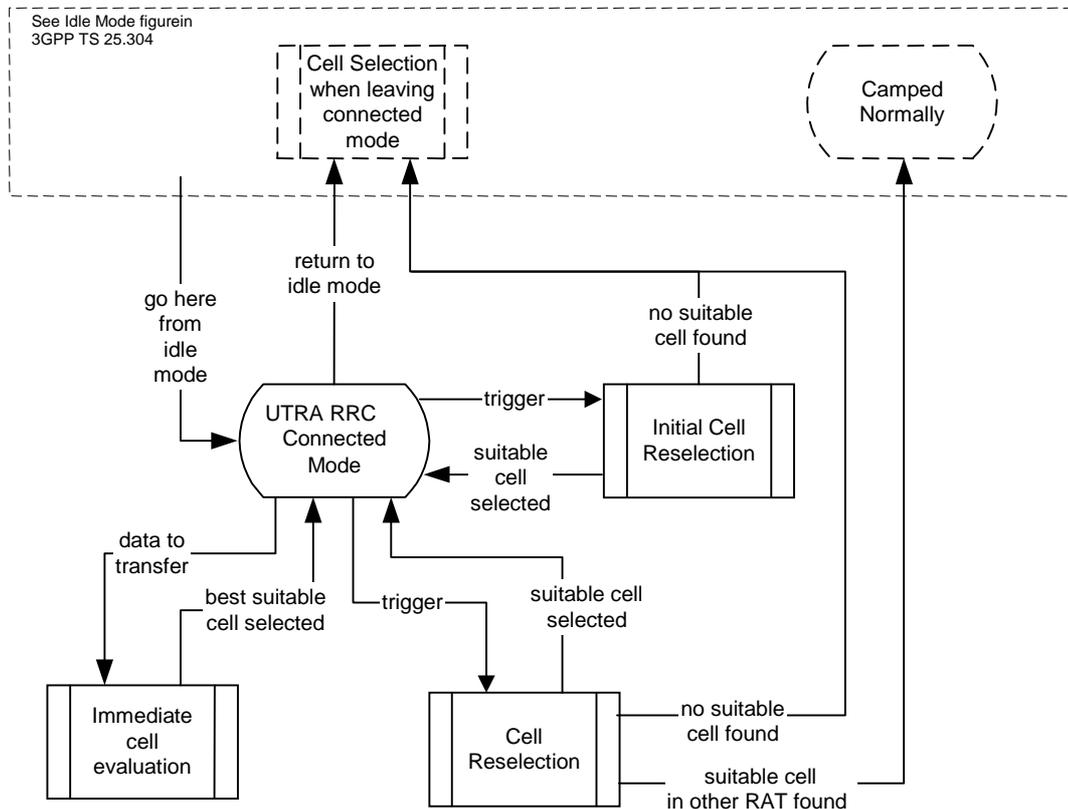


Figure 61: UTRA RRC Connected mode cell reselection for URA_PCH, CELL_PCH, and CELL_FACH

Editor's note: Figure 61 needs to be updated to reflect the deletion of the Immediate Cell evaluation procedure.

In some states the UE performs cell reselection procedures. The UE selects a suitable cell (defined in 3GPP TS 25.304) and radio access technology based on connected mode radio measurements and cell reselection criteria.

Figure 61 shows the states and procedures in the cell reselection process in connected mode.

When a cell reselection is triggered, the UE evaluates the cell reselection criteria based on radio measurements, and if a better cell is found that cell is selected, procedure *Cell reselection* (see 3GPP TS 25.304). If the change of cell implies a change of radio access technology, the RRC connection is released, and the UE enters idle mode of the other RAT. If no suitable cell is found in the cell reselection procedure, the RRC connection is released, and the UE enters idle mode.

When an Initial cell *reselection* is triggered, the UE shall use the *Initial cell reselection* procedure (see 3GPP TS 25.304) to find a suitable cell. One example where this procedure is triggered is at radio link failure, where the UE may trigger an initial cell reselection in order to request re-establishment of the RRC connection. If the UE is unable to find a suitable cell, the UE shall release the RRC connection and enter idle mode.

B.4 Inter-RAT handover with PSTN/ISDN domain services

When using PSTN / ISDN domain services, UTRAN is using an Inter-Radio access system Handover Procedure and GSM is using a Handover procedure for the transition from UTRA RRC Connected Mode to GSM Connected Mode.

B.5 Inter-RAT handover with IP domain services

When using IP domain services, the UE initiates cell reselection from a GSM/GPRS cell to a UTRAN cell and then uses the RRC Connection Establishment procedure for the transition to UTRA RRC Connected mode.

When the RRC Connection is established from Idle Mode (GPRS Packet Idle Mode) the RRC CONNECTION REQUEST message contains an indication, that UTRAN needs to continue an already established GPRS UE context from the CN. This indication allows UTRAN to e.g. prioritise the RRC CONNECTION REQUEST from the UE.

In UTRA RRC connected mode UTRAN is using UE or network initiated cell reselection to change from a UTRAN cell to a GSM/GPRS cell. If the cell reselection was successful the UE enters Idle Mode (GPRS Packet Idle Mode). The UE sends a packet channel request from Idle Mode (GPRS Packet Idle mode) to establish a Temporary Block flow and enter GPRS Packet Transfer Mode. In the GPRS Packet Transfer Mode the UE sends a RA Update request message. The RA Update Request message sent from the UE contains an indication that GSM/GPRS need to continue an already established UTRAN UE context from the CN. This means that the RA Update request is always sent for the transition from UTRA RRC Connected Mode to GSM/GPRS regardless if the RA is changed or not.

NOTE: The reason for using RA update instead of a new message is to reduce the impact on the existing GSM/GPRS specification.

B.6 Inter-RAT handover with simultaneous IP and PSTN/ISDN domain services

NOTE: This is an initial assumption that needs to be seen by SMG2 and requiring checking by SMG2, when the work on this item has progressed.

B.6.1 Inter-RAT handover UTRAN to GSM / BSS

For a UE in CELL_DCH state using both PSTN / ISDN and IP Domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from UTRAN.

The UE performs the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode first. When the UE has sent handover complete message to GSM / BSS the UE initiates a temporary block flow towards GPRS and sends a RA update request.

If the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode was successful the handover is considered as successful regardless if the UE was able to establish a temporary block flow or not towards GPRS.

In case of Inter-RAT handover failure the UE has the possibility to go back to UTRA RRC Connected Mode and re-establish the connection in the state it originated from without attempting to establish a temporary block flow. If the UE has the option to try to establish a temporary block flow towards GSM / GPRS after Inter-RAT handover failure is FFS.

B.6.2 Inter-RAT handover GSM / BSS to UTRAN

For a UE in GSM Connected Mode using both PSTN / ISDN and IP domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from GSM / BSS.

The UE performs the Inter-RAT handover from GSM Connected Mode to UTRA RRC Connected Mode.

In UTRA RRC Connected Mode both services are established in parallel.

If the Inter-RAT handover from GSM Connected mode to UTRA RRC Connected Mode was successful the handover is considered as successful.

In case of Inter-RAT handover failure the UE has the possibility to go back to GSM Connected Mode and re-establish the connection in the state it originated from.

Annex C (informative): Change history

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
10/99	RP-05	RP-99524	-		Approved at TSG-RAN #5 and placed under Change Control	-	3.0.0
12/99	RP-06	RP-99650	001		Modification of RRC procedure specifications	3.0.0	3.1.0
	RP-06	RP-99654	005	1	Introduction of Information Element for Power Control Algorithm	3.0.0	3.1.0
	RP-06	RP-99654	007	1	RRC parameters for SS DT	3.0.0	3.1.0
	RP-06	RP-99656	009	1	Inclusion of information elements for integrity protection	3.0.0	3.1.0
	RP-06	RP-99656	010	2	Security mode control procedure	3.0.0	3.1.0
	RP-06	RP-99656	011	3	Updates of the system information procedure	3.0.0	3.1.0
	RP-06	RP-99656	012	2	Inter-frequency measurements and reporting	3.0.0	3.1.0
	RP-06	RP-99656	013	1	Inter-system measurements and reporting	3.0.0	3.1.0
	RP-06	RP-99656	014	1	Additional measurements in RRC measurement messages	3.0.0	3.1.0
	RP-06	RP-99656	015	3	Value range for Measurement Information Elements	3.0.0	3.1.0
	RP-06	RP-99656	016	2	Message contents for inter system handover to UTRAN	3.0.0	3.1.0
	RP-06	RP-99652	017		Inclusion of ciphering information elements	3.0.0	3.1.0
	RP-06	RP-99651	018		Corrections and editorial changes	3.0.0	3.1.0
	RP-06	RP-99654	019	1	Algorithm for CTCF Calculation	3.0.0	3.1.0
	RP-06	RP-99651	025		Logical CH for RRC Connection Re-establishment (RRC Connection Re-establishment deleted in RAN_10, RP-000715)	3.0.0	3.1.0
	RP-06	RP-99719	026	1	Gain Factors	3.0.0	3.1.0
	RP-06	RP-99654	027	1	Parameters for CELL UPDATE CONFIRM message	3.0.0	3.1.0
	RP-06	RP-99651	028		Cell Update Cause	3.0.0	3.1.0
	RP-06	RP-99654	029	1	RRC Initialisation Information	3.0.0	3.1.0
	RP-06	RP-99656	034	1	Open loop power control for PRACH	3.0.0	3.1.0
	RP-06	RP-99652	038		Addition of the UE controlled AMR mode adaptation	3.0.0	3.1.0
	RP-06	RP-99651	039		Information elements for RLC reset	3.0.0	3.1.0
	RP-06	RP-99656	040		Support for DS-41 Initial UE Identity	3.0.0	3.1.0
	RP-06	RP-99656	042	2	Integration of Cell Broadcast Service (CBS)	3.0.0	3.1.0
	RP-06	RP-99654	044	1	Gated transmission of DPCCCH	3.0.0	3.1.0
	RP-06	RP-99656	045		Modification to the Transport Format Combination Control message	3.0.0	3.1.0
	RP-06	RP-99656	046		New Information elements and modifications to messages required in order to support configuration and re-configuration of the DSCH in FDD mode	3.0.0	3.1.0
	RP-06	RP-99654	047	1	Editorial Corrections and Alignments with Layer 1 specifications	3.0.0	3.1.0
	RP-06	RP-99654	048	1	Information elements for TDD shared channel operation	3.0.0	3.1.0
	RP-06	RP-99656	049		Description of CN dependent IEs in Master Information Block	3.0.0	3.1.0
	RP-06	RP-99650	050		UE capability information elements	3.0.0	3.1.0
	RP-06	RP-99656	051	1	UTRAN response time to uplink feedback commands of TX diversity control	3.0.0	3.1.0
	RP-06	RP-99654	052		New and corrected CPCH parameters	3.0.0	3.1.0
	RP-06	RP-99654	053	2	Compressed mode parameters without gating	3.0.0	3.1.0
	RP-06	RP-99654	054		Transport format combination set and transport format combination subset	3.0.0	3.1.0
	RP-06	RP-99656	055	1	Information elements for cell selection and reselection	3.0.0	3.1.0
	RP-06	RP-99654	056		Corrections and Alignments of the RRC to the L1 for TDD	3.0.0	3.1.0
	RP-06	RP-99656	057	1	Introduction of a SCCH procedure	3.0.0	3.1.0
	RP-06	RP-99656	061		Support for DS-41 Paging UE Identity	3.0.0	3.1.0
	RP-06	RP-99656	062	2	Support for cdma2000 Hard Handover	3.0.0	3.1.0
	RP-06	RP-99656	063	1	Provide necessary signalling to support FDD DSCH	3.0.0	3.1.0
	RP-06	RP-99654	064		RRC procedure interactions	3.0.0	3.1.0
	RP-06	RP-99654	066	1	Transfer of UE capabilities	3.0.0	3.1.0
	RP-06	RP-99654	067		Selection of initial UE identity	3.0.0	3.1.0
	RP-06	RP-99657	069		UE capability verification in the security mode control procedure	3.0.0	3.1.0
	RP-06	RP-99657	070	1	DPCH initial power	3.0.0	3.1.0
	RP-06	RP-99657	071		Actions when entering idle mode	3.0.0	3.1.0
	RP-06	RP-99657	072		Specification of inter-frequency and inter-system reporting events for FDD	3.0.0	3.1.0
	RP-06	RP-99657	073	1	Signalling radio bearers	3.0.0	3.1.0
	RP-06	RP-99654	074		CN information elements	3.0.0	3.1.0
	RP-06	RP-99654	076		UE information elements	3.0.0	3.1.0
	RP-06	RP-99657	077	1	Radio bearer, transport channel and physical channel information elements	3.0.0	3.1.0
	RP-06	RP-99654	078		Other information elements	3.0.0	3.1.0
	RP-06	RP-99657	079	2	RRC signalling for PDCP	3.0.0	3.1.0
	RP-06	RP-99654	080		Content of Measurement Control Messages	3.0.0	3.1.0

	RP-06	RP-99654	081		RRC Information Elements to support Block STTD transmission diversity in TDD	3.0.0	3.1.0
	RP-06	RP-99657	082	1	Signalling connection release	3.0.0	3.1.0
	RP-06	RP-99657	083	1	Addition of cell access restriction information elements to System Information	3.0.0	3.1.0
	RP-06	RP-99655	085	1	RRC Connection Establishment parameters	3.0.0	3.1.0
	RP-06	RP-99657	092	1	Support of UE autonomous update of a active set on a non-used frequency	3.0.0	3.1.0
	RP-06	RP-99657	095	1	TPC combining for power control	3.0.0	3.1.0
	RP-06	RP-99653	096	1	Editorial Modification of IEs in RRC messages	3.0.0	3.1.0
	RP-06	RP-99655	097		Selection of SCCPCH	3.0.0	3.1.0
	RP-06	RP-99655	098	1	RRC Initialisation Information	3.0.0	3.1.0
	RP-06	RP-99657	100	1	Support of physical channel establishment and failure criteria in the UE	3.0.0	3.1.0
	RP-06	RP-99655	102	1	RRC Connection Re-establishment (Message deleted in RAN_10, RP-000715)	3.0.0	3.1.0
	RP-06	RP-99657	106	1	System information on FACH	3.0.0	3.1.0
	RP-06	RP-99657	108	1	SAPs and Primitives for DS-41 mode	3.0.0	3.1.0
	RP-06	RP-99655	109	1	TX Diversity Mode for Dedicated Channel	3.0.0	3.1.0
	RP-06	RP-99657	110	1	RACH message length signalling on System Information	3.0.0	3.1.0
	RP-06	RP-99657	113	1	Routing of NAS messages in UTRAN	3.0.0	3.1.0
	RP-06	RP-99655	116	3	TBS Identification in TFS	3.0.0	3.1.0
	RP-06	RP-99657	117	1	Merging the hard handover and some radio bearer control procedures	3.0.0	3.1.0
	RP-06	RP-99653	120	1	Selected RRC message transfer syntax	3.0.0	3.1.0
	RP-06	RP-99657	121		Efficient rate command signalling	3.0.0	3.1.0
03/00	RP-07	RP-000043	122		TDD Mode BCH Reception in Cell DCH State	3.1.0	3.2.0
	RP-07	RP-000043	123		Uplink Outer Loop Power Control in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000043	124	1	TFS TB Size Calculation with Bit Aligned TDD MAC Headers	3.1.0	3.2.0
	RP-07	RP-000043	125		Grouping of DRAC IEs, and detailed definitions of these IEs	3.1.0	3.2.0
	RP-07	RP-000043	126		Correction of specifications for the 'Dynamic Resource Allocation Control of Uplink DCH' Procedure	3.1.0	3.2.0
	RP-07	RP-000043	131	2	Clarification of PDCP info and PDCP capability IEs	3.1.0	3.2.0
	RP-07	RP-000043	132		Editorial change to "Specification of system information block characteristics"	3.1.0	3.2.0
	RP-07	RP-000043	133		Additions of CBS related Information Elements	3.1.0	3.2.0
	RP-07	RP-000043	134		Signalling for computed gain factors	3.1.0	3.2.0
	RP-07	RP-000043	137	1	General error handling procedures	3.1.0	3.2.0
	RP-07	RP-000043	138	1	RRC message extensions	3.1.0	3.2.0
	RP-07	RP-000043	139		Padding of RRC messages using RLC transparent mode	3.1.0	3.2.0
	RP-07	RP-000043	140	2	UE information elements	3.1.0	3.2.0
	RP-07	RP-000043	141		Other information elements	3.1.0	3.2.0
	RP-07	RP-000043	142	3	Integrity protection function	3.1.0	3.2.0
	RP-07	RP-000043	143	4	RAB-RB relations	3.1.0	3.2.0
	RP-07	RP-000043	144	1	Inter-system handover from UTRAN	3.1.0	3.2.0
	RP-07	RP-000043	145	3	Handover to UTRAN including procedure for pre- configuration	3.1.0	3.2.0
	RP-07	RP-000043	146	2	RRC measurement filtering parameters	3.1.0	3.2.0
	RP-07	RP-000043	147		New event "RL out of UE Rx window"	3.1.0	3.2.0
	RP-07	RP-000044	148	1	Access control on RACH	3.1.0	3.2.0
	RP-07	RP-000044	149	2	cdma2000 Hard Handover	3.1.0	3.2.0
	RP-07	RP-000044	150	1	CPCH parameters with corrections	3.1.0	3.2.0
	RP-07	RP-000044	152		U-plane AM RLC reconfiguration by cell update procedure	3.1.0	3.2.0
	RP-07	RP-000044	154	3	CPCH	3.1.0	3.2.0
	RP-07	RP-000044	155	1	Information elements for ASC in TDD	3.1.0	3.2.0
	RP-07	RP-000044	156		Addition of timing advance value in handover related messages	3.1.0	3.2.0
	RP-07	RP-000044	157	2	Physical channel description for TDD	3.1.0	3.2.0
	RP-07	RP-000044	159		Message contents for the intersystem command message to UTRAN operating in TDD mode	3.1.0	3.2.0
	RP-07	RP-000044	160		Corrections on use of PUSCH power control info and minor corrections	3.1.0	3.2.0
	RP-07	RP-000044	162	2	UE individual DRX cycles in CELL_PCH and URA_PCH states	3.1.0	3.2.0
	RP-07	RP-000044	163		Correction to Transport Format Combination Control procedure	3.1.0	3.2.0
	RP-07	RP-000044	164	3	Downlink outer loop power control	3.1.0	3.2.0
	RP-07	RP-000044	165	2	Redirection of RRC connection setup	3.1.0	3.2.0
	RP-07	RP-000044	166	2	Inter-frequency measurements in CELL_FACH state	3.1.0	3.2.0
	RP-07	RP-000044	167		List of found editorial mistakes in the Dec99 version of 25.331 (V3.1.0)	3.1.0	3.2.0
	RP-07	RP-000044	168	1	Transport block size	3.1.0	3.2.0
	RP-07	RP-000044	169	1	Cell Access Restriction	3.1.0	3.2.0
	RP-07	RP-000044	170		Editorial modification	3.1.0	3.2.0
	RP-07	RP-000044	171		Modification of DPCH info	3.1.0	3.2.0
	RP-07	RP-000045	172	1	Measurement control message	3.1.0	3.2.0

	RP-07	RP-000045	173	2	Reporting cell status	3.1.0	3.2.0
	RP-07	RP-000045	174		Additional IE for RB release	3.1.0	3.2.0
	RP-07	RP-000045	175		Available SF in PRACH info	3.1.0	3.2.0
	RP-07	RP-000045	176		Traffic volume measurement event	3.1.0	3.2.0
	RP-07	RP-000045	177		Report of multiple cells on an event result	3.1.0	3.2.0
	RP-07	RP-000045	178		Editorial modification on Direct Transfer	3.1.0	3.2.0
	RP-07	RP-000045	179		Correction of the Security Mode Control procedure	3.1.0	3.2.0
	RP-07	RP-000045	180	1	Maximum calculated Transport Format Combination	3.1.0	3.2.0
	RP-07	RP-000045	183		Additional DPCH IEs to align 25.331 with 25.214	3.1.0	3.2.0
	RP-07	RP-000045	184	1	RB – DCH mapping	3.1.0	3.2.0
	RP-07	RP-000045	188	1	Modifications related to FDD mode DSCH	3.1.0	3.2.0
	RP-07	RP-000045	189	1	Identification of Shared Channel Physical Configuration in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045	192	1	Uplink Outer Loop Power Control During Hard Handover	3.1.0	3.2.0
	RP-07	RP-000045	193		Support of Multiple CCTrCH's in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045	194	1	Uplink Physical Channel Control in TDD Mode	3.1.0	3.2.0
	RP-07	RP-000045	201	1	Transfer of initial information from UE to target RNC prior to handover to UTRAN	3.1.0	3.2.0
	RP-07	RP-000045	202	1	CN information elements	3.1.0	3.2.0
	RP-07	RP-000045	203		UTRAN mobility information elements	3.1.0	3.2.0
	RP-07	RP-000045	204	1	RB information elements	3.1.0	3.2.0
	RP-07	RP-000046	205	1	Physical channel information elements	3.1.0	3.2.0
	RP-07	RP-000046	206	1	UE capability information elements	3.1.0	3.2.0
	RP-07	RP-000046	207		UE variables	3.1.0	3.2.0
	RP-07	RP-000046	208	1	Actions when entering idle mode	3.1.0	3.2.0
	RP-07	RP-000046	209		Usage of pilot bits	3.1.0	3.2.0
	RP-07	RP-000046	210		System information procedure corrections	3.1.0	3.2.0
	RP-07	RP-000046	212		Reconfiguration of ciphering	3.1.0	3.2.0
	RP-07	RP-000046	213	1	Enhancements to RRC connection re-establishment procedure (Message subsequently deleted in RAN_!), RP-000715)	3.1.0	3.2.0
	RP-07	RP-000046	215		Updates to RRC Initialisation Information transparent container and addition of reverse direction container description	3.1.0	3.2.0
	RP-07	RP-000046	220	1	Changes in RRC messages to support lossless SRNC relocation	3.1.0	3.2.0
	RP-07	RP-000046	229	1	Measurements of unlisted neighbouring cells	3.1.0	3.2.0
	RP-07	RP-000046	234	2	Inclusion of Location Services	3.1.0	3.2.0
	RP-07	RP-000046	236	1	Application of Access Service Classes and relation to Access Classes	3.1.0	3.2.0
	RP-07	RP-000046	252	1	DRX indicator presence and state entering mechanism at the end of a procedure	3.1.0	3.2.0
	RP-07	RP-000046	254	1	Physical shared channel allocation procedure	3.1.0	3.2.0
	RP-07	RP-000046	255		Corrections to TDD specific parameters in PICH info	3.1.0	3.2.0
	RP-07	RP-000046	256		Editorial modifications	3.1.0	3.2.0
	RP-07	RP-000046	259	2	Introduction of mapping function information in Cell selection and	3.1.0	3.2.0
	RP-07	RP-000046	263		Ciphering and integrity HFN	3.1.0	3.2.0
	RP-07	RP-000046	267		New SIB for UP	3.1.0	3.2.0
	RP-07	RP-000047	268		Removal of synchronization Case 3	3.1.0	3.2.0
	RP-07	RP-000047	271		TX Diversity	3.1.0	3.2.0
	RP-07	RP-000047	272		Update of tabular format clause 10	3.1.0	3.2.0
	RP-07	RP-000047	273		ASN.1 description	3.1.0	3.2.0
06/00	RP-08	RP-000222	228	5	Downlink power control in compressed mode	3.2.0	3.3.0
	RP-08	RP-000222	260	1	Clarification on physical channel allocations in TDD	3.2.0	3.3.0
	RP-08	RP-000222	261	4	TDD Measurements and Reporting	3.2.0	3.3.0
	RP-08	RP-000222	262	4	Signalling of IEs related to System Information on FACH	3.2.0	3.3.0
	RP-08	RP-000222	265	3	Transport Format Combination Control	3.2.0	3.3.0
	RP-08	RP-000222	269	1	Signalling of partial failure in radio bearer related procedures	3.2.0	3.3.0
	RP-08	RP-000222	275		Clarification on PDCP info	3.2.0	3.3.0
	RP-08	RP-000222	279		Editorial modification on Transport Ch capability	3.2.0	3.3.0
	RP-08	RP-000222	280		Editorial modification on CN IE	3.2.0	3.3.0
	RP-08	RP-000222	281	3	Editorial modification on Physical CH IE	3.2.0	3.3.0
	RP-08	RP-000222	282	1	Editorial modification on ASN.1 description	3.2.0	3.3.0
	RP-08	RP-000222	283	1	IEs on SIB5/6	3.2.0	3.3.0
	RP-08	RP-000222	285	2	Re-establishment timer	3.2.0	3.3.0
	RP-08	RP-000222	286	1	CN DRX cycle coefficient	3.2.0	3.3.0
	RP-08	RP-000222	287	1	Cell Access Restriction	3.2.0	3.3.0
	RP-08	RP-000222	288	1	Cell selection and re-selection parameters	3.2.0	3.3.0
	RP-08	RP-000222	289	2	Modification on Measurement IE	3.2.0	3.3.0
	RP-08	RP-000222	291	1	RACH Transmission parameters	3.2.0	3.3.0
	RP-08	RP-000222	292	1	SCCPCH System Info	3.2.0	3.3.0
	RP-08	RP-000222	293	1	Addition of HFN for RRC CONNECTION RE-ESTABLISHMENT COMPLETE	3.2.0	3.3.0
	RP-08	RP-000223	294	1	RLC reconfiguration indicator	3.2.0	3.3.0
	RP-08	RP-000223	296	3	RLC Info	3.2.0	3.3.0

RP-08	RP-000223	297	1	Usage of Transport CH ID	3.2.0	3.3.0
RP-08	RP-000223	298	2	Transport format combination set	3.2.0	3.3.0
RP-08	RP-000223	300	1	Usage of U-RNTI and C-RNTI in DL DCCH message	3.2.0	3.3.0
RP-08	RP-000223	301		Description of Cell Update Procedure	3.2.0	3.3.0
RP-08	RP-000223	304	1	System information modification procedure	3.2.0	3.3.0
RP-08	RP-000223	305		Functional descriptions of the RRC messages	3.2.0	3.3.0
RP-08	RP-000223	306		Clarification of CTFC calculation	3.2.0	3.3.0
RP-08	RP-000223	307	3	Compressed mode parameters	3.2.0	3.3.0
RP-08	RP-000223	309	2	Signalling procedure for periodic local authentication	3.2.0	3.3.0
RP-08	RP-000223	310	5	Editorial corrections on security	3.2.0	3.3.0
RP-08	RP-000223	311	2	Security capability	3.2.0	3.3.0
RP-08	RP-000223	312	1	Corrections on ASN.1 definitions	3.2.0	3.3.0
RP-08	RP-000223	313	2	DRX cycle lower limit	3.2.0	3.3.0
RP-08	RP-000223	314	1	Removal of CPICH SIR measurement quantity	3.2.0	3.3.0
RP-08	RP-000223	315	1	Signalling connection release request	3.2.0	3.3.0
RP-08	RP-000223	318	1	Change to IMEI coding from BCD to hexadecimal	3.2.0	3.3.0
RP-08	RP-000223	319	1	Removal of RLC sequence numbers from RRC initialisation information	3.2.0	3.3.0
RP-08	RP-000223	320	3	Addition of the length of PDCP sequence numbers into PDCP info	3.2.0	3.3.0
RP-08	RP-000224	323	1	BSIC verification of GSM cells	3.2.0	3.3.0
RP-08	RP-000224	324		Reporting cell status	3.2.0	3.3.0
RP-08	RP-000224	325		RRC measurement filtering parameters	3.2.0	3.3.0
RP-08	RP-000224	326		Cell-reselection parameter signalling	3.2.0	3.3.0
RP-08	RP-000224	328	3	Multiplicity values	3.2.0	3.3.0
RP-08	RP-000224	329		Quality measurements	3.2.0	3.3.0
RP-08	RP-000224	330	4	CPCH Status Indication mode correction	3.2.0	3.3.0
RP-08	RP-000224	331	4	End of CPCH transmission	3.2.0	3.3.0
RP-08	RP-000224	332		Handover to UTRAN procedure	3.2.0	3.3.0
RP-08	RP-000224	333		Harmonization of access service classes in FDD and TDD	3.2.0	3.3.0
RP-08	RP-000224	334	1	Correction to usage of primary CCPCCH info and primary CPICH info	3.2.0	3.3.0
RP-08	RP-000224	335		Corrections and clarifications on system information handling	3.2.0	3.3.0
RP-08	RP-000224	336		Editorial corrections	3.2.0	3.3.0
RP-08	RP-000224	337	1	Editorial corrections on uplink timing advance	3.2.0	3.3.0
RP-08	RP-000224	339		Correction of Transport Format Combination tabular format and ASN.1	3.2.0	3.3.0
RP-08	RP-000224	340	1	UE variables	3.2.0	3.3.0
RP-08	RP-000224	342	1	General error handling	3.2.0	3.3.0
RP-08	RP-000224	344	1	System Information extensibility in ASN.1 definitions	3.2.0	3.3.0
RP-08	RP-000224	345		Usage of pilot bits	3.2.0	3.3.0
RP-08	RP-000224	346	3	RRC connection release procedure	3.2.0	3.3.0
RP-08	RP-000225	347	1	Alignment of Section 10.3 on methodology defined in 25.921	3.2.0	3.3.0
RP-08	RP-000225	348		Modifications of cell (re)selection parameters	3.2.0	3.3.0
RP-08	RP-000225	350	1	GPS time-of-week represented as seconds and fractions of seconds	3.2.0	3.3.0
RP-08	RP-000225	351	2	CPCH corrections	3.2.0	3.3.0
RP-08	RP-000225	352		PLMN type selection	3.2.0	3.3.0
RP-08	RP-000225	353	3	Paging and establishment cause values	3.2.0	3.3.0
RP-08	RP-000225	354		Common channel configurations	3.2.0	3.3.0
RP-08	RP-000225	355	2	Clarification of prioritization of logical channels in UE	3.2.0	3.3.0
RP-08	RP-000225	357	2	UE capability corrections	3.2.0	3.3.0
RP-08	RP-000225	358	2	Clarification of HFN	3.2.0	3.3.0
RP-08	RP-000225	359	3	Clarification of Integrity Protection	3.2.0	3.3.0
RP-08	RP-000225	360	1	RRC message size optimization regarding TrCH parameters	3.2.0	3.3.0
RP-08	RP-000225	361		Protocol extensions in ASN	3.2.0	3.3.0
RP-08	RP-000225	362	1	Downloading of pre- defined configurations via SIB 16	3.2.0	3.3.0
RP-08	RP-000225	363	1	Optimization of System Information	3.2.0	3.3.0
RP-08	RP-000225	364	1	CPCH gain factor	3.2.0	3.3.0
RP-08	RP-000225	368	2	SFN Transmission Rate in TDD Mode	3.2.0	3.3.0
RP-08	RP-000225	371	1	Integrity Control	3.2.0	3.3.0
RP-08	RP-000225	372		Modification to measurement event evaluation	3.2.0	3.3.0
RP-08	RP-000225	373		System Information related parameters	3.2.0	3.3.0
RP-08	RP-000226	375	1	Changes in RB mapping info	3.2.0	3.3.0
RP-08	RP-000226	377		Editorial corrections to PRACH system information and Cell info	3.2.0	3.3.0
RP-08	RP-000226	378		Editorial Corrections to 25.331 Procedures and Tabular Format	3.2.0	3.3.0
RP-08	RP-000226	379	1	Corrections to figures and procedures for the failure cases	3.2.0	3.3.0
RP-08	RP-000226	380		Corrections on use of ORDERED_CONFIG	3.2.0	3.3.0
RP-08	RP-000226	382	1	Corrections to Transport Channel and RB Reconfiguration procedures	3.2.0	3.3.0
RP-08	RP-000226	383	1	Corrections to INITIAL DIRECT TRANSFER and UE CAPABILITY INFORMATION CONFIRM procedures	3.2.0	3.3.0
RP-08	RP-000226	384		Corrections to Transparent mode signalling info Tabular format and	3.2.0	3.3.0

				ASN.1		
	RP-08	RP-000226	385	Corrections to Soft Handover messages and procedures	3.2.0	3.3.0
	RP-08	RP-000226	387	Corrections to RRC CONNECTION REJECT procedures	3.2.0	3.3.0
	RP-08	RP-000226	388	1 Transport format combination in TDD and Transport channel ID	3.2.0	3.3.0
	RP-08	RP-000226	389	1 Signalling for dynamic TTI in TDD	3.2.0	3.3.0
	RP-08	RP-000226	390	1 Usage of DCCH for Shared Channel Allocation message	3.2.0	3.3.0
	RP-08	RP-000226	391	1 Correction to physical channel IEs in TDD	3.2.0	3.3.0
	RP-08	RP-000226	392	1 TDD preconfiguration for Handover to UTRAN	3.2.0	3.3.0
	RP-08	RP-000226	393	Corrections to measurement control descriptions and messages	3.2.0	3.3.0
	RP-08	RP-000226	394	1 Corrections on ASN.1 definitions	3.2.0	3.3.0
	RP-08	RP-000226	395	Addition of the Segmentation indication field for transparent mode RLC in the RLC Info	3.2.0	3.3.0
	RP-08	RP-000226	396	1 Radio Bearer identity for CCCH	3.2.0	3.3.0
	RP-08	RP-000226	397	1 ASN.1 definitions for RRC information between network nodes	3.2.0	3.3.0
	RP-08	RP-000227	398	1 NAS Routing	3.2.0	3.3.0
	RP-08	RP-000227	399	DPCCH power control preamble	3.2.0	3.3.0
	RP-08	RP-000227	400	2 Modifications of Assisted GPS Messages	3.2.0	3.3.0
	RP-08	RP-000227	401	Choice of Initial UE Identity	3.2.0	3.3.0
	RP-08	RP-000227	402	ANSI-41 information elements	3.2.0	3.3.0
	RP-08	RP-000227	404	1 RLC value ranges	3.2.0	3.3.0
	RP-08	RP-000227	408	1 HFN Reset	3.2.0	3.3.0
	RP-08	RP-000227	409	1 Clarification on ciphering parameters and integrity protection procedure in case of SRNS relocation	3.2.0	3.3.0
	RP-08	RP-000227	410	1 Clarification of compressed mode activation and configuration failure	3.2.0	3.3.0
	RP-08	RP-000227	412	1 Modification of the RLC Size IE	3.2.0	3.3.0
	RP-08	RP-000227	414	CPCH DL Power control	3.2.0	3.3.0
	RP-08	RP-000227	415	1 SFN measurements in TDD	3.2.0	3.3.0
09/00	RP-09	RP-000361	356	3 Clarification on multiplicity of PCH and PICH and S-CCPCH selection	3.3.0	3.4.0
	RP-09	RP-000361	403	3 Parameters to be stored in the USIM	3.3.0	3.4.0
	RP-09	RP-000361	413	3 Optimization of Inter-system handover message	3.3.0	3.4.0
	RP-09	RP-000361	416	2 Timing Advance in Handover Procedures	3.3.0	3.4.0
	RP-09	RP-000361	417	2 Synchronization of Timing Advance and Timing Deviation Measurement	3.3.0	3.4.0
	RP-09	RP-000361	418	Downlink Physical Channels Per Timeslot	3.3.0	3.4.0
	RP-09	RP-000361	419	TDD Mode DCH Reception in Cell DCH State	3.3.0	3.4.0
	RP-09	RP-000361	420	2 Downlink Power Control During DTX in TDD Mode	3.3.0	3.4.0
	RP-09	RP-000361	421	1 Paging Indicator Length Definition	3.3.0	3.4.0
	RP-09	RP-000361	422	Updating & alignment of RRC containers & handover to UTRAN information transfer	3.3.0	3.4.0
	RP-09	RP-000361	424	Default values for UE timers and counters	3.3.0	3.4.0
	RP-09	RP-000361	425	1 Security mode control	3.3.0	3.4.0
	RP-09	RP-000361	426	1 Corrections and Editorial updates to chapter 8	3.3.0	3.4.0
	RP-09	RP-000361	427	Corrections and editorial updates to chapter 10	3.3.0	3.4.0
	RP-09	RP-000361	428	Transition from CELL_DCH to CELL_PCH and URA_PCH state	3.3.0	3.4.0
	RP-09	RP-000361	430	Assisted GPS Messaging and Procedures	3.3.0	3.4.0
	RP-09	RP-000361	431	2 Corrections to Activation Time use	3.3.0	3.4.0
	RP-09	RP-000361	432	Editorial Corrections to measurement reporting range	3.3.0	3.4.0
	RP-09	RP-000361	434	4 Default DPCH offset value and DPCH offset	3.3.0	3.4.0
	RP-09	RP-000361	435	3 RLC info	3.3.0	3.4.0
	RP-09	RP-000362	437	Clarification of the description of IE semantics in "RB with PDCP information"	3.3.0	3.4.0
	RP-09	RP-000362	438	1 Editorial corrections on security	3.3.0	3.4.0
	RP-09	RP-000362	439	Editorial correction to RB mapping info	3.3.0	3.4.0
	RP-09	RP-000362	440	1 Compressed mode configuration failure	3.3.0	3.4.0
	RP-09	RP-000362	441	Gain factors for TDD	3.3.0	3.4.0
	RP-09	RP-000362	442	Introduction of Default DPCH Offset Value in TDD	3.3.0	3.4.0
	RP-09	RP-000362	444	1 Optimization of handover to UTRAN command	3.3.0	3.4.0
	RP-09	RP-000362	445	Editorial corrections	3.3.0	3.4.0
	RP-09	RP-000362	448	1 Mapping of channelisation code	3.3.0	3.4.0
	RP-09	RP-000362	449	2 DL TFCS Limitation	3.3.0	3.4.0
	RP-09	RP-000362	450	SIB offset	3.3.0	3.4.0
	RP-09	RP-000362	451	RRC CONNECTION RELEASE cause	3.3.0	3.4.0
	RP-09	RP-000362	452	Addition of RACH TFCS	3.3.0	3.4.0
	RP-09	RP-000362	453	2 Cell Identity	3.3.0	3.4.0
	RP-09	RP-000362	454	Editorial Modifications	3.3.0	3.4.0
	RP-09	RP-000362	455	1 TDD PRACH Power Control for Spreading Factor 8/16	3.3.0	3.4.0
	RP-09	RP-000362	456	TDD CCTrCH Repetition Length Definition	3.3.0	3.4.0
	RP-09	RP-000362	457	1 Reporting threshold of traffic volume measurements	3.3.0	3.4.0
	RP-09	RP-000362	459	2 UP GPS assistance data for SIB	3.3.0	3.4.0
	RP-09	RP-000362	461	1 Support of cell update confirm on CCCH	3.3.0	3.4.0

	RP-09	RP-000363	462	1	Max Window Size in RLC capabilities	3.3.0	3.4.0
	RP-09	RP-000363	463	3	UE handling of CFN	3.3.0	3.4.0
	RP-09	RP-000363	464	1	Correction of padding description in clause 12	3.3.0	3.4.0
	RP-09	RP-000363	465	1	Window size in RLC info	3.3.0	3.4.0
	RP-09	RP-000363	466	1	TFC Control Duration	3.3.0	3.4.0
	RP-09	RP-000363	467		System Information Block Tabular Information	3.3.0	3.4.0
	RP-09	RP-000363	469	1	Frequency encoding in inter-system handover messages	3.3.0	3.4.0
	RP-09	RP-000363	470		RRC message size optimization regarding TFS parameters	3.3.0	3.4.0
	RP-09	RP-000363	471	2	RACH selection	3.3.0	3.4.0
	RP-09	RP-000363	472		DRX cycle lower limit	3.3.0	3.4.0
	RP-09	RP-000363	474		Rx window size in RLC info	3.3.0	3.4.0
	RP-09	RP-000363	476	1	Corrections & optimizations regarding system information blocks of length 215..221	3.3.0	3.4.0
	RP-09	RP-000363	477	1	Corrections on 8.1.1 resulting from RRC review at R2#14	3.3.0	3.4.0
	RP-09	RP-000363	478	1	Corrections to the RRC connection release procedure	3.3.0	3.4.0
	RP-09	RP-000363	479	1	New release cause for signalling connection re-establishment	3.3.0	3.4.0
	RP-09	RP-000363	480	1	Correction to IE midamble shift and burst type	3.3.0	3.4.0
	RP-09	RP-000363	481	1	Correction in RLC info	3.3.0	3.4.0
	RP-09	RP-000363	483		Description of CTCH occasions	3.3.0	3.4.0
	RP-09	RP-000363	485	1	TDD CCTrCH UL/DL Pairing for Inner Loop Power Control	3.3.0	3.4.0
	RP-09	RP-000363	486	1	DCCH and BCCH Signalling of TDD UL OL PC Information	3.3.0	3.4.0
	RP-09	RP-000364	487	1	Broadcast SIBs for TDD UL OL PC Information	3.3.0	3.4.0
	RP-09	RP-000364	490	1	CPCH corrections	3.3.0	3.4.0
	RP-09	RP-000364	492	3	Corrections to Security IEs	3.3.0	3.4.0
	RP-09	RP-000364	494	1	Corrections to parameters to be stored in the USIM	3.3.0	3.4.0
	RP-09	RP-000364	496		Editorial corrections	3.3.0	3.4.0
	RP-09	RP-000364	497	2	Physical Shared Channel Allocation procedure	3.3.0	3.4.0
	RP-09	RP-000364	498		Correction to Transport Format Combination Control Message	3.3.0	3.4.0
	RP-09	RP-000364	499	1	Usage of Cell Parameter ID	3.3.0	3.4.0
	RP-09	RP-000364	500		RB description for SHCCH	3.3.0	3.4.0
	RP-09	RP-000364	501	1	Use of LI in UM	3.3.0	3.4.0
	RP-09	RP-000364	502	1	Minor Corrections to RRC Protocol Specification	3.3.0	3.4.0
	RP-09	RP-000364	503	1	Correction to Cell Update Cause	3.3.0	3.4.0
	RP-09	RP-000364	504		Correction on T307 definition	3.3.0	3.4.0
	RP-09	RP-000364	505		Corrections to relative priorities in RRC Protocol	3.3.0	3.4.0
	RP-09	RP-000364	506		Unification of Reconfiguration Procedures	3.3.0	3.4.0
	RP-09	RP-000364	507	1	Changes to section 8.2 proposed at Paris RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000364	508		Establishment Cause	3.3.0	3.4.0
	RP-09	RP-000364	509	1	PRACH partitioning	3.3.0	3.4.0
	RP-09	RP-000364	510		Editorial Correction on Active Set Update	3.3.0	3.4.0
	RP-09	RP-000364	511		Editorial Correction regarding system information	3.3.0	3.4.0
	RP-09	RP-000365	512	1	Clarification on Reporting Cell Status	3.3.0	3.4.0
	RP-09	RP-000365	513	1	Editorial corrections on RRC Connection Establishment and Release procedures NOTE: In subclause 8.1.4.6, the change from "decrease" to "increase" for V308 was decided to be incorrect after discussion on the TSG-RAN WG2 reflector and was not implemented	3.3.0	3.4.0
	RP-09	RP-000365	514		Gated Transmission Control Info	3.3.0	3.4.0
	RP-09	RP-000365	515	1	Cell selection/reselection parameters for SIB 3/4	3.3.0	3.4.0
	RP-09	RP-000365	516		Implementation of Ec/N0 parameters and optimization of SIB 11/12	3.3.0	3.4.0
	RP-09	RP-000365	517		PRACH Info	3.3.0	3.4.0
	RP-09	RP-000365	518	1	Uplink DPCH power control info	3.3.0	3.4.0
	RP-09	RP-000365	519		AICH power offset value range	3.3.0	3.4.0
	RP-09	RP-000365	520		Direct paging of RRC connected UE in CELL_PCH/URA_PCH NOTE: This CR was postponed in TSG-RAN #9 and was wrongly included in v3.4.0. This was corrected in v3.4.1	3.3.0	3.4.0
	RP-09	RP-000365	521		Corrections to Sections 1-7	3.3.0	3.4.0
	RP-09	RP-000365	522		Error handling for Uplink Physical Channel Control procedure	3.3.0	3.4.0
	RP-09	RP-000365	523		Corrections to downlink outer loop power control in compressed mode	3.3.0	3.4.0
	RP-09	RP-000365	524	1	Clarification on measurement procedure using compressed mode	3.3.0	3.4.0
	RP-09	RP-000365	525	1	Updates to cell and URA update procedures based on RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000365	526	1	Updates to RNTI allocation procedure based on RRC Ad Hoc	3.3.0	3.4.0
	RP-09	RP-000365	528		PRACH constant value	3.3.0	3.4.0
	RP-09	RP-000365	530	1	Corrections to the paging procedure	3.3.0	3.4.0
	RP-09	RP-000365	532	1	Moving of text from 25.304	3.3.0	3.4.0
	RP-09	RP-000365	533	1	Message extensibility	3.3.0	3.4.0
	RP-09	RP-000365	534	1	Additions to "State of RRC Procedure" in RRC Initialisation information, source RNC to target RNC	3.3.0	3.4.0
	RP-09	RP-000365	535	1	Support of codec negotiation	3.3.0	3.4.0

	-	-	-		Removal of contents of CR 520 from v3.4.0, because it was postponed at TSG-RAN #9 and by accident included anyway.	3.4.0	3.4.1
12/00	RP-10	RP-000570	536		Downlink outer-loop power control in compressed mode	3.4.1	3.5.0
	RP-10	RP-000570	537	1	Correction in the use of "U-RNTI Short"	3.4.1	3.5.0
	RP-10	RP-000570	538		Corrections related to UE Timing	3.4.1	3.5.0
	RP-10	RP-000570	539		Corrections to SFN-SFN definition	3.4.1	3.5.0
	RP-10	RP-000570	541	1	Corrections to definition and use of Activation Time	3.4.1	3.5.0
	RP-10	RP-000570	542		Corrections to logical channel priorities	3.4.1	3.5.0
	RP-10	RP-000570	543	1	Correction to codec negotiation	3.4.1	3.5.0
	RP-10	RP-000570	544	1	CFN-SFN observed time difference measurement	3.4.1	3.5.0
	RP-10	RP-000570	545	1	Correction to timing indication for hard handover	3.4.1	3.5.0
	RP-10	RP-000570	546	1	UE Radio Access Capability Corrections	3.4.1	3.5.0
	RP-10	RP-000570	548	1	RRC establishment and paging causes for NAS signalling	3.4.1	3.5.0
	RP-10	RP-000570	549		Corrections to Intra-frequency measurements and Traffic volume measurements	3.4.1	3.5.0
	RP-10	RP-000570	551	1	PRACH/RACH System information	3.4.1	3.5.0
	RP-10	RP-000570	553	1	GSM Measurement reporting	3.4.1	3.5.0
	RP-10	RP-000570	554	1	BLER measurement and quality target	3.4.1	3.5.0
	RP-10	RP-000570	556	1	Clarification of PDCP sequence number window terminology	3.4.1	3.5.0
	RP-10	RP-000570	559	1	Clarification on Error Handling	3.4.1	3.5.0
	RP-10	RP-000570	560		Removal of compressed mode measurement purpose "other"	3.4.1	3.5.0
	RP-10	RP-000570	561		Clarification of compressed mode measurement purpose "GSM"	3.4.1	3.5.0
	RP-10	RP-000570	564	2	Reporting multiple GSM cells	3.4.1	3.5.0
	RP-10	RP-000571	566	1	Number of RLS that can be removed in Active Set update	3.4.1	3.5.0
	RP-10	RP-000571	568	1	Clarification on Segment Index	3.4.1	3.5.0
	RP-10	RP-000571	571	3	RRC procedure performance requirements	3.4.1	3.5.0
	RP-10	RP-000571	572	1	Correction of newInterSystemCellList and MeasurementControlSysInfo in ASN.1	3.4.1	3.5.0
	RP-10	RP-000571	573	4	Removal of Flow Id concept while maintaining lu interface flexibility	3.4.1	3.5.0
	RP-10	RP-000571	574	2	Ciphering and reset	3.4.1	3.5.0
	RP-10	RP-000571	575	1	Corrections and clarifications concerning inter-RAT change procedures	3.4.1	3.5.0
	RP-10	RP-000571	576	1	General Security Clarifications	3.4.1	3.5.0
	RP-10	RP-000571	577		Clarification on RB 0	3.4.1	3.5.0
	RP-10	RP-000571	578		Clarification on the transition of RRC state	3.4.1	3.5.0
	RP-10	RP-000571	580	1	UP measurements for RRC information to target RNC	3.4.1	3.5.0
	RP-10	RP-000571	581		Correction on LCS reporting criteria	3.4.1	3.5.0
	RP-10	RP-000574	583	1	CSICH Corrections	3.4.1	3.5.0
	RP-10	RP-000571	584	1	Clarification to handling of satellite health issues	3.4.1	3.5.0
	RP-10	RP-000571	585		Clarification on activation time	3.4.1	3.5.0
	RP-10	RP-000571	586		Clarification on activation time for ciphering in TM	3.4.1	3.5.0
	RP-10	RP-000571	587	2	Measurement procedures and messages	3.4.1	3.5.0
	RP-10	RP-000571	590	1	Inter-RAT UE radio access capability	3.4.1	3.5.0
	RP-10	RP-000571	592	1	Clarification on cell update/URA update procedures	3.4.1	3.5.0
	RP-10	RP-000571	595	4	Protocol States and Process	3.4.1	3.5.0
	RP-10	RP-000571	596	1	System Information	3.4.1	3.5.0
	RP-10	RP-000715	597	5	RRC Connection Management Procedures, Generic procedures and actions	3.4.1	3.5.0
	RP-10	RP-000572	598	1	Paging Procedures	3.4.1	3.5.0
	RP-10	RP-000572	599		NAS signalling Procedures	3.4.1	3.5.0
	RP-10	RP-000572	600	3	Radio Bearer Control Procedures	3.4.1	3.5.0
	RP-10	RP-000572	601	1	Corrections to the Counter Check Procedure	3.4.1	3.5.0
	RP-10	RP-000572	602		Tabular Information and ASN.1	3.4.1	3.5.0
	RP-10	RP-000572	604	2	Corrections to Measurement Occasion concept	3.4.1	3.5.0
	RP-10	RP-000572	606		Corrections concerning optimisation of RB information	3.4.1	3.5.0
	RP-10	RP-000572	608	1	Corrections to security	3.4.1	3.5.0
	RP-10	RP-000572	609	1	Ciphering activation time for DPCH	3.4.1	3.5.0
	RP-10	RP-000572	610		Confirmation of signalling connection establishment	3.4.1	3.5.0
	RP-10	RP-000572	611	2	RACH Sub-channel signalling	3.4.1	3.5.0
	RP-10	RP-000572	613	2	Assistance data delivery for UP	3.4.1	3.5.0
	RP-10	RP-000572	614	1	Clarification of LCS measurements	3.4.1	3.5.0
	RP-10	RP-000572	615	2	Configuration of RLC PDU sizes for logical channels	3.4.1	3.5.0
	RP-10	RP-000574	616		PICH power offset for TDD	3.4.1	3.5.0
	RP-10	RP-000572	617		Correction for PDSCH power control for TDD	3.4.1	3.5.0
	RP-10	RP-000574	618		Usage of dynamic spreading factor in uplink	3.4.1	3.5.0
	RP-10	RP-000572	619		Correction of Midamble Shift for Burst Type 3	3.4.1	3.5.0
	RP-10	RP-000572	621		Correction of text concerning Scheduling of System Information	3.4.1	3.5.0
	RP-10	RP-000572	622	1	Alignment of GSM'99 BA Range concept and its inclusion in UTRA	3.4.1	3.5.0
	RP-10	RP-000572	623	1	Clarification of RB mapping info	3.4.1	3.5.0
	RP-10	RP-000572	624	1	Correction to UE multi-RAT capability	3.4.1	3.5.0
	RP-10	RP-000573	625		Correction to PDCP sequence number exchange during hard handover	3.4.1	3.5.0

	RP-10	RP-000573	628	2	DCH Quality Target	3.4.1	3.5.0
	RP-10	RP-000573	629	1	Simultaneous release of RBs and signalling connection	3.4.1	3.5.0
	RP-10	RP-000573	630		Correction on Transport Channel Reconfiguration	3.4.1	3.5.0
	RP-10	RP-000573	631		Limitation of DRX cycle length	3.4.1	3.5.0
	RP-10	RP-000574	632		Signalling of the alpha value in TDD for open loop power control	3.4.1	3.5.0
	RP-10	RP-000573	633		Support for improved compressed mode handling for TDD measurements	3.4.1	3.5.0
	RP-10	RP-000573	636		Usage of secondary CPICH and secondary scrambling code	3.4.1	3.5.0
	RP-10	RP-000573	639		Expiration time of SIB type 7, 14	3.4.1	3.5.0
	RP-10	RP-000573	640		Correction to integrity protection	3.4.1	3.5.0
	RP-10	RP-000684	641		Downlink Outer Loop Control	3.4.1	3.5.0

History

Document history		
V3.1.0	January 2000	Publication
V3.2.0	March 2000	Publication
V3.3.0	June 2000	Publication
V3.4.1	September 2000	Publication
V3.5.0	December 2000	Publication