

ETSI TS 138 455 V16.2.0 (2021-01)



**5G;
NG-RAN;
NR Positioning Protocol A (NRPPa)
(3GPP TS 38.455 version 16.2.0 Release 16)**



Reference

RTS/TSGR-0338455vg20

Keywords

5G

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from:
<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.
Information on the current status of this and other ETSI documents is available at

<https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx>

If you find errors in the present document, please send your comment to one of the following services:
<https://portal.etsi.org/People/CommitteeSupportStaff.aspx>

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.
The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2021.
All rights reserved.

DECT™, PLUGTESTS™, UMTS™ and the ETSI logo are trademarks of ETSI registered for the benefit of its Members.
3GPP™ and **LTE™** are trademarks of ETSI registered for the benefit of its Members and
of the 3GPP Organizational Partners.

oneM2M™ logo is a trademark of ETSI registered for the benefit of its Members and
of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Legal Notice	2
Modal verbs terminology.....	2
Foreword.....	7
1 Scope	8
2 References	8
3 Definitions, symbols and abbreviations	9
3.1 Definitions.....	9
3.2 Symbols.....	9
3.3 Abbreviations	9
4 General	10
4.1 Procedure specification principles.....	10
4.2 Forwards and backwards compatibility.....	10
4.3 Specification notations	10
5 NRPPa services	10
5.1 NRPPa procedure modules.....	11
5.2 Parallel transactions.....	11
6 Services expected from lower layer	11
7 Functions of NRPPa	11
8 NRPPa procedures.....	12
8.1 Elementary procedures	12
8.2 Location Information Transfer Procedures.....	13
8.2.1 E-CID Measurement Initiation	13
8.2.1.1 General	13
8.2.1.2 Successful Operation.....	13
8.2.1.3 Unsuccessful Operation	14
8.2.2 E-CID Measurement Failure Indication.....	14
8.2.2.1 General	14
8.2.2.2 Successful Operation.....	14
8.2.2.3 Unsuccessful Operation	14
8.2.3 E-CID Measurement Report	15
8.2.3.1 General	15
8.2.3.2 Successful Operation.....	15
8.2.3.3 Unsuccessful Operation	15
8.2.4 E-CID Measurement Termination	15
8.2.4.1 General	15
8.2.4.2 Successful Operation.....	15
8.2.4.3 Unsuccessful Operation	16
8.2.5 OTDOA Information Exchange.....	16
8.2.5.1 General	16
8.2.5.2 Successful Operation.....	16
8.2.5.3 Unsuccessful Operation	16
8.2.6 Positioning Information Exchange	16
8.2.6.1 General	16
8.2.6.2 Successful Operation.....	17
8.2.6.3 Unsuccessful Operation	17
8.2.6.4 Abnormal Conditions	17
8.2.7 Positioning Information Update.....	17
8.2.7.1 General	17
8.2.7.2 Successful Operation.....	18
8.2.7.3 Unsuccessful Operation	18

8.2.7.4	Abnormal Conditions	18
8.2.8	TRP Information Exchange	18
8.2.8.1	General	18
8.2.8.2	Successful Operation	18
8.2.8.3	Unsuccessful Operation	19
8.2.9	Positioning Activation	19
8.2.9.1	General	19
8.2.9.2	Successful Operation	19
8.2.9.3	Unsuccessful Operation	20
8.2.9.4	Abnormal Conditions	20
8.2.10	Positioning Deactivation	20
8.2.10.1	General	20
8.2.10.2	Successful Operation	21
8.2.10.3	Unsuccessful Operation	21
8.2.10.4	Abnormal Conditions	21
8.3	Management Procedures	21
8.3.1	Error Indication	21
8.3.1.1	General	21
8.3.1.2	Successful Operation	21
8.3.1.3	Abnormal Conditions	22
8.4	Assistance Information Transfer Procedures	22
8.4.1	Assistance Information Control	22
8.4.1.1	General	22
8.4.1.2	Successful Operation	22
8.4.1.3	Abnormal Conditions	23
8.4.2	Assistance Information Feedback	23
8.4.2.1	General	23
8.4.2.2	Successful Operation	23
8.4.2.3	Abnormal Conditions	23
8.5	Measurement Information Transfer	23
8.5.1	Measurement	23
8.5.1.1	General	23
8.5.1.2	Successful Operation	24
8.5.1.3	Unsuccessful Operation	24
8.5.1.4	Abnormal Conditions	24
8.5.2	Measurement Report	25
8.5.2.1	General	25
8.5.2.2	Successful Operation	25
8.5.3	Measurement Update	25
8.5.3.1	General	25
8.5.3.2	Successful Operation	25
8.5.3.3	Unsuccessful Operation	25
8.5.3.4	Abnormal Conditions	25
8.5.4	Measurement Abort	26
8.5.4.1	General	26
8.5.4.2	Successful Operation	26
8.5.4.3	Unsuccessful Operation	26
8.5.4.4	Abnormal Conditions	26
8.5.5	Measurement Failure Indication	26
8.5.5.1	General	26
8.5.5.2	Successful Operation	26
9	Elements for NRPPa Communication	27
9.0	General	27
9.1	Message Functional Definition and Content	27
9.1.1	Messages for Location Information Transfer Procedures	27
9.1.1.1	E-CID MEASUREMENT INITIATION REQUEST	27
9.1.1.2	E-CID MEASUREMENT INITIATION RESPONSE	28
9.1.1.3	E-CID MEASUREMENT INITIATION FAILURE	29
9.1.1.4	E-CID MEASUREMENT FAILURE INDICATION	29
9.1.1.5	E-CID MEASUREMENT REPORT	29
9.1.1.6	E-CID MEASUREMENT TERMINATION COMMAND	30

9.1.1.7	OTDOA INFORMATION REQUEST	30
9.1.1.8	OTDOA INFORMATION RESPONSE	31
9.1.1.9	OTDOA INFORMATION FAILURE	32
9.1.1.10	POSITIONING INFORMATION REQUEST	32
9.1.1.11	POSITIONING INFORMATION RESPONSE	32
9.1.1.12	POSITIONING INFORMATION FAILURE	32
9.1.1.13	POSITIONING INFORMATION UPDATE	33
9.1.1.14	TRP INFORMATION REQUEST	33
9.1.1.15	TRP INFORMATION RESPONSE	33
9.1.1.16	TRP INFORMATION FAILURE	34
9.1.1.17	POSITIONING ACTIVATION REQUEST	34
9.1.1.18	POSITIONING ACTIVATION RESPONSE	34
9.1.1.19	POSITIONING ACTIVATION FAILURE	35
9.1.1.20	POSITIONING DEACTIVATION	35
9.1.2	Messages for Management Procedures	35
9.1.2.1	ERROR INDICATION	35
9.1.3	Messages for Assistance Information Transfer Procedures	36
9.1.3.1	ASSISTANCE INFORMATION CONTROL	36
9.1.3.2	ASSISTANCE INFORMATION FEEDBACK	36
9.1.4	Messages for Measurement Information Transfer Procedures	36
9.1.4.1	MEASUREMENT REQUEST	36
9.1.4.2	MEASUREMENT RESPONSE	38
9.1.4.3	MEASUREMENT FAILURE	38
9.1.4.4	MEASUREMENT REPORT	38
9.1.4.5	MEASUREMENT UPDATE	39
9.1.4.6	MEASUREMENT ABORT	39
9.1.4.7	MEASUREMENT FAILURE INDICATION	39
9.2	Information Element definitions	40
9.2.0	General	40
9.2.1	Cause	40
9.2.2	Criticality Diagnostics	41
9.2.3	Message Type	42
9.2.4	NRPPa Transaction ID	42
9.2.5	E-CID Measurement Result	42
9.2.6	NG-RAN CGI	45
9.2.7	CGI EUTRA	45
9.2.8	PLMN Identity	46
9.2.9	NR CGI	46
9.2.10	NG-RAN Access Point Position	46
9.2.11	TAC	47
9.2.12	Cell Portion ID	47
9.2.13	Other-RAT Measurement Result	47
9.2.14	WLAN Measurement Result	49
9.2.15	OTDOA Cell Information	50
9.2.16	PRS Muting Configuration EUTRA	53
9.2.17	PRS Frequency Hopping Configuration EUTRA	53
9.2.18	TDD Configuration EUTRA	54
9.2.19	Assistance Information	54
9.2.20	PosSIB Segments	55
9.2.21	Assistance Information Meta Data	55
9.2.22	Positioning SIB Type	55
9.2.23	Assistance Information Failure List	56
9.2.24	TRP ID	56
9.2.25	TRP Information	57
9.2.27	Requested SRS Transmission Characteristics	58
9.2.28	SRS Configuration	58
9.2.29	SRS Resource	60
9.2.30	Positioning SRS Resource	60
9.2.31	SRS Resource Set	61
9.2.32	Positioning SRS Resource Set	62
9.2.33	SRS Resource Set ID	62
9.2.34	Spatial Relation Information	63

9.2.35	SRS Resource Trigger	63
9.2.36	SFN Initialisation Time	63
9.2.37	TRP Measurement Result	64
9.2.38	UL Angle of Arrival	64
9.2.39	UL RTOA Measurement	64
9.2.40	gNB Rx-Tx Time Difference	65
9.2.41	Additional Path List	65
9.2.42	Time Stamp	65
9.2.43	Measurement Quality	66
9.2.44	PRS Configuration	66
9.2.45	Spatial Direction Information	68
9.2.46	Geographical Coordinates	68
9.2.47	DL-PRS Resource Coordinates	68
9.2.48	Relative Geodetic Location	69
9.2.49	NG-RAN High Accuracy Access Point Position	70
9.2.50	Relative Cartesian Location	70
9.2.51	Reference Point	71
9.2.52	Location Uncertainty	71
9.2.53	Pathloss Reference Information	71
9.2.54	SSB Information	71
9.2.55	SSB Time/Frequency Configuration	72
9.2.56	DL-PRS Muting Pattern	72
9.2.57	Measurement Beam Information	72
9.2.58	NR-PRS Beam Information	73
9.2.59	Positioning Broadcast Cells	73
9.3	Message and Information Element Abstract Syntax (with ASN.1)	74
9.3.1	General	74
9.3.2	Usage of Private Message Mechanism for Non-standard Use	74
9.3.3	Elementary Procedure Definitions	74
9.3.4	PDU Definitions	80
9.3.5	Information Element definitions	94
9.3.6	Common definitions	139
9.3.7	Constant definitions	140
9.3.8	Container definitions	143
9.4	Message transfer syntax	147
9.5	Timers	147
10	Handling of unknown, unforeseen and erroneous protocol data	147
Annex A (informative):	Change history	148
History		149

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the control plane radio network layer signalling procedures between a NG-RAN node and the LMF. NRPPa supports the concerned functions by signalling procedures defined in this document.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 38.413: "NG-RAN; NG Application Protocol (NGAP)".
- [3] 3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage 2".
- [4] Void.
- [5] 3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling".
- [6] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER) ".
- [7] 3GPP TS 36.104: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Base Station (BS) radio transmission and reception".
- [8] 3GPP TS 23.032: "Technical Specification Group Services and System Aspects; Universal Geographical Area Description (GAD)".
- [9] 3GPP TS 36.133: "Evolved Universal Terrestrial Radio Access (E-UTRA); Requirements for support of radio resource management".
- [10] 3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Physical Channels and Modulation".
- [11] IEEE Std 802.11™-2012, IEEE Standard for Information technology - Telecommunications and information exchange between systems - Local and metropolitan area network.
- [12] 3GPP TS 36.455: " Evolved Universal Terrestrial Radio Access (E-UTRA); LTE Positioning Protocol A (LPPa)".
- [13] 3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol specification".
- [14] 3GPP TS 37.355: " Technical Specification Group Radio Access Network; LTE Positioning Protocol (LPP)".
- [15] 3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification".
- [16] 3GPP TS 38.133: "NR; Requirements for support of radio resource management".
- [17] 3GPP TS 36.214: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer (PHY); Measurements".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

NG-RAN node: as defined in TS 38.300 [3].

ng-eNB: as defined in TS 38.300 [3].

3.2 Symbols

For the purposes of the present document, the following symbols apply:

<symbol> <Explanation>

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

ARP	Antenna Reference Point
BDS	BeiDou Navigation Satellite System
CID	Cell-ID (positioning method)
DL-PRS	Downlink Positioning Reference Signal
E-CID	Enhanced Cell-ID (positioning method)
EGNOS	European Geostationary Navigation Overlay Service
GAGAN	GPS Aided Geo Augmented Navigation
GLONASS	GLObal'naya NAVigatsionnaya Sputnikovaya Sistema (Engl.: Global Navigation Satellite System)
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
LMF	Location Management Function
LPP	LTE Positioning Protocol
MSAS	Multi-functional Satellite Augmentation System
NavIC	NAVigation with Indian Constellation
NRPPa	NR Positioning Protocol A
OTDOA	Observed Time Difference of Arrival
posSIB	Positioning SIB
PRS	Positioning Reference Signal (for E-UTRA)
QZSS	Quasi-Zenith Satellite System
RSRP	Reference Signal Received Power
RSSI	Received Signal Strength Indicator
RSTD	Reference Signal Time Difference
SBAS	Space Based Augmentation System
SRS	Sounding Reference Signal
TRP	Transmission-Reception Point
UE	User Equipment
UL-AoA	Uplink Angle of Arrival
UL-RTOA	Uplink Relative Time of Arrival
UL-SRS	Uplink Sounding Reference Signal
WAAS	Wide Area Augmentation System
Z-AoA	Zenith Angles of Arrival

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating NG-RAN Node exactly and completely. Any rule that specifies the behaviour of the originating NG-RAN Node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:

- 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

- 2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure	When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Handover Preparation procedure.
Message	When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. ERROR INDICATION message.
IE	When referring to an information element (IE) in the specification the <i>Information Element Name</i> is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. <i>Cause</i> IE.
Value of an IE	When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

5 NRPPa services

The present clause describes the services an NG -RAN Node offers to the LMF.

5.1 NRPPa procedure modules

The procedures are divided into two modules as follows:

1. NRPPa Location Information Transfer Procedures;
2. NRPPa Management Procedures;

The NRPPa Location Information Transfer Procedures module contains procedures used to handle the transfer of positioning related information between NG-RAN Node and LMF.

The Management Procedures module contains procedures that are not related specifically to positioning, i.e. error handling.

5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer may have more than one ongoing NRPPa procedure.

6 Services expected from lower layer

Within 5G RAN, NRPPa protocol uses the services provided by the NGAP protocol. An NRPPa message is carried inside an NGAP message.

NGAP signalling is described in TS 38.413 [2].

7 Functions of NRPPa

The NRPPa protocol provides the following functions:

- E-CID Location Information Transfer. This function allows the NG-RAN node to exchange location information with LMF for the purpose of E-CID positioning and NR E-CID positioning.
- OTDOA Information Transfer. This function allows the NG-RAN node to exchange information with the LMF for the purpose of OTDOA positioning.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Assistance Information Transfer. This function allows the LMF to exchange information with the NG-RAN node for the purpose of assistance information broadcasting.
- Positioning Information Transfer. This function allows the NG-RAN node to exchange positioning information with the LMF for the purpose of positioning.
- Measurement Information Transfer. This function allows the LMF to exchange measurement information with the NG-RAN node for the purpose of positioning.
- TRP Information Transfer. This function allows an LMF to obtain TRP related information from an NG-RAN node.

The mapping between the above functions and NRPPa EPs is shown in the table below.

Table 7-1: Mapping between NRPPa functions and NRPPa EPs

Function	Elementary Procedure(s)
E-CID Location Information Transfer	a) E-CID Measurement Initiation b) E-CID Measurement Failure Indication c) E-CID Measurement Report d) E-CID Measurement Termination
OTDOA Information Transfer	OTDOA Information Exchange
Assistance Information Transfer	a) Assistance Information Control b) Assistance Information Feedback
Reporting of General Error Situations	Error Indication
Positioning Information Transfer	a) Positioning Information Exchange b) Positioning Information Update c) Positioning Activation d) Positioning Deactivation
TRP Information Transfer	TRP Information Exchange
Measurement Information Transfer	a) Measurement b) Measurement Update c) Measurement Report d) Measurement Abort e) Measurement Failure Indication

8 NRPPa procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
E-CID Measurement Initiation	E-CID MEASUREMENT INITIATION REQUEST	E-CID MEASUREMENT INITIATION RESPONSE	E-CID MEASUREMENT INITIATION FAILURE
OTDOA Information Exchange	OTDOA INFORMATION REQUEST	OTDOA INFORMATION RESPONSE	OTDOA INFORMATION FAILURE
Positioning Information Exchange	POSITIONING INFORMATION REQUEST	POSITIONING INFORMATION RESPONSE	POSITIONING INFORMATION FAILURE
TRP Information Exchange	TRP INFORMATION REQUEST	TRP INFORMATION RESPONSE	TRP INFORMATION FAILURE
Measurement	MEASUREMENT REQUEST	MEASUREMENT RESPONSE	MEASUREMENT FAILURE
Positioning Activation	POSITIONING ACTIVATION REQUEST	POSITIONING ACTIVATION RESPONSE	POSITIONING ACTIVATION FAILURE

Table 8.1-2: Class 2 Elementary Procedures

Elementary Procedure	Initiating Message
E-CID Measurement Failure Indication	E-CID MEASUREMENT FAILURE INDICATION
E-CID Measurement Report	E-CID MEASUREMENT REPORT
E-CID Measurement Termination	E-CID MEASUREMENT TERMINATION COMMAND
Error Indication	ERROR INDICATION
Assistance Information Control	ASSISTANCE INFORMATION CONTROL
Assistance Information Feedback	ASSISTANCE INFORMATION FEEDBACK
Positioning Information Update	POSITIONING INFORMATION UPDATE
Measurement Report	MEASUREMENT REPORT
Measurement Update	MEASUREMENT UPDATE
Measurement Abort	MEASUREMENT ABORT
Measurement Failure Indication	MEASUREMENT FAILURE INDICATION
Positioning Deactivation	POSITIONING DEACTIVATION

8.2 Location Information Transfer Procedures

8.2.1 E-CID Measurement Initiation

8.2.1.1 General

The purpose of E-CID Measurement Initiation procedure is to allow the LMF to request the NG-RAN node to report E-CID measurements used by LMF to compute the location of the UE.

8.2.1.2 Successful Operation

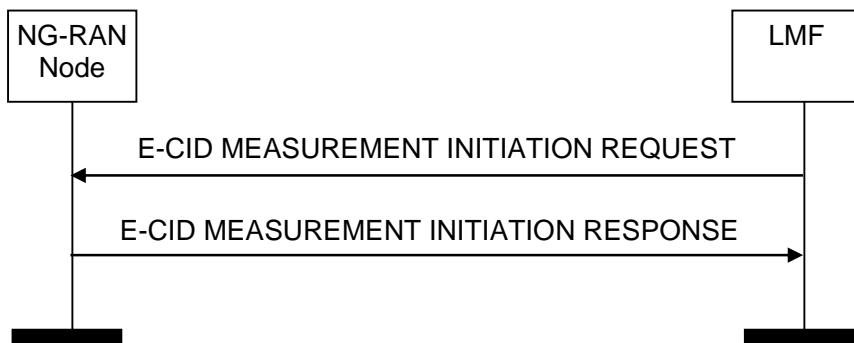


Figure 8.2.1.2-1: E-CID Measurement Initiation procedure, successful operation

The LMF initiates the procedure by sending an E-CID MEASUREMENT INITIATION REQUEST message. If the NG-RAN node is able to initiate the requested E-CID measurements, it shall reply with the E-CID MEASUREMENT INITIATION RESPONSE message.

The *Measured Results* IE shall be included in the *E-CID Measurement Result* IE of the E-CID MEASUREMENT INITIATION RESPONSE message when measurement results other than the "Cell-ID" have been requested.

If the *Report Characteristics* IE is set to "OnDemand", the NG-RAN node shall return the result of the measurement in the E-CID MEASUREMENT INITIATION RESPONSE message including, if available, the *NG-RAN Access Point Position* IE in the *E-CID Measurement Result* IE, and the LMF shall consider that the E-CID measurements for the UE has been terminated by the NG-RAN node. If available, the NG-RAN node shall include the *Cell Portion ID* IE in the E-CID MEASUREMENT INITIATION RESPONSE message. Upon reception of the *Cell Portion ID* IE, the LMF may use the value as the cell portion for the measurement. If the *Report Characteristics* IE is set to "OnDemand" and the

Inter-RAT Measurement Quantities IE is included in the E-CID MEASUREMENT INITIATION REQUEST message, the NG-RAN node shall, if supported, provide the corresponding measurements, if available in the NG-RAN node, in the *Inter-RAT Measurement Result* IE in E-CID MEASUREMENT INITIATION RESPONSE message. If the *Report Characteristics* IE is set to "OnDemand" and the *WLAN Measurement Quantities* IE is included in the E-CID MEASUREMENT INITIATION REQUEST message, the NG-RAN node shall, if supported, provide the corresponding measurements, if available in the NG-RAN node, in the *WLAN Measurement Result* IE in E-CID MEASUREMENT INITIATION RESPONSE message.

If the *Report Characteristics* IE is set to "Periodic", the NG-RAN node shall initiate the requested measurements and shall reply with the E-CID MEASUREMENT INITIATION RESPONSE message without including either the *E-CID Measurement Result* IE or the *Cell Portion ID* IE in this message. The NG-RAN node shall then periodically initiate the E-CID Measurement Report procedure for the measurements, with the requested reporting periodicity.

8.2.1.3 Unsuccessful Operation

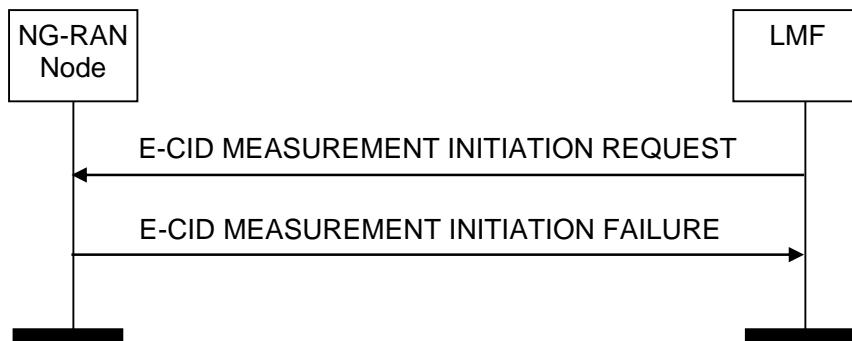


Figure 8.2.1.3-1: E-CID Measurement Initiation procedure, unsuccessful operation

If the NG-RAN node is not able to initiate at least one of the requested E-CID measurements, the NG-RAN node shall respond with an E-CID MEASUREMENT INITIATION FAILURE message.

8.2.2 E-CID Measurement Failure Indication

8.2.2.1 General

The purpose of the E-CID Measurement Failure Indication procedure is for the NG-RAN node to notify the LMF that the E-CID measurements previously requested with the E-CID Measurement Initiation procedure can no longer be reported.

8.2.2.2 Successful Operation



Figure 8.2.2.2-1: E-CID Measurement Failure Indication, successful operation

Upon reception of the E-CID MEASUREMENT FAILURE INDICATION message, the LMF shall consider that the E-CID measurements for the UE have been terminated by the NG-RAN node.

8.2.2.3 Unsuccessful Operation

Not applicable.

8.2.3 E-CID Measurement Report

8.2.3.1 General

The purpose of E-CID Measurement Report procedure is for the NG-RAN node to provide the E-CID measurements for the UE to the LMF.

8.2.3.2 Successful Operation



Figure 8.2.3.2-1: E-CID Measurement Report procedure, successful operation

The NG-RAN node initiates the procedure by sending an E-CID MEASUREMENT REPORT message. The E-CID MEASUREMENT REPORT message contains the E-CID measurement results according to the measurement configuration in the respective E-CID MEASUREMENT INITIATION REQUEST message.

The *Measured Results* IE shall be included in the *E-CID Measurement Result* IE of the E-CID MEASUREMENT REPORT message when measurement results other than the "Cell-ID" have been requested.

If available, the NG-RAN node shall include the *NG-RAN Access Point Position* IE or the *Geographical Coordinates* IE which is the configured estimated serving antenna position in the *E-CID Measurement Result* IE within the E-CID MEASUREMENT REPORT message. Upon reception of this *NG-RAN Access Point Position* IE, the LMF may use the value as the geographical position of the NG-RAN access point.

If available, the NG-RAN node shall include the *Cell Portion ID* IE in the E-CID MEASUREMENT REPORT message. Upon reception of the *Cell Portion ID* IE, the LMF may use the value as the cell portion for the measurement.

8.2.3.3 Unsuccessful Operation

Not applicable.

8.2.4 E-CID Measurement Termination

8.2.4.1 General

The purpose of E-CID Measurement Termination procedure is to terminate periodical E-CID measurements for the UE performed by the NG-RAN node.

8.2.4.2 Successful Operation



Figure 8.2.4.2-1: E-CID Measurement Termination procedure, successful operation

The LMF initiates the procedure by generating an E-CID MEASUREMENT TERMINATION COMMAND message.

8.2.4.3 Unsuccessful Operation

Not applicable.

8.2.5 OTDOA Information Exchange

8.2.5.1 General

The purpose of the OTDOA Information Exchange procedure is to allow the LMF to request the NG-RAN node to transfer OTDOA information to the LMF.

8.2.5.2 Successful Operation

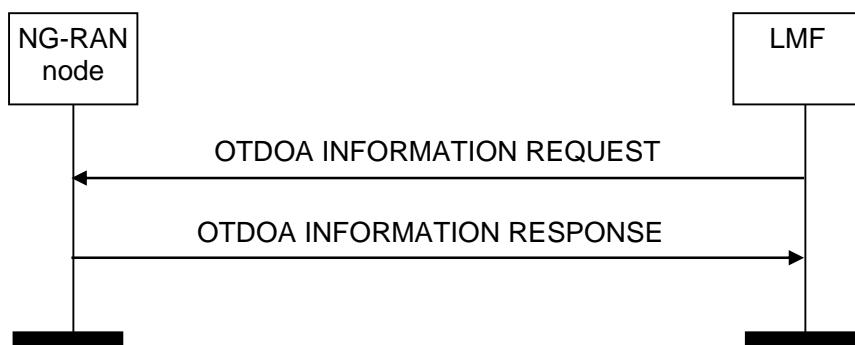


Figure 8.2.5.2-1: OTDOA Information Exchange procedure, successful operation

The LMF initiates the procedure by sending an OTDOA INFORMATION REQUEST message. The NG-RAN node responds with OTDOA INFORMATION RESPONSE message that contains the available OTDOA information applicable to the relevant cells/TPs.

8.2.5.3 Unsuccessful Operation

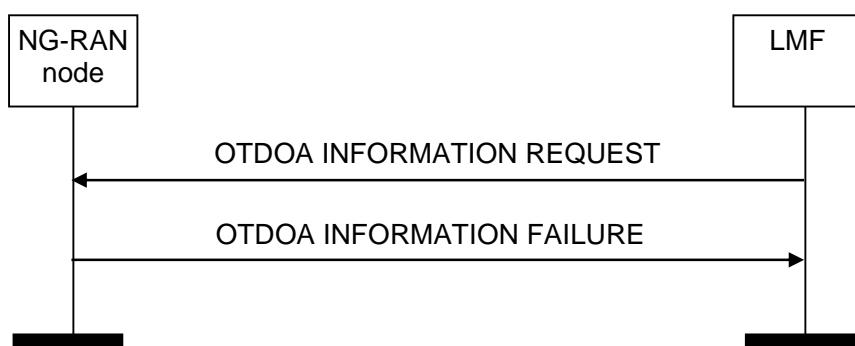


Figure 8.2.5.3-1: OTDOA Information Exchange procedure, unsuccessful operation

If the NG-RAN node does not have any OTDOA information to report, the NG-RAN node shall respond with an OTDOA INFORMATION FAILURE message.

8.2.6 Positioning Information Exchange

8.2.6.1 General

The Positioning Information Exchange procedure is initiated by the LMF to request to the NG-RAN node positioning information for the UE.

8.2.6.2 Successful Operation

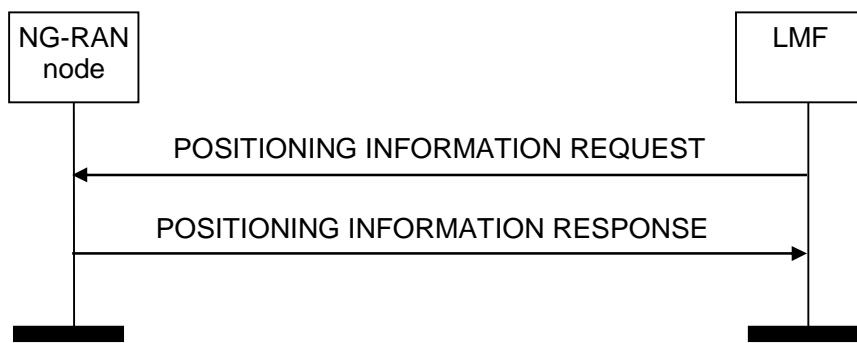


Figure 8.2.6.2-1: Positioning Information Exchange procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING INFORMATION REQUEST message to the NG-RAN node.

If the *Requested SRS Transmission Characteristics* IE is included in the POSITIONING INFORMATION REQUEST message, the NG-RAN node may take this information into account when configuring SRS transmissions for the UE, and it shall include the *SRS Configuration* IE and the *SFN Initialisation Time* IE in the POSITIONING INFORMATION RESPONSE message.

8.2.6.3 Unsuccessful Operation

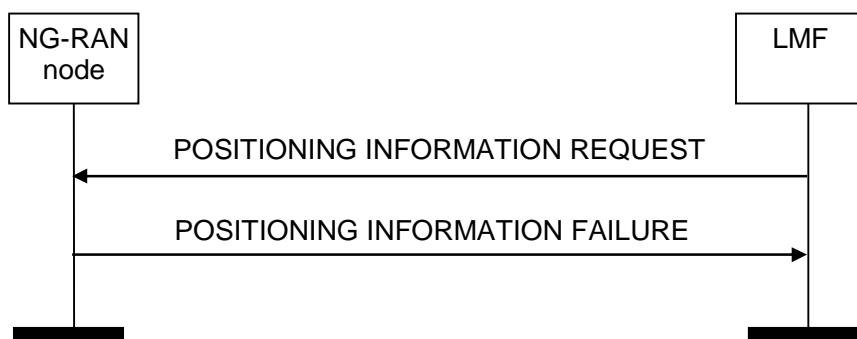


Figure 8.2.6.3-1: Positioning Information Exchange procedure, unsuccessful operation

If the *Requested SRS Transmission Characteristics* IE is included in the POSITIONING INFORMATION REQUEST message and the NG-RAN node is unable to configure any SRS transmissions for the UE, it shall respond with a POSITIONING INFORMATION FAILURE message. If a handover of the target UE has been triggered, the NG-RAN node shall send a POSITIONING INFORMATION FAILURE message with an appropriate cause value.

8.2.6.4 Abnormal Conditions

Void.

8.2.7 Positioning Information Update

8.2.7.1 General

The Positioning Information Update procedure is initiated by the NG-RAN node to indicate to the LMF that a change has occurred in the SRS configuration.

8.2.7.2 Successful Operation

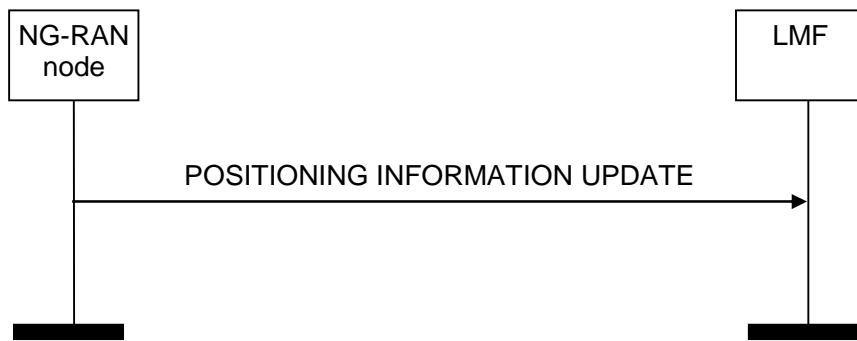


Figure 8.2.7.2-1: Positioning Information Update procedure, successful operation

The NG-RAN node initiates the procedure by sending a POSITIONING INFORMATION UPDATE message to the LMF. If the *SRS Configuration* IE is included in the POSITIONING INFORMATION UPDATE message, the LMF shall consider this information as the updated SRS Configuration for the UE. If the *SFN Initialisation Time* IE is included in the POSITIONING INFORMATION UPDATE message, the LMF shall consider this information as the SFN Initialisation Time associated to the SRS Configuration.

8.2.7.3 Unsuccessful Operation

Not Applicable.

8.2.7.4 Abnormal Conditions

Void.

8.2.8 TRP Information Exchange

8.2.8.1 General

The purpose of the TRP Information Exchange procedure is to allow the LMF to request the NG-RAN node to provide detailed information for TRPs hosted by the NG-RAN node.

8.2.8.2 Successful Operation

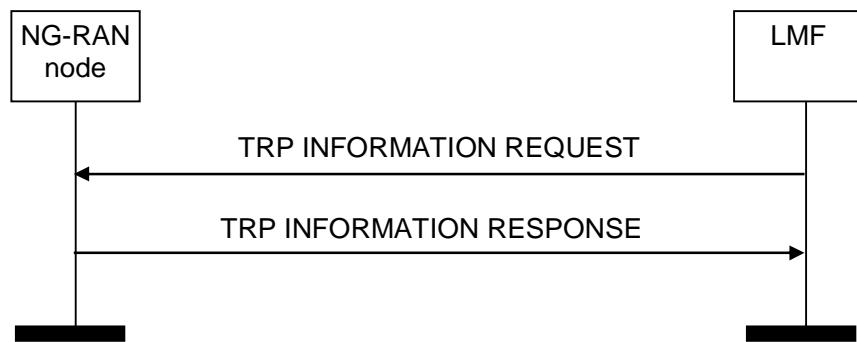


Figure 8.2.8.2-1: TRP Information Exchange procedure, successful operation

The LMF initiates the procedure by sending a TRP INFORMATION REQUEST message. The NG-RAN node responds with a TRP INFORMATION RESPONSE message that contains the requested TRP information.

If the *TRP List* IE is included in the TRP INFORMATION REQUEST message, the NG-RAN node should include in the TRP INFORMATION RESPONSE message, the requested information for all TRPs included in the *TRP List* IE.

If the *TRP List* IE is not included in the TRP INFORMATION REQUEST message, the NG-RAN node should include the requested information for all TRPs hosted by the NG-RAN node in the TRP INFORMATION RESPONSE message.

If the *PRS Muting* IE is included in the *PRS Configuration* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account as the muting information for the given PRS resource set.

If the *QCL Info* IE is included in the *PRS Configuration* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account for the given PRS resource list.

If the *DL-PRS Resource Coordinates* IE is included in the *Geographical Coordinates* IE in the *TRP Information* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account as the DL PRS Resource Coordinates relative to the TRP coordinate.

8.2.8.3 Unsuccessful Operation

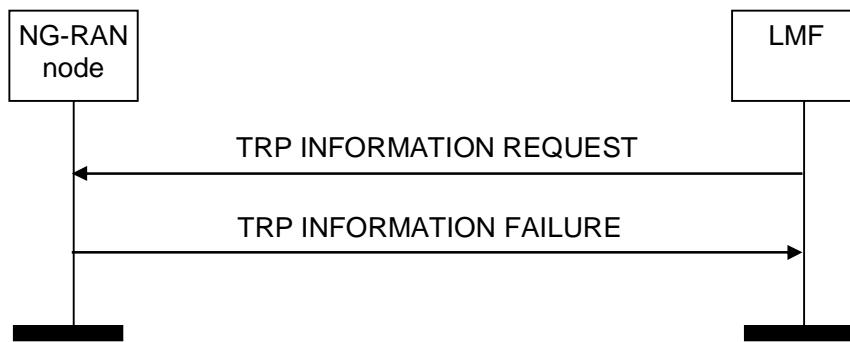


Figure 8.2.8.3-1: TRP Information Exchange procedure, unsuccessful operation

If the NG-RAN node cannot provide any of the requested information for any TRP, the NG-RAN node shall respond with a TRP INFORMATION FAILURE message.

8.2.9 Positioning Activation

8.2.9.1 General

The Positioning Activation procedure is initiated by the LMF to request the NG-RAN node to activate semi-persistent or trigger aperiodic UL SRS transmission by the UE.

8.2.9.2 Successful Operation

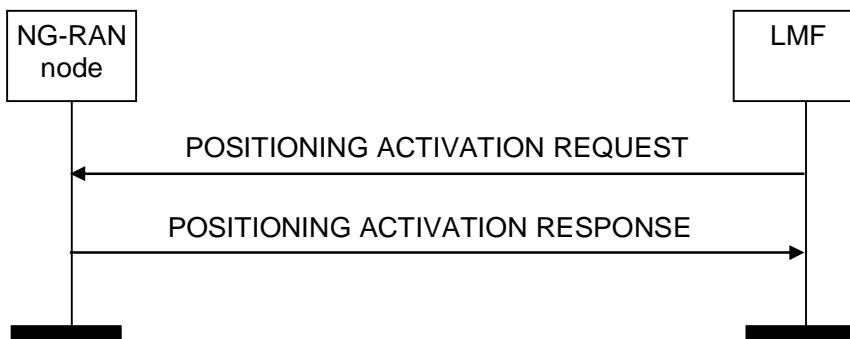


Figure 8.2.9.2-1: Positioning Activation procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING ACTIVATION REQUEST message to the NG-RAN node.

For semi-persistent UL SRS, the POSITIONING ACTIVATION REQUEST message includes an indication of the UL SRS resource set to be activated and may include the spatial relation for the semi-persistent UL SRS resource to be activated. For aperiodic UL SRS, if the *SRS Resource Trigger* IE is included in the POSITIONING ACTIVATION REQUEST message, the NG-RAN node shall take the value of this IE into account when triggering aperiodic SRS transmission by the UE.

If the *Activation Time* IE is included in the POSITIONING ACTIVATION REQUEST message, the NG-RAN node shall take the indicated value as the LMF's requested time for activation of the UE's SRS transmission.

Following successful activation of UL SRS transmission in the UE, the NG-RAN node shall respond with a POSITIONING ACTIVATION RESPONSE message. If the POSITIONING ACTIVATION RESPONSE message includes the *System Frame Number* and/or the *Slot Number* IEs, the LMF shall consider that the respective information indicates the activation time of SRS transmission by the UE.

8.2.9.3 Unsuccessful Operation

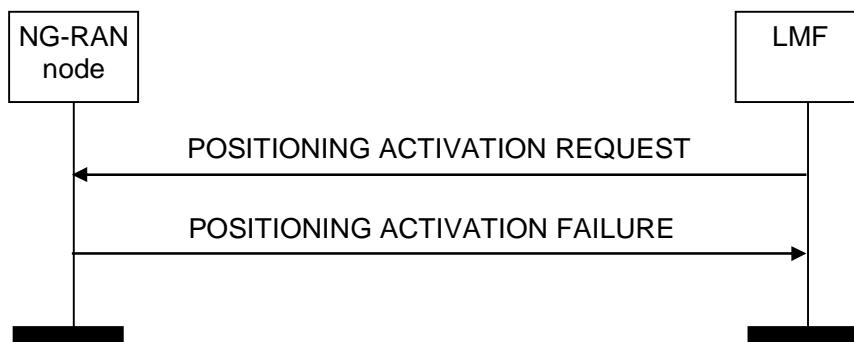


Figure 8.2.9.3-1: Positioning Activation procedure, unsuccessful operation

If the NG-RAN node is unable to activate UL SRS transmission in the UE, it shall respond with a POSITIONING ACTIVATION FAILURE message.

If the NG-RAN node is unable to trigger the aperiodic SRS transmission with the indicated *SRS Resource Trigger* IE, it shall respond with a POSITIONING ACTIVATION FAILURE message with an appropriate cause value.

8.2.9.4 Abnormal Conditions

Void.

8.2.10 Positioning Deactivation

8.2.10.1 General

The Positioning Deactivation procedure is initiated by the LMF to indicate to the NG-RAN node that UL SRS transmission should be deactivated in the UE.

8.2.10.2 Successful Operation



Figure 8.2.10.2-1: Positioning Deactivation procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING DEACTIVATION message to the NG-RAN node. This message shall include an indication of the UL SRS resource set to be deactivated or release all the related resources.

8.2.10.3 Unsuccessful Operation

Not Applicable.

8.2.10.4 Abnormal Conditions

Void.

8.3 Management Procedures

8.3.1 Error Indication

8.3.1.1 General

The Error Indication procedure is initiated by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

8.3.1.2 Successful Operation

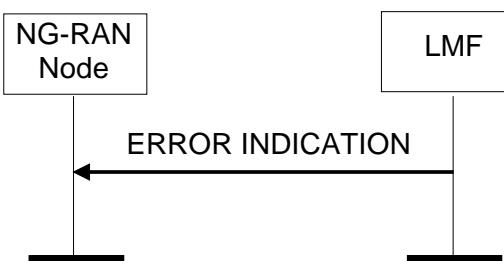


Figure 8.3.1.2-1: Error Indication procedure, LMF originated, successful operation



Figure 8.3.1.2-2: Error Indication procedure, NG-RAN node originated, successful operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause* IE or the *Criticality Diagnostics* IE.

8.3.1.3 Abnormal Conditions

Not applicable.

8.4 Assistance Information Transfer Procedures

8.4.1 Assistance Information Control

8.4.1.1 General

The purpose of the Assistance Information Control procedure is to allow the LMF to signal positioning assistance information to the NG-RAN Node for assistance information broadcasting.

8.4.1.2 Successful Operation



Figure 8.4.1.2-1: Assistance Information Control procedure

The LMF initiates the procedure by sending an ASSISTANCE INFORMATION CONTROL message.

If the *Assistance Information* IE is included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN Node shall, if supported, replace any previously stored assistance information and use the received information to configure assistance information broadcasting.

If the *Broadcast Priority* IE is included in the *Assistance Information* IE, the NG-RAN Node may take it into account when configuring broadcasting for the relevant information. Assistance information having the same Broadcast Priority value should receive the same treatment (i.e. broadcast by the NG-RAN Node or not broadcast).

If the *Broadcast* IE is included in the ASSISTANCE INFORMATION CONTROL message and set to "start", the NG-RAN Node may start broadcasting the assistance information. If the *Broadcast* IE is included in the ASSISTANCE INFORMATION CONTROL message and set to "stop", the NG-RAN Node may stop broadcasting the assistance information.

If the *Positioning Broadcast Cells* IE is included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN shall, if supported, consider that the received assistance information is applicable to the cells in this IE.

8.4.1.3 Abnormal Conditions

If the *Broadcast IE* is included in the ASSISTANCE INFORMATION CONTROL message and set to "start", and no assistance information is available, the NG-RAN Node shall consider the procedure as failed.

If neither the *Assistance Information IE* nor the *Broadcast IE* are included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN Node shall consider the procedure as failed.

8.4.2 Assistance Information Feedback

8.4.2.1 General

The purpose of the Assistance Information Feedback procedure is to allow the NG-RAN Node to give feedback to the LMF on assistance information broadcasting.

8.4.2.2 Successful Operation



Figure 8.4.2.2-1: Assistance Information Feedback procedure

If the *Assistance Information Failure List IE* is included in the ASSISTANCE INFORMATION FEEDBACK message, the LMF shall consider that assistance information broadcasting could not be configured for the relevant information.

If the *Positioning Broadcast Cells IE* is included in the ASSISTANCE INFORMATION FEEDBACK message, the LMF shall consider that the feedback provided is applicable to the cells in this IE.

8.4.2.3 Abnormal Conditions

Void.

8.5 Measurement Information Transfer

8.5.1 Measurement

8.5.1.1 General

The Measurement procedure allows the LMF to request one or more TRPs in the NG-RAN node to perform and report positioning measurements.

8.5.1.2 Successful Operation

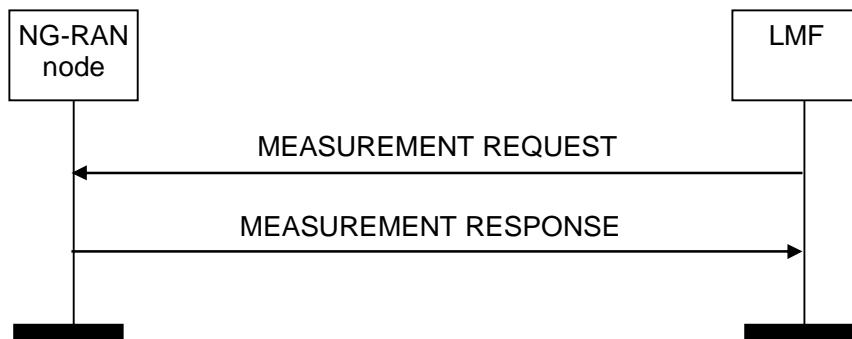


Figure 8.5.1.2.1: Measurement procedure. Successful operation.

The LMF initiates the procedure by sending a MEASUREMENT REQUEST message to the NG-RAN node, indicating in the *TRP Measurement Request List* IE the TRP(s) from which measurements are requested. The NG-RAN node shall use the included information to configure positioning measurements by the indicated TRP(s). If at least one of the requested measurements has been successful for at least one of the TRPs, the NG-RAN node shall reply with a MEASUREMENT RESPONSE message including the *TRP Measurement Response List* IE.

If the *Report Characteristics* IE is set to "OnDemand", the NG-RAN node shall return the corresponding measurement results in the MEASUREMENT RESPONSE message, and the LMF shall consider that this reporting has been terminated by the NG-RAN node. If the *Report Characteristics* IE is set to "Periodic", the NG-RAN node shall initiate the corresponding measurements, and it shall reply with the MEASUREMENT RESPONSE message without including any measurement results in the message. The NG-RAN node shall then periodically initiate the Measurement Report procedure for the corresponding measurements, with the requested reporting periodicity.

If the *Measurement Beam Information Request* IE is included in the MEASUREMENT REQUEST message, the NG-RAN node shall include the *Measurement Beam Information* IE in the *Measurement Result* IE of the MEASUREMENT RESPONSE message.

If the *Measurement Quality* IE is included in the *Measurement Result* IE in the MEASUREMENT RESPONSE message, the LMF may take it into account as the TRP estimate of the measurement quality. If the *Measurement Quality* IE includes the *Zenith Quality* IE, the LMF may take it into account within the angle measurement quality.

8.5.1.3 Unsuccessful Operation

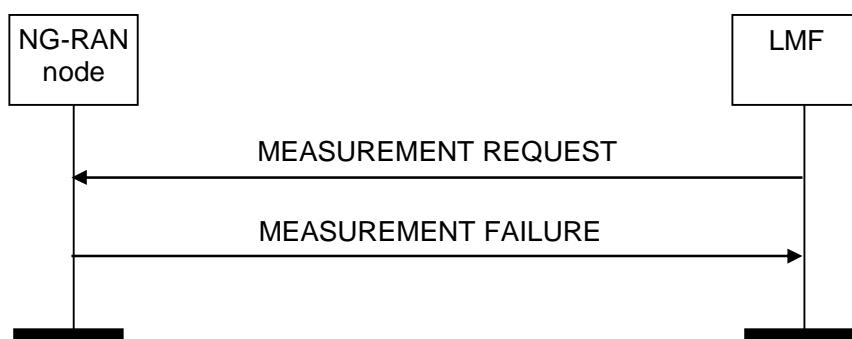


Figure 8.5.1.3.1: Measurement procedure. Unsuccessful operation.

If the NG-RAN node cannot configure any of the requested measurements for any of the TRPs in the *TRP Measurement Request List* IE of the MEASUREMENT REQUEST message, it shall respond with a MEASUREMENT FAILURE message with an appropriate cause value.

8.5.1.4 Abnormal Conditions

Not applicable.

8.5.2 Measurement Report

8.5.2.1 General

The Measurement Report procedure allows the NG-RAN node to report positioning measurements to the LMF.

8.5.2.2 Successful Operation



Figure 8.z.2.2.1: Measurement Report procedure. Successful operation.

The NG-RAN node initiates the procedure by sending a MEASUREMENT REPORT message to the LMF. The MEASUREMENT REPORT message contains the measurement results according to the associated measurement configuration.

8.5.3 Measurement Update

8.5.3.1 General

The Measurement Update Procedure allows the LMF to notify the NG-RAN node of a change in a previously configured measurement.

8.5.3.2 Successful Operation

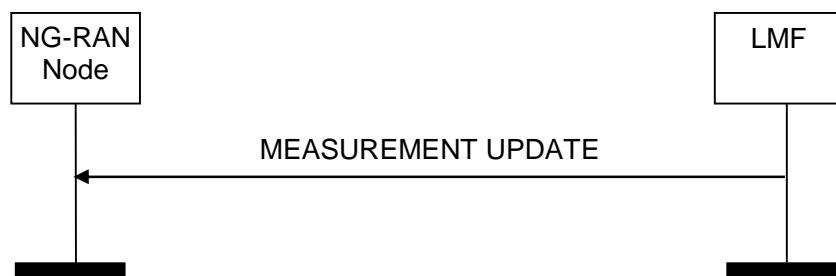


Figure 8.5.3.2.1: Measurement Update: Successful Operation.

The LMF initiates the procedure by sending a MEASUREMENT UPDATE message. Upon receiving the message, the NG-RAN node shall overwrite the previously received measurement configuration.

8.5.3.3 Unsuccessful Operation

Not applicable.

8.5.3.4 Abnormal Conditions

If the NG-RAN node cannot identify the previously requested measurement to be modified, it shall consider the procedure as failed and initiate local error handling.

8.5.4 Measurement Abort

8.5.4.1 General

The purpose of the Measurement Abort Procedure is to enable the LMF to abort an on-going measurement.

8.5.4.2 Successful Operation



Figure 8.5.4.2.1: Measurement Abort Procedure: Successful Operation.

The LMF initiates the procedure by sending a MEASUREMENT ABORT message.

Upon receiving this message, the NG-RAN node shall terminate the on-going measurement identified by the *LMF Measurement ID* IE and may release any resources previously allocated for the same measurement.

8.5.4.3 Unsuccessful Operation

Not applicable.

8.5.4.4 Abnormal Conditions

If the NG-RAN node cannot identify the previously requested measurement to be aborted, it shall ignore the MEASUREMENT ABORT message.

8.5.5 Measurement Failure Indication

8.5.5.1 General

The Measurement Failure Indication procedure allows the NG-RAN node to notify the LMF that the measurements previously requested with the Measurement procedure can no longer be reported.

8.5.5.2 Successful Operation



Figure 8.5.5.2.1: Measurement Report procedure. Successful operation.

Upon reception of the MEASUREMENT FAILURE INDICATION message, the LMF shall consider that the indicated measurements have been terminated by the NG-RAN node.

9 Elements for NRPPa Communication

9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the NRPPa protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 38.413 [2].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [5].

9.1 Message Functional Definition and Content

9.1.1 Messages for Location Information Transfer Procedures

9.1.1.1 E-CID MEASUREMENT INITIATION REQUEST

This message is sent by LMF to initiate E-CID measurements.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15 ,...,256)		YES	reject
Report Characteristics	M		ENUMERATED (OnDemand, Periodic,...)		YES	reject
Measurement Periodicity	C-ifReportCharacteristicsPeriodic		ENUMERATED (120ms, 240ms, 480ms, 640ms, 1024ms, 2048ms, 5120ms, 10240ms, 1min, 6min, 12min, 30min, 60min,..., 20480ms, 40960ms)	The codepoint 60min applies only for ng-eNB.	YES	reject
Measurement Quantities		1 .. <maxnoMeas>			EACH	reject
>Measurement Quantities Item	M		ENUMERATED (Cell-ID, Angle of Arrival, Timing Advance Type 1, Timing Advance Type 2, RSRP, RSRQ,..., SS-RSRP, SS-RSRQ, CSI-RSRP, CSI-RSRQ, NR Angle of Arrival)		-	-
Other-RAT Measurement Quantities		0 .. <maxnoMeas>			EACH	ignore
>Other-RAT Measurement Quantities Item	M		ENUMERATED (GERAN, UTRAN,..., NR, EUTRA)			
WLAN Measurement Quantities		0 .. <maxnoMeas>			EACH	ignore
>WLAN Measurement Quantities Item	M		ENUMERATED (WLAN, ...)		-	

Range bound	Explanation
maxnoMeas	Maximum no. of measured quantities that can be configured and reported with one message. Value is 64.

Condition	Explanation
ifReportCharacteristicsPeriodic	This IE shall be present if the Report Characteristics IE is set to the value "Periodic".

9.1.1.2 E-CID MEASUREMENT INITIATION RESPONSE

This message is sent by NG-RAN node to indicate that the requested E-CID measurement is successfully initiated.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
RAN UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
E-CID Measurement Result	O		9.2.5		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore
Cell Portion ID	O		9.2.12		YES	ignore
Other-RAT Measurement Result	O		9.2.13		YES	ignore
WLAN Measurement Result	O		9.2.14		YES	ignore

9.1.1.3 E-CID MEASUREMENT INITIATION FAILURE

This message is sent by NG-RAN node to indicate that the requested E-CID measurement cannot be initiated.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.4 E-CID MEASUREMENT FAILURE INDICATION

This message is sent by NG-RAN node to indicate that the previously requested E-CID measurement can no longer be reported.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
RAN UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
Cause	M		9.2.1		YES	ignore

9.1.1.5 E-CID MEASUREMENT REPORT

This message is sent by NG-RAN node to report the results of the requested E-CID measurement.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
RAN UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
E-CID Measurement Result	M		9.2.5		YES	ignore
Cell Portion ID	O		9.2.12		YES	ignore

9.1.1.6 E-CID MEASUREMENT TERMINATION COMMAND

This message is sent by the LMF to terminate the requested E-CID measurement.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
LMF UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject
RAN UE Measurement ID	M		INTEGER (1..15,..., 256)		YES	reject

9.1.1.7 OTDOA INFORMATION REQUEST

This message is sent by LMF to request OTDOA information.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
OTDOA Information Type		1 .. <maxnoOfTDOAtypeS>			EACH	reject
>OTDOA Information Item	M		ENUMERATED (pci, cellid, tac, earfcn, prsBandwidth, prsConfigIndex, cpLength, noDIFrames, noAntennaPorts, sFNInitTime, nG-RANAccessPointPosition, prsMutatingConfiguration, prsid, tpid, tpType, crsCPLength, dlBandwidth, multipleprsConfigurationsperCell, prsOccasionGroup, prsFrequencyHoppingConfiguration, ..., tddConfig)		-	-

Range bound	Explanation
maxnoOTDOAtypes	Maximum no. of OTDOA information types that can be requested and reported with one message. Value is 63.

9.1.1.8 OTDOA INFORMATION RESPONSE

This message is sent by NG-RAN node to provide OTDOA information.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
OTDOA Cells		1 .. <maxCellsInRANnode>		Served cells/TPs that broadcast PRS. May be used to signal multiple PRS configurations per cell/TPs (up to 3 are supported in this release).	GLOBAL	ignore
>OTDOA Cell Information	M		9.2.15		-	-
Criticality Diagnostics	O		9.2.2		YES	ignore

Range bound	Explanation

maxCellInRANnode	Maximum no. cells that can be served by a RAN Node. Value is 16384.
------------------	---

9.1.1.9 OTDOA INFORMATION FAILURE

This message is sent by NG-RAN node to indicate that the OTDOA information cannot be provided.

Direction: ng-eNB → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.10 POSITIONING INFORMATION REQUEST

This message is sent by LMF to request positioning information.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Requested SRS Transmission Characteristics	O		9.2.27		YES	ignore

9.1.1.11 POSITIONING INFORMATION RESPONSE

This message is sent by NG-RAN node to provide positioning information.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
SRS Configuration	O		9.2.28		YES	ignore
SFN Initialisation Time	O		9.2.36		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.12 POSITIONING INFORMATION FAILURE

This message is sent by NG-RAN node to indicate that the positioning information cannot be provided.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.13 POSITIONING INFORMATION UPDATE

This message is sent by NG-RAN node to indicate that a change in the SRS configuration has occurred.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
SRS Configuration	O		9.2.28		YES	ignore
SFN Initialisation Time	O		9.2.36		YES	ignore

9.1.1.14 TRP INFORMATION REQUEST

This message is sent by an LMF to request information for TRPs hosted by an NG-RAN node.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
TRP List		<i>0 .. 1</i>			YES	ignore
>TRP Item		<i>1 .. <maxnoTRPs></i>			EACH	ignore
>>TRP ID	M		9.2.24		-	
TRP Information Type List		<i>1</i>				
>TRP Information Type Item		<i>1 .. <maxnoTRPInfoTypes></i>			EACH	reject
>>TRP Information Type Item	M		ENUMERATED (nr pci, ng-ran cgi, nr arfcn, prs config, ssb config, sfn init time, spatial direction info, geo-coordinates, ...)			

Range bound	Explanation
maxnoTRPs	Maximum no. of TRPs in a NG-RAN node. Value is 65535
maxnoTRPInfoTypes	Maximum no of TRP information types that can be requested and reported with one message. Value is 64.

9.1.1.15 TRP INFORMATION RESPONSE

This message is sent by an NG-RAN node to convey TRP information to an LMF.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
TRP Information List		1			YES	ignore
>TRP Information Item	M	1 .. <maxnoTRPs>			EACH	ignore
>>TRP Information	M		9.2.25		-	
Criticality Diagnostics	O		9.2.2		YES	ignore

Range bound	Explanation
maxnoTRPs	Maximum no. of TRPs in a NG-RAN node. Value is 65535.

9.1.1.16 TRP INFORMATION FAILURE

This message is sent by an NG-RAN node to indicate that the requested TRP information cannot be provided to an LMF.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.17 POSITIONING ACTIVATION REQUEST

This message is sent by the LMF to cause the NG RAN node to activate/trigger UL SRS transmission by the UE.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
CHOICE SRS type	M				YES	reject
>Semi-persistent						
>>SRS Resource Set ID	M		9.2.33		-	-
>>SRS Spatial Relation	O		Spatial Relation Information 9.2.34		YES-	ignore-
>Aperiodic						
>>Aperiodic	M		ENUMERATED (true,...)		-	-
>>SRS Resource Trigger	O		9.2.35		-	-
Activation Time	O		SFN Initialisation Time 9.2.36	indicates the start time when the SRS activation is requested	YES	ignore

9.1.1.18 POSITIONING ACTIVATION RESPONSE

This message is sent by NG-RAN node to confirm successful UL SRS activation in the UE.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Criticality Diagnostics	O		9.2.2		YES	ignore
System Frame Number	O		INTEGER(0..10 23)		YES	ignore
Slot Number	O		INTEGER(0..79)		YES	ignore

9.1.1.19 POSITIONING ACTIVATION FAILURE

This message is sent by NG-RAN node to indicate that activation of UL SRS transmission in the UE was unsuccessful.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.1.20 POSITIONING DEACTIVATION

This message is sent by the LMF to cause the NG RAN node to deactivate UL SRS transmission or release all the transmission by the UE.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
CHOICE Abort Transmission	M				YES	Ignore
>Deactivate SRS Resource Set						
>>SRS Resource Set ID	M		9.2.33		-	
>Release ALL			NULL	the NG-RAN node configures UE to stop transmitting SRS for the positioning purpose		

9.1.2 Messages for Management Procedures

9.1.2.1 ERROR INDICATION

This message is used to indicate that some error has been detected in the NG-RAN node or in the LMF.

Direction: LMF → NG-RAN node and NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
Cause	O		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.3 Messages for Assistance Information Transfer Procedures

9.1.3.1 ASSISTANCE INFORMATION CONTROL

This message is sent by the LMF to transfer assistance information.

Direction: LMF → NG-RAN Node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Assistance Information	O		9.2.19		YES	reject
Broadcast	O		ENUMERATED (start, stop, ...)		YES	reject
Positioning Broadcast Cells	O		9.2.59	The cell(s) that are requested to broadcast posSIB(s) according to the <i>Assistance Information IE</i> .	YES	reject

9.1.3.2 ASSISTANCE INFORMATION FEEDBACK

This message is sent by the NG-RAN Node to give feedback on assistance information broadcasting.

Direction: NG-RAN Node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
Assistance Information Failure List	O		9.2.23		YES	reject
Positioning Broadcast Cells	O		9.2.59	The cells associated to the feedback provided in the <i>Assistance Information Failure List IE</i> .	YES	reject
Criticality Diagnostics	O		9.2.2		YES	ignore

9.1.4 Messages for Measurement Information Transfer Procedures

9.1.4.1 MEASUREMENT REQUEST

This message is sent by the LMF to request the NG-RAN node to configure a positioning measurement.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
TRP Measurement Request List		1			YES	reject
>TRP Measurement Request Item		1..<maxno ofMeasTRPs>			EACH	reject
>>TRP ID	M		9.2.24		-	
>>Search Window Information	O		9.2.26		-	
>>Cell ID	O		NR CGI 9.2.9	The Cell ID of the TRP identified by the <i>TRP ID</i> IE.	YES	ignore
Report Characteristics	M		ENUMERATED (OnDemand, Periodic, ...)		YES	reject
Measurement Periodicity	C-ifReportCharacteristicsPeriodic		ENUMERATED (120ms, 240ms, 480ms, 640ms, 1024ms, 2048ms, 5120ms, 10240ms, 1min, 6min, 12min, 30min, 60min,..., 20480ms, 40960ms)	The codepoint 60min is not applicable	YES	reject
TRP Measurement Quantities		1			YES	reject
>TRP Measurement Quantities Item		1 .. <maxnoPosMeas>			EACH	reject
>TRP Measurement Type	M		ENUMERATED (gNB-RxTxTimeDiff, UL-SRS-RSRP, UL-AoA, UL-RTOA,...)		-	
>Timing Reporting Granularity Factor	O		INTEGER (0..5)	TS 38.133 [16]	-	
SFN initialisation Time	O		9.2.36	If this IE is not present, the TRP may assume that the value is same as its own SFN initialisation time.	YES	ignore
SRS Configuration	O		9.2.28		YES	ignore
Measurement Beam Information Request	O		ENUMERATED (true,...)		YES	ignore
System Frame Number	O		INTEGER(0..1023)		YES	ignore
Slot Number	O		INTEGER(0..79)		YES	ignore

Condition	Explanation
ifReportCharacteristicsPeriodic	This IE shall be present if the <i>Report Characteristics</i> IE is set to the value "Periodic".

Range bound	Explanation
-------------	-------------

maxnoPosMeas	Maximum no. of measured quantities that can be configured and reported with one positioning measurement message. Value is 16384.
maxnoofMeasTRPs	Maximum no. of TRPs that can be included within one message. Value is 64.

9.1.4.2 MEASUREMENT RESPONSE

This message is sent by the NG-RAN node to report positioning measurements for the target UE.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
RAN Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
TRP Measurement Response List		0..1			YES	reject
>TRP Measurement Response Item		1..<maxno ofMeasTRPs>			EACH	reject
>>TRP ID	M		9.2.24		-	
>> TRP Measurement Result	M		9.2.37		-	
>>Cell ID	O		NR CGI 9.2.9	The Cell ID of the TRP identified by the <i>TRP ID</i> IE.	YES	ignore
Criticality Diagnostics	O		9.2.11		YES	ignore

Range bound	Explanation
maxnoofMeasTRPs	Maximum no. of TRPs that can be included within one message. Value is 64.

9.1.4.3 MEASUREMENT FAILURE

This message is sent by the NG-RAN node to report measurement failure.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	O		9.2.11		YES	ignore

9.1.4.4 MEASUREMENT REPORT

This message is sent by the NG-RAN node to report positioning measurements for the target UE.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
RAN Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
TRP Measurement Response List		1			YES	reject
>TRP Measurement Response Item		1..<maxno ofMeasTRPs>			EACH	reject
>>TRP ID	M		9.2.24		-	
>> TRP Measurement Result	M		9.2.37		-	
>>Cell ID	O		NR CGI 9.2.9	The Cell ID of the TRP identified by the <i>TRP ID</i> IE.	YES	ignore

Range bound	Explanation
maxnoofMeasTRPs	Maximum no. of TRPs that can be included within one message. Value is 64.

9.1.4.5 MEASUREMENT UPDATE

This message is sent by the LMF to update a previously configured measurement.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
RAN Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
SRS Configuration	O		9.2.28		YES	ignore

9.1.4.6 MEASUREMENT ABORT

This message is sent by the LMF to request the NG-RAN node to abort a measurement.

Direction: LMF → NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
RAN Measurement ID	M		INTEGER (1..65536, ...)		YES	reject

9.1.4.7 MEASUREMENT FAILURE INDICATION

This message is sent by the NG-RAN node to indicate that the previously requested measurements can no longer be reported.

Direction: NG-RAN node → LMF.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
NRPPa Transaction ID	M		9.2.4		-	
LMF Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
RAN Measurement ID	M		INTEGER (1..65536, ...)		YES	reject
Cause	M		9.2.1		YES	ignore

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

9.2.1 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group	M			
>Radio Network Layer				
>>Radio Network Layer Cause	M		ENUMERATED (Unspecified, Requested Item not Supported, Requested Item Temporarily not Available, ...)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message), ...)	
>Misc				
>>Miscellaneous Cause	M		ENUMERATED (Unspecified, ...)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Unspecified	Sent when none of the above cause values applies but still the cause is Radio Network Layer related
Requested Item not Supported	The NG-RAN node does not support the requested measurement object, or cannot provide the requested information item.
Requested Item Temporarily not Available	The NG-RAN node can temporarily not provide the requested measurement object or information item.

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3)
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3)
Abstract syntax error (falsely constructed message)	The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3)
Message not Compatible with Receiver State	The received message was not compatible with the receiver state (see sub clause 10.4)
Semantic Error	The received message included a semantic error (see sub clause 10.4)
Transfer Syntax Error	The received message included a transfer syntax error (see sub clause 10.2)
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related

Miscellaneous cause	Meaning
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol.

9.2.2 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the NG-RAN node or LMF when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing. The conditions for inclusion of the *NRPPa Transaction ID* IE are described in clause 10.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	O		INTEGER (0..255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	O		ENUMERATED (initiating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	O		ENUMERATED (reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
NRPPa Transaction ID	O		9.2.4	
Information Element Criticality Diagnostics		0 .. <maxNrOf Errors>		
>IE Criticality	M		ENUMERATED (reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used.
>IE ID	M		INTEGER (0..65535)	The IE ID of the not understood or missing IE.
>Type Of Error	M		ENUMERATED (not understood, missing, ...)	

Range bound	Explanation
maxNrOfErrors	Maximum no. of IE errors allowed to be reported with a single message. The value for maxNrOfErrors is 256.

9.2.3 Message Type

The *Message Type* IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0..255)	
Type of Message	M		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome, ...)	

9.2.4 NRPPa Transaction ID

The *NRPPa Transaction ID* IE is used to associate all the messages belonging to the same procedure. Messages belonging to the same procedure shall use the same NRPPa Transaction ID.

The NRPPa Transaction ID is determined by the initiating peer of a procedure.

The NRPPa Transaction ID shall uniquely identify a procedure among all ongoing parallel procedures using the same procedure code, and initiated by the same protocol peer.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NRPPa Transaction ID	M		INTEGER (0..32767)	

9.2.5 E-CID Measurement Result

The purpose of the E-CID Measurement Result information element is to provide the E-CID measurement result.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Serving Cell ID	M		NG-RAN CGI 9.2.6	NG-RAN Cell Identifier of the serving cell	-	
Serving Cell TAC	M		TAC 9.2.11	Tracking Area Code of the serving cell	-	
NG-RAN Access Point Position	O		9.2.10	The configured estimated geographical position of the antenna of the cell. If the <i>Geographical Coordinates</i> IE is used, the <i>NG-RAN Access Point Position</i> IE shall be ignored.	-	
Measured Results		0 .. <maxnoM eas>			-	
>CHOICE Measured Results Value	M				-	
>>Value Angle of Arrival EUTRA	M		INTEGER (0..719)	According to mapping in TS 36.133 [9]	-	
>>Value Timing Advance Type 1 EUTRA	M		INTEGER (0..7690)	According to mapping in TS 36.214 [17]	-	
>>Value Timing Advance Type 2 EUTRA	M		INTEGER (0..7690)	According to mapping in TS 36.214 [17]	-	
>>Result RSRP EUTRA		1 .. <maxCell Report>			-	
>>> PCI EUTRA	M		INTEGER (0..503)	Physical Cell Identifier of the reported E-UTRA cell	-	
>>>EARFCN	M		INTEGER (0..262143, ...)	Corresponds to NDL for FDD and NDL/UL for TDD in ref. TS 36.104 [7]	-	
>>>CGI EUTRA	O		9.2.7	Cell Global Identifier of the reported E-UTRA cell	-	
>>>Value RSRP EUTRA	M		INTEGER (0..97, ...)		-	
>>Result RSRQ EUTRA		1 .. <maxCell Report>			-	
>>> PCI EUTRA	M		INTEGER (0..503)	Physical Cell Identifier of the reported E-UTRA cell	-	
>>>EARFCN	M		INTEGER (0..262143, ...)	Corresponds to NDL for FDD and NDL/UL for TDD in ref. TS 36.104 [7]	-	
>>>CGI EUTRA	O		9.2.7	Cell Global Identifier of the reported E-UTRA cell	-	

>>Value RSRQ EUTRA	M		INTEGER (0..34, ...)		-	
>>Result SS-RSRP		1 .. <maxCell ReportNR >			YES	ignore
>>>NR PCI	M		INTEGER (0..1007)		-	
>>>NR ARFCN	M		INTEGER (0..3279165)		-	
>>>NR CGI	O		9.2.9		-	
>>>Value SS-RSRP Cell	O		INTEGER (0..127)	SS-RSRP measurement aggregated at cell level	-	
>>>SS-RSRP per SSB Resource		0 .. <maxInde xesReport >			-	
>>>>SSB Index	M		INTEGER (0..63)		-	
>>>>Value SS-RSRP	M		INTEGER (0..127)	SS-RSRP measurement per SSB resource	-	
>>Result SS-RSRQ		1 .. <maxCell ReportNR >			YES	ignore
>>>NR PCI	M		INTEGER (0..1007)		-	
>>>NR ARFCN	M		INTEGER (0..3279165)		-	
>>>NR CGI	O		9.2.9		-	
>>>Value SS-RSRQ Cell	O		INTEGER (0..127)	SS-RSRQ measurement aggregated at cell level	-	
>>>SS-RSRQ per SSB Resource		0 .. <maxInde xesReport >			-	
>>>>SSB Index	M		INTEGER (0..63)		-	
>>>>Value SS-RSRQ	M		INTEGER (0..127)	SS-RSRQ measurement per SSB resource	-	
>>Result CSI-RSRP		1 .. <maxCell ReportNR >			YES	ignore
>>>NR PCI	M		INTEGER (0..1007)		-	
>>>NR ARFCN	M		INTEGER (0..3279165)		-	
>>>NR CGI	O		9.2.9		-	
>>>Value CSI-RSRP Cell	O		INTEGER (0..127)	CSI-RSRP measurement aggregated at cell level	-	
>>>CSI-RSRP per CSI-RS Resource		0 .. <maxInde xesReport >			-	
>>>>CSI-RS Index	M		INTEGER (0..95)		-	

>>>Value CSI-RSRP	M		INTEGER (0..127)	CSI-RSRP measurement per CSI-RS resource	-	
>>Result CSI-RSRQ		1 .. <maxCellReportNR>			YES	ignore
>>NR PCI	M		INTEGER (0..1007)		-	
>>NR ARFCN	M		INTEGER (0..3279165)		-	
>>NR CGI	O		9.2.9		-	
>>Value CSI-RSRQ Cell	O		INTEGER (0..127)	CSI-RSRQ measurement aggregated at cell level	-	
>>>CSI-RSRQ per CSI-RS Resource		0 .. <maxIndexesReport>			-	
>>>CSI-RS Index	M		INTEGER (0..95)		-	
>>>Value CSI-RSRQ	M		INTEGER (0..127)	CSI-RSRQ measurement per CSI-RS resource	-	
>>Angle of Arrival NR	M		UL Angle of Arrival 9.2.38		YES	ignore
Geographical Coordinates	O		9.2.46		YES	ignore

Range bound	Explanation
maxnoMeas	Maximum no. of measured quantities that can be configured and reported with one message. Value is 64.
maxCellReport	Maximum no. of cells that can be reported with one message. Value is 9.
maxCellReportNR	Maximum no. of NR cells that can be reported with one message. Value is 9.
maxIndexesReport	Maximum no. of beam level measurement results that can be reported with one message. Value is 64.

9.2.6 NG-RAN CGI

The NG-RAN Cell Global Identifier (CGI) is used to globally identify a cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PLMN identity	M		9.2.8	
CHOICE NG-RAN Cell	M			
>NR Cell				
NR Cell Identifier	M		BIT STRING (36)	
>E-UTRAN Cell				
E-UTRAN Cell Identifier	M		BIT STRING (28)	

9.2.7 CGI EUTRA

The Cell Global Identifier EUTRA is used to globally identify an E-UTRA cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PLMN identity	M		9.2.8	
E-UTRA Cell Identifier	M		BIT STRING (28)	

9.2.8 PLMN Identity

This IE indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		OCTET STRING (SIZE(3))	<p>Digits 0 to 9 encoded 0000 to 1001, 1111 used as filler digit.</p> <p>Two digits per octet:</p> <ul style="list-style-type: none"> - bits 4 to 1 of octet n encoding digit $2n-1$ - bits 8 to 5 of octet n encoding digit $2n$ <p>PLMN Identity consists of 3 digits from MCC followed by either:</p> <ul style="list-style-type: none"> - a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or - 3 digits from MNC (in case of 3 digit MNC).

9.2.9 NR CGI

The Cell Global Identifier NR is used to globally identify an NR cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.8	
NR Cell Identity	M		BIT STRING (SIZE(36))	

9.2.10 NG-RAN Access Point Position

The *NG-RAN Access Point Position* IE is used to identify the geographical position of an NG-RAN Access Point. It is expressed as ellipsoid point with altitude and uncertainty ellipsoid according to TS 23.032 [8].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Latitude Sign	M		ENUMERATED (North, South)	
Degrees Of Latitude	M		INTEGER (0..2 ²³ -1)	The IE value (N) is derived by this formula: $N \leq 2^{23} X / 90 < N+1$ X being the latitude in degrees (0°.. 90°).
Degrees Of Longitude	M		INTEGER (-2 ²³ ..2 ²³ -1)	The IE value (N) is derived by this formula: $N \leq 2^{24} X / 360 < N+1$ X being the longitude in degrees (-180°..+180°).
Direction of Altitude	M		ENUMERATED (Height, Depth)	
Altitude	M		INTEGER (0..2 ¹⁵ -1)	The relation between the value (N) and the altitude (a) in meters it describes is $N \leq a < N+1$, except for $N=2^{15}-1$ for which the range is extended to include all greater values of (a).
Uncertainty semi-major	M		INTEGER (0..127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$.
Uncertainty semi-minor	M		INTEGER (0..127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$.
Orientation of major axis	M		INTEGER (0..179)	
Uncertainty Altitude	M		INTEGER (0..127)	The uncertainty altitude "h" expressed in metres is derived from the "uncertainty code" k, by: $h=45x(1.025^k-1)$.
Confidence	M		INTEGER (0..100)	In percentage

9.2.11 TAC

This information element is used to uniquely identify a Tracking Area Code.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TAC	M		OCTET STRING (SIZE (3))	

9.2.12 Cell Portion ID

This parameter gives the current Cell Portion associated with the target UE. The Cell Portion ID is the unique identifier for a cell portion within a cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cell Portion ID	M		INTEGER (0..4095,...)	

9.2.13 Other-RAT Measurement Result

The purpose of the Other-RAT Measurement Result information element is to provide the measurement results of RATs other than the serving RAT.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Other-RAT Measured Results		1..<maxnoM eas>				
>CHOICE Other-RAT Measured Results Value	M					
>> Result GERAN	M	1..<maxG ERANMeas>				
>>>ARFCN of BCCH	M		INTEGER (0..1023, ...)			
>>>Physical CellId GERAN	M		INTEGER (0..63, ...)			
>>>RSSI	M		INTEGER (0..63, ...)			
>> Result UTRAN		1..<maxUTRANMeas>				
>>>UARFCN	M		INTEGER (0..16383, ...)			
>>>CHOICE Physical CellId UTRA	M					
>>>>Physical CellId UTRA FDD	M		INTEGER (0..511, ...)			
>>>>Physical CellId UTRA TDD	M		INTEGER (0..127, ...)			
>>>UTRA RSCP	O		INTEGER (-5..91, ...)			
>>>UTRA EcNo	O		INTEGER (0..49, ...)	This IE applies to FDD only.		
>> Result NR		1..<maxNRMeas>			YES	ignore
>>>NR PCI	M		INTEGER (0..1007)		-	
>>>NR ARFCN	M		INTEGER (0..3279165)		-	
>>>SS-RSRP Cell	O		INTEGER (0..127)	SS-RSRP measurement aggregated at cell level	-	
>>>SS-RSRQ Cell	O		INTEGER (0..127)	SS-RSRQ measurement aggregated at cell level	-	
>>>SS-RSRP per SSB Resource		0..<maxnln dexesToReport>			-	
>>>>SSB Index	M		INTEGER (0..63)		-	
>>>>Value SS-RSRP	M		INTEGER (0..127)	SS-RSRP measurement per SSB resource	-	
>>>SS-RSRQ per SSB Resource		0..<maxnln dexesToReport>			-	
>>>>SSB Index	M		INTEGER (0..63)		-	
>>>>Value SS-RSRQ	M		INTEGER (0..127)	SS-RSRQ measurement per SSB resource	-	

>>>CGI NR	O		9.2.9	Cell Global Identifier of the reported NR cell	-	
>>>Result EUTRA		1..<maxEUTRAMeas>			YES	ignore
>>>PCI EUTRA	M		INTEGER (0..503)		-	
>>>EARFCN	M		INTEGER (0..262143)		-	
>>>RSRP EUTRA	O		INTEGER (0..97)		-	
>>>RSRQ EUTRA	O		INTEGER (0..34)		-	
>>>CGI EUTRA	O		9.2.7	Cell Global Identifier of the reported E-UTRA cell	-	

Range bound	Explanation
maxnoMeas	Maximum no. of measured quantities that can be configured and reported with one message. Value is 64.
maxGERANMeas	Maximum no. of GERAN cells that can be reported with one message. Value is 8.
maxUTRANMeas	Maximum no. of UTRAN cells that can be reported with one message. Value is 8.
maxNRMeas	Maximum no. of NR cells that can be reported with one message. Value is 8.
maxEUTRAMeas	Maximum no. of EUTRA cells that can be reported with one message. Value is 8.
maxIndexesReport	Maximum no. of beam level measurement results that can be reported with one message. Value is 64.

9.2.14 WLAN Measurement Result

The WLAN Measurement Result information element provides the WLAN measurement results.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
WLAN Measured Results		1.. <maxnoMeas>		
>WLAN RSSI	M		INTEGER (0..141, ...)	
>SSID	O		OCTET STRING (SIZE(1..32))	Includes the SSID field as defined in subclause 8.4.2.2 of IEEE 802.11™ [11].
>BSSID	M		OCTET STRING (SIZE(6))	Includes the BSSID field as defined in subclause 8.2.4.3.4 of IEEE 802.11™ [11].
>HESSID	O		OCTET STRING (SIZE(6))	Includes the HESSID field as defined in subclause 8.4.2.94 of IEEE 802.11™ [11].
>Operating Class	O		INTEGER (0..255)	Indicates the WLAN Operating Class as defined in IEEE 802.11™ [11].
>Country Code			ENUMERATED (unitedStates, europe, japan, global, ...)	Indicates the WLAN country code as defined in IEEE 802.11™ [11].
>WLAN Channel List		0..1		
>>WLAN Channel List Item		1..<maxWLANchannels>		
>>>WLAN Channel			INTEGER (0..255)	Indicates the WLAN channel number as defined in IEEE 802.11™ [11].
>WLAN Band	O		ENUMERATED (band2dot4, band5, ...)	Indicates the WLAN band as defined in IEEE 802.11™ [11].

Range bound	Explanation
maxnoMeas	Maximum no. of measured quantities that can be configured and reported with one message. Value is 63.
maxWLANchannels	Maximum no. of WLAN channels that can be reported within one list. Value is 16.

9.2.15 OTDOA Cell Information

This IE contains OTDOA information of a cell/TP.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned criticality
OTDOA Cell Information		1 .. <maxnoOTDOAtypeS>				
>CHOICE OTDOA Cell Information Item	M					
>>PCI EUTRA	M		INTEGER (0..503, ...)	Physical Cell ID of the reported E-UTRA cell.		
>>CGI EUTRA	M		9.2.7	Cell Global Identifier of the E-UTRA cell.		
>>TAC	M		9.2.11	Tracking Area Code		
>>EARFCN	M		INTEGER (0..262143, ...)	Corresponds to N_DL for FDD and N_DL/UL for TDD in ref. TS 36.104 [7].		
>>PRS Bandwidth EUTRA	M		ENUMERATED (bw6, bw15, bw25, bw50, bw75, bw100, ...)	Transmission bandwidth of PRS		
>>PRS Configuration Index EUTRA	M		INTEGER (0..4095, ...)	PRS Configuration Index, ref TS 36.211 [10]		
>>CP Length EUTRA	M		ENUMERATED (Normal, Extended, ...)	Cyclic prefix length of the PRS		
>>Number of DL Frames EUTRA	M		ENUMERATED (sf1, sf2, sf4, sf6, ...)	Number of consecutive downlink subframes N_PRS with PRS, ref TS 36.211 [10]		
>>Number of Antenna Ports EUTRA	M		ENUMERATED (n1-or-n2, n4, ...)	Number of used antenna ports, where n1-or-n2 corresponds to 1 or 2 ports, n4 corresponds to 4 ports		
>>SFN Initialisation Time EUTRA	M		BIT STRING (64)	Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of 1 /2**32 second.		

>>NG-RAN Access Point Position	M		9.2.10	The configured estimated geographical position of the antenna of the cell/TP.		
>>PRS Muting Configuration EUTRA	M		9.2.16	The configuration of positioning reference signals muting pattern.		
>>PRS-ID EUTRA	M		INTEGER (0..4095, ...)	PRS ID, ref TS 36.211 [10].		
>>TP-ID EUTRA	M		INTEGER (0..4095, ...)	Identity of the transmission point. This IE together with the <i>PCI</i> and/or <i>PRS-ID</i> may be used to identify the transmission point in case the same physical cell ID is shared by multiple transmission points.		
>>TP Type EUTRA	M		ENUMERATED (prs-only-tp, ...)	A TP which transmits PRS only.		
>>Number of DL Frames-Extended EUTRA	M		INTEGER (1..160, ...)	Number of consecutive downlink subframes N_{PRS} with PRS, ref TS 36.211 [10].		
>>CRS CP Length EUTRA	M		ENUMERATED (Normal, Extended, ...)	Cyclic prefix length of the CRS.		
>>DL Bandwidth EUTRA	M		ENUMERATED (bw6, bw15, bw25, bw50, bw75, bw100, ...)	DL transmission bandwidth expressed in units of resource blocks N_{RB} , ref TS 36.104 [7].		
>>PRS Occasion Group EUTRA	M		ENUMERATED (og2, og4, og8, og16, og32, og64, og128, ...)	PRS occasion group in a PRS period, ref TS 36.211 [10].		
>>PRS Frequency Hopping Configuration EUTRA	M		9.2.17	PRS frequency hopping configuration.		
>>TDD Configuration EUTRA	M		9.2.18	TDD specific physical channel configuration.	YES	ignore
>>NR CGI	M		9.2.9	Cell Global Identifier of the NR cell.	YES	ignore

>>SFN Initialisation Time NR	M		BIT STRING (64)	Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of $1/2^{32}$ second.	YES	ignore
------------------------------	---	--	-----------------	--	-----	--------

Range bound	Explanation
maxnoOTDOAtypes	Maximum no. of OTDOA information types that can be requested and reported with one message. Value is 63.

9.2.16 PRS Muting Configuration EUTRA

The *PRS Muting Configuration EUTRA* IE is used to describe the configuration of PRS muting patterns for the concerned cell/TP, according to TS 36.211 [10] and TS 36.133 [9].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE <i>PRS Muting Configuration</i>	M			
>Two	M		BIT STRING (2)	If a bit is set to "0", it indicates that the PRS is muted in the corresponding PRS positioning occasion (numbering from any sub frame for which SFN=0) in a periodic cycle of length equal to the length of the bit string
>Four	M		BIT STRING (4)	Same as above
>Eight	M		BIT STRING (8)	Same as above
>Sixteen	M		BIT STRING (16)	Same as above
>thirty-two	M		BIT STRING (32)	Same as above
>sixty-four	M		BIT STRING (64)	Same as above
>one-hundred-and-twenty-eight	M		BIT STRING (128)	Same as above
>two-hundred-and-fifty-six	M		BIT STRING (256)	Same as above
>five-hundred-and-twelve	M		BIT STRING (512)	Same as above
>one-thousand-and-twenty-four	M		BIT STRING (1024)	Same as above

9.2.17 PRS Frequency Hopping Configuration EUTRA

The *PRS Frequency Hopping Configuration EUTRA* IE is used to describe the configuration of PRS frequency hopping for the concerned cell/TP, according to TS 36.211 [10].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number of Frequency Hopping Bands	M		ENUMERATED (twobands, fourbands, ...)	Number of bands for frequency hopping.
Band Positions		1..<maxnoFreqHoppingBandsMinusOne,...>		
>NarrowBand Index	M		INTEGER (0..15, ...)	Narrowband Index

Range bound	Explanation
maxnoFreqHoppingBandsMinusOne	Maximum no. of frequency hopping bands minus one. Value is 7.

9.2.18 TDD Configuration EUTRA

The *TDD Configuration EUTRA* IE is used to specify the TDD specific physical channel configuration.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Subframe Assignment	M		ENUMERATED (sa0, sa1, sa2, sa3, sa4, sa5, sa6, ...)	sa0 points to Configuration 0, sa1 to Configuration 1 etc. as specified in TS 36.211 [6, table 4.2-2].

9.2.19 Assistance Information

This IE contains the assistance information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Assistance Information	M			
> System Information		1..<maxNrOfPosSIBMessage>		Corresponds to the number of SI messages with posSIBs to be scheduled
>>Broadcast Periodicity	M		ENUMERATED (ms80, ms160, ms320, ms640, ms1280, ms2560, ms5120, ...)	Broadcast Periodicity for the Pos SIBs, see TS 38.331 [13]
>> Pos SIBs		1..<maxNrOfPosSIBs>		Number of posSIBs in the System Information.
>>>PosSIB-Type	M		9.2.22	
>>>PosSIB Segments	M		9.2.20	
>>>Assistance Information Meta Data	O		9.2.21	
>>>Broadcast Priority	O		INTEGER (1..16, ...)	The priority of the assistance Information where 1 represents the highest priority and 16 the lowest priority

Range bound	Explanation
maxNrOfPosSIBMessage	Maximum number of positioning system information messages. Value is 32.
maxNrOfPosSIBs	Maximum number of positioning system information blocks included in the message. Value is 32.

9.2.20 PosSIB Segments

This IE provides one posSIB or two or more posSIB segments which must be scheduled in series in consecutive transmissions of the same SI message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PosSIB Segments		1..<maxNrOfSegments>		
>Assistance Data SIB Element	M		OCTET STRING	TS 37.355 [14]

Range bound	Explanation
maxNrOfSegments	Maximum number of positioning SIB segments (in case of <i>Assistance Information Element</i> contains segmented data according to TS 37.355 [14]). Value is 64.

9.2.21 Assistance Information Meta Data

This parameter contains meta data for an assistance information element.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Encrypted	O		ENUMERATED (true, ...)	
GNSS ID	O		ENUMERATED (gps, sbas, qzss, galileo, glonass, bds, navic ...)	
SBAS ID	O		ENUMERATED (waas, egnos, msas, gagan, ...)	

9.2.22 Positioning SIB Type

This parameter defines a specific positioning SIB, as defined in TS 37.355 [14].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Positioning SIB Type	M		ENUMERATED (posSibType1-1, posSibType1-2, posSibType1-3, posSibType1-4, posSibType1-5, posSibType1-6, posSibType1-7, posSibType1-8, posSibType2-1, posSibType2-2, posSibType2-3, posSibType2-4, posSibType2-5, posSibType2-6, posSibType2-7, posSibType2-8, posSibType2-9, posSibType2-10, posSibType2-11, posSibType2-12, posSibType2-13, posSibType2-14, posSibType2-15, posSibType2-16, posSibType2-17, posSibType2-18, posSibType2-19, posSibType2-20, posSibType2-21, posSibType2-22, posSibType2-23, posSibType2-24, posSibType2-25, posSibType3-1, posSibType4-1, posSibType5-1, posSibType6-1, posSibType6-2, posSibType6-3, ...)	

9.2.23 Assistance Information Failure List

This parameter identifies the assistance information for which the NG-RAN Node failed to configure broadcasting.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Assistance Information Failure List		1..<maxno AssistInfo FailureList Items>		
>PosSIB-Type	M		9.2.22	
>Outcome	M		ENUMERATED (failed, ...)	

Range bound	Explanation
maxnoAssistInfoFailureListItems	Maximum no. of assistance information failure list items that can be signaled with one message. Value is 32.

9.2.24 TRP ID

The *TRP ID* IE is used to identify a TRP uniquely within an NG-RAN node.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TRP Identifier	M		INTEGER (1..65535,...)	Identifies a TRP within an NG-RAN node

9.2.25 TRP Information

The *TRP Information* IE contains information for one TRP within an NG-RAN node.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TRP ID	M		9.2.24	
TRP Information Type		1 .. <maxnoT RPIInfoTyp es>		
>CHOICE <i>TRP Information Item</i>	M			
>>NR PCI	M		INTEGER (0..1007)	NR Physical Cell ID
>>NR CGI	M		9.2.9	
>>NR ARFCN	M		INTEGER (0..3279165)	
>>PRS Configuration	M		9.2.44	
>>SSB Information	M		9.2.54	
>>SFN Initialisation Time	M		9.2.36	
>>Spatial Direction Information	M		9.2.45	
>>Geographical Coordinates	M		9.2.46	

Range bound	Explanation
maxnoTRPIInfoTypes	Maximum no of TRP information types that can be requested and reported with one message. Value is 64.

9.2.26 Search Window Information

This information element contains search window information for the TRP.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Expected Propagation Delay	M		INTEGER (-3841..3841,...)	Indicates when the SRS is expected to arrive in time at the TRP relative to the UL RTOA Reference Time. The UL RTOA Reference Time for a target SRS is defined as $T_0 + t_{SRS}$, where - T_0 is the SFN Initialisation Time - $t_{SRS} = (10n_f + n_{sf}) \times 10^{-3}$, where n_f and n_{sf} are the system frame number and the subframe number of the SRS, respectively. Granularity 4Ts, where Ts=1/(15·10 ³ ·2048) seconds. Centre of the search window.
Delay Uncertainty	M		INTEGER (1..246,...)	Indicates the uncertainty of the expected SRS arrival time at the TRP Granularity 4Ts, where Ts=1/(15·10 ³ ·2048) seconds. Single-sided search window.

9.2.27 Requested SRS Transmission Characteristics

This IE contains the requested SRS configuration for the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Number Of Periodic Transmissions	C-ifResourceTypePeriodic		INTEGER (0..500,...)	The number of periodic SRS transmissions requested. The value of '0' represents an infinite number of periodic SRS transmissions.
Resource Type	M		ENUMERATED (periodic, semi-persistent, aperiodic, ...)	
CHOICE Bandwidth	M			
>FR1			ENUMERATED (5mHz, 10mHz, 20mHz, 40mHz, 50mHz, 80mHz, 100mHz, ...)	
>FR2			ENUMERATED (50mHz, 100mHz, 200mHz, 400mHz,...)	
SRS Resource Set List		0.. 1		
>SRS Resource Set Item		1..<maxnoSRS-Resource Sets>		
>>Number of SRS Resources Per Set	O		INTEGER (1..16,...)	The number of SRS Resources per resource set for SRS transmission.
>>Periodicity List		0.. 1		
>>>Periodicity List Item		1..<maxnoSRS-Resource PerSet>		
>>>>PeriodicitySRS	M		ENUMERATED (0.125, 0.25, 0.5, 0.625, 1, 1.25, 2, 2.5, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 160, 320, 640, 1280, 2560, 5120, 10240, ...)	Milli-seconds
>>Spatial Relation Information	O		9.2.34	
>>Pathloss Reference Information	O		9.2.53	
SSB Information	O		9.2.54	

Condition	Explanation
ifResourceTypePeriodic	This IE shall be present if the <i>Resource Type</i> IE is set to the value "Periodic".

Range bound	Explanation
maxnoSRS-ResourceSets	Maximum no of requested SRS Resource Sets for SRS transmission. Value is 16.
maxnoSRS-ResourcePerSet	Maximum no of SRS Resources per set. Value is 16.

9.2.28 SRS Configuration

This information element contains the SRS configuration configured by the NG-RAN node for the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SRS Carrier List		1..<maxno SRS-Carriers>		
>Point A	M		INTEGER (0..3279165)	NR ARFCN
>Uplink Channel BW-PerSCS-List		1..<maxno SCSs>		SCS-SpecificCarrier TS 38.331 [13]
>>Offset To Carrier	M		INTEGER(0..2199,...)	First usable RB to Point A in the number of PRBs
>>Subcarrier Spacing	M		ENUMERATED(kHz15, kHz30, kHz60, kHz120,...)	
>>Carrier Bandwidth	M		INTEGER(1..275,...)	
> Active UL BWP	M			Only the configuration in the active UL BWP is needed.
>>Location And Bandwidth	M		INTEGER(0..37949,...)	BWP TS 38.331 [13]
>>Subcarrier Spacing	M		ENUMERATED(kHz15, kHz30, kHz60, kHz120,...)	
>>Cyclic Prefix	M		ENUMERATED(Normal, Extended)	
>>Tx Direct Current Location	M		INTEGER(0..3301,...)	
>>Shift7dot5kHz	O		ENUMERATED(true,...)	
>>SRS Config	M			SRS-Config as defined in TS 38.331 [13]
>>> SRS Resource List		0..<maxno SRS-Resources >		
>>>SRS Resource	M		9.2.29	SRS-Resource as defined in TS 38.331 [13]
>>> Positioning SRS Resource List		0..<maxno SRS-Resources >		
>>>Positioning SRS Resource	M		9.2.30	SRS-PosResource-r16 as defined in TS 38.331 [13]
>>> SRS Resource Set List		0..<maxno SRS-Resources >		
>>>SRS Resource Set	M		9.2.31	SRS-ResourceSet as defined in TS 38.331 [13]
>>> Positioning SRS Resource Set List		0..<maxno SRS-Resources >		
>>>Positioning SRS Resource Set	M		9.2.32	SRS-PosResourceSet-r16 as defined in TS 38.331 [13]
>NR PCI	O		INTEGER (0..1007)	Physical Cell ID of the cell that contains the SRS carrier

Range bound	Explanation
maxnoSRS-Carriers	Maximum no of carriers for SRS. Value is 32.
maxnoSCSs	Maximum no of SCS spacings for a carrier. Value is 5.
maxnoSRS-Resources	Maximum no of SRS resources per UL BWP. Value is 64.
maxnoSRS-PosResources	Maximum no of positioning SRS resources per UL BWP. Value is 64.
maxnoSRS-ResourceSets	Maximum no of SRS resource sets per UL BWP. Value is 16.
maxnoSRS-PosResourceSets	Maximum no of positioning SRS resource sets per UL BWP. Value is 16.

9.2.29 SRS Resource

This information element contains the SRS resource.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SRS Resource ID	M		INTEGER(0..63)	
Number of Ports	M		ENUMERATED(port1, ports2, ports4)	
CHOICE Transmission Comb	M			
>Comb Two				
>>Comb Offset	M		INTEGER(0..1)	
>>Cyclic Shift	M		INTEGER(0..7)	
>Comb Four				
>>Comb Offset	M		INTEGER(0..3)	
>>Cyclic Shift	M		INTEGER(0..11)	
Start Position	M		INTEGER(0..13)	
Number of Symbols	M		ENUMERATED(n1,n2,n4)	
Repetition Factor	M		ENUMERATED(r1,r2,r4)	
Frequency Domain Position	M		INTEGER(0..67)	
Frequency Domain Shift	M		INTEGER(0..268)	
C-SRS	M		INTEGER(0..63)	
B-SRS	M		INTEGER(0..3)	
B-Hop	M		INTEGER(0..3)	
Group or Sequence Hopping	M		ENUMERATED(neither, groupHopping, sequenceHopping)	
CHOICE Resource Type	M			
>Periodic				
>>Periodicity	M		ENUMERATED(slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, ...)	
>>Offset	M		INTEGER(0..2559, ...)	
>Semi-persistent				
>>Periodicity	M		ENUMERATED(slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, ...)	
>>Offset	M		INTEGER(0..2559, ...)	
>Aperiodic				
>>Aperiodic Resource Type	M		ENUMERATED(true,...)	
Sequence ID	M		INTEGER(0..1023)	

9.2.30 Positioning SRS Resource

This information element contains the SRS resource for positioning.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Positioning SRS Resource ID	M		INTEGER(0..63)	
CHOICE Transmission Comb	M			
>Comb Two				
>>Comb Offset	M		INTEGER(0..1)	
>>Cyclic Shift	M		INTEGER(0..7)	
>Comb Four				
>>Comb Offset	M		INTEGER(0..3)	
>>Cyclic Shift	M		INTEGER(0..11)	
>Comb Eight				
>>Comb Offset	M		INTEGER(0..7)	
>>Cyclic Shift	M		INTEGER(0..5)	
Start Position	M		INTEGER(0..13)	
Number of Symbols	M		ENUMERATED(n1,n2,n4, n8, n12)	
Frequency Domain Shift	M		INTEGER(0..268)	
C-SRS	M		INTEGER(0..63)	
Group or Sequence Hopping	M		ENUMERATED(Neither, groupHopping, sequenceHopping)	
CHOICE Resource Type Positioning	M			
>periodic				
>>Periodicity	M		ENUMERATED(slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, slot5120, slot10240, slot40960, slot81920,...)	
>>Offset	M		INTEGER(0..81919,...)	
>semi-persistent				
>>Periodicity	M		ENUMERATED(slot 1, slot 2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, slot5120, slot10240, slot40960, slot81920,...)	
>>Offset	M		INTEGER(0..81919,...)	
>aperiodic				
>>slot offset	M		INTEGER(0..32)	
Sequence ID	M		INTEGER(0..65535)	
CHOICE Spatial Relation Positioning	O			
>SSB				
>> NR PCI	M		INTEGER (0..1007)	
>>SSB index	O		INTEGER(0..63)	
>PRS				
>>PRS ID	M		INTEGER(0..255)	
>>PRS Resource Set ID	M		INTEGER(0..7)	
>>PRS Resource ID	O		INTEGER(0..63)	

9.2.31 SRS Resource Set

This information element indicates an SRS resource set in the UE for UL SRS transmission.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SRS Resource Set ID	M		INTEGER(0..15)	
SRS Resource ID List		1..<maxno SRS-Resource PerSet>		
>SRS Resource ID	M		INTEGER(0..63)	
CHOICE Resource Set Type	M			
> <i>periodic</i>				
>>periodicSet	M		ENUMERATED(true,...)	
> <i>semi-persistent</i>				
>>semi-persistentSet	M		ENUMERATED(true,...)	
> <i>aperiodic</i>				
>>SRS Resource Trigger	M		INTEGER(1..3)	
>>Slot offset	M		INTEGER(0..32)	Offset in number of slots, where value 0 indicates no offset.

Range bound	Explanation
maxnoSRS-ResourcePerSet	Maximum no of SRS resources per SRS resource set. Value is 16.

9.2.32 Positioning SRS Resource Set

This information element indicates a positioning SRS resource set in the UE for UL SRS transmission.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Positioning SRS Resource Set ID	M		INTEGER(0..15)	
Positioning SRS Resource ID List		1..<maxno SRS-PosResourcePerSet>		
>Positioning SRS Resource ID	M		INTEGER(0..63)	
CHOICE Resource Type	M			
> <i>periodic</i>				
>>PosperiodicSet	M		ENUMERATED(true,...)	
> <i>semi-persistent</i>				
>>Possemi-persistentSet	M		ENUMERATED(true,...)	
> <i>aperiodic</i>				
>>SRS Resource Trigger	M		INTEGER(1..3)	

Range bound	Explanation
maxnoSRS-PosResourcePerSet	Maximum no of positioning SRS resources per positioning SRS resource set. Value is 16.

9.2.33 SRS Resource Set ID

This information element indicates a resource set in the UE for UL SRS transmission.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SRS Resource Set ID	M		INTEGER (0..15)	According to TS 38.331 [13]

9.2.34 Spatial Relation Information

This information element indicates a spatial relation for transmission of UL SRS by a UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Spatial Relation for Resource ID		1..<maxno SpatialRelations>		According to TS 38.321 [15] and TS 38.331 [13]
CHOICE Reference Signal	M			
>NZP CSI-RS				
>>NZP CSI-RS Resource ID	M		INTEGER (0..191)	
>SSB				
>> NR PCI	M		INTEGER (0..1007)	
>>SSB Index	O		INTEGER (0..63)	
>SRS				
>>SRS Resource ID	M		INTEGER (0..63)	
>Positioning SRS				
>> Positioning SRS Resource ID	M		INTEGER (0..63)	
>DL-PRS				
>>DL-PRS ID	M		INTEGER (0..255)	
>>DL-PRS Resource Set ID	M		INTEGER (0..7)	
>>DL-PRS Resource ID	O		INTEGER (0..63)	

Range bound	Explanation
maxnoSpatialRelations	Maximum no. of Spatial Relations that can be configured. Value is 64.

9.2.35 SRS Resource Trigger

This information element indicates a DCI code point according to a SRS resource set configuration.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Aperiodic SRS Resource Trigger List		1..<maxno SRS-TriggerStates>		According to TS 38.331 [13]
>Aperiodic SRS Resource Trigger			INTEGER (1..3)	

Range bound	Explanation
maxnoSRSTriggerStates	Maximum no. of SRS trigger states. Value is 3.

9.2.36 SFN Initialisation Time

This information element indicates the SFN initialisation time.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SFN initialisation time	M		BIT STRING (SIZE(64))	Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of 1 /2**32 second

9.2.37 TRP Measurement Result

This information element contains the measurement result.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Measured Result Item		1 .. <maxnoPosMeas>		
>CHOICE Measured Results Value	M			
>>UL Angle of Arrival	M		9.2.38	
>>UL SRS-RSRP	M		INTEGER (0..126)	
>>UL RTOA	M		9.2.39	
>>gNB Rx-Tx Time Difference	M		9.2.40	
>Time Stamp	M		9.2.42	
>Measurement Quality	O		9.2.43	
>Measurement Beam Information	O		9.2.57	

Range bound	Explanation
maxnoPosMeas	Maximum no. of measured quantities that can be configured and reported with one positioning measurement message. Value is 16384.

9.2.38 UL Angle of Arrival

This information element contains the uplink Angle of Arrival measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Azimuth Angle of Arrival	M		INTEGER(0..3599)	TS 38.133 [16]
Zenith Angle of Arrival	O		INTEGER(0..1799)	TS 38.133 [16]
LCS to GCS Translation		0..1		If absent, the azimuth and zenith are provided in GCS.
>Alpha	M		INTEGER (0..3599)	
>Beta	M		INTEGER (0..3599)	
>Gamma	M		INTEGER (0..3599)	

9.2.39 UL RTOA Measurement

This information element contains the uplink RTOA measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE UL RTOA Measurement	M			
>k0	M		INTEGER (0.. 1970049)	TS 38.133 [16]
>k1	M		INTEGER (0.. 985025)	TS 38.133 [16]
>k2	M		INTEGER (0.. 492513)	TS 38.133 [16]
>k3	M		INTEGER (0.. 246257)	TS 38.133 [16]
>k4	M		INTEGER (0.. 123129)	TS 38.133 [16]
>k5	M		INTEGER (0.. 61565)	TS 38.133 [16]
Additional Path List	O		9.2.41	

9.2.40 gNB Rx-Tx Time Difference

This information element contains the gNB Rx-Tx Time Difference measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE gNB Rx-Tx Time Difference Measurement	M			
>k0	M		INTEGER (0.. 1970049)	TS 38.133 [16]
>k1	M		INTEGER (0.. 985025)	TS 38.133 [16]
>k2	M		INTEGER (0.. 492513)	TS 38.133 [16]
>k3	M		INTEGER (0.. 246257)	TS 38.133 [16]
>k4	M		INTEGER (0.. 123129)	TS 38.133 [16]
>k5	M		INTEGER (0.. 61565)	TS 38.133 [16]
Additional Path List	O		9.2.41	

9.2.41 Additional Path List

This information element contains the additional path results of time measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Additional Path Item		1..<maxno path>		
>CHOICE Relative Path Delay	M			
>>k0	M		INTEGER(0..16351)	
>>k1	M		INTEGER(0..8176)	
>>k2	M		INTEGER(0..4088)	
>>k3	M		INTEGER(0..2044)	
>>k4	M		INTEGER(0..1022)	
>>k5	M		INTEGER(0..511)	
>Path Quality	O		Measurement Quality 9.2.43	

Range bound	Explanation
maxnopath	Maximum no. of additional path measurement. Value is 2.

9.2.42 Time Stamp

This information element contains the time stamp associated with the measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
System Frame Number	M		INTEGER(0..1023)	
CHOICE Slot Index	M			
>SCS-15	M		INTEGER(0..9)	
>SCS-30	M		INTEGER(0..19)	
>SCS-60	M		INTEGER(0..39)	
>SCS-120	M		INTEGER(0..79)	
Measurement time	O		SFN Initialisation Time 9.2.36	

9.2.43 Measurement Quality

This information element contains the TRP's best estimate of the quality of the measurement.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Measurement Quality	M			
>Timing Measurement Quality				
>>Measurement Quality	M		INTEGER(0..31)	TS 37.355 [14]
>>Resolution	M		ENUMERATED(0.1m, 1m, 10m, 30m, ...)	TS 37.355 [14]
>Angle Measurement Quality				
>>Azimuth Quality	M		INTEGER(0..255)	
>>Zenith Quality	O		INTEGER(0..255)	
>>Resolution	M		ENUMERATED (0.1deg, ...)	

9.2.44 PRS Configuration

This information element contains the DL PRS configuration for the TRP.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PRS Resource Set List		1..<maxno ofPRSSourceSet>		
>PRS Resource Set ID	M		INTEGER(0..7)	
>Subcarrier Spacing	M		ENUMERATED(kHz15, kHz30, kHz60, kHz120, ...)	
>PRS bandwidth	M		INTEGER(1..63)	24,28,...,272 PRBs
>Start PRB	M		INTEGER(0..2176)	Starting PRB to Point A
>Point A	M		INTEGER (0..3279165)	NR ARFCN
>Comb Size	M		ENUMERATED(2, 4, 6, 12, ...)	
>CP Type	M		ENUMERATED(normal, extended, ...)	
>Resource Set Periodicity	M		ENUMERATED(4,5,8,10 ,16,20,32,40,64,80,160,3 20,640,1280,2560,5120, 10240,20480,40960,819 20,...)	
>Resource Set Slot Offset	M		INTEGER(0..81919,...)	
>Resource Repetition Factor	M		ENUMERATED(rf1,rf2,rf 4,rf6,rf8,rf16,rf32,...)	
>Resource Time Gap	M		ENUMERATED(tg1,tg2,t g4,tg8,tg16,tg32,...)	
>Resource Number of Symbols	M		ENUMERATED(n2,n4,n 6,n12,...)	
>PRS Muting	O			
>>Option1	O			
>>>Muting Pattern	M		DL-PRS Muting Pattern 9.2.56	Muting pattern option 1 is used to mute the whole PRS resource set (within a period)
>>>Muting Bit Repetition Factor	M		ENUMERATED(1,2,4,8, ...)	
>>Option2	O			
>>>Muting Pattern	M		DL-PRS Muting Pattern 9.2.56	Muting pattern option 2 is used to mute the selected repetition of the resource set (within the period)
>PRS Resource Transmit Power	M		INTEGER(-60..50)	
>PRS Resource List	M	1..<maxno ofPRSSources>		<i>NR-DL-PRS-Resource-r16</i> as defined in TS 37.355 [14]
>>PRS Resource ID	M		INTEGER(0..63)	
>>Sequence ID	M		INTEGER(0..4095)	
>>RE Offset	M		INTEGER(0..11,...)	
>>Resource Slot Offset	M		INTEGER(0..511)	
>>Resource Symbol Offset	M		INTEGER(0..12)	
>> CHOICE QCL Info	O			
>>>SSB				
>>>>NR PCI	M		INTEGER(0..1007)	
>>>> SSB Index	O		INTEGER(0..63)	
>>>DL-PRS				
>>>>QCL Source PRS Resource Set ID	M		INTEGER(0..7)	
>>>>QCL Source PRS Resource ID	O		INTEGER(0..63)	If it is absent, the QCL source PRS resource ID is the same as the PRS resource ID

Range bound	Explanation
maxnoofPRSSourceSet	Maximum no of PRS resources set. Value is 8.
maxnoofPRSSource	Maximum no of PRS resources per PRS resource set. Value is 64.

9.2.45 Spatial Direction Information

This information element contains the spatial direction information of the DL PRS resources for the TRP.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR-PRS Beam Information	M		9.2.58	The spatial directions of DL-PRS Resources for TRP

9.2.46 Geographical Coordinates

This information element contains the geographical coordinates for the TRP.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE TRP Position Definition Type	M			
>Direct				
>>CHOICE Accuracy	M			
>>>normal accuracy				
>>>TRP Position	M		NG-RAN Access Point Position 9.2.10	The configured estimated geographical position of the antenna of the cell/TRP.
>>>high accuracy				
>>>TRP High Accuracy Access Position	M		NG-RAN High Accuracy Access Point Position 9.2.49	The configured estimated geographical high accuracy position of the antenna of the cell/TRP.
>Referenced				
>>Reference Point	M		9.2.51	The reference point is used to derive the TRP position
>>CHOICE Type	M			
>>>Geodetic				
>>>TRP Position Relative Geodetic	M		Relative Geodetic Location 9.2.48	The configured estimated relative geodetic coordinate of the antenna of the cell/TRP
>>>Cartesian				
>>>TRP Position Relative Cartesian	M		Relative Cartesian Location 9.2.50	The configured estimated relative Cartesian coordinate of the antenna of the cell/TRP
DL-PRS Resource Coordinates	O		9.2.47	DL-PRS Resource Coordinates relative to the TRP coordinate

9.2.47 DL-PRS Resource Coordinates

This information element contains the geographical coordinates of the antenna reference points (ARP) for the DL-PRS Resources of a TRP.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
DL-PRS Resource Set ARP List	M	1..<maxP RS- Resource Sets>		
>DL-PRS Resource Set ID	M		INTEGER (0..7)	
>CHOICE DL-PRS Resource Set ARP Location	M			Relative to the geographical coordinates for the TRP. If this IE is absent, the Relative Location is zero for the indicated DL-PRS Resource Set ID.
>>Geodetic				
>>>TRP Position Relative Geodetic	M		Relative Geodetic Location 9.2.48	
>>Cartesian				
>>>TRP Position Relative Cartesian	M		Relative Cartesian Location 9.2.50	
>DL-PRS Resource ARP List	M	1..<maxP RS- Resources PerSet>		
>>DL-PRS Resource ID	M		INTEGER (0..63)	
>>CHOICE DL-PRS Resource ARP Location	M			Relative to the DL-PRS Resource Set ARP Location. If this IE is absent, the Relative Location is zero for the indicated DL-PRS Resource ID.
>>>Geodetic				
>>>TRP Position Relative Geodetic	M		Relative Geodetic Location 9.2.48	
>>Cartesian				
>>>TRP Position Relative Cartesian	M		Relative Cartesian Location 9.2.50	

Range bound	Explanation
maxPRS-ResourceSets	Maximum no of DL-PRS resource sets per TRP. Value is 2.
maxPRS-ResourcesPerSet	Maximum no of DL-PRS resources of the DL-PRS resource set of the TRP. Value is 64.

9.2.48 Relative Geodetic Location

This information element provides a location relative to some known reference location in a relative geodetic coordinate system.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Milli-Arc-Second Units	M		ENUMERATED (0.03, 0.3, 3, ...)	Units and scale factor for the delta-latitude and delta-longitude fields. 0.03, 0.3, 3, milliarcseconds. TS 37.355 [14].
Height Units	M		ENUMERATED (mm, cm, m, ...)	Units and scale factor for the delta-height field. 10 ⁻³ metre, 10 ⁻² metre, TS 37.355 [14].
Delta Latitude	M		INTEGER (-1024..1023)	Delta value in latitude in the unit provided in Milli-Arc-Second Units. TS 37.355 [14].
Delta Longitude	M		INTEGER (-1024..1023)	Delta value in longitude in the unit provided in Milli-Arc-Second Units. TS 37.355 [14].
Delta Height	M		INTEGER (-1024..1023)	Delta value in ellipsoidal height in the unit provided in Height Units. TS 37.355 [14].
Location uncertainty	M		9.2.52	

9.2.49 NG-RAN High Accuracy Access Point Position

The *NG-RAN High Accuracy Access Point Position* IE is used to identify the geographical position of an NG-RAN Access Point. It is expressed as High Accuracy Ellipsoid point with altitude and uncertainty ellipsoid according to TS 23.032 [8].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Degrees of Latitude	M		INTEGER(-2147483648..2147483647)	
Degrees of Longitude	M		INTEGER(-2147483648..2147483647)	
Altitude	M		INTEGER(-64000..1280000)	
Uncertainty Semi Major	M		INTEGER (0..255)	
Uncertainty Semi Minor	M		INTEGER (0..255)	
Orientation Major Axis	M		INTEGER (0..179)	
Horizontal Confidence	M		INTEGER (0..100)	
Uncertainty Altitude	M		INTEGER (0..255)	
Vertical Confidence	M		INTEGER (0..100)	

9.2.50 Relative Cartesian Location

This information element provides a location relative to some known reference location in a relative Cartesian coordinate system.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
XYZ unit	M		ENUMERATED (mm, cm, dm,..)	
X value	M		INTEGER (-2 ¹⁶ .. 2 ¹⁶ -1)	Positive value represents northing from reference point, in units of <i>XYZ Unit</i> IE.
Y value	M		INTEGER (-2 ¹⁶ .. 2 ¹⁶ -1)	Positive value represents easting from reference point in units of <i>XYZ Unit</i> IE.
Z value	M		INTEGER (-2 ¹⁵ .. 2 ¹⁵ -1)	Positive value represents height above reference point in units of <i>XYZ Unit</i> IE.
Location uncertainty	M		9.2.52	

9.2.51 Reference Point

This information element provides a reference point information.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE ReferencePoint	M			Reference point to which relative location information is related to
>Coordinate ID				
>>Coordinate ID	M		INTEGER(0.. 2 ⁹ -1,...)	Referential ID mapped via OAM
>Reference Point Coordinates				
>>Reference Point Position	M		NG-RAN Access Point Position 9.2.10	
>Reference Point Coordinates High Accuracy				
>>Reference Point High Accuracy Access Position	M		NG-RAN High Accuracy Access Point Position 9.2.49	

9.2.52 Location Uncertainty

This information element provides the location uncertainty information.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
>Horizontal Uncertainty	M		INTEGER (0..255)	Horizontal uncertainty of the ARP latitude/longitude. Corresponds to the encoded high accuracy uncertainty as defined in TS 23.032 [8]
>Horizontal Confidence	M		INTEGER (0..100)	Corresponds to confidence as defined in TS 23.032 [8].
>Vertical Uncertainty	M		INTEGER (0..255)	Vertical uncertainty of the ARP altitude. Corresponds to the encoded high accuracy uncertainty as defined in TS 23.032 [8]
>Vertical Confidence	M		INTEGER (0..100)	Corresponds to confidence as defined in TS 23.032 [8].

9.2.53 Pathloss Reference Information

This information element indicates a pathloss reference for transmission of UL SRS by a UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Pathloss Reference Signal	M			
>SSB				
>> NR PCI	M		INTEGER (0..1007)	
>>SSB Index	O		INTEGER (0..63)	
>DL-PRS				
>>DL-PRS ID	M		INTEGER (0..255)	
>>DL-PRS Resource Set ID	M		INTEGER (0..7)	
>>DL PRS Resource ID	O		INTEGER (0..63)	

9.2.54 SSB Information

This information element contains the SSB time/frequency information for the TRPs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSB Info List		1...<maxNoSSBs>		
>SSB Configuration	M		SSB Time/Frequency Configuration 9.2.55	
> NR PCI	M		INTEGER (0..1007)	

Range bound	Explanation
maxNoSSBs	Maximum no of SSBs for which the configuration can be provided. Value is 255.

9.2.55 SSB Time/Frequency Configuration

This information element contains the time and frequency configuration of an SSB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SSB frequency	M		INTEGER (0..3279165)	ARFCN
SSB subcarrier spacing	M		ENUMERATED(15kHz, 30kHz, 60kHz, 120kHz, 240kHz,...)	
SSB Transmit power	M		INTEGER (-60..50)	EPR of SSS
SSB periodicity	M		ENUMERATED(5ms, 10ms, 20ms, 40ms, 80ms, 160ms, ...)	
SSB half frame index	M		INTEGER(0..1)	
SSB SFN offset	M		INTEGER(0..15)	
CHOICE SSB Position in Burst	O			
>Short Bitmap			BIT STRING (SIZE(4))	
>Medium Bitmap			BIT STRING (SIZE(8))	
>Long Bitmap			BIT STRING (SIZE(64))	
SFN initialisation time	O		9.2.36	

9.2.56 DL-PRS Muting Pattern

This information element contains the DL-PRS muting pattern.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE DL-PRS Muting Pattern	M			
>Two	M		BIT STRING (SIZE(2))	
>Four	M		BIT STRING (SIZE(4))	
>Six	M		BIT STRING (SIZE(6))	
>Eight	M		BIT STRING (SIZE(8))	
>Sixteen	M		BIT STRING (SIZE(16))	
>Thirty-two	M		BIT STRING (SIZE(32))	

9.2.57 Measurement Beam Information

This information element contains the receiving beam information when measuring UL signals.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PRS Resource ID	O		INTEGER(0..63)	
PRS Resource Set ID	O		INTEGER(0..7)	
SSB Index	O		INTEGER(0..63)	

9.2.58 NR-PRS Beam Information

This IE contains spatial direction information of the DL-PRS Resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR-PRS Beam Information		$1 .. <maxPRS-ResourceSets>$		
>PRS Resource Set ID	M		INTEGER (0..7)	The resource set in which the resources are associated with the angle.
>PRS Angle Item		$1..<maxPRS-ResourcesPerSet>$		
>>NR PRS Azimuth	M		INTEGER (0..359)	
>>NR PRS Azimuth fine	O		INTEGER (0..9)	Fine angles
>>NR PRS Elevation	O		INTEGER (0..180)	
>>NR PRS Elevation fine	O		INTEGER (0..9)	Fine angles
LCS to GCS Translation		$0 .. <maxnolcs-gcs-translation>$		If absent, the azimuth and elevation are provided in GCS.
>Alpha	M		INTEGER (0..359)	
>Alpha-fine	O		INTEGER (0..9)	Fine angles
>Beta	M		INTEGER (0..359)	
>Beta-fine	O		INTEGER (0..9)	Fine angles
>Gamma	M		INTEGER (0..359)	
>Gamma-fine	O		INTEGER (0..9)	Fine angles

Range bound	Explanation
maxPRS-ResourceSets	Maximum no of DL-PRS resource sets per TRP. Value is 2.
maxPRS-ResourcesPerSet	Maximum no of DL-PRS resources of the DL-PRS resource set of the TRP. Value is 64.
maxnolcs-gcs-translation	Maximum no. of LCS-GS-Translation-Parameters that can be reported with one message. Value is 3. The current version of the specification supports 1.

9.2.59 Positioning Broadcast Cells

This IE is used to indicate the cells that are requested to broadcast, or failed to broadcast, the associated posSIB(s).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Positioning Broadcast Cells		$1 .. <maxnoBcastCells>$		
>NG-RAN-CGI	M		9.2.6	

Range bound	Explanation
maxnoBcastCells	Maximum no. of cells broadcasting a posSIB in a NG-RAN node. Value is 16384.

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

Sub clause 9.3 presents the Abstract Syntax of the NRPPa protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of NRPPa messages. NRPPa messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an NRPPa message according to the PDU definitions module and with the following additional rules (Note that in the following, "IE" means an IE in the object set with an explicit id. If one IE needs to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If an NRPPa message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

```
-- ASN1START
-- ****
-- Elementary Procedure definitions
-- ****
```

```
NRPPA-PDU-Descriptions {
    itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
    ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-PDU-Descriptions (0) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- ****
-- IE parameter types from other modules.
--
-- ****

IMPORTS
    Criticality,
    ProcedureCode,
    NRPPATransactionID

FROM NRPPA-CommonDataTypes

ErrorIndication,
PrivateMessage,
E-CIDMeasurementInitiationRequest,
E-CIDMeasurementInitiationResponse,
E-CIDMeasurementInitiationFailure,
E-CIDMeasurementFailureIndication,
E-CIDMeasurementReport,
E-CIDMeasurementTerminationCommand,
OTDOAInformationRequest,
OTDOAInformationResponse,
OTDOAInformationFailure,
AssistanceInformationControl,
AssistanceInformationFeedback,
PositioningInformationRequest,
PositioningInformationResponse,
PositioningInformationFailure,
PositioningInformationUpdate,
MeasurementRequest,
MeasurementResponse,
MeasurementFailure,
MeasurementReport,
MeasurementUpdate,
MeasurementAbort,
MeasurementFailureIndication,
TRPInformationRequest,
TRPInformationResponse,
TRPInformationFailure,
PositioningActivationRequest,
PositioningActivationResponse,
PositioningActivationFailure,
PositioningDeactivation
```

```

FROM NRPPA-PDU-Contents

id-errorIndication,
id-privateMessage,
id-e-CIDMeasurementInitiation,
id-e-CIDMeasurementFailureIndication,
id-e-CIDMeasurementReport,
id-e-CIDMeasurementTermination,
id-oTDOAInformationExchange,
id-assistanceInformationControl,
id-assistanceInformationFeedback,
id-positioningInformationExchange,
id-positioningInformationUpdate,
id-Measurement,
id-MeasurementReport,
id-MeasurementUpdate,
id-MeasurementAbort,
id-MeasurementFailureIndication,
id-tRPInformationExchange,
id-positioningActivation,
id-positioningDeactivation

FROM NRPPA-Constants;

-- *****
-- 
-- Interface Elementary Procedure Class
-- 
-- *****

NRPPA-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    ,
    &SuccessfulOutcome          OPTIONAL,
    &UnsuccessfulOutcome        OPTIONAL,
    &procedureCode              ProcedureCode UNIQUE,
    &criticality                Criticality DEFAULT ignore
}
WITH SYNTAX {
    INITIATING MESSAGE      &InitiatingMessage
    [SUCCESSFUL OUTCOME]   &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME] &UnsuccessfulOutcome]
    PROCEDURE CODE          &procedureCode
    [CRITICALITY]           &criticality
}

-- *****
-- 
-- Interface PDU Definition
-- 
-- *****

```

```

NRPPA-PDU ::= CHOICE {
    initiatingMessage      InitiatingMessage,
    successfulOutcome      SuccessfulOutcome,
    unsuccessfulOutcome   UnsuccessfulOutcome,
    ...
}

InitiatingMessage ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ( {NRPPA-ELEMENTARY-PROCEDURES} ),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality        ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} ),
    nrppatransactionID    NRPPATransactionID,
    value                  NRPPA-ELEMENTARY-PROCEDURE.&InitiatingMessage    ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} )
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ( {NRPPA-ELEMENTARY-PROCEDURES} ),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality        ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} ),
    nrppatransactionID    NRPPATransactionID,
    value                  NRPPA-ELEMENTARY-PROCEDURE.&SuccessfulOutcome    ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} )
}

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ( {NRPPA-ELEMENTARY-PROCEDURES} ),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality        ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} ),
    nrppatransactionID    NRPPATransactionID,
    value                  NRPPA-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ( {NRPPA-ELEMENTARY-PROCEDURES} {@procedureCode} )
}

-- ****
-- 
-- Interface Elementary Procedure List
-- 
-- ****

NRPPA-ELEMENTARY-PROCEDURES NRPPA-ELEMENTARY-PROCEDURE ::= {
    NRPPA-ELEMENTARY-PROCEDURES-CLASS-1           |
    NRPPA-ELEMENTARY-PROCEDURES-CLASS-2           ,
    ...
}

NRPPA-ELEMENTARY-PROCEDURES-CLASS-1 NRPPA-ELEMENTARY-PROCEDURE ::= {
    e-CIDMeasurementInitiation | 
    oTDOAInformationExchange | 
    positioningInformationExchange | 
    measurement | 
    tRPInformationExchange | 
    positioningActivation,
    ...
}

NRPPA-ELEMENTARY-PROCEDURES-CLASS-2 NRPPA-ELEMENTARY-PROCEDURE ::= {
    e-CIDMeasurementFailureIndication |
}

```

```

e-CIDMeasurementReport
e-CIDMeasurementTermination
errorIndication
privateMessage
assistanceInformationControl
assistanceInformationFeedback
positioningInformationUpdate
measurementReport
measurementUpdate
measurementAbort
measurementFailureIndication
positioningDeactivation,
...
}

-- *****
-- Interface Elementary Procedures
--
-- *****

e-CIDMeasurementInitiation NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      E-CIDMeasurementInitiationRequest
    SUCCESSFUL OUTCOME     E-CIDMeasurementInitiationResponse
    UNSUCCESSFUL OUTCOME   E-CIDMeasurementInitiationFailure
    PROCEDURE CODE          id-e-CIDMeasurementInitiation
    CRITICALITY             reject
}

e-CIDMeasurementFailureIndication NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      E-CIDMeasurementFailureIndication
    PROCEDURE CODE          id-e-CIDMeasurementFailureIndication
    CRITICALITY             ignore
}

e-CIDMeasurementReport NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      E-CIDMeasurementReport
    PROCEDURE CODE          id-e-CIDMeasurementReport
    CRITICALITY             ignore
}

e-CIDMeasurementTermination NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      E-CIDMeasurementTerminationCommand
    PROCEDURE CODE          id-e-CIDMeasurementTermination
    CRITICALITY             reject
}

oOTDOAInformationExchange NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      OTDOAInformationRequest
    SUCCESSFUL OUTCOME     OTDOAInformationResponse
    UNSUCCESSFUL OUTCOME   OTDOAInformationFailure
    PROCEDURE CODE          id-oOTDOAInformationExchange
    CRITICALITY             reject
}

```

```

}

assistanceInformationControl NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AssistanceInformationControl
    PROCEDURE CODE          id-assistanceInformationControl
    CRITICALITY             reject
}

assistanceInformationFeedback NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      AssistanceInformationFeedback
    PROCEDURE CODE          id-assistanceInformationFeedback
    CRITICALITY             reject
}

errorIndication NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      ErrorIndication
    PROCEDURE CODE          id-errorIndication
    CRITICALITY             ignore
}

privateMessage NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PrivateMessage
    PROCEDURE CODE          id-privateMessage
    CRITICALITY             ignore
}

positioningInformationExchange NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningInformationRequest
    SUCCESSFUL OUTCOME       PositioningInformationResponse
    UNSUCCESSFUL OUTCOME     PositioningInformationFailure
    PROCEDURE CODE          id-positioningInformationExchange
    CRITICALITY             reject
}

positioningInformationUpdate NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningInformationUpdate
    PROCEDURE CODE          id-positioningInformationUpdate
    CRITICALITY             ignore
}

measurement NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementRequest
    SUCCESSFUL OUTCOME       MeasurementResponse
    UNSUCCESSFUL OUTCOME     MeasurementFailure
    PROCEDURE CODE          id-Measurement
    CRITICALITY             reject
}

measurementReport NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementReport
}

```

```

PROCEDURE CODE      id-MeasurementReport
CRITICALITY        ignore
}

measurementUpdate   NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementUpdate
    PROCEDURE CODE          id-MeasurementUpdate
    CRITICALITY            ignore
}

measurementAbort   NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementAbort
    PROCEDURE CODE          id-MeasurementAbort
    CRITICALITY            ignore
}

measurementFailureIndication   NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementFailureIndication
    PROCEDURE CODE          id-MeasurementFailureIndication
    CRITICALITY            ignore
}

tRPIinformationExchange   NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TRPInformationRequest
    SUCCESSFUL OUTCOME      TRPInformationResponse
    UNSUCCESSFUL OUTCOME    TRPInformationFailure
    PROCEDURE CODE          id-tRPIinformationExchange
    CRITICALITY             reject
}

positioningActivation NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningActivationRequest
    SUCCESSFUL OUTCOME      PositioningActivationResponse
    UNSUCCESSFUL OUTCOME    PositioningActivationFailure
    PROCEDURE CODE          id-positioningActivation
    CRITICALITY             reject
}

positioningDeactivation NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningDeactivation
    PROCEDURE CODE          id-positioningDeactivation
    CRITICALITY            ignore
}

}

END
-- ASN1STOP

```

9.3.4 PDU Definitions

```

-- ASN1START
-- ****
-- 
```

```
-- PDU definitions for NRPPa
--
-- ****
NRPPA-PDU-Contents {
    itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
    ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-PDU-Contents (1) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- ****
-- IE parameter types from other modules
-- ****

IMPORTS

    Cause,
    CriticalityDiagnostics,
    E-CID-MeasurementResult,
    OTDOACells,
    OTDOA-Information-Item,
    Measurement-ID,
    UE-Measurement-ID,
    MeasurementPeriodicity,
    MeasurementQuantities,
    ReportCharacteristics,
    RequestedSRSTransmissionCharacteristics,
    Cell-Portion-ID,
    OtherRATMeasurementQuantities,
    OtherRATMeasurementResult,
    WLANMeasurementQuantities,
    WLANMeasurementResult,
    Assistance-Information,
    Broadcast,
    AssistanceInformationFailureList,
    SRSConfiguration,
    TRPMeasurementQuantities,
    TrpMeasurementResult,
    TRP-ID,
    TRPInformationTypeListTRPReq,
    TRPInformationListTRPResp,
    TRP-MeasurementRequestList,
    TRP-MeasurementResponseList,
    MeasurementBeamInfoRequest,
    PositioningBroadcastCells,
    SRSSResourceSetID,
    SRSSpatialRelation,
    SRSSResourceTrigger,
    TRPList,
    AbortTransmission,
```

```

SystemFrameNumber,
SlotNumber,
SFNInitialisationTime

FROM NRPPA-IES

PrivateIE-Container{},
ProtocolExtensionContainer{},
ProtocolIE-Container{},
ProtocolIE-ContainerList{},
ProtocolIE-Single-Container{},
NRPPA-PRIVATE-IES,
NRPPA-PROTOCOL-EXTENSION,
NRPPA-PROTOCOL-IES
FROM NRPPA-Containers

maxnoOTDOAtypes,
id-Cause,
id-CriticalityDiagnostics,
id-LMF-Measurement-ID,
id-LMF-UE-Measurement-ID,
id-OTDOACells,
id-OTDOA-Information-Type-Group,
id-OTDOA-Information-Type-Item,
id-ReportCharacteristics,
id-MeasurementPeriodicity,
id-MeasurementQuantities,
id-RAN-Measurement-ID,
id-RAN-UE-Measurement-ID,
id-E-CID-MeasurementResult,
id-RequestedSRSTransmissionCharacteristics,
id-Cell-Portion-ID,
id-OtherRATMeasurementQuantities,
id-OtherRATMeasurementResult,
id-WLANMeasurementQuantities,
id-WLANMeasurementResult,
id-Assistance-Information,
id-Broadcast,
id-AssistanceInformationFailureList,
id-SRSConfiguration,
id-TRPMeasurementQuantities,
id-MeasurementResult,
id-TRP-ID,
id-TRPInformationTypeListTRPReq,
id-TRPInformationListTRPResp,
id-TRP-MeasurementRequestList,
id-TRP-MeasurementResponseList,
id-TRP-MeasurementReportList,
id-MeasurementBeamInfoRequest,
id-PositioningBroadcastCells,
id-SRSType,
id-ActivationTime,

```

```

id-SRSResourceSetID,
id-TRPList,
id-SRSSpatialRelation,
id-AbortTransmission,
id-SystemFrameNumber,
id-SlotNumber,
id-SRSResourceTrigger,
id-SFNInitialisationTime

FROM NRPPA-Constants;

-- *****
-- E-CID MEASUREMENT INITIATION REQUEST
-- *****

E-CIDMeasurementInitiationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {E-CIDMeasurementInitiationRequest-IEs},
    ...
}

E-CIDMeasurementInitiationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject   TYPE UE-Measurement-ID
    { ID id-ReportCharacteristics         CRITICALITY reject   TYPE ReportCharacteristics
    { ID id-MeasurementPeriodicity       CRITICALITY reject   TYPE MeasurementPeriodicity
-- The IE shall be present if the Report Characteristics IE is set to "periodic" --
    { ID id-MeasurementQuantities        CRITICALITY reject   TYPE MeasurementQuantities
    { ID id-OtherRATMeasurementQuantities CRITICALITY ignore    TYPE OtherRATMeasurementQuantities
    { ID id-WLANMeasurementQuantities     CRITICALITY ignore    TYPE WLANMeasurementQuantities
    ...
}

-- *****
-- E-CID MEASUREMENT INITIATION RESPONSE
-- *****

E-CIDMeasurementInitiationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {E-CIDMeasurementInitiationResponse-IEs},
    ...
}

E-CIDMeasurementInitiationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject   TYPE UE-Measurement-ID
    { ID id-RAN-UE-Measurement-ID         CRITICALITY reject   TYPE UE-Measurement-ID
    { ID id-E-CID-MeasurementResult       CRITICALITY ignore    TYPE E-CID-MeasurementResult
    { ID id-CriticalityDiagnostics       CRITICALITY ignore    TYPE CriticalityDiagnostics
    { ID id-Cell-Portion-ID               CRITICALITY ignore    TYPE Cell-Portion-ID
    { ID id-OtherRATMeasurementResult     CRITICALITY ignore    TYPE OtherRATMeasurementResult
    { ID id-WLANMeasurementResult         CRITICALITY ignore    TYPE WLANMeasurementResult
    ...
}

```

PRESENCE mandatory} |
PRESENCE mandatory} |
PRESENCE conditional} |

PRESENCE mandatory} |
PRESENCE optional} |
PRESENCE optional},

PRESENCE mandatory} |
PRESENCE mandatory} |
PRESENCE optional} |

PRESENCE optional} |
PRESENCE optional} |
PRESENCE optional},

```

}

-- *****
-- E-CID MEASUREMENT INITIATION FAILURE
-- *****

E-CIDMeasurementInitiationFailure ::= SEQUENCE {
    protocolIEs                  ProtocolIE-Container     {{E-CIDMeasurementInitiationFailure-IEs}}, 
    ...
}

E-CIDMeasurementInitiationFailure-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID          PRESENCE mandatory} |
    { ID id-Cause                      CRITICALITY ignore   TYPE Cause                   PRESENCE mandatory} |
    { ID id-CriticalityDiagnostics    CRITICALITY ignore   TYPE CriticalityDiagnostics  PRESENCE optional}, 
    ...
}

-- *****
-- E-CID MEASUREMENT FAILURE INDICATION
-- *****

E-CIDMeasurementFailureIndication ::= SEQUENCE {
    protocolIEs                  ProtocolIE-Container     {{E-CIDMeasurementFailureIndication-IEs}}, 
    ...
}

E-CIDMeasurementFailureIndication-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID          PRESENCE mandatory} |
    { ID id-RAN-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID          PRESENCE mandatory} |
    { ID id-Cause                      CRITICALITY ignore   TYPE Cause                   PRESENCE mandatory}, 
    ...
}

-- *****
-- E-CID MEASUREMENT REPORT
-- *****

E-CIDMeasurementReport ::= SEQUENCE {
    protocolIEs                  ProtocolIE-Container     {{E-CIDMeasurementReport-IEs}}, 
    ...
}

E-CIDMeasurementReport-IEs NRPPA-PROTOCOL-IES ::= {
}

```

```

{ ID id-LMF-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID      PRESENCE mandatory}|
{ ID id-RAN-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID      PRESENCE mandatory}|
{ ID id-E-CID-MeasurementResult    CRITICALITY ignore   TYPE E-CID-MeasurementResult  PRESENCE mandatory}|
{ ID id-Cell-Portion-ID           CRITICALITY ignore   TYPE Cell-Portion-ID        PRESENCE optional},

}

-- *****
-- 
-- E-CID MEASUREMENT TERMINATION
-- 
-- *****

E-CIDMeasurementTerminationCommand ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container     {{E-CIDMeasurementTerminationCommand-IEs}} ,
  ...
}

E-CIDMeasurementTerminationCommand-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID      PRESENCE mandatory}|
  { ID id-RAN-UE-Measurement-ID      CRITICALITY reject   TYPE UE-Measurement-ID      PRESENCE mandatory},
  ...
}

-- *****
-- 
-- OTDOA INFORMATION REQUEST
-- 
-- *****

OTDOAInformationRequest ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container     {{OTDOAInformationRequest-IEs}} ,
  ...
}

OTDOAInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-OTDOA-Information-Type-Group      CRITICALITY reject   TYPE OTDOA-Information-Type      PRESENCE mandatory},
  ...
}

OTDOA-Information-Type ::= SEQUENCE (SIZE(1..maxnoOTDOAtypes)) OF ProtocolIE-Single-Container { { OTDOA-Information-TypeIEs} }

OTDOA-Information-TypeIEs NRPPA-PROTOCOL-IES ::= {
  { ID id-OTDOA-Information-Type-Item      CRITICALITY reject   TYPE OTDOA-Information-Type-Item      PRESENCE mandatory},
  ...
}

OTDOA-Information-Type-Item ::= SEQUENCE {
  oTDOA-Information-Type-Item      OTDOA-Information-Item,
  iE-Extensions                  ProtocolExtensionContainer { { OTDOA-Information-Type-ItemExtIEs} } OPTIONAL,
  ...
}

```

```

OTDOA-Information-Type-ItemExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- ****
-- 
-- OTDOA INFORMATION RESPONSE
-- 

OTDOAInformationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container     {{OTDOAInformationResponse-IEs}},
    ...
}

OTDOAInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OTDOACells           CRITICALITY ignore   TYPE OTDOACells           PRESENCE mandatory} |
    { ID id-CriticalityDiagnostics   CRITICALITY ignore   TYPE CriticalityDiagnostics   PRESENCE optional},
    ...
}

-- ****
-- 
-- OTDOA INFORMATION FAILURE
-- 

OTDOAInformationFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container     {{OTDOAInformationFailure-IEs}},
    ...
}

OTDOAInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause                 CRITICALITY ignore   TYPE Cause                 PRESENCE mandatory} |
    { ID id-CriticalityDiagnostics   CRITICALITY ignore   TYPE CriticalityDiagnostics   PRESENCE optional},
    ...
}

-- ****
-- 
-- ASSISTANCE INFORMATION CONTROL
-- 

AssistanceInformationControl ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container     {{AssistanceInformationControl-IEs}},
    ...
}

AssistanceInformationControl-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Assistance-Information   CRITICALITY reject   TYPE Assistance-Information   PRESENCE optional} |
    { ID id-Broadcast               CRITICALITY reject   TYPE Broadcast               PRESENCE optional} |
    { ID id-PositioningBroadcastCells   CRITICALITY reject   TYPE PositioningBroadcastCells   PRESENCE optional},
}

```

```

}
...
-- ****
-- ASSISTANCE INFORMATION FEEDBACK
-- ****
AssistanceInformationFeedback ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{AssistanceInformationFeedback-IEs}},
    ...
}

AssistanceInformationFeedback-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-AssistanceInformationFailureList      CRITICALITY reject   TYPE AssistanceInformationFailureList  PRESENCE optional}|  

    { ID id-PositioningBroadcastCells            CRITICALITY reject   TYPE PositioningBroadcastCells        PRESENCE optional}|  

    { ID id-CriticalityDiagnostics             CRITICALITY ignore    TYPE CriticalityDiagnostics        PRESENCE optional},
    ...
}

-- ****
-- ERROR INDICATION
-- ****
ErrorIndication ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{ErrorIndication-IEs}},
    ...
}

ErrorIndication-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause                      CRITICALITY ignore   TYPE Cause                  PRESENCE optional}|  

    { ID id-CriticalityDiagnostics     CRITICALITY ignore   TYPE CriticalityDiagnostics  PRESENCE optional},
    ...
}

-- ****
-- PRIVATE MESSAGE
-- ****
PrivateMessage ::= SEQUENCE {
    privateIEs      PrivateIE-Container  {{PrivateMessage-IEs}},
    ...
}

PrivateMessage-IEs NRPPA-PRIVATE-IES ::= {
    ...
}

```

```

-- ****
-- POSITIONING INFORMATION REQUEST
-- ****

PositioningInformationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {{PositioningInformationRequest-IEs}},
    ...
}

PositioningInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-RequestedSRSTransmissionCharacteristics CRITICALITY ignore   TYPE RequestedSRSTransmissionCharacteristics   PRESENCE optional},
    ...
}

-- ****
-- POSITIONING INFORMATION RESPONSE
-- ****

PositioningInformationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {{PositioningInformationResponse-IEs}},
    ...
}

PositioningInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-SRSConfiguration           CRITICALITY ignore   TYPE SRSConfiguration          PRESENCE optional}|  

    { ID id-SFNInitialisationTime     CRITICALITY ignore   TYPE SFNInitialisationTime      PRESENCE optional}|  

    { ID id-CriticalityDiagnostics   CRITICALITY ignore   TYPE CriticalityDiagnostics    PRESENCE optional},
    ...
}

-- ****
-- POSITIONING INFORMATION FAILURE
-- ****

PositioningInformationFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {{PositioningInformationFailure-IEs}},
    ...
}

PositioningInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause                     CRITICALITY ignore   TYPE Cause                  PRESENCE mandatory}|  

    { ID id-CriticalityDiagnostics   CRITICALITY ignore   TYPE CriticalityDiagnostics  PRESENCE optional},
    ...
}

-- ****
-- 
```

```

-- POSITIONING INFORMATION UPDATE
--
-- ****
PositioningInformationUpdate ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {PositioningInformationUpdate-IEs} ,
    ...
}

PositioningInformationUpdate-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-SRSConfiguration          CRITICALITY ignore   TYPE SRSConfiguration           PRESENCE optional}|  

    { ID id-SFNInitialisationTime     CRITICALITY ignore   TYPE SFNInitialisationTime       PRESENCE optional},
    ...
}

-- ****
-- MEASUREMENT REQUEST
--
-- ****

MeasurementRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {MeasurementRequest-IEs} ,
    ...
}

MeasurementRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-Measurement-ID        CRITICALITY reject   TYPE Measurement-ID             PRESENCE mandatory}|  

    { ID id-TRP-MeasurementRequestList CRITICALITY reject   TYPE TRP-MeasurementRequestList  PRESENCE mandatory}|  

    { ID id-ReportCharacteristics    CRITICALITY reject   TYPE ReportCharacteristics      PRESENCE mandatory}|  

    { ID id-MeasurementPeriodicity   CRITICALITY reject   TYPE MeasurementPeriodicity      PRESENCE conditional}|  

-- The IE shall be present if the Report Characteristics IE is set to "periodic" -
    { ID id-TRPMeasurementQuantities CRITICALITY reject   TYPE TRPMeasurementQuantities  PRESENCE mandatory}|  

    { ID id-SFNInitialisationTime    CRITICALITY ignore   TYPE SFNInitialisationTime     PRESENCE optional}|  

    { ID id-SRSConfiguration         CRITICALITY ignore   TYPE SRSConfiguration          PRESENCE optional}|  

    { ID id-MeasurementBeamInfoRequest CRITICALITY ignore  TYPE MeasurementBeamInfoRequest  PRESENCE optional}|  

    { ID id-SystemFrameNumber        CRITICALITY ignore   TYPE SystemFrameNumber         PRESENCE optional}|  

    { ID id-SlotNumber               CRITICALITY ignore   TYPE SlotNumber                 PRESENCE optional},
    ...
}

-- ****
-- MEASUREMENT RESPONSE
--
-- ****

MeasurementResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container   {MeasurementResponse-IEs} ,
    ...
}

MeasurementResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-Measurement-ID        CRITICALITY reject   TYPE Measurement-ID             PRESENCE mandatory}|  


```

```

{ ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
{ ID id-TRP-MeasurementResponseList CRITICALITY reject  TYPE TRP-MeasurementResponseList PRESENCE optional}|
{ ID id-CriticalityDiagnostics    CRITICALITY ignore   TYPE CriticalityDiagnostics   PRESENCE optional},
...
}

-- ****
-- MEASUREMENT FAILURE
--
-- ****

MeasurementFailure ::= SEQUENCE {
  protocolIEs           ProtocolIE-Container     { {MeasurementFailure-IEs} },
  ...
}

MeasurementFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
  { ID id-Cause                  CRITICALITY ignore   TYPE Cause                PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore   TYPE CriticalityDiagnostics   PRESENCE optional},
  ...
}

-- ****
-- MEASUREMENT REPORT
--
-- ****

MeasurementReport ::= SEQUENCE {
  protocolIEs           ProtocolIE-Container     { {MeasurementReport-IEs} },
  ...
}

MeasurementReport-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
  { ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
  { ID id-TRP-MeasurementReportList CRITICALITY reject  TYPE TRP-MeasurementResponseList PRESENCE mandatory},
  ...
}

-- ****
-- MEASUREMENT UPDATE
--
-- ****

MeasurementUpdate ::= SEQUENCE {
  protocolIEs           ProtocolIE-Container     { {MeasurementUpdate-IEs} },
  ...
}

```

```

MeasurementUpdate-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject   TYPE Measurement-ID
  { ID id-RAN-Measurement-ID     CRITICALITY reject   TYPE Measurement-ID
  { ID id-SRSConfiguration       CRITICALITY ignore   TYPE SRSConfiguration
  ...
}

-- ****
-- MEASUREMENT ABORT
--
-- ****

MeasurementAbort ::= SEQUENCE {
  protocolIEs    ProtocolIE-Container   { {MeasurementAbort-IEs} },
  ...
}

MeasurementAbort-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject   TYPE Measurement-ID
  { ID id-RAN-Measurement-ID     CRITICALITY reject   TYPE Measurement-ID
  ...
}

-- ****
-- MEASUREMENT FAILURE INDICATION
--
-- ****

MeasurementFailureIndication ::= SEQUENCE {
  protocolIEs    ProtocolIE-Container   { {MeasurementFailureIndication-IEs} },
  ...
}

MeasurementFailureIndication-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject   TYPE Measurement-ID
  { ID id-RAN-Measurement-ID     CRITICALITY reject   TYPE Measurement-ID
  { ID id-Cause                   CRITICALITY ignore   TYPE Cause
  ...
}

-- ****
-- TRP INFORMATION REQUEST
--
-- ****

TRPInformationRequest ::= SEQUENCE {
  protocolIEs    ProtocolIE-Container   { {TRPInformationRequest-IEs} },
  ...
}

```

```

TRPInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-TRPList                                CRITICALITY ignore   TYPE TRPList                  PRESENCE optional} |
  { ID id-TRPInformationTypeListTRPReq           CRITICALITY reject    TYPE TRPInformationTypeListTRPReq          PRESENCE mandatory},
  ...
}

-- ****
-- TRP INFORMATION RESPONSE
--
-- ****

TRPInformationResponse ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container     { {TRPInformationResponse-IEs} },
  ...
}

TRPInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-TRPInformationListTRPResp            CRITICALITY ignore   TYPE TRPInformationListTRPResp          PRESENCE mandatory} |
  { ID id-CriticalityDiagnostics             CRITICALITY ignore   TYPE CriticalityDiagnostics    PRESENCE optional},
  ...
}

-- ****
-- TRP INFORMATION FAILURE
--
-- ****

TRPInformationFailure ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container     { {TRPInformationFailure-IEs} },
  ...
}

TRPInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Cause                               CRITICALITY ignore   TYPE Cause                  PRESENCE mandatory} |
  { ID id-CriticalityDiagnostics             CRITICALITY ignore   TYPE CriticalityDiagnostics    PRESENCE optional},
  ...
}

-- ****
-- POSITIONING ACTIVATION REQUEST
--
-- ****

PositioningActivationRequest ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container     { { PositioningActivationRequestIEs} },
  ...
}

PositioningActivationRequestIEs NRPPA-PROTOCOL-IES ::= {
}

```

```

{ ID id-SRSType           CRITICALITY reject  TYPE SRSType
{ ID id-ActivationTime    CRITICALITY ignore   TYPE SFNInitialisationTime
  ...
}

SRSType ::= CHOICE {
  semipersistentSRS      SemipersistentSRS,
  aperiodicSRS           AperiodicSRS,
  sRSType-extension      ProtocolIE-Single-Container { { SRSType-ExtIEs} }
}

SRSType-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

SemipersistentSRS ::= SEQUENCE {
  SRSResourceSetID        SRSResourceSetID,
  iE-Extensions           ProtocolExtensionContainer { { SemipersistentSRS-ExtIEs} } OPTIONAL,
  ...
}

SemipersistentSRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
{ ID id-SRSSpatialRelation CRITICALITY ignore  EXTENSION SRSSpatialRelation PRESENCE optional},
...
}

AperiodicSRS ::= SEQUENCE {
  aperiodic                ENUMERATED{true,...},
  SRSResourceTrigger        SRSResourceTrigger OPTIONAL,
  iE-Extensions             ProtocolExtensionContainer { { AperiodicSRS-ExtIEs} } OPTIONAL,
  ...
}

AperiodicSRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

-- ****
-- 
-- POSITIONING ACTIVATION RESPONSE
-- 
-- ****

PositioningActivationResponse ::= SEQUENCE {
  protocolIEs              ProtocolIE-Container     { { PositioningActivationResponseIEs} },
  ...
}

PositioningActivationResponseIEs NRPPA-PROTOCOL-IES ::= {
{ ID id-CriticalityDiagnostics   CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional }|
{ ID id-SystemFrameNumber         CRITICALITY ignore  TYPE SystemFrameNumber         PRESENCE optional }|
{ ID id-SlotNumber               CRITICALITY ignore  TYPE SlotNumber               PRESENCE optional },

```

```

}

-- *****
-- POSITIONING ACTIVATION FAILURE
-- *****
PositioningActivationFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { { PositioningActivationFailureIEs} } ,
    ...
}

PositioningActivationFailureIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause                  CRITICALITY ignore   TYPE Cause           PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics CRITICALITY ignore   TYPE CriticalityDiagnostics  PRESENCE optional },
    ...
}

-- *****
-- POSITIONING DEACTIVATION
-- *****
PositioningDeactivation ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { { PositioningDeactivationIEs} } ,
    ...
}

PositioningDeactivationIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-AbortTransmission      CRITICALITY ignore   TYPE AbortTransmission  PRESENCE mandatory } ,
    ...
}

END
-- ASN1STOP

```

9.3.5 Information Element definitions

```

-- ASN1START
-- *****
-- Information Element Definitions
-- *****
NRPPA-IEs {

```

```
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-IEs (2) }
```

```
DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
IMPORTS
```

```
id-MeasurementQuantities-Item,
id-CGI-NR,
id-SFNInitialisationTime-NR,
id-GeographicalCoordinates,
id-ResultSS-RSRP,
id-ResultSS-RSRQ,
id-ResultCSI-RSRP,
id-ResultCSI-RSRQ,
id-AngleOfArrivalNR,
id-SRSSpatialRelation,
id-ResultNR,
id-ResultEUTRA,
maxCellinRANnode,
maxCellReport,
maxNrOfErrors,
maxNoMeas,
maxnoOTDOAtypes,
maxServCell,
id-OtherRATMeasurementQuantities-Item,
id-WLANMeasurementQuantities-Item,
maxGERANMeas,
maxUTRANMeas,
maxWLANchannels,
maxnoFreqHoppingBandsMinusOne,
id-TDD-Config-EUTRA-Item,
maxNrOfPosSIMessage,
maxnoAssistInfoFailureListItems,
maxNrOfSegments,
maxNrOfPosSIBs,
maxnoPosMeas,
maxnoTRPs,
maxnoTRPInfoTypes,
maxNoOfMeasTRPs,
maxNoPath,
maxnoofAngleInfo,
maxnolcs-gcs-translation,
maxnoBcastCell,
maxnoSRSTriggerStates,
maxnoSpatialRelations,
maxNRMeas,
maxEUTRAMeas,
maxIndexesReport,
maxCellReportNR,
maxnoSRS-Carriers,
maxnoSCSs,
```

```

maxnoSRS-Resources,
maxnoSRS-PoSResources,
maxnoSRS-ResourceSets,
maxnoSRS-ResourcePerSet,
maxnoSRS-PoSResourceSets,
maxnoSRS-PoSResourcePerSet,
maxPRS-ResourceSets,
maxPRS-ResourcesPerSet,
maxNoSSBs,
maxnoofPRSresourceSet,
maxnoofPRSresource,
id-Cell-ID,
id-TRPInformationTypeItem

FROM NRPPA-Constants
  Criticality,
  NRPPATransactionID,
  ProcedureCode,
  ProtocolIE-ID,
  TriggeringMessage

FROM NRPPA-CommonDataTypes
  ProtocolExtensionContainer{},
  ProtocolIE-Single-Container{},
  NRPPA-PROTOCOL-EXTENSION,
  NRPPA-PROTOCOL-IES

FROM NRPPA-Containers;
-- A

AbortTransmission ::= CHOICE {
  deactivateSRSResourceSetID      SRSResourceSetID,
  releaseALL                      NULL,
  choice-extension                ProtocolIE-Single-Container { { AbortTransmission-ExtIEs } }
}

AbortTransmission-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

ActiveULBWP ::= SEQUENCE {
  locationAndBandwidth           INTEGER (0..37949,...),
  subcarrierSpacing               ENUMERATED {kHz15, kHz30, kHz60, kHz120,...},
  cyclicPrefix                     ENUMERATED {normal, extended},
  txDirectCurrentLocation        INTEGER (0..3301,...),
  shift7dot5kHz                   ENUMERATED {true, ...} OPTIONAL,
  sRSConfig,
  iE-Extensions                  ProtocolExtensionContainer { { ActiveULBWP-ExtIEs } } OPTIONAL,
}

```

```

}

ActiveULBWP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

AdditionalPathList ::= SEQUENCE (SIZE (1.. maxNoPath)) OF AdditionalPathListItem

AdditionalPathListItem ::= SEQUENCE {
  relativeTimeOfPath RelativePathDelay,
  pathQuality      TrpMeasurementQuality OPTIONAL,
  iE-Extensions     ProtocolExtensionContainer { { AdditionalPathListItem-ExtIEs} } OPTIONAL,
  ...
}

AdditionalPathListItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

AperiodicSRSResourceTriggerList ::= SEQUENCE (SIZE(1..maxnoSRSTriggerStates)) OF AperiodicSRSResourceTrigger
AperiodicSRSResourceTrigger ::= INTEGER (1..3)

Assistance-Information ::= SEQUENCE {
  systemInformation          SystemInformation,
  iE-Extensions               ProtocolExtensionContainer { { Assistance-Information-ExtIEs} } OPTIONAL,
  ...
}

Assistance-Information-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

AssistanceInformationFailureList ::= SEQUENCE (SIZE (1..maxnoAssistInfoFailureListItems)) OF SEQUENCE {
  possIB-Type                PossIB-Type,
  outcome                     Outcome,
  iE-Extensions               ProtocolExtensionContainer { { AssistanceInformationFailureList-ExtIEs} } OPTIONAL,
  ...
}

AssistanceInformationFailureList-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

AssistanceInformationMetaData ::= SEQUENCE {
  encrypted                  ENUMERATED {true, ...} OPTIONAL,
  gNSSID                     ENUMERATED {gps, sbas, qzss, galileo, glonass, bds, navic, ...} OPTIONAL,
  sBASID                     ENUMERATED {waas, egnos, msas, gagan, ...} OPTIONAL,
  iE-Extensions               ProtocolExtensionContainer { { AssistanceInformationMetaData-ExtIEs} } OPTIONAL,
  ...
}

```

```

}

AssistanceInformationMetaData-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- B

BandwidthSRS ::= CHOICE {
    fR1      ENUMERATED {mHz5, mHz10, mHz20, mHz40, mHz50, mHz80, mHz100, ...},
    fR2      ENUMERATED {mHz50, mHz100, mHz200, mHz400, ...},
    choice-extension      ProtocolIE-Single-Container { { BandwidthSRS-ExtIEs } }
}

BandwidthSRS-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

BCCH ::= INTEGER (0..1023, ...)

Broadcast ::= ENUMERATED {
    start,
    stop,
    ...
}

BroadcastPeriodicity ::= ENUMERATED {
    ms80,
    ms160,
    ms320,
    ms640,
    ms1280,
    ms2560,
    ms5120,
    ...
}

PositioningBroadcastCells ::= SEQUENCE (SIZE (1..maxnoBcastCell)) OF NG-RAN-CGI

BSSID ::= OCTET STRING (SIZE(6))

-- C

Cause ::= CHOICE {
    radioNetwork      CauseRadioNetwork,
    protocol         CauseProtocol,
    misc             CauseMisc,
    cause-Extension ProtocolIE-Single-Container {{ Cause-ExtensionIE }}
}

Cause-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

```

```

}

CauseMisc ::= ENUMERATED {
    unspecified,
    ...
}

CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified,
    abstract-syntax-error-falsely-constructed-message,
    ...
}

CauseRadioNetwork ::= ENUMERATED {
    unspecified,
    requested-item-not-supported,
    requested-item-temporarily-not-available,
    ...
}

Cell-Portion-ID ::= INTEGER (0..4095,...)

CGI-EUTRA ::= SEQUENCE {
    pLMN-Identity          PLMN-Identity,
    eUTRACellIdentifier   EUTRACellIdentifier,
    iE-Extensions           ProtocolExtensionContainer { {CGI-EUTRA-ExtIEs} } OPTIONAL,
    ...
}

CGI-EUTRA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CGI-NR ::= SEQUENCE {
    pLMN-Identity          PLMN-Identity,
    nRCellIdentifier       NRCellIdentifier,
    iE-Extensions           ProtocolExtensionContainer { {CGI-NR-ExtIEs} } OPTIONAL,
    ...
}

CGI-NR-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CPLength-EUTRA ::= ENUMERATED {
    normal,
}

```

```

extended,
...
}

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode                  OPTIONAL,
    triggeringMessage              OPTIONAL,
    procedureCriticality          OPTIONAL,
    nrppatransactionID            OPTIONAL,
    iEsCriticalityDiagnostics     CriticalityDiagnostics-IE-List OPTIONAL,
    iE-Extensions                 ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} } OPTIONAL,
    ...
}

CriticalityDiagnostics-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
        iECriticality      Criticality,
        iE-ID               ProtocolIE-ID,
        typeOfError         TypeOfError,
        iE-Extensions       ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
        ...
    }

CriticalityDiagnostics-IE-List-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- D

DL-Bandwidth-EUTRA ::= ENUMERATED {
    bw6,
    bw15,
    bw25,
    bw50,
    bw75,
    bw100,
    ...
}

DL-PRS ::= SEQUENCE {
    prsid                INTEGER (0..255),
    dl-PRSResourceSetID PRS-Resource-Set-ID,
    dl-PRSResourceID    PRS-Resource-ID   OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { {DL-PRS-ExtIEs} } OPTIONAL,
    ...
}

DL-PRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {

```

```

}

DL-PRSMutingPattern ::= CHOICE {
    two          BIT STRING (SIZE(2)),
    four         BIT STRING (SIZE(4)),
    six          BIT STRING (SIZE(6)),
    eight        BIT STRING (SIZE(8)),
    sixteen      BIT STRING (SIZE(16)),
    thirty-two   BIT STRING (SIZE(32)),
    choice-extension   ProtocolIE-Single-Container { { DL-PRSMutingPattern-ExtIEs } }
}

DL-PRSMutingPattern-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

DLPRSResourceCoordinates ::= SEQUENCE {
    listofDL-PRSResourceSetARP      SEQUENCE (SIZE(1.. maxPRS-ResourceSets)) OF DLPRSResourceSetARP,
    iE-Extensions                  ProtocolExtensionContainer { { DLPRSResourceCoordinates-ExtIEs } } OPTIONAL,
    ...
}

DLPRSResourceCoordinates-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

DLPRSResourceSetARP ::= SEQUENCE {
    dl-PRSResourceSetID           PRS-Resource-Set-ID,
    dL-PRSResourceSetARPLocation  DL-PRSResourceSetARPLocation,
    listofDL-PRSResourceARP       SEQUENCE (SIZE(1.. maxPRS-ResourcesPerSet)) OF DLPRSResourceARP,
    iE-Extensions                  ProtocolExtensionContainer { { DLPRSResourceSetARP-ExtIEs } } OPTIONAL,
    ...
}

DLPRSResourceSetARP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

DL-PRSResourceSetARPLocation ::= CHOICE {
    relativeGeodeticLocation      RelativeGeodeticLocation,
    relativeCartesianLocation     RelativeCartesianLocation,
    choice-Extension              ProtocolIE-Single-Container { { DL-PRSResourceSetARPLocation-ExtIEs } }
}

DL-PRSResourceSetARPLocation-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

DLPRSResourceARP ::= SEQUENCE {
    dl-PRSResourceID             PRS-Resource-ID,
    dL-PRSResourceARPLocation    DL-PRSResourceARPLocation,
    ...
}

```

```

iE-Extensions          ProtocolExtensionContainer { { DLPRSResourceARP-ExtIEs } } OPTIONAL,
...
}

DLPRSResourceARP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

DL-PRSResourceARPLocation ::= CHOICE {
  relativeGeodeticLocation      RelativeGeodeticLocation,
  relativeCartesianLocation     RelativeCartesianLocation,
  choice-Extension              ProtocolIE-Single-Container { { DL-PRSResourceARPLocation-ExtIEs } }
}
DL-PRSResourceARPLocation-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

-- E

E-CID-MeasurementResult ::= SEQUENCE {
  servingCell-ID           NG-RAN-CGI,
  servingCellTAC            TAC,
  nG-RANAccessPointPosition NG-RANAccessPointPosition OPTIONAL,
  measuredResults           MeasuredResults OPTIONAL,
  iE-Extensions             ProtocolExtensionContainer { { E-CID-MeasurementResult-ExtIEs } } OPTIONAL,
  ...
}

E-CID-MeasurementResult-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-GeographicalCoordinates CRITICALITY ignore EXTENSION GeographicalCoordinates PRESENCE optional },
  ...
}

EUTRACellIdentifier ::= BIT STRING (SIZE (28))

EARFCN ::= INTEGER (0..262143, ...)

-- F

-- G

GeographicalCoordinates ::= SEQUENCE {
  tRPPositionDefinitionType   TRPPositionDefinitionType,
  dLPRSResourceCoordinates    DLPRSResourceCoordinates   OPTIONAL,
  iE-Extensions               ProtocolExtensionContainer { { GeographicalCoordinates-ExtIEs } } OPTIONAL,
  ...
}

GeographicalCoordinates-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

GNB-RxTxTimeDiff ::= SEQUENCE {
    rxTxTimeDiff      GNBRxTxTimeDiffMeas,
    additionalPathList AdditionalPathList OPTIONAL,
    iE-Extensions     ProtocolExtensionContainer { { GNB-RxTxTimeDiff-ExtIEs} } OPTIONAL,
    ...
}

GNB-RxTxTimeDiff-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {

    ...
}

GNBRxTxTimeDiffMeas ::= CHOICE {
    k0          INTEGER (0.. 1970049),
    k1          INTEGER (0.. 985025),
    k2          INTEGER (0.. 492513),
    k3          INTEGER (0.. 246257),
    k4          INTEGER (0.. 123129),
    k5          INTEGER (0.. 61565),
    choice-extension ProtocolIE-Single-Container { { GNBRxTxTimeDiffMeas-ExtIEs} }
}

GNBRxTxTimeDiffMeas-ExtIEs      NRPPA-PROTOCOL-IES ::= {
    ...
}

-- H

HESSID ::= OCTET STRING (SIZE(6))

-- I

-- J

-- K

-- L

LCS-to-GCS-TranslationAoA ::= SEQUENCE {
    alpha        INTEGER (0..3599),
    beta         INTEGER (0..3599),
    gamma        INTEGER (0..3599),
    iE-Extensions ProtocolExtensionContainer { { LCS-to-GCS-TranslationAoA-ExtIEs} } OPTIONAL,
    ...
}

LCS-to-GCS-TranslationAoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {

    ...
}

LCS-to-GCS-TranslationItem ::= SEQUENCE {
    alpha        INTEGER (0..359),
    ...
}

```

```

alphaFine          INTEGER (0..9)      OPTIONAL,
beta              INTEGER (0..359),
betaFine          INTEGER (0..9)      OPTIONAL,
gamma             INTEGER (0..359),
gammaFine         INTEGER (0..9)      OPTIONAL,
iE-Extensions     ProtocolExtensionContainer { { LCS-to-GCS-TranslationItem-ExtIEs} } OPTIONAL,
...
}

LCS-to-GCS-TranslationItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

LocationUncertainty ::= SEQUENCE {
  horizontalUncertainty   INTEGER (0..255),
  horizontalConfidence    INTEGER (0..100),
  verticalUncertainty     INTEGER (0..255),
  verticalConfidence      INTEGER (0..100),
  iE-Extensions           ProtocolExtensionContainer { { LocationUncertainty-ExtIEs} } OPTIONAL,
...
}

LocationUncertainty-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

-- M

Measurement-ID ::= INTEGER (1.. 65536, ...)

MeasurementBeamInfoRequest ::= ENUMERATED {true, ...}

MeasurementBeamInfo ::= SEQUENCE {
  pRS-Resource-ID        PRS-Resource-ID      OPTIONAL,
  pRS-Resource-Set-ID    PRS-Resource-Set-ID  OPTIONAL,
  sSB-Index               SSB-Index            OPTIONAL,
  iE-Extensions           ProtocolExtensionContainer { { MeasurementBeamInfo-ExtIEs} } OPTIONAL,
...
}

MeasurementBeamInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

MeasurementPeriodicity ::= ENUMERATED {
  ms120,
  ms240,
  ms480,
  ms640,
  ms1024,
  ms2048,
  ms5120,
}

```

```

ms10240,
min1,
min6,
min12,
min30,
min60,
...
ms20480,
ms40960
}

MeasurementQuantities ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF ProtocolIE-Single-Container { {MeasurementQuantities-ItemIEs} }

MeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-MeasurementQuantities-Item CRITICALITY reject TYPE MeasurementQuantities-Item PRESENCE mandatory}
}

MeasurementQuantities-Item ::= SEQUENCE {
    measurementQuantitiesValue,
    iE-Extensions
    ...
}
MeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

MeasurementQuantitiesValue ::= ENUMERATED {
    cell-ID,
    angleOfArrival,
    timingAdvanceType1,
    timingAdvanceType2,
    rSRP,
    rSRQ,
    ...
    sS-RSRP,
    sS-RSRQ,
    cSI-RSRP,
    cSI-RSRQ,
    angleOfArrivalNR
}

MeasuredResults ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF MeasuredResultsValue

MeasuredResultsValue ::= CHOICE {
    valueAngleOfArrival-EUTRA           INTEGER (0..719),
    valueTimingAdvanceType1-EUTRA        INTEGER (0..7690),
    valueTimingAdvanceType2-EUTRA        INTEGER (0..7690),
    resultRSRP-EUTRA                   ResultRSRP-EUTRA,
    resultRSRQ-EUTRA                   ResultRSRQ-EUTRA,
    measuredResultsValue-Extension     ProtocolIE-Single-Container {{ MeasuredResultsValue-ExtensionIE }}
}

MeasuredResultsValue-ExtensionIE NRPPA-PROTOCOL-IES ::= {

```

```

{ ID id-ResultSS-RSRP      CRITICALITY ignore  TYPE ResultSS-RSRP      PRESENCE mandatory }|
{ ID id-ResultSS-RSRQ      CRITICALITY ignore  TYPE ResultSS-RSRQ      PRESENCE mandatory }|
{ ID id-ResultCSI-RSRP     CRITICALITY ignore  TYPE ResultCSI-RSRP     PRESENCE mandatory }|
{ ID id-ResultCSI-RSRQ     CRITICALITY ignore  TYPE ResultCSI-RSRQ     PRESENCE mandatory }|
{ ID id-AngleOfArrivalNR    CRITICALITY ignore  TYPE UL-AoA          PRESENCE mandatory },|
...
}

-- N

NarrowBandIndex ::= INTEGER (0..15,...)

NG-RANAccessPointPosition ::= SEQUENCE {
  latitudeSign           ENUMERATED {north, south},
  latitude                INTEGER (0..8388607),
  longitude               INTEGER (-8388608..8388607),
  directionOfAltitude     ENUMERATED {height, depth},
  altitude                INTEGER (0..32767),
  uncertaintySemi-major   INTEGER (0..127),
  uncertaintySemi-minor   INTEGER (0..127),
  orientationOfMajorAxis  INTEGER (0..179),
  uncertaintyAltitude     INTEGER (0..127),
  confidence              INTEGER (0..100),
  iE-Extensions           ProtocolExtensionContainer { { NG-RANAccessPointPosition-ExtIEs} } OPTIONAL,
...
}

NG-RANAccessPointPosition-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

NGRANHighAccuracyAccessPointPosition ::= SEQUENCE {
  latitude                INTEGER (-2147483648.. 2147483647),
  longitude               INTEGER (-2147483648.. 2147483647),
  altitude                INTEGER (-64000..1280000),
  uncertaintySemi-major   INTEGER (0..255),
  uncertaintySemi-minor   INTEGER (0..255),
  orientationOfMajorAxis  INTEGER (0..179),
  horizontalConfidence    INTEGER (0..100),
  uncertaintyAltitude     INTEGER (0..255),
  verticalConfidence      INTEGER (0..100),
  iE-Extensions           ProtocolExtensionContainer { { NGRANHighAccuracyAccessPointPosition-ExtIEs} } OPTIONAL,
...
}

NGRANHighAccuracyAccessPointPosition-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

NG-RAN-CGI ::= SEQUENCE {
  pLMN-Identity           PLMN-Identity,
  nG-RANcell               NG-RANCell,
  iE-Extensions            ProtocolExtensionContainer { {NG-RAN-CGI-ExtIEs} } OPTIONAL,
...
}

```

```

}

NG-RAN-CGI-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

NG-RANCell ::= CHOICE {
  eUTRA-CellID    EUTRACellIdentifier,
  nR-CellID       NRCellIdentifier,
  nG-RANCell-Extension   ProtocolIE-Single-Container {{ NG-RANCell-ExtensionIE }}
}

NG-RANCell-ExtensionIE NRPPA-PROTOCOL-IES ::= {
  ...
}

NR-ARFCN ::= INTEGER (0..3279165)

NRCellIdentifier ::= BIT STRING (SIZE (36))

NR-PCI ::= INTEGER (0..1007)

NR-PRS-Beam-Information ::= SEQUENCE {
  nR-PRS-Beam-InformationList SEQUENCE (SIZE(1.. maxPRS-ResourceSets)) OF NR-PRS-Beam-InformationItem,
  lCS-to-GCS-TranslationList SEQUENCE (SIZE(1..maxnolcs-gcs-translation)) OF LCS-to-GCS-TranslationItem OPTIONAL,
  iE-Extensions  ProtocolExtensionContainer { { NR-PRS-Beam-Information-IEs } } OPTIONAL,
  ...
}

NR-PRS-Beam-Information-IEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

NR-PRS-Beam-InformationItem ::= SEQUENCE {
  pRSresourceSetID    PRS-Resource-Set-ID,
  pRSAngleItem        SEQUENCE (SIZE(1..maxPRS-ResourcesPerSet)) OF PRSAngleItem,
  iE-Extensions      ProtocolExtensionContainer { { NR-PRS-Beam-InformationItem-ExtIEs } } OPTIONAL,
  ...
}

NR-PRS-Beam-InformationItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

NumberOfAntennaPorts-EUTRA ::= ENUMERATED {
  n1-or-n2,
  n4,
  ...
}

NumberOfDlFrames-EUTRA ::= ENUMERATED {
  sf1,
  sf2,
  sf4,
}
```

```

    sf6,
    ...
}

NumberOfDlFrames-Extended-EUTRA ::= INTEGER (1..160,...)

NumberOfFrequencyHoppingBands ::= ENUMERATED {
    twobands,
    fourbands,
    ...
}

NZP-CSI-RS-ResourceID ::= INTEGER (0..191)

-- O

OTDOACells ::= SEQUENCE (SIZE (1.. maxCellinRANnode)) OF SEQUENCE {
    oTDOACellInfo          OTDOACell-Information,
    iE-Extensions           ProtocolExtensionContainer { {OTDOACells-ExtIEs} } OPTIONAL,
    ...
}

OTDOACells-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

OTDOACell-Information ::= SEQUENCE (SIZE (1..maxnoOTDOAtypes)) OF OTDOACell-Information-Item

OTDOACell-Information-Item ::= CHOICE {
    pCI-EUTRA                  PCI-EUTRA,
    cGI-EUTRA                  CGI-EUTRA,
    tAC                         TAC,
    eARFCN                      EARFCN,
    pRS-Bandwidth-EUTRA         PRS-Bandwidth-EUTRA,
    pRS-ConfigurationIndex-EUTRA PRS-ConfigurationIndex-EUTRA,
    cPLength-EUTRA              CPLength-EUTRA,
    numberOfDlFrames-EUTRA      NumberOfDlFrames-EUTRA,
    numberOfAntennaPorts-EUTRA  NumberOfAntennaPorts-EUTRA,
    sFNIInitialisationTime-EUTRA SFNInitialisationTime-EUTRA,
    nG-RANAccessPointPosition   NG-RANAccessPointPosition,
    pRSMutingConfiguration-EUTRA PRSMutingConfiguration-EUTRA,
    prsid-EUTRA                 PRS-ID-EUTRA,
    tpid-EUTRA                  TP-ID-EUTRA,
    tpType-EUTRA                TP-Type-EUTRA,
    numberOfDlFrames-Extended-EUTRA NumberOfDlFrames-Extended-EUTRA,
    crsCPLength-EUTRA           CPLength-EUTRA,
    dL-Bandwidth-EUTRA          DL-Bandwidth-EUTRA,
    pRSOccasionGroup-EUTRA     PRSOccasionGroup-EUTRA,
    pRSFrequencyHoppingConfiguration-EUTRA PRSFrequencyHoppingConfiguration-EUTRA,
    oTDOACell-Information-Item-Extension ProtocolIE-Single-Container {{ OTDOACell-Information-Item-ExtensionIE }}
```

}

```

OTDOACell-Information-Item-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    { ID id-TDD-Config-EUTRA-Item      CRITICALITY      ignore      TYPE      TDD-Config-EUTRA-Item      PRESENCE      mandatory } |
```

```

{ ID id-CGI-NR           CRITICALITY ignore TYPE CGI-NR          PRESENCE mandatory } |
{ ID id-SFNInitialisationTime-NR   CRITICALITY ignore TYPE SFNInitialisationTime-EUTRA PRESENCE mandatory },
...
}

OTDOA-Information-Item ::= ENUMERATED {
    pci,
    cGI,
    tac,
    earfcn,
    prsBandwidth,
    prsConfigIndex,
    cpLength,
    noDlFrames,
    noAntennaPorts,
    sFNInitTime,
    nG-RANAccessPointPosition,
    prsmutingconfiguration,
    prsid,
    tpid,
    tpType,
    crsCPLength,
    dlBandwidth,
    multipleprsConfigurationsperCell,
    prsOccasionGroup,
    prsFrequencyHoppingConfiguration,
    ...
    tddConfig
}

OtherRATMeasurementQuantities ::= SEQUENCE (SIZE (0.. maxNoMeas)) OF ProtocolIE-Single-Container { {OtherRATMeasurementQuantities-ItemIEs} }

OtherRATMeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OtherRATMeasurementQuantities-Item CRITICALITY reject TYPE OtherRATMeasurementQuantities-Item PRESENCE mandatory} }

OtherRATMeasurementQuantities-Item ::= SEQUENCE {
    otherRATMeasurementQuantitiesValue          OtherRATMeasurementQuantitiesValue,
    iE-Extensions                           ProtocolExtensionContainer { { OtherRATMeasurementQuantitiesValue-ExtIEs} } OPTIONAL,
    ...
}

OtherRATMeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

OtherRATMeasurementQuantitiesValue ::= ENUMERATED {
    geran,
    utran,
    ...
    nR,
    eUTRA
}

OtherRATMeasurementResult ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF OtherRATMeasuredResultsValue

```

```

OtherRATMeasuredResultsValue ::= CHOICE {
    resultGERAN
    resultUTRAN
    otherRATMeasuredResultsValue-Extension
}
                                ResultGERAN,
                                ResultUTRAN,
                                ProtocolIE-Single-Container {{ OtherRATMeasuredResultsValue-ExtensionIE }}
```

```

OtherRATMeasuredResultsValue-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    { ID id-ResultNR      CRITICALITY   ignore   TYPE   ResultNR      PRESENCE   mandatory } |
    { ID id-ResultEUTRA    CRITICALITY   ignore   TYPE   ResultEUTRA    PRESENCE   mandatory },
    ...
}

Outcome ::= ENUMERATED {
    failed,
    ...
}

-- P

PathlossReferenceInformation ::= SEQUENCE {
    pathlossReferenceSignal          PathlossReferenceSignal,
    iE-Extensions                   ProtocolExtensionContainer { { PathlossReferenceInformation-ExtIEs } } OPTIONAL,
    ...
}

PathlossReferenceInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PathlossReferenceSignal ::= CHOICE {
    sSB-Reference                  SSB,
    dL-PRS-Reference               DL-PRS,
    choice-Extension               ProtocolIE-Single-Container {{ PathlossReferenceSignal-ExtensionIE }}
}
PathlossReferenceSignal-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

PCI-EUTRA ::= INTEGER (0..503, ...)

PhysCellIDGERAN ::= INTEGER (0..63, ...)

PhysCellIDUTRA-FDD ::= INTEGER (0..511, ...)

PhysCellIDUTRA-TDD ::= INTEGER (0..127, ...)

PLMN-Identity ::= OCTET STRING (SIZE(3))

```

```

PeriodicityList ::= SEQUENCE (SIZE (1.. maxnoSRS-ResourcePerSet)) OF PeriodicityItem

PeriodicityItem ::= ENUMERATED {ms0dot125, ms0dot25, ms0dot5, ms0dot625, ms1, ms1dot25, ms2, ms2dot5, ms4dot, ms5, ms8, ms10, ms16, ms20, ms32, ms40, ms64, ms80m, ms160, ms320, ms640m, ms1280, ms2560, ms5120, ms10240, ...}

PosSIBs ::= SEQUENCE (SIZE (1.. maxNrOfPosSIBs)) OF SEQUENCE {
    posSIB-Type                  PosSIB-Type,
    posSIB-Segments               PosSIB-Segments,
    assistanceInformationMetaData AssistanceInformationMetaData OPTIONAL,
    broadcastPriority              INTEGER (1..16,...) OPTIONAL,
    iE-Extensions                 ProtocolExtensionContainer { { PosSIBs-ExtIEs} } OPTIONAL,
    ...
}

PosSIBs-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosSIB-Segments ::= SEQUENCE (SIZE (1.. maxNrOfSegments)) OF SEQUENCE {
    assistanceDataSIBelement      OCTET STRING,
    iE-Extensions                 ProtocolExtensionContainer { { PosSIB-Segments-ExtIEs} } OPTIONAL,
    ...
}

PosSIB-Segments-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosSIB-Type ::= ENUMERATED {
    posSibType1-1,
    posSibType1-2,
    posSibType1-3,
    posSibType1-4,
    posSibType1-5,
    posSibType1-6,
    posSibType1-7,
    posSibType1-8,
    posSibType2-1,
    posSibType2-2,
    posSibType2-3,
    posSibType2-4,
    posSibType2-5,
    posSibType2-6,
    posSibType2-7,
    posSibType2-8,
    posSibType2-9,
    posSibType2-10,
    posSibType2-11,
    posSibType2-12,
    posSibType2-13,
    posSibType2-14,
    posSibType2-15,
    posSibType2-16,
}

```

```

posSibType2-17,
posSibType2-18,
posSibType2-19,
posSibType2-20,
posSibType2-21,
posSibType2-22,
posSibType2-23,
posSibType2-24,
posSibType2-25,
posSibType3-1,
posSibType4-1,
posSibType5-1,
posSibType6-1,
posSibType6-2,
posSibType6-3,
...
}

PosSRSResource-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResources)) OF PosSRSResource-Item

PosSRSResource-Item ::= SEQUENCE {
    srs-PoSResourceId          SRSPoSResourceId,
    transmissionCombPos        TransmissionCombPos,
    startPosition               INTEGER (0..13),
    nrofSymbols                ENUMERATED {n1, n2, n4, n8, n12},
    freqDomainShift             INTEGER (0..268),
    c-SRS                       INTEGER (0..63),
    groupOrSequenceHopping      ENUMERATED {neither, groupHopping, sequenceHopping},
    resourceTypePos              ResourceTypePos,
    sequenceId                  INTEGER (0.. 65535),
    spatialRelationPos          SpatialRelationPos OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { PosSRSResource-Item-ExtIEs} } OPTIONAL,
    ...
}

PosSRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosSRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResourceSets)) OF PosSRSResourceSet-Item

PosSRSResourceID-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResourcePerSet)) OF SRSPoSResourceId

PosSRSResourceSet-Item ::= SEQUENCE {
    possrsResourceSetID          INTEGER(0..15),
    possRSResourceID-List        PosSRSResourceID-List,
    posresourceSetType            PosResourceSetType,
    iE-Extensions               ProtocolExtensionContainer { { PosSRSResourceSet-Item-ExtIEs} } OPTIONAL,
    ...
}

PosSRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

}

PosResourceSetType ::= CHOICE {
    periodic          PosResourceSetTypePeriodic,
    semi-persistent   PosResourceSetTypeSemi-persistent,
    aperiodic         PosResourceSetTypeAperiodic,
    choice-extension  ProtocolIE-Single-Container {{ PosResourceSetType-ExtIEs }}
}

PosResourceSetType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

PosResourceSetTypePeriodic ::= SEQUENCE {
    posperiodicSet      ENUMERATED{true, ...},
    iE-Extensions       ProtocolExtensionContainer { { PosResourceSetTypePeriodic-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosResourceSetTypeSemi-persistent ::= SEQUENCE {
    possemi-persistentSet  ENUMERATED{true, ...},
    iE-Extensions         ProtocolExtensionContainer { { PosResourceSetTypeSemi-persistent-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosResourceSetTypeAperiodic ::= SEQUENCE {
    sRSResourceTrigger   INTEGER(1..3),
    iE-Extensions        ProtocolExtensionContainer { { PosResourceSetTypeAperiodic-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRS-Bandwidth-EUTRA ::= ENUMERATED {
    bw6,
    bw15,
    bw25,
    bw50,
    bw75,
    bw100,
    ...
}

```

```

PRSAngleItem ::= SEQUENCE {
    nRPRSAzimuth          INTEGER (0..359),
    nRPRSAzimuthFine      INTEGER (0..9) OPTIONAL,
    nPRSElevation          INTEGER (0..180) OPTIONAL,
    nPRSElevationFine     INTEGER (0..9) OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { PRSAngleItem-ExtIEs} } OPTIONAL,
    ...
}

PRSAngleItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSInformationPos ::= SEQUENCE {
    pRS-IDPos              INTEGER(0..255),
    pRS-Resource-Set-IDPos  INTEGER(0..7),
    pRS-Resource-IDPos      INTEGER(0..63) OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { PRSInformationPos-ExtIEs} } OPTIONAL,
    ...
}

PRSInformationPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSConfiguration ::= SEQUENCE {
    pRSResourceSet-List     PRSResourceSet-List,
    iE-Extensions          ProtocolExtensionContainer { { PRSConfiguration-ExtIEs} } OPTIONAL,
    ...
}

PRSConfiguration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRS-ConfigurationIndex-EUTRA ::= INTEGER (0..4095, ...)

PRS-ID-EUTRA ::= INTEGER (0..4095, ...)

PRSMutingConfiguration-EUTRA ::= CHOICE {
    two                      BIT STRING (SIZE (2)),
    four                     BIT STRING (SIZE (4)),
    eight                    BIT STRING (SIZE (8)),
    sixteen                 BIT STRING (SIZE (16)),
    thirty-two               BIT STRING (SIZE (32)),
    sixty-four               BIT STRING (SIZE (64)),
    one-hundred-and-twenty-eight BIT STRING (SIZE (128)),
    two-hundred-and-fifty-six  BIT STRING (SIZE (256)),
    five-hundred-and-twelve   BIT STRING (SIZE (512)),
    one-thousand-and-twenty-four BIT STRING (SIZE (1024)),
    PRSMutingConfiguration-EUTRA-Extension
    ProtocolIE-Single-Container {{ PRSMutingConfiguration-EUTRA-ExtensionIE } }
}

```

```

PRSMutingConfiguration-EUTRA-ExtensionIE NRPPA-PROTOCOL-IES ::= {
  ...
}

PRSOccasionGroup-EUTRA ::= ENUMERATED {
  og2,
  og4,
  og8,
  og16,
  og32,
  og64,
  og128,
  ...
}

PRSFrequencyHoppingConfiguration-EUTRA ::= SEQUENCE {
  noOfFreqHoppingBands      NumberOfFrequencyHoppingBands,
  bandPositions             SEQUENCE(SIZE (1..maxnoFreqHoppingBandsMinusOne)) OF NarrowBandIndex,
  iE-Extensions              ProtocolExtensionContainer { { PRSFrequencyHoppingConfiguration-EUTRA-Item-IEs } } OPTIONAL,
  ...
}

PRSFrequencyHoppingConfiguration-EUTRA-Item-IEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

PRSMuting ::= SEQUENCE {
  pRSMutingOption1,
  pRSMutingOption2,
  iE-Extensions          ProtocolExtensionContainer { { PRSMuting-ExtIEs } } OPTIONAL,
  ...
}

PRSMuting-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

PRSMutingOption1 ::= SEQUENCE {
  mutingPattern           DL-PRSMutingPattern,
  mutingBitRepetitionFactor ENUMERATED{n1,n2,n4,n8,...},
  iE-Extensions            ProtocolExtensionContainer { { PRSMutingOption1-ExtIEs } } OPTIONAL,
  ...
}

PRSMutingOption1-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

PRSMutingOption2 ::= SEQUENCE {
  mutingPattern           DL-PRSMutingPattern,
  iE-Extensions            ProtocolExtensionContainer { { PRSMutingOption2-ExtIEs } } OPTIONAL,
  ...
}

PRSMutingOption2-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

}

PRSResource-List ::= SEQUENCE (SIZE (1..maxnoofPRSresource)) OF PRSResource-Item

PRSResource-Item ::= SEQUENCE {
    pRSResourceID      PRS-Resource-ID,
    sequenceID         INTEGER(0..4095),
    rEOffset           INTEGER(0..11,...),
    resourceSlotOffset INTEGER(0..511),
    resourceSymbolOffset INTEGER(0..12),
    qCLInfo            PRSResource-QCLInfo   OPTIONAL,
    iE-Extensions      ProtocolExtensionContainer { { PRSResource-Item-ExtIEs} } OPTIONAL,
    ...
}
PRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSResource-QCLInfo ::= CHOICE {
    qCLSourceSSB       PRSResource-QCLSourceSSB,
    qCLSourcePRS       PRSResource-QCLSourcePRS,
    choice-Extension  ProtocolIE-Single-Container {{ PRSResource-QCLInfo-ExtIEs }}
}
PRSResource-QCLInfo-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

PRSResource-QCLSourceSSB ::= SEQUENCE {
    pCI-NR             INTEGER(0..1007),
    sSB-Index          SSB-Index   OPTIONAL,
    iE-Extensions      ProtocolExtensionContainer { { PRSResource-QCLSourceSSB-ExtIEs} } OPTIONAL,
    ...
}
PRSResource-QCLSourceSSB-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSResource-QCLSourcePRS ::= SEQUENCE {
    qCLSourcePRSResourceSetID    PRS-Resource-Set-ID,
    qCLSourcePRSResourceID      PRS-Resource-ID OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { PRSResource-QCLSourcePRS-ExtIEs} } OPTIONAL,
    ...
}
PRSResource-QCLSourcePRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoofPRSresourceSet)) OF PRSResourceSet-Item

```

```

PRSResourceSet-Item ::= SEQUENCE {
    pRSResourceSetID,
    subcarrierSpacing,
    pRSbandwidth,
    startPRB,
    pointA,
    combSize,
    cPType,
    resourceSetPeriodicity
        n81920,...},
    resourceSetSlotOffset,
    resourceRepetitionFactor,
    resourceTimeGap,
    resourceNumberofSymbols,
    pRSMuting,
    pRSResourceTransmitPower,
    pRSResource-List,
    iE-Extensions
        ...
}

PRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRS-Resource-ID ::= INTEGER (0..63)

PRS-Resource-Set-ID ::= INTEGER(0..7)

PRS-ID ::= INTEGER(0..255)

-- Q

-- R

ReferenceSignal ::= CHOICE {
    nZP-CSI-RS
        NZP-CSI-RS-ResourceID,
    sSB
        SSB,
    sRS
        SRSResourceID,
    positioningSRS
        SRSPosResourceID,
    dL-PRS
        DL-PRS,
    choice-Extension
        ProtocolIE-Single-Container {{ReferenceSignal-ExtensionIE}}
}

ReferenceSignal-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

ReferencePoint ::= CHOICE {
    relativeCoordinateID
        CoordinateID,
    referencePointCoordinate
        NG-RANAccessPointPosition,
    referencePointCoordinateHA
        NGRANHighAccuracyAccessPointPosition,
    choice-Extension
        ProtocolIE-Single-Container {{ ReferencePoint-ExtIEs} }
}

```

```

}

ReferencePoint-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

CoordinateID ::= INTEGER (0..511, ...)

RelativeGeodeticLocation ::= SEQUENCE {
  milli-Arc-SecondUnits      ENUMERATED {zerodot03, zerodot3, three, ...},    heightUnits          ENUMERATED {mm, cm, m, ...},
  deltaLatitude               INTEGER (-1024.. 1023),
  deltaLongitude              INTEGER (-1024.. 1023),
  deltaHeight                 INTEGER (-1024.. 1023),
  locationUncertainty        LocationUncertainty,
  iE-extensions               ProtocolExtensionContainer {{RelativeGeodeticLocation-ExtIEs }} OPTIONAL,
  ...
}

RelativeGeodeticLocation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RelativeCartesianLocation ::= SEQUENCE {
  xYzunit                    ENUMERATED {mm, cm, dm, ...},
  xvalue                      INTEGER (-65536..65535),
  yvalue                      INTEGER (-65536..65535),
  zvalue                      INTEGER (-32768..32767),
  locationUncertainty        LocationUncertainty,
  iE-Extensions               ProtocolExtensionContainer {{ RelativeCartesianLocation-ExtIEs }} OPTIONAL,
  ...
}

RelativeCartesianLocation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RelativePathDelay ::= CHOICE {
  k0                          INTEGER(0..16351),
  k1                          INTEGER(0..8176),
  k2                          INTEGER(0..4088),
  k3                          INTEGER(0..2044),
  k4                          INTEGER(0..1022),
  k5                          INTEGER(0..511),
  choice-Extension            ProtocolIE-Single-Container {{ RelativePathDelay-ExtIEs }}
}

RelativePathDelay-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

ReportCharacteristics ::= ENUMERATED {
  onDemand,
  periodic,
  ...
}

```

```

}

RequestedSRSTransmissionCharacteristics ::= SEQUENCE {
    numberofTransmissions      INTEGER (0..500,...)                      OPTIONAL,
-- The IE shall be present if the Resource Type IE is set to "periodic" --
    resourceType                ENUMERATED {periodic, semi-persistent, aperiodic, ...},
    bandwidth                  BandwidthSRS,
    listOfSRSResourceSet      SEQUENCE (SIZE (1.. maxnoSRS-ResourceSets)) OF SRSResourceSet-Item  OPTIONAL,
    sSBInformation             SSBInfo      OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { RequestedSRSTransmissionCharacteristics-ExtIEs} } OPTIONAL,
    ...
}

RequestedSRSTransmissionCharacteristics-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SRSResourceSet-Item ::= SEQUENCE {
    numberofSRSResourcePerSet   INTEGER (1..16, ...)                      OPTIONAL,
    periodicityList            PeriodicityList                         OPTIONAL,
    spatialRelationInformation SpatialRelationInfo        OPTIONAL,
    pathlossReferenceInformation PathlossReferenceInformation    OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { SRSResourceSet-Item-ExtIEs} } OPTIONAL,
    ...
}

SRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceSetType ::= CHOICE {
    periodic                 ResourceTypePeriodic,
    semi-persistent          ResourceTypeSemi-persistent,
    aperiodic                ResourceTypeAperiodic,
    choice-extension         ProtocolIE-Single-Container {{ ResourceType-ExtIEs }}
}

ResourcesetType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

ResourcesetTypePeriodic ::= SEQUENCE {
    periodicSet               ENUMERATED{true, ...},
    iE-Extensions             ProtocolExtensionContainer { { ResourceTypePeriodic-ExtIEs} }      OPTIONAL,
    ...
}

ResourcesetTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourcesetTypeSemi-persistent ::= SEQUENCE {
    semi-persistentSet        ENUMERATED{true, ...},
    ...
}

```

```

iE-Extensions      ProtocolExtensionContainer { { ResourceSetTypeSemi-persistent-ExtIEs} } OPTIONAL,
...
}

ResourceSetTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceSetTypeAperiodic ::= SEQUENCE {
  sRSResourceTrigger      INTEGER(1..3),
  slotoffset               INTEGER(0..32),
  iE-Extensions            ProtocolExtensionContainer { { ResourceSetTypeAperiodic-ExtIEs} } OPTIONAL,
  ...
}

ResourceSetTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceType ::= CHOICE {
  periodic                  ResourceTypePeriodic,
  semi-persistent            ResourceTypeSemi-persistent,
  aperiodic                 ResourceTypeAperiodic,
  choice-extension          ProtocolIE-Single-Container {{ ResourceType-ExtIEs }}
}

ResourceType-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

ResourceTypePeriodic ::= SEQUENCE {
  periodicity              ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160,
                           slot320, slot640, slot1280, slot2560, ...},
  offset                    INTEGER(0..2559, ...),
  iE-Extensions             ProtocolExtensionContainer { { ResourceTypePeriodic-ExtIEs} }   OPTIONAL,
  ...
}

ResourceTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceTypeSemi-persistent ::= SEQUENCE {
  periodicity              ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320,
                           slot640, slot1280, slot2560, ...},
  offset                    INTEGER(0..2559, ...),
  iE-Extensions             ProtocolExtensionContainer { { ResourceTypeSemi-persistent-ExtIEs} }   OPTIONAL,
  ...
}

ResourceTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

ResourceTypeAperiodic ::= SEQUENCE {
  aperiodicResourceType      ENUMERATED{true, ...},
  iE-Extensions            ProtocolExtensionContainer { { ResourceTypeAperiodic-ExtIEs} } OPTIONAL,
  ...
}

ResourceTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceTypePos ::= CHOICE {
  periodic                 ResourceTypePeriodicPos,
  semi-persistent          ResourceTypeSemi-persistentPos,
  aperiodic                ResourceTypeAperiodicPos,
  choice-extension         ProtocolIE-Single-Container {{ ResourceTypePos-ExtIEs }}
}

ResourceTypePos-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

ResourceTypePeriodicPos ::= SEQUENCE {
  periodicity      ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640,
  slot1280, slot2560, slot5120, slot10240, slot40960, slot81920, ...},
  offset           INTEGER(0..81919, ...),
  iE-Extensions   ProtocolExtensionContainer { { ResourceTypePeriodicPos-ExtIEs} } OPTIONAL,
  ...
}

ResourceTypePeriodicPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceTypeSemi-persistentPos ::= SEQUENCE {
  periodicity      ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640,
  slot1280, slot2560, slot5120, slot10240, slot40960, slot81920, ...},
  offset           INTEGER(0..81919, ...),
  iE-Extensions   ProtocolExtensionContainer { { ResourceTypeSemi-persistentPos-ExtIEs} } OPTIONAL,
  ...
}

ResourceTypeSemi-persistentPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResourceTypeAperiodicPos ::= SEQUENCE {
  slotOffset        INTEGER (0..32),
  iE-Extensions    ProtocolExtensionContainer { { ResourceTypeAperiodicPos-ExtIEs} } OPTIONAL,
  ...
}

ResourceTypeAperiodicPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

}

ResultCSI-RSRP ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultCSI-RSRP-Item

ResultCSI-RSRP-Item ::= SEQUENCE {
    nR-PCI          NR-PCI,
    nR-ARFCN        NR-ARFCN,
    cGI-NR          CGI-NR
                    OPTIONAL,
    valueCSI-RSRP-Cell ValueRSRP-NR
                    OPTIONAL,
    cSI-RSRP-PerCSI-RS ResultCSI-RSRP-PerCSI-RS
                    OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRP-Item-ExtIEs} }  OPTIONAL,
    ...
}

ResultCSI-RSRP-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultCSI-RSRP-PerCSI-RS ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultCSI-RSRP-PerCSI-RS-Item

ResultCSI-RSRP-PerCSI-RS-Item ::= SEQUENCE {
    cSI-RS-Index    INTEGER (0..95),
    valueCSI-RSRP  ValueRSRP-NR,
    iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRP-PerCSI-RS-Item-ExtIEs} }  OPTIONAL,
    ...
}

ResultCSI-RSRP-PerCSI-RS-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultCSI-RSRQ ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultCSI-RSRQ-Item

ResultCSI-RSRQ-Item ::= SEQUENCE {
    nR-PCI          NR-PCI,
    nR-ARFCN        NR-ARFCN,
    cGI-NR          CGI-NR
                    OPTIONAL,
    valueCSI-RSRQ-Cell ValueRSRQ-NR
                    OPTIONAL,
    cSI-RSRQ-PerCSI-RS ResultCSI-RSRQ-PerCSI-RS
                    OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRQ-Item-ExtIEs} }  OPTIONAL,
    ...
}

ResultCSI-RSRQ-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultCSI-RSRQ-PerCSI-RS ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultCSI-RSRQ-PerCSI-RS-Item

ResultCSI-RSRQ-PerCSI-RS-Item ::= SEQUENCE {
    cSI-RS-Index    INTEGER (0..95),
    valueCSI-RSRQ  ValueRSRQ-NR,
    iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRQ-PerCSI-RS-Item-ExtIEs} }  OPTIONAL,
}

```

```

}

ResultCSI-RSRQ-PerCSI-RS-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultEUTRA ::= SEQUENCE (SIZE (1.. maxEUTRAMEas)) OF ResultEUTRA-Item

ResultEUTRA-Item ::= SEQUENCE {
  pCI-EUTRA          PCI-EUTRA,
  eARFCN             EARFCN,
  valueRSRP-EUTRA    ValueRSRP-EUTRA                               OPTIONAL,
  valueRSRQ-EUTRA    ValueRSRQ-EUTRA                               OPTIONAL,
  cGI-EUTRA          CGI-EUTRA                                OPTIONAL,
  iE-Extensions       ProtocolExtensionContainer { { ResultEUTRA-Item-ExtIEs} } OPTIONAL,
  ...
}

ResultEUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultRSRP-EUTRA ::= SEQUENCE (SIZE (1.. maxCellReport)) OF ResultRSRP-EUTRA-Item

ResultRSRP-EUTRA-Item ::= SEQUENCE {
  pCI-EUTRA          PCI-EUTRA,
  eARFCN             EARFCN,
  cGI-EUTRA          CGI-EUTRA OPTIONAL,
  valueRSRP-EUTRA    ValueRSRP-EUTRA,
  iE-Extensions       ProtocolExtensionContainer { { ResultRSRP-EUTRA-Item-ExtIEs} } OPTIONAL,
  ...
}

ResultRSRP-EUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultRSRQ-EUTRA ::= SEQUENCE (SIZE (1.. maxCellReport)) OF ResultRSRQ-EUTRA-Item

ResultRSRQ-EUTRA-Item ::= SEQUENCE {
  pCI-EUTRA          PCI-EUTRA,
  eARFCN             EARFCN,
  cGI-EUTRA          CGI-EUTRA OPTIONAL,
  valueRSRQ-EUTRA    ValueRSRQ-EUTRA,
  iE-Extensions       ProtocolExtensionContainer { { ResultRSRQ-EUTRA-Item-ExtIEs} } OPTIONAL,
  ...
}

ResultRSRQ-EUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
```

```

ResultSS-RSRP ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultSS-RSRP-Item

ResultSS-RSRP-Item ::= SEQUENCE {
    nR-PCI           NR-PCI,
    nR-ARFCN         NR-ARFCN,
    cGI-NR          OPTIONAL,
    valueSS-RSRP-Cell ValueRSRP-NR
    sS-RSRP-PerSSB   ResultSS-RSRP-PerSSB
    iE-Extensions    ProtocolExtensionContainer { { ResultSS-RSRP-Item-ExtIEs} } OPTIONAL,
    ...
}

ResultSS-RSRP-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRP-PerSSB ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultSS-RSRP-PerSSB-Item

ResultSS-RSRP-PerSSB-Item ::= SEQUENCE {
    sSB-Index        SSB-Index,
    valueSS-RSRP     ValueRSRP-NR,
    iE-Extensions    ProtocolExtensionContainer { { ResultSS-RSRP-PerSSB-Item-ExtIEs} } OPTIONAL,
    ...
}

ResultSS-RSRP-PerSSB-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRQ ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultSS-RSRQ-Item

ResultSS-RSRQ-Item ::= SEQUENCE {
    nR-PCI           NR-PCI,
    nR-ARFCN         NR-ARFCN,
    cGI-NR          OPTIONAL,
    valueSS-RSRQ-Cell ValueRSRQ-NR
    sS-RSRQ-PerSSB   ResultSS-RSRQ-PerSSB
    iE-Extensions    ProtocolExtensionContainer { { ResultSS-RSRQ-Item-ExtIEs} } OPTIONAL,
    ...
}

ResultSS-RSRQ-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRQ-PerSSB ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultSS-RSRQ-PerSSB-Item

ResultSS-RSRQ-PerSSB-Item ::= SEQUENCE {
    sSB-Index        SSB-Index,
    valueSS-RSRQ     ValueRSRQ-NR,
    iE-Extensions    ProtocolExtensionContainer { { ResultSS-RSRQ-PerSSB-Item-ExtIEs} } OPTIONAL,
    ...
}

```

```

ResultSS-RSRQ-PerSSB-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultGERAN ::= SEQUENCE (SIZE (1.. maxGERANMeas)) OF ResultGERAN-Item

ResultGERAN-Item ::= SEQUENCE {
    bCCH                  BCCH,
    physCellIDGERAN      PhysCellIDGERAN,
    rSSI                  RSSI,
    iE-Extensions         ProtocolExtensionContainer { { ResultGERAN-Item-ExtIEs} } OPTIONAL,
    ...
}

ResultGERAN-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultNR ::= SEQUENCE (SIZE (1.. maxNRMes)) OF ResultNR-Item

ResultNR-Item ::= SEQUENCE {
    nR-PCI                NR-PCI,
    nR-ARFCN               NR-ARFCN,
    valueSS-RSRP-Cell      ValueRSRP-NR
                           OPTIONAL,
    valueSS-RSRQ-Cell      ValueRSRQ-NR
                           OPTIONAL,
    sS-RSRP-PerSSB         ResultSS-RSRP-PerSSB
                           OPTIONAL,
    sS-RSRQ-PerSSB         ResultSS-RSRQ-PerSSB
                           OPTIONAL,
    cGI-NR                 CGI-NR
                           OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { ResultNR-Item-ExtIEs} } OPTIONAL,
    ...
}

ResultNR-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultUTRAN ::= SEQUENCE (SIZE (1.. maxUTRANMeas)) OF ResultUTRAN-Item

ResultUTRAN-Item ::= SEQUENCE {
    uARFCN                UARFCN,
    physCellIDUTRAN        CHOICE {
        physCellIDUTRA-FDD   PhysCellIDUTRA-FDD,
        physCellIDUTRA-TDD   PhysCellIDUTRA-TDD
    },
    uTRA-RSCP              UTRA-RSCP OPTIONAL,
    uTRA-EcNo               UTRA-EcNo OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { ResultUTRAN-Item-ExtIEs} } OPTIONAL,
    ...
}

```

```

ResultUTRAN-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RSSI ::= INTEGER (0..63, ...)

-- S

SCS-SpecificCarrier ::= SEQUENCE {
  offsetToCarrier           INTEGER (0..2199,...),
  subcarrierSpacing          ENUMERATED {kHz15, kHz30, kHz60, kHz120,...},
  carrierBandwidth           INTEGER (1..275,...),
  iE-Extensions              ProtocolExtensionContainer { { SCS-SpecificCarrier-ExtIEs } } OPTIONAL,
  ...
}

SCS-SpecificCarrier-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

Search-window-information ::= SEQUENCE {
  expectedPropagationDelay    INTEGER (-3841..3841,...),
  delayUncertainty            INTEGER (1..246,...),
  iE-Extensions                ProtocolExtensionContainer { { Search-window-information-ExtIEs } } OPTIONAL,
  ...
}

Search-window-information-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SFNInitialisationTime ::= BIT STRING (SIZE (64))

SFNInitialisationTime-EUTRA ::= BIT STRING (SIZE (64))

SlotNumber ::= INTEGER (0..79)

SpatialDirectionInformation ::= SEQUENCE {
  nR-PRS-Beam-Information      NR-PRS-Beam-Information,
  iE-Extensions                 ProtocolExtensionContainer { { SpatialDirectionInformation-ExtIEs } } OPTIONAL,
  ...
}

SpatialDirectionInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SpatialRelationInfo ::= SEQUENCE {
  spatialRelationforResourceID   SpatialRelationforResourceID,
  iE-Extensions                  ProtocolExtensionContainer { { SpatialRelationInfo-ExtIEs } } OPTIONAL,
}

```

```

}

SpatialRelationInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SpatialRelationforResourceID ::= SEQUENCE (SIZE(1..maxnoSpatialRelations)) OF SpatialRelationforResourceIDItem

SpatialRelationforResourceIDItem ::= SEQUENCE {
  referenceSignal      ReferenceSignal,
  iE-Extensions       ProtocolExtensionContainer { {SpatialRelationforResourceIDItem-ExtIEs} } OPTIONAL,
  ...
}

SpatialRelationforResourceIDItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SpatialRelationPos ::= CHOICE {
  sSBPos                SSB,
  pRSInformationPos     PRSInformationPos,
  choice-extension       ProtocolIE-Single-Container { { SpatialInformationPos-ExtIEs } }
}
}

SpatialInformationPos-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

SRSConfig ::= SEQUENCE {
  sRSResource-List        SRSSResource-List OPTIONAL,
  posSRSResource-List     PosSRSSResource-List OPTIONAL,
  sRSResourceSet-List     SRSSResourceSet-List OPTIONAL,
  posSRSResourceSet-List  PosSRSSResourceSet-List OPTIONAL,
  iE-Extensions          ProtocolExtensionContainer { { SRSConfig-ExtIEs } } OPTIONAL,
  ...
}

SRSConfig-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSCarrier-List ::= SEQUENCE (SIZE(1.. maxnoSRS-Carriers)) OF SRSCarrier-List-Item

SRSCarrier-List-Item ::= SEQUENCE {
  pointA                 INTEGER (0..3279165),
  uplinkChannelBW-PersCS-List   UplinkChannelBW-PerSCS-List,
  activeULBWP              ActiveULBWP,
  pCI-NR                  INTEGER (0..1007)      OPTIONAL,
  iE-Extensions            ProtocolExtensionContainer { { SRSCarrier-List-Item-ExtIEs } } OPTIONAL,
}

```

```

}

SRSCarrier-List-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSConfiguration ::= SEQUENCE {
  sRSCarrier-List      SRSCarrier-List,
  iE-Extensions        ProtocolExtensionContainer { { SRSConfiguration-ExtIEs } } OPTIONAL,
  ...
}

SRSConfiguration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSPosResourceID ::= INTEGER (0..63)

SRSResource ::= SEQUENCE {
  sRSResourceID          SRSResourceID,
  nrofSRS-Ports          ENUMERATED {port1, ports2, ports4},
  transmissionComb       TransmissionComb,
  startPosition           INTEGER (0..13),
  nrofSymbols            ENUMERATED {n1, n2, n4},
  repetitionFactor        ENUMERATED {n1, n2, n4},
  freqDomainPosition     INTEGER (0..67),
  freqDomainShift         INTEGER (0..268),
  c-SRS                  INTEGER (0..63),
  b-SRS                  INTEGER (0..3),
  b-hop                  INTEGER (0..3),
  groupOrSequenceHopping ENUMERATED {neither, groupHopping, sequenceHopping},
  resourceType            ResourceType,
  sequenceId              INTEGER (0..1023),
  iE-Extensions          ProtocolExtensionContainer { { SRSResource-ExtIEs } } OPTIONAL,
  ...
}

SRSResource-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSPosResourceID ::= INTEGER (0..63)

SRSResource-List ::= SEQUENCE (SIZE (1..maxnoSRS-Resources)) OF SRSResource

SRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoSRS-ResourceSets)) OF SRSResourceSet

SRSResourceID-List ::= SEQUENCE (SIZE (1..maxnoSRS-ResourcePerSet)) OF SRSResourceID

SRSResourceSet ::= SEQUENCE {
  sRSResourceSetID        INTEGER(0..15),
  sRSResourceID-List      SRSResourceID-List,
}

```

```

resourceSetType          ResourceType,
iE-Extensions           ProtocolExtensionContainer { { SRSResourceSet-ExtIEs } } OPTIONAL,
...
}

SRSResourceSet-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSResourceSetID ::= INTEGER (0..15, ...)

SRSResourceTrigger ::= SEQUENCE {
  aperiodicSRSResourceTriggerList      AperiodicSRSResourceTriggerList,
  iE-Extensions           ProtocolExtensionContainer { {SRSResourceTrigger-ExtIEs} } OPTIONAL,
  ...
}

SRSResourceTrigger-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SRSSpatialRelation ::= SEQUENCE {
  spatialRelationforResourceID        SpatialRelationforResourceID,
  iE-Extensions           ProtocolExtensionContainer { {SRSSpatialRelation-ExtIEs} } OPTIONAL,
  ...
}

SRSSpatialRelation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SSBInfo ::= SEQUENCE {
  listOfSSBInfo     SEQUENCE (SIZE (1..maxNoSSBs)) OF SSBInfoItem,
  iE-Extensions     ProtocolExtensionContainer { {SSBInfo-ExtIEs} } OPTIONAL,
  ...
}

SSBInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

SSBInfoItem ::= SEQUENCE {
  sSB-Configuration   TF-Configuration,
  pCI-NR             INTEGER (0..1007),
  iE-Extensions       ProtocolExtensionContainer { { SSBInfoItem-ExtIEs} } OPTIONAL,
  ...
}

SSBInfoItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

}

SSB ::= SEQUENCE {
    pCI-NR           INTEGER (0..1007),
    ssb-index        SSB-Index OPTIONAL,
    iE-Extensions    ProtocolExtensionContainer { {SSB-ExtIEs} } OPTIONAL,
    ...
}

SSB-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SSBBurstPosition ::= CHOICE {
    shortBitmap      BIT STRING (SIZE(4)),
    mediumBitmap     BIT STRING (SIZE(8)),
    longBitmap       BIT STRING (SIZE(64)),
    choice-extension ProtocolIE-Single-Container { { SSBBurstPosition-ExtIEs} }
}

SSBBurstPosition-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

SSB-Index ::= INTEGER(0..63)

SSID ::= OCTET STRING (SIZE(1..32))

SystemFrameNumber ::= INTEGER (0..1023)

SystemInformation ::= SEQUENCE (SIZE (1.. maxNrOfPosSImessage)) OF SEQUENCE {
    broadcastPeriodicity      BroadcastPeriodicity,
    posSIBs                   PosSIBs,
    iE-Extensions             ProtocolExtensionContainer { { SystemInformation-ExtIEs} } OPTIONAL,
    ...
}

SystemInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- T

TAC ::= OCTET STRING (SIZE(3))

TDD-Config-EUTRA-Item ::= SEQUENCE {
    subframeAssignment   ENUMERATED { sa0, sa1, sa2, sa3, sa4, sa5, sa6, ... },
    iE-Extensions        ProtocolExtensionContainer { { TDD-Config-EUTRA-Item-Item-ExtIEs} } OPTIONAL,
    ...
}

```

```

TDD-Config-EUTRA-Item-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TF-Configuration ::= SEQUENCE {
    sSB-frequency          INTEGER (0..3279165),
    sSB-subcarrier-spacing ENUMERATED {kHz15, kHz30, kHz120, kHz240, ...},
    sSB-Transmit-power     INTEGER (-60..50),
    sSB-periodicity        ENUMERATED {ms5, ms10, ms20, ms40, ms80, ms160, ...},
    sSB-half-frame-offset  INTEGER(0..1),
    sSB-SFN-offset         INTEGER(0..15),
    sSB-BurstPosition      SSBBurstPosition OPTIONAL,
    SFN-initialisation-time SFNInitialisationTime OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { TF-Configuration-ExtIEs} } OPTIONAL,
    ...
}

TF-Configuration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TimeStamp ::= SEQUENCE {
    systemFrameNumber      SystemFrameNumber,
    slotIndex               TimeStampSlotIndex,
    measurementTime         SFNInitialisationTime OPTIONAL,
    iE-Extension            ProtocolExtensionContainer { { TimeStamp-ExtIEs} } OPTIONAL,
    ...
}

TimeStamp-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TimeStampSlotIndex ::= CHOICE {
    sCS-15                INTEGER(0..9),
    sCS-30                INTEGER(0..19),
    sCS-60                INTEGER(0..39),
    sCS-120               INTEGER(0..79),
    choice-extension       ProtocolIE-Single-Container { { TimeStampSlotIndex-ExtIEs} }
}

TimeStampSlotIndex-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TP-ID-EUTRA ::= INTEGER (0..4095, ...)
TP-Type-EUTRA ::= ENUMERATED { prs-only-tp, ... }

```

```

TransmissionComb ::= CHOICE {
    n2      SEQUENCE {
        combOffset-n2           INTEGER (0..1),
        cyclicShift-n2          INTEGER (0..7)
    },
    n4      SEQUENCE {
        combOffset-n4           INTEGER (0..3),
        cyclicShift-n4          INTEGER (0..11)
    },
    choice-extension          ProtocolIE-Single-Container { { TransmissionComb-ExtIEs} }
}
TransmissionComb-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TransmissionCombPos ::= CHOICE {
    n2      SEQUENCE {
        combOffset-n2           INTEGER (0..1),
        cyclicShift-n2          INTEGER (0..7)
    },
    n4      SEQUENCE {
        combOffset-n4           INTEGER (0..3),
        cyclicShift-n4          INTEGER (0..11)
    },
    n8      SEQUENCE {
        combOffset-n8           INTEGER (0..7),
        cyclicShift-n8          INTEGER (0..5)
    },
    choice-extension          ProtocolIE-Single-Container { { TransmissionCombPos-ExtIEs} }
}
TransmissionCombPos-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TRPMeasurementQuantities ::= SEQUENCE (SIZE (1..maxnoPosMeas)) OF TRPMeasurementQuantitiesList-Item

TRPMeasurementQuantitiesList-Item ::= SEQUENCE {
    tRPMeasurementQuantities-Item     TRPMeasurementQuantities-Item,
    timingReportingGranularityFactor  INTEGER (0..5) OPTIONAL,
    iE-Extensions                   ProtocolExtensionContainer {{ TRPMeasurementQuantitiesList-Item-ExtIEs}} OPTIONAL,
    ...
}

TRPMeasurementQuantitiesList-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPMeasurementQuantities-Item ::= ENUMERATED {
    gNB-RxTxTimeDiff,
    uL-SRS-RSRP,
    uL-AoA,
    uL-RTOA,
    ...
}

```

```

}

TrpMeasurementResult ::= SEQUENCE (SIZE (1.. maxnoPosMeas)) OF TrpMeasurementResultItem
TrpMeasurementResultItem ::= SEQUENCE {
    measuredResultsValue          TrpMeasuredResultsValue,
    timeStamp                     TimeStamp,
    measurementQuality           TrpMeasurementQuality                               OPTIONAL,
    measurementBeamInfo          MeasurementBeamInfo                         OPTIONAL,
    iE-Extensions                 ProtocolExtensionContainer {TrpMeasurementResultItem-ExtIEs} }   OPTIONAL,
    ...
}

TrpMeasurementResultItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TrpMeasuredResultsValue ::= CHOICE {
    uL-AngleOfArrival      UL-AoA,
    uL-SRS-RSRP            UL-SRS-RSRP,
    uL-RTOA                UL-RTOAMeasurement,
    gNB-RxTxTimeDiff       GNB-RxTxTimeDiff,
    choice-extension        ProtocolIE-Single-Container { { TrpMeasuredResultsValue-ExtIEs } }
}

TrpMeasuredResultsValue-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TrpMeasurementQuality ::= CHOICE {
    timingMeasQuality        TrpMeasurementTimingQuality,
    angleMeasQuality         TrpMeasurementAngleQuality,
    choice-Extension          ProtocolIE-Single-Container {{ TrpMeasurementQuality-ExtIEs}}
}

TrpMeasurementQuality-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TrpMeasurementTimingQuality ::= SEQUENCE {
    measurementQuality        INTEGER (0..31),
    resolution                ENUMERATED {m0dot1, m1, m10, m30, ...},
    iE-extensions              ProtocolExtensionContainer { { TrpMeasurementTimingQuality-ExtIEs } } OPTIONAL,
    ...
}

TrpMeasurementTimingQuality-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TrpMeasurementAngleQuality ::= SEQUENCE {
    azimuthQuality            INTEGER (0..255),
    zenithQuality             INTEGER (0..255)   OPTIONAL,
    resolution                ENUMERATED {deg0dot1, ...},
    ...
}

```

```

iE-extensions      ProtocolExtensionContainer { { TrpMeasurementAngleQuality-ExtIEs } } OPTIONAL,
...
}

TrpMeasurementAngleQuality-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRP-MeasurementRequestList ::= SEQUENCE (SIZE (1..maxNoOfMeasTRPs)) OF TRP-MeasurementRequestItem

TRP-MeasurementRequestItem ::= SEQUENCE {
  tRP-ID           TRP-ID,
  search-window-information   Search-window-information OPTIONAL,
  iE-extensions     ProtocolExtensionContainer { { TRP-MeasurementRequestItem-ExtIEs } } OPTIONAL,
  ...
}

TRP-MeasurementRequestItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-Cell-ID    CRITICALITY ignore EXTENSION CGI-NR    PRESENCE optional },
  ...
}

TRP-MeasurementResponseList ::= SEQUENCE (SIZE (1..maxNoOfMeasTRPs)) OF TRP-MeasurementResponseItem

TRP-MeasurementResponseItem ::= SEQUENCE {
  tRP-ID           TRP-ID,
  measurementResult   TrpMeasurementResult,
  iE-extensions     ProtocolExtensionContainer { { TRP-MeasurementResponseItem-ExtIEs } } OPTIONAL,
  ...
}

TRP-MeasurementResponseItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-Cell-ID    CRITICALITY ignore EXTENSION CGI-NR    PRESENCE optional },
  ...
}

TRPInformationListTRPResp ::= SEQUENCE (SIZE (1.. maxnoTRPs)) OF SEQUENCE {
  tRPIInformation      TRPInformation,
  iE-Extensions        ProtocolExtensionContainer { { TRPInformationTRPResp-ExtIEs } } OPTIONAL,
  ...
}

TRPInformationTRPResp-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRPInformation ::= SEQUENCE {
  tRP-ID           TRP-ID,
  tRPIInformationTypeResponseList TRPInformationTypeResponseList,
  iE-Extensions     ProtocolExtensionContainer { { TRPInformation-ExtIEs } }      OPTIONAL,
  ...
}

TRPInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

}

TRPInformationTypeResponseList ::= SEQUENCE (SIZE (1..maxnoTRPInfoTypes)) OF TRPInformationTypeResponseItem

TRPInformationTypeResponseItem ::= CHOICE {
    pCI-NR
    cGI-NR
    aRFCN
    pRSConfiguration
    sSBInformation
    sFNInitialisationTime
    spatialDirectionInformation
    geographicalCoordinates
    choice-extension
}
    INTEGER (0..1007),
    INTEGER (0..3279165),
    PRSConfiguration,
    SSBInfo,
    SFNInitialisationTime,
    SpatialDirectionInformation,
    GeographicalCoordinates,
    ProtocolIE-Single-Container { { TRPInformationTypeResponseItem-ExtIEs } }
}

TRPInformationTypeResponseItem-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TRPInformationTypeListTRPReq ::= SEQUENCE (SIZE(1.. maxnoTRPInfoTypes)) OF ProtocolIE-Single-Container { {TRPInformationTypeItemTRPReq} }

TRPInformationTypeItemTRPReq NRPPA-PROTOCOL-IES ::= {
    { ID id-TRPInformationTypeItem CRITICALITY reject      TYPE TRPInformationTypeItem      PRESENCE mandatory },
}
    ...

TRPInformationTypeItem ::= ENUMERATED {
    nrPCI,
    nG-RAN-CGI,
    arfcn,
    pRSConfig,
    sSBInfo,
    sFNInitTime,
    spatialDirectInfo,
    geoCoord,
}
    ...

TRPList ::= SEQUENCE (SIZE(1.. maxnoTRPs)) OF TRPItem

TRPItem ::= SEQUENCE {
    tRP-ID      TRP-ID,
    iE-Extensions  ProtocolExtensionContainer { {TRPItem-ExtIEs} } OPTIONAL,
}
    ...

TRPItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

TRP-ID ::= INTEGER (1.. maxnoTRPs, ...)

TRPPositionDefinitionType ::= CHOICE {
    direct      TRPPositionDirect,
    referenced  TRPPositionReferenced,
    choice-extension
} ProtocolIE-Single-Container { { TRPPositionDefinitionType-ExtIEs } }

TRPPositionDefinitionType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TRPPositionDirect ::= SEQUENCE {
    accuracy      TRPPositionDirectAccuracy,
    iE-extensions ProtocolExtensionContainer { { TRPPositionDirect-ExtIEs } } OPTIONAL,
    ...
}
ProtocolIE-Single-Container { { TRPPositionDirect-ExtIEs } }

TRPPositionDirect-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPPositionDirectAccuracy ::= CHOICE {
    tRPPosition      NG-RANAccessPointPosition
    tRPHAposition    NGRANHighAccuracyAccessPointPosition
    choice-extension
} ProtocolIE-Single-Container { { TRPPositionDirectAccuracy-ExtIEs } }

TRPPositionDirectAccuracy-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TRPPositionReferenced ::= SEQUENCE {
    referencePoint          ReferencePoint,
    referencePointType       TRPReferencePointType,
    iE-extensions           ProtocolExtensionContainer { { TRPPositionReferenced-ExtIEs } } OPTIONAL,
    ...
}
ProtocolIE-Single-Container { { TRPPositionReferenced-ExtIEs } }

TRPPositionReferenced-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPReferencePointType ::= CHOICE {
    tRPPositionRelativeGeodetic   RelativeGeodeticLocation,
    tRPPositionRelativeCartesian RelativeCartesianLocation,
    choice-extension
} ProtocolIE-Single-Container { { TRPReferencePointType-ExtIEs } }

TRPReferencePointType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

```

```

}

TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    ...
}
-- U

UARFCN ::= INTEGER (0..16383, ...)

UE-Measurement-ID ::= INTEGER (1..15, ..., 256)

UTRA-EcNo ::= INTEGER (0..49, ...)

UTRA-RSCP ::= INTEGER (-5..91, ...)

UL-AoA ::= SEQUENCE {
    azimuthAoA             INTEGER (0..3599),
    zenithAoA              INTEGER (0..1799)          OPTIONAL,
    lcs-to-GCS-TranslationAoA  LCS-to-GCS-TranslationAoA  OPTIONAL,
    iE-extensions           ProtocolExtensionContainer { { UL-AoA-ExtIEs } }  OPTIONAL,
    ...
}
UL-AoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

UL-RTOAMeasurement ::= SEQUENCE {
    uLRTOAMeas        ULRTOAMeas,
    additionalPathList AdditionalPathList OPTIONAL,
    iE-extensions      ProtocolExtensionContainer { { UL-RTOAMeasurement-ExtIEs } }  OPTIONAL, ...
}
UL-RTOAMeasurement-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ULRTOAMeas ::= CHOICE {
    k0      INTEGER (0.. 1970049),
    k1      INTEGER (0.. 985025),
    k2      INTEGER (0.. 492513),
    k3      INTEGER (0.. 246257),
    k4      INTEGER (0.. 123129),
    k5      INTEGER (0.. 61565),
    choice-extension   ProtocolIE-Single-Container { { ULRTOAMeas-ExtIEs } }
}
ULRTOAMeas-ExtIEs NRPPA-PROTOCOL-IES ::= {

```

```

}

UL-SRS-RSRP ::= INTEGER (0..126)

UplinkChannelBW-PerSCS-List ::= SEQUENCE (SIZE (1..maxnoSCSs)) OF SCS-SpecificCarrier

-- V

ValueRSRP-EUTRA ::= INTEGER (0..97, ...)

ValueRSRQ-EUTRA ::= INTEGER (0..34, ...)

ValueRSRP-NR ::= INTEGER (0..127)

ValueRSRQ-NR ::= INTEGER (0..127)

-- W

WLANMeasurementQuantities ::= SEQUENCE (SIZE (0.. maxNoMeas)) OF ProtocolIE-Single-Container { {WLANMeasurementQuantities-ItemIEs} }

WLANMeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-WLANMeasurementQuantities-Item CRITICALITY reject TYPE WLANMeasurementQuantities-Item PRESENCE mandatory} }

WLANMeasurementQuantities-Item ::= SEQUENCE {
    WLANMeasurementQuantitiesValue           WLANMeasurementQuantitiesValue,
    iE-Extensions                          ProtocolExtensionContainer { { WLANMeasurementQuantitiesValue-ExtIEs} } OPTIONAL,
    ...
}

WLANMeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

WLANMeasurementQuantitiesValue ::= ENUMERATED {
    wlan,
    ...
}

WLANMeasurementResult ::= SEQUENCE (SIZE (1..maxNoMeas)) OF WLANMeasurementResult-Item

WLANMeasurementResult-Item ::= SEQUENCE {
    WLAN-RSSI          WLAN-RSSI,
    SSID               SSID             OPTIONAL,
    bSSID              BSSID            OPTIONAL,
    hESSID             HESSID           OPTIONAL,
    operatingClass     WLANOperatingClass OPTIONAL,
    countryCode        WLANCountryCode   OPTIONAL,
    WLANChannelList    WLANChannelList   OPTIONAL,
    WLANBand           WLANBand          OPTIONAL,
    iE-Extensions      ProtocolExtensionContainer { { WLANMeasurementResult-Item-ExtIEs} }   OPTIONAL,
    ...
}

```

```

}

WLANMeasurementResult-Item-ExtIES    NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

WLAN-RSSI ::= INTEGER (0..141, ...)

WLANBand ::= ENUMERATED {band2dot4, band5, ...}

WLANChannelList ::= SEQUENCE (SIZE (1..maxWLANchannels)) OF WLANChannel

WLANChannel ::= INTEGER (0..255)

WLANCountryCode ::= ENUMERATED {
  unitedStates,
  europe,
  japan,
  global,
  ...
}

WLANOperatingClass ::= INTEGER (0..255)

-- X

-- Y

-- Z

END
-- ASN1STOP

```

9.3.6 Common definitions

```

-- ASN1START
-- ****
-- 
-- Common definitions
-- 
-- ****

NRPPA-CommonDataTypes {
  itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
  ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-CommonDataTypes (3)}

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN
-- ****
-- 
-- Extension constants

```

```

-- ****
-- maxPrivateIEs          INTEGER ::= 65535
maxProtocolExtensions   INTEGER ::= 65535
maxProtocolIEs          INTEGER ::= 65535
-- ****
-- Common Data Types
-- ****
Criticality    ::= ENUMERATED { reject, ignore, notify }
NRPPATransactionID ::= INTEGER (0..32767)

Presence       ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID   ::= CHOICE {
  local        INTEGER (0.. maxPrivateIEs),
  global        OBJECT IDENTIFIER
}

ProcedureCode   ::= INTEGER (0..255)
ProtocolIE-ID  ::= INTEGER (0..maxProtocolIEs)
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}
END
-- ASN1STOP

```

9.3.7 Constant definitions

```

-- ASN1START
-- ****
-- Constant definitions
-- ****
NRPPA-Constants {
  itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
  ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-Constants (4) }

DEFINITIONS AUTOMATIC TAGS :=

BEGIN

```

IMPORTS

```

ProcedureCode,
ProtocolIE-ID
FROM NRPPA-CommonDataTypes;

-- ****
-- 
-- Elementary Procedures
-- 

id-errorIndication                               ProcedureCode ::= 0
id-privateMessage                                ProcedureCode ::= 1
id-e-CIDMeasurementInitiation                  ProcedureCode ::= 2
id-e-CIDMeasurementFailureIndication          ProcedureCode ::= 3
id-e-CIDMeasurementReport                      ProcedureCode ::= 4
id-e-CIDMeasurementTermination                 ProcedureCode ::= 5
id-oTDOAInformationExchange                   ProcedureCode ::= 6
id-assistanceInformationControl                ProcedureCode ::= 7
id-assistanceInformationFeedback              ProcedureCode ::= 8
id-positioningInformationExchange             ProcedureCode ::= 9
id-positioningInformationUpdate               ProcedureCode ::= 10
id-Measurement                                 ProcedureCode ::= 11
id-MeasurementReport                          ProcedureCode ::= 12
id-MeasurementUpdate                         ProcedureCode ::= 13
id-MeasurementAbort                           ProcedureCode ::= 14
id-MeasurementFailureIndication            ProcedureCode ::= 15
id-tRPInformationExchange                    ProcedureCode ::= 16
id-positioningActivation                     ProcedureCode ::= 17
id-positioningDeactivation                   ProcedureCode ::= 18

-- ****
-- 
-- Lists
-- 

maxNrOfErrors                                     INTEGER ::= 256
maxCellInRANnode                                  INTEGER ::= 3840
maxIndexesReport                                 INTEGER ::= 64
maxNoMeas                                         INTEGER ::= 64
maxCellReport                                    INTEGER ::= 9
maxCellReportNR                                   INTEGER ::= 9
maxnoOTDOAtypes                                 INTEGER ::= 63
maxServCell                                      INTEGER ::= 5
maxEUTRAMEas                                     INTEGER ::= 8
maxGERANMeas                                     INTEGER ::= 8
maxNRMees                                         INTEGER ::= 8
maxUTRANMeas                                     INTEGER ::= 8
maxWLANchannels                                  INTEGER ::= 16
maxnoFreqHoppingBandsMinusOne                  INTEGER ::= 7
maxNoPath                                         INTEGER ::= 2
maxNrOfPosSImessage                            INTEGER ::= 32
maxnoAssistInfoFailureListItems               INTEGER ::= 32
maxNrOfSegments                                  INTEGER ::= 64

```

maxNrOfPosSIBs	INTEGER ::= 32
maxNoOfMeasTRPs	INTEGER ::= 64
maxnoTRPs	INTEGER ::= 65535
maxnoTRPInfoTypes	INTEGER ::= 64
maxnoofAngleInfo	INTEGER ::= 65535
maxnolcs-gcs-translation	INTEGER ::= 3
maxnoBcastCell	INTEGER ::= 16384
maxnoSRSTriggerStates	INTEGER ::= 3
maxnoSpatialRelations	INTEGER ::= 64
maxnoPosMeas	INTEGER ::= 16384
maxnoSRS-Carriers	INTEGER ::= 32
maxnoSCSs	INTEGER ::= 5
maxnoSRS-Resources	INTEGER ::= 64
maxnoSRS-PosResources	INTEGER ::= 64
maxnoSRS-ResourceSets	INTEGER ::= 16
maxnoSRS-ResourcePerSet	INTEGER ::= 16
maxnoSRS-PosResourceSets	INTEGER ::= 16
maxnoSRS-PosResourcePerSet	INTEGER ::= 16
maxPRS-ResourceSets	INTEGER ::= 2
maxPRS-ResourcesPerSet	INTEGER ::= 64
maxNoSSBs	INTEGER ::= 255
maxnoofPRSresourceSet	INTEGER ::= 8
maxnoofPRSresource	INTEGER ::= 64

-- ****
--
-- IEs
--
-- ****

id-Cause	ProtocolIE-ID ::= 0
id-CriticalityDiagnostics	ProtocolIE-ID ::= 1
id-LMF-UE-Measurement-ID	ProtocolIE-ID ::= 2
id-ReportCharacteristics	ProtocolIE-ID ::= 3
id-MeasurementPeriodicity	ProtocolIE-ID ::= 4
id-MeasurementQuantities	ProtocolIE-ID ::= 5
id-RAN-UE-Measurement-ID	ProtocolIE-ID ::= 6
id-E-CID-MeasurementResult	ProtocolIE-ID ::= 7
id-OTDOACells	ProtocolIE-ID ::= 8
id-OTDOA-Information-Type-Group	ProtocolIE-ID ::= 9
id-OTDOA-Information-Type-Item	ProtocolIE-ID ::= 10
id-MeasurementQuantities-Item	ProtocolIE-ID ::= 11
id-RequestedSRSTransmissionCharacteristics	ProtocolIE-ID ::= 12
id-Cell-Portion-ID	ProtocolIE-ID ::= 14
id-OtherRATMeasurementQuantities	ProtocolIE-ID ::= 15
id-OtherRATMeasurementQuantities-Item	ProtocolIE-ID ::= 16
id-OtherRATMeasurementResult	ProtocolIE-ID ::= 17
id-WLANMeasurementQuantities	ProtocolIE-ID ::= 19
id-WLANMeasurementQuantities-Item	ProtocolIE-ID ::= 20
id-WLANMeasurementResult	ProtocolIE-ID ::= 21
id-TDD-Config-EUTRA-Item	ProtocolIE-ID ::= 22
id-Assistance-Information	ProtocolIE-ID ::= 23

```

id-Broadcast                                ProtocolIE-ID ::= 24
id-AssistanceInformationFailureList          ProtocolIE-ID ::= 25
id-SRSConfiguration                          ProtocolIE-ID ::= 26
id-MeasurementResult                         ProtocolIE-ID ::= 27
id-TRP-ID                                    ProtocolIE-ID ::= 28
id-TRPInformationTypeListTRPReq              ProtocolIE-ID ::= 29
id-TRPInformationListTRPResp                ProtocolIE-ID ::= 30
id-MeasurementBeamInfoRequest               ProtocolIE-ID ::= 31
id-ResultSS-RSRP                            ProtocolIE-ID ::= 32
id-ResultSS-RSRQ                            ProtocolIE-ID ::= 33
id-ResultCSI-RSRP                           ProtocolIE-ID ::= 34
id-ResultCSI-RSRQ                           ProtocolIE-ID ::= 35
id-AngleOfArrivalNR                          ProtocolIE-ID ::= 36
id-GeographicalCoordinates                  ProtocolIE-ID ::= 37
id-PositioningBroadcastCells                ProtocolIE-ID ::= 38
id-LMF-Measurement-ID                      ProtocolIE-ID ::= 39
id-RAN-Measurement-ID                      ProtocolIE-ID ::= 40
id-TRP-MeasurementRequestList              ProtocolIE-ID ::= 41
id-TRP-MeasurementResponseList             ProtocolIE-ID ::= 42
id-TRP-MeasurementReportList              ProtocolIE-ID ::= 43
id-SRSType                                    ProtocolIE-ID ::= 44
id-ActivationTime                           ProtocolIE-ID ::= 45
id-SRSResourceSetID                         ProtocolIE-ID ::= 46
id-TRPList                                   ProtocolIE-ID ::= 47
id-SRSSpatialRelation                      ProtocolIE-ID ::= 48
id-SystemFrameNumber                        ProtocolIE-ID ::= 49
id-SlotNumber                                ProtocolIE-ID ::= 50
id-SRSResourceTrigger                       ProtocolIE-ID ::= 51
id-TRPMeasurementQuantities                 ProtocolIE-ID ::= 52
id-AbortTransmission                        ProtocolIE-ID ::= 53
id-SFNInitialisationTime                   ProtocolIE-ID ::= 54
id-ResultNR                                  ProtocolIE-ID ::= 55
id-ResultEUTRA                               ProtocolIE-ID ::= 56
id-TRPInformationTypeItem                  ProtocolIE-ID ::= 57
id-CGI-NR                                    ProtocolIE-ID ::= 58
id-SFNInitialisationTime-NR                ProtocolIE-ID ::= 59
id-Cell-ID                                   ProtocolIE-ID ::= 60

```

```

END
-- ASN1STOP

```

9.3.8 Container definitions

```

-- ASN1START
-- ****
-- 
-- Container definitions
-- 
-- ****
NRPPA-Containers {
  itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
  ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-Containers (5)
}

```

```

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
-- 
-- IE parameter types from other modules.
-- 
-- *****

IMPORTS
    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs,
    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolIE-ID
FROM NRPPA-CommonDataTypes;

-- *****
-- 
-- Class Definition for Protocol IEs
-- 
-- *****

NRPPA-PROTOCOL-IES ::= CLASS {
    &id                  ProtocolIE-ID      UNIQUE,
    &criticality        Criticality,
    &Value,
    &presence           Presence
}
WITH SYNTAX {
    ID                  &id
    CRITICALITY        &criticality
    TYPE               &Value
    PRESENCE           &presence
}

-- *****
-- 
-- Class Definition for Protocol Extensions
-- 
-- *****

NRPPA-PROTOCOL-EXTENSION ::= CLASS {
    &id                  ProtocolIE-ID      UNIQUE,
    &criticality        Criticality,
    &Extension,
    &presence           Presence
}
WITH SYNTAX {
    ID                  &id
}

```

```

CRITICALITY      &criticality
EXTENSION        &Extension
PRESENCE         &presence
}

-- ****
-- 
-- Class Definition for Private IEs
-- 
-- ****

NRPPA-PRIVATE-IES ::= CLASS {
    &id                  PrivateIE-ID,
    &criticality        Criticality,
    &Value               Value,
    &presence            Presence
}
WITH SYNTAX {
    ID                  &id
    CRITICALITY        &criticality
    TYPE                &Value
    PRESENCE            &presence
}

-- ****
-- 
-- Container for Protocol IEs
-- 
-- ****

ProtocolIE-Container { NRPPA-PROTOCOL-IES : IEsSetParam } ::=
SEQUENCE (SIZE (0..maxProtocolIEs)) OF
ProtocolIE-Field {{IEsSetParam} }

ProtocolIE-Single-Container { NRPPA-PROTOCOL-IES : IEsSetParam } ::=
ProtocolIE-Field {{IEsSetParam} }

ProtocolIE-Field { NRPPA-PROTOCOL-IES : IEsSetParam } ::= SEQUENCE {
    id                 NRPPA-PROTOCOL-IES.&id          {{IEsSetParam}},
    criticality        NRPPA-PROTOCOL-IES.&criticality   {{IEsSetParam}}{@id}),
    value               NRPPA-PROTOCOL-IES.&Value        {{IEsSetParam}}{@id})
}

-- ****
-- 
-- Container Lists for Protocol IE Containers
-- 
-- ****

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, NRPPA-PROTOCOL-IES : IEsSetParam} ::=
SEQUENCE (SIZE (lowerBound..upperBound)) OF
ProtocolIE-Container {{IEsSetParam} }

-- ****

```

```

-- Container for Protocol Extensions
--
-- ****
ProtocolExtensionContainer { NRPPA-PROTOCOL-EXTENSION : ExtensionSetParam} ::= 
SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
ProtocolExtensionField {{ExtensionSetParam}}
```

```

ProtocolExtensionField { NRPPA-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
  id          NRPPA-PROTOCOL-EXTENSION.&id          ({ExtensionSetParam}),
  criticality NRPPA-PROTOCOL-EXTENSION.&criticality ({ExtensionSetParam}{@id}),
  extensionValue NRPPA-PROTOCOL-EXTENSION.&Extension ({ExtensionSetParam}{@id})
}

-- ****
-- Container for Private IEs
--
-- ****
PrivateIE-Container { NRPPA-PRIVATE-IES : IEsSetParam} ::= 
SEQUENCE (SIZE (1..maxPrivateIES)) OF
PrivateIE-Field {{IEsSetParam}}
```

```

PrivateIE-Field { NRPPA-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
  id          NRPPA-PRIVATE-IES.&id          ({IEsSetParam}),
  criticality NRPPA-PRIVATE-IES.&criticality ({IEsSetParam}{@id}),
  value        NRPPA-PRIVATE-IES.&Value        ({IEsSetParam}{@id})
}

END
-- ASN1STOP

```

9.4 Message transfer syntax

NRPPa shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ref. ITU-T Rec. X.691 [6].

9.5 Timers

Void.

10 Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 36.455 [12] is applicable for the purposes of the present document.

Annex A (informative): Change history

Change history							
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New version
2017-08-23	RAN3#97	R3-173238				TS skeleton agreed	v0.0.0
2017-08-25	RAN3#97	R3-173374				TS 38.455 V0.1.0	v0.1.0
2017-10-18	RAN3#97bis	R3-173979				Implemented agreed pCR from R3#97bis	V0.2.0
2017-12-04	RAN3#98	R3-175064				Implemented agreed pCR from R3#98	V0.3.0
2018-01-31	RAN3 Adhoc 1801	R3-180658				Implemented agreed pCR from R3 Adhoc_1801	V0.5.0
2018-03-15	RAN3#99	R3-181595				Implemented agreed pCR's from R3#99	V0.6.0
2018-05-29	RAN3#100	R3-183598				Implemented agreed pCR's from R3#100	V0.7.0
2018-06	RAN#80	RP-181147				Submitted to RAN plenary for Approval	V1.0.0
2018-06	RAN#80	-	-	-	-	Specification approved at TSG-RAN and placed under change control	15.0.0
2018-09	RAN#81	RP-181921	0002	1	F	Rapporteur CR for TS 38.455	15.1.0
2018-12	RAN#82	RP-182446	0003	1	F	Addition of TDD UL/DL configuration to OTDOA assistance data	15.2.0
2019-01	RAN#82					Editorial Corrections: - 1 editorial correction to ASN.1 - adding "ASN1START" and "ASN1STOP" TAGs to the ASN.1	15.2.1
2020-07	SA#88-e	-	-	-	-	Update to Rel-16 version (MCC)	16.0.0
2020-09	SA#89-e	RP-201849	0008	19	B	Introduction of NR Positioning in NRPPa	16.1.0
2020-12	RAN#90-e	RP-202315	0014	2	A	Support OTDOA assistance data for case of NR serving cell	16.2.0
2020-12	RAN#90-e	RP-202311	0015	2	F	Corrections to tabular and asn.1 for NR positioning (NRPPa)	16.2.0
2020-12	RAN#90-e	RP-202311	0016	-	F	Correction of NRPPa positioning procedures	16.2.0
2020-12	RAN#90-e	RP-202311	0021	1	F	RRC alignment and various correction including ASN.1	16.2.0
2020-12	RAN#90-e	RP-202311	0022	2	F	Coupling TRP ID and Cell ID in Measurement procedures	16.2.0

History

Document history		
V16.0.0	September 2020	Publication
V16.1.0	November 2020	Publication
V16.2.0	January 2021	Publication